

2006 Camry 5,000 Miles - 6 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 10,000 Miles - 12 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 15,000 Miles - 18 Months

- Replace engine oil and oil filter¹
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See Maintenance Definitions (Engine Coolant) for details.

2006 Camry 20,000 Miles - 24 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 25,000 Miles - 30 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 30,000 Miles - 36 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Differential oil
 - ___ Drive shaft boots
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (all models with manual transmission)
- q Replace manual transmission oil
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 4) Inspect thickness measurement and disc runout.

2006 Camry 35,000 Miles - 42 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 40,000 Miles - 48 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 45,000 Miles - 54 Months

- Replace engine oil and oil filter¹
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See Maintenance Definitions (Engine Coolant) for details.

2006 Camry 50,000 Miles - 60 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 55,000 Miles - 66 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 60,000 Miles - 72 Months

- Replace engine oil and oil filter¹
- Rotate tires
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Differential oil
 - ___ Drive belts⁵
 - ___ Drive shaft boots
 - ___ Engine coolant³
 - ___ Engine valve clearance
 - ___ Exhaust pipes and mountings
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- Replace front differential oil
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 4) Inspect thickness measurement and disc runout.
- 5) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

2006 Camry 65,000 Miles - 78 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 70,000 Miles - 84 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 75,000 Miles - 90 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - __ Ball joints and dust covers
 - __ Brake lines and hoses
 - __ Drive belts
 - __ Drive shaft boots
 - __ Engine coolant³
 - __ Exhaust pipes and mountings
 - __ Steering gear box
 - __ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2006 Camry 80,000 Miles - 96 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 85,000 Miles - 102 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 90,000 Miles - 108 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Replace timing belt (1MZ-FE or 3MZ-FE)
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Differential oil
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (all models with manual transmission)
- q Replace manual transmission oil
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 4) Inspect thickness measurement and disc runout.

2006 Camry 95,000 Miles - 114 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 100,000 Miles - 120 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace engine coolant⁷
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
7) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine Coolant) for details.

2006 Camry 105,000 Miles - 126 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - __ Ball joints and dust covers
 - __ Brake lines and hoses
 - __ Drive belts
 - __ Drive shaft boots
 - __ Engine coolant³
 - __ Exhaust pipes and mountings
 - __ Steering gear box
 - __ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2006 Camry 110,000 Miles - 132 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 115,000 Miles - 138 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 Camry 120,000 Miles - 144 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter (if equipped)
- q Replace engine air filter
- q Replace spark plugs⁸
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Differential oil
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine coolant³
 - ___ Engine valve clearance
 - ___ Exhaust pipes and mountings
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 4) Inspect thickness measurement and disc runout.
- 8) Required under the terms of the Emission Control Warranty. Does not apply to Camry PZEV with 2AZ-FE in California, New York, Massachusetts, Maine and Vermont. For this model, replacement interval is 150,000 miles.