

2006 Matrix 5,000 Miles - 6 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 10,000 Miles - 12 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 15,000 Miles - 18 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Tighten drive shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Exhaust pipes and mountings
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

2006 Matrix 20,000 Miles - 24 Months

- q Replace engine oil and oil filter
- q Replace cabin air filter (if equipped)
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 25,000 Miles - 30 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 30,000 Miles - 36 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Replace engine air filter
- q Tighten drive shaft bolt
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (all models with manual transmission)
- q Replace manual transmission oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

4) Inspect thickness measurement and disc runout.

2006 Matrix 35,000 Miles - 42 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 40,000 Miles - 48 Months

- q Replace engine oil and oil filter
- q Replace cabin air filter (if equipped)
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 45,000 Miles - 54 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Tighten drive shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Exhaust pipes and mountings
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

2006 Matrix 50,000 Miles - 60 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 55,000 Miles - 66 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 60,000 Miles - 72 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Replace cabin air filter (if equipped)
- q Replace engine air filter
- q Tighten drive shaft bolt
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts⁶
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Engine valve clearance
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

4) Inspect thickness measurement and disc runout.

6) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

2006 Matrix 65,000 Miles - 78 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 70,000 Miles - 84 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 75,000 Miles - 90 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Tighten drive shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Exhaust pipes and mountings
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

2006 Matrix 80,000 Miles - 96 Months

- q Replace engine oil and oil filter
- q Replace cabin air filter (if equipped)
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 85,000 Miles - 102 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 90,000 Miles - 108 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Replace cabin air filter (if equipped)
- q Replace engine air filter
- q Tighten drive shaft bolt
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (all models with manual transmission)
- q Replace manual transmission oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

4) Inspect thickness measurement and disc runout.

2006 Matrix 95,000 Miles - 114 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 100,000 Miles - 120 Months

- q Replace engine oil and oil filter
- q Replace cabin air filter (if equipped)
- q Replace engine coolant⁷
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

7) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine Coolant) for details.

2006 Matrix 105,000 Miles - 126 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Tighten drive shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Exhaust pipes and mountings
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

2006 Matrix 110,000 Miles - 132 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 115,000 Miles - 138 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten drive shaft bolt
- q Tighten nuts and bolts on chassis

2006 Matrix 120,000 Miles - 144 Months

- q Replace engine oil and oil filter
- q Rotate tires
- q Replace cabin air filter (if equipped)
- q Replace engine air filter
- q Replace spark plugs³
- q Tighten drive shaft bolt
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine coolant
 - ___ Engine valve clearance
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil (4WD)
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

3) Required under the terms of the Emission Control Warranty.

4) Inspect thickness measurement and disc runout.