

## 2006 Sienna 5,000 Miles - 6 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 10,000 Miles - 12 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque drive shaft flange bolts (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 15,000 Miles - 18 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs
- q Re-torque propeller shaft bolt (4WD)
- q Inspect the following:
  - \_\_\_ Automatic transmission and differential oil
  - \_\_\_ Automatic transmission and differential oil
  - \_\_\_ Automatic transmission and differential oil
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Rear differential oil (4WD)
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2006 Sienna 20,000 Miles - 24 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 25,000 Miles - 30 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 30,000 Miles - 36 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace engine air filter
- q Re-torque propeller shaft bolt (4WD)
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>5</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (all models with manual transmission)
- q Replace manual transmission oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 5) Inspect thickness measurement and disc runout.

## 2006 Sienna 35,000 Miles - 42 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 40,000 Miles - 48 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 45,000 Miles - 54 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs
- q Re-torque propeller shaft bolt (4WD)
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Rear differential oil (4WD)
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2006 Sienna 50,000 Miles - 60 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 55,000 Miles - 66 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 60,000 Miles - 72 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter (if equipped)
- q Replace engine air filter
- q Re-torque propeller shaft bolt (4WD)
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>5</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts<sup>6</sup>
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 5) Inspect thickness measurement and disc runout.
- 6) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

## 2006 Sienna 65,000 Miles - 78 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 70,000 Miles - 84 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 75,000 Miles - 90 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs
- q Re-torque propeller shaft bolt (4WD)
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine coolant<sup>3</sup>
  - \_\_ Exhaust pipes and mountings
  - \_\_ Rear differential oil (4WD)
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots
  - \_\_ Transfer case oil (4WD)

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2006 Sienna 80,000 Miles - 96 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 85,000 Miles - 102 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 90,000 Miles - 108 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace engine air filter
- q Replace timing belt
- q Re-torque propeller shaft bolt (4WD)
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>5</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (all models with manual transmission)
- q Replace manual transmission oil
- q Replace rear differential oil (4WD)
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 5) Inspect thickness measurement and disc runout.

## 2006 Sienna 95,000 Miles - 114 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 100,000 Miles - 120 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace engine coolant<sup>7</sup>
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

7) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine Coolant) for details.

## 2006 Sienna 105,000 Miles - 126 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Re-torque propeller shaft bolt (4WD)
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Rear differential oil (4WD)
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Replace rear differential oil (4WD)
- Replace transfer case oil (4WD)
- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2006 Sienna 110,000 Miles - 132 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 115,000 Miles - 138 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving on Salt-Covered Roads**

- q Re-torque propeller shaft bolt (4WD)

#### **Driving While Towing**

- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Re-torque propeller shaft bolt (4WD)
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2006 Sienna 120,000 Miles - 144 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Re-torque propeller shaft bolt (4WD)
- Replace spark plugs<sup>8</sup>
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>5</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Replace front differential oil
- Replace rear differential oil (4WD)
- Replace transfer case oil (4WD)
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See Maintenance Definitions (Engine Coolant) for details.
- 5) Inspect thickness measurement and disc runout.
- 8) Required under the terms of the Emission Control Warranty.