

2007 Camry Hybrid 5,000 Miles - 6 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 10,000 Miles - 12 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 15,000 Miles - 18 Months

- Replace engine oil and oil filter¹
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots
 - ___ Engine/inverter coolant³
 - ___ Exhaust pipes and mountings
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2007 Camry Hybrid 20,000 Miles - 24 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 25,000 Miles - 30 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 30,000 Miles - 36 Months

- Q Replace engine oil and oil filter¹
- Q Rotate tires
- Q Replace cabin air filter
- Q Replace engine air filter
- Q Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs³
 - ___ Drive shaft boots
 - ___ Engine/inverter coolant⁴
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and intercooler
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- Q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Inspect thickness measurement and disc runout.
- 4) See Maintenance Definitions (Engine Coolant) for details.

2007 Camry Hybrid 35,000 Miles - 42 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 40,000 Miles - 48 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 45,000 Miles - 54 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - __ Ball joints and dust covers
 - __ Brake lines and hoses
 - __ Drive shaft boots
 - __ Engine/inverter coolant³
 - __ Exhaust pipes and mountings
 - __ Steering gear box
 - __ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2007 Camry Hybrid 50,000 Miles - 60 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 55,000 Miles - 66 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 60,000 Miles - 72 Months

- Replace engine oil and oil filter¹
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs³
 - ___ Drive belts⁴
 - ___ Drive shaft boots
 - ___ Engine valve clearance⁶
 - ___ Engine/inverter coolant⁵
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and intercooler
 - ___ Steering gear box
 - ___ Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Inspect thickness measurement and disc runout.
- 4) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.
- 5) See Maintenance Definitions (Engine Coolant) for details.
- 6) Check for tappet noise and engine vibration and adjust if necessary.

2007 Camry Hybrid 65,000 Miles - 78 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 70,000 Miles - 84 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 75,000 Miles - 90 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - __ Ball joints and dust covers
 - __ Brake lines and hoses
 - __ Drive belts
 - __ Drive shaft boots
 - __ Engine/inverter coolant³
 - __ Exhaust pipes and mountings
 - __ Steering gear box
 - __ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2007 Camry Hybrid 80,000 Miles - 96 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 85,000 Miles - 102 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 90,000 Miles - 108 Months

- Replace engine oil and oil filter¹
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs³
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine/inverter coolant⁴
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and intercooler
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- Inspect drive shaft boots
- Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Inspect thickness measurement and disc runout.
- 4) See Maintenance Definitions (Engine Coolant) for details.

2007 Camry Hybrid 95,000 Miles - 114 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 100,000 Miles - 120 Months

- q Replace engine oil and oil filter¹
- q Replace engine/inverter coolant³
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

3) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine Coolant) for additional information.

2007 Camry Hybrid 105,000 Miles - 126 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - __ Ball joints and dust covers
 - __ Brake lines and hoses
 - __ Drive belts
 - __ Drive shaft boots
 - __ Engine/inverter coolant⁴
 - __ Exhaust pipes and mountings
 - __ Steering gear box
 - __ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

4) See Maintenance Definitions (Engine Coolant) for details.

2007 Camry Hybrid 110,000 Miles - 132 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 115,000 Miles - 138 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

2007 Camry Hybrid 120,000 Miles - 144 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Replace spark plugs³
- q Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts
 - ___ Drive shaft boots
 - ___ Engine valve clearance⁶
 - ___ Engine/inverter coolant⁵
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and intercooler
 - ___ Steering gear box
 - ___ Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions:

Driving on Dirt Roads or Dusty Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Required under the terms of the Emission Control Warranty. In California, Maine, Massachusetts, New York and Vermont, replacement interval for spark plugs is 150,000 miles.
- 4) Inspect thickness measurement and disc runout.
- 5) See Maintenance Definitions (Engine Coolant) for details.
- 6) Check for tappet noise and engine vibration and adjust if necessary.