

## 2007 Solara 5,000 Miles - 6 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 10,000 Miles - 12 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 15,000 Miles - 18 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>2</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 20,000 Miles - 24 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 25,000 Miles - 30 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 30,000 Miles - 36 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>2</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (manual transmission only)
- q Replace manual transmission oil
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Inspect thickness measurement and disc runout.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 35,000 Miles - 42 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 40,000 Miles - 48 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 45,000 Miles - 54 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>2</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 50,000 Miles - 60 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 55,000 Miles - 66 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 60,000 Miles - 72 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter (if equipped)
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>2</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts<sup>3</sup>
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>4</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Replace front differential oil
- Replace transmission fluid or oil
- Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Inspect thickness measurement and disc runout.
- 3) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.
- 4) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 65,000 Miles - 78 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 70,000 Miles - 84 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 75,000 Miles - 90 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine coolant<sup>2</sup>
  - \_\_ Exhaust pipes and mountings
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 80,000 Miles - 96 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 85,000 Miles - 102 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 90,000 Miles - 108 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Replace timing belt (3MZ-FE)
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>2</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (manual transmission only)
- q Replace manual transmission oil
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Inspect thickness measurement and disc runout.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 95,000 Miles - 114 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 100,000 Miles - 120 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace engine coolant<sup>2</sup>
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more details.

## 2007 Solara 105,000 Miles - 126 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine coolant<sup>2</sup>
  - \_\_ Exhaust pipes and mountings
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) See Maintenance Definitions (Engine Coolant) for details.

## 2007 Solara 110,000 Miles - 132 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 115,000 Miles - 138 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 Solara 120,000 Miles - 144 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter (if equipped)
- q Replace engine air filter
- q Replace spark plugs<sup>2</sup>
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>3</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>4</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Required under the terms of the Emission Control Warranty. For important model-specific information, see Maintenance Definitions (Spark Plugs) for details.
- 3) Inspect thickness measurement and disc runout.
- 4) See Maintenance Definitions (Engine Coolant) for details.