

Introduction

The scheduled maintenance information included in this supplement is provided as a guide to assist you in getting the greatest ownership value from your Toyota, while helping to maximize its performance, safety, and reliability. In addition to scheduled maintenance, your Toyota also requires ongoing general maintenance which includes checking fluid levels and simple visual inspections for potential signs of trouble. These items are explained separately in the "General Maintenance" section of your *Owner's Manual*.

How much scheduled maintenance **your** Toyota requires depends on how you drive, as well as the environmental conditions in which you drive. The demands on vehicles can vary significantly depending on the driver, driving conditions, and geographic location. The following pages will assist you in determining the proper amount of maintenance for your Toyota so that you won't have to pay for more maintenance than your Toyota needs. **Note:** Failure to properly maintain your vehicle can result in your warranty being voided either in whole or in part; please refer to the "New Vehicle Limited Warranty - Owner's Responsibilities" section of this supplement for details.

The Scheduled Maintenance Log beginning on page 34 of this supplement allows you to easily identify the maintenance requirements at each mileage (or month) interval, while also providing a convenient place to document your vehicle's maintenance history. Properly maintaining your Toyota and documenting its maintenance history can also help increase its resale value.

How to Use the Scheduled Maintenance Log

Oil Change Intervals

The Scheduled Maintenance Log has been designed to provide you with the flexibility to follow either 5,000-mile or 7,500-mile oil change intervals, depending on your circumstances.

- Use **5,000-mile** oil change intervals to help ensure proper engine lubrication under most driving conditions **or** for the following:
 - You **primarily** operate your Toyota under the "Special Operating Conditions" described on page 30 of this supplement.
 - Your Toyota is turbocharged.*

- Use **7,500-mile** oil change intervals if you **primarily** operate your **non-turbocharged** Toyota under light, non-commercial duty for distances greater than five miles in temperate climates (above freezing and below 90° F).

If you choose **5,000-mile** oil change intervals, simply follow the instructions printed in the non-shaded boxes as shown in this example:

5,000 MILES

If you choose **7,500-mile** oil change intervals, simply follow the instructions printed in the shaded boxes as shown in this example:

7,500 MILES

The **5,000-** and **7,500-mile** intervals coincide at 15,000-mile increments; therefore, both the shaded and non-shaded boxes are shown as in this example:

15,000 MILES

15,000 MILES

* **Note:** If a turbocharged Toyota is driven under the "Special Operating Conditions" described on page 30, then the oil change intervals should be further reduced to 2,500 miles.

SCHEDULED MAINTENANCE

30

Additional Maintenance Items for “Special Operating Conditions”

To assist you in getting the greatest ownership value from your Toyota, the Scheduled Maintenance Log separates the basic maintenance item requirements for most vehicles from the additional maintenance item requirements for vehicles that operate under more demanding “Special Operating Conditions.”

For the majority of owners who operate their Toyotas for personal use under normal conditions, the basic maintenance items listed in the upper section of the maintenance box should provide all the maintenance your Toyota needs. If you operate your Toyota **primarily** in any of the more demanding “Special Operating Conditions” listed in the next column, you should have the additional maintenance items indicated in the maintenance box performed on your Toyota. If you only **occasionally** operate your vehicle under these conditions, it is **not** necessary to perform the additional maintenance items.

Note: If you meet the requirements for 7,500-mile oil change intervals as indicated in the previous section, your Toyota should **not** require the additional maintenance items.

Special Operating Conditions:

1. Towing a trailer or using a camper or car-top carrier.
2. Repeated short trips of less than five miles in temperatures below freezing.
3. Extensive idling or low-speed driving for long distances as in heavy commercial use, such as delivery, taxi, or patrol car.
4. Operating on rough, muddy, or salt-covered roads.
5. Operating on unpaved or dusty roads.

Note: Turbocharged vehicles that are driven under the “Special Operating Conditions” listed above should change their engine oil at 2,500-mile intervals. It is not necessary, however, to change the oil filter at 2,500-mile intervals. Both the engine oil and filter should be replaced at the 5,000-mile intervals.

Example:

- Change **engine oil only** at 2,500, 7,500, 12,500...miles.
- Change engine oil **and filter** at 5,000, 10,000, 15,000...miles.

Explanation of Scheduled Maintenance Items

The following explanations are provided to give you a greater awareness and understanding of the individual maintenance items that should be performed on your Toyota to help ensure long life and top operating condition. The Scheduled Maintenance Log in the next section of this supplement identifies which of these maintenance items should be performed at each mileage/month interval.

Engine Components and Emission Control Systems

Timing Belt

All Models (except Non-Turbo Supra):

If the vehicle is operated under extensive idling or low speed driving for long distances as in heavy commercial use such as delivery, taxi, or patrol car, replace the timing belt every 90,000 miles. A qualified technician should perform this operation.

Non-Turbo Supra:

Replace the timing belt every 90,000 miles or 72 months. A qualified technician should perform this operation.

Valve Clearance

Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. A qualified technician should perform this operation.

Drive Belts

Inspect the drive belts for cracks, excessive wear, or oiliness. Replace the belts if damaged, and check the belt tension and adjust it if necessary. After inspection at 60,000 miles or 48 months, inspect every 15,000 miles or 12 months.

Engine Oil and Oil Filter

Change the engine oil and oil filter when scheduled. Use API SH, Energy-Conserving II multigrade engine oil or ILSAC multigrade engine oil. For recommended viscosity, please refer to your *Owner's Manual*.

Engine Coolant

Drain and flush the cooling system when scheduled. Refill only with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler, and hangers for cracks, deterioration, or damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Engine Air Filter

Replace the engine air cleaner filter when scheduled.

SCHEDULED MAINTENANCE

32

Fuel Lines and Connections, Fuel Tank Vapor Vent System Hoses, and Fuel Tank Band

Visually inspect the lines, connections, hoses, and tank band for corrosion, damage, cracks, and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect the fuel tank cap gasket for cracks, deterioration, or damage, and replace if necessary.

Spark Plugs

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Charcoal Canister

Inspect for internal damage or clogging as scheduled. Clean with compressed air or replace if necessary. A qualified technician should perform this operation.

Chassis and Body

Tire Rotation

To equalize tire wear and help extend tire life, Toyota recommends that you rotate your tires every 5,000 to 7,500 miles. However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.

Brake Linings (Shoes and Pads), Drums and Discs

Check the brake linings (shoes) and drums for scoring, burning, leaking fluid, broken parts, and excessive wear. Check the pads for excessive wear and discs for runout and wear, and leaking fluid. A qualified technician should perform this operation.

Brake Lines and Hoses

Visually check for proper installation. Check for chafing, cracks, deterioration, and any evidence of leaking. Replace any deteriorated or damaged parts immediately. A qualified technician should perform these operations.

Steering Linkage

With the vehicle stopped, check for excessive freeplay in the steering wheel. Check the linkage for bending or damage. Check the dust boots for deterioration, cracks, or damage. Replace any damaged parts.

SRS Air Bags

After initial inspection at 120 months from the manufacture date on the certification label, inspect every 24 months. A qualified technician should perform this operation.

Rack and Pinion Assembly

Inspect the rack and pinion assemblies for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness or damage. Check all dust covers for deterioration or damage. A qualified technician should perform this operation.

Drive Shaft Boots

Check the drive shaft boots and clamps for cracks, deterioration, or damage. Replace any damaged parts and, if necessary, repack the grease. For Camry, Avalon, and Supra, also re-torque the flange bolts (drive shaft to differential or side gear shaft). A qualified technician should perform these operations.

Manual Transmission Oil

Inspect each component for signs of leakage when scheduled. If you discover any leakage, have it repaired by a qualified technician immediately. If the vehicle is operated under the "Special Operating Conditions" defined on page 30 of this supplement, change the oil when scheduled.

Automatic Transmission and Differential Oil

Inspect each component for signs of leakage when scheduled. If you discover any leakage, have it repaired by a qualified technician immediately. If the vehicle is operated under the "Special Operating Conditions" defined on page 30 of this supplement, change the oil when scheduled.

Limited-Slip Differential Oil

Inspect every 15,000 miles or 12 months. Replace every 60,000 miles or 48 months. A qualified technician should perform this operation.

Wheel Bearing Grease

Repack the wheel bearings with wheel bearing grease.

Bolts and Nuts on Chassis and Body

If the vehicle is operated under the "Special Operating Conditions" defined on page 30 of this supplement, re-tighten the seat mounting bolts and front and rear suspension member retaining bolts to specified torque.

MAINTENANCE LOG

34

5,000 Miles or 4 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

10,000 Miles or 8 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

7,500 Miles or 6 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



15,000 Miles or 12 Months*
15,000 Miles or 12 Months*
☐ Replace engine oil and oil filter ☐ Rotate tires ☐ Inspect the following: ☐ Exhaust pipes and mountings ☐ Ball joints and dust covers ☐ Brake: linings, discs/drums, lines, hoses ☐ Drive shaft boots (re-torque flange bolts) ☐ Steering linkages ☐ Automatic transmission and differential oil ☐ Rack and pinion assy. for leakage ☐ Limited-slip differential oil (Supra) <i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. ☐ Inspect air filter ☐ Replace automatic transmission and differential oil ☐ Inspect body/chassis nuts and bolts <i>Dealer Service Verification</i> Date: _____ Mileage: _____

MAINTENANCE LOG

36

20,000 Miles or 16 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

25,000 Miles or 20 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

22,500 Miles or 18 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



30,000 Miles or 24 Months*	
30,000 Miles or 24 Months*	
☐ Replace engine oil and oil filter ☐ Rotate tires ☐ Replace engine air filter ☐ Replace non-platinum spark plugs ¹ (Corolla, Paseo, Tercel)	☐ Replace engine coolant ☐ Repack rear wheel bearings (Tercel, Paseo)
☐ Inspect the following: — Drive belts (non-ribbed) — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Exhaust pipes and mountings — Brake: linings, discs/drums, lines, hoses	— Steering linkages — Rack and pinion assy. for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) — Transmission and differential oil — Limited-slip differential oil (Supra)
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. ☐ Replace transmission and differential oil ☐ Inspect body/chassis nuts and bolts	
Dealer Service Verification Date: _____ Mileage: _____	

¹ Maintenance service is required under the terms of the Emission Control Warranty.

MAINTENANCE LOG

38

35,000 Miles or 28 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

40,000 Miles or 32 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

37,500 Miles or 30 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals

45,000 Miles or 36 Months*

45,000 Miles or 36 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires
- ☐ Inspect the following:
 - ___ Exhaust pipes and mountings ___ Ball joints and dust covers
 - ___ Brake: linings, discs/drums, lines, hoses ___ Drive shaft boots (re-torque flange bolts)
 - ___ Steering linkages ___ Automatic transmission and differential oil
 - ___ Rack and pinion assy. for leakage ___ Limited-slip differential oil (Supra)

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect air filter
- ☐ Replace automatic transmission and differential oil
- ☐ Inspect body/chassis nuts and bolts

Dealer Service Verification

Date: _____

Mileage: _____

MAINTENANCE LOG

40

50,000 Miles or 40 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

55,000 Miles or 44 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

52,500 Miles or 42 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



60,000 Miles or 48 Months*	
60,000 Miles or 48 Months*	
☐ Replace engine oil and oil filter ☐ Rotate tires ☐ Replace engine air filter ☐ Replace spark plugs ¹ ☐ Inspect the following: ___ Valves (audible inspection), adjust if necessary ___ Drive belts ___ Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band ___ Fuel tank cap gasket ___ Charcoal canister (72 months) ²	☐ Replace engine coolant ☐ Repack rear wheel bearings (Tercel, Paseo) ☐ Replace limited-slip differential oil (Supra) ___ Exhaust pipes and mountings ___ Brake: linings, discs/drums, lines, hoses ___ Steering linkages ___ Rack and pinion assy. for leakage ___ Ball joints and dust covers ___ Drive shaft boots (re-torque flange bolts) ___ Transmission and differential oil
<i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. ☐ Replace transmission and differential oil ☐ Inspect body/chassis nuts and bolts	
<i>Dealer Service Verification</i> Date: _____ Mileage: _____	

¹ Maintenance service is required under the terms of the Emission Control Warranty.

² Non-maintenance item except for CA, MA, NY.

MAINTENANCE LOG

42

65,000 Miles or 52 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

70,000 Miles or 56 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

67,500 Miles or 54 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals

75,000 Miles or 60 Months*

75,000 Miles or 60 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires
- ☐ Inspect the following:
 - ___ Drive belts
 - ___ Exhaust pipes and mountings
 - ___ Brake: linings, discs/drums, lines, hoses
 - ___ Steering linkages
 - ___ Rack and pinion assy. for leakage
 - ___ Ball joints and dust covers
 - ___ Ball joints and dust covers
 - ___ Drive shaft boots (re-torque flange bolts)
 - ___ Automatic transmission and differential oil
 - ___ Limited-slip differential oil (Supra)

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect air filter
- ☐ Replace automatic transmission and differential oil
- ☐ Inspect body/chassis nuts and bolts

Dealer Service Verification

Date: _____

Mileage: _____

MAINTENANCE LOG

44

80,000 Miles or 64 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

85,000 Miles or 68 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

82,500 Miles or 66 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



90,000 Miles or 72 Months*	
90,000 Miles or 72 Months*	
☐ Replace engine oil and oil filter ☐ Rotate tires ☐ Replace engine air filter ☐ Replace non-platinum spark plugs ¹ (Corolla, Paseo, Tercel) ☐ Inspect the following: ___ Drive belts ___ Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band ___ Fuel tank cap gasket ___ Exhaust pipes and mountings ___ Brake: linings, discs/drums, lines, hoses	☐ Replace timing belt (Non-Turbo Supra) ☐ Replace engine coolant ☐ Repack rear wheel bearings (Tercel, Paseo) ___ Steering linkages ___ Rack and pinion assy. for leakage ___ Ball joints and dust covers ___ Drive shaft boots (re-torque flange bolts) ___ Transmission and differential oil ___ Limited-slip differential oil (Supra)
<i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. ☐ Replace timing belt (except Corolla) ² ☐ Replace transmission and differential oil ☐ Inspect body/chassis nuts and bolts	
<i>Dealer Service Verification</i> Date: _____ Mileage: _____	

¹ Maintenance service is required under the terms of the Emission Control Warranty.

² Timing belt replacement only required for Special Operating Condition 3 as indicated on page 30 of this supplement.

MAINTENANCE LOG

46

95,000 Miles or 76 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

100,000 Miles or 80 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:

- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

97,500 Miles or 78 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



105,000 Miles or 84 Months*										
105,000 Miles or 84 Months* ☐ Replace engine oil and oil filter ☐ Rotate tires ☐ Inspect the following: <table border="0"> <tr> <td>___ Drive belts</td> <td>___ Ball joints and dust covers</td> </tr> <tr> <td>___ Exhaust pipes and mountings</td> <td>___ Drive shaft boots (re-torque flange bolts)</td> </tr> <tr> <td>___ Brake: linings, discs/drums, lines, hoses</td> <td>___ Automatic transmission and differential oil</td> </tr> <tr> <td>___ Steering linkages</td> <td>___ Limited-slip differential oil (Supra)</td> </tr> <tr> <td>___ Rack and pinion assy. for leakage</td> <td></td> </tr> </table> <i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. ☐ Inspect air filter ☐ Replace automatic transmission and differential oil ☐ Inspect body/chassis nuts and bolts <i>Dealer Service Verification</i> Date: _____ Mileage: _____	___ Drive belts	___ Ball joints and dust covers	___ Exhaust pipes and mountings	___ Drive shaft boots (re-torque flange bolts)	___ Brake: linings, discs/drums, lines, hoses	___ Automatic transmission and differential oil	___ Steering linkages	___ Limited-slip differential oil (Supra)	___ Rack and pinion assy. for leakage	
___ Drive belts	___ Ball joints and dust covers									
___ Exhaust pipes and mountings	___ Drive shaft boots (re-torque flange bolts)									
___ Brake: linings, discs/drums, lines, hoses	___ Automatic transmission and differential oil									
___ Steering linkages	___ Limited-slip differential oil (Supra)									
___ Rack and pinion assy. for leakage										

MAINTENANCE LOG

48

110,000 Miles or 88 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

115,000 Miles or 92 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- ☐ Inspect the following:
- | | |
|--|---|
| ☐ Air filter | ☐ Ball joints and dust covers |
| ☐ Brake: linings, discs/drums | ☐ Drive shaft boots (re-torque flange bolts) |
| ☐ Steering linkages | ☐ Body/chassis nuts and bolts |

Dealer Service Verification

Date: _____

Mileage: _____

112,500 Miles or 90 Months*

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



120,000 Miles or 96 Months*	
120,000 Miles or 96 Months*	
☐ Replace engine oil and oil filter ☐ Rotate tires ☐ Replace engine air filter ☐ Replace spark plugs ¹ ☐ Inspect the following: — Valves (audible inspection), adjust if necessary — Drive belts — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Charcoal canister (144 months) ² — Exhaust pipes and mountings	☐ Replace engine coolant ☐ Repack rear wheel bearings (Terrel, Paseo) ☐ Replace limited-slip differential oil (Supra) — Brake: linings, discs/drums, lines, hoses — Steering linkages — Rack and pinion assy. for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) — Transmission and differential oil
<i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. ☐ Replace transmission and differential oil ☐ Inspect body/chassis nuts and bolts	
<i>Dealer Service Verification</i> Date: _____ Mileage: _____	

120 Months	
120 Months	
☐ Inspect SRS Air Bag	
<i>Dealer Service Verification</i> Date: _____ Mileage: _____	

¹ Maintenance service is required under the terms of the Emission Control Warranty.

² Non-maintenance item except for CA, MA, NY.

Official Toyota Service Manuals

You may prefer to do some of your own service work on your Toyota. Or, you may want to be more knowledgeable when you talk about your Toyota with the service writer or service manager at the dealership. In either case, we have the service manuals with the information you need.

A complete line of Service Manuals is available for your Toyota, including the Repair Manual, Electrical Systems Manual, Automatic Transmission/Transaxle Repair Manual, and a replacement *Owner's Manual*, if needed.

For owners who wish to perform their own maintenance and light repair, a new Do-It-Yourself Repair Manual is available for Camry models.

Vehicle Repair Manual

These are the same service and repair manuals used by professional technicians in Toyota dealerships throughout the U.S. They are fully illustrated and cover each of your vehicle's systems in considerable detail.

- Tune-up instructions and specifications.
- Repair procedures for all vehicle mechanical systems, e.g., brakes, engine, transmission, and chassis.

Repair Manual Supplements

- Electrical Systems Manual provides detailed electrical wiring diagrams for each electrical system in your vehicle.
- Automatic Transmission/Transaxle Repair Manual covers procedures for overhaul of the automatic transmission/transaxle of your vehicle.

Do-It-Yourself Repair Manual

- Maintenance instructions.
- Light repair procedures for commonly performed owner repairs.

Ordering Procedures

If you wish to order one or more of the manuals, simply fill out both sides of the order form, cut it out, and mail it to us, or you can phone direct. If you are in any way dissatisfied with your order, return it within 10 days for a full refund.

If you wish to place a CREDIT CARD ORDER by telephone, please have your credit card available when calling.

Only credit card orders can be accepted by phone.

Toyota Service Publications
1-800-622-2033

TOYOTA SERVICE PUBLICATIONS
750 W. Victoria St.
Compton, CA 90220-5538

Name		
Address		
City	State	ZIP

Complete both sides of form.

--

Your Name (Print clearly)

(Please, no currency)

☐ Money Order MasterCard☐ Check (Payable to:
Toyota Service Publications)

Daytime Phone # (____) _____ - _____

[illegible]

Credit card orders can be made toll-free from
7:00 a.m. to 4:30 p.m. PST by calling 1-800-622-2033.

SERVICE MANUALS

52

Model	Year																		
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> <td style="width: 20px; height: 20px;"></td> </tr> </table>																			

Vehicle I.D. Number (see inside driver's door post)

† Call our "800" number for prices: 1-800-622-2033

* SALES TAX IS REQUIRED EXCEPT IN THE FOLLOWING STATES:

DELAWARE	NEW HAMPSHIRE
MONTANA	OREGON

NOTE: Manuals shipped to Alaska, Puerto Rico, Virgin Islands, and Hawaii shipped air only.

	Price†	Quantity	Total
Repair Manuals Avalon, Camry, Celica, Corolla, Paseo, Sienna, Tercel			
Electrical Systems Manual (Available in all models listed above)	†		
Automatic Transmission Manuals and Transaxle Service Manuals (Available in all models listed above)	†		
Owner's Manual (Available in all models listed above)	†		
Do-It-Yourself Repair Manual (Camry models only)	†		

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="3" style="text-align: center;">Shipping and Handling**</th> </tr> <tr> <td style="width: 33%;">(Choose one)</td> <td style="width: 33%;">Delivery time</td> <td style="width: 33%;">Cost</td> </tr> <tr> <td>Surface</td> <td>2-3 weeks</td> <td style="text-align: center;">6.00</td> </tr> <tr> <td>Air 1***</td> <td>2 days</td> <td style="text-align: center;">20.00</td> </tr> <tr> <td>Air 2***</td> <td>3-4 days</td> <td style="text-align: center;">12.00</td> </tr> </table>	Shipping and Handling**			(Choose one)	Delivery time	Cost	Surface	2-3 weeks	6.00	Air 1***	2 days	20.00	Air 2***	3-4 days	12.00	<table style="width: 100%;"> <tr> <td style="width: 50%;">Subtotal</td> <td style="width: 50%;"></td> </tr> <tr> <td>Sales Tax*</td> <td></td> </tr> <tr> <td> ☐ Surface ☐ Air 1 ☐ Air 2 </td> <td style="vertical-align: bottom;">\$</td> </tr> <tr> <td colspan="2">Total Order</td> </tr> </table>	Subtotal		Sales Tax*		☐ Surface ☐ Air 1 ☐ Air 2	\$	Total Order	
Shipping and Handling**																								
(Choose one)	Delivery time	Cost																						
Surface	2-3 weeks	6.00																						
Air 1***	2 days	20.00																						
Air 2***	3-4 days	12.00																						
Subtotal																								
Sales Tax*																								
☐ Surface ☐ Air 1 ☐ Air 2	\$																							
Total Order																								

** Shipping and handling costs reflect single manual orders only. Please call for charges on multiple manual orders. Shipping and handling for a single *Owner's Manual* is \$3.00 for surface delivery.

*** Air 1 and Air 2: No deliveries to P.O. Boxes or APO.

Foreign deliveries shipped U.P.S. Air only. Applicable duty charges are to be paid by the customer.

VEHICLE IDENTIFICATION

OWNER IDENTIFICATION

Model	Model Year
Body Style	
Vehicle I.D. Number	
In-Service Date	
Mileage at Delivery	
Key Number	
Selling Dealer's Name	
Dealer Code	

Name		
Address		
City	State	ZIP
Telephone		

SPEEDOMETER REPLACEMENT RECORD


Speedometer Replaced on	(Date)
with	Miles on the Odometer
Toyota Dealer Signature	

NOTES:

NOTES:

NOTES:

NOTES:

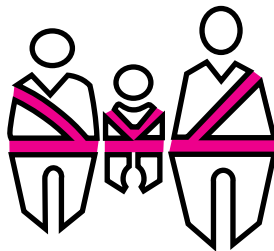

**WE REALLY CARE ABOUT YOU –
PLEASE BUCKLE UP.**

Toyota has made a special effort to encourage use of seat belts.

Toyota belts are:

- Comfortable
- Easy to use
- Convenient

We encourage you to use your belts every time you drive.

OWNER INFORMATION CHANGE

EVV

NAME/ADDRESS INFORMATION FORM

Check
One:

☐

Same Owner,
Name and/or Address Changed

☐

Same Owner,
Additional Driver

☐

New
Owner

☐

No Longer Have Vehicle—Sold or
Traded to Individual Listed Below

Vehicle Identification Number (VIN)

Effective Date of
This Information

Mo.

Day

Year

☐

Mr.

☐

Mrs.

☐

Ms.

☐

Miss

☐

Dr.

Individual
OR

First Name

M.I.

Last Name

Company:

Company Name

Address/P.O. Box

Apt./Suite Number

City

State

ZIP Code

Home Telephone Number

Ext.

Work Telephone Number

Ext.

Social Security Number/
Customer Reference

☐

Do not include on future mailings

OWNER INFORMATION CHANGE

BUSINESS REPLY MAIL

FIRST CLASS MAIL PERMIT NO. 449 TORRANCE, CA 90509

POSTAGE WILL BE PAID BY ADDRESSEE

DIRECT RESPONSE DEPARTMENT A207
TOYOTA MOTOR SALES USA INC
PO BOX 2991
TORRANCE CA 90509-9941

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



OWNER INFORMATION CHANGE

EVV

NAME/ADDRESS INFORMATION FORM

Check
One:

☐

Same Owner,
Name and/or Address Changed

☐

Same Owner,
Additional Driver

☐

New
Owner

☐

No Longer Have Vehicle—Sold or
Traded to Individual Listed Below

Vehicle Identification Number (VIN)

Effective Date of
This Information

Mo.

Day

Year

☐

Mr.

☐

Mrs.

☐

Ms.

☐

Miss

☐

Dr.

Individual
OR

First Name

M.I.

Last Name

Company:

Company Name

Address/P.O. Box

Apt./Suite Number

City

State

ZIP Code

Home Telephone Number

Ext.

Work Telephone Number

Ext.

Social Security Number/
Customer Reference

☐

Do not include on future mailings

OWNER INFORMATION CHANGE

BUSINESS REPLY MAIL

FIRST CLASS MAIL PERMIT NO. 449 TORRANCE, CA 90509

POSTAGE WILL BE PAID BY ADDRESSEE

**DIRECT RESPONSE DEPARTMENT A207
TOYOTA MOTOR SALES USA INC
PO BOX 2991
TORRANCE CA 90509-9941**

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

