

Prins

Scheduled

Maintenance

Guide



TAKING CARE



EVERY DAY



SAFETY PRECAUTIONS

Your Toyota Prius has both high-voltage DC and AC systems as well as a 12-volt system. Both DC and AC high voltage are very dangerous and can cause personal injury, severe burns, electric shock and even fatal injury.

To avoid personal injury, please follow all caution labels attached to high-voltage parts. Do not touch or attempt to remove or replace any high-voltage (orange-colored) wiring and connectors. Do not touch the service plug located in the driver's side trim of the trunk.

If an accident occurs, do not touch any high-voltage wiring, connectors or high-voltage parts such as the inverter unit or hybrid vehicle battery assembly. Do not touch the potassium hydroxide electrolyte that might spill or leak from the hybrid vehicle battery as the result of an accident. If potassium hydroxide electrolyte gets on your skin or in your eyes, neutralize it immediately with a saturated boric acid solution (ratio: 80 grams boric acid to two liters water). Seek immediate medical attention.

If a vehicle fire occurs, extinguish it with a Class D powder-type fire extinguisher.

INTRODUCTION

The Importance of Scheduled Maintenance	2
Maintenance and Toyota Warranty Coverage	3

TOYOTA MAINTENANCE & REPAIR SUPPORT

Toyota Dealership Service	4
Toyota Express Lube	5
Genuine Toyota Parts	6
Lifetime Guarantee Replacement Parts	7
Collision Repair Parts	8
Do-It-Yourself Products	10
Toyota Parts Centers	12
Toyota Service Manuals	13
Service Agreements and Pre-Paid Maintenance	14

SCHEDULED MAINTENANCE LOG

Determining Your Vehicle's Maintenance Needs	15
Explanation of Maintenance Items	17
Maintenance Log	22
Vehicle Identification	40

The Importance of Scheduled Maintenance

Regular maintenance is essential to obtaining the highest level of performance, safety and reliability from your Toyota. It can also enhance your vehicle's resale value. This booklet is designed to help you make sure your vehicle receives proper and timely maintenance. It includes factory-recommended maintenance guidelines along with information on the extensive maintenance and repair support available through Toyota and your dealership. You'll also find space to document your vehicle's maintenance history.

In addition to scheduled maintenance, your Toyota requires ongoing general maintenance such as fluid checks and periodic visual inspections. These procedures are explained under the "General Maintenance" heading in the "Vehicle Maintenance and Care" section of the *Owner's Manual*. Be sure to follow these guidelines carefully to ensure the most trouble-free operation of your vehicle.

With proper maintenance and care, your vehicle will last longer and deliver more dependable, economical performance. Follow this booklet's recommendations and you'll enjoy maximum reliability and peace of mind from your Toyota for many years to come.

Toyota provides five complimentary maintenance services for your Prius, to be performed at the first five 7,500-mile/6-month maintenance intervals. If you drive your Prius under special operating conditions (see page 16), you are responsible for the cost of additional required maintenance.

To obtain your complimentary maintenance services, take your vehicle to an authorized Prius dealership. To locate your nearest authorized Prius dealership, contact the Toyota Customer Assistance Center at (800) 331-4331 or log on to www.toyota.com/prius.

Maintaining your vehicle according to the recommendations in this booklet is required to ensure that your warranty coverage remains intact. You should keep detailed records of vehicle maintenance, including date of service, mileage at time of service and a description of service and/or parts installation performed. The scheduled maintenance log in this booklet is a good place to record this information. If you sell your vehicle, be sure to give your maintenance records to the new owner.

Toyota will not deny a warranty claim solely because you do not have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance and repair services may be performed by you or by any automotive service provider you choose. Toyota will not deny a warranty claim solely because you used a service provider other than a Toyota dealership for maintenance and repairs. However, damage or failures caused by improper maintenance or repairs are not covered under warranty.

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. These additional services are not required to maintain your warranty coverage. Ask your dealer for an explanation of any recommended maintenance not included in the scheduled maintenance log.

For a complete description of Toyota warranty coverages, see the booklet entitled *2001 Prius Owner's Warranty Information* in your vehicle's glove box.

Toyota Dealership Service

To ensure that your vehicle receives first-quality service and factory-authorized parts, Toyota recommends having maintenance performed by an authorized Prius dealership.

Technicians at authorized Prius dealerships are specially trained to maintain and repair your vehicle. They stay current on the latest service information through Toyota technical bulletins, service publications and training courses. Many are also certified through the Toyota Certified Technician Program, which requires specialized, state-of-the-art training as well as rigorous exams through both Toyota and the National Institute for Automotive Service Excellence. Feel free to ask any authorized Prius dealership to show you its technicians' credentials.

You can be confident you're getting the best possible service for your vehicle when you take it to an authorized Prius dealership. Why trust your investment to anything but a team of highly qualified specialists?

Technicians trained to service the Prius model may not be available at every Toyota dealership. To locate your nearest authorized Prius dealership, contact the Toyota Customer Assistance Center at (800) 331-4331 or log on to www.toyota.com/prius.



With Toyota Express Lube, you get the convenience of a quick-lube shop *and* the quality and expertise you count on when you go to a Toyota dealership. You also get the Express Lube guarantee: in 29 minutes or less from the time of write-up, a complete oil-and-filter change using Genuine Toyota Parts along with a multi-point inspection, or the next one is free.

You never need an appointment to use Express Lube at a Toyota dealership. You'll be waited on promptly and your oil-and-filter change will be done while you wait. Express Lube also delivers outstanding value, since the service is priced very competitively with franchised quick-lube centers.

More than 450 Toyota dealerships now offer Express Lube service. Call (800) 331-4331 for the Express Lube location nearest you.



Genuine Toyota Parts

To safeguard the quality, reliability and value of your vehicle, Toyota recommends using only Genuine Toyota Parts for maintenance and repairs. Like all Toyota products, Genuine Toyota Parts are built to the highest standards of quality and performance. They are also designed to fit your vehicle's exact specifications.

Your Toyota dealership maintains an extensive inventory of Genuine Toyota Parts to meet your vehicle service needs. And because it is linked electronically to Toyota's Parts Distribution Centers, the dealership has quick access to any parts it may not have in stock.

When installed by a Toyota dealership, Genuine Toyota Parts are warranted for 12 months (regardless of mileage) or the remainder of any applicable New Vehicle Limited Warranty, whichever is longer. Selected Toyota replacement parts are covered by a lifetime warranty (see page 7). Non-Genuine Toyota Parts — and any damage or failures resulting from their use — are not covered by any Toyota warranty.

For all your maintenance and repair needs, insist on the quality and peace of mind you only get with Genuine Toyota Parts.



Toyota's confidence in its products and commitment to customer satisfaction are demonstrated by outstanding warranty coverage — including a lifetime guarantee on replacement mufflers, exhaust pipes, shock absorbers, struts and strut cartridges. When purchased at and installed by a Toyota dealership, these Genuine Toyota Parts are guaranteed to the original purchaser for the life of the vehicle. This includes coverage for parts *and* labor.

Compare the guarantees offered on these parts by aftermarket repair shops — many don't offer the extensive coverage Toyota does. And remember that only Genuine Toyota Parts are manufactured to your vehicle's exact specifications. So don't compromise; when replacement time comes, count on your Toyota dealer for quality, performance and the peace of mind that comes with a factory-backed lifetime guarantee.

For complete details of the Toyota Lifetime Guarantee, see an authorized Toyota dealer.

Compare Lifetime Guarantee Coverage

	Toyota	Others*
• Muffler	Yes	Yes
- Labor to replace	Yes	Yes
• Tail Pipe	Yes	No
- Labor to replace	Yes	No
• Exhaust Pipes	Yes	No
- Labor to replace	Yes	No



Theirs

**We Cover
The Muffler,
Pipes And
Labor Too!**



Ours

* Some muffler shops—read their fine print and compare.

Insist on Genuine Toyota Quality

If you're involved in a collision, you want your vehicle to be returned to its pre-accident condition when repaired. To maintain your Toyota's value, it's important to make sure it is repaired with Genuine Toyota Parts. Some repair shops and insurance companies may suggest using imitation or used salvage parts to save money. However, these parts do not meet Toyota's high standards for quality, fit and corrosion resistance. In addition, imitation and used salvage parts are not covered by any Toyota warranty (see box at right).

To maintain the appearance, performance and safety of your Toyota, make sure only Genuine Toyota Parts are used for collision repairs. Protect your investment — insist on Genuine Toyota quality.

Toyota warranty coverage remains intact when vehicle repairs are completed with Genuine Toyota Parts. Toyota warranties do not cover imitation or used salvage parts or any damage or failures caused by the use of such parts.

In Case of Accident, Be an Informed Owner

Toyota believes customers have the right to choose the types of parts used in the repair of their vehicles. That's why Toyota supports full disclosure by repair shops and insurance companies regarding parts used for collision repair. The following information is provided to help you understand the differences in the types of parts that could be used in the repair of your vehicle.

General Information

"Collision repair parts" or "replacement crash parts" are the parts typically replaced during the repair of a vehicle that has been damaged in a collision. These parts include exterior sheet metal such as fenders, hoods, doors and related components; and plastic components such as bumper covers and lamp assemblies.

Warranty Coverage

Warranties for collision repair parts are provided by the manufacturer or distributor of the parts. Warranty coverage varies. Your insurance company or collision repair facility should provide you with written warranty statements for all parts used in the repair of your vehicle.

Types of Collision Repair Parts

New Original-Equipment Manufacturer (OEM)

Parts that are made by the vehicle manufacturer or one of its licensees and distributed through its normal channels. These parts maintain the manufacturer's vehicle warranty.

Aftermarket or Imitation

Parts that are made by companies other than the vehicle manufacturer or its licensees.

Recycled or Used Salvage

Used parts and assemblies that have been removed from another vehicle. There are no systems in place to regulate the quality or safety of these parts.

Remanufactured

Parts that have been returned to like-new condition through repair, refurbishing or rebuilding.

Due to the critical nature of Supplemental Restraint Systems (also known as air bags), Toyota does not support the use of imitation or used parts for their repair. Only new Genuine Toyota Parts should be used to repair/replace Supplemental Restraint Systems.

When it's time to replace key wear items on your vehicle, don't settle for less than Genuine Toyota Parts. Available exclusively through Toyota dealerships, Genuine Toyota Parts meet the highest standards of quality and performance and are built to exact factory specifications. Here are a few of your vehicle's components that are particularly subject to wear and some benefits of replacing them with Genuine Toyota Parts.

Genuine Toyota Iridium Spark Plugs*

- Specially designed to work with your vehicle's ignition system.
- Feature a smaller center electrode than conventional plugs, which translates into better performance.
- Made with iridium for maximum durability.

* Always use the right spark plugs for your engine. The wrong plugs can have a negative impact on fuel economy and overall engine performance.

Genuine Toyota Brake Pads

- Friction materials selected for optimum performance when matched with Toyota brake drums or rotors.
- Precision-machined backing plates allow pads to move freely within the calipers for smooth, efficient braking.

Genuine Toyota Wiper Inserts

- Cut to match the exact length and shape of your vehicle's wiper blades for a proper and secure fit.
- Constructed of compression-molded natural rubber — not synthetic — for superior wiping performance.



Genuine Toyota Chemicals

Toyota offers a complete line of products to help you keep your Toyota looking and running like new. To safeguard your vehicle's appearance, you'll find everything from fabric spot remover and glass cleaner to liquid car wash and touch-up paint. When it's time to get under the hood (or under the car), products such as fuel injector cleaner, brake fluid and silicone spray will help you get the job done. All of these products are formulated specifically for use with Toyota vehicles, so you can be confident you're giving your vehicle the best care possible, inside and out.

Genuine Toyota Antifreeze Coolant

Genuine Toyota Long Life Antifreeze Coolant is the same high quality, factory-fill product found in all new Toyotas. You'll know it by its distinctive red color. It provides maximum protection and durability without the use of harmful silicates. And because it's compatible with non-metallic materials, it helps extend the life of water-pump seals. Don't trust your engine to anything less than the best: Genuine Toyota Long Life Antifreeze Coolant.

Genuine Toyota Motor Oil

Your Toyota's engine features highly advanced technology to ensure superior performance, reliability and fuel economy. Genuine Toyota Motor Oil is formulated with a special combination of lube-base stocks and an additive blend to maximize the benefits of this technology. Make sure you're getting the most out of your engine by always putting the best into it: Genuine Toyota Motor Oil.



Toyota Parts Centers

If you plan to perform your own maintenance or repairs on your Toyota, be sure to check out your nearby Toyota Parts Center (TPC). More than 500 Toyota dealerships now have a TPC, which is an in-dealership parts store offering a wide selection of automotive products. All TPCs feature a complete line of Genuine Toyota maintenance parts and car-care products for “do-it-yourselfers.”

In addition to Toyota maintenance and repair products, TPCs offer free technical advice to Toyota owners who want to service their own vehicles. You’ll also find model-specific parts application guides and how-to brochures covering most common maintenance jobs. Both are provided to customers free of charge.

Toyota Parts Centers are open during regular dealership hours; many also have extended evening and weekend hours. If you’re a do-it-yourselfer, stop by and experience the service, selection and value offered by your local TPC.



If you'll be doing some of your own maintenance and repair work on your vehicle, a Toyota service manual will be one of your most valuable tools. Toyota offers three types of manuals to assist do-it-yourselfers. To order any of the following manuals, call Toyota's service publications department at (800)622-2033.

Vehicle Repair Manual

This is the same manual used by professional technicians in Toyota dealerships throughout the United States. It is fully illustrated and includes maintenance and repair procedures for all vehicle mechanical systems. It also includes instructions for vehicle tune-ups.

Electrical Systems Manual

This manual provides detailed wiring diagrams for each electrical system in your vehicle, along with troubleshooting tips and repair procedures.

Automatic Transmission/Transaxle Repair Manual

This manual includes complete procedures for overhauling the automatic transmission/transaxle of your vehicle.

For information on basic do-it-yourself maintenance items, see the "Vehicle Maintenance and Care" and "Do-It-Yourself Maintenance" sections of your *Owner's Manual*.





Extended Service Coverage

Toyota vehicle service agreements provide protection against unexpected repairs for mechanical breakdown beyond the factory warranty.¹ They also protect you from increases in the cost of covered repairs. In addition, many plans include benefits such as towing, substitute transportation and travel protection with lodging and meals.

Because they are factory-backed, Toyota service agreements are accepted at all Toyota dealerships in the United States and Canada. That means repairs are made by factory-trained technicians using Genuine Toyota Parts.

Toyota Financial Services offers several levels of service agreement coverage, each with a variety of time and mileage options.² Your Toyota dealer can help you select the coverage that best meets your needs.

Pre-Paid Maintenance

Toyota provides five complimentary maintenance services for your Prius (see page 2). After you have used these services, an excellent way to make sure your vehicle continues to receive the recommended maintenance — and to protect yourself from increases in service costs — is to pay for maintenance services in advance.

Toyota Financial Services offers Toyota Auto Care pre-paid maintenance plans for both new and used vehicles. Benefits include oil-and-filter changes, lubrication of key chassis parts and a 19-point vehicle inspection at each service interval. In addition, you receive 24-hour roadside assistance, timed service reminders and a computerized history of each service visit.

Toyota Auto Care plans are available with several options for service intervals, time and mileage. Ask your Toyota dealer to help you select the coverage that is right for you.

¹ Vehicle service agreements are offered by Toyota Motor Insurance Services, Inc., dba Toyota Motor Services Company in certain states. In Florida, offered by Toyota Motor Insurance Company.

² Toyota Financial Services is a service mark used by Toyota Motor Insurance Services, Inc.

Determining the Proper Maintenance Interval

Depending on your circumstances, you should obtain maintenance for your Toyota every 5,000 miles or every 7,500 miles. Follow these guidelines to determine which interval to use.

5,000-Mile Intervals

Use 5,000-mile intervals if you primarily operate your vehicle under any of the following conditions:

- Driving on unpaved or dusty roads.
- Repeated trips of less than five miles in temperatures below freezing.

7,500-Mile Intervals

Use 7,500-mile intervals if you primarily operate your vehicle under conditions other than those listed above.

Following the Maintenance Log Charts

The scheduled maintenance log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of 1,250 miles per month. If you drive more than 1,250 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

If you choose 5,000-mile intervals, follow the maintenance instructions shown below non-shaded headings such as this one:

5,000 Miles or 4 Months

If you choose 7,500-mile intervals, follow the maintenance instructions shown below shaded headings such as this one:

7,500 Miles or 6 Months

At 15,000-mile increments, the 5,000-mile and 7,500-mile intervals coincide. Therefore, shaded and non-shaded headings appear together, as in this example:

15,000 Miles or 12 Months

15,000 Miles or 12 Months

Special Operating Conditions

In addition to standard maintenance items, the scheduled maintenance log indicates services that should be performed on vehicles that are driven under especially demanding conditions. Specific conditions require specific services, as indicated below. The scheduled maintenance log indicates at which mileage/time intervals each service should be performed.

You should perform these additional maintenance services if you drive *primarily* under any of the conditions noted. If you drive only occasionally under these conditions, it is not necessary to perform the additional services.

Driving on Rough, Muddy or Snow-Melted Roads

- Rotate tires
- Inspect ball joints and dust cover
- Inspect brake linings/drums and brake pads/discs

- Inspect drive shaft boots
- Inspect nuts and bolts on chassis and body
- Inspect steering linkage

Driving on Unpaved or Dusty Roads

- Inspect brake linings/drums and brake pads/discs
- Inspect or change engine air filter
- Replace air conditioning filter

Extensive Idling or Low-Speed Driving for Long Distances

- Inspect brake linings/drums and brake pads/discs

The following descriptions are provided to give you a better understanding of the maintenance items that should be performed on your vehicle. The scheduled maintenance log indicates at which mileage/time intervals each item should be performed. Please note that many maintenance items should be performed only by a qualified technician.

For further information on maintenance items you can perform yourself, see the “Vehicle Maintenance and Care” and “Do-It-Yourself Maintenance” sections of your *Owner’s Manual*.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. *Wash hands after handling.*

ALSO: See safety precautions on the inside front cover of this booklet pertaining to your vehicle’s electrical and battery systems.

Air Conditioning Filter

Replace every 22,500 miles/18 months or as directed for special operating conditions. Refer to your *Owner’s Manual* for service details.

Automatic Transmission Fluid

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Explanation of Maintenance Items

Brake Lines and Hoses

Visually inspect for proper installation. Check for chafing, cracks, deterioration and evidence of leaking. Replace any deteriorated or damaged parts immediately. A qualified technician should perform these operations.

Brake Linings/Drums and Brake Pads/Discs

Check the brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check the pads for excessive wear and the discs for runout, excessive wear and fluid leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Differential Oil

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Drive Belts

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

Drive Shaft Boots

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any deteriorated or damaged parts and, if necessary, repack the grease. A qualified technician should perform these operations.

Engine Air Filter

Replace at specified intervals. When performing inspections, check for damage, excessive wear and oiliness, and replace if necessary.

Engine Coolant

Drain and flush the cooling system and refill with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Engine Oil and Oil Filter

Change the oil filter and replace the engine oil. For recommended oil grade and viscosity, refer to your *Owner's Manual*.

Engine Valve Clearance

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect for cracks, deterioration and damage and replace if necessary.

Inverter Coolant

Drain and flush the cooling system with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Nuts and Bolts on Chassis and Body

Re-tighten the seat mounting bolts and front/rear suspension member retaining bolts to specified torque.

Explanation of Maintenance Items

Spark Plugs

Replace at specified intervals. Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Steering Gear Box

Inspect for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Steering Linkage and Boots

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

Tire Rotation

Tires should be rotated according to the instructions in your *Owner's Manual*. When rotating tires, check for damage and uneven wear. Replace if necessary.

NOTES

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

5,000 Miles or 4 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

10,000 Miles or 8 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Replace air conditioning filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

7,500 Miles or 6 Months²

- Replace engine oil and oil filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

15,000 Miles or 12 Months ²
15,000 Miles or 12 Months ²
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Inspect the following: ___ Ball joints and dust covers ___ Exhaust pipes and mountings ___ Brake lines and hoses ___ Steering gear box ___ Brake linings/drums and brake pads/discs ___ Steering linkage and boots ___ Drive shaft boots
Additional Maintenance Items for Special Operating Conditions:¹ <input type="checkbox"/> Inspect engine air filter <input type="checkbox"/> Inspect nuts and bolts on chassis and body

DEALER SERVICE VERIFICATION	Date: _____
	Mileage: _____



¹ Specific services apply to specific operating conditions. See page 16 for details.

² Maintenance services specified at this interval are provided by Toyota at no charge, excluding items required for vehicles driven under special operating conditions. See page 2 for details.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

20,000 Miles or 16 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots

- Replace air conditioning filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

25,000 Miles or 20 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

22,500 Miles or 18 Months²

- Replace air conditioning filter³
- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

30,000 Miles or 24 Months ²	
30,000 Miles or 24 Months ²	
<input type="checkbox"/> Replace engine air filter	<input type="checkbox"/> Replace inverter coolant
<input type="checkbox"/> Replace engine coolant	<input type="checkbox"/> Rotate tires
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Inspect the following:	
___ Ball joints and dust covers	___ Drive shaft boots
___ Brake lines and hoses	___ Exhaust pipes and mountings
___ Brake linings/drums and brake pads/discs	___ Fuel tank cap gasket
___ Differential oil	___ Steering gear box
___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses	___ Steering linkage and boots
	___ Transmission fluid
Additional Maintenance Items for Special Operating Conditions:¹	
<input type="checkbox"/> Inspect nuts and bolts on chassis and body	
<input type="checkbox"/> Replace air conditioning filter	

DEALER SERVICE VERIFICATION	Date: _____
	Mileage: _____



¹ Specific services apply to specific operating conditions. See page 16 for details.

² Maintenance services specified at this interval are provided by Toyota at no charge, excluding items required for vehicles driven under special operating conditions. See page 2 for details.

³ Do not replace if replaced at 20,000 miles/16 months.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

35,000 Miles or 28 Months

Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

Inspect the following:

- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

40,000 Miles or 32 Months

Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

Inspect the following:

- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

Replace air conditioning filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

37,500 Miles or 30 Months²

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

45,000 Miles or 36 Months								
45,000 Miles or 36 Months								
<input type="checkbox"/> Replace air conditioning filter ³ <input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Inspect the following: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">___ Ball joints and dust covers</td> <td style="width: 50%;">___ Exhaust pipes and mountings</td> </tr> <tr> <td>___ Brake lines and hoses</td> <td>___ Steering gear box</td> </tr> <tr> <td>___ Brake linings/drums and brake pads/discs</td> <td>___ Steering linkage and boots</td> </tr> <tr> <td>___ Drive shaft boots</td> <td></td> </tr> </table>	___ Ball joints and dust covers	___ Exhaust pipes and mountings	___ Brake lines and hoses	___ Steering gear box	___ Brake linings/drums and brake pads/discs	___ Steering linkage and boots	___ Drive shaft boots	
___ Ball joints and dust covers	___ Exhaust pipes and mountings							
___ Brake lines and hoses	___ Steering gear box							
___ Brake linings/drums and brake pads/discs	___ Steering linkage and boots							
___ Drive shaft boots								
<p>Additional Maintenance Items for Special Operating Conditions:¹</p> <input type="checkbox"/> Inspect engine air filter <input type="checkbox"/> Inspect nuts and bolts on chassis and body								

<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">DEALER SERVICE VERIFICATION</p> </div>	<p>Date: _____</p> <p>Mileage: _____</p>
---	--



¹ Specific services apply to specific operating conditions. See page 16 for details.

² Maintenance services specified at this interval are provided by Toyota at no charge, excluding items required for vehicles driven under special operating conditions. See page 2 for details.

³ Do not replace if replaced at 40,000 miles/32 months.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

50,000 Miles or 40 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Replace air conditioning filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

55,000 Miles or 44 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

52,500 Miles or 42 Months

- Replace engine oil and oil filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

60,000 Miles or 48 Months

60,000 Miles or 48 Months

- | | |
|--|---|
| <input type="checkbox"/> Replace engine air filter | <input type="checkbox"/> Replace inverter coolant |
| <input type="checkbox"/> Replace engine coolant | <input type="checkbox"/> Replace spark plugs ² |
| <input type="checkbox"/> Replace engine oil and oil filter | <input type="checkbox"/> Rotate tires |
| <input type="checkbox"/> Inspect the following: | |
| ___ Ball joints and dust covers | ___ Drive shaft boots |
| ___ Brake lines and hoses | ___ Engine valve clearance |
| ___ Brake linings/drums and brake pads/discs | ___ Exhaust pipes and mountings |
| ___ Differential oil | ___ Fuel tank cap gasket |
| ___ Drive belts ³ | ___ Steering gear box |
| ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | ___ Steering linkage and boots |
| | ___ Transmission fluid |

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect nuts and bolts on chassis and body
- Replace air conditioning filter

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____



¹ Specific services apply to specific operating conditions. See page 16 for details.

² Required under the terms of the Emission Control Warranty.

³ Initial inspection at 60,000 miles. Inspect every 15,000 miles thereafter.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

65,000 Miles or 52 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Rotate tires

Date: _____

DEALER SERVICE VERIFICATION

Mileage: _____

70,000 Miles or 56 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Replace air conditioning filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

67,500 Miles or 54 Months

- Replace air conditioning filter²
- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

75,000 Miles or 60 Months								
75,000 Miles or 60 Months								
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Inspect the following: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">___ Ball joints and dust covers</td> <td style="width: 50%;">___ Drive shaft boots</td> </tr> <tr> <td>___ Brake lines and hoses</td> <td>___ Exhaust pipes and mountings</td> </tr> <tr> <td>___ Brake linings/drums and brake pads/discs</td> <td>___ Steering gear box</td> </tr> <tr> <td>___ Drive belts</td> <td>___ Steering linkage and boots</td> </tr> </table> <p>Additional Maintenance Items for Special Operating Conditions:¹</p> <input type="checkbox"/> Inspect engine air filter <input type="checkbox"/> Inspect nuts and bolts on chassis and body	___ Ball joints and dust covers	___ Drive shaft boots	___ Brake lines and hoses	___ Exhaust pipes and mountings	___ Brake linings/drums and brake pads/discs	___ Steering gear box	___ Drive belts	___ Steering linkage and boots
___ Ball joints and dust covers	___ Drive shaft boots							
___ Brake lines and hoses	___ Exhaust pipes and mountings							
___ Brake linings/drums and brake pads/discs	___ Steering gear box							
___ Drive belts	___ Steering linkage and boots							

DEALER SERVICE VERIFICATION	Date: _____
	Mileage: _____



¹ Specific services apply to specific operating conditions. See page 16 for details.

² Do not replace if replaced at 70,000 miles/56 months.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

80,000 Miles or 64 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Replace air conditioning filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

85,000 Miles or 68 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

82,500 Miles or 66 Months

- Replace engine oil and oil filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

90,000 Miles or 72 Months	
90,000 Miles or 72 Months	
<input type="checkbox"/> Replace air conditioning filter <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Inspect the following: ___ Ball joints and dust covers ___ Brake lines and hoses ___ Brake linings/drums and brake pads/discs ___ Differential oil ___ Drive belts ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses	<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Replace inverter coolant <input type="checkbox"/> Rotate tires ___ Drive shaft boots ___ Exhaust pipes and mountings ___ Fuel tank cap gasket ___ Steering gear box ___ Steering linkage and boots ___ Transmission fluid
Additional Maintenance Items for Special Operating Conditions:¹	
<input type="checkbox"/> Inspect nuts and bolts on chassis and body	

DEALER SERVICE VERIFICATION	Date: _____
	Mileage: _____



¹ Specific services apply to specific operating conditions. See page 16 for details.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

95,000 Miles or 76 Months

Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

Inspect the following:

- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

100,000 Miles or 80 Months

Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

Inspect the following:

- | | |
|---|---|
| <input type="checkbox"/> Ball joints and dust covers | <input type="checkbox"/> Engine air filter |
| <input type="checkbox"/> Brake linings/drums and brake pads/discs | <input type="checkbox"/> Nuts and bolts on chassis and body |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Steering linkage and boots |

Replace air conditioning filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

97,500 Miles or 78 Months

Replace engine oil and oil filter

Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

105,000 Miles or 84 Months								
105,000 Miles or 84 Months								
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Inspect the following: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">___ Ball joints and dust covers</td> <td style="width: 50%;">___ Drive shaft boots</td> </tr> <tr> <td>___ Brake lines and hoses</td> <td>___ Exhaust pipes and mountings</td> </tr> <tr> <td>___ Brake linings/drums and brake pads/discs</td> <td>___ Steering gear box</td> </tr> <tr> <td>___ Drive belts</td> <td>___ Steering linkage and boots</td> </tr> </table> <p>Additional Maintenance Items for Special Operating Conditions:¹</p> <input type="checkbox"/> Inspect engine air filter <input type="checkbox"/> Inspect nuts and bolts on chassis and body	___ Ball joints and dust covers	___ Drive shaft boots	___ Brake lines and hoses	___ Exhaust pipes and mountings	___ Brake linings/drums and brake pads/discs	___ Steering gear box	___ Drive belts	___ Steering linkage and boots
___ Ball joints and dust covers	___ Drive shaft boots							
___ Brake lines and hoses	___ Exhaust pipes and mountings							
___ Brake linings/drums and brake pads/discs	___ Steering gear box							
___ Drive belts	___ Steering linkage and boots							

<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; margin: 0;">DEALER SERVICE VERIFICATION</p> </div>	<p>Date: _____</p> <p>Mileage: _____</p>
--	--



¹ Specific services apply to specific operating conditions. See page 16 for details.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 15.

110,000 Miles or 88 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots

- Replace air conditioning filter

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

115,000 Miles or 92 Months

- Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- Inspect the following:
- Ball joints and dust covers
 - Brake linings/drums and brake pads/discs
 - Drive shaft boots
 - Engine air filter
 - Nuts and bolts on chassis and body
 - Steering linkage and boots

- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

112,500 Miles or 90 Months

- Replace air conditioning filter²
- Replace engine oil and oil filter
- Rotate tires

DEALER SERVICE VERIFICATION

Date: _____

Mileage: _____

120,000 Miles or 96 Months	
120,000 Miles or 96 Months	
<input type="checkbox"/> Replace engine air filter	<input type="checkbox"/> Replace inverter coolant
<input type="checkbox"/> Replace engine coolant	<input type="checkbox"/> Replace spark plugs ³
<input type="checkbox"/> Replace engine oil and oil filter	<input type="checkbox"/> Rotate tires
<input type="checkbox"/> Inspect the following:	
___ Ball joints and dust covers	___ Drive shaft boots
___ Brake lines and hoses	___ Engine valve clearance
___ Brake linings/drums and brake pads/discs	___ Exhaust pipes and mountings
___ Differential oil	___ Fuel tank cap gasket
___ Drive belts	___ Steering gear box
___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses	___ Steering linkage and boots
	___ Transmission fluid
Additional Maintenance Items for Special Operating Conditions:¹	
<input type="checkbox"/> Inspect nuts and bolts on chassis and body	
<input type="checkbox"/> Replace air conditioning filter	

DEALER SERVICE VERIFICATION	Date: _____
	Mileage: _____



¹ Specific services apply to specific operating conditions. See page 16 for details.

² Do not replace if replaced at 110,000 miles/88 months.

³ Required under the terms of the Emission Control Warranty.

NOTES

Vehicle Identification

Model _____

Body style _____

In-service date _____

Mileage at delivery _____

Selling dealership _____

Selling dealership phone number _____

Key number _____

Vehicle identification number _____



TOYOTA

**drive more, worry less.
every day.**

