

2004 GS 300/430

Mileage	Content
5000	Replace engine oil and oil filter
	Re- Torque drive shaft flange bdIts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
10000	Replace engine oil and oil filter
	Replace air conditioner filter
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Rotate tires
	Road test vehicle
15000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bolts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1, #2
20000	Replace engine oil and oil filter
	Replace air conditioner filter
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Rotate tires
	Road test vehicle
25000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
30000	Replace air conditioner filter
	Replace brake fluid
	Replace engine air filter
	Re- Torque drive shaft flange bolts
	Replace engine oil and oil filter
	Rotate tires
35000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
40000	Replace engine oil and oil filter
	Replace air conditioner filter
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Rotate tires
	Road test vehicle
45000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bolts
	Road test vehicle
	Visually inspect brake pads/discs
	Inspection #1, #2
50000	Replace engine oil and oil filter
	Replace air conditioner filter
	Re- Torque drive shaft flange bdIts
	Rotate tires
	Road test vehicle
	Visually inspect brake pads/discs
55000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹

- Inspection #1
- Ball joints and dust covers
 - Drive shaft boots
 - Engine Air Filter
 - Nuts & Bolts on Chassis
 - Steering linkage and boots

60000	Replace air conditioner filter
	Replace brake fluid
	Replace engine air filter
	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bolts
	Measure brake pad thickness and rotor runout
	Replace spark plugs (GS 300)
	Road test vehicle
	Inspect engine valves clearance (audible)
65000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
70000	Replace engine oil and oil filter
	Replace air conditioner filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Road test vehicle
	Visually inspect brake pads/discs
	Inspection #1 ¹
75000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bolts
	Road test vehicle
	Visually inspect brake pads/discs
	Inspection #1, #2
	Inspect drive belts
80000	Replace engine oil and oil filter
	Replace air conditioner filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Road test vehicle
	Visually inspect brake pads/discs
	Inspection #1 ¹
85000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
90000	Replace air conditioner filter
	Replace brake fluid
	Replace engine air filter
	Replace engine oil and oil filter
	Replace timing belt
	Rotate tires
	Re- Torque drive shaft flange bolts
	Road test vehicle
	Measure brake pad thickness and rotor runout
	Inspect drive belts
95000	Replace engine oil and oil filter
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ¹
100000	Replace engine oil and oil filter
	Replace air conditioner filter
	Visually inspect brake pads/discs
	Rotate tires
	Re- Torque drive shaft flange bdIts
	Road test vehicle
	Replace coolant
	Inspection #1 ¹

- Inspection #2
- Body
 - Brake lines and hoses
 - Differential oil
 - Exhaust pipes and mountings
 - Rack and pinion assembly
 - Engine Coolant

- Inspection #3
- Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - Fuel tank cap gasket
 - Transmission Fluid

¹ Required only if vehicle is operated primarily on dirt roads