

2004 LX 470

Mileage	Content
5000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
	Inspection #1 ²
10000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
15000	Replace engine oil and oil filter ¹
	Lubricate propeller shaft, re-torque bolts
	Replace air conditioner filter
	Replace differential oil ²
	Rotate tires
	Visually inspect brake pads/discs
Road test vehicle	
Inspection #1, #2	
20000	Replace engine oil and oil filter ¹
	Lubricate propeller shaft, re-torque bolts ²
	Clean air conditioner filter
	Rotate tires
	Visually inspect brake pads/discs
Road test vehicle	
Inspection #1 ²	
25000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
Road test vehicle	
Inspection #1 ²	
30000	Replace engine oil and oil filter ¹
	Lubricate front drive shaft bushing
	Repack front wheel bearings
	Measure brake pad thickness and rotor runout
	Replace air conditioner filter
	Replace differential oil ²
	Replace transfer case oil ²
	Lubricate propeller shaft, re-torque bolts
	Replace brake fluid
	Replace engine air filter
	Rotate tires
Road test vehicle	
Inspect active height control system	
Inspection #1, #2, & #3	
35000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
40000	Replace engine oil and oil filter ¹
	Lubricate propeller shaft, re-torque bolts
	Clean air conditioner filter
	Rotate tires
	Visually inspect brake pads/discs
Road test vehicle	
Inspection #1 ²	
45000	Replace engine oil and oil filter ¹
	Lubricate propeller shaft, re-torque bolts
	Replace air conditioner filter
	Replace differential oil ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspect active height control system	
Inspection #1, #2	
50000	Replace engine oil and oil filter
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
55000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	

Inspection #1
 Ball joints and dust covers
 Drive shaft boots
 Engine Air Filter
 Nuts & Bolts on Chassis
 Steering linkage and boots

¹ Reset "Maint Req'd" light after replacing engine oil
² Required only if vehicle is operated primarily on dirt roads
^{*} Required only vehicles registered in CA, MA and NY

60000	Replace engine oil and oil filter ¹
	Lubricate front drive shaft bushing
	Replace transmission fluid ²
	Measure brake pad thickness and rotor runout
	Replace active height control system fluid
	Replace air conditioner filter
	Replace differential oil ²
	Replace transfer case oil ²
	Repack front wheel bearings
	Lubricate propeller shaft, re-torque bolts
	Replace brake fluid
	Replace engine air filter
	Rotate tires
	Road test vehicle
Inspect active height control system	
Inspect engine valves clearance (audible)	
Inspect drive belts	
Inspect charcoal canister *	
Inspection #1, #2, & #3, #4	
65000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
70000	Replace engine oil and oil filter ¹
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
75000	Replace engine oil and oil filter
	Lubricate propeller shaft, re-torque bolts
	Replace differential oil ²
	Replace air conditioner filter
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspect active height control system	
Inspect drive belts	
Inspection #1, #2	
80000	Replace engine oil and oil filter
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
85000	Replace engine oil and oil filter
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
90000	Replace engine oil and oil filter ¹
	Lubricate front drive shaft bushing
	Repack front wheel bearings
	Measure brake pad thickness and rotor runout
	Replace air conditioner filter
	Replace differential oil ²
	Replace transfer case oil
	Replace timing belt
	Lubricate propeller shaft, re-torque bolts
	Replace brake fluid
	Replace engine air filter
Rotate tires	
Road test vehicle	
Inspect active height control system	
Inspect drive belts	
Inspection #1, #2, & #3	
95000	Replace engine oil and oil filter
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Rotate tires
	Visually inspect brake pads/discs
	Road test vehicle
Inspection #1 ²	
100000	Replace engine oil and oil filter
	Clean air conditioner filter
	Lubricate propeller shaft, re-torque bolts ²
	Replace engine coolant ²
	Rotate tires
	Visually inspect brake pads/discs
Road test vehicle	
Inspection #1 ²	

Inspection #2
 Body
 Brake lines and hoses
 Differential oil
 Exhaust pipes and mountings
 Rack and pinion assembly
 Engine Coolant

Inspection #3
 Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 Fuel tank cap gasket
 Transmission Fluid
 Transmission case oil