



2010

GX 460

UPDATED MAINTENANCE REQUIREMENTS

Important Supplement to Your Warranty and Services Guide

IMPORTANT NOTICE

This booklet replaces the “Scheduled Maintenance Log” section of the *Warranty and Services Guide* in your glove box. Please refer to the booklet you are now reading for information on scheduled maintenance requirements for your vehicle. The “Scheduled Maintenance Log” section of the *Warranty and Services Guide* no longer applies to your vehicle.



MAINTENANCE IS ESSENTIAL

Regular maintenance is essential to obtaining the highest level of performance, safety and reliability from your Lexus. It can also enhance your vehicle's resale value.

It is especially important to check your vehicle's engine oil once a month and to regularly replace the engine oil and oil filter. Failure to do so can cause oil starvation and/or oil gelling, which can result in severe damage to your vehicle and require costly repairs that are not covered by the New Vehicle Limited Warranty.

Lexus recommends having maintenance for your vehicle performed by an authorized Lexus dealership. To locate your nearest authorized Lexus dealership, contact Lexus Customer Satisfaction at (800)255-3987 or visit www.lexus.com.

DETERMINING YOUR MAINTENANCE INTERVAL: MONTHS VS. MILEAGE

Lexus recommends obtaining maintenance for your vehicle every six months or 5,000 miles, whichever comes first.

For example:

- If at six months you have driven less than 5,000 miles, you should obtain maintenance at **six months**; don't wait until 5,000 miles.
- If you drive 5,000 miles in less than six months, you should obtain maintenance at **5,000 miles**; don't wait until six months.

Be sure to keep an eye on your mileage so that you obtain maintenance when recommended. If you are a low-mileage driver, mark your calendar to remind yourself to obtain maintenance every six months.

In addition to standard maintenance items, vehicles that are driven under special operating conditions require further maintenance service. These special operating conditions, which put added demands on a vehicle, include:

- Driving off-road, on dirt roads or on dusty roads
- Towing a trailer, using a car-top carrier or heavy vehicle loading
- Repeated trips of less than five miles in temperatures below 32° F or 0°C
- Extensive idling and/or low-speed driving for long distances, such as police, taxi or door-to-door delivery use

If you drive primarily under any of the conditions noted above, you should replace the engine oil and oil filter every six months or 5,000 miles. Some of these special operating conditions require other maintenance items; these items are indicated in each maintenance chart.

Note: If you drive only occasionally under any of the special operating conditions noted, it is not necessary to change the oil every six months or 5,000 miles or to perform the additional services listed in the charts. This added maintenance is required only if you drive primarily under any of the special operating conditions.

To help ensure that your ownership experience is pleasant, convenient and trouble-free, Lexus provides your first two maintenance services at no charge. Here are the details.

First Scheduled Maintenance Service: Six Months or 5,000 Miles

This complimentary service is performed at six months or 5,000 miles, whichever occurs first. To obtain this service, contact your Lexus dealership. Your complimentary service will include these items:

- Inspect and adjust all fluid levels
- Program Lexus Personalized Settings, if requested
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

What are Lexus Personalized Settings?

Your vehicle includes a variety of electronic features that can be programmed to your preferences. For example, doors can be programmed to remain locked when you shift into "Park." Programming of these features is performed once at no charge, provided you obtain the service at the six-month/5,000-mile scheduled maintenance service. Programming of your Lexus Personalized Settings requires special equipment and may be performed only by an authorized Lexus dealership.

For more information, see the "Customizable Features" section of the Specifications chapter in your *Owner's Manual*.

Second Scheduled Maintenance Service: 12 Months or 10,000 Miles

This complimentary service is performed at 12 months or 10,000 miles, whichever occurs first. To obtain this service, contact your Lexus dealership. Your complimentary service will include these items:

- Replace engine oil with 0W-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you do the majority of your driving under certain special operating conditions, additional items are included in this service. See the "12,000 Months or 10,000 Miles" chart on page 6.

SCHEDULED MAINTENANCE LOG

6 Months or 5,000 Miles¹

- Inspect and adjust all fluid levels
- Program Lexus Personalized Settings, if requested
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

12 Months or 10,000 Miles²

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

¹This service, excluding maintenance required for special operating conditions, is complimentary when performed by an authorized Lexus dealership.

²This service is complimentary when performed by an authorized Lexus dealership.

18 Months or 15,000 Miles

- Clean air conditioner filter
- Inspect and adjust all fluid levels
- Lubricate drive shaft, re-torque nuts and bolts
- Replace Smart Key battery
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Body	<input type="checkbox"/> Rear differential oil
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Engine coolant (see page 28)	
<input type="checkbox"/> Exhaust pipes and mountings	

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

24 Months or 20,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

30 Months or 25,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

36 Months or 30,000 Miles

- | | |
|--|---|
| <input type="checkbox"/> Replace engine oil with OW-20 oil; replace oil filter | <input type="checkbox"/> Replace engine air filter |
| <input type="checkbox"/> Reset maintenance reminder light | <input type="checkbox"/> Replace Smart Key battery |
| <input type="checkbox"/> Rotate tires | <input type="checkbox"/> Visually inspect brake pads, calipers and rotors |
| <input type="checkbox"/> Lubricate drive shaft, re-torque nuts and bolts | <input type="checkbox"/> Check installation of driver's floor mat |
| <input type="checkbox"/> Measure thickness and runout of brake rotors | <input type="checkbox"/> Road-test vehicle |
| <input type="checkbox"/> Replace air conditioner filter | |
| <input type="checkbox"/> Replace brake fluid | |
| <input type="checkbox"/> Inspect the following: | |
| ___ Active height control system | ___ Fuel tank cap gasket |
| ___ Axle shaft boots | ___ Rack and pinion assembly |
| ___ Ball joints and dust covers | ___ Rear differential oil |
| ___ Body | ___ Steering linkage and boots |
| ___ Brake lines and hoses | ___ Transfer case oil |
| ___ Engine coolant (see page 28) | ___ Transmission for signs of leakage |
| ___ Exhaust pipes and mountings | |
| ___ Front differential oil | |
| ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | |

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Replace transfer case oil
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Replace transfer case oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

42 Months or 35,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

48 Months or 40,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

54 Months or 45,000 Miles

- Clean air conditioner filter
- Inspect and adjust all fluid levels
- Lubricate drive shaft, re-torque nuts and bolts
- Replace Smart Key battery
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle
- Inspect the following:

<ul style="list-style-type: none"> ___ Active height control system ___ Axle shaft boots ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Engine coolant (see page 28) 	<ul style="list-style-type: none"> ___ Exhaust pipes and mountings ___ Front differential oil ___ Rack and pinion assembly ___ Rear differential oil ___ Steering linkage and boots
--	--

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

60 Months or 50,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

66 Months or 55,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

72 Months or 60,000 Miles

- | | |
|--|--|
| <input type="checkbox"/> Replace engine oil with OW-20 oil; replace oil filter | <input type="checkbox"/> Replace Smart Key battery |
| <input type="checkbox"/> Lubricate drive shaft, re-torque nuts and bolts | <input type="checkbox"/> Reset maintenance reminder light |
| <input type="checkbox"/> Measure thickness and runout of brake rotors | <input type="checkbox"/> Rotate tires |
| <input type="checkbox"/> Replace active height control system fluid | <input type="checkbox"/> Visually inspect brake pads, calipers and rotors |
| <input type="checkbox"/> Replace air conditioner filter | <input type="checkbox"/> Check installation of driver's floor mat |
| <input type="checkbox"/> Replace brake fluid | <input type="checkbox"/> Road-test vehicle |
| <input type="checkbox"/> Replace engine air filter | |
| <input type="checkbox"/> Inspect the following: | |
| ___ Axle shaft boots | ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses |
| ___ Ball joints and dust covers | ___ Fuel tank cap gasket |
| ___ Body | ___ Rack and pinion assembly |
| ___ Brake lines and hoses | ___ Rear differential oil |
| ___ Drive belt | ___ Steering linkage and boots |
| ___ Engine coolant (see page 28) | ___ Transfer case oil |
| ___ Exhaust pipes and mountings | ___ Transmission for signs of leakage |
| ___ Front differential oil | |

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Replace transfer case oil
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Replace transfer case oil
- Replace transmission fluid
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

78 Months or 65,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

84 Months or 70,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

90 Months or 75,000 Miles

- Clean air conditioner filter
- Inspect and adjust all fluid levels
- Lubricate drive shaft, re-torque nuts and bolts
- Replace Smart Key battery
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Active height control system	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Body	<input type="checkbox"/> Rear differential oil
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belt	
<input type="checkbox"/> Engine coolant (see page 28)	

Note: If 0W-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with 0W-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

96 Months or 80,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

102 Months or 85,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

108 Months or 90,000 Miles

- | | |
|--|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil with OW-20 oil; replace oil filter <input type="checkbox"/> Lubricate drive shaft, re-torque nuts and bolts <input type="checkbox"/> Measure thickness and runout of brake rotors <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Active height control system ___ Axle shaft boots ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Drive belt ___ Engine coolant (see page 28) ___ Exhaust pipes and mountings ___ Front differential oil | <ul style="list-style-type: none"> <input type="checkbox"/> Reset maintenance reminder light <input type="checkbox"/> Rotate tires <input type="checkbox"/> Visually inspect brake pads, calipers and rotors <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road-test vehicle ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses ___ Fuel tank cap gasket ___ Rack and pinion assembly ___ Rear differential oil ___ Steering linkage and boots ___ Transfer case oil ___ Transmission for signs of leakage |
|--|---|

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Replace transfer case oil
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Replace transfer case oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

114 Months or 95,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

120 Months or 100,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Replace engine coolant (see page 28)
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

126 Months or 105,000 Miles

- Clean air conditioner filter
- Inspect and adjust all fluid levels
- Lubricate drive shaft, re-torque nuts and bolts
- Replace Smart Key battery
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Active height control system	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Axle shaft boots	<input type="checkbox"/> Front differential oil
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Body	<input type="checkbox"/> Rear differential oil
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belt	

Note: If 0W-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with 0W-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

132 Months or 110,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

138 Months or 115,000 Miles

- Inspect and adjust all fluid levels
- Inspect engine coolant (see page 28)
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

144 Months or 120,000 Miles

- | | |
|---|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil with OW-20 oil; replace oil filter <input type="checkbox"/> Lubricate drive shaft, re-torque nuts and bolts <input type="checkbox"/> Measure thickness and runout of brake rotors <input type="checkbox"/> Replace active height control system fluid <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace Smart Key battery <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Axle shaft boots ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Drive belt ___ Exhaust pipes and mountings ___ Front differential oil ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses | <ul style="list-style-type: none"> <input type="checkbox"/> Replace spark plugs¹ <input type="checkbox"/> Reset maintenance reminder light <input type="checkbox"/> Rotate tires <input type="checkbox"/> Visually inspect brake pads, calipers and rotors <input type="checkbox"/> Check installation of driver's floor mat <input type="checkbox"/> Road-test vehicle ___ Fuel tank cap gasket ___ Rack and pinion assembly ___ Rear differential oil ___ Steering linkage and boots ___ Transfer case oil ___ Transmission for signs of leakage |
|---|---|

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Replace transfer case oil
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Replace transfer case oil
- Replace transmission fluid
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

¹Required under the terms of the Emission Control Warranty.

SCHEDULED MAINTENANCE LOG

150 Months or 125,000 Miles

- Inspect and adjust all fluid levels
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

156 Months or 130,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Inspect engine coolant (see page 28)
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

162 Months or 135,000 Miles

- Clean air conditioner filter
- Inspect and adjust all fluid levels
- Lubricate drive shaft, re-torque nuts and bolts
- Replace Smart Key battery
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle
- Inspect the following:

<ul style="list-style-type: none"> <input type="checkbox"/> Active height control system <input type="checkbox"/> Axle shaft boots <input type="checkbox"/> Ball joints and dust covers <input type="checkbox"/> Body <input type="checkbox"/> Brake lines and hoses <input type="checkbox"/> Drive belt 	<ul style="list-style-type: none"> <input type="checkbox"/> Exhaust pipes and mountings <input type="checkbox"/> Front differential oil <input type="checkbox"/> Rack and pinion assembly <input type="checkbox"/> Rear differential oil <input type="checkbox"/> Steering linkage and boots
--	---

Note: If 0W-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with 0W-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect engine air filter
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

SCHEDULED MAINTENANCE LOG

168 Months or 140,000 Miles

- Replace engine oil with OW-20 oil; replace oil filter
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

174 Months or 145,000 Miles

- Inspect and adjust all fluid levels
- Inspect engine coolant (see page 28)
- Reset maintenance reminder light
- Rotate tires
- Visually inspect brake pads, calipers and rotors
- Check installation of driver's floor mat
- Road-test vehicle

Note: If OW-20 oil was not used at last oil change, or if you drive primarily under certain special operating conditions, you should also replace the engine oil with OW-20 oil and replace the oil filter. See page 3 for conditions that apply. Some conditions require additional maintenance. See below.

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Inspect axle shaft boots
- Inspect ball joints and dust covers
- Inspect engine air filter
- Inspect steering linkage and boots
- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Lubricate drive shaft; re-torque nuts and bolts
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

180 Months or 150,000 Miles

- | | |
|--|---|
| <input type="checkbox"/> Replace engine oil with OW-20 oil; replace oil filter
<input type="checkbox"/> Lubricate drive shaft, re-torque nuts and bolts
<input type="checkbox"/> Measure thickness and runout of brake rotors
<input type="checkbox"/> Replace air conditioner filter
<input type="checkbox"/> Replace brake fluid
<input type="checkbox"/> Replace engine air filter
<input type="checkbox"/> Replace engine coolant (see page 28)
<input type="checkbox"/> Inspect the following:
___ Active height control system
___ Axle shaft boots
___ Ball joints and dust covers
___ Body
___ Brake lines and hoses
___ Drive belt
___ Exhaust pipes and mountings
___ Front differential oil
___ Fuel lines and connections, fuel tank band
and fuel tank vapor vent system hoses | <input type="checkbox"/> Replace Smart Key battery
<input type="checkbox"/> Reset maintenance reminder light
<input type="checkbox"/> Rotate tires
<input type="checkbox"/> Visually inspect brake pads, calipers and rotors
<input type="checkbox"/> Check installation of driver's floor mat
<input type="checkbox"/> Road-test vehicle

___ Fuel tank cap gasket
___ Rack and pinion assembly
___ Rear differential oil
___ Steering linkage and boots
___ Transfer case oil
___ Transmission for signs of leakage |
|--|---|

If you drive primarily under either of these special operating conditions, perform these additional items:

Driving off-road, on dirt roads or on dusty roads:

- Replace transfer case oil
- Tighten nuts and bolts on chassis

Towing a trailer, using a car-top carrier or heavy vehicle loading:

- Replace front differential oil
- Replace rear differential oil
- Replace transfer case oil
- Tighten nuts and bolts on chassis

Date: _____ Mileage: _____

The following descriptions are provided to give you a better understanding of the maintenance services that should be performed on your vehicle. The scheduled maintenance log indicates at which time/mileage intervals each service should be performed. Please note that many maintenance services should be performed only by a qualified technician.

For further information on maintenance services that you can perform yourself, see the maintenance sections of your *Owner's Manual*.

Active Height Control System

Inspect the lines, accumulators and pump and replace the system fluid when specified. For recommended fluid, refer to your *Owner's Manual*.

Air Conditioner Filter

Clean or replace at specified intervals. More frequent cleaning or replacement may be required when driving in heavy traffic areas, in urban or dusty areas, in desert areas or on dirt roads. Refer to your *Owner's Manual* for service details.

Axle Shaft Boots

Check the axle shaft boots and clamps for cracks, deterioration and damage. Replace any damaged parts and, if necessary, repack the grease. A qualified technician should perform these operations.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. A qualified technician should perform these inspections.

Body Inspection

Visually check for corrosion, scratches and other damage. Check outer body panels, inner panels of the hood and doors, and underneath the vehicle. Apply touch-up paint to any chips and scratches or have them repaired by a qualified technician.

Brake Fluid

Replace using fluid type specified in your *Owner's Manual*. A qualified technician should perform this operation.

Brake Lines and Hoses

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Brake Pads, Calipers and Rotors

Check brake pads and rotors for excessive wear; check brake rotors for runout. Check brake calipers for fluid leakage. Check the parking brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. A qualified technician should perform these inspections.

Differential Oil

Check for correct oil level and inspect each differential component for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician. Refer to your *Owner's Manual* for fluid specifications.

Drive Belt

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

Drive Shaft

Lubricate the drive shaft spiders and slide yokes with lithium-base chassis grease and the double cardan joint with molybdenum-disulfide lithium-base chassis grease, and re-torque the flange nuts and bolts. Only a qualified technician should re-torque the flange nuts and bolts. If vehicle is submerged, lubricate within 24 hours, regardless of maintenance interval.

Driver's Floor Mat

- Only use the driver's floor mat designed specifically for the model and model year of your vehicle, such as Lexus Genuine floor mats.
- Always properly secure the driver's floor mat using the retaining hooks.
- Never install another floor mat on top of the existing driver's floor mat.
- Never install the driver's floor mat upside down.

Engine Air Filter

Check for damage, excessive wear and oiliness. Replace if necessary.

Engine Coolant

When inspecting, visually check the engine coolant level on the see-through reservoir. Add coolant as necessary. When replacing, drain and flush the cooling system and refill with coolant. Always use Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids). A qualified technician should perform these operations.

Check the radiator and condenser for blockage by leaves, dirt or insects and clean if necessary. Also check the hose connections for corrosion and condition of installation.

Note: Initial replacement is at 120 months/100,000 miles. Replace every 60 months/50,000 miles thereafter.

Engine Oil and Oil Filter

Replace the oil filter and drain and refill the engine oil at specified intervals. SAE 0W-20 oil is the best choice for good fuel economy and good starting in cold weather. If SAE 0W-20 is not available, SAE 5W-20 may be used; however, it must be replaced with SAE 0W-20 at the next oil change. See your Lexus dealer for oil specifically formulated for your vehicle's engine. For instructions on how to reset the reminder light, refer to your *Owner's Manual*.

Note: If you do the majority of your driving under any of the special operating conditions indicated on page 3, you should replace the engine oil and oil filter every six months or 5,000 miles, regardless of the oil used or the certification of the vehicle.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust leakage. Tighten connections and replace parts as necessary.

Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses

Visually inspect for corrosion, damage, cracks, and loose or leaking connections. Tighten connections and replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect for cracks, deterioration and damage and replace if necessary.

Nuts and Bolts on Chassis

Check that tightness of the seat-mounting bolts and front/rear suspension-member retaining bolts matches torque measurements specified in the *Repair Manual*.

Rack and Pinion Assembly

Inspect the rack and pinion assembly for signs of leakage, damage and loose electrical connections. Tighten connections and if you discover any leakage or damage, have it repaired immediately by a qualified technician.

Road Test

While driving the vehicle, check for proper operation of engine, transmission, brakes and steering. Also check for abnormal noise or vibration from any part of the vehicle.

Spark Plugs

Replace at specified interval. Install new plugs of the same type as originally equipped (see your *Owner's Manual*). A qualified technician should perform this operation.

Steering Linkage and Boots

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

Timing Chain

Your vehicle is equipped with a timing chain that requires no periodic inspection.

Tire Rotation

Tires should be rotated according to the instructions in your *Owner's Manual*. When rotating tires, check pressure and check for damage and uneven wear. If the spare is not rotated, check the condition and pressure of the spare.

Transfer Case Oil

Check for correct oil level and inspect each component for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician. For correct oil, refer to your *Owner's Manual*.

Transmission

The transmission and transmission fluid are a completely sealed unit. Therefore, periodic checks and replacement of the transmission fluid are not required, and there is no dipstick on the transmission. Any repairs that require adding or replacing fluid should be performed by a qualified technician following procedures in Lexus service and repair publications.

