



2 0 1 9

YARIS SEDAN

TOUCH SCREEN  
DISPLAY AUDIO

AND DISPLAY AUDIO  
WITH NAVIGATION



QUICK REFERENCE GUIDE



TOYOTA

## TABLE OF CONTENTS

<b>BUTTON OVERVIEW</b>	2
<b>TOUCHSCREEN</b>	2
<b>COMMANDER SWITCH</b>	2
- HOME	2
- ENTERTAINMENT	2
- NAVIGATION	2
- FAVORITES	2
- COMMANDER KNOB	2
- RETURN	2
- VOLUME DIAL	2
<b>PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME</b>	3-4
<b>SWITCHING AUDIO SOURCE</b>	5
<b>PRESETTING A STATION</b>	5
<b>AUDIO SOUND SETTINGS</b>	6
<b>NAVIGATION</b>	
<b>BEFORE USING THE SYSTEM</b>	6
<b>DESTINATION INPUT BY ADDRESS</b>	7-8
<b>SETTING HOME DESTINATION</b>	8
<b>DESTINATION INPUT BY VOICE RECOGNITION</b>	9
<b>DESTINATION INPUT – POI BY NAME</b>	10
<b>DESTINATION INPUT – POI BY CATEGORY</b>	11
<b>ROUTE CALCULATION AND RECALCULATION</b>	12
<b>SIRIUSXM® SATELLITE RADIO</b>	13
<b>OPERATING</b>	13
<b>FUNCTION AND OPTIONS</b>	13

## BUTTON OVERVIEW

### TOUCHSCREEN

– use your finger to control selected functions.



#### Applications

Information such as average fuel economy, maintenance, and warnings can be verified.



#### Entertainment

Operates various audio sources. The audio source most recently used is displayed.



#### Communication

Bluetooth® related functions are available.



#### Navigation

Navigation screen is displayed (if equipped). A compass is shown for vehicles without navigation.



#### Settings

Overall setting menu (Such as display, sound, Bluetooth® and Language).

### COMMANDER SWITCH

#### ENTERTAINMENT

- press button to display the Entertainment screen.




#### COMMANDER KNOB

- tilt or turn to move the cursor to the desired icon.  
- press to select the icon.

#### RETURN

- returns to previous screen.

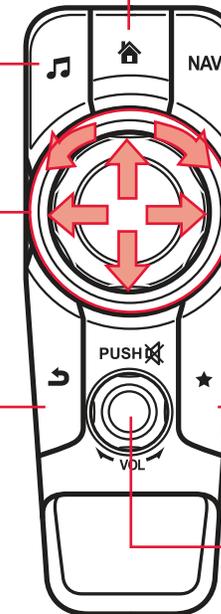

#### HOME

- press button to display the home screen.

#### NAVIGATION

- press button to display the Navigation screen (If equipped).



#### FAVORITES

- press button to display the Favorites screen.  
- long-press to store particular items in Favorites.

#### VOLUME DIAL

- press to switch the audio MUTE on and off.  
- turn to adjust the volume.

\* The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. Other trademarks and trade names are those of their respective owners. The phones on toyota.com have been tested for Bluetooth® wireless technology compatibility with Toyota vehicles. Performance will vary based on phone software version, coverage and your wireless carrier.

\*Depending on the grade and specification, the screen display may differ.

\*\*The audio source most recently used is displayed. An audio source which cannot be used at that time is skipped and the previous audio source is displayed.

\*\*\* If the SD card for the navigation system is not inserted, the compass indicating the direction in which the vehicle is moving is displayed. The compass may not indicate the correct bearing when the vehicle is stopped or traveling at a slow speed.

## PAIRING BLUETOOTH® PHONE FOR THE FIRST TIME

Yaris iA Display Audio and Display Audio with Navigation<sup>1</sup>

To use the hands-free<sup>3</sup> features of the Yaris iA Display Audio system, it is necessary to first pair a compatible Bluetooth<sup>®2</sup> mobile device to the vehicle. This operation cannot be performed while driving. You can pair up to 7 devices.

1. Activate the Bluetooth<sup>®2</sup> connection setting of your mobile device. [See Figures 1 & 2]

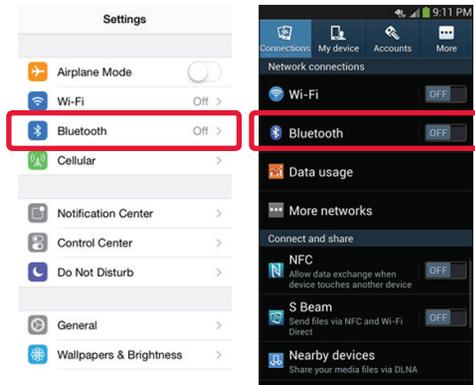


Figure 1: iOS

Figure 2: Android

2. Using the remote commander knob or touchscreen, select

"Settings"  from the home screen of the vehicle display (far right circle)

3. Within "Settings", you will see tabs on the top. Hit the >> arrow until the "Devices" tab is available. Select "Devices". [See Figure 3]



Figure 3

4. Within the "Devices" tab, select "Bluetooth". [See Figure 3]

5. Within the "Bluetooth" menu, select "Add New Device". [See Figure 4]



Figure 4

6. On your mobile device, find and select "My Toyota" or your vehicle within the Bluetooth<sup>®</sup> device list.

7. Verify the PIN. Select "Pair" on your device and select "Yes" on the head unit. [See Figure 5]



Figure 5

8. To enable text message notification on your mobile device, follow the appropriate directions below:

**iPhone<sup>®</sup>:** Select the  icon next to the paired vehicle on your phone, and switch the "Show Notifications" toggle to on. [See Figure 6]

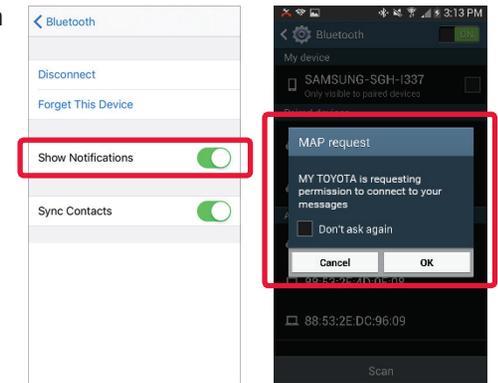


Figure 6: iOS

Figure 7: Android

**Android:** Your device might pop up two messages asking to allow the vehicle head unit to access your contacts and messages. You may choose to select "Yes" to both. [See Figure 7]

1. Availability & accuracy of the information provided by the navigation system is dependent upon many factors. Use common sense when relying on information provided. Services & programming subject to change. Services not available in every city or roadway. See Owner's Manual for details. Map updates may be available for download, visit Toyota.com/Owners, select "Yaris iA", then "Resources", then "Multimedia System" for details.

2. The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth<sup>®</sup> SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth<sup>®</sup> enabled phone must first be paired. Phone performance depends on software, coverage & carrier.

3. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.

4. iPhone<sup>®</sup> is not included. iPhone<sup>®</sup> is registered trademarks of Apple, Inc.

## SWITCHING AUDIO SOURCE

1. Press **HOME** button on the Commander switch.

2. Using touch or the Commander switch to select .

- The audio system displays the current audio source screen or displays the audio source selection screen.

3. Touch the music note icon and select the desired audio source.




## AUDIO SOUND SETTINGS

1. Press **HOME** button on the Commander switch.

2. Using touch or the Commander switch to select .

3. Select the **Sound** tab and select the sound setting you would like to change.

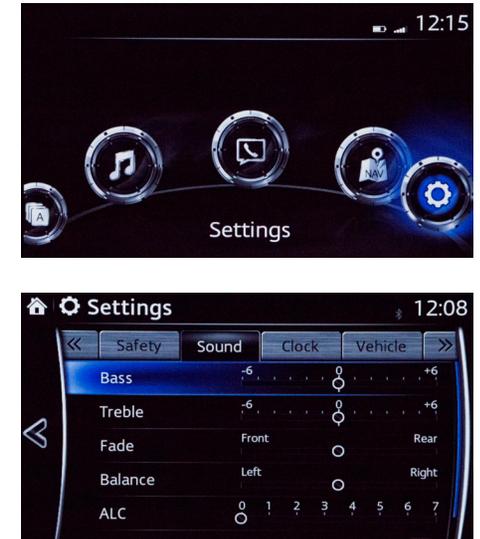

## PRESETTING A STATION

Radio mode has a preset function, which can store up to 50 stations from any of the AM or FM stations.

1. To save a radio preset, tune to your favorite radio channel.

2. Press the **"Favorites"** icon .

3. At the favorites screen select Add/Edit Radio Favorites

4. Touch add <current station>



## NAVIGATION: BEFORE USING THE SYSTEM

To use the navigation system (if equipped), the SD card containing the map information needs to be inserted in the SD card slot.

Please see the *Owner's Manual* for the location of SD card slot.

Be sure to obey traffic regulations and maintain awareness of road and traffic conditions at all times.


## NAVIGATION: DESTINATION INPUT BY ADDRESS



1. If it's hidden, show the navigation menu by selecting , then select .




2. Select "Find Address".

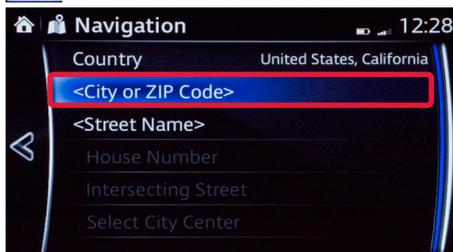


3. Select "City or Zip code".  
 • By default, the navigation system proposes the country and city where you are.



4. Enter the Street Name.

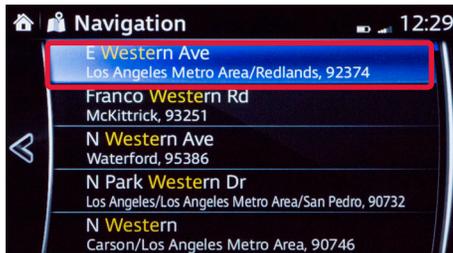

5. Select the street from the list.

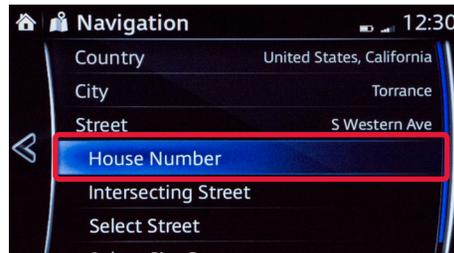

6. Enter house number then select the three horizontal line icon on bottom right .

## NAVIGATION: DESTINATION INPUT BY ADDRESS CONT.



7. The system shows the destination. Select "Navigate to".



8. Select "Start" to start the navigation.


## NAVIGATION: SETTING HOME DESTINATION

You can add any location to Favorites, the list of frequently used destinations. Your home address can be registered/changed by selecting "Home" within the Favorites menu.

1. Press the favorites button on your remote commander .




2. Scroll to the navigation tab on the top right and select Home.

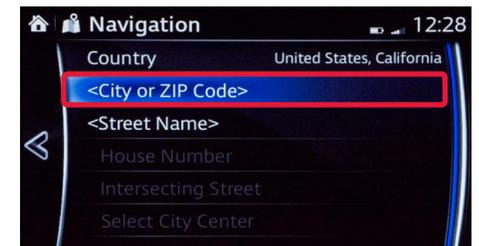

3. Complete the fields with your home address and press the bottom right icon .



4. On the navigation verification screen, select "Set as Home".

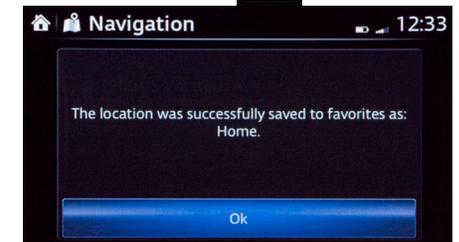


5. Press "Ok" to confirm.

**NOTE:** We suggest using a location near your home as your home destination, rather than your actual home address.

Be sure to obey traffic regulations and maintain awareness of road and traffic conditions at all times.

## NAVIGATION: DESTINATION INPUT BY VOICE RECOGNITION (IF EQUIPPED)

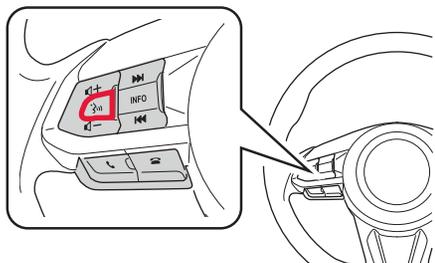

1. Press the button.
  - The voice command system is activated.
2. After "Say a command" is output from the speaker and the beep sound is heard, say your commands such as "New Destination", "Address".
3. Follow the voice prompt to continue destination input by voice recognition.

### INFORMATION

Wait for the confirmation beep before speaking a command.

- Voice commands may not be recognized if:
  - Spoken too quickly.
  - Spoken at a low or high volume.
  - The windows are open.
  - Passengers are talking while voice commands are spoken.
  - The air conditioning speed is set high.
  - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
  - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
  - There is excessive background noise, such as wind noise

## NAVIGATION: DESTINATION INPUT - POI BY NAME



1. If it's hidden, show the navigation menu by selecting , then select .



2. Select "Point of Interest".



3. Select "Filter by Name".



4. Using the keyboard, enter the name of the POI (point of interest) and then select the check mark .



5. Select Search and select the POI from the result list.



6. Select "Navigate to".




7. Select "Start" to start the navigation.

## NAVIGATION: DESTINATION INPUT – POI BY CATEGORY



1. If it's hidden, show the navigation menu by selecting , then select .

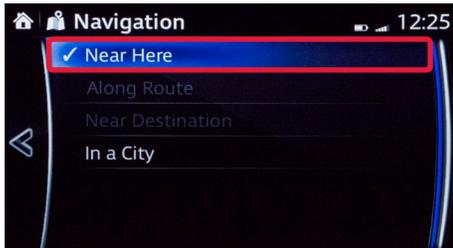

3. Select the area around which the Place should be searched for: "Near Here", "Along Route", "Near Destination", "In a City". Some may not be selectable. After selection, select the back arrow.




5. On certain categories, there will be sub-categories. you may select specific sub-categories or search all sub-categories. Select Search.



2. Select "Point of Interest", then "Search Area".



4. Select filter by category such as cafe or bar.

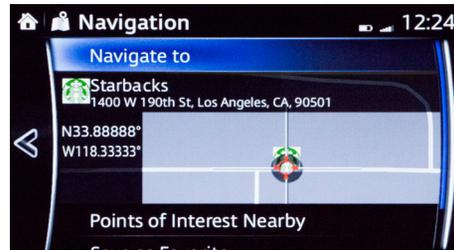

6. Select the POI from the result list. Once selected, select "Navigate to" and then "Start".

## NAVIGATION: ROUTE CALCULATION AND RECALCULATION

The navigation system calculates the route based on your preferences:

- Route planning methods:
  - **Fast:** Gives a quick route if you can travel at or near the speed limit on all roads.
  - **Short:** Gives a route that has the smallest total distance of all possible routes.
  - **Economical:** This method combines the merits of the Fast and Short routes: The navigation system makes a calculation for the Fast route, but it also includes other roads in the calculation in consideration of fuel economy.
  - **Easy:** Results in a route with fewer turns and no difficult maneuvers. With this option, you can make the navigation system take, for example, the highway/freeway instead of a series of smaller roads or streets.



1. Click the Route icon  when the system is navigating to a set destination
2. Scroll down and select Route Alternative
3. Select route preference choices
4. Select the back arrow to go back to the navigation screen

## **SIRIUSXM® SATELLITE RADIO**

---

SiriusXM® Satellite Radio will receive an introductory subscription with a limited term trial offer to over 130 commercial-free channels.



SiriusXM® Satellite Radio is a fee-based subscription service that can be activated over the phone. Activation is free and requires only a few minutes (see activation instructions below). For more information, visit [www.siriusxm.com](http://www.siriusxm.com).

## **SIRIUSXM® SATELLITE RADIO: OPERATING**

---

1. Press **HOME** button on the Commander switch.

2. Using touch or the Commander

switch to select .

3. Select **XM**.



## **SIRIUSXM® SATELLITE RADIO: FUNCTION AND OPTIONS**

---

1. Select **CHANNELS** to display receivable channels.

2. Select **CATEGORY** to display category list.



---

---



[www.toyota.com/owners](http://www.toyota.com/owners)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 6/18  
18-MKG-11945



0061619YARQSG