

|          |                                     |            |
|----------|-------------------------------------|------------|
| <b>1</b> | <b>QUICK GUIDE</b>                  | <b>11</b>  |
| <b>2</b> | <b>BASIC FUNCTION</b>               | <b>31</b>  |
| <b>3</b> | <b>AUDIO/VISUAL SYSTEM</b>          | <b>73</b>  |
| <b>4</b> | <b>VOICE COMMAND SYSTEM</b>         | <b>167</b> |
| <b>5</b> | <b>INFORMATION</b>                  | <b>181</b> |
| <b>6</b> | <b>PERIPHERAL MONITORING SYSTEM</b> | <b>189</b> |
| <b>7</b> | <b>PHONE</b>                        | <b>259</b> |
| <b>8</b> | <b>NAVIGATION SYSTEM</b>            | <b>301</b> |
| <b>9</b> | <b>Entune App Suite</b>             | <b>367</b> |
|          | <b>INDEX</b>                        | <b>381</b> |

About the following equipment, see the "Owner's Manual".

- Fuel consumption
- Energy monitor (HIGHLANDER HYBRID)
- Vehicle customization settings

# Introduction

## NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL

This manual explains the operation of this system. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of this system differ depending on whether the functions and/or a contract existed and the map data available at the time of producing this document.

Please be aware that the content of this manual may be different from this system in some cases, such as when the system's software is updated.

## NAVIGATION SYSTEM (ENTUNE PREMIUM AUDIO)

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses AISIN AW maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to page 363.

**TOYOTA MOTOR CORPORATION**

## IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.

### **WARNING**

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

### **NOTICE**


- This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

## SYMBOLS USED IN ILLUSTRATIONS



### **Safety symbol**


The symbol of a circle with a slash through it means “Do not”, “Do not do this” or “Do not let this happen”.

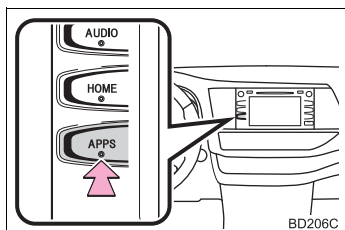

### **Arrows indicating operations**

-  Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

# HOW TO READ THIS MANUAL

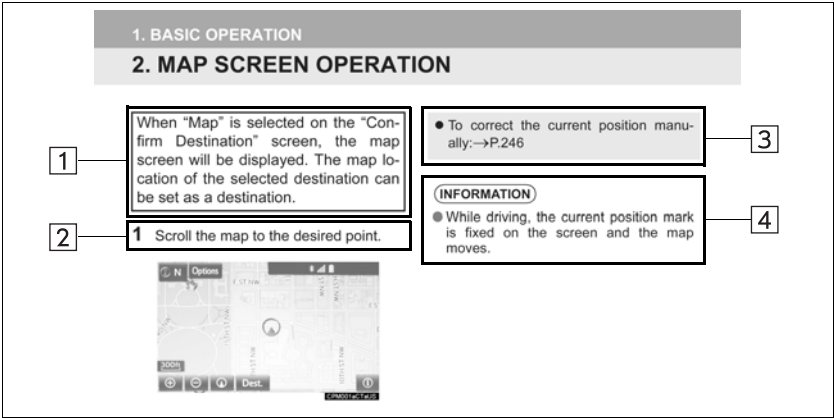

| No. | Name                 | Description                                                |
|-----|----------------------|------------------------------------------------------------|
| 1   | Operational Outlines | An outline of the operation is explained.                  |
| 2   | Main Operations      | The steps of an operation are explained.                   |
| 3   | Related Operations   | A main operation's supplementary operations are described. |
| 4   | Information          | Useful information for the user is described.              |

## ■ INFORMATION FOR HYBRID VEHICLES IS WRITTEN IN BRACKETS NEXT TO THE INFORMATION FOR GASOLINE VEHICLES

Different writing styles for gasoline and hybrid vehicles


### ► Example

When the engine<sup>\*1</sup> <power><sup>\*2</sup> switch is turned to ACCESSORY or IGNITION ON<sup>\*1</sup> <ON><sup>\*2</sup> mode, the initial screen will be displayed and the system will begin operating.

\*1: Vehicles with gasoline engine

\*2: Vehicles with hybrid system

## SAFETY INSTRUCTION (ENTUNE AUDIO PLUS)

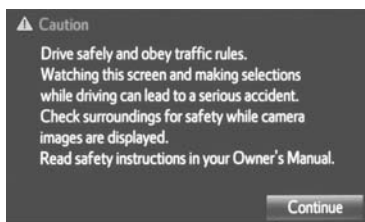

To use this system in the safest possible manner, follow all the safety tips shown below.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.


For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed.



### WARNING

- For safety, the driver should not operate the system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.

## SAFETY INSTRUCTION (ENTUNE PREMIUM AUDIO)

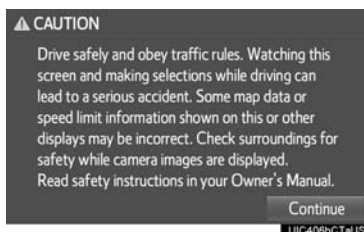

To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.



## WARNING

- For safety, the driver should not operate the system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.



# TABLE OF CONTENTS

## 1 QUICK GUIDE

|                                           |           |
|-------------------------------------------|-----------|
| <b>1. BASIC FUNCTION.....</b>             | <b>12</b> |
| BUTTONS OVERVIEW .....                    | 12        |
| “Apps” SCREEN .....                       | 14        |
| HOME SCREEN .....                         | 16        |
| <b>2. QUICK REFERENCE.....</b>            | <b>20</b> |
| “Setup” SCREEN .....                      | 20        |
| <b>3. NAVIGATION OPERATION .....</b>      | <b>22</b> |
| REGISTERING HOME .....                    | 22        |
| REGISTERING PRESET<br>DESTINATIONS.....   | 24        |
| OPERATION FLOW: GUIDING<br>THE ROUTE..... | 26        |
| SETTING HOME AS THE<br>DESTINATION .....  | 27        |
| <b>4. FUNCTION INDEX.....</b>             | <b>28</b> |
| FUNCTION INDEX .....                      | 28        |

## 2 BASIC FUNCTION

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>1. BASIC INFORMATION BEFORE<br/>OPERATION .....</b>         | <b>32</b> |
| INITIAL SCREEN.....                                            | 32        |
| CAPACITIVE TOUCH SWITCHES.....                                 | 34        |
| TOUCH SCREEN GESTURES .....                                    | 35        |
| TOUCH SCREEN OPERATION .....                                   | 36        |
| HOME SCREEN OPERATION .....                                    | 37        |
| ENTERING LETTERS AND<br>NUMBERS/LIST SCREEN<br>OPERATION ..... | 38        |
| SCREEN ADJUSTMENT .....                                        | 41        |
| LINKING MULTI-INFORMATION<br>DISPLAY AND THE SYSTEM.....       | 43        |
| <b>2. Bluetooth® SETTINGS.....</b>                             | <b>44</b> |
| REGISTERING/CONNECTING<br>Bluetooth® DEVICE.....               | 44        |
| SETTING Bluetooth® DETAILS .....                               | 51        |

|                                |           |
|--------------------------------|-----------|
| <b>3. OTHER SETTINGS .....</b> | <b>59</b> |
| GENERAL SETTINGS .....         | 59        |
| VOICE SETTINGS .....           | 66        |
| VEHICLE SETTINGS .....         | 67        |
| DRIVER SETTINGS.....           | 68        |
| MAINTENANCE .....              | 69        |

## 3 AUDIO/VISUAL SYSTEM

|                                                               |            |
|---------------------------------------------------------------|------------|
| <b>1. BASIC OPERATION .....</b>                               | <b>76</b>  |
| QUICK REFERENCE.....                                          | 76         |
| SOME BASICS.....                                              | 77         |
| <b>2. RADIO OPERATION.....</b>                                | <b>83</b>  |
| AM/FM RADIO .....                                             | 83         |
| XM Satellite Radio.....                                       | 93         |
| INTERNET RADIO .....                                          | 99         |
| <b>3. MEDIA OPERATION.....</b>                                | <b>100</b> |
| CD .....                                                      | 100        |
| USB MEMORY .....                                              | 103        |
| iPod .....                                                    | 107        |
| Bluetooth® AUDIO.....                                         | 111        |
| AUX.....                                                      | 116        |
| <b>4. AUDIO/VISUAL REMOTE<br/>CONTROLS .....</b>              | <b>118</b> |
| STEERING SWITCHES.....                                        | 118        |
| <b>5. SETUP.....</b>                                          | <b>120</b> |
| AUDIO SETTINGS.....                                           | 120        |
| <b>6. TIPS FOR OPERATING THE<br/>AUDIO/VISUAL SYSTEM.....</b> | <b>122</b> |
| OPERATING INFORMATION .....                                   | 122        |

|                                   |            |
|-----------------------------------|------------|
| <b>7. REAR SEAT ENTERTAINMENT</b> |            |
| <b>SYSTEM OPERATION .....</b>     | <b>132</b> |
| REAR SEAT ENTERTAINMENT           |            |
| SYSTEM FEATURES .....             | 132        |
| PLAYING A Blu-ray Disc™ (BD)      |            |
| AND DVD DISCS .....               | 145        |
| PLAYING AN AUDIO CD AND           |            |
| MP3/WMA DISCS .....               | 158        |
| PLAYING AN SD CARD .....          | 161        |
| USING THE VIDEO MODE .....        | 166        |

4

VOICE COMMAND SYSTEM

|                                |            |
|--------------------------------|------------|
| <b>1. VOICE COMMAND SYSTEM</b> |            |
| <b>OPERATION .....</b>         | <b>168</b> |
| VOICE COMMAND SYSTEM.....      | 168        |
| CASUAL                         |            |
| SPEECH RECOGNIZATION .....     | 174        |
| COMMAND LIST .....             | 175        |
| <b>2. MOBILE ASSISTANT</b>     |            |
| <b>OPERATION .....</b>         | <b>178</b> |
| MOBILE ASSISTANT .....         | 178        |

5

INFORMATION

|                                   |            |
|-----------------------------------|------------|
| <b>1. USEFUL INFORMATION.....</b> | <b>182</b> |
| RECEIVING WEATHER                 |            |
| INFORMATION .....                 | 182        |
| RECEIVING TRAFFIC MAP             |            |
| INFORMATION .....                 | 184        |
| DATA SERVICES SETTINGS.....       | 185        |
| Driver Easy Speak.....            | 186        |

6

PERIPHERAL MONITORING SYSTEM

|                                 |            |
|---------------------------------|------------|
| <b>1. REAR VIEW MONITOR</b>     |            |
| <b>SYSTEM .....</b>             | <b>190</b> |
| REAR VIEW MONITOR SYSTEM .....  | 190        |
| REAR VIEW MONITOR SYSTEM        |            |
| PRECAUTIONS .....               | 192        |
| THINGS YOU SHOULD KNOW .....    | 197        |
| <b>2. TOYOTA PARKING ASSIST</b> |            |
| <b>MONITOR .....</b>            | <b>198</b> |
| TOYOTA PARKING ASSIST           |            |
| MONITOR .....                   | 198        |
| ESTIMATED COURSE LINE           |            |
| DISPLAY MODE .....              | 203        |
| PARKING ASSIST GUIDE LINE       |            |
| DISPLAY MODE .....              | 205        |
| TOYOTA PARKING ASSIST           |            |
| MONITOR PRECAUTIONS.....        | 207        |
| THINGS YOU SHOULD KNOW .....    | 212        |
| <b>3. PANORAMIC VIEW</b>        |            |
| <b>MONITOR .....</b>            | <b>214</b> |
| PANORAMIC VIEW MONITOR .....    | 214        |
| CHECKING AROUND THE             |            |
| VEHICLE .....                   | 221        |
| CHECKING THE FRONT AND          |            |
| AROUND THE VEHICLE .....        | 222        |
| CHECKING THE SIDES OF THE       |            |
| VEHICLE .....                   | 225        |
| CHECKING THE REAR AND           |            |
| AROUND THE VEHICLE .....        | 228        |
| MAGNIFYING FUNCTION.....        | 235        |
| PANORAMIC VIEW MONITOR          |            |
| PRECAUTIONS .....               | 236        |
| THINGS YOU SHOULD KNOW .....    | 247        |
| <b>4. INTUITIVE PARKING</b>     |            |
| <b>ASSIST .....</b>             | <b>250</b> |
| INTUITIVE PARKING ASSIST.....   | 250        |
| INTUITIVE PARKING ASSIST        |            |
| SETTING .....                   | 256        |

TABLE OF CONTENTS

7 PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)..... 260

QUICK REFERENCE ..... 260

SOME BASICS ..... 261

CALLING ON THE Bluetooth® PHONE..... 265

RECEIVING ON THE Bluetooth® PHONE..... 271

TALKING ON THE Bluetooth® PHONE..... 272

Bluetooth® PHONE MESSAGE FUNCTION..... 275

2. SETUP ..... 280

PHONE/MESSAGE SETTINGS ..... 280

3. WHAT TO DO IF... ..... 292

TROUBLESHOOTING..... 292

8 NAVIGATION SYSTEM

1. BASIC OPERATION..... 302

QUICK REFERENCE ..... 302

MAP SCREEN OPERATION ..... 305

MAP SCREEN INFORMATION..... 310

TRAFFIC INFORMATION..... 314

2. DESTINATION SEARCH..... 317

DESTINATION SEARCH SCREEN ..... 317

SEARCH OPERATION..... 319

STARTING ROUTE GUIDANCE ..... 329

3. ROUTE GUIDANCE..... 333

ROUTE GUIDANCE SCREEN ..... 333

TYPICAL VOICE GUIDANCE PROMPTS..... 338

EDITING ROUTE..... 339

4. MEMORY POINTS ..... 344

MEMORY POINTS SETTINGS..... 344

5. SETUP..... 353

DETAILED NAVIGATION SETTINGS..... 353

TRAFFIC SETTINGS ..... 357

6. TIPS FOR THE NAVIGATION SYSTEM ..... 363

GPS (GLOBAL POSITIONING SYSTEM)..... 363

MAP DATABASE VERSION AND COVERED AREA ..... 365

9 Entune App Suite

1. Entune App Suite OVERVIEW..... 368

Entune App Suite SERVICE..... 368

2. Entune App Suite OPERATION..... 373

Entune App Suite ..... 373

3. SETUP..... 380

Entune App Suite SETTINGS ..... 380

INDEX

ALPHABETICAL INDEX..... 382

## QUICK GUIDE

### 1 BASIC FUNCTION

1. BUTTONS OVERVIEW ..... 12
2. “Apps” SCREEN ..... 14
3. HOME SCREEN ..... 16
  - STATUS DISPLAY ..... 18

### 2 QUICK REFERENCE

1. “Setup” SCREEN ..... 20


### 3 NAVIGATION OPERATION

1. REGISTERING HOME ..... 22
2. REGISTERING PRESET DESTINATIONS ..... 24
3. OPERATION FLOW: GUIDING THE ROUTE..... 26
4. SETTING HOME AS THE DESTINATION ..... 27

### 4 FUNCTION INDEX

1. FUNCTION INDEX ..... 28

1. BUTTONS OVERVIEW

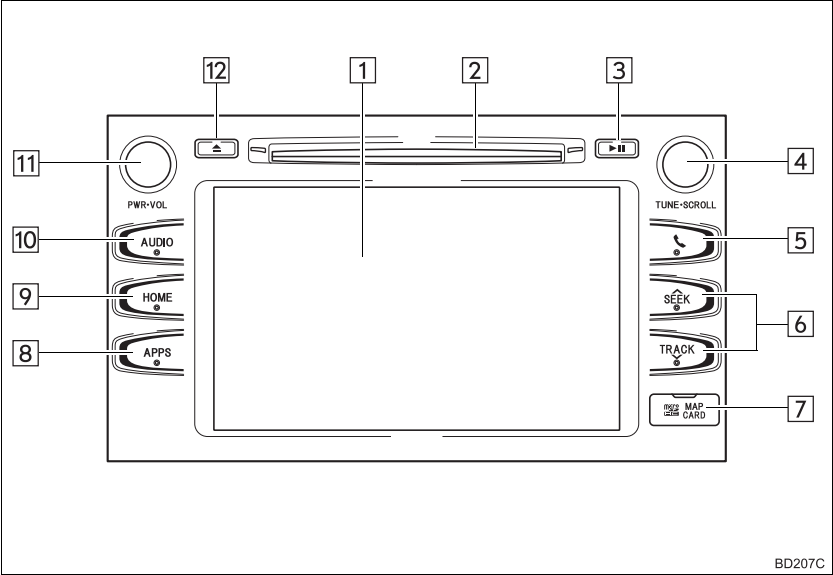


| No.        | Function                                                                                              | Page                              |
|------------|-------------------------------------------------------------------------------------------------------|-----------------------------------|
| <b>1</b>   | By touching the screen with your finger, you can control the selected functions.                      | 35, 36                            |
| <b>2</b>   | Insert a disc into this slot. The CD player turns on immediately.                                     | 79                                |
| <b>3</b>   | Press to play/pause.                                                                                  | 83, 100,<br>103, 107,<br>111, 116 |
| <b>4</b>   | Turn to select a radio station or skip to the next or previous track/file.                            | 83, 93, 100,<br>103, 107,<br>111  |
| <b>5</b>   | Press to access the Bluetooth® hands-free system.                                                     | 260                               |
| <b>6</b>   | Press the “^” or “v” button to seek up or down for a radio station or to access a desired track/file. | 83, 93, 100,<br>103, 107,<br>111  |
| <b>7</b> * | MAP card slot<br>Do not eject the microSD card, as doing so may deactivate the navigation system.     | 366                               |
| <b>8</b>   | Press to display the “Apps” screen.                                                                   | 14                                |
| <b>9</b>   | Press to display the home screen.                                                                     | 16, 37                            |
| <b>10</b>  | Press to access the audio/visual system. The audio/visual system turns on in the last mode used.      | 76, 78                            |
| <b>11</b>  | Press to turn the audio/visual system on and off, and turn it to adjust the volume.                   | 78                                |
| <b>12</b>  | Press to eject a disc.                                                                                | 79                                |

\*: Entune Premium Audio only


2. “Apps” SCREEN

Press the “APPS” button to display the “Apps” screen.

►Entune Audio Plus

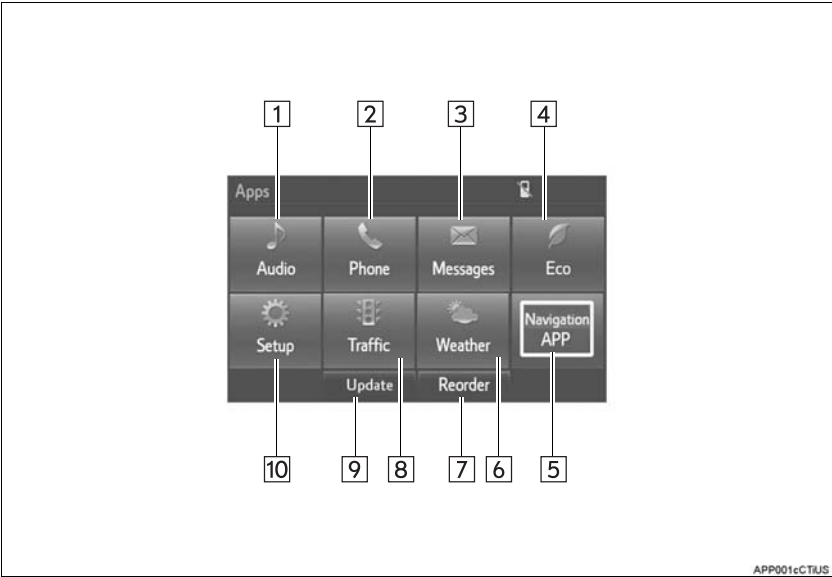

►Entune Premium Audio

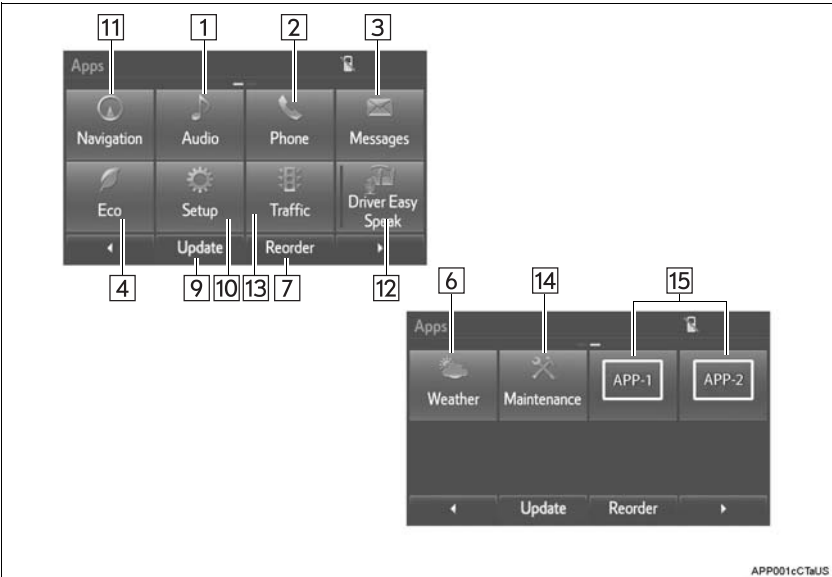

| No.         | Function                                                                                                                                                                                                                                                        | Page             |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>1</b>    | Select to display the audio control screen.                                                                                                                                                                                                                     | 76               |
| <b>2</b>    | Select to display the hands-free operation screen.                                                                                                                                                                                                              | 260              |
| <b>3</b>    | Select to display the "Message Inbox" screen.                                                                                                                                                                                                                   | 275              |
| <b>4</b>    | Select to display the fuel consumption screen.                                                                                                                                                                                                                  | "Owner's Manual" |
| <b>5</b> *  | If a turn-by-turn navigation application has been downloaded to a connected phone, the application will be displayed and can be used. For details, refer to <a href="http://www.toyota.com/entune/">http://www.toyota.com/entune/</a> .                         | —                |
| <b>6</b> *  | Select to display weather information.                                                                                                                                                                                                                          | 182              |
| <b>7</b>    | Select to reorder the applications.<br>• Select the desired application then  or  to reorder. | 375              |
| <b>8</b> *  | Select to display the traffic map information.                                                                                                                                                                                                                  | 184              |
| <b>9</b> *  | Select to update the applications.                                                                                                                                                                                                                              | 374              |
| <b>10</b>   | Select to display the "Setup" screen.                                                                                                                                                                                                                           | 20               |
| <b>11</b>   | Select to display the map screen.                                                                                                                                                                                                                               | 302              |
| <b>12</b>   | Select to turn the Driver Easy Speak on/off.                                                                                                                                                                                                                    | 186              |
| <b>13</b> * | Select to display traffic information.                                                                                                                                                                                                                          | 314              |
| <b>14</b>   | Select to display the "Maintenance" screen.                                                                                                                                                                                                                     | 69               |
| <b>15</b> * | Select to display the application screen.                                                                                                                                                                                                                       | 368              |

\*: Available in the 48 states, D.C. and Alaska

#### INFORMATION

- When there are two pages, select  or  to change the page.

### 3. HOME SCREEN


Press the **"HOME"** button to display the home screen.

The home screen can display multiple information screens, such as the audio system screen, hands-free screen and navigation screen, simultaneously. When hands-free mode is selected, it is possible to make a call on the home screen if the desired phone number is registered to one of the 4 displayed buttons. In order to register the contact, select and hold the desired button and register the desired contact by obey displayed messages on the screen. (→P.270)

When a screen is selected, the selected screen is switched to a full-screen display. The home screen can be set to either a three-way split screen or a two-way split screen.

For details about setting the home screen: →P.37

#### ► Three-way split screen

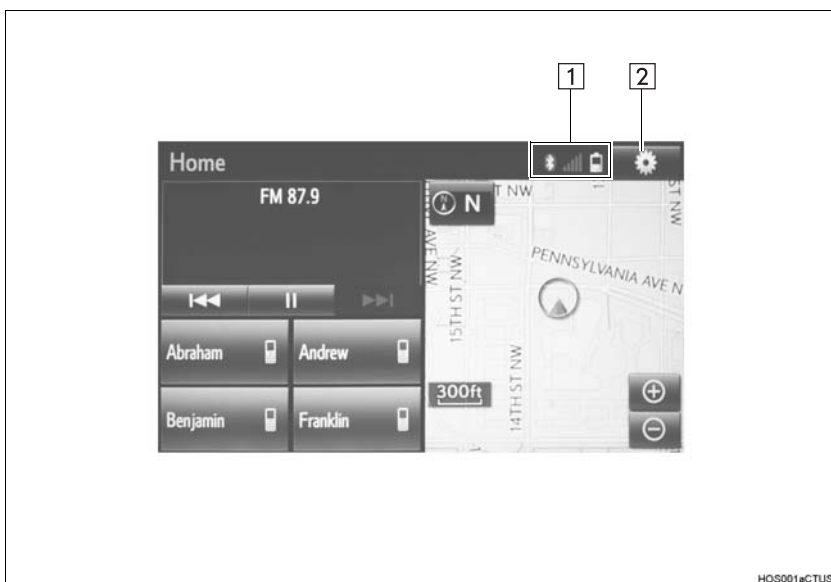

## ► Two-way split screen



HOS001bCTUS

| No.      | Function                                            | Page |
|----------|-----------------------------------------------------|------|
| <b>1</b> | Displays the condition of the Bluetooth® connection | 18   |
| <b>2</b> | Select to display the “Setup” screen.               | 20   |

- Entune Audio Plus only: Turn-by-turn navigation application screen can be displayed.

STATUS DISPLAY

The condition of the Bluetooth® connection, as well as the level of reception and the amount of cellular phone battery charge left, are displayed on the status display.



| No. | Indicators                                 | Conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | The condition of the Bluetooth® connection | <div> No connection ↔  Poor ↔  Good</div> <div><div>(Gray)</div><div>(Blue)</div></div> <ul style="list-style-type: none"><li>• An antenna for the Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places:<br/>The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box).<br/>The cellular phone is touching or is covered with metal materials.</li><li>• Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.</li></ul> |
| 2   | The level of reception                     | <div> Poor ↔ Excellent </div> <ul style="list-style-type: none"><li>• The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have.<br/>When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed.</li><li>• "Rm" is displayed when receiving in a roaming area. While roaming, display "Rm" top-left on the icon.</li><li>• The receiving area may not be displayed depending on the type of phone you have.</li></ul>                                                                                                                                                                                      |


| No. | Indicators                        | Conditions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3   | The amount of battery charge left | <div data-bbox="366 224 394 267"></div> <div data-bbox="660 224 689 267"></div> <div data-bbox="348 272 692 300">Empty ←————→ Full</div> <ul style="list-style-type: none"> <li>• The amount displayed does not always correspond with the amount displayed on the Bluetooth® device. The amount of battery charge left may not be displayed depending on the type of the Bluetooth® device connected. This system does not have a charging function.</li> </ul> |

## 2. QUICK REFERENCE

### 1. “Setup” SCREEN


The items shown on the “Setup” screen can be set. Press the “**APPS**” button, then select “**Setup**” to display the “Setup” screen.

#### ► Entune Audio Plus

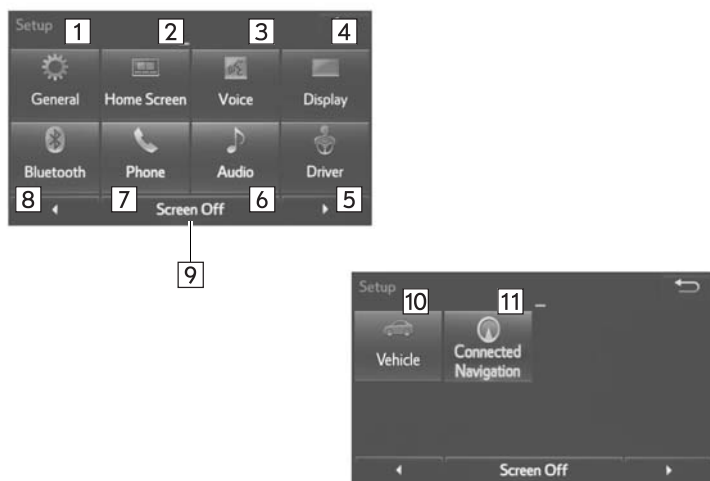

CMS030ICTJUS

#### ► Entune Premium Audio

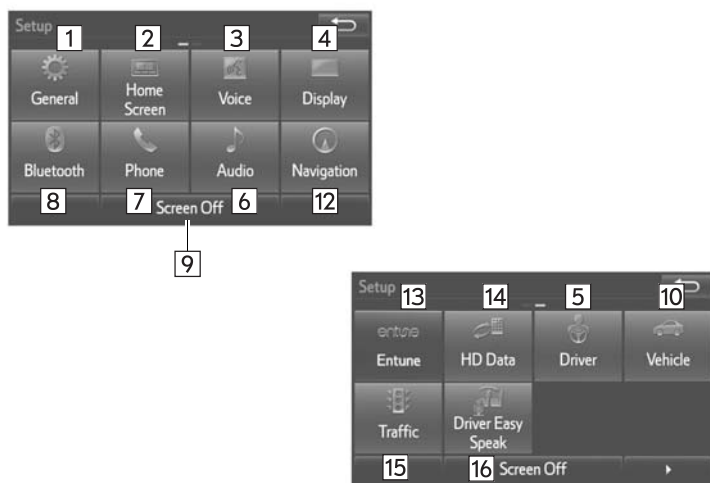

CMS030ICTJUS


| No.         | Function                                                                                                                                                           | Page     |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| <b>1</b>    | Select to change the selected language, operation sound, automatic screen change settings, etc.                                                                    | 59       |
| <b>2</b>    | Select to customize the home screen.                                                                                                                               | 37       |
| <b>3</b>    | Select to set the voice settings.                                                                                                                                  | 66       |
| <b>4</b>    | Select to adjust the contrast and brightness of the screens, etc.                                                                                                  | 41       |
| <b>5</b>    | Select to link the driver's cellular phone settings. (audio presets, language, etc.)                                                                               | 68       |
| <b>6</b>    | Select to set audio settings.                                                                                                                                      | 120      |
| <b>7</b>    | Select to set the phone sound, contacts, message settings, etc.                                                                                                    | 280      |
| <b>8</b>    | Select to set Bluetooth® phones and Bluetooth® audio devices.                                                                                                      | 51       |
| <b>9</b>    | Select to turn the screen off. To turn it on, press any button.                                                                                                    | —        |
| <b>10</b>   | Select to set vehicle information.                                                                                                                                 | 202, 256 |
| <b>11</b> * | Select to change the phone data plan pop-up message timing. ("Connected Navigation" is downloadable application via smartphones using a cellular data connection.) | —        |
| <b>12</b>   | Select to set memory points (home, preset destinations, address book entries, areas to avoid), navigation details or to delete previous destinations.              | 344, 353 |
| <b>13</b> * | Select to set Entune App Suite settings.                                                                                                                           | 380      |
| <b>14</b> * | Select to set data services settings.                                                                                                                              | 185      |
| <b>15</b> * | Select to set traffic information.                                                                                                                                 | 357      |
| <b>16</b>   | Select to set Driver Easy Speak settings.                                                                                                                          | 186      |

\*: Available in the 48 states, D.C. and Alaska

3. NAVIGATION OPERATION

1. REGISTERING HOME\*

1 Press the “APPS” button.

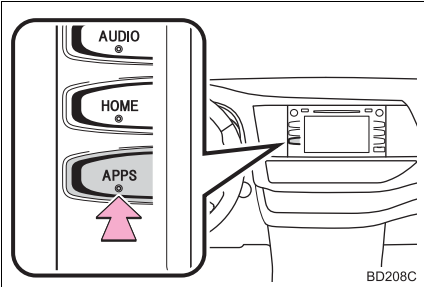

2 Select “Navigation”.



3 Select “Dest.”.




4 Select “Go Home”.



5 Select “Yes”.



6 There are different kinds of methods to search for your home. (→P.317)

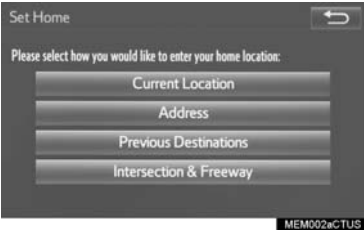

\*: Entune Premium Audio only

## 7 Select “Enter”.




## 8 Select “OK”.

Registration of home is complete.


- ▶ Registering home in a different way  
→P.345
- ▶ Editing the name, location, phone number and icon  
→P.345
- ▶ Setting home as the destination  
→P.320

## 2. REGISTERING PRESET DESTINATIONS\*

1 Press the “APPS” button.

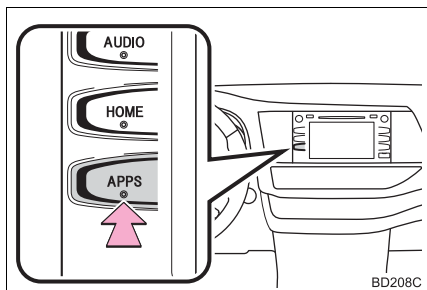


2 Select “Navigation”.

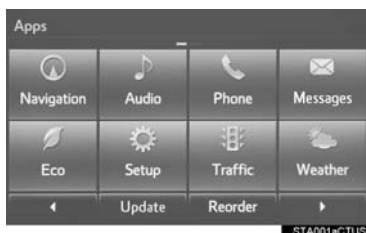

3 Select “Dest.”.




4 Select one of the preset destination buttons.

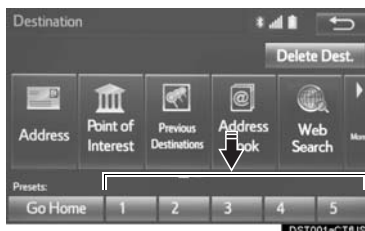

5 Select “Yes”.

6 There are different kinds of methods to search for a destination. (→P.317)

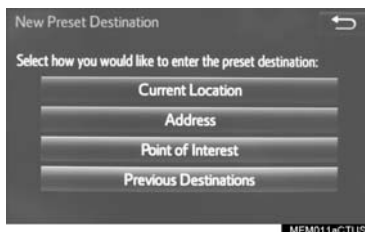

\*: Entune Premium Audio only

**7 Select “Enter”.**

**8 Select a position for this preset destination.**



**9 Select “OK”.**


Registration of preset destinations is complete.

- ▶ Registering preset destinations in a different way  
→P.346
- ▶ Editing the name, location, phone number and icon  
→P.347
- ▶ Setting preset destinations as the destination  
→P.320

3. OPERATION FLOW: GUIDING THE ROUTE\*

1

Press the “APPS” button.

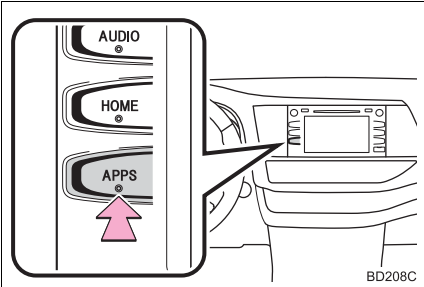

BD208C

2

Select “Navigation”.



STA001eCTUS

3

Select “Dest.”.



CPM001aCTeUS

4

There are different kinds of methods to search for a destination.  
(→P.317)



DST001aCTeUS

5

Select “Go”.



IRR308eCTUS

6

Select “OK”.


Selecting routes other than the one recommended. (→P.329)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

\*: Entune Premium Audio only

4. SETTING HOME AS THE DESTINATION\*

1 Press the “APPS” button.

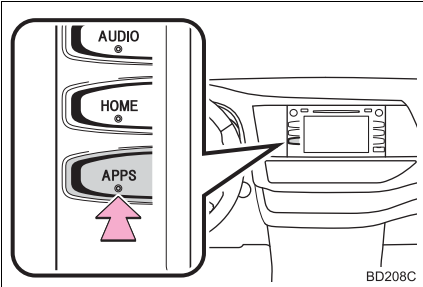

2 Select “Navigation”.



3 Select “Dest.”.



4 Select “Go Home”.



5 Select “OK”.

Selecting routes other than the one recommended. (→P.329)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

\*: Entune Premium Audio only

1. FUNCTION INDEX

► Map\*

| Displaying maps                                                 | Page |
|-----------------------------------------------------------------|------|
| Viewing the map screen                                          | 302  |
| Displaying the current position                                 | 305  |
| Viewing the current position vicinity map                       | 309  |
| Changing the scale                                              | 305  |
| Changing the map orientation                                    | 306  |
| Displaying map information                                      | 310  |
| Displaying the estimated travel/arrival time to the destination | 333  |
| Selecting the map mode                                          | 307  |
| Displaying traffic information                                  | 314  |

| Searching for destinations    | Page |
|-------------------------------|------|
| Searching for the destination | 319  |
| Changing the search area      | 320  |

\*: Entune Premium Audio only

► Route guidance\*

| Before starting or during route guidance | Page |
|------------------------------------------|------|
| Starting route guide                     | 329  |
| Editing the route                        | 339  |
| Viewing the entire route map             | 334  |
| Pausing guidance                         | 332  |
| Adjusting route guidance volume          | 66   |
| Deleting the destination                 | 340  |

| Address book                     | Page |
|----------------------------------|------|
| Registering address book entries | 348  |
| Marking icons on the map         | 349  |

\*: Entune Premium Audio only

## ► Useful functions

| Information                              | Page     |
|------------------------------------------|----------|
| Displaying vehicle maintenance*          | 69       |
| Hands-free system (for cellular phone)   | Page     |
| Registering/connecting Bluetooth® phone  | 44       |
| Making a call on a Bluetooth® phone      | 265      |
| Receiving a call on the Bluetooth® phone | 271      |
| Voice command system                     | Page     |
| Operating the system with your voice     | 168      |
| Peripheral monitoring system             | Page     |
| Viewing behind the rear of the vehicle   | 190, 198 |
| Viewing around the vehicle               | 214      |

\*: Entune Premium Audio only



## BASIC FUNCTION

### 1 BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN ..... 32
2. CAPACITIVE TOUCH SWITCHES ..... 34
3. TOUCH SCREEN GESTURES ..... 35
4. TOUCH SCREEN OPERATION .... 36
5. HOME SCREEN OPERATION ..... 37
6. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION ..... 38
  - ENTERING LETTERS AND NUMBERS ..... 38
  - LIST SCREEN ..... 38
7. SCREEN ADJUSTMENT ..... 41
8. LINKING MULTI-INFORMATION DISPLAY AND THE SYSTEM..... 43

### 2 Bluetooth® SETTINGS

1. REGISTERING/CONNECTING Bluetooth® DEVICE ..... 44
  - REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME..... 44
  - REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME ..... 45
  - PROFILES ..... 46
  - CERTIFICATION ..... 48

2. SETTING Bluetooth® DETAILS ..... 51
  - "Bluetooth\* Setup" SCREEN..... 51
  - REGISTERING A Bluetooth® DEVICE ..... 52
  - DELETING A Bluetooth® DEVICE ..... 53
  - CONNECTING A Bluetooth® DEVICE ..... 54
  - EDITING THE Bluetooth® DEVICE INFORMATION ..... 56
  - "System Settings" SCREEN..... 57

### 3 OTHER SETTINGS

1. GENERAL SETTINGS ..... 59
  - GENERAL SETTINGS SCREEN ..... 59
2. VOICE SETTINGS ..... 66
  - VOICE SETTINGS SCREEN ..... 66
3. VEHICLE SETTINGS ..... 67
4. DRIVER SETTINGS ..... 68
  - MANUALLY SELECT LINKED SETTINGS ..... 68
5. MAINTENANCE ..... 69

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## 1. INITIAL SCREEN

### ► Vehicles without a smart key system

When the engine switch is turned to the “ACC” or “ON” position, the initial screen will be displayed and the system will begin operating.

### ► Vehicles with a smart key system

When the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the initial screen will be displayed and the system will begin operating.



- Images shown on the initial screen can be changed to suit individual preferences. (→P.62.)
- After a few seconds, the “Caution” screen will be displayed.
- After about 5 seconds, the “Caution” screen automatically switches to the next screen.




### WARNING

- When the vehicle is stopped with the engine running <the hybrid system operating>, always apply the parking brake for safety.

## MAINTENANCE INFORMATION\*

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the “Maintenance Reminder” screen will be displayed when the system is turned on.

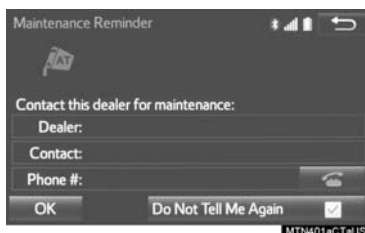


- To prevent the screen from being displayed again, select “**Do Not Tell Me Again**”.
- To register maintenance information: →P.69
- If  is selected, the registered phone number can be called.

\*: Entune Premium Audio only

## RESTARTING THE SYSTEM


When system response is extremely slow, the system can be restarted.

- 1 Press and hold the “**PWR·VOL**” knob for 3 seconds or more.

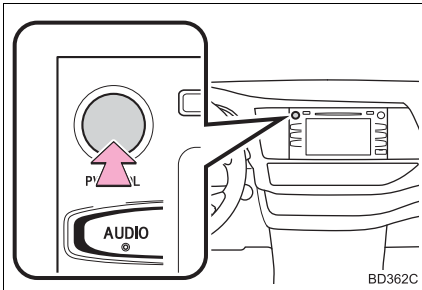

# 2. CAPACITIVE TOUCH SWITCHES

The control panel uses capacitive touch sensors.

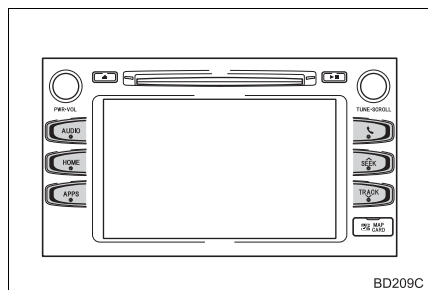

### INFORMATION

- Please do not reach your hand to the part of button when the system turn on. Because the button may become unresponsive for a while. But it will be back to normal for a given time even if the system turned on under the condition.

- Capacitive touch switch sensor sensitivity can be adjusted. (→P.59)




## HANDLING OF THE CONTROL PANEL

In the following cases, incorrect operation or non-response may occur.

- If the surface of the touch switch is dirty or has liquid attached to it, incorrect operation or non-response may occur.
- If the surface of the touch switch receives electromagnetic waves, incorrect operation or non-response may occur.
- If wearing gloves during operation, non-response may occur.
- If fingernails are used to operate the system, non-response may occur.
- If a touch pen is used to operate the system, non-response may occur.
- If the palm of your hand touches the surface of the touch switch during operation, incorrect operation may occur.
- If the palm of your hand touches the surface of the touch switch, incorrect operation may occur.
- If operations are performed quickly, non-response may occur.

3. TOUCH SCREEN GESTURES

Operations are performed by touching the touch screen directly with your finger.
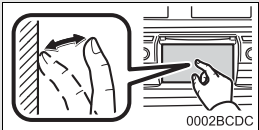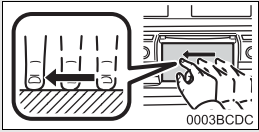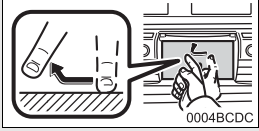
| Operation method                                                                 | Outline                                                                                          | Main use                                                                                                              |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
|  | <b>Touch</b><br>Quickly touch and release once.                                                  | Changing and selecting various settings                                                                               |
|  | <b>Drag*1</b><br>Touch the screen with your finger, and move the screen to the desired position. | <ul style="list-style-type: none"><li>• Scrolling the lists</li><li>• Scrolling the map screen*2</li></ul>            |
|  | <b>Flick*1</b><br>Quickly move the screen by flicking with your finger.                          | <ul style="list-style-type: none"><li>• Scrolling the main screen page</li><li>• Scrolling the map screen*2</li></ul> |

\*1: The above operations may not be performed on all screens.

\*2: Entune Premium Audio only

INFORMATION

- Flick operations may not be performed smoothly in high altitudes.

# 4. TOUCH SCREEN OPERATION

This system is operated mainly by the buttons on the screen. (Referred to as screen buttons in this manual.)

- When a screen button is touched, a beep sounds. (To set the beep sound:→P.59)



### NOTICE

- To prevent damaging the screen, lightly touch the screen buttons with your finger.
- Do not use objects other than your finger to touch the screen.
- Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the screen, as they may damage the touch screen.

### INFORMATION

- If the system does not respond to touching a screen button, move your finger away from the screen and then touch it again.
- Dimmed screen buttons cannot be operated.
- The displayed image may become darker and moving images may be slightly distorted when the screen is cold.
- In extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the screen buttons may be harder than usual to depress.
- When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the "Display Settings" screen or take off your sunglasses.
- When  is displayed on the screen, select  to return to the previous screen.

## 5. HOME SCREEN OPERATION

The home screen can display multiple information screens, such as the audio system screen and hands-free screen, simultaneously.

- 1 Press the **"HOME"** button.
- 2 "Home" screen is displayed.



- When a screen is selected, the selected screen will change to a full-screen display.

### CUSTOMIZING THE HOME SCREEN

The display items/area on the home screen can be changed.

- 1 Select .



- 2 Select **"Home Screen"**.
- 3 Select **"Two Panel"** or **"Three Panel"**.
- 4 Select the desired area.
- 5 Select the desired item.
- 6 Select **"OK"**.


#### INFORMATION

- When the selected item is already being displayed and another area is selected for that item, the item that it is replacing will be displayed in the original item's location.

6. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION

When searching by an address, name, etc., or entering data, letters and numbers can be entered via the screen.

ENTERING LETTERS AND NUMBERS

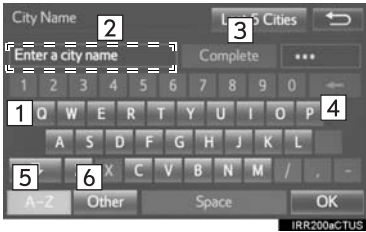

| No. | Function                                                                                                                                                                                                                              |
|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to enter desired characters.                                                                                                                                                                                                   |
| 2   | Text field. Entered character(s) will be displayed.                                                                                                                                                                                   |
| 3   | During entering character(s), when there is only one available option for the next character(s), the next character(s) will be displayed in gray text in the text field automatically. Gray text is entered by selecting this button. |
| 4   | Select to erase one character.                                                                                                                                                                                                        |
| 5   | Select to display the alphabet keys.                                                                                                                                                                                                  |
| 6   | Select to display other symbols.                                                                                                                                                                                                      |

- On certain letter entry screens, letters can be entered in upper or lower case.

 : Select to enter in lower case.

 : Select to enter in upper case.

- Keyboard layout can be changed. (→P.59)

LIST SCREEN


The list screen may be displayed after entering characters.

DISPLAYING THE LIST

- Enter characters and select “OK”.



- Matching items from the database are listed even if the entered address or name is incomplete.
- The list will be displayed automatically if the maximum number of characters is entered or matching items can be displayed on a single list screen.

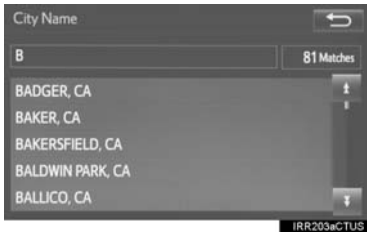


INFORMATION

- The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays “\*\*\*” on the screen.

## SELECTING ALL ITEMS

Some lists contain **“Select All”**. If **“Select All”** is selected, it is possible to select all items.


### 1 Select **“Select All”**.

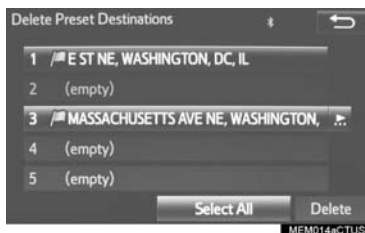

**“Unselect All”**: Unselect all items in the list.

## LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

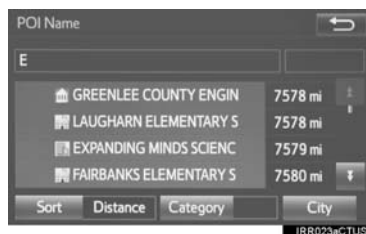

| Icon | Function                                                                                                                         |
|------|----------------------------------------------------------------------------------------------------------------------------------|
|      | Select to skip to the next or previous page.                                                                                     |
|      | Select and hold  or  to scroll through the displayed list.                                                                       |
|      | This indicates the displayed screen's position.                                                                                  |
|      | If  appears to the right of an item name, the complete name is too long to display.<br>Select  to scroll to the end of the name. |
|      | Select  to move to the beginning of the name.                                                                                    |

**SORTING**

The order of a list displayed on the screen can be sorted in the order of distance from the current location, date, category, etc.

- 1 Select “Sort”.




- 2 Select the desired sorting criteria.

**CHARACTER JUMP BUTTONS IN LISTS**

Some lists contain character screen buttons, “ABC”, “DEF” etc., which allow a direct jump to list entries that begin with the same letter as the character screen button.

- 1 Select the desired character jump buttons.

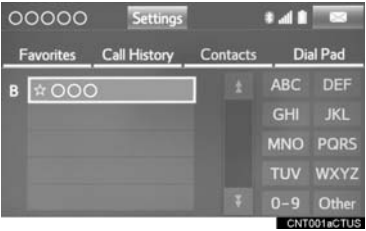


**INFORMATION**

- Every time the same character screen button is selected, the list starting with the subsequent character is displayed.

7. SCREEN ADJUSTMENT

The contrast and brightness of the screen display and the image of the camera display can be adjusted. The screen can also be changed to either day or night mode.

1 Press the “APPS” button.

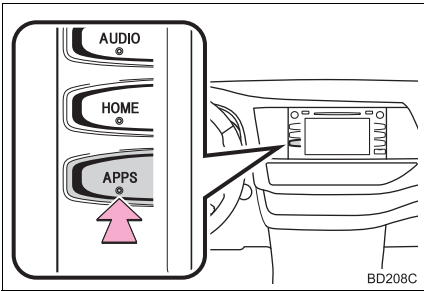

- 2 Select “Setup”.
- 3 Select “Display”.
- 4 Select the items to be set.



| No. | Function                             | Page |
|-----|--------------------------------------|------|
| 1   | Select to adjust the screen display. | 42   |
| 2   | Select to adjust the camera display. |      |
| 3   | Select to turn day mode on/off.      | 41   |

INFORMATION

- When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode. This feature is available when the headlight is switched on.

1 Select “Day Mode”.

INFORMATION

- If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the engine <hybrid system> turned off.

ADJUSTING THE CONTRAST/  
BRIGHTNESS


The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings.

- 1 Select “General” or “Camera”.
- 2 Select the desired item.

► General



► Camera

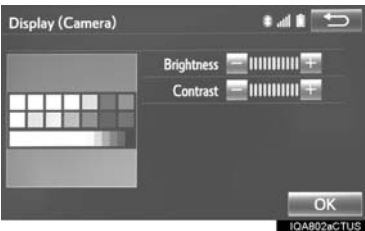

| Screen button    | Function                                         |
|------------------|--------------------------------------------------|
| “Brightness” “+” | Select to brighten the screen.                   |
| “Brightness” “-” | Select to darken the screen.                     |
| “Contrast” “+”   | Select to strengthen the contrast of the screen. |
| “Contrast” “-”   | Select to weaken the contrast of the screen.     |

- 3 Select “OK”.

# 8. LINKING MULTI-INFORMATION DISPLAY AND THE SYSTEM

The following functions of the system are linked with the multi-information display in the instrument cluster:

- Phone
- Fuel consumption

etc.

These functions can be operated using multi-information display control switches on the steering wheel. For details, refer to “Owner’s Manual”.

# 1. REGISTERING/CONNECTING Bluetooth® DEVICE

### REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system.

Once the phone has been registered, it is possible to use the hands-free system.


This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P.52

**1** Turn the Bluetooth® connection setting of your cellular phone on.

- This function is not available when Bluetooth® connection setting of your cellular phone is set to off.

**2** Press the “APPS” button.

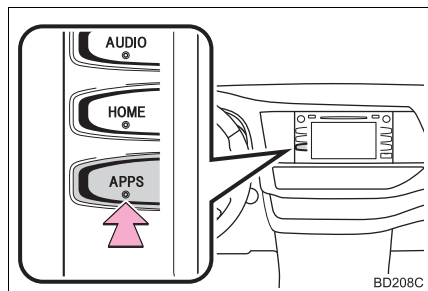


**3** Select “Phone”.

- Operations up to this point can also be performed by pressing the  switch on the steering wheel or  switch on the instrument panel.

**4** Select “Yes” to register a phone.

**5** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

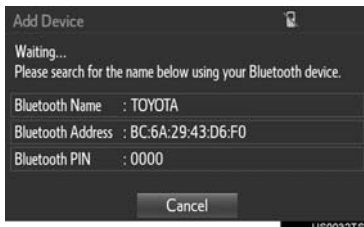


- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select “**Cancel**”.

**6** Register the Bluetooth® device using your Bluetooth® device.

- A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

- 7 Check that the screen is displayed when registration is complete.
- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth® functions are not yet available.
- 8 Select **"OK"** when the connection status changes from "Connection waiting..." to "Connected".

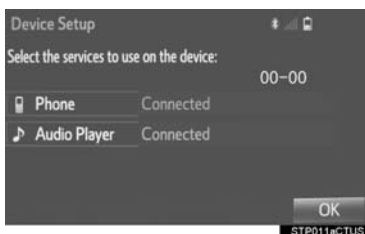

- If an error message is displayed, follow the guidance on the screen to try again.

## REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME


To use the Bluetooth® Audio, it is necessary to register an audio player with the system.

Once the player has been registered, it is possible to use the Bluetooth® Audio.

This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P.52

- 1 Turn the Bluetooth® connection setting of your audio player on.
- This function is not available when the Bluetooth® connection setting of your audio player is set to off.
- 2 Press the **"AUDIO"** button.

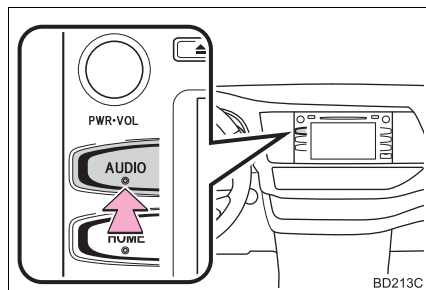

- 3 Select **"Source"** on the audio screen or press **"AUDIO"** button again.
- 4 Select **"Audio"**.
- 5 Select **"Yes"** to register an audio player.
- 6 Follow the steps in "REGISTERING A Bluetooth® DEVICE" from "STEP 2". (→P.52)

PROFILES

This system supports the following services.

| Bluetooth® Device                            | Spec.                                      | Function                                  | Require-ments | Recommen-dations |
|----------------------------------------------|--------------------------------------------|-------------------------------------------|---------------|------------------|
| Bluetooth® Phone/<br>Bluetooth® Audio Player | Bluetooth® Specification                   | Registering a Bluetooth® device           | Ver. 2.0      | Ver. 3.0 +EDR    |
| Bluetooth® Device                            | Profile                                    | Function                                  | Require-ments | Recommen-dations |
| Bluetooth® Phone                             | HFP (Hands-Free Profile)                   | Hands-free system                         | Ver. 1.0      | Ver. 1.6         |
|                                              | OPP (Object Push Profile)                  | Transferring the contacts                 | Ver. 1.1      | Ver. 1.2         |
|                                              | PBAP (Phone Book Access profile)           |                                           | Ver. 1.0      | Ver. 1.1         |
|                                              | MAP (Message Access Profile)               | Bluetooth® phone message                  | —             | Ver. 1.0         |
|                                              | SPP (Serial Port Profile)                  | Connected navigation*1/Entune App Suite*2 | —             | Ver. 1.1         |
| Bluetooth® Audio Player                      | A2DP (Advanced Audio Distribution Profile) | Bluetooth® audio system                   | Ver. 1.0      | Ver. 1.2         |
|                                              | AVRCP (Audio/Video Remote Control Profile) |                                           | Ver. 1.0      | Ver. 1.4         |

\*1: Entune Audio Plus  
\*2: Entune Premium Audio

INFORMATION

- If your cellular phone does not support HFP, registering the Bluetooth® phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
- If the connected Bluetooth® device version is older than recommended or incompatible, the Bluetooth® device function may not work properly.
- Refer to <http://www.toyota.com/entune/> to find approved Bluetooth® phones for this system.



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## CERTIFICATION

### ► U.S.A. (Entune Audio Plus)

#### ● FCC ID: AJDK066

- This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

#### CAUTION:

- **FCC WARNING:**  
Information to User-Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.
- **RF Exposure Compliance:**  
This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.
- **Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### ► Canada (Entune Audio Plus)

#### ● IC: 775E-K066

- This device complies with Part 15 of FCC Rules and Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.  
Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

► U.S.A. (Entune Premium Audio)

● **FCC ID: ACJ932YEAP01A727**

● **NOTE:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

● **FCC WARNING:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

● **CAUTION:**

Radio frequency radiation exposure information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## ► Canada (Entune Premium Audio)

- This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.


Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie II) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

## ► Mexico

- La operación de este equipo está sujeta a las siguientes dos condiciones:  
(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y  
(2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

2. SETTING Bluetooth® DETAILS

1 Press the “APPS” button.

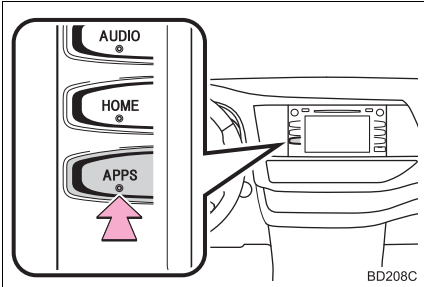

2 Select “Setup”.

3 Select “Bluetooth\*”.

4 Select the desired item to be set.



“Bluetooth\* Setup” SCREEN



| Function                                  | Page |
|-------------------------------------------|------|
| Registering a Bluetooth® device           | 52   |
| Deleting a Bluetooth® device              | 53   |
| Connecting a Bluetooth® device            | 54   |
| Editing the Bluetooth® device information | 56   |
| Bluetooth® system settings                | 57   |

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### DISPLAYING THE “Bluetooth\* Setup” SCREEN IN A DIFFERENT WAY

► From the phone/message settings screen

- 1 Press the “**APPS**” button.
- 2 Select “**Setup**”.
- 3 Select “**Phone**”.
- 4 Select “**Connect Phone**”.

► From the status display

- 1 Select status display area on the screen.

### REGISTERING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices can be registered.

Bluetooth® compatible phones (HFP) and audio players (AVP) can be registered simultaneously.

This operation cannot be performed while driving.

- 1 Display the “Bluetooth\* Setup” screen. (→P.51)

- 2 Select “**Add**”.


► When another Bluetooth® device is connected

- To disconnect the Bluetooth® device, select “**Yes**”.

► When 5 Bluetooth® devices have already been registered

- A registered device needs to be replaced. Select “**Yes**”, and select the device to be replaced.

- 3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

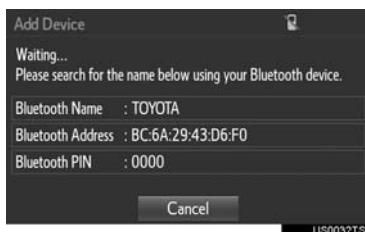

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select **“Cancel”**.


**4** Register the Bluetooth® device using your Bluetooth® device.

- A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

**5** Check that the screen is displayed when registration is complete.

- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth® functions are not yet available.


**6** Select **“OK”** when the connection status changes from “Connection waiting...” to “Connected”.

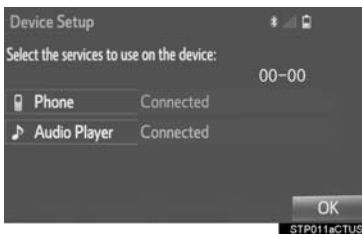

- If an error message is displayed, follow the guidance on the screen to try again.

## DELETING A Bluetooth® DEVICE

- 1** Display the “Bluetooth\* Setup” screen. (→P.51)
- 2** Select **“Remove”**.
- 3** Select the desired device.

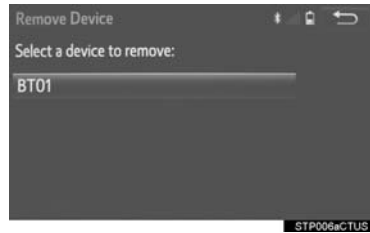

- 4** Select **“Yes”** when the confirmation screen appears.
- 5** Check that a confirmation screen is displayed when the operation is complete.

### INFORMATION

- When deleting a Bluetooth® phone, the contact data will be deleted at the same time.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## CONNECTING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices (Phones (HFP) and audio players (AVP)) can be registered.

If more than 1 Bluetooth® device has been registered, select which device to connect to.

**1** Display the “Bluetooth\* Setup” screen.  
(→P.51)

**2** Select the device to be connected.



● Supported profile icons will be displayed.



: Phone



: Audio player



: Phone/Entune App Suite service (Entune Premium Audio only)

● The profile icon for a currently connected device will be displayed in color.

● Selecting a profile icon which is not currently connected will switch the connection to the function.

- If the desired Bluetooth® device is not on the list, select “**Add**” to register the device. (→P.52)

**3** Select the desired connection.

► When another Bluetooth® device is connected

● To disconnect the Bluetooth® device, select “**Yes**”.

**4** Check that a confirmation screen is displayed when the connection is complete.

● If an error message is displayed, follow the guidance on the screen to try again.

### INFORMATION

● It may take time if the device connection is carried out during Bluetooth® audio playback.

● Depending on the type of Bluetooth® device being connected, it may be necessary to perform additional steps on the device.

● When disconnecting a Bluetooth® device, it is recommended to disconnect using this system.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## ■ AUTO CONNECTION MODE

To turn auto connection mode on, set "Bluetooth\* Power" to on. (→P.57)  
Leave the Bluetooth® device in a location where the connection can be established.

- ▶ Vehicles without a smart key system
  - When the engine switch is turned to the "ACC" or "ON" position, the system searches for a nearby registered device.
  - The system will connect with the registered device that was last connected, if it is nearby.
- ▶ Vehicles with a smart key system
  - When the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the system searches for a nearby registered device.
  - The system will connect with the registered device that was last connected, if it is nearby.

## ■ CONNECTING MANUALLY

When the auto connection has failed or "Bluetooth\* Power" is turned off, it is necessary to connect Bluetooth® manually.

- 1 Press the "APPS" button and select "Setup".
- 2 Select "Bluetooth\*".
- 3 Follow the steps in "CONNECTING A Bluetooth® DEVICE" from "STEP 2". (→P.54)

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## ■ RECONNECTING THE Bluetooth® PHONE

If a Bluetooth® phone is disconnected due to poor reception from the Bluetooth® network when the engine <power> switch is in the following, the system automatically reconnects the Bluetooth® phone.


▶ Vehicles without a smart key system  
The engine switch is in the "ACC" or "ON" position.

▶ Vehicles with a smart key system  
The engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

EDITING THE Bluetooth®  
DEVICE INFORMATION

The Bluetooth® device's information can be displayed on the screen. The displayed information can be edited.

- 1 Display the "Bluetooth\* Setup" screen. (→P.51)
- 2 Select the desired device to be edited.
- 3 Select "Device Info".

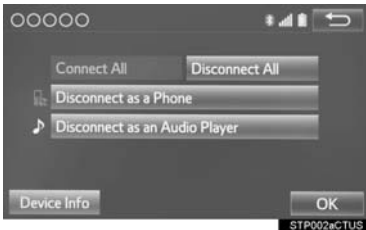

- 4 Confirm and change the Bluetooth® device information.



| No. | Information                                                                  |
|-----|------------------------------------------------------------------------------|
| 1   | The name of the Bluetooth® device. Can be changed to a desired name. (→P.57) |
| 2   | Select to set the Bluetooth® audio player connection method. (→P.57)         |
| 3   | Device address is unique to the device and cannot be changed.                |
| 4   | Phone number of the Bluetooth® phone.                                        |
| 5   | Compatibility profile of the Bluetooth® device.                              |
| 6   | Select to reset all setup items.                                             |

INFORMATION

- If 2 Bluetooth® devices have been registered with the same device name, the devices can be distinguished referring to the device's address.
- Depending on the type of phone, some information may not be displayed.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## CHANGING A DEVICE NAME

- 1 Select **"Device Name"**.
- 2 Enter the name and select **"OK"**.

### INFORMATION

- Even if the device name is changed, the name registered in your Bluetooth® device does not change.

## SETTING AUDIO PLAYER CONNECTION METHOD

- 1 Select **"Connect Audio Player From"**.

2 Select the desired connection method.  
**"Vehicle"**: Select to connect the audio system to the audio player.


**"Device"**: Select to connect the audio player to the audio system.

- Depending on the audio player, the "Vehicle" or "Device" connection method may be best. As such, refer to the manual that comes with the audio player.
- To reset the connection method, select **"Default"**.

## "System Settings" SCREEN

The Bluetooth® settings can be confirmed and changed.

- 1 Display the **"Bluetooth\* Setup"** screen. (→P.51)
- 2 Select **"System Settings"**.
- 3 Select the desired item to be set.

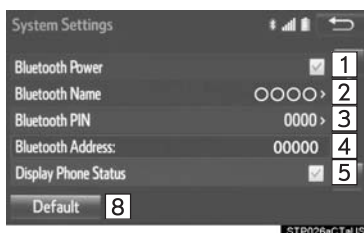

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

| No. | Information                                                                                | Page |
|-----|--------------------------------------------------------------------------------------------|------|
| 1   | Select to set Bluetooth® connection on/off.                                                | 58   |
| 2   | Displays system name. Can be changed to a desired name.                                    | 58   |
| 3   | PIN-code used when the Bluetooth® device was registered. Can be changed to a desired code. | 58   |
| 4   | Device address is unique to the device and cannot be changed.                              | —    |
| 5   | Select to set the phone connection status display on/off.                                  | —    |
| 6   | Select to set the connection status display of the audio player on/off.                    | —    |
| 7   | Compatibility profile of the system device.                                                | —    |
| 8   | Select to reset all setup items.                                                           | —    |

## CHANGING “Bluetooth\* Power”

### 1 Select “Bluetooth\* Power”.

#### When “Bluetooth\* Power” is on:

- ▶ Vehicles without a smart key system  
The Bluetooth® device is automatically connected when the engine switch is turned to the “ACC” or “ON” position.
- ▶ Vehicles with a smart key system  
The Bluetooth® device is automatically connected when the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode.

#### When “Bluetooth\* Power” is off:

The Bluetooth® device is disconnected, and the system will not connect to it next time.

#### INFORMATION

- While driving, the auto connection state can be changed from off to on, but cannot be changed from on to off.

## EDITING THE Bluetooth\* NAME

### 1 Select “Bluetooth\* Name”.

### 2 Enter a name and select “OK”.

## EDITING THE PIN-CODE

### 1 Select “Bluetooth\* PIN”.

 
### 2 Enter a PIN-code and select “OK”.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

# 1. GENERAL SETTINGS





Settings are available for system time, operation sounds, etc.

- 1 Press the “APPS” button.



- 2 Select “Setup”.
- 3 Select “General”.
- 4 Select the items to be set.

## GENERAL SETTINGS SCREEN

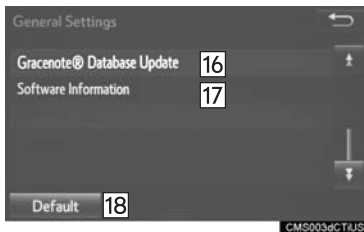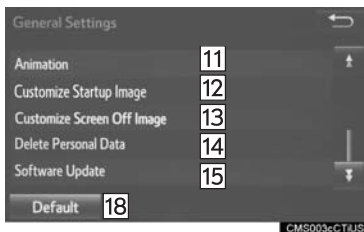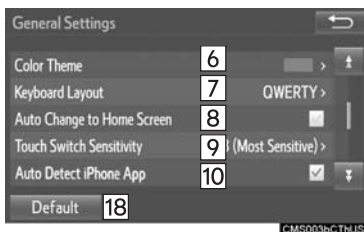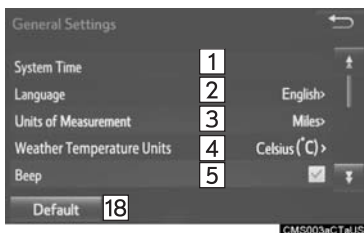

| No.        | Function                                                                                                                                                                                                                   |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b>   | Select to change the time zone and set the daylight saving time on/off. (→P.61)                                                                                                                                            |
| <b>2</b>   | Select to change the language.                                                                                                                                                                                             |
| <b>3</b> * | Select to change the unit of measure for distance/fuel consumption.                                                                                                                                                        |
| <b>4</b>   | Select to change the unit of temperature.                                                                                                                                                                                  |
| <b>5</b>   | Select to set the sound beeps on/off.                                                                                                                                                                                      |
| <b>6</b>   | Select to change the screen button color.                                                                                                                                                                                  |
| <b>7</b>   | Select to change the keyboard layout.                                                                                                                                                                                      |
| <b>8</b>   | Select to set automatic screen changes from the audio control screen to the home screen to on/off. When set to on, the screen will automatically return to the home screen from the audio control screen after 20 seconds. |


| No.       | Function                                                                                                                                                                                            |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>9</b>  | Select to change the capacitive touch button sensor sensitivity.                                                                                                                                    |
| <b>10</b> | Select to set a pop-up message displayed on an iPhone connected via Bluetooth® on/off when an application on the iPhone needs to be activated.                                                      |
| <b>11</b> | Select to set the animations on/off.                                                                                                                                                                |
| <b>12</b> | Select to customize the startup image. (→P.62)                                                                                                                                                      |
| <b>13</b> | Select to customize the screen off image. (→P.63)                                                                                                                                                   |
| <b>14</b> | Select to delete personal data. (→P.64)                                                                                                                                                             |
| <b>15</b> | Select to update software versions. For details, contact your Toyota dealer.                                                                                                                        |
| <b>16</b> | Select to update "Gracenote®" database versions. For details, contact your Toyota dealer.                                                                                                           |
| <b>17</b> | Select to display the software information. Notices related to third party software used in this product are en-listed. (This includes instructions for obtaining such software, where applicable.) |
| <b>18</b> | Select to reset all setup items.                                                                                                                                                                    |

\*: Entune Premium Audio only

SYSTEM TIME SETTINGS

Used for changing time zones and the on/off settings of daylight saving time.

- 1 Display the “General Settings” screen. (→P.59)
- 2 Select “System Time”.
- 3 Select the items to be set.

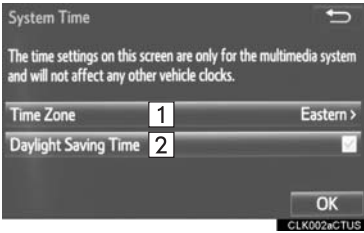

| No. | Function                                   |
|-----|--------------------------------------------|
| 1   | Select to change the time zone. (→P.61)    |
| 2   | Select to set daylight saving time on/off. |

- 4 Select “OK”.

SETTING THE TIME ZONE

- 1 Select “Time Zone”.
- 2 Select the desired time zone.



## CUSTOMIZING THE STARTUP AND SCREEN OFF IMAGES

An image can be copied from a USB memory and used as the startup and screen off images.

### ► Vehicles without a smart key system

When the engine switch is turned to the “ACC” or “ON” position, the initial screen will be displayed. (→P.32)


### ► Vehicles with a smart key system

When the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the initial screen will be displayed. (→P.32)

When “**Screen Off**” on the “Setup” screen is selected, the screen is turned off and the desired screen off image that is set is displayed. (To turn the screen off: →P.20)

## TRANSFERRING IMAGES

- 1 Open the cover and connect a USB memory.

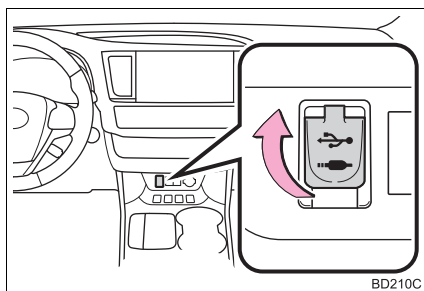

- Turn on the power of the USB memory if it is not turned on.
- 2 Press the “**APPS**” button.
  - 3 Select “**Setup**”.
  - 4 Select “**General**”.
  - 5 Select “**Customize Startup Image**” or “**Customize Screen Off Image**”.
  - 6 Select “**Transfer**”.
  - 7 Select “**Yes**”.

**INFORMATION**

- When saving the images to a USB, name the folder that the startup image is saved to "StartupImage" and name the folder that the screen off image is saved to "DisplayOffImage". If these folder names are not used, the system cannot download the images. (The folder names are case sensitive.)
- The compatible file extensions are JPG and JPEG.
- Image files of 5 MB or less can be transferred.
- Up to 3 images can be downloaded.
- Files with non-ASCII filenames can not be downloaded.

**SETTING THE STARTUP IMAGES**

- 1 Display the "General Settings" screen. (→P.59)
- 2 Select **"Customize Startup Image"**.
- 3 Select the desired image.



- 4 Select **"OK"**.

**SETTING THE SCREEN OFF IMAGES**

- 1 Display the "General Settings" screen. (→P.59)
- 2 Select **"Customize Screen Off Image"**.
- 3 Select the desired image.



- 4 Select **"OK"**.

## DELETING TRANSFERRED IMAGES


- 1 Display the “General Settings” screen. (→P.59)
- 2 Select “Customize Startup Image” or “Customize Screen Off Image”.
- 3 Select “Delete All”.



- 4 Select “Yes”.

## DELETING PERSONAL DATA

- 1 Display the “General Settings” screen. (→P.59)
- 2 Select “Delete Personal Data”.
- 3 Select “Delete”.

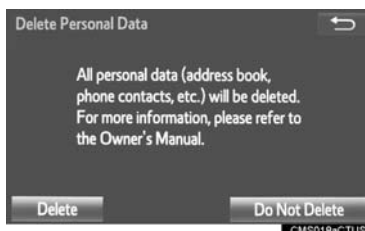

- 4 Select “Yes” when the confirmation screen appears.
  - Registered or changed personal settings will be deleted or returned to their default conditions.  
For example:
    - General settings
    - Navigation settings\*
    - Audio settings
    - Phone settings

\*: Entune Premium Audio only


**NOTICE**

 - ▶ Vehicles without a smart key system
  - Entune Premium Audio only: Make sure the map microSD card is inserted when deleting personal data. The personal data cannot be deleted when the map microSD card is removed. To delete the data, after inserting the map microSD card, turn the engine switch to the "ACC" or "ON" position.
- ▶ Vehicles with a smart key system
  - Entune Premium Audio only: Make sure the map microSD card is inserted when deleting personal data. The personal data cannot be deleted when the map microSD card is removed. To delete the data, after inserting the map microSD card, turn the engine <power> switch to ACCESSORY or IGNITION ON <ON> mode.

2. VOICE SETTINGS

Voice volume, etc. can be set.

1 Press the “APPS” button.



2 Select “Setup”.



3 Select “Voice”.

4 Select the items to be set.

INFORMATION

- “Voice Settings” screen can also be displayed from the voice recognition top screen. (→P.170)

VOICE SETTINGS SCREEN

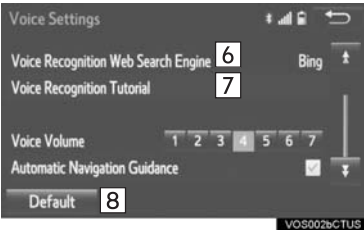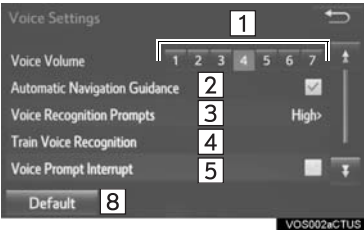


| No. | Function                                                                                            |
|-----|-----------------------------------------------------------------------------------------------------|
| 1   | Select to adjust the volume of voice guidance.                                                      |
| 2*  | Select to set the voice guidance during route guidance on/off.                                      |
| 3   | Select to set the voice recognition prompts.                                                        |
| 4   | Select to train voice recognition. The voice command system adapt the user accent.                  |
| 5   | Select to set the voice prompt interrupt on/off.                                                    |
| 6*  | Select to set the web search engine. The search engines are Entune App Suite applications. (→P.373) |
| 7   | Select to start the voice recognition tutorial.                                                     |
| 8   | Select to reset all setup items.                                                                    |

\*: Entune Premium Audio only


3. VEHICLE SETTINGS

Settings are available for vehicle customization and peripheral monitoring system.

- 1 Press the “APPS” button.

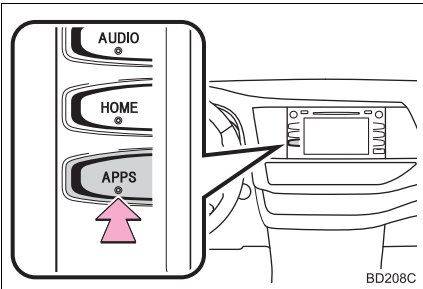

- 2 Select “Setup”.
- 3 Select “Vehicle”.
- 4 Select the desired item to be set.

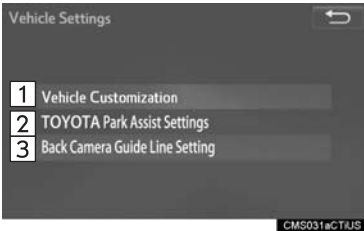


| No. | Function                                       | Page             |
|-----|------------------------------------------------|------------------|
| 1   | Select to set vehicle customization.           | “Owner’s Manual” |
| 2   | Select to set intuitive parking assist-sensor. | 256              |
| 3   | Select to set back camera guide line.          | 202              |

### 3. OTHER SETTINGS

## 4. DRIVER SETTINGS

The driver settings feature will allow the system to link some preferences (such as audio presets, button colors, language, etc.) to a paired Bluetooth® phone.

- 1 Press the **"APPS"** button.

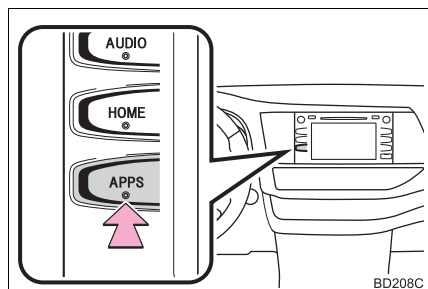

- 2 Select **"Setup"**.
- 3 Select **"Driver"**.
- 4 Select **"Enable this Feature"**.

### MANUALLY SELECT LINKED SETTINGS

- 1 Display the driver settings screen. (→P.68)
- 2 Select **"Manually Select Linked Settings"**.




- 3 Select the desired phone.
  - After a few seconds, loaded screen automatically switches to the home screen.

5. MAINTENANCE\*

When this system is turned on, the “Maintenance Reminder” screen displays when it is time to replace a part or certain components. (→P.32)

1 Press the “APPS” button.

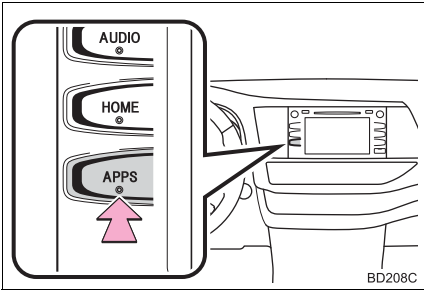

2 Select “Maintenance”.

3 Select the desired item.



| No. | Function                                                                                                                                         |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to set the condition of parts or components.                                                                                              |
| 2   | Select to add new information items separately from provided ones.                                                                               |
| 3   | Select to cancel all conditions which have been entered.                                                                                         |
| 4   | Select to reset the item which have expired conditions.                                                                                          |
| 5   | Select to call the registered dealer.                                                                                                            |
| 6   | Select to register/edit dealer information. (→P.70)                                                                                              |
| 7   | When set to on, the indicator will illuminate. The system is set to give maintenance information with the “Maintenance Reminder” screen. (→P.32) |


INFORMATION

- When the vehicle needs to be serviced, the screen button color will change to orange.

\*: Entune Premium Audio only

MAINTENANCE INFORMATION  
SETTING

- 1 Select the desired part or component screen button.
- When the vehicle needs to be serviced, the screen button color will change to orange.
- 2 Set the conditions.

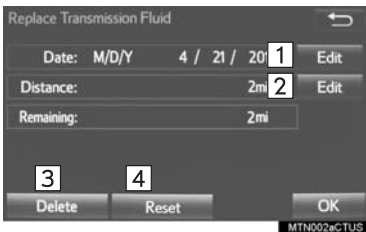

| No. | Function                                                               |
|-----|------------------------------------------------------------------------|
| 1   | Select to enter the next maintenance date.                             |
| 2   | Select to enter the driving distance until the next maintenance check. |
| 3   | Select to cancel the conditions which have been entered.               |
| 4   | Select to reset the conditions which have expired.                     |

- 3 Select “OK” after entering the conditions.


INFORMATION

- For scheduled maintenance information, refer to “Scheduled Maintenance Guide” or “Owner’s Manual Supplement”.
- Depending on driving or road conditions, the actual date and distance that maintenance should be performed may differ from the stored date and distance in the system.

DEALER SETTING

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- 1 Select “Set Dealer”.
- 2 Select the desired item to search for the location. (→P.317)

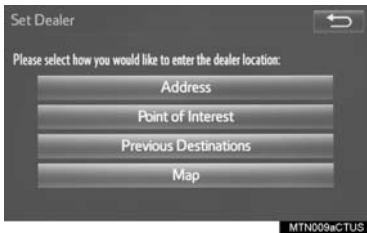

- The editing dealer screen appears after setting the location.

3 Select the items to be edited.



| No. | Function                                                         | Page |
|-----|------------------------------------------------------------------|------|
| 1   | Select to enter the name of a dealer.                            | 71   |
| 2   | Select to enter the name of a dealer member.                     | 71   |
| 3   | Select to set the location.                                      | 71   |
| 4   | Select to enter the phone number.                                | 71   |
| 5   | Select to delete the dealer information displayed on the screen. | —    |
| 6   | Select to set the displayed dealer as a destination.             | 329  |

■ EDITING DEALER OR CONTACT NAME

- 1 Select “**Edit**” next to “Dealer” or “Contact”.
- 2 Enter the name and select “**OK**”.

■ EDITING THE LOCATION

- 1 Select “**Edit**” next to “Location”.
- 2 Scroll the map to the desired point (→P.309) and select “**OK**”.

■ EDITING PHONE NUMBER

- 1 Select “**Edit**” next to “Phone #”.
- 2 Enter the phone number and select “**OK**”.



## AUDIO/VISUAL SYSTEM

**1 BASIC OPERATION**

|                                        |           |
|----------------------------------------|-----------|
| <b>1. QUICK REFERENCE .....</b>        | <b>76</b> |
| <b>2. SOME BASICS .....</b>            | <b>77</b> |
| TURNING THE SYSTEM ON<br>AND OFF ..... | 78        |
| SELECTING AN AUDIO SOURCE .....        | 78        |
| DISC SLOT .....                        | 79        |
| USB/AUX PORT .....                     | 80        |
| SOUND SETTINGS .....                   | 80        |
| VOICE COMMAND SYSTEM .....             | 82        |

**2 RADIO OPERATION**

|                                                    |           |
|----------------------------------------------------|-----------|
| <b>1. AM/FM RADIO .....</b>                        | <b>83</b> |
| OVERVIEW .....                                     | 83        |
| PRESETTING A STATION .....                         | 86        |
| SELECTING A STATION FROM<br>THE LIST .....         | 86        |
| CACHING A RADIO PROGRAM .....                      | 87        |
| RADIO BROADCAST DATA<br>SYSTEM .....               | 88        |
| TRAFFIC ANNOUNCEMENT<br>(FM RADIO) .....           | 89        |
| USING HD Radio™ TECHNOLOGY .....                   | 89        |
| AVAILABLE HD Radio™<br>TECHNOLOGY .....            | 90        |
| TROUBLESHOOTING GUIDE .....                        | 92        |
| <b>2. XM Satellite Radio .....</b>                 | <b>93</b> |
| OVERVIEW .....                                     | 93        |
| HOW TO SUBSCRIBE TO AN XM<br>Satellite Radio ..... | 95        |
| DISPLAYING THE RADIO ID .....                      | 97        |
| PRESETTING A CHANNEL .....                         | 97        |
| SELECTING A CHANNEL FROM<br>THE LIST .....         | 97        |
| IF THE SATELLITE RADIO TUNER<br>MALFUNCTIONS ..... | 98        |
| <b>3. INTERNET RADIO .....</b>                     | <b>99</b> |
| LISTENING TO INTERNET RADIO .....                  | 99        |

### 3 MEDIA OPERATION

|                                         |            |
|-----------------------------------------|------------|
| <b>1. CD.....</b>                       | <b>100</b> |
| OVERVIEW.....                           | 100        |
| PLAYING AN AUDIO CD.....                | 102        |
| PLAYING AN MP3/WMA/AAC<br>DISC.....     | 102        |
| <b>2. USB MEMORY .....</b>              | <b>103</b> |
| OVERVIEW.....                           | 103        |
| PLAYING A USB AUDIO .....               | 106        |
| <b>3. iPod.....</b>                     | <b>107</b> |
| OVERVIEW.....                           | 107        |
| iPod AUDIO .....                        | 110        |
| <b>4. Bluetooth® AUDIO .....</b>        | <b>111</b> |
| OVERVIEW.....                           | 111        |
| CONNECTING A Bluetooth®<br>DEVICE ..... | 115        |
| LISTENING TO Bluetooth® AUDIO .....     | 115        |
| <b>5. AUX .....</b>                     | <b>116</b> |
| OVERVIEW.....                           | 116        |

### 4 AUDIO/VISUAL REMOTE CONTROLS

|                                  |            |
|----------------------------------|------------|
| <b>1. STEERING SWITCHES.....</b> | <b>118</b> |
|----------------------------------|------------|

### 5 SETUP

|                               |            |
|-------------------------------|------------|
| <b>1. AUDIO SETTINGS.....</b> | <b>120</b> |
| AUDIO SETTINGS SCREEN .....   | 120        |

### 6 TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

|                                       |            |
|---------------------------------------|------------|
| <b>1. OPERATING INFORMATION .....</b> | <b>122</b> |
| RADIO .....                           | 122        |
| CD PLAYER AND DISC.....               | 123        |
| iPod .....                            | 125        |
| FILE INFORMATION.....                 | 127        |
| TERMS.....                            | 129        |
| ERROR MESSAGES .....                  | 131        |

## REAR SEAT ENTERTAINMENT SYSTEM OPERATION

### 1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES ..... 132

|                                         |     |
|-----------------------------------------|-----|
| DISPLAY .....                           | 133 |
| DISC SLOT.....                          | 134 |
| SD CARD SLOT .....                      | 135 |
| REMOTE CONTROLLER.....                  | 135 |
| OPERATING FROM THE FRONT<br>SEATS ..... | 139 |
| DISCS THAT CAN BE USED .....            | 140 |
| SD CARD THAT CAN BE USED.....           | 141 |
| COPYRIGHTS AND<br>TRADEMARKS .....      | 142 |

### 2. PLAYING A Blu-ray Disc™ (BD) AND DVD DISCS .....145

|                                     |     |
|-------------------------------------|-----|
| REMOTE CONTROLLER.....              | 145 |
| TURNING ON THE BD/DVD<br>MODE ..... | 146 |
| PLAYING/PAUSING A DISC.....         | 146 |
| OPERATING THE DISC MENU .....       | 146 |
| OPTION SCREEN.....                  | 146 |
| BD/DVD VIDEO DISCS.....             | 155 |

### 3. PLAYING AN AUDIO CD AND MP3/WMA DISCS ..... 158

|                                                    |     |
|----------------------------------------------------|-----|
| REMOTE CONTROLLER .....                            | 158 |
| CONTROL SCREEN .....                               | 158 |
| TURNING ON THE AUDIO CD AND<br>MP3/WMA MODE.....   | 158 |
| SELECTING A TRACK/FILE .....                       | 158 |
| FAST FORWARDING OR<br>REWINDING A TRACK/FILE ..... | 158 |
| SELECTING A FOLDER.....                            | 159 |
| REPEAT PLAY .....                                  | 159 |
| RANDOM PLAYBACK .....                              | 159 |
| MP3 AND WMA FILES .....                            | 159 |

### 4. PLAYING AN SD CARD ..... 161

|                                      |     |
|--------------------------------------|-----|
| REMOTE CONTROLLER .....              | 161 |
| MAIN MENU .....                      | 161 |
| PLAYING STILL PICTURES.....          | 162 |
| PLAYING AVCHD VIDEO.....             | 163 |
| FORMATTING THE SD CARD .....         | 164 |
| DELETING THE BD HISTORY<br>DATA..... | 164 |
| SD CARD INFORMATION.....             | 164 |

### 5. USING THE VIDEO MODE ..... 166

|                                |     |
|--------------------------------|-----|
| REMOTE CONTROLLER .....        | 166 |
| USING THE A/V INPUT PORT ..... | 166 |

## 1. BASIC OPERATION

### 1. QUICK REFERENCE


The audio control screen can be reached by the following methods:

- Using the “AUDIO” button

Press the “**AUDIO**” button to display the audio screen.

- Using the “APPS” button

Press the “**APPS**” button, then select “**Audio**” to display the audio screen.

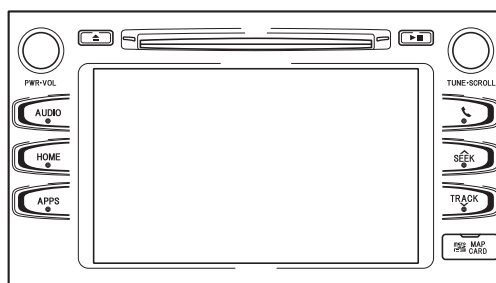

BD211C

| Function                                | Page       |
|-----------------------------------------|------------|
| Using the radio                         | 83, 93, 99 |
| Playing an audio CD or MP3/WMA/AAC disc | 100        |
| Playing a USB memory                    | 103        |
| Playing an iPod                         | 107        |
| Playing a Bluetooth® device             | 111        |
| Using the AUX port                      | 116        |
| Using the steering wheel audio switches | 118        |
| Audio system settings                   | 120        |
| Rear seat entertainment system          | 132        |

#### INFORMATION

- The display and button positions will differ depending on the type of the system.

## 1. BASIC OPERATION

## 2. SOME BASICS

This section describes some of the basic features of the audio/visual system. Some information may not pertain to your system.

► Vehicles without a smart key system

Your audio/visual system works when the engine switch is in the “ACC” or “ON” position.

► Vehicles with a smart key system

Your audio/visual system works when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.



### NOTICE

- To prevent the 12-volt battery from being discharged, do not leave the audio/visual system on longer than necessary when the engine is not running <the hybrid system is not operating>.


## CERTIFICATION

### CAUTION:

- For vehicles sold in U.S.A.:  
Part 15 of the FCC Rules  
FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Laser products (Entune Audio Plus)
  - USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
  - THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.
- Laser products (Entune Premium Audio)  
THIS PRODUCT IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

## 1. BASIC OPERATION

### TURNING THE SYSTEM ON AND OFF

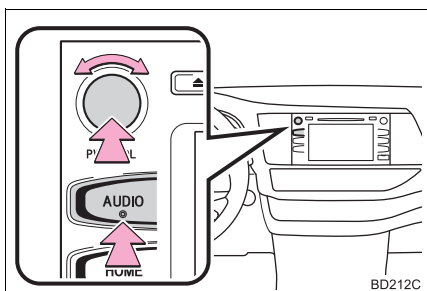


**“PWR·VOL” knob:** Press to turn the audio/visual system on and off. The system turns on in the last mode used. Turn this knob to adjust the volume.

**“AUDIO” button:** Press to display screen buttons for the audio/visual system.

- A function that enables automatic return to the home screen from the audio/visual screen can be selected. (→P.59)

### SELECTING AN AUDIO SOURCE

- 1 Press the **“AUDIO”** button.

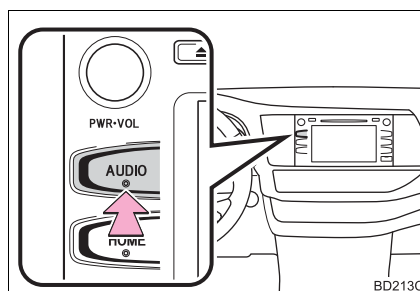

- 2 Select **“Source”** or press **“AUDIO”** button again.

- 3 Select the desired source.



#### INFORMATION

- Dimmed screen buttons cannot be operated.
- When there are two pages, select  or  to change the page.

## REORDERING THE AUDIO SOURCE

- 1 Display the "Select Audio Source" screen. (→P.78)
- 2 Select **"Reorder"**.



- 3 Select the desired audio source then or to reorder.




- 4 Select **"OK"**.

## DISC SLOT

### INSERTING A DISC


- 1 Insert a disc into the disc slot.

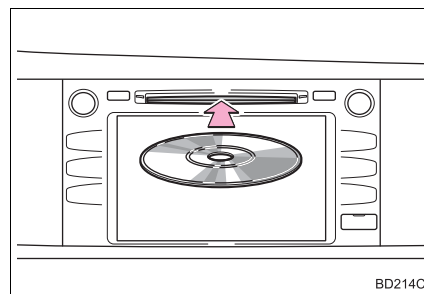

- After insertion, the disc is automatically loaded.

### EJECTING A DISC

- 1 Press the button and remove the disc.

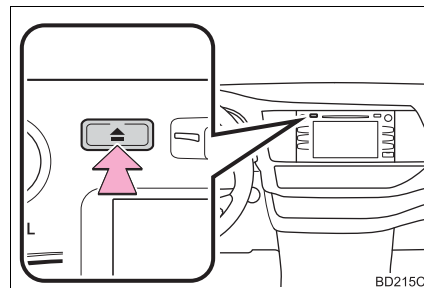

### NOTICE

- Never try to disassemble or oil any part of the CD player. Do not insert anything other than a disc into the slot.

### INFORMATION

- The player is intended for use with 4.7 in. (12 cm) discs only.
- When inserting a disc, gently insert the disc with the label facing up.


3

AUDIO/VISUAL SYSTEM

## 1. BASIC OPERATION

### USB/AUX PORT

- 1 Open the cover and connect a device.

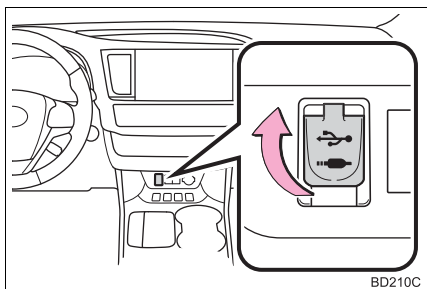

- Turn on the power of the device if it is not turned on.

#### INFORMATION

- The AUX port only supports audio input.
- If a USB hub is plugged-in, two devices can be connected at a time.
- Even if a USB hub is used to connect more than two USB devices, only the first two connected devices will be recognized.

### SOUND SETTINGS

#### AUTOMATIC SOUND LEVELIZER (ASL)

The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.

- 1 Display the "Audio Settings" screen. (→P.120)

#### ► Type A

- 2 Select "**Automatic Sound Levelizer**".

- 3 Select "**High**", "**Mid**", "**Low**", or "**Off**".

#### ► Type B

- 2 Select "**Auto Sound Levelizer**".

#### SURROUND\*

- 1 Display the "Audio Settings" screen. (→P.120)

- 2 Select "**Surround**".

\*: If equipped


TONE AND BALANCE

**TONE:**  
How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

**BALANCE:**  
A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

- 1 Select “Sound” on the audio control screen.
- 2 Select the desired screen button.

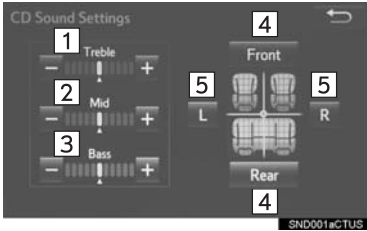


| No. | Function                                                                |
|-----|-------------------------------------------------------------------------|
| 1   | Select “+” or “-” to adjust high-pitched tones.                         |
| 2   | Select “+” or “-” to adjust mid-pitched tones.                          |
| 3   | Select “+” or “-” to adjust low-pitched tones.                          |
| 4   | Select to adjust the sound balance between the front and rear speakers. |
| 5   | Select to adjust the sound balance between the left and right speakers. |

AUDIO/VISUAL SYSTEM

## VOICE COMMAND SYSTEM

- 1 Press this switch to operate the voice command system.

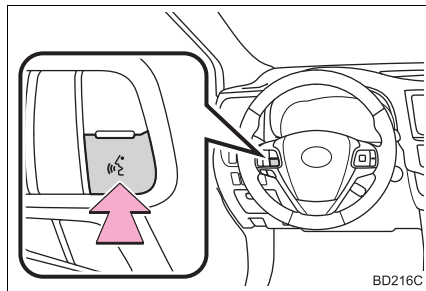

- The voice command system and its list of commands can be operated. (→P.168)


1. AM/FM RADIO

OVERVIEW


The radio operation screen can be reached by the following methods:  
Select “AM” or “FM” on the “Select Audio Source” screen. (→P.78)

■ CONTROL SCREEN


► Entune Audio Plus

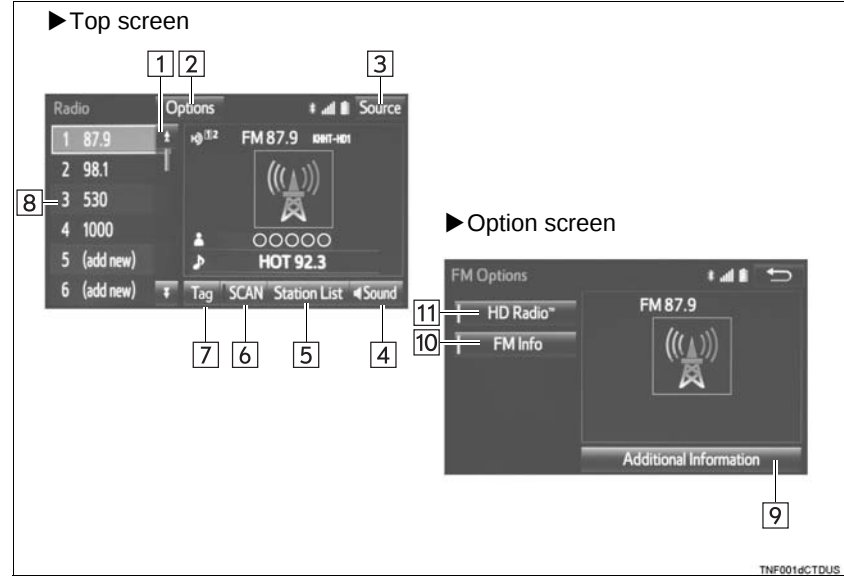

## ► Entune Premium Audio

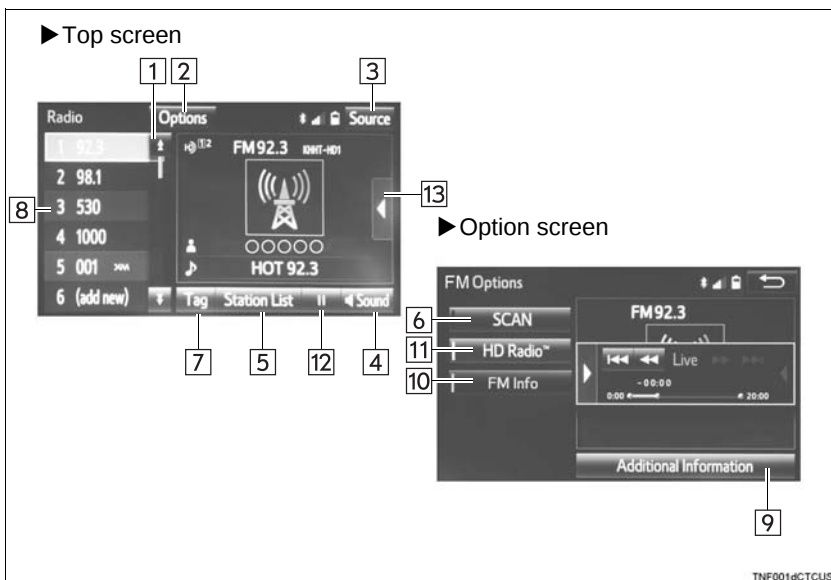

## ■ CONTROL PANEL

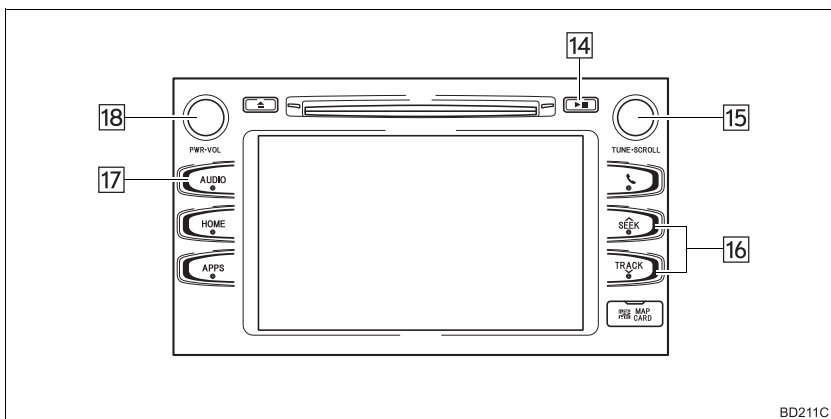

| No. | Function                                                                                                                                                                                                           |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to scroll the page of preset buttons.                                                                                                                                                                       |
| 2   | Select to display the option screen.                                                                                                                                                                               |
| 3   | Select to display the audio source selection screen.                                                                                                                                                               |
| 4   | Select to display the sound setting screen.                                                                                                                                                                        |
| 5   | Select to display a list of receivable stations/channels.                                                                                                                                                          |
| 6   | Select to scan for receivable stations/channels.                                                                                                                                                                   |
| 7   | Select to store information of the audio currently being broadcast on the radio.                                                                                                                                   |
| 8   | Select to tune to preset stations/channels.                                                                                                                                                                        |
| 9   | Select to display the additional text information.                                                                                                                                                                 |
| 10  | Analog FM only: Select to display RBDS text messages.                                                                                                                                                              |
| 11  | Select to turn HD Radio mode on/off.<br>When the “ <b>HD Radio™</b> ” indicator is off, the station list shows only analog broadcasts.                                                                             |
| 12  | Cache radio only: Select to play/pause.                                                                                                                                                                            |
| 13  | Select to display the cache radio operation buttons. (→P.87)                                                                                                                                                       |
| 14  | Press to turn mute on/off.<br>Cache radio only: Select to play/pause.                                                                                                                                              |
| 15  | <ul style="list-style-type: none"> <li>• Turn to step up/down frequencies.</li> <li>• Turn to move up/down the list. Also, the knob can be used to enter selections on the list screens by pressing it.</li> </ul> |
| 16  | <ul style="list-style-type: none"> <li>• Press to seek for a station/channel.</li> <li>• Press and hold for continuous seek.</li> </ul>                                                                            |
| 17  | Press to select an audio mode.                                                                                                                                                                                     |
| 18  | <ul style="list-style-type: none"> <li>• Turn to adjust volume.</li> <li>• Press to turn the audio system on/off.</li> <li>• Press and hold to restart the audio system.</li> </ul>                                |

**INFORMATION**

- The radio automatically changes to stereo reception when a stereo broadcast is received.
- The radio automatically blends to an HD Radio signal in AM or FM where available.

## PRESETTING A STATION

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

- 1 Tune in the desired station.
- 2 Select **“(add new)”**.



- To change the preset station to a different one, select and hold the preset station.
- 3 Select **“Yes”** on the confirmation screen.
  - 4 Select **“OK”** after setting the new preset station.

### INFORMATION

- The number of preset radio stations displayed on the screen can be changed. (→P.121)

## SELECTING A STATION FROM THE LIST

A station list can be displayed.

- 1 Select **“Station List”**.
- 2 FM radio only: Select the desired program genre.



- 3 Select the desired station and select **“OK”**.

## REFRESHING THE STATION LIST

- 1 Select **"Refresh"** on the station list screen and the following screen will be displayed.



**"Cancel Refresh"**: Select to cancel the refresh.

**"Source"**: Select to change to another audio source while refreshing.

### INFORMATION

- The audio system sound is muted during refresh operation.
- In some situations, it may take some time to update the station list.


## CACHING A RADIO PROGRAM\*

A radio program can be cached and played back in a time-shifted manner.

## PLAYING BACK THE CACHE MANUALLY

The broadcast cached in the program cache can be played back manually.

- 1 Display the cache radio operation buttons. (→P.83)
- 2 Select the desired cache radio operation button.

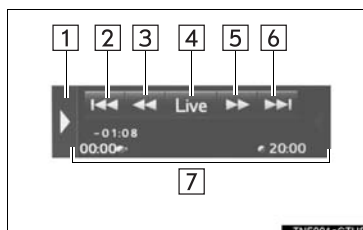

| No. | Function                                                                                              |
|-----|-------------------------------------------------------------------------------------------------------|
| 1   | Hides the cache operation buttons                                                                     |
| 2   | Skips backward 2 minutes                                                                              |
| 3   | Fast rewinds continuously                                                                             |
| 4   | Returns to the live radio broadcast                                                                   |
| 5   | Fast forwards continuously                                                                            |
| 6   | Skips forward 2 minutes                                                                               |
| 7   | Shows the current playback location relative to the cached broadcast recording time with a bar scale. |

\*: Entune Premium Audio only

## AUTOMATIC PLAYBACK OF THE CACHE

If the radio broadcast is interrupted by another audio output, such as an incoming phone call, the system will automatically cache the interrupted portion and perform time-shift playback when the interruption ends. To manually operate the cache operation: (→P.87)

### INFORMATION

- The system can store up to 20 minutes. Cached data will be erased when the radio mode or station is changed or when the audio system is turned off.
- If noise or silence occurs during the caching process, cache writing will continue, with the noise or silence recorded as is. In this case, the cached broadcast will contain the noise or silence when played back.

## RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the **“FM Info”** indicator is on.

## SELECTING A DESIRED GENRE

- 1 Select **“Station List”**.
- 2 FM radio only: Select a desired genre of station and select a desired station.
  - The genre list is in the following order:
    - Classical
    - Country
    - EasyLis (Easy Listening)
    - Inform (Information)
    - Jazz
    - News
    - Oldies
    - Other
    - Pop Music
    - Religion
    - Rock
    - R&B (Rhythm and Blues)
    - Sports
    - Talk
    - Traffic (Not available when “HD Radio™” indicator is off.)
    - Alert (Emergency Alert)

## TRAFFIC ANNOUNCEMENT (FM RADIO)

A station that regularly broadcasts traffic information is automatically located.

- 1 Select **“Station List”**.
- 2 Select the desired traffic program station.

### INFORMATION

- If a traffic program station is found, the name of the traffic program station will be displayed for a while.

## USING HD Radio™ TECHNOLOGY

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to [www.hdradio.com](http://www.hdradio.com).

**HD Radio®**

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

## AVAILABLE HD Radio™ TECHNOLOGY

### MULTICAST

On the FM radio frequency most digital stations have “multiple” or supplemental programs on one FM station.

- 1 Select the “HD)” logo.



- 2 Select the desired channel.

- Turning the “TUNE-SCROLL” knob can also select the desired multicast channel.

## PRESERVING A MUSIC INFORMATION

Tag information in the music broadcasting is preserved in the system and transmits to an iPod.

- 1 Select “Tag” to bookmark the music information.



- 2 Connect an iPod. (→P.80)

- Turn on the power of the iPod if it is not turned on.
- Once an iPod is connected, the music tag moves from the radio into the iPod.
- When the iPod is connected to iTunes, the “tagged” information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album which had been listened to on their radio.

**INFORMATION**

- The tag information can not be preserved while scanning or caching the radio station.
- If tagging the music information fails, "Saving the HD Radio tag was unsuccessful." will be displayed on the screen. If this occurs, tag the information again.
- HD Radio™ stations can be preset.
- An orange "HD)" logo indicator will be displayed on the screen when in digital. The "HD)" logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
- The song title and artist name will appear on the screen when available by the radio station. The radio station can send album pictures when available.
- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.

TROUBLESHOOTING GUIDE


| Experience                                                                                                      | Cause                                                                                                                                             | Action                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mismatch of time alignment a user may hear a short period of programming re-played or an echo, stutter or skip. | The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.                                          | None, radio broadcast issue. A user can contact the radio station.                                                                                                                                  |
| Sound fades, blending in and out.                                                                               | Radio is shifting between analog and digital audio.                                                                                               | Reception issue, may clear-up as the vehicle continues to be driven. Turning the indicator of the “HD Radio™” button off can force radio in an analog audio.                                        |
| Audio mute condition when an HD2/HD3 multicast channel had been playing.                                        | The radio does not have access to digital signals at the moment.                                                                                  | This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.                                                                                    |
| Audio mute delay when selecting an HD2/HD3 multicast channel preset.                                            | The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds. | This is normal behavior, wait for the audio to become available.                                                                                                                                    |
| Text information does not match the present song audio.                                                         | Data service issue by the radio broadcaster.                                                                                                      | Broadcaster should be notified. Complete the form; <a href="http://www.ibiquity.com/automotive/report_radio_station_experiences">www.ibiquity.com/automotive/report_radio_station_experiences</a> . |
| No text information shown for the present selected frequency.                                                   | Data service issue by the radio broadcaster.                                                                                                      | Broadcaster should be notified. Complete the form; <a href="http://www.ibiquity.com/automotive/report_radio_station_experiences">www.ibiquity.com/automotive/report_radio_station_experiences</a> . |

2. XM Satellite Radio\*


OVERVIEW

The satellite radio operation screen can be reached by the following methods:  
Select “XM” on the “Select Audio Source” screen. (→P.78)

CONTROL SCREEN

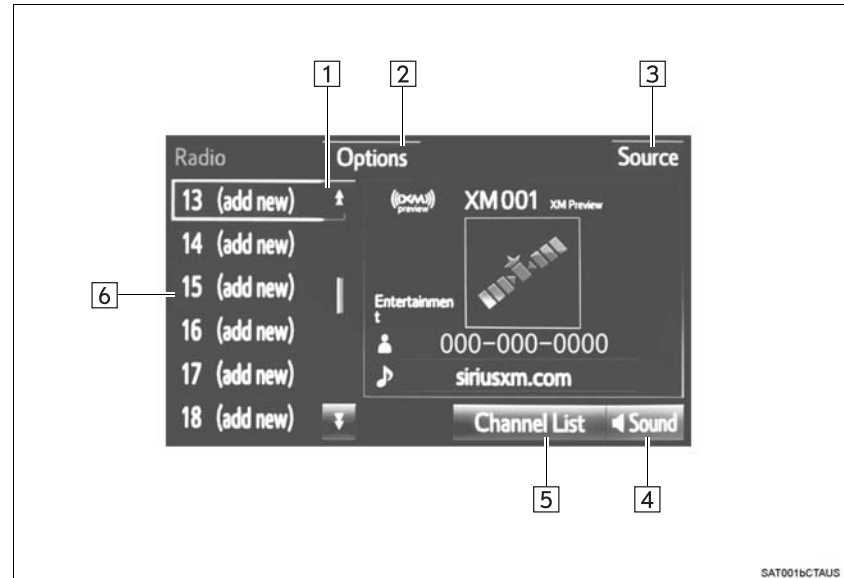

CONTROL PANEL

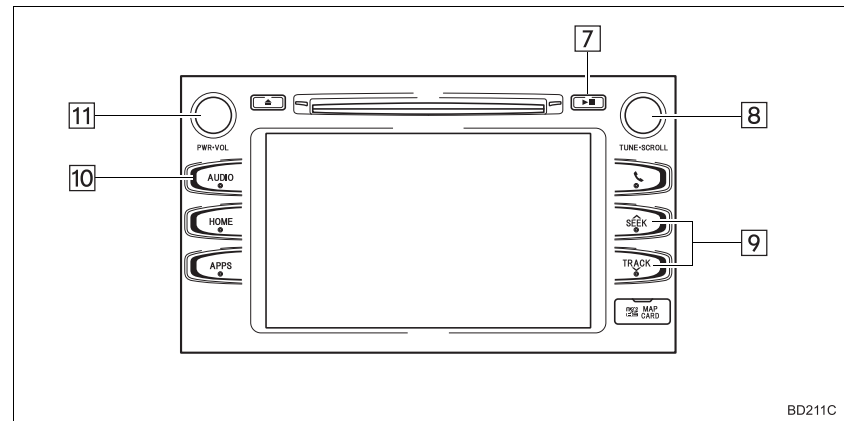

\*: If equipped

| No. | Function                                                                                                                                                                                                     |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to scroll the page of preset buttons.                                                                                                                                                                 |
| 2   | Select to display the option screen. <ul style="list-style-type: none"><li>• Select to scan for receivable channels.</li><li>• Select "Additional Information" to display the information.</li></ul>         |
| 3   | Select to display the audio source selection screen.                                                                                                                                                         |
| 4   | Select to display the sound setting screen.                                                                                                                                                                  |
| 5   | Select to display a list of receivable channels.                                                                                                                                                             |
| 6   | Select to tune to preset channels.                                                                                                                                                                           |
| 7   | Press to turn mute on/off.                                                                                                                                                                                   |
| 8   | <ul style="list-style-type: none"><li>• Turn to step up/down channels.</li><li>• Turn to move up/down the list. Also, the knob can be used to enter selections on the list screens by pressing it.</li></ul> |
| 9   | <ul style="list-style-type: none"><li>• Press to seek for a channel.</li><li>• Press and hold for continuous seek.</li></ul>                                                                                 |
| 10  | Press to select an audio mode.                                                                                                                                                                               |
| 11  | <ul style="list-style-type: none"><li>• Turn to adjust volume.</li><li>• Press to turn the audio system on/off.</li><li>• Press and hold to restart the audio system.</li></ul>                              |

CERTIFICATION

**CAUTION:**

- **FCC WARNING:** Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **Radio frequency exposure.**  
This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20cm) between the antenna and the body of any person at all time during use.

**NOTICE:**

- **THIS DEVICE COMPLIES WITH PART15 OF THE FCC RULES.**
- **OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS,**
  - 1) **THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND**
  - 2) **THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.**

## HOW TO SUBSCRIBE TO AN XM Satellite Radio

To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary.

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

### HOW TO SUBSCRIBE

It is necessary to enter into a separate service agreement with XM Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and digital satellite tuner.

- For complete information on subscription rates and terms, or to subscribe to XM Satellite Radio:

#### ► U.S.A.

Refer to [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-447-0011.

#### ► Canada

Refer to [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677.



### NOTICE

- XM Radio Services—Legal Disclaimers and Warnings
  - Fees and Taxes—Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions subject to Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada). XM service only available in the 48 contiguous United States and Canada.
  - Explicit Language Notice—Channels with frequent explicit language are indicated with an “XL” preceding the channel name. Channel blocking is available for XM Satellite Radio receivers by notifying XM at:
    - U.S.A. Customers:  
Visit [www.siriusxm.com](http://www.siriusxm.com) or calling 1-877-447-0011
    - Canadian Customers:  
Visit [www.siriusxm.ca](http://www.siriusxm.ca) or calling 1-877-438-9677
- It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the XM Satellite Radio System or that support the XM website, the Online Service or any of its content. Furthermore, the AMBE<sup>®</sup> voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.
- Note: this applies to XM receivers only and not XM Ready devices.

**INFORMATION**

- **XM Radio Services—Descriptions**
  - **Radio and Entertainment**  
XM offers more than 170 satellite radio channels of commercial-free music and premier sports, news, talk, and entertainment. XM is broadcast via satellites to millions of listeners across the continental United States. XM subscribers listen to XM on satellite radio receivers for the car, home, and portable use. More information about XM is available online at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada).

- **XM Radio Services—Subscription Instructions**

- For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included. Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada). XM service only available in the 48 contiguous United States (U.S.A.) or 10 Canadian provinces (Canada). © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners. For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

USA Customers:

Visit [www.siriusxm.com](http://www.siriusxm.com) or call  
1-877-447-0011

Canadian Customers:

Visit [www.siriusxm.ca](http://www.siriusxm.ca) or call  
1-877-438-9677

**INFORMATION**

- XM Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM Satellite Radio customer service agreement.
- Customers should have their radio ID ready; the radio ID can be found by tuning to "Ch 000" on the radio. For details, see "DISPLAYING THE RADIO ID" below.
- All fees and programming are the responsibility of XM Satellite Radio and are subject to change.

### SATELLITE TUNER TECHNOLOGY NOTICE

Toyota's satellite radio tuners are awarded Type Approval Certificates from XM Satellite Radio Inc. as proof of compatibility with the services offered by XM Satellite Radio.

**INFORMATION**

- **Satellite tuner**  
The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM<sup>®</sup> Satellite Radio.

## DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

- If “Ch 000” is selected using the “**TUNE-SCROLL**” knob, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

## PRESETTING A CHANNEL

- 1 Tune in the desired channel.
- 2 Select “(add new)”.



- To change the preset channel to a different one, select and hold the preset station/channel.
- 3 Select “**Yes**” on the confirmation screen.
  - 4 Select “**OK**” after setting the new preset channel.

## SELECTING A CHANNEL FROM THE LIST

- 1 Select “**Channel List**”.
- 2 Select the desired program genre.
- 3 Select the desired channel and select “**OK**”.

3

AUDIO/VISUAL SYSTEM

IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

| Message            | Explanation                                                                                                                                                                                                                                                          |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "Check Antenna"    | The XM antenna is not connected. Check whether the XM antenna cable is attached securely.                                                                                                                                                                            |
|                    | A short circuit occurs in the antenna or the surrounding antenna cable. See a Toyota certified dealer for assistance.                                                                                                                                                |
| "Ch Unauthorized"  | You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "Ch 000" and all free-to-air channels.               |
|                    | The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio. |
| "No Signal"        | The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.                                                                                                                                                |
| "Loading"          | The unit is acquiring audio or program information. Wait until the unit has received the information.                                                                                                                                                                |
| "Channel Off Air"  | The channel you selected is not broadcasting any programming. Select another channel.                                                                                                                                                                                |
| -----              | There is no song/program title or artist name/feature associated with the channel at that time. No action is required.                                                                                                                                               |
| "Chan Unavailable" | The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel.                                                                  |

INFORMATION

- Contact the XM Listener Care Center at 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada).

## 3. INTERNET RADIO\*

## LISTENING TO INTERNET RADIO

One of Entune App Suite features is the ability to listen to internet radio. In order to use this service, a compatible phone and the system needs to be set up. For details: →P.373

## 1 Select the internet radio application.



- The internet radio application screen is displayed.
- Perform operations according to the displayed application screen.
- For the instrument panel operation method: →P.78
- If a compatible phone is already registered, it will be connected automatically.

## INFORMATION


- Other applications can be activated while listening to internet radio.
- Some parts of applications can be adjusted using the switches on the steering wheel.
- For additional information, refer to <http://www.toyota.com/entune/> or call 1-800-331-4331.

1. CD


OVERVIEW

The CD operation screen can be reached by the following methods:  
Select “CD” on the “Select Audio Source” screen. (→P.78)  
► Insert a disc. (→P.79)

CONTROL SCREEN

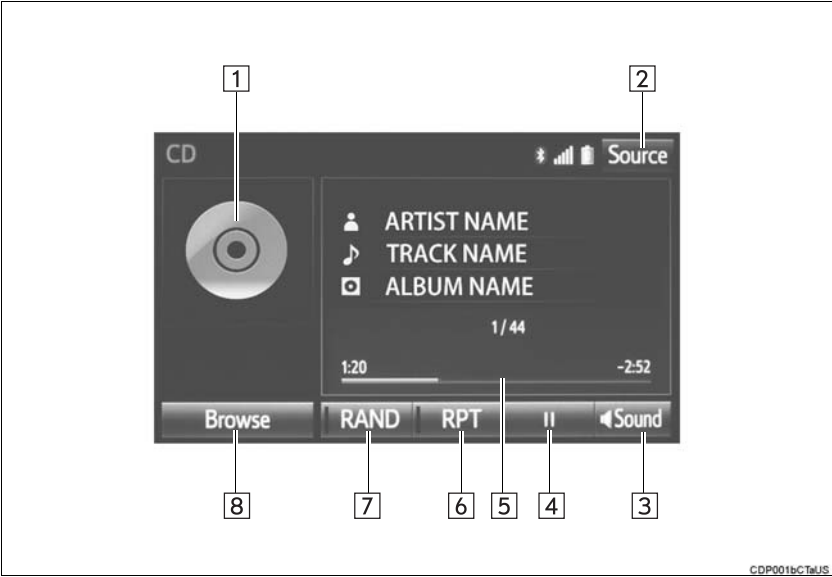

CONTROL PANEL

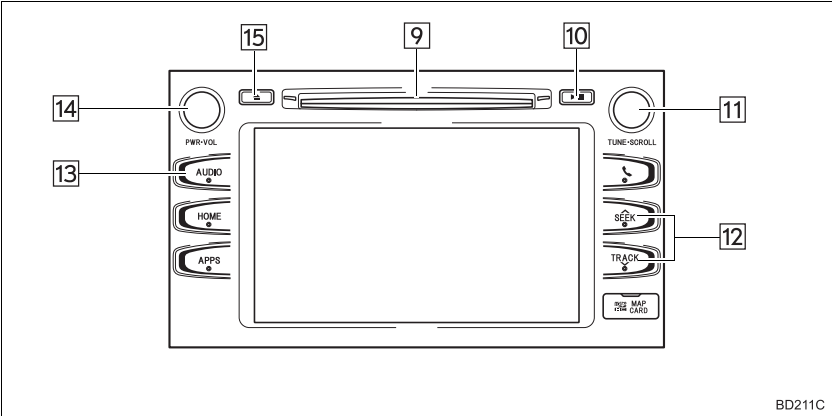

| No. | Function                                                                                                                                                                                                                                        |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | <ul style="list-style-type: none"> <li>• Displays cover art</li> <li>• Select to display a track/file list.</li> </ul>                                                                                                                          |
| 2   | Select to display the audio source selection screen.                                                                                                                                                                                            |
| 3   | Select to display the sound setting screen.                                                                                                                                                                                                     |
| 4   | Select to play/pause.                                                                                                                                                                                                                           |
| 5   | Shows progress                                                                                                                                                                                                                                  |
| 6   | Select to set repeat playback.                                                                                                                                                                                                                  |
| 7   | Select to set random playback.                                                                                                                                                                                                                  |
| 8   | <ul style="list-style-type: none"> <li>• Audio CD: Select to display a track list.</li> <li>• MP3/WMA/AAC disc: Select to display a folder list.</li> </ul> <p>To return to the top screen, select <b>"Now Playing"</b> on the list screen.</p> |
| 9   | Disc slot                                                                                                                                                                                                                                       |
| 10  | Press to play/pause.                                                                                                                                                                                                                            |
| 11  | <ul style="list-style-type: none"> <li>• Turn to select a track/file.</li> <li>• Turn to move up/down the list. Also, the knob can be used to enter selections on the list screens by pressing it.</li> </ul>                                   |
| 12  | <ul style="list-style-type: none"> <li>• Press to select a track/file.</li> <li>• Press and hold to fast forward/rewind.</li> </ul>                                                                                                             |
| 13  | Press to select an audio mode.                                                                                                                                                                                                                  |
| 14  | <ul style="list-style-type: none"> <li>• Turn to adjust volume.</li> <li>• Press to turn the audio system on/off.</li> <li>• Press and hold to restart the audio system.</li> </ul>                                                             |
| 15  | Press to eject a disc.                                                                                                                                                                                                                          |

**INFORMATION**

- If a disc contains CD-DA files and MP3/WMA/AAC files, only the CD-DA files can be played back.
- If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.
- If the disc contains no CD-TEXT, only the track number would be displayed on the screen.

## PLAYING AN AUDIO CD

### REPEATING

The track currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

### RANDOM ORDER

Tracks can be automatically and randomly selected.

- 1 Select the random button to change on/off.

## PLAYING AN MP3/WMA/AAC DISC

### REPEATING

The file currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

### RANDOM ORDER

Files can be automatically and randomly selected.


- 1 Select the random button to change on/off.

2. USB MEMORY


OVERVIEW

The USB memory operation screen can be reached by the following methods:  
Select **"USB (DEVICE NAME)"** on the "Select Audio Source" screen. (→P.78)  
▶ Connect a USB memory. (→P.80)

CONTROL SCREEN

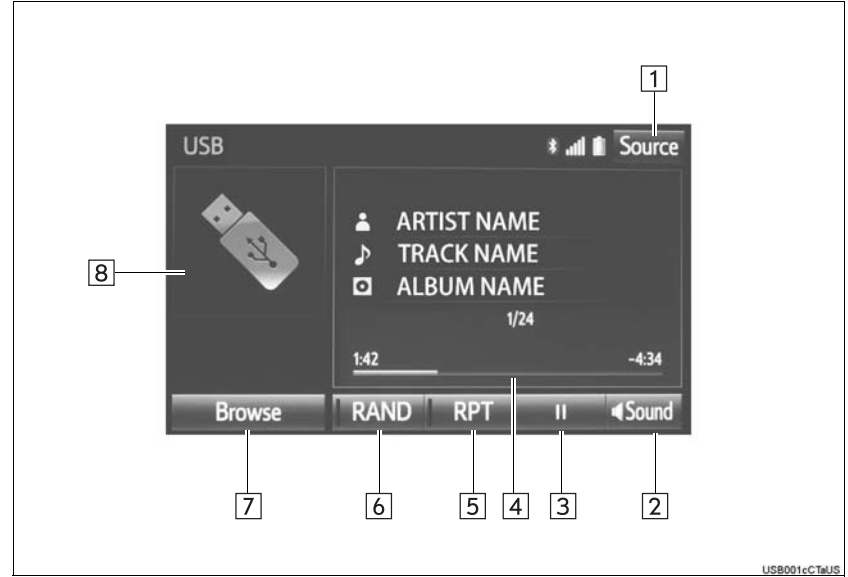

CONTROL PANEL

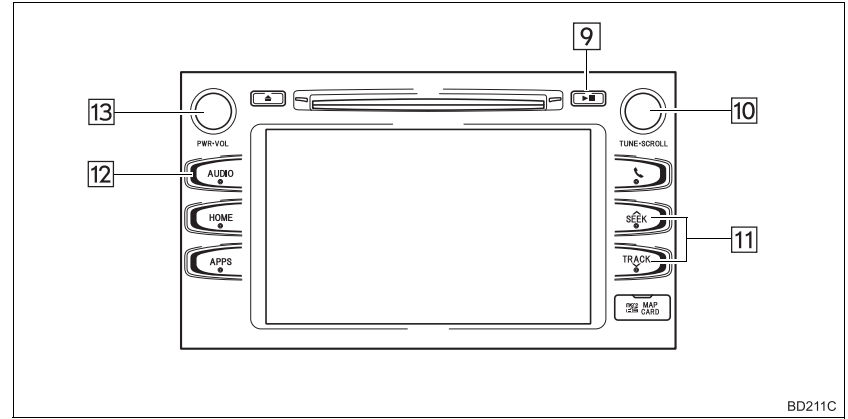

| No. | Function                                                                                                                                                                                                      |
|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to display the audio source selection screen.                                                                                                                                                          |
| 2   | Select to display the sound setting screen.                                                                                                                                                                   |
| 3   | Select to play/pause.                                                                                                                                                                                         |
| 4   | Shows progress                                                                                                                                                                                                |
| 5   | Select to set repeat playback.                                                                                                                                                                                |
| 6   | Select to set random playback.                                                                                                                                                                                |
| 7   | Select to display the play mode selection screen.<br>To return to the top screen, select " <b>Now Playing</b> " on the list screen.                                                                           |
| 8   | <ul style="list-style-type: none"> <li>• Displays cover art</li> <li>• Select to display file/track list.</li> </ul>                                                                                          |
| 9   | Press to play/pause.                                                                                                                                                                                          |
| 10  | <ul style="list-style-type: none"> <li>• Turn to select a file/track.</li> <li>• Turn to move up/down the list. Also, the knob can be used to enter selections on the list screens by pressing it.</li> </ul> |
| 11  | <ul style="list-style-type: none"> <li>• Press to select a file/track.</li> <li>• Press and hold to fast forward/rewind.</li> </ul>                                                                           |
| 12  | Press to select an audio mode.                                                                                                                                                                                |
| 13  | <ul style="list-style-type: none"> <li>• Turn to adjust volume.</li> <li>• Press to turn the audio system on/off.</li> <li>• Press and hold to restart the audio system.</li> </ul>                           |

**WARNING**

- Do not operate the player's controls or connect the USB memory while driving.

**NOTICE**

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

**INFORMATION**

- If tag information exists, the file names will be changed to track names.

## PLAYING A USB AUDIO

### REPEATING

The file/track currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

### RANDOM ORDER

Files/tracks can be automatically and randomly selected.

- 1 Select the random button to change on/off.


3. iPod

OVERVIEW


The iPod operation screen can be reached by the following methods:  
Select “iPod (DEVICE NAME)” on the “Select Audio Source” screen. (→P.78)  
▶ Connect an iPod. (→P.80)  
When the iPod connected to the system includes iPod video, the system can only output the sound by selecting the browse screen.

3  
AUDIO/VISUAL SYSTEM

CONTROL SCREEN

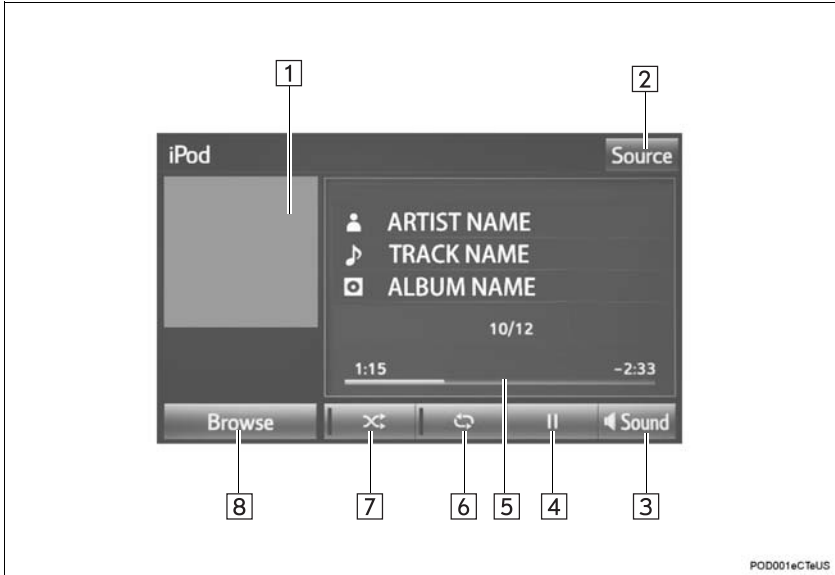

## ■ CONTROL PANEL

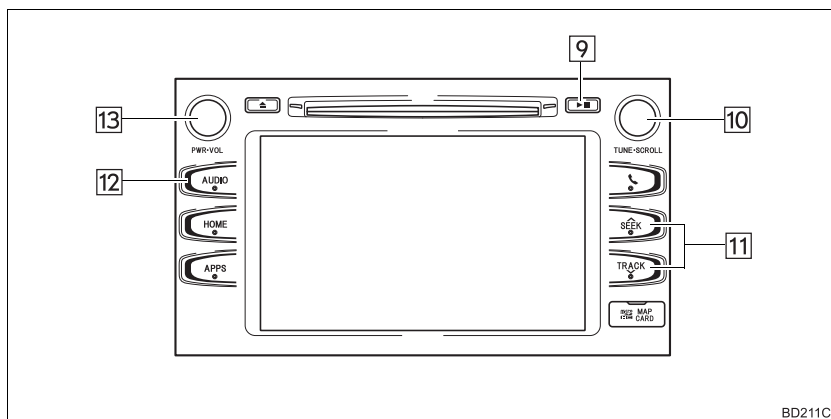

BD211C

| No. | Function                                                                                                                                                                                             |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | <ul style="list-style-type: none"> <li>Displays cover art</li> <li>Select to display a track list.</li> </ul>                                                                                        |
| 2   | Select to display the audio source selection screen.                                                                                                                                                 |
| 3   | Select to display the sound setting screen.                                                                                                                                                          |
| 4   | Select to play/pause.                                                                                                                                                                                |
| 5   | Shows progress                                                                                                                                                                                       |
| 6   | Select to set repeat playback.                                                                                                                                                                       |
| 7   | Select to set random playback.                                                                                                                                                                       |
| 8   | Select to display the play mode selection screen.<br>To return to the top screen, select <b>"Now Playing"</b> on the list screen.                                                                    |
| 9   | Press to play/pause.                                                                                                                                                                                 |
| 10  | <ul style="list-style-type: none"> <li>Turn to select a track.</li> <li>Turn to move up/down the list. Also, the knob can be used to enter selections on the list screens by pressing it.</li> </ul> |
| 11  | <ul style="list-style-type: none"> <li>Press to select a track.</li> <li>Press and hold to fast forward/rewind.</li> </ul>                                                                           |
| 12  | Press to select an audio mode.                                                                                                                                                                       |
| 13  | <ul style="list-style-type: none"> <li>Turn to adjust volume.</li> <li>Press to turn the audio system on/off.</li> <li>Press and hold to restart the audio system.</li> </ul>                        |

**WARNING**

- Do not operate the player's controls or connect the iPod while driving.

**NOTICE**

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

**INFORMATION**

- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.
- Depending on the iPod, the video sound may not be able to be heard.
- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to on/off. (→P.120) It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available.
- Files/tracks selected by operating a connected iPod may not be recognized or displayed properly.
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <http://www.toyota.com/entune/>.

## iPod AUDIO

### REPEATING

The track currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

### RANDOM ORDER

Tracks can be automatically and randomly selected.

- 1 Select the shuffle button to change on/off.

4. Bluetooth® AUDIO

The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication. This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your device does not support Bluetooth®, the Bluetooth® audio system will not function.

OVERVIEW

The Bluetooth® audio operation screen can be reached by the following methods:


Select “ **Audio**” on the “Select Audio Source” screen. (→P.78)

► Connect a Bluetooth® audio device (→P.115)


Depending on the type of portable player connected, some functions may not be available and/or the screen may look differently than shown in this manual.

3  
AUDIO/VISUAL SYSTEM

■ CONTROL SCREEN

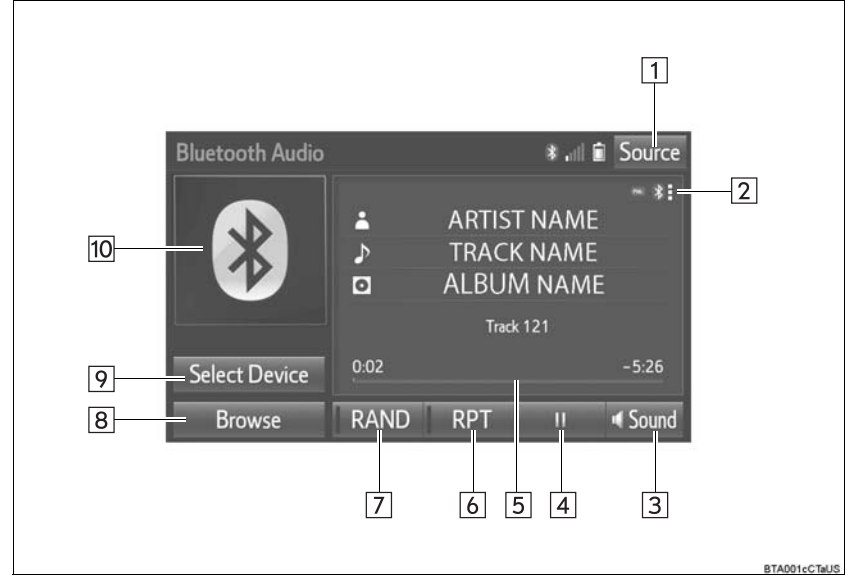

## CONTROL PANEL

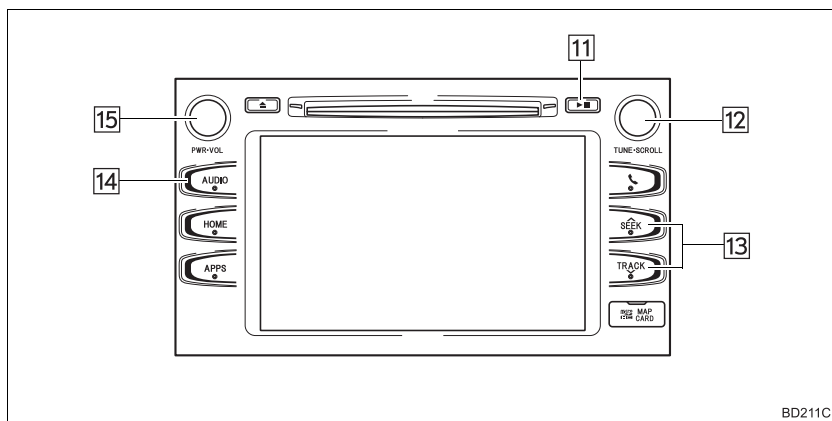

BD211C

| No. | Function                                                                                                                                                                                             |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to display the audio source selection screen.                                                                                                                                                 |
| 2   | Displays Bluetooth® device condition.                                                                                                                                                                |
| 3   | Select to display the sound settings screen.                                                                                                                                                         |
| 4   | Select to play/pause.                                                                                                                                                                                |
| 5   | Shows progress                                                                                                                                                                                       |
| 6   | Select to set repeat playback.                                                                                                                                                                       |
| 7   | Select to set random playback.                                                                                                                                                                       |
| 8   | Select to display the track list screen.<br>To return to the top screen, select <b>"Now Playing"</b> on the list screen.                                                                             |
| 9   | Select to display the portable device connection screen.                                                                                                                                             |
| 10  | <ul style="list-style-type: none"> <li>Displays cover art</li> <li>Select to display a track list.</li> </ul>                                                                                        |
| 11  | Press to play/pause.                                                                                                                                                                                 |
| 12  | <ul style="list-style-type: none"> <li>Turn to select a track.</li> <li>Turn to move up/down the list. Also, the knob can be used to enter selections on the list screens by pressing it.</li> </ul> |
| 13  | <ul style="list-style-type: none"> <li>Press to select a track.</li> <li>Press and hold to fast forward/rewind.</li> </ul>                                                                           |
| 14  | Press to select an audio mode.                                                                                                                                                                       |

| No. | Function                                                                                                                                                                            |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15  | <ul style="list-style-type: none"> <li>• Turn to adjust volume.</li> <li>• Press to turn the audio system on/off.</li> <li>• Press and hold to restart the audio system.</li> </ul> |

**WARNING**

- Do not operate the player's controls or connect to the Bluetooth® audio system while driving.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

**NOTICE**

- Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

**INFORMATION**

- Depending on the Bluetooth® device that is connected to the system, the music may start playing when selecting  while it is paused. Conversely, the music may pause when selecting  while it is playing.
- In the following conditions, the system may not function:
  - The Bluetooth® device is turned off.
  - The Bluetooth® device is not connected.
  - The Bluetooth® device has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- For operating the portable player, see the instruction manual that comes with it.
- If the Bluetooth® device is disconnected due to poor reception from the Bluetooth® network when the engine <power> switch is in the following, the system will automatically reconnect to the portable player.
  - ▶ Vehicles without a smart key system  
The engine switch is in the “ACC” or “ON” position.
  - ▶ Vehicles with a smart key system  
The engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.
- If the Bluetooth® device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.
- Bluetooth® device information is registered when the Bluetooth® device is connected to the Bluetooth® audio system. When selling or disposing of the vehicle, remove the Bluetooth® audio information from the system. (→P.64)

## CONNECTING A Bluetooth® DEVICE

To use the Bluetooth® audio system, it is necessary to register a Bluetooth® device with the system.

► Registering an additional device

- 1 Select **“Select Device”** on the Bluetooth® audio control screen.
  - 2 For more information: →P.52
- Selecting a registered device
- 1 Select **“Select Device”** on the Bluetooth® audio control screen.
  - 2 For more information: →P.54

## LISTENING TO Bluetooth® AUDIO

### REPEATING

The track currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

### RANDOM ORDER

Tracks can be automatically and randomly selected.


- 1 Select the random button to change on/off.

5. AUX


OVERVIEW

The AUX operation screen can be reached by the following methods:  
Select **“AUX”** on the “Select Audio Source” screen. (→P.78)  
▶ Connect a device to the AUX port (→P.80)

CONTROL SCREEN

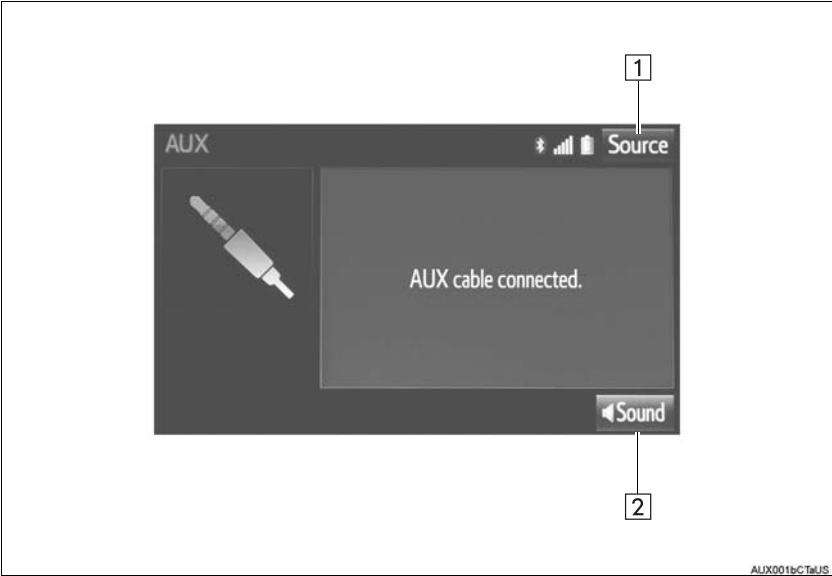

CONTROL PANEL

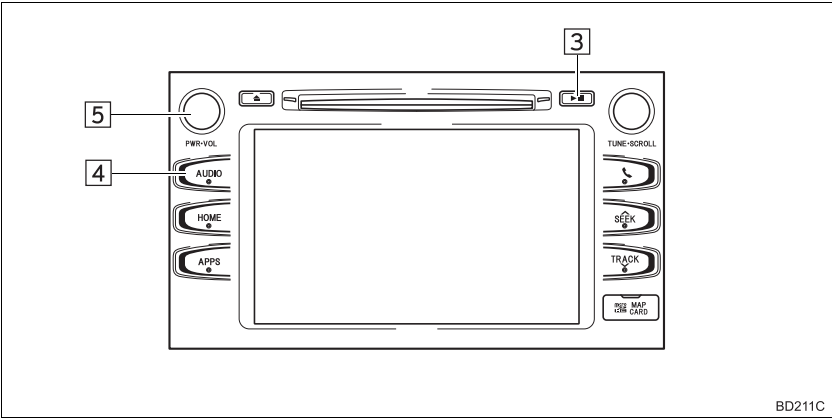

| No. | Function                                                                                                                                                                        |
|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to display the audio source selection screen.                                                                                                                            |
| 2   | Select to display the sound setting screen.                                                                                                                                     |
| 3   | Press to turn mute on/off.                                                                                                                                                      |
| 4   | Press to select an audio mode.                                                                                                                                                  |
| 5   | <ul style="list-style-type: none"><li>• Turn to adjust volume.</li><li>• Press to turn the audio system on/off.</li><li>• Press and hold to restart the audio system.</li></ul> |

 **WARNING**


- Do not connect portable audio device or operate the controls while driving.

 **NOTICE**

- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

1. STEERING SWITCHES

Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.

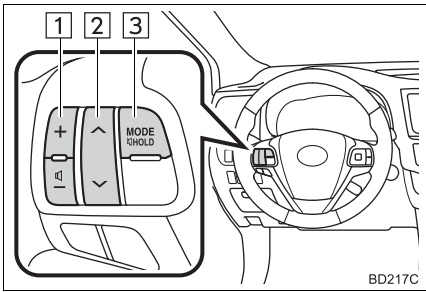

| No. | Switch                |
|-----|-----------------------|
| 1   | Volume control switch |
| 2   | “^ v” switch          |
| 3   | “MODE/HOLD” switch    |

► Volume control switch

| Mode | Operation      | Function                    |
|------|----------------|-----------------------------|
| All  | Press          | Volume up/down              |
|      | Press and hold | Volume up/down continuously |

► “V ^” switch

| Mode                                                              | Operation      | Function                                                                 |
|-------------------------------------------------------------------|----------------|--------------------------------------------------------------------------|
| AM, FM                                                            | Press          | Preset station/channel up/down<br>Station/channel list up/down           |
|                                                                   | Press and hold | Fast preset station/channel up/down<br>Fast station/channel list up/down |
| XM*                                                               | Press          | Preset channel up/down<br>Channel list up/down                           |
|                                                                   | Press and hold | Fast preset channel up/down<br>Fast channel list up/down                 |
| Audio CD, MP3/<br>WMA/AAC disc,<br>USB, iPod,<br>Bluetooth® audio | Press          | Track/file up/down<br>Track/file list up/down                            |
|                                                                   | Press and hold | Fast track/file up/down<br>Fast track/file list up/down                  |

\*: If equipped

► “MODE/HOLD” switch

| Mode                                                                                           | Operation      | Function                                                       |
|------------------------------------------------------------------------------------------------|----------------|----------------------------------------------------------------|
| AM, FM,<br>XM* <sup>1</sup> , AUX                                                              | Press          | Change audio modes                                             |
|                                                                                                | Press and hold | Mute* <sup>2</sup> (Press and hold again to resume the sound.) |
| Audio CD,<br>MP3/WMA/<br>AAC disc,<br>USB, iPod,<br>Bluetooth®<br>audio,<br>APPS* <sup>3</sup> | Press          | Change audio modes                                             |
|                                                                                                | Press and hold | Pause (Press and hold again to resume the playmode.)           |

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: For AM, FM radio, if cache radio (Entune Premium Audio only) is enabled, pressing and holding the “MODE/HOLD” switch pauses the broadcast. (Press and hold again to play back the cached radio program.)

\*<sup>3</sup>: Entune Premium Audio only


INFORMATION

- In the APPS mode, some operation may be done on the screen depend on the selected APPS.

1. AUDIO SETTINGS


Detailed audio settings can be programmed.

1 Press the “APPS” button.

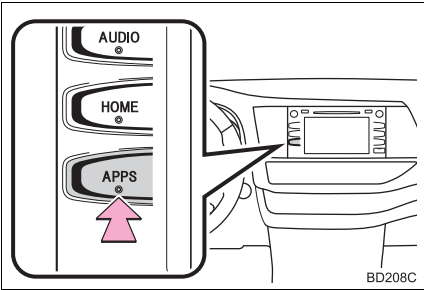

- 2 Select “Setup”.
- 3 Select “Audio”.
- 4 Select the items to be set.

AUDIO SETTINGS SCREEN

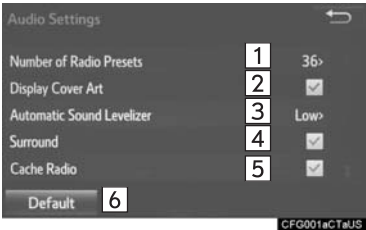


| No.             | Function                                                                               | Page |
|-----------------|----------------------------------------------------------------------------------------|------|
| 1               | Select to change the number of preset radio stations/channels displayed on the screen. | 121  |
| 2               | Select to set cover art settings on/off.                                               | —    |
| 3               | Select to set automatic sound levelizer.                                               | 80   |
| 4 <sup>*1</sup> | Select to create a feeling of presence.                                                | 80   |
| 5 <sup>*2</sup> | Select to enable cache radio.                                                          | —    |
| 6               | Select to reset all setup items.                                                       | —    |

<sup>\*1</sup>: If equipped  
<sup>\*2</sup>: Entune Premium Audio only

## SETTING THE NUMBER OF RADIO PRESETS

- 1 Display the “Audio Settings” screen.  
(→P.120)
- 2 Select “**Number of Radio Presets**”.
- 3 Select the button with the desired number to be displayed.

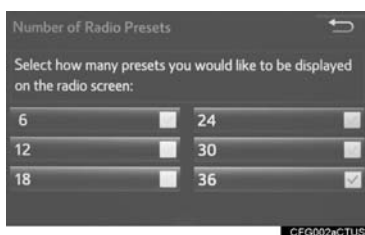

1. OPERATING INFORMATION



NOTICE

- To avoid damage to the audio/visual system:
  - Be careful not to spill beverages over the audio/visual system.
  - Do not put anything other than an appropriate disc into the disc slot.

INFORMATION

- The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/visual system which you are listening to. However, this does not indicate a malfunction.

RADIO

Usually, a problem with radio reception does not mean there is a problem with the radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

FM

**Fading and drifting stations:** Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

**Multi-path:** FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

**Static and fluttering:** These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

**Station swapping:** If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

AM

**Fading:** AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

**Station interference:** When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

**Static:** AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening or electrical motors. This results in static.

**XM**

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

**CD PLAYER AND DISC**

- This CD player is intended for use with 4.7 in. (12 cm). discs only.
- Extremely high temperatures can keep the CD player from working. On hot days, use the air conditioning system to cool the inside of the vehicle before using the player.
- Bumpy roads or other vibrations may make the CD player skip.
- If moisture gets into the CD player, the discs may not be able to be played. Remove the discs from the player and wait until it dries.

**WARNING**

- This CD player use an invisible laser beam which could cause hazardous laser radiation exposure if directed outside the unit. Be sure to operate the player correctly.

**CD PLAYER**

Audio CDs




- Use only discs marked as shown above. The following products may not be playable on your player:
  - SACD
  - dts CD
  - Copy-protected CD
  - Video CD


3

AUDIO/VISUAL SYSTEM


## ► Special shaped discs

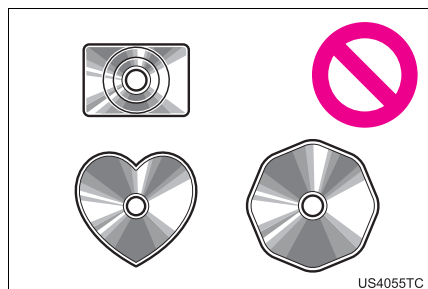


## ► Transparent/translucent discs

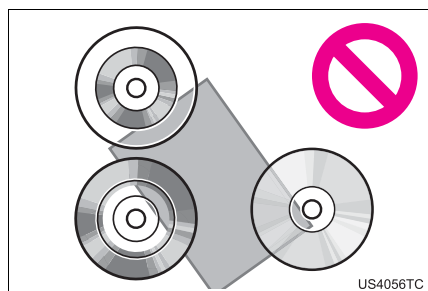


## ► Low quality discs

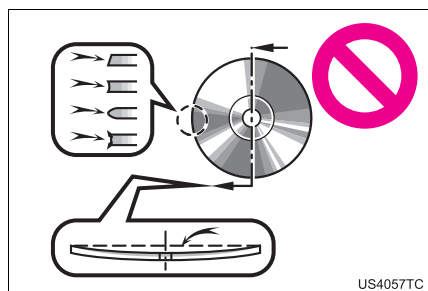


## ► Labeled discs

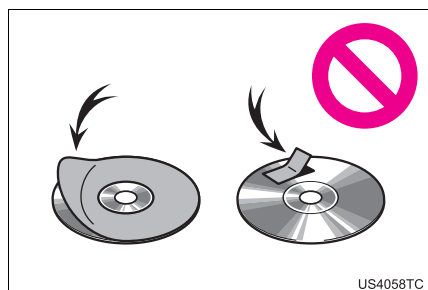**NOTICE**

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring. The use of such discs may damage the player, or it may be impossible to eject the disc.
- Do not use printable discs. The use of such discs may damage the player, or it may be impossible to eject the disc.

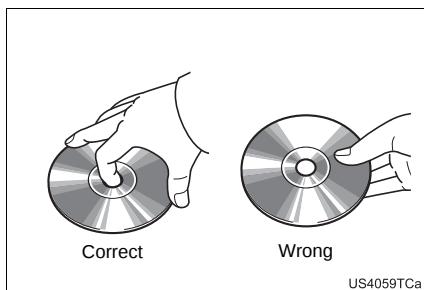

- Handle discs carefully, especially when inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when not in use. Store them in their plastic cases away from moisture, heat and direct sunlight.

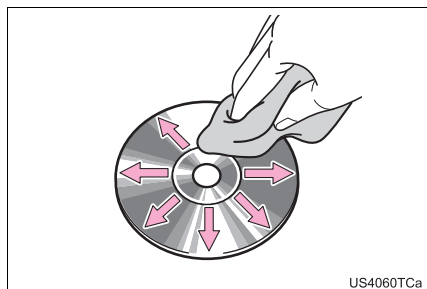

**To clean a disc:** Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

### CD-R/RW DISCS

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

### iPod

Made for



iPod



iPhone

- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.
- The Lightning connector works with iPhone 6 Plus, iPhone 6, iPhone 5s, iPhone 5c, iPhone 5, iPod touch (5th generation), and iPod nano (7th generation).
- The 30-pin connector works with iPhone 4s, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 4th generation), iPod classic, and iPod nano (1st through 6th generation).
- USB works with iPhone 6 Plus, iPhone 6, iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 5th generation), iPod classic, and iPod nano (1st through 7th generation).

## COMPATIBLE MODELS

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

### ► Entune Audio Plus

Made for

- iPod touch (5th generation)\*
- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (7th generation)\*
- iPod nano (6th generation)\*
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)\*
- iPod nano (1st generation)\*
- iPhone 5s\*
- iPhone 5c\*
- iPhone 5\*
- iPhone 4s
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

\*: iPod video not supported

This system only supports audio playback. Depending on differences between models or software versions etc., some models might be incompatible with this system.

### ► Entune Premium Audio

Made for

- iPod touch (5th generation)\*
- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (7th generation)\*
- iPod nano (6th generation)\*
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPhone 6 Plus\*
- iPhone 6\*
- iPhone 5s\*
- iPhone 5c\*
- iPhone 5\*
- iPhone 4s
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

\*: iPod video not supported

This system only supports audio playback. Depending on differences between models or software versions etc., some models might be incompatible with this system.

## FILE INFORMATION

### COMPATIBLE USB DEVICES

|                           |                                        |
|---------------------------|----------------------------------------|
| USB communication formats | USB 2.0 HS (480 Mbps) and FS (12 Mbps) |
| File formats              | FAT 16/32                              |
| Correspondence class      | Mass storage class                     |

### COMPATIBLE COMPRESSED FILES

| Item                   | USB/iPod     | DISC        |
|------------------------|--------------|-------------|
| Compatible file format | MP3/WMA/AAC  |             |
| Folders in the device  | Maximum 3000 | Maximum 192 |
| Files in the device    | Maximum 9999 | Maximum 255 |
| Files per folder       | Maximum 255  | —           |

### CORRESPONDING FREQUENCY

### SAMPLING

| File type                             | Frequency (kHz)                          |
|---------------------------------------|------------------------------------------|
| MP3 files:<br>MPEG 1 LAYER 3          | 32/44.1/48                               |
| MP3 files:<br>MPEG 2 LSF LAYER 3      | 16/22.05/24                              |
| WMA files:<br>Ver. 7, 8, 9* (9.1/9.2) | 32/44.1/48                               |
| AAC files:<br>MPEG4/AAC-LC            | 11.025/12/16/<br>22.05/24/32/<br>44.1/48 |

\*: Only compatible with Windows Media Audio Standard

### CORRESPONDING BIT RATES\*1

| File type                        | Bit rate (kbps) |
|----------------------------------|-----------------|
| MP3 files:<br>MPEG 1 LAYER 3     | 32 - 320        |
| MP3 files:<br>MPEG 2 LSF LAYER 3 | 8 - 160         |
| WMA files: Ver. 7, 8             | CBR 48 - 192    |
| WMA files:<br>Ver. 9*2 (9.1/9.2) | CBR 48 - 320    |
| AAC files:<br>MPEG4/AAC-LC       | 16 - 320        |


\*1: Variable Bit Rate (VBR) compatible

\*2: Only compatible with Windows Media Audio Standard


## COMPATIBLE CHANNEL MODES

| File type | Channel mode                                    |
|-----------|-------------------------------------------------|
| MP3 files | Stereo, joint stereo, dual channel and monaural |
| WMA files | 2ch                                             |
| AAC files | 1ch, 2ch (Dual channel is not supported)        |

- MP3 (MPEG Audio Layer 3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) are audio compression standards.
- This system can play MP3/WMA/AAC files on CD-R/CD-RW discs and USB memory.
- This system can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system and UDF (2.01 or lower).
- When naming an MP3/WMA/AAC file, add an appropriate file extension (.mp3/.wma/.m4a).
- This system plays back files with .mp3/.wma/.m4a file extensions as MP3/WMA/AAC files respectively. To prevent noise and playback errors, use the appropriate file extension.
- This system can play only the first session/border when using multi-session/border compatible discs.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. This system cannot display disc title, track title and artist name in other formats.
- WMA/AAC files can contain a WMA/AAC tag that is used in the same way as an ID3 tag. WMA/AAC tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3 files.
- This system can play back AAC files encoded by iTunes.
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.
- m3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fast forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA/AAC files.
- MP3/WMA/AAC files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than 2 levels of folders.

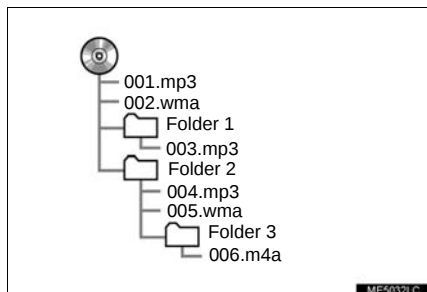

 - The play order of the compact disc with the structure shown above is as follows:



- The order changes depending on the personal computer and MP3/WMA/AAC encoding software you use.

## TERMS

### PACKET WRITE

- This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

### ID3 TAG

- This is a method of embedding track-related information in an MP3 file. This embedded information can include the track number, track title, the artist's name, the album title, the music genre, the year of production, comments, cover art and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

### WMA TAG

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

### ISO 9660 FORMAT

- This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are 2 levels of regulations.
- Level 1: The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “\_” symbol may also be included.)
- Level 2: The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

**m3u**

- Playlists created using "WINAMP" software have a playlist file extension (.m3u).

**MP3**

- MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

**WMA**

- WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.
- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

**AAC**

- AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

## ERROR MESSAGES

| Mode | Message                                                                                                   | Explanation                                                                                                                                                                    |
|------|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CD   | "No music files found."                                                                                   | This indicates that no MP3/WMA/AAC files are included in the disc.                                                                                                             |
|      | "Check Disc"                                                                                              | It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly.<br>It indicates a disc which is not playable is inserted. |
|      | "DISC Error"                                                                                              | There is a trouble inside the system.<br>Eject the disc.                                                                                                                       |
| USB  | "Connection error. Please consult your Owner's Manual for instructions on how to connect the USB device." | This indicates a problem in the USB memory or its connection.                                                                                                                  |
|      | "There are no files available for playback. Please add compatible files to your USB device."              | This indicates that no MP3/WMA/AAC files are included in the USB memory.                                                                                                       |
| iPod | "Connection error. Please consult your Owner's Manual for instructions on how to connect the iPod."       | This indicates a problem in the iPod or its connection.                                                                                                                        |
|      | "There are no songs available for playback. Please add compatible files to your iPod."                    | This indicates that there is no music data in the iPod.                                                                                                                        |
|      | "No videos found."                                                                                        | This indicates that no video files are included in the iPod.                                                                                                                   |
|      | "iPod authorization unsuccessful."                                                                        | This indicates that it failed to authorize the iPod. Please check your iPod.                                                                                                   |


### INFORMATION

- If the malfunction is not rectified: Take your vehicle to your Toyota dealer.

1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES\*

The rear seat entertainment system is designed for the rear passengers to enjoy video such as Blu-ray Disc™ (BD) and DVD disc.

The video played by the rear seat entertainment system is not displayed on the audio system's screen. In addition, the DVD video played by the audio system is not displayed on the rear seat entertainment system's screen.

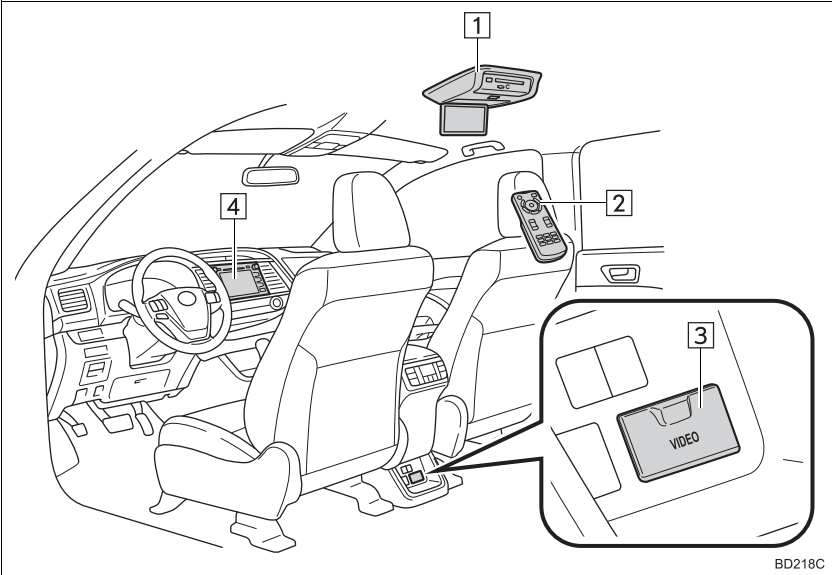

| No. | Name                           | No. | Name           |
|-----|--------------------------------|-----|----------------|
| 1   | Rear seat entertainment system | 3   | A/V input port |
| 2   | Remote controller              | 4   | Audio system   |

INFORMATION

- The rear seat entertainment system can be used when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.
- This system can use infrared wireless headphones. (→P.136)

\*: If equipped

## CERTIFICATION


### CAUTION:

- For vehicles sold in U.S.A. and Canada
- Part 15 of the FCC Rules  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Laser products  
THIS PRODUCT IS A CLASS I LASER PRODUCT. USE OF CONTROL OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR BY YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.


## DISPLAY

### OPENING THE DISPLAY

- 1 Press the lock release button to open the display.

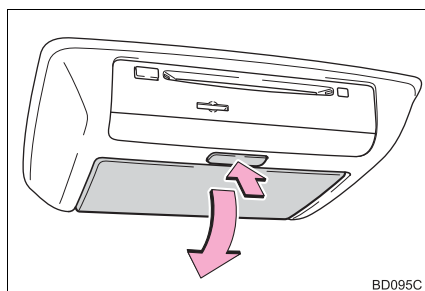


- 2 Pull the display down to an easily viewable angle.

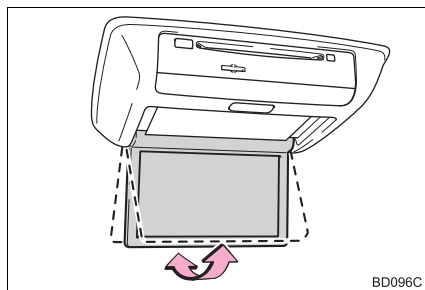

### CLOSING THE DISPLAY

- 1 Push the display up until a click is heard.

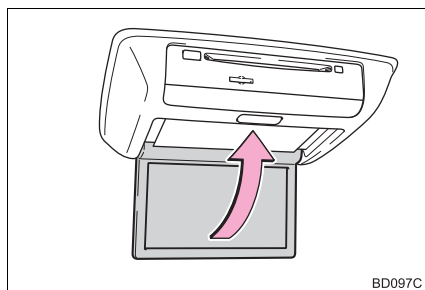

**INFORMATION**

- The illumination of the screen automatically turns off when the display is closed. However, the rear seat entertainment system is not turned off. (The sound is not turned off.)

**WARNING**


- When the rear seat entertainment system is not used
  - Keep the display closed. In the event of an accident or sudden braking, the opened display may hit an occupant's body, resulting in injury.

**NOTICE**

- Cleaning the display
  - Wipe the display with a dry soft cloth. If the screen is wiped with a rough cloth, the surface of the screen may be scratched.
- Opening and closing the display
  - When opening or closing the display, hold the bottom center of the display outer frame. Holding or pressing the LCD panel could result in display problems or LCD deterioration.

**DISC SLOT****LOADING A DISC**


- 1 Insert the disc into the slot with the label side up.

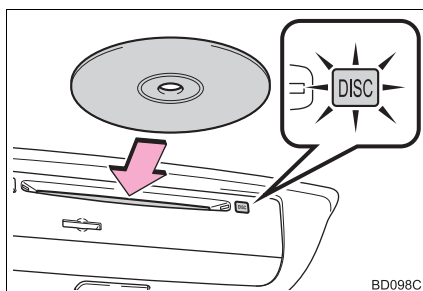

- The "DISC" indicator light turns on while the disc is loaded.
- The player will start to play the disc automatically.

**EJECTING A DISC**


- 1 Press the  button and remove the disc.

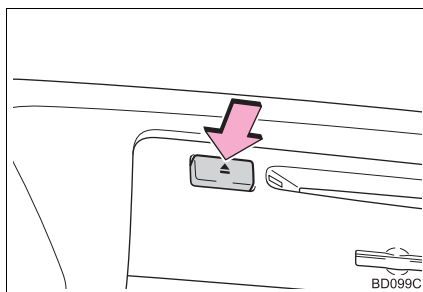**INFORMATION**

- If a disc cannot be ejected, do not forcibly take out the disc. Keep pressing the  button for approximately 10 seconds and release it.
- If the ejected disc remains in the slot for 15 seconds, the player will automatically reload the disc.

## SD CARD SLOT


- 1 Insert the SD card with the label side up, positioning the cut off corner to the right.

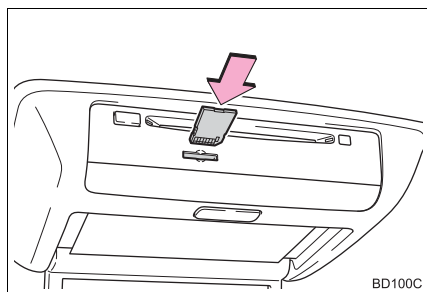

- To eject the SD card, push on the center of the SD card. When it ejects slightly pull it straight out.

## REMOTE CONTROLLER

The rear seat entertainment system can be operated with the remote controller. The system cannot be operated by touching the switches on the screen directly.

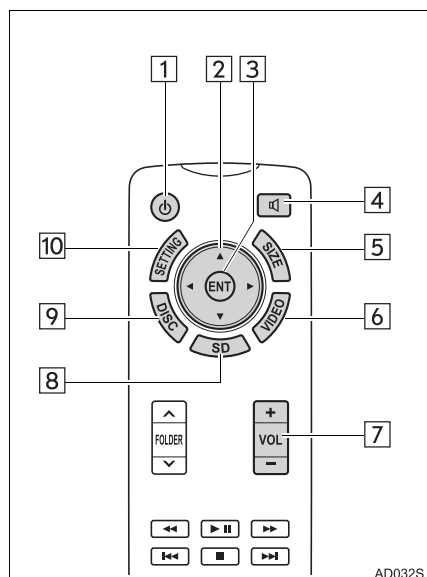

3

AUDIO/VISUAL SYSTEM

| No. | Function                                          |
|-----|---------------------------------------------------|
| 1   | Turning on/off the rear seat entertainment system |
| 2   | Selecting a control icon                          |
| 3   | Inputting the selected control icon               |
| 4   | Turning on/off the speaker output                 |
| 5   | Changing the screen size                          |
| 6   | Turning on the "VIDEO" mode                       |
| 7   | Adjusting the volume                              |
| 8   | Turning on the "SD" mode                          |

| No. | Function                      |
|-----|-------------------------------|
| 9   | Turning on the “DISC” mode    |
| 10  | Adjusting the screen settings |

TURNING ON/OFF THE REAR SEAT ENTERTAINMENT SYSTEM

- 1 Press the  button to turn on the rear seat entertainment system.
- Press the  button once again to turn off the system.

ADJUSTING THE VOLUME

- 1 Press “+” or “-” on the “VOL” button to adjust the volume.
- When the speaker output is off, the volume cannot be adjusted.

TURNING ON/OFF THE SPEAKER OUTPUT

- 1 Press the  button to turn on/off the speaker output.
- On: The sound is available from both vehicle speakers and headphones.
- Off: The sound is available from the headphones only.

CHANGING THE AUDIO/VIDEO SOURCE

- 1 Press the “DISC”, “SD” or “VIDEO” button to change the audio/video source.

SELECTING A CONTROL ICON

- 1 Press the “▲”, “▼”, “◀” or “▶” button to select the control icon on the screen.



- 2 Press the “ENT” button to enter.

CHANGING THE SCREEN SIZE

- 1 Press the “SIZE” button to change the screen size.

| Screen size | Function                                                                                    |
|-------------|---------------------------------------------------------------------------------------------|
| “Normal”    | Displays the screen at the original ratio                                                   |
| “Wide 1”    | Widens the 4:3 aspect screen horizontally to fill the screen                                |
| “Wide 2”    | Widens the screen vertically and horizontally, at the same ratio, to fill the entire screen |


INFORMATION

- The screen size can be changed for each media mode individually.


## ADJUSTING THE SCREEN SETTINGS

You can adjust the color, contrast, tone and brightness of the screen. The screen setting levels can be adjusted for day mode and night mode individually.

- 1 Press the **"SETTING"** button.
  - 2 The screen settings can be adjusted. After adjustments, select **"OK"**.
- **"DISC"** and **"SD"** mode

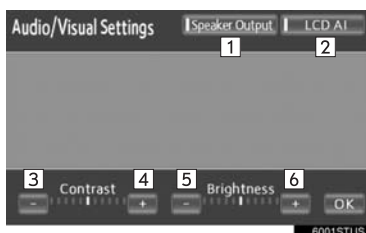


- **"VIDEO"** mode

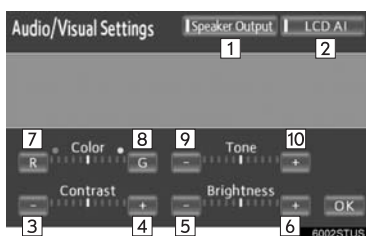

| No. | Function                              |
|-----|---------------------------------------|
| 5   | Darkens the screen                    |
| 6   | Brightens the screen                  |
| 7   | Strengthens red color of the screen   |
| 8   | Strengthens green color of the screen |
| 9   | Weakens the tone of the screen        |
| 10  | Strengthens the tone of the screen    |

## BEFORE USING THE REMOTE CONTROLLER (FOR NEW VEHICLE OWNERS)

- 1 Remove the insulating sheet.

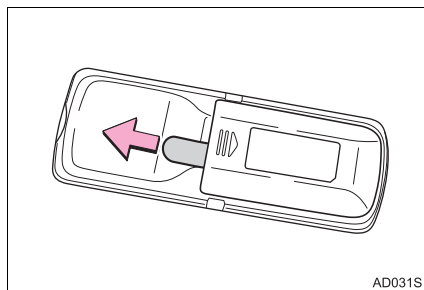


### INFORMATION

- An insulating sheet is set to prevent the batteries from being discharged.


| No. | Function                                                                                                                                                               |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Turning on/off the speaker output                                                                                                                                      |
| 2   | Turning on/off the "LCD AI". The "LCD AI" is automatically determines the tone of the video image and sets the contrast to an optimum level, displaying a sharp image. |
| 3   | Weakens the contrast of the screen                                                                                                                                     |
| 4   | Strengthens the contrast of the screen                                                                                                                                 |

### WHEN THE REMOTE CONTROLLER BATTERIES ARE FULLY DEPLETED

- 1** Remove the cover.

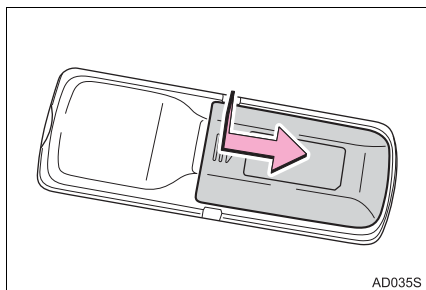

- 2** Remove the depleted batteries and install 2 new AA batteries.

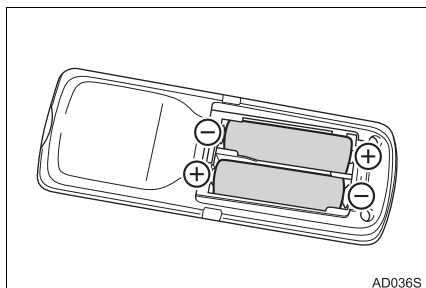

#### INFORMATION

- If the remote controller batteries are discharged, the following symptoms may occur.
  - The rear seat entertainment system control will not function properly.
  - The operational range is reduced.
- When replacing the AA batteries
  - Batteries can be purchased at your Toyota dealer, electric appliance shop, or camera stores.
  - Replace only with the same or equivalent type recommended by a Toyota dealer.
  - Dispose of used batteries according to local laws.

#### WARNING

- To prevent accidents and electric shock
  - Do not disassemble or modify the remote controller.
- When the remote controller is not used
  - Stow the remote controller. Injuries may result in the event of an accident or sudden braking.
- Removed batteries and other parts
  - Keep away from children. These parts are small and if swallowed by a child they can cause choking.


#### NOTICE

- To prevent damage to the remote controller
  - Keep the remote controller away from direct sunlight, heat and high humidity.
  - Do not drop or strike the remote controller against hard objects.
  - Do not sit on or place heavy objects on the remote controller.
- For normal operation after replacing the batteries, observe the following precautions to prevent accidents.
  - Always work with dry hands. Moisture may cause the battery to rust.
  - Do not touch or move any other components inside the remote controller.
  - Do not bend any of the battery terminals.

## OPERATING FROM THE FRONT SEATS

The rear seat entertainment system can be operated from the front seats.

- 1 Press the **"AUDIO"** button.

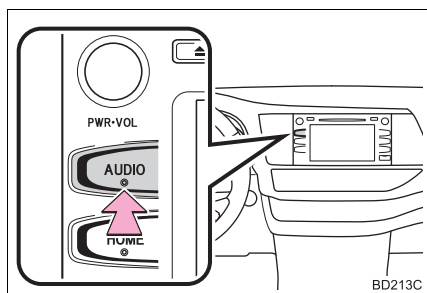

- 2 Select **"Source"** on the screen.
- 3 Select **"Rear"**.

- 4 The rear seat entertainment system can be operated from this screen.



| No. | Function                                                                                                                                                                  |
|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Turning on/off the rear seat entertainment system                                                                                                                         |
| 2   | Turning on/off the rear system lock <ul style="list-style-type: none"> <li>• The operation lock on the rear seat entertainment system can be turned on or off.</li> </ul> |
| 3   | Selecting the rear seat entertainment system's media mode                                                                                                                 |
| 4   | Audio/video operation buttons                                                                                                                                             |
| 5   | Adjusting the sound settings                                                                                                                                              |

3

AUDIO/VISUAL SYSTEM

## DISCS THAT CAN BE USED


Discs with the marks shown below can be used. Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.




- The following discs cannot be used on this system:

- SACD
- BDXL™ disc
- BD-RE with the cartridge
- HD DVD
- DVD-Audio
- Video CD


## ► Special shaped discs

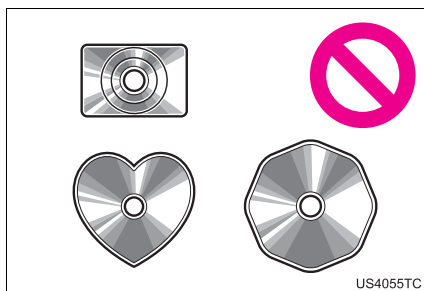


## ► Transparent/translucent discs

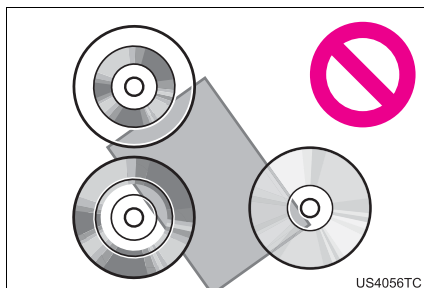

## ► Low quality discs

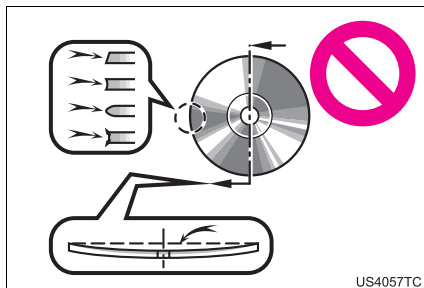

## ► Labeled discs

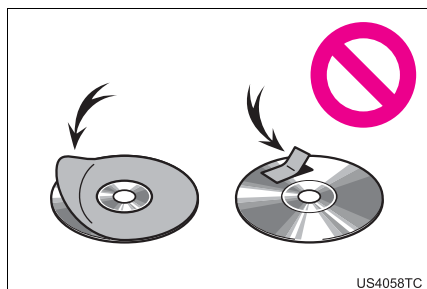**NOTICE**

- Do not special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring. The use of such discs may damage the player, or it may be impossible to eject the disc.
- Do not use printable discs. The use of such discs may damage the player, or it may be impossible to eject the disc.

**SD CARD THAT CAN BE USED**

- Memory cards are restricted to the following conditions based on SD standards.
  - SD memory card (from 512MB to 2GB)
  - SDHC memory card (from 4GB to 32GB)
  - SDXC memory card (from 48GB to 64GB)
- miniSD cards and microSD cards can be used, but must be used with an adaptor card.
- MultiMedia Card (MMC) cannot be used.

**SD CARD FUNCTIONS**

- This system can play JPEG pictures and AVCHD video images that are stored in an SD card. It does not support music playback.
- Local storage
  - Some BD videos have a feature to memorize disc information, such as a resume point, in a local storage. The rear seat entertainment system uses an SD card as a local storage device. To use this function, insert an SD card into the SD card slot.
  - The SD card memory function may differ depending on the BD videos played.
  - When an SD card that contains any kind of data is inserted, BD video disc information will not be stored into the SD card to protect the existing data in the card. To use an SD card as a local storage, use another SD card that does not contain any data.

## COPYRIGHTS AND TRADEMARKS

- Blu-ray Disc™, Blu-ray™, BD-Live™, BDXL™, and the logos are trademarks of the Blu-ray Disc Association.



- Java is a registered trademark of Oracle and/or its affiliates.



- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.



- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.



- SDXC Logo is a trademark of SD-3C, LLC.



- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. ©DTS, Inc. All Rights Reserved.



- This product is licensed under the AVC patent portfolio license and the VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC Standard and the VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

- **Cinavia Notice**

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

- This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2014 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

- WMA (Windows Media Audio), Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.

- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

- This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU General Public License, Version 2 (GPL V2),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL v2.1) and/or,
- (5) open sourced software other than the software licensed under the GPL v2 and/or LGPL v2.1

For the software categorized as (3) and (4), please refer to the terms and conditions of GPL v2 and LGPL v2.1, as the case may be at <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html> and <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>.

In addition, the software categorized as (3) and (4) are copyrighted by several individuals. Please refer to the copyright notice of those individuals at <http://car.panasonic.jp/oss/c8u23ZXg/>

The GPL/LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of products, we will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL v2/LGPL v2.1.

[Contact address]

Engineering Administration Group Manager  
Panasonic Corporation 4261  
Ikonohe-cho, Tsuzuki-ku, Yokohama City  
224-8520, Japan

Source code is also freely available to you  
and any other member of the public via  
our website below.

<http://car.panasonic.jp/oss/c8u23ZXg/>

For the software categorized as (5)  
includes as follows.

1. This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)

2. This product includes software developed by the University of California, Berkeley and its contributors.

3. Free Type code.

4. The Independent JPEG Group's JPEG software.

5. Vera Fonts. (<http://www.gnome.org/fonts/>)

2. PLAYING A Blu-ray Disc™ (BD) AND DVD DISCS

This system can play Blu-ray Disc™ (BD) videos with digital sound. In addition to commercial BD and DVD titles, AVCHD and BDAV videos can be played on this system, so digital TV recorded by home digital video recorders and BD/DVD home videos recorded by home digital video cameras can also be played on this system.


Press the **“DISC”** button if a disc has already been loaded in the disc slot.

**WARNING**

● BD/DVD video precaution

- Conversational speech on some BDs/ DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source. Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

REMOTE CONTROLLER

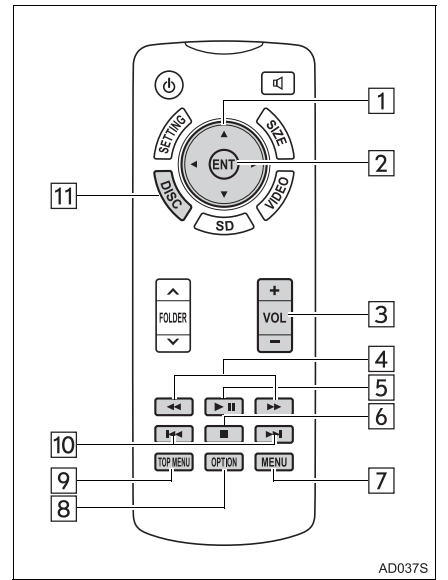

| No. | Function                            |
|-----|-------------------------------------|
| 1   | Selecting a control icon            |
| 2   | Inputting the selected control icon |
| 3   | Volume up/down                      |
| 4   | Fast-forward/rewind                 |
| 5   | Play/pause                          |
| 6   | Stop                                |
| 7   | Displaying the menu screen          |
| 8   | Displaying the option screen        |
| 9   | Displaying the top menu screen      |

| No. | Function                   |
|-----|----------------------------|
| 10  | Selecting a chapter        |
| 11  | Turning on the BD/DVD mode |

TURNING ON THE BD/DVD MODE

- 1 Insert a disc or press the “DISC” button.
- The player will start to play the disc automatically.

PLAYING/PAUSING A DISC

- 1 Press the  button to play/pause.
- Press and hold the  button while pausing, the video is playing slowly.

OPERATING THE DISC MENU

- 1 Press the “TOP MENU” or “MENU” button.
- 2 Select the menu item, and press the “ENT” button to enter.






OPTION SCREEN

Press the “**OPTION**” button while watching a BD/DVD video, the following screen appears.

Press the “**OPTION**” button once again or select “**Hide Buttons**” to turn off the option screen.

► BD video

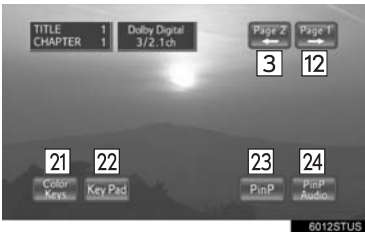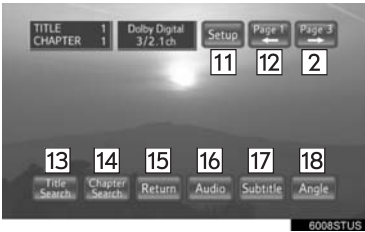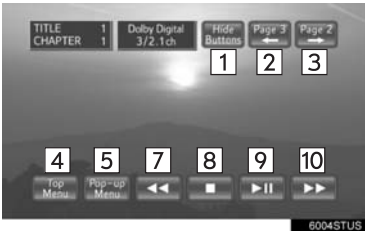


## ► DVD video



## ► AVCHD



## ► BDAV

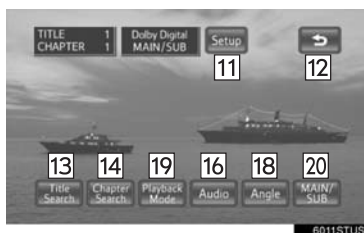

| No. | Function                            |
|-----|-------------------------------------|
| 1   | Turning off the option screen       |
| 2   | Displaying the third page           |
| 3   | Displaying the second page          |
| 4   | Displaying the top menu screen      |
| 5   | Displaying the pop-up menu          |
| 6   | Displaying the menu screen          |
| 7   | Rewind                              |
| 8   | Stop                                |
| 9   | Play/pause                          |
| 10  | Fast-forward                        |
| 11  | Displaying the initial setup screen |
| 12  | Displaying the top page             |
| 13  | Searching for a title               |
| 14  | Searching for a chapter             |


| No. | Function                                            |
|-----|-----------------------------------------------------|
| 15  | Returning to the predetermined scene                |
| 16  | Changing the audio language                         |
| 17  | Changing the subtitle language                      |
| 18  | Changing the angle                                  |
| 19  | Changing the playback mode                          |
| 20  | Changing the audio channel                          |
| 21  | Displaying the color key buttons                    |
| 22  | Displaying the 10 key pad                           |
| 23  | Displaying the secondary video (Picture-in-picture) |
| 24  | Changing the secondary audio                        |

DISPLAYING THE POP-UP MENU

▶ BD video

Some BD video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

- 1 Select “Pop-up Menu”.
- 2 Select the menu item, and press the “ENT” button to enter.

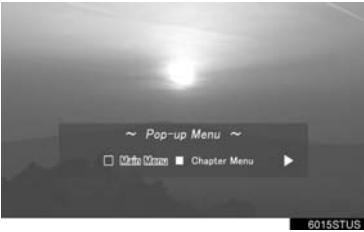

SEARCHING FOR A TITLE OR CHAPTER

- 1 Select “Title Search” or “Chapter Search”.
- 2 Input the title number or chapter number, and select “OK”.



## CHANGING THE ANGLE

The angle can be changed for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select **"Angle"**.
- 2 Each time **"Angle"** is selected, the angle changes.



## CHANGING THE SUBTITLE LANGUAGE

The subtitle language can be changed for discs with multiple subtitle languages.

- 1 Select **"Subtitle"**.
- 2 Each time **"Subtitle"** is selected, another language available on the disc is selected.



**"Hide"**: Subtitle can be hidden.

►BD video

**"Style"**: Subtitle style can be changed.

## CHANGING THE AUDIO LANGUAGE

The audio language can be changed for discs with multiple audio languages.

- 1 Select **"Audio"**.
- 2 Each time **"Audio"** is selected, another language available on the disc is selected.



## CHANGING THE AUDIO CHANNEL

►BDAV

The audio channel can be changed for discs with multiple audio channels.

- 1 Each time **"MAIN/SUB"** is selected, the mode changes in the following order:



**"MAIN"**: Main audio channel

**"SUB"**: Sub audio channel

**"MAIN/SUB"**: Both the main and sub audio channels

**CHANGING THE PLAYBACK  
MODE**

► BDAV

The playback mode can be changed to program mode or playlist mode. Playlist mode cannot be selected if a playlist is not stored on the disc.

- 1 Select **“Playback Mode”**.
- 2 Each time **“Playback Mode”** is selected, the mode changes in the following order:



“Program” mode: Playback the disc in order of program number  
“Playlist” mode: Playback the disc in order of playlist number

**DISPLAYING THE  
SECONDARY VIDEO**

► BD video

Picture-in-picture is a secondary video that plays embedded in the primary video. The secondary video can be played from a disc compatible with the picture-in-picture function.

- 1 Select **“PinP”**.
- 2 The secondary video is displayed on the screen. Each time **“PinP”** is selected, another secondary video available on the disc is selected.



**“Hide”**: Secondary video can be hidden.

## CHANGING THE SECONDARY AUDIO

### ► BD video

The secondary audio that for the secondary video can be changed.

- 1 Select **"PinP Audio"**.
- 2 Each time **"PinP Audio"** is selected, another secondary audio stored on the disc is selected.



**"OFF"**: Secondary audio can be turned off

## DISPLAYING THE COLOR KEY BUTTONS

### ► BD video

The color key button is used for various uses according to directions of contents.

- 1 Select **"Color Keys"**.
- 2 The color key buttons are displayed on the screen.



## DISPLAYING THE 10 KEY PAD

### ► BD video

The 10 key pad is used when inputting numbers according to directions of contents.


- 1 Select **"Key Pad"**.
- 2 The 10 key pad is displayed on the screen.



INITITAL SETUP

The initial setting can be changed.

- 1 Select “Setup”.
- 2 Select the settings to be changed. After the settings are changed, select “OK”.

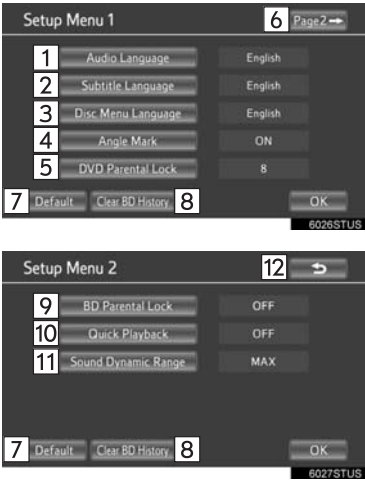

| No. | Function                      |
|-----|-------------------------------|
| 10  | Setting a quick playback      |
| 11  | Setting a sound dynamic range |
| 12  | Returns to previous page      |

CHANGING THE INITIAL AUDIO LANGUAGE

- 1 Select “Audio Language”.
- 2 Select the desired language.



- If you cannot find the desired language, select “Other” and input the desired language code. (→P.157)

CHANGING THE INITIAL SUBTITLE LANGUAGE

- 1 Select “Subtitle Language”.
- 2 Select the desired language.



- If you cannot find the desired language, select “Other” and input the desired language code. (→P.157)

| No. | Function                                                           |
|-----|--------------------------------------------------------------------|
| 1   | Changing the initial audio language                                |
| 2   | Changing the initial subtitle language                             |
| 3   | Changing the initial language of the disc menu                     |
| 4   | Setting the angle mark                                             |
| 5   | Setting the DVD parental lock                                      |
| 6   | Goes to next page                                                  |
| 7   | Restores default settings                                          |
| 8   | BD history data such as bookmarks and resume point can be deleted. |
| 9   | Setting the BD parental lock                                       |

## ■ CHANGING THE INITIAL LANGUAGE OF THE DISC MENU

- 1 Select **"Disc Menu Language"**.
- 2 Select the desired language.



- If you cannot find the desired language, select **"Other"** and input the desired language code. (→P.157)

## ■ SETTING THE ANGLE MARK

If the BD/DVD disc has angle options, you can turn the angle mark on/off.

- 1 Each time **"Angle Mark"** is selected, **"ON"** or **"OFF"** can be selected.



## ■ SETTING THE DVD PARENTAL LOCK

▶ DVD video

The level of viewer restrictions can be set.

- 1 Select **"DVD Parental Lock"**.
- 2 Input the 4-digit personal code and then select **"OK"**.



- Select  10 times to reset the personal code in case the code was forgotten.
- 3 Select a restriction level (1-8) and then select **"OK"**.



■ **SETTING THE BD PARENTAL LOCK**

► BD video

The age of viewer restrictions can be set.

- 1 Select “**BD Parental Lock**”.
- 2 Input the 4-digit personal code and then select “**OK**”.



- Select 10 times to reset the personal code in case the code was forgotten.

- 3 Input a restriction age (0-255) and then select “**OK**”.



■ **SETTING A QUICK PLAYBACK**

► BD video

After inserting a BD disc you can skip over to the first playback point and can immediately playback the main story.

Each time “**Quick Playback**” is selected, “ON” or “OFF” can be selected.



■ **SETTING A SOUND DYNAMIC RANGE**

The difference between the lowest and highest sound volumes can be adjusted.

Each time “**Sound Dynamic Range**” is selected, the setting changes in the following order:



- “MAX”: Maximum dynamic range
- “STD”: Standard dynamic range
- “MIN”: Minimum dynamic range

## BD/DVD VIDEO DISCS

## BD/DVD VIDEO DISCS

- **Compatible media**  
Media that can be used for playback are BD-ROMs, BD-Rs, BD-REs, DVD-ROMs, DVD-Rs and DVD-RWs.
- **Compatible disc formats**  
Disc formats that can be used for playback are BD video formats, BDAV formats, AVCHD formats, and DVD video formats
- This player conforms to NTSC/PAL color TV formats.
- **Region codes**  
Some BD/DVD video discs have a region code indicating the region in which you can use the BD/DVD video disc.  
If the BD video disc is not labeled "A" or "ABC" or if the DVD video disc is not labeled "1" or "ALL", you cannot use it on this player.  
If you attempt to play BD/DVD video discs with incompatible region codes on this player, an error message appears on the screen. Even if the BD/DVD video disc does not have a region code, in some cases it cannot be used.
- When storing content on BD-R, BD-RE, DVD-R or DVD-RW discs, they must be finalized using a recorder. Discs that are not finalized cannot be played by this system.
- Discs that are recorded with multi session cannot be played by this system.
- BD-Live™ is not supported.

## SYMBOLS SHOWN ON BD/DVD VIDEO DISCS

| Symbol                                                                                                                                                                                                                                                         | Meaning                                                                                                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                               | Indicates PAL/NTSC format                                                                                                                                                                                          |
|                                                                                                                                                                               | Indicates the number of audio tracks                                                                                                                                                                               |
|                                                                                                                                                                               | Indicates the number of language subtitles                                                                                                                                                                         |
|                                                                                                                                                                               | Indicates the number of angles                                                                                                                                                                                     |
| <br>                                                                                         | Indicates the screen display ratios available<br>Wide screen: 16:9<br>Standard: 4:3                                                                                                                                |
| <br><br> | Indicates the disc's region code <ul style="list-style-type: none"> <li>● BD video<br/>"ABC": all regions<br/>Alphabet: region code</li> <li>● DVD video<br/>"ALL": all regions<br/>Number: region code</li> </ul> |

## BD/DVD VIDEO DISC INFORMATION

- **Parental controls**

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the BD/DVD video disc. Some BD/DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

- **DVD video**

Level 1: DVD video discs for children can be played.

Level 2 - 7: DVD video discs for children and G-rated movies can be played.

Level 8: All types of DVD video discs can be played.

- **BD video**

Parental controls of BD videos can be set up by inputting an age. If the target age of BD video exceeds the age restriction that was set up, then playback will not be possible.

- **Multi-angle feature**

You can enjoy the same scene from different angles.

- **Multi-language option**

You can select the subtitle and audio languages.

- **Region codes**

The region codes are provided on BD/DVD players and BD/DVD discs. If the BD/DVD disc does not have the same region code as the BD/DVD player, you cannot play the disc on the player.

- **Title and chapter**

Video and audio programs stored in BD/DVD video discs are divided into parts by title and chapter.

**Title:** The largest unit of the video and audio programs stored on BD/DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

**Chapter:** A title comprises of one or more chapters.

- **AVCHD**

AVCHD is a new format (standard) for high definition video cameras that can record and play high-resolution HD images.

DVDs and SD cards with videos recorded in AVCHD format can playback on this system.

- **BD-RE (Blu-ray Disc™ Audio/visual)**

BD-RE is one of the audio/visual recording formats for Blu-ray Disc™, has been made primarily for the purpose of broadcasting the recording.

It is used when recording to BD-R and BD-RE by Blu-ray™ recorder.

- **BD-J**

Some BD video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

- **Pop-up menu**

Some BD video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

- **Picture-in-picture**

This is a function of BD video that plays the primary video and secondary video simultaneously. For instance, the function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.

- **DUBA (Disc Unbound BD-J Application)**

For BD videos that come as a 2 disc set or more, after finishing and ejecting one of the discs, continuation of the video can be seen shortly after replacing the disc with the proper disc.

- **Playlist (BD-RE only)**

A playlist of favorite scenes by Blu-ray™ recorder can be created and the scenes can playback via playlist.

## AUDIO

This player can play liner PCM, Dolby digital, DTS and MPEG audio format. Other decoded types cannot be played.


## LANGUAGE CODES LIST

| Code | Language        | Code | Language        | Code | Language         | Code | Language   |
|------|-----------------|------|-----------------|------|------------------|------|------------|
| 0514 | English         | 0515 | Esperanto       | 1201 | Latin            | 1912 | Slovenian  |
| 1001 | Japanese        | 0520 | Estonian        | 1214 | Lingala          | 1913 | Samoan     |
| 0618 | French          | 0521 | Basque          | 1215 | Laotian          | 1914 | Shona      |
| 0405 | German          | 0601 | Persian         | 1220 | Lithuanian       | 1915 | Somali     |
| 0920 | Italian         | 0609 | Finnish         | 1222 | Latvian, Lettish | 1917 | Albanian   |
| 0519 | Spanish         | 0610 | Fiji            | 1307 | Malagasy         | 1918 | Serbian    |
| 2608 | Chinese         | 0615 | Faroese         | 1309 | Maori            | 1919 | Siswati    |
| 1412 | Dutch           | 0625 | Frisian         | 1311 | Macedonian       | 1920 | Sesotho    |
| 1620 | Portuguese      | 0701 | Irish           | 1312 | Malayalam        | 1921 | Sundanese  |
| 1922 | Swedish         | 0704 | Scottish-Gaelic | 1314 | Mongolian        | 1923 | Swahili    |
| 1821 | Russian         | 0712 | Galician        | 1315 | Moldavian        | 2001 | Tamil      |
| 1115 | Korean          | 0714 | Guarani         | 1318 | Marathi          | 2005 | Telugu     |
| 0512 | Greek           | 0721 | Gujarati        | 1319 | Malay            | 2007 | Tajik      |
| 0101 | Afar            | 0801 | Hausa           | 1320 | Maltese          | 2008 | Thai       |
| 0102 | Abkhazian       | 0809 | Hindi           | 1325 | Burmese          | 2009 | Tigrinya   |
| 0106 | Afrikaans       | 0818 | Croatian        | 1401 | Nauru            | 2011 | Turkmen    |
| 0113 | Amharic         | 0821 | Hungarian       | 1405 | Nepali           | 2012 | Tagalog    |
| 0118 | Arabic          | 0825 | Armenian        | 1415 | Norwegian        | 2014 | Setswana   |
| 0119 | Assamese        | 0901 | Interlingua     | 1503 | Occitan          | 2015 | Tongan     |
| 0125 | Aymara          | 0905 | Interlingue     | 1513 | (Afan) Oromo     | 2018 | Turkish    |
| 0126 | Azerbaijani     | 0911 | Inupiak         | 1518 | Oriya            | 2019 | Tsonga     |
| 0201 | Bashkir         | 0914 | Indonesian      | 1601 | Punjabi          | 2020 | Tatar      |
| 0205 | Byelorussian    | 0919 | Icelandic       | 1612 | Polish           | 2023 | Twi        |
| 0207 | Bulgarian       | 0921 | Inuktitut       | 1619 | Pashto, Pushto   | 2107 | Uighur     |
| 0208 | Bihari          | 0923 | Hebrew          | 1721 | Quechua          | 2111 | Ukrainian  |
| 0209 | Bislama         | 1009 | Yiddish         | 1813 | Rhaeto-Romance   | 2118 | Urdu       |
| 0214 | Bengali, Bangla | 1023 | Javanese        | 1814 | Kirundi          | 2126 | Uzbek      |
| 0215 | Tibetan         | 1101 | Georgian        | 1815 | Romanian         | 2209 | Vietnamese |
| 0218 | Breton          | 1111 | Kazakh          | 1823 | Kinyarwanda      | 2215 | Volapük    |
| 0301 | Catalan         | 1112 | Greenlandic     | 1901 | Sanskrit         | 2315 | Wolof      |
| 0315 | Corsican        | 1113 | Cambodian       | 1904 | Sindhi           | 2408 | Xhosa      |
| 0319 | Czech           | 1114 | Kannada         | 1907 | Sango            | 2515 | Yoruba     |
| 0325 | Welsh           | 1119 | Kashmiri        | 1908 | Serbo-Croatian   | 2601 | Zhuang     |
| 0401 | Danish          | 1121 | Kurdish         | 1909 | Sinhalese        | 2621 | Zulu       |
| 0426 | Bhutani         | 1125 | Kirghiz         | 1911 | Slovak           |      |            |

3. PLAYING AN AUDIO CD AND MP3/WMA DISCS

Press the “**DISC**” button if a disc has already been loaded in the disc slot.  
The player will start to play the disc automatically.

REMOTE CONTROLLER

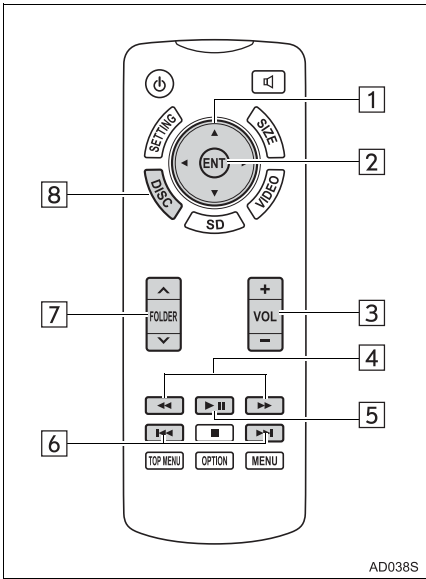

CONTROL SCREEN



| No. | Function        |
|-----|-----------------|
| 1   | Repeat play     |
| 2   | Random playback |

TURNING ON THE AUDIO CD AND MP3/WMA MODE

- 1 Insert a disc or press the “**DISC**” button.
- The player will start to play the disc automatically.

SELECTING A TRACK/FILE

- 1 Press or until the desired track/file number appears.

FAST FORWARDING OR REWINDING A TRACK/FILE

- 1 Press and hold or .

| No. | Function                                 |
|-----|------------------------------------------|
| 1   | Selecting a control icon                 |
| 2   | Inputting the selected control icon      |
| 3   | Volume up/down                           |
| 4   | Fast-forward/rewind                      |
| 5   | Play/pause                               |
| 6   | Selecting a track/file                   |
| 7   | Selecting a folder                       |
| 8   | Turning on the audio CD and MP3/WMA mode |

## SELECTING A FOLDER

### ► MP3/WMA

- 1 Press “**^**” or “**v**” on the “**FOLDER**” button until the desired folder number appears.
- Press and hold “**v**” on the “**FOLDER**” button, the top file stored in the top folder in the disc will be selected.

## REPEAT PLAY

- 1 Each time “**RPT**” is selected, the mode changes as follow:

### ► Audio CD

“**RPT**” (track repeat) → Off

### ► MP3/WMA

“**RPT**” (file repeat) → “**FLD.RPT**” (folder repeat) → Off

## RANDOM PLAYBACK

- 1 Each time “**RAND**” is selected, the mode changes as follow:

### ► Audio CD

“**RAND**” (random) → Off

### ► MP3/WMA

“**RAND**” (1 folder random) → “**FLD.RAND**” (1 disc random) → Off

## MP3 AND WMA FILES

MP3 (MPEG Audio LAYER3) is a standard audio compression format. Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format. This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and to the media/formats recorded by them that can be used.

- MP3 file compatibility
  - Compatible standards  
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
  - Compatible sampling frequencies  
MPEG1 LAYER3: 32, 44.1, 48 (kHz)  
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
  - Compatible bit rates (compatible with VBR)  
MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)  
MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
  - Compatible channel modes: stereo, joint stereo, dual channel and mono
- WMA file compatibility
  - Compatible standards  
WMA Ver. 7, 8, 9
  - Compatible sampling frequencies  
32, 44.1, 48 (kHz)
  - Compatible bit rates (only compatible with 2-channel playback)  
Ver. 7, 8, 9: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)

- **Compatible media**

Media that can be used for MP3 and WMA playback:

- CD-ROM/R/RW
- DVD-ROM/R/RW

Playback in some instances may not be possible, depending on the status of the disc. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- **Compatible disc formats**

The following disc formats can be used.

- Disc formats: CD-ROM Mode 1, CD-ROM XA Mode 2 Form 1
  - File formats: ISO9660 Level 1, Level 2 (Romeo, Joliet), UDF (2.01 or lower)
- MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels
- Maximum length of folder names/file names: 20 characters
- Maximum number of folders: 255 (including the root)
- Maximum number of files per disc: 512

- **File names**

- The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- **Multi-sessions**

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files.

- **ID3 and WMA tags**

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- **MP3 and WMA playback**

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

If the discs contain a mixture of music data and MP3 or WMA format data, only music data can be played.

- **Extensions**

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

- **Playback**


- To play MP3 files with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- Playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.

4. PLAYING AN SD CARD

This system can play still pictures and AVCHD video that are stored in an SD card. It does not support music playback.

Press the “SD” button if an SD card has already been inserted in the SD card slot.


REMOTE CONTROLLER

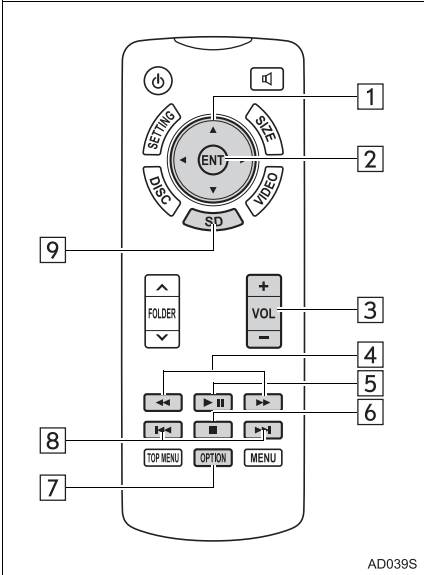

| No. | Function                            |
|-----|-------------------------------------|
| 1   | Selecting a control icon            |
| 2   | Inputting the selected control icon |
| 3   | Volume up/down                      |
| 4   | Fast-forward/rewind                 |
| 5   | Play/pause                          |
| 6   | Stop                                |
| 7   | Displaying the option screen        |

| No. | Function                    |
|-----|-----------------------------|
| 8   | Selecting a chapter         |
| 9   | Turning on the SD card mode |

MAIN MENU

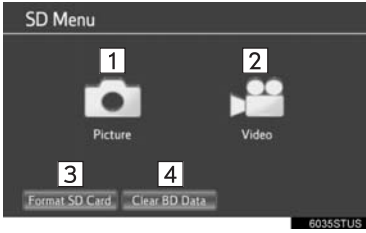


| No. | Function                     | Page |
|-----|------------------------------|------|
| 1   | Playing still pictures       | 162  |
| 2   | Playing AVCHD video          | 163  |
| 3   | Formatting the SD card       | 164  |
| 4   | Deleting the BD history data | 164  |

PLAYING STILL PICTURES

You can display still pictures that are stored in an SD card.

- 1 Select “Picture”.

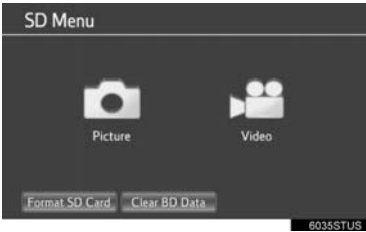

- 2 Select the desired still picture to show.



- Select  or  to show the next or previous page.


- 3 Selected picture is displayed on the screen.



- Press the “◀” or “▶” button to display the next or previous still picture.
- Press the “SD” button to return to the “SD Menu” screen.

OPTION SCREEN

Press the “**OPTION**” button while displaying a still picture, the following screen appears. Press the “**OPTION**” button once again or select “**Hide Buttons**” to turn off the option screen.

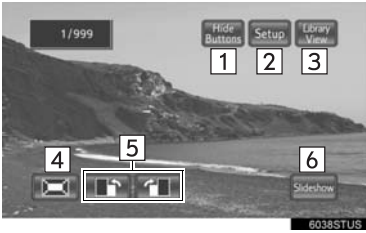

| No. | Function                              |
|-----|---------------------------------------|
| 1   | Turning off the option screen         |
| 2   | Displaying the slideshow setup screen |
| 3   | Returning to “Library View” screen    |
| 4   | Zooming out the still pictures        |
| 5   | Rotating the still pictures           |
| 6   | Starting slideshow                    |

STARTING SLIDESHOW

You can display still pictures one by one at a constant interval.

- 1 Select “**Slideshow**” to start slideshow.

- When pressing the “◀” or “▶” button during slideshow, the previous or next still picture will be shown, and the slideshow will continue from that picture.
- Press the “ENT” or “**OPTION**” button to stop slideshow.

## ROTATING THE STILL PICTURES

- 1 Select  or  to rotate a still picture.
- The rotate information will be maintained until the system is turned off or the SD card is removed.

## ZOOM OUT THE STILL PICTURES

- 1 Select  to zoom out the still pictures.
- Select  again to cancel zoom out.
- This function is only available for small-sized still pictures.

## SLIDESHOW SETUP


- 1 Select “Setup”.
- 2 The slideshow settings can be changed. After the settings are changed, select “OK”.



## PLAYING AVCHD VIDEO

You can play AVCHD videos that are stored in an SD card.

- 1 Select “Video”.

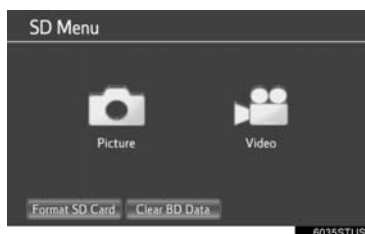

- 2 AVCHD video will start playing.



- Press the “SD” button to return to the “SD Menu” screen.
- Press the “OPTION” button while watching a video, the option screen appears. For details on operating the option screen of AVCHD video, see “OPTION SCREEN” on page 162.

| No. | Function                                                                                       |
|-----|------------------------------------------------------------------------------------------------|
| 1   | Selects slideshow interval time (seconds)<br>5 → 10 → 15 → 30 → 60                             |
| 2   | Selects slideshow effect<br>“Fade” → “Slide” → “Wipe1” → “Wipe2” → “Dissolve” → “Zoom” → “OFF” |
| 3   | Selects on/off repeat slideshow                                                                |
| 4   | Restores default settings                                                                      |

## FORMATTING THE SD CARD

- 1 Select **"Format SD Card"**.
  - 2 Select **"Yes"** to format the SD card.
- If the SD card is formatted, all data on the card will be erased.

## DELETING THE BD HISTORY DATA

The BD history data such as book-marks and resume information can be deleted.

- 1 Select **"Clear BD Data"**.
- 2 Select **"Yes"** to delete the BD history data.

## SD CARD INFORMATION

- **Compatible files**  
The following files can be displayed.
  - **Picture file format: JPEG**
    - Picture resolution: between  $34 \times 34$  and  $8192 \times 8192$  pixels
    - Gray scale JPEG is not supported
  - **Video file format: AVCHD**
- **Compatible formats**  
This system is compatible with SD memory cards that meet SD card specifications FAT16 formats, SDHC memory cards in FAT32 format, and SDXC memory cards in exFAT format.
- An SD card is not provided with the rear seat entertainment system and needs to be purchased separately.
- The Panasonic SD memory card format software version 4.0 or higher is recommended.
- Data stored in an SD card may be lost. Before playing back pictures and videos stored in an SD card, make certain to back up the data.
- Before an SD card that contains any kind of data is played, slide the lock switch on the SD card to "LOCK" in order to prevent any data from being accidentally deleted or overwritten.

**WARNING**

- SD cards
  - Keep away from children. These are small and if swallowed by a child they can cause choking.

**NOTICE**


- Failure to follow the precautions below may result in damage to the SD cards or the SD card slot.
  - Do not insert anything other than an SD card into the SD card slot.
  - Do not stick labels or stickers on SD card. There is a possibility that it may become impossible to eject the SD card from inside the slot.
  - Do not handle an SD card with wet hands. Doing so may cause electric shock or a malfunction.
  - Do not allow hands or metal objects to contact the interface pins of SD cards.
  - Do not place SD cards on the instrument panel, on any place with direct sunlight or in areas with a lot of moisture.
  - Do not use SD cards in any place where static electricity or electric noise adversely affects SD cards. This may cause data corruption or data loss.
  - Always place the SD card in its storage case when not in use.

5. USING THE VIDEO MODE

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input port.

Press the **“VIDEO”** button to turn on the video mode.

REMOTE CONTROLLER

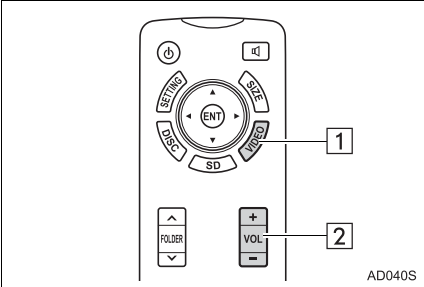


AD040S

| No. | Function                  |
|-----|---------------------------|
| 1   | Turning on the video mode |
| 2   | Volume up/down            |

USING THE A/V INPUT PORT

- 1 Open the cover and connect audio-video equipment to the A/V input port.

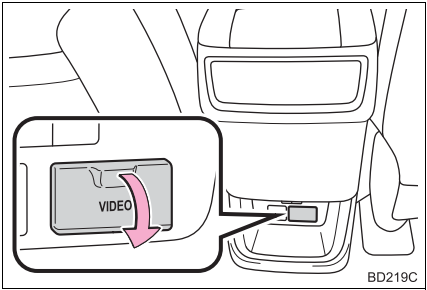

- The A/V input port is composed of 3 input jacks.  
Yellow: Video input  
White: Left channel audio input  
Red: Right channel audio input
- 2 Turn on the power of the audio-video equipment.
- 3 Press the **“VIDEO”** button to turn on the video mode.

INFORMATION

- The volume can be adjusted using the vehicle's audio controls. All other operations must be made on the audio-video equipment itself.  
For details about operation of audio-video equipment, refer to the manufacturer's instructions.

 **NOTICE**

● When the A/V input port is not in use, keep the A/V input port cover closed. Inserting anything other than an appropriate plug may cause electrical failure.

## VOICE COMMAND SYSTEM

**1 VOICE COMMAND SYSTEM  
OPERATION**

- 1. VOICE COMMAND SYSTEM..... 168**  
    USING THE VOICE COMMAND  
    SYSTEM..... 168  
    VOICE COMMAND SYSTEM  
    OPERATION ..... 169
- 2. CASUAL SPEECH  
    RECOGNIZATION..... 174**
- 3. COMMAND LIST ..... 175**

**2 MOBILE ASSISTANT  
OPERATION**

- 1. MOBILE ASSISTANT..... 178**


## 1. VOICE COMMAND SYSTEM

The voice command system enables the audio, hands-free systems, etc. to be operated using voice commands.

Refer to the command list for samples of voice commands. (→P.175)

### USING THE VOICE COMMAND SYSTEM


#### STEERING SWITCH

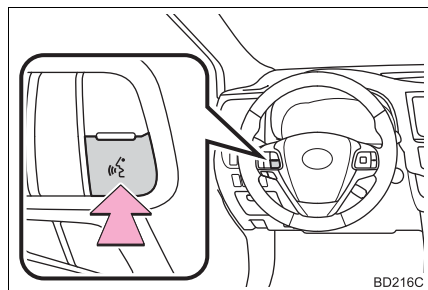


- Press the talk switch to start the voice command system.
- To cancel voice recognition, press and hold the talk switch.

#### MICROPHONE

##### ► Type A

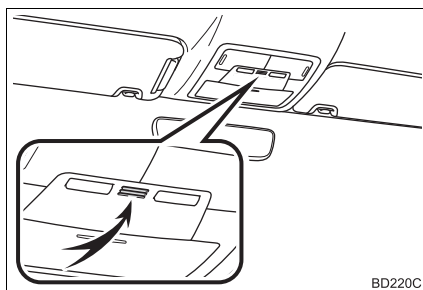

##### ► Type B

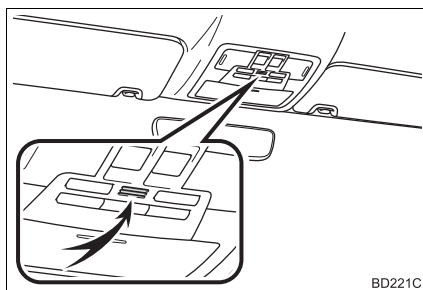

- It is unnecessary to speak directly into the microphone when giving a command.

**INFORMATION**


- The voice command system can be operated while guidance is being spoken, when "Voice Prompt Interrupt" (→P.66) is set to on. (It is not necessary to wait for the confirmation beep before speaking a command.)
- Voice commands may not be recognized if:
  - Spoken too quickly.
  - Spoken at a low or high volume.
  - The roof or windows are open.
  - Passengers are talking while voice commands are spoken.
  - The air conditioning speed is set high.
  - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
  - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
  - There is excessive background noise, such as wind noise.

**VOICE COMMAND SYSTEM OPERATION**

The voice command system is operated by speaking commands corresponding to each function. Also you can confirm the each command by selecting a tab.

The tabs are found on the upper part of the screen.

- 1 Press the talk switch.
- 2 Select "OK" or press the talk switch.

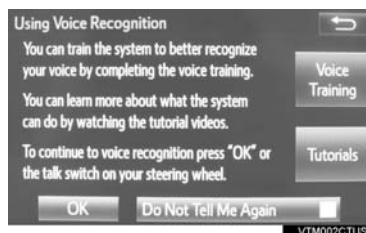

- For details about this screen: →P.170
- 3 Say the tab selection command or select the desired tab.



- Commands related with each function are displayed on the screen of the each function tab. Some commonly used commands are displayed on the screen of the function tab.
- Selecting "Help" or saying "Help" prompts voice guidance to offer examples of commands and operation methods.

4 Say the command displayed on the screen.




- Registered POIs, registered names in the contacts list etc., can be said in the place of the "<>" next to the commands. (→P.175)  
For example: Say **"Find nearby dining"**, **"Call John smith"** etc.
- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
  - Say **"Go back"**.
  - Select **"Go Back"**.
- To cancel voice recognition, select **"Cancel"**, or press and hold the talk switch.

INFORMATION

- If the system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- "Voice Recognition Prompts" can be set on the "Voice Settings" screen. (→P.66)
- Some voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.


DISPLAYING THE "Voice Settings" SCREENS

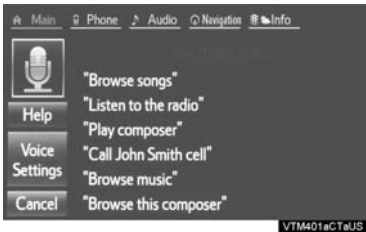

- Selecting **"Voice Settings"** can be displayed the "Voice Settings" screen. (→P.66)

INCREASING THE VOICE RECOGNITION PERFORMANCE

- 1 Press the talk switch.
- 2 Select the desired item to be set.

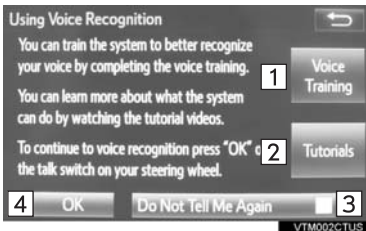

| No. | Function                                                                                                                                                |
|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to train voice recognition. The user will be asked to say 10 sample phrases. This will help the voice command system adapt to the user's accent. |
| 2   | Select to display the voice recognition tutorial.                                                                                                       |
| 3   | Select to prevent the screen from being displayed again.                                                                                                |
| 4   | Select to continue the voice recognition.                                                                                                               |

### VOICE COMMAND EXAMPLE: LAUNCH Entune App Suite APPLICATION\*

- 1 Press the talk switch.
- 2 Say **"Launch <application name>"**.
  - Entune App Suite application screen is displayed.

### VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS (ENGLISH ONLY)\*

- 1 Press the talk switch.
  - 2 Say **"Enter an address"**.
  - 3 Say **"<house number, street name, city name, State>"** continuously.
    - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say **"<number>"** or select the number.
    - Some areas cannot be recognized by the voice recognition system.
- For information regarding the state/province setting to perform a destination search by address: →P.320
- 4 Say **"Go directly"**.
    - After this, follow the voice guidance and search for a destination route by voice command operation.

### INFORMATION

- The voice command recognition is designed to recognize the main body of the official street name.

For example: if the official street name is "East Main Street", the voice command recognition will recognize "Main".

- Say the desired number, cardinal direction etc. in the place of the "<>".

For example: Say **"West 555"**.

- Inputting the house number can be skipped.
- Even if the state set using voice recognition is different from the set state in the "Address" screen (which was set when a destination was set manually), the set state in the "Address" screen will not change. (→P.321)
- The house number voice recognition conditions are outlined below:
  - Numerals: 10 digits or less
  - Numerals and cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say **"and"**.)
  - Cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say **"and"**.)
  - Numerals are recognized as single digits only.
  - The cardinal direction and hyphens are only recognized once.
  - The following cardinal directions can be recognized: North, East, West and South.

### VOICE COMMAND EXAMPLE: SEARCH FOR A SONG

- 1 Press the talk switch.
- 2 Say **"Play song <name>"**.
  - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "**<number>**" or select the number.
  - The system starts playing music and the audio top screen is displayed.

#### INFORMATION

- The Gracenote database is only compatible with the USB or iPod mode.
- A USB memory or iPod must be connected to enable track searching and playback. (→P.103, 107)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
  - When the USB memory or iPod data has changed.
  - When the voice recognition language is changed. (→P.59)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.

### VOICE COMMAND EXAMPLE: CALL NAME

- 1 Press the talk switch.
- 2 Say **"Call <contacts> <phone types>"**.
  - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "**<number>**" or select the number.

#### INFORMATION

- In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying **"Call a contact"** say the name, or the name and type of phone, of a contact.  
For example: **"Call a contact"**, **"John Smith"** or **"Call a contact"**, **"Mary Davis"**, **"Mobile"**
- There are 4 types of phones: Home, Mobile, Work and Other.
- Short or abbreviated names in the contacts list may not be recognized. Change names in the contacts list to full names.
- Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say **"Yes"** or **"No"**.
- When the system recognizes multiple names from the contacts list, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say or select the number of the name from the candidate list (number 1, number 2, etc.) to select a name from the candidate list.
- When a contact has multiple phone numbers registered in the contacts list, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say or select the number of the desired phone number from the candidate list (number 1, number 2, etc.) to select a phone number from the candidate list.

## VOICE COMMAND EXAMPLE: DIAL NUMBER

- 1 Press the talk switch.
- 2 Say the phone number.
  - In the same manner as it is displayed on the screen, "Dial <number>", after saying **"Dial a number"** say the phone number.
  - Say the phone number one digit at a time. For example, if the phone number is 2345678:  
Say **"two three four five six seven eight"**  
Do not say **"twenty three forty five sixty seven eight"**
- 3 Say **"Call"** or press the  switch on the steering wheel.

- When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen.

Pressing the  switch on the steering wheel makes a call to the top entry on the list. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list to select a phone number from the candidate list.

2. CASUAL SPEECH RECOGNITION

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation. Not all voice commands are displayed in the function menu.

INFORMATION

- If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

EXPRESSION EXAMPLES FOR EACH FUNCTION

| Command                        | Expression examples                                                     |
|--------------------------------|-------------------------------------------------------------------------|
| "Go Home"*1                    | Navigate to my house.<br>Take me home.                                  |
| "Enter an Address"*1           | I need directions to an address.<br>Give me a street.                   |
| "Find Nearby <POI category>"*1 | Search for a <Restaurants> around here.<br>Find a <Restaurants> nearby. |
| "Call <name> <type>"           | Get me <Robert Brown>.<br>Call <contacts> <phonetypes>.                 |
| "Dial <number>"                | Call <911>.                                                             |
| "Play Artist <name>"*2         | Play the artist <name>.<br>I want to hear the band <name>.              |
| "Play Album <name>"*2          | Play album <name>.                                                      |

\*1: Entune Premium Audio only

\*2: Only for external music device

3. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- Frequently used commands are listed in the following tables.
  - For devices that are not installed in the vehicle, the related commands will not be displayed in the screen. Also, according to conditions, other commands may not be displayed in the screen.
  - The functions available may vary according to the system installed.
- Voice recognition language can be changed. (→P.59)

► Basic

| Command                          | Action                                                                    |
|----------------------------------|---------------------------------------------------------------------------|
| "Help"                           | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back"                        | Returns to the previous screen                                            |
| "Number one/two/three/four/five" | Selects the number on the list screen                                     |
| "Next Page"                      | Displays the next page                                                    |
| "Previous Page"                  | Displays the previous page                                                |
| "Go to <tab>"                    | Displays the command list of the selected tab                             |

► Apps\*

When the voice recognition language is set to English.

| Command         | Action                                     |
|-----------------|--------------------------------------------|
| "Launch <apps>" | Activates the Entune App Suite application |

\*: Entune Premium Audio only

► Navigation\*1

| Command                      | Action                                                        |
|------------------------------|---------------------------------------------------------------|
| “Find Nearby <POI category>” | Displays a list of <POI category*2> near the current position |
| “Enter an Address”           | Enables setting a destination by saying the address           |
| “Go Home”                    | Displays the route to home                                    |
| “Cancel Route”               | Stops the route guidance                                      |
| “Web search”                 | Set the web search engine.                                    |

\*1: Entune Premium Audio only

\*2: For example; “Gas stations”, “Restaurants”, etc.

► Phone

| Command                        | Action                                                                 |
|--------------------------------|------------------------------------------------------------------------|
| “Redial”                       | Places a call to the phone number of the latest outgoing call          |
| “Call Back”                    | Places a call to the phone number of latest incoming call              |
| “Show Recent Calls”            | Displays the call history screen                                       |
| “Dial <phone number>”          | Places a call to the said phone number                                 |
| “Call <contacts> <phonetypes>” | Place a call to the said phone type of the contact from the phone book |

► Audio

| Command                | Action                                  |
|------------------------|-----------------------------------------|
| “Play Playlist <name>” | Plays tracks from the selected playlist |
| “Play Artist <name>”   | Plays tracks from the selected artist   |
| “Play Song <name>”     | Plays the selected track                |
| “Play Album <name>”    | Plays tracks from the selected album    |

► Information\*

| Command         | Action                       |
|-----------------|------------------------------|
| "Show Forecast" | Displays weather information |
| "Show Traffic"  | Displays traffic information |

\*: Available models and available country and areas (→P.182, 184)

**INFORMATION**


- Commands relating to operation of the audio can only be performed when the audio is turned on.

## 2. MOBILE ASSISTANT OPERATION


### 1. MOBILE ASSISTANT

The Mobile Assistant feature will activate Apple's Siri® Eyes Free mode via the steering wheel switches. To operate the Mobile Assistant, a compatible cellular phone must be registered and connected to this system via Bluetooth®. (→P.44)

- 1 Press and hold the  on the steering wheel until you hear the beeps.

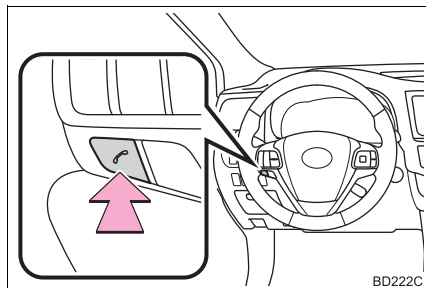

- 2 The Mobile Assistant can be used only when the following screen is displayed.

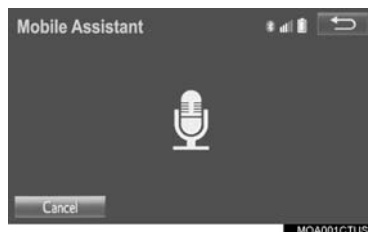

- To cancel the Mobile Assistant, select "Cancel", or press the  on the steering wheel, or press and hold the  on the steering wheel.
- To restart the Mobile Assistant for additional commands, press the  on the steering wheel.
  - Mobile Assistant can only be restarted after the system responds to a voice command.

- After some phone and music commands, the Mobile Assistant feature will automatically end to complete the requested action.

- The volume of the Mobile Assistant can be adjusted using the "PWR·VOL" knob or steering wheel volume control switches. The Mobile Assistant and phone call volumes are synchronized.

#### INFORMATION

- The available features and functions may vary based on the iOS version installed on the connected device.
- Some Siri features are limited in Eyes Free mode. If you attempt to use an unavailable function, Siri will inform you that the function is not available.
- If Siri is not enabled on the cellular phone connected via Bluetooth®, an error message will be displayed on the screen.
- While a phone call is active, the Mobile Assistant cannot be used.
- If using the navigation feature of the cellular phone, ensure the active audio source is Bluetooth® audio or iPod in order to hear turn by turn direction prompts.

**MICROPHONE**

It is not necessary to speak directly into the microphone when using the Mobile Assistant. (Microphone location: →P.168)

**INFORMATION**

- Wait for the listening beeps before using the Mobile Assistant.
- The Mobile Assistant may not recognize commands in the following situations:
  - Spoken too quickly.
  - Spoken at a low or high volume.
  - The roof or windows are open.
  - Passengers are talking while the Mobile Assistant is being used.
  - The air conditioning speed is set high.
  - The air conditioning vents are turned toward the microphone.

## 2. MOBILE ASSISTANT OPERATION

## INFORMATION

**1 USEFUL INFORMATION**

- 1. RECEIVING WEATHER INFORMATION ..... 182**  
 DISPLAYING WEATHER INFORMATION ..... 182
- 2. RECEIVING TRAFFIC MAP INFORMATION ..... 184**  
 DISPLAYING TRAFFIC MAP INFORMATION ..... 184
- 3. DATA SERVICES SETTINGS..... 185**  
 SETTING DOWNLOAD METHODS ..... 185
- 4. Driver Easy Speak..... 186**  
 USING Driver Easy Speak ..... 186  
 CHANGING Driver Easy Speak SETTINGS ..... 186

1. RECEIVING WEATHER INFORMATION

▶Entune Audio Plus


Weather information can be received via the HD Radio broadcast.

▶Entune Premium Audio

Weather information can be received via the HD Radio broadcast or by the Entune App Suite application on a Bluetooth® phone. For details about the Entune App Suite application: →P.371


DISPLAYING WEATHER INFORMATION

1 Press the “APPS” button.

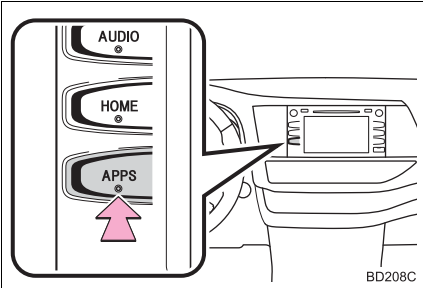

2 Select “Weather”.

3 Check that the “Weather” screen is displayed.

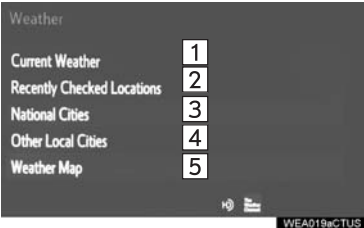

| No. | Function                                                                                    |
|-----|---------------------------------------------------------------------------------------------|
| 1   | Select to display the weather of the current location. (→P.183)                             |
| 2   | Select to display the weather of a desired location in the recently checked locations list. |
| 3   | Select to display the weather of a desired location in the national cities list.            |
| 4   | Select to display the weather of a desired location in the other local cities list.         |
| 5*  | Select to display weather information over the map.                                         |

\*: Entune Premium Audio only

INFORMATION

- Weather information is available in the 48 states, D.C. and Alaska of the United States.
- The weather for current location might not show the closest city when it first displays.

## DISPLAYING THE WEATHER OF THE CURRENT LOCATION

- 1 Display the “Weather” screen.  
(→P.182)
- 2 Select “**Current Weather**”.
- 3 Select the desired tab to be displayed.

### INFORMATION


- If weather is set to the home screen, the weather screen of the current location will be displayed.

2. RECEIVING TRAFFIC MAP INFORMATION\*

Traffic map information can be received via the HD Radio.

DISPLAYING TRAFFIC MAP INFORMATION

1 Press the “APPS” button.

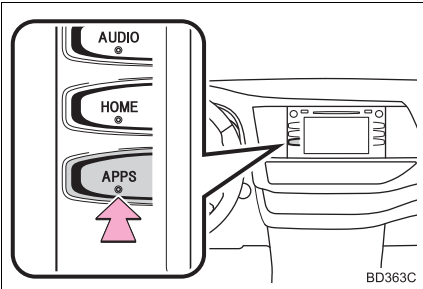

2 Select “Traffic”.

3 Check that the “Traffic Map” screen is displayed.



| No. | Function                                                                                                                                              |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Current position of your car                                                                                                                          |
| 2   | Traffic information line<br>The line color means the following:<br>Red: Heavy congestion<br>Yellow: Moderate traffic<br>Green: Freely flowing traffic |

INFORMATION

- Traffic map information is available in the 48 states, D.C. and Alaska of the United States.


\*: Entune Audio Plus only

3. DATA SERVICES SETTINGS\*

SETTING DOWNLOAD METHODS


Data service information, which is comprised of traffic information and weather information, can be received via HD Radio broadcast and by the Entune App Suite application on a Bluetooth® phone. The receiving method can be set to both or only via HD Radio broadcast. For details about the Entune App Suite application: →P.371

1 Press the “APPS” button.

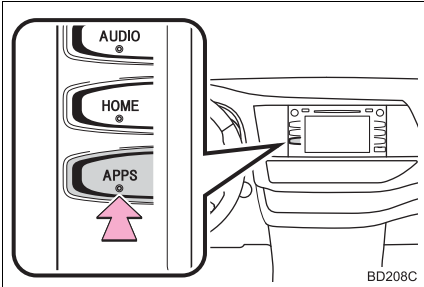

- 2 Select “Setup”.
- 3 Select “HD Data”.

4 Select the desired item to be set.

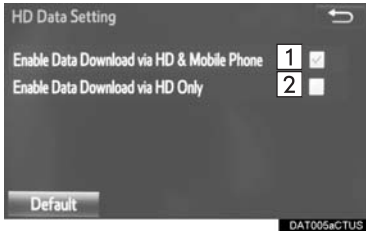

- Select a checkbox on the right to set.

| No. | Function                                                                                                                                                                                                 |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to receive data service information via both HD Radio broadcast and the Entune App Suite application on a Bluetooth® phone. When both methods are available, HD Radio broadcast will be selected. |
| 2   | Select to receive data only via HD Radio broadcast.                                                                                                                                                      |

INFORMATION

- These settings are available in the 48 states, D.C. and Alaska of the United States.

\*: Entune Premium Audio only

### 4. Driver Easy Speak\*


#### USING Driver Easy Speak

Driver Easy Speak will utilize the vehicle microphones and speakers to allow passengers in the rear of the vehicle to more easily hear the driver.

- 1 Press the **"APPS"** button.
- 2 Select **"Driver Easy Speak"** to change on/off.

#### CHANGING Driver Easy Speak SETTINGS

- 1 Press the **"APPS"** button.
- 2 Select **"Setup"**.
- 3 Select **"Driver Easy Speak"**.
- 4 Select to adjust the audio volume.

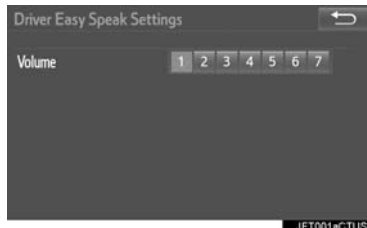

#### INFORMATION

- If a side door or the back door is opened while the Driver Easy Speak function is in use, it will be automatically turned off. To use this function again, close all side doors and the back door and turn on Driver Easy Speak again.
- Driver Easy Speak cannot be used while the voice command system or hands-free system is in use.
- If feedback occurs, turn the Driver Easy Speak function off or adjust its volume.

\*: Entune Premium Audio only



## PERIPHERAL MONITORING SYSTEM

### 1 REAR VIEW MONITOR SYSTEM

1. REAR VIEW MONITOR SYSTEM..... 190
  - DRIVING PRECAUTIONS..... 190
  - SCREEN DESCRIPTION ..... 191
2. REAR VIEW MONITOR SYSTEM PRECAUTIONS ..... 192
  - AREA DISPLAYED ON SCREEN..... 192
  - THE CAMERA ..... 192
  - DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD..... 193
  - WHEN APPROACHING THREE-DIMENSIONAL OBJECTS..... 195
3. THINGS YOU SHOULD KNOW ..... 197
  - IF YOU NOTICE ANY SYMPTOMS..... 197

### 2 TOYOTA PARKING ASSIST MONITOR

1. TOYOTA PARKING ASSIST MONITOR ..... 198
  - DRIVING PRECAUTIONS..... 198
  - SCREEN DISPLAY ..... 200
  - USING THE SYSTEM..... 201

2. ESTIMATED COURSE LINE DISPLAY MODE ..... 203
  - SCREEN DESCRIPTION..... 203
  - PARKING ..... 204
3. PARKING ASSIST GUIDE LINE DISPLAY MODE ..... 205
  - SCREEN DESCRIPTION..... 205
  - PARKING ..... 206
4. TOYOTA PARKING ASSIST MONITOR PRECAUTIONS..... 207
  - AREA DISPLAYED ON SCREEN..... 207
  - THE CAMERA..... 208
  - DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD ..... 209
  - WHEN APPROACHING THREE-DIMENSIONAL OBJECTS ..... 210
5. THINGS YOU SHOULD KNOW ..... 212
  - IF YOU NOTICE ANY SYMPTOMS ..... 212

### 3 PANORAMIC VIEW MONITOR

1. PANORAMIC VIEW MONITOR..... 214
  - DRIVING PRECAUTIONS ..... 214
  - CAMERA SWITCH..... 217
  - DISPLAY ..... 217
  - HOW TO SWITCH THE DISPLAY ..... 219

## PERIPHERAL MONITORING SYSTEM

|                                                             |            |                                                        |            |
|-------------------------------------------------------------|------------|--------------------------------------------------------|------------|
| <b>2. CHECKING AROUND THE VEHICLE.....</b>                  | <b>221</b> | <b>8. THINGS YOU SHOULD KNOW .....</b>                 | <b>247</b> |
| SCREEN DISPLAY .....                                        | 221        | IF YOU NOTICE ANY SYMPTOMS .....                       | 247        |
| <b>3. CHECKING THE FRONT AND AROUND THE VEHICLE.....</b>    | <b>222</b> | PRODUCT LICENSE.....                                   | 249        |
| SCREEN DISPLAY .....                                        | 222        |                                                        |            |
| <b>4. CHECKING THE SIDES OF THE VEHICLE.....</b>            | <b>225</b> | <b>4 INTUITIVE PARKING ASSIST</b>                      |            |
| SCREEN DISPLAY .....                                        | 225        | <b>1. INTUITIVE PARKING ASSIST.....</b>                | <b>250</b> |
| <b>5. CHECKING THE REAR AND AROUND THE VEHICLE.....</b>     | <b>228</b> | TYPES OF SENSORS.....                                  | 250        |
| SCREEN DISPLAY .....                                        | 228        | INTUITIVE PARKING ASSIST SWITCH .....                  | 250        |
| GUIDE LINES DISPLAYED ON THE SCREEN .....                   | 230        | DISPLAY .....                                          | 250        |
| PARKING .....                                               | 233        | THE DISTANCE DISPLAY AND BUZZER .....                  | 251        |
| <b>6. MAGNIFYING FUNCTION .....</b>                         | <b>235</b> | DETECTION RANGE OF THE SENSORS .....                   | 253        |
| MAGNIFYING THE DISPLAY .....                                | 235        | SENSOR DETECTION INFORMATION .....                     | 253        |
| <b>7. PANORAMIC VIEW MONITOR PRECAUTIONS .....</b>          | <b>236</b> | INTUITIVE PARKING ASSIST- SENSOR FAILURE WARNING ..... | 255        |
| AREA DISPLAYED ON SCREEN .....                              | 236        | CERTIFICATION .....                                    | 255        |
| THE CAMERA .....                                            | 239        | <b>2. INTUITIVE PARKING ASSIST SETTING .....</b>       | <b>256</b> |
| DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD .....    | 241        | SETTING AN ALERT VOLUME.....                           | 256        |
| DISTORTION OF THREE-DIMENSIONAL OBJECTS ON THE SCREEN ..... | 243        | SETTING A PARKING SONAR DISPLAY .....                  | 257        |
| WHEN APPROACHING THREE-DIMENSIONAL OBJECTS.....             | 244        | SETTING A DISPLAY AND TONE INDICATION.....             | 257        |
| MAGNIFYING FUNCTION .....                                   | 246        |                                                        |            |

# 1. REAR VIEW MONITOR SYSTEM\*

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle with fixed guide lines on the screen while backing up, for example while parking.

### INFORMATION

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

## DRIVING PRECAUTIONS

The rear view monitor system is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the rear view monitor system.



### WARNING

- Never depend on the rear view monitor system entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.  
Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- The instructions given are only guide lines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the rear view monitor system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- Do not use the rear view monitor system in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency tires
  - When the back door is not closed completely
  - On roads that are not flat or straight, such as curves or slopes
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the fixed guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances.(→P.193)

\*: If equipped


## SCREEN DESCRIPTION

### ► Vehicles without smart key system

The rear view monitor system screen will be displayed if the shift lever is shifted to the "R" position while the engine switch is in the "ON" position.

### ► Vehicles with smart key system

The rear view monitor system screen will be displayed if the shift lever is shifted to the "R" position while the engine <power> switch is in IGNITION ON <ON> mode.

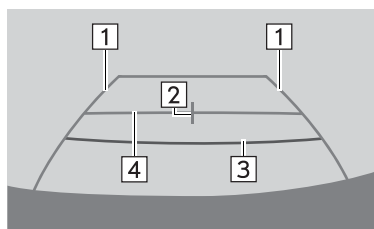

BF065C

| No.      | Display                   | Function                                                                                                                             |
|----------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> | Vehicle width guide line  | Displays a guide path when the vehicle is being backed straight up.<br>• The displayed width is wider than the actual vehicle width. |
| <b>2</b> | Vehicle center guide line | This line indicates the estimated vehicle center on the ground.                                                                      |
| <b>3</b> | Distance guide line       | Shows distance behind the vehicle.<br>• Displays a point approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.            |
| <b>4</b> | Distance guide line       | Shows distance behind the vehicle.<br>• Displays a point approximately 3 ft. (1 m) (blue) from the edge of the bumper.               |

## CANCELING REAR VIEW MONITOR SYSTEM

The rear view monitor system is canceled when the shift lever is shifted into any position other than the "R" position.


## 1. REAR VIEW MONITOR SYSTEM

# 2. REAR VIEW MONITOR SYSTEM PRECAUTIONS


### AREA DISPLAYED ON SCREEN

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle.

Displayed area

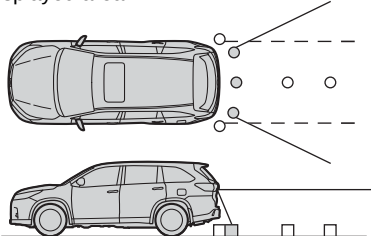


Screen

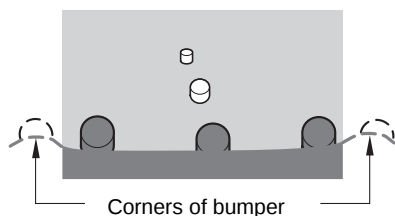

BD225C

### THE CAMERA

The camera for the rear view monitor system is located as shown in the illustration.

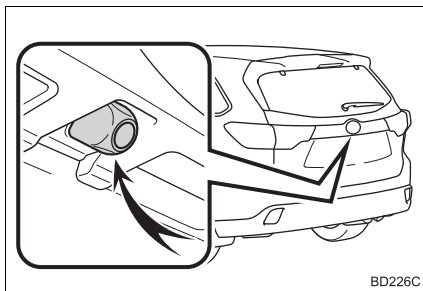

BD226C

### USING THE CAMERA

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

- The image adjustment procedure for the rear view monitor system screen is the same as the procedure for adjusting the screen. (→P.41)

#### INFORMATION

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

**NOTICE**


- The rear view monitor system may not operate properly in the following cases.
  - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
  - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
  - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
  - Do not allow organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
  - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
  - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

## DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the fixed guide lines on the screen and the actual distance /course on the road.


**WHEN THE GROUND BEHIND  
THE VEHICLE SLOPES UP  
SHARPLY**

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

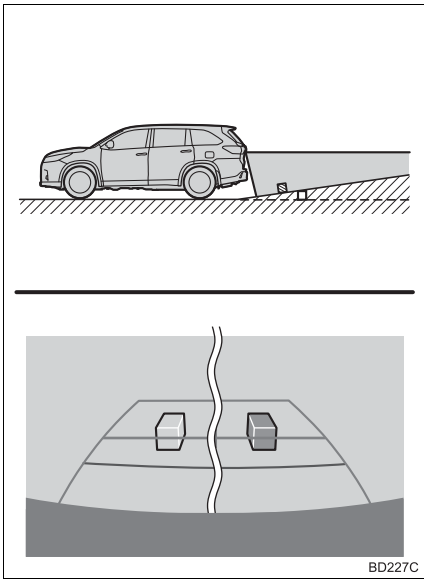


**WHEN THE GROUND BEHIND  
THE VEHICLE SLOPES DOWN  
SHARPLY**

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

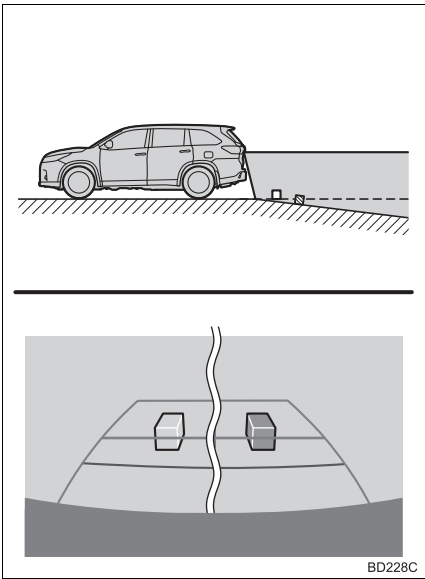

### WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the fixed guide lines on the screen and the actual distance/course on the road.

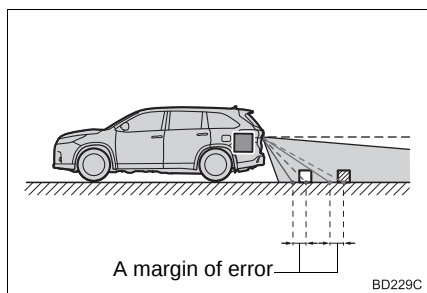


### WHEN APPROACHING THREE-DIMENSIONAL OBJECTS

The distance guide lines are displayed according to flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the vehicle width guide lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

VEHICLE WIDTH GUIDE LINES


Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the vehicle width guide lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the vehicle width guide lines. In reality if you back up as guided by the vehicle width guide lines, the vehicle may hit the truck.

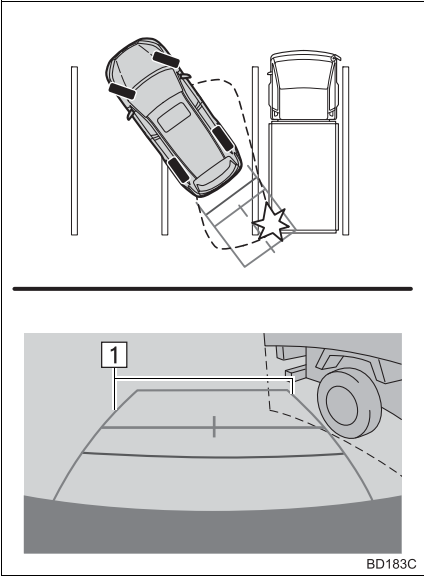

► 1 Vehicle width guide lines

DISTANCE GUIDE LINES

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is farthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

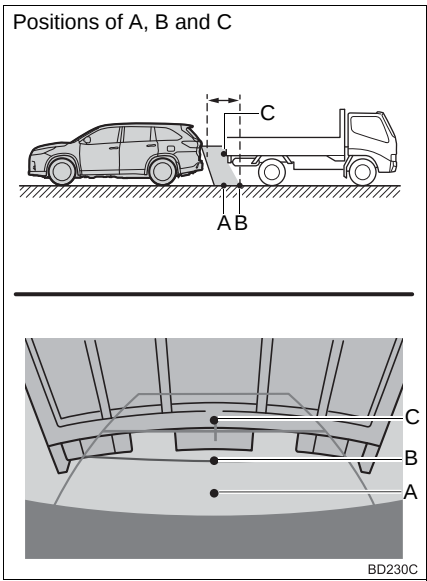

3. THINGS YOU SHOULD KNOW

IF YOU NOTICE ANY SYMPTOMS

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

| Symptom                                             | Likely cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Solution                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The image is difficult to see                       | <ul style="list-style-type: none"><li>• The vehicle is in a dark area</li><li>• The temperature around the lens is either high or low</li><li>• The outside temperature is low</li><li>• There are water droplets on the camera</li><li>• It is raining or humid</li><li>• Foreign matter (mud etc.) is adhering to the camera</li><li>• Sunlight or headlights are shining directly into the camera</li><li>• The vehicle is under fluorescent lights, sodium lights, mercury lights etc.</li></ul> | <p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the rear view monitor system is the same as the procedure for adjusting the screen. (→P.41)</p> |
| The image is blurry                                 | Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.                                                                                                                                                                                                                                                                                                                                                                                                           | Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.                                                                                                                                                                            |
| The image is out of alignment                       | The camera or surrounding area has received a strong impact.                                                                                                                                                                                                                                                                                                                                                                                                                                         | Have the vehicle inspected by your Toyota dealer.                                                                                                                                                                                                                                    |
| The fixed guide lines are very far out of alignment | The camera position is out of alignment.                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Have the vehicle inspected by your Toyota dealer.                                                                                                                                                                                                                                    |
|                                                     | <ul style="list-style-type: none"><li>• The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li><li>• The vehicle is used on an incline.</li></ul>                                                                                                                                                                                                                                                                                       | <p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings.</p>                                                                                                                                   |

## 2. TOYOTA PARKING ASSIST MONITOR

### 1. TOYOTA PARKING ASSIST MONITOR\*

The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.

#### INFORMATION

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

#### DRIVING PRECAUTIONS

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the parking assist monitor.



#### WARNING

- Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.  
Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehicle.

\*: If equipped


**WARNING**

- The instructions given are only guidelines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the parking assist system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- Do not use the parking assist monitor in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency tires
  - When the back door is not closed completely
  - On roads that are not flat or straight, such as curves or slopes
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.209)

## 2. TOYOTA PARKING ASSIST MONITOR

### SCREEN DISPLAY

The parking assist monitor screen will be displayed if the shift lever is shifted to the "R" position while the engine <power> switch is in IGNITION ON <ON> mode.

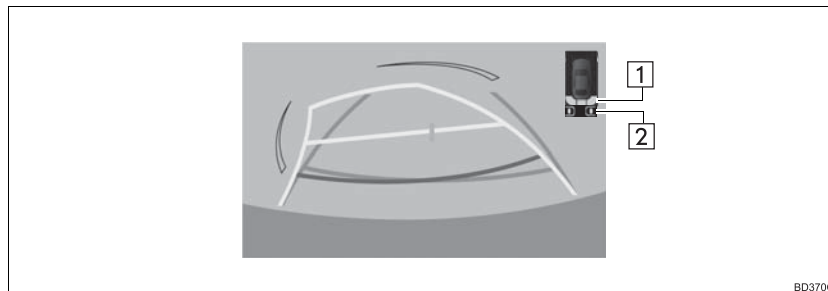


- ▶ **1** Intuitive parking assist-sensor  
If an obstacle is detected while the intuitive parking assist-sensor is on, a display is shown in the top right corner of the screen.
- 2** Rear Cross Traffic Alert  
If an obstacle is detected while the Rear Cross Traffic Alert is on, a display is shown in the top right corner of the screen.

### CANCELING TOYOTA PARKING ASSIST MONITOR

The parking assist monitor is canceled when the shift lever is shifted into any position other than the "R" position.


## USING THE SYSTEM

Use any of the following modes.

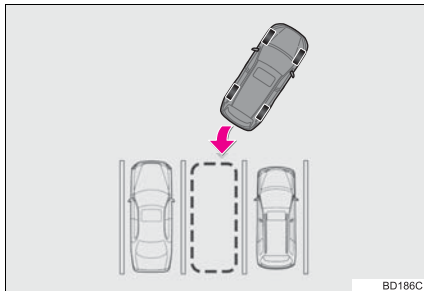


► Estimated course line display mode  
(→P.203)

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

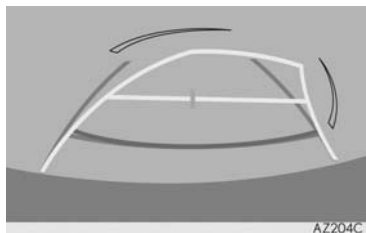

► Parking assist guide line display mode  
(→P.205)

The steering wheel return points (parking assist guide lines) are displayed.

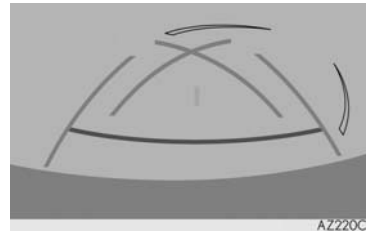

► Distance guide line display mode

Distance guide lines only are displayed.



6

PERIPHERAL MONITORING SYSTEM

2. TOYOTA PARKING ASSIST MONITOR

SWITCHING THE DISPLAY MODE

When the shift lever is in any position other than the “R” position, the display mode can be changed in the following procedure.

- 1


Press the “**APPS**” button.
- 2

Select “**Setup**”.
- 3

Select “**Vehicle**”.
- 4

Select “**Back Camera Guide Line Setting**”.
- 5

Select the display mode.

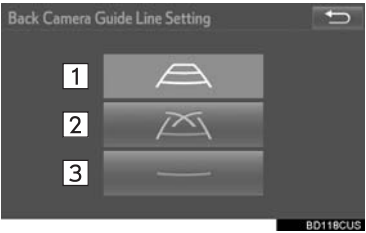


| No. | Name                                   | Detail                                   |
|-----|----------------------------------------|------------------------------------------|
| 1   | Estimated course line display mode     | 203                                      |
| 2   | Parking assist guide line display mode | 205                                      |
| 3   | Distance guide line display mode       | Distance guide lines only are displayed. |

## 2. TOYOTA PARKING ASSIST MONITOR

### 2. ESTIMATED COURSE LINE DISPLAY MODE

#### SCREEN DESCRIPTION

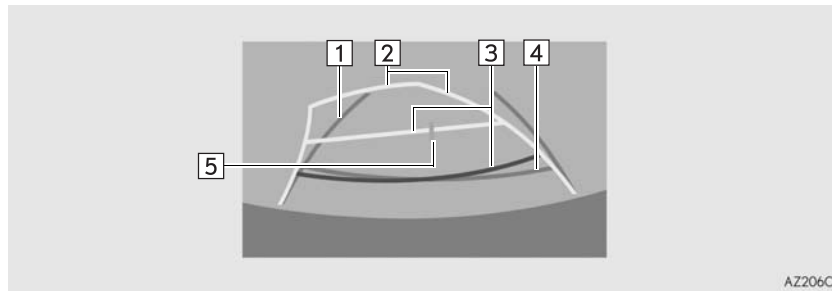

| No. | Display                   | Function                                                                                                                                                                                                                                                                                                                                              |
|-----|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Vehicle width guide line  | Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none"> <li>The displayed width is wider than the actual vehicle width.</li> <li>These guide lines align with the estimated course lines when the vehicle is going straight ahead.</li> </ul>                                                          |
| 2   | Estimated course lines    | Show an estimated course when the steering wheel is turned.                                                                                                                                                                                                                                                                                           |
| 3   | Distance guide lines      | Show distance behind the vehicle when the steering wheel is turned. <ul style="list-style-type: none"> <li>The guide lines move in conjunction with the estimated course lines.</li> <li>The guide lines display points approximately 1.5 ft. (0.5m) (red) and approximately 3ft. (1m) (yellow) from the center of the edge of the bumper.</li> </ul> |
| 4   | Distance guide line       | Shows distance behind the vehicle. <ul style="list-style-type: none"> <li>Displays a point approximately 1.5 ft. (0.5m) (blue) from the edge of the bumper.</li> </ul>                                                                                                                                                                                |
| 5   | Vehicle center guide line | The line indicates the estimated vehicle center on the ground.                                                                                                                                                                                                                                                                                        |

6

PERIPHERAL MONITORING SYSTEM




#### WARNING

- If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Toyota dealer.

## PARKING


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.

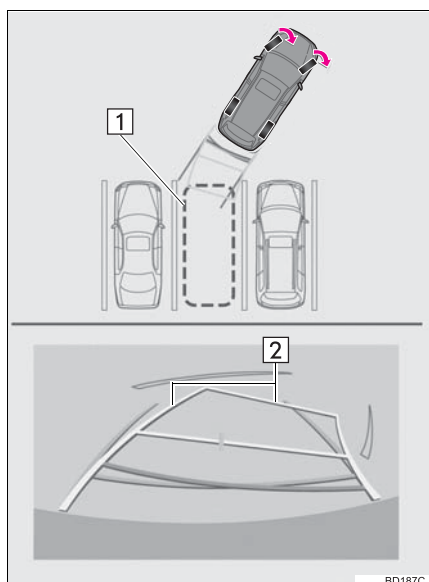

- 1 Parking space  
2 Estimated course lines

- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right dividing lines of the parking space.

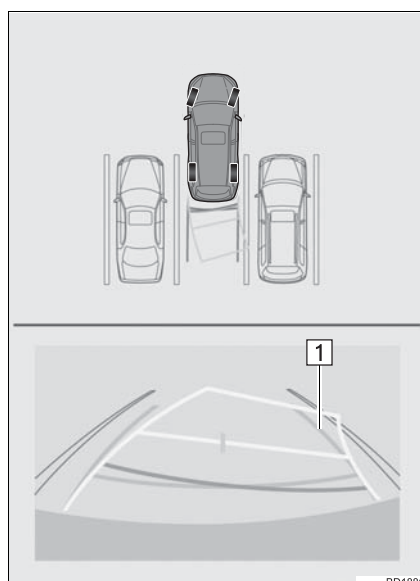


- 1 Vehicle width guide line

- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

2. TOYOTA PARKING ASSIST MONITOR

3. PARKING ASSIST GUIDE LINE DISPLAY MODE

SCREEN DESCRIPTION

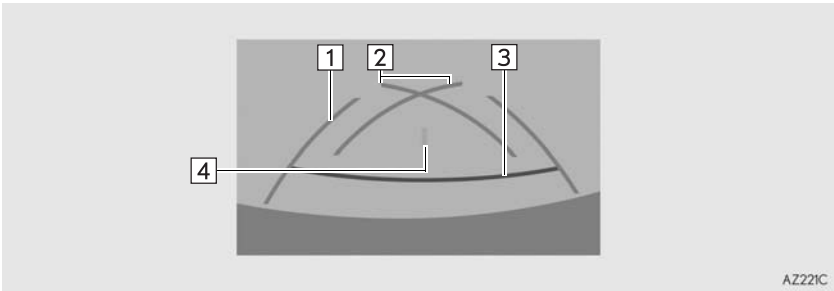

| No. | Display                    | Function                                                                                                                                                                            |
|-----|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Vehicle width guide line   | Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none"><li>• The displayed width is wider than the actual vehicle width.</li></ul>   |
| 2   | Parking assist guide lines | Show the path of the smallest turn possible behind the vehicle. <ul style="list-style-type: none"><li>• Show the approximate position of the steering wheel when parking.</li></ul> |
| 3   | Distance guide lines       | Show distance behind the vehicle. <ul style="list-style-type: none"><li>• Display points approximately 1.5 ft. (0.5m) (red) from the edge of the bumper.</li></ul>                  |
| 4   | Vehicle center guide line  | The line indicates the estimated vehicle center on the ground.                                                                                                                      |


6

PERIPHERAL MONITORING SYSTEM

## PARKING

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.

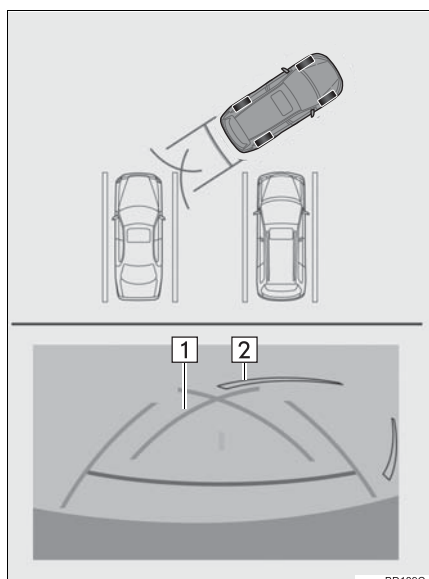

- 1 Parking assist guide line  
2 Parking space dividing line


- 3 Turn the steering wheel all the way to the right, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

## 2. TOYOTA PARKING ASSIST MONITOR

### 4. TOYOTA PARKING ASSIST MONITOR PRECAUTIONS

#### AREA DISPLAYED ON SCREEN

The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.

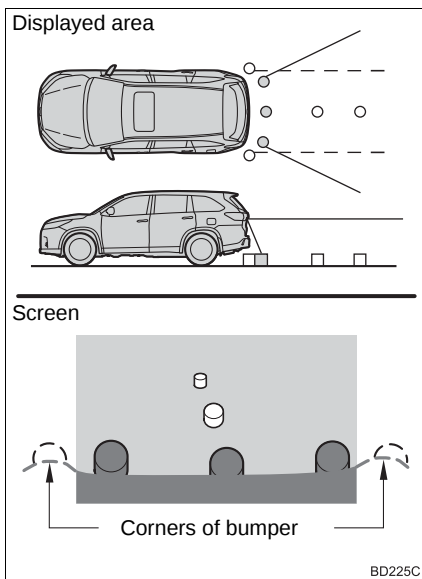


- The image adjustment procedure for the parking assist monitor screen is the same as the procedure for adjusting the navigation screen. (→P.41)

#### INFORMATION

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

### THE CAMERA

The camera for the parking assist monitor is located as shown in the illustration.

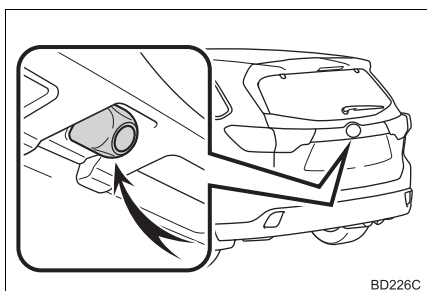

### USING THE CAMERA

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.



### NOTICE


- The parking assist monitor may not operate properly in the following cases.
  - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
  - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
  - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
  - Do not allow organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
  - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
  - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

### DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance /course on the road.

### WHEN THE GROUND BEHIND THE VEHICLE SLOPES UP SHARPLY

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

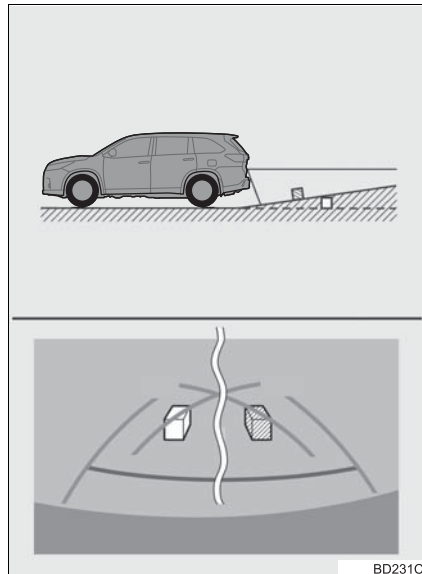

BD231C

6

PERIPHERAL MONITORING SYSTEM


### WHEN THE GROUND BEHIND THE VEHICLE SLOPES DOWN SHARPLY

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide-lines and the actual distance/course on the road.



### WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

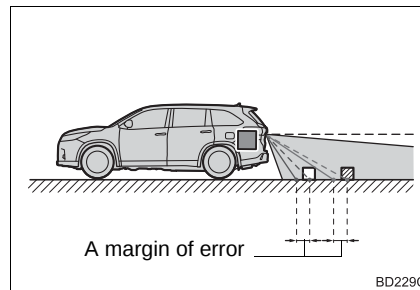


### WHEN APPROACHING THREE-DIMENSIONAL OBJECTS

The estimated course lines target flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

**ESTIMATED COURSE LINES**


Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

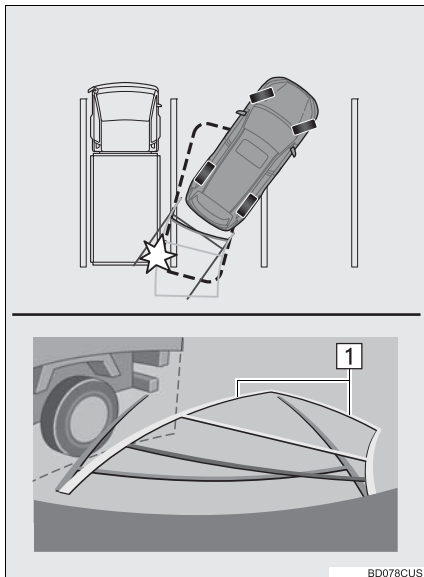

► **1** Estimated course lines

**DISTANCE GUIDE LINES**

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is farthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

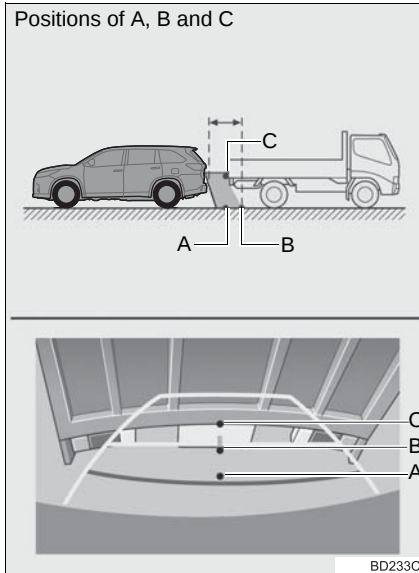

6

PERIPHERAL MONITORING SYSTEM

## 2. TOYOTA PARKING ASSIST MONITOR

### 5. THINGS YOU SHOULD KNOW

#### IF YOU NOTICE ANY SYMPTOMS

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

| Symptom                                                                    | Likely cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Solution                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The image is difficult to see                                              | <ul style="list-style-type: none"> <li>• The vehicle is in a dark area</li> <li>• The temperature around the lens is either high or low</li> <li>• The outside temperature is low</li> <li>• There are water droplets on the camera</li> <li>• It is raining or humid</li> <li>• Foreign matter (mud etc.) is adhering to the camera</li> <li>• Sunlight or headlights are shining directly into the camera</li> <li>• The vehicle is under fluorescent lights, sodium lights, mercury lights etc.</li> </ul> | <p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the parking assist monitor is the same as the procedure for adjusting the navigation screen. (→P.41)</p> |
| The image is blurry                                                        | Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.                                                                                                                                                                                                                                                                                                                                                                                                                    | Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.                                                                                                                                                                                     |
| The image is out of alignment                                              | The camera or surrounding area has received a strong impact.                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Have the vehicle inspected by your Toyota dealer.                                                                                                                                                                                                                                             |
| The guide lines are very far out of alignment                              | <p>The camera position is out of alignment.</p> <ul style="list-style-type: none"> <li>• The vehicle is tilted. (There is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li> <li>• The vehicle is used on an incline.</li> </ul>                                                                                                                                                                                                                                            | <p>Have the vehicle inspected by your Toyota dealer.</p> <p>If this happens due to these causes, it does not indicate a malfunction. Back up while visually checking the vehicle's surroundings.</p>                                                                                          |
| The estimated course lines move even though the steering wheel is straight | There is a malfunction in the signals being output by the steering sensor.                                                                                                                                                                                                                                                                                                                                                                                                                                    | Have the vehicle inspected by your Toyota dealer.                                                                                                                                                                                                                                             |
| Guide lines are not displayed                                              | The back door is open.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <p>Close the back door.</p> <p>If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.</p>                                                                                                                                                                    |

## 2. TOYOTA PARKING ASSIST MONITOR

| Symptom                                      | Likely cause                                                                                                                                                                                                                                                                                                               | Solution                                                                                                                                                                                        |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The estimated course lines are not displayed | <ul style="list-style-type: none"> <li>• The steering wheel has been moved while the 12-volt battery was being reinstalled.</li> <li>• 12-volt battery power is low.</li> <li>• The steering sensor has been reinstalled.</li> <li>• There is a malfunction in the signals being output by the steering sensor.</li> </ul> | <p>Stop the vehicle, and turn the steering wheel as far as it will go to the left and right.</p> <p>If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.</p> |

### 3. PANORAMIC VIEW MONITOR

## 1. PANORAMIC VIEW MONITOR\*

Panoramic view monitor assists the driver in viewing the surroundings, when operating at low speeds, by combining the front, side and rear cameras and displaying a complete vehicle overhead image on the screen.

► Vehicles without a smart key system

When you press the camera switch or shift the shift lever to the “R” position while the engine switch is in “ON” position, the panoramic view monitor operates.

► Vehicles with a smart key system

When you press the camera switch or shift the shift lever to the “R” position while the engine <power> switch is in IGNITION ON <ON> mode, the panoramic view monitor operates.

The monitor displays various views of the position and surroundings of the vehicle.

#### INFORMATION

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

### DRIVING PRECAUTIONS

The panoramic view monitor is a supplemental device intended to assist the driver when checking around the vehicle. When using, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle or possibly cause an accident.

Pay attention to the following precautions when using the panoramic view monitor.

#### WARNING

- Never depend on the panoramic view monitor entirely. The image and the position of the guide lines displayed on the screen may differ from the actual state. Use caution just as you would when driving any other vehicle.
- Always make sure to check all around the vehicle with your own eyes when driving.
- Never drive while looking only at the screen as the image on the screen is different from actual conditions. If you are driving while looking only at the screen, you may hit a person or an object, resulting in an accident. When driving, be sure to check the vehicle's surroundings with your own eyes and the vehicle's mirrors.

\*: If equipped

**WARNING**

- Depending on the circumstances of the vehicle (number of passengers, amount of luggage, etc.), the position of the guide lines displayed on the screen may change. Be sure to check visually around the vehicle before proceeding.
- Do not use the panoramic view monitor system in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency tires
  - When the back door is not closed completely
  - On roads that are not flat or straight, such as curves or slopes
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.241)

**NOTICE**

- In panoramic view/moving view/see-through view, the system combines images taken from the front, back, left and right side cameras into a single image. There are limits to the range and content that can be displayed. Familiarize yourself with the characteristics of the panoramic view monitor system before using it.
- Image clarity may decline at the four corners of the panoramic view/moving view/see-through view. However, this is not a malfunction, as these are the regions along the border of each camera image where the images are combined.
- Depending on lighting conditions near each of the cameras, bright and dark patches may appear on the panoramic view/moving view/see-through view.
- The panoramic view/moving view/see-through view display does not extend higher than the installation position and image capture range of each camera.

### 3. PANORAMIC VIEW MONITOR



#### NOTICE

- There are blind spots around the vehicle. Accordingly, there are regions not displayed in panoramic view/moving view/see-through view.
- Three-dimensional objects displayed in wide front view or rear view may not be displayed in panoramic view/moving view/see-through view.
- People and other three-dimensional obstacles may appear differently when displayed on the panoramic view monitor. (These differences include, among others, cases in which displayed objects appear to have fallen over, disappear near image processing areas, appear from image processing areas, or when the actual distance to an object differs from the displayed position.)




#### NOTICE

- When the back door, which is equipped with the back camera, or front doors, which are equipped with door mirrors that have built-in side cameras, are open, images will not be displayed properly on the panoramic view monitor.
- The vehicle icon displayed in panoramic view/moving view/see-through view is a computer generated image. Accordingly, properties such as the color, shape and size will differ from the actual vehicle. For this reason, nearby three-dimensional objects may appear to be touching the vehicle, and actual distances to three-dimensional objects may differ from those displayed.

## CAMERA SWITCH

The camera switch is located as shown in the illustration.

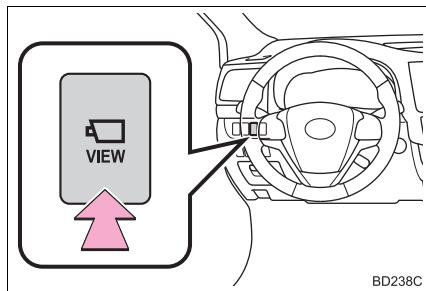


## DISPLAY

### CHECKING AROUND THE VEHICLE

#### ► Moving view



#### ► See-through view

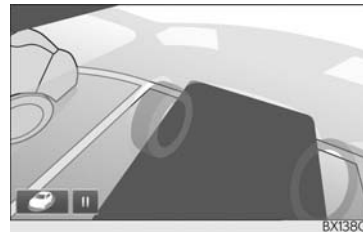


6

PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR


#### CHECKING THE FRONT AND AROUND THE VEHICLE

##### ► Wide front view & panoramic view

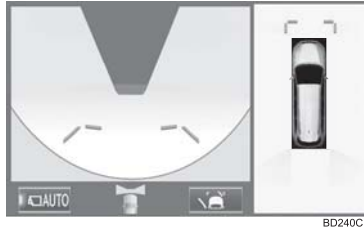


#### CHECKING THE REAR AND AROUND THE VEHICLE

##### ► Rear view & panoramic view

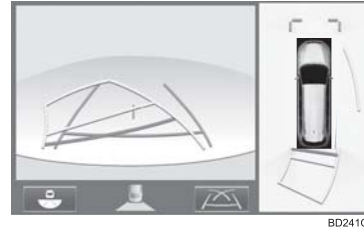


#### CHECKING THE SIDES OF THE VEHICLE


##### ► Side views

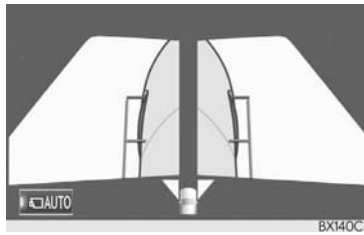

##### ► Wide rear view

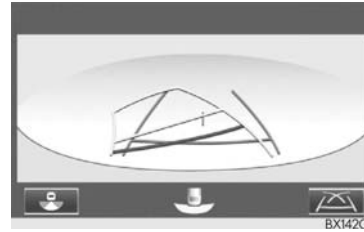

##### ► Rear view

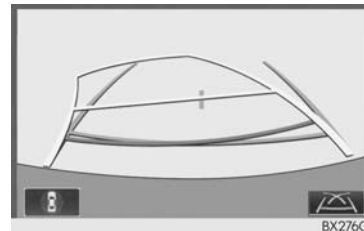

#### HOW TO SWITCH THE DISPLAY

▶ Vehicles without a smart key system


When you press the camera switch or shift the shift lever to the "R" position while the engine switch is in "ON" position, the panoramic view monitor operates.

▶ Vehicles with a smart key system

When you press the camera switch or shift the shift lever to the "R" position while the engine <power> switch is in IGNITION ON <ON> mode, the panoramic view monitor operates.

The monitor displays various views of the position of the vehicle. (The following is an example)

### 3. PANORAMIC VIEW MONITOR

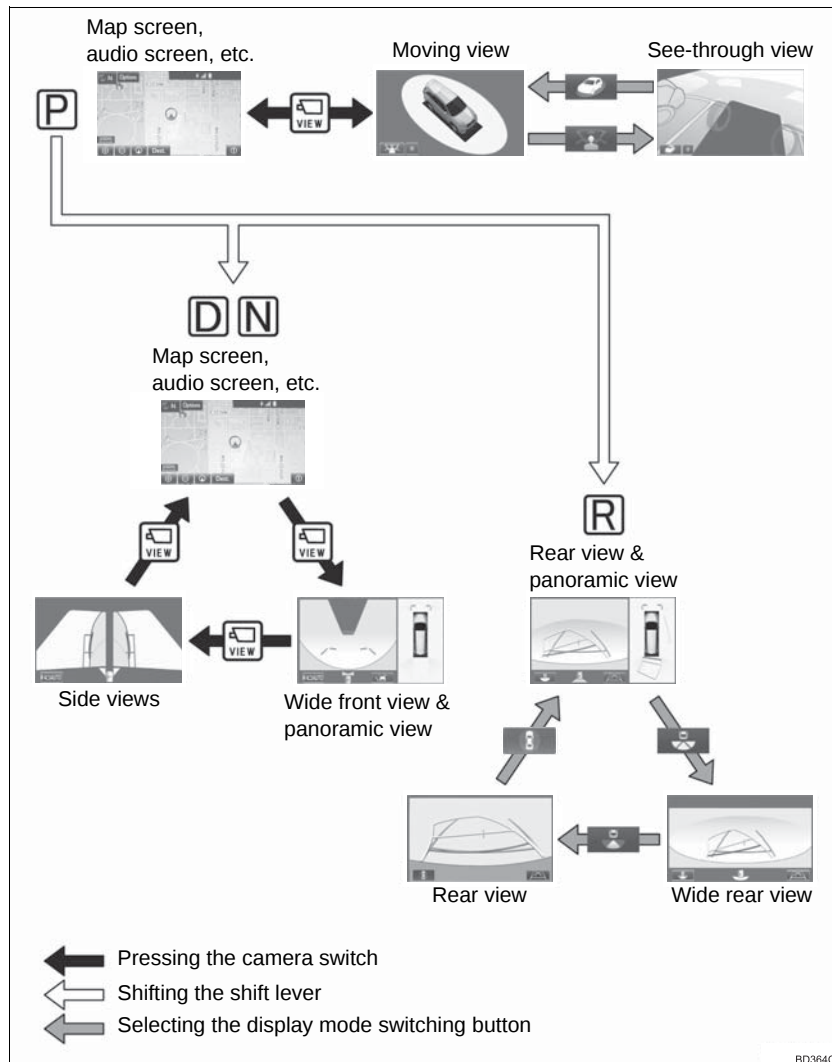

3. PANORAMIC VIEW MONITOR


2. CHECKING AROUND THE VEHICLE

The moving view screen and the see-through view screen provide support when checking the areas of around the vehicle while parking. Displays an image of the vicinity of the vehicle combined from the 4 cameras. The screen will display a 360° view around the vehicle from either inside the vehicle or from a birds-eye view at an angle.


To display the screen, press the camera switch when the shift lever is in the “P” position.

SCREEN DISPLAY

► Moving view

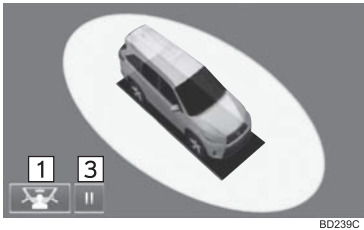

► See-through view

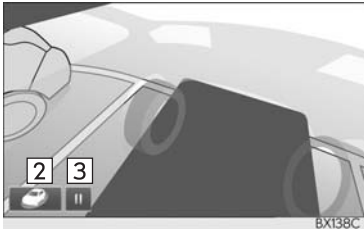

| No. | Display                 | Function                                                                                                                                                         |
|-----|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | See-through view switch | Select to change to the see-through view screen.                                                                                                                 |
| 2   | Moving view switch      | Select to change to the moving view screen.                                                                                                                      |
| 3   | Rotation pause switch   | Select to pause the rotation of the screen.<br>To resume rotation, select  . |

INFORMATION

- Pressing the camera switch again changes the screen back to the previously displayed screen, such as the navigation screen.

### 3. PANORAMIC VIEW MONITOR


## 3. CHECKING THE FRONT AND AROUND THE VEHICLE

The wide front view & panoramic view screen provides support when checking the areas in front of the vehicle and around the vehicle when taking-off at T-intersections or other intersections during poor visibility.

To display the screen, press the camera switch when the shift lever is in the “N” or “D” position with the vehicle moving approximately 7 mph (12 km/h) or less.

### SCREEN DISPLAY

#### ► Wide front view & panoramic view

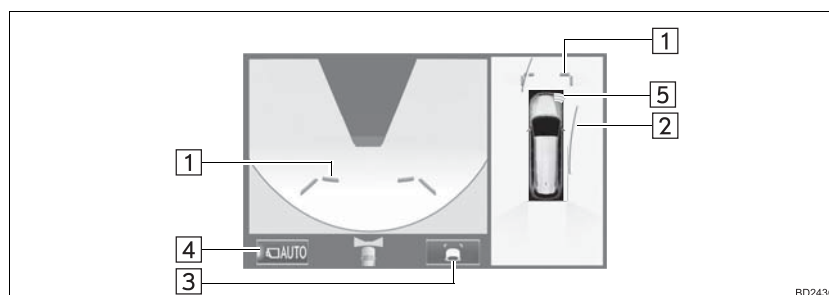

| No. | Display                     | Function                                                                                                                                                       |
|-----|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Distance guide lines        | Shows distance in front of the vehicle.<br>• Display points approximately 3 ft. (1 m) from the edge of the bumper.                                             |
| 2   | Estimated course lines      | Shows an estimated course when the steering wheel is turned.<br>• This line will be displayed when the steering wheel is turned more than 90° from the center. |
| 3   | Guide line switching button | Select to change the guide line mode between the distance guide line mode and the estimated course line mode. (→P.224)                                         |
| 4   | Automatic display button    | Select to turn automatic display mode on/off. The indicator on the button illuminates during automatic display mode. (→P.224)                                  |
| 5   | Intuitive parking assist    | When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.                          |

**INFORMATION**


- Pressing the camera switch changes the screen to the side views screen or previously displayed screen, such as the navigation screen.

### 3. PANORAMIC VIEW MONITOR

#### SWITCHING THE GUIDE LINE MODE


Each time the guide line switching button is selected, the mode will change as follows:

##### ► Distance guide line

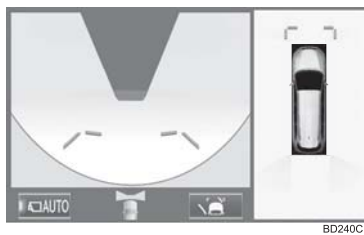

- Only the distance guide lines are displayed.

##### ► Estimated course line

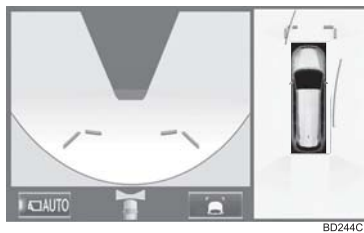

- Estimated course lines will be added to the distance guide lines.

#### AUTOMATIC DISPLAY MODE

In addition to screen switching by operating the camera switch, automatic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed.

In automatic mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to "N" or "D" position.
- When vehicle speed is reduced to approximately 6 mph (10 km/h) or less.

### 3. PANORAMIC VIEW MONITOR


## 4. CHECKING THE SIDES OF THE VEHICLE

The side views screen provides support when checking the areas on both sides of the vehicle, for example when taking off and stopping, when turning, etc.

To display the screen, press the camera switch when the shift lever is in the “N” or “D” position with the vehicle moving approximately 7 mph (12 km/h) or less.

### SCREEN DISPLAY

#### ► Side views

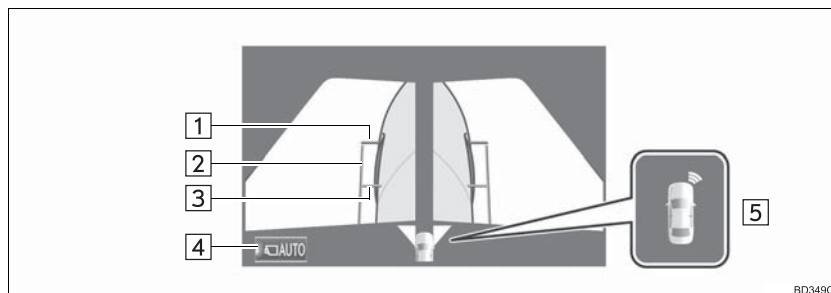

| No. | Display                   | Function                                                                                                                              |
|-----|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Distance guide lines      | Show distance in front of the vehicle.<br>• Display points approximately 1.5 ft. (0.5 m) from the edge of the bumper.                 |
| 2   | Vehicle width guide lines | Shows guide lines of the vehicle's width including the outside rear view mirrors.                                                     |
| 3   | Front tire guide lines    | Shows guide lines of where the front tire touches the ground.                                                                         |
| 4   | Automatic display button  | Select to turn automatic display mode on/off. The indicator on the button illuminates during automatic display mode. (→P.226)         |
| 5   | Intuitive parking assist  | When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds. |

#### INFORMATION

- Pressing the camera switch changes the screen to the wide front view & panoramic view screen or previously displayed screen, such as the navigation screen.

6

PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR


#### AUTOMATIC DISPLAY MODE

In addition to screen switching by operating the camera switch, automatic display mode is available. In this mode, the screen is switched automatically in response to vehicle speed.


In automatic mode, the monitor will automatically display images in the following situations:

- When the shift lever is shifted to "N" or "D" position.
- When vehicle speed is reduced to approximately 6 mph (10 km/h) or less.

#### USING THE VEHICLE WIDTH GUIDE LINE

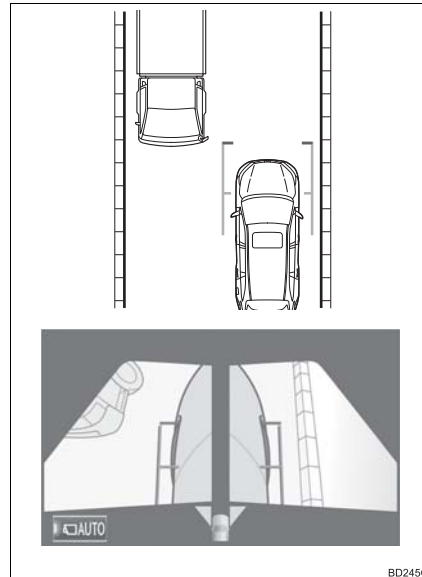

- Check the positions and distance between the vehicle width guide line and a target object such as the obstacle or curb of the road.

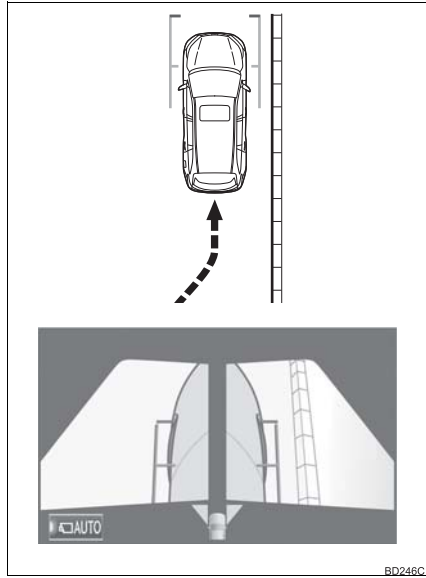

- Pull over to the curb as shown in the illustration above, taking care not to let the vehicle width guide line overlap the target object.
- Ensure that the vehicle width line is parallel to the target object enables parking alongside the target object.

### 3. PANORAMIC VIEW MONITOR

## 5. CHECKING THE REAR AND AROUND THE VEHICLE

The rear view & panoramic view screen, the wide rear view screen and the rear view screen provide support when checking the areas of behind the vehicle and around the vehicle while backing up, for example while parking.

The screens will be displayed when the shift lever is in the “R” position.

### SCREEN DISPLAY

Each time the display mode switching button is selected, the mode will change as follows:

#### ► Rear view & panoramic view

Displays the rear view and overhead view of the vehicle at same time.




#### ► Wide rear view

Displays a near 180° image from the rear view camera.



► Rear view

Displays the rear view of the vehicle.

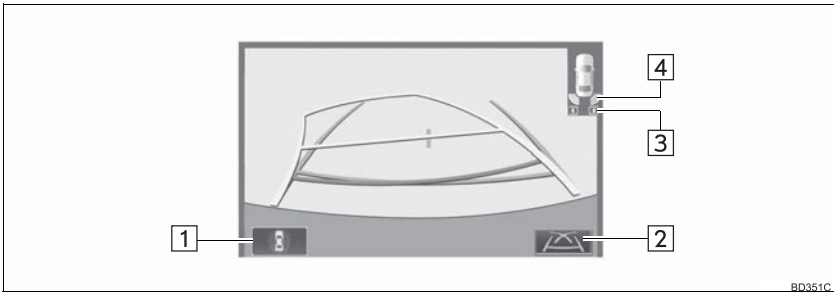

| No. | Display                       | Function                                                                                                                                                                                                                                                                                                                                                      |
|-----|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Display mode switching button | Each time the display mode switching button is selected, the mode will change as follows: <ul style="list-style-type: none"><li>• From the rear view &amp; panoramic view mode to the wide rear view mode</li><li>• From the wide rear view mode to the rear view mode</li><li>• From the rear view mode to the rear view &amp; panoramic view mode</li></ul> |
| 2   | Guide line switching button   | Select to switch the guide line mode. (→P.230)                                                                                                                                                                                                                                                                                                                |
| 3   | Rear Cross Traffic Alert      | When a sensor detects an obstacle, the direction of obstacle is displayed and the buzzer sounds.                                                                                                                                                                                                                                                              |
| 4   | Intuitive parking assist      | When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.                                                                                                                                                                                                                         |

INFORMATION


- The monitor is cancelled when the shift lever is shifted into any position other than the “R” position.

#### GUIDE LINES DISPLAYED ON THE SCREEN

Each time the guide line switching button is selected, the mode will change as follows:


► Estimated course line

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

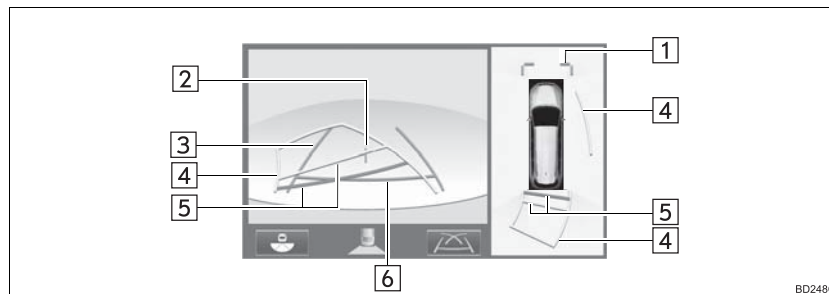


► Parking assist guide line

The steering wheel return points (parking assist guide lines) are displayed.

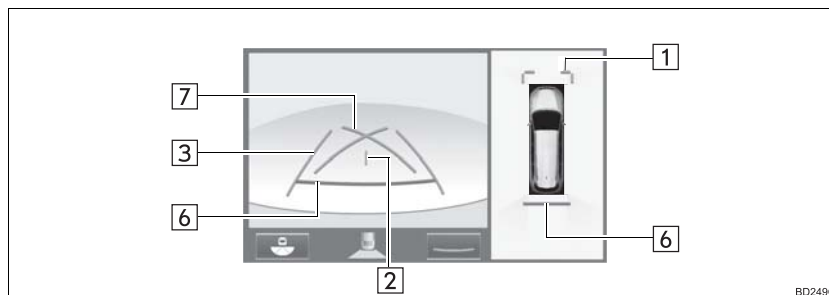

## ► Distance guide line

Only distance guide line is displayed.

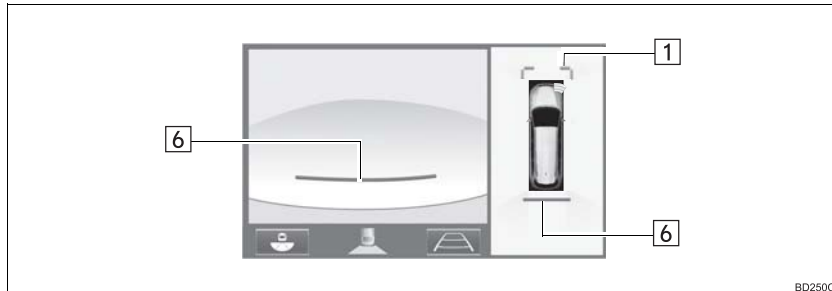

| No. | Display                    | Function                                                                                                                                                                                                                                                                                                                                                          |
|-----|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Distance guide lines       | Shows distance in front of the vehicle. <ul style="list-style-type: none"> <li>• Display points approximately 3 ft. (1 m) from the edge of the bumper.</li> </ul>                                                                                                                                                                                                 |
| 2   | Vehicle center guide line  | The line indicates the estimated vehicle center on the ground.                                                                                                                                                                                                                                                                                                    |
| 3   | Vehicle width guide lines  | Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none"> <li>• The displayed width is wider than the actual vehicle width.</li> <li>• These guide lines align with the estimated course lines when the vehicle is going straight ahead.</li> </ul>                                                                  |
| 4   | Estimated course lines     | Shows an estimated course when the steering wheel is turned.                                                                                                                                                                                                                                                                                                      |
| 5   | Distance guide lines       | Shows the distance behind the vehicle when the steering wheel is turned. <ul style="list-style-type: none"> <li>• The guide lines move in conjunction with the estimated course lines.</li> <li>• The guide lines display points approximately 1.5 ft. (0.5 m) (red) and approximately 3 ft. (1 m) (yellow) from the center of the edge of the bumper.</li> </ul> |
| 6   | Distance guide line        | Shows the distance behind the vehicle. <ul style="list-style-type: none"> <li>• Displays a point approximately 1.5 ft. (0.5 m) (red*) from the edge of the bumper.</li> </ul> <p>*: In estimated course line mode, the line will turn blue.</p>                                                                                                                   |
| 7   | Parking assist guide lines | Shows the path of the smallest turn possible behind the vehicle. <ul style="list-style-type: none"> <li>• Shows the approximate position of the steering wheel when parking.</li> </ul>                                                                                                                                                                           |

6

PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR



#### **WARNING**


- Depending on the circumstances of the vehicle (number of passengers, amount of luggage, etc.), the position of the guide lines displayed on the screen may change. Be sure to check visually around the vehicle before proceeding.
- If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Toyota dealer.
- Do not use the system if the display is incorrect due to an uneven (hilly) road or a non-straight (curvy) road.

## PARKING

## USING THE ESTIMATED COURSE LINE


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.

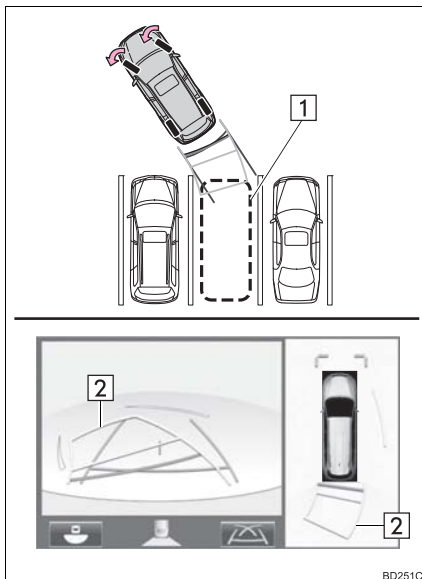

- 1 Parking space  
2 Estimated course lines

- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right dividing lines of the parking space.

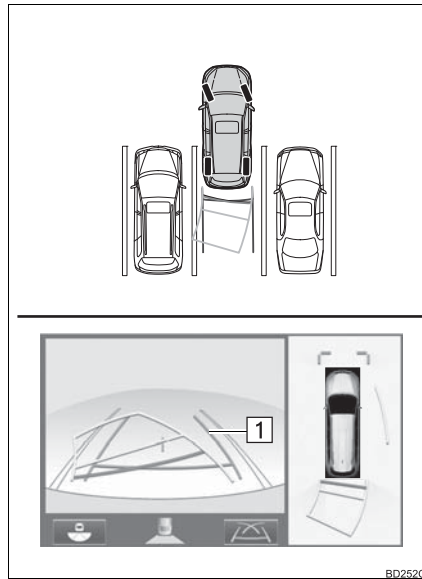

- 1 Vehicle width guide line

- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

6


PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR

#### USING PARKING ASSIST GUIDE LINE

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.

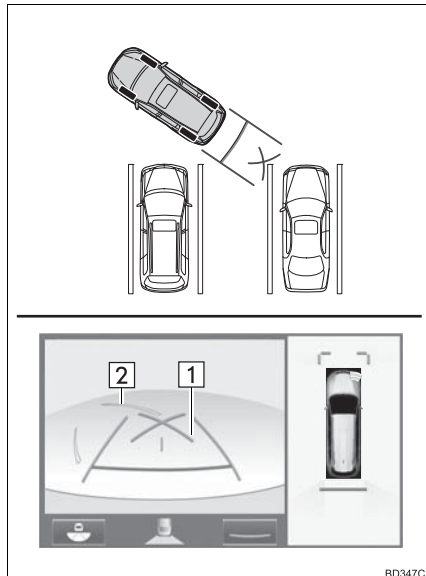

- 1 Parking assist guide line  
2 Parking space dividing line

- 3 Turn the steering wheel all the way to the right, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.


### 3. PANORAMIC VIEW MONITOR

## 6. MAGNIFYING FUNCTION

If displayed objects are too small to see clearly when the wide front view & panoramic view or the rear view & panoramic view is displayed, the area around any of the 4 corners of the vehicle can be magnified.

### MAGNIFYING THE DISPLAY

- 1 Turn the intuitive parking assist on.
- 2 Touch the area on the panoramic view display you wish to magnify.

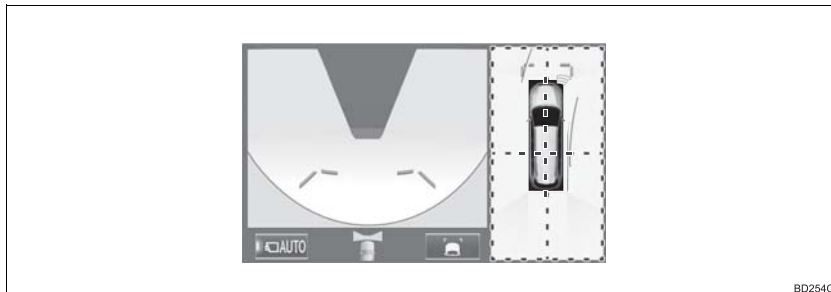

- Touching one of the 4 areas within the dotted lines will magnify that area. (Dotted lines are not displayed on the actual display.)
- To return to the normal view, touch the panoramic view display again.

#### INFORMATION

- The magnifying function is enabled when all of the following conditions are met:
  - The wide front view & panoramic view or the rear view & panoramic view is displayed.
  - The vehicle speed is below approximately 7 mph (12 km/h).
  - The intuitive parking assist is on.
- In the following situations, the magnified display will be canceled automatically:
  - The vehicle speed is approximately 7 mph (12 km/h) or higher.
  - The intuitive parking assist is turned off.

### 3. PANORAMIC VIEW MONITOR

## 7. PANORAMIC VIEW MONITOR PRECAUTIONS


### AREA DISPLAYED ON SCREEN

#### AREA OF IMAGE OF PANORAMIC VIEW

The panoramic view monitor displays an image of the surrounding view of the vehicle.

Since the panoramic view processes and displays images based on flat road surfaces, it cannot depict the position of three-dimension objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. Even if there is room between the bumpers of the vehicles and it seems not likely to collide in the image, in reality, the both vehicles are on a collision course.

Check the safety of the surroundings directly.

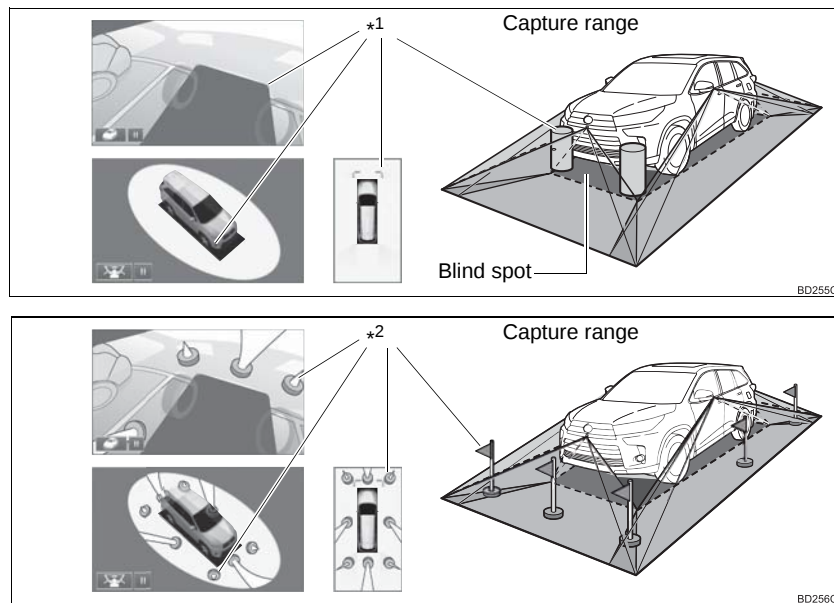


\*1: Objects located in the shaded areas will not be displayed on the screen.

\*2: Parts of objects which extend above a certain height cannot be displayed on the screen.

**INFORMATION**


- As the images obtained from four cameras are processed and displayed on the standard of a flat road surface; the panoramic view/moving view/see-through view may be displayed as follows.
  - Objects may look collapsed; thinner or bigger than usual.
  - An object with a higher position than the road surface may look farther away than it actually is or may not appear at all.
  - Tall objects may appear protruding from the non-displayed areas of the image.
- Variations in the brightness of the image may appear for every camera.
- The displayed image may be shifted by inclination of the vehicle body, change in vehicle height, etc., depending on the number of passengers, amount of luggage, fuel quantity, etc.
- If the front doors or back door are not completely closed; neither the image nor the guide lines are displayed.
- The position relations of the vehicle icon and the road surface or obstacle may differ from the actual positions.
- The black areas of the vicinity of the vehicle icon are areas that are not captured by the camera.
- Images like the following are combined, thus some areas may be difficult to view.

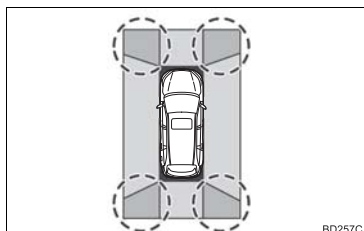**WARNING**

- When the intuitive parking assist display is red or the buzzer continuously sounds, be sure to check directly and do not proceed any further. An unexpected accident may occur, such as a vehicle collision.

**AREA OF THE IMAGE CAPTURED BY THE CAMERA**

## ► Wide front view

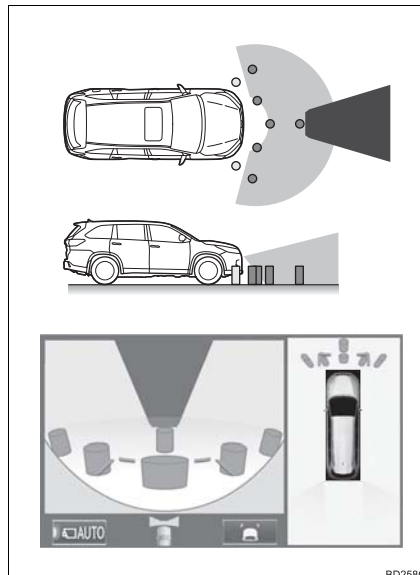


6


PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR


#### ► Side views

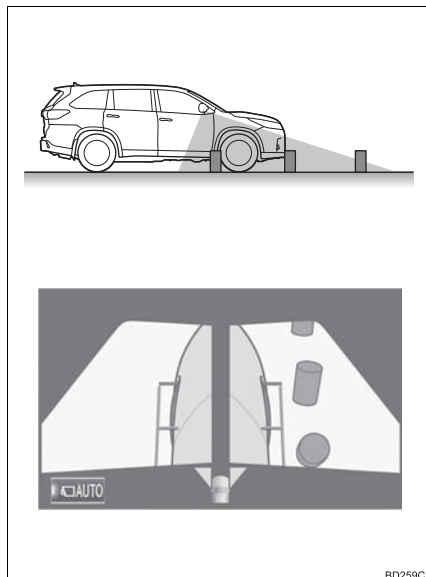

#### ► Rear view

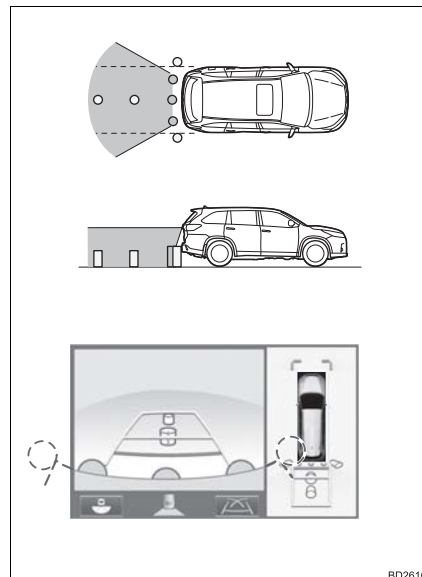

### ► Wide rear view

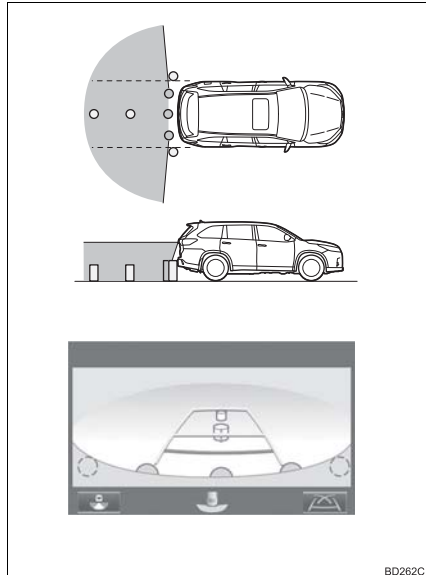


#### INFORMATION

- Black masking is done for distance detection differences to the front of the vehicle.
- The area covered by the camera is limited. Objects which are close to either corner of the bumper or under the bumper cannot be seen on the screen.
- The area displayed on the screen may vary depending on vehicle orientation or road conditions.
- The camera uses a special lens. The distance in the image displayed on the screen will differ from the actual distance.


### THE CAMERA

The cameras for the panoramic view monitor are located as shown in the illustration.


#### ► Front camera

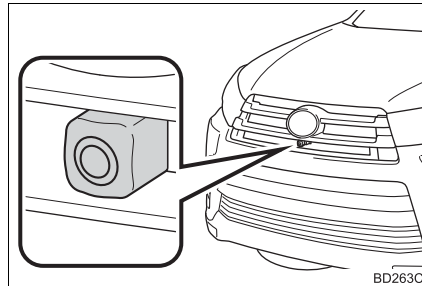

#### ► Side cameras

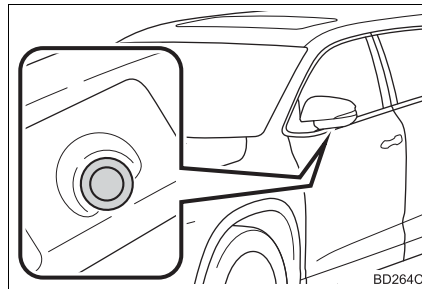

#### ► Rear camera

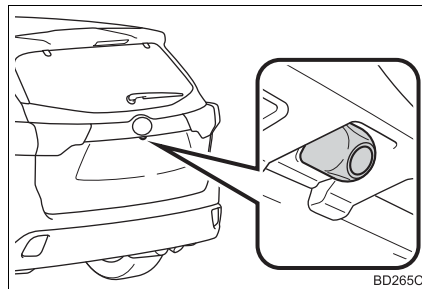

### 3. PANORAMIC VIEW MONITOR

#### USING THE CAMERA

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.



#### NOTICE


- The panoramic view monitor may not operate properly in the following cases.
  - If the camera is hit, the position and mounting angle of the camera may change.
  - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
  - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
  - Do not allow an organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
  - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
  - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impacts as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

### DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

### WHEN THE GROUND BEHIND THE VEHICLE SLOPES UP SHARPLY

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

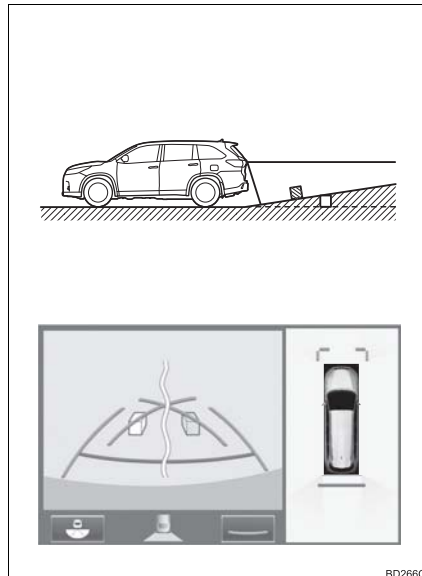

BD266C


6

PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR


#### WHEN THE GROUND BEHIND THE VEHICLE SLOPES DOWN SHARPLY

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide-lines and the actual distance/course on the road.

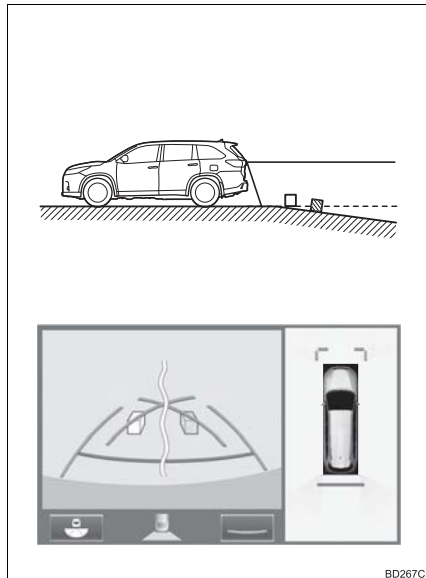

#### WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

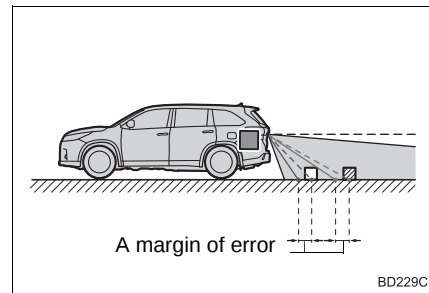


### DISTORTION OF THREE-DIMENSIONAL OBJECTS ON THE SCREEN

When there are three-dimensional objects (such as vehicle bumpers, etc.) nearby in positions higher than the surface of the road, take extra care when using the following.

#### PANORAMIC VIEW DISPLAY (INCLUDING MAGNIFIED DISPLAY)

Since the panoramic view processes and displays images based on flat road surfaces, it cannot depict the position of three-dimension objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. Even if there is room between the bumpers of the vehicles and it seems not likely to collide in the image, in reality, the both vehicles are on a collision course.

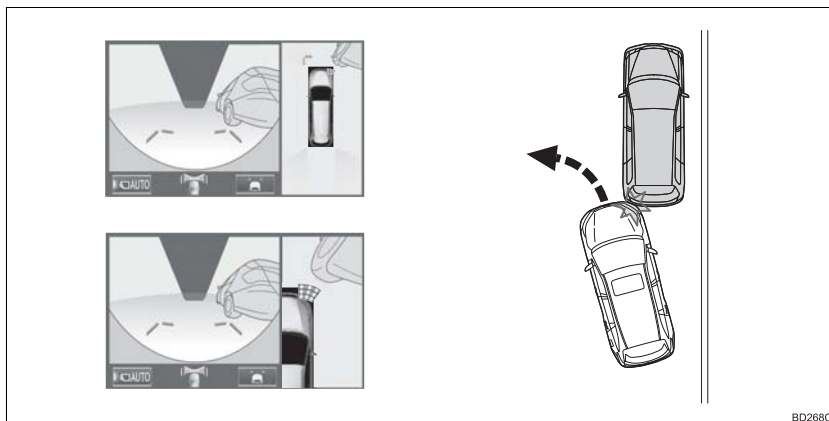

6

PERIPHERAL MONITORING SYSTEM

#### WARNING

- When the intuitive parking assist display is red or the buzzer continuously sounds, be sure to check directly and do not proceed any further. An unexpected accident may occur, such as a vehicle collision.

#### WHEN APPROACHING THREE-DIMENSIONAL OBJECTS


The estimated course lines target flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

#### WARNING

- When the intuitive parking assist display is red or the buzzer continuously sounds, be sure to check directly and do not proceed any further. An unexpected accident may occur, such as a vehicle collision.


#### ESTIMATED COURSE LINES

Since the estimated course line is displayed for a flat road surface, it can not depict the position of three-dimensional objects (such as vehicle bumpers, etc.) that are in positions higher than the surface of the road. Even if the bumpers of the vehicle is on the outside of the estimated course line in the image, in reality, the vehicles are on a collision course.

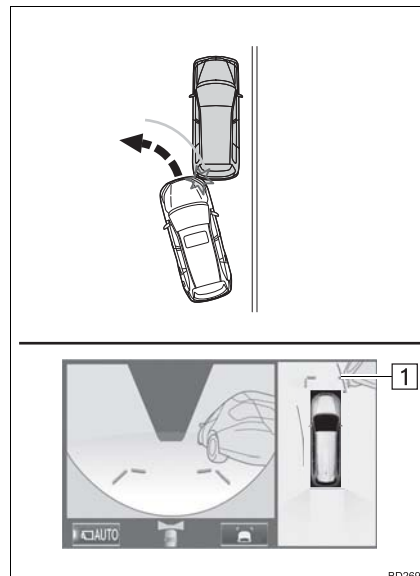


1 Estimated course line

Three-dimensional objects (such as the overhang of a wall or loading platform of a truck) in high positions may not be projected on the screen. Check the safety of the surroundings directly.

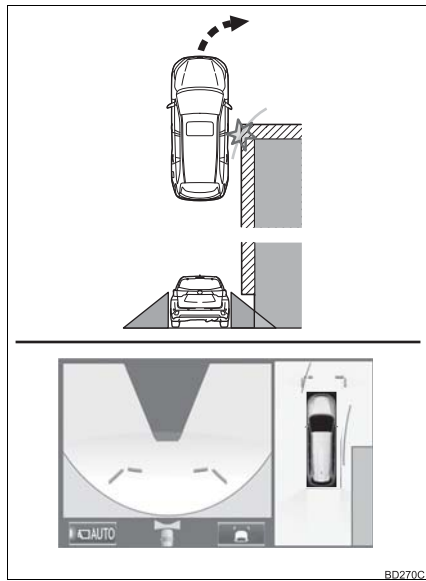

BD270C

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

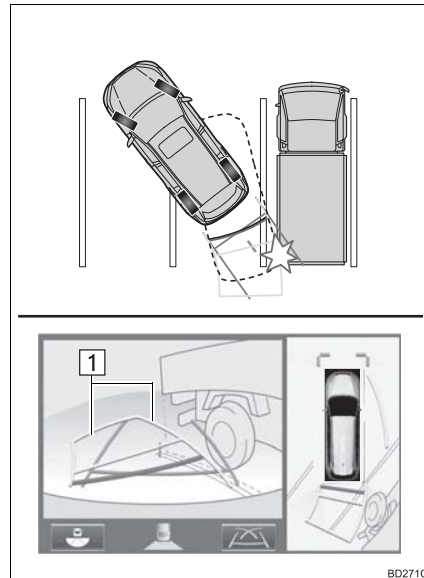

BD271C

1 Estimated course lines

6


PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR

#### DISTANCE GUIDE LINES


Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is farthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

Positions of A, B and C

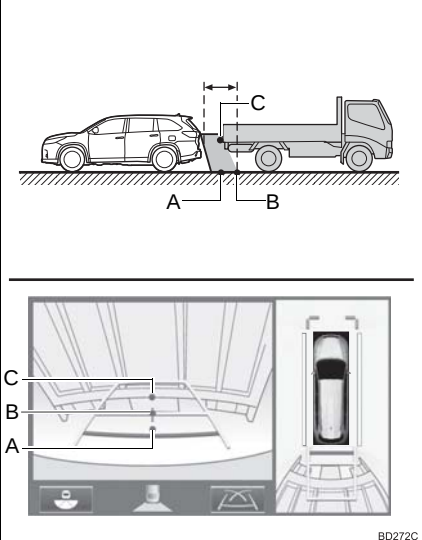

#### MAGNIFYING FUNCTION

When the panoramic view is magnified, walls and lines on the road on the magnified panoramic view display may look more distorted than those on the normal panoramic view display.

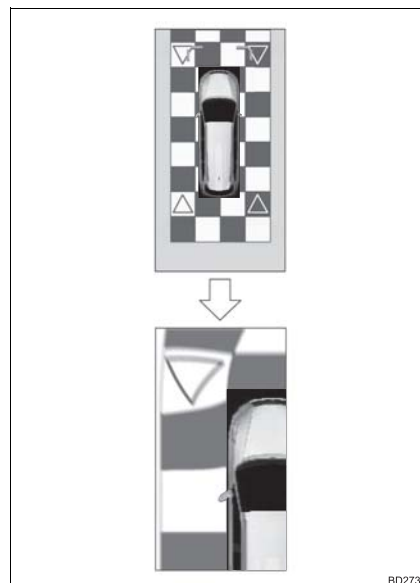

#### INFORMATION

- When the panoramic view is magnified, guide lines will not be displayed.

### 3. PANORAMIC VIEW MONITOR

## 8. THINGS YOU SHOULD KNOW

#### IF YOU NOTICE ANY SYMPTOMS

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

| Symptom                       | Likely cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Solution                                                                                                                                                                                                                                                                                  |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The image is difficult to see | <ul style="list-style-type: none"><li>• The vehicle is in a dark area</li><li>• The temperature around the lens is either high or low</li><li>• The outside temperature is low</li><li>• There are water droplets on the camera</li><li>• It is raining or humid</li><li>• Foreign matter (mud etc.) is adhering to the camera</li><li>• Sunlight or headlights are shining directly into the camera</li><li>• The vehicle is under fluorescent lights, sodium lights, mercury lights etc.</li></ul> | Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)<br>The procedure for adjusting the picture quality of the panoramic view monitor system is the same as the procedure for adjusting the navigation screen. (→P.41) |
| The image is blurry           | Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.                                                                                                                                                                                                                                                                                                                                                                                                           | Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.                                                                                                                                                                                 |
| The image is out of alignment | The camera or surrounding area has received a strong impact.                                                                                                                                                                                                                                                                                                                                                                                                                                         | Have the vehicle inspected by your Toyota dealer.                                                                                                                                                                                                                                         |

6

PERIPHERAL MONITORING SYSTEM

### 3. PANORAMIC VIEW MONITOR

| Symptom                                                                    | Likely cause                                                                                                                                                                                                                                                                                                               | Solution                                                                                                                                |
|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| The guide lines are very far out of alignment                              | The camera position is out of alignment.                                                                                                                                                                                                                                                                                   | Have the vehicle inspected by your Toyota dealer.                                                                                       |
|                                                                            | <ul style="list-style-type: none"> <li>• The vehicle is tilted. (There is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li> <li>• The vehicle is used on an incline.</li> </ul>                                                                                                         | If this happens due to these causes, it does not indicate a malfunction.<br>Back up while visually checking the vehicle's surroundings. |
| The estimated course lines move even though the steering wheel is straight | There is a malfunction in the signals being output by the steering sensor.                                                                                                                                                                                                                                                 | Have the vehicle inspected by your Toyota dealer.                                                                                       |
| Guide lines are not displayed                                              | The back door is open.                                                                                                                                                                                                                                                                                                     | Close the back door.<br>If this does not resolve the symptom, have the vehicle inspected by your Toyota dealer.                         |
| The estimated course lines are not displayed                               | <ul style="list-style-type: none"> <li>• The steering wheel has been moved while the 12-volt battery was being reinstalled.</li> <li>• 12-volt battery power is low.</li> <li>• The steering sensor has been reinstalled.</li> <li>• There is a malfunction in the signals being output by the steering sensor.</li> </ul> | Have the vehicle inspected by your Toyota dealer.                                                                                       |
| The panoramic view display cannot be magnified                             | The Intuitive parking assist may be malfunctioning or dirty.                                                                                                                                                                                                                                                               | Follow the correction procedures for malfunctions of the Intuitive parking assist. (→P.250)                                             |
| The See-through view/Moving view cannot be displayed                       |                                                                                                                                                                                                                                                                                                                            |                                                                                                                                         |

## PRODUCT LICENSE

This product contains eT-Kernel Multi-Core Edition™ real-time OS of eSOL Co.,Ltd.  
Copyright (c) 2016 eSOL Co.,Ltd.

eT-Kernel Multi-Core Edition™ is a trademark of eSOL Co.,Ltd in Japan.

T-Kernel


This Product uses the Source Code of T-Kernel under T-License granted by the  
T-Engine Forum ([www.t-engine.org](http://www.t-engine.org)).

4. INTUITIVE PARKING ASSIST

1. INTUITIVE PARKING ASSIST\*

The distance to obstacles measured by the sensors is communicated via the display and a buzzer when parallel parking or maneuvering into a garage. Always check the surrounding area when using this system.

TYPES OF SENSORS

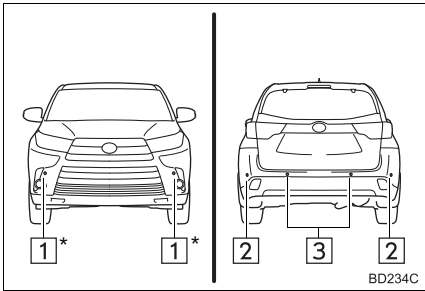

1 Front corner sensors


2 Rear corner sensors

3 Rear center sensors

\*: if equipped

INTUITIVE PARKING ASSIST SWITCH

1 Turns the intuitive parking assist on/off

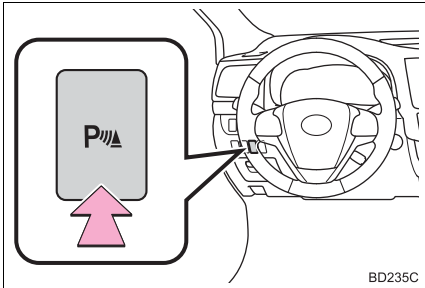


● When on, the indicator light comes on to inform the driver that the system is operational.

DISPLAY

When the sensors detect an obstacle, the graphic is shown on the multi-information display and navigation display according to position and distance to the obstacle.

MULTI-INFORMATION DISPLAY

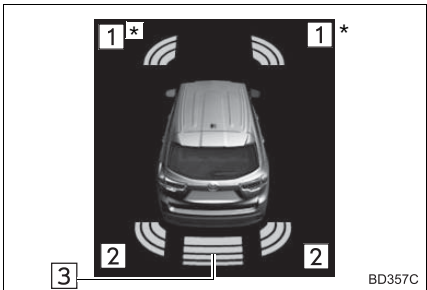

1 Front corner sensors operation

2 Rear corner sensors operation

3 Rear center sensors operation

\*: if equipped

SCREEN DISPLAY

- ▶ When the vehicle is moving forward
  - The graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P.257)
- ▶ When the vehicle is moving backward
  - A simplified image is displayed on the screen when an obstacle is detected. (→P.200, 228)

 
\*: If equipped

THE DISTANCE DISPLAY AND BUZZER

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

■ Distance display

Sensors that detect an obstacle will illuminate continuously or blink.

| Display* <sup>1</sup>                                                                              | Insert display                                                                                            |                                                                                                           | Approximate distance to obstacle |                                 |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|----------------------------------|---------------------------------|
|                                                                                                    | Toyota parking assist monitor                                                                             | Panoramic view monitor                                                                                    | Rear center sensor               | Front and rear corner sensor    |
| <br>(continuous)   | <br>(blinking slowly)    | <br>(blinking slowly)    | 4.9 to 2.0 ft.<br>(150 to 60 cm) | —                               |
| <br>(continuous)   | <br>(blinking)           | <br>(blinking)           | 2.0 to 1.6 ft.<br>(60 to 50 cm)  | 2.0 to 1.5 ft.<br>(60 to 45 cm) |
| <br>(continuous) | <br>(blinking rapidly) | <br>(blinking rapidly) | 1.6 to 1.3 ft.<br>(50 to 40 cm)  | 1.5 to 1.0 ft.<br>(45 to 30 cm) |

| Display*1                                                                        | Insert display                                                                    |                                                                                   | Approximate distance to obstacle |                              |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------|------------------------------|
|                                                                                  | Toyota parking assist monitor                                                     | Panoramic view monitor                                                            | Rear center sensor               | Front and rear corner sensor |
|  |  |  | Less than 1.3 ft.<br>(40 cm)     | Less than 1.0 ft.<br>(30 cm) |
| (blinking*2 or continuous*3)                                                     | (continuous)                                                                      | (continuous)                                                                      |                                  |                              |

\*1: The images may differ from that shown in the illustrations. (→P.250)

\*2: Multi-information display

\*3: Screen display

**Buzzer operation and distance to an obstacle**


A buzzer sounds when the sensors are operating.

- The buzzer sounds faster as the vehicle approaches an obstacle.  
When the vehicle comes within the following distance of the obstacle, the buzzer sounds continuously.
  - Front corner sensors: Approximately 30 cm
  - Rear corner sensors: Approximately 1.0 ft. (30 cm)
  - Rear center sensors: Approximately 1.3 ft. (40 cm)
- When 2 or more obstacles are detected simultaneously, the buzzer system responds to the nearest obstacle. If one or both come within the above distances, the beep will repeat a long tone, followed by fast beeps.

**INFORMATION**

- Settings (e.g. buzzer volume) can be changed. (→P.256)

## DETECTION RANGE OF THE SENSORS

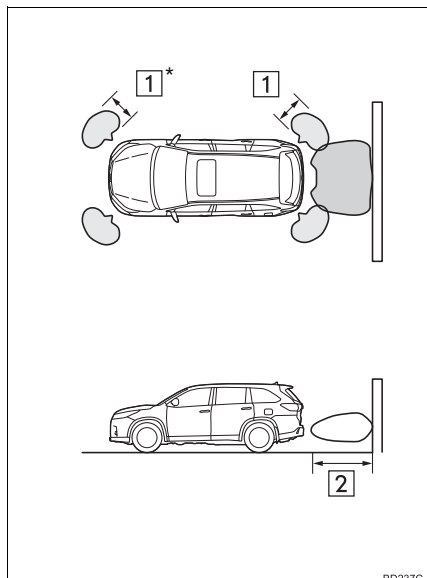

**1** Approximately 2.0 ft. (60 cm)

**2** Approximately 4.9 ft. (150 cm)

\*: if equipped

- The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.
- The range of the sensors may change depending on the shape of the object etc.

## SENSOR DETECTION INFORMATION

Certain vehicle conditions and surrounding environments, such as the following, may affect the ability of the sensors to correctly detect objects. Pay particular attention in the following situations. Failure to do so may result in the vehicle being driven unsafely, possibly leading to an accident.

- There is dirt, snow or ice on a sensor.
- A sensor is frozen.
- A sensor is covered in any way.
- The vehicle is leaning considerably to one side.
- On an extremely bumpy road, on an incline, on gravel, or on grass
- The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- There is another vehicle equipped with parking assist-sensors in the vicinity.
- A sensor is coated with a sheet of spray or heavy rain.
- The vehicle is equipped with a fender pole or radio antenna.
- Towing eyelets are installed.
- A bumper or sensor receives a strong impact.

- The vehicle is approaching a tall or right-angled curb.
- In harsh sunlight or intense cold weather.
- A non-genuine Toyota suspension (lowered suspension etc.) is installed.
- People, animals and other moving objects
- People wearing certain types of clothing

● In addition to the examples above, there are instances in which, because of their shapes, signs and other objects may be judged by a sensor to be closer than they are.

- The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:
  - Wires, fences, ropes, etc.
  - Cotton, snow and other materials that absorb sound waves
  - Sharply-angled objects
  - Low obstacles
  - Tall obstacles with upper sections projecting outwards in the direction of your vehicle



## WARNING

- Caution when using the intuitive parking assist-sensor  
Observe the following precautions.  
Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.
  - Do not use the sensor at speeds in excess of 6 mph (10 km/h).
  - Do not attach any accessories within the sensor range.
- Even though sensors which are functioning properly continue to detect obstacles, never use the intuitive parking assist if one more sensor(s) may be malfunctioning.



## NOTICE

- Notes when washing the vehicle
- Do not apply intensive bursts of water or steam to the sensor area.
- Doing so may result in the sensor malfunctioning.
- As the intuitive parking assist-sensor might be malfunctioning in the following cases, have it checked by your Toyota dealer.
  - The graphic which indicates that an obstacle has been detected does not come on and a beep does not sound even when the intuitive parking assist mode is turned on.
  - The graphic which indicates that an obstacle has been detected comes on despite no obstacle around the vehicle.
  - If your vehicle has been involved in an accident.
  - If the graphic which indicates that an obstacle has been detected remains on without a beeping sound.

## INTUITIVE PARKING ASSIST- SENSOR FAILURE WARNING

If an error is detected when the intuitive parking assist-sensor is turned on, the vehicle symbol comes on or flashes with beeping sounds.

### INFORMATION

- The intuitive parking assist-sensor failure warning display is not given in either of the following operations:
  - Changing to another screen
  - Turning off the main switch for the intuitive parking assist-sensor

## WHEN SNOWFLAKES OR MUD GETS ON THE SENSORS

If “Clean the parking assist sensor.” appears, remove the foreign matter from the sensor.

### INFORMATION

- If the failure warning does not go off even after the foreign matter is removed, the intuitive parking assist-sensor may be malfunctioning. Have it checked by your Toyota dealer.

## WHEN THE SENSOR IS MALFUNCTIONING

If “Have your vehicle checked by a dealer.” appears, have the intuitive parking assist-sensor checked by your Toyota dealer.

## CERTIFICATION


► For vehicles sold in Canada.

- This ISM device complies with Canadian ICES-001.
- Cet appareil ISM est conforme à la norme NMB-001 du Canada.


# 2. INTUITIVE PARKING ASSIST SETTING

The volume of the beeps, turning on or off of the display, etc. can be set.

- 1 Press the “APPS” button.

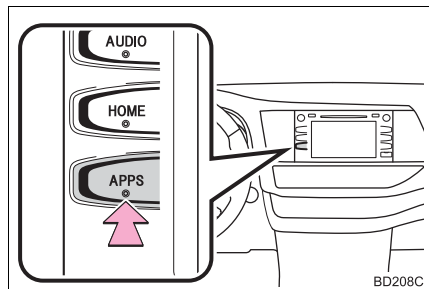


- 2 Select “Setup”.
- 3 Select “Vehicle”.
- 4 Select “TOYOTA Park Assist Settings”.
- 5 Select the desired button.

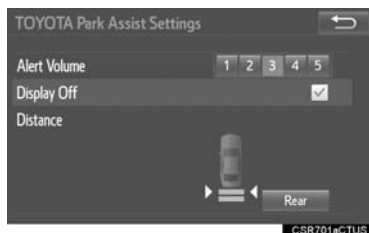

## SETTING AN ALERT VOLUME

The alert volume can be adjusted.

- 1 Display the “TOYOTA Park Assist Settings” screen. (→P.256)
- 2 Select the desired screen button.

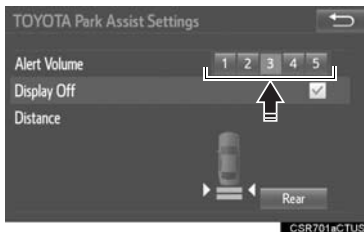


- The volume has 5 levels, increasing with higher value.

## SETTING A PARKING SONAR DISPLAY

Parking sonar display can be set to on or off.

- 1 Display the “TOYOTA Park Assist Settings” screen. (→P.256)
- 2 Select “**Display Off**” to turn off the parking sonar display.

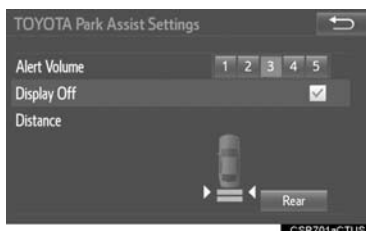


### INFORMATION

- Although “**Display Off**” is selected, if the obstacle is detected during the peripheral monitoring, the warning appears on the screen.

## SETTING A DISPLAY AND TONE INDICATION

Back sensors display and tone indication can be set.

- 1 Display the “TOYOTA Park Assist Settings” screen. (→P.256)
- 2 Select “**Rear**”.

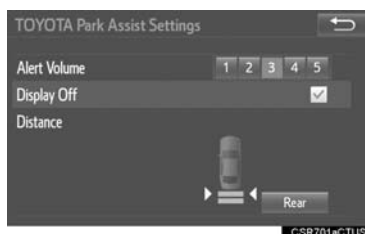

- Selecting “**Rear**” to switch the distance for the back sensors display and tone indication, from long distance to short distance, or from short distance to long distance.



## PHONE

1

**PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)**

- 1. QUICK REFERENCE ..... 260**
- 2. SOME BASICS ..... 261**
  - REGISTERING/CONNECTING A Bluetooth® PHONE ..... 261
  - USING THE PHONE SWITCH/MICROPHONE ..... 262
  - VOICE COMMAND SYSTEM..... 263
  - ABOUT THE CONTACTS IN THE CONTACT LIST ..... 264
  - WHEN SELLING OR DISPOSING OF THE VEHICLE..... 264
- 3. CALLING ON THE Bluetooth® PHONE..... 265**
  - BY FAVORITES LIST ..... 266
  - BY CALL HISTORY ..... 266
  - BY CONTACTS LIST ..... 267
  - BY DIAL PAD ..... 269
  - BY OFF HOOK SWITCH ..... 269
  - BY "Home" SCREEN ..... 270
- 4. RECEIVING ON THE Bluetooth® PHONE..... 271**
  - INCOMING CALLS ..... 271
- 5. TALKING ON THE Bluetooth® PHONE ..... 272**
  - INCOMING CALL WAITING ..... 274
- 6. Bluetooth® PHONE MESSAGE FUNCTION ..... 275**
  - RECEIVING A MESSAGE ..... 276
  - CHECKING MESSAGES..... 276
  - REPLYING TO A MESSAGE (QUICK REPLY)..... 277
  - CALLING THE MESSAGE SENDER... 278

2

**SETUP**

- 1. PHONE/MESSAGE SETTINGS..... 280**
  - PHONE/MESSAGE SETTINGS SCREEN ..... 280
  - "Sound Settings" SCREEN ..... 281
  - "Contact/Call History Settings" SCREEN ..... 282
  - "Messaging Settings" SCREEN ..... 290
  - "Phone Display Settings" SCREEN ..... 291

3


**WHAT TO DO IF...**

- 1. TROUBLESHOOTING ..... 292**

1. QUICK REFERENCE

The phone top screen can be used to make a phone call. To display the hands-free operation screen, press the **“APPS”** button and select **“Phone”**, the  switch on the steering wheel or  switch on the instrument panel.

Several functions are available to operate on each screen that is displayed by selecting the 4 tabs.

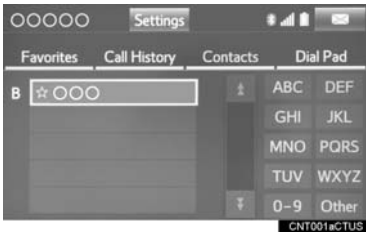

| Function           |                                             | Page |
|--------------------|---------------------------------------------|------|
| Phone operation    | Registering/connecting Bluetooth® phone     | 44   |
|                    | Calling on the Bluetooth® phone             | 265  |
|                    | Receiving on the Bluetooth® phone           | 271  |
|                    | Talking on the Bluetooth® phone             | 272  |
| Message function   | Using the Bluetooth® phone message function | 275  |
| Setting up a phone | Phone settings                              | 280  |
|                    | Bluetooth® settings                         | 51   |

## 2. SOME BASICS

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth®. Bluetooth® is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.



### WARNING

- While driving, do not use a cellular phone or connect the Bluetooth® phone.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.



### NOTICE

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

### INFORMATION

- If your cellular phone does not support Bluetooth®, this system cannot function.
- In the following conditions, the system may not function:
  - The cellular phone is turned off.
  - The current position is outside the communication area.
  - The cellular phone is not connected.
  - The cellular phone has a low battery.
- When using Bluetooth® audio and hands-free at the same time, the following problems may occur:
  - The Bluetooth® connection may be cut.
  - Noise may be heard on the Bluetooth® audio playback.

## REGISTERING/CONNECTING A Bluetooth® PHONE

To use the hands-free system for cellular phones, it is necessary to register a cellular phone with the system. (→P.44)


### Bluetooth® PHONE CONDITION DISPLAY

The condition of the Bluetooth® phone appears on the upper right side of the screen. (→P.18)

## USING THE PHONE SWITCH/ MICROPHONE

### STEERING SWITCH

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

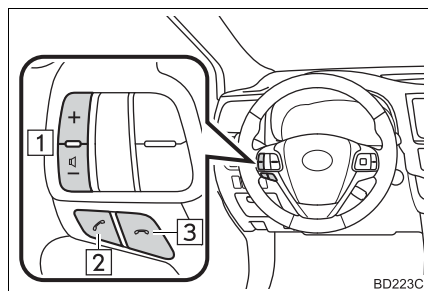

**1** Volume control switch

- Press the “+” switch to increase the volume.
- Press the “-” switch to decrease the volume.


**2** Off hook switch

**3** On hook switch


### MICROPHONE

The microphone is used when talking on the phone.

► Type A

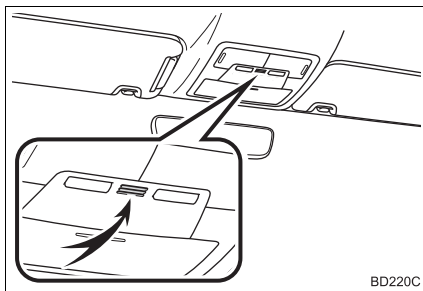


► Type B

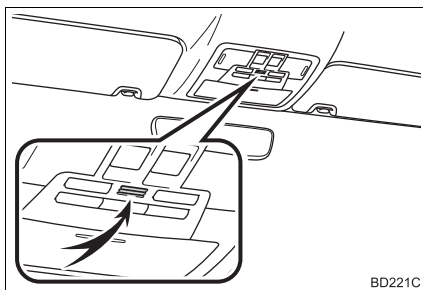

## VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.

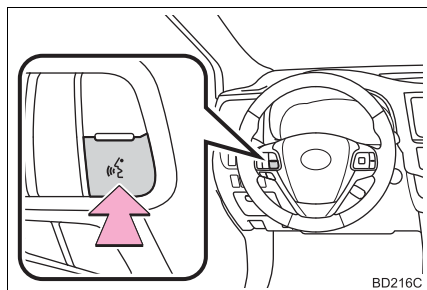

- The voice command system and its list of commands can be operated. (→P.168)

## INFORMATION

- The other party's voice will be heard from the front speakers. The audio/visual system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
  - Driving on an unpaved road. (Making excessive traffic noise.)
  - Driving at high speeds.
  - The roof or windows are open.
  - The air conditioning vents are pointed towards the microphone.
  - The sound of the air conditioning fan is loud.
  - There is a negative effect on sound quality due to the phone and/or network being used.

## ABOUT THE CONTACTS IN THE CONTACT LIST

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
  - Contact data
  - Call history data
  - Favorites data
  - Image data
  - All phone settings
  - Message settings

### INFORMATION

- When a phone's registration is deleted, the above-mentioned data is also deleted.

## WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (→P.64)

- The following data in the system can be initialized:
  - Contact data
  - Call history data
  - Favorites data
  - Image data
  - All phone settings
  - Message settings


### INFORMATION

- Once initialized, the data and settings will be erased. Pay much attention when initializing the data.

3. CALLING ON THE Bluetooth® PHONE


After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are several methods by which a call can be made, as described below.

1 Press the “APPS” button.

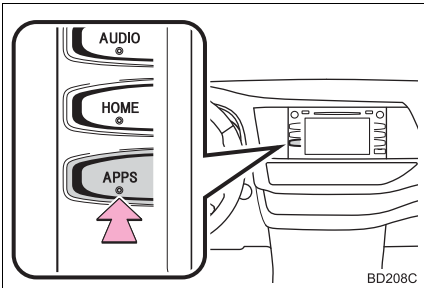

2 Select “Phone”.

3 Select the desired tab to call from.

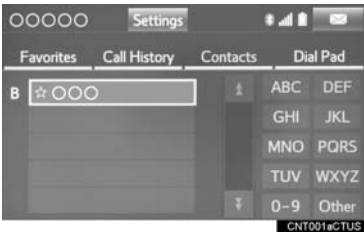

- The phone top screen can be displayed by pressing the  switch on the steering wheel or  switch on the instrument panel.

| How to make a call list              | Page |
|--------------------------------------|------|
| By favorites list                    | 266  |
| By call history                      | 266  |
| By contacts list* <sup>1</sup>       | 267  |
| By dial pad* <sup>1</sup>            | 269  |
| By e-mail/SMS/MMS                    | 278  |
| By POI call* <sup>2</sup>            | 312  |
| By off hook switch                   | 269  |
| By Entune App Suite* <sup>1, 2</sup> | 378  |
| By voice command system              | 172  |
| By “Home” screen                     | 270  |

\*1: The operation cannot be performed while driving.

\*2: Entune Premium Audio only

## BY FAVORITES LIST

Calls can be made using registered contacts which can be selected from a contact list. (→P.287)

- 1 Display the phone top screen. (→P.265)
- 2 Select the **“Favorites”** tab and select the desired contact.




- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

## BY CALL HISTORY

Up to 30 of the latest call history items (missed, incoming and outgoing) can be selected from the “Call History” tab.

- 1 Display the phone top screen. (→P.265)
- 2 Select the **“Call History”** tab and select  or the desired contact.

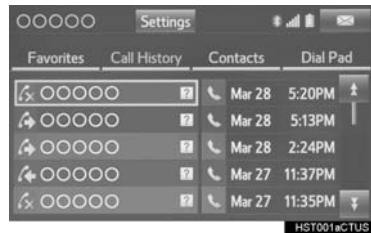

- The icons of call type are displayed.



: Missed call



: Incoming call



: Outgoing call

- When  is selected

- 3 Check that the “Call” screen is displayed.

- When the desired contact is selected

- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

**INFORMATION**


- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the contact list is received, the name is displayed.
- Number-withheld calls are also memorized in the system.
- International phone calls may not be made depending on the type of cellular phone you have.
- The list should group together consecutive entries with the same phone number and same call type. For example, two calls from Kay Rowles's mobile would be displayed as follows: Kay Rowles (2)
- By pressing the  switch on the steering wheel, a call to the latest history item can be made.

**BY CONTACTS LIST**

Calls can be made by using contact data which is transferred from a registered cellular phone. (→P.268)

Up to 2500 contacts (maximum of 4 phone numbers and e-mail addresses per contact) can be registered in the contact list.

- 1 Display the phone top screen. (→P.265)
- 2 Select the **“Contacts”** tab and select the desired contact.

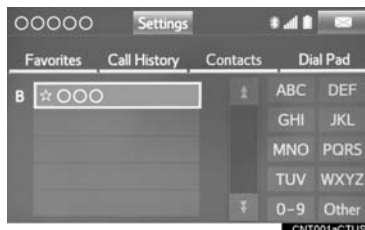


- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

WHEN THE CONTACT IS  
EMPTY

FOR PBAP COMPATIBLE  
Bluetooth® PHONES

- ▶ When “Automatic Transfer” is set to on (→P.282)
- Contacts are transferred automatically.
- ▶ When “Automatic Transfer” is set to off (→P.282)

1 Select the desired item.

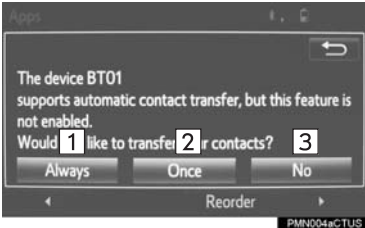

| No. | Function                                                                                                              |
|-----|-----------------------------------------------------------------------------------------------------------------------|
| 1   | Select to transfer new contacts from a cellular phone, select “ <b>Always</b> ” and then enable “Automatic Transfer”. |
| 2   | Select to transfer all the contacts from a connected cellular phone only once.                                        |
| 3   | Select to cancel transferring.                                                                                        |

2 Check that a confirmation screen is displayed when the operation is complete.

FOR PBAP INCOMPATIBLE BUT  
OPP COMPATIBLE Bluetooth®  
PHONES

1 Select the desired item.



| No. | Function                                                           |
|-----|--------------------------------------------------------------------|
| 1   | Select to transfer the contacts from the connected cellular phone. |
| 2   | Select to add a new contact manually.                              |
| 3   | Select to cancel transferring.                                     |

▶ When “Transfer” is selected

2 Follow the steps in “FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES” from “STEP 2”. (→P.283)

▶ When “Add” is selected

2 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.284)

**INFORMATION**

- Manual transfer operation cannot be performed while driving.
- If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.
- Depending on the type of Bluetooth® phone:
  - It may be necessary to perform additional steps on the phone when transferring contact data.
  - The registered image in the contact list may not transfer depending on the type of Bluetooth® phone connected.

**BY DIAL PAD**

- 1 Display the phone top screen. (→P.265)
- 2 Select the “Dial Pad” tab and enter the phone number.



- 3 Select  or press the  switch on the steering wheel.
- 4 Check that the “Call” screen is displayed.

**INFORMATION**

- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

**BY OFF HOOK SWITCH**

Calls can be made using the latest call history item.

- 1 Press the  switch on the steering wheel to display the phone top screen.
- 2 Press the  switch on the steering wheel to display the “Call History” screen.
- 3 Press the  switch on the steering wheel to call the latest history item.
- 4 Check that the “Call” screen is displayed.

## BY “Home” SCREEN

1 Display the home screen. (→P.37)

2 Select the desired contact.



3 Check that the “Call” screen is displayed.

## REGISTERING A NEW CONTACT

1 Select and hold the screen button to add a contact.

2 Select the desired contact.

3 Select the desired number.

### INFORMATION

- If there is no contact in the contacts list, the contacts cannot be registered at the home screen.
- The contact cannot be registered at the home screen while driving.

4. RECEIVING ON THE Bluetooth® PHONE

INCOMING CALLS

When a call is received, this screen is displayed with a sound.

- 1 Select  or press the  switch on the steering wheel to talk on the phone.



**To refuse to receive the call:** Select  or press the  switch on the steering wheel.


**To adjust the volume of a received call:** Turn the “PWR•VOL” knob, or use the volume control switch on the steering wheel.

INFORMATION

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The incoming call display mode can be set. (→P.291)
- The ringtone that has been set in the “Sound Settings” screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the system and Bluetooth® phone may sound simultaneously when there is an incoming call. (→P.281)

5. TALKING ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.

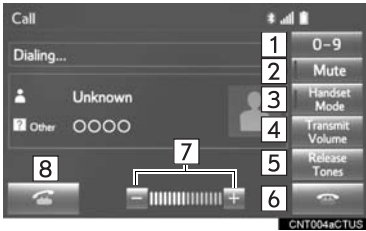

| No. | Function                                                                                                       | Page |
|-----|----------------------------------------------------------------------------------------------------------------|------|
| 1   | Select to display the dial pad to send tones.                                                                  | 272  |
| 2   | Select to mute your voice to the other party.                                                                  | —    |
| 3   | Select to change handset modes between hands-free and cellular phone.                                          | —    |
| 4   | Select to adjust your voice volume that the other party hears from their speaker.                              | 273  |
| 5   | Select to send tones. This button only appears when a number that contains a (w) is dialed in hands-free mode. | 273  |
| 6   | Select to hang up the phone.                                                                                   | —    |
| 7   | Select “+” or “-” to adjust the volume of the other party’s voice.                                             | —    |
| 8   | Select to start talking with the other party.                                                                  | 274  |

INFORMATION

- Changing from hands-free call to cellular phone call is not possible while driving.
- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.

SENDING TONES

BY DIAL PAD

This operation cannot be performed while driving.

- 1 Select “0-9”.



- 2 Enter the desired number.

**■ BY SELECTING “Release Tones”**

“Release Tones” appear when a continuous tone signal(s) containing a (w) is registered in the contact list.


This operation can be performed while driving.

**1 Select “Release Tones”.****INFORMATION**

- A continuous tone signal is a character string that consists of numbers and the characters **p** or **w**. (e.g. 056133w0123p#1\*)
- When the “p” pause tone is used, the tone data up until the next pause tone will be automatically sent after 2 seconds have elapsed. When the “w” pause tone is used, the tone data up until the next pause tone will be automatically sent after a user operation is performed.
- Release tones can be used when automated operation of a phone based service such as an answering machine or bank phone service is desired. A phone number with continuous tone signals can be registered in the contact list.
- Tone data after a “w” pause tone can be operated on voice command during a call.

**TRANSMIT VOLUME SETTING**

- 1 Select “Transmit Volume”.
- 2 Select the desired level for the transmit volume.

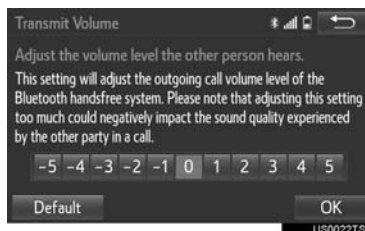
**3 Select “OK”.****INFORMATION**

- The sound quality of the voice heard from the other party's speaker may be negatively impacted.
- To reset the transmit volume, select “Default”.
- “Transmit Volume” is dimmed when mute is on.

## INCOMING CALL WAITING

When a call is interrupted by a third party while talking, this screen is displayed.

- 1 Select  or press the  switch on the steering wheel to start talking with the other party.

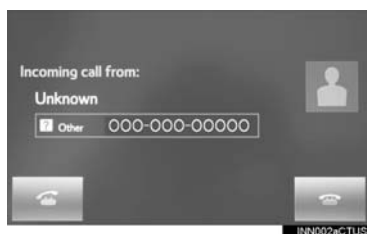

**To refuse to receive the call:** Select  or press the  switch on the steering wheel.

- Each time  is selected or the  switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

### INFORMATION

- This function may not be available depending on the type of cellular phone.

 
6. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying using the system.

Depending on the type of Bluetooth® phone connected, received messages may not be transferred to the message inbox.

If the phone does not support the message function, this function cannot be used.

1 Press the “APPS” button.




2 Select “Phone”.



● You can also display the message inbox screen to select “Messages”. (→STEP4)

3 Select .

- The phone top screen can be displayed by pressing the  switch on the steering wheel or  switch on the instrument panel.
- 4 Check that the message inbox screen is displayed.

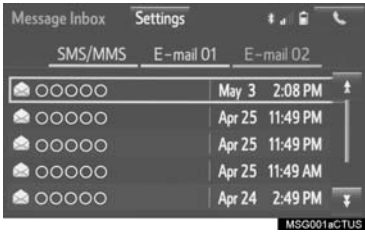

 : Select to change to phone mode.

| Function                            | Page |
|-------------------------------------|------|
| Receiving a message                 | 276  |
| Checking messages                   | 276  |
| Replying to a message (quick reply) | 277  |
| Calling the message sender          | 278  |
| Message settings                    | 290  |

RECEIVING A MESSAGE

When an e-mail/SMS/MMS is received, the incoming message screen pops up with sound and is ready to be operated on the screen.



| No. | Function                           |
|-----|------------------------------------|
| 1   | Select to check the message.       |
| 2   | Select to not open the message.    |
| 3   | Select to call the message sender. |

INFORMATION

- Depending on the cellular phone used for receiving messages, or its registration status with the system, some information may not be displayed.
- The pop up screen is separately available for incoming e-mail and SMS/MMS messages under the following conditions:  
E-mail:
  - “Incoming E-mail Display” is set to “Full Screen”. (→P.290)
  - “E-mail Notification Popup” is set to on. (→P.290)SMS/MMS:
  - “Incoming SMS/MMS Display” is set to “Full Screen”. (→P.290)
  - “SMS/MMS Notification Popup” is set to on. (→P.290)

CHECKING MESSAGES

- Display the message inbox screen. (→P.275)
- Select the desired message from the list.
- Check that the message is displayed.



| No. | Function                                                                                                                                                                          |
|-----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1*  | Select “Mark Unread” or “Mark Read” to mark mail unread or read on the message inbox screen. This function is available when “Update Read Status on Phone” is set to on. (→P.290) |
| 2   | Select to reply the message. (→P.277)                                                                                                                                             |
| 3   | Select to display the previous or next message.                                                                                                                                   |
| 4   | Select to have messages read out. To cancel this function, select “Stop”. When “Automatic Message Read-out” is set to on, messages will be automatically read out. (→P.290)       |
| 5   | Select to make a call to the sender.                                                                                                                                              |

\*: E-mail only

**INFORMATION**

- Reading a text message is not available while driving.
- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.
- Messages are displayed in the appropriate connected Bluetooth® phone's registered mail address folder. Select the tab of the desired folder to be displayed.
- Only received messages on the connected Bluetooth® phone can be displayed.
- The text of the message is not displayed while driving.
- Turn the **"PWR•VOL"** knob, or use the volume control switch on the steering wheel to adjust the message read out volume.

**REPLYING TO A MESSAGE (QUICK REPLY)**

15 messages have already been stored.

- 1 Display the message inbox screen. (→P.275)
- 2 Select the desired message from the list.
- 3 Select **"Quick Message"**.



- 4 Select the desired message.
- 5 Select **"Send"**.
  - While the message is being sent, a sending message screen is displayed.
  - To cancel sending the message, select **"Cancel"**.

**INFORMATION**

- Depending on the type of Bluetooth® phone, reply function is not available.

## EDITING QUICK REPLY MESSAGES

This operation cannot be performed while driving.

- 1 Select **"Quick Message"**.



- 2 Select  corresponding to the desired message to edit.
- 3 Select **"OK"** when editing is completed.

### INFORMATION

- To reset the editquick reply messages, select **"Default"**.

- **"Quick Message 1" ("I am driving and will arrive in approximately [ETA] minutes.")**.\*:

This message cannot be edited and will automatically fill in [ETA] with the navigation calculated estimated time of arrival on the confirm message screen. If there are waypoints set, [ETA] to the next waypoint will be shown.

If there is no route currently set in the navigation system, "Quick Message 1" cannot be selected.

\*: Entune Premium Audio only

## CALLING THE MESSAGE SENDER

Calls can be made to an e-mail/SMS/MMS message sender's phone number.

This operation can be performed while driving.

## CALLING FROM E-MAIL/SMS/MMS MESSAGE DISPLAY

- 1 Display the message inbox screen. (→P.275)
- 2 Select the desired message.
- 3 Select .



- If there are 2 or more phone numbers, select the desired number.
- 4 Check that the "Call" screen is displayed.

## ■ CALLING FROM A NUMBER WITH- IN A MESSAGE

Calls can be made to a number identified in a message's text area.

This operation cannot be performed while driving.

- 1 Display the message inbox screen. (→P.275)
- 2 Select the desired message.
- 3 Select the text area.



- 4 Select the desired number.
  - Identified phone numbers contained in the message are displayed.
- 5 Check that the "Call" screen is displayed.

### INFORMATION

- A series of numbers may be recognized as a phone number. Additionally, some phone numbers may not be recognized, such as those for other countries.


## ■ CALLING FROM THE INCOMING MESSAGE SCREEN

→P.276

2. SETUP

1. PHONE/MESSAGE SETTINGS


1 Press the “APPS” button.

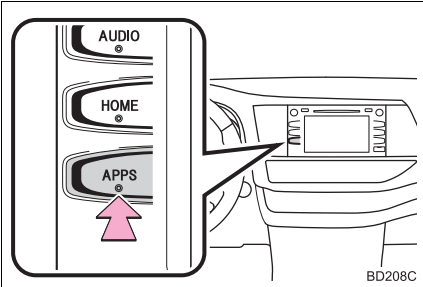


- 2 Select “Setup”.
- 3 Select “Phone”.
- 4 Select the item to be set.

DISPLAYING THE PHONE/ MESSAGE SETTINGS SCREEN IN A DIFFERENT WAY

- 1 Display the phone top screen. (→P.265)
- 2 Select “Settings”.

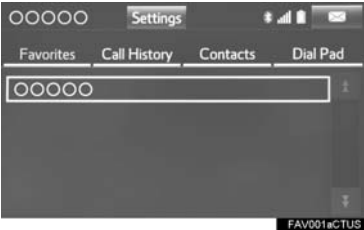

PHONE/MESSAGE SETTINGS SCREEN


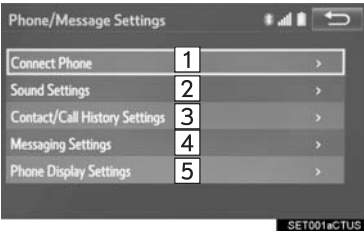


| No. | Information                    | Page |
|-----|--------------------------------|------|
| 1   | Registering/connecting a phone | 51   |
| 2   | Sound settings                 | 281  |
| 3   | Contact/call history settings  | 282  |
| 4   | Messaging settings             | 290  |
| 5   | Phone display settings         | 291  |

## “Sound Settings” SCREEN

The call and ringtone volume can be adjusted. A ringtone can be selected.

- 1 Display the “Phone/Message Settings” screen. (→P.280)
- 2 Select “**Sound Settings**”.
- 3 Select the desired item to be set.

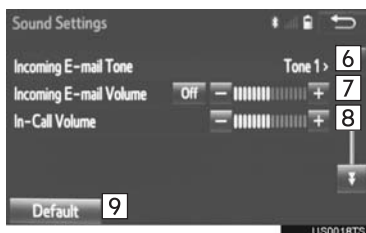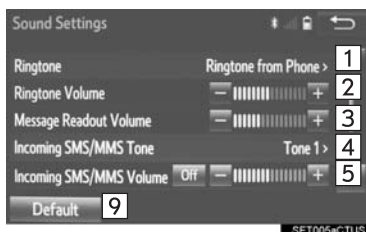

| No. | Function                                                                   |
|-----|----------------------------------------------------------------------------|
| 1   | Select to set the desired ringtone.                                        |
| 2   | Select “-” or “+” to adjust the ringtone volume.                           |
| 3   | Select “-” or “+” to adjust the message readout volume.                    |
| 4   | Select to set the desired incoming SMS/MMS tone.                           |
| 5   | Select “-” or “+” to adjust the incoming SMS/MMS tone volume.              |
| 6   | Select to set the desired incoming e-mail tone.                            |
| 7   | Select “-” or “+” to adjust the incoming e-mail tone volume.               |
| 8   | Select “-” or “+” to adjust the default volume of the other party's voice. |
| 9   | Select to reset all setup items.                                           |

### INFORMATION



- Depending on the type of phone, certain functions may not be available.

## “Contact/Call History Settings” SCREEN

The contact can be transferred from a Bluetooth® phone to the system. The contact also can be added, edited and deleted.

The call history can be deleted and contact and favorites can be changed.

- 1 Display the “Phone/Message Settings” screen. (→P.280)
- 2 Select “Contact/Call History Settings”.
- 3 Select the desired item to be set.

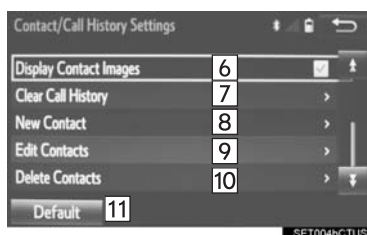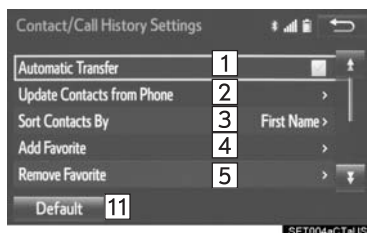

| No. | Function                                                                                                                                                                            | Page |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 1   | For PBAP compatible Bluetooth® phones, select to set automatic contact/history transfer on/off. When set to on, the phone's contact data and history are automatically transferred. | —    |
| 2   | Select to update contacts from the connected phone.                                                                                                                                 | 283  |
| 3   | Select to sort contacts by the first name or last name field.                                                                                                                       | —    |
| 4   | Select to add contacts to the favorites list.                                                                                                                                       | 287  |
| 5   | Select to delete contacts from the favorites list.                                                                                                                                  | 289  |
| 6   | Select to set the transferred contact image display on/off.                                                                                                                         | —    |
| 7*  | Select to clear contacts from the call history.                                                                                                                                     | —    |
| 8*  | Select to add new contacts to the contact list.                                                                                                                                     | 284  |
| 9*  | Select to edit contacts in the contact list.                                                                                                                                        | 285  |
| 10* | Select to delete contacts from the contact list.                                                                                                                                    | 286  |
| 11  | Select to reset all setup items.                                                                                                                                                    | —    |

\*: For PBAP compatible Bluetooth® phones, this function is available when “Automatic Transfer” is set to off. (→P.282)

**INFORMATION**

- Depending on the type of phone, certain functions may not be available.
- Contact data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

**UPDATE CONTACTS FROM PHONE**

Operation methods differ between PBAP compatible and PBAP incompatible but OPP compatible Bluetooth® phones.

If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.

**■ FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES**

This operation cannot be performed while driving.

- 1 Select **“Update Contacts from Phone”**.
- 2 Transfer the contact data to the system using a Bluetooth® phone.
  - This operation may be unnecessary depending on the type of cellular phone.
  - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter “1234” into the Bluetooth® phone.
  - To cancel this function, select **“Cancel”**.
- 3 Check that a confirmation screen is displayed when the operation is complete.

**■ FOR PBAP COMPATIBLE Bluetooth® PHONES**

- 1 Select **“Update Contacts from Phone”**.
  - Contacts are transferred automatically.
- 2 Check that a confirmation screen is displayed when the operation is complete.
  - This operation may be unnecessary depending on the type of cellular phone.
  - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter “1234” into the Bluetooth® phone.
  - If another Bluetooth® device is connected when transferring contact data, depending on the phone, the connected Bluetooth® device may need to be disconnected.
  - Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

## ■ UPDATING THE CONTACTS IN A DIFFERENT WAY (FROM THE “Call History” SCREEN)

For PBAP compatible Bluetooth® phones, this function is available when “Automatic Transfer” is set to off. (→P.282)

- 1 Display the phone top screen. (→P.265)
- 2 Select the “**Call History**” tab and select a contact not yet registered in the contact list.
- 3 Select “**Update Contact**”.
- 4 Select the desired contact.
- 5 Select a phone type for the phone number.

## REGISTERING A NEW CONTACT TO THE CONTACT LIST

New contact data can be registered.

Up to 4 numbers per person can be registered. For PBAP compatible Bluetooth® phones, this function is available when “Automatic Transfer” is set to off. (→P.282)

- 1 Select “**New Contact**”.
- 2 Enter the name and select “**OK**”.
- 3 Enter the phone number and select “**OK**”.
- 4 Select the phone type for the phone number.
- 5 To add another number to this contact, select “**Yes**”.


### ■ REGISTERING A NEW CONTACT IN A DIFFERENT WAY (FROM THE “Call History” SCREEN)

- 1 Display the phone top screen. (→P.265)
- 2 Select the **“Call History”** tab and select a contact not yet registered in the contact list.
- 3 Select **“Add to Contacts”**.
- 4 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.284)

### EDITING THE CONTACT DATA

For PBAP compatible Bluetooth® phones, this function is available when “Automatic Transfer” is set to off. (→P.282)


- 1 Select **“Edit Contacts”**.
- 2 Select the desired contact.
- 3 Select  corresponding to the desired name or number.

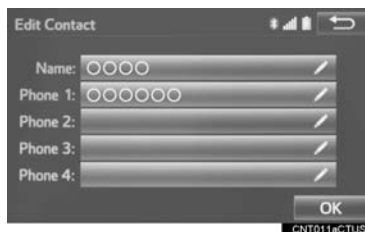

- For editing the name
- 4 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.284)
- For editing the number
- 4 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 3”. (→P.284)

### EDITING THE CONTACT IN A DIFFERENT WAY (FROM THE “Contact Details” SCREEN)

- 1 Display the phone top screen. (→P.265)
- 2 Select the “**Contacts**”, “**Call History**” tab or the “**Favorites**” tab and select the desired contact.
- 3 Select “**Edit Contact**”.

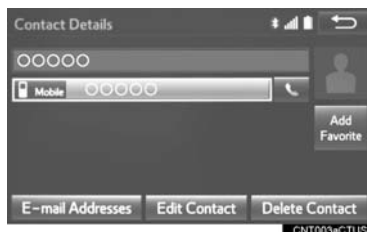

“**E-mail Addresses**”: Select to display all registered e-mail addresses for the contact.

- 4 Follow the steps in “EDITING THE CONTACT DATA” from “STEP 3”. (→P.285)

### DELETING THE CONTACT DATA

For PBAP compatible Bluetooth® phones, this function is available when “Automatic Transfer” is set to off. (→P.282)

- 1 Select “**Delete Contacts**”.
- 2 Select the desired contact and select “**Delete**”.
- 3 Select “**Yes**” when the confirmation screen appears.

#### INFORMATION

- Multiple data can be selected and deleted at the same time.

### ■ DELETING THE CONTACT IN A DIFFERENT WAY (FROM THE “Contact Details” SCREEN)

- 1 Display the phone top screen. (→P.265)
- 2 Select the “**Contacts**”, “**Call History**” tab or the “**Favorites**” tab and select the desired contact.
- 3 Select “**Delete Contact**”.
- 4 Select “**Yes**” when the confirmation screen appears.

#### INFORMATION


- When a Bluetooth® phone is deleted, the contact data will be deleted at the same time.

### FAVORITES LIST SETTING

Up to 15 contacts (maximum of 4 numbers per contact) can be registered in the favorites list.

### ■ REGISTERING THE CONTACTS IN THE FAVORITES LIST


- 1 Select “**Add Favorite**”.
- 2 Select the desired contact to add to the favorites list.

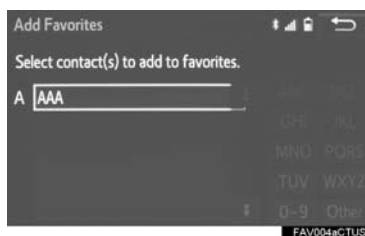

- Dimmed contacts are already stored as a favorite.
- 3 Check that a confirmation screen is displayed when the operation is complete.

- When 15 contacts have already been registered to the favorites list


- 1 When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced. Select **"Yes"** when the confirmation screen appears to replace a contact.
- 2 Select the contact to be replaced.

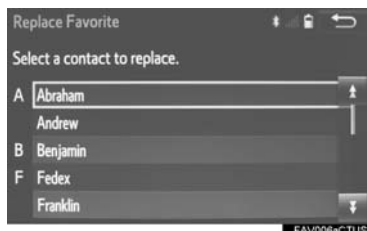

- 3 Check that a confirmation screen is displayed when the operation is complete.

- Registering contacts in the favorites list in a different way (from the "Contacts" screen)

- 1 Display the phone top screen. (→P.265)
- 2 Select the **"Contacts"** tab.
- 3 Select ☆ at the beginning of the desired contact list name to be registered in the favorites list.

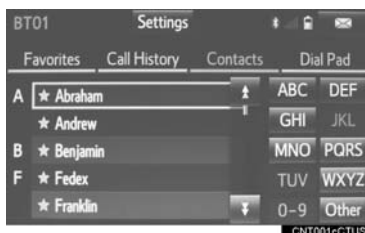

- When selected, ☆ is changed to ★, and the contact is registered in the favorites list.
- Registering contacts in the favorites list in a different way (from the "Contact Details" screen)
- 1 Display the phone top screen. (→P.265)
  - 2 Select the **"Contacts"** tab or the **"Call History"** tab and select the desired contact.
  - 3 Select **"Add Favorite"**.
  - 4 Check that a confirmation screen is displayed when the operation is complete.

## ■ DELETING THE CONTACTS IN THE FAVORITES LIST


- 1 Select **"Remove Favorite"**.
- 2 Select the desired contacts and select **"Remove"**.



- 3 Select **"Yes"** when the confirmation screen appears.
- 4 Check that a confirmation screen is displayed when the operation is complete.

► Deleting contacts in the favorites list in a different way (from the "Contacts" screen)

- 1 Display the phone top screen. (→P.265)
- 2 Select the **"Contacts"** tab.
- 3 Select ★ at the beginning of the contact list name to be deleted from the favorites list.

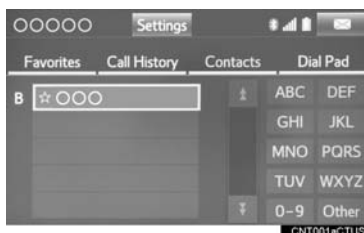

- When selected, ★ is changed to ☆, and the data is deleted from the list.

► Deleting contacts in the favorites list in a different way (from the "Contact Details" screen)

- 1 Display the phone top screen. (→P.265)
- 2 Select the **"Contacts"**, **"Call History"** tab or the **"Favorites"** tab and select the desired contact to delete.
- 3 Select **"Remove Favorite"**.
- 4 Select **"Yes"** when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

“Messaging Settings”  
SCREEN

- 1 Display the “Phone/Message Settings” screen. (→P.280)
- 2 Select “Messaging Settings”.
- 3 Select the desired item to be set.



| No. | Function                                                                                                                                                                                                                                                                                               |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to set automatic message transfer on/off.                                                                                                                                                                                                                                                       |
| 2   | Select to set automatic message readout on/off.                                                                                                                                                                                                                                                        |
| 3   | Select to set the SMS/MMS notification popup on/off.                                                                                                                                                                                                                                                   |
| 4   | Select to set the e-mail notification popup on/off.                                                                                                                                                                                                                                                    |
| 5   | Select to set adding the vehicle signature to outgoing messages on/off.                                                                                                                                                                                                                                |
| 6   | Select to set updating message read status on phone on/off.                                                                                                                                                                                                                                            |
| 7   | Select to change the incoming SMS/MMS display.<br>“Full Screen”: When an SMS/MMS message is received, the incoming SMS/MMS display screen is displayed and can be operated on the screen.<br>“Drop-down”: When an SMS/MMS message is received, a message is displayed on the upper side of the screen. |
| 8   | Select to change the incoming e-mail display.<br>“Full Screen”: When an e-mail is received, the incoming e-mail display screen is the displayed and can be operated on the screen.<br>“Drop-down”: When an e-mail is received, a message is displayed on the upper side of the screen.                 |
| 9   | Select to set display of messaging account names on the inbox tab on/off. When set to on, messaging account names used on the cellular phone will be displayed.                                                                                                                                        |
| 10  | Select to reset all setup items.                                                                                                                                                                                                                                                                       |

**INFORMATION**


- Depending on the phone, these functions may not be available.

**DISPLAYING THE “Messaging Settings” SCREEN IN A DIFFERENT WAY**

- 1 Display the phone top screen. (→P.265)
- 2 Select “Settings”.
- 3 Select “Messaging Settings”.

**“Phone Display Settings” SCREEN**

- 1 Display the “Phone/Message Settings” screen. (→P.280)
- 2 Select “Phone Display Settings”.
- 3 Select the desired item to be set.

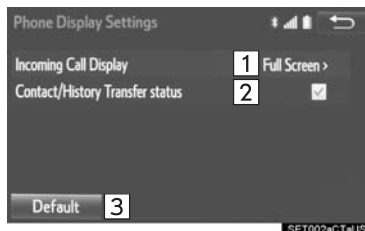

| No. | Function                                                                                                                                                                                                                                             |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to change the incoming call display.<br><b>“Full Screen”</b> : When a call is received, the hands-free screen is displayed and can be operated on the screen.<br><b>“Drop-down”</b> : A message is displayed on the upper side of the screen. |
| 2   | Select to set display of the contact/history transfer completion message on/off.                                                                                                                                                                     |
| 3   | Select to reset all setup items.                                                                                                                                                                                                                     |

**INFORMATION**

- Depending on the phone, these functions may not be available.

1. TROUBLESHOOTING

If there is a problem with the hands-free system or a Bluetooth® device, first check the table below.

► When using the hands-free system with a Bluetooth® device

| Symptom                                                   | Likely cause                                                                                    | Solution                                                                                                                                                                                                            | Page           |             |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------|
|                                                           |                                                                                                 |                                                                                                                                                                                                                     | Cellular phone | This system |
| The hands-free system or Bluetooth® device does not work. | The connected device may not be a compatible Bluetooth® cellular phone.                         | For a list of specific devices which operation has been confirmed on this system, check with your Toyota dealer or the following website: <a href="http://www.toyota.com/entune/">http://www.toyota.com/entune/</a> | *              | —           |
|                                                           | The Bluetooth® version of the connected cellular phone may be older than the specified version. | Use a cellular phone with Bluetooth® version 2.0 or higher (recommended: Ver. 3.0 +EDR or higher).                                                                                                                  | *              | 46          |

## ► When registering/connecting a cellular phone

| Symptom                                 | Likely cause                                                                      | Solution                                                                                                                                                                                                                                                                                                                                                 | Page           |             |
|-----------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------|
|                                         |                                                                                   |                                                                                                                                                                                                                                                                                                                                                          | Cellular phone | This system |
| A cellular phone cannot be registered.  | An incorrect pass-code was entered on the cellular phone.                         | Enter the correct pass-code on the cellular phone.                                                                                                                                                                                                                                                                                                       | *              | —           |
|                                         | The registration operation has not been completed on the cellular phone side.     | Complete the registration operation on the cellular phone (approve registration on the phone).                                                                                                                                                                                                                                                           | *              | —           |
|                                         | Old registration information remains on either this system or the cellular phone. | Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.                                                                                                                                                                                          | *              | 53          |
| A Bluetooth® connection cannot be made. | Another Bluetooth® device is already connected.                                   | Manually connect the cellular phone you wish to use to this system.                                                                                                                                                                                                                                                                                      | —              | 54          |
|                                         | Bluetooth® function is not enabled on the cellular phone.                         | Enable the Bluetooth® function on the cellular phone.                                                                                                                                                                                                                                                                                                    | *              | —           |
|                                         | Automatic Bluetooth® connection on this system is set to off.                     | <p>Set automatic Bluetooth® connection on this system to on when the engine &lt;power&gt; switch is in following.</p> <p>► Vehicles without a smart key system<br/>The engine switch is in the “ACC” or “ON” position.</p> <p>► Vehicles with a smart key system<br/>The engine &lt;power&gt; switch is in ACCESSORY or IGNITION ON &lt;ON&gt; mode.</p> | —              | 58          |

| Symptom                                    | Likely cause                                                                      | Solution                                                                                                                                                        | Page           |             |
|--------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------|
|                                            |                                                                                   |                                                                                                                                                                 | Cellular phone | This system |
| "Unable to dial. Please check your phone." | Bluetooth <sup>®</sup> function is not enabled on the cellular phone.             | Enable the Bluetooth <sup>®</sup> function on the cellular phone.                                                                                               | *              | —           |
|                                            | Old registration information remains on either this system or the cellular phone. | Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system. | *              | 53          |

►When making/receiving a call

| Symptom                         | Likely cause                            | Solution                                                     | Page           |             |
|---------------------------------|-----------------------------------------|--------------------------------------------------------------|----------------|-------------|
|                                 |                                         |                                                              | Cellular phone | This system |
| A call cannot be made/received. | Your vehicle is in a "No Service" area. | Move to where "No Service" no longer appears on the display. | —              | —           |

## ► When using the phonebook

| Symptom                                                      | Likely cause                                                                                                | Solution                                                                                                                                                                                                            | Page           |             |
|--------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------|
|                                                              |                                                                                                             |                                                                                                                                                                                                                     | Cellular phone | This system |
| Phonebook data cannot be transferred manually/automatically. | The profile version of the connected cellular phone may not be compatible with transferring phonebook data. | For a list of specific devices which operation has been confirmed on this system, check with your Toyota dealer or the following website: <a href="http://www.toyota.com/entune/">http://www.toyota.com/entune/</a> | *              | —           |
|                                                              | Automatic contact transfer function on this system is set to off.                                           | Set automatic contact transfer function on this system to on.                                                                                                                                                       | —              | 282         |
|                                                              | Passcode has not been entered on the cellular phone.                                                        | Enter the passcode on the cellular phone if requested (default passcode: 1234).                                                                                                                                     | *              | —           |
|                                                              | Transfer operation on the cellular phone has not completed.                                                 | Complete transfer operation on the cellular phone (approve transfer operation on the phone).                                                                                                                        | *              | —           |
| Phonebook data cannot be edited.                             | Automatic contact transfer function on this system is set to on.                                            | Set automatic contact transfer function on this system to off.                                                                                                                                                      | —              | 282         |

► When using the Bluetooth® message function

| Symptom                                      | Likely cause                                                              | Solution                                                                               | Page           |             |
|----------------------------------------------|---------------------------------------------------------------------------|----------------------------------------------------------------------------------------|----------------|-------------|
|                                              |                                                                           |                                                                                        | Cellular phone | This system |
| Messages cannot be viewed.                   | Message transfer is not enabled on the cellular phone.                    | Enable message transfer on the cellular phone (approve message transfer on the phone). | *              | —           |
|                                              | Automatic transfer function on this system is set to off.                 | Set automatic transfer function on this system to on.                                  | —              | 290         |
| New message notifications are not displayed. | Notification of SMS/MMS/E-mail reception on this system is set to off.    | Set notification of SMS/MMS/E-mail reception on this system to on.                     | *              | 290         |
|                                              | Automatic message transfer function is not enabled on the cellular phone. | Enable automatic transfer function on the cellular phone.                              | *              | —           |

► In other situations

| Symptom                                                                                                                                                                                                                                                                                                                                                                           | Likely cause                                                        | Solution                                                                                   | Page           |             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|--------------------------------------------------------------------------------------------|----------------|-------------|
|                                                                                                                                                                                                                                                                                                                                                                                   |                                                                     |                                                                                            | Cellular phone | This system |
| <p>The Bluetooth® connection status is displayed at the top of the screen each time the engine &lt;power&gt; switch is in following.</p> <p>► Vehicles without a smart key system</p> <p>The engine switch is in the “ACC” or “ON” position.</p> <p>► Vehicles with a smart key system</p> <p>The engine &lt;power&gt; switch is in ACCESSORY or IGNITION ON &lt;ON&gt; mode.</p> | <p>Connection confirmation display on this system is set to on.</p> | <p>To turn off the display, set connection confirmation display on this system to off.</p> | —              | 57          |

| Symptom                                                                                   | Likely cause                                                | Solution                                                                                                                                | Page           |             |
|-------------------------------------------------------------------------------------------|-------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------|
|                                                                                           |                                                             |                                                                                                                                         | Cellular phone | This system |
| Even though all conceivable measures have been taken, the symptom status does not change. | The cellular phone is not close enough to this system.      | Bring the cellular phone closer to this system.                                                                                         | —              | —           |
|                                                                                           | Radio interference has occurred.                            | Turn off Wi-Fi® devices or other devices that may emit radio waves.                                                                     | —              | —           |
|                                                                                           | The cellular phone is the most likely cause of the symptom. | Turn the cellular phone off, remove and reinstall the battery pack, and then restart the cellular phone.                                | *              | —           |
|                                                                                           |                                                             | Enable the cellular phone's Bluetooth® connection.                                                                                      | *              | —           |
|                                                                                           |                                                             | Disable the Wi-Fi® connection of the cellular phone.                                                                                    | *              | —           |
|                                                                                           |                                                             | Stop the cellular phone's security software and close all applications.                                                                 | *              | —           |
|                                                                                           |                                                             | Before using an application installed on the cellular phone, carefully check its source and how its operation might affect this system. | *              | —           |

\*: For details, refer to the owner's manual that came with the cellular phone.



## NAVIGATION SYSTEM\*

### 1 BASIC OPERATION

|                                                                           |            |
|---------------------------------------------------------------------------|------------|
| <b>1. QUICK REFERENCE .....</b>                                           | <b>302</b> |
| MAP SCREEN .....                                                          | 302        |
| NAVIGATION OPTIONS<br>SCREEN .....                                        | 304        |
| <b>2. MAP SCREEN OPERATION .....</b>                                      | <b>305</b> |
| CURRENT POSITION DISPLAY .....                                            | 305        |
| MAP SCALE .....                                                           | 305        |
| ORIENTATION OF THE MAP .....                                              | 306        |
| SWITCHING THE MAP MODE.....                                               | 307        |
| SCREEN SCROLL OPERATION .....                                             | 309        |
| ADJUSTING LOCATION IN SMALL<br>INCREMENTS.....                            | 309        |
| <b>3. MAP<br/>    SCREEN INFORMATION .....</b>                            | <b>310</b> |
| DISPLAYING MAP<br>INFORMATION .....                                       | 310        |
| DISPLAYING INFORMATION<br>ABOUT THE ICON WHERE THE<br>CURSOR IS SET ..... | 312        |
| STANDARD MAP ICONS .....                                                  | 313        |
| <b>4. TRAFFIC INFORMATION .....</b>                                       | <b>314</b> |
| DISPLAYING TRAFFIC<br>INFORMATION ON THE MAP .....                        | 316        |

### 2 DESTINATION SEARCH

|                                                    |            |
|----------------------------------------------------|------------|
| <b>1. DESTINATION SEARCH<br/>    SCREEN.....</b>   | <b>317</b> |
| <b>2. SEARCH OPERATION.....</b>                    | <b>319</b> |
| SELECTING SEARCH AREA .....                        | 320        |
| SETTING HOME AS<br>DESTINATION.....                | 320        |
| SETTING PRESET DESTINATIONS<br>AS DESTINATION..... | 320        |
| SEARCHING BY ADDRESS.....                          | 321        |
| SEARCHING BY POINT OF<br>INTEREST .....            | 322        |
| SEARCHING FROM PREVIOUS<br>DESTINATIONS .....      | 325        |
| SEARCHING BY ADDRESS<br>BOOK .....                 | 325        |
| SEARCHING BY EMERGENCY .....                       | 326        |
| SEARCHING BY INTERSECTION<br>AND FREEWAY .....     | 326        |
| SEARCHING BY MAP .....                             | 328        |
| SEARCHING BY COORDINATES.....                      | 328        |
| <b>3. STARTING ROUTE<br/>    GUIDANCE.....</b>     | <b>329</b> |
| STARTING ROUTE GUIDANCE.....                       | 329        |
| PAUSING GUIDANCE .....                             | 332        |

## NAVIGATION SYSTEM\*

### 3 ROUTE GUIDANCE

#### 1. ROUTE GUIDANCE SCREEN..... 333

|                                     |     |
|-------------------------------------|-----|
| SCREEN FOR ROUTE GUIDANCE .....     | 333 |
| ROUTE OVERVIEW.....                 | 334 |
| DURING FREEWAY DRIVING.....         | 335 |
| WHEN APPROACHING INTERSECTION ..... | 336 |
| TURN LIST SCREEN .....              | 337 |
| TURN-BY-TURN ARROW SCREEN .....     | 337 |

#### 2. TYPICAL VOICE GUIDANCE PROMPTS..... 338

#### 3. EDITING ROUTE ..... 339

|                                 |     |
|---------------------------------|-----|
| ADDING DESTINATIONS .....       | 340 |
| REORDERING DESTINATIONS.....    | 340 |
| DELETING DESTINATIONS .....     | 340 |
| SETTING ROUTE PREFERENCES ..... | 341 |
| SELECTING ROUTE TYPE .....      | 341 |
| DETOUR SETTING.....             | 342 |

### 4 MEMORY POINTS

#### 1. MEMORY POINTS SETTINGS ..... 344

|                                     |     |
|-------------------------------------|-----|
| SETTING UP HOME .....               | 345 |
| SETTING UP PRESET DESTINATIONS..... | 346 |

|                                     |     |
|-------------------------------------|-----|
| SETTING UP ADDRESS BOOK.....        | 348 |
| SETTING UP AREAS TO AVOID .....     | 350 |
| DELETING PREVIOUS DESTINATIONS..... | 352 |

### 5 SETUP

#### 1. DETAILED NAVIGATION SETTINGS..... 353

|                                       |     |
|---------------------------------------|-----|
| SCREENS FOR NAVIGATION SETTINGS ..... | 353 |
|---------------------------------------|-----|

#### 2. TRAFFIC SETTINGS..... 357

|                                   |     |
|-----------------------------------|-----|
| SCREEN FOR TRAFFIC SETTINGS ..... | 357 |
| AUTO AVOID TRAFFIC.....           | 358 |
| MY TRAFFIC ROUTES .....           | 359 |

### 6 TIPS FOR THE NAVIGATION SYSTEM

#### 1. GPS (GLOBAL POSITIONING SYSTEM)..... 363

|                                           |     |
|-------------------------------------------|-----|
| LIMITATIONS OF THE NAVIGATION SYSTEM..... | 363 |
|-------------------------------------------|-----|

#### 2. MAP DATABASE VERSION AND COVERED AREA ..... 365


|                          |     |
|--------------------------|-----|
| MAP INFORMATION .....    | 365 |
| ABOUT THE MAP DATA ..... | 366 |

\*: Entune Premium Audio only

1. QUICK REFERENCE

MAP SCREEN

To display this screen, press the “APPS” button, then select “Navigation” on the “Apps” screen.

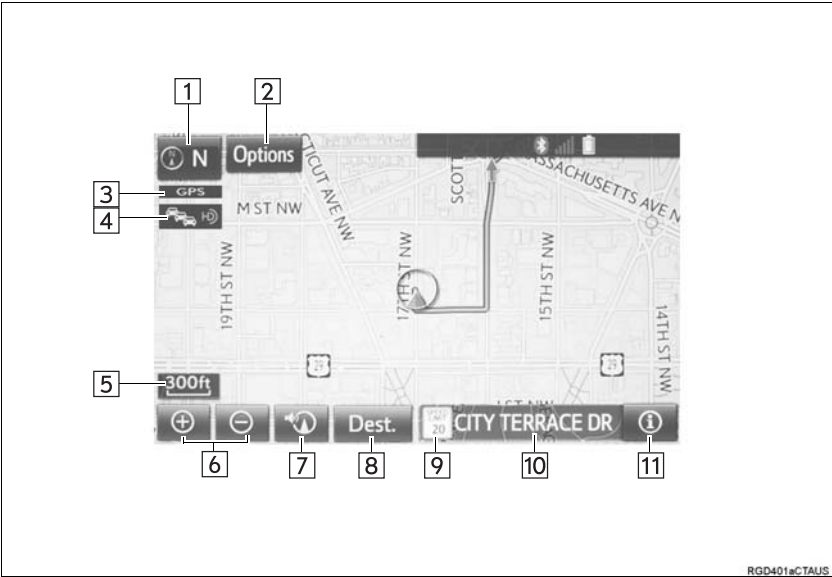

| No. | Name                                               | Function                                                                                                                                                                                                              | Page |
|-----|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 1   | 2D North-up, 2D heading-up or 3D heading-up symbol | Indicates whether the map orientation is set to north-up or heading-up. The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north). In 3D map, only a heading-up view is available. | 306  |
| 2   | Options button                                     | Select to display the “Navigation Options” screen.                                                                                                                                                                    | 304  |
| 3   | “GPS” mark (Global Positioning System)             | Shows that the vehicle is receiving signals from the GPS.                                                                                                                                                             | 363  |
| 4   | Traffic indicator                                  | Shows that traffic information is received. Select to start voice guidance for traffic information. When traffic information is received via HD Radio broadcast, HD mark is displayed on the right.                   | 314  |
| 5   | Scale indicator                                    | This figure indicates the map scale.                                                                                                                                                                                  | 305  |

| No. | Name                                          | Function                                                                                                                                                                                                     | Page |
|-----|-----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 6   | Zoom in/out button                            | Select to magnify or reduce the map scale. When either button is selected, the map scale indicator bar appears at the bottom of the screen.                                                                  | 305  |
| 7   | Current position button/voice guidance button | <ul style="list-style-type: none"><li>• Select to display the current position address.</li><li>• Select to repeat voice guidance.</li></ul>                                                                 | 338  |
| 8   | Destination button                            | Select to display the “Destination” screen.                                                                                                                                                                  | 317  |
| 9   | Speed limit icon                              | Indicates the speed limit on the current road. The display of the speed limit icon can be set to on/off.                                                                                                     | 310  |
| 10  | Route information bar                         | Displays the current street name, or the distance with the estimated travel time/arrival time to the destination. The route information bar fills from left to right as the vehicle progresses on the route. | 333  |
| 11  | Route information button                      | Select to change the display between the current street name and the distance with the estimated travel/arrival time.                                                                                        | 333  |

NAVIGATION OPTIONS SCREEN

The navigation options allow you to change map configurations, display/hide POI icons, and edit the navigation routes. To display the “Navigation Options” screen, press the “**APPS**” button, select “**Navigation**” on the “Apps” screen, and select “**Options**” on the map screen.




| No. | Function                                                                                         | Page |
|-----|--------------------------------------------------------------------------------------------------|------|
| 1   | Select to change the map configuration.                                                          | 307  |
| 2   | Select to change the displayed map information such as POI icons, route trace, speed limit, etc. | 310  |
| 3   | Select to display the map version and coverage area.                                             | 365  |
| 4   | Select to edit the set route.                                                                    | 339  |
| 5   | Select to pause or resume route guidance.                                                        | 332  |
| 6   | Select to display the overview of the entire route.                                              | 334  |

## 2. MAP SCREEN OPERATION

CURRENT POSITION  
DISPLAY

- 1 Press the “APPS” button.

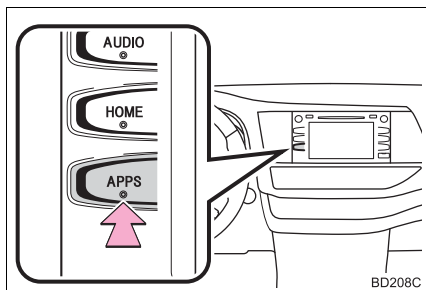

- 2 Select “Navigation”.
- 3 Check that the current position map is displayed.



- To correct the current position manually:→P.355

## INFORMATION

- While driving, the current position mark is fixed on the screen and the map moves.
- The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.
- After the 12-volt battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.

## MAP SCALE

- 1 Select or to change the scale of the map screen.



- The scale indicator bar appears at the bottom of the screen.
- Select and hold or to continue changing the scale of the map screen.
- The scale of the map screen can also be changed by selecting the scale bar directly. This function is not available while driving.

## INFORMATION

- The map scale is displayed above the zoom in button at the bottom left of the screen.

## ORIENTATION OF THE MAP

The orientation of the map can be changed between 2D north-up, 2D heading-up and 3D heading-up by selecting the orientation symbol displayed at the top left of the screen.

1 Select ,  or .

► North-up screen



► Heading-up screen



► 3D screen



 : North-up symbol

Regardless of the direction of vehicle travel, north is always up.

 : Heading-up symbol

The direction of vehicle travel is always up.


 : 3D Heading-up symbol

The direction of vehicle travel is always up.

- The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north).

## SWITCHING THE MAP MODE

- 1 Select “Options” on the map screen.
- 2 Select “Map Mode”.
- 3 Select the desired configuration button.

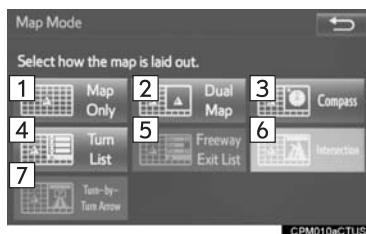

| No. | Function                                                                                  | Page |
|-----|-------------------------------------------------------------------------------------------|------|
| 1   | Select to display the single map screen.                                                  | 307  |
| 2   | Select to display the dual map screen.                                                    | 307  |
| 3   | Select to display the compass mode screen.                                                | 308  |
| 4   | Select to display the turn list screen.                                                   | 337  |
| 5   | Select to display the freeway exit list screen.                                           | 335  |
| 6   | Select to display the intersection guidance screen or the guidance screen on the freeway. | 336  |
| 7   | Select to display the turn-by-turn arrow screen.                                          | 337  |

- Depending on the conditions, certain screen configuration buttons cannot be selected.

## MAP ONLY



## DUAL MAP



- The map on the left is the main map.

► Editing right map

The right side map can be edited.

- 1 Select any point on the right side map.
- 2 Select the desired item.



| No. | Function                                     | Page |
|-----|----------------------------------------------|------|
| 1   | Select to change the orientation of the map. | 306  |
| 2   | Select to display POI icons.                 | 310  |
| 3   | Select to show traffic information.          | 314  |
| 4   | Select to change the map scale.              | 305  |

- When set to on, the indicator will illuminate.

■ COMPASS

Information about the destination, current position and a compass is displayed on the screen.




INFORMATION

- The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.
- When the vehicle travels out of the coverage area, the guidance screen changes to the whole compass mode screen.

SCREEN SCROLL  
OPERATION

Use the scroll feature to move the de-  
sired point to the center of the screen  
for looking at a point on the map that is  
different from the current position.

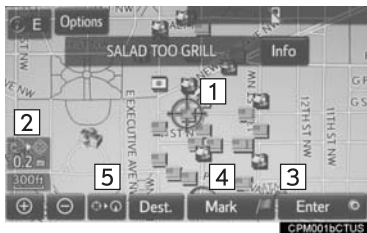

| No. | Information/Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Cursor mark                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 2   | Distance from the current position to the cursor mark.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 3   | Select to set as a destination.<br>When selecting “Go to  ” on the following map screen, the navigation system performs a search for the route. (→P.329)<br>If a destination has already been set, “Go to  ” and “Add to Route” will be displayed.<br>“Go to  ”: Select to delete the existing destination(s) and set a new one.<br>“Add to Route”: Select to add a destination. |
| 4   | Select to register as a memory point.<br>To change the icon, name, etc.:<br>→P.348                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| 5   | Select to return to the current position.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |


- To scroll over the map screen, place the cursor mark in the desired position and then touch and hold the map screen. The map will continue scrolling in that direction until the finger is released.

ADJUSTING LOCATION IN  
SMALL INCREMENTS

The cursor location can be adjusted in  
small increments when “**Adjust Loca-  
tion**” is selected on the setting map  
screen.

Also, when changing the location of  
memory points on the editing screen  
(→P.350) and adjusting the current po-  
sition mark manually on the “Calibra-  
tion” screen (→P.355), 8 directional  
arrows may appear for this purpose.

- 1 Select one of the 8 directional arrows  
to move the cursor to the desired point  
and then select “OK”.

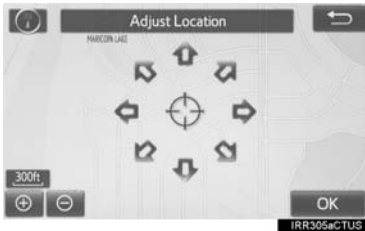


3. MAP SCREEN INFORMATION

DISPLAYING MAP INFORMATION

Information such as POI icons, route trace, speed limit, etc. can be displayed on the map screen.

- 1 Select “Options” on the map screen.
- 2 Select “Map Information”.
- 3 Select the desired items to be displayed.

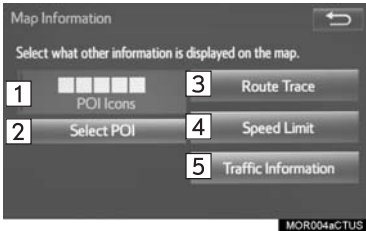

| No. | Function                                  | Page |
|-----|-------------------------------------------|------|
| 1   | Select to display the selected POI icons. | —    |
| 2   | Select to select or change POI icons.     | 310  |
| 3   | Select to display route trace.            | 312  |
| 4   | Select to display speed limit icon.       | —    |
| 5   | Select to display traffic information.    | 314  |

- When set to on, the indicator will illuminate.

SELECTING THE POI ICONS


- 1 Display the “Map Information” screen. (→P.310)
- 2 Select “Select POI”.
- When the POI icons to be displayed on the map screen have already been set, “Change POI” is displayed.
- 3 Select the desired POI category and select “OK”.



| No. | Information/Function                                                                      | Page |
|-----|-------------------------------------------------------------------------------------------|------|
| 1   | Displays up to 5 selected POI icons on the map screen                                     | —    |
| 2   | Select to cancel the selected POI icons.                                                  | —    |
| 3   | Displays up to 6 POI icons as favorite POI categories                                     | 354  |
| 4   | Select to display other POI categories if the desired POIs cannot be found on the screen. | 311  |
| 5   | Select to search for the nearest POIs.                                                    | 311  |

## ■ SELECTING OTHER POI ICONS TO BE DISPLAYED

- 1 Select **“Other POIs”**.
- 2 Select the desired POI categories and select **“OK”**.

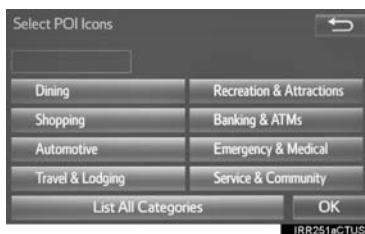

**“List All Categories”**: Select to display all POI categories. To add more POI categories, select **“More”**.

## ■ DISPLAYING THE LOCAL POI LIST

POIs that are within 20 miles (32 km) of the current position will be listed from among the selected categories.

- 1 Select **“Find Local POI”**.
- 2 Select the desired POI.



**“Near...”**: Select to search for POIs near the current position or along the route.

- 3 Check that the selected POI is displayed on the map screen. (→P.309)



► When **“Near...”** is selected

- 1 Select the desired item.

**“Near Here”**: Select to search for POIs near the current position.

**“Along My Route”**: Select to search for POIs along the route.

## ROUTE TRACE

The traveled route can be stored and retraced on the map screen. This feature is available when the map scale is 30 miles (50 km) or less.

- 1 Display the "Map Information" screen. (→P.310)
- 2 Select **"Route Trace"**.
  - The **"Route Trace"** indicator illuminates and the route trace starts.
- 3 Check that the traveled line is displayed.




## DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

When the cursor is placed over an icon on the map screen, the name bar is displayed on the upper part of the screen. If **"Info"** appears on the right side of the name bar, detailed information can be displayed.


- 1 Place the cursor over an icon.
- 2 Select **"Info"**.



### ► POI information

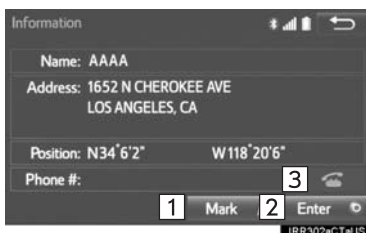

### ► Memory point information

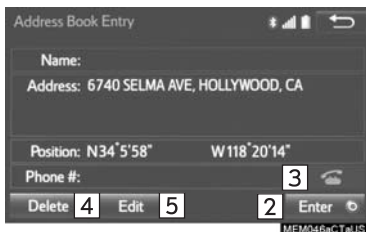


## STOP RECORDING THE ROUTE TRACE

- 1 Select **"Route Trace"** again.
- 2 A confirmation screen will be displayed.
  - "Yes"**: Select to keep the recorded route trace.
  - "No"**: Select to erase the recorded route trace.

### INFORMATION

- The traveled route can be stored up to 124 miles (200 km).

► Destination information

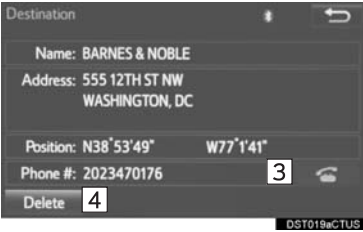

| No. | Function                                                                     |
|-----|------------------------------------------------------------------------------|
| 1   | Select to register as a memory point. To change the icon, name, etc.: →P.348 |
| 2   | Select to set as a destination.                                              |
| 3   | Select to call the registered number.                                        |
| 4   | Select to delete destination or memory point.                                |
| 5   | Select to display the edit memory point screen.                              |

INFORMATION

- Even when traffic information is not currently being received, traffic information and “Info” will be displayed for a while after traffic information has been received.


STANDARD MAP ICONS

| Icon | Name              |
|------|-------------------|
|      | Island            |
|      | Park              |
|      | Industry          |
|      | Business facility |
|      | Airport           |
|      | Military          |
|      | University        |
|      | Hospital          |
|      | Stadium           |
|      | Shopping mall     |
|      | Golf              |

4. TRAFFIC INFORMATION


Traffic data can be received via HD or Entune App Suite to display traffic information on the map screen.

1 Press the “APPS” button.

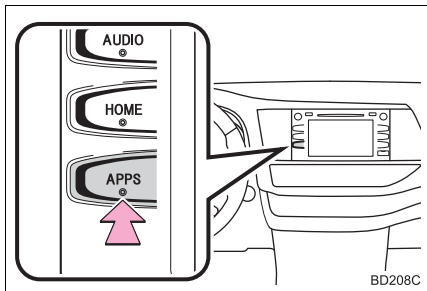

2 Select “Traffic”.

3 Select the desired item.

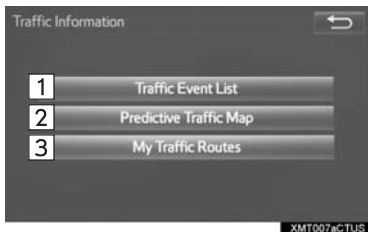

| No. | Function                                                 | Page |
|-----|----------------------------------------------------------|------|
| 1   | Select to display a list of current traffic information. | 314  |
| 2   | Select to display a map with predictive traffic data.    | 315  |
| 3   | Select to display traffic along the saved routes.        | 315  |

DISPLAYING TRAFFIC INFORMATION

A list of current traffic information can be displayed along with information on the incident's distance and position relative to the vehicle.

1 Display the “Traffic Information” screen. (→P.314)

2 Select “Traffic Event List”.

3 Select the desired traffic information.

“On Current Road”: Select to display traffic information for the current road.

“On Current Route”: Select to display traffic information for the set route.

● When set to on, the indicator will illuminate.

4 Check that the traffic information is displayed.



“Detail”: Select to display detailed traffic information.

## DISPLAYING PREDICTIVE TRAFFIC INFORMATION

A map with predictive traffic data can be displayed.

- 1 Display the “Traffic Information” screen. (→P.314)
- 2 Select “**Predictive Traffic Map**”.
- 3 Scroll the map to the desired point and set the time of predictive traffic information.



- The time of the predictive traffic information can be displayed in 15-minute steps up to +45 minutes.

“>”: Moves the time forward 15 minutes.

“<”: Moves the time back 15 minutes.

## MY TRAFFIC ROUTES

Traffic information along the saved routes can be displayed. To use this function, it is necessary to register a route. (→P.359)


- 1 Display the “Traffic Information” screen. (→P.314)
- 2 Select “**My Traffic Routes**”.
- If map data has been updated, a confirmation screen will be displayed. Select “OK” or “Do Not Tell Me Again”.
- 3 Select the desired route.



“Options”: Select to add, edit or delete personal routes.(→P.359)

- If routes have not been registered yet, a confirmation screen will be displayed. Select “Yes” to register the route.

- 4 Select the desired traffic information.
- 5 Check that the traffic information is displayed.

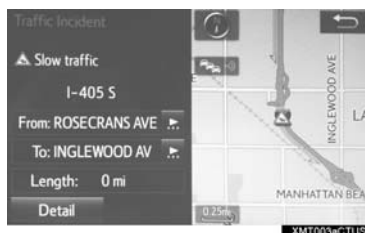

“Detail”: Select to display detailed traffic information.

DISPLAYING TRAFFIC INFORMATION ON THE MAP

- 1 Select “Options” on the map screen.
- 2 Select “Map Information”.
- 3 Select “Traffic Information”.
- When set to on, the indicator will illuminate.
- 4 Check that the traffic information is displayed.




| No. | Information/Function                                                                                                                                                                                                                                                                                                                                                             |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | The icons show traffic incident, road repair, traffic obstacles, etc. Select to display traffic information and start voice guidance for the traffic information.                                                                                                                                                                                                                |
| 2   | The color of the arrow changes depending on the traffic information received.                                                                                                                                                                                                                                                                                                    |
| 3   | The indicator is displayed as follows.<br> : Traffic information has been received.<br> : Traffic information has been received via HD Radio broadcast.<br>No icon: Traffic information has not been received. |

INFORMATION

- Traffic information may take some time to load after the system is turned on.

1. DESTINATION SEARCH SCREEN

The “Destination” screen enables to search for a destination. To display the “Destination” screen, press the “**APPS**” button, and select “**Navigation**” on the “Apps” screen. Then select “**Dest.**” on the map screen.

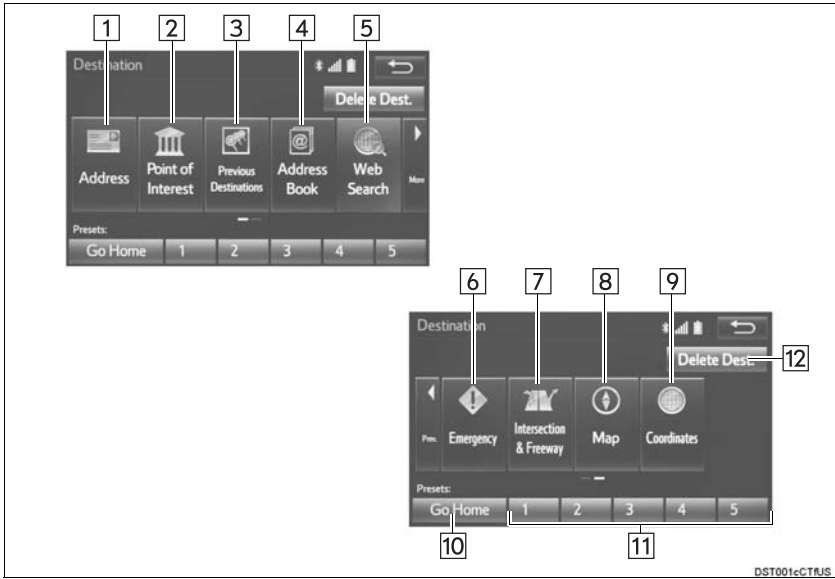


| No. | Function                                                                      | Page |
|-----|-------------------------------------------------------------------------------|------|
| 1   | Select to search for a destination by address.                                | 321  |
| 2   | Select to search for a destination by point of interest.                      | 322  |
| 3   | Select to search for a destination from previously set destinations.          | 325  |
| 4   | Select to search for a destination from a registered entry in “Address book”. | 325  |
| 5   | Select to search for a destination by online database.                        | 377  |
| 6   | Select to search for a destination from emergency service points.             | 326  |
| 7   | Select to search for a destination by intersection or freeway entrance/ exit. | 326  |
| 8   | Select to search for a destination by the last displayed map.                 | 328  |
| 9   | Select to search for a destination by coordinates.                            | 328  |
| 10  | Select to set a destination by home.                                          | 320  |

| No. | Function                                              | Page |
|-----|-------------------------------------------------------|------|
| 11  | Select to set a destination from preset destinations. | 320  |
| 12  | Select to delete set destinations.                    | 340  |

2. SEARCH OPERATION

1 Press the “APPS” button.

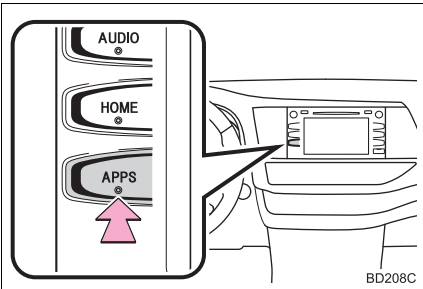

2 Select “Navigation”.

3 Select “Dest.”.

4 Search for a destination.



- There are different kinds of methods to search for a destination. (→P.317)

5 Select “Go” when the confirm destination screen is displayed.



| No. | Function                                                                                                                                                                                                                                                                 |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to adjust the position in smaller increments. (→P.309)                                                                                                                                                                                                            |
| 2   | Select to register as a memory point.                                                                                                                                                                                                                                    |
| 3   | Select to call the registered number.                                                                                                                                                                                                                                    |
| 4   | Select to search for the route. (→P.329)<br>If a destination has already been set, “Go Directly” and “Add to Route” will be displayed.<br>“Go Directly”: Select to delete the existing destination(s) and set a new one.<br>“Add to Route”: Select to add a destination. |

## SELECTING SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using **“Address”, “Point of Interest”** or **“Intersection & Freeway”**.

- 1 Display the “Destination” screen. (→P.319)
- 2 Select **“Address”, “Point of Interest”** or **“Intersection & Freeway”**.
- 3 Select **“Select State/Province”** or **“Change State/Province”**.
  - If a state (province) has not been selected yet, **“Select State/Province”** is displayed.
- 4 Select the desired state (province).



- To change countries, select the **“United States”, “Canada”** or **“Mexico”** tab.
- For map database information and updates: →P.365

## SETTING HOME AS DESTINATION


To use this function, it is necessary to register a home address. (→P.345)

- 1 Display the “Destination” screen. (→P.319)
- 2 Select **“Go Home”**.
  - The navigation system performs a search for the route and the entire route map is displayed. (→P.329)

## SETTING PRESET DESTINATIONS AS DESTINATION

To use this function, it is necessary to register preset destinations to the preset screen buttons (1-5). (→P.346)

- 1 Display the “Destination” screen. (→P.319)
- 2 Select any of the preset destination buttons (**1-5**).

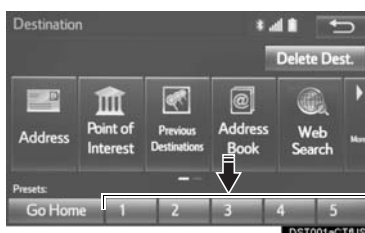

- The navigation system performs a search for the route and the entire route map is displayed. (→P.329)

## SEARCHING BY ADDRESS

There are 2 methods to search for a destination by address.

- 1 Display the "Destination" screen. (→P.319)
- 2 Select "**Address**".
- 3 Select the desired search method.



| No. | Function                            | Page |
|-----|-------------------------------------|------|
| 1   | Select to search by city.           | 321  |
| 2   | Select to search by street address. | 321  |

## SEARCHING BY CITY

- 1 Select "**City**".
  - 2 Enter a city name and select "**OK**".  
**"Last 5 Cities"**: Select the city name from the list of the last 5 cities.
  - 3 Select the desired city name.
  - 4 Enter a street name and select "**OK**".
  - 5 Select the desired street name.
  - 6 Enter a house number and select "**OK**".
- If the same address exists, the address list screen will be displayed. Select the desired address.

## SEARCHING BY STREET ADDRESS

- 1 Select "**Street Address**".
  - 2 Enter a house number and select "**OK**".
  - 3 Enter a street name and select "**OK**".
  - 4 Select the desired street name.
  - 5 Enter a city name and select "**OK**".
  - 6 Select the desired city name.
- If the same address exists, the address list screen will be displayed. Select the desired address.

### INFORMATION

- A street name can be searched using only the body part of its name.  
 For example: S WESTERN AVE
  - A search can be performed by entering "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

SEARCHING BY POINT OF INTEREST

There are 3 methods to search for a destination by Points of Interest.


- 1 Display the “Destination” screen. (→P.319)
- 2 Select “Point of Interest”.
- 3 Select the desired search method.



| No. | Function                          | Page |
|-----|-----------------------------------|------|
| 1   | Select to search by name.         | 322  |
| 2   | Select to search by category.     | 323  |
| 3   | Select to search by phone number. | 324  |

SEARCHING BY NAME

- 1 Select “Name”.
- 2 Enter a POI name and select “OK”.
- 3 Select the desired POI.

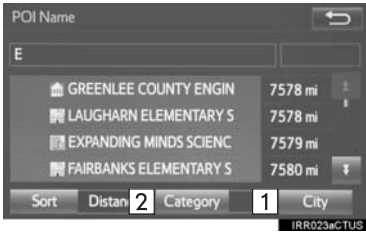

| No. | Function                                         | Page |
|-----|--------------------------------------------------|------|
| 1   | Select to search for POI in the desired city.    | 323  |
| 2   | Select to search for POI from the category list. | 323  |

- When entering the name of a specific POI, and there are 2 or more sites with the same name, the list screen will be displayed. Select the desired POI.

INFORMATION


- To search for a facility name using multiple search words, put a space between each word.

### ■ SELECTING A CITY TO SEARCH

- 1 Select “City”.
- 2 Enter a city name and select “OK”.  
“Any City”: Select to cancel the city setting.
- 3 Select the desired city name.
- 4 Select the desired POI.

### ■ SELECTING FROM THE CATEGORIES

- 1 Select “Category”.
- 2 Select the desired category.

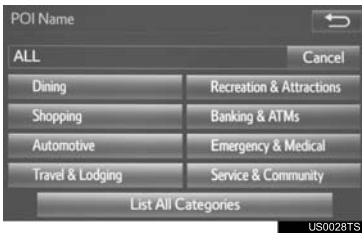


- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

“List All Categories”: Select to display all POI categories.

- 3 Select the desired POI.

### ■ SEARCHING BY CATEGORY

- 1 Select “Category”.
- 2 Select the desired search point.

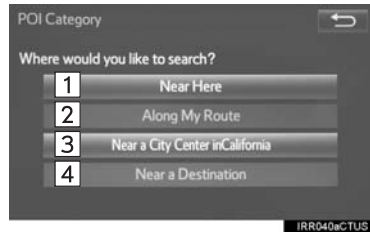

| No. | Function                                                         |
|-----|------------------------------------------------------------------|
| 1   | Select to set the search point from near the current position.   |
| 2   | Select to search for POIs along the set route.                   |
| 3   | Select to set the search point from near a city center. (→P.324) |
| 4   | Select to set the search point from near a destination.          |

- 3 Select the desired POI category.



- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

“List All Categories”: Select to display all POI categories.

“Favorite POI Categories”: Select to use the 6 POIs that have been previously set.(→P.354)

- 4 Select the desired POI.

**INFORMATION**

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.
- When “Near a City Center in XX\*” is selected
- 1 Select “**Near a City Center in XX**”.
  - 2 Enter a city name and select “**OK**”.
- “**Last 5 Cities**”: Select the city name from the list of the last 5 cities.
- 3 Select the desired city name.
  - 4 Select “**OK**” when the city center map screen is displayed.
  - 5 Follow the steps from 3 onward in “SEARCHING BY CATEGORY”. (→P.323)
- \*: XX represents the selected search area name.

**INFORMATION**

- If the navigation system has never been used, selecting the city name from “**Last 5 Cities**” will not be available.

**SEARCHING BY PHONE NUMBER**


- 1 Select “**Phone #**”.
  - 2 Enter a phone number and select “**OK**”.
- If there is more than 1 site with the same number, the list screen will be displayed.

**INFORMATION**

- If there is no match for the entered phone number, a list of identical numbers with different area codes will be displayed.

## SEARCHING FROM PREVIOUS DESTINATIONS

- 1 Display the “Destination” screen. (→P.319)
- 2 Select “**Previous Destinations**”.
- 3 Select the desired destination.

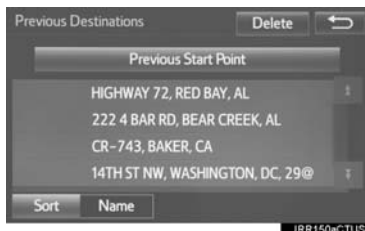

“**Previous Start Point**”: Select to display the start point map of the previous guided route.

“**Delete**”: Select to delete the previous destination. (→P.352)

### INFORMATION

- The previous start point and up to 100 previously set destinations are displayed on the screen.

## SEARCHING BY ADDRESS BOOK

To use this function, it is necessary to register an address book entry. (→P.348)

- 1 Display the “Destination” screen. (→P.319)
- 2 Select “**Address Book**”.
- 3 Select the desired address book entry.



- “**Options**”: Select to register or edit address book entries. (→P.348)

SEARCHING BY EMERGENCY

- 1 Display the “Destination” screen. (→P.319)
- 2 Select “Emergency”.
- 3 Select the desired emergency category.



- 4 Select the desired destination.


INFORMATION

- The navigation system does not guide in areas where route guidance is unavailable. (→P.364)

SEARCHING BY INTERSECTION AND FREEWAY

There are 2 methods to search for a destination by Intersection & Freeway.

- 1 Display the “Destination” screen. (→P.319)
- 2 Select “Intersection & Freeway”.
- 3 Select the desired method.

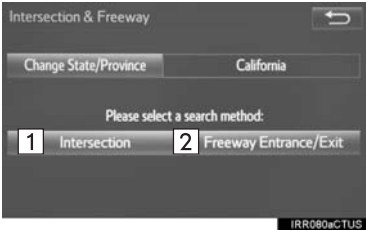


| No. | Function                                   | Page |
|-----|--------------------------------------------|------|
| 1   | Select to search by intersection.          | 327  |
| 2   | Select to search by freeway entrance/exit. | 327  |

### SEARCHING BY INTERSECTION

- 1 Select **"Intersection"**.
- 2 Enter the name of the first intersecting street which is located near the destination and select **"OK"**.
- 3 Select the desired street name.



- 4 Enter the name of the second intersecting street and select **"OK"**.
  - 5 Select the desired street name.
- If the 2 streets cross at more than 1 intersection in a city, the list of intersections will be displayed.

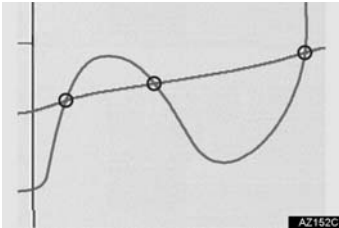

### SEARCHING BY FREEWAY ENTRANCE/EXIT

- 1 Select **"Freeway Entrance / Exit"**.
- 2 Enter a freeway name and select **"OK"**.
- 3 Select the desired freeway.
- 4 Select **"Entrance"** or **"Exit"**.



- 5 Enter a freeway entrance or exit name and select **"OK"**.
- 6 Select the desired entrance or exit name.

#### INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

## SEARCHING BY MAP

By selecting **“Map”** the last displayed location is displayed again on the map screen. You can search for a destination from this map.

- 1 Display the “Destination” screen. (→P.319)
- 2 Select **“Map”**.
- 3 Scroll the map to the desired point and select **“Go to”**.



**“Adjust Location”**: Select to adjust the position in smaller increments. (→P.309)

- If a destination has already been set, **“Go to”** and **“Add to Route”** will be displayed.


**“Go to”**: Select to delete the existing destination(s) and set a new one.

**“Add to Route”**: Select to add a destination.

- The navigation system performs a search for the route and the entire route map is displayed. (→P.329)

## SEARCHING BY COORDINATES

- 1 Display the “Destination” screen. (→P.319)
- 2 Select **“Coordinates”**.
- 3 Enter the latitude and longitude and select **“OK”**.

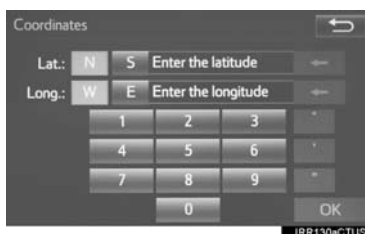

3. STARTING ROUTE GUIDANCE

When the destination is set, the entire route map from the current position to the destination is displayed.

STARTING ROUTE GUIDANCE

1 Select “OK” to start guidance.



| No. | Information/Function                                                                                                                                     |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select the desired route from 3 possible routes. (→P.330)                                                                                                |
| 2   | Select to change the route. (→P.331)                                                                                                                     |
| 3   | Select to display a list of the turns required to reach the destination. (→P.331)                                                                        |
| 4   | Current position                                                                                                                                         |
| 5   | Destination point                                                                                                                                        |
| 6   | Type of route and its distance                                                                                                                           |
| 7   | Distance of the entire route                                                                                                                             |
| 8   | Select to start guidance.<br>If “OK” is selected and held until a beep sounds, demo mode will start. Press the “HOME” or “APPS” button to end demo mode. |


**WARNING**

- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

- INFORMATION**
- The route for returning may not be the same as that for going.
  - The route guidance to the destination may not be the shortest route or a route without traffic congestion.
  - Route guidance may not be available if there is no road data for the specified location.
  - When setting the destination on a map with a scale more than 0.5 mile (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
  - If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the selected point is set as the destination.

3 ROUTES SELECTION

- 1 Select “3 Routes”.
- 2 Select the desired route.

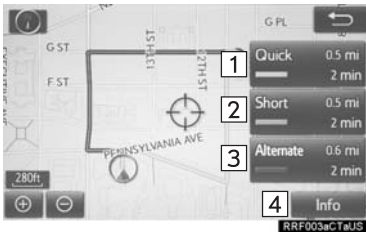

| No. | Function                                                                          |
|-----|-----------------------------------------------------------------------------------|
| 1   | Select to display the quickest route.                                             |
| 2   | Select to display the route that is the shortest distance to the set destination. |
| 3   | Select to display the alternative route.                                          |
| 4   | Select to display the information about the 3 routes. (→P.330)                    |

DISPLAYING 3 ROUTES INFORMATION

- 1 Select “Info”.
- 2 Check that the “3 Route Information” screen is displayed.



| No. | Information                        |
|-----|------------------------------------|
| 1   | Time necessary for the entire trip |
| 2   | Distance of the entire trip        |
| 3   | Distance of the toll road          |
| 4   | Distance of the freeway            |
| 5   | Distance of the ferry trip         |

DISPLAYING TURN LIST

A list of turn information from the current position to the destination can be displayed.

- 1 Select “Turn List”.
- 2 Check that the turn list is displayed.



| No. | Information                                      |
|-----|--------------------------------------------------|
| 1   | Current position                                 |
| 2   | Distance to the next turn                        |
| 3   | Turn direction at the intersection               |
| 4   | Select to display the map of the selected point. |


INFORMATION

- However, not all road names on the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

EDITING ROUTE

Destinations can be added, reordered or deleted, and conditions for the route to the destination can be changed.

- 1 Select “Edit Route”.
- 2 Select the desired item.

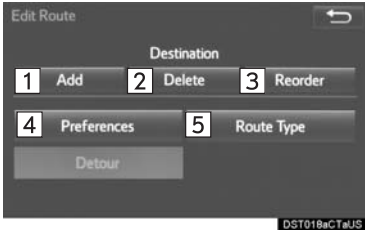

| No. | Function                         | Page |
|-----|----------------------------------|------|
| 1   | Select to add destinations.      | 340  |
| 2   | Select to delete destinations.   | 340  |
| 3   | Select to reorder destinations.  | 340  |
| 4   | Select to set route preferences. | 341  |
| 5   | Select to change route type.     | 341  |

INFORMATION

- Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases. (→P.341)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After traveling by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

## PAUSING GUIDANCE

- 1 Select “**Options**” on the map screen.
- 2 Select “**Pause Guidance**”.


## RESUMING GUIDANCE

- 1 Select “**Resume Guidance**”.

1. ROUTE GUIDANCE SCREEN

During the route guidance, various types of guidance screens can be displayed depending on conditions.

SCREEN FOR ROUTE GUIDANCE

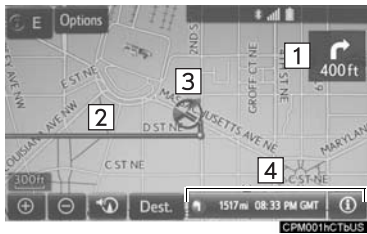

| No. | Information/Function                                                    |
|-----|-------------------------------------------------------------------------|
| 1   | Distance to the next turn and an arrow indicating the turning direction |
| 2   | Guidance route                                                          |
| 3   | Current position                                                        |
| 4   | Current street name or route information                                |

INFORMATION

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.
- When arriving at the set destination the destination name will be displayed on the upper part of the screen.

CHANGING ROUTE INFORMATION BAR

When the vehicle is on the guidance route, the route information bar displays the current street name or the distance with the estimated travel/arrival time to the destination.

- 1 Select the route information bar (1) or the route information button (2) to change the display of the route information bar.



| No. | Information/Function                                                                                                  |
|-----|-----------------------------------------------------------------------------------------------------------------------|
| 1   | Select to change the display between the estimated travel time and the estimated arrival time.                        |
| 2   | Select to change the display between the current street name and the distance with the estimated travel/arrival time. |

INFORMATION

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the average speed for the specified speed limit.
- When the vehicle gets off the guidance route, the arrow facing the destination is displayed instead of the estimated travel/arrival time.
- The route information bar fills from left to right as the vehicle progresses on the route.

## DISTANCE AND TIME TO DESTINATION

When driving on the guidance route with more than 1 destination set, a list of the distance with estimated travel/arrival time from the current position to each destination is displayed.

- 1 Select the route information bar.
- 2 Check that the list of the distance and time is displayed.



- By selecting one of the number buttons, the desired route information is displayed.

## ROUTE OVERVIEW

The entire route from the current position to the destination can be displayed during the route guidance.

- 1 Select **“Options”** on the map screen.
- 2 Select **“Route Overview”**.
- 3 Check that the entire route map is displayed.



- For details about this screen: →P.329


## DURING FREEWAY DRIVING

During freeway driving, the freeway exit information screen will be displayed.



## WHEN APPROACHING FREEWAY EXIT OR JUNCTION

When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

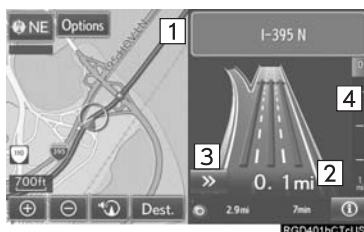


| No./Icon | Information/Function                                                            |
|----------|---------------------------------------------------------------------------------|
| 1        | Distance and time from the current position to the freeway exit/rest area.      |
| 2        | Name of the freeway exit/rest area.                                             |
| 3        | POIs that are close to a freeway exit.                                          |
| 4        | Select to display the selected map of the exit vicinity.                        |
| 5        | Select to display the nearest freeway exit/rest area from the current position. |
|          | Select to scroll to farther freeway exit/rest area.                             |
|          | Select to scroll to closer freeway exit/rest area.                              |

| No. | Information/Function                                                                         |
|-----|----------------------------------------------------------------------------------------------|
| 1   | Next exit or junction name                                                                   |
| 2   | Distance from the current position to the exit or junction                                   |
| 3   | Select to hide the freeway guidance screen. To return to the freeway guidance screen, select |
| 4   | Remaining distance bar to the guidance point                                                 |

TOLLGATE GUIDANCE


When the vehicle approaches a tollgate, the tollgate view will be displayed.

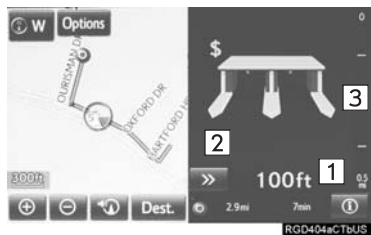

| No. | Information/Function                                                                                                                                                               |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Distance from the current position to the tollgate                                                                                                                                 |
| 2   | Select to hide the tollgate guidance screen. To return to the tollgate guidance screen, select  . |
| 3   | Remaining distance bar to the guidance point                                                                                                                                       |

WHEN APPROACHING INTERSECTION

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.

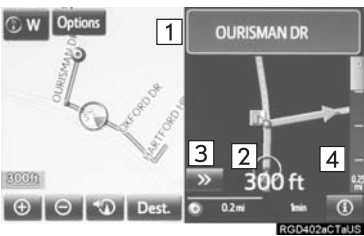

| No. | Information/Function                                                                                                                                                                       |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Next street name                                                                                                                                                                           |
| 2   | Distance to the intersection                                                                                                                                                               |
| 3   | Select to hide the intersection guidance screen. To return to the intersection guidance screen, select  . |
| 4   | Remaining distance bar to the guidance point                                                                                                                                               |

## TURN LIST SCREEN

- 1 Select **“Turn List”** on the **“Map Mode”** screen. (→P.307)
- 2 Check that the turn list screen is displayed.




| No. | Information/Function            |
|-----|---------------------------------|
| 1   | Turn direction                  |
| 2   | Distance between turns          |
| 3   | Next street or destination name |

## TURN-BY-TURN ARROW SCREEN

On this screen, information about the next turn on the guidance route can be displayed.

- 1 Select **“Turn-by-Turn Arrow”** on the **“Map Mode”** screen. (→P.307)
- 2 Check that the turn-by-turn arrow screen is displayed.

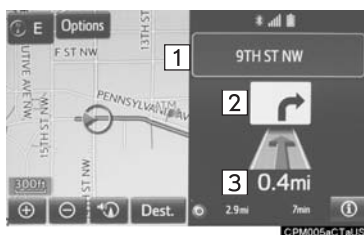

| No. | Information/Function       |
|-----|----------------------------|
| 1   | Exit number or street name |
| 2   | Turn direction             |
| 3   | Distance to the next turn  |

## 2. TYPICAL VOICE GUIDANCE PROMPTS

As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.



### WARNING

 
- Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads. The route guidance may not have the updated information such as the direction of a one way street.

### INFORMATION

- If a voice guidance command cannot be heard, select  on the map screen to hear it again.
- To adjust the voice guidance volume:  
→P.66
- Voice guidance may be made early or late.
- If the system cannot determine the current position correctly, you may not hear voice guidance or may not see the magnified intersection on the screen.

3. EDITING ROUTE


1 Press the “APPS” button.




2 Select “Navigation”.

3 Select “Options”.

4 Select “Edit Route”.

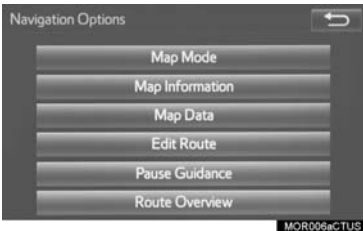

5 Select the item to be set.

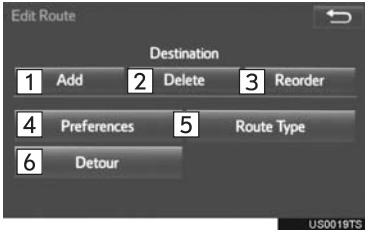


| No. | Function                         | Page |
|-----|----------------------------------|------|
| 1   | Select to add destinations.      | 340  |
| 2   | Select to delete destinations.   | 340  |
| 3   | Select to reorder destinations.  | 340  |
| 4   | Select to set route preferences. | 341  |
| 5   | Select to change route type.     | 341  |
| 6   | Select to set detours.           | 342  |

6 Check that the entire route map is displayed. (→P.329)

## ADDING DESTINATIONS


- 1 Display the “Edit Route” screen. (→P.339)
- 2 Select “Add”.
- 3 Search for an additional destination in the same way as a destination search. (→P.317)
- 4 Select “Add Destination Here” to insert the new destination into the route.

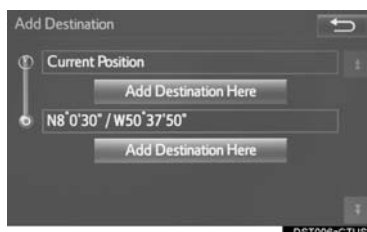

## REORDERING DESTINATIONS

When more than 1 destination has been set, the arrival order of the destinations can be changed.

- 1 Display the “Edit Route” screen. (→P.339)
- 2 Select “Reorder”.
- 3 Select the desired destination and select “Move Up” or “Move Down” to change the arrival order. Then select “OK”.

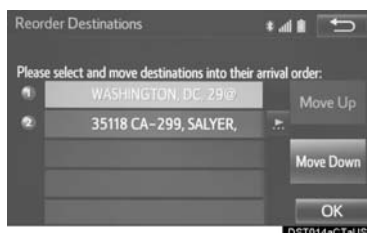


## DELETING DESTINATIONS

- 1 Display the “Edit Route” screen. (→P.339)
  - 2 Select “Delete”.
  - 3 Select “Yes” when the confirmation screen appears.
    - When more than 1 destination has been set, a list will be displayed on the screen. Select the item(s) to be deleted.
- “Delete All”: Select to delete all destinations on the list.
- If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.

## SETTING ROUTE PREFERENCES

The conditions to determine the route can be selected from various choices such as freeways, toll roads, ferries, etc.


- 1 Display the “Edit Route” screen. (→P.339)
- 2 Select “**Preferences**”.
- 3 Select the desired route preferences and select “**OK**”.

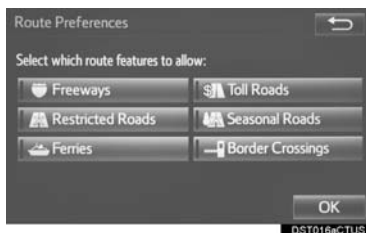

- When set to on, the indicator will illuminate.

## SELECTING ROUTE TYPE

- 1 Display the “Edit Route” screen. (→P.339)
- 2 Select “**Route Type**”.
- 3 Select the desired route type.

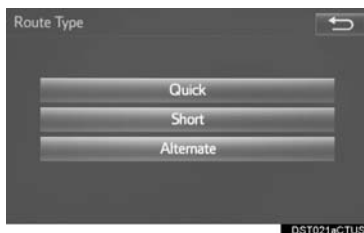

- During driving, the route guidance starts after selecting the desired route type.
- 4 The entire route from the starting point to the destination is displayed.
- For details about this screen: →P.329

DETOUR SETTING


During the route guidance, the route can be changed to detour around a section of the route where a delay is caused by road repairs, an accident, etc.

- 1 Display the “Edit Route” screen. (→P.339)
- 2 Select “**Detour**”.

- 3 Select the desired detour distance.



| No. | Function                                                                                                                           |
|-----|------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to detour within 1 mile of the current position.                                                                            |
| 2   | Select to detour within 3 miles of the current position.                                                                           |
| 3   | Select to detour within 5 miles of the current position.                                                                           |
| 4   | Select to detour on the entire route.                                                                                              |
| 5   | Select to make the system search for the route based on traffic congestion information received from traffic information. (→P.314) |

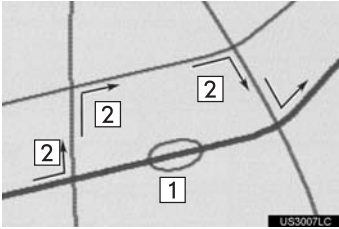**INFORMATION**


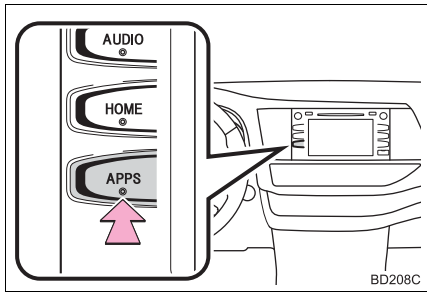
- This picture shows an example of how the system would guide around a delay caused by a traffic jam.
- 1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.
- 2 This route indicates the detour suggested by the system.
- When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).
- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

1. MEMORY POINTS SETTINGS

Home, preset destinations, address book entries, areas to avoid can be set as memory points. The registered points can be used as the destinations. (→P.317)

Registered areas to avoid, will be avoided when the system searches for a route.


1 Press the “APPS” button.



2 Select “Setup”.

3 Select “Navigation”.

4 Select the desired item to be set.

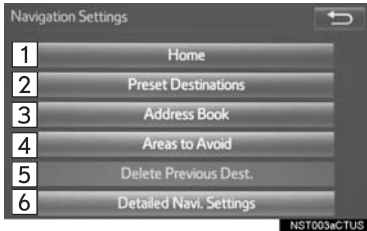


| No. | Function                                    | Page |
|-----|---------------------------------------------|------|
| 1   | Select to set home.                         | 345  |
| 2   | Select to set preset destinations.          | 346  |
| 3   | Select to set the address book.             | 348  |
| 4   | Select to set areas to avoid.               | 350  |
| 5   | Select to delete previous destinations.     | 352  |
| 6   | Select to set detailed navigation settings. | 353  |

## SETTING UP HOME

If home has been registered, that information can be recalled by selecting **“Go Home”** on the “Destination” screen. (→P.320)

- 1 Display the “Navigation Settings” screen. (→P.344)
- 2 Select **“Home”**.
- 3 Select the desired item to be set.

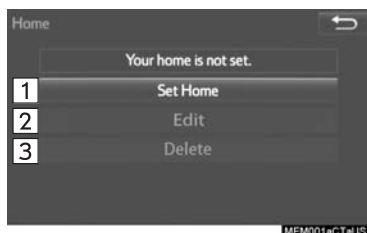


| No. | Function                 | Page |
|-----|--------------------------|------|
| 1   | Select to register home. | 345  |
| 2   | Select to edit home.     | 345  |
| 3   | Select to delete home.   | 345  |

## REGISTERING HOME

- 1 Select **“Set Home”**.
- 2 Select the desired item to search for the location. (→P.317)
- 3 Select **“OK”** when the editing home screen appears.

## EDITING HOME

- 1 Select **“Edit”**.
- 2 Select the desired item to be edited.

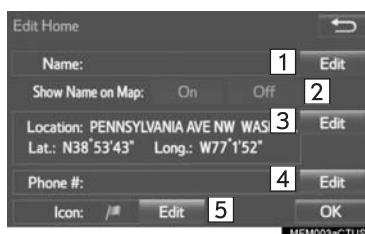

| No. | Function                                                     | Page |
|-----|--------------------------------------------------------------|------|
| 1   | Select to edit the home name.                                | 350  |
| 2   | Select to set display of the home name on/off.               | —    |
| 3   | Select to edit location information.                         | 350  |
| 4   | Select to edit the phone number.                             | 350  |
| 5   | Select to change the icon to be displayed on the map screen. | 349  |

- 3 Select **“OK”**.

## DELETING HOME

- 1 Select **“Delete”**.
- 2 Select **“Yes”** when the confirmation screen appears.

SETTING UP PRESET DESTINATIONS

If a preset destination has been registered, that information can be recalled by using preset destinations on the “Destination” screen. (→P.320)

- 1 Display the “Navigation Settings” screen. (→P.344)
- 2 Select “Preset Destinations”.
- 3 Select the desired item.



| No. | Function                                 | Page |
|-----|------------------------------------------|------|
| 1   | Select to register a preset destination. | 346  |
| 2   | Select to edit a preset destination.     | 347  |
| 3   | Select to delete a preset destination.   | 347  |

REGISTERING PRESET DESTINATIONS

- 1 Select “Set”.
- 2 Select the desired item to search for the location. (→P.317)
- 3 Select a position for this preset destination.




- 4 Select “OK” when the editing preset destination screen appears. (→P.347)

INFORMATION

- Up to 5 preset destinations can be registered.


## EDITING PRESET DESTINATIONS

- 1 Select **"Edit"**.
- 2 Select the desired preset destination.
- 3 Select the item to be edited.

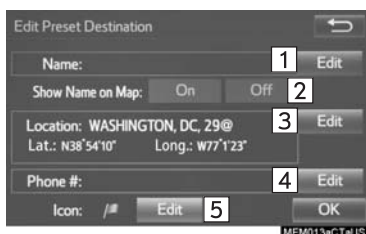

## DELETING PRESET DESTINATIONS

- 1 Select **"Delete"**.
- 2 Select the preset destination to be deleted and select **"Delete"**.

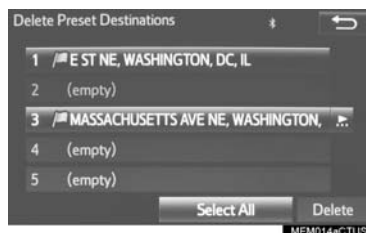

- 3 Select **"Yes"** when the confirmation screen appears.

| No. | Function                                                     | Page |
|-----|--------------------------------------------------------------|------|
| 1   | Select to edit the preset destination name.                  | 350  |
| 2   | Select to set display of the preset destination name on/off. | —    |
| 3   | Select to edit location information.                         | 350  |
| 4   | Select to edit the phone number.                             | 350  |
| 5   | Select to change the icon to be displayed on the map screen. | 349  |

- 4 Select **"OK"**.

SETTING UP ADDRESS BOOK

Points on the map can be registered.

- 1 Display the “Navigation Settings” screen. (→P.344)
- 2 Select “Address Book”.
- 3 Select the desired item.



| No. | Function                                 | Page |
|-----|------------------------------------------|------|
| 1   | Select to register address book entries. | 348  |
| 2   | Select to edit address book entries.     | 348  |
| 3   | Select to delete address book entries.   | 350  |

REGISTERING ADDRESS BOOK ENTRIES

- 1 Select “New”.
- 2 Select the desired item to search for the location. (→P.317)
- 3 Select “OK” when the editing address book entry screen appears. (→P.348)


INFORMATION

- Up to 100 address book entries can be registered.

EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Select “Edit”.
- 2 Select the desired address book entry.
- 3 Select the item to be edited.

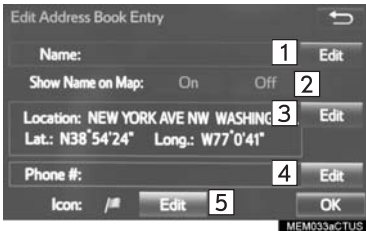

| No. | Function                                                     | Page |
|-----|--------------------------------------------------------------|------|
| 1   | Select to edit the address book entry name.                  | 350  |
| 2   | Select to set display of the address book entry name on/off. | —    |
| 3   | Select to edit location information.                         | 350  |
| 4   | Select to edit the phone number.                             | 350  |
| 5   | Select to change the icon to be displayed on the map screen. | 349  |

- 4 Select “OK”.

## ■ CHANGING THE ICON

- 1 Select “Edit” next to the “Icon”.
- 2 Select the desired icon.



- Change pages by selecting the “Page 1”, “Page 2” or “With Sound” tab.

“With Sound”: Select the memory points with a sound

► When the “With Sound” tab is selected

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

- 1 Select the “With Sound” tab.
- 2 Select the desired sound icon.



: Select to play the sound.

- When “Bell (with Direction)” is selected, select an arrow to adjust the direction and select “OK”.



### INFORMATION

- The bell sounds only when the vehicle approaches this point in the direction that has been set.

■ CHANGING THE NAME

- 1 Select **“Edit”** next to **“Name”**.
- 2 Enter a name and select **“OK”**.

■ CHANGING THE LOCATION


- 1 Select **“Edit”** next to **“Location”**.
- 2 Scroll the map to the desired point (→P.309) and select **“OK”**.

■ CHANGING PHONE NUMBER

- 1 Select **“Edit”** next to **“Phone #”**.
- 2 Enter the phone number and select **“OK”**.

■ DELETING ADDRESS BOOK ENTRIES

- 1 Select **“Delete”**.
- 2 Select the item to be deleted and select **“Delete”**.

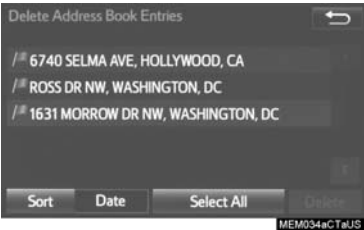

- 3 Select **“Yes”** when the confirmation screen appears.

■ SETTING UP AREAS TO AVOID

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as **“Areas to Avoid”**.

- 1 Display the **“Navigation Settings”** screen. (→P.344)
- 2 Select **“Areas to Avoid”**.
- 3 Select the desired item.



| No. | Function                           | Page |
|-----|------------------------------------|------|
| 1   | Select to register areas to avoid. | 351  |
| 2   | Select to edit areas to avoid.     | 351  |
| 3   | Select to delete areas to avoid.   | 352  |

REGISTERING AREAS TO AVOID

- 1 Select “New”.
- 2 Select the desired item to search for the location. (→P.317)
- 3 Select either  or  to change the size of the area to be avoided and select “OK”.



- 4 Select “OK” when the editing area to avoid screen appears.


INFORMATION

- If a destination is entered in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

EDITING AREAS TO AVOID

The name, location and/or area size of a registered area can be edited.

- 1 Select “Edit”.
- 2 Select the area and select “OK”.
- 3 Select the item to be edited.

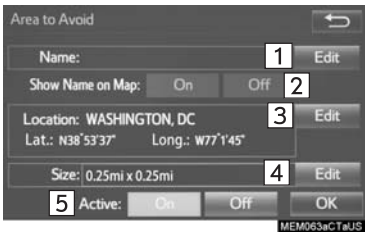

| No. | Function                                                | Page |
|-----|---------------------------------------------------------|------|
| 1   | Select to edit the name of the area to avoid.           | 352  |
| 2   | Select to set display of the area to avoid name on/off. | —    |
| 3   | Select to edit area location.                           | 352  |
| 4   | Select to edit area size.                               | 352  |
| 5   | Select to set the area to avoid function on/off.        | —    |

- 4 Select “OK”.

### CHANGING THE NAME

- 1 Select **"Edit"** next to "Name".
- 2 Enter a name and select **"OK"**.

### CHANGING THE LOCATION

- 1 Select **"Edit"** next to "Location".
- 2 Scroll the map to the desired point (→P.309) and select **"OK"**.

### CHANGING THE AREA SIZE

- 1 Select **"Edit"** next to "Size".
- 2 Select either  or  to change the size of the area to be avoided and select **"OK"**.



### DELETING AREAS TO AVOID

- 1 Select **"Delete"**.
- 2 Select the area to be deleted and select **"Delete"**.
- 3 Select **"Yes"** when the confirmation screen appears.

### DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Display the "Navigation Settings" screen. (→P.344)
- 2 Select **"Delete Previous Dest."**.
- 3 Select the previous destination to be deleted and select **"Delete"**.




- 4 Select **"Yes"** when the confirmation screen appears.

1. DETAILED NAVIGATION SETTINGS



Settings are available for pop-up information, favorite POI categories, low fuel warning, etc.

1 Press the “APPS” button.

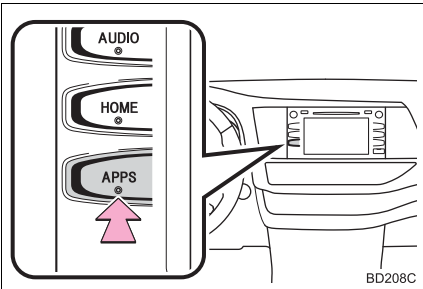

- 2 Select “Setup”.
- 3 Select “Navigation”.
- 4 Select “Detailed Navi. Settings”.
- 5 Select the items to be set.
- 6 Select “OK”.

SCREENS FOR NAVIGATION SETTINGS

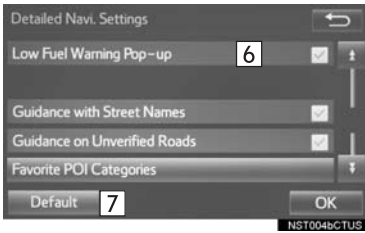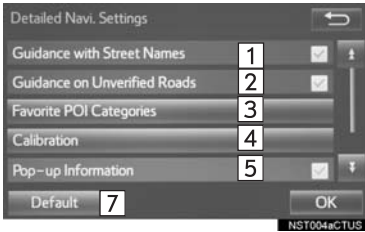


| No. | Function                                                                                                                    | Page |
|-----|-----------------------------------------------------------------------------------------------------------------------------|------|
| 1   | Select to set the voice guidance for the next street name on/off.                                                           | —    |
| 2   | Select to set IPD road guidance on/off.                                                                                     | —    |
| 3   | Select to set favorite POI categories that are used for POI selection to display on the map screen.                         | 354  |
| 4   | Select to adjust the current position mark manually or to adjust miscalculation of the distance caused by tire replacement. | 355  |
| 5   | Select to set display of pop-up information on/off.                                                                         | —    |
| 6   | Select to set display of low fuel warning on/off.                                                                           | 356  |
| 7   | Select to reset all setup items.                                                                                            | —    |

**FAVORITE POI CATEGORIES  
(SELECT POI ICONS)**

Up to 6 POI icons, which are used for selecting POIs on the map screen, can be selected as favorites.

- 1 Display the “Detailed Navi. Settings” screen. (→P.353)
- 2 Select “**Favorite POI Categories**”.
- 3 Select the category to be changed.

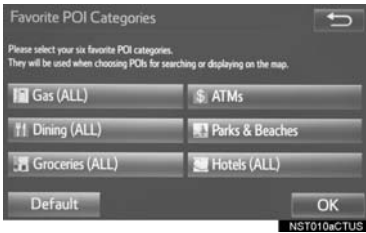


- “**Default**”: Select to set the default categories.
- 4 Select the desired POI category.
- “**List All Categories**”: Select to display all POI categories.
- 5 Select the desired POI icon.

## CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Display the “Detailed Navi. Settings” screen. (→P.353)
- 2 Select “**Calibration**”.
- 3 Select the desired item.

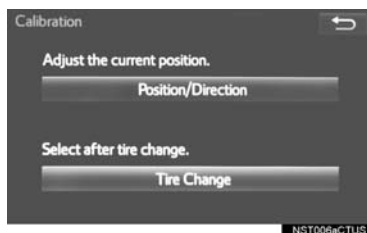

- For additional information on the accuracy of a current position: →P.363

## POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Select “**Position / Direction**”.
- 2 Scroll the map to the desired point (→P.309) and select “**OK**”.
- 3 Select an arrow to adjust the direction of the current position mark and select “**OK**”.



## TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

- 1 Select “**Tire Change**”.
- The message appears and the quick distance calibration starts automatically.

### INFORMATION

- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

LOW FUEL WARNING POP-UP

When the fuel level is low, a warning message will pop up on the screen.

- 1 Display the “Detailed Navi. Settings” screen. (→P.353)
- 2 Select “Low Fuel Warning Pop-up”.

SEARCHING GAS STATION IN LOW FUEL WARNING

A nearby gas station can be selected as a destination.

- 1 Select “Yes” when the low fuel warning appears.
- 2 Select the desired nearby gas station.



- 3 Select “Enter” to set as a destination.

 


“Info”: Select to display gas station information. (→P.312)

2. TRAFFIC SETTINGS



Traffic information such as traffic congestion or traffic incident warnings can be made available.

1 Press the “APPS” button.



- 2 Select “Setup”.
- 3 Select “Traffic”.
- 4 Select the items to be set.
- 5 Select “OK”.

SCREEN FOR TRAFFIC SETTINGS

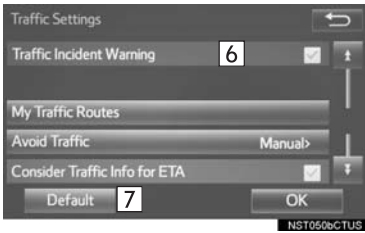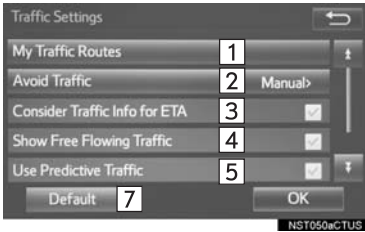

| No. | Function                                                                                                                                       |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to set specific routes (such as frequently used routes) on which you wish to receive traffic information. (→P.359)                      |
| 2   | Select to set the avoid traffic function auto/manual. (→P.358)                                                                                 |
| 3   | Select to set the usage of traffic information for the estimated arrival time on/off.                                                          |
| 4   | Select to set the display of an arrow of free flowing traffic on/off.                                                                          |
| 5   | Select to set to on/off whether to consider the predictive traffic information (→P.315) with estimated arrival time and detoured route search. |
| 6   | Select to set of traffic incident voice warning on/off.                                                                                        |
| 7   | Select to reset all setup items.                                                                                                               |

AUTO AVOID TRAFFIC

- 1 Display the “Traffic Settings” screen. (→P.357)
- 2 Select “Avoid Traffic”.
- 3 Select the desired item.




| No. | Function                                                                                                                                                                                         |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to automatically change routes when congestion information of the guidance route has been received.                                                                                       |
| 2   | Select to select manually whether or not to change routes when congestion information of the guidance route has been received. In this mode, a screen will appear to ask if you wish to reroute. |
| 3   | Select to not reroute when congestion information for the guidance route has been received.                                                                                                      |

- 4 Select “OK”.

CHANGING THE ROUTE MANUALLY

When the navigation system calculates a new route, the following screen will be displayed.

- 1 Select the desired item.

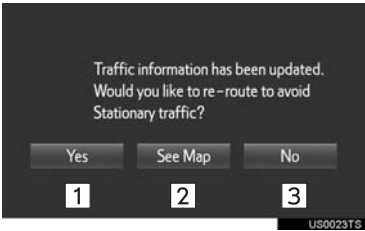

| No. | Function                                                      |
|-----|---------------------------------------------------------------|
| 1   | Select to start route guidance using the new route.           |
| 2   | Select to confirm the new route and current route on the map. |
| 3   | Select to continue the current route guidance.                |

## MY TRAFFIC ROUTES

Specific routes (such as frequently used routes) on which you wish to receive traffic information can be registered as "My Traffic Routes". A route is set by defining a start point and end point, and can be adjusted by setting up to 2 preferred roads.

- 1 Display the "Traffic Settings" screen. (→P.357)
- 2 Select "My Traffic Routes".
- 3 Select the desired item.




| No. | Function                            | Page |
|-----|-------------------------------------|------|
| 1   | Select to register personal routes. | 359  |
| 2   | Select to edit personal routes.     | 360  |
| 3   | Select to delete personal routes.   | 360  |

## REGISTERING PERSONAL ROUTES

- 1 Select "New".
- 2 Select "Edit" next to "Name".



- 3 Enter the name and select "OK".
- 4 Select "Edit" next to "Start".
- 5 Select the desired item to search for the location. (→P.317)

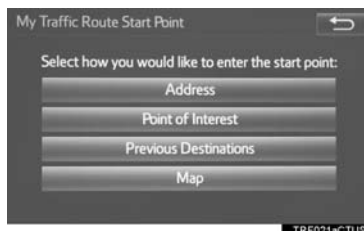

- 6 Select "Edit" next to "End".
  - 7 Select the desired item to search for the location. (→P.317)
  - 8 Select "OK" when the editing traffic route screen appears.
- The routes can be adjusted by setting preferred roads. (→P.361)

### INFORMATION


- Up to 5 routes can be registered.

EDITING PERSONAL ROUTES

- 1 Select **“Edit”**.
- 2 Select the desired traffic route.



- 3 Select **“Edit”** next to the item to be edited.

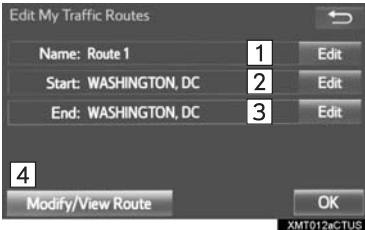

DELETING PERSONAL ROUTES

- 1 Select **“Delete”**.
- 2 Select the traffic route to be deleted and select **“Delete”**.



- 3 Select **“Yes”** when the confirmation screen appears.

| No. | Function                                       | Page |
|-----|------------------------------------------------|------|
| 1   | Select to edit the name of the personal route. | 359  |
| 2   | Select to edit start location.                 |      |
| 3   | Select to edit end location.                   |      |
| 4   | Select to see and modify the entire route.     | 361  |

- 4 Select **“OK”**.
  - The entire route map will be displayed.

## SETTING PREFERRED ROADS

"My Traffic Routes" can be adjusted by setting up to 2 preferred roads.

### 1 Select "Set Preferred Roads".



### 2 Select the desired item.



| No. | Function                          | Page |
|-----|-----------------------------------|------|
| 1   | Select to add preferred roads.    | 361  |
| 2   | Select to modify preferred roads. | 362  |
| 3   | Select to delete preferred roads. | 362  |

## ADDING PREFERRED ROADS

### 1 Select "Add".

- If two preferred roads are already set, select "Yes" and delete a preferred road before add a new one.


### 2 Scroll the map to the desired point and select "OK".



### 3 Select "OK" to use this road.

"Next": Select to change road.

### 4 Select "Add Here" for the desired location.

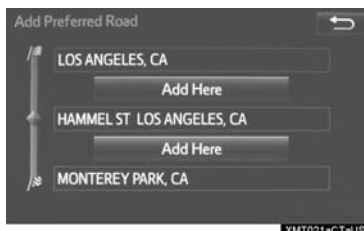

- If a preferred road is already set, a second preferred road can be added anywhere between the start point, the end point and the existing preferred road.

### MODIFYING PREFERRED ROADS

- 1 Select **“Modify”**.
- 2 Select the preferred road to be modified if 2 preferred roads have been set.



- 3 Scroll the map to the desired point and select **“OK”**.



- 4 Select **“OK”** to use this road.
- “Next”**: Select to change road.

### DELETING PREFERRED ROADS

- 1 Select **“Delete”**.
- 2 Select the preferred road to be deleted if 2 preferred roads have been set.



**“Delete All”**: Select to delete all preferred roads on the list.

- 3 Select **“Yes”** when the confirmation screen appears.

1. GPS (GLOBAL POSITIONING SYSTEM)

LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system compensates for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When the vehicle is receiving signals from satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

**NOTICE**

- The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

- Accurate current position may not be shown in the following cases:
  - When driving on a small angled Y-shaped road.
  - When driving on a winding road.
  - When driving on a slippery road such as in sand, gravel, snow, etc.
  - When driving on a long straight road.
  - When freeway and surface streets run in parallel.
  - After moving by ferry or vehicle carrier.
  - When a long route is searched during high speed driving.
  - When driving without setting the current position calibration correctly.
  - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
  - When leaving a covered parking lot or parking garage.
  - When a roof carrier is installed.
  - When driving with tire chains installed.
  - When the tires are worn.
  - After replacing a tire or tires.
  - When using tires that are smaller or larger than the factory specifications.
  - When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration: →P.355
- Inappropriate route guidance may occur in the following cases:
  - When turning at an intersection off the designated route guidance.
  - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
  - When turning at an intersection for which there is no route guidance.
  - When passing through an intersection for which there is no route guidance.
  - During auto reroute, the route guidance may not be available for the next turn to the right or left.
  - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
  - After auto reroute, the route may not be changed.
  - If an unnecessary U-turn is shown or announced.
  - If a location has multiple names and the system announces 1 or more of them.
  - When a route cannot be searched.
  - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
  - Your destination point might be shown on the opposite side of the street.
  - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
  - The road and map data stored in the navigation system may not be complete or may not be the latest version.

● After replacing a tire: →P.355

#### INFORMATION


- This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.

2. MAP DATABASE VERSION AND COVERED AREA

MAP INFORMATION

Coverage areas and legal information can be displayed and map data can be updated.

1 Press the “APPS” button.

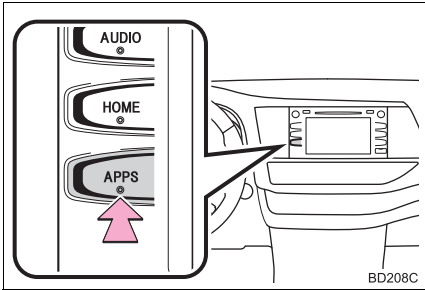

- 2 Select “Navigation”.
- 3 Select “Options”.
- 4 Select “Map Data”.

5 Check that the map data screen is displayed.



| No. | Function                              |
|-----|---------------------------------------|
| 1   | Map version                           |
| 2   | Select to display map coverage areas. |
| 3   | Select to display legal information.  |


INFORMATION

- Map data updates are available for a fee. Contact your Toyota dealer for further information.

## ABOUT THE MAP DATA

Map data for the navigation system is contained in a microSD card that is inserted in the microSD card slot.

Do not eject the microSD card, as doing so may deactivate the navigation system.

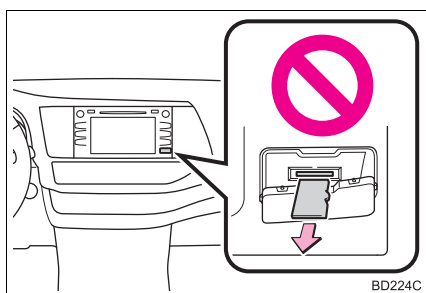

### NOTICE

- Do not edit or delete the map data on the microSD card, as doing so may deactivate the navigation system.

### INFORMATION



- microSDHC Logo is a trademark of SD-3C, LLC.

## Entune App Suite\*

### 1 Entune App Suite OVERVIEW

1. Entune App Suite  
     **SERVICE ..... 368**  
     BEFORE USING THE FUNCTION ..... 370  
     PREPARATION BEFORE USING  
     Entune App Suite ..... 371

### 2 Entune App Suite OPERATION

1. Entune App Suite ..... **373**  
     USING Entune App Suite..... 373  
     LINKING Entune App Suite AND  
     NAVIGATION FUNCTION..... 377  
     Entune App Suite KEYWORD  
     OPERATION ..... 378


### 3 SETUP

1. Entune App Suite  
     **SETTINGS..... 380**

\*: Entune Premium Audio only

### 1. Entune App Suite SERVICE\*

Entune App Suite is a service that enables downloadable applications to be displayed on and operated from the screen. Before Entune App Suite can be used, a few actions need to be performed first. (→P.371)

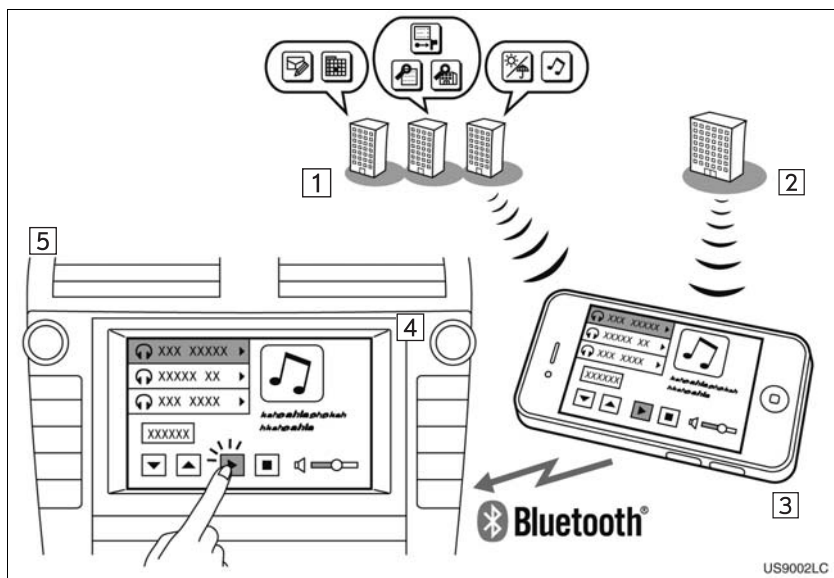

\*: Entune App Suite is available in the contiguous United States, D. C. and Alaska.

| No. | Name               | Function                                                                                                                                                                        |
|-----|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Content provider   | Provides content to the system via a cellular phone.                                                                                                                            |
| 2   | Application server | Provides downloadable application to the system via a cellular phone.                                                                                                           |
| 3   | Cellular phone*    | Using the Entune App Suite application, communication is relayed between the system, the application server and the contents provider.                                          |
| 4   | Applications       | Downloaded Entune App Suite applications provide access to audio/visual content from a content provider when connected via a compatible phone with a data connection.           |
| 5   | Entune App Suite   | Contents received, via a cellular phone, from the contents provider servers are displayed on the screen. The system is equipped with an application player to run applications. |

\*: For known compatible phones, refer to <http://www.toyota.com/entune/>.

#### INFORMATION

- The actual service availability is dependent on the network condition.

## BEFORE USING THE FUNCTION

### SUBSCRIPTION

- User registration is required to start using the Entune App Suite service.
- Entune App Suite does not require an activation fee or monthly recurring fees.
- Services requiring a separate contract can also be used.\*

\*: For details, refer to

<http://www.toyota.com/entune/> or call 1-800-331-4331.

### AVAILABILITY OF SERVICE

- Entune App Suite is available in the contiguous United States, D. C. and Alaska.

#### INFORMATION

- When using Entune App Suite, depending on the details of your cellular phone contract, data usage fees may apply. Confirm data usage fees before using this service.
- In this section, the required actions to activate applications, connect a cellular phone to the system and registration steps for Entune App Suite are explained. For details regarding Entune App Suite operations and each of the applications, refer to <http://www.toyota.com/entune/>.
- The actual service availability is dependent on the network condition.

## INITIALIZING PERSONAL DATA

The personal data used in applications can be removed from the system. (→P.64)

- The following personal data can be deleted from the system and returned to their default settings:
  - Downloaded applications
  - Downloaded application content

#### INFORMATION

- Once initialized, data will be erased from the system. Pay close attention when initializing the data.

## PREPARATION BEFORE USING Entune App Suite

### SETUP REQUIRED TO USE Entune App Suite

Perform the following actions.

- 1 User registration
- 2 Download the Entune App Suite application to your cellular phone.
- 3 Register the cellular phone to the system.
- 4 Download Entune App Suite applications to the system.

In order to use Entune App Suite, the following actions must first be performed:

- User registration with a service contract (→P.371)
- Download the Entune App Suite application onto your cellular phone, and login to the application. (→P.372)
- Register the cellular phone that the Entune App Suite application was downloaded to with the system. (→P.372)
- Register a Bluetooth® phone with the hands-free system. (→P.44)
- Download Entune App Suite applications to the system. (→P.374)

### USER REGISTRATION

- 1 Perform user registration at <http://www.toyota.com/entune/>.

### REGISTERING THE Entune App Suite APPLICATION

- 1 Download the Entune App Suite application to your cellular phone.
- 2 Run the Entune App Suite application on your cellular phone.
- 3 Enter the information required into the Entune App Suite application. Login to the application.

#### INFORMATION

- Applications can only be used when the Entune App Suite application has been downloaded to your cellular phone and the application is running.
- Entune App Suite operational procedures can also be confirmed by visiting <http://www.toyota.com/entune/>.
- In order to use applications, it is necessary to run the Entune App Suite application on your cellular phone.
- For known phone compatibility information, refer to <http://www.toyota.com/entune/>.
- If an Entune App Suite application is used while iPod audio is being played back, system operation may become unstable.

### DOWNLOADING Entune App Suite APPLICATIONS


- 1 The actions on P.371 need to be performed before Entune App Suite applications can be downloaded.
- 2 Once your phone is running the Entune App Suite application with a valid account logged in and is connected to the system, an on-screen pop-up will be displayed offering to begin downloading Entune App Suite applications to the system. After download has started, see P.375 for more information.

1. Entune App Suite

USING Entune App Suite

Entune App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the screen. Before Entune App Suite can be used, a few actions need to be performed first. (→P.371)  
For details about the function and service of each application, refer to <http://www.toyota.com/entune/>.

1 Press the “APPS” button.

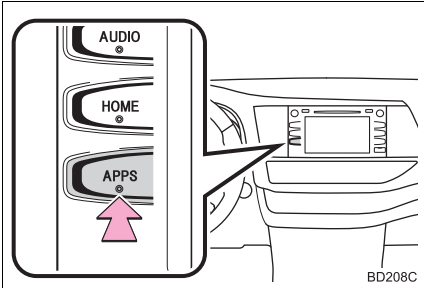

2 Select the desired application button.



| No. | Function                            | Page |
|-----|-------------------------------------|------|
| 1   | Select to activate an application.  | —    |
| 2   | Select to update the application.   | 374  |
| 3   | Select to reorder the applications. | 375  |


UPDATING AN APPLICATION

When Entune App Suite is activated, an application may need to be updated. By updating, an application can be kept to the latest version. When updating the application, it is necessary to download the updated data and install it.


DOWNLOADING THE UPDATED DATA

If an update is available, “Update” can be selected.

1 Select “Update”.

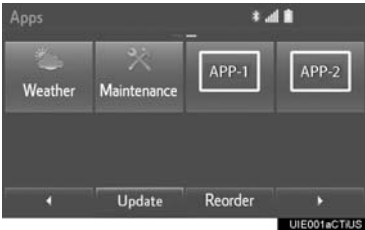


2 Check that downloading is started.

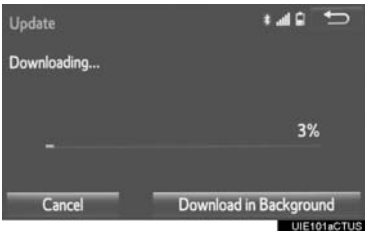

“Download in Background”: Select to operate other function while downloading.  
“Cancel”: Select to cancel updating.

3 Check that downloading is completed.

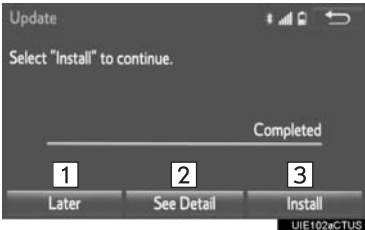

| No. | Function                                                                                                                           |
|-----|------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Select to install the update later. The screen will return to the last displayed screen. Installing the updated data later: →P.375 |
| 2   | Select to display detailed information about the updated data.                                                                     |
| 3   | Select to install the updated data. Follow the steps “INSTALLING THE UPDATED DATA” from “STEP 2”. (→P.375)                         |


INFORMATION

- Application download time may vary based on the speed of the cellular network.
- Application download can be resumed after turning off and back on.
- Future mandatory updates will display an on-screen pop-up when available.
- Entune App Suite function cannot be operated while mandatory updates downloading.

## ■ INSTALLING THE UPDATED DATA

After the downloading is complete, **“Update”** will be changed to **“Install”**.

- 1 Select **“Install”**.
- 2 Select **“Continue”**.

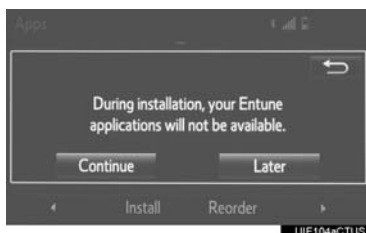

**“Later”**: Select to postpone the installation of the updated data and go back to the previous screen.

- 3 Check that installing is started.

**“Install in Background”**: Select to operate other function while installing.

- 4 Select **“OK”** after the installing is complete.


### INFORMATION

- Entune App Suite function cannot be operated while installing.

## REORDERING THE APPLICATIONS

Order of the applications can be changed.

- 1 Display the **“Apps”** screen. (→P.373)
- 2 Select **“Reorder”**.

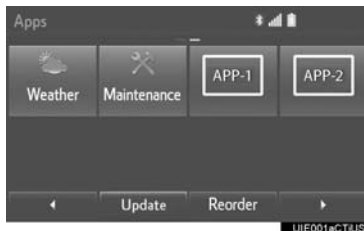

- 3 Select the desired application to be moved.
- 4 Select **◀** or **▶** to move the application, and select **“OK”**.

IF A MESSAGE APPEARS ON THE SCREEN

When problems occur starting up the application player, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action. The following messages are only a few examples. If a message other than the following is displayed, follow the instructions displayed on the screen.

| Message                                                                                                                        | Display conditions                                                      | Corrective action                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "The Phone is not connected. For more information, please visit toyota.com."                                                   | The cellular phone cannot be connected.                                 | Refer to <a href="http://www.toyota.com/entune/">http://www.toyota.com/entune/</a> to confirm if the phone is compatible or not.                                                                    |
| "To use the services, an active application needs to be running on your phone. For more information, please visit toyota.com." | The Entune App Suite application cannot be connected to Bluetooth® SPP. | Refer to <a href="http://www.toyota.com/entune/">http://www.toyota.com/entune/</a> to confirm if the phone is Bluetooth® SPP compatible or not, and then activate the Entune App Suite application. |


INFORMATION

- The actual messages displayed on screen may differ from the messages in this manual.

## LINKING Entune App Suite AND NAVIGATION FUNCTION

The system can set a destination and make a hands-free call via Entune App Suite. For details about the function and service of each application, refer to <http://www.toyota.com/entune/>.

- 1 Press the **"APPS"** button.

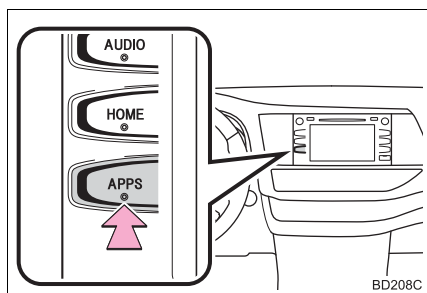

- 2 Select **"Navigation"**.
- 3 Select **"Dest."**.
- 4 Select **"Web Search"**.
- 5 Check that the **"Web Search"** screen is displayed.

## SETTING A DESTINATION USING Entune App Suite

Locations that were searched using Entune App Suite can be set as a destination.

- 1 Display the **"Web Search"** screen. (→P.377)
- 2 Select the desired application button to search.
- 3 Enter a search term, and select **"GO"**.
- 4 Select **"Map"**.
- 5 Select **"Go to [location]"**.



- 6 Select **"OK"** to start guidance.



- For the operation of the route guidance screen and the function of each screen button: →P.329


### INFORMATION

- Actual sequence may vary based on the application.

## MAKING A PHONE CALL USING Entune App Suite

Phone calls can be made to locations which were searched using Entune App Suite.

- 1 Display the "Web Search" screen. (→P.377)
  - 2 Select the desired application button to search.
  - 3 Enter a search term, and select "GO".
  - 4 Select "Call".
  - 5 Select "Yes".
- "Cancel": Select to cancel making a phone call.
- 6 Check that the "Call" screen is displayed.

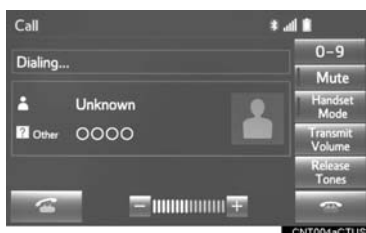

- For phone operation and the function of each screen button: →P.272

### INFORMATION

- Actual sequence may vary based on the application.


## Entune App Suite KEYWORD OPERATION

Information can be entered to an application by the software keyboard or voice recognition. For details about the function and service of each application, refer to <http://www.toyota.com/entune/>.

- The keyboard layout can be changed. (→P.59)

## USING THE SOFTWARE KEYBOARD

- 1 Display the "Apps" screen. (→P.373)
- 2 Select the desired application button.

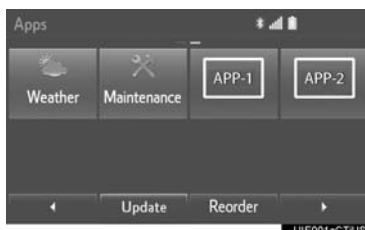


- 3 Select the character input space.
- 4 Enter a search term, and then select "OK".
- 5 Entering characters will be reflected on the character input space.

- For details on operating the keyboard: →P.38

## ENTERING A KEYWORD USING THE VOICE RECOGNITION FUNCTION

- 1 Display the “Apps” screen. (→P.373)
- 2 Select the desired application button.

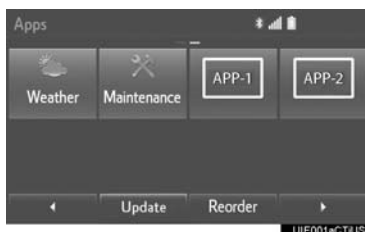


- 3 Press the talk switch. (→P.168)
- 4 Say the desired keyword.
  - Completion of saying the keyword will be detected automatically.
- 5 Search results will be displayed on the screen.

3. SETUP


1. Entune App Suite SETTINGS

The phone data plan pop-up can be set when a paid application is downloaded.

- 1 Press the “APPS” button.

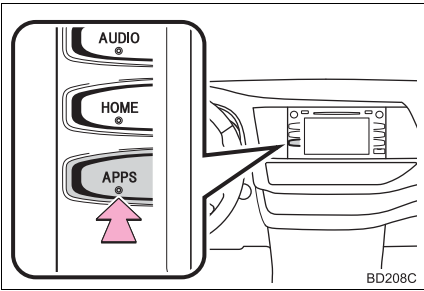

- 2 Select “Setup”.
- 3 Select “Entune”.
- 4 Select the items to be set.

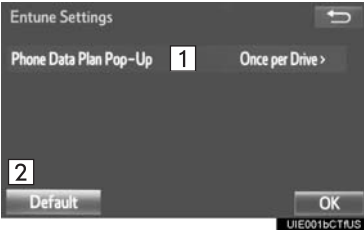

| No. | Function                                                         |
|-----|------------------------------------------------------------------|
| 1   | Select to set the pop up reminder for cellular phone data usage. |
| 2   | Select to reset all setup items.                                 |

- 5 Select “OK”.



INDEX

|   |
|---|
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
|   |

# ALPHABETICAL INDEX

## A

|                      |     |
|----------------------|-----|
| AAC.....             | 100 |
| AM.....              | 83  |
| APPS button .....    | 12  |
| "Apps" screen.....   | 14  |
| AUDIO button.....    | 12  |
| Audio settings ..... | 120 |
| AUX.....             | 116 |

## B

|                                               |     |
|-----------------------------------------------|-----|
| Bluetooth® .....                              | 44  |
| Profiles .....                                | 46  |
| Registering a Bluetooth® audio<br>player..... | 45  |
| Registering a Bluetooth® phone.....           | 44  |
| Bluetooth® audio.....                         | 111 |
| Connecting a Bluetooth® device .....          | 115 |
| Listening to Bluetooth® audio.....            | 115 |
| Bluetooth® phone.....                         | 260 |
| Bluetooth® phone message function .....       | 275 |
| Buttons overview.....                         | 12  |

## C

|                                      |     |
|--------------------------------------|-----|
| Calling on the Bluetooth® phone..... | 265 |
| Casual speech recognition .....      | 174 |
| CD .....                             | 100 |
| Playing an audio CD.....             | 102 |
| Playing an MP3/WMA/AAC disc.....     | 102 |
| Command list .....                   | 175 |

## D

|                                |     |
|--------------------------------|-----|
| Data services settings .....   | 185 |
| Setting download methods ..... | 185 |
| Destination search screen..... | 317 |
| Driver Easy Speak .....        | 186 |
| Driver settings .....          | 68  |

## E

|                                                              |     |
|--------------------------------------------------------------|-----|
| Editing route .....                                          | 339 |
| Adding destinations .....                                    | 340 |
| Deleting destinations .....                                  | 340 |
| Detour setting .....                                         | 342 |
| Reordering destinations.....                                 | 340 |
| Selecting route type.....                                    | 341 |
| Setting route preferences .....                              | 341 |
| Emergency .....                                              | 326 |
| Entering letters and numbers/<br>list screen operation ..... | 38  |
| Entering letters and numbers .....                           | 38  |
| Entune App Suite .....                                       | 373 |
| Entering keyword operation.....                              | 378 |
| Linking Entune App Suite and<br>navigation function.....     | 377 |

| <b>F</b>      |    |
|---------------|----|
| FM radio..... | 83 |

| <b>G</b>                                   |     |
|--------------------------------------------|-----|
| General settings.....                      | 59  |
| GPS (Global Positioning System).....       | 363 |
| Limitations of the navigation system ..... | 363 |

| <b>H</b>                    |    |
|-----------------------------|----|
| HOME button .....           | 12 |
| “Home” screen.....          | 16 |
| Home screen operation ..... | 37 |

| <b>I</b>                                       |     |
|------------------------------------------------|-----|
| Initial screen.....                            | 32  |
| Internet radio.....                            | 99  |
| Intuitive parking assist .....                 | 250 |
| Detection range of the sensors .....           | 253 |
| Display .....                                  | 250 |
| Intuitive parking assist failure warning ..... | 255 |
| Intuitive parking assist switch.....           | 250 |
| Sensor detection information .....             | 253 |
| The distance display and buzzer.....           | 251 |
| Types of sensors.....                          | 250 |
| iPod.....                                      | 107 |

| <b>K</b>      |    |
|---------------|----|
| Keyboard..... | 38 |

| <b>M</b>                                                            |     |
|---------------------------------------------------------------------|-----|
| Maintenance .....                                                   | 69  |
| Map database version and covered area .....                         | 365 |
| Map screen information .....                                        | 310 |
| Displaying information about the icon where the cursor is set ..... | 312 |
| Standard map icons .....                                            | 313 |
| Map screen operation .....                                          | 305 |
| Adjusting location in small increments .....                        | 309 |
| Current position display.....                                       | 305 |
| Map scale .....                                                     | 305 |
| Orientation of the map.....                                         | 306 |
| Screen scroll operation.....                                        | 309 |
| Switching the map mode .....                                        | 307 |
| Memory points settings .....                                        | 344 |
| Deleting previous destinations .....                                | 352 |
| Setting up address book.....                                        | 348 |
| Setting up areas to avoid.....                                      | 350 |
| Setting up home .....                                               | 345 |
| Setting up preset destinations.....                                 | 346 |
| Microphone .....                                                    | 168 |
| Mobile Assistant.....                                               | 178 |
| MP3.....                                                            | 100 |

# ALPHABETICAL INDEX

## N

Navigation ..... 301

## O

Operating information ..... 122  
 CD player and disc ..... 123  
 Error messages ..... 131  
 File information ..... 127  
 iPod ..... 125  
 Radio ..... 122  
 Terms ..... 129

## P

Panoramic view monitor ..... 214  
 Camera ..... 239  
 Camera switch ..... 217  
 Display ..... 217, 221, 222, 225, 228  
 Magnifying function ..... 235  
 Switching the display ..... 219  
 Things you should know ..... 247  
 Phonebook ..... 267  
 Phone/message settings ..... 280  
 "Contact/Call History Settings"  
 screen ..... 282  
 "Messaging Settings" screen ..... 290  
 "Phone Display Settings" screen ..... 291  
 Phone/message settings screen ..... 280  
 "Sound Settings" screen ..... 281  
 PWR·VOL knob ..... 12

## R

Rear seat entertainment system ..... 132  
 Changing the source ..... 136  
 Playing a Blu-ray Disc™ (BD)/  
 DVD discs ..... 145  
 Playing an audio CD ..... 158  
 Playing an SD card ..... 161  
 Playing MP3/WMA discs ..... 158  
 Remote controller ..... 135  
 Using the video mode ..... 166  
 Rear view monitor system ..... 190  
 Receiving on the Bluetooth® phone ..... 271  
 Incoming calls ..... 271  
 Receiving traffic map information ..... 184  
 Receiving weather information ..... 182  
 Registering/connecting Bluetooth®  
 device ..... 44  
 Certification ..... 48  
 Profiles ..... 46  
 Registering a Bluetooth® audio player  
 for the first time ..... 45  
 Registering a Bluetooth® phone  
 for the first time ..... 44  
 Registering home ..... 22  
 Registering preset destinations ..... 24  
 Route guidance screen ..... 333  
 During freeway driving ..... 335  
 Route overview ..... 334  
 Screen for route guidance ..... 333  
 Turn list screen ..... 337  
 Turn-by-turn arrow screen ..... 337  
 When approaching intersection ..... 336  
 Route trace ..... 312

| <b>S</b>                                            |     |
|-----------------------------------------------------|-----|
| Satellite Radio.....                                | 93  |
| Screen adjustment.....                              | 41  |
| Search operation .....                              | 319 |
| Searching by address .....                          | 321 |
| Searching by address book.....                      | 325 |
| Searching by coordinates.....                       | 328 |
| Searching by emergency .....                        | 326 |
| Searching by intersection and<br>freeway .....      | 326 |
| Searching by map .....                              | 328 |
| Searching by point of interest.....                 | 322 |
| Searching from previous<br>destinations .....       | 325 |
| Selecting search area .....                         | 320 |
| Setting home as destination.....                    | 320 |
| Setting preset destinations<br>as destination ..... | 320 |
| Setting Bluetooth® details.....                     | 51  |
| “Bluetooth* Setup” screen .....                     | 51  |
| Connecting a Bluetooth® device .....                | 54  |
| Deleting a Bluetooth® device .....                  | 53  |
| Editing the Bluetooth® device<br>information.....   | 56  |
| Registering a Bluetooth® device .....               | 52  |
| “System Settings” screen .....                      | 57  |
| Setting home as the destination .....               | 27  |
| “Setup” screen .....                                | 20  |
| Starting route guidance.....                        | 329 |
| Steering switches.....                              | 118 |

| <b>T</b>                               |     |
|----------------------------------------|-----|
| Talking on the Bluetooth® phone .....  | 272 |
| Incoming call waiting .....            | 274 |
| Touch screen gestures .....            | 35  |
| Touch screen operation .....           | 36  |
| Toyota parking assist monitor .....    | 198 |
| Driving precautions.....               | 198 |
| Toyota parking assist monitor .....    | 198 |
| Screen display.....                    | 200 |
| Switching the parking mode screen .... | 202 |
| Traffic information .....              | 314 |
| Traffic settings.....                  | 357 |
| Auto avoid traffic.....                | 358 |
| My traffic routes.....                 | 359 |
| Screen for traffic settings.....       | 357 |
| TUNE·SCROLL button.....                | 12  |
| Typical voice guidance prompts.....    | 338 |

| <b>U</b>                  |     |
|---------------------------|-----|
| USB/AUX port.....         | 80  |
| USB memory.....           | 103 |
| Playing a USB audio ..... | 106 |

| <b>V</b>                  |     |
|---------------------------|-----|
| Voice command system..... | 168 |
| Voice settings.....       | 66  |

| <b>W</b>  |     |
|-----------|-----|
| WMA ..... | 100 |

ALPHABETICAL INDEX

X

XM Satellite Radio ..... 93

    Displaying the radio ID ..... 97

    How to subscribe to  
        an XM Satellite Radio ..... 95

    If the satellite radio tuner  
        malfunctions..... 98

    Presetting a channel..... 97

    Selecting a channel from the list ..... 97

# Map database information and updates

## END-USER LICENSE AGREEMENT

### END-USER TERMS

The content provided by HERE ("Data") is licensed, not sold. By opening this package, or installing, copying, or otherwise using the Data, you agree to be bound by the terms of this agreement.

The Data is provided for your personal, internal use only and may not be resold. It is protected by copyright, and is subject to the following terms (this "End User License Agreement") and conditions which are agreed to by you, on the one hand, and HERE and its licensors (including their licensors and suppliers) on the other hand. For purposes of these terms, "HERE" shall mean (a) HERE North America, LLC with respect to Data for the Americas and/or the Asia Pacific region and (b) HERE Europe B.V. for Data for Europe, the Middle East and/or Africa.

The Data includes certain information and related content provided under license to HERE from third parties and is subject to the applicable supplier terms and copyright notices set forth at the following URL:  
[http://corporate.navteq.com/supplier\\_terms.html](http://corporate.navteq.com/supplier_terms.html).

This data includes information taken with permission from Canadian authorities, including © Her Majesty, © Queen's Printer for Ontario, © Canada Post, GeoBase®, © Department of Natural Resources Canada. All rights reserved.

The Data may include or reflect data of licensors, including Her Majesty the Queen in the Right of Canada ("Her Majesty"), Canada Post Corporation ("Canada Post") and the Department of Natural Resources Canada ("NRCan"). Such data is licensed on an "as is" basis. The licensors, including Her Majesty, Canada Post and NRCan, make no guarantees, representations or warranties respecting such data, either express or implied, arising by law or otherwise, including but not limited to, effectiveness, completeness, accuracy or fitness for a particular purpose.

The licensors, including Her Majesty, Canada Post and NRCan, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the Data. The licensors, including Her Majesty, Canada Post and NRCan, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the Data.

End User shall indemnify and save harmless the licensors, including Her Majesty, Canada Post and NRCan, and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the Data.

Contains information licensed under the Open Government License – Ontario.

Contains information licensed under the Open Government or Open Data Licenses of Newfoundland and Labrador, Ontario, Niagara Region, Toronto, Edmonton and Alberta, British Columbia, Vancouver, Hamilton and Peel.

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2014. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

Includes data available from the U.S. Geological Survey.

### TERMS AND CONDITIONS

**License Limitations on Use:** You agree that your license to use this Data is limited to and conditioned on you for solely personal, noncommercial purposes, and not for service bureau, timesharing or other similar purposes. Except as otherwise set forth herein, you agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

**License Limitations on Transfer:** Your limited license does not allow transfer or resale of the Data, except on the condition that you may transfer the Data and all accompanying materials on a permanent basis if: (a) you retain no copies of the Data; (b) the recipient agrees to the terms of this End-User License Agreement; and (c) you transfer the Data in the exact same form as you purchased it by physically transferring the original media (e.g., the CD-ROM or DVD you purchased), all original packaging, all Manuals and other documentation. Specifically, Multi-disc sets may only be transferred or sold as a complete set as provided to you and not as a subset thereof.

**Additional License Limitations:** Except where you have been specifically licensed to do so by HERE in a separate written agreement, and without limiting the preceding paragraph, your license is conditioned on use of the Data as prescribed in this agreement, and you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with, or in communication with, including without limitation, cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

**Warning:** This Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic Data, any of which may lead to incorrect results.

**No Warranty:** This Data is provided to you "as is", and you agree to use it at your own risk. HERE and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

**Disclaimer of Warranty:** HERE AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

**Disclaimer of Liability:** HERE AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THIS DATA; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS DATA, ANY DEFECT IN THIS DATA, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF HERE OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

**Export Control:** You agree not to export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such export laws, rules or regulations prohibit HERE from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

**Entire Agreement:** These terms and conditions constitute the entire agreement between HERE (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

**Severability:** You and HERE agree that if any portion of this agreement is found (legal or unenforceable, that portion shall be severed and the remainder of the Agreement shall be given full force and effect.

**Governing Law:** The above terms and conditions shall be governed by the laws of the State of Illinois (for Data for the Americas and/or the Asia Pacific region) or The Netherlands (for Data for Europe, the Middle East and Africa), without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. For any and all disputes, claims and actions arising from or in connection with the Data ("Claims"), you agree to submit to the personal jurisdiction of (a) the State of Illinois for Claims related to Data for the Americas and/or the Asia Pacific region provided to you hereunder, and (b) The Netherlands for Data for Europe, the Middle East and/or Africa provided to you hereunder.

**Government End Users:** If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with this End-User License Agreement, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use", and be treated in accordance with such Notice:

**NOTICE OF USE**  
CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: HERE

CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS: 425 West Randolph Street, Chicago, IL 60606.

This Data is a commercial item as defined in FAR 2.101 and is subject to the End-User License Agreement under which this Data was provided.  
© 1987-2014 HERE. All rights reserved. \*original publication date

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify HERE prior to seeking additional or alternative rights in the Data.

© 1987-2014 HERE. All rights reserved. \*original publication date

## **END OF TERMS AND CONDITIONS**

### **EXHIBIT A END USER TERMS**

A. General Terms. Prior to the delivery of any Data to a user, Licensee shall obtain the user's agreement to terms and conditions of use substantially similar to, but no less protective of TCS, its licensors or VISA than the following terms:

"1. Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, except for the in vehicle navigation system this information appears in, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation positioning, dispatch, real time route guidance, fleet management or similar applications.

2. No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. AISIN AW CO, LTD, Inc. and its licensors (and their licensors and suppliers, collectively, "AISIN") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and AISIN expressly disclaims any warranties regarding, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

3. Disclaimer of Liability. AISIN SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF AISIN OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

4. Indemnity. You agree to indemnify, defend and hold AISIN and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information."

B. VISA. With respect to any VISA data, VISA specifically requires the following:

1. Licensee shall provide the Attribution to VISA with respect to the VISA data.
2. Licensee shall not allow data mining or downloading of the Information except in strictly limited quantities (a maximum of nine (9) locations per end-user search. An end-user search is a request by an end-user for a search of listings in a specific geographic area meeting certain criteria (for example, nearest listing to a waypoint or listings along a route segment). Any individual listing may be selected manually by the end-user for storage in a personal electronic address book or other form of memory in the navigation system. The personal electronic address book in the navigation system may be synchronized (not copied, reproduced, republished, uploaded, posted, transmitted, stored or distributed) with other devices operated by the end-user.
3. Licensee shall incorporate updates to the Data as soon as commercially feasible.
4. In addition to the general minimum terms included above, Licensee shall agree to require end-users to accept the following VISA-standard end user terms as a condition of access to the Data:
  - i.) All materials are the copyrighted property of AISIN and/or TELECOMMUNICATION SYSTEMS, INC. and its licensors. No material from this site may be copied, reproduced, republished, uploaded, posted, transmitted, stored, or distributed in any way, except that end user may download one listing (a location's name and address) on an individual non-automated basis per visiting session to the Licensee site or application, into end user's personal electronic address book. A personal electronic address book may not be shared by end user with other end users, nor may it be copied, reproduced, republished, uploaded, posted, transmitted, stored or distributed in any way. Use of the personal electronic address book must be for end user's personal, noncommercial use only.
  - ii.) End user may not use any material from AISIN's site or application for the purpose of compiling, enhancing, verifying, supplementing, or otherwise modifying VISA databases, lists, or directories of any kind, including, but not limited to, location databases, mailing lists, contact lists, marketing lists, geographic directories, or any other compilation or collation of information which is sold, rented, published, distributed, or in any manner supplied to a third party.

Certain business data provided by Infogroup © 2014, All Rights Reserved.



# Certification

- Gracenote, the Gracenote logo and logotype, “Powered by Gracenote”, MusicID, Playlist Plus and MediaVOCS are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries



### **Gracenote® End User License Agreement - Music**

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. **YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

**GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.**

© 2013 Gracenote, Inc. All rights reserved.

## ► For U.S. owners

### I. Clear Channel Disclaimers

"Total Traffic Network, a division of Clear Channel Broadcasting, Inc., owns or holds the rights to the traffic, news, sports, weather, stocks and other data (the "TOTAL TRAFFIC-HD+ Data") and TOTAL TRAFFIC-HD+ network through which it is delivered, together the "TTN Service". Use of the TTN Service is subject to the terms of these Device End User Terms.

"The TTN Service is informational only. User assumes all risk of use. Total Traffic Network and its suppliers and licensors make no representations about the accuracy or timeliness of any of the TOTAL TRAFFIC-HD+ Data, including traffic and road conditions, route usability, or speed."

"TOTAL TRAFFIC-HD+ NETWORK DATA IS PROVIDED "AS IS," AND "WHERE IS". TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS EXPRESSLY DISCLAIM ALL WARRANTIES WITH RESPECT TO THE DATA (INCLUDING, WITHOUT LIMITATION, THAT THE DATA WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE."

"TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER LEGAL THEORY."

### II. The Weather Channel's (TWC's) Disclaimers

THE FOLLOWING TERMS APPLY TO THE USE OF ANY MATERIAL, DATA OR INFORMATION PROVIDED BY THE WEATHER CHANNEL, LLC ("THE WEATHER CHANNEL"), INCLUDING WEATHER-RELATED INFORMATION AND REPORTS, OBTAINED BY YOU OR OTHERS THROUGH THE TTN SERVICE ("THE WC DATA").

#### **DISCLAIMER OF WARRANTIES.**

YOUR USE OF THE WC DATA IS AT YOUR SOLE RISK. THE WC DATA IS PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. THE WEATHER CHANNEL EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT.

THE WEATHER CHANNEL MAKES NO REPRESENTATION OR WARRANTY THAT (i) THE WC DATA WILL MEET YOUR REQUIREMENTS, (ii) THE WC DATA WILL BE UNINTERRUPTED, TIMELY, SECURE, OR ERROR-FREE, (iii) THE RESULTS THAT MAY BE OBTAINED FROM THE USE OF THE WC DATA WILL BE ACCURATE OR RELIABLE, OR (iv) ANY ERRORS OR BUGS IN THE WC DATA WILL BE CORRECTED. ACCORDINGLY, THE WEATHER CHANNEL SHALL NOT BE RESPONSIBLE OR LIABLE FOR THE ACCURACY, USEFULNESS OR AVAILABILITY OF THE WC DATA.

#### **LIMITATION OF LIABILITY.**

YOU EXPRESSLY UNDERSTAND AND AGREE THAT THE WEATHER CHANNEL, ITS SUPPLIERS, ITS LICENSORS AND ITS AFFILIATE COMPANIES SHALL NOT BE LIABLE, UNDER ANY LEGAL THEORY, INCLUDING CONTRACT, TORT, NEGLIGENCE OR STRICT LIABILITY, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, CONSEQUENTIAL OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, GOODWILL, USE, DATA OR OTHER INTANGIBLE LOSSES (EVEN IF THE WEATHER CHANNEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES), RESULTING FROM OR ARISING OUT OF YOUR USE OF, OR YOUR INABILITY TO USE, THE WC DATA, THIS AGREEMENT, OR ANY OTHER MATTER RELATING TO THE WC DATA. YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY DISPUTE WITH THE WEATHER CHANNEL RELATED TO THE WC DATA OR CONTENT SHALL BE CANCELLATION OF RECEIPT OF THE WC DATA.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.