



CUSTOMER EXPERIENCE CENTER
1-800-331-4331

TUNDRA

2 0 1 0



NAVIGATION SYSTEM QUICK REFERENCE GUIDE

TABLE OF CONTENTS

LIMITATIONS OF THIS QUICK REFERENCE GUIDE	1
BASIC OPERATION	2
DESTINATION INPUT	3
<i>By Address</i>	3
DESTINATION INPUT - POINTS OF INTEREST (POI)	5
<i>Points of Interest by Name</i>	5
<i>Points of Interest by Category</i>	6
DESTINATION INPUT - TELEPHONE NUMBER	7
<i>Business or Registered Addresses</i>	7
SET HOME	8
ADDITIONAL NAVIGATION FEATURES	10
<i>Search Area</i>	10
<i>Route Preferences</i>	10
<i>3 Routes</i>	10
<i>Screen Preferences</i>	10
<i>Beep Setting</i>	11
<i>Volume Setting</i>	11
<i>Keyboard Setting</i>	11
<i>Screen Transition</i>	11
<i>Freeway Exit Info Mode</i>	11
<i>Estimated Distance and Time</i>	12
<i>Operation of Vehicle Emergency Screen</i>	12

LIMITATIONS OF THIS QUICK REFERENCE GUIDE

This Quick Reference Guide is designed to provide information on the basic operation and key features of the navigation system. The Quick Reference Guide is not intended as a substitute for the Navigation Owner's Manual. We strongly encourage you to review the Navigation Owner's Manual so you will have a better understanding of the navigation system capabilities and limitations.

BASIC OPERATION



1 NORTH-UP OR COMPASS MODE Icon

Touch to change the map display between North-up or Head-up perspectives.

2 ZOOM IN/ZOOM OUT Icons

Touch to magnify or reduce the map scale.

3 INFO Button

Access Maintenance, Calendar, Language and Screen Settings.

4 DISPLAY/TILT Button

Adjust the contrast, brightness or turn off the screen. Change the angle of the screen for best viewing.

5 AUDIO Button

Set the radio station presets, adjust the balance and tone controls.

6 MENU Button

Access Voice Guidance Volume, Select User, My Places, Setup and Suspend Guidance.

7 DESTINATION Button

Input the destination by one of several methods and initiate route guidance.

8 MAP/VOICE Button

Repeat the last voice guidance prompt, cancel the map scrolling feature, or show the current position.

9 CURRENT VEHICLE POSITION Mark


Indicates the current position of the vehicle and its directional heading.

DESTINATION INPUT

BY ADDRESS



step 1 Press the **DEST** panel button followed by **Address** and move to step 3. To change Region, touch **Change** and move to step 2.

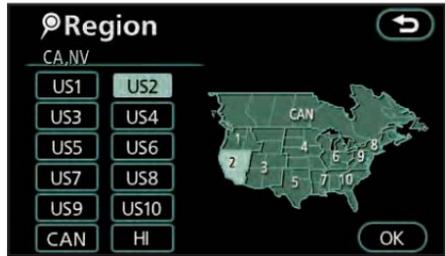

step 2 Select the desired Region and touch **OK**.



step 3 Input the house number and touch **OK**.



step 4 Touch **Street** and input the street name. Touch **List** to see all of the available options.

Quick Tip - Enter the street name without prefixes such as North or the letter N. The system will display all of the options available.



step 5 Use **Up** or **Down** to scroll up or down. Touch the desired street and go to step 8. If the street you are looking for is not listed, touch **City** and go to step 6.



step 6 Touch **Input Name** to type in the city name or select from a previously selected city. If the city is not available try the next largest city in the vicinity.

DESTINATION INPUT

BY ADDRESS



step 7 Use or to scroll up or down. Touch the desired city. Select the desired street.



step 8 Select the desired Route Preference by touching



step 9 Select the desired Route Preference(s) for the trip. When the yellow bar appears, the route has been selected. Touch to confirm your selection.



step 10 If necessary, use the arrow keys to adjust the position on the map to put you closer to your destination. Touch to confirm the position.




step 11 Touch to start route guidance .


DESTINATION INPUT - POINTS OF INTEREST (POI)

POINTS OF INTEREST BY NAME



step 1 Press the **DEST** panel button followed by 

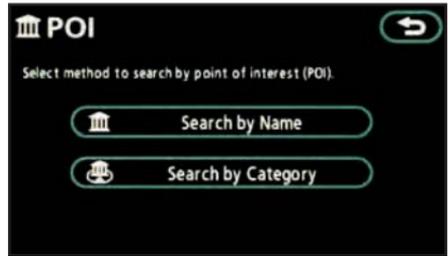

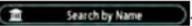step 2 Touch 



step 3 Input the POI name and touch 



step 4 Use  or  to scroll up or down. Touch the desired destination

Quick Tip - If the POI isn't listed in the database verify the spelling and Region for accuracy.



step 5 See page 10 to select the desired Route Preference. Touch **Enter**.



step 6 Touch **Guide** to start route guidance.

Quick Tip - Touching the **Info.** button next to the POI name will display the address and telephone number.

DESTINATION INPUT - POINTS OF INTEREST (POI)

POINTS OF INTEREST BY CATEGORY



step 1 Press the **DEST** panel button followed by 



step 2 Touch 



step 3 Touch 



step 4 Touch the desired category icon.



step 5 Touch the desired sub-category icon followed by **OK** and then touch 



step 6 Use  or  to scroll up or down. Touch the point of interest followed by **Enter** and then **Guide**.

DESTINATION INPUT - TELEPHONE NUMBER

BUSINESS OR REGISTERED ADDRESSES



step 1 Press the **DEST** panel button followed by .




step 2 Input the area code and telephone number followed by **OK**. It is not necessary to dial "1."

Quick Tip - Personal telephone numbers cannot be used for Destination input unless previously added in the Address Book.



step 3 Select the business or registered address from the screen.

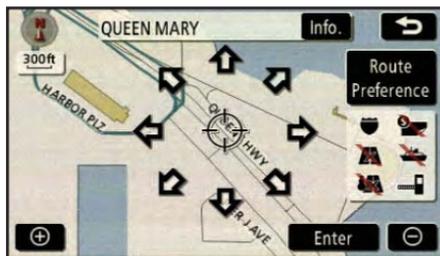

step 4 See page 10 to select the desired Route Preference. Touch **Enter**.



step 5 Touch **Guide** to start route guidance.

SET HOME



step 1 Press the **MENU** panel button followed by **My Places**.



step 2 Touch **Register** to input your home address.



step 3 Make sure that you are in the desired Region. Touch **Address**.



step 4 Input the house number and touch **OK**.

Tip - For security reasons, use a point close to your home instead of your actual home address.



step 5 Touch **Street** and input the street name. Touch **List** to see all of the available options.



step 6 Use **Up** or **Down** to scroll up or down. Touch the desired street and go to step 9. If the street you are looking for is not listed, touch **City** and go to step 7.



step 7 Touch **Input Name** to type in the city name or select from a previously selected city. If the city is not available try the next largest city in the vicinity.




step 8 Touch the desired city. Select the desired street.



step 9 If necessary use the arrow keys to adjust the position on the map. Touch **Enter** to confirm the position.



step 10 Touch **Icon** at the top left of the screen to change the home icon.

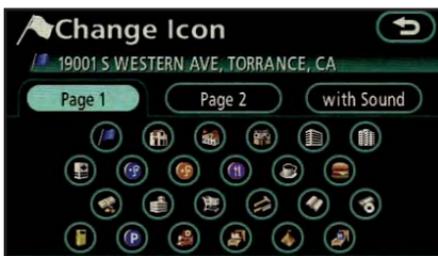

step 11 Touch the desired icon for your home.



step 12 Touch **OK** at the bottom of the screen.

ADDITIONAL NAVIGATION FEATURES

SEARCH AREA



Prior to inputting the desired address select the appropriate Region by pressing **Change**. If the incorrect Region is chosen, the system will either find an address that closely matches in that area or will indicate that the address cannot be found.



Select the desired Region and touch **OK**.

ROUTE PREFERENCES




Once the address has been inputted, select the desired route preference(s) for the trip. For example, if Toll Road is not selected, the system will route over non-toll roads which may take longer to reach the destination.

3 ROUTES




One of three routes may be chosen for the trip. Quick 1 offers the shortest route by time; Quick 2 is the second fastest route; Short is the most direct route based upon driven mileage. The system does not account for traffic signals or traffic flow.

SCREEN PREFERENCES

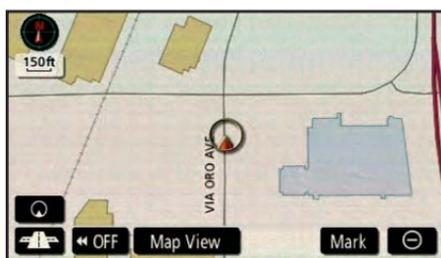


Touch **Map View** to select from seven different screen viewing options. Three screen preferences are available when the map is visible and four additional are available during route guidance only.

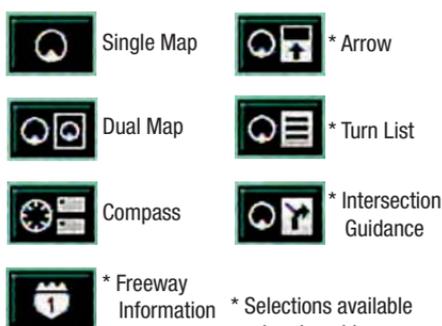

ADDITIONAL NAVIGATION FEATURES


BEEP SETTING

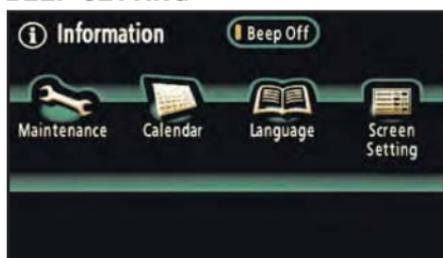

PRESS INFO > BEEP OFF

Switch off the confirmation tone by touching **Beep Off** at the top of the screen. When the yellow bar appears this feature has been disabled.


VOLUME SETTING

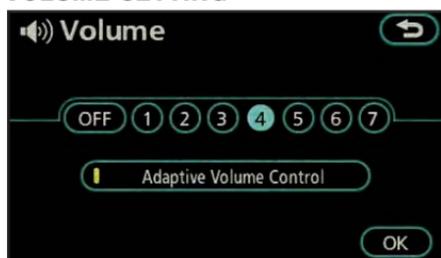

PRESS MENU > VOLUME

The Volume feature allows for the adjustment of the voice guidance commands. Touch the desired volume level and touch **OK** to confirm your selection.


KEYBOARD SETTING

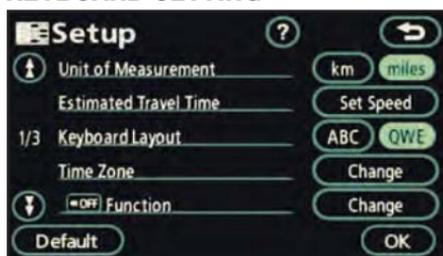

PRESS MENU > SETUP

Set the layout of the keyboard as alphabetical or standard QWERTY keyboard. Touch **OK** to confirm your selection.

SCREEN TRANSITION

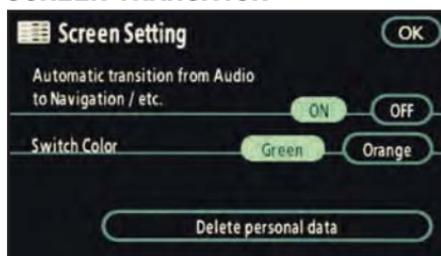

PRESS INFO > SCREEN SETTING

Touch **OFF** to prevent the system from reverting to the map display. Once the screen transition is switched off, the audio or climate control screen (if equipped) will remain without reverting to the map display. Touch **OK** to confirm your selection.

FREEWAY EXIT INFO MODE*

During Route Guidance on a Freeway or Toll Road, a variety of points of interest such as Gas Stations, Restaurants or Hotels can be viewed during your trip.

To access this feature, select Freeway Exit Info Mode from the Screen Preferences (see page 10). Upcoming freeway exits will be listed by the number or name along with the POIs in the vicinity of the exit ramp. Select the desired exit from the list to see the POIs at that particular exit.



* This feature is only available while in Route Guidance and traveling on a freeway or Toll Road.

ADDITIONAL NAVIGATION FEATURES

ESTIMATED DISTANCE AND TIME†

The navigation system will provide an estimate of the distance and time to the destination based upon the suggested route during guidance. The system automatically calculates the remaining miles until you arrive at the destination. Based upon the distance traveled, the system will also provide an estimated time until arriving at your destination.

The system can be customized to match your driving habits. To adjust the speed for residential, main streets or freeways please refer to the Navigation Owner's Manual for a complete description of this feature.



† The system does not account for traffic signals or traffic flow.

OPERATION OF VEHICLE EMERGENCY SCREEN:



Press the **DEST** panel button followed by  to access four emergency destinations:

- Police Stn. • Hospital • Dealer • Fire Stn.

Touch the desired destination. The system will provide a list of locations sorted by distance. If the vehicle is in motion, the system will route you to the nearest location automatically.