


# Display Audio System

Toyota Part Number: PT296-18190-20

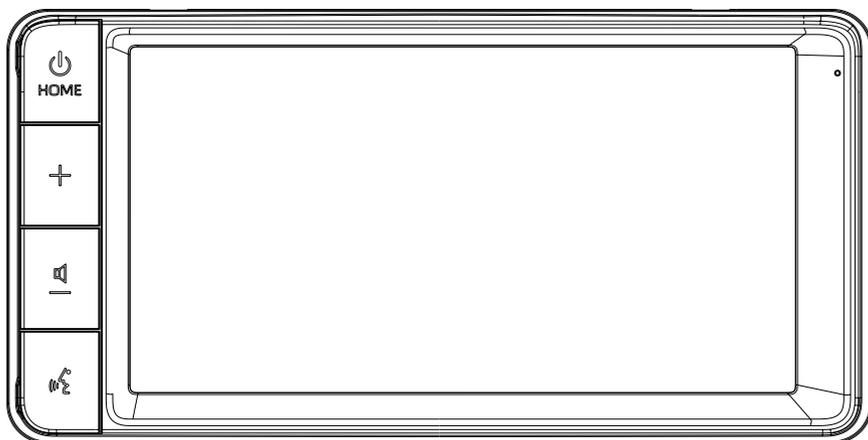

**Base Audio Owner's Manual**  
for /Apple CarPlay/ Android Auto™ / iPod/USB/  
Bluetooth® Audio/AM/FM/



## TABLE OF CONTENTS

<b>1</b>	<b>BASIC OPERATION</b>	<b>7</b>
<b>2</b>	<b>SETTINGS</b>	<b>17</b>
<b>3</b>	<b>AM AND FM RADIO</b>	<b>27</b>
<b>4</b>	<b>USB / IPOD</b>	<b>31</b>
<b>5</b>	<b>BLUETOOTH®</b>	<b>35</b>
<b>6</b>	<b>APPLE CARPLAY</b>	<b>45</b>
<b>7</b>	<b>ANDROID AUTO™</b>	<b>49</b>
<b>8</b>	<b>UPDATES</b>	<b>53</b>
<b>9</b>	<b>CERTIFICATION</b>	<b>54</b>



# TABLE OF CONTENTS

## 1 BASIC OPERATION

1	Multimedia System.....	8
2	Home Screen .....	9
3	Main System Controls .....	10
4	Steering Wheel Controls .....	13

## 2 SETTINGS

1	Overview .....	18
2	Display Settings .....	19
3	Audio Settings .....	20
4	Bluetooth® Settings .....	22
5	System Settings .....	23
6	Android Auto™ Settings .....	24
7	Apple CarPlay Settings .....	25

## 3 AM AND FM RADIO

1	Activating FM/AM Radio.....	28
2	Selecting a Radio Station.....	29

## 4 USB/IPOD

1	Connection .....	32
2	Audio Playback .....	33
3	Compatible Extensions .....	34

## 5 BLUETOOTH®

1	Overview .....	36
2	Compatible Devices .....	37
3	Device Pairing .....	38
4	Voice Call .....	39
5	Short Message Function .....	42
6	Playing Bluetooth® Audio Files .....	43

## 6 APPLE CARPLAY

1	Requirements.....	46
2	Starting Apple CarPlay .....	47
3	Exiting Apple CarPlay Screen .....	48

## 7 ANDROID AUTO™

1	Requirements.....	50
2	Starting Android Auto™ .....	51
3	Exiting Android Auto™ .....	52

## 8 UPDATES

Updates.....	53
--------------	----

## 9 CERTIFICATION

Certification .....	54
---------------------	----



# 1

## BASIC OPERATION

1	MULTIMEDIA SYSTEM .....	8
2	HOME SCREEN .....	9
3	MAIN SYSTEM CONTROLS .....	10
4	STEERING WHEEL CONTROLS....	13

1

2

3

4

5

6

7

8

9


# 1. MULTIMEDIA SYSTEM

The Multimedia System is composed of the following systems:

- AV (audio and video) playback and streaming using USB or Bluetooth®
- Hands-free telephony
- Smartphone projection using Apple CarPlay and Android Auto™
- Audio enhancement of digital sources using Clari Fi [  ].

## 2. HOME SCREEN

The HOME screen of the Multimedia System displays soft keys to access various functions:

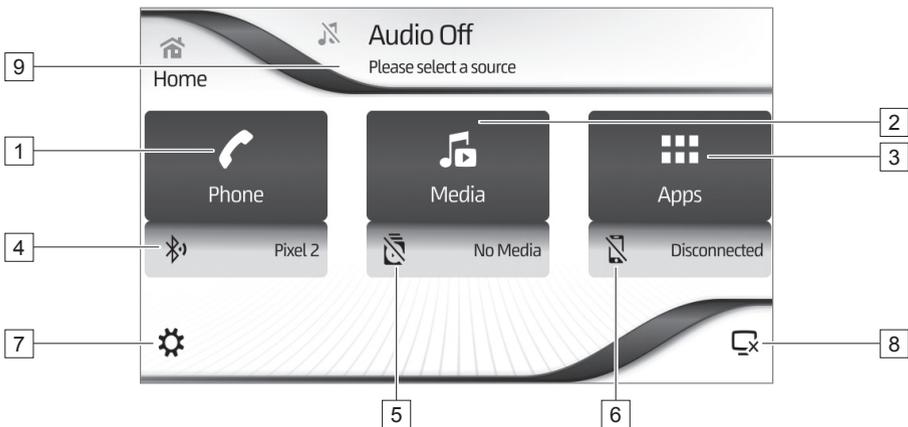

No.	Function
1	Hands-free Telephone [PHONE] [ 📞 ]
2	Media Source Selection [MEDIA] [ 🎵 ]: AM/FM radio, iPod, USB, Bluetooth®
3	Projection Applications [APPS] [ 📱 ]: Android Auto™ or Apple CarPlay
4	Device currently connected to Bluetooth Shortcut to <b>Bluetooth</b> ® settings
5	Shortcut to Media Source that is currently active
6	Shortcut to <b>Maps</b> application (if available)
7	Shortcut to <b>Settings</b> [ ⚙ ]
8	Toggle <b>Display On/Off</b> [ 🖥 ]
9	<b>Mini-Player</b> showing currently playing content and controls

**NOTE:**

When an Android Auto™, Apple CarPlay enabled device is connected, the [APPS] icon will change to reflect the respective application type.

### 3. MAIN SYSTEM CONTROLS

Operation of the Multimedia System can be performed using the side buttons 1, 2 and 3, using the touchscreen or the control buttons (if available) on the steering wheel.



**NOTE:**

If the Multimedia System is OFF, press any button **1** **2** **3** or touch the screen **4** to turn ON. The audio source is not selected after turning ON.

## POWER / HOME BUTTON

The table below summarizes the **1** **POWER/HOME** button functions:

Button Action	Action
<b>Short Press</b>	Go to HOME screen No action if in active phone call or if the reverse camera is on
<b>Long Press</b>	Turn off Audio and Display No action if in active phone call or if the reverse camera is on
<b>Longer Press greater than 6 seconds</b>	Option to restart the Multimedia System

## VOLUME CONTROLS BUTTONS

Press the button **2** **◀-/+** to adjust the volume.

Refer to the table below for more information:

Button Action	Action
<b>Short Press</b>	Decrease/Increase volume of current source* by one-step
<b>Long Press</b>	Decrease/Increase volume of current source* continuously until button release or until minimum/maximum volume is reached

\*Current Source includes:

- Audio Source (AM / FM / USB / iPod / MTP (Media Transfer Protocol) / Bluetooth® and Projection)
- Phone Ring
- Phone Call
- Navigation prompts (Projection)

## VOICE RECOGNITION BUTTON




Press the button **3** **[🗨️]** for voice commands.

Refer to the table below for more information:

Button Action	Action
<b>Short Press</b>	Voice recognition in projection and telephony modes
<b>Long Press</b>	Same behavior as a short press

## CONTROL BY TOUCH GESTURES

The following table summarizes the Touch Gestures that are recognized by the Multimedia System. Permissible Touch Gestures can vary based on the active screen.

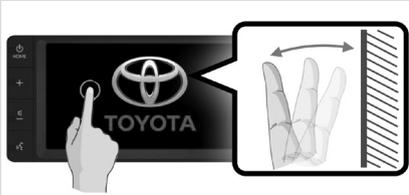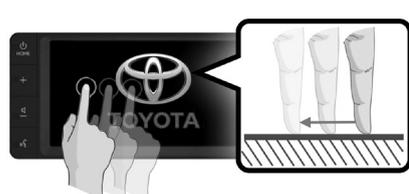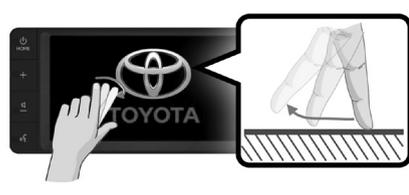Operation Method	Outline	Main Use
	<p><b>Tap</b> Quickly Touch and release once</p>	<p>Selecting an item on the screen</p>
	<p><b>Drag</b> Touch the screen with your finger, and move to the desired position</p>	<p>Scrolling through lists Moving the map screen</p>
	<p><b>Flick</b> Quickly move the screen by flicking with your finger</p>	<p>Scrolling through lists</p>

**NOTE:**


Do not apply pressure when touching the screen. Screen damage could result if excessive pressure is applied.

Only use your fingers to touch the screen.

Wipe off fingerprints using a soft cleaning cloth.

Using chemical cleaners may damage the screen.

## 4. STEERING WHEEL CONTROLS

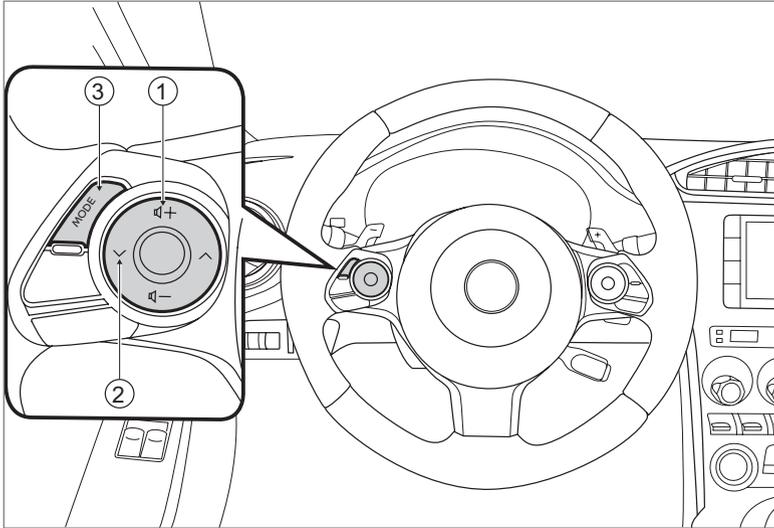

The Multimedia System can be controlled by using the following steering wheel buttons:

**NOTE:**

If the Multimedia System is OFF, press any steering wheel button **1**, **2**, **3** to turn it ON. Please note that an audio source will not be selected when it is turned ON.

## VOLUME UP/DOWN BUTTON

The Volume buttons **1** can be used to adjust the audio volume level for the Multimedia System.

Refer to the table below for more information:

Button Action	Action
<b>Short Press</b>	Decrease/Increase volume of current source by one-step
<b>Long Press</b>	Decrease/Increase volume of current source continuously until button release or until minimum/maximum volume is reached

## SEEK UP / SEEK DOWN

The Seek Up/Down buttons: **2**, can be used to change radio stations and active tracks

Refer to the table below for more information:

Button Action	Action
<b>Short Press</b>	Select next/previous preset station position for radio* Select next/previous track while playing back USB/iPod/Bluetooth® Audio, Projection mode content
<b>Long Press</b>	Perform seek up/seek down function for radio Perform fast forward/rewind of the current track for USB/iPod/Bluetooth® and Projection mode content

\*This requires preset stations to be stored. Unassigned preset positions will be skipped.

## MODE BUTTON

The Mode button , allows you to cycle through all of the audio modes and control audio playback functions. Refer to the table below for more information:

Button Action	Action
<b>Short Press</b>	Audio sources are cycled in sequence (FM, AM, Bluetooth®, USB/iPod, Projection, Audio Off) Inactive sources will be skipped
<b>Long Press</b>	Mute/Unmute or Pause/Resume audio depending on the current source When receiving a call: mute/unmute phone ring sound



# 2

## SETTINGS

1	OVERVIEW .....	18
2	DISPLAY SETTINGS .....	19
3	AUDIO SETTINGS.....	20
4	BLUETOOTH® SETTINGS .....	22
5	SYSTEM SETTINGS .....	23
6	ANDROID AUTO™ SETTINGS .....	24
7	APPLE CARPLAY SETTINGS .....	25

1

2

3

4

5

6

7

8

9

# 1. OVERVIEW


To access the settings menu, touch the **[⚙️]** key on the HOME screen.

The settings menu enables you to change preferences in the following areas:

- Display
- Audio
- Bluetooth®
- System
- Android Auto™
- Apple CarPlay

Setting changes are retained when the system is switched off.

# 2. DISPLAY SETTINGS

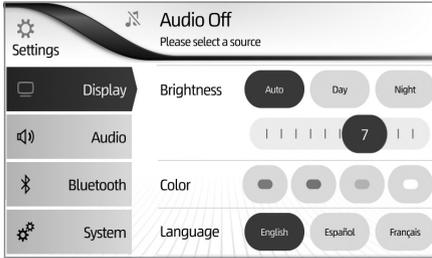

The Display settings menu can be used to adjust the following items:

- Display brightness modes
- Display brightness
- Color themes
- Language

## DISPLAY BRIGHTNESS MODES

There are three modes available (**Auto**, **Day**, **Night**)

- The **Auto** mode switches the display brightness to Day/Night automatically based on the illumination state of the instrument panel. If illumination is **OFF** then Day mode is set and if illumination is **ON** then night mode is set.
- The **Day** and **Night** buttons can be used to select the desired mode manually.
- The brightness level for each mode can be adjusted by using the slider control.

## COLOR

There are four color schemes available (**Blue**, **Red**, **Green** and **White**)

The color scheme is applied instantly when a selection is made.

## LANGUAGE

There are three languages available (**English**, **Español** and **Français**)

The selected language is applied instantly when a selection is made.

# 3. AUDIO SETTINGS




The Audio settings menu can be used to adjust the following items:

- Equalizer and Balance
- Beeps
- Phone Ring Tone Volume Level
- Phone Call Volume Level
- ASL (Automatic Sound Levelizer)

## EQUALIZER (EQ) AND BALANCE

### EQUALIZER

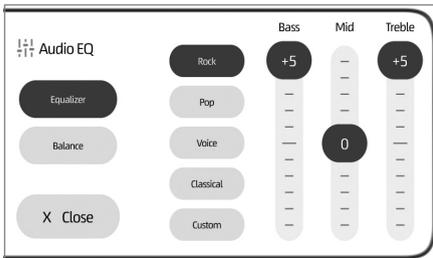


You can apply equalizer presets for **Rock**, **Pop**, **Voice**, or **Classical** or apply custom equalization using the **Custom** preset option.

Equalizer presets are applied instantaneously upon selecting the preset.

**Custom** equalizations for **Bass**, **Mid** and **Treble** can be made by dragging the slider up and down.

### BALANCE

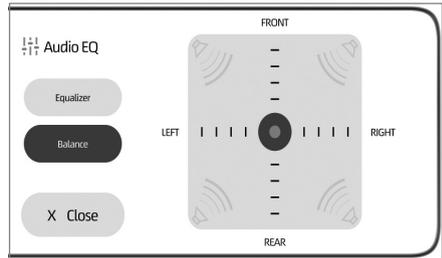

Touch and Drag the [●] icon to adjust the sound balance towards the front, rear, left or right.

### BEEPS



Beeps will play on the front speakers when you touch on an icon or text label on the screen or when a Steering Wheel Control button is pressed.

- Touch **Low**, **Mid** or **High** to set the beep volume accordingly.
- Touch **Off** to turn off Beeps.


### RING TONE



The Ring Tone volume control allows you to set the volume level of incoming call rings.

Drag the slider to set the Ring Tone volume. The Ring Tone volume level is shown on the slider.


## PHONE CALL

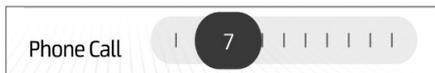

The Phone Call volume control allows you to set the loudness level of the audio during a call.

Drag the slider to set the Phone Call volume. The Phone Call volume level is shown on the slider.

## ASL

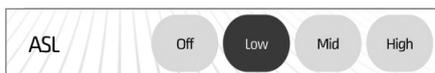


ASL (Automatic Sound Levelizer) adjusts the volume automatically according to vehicle speed to compensate for road & wind noise.

This setting allows you to turn the function off or adjust the sensitivity of the feature.

- Touch **Low**, **Mid** or **High** to set the strength of the volume adjustment accordingly. When the selection is changed, the new volume adjustment strength is immediately applied to the audio output.
- Touch **Off** to turn off ASL.

## 2. SETTINGS

# 4. BLUETOOTH® SETTINGS

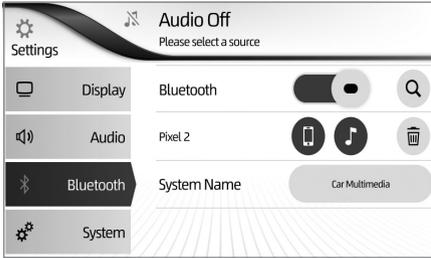


The Bluetooth® Settings can be used to control the following settings:

- Turn On/Off Bluetooth®
- Search for a new device
- Manage existing paired devices
- Change the system name for Bluetooth® (which appears on the phone)

To learn about Bluetooth® pairing, refer to **Chapter 5**.


## 5. SYSTEM SETTINGS

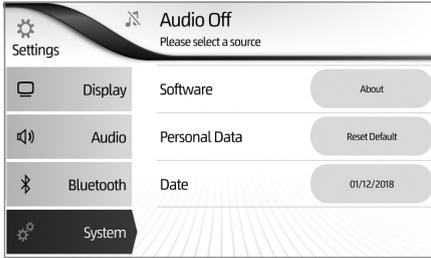

The System settings provides access to the following functions:

- Touch the **About** button to view the information about the Multimedia System. A screen containing the software version, serial number, Toyota Part Number and the link to the software license information will be displayed.
- Touch the **Reset Default** button to change all settings to Factory Default Settings. This action will delete all User Configurations, Settings, Device lists and Tuner presets and restart the system.
- Touch the **Date** button to adjust the Date values on the Multimedia System. The setting will be remembered when the unit is switched off. The setting will not be remembered if the battery supply is disconnected.

# 6. ANDROID AUTO™ SETTINGS

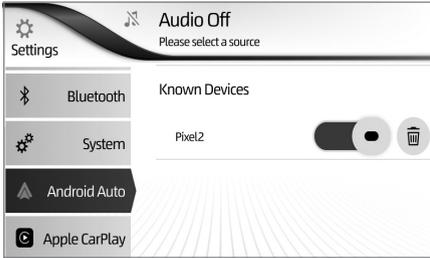

The Android Auto™ Settings can be used to control the Android Auto™ device list. When an Android Device is connected to the Multimedia System, it is added to this list.

The slider button can be used to turn Android Auto™ ON or OFF for a particular device.

If the status is ON, Android Auto™ will be launched when the device is connected. If the status is OFF, the device will be connected as a USB device.

The device can be deleted by **touching** the [🗑️] icon next to the slider button.

# 7. APPLE CARPLAY SETTINGS



The Apple CarPlay Settings can be used to control the Apple CarPlay device list. When an Apple CarPlay device is connected to the Multimedia System, it is added to this list shown in this menu.

The slider button can be used to turn Apple CarPlay ON or OFF for a particular device.

If the status is ON, Apple CarPlay will be launched when the device is connected. If the status is OFF, the device will be connected as a USB device.

The device can be deleted by **touching** the [🗑️] icon next to the slider button.



# 3

## AM AND FM RADIO

- 1    **ACTIVATING FM/AM RADIO .....28**
- 2    **SELECTING A RADIO STATION ....29**

1

2

3

4

5

6

7

8

9

### 3. AM AND FM RADIO

## 1. ACTIVATING FM/AM RADIO

Touch the **[MEDIA]** icon on the HOME screen to display the source selection screen and touch the desired AM or FM option.



If FM/AM is already active, touch the miniplayer from any screen to go to the radio screen.



## 2. SELECTING A RADIO STATION

To select a radio station, use any of the following options:

### MANUAL TUNING

Manual tuning allows the user to tune the radio to a specific frequency.

- Touch the ◀◀ or ▶▶ icons to tune to a radio station manually. Each touch of the keys will change the tuner frequency by one-step in the selected direction.
- Drag the tuner slider ● left or right to the desired frequency.
- Touch and hold the ◀◀ or ▶▶ icons to perform a seek operation. The radio will scroll through the frequencies until a radio station is found.



### STATION LIST

Select the **[Station List]** key to go to the Station list screen, from where you can select the desired station from a list of detected radio stations.


There are 2 types of station list supported:  
Available and Best Signals



To refresh the station list, press the refresh [🔄] button.

### RECALLING A PRESET

There are twelve preset fields available for storing your favorite radio stations.

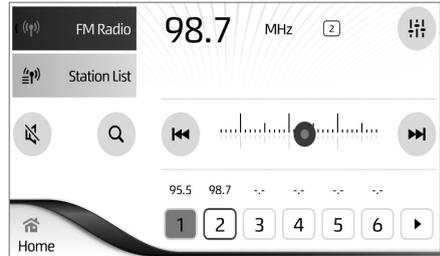

To store a preset into a preset position, tune to the station using any method described above and touch and hold one of the available preset cells to store the station.

At a given time only six presets would be displayed. To go to the next list of the presets, press the next arrow button [▶] ]

To recall a preset station:

- Touch the preset button in the radio screen.
- Use the steering wheel controls Seek Up/Seek Down to select the next/previous preset.
- Use the next/previous buttons in the miniplayer to select the next/previous preset.



# 4

## USB / IPOD

1	CONNECTION .....	32
2	AUDIO PLAYBACK.....	33
3	COMPATIBLE EXTENSIONS.....	34

1

2

3

4

5

6


7

8

9

# 1. CONNECTION

To connect a **[USB/iPod]** device, open the USB port cover and connect a compatible memory device.

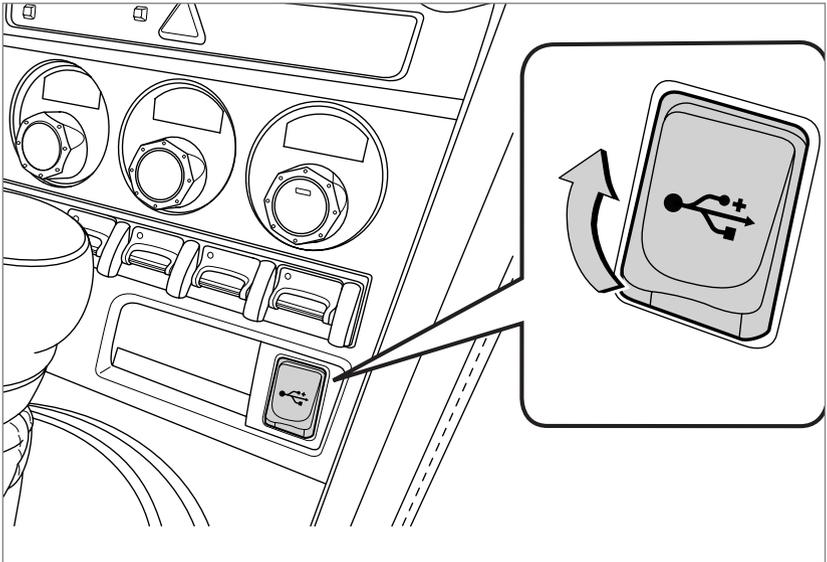

The device connected to the USB port appears on the Media screen.

## 2. AUDIO PLAYBACK

To playback audio from USB storage or iPod, follow these steps.

1. **Touch** the **[MEDIA]** icon to on the HOME screen to display the source selection screen.
2. The device connected to the USB port will appear on the screen.



3. **Touch** the USB or iPod device under the media source selection screen.



No.	Function
1	Touch <b>[Library]</b> to display the media library folders and content. Use the touchscreen to scroll up or down through the library to locate your desired folder or track list and select a track to start playback.
2	Touch <b>[▶  ]</b> to Play/Pause.
3	Touch <b>[◀ ]</b> or <b>[ ▶]</b> to play the Previous or Next file.
4	Touch <b>[↻]</b> to cycle through the Repeat-1 / Repeat All / Repeat OFF modes.
5	Touch <b>[⌵⌶]</b> to toggle shuffle on/off.
6	Drag the slider <b>[○]</b> to seek to different points in the playback. The progress bar shows the elapsed time and duration of the current track.
7	Touch the label to return to the media selection screen.
8	Touch <b>[equalizer]</b> to toggle on/off Audio enhancement.

### 3. COMPATIBLE EXTENSIONS

The following table lists the types of media and files that are supported by this Multimedia System.

Audio				
Format	Extension	USB	iPod/IOS	Android
WMA	.wma	Yes	No	Yes
MP3	.mp3	Yes	Yes	Yes
AAC	.m4a	Yes	No	Yes

# 5

## BLUETOOTH®

1	OVERVIEW .....	36
2	COMPATIBLE DEVICES .....	37
3	DEVICE PAIRING .....	38
4	VOICE CALL .....	39
5	SHORT MESSAGE FUNCTION .....	42
6	PLAYING BLUETOOTH® AUDIO FILES .....	43

1

2

3

4

5

6

7

8

9

# 1. OVERVIEW

The Multimedia System is equipped with Bluetooth®, a technology that enables you to place hands-free calls wirelessly or play audio files.

**NOTE:**

Depending on the version of Bluetooth® supported by your device, some functions may not be available.

**NOTE:**

When a phone is connected over Android Auto™ or Apple CarPlay, the functions described in this chapter are replaced by the smartphone's interface.

### 2. COMPATIBLE DEVICES

This system is compatible with devices that support hands-free calling, contact list transfers and Bluetooth® audio streaming.

**NOTE:**

Devices must support Bluetooth® version 2.1 or higher (recommended: Ver. 4.0 +EDR or higher).


**NOTE:**

For a list of devices confirmed to be compatible with your Multimedia System, please check with your Toyota dealer.

## 3. DEVICE PAIRING

To pair your compatible Bluetooth® device, follow the steps below.



1. Touch the settings icon [ ⚙ ] on the HOME screen to display the functions menu.
2. Touch on the [Bluetooth®] menu item.
3. Slide the Bluetooth® button to [ON].

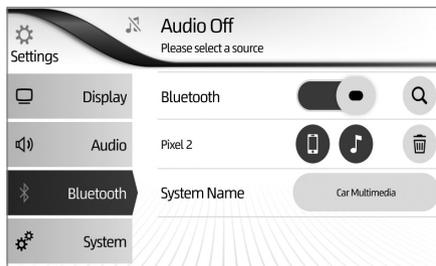

4. Touch the [ 🔍 ] button to start search for devices that can be paired. The system searches for Bluetooth® devices for a maximum of 20 seconds.
5. On the list of located Bluetooth® devices select the device you want to pair



6. Touch [PAIR] to begin the pairing process. Once the pairing process is completed, a confirmation message is shown.

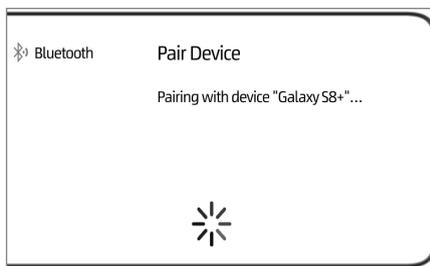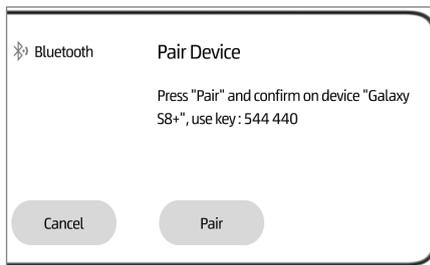

7. Touch [OK] on the message screen to complete the pairing process.

The Multimedia System will automatically initiate the download of **contacts**, **call history** and **messages**.

**NOTE:**

A maximum of four devices can be paired.

## 4. VOICE CALL

### CALL USING THE DIAL PAD

To place a call using the Multimedia System's dial pad:

1. Touch the **[HOME]** key from any screen.
2. Touch Bluetooth® **[PHONE]** to display hands-free telephony function.



3. Touch **[Dial Pad]** to display the keypad and enter a number to call.



4. Touch **[Call]** to start the call.

### CALL USING THE CONTACT LIST


The contact list synchronizes with the phonebook data of the connected phone. To make a call through the contact list:

1. Touch **[Contacts]**.
2. Select the name of the person you want to call. The contact details will be shown.



3. Select the phone number to dial the contact. If there are 2 or more phone numbers, select the desired number in the list.

### CALL USING THE CALL LIST

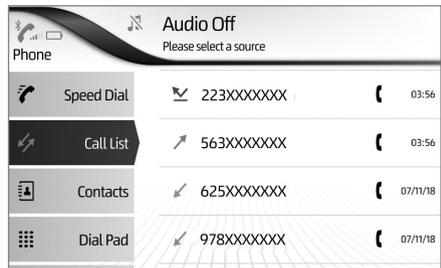


The call list shows a history of previously received, dialed and missed calls. Touch **[Call List]** to open.

The icon to the left of a call signifies the call type:

Icon	Call Type
	Outgoing call
	Received call
	Missed call

To make a call from the call list, touch a contact or number. A call will be started.

## CALL USING THE SPEED DIAL LIST

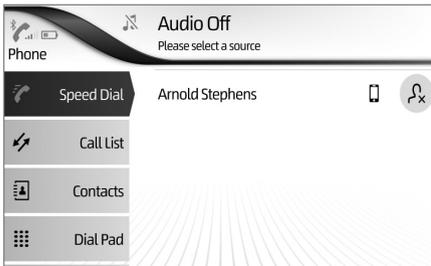

Adding a contact to the Speed Dial list can be done using one of below methods:

### METHOD 1:

1. Touch **[Contacts]** and select the contact you would like to add.
2. Touch and hold on a phone number to add the contact to your Speed Dial.

### METHOD 2:

1. Touch **[Call List]** and find the contact or phone number you would like to add.
2. Touch and Hold on the contact in the call list for a prompt to add the contact to your **Speed Dial**.

#### NOTE:

A maximum of 4 Speed Dials can be stored

To make a call through the favorites list:

1. Touch **[Speed Dial]**.
2. **Touch** the name of the person you want to call.

## CALL USING THE MESSAGE LIST



When viewing a message, you can start a call with the message sender by touching **[Call]**. For more information about the message function, refer to section 5.5.

## RECEIVING CALLS



A call reception screen is displayed when a paired device receives a call. A ring sound is also played.


Touch **[Accept]** on the screen to **Accept** the call.

Touch **[Reject]** on the screen to **Reject** the call.

Use a long press on the **Mode** steering wheel button to **mute/unmute** the phone ring sound.

## DURING A CALL

While talking on an active call, the following screen is displayed:

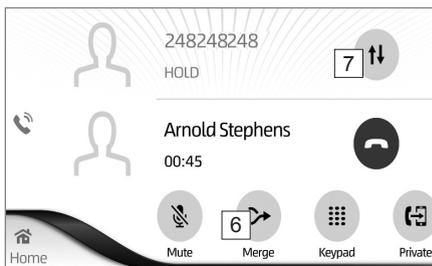

No.	Function
1	Touch <b>[⏏]</b> to hang up the phone. The Mode button on the steering wheel can also be pressed to hang up the phone.
2	Touch <b>[Mute]</b> to mute your voice to the other party. The icon will be highlighted during mute mode. To cancel muting your voice, select this icon again.
3	Touch <b>[Add]</b> to dial a second number.
4	Touch <b>[Keypad]</b> to open the dial pad to send a tone.
5	Touch <b>[Private]</b> to switch from a hands-free call to a cellular phone call.
6	Touch <b>[Merge]</b> to combine both calls to a conference call.
7	Touch to switch to a call on <b>hold</b> . This will put the active call on hold.


## 5. SHORT MESSAGE FUNCTION

The Multimedia System supports display of received text messages. When a new message is received, a pop-up will be displayed. To view a message through the message list:

1. Touch **[Messages]**.
2. Select the number or contact for which to show the message. The icon to the left of the message shows the read/unread state of the message.



3. A screen showing the message will be displayed.

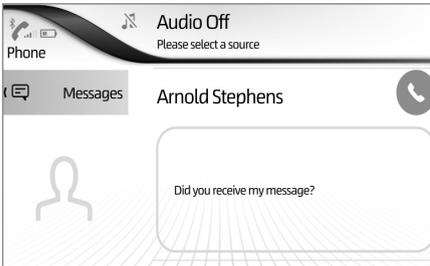

4. Touch **[Call]** to call the number or contact directly from the message.


**NOTE:**

Display of text messages will be blocked while the vehicle is in motion


## 6. PLAYING BLUETOOTH® AUDIO FILES

The Multimedia System is capable of streaming music from Bluetooth® (**version 2.1 or newer**) enabled devices. To allow this function, make sure the device is paired for music via the settings screen. Use the following steps to playback audio from your Bluetooth® enabled device.

1. Press **[HOME]** key from any screen.
2. **Touch the [MEDIA]** icon on the HOME screen to display the source selection screen.
3. The device connected over Bluetooth will appear on the Media screen.

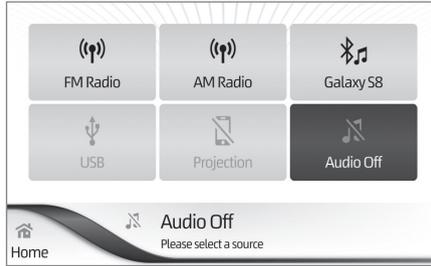

4. **Touch the tile showing the name of your Bluetooth® device.**

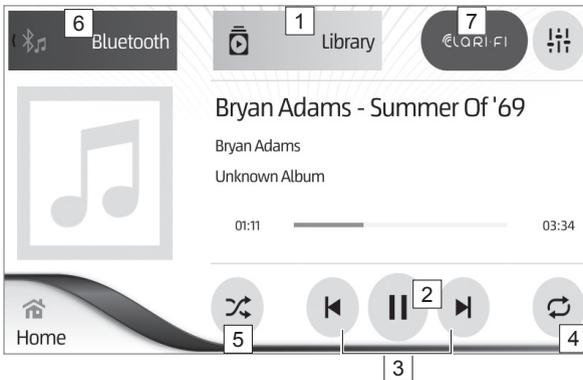

No.	Function
1	Touch <b>[Library]</b> to display the media library folders and content. Use the touchscreen to scroll up or down through the library to locate your desired folder or track list and select a track to start playback. Some devices may not support Browsing through Libraries. For these devices, the Library label will appear inactive (grayed out).
2	Touch <b>[▶  ]</b> to Play/Pause.
3	Touch <b>[◀ ]</b> or <b>[ ▶]</b> to play the Previous or Next file.
4	Touch <b>[↻]</b> to cycle through the <b>Repeat</b> modes.
5	Touch <b>[✻]</b> to shuffle.
6	Touch the label to return to the media selection screen.
7	Touch <b>[EQRI FI]</b> to toggle on/off Audio enhancement.



# 6

## APPLE CARPLAY

1	REQUIREMENTS .....	46
2	STARTING APPLE CARPLAY .....	47
3	EXITING APPLE CARPLAY SCREEN .....	48

1

2

3

4

5

6

7

8

9

### 1. REQUIREMENTS

Apple CarPlay allows you to connect your iPhone to the Multimedia System through USB connection.


- USB Cable
- Apple iPhone (iOS Ver. 9.3 or later)

**NOTE:**

For a detailed list of compatible devices, refer to <https://www.apple.com/ios/carplay/>.

## 2. STARTING APPLE CARPLAY


To connect an Apple CarPlay device, open the USB port cover and connect a compatible device.

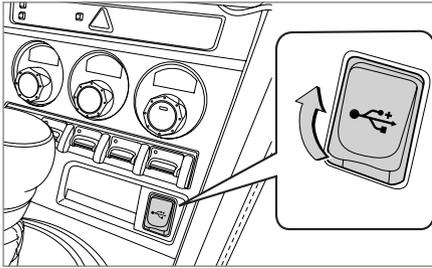

**NOTE:**

For best performance and compatibility, ensure that you use a USB cable certified or approved by the manufacturer.

A pop up will appear with the option to launch Apple CarPlay for the connected device.

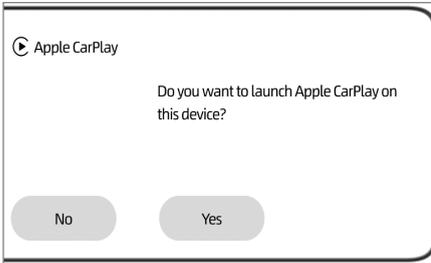

Ensure the Parking Brake is engaged and select **[YES]**.

Follow the instructions on the phone to activate and launch Apple CarPlay.

**NOTE:**

Above steps are only required when launching Apple CarPlay from the device the first time.

The **[APPS]** icon will be updated to display the Apple CarPlay feature now available.



Touch the Apple CarPlay icon **[C]** on the HOME screen to launch Apple CarPlay. You can also use the Maps shortcut to open the Maps application directly.

### 3. EXITING APPLE CARPLAY SCREEN

To exit the Apple CarPlay screen, short press the **[POWER/HOME]** button. Apple CarPlay will continue running in the background.

# 7

## ANDROID AUTO™

1	REQUIREMENTS .....	50
2	STARTING ANDROID AUTO™ .....	51
3	EXITING ANDROID AUTO™ .....	52

1

2

3

4

5

6

7

8

9

# 1. REQUIREMENTS

Android Auto™ technology enables you to connect your Android phone to the vehicle's Multimedia System through a USB connection.

- USB Cable
- Compatible Android™ phone with Android 5.0 (Lollipop) or above. For best performance, it is recommended to use Android 6.0 (Marshmallow) and up.
- Android Auto™ app downloaded from Google Play store

### **NOTE**


Check with the manufacturer of your device whether Android Auto™ can be used with your device.

### **NOTE**

For some countries, Android Auto™ might not be available from Google Play® store.

## 2. STARTING ANDROID AUTO™

To use Android Auto™ device, open the USB port cover and connect a compatible device.

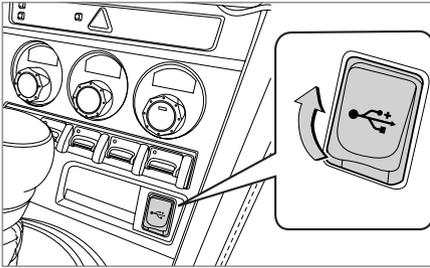


### NOTE

For best performance and compatibility, ensure that you use a USB cable certified or approved by the manufacturer.


If the Android Auto™ app is not already installed the device may prompt you to download the Android Auto™ app and other required apps.

If all required apps are already installed, a pop up will appear with the option to launch Android Auto™ for the connected device.

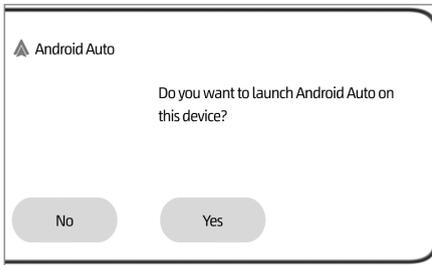

Ensure the Parking Brake is engaged and select **[YES]**.

Follow the instructions on the phone to activate and launch Android Auto™.

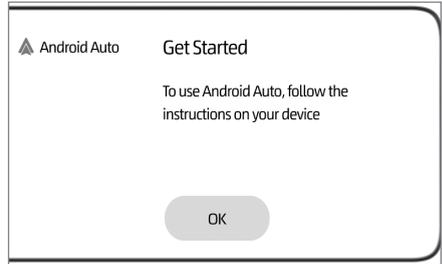

### NOTE

Above steps are only required when launching Android Auto™ from the device the first time.

The **[APPS]** icon will be updated to display the Android Auto™ feature now available.



Touch the Android Auto™ icon **[▲]** on the HOME screen to launch Android Auto™. You can also use the Maps shortcut to open a navigation application directly.


### NOTE

To launch Android Auto™, ensure date is set to the current date in your device and Multimedia System.

### 3. EXITING ANDROID AUTO™

To exit the Android Auto™ screen, short press the **[POWER/HOME]** button. Android Auto™ will continue running in the background.

You can also use the [⏮] icon.

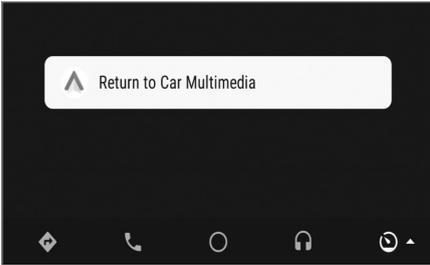

## 8. UPDATES

For software updates, please contact your local Toyota Authorized dealer.

## 9. CERTIFICATION

Model: PV602

FCC ID: 2AHPN-BE2841

IC: 6434C-BE2841

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.