


SECTION 1

BASIC FUNCTIONS

Basic information before operation

- Display operation 20
- Touch switch operation 21
- Inputting letters and numbers 21
- Current position display 23
- Screen scroll operation (one-touch scroll) 24
- Map scale 27
- Orientation of the map 28
- Limitations of the navigation system 28
- Map database information and updates 31

Display operation

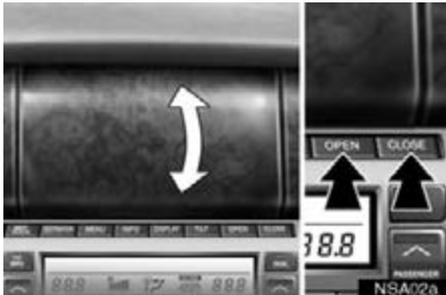

Push the “OPEN” or “CLOSE” button to open or close the screen cover and turn the system on or off. Pushing the “MAP/VOICE”, “DESTINATION”, “MENU” or “INFO” button can also open the cover and turn the system on.

While you are using the navigation system, turning the engine switch to the “LOCK” position will turn off the system and close the cover automatically. After this, if you turn the engine switch back to the “ACC” or “ON” position, the cover will be automatically opened and the system will turn on the previous mode you used.

If the screen cover is stopped in the middle of the door opening (closing) operation, push the “CLOSE (OPEN)” button once and then push the “OPEN (CLOSE)” button again.


Your navigation system works when the engine switch is in the “ACC” or “ON” position.

CAUTION

Take care not to jam your hand while opening/closing the screen cover. Otherwise you could be injured.

NOTICE

Do not obstruct the screen cover while it is opening/closing. It could damage your navigation system.

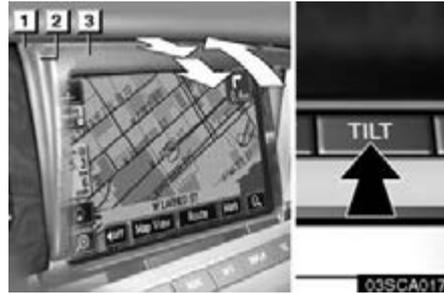

When the display is hard to be read due to the lights from your surroundings, the display can be tilted. It is recommended to tilt the display in position 3 when the retractable hardtop is opened. If the display is in position 1, each push of the “TILT” button will tilt the display to position 2, 3 and then back to 1 in this order.

The display will automatically resume the previous position you used when the engine switch is turned to “ACC” or “ON” position.

CAUTION

Take care not to jam your hand while tilting the display. Otherwise, you could be injured.

NOTICE

Do not obstruct the display while it is tilting. It could damage your navigation system.

Touch switch operation

This system is operated mainly by the switches on the screen. To prevent damage to the screen, lightly touch switches on the screen with your finger. When you touch a switch on the screen, a beep sounds.

Do not use objects other than your finger to touch the screen.

INFORMATION
<ul style="list-style-type: none"> ● <i>If the system does not respond to a touch of a switch, move your finger away from the screen and then touch it again.</i> ● <i>You cannot operate dimmed switches.</i> ● <i>Wipe off fingerprints on the surface of the display using a glass cleaning cloth. Do not use chemical cleaners to clean the touch screen.</i> ● <i>The displayed image may become darker and moving images may be slightly distorted when the display is cold.</i> ● <i>Under extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the touch-screen buttons may be harder than usual to depress.</i> ● <i>When you look at the screen through polarised material such as polarised sunglasses, the screen may be dark and hard to see. If so, change the angle of the screen, look at the screen from different angles, adjust the screen settings on the "Display" screen, or take off your sunglasses.</i>

Inputting letters and numbers

When searching for an address or a name, or entering a memo, you can input letters and numbers via the touch screen.

- **To input letters**

To display the alphabet keys, touch the "A-Z" switch or the "À-Y" switch.



Enter letters by touching the alphabet keys directly.

 : Touching this switch erases one letter. Holding this switch will continue to erase letters.

BASIC FUNCTIONS

- **To input numerals and symbols**

To display the number keys and symbol keys, touch the “0-9” switch.



Enter numerals and symbols by touching the number keys and symbol keys directly.

: Touching this switch erases one letter. Holding this switch will continue to erase letters.

: Touching this switch displays other symbols.

- **To display the list**



To search for an address or a name, touch the “List” switch. Matching items from the database are listed even if the entered address or name is incomplete.

If the number of matches is four or less, the list is displayed without touching the “List” switch.



INFORMATION

*The number of matching items is shown to the right side of the screen. If the number of matching items is more than 9,999, the system displays “****” on the screen.*

● **List screen operation**

When a list is displayed, you can scroll or page through the list by using the appropriate switch.



 To shift to the next or previous page.

 To scroll up or down one item at a time.

 This expresses a displayed screen position.

 If  appears to the right of the item name, the complete name is too long for the display. Touch  to scroll to the end of the name.

Touch  to scroll to the beginning of the name.

Current position display

When starting the navigation system, the current position is displayed first.

This screen displays the current vehicle position and a map of the surrounding local area.



The current vehicle position mark appears in the center or bottom center of the map screen. You can return to this map screen showing your current position at any time from any screen by touching the “**MAP/VOICE**” button.

During driving, the current vehicle position mark is fixed in the screen and the map moves.

The current position is automatically set as your vehicle receives signals from the GPS (Global Positioning System). If your current position is not correct, it is automatically corrected after your vehicle receives signals from the GPS.

INFORMATION

- ***After the battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.***
- ***To correct the current position manually, see page 119.***

Screen scroll operation (one-touch scroll)

Touch any point on the map and that point moves to the center of the screen and is shown by the cursor mark.



If you wish to look at a point on the map which is different to your current vehicle position, you can bring the desired point to the center of the screen by using the scroll feature.

If you continue to hold your finger on the screen, the map will continue scrolling in that direction until you lift your finger.


After you scroll the screen, the map remains centered at the selected location until you activate another function. The current vehicle position mark will continue to move along your actual route and may move off the screen. When you touch the **"MAP/VOICE"** button, the current vehicle position mark returns to the center of the screen and the map moves as you proceed along the designated route.

INFORMATION

*When you use the one-touch scroll feature, the current vehicle position mark may disappear from the screen. Move the map with a one-touch scroll again or push the **"MAP/VOICE"** button to return to the current vehicle position map location display.*

- To set the cursor position as a destination

You can set a specific point on the map as a destination using the one-touch scroll function.

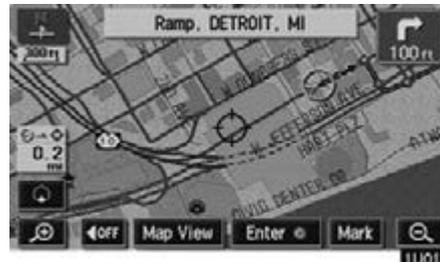

Touch the **"Enter"** switch.

The screen changes and displays the map location of the selected destination and the route preference. (See **"Entering destination"** on page 71.)

If there is already a preset destination, touch the **"Add to"** switch or the **"Replace"** switch.

When there is already a preset destination, using the **"Add to"** switch to set an additional destination, will set the new one as the first point of arrival.

- **To register the cursor position as a memory point**

Memory point registration enables easy access to a specific point.



Touch the “Mark” switch.


When you touch the “**Mark**” switch, the following screen appears for a few seconds, and then the map screen returns.



The registered point is shown by  on the map.

To change the icon or name, etc., see page 108.

You can register up to 106 memory points. If you attempt to register more than 106, a message appears for confirmation.

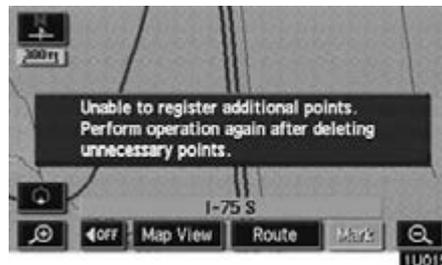

BASIC FUNCTIONS

- To see information about the icon where the cursor is set



To display information about an icon, set the cursor on it.

POI INFORMATION

When the cursor is set on a POI icon, the name and “Info.” switch are displayed on the top of the screen.



Touch the “Info.” switch.



Information such as the name, address, and phone number are displayed.

If you touch the “Enter” switch, the position of cursor is set as a destination.

If there is already a preset destination, the “Add to” switch and the “Replace” switch are displayed.

When there is already a preset destination, using the “Add to” switch to set an additional destination, will set the new one as the first point of arrival.

To register this POI as a memory point, touch the “Mark” switch. (For details, see page 106.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (For details, see page 85.)

MEMORY POINT INFORMATION

When the cursor is set on a memory point icon, the name and “Info.” switch are displayed on the top of screen.



Touch the “Info.” switch.



Information such as the name, location, and phone number are displayed.

If you touch the “Enter” switch, the position of cursor is set as a destination.

If there is already a set destination, the “Add to” switch and the “Replace” switch are displayed.

When there is already a preset destination, using the “Add to” switch to set an additional destination, will set the new one as the first point of arrival.

To edit a memory point, touch the “Edit” switch. (For details, see page 108.)

Map scale



Touch the [Zoom In] or [Zoom Out] switch to change the scale of the map display. The scale bar and indicator at the bottom of the screen indicates the map scale menu. The scale ranges 150 feet (50 m) to 250 miles (400 km).

Touch the [Zoom In] or [Zoom Out] switch until the scale bar changes normally. If you continue to touch on the switch, the scale bar changes smoothly.

You can change the scale of the map display by touching the scale bar directly. It is not available during driving.

The map scale is displayed under the north-up symbol or heading-up symbol at the top left of the screen.

INFORMATION

When the map scale is at the maximum range of 250 miles (400 km), [Zoom Out] is not shown. When the map scale is at the minimum range of 150 feet (50 m), [Zoom In] is not shown. However, in the area where the foot print map is contained, when the map scale is changed to 150 feet (50 m), the [Zoom In] switch changes to the [Zoom In] switch.

BASIC FUNCTIONS


Orientation of the map

You can change the orientation of the map from North-up to Heading-up by touching the orientation symbol at the top left of the screen.

Touch  or .



North-up screen

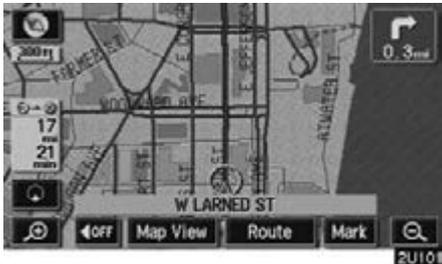

Heading-up screen



North-up symbol

Regardless of the direction of vehicle travel, North is always up.



Heading-up symbol

The direction of vehicle travel is always up. A red arrow indicates North.

Limitations of the navigation system

This navigation system calculates the current vehicle position using satellite signals, various vehicle signals, map data, etc. However, the accurate position may not be shown depending on the satellite condition, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current vehicle position, normally using 4 or more satellites, and in some cases 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 feet (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When your vehicle is receiving signals from the satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map display. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

(a) Accurate current vehicle position may not be shown in the following cases:

- When driving on a small angled Y-shaped road.
- When driving on a winding road.
- When driving on a slippery road such as in sand, gravel, snow, etc.
- When driving on a long straight road.
- When freeway and surface streets run in parallel.
- After moving by ferry or vehicle carrier.
- When a long route is searched during high speed driving.
- When driving without setting the current position calibration correctly.
- After repeating a change of direction by going forward and backward, or turning on a turntable in the parking lot.
- When leaving a covered parking lot or parking garage.
- When a roof carrier is installed.
- When driving with tire chains installed.
- When the tires are worn.
- After replacing a tire or tires.
- When using tires that are smaller or larger than the factory specifications.
- When the tire pressure in any of the four tires is not correct.

INFORMATION

If your vehicle cannot receive GPS signals, you can correct the current position manually. For information on setting the current position calibration, see page 119.

(b) Inappropriate route guidance may occur in the following cases:

- When turning at an intersection off the designated route guidance.
- If you set more than one destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
- When turning at an intersection for which there is no route guidance.
- When passing through an intersection for which there is no route guidance.
- During auto reroute, the route guidance may not be available for the next turn to the right or left.
- It may take a long time to operate auto reroute during high speed driving. In auto reroute, a detour route may be shown.
- After auto reroute, the route may not be changed.
- An unnecessary U-turn may be shown or announced.
- A location may have multiple names and the system will announce one or more.
- Some routes may not be searched.
- If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
- Your destination point might be shown on the opposite side of the street.
- When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reason.
- The road and map data stored in your navigation system may not be complete or may not be the latest version.

Map database information and updates

After replacing the tire, implement the operation described in the “● Tire change calibration”. (For details, see page 121.)

This navigation system uses the tire turning data and is designed to work with factory-specified tires for your vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the vehicle's position. The tire pressure also affects the diameter of the tires so please make sure the tire pressure of all four tires is correct.

This system uses the maps of DENSO.

© 2007 DENSO CORPORATION

© 2006 NAVTEQ. All rights reserved.

© 2006 Tele Atlas North America, Inc. All rights reserved. This material is proprietary and the subject of copyright protection and other intellectual property rights owned by or licensed to Tele Atlas North America, Inc. The use of this material is subject to the terms of a license agreement. You will be held liable for any unauthorized copying or disclosure of this material.

Data by infoUSA Copyright © 2006, All Rights Reserved.

© 2006 VISA Corporation

National Research Bureau © 2006

The Bullseye Design is a registered trademark of Target Brands, Inc.

BASIC FUNCTIONS

END-USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("[CLIENT]") and its licensors (including their licensors and suppliers) on the other hand.

© 2006 NAVTEQ. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service 2006. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with the navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by [CLIENT] and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by [CLIENT], and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. [CLIENT] and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: [CLIENT] AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: [CLIENT] AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF [CLIENT] OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

BASIC FUNCTIONS

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between [CLIENT] (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End User Terms, and each copy of the Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/
SUPPLIER) NAME: NAVTEQ

CONTRACTOR (MANUFACTURER/
SUPPLIER) ADDRESS: 222 Mer-
chandise Mart Plaza, Suite 900,
Chicago, Illinois 60654

This Data is a commercial item as
defined in FAR 2.101 and is subject
to the End User Terms under which
this Data was provided.

©2006 NAVTEQ – All rights re-
served.

If the Contracting Officer, federal gov-
ernment agency, or any federal offi-
cial refuses to use the legend pro-
vided herein, the Contracting Officer,
federal government agency, or any
federal official must notify NAVTEQ
prior to seeking additional or alterna-
tive rights in the Data.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM. BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL TERMS AND CONDITIONS SET FORTH BELOW.

LICENSE GRANT

Denso Corporation ("Denso"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

OWNERSHIP

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by Tele Atlas North America, Inc. ("TANA") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE.

The DATABASE comprises confidential and proprietary information and materials of TANA. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TANA and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

BASIC FUNCTIONS

DISCLAIMER OF WARRANTY

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

LIMITATION OF LIABILITY

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

U.S. GOVERNMENT RIGHTS

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data – commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control. Contractor/manufacturer is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643.0330. The DATABASE is ©

1984-2006 by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

END USER NOTICE

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by infoUSA Inc. ("infoUSA"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. OWNERSHIP

All rights, title and interest to the infoUSA POI Data shall be retained by infoUSA.

2. LIMITATIONS ON USE

Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. TRANSFER

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. DISCLAIMER OF WARRANTY

EXCEPT AS STATED HEREIN, INFOUSA MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. LIMITATION OF LIABILITY

EITHER INFOUSA OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

There are two types of areas available for route guidance. In one type of area, primarily around metropolitan centers, detailed route guidance is available for the entire area. In the other type of area, all roads are displayed on the map but route guidance is limited. The navigation route might lack precision because the data (no right turns, one-way traffic, etc.) is not complete. It is still possible to reach the destination by following the arrow direction and distance as shown on the bottom left of the screen. The arrow points in the direction of the destination. The distance shown is as measured in a straight line from the current vehicle position to the destination area.

In order to provide you with as accurate map information as possible, we are always gathering information such as on road repairs and carrying out on-site investigations. However, the names of roads, streets, facilities, and their locations are often changed. In some places, construction on roads may be in progress. For that reason, information on some areas in this system might be different from the actual location.

BASIC FUNCTIONS



The map database is normally updated once a year. Contact your dealer for information about the availability and pricing of an update.

- To confirm the database version and disc coverage area



1. Push the "MENU" button.



2. Touch the "Map DVD" switch.



Make sure the version of the database on this screen.

To display the disc coverage area, touch the **“Covered Area”** switch. Confirm the covered area on the screen.

Contact your dealer to find out if there is a more recent update released.

BASIC FUNCTIONS

SECTION 2

DESTINATION INPUT AND ROUTE GUIDANCE


Basic functions in frequent use

- **Quick reference for the “Destination” screen** 44
- **Destination input** 46
 - Selecting the search area 47
 - Destination input by Home 49
 - Destination input by Quick access 49
 - Destination input by “Address” 50
 - Destination input by “POI* Name” 55
 - Destination input by “POI* Category” 59
 - Destination input by “Emergency” 64
 - Destination input by “Memory” 65
 - Destination input by “Previous” 65
 - Destination input by “Map” 66
 - Destination input by “Intersection” 66
 - Destination input by “Freeway Ent./Exit” 68
 - Destination input by “Coordinates” 69
 - Destination input by “Phone #” 70
- **Starting route guidance** 71
 - Entering destination 71
 - Route guidance screen 73
 - Typical voice guidance prompts 74
- **Setting and deleting destination** 76
- **Setting and deleting route** 78
- **Show POI* icons** 85
- **Route overview** 88
- **Route preview** 89
- **Screen configuration** 90
- **Distance and time to destination** 96
- **Foot print map** 97

*: Point of Interest

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “**DESTINATION**” button.

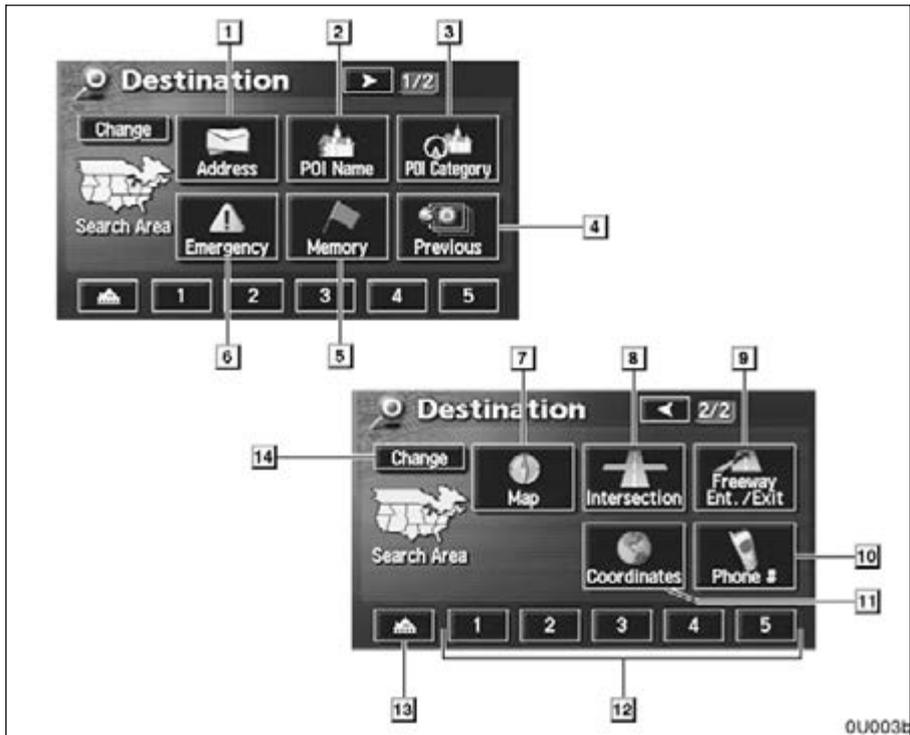

To search for a destination, the switches below perform the following operations.

1 “Address” switch

You can input the house number and the street address by using the input keys. 50

2 “POI Name” switch

You can select one of the many POIs (Points of Interest) that have already been stored in the system’s database. 55

3 “POI Category” switch

You can select a destination from the POI category. 59

4 “Previous” switch

You can select a destination from any of the last 99 previously set destinations and from the previous starting point. 65

5 “Memory” switch

You can select the location from those registered as “Memory points”. (To register memory points, see page 107.) 65

6 “Emergency” switch

You can select one of the three categories of emergency service points that have been already stored in the system’s database. 64

7 “Map” switch

You can select a destination simply by touching the location on the displayed map. 66

8 “Intersection” switch

You can enter the names of two intersecting streets. This is helpful if you do not know the specific street address of your destination but know the general vicinity. 66

9 “Freeway Ent./Exit” switch

You can enter the name of a freeway (interstate) entrance or exit. 68

10 “Phone #” switch

You can enter a destination by the telephone number. 70

11 “Coordinates” switch

You can set a destination using latitude and longitude as coordinates. 69

12 Quick access switch

You can select one of 5 preset destinations directly. To use this function, it is necessary to set the “Attribute” for each memory point. (To register a “Quick Access”, see page 110.) 49

13 Home switch

You can select your own home without entering the address each time. To use this function, it is necessary to set the “Attribute” for the memory point. (To register “Home”, see page 110.) 49

14 “Change” switch

To change the search area, touch this switch. 47

Destination input —



Push the “DESTINATION” button and the “Destination” screen appears.



You can use one of 13 different methods to enter your destination. (See pages 49 through 70.)

INFORMATION

- When inputting the destination, the response to the switch may be slow.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 mile (800 m), the map scale changes to 0.5 mile (800 m) automatically. Set the destination again.
- To select an “Address”, “POI Name”, “Freeway Ent./Exit”, “Intersection” or “Phone #” in a different area, it is necessary to change the search area.
- If you enter a destination, the road nearest to the point you selected is set as the destination.

CAUTION

While you are driving, be sure to obey traffic regulations and keep the road conditions in mind. If a traffic sign on the road has been changed, the route guidance may provide incorrect information.

— **Selecting the search area**

The “Destination” screen allows you to select the area to search for your destination.

1. Push the “**DESTINATION**” button.
2. Touch the “**Change**” switch on the “Destination” screen to display a map of the United States and Canada divided into 11 areas. See page 31 for map database information and updates.



3. Touch one of the “**US1**” through “**CAN**” switches to select a search area.
4. Touch the “**OK**” switch and the “Destination” screen returns.

U.S.A.	
Switch	States included in the search area
“US1”	Idaho Oregon Washington
“US2”	California Nevada
“US3”	Arizona Colorado Montana New Mexico Utah Wyoming
“US4”	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
“US5”	Oklahoma Texas
“US6”	Illinois Indiana Kentucky Michigan Ohio Wisconsin

DESTINATION INPUT AND ROUTE GUIDANCE

"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont
"US9"	Washington, DC Delaware Maryland New Jersey Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina

Canada	
Switch	Provinces and regions included in the search area
"CAN"	All provinces and regions in Canada included in this switch.

— Destination input by Home

1. Push the “DESTINATION” button.



2. Touch the home switch on the “Destination” screen.

The screen changes and displays the map location of your home and the route preference. (See “ — Entering destination” on page 71.)

To use this function, it is necessary to set the “Attribute” for the memory point. (To register the “Home”, see page 110.)

INFORMATION

Guidance starts from your current position to your home if you touch the “Enter” switch even while driving.

— Destination input by Quick access

1. Push the “DESTINATION” button.



2. Touch any of the quick access switches on the “Destination” screen.

The screen changes and displays the map location of the quick access point and the route preference. (See “ — Entering destination” on page 71.)

To use this function, it is necessary to set the “Attribute” for each memory point. (To register the “Quick Access”, see page 110.)

INFORMATION

Guidance starts from your current position to the quick access point if you touch the “Enter” switch even while driving.

— Destination input by “Address”

There are 2 ways to input a destination by address.

1. Push the “DESTINATION” button.
2. Touch the “Address” switch on the “Destination” screen.



(a) Inputting a house number and a street name



Touch numerals directly on the screen to input a house number.

After inputting a house number, touch the “OK” switch to display the screen for inputting a street name.

It is possible to input a street name first. Touch the “Street” switch to display the screen for inputting a street name.

DESTINATION INPUT AND ROUTE GUIDANCE



Input the street name.



When you find your desired street name, touch the corresponding switch. The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

If the same address exists in more than one city, the current screen changes to the city list screen.

DESTINATION INPUT AND ROUTE GUIDANCE



Select or enter your desired city.

“Input Name”: To narrow down the listed items by inputting the city name.



If you input a street name first, the screen changes. You can then input the house number.



If the above screen appears, you can select an address range on the screen.

(b) Selecting a city to search

Touch the “City” switch.



To search by city, the following three methods are possible.

1. Selecting from the last 5 cities
2. Selecting from the nearest 5 cities
3. Inputting the city name

INFORMATION

To cancel the city setting, touch the “Any City” switch.

SELECTING FROM THE LAST 5 CITIES



Touch the switch of the desired city name.

If you have not used the navigation yet, no cities will be displayed on the screen.

The current screen changes to the screen for inputting a house number or a street name. (See page 50.)

DESTINATION INPUT AND ROUTE GUIDANCE

SELECTING FROM THE NEAREST 5 CITIES

Touch the “Nearest 5 Cities” switch.



Touch the switch of the desired city name from the displayed list.

The current screen changes to the screen for inputting a house number or a street name. (See page 50.)

INPUTTING THE CITY NAME

Touch the “Input City Name” switch.



Input a city name.

— Destination input by “POI Name”

1. Push the “DESTINATION” button.
2. Touch the “POI Name” switch on the “Destination” screen.



Touch the switch of the desired city name from the displayed list.

“Map”: To display the selected destination and the route preference. (See “ — Entering destination” on page 71.)

The current screen changes to the screen for inputting a house number or a street name. (See page 50.)



3. Input the name of Point of Interest.

DESTINATION INPUT AND ROUTE GUIDANCE



4. Touch the switch of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

If you input the name of a specific Point of Interest and there are more than two sites with the same name, the list screen appears.



5. Touch the switch of the desired destination.

“Dist. Sort”: In the order of distance from your current position. The distance from your current position up to the destination is displayed on the right of the name.

“Name Sort”: In alphabetical order by name.

If the same name exists in more than one city, you can search for it more easily with the “City” and “Category” switches. (See “(a) Selecting a city to search” and “(b) Selecting from the categories”.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (For details, see page 85.)

(a) Selecting a city to search

Touch the “City” switch.



To search by city, the following three methods are possible.

1. Selecting from the last 5 cities
2. Selecting from the nearest 5 cities
3. Inputting the city name

INFORMATION

To cancel the city setting, touch the “Any City” switch.

SELECTING FROM THE LAST 5 CITIES



Touch the switch of the desired city name.

If you have not used the navigation yet, no cities will be displayed on the screen.

DESTINATION INPUT AND ROUTE GUIDANCE

SELECTING FROM THE NEAREST 5 CITIES

Touch the “Nearest 5 Cities” switch.



Touch the switch of the desired city name.

INPUTTING THE CITY NAME

Touch the “Input City Name” switch.



Input the city name.



Touch the switch of the desired city name from the displayed list.

(b) Selecting from the categories

Touch the “Category” switch.



If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch the “List All Categories” switch to list all POI categories.



When you touch the desired category, the POI name list screen appears.

— Destination input by “POI Category”

The destination can be set by selecting the POI category and the search point.

1. Push the “DESTINATION” button.
2. Touch the “POI Category” switch on the “Destination” screen.



(a) Selecting the POI category

If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch the “List All Categories” switch to list all POI categories.



Touch the desired POI category from the list.

The selected category icon appears on the top left of the screen.

If you wish to delete the selected category, touch the “Delete” switch.

If you wish to select another category, touch the “OK” switch to return the previous screen.

If you wish to select a destination from the category displayed by the icon, touch the “List” switch.

(b) Setting a search point

It is possible to display the names of POIs located within approximately 20 miles (32 km) from the selected search point.

Touch the “Search Point” switch.



To set search points, the following four methods are possible.

1. Inputting city center
2. Setting the current position as the search point
3. Setting the search point via the map screen
4. Setting the search point from the destinations

INPUTTING CITY CENTER

Touch the “Input City Center” switch.



Input the city center name.



Touch the switch of the desired city center name.



When you touch an arrow facing the desired point, the map scrolls in that direction. When you release your finger, scrolling stops.

To set the position of the cursor, touch the “Enter” switch.

DESTINATION INPUT AND ROUTE GUIDANCE

SETTING THE CURRENT POSITION AS THE SEARCH POINT

Touch the **“Current Position”** switch.




When you touch an arrow facing the desired point, the map scrolls in that direction. When you release your finger, scrolling stops.

To set the position of the cursor, touch the **“Enter”** switch.

SETTING THE SEARCH POINT VIA THE MAP SCREEN

Touch the **“Map”** switch.

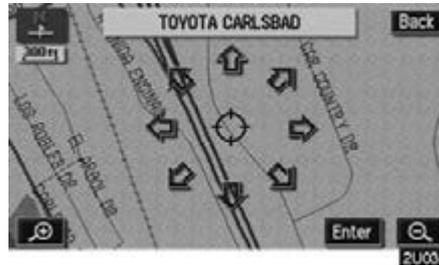

When you touch an arrow facing the desired point, the map scrolls in that direction. When you release your finger, scrolling stops.

To set the position of the cursor, touch the **“Enter”** switch.

SETTING THE SEARCH POINT FROM THE DESTINATIONS

Touch the destination switches at the bottom of the screen.



When you touch an arrow facing the desired point, the map scrolls in that direction. When you release your finger, scrolling stops.

To set the position of the cursor, touch the “**Enter**” switch.

(c) Selecting from a list

You can select the desired destination from the listed POI names.



When you touch the switch of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

“**Dist.**”: To sort in the order of distance from your current location.

“**Icon**”: To sort in the order of the POI icons.

“**Name**”: To sort in alphabetical order by name.

“**On Route**”: When the indicator is illuminated by touching this switch, the list of the items searched along the route is displayed.

— Destination input by “Emergency”

1. Push the “DESTINATION” button.
2. Touch the “Emergency” switch on the “Destination” screen.

The display changes to a screen to select dealers, hospitals or police stations. During driving, only nearby police stations, hospitals or dealers are shown. The current position is shown with an address, the latitude and the longitude at the top of the screen.



3. When you touch the desired emergency category, the selected emergency category list is displayed.



4. Touch the switch of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

“Dist. Sort”: To sort in the order of distance from your current position. The distance from your current position up to the destination is displayed on the right of the name.

“Name Sort”: To sort in alphabetical order by name.


INFORMATION

The navigation system does not guide in areas where route guidance is unavailable. (See page 30.)

— Destination input by “Memory”

1. Push the “DESTINATION” button.
2. Touch the “Memory” switch on the “Destination” screen.

The screen changes your list of registered memory points. See page 106 for registering and editing memory points.

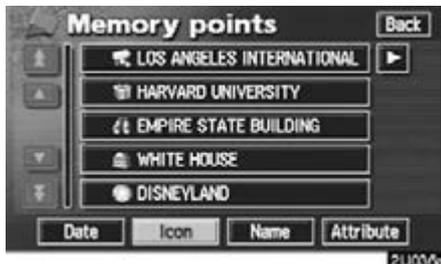

3. Touch the switch of the desired memory point.

The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

There are 4 ways to list the memory point by touching switches on the bottom of the screen.

“Date”: To list the memory points in order of registered date.

“Icon”: To list the memory points by the registered icon.

“Name”: To list the memory points in alphabetical order.

“Attribute”: To list the memory points by the registered attribute.

— Destination input by “Previous”

1. Push the “DESTINATION” button.
2. Touch the “Previous” switch on the “Destination” screen.



The previous starting point and up to 99 previously set destinations are displayed on the screen.

3. Touch the switch of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

“Date”: To list the previous destinations in order of registered date.


“Name”: To list the previous destinations in alphabetical order.

INFORMATION

You can delete the list of previous destinations while your vehicle is stopped, if you no longer need them. (See page 134.)

— Destination input by “Map”

1. Push the “DESTINATION” button.
2. Touch the “Map” switch on the “Destination” screen.

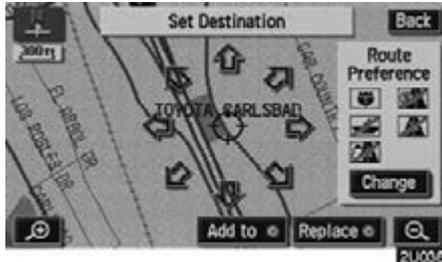

The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “ — Entering destination” on page 71.)

— Destination input by “Intersection”

1. Push the “DESTINATION” button.
2. Touch the “Intersection” switch on the “Destination” screen.



3. Input the name of the two intersecting streets which are located near the destination to be set.


INFORMATION

Guidance starts if you touch the “Enter” switch even while driving. However, the cursor cannot be moved.



4. Touch the switch of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

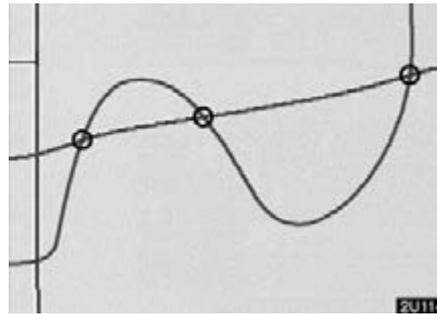


If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

— Destination input by “Freeway Ent./Exit”

1. Push the “DESTINATION” button.
2. Touch the “Freeway Ent./Exit” switch on the “Destination” screen.



Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).

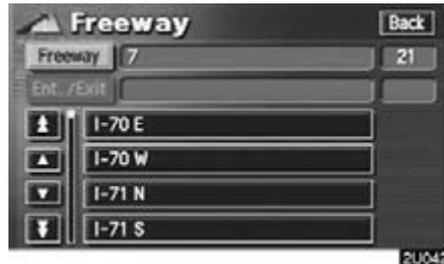

3. Select the desired freeway by touching the switch.



4. You can then select either a freeway “Entrance” or “Exit”.

— Destination input by “Coordinates”



5. Touch the switch of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

“**Dist. Sort**”: In the order of distance from your current position. The distance from your current position up to the destination is displayed on the right of the name.

“**Name Sort**”: In alphabetical order by name.

“**Input Name**”: An applicable list is displayed by touching this switch and inputting name.

1. Push the “DESTINATION” button.

2. Touch the “Coordinates” switch on the “Destination” screen.



3. Input the latitude and the longitude.

4. When the input is finished, touch the “OK” switch.

5. Touch the switch of the desired point.

The screen changes and displays the map location of the selected destination and the route preference. (See “ — Entering destination” on page 71.)

— Destination input by “Phone #”

1. Push the “DESTINATION” button.
2. Touch the “Phone #” switch on the “Destination” screen.



3. Input a telephone number.
4. After inputting a telephone number, touch the “OK” switch.

The screen changes and displays the map location of the selected destination and the road preference. (See “— Entering destination” on page 71.)

If there is more than one site having the same number, the following screen appears.




INFORMATION

- *If there is no match for the telephone number inputted, a list of identical numbers but with different area codes will be displayed.*
- *To set a memory point as a destination using the phone number, the number must be registered previously. (See page 112.)*

Starting route guidance — — Entering destination

After you input the destination, the screen changes and displays the map location of the selected destination and the route preference.

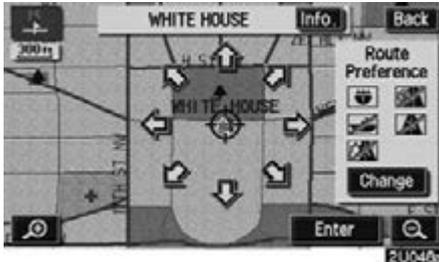

SCREEN A

1. When you touch an arrow facing the desired point, the map scrolls in that direction. When you release your finger, scrolling stops.

2. To set the destination and display SCREEN B, touch the “Enter” switch.

When the destination is already set, the “Add to ” switch and the “Replace ” switch are displayed.

“Add to ”: To add a destination.

“Replace ”: To delete the existing destinations and set a new one.

“Change”: To change the route preference. (See page 72.)

“Info.”: If this switch is displayed on the top of the screen, touch the switch to see name, address, and phone number, etc.



SCREEN B

3. To start guidance, touch the “Guide” switch.

“3 Routes”: To select the desired route from three possible routes. (See page 72.)

“Route”: To change the route. (See pages 76 and 78.)

INFORMATION

- *Guidance can be suspended or resumed. (See page 101.)*
- *If you keep touching the “Guide” switch until a beep sounds, Demo mode will start.*

DESTINATION INPUT AND ROUTE GUIDANCE

- To change the route before starting guidance

ROUTE PREFERENCE

You can change route preference by touching the “**Change**” switch on SCREEN A.



You can turn the indicator on or off by touching the switch.

When searching for a route, the system avoids routes where the indicator is dimmed as much as possible.

After choosing conditions, touch the “**OK**” switch.

INFORMATION

- Even if the “**Allow Freeway**” indicator is dimmed, the route cannot avoid including a freeway in some cases.
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

3 ROUTES SELECTION

To select the desired route from three routes, touch the “**3 Routes**” switch on SCREEN B.



Touch the “**Quick1**”, “**Quick2**” or “**Short**” switch to select the desired route.

“**Quick1**”: Recommended route.

This route is indicated by an orange line.

“**Quick2**”: Other route.

This route is indicated by a purple line.

“**Short**”: A route by which you can reach the destination in the shortest distance.

This route is indicated by a green line.

“**Info.**”: To display the following information about each of the 3 routes.

— Route guidance screen

When starting route guidance, the following screen is displayed.



- 1 Time necessary for entire trip
- 2 Distance of entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry



This screen displays the route that guides the driver to the destination.



The route to the destination is indicated by a highlighted line. Drive along the guided route.

When the vehicle approaches a guidance point such as an intersection or a freeway, the screen automatically divides in two to display the guidance screen. (For details, see page 90.)

The current street name will be displayed at the bottom of the screen.

In some areas, the roads have not been completely digitized in our database yet. For this reason, the route guidance may guide the road that is not allowed to pass.

— Typical voice guidance prompts

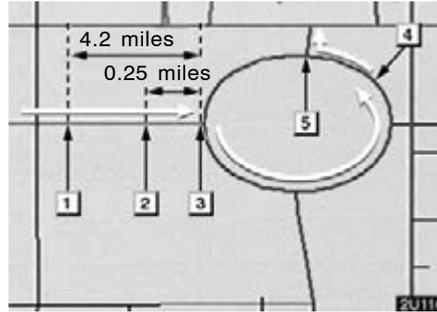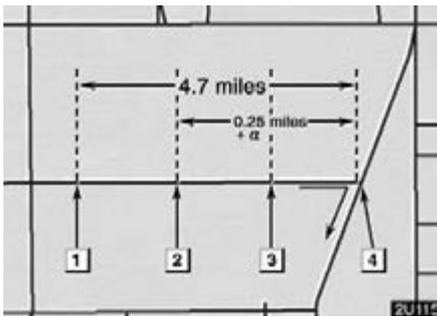



The voice guidance provides various messages as you approach an intersection, or other point where you need to maneuver the vehicle.

- | | |
|---|--|
| <p>1  "Proceed about 5 miles."</p> <p>2  "In a quarter of a mile, right turn."</p> <p>3  "Right turn."</p> <p>4  (Beep sound only)</p> | <p>1  "Proceed about 4 miles to the traffic circle."</p> <p>2  "In a quarter of a mile, traffic circle ahead, and then 3rd exit ahead."</p> <p>3  "The 3rd exit ahead."</p> <p>4  "The exit ahead."</p> <p>5  (Beep sound only)</p> |
|---|--|

INFORMATION

On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver.

DESTINATION INPUT AND ROUTE GUIDANCE

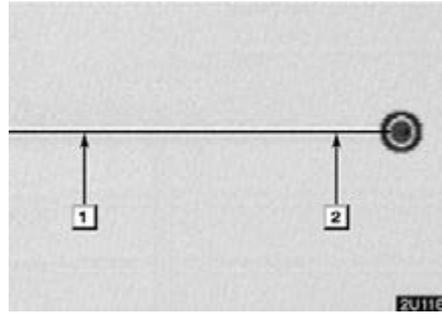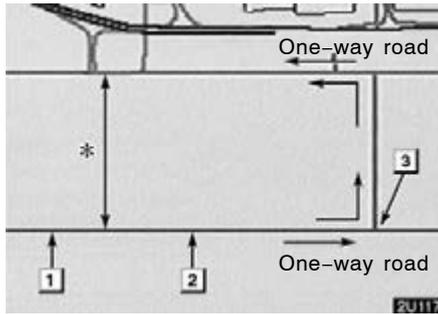

*: The system indicates a U-turn if the distance between two one-way roads (of opposite directions) is less than 50 feet (15 m) in residential areas or 164 feet (50 m) in non-residential areas.

- 1  "In half of a mile, make a legal U-turn."
- 2  "Make a legal U-turn ahead."
- 3  (Beep sound only)

The system announces your approach to the final destination.

- 1  "Your destination is ahead."
- 2  "You have arrived at your destination. The route guidance is now finished."


INFORMATION

- *If the system cannot determine the current vehicle position correctly (in cases of poor GPS signal reception), the voice guidance may be made early or delayed.*
- *If you did not hear the voice guidance command, touch the "MAP/VOICE" button to hear it again.*
- *To adjust the voice guidance volume, see page 102.*

Setting and deleting destination

(a) Adding destinations

You can add destinations and search again for the routes.

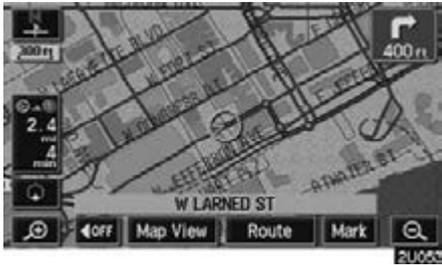

1. Touch the “Route” switch.



2. Touch the “Add” switch of “Destination”.

3. Input an additional destination in the same way as the destination input. (See page 46.)



4. Touch the desired “Add” switch to determine the arrival order of the additional destination.

(b) Reordering destinations

When more than one destination is set, you can change the arrival order of the destinations.

1. Touch the “Route” switch.



2. Touch the “Reorder” switch of “Destination”.



3. Select the destination in the order of arrival by touching the switch of destinations.

Reordered number of arrival is displayed on the right side of the screen.

When you finish selecting the destinations, touch the “OK” switch. The system searches for the guidance route again, and displays the entire route. Even if you do not touch the “OK” switch, the entire route is displayed automatically within a few seconds when order is fixed.

(c) Deleting destinations

You can delete a set destination.

1. Touch the “Route” switch.



2. Touch the “Delete” switch of “Destination”.



3. When more than one destination is set, a list will appear on the screen. Touch the destination on the screen you wish to delete.

“Delete All”: To delete all destinations on the list.

4. A message appears to confirm your request to delete. To delete the destination(s), touch the “Yes” switch.

If you touch the “Yes” switch, the data cannot be recovered.


If you touch the “No” switch, the previous screen will return.

5. If more than one destination is set, touch the “OK” switch after deleting the destinations. The system searches for the guidance route again, and displays the entire route.

Setting and deleting route

(a) Adding preferred road

You can add points you wish to pass through.

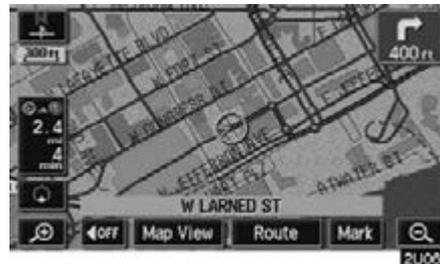


1. Touch the “Route” switch.



2. Touch the “Add” switch of “Preferred road”.

DESTINATION INPUT AND ROUTE GUIDANCE

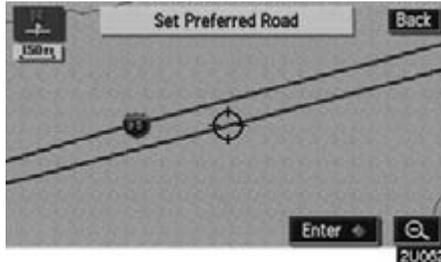

3. Select the preferred road which you wish to modify and touch the “Enter ♦” switch.

4. A message appears to confirm your request. To add the preferred road, touch the “OK” switch.

Touch the “Next” switch to use another road.



5. If more than one destination is set, the “Add Preferred Road” screen appears. Touch the “Add” switch where you wish to add a preferred road.

(b) Deleting preferred road

You can delete a set preferred road.

1. Touch the “Route” switch.



2. Touch the “Delete” switch of “Preferred road”.



3. When more than one preferred road is set, a list will appear on the screen. Touch the switch of the preferred road to be deleted.

“Delete All”: To delete all the listed preferred road.

4. A message appears to confirm your request to delete. To delete the preferred road, touch the “Yes” switch.

If you touch the “Yes” switch, the data cannot be recovered.

If you want to try again or cancel deletion, touch the “No” switch. The previous screen will return.

5. If more than one preferred road is set, touch the “OK” switch after deleting the preferred road. The system searches for the guidance route again, and displays entire route.

(c) Search condition

You can designate the route conditions of the route to the destination.


1. Touch the “Route” switch.



2. Touch the “Search Condition” switch. The “Search Condition” screen appears.



3. Touch the “Quick”, “Quick1”, “Quick2” or “Short” switch and touch the “OK” switch.

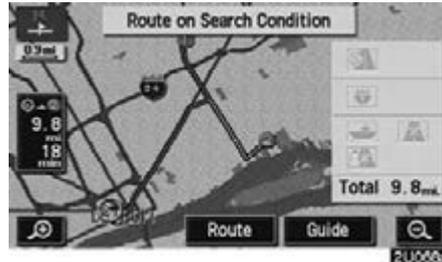

The entire route from the starting point to the destination is displayed.

“Guide”: To start guidance.

“Route”: To add or change a route. (For details, see pages 76 and 78.)

(d) Detour setting

While the route guidance is operating, you can change the route to detour around a section of the route where a delay is caused by road repairs, an accident, etc.

1. Touch the “Route” switch.




2. Touch the “Detour” switch.



3. Select the switch below to select the desired detour distance.

“1 Mile (km)”, “3 Miles (km)” or “5 Miles (km)”: Touch one of these switches to start the detour process. After detouring, the system returns to the original guidance route.

“Whole Route”: If you touch this switch, the system will calculate an entire new route to the destination.

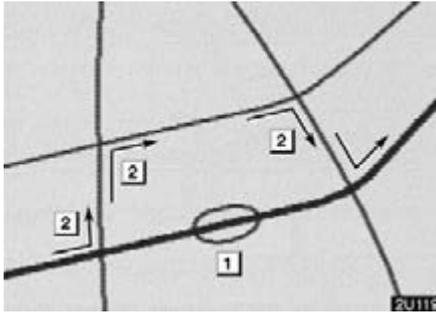

This picture shows an example of how the system would guide you around a delay caused by a traffic jam.

- 1 This position indicates the location of a traffic jam caused by road repairs or an accident.
- 2 This route indicates the detour suggested by the system.

INFORMATION
<ul style="list-style-type: none"> • <i>When your vehicle is on a freeway, the detour distance selections are 5, 15, and 25 miles (km).</i> • <i>The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.</i>

(e) Route preference

You are given a number of choices on the conditions which the system uses to determine the route to your destination.

1. Touch the “Route” switch.



2. Touch the “Route Preference” switch to change the conditions which are to determine the route to your destination.



3. You can turn the indicator on or off by touching the switch.

When searching for a route, the system avoids routes where the indicator is dimmed as much as possible.

After choosing the conditions, touch the "OK" switch.

(f) Starting route from adjacent road

You can start the route guidance from the adjacent road.

(ex. When the route guidance guides the route on the freeway, but you drive on the parallel way along a freeway.)

1. Touch the "Route" switch.




2. Touch the "Start from Adjacent Road" switch.

When there is no adjacent road, this switch will not appear.

Show POI icons

Points of Interest such as gas stations and restaurants can be displayed on the map screen. You can also set their location as a destination and use them for route guidance.

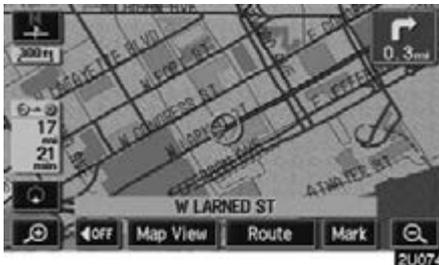

1. Touch the “Map View” switch.



2. Touch the “Show POI Icon” switch to display a particular type of Point of Interest on the screen.



DESTINATION INPUT AND ROUTE GUIDANCE

A screen with a limited choice of Points of Interest will be displayed. (To change the displayed POI, see page 133.) When you touch the desired Point of Interest category, symbols will appear on the map screen indicating where the POI addresses are located.

To turn off the symbols of the Points of Interest on the map screen, touch the “POI Off” switch.

“More”: If you cannot find your desired Point of Interest on the limited choice screen, touch this switch. The screen then displays the complete POI listing screen.

You can display up to 5 categories of icons on the screen.



When you select a Point of Interest type from either the limited list or the complete list, the screen will display symbols at those locations on the map screen.

Touching the **“Delete”** switch will delete the last selected icon.

“Local POI List”: If you want to search for the nearest Point of Interest, touch this switch. Then choose one of the categories. The system will list the points within 20 miles (32 km).



Touch the switch of your desired Point of Interest. Selected Points of Interest are displayed on the map screen.

“Dist.”: To sort in the order of distance from your current location.

“Icon”: To sort in the order of the POI icons.

“Name”: To sort in alphabetical order by name.

“On Route”: When the indicator is illuminated by touching this switch, the list of the items searched along the route is displayed.

● **To set a POI as a destination**

You can select one of the Points of Interest icons on the map screen as a destination and use it as route guidance.




Directly touch the Point of Interest icon that you wish to set as a destination.

The map will shift so that the icon is centered on the screen and overlaps with the cursor. At this time, the distance from your current position can be displayed on the screen. The distance shown is measured as a straight line from the current vehicle position to the POI.

When your desired Point of Interest overlaps with the cursor, touch the “Enter” switch. The screen changes and displays the map location of the selected destination and route preference. (See “ — Entering destination” on page 71.)

Route overview

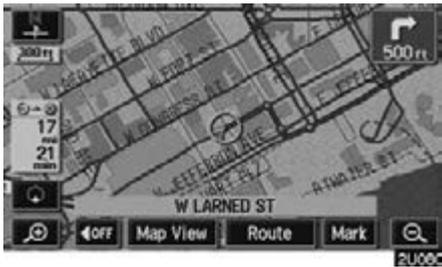

1. Touch the **“Map View”** switch.



2. Touch the **“Route Overview”** switch.




The entire route from the current position to the destination is displayed.

“Guide”: To start guidance.

“Route”: To change the route. (For details, see pages 76 and 78.)

“Turn List”: The following screen displays the list of the roads up to your destination.

Route preview

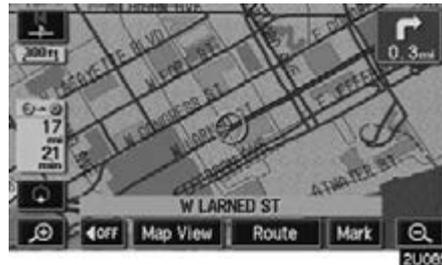

You can scroll through the list of roads by touching  or . However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through two or more cities), the name change will not appear on the list. The street name closest to the starting point will be displayed with a mileage to the next turn.

 These marks indicate the direction in which you should turn at an intersection.

Touch the **“Map”** switch of your desired point. The point which you choose is displayed on the map screen.



1. Touch the **“Map View”** switch.



2. Touch the **“Route Preview”** switch.


DESTINATION INPUT AND ROUTE GUIDANCE




-  : To indicate the next destination.
-  : To preview the route to the next destination.
-  : To preview the route to the next destination in fast-forward mode.
-  : To stop the preview.
-  : To review the route to the previous destination or starting point.
-  : To review the route to the previous destination or starting point in fast-forward mode.
-  : To indicate the previous destination or starting point.

Screen configuration

You can choose any one of the screen configurations.

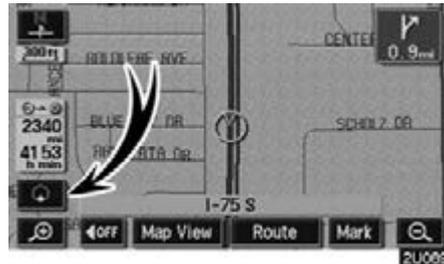

1. Touch this switch to display the following screen.

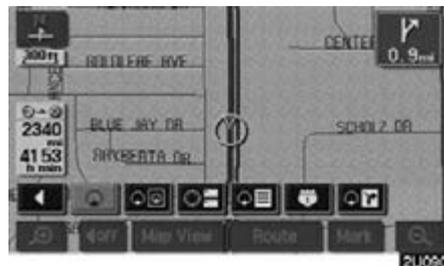


2. To select the desired screen configuration, touch one of the following switches.

Depending on the conditions, it may not be possible to select certain screen configuration switches.


-  : To display single map screen. (See page 91.)
-  : To display dual map screen. (See page 92.)
-  : To display compass mode screen. (See page 93.)
-  : To display turn list screen. (See page 93.)
-  : To display arrow screen. (See page 94.)
-  : To display freeway information screen. (See page 94.)
-  : To display intersection guidance screen or guidance screen on freeway. (See page 95.)

(a) Single map

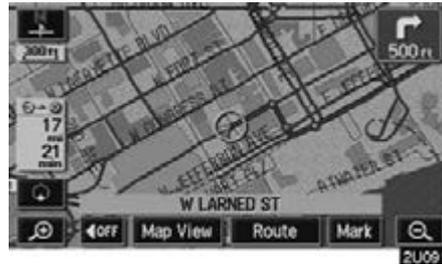

The screen shows the single map.

(b) Dual map

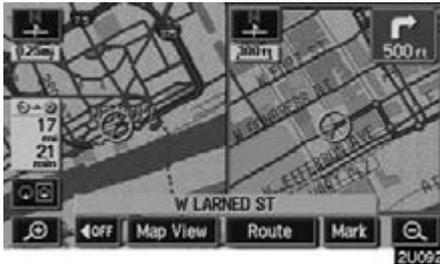

The screen shows the dual map. The map on the left is the main map. The map on the right is the edit map. You can edit the right side map by touching any specific point on the right side map.



This screen can perform the following procedures.

- Changing the map scale
- Displaying the POI icon
- Changing the orientation of the map

Touch the “**OK**” switch when you complete editing. The screen returns to the dual map screen.


(c) Compass mode



Information about the destination and current position, as well as a compass, is displayed on the screen.

The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates and the compass, to make sure that your vehicle is headed in the direction of the destination.

(d) Turn list screen

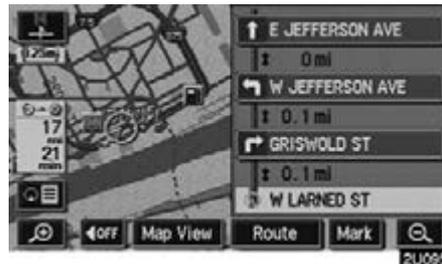

The screen shows the turn list. You cannot scroll through the list of roads.

INFORMATION

When the vehicle goes out of the disc area, the guidance screen changes into compass mode.

(e) Arrow screen



The screen shows the current road name and the distance to the next corner.

(f) Freeway information screen



This screen displays the distance to the next junction and exit, or POIs in the vicinity of the freeway exit.

“**Map**”: To display the selected map of the exit vicinity.

On the left side of the “**Map**” switch, up to five POIs around the selected exit are displayed.

▲: To scroll for farther junctions or exits.

▼: To scroll for closer junctions or exits.

▼: To scroll for the closest three junctions or exits.


INFORMATION

When you drive on a freeway, the screen is automatically divided into two parts, with freeway information screen on the right side.

(g) Intersection guidance screen/guidance screen on freeway

• **Intersection guidance screen**

This screen automatically appears when the vehicle approaches an intersection on the road.

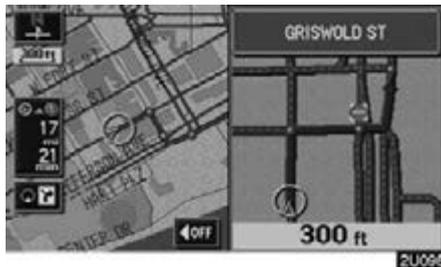

The distance to the intersection is shown at the bottom of the screen.

“◀OFF”: The intersection guidance screen disappears and the map screen appears.

When touching the  switch or pushing the “MAP/VOICE” button, the intersection guidance screen reappears.

INFORMATION

Intersection guidance can be turned on or off. (See page 128.)

• **Guidance screen on freeway**

This screen automatically appears when the vehicle approaches a junction or exit on a freeway.



The distance to the junction or exit is shown at the bottom of the screen.

“◀OFF”: The guidance screen on freeway disappears and the map screen appears.

When touching the  switch or pushing the “MAP/VOICE” button, the guidance screen on freeway reappears.

INFORMATION

Guidance screen on freeway can be turned on or off. (See page 129.)

Distance and time to destination



When the vehicle is on the guidance route, the distance and the estimated travel time to the destination are displayed. When the vehicle is not on the guidance route, the distance to and the direction of the destination are displayed.

When driving on the guidance route and more than one destination is set, the distance and the estimated travel time from current position to each destination are displayed.

1. Touch this switch to display the following screen.



2. Touch the number switch of the destination you wish to display.

The distance and the estimated travel time from the current position to the selected destination are displayed.



Displayed while driving along the guidance route.



Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

INFORMATION

When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time is calculated based on the set vehicle speed information. (For details, see page 122.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.

Foot print map

For the area which is covered by the foot print map (Some areas in the following cities; Detroit, Chicago, N.Y., L.A), you can switch to the foot print map on a scale of 75 feet (25 m).

- **To switch to the foot print map**

The  switch changes into the  switch when the map is scaled down to 150 feet (50 m).



To display the foot print map, touch the  switch.


- **To delete the foot print map display**

Touch the  switch.

INFORMATION
<ul style="list-style-type: none"> ● <i>If the map or the current position is moved to the area which is not covered by the foot print map, the screen scale automatically changes to 150 feet (50 m).</i> ● <i>On the foot print map, a one way street is displayed by .</i> ● <i>It is not possible to perform scrolling on the foot print map (one-touch scroll) while driving.</i>

- **To display building information**

Information is available only for buildings for which information is recorded on the map disc.

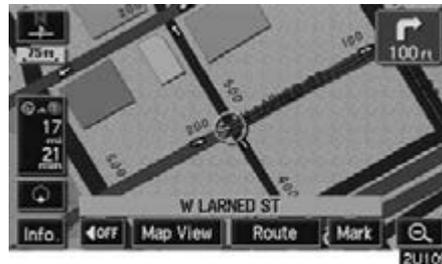

1. Touch the “Info.” switch while the foot print map is displayed.

If the map is displayed in split screen, it turned into a single map display.

DESTINATION INPUT AND ROUTE GUIDANCE



2. Using an eight-direction arrow, move the cursor to the position of the building you wish to display information.

3. Touch the “Building Info.” switch.

4. Details of POIs in some buildings may be displayed. If you wish to see detailed POI information, touch the building name. You can see the detail of the selected POIs.

SECTION 3

ADVANCED FUNCTIONS


Descriptions of functions for more effective use

- Quick reference for the “Menu” screen 100
- Suspending and resuming guidance 101
- Volume 102
- User selection 103
- My places 106
- Area to avoid 114
- Setup 118
- Current position calibration 119
- Distance unit 121
- Estimated travel time 122
- Auto reroute 123
- Adjusting time zone 124
- Auto voice guidance 125
- Voice guidance in all modes 126
- Notifying traffic restriction 127
- Intersection guidance 128
- Guidance screen on freeway 129
- Street name on scroll map 130
- Display of building shape 131
- Screen layout function ( Function) 132
- POI* category change (Show POI Icons) 133
- Delete previous point 134
- Map color 135
- Screen animation 136

*: Point of Interest

Quick reference for the “Menu” screen

The “Menu” screen allows effective use of the navigation system. To display the “Menu” screen, push the “MENU” button.

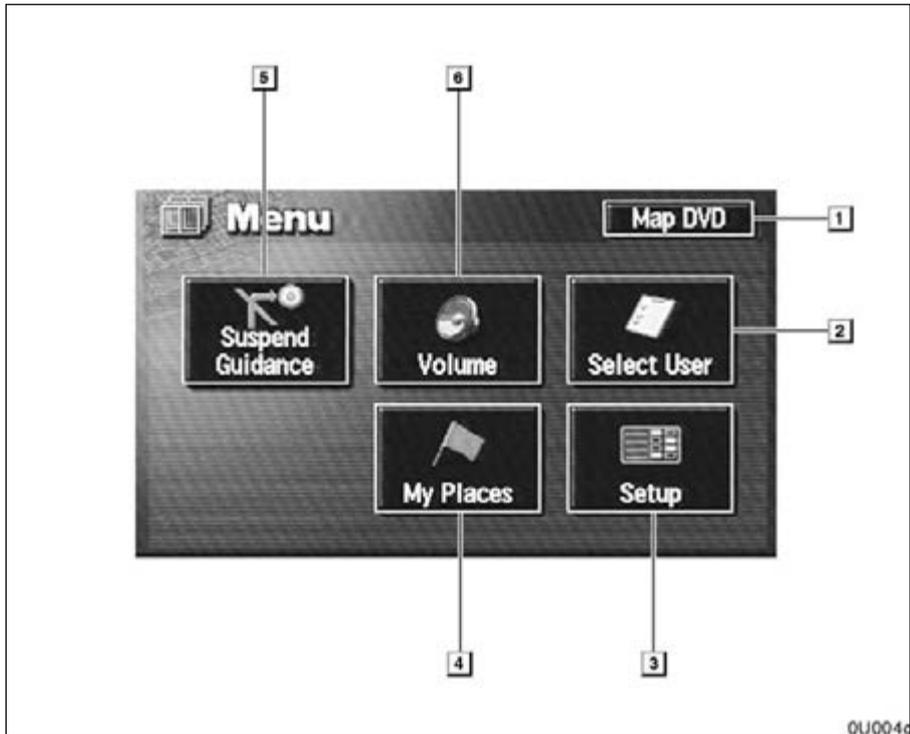

The switches below perform the following operations.

1 “Map DVD” switch

Displays information regarding the disc version or covered area. 31

2 “Select User” switch

Enables recall of up to three memorized user setting patterns. 103

3 “Setup” switch

Enables various settings for the navigation system. 118

4 “My Places” switch

Enables changes to “Memory points” and “Areas to avoid”. 106

5 “Suspend Guidance” and “Resume Guidance” switch

Suspends or resumes guidance. 101

6 “Volume” switch

Sets the volume for voice guidance. 102

Suspending and resuming guidance

- To suspend guidance
You can suspend route guidance.




1. Push the “MENU” button.



2. Touch the “Suspend Guidance” switch.

INFORMATION

When you do not have route guidance, the “Suspend Guidance” switch cannot be used.

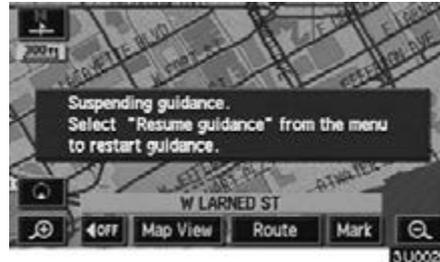

The screen will return to the current position map without route guidance.

ADVANCED FUNCTIONS

- To resume guidance

You can resume the suspended route guidance.

1. Push the “MENU” button.



2. Touch the “Resume Guidance” switch.



The screen will change to the current position map with route guidance.

Volume

You can use voice guidance when approaching a destination.

You can adjust the volume of the voice or turn off voice guidance.



1. Push the “MENU” button.



2. Touch the “Volume” switch.



To adjust the volume, select the desired level by touching the appropriate number. If you do not need voice guidance, touch the “Off” switch.

The selected item is highlighted in green.

3. Touch “OK” to confirm your selection.

INFORMATION

During route guidance, the voice guidance continues even if the navigation screen is changed to other screens.

“Adaptive Volume Control”: If you turn the “Adaptive Volume Control” on, the volume is turned up automatically when the vehicle speed exceeds 50 mph (80 km/h). To turn the “Adaptive Volume Control” system on, touch the switch. The indicator will be highlighted.

User selection

The system can memorize the following settings for up to three users.

- Map direction
- Map scale
- Guidance mode
- Setup
- Volume
- Language



1. Push the “MENU” button.



2. Touch the “Select User” switch.

ADVANCED FUNCTIONS

- To register



Touch the “**Memorize**” switch of your desired “**User number**”.



The confirmation screen will appear. To register, touch the “**Yes**” switch. To return to the previous screen, touch the “**No**” or “**Back**” switch.



When you touch the switch already registered, this screen appears. To replace, touch the “**Yes**” switch. To cancel the replacement, touch the “**No**” or “**Back**” switch.

- To change user



Push the “MENU” button to display the “Menu” screen. Then touch the “Select User” switch.



Touch the “User number” switch you wish to change.



The above message appears, then the map screen will be displayed.

- To delete user



Touch the “Delete” switch of “User number” you wish to delete.



The confirmation screen appears. To delete, touch the “Yes” switch. To return to the previous screen, touch the “No” or “Back” switch.

My places

You can register and keep your own memory points (like restaurants, sports facilities, etc.) and use the memory points to input a destination.



1. Push the “MENU” button.



2. Touch “My Places” switch.

(a) Registering memory points

1. Push the “MENU” button.
2. Touch the “My Places” switch on the “Menu” screen.



3. Touch the “Register” switch of the “Memory Points”.



A screen similar to the destination input screen appears. Input the desired point in the same way as inputting a destination. (See page 46.)

When you finish memory point registration, the memory point data screen will appear.



You can set the icon, attribute, name, location and phone number.

Touch your desired switch you want to set. (For details, see “(b) Editing memory points”.)

INFORMATION

Up to 106 memory points can be registered.

(b) Editing memory points

The icon, attribute, name, location and/or telephone number of a registered memory point can be edited.

1. Push the “MENU” button.
2. Touch the “My Places” switch on the “Menu” screen.



3. Touch the “Edit” switch of the “Memory Points”.



The screen lists the memory points.

“Date”: Touch this switch to list the memory points in order of the registered date.

“Icon”: Touch this switch to list the memory points in order of the icon type.

“Name”: Touch this switch to list the memory points in alphabetical order.

“Attribute”: Touch this switch to list the memory points in order of the home and quick access number.

Touch the desired memory point switch to display the memory point data screen.



4. Touch the switch which you wish to edit.

- To change “Icon”



Touch the desired icon.

You can turn the page by touching “Page 1”, “Page 2” or “With Sound” switch.


“With Sound”: To display sound icons. When your vehicle approaches the memory point, the sound which you chose will sound.



Touch the desired sound icon.

The next screen appears when you touch the “Bell (with direction)” switch.


ADVANCED FUNCTIONS

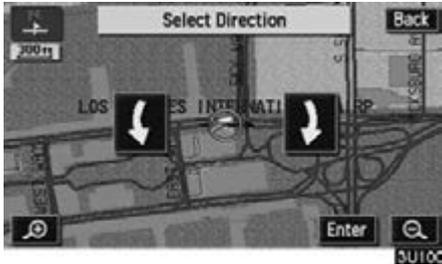

Touch the direction switches and adjust the direction. Touch the **“Enter”** switch. The bell sounds only when your vehicle approaches this point in the direction that you set.

- To change “Attribute”

For easy destination input, set the attribute of the memory points as Home or Quick access 1 to 5.

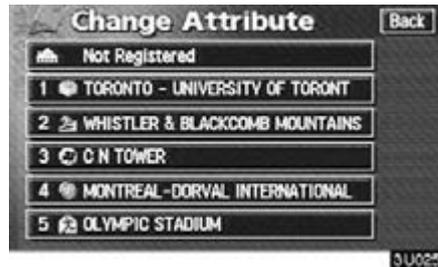

Touch the desired attribute. It is possible to replace a registered attribute.



To replace the attribute, touch the **“Yes”** switch. To return to the previous screen, touch the **“No”** or **“Back”** switch.



To delete the attribute, touch the “Del.” switch.



To delete an attribute, touch the “Yes” switch. To return to the previous screen, touch the “No” or “Back” switch.

- To change “Name”



Touch the alphabet and/or numeral keys.

When the entry has been completed, touch the “OK” switch on the screen.

The previous screen will be displayed.

- “Show Name”

You can set the name of a memory point to be displayed or not on the map.

To show the name, touch the “On” switch. Not to show it, touch the “Off” switch.

ADVANCED FUNCTIONS

- To change “Location”



Touch the eight direction switch to move the cursor  to the desired point on the map.

Touch the “**Enter**” switch and the previous screen will be displayed.

- To change “Phone #” (telephone number)



Touch numeral keys.

When the entry has been completed, touch the “**OK**” switch on the screen.

The previous screen will be displayed.

(c) Deleting memory points

1. Push the “MENU” button.
2. Touch the “My Places” switch on the “Menu” screen.



3. Touch the “Delete” switch of the “Memory Points”.



4. Touch the corresponding switch. To delete all memory points, touch the “Delete All” switch.

For efficient memory point search, memory points can be sorted by the “Date”, “Icon”, “Name” or “Attribute” switch.

To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.

Area to Avoid

Areas you wish to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.



1. Push the "MENU" button.



2. Touch the "My Places" switch.

INFORMATION

If a destination is inputted in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to avoid may be shown.

(a) Registering area to avoid

1. Push the "MENU" button.
2. Touch "My Places" switch on the "Menu" screen.




3. Touch the "Register" switch of the "Areas to avoid".




4. Enter the location in the same way as inputting a destination, or display the map of the area you wish to avoid. (See page 46.)

INFORMATION

Up to 10 locations can be registered as point/area to avoid. If there are 10 locations already registered, the message "Unable to register additional points. Perform operation again after deleting unnecessary points." appears on the screen.

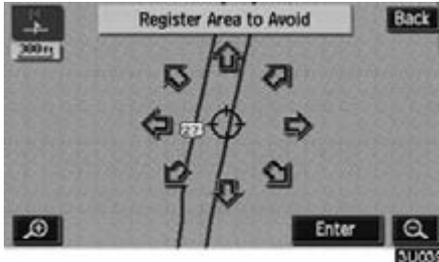

5. Set the cursor in the center of the area to avoid, and touch the “Enter” switch.

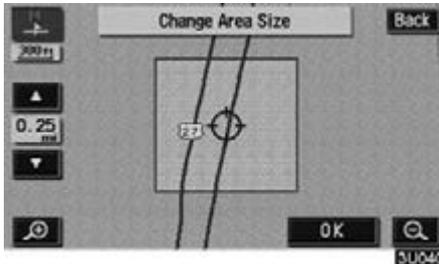


6. Touch either  or  switch to change the size of the area to avoid.

(b) Editing area to avoid

1. Push the “MENU” button.
2. Touch “My Places” switch on the “Menu” screen.



3. Touch the “Edit” switch of the “Areas to Avoid”.

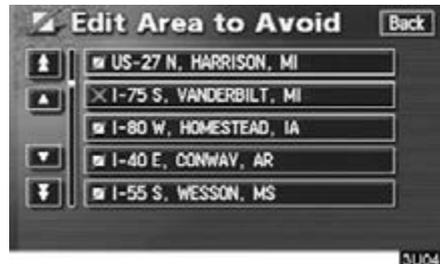

4. To edit an area to avoid, touch the corresponding switch.



5. Touch the “Name”, “Location” or “Area Size” switch on this screen.

ADVANCED FUNCTIONS

- To change “Name”



Touch alphabet or numeral keys.

When the entry has been completed, touch the “OK” switch on the screen.

The previous screen will be displayed.

- “Show Name”


The avoid area name can be set to be displayed or not on the map. To show the name, touch the “On” switch. Not to show it, touch the “Off” switch.

- To change “Location”



Set the cursor  to the desired location, then touch the “Enter” switch. The previous screen will be displayed.

- To change “Area size”

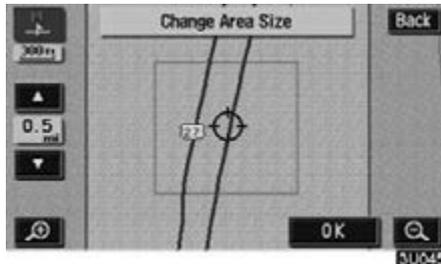

Touch either  or  switch to change the size of area you want to avoid, and touch the “OK” switch. The previous screen will be displayed.

(c) Deleting area to avoid

1. Push the “MENU” button.
2. Touch “My Places” switch on the “Menu” screen.



3. Touch the “Delete” switch of the “Areas to Avoid”.



4. Touch the area you wish to delete from the list.

“Delete all”: To delete all registered areas to avoid in the system.

5. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.

Setup

You can set the items shown on the “Setup” screen.



1. Push the “MENU” button.



2. To display the “Setup” menu screen, touch the “Setup” switch. Touch the items you wish to set.



3. Touch the “OK” switch on the screen and then the previous screen will be displayed.

“Default”: This switch initializes all of the settings.

“Calibration”: You can adjust the current vehicle position mark manually.

“Distance”: You can select “km” or “miles” as the distance unit.

“Estimated Travel Time”: You can set the system to display the travel time to the destination on the route guidance screen.

“Auto Reroute”: You can set the system to automatically search for a new route to the destination.

“Adjust Time Zone”: You can select your desired time zone.

“Auto Voice Guidance”: You can set the automatic voice guidance.

“Voice Guidance in All Modes”: You can set the voice guidance in all modes.

“Notify Traffic Restriction”: You can select notification of seasonal restrictions.

“Intersection Guidance”: You can select ON or OFF to display of intersection guidance.

“Guidance Screen on Freeway”: You can select ON or OFF to display the guidance screen on the freeway.

“Street Name on Scroll Map”: You can select ON or OFF to display the street name on the scroll map.

“Display Building Shape”: You can select ON or OFF to display the building shape on the map screen.

“OFF Function”: You can set to display or not to display each switches and current street name on the map screen.

“Show POI Icons”: You can choose 6 icons displayed on “Show POI Icons” top screen.

“Previous Point”: You can delete the previous destination.

“Map Color (Day)”: You can select the desired map color.

“Map Color (Night)”: You can select the desired map color.

“Screen Animation”: You can set some screen displays to be animated.

Current position calibration

When driving, the current vehicle position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, you can manually adjust the current vehicle position mark.



1. Push the “MENU” button.



2. Touch the “Setup” switch.

ADVANCED FUNCTIONS



3. Touch the “Adjust” switch of “Calibration”.




4. Touch the “Position/Direction” switch.

INFORMATION


For additional information on the accuracy of a current vehicle position, see “Limitations of the navigation system” on page 28.

● Position/Direction calibration

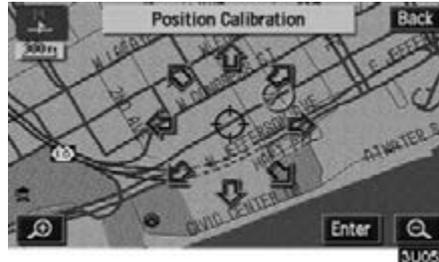

1. Touch the scroll arrows to move the cursor to your desired location.

Touch the “Enter” switch.

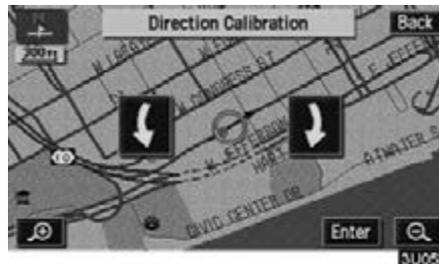

2. Touch either the  or  switch to adjust the direction of the current vehicle position mark.

Touch the “Enter” switch and the map screen will be displayed.

- **Tire change calibration**

The tire change calibration function will be used when replacing the tires. This function will adjust the mis-calculation caused by the circumference difference between the old tires and new ones. If this procedure is not performed when tires are replaced, the current vehicle position mark may be incorrectly displayed.

To perform a distance calibration procedure, touch the **“Tire Change”** switch on the **“Calibration”** screen.

The message appears and the quick distance calibration is automatically started. A few seconds later, a map screen will be displayed.

Distance unit



1. Push the **“MENU”** button.



2. Touch the **“Setup”** switch.



3. Touch the **“km”** or **“miles”** switch of **“Distance”** to choose the distance unit.

The selected switch is highlighted in green.

4. Touch the **“OK”** switch.

Estimated travel time



You can set the speed that is used for the calculation of the estimated travel time.



3. Touch the “Set Speed” switch of the “Estimated Travel Time”.



1. Push the “MENU” button.



4. Touch ◀ or ▶ to set the average vehicle speeds for driving on a Freeway, Main street, and Residential.

To set the default speeds, touch the “Default” switch.

5. When you finish setting the desired speeds, touch the “OK” switch.



2. Touch the “Setup” switch.

INFORMATION

- *The displayed time to the destination is the approximate driving time that is calculated based on the speeds you selected and your actual position along the guidance route.*
- *The time shown on the screen may vary greatly depending on your progress along the route, which may be affected by road conditions such as traffic jams, construction work.*
- *It is possible to display up to 99 hours 59 minutes.*

Auto reroute

When the “Auto Reroute” feature is turned on, the system will automatically search for a new route to the destination if you stray from the guidance route. This feature does not operate while you are driving on roads where guidance is not available.

To turn the “Auto Reroute” mode on:



1. Push the “MENU” button.



2. Touch the “Setup” switch.

Adjusting time zone



3. Touch the “On” switch of “Auto Reroute”.

The selected switch is highlighted in green.

INFORMATION

If your vehicle strays from the guidance route, the system searches for a new route to the destination. The new route may or may not take you back to the previous route depending on how far you are off the original guidance route.



1. Push the “MENU” button.



2. Touch the “Setup” switch.



3. Touch the “Change” switch. The “Adjust Time Zone” screen appears on the display.



4. Touch the desired time zone.

The selected switch is highlighted in green.

5. Touch the “OK” switch on the screen and the “Setup” screen will be displayed.

Auto voice guidance

When the “Auto Voice Guidance” feature is turned on, the voice guidance can be heard automatically.

When the “Auto Voice Guidance” feature is turned off, the voice guidance can be heard only if you push the “MAP/VOICE” button.

To turn the “Auto Voice Guidance” mode on:



1. Push the “MENU” button.



2. Touch the “Setup” switch. Then touch  switch to display page 2 of the “Setup” screen.



3. Touch the “On” switch of “Auto Voice Guidance”.

The selected switch is highlighted in green.

Voice guidance in all modes

When the “Voice Guidance in All Modes” feature is turned on, you can hear the voice guidance in all modes.

When the “Voice Guidance in All Modes” feature is turned off, voice guidance cannot be heard when you using the audio system.

To turn the “Voice Guidance in All Modes” on:



1. Push the “MENU” button.


Notifying traffic restriction



2. Touch the **“Setup”** switch. Then touch  switch to display page 2 of the **“Setup”** screen.



3. Touch the **“On”** switch of **“Voice Guidance in All Modes”** and touch the **“OK”** switch.

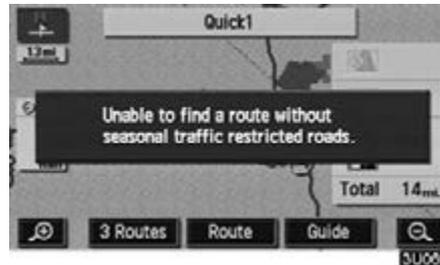


When the **“Notify Traffic Restriction”** feature is turned on, the system notifies you of traffic or seasonal restriction.

To turn the **“Notify Traffic Restriction”** mode on:



1. Push the **“MENU”** button.

Intersection guidance

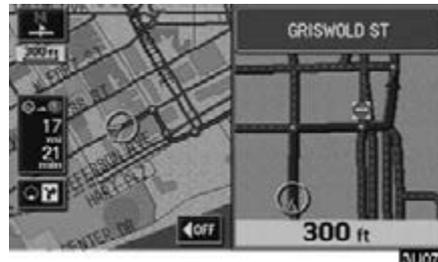

2. Touch the “Setup” switch. Then touch  switch to display page 2 of the “Setup” screen.

When the “Intersection Guidance” feature is turned on, the system will display the intersection guidance screen if you drive with route guidance.

To turn the “Intersection Guidance” mode on:



3. Touch the “On” switch of “Notify Traffic Restriction” and touch the “OK” switch.



1. Push the “MENU” button.


Guidance screen on freeway



2. Touch the “Setup” switch. Then touch  switch to display page 2 of the “Setup” screen.



3. Touch the “On” switch of “Intersection Guidance” and touch the “OK” switch.

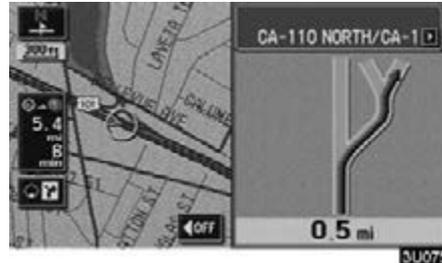

When the “Guidance Screen on Freeway” feature is turned on, the system will display the lane guidance screen if you drive on a freeway with route guidance.

To turn the “Guidance Screen on Freeway” mode on:



1. Push the “MENU” button.

Street name on scroll map



2. Touch the “Setup” switch. Then touch  switch to display page 2 of the “Setup” screen.

When the “Street Name on Scroll Map” feature is turned on, the system will display the name of a street where the cursor  is positioned on the scroll map.

To turn the “Street Name on Scroll Map” mode on:



3. Touch the “On” switch of “Guidance Screen on Freeway” and touch the “OK” switch.



1. Push the “MENU” button.

Display of building shape



2. Touch the “Setup” switch. Then touch  switch twice to display page 3 of the “Setup” screen.



3. Touch the “On” switch of “Street Name on Scroll Map” and touch the “OK” switch.



When the “Display Building Shape” feature is turned on, the system will display the building shape on the map screen using a scale of 150 feet (50 m) to 300 feet (100 m).

To turn the “Display Building Shape” mode on:



1. Push the “MENU” button.

Screen layout function (**OFF** Function)

You can set display or hide each switch and current street name on the map screen.



2. Touch the **"Setup"** switch. Then touch **OFF** switch twice to display page 3 of the **"Setup"** screen.



3. Touch the **"On"** switch of **"Display Building Shape"** and touch the **"OK"** switch.



1. Push the **"MENU"** button.



2. Touch the **"Setup"** switch. Then touch **OFF** switch twice to display page 3 of the **"Setup"** screen.

POI category change (Show POI Icons)



3. Touch the “Change” switch of the “**Function**”.

You can choose 6 icons displayed on the “Show POI Icons” top screen, so that you can easily set which icons to display on the map screen.



4. Touch the switch corresponding to the desired setting. Then touch the “OK” switch.

1. Push the “MENU” button.



2. Touch the “Setup” switch. Then touch **Function** switch twice to display page 3 of the “Setup” screen.

Delete previous points

You can delete your previous destination.



1. Push the "MENU" button.



2. Touch the "Setup" switch. Then touch **▼** switch twice to display page 3 of the "Setup" screen.



3. Touch the "Delete" switch of "Previous Point".



3. Touch the "Change" switch of "Show POI Icons".




4. Touch the category switch you wish to change.



5. Touch the switch corresponding to the desired category. Then touch the "OK" switch.

Map color

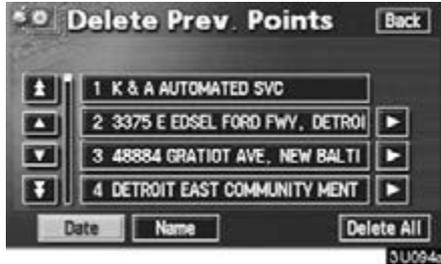

4. Touch the switch you want to delete. For efficient previous point search, previous points can be sorted by the “Date” or “Name” switch.



5. To delete the point, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.



1. Push the “MENU” button.



2. Touch the “Setup” switch. Then touch  switch three times to display page 4 of the “Setup” screen.



3. Touch the desired color for day and/or night map color and then touch the “OK” switch to return the map screen.

Touch the “Normal” switch to return to the default map color.

Screen animation

When the “Screen Animation” feature is turned on, some switches and screens become animated. (e.g.: change map guidance on the map screen)

To turn the “Screen Animation” mode on:



1. Push the “MENU” button.



2. Touch the “Setup” switch. Then touch  switch three times to display page 4 of the “Setup” screen.



3. Touch the “On” switch of “Screen Animation” and touch the “OK” switch.

SECTION 4

OTHER FUNCTIONS

- Maintenance information 138
- Calendar with memo 145
- Hands-free system (for cellular phone) 151
- Speech command system 175
- Help screen 178
- Setting screen 179
- Screen adjustment 179

Maintenance information



This system informs you when to replace certain parts or components and shows dealer information (if registered) on the screen. (See "Information items" on page 140.) When the navigation system begins operating after either the information item's pre-set date arrives or the driving distance reaches a pre-determined setting, the "Information" screen will be displayed. This screen will appear every time the system is turned on until you touch the "Do not display this message again" switch.

To prevent this information screen from being displayed again, touch the "Do not display this message again" switch.



1. Push the "INFO" button.



2. Touch the "Maintenance" switch.



3. Touch the desired icon and input the conditions.



Notice of “Date”: You can input the next maintenance date.

Notice of “Distance”: You can input the driving distance until the next maintenance check.



When you touch the  switch on the “Maintenance” screen, the screen changes to the “Personal Event” screen. Touch the keys to input the desired name and then input conditions.

After you input the date and/or distance, touch the “**OK**” switch. The screen then returns to the “Maintenance” screen.

The following switches appear.

“Delete All”: To cancel all conditions which have been inputted.

“Reset All”: To reset the item which has satisfied a condition.

Touch the **“Off”** switch at the top of the “Maintenance” screen to turn off the information screen.

When your vehicle needs to be serviced, the icon color will change to orange.

INFORMATION

- *For scheduled maintenance information, please refer to the “Warranty and Service Guide/Owner’s Manual Supplement/Scheduled Maintenance”.*
- *Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.*

OTHER FUNCTIONS

Information items



Oil change



Replace oil filter



Rotate tires



Replace tires



Replace battery



Replace brake linings



Replace wiper blades



Replace engine coolant



Replace brake fluid



Replace ATF



Scheduled maintenance



Replace air filter



Personal event

(a) Register dealer

You can register the dealer name, staff, location and phone number.

1. Push the “INFO” button.
2. Touch the “Maintenance” switch on the “Information Menu” screen.



3. Touch the “Set Dealer” switch on the “Maintenance” screen.



4. Enter the location of the dealer in the same way as for destination input. (See page 46.)



After you input the dealer, the screen changes and displays the map location of the dealer. If it is OK, touch the “Enter” switch.

The screen changes to “Edit Dealer” screen. (See “(b) Edit dealer”.)

OTHER FUNCTIONS


(b) Edit dealer

You can edit the dealer name, staff, location and phone number.

1. Push the “INFO” button.
2. Touch the “Maintenance” switch on the “Information Menu” screen.



3. Touch the “Set Dealer” switch on the “Maintenance” screen. The “Edit Dealer” screen appears.

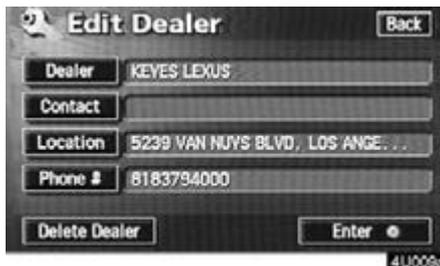

4. To edit, touch the corresponding switch.


- To edit “Dealer” or “Contact”



To input the name, touch the alphabet, numeral and/or umlaut keys. You can input up to 24 letters.

After inputting, touch the “OK” switch at the bottom right of the screen. The previous screen will be displayed.

- To edit “Location”

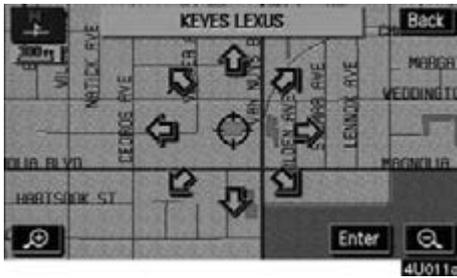

Set the cursor  to the desired point, and touch the “Enter” switch on the screen.

- To edit “Phone #” (telephone number)




Touch numeral keys.

After inputting, touch the “OK” switch. The previous screen will be displayed.

(c) Delete dealer


1. Push the “INFO” button.
2. Touch the “Maintenance” switch on the “Information Menu” screen.
3. Touch the “Set Dealer” switch on the “Maintenance” screen.

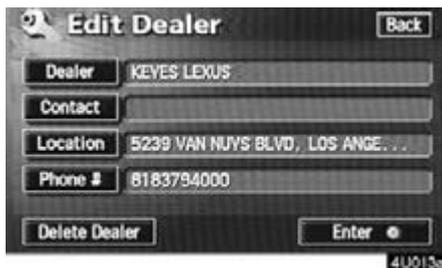

4. Touch the “Delete Dealer” switch on the screen.
5. A message will appear on the screen. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” or “Back” switch.

(d) Set as destination

1. Push the “INFO” button.
2. Touch the “Maintenance” switch on the “Information Menu” screen.
3. Touch the “Set Dealer” switch on the “Maintenance” screen.

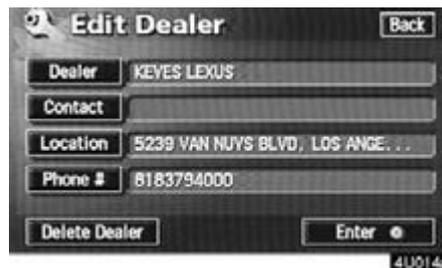

4. Touch the “Enter” switch on the “Set Dealer” screen.
- The screen changes and displays the map location of the registered dealer and the “Route Preference”. (See “ — Entering Destination” on page 71.)

Calendar with memo



This system informs you of a memo entry. At the specified date, the memo information will be displayed when the navigation system is in operation. The memo information screen will appear every time the system is turned on. To disable this screen, touch the “Do not display this message again.” switch.



1. Push the “INFO” button.



2. Touch the “Calendar” switch.



The current date is circled in yellow. If the current date is not displayed on the screen, touch the “Today” switch to display the current month calendar.

(a) Inputting a memo



1. Touch the day you want to add a memo.

• Memo



Touch the "Memo" switch to enter text.



2. To display the "Memo" screen, touch the "Add Memo" switch.



Enter text using the keys. You can enter text up to 24 letters.

After entering the text, touch the "OK" switch at the bottom right of the screen.


- Location



Touch the “Location” switch to set location.

A screen similar to the destination input screen appears. Input the same way as inputting a destination. (See page 46.)

You can add the memos up to 100 until December 31, 2022.

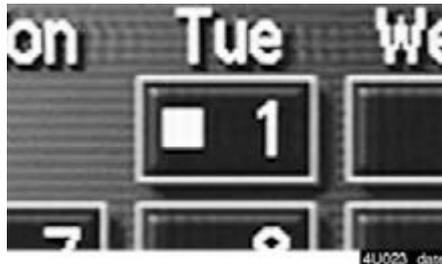

The date inputted is marked as shown above.

You can choose the desired mark and/or date color.

- Mark color



Touch the “Mark” switch.



Touch your desired color for the mark.

- Date color



Touch the “Date” switch.



Touch your desired color for the date.
You can set a color of the mark and/or date for the date you added the memo and/or location.
To default the date color, touch the “Delete” switch on the screen. After you choose the date and/or mark color, touch the “OK” switch to display the previous screen.

(b) Adding a memo



To add a memo, touch the corresponding date.
The “Memo” screen appears on the display. Touch the “Add Memo” switch. (See page 146 for inputting a memo.)

You can add up to 100 memos.

(c) Deleting a memo

Touch the corresponding date. Touch the corresponding memo switch, and then touch the “Delete” switch on the screen. A message appears on the display. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.

(d) Editing a memo

To edit a memo, touch the corresponding date, and then touch the memo you wish to edit.



Touch the “Memo” or “Location” switch.

(e) Memo list



1. To list the memos you added, touch the “List” switch.



2. Touch the desired search condition to list the memos. The “Memo List” is displayed on the screen.



To display the memos listed in a desired period, touch the “Period” switch.

Touch the number keys.

After setting the period, touch the “OK” switch. The “Memo List” screen will be displayed.

You can set a period from January 1, 2003, through December 31, 2022.



To delete and/or edit the memo, touch the desired memo switch.

To delete all memos, touch the “Delete All” switch. A message appears on the display. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.

Hands-free system (for cellular phone)



To edit: Touch the corresponding “Memo” or “Location” switch. (See page 149 for details.)

To delete: Touch the “Delete” switch. (See page 149 for details.)

Hands-free system allows you to make or receive a call without taking your hands off the steering wheel by connecting your cellular phone.

This system supports the Bluetooth®. Bluetooth® is a wireless data system by which you can call without your cellular phone connecting with a cable or placing on a cradle.

If your cellular phone does not support the Bluetooth®, this system can not function.



CAUTION

While you are driving, do not use a cellular phone or connect the Bluetooth® phone.

NOTICE

Do not leave your cellular phone in the car. The temperature indoor may be high and damage the phone.

OTHER FUNCTIONS

INFORMATION

In the following conditions, the system may not function.

- *The cellular phone is turned OFF.*
- *The current position is outside the communication area.*
- *The cellular phone is not connected.*
- *The cellular phone has a low battery.*



By pushing the telephone button above, you can receive a call or hang up without taking your hands off the steering wheel.



You can use the microphone above when talking on the phone.

The party's voice outputs from the driver's speaker. When the received calls or received voice outputs, the audio from the Audio system or voice guidance from the Navigation system will be muted.

INFORMATION

- ***Talk alternately with your party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)***
- ***Keep the volume of receiving voice down. Otherwise, echo is coming up. When you talk on the phone, speak clearly towards the microphone.***
- ***In the following situations, your voice may not reach the party.***
 - ***Driving on unpaved road. (Making a traffic noise.)***
 - ***Driving at the high speed.***
 - ***The window is open.***
 - ***Turning the air-conditioning vents towards the microphone.***
 - ***The sound of the air-conditioning fan is loud.***



- 1** Indicates a condition of Bluetooth® connection.

“Blue” indicates excellent condition of Bluetooth® connection.

“Yellow” indicates the condition easy to disconnect the Bluetooth®, causing a deterioration in voice.

Not displayed: no connection to the Bluetooth®.

- 2** Indicates the receiving area.

“Rm” is displayed when receiving in Roaming area.

“Hm” is displayed when receiving in Home area.

OTHER FUNCTIONS

3 Indicates the level of reception.



Too bad ←→ **Excellent**

The level of reception does not always correspond with the one of your cellular phone.

4 “A” is displayed when calling in analogue.
“D” is displayed when calling in digital.

Not displayed when the system can get no information from your cellular phone.

INFORMATION

This system supports the following service.

- *HFP (Hands Free Profile) Ver. 1.0*
- *OPP (Object Push Profile) Ver. 1.1*

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP service individually.

An antenna for the Bluetooth® connection is built in the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or covered with metal materials.

Leave the Bluetooth® phone on the place where “Blue” indication is displayed.



Bluetooth is a trademark owned by Bluetooth SIG. Inc.

FCC ID: BAB134000-290
IC ID: 2024B-134290
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(a) Enter the Bluetooth® phone

To use a hands-free system, you need to enter your phone in the system. Once you registered it, you can make a hands-free call.



1. Push the "INFO" button.



2. Touch the "Telephone" switch.

You can also push the telephone button to display this screen when the vehicle is stopped.


OTHER FUNCTIONS



3. Touch the “Settings” switch.



4. Touch the “Add Phone” switch to connect your cellular phone to the system.

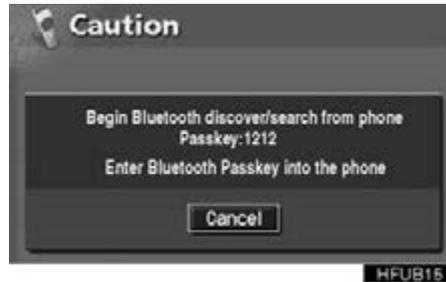

5. When this screen is displayed, input the Passkey displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, touch “Cancel”.



6. When the connection is completed, device name and Bluetooth® Device Address is displayed.

You do not need to enter it in case of using the same phone.

(b) Select the Bluetooth® phone

In case of registering a number of Bluetooth® phones, you need to select the usual phone.



1. Touch the “Settings” switch to display “Settings” screen.



2. Touch the “Select” switch to display “Select Telephone” screen. You can select the Bluetooth® phone from a maximum of 4 numbers. “Empty” is displayed when you do not register the Bluetooth® phone yet.

Bluetooth® mark is displayed when you choose the phone.



Although you can register up to 4 Bluetooth® phones in the system, one Bluetooth® phone can only function.

OTHER FUNCTIONS

- **Connect the Bluetooth® phone**



When you turn the engine switch to “ACC” or “ON”, the selected Bluetooth® phone will be automatically connected and the connection result is displayed.

Leave the Bluetooth® phone enable to connect.

This screen appears when the Bluetooth® phone is first connected after you turn the engine switch to “ACC” or “ON”.

- **Reconnect the Bluetooth® phone**

If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the engine switch is turned to “ACC” or “ON”, the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone OFF, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

- **Confirm the Bluetooth® information**
You can confirm or change the detail setting of the Bluetooth® phone.



Touch the “**Settings**” of Bluetooth® to display “Bluetooth® Information” screen.



You can change the Device Name and Passkey.

BD_ADDR is Bluetooth® device address. Do not change the Device Name to the same name as the one of the other Bluetooth® phones. They cannot be identified.

BD_ADDR is different depending on the system. You can confirm the address when it cannot be identified.

*: Bluetooth is a trademark owned by Bluetooth SIG, Inc.

- (i) **Change the Device Name**

You can change the Device Name to the desired one from the name already registered in the system.



Touch the “**Change**” of Device Name to display the “Device Name List” screen.



Select the desired name and touch “**OK**”.

OTHER FUNCTIONS

(ii) Change the Passkey

The Passkey in the system is initially fixed. You can change the Passkey within 4–8 figures.



Touch the “Change” of Passkey to display “Enter Bluetooth* Passkey” screen.



Touch the desired key to input the Passkey.

Each time you touch “◀”, an inputted number is deleted.

Touch “Enter”.

*: Bluetooth is a trademark owned by Bluetooth SIG, Inc.

(c) Delete the Bluetooth® phone



1. Touch the “Settings” switch to display “Settings” screen.



2. Touch the “Delete” switch to display “Delete Telephone” screen. You can delete the Bluetooth® phone which you registered.



Select the desired phone from the list and touch “OK”.

(d) Call on the Bluetooth® phone

After you enter the Bluetooth® phone, you can call by using hands-free system. This system has 6 methods below by which you call.

(i) By dial

You can call by inputting the telephone number.

This cannot be operated while you are driving.



Touch the desired key to input the telephone number.

Each time you touch “◀”, an inputted number is deleted.

Touch “☎” or push the telephone button.

OTHER FUNCTIONS

(ii) By phone book


You can call by phone book data which is transferred from your cellular phone.

The system has two phone books. You can register up to 500 numbers in each book.

This cannot be operated while you are driving.



2. Select the desired number from the list.

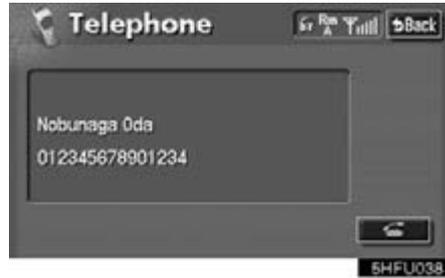

Touch “” or push the telephone button.

Touch the desired key to input the telephone number.

1. Touch the “Phone Book” switch to display “Phone Book” screen.



(iii) By dialed numbers

You can call by dialed number. The system memorize up to 5 dialed numbers. If it is over than 5, the oldest number is deleted.

This cannot be operated while you are driving.



1. Touch the “Log” switch to display “Outgoing Calls” screen.



- When you call by phone book, the name (if registered) is displayed.
- When you call the same number continuously, the newest number is only registered.

2. Select the desired number from the list.



Touch “” or push the telephone button.

OTHER FUNCTIONS

(iv) By received calls

You can call by received calls. When a call is received, the system memorize up to 5 numbers. If it is over than 5, the oldest number is deleted.

This cannot be operated while you are driving.



1. Touch the “Log” switch to display.




2. Touch the “Incoming Calls” switch to display “Incoming Calls” screen.



- When a telephone number registered in phone book is received, the name and the number is displayed.
- Received calls which you did not answer are also memorized in the system and “Abs.” is displayed on the left side of the number.
- Unnotified telephone number such as a public telephone is not memorized in the system.

3. Select the desired number from the list.

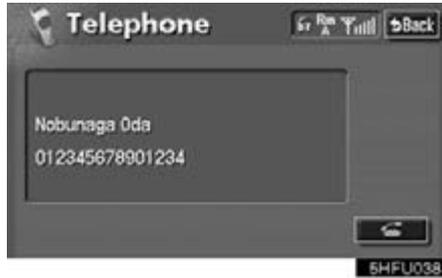

Touch “” or push the telephone button.

A international phone call may not be made depending on the cellular phone which you have.

- (v) By one touch call

You can call by registered telephone number which you selected from a phone book, dialed numbers and received calls. (See page 170 for registering the one touch dial.)



1. Touch the “1-touch Dial” switch to display “1-touch Dial” screen.



2. Touch the desired number to call. You can change the page by touching “1-touch Dial 2” or “1-touch Dial 3”.

When you push the telephone button while you are driving, the screen above appears. Touch the desired name to call. (The telephone number is not displayed.)

(vi) By POI call

You can call by operating a switch when “” is displayed on the screen from Navigation system. (See page 26 for details.)

(e) Receive on the Bluetooth® phone



When a call is received, this screen is displayed with a sound. Touch “” or push the telephone button to talk on the phone.

To hang up the phone:

Touch “” or push the telephone button again.

To refuse to receive the call:

Touch “” and hold it.

To adjust the volume of received call:

Touch “-” or “+”.

On the international phone call, the party's name may not be displayed correctly depending on the cellular phone which you have.

(f) Talk on the Bluetooth® phone



While you are talking on the phone, this screen is displayed. You can do the operation below on the screen.

To adjust the volume of the party's voice:
Touch “-” or “+” switch.

To hang up the phone:
Touch the “☎” switch or push the telephone button.

To mute your voice:
Touch the “**Mute ON**” switch.

To input the Key:
Touch the “**0-9**” switch.



Touch the desired number to input the key.

To hang up the phone:

Touch “☎” or push the telephone button.

This cannot be operated while you are driving.

OTHER FUNCTIONS



If the continuous tone signal is registered in a phone book, this screen appears. (If not registered, “Send” and “Exit” is not displayed.)

Confirm the number displayed on the screen and touch “Send”. The number to marked sign will be sent.

When you touch “Exit”, this function will be finished and normal tone screen appears.

To hang up the phone:

Touch “” or push the telephone button.

The continuous tone signal is the marked sign (p or w) and the number following telephone number. (ex. 056133p0123w#1*)

When you call the number registered in phone book and input a code number and the like to operate an answering machine or use a telephone service in bank, you can do this operation.

(g) Change the settings of the Bluetooth® phone



Touch the “Settings” switch to display “Settings” screen.



You can change the settings of the phone.

(i) Change the phone book

The system has two phone books. You can select either of a phone book.



Touch the “Phone Book 1” or “Phone Book 2” switch.

(ii) Transfer the telephone number

You can transfer the telephone numbers in your Bluetooth® phone to the system. Up to 500 numbers can be registered in one phone book.

Transfer it while the engine is running.



1. Touch the “Start Transfer” switch to display “Data Transfer” screen.



2. Touch the “Overwrite” or “Add” switch.

OTHER FUNCTIONS



3. Transfer the phone book data to the system using the Bluetooth® phone.


This screen appears while transferring. To cancel it, touch the “**Cancel**” switch. If the transferring is interrupted on the way, the phone book data transferred until then can be memorized in the system.

(iii) Register the one touch dial

You can register the desired telephone number from phone books, dialed numbers and received calls. Up to 17 one touch dial numbers a phone book can be registered.



1. Touch the “**Set One Touch**” switch in which you want to register the phone number.

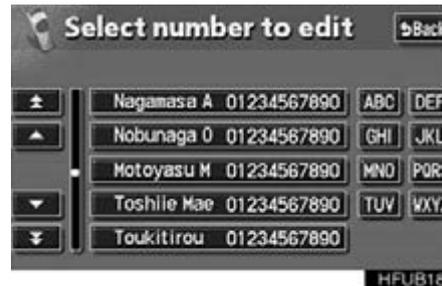

2. Touch the desired telephone number.



Select the new registration from 1–18 except 6 and touch the switch.

A latest received number is registered in the 6th item.

(iv) Delete the memory

- Delete the telephone number in the phone book.



Touch the “Delete” switch of “Phone Book”.



Select the desired number from the list.

OTHER FUNCTIONS

If you want to delete all the phone numbers in phone book, touch the **“Delete All”** switch.



SHFU001

Touch **“YES”** switch.

Touch **“NO”** switch and the previous screen appears.

- **Delete the dialed number**



HFUB20

Touch the **“Delete”** switch of **“Outgoing Calls”**.



HFUA023

Select the desired number from the list.

If you want to delete all the dialed numbers, touch the **“Delete All”** switch.



Touch **“YES”** switch.

Touch **“NO”** switch and the previous screen appears.

- Delete the received calls



Touch the **“Delete”** switch of **“Incoming Calls”**.



Select the desired number from the list.

If you want to delete all the received calls, touch the **“Delete All”** switch.

OTHER FUNCTIONS



Touch **“YES”** switch.

Touch **“NO”** switch and the previous screen appears.

- Delete the one touch dial



Touch the **“Delete”** switch of **“1-touch Dial”**.



Select the desired number from the list.

If you want to delete all the one touch dial numbers, touch the **“Delete All”** switch.

Speech command system

The speech command system enables you to operate the navigation system by giving a command.



Touch **“YES”** switch.
Touch **“NO”** switch and the previous screen appears.



- 1. Push the talk switch.**
A beep sounds and on screen message is displayed with an indicator at the top left.

OTHER FUNCTIONS



2. Give a command while an indicator is shown in the display. If you want to check the command list, touch the **"Help"** switch to display the Help screen. (See "Help screen" on page 178.) When you touch the **"Cancel"**, the previous screen returns.

► Microphone

It is unnecessary to speak directly into the microphone when giving a command.

If the navigation system does not respond or the confirmation screen does not disappear, please push the speech command switch and try again.

If no command is given, a beep sounds and the indicator disappears 6 seconds later.

If the system does not recognize your speech, the system will respond with this message ("System does not recognize this command, please rephrase your command."). Start the operation from the beginning.

Speech command example: Searching for a route to your home.

1. Push the talk switch.
2. Say **“Home”**.

If your home is not registered, you will hear “Home is not registered”.



3. If the system recognized the command, the recognition result **“Home”** is displayed on the top of the screen with the screen message. (Displayed message and the switches on the screen depend on the situation.)

Touch or say “Cancel”, and the system will be canceled. Touch or say “Help”, and displays the “Help” screen.



4. Touch **“Enter”** or say **“Enter destination”**, and the system starts searching for a route to your home. (If the destination is already registered, **“Add”** or **“Replace”** is displayed on the screen.)

Touch or say “Cancel”, and the search will be canceled.

INFORMATION

In the following conditions, the system may not recognize the command properly and using speech commands may not be possible.

- *The command is not correct or clear. Note that certain words, accents, or speech patterns may be difficult for the system to recognize.*
- *There are some noises such as wind noise, etc.*

Help screen

This system has a function which displays the voice recognition help screen. You can see the command list and operating guide on it.

(a) Command List



1. Touch the **“Command List”** tab on the upper side of the screen and the switches on the right side of the screen to select the desired category.
2. You can scroll through the list of the command list by touching **“▲”** or **“▼”** switch.

Touch the **“OK”** switch after you check it.

(b) Operating Guide



1. Touch the **“Operating Guide”** tab on the upper side of the screen and the switches on the right side of the screen to select the desired category.
2. You can scroll through the list of the operating guide by touching **“▲”** or **“▼”** switch.

Touch the **“OK”** switch after you check it.

Setting screen




1. Push the "INFO" button.



2. Touch the "Screen Setting" switch.

You can select a background color.

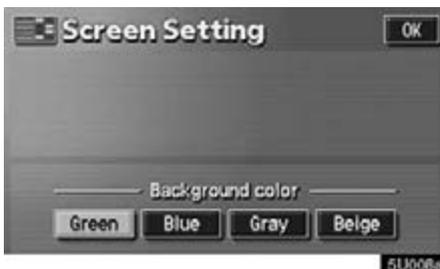

Select the desired background color and then touch the "OK".

Screen adjustment

You can adjust the brightness or contrast of the screen depending on the brightness of your surroundings. You also can turn the display off.



Push the "DISPLAY" button.

INFORMATION

The display may be tingled in purple due to the reflection of sunlight, but this is not a malfunction.

OTHER FUNCTIONS



Contrast and brightness adjustment

CONTRAST “+”:

Strengthens the contrast of the screen.

CONTRAST “-”:

Weakens the contrast of the screen.

BRIGHTNESS “+”: Brightens the screen.

BRIGHTNESS “-”: Darkens the screen.

The screen turns off when you push the “SCREEN OFF”. To turn the display screen back on, push any bezel switch such as “INFO”, etc. The selected screen appears.

Depending on the position of the headlight switch, the screen changes to either day mode or night mode.

To display the screen in the day mode even with the headlight switch on, touch “DAY MODE” on the adjustment screen for brightness and contrast control.

However, if the instrument panel light control switch is turned fully to the right, mode switching cannot be done. It remains in the day mode. In this case, “DAY MODE” is not shown on the screen.

If the screen is set in the day mode with the headlight switch turned on, this condition is memorized in the system even with the engine turned off.

INDEX

For navigation system function, please also refer to the “**Navigation system function index**” on page 16.

INDEX

Numbers

3 Routes selection 72

A

Adding a memo 148
Adding destinations 76
Adding preferred road 78
Address switch 44
Adjusting time zone 124
Area to Avoid 114
Arrow screen 94
Auto reroute 123
Auto voice guidance 125

B

Bluetooth® 151
Brightness 179
Building information 97

C

Calendar with memo 145
Call by dial 161
Call by dialed numbers 163
Call by one touch call 165
Call by phone book 162
Call by POI 166
Call by received calls 164
Call on the Bluetooth® phone 161
Categories 59
CAUTION screen 3
Change "Area Size" 117
Change "Icon" 109
Change "Location" 112, 116
Change "Name" 111, 116
Change "Phone #" 112
Change "Attribute" 110
Change switch 44
Change the Device Name 159
Change the Passkey 160
Change the phone book 169
Change the route 72
Change the settings of the Bluetooth®
phone 168
City center 61
City name 54, 58
City to search 53, 57
CLOSE button 10, 20
Color 179
Command list 178
Compass mode 93
Confirm the Bluetooth® information ... 159

Connect the Bluetooth® phone 158
Contrast 179
Coordinates switch 44
Current position as the search point ... 62
Current position calibration 119
Current position display 23
Cursor position as a destination 24
Cursor position as a memory point 25

D

Delete dealer 144
Delete the Bluetooth® phone 160
Delete the dialed number 172
Delete the one touch dial 174
Delete the received calls 173
Delete the telephone number
in the phone book 171
Deleting a memo 149
Deleting area to avoid 117
Deleting destinations 78
Deleting memory points 113
Deleting preferred road 80
Deleting previous points 134
DESTINATION button 10, 46
Destination input 46
Destination input by "Address" 50
Destination input by "Coordinates" 69
Destination input by "Emergency" 64
Destination input
by "Freeway Ent./Exit" 68
Destination input by "Intersection" 66
Destination input by "Map" 66
Destination input by "Memory" 65
Destination input by "Phone #" 70
Destination input by "POI Category" ... 59
Destination input by "POI Name" 55
Destination input by "Previous" 65
Destination input by Home 49
Destination input by Quick access 49
Destination screen 44
Detour setting 82
DISPLAY button 10
Display of building shape 131
Display operation 20
Display POI icon 85, 133
Distance and time to destination 96
Distance unit 121
Dual map 92

- E**
- Edit "Dealer" or "Contact" 142
 - Edit "Location" 143
 - Edit "Phone #" 143
 - Edit dealer 142
 - Editing a memo 149
 - Editing area to avoid 115
 - Editing memory points 108
 - Emergency switch 44
 - Enter the Bluetooth® phone 155
 - Entering destination 71
 - Estimated travel time 122
- F**
- Foot print map 97
 - Foot print map switch 10
 - Freeway Ent./Exit switch 44
 - Freeway information screen 94
- G**
- GPS 28
 - Guidance screen on freeway 95, 129
 - Guiding the route 14
- H**
- Hands-free system 151
 - Heading-up 10
 - Heading-up symbol 28
 - Help screen 178
 - HFP (Hands Free Profile) 151
 - Home 12
 - Home switch 44
 - House number 50
- I**
- Incoming calls 164
 - INFO button 10
 - Information about the icon 26
 - Information items 140
 - Initial screen 3
 - Inputting a memo 146
 - Inputting letters and numbers 21
 - Intersection guidance 128
 - Intersection guidance screen 95
 - Intersection switch 44
- L**
- Last 5 cities 53, 57
 - Limitations of the navigation system ... 28
 - List 22
 - List all categories switch 59, 60
 - List screen operation 23
- M**
- Maintenance information 138
 - Map color 135
 - Map coverage area 40
 - Map data 40
 - Map database information
and updates 31
 - Map DVD switch 100
 - Map scale 27
 - Map switch 44
 - Map View switch 10
 - MAP/VOICE button 10, 23, 24
 - Mark switch 10
 - Memo list 150
 - Memory point information 27
 - Memory switch 44
 - MENU button 10, 100
 - Menu screen 100
 - Microphone 151, 175
 - My places 106
 - My Places switch 100
- N**
- Nearest 5 cities 54, 58
 - North-up 10
 - North-up symbol 28
 - Notifying traffic restriction 127
 - Numerals and symbols 22
- O**
- Off function 10, 132
 - On route switch 63, 87
 - One-touch scroll 24
 - OPEN button 10, 20
 - Operating guide 178
 - OPP (Object Push Profile) 151
 - Orientation of the map 28
 - Outgoing calls 163

INDEX

P

Phone # switch	44
POI as a destination	87
POI categories	60
POI category change	133
POI Category switch	44
POI information	26
POI list	63
POI Name switch	44
Position/direction calibration	120
Preset destination	12
Previous switch	44

Q

Quick access switch	44
---------------------	----

R

Receive on the Bluetooth® phone	166
Reconnect the Bluetooth® phone	158
Register dealer	141
Register the one touch dial	170
Registering area to avoid	114
Registering home or preset destinations	12
Registering memory points	107
Reordering destinations	77
Resume guidance	102
Route guidance screen	73
Route overview	88
Route preference	72, 83
Route preview	89
Route switch	10

S

Scale indicator	10
Screen adjustment	179
Screen animation	136
Screen configuration	90
Screen configuration switch	10
Screen layout function	132
Screen off	179
Screen scroll operation	24
Search condition	81
Search point	60
Search point from destinations	63
Search point via the map screen	62
Select the Bluetooth® phone	157
Select User switch	100
Selecting the search area	47
Setting and deleting destination	76
Setting and deleting route	78

Setting dealer as the destination	144
Setting home as the destination	15
Setting screen	179
Setup	118
Setup switch	100
Show POI icons	85
Single map	91
Speech command system	175
Starting route from adjacent road	84
Starting route guidance	71
Street name	50
Street name on scroll map	130
Suspend guidance	101
Suspend Guidance switch	100
Suspending and resuming guidance	101

T

Talk on the Bluetooth® phone	167
Talk switch	175
Telephone switch	151
TILT button	10
Tire change calibration	121
Tone	179
Touch switch operation	21
Transfer the phone book	169
Transfer the telephone number	169
Turn list screen	93
Typical voice guidance prompts	74

U

Unit of measurement	122
User selection	103

V

Voice guidance in all modes	126
Volume	102
Volume switch	100

Z

Zoom in switch	10
Zoom out switch	10

Introduction

Thank you for your purchase of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses the maps of DENSO. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes about 75 Point of Interest categories to allow you to easily select destinations such as restaurants and banks. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in approaching a fork or intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on the satellite condition, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 28 through 31.

TOYOTA MOTOR CORPORATION

Important information about this manual

For safety reasons, this manual indicates items requiring particular attention with the following marks.

 CAUTION
This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE
<i>This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.</i>

INFORMATION
<i>This provides additional information.</i>

Initial screen



When you start the engine or turn the engine switch to the “ACC” position, the initial screen appears and the system begins operating.

 CAUTION
When the vehicle is stopped with the engine running, always apply the parking brake for safety.

After a few seconds, the “CAUTION” screen appears.

Safety Instruction



Touch either **“English”** or **“Français”** to select a language. Read and follow the instructions.

When you touch the “I Agree” switch on the screen, the map screen appears.

You can access this screen when you push the **“INFO”** button and touch the **“Language”** switch on the “Information Menu” screen. Then you can select a language.

To use your system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist you in reaching your destination and, if used properly, can do so. You, as the driver, are solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it distracts you from safe driving. Your first priority while driving should always be the safe operation of your vehicle. While you are driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner’s Manual to make sure you understand the system. Do not allow others to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when you start driving. Unavailable switches are dimmed. You can input your destination and select your route only when the vehicle is not moving.

 **CAUTION**

- For safety, the driver should not operate the navigation system while he/she is driving. Inattention to the road and traffic may cause an accident.
- While you are driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may provide incorrect information such as the direction of a one way street.

While you are driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for your information. If the system cannot determine your current position correctly, there is a possibility of incorrect, late or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before you follow any instruction from the system, look to see whether you can comply with the instruction safely and legally.

This system cannot warn you about such things as the safety of an area, condition of streets, and availability of emergency services. If you are unsure about the safety of an area, do not drive into it. **Under no circumstances is this system a substitute for the driver's personal judgement.**

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting video screens within sight of the driver.

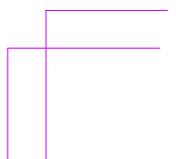
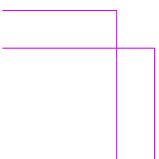
 
 
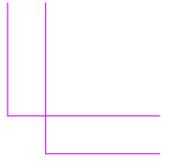
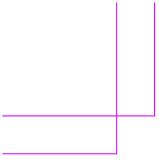


Table of Contents

Quick guide —	
— Overview switches and guidance screen	10
— Registering home or preset destinations	12
— Operation flow: guiding the route	14
— Setting home as the destination	15
Navigation system function index	16
1 Basic Functions	
<Basic information before operation>	
Display operation	20
Touch switch operation	21
Inputting letters and numbers	21
Current position display	23
Screen scroll operation (one-touch scroll)	24
Map scale	27
Orientation of the map	28
Limitations of the navigation system	28
Map database information and updates	31
2 Destination Input and Route Guidance	
<Basic functions in frequent use>	
Quick reference for the “Destination” screen	44
Destination input	46
Selecting the search area	47
Destination input by Home	49
Destination input by Quick access	49
Destination input by “Address”	50
Destination input by “POI* Name”	55
Destination input by “POI* Category”	59
Destination input by “Emergency”	64
Destination input by “Memory”	65
Destination input by “Previous”	65
Destination input by “Map”	66
Destination input by “Intersection”	66
Destination input by “Freeway Ent./Exit”	68

Quick guide

*: Point of Interest

Destination input by “Coordinates”	69
Destination input by “Phone #”	70
Starting route guidance	71
Entering destination	71
Route guidance screen	73
Typical voice guidance prompts	74
Setting and deleting destination	76
Setting and deleting route	78
Show POI* icons	85
Route overview	88
Route preview	89
Screen configuration	90
Distance and time to destination	96
Foot print map	97

3 Advanced Functions


⟨Descriptions of functions for more effective use⟩

Quick reference for the “Menu” screen	100
Suspending and resuming guidance	101
Volume	102
User selection	103
My places	106
Area to avoid	114
Setup	118
Current position calibration	119
Distance unit	121
Estimated travel time	122
Auto reroute	123
Adjusting time zone	124
Auto voice guidance	125
Voice guidance in all modes	126
Notifying traffic restriction	127
Intersection guidance	128
Guidance screen on freeway	129
Street name on scroll map	130
Display of building shape	131
Screen layout function (OFF Function)	132
POI* category change (Show POI Icons)	133

*: Point of Interest

Delete previous point	134
Map color	135
Screen animation	136
4 Other Functions	
Maintenance information	138
Calendar with memo	145
Hands-free system (for cellular phone)	151
Speech command system	175
Help screen	178
Setting screen	179
Screen adjustment	179
Index	181

**Quick guide —
— Overview switches and guidance screen**

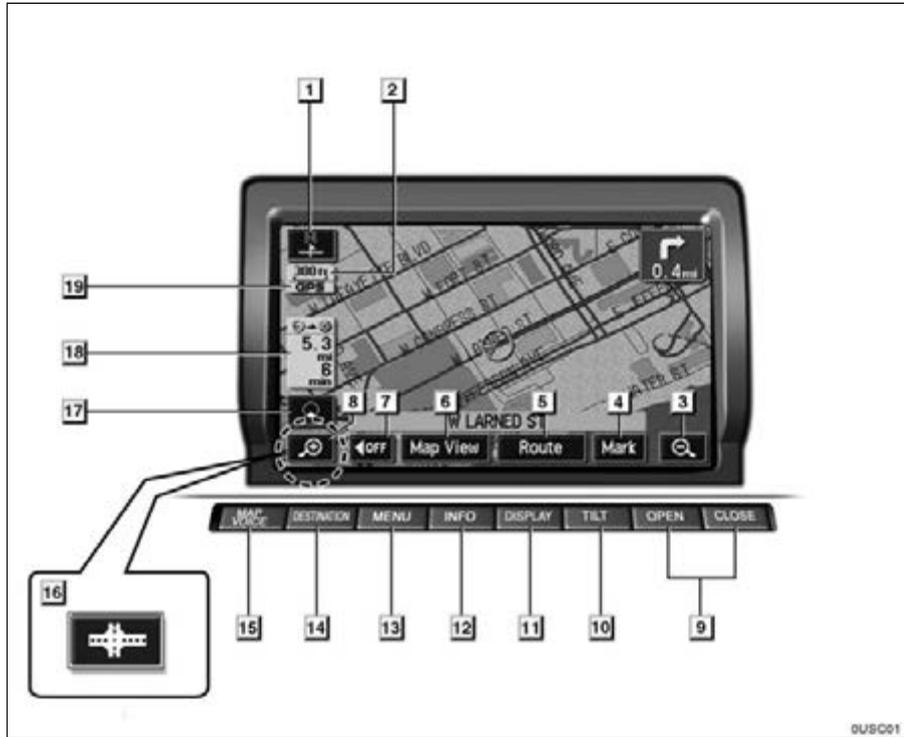

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	28
2	Scale indicator	This figure indicates the map scale.	27
3	Zoom out switch	Touch this switch to reduce the map scale.	27
4	“Mark” switch	Touch this switch to register the cursor position as a memory point.	25
5	“Route” switch	Touch this switch to change the route.	76, 78

No.	Name	Function	Page
6	“Map View” switch	Touch this switch to obtain information regarding the route to the destination and information about the POI (Points of Interest) on the map screen.	85, 88, 89
7	“◀OFF” switch	Touch this switch to obtain a broader view. Some of the switches on the screen are not displayed. They are displayed again by touching the “ON ▶” switch.	132
8	Zoom in switch	Touch this switch to magnify the map scale.	27
9	“OPEN”, “CLOSE” buttons	Push the appropriate button to open or close the screen cover.	20
10	“TILT” button	Push this button to tilt the display.	20
11	“DISPLAY” button	Push this button to display the “Display” screen.	179
12	“INFO” button	Push this button to display the “Information Menu” screen.	4, 138, 145, 155, 179
13	“MENU” button	Push this button to display the “Menu” screen.	40, 100
14	“DESTINATION” button	Push this button to display the “Destination” screen.	44, 46
15	“MAP/VOICE” button	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance and display the current position.	23, 24, 75
16	Foot print map switch	Touch this switch to display the foot print map and the building information.	97
17	Screen configuration switch	Touch this switch to change the screen mode.	90
18	Distance and time to destination	Displays the distance and the estimated travel time to the destination.	96
19	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	28

— Registering home or preset destinations



1 Push “MENU” button.



2 Touch “My Places”.



3 Touch “Register”.



4 There are 13 different methods to search your home or preset destinations.

See “Destination input” on page 46.



5 Touch "Enter".

The "Memory Point" screen is displayed.



6 Touch "Attribute".



**7 Registering home:
Touch [Home icon] .
Registering preset destinations:
Touch one of preset switches 1 to 5.**



8 Touch "OK".

Registration of home or preset destinations is complete.

You can change the icon, quick access, name, location and phone number. (See " — Editing memory points" on page 108.)

— Operation flow: guiding the route




1 Push “DESTINATION” button.



2 There are 13 different methods to search destinations.

See “Destination input” on page 46.

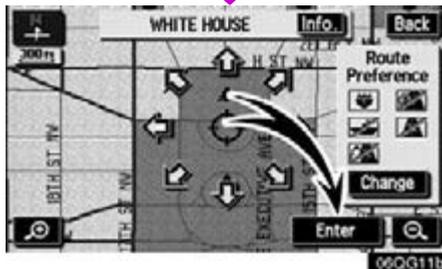

3 Touch “Enter”.

The navigation system performs a search for the route.



4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “— Entering destination” on page 71.)

5 Guidance to the destination is given via voice and on the guidance screen.

— Setting home as the destination




1 Push “DESTINATION” button.



2 Touch  .

The  can be used if your home has been registered.

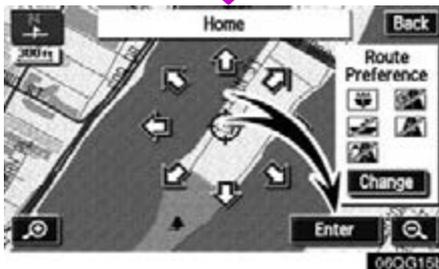

3 Touch “Enter”.

The navigation system performs a search for the route.



4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “ — Entering destination” on page 71.)

5 Guidance to the destination is given via voice and on the guidance screen.

Navigation system function index

〈Map〉

Displaying maps	Page
Viewing the map screen	10
Displaying the current vehicle position	23
Viewing the current position vicinity map	24
Changing the scale	27
Changing the map orientation	28
Displaying POIs*	85
Displaying the estimated travel time to the destination	96
Selecting the dual map screen	90
Viewing foot print map	97
Changing the map color	135
Deleting map screen touch switches	132
Inputting destination	Page
Inputting the destination (by home, POI*, phone # etc.)	46
Changing the search area	47
Operating the map location of the selected destination	71

〈Route guidance〉

Before starting route guidance	Page
Setting the destination	71
Viewing alternative routes	71
Starting route guidance	71
Before starting or during route guidance	Page
Viewing the route	71
Adding destinations	76
Changing the displayed route	78
Selecting routes by road	78
Displaying the estimated travel time to the destination	96

*: Point (s) of Interest

During route guidance	Page
Suspending route guidance	101
Adjusting route guidance volume	102
Deleting the destination	76
Displaying the entire route map	88
Changing or straying from the displayed route	78

⟨ Useful functions ⟩

Memory points	Page
Registering your own memory points	106
Marking icons on the map	106
Information	Page
Displaying vehicle maintenance timing	138
Displaying the calendar	145
Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	155
Making a call on the Bluetooth® phone	161
Receiving a call on the Bluetooth® phone	166
Speech command system	Page
Operating the system with your voice	175

