

SECTION 1

BASIC FUNCTIONS

Basic information before operation

- Initial screen 20
- Touch screen operation 22
- Inputting letters and numbers/List screen operation 22
- Function help 26
- **Map screen operation** 26
 - Current position display 26
 - Screen scroll operation 27
 - Switching the screens 31
 - Map scale 33
 - Foot print map 34
 - Orientation of the map 35

Initial screen



GS460/GS350:

When the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode, the initial screen will be displayed and the system will begin operating.

GS450h:

When the "POWER" switch is in ACCESSORY or ON mode, the initial screen will be displayed and the system will begin operating.



After a few seconds, the "CAUTION" screen will be displayed.



After about 5 seconds, the "CAUTION" screen automatically switches to the map screen. When the "MAP/VOICE" button is also pushed, the map screen is displayed.

While the "CAUTION" screen is displayed, the "DEST" or "MENU" button cannot be operated. And if the "Language", "Calendar" or "Maintenance" buttons on the "Information" screen are touched, the screen will change back to "CAUTION" screen and then change to the map screen in about 5 seconds later or if the "MAP/VOICE" button is pushed.

● **Maintenance information**

This system informs about when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the “Information” screen will be displayed when the navigation system is in operation.



To disable this screen, touch “Do Not Display This Message Again.”. This screen goes off if the screen is not operated for several seconds.

To prevent this information screen from being displayed again, touch **“Do Not Display This Message Again.”**.

To register “Maintenance information”, see “Maintenance information” on page 116.

● **Memo information**

This system notifies about a memo entry. At the specified date, the memo information will be displayed when the navigation system is in operation. The memo information screen will be displayed every time the system is turned on.



The memo of the current date can be viewed by touching “Memo”. (See “ — Editing a memo” on page 123.)

To disable this screen, touch “Do Not Display This Message Again.”. This screen goes off if the screen is not operated for several seconds.

To prevent this information screen from being displayed again, touch **“Do Not Display This Message Again.”**.

To register “Memo information”, see “Calendar with memo” on page 120.

BASIC FUNCTIONS

Touch screen operation

This system is operated mainly by the touch-screen buttons on the screen.

To prevent damage to the screen, lightly touch buttons on the screen with the finger. When a button on the screen is touched, a beep sounds.

Do not use objects other than the finger to touch the screen.

Inputting letters and numbers/List screen operation

When searching for an address or a name, or entering a memo, letters and numbers can be input via the touch screen.

INFORMATION

Keyboard layout can be changed. (See page 106.)

INFORMATION

- *If the system does not respond to a touch on a touch-screen button, move the finger away from the screen and then touch it again.*
- *Dimmed touch-screen buttons cannot be operated.*
- *Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the touch screen.*
- *The displayed image may become darker and moving images may be slightly distorted when the display is cold.*
- *Under extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the touch-screen buttons may be harder than usual to depress.*
- *When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the "Display" screen, or take off your sunglasses.*

● **To input letters**

To display the alphabet keys, touch “A-Z” or “À-Ý”.



Enter letters by touching the alphabet keys directly.

 : Touching this button erases one letter. By holding this button, letters will continue to be erased.

On certain letter entry screens, letters can be entered in upper or lower case.



 : To enter in lower case.

 : To enter in upper case.

● **To input numbers and symbols**

To display the number keys and symbol keys, touch “0-9”.



Enter numbers and symbols by touching the number keys and symbol keys directly.

 : Touching this button erases one letter. By holding this button, letters will continue to be erased.

 : Touching this button displays other symbols.



BASIC FUNCTIONS

- **To display the list**



To search for an address or a name, touch “List”. Matching items from the database are listed even if the entered address or name is incomplete.

If the number of matches is four or less, the list is displayed without touching “List”.



INFORMATION

*The number of matching items is shown to the right side of the screen. If the number of matching items is more than 9,999, the system displays “*****” on the screen.*

- **List screen operation**

When a list is displayed, use the appropriate button to scroll through the list.



 To shift to the next or previous page.

 To scroll up or down one item at a time.

 This expresses a displayed screen position.


 If  appears to the right of the item name, the complete name is too long for the display. Touch  to scroll to the end of the name.

Touch  to scroll to the beginning of the name.


● **Sorting**

The order of a list displayed on the screen can be rearranged.

TYPE A

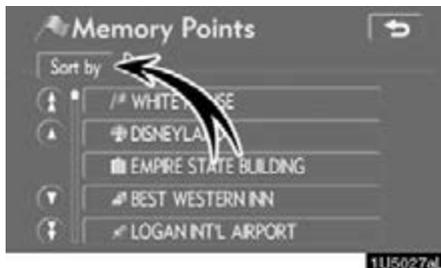

1. Touch "Sort by".

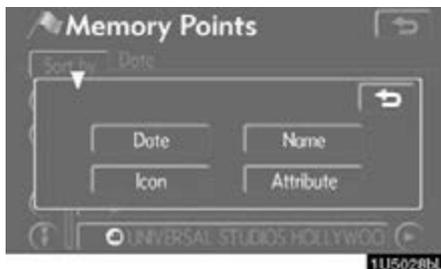

2. Select the desired sorting criteria.

Sorting criteria are as follows:

"Distance": To sort in the order of distance from your current location.

"Date": To sort in the order of the date.

"Category": To sort in the order of the category.

"Icon": To sort in the order of the icons.

"Name": To sort in order by name.

"Attribute": To sort in order by attribute.

TYPE B



"Dist. Sort": To sort in the order of distance from the current vehicle location. The distance from current vehicle position up to the destination is displayed to the right of the name.

"Name Sort": To sort in alphabetical order by name.

BASIC FUNCTIONS

Function help

Explanations for the functions of the “Destination”, “Setup” and “Menu” screens can be viewed.



Touch .




- : To view the previous page.
- : To view the next page.
- : To return to the previous screen.

Map screen operation — — Current position display

When starting the navigation system, the current position is displayed first.

This screen displays the current vehicle position and a map of the surrounding local area.

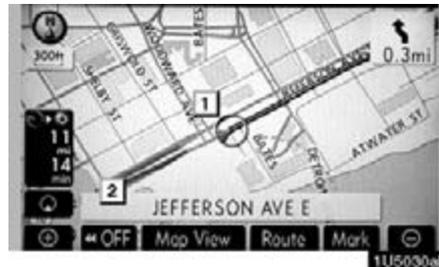

The current vehicle position mark () appears in the center or bottom center of the map screen.

A street name will appear on the bottom of the screen, depending on the scale of the map () .

You can return to this map screen that shows your current position at any time from any screen by pushing the “MAP/VOICE” button.

While driving, the current vehicle position mark is fixed on the screen and the map moves.

The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.

INFORMATION

- **After battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.**
- **To correct the current position manually, see page 112.**

— Screen scroll operation (one-touch scroll)

When any point on the map is touched, that point moves to the center of the screen and is shown by the cursor mark (1).



Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position of the vehicle.

If the finger is continuously held on the screen, the map will continue scrolling in that direction until the finger is removed.

A street name, city name, etc. of the touched point will be shown, depending on the scale of the map (2). Distance from the current position to the cursor mark will also be shown (3).

After the screen is scrolled, the map remains centered at the selected location until another function is activated. The current vehicle position mark will continue to move along your actual route and may move off the screen. When the “MAP/VOICE” button is pushed, the current vehicle position mark returns to the center of the screen and the map moves as the vehicle proceeds along the designated route.

INFORMATION

When the one-touch scroll feature is used, the current vehicle position mark may disappear from the screen. Move the map with a one-touch scroll again or push the “MAP/VOICE” button to return to the current vehicle position map location display.

- **To set the cursor position as a destination**

A specific point on the map can be set as a destination using the one-touch scroll function.



Touch “Enter”.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

BASIC FUNCTIONS


- To register the cursor position as a memory point

Memory point registration enables easy access to a specific point.



Touch “Mark”.

When you touch “Mark”, the following screen appears for a few seconds, and then the map screen returns.

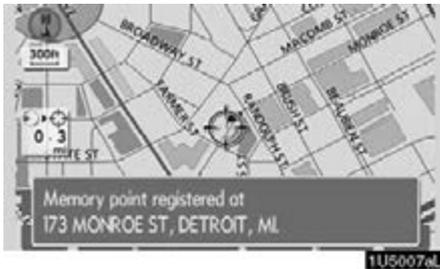

The registered point is shown by  on the map.

To change the icon or name, etc., see “ — Editing memory points” on page 93.

Up to 106 memory points can be registered. If there is an attempt to register more than 106, a message appears for confirmation.



- To see information about the icon where the cursor is set



To display information about an icon, set the cursor on it.

POI INFORMATION

When the cursor is set on a POI icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Add to” and “Replace” are displayed.

“Add to”: To add a destination.

“Replace”: To delete the existing destinations and set a new one.

To register this POI as a memory point, touch “Mark”. (See page 92.)

If the phone icon is touched, the registered telephone number can be called.

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 76.)

BASIC FUNCTIONS

MEMORY POINT INFORMATION

When the cursor is set on a memory point icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Add to” and “Replace” are displayed.

“Add to”: To add a destination.

“Replace”: To delete the existing destinations and set a new one.

To edit a memory point, touch “Edit”. (See “— Editing memory points” on page 93.)

To delete a memory point, touch “Delete”.

If is touched, the registered telephone number can be called.

DESTINATION INFORMATION

When the cursor is set on a destination icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

To delete a destination, touch “Delete”.


If is touched, the registered telephone number can be called.

— Switching the screens

Any one of the screen configurations can be selected .



1. Touch this button to display the following screen.

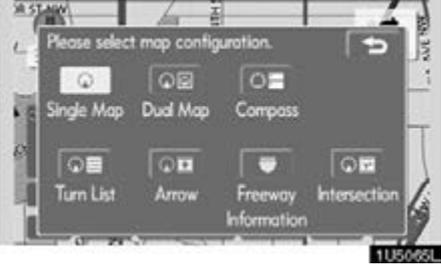

2. To select the desired screen configuration, touch one of the following buttons.

Depending on the conditions, certain screen configuration buttons cannot be selected.

-  : To display the single map screen. (See page 32.)
-  : To display the dual map screen. (See page 32.)
-  : To display the compass mode screen. (See page 33.)
-  : To display the turn list screen. (See page 66.)
-  : To display the arrow screen. (See page 66.)
-  : To display the freeway information screen. (See page 64.)
-  : To display the intersection guidance screen or the guidance screen on the freeway. (See page 65.)

BASIC FUNCTIONS

- **Screen configurations**

SINGLE MAP

This is a regular map screen.

While on a different screen, touching  will display the single map screen.



The screen shows the single map.

DUAL MAP

A map can be displayed split in two.

While on a different screen, touching  will display the dual map screen.



The screen shows the dual map. The map on the left is the main map.

The right side map can be edited.

Touch the right side map to display the edit screen.



This screen can perform the following procedures:

1. Changing the map scale
2. Displaying the POI icon
3. Changing the orientation of the map

Touch "OK" when you complete editing.

The screen returns to the dual map screen.

COMPASS MODE

Current vehicle position is indicated with a compass, not with a map.

While on a different screen, touching  will display the compass mode screen.



Information about the destination and current position, as well as a compass, is displayed on the screen.

The destination mark is displayed in the direction of the destination. When driving refer to the longitude and latitude coordinates, and the compass, to make sure that your vehicle is headed in the direction of the destination.

INFORMATION

When the vehicle travels out of the coverage area, the guidance screen changes to the compass mode screen.

— Map scale



Touch  or  to change the scale of the map display. The scale bar and indicator at the bottom of the screen indicates the map scale menu. The scale range is 150 feet (50 m) to 250 miles (400 km).

Touch  or  until the scale bar changes. By continuing to touch the button, the scale bar changes smoothly.

The scale of the map display can be changed by touching the scale bar directly. It is not available while driving.

The map scale is displayed under the north-up symbol or heading-up symbol at the top left of the screen.

INFORMATION

When the map scale is at the maximum range of 250 miles (400 km),  is not shown. When the map scale is at the minimum range of 150 feet (50 m),  is not shown. In areas where the foot print map is available the map scale changes from  to  when at the minimum range.

BASIC FUNCTIONS

Foot print map

For the area which is covered by the foot print map (Some areas in the following cities: Detroit, Chicago, N.Y., L.A), you can switch to the foot print map on a scale of 75 feet (25 m).

- To switch to the foot print map

 changes into  when the map is scaled down to 150 feet (50 m).



To display the foot print map, touch



To delete the foot print map display, touch



INFORMATION

- If the map or the current position is moved to the area which is not covered by the foot print map, the screen scale automatically changes to 150 feet (50 m).
- On the foot print map, a one way street is displayed by .
- It is not possible to perform scrolling on the foot print map (one-touch scroll) while driving.

- To display building information

Information is available only for buildings for which information is recorded on the map disc.



1. Touch “Info.” while the foot print map is displayed.

If the map is displayed by a split screen, the map will change into a single map display.



2. Using the eight-direction arrow, move the cursor to the position of the building to display building information.
3. Touch “Building Info.”.




Details of POIs in some buildings may be displayed.

For detailed POI information, touch the building name. You can see details of the selected POIs.


— Orientation of the map

The orientation of the map can be changed from North-up to Heading-up by touching the orientation symbol at the top left of the screen.

Touch  or .

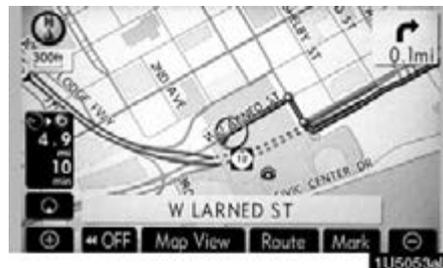

► North-up screen

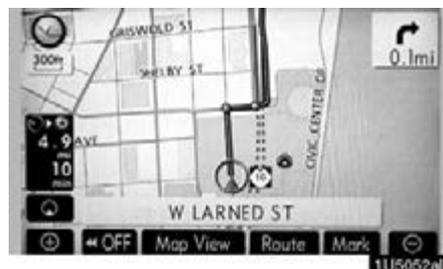

► Heading-up screen

North-up symbol

Regardless of the direction of vehicle travel, North is always up.

Heading-up symbol

The direction of vehicle travel is always up. A red arrow indicates North.

BASIC FUNCTIONS

SECTION 2

DESTINATION SEARCH

Destination search


- Quick reference (“Destination” screen) 38
- **Destination search** 39
 - Selecting the region to search 40
 - Destination search by Home 42
 - Destination search by Quick access 42
 - Destination search by “Address” 43
 - Destination search by “POI*” 46
 - Destination search by “Phone #” 53
 - Destination search by “Emergency” 53
 - Destination search by “Memory” 54
 - Destination search by “Previous” 54
 - Destination search by “Map” 55
 - Destination search by “Intersection” 56
 - Destination search by “Freeway Ent./Exit” 57
 - Destination search by “Coordinates” 58
 - Deleting set destinations 58
- Starting route guidance 59

*: Point of Interest

DESTINATION SEARCH

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “DEST” button.

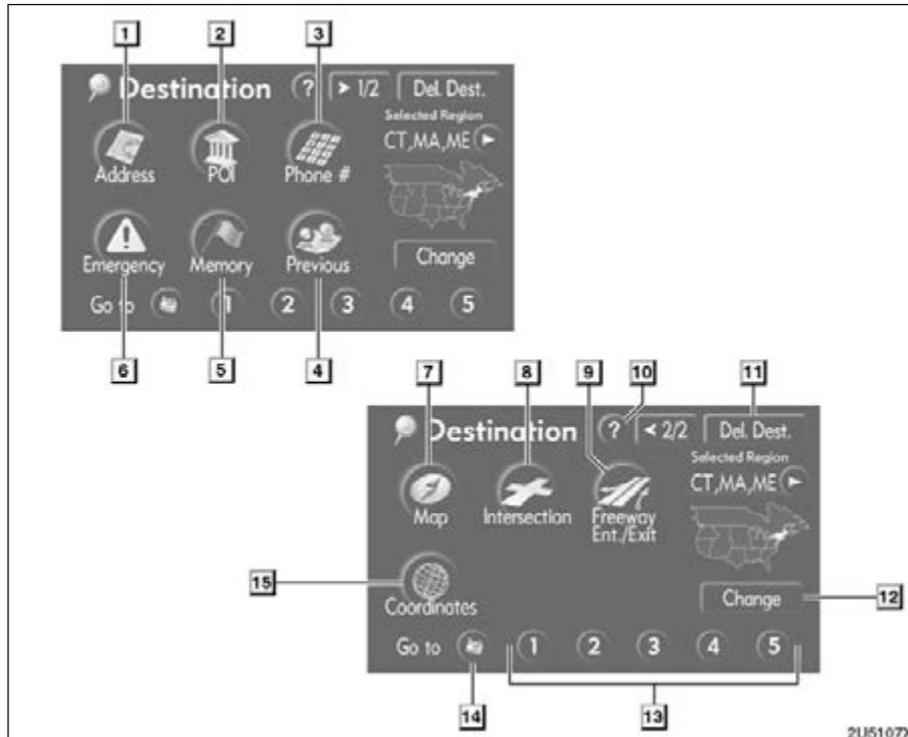

1 “Address”	
A house number and the street address can be input by using the input keys.	43
2 “POI”	
Select one of the many POIs (Points of Interest) that have already been stored in the system’s database.	46
3 “Phone #”	
A destination can be entered by the telephone number.	53
4 “Previous”	
A destination can be selected from any of the last 100 previously set destinations and from the previous starting point.	54

5 “Memory”	
The location can be selected from the registered “Memory points”. (To register memory points, see “ — Registering memory points” on page 92.)	54
6 “Emergency”	
One of the four categories of emergency service points that are already stored in the system’s database can be selected.	53
7 “Map”	
A destination can be selected simply by touching the location on the displayed map.	55
8 “Intersection”	
The names of two intersecting streets can be entered. This is helpful if only the general vicinity, not the specific address, is known.	56

- 9** “Freeway Ent./Exit”
The name of a freeway (interstate) entrance or exit can be entered. 57
- 10** “?”
Function help for the “Destination” screen can be viewed on this screen. 26
- 11** “Del. Dest.”
Set destinations can be deleted 58
- 12** “Change”
To change the selected region to search, touch this button. 40
- 13** **Quick access touch-screen buttons**
One of 5 preset destinations can be selected by touching the screen directly. If a quick access point has not been registered, a message will be displayed and will automatically switch to the setting screen. To use this function, it is necessary to set the “Quick Access” for each memory point. (To register a “Quick Access”, see “ — Editing memory points” on page 93.) 42
- 14** **Home touch-screen button**
A personal home address can be selected without entering the address each time. If home has not been registered, a message will be displayed and will automatically switch to the setting screen. To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see “ — Registering home” on page 98.) 42
- 15** “Coordinates”
A destination can be set by using latitude and longitude as coordinates. 58

Destination search —



Push the “DEST” button and the “Destination” screen appears.



You can use one of 12 different methods to search your destination. (See pages 42 through 58.)

INFORMATION

When searching the destination, the response to the touch-screen button may be slow.

DESTINATION SEARCH


— Selecting the region to search

SELECTING THE REGION TO SEARCH ON THE DESTINATION SCREEN

1. Push the “DEST” button.



2. Touch “Change” on the “Destination” screen to display a map of the United States and Canada divided into 12 regions. (For map database information and updates, see “Map database information and updates” on page 140.)

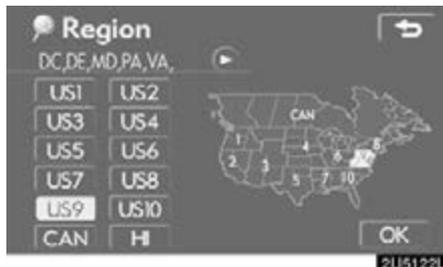

3. Touch one of “US1” through “CAN” to select a region to search.
4. Touch “OK” and the “Destination” screen returns.

SELECTING THE REGION TO SEARCH ON THE INPUT SCREEN

Change the selected region in order to set a destination from a different region by using “Address”, “POI”, “Freeway Ent./Exit” or “Intersection”.



1. Touch the region to search button like “US8” on the input screen to display a map of the United States and Canada divided into 12 regions. (For map database information and updates, see “Map database information and updates” on page 140.)



2. Touch one of “US1” through “CAN” to select a region to search.
3. Touch “OK” and the previous screen returns.

DESTINATION SEARCH

U.S.A.	
Button	States included in the search region
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont

"US9"	Washington, D.C. Delaware Maryland Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii

Canada	
Button	Provinces and regions included in the search region
"CAN"	All provinces and regions in Canada included in this button.

DESTINATION SEARCH

— Destination search by Home

1. Push the “DEST” button.



2. Touch the home touch-screen button on the “Destination” screen.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 59.)

If home has not been registered, a message will be displayed and will automatically switch to the setting screen.

To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see page 10.)

INFORMATION

Guidance starts from the current vehicle position to your home if “Enter” is touched even while driving.

— Destination search by Quick access

1. Push the “DEST” button.



2. Touch any of the quick access touch-screen buttons on the “Destination” screen.

The screen changes and displays the map location of the quick access point and the route preference. (See “Starting route guidance” on page 59.)

If a quick access point has not been registered, a message will be displayed and will automatically switch to the setting screen.

To use this function, it is necessary to set “Quick Access” for each memory point. (To register “Quick Access”, see page 12.)

INFORMATION

Guidance starts from the current vehicle position to the quick access point if “Enter” is touched even while driving.

— Destination search by “Address”

There are 2 ways to input a destination by address.

- 1. Push the “DEST” button.
- 2. Touch “Address” on the “Destination” screen.



(a) Inputting a house number and a street name



- 1. Touch numbers directly on the screen to input a house number.

After inputting a house number, touch “OK” to display the screen for inputting a street name.

It is possible to input a street name first. Touch “Street” to display the screen for inputting a street name.



- 2. Input the street name and touch “List”.

DESTINATION SEARCH



3. When the desired street name is found, touch the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

If the same address exists in more than one city, the current screen changes to the city list screen.



4. Select or enter the desired city.

“Input Name”: To narrow down the listed items by inputting the city name.



If inputting a street name first, the screen changes. The house number can then be input.




If the above screen appears, an address range on the screen can be selected.



If the same address exists in more than one city, the current screen changes to the city list screen.

(b) Selecting a city to search

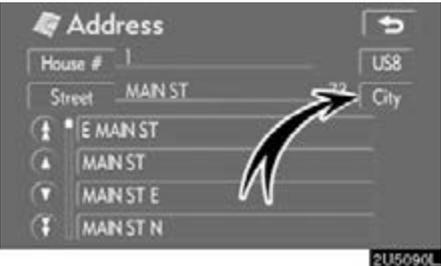

Touch "City".



To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

INFORMATION

- **To change the selected region, touch "Select Region".**
- **To cancel the city setting, touch "Any City".**

INPUTTING THE CITY NAME

1. Touch "Input City Name".



2. Input a city name.



3. Touch the button of the desired city name from the displayed list.

"Map": To display the selected destination and the route preference. (See "Starting route guidance" on page 59.)

The current screen changes to the screen for inputting a house number or a street name. (See "(a) Inputting a house number and a street name" on page 43.)

DESTINATION SEARCH

SELECTING FROM THE NEAREST 5 CITIES

1. Touch “Nearest 5 Cities”.



2. Touch the button of the desired city name from the displayed list.

The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 43.)

SELECTING FROM THE LAST 5 CITIES



- Touch the button of the desired city name.

If the navigation has not be used, no cities will be displayed on the screen.

The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 43.)

— Destination search by “POI”

There are two ways to search by POI (Points of Interest).

- (a) Search by name
- (b) Search by category

1. Push the “DEST” button.
2. Touch “POI” on the “Destination” screen.




3. Touch the button for the desired method.

(a) Search by “Name”



1. Input the name of the Point of Interest.

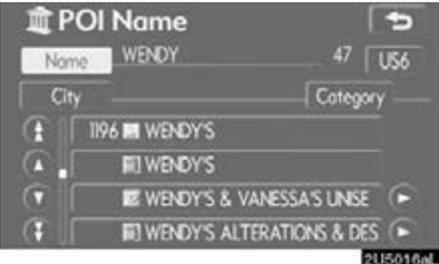

2. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.



Touch the button of the desired destination.


If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “Selecting a city to search” on page 48 and “Selecting from the categories” on page 49.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “Display POI icons” on page 76.)

DESTINATION SEARCH

- **Selecting a city to search**

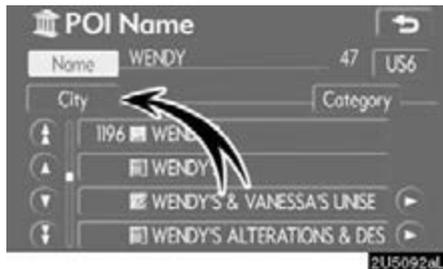

Touch "City".



To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

INFORMATION

- **To change the selected region, touch "Select Region".**
- **To cancel the city setting, touch "Any City".**

INPUTTING THE CITY NAME

1. Touch "Input City Name".



2. Input the city name.



3. Touch the button of the desired city name from the displayed list.

SELECTING FROM THE NEAREST 5 CITIES

1. Touch “Nearest 5 Cities”.



2. Touch the button of the desired city name.


SELECTING FROM THE LAST 5 CITIES




Touch the button of the desired city name.

If the navigation has not be used, no cities will be displayed on the screen.

• **Selecting from the categories**

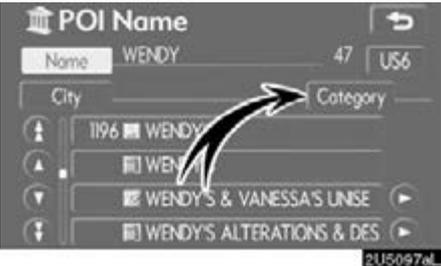


Touch “Category”.

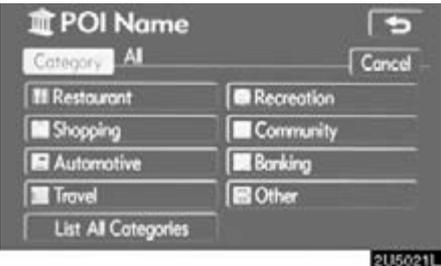

If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.

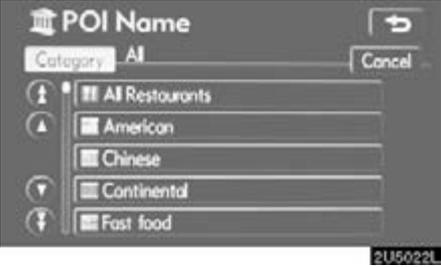

When the desired category is touched, the POI name list screen is displayed.

DESTINATION SEARCH

(b) Search by “Category”

The destination can be set by selecting the search point and the POI category.



Set the search point by the following method:

1. Input the city center
2. Set the current position as the search point
3. Set the search point via the map screen
4. Set the search point from any destination


It is possible to display the names of POIs located within approximately 20 miles (32 km) from the selected search point.

INPUTTING THE CITY CENTER


1. Touch “Input City Center”.



2. Input the city center name.

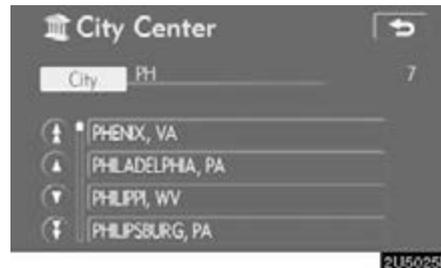

3. Touch the button of the desired city center name.

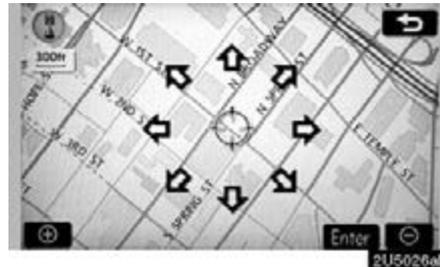

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

4. Touch “Enter”.

The search point is set and the “POI Category” screen will be displayed.


SETTING THE CURRENT POSITION AS THE SEARCH POINT

Touch “Current Position”.

The search point is set at the current position, and the “POI Category” screen will be displayed.

SETTING THE SEARCH POINT VIA THE MAP SCREEN

1. Touch “Map”.

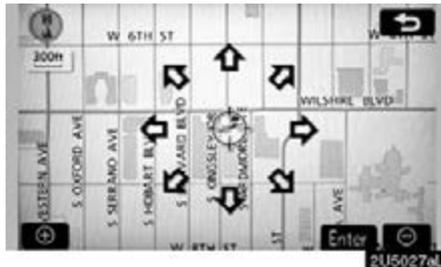

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

2. Touch “Enter”.

The search point is set and the “POI Category” screen will be displayed.

SETTING THE SEARCH POINT FROM DESTINATIONS

1. Touch the destination buttons at the bottom of the screen.



When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

2. Touch “Enter”.

The search point is set and the “POI Category” screen will be displayed.

DESTINATION SEARCH

- **To search POIs near the search point**

When the search point is set, the “POI Category” screen will be displayed.



Select the desired POI categories.

“**List**”: If the desired POI categories have already been selected, a list of POI will be displayed from among the selected categories.

The selected category icon appears on the top left of the screen.

If the desired POI category is not on the screen, touch “**List All Categories**” to list all POI categories.



Select the desired POI categories from the list and touch “OK”.

The selected category icon appears on the top left of the screen.



“**Select Category**”: To return to the POI category selection screen.

“**Show List**”: To display the list of POIs in the selected categories.



By touching the button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

The direction arrows of POIs are displayed only when the current position is set as the search point.

“**On Route**”: When the indicator is illuminated by touching this button, the list of the items searched along the route is displayed.

— Destination search by “Phone #”

1. Push the “DEST” button.
2. Touch “Phone #” on the “Destination” screen.



3. Input a telephone number.
4. After inputting a telephone number, touch “OK”.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

If there is more than one site having the same number, the following screen will be displayed.



INFORMATION

- If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.
- To set a memory point as a destination using the phone number, the number must be registered previously. (See page 97.)

— Destination search by “Emergency”

1. Push the “DEST” button.
2. Touch “Emergency” on the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.



4. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

INFORMATION


The navigation system does not guide in areas where route guidance is unavailable. (See page 139.)

DESTINATION SEARCH

— Destination search by “Memory”

1. Push the “DEST” button.
2. Touch “Memory” on the “Destination” screen.

A list of registered memory points is displayed. (To register or edit memory points, see “My places” on page 91.)

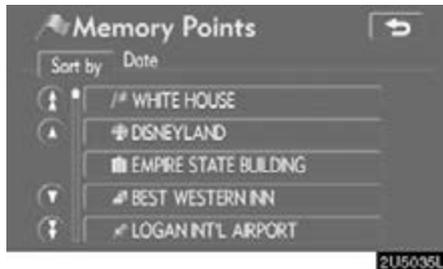


3. Touch the button of your desired memory point.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

— Destination search by “Previous”

1. Push the “DEST” button.
2. Touch “Previous” on the “Destination” screen.

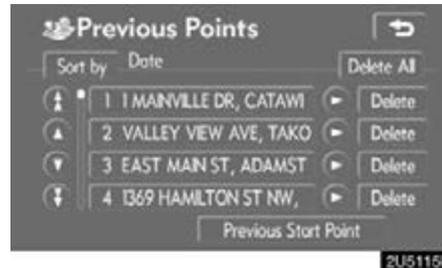

The previous starting point and up to 100 previously set destinations are displayed on the screen.


3. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

● **Deleting previous points**

1. Touch “Delete” for the previous point button you want to delete.

“Delete All”: To delete all previous points in the system.

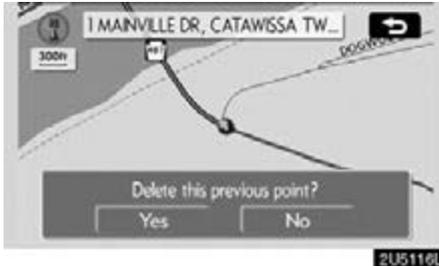

2. To delete the point, touch “Yes”. To cancel the deletion, touch “No”.

INFORMATION

The list of previous destinations can also be deleted by touching “Delete Previous Points” on the “My Places” screen when the vehicle is stopped. (See “ — Deleting previous points” on page 103.)

— **Destination search by “Map”**

1. Push the “DEST” button.
2. Touch “Map” on the second page of the “Destination” screen.



The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 59.)

INFORMATION

Guidance starts if “Enter” is touched even while driving. However, the cursor cannot be moved.

DESTINATION SEARCH

— Destination search by “Intersection”

1. Push the “DEST” button.
2. Touch “Intersection” on the second page of the “Destination” screen.




3. Input the name of the two intersecting streets which are located near the destination to be set.



4. Touch the button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

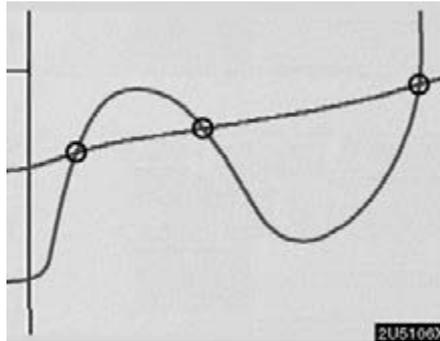

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

— Destination search by “Freeway Ent./Exit”

- 1. Push the “DEST” button.
- 2. Touch “Freeway Ent./Exit” on the second page of the “Destination” screen.



Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).



- 3. Select the desired freeway by touching the button.



- 4. Either a freeway “Entrance” or “Exit” can be selected.



- 5. Touch the button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

“Input Name”: An applicable list is displayed by touching this button and inputting the name.

DESTINATION SEARCH

— Destination search by “Coordinates”

1. Push the “DEST” button.
2. Touch “Coordinates” on the second page of the “Destination” screen.



3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 59.)

— Deleting set destinations

A set destination can be deleted.

1. Push the “DEST” button.
2. Touch “Del. Dest.” on the “Destination” screen.

When more than one destination is set, a list will be displayed on the screen.



3. Touch the destination for deletion.

“Delete All”: To delete all destinations on the list.



A message appears to confirm the request to delete.

4. To delete the destination(s), touch “Yes”.

If “Yes” is touched, the data cannot be recovered.

If “No” is touched, the previous screen will return.


5. If more than one destination is set, touch “OK” after deleting the destinations.

The system searches for the guidance route again, and displays the entire route.

INFORMATION
Set destinations can also be deleted by touching “Route”. (See “ — Deleting destinations” on page 71.)

Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

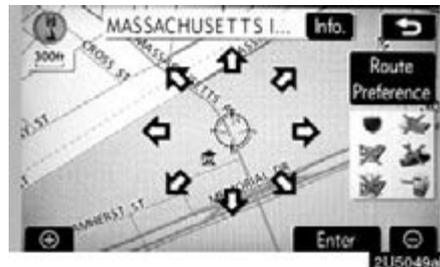

1. When an arrow facing the desired point is touched, the map scrolls in that direction.

Releasing the finger from the arrow will stop the scrolling.

2. Touch “Enter”.

The system starts route search and displays recommended routes.

If there is already a set destination, “Add to ” and “Replace ” are displayed.


“Add to ”: To add a destination.

“Replace ”: To delete the existing destinations and set a new one.

“Route Preference”: To change the route preference. (See page 61.)

“Info.”: If this button is displayed on the top of the screen, touch it to view items such as name, address, and phone number.

DESTINATION SEARCH

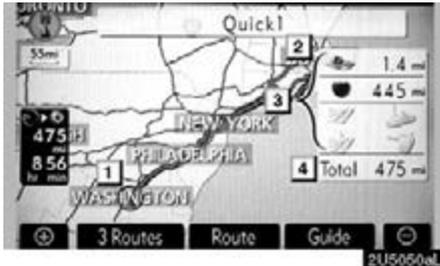

- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, touch "Guide".

"3 Routes": To select the desired route from three possible routes. (See page 61.)

"Route": To change the route. (See pages 70 and 72.)

INFORMATION

- *Guidance can be suspended or resumed. (See "Suspending and resuming guidance" on page 86.)*
- *If "Guide" is touched until a beep sounds, demo mode will start. Push the "MAP/VOICE" button to finish Demo mode.*
- *The route for returning may not be the same as that for going.*
- *The route guidance to the destination may not be the shortest route nor a route without traffic congestion.*
- *Route guidance may not be available if there is no road data for the specified location.*
- *When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.*
- *If a destination is entered, the road nearest to the point you selected is set as the destination.*

CAUTION

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may provide incorrect information.

- To change the route before starting guidance

ROUTE PREFERENCE



1. You can change route preference by touching "Route Preference".



2. Select the desired route preference by touching the button.

When searching for a route, the system will avoid routes when the indicator is off.

3. After choosing the desired route preference, touch "OK".


INFORMATION

- Even if the "Allow Freeway" indicator is dimmed, the route cannot avoid including a freeway in some cases.
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

3 ROUTES SELECTION



1. To select the desired route from three routes, touch "3 Routes".

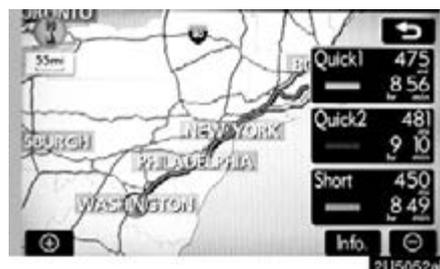

2. Touch "Quick1", "Quick2" or "Short" to select the desired route.

- "Quick1": Recommended route. This route is indicated by an orange line.
- "Quick2": Alternative route. This route is indicated by a purple line.
- "Short": A route by which you can reach the destination in the shortest distance. This route is indicated by a green line.
- "Info.": To display the following information about each of the 3 routes.

DESTINATION SEARCH

	Quick1	Quick2	Short
1	7h 59min	9h 36min	7h 58min
2	438 miles	527 miles	435 miles
3	17 miles	67 miles	17 miles
4	434 miles	52 miles	429 miles
5			

2US096al

- 1** Time necessary for the entire trip
- 2** Distance of the entire trip
- 3** Toll road
- 4** Freeway
- 5** Ferry

SECTION 3

ROUTE GUIDANCE

Route guidance

- Route guidance screen 64
- Typical voice guidance prompts 67
- Distance and time to destination 69
- **Setting and deleting destination** 70
 - Adding destinations 70
 - Reordering destinations 70
 - Deleting destinations 71
- **Setting route** 72
 - Search condition 72
 - Detour setting 73
 - Route preference 75
 - Starting route from adjacent road 75
- **Map view** 76
 - Display POI* icons 76
 - Route overview 78
 - Route preview 79
 - Route trace 80

*: Point of Interest

Route guidance screen

During route guidance, various types of guidance screens can be displayed depending on conditions.

- **Screen layout**



- 1 Distance to the next turn and the arrow indicating turning direction
- 2 Current street name
- 3 Distance and travel/arrival time to the destination
- 4 Current position
- 5 Guidance route

INFORMATION

- *If the vehicle goes off the guidance route, the route is searched again.*
- *For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select road that should not be traveled on.*
- *When you arrive at your destination, the destination name will be displayed on the top of the screen. Touching "OFF" clears the display.*

- **During freeway driving**

During freeway driving, the freeway exit information screen will be displayed.

This screen displays the distance to the next junction and exit, or POIs in the vicinity of the freeway exit.



- 1 Current position
- 2 Points of Interest that are close to a freeway exit
- 3 Exit number and junction name
- 4 Distance from the current position to the exit or junction
- 5 Current street name

- ⓘ: To display the selected map of the exit vicinity.
- ▲: To scroll for farther junctions or exits.
- ▼: To scroll for closer junctions or exits.
- ⊞: To scroll for the closest three junctions or exits.

- **When approaching a freeway exit or junction**

When the vehicle approaches an exit or junction, the guidance screen for the freeway will be displayed.



- 1 Road/area name
- 2 Distance from the current position to the exit or junction
- 3 Current position

“OFF”: The guidance screen on freeway disappears and the map screen appears.

When touching  or pushing the “MAP/VOICE” button, the guidance screen on freeway reappears.

- **When approaching an intersection**

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.



- 1 Next street name
- 2 Distance to the intersection
- 3 Current position

“OFF”: The intersection guidance screen disappears and the map screen appears.

When touching  or pushing the “MAP/VOICE” button, the intersection guidance screen reappears.

ROUTE GUIDANCE

- **Other screens**

TURN LIST SCREEN

On this screen, the list of turns on the guidance route can be viewed.

Touching  during guidance displays the turn list.



- 1 Next street name or destination name
- 2 Turn direction
- 3 Distance between turns
- 4 Current street name

ARROW SCREEN

On this screen, information about next turns on the guidance route can be viewed.


Touching  during guidance displays the arrow screen.




- 1 Exit number, street name containing number or next street name
- 2 Turn direction
- 3 Distance to the next turn
- 4 Current street name

Typical voice guidance prompts

The voice guidance provides various messages as you approach an intersection, or other point where you need to maneuver the vehicle.

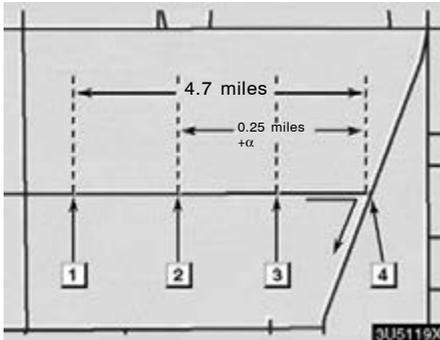

- 1 "Proceed about 5 miles."
- 2 "In a quarter of a mile, right turn."
- 3 "Right turn."
- 4 (Beep sound only)

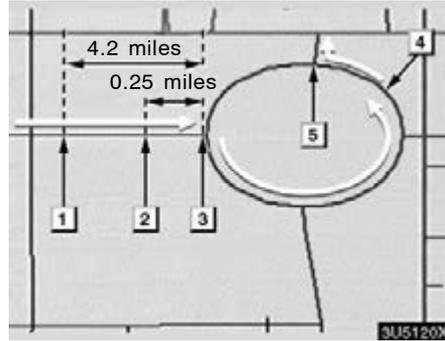


- 1 "Proceed about 4 miles to the traffic circle."
- 2 "In a quarter of a mile, traffic circle ahead, and then 3rd exit ahead."
- 3 "The 3rd exit ahead."
- 4 "The exit ahead."
- 5 (Beep sound only)

INFORMATION


On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver.

ROUTE GUIDANCE

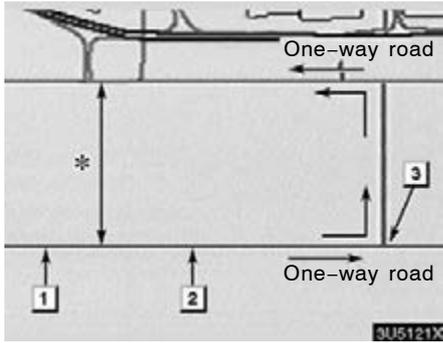

*: The system indicates a U-turn if the distance between two one-way roads (of opposite directions) is less than 50 feet (15 m) in residential areas or 164 feet (50 m) in non-residential areas.

- 1  "In half of a mile, make a legal U-turn."
- 2  "Make a legal U-turn ahead."
- 3  (Beep sound only)

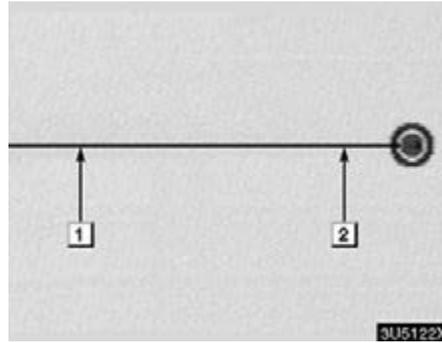


The system announces the approach to the final destination.

- 1  "Your destination is ahead."
- 2  "You have arrived at your destination. The route guidance is now finished."

INFORMATION

- *If the system cannot determine the current vehicle position correctly (in cases of poor GPS signal reception), the voice guidance may be made early or delayed.*
- *If you did not hear the voice guidance command, push the "MAP/VOICE" button to hear it again.*
- *To adjust the voice guidance volume, see "Volume" on page 87.*

Distance and time to destination

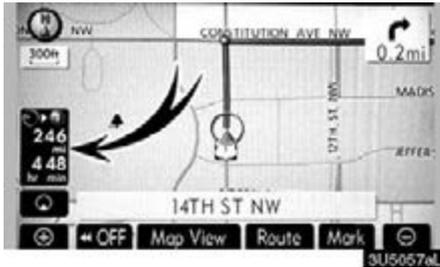

When the vehicle is on the guidance route, the distance and the estimated travel/arrival time to the destination are displayed. When the vehicle is not on the guidance route, the distance and the direction of the destination are displayed.

When driving on the guidance route and more than one destination is set, the distance and the estimated travel/arrival time from the current position to each destination are displayed.

1. Touch this button to display the following screen.



2. Touch the number button to display the desired destination.

The distance, the estimated travel time and the estimated arrival time from the current position to the selected destination are displayed.



Estimated travel time is displayed.



Estimated arrival time is displayed.



To switch to estimated arrival time.



To switch to estimated travel time.



Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

INFORMATION

When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time is calculated based on the set vehicle speed information. (See page 105.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.

ROUTE GUIDANCE

Setting and deleting destination — — Adding destinations

Adding destinations and searching again for the routes can be done.



1. Touch “Route”.



2. Touch “Add”.

3. Input an additional destination in the same way as the destination search. (See “Destination search” on page 39.)



4. Touch the desired “Add” to determine the arrival order of the additional destination.

— Reordering destinations

When more than one destination is set, you can change the arrival order of the destinations.



1. Touch “Route”.



2. Touch “Reorder”.



3. Select the destination in the order of arrival by touching the destination button.

Reordered number of arrival is displayed on the right side of the screen.

Touching **“Undo”** will cancel each selected order number from the previously input number.

4. After selecting the destinations, touch “OK”.

The system searches for the guidance route again, and displays the entire route. Even if **“OK”** is not touched, the entire route is displayed automatically within a few seconds when the order is fixed.

— Deleting destinations

A set destination can be deleted.



1. Touch “Route”.




2. Touch “Delete”.

When more than one destination is set, a list will be displayed on the screen.

Setting route — — Search condition

You can designate the route conditions of the route to the destination.

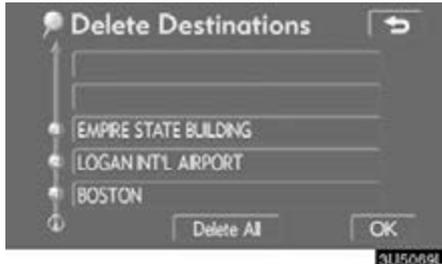

3. Touch the destination for deletion.

“Delete All”: To delete all destinations on the list.

A message appears to confirm the request to delete.

4. To delete the destination(s), touch **“Yes”**.

If **“Yes”** is touched, the data cannot be recovered.

If **“No”** is touched, the previous screen will return.

5. If more than one destination is set, touch **“OK”** after deleting the destinations.

The system searches for the guidance route again, and displays the entire route.




1. Touch **“Route”**.



2. Touch **“Search Condition”**.



3. Touch **“Quick”, “Quick1”, “Quick2”** or **“Short”** and touch **“OK”**.

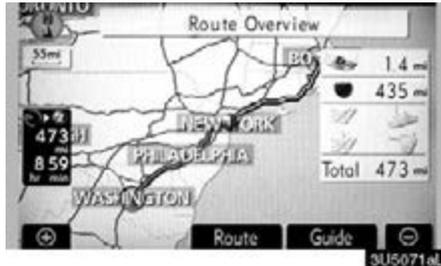

The entire route from the starting point to the destination is displayed.

“**Guide**”: To start guidance.

“**Route**”: To change a route. (See pages 70 and 72.)

— Detour setting

While the route guidance is operating, you can change the route to detour around a section of the route where a delay is caused by road repairs, or an accident, etc.



1. Touch “Route”.



2. Touch “Detour”.


ROUTE GUIDANCE



3. Select the button below to select the desired detour distance.

“1 mile (km)”, “3 miles (km)” or “5 miles (km)”: Touch one of these buttons to start the detour process. After detouring, the system returns to the original guidance route.

“Whole Route”: By touching this button, the system will calculate an entire new route to the destination.

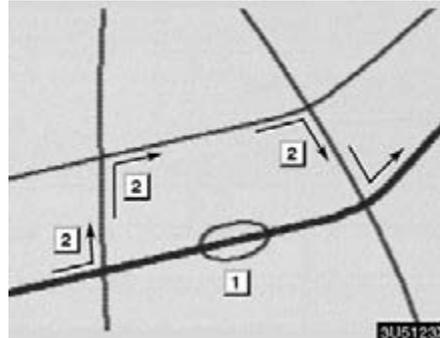

This picture shows an example of how the system would guide around a delay caused by a traffic jam.

- 1 This position indicates the location of a traffic jam caused by road repairs or an accident.
- 2 This route indicates the detour suggested by the system.

INFORMATION

- *When your vehicle is on a freeway, the detour distance selections are 5, 15, and 25 miles (km).*
- *The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.*

— Route preference

A number of choices are provided on the conditions which the system uses to determine the route to the destination.



1. Touch “Route”.



2. Touch “Route Preference” to change the conditions that determine the route to the destination.



3. Select the desired route preference by touching the button.

When searching for a route, the system will avoid routes when the indicator is off.

4. After choosing the desired route preference, touch “OK”.

— Starting route from adjacent road

You can start the route guidance from the adjacent road.

(ex. When route guidance is set on the freeway, but the vehicle is driven parallel along the freeway.)



1. Touch “Route”.



2. Touch “Start from Adjacent Road”.

When there is no adjacent road, this button will not be displayed.

Map view — — Display POI icons

Points of Interest such as gas stations and restaurants can be displayed on the map screen. You can also set their location as a destination and use them for route guidance.



1. Touch “Map View”.



2. Touch “Display POI Icon” to display a particular type of Point of Interest on the screen.



A screen with a limited choice of Points of Interest will be displayed. (To change the displayed POI, see page 107.)

- **Selecting POIs to be displayed**

Up to 5 categories of icons can be displayed on the screen.



Touch the desired Point of Interest category to display POI location symbols on the map screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

To turn off the Points of Interest icon on the map screen, touch “Delete”.

“Other POIs”: If the desired Point of Interest can not be found on the limited choice screen, touch this button.

“Local POI List”: When searching for the nearest Point of Interest, touch this button. Then choose one of the categories. The system will list the points within 20 miles (32 km). (See page 77.)

Touch “Other POIs” on the “Display POI icons” screen.

When a Point of Interest category is selected from either the limited list or the complete list, the screen will display symbols of those locations on the map screen.



Select the desired POI categories.

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.



Select the desired POI categories from the list.

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

To return to the POI category selection screen, touch “More”.

● **To display the local POI list**

Points of Interest that are within 20 miles (32 km) of the current position will be listed from among the selected categories.



1. Touch “Local POI List” on the “Display POI icons” screen.



2. Touch the button of the desired Point of Interest.

The selected Points of Interest are displayed on the map screen.

“On Route”: When the indicator is illuminated by touching this button, the list of the items searched along the route is displayed.

ROUTE GUIDANCE

- **To set a POI as a destination**

You can select one of the Points of Interest icons on the map screen as a destination and use it for route guidance.



1. **Directly touch the Point of Interest icon that you want to set as a destination.**

The map will shift so that the icon is centered on the screen and overlaps with the cursor. At this time, the distance from the current position is displayed on the screen. The distance shown is measured as a straight line from the current vehicle position to the POI.

2. **When the desired Point of Interest overlaps with the cursor, touch “Enter”.**

The screen changes and displays the map location of the selected destination and route preference. (See “Starting route guidance” on page 59.)

— Route overview



1. **Touch “Map View”.**



2. **Touch “Route Overview”.**



The entire route from the current position to the destination is displayed.

“**Guide**”: To start guidance.

“**Route**”: To change the route. (See pages 70 and 72.)

“**Turn List**”: The following screen displays the list of the roads up to the destination.

— Route preview



You can scroll through the list of roads by touching  or . However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through two or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

 These marks indicate the direction in which you should turn at an intersection.

Touch “Map” on the “Turn List” screen.

The point which you choose is displayed on the map screen.



1. Touch “Map View”.



2. Touch “Route Preview”.

ROUTE GUIDANCE



-  : To indicate the next destination.
-  : To preview the route to the next destination.
-  : To preview the route to the next destination in fast-forward mode.
-  : To stop the preview.
-  : To review the route to the previous destination or starting point.
-  : To review the route to the previous destination or starting point in fast-forward mode.
-  : To indicate the previous destination or starting point.

— Route trace

It is possible to store the traveled route up to 124 miles (200 km) and retrace the route on the display.

INFORMATION

This feature is available on the map with more detailed map scale than 30 miles (50 km).



Touch “Map View”.



“**Record**” : To start recording the route trace.

“**Stop**” : To stop recording the route trace.

If you touch “**Stop**” to display the following screen.



Touching “**Yes**” stops recording and the route trace remains displayed on the screen.

Touching “**No**” stops recording and the route trace is erased.

ROUTE GUIDANCE

SECTION 4


ADVANCED FUNCTIONS

Descriptions of functions for more effective use

- Quick reference (“Menu” screen) 84
- Quick reference (“Setup” screen) 85
- Suspending and resuming guidance 86
- Volume 87
- User selection 88
- **My places** 91
 - Registering memory points 92
 - Editing memory points 93
 - Deleting memory points 97
 - Registering home 98
 - Deleting home 99
 - Registering area to avoid 99
 - Editing area to avoid 100
 - Deleting area to avoid 103
 - Deleting previous points 103
- Setup 104

Quick reference (“Menu” screen)


The “Menu” screen allows effective use of the navigation system. To display the “Menu” screen, push the “MENU” button.

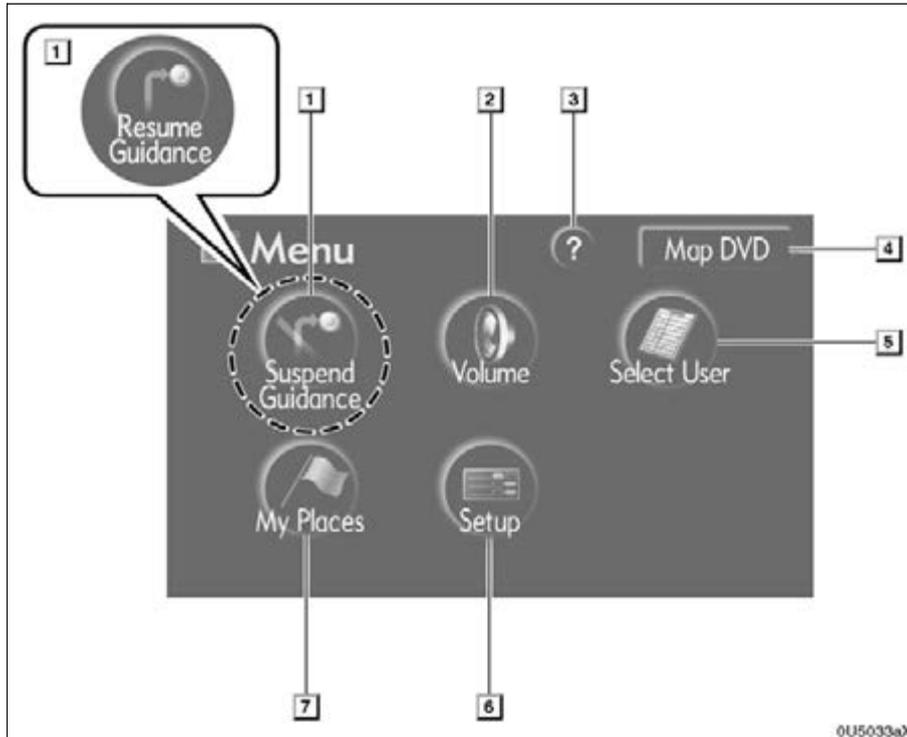

- | | |
|---|---|
| <p>1 “Suspend Guidance” and “Resume Guidance”
Suspends or resumes guidance. 86</p> <p>2 “Volume”
Sets the volume for voice guidance.
..... 87</p> <p>3 “?”
Function help for the “Menu” screen can be viewed on this screen. 26</p> <p>4 “Map DVD”
Displays information regarding the disc version or covered area. 149</p> | <p>5 “Select User”
Up to 3 different settings for different users can be memorized. 88</p> <p>6 “Setup”
Enables various settings for the navigation system. 85, 104</p> <p>7 “My Places”
Enables changes to “Memory points”, “Home” and “Areas to avoid”. Enables deletion of the previous point. 91</p> |
|---|---|

Quick reference (“Setup” screen)

The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button and touch “Setup”.

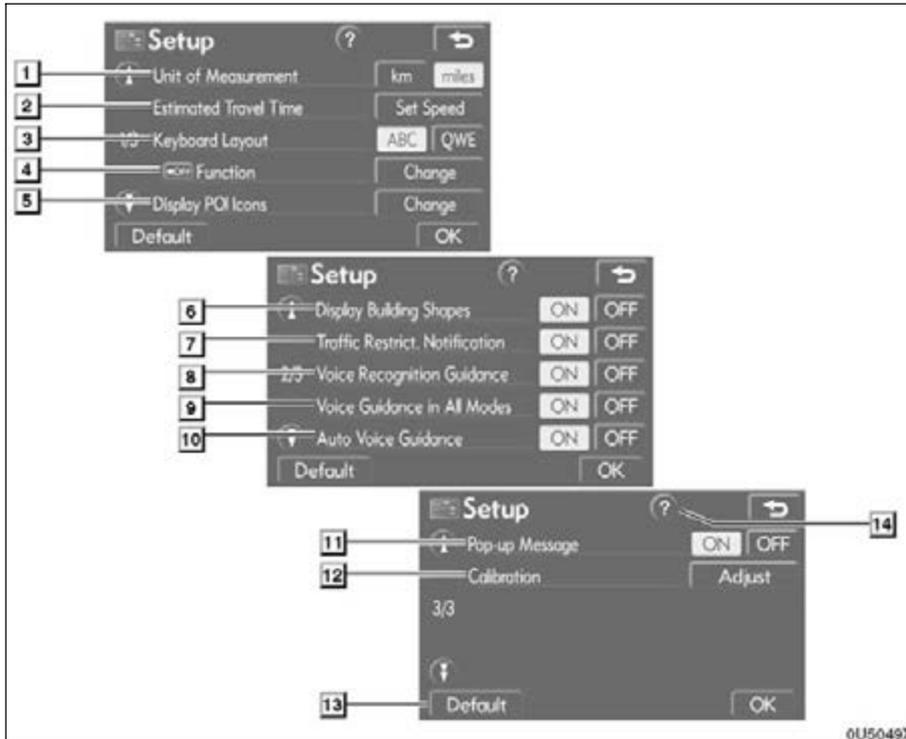

- | | |
|---|--|
| <p>1 “Unit of Measurement”
The distance units “km” or “miles” can be selected. 104</p> <p>2 “Estimated Travel Time”
The system to display the travel time and the arrival time to the destination on the route guidance screen can be set. 105</p> <p>3 “Keyboard Layout”
Key layout can be changed. 106</p> <p>4 “Function”
The choice whether to display each touch-screen button and current street name on the map screen can be set. 107</p> | <p>5 “Display POI Icons”
A selection of 6 icons displayed on the “Display POI Icons” top screen is possible. 107</p> <p>6 “Display Building Shapes”
Selection of either ON or OFF to display the building shape on the map screen is possible. 108</p> <p>7 “Traffic Restrict. Notification”
Notification of seasonal restrictions can be selected. 109</p> <p>8 “Voice Recognition Guidance”
Voice recognition guidance can be set. 109</p> |
|---|--|

- 9** “Voice Guidance in All Modes”
 Voice guidance can be set in all modes. 110
- 10** “Auto Voice Guidance”
 Automatic voice guidance can be set. 110
- 11** “Pop-up Message”
 Selection of either ON or OFF to display the pop-up message is possible. 111
- 12** “Calibration”
 Adjustment of the current vehicle position mark can be done manually. 112
- 13** “Default”
 This touch-screen button initializes all of the settings. 104
- 14** “?”
 Function help for the “Setup” screen can be viewed. 26

Suspending and resuming guidance

- To suspend guidance



1. Push the “MENU” button.



2. Touch “Suspend Guidance”.

INFORMATION

Without route guidance, “Suspend Guidance” cannot be used.



The screen will return to the current position map without route guidance.

- **To resume guidance**

1. Push the “MENU” button.



2. Touch “Resume Guidance”.



The screen will change to the current position map with route guidance.

Volume


The voice guidance volume can be adjusted or switched off.



1. Push the “MENU” button.



2. Touch “Volume”.

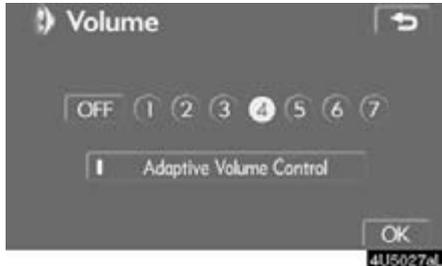

To adjust the volume, select the desired level by touching the appropriate number. If voice guidance is not needed, touch “OFF” to disable the feature.

When selected the number or “OFF” will be highlighted.

3. Touch “OK” to confirm your selection.

INFORMATION

During route guidance, the voice guidance continues even if the navigation screen is changed to other screens.

“Adaptive Volume Control”: By turning “Adaptive Volume Control” on, the volume is turned up automatically when the vehicle speed exceeds 50 mph (80 km/h).

To turn the “Adaptive Volume Control” system on, touch the button. The indicator will be highlighted.

User selection

The system can memorize the following settings for up to three users.

- Map direction
- Map scale
- Map configuration
- Guidance mode
- Setup
- Volume
- Language
- Route trace
- Travel time/arrival time
- Right screen of dual map
- Road preference
- Maintenance notification




1. Push the “MENU” button.



2. Touch “Select User”.

● To register

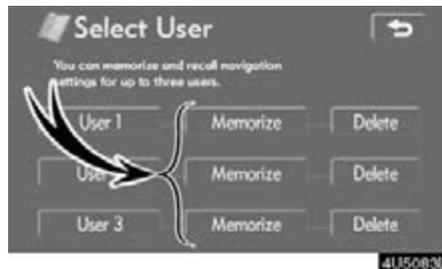

1. Touch “Memorize”.

The confirmation screen will be displayed.



2. To register, touch “Yes”. To return to the previous screen, touch “No” or .


When a button that is already registered is touched, the following screen appears.



To replace, touch “Yes”. To cancel the replacement, touch “No” or .

ADVANCED FUNCTIONS

- To change user

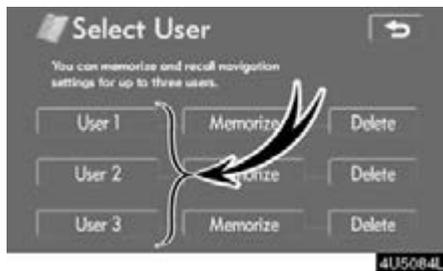


Touch "User number".



The above message appears, then the map screen will be displayed.

- To delete user

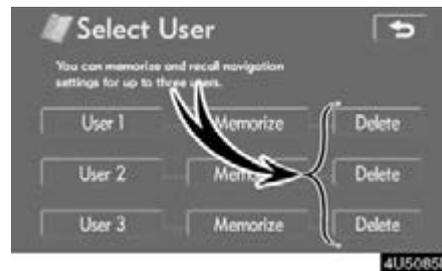

1. Touch "Delete".

The confirmation screen will be displayed.



2. To delete, touch "Yes". To return to the previous screen, touch "No" or




My places —

Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “ — Destination search by Home” on page 42, “ — Destination search by Quick access” on page 42 and “ — Designation search by Memory” on page 54.)

Registered areas are avoided at the time of route search.

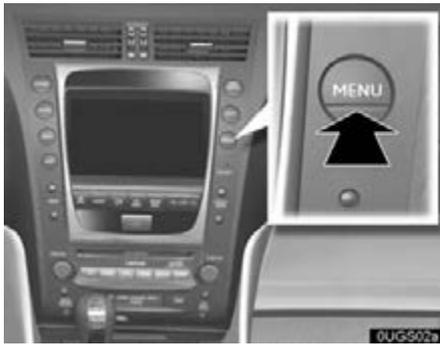

1. Push the “MENU” button.



2. Touch “My Places”.



On this screen, the following operations can be performed.

- 1 **Registers memory points**
(See “ — Registering memory points” on page 92.)
- 2 **Edits memory points**
(See “ — Editing memory points” on page 93.)
- 3 **Deletes memory points**
(See “ — Deleting memory points” on page 97.)
- 4 **Registers or deletes home**
(See “ — Registering home” on page 98 or “ — Deleting home” on page 99.)
- 5 **Registers areas to avoid**
(See “ — Registering area to avoid” on page 99.)
- 6 **Edits areas to avoid**
(See “ — Editing area to avoid” on page 100.)
- 7 **Deletes areas to avoid**
(See “ — Deleting area to avoid” on page 103.)
- 8 **Deletes previous points**
(See “ — Deleting previous points” on page 103.)
- 9 **Number of remaining memory points**
- 10 **Number of remaining areas to avoid**

— Registering memory points

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Register”.



4. Enter the location in the same way as for a destination search. (See “Destination search” on page 39.)

After memory point registration is completed, the “Memory Point” screen will be displayed.



5. Touch “OK”.

To edit registered information, see “— Editing memory Points” on page 93.

INFORMATION

Up to 106 memory points can be registered.


— Editing memory points

The icon, attribute, name, location and/or telephone number of a registered memory point can be edited.

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Edit”.

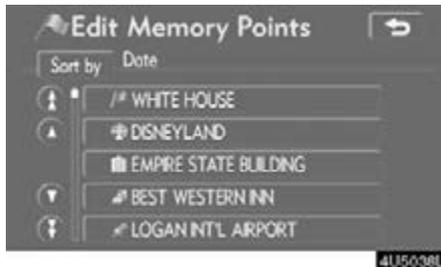

4. Touch the desired memory point button.



5. Touch the button to be edited.

“Icon”: To select icons to be displayed on the map. (See page 94.)

“Quick Access”: To set an attribute. Memory points with a set attribute can be used as a “Quick access” or “Home” button. (See page 95.)

“Name”: To edit memory point names. The names can be displayed on the map. (See page 96.)

“Location”: To edit location information. (See page 96.)

“Phone #”: To edit telephone numbers. (See page 97.)

6. Touch “OK”.

ADVANCED FUNCTIONS

- To change “Icon”

1. Touch “Icon” on the “Memory Point” screen.



2. Touch the desired icon.

Turn the page by touching “Page 1”, “Page 2” or “with Sound”.

SOUND ICONS

When the vehicle approaches the memory point, the selected sound will be heard.

1. Touch “with Sound” on the “Change Icon” screen.



2. Touch the desired sound icon.

The next screen appears when “Bell (with Direction)” is touched.



Touch either  or  to adjust the direction. Touch “Enter”.

The bell sounds only when the vehicle approaches this point in the direction that has been set.

● **To change “Quick Access”**

It is possible to change attributes of the quick access points. Memory points with a set attribute can be used as a “Quick Access” or “Home” touch-screen button. (See “ — Destination search by Home” on page 42 and “ — Destination search by Quick access” on page 42.)

1. Touch “Quick Access” on the “Memory Point” screen.



2. Touch the desired attribute.

It is possible to replace a registered attribute.



3. To replace the attribute, touch “Yes”. To return to the previous screen, touch “No” or .


INFORMATION

One “Home” and five “Quick Access” can be set.

DELETING “Quick Access”



1. Touch “Del.”.

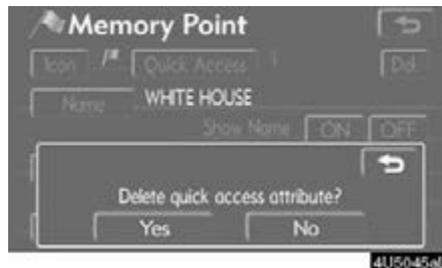

2. To delete an attribute, touch “Yes”. To return to the previous screen, touch “No” or .

ADVANCED FUNCTIONS

- To change “Name”

1. Touch “Name” on the “Memory Point” screen.



2. Enter the name using the alphanumeric keys.


Up to 24 letters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

DISPLAYING MEMORY POINT NAMES

The name of a memory point that may be displayed on the map can be set.

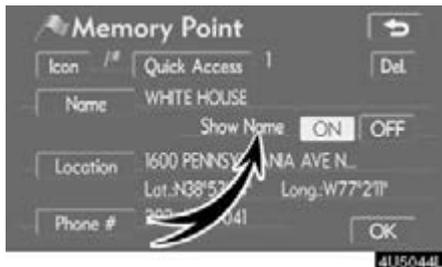

To show the name, touch “ON” on the “Memory Point” screen. To not show it, touch “OFF”.

- To change “Location”

1. Touch “Location” on the “Memory Point” screen.



2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch “Enter”.

The previous screen will be displayed.

- To change “Phone #” (telephone number)

1. Touch “Phone #” on the “Memory Point” screen.



2. Enter the number using number keys.

3. Touch “OK”.


The previous screen will be displayed.

— Deleting memory points

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete”.

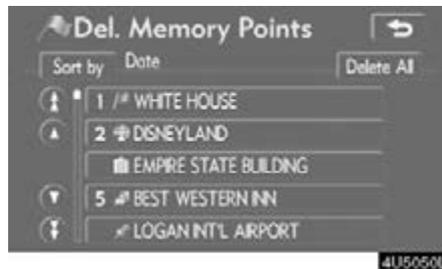

4. Touch the button to be deleted.

“Delete All”: To delete all memory points in the system.

5. To delete the memory point, touch “Yes”. To cancel the deletion, touch “No”.

— Registering home

If home has been registered, that information can be recalled by using the “Home” touch-screen button on the “Destination” screen. (See “— Destination search by Home” on page 42.)

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Register”.



4. Enter the location in the same way as for a destination search. (See “Destination search” on page 39.)

When registration of home is completed, the “Memory Point” screen will be displayed.



5. Touch “OK”.

To edit registered information, see “— Editing memory points” on page 93.

— Deleting home

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete”.
4. To delete home, touch “Yes”. To cancel the deletion, touch “No”.

— Registering area to avoid

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Register”.



4. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “Destination search” on page 39.)



5. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.
6. Touch “Enter”.

ADVANCED FUNCTIONS



7. Touch either  or  to change the size of the area to be avoided.

8. Touch “OK”.

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid. If there are 10 locations already registered, the following message will be displayed: “Unable to register additional points. Perform operation again after deleting unnecessary points.”


— Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Edit”.

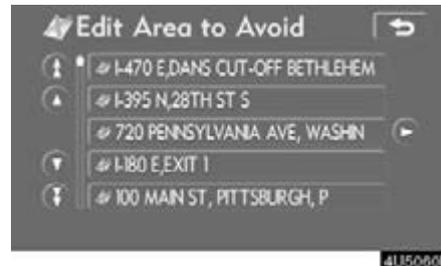

4. Touch the desired area button.

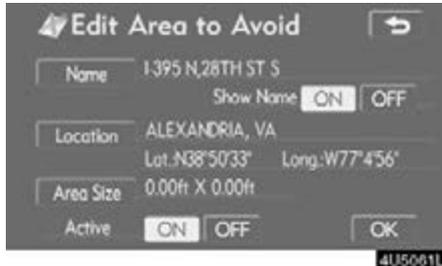

5. Touch the button to be edited.

“Name”: To edit the name of the area to avoid. The names can be displayed on the map. (See page 101.)

“Location”: To edit area location. (See page 102.)

“Area Size”: To edit area size. (See page 102.)

“Active”: To turn on or off the area to avoid feature. To turn on the feature touch **“ON”** on the “Edit Area to Avoid” screen. To turn off the feature touch **“OFF”** on the “Edit Area to Avoid” screen.

6. Touch “OK”.

● **To change “Name”**

1. Touch “Name” on the “Edit Area to Avoid” screen.



2. Enter the name using alphanumeric keys.

Up to 24 letters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

DISPLAYING NAMES OF AREAS TO BE AVOIDED

The name of an area to be avoided that may be displayed on the map can be set.



To show the name, touch **“ON”** on the “Edit Area to Avoid” screen. To not show it, touch **“OFF”**.

ADVANCED FUNCTIONS

- To change “Location”

1. Touch “Location” on the “Edit Area to Avoid” screen.



2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.
3. Touch “Enter”.

The previous screen will be displayed.

- To change “Area Size”

1. Touch “Area Size” on the “Edit Area to Avoid” screen.



2. Touch either  or  to change the size of the area to be avoided.
3. Touch “OK”.

The previous screen will be displayed.

— Deleting area to avoid

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete”.



4. Touch the button to be deleted.
 “Delete All”: To delete all registered areas to avoid in the system.
5. To delete the area, touch “Yes”. To cancel the deletion, touch “No”.


— Deleting previous points

The previous destination can be deleted.

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete Previous Points”.

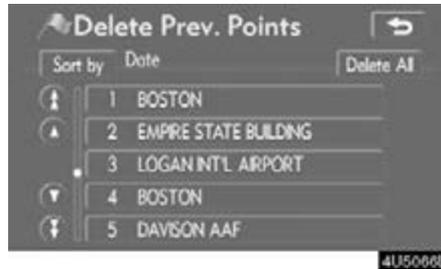

4. Touch the button you want to delete.
 “Delete All”: To delete all previous points in the system.



5. To delete the point, touch “Yes”. To cancel the deletion, touch “No”.

Setup

Setting the items shown on the “Setup” screen can be done. (See page 85.)



1. Push the “MENU” button.



2. Touch “Setup”.



3. Touch the items to be set.

4. Touch “OK”.

The previous screen will be displayed.


INFORMATION

To reset all setup items, touch “Default”.

- **Unit of measurement**

Unit of measurement can be changed.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

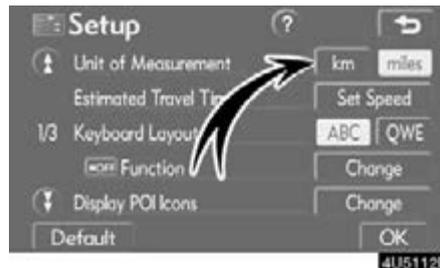

3. Touch “km” or “miles” of “Unit of Measurement” to choose the distance unit.

The selected button is highlighted.

4. Touch “OK”.


INFORMATION

This function is available only in English or Spanish. To switch language, see “Selecting a language” on page 134.

● **Estimated travel time**

The speed that is used for the calculation of the estimated travel time and the estimated arrival time can be set.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

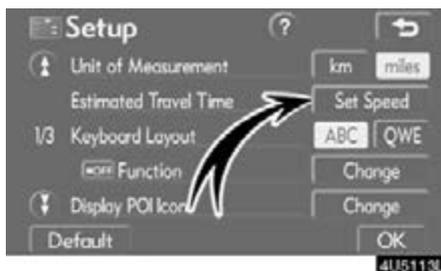

3. Touch “Set Speed” of the “Estimated Travel Time”.



4. Touch ◀ or ▶ to set the average vehicle speeds for “Residential”, “Main street”, and “Freeway”.

To set the default speeds, touch “Default”.

5. After setting of the desired speeds is completed, touch “OK”.

INFORMATION

- *The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.*
- *The time shown on the screen may vary greatly depending on progress along the route, which may be affected by road conditions such as traffic jams, and construction work.*
- *It is possible to display up to 99 hours 59 minutes.*


ADVANCED FUNCTIONS

- **Input key layout**

Key layout can be changed.

1. Push the “MENU” button.

2. Touch “Setup” on the “Menu” screen.

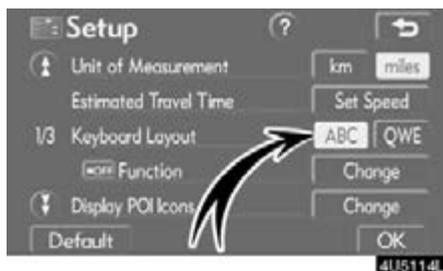

3. Touch “ABC” or “QWE” of “Keyboard Layout” to choose the input key layout.

LAYOUT TYPE



► “ABC” type



► “QWE” type


The selected button is highlighted.

4. Touch “OK”.

- **Screen layout function (MENU Function)**

Each touch-screen button and current street name on the map screen can be displayed or hidden.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

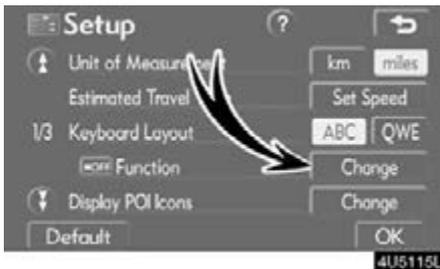

3. Touch “Change” of “MENU Function”.




4. Touch the button to be turned off. The button becomes dimmed.
- To set the default, touch “Default”.
5. Touch “OK”.

- **POI category change (Display POI Icons)**

Select from among the 6 icons displayed on the “Display POI Icons” top screen, so that setting of the icons to be displayed on the map screen can be done easily.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

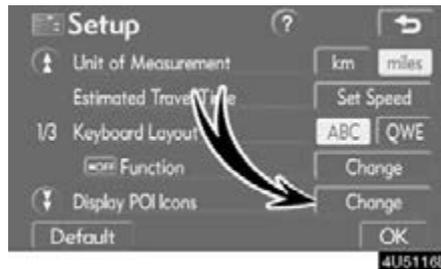

3. Touch “Change” of “Display POI Icons”.



4. Touch the category button to be changed.

ADVANCED FUNCTIONS



5. Touch the category button to be displayed on the “Display POI Icons” top screen.

6. Touch “OK”.

● Display of building shape

When the “Display Building Shapes” feature is turned on, the system will display the building shape on the map screen using a scale of 150 feet (50 m) to 300 feet (100 m).

To turn the “Display Building Shapes” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  to display page 2 of the “Setup” screen.



3. Touch “ON” of “Display Building Shapes”.

The selected button is highlighted.

4. Touch “OK”.

● **Notifying traffic restriction**

When the “Traffic Restrict. Notification” feature is turned on, the system notifies you of traffic or seasonal restrictions.

To turn the “Traffic Restrict. Notification” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Traffic Restrict. Notification”.

The selected button is highlighted.

4. Touch “OK”.

● **Voice recognition guidance**

When the “Voice Recognition Guidance” feature is turned on, the voice recognition guidance can be heard automatically.

To turn the “Voice Recognition Guidance” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Voice Recognition Guidance”.

The selected button is highlighted.

4. Touch “OK”.

ADVANCED FUNCTIONS

- **Voice guidance in all modes**

When the “Voice Guidance in All Modes” feature is turned on, the voice guidance in all modes can be heard.

When the “Voice Guidance in All Modes” feature is turned off, voice guidance cannot be heard when using the audio system.

To turn the “Voice Guidance in All Modes” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Voice Guidance in All Modes”.

The selected button is highlighted.

4. Touch “OK”.

- **Auto voice guidance**

When the “Auto Voice Guidance” feature is turned on, the voice guidance can be heard automatically.

When the “Auto Voice Guidance” feature is turned off, the voice guidance can be heard only if the “MAP/VOICE” button is pushed.

To turn the “Auto Voice Guidance” mode on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Auto Voice Guidance”.

The selected button is highlighted.

4. Touch “OK”.


● **Pop-up message**

When the “Pop-up Message” is turned on, the pop-up message will be displayed.

To turn the “Pop-up Message” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  twice to display page 3 of the “Setup” screen.

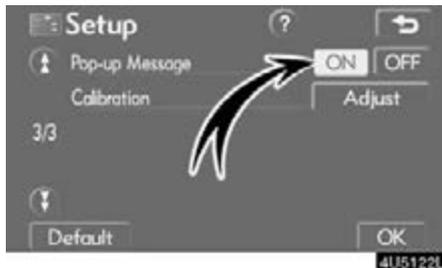

3. Touch “ON” of “Pop-up Message”.
The selected button is highlighted.
4. Touch “OK”.

When the “Pop-up Message” is turned off, the following messages will not be displayed.



This message appears when the system is in the POI mode and the map scale is 1 mile (1.6 km) or greater.



The message appears when the map is switched to the dual map screen mode.

ADVANCED FUNCTIONS

- **Current position/tire change calibration**

The current vehicle position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  twice to display page 3 of the “Setup” screen.



3. Touch “Adjust” of “Calibration”.




4. Touch the desired button.

INFORMATION


For additional information on the accuracy of a current vehicle position, see “Limitations of the navigation system” on page 138.

POSITION/DIRECTION CALIBRATION

When driving, the current vehicle position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, you can manually adjust the current vehicle position mark.

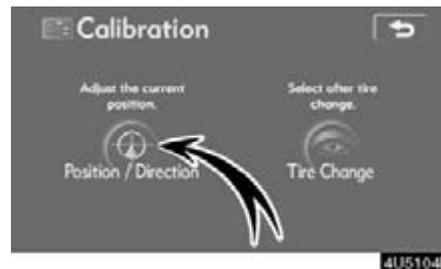


1. Touch “Position/Direction”.

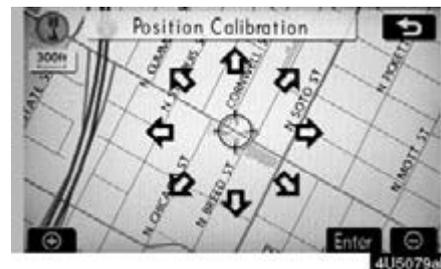

2. Touch the eight directional touch-screen button to move the cursor  to the desired point on the map.


3. Touch “Enter”.

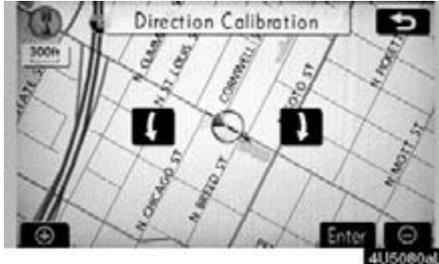

4. Touch either  or  to adjust the direction of the current vehicle position mark.
 5. Touch "Enter".
- The map screen will be displayed.

TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust the miscalculation caused by the circumference difference between the old and new tires. If this procedure is not performed when the tires are replaced, the current vehicle position mark may be incorrectly displayed.

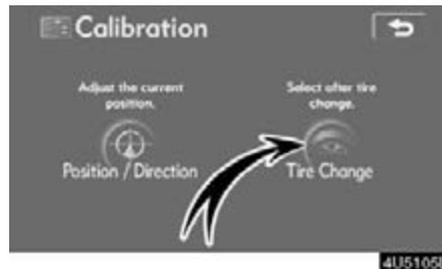

To perform a distance calibration procedure, touch "Tire Change" on the "Calibration" screen.

The message appears and the quick distance calibration is automatically started. A few seconds later, a map screen will be displayed.

ADVANCED FUNCTIONS

SECTION 5

OTHER FUNCTIONS

Other functions

- **Maintenance information** 116
 - Maintenance information setting 116
 - Dealer setting 118
- **Calendar with memo** 120
 - Adding a memo 122
 - Editing a memo 123
 - Memo list 123
- **Speech command system** 125
- **Help screen** 127
- **Clock adjustment** 128
- **Screen adjustment** 130
- **Screen setting** 131
- **Beep setting** 134
- **Selecting a language** 134

OTHER FUNCTIONS

Maintenance information — — Maintenance information setting

When the navigation System is turned on, the “Information” screen displays when it is time to replace a part or certain components. (See page 21.)



1. Push the “INFO” button.



2. Touch “Maintenance”.



3. Touch the desired button.

For details of each touch-screen button, see “INFORMATION ITEMS” on page 117.

“Delete All”: To cancel all conditions which have been inputted.

“Reset All”: To reset the item which has satisfied a condition.

“Set Dealer”: To register or edit dealer information. (See “ — Dealer setting” on page 118.)


If “ON” is selected, the system gives maintenance information with the “Information” screen when the system is turned on. (See page 21.)

If “OFF” is selected, the “Information” screen is disabled.

When the vehicle needs to be serviced, the touch-screen button color will change to orange.

INFORMATION ITEMS

- “ENGINE OIL”: Replace engine oil
- “OIL FILTER”: Replace engine oil filter
- “ROTATION”: Rotate tires
- “TIRES”: Replace tires
- “BATTERY”: Replace battery
- “BRAKE PAD”: Replace brake linings
- “WIPERS”: Replace wiper blades
- “LLC”: Replace engine coolant
- “BRAKE OIL”: Replace brake fluid
- “ATF”: Replace ATF (Automatic Transmission Fluid)
- “SERVICE”: Scheduled maintenance
- “AIR FILTER”: Replace air filter
- “PERSONAL”: New information items can be created separately from provided ones.

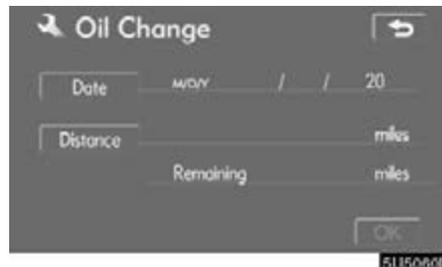

4. Input the conditions.

Notice of “Date”: The next maintenance date can be input.

Notice of “Distance”: The driving distance until the next maintenance check can be input.

“Delete”: To cancel the date and distance conditions.

“Reset”: To reset the date and distance conditions.

5. Touch “OK”.

The screen then returns to the “Maintenance” screen.

INFORMATION
<ul style="list-style-type: none"> ● <i>For scheduled maintenance information, please refer to the “Warranty and Service Guide/ Owner’s Manual Supplement/Scheduled Maintenance”.</i> ● <i>Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.</i>

— Dealer setting

It is possible to register a dealer in the system. With dealer information registered, route guidance to the dealer is available.

1. Push the “INFO” button.
2. Touch “Maintenance” on the “information” screen.
3. Touch “Set Dealer” on the “Maintenance” screen.



4. If the dealer has not been registered, enter the location of the dealer in the same way as for a destination search. (See “Destination search” on page 39.)

When “Set Dealer” registration is finished, the “Edit Dealer” screen will be displayed.



5. Touch the button to be edited.

“**Dealer**”: To enter the name of a dealer. (See page 119.)

“**Contact**”: To enter the name of a dealer member. (See page 119.)

“**Location**”: To set a location. (See page 119.)

“**Phone #**”: To set a telephone number. (See page 120.)

“**Delete Dealer**”: To delete the dealer information displayed on the screen.

“**Enter**”: To set the displayed dealer as a destination. (See “Starting route guidance” on page 59.)

- To edit “Dealer” or “Contact”

1. Touch “Dealer” or “Contact” on the “Edit Dealer” screen.



2. Enter the name using the alphanumeric keys.


Up to 24 letters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

- To edit “Location”

1. Touch “Location” on the “Edit Dealer” screen.

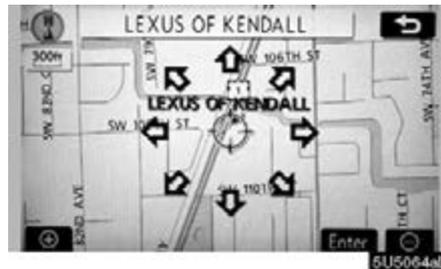

2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch “Enter”.

The previous screen will be displayed.

OTHER FUNCTIONS

- To edit “Phone #” (telephone number)

1. Touch “Phone #” on the “Edit Dealer” screen.



2. Enter the number using number keys.

3. Touch “OK”.

The previous screen will be displayed.

Calendar with memo —

It is possible to enter memos for particular dates on the calendar. The system informs you of the memo entry when the system is turned on. (See page 21.)


Memos can also be used for route guidance if the memo has been registered with location information.



1. Push the “INFO” button.



2. Touch “Calendar”.

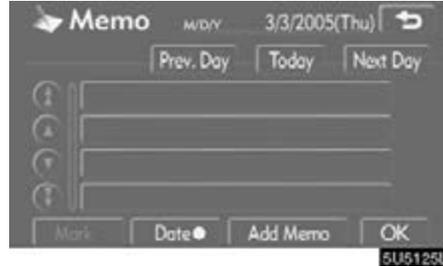

On this screen, the current date is highlighted in yellow.

▲M or **▼M**: To change month.

▲Y or **▼Y**: To change year.

“Today”: To display the current month calendar (if another month will be displayed).

“List”: To display the list of registered memos. (See “ — Memo list” on page 123.)

Touching a date button on the “Calendar” screen displays the “Memo” screen.

Memos can be edited by touching the list button. (See “ — Editing a memo” on page 123.)

“Add Memo”: To add a memo. (See “ — Adding a memo” on page 122.)

“Mark ○”: To change the color of the mark displayed next to the date. To default the mark color, touch **“Delete”** on the “Mark color” screen.

“Date ○”: To change the color of the date. To default the date color, touch **“Delete”** on the “Date color” screen.

“Prev. Day”: To go to the “Memo” screen of the previous date.

“Today”: To go to the “Memo” screen for the current day.

“Next Day”: To go to the “Memo” screen of the next date.

— Adding a memo

If a memo is added, the system informs of the memo entry when the system is started on the memo date. (See page 21.)

1. Push the “INFO” button.
2. Touch “Calendar” on the “information” screen.
3. Touch the date you want to add a memo on the “Calendar” screen.



4. Touch “Add Memo”.
- Up to 100 memos can be added.



5. Touch “Memo”.



6. Enter text using the keys.
- Up to 24 letters can be entered.
After entering the text, touch “OK” at the bottom right of the screen.




7. When registering information on the memo, touch “Location”.
- A screen similar to the destination search screen appears. Search the same way as searching a destination. (See “Destination search” on page 39.)

— Editing a memo

The registered memo can be edited.

1. Push the “INFO” button.
2. Touch “Calendar” on the “information” screen.
3. Touch the day you want to edit a memo on the “Calendar” screen.

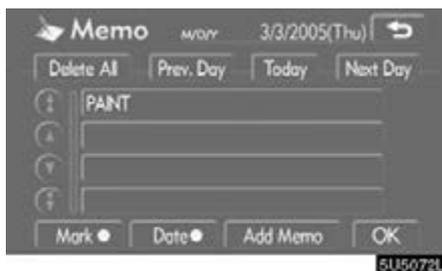

4. Touch the memo to be edited.



5. Touch the item to be edited.

“**Memo**”: To edit a memo. (See “ — Adding a memo” on page 122.)

“**Location**”: To change a registered location. (See “ — Adding a memo” on page 122.)

“**Enter**”: To set the registered location as a destination. (See “Starting route guidance” on page 59.)

“**Delete**”: To delete the memo.

— Memo list

It is possible to display a memo list by setting a condition.

1. Push the “INFO” button.
2. Touch “Calendar” on the “information” screen.
3. Touch “List” on the “Calendar” screen.



4. Touch the desired search condition to list the memos.

“**This Week**”: To display the list of memos for the current week.

“**This Month**”: To display the list of memos for the current month.

“**Future**”: To display a list of future memos.

“**Past**”: To display the list of past memos.

“**All**”: To display the list of all memos.

“**Period**”: To display the list of memos for a specified period. (See page 124.)

OTHER FUNCTIONS



5. To delete and/or edit the memo, touch the desired memo button.


“Delete All”: To delete all the displayed memos.

A message will be displayed.

6. To delete, touch “Yes”. To cancel the deletion, touch “No”.

● **To display memos for a specified period of time**

1. Touch “Period” on the “Memo Search” screen.

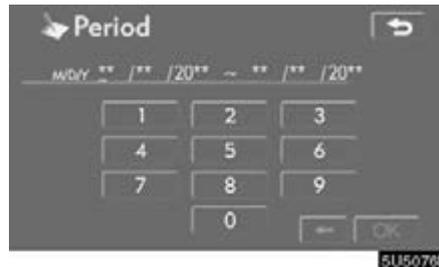

2. Enter the period using the numeral keys.

The period from January 1, 2005 through December 31, 2024 can be set for searching.

3. After setting the period, touch “OK”.

The “Memo List” screen will be displayed.

Speech command system

The speech command system enables you to operate the navigation system, audio system and air conditioning system (Fahrenheit [°F] models only) by giving a command.



1. Push the talk switch.

A beep sounds and on screen message is displayed with an indicator at the top left.



2. Give a command while an indicator is shown in the display.

If you want to check the command list, touch "Help" to display the help screen. (See "Help screen" on page 127.) When you touch "Cancel", the previous screen returns.

If the navigation system does not respond or the confirmation screen does not disappear, please push the talk switch and try again.

If no command is given, a beep sounds and the indicator disappears 6 seconds later.

If the system does not recognize your speech, the system will respond with this message ("System does not recognize this command, please rephrase your command."). Start the operation from the beginning.

OTHER FUNCTIONS



► Microphone

It is unnecessary to speak directly into the microphone when giving a command.

Speech command example: Searching for a route to your home.

1. Push the talk switch.
2. Say **"Home"**.

You can also say the street name or address.* (ex. say *"Woodridge Avenue"*.)

*: "Hawaii" or Hawaii area is not covered by the voice recognition.

If your home is not registered, you will hear "Home is not registered".



3. If the system recognized the command, the recognition result **"Home"** is displayed on the top of the screen with the screen message. (Displayed message and the touch-screen buttons on the screen depend on the situation.)

Touch or say *"Cancel"*, and the system will be canceled. Touch or say *"Help"*, and displays the "Help" screen.



4. Touch “Enter” or say “Enter destination”, and the system starts searching for a route to your home. (If the destination is already registered, “Add to ” or “Replace ” is displayed on the screen.)

Touch or say “Cancel”, and the search will be canceled.

When you search the destination by “POI Name”, this screen is displayed.



Touch “Enter” or say “Enter destination”.

When you touch “Show List”, you can search another spot in its category.

INFORMATION

In the following conditions, the system may not recognize the command properly and using speech commands may not be possible.

- *The command is not correct or clear. Note that certain words, accents, or speech patterns may be difficult for the system to recognize.*
- *There are some noises such as wind noise, etc.*

Help screen

This system has a function which displays the voice recognition help screen. You can see the command list and operating guide on it.

(a) Command list

1. If the “Operating Guide” screen is displayed, touch “Command List” on the upper side of the screen.



2. Select the desired category by touching the buttons on the right side of the “Command List” screen.


3. You can scroll through the list of the command list by touching  or .

Touch “OK” after you check it.

OTHER FUNCTIONS

(b) Operating guide

1. If the "Command List" screen is displayed, touch "Operating Guide" on the upper side of the screen.

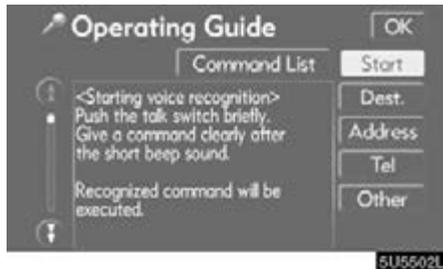

2. Select the desired category by touching the buttons on the right side of the "Operating Guide" screen.

3. You can scroll through the list of the operating guide by touching  or . Touch "OK" after you check it.

Clock adjustment


The clock in this system can be corrected manually or by using signals from the GPS. Daylight Saving Time setting or your desired time setting is available.



1. Push the "INFO" button.



2. Touch "Adjust Clock".

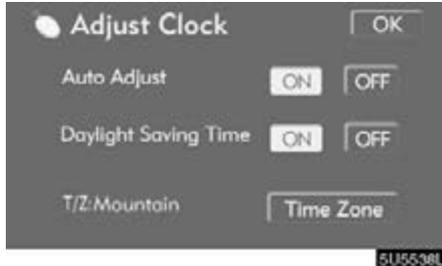

Auto Adjust ON: When you touch this switch, the time is set to the GPS clock, and this switch is highlighted in green.

Auto Adjust OFF: To reset the hour, touch the “H” switch. To reset the minute, touch the “M” switch. To adjust the time to the nearest hour, touch “:00” switch.

Daylight Saving Time: Daylight saving time can be set or canceled.

While daylight saving time is set, this switch is highlighted in green.

Time Zone: You can select the time zone. Touching this switch changes to the time zone selection screen.



Touch the switch of your desired area. The time zone for the area is set and the previous screen returns.




When you touch “Others”, this screen is displayed. Touch “▲” or “▼” to adjust the time zone and touch .

Screen adjustment

The brightness or contrast of the screen can be adjusted depending on the brightness of your surroundings. You can also turn the display off.



1. Push the “DISP” button.

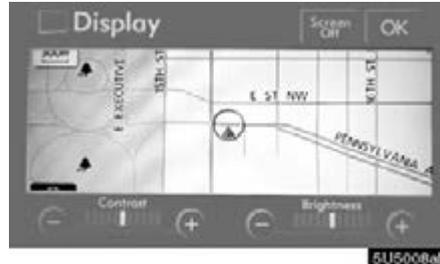

2. Touch the desired button to adjust contrast and brightness.

“Contrast” “+”: Strengthens the contrast of the screen.

“Contrast” “-”: Weakens the contrast of the screen.

“Brightness” “+”: Brightens the screen.

“Brightness” “-”: Darkens the screen.


3. After adjusting the screen, touch “OK”.

The screen goes off when “Screen Off” is touched. To turn the display screen back on, push any button such as “INFO”, etc. The selected screen appears.

INFORMATION

When you do not touch any button on the “Display” screen for 20 seconds, the previous screen will be displayed.

Screen setting

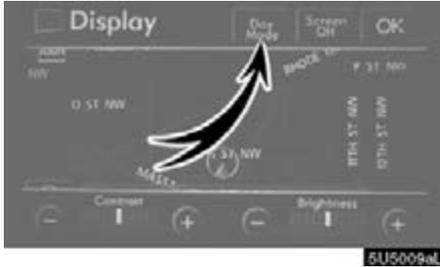

Depending on the position of the headlight switch, the screen changes to the day mode or night mode.

To display the screen in the day mode even with the headlight switch on, touch **“Day Mode”** on the adjustment screen for brightness and contrast control.

If the screen is set in the day mode with the headlight switch turned to on, this condition is memorized in the system even with the engine is turned off or the hybrid system is turned off.

When the instrument panel light control switch is set to MAX, **“Day Mode”** is not displayed.



1. Push the “INFO” button to display the “Information” screen.



2. Touch “Screen Setting”.

OTHER FUNCTIONS

(a) Automatic transition

You can select a function that enables automatic return to the navigation screen from the audio/air conditioner screen.




Select “ON” or “OFF” and then touch “OK”.

“ON”: The navigation screen automatically returns from the audio/air conditioner screen 20 seconds after the end of audio/air conditioner screen operation.

“OFF”: The audio/air conditioner screen remains on.

(b) Switch color

You can select the color of the touch-screen buttons.

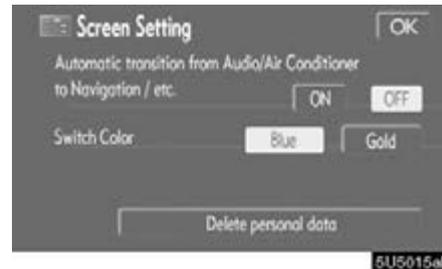


Select “Blue” or “Gold” and then touch “OK”.

(c) Delete personal data

The following personal data can be deleted or returned to their default settings:


- **Maintenance conditions**
- **Maintenance information “off” setting**
- **Memory points**
- **Areas to avoid**
- **Previous points**
- **Route trace**
- **User selection settings**
- **Phone book data**
- **Dialed numbers and received calls**
- **Speed dial**
- **Bluetooth phone data**
- **Security code**

This function is available only when the vehicle is not moving.

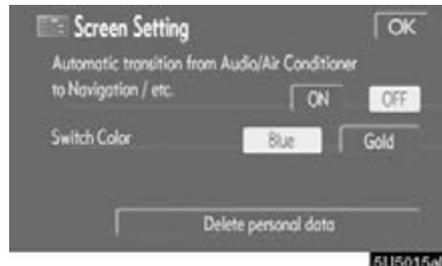

1. Touch “Delete personal data”.

The “Delete personal data” screen appears.

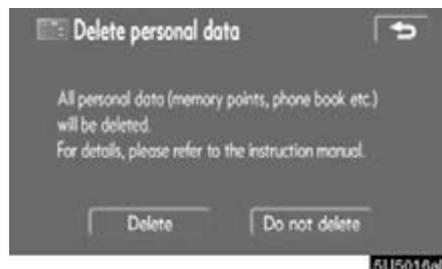

2. Touch “Delete”.

The “Confirmation to delete all personal data” screen appears.



3. Touch “Yes”.

OTHER FUNCTIONS

Beep setting

You can set a beep sound off.



1. Push the “INFO” button.



2. Touch “Beep Off”.
“Beep Off” is highlighted.
To switch the beep sound on, touch “Beep Off” again.

Selecting a language

The language of the touch-screen buttons, pop-up messages and the voice guidance can be changed.



1. Push the “INFO” button.



2. Touch “Language”.



3. Touch “English”, “Français” or “Español” to select a language.

If a screen other than for the navigation system is displayed, the current screen would change to the “CAUTION” screen by pushing the “MAP/VOICE”, “DEST” or “MENU” button.

4. Touch “OK”.

The language is changed and the screen returns to the map display.

OTHER FUNCTIONS

SECTION 6

APPENDIX


Appendix

- [Limitations of the navigation system](#) 138
- [Map database information and updates](#) 140

Limitations of the navigation system

This navigation system calculates the current vehicle position using satellite signals, various vehicle signals, map data, etc. However, the accurate position may not be shown depending on the satellite condition, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current vehicle position, normally using 4 or more satellites, and in some cases 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 feet (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.

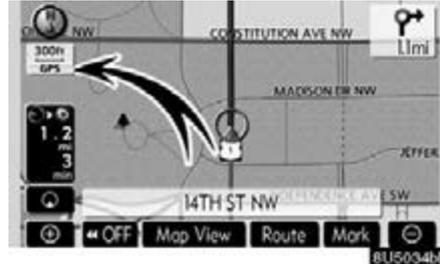

When your vehicle is receiving signals from the satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map display. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

(a) Accurate current vehicle position may not be shown in the following cases:

- When driving on a small angled Y-shaped road.
- When driving on a winding road.
- When driving on a slippery road such as in sand, gravel, snow, etc.
- When driving on a long straight road.
- When freeway and surface streets run in parallel.
- After moving by ferry or vehicle carrier.
- When a long route is searched during high speed driving.
- When driving without setting the current position calibration correctly.
- After repeating a change of direction by going forward and backward, or turning on a turntable in the parking lot.
- When leaving a covered parking lot or parking garage.
- When a roof carrier is installed.
- When driving with tire chains installed.
- When the tires are worn.
- After replacing a tire or tires.
- When using tires that are smaller or larger than the factory specifications.
- When the tire pressure in any of the four tires is not correct.

(b) Inappropriate route guidance may occur in the following cases:

- When turning at an intersection off the designated route guidance.
- If you set more than one destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
- When turning at an intersection for which there is no route guidance.
- When passing through an intersection for which there is no route guidance.
- During auto reroute, the route guidance may not be available for the next turn to the right or left.
- It may take a long time to operate auto reroute during high speed driving. In auto reroute, a detour route may be shown.
- After auto reroute, the route may not be changed.
- An unnecessary U-turn may be shown or announced.
- A location may have multiple names and the system will announce one or more.
- Some routes may not be searched.
- If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
- Your destination point might be shown on the opposite side of the street.
- When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
- The road and map data stored in your navigation system may not be complete or may not be the latest version.

INFORMATION

If your vehicle cannot receive GPS signals, you can correct the current position manually. For information on setting the current position calibration, see page 112.

After replacing a tire, implement the operation described in the “TIRE CHANGE CALIBRATION”. (See page 113.)

This navigation system uses tire turning data and is designed to work with factory-specified tires for your vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the vehicle’s position. The tire pressure also affects the diameter of the tires so please make sure the tire pressure of all four tires is correct.

Map database information and updates —

This system uses the maps of DENSO.

© 2008 DENSO CORPORATION
© 2007 NAVTEQ. All rights reserved.
© 2007 Tele Atlas North America, Inc. All rights reserved. This material is proprietary and the subject of copyright protection and other intellectual property rights owned by or licensed to Tele Atlas North America, Inc. The use of this material is subject to the terms of a license agreement. You will be held liable for any unauthorized copying or disclosure of this material.
Data by infoUSA Copyright © 2007, All Rights Reserved.
© 2007 VISA Corporation
Copyright © CoStar Realty Information Inc.
The Bullseye Design is a registered trademark of Target Brands, Inc.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM. BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL TERMS AND CONDITIONS SET FORTH BELOW.

LICENSE GRANT

DENSO CORPORATION ("DENSO"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

OWNERSHIP

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by Tele Atlas North America, Inc. ("TANA") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE.

The DATABASE comprises confidential and proprietary information and materials of TANA. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TANA and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

LIMITATION OF LIABILITY

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

U.S. GOVERNMENT RIGHTS

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data - commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control.

Contractor/manufacture is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643.0330. The DATABASE is ©1984-2007 by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

END USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2007 NAVTEQ. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®.

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service®2007. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by DENSO and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

APPENDIX

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use", and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/
SUPPLIER) NAME: NAVTEQ

CONTRACTOR (MANUFACTURER/
SUPPLIER) ADDRESS:
425 West Randolph Street,
Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this Data was provided.

©2007 NAVTEQ – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

END USER NOTICE**PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM**

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by infoUSA Inc. ("infoUSA"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the infoUSA POI Data shall be retained by infoUSA.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOUSA MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of liability

EITHER INFOUSA OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

There are two types of areas available for route guidance. In one type of area, primarily around metropolitan centers, detailed route guidance is available for the entire area. In the other type of area, all roads are displayed on the map but route guidance is limited. The navigation route might lack precision because the data (no right turns, one-way traffic, etc.) is not complete. It is still possible to reach the destination by following the arrow direction and distance as shown on the bottom left of the screen. The arrow points in the direction of the destination. The distance shown is as measured in a straight line from the current vehicle position to the destination area.

In order to provide you with as accurate map information as possible, we are always gathering information such as on road repairs and carrying out on-site investigations. However, the names of roads, streets, facilities, and their locations frequently change. In some places, construction on roads may be in progress. For that reason, information on some areas in this system might be different from the actual location.



The map database is normally updated once a year. Contact your Lexus dealer for information about the availability and pricing of an update.

- To confirm the database version and disc coverage area



1. Push the "MENU" button.



2. Touch "Map DVD".

APPENDIX



Make sure the version of the database on this screen.

To display the disc coverage area, touch **“Covered Area”**. Confirm the covered area on the screen.

Contact your Lexus dealer to find out if there is a more recent update available.

To eject the map disc, open the glove box and touch **“▲ DVD”**.

The glove box must be opened first, or the disc will come into contact with the glove box door and be reinserted.

CAUTION

For vehicles sold in U.S.A. and Canada:

- **Laser products**
 - Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.
 - This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

INDEX

For navigation system function, please also refer to the “**Navigation system function index**” on page 16.

INDEX

Numbers/Symbols

- ? button 38, 84, 85
- 3 Routes selection 61

A

- Adding a memo 122
- Adding destinations 70
- Address button 38
- Alphabet key 23
- Area to avoid 99
- Arrow screen 31, 66
- Auto voice guidance 85, 110
- Automatic transition 132

B

- Beep setting 134
- Brightness 130
- Building information 34

C

- Calendar with memo 120
- Calibration 85
- Categories 49
- CAUTION screen 20
- Change "Area Size" 102
- Change "Icon" 94
- Change "Location" 96, 102
- Change "Name" 96, 101
- Change "Phone #" 97
- Change "Quick Access" 95
- Change button 38
- Change the route 61
- City center 50
- City name 45, 48
- City to search 45, 48
- Clock adjustment 128
- Command list 127
- Compass mode 33
- Compass mode screen 31
- Contrast 130
- Coordinates button 38
- Current position as the search point 51
- Current position display 26
- Current position/tire
 - change calibration 112
- Cursor position as a destination 27
- Cursor position as a memory point 28

D

- Dealer setting 118
- Default 85
- Del. Dest button 38
- Delete personal data 133
- Deleting "Quick Access" 95
- Deleting area to avoid 103
- Deleting destinations 71
- Deleting home 99
- Deleting memory points 97
- Deleting previous points 55, 103
- Deleting set destinations 58
- DEST button 8, 39
- Destination information 30
- Destination screen 38
- Destination search 39
- Destination search by "Address" 43
- Destination search by "Coordinates" 58
- Destination search by "Emergency" 53
- Destination search by
 - "Freeway Ent./Exit" 57
 - "Intersection" 56
 - "Map" 55
 - "Memory" 54
 - "Phone #" 53
 - "POI" 46
 - "Previous" 54
 - by Home 42
 - by Quick access 42
- Detour setting 73
- Display building shapes 85
- DISP button 8
- Display of building shape 108
- Display POI icons 76, 85, 107
- Distance and time to destination 8, 69
- Dual map 32
- Dual map screen 31

E

- Edit "Dealer" or "Contact" 119
- Edit "Location" 119
- Edit "Phone #" 120
- Editing a memo 123
- Editing area to avoid 100
- Editing memory points 93
- Emergency button 38
- Estimated arrival time 69
- Estimated travel time 69, 85

F		M	
Foot print map	34	Maintenance information	21, 116
Foot print map button	8	Maintenance information setting	116
Freeway Ent./Exit button	38	Map button	38
Freeway exit information screen	64	Map coverage area	149
Freeway information screen	31	Map data	140, 149
Function help	26	Map database information and updates	140
G		Map DVD button	84
GPS	138	Map scale	33
GPS mark	8	Map screen operation	26
Guidance screen for the freeway	65	Map view	76
Guidance screen on the freeway	31	Map View button	8
Guiding the route	14	MAP/VOICE button	8, 26, 27
H		Mark button	8
Heading-up	8	Memo information	21
Heading-up symbol	35	Memo list	123
Help	26	Memory button	38
Help screen	127	Memory point information	30
Home	10, 98	Memory point names	96
Home touch-screen button	38	Memory point screen	92
House number	43	Memos for a specified period of time	124
I		MENU button	8, 84, 85
INFO button	8	Menu screen	84
Information about the icon	28	Microphone	126
Initial screen	20	My places	91
Inputting letters and numbers	22	My Places button	84
Intersection button	38	N	
Intersection guidance screen	31, 65	Names of areas to be avoided	101
K		Nearest 5 cities	46, 49
Key layout	106	North-up	8
Keyboard layout	85	North-up symbol	35
L		Notifying traffic restriction	109
Last 5 cities	46, 49	Numbers and symbols	23
Limitations of the navigation system	138	O	
List	24	Off function	8, 85, 107
List all categories button	49, 52	On route button	52
List screen operation	22, 24	One-touch scroll	27
Local POI list	77	Operating guide	127
		Orientation of the map	35
		Overview buttons and guidance screen	8

INDEX

P

Phone # button	38
POI as a destination	78
POI category change	107
POI information	29
POI button	38
POIs near the search point	52
POIs to be displayed	76
Pop-up message	85, 111
Position/direction calibration	112
Preset memory point	12
Previous button	38

Q

Quick access	12
Quick access touch-screen buttons	38

R

Registering area to avoid	99
Registering home	10, 98
Registering memory points	92
Registering preset memory point	12
Reordering destinations	70
Resume guidance	87
Resume Guidance button	84
Route button	8
Route guidance screen	64
Route overview	78
Route preference	61, 75
Route preview	79
Route trace	80

S

Scale indicator	8
Screen adjustment	130
Screen configuration button	8
Screen layout function	107
Screen off	130
Screen scroll operation	27
Screen setting	131
Search by POI category	50
Search by POI name	47
Search condition	72
Search point from destinations	51
Search point via the map screen	51
Select User button	84
Selecting a language	134
Selecting the region to search	40

Setting and deleting destination	70
Setting home as the destination	15
Setting route	72
Setup	104
Setup button	84
Setup screen	85
Single map	32
Single map screen	31
Sort	25
Sound icons	94
Speech command system	125
Speech command system indicator	8
Starting route from adjacent road	75
Starting route guidance	59
Street name	43
Suspend guidance	86
Suspend Guidance button	84
Suspending and resuming guidance	86
Switch color	132
Switching the screens	31

T

Tire change calibration	113
Touch screen operation	22
Traffic restrict. notification	85
Turn list screen	31, 66
Typical voice guidance prompts	67

U

Unit of measurement	85, 104
User selection	88

V

Voice guidance in all modes	85, 110
Voice recognition guidance	85, 109
Volume	87
Volume button	84

Z

Zoom in button	8
Zoom out button	8

Introduction

Thank you for your purchase of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes about 75 Point of Interest categories to allow you to easily select destinations such as restaurants and banks. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.



The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on the satellite condition, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 138 through 140.

TOYOTA MOTOR CORPORATION

Important information about this manual

For safety reasons, this manual indicates items requiring particular attention with the following marks.

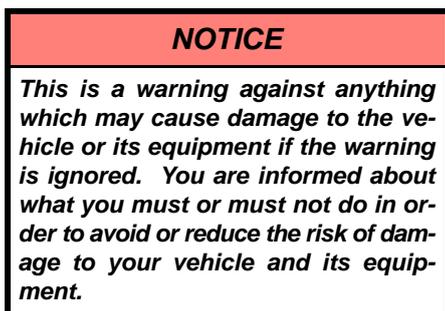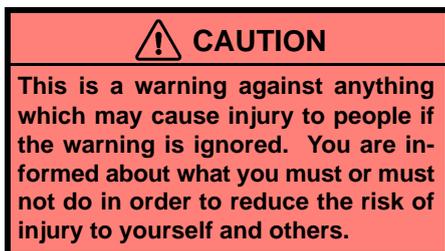

Safety Instruction



To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable touch-screen buttons are dimmed. Only when the vehicle is not moving, can the destination be set and route be selected.



CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may provide incorrect information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current vehicle position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instruction from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. **Under no circumstances is this system a substitute for the driver's personal judgement.**

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

Table of Contents

Quick guide —	
— Overview buttons and guidance screen	8
— Registering home	10
— Registering preset memory point (Quick access)	12
— Operation flow: guiding the route	14
— Setting home as the destination	15
Navigation system function index	16
1 Basic Functions	
〈Basic information before operation〉	
Initial screen	20
Touch screen operation	22
Inputting letters and numbers/List screen operation	22
Function help	26
Map screen operation	26
Current position display	26
Screen scroll operation	27
Switching the screens	31
Map scale	33
Foot print map	34
Orientation of the map	35




2	Destination Search	
	Quick reference (“Destination” screen)	38
	Destination search	39
	Selecting the region to search	40
	Destination search by Home	42
	Destination search by Quick access	42
	Destination search by “Address”	43
	Destination search by “POI*”	46
	Destination search by “Phone #”	53
	Destination search by “Emergency”	53
	Destination search by “Memory”	54
	Destination search by “Previous”	54
	Destination search by “Map”	55
	Destination search by “Intersection”	56
	Destination search by “Freeway Ent./Exit”	57
	Destination search by “Coordinates”	58
	Deleting set destinations	58
	Starting route guidance	59
3	Route Guidance	
	Route guidance screen	64
	Typical voice guidance prompts	67
	Distance and time to destination	69
	Setting and deleting destination	70
	Adding destinations	70
	Reordering destinations	70
	Deleting destinations	71
	Setting route	72
	Search condition	72
	Detour setting	73
	Route preference	75
	Starting route from adjacent road	75
	Map view	76
	Display POI* icons	76
	Route overview	78
	Route preview	79
	Route trace	80

*: Point of Interest

4	Advanced Functions	
	⟨Descriptions of functions for more effective use⟩	
	Quick reference (“Menu” screen)	84
	Quick reference (“Setup” screen)	85
	Suspending and resuming guidance	86
	Volume	87
	User selection	88
	My places	91
	Registering memory points	92
	Editing memory points	93
	Deleting memory points	97
	Registering home	98
	Deleting home	99
	Registering area to avoid	99
	Editing area to avoid	100
	Deleting area to avoid	103
	Deleting previous points	103
	Setup	104
5	Other Functions	
	Maintenance information	116
	Maintenance information setting	116
	Dealer setting	118
	Calendar with memo	120
	Adding a memo	122
	Editing a memo	123
	Memo list	123
	Speech command system	125
	Help screen	127
	Clock adjustment	128
	Screen adjustment	130
	Screen setting	131
	Beep setting	134
	Selecting a language	134
6	Appendix	
	Limitations of the navigation system	138
	Map database information and updates	140
	Index	151

**Quick guide —
— Overview buttons and guidance screen**

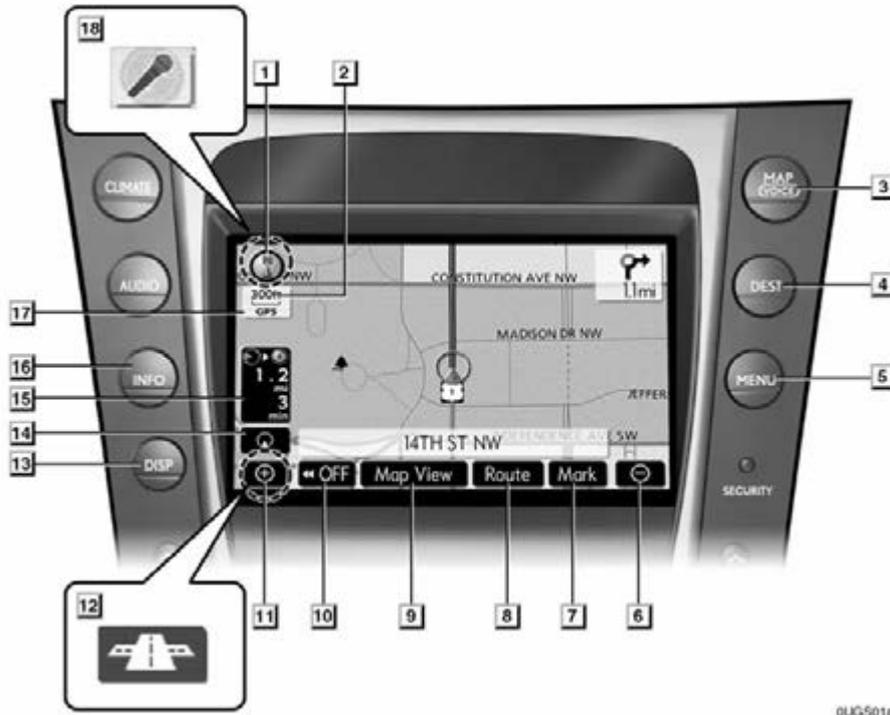

0UG501a

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	35
2	Scale indicator	This figure indicates the map scale.	33
3	“MAP/VOICE” button	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	26, 68
4	“DEST” button	Push this button to display the “Destination” screen.	10, 12, 14, 15, 38, 39
5	“MENU” button	Push this button to display the “Menu” screen.	84, 86, 87, 88, 91, 104, 149

No.	Name	Function	Page
6	Zoom out touch-screen button	Touch this button to reduce the map scale.	33
7	“Mark”	Touch this button to register the current position or the cursor position as a memory point.	28
8	“Route”	Touch this button to change the route.	70, 72
9	“Map View”	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	76, 78, 79, 80
10	“◀◀OFF”	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “ON▶▶” .	107
11	Zoom in touch-screen button	Touch this button to magnify the map scale.	33
12	Foot print map touch-screen button	Touch this button to display the foot print map and the building information.	34
13	“DISP” button	Push this button to display the “Display” screen.	130
14	Screen configuration touch-screen button	Touch this button to change the screen mode.	31
15	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	69
16	“INFO” button	Push this button to display the “Information” screen.	116, 120, 128 131, 134
17	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	138
18	Speech command system indicator	The microphone is shown by pushing the speech command switch. The speech command system can be operated while this indicator is shown.	125

— Registering home



1 Push “DEST” button.



2 Touch .

If home has not been registered, you can register it by touching .



3 There are 11 different methods to search your home.

See “Destination search” on page 39.



4 Touch “Enter”.

The “Memory Point” screen is displayed.



5 Touch "OK".

Registration of home is complete.

You can also register home by touching the "**MENU**" button. (See "— Registering home" on page 98.)

You can change the icon, quick access, name, location and phone number. (See "— Editing memory points" on page 93.)

— Registering preset memory point (Quick access)



1 Push “DEST” button.




2 Touch one of the quick access buttons.

You can set a memory point to one of the quick access buttons which has not been set.



3 There are 12 different methods to search a preset memory point.

See “Destination search” on page 39.

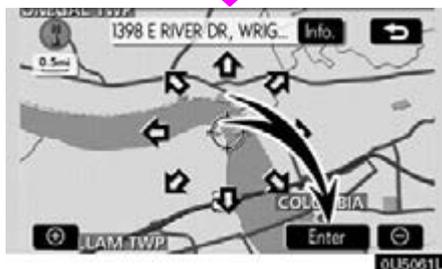

4 Touch “Enter”.

The “Memory Point” screen is displayed.



5 Touch "OK".

Registration of the preset memory point is complete.

You can also register preset destinations by touching the **"MENU"** button. (See " — Registering memory points" on page 92.)

You can change the icon, quick access, name, location and phone number. (See " — Editing memory points" on page 93.)

The registered points can be used on the "Destination" screen. (See " — Destination search by Quick access" on page 42.)

— Operation flow: guiding the route



1 Push “DEST” button.



2 There are 13 different methods to search destinations.

See “Destination search” on page 39.



3 Touch “Enter”.

The navigation system performs a search for the route.



4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 59.)

5 Guidance to the destination is given via voice and on the guidance screen.

— Setting home as the destination



1 Push “DEST” button.



2 Touch .

The  can be used if your home has been registered. (To register “Home”, see “— Registering home” on page 98.)



3 Touch “Enter”.

The navigation system performs a search for the route.



4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 59.)

5 Guidance to the destination is given via voice and on the guidance screen.

Navigation system function index

〈Map〉

Displaying maps	Page
Viewing the map screen	8
Displaying the current vehicle position	26
Viewing the current position vicinity map	27
Changing the scale	33
Changing the map orientation	35
Displaying POIs*	76
Displaying the estimated travel/arrival time to the destination	69
Selecting the dual map screen	31
Viewing foot print map	34
Deleting map screen touch–screen buttons	107
Searching destination	Page
Searching the destination (by home, POI*, phone #, etc.)	39
Changing the search area	40
Operating the map location of the selected destination	59

〈Route guidance〉

Before starting route guidance	Page
Setting the destination	59
Viewing alternative routes	59
Starting route guidance	59
Before starting or during route guidance	Page
Viewing the route	59
Adding destinations	70
Changing the route	72
Displaying the estimated travel/arrival time to the destination	69

*: Point(s) of Interest

During route guidance	Page
Suspending route guidance	86
Adjusting route guidance volume	87
Deleting the destination	58
Displaying the entire route map	78

⟨ Useful functions ⟩

Memory points	Page
Registering memory points	91
Marking icons on the map	91
Information	Page
Displaying vehicle maintenance	116
Displaying the calendar	120
Speech command system	Page
Operating the system with your voice	125

