

# Introduction

**Thank you for your purchase of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.**

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.


The navigation system's database includes about 75 Point of Interest categories to allow you to easily select destinations such as restaurants and banks. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there. The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in approaching a fork or intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

**Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on the satellite condition, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 256 through 258.**

**TOYOTA MOTOR CORPORATION**

## Important information about this manual

For safety reasons, this manual indicates items requiring particular attention with the following marks.

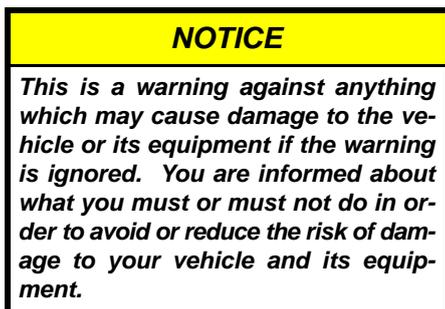

## Safety Instruction



To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable touch-screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.



## CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may provide wrong information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current vehicle position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instruction from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. **Under no circumstances is this system a substitute for the driver's personal judgement.**

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

# Table of Contents

## Quick Guide —

— Overview buttons and guidance screen .....	10
— Registering home .....	13
— Registering preset memory point (Quick access) .....	15
— Operation flow: guiding the route .....	17
— Setting home as the destination .....	18
Navigation system function index .....	19

## 1 Basic Functions

### 〈Basic information before operation〉

Initial screen .....	24
Touch screen operation .....	26
Inputting letters and numbers/list screen operation .....	26
Function help .....	30
<b>Map screen operation</b> .....	30
Current position display .....	30
Screen scroll operation .....	31
Switching the screens .....	35
Map scale .....	37
Foot print map .....	38
Orientation of the map .....	39
Map icons .....	40

## 2 Destination Search

Quick reference (“Destination” screen) .....	42
<b>Destination search</b> .....	43
Selecting the search area .....	44
Destination search by Home .....	46
Destination search by Quick access .....	46
Destination search by “Address” .....	47
Destination search by “POI* Name” .....	51
Destination search by “POI* Category” .....	54
Destination search by “Emergency” .....	58

\*: Point of Interest

Destination search by "Memory" . . . . .	58
Destination search by "Previous" . . . . .	59
Destination search by "Map" . . . . .	59
Destination search by "Intersection" . . . . .	60
Destination search by "Freeway Ent./Exit" . . . . .	61
Destination search by "Coordinates" . . . . .	62
Destination search by "Phone #" . . . . .	62
Starting route guidance . . . . .	63
<b>3 Route Guidance</b>	
Route guidance screen . . . . .	68
Typical voice guidance prompts . . . . .	71
Distance and time to destination . . . . .	73
<b>Setting and deleting destination</b> . . . . .	74
Adding destinations . . . . .	74
Reordering destinations . . . . .	74
Deleting destinations . . . . .	75
<b>Setting route</b> . . . . .	76
Search condition . . . . .	76
Detour setting . . . . .	77
Route preference . . . . .	79
Starting route from adjacent road . . . . .	79
<b>Map view</b> . . . . .	80
Display POI* icons . . . . .	80
Route overview . . . . .	82
Route preview . . . . .	83
Route trace . . . . .	84
<b>4 Advanced Functions</b>	
<Descriptions of functions for more effective use>	
Quick reference ("Menu" screen) . . . . .	88
Quick reference ("Setup" screen) . . . . .	89
Suspending and resuming guidance . . . . .	90
Volume . . . . .	91
User selection . . . . .	92

\*: Point of Interest


<b>My places</b> .....	94
Registering memory points .....	95
Editing memory points .....	96
Deleting memory points .....	101
Registering home .....	102
Deleting home .....	103
Registering area to avoid .....	103
Editing area to avoid .....	104
Deleting area to avoid .....	107
Deleting previous points .....	108
Setup .....	108
<b>5 Other Functions</b>	
<b>Maintenance information</b> .....	120
Maintenance information setting .....	120
Dealer setting .....	122
<b>Calendar with memo</b> .....	124
Adding a memo .....	126
Editing a memo .....	127
Memo list .....	127
<b>Hands-free system (for cellular phone)</b> .....	129
Enter a Bluetooth® phone .....	134
Call on the Bluetooth® phone .....	137
Receive on the Bluetooth® phone .....	143
Talk on the Bluetooth® phone .....	144
Change the settings of the Bluetooth® phone .....	146
Set a Bluetooth® phone .....	169
Speech command system .....	175
Help screen .....	178
Screen adjustment .....	179
Screen setting .....	181
Delete personal data .....	183
Beep setting .....	184
Select a language .....	185

<b>6 Audio/video System</b>	
Quick reference .....	188
<b>Using your audio/video system</b> .....	189
Some basics .....	189
Radio operation .....	195
CD changer operation .....	205
DVD player operation .....	217
Audio/video remote controls .....	240
Audio/video system operating hints .....	241
<b>7 Rear View Monitor System</b>	
Rear view monitor system .....	252
<b>8 Appendix</b>	
Limitations of the navigation system .....	256
<b>Map database information and updates</b> .....	NO TAG
Changing the map DVD-ROM .....	267
<b>Index</b> .....	269

<p>For information about the optional “<b>Rear seat entertainment system</b>”, please refer to the <i>Owner’s Manual</i>.</p>
---



## Quick guide — — Overview buttons and guidance screen

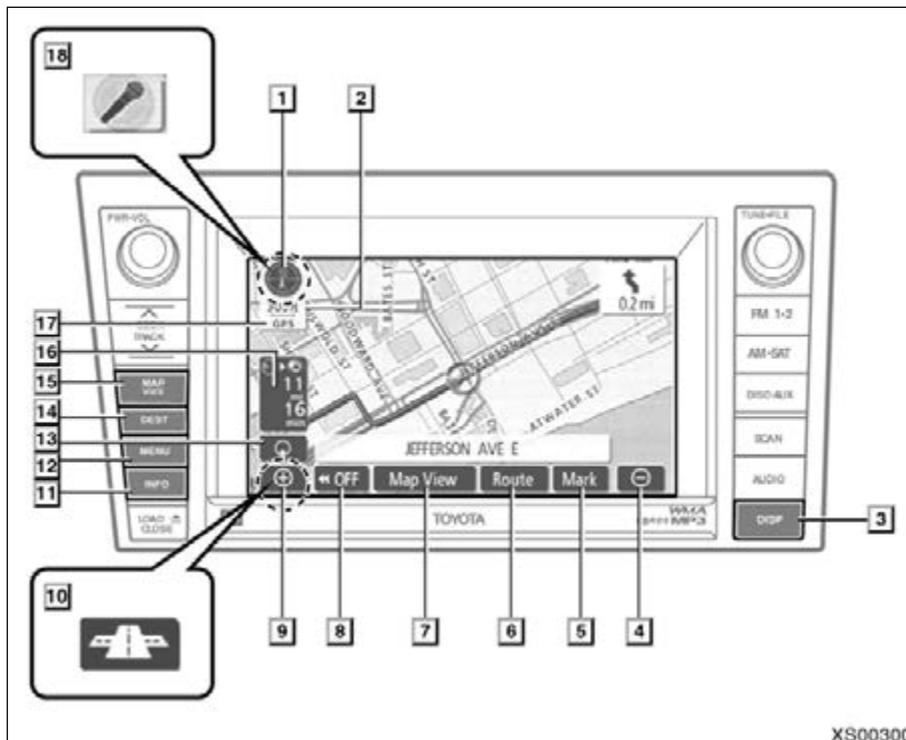


No.	Name	Function	Page
1	<b>North-up or heading-up symbol</b>	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	39
2	<b>Scale indicator</b>	This figure indicates the map scale.	37
3	<b>“DISP” button</b>	Push this button to display the “Display” screen.	179
4	<b>Zoom out touch-screen button</b>	Touch this touch-screen button to reduce the map scale.	37
5	<b>“Mark”</b>	Touch this touch-screen button to register the current position or the cursor position as a memory point.	32
6	<b>“Route”</b>	Touch this touch-screen button to change the route.	74, 76

No.	Name	Function	Page
7	<b>“Map View”</b>	Touch this touch–screen button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	80, 82, 83, 84
8	<b>“◀◀OFF”</b>	Touch this touch–screen button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching <b>“ON▶▶”</b> .	112
9	<b>Zoom in touch–screen button</b>	Touch this touch–screen button to magnify the map scale.	37
10	<b>Foot print map touch–screen button</b>	Touch this touch–screen button to display the foot print map and the building information.	38
11	<b>“INFO” button</b>	Push this button to display the “Information” screen.	120, 124, 134, 181
12	<b>“MENU” button</b>	Push this button to display the “Menu” screen.	88, 90, 268
13	<b>Screen configuration touch–screen button</b>	Touch this touch–screen button to change the screen mode.	35
14	<b>“DEST” button</b>	Push this button to display the “Destination” screen.	42, 43
15	<b>“MAP/VOICE” button</b>	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	30, 31, 71
16	<b>Distance and time to destination</b>	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	73

17	<b>“GPS” mark (Global Positioning System)</b>	Whenever your vehicle is receiving signals from the GPS, this mark is displayed.	256
18	<b>Speech command system indicator</b>	This indicator is shown by pushing the talk switch. The speech command system can be operated while this indicator is shown.	175

## — Registering home

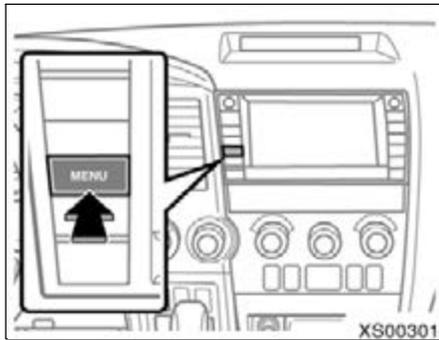

**1** Push "MENU" button.



**2** Touch "My Places".



**3** Touch "Register" of the Home.




**4** There are 13 different methods to search your home.

See "Destination search" on page 43.



**5 Touch "Enter".**


The "Memory Point" screen is displayed.

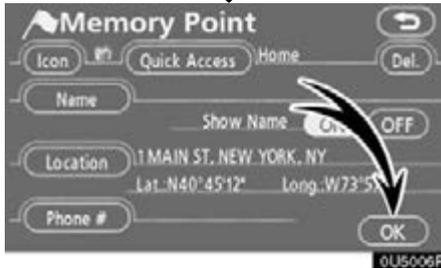

**6 Touch "OK".**

Registration of home is complete. You can change the icon, quick access, name, location and phone number. (See " — Editing memory points" on page 96.)

## — Registering preset memory point (Quick access)

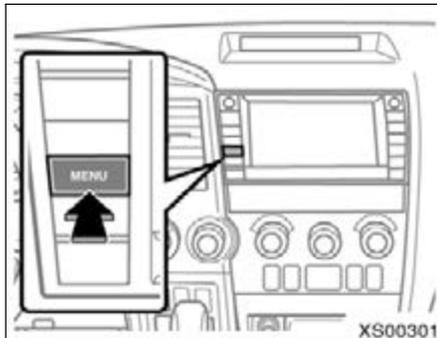


**1** Push "MENU" button.



**2** Touch "My Places".



**3** Touch "Register" of the memory points.

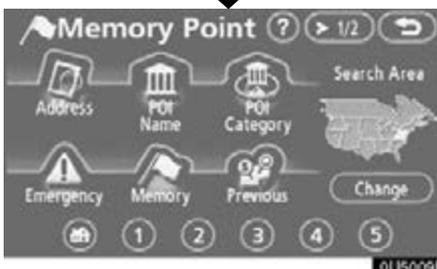

**4** There are 13 different methods to search a preset memory point.

See "Destination search" on page 43.



**5 Touch “Enter”.**

The “Memory Point” screen is displayed.



**6 Touch “Quick Access”.**



**7 Touch one of preset buttons 1 to 5.**




**8 Touch “OK”.**

Registration of the preset memory point is complete.

You can change the icon, quick access, name, location and phone number. (See “ — Editing memory points” on page 96.)

The registered points can be used on the “Destination” screen. (See “ — Destination search by Quick access” on page 46.)

## — Operation flow: guiding the route

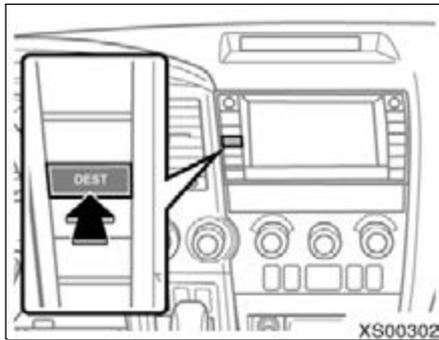

**1** Push “DEST” button.



**2** There are 13 different methods to search destinations.

See “Destination search” on page 43.



**3** Touch “Enter”.

The navigation system performs a search for the route.




**4** Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 63.)

**5** Guidance to the destination is given via voice and on the guidance screen.

## — Setting home as the destination

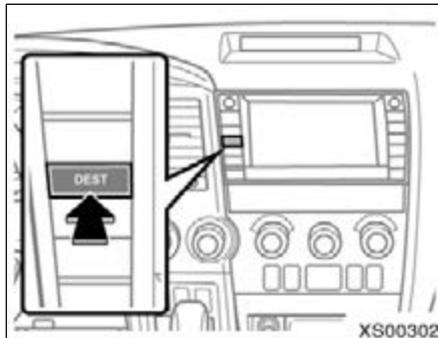


**1** Push “DEST” button.



**2** Touch .

The  can be used if your home has been registered. (To register “Home”, see “ — Registering home” on page 102.)

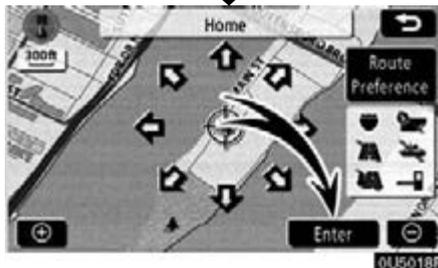

**3** Touch “Enter”.

The navigation system performs a search for the route.



**4** Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 63.)

**5** Guidance to the destination is given via voice and on the guidance screen.

## Navigation system function index

### 〈Map〉

Displaying maps	Page
Viewing the map screen	10
Displaying the current vehicle position	30
Viewing the current position vicinity map	31
Changing the scale	37
Changing the map orientation	39
Displaying POIs*	80
Displaying the estimated travel/arrival time to the destination	73
Selecting the dual map screen	35
Viewing foot print map	38
Deleting map screen touch-screen buttons	112
Searching destination	Page
Searching the destination (by home, POI*, phone #, etc.)	43
Changing the search area	44
Operating the map location of the selected destination	63

### 〈Route guidance〉

Before starting route guidance	Page
Setting the destination	63
Viewing alternative routes	63
Starting route guidance	63
Before starting or during route guidance	Page
Viewing the route	63
Adding destinations	74
Changing the route	76
Displaying the estimated travel/arrival time to the destination	73

\*: Point(s) of Interest

<b>During route guidance</b>	<b>Page</b>
Suspending route guidance	90
Adjusting route guidance volume	91
Deleting the destination	75
Displaying the entire route map	82

### **⟨Useful functions⟩**

<b>Memory points</b>	<b>Page</b>
Registering your own memory points	94
Marking icons on the map	94
<b>Information</b>	<b>Page</b>
Displaying vehicle maintenance timing	120
Displaying the calendar	124
<b>Hands-free system (for cellular phone)</b>	<b>Page</b>
Initiating Bluetooth®	134
Making a call on the Bluetooth® phone	137
Receiving a call on the Bluetooth® phone	143
<b>Speech command system</b>	<b>Page</b>
Operating the system with your voice	175
<b>Rear view monitor system</b>	<b>Page</b>
Rear view monitor system	252



# SECTION 1

## BASIC FUNCTIONS

### Basic information before operation

- Initial screen ..... 24
- Touch screen operation ..... 26
- Inputting letters and numbers/list screen operation ..... 26
- Function help ..... 30
- **Map screen operation** ..... 30
  - Current position display ..... 30
  - Screen scroll operation ..... 31
  - Switching the screens ..... 35
  - Map scale ..... 37
  - Foot print map ..... 38
  - Orientation of the map ..... 39
  - Map icons ..... 40

## BASIC FUNCTIONS

---

### Initial screen



When the engine switch is turned to the ACC or ON position, the initial screen will be displayed and the system will begin operating.



After a few seconds, the "CAUTION" screen will be displayed.



After about 5 seconds, the "CAUTION" screen automatically switches to the map screen. When the "MAP/VOICE" button is also pushed, the map screen is displayed.

While the "CAUTION" screen is displayed, the "DEST" or "MENU" button cannot be operated. And if the "Language", "Calendar" or "Maintenance" buttons on the "Information" screen are touched, the screen will change back to "CAUTION" screen and then change to the map screen in about 5 seconds later or if the "MAP/VOICE" button is pushed.

● **Maintenance information**

This system informs about when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Information" screen will be displayed when the navigation system is in operation.




**To disable this screen, touch "Do Not Display This Message Again." This screen goes off if the screen is not operated for several seconds.**

To prevent this information screen from being displayed again, touch **"Do Not Display This Message Again."**

To register "Maintenance information", see "Maintenance information" on page 120.

● **Memo information**

This system notifies about a memo entry. At the specified date, the memo information will be displayed when the navigation system is in operation. The memo information screen will be displayed every time the system is turned on.

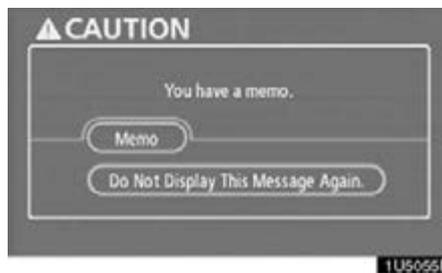

**The memo of the current date can be viewed by touching "Memo".** (See "Editing a memo" on page 127.)

**To disable this screen, touch "Do Not Display This Message Again." This screen goes off if the screen is not operated for several seconds.**

To prevent this information screen from being displayed again, touch **"Do Not Display This Message Again."**

To register "Memo information", see "Calendar with memo" on page 124.

### Touch screen operation

This system is operated mainly by the touch-screen buttons on the screen.

To prevent damage to the screen, lightly touch the touch-screen buttons on the screen with the finger. When a touch-screen button on the screen is touched, a beep sounds.

Do not use objects other than the finger to touch the screen.

### Inputting letters and numbers/list screen operation

When searching for an address or a name, or entering a memo, letters and numbers can be input via the touch screen.

#### INFORMATION

*Key layout can be changed. (See “● Input key layout” on page 110.)*

#### INFORMATION

- *If the system does not respond to a touch on a touch-screen button, move the finger away from the screen and then touch it again.*
- *Dimmed touch-screen buttons cannot be operated.*
- *Wipe off fingerprints on the surface of the display using a glass cleaning cloth. Do not use chemical cleaners to clean the display.*
- *The displayed image may become darker and moving images may be slightly distorted when the display is cold.*
- *Under extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the touch-screen buttons may be harder than usual to depress.*
- *When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the “Display” screen, or take off your sunglasses.*

● **To input letters**

To display the alphabet keys, touch “A-Z” or “A-Y”.



Enter letters by touching the alphabet keys directly.

: Touching this touch-screen button erases one letter. By holding this touch-screen button, letters will continue to be erase.

On certain letter entry screens, letters can be entered in upper or lower case.



: To enter in lower case.

: To enter in upper case.

● **To input numerals and symbols**

To display the number keys and symbol keys, touch “0-9”.



Enter numerals and symbols by touching the number keys and symbol keys directly.

: Touching this touch-screen button erases one letter. By holding this touch-screen button, letters will continue to be erased.

 1/2: Touching this touch-screen button displays other symbols.

 2/2

## BASIC FUNCTIONS

- To display the list



To search for an address or a name, touch “List”. Matching items from the database are listed even if the entered address or name is incomplete.

If the number of matches is four or less, the list is displayed without touching “List”.



### INFORMATION

**The number of matching items is shown to the right side of the screen. If the number of matching items is more than 9,999, the system displays “\*\*\*\*” on the screen.**

- List screen operation

When a list is displayed, use the appropriate touch-screen button to scroll through the list.



⬆️ To shift to the next or previous page.

⬆️ To scroll up or down one item at a time.

⬆️ This expresses a displayed screen position.

⬆️ If ⬆️ appears to the right of the item name, the complete name is too long for the display. Touch ⬆️ to scroll to the end of the name.

Touch ⬆️ to scroll to the beginning of the name.


- **Sorting**

The order of a list displayed on the screen can be rearranged.

**TYPE A**



1. Touch “Sort by”.

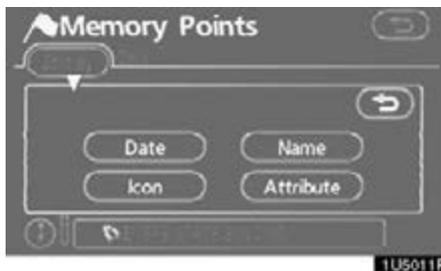

2. Select the desired sorting criteria.

Sorting criteria are as follows:

“**Distance**”: To sort in the order of distance from your current location.

“**Date**”: To sort in the order of the date.

“**Category**”: To sort in the order of the category.

“**Icon**”: To sort in the order of the icons.

“**Name**”: To sort in order by name.

“**Attribute**”: To sort in order by attribute.

**TYPE B**



“**Dist. Sort**”: To sort in the order of distance from the current vehicle location. The distance from current vehicle position up to the destination is displayed to the right of the name.

“**Name Sort**”: To sort in alphabetical order by name.

## BASIC FUNCTIONS

### Function help

Explanations for the functions of the “Destination”, “Setup”, and “Menu” screens can be viewed.



Touch “?”.



- : To view the previous page.
- : To view the next page.
- : To return to the previous screen.

### Map screen operation — — Current position display

When starting the navigation system, the current position is displayed first.

This screen displays the current vehicle position and a map of the surrounding local area.



The current vehicle position mark (  ) appears in the center or bottom center of the map screen.

A street name will appear on the bottom of the screen, depending on the scale of the map (  ).

You can return to this map screen that shows your current position at any time from any screen by pushing the “**MAP/VOICE**” button.

While driving, the current vehicle position mark is fixed on the screen and the map moves.

The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.

— **Screen scroll operation  
(one-touch scroll)**

**INFORMATION**

- *After battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.*
- *To correct the current position manually, see “● Current position/ tire change calibration” on page 117.*

When any point on the map is touched, that point moves to the center of the screen and is shown by the cursor mark ( [1] ).



Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position of the vehicle.

If the finger is continuously held on the screen, the map will continue scrolling in that direction until the finger is removed.

A street name, city name, etc. of the touched point will be shown, depending on the scale of the map ( [2] ). Distance from the current position to the cursor mark will also be shown ( [3] ).

After the screen is scrolled, the map remains centered at the selected location until another function is activated. The current vehicle position mark will continue to move along your actual route and may move off the screen. When the “MAP/VOICE” button is pushed, the current vehicle position mark returns to the center of the screen and the map moves as the vehicle proceeds along the designated route.

**INFORMATION**

*When the one-touch scroll feature is used, the current vehicle position mark may disappear from the screen. Move the map with a one-touch scroll again or push the “MAP/VOICE” button to return to the current vehicle position map location display.*

## BASIC FUNCTIONS

- **To set the cursor position as a destination**

A specific point on the map can be set as a destination using the one-touch scroll function.



### Touch “Enter” .

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

If there is already a set destination, “Add to 

“Add to 

“Replace 

- **To register the cursor position as a memory point**

Memory point registration enables easy access to a specific point.



### Touch “Mark”.

When you touch “Mark”, the following screen appears for a few seconds, and then the map screen returns.



The registered point is shown by  on the map.

To change the icon or name, etc., see “ — Editing memory points” on page 96.

Up to 106 memory points can be registered. If there is an attempt to register more than 106, a message appears for confirmation.



- To see information about the icon where the cursor is set



To display information about an icon, set the cursor on it.

#### POI INFORMATION

When the cursor is set on a POI icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Add to” and “Replace” are displayed.

“Add to”: To add a destination.

“Replace”: To delete the existing destinations and set a new one.

To register this POI as a memory point, touch “Mark”. (See page 95.)

If  is touched, the registered telephone number can be called.

#### INFORMATION

*The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 80.)*

## BASIC FUNCTIONS

### MEMORY POINT INFORMATION

When the cursor is set on a memory point icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Add to” and “Replace” are displayed.

“Add to”: To add a destination.

“Replace”: To delete the existing destinations and set a new one.

To edit a memory point, touch “Edit”. (See “— Editing memory points” on page 96.)

To delete a memory point, touch “Delete”.

If is touched, the registered telephone number can be called.

### DESTINATION INFORMATION

When the cursor is set on a destination icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

To delete a destination, touch “Delete”.

If is touched, the registered telephone number can be called.

— Switching the screens

Any one of the screen configurations can be selected.



1. Touch this touch-screen button to display the following screen.



2. To select the desired screen configuration, touch one of the following touch-screen buttons.

Depending on the conditions, certain screen configuration buttons cannot be selected.

-  : To display the single map screen. (See page 36.)
-  : To display the dual map screen. (See page 36.)
-  : To display the compass mode screen. (See page 37.)
-  : To display the turn list screen. (See page 70.)
-  : To display the arrow screen. (See page 70.)
-  : To display the freeway information screen. (See page 68.)
-  : To display the intersection guidance screen or the guidance screen on the freeway. (See page 69.)

## BASIC FUNCTIONS

---

- **Screen configurations**

### SINGLE MAP

This is a regular map screen.

While on a different screen, touching  will display the single map screen.



The screen shows the single map.

### DUAL MAP

A map can be displayed split in two.

While on a different screen, touching  will display the dual map screen.



The screen shows the dual map. The map on the left is the main map.

The right side map can be edited by touching any specific point on the right side map.



This screen can perform the following procedures:

1. Changing the map scale
2. Displaying the POI icon
3. Changing the orientation of the map

**Touch "OK" when you complete editing.**

The screen returns to the dual map screen.

**COMPASS MODE**

Current vehicle position is indicated with a compass, not with a map.

While on a different screen, touching  will display the compass mode screen.



Information about the destination and current position, as well as a compass, is displayed on the screen.

The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates and the compass, to make sure that your vehicle is headed in the direction of the destination.

**INFORMATION**

*When the vehicle travels out of the coverage area, the guidance screen changes to the compass mode screen.*

**— Map scale**



Touch  or  to change the scale of the map display. The scale bar and indicator at the bottom of the screen indicates the map scale menu. The scale range is 150 feet (50 m) to 250 miles (400 km).

Touch  or  until the scale bar changes normally. By continuing to touch the touch-screen button, the scale bar changes smoothly.

The scale of the map display can be changed by touching the scale bar directly. It is not available while driving.

The map scale is displayed under the north-up symbol or heading-up symbol at the top left of the screen.

**INFORMATION**

*When the map scale is at the maximum range of 250 miles (400 km),  is not shown. When the map scale is at the minimum range of 150 feet (50 m),  is not shown. In areas where the foot print map is available the map scale changes from  to  when at the minimum range.*


## BASIC FUNCTIONS

### — Foot print map

For the area which is covered by the foot print map (Some areas in the following cities; Detroit, Chicago, N.Y., L.A), you can switch to the foot print map on a scale of 75 feet (25 m).

- **To switch to the foot print map**

 changes into  when the map is scaled down to 150 feet (50 m).

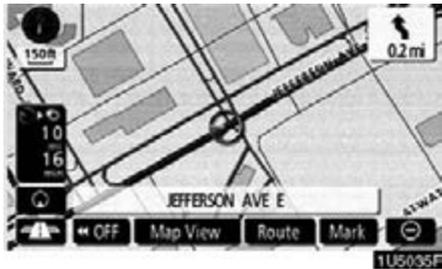

To display the foot print map, touch



To delete the foot print map display, touch



### INFORMATION

- *If the map or the current position is moved to the area which is not covered by the foot print map, the screen scale automatically changes to 150 feet (50 m).*
- *On the foot print map, a one way street is displayed by .*
- *It is not possible to perform scrolling on the foot print map (one-touch scroll) while driving.*

- **To display building information**

Information is available only for buildings for which information is recorded on the map disc.



1. Touch “Info.” while the foot print map is displayed.


If the map is displayed by a split screen, the map will change into a single map display.



2. Using an eight-direction arrow, move the cursor to the position of the building to display building information.

3. Touch “Building Info.”

— Orientation of the map

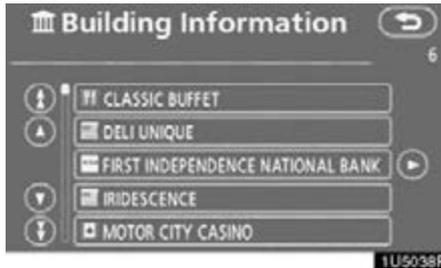

Details of POIs in some buildings may be displayed.

For detailed POI information, touch the building name. You can see details of the selected POIs.



► North-up screen



► Heading-up screen

The orientation of the map can be changed from North-up to Heading-up by touching the orientation symbol at the top left of the screen.

 **North-up symbol**

Regardless of the direction of vehicle travel, North is always up.

 **Heading-up symbol**

The direction of vehicle travel is always up. A red arrow indicates North.

## BASIC FUNCTIONS

---

### —Map icons

Icon	name
	Freeway (Level 1, 2)
 (Red)	
 (Turquoise)	Main Street (Level 3, 4)
 (Gray)	Residential (Level 5)
 (Yellow-green)	IPD (In-Process Data)
	Railroad
	Border
	Park/Recreation
	Airport
	Military base
	Higher education
	Hospital
	Sports complex
	Shopping center
	Golf course

## SECTION 2

### DESTINATION SEARCH


- Quick reference (“Destination” screen) ..... 42
- **Destination search** ..... 43
  - Selecting the search area ..... 44
  - Destination search by Home ..... 46
  - Destination search by Quick access ..... 46
  - Destination search by “Address” ..... 47
  - Destination search by “POI\* Name” ..... 51
  - Destination search by “POI\* Category” ..... 54
  - Destination search by “Emergency” ..... 58
  - Destination search by “Memory” ..... 58
  - Destination search by “Previous” ..... 59
  - Destination search by “Map” ..... 59
  - Destination search by “Intersection” ..... 60
  - Destination search by “Freeway Ent./Exit” ..... 61
  - Destination search by “Coordinates” ..... 62
  - Destination search by “Phone #” ..... 62
- Starting route guidance ..... 63

\*: Point of Interest

## DESTINATION SEARCH

### Quick reference (“Destination” screen)


The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “DEST” button.

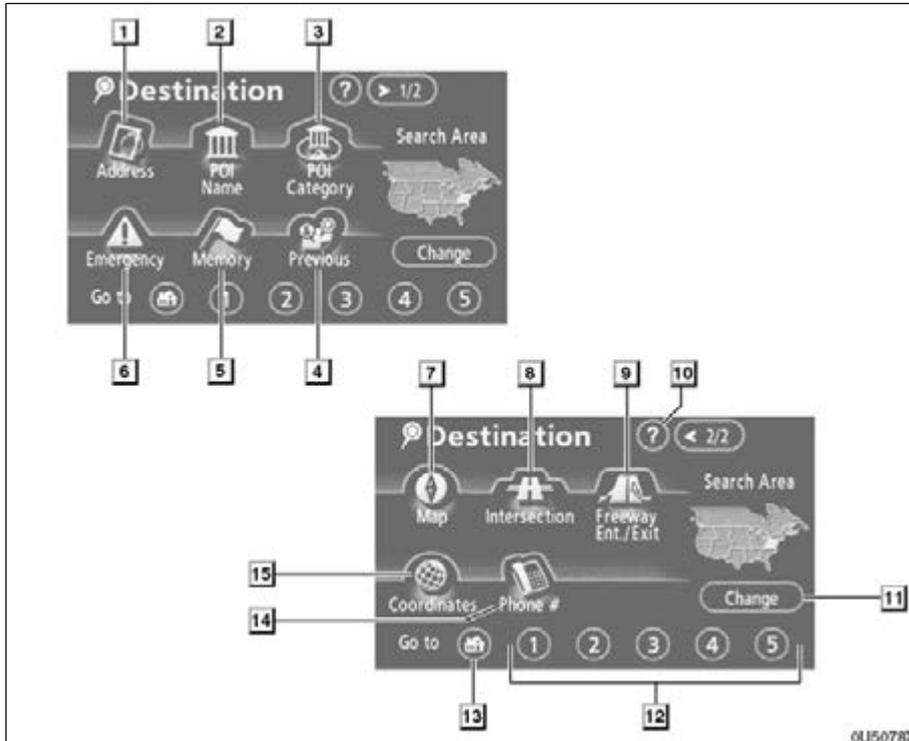

- |   |   |
|---|---|
| <p><b>1 “Address”</b><br/>A house number and the street address can be input by using the input keys. .... 47</p> <p><b>2 “POI Name”</b><br/>Select one of the many POIs (Points of Interest) that have already been stored in the system’s database. .... 51</p> <p><b>3 “POI Category”</b><br/>A destination can be selected from the POI category. .... 54</p> | <p><b>4 “Previous”</b><br/>A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. .... 59</p> <p><b>5 “Memory”</b><br/>The location can be selected from the registered “Memory points”. (To register memory points, see “ — Registering memory points” on page 95.) .... 58</p> <p><b>6 “Emergency”</b><br/>One of the four categories of emergency service points that are already stored in the system’s database can be selected. .... 58</p> |
|---|---|

- 7 “Map”**  
 A destination can be selected simply by touching the location on the displayed map.  
 ..... 59
- 8 “Intersection”**  
 The names of two intersecting streets can be entered. This is helpful if only the general vicinity, not the specific address, is known.  
 ..... 60
- 9 “Freeway Ent./Exit”**  
 The name of a freeway (interstate) entrance or exit can be entered. .... 61
- 10 “?”**  
 Function help for the “Destination” screen can be viewed on this screen. .... 30
- 11 “Change”**  
 To change the search area, touch this touch-screen button. .... 44
- 12 Quick access touch-screen buttons**  
 One of 5 preset destinations can be selected by touching the screen directly. To use this function, it is necessary to set the “Quick Access” for each memory point. (To register a “Quick Access”, see “ — Editing memory points” on page 96.)  
 ..... 46
- 13 Home touch-screen button**  
 A personal home address can be selected without entering the address each time. To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see “ — Registering home” on page 102.)  
 ..... 46
- 14 “Phone #”**  
 A destination can be entered by the telephone number. .... 62
- 15 “Coordinates”**  
 A destination can be set by using latitude and longitude as coordinates. .... 62

**Destination search —**

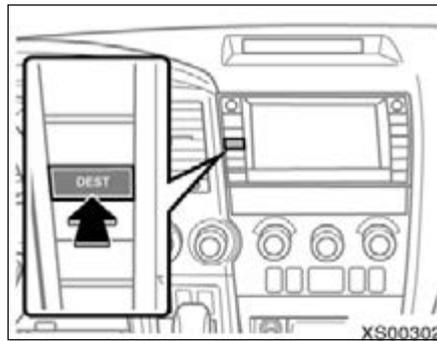

Push the “DEST” button and the “Destination” screen appears.



You can use one of 13 different methods to search your destination. (See pages 46 through 62.)

<b>INFORMATION</b>
<i>When searching the destination, the response to the touch-screen button may be slow.</i>

## DESTINATION SEARCH

### — Selecting the search area

#### SELECTING THE SEARCH AREA ON THE DESTINATION SCREEN

1. Push the “DEST” button.



2. Touch “Change” on the “Destination” screen to display a map of the United States and Canada divided into 12 areas. (For map database information and updates, see “Map database information and updates” on page NO TAG.)



3. Touch one of “US1” through “CAN” to select a search area.
4. Touch “OK” and the “Destination” screen returns.

#### SELECTING THE SEARCH AREA ON THE INPUT SCREEN

Change the search area in order to set a destination from a different area by using “Address”, “POI Name”, “Freeway Ent./Exit”, or “Intersection”.



1. Touch the search area button like “US9” on the input screen to display a map of the United States and Canada divided into 12 areas. (For map database information and updates, see “Map database information and updates” on page NO TAG.)



2. Touch one of “US1” through “CAN” to select a search area.
3. Touch “OK” and the previous screen returns.

**DESTINATION SEARCH**

---

U.S.A.	
Button	States included in the search area
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont

"US9"	Washington, D.C. Delaware Maryland Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii

Canada	
Button	Provinces and regions included in the search area
"CAN"	All provinces and regions in Canada included in this button.

## DESTINATION SEARCH

### — Destination search by Home

1. Push the “DEST” button.



2. Touch the home touch-screen button on the “Destination” screen.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 63.)

To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see page 102.)

#### **INFORMATION**

*Guidance starts from the current vehicle position to your home if “Enter” is touched even while driving.*

### — Destination search by Quick access

1. Push the “DEST” button.



2. Touch any of the quick access touch-screen buttons on the “Destination” screen.

The screen changes and displays the map location of the quick access point and the route preference. (See “Starting route guidance” on page 63.)

To use this function, it is necessary to set “Quick access” for each memory point. (To register “Quick Access”, see page 98.)

#### **INFORMATION**

*Guidance starts from the current vehicle position to the quick access point if “Enter” is touched even while driving.*

— Destination search by “Address”

There are 2 ways to input a destination by address.

1. Push the “DEST” button.
2. Touch “Address” on the “Destination” screen.



(a) Inputting a house number and a street name



1. Touch numerals directly on the screen to input a house number.

After inputting a house number, touch “OK” to display the screen for inputting a street name.

It is possible to input a street name first. Touch “Street” to display the screen for inputting a street name.



2. Input the street name and touch “List”.

## DESTINATION SEARCH



**3. When the desired street name is found, touch the corresponding touch-screen button.**

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

If the same address exists in more than one city, the current screen changes to the city list screen.




**4. Select or enter the desired city.**

“Input Name”: To narrow down the listed items by inputting the city name.



If inputting a street name first, the screen changes. The house number can then be input.

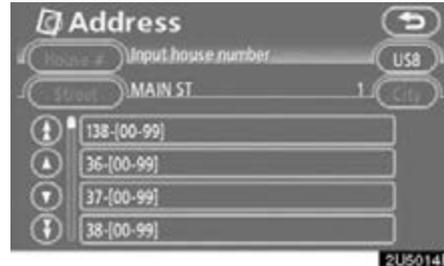


If the above screen appears, an address range on the screen can be selected.




If the same address exists in more than one city, the current screen changes to the city list screen.

(b) Selecting a city to search

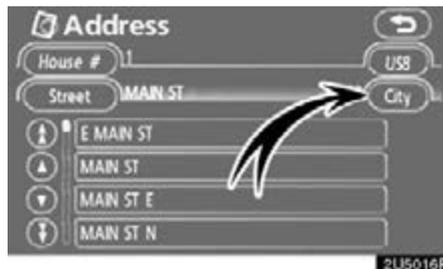

Touch "City".

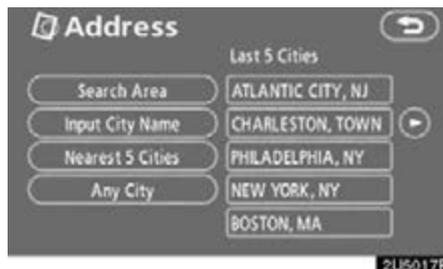

To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

**INFORMATION**

- To change the search area, touch "Search Area".
- To cancel the city setting, touch "Any City".

INPUTTING THE CITY NAME

1. Touch "Input City Name".



2. Input a city name.



3. Touch the touch-screen button of the desired city name from the displayed list.

"Map": To display the selected destination and the route preference. (See "Starting route guidance" on page 63.)

The current screen changes to the screen for inputting a house number or a street name. (See "(a) Inputting a house number and a street name" on page 47.)

## DESTINATION SEARCH

---

### SELECTING FROM THE NEAREST 5 CITIES

1. Touch “Nearest 5 Cities”.



2. Touch the touch-screen button of the desired city name from the displayed list.

The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 47.)

### SELECTING FROM THE LAST 5 CITIES



Touch the touch-screen button of the desired city name.

If the navigation has never been used, no cities will be displayed on the screen.


The current screen changes to the screen for inputting a house number or a street name. (See “(a) Inputting a house number and a street name” on page 47.)

— Destination search by  
“POI Name”

1. Push the “DEST” button.
2. Touch “POI Name” on the “Destination” screen.



3. Input the name of the Point of Interest.

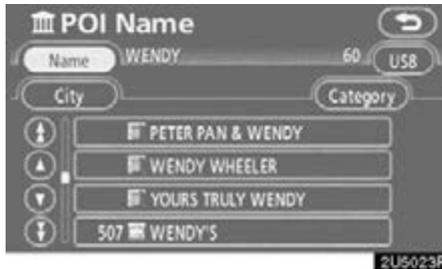

4. Touch the touch-screen button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.




Touch the touch-screen button of the desired destination.

If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “(a) Selecting a city to search” on page 52 and “(b) Selecting from the categories” on page 54.)

<b>INFORMATION</b>
<i>The desired Point of Interest can be displayed on the map screen. (See “— Display POI icons” on page 80.)</i>

## DESTINATION SEARCH

### (a) Selecting a city to search

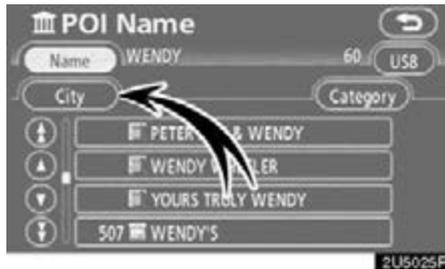

Touch “City”.



To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

### **INFORMATION**


- To change the search area, touch “Search Area”.
- To cancel the city setting, touch “Any City”.

### INPUTTING THE CITY NAME

1. Touch “Input City Name”.



2. Input the city name.

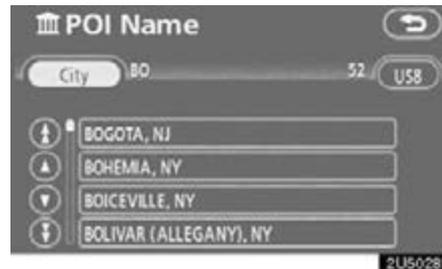

3. Touch the touch-screen button of the desired city name from the displayed list.


**SELECTING FROM THE NEAREST 5 CITIES**

1. Touch “Nearest 5 Cities”.



2. Touch the touch-screen button of the desired city name.

**SELECTING FROM THE LAST 5 CITIES**

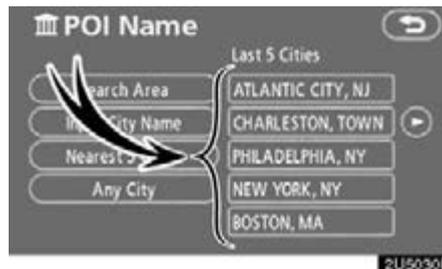


Touch the touch-screen button of the desired city name.

If the navigation has never been used, no cities will be displayed on the screen.

## DESTINATION SEARCH

### (b) Selecting from the categories

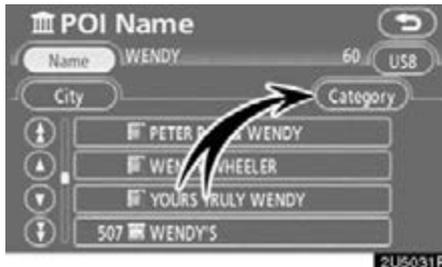

Touch “Category”.



If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.



When the desired category is touched, the POI name list screen is displayed.

### — Destination search by “POI Category”

The destination can be set by selecting the search point and the POI category.

1. Push the “DEST” button.
2. Touch “POI Category” on the “Destination” screen.



Set the search point by the following method:

1. Input the city center
2. Set the current position as the search point
3. Set the search point via the map screen
4. Set the search point from any destination

It is possible to display the names of POIs located within approximately 20 miles (32 km) from the selected search point.

**INPUTTING THE CITY CENTER**


1. Touch "Input City Center".



2. Input the city center name.



3. Touch the touch-screen button of the desired city center name.

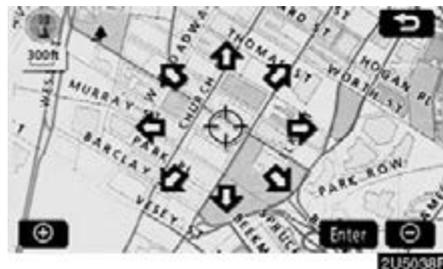

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling

4. Touch "Enter".

The search point is set and the "POI Category" screen will be displayed.

**SETTING THE CURRENT POSITION AS THE SEARCH POINT**

Touch "Current Position".


The search point is set at the current position, and the "POI Category" screen will be displayed.

## DESTINATION SEARCH

---

### SETTING THE SEARCH POINT VIA THE MAP SCREEN

1. Touch "Map".

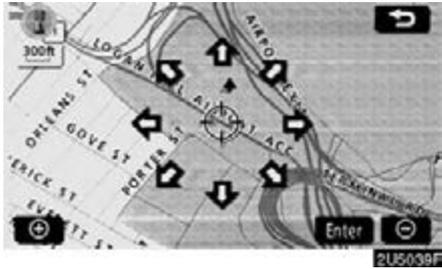


When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling

2. Touch "Enter".

The search point is set and the "POI Category" screen will be displayed.

### SETTING THE SEARCH POINT FROM DESTINATIONS

1. Touch the destination buttons at the bottom of the screen.

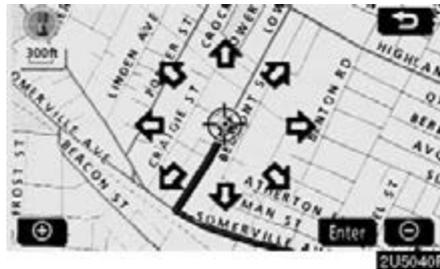

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling

2. Touch "Enter".

The search point is set and the "POI Category" screen will be displayed.

- To search POIs near the search point

When the search point is set, the “POI Category” screen will be displayed.



**Select the desired POI categories.**

“List”: If the desired POI categories have already been selected, a list of POI will be displayed from among the selected categories.

The selected category icon appears on the top left of the screen.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.



**Select the desired POI categories from the list and touch “OK”.**

The selected category icon appears on the top left of the screen.



“Select Category”: To return to the POI category selection screen.

“Show List”: To display the list of POIs in the selected categories.



By touching the touch-screen button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

“On Route”: When the indicator is illuminated by touching this touch-screen button, the list of the items searched along the route is displayed.

## DESTINATION SEARCH

### — Destination search by “Emergency”

1. Push the “DEST” button.
2. Touching “Emergency” on the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and the longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.



4. Touch the touch-screen button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

### — Destination search by “Memory”

1. Push the “DEST” button.
2. Touch “Memory” on the “Destination” screen.

A list of registered memory points is displayed. (To register or edit memory points, see “My places” on page 94.)



3. Touch the touch-screen button of your desired memory point.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

### INFORMATION

*The navigation system does not guide in areas where route guidance is unavailable. (See page 257.)*

— Destination search by “Previous”

1. Push the “DEST” button.
2. Touch “Previous” on the “Destination” screen.



The previous starting point and up to 100 previously set destinations are displayed on the screen.

3. Touch the touch-screen button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

**INFORMATION**

*The list of previous destinations can be deleted while the vehicle is stopped, if these destinations are no longer necessary. (See “ — Deleting previous points” on page 108.)*

— Destination search by “Map”

1. Push the “DEST” button.
2. Touch “Map” on the “Destination” screen.



The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 63.)

**INFORMATION**

*Guidance starts if “Enter” is touched even while driving. However, the cursor cannot be moved.*

## DESTINATION SEARCH

---

### — Destination search by “Intersection”

1. Push the “DEST” button.
2. Touch “Intersection” on the “Destination” screen.




3. Input the name of the two intersecting streets which are located near the destination to be set.



4. Touch the touch-screen button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

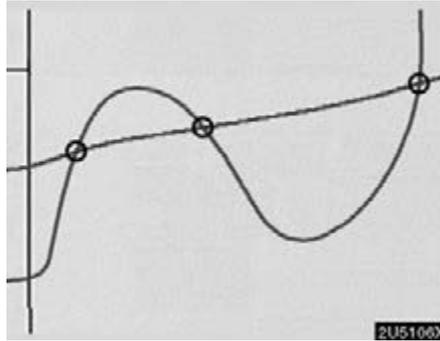

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

— Destination search by “Freeway Ent./Exit”

1. Push the “DEST” button.
2. To input a freeway entrance or exit, touch “Freeway Ent./Exit” on the “Destination” screen.



Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).



3. Select the desired freeway by touching the touch-screen button.



4. Either a freeway “Entrance” or “Exit” can be selected.



5. Touch the touch-screen button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

“Input Name”: An applicable list is displayed by touching this touch-screen button and inputting the name.

## DESTINATION SEARCH

### — Destination search by “Coordinates”

1. Push the “DEST” button.
2. Touch “Coordinates” on the “Destination” screen.



3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the touch-screen button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

### — Destination search by “Phone #”


1. Push the “DEST” button.
2. Touch “Phone #” on the “Destination” screen.



3. Input a telephone number.
4. After inputting a telephone number, touch “OK”.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 63.)

If there is more than one site having the same number, the following screen will be displayed.

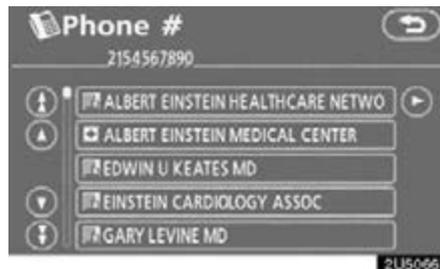


#### INFORMATION

- If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.
- To set a memory point as a destination using the phone number, the number must be registered previously. (See page 101.)

## Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

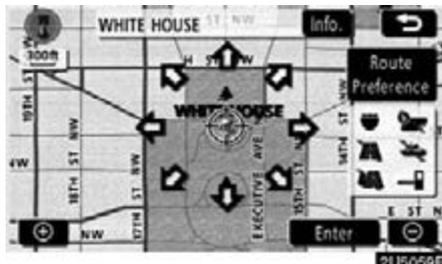

1. When an arrow facing the desired point is touched, the map scrolls in that direction.

Releasing the finger from the arrow will stop the scrolling.

2. Touch "Enter".

The system starts route search and displays recommended routes.

If there is already a set destination, "Add to  and "Replace  are displayed.

"Add to ": To add a destination.

"Replace ": To delete the existing destinations and set a new one.

"Route Preference": To change the route preference. (See page 64.)

"Info.": If this touch-screen button is displayed on the top of the screen, touch it to view items such as name, address, and phone number.



1 Current position

2 Destination point

3 Type of the route and the distance

4 Distance of the entire route

3. To start guidance, touch "Guide".

"3 Routes": To select the desired route from three possible routes. (See page 65.)

"Route": To change the route. (See pages 74 and 76.)

**INFORMATION**

- *Guidance can be suspended or resumed. (See “Suspending and resuming guidance” on page 90.)*
- *If “Guide” is touched until a beep sounds, Demo mode will start. Push the “MAP/VOICE” button to finish Demo mode.*
- *The route for returning may not be the same as that for going.*
- *The route guidance to the destination may not be the shortest route nor a route without traffic congestion.*
- *Route guidance may not be available if there is no road data for the specified location.*
- *When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.*
- *If a destination is entered, the road nearest to the point you selected is set as the destination.*

**CAUTION**

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may provide wrong information.

- **To change the route before starting guidance**

**ROUTE PREFERENCE**



1. You can change route preference by touching “Route Preference”.



2. Turn the indicator on or off by touching the touch-screen button.

When searching for a route, the system functions to avoid routes where the indicator is dimmed.

3. After choosing conditions, touch “OK”.

**INFORMATION**

- *Even if the “Allow Freeway” indicator is dimmed, the route cannot avoid including a freeway in some cases.*
- *If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.*

3 ROUTES SELECTION



1. To select the desired route from three routes, touch “3 Routes”.




2. Touch “Quick1”, “Quick2” or “Short” to select the desired route.

“Quick1”: Recommended route.  
This route is indicated by an orange line.

“Quick2”: Other route.  
This route is indicated by a purple line.

“Short”: A route by which you can reach the destination in the shortest distance.  
This route is indicated by a green line.

“Info.”: To display the following information about each of the 3 routes.

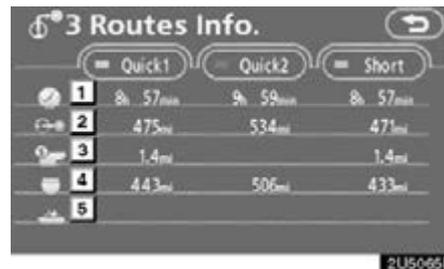

- 1 Time necessary for the entire trip
- 2 Distance of the entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry

## DESTINATION SEARCH

---

# SECTION 3

## ROUTE GUIDANCE

- Route guidance screen ..... 68
- Typical voice guidance prompts ..... 71
- Distance and time to destination ..... 73
- **Setting and deleting destination** ..... 74
  - Adding destinations ..... 74
  - Reordering destinations ..... 74
  - Deleting destinations ..... 75
- **Setting route** ..... 76
  - Search condition ..... 76
  - Detour setting ..... 77
  - Route preference ..... 79
  - Starting route from adjacent road ..... 79
- **Map view** ..... 80
  - Display POI\* icons ..... 80
  - Route overview ..... 82
  - Route preview ..... 83
  - Route trace ..... 84

\*: Point of Interest

## Route guidance screen

During route guidance, various types of guidance screens can be displayed depending on conditions.

- **Screen layout**



- 1 Distance to the next turn and the arrow indicating turning direction
- 2 Current street name
- 3 Distance and travel/arrival time to the destination
- 4 Current position
- 5 Guidance route

### INFORMATION

- *If the vehicle goes off the guidance route, the route is searched again.*
- *For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select road that should not be traveled on.*
- *When you arrive at your destination, destination name will be displayed on the top of the screen. Touching "OFF" clears the display.*

- **During freeway driving**

During freeway driving, the freeway information screen will be displayed.

This screen displays the distance to the next junction and exit, or POIs in the vicinity of the freeway exit.



- 1 Current position
- 2 Points of Interest that are close to a freeway exit.
- 3 Exit number and junction name
- 4 Distance from the current position to the exit or junction
- 5 Current street name

- ①: To display the selected map of the exit vicinity.
- ▲: To scroll for farther junctions or exits.
- ▼: To scroll for closer junctions or exits.
- ⊕: To scroll for the closest three junctions or exits.

- **When approaching a freeway exit or junction**

When the vehicle approaches an exit or junction, the guidance screen for the freeway will be displayed.



- 1 Road/area name
- 2 Distance from the current position to the exit or junction
- 3 Current position

“OFF”: The guidance screen on freeway disappears and the map screen appears.

When touching  or pushing the “MAP/VOICE” button, the guidance screen on freeway reappears.

- **When approaching an intersection**

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.



- 1 Next street name
- 2 Distance to the intersection
- 3 Current position

“OFF”: The intersection guidance screen disappears and the map screen appears.

When touching  or pushing the “MAP/VOICE” button, the intersection guidance screen reappears.

## ROUTE GUIDANCE


---

- **Other screens**

### TURN LIST SCREEN

On this screen, the list of turns on the guidance route can be viewed.

Touching  during guidance displays the turn list.

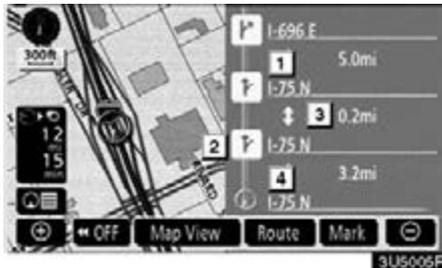

- 1 Next street name or destination name
- 2 Turn direction
- 3 Distance between turns
- 4 Current street name

### ARROW SCREEN

On this screen, information about next turns on the guidance route can be viewed.


Touching  during guidance displays the arrow screen.




- 1 Exit number, street name containing number or next street name
- 2 Turn direction
- 3 Distance to the next turn
- 4 Current street name

### Typical voice guidance prompts

The voice guidance provides various messages as you approach an intersection, or other point where you need to maneuver the vehicle.

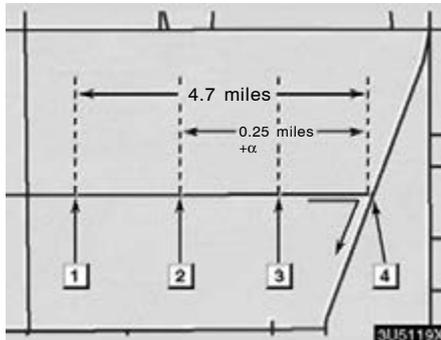


- 1 "Proceed about 5 miles."
- 2 "In a quarter of a mile, right turn."
- 3 "Right turn."
- 4 (Beep sound only)

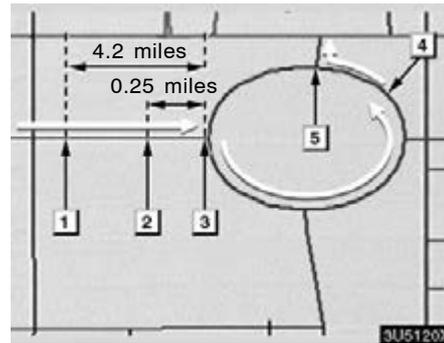

- 1 "Proceed about 4 miles to the traffic circle."
- 2 "In a quarter of a mile, traffic circle ahead, and then 3rd exit ahead."
- 3 "The 3rd exit ahead."
- 4 "The exit ahead."
- 5 (Beep sound only)


**INFORMATION**  
*On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver.*

## ROUTE GUIDANCE

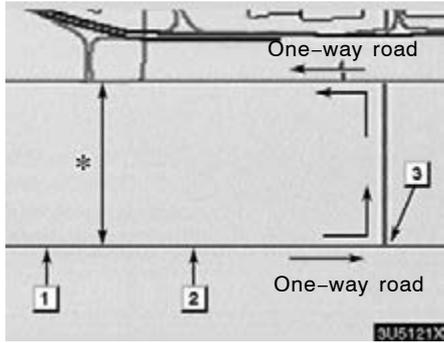

\*: The system indicates a U-turn if the distance between two one-way roads (of opposite directions) is less than 50 feet (15 m) in residential areas or 164 feet (50 m) in non-residential areas.

- 1  "In half of a mile, make a legal U-turn."
- 2  "Make a legal U-turn ahead."
- 3  (Beep sound only)

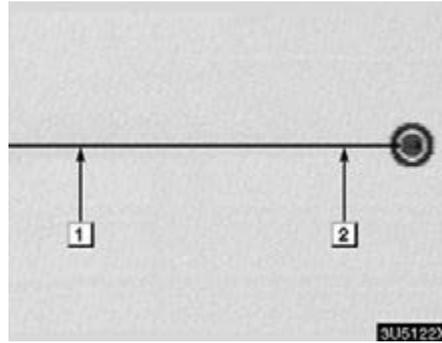

The system announces the approach to the final destination.

- 1  "Your destination is ahead."
- 2  "You have arrived at your destination. The route guidance is now finished."

### INFORMATION

- *If the system cannot determine the current vehicle position correctly (in cases of poor GPS signal reception), the voice guidance may be made early or delayed.*
- *If you did not hear the voice guidance command, push the "MAP/VOICE" button to hear it again.*
- *To adjust the voice guidance volume, see "Volume" on page 91.*

## Distance and time to destination



When the vehicle is on the guidance route, the distance and the estimated travel/arrival time to the destination are displayed. When the vehicle is not on the guidance route, the distance and the direction of the destination are displayed.

When driving on the guidance route and more than one destination is set, the distance and the estimated travel/arrival time from the current position to each destination are displayed.

1. Touch this touch-screen button to display the following screen.



2. Touch the number button to display the desired destination.

The distance, the estimated travel time and the estimated arrival time from the current position to the selected destination are displayed.



Estimated travel time is displayed.



Estimated arrival time is displayed.



To switch to estimated arrival time.



To switch to estimated travel time.



Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

### INFORMATION

*When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time is calculated based on the set vehicle speed information. (See page 109.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.*


## ROUTE GUIDANCE

### Setting and deleting destination — — Adding destinations

Adding destinations and searching again for the routes can be done.




1. Touch "Route".

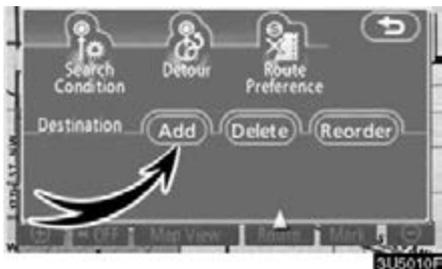

2. Touch "Add".

3. Input an additional destination in the same way as the destination search. (See "Destination search" on page 43.)

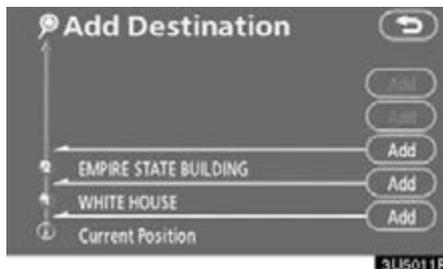

4. Touch the desired "Add" to determine the arrival order of the additional destination.

### — Reordering destinations

When more than one destination is set, you can change the arrival order of the destinations.



1. Touch "Route".



2. Touch "Reorder".



3. Select the destination in the order of arrival by touching the destination button.

Reordered number of arrival is displayed on the right side of the screen.

Touching "Undo" will cancel each selected order number from the previously input number.

— Deleting destinations

**4. After selecting the destinations, touch “OK”.**

The system searches for the guidance route again, and displays the entire route. Even if “OK” is not touched, the entire route is displayed automatically within a few seconds when the order is fixed.

A set destination can be deleted.



**1. Touch “Route”.**



**2. Touch “Delete”.**

When more than one destination is set, a list will be displayed on the screen.



**3. Touch the destination for deletion.**

“Delete All”: To delete all destinations on the list.

A message appears to confirm the request to delete.

## ROUTE GUIDANCE

4. To delete the destination(s), touch “Yes”.

If “Yes” is touching, the data cannot be recovered.

If “No” is touching, the previous screen will return.

5. If more than one destination is set, touch “OK” after deleting the destinations.


The system searches for the guidance route again, and displays the entire route.

### Setting route — — Search condition

You can designate the route conditions of the route to the destination.



1. Touch “Route”.

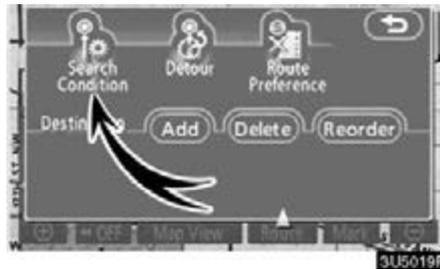

2. Touch “Search Condition”.



3. Touch “Quick”, “Quick1”, “Quick2” or “Short” and touch “OK”.

### — Detour setting

While the route guidance is operating, you can change the route to detour around a section of the route where a delay is caused by road repairs, or an accident, etc.




The entire route from the starting point to the destination is displayed.

“**Guide**” : To start guidance.

“**Route**” : To change a route. (See pages 74 and 76.)



1. Touch “Route”.

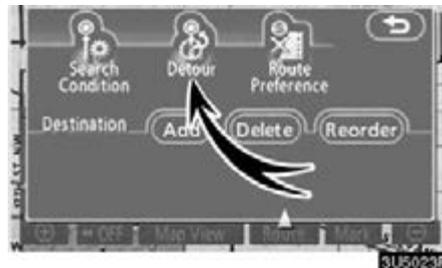

2. Touch “Detour”.

## ROUTE GUIDANCE


---



3. Select the touch-screen button below to select the desired detour distance.

**“1 mile (km)”, “3 miles (km)” or “5 miles (km)”**: Touch one of these touch-screen buttons to start the detour process. After detouring, the system returns to the original guidance route.

**“Whole Route”**: By touching this touch-screen button, the system will calculate an entire new route to the destination.

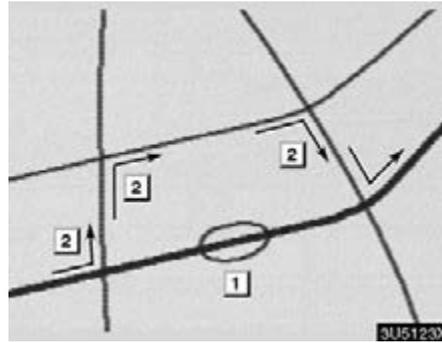

This picture shows an example of how the system would guide around a delay caused by a traffic jam.

- 1 This position indicates the location of a traffic jam caused by road repairs or an accident.
- 2 This route indicates the detour suggested by the system.

### INFORMATION


- *When your vehicle is on a freeway, the detour distance selections are 5, 15, and 25 miles (km).*
- *The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.*

— Route preference

A number of choices are provided on the conditions which the system uses to determine the route to the destination.



1. Touch “Route”.

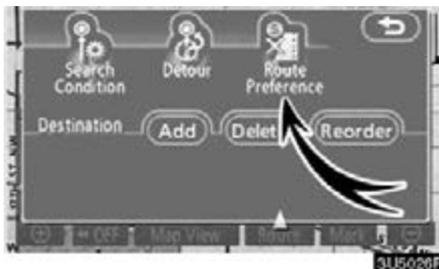

2. Touch “Route Preference” to change the conditions which are to determine the route to the destination.



3. The indicator can be turned on or off by touching the button.

When searching for a route, the system functions to avoid routes where the indicator is dimmed.

4. After choosing the conditions, touch “OK”.


— Starting route from adjacent road

You can start the route guidance from the adjacent road.

(ex. When route guidance is set on the freeway, but the vehicle is driven parallel along the freeway.)



1. Touch “Route”.

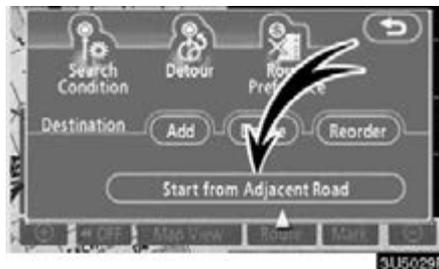

2. Touch “Start from Adjacent Road”.  
When there is no adjacent road, this button will not be displayed.

## Map view — — Display POI icons

Points of Interest such as gas stations and restaurants can be displayed on the map screen. You can also set their location as a destination and use them for route guidance.



1. Touch “Map View”.



2. Touch “Display POI Icon” to display a particular type of Point of Interest on the screen.



A screen with a limited choice of Points of Interest will be displayed. (To change the displayed POI, see page 112.)

- **Selecting POIs to be displayed**

Up to 5 categories of icons can be displayed on the screen.



Touch the desired Point of Interest category to display POI location symbols on the map screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

To turn off the Points of Interest icon on the map screen, touch “Delete”.

“Other POIs”: If the desired Point of Interest cannot be found on the limited choice screen, touch this button. The screen then displays the complete POI listing screen.

“Local POI List”: When searching for the nearest Point of Interest, touch this touch-screen button. The system will list the points within 20 miles (32 km). (See page 81.)

**Touch “Other POIs” on the “Display POI Icons” screen.**

When a Point of Interest category is selected from either the limited list or the complete list, the screen will display symbols at those locations on the map screen.



**Select the desired POI categories.**

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.



**Select the desired POI categories from the list.**

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

To return to the POI category selection screen, touch “More”.

**To display the local POI list**

Points of Interest that are within 20 miles (32 km) of the current position will be listed from among the selected categories.



**1. Touch “Local POI List” on the “Display POI icons” screen.**



**2. Touch the touch–screen button of the desired Point of Interest.**

The selected Points of Interest are displayed on the map screen.

“On Route”: When the indicator is illuminated by touching this touch–screen button, the list of the items searched along the route is displayed.

## ROUTE GUIDANCE

- **To set a POI as a destination**

You can select one of the Points of Interest icons on the map screen as a destination and use it for route guidance.



1. **Directly touch the Point of Interest icon that you want to set as a destination.**

The map will shift so that the icon is centered on the screen and overlaps with the cursor . At this time, the distance from the current position is displayed on the screen. The distance shown is measured as a straight line from the current vehicle position to the POI.

2. **When the desired Point of Interest overlaps with the cursor, touch “Enter” .**

The screen changes and displays the map location of the selected destination and route preference. (See “Starting route guidance” on page 63.)

### — Route overview



1. **Touch “Map View”.**



2. **Touch “Route Overview”.**



The entire route from the current position to the destination is displayed.

“**Guide**”: To start guidance.

“**Route**”: To change the route. (See pages 74 and 76.)

“**Turn List**”: The following screen displays the list of the roads up to the destination.



You can scroll through the list of roads by touching  or . However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through two or more cities), the name change will not appear on the list. The street name closest to the starting point will be displayed with the mileage to the next turn.

-  These marks indicate the direction in which you should turn at an intersection.
- 

**Touch “Map” on the “Turn List” screen.**

The point which you choose is displayed on the map screen.



**— Route preview**




**1. Touch “Map View”.**



**2. Touch “Route Preview”.**

## ROUTE GUIDANCE

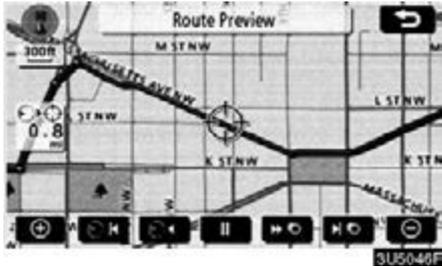

-  : To indicate the next destination.
-  : To preview the route to the next destination.
-  : To preview the route to the next destination in fast-forward mode.
-  : To stop the preview.
-  : To review the route to the previous destination or starting point.
-  : To review the route to the previous destination or starting point in fast-forward mode.
-  : To indicate the previous destination or starting point.

### — Route trace

It is possible to store the traveled route up to 124 miles (200 km) and retrace the route on the display.

#### INFORMATION

*This feature is available on the map with more detailed map scale than 30 miles (50 km).*



Touch “Map View”.



“Record”: To start recording the route trace.

“Stop”: To stop recording the route trace.

If you touch “Stop” to display the following screen.

## ROUTE GUIDANCE

---



Touching **“Yes”** stops recording and the route trace remains displayed on the screen.

Touching **“No”** stops recording and the route trace is erased.

## **ROUTE GUIDANCE**

---

# SECTION 4


## ADVANCED FUNCTIONS

### Descriptions of functions for more effective use

- Quick reference (“Menu” screen) ..... 88
- Quick reference (“Setup” screen) ..... 89
- Suspending and resuming guidance ..... 90
- Volume ..... 91
- User selection ..... 92
- **My places** ..... 94
  - Registering memory points ..... 95
  - Editing memory points ..... 96
  - Deleting memory points ..... 101
  - Registering home ..... 102
  - Deleting home ..... 103
  - Registering area to avoid ..... 103
  - Editing area to avoid ..... 104
  - Deleting area to avoid ..... 107
  - Deleting previous points ..... 108
- Setup ..... 108

### Quick reference (“Menu” screen)


The “Menu” screen allows effective use of the navigation system. To display the “Menu” screen, push the “MENU” button.

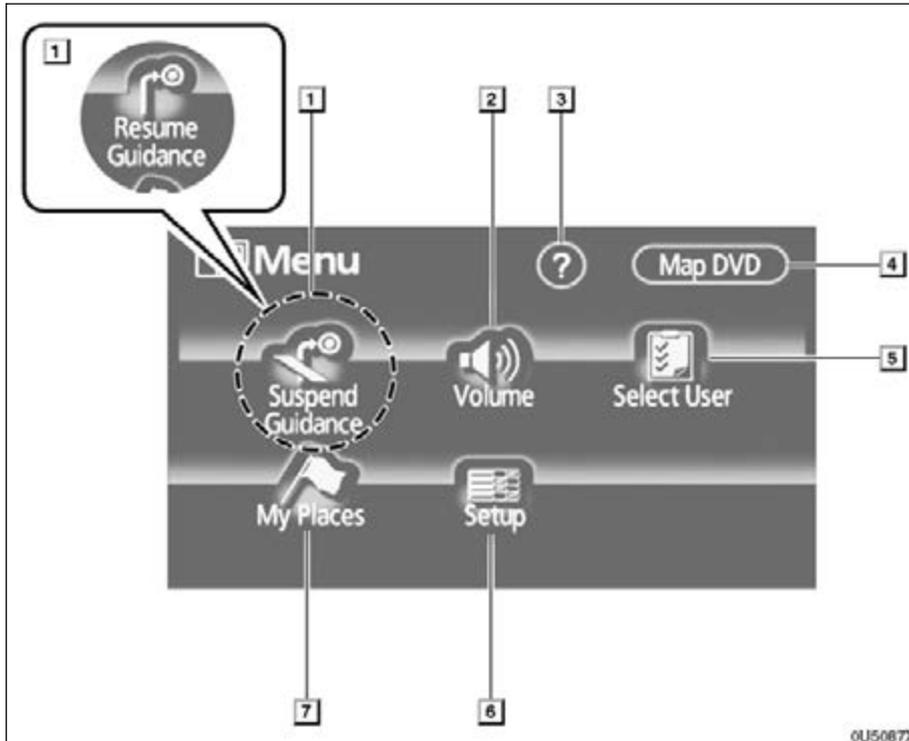

<p><b>1</b> “Suspend Guidance” and “Resume Guidance” Suspends or resumes guidance . . . . 90</p> <p><b>2</b> “Volume” Sets the volume for voice guidance. ..... 91</p> <p><b>3</b> “?” Function help for the “Menu” screen can be viewed on this screen. .... 30</p> <p><b>4</b> “Map DVD” Displays information regarding the disc version or covered area. .... NO TAG</p>	<p><b>5</b> “Select User” Up to 3 different settings for different users can be memorized. .... 92</p> <p><b>6</b> “Setup” Enables various settings for the navigation system. .... 89,108</p> <p><b>7</b> “My Places” Enables changes to “Memory points”, “Home” and “Areas to avoid”. Enables deletion of the previous point. .... 94</p>
---	---

### Quick reference (“Setup” screen)

The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button and touch “Setup”.

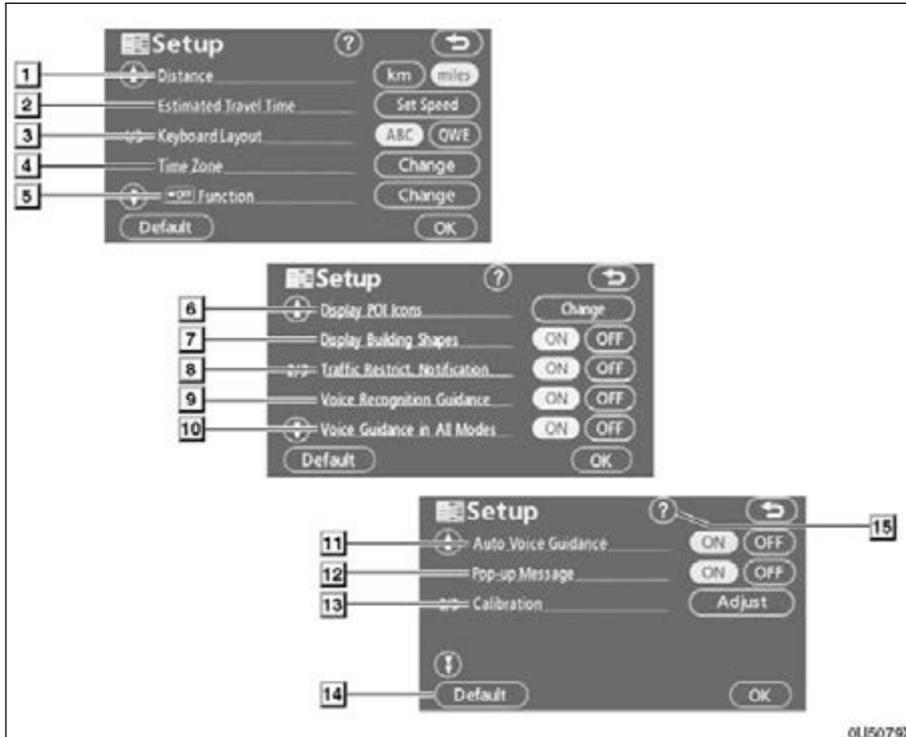


- 1 “Distance”**  
The distance units “km” or “miles” can be selected. . . . . 109
- 2 “Estimated Travel Time”**  
The system to display the travel time and the arrival time to the destination on the route guidance screen can be set. . . . . 109
- 3 “Keyboard Layout”**  
Key layout can be changed. . . . . 110
- 4 “Time Zone”**  
The desired time zone can be selected. . . . . 111

- 5 “Voice Function”**  
The choice whether to display each touch-screen button and current street name on the map screen can be set. . . . . 112
- 6 “Display POI Icons”**  
A selection of 6 icons displayed on the “Display POI Icons” top screen is possible. . . . . 112
- 7 “Display Building Shapes”**  
Selection of either ON or OFF to display the building shape on the map screen is possible . . . . . 113
- 8 “Traffic Restrict. Notification”**  
Notification of seasonal restrictions can be selected. . . . . 114

- 9** “Voice Recognition Guidance”  
 Voice recognition guidance can be set.  
 ..... 114
- 10** “Voice Guidance in All Modes”  
 Voice guidance can be set in all modes.  
 ..... 115
- 11** “Auto Voice Guidance”  
 Automatic voice guidance can be set.  
 ..... 115
- 12** “Pop-up Message”  
 Selection of either ON or OFF to display  
 the pop-up message is possible.  
 ..... 116
- 13** “Calibration”  
 Adjustment of the current vehicle position  
 mark can be done manually, or mis-  
 calculation by changing tire will be adjusted.  
 ..... 117
- 14** “Default”  
 This touch-screen button initializes all of  
 the settings. .... 108
- 15** “?”  
 Function help for the “Setup” screen can  
 be viewed. .... 30

## Suspending and resuming guidance

- To suspend guidance

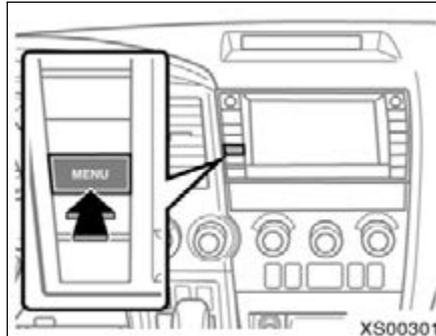

1. Push the “MENU” button.



2. Touch “Suspend Guidance”.

### INFORMATION

**Without route guidance, “Suspend Guidance” cannot be used.**



The screen will return to the current position map without route guidance.

- **To resume guidance**

1. Push the “MENU” button.




2. Touch “Resume Guidance”.



The screen will change to the current position map with route guidance.

## Volume

The voice guidance volume can be adjusted or switched off.

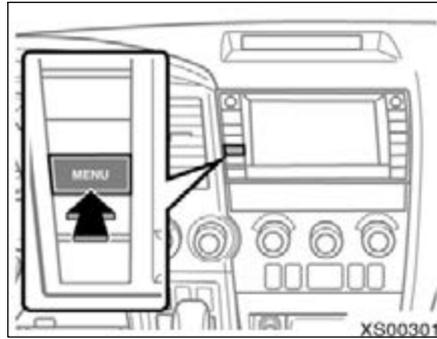


1. Push the “MENU” button.



2. Touch “Volume”.

## ADVANCED FUNCTIONS

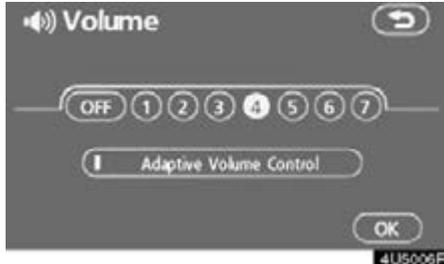

To adjust the volume, select the desired level by touching the appropriate number. If voice guidance is unneeded, touch “OFF” to disable the feature.

The selected item is highlighted.

**3. Touch “OK” to confirm your selection.**

### INFORMATION

*During route guidance, the voice guidance continues even if the navigation screen is changed to other screens.*


**“Adaptive Volume Control”:** By turning “Adaptive Volume Control” on, the volume is turned up automatically when the vehicle speed exceeds 50 mph (80 km/h).

To turn the “Adaptive Volume Control” system on, touch the button. The indicator will be highlighted.

## User selection

The system can memorize the following settings for up to three users.

- Map direction
- Map scale
- Map configuration
- Guidance mode
- Setup
- Volume
- Language
- Route trace
- Travel time/arrival time
- Right screen of dual map
- Road preference
- Maintenance notification

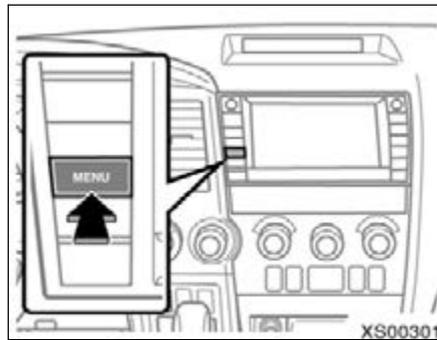


**1. Push the “MENU” button.**




**2. Touch “Select User”.**

- To register

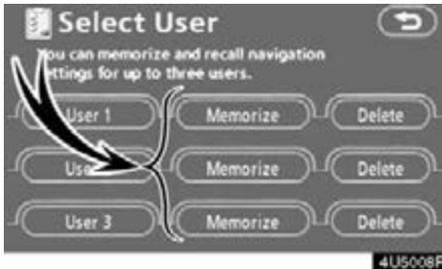

1. Touch "Memorize".

The confirmation screen will be displayed.

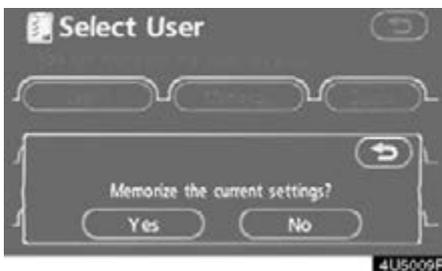


2. To register, touch "Yes". To return to the previous screen, touch "No" or .

When a touch-screen button that is already registered is touched, the following screen appears.



To replace, touch "Yes". To cancel the replacement, touch "No" or .

- To change user

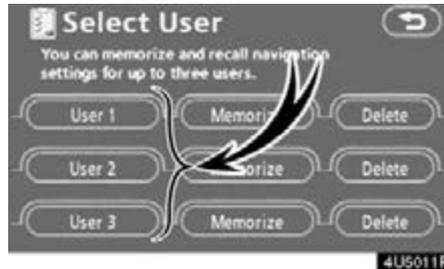


Touch "User number".




The above message appears, then the map screen will be displayed.

- To delete user

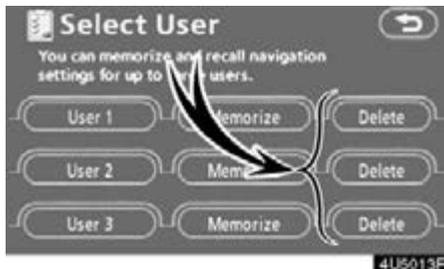

1. Touch "Delete".

The confirmation screen will be displayed.

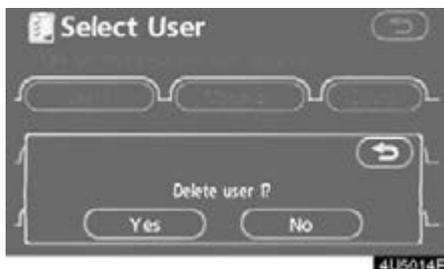

2. To delete, touch "Yes". To return to the previous screen, touch "No" or




## My places —

Points or areas on the map can be registered.

The registered points can be used on the "Destination" screen. (See " — Destination search by Home" on page 46 and " — Destination search by Quick access" on page 46.)

Registered areas are avoided at the time of route search.

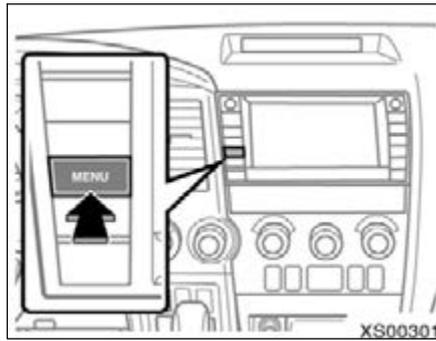


1. Push the "MENU" button.



2. Touch "My Places".

## — Registering memory points

1. Push the “MENU” button.
2. Touch “My Places”.

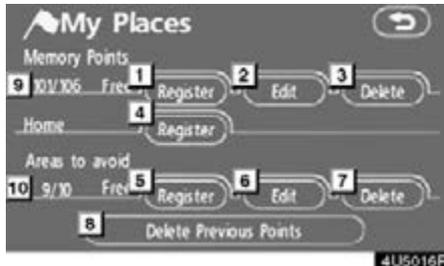


On this screen, the following operations can be performed.

1. **Registers memory points.** (See “ — Registering memory points” on page 95.)
2. **Edits memory points.** (See “ — Editing memory points” on page 96.)
3. **Deletes memory points.** (See “ — Deleting memory points” on page 101.)
4. **Registers or deletes home.** (See “ — Registering home” or “ — Deleting home” on pages 102 or 103.)
5. **Registers areas to avoid.** (See “ — Registering area to avoid” on page 103.)
6. **Edits areas to avoid.** (See “ — Editing area to avoid” on page 104.)
7. **Deletes areas to avoid.** (See “ — Deleting area to avoid” on page 107.)
8. **Deletes previous points.** (See “ — Deleting previous points” on page 108.)
9. **Number of remaining memory points**
10. **Number of remaining areas to avoid**



3. Touch “Register”.

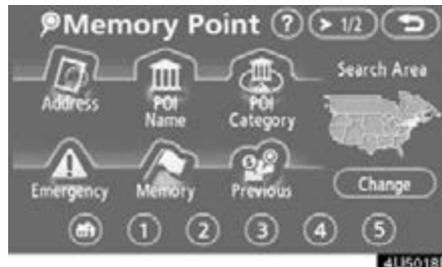

4. **Enter the location in the same way as for a destination search.** (See “Destination search” on page 43.)

After memory point registration is completed, the “Memory Point” screen will be displayed.

## ADVANCED FUNCTIONS

---



**5. Touch “OK”.**

To edit registered information, see “ — Editing memory points” on page 96.

### **INFORMATION**

*Up to 106 memory points can be registered.*

### — Editing memory points

The icon, attribute, name, location and/or telephone number of a registered memory point can be edited.

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Edit”.



4. Touch the desired memory point button.



**5. Touch the touch-screen button to be edited.**

**“Icon”**: To select icons to be displayed on the map. (See page 97.)

**“Quick Access”**: To set an attribute. Memory points with a set attribute can be used as a “Quick access” or “Home” button. (See page 98.)

**“Name”**: To edit memory point names. The names can be displayed on the map. (See page 99.)

**“Location”**: To edit location information. (See page 100.)

**“Phone #”**: To edit telephone numbers. (See page 101.)

**6. Touch “OK”.**

● **To change “Icon”**

**1. Touch “Icon” on the “Memory Point” screen.**



**2. Touch the desired icon.**

Turn the page by touching **“Page 1”**, **“Page 2”** or **“with Sound”**.

## ADVANCED FUNCTIONS

### SOUND ICONS


When the vehicle approaches the memory point, the selected sound will be heard.

1. Touch “with Sound” on the “Change Icon” screen.



2. Touch the desired sound icon.

The next screen appears when “Bell (with Direction)” is touched.

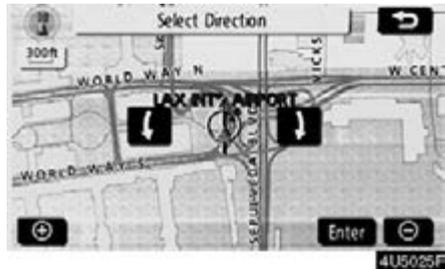

Touch either  or  to adjust the direction. Touch “Enter”.

The bell sounds only when the vehicle approaches this point in the direction that has been set.

- To change “Quick Access”

It is possible to change attributes of the quick access points. Memory points with a set attribute can be used as a “Quick Access” or “Home” touch-screen button. (See “ — Destination search by Home” on page 46 and “ — Destination search by Quick access” on page 46.)

1. Touch “Quick Access” on the “Memory Point” screen.



2. Touch the desired attribute.

It is possible to replace a registered attribute.



3. To replace the attribute, touch “Yes”. To return to the previous screen, touch “No” or .

### INFORMATION

One “Home” and five “Quick Access” can be set.

**DELETING “Quick Access”**



1. Touch “Del.”.



2. To delete an attribute, touch “Yes”. To return to the previous screen, touch “No” or .

● To change “Name”

1. Touch “Name” on the “Memory Point” screen.



2. Enter the name using the alphanumeric keys.

Up to 24 letters can be entered.

3. Touch “OK”.


The previous screen will be displayed.

## ADVANCED FUNCTIONS

---

### DISPLAYING MEMORY POINT NAMES


The name of a memory point that may be displayed on the map can be set.

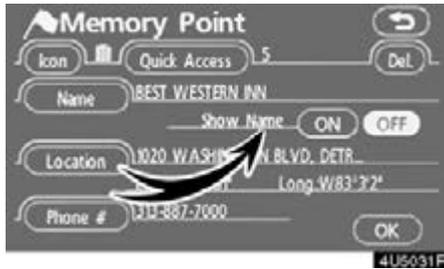

To show the name, touch "ON" on the "Memory Point" screen. Not to show it, touch "OFF".

### • To change "Location"

1. Touch "Location" on the "Memory Point" screen.

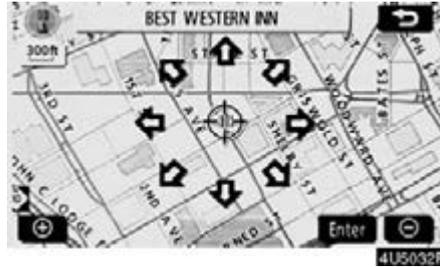

2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch "Enter".

The previous screen will be displayed.

- To change “Phone #” (telephone number)

1. Touch “Phone #” on the “Memory Point” screen.



2. Enter the number using numeral keys.

3. Touch “OK”.


The previous screen will be displayed.

## — Deleting memory points

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Delete”.

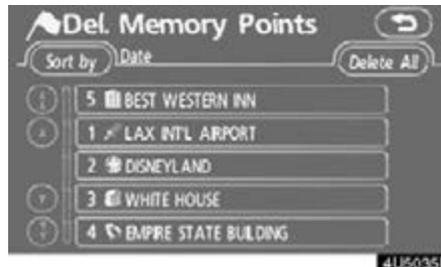

4. Touch the touch-screen button to be deleted.

“Delete All”: To delete all memory points in the system.

5. To delete the memory point, touch “Yes”. To cancel the deletion, touch “No”.

## ADVANCED FUNCTIONS

### — Registering home

If home has been registered, that information can be recalled by using the “Home” touch-screen button on the “Destination” screen. (See “ — Destination search by Home” on page 46.)

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Register”.



4. Enter the location in the same way as for a destination search. (See “Destination search” on page 43.)

When registration of home is completed, the “Memory Point” screen will be displayed.



5. Touch “OK”.

To edit registered information, see “ — Editing memory points” on page 96.

— Deleting home

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Delete”.
4. To delete home, touch “Yes”. To cancel the deletion, touch “No”.

— Registering area to avoid

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Register”.



4. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “Destination search” on page 43.)



5. Touch the eight directional touch-screen button to set the cursor in the center of the area to avoid, and touch “Enter”.

## ADVANCED FUNCTIONS



6. Touch either  or  to change the size of the area to be avoided.

7. Touch "OK".

### INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid. If there are 10 locations already registered, the following message will be displayed: "Unable to register additional points. Perform operation again after deleting unnecessary points."


### — Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the "MENU" button.
2. Touch "My Places".



3. Touch "Edit".

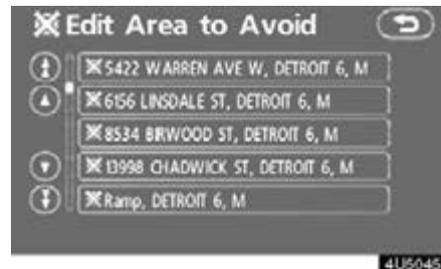

4. Touch the desired area button.

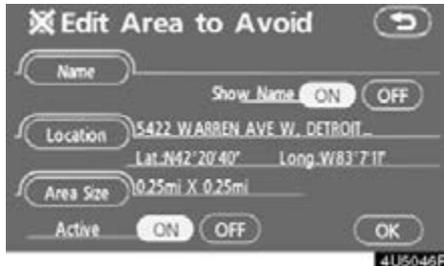

**5. Touch the touch-screen button to be edited.**

**“Name”**: To edit the name of the area to avoid. The names can be displayed on the map. (See page 105.)

**“Location”**: To edit area location. (See page 106.)

**“Area Size”**: To edit area size. (See page 107.)

**“Active”**: To turn on or off the area to avoid feature. To turn on the feature touch **“ON”** on the “Edit Area to Avoid” screen. To turn off the feature touch **“OFF”** on the “Edit Area to Avoid” screen.

**6. Touch “OK”.**

● **To change “Name”**

**1. Touch “Name” on the “Edit Area to Avoid” screen.**



**2. Enter the name using alphanumeric keys.**

Up to 24 letters can be entered.

**3. Touch “OK”.**

The previous screen will be displayed.

## ADVANCED FUNCTIONS

---

### DISPLAYING NAMES OF AREAS TO BE AVOIDED

The name of an area to be avoided that may be displayed on the map can be set.



To show the name, touch “ON” on the “Edit Area to Avoid” screen. Not to show it, touch “OFF”.

- To change “Location”

1. Touch “Location” on the “Edit Area to Avoid” screen.



2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch “Enter”.

The previous screen will be displayed.

● To change “Area Size”

1. Touch “Area Size” on the “Edit Area to Avoid” screen.



2. Touch either  or  to change the size of the area to be avoided.

3. Touch “OK”.

The previous screen will be displayed.

— Deleting area to avoid

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Delete” on the “My Places” screen.



4. Touch the touch-screen button to be deleted.

“Delete All”: To delete all registered areas to avoid in the system.

5. To delete the area, touch “Yes”. To cancel the deletion, touch “No”.

## ADVANCED FUNCTIONS

### — Deleting previous points

The previous destination can be deleted.

1. Push the “MENU” button.
2. Touch “My Places”.



3. Touch “Delete Previous Points”.



4. Touch the touch-screen button you want to delete.


“Delete All”: To delete all previous points in the system.



5. To delete the point, touch “Yes”. To cancel the deletion, touch “No”.

### Setup


Setting the items shown on the “Setup” screen can be done. (See page 89.)

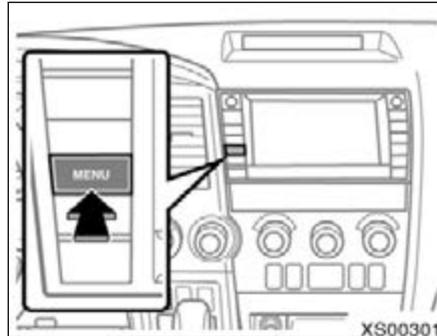

1. Push the “MENU” button.



2. Touch “Setup”.

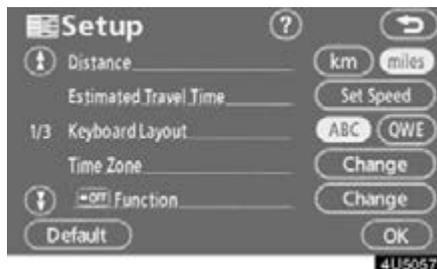

3. Touch the items to be set.

4. Touch “OK”.

The previous screen will be displayed.


### INFORMATION

To reset all setup items, touch “Default”.

● **Distance unit**

Distance unit can be changed.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

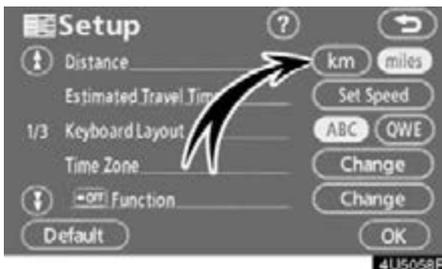

3. Touch “km” or “miles” of “Distance” to choose the distance unit.

The selected button is highlighted.

4. Touch “OK”.


**INFORMATION**

*This function is available only in English or Spanish. To switch language, see “Select a language” on page 185.*

● **Estimated travel time**

The speed that is used for the calculation of the estimated travel time and the estimated arrival time can be set.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

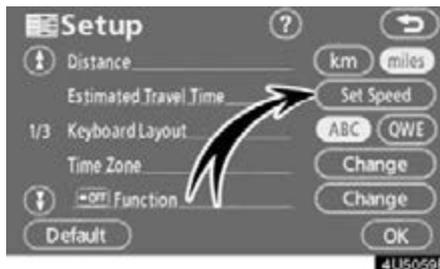

3. Touch “Set Speed” of the “Estimated Travel Time”.



4. Touch ◀ or ▶ to set the average vehicle speeds for “Residential”, “Main street”, and “Freeway”.

To set the default speeds, touch “Default”.

5. After setting of the desired speeds is completed, touch “OK”.


**INFORMATION**

- *The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.*
- *The time shown on the screen may vary greatly depending on progress along the route, which may be affected by road conditions such as traffic jams, and construction work.*
- *It is possible to display up to 99 hours 59 minutes.*

- **Input key layout**

Key layout can be changed.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

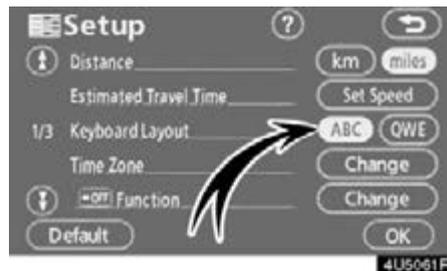

3. Touch “ABC” or “QWE” of “Keyboard Layout” to choose the Input key layout.

**LAYOUT TYPE**



► **“ABC” type**



► **“QWE” type**


The selected button is highlighted.

**4. Touch “OK”.**

● **Time zone**

Time zone can be changed.

1. Push the **“MENU”** button.
2. Touch **“Setup”** on the **“Menu”** screen.

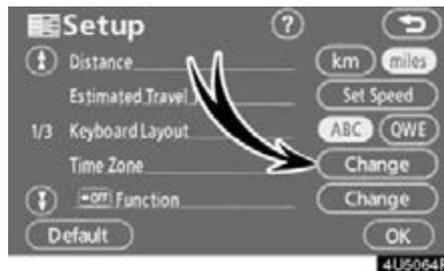

**3. Touch “Change” of “Time Zone”.**

The **“Adjust Time Zone”** screen will be displayed on the display.



**4. Touch the desired time zone.**

The selected button is highlighted.

**“Daylight Saving Time”**: Daylight saving time can be set or cancelled.

To set daylight saving time, touch **“ON”**, and to cancel it, touch **“OFF”**.


**5. Touch “OK”.**

## ADVANCED FUNCTIONS

- **Screen layout function (MENU Function)**

Each touch-screen button and current street name on the map screen can be displayed or hidden.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

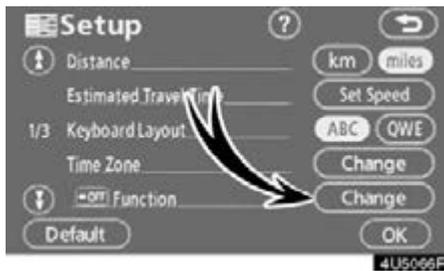

3. Touch “Change” of “MENU Function”.



4. Touch the touch-screen button to be turned off. The button becomes dimmed.

To set the default, touch “Default”.


5. Touch “OK”.

- **POI category change (Display POI Icons)**

Select from among the 6 icons displayed on the “Display POI Icons” top screen, so that setting of the icons to be displayed on the map screen can be done easily.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  to display page 2 of the “Setup” screen.

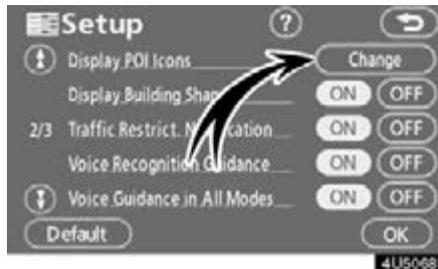

3. Touch “Change” of “Display POI Icons”.



4. Touch the category button to be changed.



5. Touch the category button to be displayed on the “Display POI Icons” top screen.

6. Touch “OK”.


● **Display of building shape**

When the “Display Building Shapes” feature is turned on, the system will display the building shape on the map screen using a scale of 150 feet (50 m) to 300 feet (100 m).

To turn the “Display Building Shapes” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  to display page 2 of the “Setup” screen.

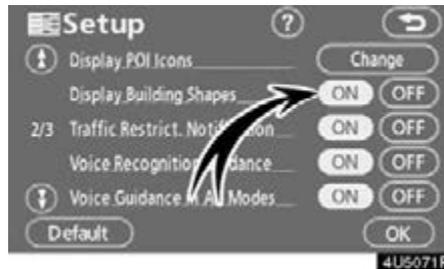

3. Touch “ON” of “Display Building Shapes”.

The selected button is highlighted.

4. Touch “OK”.

## ADVANCED FUNCTIONS

---

- **Notifying traffic restriction**

When the “Traffic Restrict. Notification” feature is turned on, the system notifies you of traffic or seasonal restrictions.

To turn the “Traffic Restrict. Notification” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Traffic Restrict. Notification”.

The selected button is highlighted.

4. Touch “OK”.

- **Voice recognition guidance**

When the “Voice Recognition Guidance” feature is turned on, the voice recognition guidance can be heard automatically.

To turn the “Voice Recognition Guidance” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Voice Recognition Guidance”.

The selected button is highlighted.

4. Touch “OK”.

● **Voice guidance in all modes**

When the “Voice Guidance in All Modes” feature is turned on, the voice guidance in all modes can be heard.

When the “Voice Guidance in All Modes” feature is turned off, voice guidance cannot be heard when using the audio system.

To turn the “Voice Guidance in All Modes” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  to display page 2 of the “Setup” screen.



3. Touch “ON” of “Voice Guidance in All Modes”.

The selected button is highlighted.

4. Touch “OK”.

● **Auto voice guidance**

When the “Auto Voice Guidance” feature is turned on, the voice guidance can be heard automatically.

When the “Auto Voice Guidance” feature is turned off, the voice guidance can be heard only if the “MAP/VOICE” button is pushed.

To turn the “Auto Voice Guidance” mode on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  twice to display page 3 of the “Setup” screen.



3. Touch “ON” of “Auto Voice Guidance”.

The selected button is highlighted.

4. Touch “OK”.

## ADVANCED FUNCTIONS

---

- **Pop-up message**

When the “Pop-up Message” is turned on, the Pop-up message will be displayed.

To turn the “Pop-up Message” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ twice to display page 3 of the “Setup” screen.




3. Touch “ON” of “Pop-up Message”.

The selected button is highlighted.

4. Touch “OK”.

When the “Pop-up Message” is turned off, following messages are not displayed.

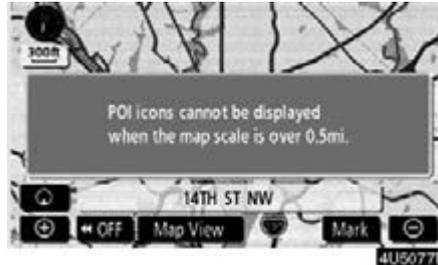

This message appears when the system is in the POI mode and the map scale is 1 mile (1.6 km) or greater.



The message appears when the map is switched to the dual map screen mode.

- **Current position/tire change calibration**

The current vehicle position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  twice to display page 3 of the “Setup” screen.



3. Touch “Adjust” of “Calibration”.




4. Touch the desired touch-screen button.

**INFORMATION**


*For additional information on the accuracy of a current vehicle position, see “Limitations of the navigation system” on page 256.*

**POSITION/DIRECTION CALIBRATION**

When driving, the current vehicle position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, you can manually adjust the current vehicle position mark.

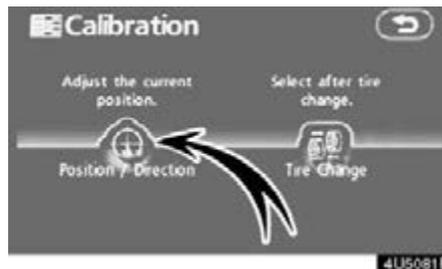

1. Touch “Position/Direction”.

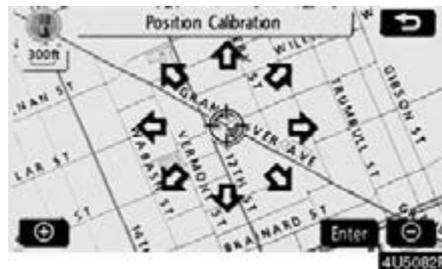

2. Touch the eight directional touch-screen button to move the cursor  to the desired point on the map.

## ADVANCED FUNCTIONS

---

### 3. Touch “Enter”.




### 4. Touch either or to adjust the direction of the current vehicle position mark.

### 5. Touch “Enter”.

The map screen will be displayed.

## TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust the miscalculation caused by the circumference difference between the old and new tires. If this procedure is not performed when tires are replaced, the current vehicle position mark may be incorrectly displayed.

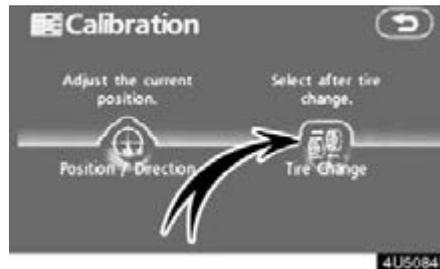

To perform a distance calibration procedure, touch “Tire Change” on the “Calibration” screen.

The message appears and the quick distance calibration is automatically started. A few seconds later, a map screen will be displayed.

## SECTION 5


### OTHER FUNCTIONS

- **Maintenance information** ..... 120
  - Maintenance information setting ..... 120
  - Dealer setting ..... 122
- **Calendar with memo** ..... 124
  - Adding a memo ..... 126
  - Editing a memo ..... 127
  - Memo list ..... 127
- **Hands-free system (for cellular phone)** ..... 129
  - Enter a Bluetooth® phone ..... 134
  - Call on the Bluetooth® phone ..... 137
  - Receive on the Bluetooth® phone ..... 143
  - Talk on the Bluetooth® phone ..... 144
  - Change the settings of the Bluetooth® phone ..... 146
  - Set a Bluetooth® phone ..... 169
- **Speech command system** ..... 175
- **Help screen** ..... 178
- **Screen adjustment** ..... 179
- **Screen setting** ..... 181
- **Delete personal data** ..... 183
- **Beep setting** ..... 184
- **Select a language** ..... 185


## OTHER FUNCTIONS

### Maintenance information — — Maintenance information setting

When the Navigation System is turned on, the “Information” screen displays when it is time to replace a part or certain components. (See page 25.)

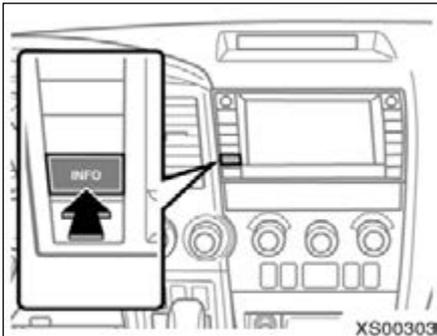

1. Push the “INFO” button.

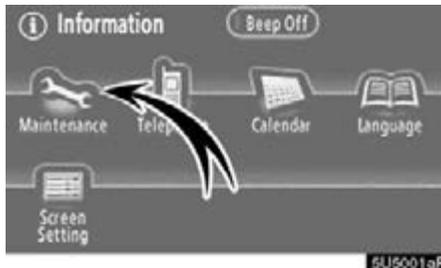

2. Touch “Maintenance”.



3. Touch the desired touch-screen button.

For details of each touch-screen button, see “INFORMATION ITEMS” on page 121.

“Delete All”: To cancel all conditions which have been inputted.

“Reset All”: To reset the item which has satisfied a condition.

“Set Dealer”: To register or edit dealer information. (See “ — Dealer setting” on page 122.)

If “ON” is selected, the system gives maintenance information with the “Information” screen when the system is turned on. (See page 25.)

If “OFF” is selected, the “Information” screen is disabled.

When the vehicle needs to be serviced, the touch-screen button color will change to orange.

**INFORMATION ITEMS**

- “ENGINE OIL”: Replace engine oil
- “OIL FILTER”: Replace engine oil filter
- “ROTATION”: Rotate tires
- “TIRES”: Replace tires
- “BATTERY”: Replace battery
- “BRAKE PAD”: Replace brake linings
- “WIPERS”: Replace wiper blades
- “LLC”: Replace engine coolant
- “BRAKE OIL”: Replace brake fluid
- “ATF”: Replace ATF
- “SERVICE”: Scheduled maintenance
- “AIR FILTER”: Replace air filter
- “PERSONAL”: New information items can be created separately from provided ones



**4. Input the conditions.**

**Notice of “Date”:** The next maintenance date can be input.

**Notice of “Distance”:** The driving distance until the next maintenance check can be input.

**“Delete”:** To cancel the date and distance conditions.

**“Reset”:** To reset the date and distance conditions.

**5. Touch “OK”.**

The screen then returns to the “Maintenance” screen.

<b>INFORMATION</b>
<ul style="list-style-type: none"> <li>● <i>For scheduled maintenance information, please refer to the “Scheduled Maintenance Guide” or “Owner’s Manual Supplement”.</i></li> <li>● <i>Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.</i></li> </ul>

## OTHER FUNCTIONS

### — Dealer setting

It is possible to register a dealer in the system. With dealer information registered, route guidance to the dealer is available.

1. Push the “INFO” button.
2. Touch “Maintenance” on the “Information” screen.
3. Touch “Set Dealer” on the “Maintenance” screen.



4. If the dealer has not been registered, enter the location of the dealer in the same way as for a destination search. (See “Destination search” on page 43.)

When “Set Dealer” registration is finished, the “Edit Dealer” screen will be displayed.



5. Touch the touch-screen button to be edited.

“**Dealer**”: To enter the name of a dealer. (See page 123.)

“**Contact**”: To enter the name of a dealer member. (See page 123.)

“**Location**”: To set a location. (See page 123.)

“**Phone #**”: To set a telephone number. (See page 124.)

“**Delete Dealer**”: To delete the dealer information displayed on the screen.

“**Enter**”: To set the displayed dealer as a destination. (See “Starting route guidance” on page 63.)

- To edit “Dealer” or “Contact”

1. Touch “Dealer” or “Contact” on the “Edit Dealer” screen.



2. Enter the name using the alphanumeric keys.


Up to 24 letters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

- To edit “Location”

1. Touch “Location” on the “Edit Dealer” screen.

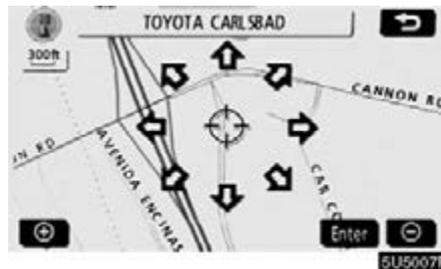

2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch “Enter”.

The previous screen will be displayed.

## OTHER FUNCTIONS

---

- To edit “Phone #” (telephone number)

1. Touch “Phone #” on the “Edit Dealer” screen.



2. Enter the number using numeral keys.


3. Touch “OK”.

The previous screen will be displayed.


## Calendar with memo —

It is possible to enter memos for particular dates on the calendar. The system informs you of the memo entry when the system is turned on. (See page 25.)

Memos can also be used for route guidance if the memo has been registered with location information.

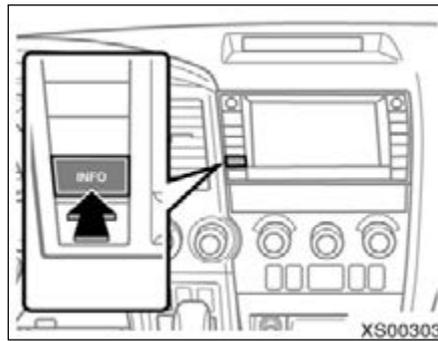

1. Push the “INFO” button.

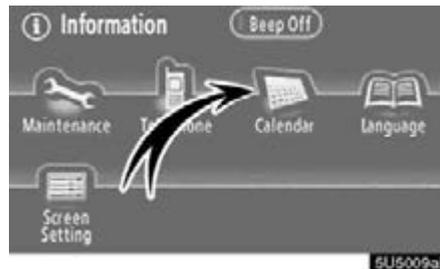

2. Touch “Calendar”.



On this screen, the current date is highlighted in yellow.

**▲M** or **▼M**: To change month.

**▲Y** or **▼Y**: To change year.

**“Today”**: To display the current month calendar (if another month will be displayed).

**“List”**: To display the list of registered memos. (See “— Memo list” on page 127.)

Touching a date button on the “Calendar” screen displays the “Memo” screen.



Memos can be edited by touching the list button. (See “— Editing a memo” on page 127.)

**“Add Memo”**: To add a memo. (See “— Adding a memo” on page 126.)

**“Mark ○”**: To change the color of the mark displayed next to the date. To default the mark color, touch **“Delete”** on the “Mark color” screen.

**“Date ○”**: To change the color of the date. To default the date color, touch **“Delete”** on the “Date color” screen.

**“Prev. Day”**: To go to the “Memo” screen of the previous date.

**“Today”**: To go to the “Memo” screen for the current day.

**“Next Day”**: To go to the “Memo” screen of the next date.

## OTHER FUNCTIONS

### — Adding a memo

If a memo is added, the system informs of the memo entry when the system is started on the memo date. (See page 25.)

1. Push the “INFO” button.
2. Touch “Calendar”.
3. Touch the date you want to add a memo on the “Calendar” screen.



4. Touch “Add Memo”.

Up to 100 memos can be added.



5. Touch “Memo”.



6. Enter text using the keys.

Up to 24 letters can be entered.

After entering the text, touch “OK” at the bottom right of the screen.



7. When registering information on the memo, touch “Location”.

A screen similar to the destination search screen appears. Search the same way as searching a destination. (See “Destination search” on page 43.)

### — Editing a memo

The registered memo can be edited.

1. Push the “INFO” button.
2. Touch “Calendar” on the “Information” screen.
3. Touch the day you want to edit a memo on the “Calendar” screen.



4. Touch the memo to be edited.



5. Touch the item to be edited.

“**Memo**”: To edit a memo. (See “ — Adding a memo” on page 126.)

“**Location**”: To change a registered location. (See “ — Adding a memo” on page 126.)


“**Enter**”: To set the registered location as a destination. (See “Starting route guidance” on page 63.)

“**Delete**”: To delete the memo.

### — Memo list

It is possible to display a memo list by setting a condition.

1. Push the “INFO” button.
2. Touch “Calendar”.
3. Touch “List” on the “Calendar” screen.

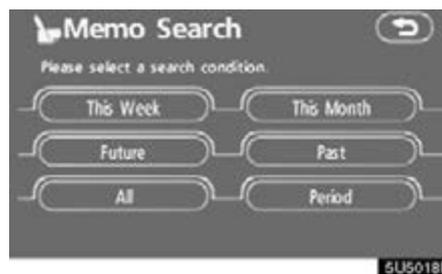

4. Touch the desired search condition to list the memos.

“**This Week**”: To display the list of memos for the current week.

“**This Month**”: To display the list of memos for the current month.

“**Future**”: To display a list of future memos.

“**Past**”: To display the list of past memos.

“**All**”: To display the list of all memos.

“**Period**”: To display the list of memos for a specified period. (See page 128.)

## OTHER FUNCTIONS

---



5. To delete and/or edit the memo, touch the desired memo button.


“Delete All”: To delete all the displayed memos.

A message will be displayed.

6. To delete, touch “Yes”. To cancel the deletion, touch “No”.

● To display memos for a specified period of time

1. Touch “Period” on the “Memo Search” screen.

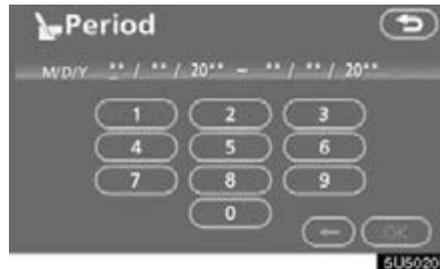

2. Enter the period using the numeral keys.

The period from January 1, 2005 through December 31, 2024 can be set for searching.

3. After setting the period, touch “OK”.

The “Memo List” screen will be displayed.

## Hands-free system (for cellular phone) —

Hands-free system allows you to make or receive a call without taking your hands off the steering wheel by connecting your cellular phone.

This system supports Bluetooth®. Bluetooth® is a wireless data system by which you can call without your cellular phone being connected with a cable or placed on a cradle.

If your cellular phone does not support Bluetooth®, this system can not function.

### CAUTION

While you are driving, do not use a cellular phone or connect the Bluetooth® phone.


### NOTICE

Do not leave your cellular phone in the car. The temperature indoor may be high and damage the phone.

### INFORMATION

In the following conditions, the system may not function.

- The cellular phone is turned OFF.
- The current position is outside the communication area.
- The cellular phone is not connected.
- The cellular phone has a low battery.

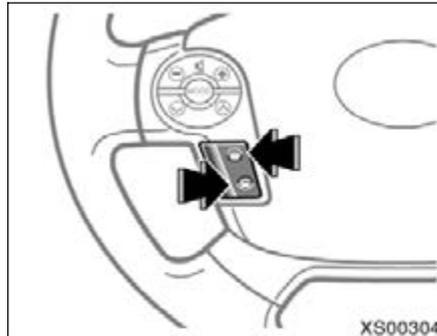


► Steering switches


By pushing the telephone switch above, you can receive a call or hang up without taking your hands off the steering wheel.

## OTHER FUNCTIONS

---

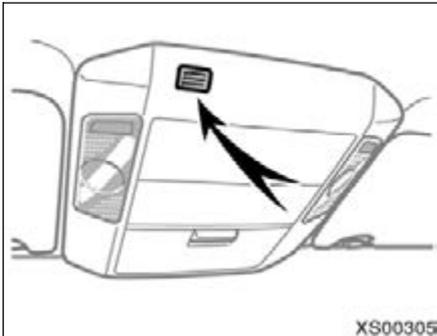

► Microphone (Type A)

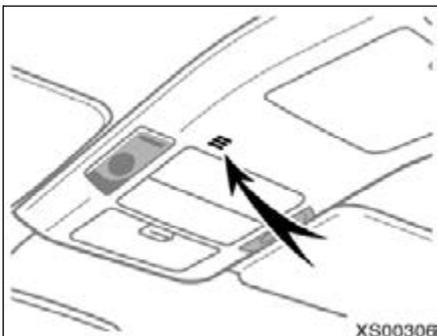

► Microphone (Type B)

**You can use the microphone above when talking on the phone.**

The other party's voice outputs from the driver's speaker. When the received calls or received voice outputs, the audio from the Audio system or voice guidance from the Navigation system will be muted.

### INFORMATION

- *Talk alternately with the other party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)*
- *Keep the volume of receiving voice down. Otherwise, echo is coming up. When you talk on the phone, speak clearly towards the microphone.*
- *In the following situations, your voice may not reach the other party.*
  - *Driving on unpaved road. (Making a traffic noise.)*
  - *Driving at the high speed.*
  - *The window is open.*
  - *Turning the air-conditioning vents towards the microphone.*
  - *The sound of the air-conditioning fan is loud.*



**1** Indicates the condition of Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of voice quality.

 : no connection to Bluetooth®.

**2** Indicates the amount of battery charge left.



It is not displayed while the Bluetooth® is connecting or the phone book data is being transferred.

The amount left does not always correspond with the one of your cellular phone. This system doesn't have a charging function.

**3** Indicates the receiving area.

“Rm” is displayed when receiving in Roaming area.

“Hm” is displayed when receiving in Home area.

**4** Indicates the level of reception.



Too bad ←→ Excellent

The level of reception does not always correspond with the one of your cellular phone.

**INFORMATION**

*This system supports the following service.*

- HFP (Hands Free Profile) Ver. 1.0
- OPP (Object Push Profile) Ver. 1.1

*If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP service individually.*

## OTHER FUNCTIONS

---

An antenna for the Bluetooth® connection is built in the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or is covered with metal materials.

Leave the Bluetooth® phone on the place where "Blue" indication is displayed.



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

**When you release your car:**

**A lot of personal data is registered when you use the Hands-free system. When you release your car, initialize your data.**

If you initialize it, the former state will never come back again. Pay much attention when initializing the data.

You can initialize the following data in the system.

- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code

FCC ID: HYQDNNS016  
IC ID: 1551A-DNNS016  
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



**FCC Warning:**  
**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

## OTHER FUNCTIONS

---

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Radio Frequency Radiation Exposure


This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).

**Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

## OTHER FUNCTIONS

### — Enter a Bluetooth® phone

To use the hands-free system, you need to enter your cellular phone into the system. Once you have registered it, you can make a hands-free call.

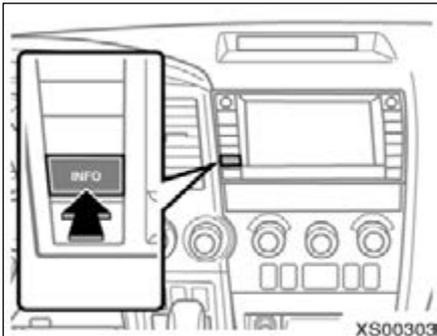

1. Push the “INFO” button to display the “Information” screen.



2. Touch “Telephone” to display “Telephone” screen.

You can also push the  switch of the steering wheel to display this screen when the vehicle is stopped.




3. Touch “Settings” to display “Settings” screen.



4. Touch “Bluetooth\*” to display the “Bluetooth\* Settings” screen.

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

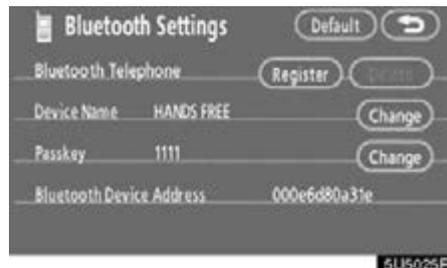

5. Touch “Register” to connect your cellular phone to the system.



**6. When this screen is displayed, input the Passkey displayed on the screen into the phone.**

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, touch “Cancel”.



**7. When the connection is completed, this screen is displayed.**

You do not need to enter the phone in case of using the same one.



When this screen is displayed, follow the guidance on the screen to try again.

- **Connecting a Bluetooth® phone**
  - (i) **Automatically**



When you register your phone, auto connection will be turned on. Always set it to this mode and leave the Bluetooth® phone in a condition where connection can be established.

Each time you touch “Auto Connect”, auto connection will be switched on or off.



When the engine switch is turned to the ACC or ON position, the selected Bluetooth® phone will be automatically connected and the connection result is displayed.

This screen appears when the Bluetooth® phone is first connected after the engine switch is turned to the ACC or ON position.

## OTHER FUNCTIONS

---

### (ii) Manually

When the auto connection failed or turned off, you have to connect Bluetooth® manually.



Touch "Connect" after having enabled the Bluetooth® connection on the phone.



When the connection is completed, this screen is displayed.

Now you can use the Bluetooth® phone.

### ● Reconnecting the Bluetooth® phone

If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the engine switch is turned to the ACC or ON position, the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone off, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

## — Call on the Bluetooth® phone

After you enter the Bluetooth® phone, you can call by using hands-free system. You can call using the 7 methods described below.

### (i) By dial

You can call by inputting the telephone number.

This cannot be operated while driving.



#### 1. Touch the desired key to input the telephone number.

Each time you touch ◀, an inputted digit is deleted.

When you touch ▶, the number you called last is inputted.

#### 2. Touch [Phone Book] or push the [Phone Book] switch of the steering wheel.

### (ii) By phone book


You can call by phone book data which is transferred from your cellular phone.

The system has one phone book. You can register up to 1000 numbers.

This cannot be operated while driving.



#### 1. Touch “Phone Book” to display “Phone Book” screen.

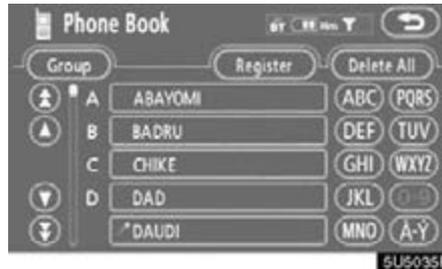

#### 2. Select the desired number from the list.



#### 3. Touch [Phone Book] or push the [Phone Book] switch of the steering wheel.

## OTHER FUNCTIONS


### (iii) By dialed numbers

You can call by dialed number. The system memorizes up to 5 dialed numbers. If it is over than 5, the oldest number is deleted.

This cannot be operated while driving.



1. Touch “Call Log” to display “Outgoing Calls” screen.

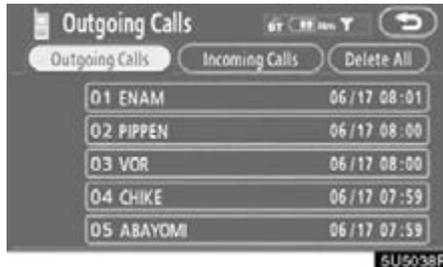

- When you call by phone book, the name (if registered) is displayed.
- When you call the same number continuously, only the newest number is registered.

2. Select the desired number from the list.



3. Touch  or push the  switch of the steering wheel.


(iv) By received calls

You can call by received calls. When a call is received, the system memorizes up to 5 numbers. If it is more than 5, the oldest number is deleted.


This cannot be operated while driving.



1. Touch "Call Log" to display "Outgoing Calls" screen.

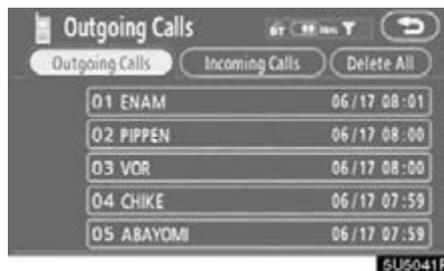

2. Touch "Incoming Calls" to display "Incoming Calls" screen.

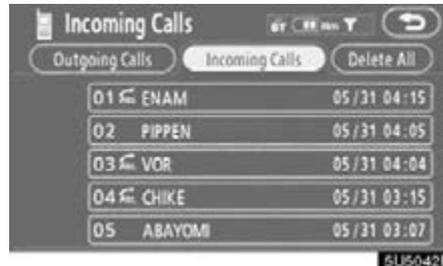

- When a telephone number registered in the phone book is received, the name and the number are displayed.
- Received calls which you did not answer are also memorized in the system and "Abs." is displayed on the left side of the number.
- Unnoticed telephone number such as a public telephone is not memorized in the system.

3. Select the desired number from the list.



4. Touch or push the switch of the steering wheel.

- A international phone call may not be made depending on the cellular phone which you have.

## OTHER FUNCTIONS

---

### (v) By speed dial

You can call by registered telephone number which you selected from a phone book, dialed numbers and received calls. (See page 146 for registering the speed dial.)



1. Touch “Speed Dial” to display “Speed Dial” screen.



2. Touch the desired number to call.

You can change the page by touching “Speed Dial 2” or “Speed Dial 3”.

When you push the telephone button while driving, the screen above appears. Touch the desired name to call. (The telephone number is not displayed.)

### (vi) By voice recognition



You can call by giving a command. (For the operation and command of voice recognition, see “Speech command system” on page 175 and “Help screen” on page 178.)

● **Dialing by name**

You can call by giving a voice tag registered in the phone book. For setting the voice recognition, see “Setting the voice recognition” on page 159.

Example: Call DAD



You: Push the talk switch.  
 System: “After the beep, please say the name.”  
 You: “DAD.”  
 System: “DAD chosen, when ready, please briefly push the talk switch or push the off-hook switch to dial.”  
 You: Push the talk switch.  
 System: “After the beep, please say “Dial.”.”  
 You: “Dial.”  
 System: “Dialing the name.”  
 Now you can call DAD.



“Next” is displayed when multiple entries are found for a searched name.

Up to 6 entries can be displayed including the first searched one.

Do the following to change the entry to the next one.

- Touch “**Next**”
- Push the talk switch to say “Next Candidate”.

**Calling without the voice recognition**

After the entry number is displayed, you can also call by pushing the telephone switch or touching “**Dial**”.

**Cancelling the voice recognition**

**The voice recognition will be cancelled when you do the following.**

- Keep on pushing the talk switch
- Push the  switch of the steering wheel.
- Touch “**Cancel**”. (Except for recognizing the command)
- Say “Cancel”

## OTHER FUNCTIONS

---

- **Dialing by phone number**

You can call by giving a desired number.



You: Push the talk switch.  
System: "After the beep, please say the number."  
You: "812387"  
System: "When ready, please briefly push the talk switch or push the off-hook switch to dial."  
You: Push the talk switch.  
System: "After the beep, please continue to add numbers or say "Dial"."  
You: "Dial."  
System: "Dialing the number."  
Now you can call 812387.

- **Sending a tone**

You can send a tone by giving a desired number.



You: Push the talk switch.  
System: "Say numbers, pound, or star."  
You: "1234."  
System: "1234." "Push the talk switch."  
You: Push the talk switch.  
System: "Send? Say Yes or No."  
You: "Yes."  
System: "Sending."  
Now you can send the tone.

## (vii) By POI call



You can call by touching  when it is displayed on the screen from navigation system. (See page 33 for details.)

## — Receive on the Bluetooth® phone



When a call is received, this screen is displayed with a sound. Touch  or push the  switch of the steering wheel to talk on the phone.

To hang up the phone:

Touch  or push the  switch of the steering wheel again.

To refuse to receive the call:

Touch  and hold it.

To adjust the volume of received call:

Touch “-” or “+” or use the volume switch of the steering wheel.

On the international phone call, the other party's name may not be displayed correctly depending on the cellular phone which you have.

## OTHER FUNCTIONS

### — Talk on the Bluetooth® phone



**While you are talking on the phone, this screen is displayed. You can do the operation below on the screen.**

To adjust the volume of the other party's voice:

Touch “-” or “+” or use the volume switch of the steering wheel.

To hang up the phone:

Touch  or push the  switch of the steering wheel.

To mute your voice:

Touch “Mute”.

To input a Key:

Touch “0-9”.

To transfer the call

Touch “Transfer Call”.

You cannot change from Hands-free call to cellular phone call while driving.

When you change from cellular phone call to Hands-free call, the Hands-free screen will be displayed and you can operate it on the screen.

Transferring method and behavior are different depending on the cellular phone which you have.

For the operation of the phone, see the manual that comes with your cellular phone.

Touch the desired number to input the key.

To hang up the phone:

Touch  or push the  switch of the steering wheel.

This cannot be operated while driving.



If the continuous tone signal is registered in a phone book, this screen appears. (If not registered, "Send" and "Exit" are not displayed.)

Confirm the number displayed on the screen and touch "Send". The number before marked sign will be sent.

When you touch "Exit", this function will be finished and normal tone screen appears.

To hang up the phone:

Touch or push the switch of the steering wheel.

The continuous tone signal is the marked sign (p or w) and the number following telephone number. (ex. 056133p0123w#1\*)

You can do this operation when you want to operate an answering machine or use a telephone service in bank for example. You can register the phone number and the code number in the phone book.

- **Sending a tone by the speed tone**  
You can send a tone by the speed tone. (For registering the speed tone, see "Registering the speed tone" on page 148.)



1. Touch "Speed Tone".



2. Touch the desired switch to send a tone.

## OTHER FUNCTIONS

### — Change the settings of the Bluetooth® phone



Touch “Settings” to display “Settings” screen.



You can change the settings of the phone.

#### (a) Registering the speed dial

You can register the desired telephone number from phone book, dialed numbers and received calls. Up to 17 speed dial numbers can be registered. The 6th entry is the speed dial for redialing.


The 6th entry is the speed dial for redialing.



1. Touch “Speed Dial” to display the “Speed Dial Settings” screen.



2. Touch “Register” of “Speed Dial”.

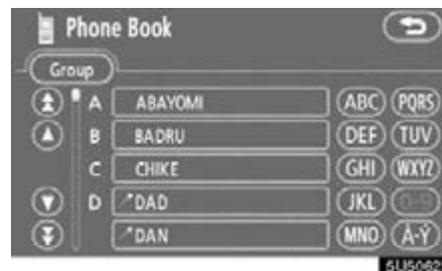

3. Select the data you want to register.




4. Touch the desired telephone number.



5. Touch the touch-screen button you want to register in.

The latest dialed number is registered in the 6th item (speed redial).

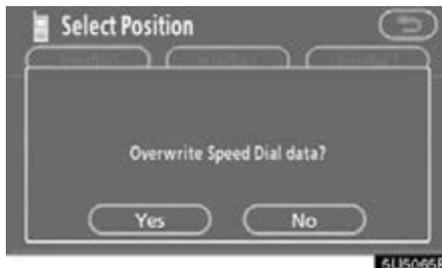

6. If you select a touch-screen button you registered before, this screen is displayed.

Touch "Yes" if you want to overwrite it.

- **Deleting the speed dial individually**  
You can delete "01" – "17" of the speed dial individually.

If you delete them all at once, all of 17 numbers are deleted.



1. Touch "Delete" of "Speed Dial".



2. Touch the touch-screen button you want to delete.



3. Touch "Yes".

## OTHER FUNCTIONS

---

- **Deleting all of the speed dial**



1. Touch “Delete All” of “Speed Dial”.



2. Touch “Yes”.

- (b) **Registering the speed tone**

You can register the desired tone number. Up to 6 speed tone numbers can be registered.



1. Touch “Register” of “Speed Tone”.



2. Use the software keyboard to input the name.



3. Input the number and touch “OK”.



4. Touch the desired touch-screen button you register in.



5. If you select a touch-screen button you register before, this screen is displayed. Touch "Yes" if you want to overwrite it.

- Editing the speed tone.  
You can edit the speed tone.



1. Touch "Edit" of "Speed Tone".



2. Touch the touch-screen button you want to edit.



3. Use the software keyboard to input the name.

## OTHER FUNCTIONS

---



4. Input the number and touch "OK".

- Deleting the speed tone individually. You can delete "1" to "6" of the speed tone.

If you delete them all at once, all of 6 numbers are deleted.



1. Touch "Delete" of "Speed Tone".



2. Touch the touch-screen button you want to delete.




3. Touch "Yes".

• **Deleting all the speed tone**



1. Touch “Delete All” of “Speed Tone”.

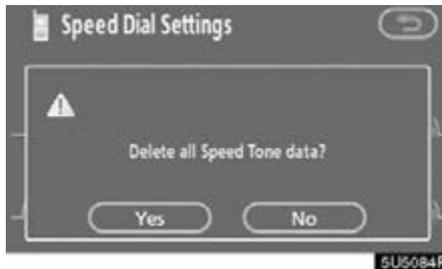


2. Touch “Yes”.

(c) **Setting the volume**



1. Touch “Volume” to display the “Volume Settings” screen.

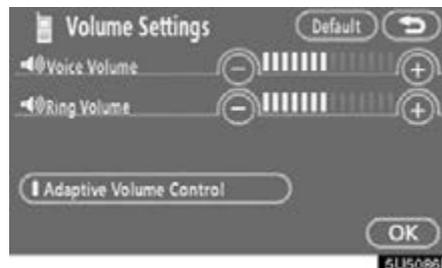

2. Touch “-” or “+” to adjust the “Voice Volume” or “Ring Volume”.

Voice Volume . . . Adjusting the other party’s voice.

Ring Volume . . . Adjusting the ring volume.

## OTHER FUNCTIONS

---


- **Automatic volume settings for high speed**

You can set the volume one step up when the speed is over 50 mph (80 km/h). (When it is under 43 mph (70 km/h), previous volume is back.)


Each time you touch “Adaptive Volume Control”, you can switch on or off.

- **Initializing the settings**

You can initialize the settings.

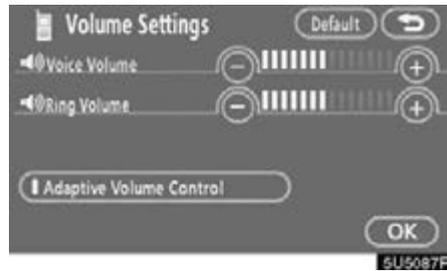

Touch “Default”.

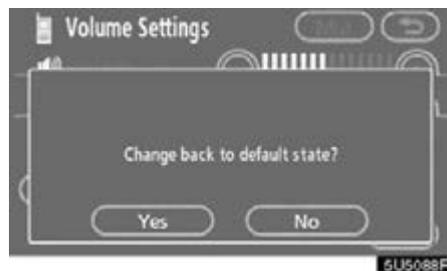


Touch “Yes”.

(d) Setting the screen




1. Touch "Screen" to display the "Screen Settings" screen.

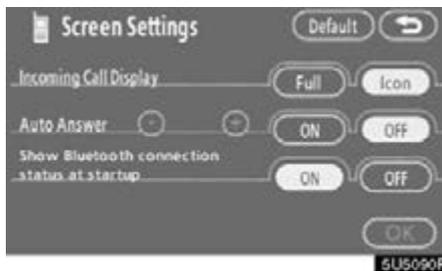

2. Do the detail settings of the screen and touch "OK".

● Incoming Call Display

You can select the method of the receiving call display.

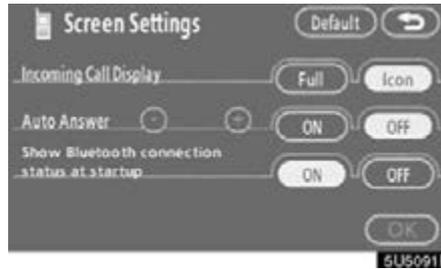

Touch "Full" or "Icon".

Full mode

..... When a call is received, the Hands-free screen is displayed and you can operate it on the screen.

Icon mode


..... The message is displayed on the upper side of the screen. You can only operate the steering switch.

## OTHER FUNCTIONS

---

- **Auto answer**

When a call is received, the display automatically changes to the talking screen and you can start to talk on the phone (without touching any switch) after the preset time.

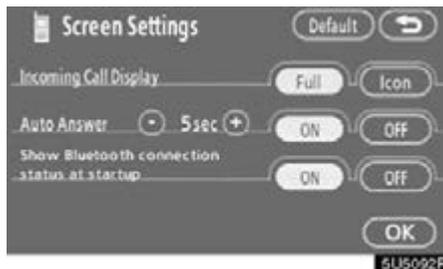


Touch "ON" of "Auto Answer" and "-" or "+" to adjust the waiting time of auto answer within 1 – 60 seconds.

- **The Bluetooth® connection status at startup**



When the engine switch is turned to the ACC or ON position and the Bluetooth® is automatically connected, the connection check is displayed.

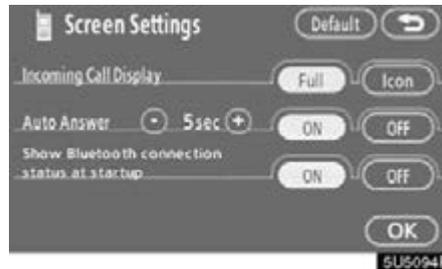


Touch "ON" or "OFF" of "Show Bluetooth\* connection status at startup".

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

● **Initializing the settings**

You can initialize the settings.

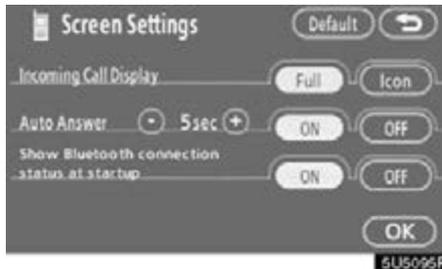

Touch "Default".




Touch "Yes".

(e) **Setting the phone book**

You can register phone numbers in the phone book.



Touch "Phone Book" to display the "Phone Book Management" screen.

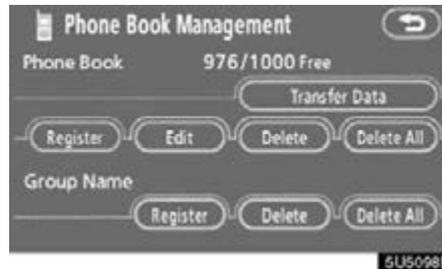

You can do the detail settings of phone book.

## OTHER FUNCTIONS

- **Transferring a telephone number**

You can transfer the telephone numbers in your Bluetooth® phone to the system. Up to 1000 person's data (up to 2 numbers a person) can be registered in the phone book.

Transfer it while the engine is running.



1. Touch “Transfer Data” to display “Select Group” screen.



2. Select the group you want to transfer the data to.



3. Touch “Overwrite” or “Add To”.



4. Transfer the phone book data to the system using the Bluetooth® phone.

This screen appears while transferring. To cancel it, touch “Cancel”. If the transferring is interrupted on the way, the phone book data transferred until then can be memorized in the system.



5. When this screen is displayed, the transfer is completed.



When this screen is displayed, try the transfer operation again.

- **Registering the phone book data**  
You can register the phone book data.



1. Touch “Register” of “Phone Book”.



2. Touch the desired touch-screen button to edit the phone book.



3. When you complete the edit, touch “OK”.

- **Editing the name**  
When you don't input the name, the number is displayed on the list.



1. Touch “Name”.



2. Use the software keyboard to input the name.

## OTHER FUNCTIONS

- **Editing the phone number**

You can register the phone number in “TEL1” and “TEL 2” separately. Up to 2 numbers a person can be registered.



1. Touch “TEL 1” or “TEL 2”.



2. Input the number and touch “OK”.



3. Select the desired icon.

- **Selecting the group**

You can set a group for a contact (for example: “Family”, “Friends”, “Office”...). It will then be easier for you to find this contact when needed, by using the group display.

You can select “No group” or “Group 01” to “Group 19”.

“No group” is displayed if you don't set the group.



1. Touch “Group”.



2. Select the desired group.

- **Setting the voice recognition**

You can set the voice recognition. Up to 20 numbers can be registered for the voice recognition.



1. Touch "Voice Rec.".



2. Select the phone number and touch "REC" to record a voice tag.




3. Touch "PLAY" to play the voice tag. If you want to delete it, touch "Delete" and "OK".

- **Adding the data to the phone book**

You can add data to the phone book.



1. Touch "Add to".

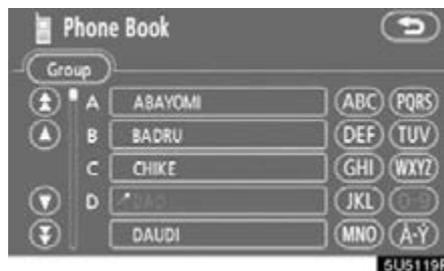

2. Select the data you want to add log data to.



3. Confirm the added data on the screen and touch "OK".

## OTHER FUNCTIONS

---


- **Editing the data**

You can edit the registered data.



When you also touch “Edit” on this screen, you can edit it.

1. Touch “Edit”.

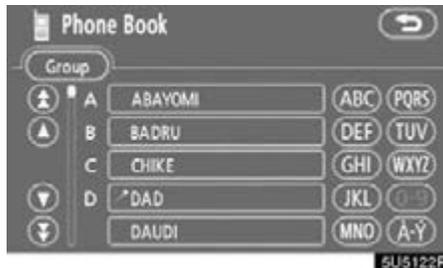

2. Select the data you want to edit.




3. Touch the desired touch-screen button.

When you edit the data, touch “OK”.


- **Deleting the data**

You can delete the data.

When you release your car, delete all your data on the system.

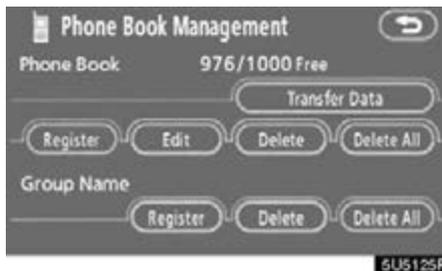

1. Touch “Delete” of “Phone Book”.

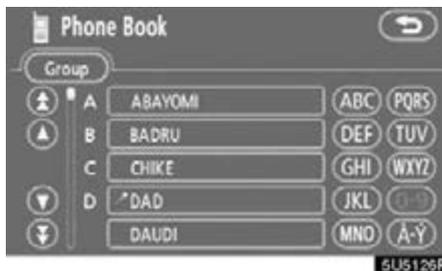

2. Touch the desired touch-screen button.




3. Touch “Yes”.

You can also delete it in the following way.



1. Touch “Phone Book”.

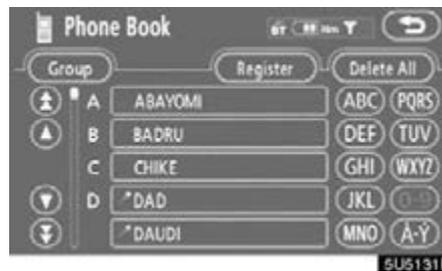

2. Select the desired data.



3. Touch “Delete”.



4. Touch “Yes”.

## OTHER FUNCTIONS

---

- **Deleting all the phone data**



1. Touch “Delete All” of “Phone Book”.



2. Select the deleting method.

Group Data

... Deleting all the phone data in group.

All Contact Data

... Deleting all the phone data.

3. When you select “Group Data”, the “Select Group” screen is displayed.



4. Select the desired group.




5. Touch “Yes”.

You can also delete it in the following way.



1. Touch “Phone Book”.

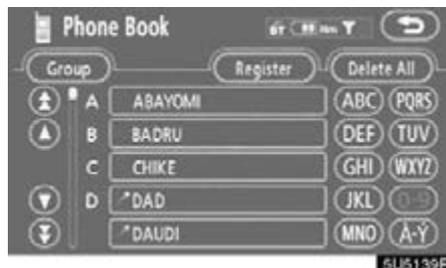

2. Touch “Delete All”.



3. Touch “Yes”.

- Registering a group name

You can register 20 groups. “No Group”, “Group 01” – “Group 19” is registered by default.


You can change “Group 01” – “Group 19” into desired names.



1. Touch “Register” of “Group Name”.



2. Select the group you want to register.

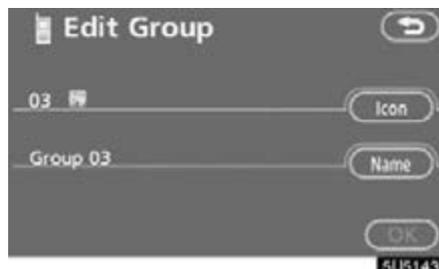

3. When you complete all the edit, touch “OK”.


## OTHER FUNCTIONS

---

- **Selecting a group icon**




1. Touch "Icon".

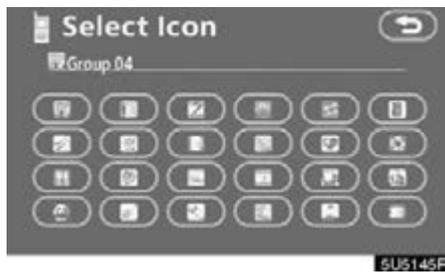

2. Select the desired icon.

- **Editing a group name**

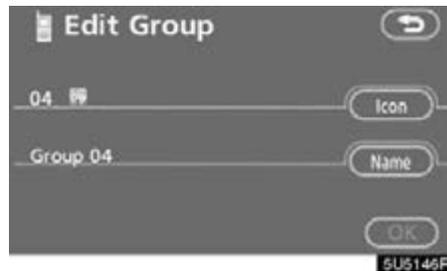


1. Touch "Name".



2. Use the software keyboard to input the name.

- **Deleting a group name**

You can delete the group names individually or all at once. If you delete a group name, that group will return to the default setting. (excluding “No group”)

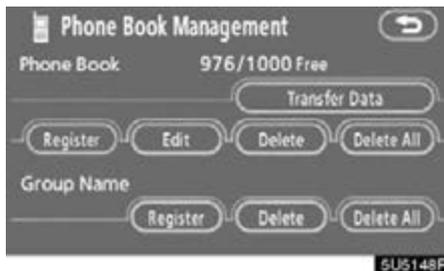

1. Touch “Delete” of “Group Name”.




2. Select the group you want to delete the name of.




3. Touch “Yes”.

- **Deleting all the group name**

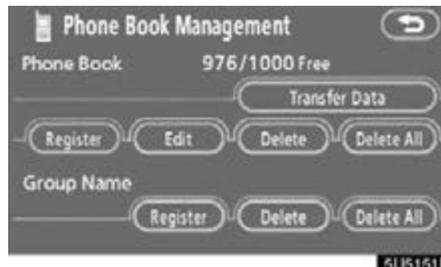

1. Touch “Delete All” of “Group Name”.

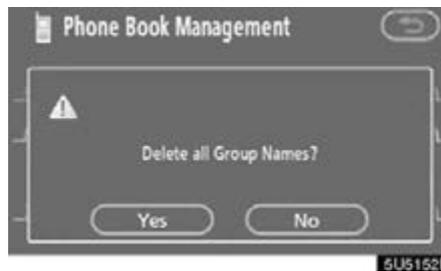

2. Touch “Yes”.

## OTHER FUNCTIONS

---

- **Deleting the log data**


You can delete the log data individually or all at once.

When you release your car, delete all the data on the system.

**(a) Individually**




1. Touch “Delete” on the “Log Data” screen.

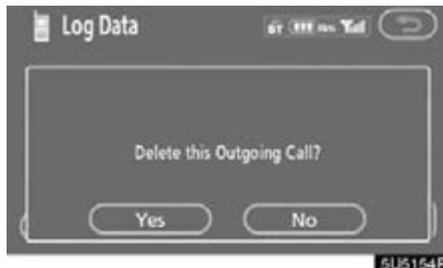

2. Touch “Yes”.

**(b) All at once**

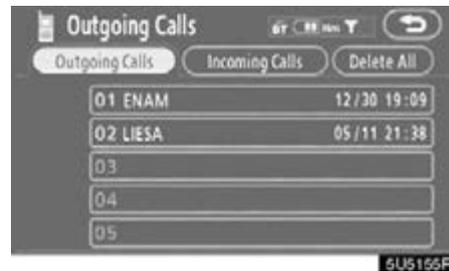

1. Touch “Delete All” on the “Outgoing Calls” or “Incoming Calls” screen.



2. Touch “Yes”.

**(f) Setting the security**

**When you set the security, you can prevent people from using some functions of the Hands-free system. It is useful when you leave your car with the hotel or you don't want others to see the data you registered.**

When you set or unlock the security, you have to input the security code. Be sure to change the default code when you use the security for the first time.

**● Changing the security code**

**The security code is 4 digits and the default is "0000".**


Change a new code that is hard for other people to know.

When you change the security code, don't forget the code. The dealers cannot unlock the security when you forget it.

If you forget the security code, initialize your personal data. When you initialize it, not only the phone book data but also the memory points in the navigation system, etc. will be deleted. (See "Delete personal data" on page 183.)



**1. Touch "Phone Book Lock".**

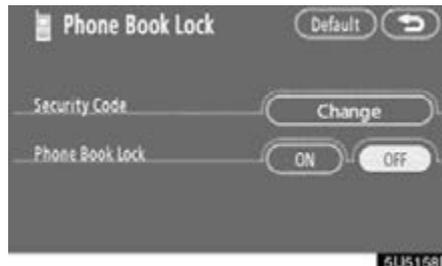


**2. Touch "Change".**

## OTHER FUNCTIONS



### 3. Input the current security code.

Each time you touch , an inputted digit is deleted.

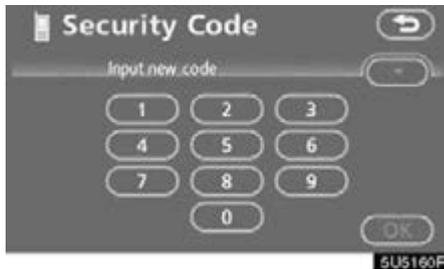

### 4. Input the new code.




### 5. Touch "Yes".

### • Phone Book Lock

When you set the phone book lock, you can have the following functions locked.

- Display of the phone book screen and transferring, registering, editing, deleting the phone book data.
- Display of speed dial screen, registering, deleting the speed dial and speed dialing.
- Display of the other party's name for calls being received or made.
- Display of dialed numbers screen and received calls screen, deleting dialed numbers and received numbers.
- Display of phone information screen.
- Changing the security code.

When you set this function, the speed dial screen is not displayed while you are driving.

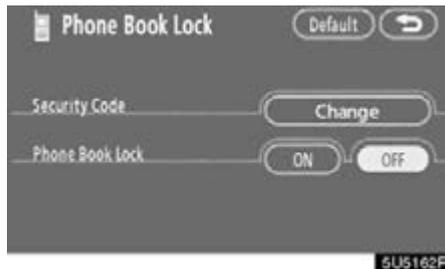


### 1. Touch "ON".



### 2. Input the security code and touch "OK".

- **Initializing the security code**  
You can initialize the settings.

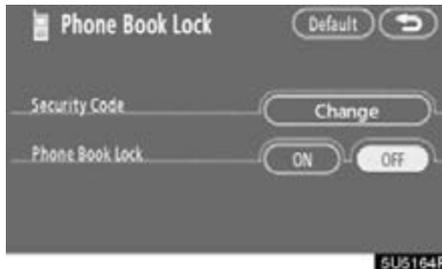

1. Touch “Default”.



2. Input the security code and touch “OK”.



3. Touch “Yes”.

### — Set a Bluetooth® phone

- **Selecting a Bluetooth® phone**  
In case you register more than one Bluetooth® phone, you need to choose a favorite one.



1. Touch “Settings” to display “Settings” screen.



2. Touch “Select Telephone” to display “Select Telephone” screen.

You can select the Bluetooth® phone from a maximum of 6 numbers.

“Empty” is displayed when you have not registered a Bluetooth® phone yet.

Bluetooth® mark is displayed when you choose the phone.

## OTHER FUNCTIONS

---



Although you can register up to 6 Bluetooth® phones in the system, only one Bluetooth® phone can function at a time.




### 3. Touch “OK”.



When the result message is displayed, you can use the Bluetooth® phone.

When another Bluetooth® phone is trying to connect, this screen is displayed.

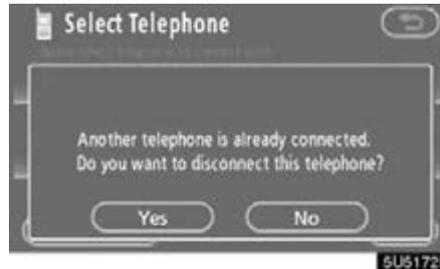

Touch “Yes” or “No”.

● **Displaying Bluetooth® information**

**You can see or set the information of the Bluetooth® phone on the system.**

**Device Name**

... The name of Bluetooth® phone which is displayed on the screen. You can change it into a desired name.

**Bluetooth\* Device Address**

... The address peculiar to the system. You cannot change it.

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.



**3. When you complete the setting, touch .**



**1. Select the desired phone and touch "Information".**



**2. Touch "Change".**

## OTHER FUNCTIONS

---

- **Changing a device name**

You can change a device name. If you change a device name, the name registered in your cellular phone is not changed.



1. Touch “Change”.



2. Use the software keyboard to input the device name.

- **Changing the Bluetooth® settings**

You can change the display and settings of Bluetooth® information on the system.

The information displays the following items.

Device Name

... The name in the Bluetooth® network. You can change it.

Passkey

... The password when you register your cellular phone in the system. You can change it into the figure of 4–8 digits.

Bluetooth\* Device Address

... The address peculiar to the system. You cannot change it. If you have registered two Bluetooth® phones with the same Device Name or Passkey and you cannot distinguish one from the other, refer to it.

\*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

When you change the Device Name or Passkey, do the followings.



1. Touch "Bluetooth".



2. Touch "Change" of "Device Name" or "Passkey".



3. Use the software keyboard to input the Device Name.

You can input up to 20 characters.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



4. Input a Passkey with 4 – 8 digits.

When you touch , the inputted number is deleted.



5. When you complete the setting, touch .

## OTHER FUNCTIONS

- **Initializing the Bluetooth® settings.**  
You can initialize the settings.



1. Touch "Default".



2. Touch "Yes".

- **Deleting a Bluetooth® phone**



1. Touch "Delete" of "Bluetooth\* Telephone".



2. Select the telephone you want to delete and touch "OK".



3. Touch "Yes".

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- **Displaying the information of the Bluetooth® phone you delete**

You can display the information of the Bluetooth® phone before you delete it and you can make sure whether the telephone you delete is correct or not.




1. Select the telephone you want to display the information about.



2. When you complete confirming it, touch .

## Speech command system

The speech command system enables you to operate the navigation system and audio system by giving a command.

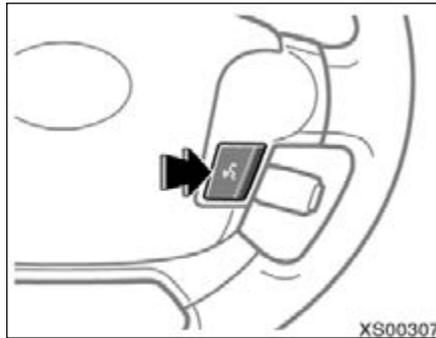


1. Push the talk switch.

A beep sounds and on screen message is displayed with an indicator at the top left.

## OTHER FUNCTIONS

---

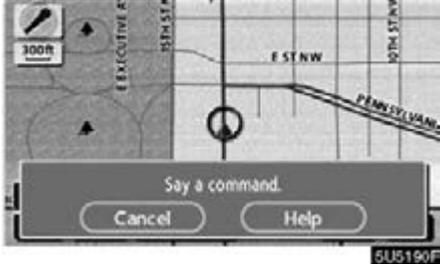


2. Give a command while an indicator is shown on the display. If you want to check the command list, touch "Help" to display the Help screen. (See "Help screen" on page 178.) When you touch "Cancel", the previous screen returns.


If the navigation system does not respond or the confirmation screen does not disappear, please push the talk switch and try again.

If no command is given, a beep sounds and the indicator disappears 6 seconds later.

If the system does not recognize your speech, the system will respond with this message ("System does not recognize this command, please rephrase your command."). Start the operation from the beginning.

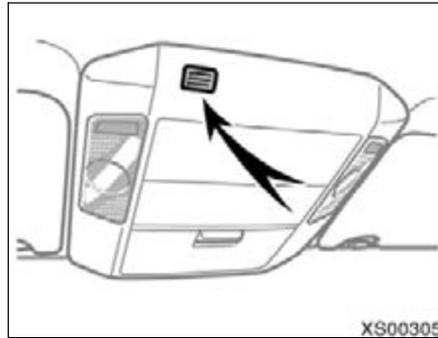

► Microphone (Type A)

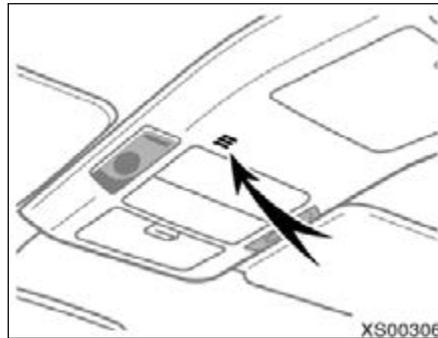

► Microphone (Type B)

It is unnecessary to speak directly into the microphone when giving a command.

**Speech command example: Searching for a route to your home.**

1. Push the talk switch.
2. Say **“Home”**.

You can also say the street name or address.\* (ex. say *“Woodridge Avenue”*.)


\*: “Hawaii” or Hawaii area is not covered by the voice recognition.

If your home is not registered, you will hear “Home is not registered”.



3. If the system recognized the command, the recognition result **“Home”** is displayed on the top of the screen with the screen message. (Displayed message and the touch–screen buttons on the screen depend on the situation.)

Touch or say “Cancel”, and the system will be canceled. Touch or say “Help”, and displays the “Help” screen.

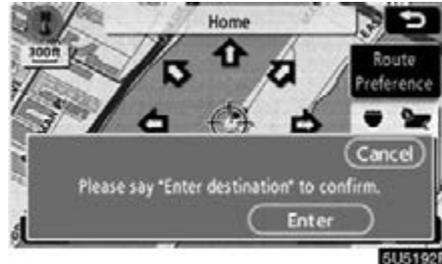

4. Touch **“Enter”** or say **“Enter destination”**, and the system starts searching for a route to your home. (If the destination is already registered, **“Add to Ⓞ”** or **“Replace Ⓞ”** is displayed on the screen.)

Touch or say “Cancel”, and the search will be canceled.

When you search the destination by **“POI Name”**, this screen is displayed.



Touch **“Enter”** or say **“Enter destination”**.

## OTHER FUNCTIONS

---

When you touch “Show List”, you can search another spot in its category.

### **INFORMATION**

*In the following conditions, the system may not recognize the command properly and using speech commands may not be possible.*

- *The command is not correct or clear. Note that certain words, accents, or speech patterns may be difficult for the system to recognize.*
- *There are some noises such as wind noise, etc.*

## Help screen

This system has a function which displays the voice recognition help screen. You can see the command list and operating guide on it.

### (a) Command List

1. If the “Operating Guide” screen is displayed, touch “Command List” on the upper side of the screen.




2. Select the desired category by touching the buttons on the right side of the “Command List” screen.

3. You can scroll through the list of the command list by touching “↑” or “↓”.

Touch “OK” after you check it.

**(b) Operating Guide**

1. If the “Command List” screen is displayed, touch “Operating Guide” on the upper side of the screen.

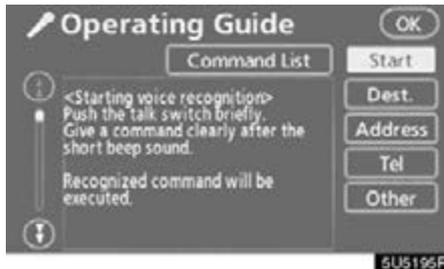


2. Select the desired category by touching the buttons on the right side of the “Operating Guide” screen.

3. You can scroll through the list of the operating guide by touching “↑” or “↓”.

Touch “OK” after you check it.

**Screen adjustment**

The brightness or contrast of the screen can be adjusted depending on the brightness of your surroundings. You can also turn the display off.

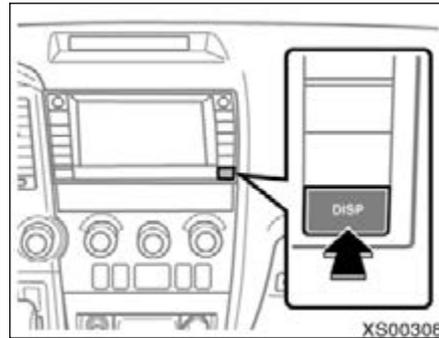

1. To display the “Display” screen, push the “DISP” button.

**Contrast and brightness adjustment**

2. Touch the desired button to adjust contrast and brightness.

“Contrast” “+”:

Strengthens the contrast of the screen.

“Contrast” “-”:

Weakens the contrast of the screen.

“Brightness” “+”:

Brightens the screen.

“Brightness” “-”:

Darkens the screen.

3. After adjusting the screen, touch “OK”.

## OTHER FUNCTIONS


---

If your vehicle is equipped with the rear seat entertainment system, the rear screen turns on or off when “Rear” is touched.

The screen goes off when “Screen Off” is touched. To turn the display screen back on, push any button such as “INFO”, etc. The selected screen appears.

### INFORMATION

*When you do not touch any touch-screen button on the screen for 20 seconds the “Display” screen goes off.*

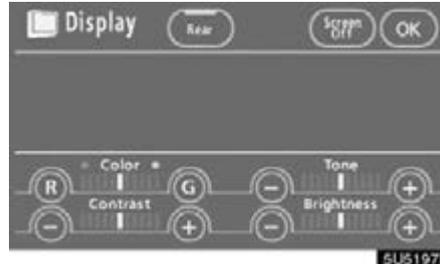

### Color and tone adjustment (with rear seat entertainment system)

1. Touch the desired button to adjust color and tone.

You can adjust the color and the tone while the DVD video and video CD are being played.

“Color” “R”:

Strengthens the red color of the screen.

“Color” “G”:

Strengthens the green color of the screen.

“Tone” “+”: Strengthens the tone of the screen.

“Tone” “-”: Weakens the tone of the screen.

2. After adjusting the screen, touch “OK”.

The rear screen turns on or off when “Rear” is touched.

The screen turns off when “Screen Off” is touched. To turn the screen back on, push any button such as “INFO”, etc. The selected screen appears.

### INFORMATION

*When you do not touch any touch-screen button on the screen for 20 seconds the “Display” screen goes off.*


### Screen setting



Depending on the position of the headlight switch, the screen changes to either day mode or night mode.

To display the screen in the day mode even with the headlight switch on, touch **Day Mode** on the adjustment screen for brightness and contrast control.

If the screen is set in the day mode with the headlight switch turned on, this condition is memorized in the system even with the engine turned off.

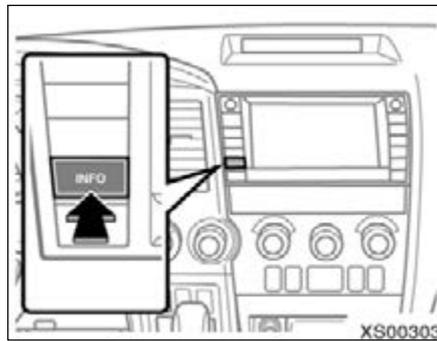

1. Push the "INFO" button to display the "Information" screen.




2. Touch "Screen Setting".

## OTHER FUNCTIONS

---

### (a) Automatic transition

You can select a function that enables automatic return to the navigation screen from the audio screen.

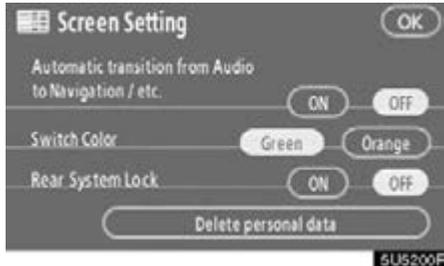


Select “ON” or “OFF” and then touch “OK”.

“ON”: The navigation screen automatically returns from the audio screen 20 seconds after the end of audio operation.

“OFF”: The audio screen remains on.

### (b) Switch color


You can select a color of the touch-screen buttons.

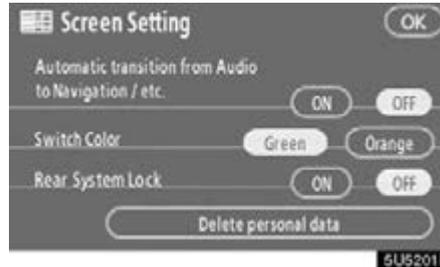

Select “Green” or “Orange” and then touch “OK”.

### (c) Rear system lock (with rear seat entertainment system)

If the vehicle is equipped with the rear seat entertainment system, the rear seat entertainment system can be locked to prevent rear passengers from operating the entertainment system.

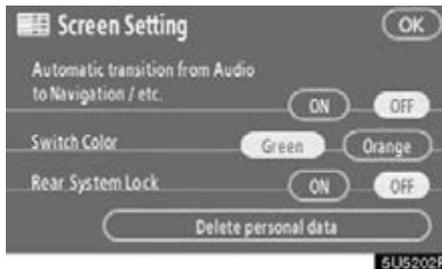

Select **“ON”** or **“OFF”** and then touch **“OK”**.

**“ON”**: The rear passengers cannot operate the rear seat entertainment system. Only front passengers can operate the system.

**“OFF”**: Both the front and rear passengers can operate the rear seat entertainment system.

### Delete personal data

The following personal data can be deleted or returned to their default settings:

#### Information

- Maintenance conditions
- Maintenance information “off” setting

#### Navigation system

- Memory points
- Areas to avoid
- Previous points
- Route trace
- User selection settings

#### Hands-free system


- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code

This function is available only when the vehicle is not moving.

## OTHER FUNCTIONS

### Beep setting

You can set a beep sound off.

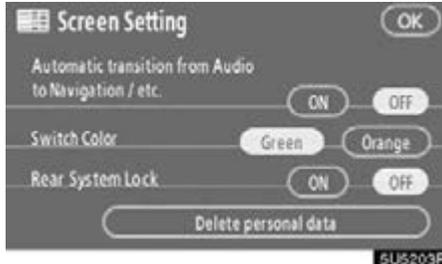

1. Touch "Delete personal data".

The "Delete personal data" screen appears.




2. Touch "Delete".

The "Confirmation to delete all personal data" screen appears.



3. Touch "Yes".

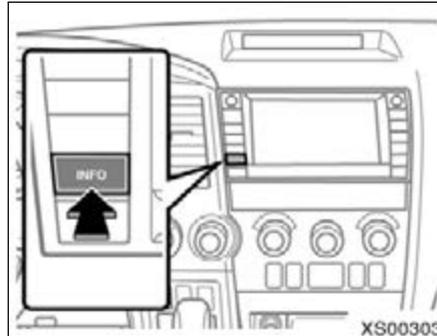

1. Push the "INFO" button.




2. Touch "Beep Off".

"Beep Off" is highlighted.

To set the beep sound on, touch "Beep Off" again.

## Select a language

The language of the touch-screen buttons, pop-up messages and the voice guidance can be changed.

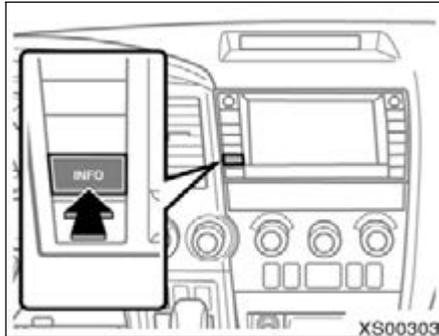

1. Push the "INFO" button.



2. Touch "Language".



3. Touch "English", "Français" or "Español" to select a language.

If a screen other than for the navigation system is displayed, the current screen would change to the "CAUTION" screen by pushing the "MAP/VOICE", "DEST" or "MENU" button.

4. Touch "OK".

The language is changed and the screen returns to the map display.

## **OTHER FUNCTIONS**


---

## **SECTION 6**

### **AUDIO/VIDEO SYSTEM**

- Quick reference ..... 188
- **Using your audio/video system** ..... 189
  - Some basics ..... 189
  - Radio operation ..... 195
  - CD changer operation ..... 205
  - DVD player operation ..... 217
- Audio/video remote controls ..... 240
- Audio/video system operating hints ..... 241

Quick reference

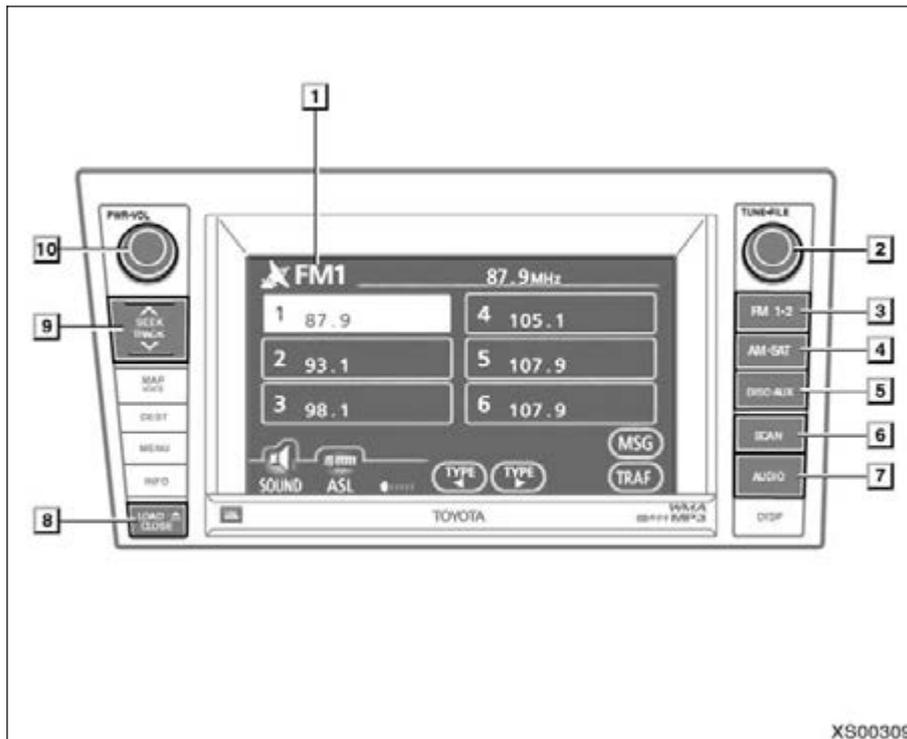

- |   |  |
|---|--|
| <p><b>1</b> <b>Function menu display screen</b><br/>To control the radio, CD changer or DVD player, touch the touch-screen buttons. For details, see page 192.</p> <p><b>2</b> <b>“TUNE-FILE” knob</b><br/>Turn this knob to move the station band and files up or down. For details, see pages 195 and 213.</p> <p><b>3</b> <b>“FM 1-2” button</b><br/>Push this button to choose an FM station. For details, see pages 191 and 195.</p> <p><b>4</b> <b>“AM-SAT” button</b><br/>Push this button to choose an AM or SAT station. For details, see pages 191, 195 and 199.</p> <p><b>5</b> <b>“DISC-AUX” button</b><br/>Push this button to turn the CD changer, DVD player and AUX on. For details, see pages 191, 194, 208 and 219.</p> | <p><b>6</b> <b>“SCAN” button</b><br/>Push this button to scan radio stations. For details, see pages 196, 210, 215, 221 and 224.</p> <p><b>7</b> <b>“AUDIO” button</b><br/>Push this button to display the audio control screen. For details, see page 190.</p> <p><b>8</b> <b>“LOAD-▲/CLOSE” button</b><br/>Push this button to display the “LOAD-EJECT” screen or close the display. For details, see page 205.</p> <p><b>9</b> <b>“SEEK/TRACK” button</b><br/>Push either side of this button to seek up or down for a station, or to access a desired track, file or chapter. For details, see pages 196, 209, 213, 220 and 223.</p> <p><b>10</b> <b>“PWR-VOL” knob</b><br/>Push this knob to turn the audio system on and off, and turn it to adjust the volume. For details, see page 190.</p> |
|---|--|

## Using your audio/video system — — Some basics

This section describes some of the basic features of your audio system. Some information may not pertain to your system.

Your audio system works when the engine switch is turned to the ACC or ON position.

### NOTICE

*To prevent the battery from being discharged, do not leave the audio system on longer than necessary when the engine is not running.*



### CAUTION

For vehicles sold in U.S.A. and Canada:

- Part 15 of the FCC Rules

FCC Warning:


Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Radio frequency exposure. This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20 cm) between the antenna and the body of any person at all time during use.

- Laser products

- Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.
- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## AUDIO/VIDEO SYSTEM


---

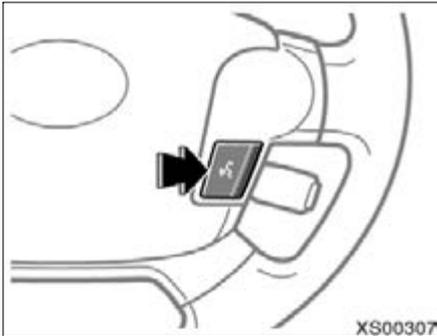

**(a) Speech command system**

**By pushing the switch above, you can operate the speech command system.**

For the operation of the speech command system and the list of commands, see pages 175 through 178.

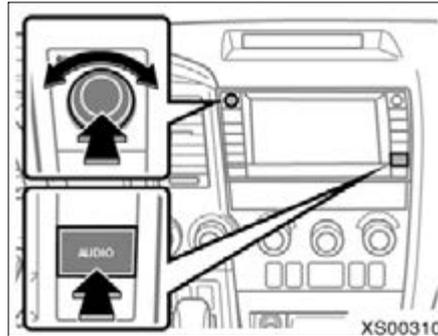


**(b) Turning the system on and off**

**“PWR·VOL”:** Push this knob to turn the audio system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

**“AUDIO”:** Push this button to display touch-screen buttons for audio system (audio control mode).

You can select the function that enables automatic return to the previous screen from the audio screen. See page 181 for details.

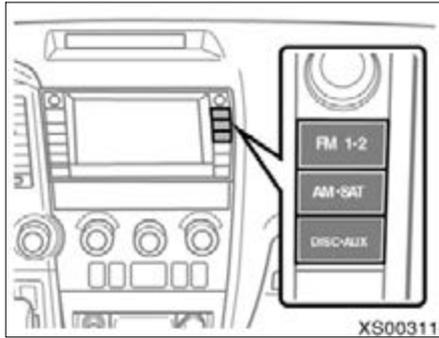


Push “AM-SAT”, “FM1-2” or “DISC-AUX” button to turn on the desired mode. The selected mode turns on immediately.

Push these buttons if you want to switch from one mode to another.

If the disc is not set, the CD changer does not turn on.

You can turn off the CD changer by ejecting all the discs. If the audio system was previously off, then the entire audio system will be turned off when you eject all the discs. If the other function was previously playing, it will come on again.

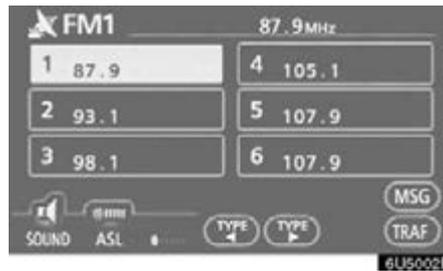



The touch-screen buttons for radio, CD changer and DVD player operation are displayed on the function touch-screen button display screen when the audio control mode is selected. Touch them lightly and directly on the screen. The selected switch is highlighted.

### INFORMATION

- *If the system does not respond to a touch of a touch-screen button, move your finger away from the screen and then touch it again.*
- *You cannot operate dimmed touch-screen buttons.*
- *Wipe off fingerprints on the surface of the display using a glass cleaning cloth.*

#### (c) Automatic sound levelizer (ASL)

When the audio sound becomes difficult to be heard due to road noise, wind noise or other noises while driving, the system adjusts to the optimum volume according to the noise level. To turn this function on, touch “ASL” on the audio control screen.

#### (d) Tone and balance

##### Tone


How good an audio program sounds to you is largely determined by the mix of the treble, midrange, and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid-range, and bass.

##### Balance


A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.

1. Push the “AUDIO” button.

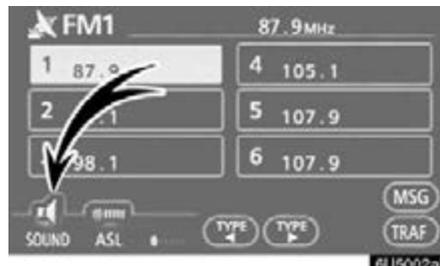

2. Touch “SOUND” to display the sound adjustment screen.

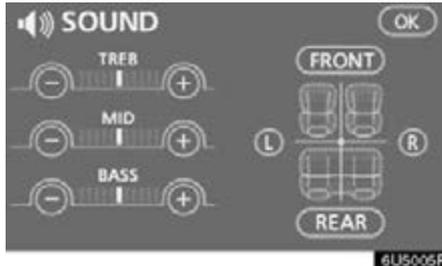

**3. Touch the desired button.**

“**TREB**” “+” or “-”: Adjust high-pitched tones.

“**MID**” “+” or “-”: Adjusts mid-pitched tones.

“**BASS**” “+” or “-”: Adjusts low-pitched tones.

“**FRONT**” or “**REAR**”: Adjusts sound balance between the front and rear speakers.

“**L**” or “**R**”: Adjusts sound balance between the left and right speakers.

**4. Touch “OK”.**

The tone of each mode (for such as AM, FM and CD changer) can be adjusted.

**(e) Selecting screen size (with rear seat entertainment system)**

**1. Push the “AUDIO” button.**



**2. Touch “WIDE”.**



“**NORMAL**”: Displays a 3 × 4 screen, with either side in black.

“**WIDE 1**”: Widens the 3 × 4 screen horizontally to fill the screen.

“**WIDE 2**”: Widens the 3 × 4 screen vertically and horizontally, in the same ratio, to fill the screen.

When you touch , the previous screen returns.

## AUDIO/VIDEO SYSTEM

---

### (f) Your CD changer

When you insert a disc, touch "LOAD" and gently push the disc in with the label side up. This CD changer can store up to four discs. The changer will play from track 1 through to the end of the disc. Then it will play from track 1 of the next disc.

The changer is intended for use with 12 cm (4.7 in.) discs only.



### (g) Your DVD player (with rear seat entertainment system)

The sound of the rear seat entertainment system can be enjoyed by pushing the "DISC-AUX" button.


### (h) AUX adapter

The sound of portable audio players connected to the AUX adapter can be enjoyed. Push the "DISC-AUX" button to switch to AUX mode. For details, refer to the "Owner's Manual".

### NOTICE

- *Do not stack up two discs for insertion, or it will cause damage to the changer. Insert only one disc into slot at a time.*
- *Never try to disassemble or oil any part of the changer. Do not insert anything other than a disc into the slot.*


— Radio operation

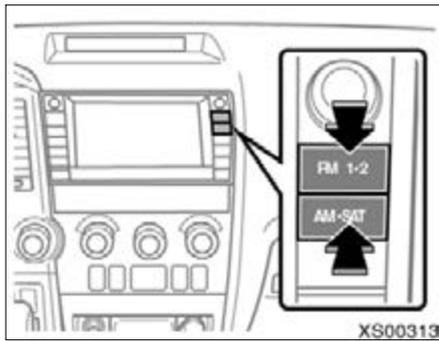

**(a) Listening to the radio**  
**Push these buttons to choose either an AM or FM station.**

“AM”, “FM1” or “FM2” appears on the screen.

If your vehicle is equipped with a satellite radio broadcast system, when you push the “**AM-SAT**” button, “AM”, “SAT1”, “SAT2”, “SAT3” station appears on the display. For details about satellite radio broadcast, see “—Radio operation (XM® Satellite Radio broadcast)” on page 199.

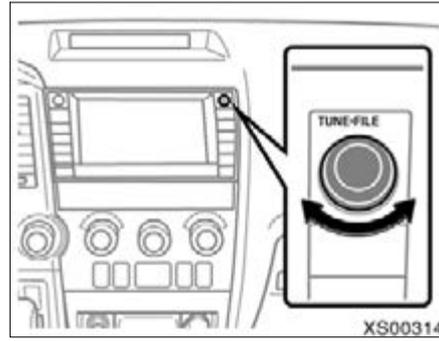

**Turn the knob clockwise to step up the station band or counterclockwise to step down.**

Your radio automatically changes to stereo reception when a stereo broadcast is received. “ST” appears on the screen. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, “ST” disappears from the screen.



**(b) Presetting a station**

1. Tune in the desired station.
2. Touch one of the touch-screen buttons (1 — 6) you want and hold it until a beep is heard. This sets the station to the touch-screen button and the frequency appears on the touch-screen button.

Each radio mode (AM, FM1 or FM2) can store up to 6 stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

**(c) Selecting a station**

Tune in the desired station using one of the following methods.

**Preset tuning:** Touch the touch-screen button (1 — 6) for the station you want. The touch-screen button is highlighted and the station frequency appears on the screen.

**Seek tuning:** Push the “SEEK/TRACK” button on either side. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched automatically one after another.

**To scan all the frequencies:** Touch “SCAN” on the screen or push the “SCAN” button briefly. “SCAN” appears on the screen. The radio will find the next station and stay there for a few seconds, and then scan again. To select a station, touch “SCAN” or push the “SCAN” button again.

**To scan the preset stations:** Touch “SCAN” on the screen or push the “SCAN” button for longer than a second. “P. SCAN” appears on the screen. The radio will tune in the next preset station, stay there for a few seconds, and then move to the next preset station. To select a station, touch “SCAN” or push the “SCAN” button again.


**(d) Radio Data System**

Your audio system is equipped with Radio Data Systems (RDS). RDS mode provides you to receive text messages from radio stations that utilize RDS transmitters.

When RDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RDS features are available for the use only on FM stations which broadcast RDS information.

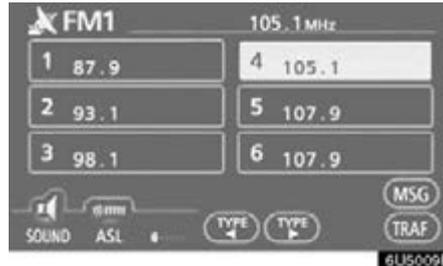

“TYPE ◀▶”


If the system receives no RDS stations, “NO PTY” appears on the display.

Each time you touch “TYPE ◀” or “TYPE ▶”, the program type changes as in the following:

- ROCK
- MISC (Miscellaneous)
- INFORM (Information)
- EASY LIS (Easy listening)
- CLS/JAZZ (Classical music and Jazz)
- R & B (Rhythm and Blues)
- RELIGION
- ALARM (Emergency message)

## AUDIO/VIDEO SYSTEM

---

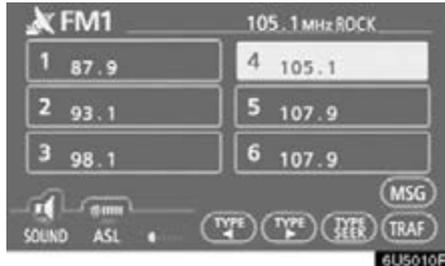

### “TYPE SEEK”

When a program is set, “TYPE SEEK” appears. Touch the switch and the system starts to seek the station in the relevant program type.

If any type program station is not found, “NOTHING” appears on the display.



### “MSG” (MESSAGE)

If the system receives a radio text from RDS station, “MSG” appears on the display. Touch “MSG”, and a text message is displayed on the screen. This function is available only when the vehicle is not moving.

When you touch “MSG OFF”, the display returns.

### —Radio operation (XM<sup>®</sup> Satellite Radio broadcast)



#### (e) Traffic announcement

##### “TRAF”

A station that regularly broadcasts traffic information is automatically located.

When you touch “TRAF”, “TRAF SEEK” appears on the display and the radio will start seeking any traffic program station.

If no traffic program station is found, “NOTHING” appears on the display.

If a traffic program station is found, the name for traffic program station is displayed for a while until a traffic announcement is received.

To listen to a satellite radio broadcast in your vehicle, an additional genuine Toyota satellite receiver and antenna (or equivalents) must be purchased and installed. A subscription to the XM<sup>®</sup> Satellite Radio service is also necessary.

#### (a) How to subscribe to an XM<sup>®</sup> Satellite Radio

An XM<sup>®</sup> Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and 10 Canadian provinces.

##### How to subscribe:

You must enter into a separate service agreement with the XM<sup>®</sup> Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and optional digital satellite tuner.

For complete information on subscription rates and terms, or to subscribe to the XM<sup>®</sup> Satellite Radio,

U.S.A.—

Visit on the web at [www.xmradio.com](http://www.xmradio.com) or call 1-800-967-2346.

Canada—

Visit on the web at [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-438-9677.

The XM<sup>®</sup> Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM<sup>®</sup> Satellite Radio customer service agreement.

Customers should have their radio ID ready; the radio ID can be found by tuning to “channel 000” on the radio. For details, see “Displaying the radio ID” below.

All fees and programming are the responsibility of the XM<sup>®</sup> Satellite Radio and are subject to change.

**Satellite tuner technology notice:**


Toyota's satellite radio tuners are awarded Type Approval Certificates from XM<sup>®</sup> Satellite Radio Inc. as proof of compatibility with the services offered by the XM<sup>®</sup> Satellite Radio.

**(b) Displaying the radio ID**

Each XM<sup>®</sup> tuner is identified with a unique radio ID. You will need the radio ID when activating XM<sup>®</sup> service or when reporting a problem.


If you select the "CH 000" using the "TUNE" knob, the ID code of 8 alphanumeric characters appears. If you select another channel, display of the ID code is canceled. The channel(000) alternates the display between the radio ID and the specific radio ID code.

**(c) Listening to satellite radio**

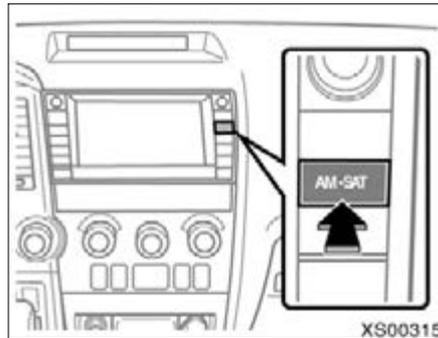

**Push the "AM-SAT" button to choose either an AM station or an SAT channel.**

Besides "AM", "SAT1", "SAT2" or "SAT3" appears on the display.

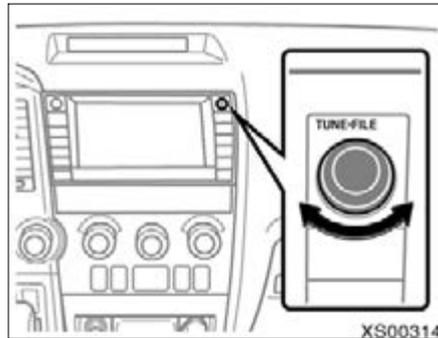

**Turn this knob to select the next or previous channel.**

If you turn continuously, you can rapidly scroll forward or down through the channels.

(d) Channel category



Touch either “TYPE ◀” or “TYPE ▶” to go to the next or previous category.

(e) Presetting a channel

1. Tune in the desired channel.



2. Touch one of the channel selector buttons (1 — 6) and hold it until a beep is heard.

This sets the channels to the touch-screen button and the name and number of the channel appears on the touch-screen button.

Each touch-screen button can store three SAT channels. To change the preset channel to a different one, follow the same procedure.

The preset channel memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

**(f) Selecting a channel**

Tune in the desired channel using one of the following methods.

**Preset tuning:** Touch the channel selector button (1 — 6) for the channel you want. The button (1 — 6) is highlighted and channel number appears on the display.


**To select channel within the current category:** Push the “^” or “v” button of “SEEK-TRACK”. The radio will step up or down the channel within the current channel category. Touch “TYPE SEEK”. The radio will step up the channel within the current channel category.



**To scan the currently selected channel category:** Touch “TYPE SCAN” or push the “SCAN” button briefly. “SCAN” appears on the display. The radio will find the next channel in the same channel category, stay there for a few seconds, and then scan again. To select a channel, touch “TYPE SCAN” or push the “SCAN” button a second time.

**To scan the preset channels:** Push the “SCAN” button and hold it until you hear a beep. “P.SCAN” appears on the display. The radio will find the next preset channel, stay there for a few seconds, and then move to the next preset channel. To select a channel, push the “SCAN” button a second time.

**(g) Displaying the title and name**

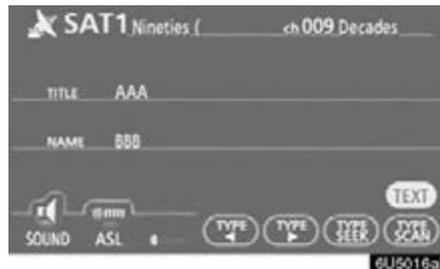

When you touch “TEXT”, the song/program title and the artist name/feature are displayed.

Up to 16 alphanumeric characters can be displayed. (Some information will not be fully displayed.)

When you touch “TEXT” again, the display returns.

**(h) If the satellite radio tuner malfunctions**

When problems occur with the XM<sup>®</sup> tuner, a message will appear on the display. Referring to the table below to identify the problem, take the suggested corrective action.

ANTENNA	The XM <sup>®</sup> antenna is not connected. Check whether the XM <sup>®</sup> antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Toyota certified dealer for assistance.
UPDATING	You have not subscribed to the XM <sup>®</sup> Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM <sup>®</sup> Satellite Radio for subscription information. When a contract is canceled, you can choose the "CH000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact the XM <sup>®</sup> Satellite Radio.
NO SIGNAL	The XM <sup>®</sup> signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
LOADING	The unit is acquiring audio or program information. Wait until the unit has received the information.
OFF AIR	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.
---	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel.

Contact the XM<sup>®</sup> Listener Care Center at 1-800-967-2346 (U.S.A.) or 1-877-438-9677 (Canada).

**NOTICE**

*This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.*

*If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help.*

*Information to user*


*Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.*

**INFORMATION**

*This XM<sup>®</sup> tuner supports "Audio Services" (Music and Talk) of only XM<sup>®</sup> Satellite Radio and "Text Information"\* linked to the respective "Audio Services".*

*\*:Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.*

— CD changer operation

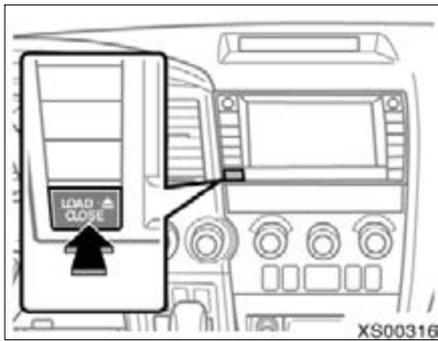

(a) Inserting discs

The engine switch must be in the ACC or ON position.

Your CD changer can store up to 4 discs. You can set a disc at the lowest empty disc number.

1. Push the “LOAD-▲/CLOSE” button. The “LOAD-EJECT” screen appears.



2. Touch “LOAD”. The display opens.

3. The amber indicators at either side of the slot start blinking. When the indicators change to green, insert only one disc with the label side up. After the disc is loaded, the amber indicators at either side of the slot start blinking again. When the indicators change to green, you can insert the next disc.

4. Push the “LOAD-▲/CLOSE” button to close the display.

The changer will automatically start playing from the last disc you inserted.

If the label faces down, the disc cannot be played. In this case, “CD CHECK” appears on the screen.

**CAUTION**

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.

**NOTICE**


- Do not obstruct the display while it is moving. It could damage your audio/video system.
- Do not insert one disc stacked on top of another one or feed them in continuously, to prevent discs from getting stuck in the changer.

**INFORMATION**

Under extremely cold conditions, the display may react slowly or operation sound may become louder.

(b) Ejecting discs

- A single disc alone:

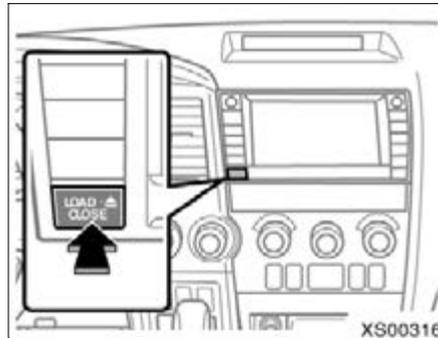


1. Push the “LOAD-▲/CLOSE” button. The “LOAD-EJECT” screen appears.



2. Touch the disc number to be ejected.

The display opens and the amber indicators at either side of the slot start blinking. After the disc is ejected, the amber indicators change to green. A disc can be inserted.

● All the discs:

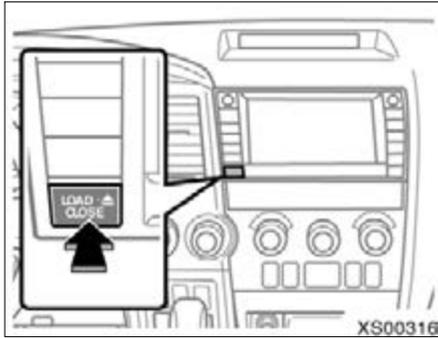

1. Push the “LOAD-▲/CLOSE” button. The “LOAD-EJECT” screen appears.



2. Touch “ALL CD ▲”.

The display opens and the amber indicators at either side of the slot start blinking. After the disc is ejected, the blinking indicators stay on.

3. Remove the disc.

The indicators start blinking again and the next disc is ejected.

If a disc is not removed within 15 seconds after it is ejected, the operation will be canceled.


When all the discs are removed, the amber indicators change to green. A disc can be inserted.



The numbers of the trays where the disc is not set are dimmed.

## AUDIO/VIDEO SYSTEM

---

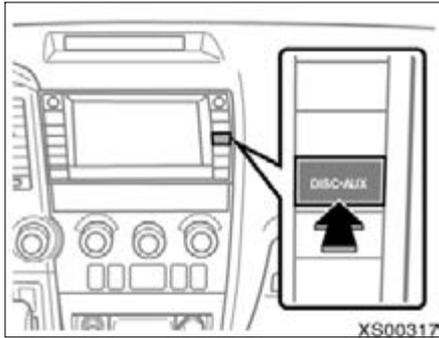

### (c) Playing a disc

Push the “**DISC-AUX**” button if the discs are already loaded in the changer. “CD CHANGER” appears on the screen.

The discs set in the changer are played continuously, starting with the last disc you inserted. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the screen.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The changer will skip any empty disc trays. Vehicles with rear entertainment system

—  
If the DVD player is turned on, push the “**DISC-AUX**” button again to switch to the CD changer.

If the rear seat entertainment system is on, pushing the “**DISC-AUX**” button switches the sound of the front audio system and that of the rear seat entertainment system.



### (d) Selecting a desired disc


Touch the desired disc number on the screen.

The selected disc number is highlighted.

The changer will start playing the selected disc from the first track.



(e) Playing an audio disc  
Push the “AUDIO” button to display this screen.

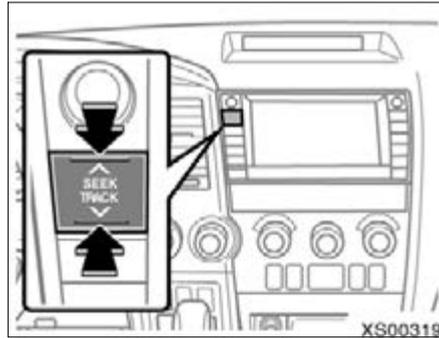

**SELECTING A DESIRED TRACK**

“SEEK/TRACK” button: Use for a direct access to a desired track.

Push either side of the “SEEK/TRACK” button and repeat it until the desired track number appears on the screen. As you release the button, the changer will start playing the selected track from the beginning.

“TRACK LIST”: The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch “TRACK LIST”. The track list is displayed.



Touch the desired track number. The changer will start playing the selected track from the beginning.

**▲**: By touching this touch-screen button, the list moves up by 6 track groups. If this button is touched when the top page of the list is displayed, the last page is displayed.

**▼**: By touching this touch-screen button, the list moves down by 6 track groups. If this button is touched when the last page of the list is displayed, the top page is displayed.

Vehicles with rear entertainment system —

While the DVD player is in operation, the chapter or track can be changed by pushing either side of the “SEEK/TRACK” button.

**Fast forward:** Push “^” side of the “SEEK/TRACK” button and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

**Reverse:** Push “v” side of the “SEEK/TRACK” button and hold it to reverse the disc. When you release the button, the changer will resume playing.

### SEARCHING FOR A DESIRED TRACK OR DISC

**Searching for a desired track —**

**Touch “SCAN” on the screen or push the “SCAN” button briefly while the disc is playing.**

“SCAN” appears on the screen. The changer will play the next track for 10 seconds, then scan again. To select a track, touch “SCAN” on the screen or push the “SCAN” button a second time. If the changer reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

**Searching for a desired disc —**

**Touch “SCAN” on the screen or push the “SCAN” button for longer than a second while the disc is playing.**

“D-SCAN” appears on the screen. The program at the beginning of each audio disc will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” on the screen or push the “SCAN” button a second time.

After all the audio discs are scanned in one pass, normal play resumes.



**OTHER FUNCTIONS**

**“RPT”**: Use it for automatic repeat of the track or disc you are currently listening to.

Repeating a track —

Touch **“RPT”** briefly while the track is playing. **“RPT”** appears on the screen. When the track is finished, the changer will automatically go back to the beginning of the track and play the track again. To cancel it, touch **“RPT”** once again.

Repeating a disc —

Touch **“RPT”** for longer than a second while the disc is playing. **“D·RPT”** appears on the screen. When the disc is finished, the changer will automatically go back to the beginning of the disc and play the disc again. To cancel it, touch **“RPT”** once again.

**“RAND”**: Use it for automatic and random selection.

Playing the tracks on one disc in random order —

Touch **“RAND”** briefly while the disc is playing. **“RAND”** appears on the screen. The system selects a track on the disc being listened to in random order. To cancel it, touch **“RAND”** once again.

Playing the tracks on all the audio discs in random order —

Touch **“RAND”** for longer than a second while the disc is playing. **“D·RAND”** appears on the screen. The system selects a track on all the audio discs in the changer in random order. To cancel it, touch **“RAND”** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 29 letters can be displayed.



(f) **Playing a MP3/WMA disc**  
 Push the “AUDIO” button and touch a MP3/WMA disc number to display this screen.

**SELECTING A DESIRED FOLDER**

“**FOLDER▲**”:  
Touch this touch-screen button to go to the next folder.

“**FOLDER▼**”:  
Touch this touch-screen button to go to the previous folder.

“**FOLDER LIST**”:  
The desired folder can be selected in a list. This function is available only when the vehicle is not moving. Touch “**FOLDER LIST**”. The folder list is displayed.




Touch the desired folder number. The changer will start playing the first file of the selected folder.

▲: By touching this touch-screen button, the list moves up by 6 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

“**FILE**”:  
The file list is displayed.

“**DETAIL**”:  
Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.

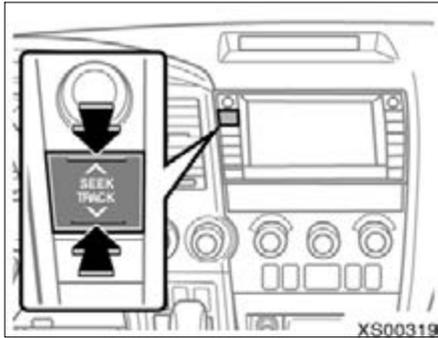


**SELECTING A DESIRED FILE**

**“SEEK/TRACK” button:** Use for direct access to a desired file.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired file number appears on the display. As you release the button, the changer will start playing the selected file from the beginning. When **“RAND”** or **“FLD.RPT”** is on, the file number within the folder you are currently listening to appears.

**Fast forward:** Push **“^”** side of the **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

**Reverse:** Push **“v”** side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the changer will resume playing.

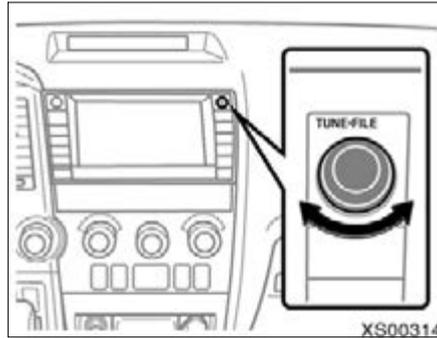

**“TUNE-FILE” knob:** Use for direct access to a desired file in the disc.

Turn the **“TUNE-FILE”** knob to step up or down all the files in the disc you are currently listening to. The file number appears on the display. When **“RAND”** or **“FLD.RPT”** is on, all the files in the folder you are currently listening to can be stepped up or down.

## AUDIO/VIDEO SYSTEM

---



**“FILE”**: The desired file can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“FILE”**. The file list is displayed.

Touch the desired file number. The changer will start playing the selected file from the beginning.

: By touching this touch-screen button, the list moves up by 6 file groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

: By touching this touch-screen button, the list moves down by 6 file groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

**“FOLDER”**: The folder list is displayed.

**“DETAIL”**: Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.



**SEARCHING FOR A DESIRED FILE**

Touch “SCAN” on the screen or push the “SCAN” button briefly while the disc is playing.

“SCAN” appears on the screen. The changer will play the next file in the folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen or push the “SCAN” button a second time. If the changer reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.



**SEARCHING FOR A DESIRED FOLDER**

Touch “SCAN” on the screen or push the “SCAN” button for longer than a second while the disc is playing.

“FLD.SCAN” appears on the screen. The program at the beginning of each folder will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” on the screen or push the “SCAN” button a second time.

After all the folders are scanned in one pass, normal play resumes.

## AUDIO/VIDEO SYSTEM

---



### OTHER FUNCTIONS

**“RPT”**: Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch **“RPT”** briefly while the file is playing. **“RPT”** appears on the screen. When the file is finished, the changer will automatically go back to the beginning of the file and play the file again. To cancel it, touch **“RPT”** once again.

Repeating a folder —

Touch **“RPT”** for longer than a second while the folder is playing. **“FLD.RPT”** appears on the screen. When the folder is finished, the changer will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch **“RPT”** once again.

**“RAND”**: Use it for automatic and random selection of the folder or the disc which you are currently listening to.

Playing the files in one folder in random order —

Touch **“RAND”** briefly while the disc is playing. **“RAND”** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **“RAND”** once again.

Playing the files in all the folders on one disc in random order —

Touch **“RAND”** for longer than a second while the disc is playing. **“FLD.RAND”** appears on the screen. The system selects a file in all the folders. To cancel it, touch **“RAND”** once again.

When a file is skipped or the system is inoperative, touch **“RAND”** to reset.

**(g) If the player malfunctions**

If "CD ERROR" appears on the screen, audio signals of the disc cannot be read or the system has trouble. Push the "DISC" button once again.

If the changer does not operate, check that the disc surface is not soiled or damaged. If the disc is O.K., the temperature of the changer's internal mechanism may be raised because of high external temperature. Remove the disc from the changer to cool it.

If the changer still does not operate, have it checked by your dealer.

If an MP3/WMA disc contains CD-DA files, only CD-DA files are played. If an MP3/WMA disc contains files other than CD-DA, only MP3/WMA files are played.


**—DVD player operation**

The DVD player can play DVD video, audio CD, video CD, CD text, dts-CD or MP3 disc only when a disc is loaded in the DVD player. A WMA and DVD audio disc cannot be played.

For details of "Rear seat entertainment system", refer to "Owner's Manual".

For appropriate discs for this player, see "Audio/video system operating hints" on page 241.

**(a) Inserting the disc**

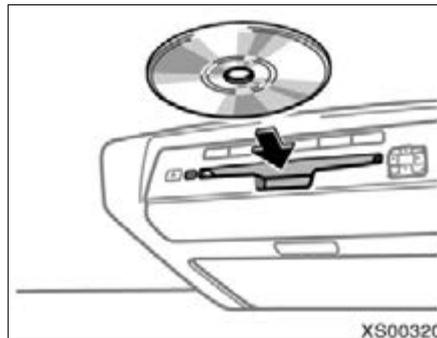


**Insert the disc into the slot with the label side up.**

An adapter must be used for 8 cm (3 in.) discs which are loaded in the same manner as for 12 cm (4.7 in.) discs.

## AUDIO/VIDEO SYSTEM


---

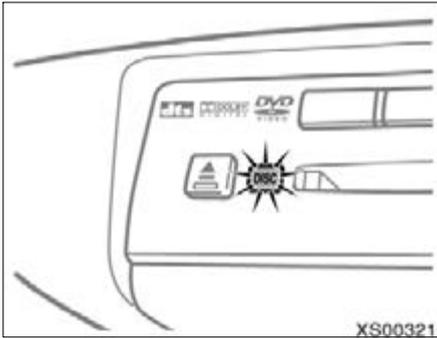

The indicator light turns on while the disc is loaded.

If the label faces down, the disc cannot be played. In this case, "DISC CHECK" appears on the screen.

If a disc which is not playable is inserted, "DISC CHECK" will also appear on the screen. For appropriate discs for this player, see "Audio/video system operating hints" on page 241.

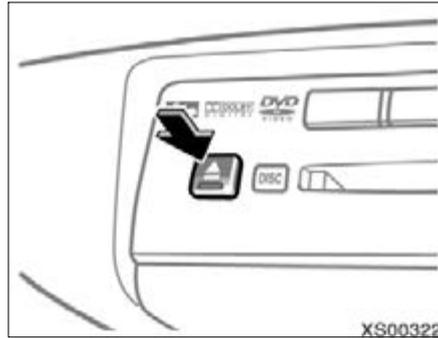


**(b) Ejecting a disc**

Push the  button.

### **NOTICE**

***Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.***

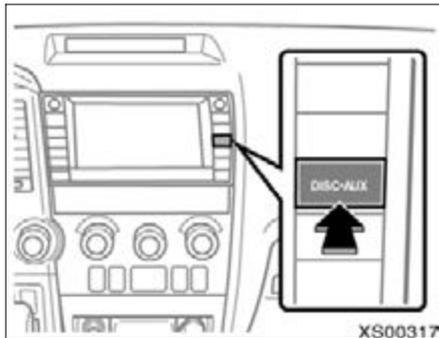

**(c) Playing a disc**

**Push the “DISC-AUX” button if a disc is already loaded in the player.**

“DVD” appears on the screen. (If the CD changer is turned on, push the “DISC” button again to switch to the DVD player.)




**(d) Operating an audio CD**

**PLAYING AN AUDIO CD**

CD text only — The disc title and track title will appear on the screen when pushing the “DISC-AUX” button.

**Push the “AUDIO” button to display this screen.**

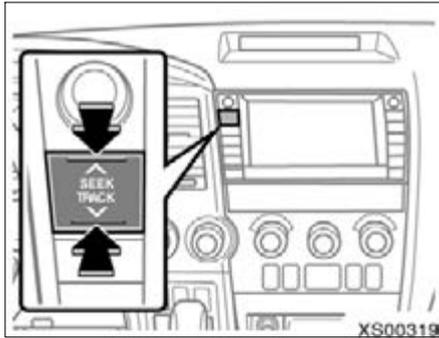

**SELECTING A DESIRED TRACK**

**“SEEK/TRACK” button:** Use for direct access to a desired track.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired track number appears on the display. As you release the button, the player will start playing the selected track from the beginning.

**“TRACK LIST”:** The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch **“TRACK LIST”**. The track list is displayed.



Touch the desired track number. The player will start playing the selected track from the beginning.

**▲:** By touching this touch-screen button, the list moves up by 6 track groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

**▼:** By touching this touch-screen button, the list moves down by 6 track groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

**Fast forward:** Touch “^” side of **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

**Reverse:** Touch “v” side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the player will resume playing.



**SEARCHING FOR A DESIRED TRACK**

Touch **“SCAN”** on the screen or push the **“SCAN”** button.

“SCAN” will be highlighted on the screen. The player will play the next track for 10 seconds, then scan again. To select a track, touch **“SCAN”** on the screen or push the **“SCAN”** button a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

**OTHER FUNCTIONS**

**“RPT”**: Use it for automatic repeat of the track you are currently listening to.

Touch **“RPT”** while the track is playing. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, touch **“RPT”** once again.

**“RAND”**: Use it for automatic and random selection of the disc which you are currently listening to.

When **“RAND”** is touched, the system selects a track in the disc you are currently listening to. To cancel it, touch **“RAND”** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 29 letters can be displayed.



**(e) Operating a MP3 DISC  
PLAYING A MP3 DISC**  
Push the “AUDIO” button to display this screen.

**SELECTING A DESIRED FOLDER**

“**FOLDER▲**”:  
Touch this touch-screen button briefly to go to the next folder.

“**FOLDER▼**”:  
Touch this touch-screen button briefly to go to the previous folder. To jump up to the first folder, touch and hold this touch-screen button until the beep sounds.

“**FOLDER LIST**”:  
The desired folder can be selected in a list. This function is available only when the vehicle is not moving. Touch “**FOLDER LIST**”. The folder list is displayed.




Touch the desired folder number. The player will start playing the first file of the selected folder.

▲: By touching this touch-screen button, the list moves up by 6 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

“**FILE**”:  
The file list is displayed.

“**DETAIL**”:  
Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.

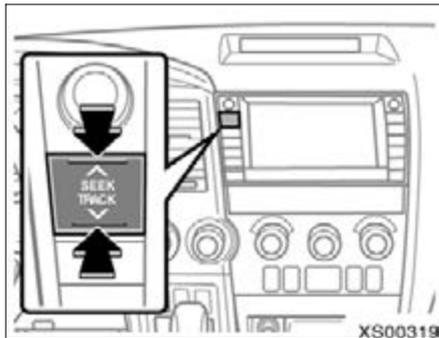

Touch the desired file number. The player will start playing the selected file from the beginning.

**▲**: By touching this touch-screen button, the list moves up by 6 file groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

**▼**: By touching this touch-screen button, the list moves down by 6 file groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

**"FOLDER"**: The folder list is displayed.

**"DETAIL"**: Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.

### SELECTING A DESIRED FILE

**"SEEK/TRACK" button**: Use for direct access to a desired file.

Push either side of the **"SEEK/TRACK"** button and repeat it until the desired file number appears on the display. As you release the button, the player will start playing the selected file from the beginning.

**Fast forward**: Push **"^"** side of the **"SEEK/TRACK"** button and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

**Reverse**: Push **"v"** side of the **"SEEK/TRACK"** button and hold it to reverse the disc. When you release the button, the player will resume playing.

**"FILE"**: The desired file can be selected in a list. This function is available only when the vehicle is not moving.

Touch **"FILE"**. The file list is displayed.

## AUDIO/VIDEO SYSTEM

---



### SEARCHING FOR A DESIRED FILE

Touch “SCAN” on the screen or push the “SCAN” button briefly.

“SCAN” appears on the screen. The DVD player will play the next file in the folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen or push the “SCAN” button a second time. If the player reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.



### SEARCHING FOR A DESIRED FOLDER

Touch and hold “SCAN” on the screen or push the “SCAN” button until the beep sounds.

“FLD.SCAN” appears on the screen. The DVD player will play the file at the beginning of each folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen or push the “SCAN” button a second time.

After all the folders are scanned in one pass, normal play resumes.



**OTHER FUNCTIONS**

**“RPT”**: Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch **“RPT”** briefly while the file is playing. **“RPT”** appears on the screen. When the file is finished, the player will automatically go back to the beginning of the file and play the file again. To cancel it, touch **“RPT”** once again.

Repeating a folder —

Touch and hold **“RPT”** until the beep sounds while the folder is playing. **“FLD.RPT”** appears on the screen. When the folder is finished, the player will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch **“RPT”** once again.

**“RAND”**: Use it for automatic and random selection of the folder which you are currently listening to or of all the folders.

Playing the files in one folder in random order —

Touch **“RAND”** briefly. **“RAND”** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **“RAND”** once again.

Playing the files in all the folders in random order —

Touch and hold **“RAND”** until the beep sounds. **“FLD.RAND”** appears on the screen. The system selects a file in the folders of all the trays which are set and plays it. To cancel it, touch **“RAND”** once again.

When a file is skipped or the system is inoperative, touch **“RAND”** to reset.

(f) Operating a DVD video disc

**NOTE:** The playback condition of some DVD video discs may be determined by a DVD video software producer. This DVD player plays a disc as the software producer intended. So some functions may not work properly. Be sure to read the instruction manual for the DVD video disc separately provided. For the detailed information about DVD video discs, see “(i) DVD player and DVD video disc information”.

**Precautions on DVD video disc**

When recording with a DVD video or video CD, audio tracks may not record in some cases while the menu is displayed. As audio will not play in this case, verify that the video tracks are playing and then activate playback.

When playback of a disc is completed:

- If an audio CD or MP3 disc is playing, the first track or file starts.
- If a DVD video or video CD is playing, playback will stop or the menu screen will be displayed.

The title/chapter number and playback time display may not appear while playing back certain DVD video discs.



This “DVD Hint!” screen appears when the video screen is first displayed after the engine switch is turned to the ACC or ON position.

Touch “OK” when you read the message.

 <b>CAUTION</b>
<p>Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.</p>



### PLAYING A DVD DISC

Push the “AUDIO” button to display this screen.

When you touch “WIDE”, the screen mode can be changed.

If you touch “PICTURE” when the vehicle is completely stopped and the parking brake is applied, the video screen returns.



### DISPLAYING DVD CONTROLS

If you touch a part of the screen, where controls are not located while watching video, DVD controls will appear.

“Page2”: Touching this will display on the second page of DVD controls.

“Page1”: Touching this will display the top page of DVD controls.

“Hide Buttons”: Touching this will turn off the controls from the screen.

If “” appears on the screen when you touch a control, the operation relevant to the control is not permitted.

### DESCRIPTION OF DVD CONTROLS

#### ● Top page of DVD video controls

**“Menu” and “Top Menu”:** If you touch any of the above controls, the menu screen for DVD video appears. (For the operation, see the manual that come with the DVD video disc provided separately.)

: The menu control key appears on the screen. (See page 228.)

: Touching this will pause the video screen.

: Touching this will fast reverse during playback.

: Touching this will stop the video screen.

: Touching this will resume normal play during pause.

: Touching this will fast forward during playback and forward frame by frame during pause.

#### ● Second page of DVD video controls

**“Setup”:** The initial set up screen appears. (See page 231.)

**“Search”:** The title search screen appears. (See page 229.)

**“Return”:** Touching this will display the predetermined scene and start playing from there.

**“AUDIO”:** The audio changing screen appears. (See page 230.)

**“Subtitle”:** The subtitle changing screen appears. (See page 229.)

**“Angle”:** The angle selection screen appears. (See page 230.)



### SELECTING A MENU ITEM

Enter the menu item using , ,  and  and touch “Enter”. The player starts playing video for that menu item. (For details, see the manual that comes with the DVD video disc provided separately.)

Each time you touch “Move Buttons”, the controls on the screen move upward and downward.

When you touch “<<OFF”, the controls will disappear. To display them again, touch “ON”.

When you touch , the previous screen returns.



#### SEARCHING BY TITLE

Enter the title number and touch “Enter”. The player starts playing video for that title number.

When you push either side of the “SEEK/TRACK” button, you can select a chapter.

If you enter the wrong numbers, touch “Clear” to delete the numbers.

When you touch , the previous screen returns.



#### CHANGING THE SUBTITLE LANGUAGE

Each time you touch “Subtitle”, the language is selected from the ones stored in the discs and changed.

When you touch , the previous screen returns.

## AUDIO/VIDEO SYSTEM

---



### CHANGING THE AUDIO LANGUAGE

Each time you touch “AUDIO”, the language is selected from the ones stored in the discs and changed.

When you touch , the previous screen returns.



### CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

Each time you touch “Angle”, the angle changes.

When you touch , and the previous screen returns.



### SETUP MENU

There are initial setting touch-screen buttons on the “Setup Menu” screen.

After you change the initial setting, touch “Enter”. The initial setting screen will be turned off and return to the picture previously.

When “Default” is touched, all menus are initialized.

The initial setting can be changed.

#### ● Audio language

You can change the audio language.

1. Touch “Audio Language”.
2. Touch the language you want to hear on the “Select Audio Language” screen.

If you cannot find the language you want to hear on this screen, touch “Others” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch the .

#### ● Subtitle language

You can change the subtitle language.

1. Touch “Subtitle Language”.
2. Touch a language you want to read on the “Select Subtitle Language” screen.

If you cannot find the language you want to read on this screen, touch “Others” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch the .

#### ● DVD language

You can change the language on the DVD video menu.

1. Touch “DVD Language”.
2. Touch the language you want to read on the “DVD Language” screen.

If you cannot find the language you want to read on this screen, touch “Others” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch .

- **Angle mark**

The multi-angle mark can be turned on or off on the screen while the disc which is multi-angle compatible is being played.

Each time you touch “Angle Mark”, the angle mark on the screen turns on or off alternately.

- **Parental lock**

The level of viewer restrictions can be changed.

1. Touch “Parental Lock”.
2. Enter the 4-digit personal code on the “Enter Personal Code” screen.


If you enter the wrong numbers, touch  to delete the numbers.

10 touches of  will initialize the personal code.

To return to the “Setup Menu” screen, touch .

3. Touch a parental level (1 — 8) on the “Select Restriction Level”. Touch the  switch to return to the “Setup Menu” screen.

**ENTER AUDIO LANGUAGE CODE**

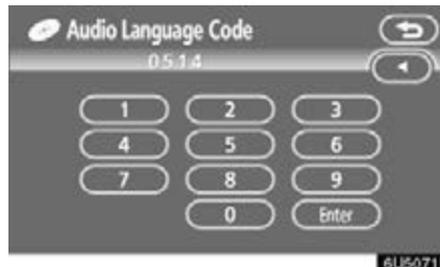

If you touch “Other” on the “Select Audio Language” screen, “Select Subtitle Language” screen or “DVD Language” screen, you can select the language you want to hear or read by entering a language code.

1. Enter the 4-digit language code.

If you enter the wrong numbers, touch  to delete the numbers.

2. Touch “Enter”.

Code	Language
0514	English
1001	Japanese
0618	French
0405	German
0920	Italian
0519	Spanish
2608	Chinese
1412	Dutch
1620	Portuguese
1922	Swedish
1821	Russian
1115	Korean
0512	Greek
0101	Afar
0102	Abkhazian

**AUDIO/VIDEO SYSTEM**

---

0106	Afrikaans	0721	Gujarati
0113	Amharic	0801	Hausa
0118	Arabic	0809	Hindi
0119	Assamese	0818	Croatian
0125	Aymara	0821	Hungarian
0126	Azerbaijani	0825	Armenian
0201	Bashkir	0901	Interlingua
0205	Byelorussian	0905	Interlingue
0207	Bulgarian	0911	Inupiak
0208	Bihari	0914	Indonesian
0209	Bislama	0919	Icelandic
0214	Bengali	0923	Hebrew
0215	Tibetan	1009	Yiddish
0218	Breton	1023	Javanese
0301	Catalan	1101	Georgian
0315	Corsican	1111	Kazakh
0319	Czach	1112	Greenlandic
0325	Welsh	1113	Cambodian
0401	Danish	1114	Kannada
0426	Bhutani	1119	Kashmiri
0515	Esperanto	1121	Kurdish
0520	Estonian	1125	Kirghiz
0521	Basque	1201	Latin
0601	Persian	1214	Lingala
0609	Finnish	1215	Laothian
0610	Fiji	1220	Lithuanian
0615	Faroese	1222	Latvian
0625	Frisian	1307	Malagasy
0701	Irish	1309	Maori
0704	Scots-Gaelic	1311	Macedonian
0712	Galician	1312	Malayalam
0714	Guarani	1314	Mongolian

**AUDIO/VIDEO SYSTEM**

---

1315	Moldavian
1318	Marathi
1319	Malay
1320	Maltese
1325	Burmese
1401	Nauru
1405	Nepali
1415	Norwegian
1503	Occitan
1513	(Afan)Oromo
1518	Oriya
1601	Panjabi
1612	Polish
1619	Pashto, Pushto
1721	Quechua
1813	Rhaeto–Romance
1814	Kirundi
1815	Romanian
1823	Kinyarwanda
1901	Sanskrit
1904	Sindhi
1907	Sangho
1908	Serbo–Croatian
1909	Sinhalese
1911	Slovak
1912	Slovenian
1913	Samoaan
1914	Shona
1915	Somali
1917	Albanian
1918	Serbian
1919	Siswati

1920	Sesotho
1921	Sundanese
1923	Swahili
2001	Tamil
2005	Telugu
2007	Tajik
2008	Thai
2009	Tigrinya
2011	Turkmen
2012	Tagalog
2014	Setswana
2015	Tonga
2018	Turkish
2019	Tsonga
2020	Tatar
2023	Twi
2111	Ukrainian
2118	Urdu
2126	Uzbek
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

**SETUP OPERATION FROM THE REAR SEAT**



This screen appears when a rear passenger selects the setup menu.

If you want to cancel the setup operation from the rear seat, touch **“Play”**. The player will resume normal play.

Under the same condition, the rear passenger can cancel the setup operation from the front seat.

To lock the operation of the player from the rear seat, see **“(c) Rear system lock”** on page 183.




**(g) Operating a video CD  
PLAYING A VIDEO CD**

**Push the “AUDIO” button to display this screen.**

When you touch **“WIDE”**, the screen mode can be changed.

If you touch **“PICTURE”** when the vehicle is completely stopped and the parking brake is applied, the video screen returns.

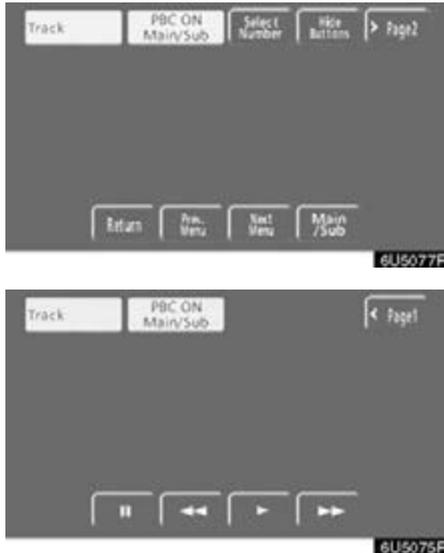

### DISPLAYING VIDEO CD CONTROLS

If you touch the part where controls are not located while you are watching video on the video CD, video CD controls will appear.

“**Page2**” : Touching this will display on the second page of video CD controls.

“**Page1**” : Touching this will display on the top page of video CD controls.

“**Hide Buttons**” : Touching this will turn off the controls from the screen.

If “” appears on the display when you touch a control, the operation is not permitted.

### DESCRIPTION OF VIDEO CD CONTROLS

- **Controls on top page**

“**Select Number**” : The track or number search screen appears. (See “SEARCHING BY TRACK” on page 237.)

“**Prev. Menu**” : When you touch this while the disc menu is displayed, the previous page appears on the screen. If you touch this while the player is playing video, the previous track is searched and played.

“**Next Menu**” : When you touch this while the disc menu is displayed, the next page appears on the display. If you touch this while the player is playing video, the next track is searched and played.

“**Main/Sub**” : A multiplex transmission changing control. The mode changes from Main/Sub to Main, to Sub and back to Main/Sub by touching this control.

“**Return**” : Touching this will display the predetermined scene and start playing from there.

● **Controls on second page**

: Use this to pause the video screen.

: Touch this to fast reverse during playback.

: Touch this to resume playing during pause.

: Touch this to fast forward during the playback and start playing frame by frame during pause.



**SEARCHING BY TRACK**

**Enter the track numbers and touch “Enter”. The player starts playing video for that title number.**

You can select a track number by pushing “^” or “v” on the “SEEK/TRACK” button.

If you enter the wrong numbers, touch “Clear” to delete the numbers.

Touch , and the previous screen returns.

**(h) If the player malfunctions**

If the player or another unit equipped with the player malfunction, your audio system will display following messages.

**If “DISC CHECK” appears on the display:** It indicates that the disc dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, “Disc Check” will also appear on the screen. For appropriate discs for this player, see “Audio/video system operating hints” on page 241.

**If “REGION CODE ERROR” appears on the display:** It indicates that the DVD region code is not set properly.

**If “DVD ERROR” appears on the display:** It indicates that the inside of the player unit may be too hot due to the very high ambient temperature. Remove the disc from the player and allow the player to cool down.

**If the malfunction is not rectified:** Take your vehicle to your dealer.

If an MP3 disc contains CD-DA files, only CD-DA files are played. If an MP3 disc contains files other than CD-DA, only MP3 files are played.

**(i) DVD player and DVD video disc information**

**DVD VIDEO DISCS**

**This DVD player conforms to NTSC color TV formats. The DVD video disc conforming to another formats such as PAL or SECAM cannot be used.**

**Region codes:** Some DVD video discs have a region code indicating a country where you can use the DVD video disc on this DVD player. If the DVD video disc is not labeled as “ALL” or “1”, you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, “REGION CODE ERROR” appears on the screen. Even if the DVD video disc does not have a region code, there is a case that you cannot use it.

**Marks shown on DVD video discs:**

	Indicates NTSC format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

**DVD VIDEO DISC GLOSSARY**

**DVD video discs:** Digital versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

**Viewer restrictions:** This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2 – 7: DVD video discs for children and G-rated movie can be played.

Level 8: All types of the DVD video discs can be played.

**Multi-angle feature:** You can enjoy the same scene at different angles.

**Multi-language feature:** You can select a language of the subtitle and audio.

**Region codes:** The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes, see page 238.

**Audio:** This DVD player can play liner PCM, Dolby digital and MPEG audio format DVD. Other decoded type cannot be played.

**Title and chapter:** Video and audio programs stored in DVD video disc are divided in parts by title and chapter.

**Title:** The largest unit of the video and audio programs stored on DVD video discs. Usually, one piece of movie, one album, or one audio program is assigned as a title.

**Chapter:** The unit smaller than that of title. A title comprises plural chapters.


**Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works.**

**©1992–1997 Dolby Laboratories. All rights reserved.**

**This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.**

**"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.**

## Audio/video remote controls (steering switches)

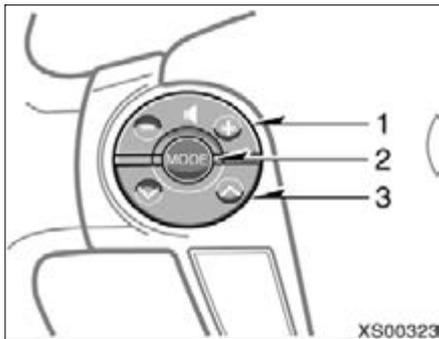

Some parts of the audio system can be adjusted using the switches on the steering wheel.

Details of the specific switches, controls, and features are described below.

1. Volume control switch
2. "MODE" switch
3. "∧∨" switch

### 1. Volume control switch

Push "+" side to increase the volume. The volume continues to increase while the switch is being pressed.

Push "-" side to decrease the volume. The volume continues to decrease while the switch is being pressed.

### 2. "MODE" switch

Push "MODE" switch to select an audio mode. Each push changes the mode sequentially if the desired mode is ready to use.

To turn the audio/video system on, push the "MODE" switch.

To turn the audio/video system off, push and hold the "MODE" switch until you hear a beep.

### 3. "∧∨" switch

#### Radio

This switch has the following features—

To select a preset station:

Quickly push and release the "∧" or "∨" side of the switch. Do this again to select the next preset station.

To seek a station:

Push and hold the "∧" or "∨" side of the switch until you hear a beep. Do this again to find the next station. If you push the switch on either side during the seek mode, seeking will be cancelled.

To step up or down the frequency, push and hold the switch even after you hear a beep. When you release from the switch, the radio will begin seeking up or down for a station. Do this again to find the next station.

XM® Satellite Radio\*—

To select a preset channel, push the "∧" or "∨" side of the switch. Repeat until a desired channel is found.

\*: Use of satellite radio requires XM® tuner and service. Contact your Toyota dealer for details.

## Audio/video system operating hints

### CD changer

Use this switch to skip up or down to a different track in either direction.

To select a desired track or file: Quickly push and release the “^” or “v” side of the switch until the track you want to listen to is set. If you want to return to the beginning of the current track, push the “v” side of the switch once, quickly.

To select a desired disc: Push and hold the “^” or “v” switch until you hear a beep to change to the next or the previous disc. Repeat this operation until you reach the disc you want to listen to.

Vehicles with rear seat entertainment system—

While the DVD player is in operation, the chapter or track can be changed by pushing the “^” or “v” switch

### NOTICE

*To ensure correct audio/video system operations:*

- *Be careful not to spill beverages over the audio system.*
- *Do not put anything other than a compact disc into the slot.*
- *Do not put anything other than an appropriate disc into the DVD player.*
- *The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.*

### RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with your radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

## AUDIO/VIDEO SYSTEM

---

### FM

Fading and drifting stations — Generally, the effective range of FM is about 40 km (25 miles). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path — FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering — These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping — If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

### AM

Fading — AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference — When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static — AM is easily affected by external sources of electrical noise, such as high tension power lines, lightning, or electrical motors. This results in static.

### XM®\*

Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM® Satellite Radio.

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

\*: Use of satellite radio requires XM® tuner and service. Contact your Toyota dealer for details.

### CARING FOR YOUR CD CHANGER, DVD PLAYER AND DISCS

- Your CD changer is intended for use with 12 cm (4.7 in.) discs only.
- Extremely high temperatures can keep your CD changer and DVD player from working. On hot days, use the air conditioning to cool the vehicle interior before you use the changer and player.
- Bumpy roads or other vibrations may make your CD changer and DVD player skip.
- If moisture gets into your CD changer and DVD player, you may not play even though they appear to be working. Remove the disc from the changer and player and wait until it dries.

### CAUTION

**CD changers and DVD player use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the changers and players correctly.**




**CD changer**

- Use only discs marked as shown above. The following products may not be playable on your changer.  
Copy-protected CD  
CD-ROM


Audio CDs	
DVD video discs	
Video CDs	

**DVD player**


- Use only discs marked as shown above. The following products may not be playable on your player.  
SACD  
Copy-protected CD  
CD-ROM  
DVD-R  
DVD+R  
DVD-RW  
DVD+RW  
DVD-ROM  
DVD-RAM

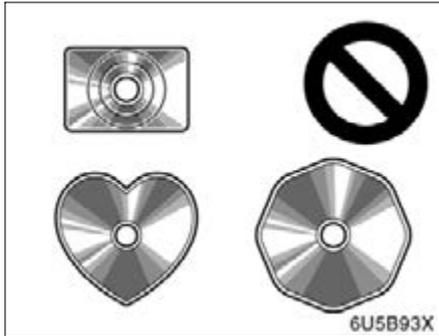

► Special shaped discs

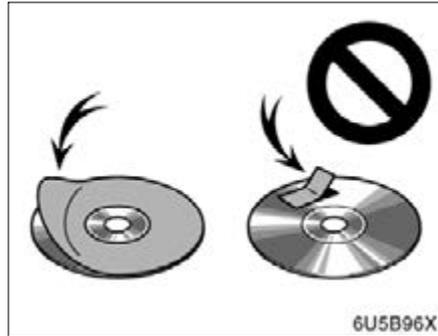


► Labeled discs

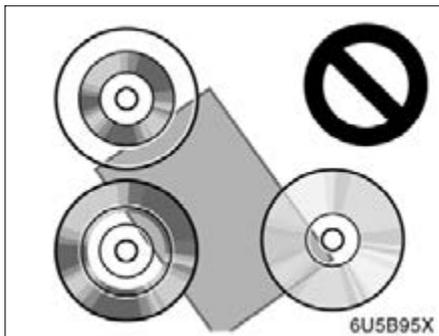


► Transparent/translucent discs

**NOTICE**

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player or changer, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Disc. Do not use Dual Disc because it may cause damage to the player or changer.

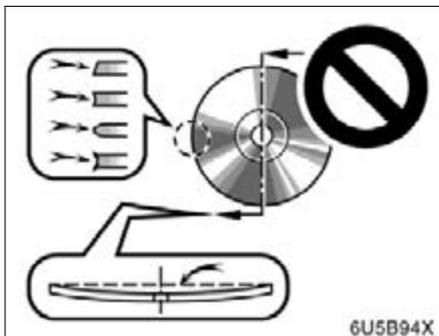

► Low quality discs

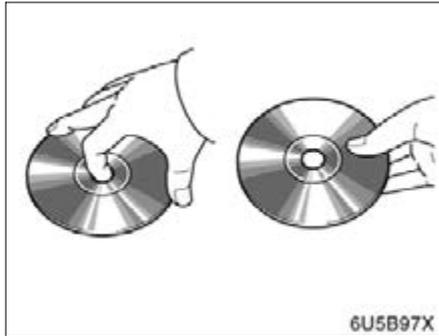

▶ Correct      ▶ Wrong

- Handle discs carefully, especially when you are inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when you are not using them. Store them in their plastic cases away from moisture, heat, and direct sunlight.



**To clean a disc:** Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

### MP3/WMA FILES

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media® Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.

The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.

- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma).
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- The player can play only the first session using multi-session compatible CDs.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.
- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz. (The system can play MP3 files with sampling frequencies of 16, 22.05, and 24 kHz. However, the emphasis function is not available for files recorded at these frequencies.)
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.

### Playable bit rates

MP3 files:

MPEG1 LAYER3—64 to 320 kbps


MPEG2 LSF LAYER3—64 to 160 kbps

WMA files:


Ver. 7, 8 CBR—48 to 192 kbps

Ver. 9 CBR—48 to 320 kbps

- The MP3/WMA player does not play back MP3/WMA files from discs recorder using packet write data transfer (UDF format). Discs should be recorded using “pre-mastering” software rather than packet-write software.
- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The MP3 player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if fast-forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA files.
- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than two levels of folders.
- It is possible to play up to 192 folders or 255 files on one disc.

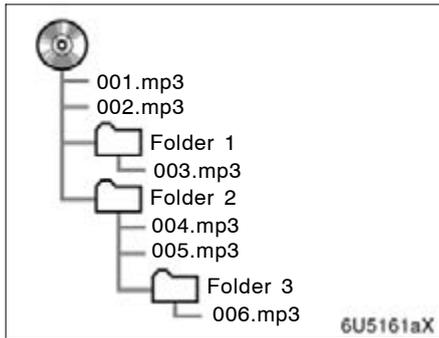


MP3 player (rear seat entertainment system)

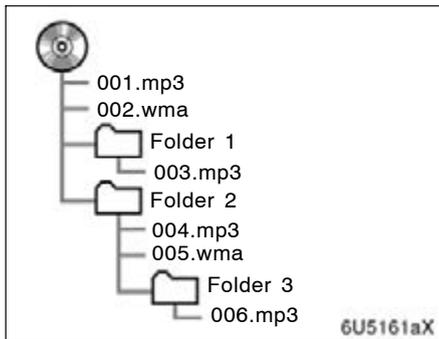


MP3/WMA player (front audio system)

- The play order of the compact disc with the structure shown above is as follows:

 MP3 player (rear seat entertainment system)



MP3/WMA player (front audio system)

 

- MP3 player (rear seat entertainment system)—It is possible to play up to 253 folders on one disc.
- MP3/WMA player (front audio system)—It is possible to play up to 192 folders or 255 files on one disc.
- The order changes depending on the PC and MP3/WMA encoding software you use.

### CD-R and CD-RW discs

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

### TERMS

#### Packet write—

This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

#### ID3 Tag—

This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

#### WMA Tag—

WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.

#### ISO 9660 format—

This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are two levels of regulations.

##### Level 1:

The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “\_” symbol may also be included.)

##### Level 2:

The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

**m3u—**

Playlists created using “WINAMP” software have a playlist file extension (.m3u).

**MP3—**

MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

**WMA—**

WMA (Windows Media<sup>®</sup> Audio) is an audio compression format developed by Microsoft<sup>®</sup>. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8, and 9.

## AUDIO/VIDEO SYSTEM

---

## **SECTION 7**

### **REAR VIEW MONITOR SYSTEM**

- [Rear view monitor system](#) ..... 252

## Rear view monitor system

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle while backing up. The left and right displayed on the screen are the same as those of the inside rear view mirror.

To display the rear view image on the screen, place the selector lever in the R position when the engine switch is in the ON position.

If you move the selector lever out of the R position, the screen returns to the previous screen. Operating another function of the navigation system will display another screen.

The rear view monitor system is a supplement device intended to assist back up. When backing up, be sure to check behind and all around the vehicle visually.



### CAUTION

- Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear. Use caution just as you would when backing up any vehicle.
- Never back up while looking only at the screen. The image on the screen is different from actual conditions. Depicted distances between objects and flat surfaces will differ from actual distances. If you back up while looking only at the screen, you may hit a vehicle, a person or an object. When backing up, be sure to check behind and all around the vehicle visually and with mirrors before proceeding.
- Do not use the system when the back door is not completely closed.


- If the back of the vehicle is hit, the position and mounting angle of the camera may change. Be sure to have the camera's position and mounting angle checked at your Toyota dealer.
- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow, or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.
- Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
- Use your own eyes to confirm the vehicle's surroundings, as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle visually and with mirror before proceeding.

When replacing the tires, please consult your Toyota dealer. If you replace the tires, the area displayed on the screen may change.


## REAR VIEW MONITOR SYSTEM

- **Area displayed on screen**

Image is displayed approximately level on screen.

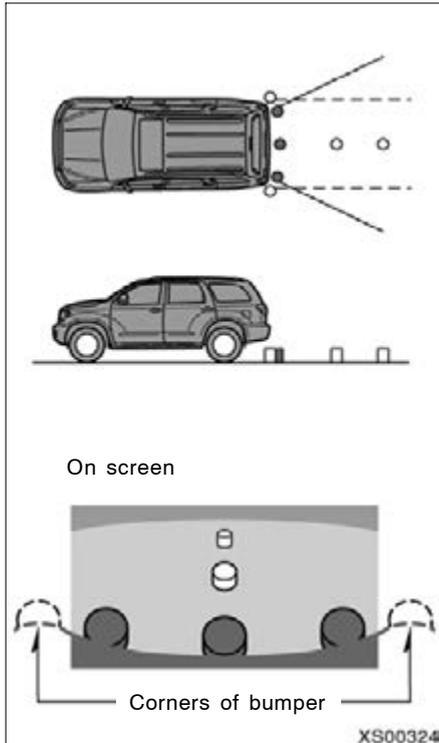

The area detected by the camera is limited. The camera does not detect objects which are close to either corner of the bumper or under the bumper.

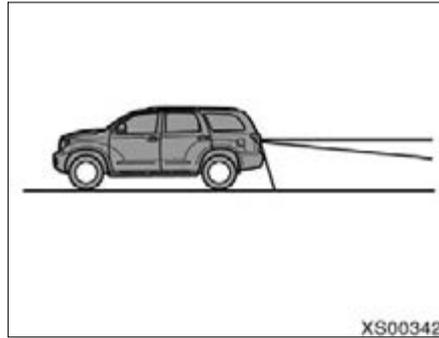


The area displayed on the screen may vary according to vehicle orientation or road conditions.

## REAR VIEW MONITOR SYSTEM


---

- The rear view monitor system camera

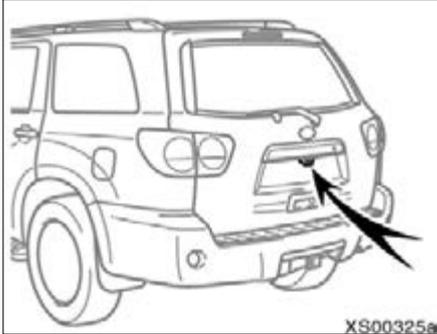

The rear view monitor system camera is located on the back door as shown in the illustration. The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance. In the following cases, it may become difficult to see the images on the screen, even when the system is functioning.

- In the dark (for example, at night)
- When the temperature near the lens is high or low
- When water droplets are adhering to the camera, or when humidity is high (for example, when it rains)
- When foreign matter (for example, snow or mud) is adhering to the camera
- When the camera has scratches or dirt on it
- When the sun or the beam of headlights is shining directly into the camera lens

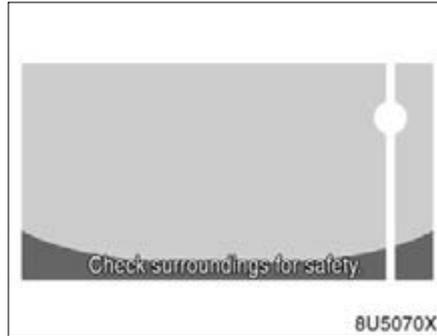

If a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera, the smear effect\* peculiar to the camera may occur.

\*: Smear effect—A phenomenon that occurs when a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

## SECTION 8


### APPENDIX

- Limitations of the navigation system ..... 256
- **Map database information and updates** ..... 258
  - Changing the map DVD-ROM ..... 267

## Limitations of the navigation system

This navigation system calculates the current vehicle position using satellite signals, various vehicle signals, map data, etc. However, the accurate position may not be shown depending on the satellite condition, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current vehicle position, normally using 4 or more satellites, and in some cases 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 feet (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.

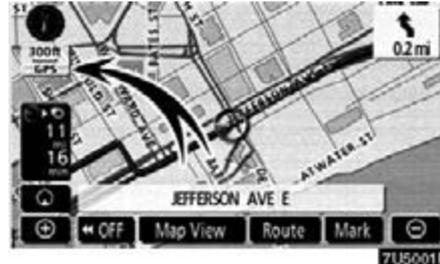

When your vehicle is receiving signals from the satellites, the "GPS" mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map display. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

### **NOTICE**

***The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.***

**(a) Accurate current vehicle position may not be shown in the following cases:**

- When driving on a small angled Y-shaped road.
- When driving on a winding road.
- When driving on a slippery road such as in sand, gravel, snow, etc.
- When driving on a long straight road.
- When freeway and surface streets run in parallel.
- After moving by ferry or vehicle carrier.
- When a long route is searched during high speed driving.
- When driving without setting the current position calibration correctly.
- After repeating a change of direction by going forward and backward, or turning on a turntable in the parking lot.
- When leaving a covered parking lot or parking garage.
- When a roof carrier is installed.
- When driving with tire chains installed.
- When the tires are worn.
- After replacing a tire or tires.
- When using tires that are smaller or larger than the factory specifications.
- When the tire pressure in any of the four tires is not correct.

**(b) Inappropriate route guidance may occur in the following cases:**

- When turning at an intersection off the designated route guidance.
- If you set more than one destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
- When turning at an intersection for which there is no route guidance.
- When passing through an intersection, there is no route guidance.
- During auto reroute, the route guidance may not be available for the next turn to the right or left.
- It may take a long time to operate auto reroute during high speed driving. In auto reroute, a detour route may be shown.
- After auto reroute, the route may not be changed.
- An unnecessary U-turn may be shown or announced.
- A location may have multiple names and the system will announce one or more.
- Some routes may not be searched.
- If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
- Your destination point might be shown on the opposite side of the street.
- When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
- The road and map data stored in your navigation system may not be complete or may not be the latest version.

**INFORMATION**

***If your vehicle cannot receive GPS signals, you can correct the current position manually. For information on setting the current position calibration, see “● Current position/tire change calibration” on page 117.***

**After replacing the tire, implement the operation described in the “● Current position/tire change calibration”. (See page 117.)**

This navigation system uses tire turning data and is designed to work with factory-specified tires for your vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the vehicle's position. The tire pressure also affects the diameter of the tires so please make sure the tire pressure of all four tires is correct.

### Map database information and updates —

**This system uses the maps of DENSO.**

© 2007 DENSO CORPORATION  
© 2006 NAVTEQ. All rights reserved.  
© 2006 Tele Atlas North America, Inc. All rights reserved. This material is proprietary and the subject of copyright protection and other intellectual property rights owned by or licensed to Tele Atlas North America, Inc. The use of this material is subject to the terms of a license agreement. You will be held liable for any unauthorized copying or disclosure of this material.  
Data by infoUSA Copyright © 2006, All Rights Reserved.  
© 2006 VISA Corporation  
National Research Bureau ©2006  
The Bullseye Design is a registered trademark of Target Brands, Inc.

**END USER TERMS**

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("CLIENT") and its licensors (including their licensors and suppliers) on the other hand.

© 2006 NAVTEQ. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®.

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service 2006. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

**TERMS AND CONDITIONS**

**Personal Use Only.** You agree to use this Data together with the navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by [CLIENT] and not as a subset thereof.

## APPENDIX

---

**Restrictions.** Except where you have been specifically licensed to do so by [CLIENT], and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

**Warning.** The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

**No Warranty.** This Data is provided to you "as is," and you agree to use it at your own risk. [CLIENT] and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

**Disclaimer of Warranty:** [CLIENT] AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

**Disclaimer of Liability:** [CLIENT] AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF [CLIENT] OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between [CLIENT] (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End User Terms, and each copy of the Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

**NOTICE OF USE**

CONTRACTOR (MANUFACTURER/  
SUPPLIER) NAME: NAVTEQ

CONTRACTOR (MANUFACTURER/  
SUPPLIER) ADDRESS:

222 Merchandise Mart Plaza,  
Suite 900, Chicago, Illinois 60654

This Data is a commercial item as defined in FAR 2.101 and is subject to the End User Terms under which this Data was provided.

©2006 NAVTEQ – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

**END USER LICENSE AGREEMENT**

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM. BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL TERMS AND CONDITIONS SET FORTH BELOW.

**LICENSE GRANT**

Denso Corporation ("Denso"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

**OWNERSHIP**

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by Tele Atlas North America, Inc. ("TANA") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE.

The DATABASE comprises confidential and proprietary information and materials of TANA. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TANA and its licensors.

**LIMITATIONS ON USE**

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

**TRANSFER**

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

**DISCLAIMER OF WARRANTY**

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

**LIMITATION OF LIABILITY**

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

**WARNINGS**

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

## APPENDIX

---

### **U.S. GOVERNMENT RIGHTS**

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data - commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control.

Contractor/manufacturer is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643.0330. The DATABASE is ©1984-2006 by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

**END USER NOTICE**

**PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM**

**The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by infoUSA Inc. ("infoUSA"). By using the POI Data, you accept and agree to all terms and conditions set forth below.**

**1. OWNERSHIP**

All rights, title and interest to the infoUSA POI Data shall be retained by infoUSA.

**2. LIMITATIONS ON USE**

Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

**3. TRANSFER**

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

**4. DISCLAIMER OF WARRANTY**

EXCEPT AS STATED HEREIN, INFOUSA MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

**5. LIMITATION OF LIABILITY**

EITHER INFOUSA OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

**END USER LICENSE AGREEMENT**

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.


**END USER NOTICE**

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

There are two types of areas available for route guidance. In one type of area, primarily around metropolitan centers, detailed route guidance is available for the entire area. In the other type of area, all roads are displayed on the map but route guidance is limited. The navigation route might lack precision because the data (no right turns, one-way traffic, etc.) is not complete. It is still possible to reach the destination by following the arrow direction and distance as shown on the bottom left of the screen. The arrow points in the direction of the destination. The distance shown is as measured in a straight line from the current vehicle position to the destination area.

In order to provide you with as accurate map information as possible, we are always gathering information such as on road repairs and carrying out on-site investigations. However, the names of roads, streets, facilities, and their locations are often changed. In some places, construction on roads may be in progress. For that reason, information on some areas in this system might be different from the actual location.

## — Changing the map DVD-ROM

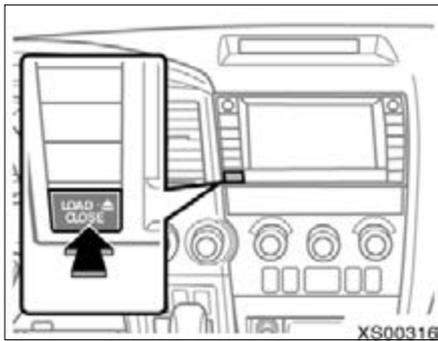

1. Push the “LOAD-▲/CLOSE” button. The “LOAD-EJECT” screen appears.



2. Touch “MAP ▲”. The display opens and the map disc is ejected.



3. Insert the new map DVD-ROM with the label side up.

4. Push the “LOAD-▲/CLOSE” button to close the display.

The map database is normally updated once a year. Contact your dealer for information about the availability and pricing of an update.

### CAUTION

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in the case of an accident or sudden stopping while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.


**NOTICE**

*Do not obstruct the display while it is moving. It could damage your navigation system.*

**INFORMATION**

*Under extremely cold conditions, the display may react slowly or operation sound may become louder.*

- To confirm the database version and disc coverage area

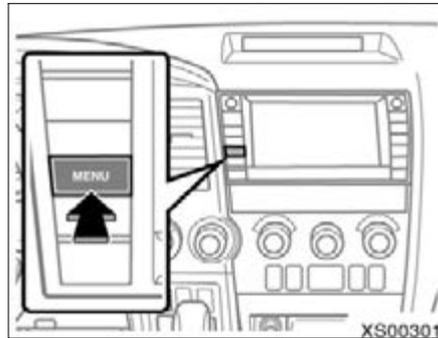

1. Push the "MENU" button.



2. Touch "Map DVD".



Make sure the version of the database on this screen.

To display the disc coverage area, touch "Covered Area". Confirm the covered area on the screen.

Contact your dealer to find out if there is a more recent update released.

# ***INDEX***

For navigation system function, please also refer to the “**Navigation system function index**” on page 19.

## INDEX

---

### Numbers/Symbols

- ? button ..... 30,42,88,89
- 3 Routes selection ..... 65

### A

- Adaptive volume control ..... 152
- Adding a memo ..... 126
- Adding destinations ..... 74
- Address button ..... 42,47
- Alphabet key ..... 26
- AM·SAT button ..... 188,191,195,200
- Angle mark ..... 230
- Area to avoid ..... 103
- Arrow screen ..... 35,70
- ASL ..... 192
- Audio/video remote controls ..... 240
- Audio/video system operating
  - hints ..... 241
- AUDIO button ..... 188,190
- Audio input ..... 194
- Audio language ..... 231
- Auto answer ..... 154
- Auto Voice Guidance ..... 89,115
- Automatic sound levelizer ..... 192
- Automatic transition ..... 182
- Automatic volume settings for
  - high speed ..... 152
- AUX adapter ..... 194

### B

- BASS ..... 192
- Beep setting ..... 184
- Bluetooth® ..... 129
- Bluetooth® information ..... 171
- Brightness ..... 179
- Building information ..... 38

### C

- Calendar with memo ..... 124
- Calibration ..... 89,117
- Call back ..... 139
- Call by dial ..... 137
- Call by dialed numbers ..... 138
- Call by phone book ..... 137
- Call by POI ..... 143
- Call by received calls ..... 139
- Call by speed dial ..... 140
- Call by voice recognition ..... 140
- Call on the Bluetooth® phone ..... 137
- Categories ..... 54

- CAUTION screen ..... 24
- CD changer operation ..... 205
- Cellular phone ..... 129
- Change "Area Size" ..... 107
- Change "Icon" ..... 97
- Change "Location" ..... 100,106
- Change "Name" ..... 99,105
- Change "Phone #" ..... 101
- Change "Quick Access" ..... 98
- Change button ..... 42,44
- Change the route ..... 64
- Change the settings of the
  - Bluetooth® phone ..... 146
- Changing a "Device name" ..... 172
- Changing the angle ..... 230
- Changing the audio language ..... 230
- Changing the Bluetooth®
  - settings ..... 172
- Changing the map DVD-ROM ..... 267
- Changing the security code ..... 167
- Changing the subtitle language ..... 229
- Chapter ..... 239
- City center ..... 55
- City name ..... 52
- City to search ..... 49,52
- Color ..... 179
- Command list ..... 178
- Compass mode ..... 37
- Compass mode screen ..... 35
- Connecting a Bluetooth® phone ..... 135
- Contrast ..... 179
- Coordinates button ..... 42,62
- Current position as the search
  - point ..... 55
- Current position display ..... 30
- Current position/tire change
  - calibration ..... 117
- Cursor position as a destination ..... 32
- Cursor position as a memory
  - point ..... 32

### D

- Daylight saving time ..... 111
- Dealer setting ..... 122
- Default ..... 89,108
- Delete personal data ..... 183
- Deleting "Quick Access" ..... 99
- Deleting a Bluetooth® phone ..... 174
- Deleting a group name ..... 165
- Deleting all of the speed dial ..... 148
- Deleting all the group name ..... 165
- Deleting all the phone data ..... 162
- Deleting all the speed tone ..... 151
- Deleting area to avoid ..... 107

---

**INDEX**

- Deleting destinations ..... 75
  - Deleting home ..... 103
  - Deleting memory points ..... 101
  - Deleting previous points ..... 108
  - Deleting set destinations ..... 75
  - Deleting the log data ..... 166
  - Deleting the phone data ..... 161
  - Deleting the speed dial
    - individually ..... 147
  - Deleting the speed tone
    - individually ..... 150
  - DEST button ..... 10,42,43
  - Destination information ..... 34
  - Destination screen ..... 42,43
  - Destination search ..... 43
  - Destination search by "Address" ..... 47
  - Destination search by
    - "Coordinates" ..... 62
  - Destination search by
    - "Emergency" ..... 58
  - Destination search by
    - "Freeway Ent./Exit" ..... 61
  - Destination search by
    - "Intersection" ..... 60
  - Destination search by "Map" ..... 59
  - Destination search by "Memory" ..... 58
  - Destination search by "Phone #" ..... 62
  - Destination search by
    - "POI Category" ..... 54
  - Destination search by
    - "POI Name" ..... 51
  - Destination search by "Previous" ..... 59
  - Destination search by Home ..... 46
  - Destination search by Quick
    - access ..... 46
  - Detour setting ..... 77
  - Dialing by name ..... 141
  - Dialing by phone number ..... 142
  - Disc slot ..... 205,267
  - DISC·AUX button
    - ..... 188,191,194,208,219
  - DISP button ..... 10,179
  - Display Building Shapes ..... 89,113
  - Display of building shape ..... 113
  - Display phone status ..... 154
  - Display POI Icons ..... 80,89,112
  - Displaying DVD controls ..... 227
  - Displaying the title and name ..... 202
  - Displaying video CD controls ..... 236
  - Distance ..... 89,109
  - Distance and time to
    - destination ..... 10,73
  - Distance unit ..... 89,109
  - Dual map ..... 36
  - Dual map screen ..... 35
  - DVD controls ..... 227
  - DVD language ..... 231
  - DVD player and DVD video disc
    - information ..... 238
  - DVD player operation ..... 217
  - DVD video disc glossary ..... 239
  - DVD video discs ..... 238
- E**
- Edit "Dealer" or "Contact" ..... 123
  - Edit "Location" ..... 123
  - Edit "Phone #" ..... 124
  - Editing a group name ..... 164
  - Editing a memo ..... 127
  - Editing area to avoid ..... 104
  - Editing memory points ..... 96
  - Editing the name ..... 157
  - Editing the phone data ..... 160
  - Editing the phone number ..... 158
  - Editing the speed tone ..... 149
  - Eject button ..... 206,218,267
  - Emergency button ..... 42,58
  - Enter a Bluetooth® phone ..... 134
  - Enter subtitle language code ..... 232
  - Estimated arrival time ..... 73
  - Estimated travel time ..... 73,89,109
- F**
- FILE button ..... 213
  - FM button ..... 188,191,195
  - FOLDER LIST button ..... 212
  - Foot print map ..... 38
  - Foot print map button ..... 10,38
  - Freeway Ent./Exit button ..... 42,61
  - Freeway information screen ..... 35,68
  - Function menu display screen ..... 188
  - Function help ..... 30
- G**
- GPS ..... 256
  - GPS mark ..... 10,256
  - Guidance screen for the
    - freeway ..... 35,69
  - Guiding the route ..... 17
- H**
- Hands-free system ..... 129
  - Heading-up ..... 10,39
  - Heading-up symbol ..... 39
  - Help ..... 30

## INDEX

---

- Help screen ..... 178
- HFP (Hands Free Profile) ..... 129
- Home ..... 13,102
- Home touch–screen button ..... 42,46
- House number ..... 47
  
- I**
- If the player malfunctions ..... 238
- Important Information about this
  - manual ..... 3
- Incoming calls ..... 139
- INFO button ..... 10
- Information about the icon ..... 33
- Information items ..... 121
- Initial screen ..... 24
- Initializing the Bluetooth®
  - settings ..... 174
- Initializing the security code ..... 169
- Inputting letters and numbers ..... 26
- Inserting or ejecting discs ..... 205
- Intersection button ..... 42,60
- Intersection guidance screen ..... 35,69
  
- K**
- Key layout ..... 110
- Keyboard Layout ..... 89,110
  
- L**
- Last 5 cities ..... 50,53
- Layout type ..... 110
- Limitations of the navigation
  - system ..... 256
- List ..... 28
- List all categories button ..... 54,57
- List screen operation ..... 26
- Listening to satellite radio ..... 199
- Listening to the radio ..... 195
- LOAD button ..... 188,205
- Local POI list ..... 81
- Log data ..... 166
  
- M**
- Maintenance information ..... 25,120
- Maintenance information setting ..... 120
- Map button ..... 42,59
- Map coverage area ..... 268
- Map data ..... 268
- Map database information and
  - updates ..... 258
- Map DVD ..... 88,258
- Map icons ..... 40
- Map scale ..... 37
- Map screen operation ..... 30
- Map view ..... 80
- Map View button ..... 10,80,82,83,84
- MAP/VOICE button ..... 10,30,31,72
- Mark button ..... 10,32
- Marks shown on DVD video
  - discs ..... 238
- Memo information ..... 25,124,127
- Memo list ..... 127
- Memory button ..... 42,58
- Memory point information ..... 34
- Memory point names ..... 100
- Memory point screen ..... 95
- Memos for a specified period
  - of time ..... 128
- MENU button ..... 10,88,89,90,268
- Menu screen ..... 88
- Message ..... 198
- Microphone ..... 129,175
- MID ..... 192
- MP3/WMA ..... 212
- MSG button ..... 198
- My places ..... 94
- My Places button ..... 88,94
  
- N**
- Names of areas to be avoided ..... 106
- Navigation system function index ..... 19
- Nearest 5 cities ..... 50,53
- North–up ..... 10,39
- North–up symbol ..... 39
- Notifying traffic restriction ..... 114
- Numbers and symbols ..... 27
  
- O**
- Off function ..... 10,89,112
- On route button ..... 57
- One–touch scroll ..... 31
- Operating a DVD video disc ..... 226
- Operating a MP3/WMA disc ..... 212
- Operating a video CD ..... 235
- Operating an audio disc ..... 209
- Operating guide ..... 179
- OPP (Object Push Profile) ..... 129
- Orientation of the map ..... 39
- Outgoing calls ..... 138

**P**

Parental lock ..... 232  
 Phone # button ..... 42,62  
 Phone book ..... 137,155,157,160  
 Phone book lock ..... 168  
 Playing a disc ..... 208  
 Playing a DVD disc ..... 227  
 Playing a MP3/WMA disc ..... 222  
 Playing a video CD ..... 235  
 Playing an audio disc ..... 209  
 POI as a destination ..... 82  
 POI category button ..... 42,54  
 POI category change ..... 112  
 POI information ..... 33  
 POI Name button ..... 42,51  
 POIs near the search point ..... 57  
 POIs to be displayed ..... 80  
 Pop-up Message ..... 89,116  
 Portable audio player ..... 194  
 Position/direction calibration ..... 117  
 Presetting a satellite radio  
   channel ..... 201  
 Presetting a station ..... 196  
 Previous button ..... 42,59  
 PWR·VOL knob ..... 188,190

**Q**

Quick access ..... 46  
 Quick access touch-screen  
   buttons ..... 42,46

**R**

Radio data system ..... 197  
 Radio ID ..... 199  
 Radio operation ..... 195,199  
 RAND button ..... 211,216,221,225  
 RDS ..... 197  
 Rear system lock ..... 183  
 Receive on the Bluetooth®  
   phone ..... 143  
 Receiving call display ..... 153  
 Reconnecting the Bluetooth®  
   phone ..... 136  
 Redial ..... 138  
 Region codes ..... 238  
 Registering a group name ..... 163  
 Registering area to avoid ..... 103  
 Registering home ..... 13,102  
 Registering memory points ..... 95  
 Registering the phone book data ..... 157  
 Registering the speed dial ..... 146  
 Registering the speed tone ..... 148

Registering your phone ..... 134  
 Reordering destinations ..... 74  
 Resume guidance ..... 90  
 Resume Guidance button ..... 88,90  
 Route button ..... 10,74,76  
 Route guidance screen ..... 68  
 Route overview ..... 82  
 Route preference ..... 64,79  
 Route preview ..... 83  
 Route trace ..... 84  
 RPT button ..... 211,216,221,225

**S**

Safety Instruction ..... 3  
 Satellite radio channel category ..... 202  
 Satellite tuner ..... 199  
 Scale indicator ..... 10,37  
 SCAN button  
   ..... 188,196,210,215,221,224  
 Screen adjustment ..... 179  
 Screen configuration touch-screen  
   button ..... 10,35  
 Screen layout function ..... 112  
 Screen off ..... 179  
 Screen scroll operation ..... 31  
 Screen setting ..... 181  
 Screen size ..... 193  
 Search by "POI Category" ..... 54  
 Search by "POI Name" ..... 51  
 Search condition ..... 76  
 Search point from destinations ..... 56  
 Search point via the map screen ..... 56  
 Searching by title ..... 229  
 Searching by track ..... 237  
 Searching for a desired file ..... 215,224  
 Searching for a desired  
   folder ..... 215,224  
 Searching for a desired track ..... 221  
 Searching for desired track  
   or disc ..... 210  
 Security code ..... 167  
 SEEK/TRACK button  
   ..... 188,196,209,213,220,223  
 Select User button ..... 88,92  
 Select a language ..... 185  
 Selecting a desired disc ..... 208  
 Selecting a desired file ..... 213,223  
 Selecting a desired folder ..... 212,222  
 Selecting a desired track ..... 209,220  
 Selecting a group icon ..... 164  
 Selecting a language ..... 185  
 Selecting a menu item ..... 228  
 Selecting a satellite radio  
   channel ..... 202  
 Selecting a station ..... 196

## INDEX

---

- Selecting the group ..... 158
- Selecting the search area ..... 44
- Sending a tone ..... 142
- Sending a tone by the speed tone ..... 145
- Setting and deleting destination ..... 74
- Setting home as the destination ..... 18
- Setting route ..... 76
- Setting the phone book ..... 155
- Setting the voice recognition ..... 159
- Setup ..... 108
- Setup button ..... 88,89,108
- Setup menu ..... 231
- Setup screen ..... 89,108
- Single map ..... 36
- Single map screen ..... 35
- Sort ..... 29
- Sound icons ..... 98
- Speech command switch ..... 175
- Speech command system ..... 175
- Speech command system indicator ..... 10,175
- Speed dial ..... 140,146,147
- Speed tone ..... 148,149,150
- Starting route from adjacent road .... 79
- Starting route guidance ..... 63
- Steering switches ..... 129,175,240
- Street name ..... 47
- Subtitle language ..... 231
- Suspend guidance ..... 90
- Suspend Guidance button ..... 88,90
- Suspending and resuming guidance ..... 90
- Switch color ..... 182
- Switching between audio functions ..... 191
- Switching the screens ..... 35
  
- T**
- Talk on the Bluetooth® phone ..... 144
- Telephone switch ..... 129
- Time Zone ..... 89,111
- Tire change calibration ..... 117,118
- Title ..... 239
- Tone ..... 142,179
- Tone and balance ..... 192
- Touch screen operation ..... 26
- TRACK LIST button ..... 209
- Traffic announcement ..... 199
- Traffic Restrict. Notification ..... 89,114
- Transfer phone book data ..... 156
- Transferring a telephone number ... 156
- TREB ..... 192
- TUNE·FILE knob ..... 188,195,213
- Turn list screen ..... 35,70
  
- Turning the audio system on and off ..... 190
- TYPE SCAN button ..... 202
- TYPE SEEK button ..... 198
- Typical voice guidance prompts ..... 71
  
- U**
- User selection ..... 92
- Using your audio/video system ..... 189
  
- V**
- Video CD controls ..... 236
- Viewer restrictions ..... 239
- Voice Guidance in All Modes .... 89,115
- Voice Recognition Guidance .... 89,114
- Voice tag ..... 141,159
- Volume ..... 91
- Volume button ..... 88,91
  
- X**
- XM® Satellite Radio broadcast ..... 199
  
- Z**
- Zoom in button ..... 10,37
- Zoom out button ..... 10,37