

Introduction

This manual explains the operation of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.



The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on the satellite condition, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 308 through 309.


TOYOTA MOTOR CORPORATION

Important information about this manual

For safety reasons, this manual indicates items requiring particular attention with the following marks.

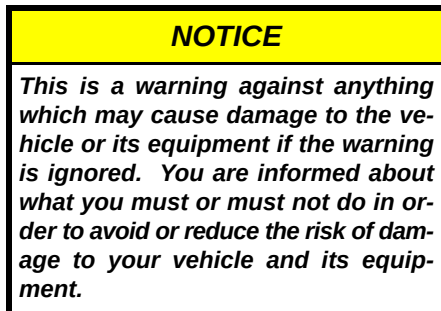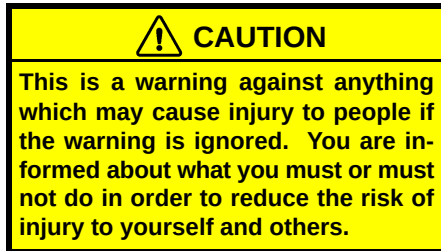

Safety Instruction

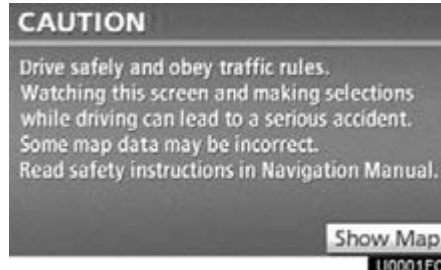

To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable touch screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.



CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may provide wrong information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current vehicle position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instruction from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. **Under no circumstances is this system a substitute for the driver's personal judgement.**

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

Table of Contents

Quick guide —

— Overview buttons and guidance screen	10
— Registering home	12
— Registering preset destinations	14
— Operation flow: guiding the route	16
— Setting home as the destination	17
Navigation system function index	18
Quick reference (“Destination” screen)	20
Quick reference (“Setup” screen)	22
Quick reference (“Information” screen)	23

Quick
Guide

1 Basic Functions

〈Basic information before operation〉

Initial screen	26
Touch screen operation	27
Inputting letters and numbers/List screen operation	28
Screen adjustment	31
Function help	33

Map screen operation	33
Current position display	33
Screen scroll operation	34
Switching the screens	39
Map scale	42
Foot print map	42
Orientation of the map	43
Map icons	44

Speech command system	44
Command list	47

2 Destination Search

Destination search	52
Selecting the search area	52
Destination search by Home	54
Destination search by Preset destinations	54
Destination search by "Address"	55
Destination search by "Point of Interest"	59
Destination search by "Previous Destinations"	65
Destination search by "Address Book"	66
Destination search by "Emergency"	66
Destination search by "Intersection & Freeway"	67
Destination search by "Map"	70
Destination search by "Coordinates"	71
Deleting set destinations	71
Starting route guidance	72

3 Route Guidance

Route guidance screen	78
Typical voice guidance prompts	81
Distance and time to destination	83
Setting and deleting destinations	84
Adding destinations	84
Reordering destinations	84
Deleting destinations	85
Setting route	86
Detour setting	86
Route overview	87
Route preference	89
Pausing and resuming guidance	91
Show on map	92
Display POI* icons	92
Route trace	96
XM® NavTraffic	98


*: Point of Interest

4	My Places	
	Navigation settings	102
	Setting up the “Home”	103
	Setting up the “Preset Destinations”	105
	Setting up the “Address Book”	108
	Setting up the “Areas to Avoid”	114
	Deleting previous destinations	119
5	Telephone and Information	
	Telephone (Hands-free system for cellular phone)	122
	Enter a Bluetooth® phone	126
	Call on the Bluetooth® phone	131
	Receive on the Bluetooth® phone	138
	Talk on the Bluetooth® phone	139
	Calendar	142
6	Audio/video system	
	Quick reference	144
	Using your audio/video system	145
	Some basics	145
	Radio operation	153
	CD changer operation	164
	Bluetooth® audio operation	176
	DVD player operation	184
	USB memory player/iPod® player operation	210
	Audio/video remote controls	217
	Audio/video system operating hints	219
7	Rear View Monitor System	
	Rear view monitor system	230

8	Setup	
	General settings	236
	Clock settings	241
	Voice settings	243
	Navigation settings	245
	Detailed navigation settings	245
	Telephone settings	254
	Volume setting	255
	Manage phone	256
	Phonebook	264
	Setting the phonebook	265
	Speed dials setting	273
	Deleting call history	280
	Setting the voice tag	281
	Bluetooth®	285
	Details	290
	Audio settings	293
	Select portable player	293
	Settings Bluetooth® audio	295
	Vehicle settings	300
	Maintenance	300
9	Appendix	
	Limitations of the navigation system	308
	Map database information and updates	310
	Changing the map DVD-ROM	319
	Index	321

For information about the optional “Rear seat entertainment system”, please refer to the <i>Owner’s Manual</i>.


Quick guide — — Overview buttons and guidance screen

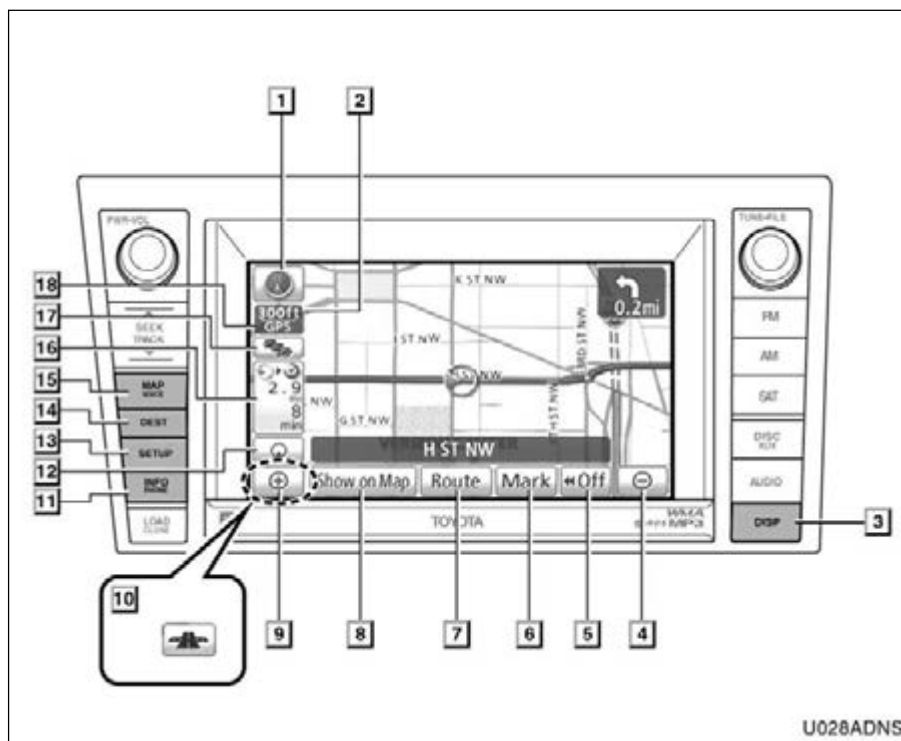


No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	43
2	Scale indicator	This figure indicates the map scale.	42
3	“DISP” button	Push this button to display the “Display” screen.	31
4	Zoom out button	Touch this button to reduce the map scale.	42
5	“◀◀Off”	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “On▶▶”.	251
6	“Mark”	Touch this button to register the current position or the cursor position as a memory point.	35

No.	Name	Function	Page
7	“Route”	Touch this button to change the route.	84, 86
8	“Show on Map”	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	92, 96, 97, 99
9	Zoom in button	Touch this button to magnify the map scale.	42
10	Foot print map button	Touch this button to display the foot print map and the building information.	42
11	“INFO/PHONE” button	Push this button to display the “Information” screen.	23, 126, 142, 319, 320
12	Screen configuration button	Touch this button to change the screen mode.	39
13	“SETUP” button	Push this button to display the “Setup” screen.	22, 102, 236, 241, 243, 245, 254, 293, 300
14	“DEST” button	Push this button to display the “Destination” screen.	12, 14, 16, 17, 20, 52
15	“MAP/VOICE” button	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	33, 82
16	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	83
17	XM® NavTraffic mark	This mark is displayed when XM® NavTraffic information is received.	98
18	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	308

— Registering home

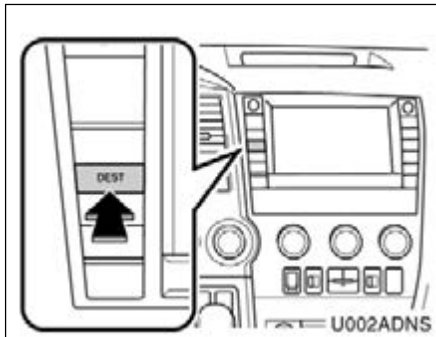

1 Push the “DEST” button.

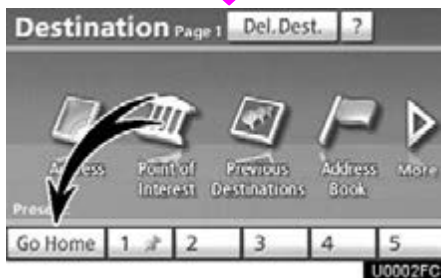

2 Touch “Go Home”.

If home has not been registered, you can register it by touching “Go Home”.



3 Touch “Yes”.




4 There are 4 different methods to search your home.

See “Destination search” on page 52.



5 Touch "Enter".

The "Edit Home" screen is displayed.

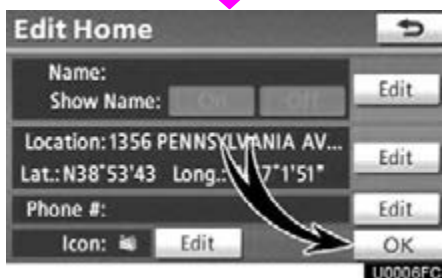


6 Touch "OK".

Registration of home is complete.

You can also register home by touching the "**SETUP**" button. (See " (a) Registering home" on page 103.)

You can change the name, location, phone number and icon. (See " (b) Editing home" on page 104.)

— Registering preset destinations

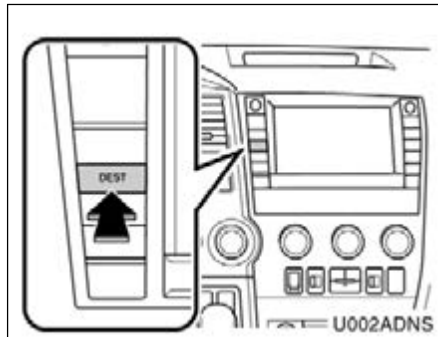

1 Push the “DEST” button.



2 Touch one of the preset destination buttons.

You can set a preset destination to any preset destination button that has not yet been set.




3 Touch “Yes”.



4 There are 4 different methods to search preset destinations.

See “Destination search” on page 52.

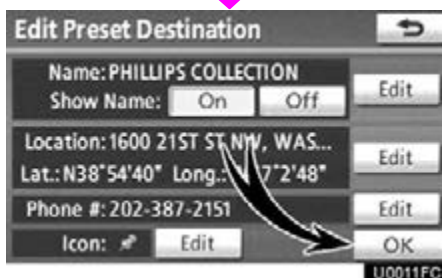

5 Touch "Enter".

The "Edit Preset Destination" screen is displayed.

6 Touch "OK".


Registration of preset destinations is complete.

You can also register preset destinations by touching the **"SETUP"** button. (See " (a) Registering preset destinations" on page 106.)


You can change the name, location, phone number and icon. (See " (b) Editing preset destinations" on page 107.)

The registered points can be used on the "Destination" screen. (See " — Destination search by Preset destinations" on page 54.)

— Operation flow: guiding the route

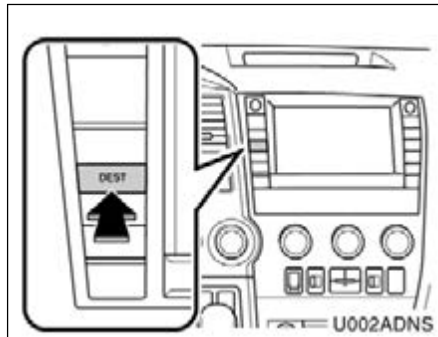

1 Push the “DEST” button.

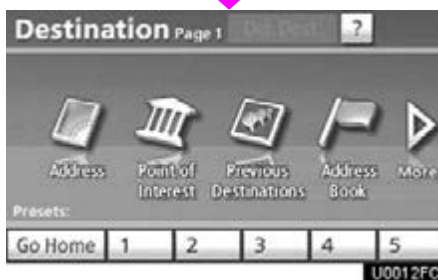

2 There are 10 different methods to search destinations.

See “Destination search” on page 52.



3 Touch “Go to”.

The navigation system performs a search for the route.




4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 72.)

5 Guidance to the destination is given via voice and on the guidance screen.

— Setting home as the destination

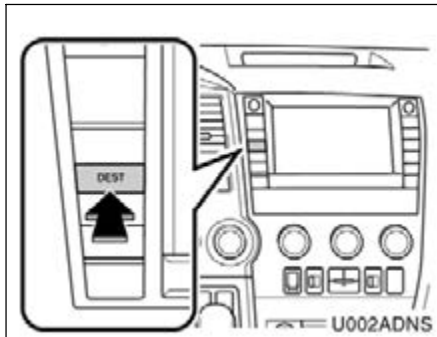

1 Push the “DEST” button.



2 Touch “Go Home”.

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 103.)



3 Touch “Go to”.

The navigation system performs a search for the route.



4 Touch “OK”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 72.)

5 Guidance to the destination is given via voice and on the guidance screen.

Navigation system function index

〈Map〉

Displaying maps	Page
Viewing the map screen	10
Displaying the current vehicle position	33
Viewing the current position vicinity map	34
Changing the scale	42
Changing the map orientation	43
Displaying Point of Interest	92
Displaying the estimated travel/arrival time to the destination	83
Selecting the dual map screen	39
Viewing foot print map	42
Deleting map screen touch screen buttons	251
Searching destination	Page
Searching the destination (by home, Point of Interest, phone #, etc.)	52
Changing the selected region	52
Operating the map location of the selected destination	72

〈Route guidance〉

Before starting route guidance	Page
Setting the destination	72
Viewing alternative routes	72
Starting route guidance	72
Before starting or during route guidance	Page
Viewing the route	72
Adding destinations	84
Changing the route	86
Displaying the estimated travel/arrival time to the destination	83


During route guidance	Page
Pausing route guidance	91
Adjusting route guidance volume	244
Deleting the destination	71, 85
Displaying the entire route map	87

⟨Useful functions⟩

Address book	Page
Registering your own address book entries	108
Marking icons on the map	110
Information	Page
Displaying vehicle maintenance	300
Displaying the calendar	142
Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	126
Making a call on the Bluetooth® phone	131
Receiving a call on the Bluetooth® phone	138
Speech command system	Page
Operating the system with your voice	44

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “**DEST**” button.

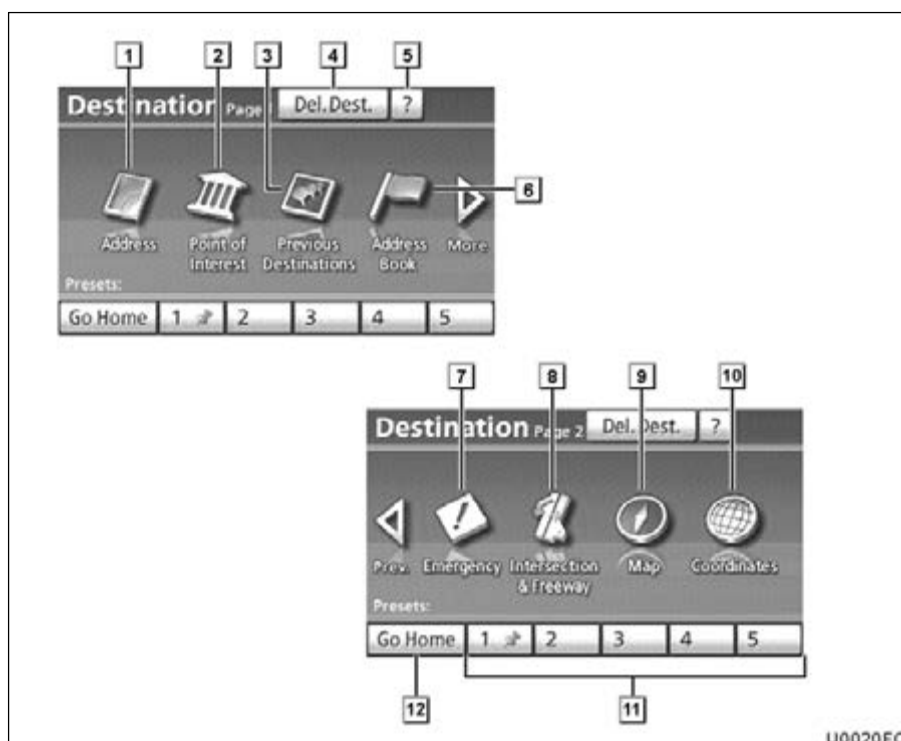

1 “Address”

A house number and the street address can be input by using the input keys.

..... 55

2 “Point of Interest”

Select one of the many Points of Interest that have already been stored in the system’s database. 59

3 “Previous Destinations”

A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. 65

4 “Del. Dest.”

Set destinations can be deleted. 71

5 “?”

Function help for the “Destination” screen can be viewed on this screen. 33

6 “Address Book”

The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 109.) 66

7 “Emergency”

One of the four categories of emergency service points that are already stored in the system’s database can be selected. 66

8 "Intersection & Freeway"

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known. 67

9 "Map"

A destination can be selected simply by touching the location on the displayed map. 70

10 "Coordinates"

A destination can be set using latitudes and longitudes as coordinates. 71

11 Preset destination touch screen buttons


One of 5 preset destination points can be selected by touching the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the "preset destination". (To register a "Preset Destination", see "(a) Registering preset destinations" on page 106.) 54

12 "Go Home"

A personal home address can be selected without entering the address each time. If "Home" has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a "Home" address. (To register "Home", see "(a) Registering home" on page 103.) 54

Quick reference (“Setup” screen)


The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “SETUP” button.

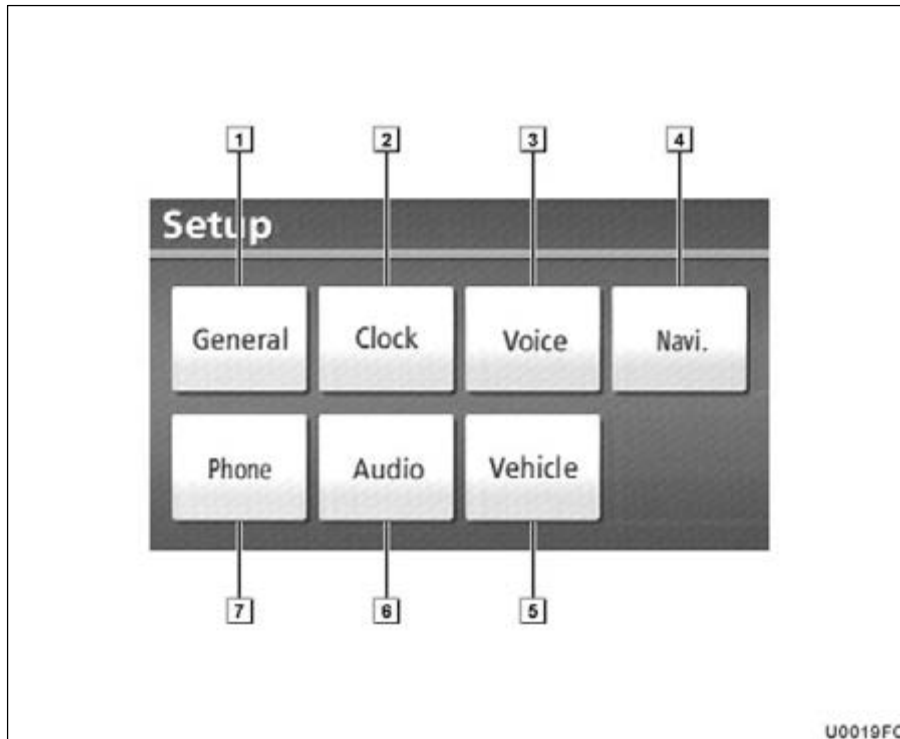

- | | |
|---|---|
| <p>1 “General”
Settings are available for language selection, operation sounds, automatic screen change, etc. 236</p> <p>2 “Clock”
Used for changing settings for time zones, daylight saving time, etc. 241</p> <p>3 “Voice”
Voice guidance can be set. 243</p> <p>4 “Navi.”
Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. 245</p> | <p>5 “Vehicle”
Settings are available for vehicle information such as maintenance information. 300</p> <p>6 “Audio”
Settings are available for portable audio devices, Bluetooth® audio devices etc. 293</p> <p>7 “Phone”
Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. 254</p> |
|---|---|

Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the “INFO/PHONE” button.

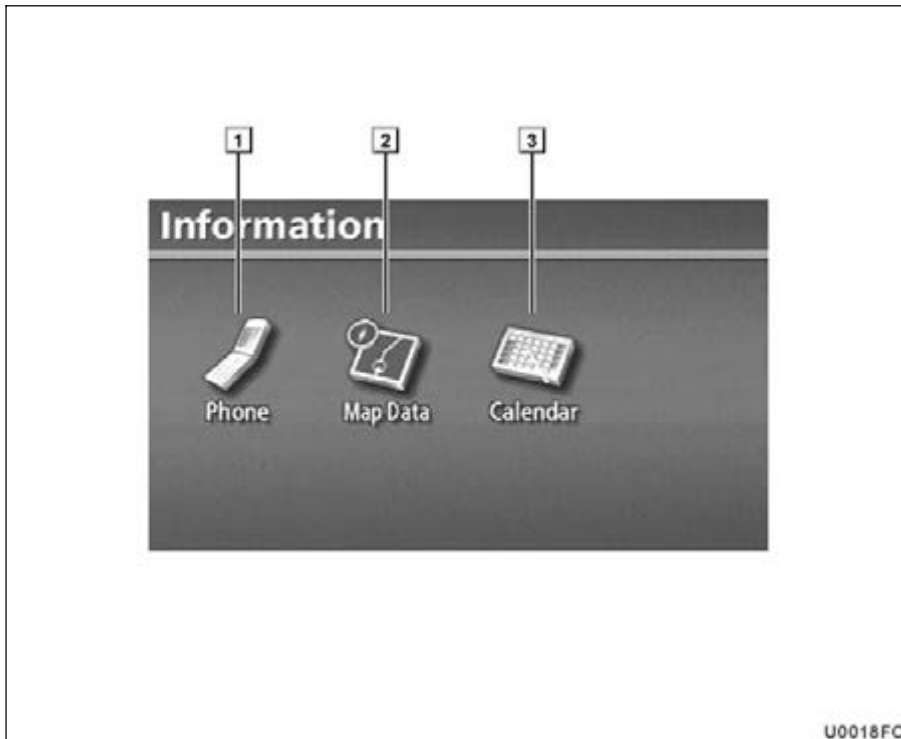

1 “Phone”

To view hands free phone information.

..... 126

2 “Map Data”

Displays information regarding the map data disc version or coverage area.

..... 319

3 “Calendar”

To view calendar. 142

SECTION 1

BASIC FUNCTIONS

Basic information before operation

• Initial screen	26
• Touch screen operation	27
• Inputting letters and numbers/List screen operation	28
• Screen adjustment	31
• Function help	33
• Map screen operation	33
Current position display	33
Screen scroll operation	34
Switching the screens	39
Map scale	42
Foot print map	42
Orientation of the map	43
Map icons	44
• Speech command system	44
Command list	47

BASIC FUNCTIONS

Initial screen



When the engine switch is in the "ACC" or "ON" position, the initial screen will be displayed and the system will begin operating.



After a few seconds, the "CAUTION" screen will be displayed.




After about 5 seconds, the "CAUTION" screen automatically switches to the map screen. When the "MAP/VOICE" button is also pushed, the map screen is displayed.

While the "CAUTION" screen is displayed, the "DEST" or "SETUP" button cannot be operated. And if the "Calendar" button on the "Information" screen is touched, the screen will change back to the "CAUTION" screen. In about 5 seconds, or when the "MAP/VOICE" button is pushed or the "Show Map" is touched, the "CAUTION" screen will change to the map screen.

- **Maintenance information**

This system informs about when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Information" screen will be displayed when the navigation system is in operation.

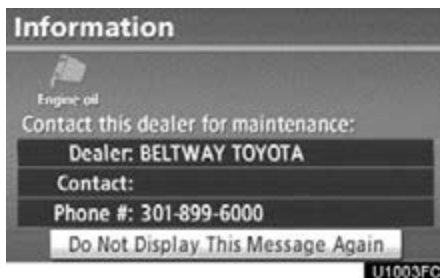

To disable this screen, touch "Do Not Display This Message Again". This screen goes off if the screen is not operated for several seconds.

To prevent this information screen from being displayed again, touch "Do Not Display This Message Again".

To register "Maintenance information", see "—Maintenance" on page 300.

Touch screen operation

This system is operated mainly by the touch screen buttons on the screen.

To prevent damage to the screen, lightly touch buttons on the screen with the finger. When a button on the screen is touched, a beep sounds. (To set a beep sound, see page 236.)

Do not use objects other than the finger to touch the screen.

INFORMATION

- *If the system does not respond to a touch on a touch screen button, move the finger away from the screen and then touch it again.*
- *Dimmed touch screen buttons cannot be operated.*
- *Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the touch screen.*
- *The displayed image may become darker and moving images may be slightly distorted when the display is cold.*
- *Under extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the touch screen buttons may be harder than usual to depress.*
- *When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the "Display" screen, or take off your sunglasses.*

BASIC FUNCTIONS

Inputting letters and numbers/List screen operation


When searching for an address or a name, or entering, letters and numbers can be input via the touch screen.

INFORMATION

*Keyboard layout can be changed.
(See page 239.)*

- **To input letters and numbers**

To display the alphabet keys, touch "A-Z".

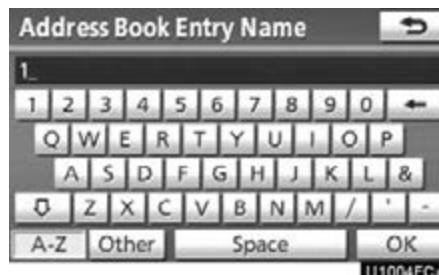


Enter letters by touching the keys directly.



: Touching this button erases one letter. By holding this button, letters will continue to be erased.

On certain letter entry screens, letters can be entered in upper or lower case.

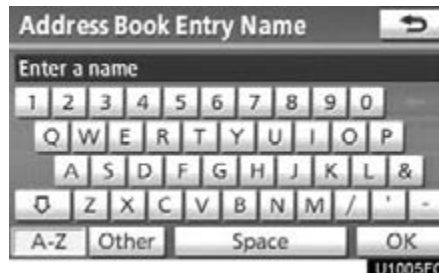


: To enter in lower case.



: To enter in upper case.

- To input symbols


To display symbol keys, touch “Other”.

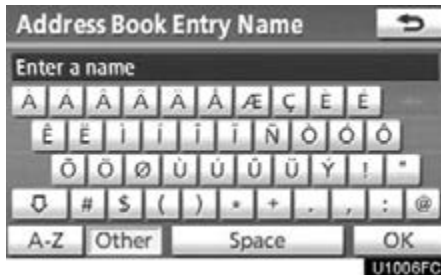

Enter symbols by touching the symbol keys directly.

 : Touching this button erases one letter. By holding this button, letters will continue to be erased.

- To display the list

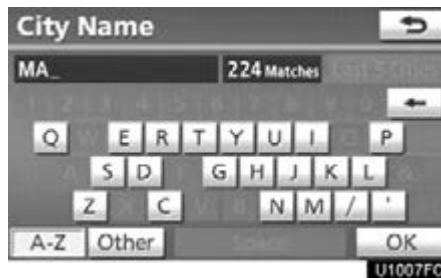

To search for an address or a name, touch “OK”. Matching items from the database are listed even if the entered address or name is incomplete.

If the number of matches is five or less, the list is displayed without touching “OK”.



INFORMATION

*The number of matching items is shown to the right side of the screen. If the number of matching items is more than 999, the system displays “**” on the screen.*

BASIC FUNCTIONS

• List screen operation

When a list is displayed, use the appropriate button to scroll through the list.



To shift to the next or previous page.



Touch  or  to scroll through the displayed list.



This expresses a displayed screen position.




If  appears to the right of the item name, the complete name is too long for the display. Touch  to scroll to the end of the name.



Touch  to scroll to the beginning of the name.

• Sorting

The order of a list displayed on the screen can be rearranged.

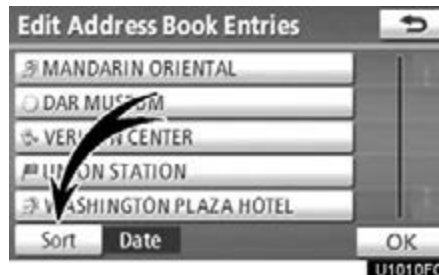

1. Touch "Sort".



2. Select the desired sorting criteria.

Sorting criteria are as follows:

"Distance": To sort in the order of distance from your current location.

"Date": To sort in the order of the date.

"Category": To sort in the order of the category.

"Icon": To sort in the order of the icons.


"Name": To sort in order by name.

Screen adjustment


You can adjust the contrast, brightness, color and tone of the screen. You can also turn the display off, and change the screen to either day or night mode.

- **Contrast, brightness, color and tone adjustment**

The contrast, brightness, color and tone of the screen can be adjusted depending on the brightness of your surroundings. You can also turn the display off.

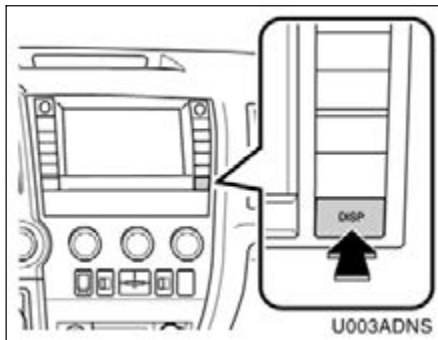

1. Push the "DISP" button.

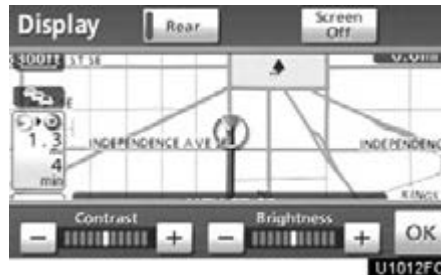

Contrast and brightness adjustment

2. Touch the desired button to adjust contrast and brightness.

"Contrast" "+": Strengthens the contrast of the screen.

"Contrast" "-": Weakens the contrast of the screen.

"Brightness" "+": Brightens the screen.

"Brightness" "-": Darkens the screen.


3. After adjusting the screen, touch "OK".

The screen goes off when "Screen Off" is touched. To turn the display screen back on, push the "DISP" button again, or push the "DEST" or another screen mode button.

INFORMATION

When you do not touch any button on the "Display" screen for 20 seconds, the previous screen will be displayed.

BASIC FUNCTIONS

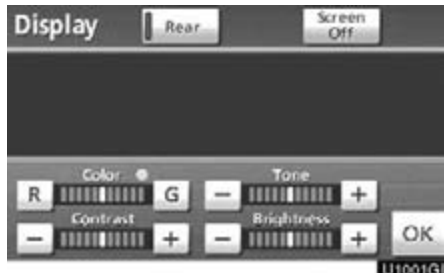

Color and tone adjustment (with rear seat entertainment system)

1. Touch the desired button to adjust color and tone.

You can adjust the color and the tone while the DVD video and video CD are being played.

“Color” “R”: Strengthens the red color of the screen.

“Color” “G”: Strengthens the green color of the screen.

“Tone” “+”: Strengthens the tone of the screen.

“Tone” “-”: Weakens the tone of the screen.

2. After adjusting the screen touch “OK”.

If your vehicle is equipped with the rear seat entertainment system, the rear screen turns on or off when “Rear” is touched.

The screen goes off when “Screen Off” is touched. To turn the display screen back on, push the “DISP” button again, or push the “DEST” or another screen mode button.

● Changing between day mode and night mode

Depending on the position of the headlight switch, the screen changes to day mode or night mode.



To display the screen in day mode even with the headlight switch on, touch “Day Mode” on the adjustment screen for brightness and contrast control.

If the screen is set in day mode with the headlight switch turned on, this condition is memorized in the system even with the engine turned off.

INFORMATION

When you do not touch any button on the “Display” screen for 20 seconds, the previous screen will be displayed.

Function help

When  appears on the screen, an explanation of the function can be displayed.



1. Touch .



2. Touch the button of the desired function.



Map screen operation — — Current position display

When starting the navigation system, the current position is displayed first.

This screen displays the current vehicle position and a map of the surrounding local area.



The current vehicle position mark () appears in the center or bottom center of the map screen.

A street name will appear on the bottom of the screen, depending on the scale of the map ()

You can return to this map screen that shows your current position at any time from any screen by pushing the “MAP/VOICE” button.

While driving, the current vehicle position mark is fixed on the screen and the map moves.

The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.

INFORMATION

- **After battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.**
- **To correct the current position manually, see page 251.**

BASIC FUNCTIONS

— Screen scroll operation (one-touch scroll)

When any point on the map is touched, that point moves to the center of the screen and is shown by the cursor mark (1).



Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position of the vehicle.

If the finger is continuously held on the screen, the map will continue scrolling in that direction until the finger is removed.

A street name, city name, etc. of the touched point will be shown, depending on the scale of the map (2). Distance from the current position to the cursor mark (3) will also be shown (3).

After the screen is scrolled, the map remains centered at the selected location until another function is activated. The current vehicle position mark will continue to move along your actual route and may move off the screen. When the "MAP/VOICE" button is pushed, the current vehicle position mark returns to the center of the screen and the map moves as the vehicle proceeds along the designated route.

- **To set the cursor position as a destination**

A specific point on the map can be set as a destination using the one-touch scroll function.



Touch "Enter" (Enter icon).

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

INFORMATION

When the one-touch scroll feature is used, the current vehicle position mark may disappear from the screen. Move the map with a one-touch scroll again or push the "MAP/VOICE" button to return to the current vehicle position map location display.


- **To register the cursor position as an address book entry**

Address book entry registration enables easy access to a specific point.



Touch "Mark".

When you touch "Mark", the following screen appears for a few seconds, and then the map screen returns.

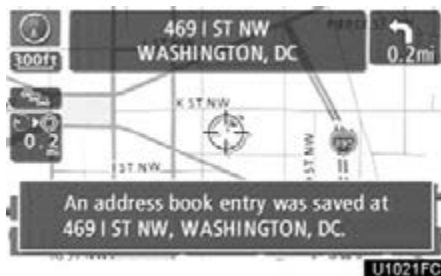

The registered point is shown by  on the map.

To change the icon or name, etc., see " (b) Editing address book entries" on page 110.

Up to 100 address book entries can be registered. If there is an attempt to register more than 100 address book entries, an error message will appear.



BASIC FUNCTIONS

- To see information about the icon where the cursor is set



To display information about an icon, set the cursor on it.

POI INFORMATION

When the cursor is set on a POI icon, the name and “Info.” are displayed at the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Go to” and “Add to Route” are displayed.

“Go to”: To delete the existing destinations and set a new one.

“Add to Route”: To add a destination.

To register this POI as an address book entry, touch “Mark”. (See page 109.)

If  is touched, the registered telephone number can be called.

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 92.)


ADDRESS BOOK ENTRY INFORMATION

When the cursor is set on an address book entry icon, the name and “Info.” are displayed at the top of the screen.



Touch “Info.”.

BASIC FUNCTIONS

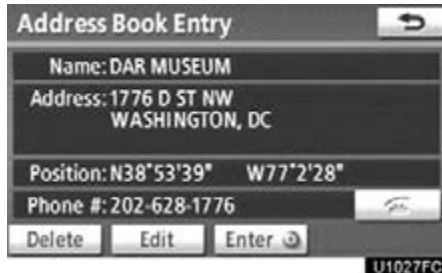

Information such as the name, address, and phone number are displayed.

If “**Enter**” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “**Go to**” and “**Add to Route**” are displayed.

“**Go to**”: To delete the existing destinations and set a new one.

“**Add to Route**”: To add a destination.

To edit an address book entry, touch “**Edit**”. (See “(b) Editing address book entries” on page 110.)

To delete an address book entry, touch “**Delete**”.


If  is touched, the registered telephone number can be called.

DESTINATION INFORMATION

When the cursor is set on a destination icon, the name and “**Info.**” are displayed on the top of the screen.



Touch “**Info.**”.

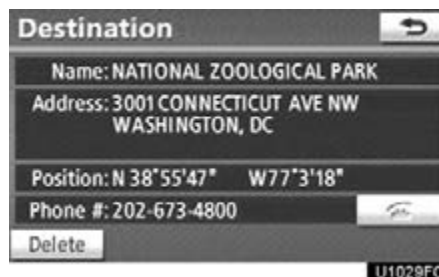


Information such as the name, address, and phone number are displayed.

To delete a destination, touch “**Delete**”.


If  is touched, the registered telephone number can be called.

XM® NavTraffic TEXT INFORMATION

When you touch the XM® NavTraffic icon on the map, the XM® NavTraffic info. bar will appear on the upper part of the screen.

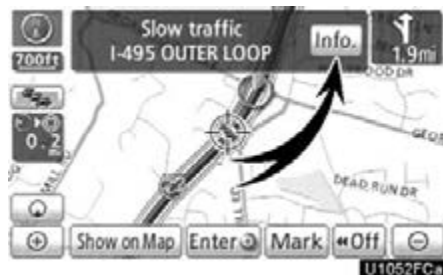

Touch "Info.".

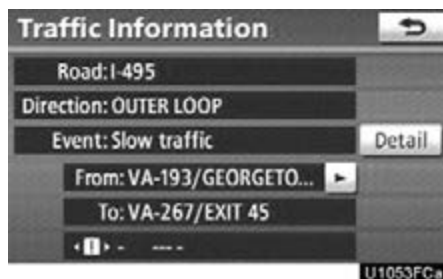

Traffic information is displayed on the screen.

Touch "**Detail**" to display detailed traffic event information.

**— Switching the screens**

Any one of the screen configurations can be selected .



1. Touch this button to display the following screen.



2. To select the desired screen configuration, touch one of the following buttons.

BASIC FUNCTIONS

Depending on the conditions, certain screen configuration buttons cannot be selected.

 **Single Map** :

To display the single map screen.
(See page 40.)

 **Dual Map** :

To display the dual map screen.
(See page 41.)

 **Compass** :

To display the compass mode screen. (See page 41.)

 **Freeway** :

To display the freeway screen.
(See page 78.)

 **Turn List** :

To display the turn list screen.
(See page 80.)

 **Arrow** :

To display the arrow screen. (See page 80.)

 **Intersection** :

To display the intersection guidance screen or the guidance screen on the freeway. (See page 79.)

● Screen configurations

SINGLE MAP

This is a regular map screen.

While on a different screen, touching  will display the single map screen.




The screen shows the single map.

DUAL MAP


A map can be displayed split in two.

While on a different screen, touching  will display the dual map screen.

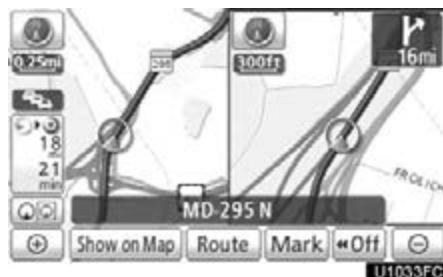

The screen shows the dual map. The map on the left is the main map.

The right side map can be edited by touching any specific point on the right side map.

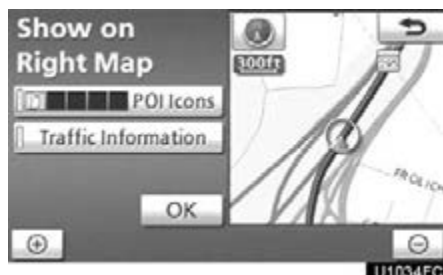

This screen can perform the following procedures:

1. Changing the map scale
2. Displaying the POI icon
3. Show XM® NavTraffic Info. (See page 98.)

4. Changing the orientation of the map

Touch "OK" when you complete editing.

The screen returns to the dual map screen.

COMPASS MODE

Current vehicle position is indicated with a compass.

While on a different screen, touching  will display the compass mode screen.



Information about the destination and current position, as well as a compass, is displayed on the screen.


The destination mark is displayed in the direction of the destination. When driving refer to the longitude and latitude coordinates, and the compass, to make sure that your vehicle is headed in the direction of the destination.

INFORMATION

When the vehicle travels out of the coverage area, the guidance screen changes to the compass mode screen.

BASIC FUNCTIONS

— Map scale

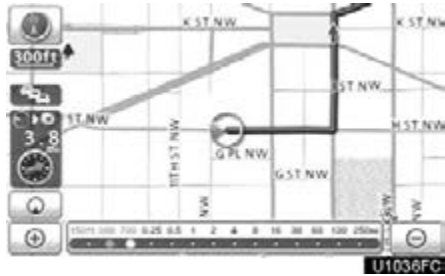

Touch or to change the scale of the map display. The scale bar and indicator at the bottom of the screen indicates the map scale menu. The scale range is 150 feet (50 m) to 250 miles (400 km).

Touch or until the scale bar changes normally. By continuing to touch the button, the scale bar changes smoothly.

The scale of the map display can be changed by touching the scale bar directly. It is not available while driving.

The map scale is displayed under the north-up symbol or heading-up symbol at the top left of the screen.

INFORMATION

When the map scale is at the maximum range of 250 miles (400 km), is not shown. When the map scale is at the minimum range of 150 feet (50 m), is not shown. In areas where the foot print map is available the map scale changes from to when at the minimum range.

— Foot print map

For the area which is covered by the foot print map (Some areas in the following cities: Detroit, Chicago, N.Y., L.A), you can switch to the foot print map on a scale of 75 feet (25 m).

- To switch to the foot print map

changes into when the map is scaled down to 150 feet (50 m).



- To display the foot print map, touch



To delete the foot print map display, touch




INFORMATION

- If the map or the current position is moved to the area which is not covered by the foot print map, the screen scale automatically changes to 150 feet (50 m).
- On the foot print map, a one way street is displayed by .
- It is not possible to perform scrolling on the foot print map (one-touch scroll) while driving.

- **To display building information**

Information is available only for buildings for which information is recorded on the map disc.

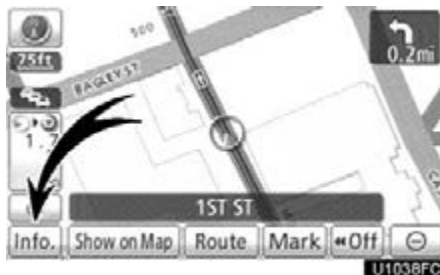

Touch "Info." while the foot print map is displayed.




Details of POIs in some buildings may be displayed.

For detailed POI information, touch the building name. You can see details of the selected POIs.


— Orientation of the map

The orientation of the map can be changed from North-up to Heading-up by touching the orientation symbol at the top left of the screen.

Touch  or .

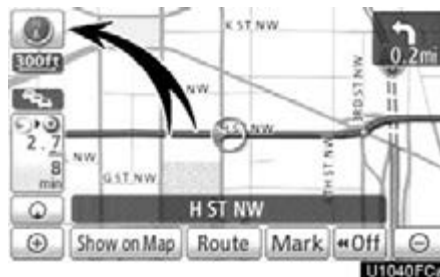

► North-up screen

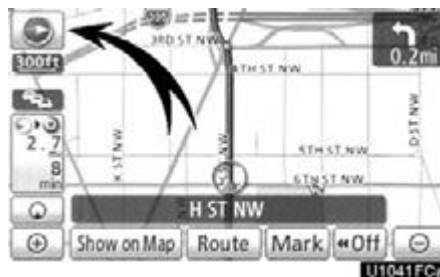

► Heading-up screen

North-up symbol

Regardless of the direction of vehicle travel, North is always up.

Heading-up symbol

The direction of vehicle travel is always up. A red arrow indicates North.


BASIC FUNCTIONS

—Map icons


Icon	Name
	Island
	Park
	Industry
	Business facility
	Airport
	Military
	University
	Hospital
	Stadium
	Shopping mall
	Golf

Speech command system—

The speech command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

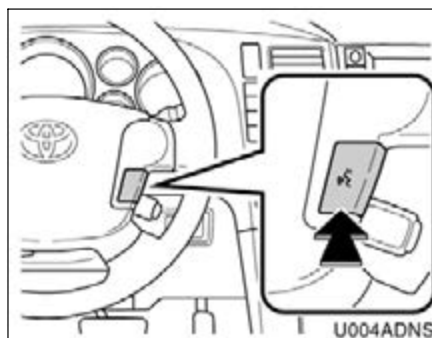

► Type A

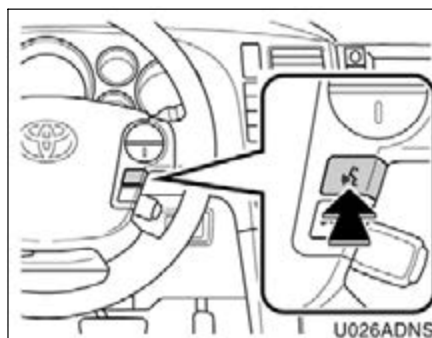

► Type B

1. Push the talk switch.

After a beep sounds, the "Voice Menu" screen is displayed.

INFORMATION

Voice guidance for the speech command system can be skipped by pushing the talk switch.



2. After a beep sounds, say the command of your choice.

Speech commands are marked with . Speak the commands as displayed on the screen.

If you want to check the command list, say **“Command list”** to display the command list screen. (See “—Command list” on page 47.)



3. Following voice guidance, say the command displayed on the screen.

If a desired outcome is not shown, or if no choices are available, say **“Go back”** or touch **“Go Back”** to return to the previous screen.


To cancel speech command recognition, say **“Cancel”**, touch **“Cancel”**, or push and hold the talk switch.

If the navigation system does not respond or the confirmation screen does not disappear, please push the talk switch and try again.


If a speech command cannot be recognized within 6 seconds, the voice guidance system will say “Pardon?” (“Command not recognized.” will be displayed on the screen) and speech command reception will restart.

If a speech command cannot be recognized two consecutive times, the voice guidance system will say “Paused. To restart voice recognition, push the talk switch.”, then be suspended.

BASIC FUNCTIONS

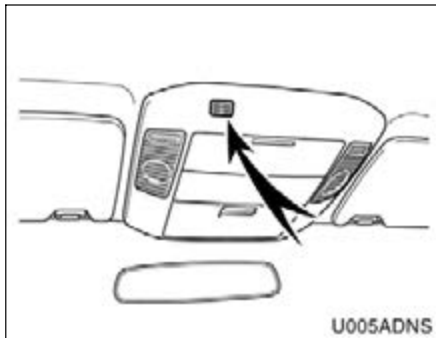

► Microphone (Type A)

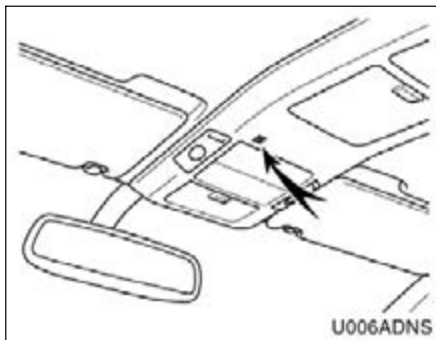

► Microphone (Type B)

It is unnecessary to speak directly into the microphone when giving a command.

INFORMATION

- Wait for the confirmation beep before speaking a command.
- Voice commands may not be recognized if :
 - Spoken too quickly
 - Spoken at a low or high volume
 - The windows or sunroof are open
 - Passengers are talking while voice commands are spoken

- **Speech command example: Searching for a route to your home.**

1. Push the talk switch.
2. Say "Go home".

If a home address is not registered, the voice guidance system will say "Your home is not set" and you will be prompted to enter a home address. (See page 103.)

When the speech command is recognized, a map of the area around your home is displayed.



3. Touch "Enter" or say "Enter", and the system starts searching for a route to your home.

To return to the "Voice Menu" screen, say "Go back" or touch "Go Back".

Touch "Cancel" or say "Cancel", and the speech command system will be canceled.

When you search the destination by POI, this screen is displayed.



INFORMATION

In the following conditions, the system may not recognize the command properly and using speech commands may not be possible.

- The command is not correct or clear.

Note that certain words, accents, or speech patterns may be difficult for the system to recognize.

- There are some noises such as wind noise, etc.

—Command list

The system has a voice recognition command list. You can operate the voice recognition system by saying any command from the displayed command list. However, the XM® NavTraffic commands cannot be used where the XM® NavTraffic service is not available. (For details, see "XM® NavTraffic" page 98.)

1. Push the talk switch.



2. Say "Command list".



3. Say the command of your choice to operate the system.

To confirm commands on the screen,

touch  or  to scroll through the command list. This function is available only when the vehicle is not moving.

INFORMATION

When the "Voice Menu" screen is displayed, all the commands in the voice recognition command list can be recognized.

- Speech command example: Changing map screen


1. Push the talk switch.
2. Say "Command list".



3. Say "Dual map".

To confirm commands on the screen, touch  or  to scroll through the command list. This function is available only when the vehicle is not moving.

When  or  is touched, push the talk switch again and say the command.

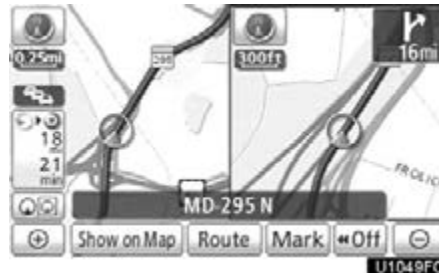

The screen shows the dual map.

- Speech command example: Changing map scale


1. Push the talk switch.
2. Say "Command list".



3. Say "Zoom in" or "Zoom out".

To confirm commands on the screen, touch  or  to scroll through the command list. This function is available only when the vehicle is not moving.

When  or  is touched, push the talk switch again and say the command.

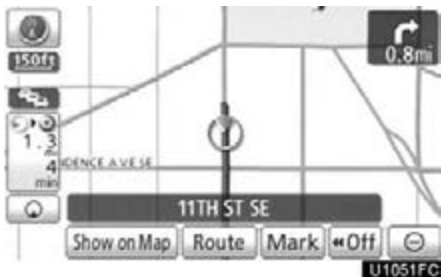

The scale of the map display is changed.

BASIC FUNCTIONS

SECTION 2


DESTINATION SEARCH

Destination search

• Destination search	52
Selecting the search area	52
Destination search by Home	54
Destination search by Preset destinations	54
Destination search by "Address"	55
Destination search by "Point of Interest"	59
Destination search by "Previous Destinations"	65
Destination search by "Address Book"	66
Destination search by "Emergency"	66
Destination search by "Intersection & Freeway"	67
Destination search by "Map"	70
Destination search by "Coordinates"	71
Deleting set destinations	71
• Starting route guidance	72

DESTINATION SEARCH

Destination search —

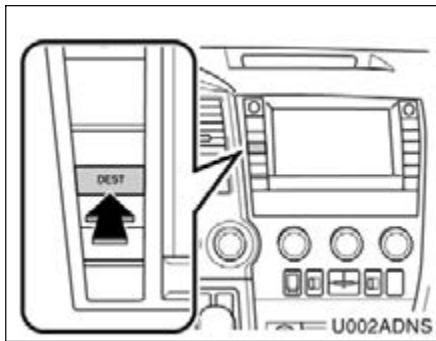

Push the “DEST” button.




You can use one of 10 different methods to search your destination. (See pages 54 through 71.)

INFORMATION

When searching the destination, the response to the touch screen button may be slow.

— Selecting the search area

Change the selected region in order to set a destination from a different region by using “Address”, “Point of Interest” or “Intersection & Freeway”.

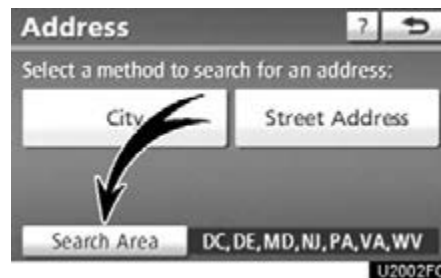

1. Touch “Search Area” to display a map of the United States and Canada divided into 12 regions. (For map database information and updates, see “Map database information and updates” on page 310.)



2. Touch one of “US1” through “CAN” to select a region to search.
3. Touch “OK” and the previous screen returns.

DESTINATION SEARCH

U.S.A.	
Button	States included in the search region
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont

"US9"	Washington, D.C. Delaware Maryland New Jersey Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii

Canada	
Button	Provinces and regions included in the search region
"CAN"	All provinces and regions in Canada included in this button.

— Destination search by Home

1. Push the “DEST” button.



2. Touch “Go Home”.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 72.)

If home has not been registered, a message will be displayed and the setting screen will automatically appear.

To use this function, it is necessary to set a “Home” address. (To register “Home”, see page 103.)

INFORMATION

Guidance starts from the current vehicle position to your home if “OK” is touched even while driving.

— Destination search by Preset destinations

1. Push the “DEST” button.



2. Touch any of the preset destination touch screen buttons on the “Destination” screen.

The screen changes and displays the map location of the preset destination point and the route preference. (See “Starting route guidance” on page 72.)

If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear.

To use this function, it is necessary to set “Preset Destinations”. (To register “Preset Destinations”, see page 105.)

INFORMATION

Guidance starts from the current vehicle position to the preset destination point if “Go to Ⓢ” is touched even while driving.


— Destination search by “Address”

There are 2 ways to search a destination by address.

- (a) Search by city
- (b) Search by street address

1. Push the “DEST” button.

2. Touch “Address” on the “Destination” screen.

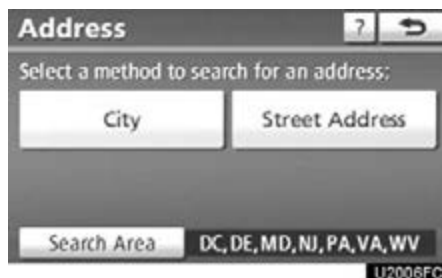


3. Touch the button for the desired method.

(a) Selecting a city to search

1. Push the “DEST” button.

2. Touch “Address” on the “Destination” screen.

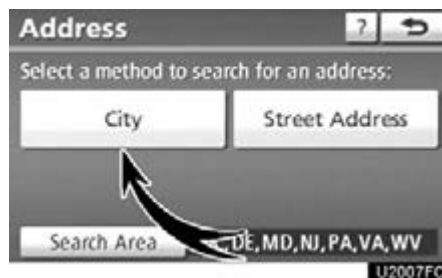

3. Touch “City”.



4. Input a city name.




5. Touch the button of the desired city name from the displayed list.

DESTINATION SEARCH



6. Input the street name and touch "OK".

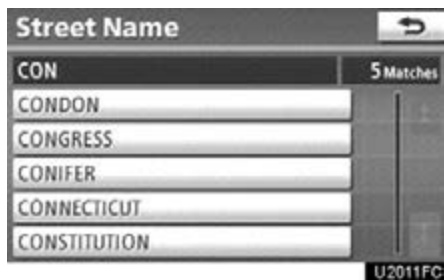


7. When the desired street name is found, touch the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)



8. Input a house number.

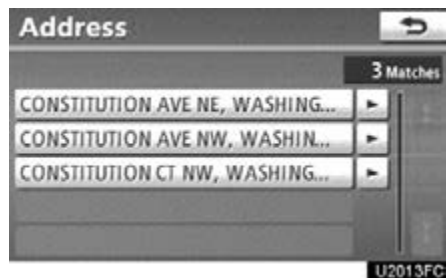

If the same address exists in more than one city, the current screen changes to the address list screen.

SELECTING FROM THE LAST 5 CITIES



1. Touch "Last 5 Cities".




2. Touch the button of the desired city name.

If the navigation system has never been used, this function will not be available.

The current screen changes to the screen for inputting a street name. (See "(a) Selecting a city to search" on page 55.)

(b) Search by street address

1. Push the "DEST" button.
2. Touch "Address" on the "Destination" screen.

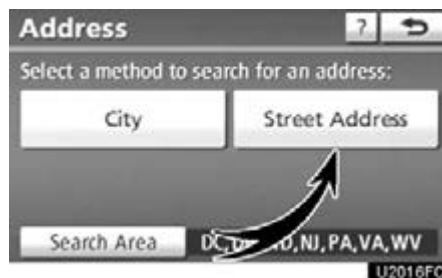

3. Touch "Street Address".



4. Touch numbers directly on the screen to input a house number.

After inputting a house number, touch "OK" to display the screen for inputting a street name.



5. Input the street name and touch "OK".

DESTINATION SEARCH



6. When the desired street name is found, touch the corresponding button.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

If the same address exists in more than one city, the current screen changes inputting the city name or to the address list screen.



7. Input a city name.



8. Touch the button of the desired city name from the displayed list.

INFORMATION

You can search for a street name using just the body.

Example : S WESTERN AVE

You can input "S WESTERN AVE", "WESTERN AVE" or "WESTERN"

— Destination search by “Point of Interest”

There are 3 ways to search by Points of Interest.

- (a) Search by name
- (b) Search by category
- (c) Search by phone #

1. Push the “DEST” button.
2. Touch “Points of Interest” on the “Destination” screen.



3. Touch the button for the desired method.

(a) Search by “Name”

1. Push the “DEST” button.
2. Touch “Point of Interest” on the “Destination” screen.
3. Touch “Name” on the “Point of Interest” screen.



4. Input the name of the Point of Interest.



5. Touch the button of the desired destination.


The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.

INFORMATION

To search for a facility name using multiple search words, put a space between each word.

DESTINATION SEARCH

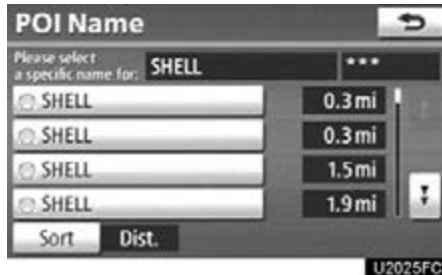

Touch the button of the desired destination.

If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “● Selecting a city to search” on page 60 and “● Selecting from the categories” on page 61.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 92.)

● Selecting a city to search



1. Touch “City”.



2. Input the city name.



3. Touch the button of the desired city name from the displayed list.

INFORMATION

To cancel the city setting, touch “Any City”.

• Selecting from the categories




Touch "Category".



If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch "List All Categories" to list all POI categories.

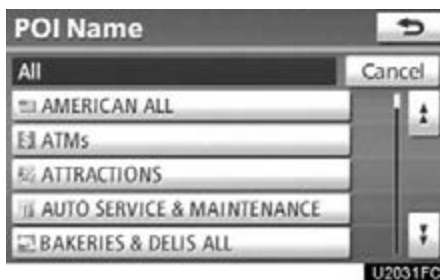

When the desired category is touched, the POI name list screen is displayed.

(b) Search by "Category"

The destination can be set by selecting the search point and the POI category.

1. Push the "DEST" button.
2. Touch "Point of Interest" on the "Destination" screen.
3. Touch "Category" on the "Point of Interest" screen.



Set the search point by the following method:

1. Set the search point from near the vehicle's current position
2. Set the search point from along the chosen route
3. Set the search point from near a city center
4. Set the search point from near a destination

It is possible to display the names of POIs located within approximately 200 miles (320 km) from the selected search point.

DESTINATION SEARCH

SETTING THE SEARCH POINT FROM NEAR HERE

Touch “Near Here”.

The search point is set at the current position, and the “POI Category” screen will be displayed. (See page 64.)

SETTING THE SEARCH POINT FROM ALONG MY ROUTE

Touch “Along My Route”.

The search point is set and the “POI Category” screen will be displayed. (See page 64.)

SETTING THE SEARCH POINT FROM NEAR CITY CENTER

1. Touch “Near City Center”.



2. Input the city center name.



3. Touch the button of the desired city center name.

The search point is set and the “POI Category” screen will be displayed. (See page 64.)

SELECTING FROM THE LAST 5 CITIES

1. Touch "Near City Center".



2. Touch "Last 5 Cities".




3. Touch the button of the desired city center name.

The search point is set and the "POI Category" screen will be displayed. (See page 64.)

SETTING THE SEARCH POINT FROM NEAR A DESTINATION

1. Touch "Near a Destination".

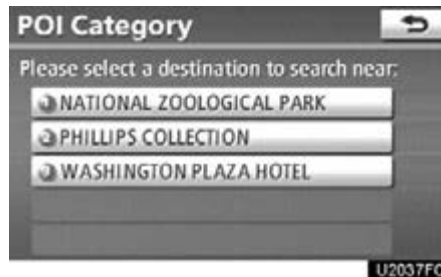

2. Touch the button of the desired destination.

The search point is set and the "POI Name" screen will be displayed. (See page 64.)

DESTINATION SEARCH

- To search POIs near the search point

When the search point is set, the "POI Category" screen will be displayed.



Select the desired POI category.

If the desired POI category is not on the screen, touch "List All Categories" to list all POI categories.



Select the desired POI category from the list.



By touching the button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

- (c) Search by "Phone #"

1. Push the "DEST" button.
2. Touch "Point of Interest" on the "Destination" screen.
3. Touch "Phone #" on the "Point of Interest" screen.




4. Input a telephone number.

5. After inputting a telephone number, touch "OK".

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

If there is more than one site with the same number, the following screen will be displayed.

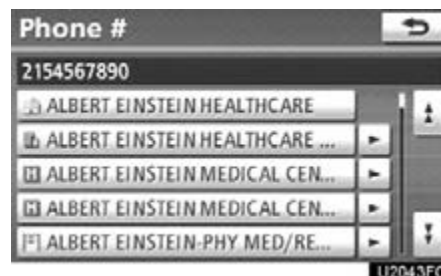


— Destination search by “Previous Destinations”

INFORMATION

- *If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.*
- *To set an address book entry as a destination using the phone number, the number must already be registered. (See page 113.)*

1. Push the “DEST” button.
2. Touch “Previous Destinations” on the “Destination” screen.

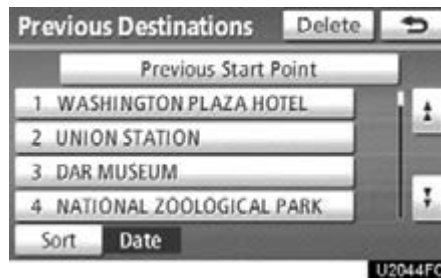

The previous starting point and up to 100 previously set destinations are displayed on the screen.

3. Touch the button of the desired destination.

“Delete”: To delete the previous destination. (To delete previous destinations, see page 119.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

INFORMATION


The list of previous destinations can also be deleted by touching “Delete Previous Dest.” on the “Navigation Settings” screen when the vehicle is stopped. (See “ — Deleting previous destinations” on page 119.)

DESTINATION SEARCH

— Destination search by “Address Book”

1. Push the “DEST” button.
2. Touch “Address Book” on the “Destination” screen.

A list of registered address book entries is displayed.

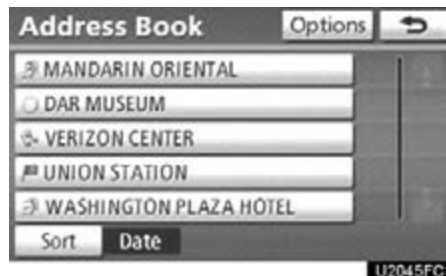

3. Touch the button of the desired address book entry.

“Options”: To register or edit address book. (See page 108.)

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

— Destination search by “Emergency”


1. Push the “DEST” button.
2. Touch “Emergency” on the second page of the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and the longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.

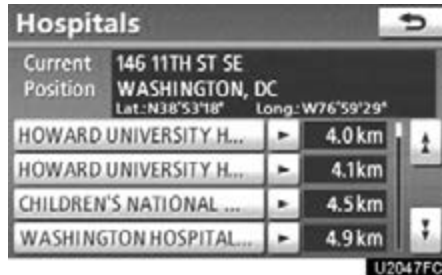

4. Touch the button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

INFORMATION

The navigation system does not guide in areas where route guidance is unavailable. (See page 309.)


— Destination search by "Intersection & Freeway"

There are 2 ways to search.

- (a) Search by intersection
- (b) Search by Freeway Entrance/Exit

1. Push the "DEST" button.

2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.

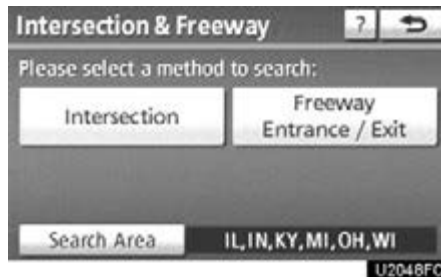

3. Touch the button for the desired method.

DESTINATION SEARCH

(a) Search by "Intersection"

1. Push the "DEST" button.
2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.
3. Touch "Intersection" on the "Intersection & Freeway" screen.



4. Input the name of the first intersecting street which are located near the destination to be set.
5. Touch "OK".



6. Touch the button of the desired item.




7. Input the name of the second intersecting street.



8. Touch the button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

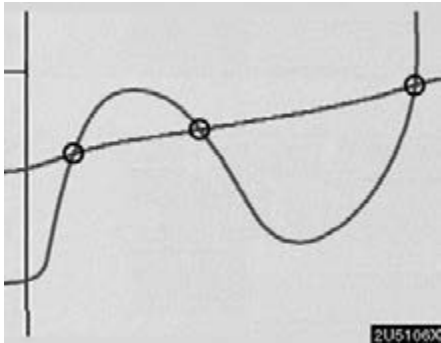

If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "Starting route guidance" on page 72.)

(b) Search by "Freeway Entrance/Exit"

1. Push the "DEST" button.
2. Touch "Intersection & Freeway" on the second page of the "Destination" screen.
3. Touch "Freeway Entrance/Exit" on the "Intersection & Freeway" screen.



4. To input a freeway name.

Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).



5. Select the desired freeway by touching the button.

DESTINATION SEARCH



6. Either a freeway “Entrance” or “Exit” can be selected.



7. To input a freeway entrance or exit name.
8. Touch “OK”.



9. Touch the button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

— Destination search by “Map”

1. Push the “DEST” button.
2. Touch “Map” on the second page of the “Destination” screen.




The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 72.)

INFORMATION

Guidance starts if “OK” is touched even while driving. However, the cursor cannot be moved.

— Destination search by “Coordinates”

1. Push the “DEST” button.
2. Touch “Coordinates” on the second page of the “Destination” screen.

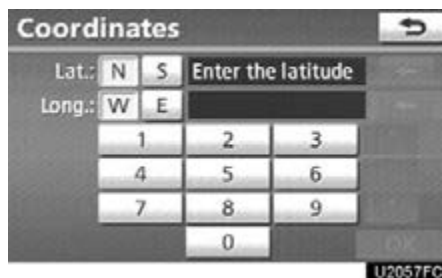

3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 72.)

— Deleting set destinations

A set destination can be deleted.

1. Push the “DEST” button.
2. Touch “Del. Dest.” on the “Destination” screen.

When more than one destination is set, a list will be displayed on the screen.



3. Touch the destination for deletion.

“Select All”: To select all destinations on the list.

“Unselect All”: To unselect all of the selected destinations.

4. Touch “Delete”.



A message appears to confirm the request to delete.

5. To delete the destination(s), touch “Yes”.

If “Yes” is touched, the data cannot be recovered.

If “No” is touched, the previous screen will return.

DESTINATION SEARCH


The system searches for the guidance route again, and displays the entire route.

INFORMATION

Set destinations can also be deleted by touching "Route". (See " — Deleting destinations" on page 85.)


Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference.

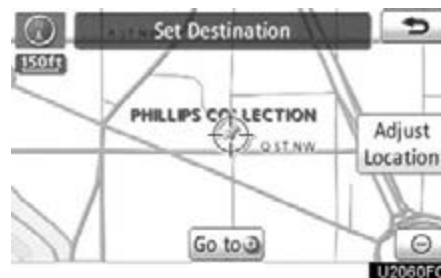

1. Scroll the map to the desired point.

"Adjust Location": To adjust the position in smaller increments.

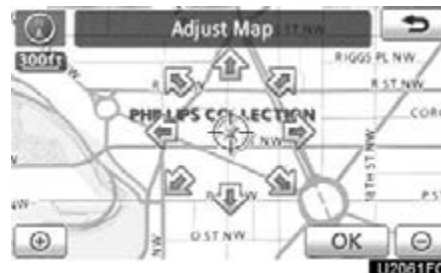

When an arrow facing the desired point is touched, the map scrolls in that direction.

Releasing the finger from the arrow will stop the scrolling.

2. Touch "Go to" button.

The system starts route search and displays recommended routes.

If there is already a set destination, **"Go to"** and **"Add to Route"** are displayed.

"Go to": To delete the existing destinations and set a new one.

"Add to Route": To add a destination.

"Info.": If this button is displayed on the top of the screen, touch it to view items such as name, address, and phone number.



- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, touch "OK".

"Turn List": The following screen displays the list of the roads up to the destination.

"3 Routes": To select the desired route from 3 possible routes. (See page 74.)

"Edit Route": To change the route. (See page 75.)

INFORMATION

- Guidance can be paused or resumed. (See "— Pausing and resuming guidance" on page 91.)
- If "OK" is touched until a beep sounds, demo mode will start. Push the "MAP/VOICE" button to finish Demo mode.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.
- If a destination is entered, the road nearest to the point you selected is set as the destination.

CAUTION

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may provide incorrect information.

DESTINATION SEARCH

3 ROUTES SELECTION



1. To select the desired route from 3 routes, touch "3 Routes".



2. Touch "Quick", "Alt." or "Short" to select the desired route.

"Quick": Recommended route.

This route is indicated by an orange line.

"Alt.": Alternative route.

This route is indicated by a purple line.

"Short": A route by which you can reach the destination in the shortest distance.

This route is indicated by a green line.

"Info.": To display the following information about each of the 3 routes.

3 Routes Info.			
	Quick	Alt.	Short
1	5h30 min	6h26 min	5h35 min
2	296 miles	346 miles	290 miles
3			
4	284 miles	333 miles	267 miles
5			

- 1 Time necessary for the entire trip
- 2 Distance of the entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry

● **Edit route**

You can again designate the conditions of the route to the destination.



INFORMATION

- *Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases.*
- *If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.*

Touch “Edit Route”.



“**Add**”: To add destinations. (See page 84.)

“**Delete**”: To delete destinations. (See page 85.)

“**Reorder**”: To reorder destinations. (See page 84.)

“**Preferences**”: A number of choices are provided on the conditions which the system uses to determine the route to the destination. (See page 89)

DESTINATION SEARCH

SECTION 3

ROUTE GUIDANCE

Route guidance

• Route guidance screen	78
• Typical voice guidance prompts	81
• Distance and time to destination	83
• Setting and deleting destinations	84
Adding destinations	84
Reordering destinations	84
Deleting destinations	85
• Setting route	86
Detour setting	86
Route overview	87
Route preference	89
Pausing and resuming guidance	91
• Show on map	92
Display POI* icons	92
Route trace	96
• XM® NavTraffic	98

*: Point of Interest

Route guidance screen

During route guidance, various types of guidance screens can be displayed depending on conditions.

- **Screen layout**



- 1 Distance to the next turn and the arrow indicating turning direction
- 2 Current street name
- 3 Distance and travel/arrival time to the destination
- 4 Current position
- 5 Guidance route

INFORMATION

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select road that should not be traveled on.
- When you arrive at your destination, the destination name will be displayed on the top of the screen. Touching "◀◀Off" clears the display.

- **During freeway driving**

During freeway driving, the freeway exit information screen will be displayed.

This screen displays the distance to the next junction and exit, or POIs in the vicinity of the freeway exit.



- 1 Current position
- 2 Points of Interest that are close to a freeway exit
- 3 Exit number and junction name
- 4 Distance from the current position to the exit or junction
- 5 Current street name

"Map": To display the selected map of the exit vicinity.



: To scroll for farther junctions or exits.



: To scroll for closer junctions or exits.



: To scroll for the closest 3 junctions or exits.

- **When approaching a freeway exit or junction**

When the vehicle approaches an exit or junction, the guidance screen for the freeway will be displayed.



- 1** Next street name
- 2** Distance from the current position to the exit or junction
- 3** Current position

“Off”: The guidance screen on freeway disappears and the map screen appears.

When touching **Intersection** or pushing the “MAP/VOICE” button, the guidance screen on freeway reappears.

- **When approaching an intersection**

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.



- 1** Next street name
- 2** Distance to the intersection
- 3** Current position

“Off”: The intersection guidance screen disappears and the map screen appears.

When touching **Intersection** or pushing the “MAP/VOICE” button, the intersection guidance screen reappears.

ROUTE GUIDANCE

- Other screens

TURN LIST SCREEN

On this screen, the list of turns on the guidance route can be viewed.

Touching  during guidance displays the turn list.




- 1 Next street name or destination name
- 2 Turn direction
- 3 Distance between turns
- 4 Current street name

ARROW SCREEN

On this screen, information about next turns on the guidance route can be viewed.


Touching  during guidance displays the arrow screen.

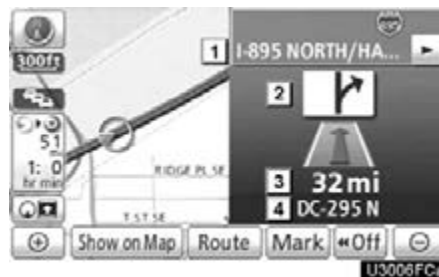


- 1 Exit number, street name containing number or next street name
- 2 Turn direction
- 3 Distance to the next turn
- 4 Current street name

Typical voice guidance prompts

The voice guidance provides various messages as you approach an intersection, or other point where you need to maneuver the vehicle.

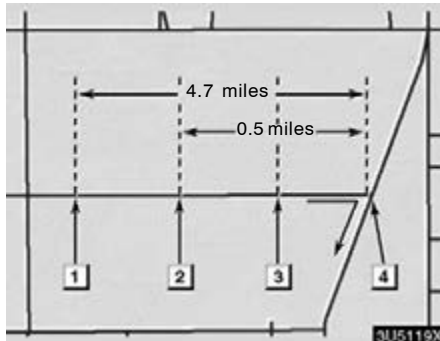

- 1 "Proceed about 5 miles to Main street."
- 2 "In half of a mile, right turn onto Main street."
- 3 "Right turn."
- 4 (Beep sound only)

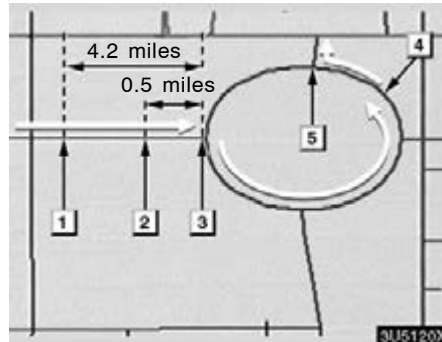


- 1 "Proceed about 4 miles to the traffic circle."
- 2 "In half of a mile, traffic circle ahead, and then 3rd exit ahead onto Main street."
- 3 "The 3rd exit ahead."
- 4 "The exit ahead."
- 5 (Beep sound only)

INFORMATION


- The street names may not be pronounced correctly or clearly due to text-to-speech function.
- On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver.

ROUTE GUIDANCE

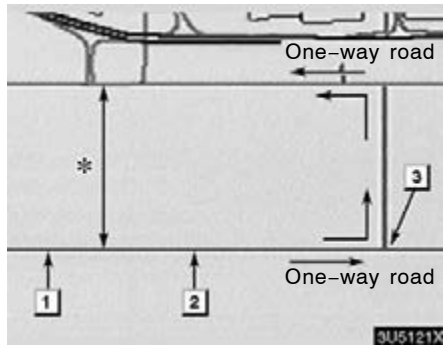

*: The system indicates a U-turn if the distance between two one-way roads (of opposite directions) is less than 50 feet (15 m) in residential areas or 164 feet (50 m) in non-residential areas.

- 1 "In half of a mile, make a legal U-turn."
- 2 "Make a legal U-turn ahead."
- 3 (Beep sound only)

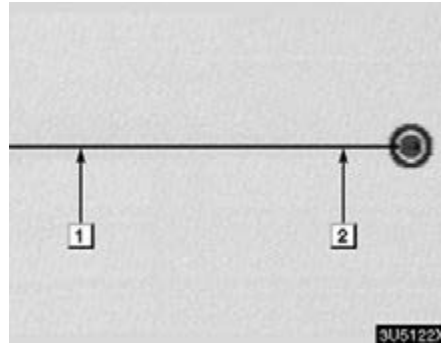

The system announces the approach to the final destination.

- 1 "Your destination is ahead."
- 2 "You have arrived at your destination. The route guidance is now finished."

INFORMATION

- If the system cannot determine the current vehicle position correctly (in cases of poor GPS signal reception), the voice guidance may be made early or delayed.
- If you did not hear the voice guidance command, push the "MAP/VOICE" button to hear it again.
- To adjust the voice guidance volume, see "• Voice volume" on page 244.


Distance and time to destination



When the vehicle is on the guidance route, the distance and the estimated travel/arrival time to the destination are displayed. When the vehicle is not on the guidance route, the distance and the direction of the destination are displayed.

When driving on the guidance route and more than one destination is set, the distance and the estimated travel/arrival time from the current position to each destination are displayed.

1. Touch this button to display the following screen.

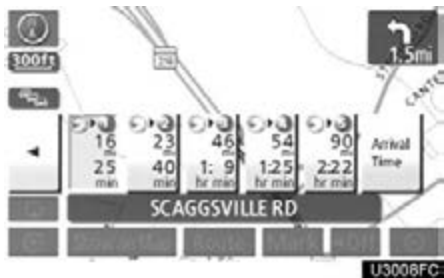

2. Touch the number button to display the desired destination.

The distance, the estimated travel time and the estimated arrival time from the current position to the selected destination are displayed.



Estimated travel time is displayed.



Estimated arrival time is displayed.



To switch to estimated arrival time.



To switch to estimated travel time.



Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

INFORMATION

When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time is calculated based on the set vehicle speed information. (See page 247.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.

ROUTE GUIDANCE

Setting and deleting destinations — — Adding destinations

You can add destinations and search again for the routes.



1. Touch "Route".



2. Touch "Add".


3. Input an additional destination in the same way as the destination search. (See "Destination search" on page 52.)



4. Touch the desired "Add Destination Here" to determine the arrival order of the additional destination.

— Reordering destinations

When more than one destination is set, you can change the arrival order of the destinations.

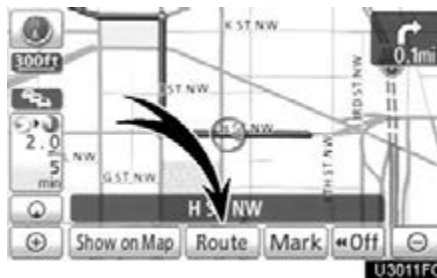

1. Touch "Route".



2. Touch "Reorder".



3. Select the desired destination and press "Move Up" or "Move Down" to change the arrival order.

4. Touch "OK".

5. After selecting the destinations, touch "OK".


The system searches for the guidance route again, and displays the entire route.

— Deleting destinations

A set destination can be deleted.




1. Touch "Route".

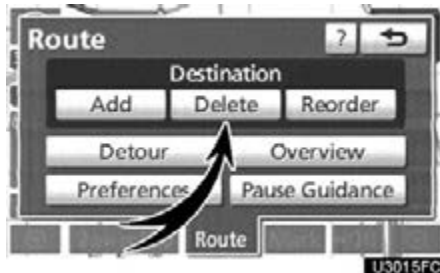

2. Touch "Delete".

When more than one destination is set, a list will be displayed on the screen.

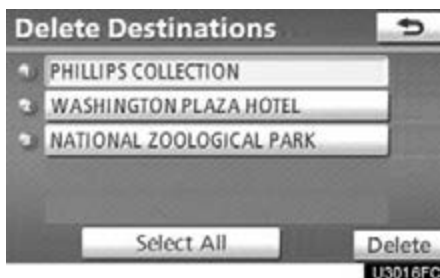

3. Touch the destination for deletion.

"Select All": To select all destinations on the list.

"Unselect All": To unselect all of the selected destinations.

A message appears to confirm the request to delete.

4. To delete the destination(s), touch "Yes".

If **"Yes"** is touched, the data cannot be recovered.

If **"No"** is touched, the previous screen will return.

The system searches for the guidance route again, and displays the entire route.

ROUTE GUIDANCE

Setting route — — Detour setting

While the route guidance is operating, you can change the route to detour around a section of the route where a delay is caused by road repairs, or an accident, etc.



1. Touch "Route".



2. Touch "Detour".




3. Select the button below to select the desired detour distance.

"1 mile (km)", "3 miles (km)" or "5 miles (km)": Touch one of these buttons to start the detour process. After detouring, the system returns to the original guidance route.

"Whole Route": By touching this button, the system will calculate an entire new route to the destination.

"Around Traffic": If you touch this button, the system will search for the route based on the traffic congestion information received from XM® NavTraffic. For details, see "XM® NavTraffic" on page 98.

— Route overview

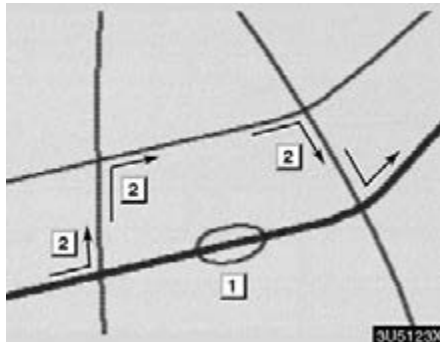

This picture shows an example of how the system would guide around a delay caused by a traffic jam.


- 1 This position indicates the location of a traffic jam caused by road repairs or an accident.
- 2 This route indicates the detour suggested by the system.

INFORMATION


- When your vehicle is on a freeway, the detour distance selections are 5, 15, and 25 miles (km).
- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.



1. Touch "Route".

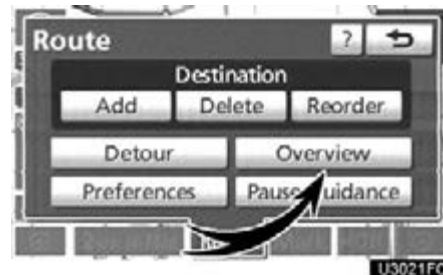

2. Touch "Overview".

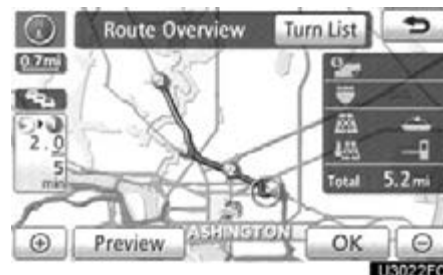

The entire route from the current position to the destination is displayed.

"OK": To start guidance.

"Turn List": The following screen displays the list of the roads up to the destination.

"Preview": To preview the route.

ROUTE GUIDANCE




You can scroll through the list of roads by touching  or . However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through two or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

 These marks indicate the direction in which you should turn at an intersection.


Touch "Map" on the "Turn List" screen. The point which you choose is displayed on the map screen.



• Route preview

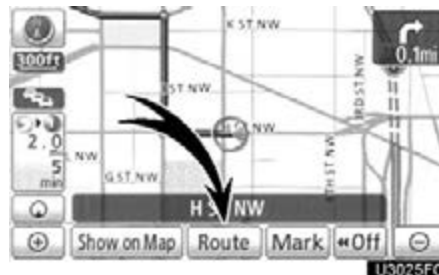

1. Touch "Route".

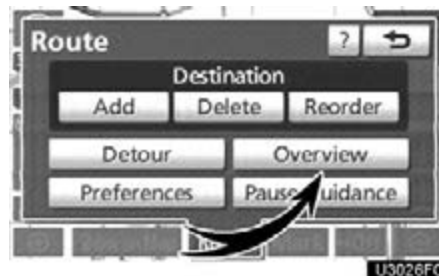

2. Touch "Overview".



3. Touch "Preview".




-  : To indicate the next destination.
-  : To preview the route to the next destination.
-  : To preview the route to the next destination in fast-forward mode.
-  : To stop the preview.
-  : To review the route to the previous destination or starting point.
-  : To review the route to the previous destination or starting point in fast-forward mode.
-  : To indicate the previous destination or starting point.

— Route preference

• To select route type


You can designate the route conditions of the route to the destination.

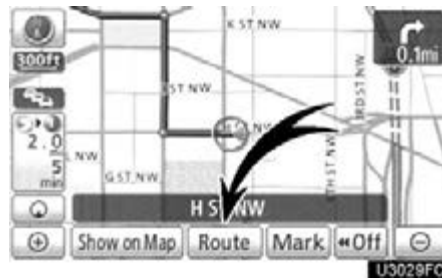

1. Touch "Route".



2. Touch "Preferences".

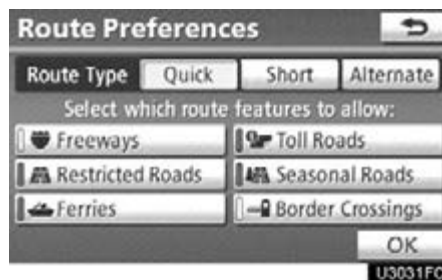

3. Touch "Quick", "Short" or "Alternate" and touch "OK".

ROUTE GUIDANCE




The entire route from the starting point to the destination is displayed.

“OK”: To start guidance.

“Edit Route”: To change a route. (See page 75.)

- **To select route features**


A number of choices are provided on the conditions which the system uses to determine the route to the destination.

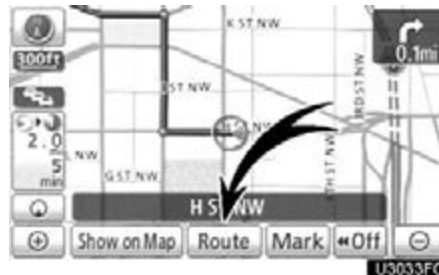

1. Touch **“Route”**.



2. Touch **“Preferences”** to change the conditions that determine the route to the destination.

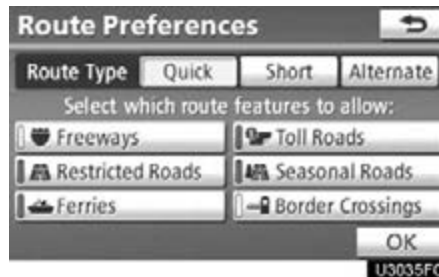

3. Select the desired route preference by touching the button.

When searching for a route, the system will avoid routes when the indicator is off.

4. After choosing the desired route preference, touch **“OK”**.

- **Starting route from adjacent road**

You can start the route guidance from the adjacent road.

(ex. When route guidance is set on the freeway, but the vehicle is driven parallel along the freeway.)



1. Touch "Route".



2. Touch "Preferences".




3. Touch "Start from Adjacent Road".


When there is no adjacent road, this button will not be displayed.

— Pausing and resuming guidance

- **To pause guidance**

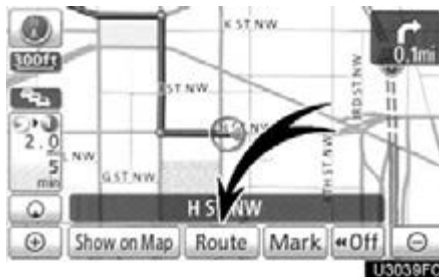


1. Touch "Route".

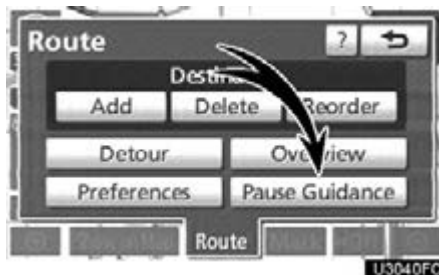

2. Touch "Pause Guidance".

INFORMATION

Without route guidance, "Pause Guidance" cannot be used.

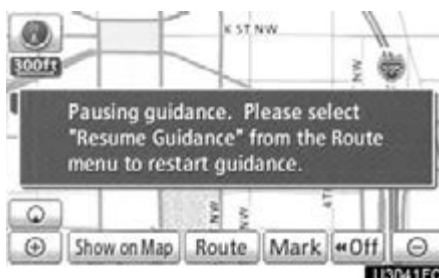


The screen will return to the current position map without route guidance.

- To resume guidance



1. Touch "Route".

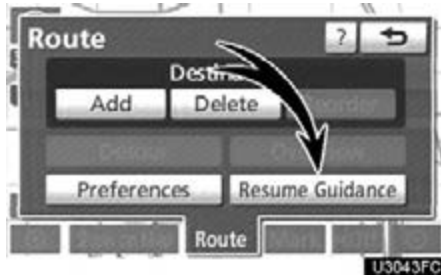

2. Touch "Resume Guidance".




The screen will change to the current position map with route guidance.

Show on map — — Display POI icons

Points of Interest such as gas stations and restaurants can be displayed on the map screen. You can also set their location as a destination and use them for route guidance.



1. Touch "Show on Map".

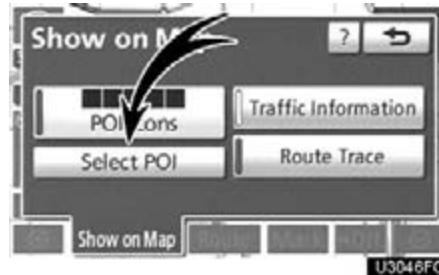

2. Touch "Select POI" to display a particular type of Point of Interest on the screen.

When the Points of Interest to be displayed on the map screen have already been set, "Change POI" is displayed.



A screen with a limited choice of Points of Interest will be displayed. (To change the displayed POI, see page 250.)

● **Selecting POIs to be displayed**

Up to 5 categories of icons can be displayed on the screen.



Touch the desired Point of Interest category to display POI location symbols on the map screen.

By selecting the desired POI category and then touching **“OK”**, the selected POI icons are displayed on the map screen.

To turn off the Points of Interest icons on the map screen, touch **“Clear”**.

“Other POIs”: If the desired Point of Interest can not be found on the limited choice screen, touch this button.

“Find Local POI”: When searching for the nearest Point of Interest, touch this button. Then choose one of the categories. The system will list the points within 200 miles (320 km). (See page 94.)

Touch “Other POIs” on the “Select POI Icons” screen.

When a Point of Interest category is selected from either the limited list or the complete list, the screen will display symbols of those locations on the map screen.




Select the desired POI categories.

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching **“OK”**, the selected POI icons are displayed on the map screen.

If the desired POI category is not on the screen, touch **“List All Categories”** to list all POI categories.

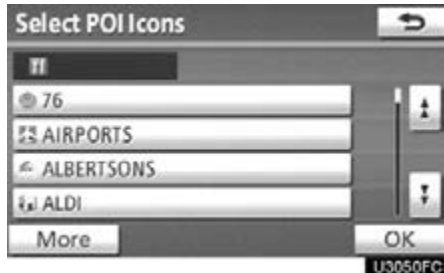

Select the desired POI categories from the list.

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching **“OK”**, the selected POI icons are displayed on the map screen.

To return to the POI category selection screen, touch **“More”**.

- **To display the local POI list**

Points of Interest that are within 200 miles (320 km) of the current position will be listed from among the selected categories.



1. Touch “Find Local POI” on the “Select POI Icons” screen.



2. Touch the button of the desired Point of Interest.

The selected Points of Interest are displayed on the map screen.

“Near...”: To search for Points of Interest near the current position or along the route.



“Near Here” : When **“Near Here”** is touched, the list of Points of Interest near the current position will be displayed.

“Along My Route” : When **“Along My Route”** is touched, the list of Points of Interest along the route will be displayed.

- **To set a POI as a destination**

You can select one of the Points of Interest icons on the map screen as a destination and use it for route guidance.



1. **Directly touch the Point of Interest icon that you want to set as a destination.**

The map will shift so that the icon is centered on the screen and overlaps with the cursor. At this time, the distance from the current position is displayed on the screen. The distance shown is measured as a straight line from the current vehicle position to the POI.

2. **When the desired Point of Interest overlaps with the cursor, touch “Enter”.**


The screen changes and displays the map location of the selected destination and route preference. (See “Starting route guidance” on page 72.)

ROUTE GUIDANCE

- To hide POI icons



1. Touch "Show on Map".

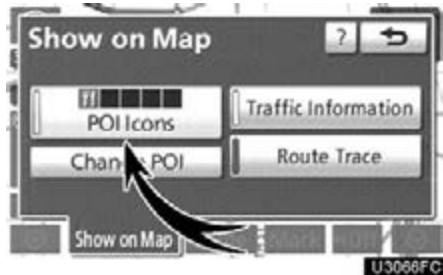

2. Touch "POI Icons".

The "POI Icons" indicator is dimmed.

The map screen will be displayed with the POI icons hidden.

To display the POI icons again, touch "POI Icons" on the "Show on Map" screen.

— Route trace

It is possible to store the traveled route up to 124 miles (200 km) and retrace the route on the display.


INFORMATION

This feature is available on the map with more detailed map scale than 30 mile (50 km).

- To start recording the route trace



1. Touch "Show on Map".

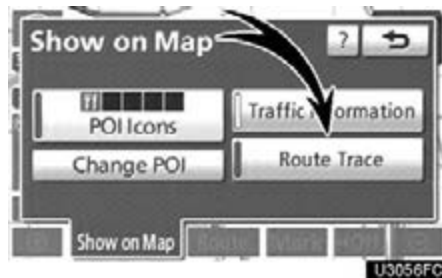


2. Touch "Route Trace". "Route Trace" indicator is highlighted.

- To stop recording the route trace



1. Touch "Show on Map".

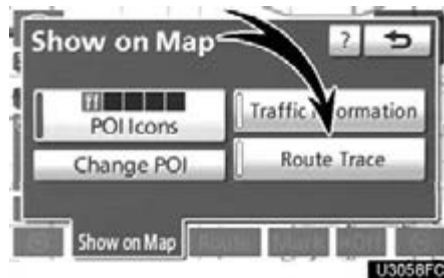

2. Touch "Route Trace". The following screen will be displayed.



Touching "Yes" stops recording and the route trace remains displayed on the screen.

Touching "No" stops recording and the route trace is erased.

XM® NavTraffic

The XM® NavTraffic service that allows the navigation system to display traffic information on the map is available if your satellite radio tuner can receive traffic information.

To receive the XM® NavTraffic service, a subscription to the XM® Satellite Radio with NavTraffic is necessary.

The XM® NavTraffic is available in the contiguous 48 U.S. states and some Canadian cities. For details about the XM® NavTraffic service coverage area, refer to www.xmradio.com (U.S.A.) or www.xmradio.ca (CANADA).

- How to activate the XM® NavTraffic service

To receive the XM® NavTraffic service, it is necessary to activate the service. To activate the service, an extra fee is required in addition to subscription fees for the XM® Satellite Radio. For details about service and activation, call XM® Listener Care Center at 1-800-967-2346 (U.S.A.) or 1-877-438-9677 (CANADA).

Customers should have their radio ID ready; the radio ID can be found by selecting "channel 000" on the radio. For details, see "(b) Displaying the radio ID" on page 158.

XM® Satellite Radio has the responsibility for all fees and service, they are subject to change.

The following operations can be performed.

- **Show XM® NavTraffic Information**

Traffic information is displayed on the map. (See page 99.)

- **Auto Avoid Traffic**

If any heavy congestion or moderate traffic has been detected on the guidance route, it may be possible for you to select another route offered by the system. (See page 248.)

- **Traffic Voice Guidance**

Traffic information is provided using voice guidance. (See page 244.)


- **Show Free Flowing Traffic**

Freely flowing traffic is shown by the arrow on the map. (See page 249.)


INFORMATION

- *Traffic voice guidance is available only in English. To select English, see "● Selecting a language" on page 237.*
- *When the "Traffic Information" indicator is dimmed, "Auto Avoid Traffic", "Traffic Voice Guidance" and "Show Free Flowing Traffic" will not operate.*
- *Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM® Satellite Radio.*

● Show XM® NavTraffic information

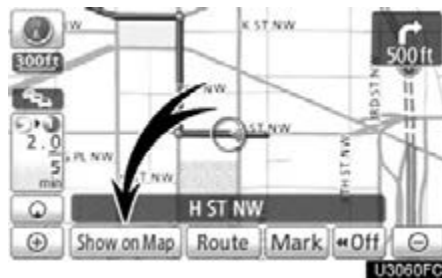


1. Touch "Show on Map".

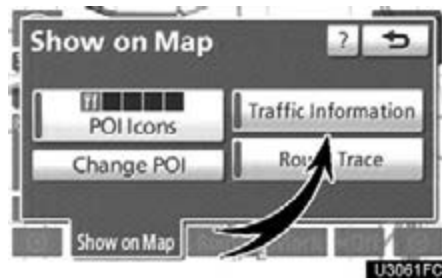

2. Touch "Traffic Information".
"Traffic Information" indicator is highlighted.

XM® NavTraffic information is displayed on the map.

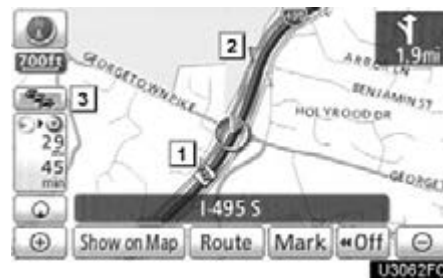

► On Map screen



► On Freeway information screen

ROUTE GUIDANCE

1 XM® NavTraffic icon

When any traffic information has been received, the XM® NavTraffic icon will appear on the map screen. Touching the XM® NavTraffic icon on the screen will start voice guidance for the traffic information. (See page 39.)

INFORMATION

When the XM® NavTraffic icon is touched, voice guidance for the traffic information will start even if "Off" for "Traffic Voice Guidance" is selected.

2 XM® NavTraffic information arrow

When any XM® NavTraffic information has been received, the XM® NavTraffic information arrow will appear on the map screen. The color of the arrow changes depending on the traffic information received.

"Orange": Heavy congestion

"Yellow": Moderate traffic

"Green": Freely flowing traffic

3 XM® NavTraffic indicator

When any XM® NavTraffic information has been received, the XM® NavTraffic indicator will appear on the screen. The color of the indicator changes depending on the traffic information received.

"White": Traffic information has been received.

"Yellow": Traffic restriction information on the guidance route has been received (touch switch*).

"Orange": Congestion information on the guidance route has been received (touch switch*).

*: Touching the XM® NavTraffic indicator will start voice guidance.

SECTION 4

MY PLACES

My places


- **Navigation settings** 102
 - Setting up the “Home” 103
 - Setting up the “Preset Destinations” 105
 - Setting up the “Address Book” 108
 - Setting up the “Areas to Avoid” 114
 - Deleting previous destinations 119

Navigation settings —

Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “ — Destination search by Home” on page 54, “ — Destination search by Preset destinations” on page 54 and “ — Destination search by “Address Book”” on page 66.)

Registered areas are avoided at the time of route search.

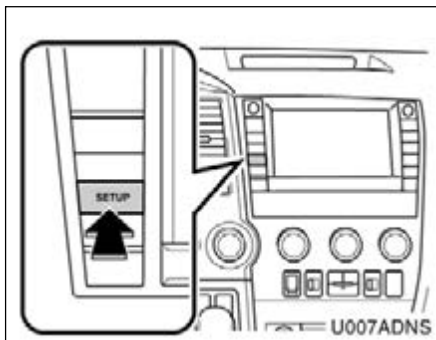

1. Push the “SETUP” button.



2. Touch “Navi.”.



On this screen, the following operations can be performed.

No.	Function
1	Sets home (See page 103.)
2	Sets preset destinations (See page 105.)
3	Sets address book (See page 108.)
4	Sets area to avoid (See page 114.)
5	Deletes previous destinations (See page 119.)
6	Detailed navigation settings (See page 245.)

— Setting up the “Home”

If home has been registered, that information can be recalled by using the “Go Home” touch screen button on the “Destination” screen. (See “— Destination search by Home” on page 54.)

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Home”.



- Registering home (See page 103.)
- Editing home (See page 104.)
- Deleting home (See page 105.)

(a) Registering home

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Home” on the “Navigation Settings” screen.




4. Touch “Set Home”.



5. Enter the location in the same way as for a destination search. (See “Destination search” on page 52.)

MY PLACES

When registration of home is completed, the "Edit Home" screen will be displayed.

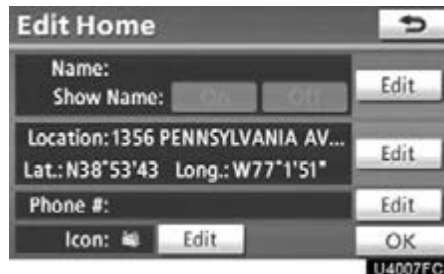

6. Touch "OK".

To edit registered information, see "(b) Editing home" on page 104.

(b) Editing home


1. Push the "SETUP" button.

2. Touch "Navi." on the "Setup" screen.

3. Touch "Home" on the "Navigation Settings" screen.



4. Touch "Edit".

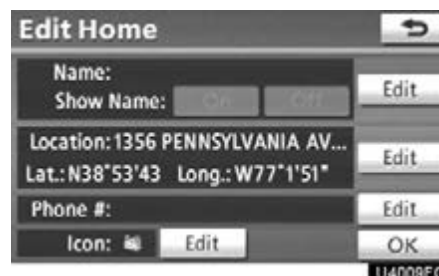

5. Touch "Edit" for the item you want to change.

"Name": To edit home name. The names can be displayed on the map. (See page 112.)

"Location": To edit location information. (See page 113.)

"Phone #": To edit telephone numbers. (See page 113.)

"Icon": To select icons to be displayed on the map. (See page 111.)

6. Touch "OK".

(c) Deleting home

1. Push the **"SETUP"** button.
2. Touch **"Navi."** on the **"Setup"** screen.
3. Touch **"Home"** on the **"Navigation Settings"** screen.



4. Touch **"Delete"**.
5. To delete home, touch **"Yes"**. To cancel the deletion, touch **"No"**.

— Setting up the "Preset Destinations"

If preset destination has been registered, that information can be recalled by using the **"Preset Destination"** touch screen button on the **"Destination"** screen. (See **"— Destination search by Preset Destinations"** on page 54.)

1. Push the **"SETUP"** button.
2. Touch **"Navi."** on the **"Setup"** screen.



3. Touch **"Preset Destinations"**.




- Registering preset destination (See page 106.)
- Editing preset destination (See page 107.)
- Deleting preset destination (See page 108.)

(a) Registering preset destinations


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Set".

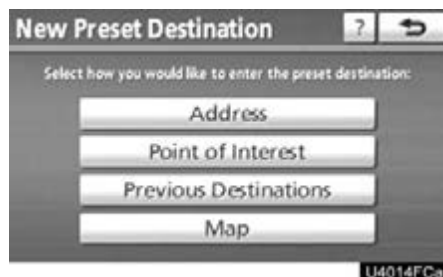


5. Enter the location in the same way as for a destination search. (See "Destination search" on page 52.)

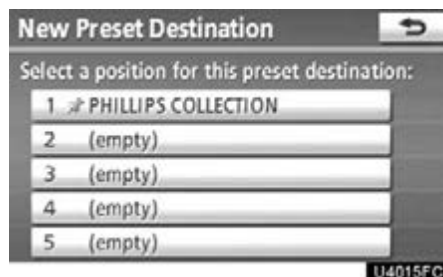

6. Select a position for this preset destination.

When registration of preset destination is completed, the "Edit Preset Destination" screen will be displayed.

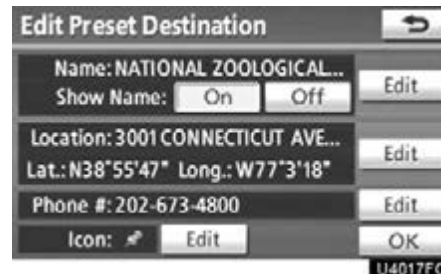

7. Touch "OK".


To edit registered information, see "(b) Editing preset destinations" on page 107.

(b) Editing preset destinations


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Edit".

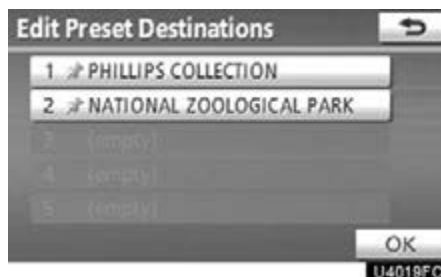

5. Touch the button of the desired preset destination.

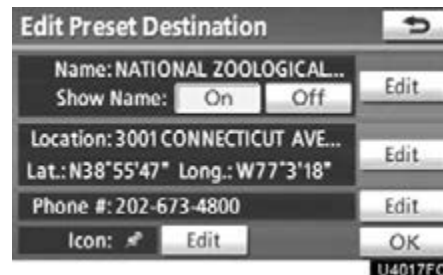

6. Touch "Edit" for the item you want to change.

"Name": To edit preset destination names. The names can be displayed on the map. (See page 112.)

"Location": To edit location information. (See page 113.)

"Phone #": To edit telephone numbers. (See page 113.)

"Icon": To select icons to be displayed on the map. (See page 111.)


7. Touch "OK".

(c) Deleting preset destinations

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Delete".

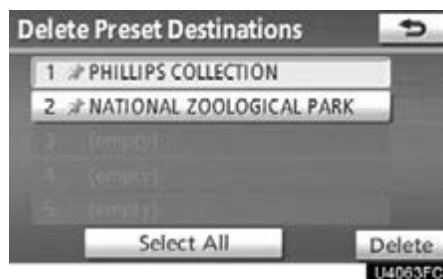

5. Touch the preset destination for deletion.

"Select All": To select all preset destinations on the list.

"Unselect All": To unselect all of the selected preset destinations.


6. Touch "Delete".

7. To delete preset destination, touch "Yes". To cancel the deletion, touch "No".


— Setting up the "Address Book"

Points or areas on the map can be registered.

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.

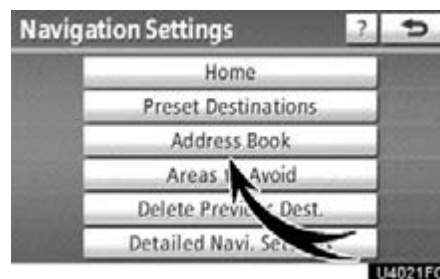


3. Touch "Address Book".

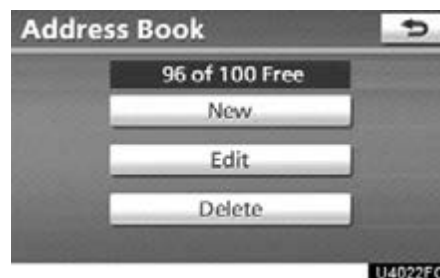


- Registering address book entries (See page 109.)
- Editing address book entries (See page 110.)
- Deleting address book entries (See page 114.)

- (a) Registering address book entries
1. Push the "SETUP" button.
 2. Touch "Navi." on the "Setup" screen.
 3. Touch "Address Book" on the "Navigation Settings" screen.

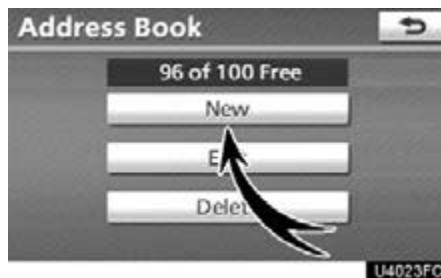


4. Touch "New".

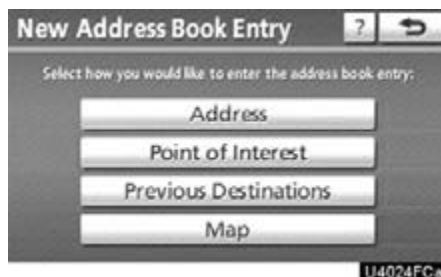

5. Enter the location in the same way as for a destination search. (See "Destination search" on page 52.)

After the address book entry has been registered, the "Edit Address Book Entry" screen will be displayed.

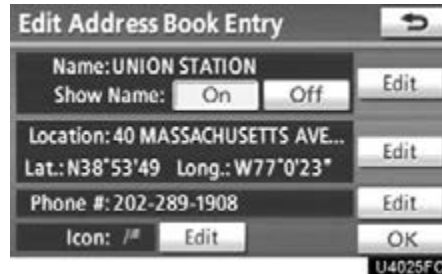

6. Touch "OK".

To edit registered information, see "(b) Editing address book entries" on page 110.


INFORMATION

Up to 100 address book entries can be registered.


(b) Editing address book entries

The icon, name, location and/or telephone number of a registered address book entry can be edited.


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Address Book" on the "Navigation Settings" screen.

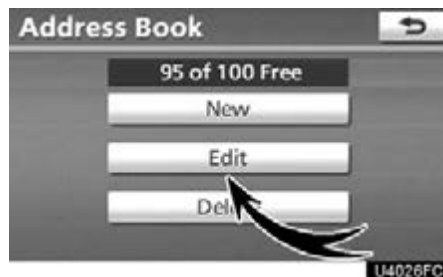

4. Touch "Edit".

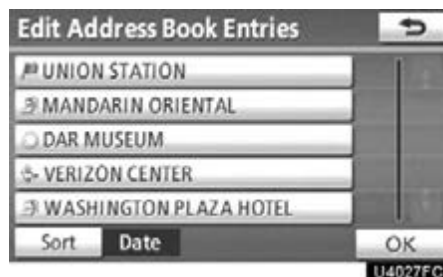

5. Touch the button of the desired address book entry.

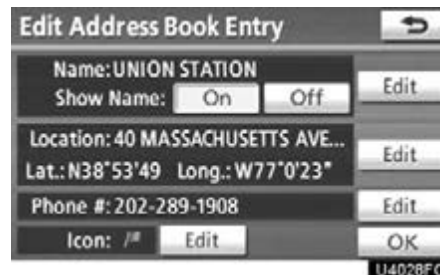

6. Touch "Edit" for the item you want to change.

"Name": To edit address book entry names. The names can be displayed on the map. (See page 112.)


"Location": To edit location information. (See page 113.)

"Phone #": To edit telephone numbers. (See page 113.)


"Icon": To select icons to be displayed on the map. (See page 111.)

7. Touch "OK".

- To change "Icon"

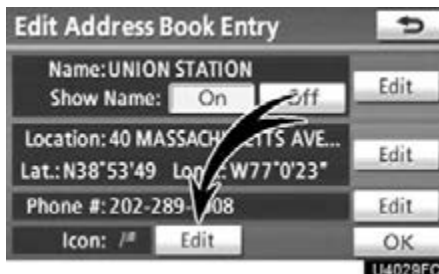

1. Touch "Edit" of "Icon".

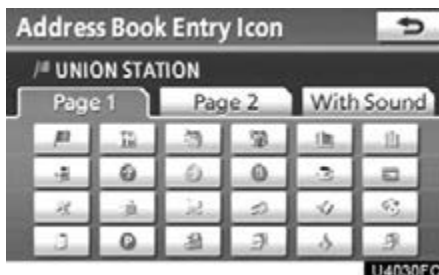


2. Touch the desired icon.

Change pages by touching "Page 1", "Page 2" or "With Sound" tab.

SOUND ICONS


You can set a sound for some address book entries. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

1. Touch "With Sound" on the "Address Book Entry Icon" screen.

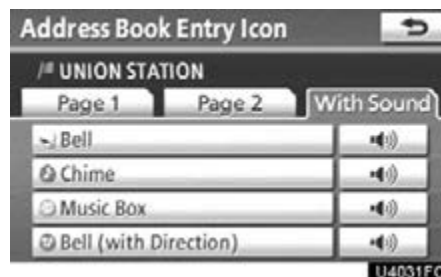

2. Touch the desired sound icon.

The next screen appears when "Bell (with Direction)" is touched.

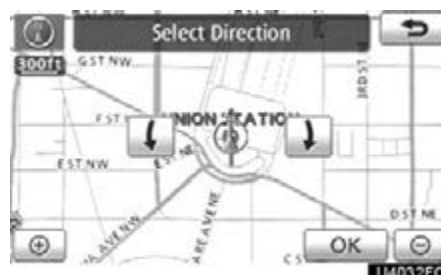


Touch either  or  to adjust the direction. Touch "OK".


The bell sounds only when the vehicle approaches this point in the direction that has been set.

MY PLACES

- To change “Name”

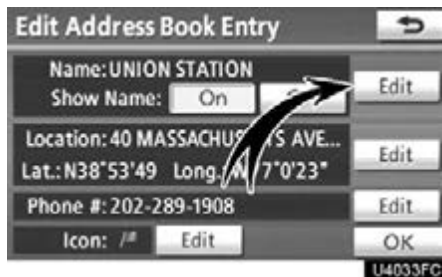

1. Touch “Edit” of “Name”.

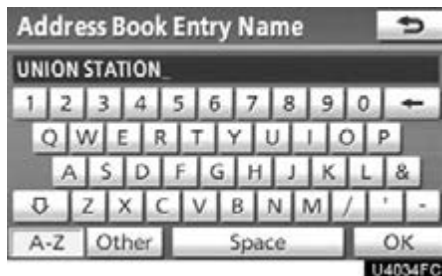

2. Enter the name using the alphanumeric keys.


Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.


DISPLAYING MEMORY POINT NAMES

The name of an address book entry can be set to display on the map.

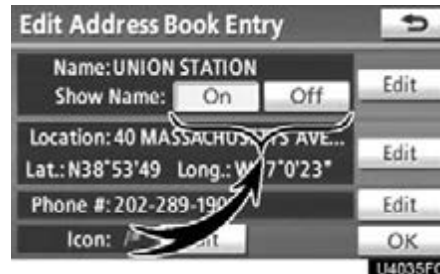

To show the name, touch “On” on the “Edit Address Book Entry” screen. To not show it, touch “Off”.

- To change "Location"

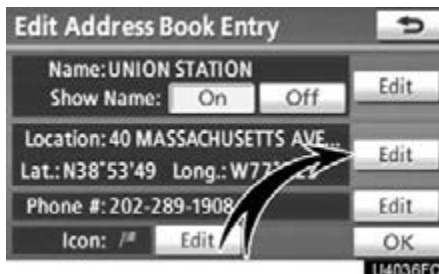

1. Touch "Edit" of "Location".




2. Touch one of the 8 directional touch screen buttons to move the cursor to the desired point on the map.


3. Touch "OK".

The previous screen will be displayed.

- To change "Phone #" (telephone number)

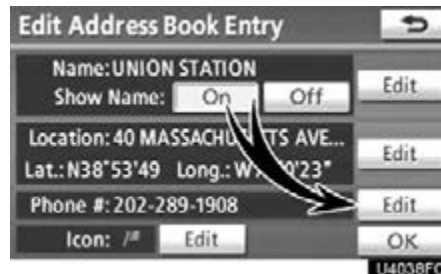

1. Touch "Edit" of "Phone #".

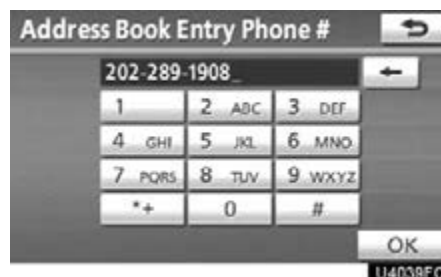


2. Enter the number using number keys.

3. Touch "OK".


The previous screen will be displayed.

(c) Deleting address book entries

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Address Book" on the "Navigation Settings" screen.

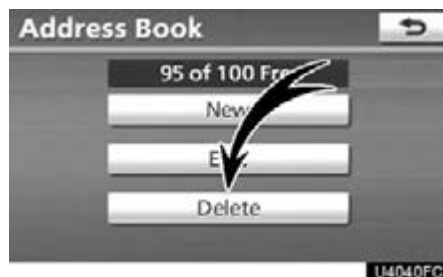

4. Touch "Delete".

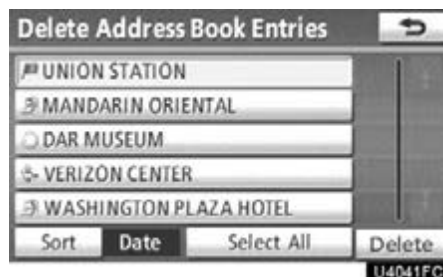


5. Touch the button to be deleted.
- "Select All": To select all addresses in the address book.
- "Unselect All": To unselect all of the selected addresses.
6. Touch "Delete".
 7. To delete the address book entry, touch "Yes". To cancel the deletion, touch "No".

— Setting up the "Areas to Avoid"

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.

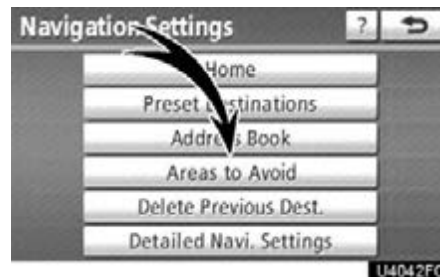

3. Touch "Areas to Avoid".




- Registering areas to avoid (See page 115.)
- Editing areas to avoid (See page 116.)
- Deleting areas to avoid (See page 119.)

(a) Registering areas to avoid

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Areas to Avoid" on the "Navigation Settings" screen.



4. Touch "New".

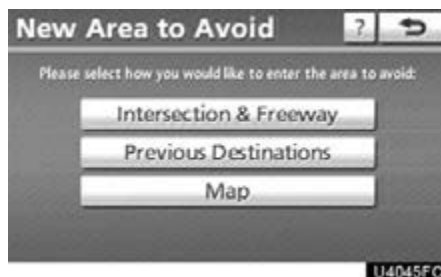

5. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See "Destination search" on page 52.)



6. Scroll the map to the desired point.

"Adjust Location": To adjust the position in smaller increments.

7. Touch "Enter".



8. Touch either  or  to change the size of the area to be avoided.

9. Touch "OK".

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

(b) Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Areas to Avoid" on the "Navigation Settings" screen.



4. Touch "Edit".



5. Touch the desired area button.

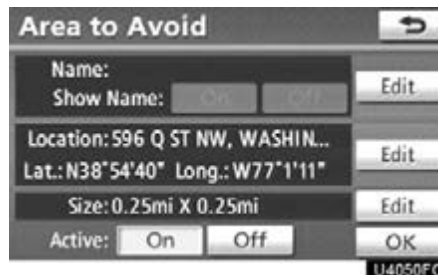

6. Touch "Edit" for the item you want to change.

"Name": To edit the name of the area to avoid. The names can be displayed on the map. (See page 117.)


"Location": To edit area location. (See page 118.)

"Size": To edit area size. (See page 118.)

"Active": To turn on or off the area to avoid feature. To turn on the feature touch "On" on the "Edit Area to Avoid" screen. To turn off the feature touch "Off" on the "Edit Area to Avoid" screen.

7. Touch "OK".

- To change “Name”

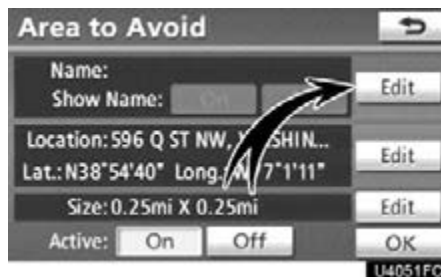

1. Touch “Edit” of “Name”.



2. Enter the name using alphanumeric keys.

Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

DISPLAYING NAMES OF AREAS TO BE AVOIDED


The name of an area to be avoided that may be displayed on the map can be set.



To show the name, touch “On” on the “Area to Avoid” screen. To not show it, touch “Off”.

MY PLACES

- To change “Location”

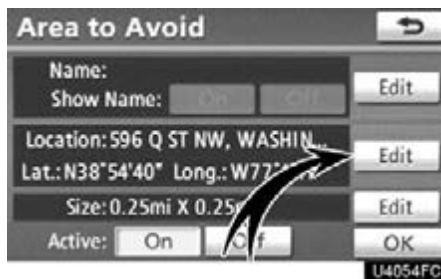

1. Touch “Edit” of “Location”.




2. Touch the 8 directional touch screen button to move the cursor to the desired point on the map.

3. Touch “OK”.

The previous screen will be displayed.

- To change “Size”

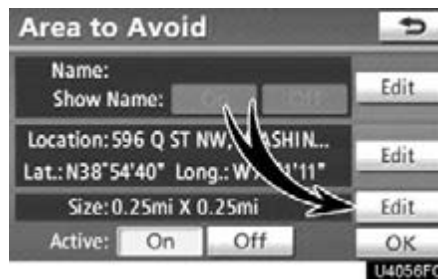

1. Touch “Edit” of “Size”.



2. Touch either  or  to change the size of the area to be avoided.

3. Touch “OK”.

The previous screen will be displayed.

(c) Deleting areas to avoid

1. Push the **"SETUP"** button.
2. Touch **"Navi."** on the **"Setup"** screen.
3. Touch **"Areas to Avoid"** on the **"Navigation Settings"** screen.



4. Touch **"Delete"**.



5. Touch the button to be deleted.

"Select All": To select all registered areas to avoid in the system.

"Unselect All": To unselect all registered areas to avoid in the system.

6. Touch **"Delete"**.

7. To delete the area, touch **"Yes"**. To cancel the deletion, touch **"No"**.

— Deleting previous destinations

The previous destination can be deleted.

1. Push the **"SETUP"** button.
2. Touch **"Navi."** on the **"Setup"** screen.



3. Touch **"Delete Previous Dest."**.



4. Touch the button you want to delete.

"Select All": To select all previous destinations in the system.

"Unselect All": To unselect all previous destinations in the system.

5. Touch **"Delete"**.

MY PLACES



6. To delete the destination, touch "Yes". To cancel the deletion, touch "No".

SECTION 5

TELEPHONE AND INFORMATION

Telephone and information

- **Telephone (Hands-free system for cellular phone)** 122
 - Enter a Bluetooth® phone 126
 - Call on the Bluetooth® phone 131
 - Receive on the Bluetooth® phone 138
 - Talk on the Bluetooth® phone 139
- **Calendar** 142

Telephone (Hands-free system for cellular phone)

Hands-free system allows you to make or receive a call without taking your hands off the steering wheel by connecting your cellular phone.

This system supports Bluetooth®. Bluetooth® is a wireless data system by which you can call without your cellular phone being connected with a cable or placed on a cradle.

If your cellular phone does not support Bluetooth®, this system can not function.

The operating procedure of the phone is explained here.

For registering and setting of the phone, see "Telephone settings" on page 254.



CAUTION

While driving, do not use a cellular phone or connect the Bluetooth® phone.

NOTICE

Do not leave your cellular phone in the car. The temperature indoor may be high and damage the phone.

INFORMATION

- *In the following conditions, the system may not function.*
 - *The cellular phone is turned off.*
 - *The current position is outside the communication area.*
 - *The cellular phone is not connected.*
 - *The cellular phone has a low battery.*
- *Even if your cellular phone supports both hands-free and audio Bluetooth® connections, it may not be able to connect to the hands-free connection at the same time.*
- *When using Bluetooth® audio and hands-free at the same time, the following problems may occur.*
 - *The Bluetooth® connection may be cut.*
 - *Noise may be heard on the Bluetooth® audio playback.*



Bluetooth is a registered trademark of Bluetooth SIG, Inc.


INFORMATION

This system supports the following service.


- **Bluetooth® Specification**
Ver.1.1 or higher
(Recommended: Ver.2.0+EDR or higher)
- **Profiles**
 - **HFP (Hands Free Profile)**
Ver.1.0 or higher
(Recommended: Ver.1.5 or higher)
 - **OPP (Object Push Profile)**
Ver.1.1
 - **PBAP (Phone Book Access Profile)** Ver.1.0

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP or PBAP service individually.


Please go to "<http://www.toyota.lets-talk.com/>" to find approved Bluetooth® phones for this system.

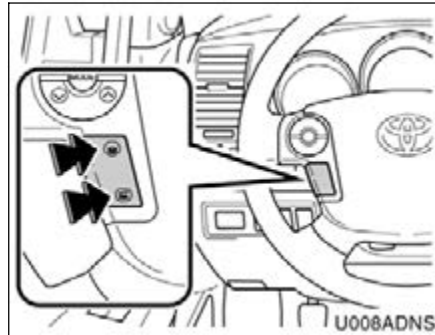

By pushing the telephone switch above, you can receive a call or hang up without taking your hands off the steering wheel.

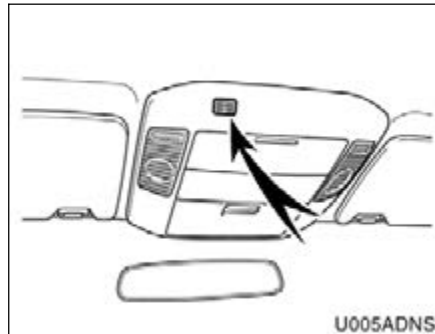

► Microphone (Type A)

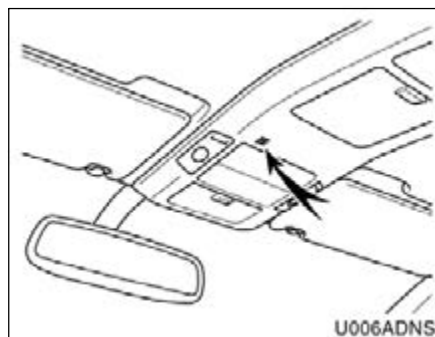

► Microphone (Type B)

You can use the microphone above when talking on the phone.

The other party's voice outputs from the front speaker. When the received calls or received voice outputs, the audio from the audio system or voice guidance from the navigation system will be muted.

INFORMATION

- *Talk alternately with the other party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)*
- *Keep the volume of receiving voice down. Otherwise, an echo will be heard and receiving voice can be heard outside of the vehicle. When you talk on the phone, speak clearly towards the microphone.*
- *In the following situations, your voice may not reach the other party.*
 - *Driving on unpaved road. (Making a traffic noise.)*
 - *Driving at the high speed.*
 - *The window is open.*
 - *Turning the air-conditioning vents towards the microphone.*
 - *The sound of the air-conditioning fan is loud.*
 - *There is an effect from the network of the cellular phone.*



- 1** Indicates the condition of Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of voice quality.

 : No connection to Bluetooth®.

- 2** Indicates the amount of battery charge left.

  
Empty ←————→ Full

This is not displayed when the Bluetooth® is not connected.

The amount left does not always correspond with the one of your cellular phone. The amount of battery charge left may not be displayed depending on the phone you have. This system doesn't have a charging function.

- 3** Indicates the receiving area.

“Rm” is displayed when receiving in Roaming area.

“Hm” is displayed when receiving in Home area.

The receiving area may not be displayed depending on the phone you have.

4 Indicates the level of reception.



The level of reception does not always correspond with the one of your cellular phone.

The level of reception may not be displayed depending on the phone you have.

When you are out of the service area or in a place inaccessible by radio waves, "No Service" is displayed.

An antenna for the Bluetooth® connection is built in the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or is covered with metal materials.

Leave the Bluetooth® phone on the place where "Blue" indication is displayed.

About the phonebook in this system

The following data is stored for every registered phone. When another phone is connecting, you cannot read the registered data.

- Phonebook data
- Voice tag
- All of call history
- Speed dial

When you delete the phone, the above-mentioned data is also deleted.

When you release your car:

A lot of personal data is registered when you use the Hands-free system. When you release your car, initialize your data. (See "● Delete personal data" on page 240.)

If you initialize it, the former state will never come back again. Pay much attention when initializing the data.

You can initialize the following data in the system.

- Phonebook data
- Call history data
- Speed dial data
- Voice tag data
- Bluetooth® phone data
- Volume setting
- Details setting

FCC ID : HYQDNNS025
Type : DNNS025
IC : 1551A-DNNS025 Canada 310

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).


Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

— Enter a Bluetooth® phone


To use the hands-free system, you need to enter your phone into the system. Once you have registered it, you can make a hands-free call.

If you haven't yet registered any Bluetooth® phones, you must first register your phone according to the following procedure.

Please see “● Registering a Bluetooth® phone” on page 257 of additional registration when registering.

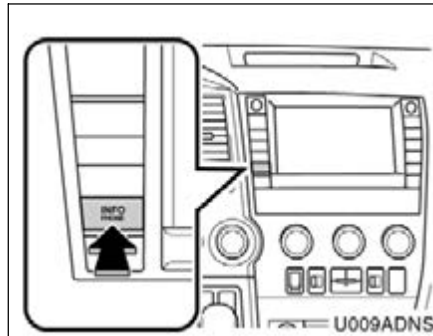

1. Push the “INFO/PHONE” button.

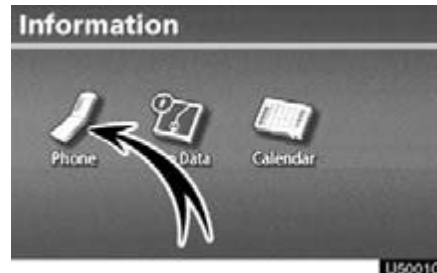

2. Touch “Phone”.



3. Touch "Yes" to connect your phone.



4. When this screen is displayed, input the passcode displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, touch "Cancel".



5. When the connection is completed, this screen is displayed.

You do not need to enter the phone in case of using the same one.



When this screen is displayed, follow the guidance on the screen to try again.

- Connecting a Bluetooth® phone
AUTOMATICALLY



When you register your phone, auto connection will be turned on. Always set it to this mode and leave the Bluetooth® phone in a condition where connection can be established.



When the engine switch is in the “ACC” or “ON” position, a nearby cellular phone you have registered is searched for.

Next, the system automatically connects with the latest of the phones connected to in the past.

Then, the connection result is displayed.

This screen appears when the Bluetooth® phone is first connected after the engine switch is in the “ACC” or “ON” position.

INFORMATION

It may take time, the phone connection is carried out during Bluetooth® audio play.

MANUALLY

When the auto connection has failed or “Handsfree power” is turned off, you have to connect Bluetooth® manually.


1. Push the “INFO/PHONE” button.
2. Touch “Phone”.



3. Touch “Connect Phone”.



4. Touch “Handsfree Power”, or select the phone to connect.

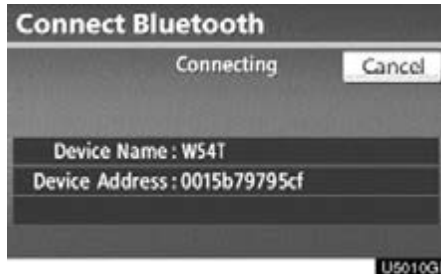

When you connect the phone while Bluetooth® audio is playing



5. The "Connect Bluetooth*" screen is displayed.



This screen is displayed, and the Bluetooth® audio will stop temporarily.

6. When the connection is completed, this screen is displayed.

Now you can use the Bluetooth® phone.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- **Reconnecting the Bluetooth® phone**

If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the engine switch is in the “ACC” or “ON” position the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone off, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

— Call on the Bluetooth® phone

After you enter the Bluetooth® phone, you can call by using hands-free system. You can call using the 6 methods described below.

- **By dial**

You can call by inputting the phone number.

This cannot be operated while driving.

- 1. Push the “INFO/PHONE” button.**

You can also push  of the steering wheel to display the “Phone” screen.



- 2. Touch “Phone”.**



3. Touch the desired key to input the phone number.

Each time you touch , an inputted digit is deleted.

When you touch **“Redial”**, the number you called last is inputted.


Touch  or push  of the steering wheel.

● **By phonebook**


You can call by phonebook data which is transferred from your cellular phone.

The system has one phonebook for each telephone. You can register up to 1000 numbers in total of phonebooks.

This cannot be operated while driving.

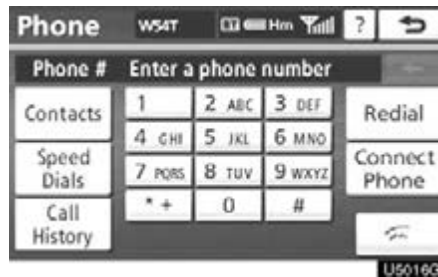

1. Touch “Contacts”.

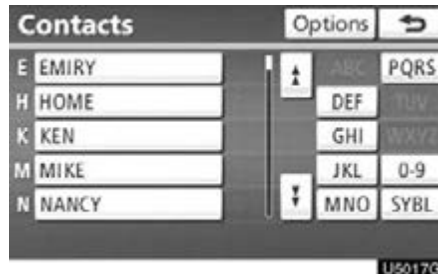

2. Select the desired data from the list.



3. Select the desired number from the list.

Touch or push of the steering wheel.

When the phonebook is empty



1. Touch "Contacts".



2. Touch "Yes" if you want to transfer new contacts from a cellular phone.

Touch "No" if you want to edit the phonebook.


- By speed dial

You can call using registered phone numbers which can be selected from a phonebook. (See “• Registering the speed dial” on page 274 for registering the speed dial.)

This can be done while driving.



1. Touch “Speed Dials”.

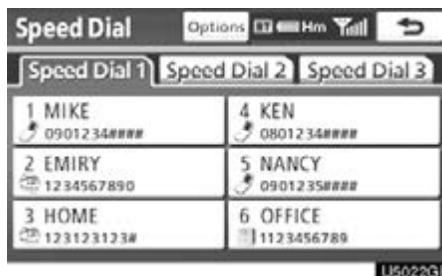

2. Touch the desired number to call.

You can change the page by touching “Speed Dial 2” or “Speed Dial 3” tab.

- By call history

You can call by call history which has 4 functions below.

All: all the numbers above which were memorized

Missed: calls which you missed

Incoming: calls which you received

Outgoing: numbers which you called

You can call using the latest 5 call history items shown by “All” while driving.



1. Touch “Call History”.



2. Select the desired data from the list.

When the list is switched, touch “All”, “Missed”, “Incoming” or “Outgoing” tab.



3. Touch  or push  of the steering wheel.

You can call using the latest call history item.

1. Push  of the steering wheel to display the "Phone" screen.
2. Push  of the steering wheel to display the "Call History" screen.
3. Push  of the steering wheel to select the latest history item.
4. Touch  or push  of the steering wheel to call the latest history item.

- When you call by phonebook, the name (if registered) is displayed.
- When you call the same number continuously, only the newest number is registered.
- When a phone number registered in the phonebook is received, the name and the number are displayed.
- Unnoticed phone number such as a public phone is not memorized in the system.
- A international phone call may not be made depending on the cellular phone which you have.

- By voice recognition



You can call by giving a command. (For the operation and command of voice recognition, see “Speech command system” on page 44.)

This can be operated while driving.

The “Dial by Name” operating procedure is explained here.

Other operating procedures are also similar.

DIALING BY NAME

You can call by giving a voice tag registered in the phonebook. For setting the voice recognition, see “—Setting the voice tag” on page 281.

When you select “English” of “Language”, you can call by giving a name registered in the phonebook.

For setting the voice recognition, see “• Registering the phonebook data” on page 268.

Example: Call MIKE.



You: Push the talk switch.
 System: "After the beep, please say a command." "Such as "Go Home", "Destination", "Phone", "Audio" or "Command List"."
 (beep)"
 You: "Phone."
 System: "Phone."
 "Say a command." "Such as "Dial by Number", "Dial by Name", "Redial", "Call Back" or "Connect Phone"."
 (beep)"
 You: "Dial by Name."
 System: "Dial by Name." "Say a name from your contact list."
 (beep)"
 You: "MIKE."
 System: "MIKE." "Say the type of number." "Such as "Mobile", "Home", "Work" or "Other"."
 (beep)"
 You: "Home."
 System: "MIKE." "Home."
 "Push the off-hook switch to dial or say "Dial"."
 (beep)"
 You: "Dial."
 System: "Dial."
 Now, you can call MIKE.

Calling without the voice recognition

After the entry number is displayed, you can also call by pushing  of the steering wheel or touching "Dial".

Cancelling the voice recognition

The voice recognition will be cancelled when you do the following.

- Keep on pushing the talk switch.
- Push  of the steering wheel.
- Touch "Cancel". (Except for recognizing the command.)
- Say "Cancel".

- By POI* call



You can call by touching  when it is displayed on the screen from navigation system. (See "POI INFORMATION" on page 36 for details.)

*: Point of Interest

— Receive on the Bluetooth® phone



When a call is received, this screen is displayed with a sound. Touch  or push  of the steering wheel to talk on the phone.

To refuse to receive the call:

Touch  or push  of the steering wheel.

To adjust the volume of received call:

Touch "—" or "+" or use the volume switch of the steering wheel.

On the international phone call, the other party's name may not be displayed correctly depending on the cellular phone which you have.

— Talk on the Bluetooth® phone



While you are talking on the phone, this screen is displayed. You can do the operation below on the screen.

To adjust the volume of the other party's voice:

Touch “–” or “+” or use the volume switch of the steering wheel.

To hang up the phone:

Touch or push of the steering wheel.

To mute your voice:

Touch “**Mute**”.

To input a Key:

Touch “**0–9**”.

To transfer the call:

Touch “**Call Transfer**”.

You cannot change from Hands-free call to cellular phone call while driving.

When you change from cellular phone call to Hands-free call, the Hands-free screen will be displayed and you can operate it on the screen.

Transferring method and behavior are different depending on the cellular phone which you have.

For the operation of the phone, see the manual that comes with your cellular phone.

When you touch “0–9”



Touch the desired number to input the key.

To hang up the phone:

Touch or push of the steering wheel.

This cannot be operated while driving.



If the continuous tone signal is registered in a phonebook, this screen appears. (If not registered, “Send” and “Exit” are not displayed.)

Confirm the number displayed on the screen and touch “Send”. The number before marked sign will be sent.

When you touch “Exit”, this function will be finished and normal tone screen appears.

To hang up the phone:

Touch  or push  of the steering wheel.

The continuous tone signal is the marked sign (p or w) and the number following phone number. (ex. 056133w0123p#1※)

You can do this operation when you want to operate an answering machine or use a telephone service in bank for example. You can register the phone number and the code number in the phonebook.

- By voice recognition



You can operate “Mute” and “Send Tones” by giving a command during a call.

The operating procedure is similar to other voice recognition. (For the operation of voice recognition, see “Speech command system” on page 44.)

- Interrupt call



When the call is interrupted by the third party while talking, this screen is displayed.

Touch or push of the steering wheel to start talking with the other party.

Touch or push of the steering wheel to refuse the call.



Everytime you touch or push of the steering wheel while interrupt call, the other party will be switched.


If your cellular phone is not accepted for HFP Ver. 1.5, this function can not be used.

INFORMATION

Interrupt call operation may differ depending on your phone company and cellular phone.

Calendar

To view calendar.

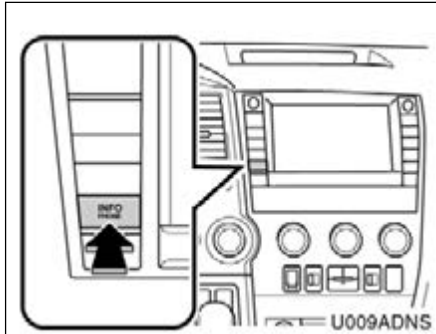

1. Push the “INFO/PHONE” button.



2. Touch “Calendar”.



On this screen, the current date is highlighted in yellow.

M or **M** : To change month.

Y or **Y** : To change year.

“Today”: To display the current month calendar (if another month will be displayed).

SECTION 6


AUDIO/VIDEO SYSTEM

Audio/Video system

- Quick reference 144
- **Using your audio/video system** 145
 - Some basics 145
 - Radio operation 153
 - CD changer operation 164
 - Bluetooth® audio operation 176
 - DVD player operation 184
 - USB memory player/iPod® player operation 210
- Audio/video remote controls 217
- Audio/video system operating hints 219

Quick reference

Operations such as selecting a preset station and adjusting the sound balance are carried out on the touch screen. To display the audio screen, push the “AUDIO” button.

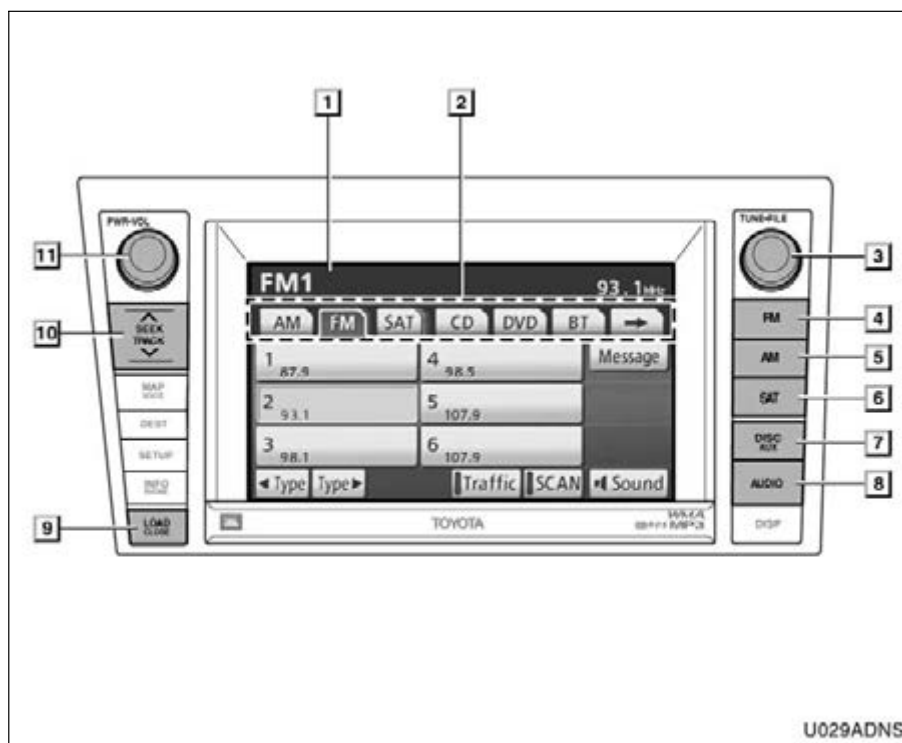

- 1 Function menu display screen**
To control the radio, CD changer, DVD player*, Bluetooth® audio player, AUX or USB memory player/iPod®, touch the touch-screen buttons. For details, see page 148.
- 2 Function menu tab**
To control the radio, CD changer, DVD player*, Bluetooth® audio player, AUX or USB memory player/iPod®, touch the touch-screen tabs. For details, see page 147.
- 3 “TUNE-FILE” knob**
Turn this knob to move the station band and files up or down. For details, see pages 154, 159 and 172.
- 4 “FM” button**
Push this button to choose an FM station. Each time this button is pushed, the mode switches between FM1 and FM2. For details, see pages 147 and 153.
- 5 “AM” button**
Push this button to choose an AM station. For details, see pages 147 and 153.

*: Vehicles with rear seat entertainment system

Using your audio/video system — — Some basics

- [6] “SAT” button**
Push this button to choose an SAT station. For details, see pages 147 and 159.
- [7] “DISC/AUX” button**
Push this button to turn the CD changer, DVD player*, Bluetooth® audio player, AUX or USB memory player/iPod® on. For details, see pages 147, 153, 167, 181 and 186.
- [8] “AUDIO” button**
Push this button to display the audio control screen. For details, see page 147.
- [9] “LOAD/CLOSE” button**
Push this button to display the “Load·Eject” screen or close the display. For details, see page 164.
- [10] “SEEK/TRACK” button**
Push either side of this button to seek up or down for a station, or to access a desired track, file or chapter. For details, see pages 155, 168, 172, 182, 187 and 190.
- [11] “PWR·VOL” knob**
Push this knob to turn the audio system on and off, and turn it to adjust the volume. For details, see page 147.

This section describes some of the basic features of your audio system. Some information may not pertain to your system.

Your audio system works when the engine switch is turned to the “ACC” or “ON” position.



CAUTION

For vehicles sold in U.S.A. and Canada:

• Part 15 of the FCC Rules

FCC Warning:

Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Radio frequency exposure. This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20 cm) between the antenna and the body of any person at all time during use.

*: Vehicles with rear seat entertainment system


● **Laser products**

- Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.
- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


NOTICE

To prevent the battery from being discharged, do not leave the audio system on longer than necessary when the engine is not running.

(a) **Speech command system**

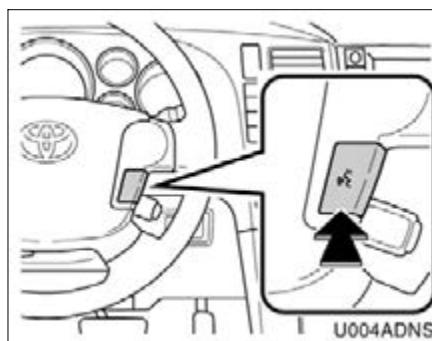

► **Type A**

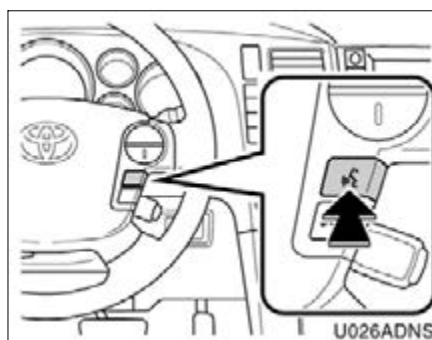


► **Type B**

By pushing the switch above, you can operate the speech command system.

For the operation of the speech command system and the list of commands, see pages 44 and 47.

(b) Turning the system on and off

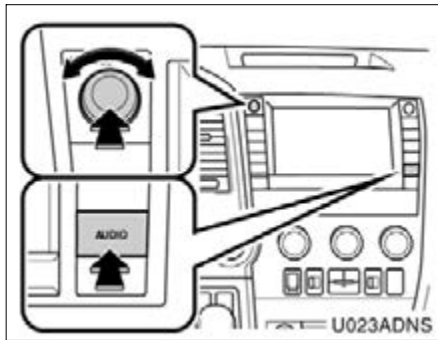


“AUDIO”: Push this button to display touch-screen buttons for audio system (audio control mode).


“PWR·VOL”: Push this knob to turn the audio system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

You can select the function that enables automatic return to the previous screen from the audio screen. See page 236 for details.

(c) Switching between functions

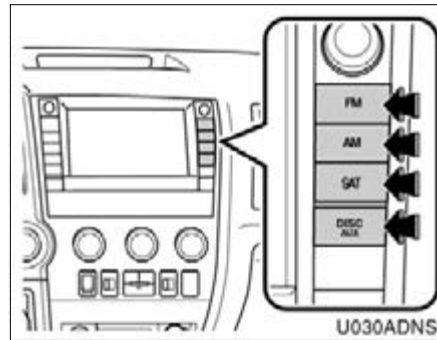

Push the **“AM”**, **“FM”**, **“SAT”** or **“DISC/AUX”** button to turn on the desired mode.

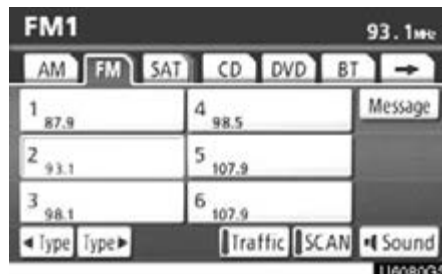

Push the **“AUDIO”** button and touch the **“AM”**, **“FM”**, **“SAT”**, **“CD”**, **“DVD”***, **“BT”**, **“AUX”** or **“USB”** tab to turn on the desired mode.




*: Vehicles with rear seat entertainment system

AUDIO/VIDEO SYSTEM



Push these buttons or tabs if you want to switch from one mode to another.

If the disc is not set, the CD changer/DVD player* does not turn on.

You can turn off the CD changer/DVD player* by ejecting all the discs. If the audio system was previously off, then the entire audio system will be turned off when you eject all the discs. If the other function was previously playing, it will come on again.

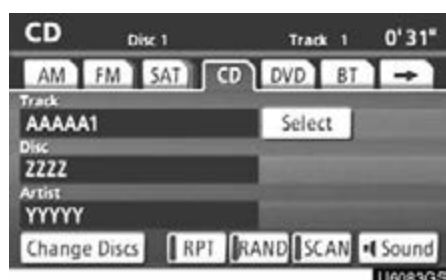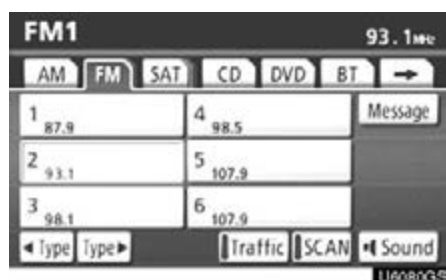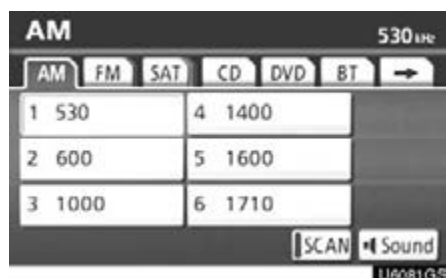

*: Vehicles with rear seat entertainment system

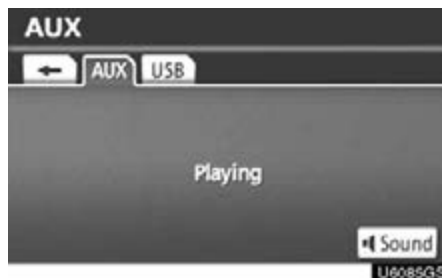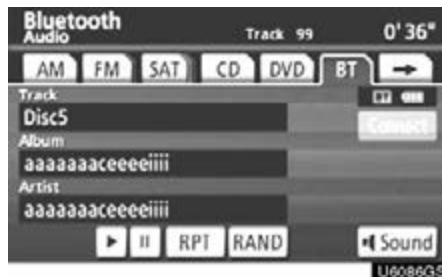

The touch-screen buttons for radio, CD changer, DVD player*, Bluetooth® audio player, AUX and USB memory player/iPod® operation are displayed on the function touch-screen button display screen when the audio control mode is selected. Touch them lightly and directly on the screen.

Touch the tab to select the desired mode when the audio control mode is selected.

The selected switch is highlighted.


INFORMATION

- If the system does not respond to a touch of a touch-screen button, move your finger away from the screen and then touch it again.
- You cannot operate dimmed touch-screen buttons.
- Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the touch screen.

*: Vehicles with rear seat entertainment system

(d) DSP control

1. Push the "AUDIO" button.

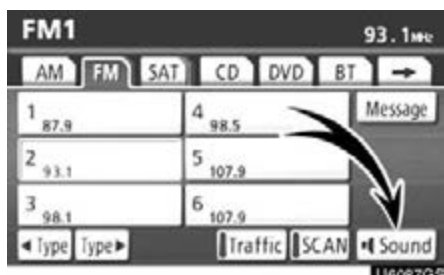

2. Touch "Sound" to display the sound adjustment screen.



3. Touch "DSP" tab to display this screen.

4. Touch the desired button.

Surround function:

Select "On" of "Surround" and touch "OK".

The surround function will turn on.

Automatic sound levelizer (ASL):

When the audio sound becomes difficult to hear due to road noise, wind noise or other noises while driving, select "On". The system adjusts to the optimum volume and tone quality according to the speed of car.

(e) Tone and balance



The audio systems utilize SRS FOCUS® and SRS TruBass® audio enhancement technologies, under license from SRS Labs, Inc., in all mode except AM radio mode.

FOCUS, TruBass, SRS and  symbols are trademarks of SRS Labs, Inc.

FOCUS and TruBass technologies are incorporated under license from SRS Labs, Inc.


Tone

How good an audio program sounds to you is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

Balance

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.

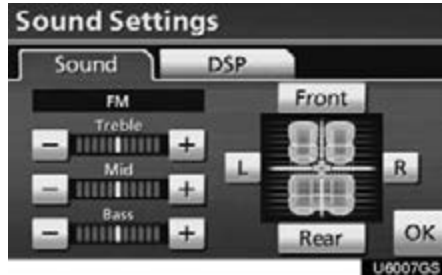

1. Touch “Sound” tab to display this screen.

2. Touch the desired button.

“Treble” “+” or “-”: Adjust high-pitched tones.

“Mid” “+” or “-”: Adjust mid-pitched tones.

“Bass” “+” or “-”: Adjusts low-pitched tones.

“Front” or “Rear”: Adjusts sound balance between the front and rear speakers.

“L” or “R”: Adjusts sound balance between the left and right speakers.

3. Touch “OK”.


The tone of each mode (for such as AM, FM and CD changer) can be adjusted.

(f) Selecting screen size (with rear seat entertainment system)

1. Push the “AUDIO” button and touch “DVD” tab.



2. Touch “Settings”.

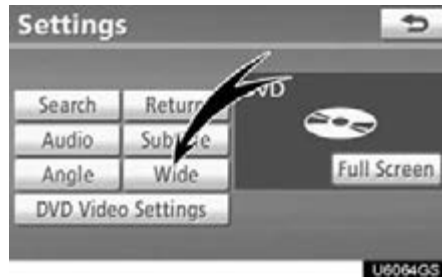

3. Touch “Wide”.



4. Touch the desired button.

- “Normal”:** Displays a 3 : 4 screen, with either side in black.
- “Wide 1”:** Widens the 3 : 4 screen horizontally to fill the screen.
- “Wide 2”:** Widens the 3 : 4 screen vertically and horizontally, in the same ratio, to fill the screen.

When you touch , the previous screen returns.

5. Touch “Save”.

(g) Your CD changer

When you insert a disc, touch “Load” and gently push the disc in with the label side up. This CD changer can store up to four discs. The changer will play from track 1 through to the end of the disc. Then it will play from track 1 of the next disc.

The changer is intended for use with 4.7 in. (12 cm) discs only.



NOTICE

- *Do not stack up two discs for insertion, or it will cause damage to the changer. Insert only one disc into the slot at a time.*
- *Never try to disassemble or oil any part of the changer. Do not insert anything other than a disc into the slot.*

**(h) Your DVD player
(with rear seat entertainment system)**

The sound of the rear seat entertainment system can be enjoyed by pushing the **"DISC/AUX"** button or touching the **"DVD"** tab on AUDIO screen.

(i) AUX adapter


The sound of portable audio players connected to the AUX adapter can be enjoyed. Push the **"DISC/AUX"** button or push the **"AUDIO"** button to display audio screen and touch the **"AUX"** tab to switch to AUX mode. When the portable audio player is not connected to the AUX adapter, the tab will tone down. For details, refer to the "Owner's Manual".

(j) USB port

It is necessary to connect the USB memory player/iPod® with the USB port. When the USB memory player/iPod® is not connected to the USB port, the tab will tone down.

— Radio operation


(a) Listening to the radio

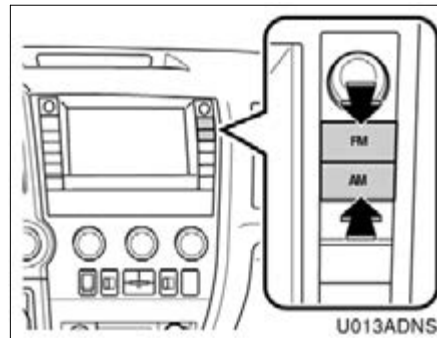

Push the **"AM"** or **"FM"** buttons or push the **"AUDIO"** button to display audio screen and touch the **"AM"** or **"FM"** tabs to choose either an AM or FM station.


"AM", "FM1" or "FM2" appears on the screen.

If your vehicle is equipped with a satellite radio broadcast system, when you push the **"SAT"** button or touch the **"SAT"** tab on AUDIO screen, "SAT1", "SAT2", "SAT3" station appears on the display. For details about satellite radio broadcast, see "—Radio operation (XM® Satellite Radio broadcast)" on page 158.

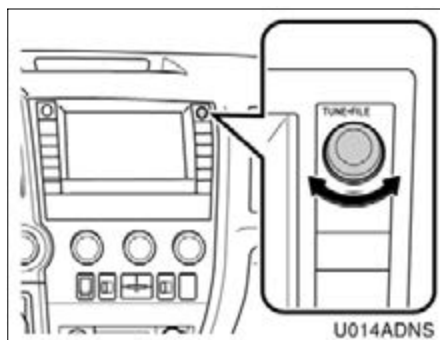

Turn the knob clockwise to step up the station band or counterclockwise to step down.

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the screen. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the screen.

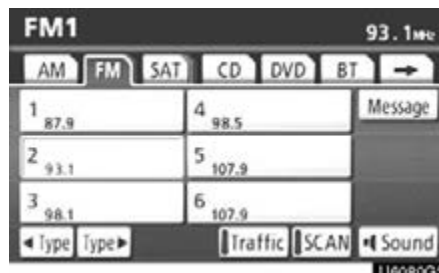

(b) Presetting a station

1. Tune in the desired station.

2. Touch one of the touch-screen buttons (1 — 6) you want and hold it until a beep is heard. This sets the station to the touch-screen button and the frequency appears on the touch-screen button.

Each radio mode (AM, FM1 or FM2) can store up to 6 stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

(c) Selecting a station

Tune in the desired station using one of the following methods.

Preset tuning: Touch the touch-screen button (1 — 6) for the station you want. The touch-screen button is highlighted and the station frequency appears on the screen.

Seek tuning: Push the “**SEEK/TRACK**” button on either side. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched automatically one after another.

To scan all the frequencies: Touch “**SCAN**” on the screen briefly. “**SCAN**” appears on the screen. The radio will find the next station and stay there for a few seconds, and then scan again. To select a station, touch “**SCAN**” again.

To scan the preset stations: Touch “**SCAN**” on the screen for longer than a second. “**P. SCAN**” appears on the screen. The radio will tune in the next preset station, stay there for a few seconds, and then move to the next preset station. To select a station, touch “**SCAN**” again.

(d) Radio Data System


Your audio system is equipped with Radio Data Systems (RDS). RDS mode provides you to receive text messages from radio stations that utilize RDS transmitters.

When RDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RDS features are available for use only on FM stations which broadcast RDS information.


AUDIO/VIDEO SYSTEM

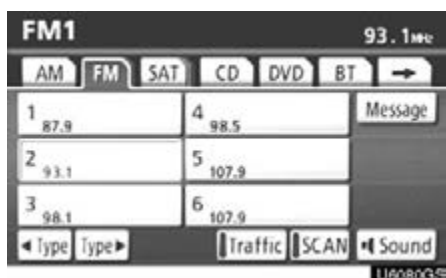

“Type ◀ ▶”

Each time you touch “◀ Type ” or “Type ▶”, the program type changes as in the following:

- ROCK
- MISC (Miscellaneous)
- INFORM (Information)
- EASY LIS (Easy listening)
- CLS/JAZZ (Classical music and Jazz)
- R & B (Rhythm and Blues)
- RELIGION
- ALART (Emergency message)

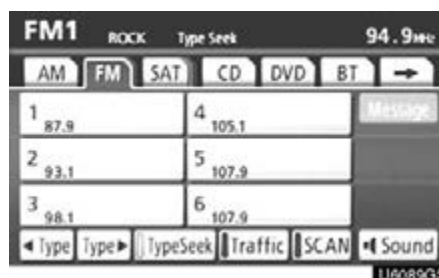

“TypeSeek”

When a program is set, “Type Seek” appears. Touch the switch and the system starts to seek the station in the relevant program type.

If any type program station is not found, “Nothing” appears on the display.




“Message”

If the system receives a radio text from RDS station, “MSG” appears on the display. Touch **“Message”**, and a text message is displayed on the screen. This function is available only when the vehicle is not moving.

When you touch **“Message Off”**, the display returns.

(e) Traffic announcement

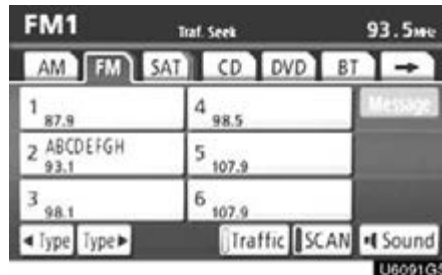

“Traffic”

A station that regularly broadcasts traffic information is automatically located.

When you touch **“Traffic”**, “Traf. Seek” appears on the display and the radio will start seeking any traffic program station.

If no traffic program station is found, “Nothing” appears on the display.

If a traffic program station is found, the name for traffic program station is displayed for a while until a traffic announcement is received.

AUDIO/VIDEO SYSTEM

—Radio operation (XM® Satellite Radio broadcast)

To listen to a satellite radio broadcast in your vehicle, a subscription to the XM® Satellite Radio service is necessary.

(a) How to subscribe to an XM® Satellite Radio

An XM® Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

How to subscribe:

You must enter into a separate service agreement with the XM® Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and optional digital satellite tuner.

For complete information on subscription rates and terms, or to subscribe to the XM® Satellite Radio.

U.S.A.—

Visit on the web at www.xmradio.com or call 1-800-967-2346.

Canada—

Visit on the web at www.xmradio.ca or call 1-877-438-9677.

The XM® Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM® Satellite Radio customer service agreement.

Customers should have their radio ID ready; the radio ID can be found by tuning to “channel 000” on the radio. For details, see “(b) Displaying the radio ID” below.

All fees and programming are the responsibility of the XM® Satellite Radio and are subject to change.

Satellite tuner technology notice:

Toyota's satellite radio tuners are awarded Type Approval Certificates from XM® Satellite Radio Inc. as proof of compatibility with the services offered by the XM® Satellite Radio.

(b) Displaying the radio ID


Each XM® tuner is identified with a unique radio ID. You will need the radio ID when activating XM® service or when reporting a problem.

If you select the “CH 000” using the “TUNE·FILE” knob, the ID code of 8 alphanumeric characters appears. If you select another channel, display of the ID code is canceled. The channel(000) alternates the display between the radio ID and the specific radio ID code.

INFORMATION


Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM® Satellite Radio.

(c) Listening to satellite radio

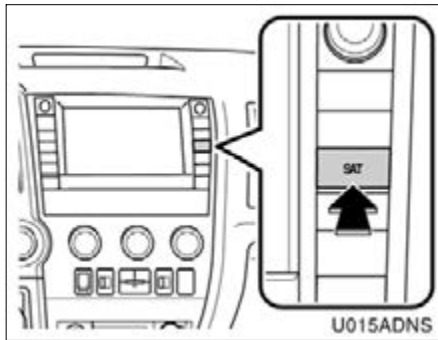

Push the “SAT” button or push the “AUDIO” button to display audio screen and touch the “SAT” tab to choose a SAT channel.

“SAT1”, “SAT2” or “SAT3” appears on the screen.

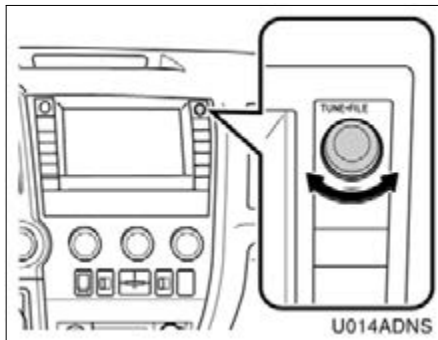

Turn this knob to select the next or previous channel.

If you turn continuously, you can rapidly scroll forward or down through the channels.

(d) Channel category



Touch either “◀ Type” or “Type ▶” to go to the next or previous category.

(e) Presetting a channel

1. Tune in the desired channel.



2. Touch one of the channel selector buttons (1 — 6) and hold it until a beep is heard.

This sets the channels to the touch-screen button and the name and number of the channel appears on the touch-screen button.

Each touch-screen button can store three SAT channels. To change the preset channel to a different one, follow the same procedure.

The preset channel memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

(f) Selecting a channel

Tune in the desired channel using one of the following methods.

Preset tuning: Touch the channel selector button (1 — 6) for the channel you want. The button (1 — 6) is highlighted and channel number appears on the display.


To select channel within the current category: Push the “^” or “v” side of the “SEEK/TRACK” button. The radio will step up or down the channel within the current channel category. Touch “Type-Seek”. The radio will step up the channel within the current channel category.



To scan the currently selected channel category: Touch “SCAN” briefly. “SCAN” appears on the display. The radio will find the next channel in the same channel category, stay there for a few seconds, and then scan again. To select a channel, touch “SCAN” a second time.

To scan the preset channels: Touch “SCAN” and hold it until you hear a beep. “P.SCAN” appears on the display. The radio will find the next preset channel, stay there for a few seconds, and then move to the next preset channel. To select a channel, touch “SCAN” a second time.

(g) Displaying the title and name

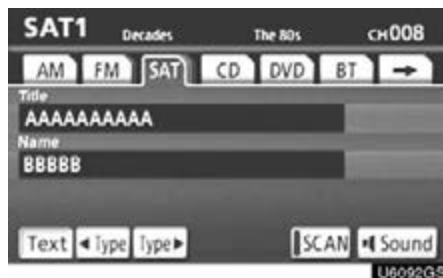

When you touch “**Text**”, the song/program title and the artist name/feature are displayed.

Up to 16 alphanumeric characters can be displayed. (Some information will not be fully displayed.)

When you touch “**Text**” again, the display returns.

AUDIO/VIDEO SYSTEM

(h) If the satellite radio tuner malfunctions

When problems occur with the XM® tuner, a message will appear on the display. Referring to the table below to identify the problem, take the suggested corrective action.

ANTENNA	The XM® antenna is not connected. Check whether the XM® antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Toyota certified dealer for assistance.
UPDATING	You have not subscribed to the XM® Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM® Satellite Radio for subscription information. When a contract is canceled, you can choose the "CH000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact the XM® Satellite Radio.
NO SIGNAL	The XM® signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
LOADING	The unit is acquiring audio or program information. Wait until the unit has received the information.
OFF AIR	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.
----	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel.

Contact the XM® Listener Care Center at 1-800-967-2346 (U.S.A.) or 1-877-438-9677 (Canada).

NOTICE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Information to user

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.


INFORMATION

This XM® tuner supports "Audio Services" (Music and Talk) of only XM® Satellite Radio and "Text Information" linked to the respective "Audio Services".*

**:Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.*

— CD changer operation

(a) Inserting discs

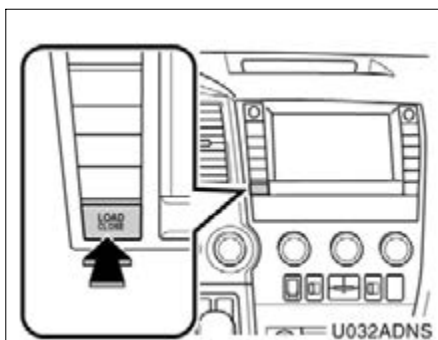

The engine switch must be in the "ACC" or "ON" position.

Your CD changer can store up to 4 discs. You can set a disc at the lowest empty disc number.

1. Push the "LOAD/CLOSE" button. The "Load•Eject" screen appears.



2. Touch "Load". The display opens.



3. The amber indicators at either side of the slot start blinking. When the indicators change to green, insert only one disc. After the disc is loaded, the amber indicators at either side of the slot start blinking again. When the indicators change to green, you can insert the next disc.

4. Push the "LOAD/CLOSE" button to close the display.

The changer will automatically start playing from the last disc you inserted.

If the label faces down, the disc cannot be played. In this case, "Check CD" appears on the screen.



CAUTION

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.

NOTICE


- Do not obstruct the display while it is moving. It could damage your audio/video system.
- Do not insert one disc stacked on top of another one or feed them in continuously, to prevent discs from getting stuck in the changer.

INFORMATION

Under extremely cold conditions, the display may react slowly or operation sound may become louder.

(b) Ejecting discs

- A single disc alone:

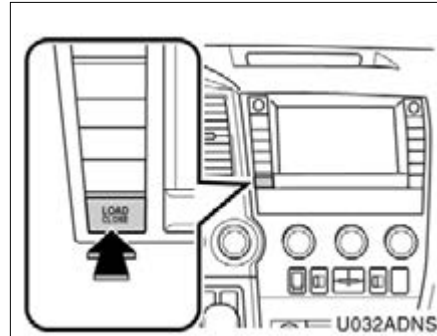


1. Push the "LOAD/CLOSE" button. The "Load-Eject" screen appears.



2. Touch the disc number to be ejected.

The display opens and the amber indicators at either side of the slot start blinking. After the disc is ejected, the amber indicators change to green. A disc can be inserted.

• All the discs:

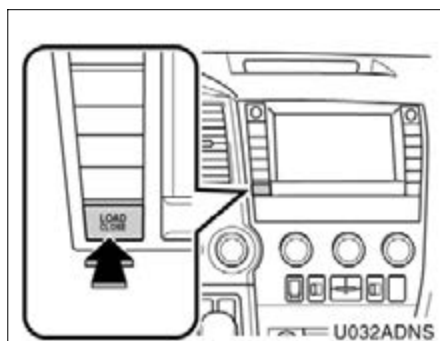

1. Push the "LOAD/CLOSE" button. The "Load-Eject" screen appears.



2. Touch "Eject All".

The display opens and the amber indicators at either side of the slot start blinking. After the disc is ejected, the blinking indicators stay on.

3. Remove the disc.

The indicators start blinking again and the next disc is ejected.

If a disc is not removed within 15 seconds after it is ejected, the operation will be canceled.

When all the discs are removed, the amber indicators change to green. A disc can be inserted.




The numbers of the trays where the disc is not set are dimmed.

NOTICE

If a disc cannot be ejected, do not forcibly take out the disc. Keep pushing the "LOAD/CLOSE" button for approximately 5 seconds and release it. At this time, the audio disc and the map DVD-ROM will be ejected.

(c) Playing a disc

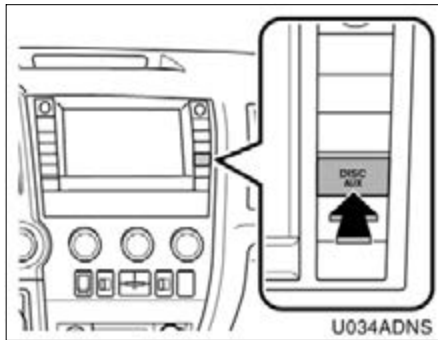

Push the “DISC/AUX” button or push the “AUDIO” button to display audio screen and touch the “CD” tab if the discs are already loaded in the changer.

The discs set in the changer are played continuously, starting with the last disc you inserted. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the screen.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The changer will skip any empty disc trays.

Vehicles with rear seat entertainment system —

If the DVD player is turned on, push the “DISC/AUX” button again or touch “CD” tab to switch to the CD changer.

If the rear seat entertainment system is on, pushing the “DISC/AUX” button switches the sound of the front audio system and that of the rear seat entertainment system.

(d) Selecting a desired disc




Touch “Change Discs” on “CD” screen and touch the desired disc number on the screen.


The selected disc number is highlighted.

The changer will start playing the selected disc from the first track.

(e) Playing an audio disc

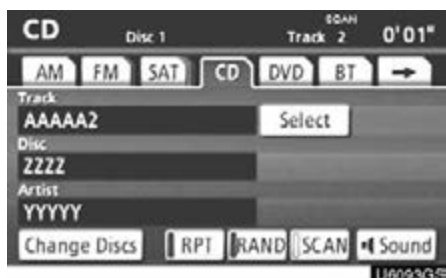

Push the “AUDIO” button and touch the “CD” tab, then touch the “Change Discs”. Choose an audio disc number to display this screen.

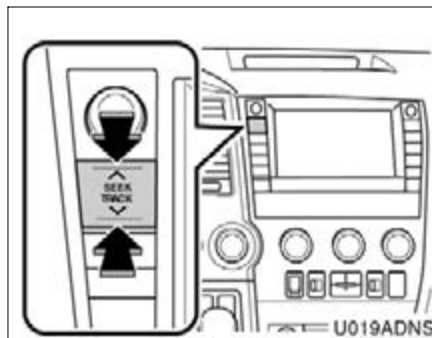

SELECTING A DESIRED TRACK

“SEEK/TRACK” button: Use for direct access to a desired track.

Push either side of the “SEEK/TRACK” button and repeat it until the desired track number appears on the screen. As you release the button, the changer will start playing the selected track from the beginning.

“Select” for Track: The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch “Select”. The track list is displayed.



Touch the desired track number. The changer will start playing the selected track from the beginning.



: By touching this touch-screen button, the list moves up by 5 track groups. If this button is touched when the top page of the list is displayed, the last page is displayed.




: By touching this touch-screen button, the list moves down by 5 track groups. If this button is touched when the last page of the list is displayed, the top page is displayed.

►, ◄: If ► appears to the right of the item name, the complete name is too long for the display.

Touch ► to scroll to the end of the name. Touch ◄ to scroll the beginning of the name.

Fast forward: Push “^” side of the “SEEK/TRACK” button and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

Reverse: Push “v” side of the “SEEK/TRACK” button and hold it to reverse the disc. When you release the button, the changer will resume playing.

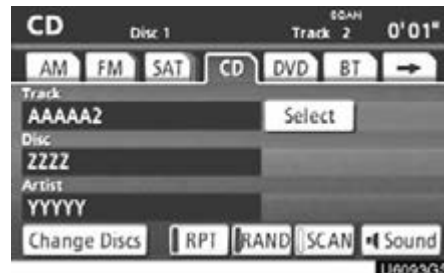

SEARCHING FOR A DESIRED TRACK OR DISC

Searching for a desired track —

Touch “SCAN” on the screen briefly while the disc is playing.

“SCAN” appears on the screen. The changer will play the next track for 10 seconds, then scan again. To select a track, touch “SCAN” on the screen a second time. If the changer reaches the end of the disc, it will continue scanning at track 1.


After all the tracks are scanned in one pass, normal play resumes.

Searching for a desired disc —

Touch “SCAN” on the screen for longer than a second while the disc is playing.

“D.SCAN” appears on the screen. The program at the beginning of each audio disc will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” on the screen a second time.

After all the audio discs are scanned in one pass, normal play resumes.

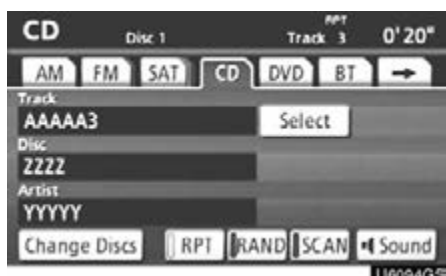

OTHER FUNCTIONS

“RPT”: Use it for automatic repeat of the track or disc you are currently listening to.

Repeating a track —

Touch **“RPT”** briefly while the track is playing. **“RPT”** appears on the screen. When the track is finished, the changer will automatically go back to the beginning of the track and play the track again. To cancel it, touch **“RPT”** once again.

Repeating a disc —

Touch **“RPT”** for longer than a second while the disc is playing. **“D.RPT”** appears on the screen. When the disc is finished, the changer will automatically go back to the beginning of the disc and play the disc again. To cancel it, touch **“RPT”** once again.

“RAND”: Use it for automatic and random selection.

Playing the tracks on one disc in random order —

Touch **“RAND”** briefly while the disc is playing. **“RAND”** appears on the screen. The system selects a track on the disc being listened to in random order. To cancel it, touch **“RAND”** once again.

Playing the tracks on all the audio discs in random order —

Touch **“RAND”** for longer than a second while the disc is playing. **“D.RAND”** appears on the screen. The system selects a track on all the audio discs in the changer in random order. To cancel it, touch **“RAND”** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 29 letters can be displayed.

(f) Playing a MP3/WMA disc



Push the “AUDIO” button and touch the “CD” tab, then touch the “Change Discs”. Choose an MP3/WMA disc number to display this screen.


SELECTING A DESIRED FOLDER

“Folder▲”: Touch this touch–screen button to go to the next folder.

“Folder▼”: Touch this touch–screen button to go to the previous folder.

“Select” for Folder: The desired folder can be selected in a list. This function is available only when the vehicle is not moving.

Touch “Select”. The folder list is displayed.

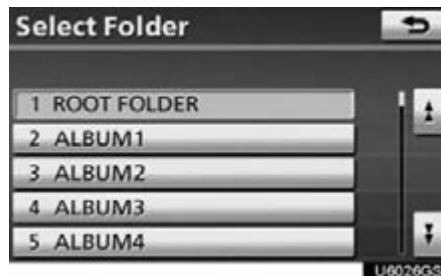


Touch the desired folder number. The changer will start playing the first file of the selected folder.



: By touching this touch–screen button, the list moves up by 5 folder groups. If this touch–screen button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this touch–screen button, the list moves down by 5 folder groups. If this touch–screen button is touched when the last page of the list is displayed, the top page is displayed.

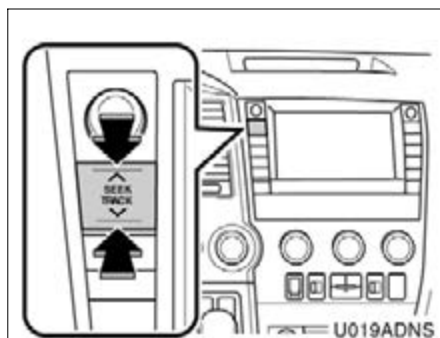


SELECTING A DESIRED FILE

“SEEK/TRACK” button: Use for direct access to a desired file.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired file number appears on the display. As you release the button, the changer will start playing the selected file from the beginning. When **“RAND”** or **“FLD.RPT”** is on, the file number within the folder you are currently listening to appears.

Fast forward: Push **“^”** side of the **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

Reverse: Push **“v”** side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the changer will resume playing.

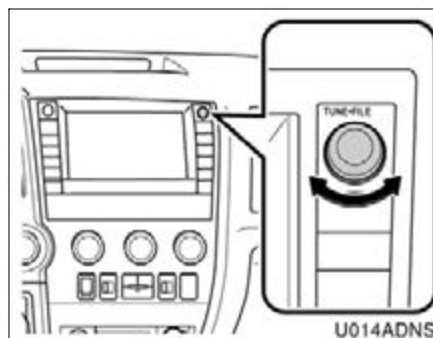


“TUNE-FILE” knob: Use for direct access to a desired file in the disc.

Turn the **“TUNE-FILE”** knob to step up or down all the files in the disc you are currently listening to. The file number appears on the display. When **“RAND”** or **“FLD.RPT”** is on, all the files in the folder you are currently listening to can be stepped up or down.



“Select” for File: The desired file can be selected in a list. This function is available only when the vehicle is not moving. Touch **“Select”**. The file list is displayed.

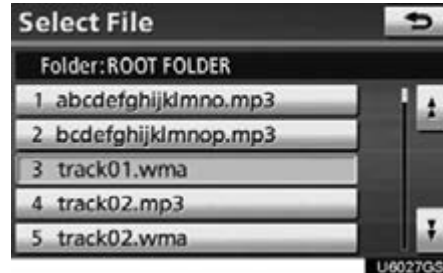

Touch the desired file number. The changer will start playing the selected file from the beginning.



: By touching this touch-screen button, the list moves up by 5 file groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this touch-screen button, the list moves down by 5 file groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.



SEARCHING FOR A DESIRED FILE

Touch “SCAN” on the screen briefly while the disc is playing.

“SCAN” appears on the screen. The changer will play the next file in the folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen a second time. If the changer reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.



SEARCHING FOR A DESIRED FOLDER

Touch “SCAN” on the screen for longer than a second while the disc is playing.

“FLD.SCAN” appears on the screen. The program at the beginning of each folder will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” on the screen a second time.

After all the folders are scanned in one pass, normal play resumes.



OTHER FUNCTIONS

"RPT": Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch **"RPT"** briefly while the file is playing. **"RPT"** appears on the screen. When the file is finished, the changer will automatically go back to the beginning of the file and play the file again. To cancel it, touch **"RPT"** once again.

Repeating a folder —

Touch **"RPT"** for longer than a second while the folder is playing. **"FLD.RPT"** appears on the screen. When the folder is finished, the changer will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch **"RPT"** once again.

"RAND": Use it for automatic and random selection of the folder or the disc which you are currently listening to.

Playing the files in one folder in random order —

Touch **"RAND"** briefly while the disc is playing. **"RAND"** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **"RAND"** once again.

Playing the files in all the folders on one disc in random order —

Touch **"RAND"** for longer than a second while the disc is playing. **"FLD.RAND"** appears on the screen. The system selects a file in all the folders. To cancel it, touch **"RAND"** once again.

When a file is skipped or the system is inoperative, touch **"RAND"** to reset.

(g) If the player malfunctions

If “CD Error” appears on the screen, audio signals of the disc cannot be read or the system has trouble. Push the “DISC/AUX” button once again.

If the changer does not operate, check that the disc surface is not soiled or damaged. If the disc is O.K., the temperature of the changer’s internal mechanism may be raised because of high external temperature. Remove the disc from the changer to cool it.

If the changer still does not operate, have it checked by your dealer.

If an MP3/WMA disc contains CD-DA files, only CD-DA files are played. If an MP3/WMA disc contains files other than CD-DA, only MP3/WMA files are played.

—Bluetooth® audio operation

The Bluetooth® audio system enables users to enjoy music played on a portable player from the vehicle speaker via wireless communication.



This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

INFORMATION

Portable players must correspond to the following specifications in order to be connected to the Bluetooth® audio system. However, please note that some functions may be limited depending on the type of portable player.

- **Bluetooth® Specification**
Ver.1.1 or higher
(Recommended: Ver.2.0+EDR or higher)
- **Profile**
 - A2DP (Advanced Audio Distribution Profile) Ver.1.0
 - AVRCP (Audio/Video Remote Control Profile) Ver.1.0 or higher
(Recommended: Ver.1.3 or higher)

Please go to “<http://www.toyota.lets-talk.com/>” to find approved Bluetooth® phones for this system.



Bluetooth is a trademark owned by Bluetooth SIG, Inc.

**CAUTION**


Do not operate the player's controls or connect to the Bluetooth® audio system while driving.

NOTICE

Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.

INFORMATION

- **In the following conditions, the system may not function.**
 - The portable player is turned off.
 - The portable player is not connected.
 - The portable player has a low battery.
- **It may take time, the phone connection is carried out during Bluetooth® audio play.**

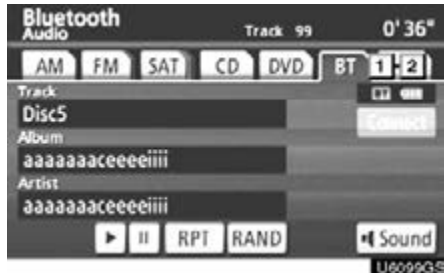

1 Indicates the condition of the Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of audio quality.

BT : No connection to Bluetooth®.

2 Indicates the amount of battery charge left.



Remaining charge is not displayed while the Bluetooth® is connecting.

The amount left does not always correspond with the one of your portable player.

This system doesn't have a charging function.

An antenna for the Bluetooth® connection is built in to the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® portable player in the following conditions.

- Your portable player is hiding behind from the display (behind the seat or in the glove box or console box).
- Your portable player touches or is covered with metal materials.

Leave the Bluetooth® portable player in a place where the “Blue” indication is displayed.

The portable player information is registered when the Bluetooth® audio system is connected. When you release possession of your vehicle, remove your portable player. (See “(a) Removing a Bluetooth® audio” on page 297.)

FCC ID : HYQDNNS025
Type : DNNS025
IC : 1551A-DNNS025 Canada 310

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

(a) **Connecting Bluetooth® audio player**

To use the Bluetooth® audio system, you need to enter your portable player into the system. Once you have registered it, you can enjoy your music on the vehicle's audio system. (See "—Setting Bluetooth® audio" on page 295.)

For the operation procedure for the portable player, see the instruction manual that comes with it.

- When the connection method is "From Vehicle".
- When the auto connection is on
When the portable player is standby for the connection, it will be automatically connected whenever the engine switch is in either "ACC" or "ON" position.
- When the auto connection is off
Manually connect the portable player in accordance with the following procedure.



Touch "Connect".



When the connection is completed, this screen is displayed. Now you can use the portable player.



This screen will appear when the connection has failed.

- When the connection method is "From Portable Player"

Operate the portable player and connect it to the Bluetooth® audio system. For the operation procedure for the portable player, see the instruction manual that comes with it.



Touch "Connect".



Connect the portable audio player to the Bluetooth® audio system.



This screen will appear when the connection has been successfully established.

- **Reconnecting the portable player**

If the portable player is disconnected with a poor reception from the Bluetooth® network when the engine switch is in the “ACC” or “ON” position, the system automatically reconnects the portable player. In this case, the connection result is not displayed.


If the Bluetooth® is disconnected on purpose such as you turned your portable player off, this does not happen.

Reconnect it by the following method.

- **Select the portable player again.**
- **Enter the portable player.**

- (b) **Playing a Bluetooth® audio**

- **Playing and pausing a Bluetooth® audio**

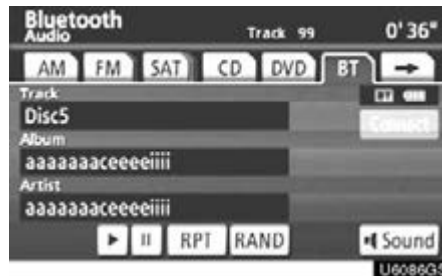

Push the “DISC/AUX” button or push the “AUDIO” button to display this screen and touch the “BT” tab if the Bluetooth® audio player is already connected.

Touch  and the music will start playing.

Touch  and the music will pause.


Touch  and the music will start playing again.

Depending on the portable player that is connected to the system, the music may start playing when touching  while it is paused. On the other hand, the music may pause when touching  while it is playing.



Some titles may not be displayed depending on the type of portable player.

- **Selecting a desired track**

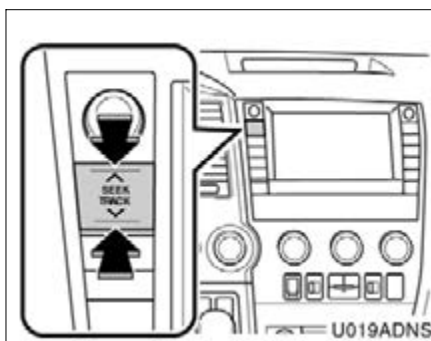

“SEEK/TRACK” button: Use for direct access to a desired track.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired track number appears on the screen. As you release the button, the portable player will start playing the selected track from the beginning.

Fast forward:

Push and hold the “^” side of the **“SEEK/TRACK”** button to fast forward the player. When you release the button, the portable player will resume playing from that position.


Reverse:

Push and hold the “v” side of the **“SEEK/TRACK”** button to reverse the player. When you release the button, the player will resume playing.

INFORMATION

Depending on the portable player that is connected to the system, certain functions may not be available.

- Selecting a desired album

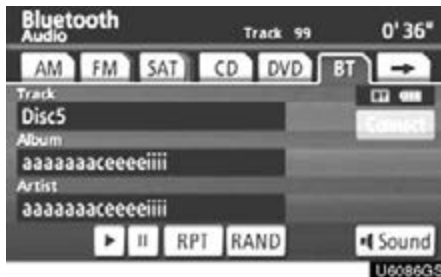


“Album ▲”: Touch this button to go to the next album.

“Album ▼”: Touch this button to go to the previous album.

INFORMATION

Depending on the portable player that is connected to the system, certain functions may not be available.

- Other function

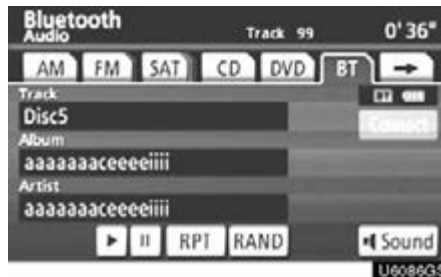

“RPT”: Use this control to automatic replay the track you are currently listening to.

Repeating a track—

While the track is playing, touch “RPT” briefly.

“RPT” appears on the screen. When the track is finished, the player will automatically play it again. To cancel the repeat, touch “RPT” once again.

“RAND”: Use this for automatic and random selection of tracks on the album that you are currently listening to.

Playing the tracks in the album in random order—

While the track is playing, touch “RAND” briefly.

“RAND” appears on the screen. The system selects a track in the album you are currently listening to. To cancel this function, touch “RAND” once again.

INFORMATION

Depending on the portable player that is connected to the system, certain functions may not be available.


—DVD player operation

The DVD player can play DVD video, audio CD, video CD, CD text, dts-CD or MP3 disc only when a disc is loaded in the DVD player. A WMA and DVD audio disc cannot be played.

For details of “Rear seat entertainment system”, refer to “Owner’s Manual”.


For appropriate discs for this player, see “Audio/video system operating hints” on page 219.

(a) Inserting the disc

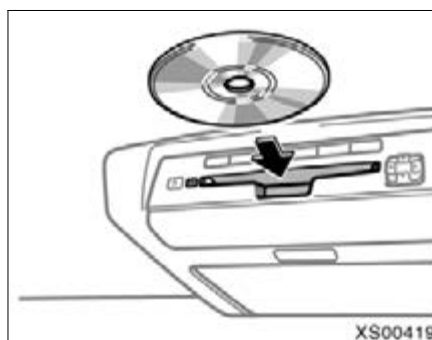

Insert the disc into the slot with the label side up.

An adapter must be used for 3 in. (8 cm) discs which are loaded in the same manner as for 4.7 in. (12 cm) discs.

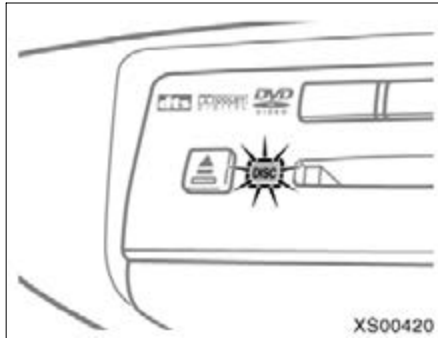


The indicator light turns on while the disc is loaded.

If the label faces downward, the disc cannot be played. In this case, "Check disc" appears on the screen.

If a disc which is not playable is inserted, "Check disc" will also appear on the screen. For appropriate discs for this player, see "Audio/video system operating hints" on page 219.

(b) Ejecting a disc

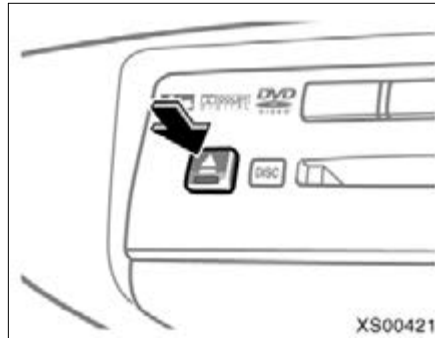


Push the "▲" button.

NOTICE

Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.


(c) Playing a disc

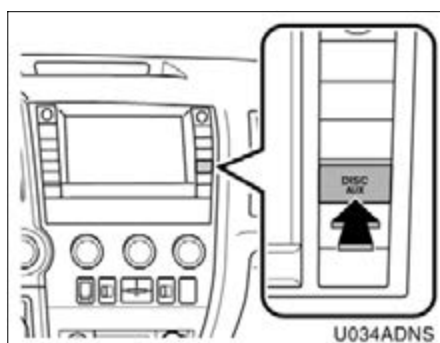

Push the “DISC/AUX” button or push the “AUDIO” button to display audio screen and touch the “DVD” tab if a disc is already loaded in the player.

“DVD” appears on the screen. (If the CD changer is turned on, push the “DISC/AUX” button again or touch “DVD” tab to switch to the DVD player.)


(d) Operating an audio CD

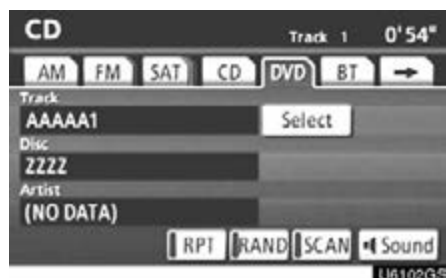

PLAYING AN AUDIO CD

CD text only — The disc title and track title will appear on the screen when pushing the “DISC/AUX” button.

Push the “AUDIO” button and touch the “DVD” tab to display this screen.

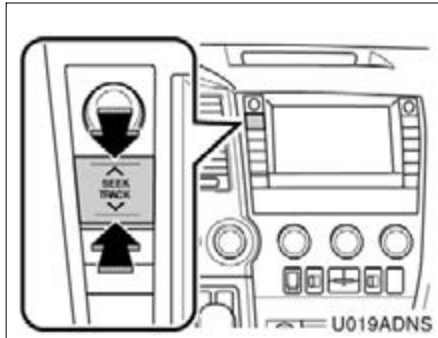


SELECTING A DESIRED TRACK

“SEEK/TRACK” button: Use for direct access to a desired track.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired track number appears on the display. As you release the button, the player will start playing the selected track from the beginning.

“Select” for track: The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch **“Select”**. The track list is displayed.

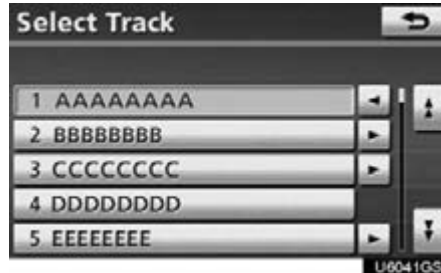

Touch the desired track number. The player will start playing the selected track from the beginning.




: By touching this touch-screen button, the list moves up by 5 track groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this touch-screen button, the list moves down by 5 track groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

Fast forward: Push “^” side of **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

Reverse: Push “v” side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the player will resume playing.

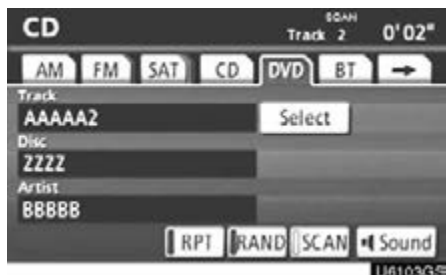


SEARCHING FOR A DESIRED TRACK

Touch **“SCAN”** on the screen.

“SCAN” will be highlighted on the screen. The player will play the next track for 10 seconds, then scan again. To select a track, touch **“SCAN”** on the screen a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

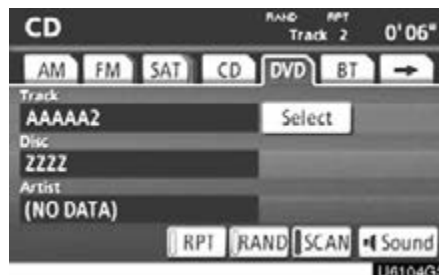

OTHER FUNCTIONS

“RPT”: Use it for automatic repeat of the track you are currently listening to.


Touch **“RPT”** while the track is playing. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, touch **“RPT”** once again.

“RAND”: Use it for automatic and random selection of the disc which you are currently listening to.

When **“RAND”** is touched, the system selects a track in the disc you are currently listening to. To cancel it, touch **“RAND”** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 29 letters can be displayed.

(e) Operating a MP3 DISC

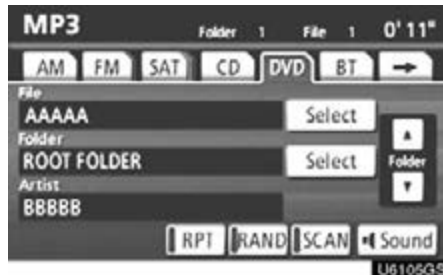

PLAYING A MP3 DISC

Push the “AUDIO” button and touch the “DVD” tab to display this screen.

SELECTING A DESIRED FOLDER

“Folder▲”: Touch this touch-screen button briefly to go to the next folder.

“Folder▼”: Touch this touch-screen button briefly to go to the previous folder. To jump up to the first folder, touch and hold this touch-screen button until the beep sounds.

“Select” for Folder: The desired folder can be selected in a list. This function is available only when the vehicle is not moving.


Touch “Select”. The folder list is displayed.



Touch the desired folder number. The player will start playing the first file of the selected folder.

▲ : By touching this touch-screen button, the list moves up by 5 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼ : By touching this touch-screen button, the list moves down by 5 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

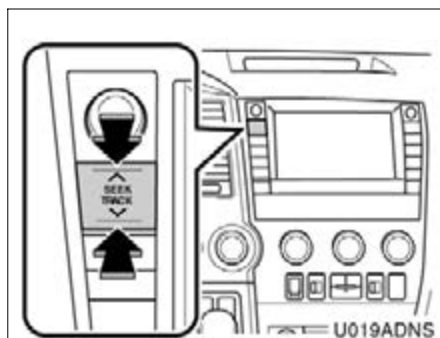

SELECTING A DESIRED FILE

“SEEK/TRACK” button: Use for direct access to a desired file.


Push either side of the **“SEEK/TRACK”** button and repeat it until the desired file number appears on the display. As you release the button, the player will start playing the selected file from the beginning.

Fast forward: Push “^” side of the **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

Reverse: Push “v” side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the player will resume playing.

“Select” for File: The desired file can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“Select”**. The file list is displayed.

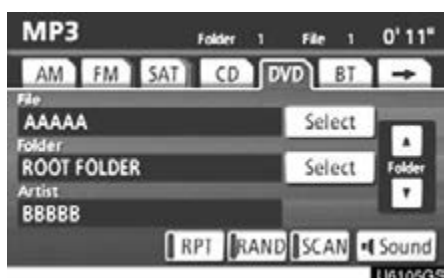




Touch the desired file number. The player will start playing the selected file from the beginning.



: By touching this touch-screen button, the list moves up by 5 file groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this touch-screen button, the list moves down by 5 file groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

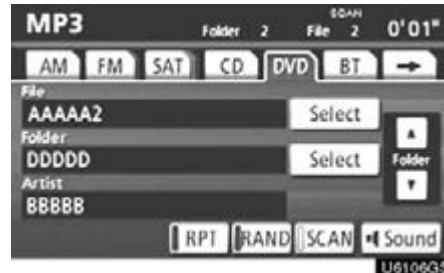


SEARCHING FOR A DESIRED FILE

Touch “SCAN” on the screen briefly.

“SCAN” appears on the screen. The DVD player will play the next file in the folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen a second time. If the player reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.

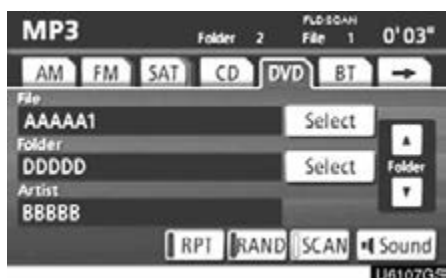


SEARCHING FOR A DESIRED FOLDER

Touch and hold “SCAN” on the screen until the beep sounds.

“FLD.SCAN” appears on the screen. The DVD player will play the file at the beginning of each folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen a second time.

After all the folders are scanned in one pass, normal play resumes.

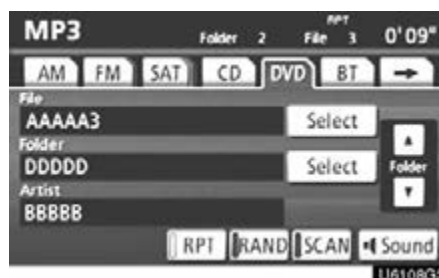

OTHER FUNCTIONS

“RPT”: Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch “RPT” briefly while the file is playing. “RPT” appears on the screen. When the file is finished, the player will automatically go back to the beginning of the file and play the file again. To cancel it, touch “RPT” once again.

Repeating a folder —

Touch and hold “RPT” until the beep sounds while the folder is playing. “FLD.RPT” appears on the screen. When the folder is finished, the player will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch “RPT” once again.

“RAND”: Use it for automatic and random selection of the folder which you are currently listening to or of all the folders.

Playing the files in one folder in random order —

Touch **“RAND”** briefly. **“RAND”** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **“RAND”** once again.

Playing the files in all the folders in random order —

Touch and hold **“RAND”** until the beep sounds. **“FLD.RAND”** appears on the screen. The system selects a file in the folders of all the trays which are set and plays it. To cancel it, touch **“RAND”** once again.

When a file is skipped or the system is inoperative, touch **“RAND”** to reset.

(f) Operating a DVD video disc

NOTE: The playback condition of some DVD video discs may be determined by a DVD video software producer. This DVD player plays a disc as the software producer intended. So some functions may not work properly. Be sure to read the instruction manual for the DVD video disc separately provided. For the detailed information about DVD video discs, see **“(i) DVD player and DVD video disc information”** on page 208.

Precautions on DVD video disc

When recording with a DVD video or video CD, audio tracks may not record in some cases while the menu is displayed. As audio will not play in this case, verify that the video tracks are playing and then activate playback.

When playback of a disc is completed:

- If an audio CD or MP3 disc is playing, the first track or file starts.
- If a DVD video or video CD is playing, playback will stop or the menu screen will be displayed.

The title/chapter number and playback time display may not appear while playing back certain DVD video discs.



CAUTION

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.



This screen appears when the video screen is first displayed after the engine switch is in the "ACC" or "ON" position.



PLAYING A DVD DISC

Push the “AUDIO” button and touch the “DVD” tab to display this screen.

To play DVD movie, when a DVD video disc is inserted, the DVD will start automatically within the first few seconds after the parking brake is disengaged.

Touch “Settings” on “DVD” screen and touch “Wide” on “Settings” screen. The screen mode can be changed.

If you touch “Full Screen” when the vehicle is completely stopped and the parking brake is applied, the video screen returns.



DVD SETTINGS

If you touch “Settings” on “DVD” screen, “Settings” screen appears.

AUDIO/VIDEO SYSTEM

DESCRIPTION OF SETTINGS

“DVD Video Settings”: The initial set up screen appears. (See page 200.)

“Search”: The title search screen appears. (See page 198.)

“Return”: Touching this will display the predetermined scene and start playing from there.

“Audio”: The audio changing screen appears. (See page 199.)

“Subtitle”: The subtitle changing screen appears. (See page 198.)

“Angle”: The angle selection screen appears. (See page 199.)

“Wide”: The screen mode screen appears. (See page 151.)



DISPLAYING DVD CONTROLS

If you touch , while watching video, DVD controls will appear.

If “” appears on the screen when you touch a control, the operation relevant to the control is not permitted.

DESCRIPTION OF DVD CONTROLS

“Menu” and “Top Menu”: If you touch any of the above controls, the menu screen for DVD video appears. (For the operation, see the manual that come with the DVD video disc provided separately.)

: The menu control key appears on the screen. (See page 197.)


: Touching this will pause the video screen.

: Touching this will fast reverse during playback.

: Touching this will stop the video screen.

: Touching this will resume normal play during pause.

: Touching this will fast forward during playback and forward frame by frame during pause.

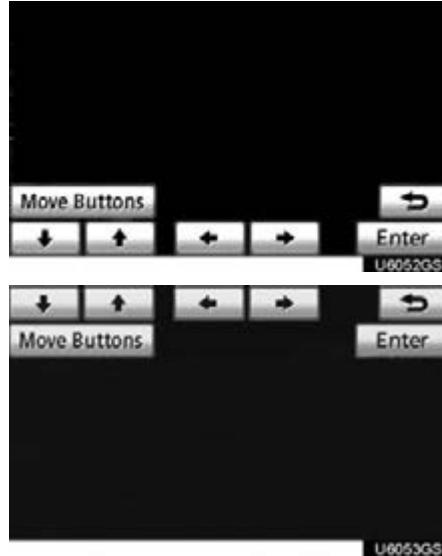
**SELECTING A MENU ITEM**

Enter the menu item using , ,  and  and touch “Enter”. The player starts playing video for that menu item. (For details, see the manual that comes with the DVD video disc provided separately.)

Each time you touch “Move Buttons”, the controls on the screen move upward and downward.

When you touch the screen, the controls will disappear. To display them again, touch the screen.

When you touch , the previous screen returns.

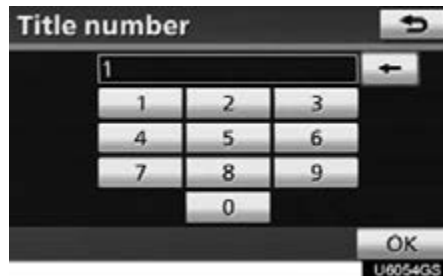

SEARCHING BY TITLE

Enter the title number and touch “OK”. The player starts playing video for that title number.

When you push either side of the “SEEK/ TRACK” button, you can select a chapter.

If you enter the wrong numbers, touch  to delete the numbers.

When you touch , the previous screen returns.



CHANGING THE SUBTITLE LANGUAGE

Each time you touch “Change”, the language is selected from the ones stored in the discs and changed.

When you touch “Hide”, the subtitle can be hidden.

When you touch , the previous screen returns.



CHANGING THE AUDIO LANGUAGE

Each time you touch “Change”, the language is selected from the ones stored in the discs and changed.

When you touch , the previous screen returns.



CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

Each time you touch “Change”, the angle is selected from the ones stored in the discs and changed.

When you touch , and the previous screen returns.



SETUP MENU

There are initial setting touch-screen buttons on the “Setup Menu” screen.

After you change the initial setting, touch . The initial setting screen will be turned off and return to the picture previously.

When “Default” is touched, all menus are initialized.

The initial setting can be changed.

● Audio language

You can change the audio language.

1. Touch “Audio Language”.
2. Touch the language you want to hear on the “Audio Language” screen.

If you cannot find the language you want to hear on this screen, touch “Other” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch the .

● Subtitle language

You can change the subtitle language.

1. Touch “Subtitle Language”.
2. Touch a language you want to read on the “Subtitle Language” screen.

If you cannot find the language you want to read on this screen, touch “Other” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch the .

● DVD language

You can change the language on the DVD video menu.

1. Touch “DVD Language”.
2. Touch the language you want to read on the “DVD Language” screen.

If you cannot find the language you want to read on this screen, touch “Other” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch .

- **Angle mark**

The multi-angle mark can be turned on or off on the screen while the disc which is multi-angle compatible is being played.

Each time you touch “Angle Mark”, the angle mark on the screen turns on or off alternately.

- **Parental lock**

The level of viewer restrictions can be changed.

1. Touch “Parental Lock”.
2. Enter the 4-digit personal code on the “Key code” screen.

If you enter the wrong numbers, touch  to delete the numbers.

10 touches of  will initialize the personal code.

To return to the “Setup Menu” screen, touch .

3. Touch a parental level (1 — 8) on the “Select Restriction Level”. Touch the  switch to return to the “Setup Menu” screen.

ENTER AUDIO LANGUAGE CODE



If you touch “Other” on the “Select Audio Language” screen, “Select Subtitle Language” screen or “DVD Language” screen, you can select the language you want to hear or read by entering a language code.

1. Enter the 4-digit language code.

If you enter the wrong numbers, touch  to delete the numbers.

2. Touch “OK”.

Code	Language
0514	English
1001	Japanese
0618	French
0405	German
0920	Italian
0519	Spanish
2608	Chinese
1412	Dutch
1620	Portuguese
1922	Swedish
1821	Russian
1115	Korean
0512	Greek
0101	Afar
0102	Abkhazian

AUDIO/VIDEO SYSTEM

0106	Afrikaans	0721	Gujarati
0113	Amharic	0801	Hausa
0118	Arabic	0809	Hindi
0119	Assamese	0818	Croatian
0125	Aymara	0821	Hungarian
0126	Azerbaijani	0825	Armenian
0201	Bashkir	0901	Interlingua
0205	Byelorussian	0905	Interlingue
0207	Bulgarian	0911	Inupiak
0208	Bihari	0914	Indonesian
0209	Bislama	0919	Icelandic
0214	Bengali	0923	Hebrew
0215	Tibetan	1009	Yiddish
0218	Breton	1023	Javanese
0301	Catalan	1101	Georgian
0315	Corsican	1111	Kazakh
0319	Czech	1112	Greenlandic
0325	Welsh	1113	Cambodian
0401	Danish	1114	Kannada
0426	Bhutani	1119	Kashmiri
0515	Esperanto	1121	Kurdish
0520	Estonian	1125	Kirghiz
0521	Basque	1201	Latin
0601	Persian	1214	Lingala
0609	Finnish	1215	Laotian
0610	Fiji	1220	Lithuanian
0615	Faroese	1222	Latvian
0625	Frisian	1307	Malagasy
0701	Irish	1309	Maori
0704	Scots-Gaelic	1311	Macedonian
0712	Galician	1312	Malayalam
0714	Guarani	1314	Mongolian

1315	Moldavian	1920	Sesotho
1318	Marathi	1921	Sundanese
1319	Malay	1923	Swahili
1320	Maltese	2001	Tamil
1325	Burmese	2005	Telugu
1401	Nauru	2007	Tajik
1405	Nepali	2008	Thai
1415	Norwegian	2009	Tigrinya
1503	Occitan	2011	Turkmen
1513	(Afan)Oromo	2012	Tagalog
1518	Oriya	2014	Setswana
1601	Panjabi	2015	Tonga
1612	Polish	2018	Turkish
1619	Pashto, Pushto	2019	Tsonga
1721	Quechua	2020	Tatar
1813	Rhaeto–Romance	2023	Twi
1814	Kirundi	2111	Ukrainian
1815	Romanian	2118	Urdu
1823	Kinyarwanda	2126	Uzbek
1901	Sanskrit	2209	Vietnamese
1904	Sindhi	2215	Volapük
1907	Sangho	2315	Wolof
1908	Serbo–Croatian	2408	Xhosa
1909	Sinhalese	2515	Yoruba
1911	Slovak	2621	Zulu
1912	Slovenian		
1913	Samoan		
1914	Shona		
1915	Somali		
1917	Albanian		
1918	Serbian		
1919	Siswati		

SETUP OPERATION FROM THE REAR SEAT



This screen appears when a rear passenger selects the setup menu.

If you want to cancel the setup operation from the rear seat, touch **“Play”**. The player will resume normal play.

Under the same condition, the rear passenger can cancel the setup operation from the front seat.

To lock the operation of the player from the rear seat, see “● Rear system lock” on page 238.

(g) Operating a video CD



PLAYING A VIDEO CD

Push the **“AUDIO”** button and touch the **“DVD”** tab to display this screen.

When you touch **“Wide”** on “Settings” screen, the screen mode can be changed.

If you touch **“Full Screen”** when the vehicle is completely stopped and the parking brake is applied, the video screen returns.



DISPLAYING VIDEO CD SETTINGS

If you touch **“Settings”** on **“DVD”** screen, **“Settings”** screen appears.

DESCRIPTION OF VIDEO CD SETTINGS

- **Controls on top page**

“Select Number”: The track or number search screen appears. (See **“SEARCHING BY TRACK”** on page 207.)

“Prev. Page”: When you touch this while the disc menu is displayed, the previous page appears on the screen. If you touch this while the player is playing video, the previous track is searched and played.

“Next Page”: When you touch this while the disc menu is displayed, the next page appears on the display. If you touch this while the player is playing video, the next track is searched and played.

“Main/Sub”: A multiplex transmission changing control. The mode changes from Main/Sub to Main, to Sub and back to Main/Sub by touching this control.

“Return”: Touching this will display the predetermined scene and start playing from there.

“Wide”: The screen mode screen appears.

DISPLAYING VIDEO CD CONTROLS

If you touch the part where controls are not located while you are watching video on the video CD, video CD controls will appear.

If “” appears on the display when you touch a control, the operation is not permitted.

DESCRIPTION OF VIDEO CD CONTROLS



: Use this to pause the video screen.




: Touch this to fast reverse during playback.



: Touch this to resume playing during pause.



: Touch this to fast forward during the playback and start playing frame by frame during pause.

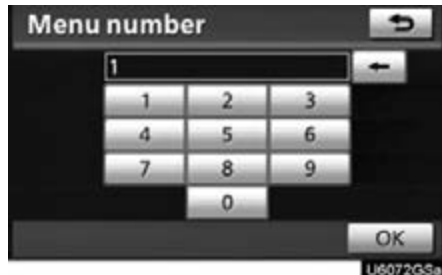**SEARCHING BY TRACK**

Enter the track numbers and touch “OK”. The player starts playing video for that title number.

You can select a track number by pushing “^” or “v” on the “SEEK/TRACK” button.

If you enter the wrong numbers, touch  to delete the numbers.

Touch , and the previous screen returns.

(h) If the player malfunctions

If the player or another unit equipped with the player malfunction, your audio system will display following messages.

If “Check disc” appears on the display: It indicates that the disc dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, “Check disc” will also appear on the screen. For appropriate discs for this player, see “Audio/video system operating hints” on page 219.

If “Region code error” appears on the display: It indicates that the DVD region code is not set properly.

If “DVD error” appears on the display: It indicates that the inside of the player unit may be too hot due to the very high ambient temperature. Remove the disc from the player and allow the player to cool down.

If the malfunction is not rectified: Take your vehicle to your dealer.

If an MP3 disc contains CD-DA files, only CD-DA files are played. If an MP3 disc contains files other than CD-DA, only MP3 files are played.

(i) DVD player and DVD video disc information

DVD VIDEO DISCS

This DVD player conforms to NTSC color TV formats. The DVD video disc conforming to another formats such as PAL or SECAM cannot be used.

Region codes: Some DVD video discs have a region code indicating a country where you can use the DVD video disc on this DVD player. If the DVD video disc is not labeled as "ALL" or "1", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "Region code error" appears on the screen. Even if the DVD video disc does not have a region code, there is a case that you cannot use it.

Marks shown on DVD video discs:

NTSC	Indicates NTSC format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

DVD VIDEO DISC GLOSSARY

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2 – 7: DVD video discs for children and G-rated movie can be played.

Level 8: All types of the DVD video discs can be played.

Multi-angle feature: You can enjoy the same scene at different angles.

Multi-language feature: You can select a language of the subtitle and audio.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes, see page 208.

Audio: This DVD player can play linear PCM, Dolby digital and MPEG audio format DVD. Other decoded type cannot be played.

Title and chapter: Video and audio programs stored in DVD video disc are divided in parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one piece of movie, one album, or one audio program is assigned as a title.

Chapter: The unit smaller than that of title. A title comprises plural chapters.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works.

©1992–1997 Dolby Laboratories. All rights reserved.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

— USB memory player/ iPod® player operation

Connecting a USB memory player or iPod® player enables you to enjoy music from the vehicle speakers.


⚠ CAUTION

Do not operate the player's controls or connect to the USB memory player or iPod® player while driving.

NOTICE

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

(a) Connecting a USB memory player or iPod® player

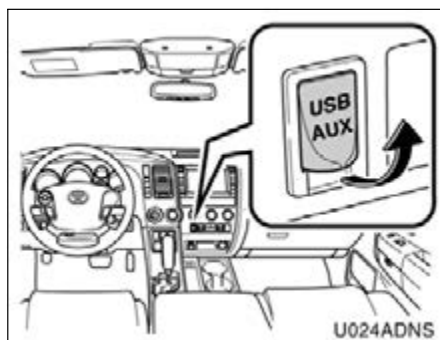

Open the cover and connect a USB memory player or iPod® player using an iPod® cable.

(b) Playing a USB memory player or iPod® player

- Playing and pausing a file or track



► USB memory player



► iPod® player

Touch "USB" tab to display this screen if the USB memory player or iPod® player are already connected.

Touch  and the music will start playing.

Touch  and the music will pause.

Touch  and the music will start playing again.


INFORMATION

- When an iPod® player is connected and the audio source is changed to iPod® player mode, the iPod® player will resume play from the same point in which it was last used.
- When the USB device is connected and the audio source is changed to USB memory player mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point in which it was last used.

- Selecting a play mode (iPod® player only)



1. Touch "Menu".

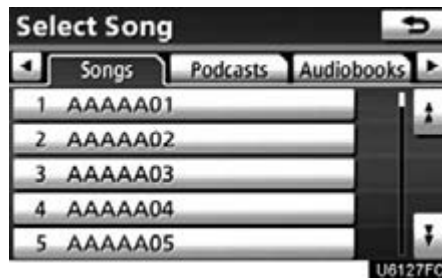

2. Select the desired play mode.

- **Selecting a desired folder (USB memory player only)**




: By touching this touch-screen button, the list moves down by 5 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

“Folder▲”: Touch this button to go to the next folder.

“Folder▼”: Touch this button to go to the previous folder.

“Select” for Folder: The desired folder can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“Select”**. The folder list is displayed.

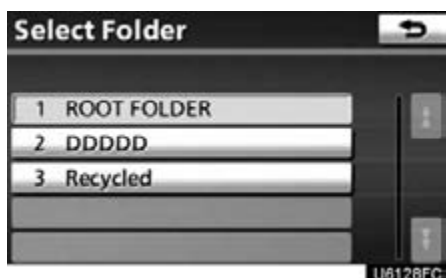


Touch the desired folder number. The player will start playing the first file of the selected folder.



: By touching this touch-screen button, the list moves up by 5 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

- **Selecting a desired files or tracks**

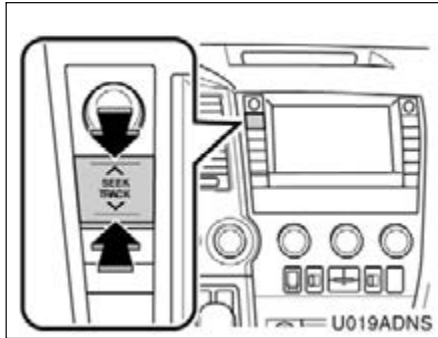

“SEEK/TRACK” button: Use for direct access to a desired file or track.


Push either side of the **“SEEK/TRACK”** button and repeat it until the desired file or track appears on the screen. As you release the button, the USB memory player or iPod® player will start playing the selected file or track from the beginning.

Fast forward:

Push and hold the “^” side of the **“SEEK/TRACK”** button to fast forward the player. When you release the button, the player will resume playing from that position.

Reverse:

Push and hold the “v” side of the **“SEEK/TRACK”** button to reverse the player. When you release the button, the player will resume playing.

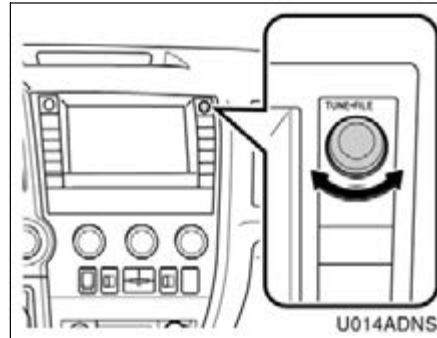

“TUNE/FILE” knob: Use for direct access to a desired file or track in the player.

Turn the **“TUNE/FILE”** knob to step up or down all the files or tracks in the player you are currently listening to.



►USB memory player



►iPod® player

“Select” for File or Track: The desired file or track can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“Select”**. The file or track list is displayed.



Touch the desired file or track number. The changer will start playing the selected file or track from the beginning.



: By touching this touch-screen button, the list moves up by 5 file or track groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.



: By touching this touch-screen button, the list moves down by 5 file or track groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

- Searching for a desired file (USB memory player only)



Touch “SCAN” on the screen briefly while the music is playing.

“SCAN” appears on the screen. The player will play the next file for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen a second time. If the player reaches the end of the memory, it will continue scanning at file1.

After all the files are scanned in one pass, normal play resumes.

- Searching for a desired folder (USB memory player only)



Touch “SCAN” on the screen for longer than a second while the music is playing.

“FLD.SCAN” appears on the screen. The program at the beginning of each folder will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” on the screen a second time.

After all the folders are scanned in one pass, normal play resumes.

- Other functions



► USB memory player



► iPod® player

“RPT”: Use this control to automatic replay the file or track you are currently listening to.

Repeating a file or track—

While the file or track is playing, touch “RPT” briefly.

“RPT” appears on the screen. When the file or track is finished, the player will automatically play it again. To cancel the repeat, select “RPT” once again.

“RAND”: Use this for automatic and random selection of files or tracks on the album that you are currently listening to.

Repeating a folder (USB memory player only) —

While the folder is playing, touch “RPT” for longer than a second.

“FLD.RPT” appears on the screen. When the folder is finished, the changer will automatically go back to the beginning of the folder and play the folder again. To cancel it, select “RPT” once again.

Playing the file or track in random order—

While the file or track is playing, touch “RAND” briefly.


“RAND” appears on the screen. The system selects a file or track you are currently listening to. To cancel this function, touch “RAND” once again.

Playing the files in all files in random order —

Touch “RAND” for longer than a second while the music is playing. “FLD.RAND” appears on the screen. The system selects a file in all files. To cancel it, touch “RAND” once again.

When a file is skipped or the system is inoperative, select “RAND” to reset.

Audio/video remote controls (steering switches)

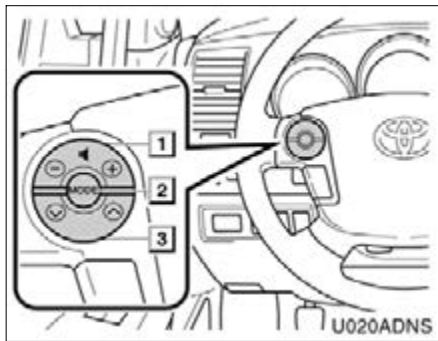

Some parts of the audio system can be adjusted using the switches on the steering wheel.

Details of the specific switches, controls, and features are described below.

- 1** Volume control switch
- 2** “^ v” switch
- 3** “MODE” switch

1 Volume control switch

Push “+” side to increase the volume. The volume continues to increase while the switch is being pressed.

Push “-” side to decrease the volume. The volume continues to decrease while the switch is being pressed.

2 “^ v” switch

Radio

This switch has the following features—

To select a preset station:

Quickly push and release the “^” or “v” side of the switch. Do this again to select the next preset station.

To seek a station:

Push and hold the “^” or “v” side of the switch until you hear a beep. Do this again to find the next station. If you push the switch on either side during the seek mode, seeking will be cancelled.

To step up or down the frequency, push and hold the switch even after you hear a beep. When you release from the switch, the radio will begin seeking up or down for a station. Do this again to find the next station.

XM® Satellite Radio—

To select a preset channel, push the “^” or “v” side of the switch. Repeat until a desired channel is found.

CD changer

Use this switch to skip up or down to a different track in either direction.

To select a desired track or file:

Quickly push and release the “^” or “v” side of the switch until the track you want to listen to is set. If you want to return to the beginning of the current track, push the “v” side of the switch once, quickly.

To select a desired disc:

Push and hold the “^” or “v” switch until you hear a beep to change to the next or the previous disc. Repeat this operation until you reach the disc you want to listen to.

Vehicles with rear seat entertainment system —

DVD player

While the DVD player is in operation, the chapter or track can be changed by pushing the “^” or “v” switch.

Bluetooth® audio player

Use this switch to skip up or down to a different track or album in either direction.

To select a desired track:

Quickly push and release the “^” or “v” side of the switch until the track you want to listen to is set. If you want to return to the beginning of the current track, push the “v” side of the switch once quickly.

To select a desired album:

Push and hold “^” or “v” switch until you hear a beep to change to the next or the previous album. Repeat this operation until you reach the album you want to listen to.

USB memory player/iPod® player

Use this switch to skip up or down to a different track, file, album or folder in either direction.

To select a desired track or file:

Quickly push and release the “^” or “v” side of the switch until the track or file you want to listen to is set. If you want to return to the beginning of the current track or file, push the “v” side of the switch once, quickly.

To select a desired album or folder:

Push and hold “^” or “v” switch until you hear a beep to change to the next or the previous album or folder. Repeat this operation until you reach the album or folder you want to listen to.

3 “MODE” switch

Push “MODE” switch to select an audio mode. Each push changes the mode sequentially if the desired mode is ready to use.

To turn the audio/video system on, push the “MODE” switch.

To turn the audio/video system off, push and hold the “MODE” switch until you hear a beep.

Audio/video system operating hints

NOTICE

To ensure correct audio/video system operations:

- *Be careful not to spill beverages over the audio/video system.*
- *Do not put anything other than a compact disc into the slot.*
- *Do not put anything other than an appropriate disc into the CD changer or DVD player.*
- *The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.*

RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with your radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations — Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path — FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering — These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping — If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

AM

Fading — AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference — When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static — AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

XM®

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

iPod® player

About iPod®—

iPod is registered trademark of Apple Inc.

Compatible models—

- iPod® 5th generation Ver. 1.2 or later
- iPod® nano 3rd generation Ver. 1.0 or later
- iPod® nano 2nd generation Ver. 1.1.2 or later
- iPod® nano Ver. 1.2 or later
- iPod® touch Ver. 1.1 or later
- iPod® classic Ver. 1.0 or later

iPhone®, iPod® mini, iPod® shuffle, iPod® photo and 4th generation and earlier models of iPod® are not compatible with this system.

USB memory player

USB memory players that can be used for MP3 and WMA playback.

- USB communication formats: USB 2.0 FS (12 MBPS)
- File formats: FAT 16/32 (Windows®)
- Correspondence class: Mass storage class

CARING FOR YOUR CD CHANGER, DVD PLAYER AND DISCS

- Your CD changer is intended for use with 4.7 in. (12 cm) discs only.
- Extremely high temperatures can keep your CD changer and DVD player from working. On hot days, use the air conditioning to cool the vehicle interior before you use the changer and player.
- Bumpy roads or other vibrations may make your CD changer and DVD player skip.
- If moisture gets into your CD changer and DVD player, you may not play even though they appear to be working. Remove the disc from the changer and player and wait until it dries.

CAUTION

CD changer and DVD player use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the changers and players correctly.



CD changer

- Use only discs marked as shown above. The following products may not be playable on your changer.


Copy-protected CD
CD-ROM

Audio CDs		
		
DVD video discs		
Video CDs		


DVD player

- Use only discs marked as shown above. The following products may not be playable on your player.


SACD
Copy-protected CD
CD-ROM
DVD-R
DVD+R
DVD-RW
DVD+RW
DVD-ROM
DVD-RAM

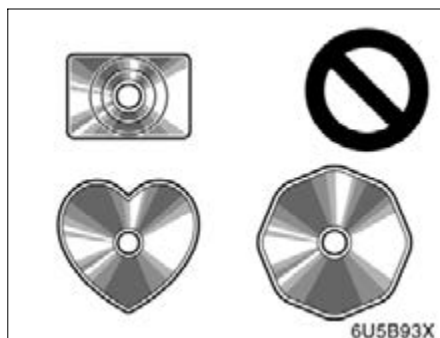


► Special shaped discs

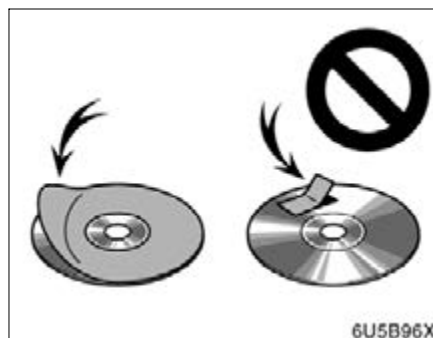

► Labeled discs

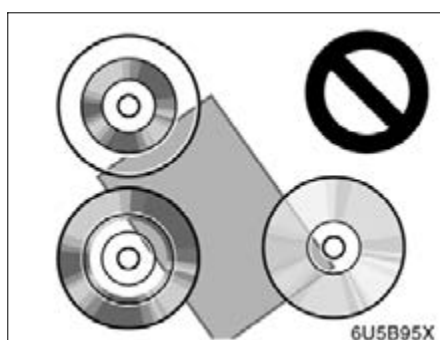


► Transparent/translucent discs

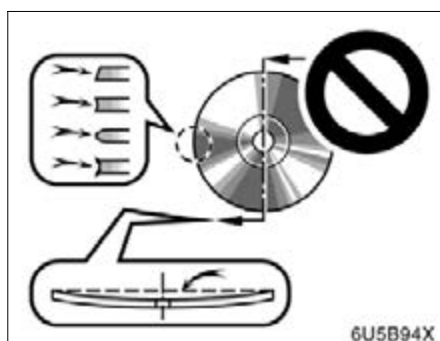

► Low quality discs

NOTICE

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player or changer, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Disc. Do not use Dual Disc because it may cause damage to the player or changer.
- Do not use a disc with protection ring. The use of such disc may damage the player or changer, or it may be impossible to eject the disc.
- If a disc cannot be ejected, do not forcibly take out the disc. Keep pushing the "LOAD/CLOSE" button for approximately 5 seconds and release it. At this time, the audio disc and the map DVD-ROM will be ejected.

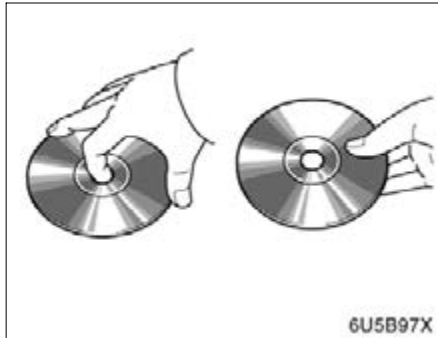

► Correct

► Wrong



6U5B98X

- Handle discs carefully, especially when you are inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when you are not using them. Store them in their plastic cases away from moisture, heat, and direct sunlight.

To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

MP3/WMA FILES

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media® Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.

The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.

- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma).
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- The player can play only the first session using multi-session compatible CDs.
- MP3 player—MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.
- USB memory player—MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3 and Ver. 2.4 formats. The unit cannot track title and artist name in other formats.
- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz.

Sampling frequency

MP3 files for MP3 player:

MPEG 1 LAYER 3—32, 44.1, 48 kHz

MPEG 2 LSF LAYER 3—16, 22.05, 24 kHz

MP3 files for USB memory player:

MPEG 1 AUDIO LAYER 2, 3—32, 44.1, 48 kHz

MPEG 2 AUDIO LAYER 2, 3—16, 22.05, 24 kHz

MPEG 2.5—8, 11.025, 12 kHz

WMA files for WMA player:

Ver. 7, 8, 9 CBR—32, 44.1, 48kHz

WMA files for USB memory player:

Ver. 9—HIGH PROFILE 32, 44.1, 48 kHz

- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.

Playable bit rates

MP3 files for MP3 player:

MPEG1 LAYER3—64 to 320 kbps

MPEG2 LSF LAYER3—64 to 160 kbps

MP3 files for USB memory player:

MPEG 1 AUDIO LAYER 2, 3—32 to 320 kbps

MPEG 2 AUDIO LAYER 2, 3—32 to 160 kbps

MPEG 2.5—32 to 160 kbps

WMA files for WMA player:

Ver. 7, 8 CBR—48 to 192 kbps


Ver. 9 CBR—48 to 320 kbps

WMA files for USB memory player:


Ver. 9 CBR—32 to 320 kbps

- The MP3/WMA player does not play back MP3/WMA files from discs recorder using packet write data transfer (UDF format). Discs should be recorded using "pre-mastering" software rather than packet-write software.
- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).

- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if fast-forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA files.
- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than two levels of folders.
- It is possible to play up to 192 folders or 255 files on one disc.

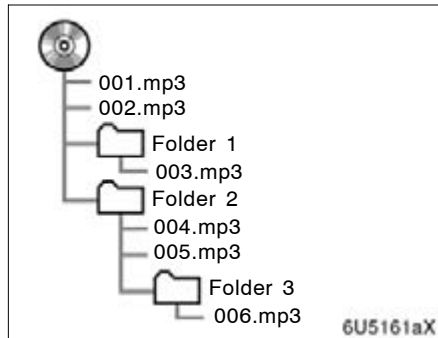

MP3 player (rear seat entertainment system)

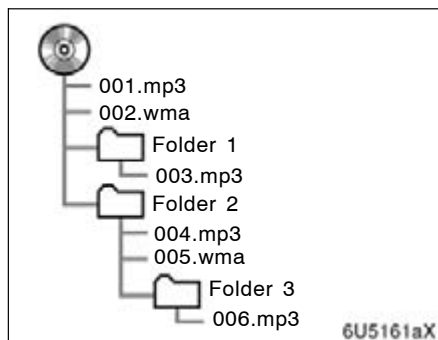

MP3/WMA player (front audio system)

- The play order of the compact disc with the structure shown above is as follows:

MP3 player (rear seat entertainment system)

001.mp3 → 002.mp3 . . . → 006.mp3



MP3/WMA player (front audio system)

001.mp3 → 002.wma . . . → 006.mp3



- MP3 player (rear seat entertainment system)—It is possible to play up to 253 folders on one disc.
- MP3/WMA player (front audio system)—It is possible to play up to 192 folders or 255 files on one disc.
- USB memory player— It is possible to play up to 999 folders or 255 files per folder.
- The order changes depending on the PC and MP3/WMA encoding software you use.

CD-R and CD-RW discs

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

TERMS

Packet write—

This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 Tag—

This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

WMA Tag—

WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.

ISO 9660 format—

This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are two levels of regulations.

Level 1:

The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)

Level 2:

The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

m3u—

Playlists created using “WINAMP” software have a playlist file extension (.m3u).

MP3—

MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA—

WMA (Windows Media® Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8, and 9.

AUDIO/VIDEO SYSTEM

SECTION 7

REAR VIEW MONITOR SYSTEM

Rear view monitor system

- [Rear view monitor system](#) 230

Rear view monitor system

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle while backing up. The image is displayed in reverse on the screen. This allows the image to appear in the same manner as that of the rear view mirror.

To display the rear view image on the screen, the shift lever is in the "R" position when the engine switch is in the "ON" position.

If you move the shift lever out of the R position, the screen returns to the previous screen. Operating another function of the navigation system will display another screen.

The rear view monitor system is a supplement device intended to assist back up. When backing up, be sure to check behind and all around the vehicle visually.



CAUTION

- Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear. Use caution just as you would when backing up any vehicle.
- Never back up while looking only at the screen. The image on the screen is different from actual conditions. Depicted distances between objects and flat surfaces will differ from actual distances. If you back up while looking only at the screen, you may hit a vehicle, a person or an object. When backing up, be sure to check behind and all around the vehicle visually and with mirrors before proceeding.
- Do not use the system when the back door is not completely closed.


- If the back of the vehicle is hit, the position and mounting angle of the camera may change. Be sure to have the camera's position and mounting angle checked at your Toyota dealer.
- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow, or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.
- Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
- Use your own eyes to confirm the vehicle's surroundings, as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle visually and with mirror before proceeding.
- Do not use the system in the following cases:
 - On icy or slick road surfaces, or in snow.
 - On road that are not flat or straight, such as curves or slopes.
 - When using tire chains or emergency tires.

NOTICE

When replacing the tires, please consult your Toyota dealer. If you replace the tires, the area displayed on the screen may change.

● Area displayed on screen


Image is displayed approximately level on screen.

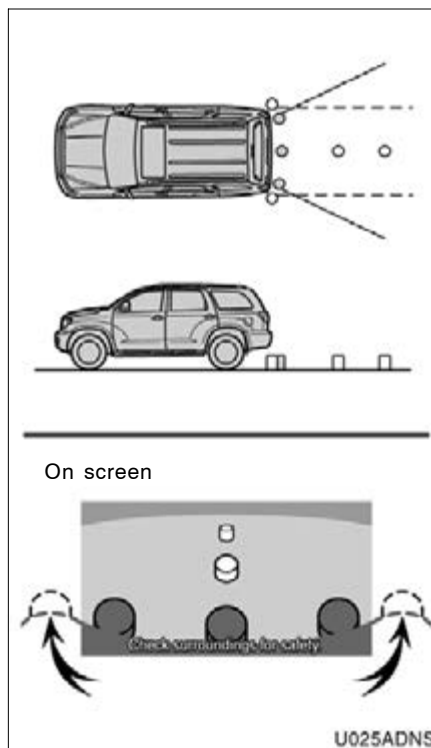

► Corners of bumper


The area covered by the camera is limited. The camera does not detect objects which are close to either corner of the bumper or under the bumper.

REAR VIEW MONITOR SYSTEM

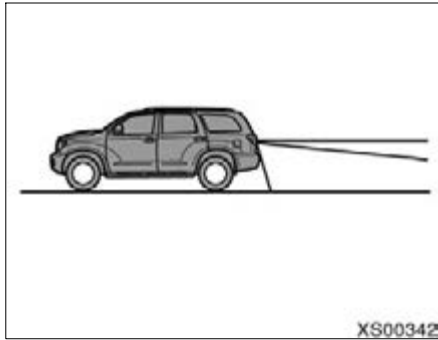

The area displayed on the screen may vary according to vehicle orientation or road conditions.

- The rear view monitor system camera

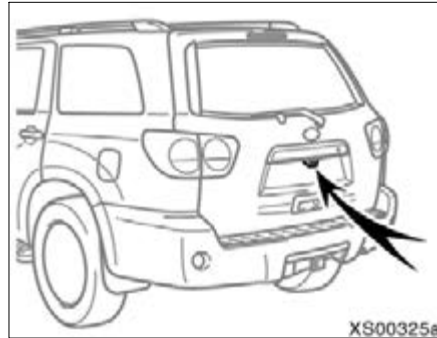

The rear view monitor system camera is located on the back door as shown in the illustration. The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.

In the following cases, it may become difficult to see the images on the screen, even when the system is functioning.

- In the dark (for example, at night)
- When the temperature near the lens is high or low
- When water droplets are adhering to the camera, or when humidity is high (for example, when it rains)
- When foreign matter (for example, snow or mud) is adhering to the camera
- When the camera has scratches or dirt on it
- When the sun or the beam of headlights is shining directly into the camera lens



If a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera, the smear effect* peculiar to the camera may occur.

*: Smear effect—A phenomenon that occurs when a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

REAR VIEW MONITOR SYSTEM

SECTION 8

SETUP


Setup

- General settings 236
(Used for language selection and the on/off settings of operation sounds and automatic screen change.)
- Clock settings 241
(Used for changing time zones and the on/off settings of daylight saving time.)
- Voice settings 243
(Voice guidance can be set.)
- Navigation settings 245
(“Home” and “Preset Destinations” can be set and edited.)
- Detailed navigation settings 245
(Average cruising speed, displayed screen contents, and POI icon categories can be set.)
- Telephone settings 254
(Bluetooth® phones can be registered.)
- Audio settings 293
(Settings are available for portable audio devices and Bluetooth® audio devices players.)
- Vehicle settings 300
(Vehicle information can be set.)

SETUP

General settings


Used for language selection and the on/off settings of operation sounds and automatic screen change.

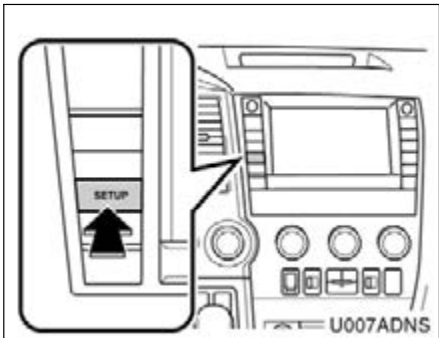

1. Push the “SETUP” button.





2. Touch “General”.

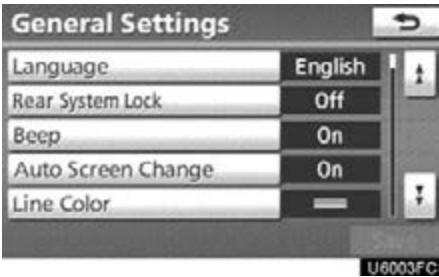

3. Touch the items to be set.

4. Touch “Save”.

SCREENS FOR GENERAL SETTINGS

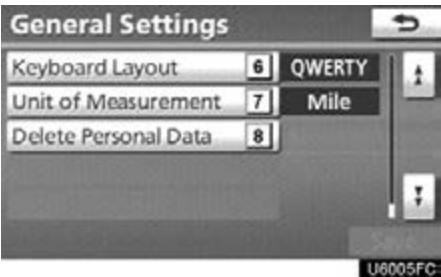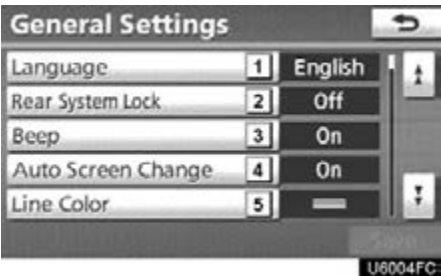

On this screen, the following functions can be performed.


No.	Function
1	You can change the language. (See “● Selecting a language” on page 237.)
2	Rear system lock* can be set to “On” or “Off”. (See “● Rear system lock” on page 238.) *: Vehicles with rear seat entertainment system
3	“On” or “Off” can be selected to sound beeps.
4	“On” or “Off” can be selected for automatic screen changes from the audio screen to the map. When “On” is selected, the screen will automatically return to the map from the audio screen after 20 seconds.

No.	Function
5	Line color can be changed. (See “● Selecting the line color” on page 238.)
6	Keyboard layout can be changed. (See “● Selecting a keyboard layout” on page 239.)
7	Distance unit can be changed. (See “● Unit of measurement” on page 240.)
8	The personal data can be deleted. (See “● Delete personal data” on page 240.)


● **Selecting a language**

You can change the language.

1. Push the “SETUP” button.
2. Touch “General” on the “Setup” screen.

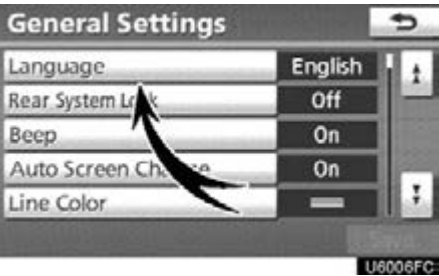

3. Touch “Language”.

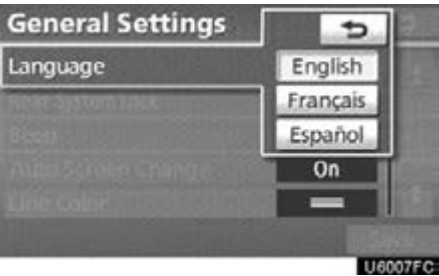


4. Touch the desired button.
The previous screen will be displayed.
5. Touch “Save”.

SETUP


- **Rear system lock (with rear seat entertainment system)**

If the vehicle is equipped with the rear seat entertainment system, the rear seat entertainment system can be locked to prevent rear passengers from operating the entertainment system.

1. Push the “SETUP” button.
2. Touch “General” on the “Setup” screen.

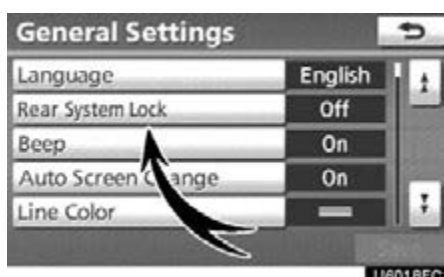

3. Touch “Rear System Lock”.

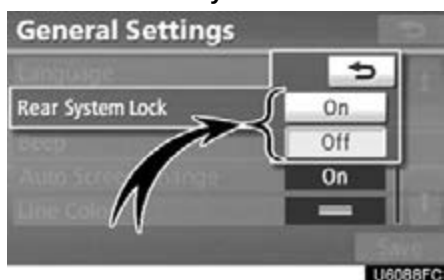

4. Select “On” or “Off” and then touch “Save”.


“On”: The rear passengers cannot operate the rear seat entertainment system. Only front passengers can operate the system.

“Off”: Both the front and rear passengers can operate the rear seat entertainment system.


- **Selecting the line color**

Line color can be changed.


1. Push the “SETUP” button.
2. Touch “General” on the “Setup” screen.

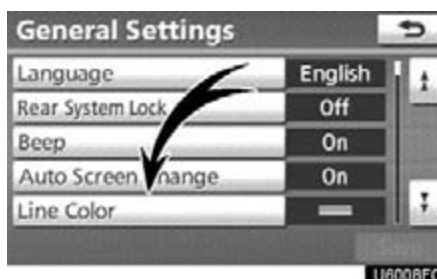

3. Touch “Line Color”.

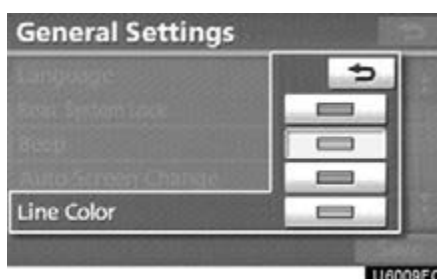

4. Touch the desired color.

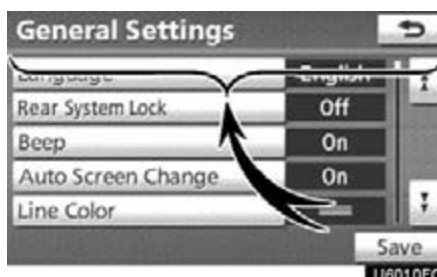

The line color will be changed.


5. Touch “Save”.

- **Selecting a keyboard layout**


Keyboard layout can be changed.

1. Push the “SETUP” button.
2. Touch “General” on the “Setup” screen.

Then touch  to display page 2 of the “General Settings” screen.

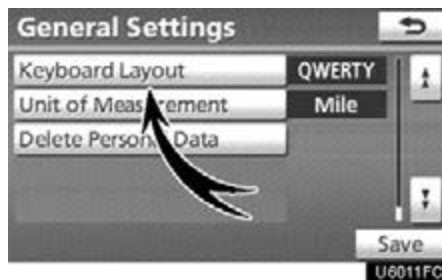

3. Touch “Keyboard Layout”.

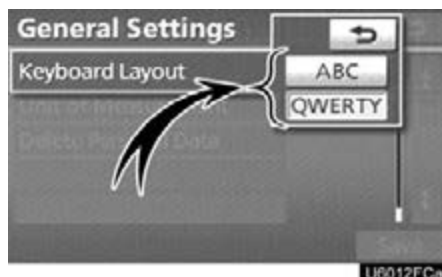

4. Touch “ABC” or “QWERTY” of “Keyboard Layout” to choose the keyboard layout.

5. Touch “Save”.

LAYOUT TYPE



- “ABC” type



- “QWERTY” type


SETUP

- **Unit of measurement**


Distance unit can be changed.

1. Push the “**SETUP**” button.
2. Touch “**General**” on the “**Setup**” screen.

Then touch  to display page 2 of the “General Settings” screen.

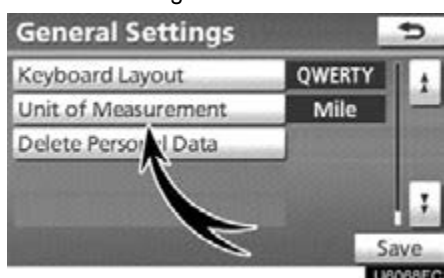

3. Touch “Unit of Measurement”.

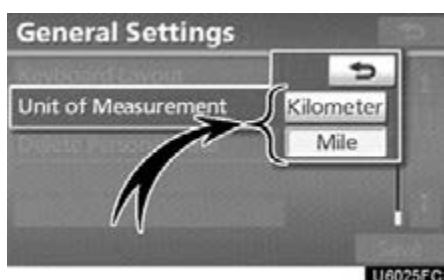

4. Select “Kilometer” or “Mile”.
5. Touch “Save”.

INFORMATION

This function is available only in English or Spanish. To switch language, see “● Selecting a language” on page 237.

- **Delete personal data**


The following personal data can be deleted or returned to their default settings:

- Maintenance conditions
- Maintenance information “off” setting
- Address book
- Areas to avoid
- Previous points
- Route trace
- Phonebook data
- Call history data
- Speed dial data
- Voice tag data
- Bluetooth® phone data
- Phone volume setting
- Details phone setting


This function is available only when the vehicle is not moving.

1. Push the “SETUP” button.
2. Touch “General” on the “Setup” screen.


Then touch  to display page 2 of the “General Settings” screen.

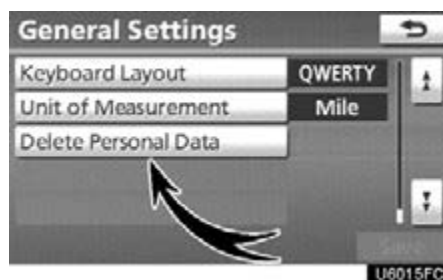

3. Touch “Delete Personal Data”.

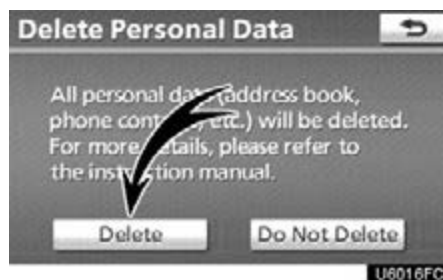


4. Touch “Delete”.

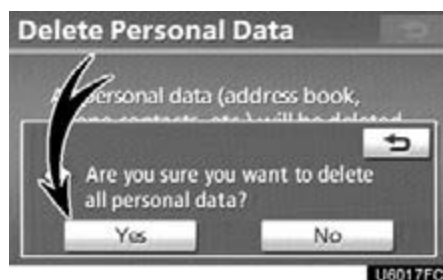

5. Touch “Yes”.

Clock settings

Used for changing time zones and the on/off settings of daylight saving time.

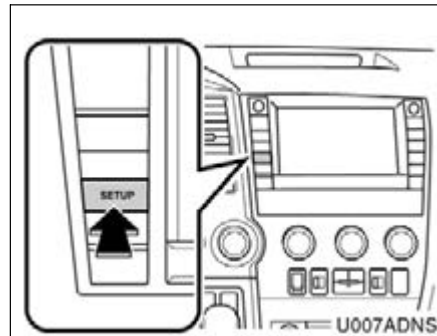

1. Push the “SETUP” button.




2. Touch “Clock”.



3. Touch the items to be set.
4. Touch “Save”.

SCREEN FOR CLOCK SETTINGS

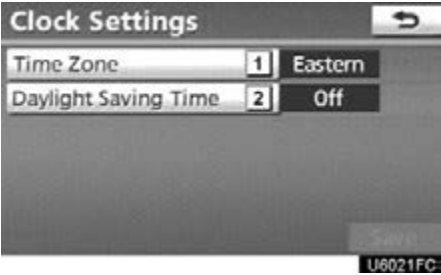


On this screen, the following functions can be performed.

No.	Function
1	Time zone can be changed. (See “● Time zone” on page 242.)
2	“On” or “Off” can be selected for daylight savings time.

● Time zone

A time zone can be selected and GMT can be set.

1. Push the “SETUP” button.
2. Touch “Clock” on the “Setup” screen.

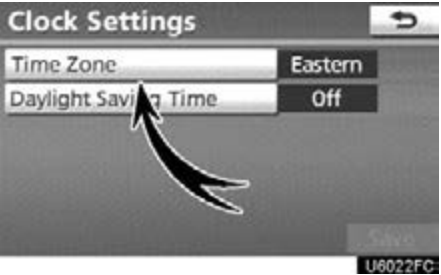

3. Touch “Time Zone”.



4. Touch the desired time zone.


If you touch “Other”, adjust the zone manually.



5. Touch “OK”.

Voice settings


Voice guidance can be set.

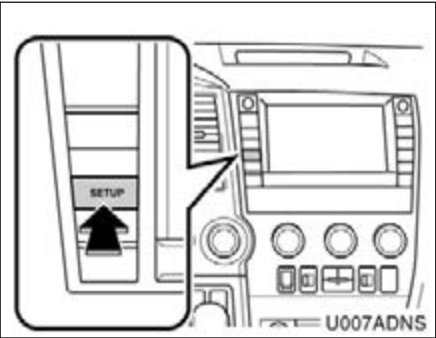

1. Push the “SETUP” button.




2. Touch “Voice”.

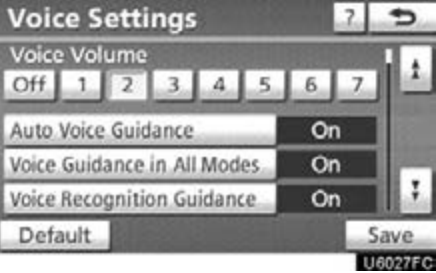

3. Touch the items to be set.

4. Touch “Save”.

SCREEN FOR VOICE SETTINGS

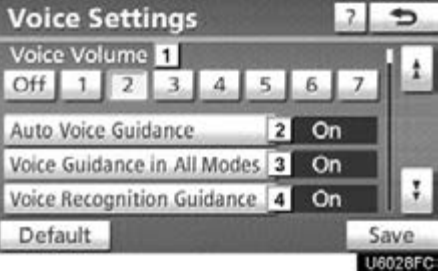

On this screen, the following functions can be performed.


No.	Function
1	The voice guidance volume can be adjusted or switched off. (See “● Voice volume” on page 244.)
2	Voice guidance during route guidance can be set to “On” or “Off”.
3	Voice guidance during audio system use can be set to “On” or “Off”.
4	Voice recognition talkback can be set to “On” or “Off”.
5	When “On” is selected, the speech command system can be operated without pressing the talk switch more than once.
6	When using the traffic information function, voice guidance can be set to “On” or “Off”.

SETUP

- **Voice volume**

The voice guidance volume can be adjusted or switched off.

1. Push the **"SETUP"** button.
2. Touch **"Voice"** on the **"Setup"** screen.

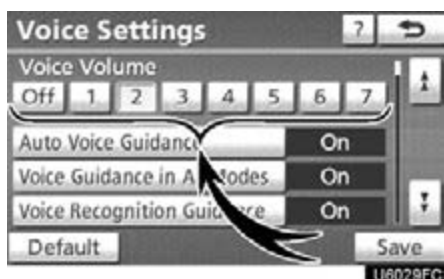

3. Select the desired level by touching the number.

If voice guidance is not needed, touch **"Off"** to disable the feature.

When selected the number or **"Off"** will be highlighted.

4. Touch **"Save"**.


- **Traffic voice guidance**

You can receive congestion information through voice guidance while being guided to your destination.

To turn the "Traffic Voice Guidance" on:

1. Push the **"SETUP"** button.
2. Touch **"Voice"** on the **"Setup"** screen.

Then touch  to display page 2 of the "Voice Settings" screen.

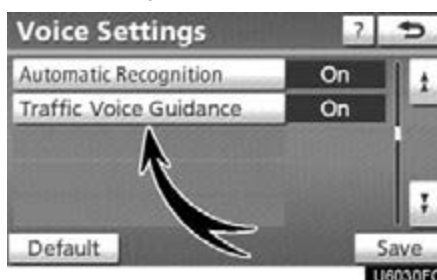

3. Select **"On"** of the **"Traffic Voice Guidance"**.
4. Touch **"Save"**.

INFORMATION

- *This function is available only in English. To select English, see "● Selecting a language" on page 237.*
- *When the "Traffic Information" indicator is dimmed, "Auto Avoid Traffic", "Traffic Voice Guidance" and "Show Free Flowing Traffic" will not operate.*

Navigation settings

Points or areas on the map can be registered.




On this screen, the following operations can be performed.


No.	Function
1	Sets home (See page 103.)
2	Sets preset destinations (See page 105.)
3	Sets address book (See page 108.)
4	Sets area to avoid (See page 114.)
5	Deletes previous destinations (See page 119.)
6	Detailed navigation settings (See page 245.)

Detailed navigation settings

Average cruising speed, displayed screen contents, and POI icon categories can be set.

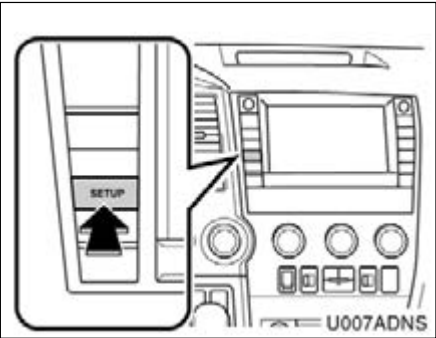


1. Push the “SETUP” button.

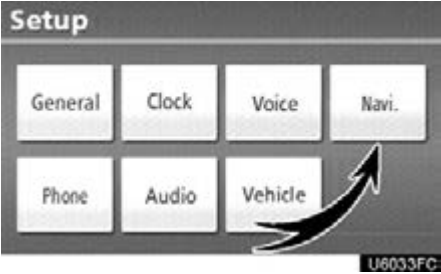

2. Touch “Navi.”.





3. Touch “Detailed Navi. Settings”.

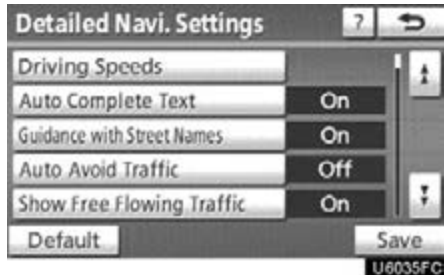

4. Touch the items to be set.
5. Touch "Save".

SCREENS FOR NAVIGATION SETTINGS

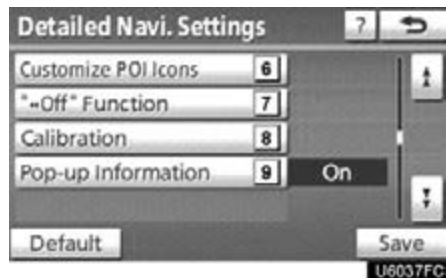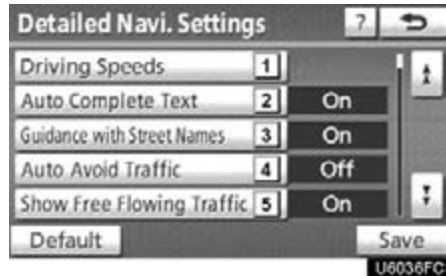

On this screen, the following functions can be performed.


No.	Function
1	Average cruising speed can be set. (See "● Driving speeds" on page 247.)
2	The automatic input function can be set to "On" or "Off".
3	During route guidance, voice guidance for the next street name can be set to "On" or "Off".
4	"On" or "Off" can be selected to display cautionary messages when the route includes traffic restrictions or seasonally restricted roads.
5	When "On" is selected, freely flowing traffic can be shown with the arrow.

No.	Function
6	Displayed POI icon categories can be set. (See “● POI category change (Select POI icons)” on page 250.)
7	Buttons displayed on the map screen when “◀◀Off” is touched can be set. (See “● Screen layout function (◀◀Off function)” on page 251.)
8	The current vehicle position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted. (See “● Current position/tire change calibration” on page 251.)
9	Display of pop-up information can be set to “On” or “Off”. (See “● Pop-up information” on the page 253.)

● Driving speeds

The speed that is used for the calculation of the estimated travel time and the estimated arrival time can be set.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Detailed Navi. Settings” on the “Navigation Settings” screen.

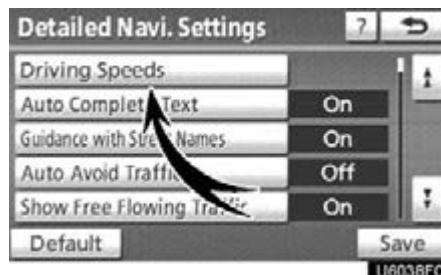

4. Touch “Driving Speeds”.



5. Touch ◀ or ▶ to set the average vehicle speeds for “Residential”, “Main Streets”, and “Freeways”.

To set the default speeds, touch “Default”.

6. After setting of the desired speeds is completed, touch “Save”.

INFORMATION


- *The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.*
- *The time shown on the screen may vary greatly depending on progress along the route, which may be affected by conditions such as traffic jams and construction work.*
- *It is possible to display up to 99 hours 59 minutes.*

• Auto avoid traffic

The guidance route automatically changes to another route to avoid heavy congestion.

To turn the "Audio Avoid Traffic" on:

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Detailed Navi. Settings" on the "Navigation Settings" screen.

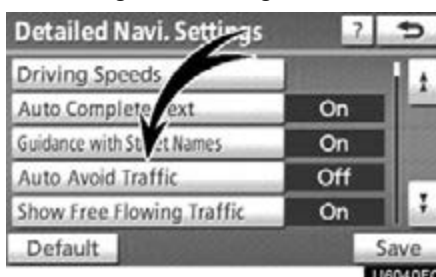

4. Touch "On" of the "Auto Avoid Traffic".

5. Touch "Save".



When congestion information about the guidance route has been received, a screen will appear to ask you whether to reroute to avoid the congestion.

If you wish to reroute, touch "Yes". Another route to allow you to avoid the congestion will appear.

If you do not wish to reroute, touch "No".

INFORMATION


When the “Traffic Information” indicator is dimmed, “Auto Avoid Traffic”, “Traffic Voice Guidance” and “Show Free Flowing Traffic” will not operate.

● **Show free flowing traffic**

Freely flowing traffic is shown with the arrow.

To turn the “Show Free Flowing Traffic” on:

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Detailed Navi. Settings” on the “Navigation Settings” screen.

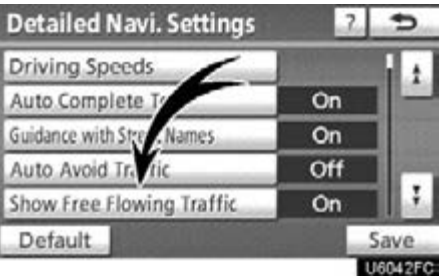

4. Select “On” of the “Show Free Flowing Traffic”.
5. Touch “Save”.

INFORMATION

When the “Traffic Information” indicator is dimmed, “Auto Avoid Traffic”, “Traffic Voice Guidance” and “Show Free Flowing Traffic” will not operate.


SETUP

- **POI category change
(Select POI icons)**

Select from among the 6 icons displayed on the “Customize POI Icons” screen, so that setting of the icons to be displayed on the map screen can be done easily.

1. Push the “**SETUP**” button.
2. Touch “**Navi.**” on the “**Setup**” screen.
3. Touch “**Detailed Navi. Settings**” on the “**Navigation Settings**” screen.

Then touch  to display page 2 of the “Detailed Navi. Settings” screen.

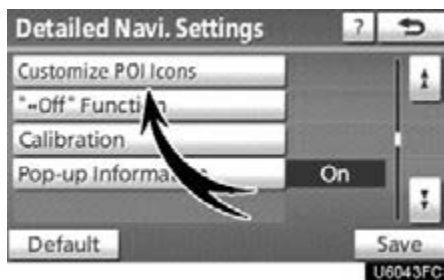

4. Touch “**Customize POI Icons**”.



5. Touch the category button to be changed.



6. Touch the desired group.

If the desired POI category is not on the screen, touch “**List All Categories**” to list all POI categories.




7. Touch the desired category.
8. Touch “**OK**”.

- **Screen layout function (“◀◀Off” function)**

Each touch screen button and current street name on the map screen can be displayed or hidden.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Detailed Navi. Settings” on the “Navigation Settings” screen.

Then touch  to display page 2 of the “Detailed Navi. Settings” screen.

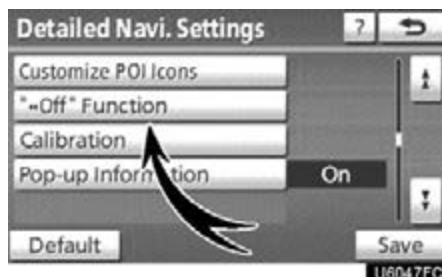

4. Touch “◀◀Off Function”.



5. Touch the button to be turned off. The button becomes dimmed.

To set the default, touch “Default”.


6. Touch “Save”.

- **Current position/tire change calibration**


The current vehicle position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Detailed Navi. Settings” on the “Navigation Settings” screen.

Then touch  to display page 2 of the “Detailed Navi. Settings” screen.

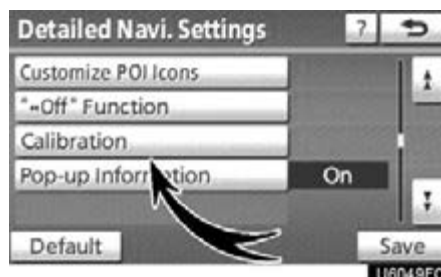

4. Touch “Calibration”.

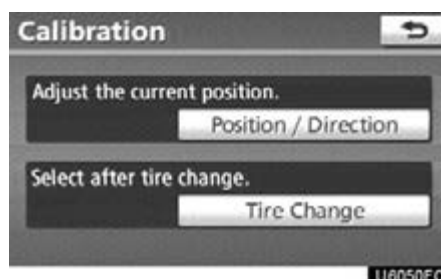

5. Touch the desired button.


INFORMATION

For additional information on the accuracy of a current vehicle position, see “Limitations of the navigation system” on page 308.

SETUP

POSITION/DIRECTION CALIBRATION

When driving, the current vehicle position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, you can manually adjust the current vehicle position mark.

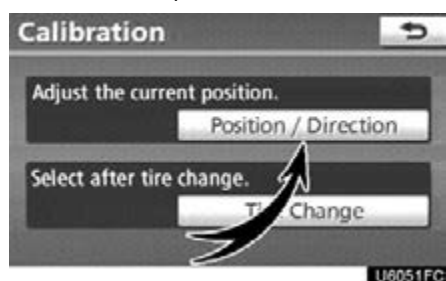

1. Touch "Position / Direction".



2. Touch the 8 directional touch screen button to move the cursor  to the desired point on the map.
3. Touch "OK".




4. Touch either the  or  to adjust the direction of the current vehicle position mark.
5. Touch "OK".

The map will be displayed.

TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust the miscalculation caused by the circumference difference between the old and new tires. If this procedure is not performed when the tires are replaced, the current vehicle position mark may be incorrectly displayed.

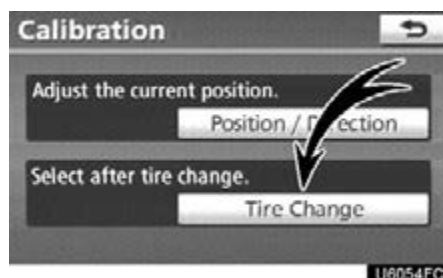

To perform a distance calibration procedure, touch "Tire Change" on the "Calibration" screen.


The message appears and the quick distance calibration is automatically started. A few seconds later, a map will be displayed.

● Pop-up information


When the "Pop-up information" is turned on, the pop-up information will be displayed.

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Detailed Navi. Settings" on the "Navigation Settings" screen.

Then touch  to display page 2 of the "Detailed Navi. Settings" screen.

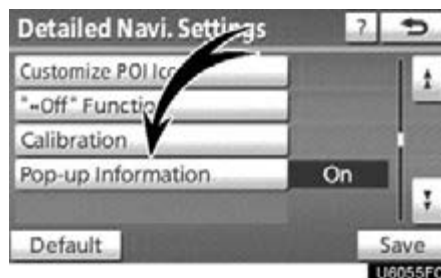


4. Touch "Pop-up Information".

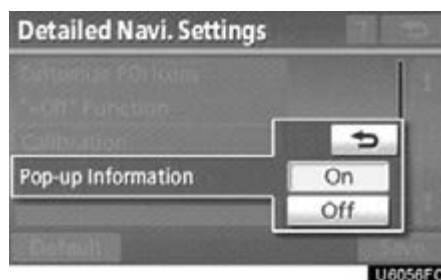


5. Touch "On" or "Off".
6. Touch "Save".

SETUP

When the “Pop-up Information” is turned off, the following messages will not be displayed.

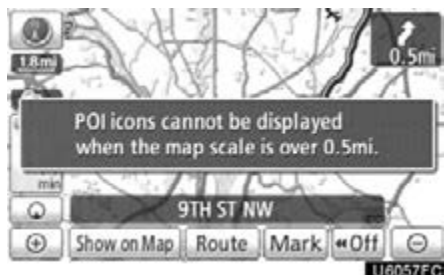


This message appears when the system is in the POI mode and the map scale is over 0.5 miles (1 km).

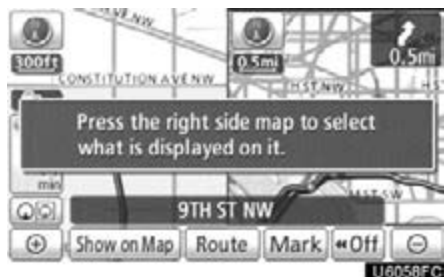


The message appears when the map is switched to the twin map screen mode.

Telephone settings —


“Telephone settings” can be changed on the “Phone settings” screen.

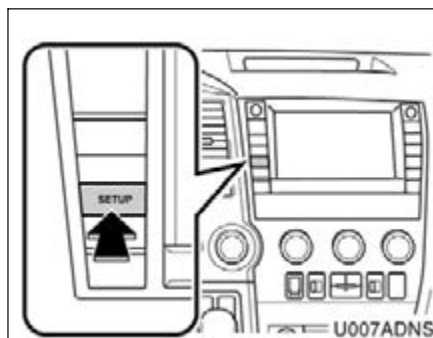

1. Push the “SETUP” button.

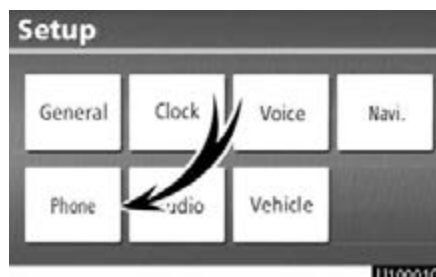


2. Touch “Phone”.

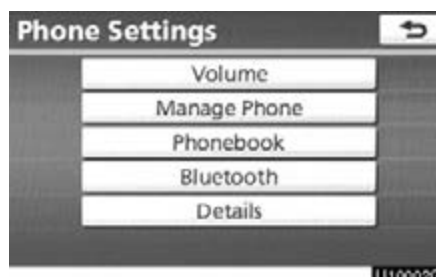


Please refer to the following pages for each setting.

— Volume setting

You can adjust the voice and ring volume.

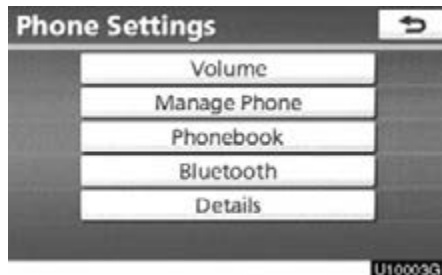

1. Touch "Volume".

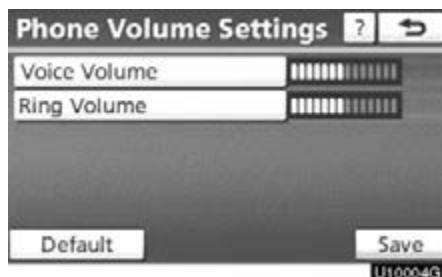


2. Change each setting according to the following procedures.
3. When you complete all settings, touch "Save".

Automatic volume settings for high speed

The system will automatically increase the volume by one step up when the speed exceeds 50 mph (80 km/h).

- Voice volume setting


1. Touch "Voice Volume".

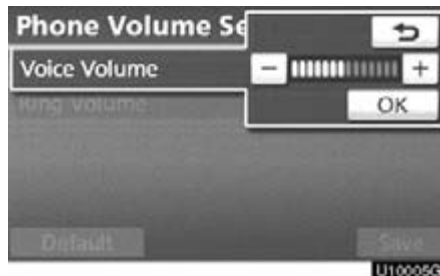

2. Touch "—" or "+" to adjust the voice volume.
3. Touch "OK".

- Ring volume setting

1. Touch "Ring Volume".

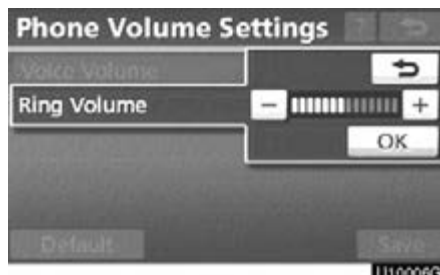

2. Touch "—" or "+" to adjust the ring volume.
3. Touch "OK".

SETUP

- **Initializing the settings**

You can initialize the settings.

1. Touch "Default".




2. Touch "Yes".

— Manage phone

"Manage phone" is accessed from the "Connect Phone" screen.

1. Push the "SETUP" button.
2. Touch "Phone".

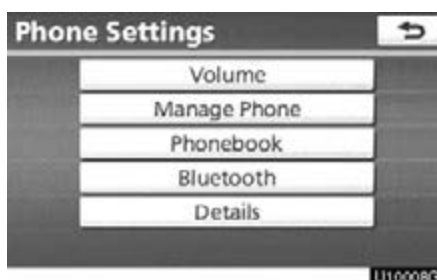

3. Touch "Manage Phone".



Please refer to the following pages for each setting.

● Registering a Bluetooth® phone



1. Touch “(add new)” to register your cellular phone to the system.



2. When this screen is displayed, input the passcode displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, touch “Cancel”.



3. When the connection is completed, this screen is displayed.

You do not need to enter the phone in case of using the same one.



When this screen is displayed, follow the guidance on the screen to try again.

SETUP

When another Bluetooth® device is connected



When another Bluetooth® device is currently connected, this screen is displayed. If you want to disconnect it, touch “Yes”.

INFORMATION

When you register your phone, Bluetooth® audio will disconnect. It will reconnect automatically when you finish registration. It will not be reconnected depending on the phone you are using.

You can also register a new Bluetooth® phone in the following way.


1. Push the “SETUP” button.
2. Touch “Phone”.
3. Touch “Manage Phone”.



4. Touch “Options”.



5. Touch “New Phone”.

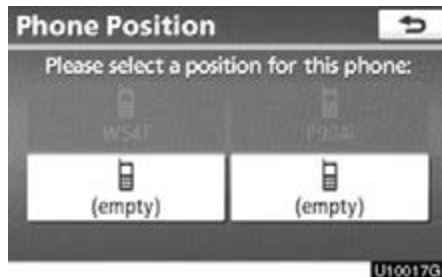

6. Touch “(empty)” to register your cellular phone to the system.

The following operations are the same as the operation after you touch “(add new)”.


- **Selecting a Bluetooth® phone**

In case you register more than one Bluetooth® phone, you need to choose a favorite one.

You can select the Bluetooth® phone from a maximum of 4 numbers.

“(add new)” is displayed when you have not registered a Bluetooth® phone yet.

Although you can register up to 4 Bluetooth® phones in the system, only one Bluetooth® phone can function at a time.

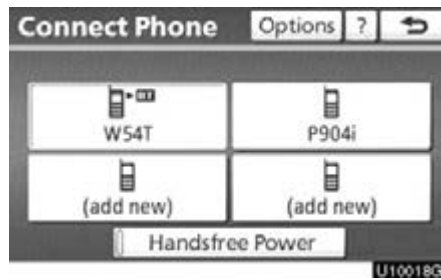

1. **Select the phone to connect.**

The Bluetooth® mark is displayed when you connect the phone.

SETUP



2. The “Connect Bluetooth*” screen is displayed.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



3. When the result message is displayed, you can use the Bluetooth® phone.

When you connect the phone while Bluetooth® audio is playing



This screen is displayed, and the Bluetooth® audio will stop temporarily.


When another Bluetooth® device is connected



When another Bluetooth® device is currently connected, this screen is displayed. If you want to disconnect it, touch “Yes”.

Setting the handsfree power

You can select the state of “Handsfree Power”.

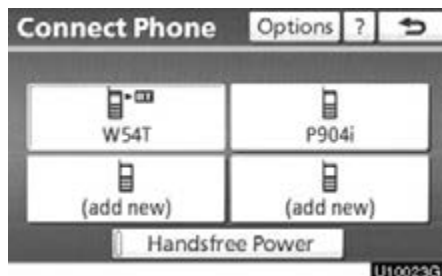

The state changes between “On” and “Off” every time you touch “Handsfree Power”.

For the “Handsfree Power”, see “Changing the handsfree power” on page 286.

● Editing the Bluetooth® phone

You can see the information of the Bluetooth® phone on the system or edit.

“Device Name”


..... The name of Bluetooth® phone which is displayed on the screen. You can change it into a desired name.

If you change a device name, the name registered in your cellular phone is not changed.

“Device Address”

..... The address peculiar to the system. You cannot change it.

If you have registered two Bluetooth® phones with the same device name and you cannot distinguish one from the other, refer to it.

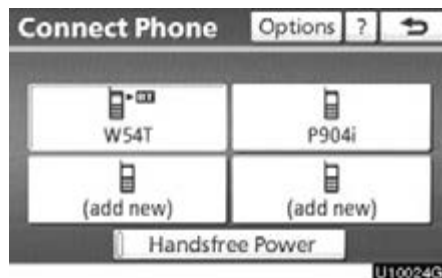


1. Touch “Options”.



2. Touch “Edit Phones”.

SETUP

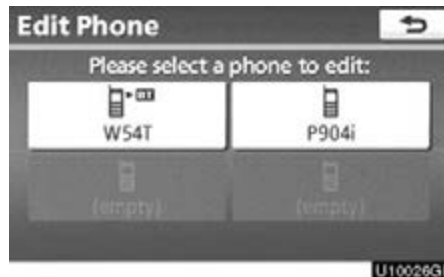


3. Select the phone to edit.



4. This screen is displayed.

If you want to change the device name, touch "Edit".

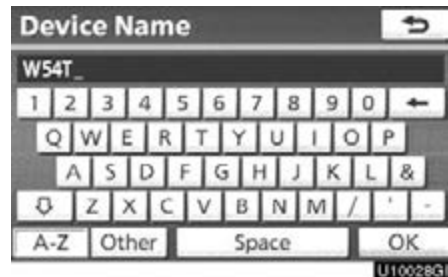


5. Use the software keyboard to input the device name.



6. Confirm the device name and touch "OK".


• Deleting a Bluetooth® phone

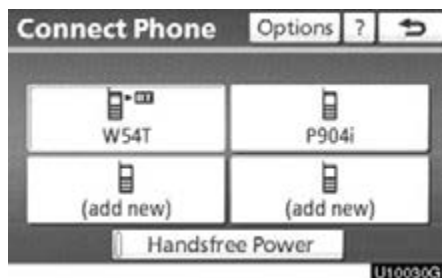

1. Touch "Options".



2. Touch "Remove Phones".

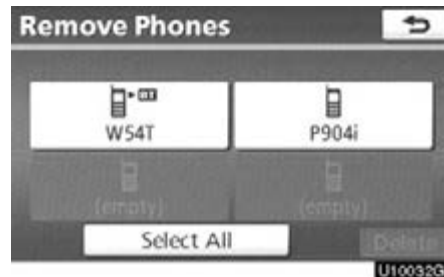

3. Select the desired phone or touch "Select All", then touch "Delete".

You can select multiple phones and delete them at the same time.



4. Touch "Yes".

INFORMATION

When you delete a Bluetooth® phone, the phonebook data will be deleted at the same time.

- By voice recognition



You can operate "Connect Phone" by giving a command.

"Connect Phone" includes "Select Phone", "Add New Phone" and "Handsfree Power Off" (On).

The operating procedure is similar to other voice recognition. (For the operation of voice recognition, see "Speech command system" on page 44.)

When you select the command of "Add New Phone", you must carry out the following operation on the screen.


— Phonebook

INFORMATION


Phonebook data is managed for every registered phone. When another phone is connecting, you can not read the registered data.

"Phonebook" is accessed from the "Phonebook Settings" screen.

1. Push the "SETUP" button.
2. Touch "Phone".

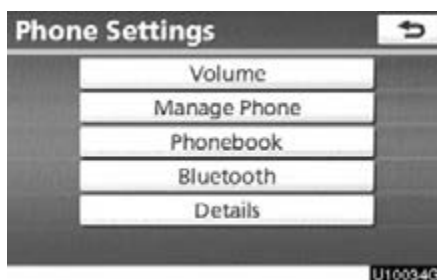

3. Touch "Phonebook".

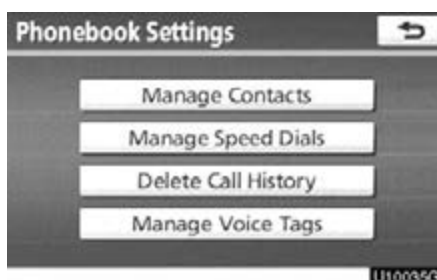


Please do each setting from this screen.

— Setting the phonebook

“Setting the phonebook” is accessed from the “Contacts” screen.

1. Push the “SETUP” button.
2. Touch “Phone”.
3. Touch “Phonebook”.

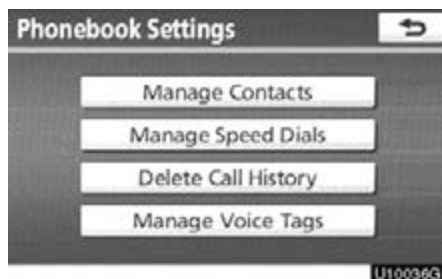


4. Touch “Manage Contacts”.



Please refer to the following pages for each setting.

You can also display the “Contacts” screen in the following way.

1. Push the “INFO/PHONE” button.
2. Touch “Phone”.
3. Touch “Contacts”.

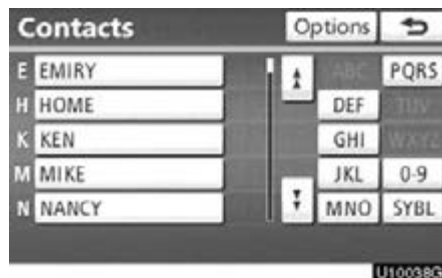

4. Touch “Options”.




5. Touch “Manage Contacts”.


• Transferring a phone number

You can transfer the phone numbers in your Bluetooth® phone to the system. The phonebook manages a maximum of 4 phonebooks in all. Up to 1000 person's data (up to 3 numbers a person) can be registered in total of phonebooks.

Transfer it while the engine is running.

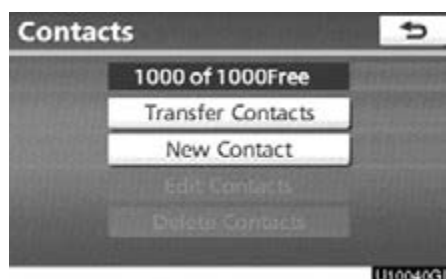

1. Touch "Transfer Contacts".

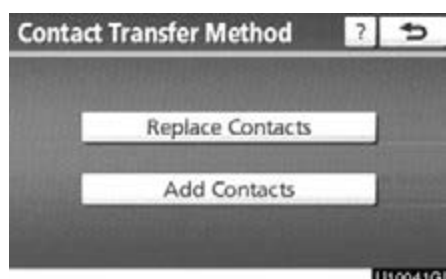

2. Touch "Replace Contacts" or "Add Contacts".

In case that the phonebook contains phonebook data, this screen is displayed.



3. Transfer the phonebook data to the system using the Bluetooth® phone.

This screen appears while transferring. To cancel it, touch "**Cancel**". If the transferring is interrupted on the way, the phonebook data transferred until then can be memorized in the system.

When you have touched "Replace Contacts":

If your cellular phone does not support PBAP or OPP service, you can not use this function.

If your phone supports PBAP service, you can transfer the phonebook data without operating your phone.

If your phone does not support PBAP service, you must transfer the phonebook data by operating your phone.

When you have touched "Add Contacts":

If your cellular phone does not support OPP service, you can not use this function.

You can transfer the phonebook data only by operating your phone.



4. In case that you have touched “Add Contacts”, this screen is displayed.

If you want to transfer another phonebook, touch “Yes”.



When this screen is displayed, try the transfer operation again.

When another Bluetooth® device is connected



When another Bluetooth® device is currently connected, this screen is displayed.

If you want to disconnect it, touch “Yes”.

INFORMATION


Bluetooth® audio will disconnect during transfer on phonebook data. In this case, it will reconnect automatically when data transfer finishes. (It will not be reconnected depending the phone you are using.)

SETUP

- **Registering the phonebook data**
You can register the phonebook data.
Up to 3 numbers per person can be registered.



1. Touch "New Contact".

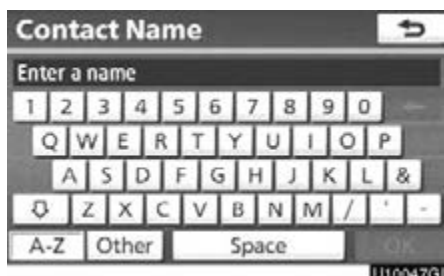

2. Use the software keyboard to input the name and touch "OK".



3. Input the phone number and touch "OK".

If you want to use the tone signal after the phone number, input the tone signal too.



4. Select the phone type.



5. When two or less numbers in total are registered to this contact, this screen is displayed.


When you want to add a number to this contact, touch "Yes".

- Editing the phonebook data

You can register the phone number in "Phone#1", "Phone#2" and "Phone#3" separately.



1. Touch "Edit Contacts".

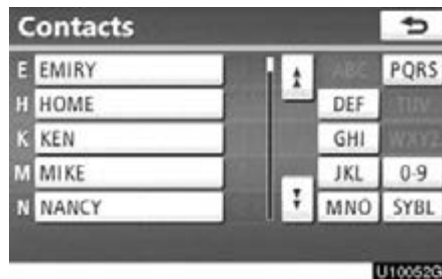

2. Select the data you want to edit.



3. Touch "Edit" for the desired name or number.
4. Edit the name or the number. (See "● Registering the phonebook data" on page 268.)
5. When you complete the edit, touch "Save".


You can also display the "Edit Contact" screen in the following ways.

From "Contact Data" screen

1. Push the "INFO/PHONE" button.
2. Touch "Phone".
3. Touch "Contacts".
4. Select the desired data from the list.



5. Touch "Options".

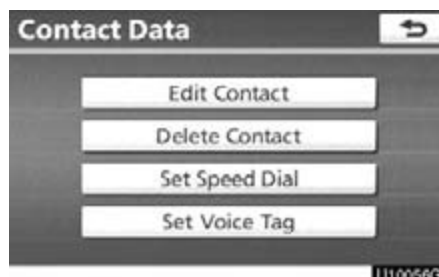


6. Touch "Edit Contact".

From "Call History" screen

1. Push the "INFO/PHONE" button.
2. Touch "Phone".
3. Touch "Call History".
4. Select the desired number from the list.



5. Touch "Add Contact" or "Update Contact".

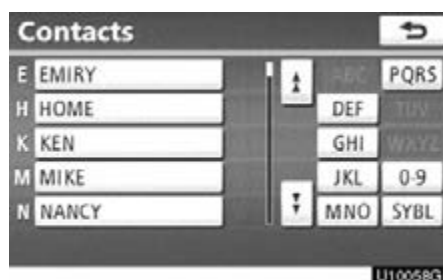

6. In case that you have touched "Update Contact", this screen is displayed. Select the desired data from the list.

- Deleting the phonebook data

You can delete the data.

When you release your car, delete all your data on the system.



1. Touch "Delete Contacts".



2. Select the desired data or touch "Select All", then touch "Delete".

You can select multiple data and delete them at the same time.




3. Touch "Yes".

You can also delete it in the following way.

1. Push the "INFO/PHONE" button.
2. Touch "Phone".
3. Touch "Contacts".
4. Select the desired data from the list.



5. Touch "Options".

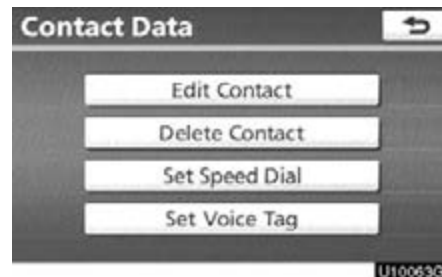

6. Touch "Delete Contact".



7. Touch "Yes".


INFORMATION

When you delete a Bluetooth® phone, the phonebook data will be deleted at the same time.

— Speed dials setting

"Speed dials setting" is accessed from the "Speed Dials" screen.

1. Push the "SETUP" button.
2. Touch "Phone".
3. Touch "Phonebook".

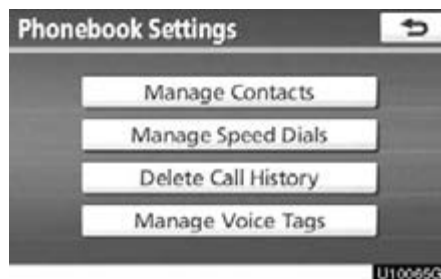

4. Touch "Manage Speed Dials".



Please refer to the following pages for each setting.

SETUP

You can also display the “Speed Dials” screen in the following way.

1. Push the “INFO/PHONE” button.
2. Touch “Phone”.
3. Touch “Speed Dials”.




4. Touch “Options”.

- Registering the speed dial


You can register the desired phone number from phonebook. Up to 18 numbers per phone can be registered.




1. Touch “New Speed Dial”.

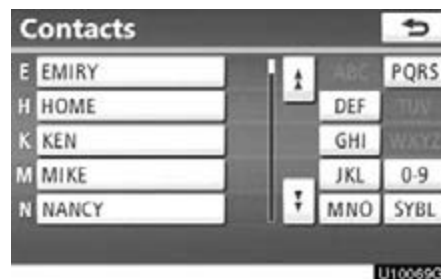

2. Select the data you want to register.

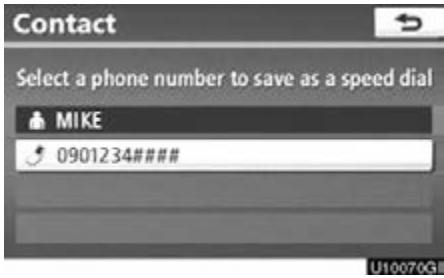

3. Touch the desired phone number.

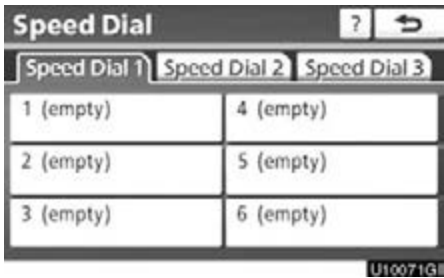

4. Touch the touch-screen button you want to register in.



5. If you select a touch-screen button you registered before, this screen is displayed.

Touch "Yes" if you want to replace it.




6. When this screen is displayed, the operation is complete.

SETUP

You can also register the speed dial in the following ways.

From “Speed Dial” screen


1. Push the “INFO/PHONE” button.
2. Touch “Phone”.
3. Touch “Speed Dials”.

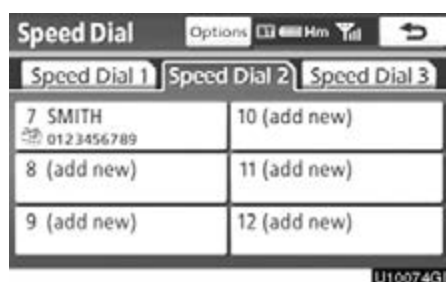

4. Touch “(add new)”.



5. Touch “Yes” to set new speed dial.

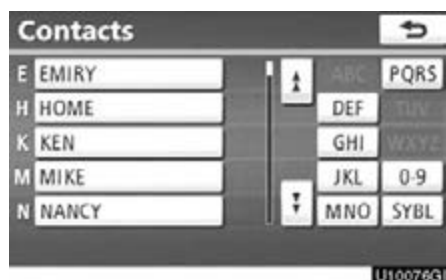

6. Select the data you want to register.




7. Touch the desired phone number.

From "Contact Data" screen


1. Push the "INFO/PHONE" button.
2. Touch "Phone".
3. Touch "Contacts".
4. Select the desired data from the list.



5. Touch "Options".

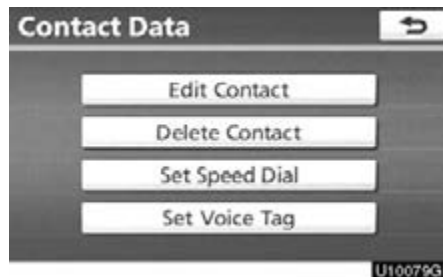

6. Touch "Set Speed Dial".

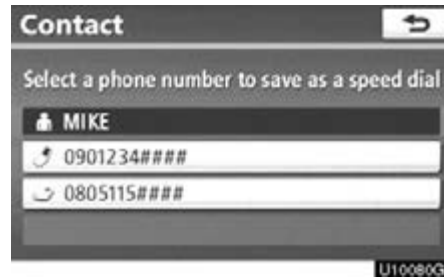

7. This screen is displayed.

The following operations are the same as the operation when you operate it from the "SETUP" button.


SETUP

- **Editing the speed dial**

You can edit the speed dial.




1. Touch "Edit Speed Dials".

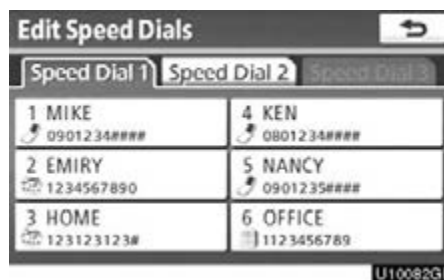

2. Touch the touch-screen button you want to edit.



3. Touch "Edit".

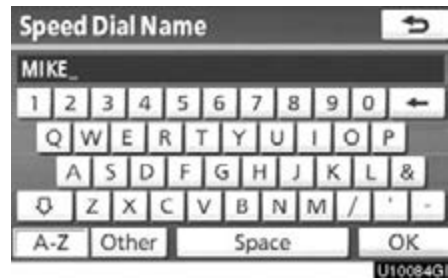

4. Use the software keyboard to input the name.




5. Touch "Save".

- **Deleting the speed dial**
You can delete the speed dial.



3. Touch "Yes".

1. Touch "Delete Speed Dials".

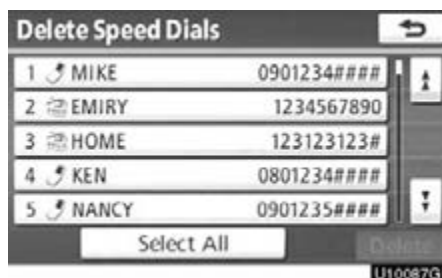


2. Select the desired data or touch "Select All", then touch "Delete".


You can select multiple data and delete them at the same time.

— Deleting call history


You can delete the call history.

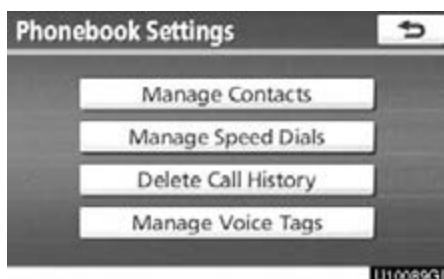

1. Touch "Delete Call History".

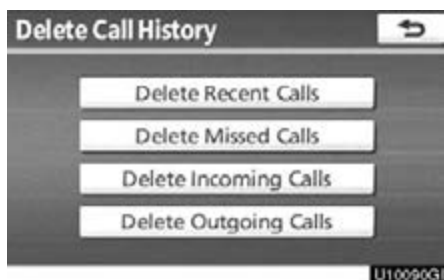

2. Select the desired history to delete.

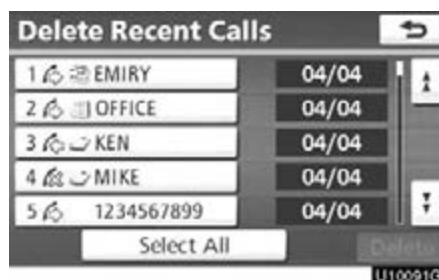

3. Select the desired data or touch "Select All", then touch "Delete".

You can select multiple data and delete them at the same time.




4. Touch "Yes".

You can also delete the call history in the following way.

1. Push the “INFO/PHONE” button.
2. Touch “Phone”.
3. Touch “Call History”.



4. Touch “Delete”.

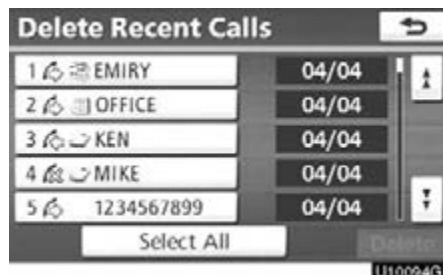

5. This screen is displayed.


The following operations are the same as the operation when you operate it from the “SETUP” button.

You can similarly operate other call history.

— Setting the voice tag

“Setting the voice tag” is done by displaying “Voice Tags” screen.

1. Push the “SETUP” button.
2. Touch “Phone”.
3. Touch “Phonebook”.

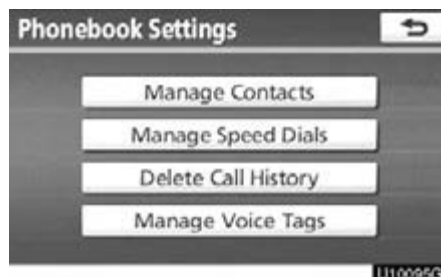

4. Touch “Manage Voice Tags”.




Please refer to the following pages for each setting.

SETUP

You can also display “Voice Tags” screen in the following way.

1. Push the “INFO/PHONE” button.
2. Touch “Phone”.
3. Touch “Contacts”.

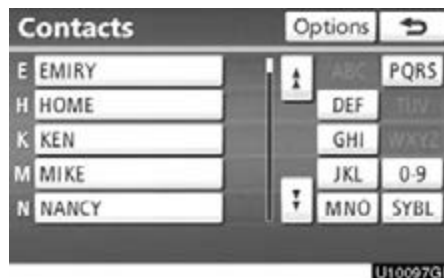

4. Touch “Options”.



5. Touch “Manage Voice Tags”.

- Registering the voice tag

You can register a voice tag for up to 20 numbers.



1. Touch “New Voice Tag”.



2. Select the data you want to register.



3. Touch “● REC”, and record a voice tag.



4. Touch “▶ Play” to play the voice tag.

When you complete the voice tag registration, touch “OK”.

INFORMATION

When you use the voice tag, do not change the language setting from the language setting used when registering.


If they are different, the voice recognition can't recognize the voice tag that you have registered.

You can also register the voice tag in the following way.

1. Push the “INFO/PHONE” button.
2. Touch “Phone”.
3. Touch “Contacts”.
4. Select the desired data from the list.



5. Touch “Options”.

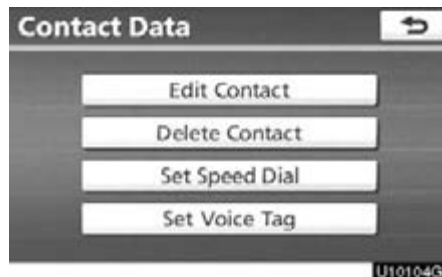

6. Touch “Set Voice Tag”.

SETUP



7. This screen is displayed.

The following operations are the same as the operation when you operate it from the "SETUP" button.

- Editing the voice tag



1. Touch "Edit Voice Tags".



2. Select the data you want to edit.



3. This screen is displayed.

The following operations are the same as the operation when you register the voice tag.

- Deleting the voice tag



1. Touch "Delete Voice Tags".



2. Select the desired data or touch "Select All", then touch "Delete".

You can select multiple data and delete them at the same time.




3. Touch "Yes".

— Bluetooth®


You can confirm and change the Bluetooth® settings.

1. Push the "SETUP" button.
2. Touch "Phone".

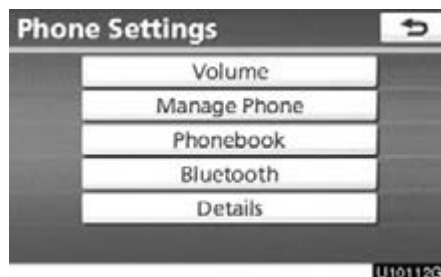

3. Touch "Bluetooth*".

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

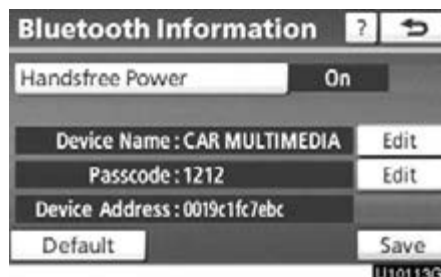

4. This screen is displayed.

The information displays the following items.

“Device Name”

..... The name in the Bluetooth® network. You can change it.

“Passcode”

..... The password when you register your cellular phone in the system. You can change it.

“Device Address”

..... The address peculiar to the system. You can not change it. If the same device name is displayed on the screen of your phone, refer to it.

If you want to change the settings, refer to the following pages.

When you change the settings, touch “Save” after changing them.

- **Changing the Bluetooth® settings**

You can change the Bluetooth® settings according to the following procedures.

Changing the handsfree power

The “Handsfree Power” display shows the following state.

When “Handsfree Power” is **“On”**:

The Bluetooth® phone is automatically connected when you turn the engine switch to the “ACC” or “ON” position.

When “Handsfree Power” is **“Off”**:


The Bluetooth® phone is disconnected, and the system will not connect to it next time.

You can select the state of “Handsfree Power”.

On: The auto connection is turned on.

Off: The auto connection is turned off.


You can not change the state from “On” into “Off” while driving.

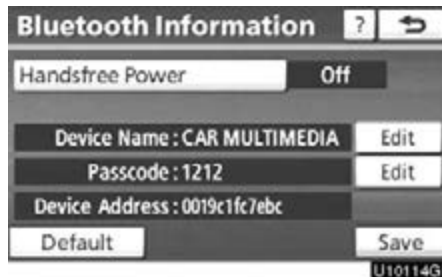

1. Touch "Handsfree Power".



2. Touch "On" or "Off".

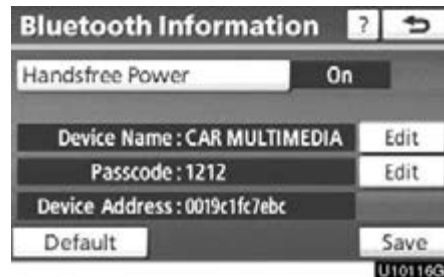

3. Touch "Save".

In case that the state of "Handsfree Power" is changed from "Off" into "On", Bluetooth® connection will begin.


When you connect the phone while Bluetooth® audio is playing




This screen is displayed, and the Bluetooth® audio will stop temporarily.

SETUP

Editing the device name

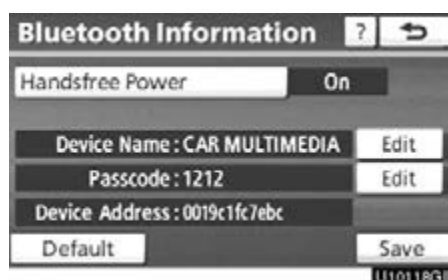


1. Touch "Edit" of "Device Name".

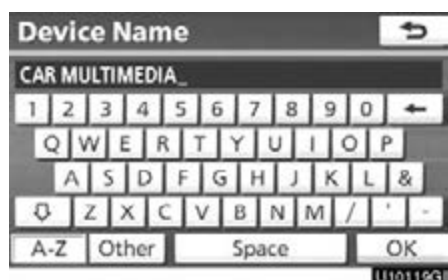


2. Use the software keyboard to input the device name.

Editing the passcode

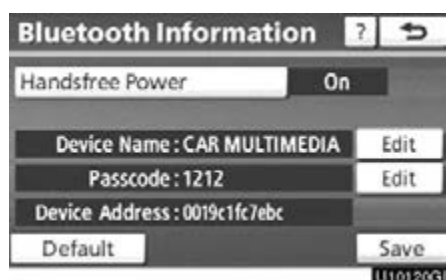

1. Touch "Edit" of "Passcode".

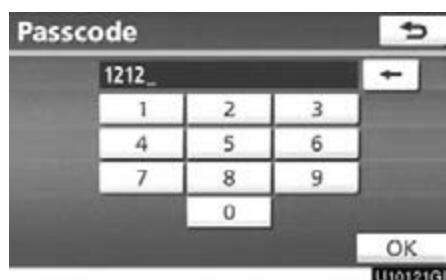

2. Input a passcode and touch "OK".


INFORMATION

The device names are common Bluetooth® audio and Bluetooth® phone.

If you change the device name of the phone, the device name of the audio will change at same time.

However, passcodes can be set separately.

- **Initializing the Bluetooth® settings**
You can initialize the settings.

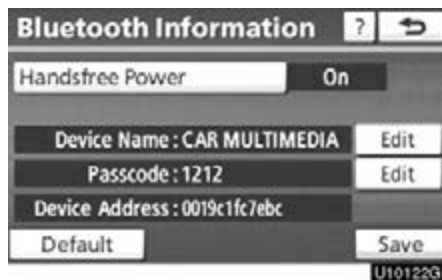

1. Touch "Default".



2. Touch "Yes".

If the state of "Handsfree Power" is changed from "Off" into "On", Bluetooth® connection will begin.

If you connect a phone while Bluetooth® audio is playing




This screen is displayed, and the Bluetooth® audio will stop temporarily.

SETUP


— Details

You can do the detail settings.

1. Push the “SETUP” button.
2. Touch “Phone”.

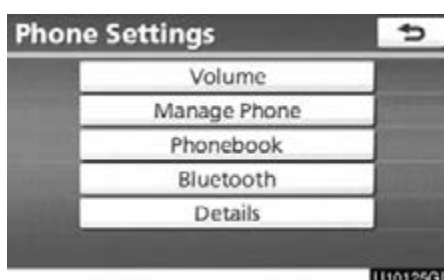

3. Touch “Details”.

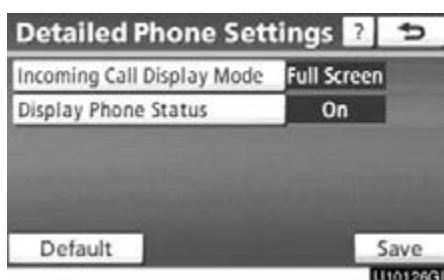

4. Do each setting according to the following procedures.
5. When you complete each setting, touch “Save”.

- Incoming call display



You can select the method of the incoming call display.



1. Touch “Incoming Call Display Mode”.



2. Touch “Full Screen” or “Drop Down”.

“Full Screen” mode

..... When a call is received, the Hands-free screen is displayed and you can operate it on the screen.

“Drop Down” mode

..... The message is displayed on the upper side of the screen. You can only operate the steering switch.


- The Bluetooth® connection status at start up



When the engine switch is in the “ACC” or “ON” position and the Bluetooth® is automatically connected, the connection check is displayed.

When “Display Phone Status” is “On”, this status is displayed.

When “Display Phone Status” is “Off”, this status is not displayed.

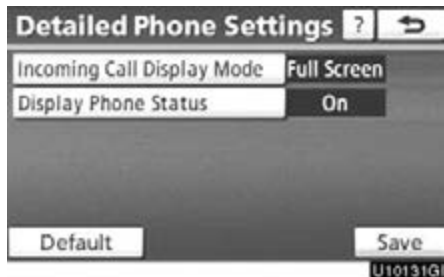


1. Touch "Display Phone Status".



2. Touch "On" or "Off".

- Initializing the settings

You can initialize the settings.

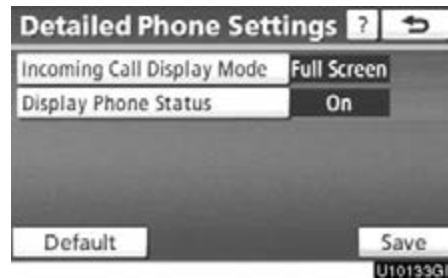

1. Touch "Default".




2. Touch "Yes".

Audio Settings— —Select portable player

The portable player to connect can be selected. The registered audio information can be confirmed and edited.

- Selecting a portable player


If you register a second portable player, either one can be selected for connection.

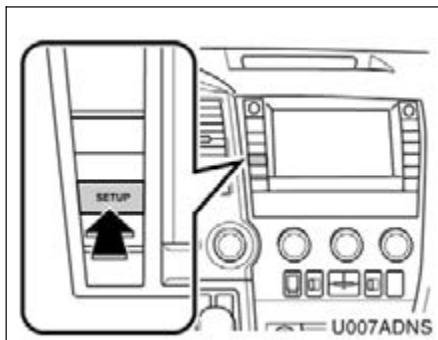

1. Push the “SETUP” button.



2. Touch “Audio” on “Setup” screen.

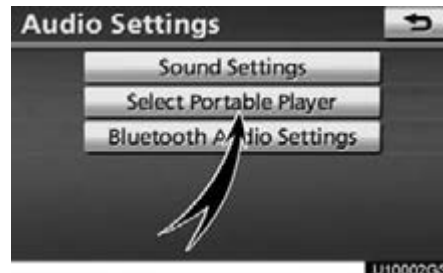

3. Touch “Select Portable Player” on “Audio setting” screen.

You can select from a maximum of two Bluetooth® portable players.

“Empty” is displayed when you have not registered a portable player yet. The Bluetooth® mark is displayed when you choose the portable player.



4. Select desired portable player and then touch “OK”.

Although you can register up to two portable players in the system, only one portable player can function at a time.

• Displaying Bluetooth® information

You can see or change the information of the portable player on the system.

“Device Name”

... The name of Bluetooth® portable player which is displayed on the screen. You can change it into a desired name.

“Device Address”

... The address peculiar to the system. You cannot change it. If you have registered two Bluetooth® portable players with the same device name and you cannot distinguish one from the other, refer to it.

“Connection Method”

... The connection method can be switched between “From Vehicle” and “From Portable Player”.



Select the desired portable player and then touch “Portable Player Info”.

• Changing a device name

You can change a device name. Even if you change a device name, the name registered in your portable player is not changed.



1. Touch “Portable Player Info” on “Select Portable Player” screen.



2. Touch “Edit” for “Device Name” on “Portable Player Information” screen.



3. Use the software keyboard to input the device name.

- **Selecting Connection method**

The connection method can be selected.

From Vehicle: Connect the audio system to the portable player.

From Portable Player: Connect the portable player to the audio system.



Select desired connection method "From Vehicle" or "From Portable Player" and then touch "Save".

INFORMATION


If the connection method is set to "From Portable Player", "Auto Bluetooth Connect" cannot be selected.*

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

—Setting Bluetooth® audio

The Bluetooth® audio settings can be set.

- **Registering your portable player**

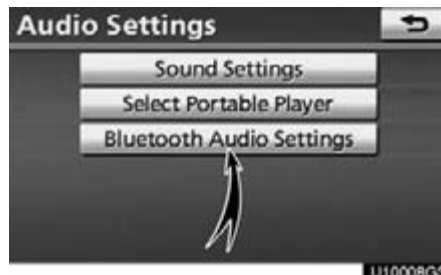

1. Touch "Bluetooth* Audio Setting" on "Audio Settings" screen.



2. Touch "Register" of "Bluetooth* Audio" on "BT Audio Settings" screen.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

SETUP



3. When this screen is displayed, enter the passcode displayed on the screen into the portable player.

For the operation of the portable player, see the manual that comes with it.

If you want to cancel the entry, touch "Cancel".



4. When the connection is complete, this screen is displayed.

You do not need to enter the portable player in case of using the same one.



When this screen is displayed, follow the guidance on the screen to try connection again.

When another Bluetooth® device is connected



When another Bluetooth® device is currently connected, this screen is displayed. If you want to disconnect it, touch "Yes".

INFORMATION

If the device corresponds with both Bluetooth® phone and Bluetooth® audio, register and connect the Bluetooth® phone first or a connection failure may occur when registering the Bluetooth® audio.

(a) Removing a Bluetooth® audio



1. Touch "Remove" of "Bluetooth*" Audio" on "BT Audio Settings" screen.



2. Select the portable player you want to delete and touch "OK".



3. Touch "Yes" to unregister the selected portable player.


*: Bluetooth is a registered trademark of Bluetooth SIG.Inc.



If the selected portable player is in use, this screen will appear. Touch "Yes". The system will disconnect the portable player and remove it.

SETUP

(b) Connecting Bluetooth® audio AUTOMATICALLY

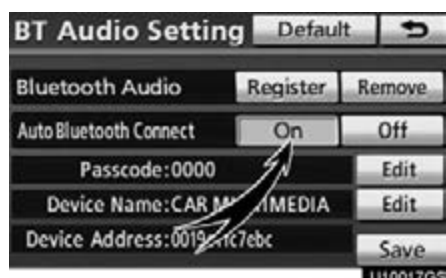

Touch "On" for "Auto Bluetooth*" connect to activate the automatic connection for the Bluetooth®. Always set it to this mode and leave the Bluetooth® portable player in a condition where connection can be established. The "Auto Bluetooth*" Connect cannot be selected if the connection method is set to "From Portable Player".

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



When the engine switch is in the "ACC" or "ON" position, the selected portable player will be automatically connected and the connection result is displayed.

MANUALLY

When the auto connection failed or turned off, you have to connect Bluetooth® manually.

For the manual operation, see page 179.

(c) Changing the passcode

The passcode for registering your portable player on the system. You can change this to 4 to 8 digit number of your choice. The default is "0000".



1. Touch "Edit" of "Passcode" on "BT Audio Settings" screen.



2. Enter the new 4-8 digits passcode and touch "OK".

Each time you touch , an input digit is deleted.

(d) Changing the device name

You can change a device name. Even if you change a device name, the name registered your portable player is not changed.



1. Touch "Edit" of "Device Name" on "BT Audio Settings" screen.



2. Enter the new device name and touch "OK".

INFORMATION

The device names are common Bluetooth® audio and Bluetooth® phone.

If you change the device name of the audio, the device name of the phone will change at same time.

However, passcodes can be set separately.

(e) Initializing the Bluetooth® audio settings

You can initialize the settings.




1. Touch "Default" on "BT Audio Settings" screen.




2. Touch "Yes".

**Vehicle Settings —
— Maintenance**


When the navigation system is turned on, the "Information" screen displays when it is time to replace a part or certain components. (See page 27.)

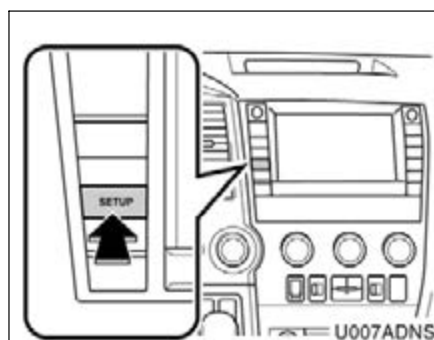

1. Push the "SETUP" button.

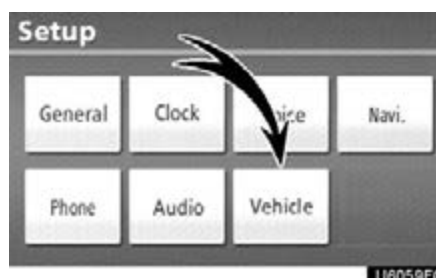

2. Touch "Vehicle".

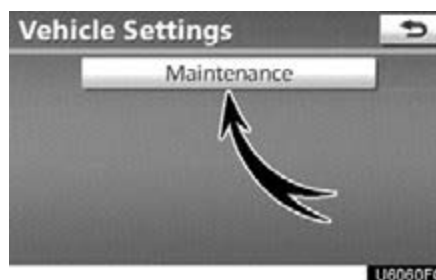

3. Touch "Maintenance".



- Setting maintenance information (See page 301.)
- Setting dealer (See page 303.)

(a) Maintenance information setting

1. Push the “SETUP” button.
2. Touch “Vehicle” on the “Setup” screen.
3. Touch “Maintenance” on the “Vehicle Settings” screen.



4. Touch the desired button.

For details of each touch screen button, see “INFORMATION ITEMS” on page 302.

“Delete All”: To cancel all conditions which have been inputted.

“Reset All”: To reset the item which has satisfied a condition.

“Set Dealer”: To register dealer information. (See “(b) Dealer setting” on page 303.)

“Dealer Info.”: To edit dealer information. (See “(b) Dealer setting” on page 303.)

“Reminder”: When this button is touched, the indicator is illuminated. The system is set to give maintenance information with the “Information” screen. (See page 27.)

When the vehicle needs to be serviced, the touch screen button color will change to orange.

SETUP

INFORMATION ITEMS

“Engine oil”: Replace engine oil

“Oil filter”: Replace engine oil filter

“Rotation”: Rotate tires

“Tires”: Replace tires

“Battery”: Replace battery

“Brake pad”: Replace brake linings

“Wipers”: Replace wiper blades

“Coolant”: Replace engine coolant

“Brake oil”: Replace brake fluid

“Trans. fluid”: Replace transmission fluid

“Service”: Scheduled maintenance

“Air filter”: Replace air filter

“Personal”: New information items can be created separately from provided ones.



5. Input the conditions.

“Date”: The next maintenance date can be input.

“Distance”: The driving distance until the next maintenance check can be input.

“Delete”: To cancel the date and distance conditions.

“Reset”: To reset the date and distance conditions.

6. Touch “OK”.

The screen then returns to the “Maintenance” screen.

INFORMATION

- *For scheduled maintenance information, please refer to the “Scheduled Maintenance Guide” or “Owner’s Manual Supplement”.*
- *Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.*


(b) Dealer setting

It is possible to register a dealer in the system. With dealer information registered, route guidance to the dealer is available.

1. Push the **"SETUP"** button.
2. Touch **"Vehicle"** on the **"Setup"** screen.
3. Touch **"Maintenance"** on the **"Vehicle Settings"** screen.




4. Touch **"Set Dealer"**.

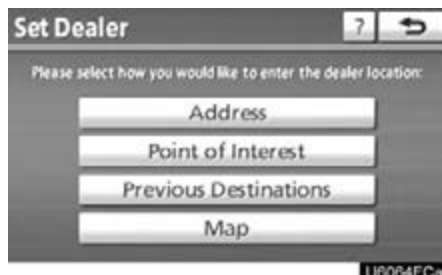

5. If the dealer has not been registered, enter the location of the dealer in the same way as for a destination search. (See "Destination search" on page 52.)

When "Set Dealer" registration is finished, the "Dealer" screen will be displayed.

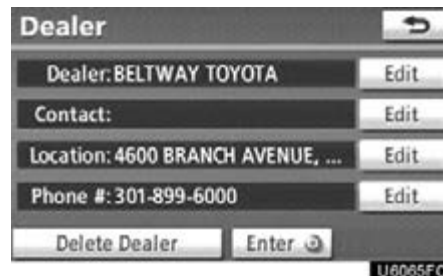

6. Touch **"Edit"** for the item you want to change.

"Dealer": To enter the name of a dealer. (See page 304.)

"Contact": To enter the name of a dealer member. (See page 304.)

"Location": To set a location. (See page 304.)


"Phone #": To set a telephone number. (See page 305.)

"Delete Dealer": To delete the dealer information displayed on the screen.

"Enter" (with location pin icon): To set the displayed dealer as a destination. (See "Starting route guidance" on page 72.)

SETUP

- To edit “Dealer” or “Contact”

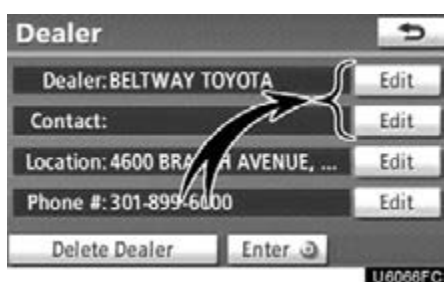

1. Touch “Edit” of “Dealer” or “Contact”.



2. Enter the name using the alphanumeric keys.

Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

- To edit “Location”



1. Touch “Edit” of “Location”.




2. Touch the 8 directional touch screen button to move the cursor to the desired point on the map.

3. Touch “OK”.

The previous screen will be displayed.

- To edit “Phone #” (telephone number)

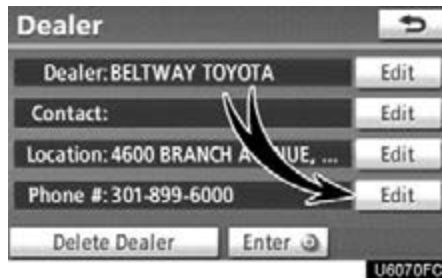

1. Touch “Edit” of “Phone #”.



2. Enter the number using number keys.

3. Touch “OK”.

The previous screen will be displayed.

SETUP

SECTION 9

APPENDIX


Appendix

- [Limitations of the navigation system](#) 308
- [Map database information and updates](#) 310
 - [Changing the map DVD-ROM](#) 319

Limitations of the navigation system

This navigation system calculates the current vehicle position using satellite signals, various vehicle signals, map data, etc. However, the accurate position may not be shown depending on the satellite condition, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current vehicle position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 feet (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.

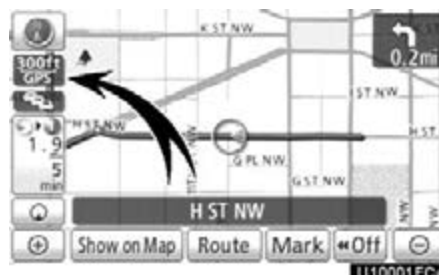

When your vehicle is receiving signals from the satellites, the "GPS" mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map display. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

(a) Accurate current vehicle position may not be shown in the following cases:

- When driving on a small angled Y-shaped road.
- When driving on a winding road.
- When driving on a slippery road such as in sand, gravel, snow, etc.
- When driving on a long straight road.
- When motorway and surface streets run in parallel.
- After moving by ferry or vehicle carrier.
- When a long route is searched during high speed driving.
- When driving without setting the current position calibration correctly.
- After repeating a change of direction by going forward and backward, or turning on a turntable in the parking lot.
- When leaving a covered parking lot or parking garage.
- When a roof carrier is installed.
- When driving with tire chains installed.
- When the tires are worn.
- After replacing a tire or tires.
- When using tires that are smaller or larger than the factory specifications.
- When the tire pressure in any of the four tires is not correct.

INFORMATION

If your vehicle cannot receive GPS signals, you can correct the current position manually. For information on setting the current position calibration, see page 251.

(b) Inappropriate route guidance may occur in the following cases:

- When turning at an intersection off the designated route guidance.
- If you set more than one destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
- When turning at an intersection for which there is no route guidance.
- When passing through an intersection for which there is no route guidance.
- During auto reroute, the route guidance may not be available for the next turn to the right or left.
- It may take a long time to operate auto reroute during high speed driving. In auto reroute, a detour route may be shown.
- After auto reroute, the route may not be changed.
- An unnecessary U-turn may be shown or announced.
- A location may have multiple names and the system will announce one or more.
- Some routes may not be searched.
- If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
- Your destination point might be shown on the opposite side of the street.
- When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
- The road and map data stored in your navigation system may not be complete or may not be the latest version.

Map database information and updates —

After replacing a tire, implement the operation described in the “TIRE CHANGE CALIBRATION”. (See page 253.)

This navigation system uses tire turning data and is designed to work with factory-specified tires for your vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the vehicle's position. The tire pressure also affects the diameter of the tires so please make sure the tire pressure of all four tires is correct.

This system uses the maps of DENSO.

© 2008 DENSO CORPORATION

© 2007 NAVTEQ. All rights reserved.

© 2007 Tele Atlas North America, Inc. All rights reserved. This material is proprietary and the subject of copyright protection and other intellectual property rights owned by or licensed to Tele Atlas North America, Inc. The use of this material is subject to the terms of a license agreement. You will be held liable for any unauthorized copying or disclosure of this material.

Data by infoUSA Copyright © 2007, All Rights Reserved.

© 2007 VISA Corporation

Copyright © CoStar Realty Information Inc.

The Bullseye Design is a registered trademark of Target Brands, Inc.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT
CAREFULLY BEFORE USING THE
NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT
FOR YOUR COPY OF THE SPATIAL
MAP DATABASE, INCLUDING LOCA-
TION CODES AND RELATED PROD-
UCTS (COLLECTIVELY, THE "DATA-
BASE"), USED IN THE NAVIGA-
TION SYSTEM. BY USING THE NAVIGA-
TION SYSTEM AND THE DATA-
BASE, YOU ACCEPT AND AGREE
TO BE BOUND BY ALL TERMS AND
CONDITIONS SET FORTH BELOW.

LICENSE GRANT

DENSO CORPORATION ("DENSO"),
as a licensed distributor of the
DATABASE, grants to you a
non-exclusive, non-perpetual license
to use your copy of the DATABASE for
your personal use or for your use in
your business' internal operations and
not for any other purpose. This license
does not include the right to grant
sub-licenses.

OWNERSHIP

The DATABASE and the copyrights
and intellectual property and
neighboring rights therein are owned
by Tele Atlas North America, Inc.
("TANA") and its licensors. This
Agreement does not transfer any title
or interest in the DATABASE, except
for the license to use the DATABASE
according and subject to the terms and
conditions of this Agreement. You
shall not alter, obscure or remove any
copyright notices, trademark notices or
other restrictive legends relating to the
DATABASE.

The DATABASE comprises confiden-
tial and proprietary information and
materials of TANA. Accordingly, you
shall hold the DATABASE in confi-
dence and trust. You shall take rea-
sonable steps to protect the DATA-
BASE from misappropriation or mis-
use. You shall not extract stand-alone
data from or publish any part of the DA-
TABASE without the prior written con-
sent of TANA and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in
the specific system for which it was
created. Except to the extent explicitly
permitted by mandatory laws, you may
not extract or reutilize any portion of
the contents of the DATABASE, nor
reproduce, copy, duplicate, modify,
adapt, translate, disassemble,
decompile, or reverse engineer any
portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE
to third parties, except together with
the system for which it was created,
provided that you do not retain any
copy of the DATABASE, and provided
that the transferee agrees to all terms
and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

LIMITATION OF LIABILITY

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

U.S. GOVERNMENT RIGHTS

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data – commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control.

Contractor/manufacturer is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643.0330. The DATABASE is ©1984-2007 by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

END USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2007 NAVTEQ. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®.

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service®2007. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by DENSO and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

APPENDIX

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use", and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/
SUPPLIER) NAME: NAVTEQ

CONTRACTOR (MANUFACTURER/
SUPPLIER) ADDRESS:
425 West Randolph Street,
Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this Data was provided.

©2007 NAVTEQ – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

END USER NOTICE**PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM**

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by infoUSA Inc. ("infoUSA"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the infoUSA POI Data shall be retained by infoUSA.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOUSA MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY.

5. Limitation of liability

EITHER INFOUSA OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSOSHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE


The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

There are two types of areas available for route guidance. In one type of area, primarily around metropolitan centers, detailed route guidance is available for the entire area. In the other type of area, all roads are displayed on the map but route guidance is limited. The navigation route might lack precision because the data (no right turns, one-way traffic, etc.) is not complete. It is still possible to reach the destination by following the arrow direction and distance as shown on the bottom left of the screen. The arrow points in the direction of the destination. The distance shown is as measured in a straight line from the current vehicle position to the destination area.

In order to provide you with as accurate map information as possible, we are always gathering information such as on road repairs and carrying out on-site investigations. However, the names of roads, streets, facilities, and their locations frequently change. In some places, construction on roads may be in progress. For that reason, information on some areas in this system might be different from the actual location.

The map database is normally updated once a year. Contact your Toyota dealer for information about the availability and pricing of an update.

— Changing the map DVD-ROM

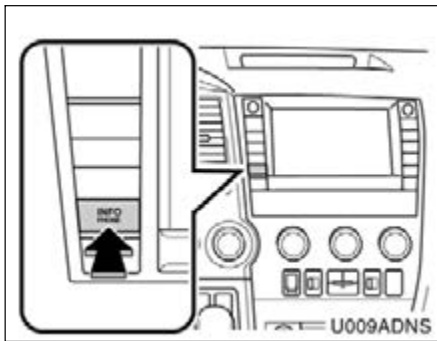

1. Push the “INFO/PHONE” button.




2. Touch “Map Data”.



3. Touch “ DVD”.



4. Insert a new map DVD-ROM with the label side up.

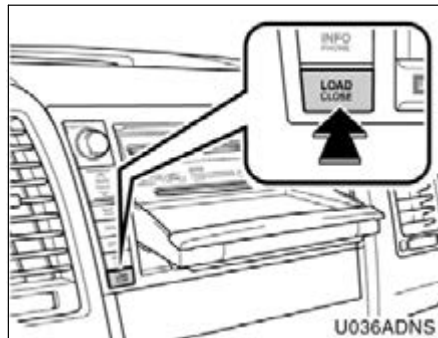

5. Push the “LOAD/CLOSE” button to close the display.

CAUTION

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in the case of an accident or sudden stopping while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.


NOTICE

- Do not obstruct the display while it is moving. It could damage your navigation system.
- If a disc cannot be ejected, do not forcibly take out the disc. Keep pushing the "LOAD/CLOSE" button for approximately 5 seconds and release it. At this time, the audio disc and the map DVD-ROM will be ejected.

INFORMATION

Under extremely cold conditions, the display may react slowly or operation sound may become louder.

- To confirm the database version and disc coverage area

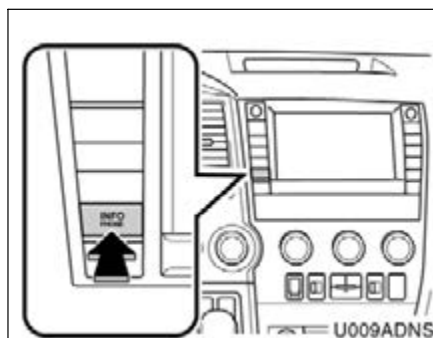

1. Push the "INFO/PHONE" button.



2. Touch "Map Data".



Make sure the version of the database on this screen.

To display the disc coverage area, touch "Map Data Coverage". Confirm the covered area on the screen.

Contact your Toyota dealer to find out if there is a more recent update released.

INDEX

Index

For navigation system function, please also refer to the “**Navigation system function index**” on page 18.

INDEX

Numbers/Symbols

- ? button 20, 33
- 3 Routes selection 74

A

- A2DP (Advanced Audio Distribution Profile) 176
- Adding destinations 84
- Address Book button 20, 66
- Address book entry information 37
- Address button 20, 55
- Alphabet key 28
- AM button 144, 147, 153
- AM tab 147, 153
- Angle mark 200
- Areas to avoid 115
- Arrow screen 39, 80
- ASL 150
- AUDIO button 144, 147
- Audio button 22, 293
- Audio language 200
- Audio settings 293
- Audio/video remote controls 217
- Audio/video system 143
- Audio/video system operating hints ... 219
- Auto avoid traffic 98, 246, 248
- Auto complete text 246
- Auto screen change 236
- Auto voice guidance 243
- Automatic recognition 243
- Automatic sound levelizer 150
- AUX adapter 153
- AUX button 144, 147, 181
- AUX tab 147
- AVRCP(Audio/Vdeo Remote Control Profile) 176

B

- Balance 150
- Basic function 25
- Bass 150
- Beep 236
- Bluetooth® 122, 176, 285, 293
- Bluetooth® audio operation 176
- Bluetooth® audio player 176, 293
- Bluetooth® connection status
 - at start up 291
- Bluetooth® information 294
- Brightness 31
- BT tab 147, 181
- Building information 43

C

- Calendar 142
- Calendar button 23, 142
- Calibration 246, 251
- Call by call history 134
- Call by dial 131
- Call by phonebook 132
- Call by POI call 138
- Call by speed dial 134
- Call by voice recognition 136
- Call history 134
- Call on the Bluetooth® phone 131
- Categories 61
- CAUTION screen 26
- CD changer operation 164
- CD tab 147, 167
- Cellular phone 122

INDEX

- Change "Icon" 111
 - Change "Location" 113, 118
 - Change "Name" 112, 117
 - Change "Phone #" 113
 - Change "Size" 118
 - Changing a device name 294
 - Changing the angle 199
 - Changing the audio language 199
 - Changing the Bluetooth® settings 286
 - Changing the device name 299
 - Changing the handsfree power 286
 - Changing the map DVD-ROM 319
 - Changing the passcode 299
 - Changing the subtitle language 198
 - Chapter 209
 - City center 62
 - City name 55, 60
 - City to search 55, 60
 - Clock button 22, 241
 - Clock settings 241
 - Color 31
 - Command list 47
 - Compass mode 41
 - Compass mode screen 39, 41
 - Connecting a Bluetooth®
 - audio player 179, 298
 - Connecting a Bluetooth® phone 128
 - Contacts 132, 268
 - Contrast 31
 - Coordinates button 20, 71
 - Current position display 33
 - Current position/tire change
 - calibration 251
 - Cursor position as a destination 34
 - Cursor position as
 - an address book entry 35
 - Customize POI icons 246
- D**
- Database version 320
 - Daylight saving time 242
 - Dealer setting 303
 - Default
 - 200, 247, 251, 256, 289, 292, 300
 - Del. Dest. button 20, 71
 - Delete personal data 236, 240
 - Deleting a Bluetooth® phone 263
 - Deleting address book entries 114
 - Deleting areas to avoid 119
 - Deleting call history 280
 - Deleting destinations 85
 - Deleting home 105
 - Deleting preset destinations 108
 - Deleting previous destinations 119
 - Deleting set destinations 71, 85
 - Deleting the phonebook data 271
 - Deleting the speed dial 279
 - Deleting the voice tag 285
 - Description of DVD controls 197
 - Description of settings 196
 - Description of video CD controls 206
 - Description of video CD settings 205
 - DEST button 10, 12, 14, 16, 17, 20, 52
 - Destination information 38
 - Destination screen 20, 52
 - Destination search 51, 52
 - Destination search by "Address" 55
 - Destination search by
 - "Address Book" 66
 - Destination search by "Coordinates" ... 71
 - Destination search by "Emergency" 66
 - Destination search by
 - "Intersection & Freeway" 67
 - Destination search by "Map" 70
 - Destination search by
 - "Point of Interest" 59
 - Destination search by
 - "Previous Destinations" 65
 - Destination search by Home 54
 - Destination search by
 - Preset destinations 54
 - Detailed navigation settings 245
 - Details 290
 - Detour setting 86
 - Dialing by name 136

INDEX

DISC button 144, 147, 167, 186
 Disc coverage area 320
 Disc slot 164, 184, 319
 DISP button 10, 31
 Display phone status 291
 Display POI icons 92
 Displaying DVD controls 196
 Displaying the title and name 161
 Displaying video CD controls 206
 Displaying video CD settings 205
 Distance and time to destination 10, 83
 Driving speeds 246, 247
 DSP control 150
 Dual map 41
 Dual map screen 39, 41
 DVD controls 196
 DVD language 200
 DVD player and
 DVD video disc information 208
 DVD player operation 184
 DVD settings 195
 DVD tab 147, 186
 DVD video disc glossary 209
 DVD video discs 208

E

Edit "Dealer" or "Contact" 304
 Edit "Location" 304
 Edit "Phone #" 305
 Edit route 75
 Editing address book entries 110
 Editing area to avoid 116
 Editing home 104
 Editing preset destinations 107
 Editing the Bluetooth® phone 261
 Editing the device name 288
 Editing the passcode 288
 Editing the phonebook data 269
 Editing the speed dial 278
 Editing the voice tag 284
 Eject button 165, 185
 Ejecting a disc 185
 Ejecting discs 165
 Emergency button 20, 66
 Enter a Bluetooth® phone 126
 Enter audio language code 201
 Estimated arrival time 83
 Estimated travel time 83

F

FM button 144, 147, 153
 FM tab 147, 153
 Foot print map 42
 Foot print map button 10, 42
 Freeway exit information screen 78
 Freeway screen 39
 Function help 33
 Function menu display screen 144
 Function menu tab 144

G

General button 22, 236
 General settings 236
 Go Home button 20, 54
 GPS 308
 GPS mark 10, 308
 Guidance screen for the freeway 79
 Guidance with street names 246
 Guiding the route 16

H

Hands-free system 122
 Hands-free system for cellular phone
 122
 Heading-up 10, 43
 Heading-up symbol 43
 Help 33
 HFP (Hands Free Profile) 122
 Home 12, 103

INDEX

I

If the player malfunctions 176, 207
 Important information
 about this manual 3
 Incoming call display 290
 INFO/PHONE button
 10, 23, 126, 142, 319, 320
 Information about the icon 36
 Information items 302
 Information screen 23
 Initial screen 26
 Initializing the Bluetooth®
 audio settings 300
 Initializing the Bluetooth®
 phone settings 289
 Initializing the detailed phone
 settings 292
 Initializing the phone volume
 settings 255
 Input numbers 28
 Input symbols 29
 Inputting letters and numbers/
 List screen operation 28
 Inserting discs 164
 Interrupt call 141
 Intersection & Freeway button 20, 67
 Intersection guidance screen 39, 79
 iPod® compatibility 219
 iPod® player operation 210

K

Keyboard layout 236

L

Language 236
 Last 5 cities 57, 63
 Limitations of the
 navigation system 308
 Line color 236
 List 29
 List All Categories button
 61, 64, 93, 250
 List screen operation 28
 Listening to satellite radio 159
 Listening to the radio 153
 LOAD button 144, 164, 165, 319
 Local POI list 94

M

Maintenance 300
 Maintenance information 27
 Maintenance information setting 301
 Manage phone 256
 Map button 20, 70
 Map data 320
 Map Data button 23, 320
 Map database information
 and updates 310
 Map DVD 320
 Map icons 44
 Map scale 42
 Map screen operation 33
 MAP/VOICE button 10, 33, 34, 82
 Mark button 10, 35
 Marks shown on DVD video discs 208
 Memory point names 112
 Message button 157
 Microphone 46, 124
 Mid 150
 MP3 171, 189
 My places 101

N

Names of areas to be avoided 117
 Navi. button 22, 102, 245
 Navigation settings 102, 245
 Navigation settings screen 102, 245
 Navigation system function index 18
 North-up 10, 43
 North-up symbol 43

INDEX

O

Off function 10, 246, 251
One-touch scroll 34
Operating a Bluetooth®
 audio player 176
Operating a DVD video disc 193
Operating a MP3 disc 189
Operating a MP3/WMA disc 171
Operating a video CD 204
Operating an audio CD 168, 186
Operating by voice recognition ... 140, 264
OPP (Object Push Profile) 122
Orientation of the map 43
Overview buttons
 and guidance screen 10

P

Parental lock 200
Pause guidance 91
Pausing and resuming guidance 91
PBAP (Phone Book Access Profile) ... 122
Phone button 22, 23, 254
Phonebook 132, 264
Playing a Bluetooth® audio 181
Playing a disc 167, 186
Playing a DVD disc 195
Playing a MP3 disc 189
Playing a MP3/WMA disc 171
Playing a USB memory player or
 iPod® player 210
Playing a video CD 204
Playing an audio CD 168, 186
POI as a destination 95
POI category change 250
POI information 36
Point of Interest button 20, 59
POIs near the search point 64
POIs to be displayed 93
Pop-up information 246, 253
Portable audio players 153, 176
Position/direction calibration 252
Preset destination 14, 54
Preset destination touch screen
 buttons 20, 54
Presetting a satellite radio channel ... 160
Presetting a station 154
Previous Destinations button 20, 65
PWR-VOL knob 144, 147

Q

Quick guide 10
Quick reference 20, 22, 23, 144

R

Radio data system 155
Radio ID 158
Radio operation 153, 158
RAND button 170, 175, 183, 188, 192
RDS 155
Rear seat entertainment system
 184, 236, 238
Rear system lock 236, 238
Rear view monitor system 229
Receive on the Bluetooth®
 phone 138
Reconnecting the Bluetooth®
 audio 181
Reconnecting the Bluetooth®
 phone 131
Region code 208
Registering a Bluetooth® phone 257
Registering address book entries 109
Registering areas to avoid 115
Registering home 12, 103
Registering preset destinations ... 14, 106
Registering the phonebook data 268
Registering the speed dial 274
Registering the voice tag 282
Removing a Bluetooth® audio 297
Reordering destinations 84
Resume guidance 92
Ring volume setting 255
Route button 10, 84, 85, 86, 87, 89, 91
Route guidance 77
Route guidance screen 78
Route overview 87
Route preference 89
Route preview 88
Route trace 96
RPT button 170, 175, 183, 188, 192

INDEX

S

- Safety instruction 3
- SAT button 144, 147, 153, 159
- SAT tab 147, 159
- Satellite radio channel category 159
- Satellite radio tuner malfunctions 162
- Satellite tuner 158
- Scale indicator 10, 42
- SCAN button 169, 174, 188, 191, 192
- Screen adjustment 31
- Screen configuration button 10, 39
- Screen for navigation settings 246
- Screen for voice settings 243
- Screen layout function 251
- Screen off 31
- Screen scroll operation 34
- Screen size 151
- Screens for clock settings 242
- Screens for general settings 236
- Search area 52
- Search by "Address" 55
- Search by "Address Book" 66
- Search by "Category" 61
- Search by "Coordinates" 71
- Search by "Emergency" 66
- Search by "Intersection & Freeway" 67
- Search by "Map" 70
- Search by "Name" 59
- Search by "Phone #" 64
- Search by "Point of Interest" 59
- Search by "Previous Destinations" 65
- Search by Freeway Entrance/Exit 69
- Search by Home 54
- Search by Intersection 68
- Search by Preset destinations 54
- Search by street address 57
- Search point from along my route 62
- Search point from near a destination 63
- Search point from near city center 62
- Search point from near here 62
- Searching by title 198
- Searching by track 207
- Searching for a desired disc 169
- Searching for a desired file 174, 191
- Searching for a desired folder 174, 192
- Searching for a desired track 169, 188
- SEEK/TRACK button 144, 155, 160, 168, 172, 182, 187, 190, 198, 207
- Select POI icons 250
- Select portable player 293
- Select route features 90
- Select route type 89
- Selecting a Bluetooth® phone 259
- Selecting a city to search 55, 60
- Selecting a desired album 183
- Selecting a desired disc 167
- Selecting a desired file 172, 190
- Selecting a desired folder 171, 189
- Selecting a desired track 168, 182, 187
- Selecting a keyboard layout 239
- Selecting a language 237
- Selecting a menu item 197
- Selecting a satellite radio channel 160
- Selecting a station 155
- Selecting connection method 295
- Selecting from the categories 61
- Selecting from the last 5 cities 63
- Selecting the desired mode 147, 217
- Selecting the line color 238
- Selecting the search area 52
- Setting and deleting destinations 84
- Setting Bluetooth® audio 295
- Setting home as the destination 17
- Setting route 86
- Setting the phonebook 265
- Setting the voice tag 281
- Setting up the "Address Book" 108
- Setting up the "Areas to Avoid" 114
- Setting up the "Home" 103
- Setting up the "Preset Destinations" 105
- Setup 235
- SETUP button 10, 22, 102, 236, 241, 243, 245, 254, 293, 300
- Setup menu 200
- Setup operation from the rear seat 204
- Setup screen 22

INDEX

Show free flowing traffic 98, 246, 249
 Show on map 92
 Show on Map button 10, 92, 96
 Show XM® NavTraffic information .. 98, 99
 Single map 40
 Single map screen 39, 40
 Sort 30
 Sound icons 111
 Speech command system 44, 146
 Speed dial 134, 274, 278, 279
 Speed dials setting 273
 Starting route from adjacent road 91
 Starting route guidance 72
 Steering switches 217
 Street name 55, 57
 Subtitle language 200
 Surround function 150
 Switching between audio functions ... 147
 Switching the screens 39

T

Talk on the Bluetooth® phone 139
 Talk switch 44, 146
 Telephone 122
 Telephone and information 121
 Telephone settings 254
 Telephone switch 123
 Time zone 242
 Tire change calibration 251, 253
 Title 209
 Tone 31, 150
 Tone and balance 150
 Touch screen operation 27
 Traffic announcement 157
 Traffic button 157
 Traffic voice guidance 98, 243, 244
 Transferring a phone number 266
 Treble 150
 TUNE·FILE knob 144, 153, 159, 172
 Turn list screen 39, 80
 Turning the audio system
 on and off 147
 TypeSeek button 155
 Typical voice guidance prompts 81

U

Unit of measurement 236, 240
 USB memory player information 219
 USB memory player operation 210
 Using your audio/video system 145

V

Vehicle button 22, 300
 Vehicle settings 300
 Video CD controls 206
 Viewer restrictions 209
 Voice button 22, 243
 Voice guidance in all modes 243
 Voice recognition 136, 140, 264
 Voice recognition guidance 243
 Voice settings 243
 Voice tag 136, 281
 Voice volume 244
 Voice volume setting 255
 Volume 147, 217, 244, 255
 Volume setting 255

W

WMA 171

X

XM® NavTraffic 98
 XM® NavTraffic icon 99
 XM® NavTraffic indicator 99
 XM® NavTraffic information arrow 99
 XM® NavTraffic mark 10
 XM® NavTraffic text information 39
 XM® Satellite Radio broadcast 158

Z

Zoom in button 10, 42
 Zoom out button 10, 42