

TABLE OF CONTENTS

1	QUICK GUIDE	9
2	BASIC FUNCTION	25
3	NAVIGATION SYSTEM	56
4	PHONE	131
5	AUDIO/VIDEO SYSTEM	190
6	VOICE COMMAND SYSTEM	269
7	INFORMATION	283
8	APPS	305
9	PERIPHERAL MONITORING SYSTEM	317
	INDEX	323

Introduction

NAVIGATION SYSTEM OWNER'S MANUAL

This manual explains the operation of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of the navigation system differ depending on whether the functions and/or a contract existed and the map data available at the time of producing this document.

NAVIGATION SYSTEM

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 127 through 129.

TOYOTA MOTOR CORPORATION

IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.

CAUTION

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE


- This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

SYMBOLS USED IN ILLUSTRATIONS



Safety symbol


The symbol of a circle with a slash through it means “Do not”, “Do not do this”, or “Do not let this happen”.

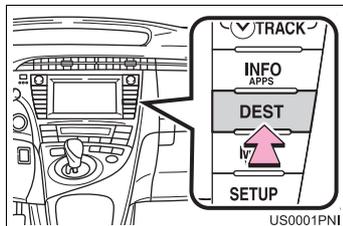

Arrows indicating operations

-  Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

HOW TO READ THIS MANUAL

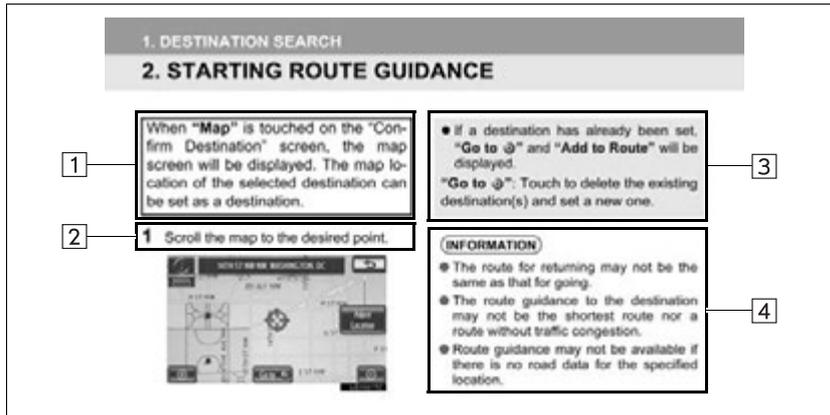

No.	Name	Description
1	Operational Outlines	An outline of the operation is explained.
2	Main Operations	The steps of an operation are explained.
3	Related Operations	A main operation's supplementary operations are described.
4	Information	Useful information for the user is described.

SAFETY INSTRUCTION



To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.

CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

TABLE OF CONTENTS

1 QUICK GUIDE

1. NAVIGATION OPERATION	10
OVERVIEW BUTTON AND GUIDANCE SCREEN	10
REGISTERING HOME	12
REGISTERING PRESET DESTINATIONS	14
OPERATION FLOW: GUIDING THE ROUTE.....	16
SETTING HOME AS THE DESTINATION	17
2. FUNCTION INDEX.....	18
NAVIGATION SYSTEM FUNCTION INDEX.....	18
3. QUICK REFERENCE.....	20
“Destination” SCREEN.....	20
“Setup” SCREEN	22
“Information” SCREEN.....	24

2 BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION	26
INITIAL SCREEN.....	26
TOUCH SCREEN OPERATION.....	27
INPUTTING LETTERS AND NUMBERS/ LIST SCREEN OPERATION.....	28
SCREEN ADJUSTMENT.....	31
MAP SCREEN OPERATION.....	33
2. SETUP	43
GENERAL SETTINGS.....	43
VOICE SETTINGS.....	53

3 NAVIGATION SYSTEM

1. DESTINATION SEARCH	58
DESTINATION SEARCH	58
STARTING ROUTE GUIDANCE.....	75
2. ROUTE GUIDANCE	79
ROUTE GUIDANCE SCREEN.....	79
TYPICAL VOICE GUIDANCE PROMPTS.....	82
DISTANCE AND TIME TO DESTINATION	85
SETTING AND DELETING DESTINATIONS	86
SETTING ROUTE	88
3. ADDRESS BOOK	97
NAVIGATION SETTINGS	97
4. SETUP.....	113
DETAILED NAVIGATION SETTINGS.....	113
VEHICLE SETTINGS	121
5. GPS (GLOBAL POSITIONING SYSTEM)	127
LIMITATIONS OF THE NAVIGATION SYSTEM.....	127

4 PHONE

1. PHONE OPERATION 132
 QUICK REFERENCE 132
 PHONE (HANDS-FREE SYSTEM FOR CELLULAR PHONE)..... 134
 REGISTER A Bluetooth® PHONE..... 139
 CALL ON THE Bluetooth® PHONE..... 143
 RECEIVE ON THE Bluetooth® PHONE..... 150
 TALK ON THE Bluetooth® PHONE..... 151
 Bluetooth® PHONE MESSAGE FUNCTION..... 154
2. SETUP 157
 PHONE SETTINGS..... 157
 Bluetooth® SETTINGS 179

5 AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION 192
 QUICK REFERENCE 192
 SOME BASICS..... 194
 RADIO OPERATION 200
 HD Radio™ TECHNOLOGY INFORMATION 203
 RADIO OPERATION (XM Satellite Radio BROADCAST) 208
 RADIO OPERATION (INTERNET RADIO BROADCAST) 214
 DVD PLAYER OPERATION..... 215
 USB MEMORY OPERATION 236
 iPod OPERATION 241
 Bluetooth® AUDIO OPERATION..... 245
 AUDIO/VIDEO REMOTE CONTROLS (STEERING SWITCHES) 255
 AUDIO/VIDEO SYSTEM OPERATING HINTS 257
2. SETUP 267
 AUDIO SETTINGS 267

6 VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION..... 270
 VOICE COMMAND SYSTEM 270
 NATURAL SPEECH INFORMATION (ENGLISH ONLY) 276
 EXPANDED VOICE COMMANDS..... 278
 COMMAND LIST 279

7 INFORMATION

1. INFORMATION DISPLAY 284
 FUEL CONSUMPTION 284
 MAP DATABASE VERSION AND COVERAGE AREA 285
2. XM FUNCTION-OVERVIEW 287
 XM SERVICES 287
3. XM FUNCTION OPERATION 288
 XM Sports 288
 XM Stocks 291
 XM Fuel Prices..... 294
 XM NavWeather™ 297
 XM NavTraffic® 300
4. SETUP 303
 XM SETTINGS..... 303



TABLE OF CONTENTS

8

APPS

1. ENTUNE-OVERVIEW 306
ENTUNE SERVICE 306
BEFORE USING ENTUNE 308

2. ENTUNE OPERATION 310
ACTIVATING “APPS” 310
LINKING “APPS” AND NAVIGATION
LOCAL FUNCTION 313
INPUTTING
KEYWORD OPERATION 315

9

**PERIPHERAL MONITORING
SYSTEM**

**1. REAR VIEW
MONITOR SYSTEM 318**
REAR VIEW MONITOR SYSTEM
OPERATION 318

INDEX

ALPHABETICAL INDEX 324

1

QUICK GUIDE

1 NAVIGATION OPERATION

- 1. OVERVIEW BUTTON AND GUIDANCE SCREEN..... 10
- 2. REGISTERING HOME 12
- 3. REGISTERING PRESET DESTINATIONS 14
- 4. OPERATION FLOW: GUIDING THE ROUTE 16
- 5. SETTING HOME AS THE DESTINATION 17

2 FUNCTION INDEX

- 1. NAVIGATION SYSTEM FUNCTION INDEX 18

3 QUICK REFERENCE

- 1. "Destination" SCREEN 20
- 2. "Setup" SCREEN 22
- 3. "Information" SCREEN 24

1

2

3

4

5

6


7

8

9

1. NAVIGATION OPERATION

1. OVERVIEW BUTTON AND GUIDANCE SCREEN

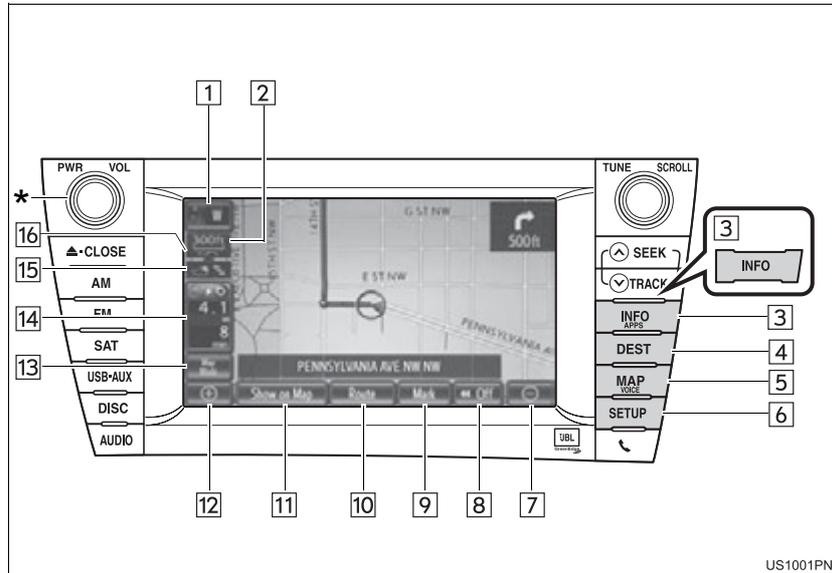

US1001PNI

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates whether the map orientation is set to north-up or heading-up. Touching this symbol changes the map orientation. Both north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).	41
2	Scale indicator	This figure indicates the map scale.	41
3	"INFO/APPS" ("INFO") button	Press to display the "Information" screen. For vehicles sold in Canada, the "INFO" button is used instead of the "INFO/APPS" button.	24, 285, 288, 291, 294, 297, 300, 310, 313
4	"DEST" button	Press to display the "Destination" screen.	12, 14, 16, 17, 20, 58
5	"MAP/VOICE" button	Press to repeat a voice guidance, cancel the map scroll, start guidance or display the current position.	33


No.	Name	Function	Page
6	“SETUP” button	Press to display the “Setup” screen.	22, 31, 43, 53, 97, 113, 121, 157, 179, 267, 303
7	Zoom out button	Touch to reduce the map scale.	41
8	“◀◀ Off”	Touch to obtain a broader view. Some of the buttons on the screen will not be displayed. They are displayed again by touching “On ▶▶”.	117
9	“Mark”	Touch to register the current position or the cursor position as an address book entry.	34
10	“Route”	Touch to change the route.	86, 88
11	“Show on Map”	Touch to browse information about guidance route, to set the POI (Point of Interest) icons to be displayed on the screen, or to record the route.	93, 301
12	Zoom in button	Touch to magnify the map scale.	41
13	“Map Mode”	Touch to display the “Map Mode” screen.	38
14	Distance and time to destination	Displays the distance, estimated travel and arrival time to the destination.	85
15	XM indicator	This mark is displayed when XM information is received.	299, 301
16	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	127

*: Press and hold the “PWR VOL” knob for 5 seconds or more to turn off the screen and restart the navigation system. Do this when the vehicle-mounted device response is extremely slow.

1. NAVIGATION OPERATION

2. REGISTERING HOME

- 1 Press the "DEST" button.

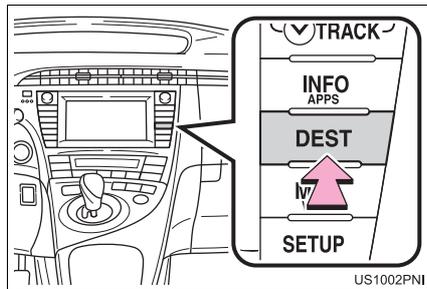

- 2 Touch "Go Home".




If a home address has not been registered, it can be registered by touching "Go Home".

- 3 Touch "Yes".



- 4 There are 4 different methods to search your home. (See "DESTINATION SEARCH" on page 58.)

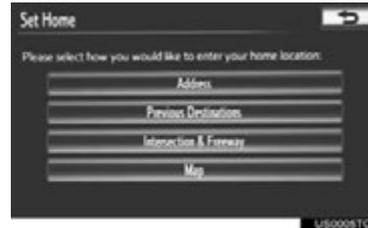

- 5 Touch "Enter".



The "Edit Home" screen is displayed.

6 Touch "OK".

Registration of home is complete.

Home can also be registered by touching **"Navigation"** on the "Setup" screen. (See "REGISTERING HOME" on page 98.)

 
The name, location, phone number and icon can be changed. (See "EDITING HOME" on page 99.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 59.)


1. NAVIGATION OPERATION

3. REGISTERING PRESET DESTINATIONS

- 1 Press the “DEST” button.



- 2 Touch one of the preset destination buttons.

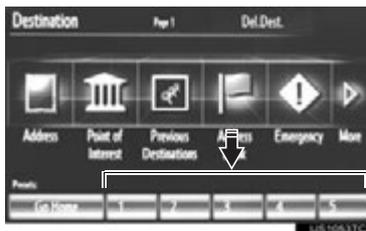


A preset destination can be set to any preset destination button that has not yet been set.

- 3 Touch “Yes”.




- 4 There are 4 different methods to search preset destinations. (See “DESTINATION SEARCH” on page 58.)

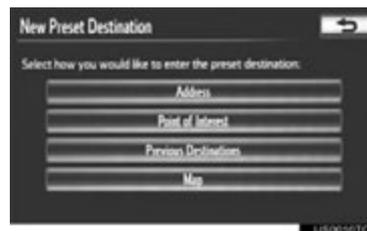

- 5 Touch “Enter”.



The “Edit Preset Destination” screen is displayed.

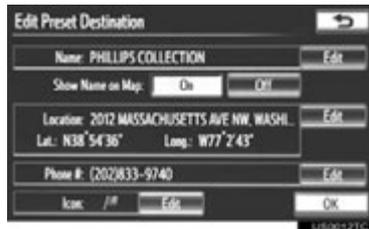6 Touch "OK".

Registration of preset destinations is complete.

Preset destinations can also be registered by touching **"Navigation"** on the "Setup" screen. (See "REGISTERING PRESET DESTINATIONS" on page 100.)

 
The name, location, phone number and icon can be changed. (See "EDITING PRESET DESTINATIONS" on page 101.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 59.)

1. NAVIGATION OPERATION

4. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the “DEST” button.



- 2 There are 10 different methods to search destinations. (See “DESTINATION SEARCH” on page 58.)


► Page 1



► Page 2



- 3 Touch “Go to”.

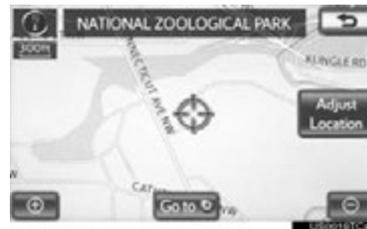

The navigation system performs a search for the route.

- 4 Touch “OK”, and start driving.



 
Routes other than the one recommended can also be selected. (See “STARTING ROUTE GUIDANCE” on page 75.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

1. NAVIGATION OPERATION

5. SETTING HOME AS THE DESTINATION

- 1 Press the "DEST" button.



- 2 Touch "Go Home".



"Go Home" can be used if your home address has been registered. (To register home, see "REGISTERING HOME" on page 98.)

Your home address is set as the destination. The navigation system performs a search for the route.

- 3 Touch "OK", and start driving.



Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 75.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

2. FUNCTION INDEX

1. NAVIGATION SYSTEM FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	10
Displaying the current position	33
Viewing the current position vicinity map	33
Changing the scale	41
Changing the map orientation	41
Displaying Points of Interest	93
Displaying the estimated travel/arrival time to the destination	85
Selecting the map mode	38
Deleting map screen buttons	117
Displaying traffic information	300

Searching destinations	Page
Searching the destination	58
Changing the selected search area	58
Operating the map location of the selected destination	75

► Route guidance

Before starting route guidance	Page
Setting the destination	75
Viewing alternative routes	77
Starting route guidance	75


Before starting or during route guidance	Page
Viewing the route	75
Adding destinations	86
Changing the route	88
Displaying the estimated travel/arrival time to the destination	85

During route guidance	Page
Pausing route guidance	92
Adjusting route guidance volume	54
Deleting the destination	87
Displaying the entire route map	89
► Useful functions	
Address book	Page
Registering address book entries	102
Marking icons on the map	104
Information	Page
Displaying vehicle maintenance	121
Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	134
Making a call on a Bluetooth® phone	143
Receiving a call on the Bluetooth® phone	150
Voice command system	Page
Operating the system with your voice	270

3. QUICK REFERENCE

1. “Destination” SCREEN

The “Destination” screen enables a destination search. Press the “**DEST**” button to display the “Destination” screen.

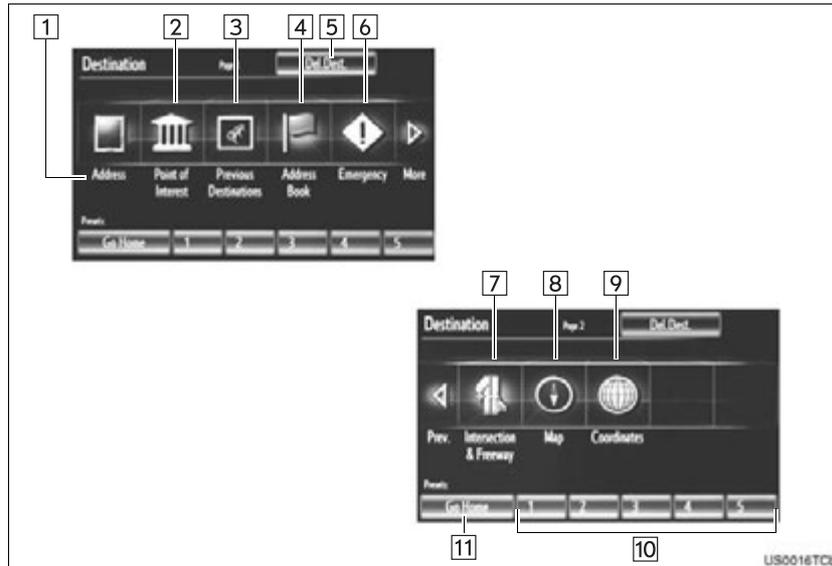


No.	Name	Function	Page
1	“Address”	Touch to input a house number and the street address using the input keys.	60
2	“Point of Interest”	Touch to select one of the POIs that have already been stored in the system’s database.	63
3	“Previous Destinations”	Touch to select a destination from any of the last 100 previously set destinations and from the previous starting point.	69
4	“Address Book”	Touch to select the desired location from a registered entry in “Address book”. (To register address book entries, see “REGISTERING ADDRESS BOOK ENTRIES” on page 103.)	69

No.	Name	Function	Page
5	"Del.Dest."	Touch to delete set destinations.	74
6	"Emergency"	Touch to select one of the 4 categories of emergency service points that have already been stored in the system's database.	70
7	"Intersection & Freeway"	Touch to enter the names of 2 intersecting streets or a freeway (interstate) entrance or exit. This is helpful if only the general vicinity, not the specific address, is known.	70
8	"Map"	Touch to enable setting a destination by touching a location on the map screen.	73
9	"Coordinates"	Touch to enter latitude and longitude coordinates.	73
10	Preset destination buttons	Touch to select one of the 5 preset destination points as a destination. If a preset destination point has not been registered, a message will be displayed asking if it is desirable to set a destination to the preset screen button. (To register a preset destination, see "REGISTERING PRESET DESTINATIONS" on page 100.)	59
11	"Go Home"	Touch to select your personal home address without having to enter the address each time. If a home address has not been registered, a message will be displayed and the setting screen will automatically appear. (To register home, see "REGISTERING HOME" on page 98.)	59

3. QUICK REFERENCE

2. “Setup” SCREEN

The items shown on the “Setup” screen can be set. Press the “**SETUP**” button to display the “Setup” screen.

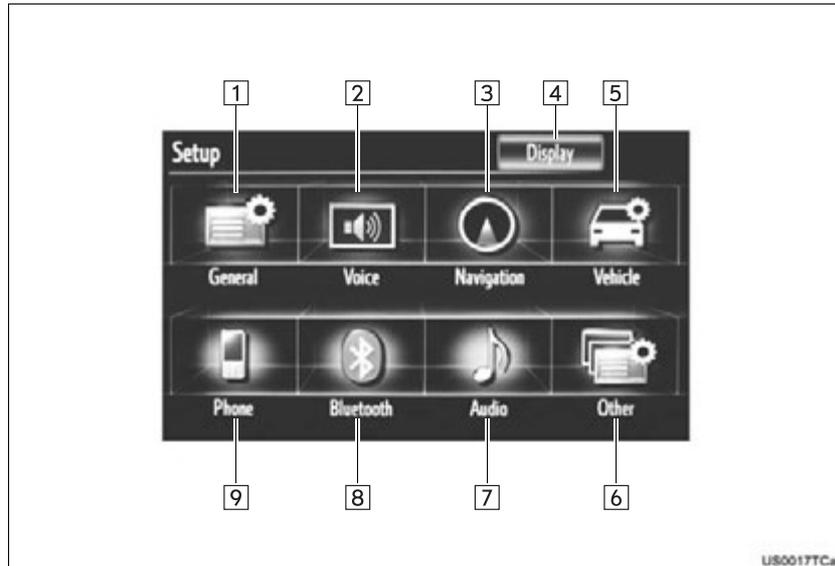


No.	Name	Function	Page
1	“General”	Touch to change the selected language, operation sound settings, automatic screen change, etc.	43
2	“Voice”	Touch to set the voice guidance settings.	53
3	“Navigation”	Touch to access the page which enables the setting of the average cruising speed, displayed screen contents, POI categories, etc.	97
4	“Display”	Touch to adjust the contrast and brightness of the screens, turn the display off, etc.	31
5	“Vehicle”	Touch to set vehicle information such as maintenance information.	121
6	“Other”	Touch to set XM Sports, XM Stocks and XM Fuel Prices.	303
7	“Audio”	Touch to set iPod and HD Radio™ channel settings.	267
8	“Bluetooth*”	Touch to set Bluetooth® phones and Bluetooth® audio devices.	179
9	“Phone”	Touch to set the phone sound, phonebook and message settings.	157

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. QUICK REFERENCE

3. “Information” SCREEN

This screen can be used to display the XM satellite system, fuel consumption, etc. Press the **“INFO/APPS”** button to display the “Information” screen.

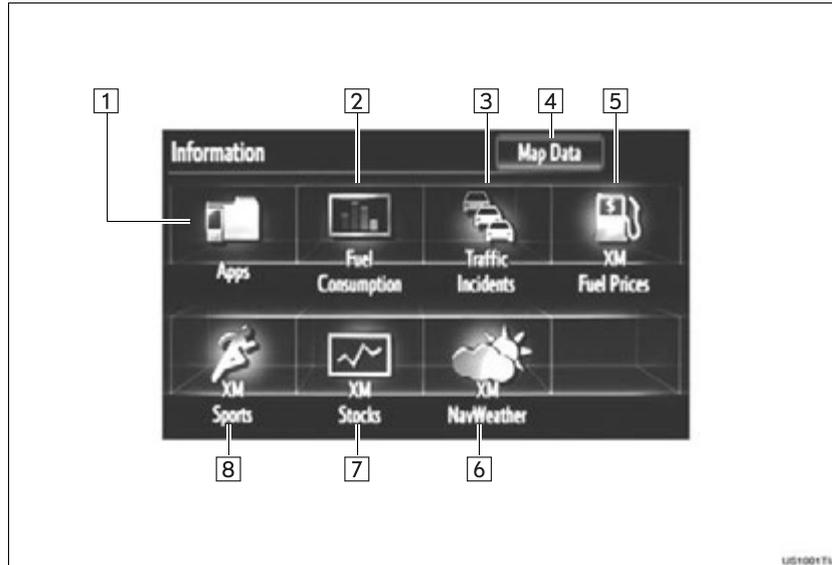

No.	Name	Function	Page
1	“Apps”	Touch to display the “Apps” screen.	310, 313
2	“Fuel Consumption”	Touch to display the fuel consumption screen.	284
3	“Traffic Incidents”	Touch to display traffic incidents.	300
4	“Map Data”	Touch to display mapdata information.	285
5	“XM Fuel Prices”	Touch to display current fuel prices and gas station locations information.	294
6	“XM NavWeather”	Touch to display weather information.	297
7	“XM Stocks”	Touch to display personally selected stocks information.	291
8	“XM Sports”	Touch to display personally selected sports teams information.	288

2

BASIC FUNCTION

1 BASIC INFORMATION BEFORE OPERATION

- 1. INITIAL SCREEN 26
- 2. TOUCH SCREEN OPERATION 27
- 3. INPUTTING LETTERS AND NUMBERS/LIST SCREEN OPERATION 28
- 4. SCREEN ADJUSTMENT 31
 - SCREEN SETTINGS ADJUSTMENT 31
- 5. MAP SCREEN OPERATION 33
 - CURRENT POSITION DISPLAY 33
 - SCREEN SCROLL OPERATION 33
 - SWITCHING THE SCREENS 38
 - MAP SCALE 41
 - ORIENTATION OF THE MAP 41
 - STANDARD MAP ICONS 42

2 SETUP

- 1. GENERAL SETTINGS 43
 - SCREENS FOR GENERAL SETTINGS 43
- 2. VOICE SETTINGS 53
 - SCREEN FOR VOICE SETTINGS 53

1

2

3

4

5

6

7

8

9

1. BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN

- 1 When the "POWER" switch is in ACCESSORY or ON mode, the initial screen will be displayed and the system will begin operating.



- Images shown on the initial screen can be changed to suit individual preferences. (See page 48.)

CAUTION

- When the vehicle is stopped with the hybrid system operating, always apply the parking brake for safety.

- After a few seconds, the "CAUTION" screen will be displayed.



- After about 5 seconds, the "CAUTION" screen automatically switches to the map screen. (If a button other than the "MAP/VOICE" button is pressed, the function's corresponding screen will be displayed.)

MAINTENANCE INFORMATION

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Maintenance Reminder" screen will be displayed when the navigation system is turned on.



- This screen goes off if the screen is not operated for several seconds.
- To prevent this screen from being displayed again, touch "Do Not Display This Message Again".
- To register maintenance information, see "MAINTENANCE" on page 121.

1. BASIC INFORMATION BEFORE OPERATION

2. TOUCH SCREEN OPERATION

This system is operated mainly by the buttons on the screen. (Referred to as screen buttons in this manual.)

- When a screen button is touched, a beep sounds. (To set the beep sound, see page 43.)



NOTICE

- To prevent damaging the screen, lightly touch the screen buttons with your finger pad.
- Do not operate or rub the screen with a ballpoint pen, a mechanical pencil, finger nail, a pointy and/or hard object because this will damage the screen.
- Do not use objects other than your finger to touch the screen.
- When wiping the touch screen, it is advisable to wipe with a soft and dry cloth wrapped around the finger. Do not use chemical cleaners to clean the touch screen. Also, be careful not to apply excessive force on the screen.

INFORMATION

- If the system does not respond to touching a screen button, move your finger away from the screen and then touch it again.
- Dimmed screen buttons cannot be operated.
- To operate the touch screen, press touch screen buttons properly with finger pad.
- When dew condensation occurs inside the touch screen, it is sometimes difficult to operate the display properly. In such case, please leave the screen untouched and do not operate the touch screen until dew condensation disappears.
- The displayed image may become darker and moving images may be slightly distorted when the screen is cold.
- In extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the screen buttons may be harder than usual to depress.
- When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

1. BASIC INFORMATION BEFORE OPERATION

3. INPUTTING LETTERS AND NUMBERS/LIST SCREEN OPERATION

When searching for an address or name, or entering data, letters and numbers can be input via the screen.

- Keyboard layout can be changed. (See page 47.)

TO INPUT LETTERS AND NUMBERS

- 1 Touch "A-Z" to display the alphabet keys.



- 2 Touch the keys directly to enter letters or numbers.



: Touch to erase one character. Touch and hold to continue erasing characters.

- On certain letter entry screens, letters can be entered in upper or lower case.


Icon	Function
	Touch to enter in lower case.
	Touch to enter in upper case.

TO INPUT SYMBOLS

- 1 Touch "Other" to display symbol keys.




- 2 Touch the symbol keys directly to enter symbols.

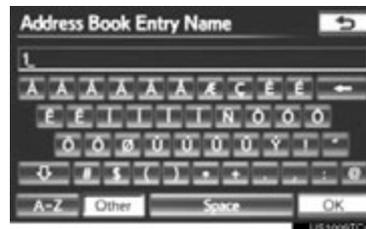


: Touch to erase one symbol. Touch and hold to continue erasing symbols.

TO DISPLAY THE LIST

- 1 Touch **“OK”** to search for an address or a name.

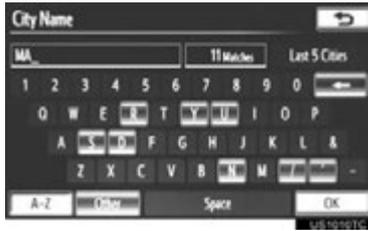

- Matching items from the database are listed even if the entered address or name is incomplete.
- The list will be displayed automatically if the maximum number of characters is entered or the number of matching items is 5 or less.

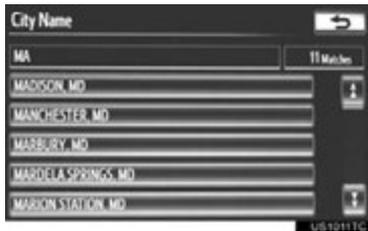


INFORMATION

- The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays **“***”** on the screen.

LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

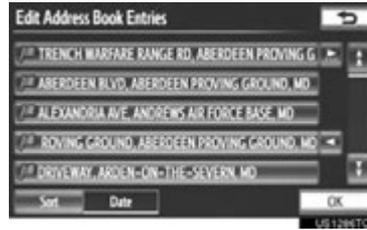

Icon	Function
	Touch to skip to the next or previous page.
	Touch and hold or to scroll through the displayed list.
	This indicates the displayed screen's position.
	If appears to the right of an item name, the complete name is too long to display. Touch to scroll to the end of the name.
	Touch to move to the beginning of the name.

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION


SORTING

The order of a list displayed on the screen can be rearranged.

1 Touch **“Sort”**.

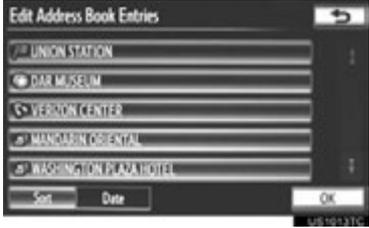

2 Touch the desired sorting criteria.

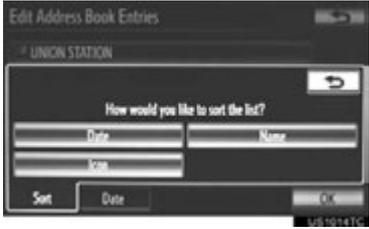

Screen button	Function
“Distance”	Touch to sort in order of distance from the current position.
“Date”	Touch to sort in order of date.
“Category”	Touch to sort in order of category.
“Icon”	Touch to sort in order of icon.
“Name”	Touch to sort in order of name.
“Brand”	Touch to sort in order of brand name. (XM functions)
“Price”	Touch to sort in order of price. (XM functions)

1. BASIC INFORMATION BEFORE OPERATION


4. SCREEN ADJUSTMENT

The contrast and brightness of the screen display and the image the camera displays can be adjusted. The display can also be turned off, and/or changed to either day or night mode. (For information regarding audio/video screen adjustment, see "AUDIO SCREEN ADJUSTMENT" on page 226.)

SCREEN SETTINGS ADJUSTMENT

ADJUSTING SCREEN DISPLAY AND CAMERA SETTINGS


- 1 Press the "SETUP" button.

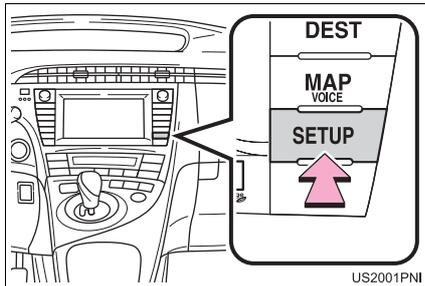

- 2 Touch "Display".



- ▶ Adjusting the screen display

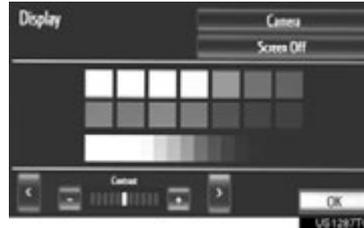

"Camera": Touch to adjust the image the camera displays.

- ▶ Adjusting the image the camera displays




"Map Menu": Touch to return to the screen display settings.

CONTRAST AND BRIGHTNESS ADJUSTMENT

The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings. The display can also be turned off.

- 1 Touch "<" or ">" to select the desired function ("Contrast" or "Brightness").

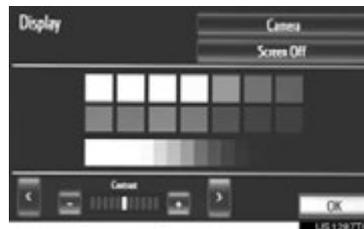

2

BASIC FUNCTION

- 2 Touch the desired screen button to adjust contrast and brightness.

Screen button	Function
“Contrast” “+”	Touch to strengthen the contrast of the screen.
“Contrast” “-”	Touch to weaken the contrast of the screen.
“Brightness” “+”	Touch to brighten the screen.
“Brightness” “-”	Touch to darken the screen.


- 3 After adjusting the screen, touch “OK”.

- The screen goes off when “Screen Off” is touched. To turn the “Display” screen back on, press any button. The selected screen appears.

CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode.

- 1 To display the screen in day mode, even with the headlight switch on, touch “Day Mode” for brightness and contrast control.

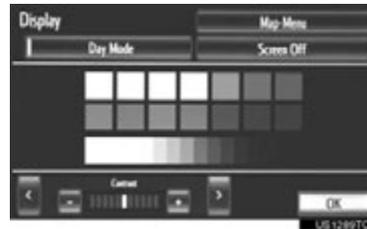

- If the instrument panel light control switch is turned fully to upper, the displays condition is not changed to night mode even if headlight switch is turned on.

INFORMATION


- If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the hybrid system turned off.

1. BASIC INFORMATION BEFORE OPERATION

5. MAP SCREEN OPERATION

CURRENT POSITION DISPLAY

When starting the navigation system, the current position is displayed first. This screen displays the current position and a map of the surrounding area.

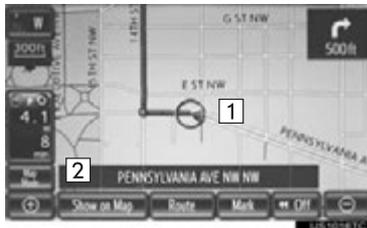

- The current position mark (1) appears in the center or bottom center of the map screen.
- A street name will appear on the bottom of the screen, depending on the scale of the map (2).
- The screen can be returned to this map screen that shows the current position at any time, from any screen by pressing the “MAP/VOICE” button.

- To correct the current position manually, see page 118.

INFORMATION


- While driving, the current position mark is fixed on the screen and the map moves.
- The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.

INFORMATION

- After the 12-volt battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.

SCREEN SCROLL OPERATION

When any point on the map is touched, that point moves to the center of the screen and is shown by the cursor mark (1).

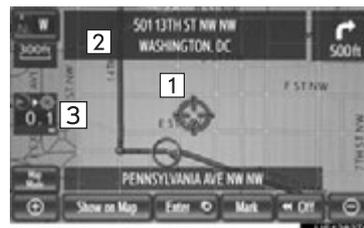

- Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.
- If a finger touches and holds the map screen, it will continue scrolling in that direction until the finger is removed.
- A street name, city name, etc. of the touched point will be shown, depending on the scale of the map (2). Distance from the current position to the cursor mark will also be shown (3).

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

- After the screen is scrolled, the map remains centered at the selected location until another function is activated. The current position mark will continue to move along your actual route and may move off the screen. When the “MAP/VOICE” button is pressed, the current position mark returns to the center of the screen and the map moves as the vehicle proceeds along the designated route.
- When the scroll feature is used, the current position mark may disappear from the screen. Press the “MAP/VOICE” button to display the current position on the map screen.

TO SET THE CURSOR POSITION AS A DESTINATION

A specific point on the map can be set as a destination using the scroll function.

- 1 Touch “Enter” .



- The screen changes and displays the map location of the selected destination and the route preference. (See “STARTING ROUTE GUIDANCE” on page 75.)


TO REGISTER THE CURSOR POSITION AS AN ADDRESS BOOK ENTRY

Address book entry registration enables easy access to a specific point.

- 1 Touch “Mark”.



- 2 This screen is displayed.

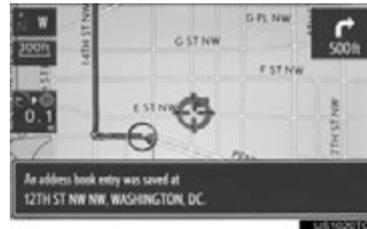


- The registered point is shown by  on the map.

- To change the icon or name, etc., see “EDITING ADDRESS BOOK ENTRIES” on page 103.

INFORMATION

- Up to 100 address book entries can be registered. If there is an attempt to register more than 100 address book entries, an error message will appear.

TO SEE INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

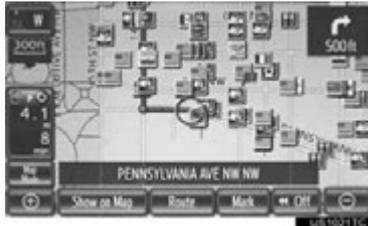

- To display information about an icon, set the cursor on it.


POI INFORMATION

When the cursor is set on a POI icon, the name and **“Info”** are displayed at the top of the screen.

- 1 Touch **“Info”**.



- 2 Information such as the name, address, position and phone number are displayed.

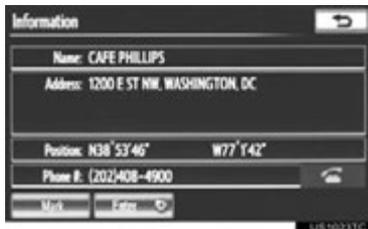

- If **“Enter”** is touched, the cursor position will be set as a destination.
- If a destination has already been set, **“Enter”** and **“Add to Route”** will be displayed.

“Enter”: Touch to delete the existing destination(s) and set a new one.

“Add to Route”: Touch to add a destination.

- To register this POI as an address book entry, touch **“Mark”**. (See **“REGISTERING ADDRESS BOOK ENTRIES”** on page 103.)

- If is touched, the registered phone number can be called.

- The desired POI can be displayed on the map screen. (See **“DISPLAY POI ICONS”** on page 93.)

2

BASIC FUNCTION


■ ADDRESS BOOK ENTRY INFORMATION

When the cursor is set on an address book entry icon, the name and “Info” are displayed at the top of the screen.

1 Touch “Info”.



2 Information such as the name, address, position and phone number are displayed.

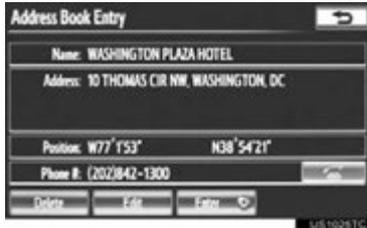

● If “Enter” is touched, the cursor position will be set as a destination.

● If a destination has already been set, “Enter” and “Add to Route” will be displayed.

“Enter”: Touch to delete the existing destination(s) and set a new one.

“Add to Route”: Touch to add a destination.

● To edit an address book entry, touch “Edit”. (See “EDITING ADDRESS BOOK ENTRIES” on page 103.)


● To delete an address book entry, touch “Delete”.

● If is touched, the registered phone number can be called.


DESTINATION INFORMATION

When the cursor is set on a destination icon, the name and “Info” are displayed on the top of the screen.

- 1 Touch “Info”.

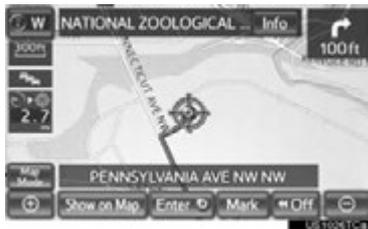

- 2 Information such as the name, address, position and phone number are displayed.

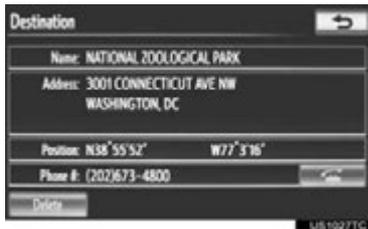

- To delete a destination, touch “Delete”.
- If is touched, the registered phone number can be called.

XM NavTraffic® TEXT INFORMATION

When the XM NavTraffic® icon on the map screen is touched, the XM NavTraffic® information bar will appear on the upper part of the screen.

- 1 Touch “Info”.



- 2 Traffic information will be displayed on the screen.



- To display detailed traffic event information, touch “Detail”.



2 BASIC FUNCTION

SWITCHING THE SCREENS

Any of the screen configurations can be selected.

- 1 Touch **“Map Mode”**.



- 2 Touch the screen buttons to select the desired configuration.



- Depending on the conditions, certain screen configuration buttons cannot be selected.

Screen button	Function
“Map Only”	Touch to display the single map screen. (See page 39.)
“Turn List”	Touch to display the turn list screen. (See page 81.)

Screen button	Function
“Intersection”	Touch to display the intersection guidance screen or the guidance screen on the freeway. (See page 80.)
“Audio”	Touch to display the audio screen. (See page 39.)
“Fuel Consumption”	Touch to display the fuel consumption screen. (See page 39.)
“Other Information”	Touch to display the following 4 screen configurations: “Dual map”, “Compass”, “Turn-by-Turn Arrow” and “Freeway Exit List”.
“Dual map”	Touch to display the dual map screen. (See page 39.)
“Compass”	Touch to display the compass mode screen. (See page 40.)
“Turn-by-Turn Arrow”	Touch to display the turn-by-turn arrow screen. (See page 81.)
“Freeway Exit List”	Touch to display the freeway exit list screen. (See page 79.)

SCREEN CONFIGURATIONS

MAP ONLY

This is a regular map screen.



- The screen shows the single map.
- While on a different screen, touching **“Map Only”** will display the single map screen.

AUDIO

The audio screen and the map screen are displayed.



- Information on the current radio station or track is displayed.
- If a different screen is displayed, touch **“Audio”** on the “Map Mode” screen.
- For audio system operation, refer to “AUDIO/VIDEO SYSTEM OPERATION”. (See page 192.)

FUEL CONSUMPTION

The fuel consumption screen and the map screen are displayed.



- Touching “<” or “>” allows selection of the desired mode (“Energy Monitor” or “Consumption”).
- If a different screen is displayed, touch **“Fuel Consumption”** on the “Map Mode” screen.
- For an explanation on each fuel consumption mode, refer to “FUEL CONSUMPTION”. (See page 284.)

DUAL MAP

The map screen can be split into two.




- This screen shows the dual map. The map on the left is the main map.
- While on a different screen, touching **“Dual map”** will display the dual map screen.

2
BASIC FUNCTION

■ EDITING RIGHT MAP

The right side map can be edited by touching any point on the right side map.

- 1 Touch the desired screen button.

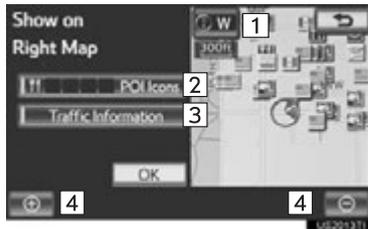

- The following procedures can be performed on this screen:

No.	Function
1	Changing the orientation of the map
2	Displaying POI icons
3	Showing XM NavTraffic® information (See page 301.)
4	Changing the map scale

- 2 Touch “OK” when editing is completed.

- The screen returns to the dual map screen.

■ COMPASS

The current position is indicated with a compass.



- Information about the destination, current position and a compass is displayed on the screen.

- While on a different screen, touching “Compass” will display the compass mode screen.

INFORMATION

- The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.
- When the vehicle travels out of the coverage area, the guidance screen changes to the compass mode screen.

MAP SCALE

- 1 Touch or to change the scale of the map screen.



- The scale bar and indicator at the bottom of the screen indicate the map scale menu. The scale range is from 150 ft. (50 m) to 250 miles (400 km).
- Touch and hold or to continue changing the scale of the map screen.
- The scale of the map screen can be changed by touching the scale bar directly. This function is not available while driving.

INFORMATION

- The map scale is displayed under the north-up or heading-up symbol at the top left of the screen.
- When the map scale is at the maximum range of 250 miles (400 km), is not shown. When the map scale is at the minimum range of 150 ft. (50 m), is not shown.

ORIENTATION OF THE MAP


The orientation of the map can be changed from north-up to heading-up by touching the orientation symbol at the top left of the screen.

- 1 Touch or .

▶ North-up screen



▶ Heading-up screen

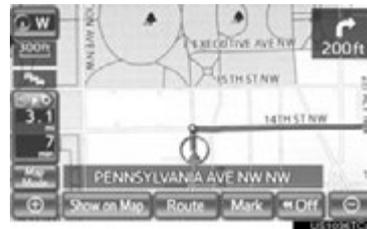

: North-up symbol

Regardless of the direction of vehicle travel, north is always up.

: Heading-up symbol

The direction of vehicle travel is always up.

- Both the north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

STANDARD MAP ICONS


Icon	Name
	Island
	Park
	Industry
	Business facility
	Airport
	Military
	University
	Hospital
	Stadium
	Shopping mall
	Golf

2. SETUP

1. GENERAL SETTINGS

Used for language selection and the on/off settings of operation sounds and automatic screen change.

 - 1 Press the **“SETUP”** button.



- 2 Touch **“General”**.





- 3 Touch the items to be set.



- 4 Touch **“Save”**.

SCREENS FOR GENERAL SETTINGS

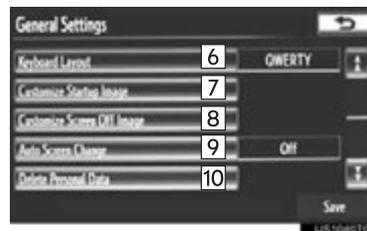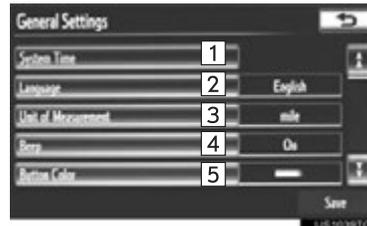

- On this screen, the following functions can be performed:

2

BASIC FUNCTION

2. SETUP


No.	Function
1	Touch to change the time zone and select “On” or “Off” for daylight saving time. (See “SYSTEM TIME SETTINGS” on page 45.)
2	Touch to change the language. (See “SELECTING A LANGUAGE” on page 46.)
3	Touch to change the distance unit. (See “UNIT OF MEASUREMENT” on page 46.)
4	Touch to turn the sound beeps “On” or “Off” .
5	Touch to change the screen button color. (See “SELECTING A BUTTON COLOR” on page 47.)
6	Touch to change the keyboard layout. (See “SELECTING A KEYBOARD LAYOUT” on page 47.)
7	Touch to customize the opening image. (See “CHANGING THE START-UP IMAGE” on page 48.)
8	Touch to customize the screen off image. (See “CHANGING THE SCREEN OFF IMAGE” on page 50.)

No.	Function
9	Touch to select “On” or “Off” for automatic screen changes from the audio screen to the map screen. If “On” is selected, the screen will automatically return to the map screen from the audio screen after 20 seconds.
10	Touch to delete personal data. (See “DELETING PERSONAL DATA” on page 52.)
11	Touch to update program versions. For details, contact your Toyota dealer.
12	Touch to update gracenote database versions. For details, contact your Toyota dealer.


SYSTEM TIME SETTINGS

Used for changing time zones and the on/off settings of daylight saving time.

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“System Time”**.

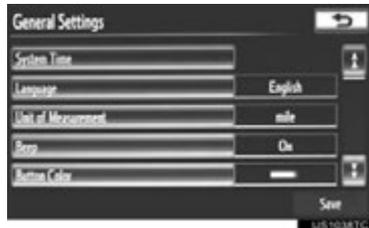

- 4 Touch the items to be set.

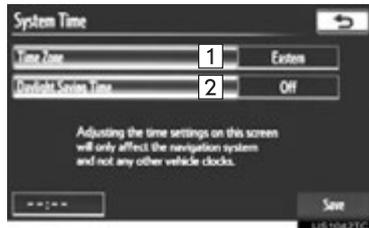

- On this screen, the following functions can be performed:


No.	Function
1	Touch to change the time zone. (See “TIME ZONE” on page 45.)
2	Touch to select “On” or “Off” for daylight saving time.

- 5 Touch **“Save”**.


TIME ZONE

A time zone can be selected and GMT can be set.

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“System Time”** on the “General Settings” screen.
- 4 Touch **“Time Zone”**.

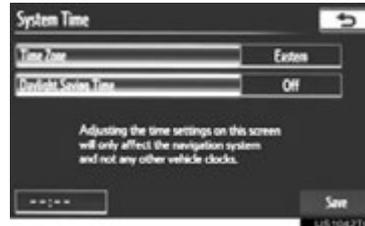

- 5 Touch the desired time zone.

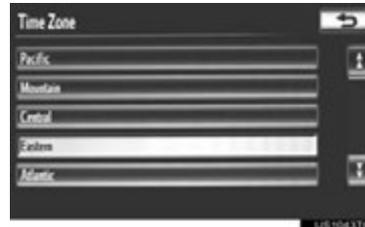

- If **“Other”** is touched, the zone can be adjusted manually. Touch **“+”** or **“-”** to adjust the time zone and then touch **“OK”**.



- 6 Touch **“Save”**.

2 BASIC FUNCTION

2. SETUP

SELECTING A LANGUAGE

The language can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“Language”**.



- 4 Touch the desired screen button.



- 5 Touch **“Yes”**.
 - The previous screen will be displayed.
- 6 Touch **“Save”**.

UNIT OF MEASUREMENT

Distance unit can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“Unit of Measurement”**.



- 4 Touch **“km”** or **“mile”**.




- The previous screen will be displayed.
- 5 Touch **“Save”**.

● This function is available only in English or Spanish. To change language, see “SELECTING A LANGUAGE” on page 46.

SELECTING A BUTTON COLOR

The color of the screen buttons can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“Button Color”**.

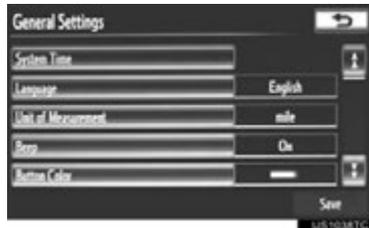

- 4 Touch the desired screen button color.




- The previous screen will be displayed.

- 5 Touch **“Save”**.


SELECTING A KEYBOARD LAYOUT

Keyboard layout can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“Keyboard Layout”**.

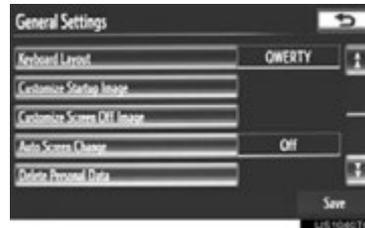

- 4 Touch **“ABC”** or **“QWERTY”** of “Keyboard Layout” to select a keyboard layout.

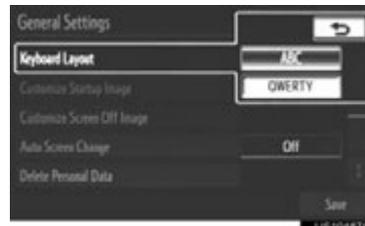

- The previous screen will be displayed.

- 5 Touch **“Save”**.

2

BASIC FUNCTION

2. SETUP

LAYOUT TYPE

▶ “ABC” type



▶ “QWERTY” type



CHANGING THE STARTUP IMAGE

When the “POWER” switch is in ACCESSORY or ON mode, the initial screen will be displayed.


An image can be copied from a USB memory and used as the startup image. (For information regarding the opening image, see “INITIAL SCREEN” on page 26.)

INFORMATION


- When saving the images to a USB, name the folder that the startup image is saved to “StartupImage” and name the folder that the screen off image is saved to “DisplayOffImage”. If these folder names are not used, the navigation system cannot download the images. (The folder names are case sensitive.)
- The images file extension is JPG or JPEG.
- The images file name, including the file extension, can be up to 32 characters.
- Image files of 10MB or less can be saved.
- Up to 3 images can be downloaded.

■ TRANSFERRING DATA

- 1 Open the console box.

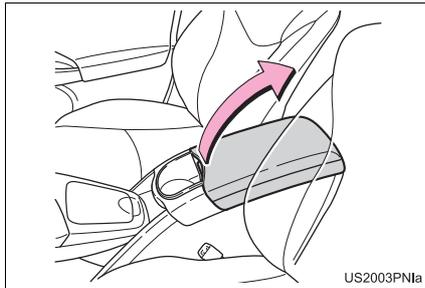


- 2 Open the cover and connect a USB memory.

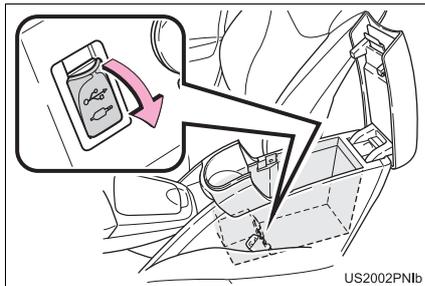

- Turn on the power of the USB memory if it is not turned on.
- 3 Close the console box.
- 4 Press the **“SETUP”** button.
- 5 Touch **“General”** on the **“Setup”** screen.

- 6 Touch **“Customize Startup Image”**.

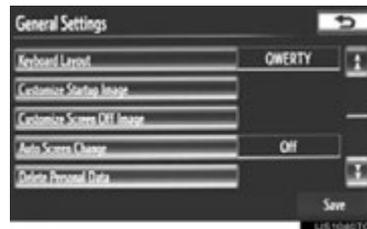

- 7 Touch **“Transfer”**.



- 8 Touch **“Yes”**.

2

BASIC FUNCTION

2. SETUP

■ SETTING THE STARTUP IMAGE

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the **“Setup”** screen.
- 3 Touch **“Customize Startup Image”** on the **“General Settings”** screen.
- 4 Touch the desired image.



- 5 Touch **“Save”**.

■ DELETING TRANSFERRED IMAGES

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the **“Setup”** screen.
- 3 Touch **“Customize Startup Image”** on the **“General Settings”** screen.
- 4 Touch **“Delete All”**.




- 5 Touch **“Yes”**.

■ CHANGING THE SCREEN OFF IMAGE


Touch **“Screen Off”** to turn off the screen. An image can be copied from a USB memory and can be set to display when **“Screen Off”** is touched. (For more information on **“Screen Off”**, see **“SCREEN ADJUSTMENT”** on page 31.)

■ TRANSFERRING DATA

- 1 Open the console box.

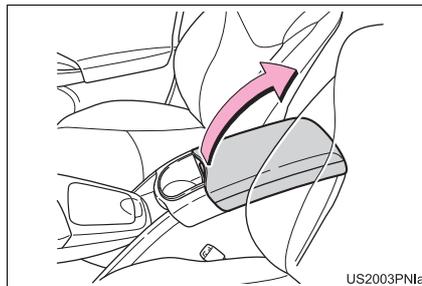


- 2 Open the cover and connect a USB memory.

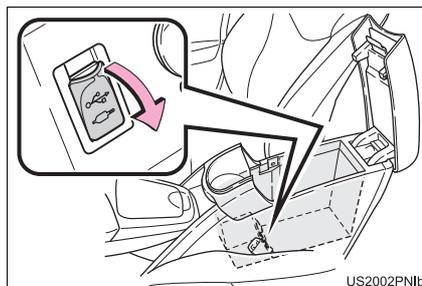

- Turn on the power of the USB memory if it is not turned on.
- 3 Close the console box.

- 4 Press the **“SETUP”** button.
- 5 Touch **“General”** on the “Setup” screen.
- 6 Touch **“Customize Screen Off Image”**.

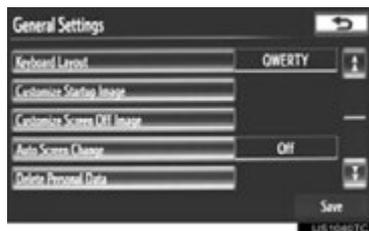

- 7 Touch **“Transfer”**.



- 8 Touch **“Yes”**.

■ SETTING THE SCREEN OFF IMAGE

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“Customize Screen Off Image”** on the “General Settings” screen.
- 4 Touch the desired image.



- 5 Touch **“Save”**.

■ DELETING TRANSFERRED IMAGES

- 1 Press the **“SETUP”** button.
- 2 Touch **“General”** on the “Setup” screen.
- 3 Touch **“Customize Screen Off Image”** on the “General Settings” screen.
- 4 Touch **“Delete All”**.




- 5 Touch **“Yes”**.

2

BASIC FUNCTION

DELETING PERSONAL DATA

- 1 Press the “**SETUP**” button.
- 2 Touch “**General**” on the “Setup” screen.
- 3 Touch “**Delete Personal Data**”.

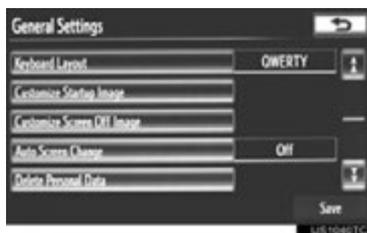

- 4 Touch “**Delete**”.



- 5 Touch “**Yes**”.

- The following personal data can be deleted or returned to their default settings:
 - Maintenance conditions
 - Maintenance information off setting
 - Address book
 - Areas to avoid
 - Previous points
 - Route guidance
 - Route trace
 - Phonebook data
 - Call history data
 - Speed dial data
 - Bluetooth® phone data
 - Phone sound settings
 - Phone display settings
 - Message settings
 - Audio setting
 - Bluetooth® audio setting
 - Startup image data
 - Screen off image data

INFORMATION


- This function is not available while driving.

2. SETUP

2. VOICE SETTINGS

Voice guidance can be set.


- 1 Press the **“SETUP”** button.

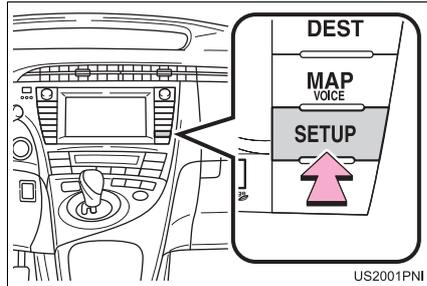

- 2 Touch **“Voice”**.





- 3 Touch the items to be set.

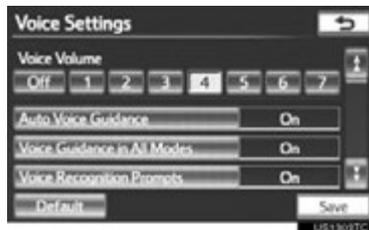

- 4 Touch **“Save”**.

SCREEN FOR VOICE SETTINGS

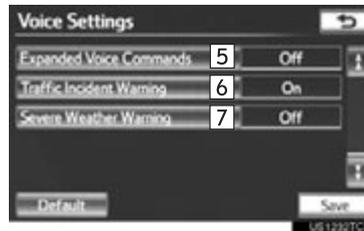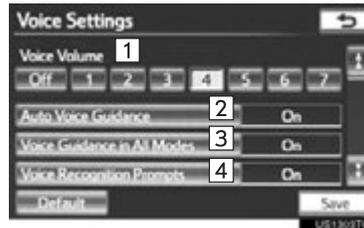

2

BASIC FUNCTION

- On this screen, the following functions can be performed:

No.	Function
1	The voice guidance volume can be adjusted or switched off. (See “VOICE VOLUME” on page 54.)
2	Voice guidance during route guidance can be set to “On” or “Off”.
3	Voice guidance during audio system use can be set to “On” or “Off”.
4	Voice recognition prompts can be set to “On” or “Off”. This setting can also be changed on the “Shortcut Menu” screen. (See page 270.)
5	When “On” is selected, the audio/video system can be operated using voice commands.

2. SETUP


No.	Function
6	When using the traffic information function, voice guidance can be set to “On” or “Off” . (See “TRAFFIC INCIDENT WARNING” on page 54.)
7	When using the XM NavWeather™ function, the severe weather warning can be set to “On” or “Off” .

- To reset all setup items, touch **“Default”**.

VOICE VOLUME

The voice guidance volume can be adjusted or switched off.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Voice”** on the “Setup” screen.
- 3 Select the desired level by touching the appropriate number.

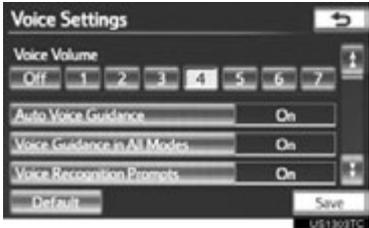

- If voice guidance is not needed, touch **“Off”** to disable the feature.

- 4 Touch **“Save”**.

TRAFFIC INCIDENT WARNING

Traffic congestion information can be received via voice guidance while being guided to the desired destination.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Voice”** on the “Setup” screen.
- 3 Touch **“On”** of “Traffic Incident Warning”.



- 4 Touch **“Save”**.

INFORMATION

- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate.

3

NAVIGATION SYSTEM

1 DESTINATION SEARCH

1. DESTINATION SEARCH.....	58
SELECTING THE SEARCH AREA	58
DESTINATION SEARCH BY HOME.....	59
DESTINATION SEARCH BY PRESET DESTINATIONS	59
DESTINATION SEARCH BY "Address"	60
DESTINATION SEARCH BY "Point of Interest"	63
DESTINATION SEARCH BY "Previous Destinations".....	69
DESTINATION SEARCH BY "Address Book"	69
DESTINATION SEARCH BY "Emergency"	70
DESTINATION SEARCH BY "Intersection & Freeway".....	70
DESTINATION SEARCH BY "Map"	73
DESTINATION SEARCH BY "Coordinates"	73
DELETING SET DESTINATIONS.....	74
2. STARTING ROUTE GUIDANCE ...	75

3

NAVIGATION SYSTEM

2 ROUTE GUIDANCE

- 1. ROUTE GUIDANCE SCREEN 79
- 2. TYPICAL VOICE GUIDANCE PROMPTS.....82
- 3. DISTANCE AND TIME TO DESTINATION 85
- 4. SETTING AND DELETING DESTINATIONS..... 86
 - ADDING DESTINATIONS 86
 - REORDERING DESTINATIONS..... 86
 - DELETING DESTINATIONS 87
- 5. SETTING ROUTE 88
 - DETOUR SETTING 88
 - ROUTE OVERVIEW..... 89
 - ROUTE PREFERENCE 90
 - PAUSING AND RESUMING GUIDANCE..... 92
 - SHOW ON MAP 93
 - ROUTE TRACE..... 96

3 ADDRESS BOOK

- 1. NAVIGATION SETTINGS 97
 - SETTING UP THE "Home" 98
 - SETTING UP THE "Preset Destinations" 100
 - SETTING UP THE "Address Book" 102
 - SETTING UP THE "Areas to Avoid" 107
 - DELETING PREVIOUS DESTINATIONS 111

4 SETUP

- 1. DETAILED NAVIGATION SETTINGS 113
 - SCREENS FOR NAVIGATION SETTINGS..... 113
- 2. VEHICLE SETTINGS 121
 - MAINTENANCE..... 121
 - VEHICLE CUSTOMIZATION..... 126

5 GPS (GLOBAL POSITIONING SYSTEM)


- 1. LIMITATIONS OF THE NAVIGATION SYSTEM 127

1
2
3
4
5
6
7
8
9

1. DESTINATION SEARCH

1. DESTINATION SEARCH

- 1 Press the “DEST” button.

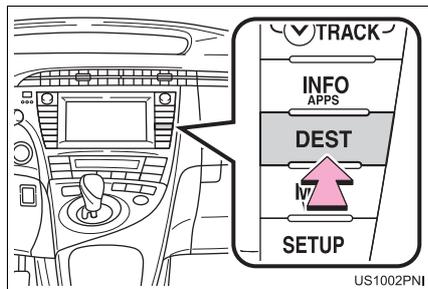

- 2 This screen is displayed.



- One of 10 different methods can be used to search a destination. (See pages 59 through 73.)


INFORMATION

- When searching a destination, the response to the screen button may be slow.

SELECTING THE SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using “Address”, “Point of Interest” or “Intersection & Freeway”.

- 1 Touch “Change State/Province” to display a list of the states/provinces/territories of the United States and Canada.

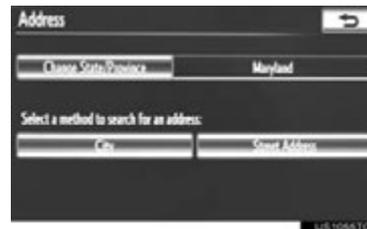

- For map database information and updates, see “MAP DATABASE VERSION AND COVERAGE AREA” on page 285.

- If a state (province) has not been selected yet, “Select State/Province” is displayed.

- 2 Touch the desired state (province).



- The previous screen will be displayed.

DESTINATION SEARCH BY HOME

- 1 Press the **"DEST"** button.
- 2 Touch **"Go Home"**.



- Your home address is set as the destination. The navigation system performs a search for the route.

- 3 Touch **"OK"**.


- To use this function, it is necessary to set a home address. (To register home, see page 98.)

INFORMATION

- If a home address has not been registered, a message confirming if it is desirable to set a home will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the set home address if **"OK"** is touched even while driving.

DESTINATION SEARCH BY PRESET DESTINATIONS

- 1 Press the **"DEST"** button.
- 2 Touch any of the preset destination buttons (1-5) on the "Destination" screen.

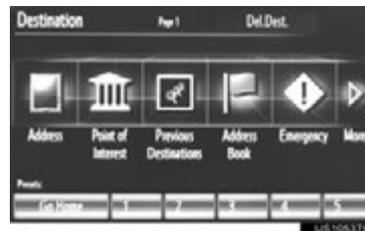

- The selected preset destination point is set as the destination. The navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 75.)

- 3 Touch **"OK"**.

- To use this function, it is necessary to set preset destinations to the preset screen buttons (1-5). (See "REGISTERING PRESET DESTINATIONS" on page 100.)

INFORMATION

- If a preset destination point has not been registered, a message confirming if it is desirable to set a preset destination will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the preset destination point if **"OK"** is touched even while driving.

1. DESTINATION SEARCH

DESTINATION SEARCH BY “Address”

There are 2 methods to search a destination by address:


- (a) Search by city
- (b) Search by street address

- 1 Press the “**DEST**” button.
- 2 Touch “**Address**” on the “Destination” screen.
- 3 Touch a screen button to select the desired search method.



SELECTING A CITY TO SEARCH


- 1 Press the “**DEST**” button.
- 2 Touch “**Address**” on the “Destination” screen.
- 3 Touch “**City**”.

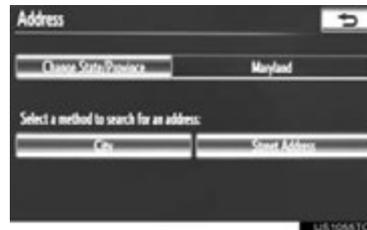

- 4 Input a city name.




- 5 Touch the screen button of the desired city name from the displayed list.

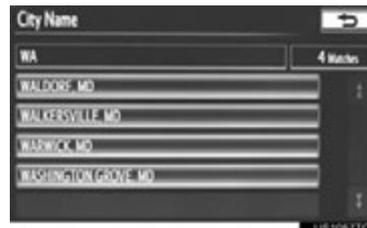

- 6 Input the street name and touch “OK”.



- 7 When the desired street name is found, touch the corresponding screen button.

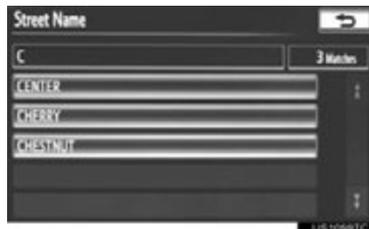

- When the desired street name is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)

- 8 Input a house number.



- If the same address exists in more than one city, the current screen changes to the address list screen.

SEARCHING FROM THE LAST 5 CITIES

- 1 Touch “Last 5 Cities”.



- 2 Touch the screen button of the desired city name from the displayed list.



- The current screen changes to the screen for inputting a street name. (See “SELECTING A CITY TO SEARCH” on page 60.)

INFORMATION


- If the navigation system has never been used, this function will not be available.

3 NAVIGATION SYSTEM

1. DESTINATION SEARCH

SEARCH BY STREET ADDRESS

- 1 Press the “**DEST**” button.
- 2 Touch “**Address**” on the “Destination” screen.
- 3 Touch “**Street Address**”.

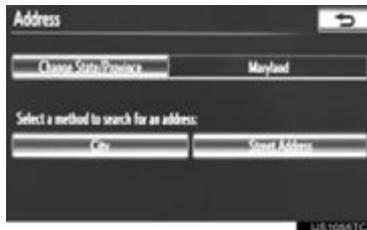

- 4 Touch numbers directly on the screen to input the house number.




- After inputting the house number, touch “**OK**” to display the screen for inputting the street name.

- 5 Input the street name and touch “**OK**”.



- 6 When the desired street name is found, touch the corresponding screen button.

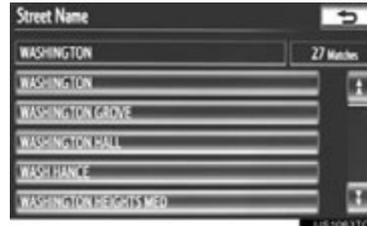

- When the desired street name is selected, the “Confirm Destination” screen may be displayed. If “**Go**” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)

- If the same address exists in more than 1 city, a screen requesting the city name to be input or selected will be displayed.

- 7 Input a city name.



- 8 Touch the screen button of the desired city name from the displayed list.



INFORMATION

- A street name can be searched using only the body part of its name.
- For example: S WESTERN AVE
 - A search can be performed by inputting "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

DESTINATION SEARCH BY "Point of Interest"

There are 3 methods to search a destination by Points of Interest:

- (a) Search by name
- (b) Search by category
- (c) Search by phone #

- 1 Press the **"DEST"** button.
- 2 Touch **"Point of Interest"** on the "Destination" screen.
- 3 Touch a screen button to select the desired search method.




SEARCH BY "Name"

- 1 Press the **"DEST"** button.
- 2 Touch **"Point of Interest"** on the "Destination" screen.
- 3 Touch **"Name"** on the "Point of Interest" screen.
- 4 Input the name of the POI.



- 5 Touch the screen button of the desired destination.

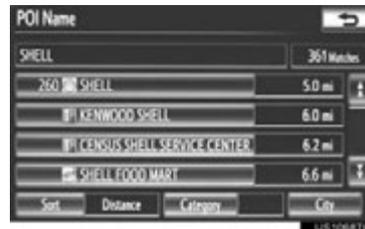

- When the desired destination is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 75.)
- When inputting the name of a specific Point of Interest, and there are 2 or more sites with the same name, the list screen is displayed.

3 NAVIGATION SYSTEM

1. DESTINATION SEARCH

- 6 Touch the screen button of the desired destination.



- If the same name exists in more than one city, a search can be performed more easily using “City” or “Category”. (See “SELECTING A CITY TO SEARCH” on page 60 and “SELECTING FROM THE CATEGORIES” on page 65.)

- The desired Point of Interest can be displayed on the map screen. (See “DISPLAY POI ICONS” on page 93.)

INFORMATION

- To search for a facility name using multiple search words, put a space between each word.

SELECTING A CITY TO SEARCH

- 1 Touch “City”.



- 2 Input the city name.



- To cancel the city setting, touch “Any City”.

- 3 Touch the screen button of the desired city name from the displayed list.



SELECTING FROM THE CATEGORIES


1 Touch “Category”.



2 Touch the screen button of the desired category.



- If the desired POI category is on the screen, touch its screen button to display a detailed list of the POI category.
- If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.

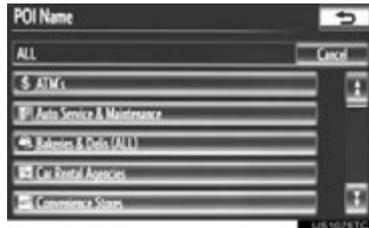


● When the desired category is touched, the POI name list screen is displayed.


SEARCH BY “Category”

The destination can be set by touching the search point and the POI category.

- 1 Press the “DEST” button.
- 2 Touch “Point of Interest” on the “Destination” screen.
- 3 Touch “Category”.

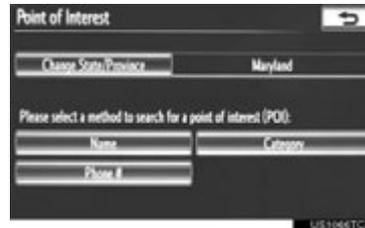

4 This screen is displayed.

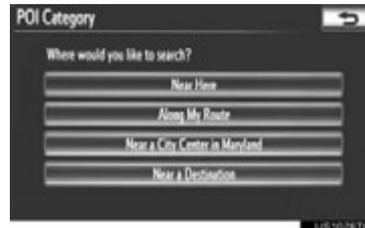

- Set the search point by one of the following methods:
 - Set the search point from near the current position
 - Set the search point from along the selected route
 - Set the search point from near a city center
 - Set the search point from near a destination

INFORMATION

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

3 NAVIGATION SYSTEM

1. DESTINATION SEARCH

■ SETTING THE SEARCH POINT FROM NEAR HERE

- 1 Touch “Near Here”.
- The search point is set at the current position, and the “POI Category” screen will be displayed. (See page 67.)

■ SETTING THE SEARCH POINT FROM ALONG MY ROUTE

- 1 Touch “Along My Route”.
- The search point is set and the “POI Category” screen will be displayed. (See page 67.)

■ SETTING THE SEARCH POINT FROM NEAR CITY CENTER

- 1 Touch “Near a City Center in XX*”.
- 2 Input the city center name.



- 3 Touch the screen button of the desired city center name.


- The search point is set and the “POI Category” screen will be displayed. (See page 67.)

■ SELECTING FROM THE LAST 5 CITIES

- 1 Touch “Near a City Center in XX*”.
- 2 Touch “Last 5 Cities”.



- 3 Touch the screen button of the desired city center name.

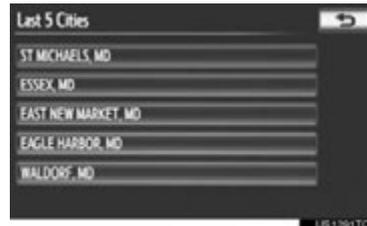


- The search point is set and the “POI Category” screen will be displayed. (See page 67.)

*: XX represents the selected search area name.

SETTING THE SEARCH POINT FROM NEAR A DESTINATION

- 1 Touch **“Near a Destination”**.
- 2 Touch the screen button of the desired destination.

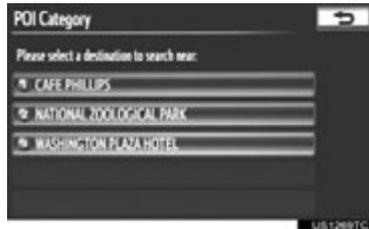

- The search point is set and the “POI Category” screen will be displayed. (See page 67.)

TO SEARCH FOR POIS NEAR THE SEARCH POINT


When the search point is set, the “POI Category” screen will be displayed.

- 1 Touch the desired POI category.



- If the desired POI category is not on the screen, touch **“List All Categories”** to list all POI categories.
- If **“Favorite POI Categories”** is touched, a search can be performed using the 6 POIs that have been previously set. For more details, see “POI CATEGORY CHANGE (SELECT POI ICONS)” on page 116.

- 2 Touch the desired POI category from the list.

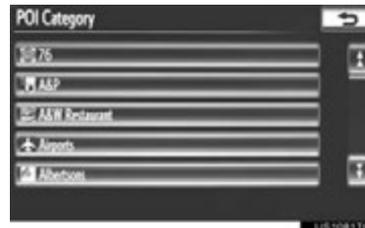

3

NAVIGATION SYSTEM

1. DESTINATION SEARCH

- 3 Touch the screen button of the desired item.



- When the desired item is selected, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 75.)

SEARCH BY "Phone #"

- 1 Press the "DEST" button.
- 2 Touch "Point of Interest" on the "Destination" screen.
- 3 Touch "Phone #" on the "Point of Interest" screen.
- 4 Input a phone number.



- 5 After inputting a phone number, touch "OK".
- When a phone number is input, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 75.)
 - If there is more than one site with the same number, the following screen will be displayed.



- To set an address book entry as a destination using the phone number, the number must already be registered with the address book entry. (See page 106.)

INFORMATION

- If there is no match for the phone number input, a list of identical numbers with different area codes will be displayed.

- The list of previous destinations can also be deleted by touching “Delete Previous Dest.” on the “Navigation Settings” screen when the vehicle is stopped. (See “DELETING PREVIOUS DESTINATIONS” on page 111.)

DESTINATION SEARCH BY “Previous Destinations”


- 1 Press the “DEST” button.
- 2 Touch “Previous Destinations” on the “Destination” screen.
- 3 Touch the screen button of the desired destination.



- The previous starting point and up to 100 previously set destinations are displayed on the screen.
- “Delete”: Touch to delete the previous destination. (To delete previous destinations, see page 74.)
- When the desired destination is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)

DESTINATION SEARCH BY “Address Book”

- 1 Press the “DEST” button.
- 2 Touch “Address Book” on the “Destination” screen.
- 3 Touch the screen button of the desired address book entry.

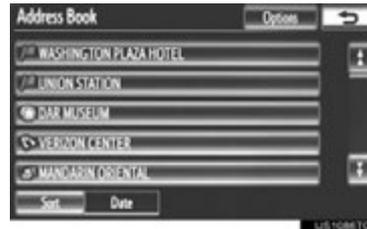

- A list of registered address book entries is displayed.
- “Options”: Touch to register or edit address book entries. (See page 103.)
- When the desired address book entry is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)


3 NAVIGATION SYSTEM

DESTINATION SEARCH BY “Emergency”

- 1 Press the “**DEST**” button.
- 2 Touch “**Emergency**” on the “Destination” screen.
- The display changes to a screen to select police stations, dealers, hospitals or fire stations.
- 3 Touch the desired emergency category.



- The selected emergency category is displayed.
- 4 Touch the screen button of the desired destination.

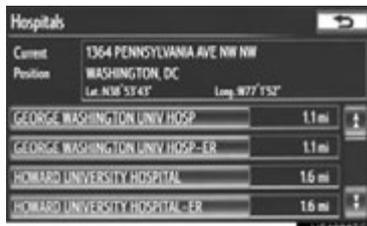

- When the desired destination entry is selected, the “Confirm Destination” screen may be displayed. If “**Go**” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)

INFORMATION

- The navigation system does not guide in areas where route guidance is unavailable. (See page 128.)
- The emergency function can be used even while driving.
- While driving, only the currently displayed items and the items on the next page can be viewed.

DESTINATION SEARCH BY “Intersection & Freeway”

There are 2 methods to search a destination by Intersection & Freeway:

- (a) Search by intersection
- (b) Search by freeway

- 1 Press the “**DEST**” button.
- 2 Touch “**Intersection & Freeway**” on the second page of the “Destination” screen.
- 3 Touch a screen button to select the desired method.




SEARCH BY "Intersection"

- 1 Press the "DEST" button.
- 2 Touch "Intersection & Freeway" on the second page of the "Destination" screen.
- 3 Touch "Intersection" on the "Intersection & Freeway" screen.
- 4 Input the name of the first intersecting street which is located near the destination to be set, and touch "OK".



- 5 Touch the screen button of the desired item.

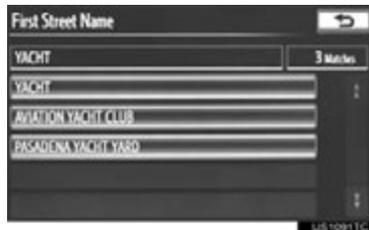

- 6 Input the name of the second intersecting street.




- 7 Touch the screen button of the desired item.



- When the desired item is selected, the "Confirm Destination" screen may be displayed. If "Go" is touched on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 75.)

INFORMATION

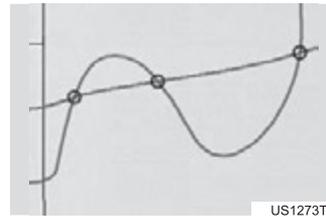

- If the same 2 streets cross at more than 1 intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "STARTING ROUTE GUIDANCE" on page 75.)

3 NAVIGATION SYSTEM


1. DESTINATION SEARCH

SEARCH BY “Freeway Entrance / Exit”


- 1 Press the “DEST” button.
- 2 Touch “Intersection & Freeway” on the second page of the “Destination” screen.
- 3 Touch “Freeway Entrance / Exit” on the “Intersection & Freeway” screen.
- 4 Input a freeway name.



- 5 Touch the screen button of the desired freeway.

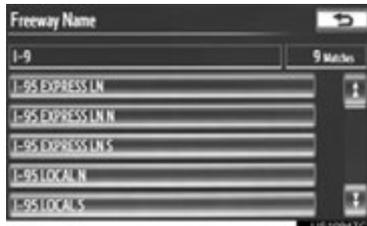

- 6 Select a freeway “Entrance” or “Exit”.

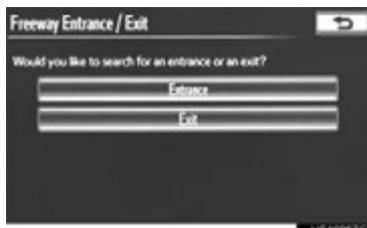

- 7 Input a freeway entrance or exit name, and touch “OK”.



- 8 Touch the screen button of the desired entrance or exit name.



- When the desired entrance or exit is selected, the “Confirm Destination” screen may be displayed. If “Go” is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)

INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).

DESTINATION SEARCH BY “Map”


- 1 Press the **“DEST”** button.
- 2 Touch **“Map”** on the second page of the “Destination” screen.
- 3 Scroll the map to the desired point.



- 4 Touch **“Go to”**.
 - The navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)
 - Guidance starts if **“OK”** is touched even while driving. However, the cursor cannot be moved.

DESTINATION SEARCH BY “Coordinates”

- 1 Press the **“DEST”** button.
- 2 Touch **“Coordinates”** on the second page of the “Destination” screen.
- 3 Input the latitude and the longitude.

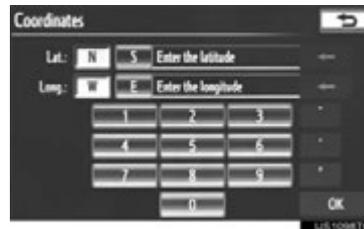

- 4 After inputting the latitude and longitude, touch **“OK”**.
 - When the desired screen button is selected, the “Confirm Destination” screen may be displayed. If **“Go”** is touched on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 75.)

3

NAVIGATION SYSTEM

DELETING SET DESTINATIONS

A set destination can be deleted.

- 1 Press the **"DEST"** button.
- 2 Touch **"Del.Dest."** on the "Destination" screen.
- When more than 1 destination is set, a list will be displayed on the screen.
- 3 Touch the destination to be deleted.



"Delete All": Touch to delete all destinations on the list.

- 4 Touch **"Yes"** to delete the destination(s).



- A message appears to confirm the request to delete.
- If **"Yes"** is touched, the data cannot be recovered. If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.
- If **"No"** is touched, the previous screen will be displayed.

• Set destinations can also be deleted by touching **"Route"**. (See **"DELETING DESTINATIONS"** on page 87.)

1. DESTINATION SEARCH

2. STARTING ROUTE GUIDANCE

When **“Map”** is touched on the **“Confirm Destination”** screen, the map screen will be displayed. The map location of the selected destination can be set as a destination.

- 1 Scroll the map to the desired point.



“Adjust Location”: Touch to adjust the position in smaller increments.



- When an arrow facing the desired point is touched, the map scrolls in that direction.
- When the screen button is released, the scrolling stops.

- 2 Touch **“Go to [location icon]”**.

- The system starts route search and displays recommended routes.


- If a destination has already been set, **“Go to [location icon]”** and **“Add to Route”** will be displayed.

“Go to [location icon]”: Touch to delete the existing destination(s) and set a new one.

“Add to Route”: Touch to add a destination.

“Info”: If this screen button is displayed on the top of the screen, touch it to view items such as name, address, position and phone number.

- 3 To start guidance, touch **“OK”**.

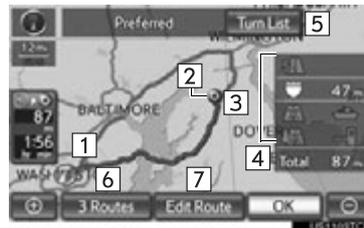

No.	Function
1	Current position
2	Destination point
3	Type of route and its distance
4	Distance of the entire route

3

NAVIGATION SYSTEM

1. DESTINATION SEARCH

No.	Function
5	Touch to display a list of the turns required to reach the destination.
6	Touch to select the desired route from 3 possible routes. (See page 77.)
7	Touch to change the route. (See page 78.)

- Guidance can be paused or resumed. (See "PAUSING AND RESUMING GUIDANCE" on page 92.)
- If "OK" is touched until a beep sounds, demo mode will start. Press the "MAP/VOICE" button to end demo mode.

⚠ CAUTION

- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

INFORMATION


- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the point selected is set as the destination.

3 ROUTES SELECTION

- 1 Touch **"3 Routes"** to select the desired route from 3 routes.



- 2 Touch **"Preferred"**, **"Alternate"** or **"Short"** to select the desired route.

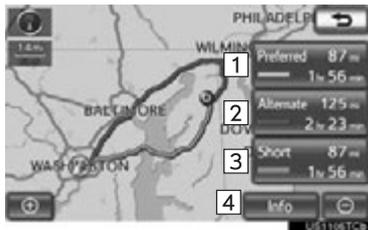

No.	Function
1	Touch to display the recommended route. This route is indicated by an orange line.
2	Touch to display the alternative route. This route is indicated by a purple line.
3	Touch to display the route that is the shortest distance to the set destination. This route is indicated by a green line.
4	Touch to display the information shown below about each of the 3 routes.

3

NAVIGATION SYSTEM

	Preferred	Alternate	Short
1	1 hr 56 min	2 hr 23 min	1 hr 56 min
2	87 mi	125 mi	87 mi
3			
4	47 mi	94 mi	47 mi
5			

No.	Function
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Toll road
4	Freeway
5	Ferry

1. DESTINATION SEARCH

EDIT ROUTE

Conditions for the route to the destination can be set again.

- 1 Touch “Edit Route”.



- 2 This screen is displayed.



No.	Function	Page
1	Touch to add destinations.	86
2	Touch to delete destinations.	87
3	Touch to reorder destinations.	86
4	Touch to display the choices available when setting the conditions the system uses to determine the route to the destination.	90

INFORMATION


- Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases.
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

2. ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN

During route guidance, various types of guidance screens can be displayed depending on conditions.

SCREEN LAYOUT

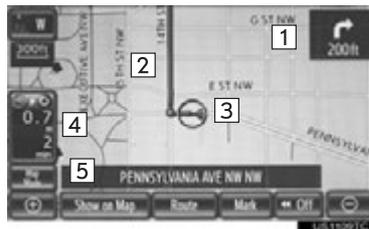

No.	Function
1	Distance to the next turn and an arrow indicating the turning direction
2	Guidance route
3	Current position
4	Distance and travel/arrival time to the destination
5	Current street name


INFORMATION

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.
- When arriving at the set destination the destination name will be displayed on the top of the screen. Touching "Off" clears the display.
- When the head-up display is on, turn-by-turn guidance arrows will be displayed on the windshield.

DURING FREEWAY DRIVING

During freeway driving, the freeway exit information screen will be displayed.

This screen displays the distance to the next junction/exit, or POIs in the vicinity of the freeway exit.

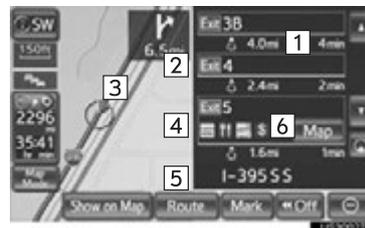

No./Icon	Function
1	Distance from the current position to the exit or junction
2	Exit number and junction name
3	Current position
4	Points of Interest that are close to a freeway exit
5	Current street name
6	Touch to display the selected map of the exit vicinity.
	Touch to scroll to farther junctions or exits.
	Touch to scroll to closer junctions or exits.
	Touch to display the closest 3 junctions or exits.


3

NAVIGATION SYSTEM

2. ROUTE GUIDANCE

WHEN APPROACHING A FREEWAY EXIT OR JUNCTION

When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

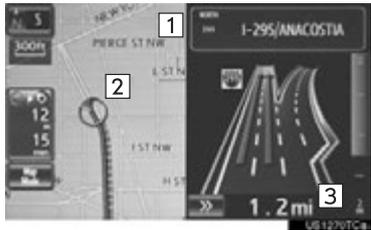


No.	Function
1	Next street name
2	Current position
3	Distance from the current position to the exit or junction

» : Touch to hide the freeway guidance screen.

- Touch **“Intersection”**, or press the **“MAP/VOICE”** button, to change back to the freeway guidance screen.

WHEN APPROACHING AN INTERSECTION

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.

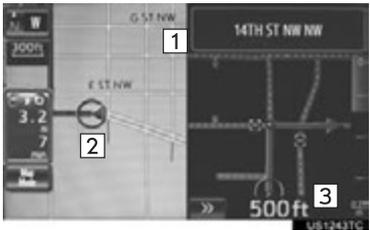

No.	Function
1	Next street name
2	Current position
3	Distance to the intersection

» : Touch to hide the intersection guidance screen.


- Touch **“Intersection”**, or press the **“MAP/VOICE”** button, to change back to the intersection guidance screen.

OTHER SCREENS

TURN LIST SCREEN

On this screen, the list of turns on the guidance route can be viewed.

- 1 Touch **“Turn List”** during guidance to display the turn list.

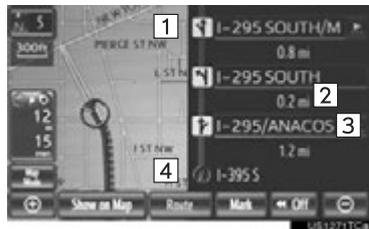


No.	Function
1	Turn direction
2	Distance between turns
3	Next street or destination name
4	Current street name

ARROW SCREEN

On this screen, information about the next turn on the guidance route can be viewed.

- 1 Touch **“Turn-by-Turn Arrow”** during guidance to display the arrow screen.

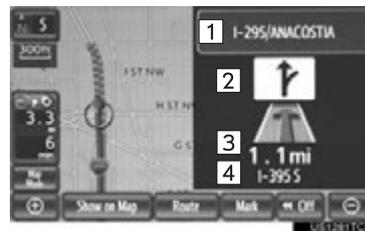


No.	Function
1	Exit number or street name
2	Turn direction
3	Distance to the next turn
4	Current street name

3 NAVIGATION SYSTEM

2. ROUTE GUIDANCE


2. TYPICAL VOICE GUIDANCE PROMPTS

As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.

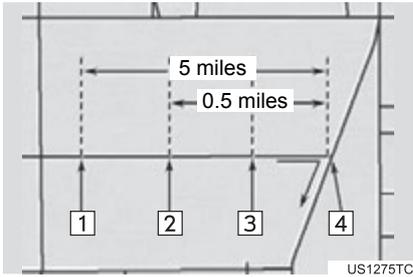

US1275TC

No.	Voice guidance
1	"Proceed about 5 miles to Main street."
2	"In half of a mile, right turn onto Main street."
3	"Next right."/"Right turn ahead."
4	(Beep sound only)

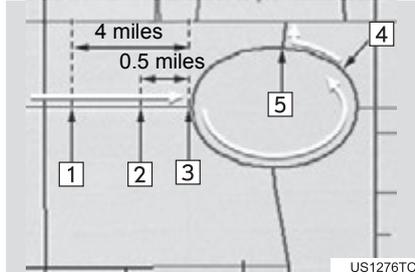


US1276TC

No.	Voice guidance
1	"Proceed about 4 miles to the traffic circle."
2	"In half of a mile, traffic circle ahead and then the 3rd exit onto Main street."
3	"The 3rd exit ahead."
4	"The exit ahead."
5	(Beep sound only)

INFORMATION


- The street names may not be pronounced correctly or clearly due to the text-to-speech function.
- On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver the vehicle.

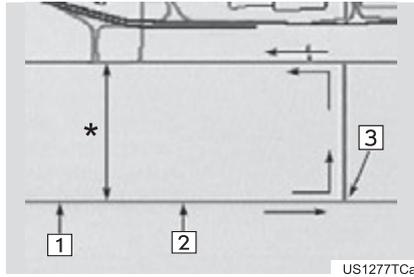

US1277TCa

*: The system indicates a U-turn if the distance between two one-way roads (of opposite directions) is less than 50 ft. (15 m) in residential areas or 164 ft. (50 m) in non-residential areas.

No.	Voice guidance
1	"In half of a mile, make a legal U-turn."
2	"Make a legal U-turn ahead."
3	(Beep sound only)

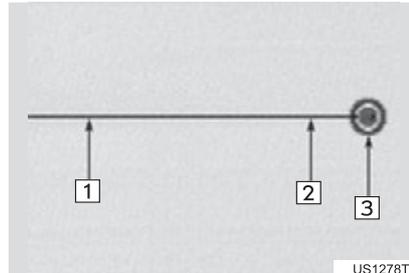

US1278TC

● The system announces the approach to the final destination.

No.	Voice guidance
1	"In half of a mile, your destination is ahead."
2	"Your destination is ahead."
3	"You have arrived at your destination. The route guidance is now finished."

- If a voice guidance command cannot be heard, press the "MAP/VOICE" button to hear it again.
- To adjust the voice guidance volume, see "VOICE VOLUME" on page 54.

INFORMATION


- If the system cannot determine the current position correctly (in cases of poor GPS signal reception), the voice guidance may be early or late.

3
NAVIGATION SYSTEM

2. ROUTE GUIDANCE

■ ROUTES INCLUDING IPD ROADS

Even when on IPD roads (roads that are not completely digitized in our database), you will be guided along the searched route via voice guidance.

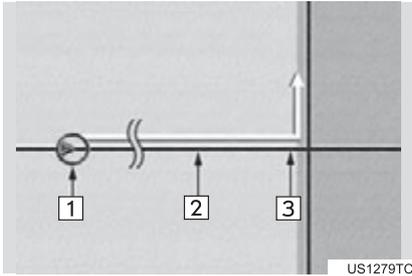

US1279TC

- After it has made a route calculation, the system will advise the user whether IPD roads are included in the route or not.
- The portion of the route that covers IPD roads is indicated by light blue.

No.	Voice guidance
1	“On the way to your destination, there will be roads with incomplete data.”
2	“In half of a mile, left turn.”
3	“Next left. Upcoming roads have incomplete data. Please carefully observe the local traffic restrictions, as they may not match the navigation guidance.”

- IPD roads are roads that are not yet completely digitized in our database. However, their geometry, name and administrative coding are already known.

CAUTION

- Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads. The route guidance may not have the updated information such as the direction of a one way street.

2. ROUTE GUIDANCE

3. DISTANCE AND TIME TO DESTINATION

When the vehicle is on the guidance route, the distance and the estimated travel/arrival time to the destination are displayed. When the vehicle is not on the guidance route, the distance and direction of the destination are displayed.

When driving on the guidance route with more than 1 destination set, the distance and estimated travel/arrival time from the current position to each destination are displayed.

- 1 Touch the screen button indicated by the arrow.



- 2 Touch the number screen button to display the desired destination.



- The distance, estimated travel time and estimated arrival time from the current position to the selected destination are displayed.

Icon	Function
	Estimated travel time is displayed.
	Estimated arrival time is displayed.
	Touch to switch to estimated arrival time.
	Touch to switch to estimated travel time.
	Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

INFORMATION

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the set vehicle speed information. (See "DRIVING SPEEDS" on page 114.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.


2. ROUTE GUIDANCE

4. SETTING AND DELETING DESTINATIONS

ADDING DESTINATIONS

Destinations can be added and routes can be searched again.

- 1 Touch **“Route”**.

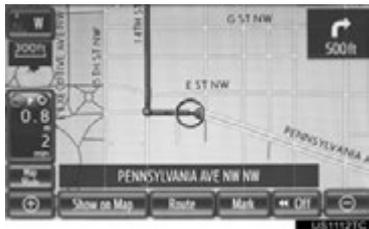

- 2 Touch **“Add”**.



- 3 Input an additional destination in the same way as a destination search. (See “DESTINATION SEARCH” on page 58.)
- 4 Touch the desired **“Add Destination Here”** to insert the new destination into the route.



REORDERING DESTINATIONS

When more than 1 destination is set, the arrival order of the destinations can be changed.

- 1 Touch **“Route”**.



- 2 Touch **“Reorder”**.



- 3 Touch the desired destination and touch **“Move Up”** or **“Move Down”** to change the arrival order.



- 4 Touch **“OK”**.
- 5 After selecting the destinations, touch **“OK”**.
 - The system searches for the guidance route again, and displays the entire route.

DELETING DESTINATIONS

A set destination can be deleted.

- 1 Touch **“Route”**.



- 2 Touch **“Delete”**.



- When more than 1 destination is set, a list will be displayed on the screen.

- 3 Touch the destination to be deleted.



“Delete All”: Touch to delete all destinations on the list.

- A message appears to confirm the request to delete.
- 4 Touch **“Yes”** to delete the destination(s).
 - If **“Yes”** is touched, the data cannot be recovered. If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.
 - If **“No”** is touched, the previous screen will be displayed.

3

NAVIGATION SYSTEM

2. ROUTE GUIDANCE

5. SETTING ROUTE


DETOUR SETTING

While the route guidance is operating, the route can be changed to detour around a section of the route where a delay is caused by road repairs, or an accident, etc.


- 1 Touch **"Route"**.



- 2 Touch **"Detour"**.

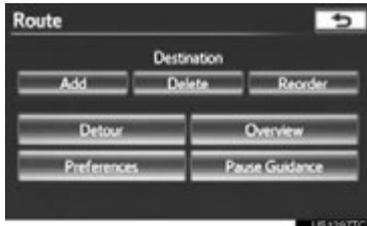

- 3 Touch a screen button to select the desired detour distance.

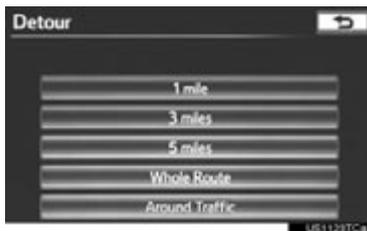


"1 mile (km)", "3 miles (km)" or "5 miles (km)": Touch one of these screen buttons to start the detour process. After detouring, the system returns to the original guidance route.

"Whole Route": Touch to make the system calculate an entire new route to the destination.

"Around Traffic": Touch to make the system search for the route based on the traffic congestion information received from XM NavTraffic®. For details, see "XM NavTraffic®" on page 300.

INFORMATION

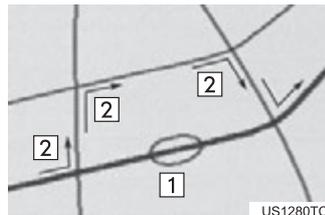

- This picture shows an example of how the system would guide around a delay caused by a traffic jam.

1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.

2 This route indicates the detour suggested by the system.

- When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).

- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

ROUTE OVERVIEW


1 Touch **“Route”**.



2 Touch **“Overview”**.




3 The entire route from the current position to the destination is displayed.

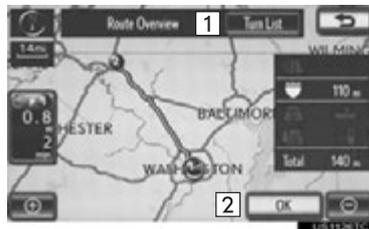

No.	Function
1	Touch to display a list of the turns required to reach the destination.
2	Touch to start guidance.

TURN LIST

1 Touch or to skip to the next page of the list of roads. Touch and hold or to scroll through the list of roads.

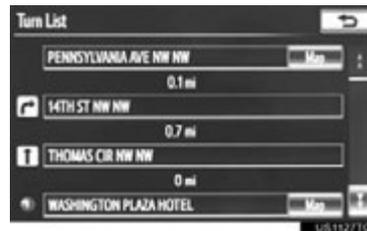

: This mark indicates the direction in which you should turn at the intersection.

“Map”: The selected point is displayed on the map screen.



INFORMATION

- However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

3 NAVIGATION SYSTEM

2. ROUTE GUIDANCE

ROUTE PREFERENCE

TO SELECT ROUTE TYPE

The Preferred, Short or Alternative route can be selected.

1 Touch **“Route”**.



2 Touch **“Preferences”**.



3 Touch **“Preferred”, “Short” or “Alternate”** and touch **“OK”**.



4 The entire route from the starting point to the destination is displayed.



“OK”: Touch to start guidance.

“Edit Route”: Touch to change a route. (See page 78.)


TO SELECT ROUTE FEATURES

A number of choices are available when setting the conditions the system uses to determine the route to the destination.


1 Touch **“Route”**.



- Touch **“Preferences”** to display conditions that can be selected when the system determines the route to the destination.

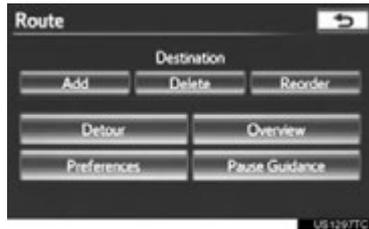

- Select the desired route preference by touching the screen button.

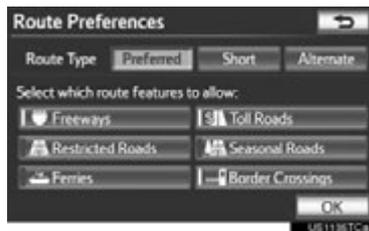


- The system will avoid using routes that include items whose indicators are off.
- After selecting the desired route preference, touch **“OK”**.


STARTING ROUTE FROM ADJACENT ROAD

The route guidance can be started from an adjacent road.
(e.g. When route guidance is set on the freeway, but the vehicle is driven parallel along the freeway.)


- Touch **“Route”**.

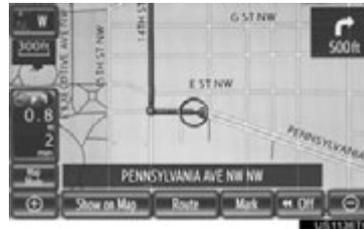

- Touch **“Preferences”**.

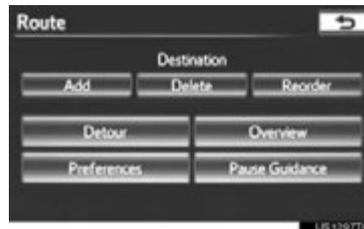

- Touch **“Start from Adjacent Road”**.

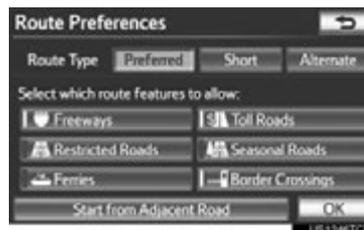

INFORMATION

- When there is no adjacent road, this screen button will not be displayed.

2. ROUTE GUIDANCE

PAUSING AND RESUMING GUIDANCE

TO PAUSE GUIDANCE

1 Touch **“Route”**.



2 Touch **“Pause Guidance”**.



- The screen will return to the current position map without route guidance.

INFORMATION


- Without route guidance, **“Pause Guidance”** cannot be used.

TO RESUME GUIDANCE

1 Touch **“Route”**.



2 Touch **“Resume Guidance”**.

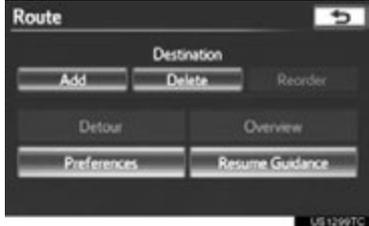

- The map screen, with the current position displayed, will be returned to.

SHOW ON MAP

DISPLAY POI ICONS

POI icons such as gas stations and restaurants can be displayed on the map screen. Their location can also be set as a destination and used for route guidance.


- 1 Touch **“Show on Map”**.



- 2 Touch **“Select POI”** to display a particular type of POI icon on the screen.



- When the POI icons to be displayed on the map screen have already been set, **“Change POI”** is displayed.

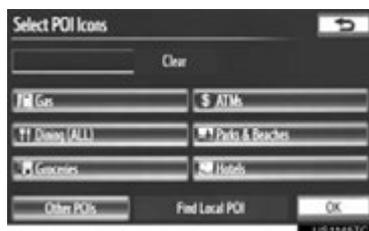

- A screen with a limited choice of Points of Interest will be displayed. (To change the displayed POI list, see page 116.)

SELECTING POI ICONS TO BE DISPLAYED

Up to 5 categories of icons can be displayed on the map screen.

- 1 Touch the desired Point of Interest category to display POI location icons on the map screen.



- By touching the desired POI category and then touching **“OK”**, the selected POI icons are displayed on the map screen.
- To turn off the Points of Interest icons on the map screen, touch **“Clear”**.

“Other POIs”: Touch to display other Points of Interest categories if the desired Points of Interest cannot be found on the limited choice screen.

“Find Local POI”: Touch to search for the nearest POIs. Then select one of the categories. The system will list the points within 200 miles (320 km). (See page 94.)

- 2 Touch **“Other POIs”** on the **“Select POI Icons”** screen.


- When a POI category is selected from either the limited list or the complete list, the icons of those locations will be displayed on the map screen.

2. ROUTE GUIDANCE

3 Touch the desired POI categories.



- The selected category's icon will appear on the top left of the screen.
- By touching the desired POI category and then touching **"OK"**, the selected POI icons are displayed on the map screen.
- If the desired POI category is not on the screen, touch **"List All Categories"** to list all POI categories.

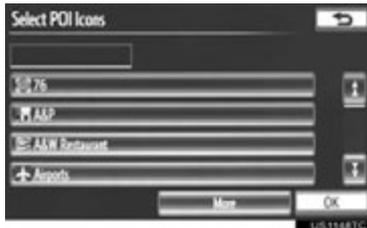

- Touch the desired POI categories from the list.
 - The selected category icon appears on the top left of the screen.
 - By touching the desired POI category and then touching **"OK"**, the selected POI icons are displayed on the map screen.
 - To return to the POI category selection screen, touch **"More"**.

TO DISPLAY THE LOCAL POI LIST

Points of Interest that are within 200 miles (320 km) of the current position will be listed from among the selected categories.


1 Touch **"Find Local POI"**.



2 Touch the screen button of the desired Point of Interest.



- The selected Points of Interest are displayed on the map screen.
- **"Near..."**: Touch to search for Points of Interest near the current position or along the route.

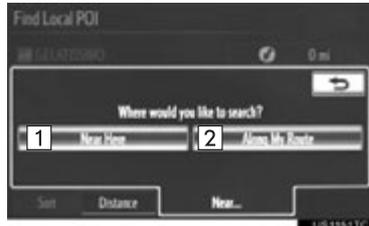

No.	Function
1	Touch to display the list of Points of Interest near the current position.
2	Touch to display the list of Points of Interest along the route.

TO SET A POI AS A DESTINATION

One of the Point of Interest icons can be selected on the map screen as a destination and can be used for route guidance.

- 1 Directly touch the desired Point of Interest icon to set it as a destination.




- The map will shift so that the icon is centered on the screen and overlaps with the cursor. At this time, the distance from the current position is displayed on the screen. The distance shown is measured as a straight line from the current position to the POI.

- 2 When the desired Point of Interest overlaps with the cursor, touch "Enter".

- The screen changes and displays the map location of the selected destination and route preference. (See "STARTING ROUTE GUIDANCE" on page 75.)

TO HIDE POI ICONS

- 1 Touch "Show on Map".

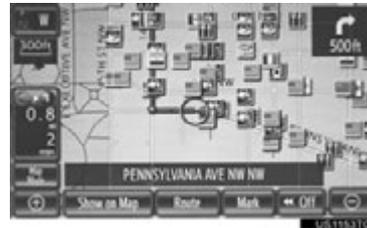

- 2 Touch "POI Icons".



- The "POI Icons" indicator is dimmed.
- The map screen will be displayed with the POI icons hidden.
- To display the POI icons again, touch "POI Icons" on the "Show on Map" screen.

3 NAVIGATION SYSTEM

2. ROUTE GUIDANCE

ROUTE TRACE

Up to 124 miles (200 km) of the traveled route can be stored and retraced on the display.

INFORMATION

- This feature is available when the map scale is more than 30 miles (50 km).

TO START RECORDING THE ROUTE TRACE

- 1 Touch **“Show on Map”**.



- 2 Touch **“Route Trace”**.



- The **“Route Trace”** indicator is highlighted.

TO STOP RECORDING THE ROUTE TRACE

- 1 Touch **“Show on Map”**.



- 2 Touch **“Route Trace”**.



- Touching **“Yes”** stops recording and the route trace remains displayed on the screen.
- Touching **“No”** stops recording and the route trace is erased.

3. ADDRESS BOOK

 
1. NAVIGATION SETTINGS

Points or areas on the map can be registered.

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 59, and "DESTINATION SEARCH BY "Address Book"" on page 69.)

Registered areas to avoid, will be avoided when the system searches for a route.


- 1 Press the "SETUP" button.



- 2 Touch "Navigation".



- 3 Touch the desired items to be set.

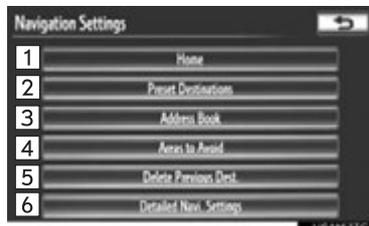

- On this screen, the following operations can be performed:

No.	Function	Page
1	Touch to set home.	98
2	Touch to set preset destinations.	100
3	Touch to set the address book.	102
4	Touch to set areas to avoid.	107
5	Touch to delete previous destinations.	111
6	Touch to set detailed navigation settings.	113


3

NAVIGATION SYSTEM

SETTING UP THE “Home”

If home has been registered, that information can be recalled by touching “Go Home” on the “Destination” screen. (See “DESTINATION SEARCH BY HOME” on page 59.)

- 1 Press the “**SETUP**” button.
- 2 Touch “**Navigation**” on the “Setup” screen.
- 3 Touch “**Home**”.

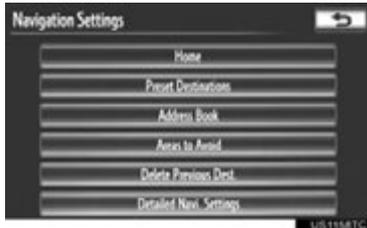


- 4 Touch the desired screen button.




No.	Function	Page
1	Registering home	98
2	Editing home	99
3	Deleting home	99

REGISTERING HOME

- 1 Press the “**SETUP**” button.
- 2 Touch “**Navigation**” on the “Setup” screen.
- 3 Touch “**Home**” on the “Navigation Settings” screen.
- 4 Touch “**Set Home**”.

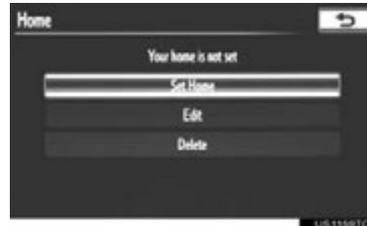

- 5 Touch the desired screen button and enter the location in the same way as for a destination search. (See “DESTINATION SEARCH” on page 58.)

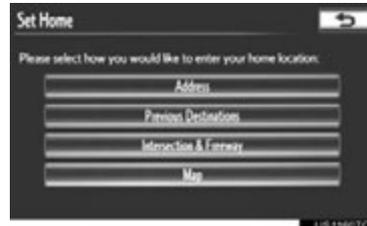


- When registration of home is completed, the “Edit Home” screen will be displayed.

- 6 Touch “**OK**”.


- To edit registered information, see “EDITING HOME” on page 99.

EDITING HOME

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Home”** on the “Navigation Settings” screen.
- 4 Touch **“Edit”**.

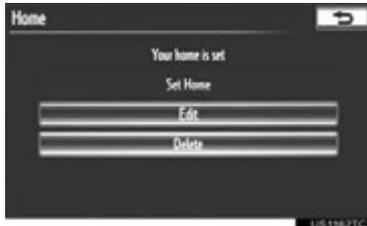

- 5 Touch **“Edit”** next to the item to be edited.

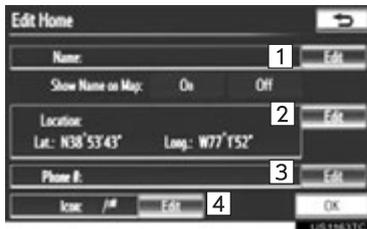

No.	Function	Page
1	To edit the home name. The name can be displayed on the map.	105
2	To edit location information.	105
3	To edit the phone number.	106
4	To change the icon to be displayed on the map.	104

“Show Name on Map”: The name of a home can be set to be displayed on the map by touching **“On”** or **“Off”**. (See page 105.)

- 6 Touch **“OK”**.

DELETING HOME

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Home”** on the “Navigation Settings” screen.
- 4 Touch **“Delete”**.



- 5 Touch **“Yes”** to delete home and touch **“No”** to cancel the deletion.

3 NAVIGATION SYSTEM


SETTING UP THE “Preset Destinations”

If preset destination has been registered, that information can be recalled by using **“Preset Destinations”** on the “Navigation Settings” screen. (See “DESTINATION SEARCH BY PRESET DESTINATIONS” on page 59.)

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Preset Destinations”**.



- 4 Touch the desired screen button.

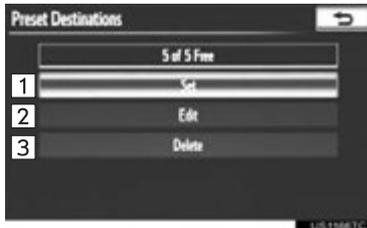


REGISTERING PRESET DESTINATIONS

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Preset Destinations”** on the “Navigation Settings” screen.
- 4 Touch **“Set”**.




- 5 Touch the desired screen button and enter the location in the same way as for a destination search. (See “DESTINATION SEARCH” on page 58.)

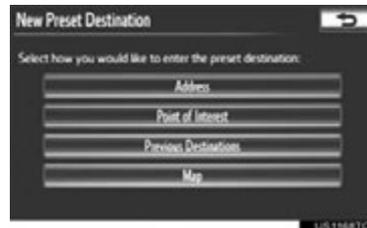

No.	Function	Page
1	Registering a preset destination	100
2	Editing a preset destination	101
3	Deleting a preset destination	102

- 6 Touch a position for this preset destination.

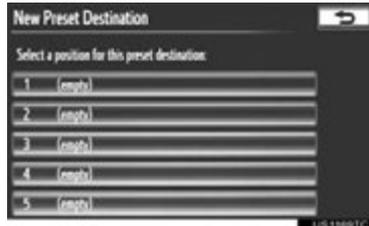


- When registration of a preset destination is completed, the “Edit Preset Destination” screen will be displayed.

- 7 Touch “OK”.

- To edit registered information, see “EDITING PRESET DESTINATIONS” on page 101.

EDITING PRESET DESTINATIONS


- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Preset Destinations” on the “Navigation Settings” screen.
- 4 Touch “Edit”.

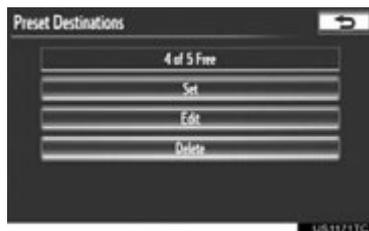

- 5 Touch the screen button of the desired preset destination.



- 6 Touch “Edit” next to the item to be edited.

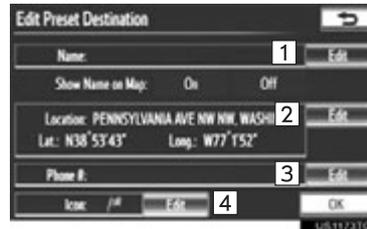


No.	Function	Page
1	To edit the preset destination name. The name can be displayed on the map.	105
2	To edit location information.	105
3	To edit the phone number.	106
4	To change the icon to be displayed on the map.	104

“Show Name on Map”: The name of a preset destination can be set to be displayed on the map by touching “On” or “Off”. (See page 105.)

- 7 Touch “OK”.

DELETING PRESET DESTINATIONS

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the **“Setup”** screen.
- 3 Touch **“Preset Destinations”** on the **“Navigation Settings”** screen.
- 4 Touch **“Delete”**.

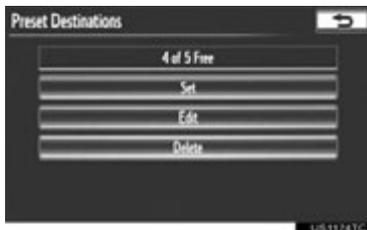

- 5 Touch the preset destination to be deleted.



Screen button	Function
“Select All”	Touch to select all preset destinations.
“Unselect All”	Touch to cancel the “Select All” function.

- 6 Touch **“Delete”**.
- 7 Touch **“Yes”** to delete the preset destination and touch **“No”** to cancel the deletion.


SETTING UP THE “Address Book”

Points or areas on the map can be registered.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the **“Setup”** screen.
- 3 Touch **“Address Book”**.



- 4 Touch the desired screen button.

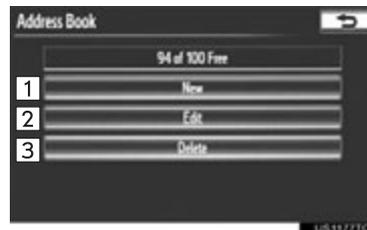


No.	Function	Page
1	Registering address book entries	103
2	Editing address book entries	103
3	Deleting address book entries	106

REGISTERING ADDRESS BOOK ENTRIES

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Address Book”** on the “Navigation Settings” screen.
- 4 Touch **“New”**.



- 5 Touch the desired screen button and enter the location in the same way as for a destination search. (See “DESTINATION SEARCH” on page 58.)

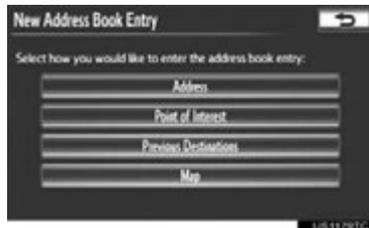

- After the address book entry has been registered, the “Edit Address Book Entry” screen will be displayed.

- 6 Touch **“OK”**.

- To edit registered information, see “EDITING ADDRESS BOOK ENTRIES” on page 103.


INFORMATION

- Up to 100 address book entries can be registered.


EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Address Book”** on the “Navigation Settings” screen.
- 4 Touch **“Edit”**.

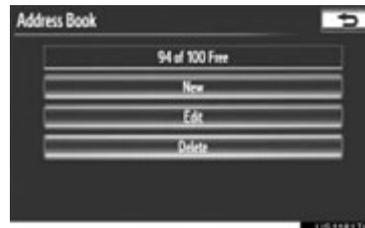

- 5 Touch the screen button of the desired address book entry.

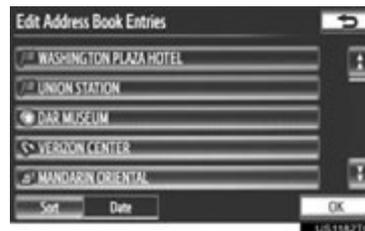


3

NAVIGATION SYSTEM

3. ADDRESS BOOK

- 6 Touch **“Edit”** next to the item to be edited.

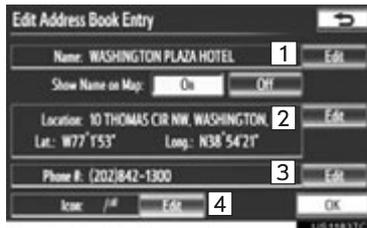


No.	Function	Page
1	To edit the address book entry name. The name can be displayed on the map.	105
2	To edit location information.	105
3	To edit the phone number.	106
4	To change the icon to be displayed on the map.	104

“Show Name on Map”: The name of an address book entry can be set to be displayed on the map by touching **“On”** or **“Off”**. (See page 105.)

- 7 Touch **“OK”**.

■ TO CHANGE “Icon”

- 1 Touch **“Edit”**.

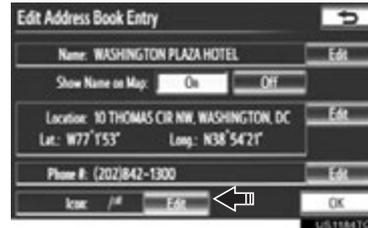

- 2 Touch the desired icon.




- Change pages by touching the **“Page 1”**, **“Page 2”** or **“With Sound”** tab.

■ SOUND ICONS

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

- 1 Touch the **“With Sound”** tab on the “Address Book Entry Icon” screen.
- 2 Touch the desired sound icon.

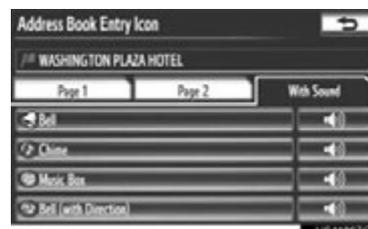

- The next screen appears when **“Bell (with Direction)”** is touched.

- 3 Touch either  or  to adjust the direction. Touch **“OK”**.




INFORMATION


- The bell sounds only when the vehicle approaches this point in the direction that has been set.

TO CHANGE “Name”

- 1 Touch **“Edit”**.

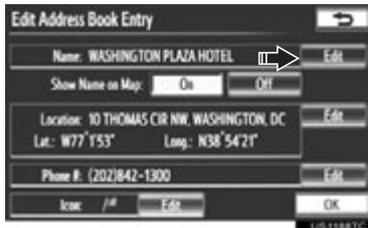


- 2 Enter the name using the alphanumeric keys.

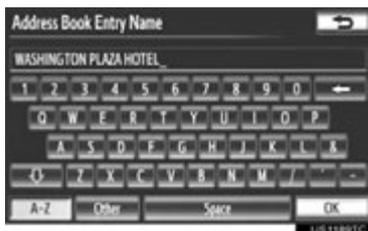

- Up to 32 characters can be entered.
- 3 Touch **“OK”**.
- The previous screen will be displayed.


DISPLAYING ADDRESS BOOK ENTRY NAMES

- 1 Touch **“On”** to display the name on the map and touch **“Off”** to not display it.

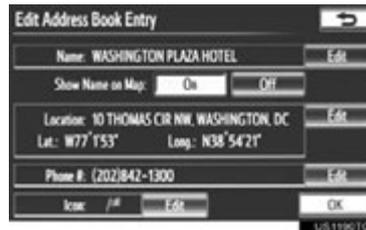

TO CHANGE “Location”

- 1 Touch **“Edit”**.

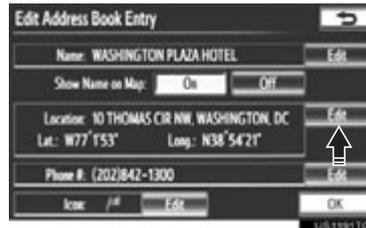

- 2 Touch one of the 8 directional screen buttons to move the cursor  to the desired point on the map.




- 3 Touch **“OK”**.
- The previous screen will be displayed.

3. ADDRESS BOOK

■ TO CHANGE “Phone #” (PHONE NUMBER)

1 Touch “Edit”.

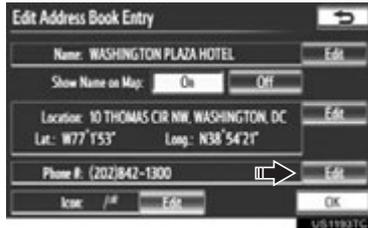

2 Enter the number using the number keys.



3 Touch “OK”.

- The previous screen will be displayed.

DELETING ADDRESS BOOK ENTRIES

1 Press the “SETUP” button.


2 Touch “Navigation” on the “Setup” screen.

3 Touch “Address Book” on the “Navigation Settings” screen.

4 Touch “Delete”.



5 Touch the address to be deleted.

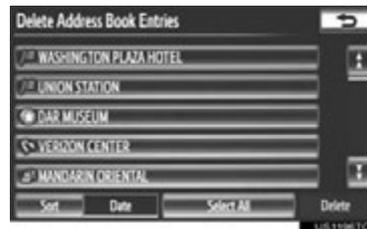

Screen button	Function
“Select All”	Touch to select all registered addresses.
“Unselect All”	Touch to cancel the “Select All” function.


6 Touch “Delete”.

7 Touch “Yes” to delete the address book and touch “No” to cancel the deletion.

SETTING UP THE “Areas to Avoid”

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as areas to avoid.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Areas to Avoid”**.

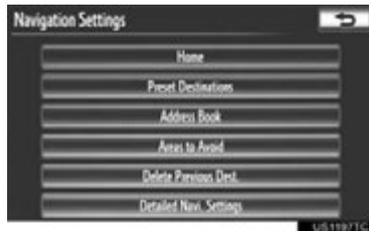


- 4 Touch the desired screen button.




No.	Function	Page
1	Registering areas to avoid	107
2	Editing areas to avoid	108
3	Deleting areas to avoid	111

REGISTERING AREAS TO AVOID

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Areas to Avoid”** on the “Navigation Settings” screen.
- 4 Touch **“New”**.

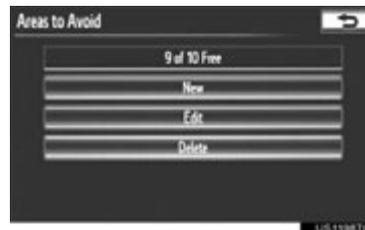

- 5 Touch the desired screen button and enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “DESTINATION SEARCH” on page 58.)

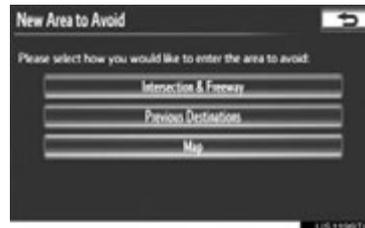

3 NAVIGATION SYSTEM

3. ADDRESS BOOK

6 Scroll the map to the desired point.



“Adjust Location”: Touch to adjust the position in smaller increments.

7 Touch **“Enter”**.

8 Touch either  or  to change the size of the area to be avoided.



9 Touch **“OK”**.

- When registration of an area to avoid is completed, the “Area to Avoid” screen will be displayed.


INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


EDITING AREA TO AVOID

The name, location and/or area size of a registered area can be edited.

- 1** Press the **“SETUP”** button.
- 2** Touch **“Navigation”** on the “Setup” screen.
- 3** Touch **“Areas to Avoid”** on the “Navigation Settings” screen.
- 4** Touch **“Edit”**.

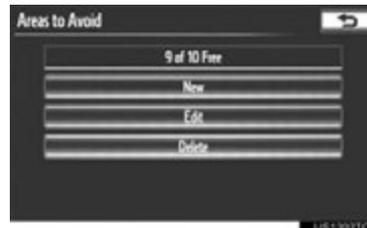

5 Touch the area to be avoided.

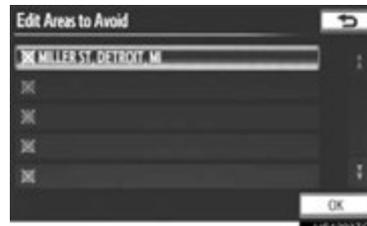

- 6 Touch **“Edit”** next to the item to be edited.



No.	Function	Page
1	To edit the name of the area to avoid. The name can be displayed on the map.	109
2	To edit area location.	110
3	To edit area size.	110


“Show Name on Map”: The name of an area to be avoided that may be displayed on the map by touching **“On”** or **“Off”**. (See page 109.)

“Active”: To turn on or off the area to avoid feature. To turn on the feature, touch **“On”** on the “Area to Avoid” screen. To turn off the feature, touch **“Off”** on the “Area to Avoid” screen.

- 7 Touch **“OK”**.

TO CHANGE “Name”

- 1 Touch **“Edit”**.

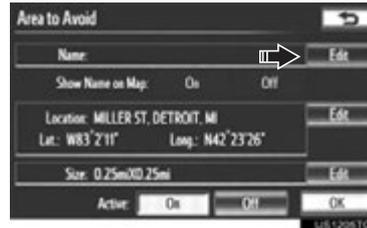


- 2 Enter the name using the alphanumeric keys.



- Up to 32 characters can be entered.
- 3 Touch **“OK”**.
- The previous screen will be displayed.

DISPLAYING NAMES OF AREAS TO BE AVOIDED

- 1 Touch **“On”**, next to “Show Name on Map”, to display the area to be avoided name on the map. Touch **“Off”** to not display it.

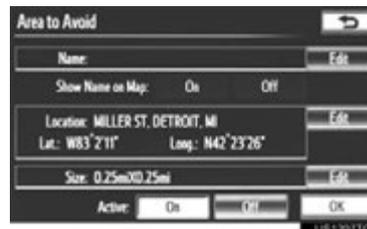


3 NAVIGATION SYSTEM

3. ADDRESS BOOK

■ TO CHANGE “Location”

1 Touch “Edit”.

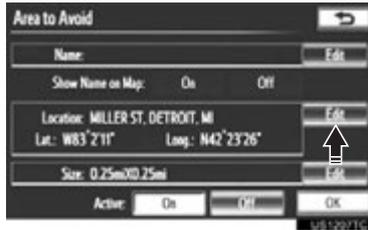

2 Touch one of the 8 directional screen buttons to move the cursor to the desired point on the map.




3 Touch “OK”.


- The previous screen will be displayed.

■ TO CHANGE “Size”

1 Touch “Edit”.

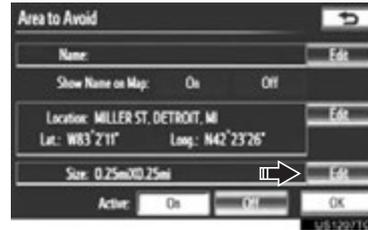

2 Touch either  or  to change the size of the area to be avoided.

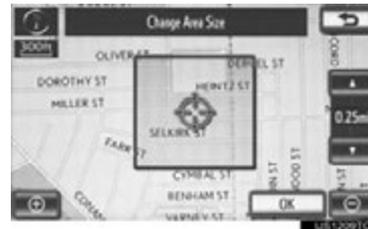


3 Touch “OK”.


- The previous screen will be displayed.

DELETING AREAS TO AVOID

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Areas to Avoid”** on the “Navigation Settings” screen.
- 4 Touch **“Delete”**.

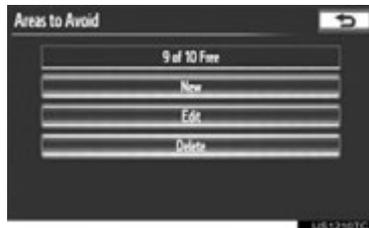

- 5 Touch the area to be deleted.

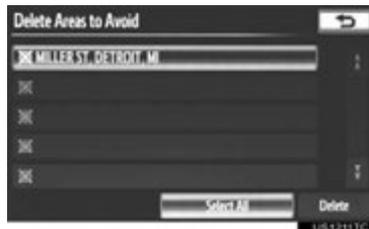


- 6 Touch **“Delete”**.
- 7 Touch **“Yes”** to delete the area(s) and touch **“No”** to cancel the deletion.

Screen button	Function
“Select All”	Touch to select all registered areas to avoid.
“Unselect All”	Touch to cancel the “Select All” function.


DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Delete Previous Dest.”**.

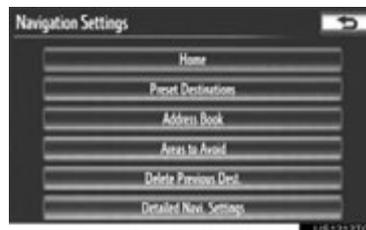

- 4 Touch the previous destination to be deleted.

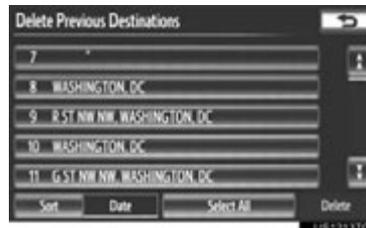

3 NAVIGATION SYSTEM

3. ADDRESS BOOK

Screen button	Function
"Select All"	Touch to select all previous destinations.
"Unselect All"	Touch to cancel the "Select All" function.


- 5 Touch "**Delete**".
- 6 Touch "**Yes**" to delete the destination(s) and touch "**No**" to cancel the deletion.

4. SETUP


1. DETAILED NAVIGATION SETTINGS

Settings are available for driving speeds, favorite POI categories, automatic screen change, “◀◀ Off” function, etc.


1 Press the “**SETUP**” button.

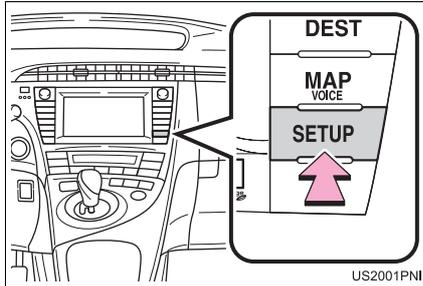


2 Touch “**Navigation**”.

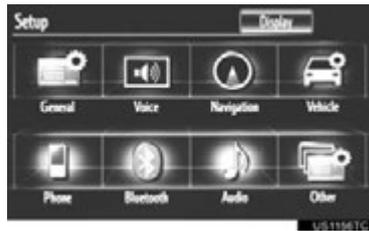

3 Touch “**Detailed Navi. Settings**”.

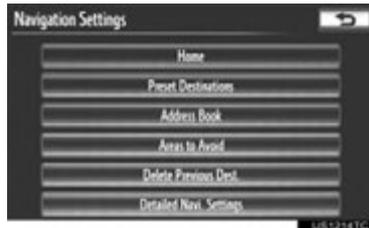

4 Touch the items to be set.


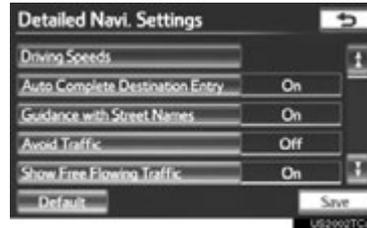


5 Touch “**Save**”.

SCREENS FOR NAVIGATION SETTINGS

3

NAVIGATION SYSTEM

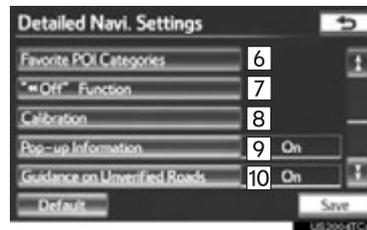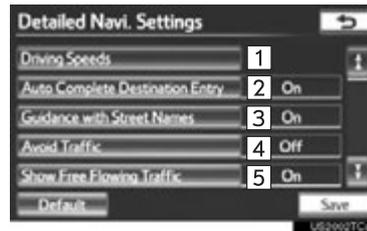

● On this screen, the following functions can be performed:

4. SETUP

No.	Function
1	Touch to set the average cruising speed. (See "DRIVING SPEEDS" on page 114.)
2	Touch to set the automatic input function to "On" or "Off".
3	Touch to set the voice guidance for the next street name to "On" or "Off" during route guidance.
4	Touch to set the automatic reroute of the guidance route to avoid heavy congestion to "On" or "Off". (See "AUTO AVOID TRAFFIC" on page 115.)
5	Touch to set the indication of freely flowing traffic by the arrow to "On" or "Off". (See "SHOW FREE FLOWING TRAFFIC" on page 116.)
6	Touch to set displayed POI icon categories. (See "POI CATEGORY CHANGE (SELECT POI ICONS)" on page 116.)
7	Touch to set screen buttons to be displayed on the map screen when "◀◀ Off" is selected. (See "SCREEN LAYOUT FUNCTION ("◀◀ Off" Function)" on page 117.)


No.	Function
8	Touch to adjust the current position mark manually. Miscalculation of the distance caused by tire replacement can also be adjusted. (See "CURRENT POSITION/TIRE CHANGE CALIBRATION" on page 118.)
9	Touch to set the display of pop-up information to "On" or "Off". (See "POP-UP INFORMATION" on page 119.)
10	Touch to set IPD road guidance to "On" or "Off". (For information on IPD roads, see page 84.)

- To reset all setup items, touch "Default".


DRIVING SPEEDS

The speed that is used for the calculation of the estimated travel time and estimated arrival time can be set.

- 1 Press the "SETUP" button.
- 2 Touch "Navigation" on the "Setup" screen.
- 3 Touch "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Touch "Driving Speeds".

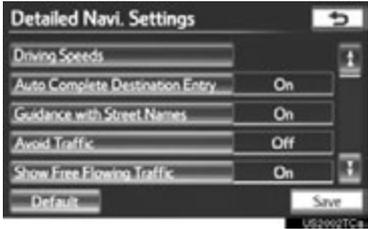

- 5 Touch “<” or “>” to set the average vehicle speeds for “Residential”, “Main Streets” and “Freeways”.

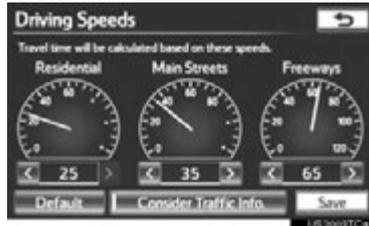

- To set the default speeds, touch “Default”.
 - To use settings based on traffic information, touch “Consider Traffic Info.”.
- 6 After setting of the desired speeds is completed, touch “Save”.


INFORMATION

- The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.
- The time shown on the screen may vary greatly depending on progress along the route, which may be affected by conditions such as traffic jams and construction work.
- Up to 99 hours 59 minutes can be displayed.

AUTO AVOID TRAFFIC

The guidance route automatically changes to another route to avoid heavy congestion when “Avoid Traffic” is turned on.

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Detailed Navi. Settings” on the “Navigation Settings” screen.
- 4 Touch “Avoid Traffic”.

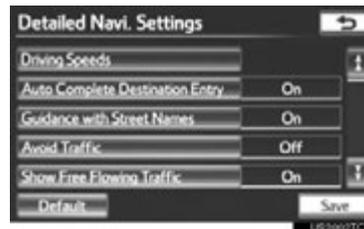

- 5 Touch “On” or “Off”.
- 6 Touch “Save”.

- When congestion information about the guidance route has been received, a screen will appear to ask if it is desirable to reroute to avoid the congestion.
- Touch “Yes” to reroute. Another route to avoid the congestion will appear.
- Touch “No” if it is not desirable to reroute.

INFORMATION


- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate.

4. SETUP

SHOW FREE FLOWING TRAFFIC

Free flowing traffic can be shown by an arrow when **“Show Free Flowing Traffic”** is turned on.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Detailed Navi. Settings”** on the “Navigation Settings” screen.
- 4 Touch **“Show Free Flowing Traffic”**.

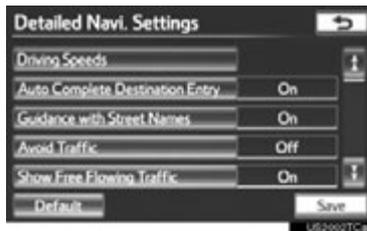

- 5 Touch **“On”** or **“Off”**.
- 6 Touch **“Save”**.


INFORMATION

- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate.

POI CATEGORY CHANGE (SELECT POI ICONS)

Select up to 6 POI icons to be displayed on the map screen.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Detailed Navi. Settings”** on the “Navigation Settings” screen.
- 4 Touch **“Favorite POI Categories”**.

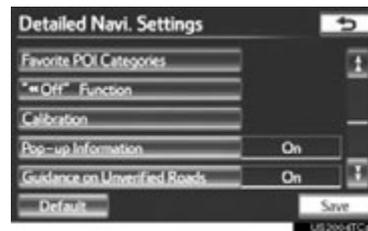

- 5 Touch the category to be changed.



- 6 Touch the desired group.



- If the desired POI category is not on the screen, touch **“List All Categories”** to list all POI categories.

- 7 Touch the desired category.




- The screen returns to the first page of the “Favorite POI Categories” screen.

- 8 Touch **“OK”**.


SCREEN LAYOUT FUNCTION (“◀◀ Off” Function)

Each screen button and current street name on the map screen can be displayed or hidden.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Detailed Navi. Settings”** on the “Navigation Settings” screen.
- 4 Touch **“◀◀ Off” Function**.

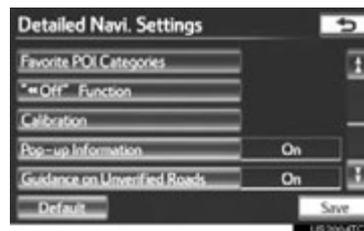

- 5 Touch the screen buttons to be turned off. The selected screen buttons will be dimmed.

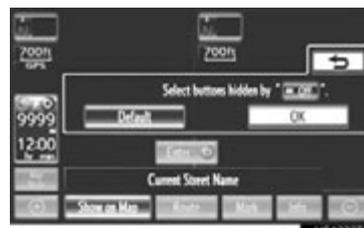

- To set the setting as a default, touch **“Default”**.

- 6 Touch **“OK”**.

- The previous screen will be displayed.

- 7 Touch **“Save”**.

3


NAVIGATION SYSTEM

4. SETUP


CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Detailed Navi. Settings”** on the “Navigation Settings” screen.
- 4 Touch **“Calibration”**.

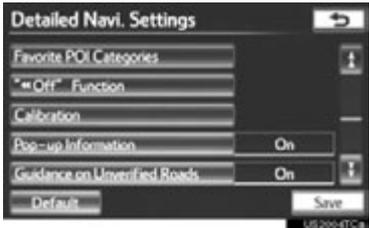

- 5 Touch the desired screen button.

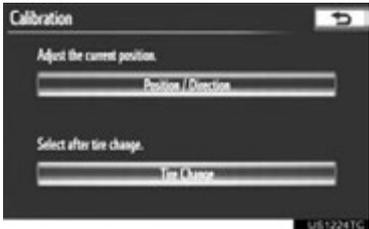


- For additional information on the accuracy of a current position, see “LIMITATIONS OF THE NAVIGATION SYSTEM” on page 127.

POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Touch **“Position / Direction”**.

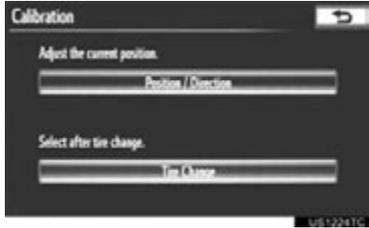


- 2 Touch one of the 8 directional screen buttons to move the cursor to the desired point on the map.



- 3 Touch **“OK”**.

- 4 Touch either  or  to adjust the direction of the current position mark.

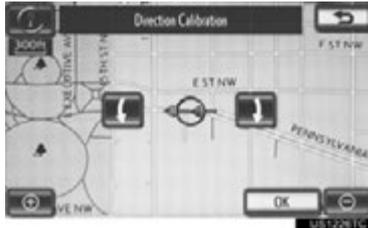


- 5 Touch **“OK”**.

- The map will be displayed.

■ TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

- 1 To perform the distance calibration procedure, touch **“Tire Change”**.

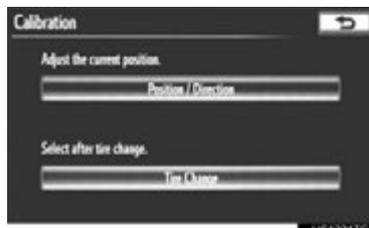

- The message appears and the quick distance calibration is automatically started. A few seconds later, a map will be displayed.


INFORMATION

- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

POP-UP INFORMATION

When **“Pop-up information”** is turned on, pop-up information will be displayed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Navigation”** on the “Setup” screen.
- 3 Touch **“Detailed Navi. Settings”** on the “Navigation Settings” screen.
- 4 Touch **“Pop-up Information”**.

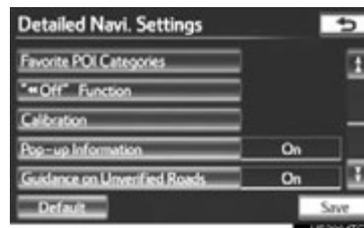

- 5 Touch **“On”** or **“Off”**.
- 6 Touch **“Save”**.

- When **“Pop-up Information”** is turned off, the following messages will not be displayed.

3

NAVIGATION SYSTEM

4. SETUP

- ▶ This message appears when the map is displayed POI icons and the map scale is over 0.5 miles (800 m).



- ▶ This message appears when the map is switched to dual map screen mode.



 
4. SETUP

2. VEHICLE SETTINGS

MAINTENANCE

When the navigation system is turned on, the “Maintenance Reminder” screen displays when it is time to replace a part or certain components. (See page 26.)

- 1 Press the “**SETUP**” button.



- 2 Touch “**Vehicle**”.



- 3 Touch “**Maintenance**”.



- 4 Touch the desired screen button.



- Setting maintenance information. (See page 121.)
- Setting dealer. (See page 123.)

MAINTENANCE INFORMATION SETTING

- 1 Press the “**SETUP**” button.
- 2 Touch “**Vehicle**” on the “Setup” screen.
- 3 Touch “**Maintenance**” on the “Vehicle Settings” screen.
- 4 Touch the desired screen button.



- When the vehicle needs to be serviced, the screen button color will change to orange.

3


NAVIGATION SYSTEM

4. SETUP

Screen button	Function
"Engine oil"	Replace engine oil
"Oil filter"	Replace engine oil filter
"Rotation"	Rotate tires
"Tires"	Replace tires
"Battery"	Replace 12-volt battery
"Brake pad"	Replace brake pads
"Wipers"	Replace wiper blades
"Coolant"	Replace coolant
"Brake oil"	Replace brake fluid
"Trans. fluid"	Replace transmission fluid
"Service"	Scheduled maintenance
"Air filter"	Replace air filter
"Personal"	New information items can be created separately from provided ones.
"Delete All"	Touch to cancel all conditions which have been input.
"Reset All"	Touch to reset the item which has satisfied a condition.

Screen button	Function
"Set Dealer"	Touch to register dealer information. (See "DEALER SETTING" on page 123.)
"Dealer Info."	Touch to edit dealer information. (See "DEALER SETTING" on page 123.)
"Reminder"	When this screen button is touched, the indicator is illuminated. The system is set to give maintenance information with the "Maintenance Reminder" screen. (See page 26.)

5 Input the conditions.

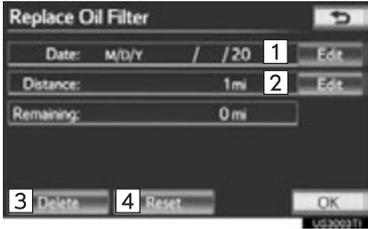

No.	Function
1	Touch to input the next maintenance date.
2	Touch to input the driving distance until the next maintenance check.
3	Touch to cancel the date and distance conditions.
4	Touch to reset the date and distance conditions.

6 Touch "OK".

- The screen then returns to the "Maintenance" screen.

INFORMATION

- For scheduled maintenance information, refer to "Scheduled Maintenance Guide" or "Owner's Manual Supplement".
- Depending on driving or road conditions, the actual date and distance maintenance should be performed may differ from the stored date and distance in the system.


DEALER SETTING

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- 1 Press the "SETUP" button.
- 2 Touch "Vehicle" on the "Setup" screen.
- 3 Touch "Maintenance" on the "Vehicle Settings" screen.
- 4 Touch "Set Dealer".




- 5 If a dealer has not been registered, enter the location of a dealer in the same way as for a destination search. (See "DESTINATION SEARCH" on page 58.)

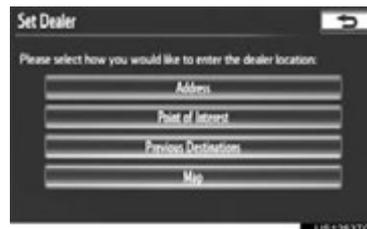

- When "Set Dealer" registration is finished, the "Dealer" screen is displayed.

4. SETUP


6 Touch **“Edit”** next to the item to be edited.

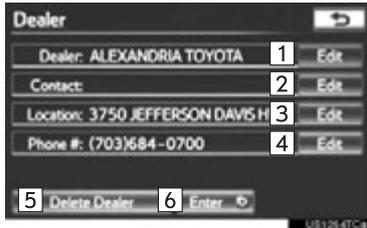

No.	Function
1	Touch to enter the name of a dealer. (See page 124.)
2	Touch to enter the name of a dealer member. (See page 124.)
3	Touch to set the location. (See page 125.)
4	Touch to enter the phone number. (See page 125.)
5	Touch to delete the dealer information displayed on the screen.
6	Touch to set the displayed dealer as a destination. (See “STARTING ROUTE GUIDANCE” on page 75.)

TO EDIT “Dealer” OR “Contact”

1 Touch **“Edit”** next to “Dealer” or “Contact”.

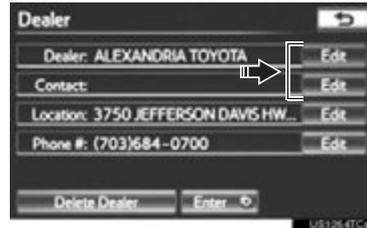

2 Enter the name using the alphanumeric keys.




- Up to 32 characters can be entered.

3 Touch **“OK”**.

- The previous screen will be displayed.

■ TO EDIT “Location”

- 1 Touch “**Edit**” next to “Location”.

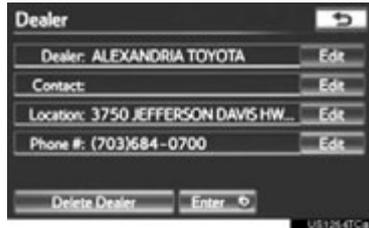

- 2 Touch one of the 8 directional screen buttons to move the cursor to the desired point on the map screen.




- 3 Touch “**OK**”.

 - The previous screen will be displayed.

■ TO EDIT “Phone #” (PHONE NUMBER)

- 1 Touch “**Edit**” next to “Phone #”.

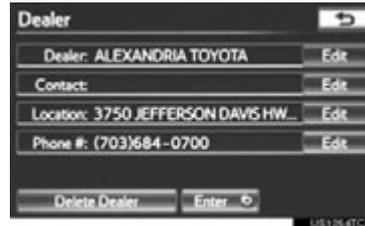

- 2 Enter the number using number keys.



- 3 Touch “**OK**”.

 - The previous screen will be displayed.

3

NAVIGATION SYSTEM

VEHICLE CUSTOMIZATION

Vehicle settings can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Vehicle”** on the **“Setup”** screen.
- 3 Touch **“Vehicle Customization”**.



- 4 Touch the desired items to be set.
 - For a list of the settings that can be changed, refer to **“Owner’s Manual”**.
- 5 After changing the settings, touch **“Save”**. A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

CAUTION

- When performing the customization procedure, ensure that there is sufficient ventilation in the vehicle and surrounding area. If there is insufficient ventilation, exhaust gases may collect and enter the vehicle. Exhaust gases include harmful carbon monoxide (CO) and inhaling them may lead to death or a serious health hazard.

INFORMATION

- To avoid discharging the 12-volt battery, perform the customization procedure with the hybrid system operating.

5. GPS (GLOBAL POSITIONING SYSTEM)

1. LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When the vehicle is receiving signals from satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

- The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

5. GPS (GLOBAL POSITIONING SYSTEM)

- Accurate current position may not be shown in the following cases:
 - When driving on a small angled Y-shaped road.
 - When driving on a winding road.
 - When driving on a slippery road such as in sand, gravel, snow, etc.
 - When driving on a long straight road.
 - When motorway and surface streets run in parallel.
 - After moving by ferry or vehicle carrier.
 - When a long route is searched during high speed driving.
 - When driving without setting the current position calibration correctly.
 - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
 - When leaving a covered parking lot or parking garage.
 - When a roof carrier is installed.
 - When driving with tire chains installed.
 - When the tires are worn.
 - After replacing a tire or tires.
 - When using tires that are smaller or larger than the factory specifications.
 - When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration, see page 118.
- Inappropriate route guidance may occur in the following cases:
 - When turning at an intersection off the designated route guidance.
 - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
 - When turning at an intersection for which there is no route guidance.
 - When passing through an intersection for which there is no route guidance.
 - During auto reroute, the route guidance may not be available for the next turn to the right or left.
 - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
 - After auto reroute, the route may not be changed.
 - If an unnecessary U-turn is shown or announced.
 - If a location has multiple names and the system announces 1 or more of them.
 - When a route cannot be searched.
 - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
 - Your destination point might be shown on the opposite side of the street.
 - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
 - The road and map data stored in the navigation system may not be complete or may not be the latest version.
- After replacing a tire, implement the operation described in "TIRE CHANGE CALIBRATION". (See page 119.)

INFORMATION

- This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.

5. GPS (GLOBAL POSITIONING SYSTEM)

4

PHONE

1 PHONE OPERATION	
1. QUICK REFERENCE.....	132
2. PHONE (HANDS-FREE SYSTEM FOR CELLULAR PHONE)	134
USING THE PHONE SWITCH	135
USING THE STEERING SWITCHES.....	136
ABOUT THE PHONEBOOK IN THIS SYSTEM.....	136
WHEN SELLING OR DISPOSING OF THE VEHICLE.....	137
3. REGISTER A Bluetooth® PHONE.....	139
CONNECTING A Bluetooth® PHONE.....	140
RECONNECTING THE Bluetooth® PHONE.....	142
4. CALL ON THE Bluetooth® PHONE	143
BY DIAL.....	143
BY PHONEBOOK.....	143
BY SPEED DIAL.....	145
BY CALL HISTORY	145
BY VOICE RECOGNITION	147
CALLING USING AN SMS/MMS MESSAGE	149
BY POI* CALL	149
5. RECEIVE ON THE Bluetooth® PHONE.....	150
6. TALK ON THE Bluetooth® PHONE	151
WHEN YOU SELECT "0-9".....	151
INCOMING CALL WAITING	153
7. Bluetooth® PHONE MESSAGE FUNCTION	154
CHECKING MESSAGES	154
REPLYING (QUICK REPLY)	155
NEW MESSAGE NOTIFICATION	156
2 SETUP	
1. PHONE SETTINGS	157
PHONE SOUND SETTINGS	157
PHONEBOOK.....	159
MESSAGE SETTINGS	172
PHONE DISPLAY SETTINGS	176
2. Bluetooth® SETTINGS	179
REGISTERED DEVICES.....	179
SELECTING A Bluetooth® PHONE	183
SELECTING PORTABLE PLAYER	185
DETAILED Bluetooth® SETTINGS	186


*: Point of Interest

 
1
2
3
4
5
6
7
8
9

1. PHONE OPERATION

1. QUICK REFERENCE

Bluetooth® phones can be operated via the navigation system's screen. To display the hands-free operation screen, press the  button or the  switch on the steering wheel.

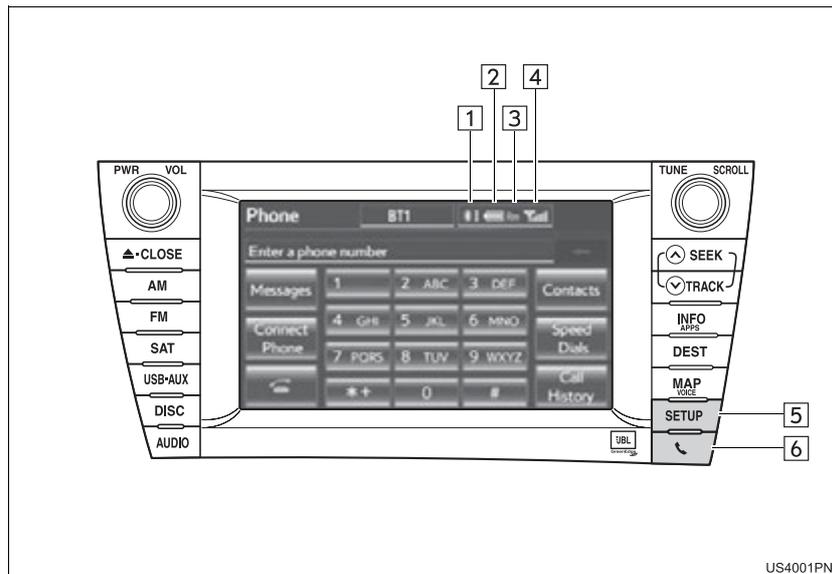

No.	Name	Function
1	The condition of Bluetooth® connection	 <p>No connection ← → Good</p> <p>An antenna for the Bluetooth® connection is built in the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places:</p> <ul style="list-style-type: none"> • The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box and console box). • The cellular phone touches or is covered with metal materials. <p>Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.</p> <p>When the cellular phone is not connected, “No Connect” is displayed.</p>
2	The amount of battery charge left	 <p>Empty ← → Full</p> <p>This is not displayed when the Bluetooth® is not connected. The amount displayed does not always correspond with the amount displayed on the cellular phone. The amount of battery charge left may not be displayed depending on the type of phone you have. This system does not have a charging function.</p>
3	The receiving area	<p>“Rm” is displayed when receiving in a roaming area. The receiving area may not be displayed depending on the type of phone you have.</p>
4	The level of reception	 <p>Poor ← → Excellent</p> <p>The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have.</p> <p>When the cellular phone is out of the service area or in a place inaccessible by radio waves, “No Service” is displayed.</p>
5	“SETUP” button	Press to display the “Setup” screen. Touching “Phone” or “Bluetooth*” on the “Setup” screen displays the hands-free setup screen.
6	 button	Press to display the hands-free operation screen.

4
PHONE

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

1. PHONE OPERATION

2. PHONE (HANDS-FREE SYSTEM FOR CELLULAR PHONE)

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth®. Bluetooth® is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.

- For registering and setting of the phone, see "PHONE SETTINGS" on page 157 and "Bluetooth® SETTINGS" on page 179.



CAUTION

- While driving, do not use a cellular phone or connect the Bluetooth® phone.



NOTICE

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

INFORMATION

- If your cellular phone does not support Bluetooth®, this system cannot function.
- In the following conditions, the system may not function:
 - The cellular phone is turned off.
 - The current position is outside the communication area.
 - The cellular phone is not connected.
 - The cellular phone has a low battery.
- When using Bluetooth® audio and hands-free at the same time, the following problems may occur:
 - The Bluetooth® connection may be cut.
 - Noise may be heard on the Bluetooth® audio playback.
- This system supports the following services:
 - Bluetooth® Specification
Ver.1.1 or higher
(Recommended: Ver.2.1 + EDR or higher)
 - Profiles
 - HFP (Hands Free Profile)
Ver.1.0 or higher
(Recommended: Ver.1.5 or higher)
 - OPP (Object Push Profile)
Ver.1.1 or higher
 - PBAP (Phone Book Access Profile)
Ver.1.0 or higher
 - MAP (Message Access Profile)
Ver.1.0 or higher
 - SPP (Serial Port Profile)
Ver.1.1 or higher*

*: This profile is necessary when using Entune. (See "ENTUNE SERVICE" on page 306.)

INFORMATION


- If your cellular phone does not support HFP, registering the Bluetooth® phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
- If the connected Bluetooth® phone version is older than recommended or incompatible, this function may not be used.
- Refer to <http://www.toyota.com/Bluetooth/> to find approved Bluetooth® phones for this system.



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

USING THE PHONE SWITCH

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

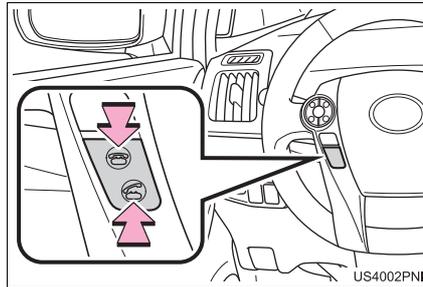


- The microphone can be used when talking on the phone.

► Type A



► Type B

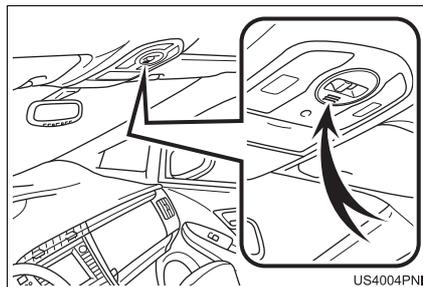


1. PHONE OPERATION

INFORMATION

- The other party's voice will be heard from the front speakers. The audio system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep the volume of receiving voice down. Otherwise, an echo will be heard and receiving voice can be heard outside of the vehicle. When you talk on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
 - Driving on an unpaved road. (Making excessive traffic noise.)
 - Driving at high speeds.
 - The roof or windows are open.
 - The air conditioning vents are pointed towards the microphone.
 - The sound of the air-conditioning fan is loud.
 - There is a negative effect on sound quality due to the phone and/or network being used.

USING THE STEERING SWITCHES

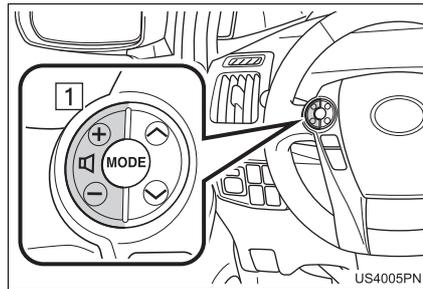

1 Volume control switch

- Press the “+” side to increase the volume.
- Press the “-” side to decrease the volume.

ABOUT THE PHONEBOOK IN THIS SYSTEM

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
 - Phonebook data
 - Call history data
 - Speed dial data
 - Image data
 - Messages
 - Quick reply messages
 - All phone settings

INFORMATION

- When a phone's registration is deleted, the above-mentioned data is also deleted.

WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (See “DELETING PERSONAL DATA” on page 52.)

- The following data in the system can be initialized:
 - Phonebook data
 - Call history data
 - Speed dial data
 - Image data
 - All phone settings
 - Message settings

INFORMATION

- Once initialized, the data and settings will be erased. Pay much attention when initializing the data.

► U.S.A.

● **FCC ID : HYQDNNS059**
Type : DNNS059
IC : 1551A-DNNS059 Canada 310

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

! CAUTION

- **FCC WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
- **CAUTION: Radio Frequency Radiation Exposure**
 This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person’s body (excluding extremities: hands, wrists, feet and ankles).
- **Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

4
PHONE

1. PHONE OPERATION

► Canada

CAUTION

● NOTE

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

- This equipment complies with IC radiation exposure limits set forth for uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

Cet équipement se conforme aux limites d'exposition aux radiations établies par Industrie Canada pour un environnement non contrôlé ainsi qu'aux directives d'exposition aux fréquences radioélectriques (RF) émises par Industrie Canada dans la norme CNR-102. Cet équipement émet un niveau d'énergie RF faible à un point tel qu'il se conforme sans devoir effectuer d'évaluation d'exposition maximum admissible (MPE). Lorsque l'équipement est utilisé, il est toutefois souhaitable de laisser au moins 20 cm entre l'antenne et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

CAUTION

- Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.
Co-implantation: cet émetteur ne doit pas être co-implanté ou actionné en même temps qu'aucune autre antenne ou émetteur.

1. PHONE OPERATION

 
3. REGISTER A Bluetooth® PHONE

To use the hands-free system, it is necessary to register a phone with the system. Once the phone has been registered, it is possible to make a hands-free call.

If a Bluetooth® phone has not been registered yet, it is necessary to register it first according to the following procedure. A Bluetooth® phone cannot be registered while driving.

- See “REGISTERING A Bluetooth® DEVICE” on page 180 of additional registration when registering.

- 1 Press the  button or the  switch on the steering wheel.



- 2 Touch “Yes” to register a phone.



- If 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. See “When 5 Bluetooth® devices have already been registered” on page 140.

- 3 When this screen is displayed, input the passcode displayed on the screen into the phone.



- For details about entering the passcode into the Bluetooth® device, see the manual that comes with it.
- A passcode is not required for SSP (Secure Simple Pairing) compatible Bluetooth® phones. Depending on the type of Bluetooth® phone being connected, a message confirming registration may be displayed on the Bluetooth® phone's screen. Respond and operate the Bluetooth® phone according to the confirmation message.
- To cancel the registration, touch “Cancel”.
- If the Bluetooth® phone to be registered has a Bluetooth® audio function, this can be registered at the same time.

- 4 This screen will be displayed when registration is complete.



- When using the same phone, it is not necessary to register it again.

4

PHONE

- ▶ When this screen is displayed, follow the guidance on the screen to try again.



- ▶ When another Bluetooth® device is connected



- When another Bluetooth® device is currently connected, this screen is displayed.
- To disconnect the Bluetooth® device, touch **“Yes”**.
- ▶ When 5 Bluetooth® devices have already been registered
 - 1 When 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. Touch **“Yes”** to delete 1 or more.
 - 2 Touch the device to be deleted, then touch **“Remove”**.
 - 3 Touch **“Yes”**.

- ▶ If the Bluetooth® phone has a Bluetooth® audio function



- When the Bluetooth® phone to be registered has a Bluetooth® audio function, this audio function will be registered automatically at the same time and this screen may be displayed. If this screen is displayed, touch **“Yes”** to connect the audio function or touch **“No”** to cancel the connection.

CONNECTING A Bluetooth® PHONE

AUTOMATICALLY

When a phone is registered, auto connection is turned on. Always set it to this mode and leave the Bluetooth® phone in a location where connection can be established.



- For automatic connection, see **“CHANGING “Bluetooth* Power”** on page 187.
- *: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



- When the “POWER” switch is in ACCESSORY or ON mode, the system searches for a nearby registered cellular phone.
- The system will connect with the phone that was last connected, if it is nearby. When “Display Phone Status” is set to “On”, the connection status is displayed. (See “Bluetooth® DEVICE CONNECTION STATUS DISPLAY SETTINGS” on page 188.)
- This screen appears when the Bluetooth® phone is first connected after the “POWER” switch is in ACCESSORY or ON mode.

INFORMATION

- It may take time if the phone connection is carried out during Bluetooth® device playback.

MANUALLY

When the auto connection has failed or “Bluetooth* Power” is turned off, it is necessary to connect Bluetooth® manually.

- 1 Press the button or the switch on the steering wheel.
- 2 Touch “Connect Phone”.



- 3 Touch the screen button corresponding to the desired phone connection.



- When the cellular phone’s device name has not been able to be obtained, “Device 1” to “Device 5” will be displayed in the order the phones were registered.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4
PHONE

- 4 This screen is displayed.



- 5 When the connection is completed, this screen is displayed.



- Now you can use the Bluetooth® phone.
- ▶ When a phone is connected while Bluetooth® audio is playing



- This screen is displayed, and the Bluetooth® audio will stop temporarily.

RECONNECTING THE Bluetooth® PHONE

If a Bluetooth® phone is disconnected due to poor reception from the Bluetooth® network when the "POWER" switch is in ACCESSORY or ON mode, the system automatically reconnects the Bluetooth® phone. When "**Display Phone Status**" is set to "**On**", the connection status is displayed.

- If a Bluetooth® phone is disconnected on purpose, such as turning it off, this does not happen. Reconnect the Bluetooth® phone manually.

1. PHONE OPERATION

4. CALL ON THE Bluetooth® PHONE

After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are 7 methods by which a call can be made. These are described below.

BY DIAL

A call can be made by inputting the phone number.

This cannot be operated while driving.

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch the desired key to input the phone number.



- Each time  is touched, an input digit is deleted.
- 3 Touch  or press the  switch on the steering wheel.

BY PHONEBOOK

Calls can be made by using the phonebook data which is transferred from the registered cellular phone.

The phonebook changes depending on the phone connected. Up to 1000 contacts (maximum of 3 numbers per contact) can be registered in each phonebook.

This cannot be operated while driving.

- 1 Touch "Contacts".



- 2 Touch the desired data from the list.



4

PHONE

- 3 Touch the desired number from the list.



- 4 Touch  or press the  switch on the steering wheel.

WHEN THE PHONEBOOK IS EMPTY

- 1 Touch "Contacts".



- 2 Touch "Yes" or "Transfer" to automatically transfer the phonebook from the connected phone.
- Touch "Manual" to transfer the phonebook manually. (See "TRANSFERRING A PHONE NUMBER" on page 160.)
 - Touch "No" or "Cancel" to cancel transferring.
 - If your cellular phone is neither PBAP nor OPP compatible, the phonebook cannot be transferred.

- ▶ PBAP compatible models



- ▶ PBAP incompatible but OPP compatible models



- 3 Transfer the phonebook data to the system using the Bluetooth® phone.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring phonebook data. Enter "1234" into the Bluetooth® phone.



- This screen appears while transferring. To cancel this function, touch "Cancel".

- 4 When the data transfer from a PBAP incompatible but OPP compatible model is complete, “Done” will appear on the screen. Touch “Done”.



- 2 Touch the desired number to call.



- The list to be displayed can be changed by touching the “Speed Dial 1”, “Speed Dial 2” or “Speed Dial 3” tab.

BY SPEED DIAL

Calls can be made using registered phone numbers which can be selected from a phonebook. (See “REGISTERING THE SPEED DIAL” on page 168 for registering the speed dial.)
This can be operated while driving.

- 1 Touch “Speed Dials”.



BY CALL HISTORY

CALLS CAN BE MADE BY CALL HISTORY WHICH HAS 4 FUNCTIONS

All: all calls (missed, incoming or outgoing)
Up to 25 call history items can be selected from the “All” tab while driving.
Missed: calls that were missed
Incoming: calls that were received
Outgoing: calls that were made

4
PHONE

- 1 Touch "Call History".




- 2 Touch the desired data from the list.



- The list to be displayed can be changed by touching the "All", "Missed", "Incoming" or "Outgoing" tab.

- 3 Touch  or press the  switch on the steering wheel.

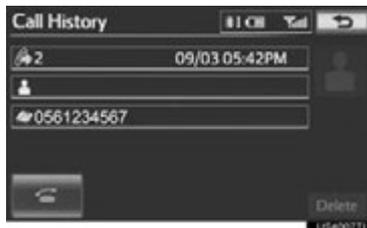

CALLS CAN BE MADE USING THE LATEST CALL HISTORY ITEM

- 1 Press the  button or the  switch on the steering wheel to display the "Phone" screen.

- 2 Press the  switch on the steering wheel to display the "Call History" screen.

- 3 Press the  switch on the steering wheel to select the latest history item.


- 4 Touch  or press the  switch on the steering wheel to call the latest history item.

- When making a call by phonebook, the name (if registered) is displayed.
- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the phonebook is received, the name and the number are displayed.
- Number-withheld calls are also memorized in the system.
- International phone calls may not be made depending on the type of cellular phone you have.

BY VOICE RECOGNITION

Calls can be made by giving a voice command. (For the operation and command of voice recognition, see “VOICE COMMAND SYSTEM” on page 270.)

This can be operated while driving.

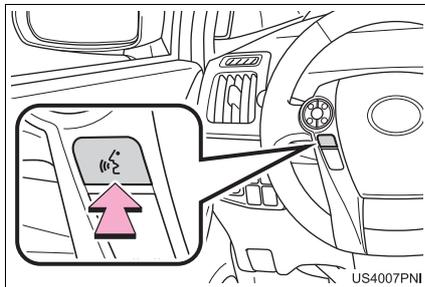

VOICE COMMAND EXAMPLE: CALL NAME

- 1 Press the talk switch.
 - “Call <name> <type>” is displayed in the “Shortcut Menu” screen.
 - When “Call <name> <type>” on the “Shortcut Menu” screen is dimmed, the phonebook’s voice command recognition cannot be used. Check the Bluetooth® connection and if the contacts have been transferred to the navigation system.

- 2 Say the name, or the name and type of phone, of a registered contact.

- In the same manner as it is displayed on the screen, “Call <name> <type>”, after saying “**Call**” say the name, or the name and type of phone, of a contact. For example: “**Call**”, “**John Smith**” or “**Call**”, “**Mary Davis**”, “**Mobile**”
- There are 4 types of phones: Home, Mobile, Office and Other.
- Short or abbreviated names in the phonebook may not be recognized. Change names in the phonebook to full names.
- Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say “**Yes**” or “**No**”.
- When the system recognizes multiple names from the phonebook, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say the number of the name from the candidate list (number 1 and number 2) to select a name from the candidate list.
- When a contact has multiple phone numbers registered in the phonebook, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (number 1 and number 2) to select a phone number from the candidate list.

- 3 Say “**Dial**” to call the phone number.



**VOICE COMMAND EXAMPLE:
DIAL NUMBER**

- 1** Press the talk switch.
 - “Dial <number>” is displayed in the “Shortcut Menu” screen.
 - When “Dial <number>” on the “Shortcut Menu” screen is dimmed, the phone number voice recognition cannot be used. Check the Bluetooth® phone connection.
- 2** Say the phone number.
 - In the same manner as it is displayed on the screen, “Dial <number>”, after saying “**Dial**” say the phone number.
 - Say the phone number one digit at a time. For example, if the phone number is 2345678:
Say “**two three four five six seven eight**”
Do not say “**twenty three forty five sixty seven eight**”
 - The system can recognize the following types of phone numbers:
 - 3 digit numbers (911, 411, 611)
 - 7 digit numbers (Local phone numbers)
 - 10 digit numbers (Area code + Local phone number)
 - 11 digit phone numbers (1 + Area code + Local phone number)
 - As the system cannot recognize additional numbers, say the complete number without stopping.
 - When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (number 1 and number 2) to select a phone number from the candidate list.
- 3** Say “**Dial**” to call the phone number.

INTERNATIONAL CALL

To dial a phone number that is not a 3, 7, 10 or 11 digit number, for example an international number, use “International Call”.

- 1** Go to the “Main Menu” screen by pressing the talk switch on the steering wheel and saying “**Main menu**” or touch the “Main Menu” screen button.
 - 2** Say “**Use a phone**”.
 - 3** Say “**International call**”.
- Up to 24 digits can be recognized when using the international call function. The number can also be divided into multiple groups and recognized.

Calling without the voice recognition:

After the desired phone number is displayed, a call can also be made by pressing the  switch on the steering wheel.

Canceling the voice recognition: The voice recognition will be canceled when either of the following is performed:

- Press and hold the talk switch.
- Touch “**Cancel**”.

CALLING USING AN SMS/MMS MESSAGE

Calls can be made to an SMS (Short Message Service)/MMS (Multimedia Messaging Service) message sender's phone number.

This can be operated while driving.


- 1 Touch **"Messages"**.



- When **"Message Transfer"** is set to **"Off"**, a confirmation screen will be displayed. Touch **"Yes"**.
- 2 Touch the **"SMS/MMS"** tab and then touch the desired received message from the list.
 - The tab display may vary depending on the type of cellular phone.
 - 3 Touch  or press the  switch on the steering wheel.

BY POI CALL

A call can be made by touching  when it is displayed on the screen from the navigation system. (See **"TO SEE INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET"** on page 35 and **"VIEW DETAILED FUEL PRICE INFORMATION"** on page 294.)

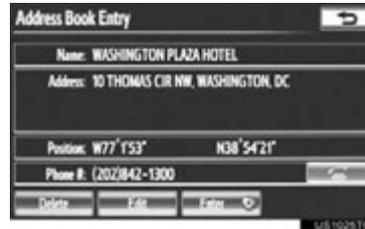

PHONE

1. PHONE OPERATION

5. RECEIVE ON THE Bluetooth® PHONE

When a call is received, this screen is displayed with a sound.

- 1 Touch  or press the  switch on the steering wheel to talk on the phone.



To refuse to receive the call: Touch  or press the  switch on the steering wheel.

To adjust the volume of a received call: Touch “-” or “+”, turn the “PWR VOL” knob, or use the volume switch on the steering wheel.

INFORMATION

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The incoming call display mode can be set. (See “INCOMING CALL DISPLAY” on page 177.)

1. PHONE OPERATION

6. TALK ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.



To adjust the volume of the other party's voice: Touch “-” or “+”, turn the “PWR VOL” knob, or use the volume switch on the steering wheel.

To hang up the phone: Touch  or press the  switch on the steering wheel.

To mute your voice: Touch “Mute”.

To input a key: Touch “0-9”.

To transfer the call: Touch “Handset Mode” to change from hands-free call to cellular phone call. Touch “Handsfree Mode” to change from cellular phone call to hands-free call.

INFORMATION

- Changing from hands-free call to cellular phone call is not possible while driving.
- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.

WHEN YOU SELECT “0-9”

INPUTTING A KEY

Inputting a key is not possible while driving.

- 1 Touch the desired number to input the key.



To hang up the phone: Touch  or press the  switch on the steering wheel.

4

PHONE

TONE SIGNAL

If a continuous tone signal is registered in a phonebook, this screen appears. (If not registered, “Send” and “Clear” are not displayed.) This can be operated while driving.

- 1 Confirm the number displayed on the screen and touch “Send”. The number before marked sign will be sent.



- When “Clear” is touched, this function is finished and the normal tone screen appears.

To hang up the phone: Touch  or press the  switch on the steering wheel.

INFORMATION

- The continuous tone signal is the marked sign (p or w) and the number that follows the phone number. (e.g. 056133w0123p#1*)
- When the “p” pause tone is used, after waiting 2 seconds the tone data up until the next pause tone will be automatically sent. When the “w” pause tone is used, the tone data up until the next pause tone will be automatically sent after user operation.
- This operation can be done when it is desirable to operate an answering machine or use a telephone service in a bank for example. The phone number and the code number in the phonebook can be registered.

BY VOICE RECOGNITION


“Send Tones” can be operated by giving a command during a call.

- The operating procedure is similar to other voice recognition operations. (For the operation of voice recognition, see “VOICE COMMAND SYSTEM” on page 270.)

INCOMING CALL WAITING

When a call is interrupted by a third party while talking, this screen is displayed.

- 1 Touch  or press the  switch on the steering wheel to start talking with the other party.

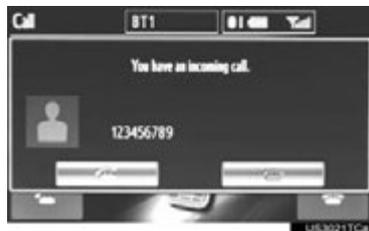

- Touch  or press the  switch on the steering wheel to refuse the call.



- Each time  is touched or the  switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

INFORMATION

- If your cellular phone does not support HFP Ver. 1.5, this function cannot be used.

1. PHONE OPERATION

7. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying using the navigation system (Quick reply).

CHECKING MESSAGES

1 Press the  button or the  switch on the steering wheel.

2 Touch “Messages”.



● When “Message Transfer” is set to “Off”, a confirmation screen will be displayed. Touch “Yes”.

3 Touch the screen button corresponding to the desired message.

● Messages are displayed in the appropriate connected Bluetooth® phone’s registered mail address folder. Touch the tab of the desired folder to be displayed.

4 Messages can be checked.



● Touching “Previous” or “Next” displays the previous or next message.

● Only received messages on the connected Bluetooth® phone can be displayed.

● The text of the message is not displayed while driving.

5 Touch “Play” to start reading out of the message. Touch “Stop” to stop the function.

● Touch “-” or “+”, turn the “PWR VOL” knob, or use the volume switch on the steering wheel to adjust the message read out volume.

● The message read out function is available even while driving.

- When the received message is an e-mail and “**Update Message Read Status on Phone**” is set to “**On**”, “**Mark as Unread**” or “**Mark as Read**” can be selected. Touch “**Mark as Unread**” to mark mails that have been read on the Bluetooth® phone as unread. Conversely, touch “**Mark as Read**” to mark mails that have not been read on the Bluetooth® phone as read. (See “**MES-SAGE SETTINGS**” on page 172.)
- For SMS/MMS, touching  or pressing the  switch on the steering wheel calls the sender. (See page 149.)
- Touch “**Reply**” to reply to the message. (See page 155.)

REPLYING (QUICK REPLY)

1 Touch “Reply”.



2 Touch the screen button corresponding to the desired message.



3 Touch “Send”.

- While the message is being sent, a sending message screen is displayed.
- 4 This screen will be displayed if message delivery fails.



- Touch “**Retry**” to attempt to send the message again or touch “**Cancel**” to cancel.

4

PHONE

EDITING REPLY MESSAGES

- 1 Reply messages can be edited while the vehicle is parked. Touch **"Edit"**.




- 2 Touch the screen button corresponding to the desired message.



- 3 Touch **"OK"** when editing is completed.



- 4 Touch .

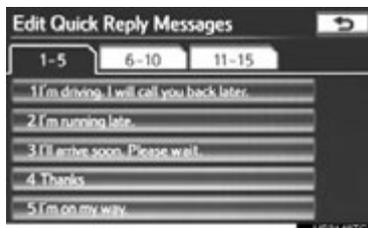

NEW MESSAGE NOTIFICATION

If **"New Message Pop-up"** and **"New Message Voice Notification"** are set to **"On"**, a notification appears on the screen and a voice notification will be heard when a new message arrives. (See **"MESSAGE SETTINGS"** on page 172.)

 
- 1 Touch **"Read"** to check the message.
 - The **"Messages"** screen will be displayed.
 - When **"Automatic Message Readout"** is set to **"On"**, the message will be automatically read out. (See **"MESSAGE SETTINGS"** on page 172.)
 - For SMS/MMS, touching  or pressing the  switch on the steering wheel calls the sender. (See page 149.)
 - To check the message later, touch **"Ignore"** or .

2. SETUP

1. PHONE SETTINGS

The phonebook can be edited. Volume, display and message settings can also be changed.


- 1 Press the **“SETUP”** button.



- 2 Touch **“Phone”**.




- 3 Perform each setting according to the procedures outlined on the following pages.

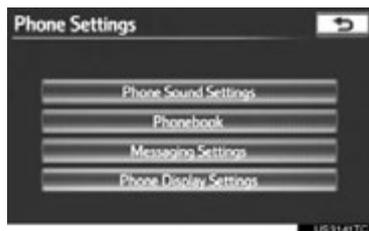

PHONE SOUND SETTINGS

The call and ring tone volume can be adjusted. A ring tone can be selected.

- 1 Touch **“Phone Sound Settings”**.

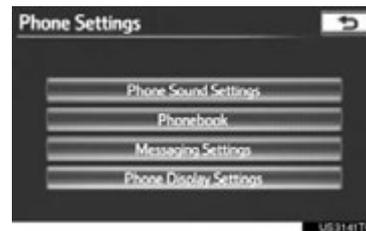

- 2 Perform each setting according to the procedures outlined on the following pages.



- 3 When all settings are completed, touch **“Save”**.

INFORMATION

- The system will automatically increase the volume when the speed exceeds 50 mph (80 km/h).

4

PHONE

2. SETUP

CALL VOLUME SETTING


- 1 Touch **“Call Volume”** on the “Phone Sound Settings” screen.
- 2 Touch **“-”** or **“+”** to adjust the call volume.



- 3 Touch **“OK”**.

RING TONE VOLUME SETTING


- 1 Touch **“Ring Tone Volume”** on the “Phone Sound Settings” screen.
- 2 Touch **“-”** or **“+”** to adjust the ring tone volume.

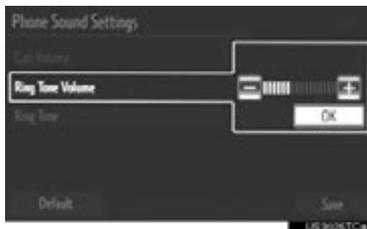

- 3 Touch **“OK”**.

RING TONE SETTING

- 1 Touch **“Ring Tone”** on the “Phone Sound Settings” screen.
- 2 Touch the screen button corresponding to the desired ring tone.

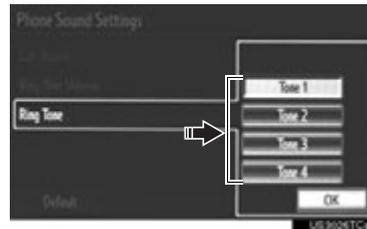

- Ring tones can be heard by touching the screen buttons.
- 3 Touch **“OK”**.

INITIALIZING THE SETTINGS


The settings can be initialized.

- 1 Touch **“Default”** on the “Phone Sound Settings” screen.
- 2 Touch **“Yes”**.

PHONEBOOK

The call history can be deleted and phonebook and speed dial settings can be changed.

- 1 Press the **"SETUP"** button.
- 2 Touch **"Phone"** on the "Setup" screen.
- 3 Touch **"Phonebook"**.

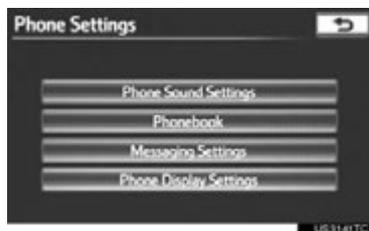

- 4 Perform each setting according to the procedures outlined on the following pages.



INFORMATION

- Phonebook data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.


SETTING THE PHONEBOOK

The phonebook can be transferred from a Bluetooth® phone to the system. The phonebook also can be added, edited and deleted.

- 1 Press the **"SETUP"** button.
- 2 Touch **"Phone"** on the "Setup" screen.
- 3 Touch **"Phonebook"** on the "Phone Settings" screen.
- 4 Touch **"Manage Contacts"**.



- 5 Perform each setting according to the procedures outlined on the following pages.

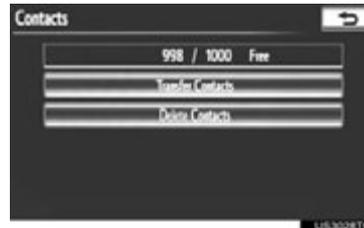

4

PHONE

2. SETUP

THE “Contacts” SCREEN CAN ALSO BE DISPLAYED

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch **“Contacts”** on the “Phone” screen.
- 3 Touch **“Options”**.



- 4 Touch **“Manage Contacts”**.



TRANSFERRING A PHONE NUMBER

The phone numbers in a Bluetooth® phone can be transferred to the system. The system can manage up to 5 phonebooks. Up to 1000 contacts (maximum of 3 numbers per contact) can be registered in each phonebook. Operation methods differ between PBAP compatible and PBAP incompatible but OPP compatible Bluetooth® phones. If your cellular phone is neither PBAP nor OPP compatible, the phonebook cannot be transferred.

- For PBAP compatible Bluetooth® phones

- 1 Touch **“Transfer Contacts”**.



- 2 Touch **“Update Contacts”**.



3 Transfer the phonebook data to the system using the Bluetooth® phone.

- This operation may be unnecessary depending on a cellular phone model.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring phonebook data. Enter “1234” into the Bluetooth® phone.



- This screen appears while transferring. To cancel this function, touch “Cancel”.
- If another Bluetooth® device is connected when transferring phonebook data, depending on the phone, the connected Bluetooth® device may need to be disconnected.

▶PBAP compatible models automatic data transfer setting

When a PBAP compatible phone is connected, the phone's phonebook data can be automatically transferred.

1 Touch “Transfer Contacts”.



- #### 2 Touch “Automatically Download Contacts” to transfer the phonebook from a connected cellular phone. Touch “Automatically Download Call History” to transfer the call history from a connected cellular phone.



3 Touch “On”.



4 Touch “Save”.

4

PHONE


2. SETUP

► For PBAP incompatible but OPP compatible Bluetooth® phones

1 Touch **“Transfer Contacts”**.



2 Touch **“Replace Contacts”** or **“Add Contacts”**.

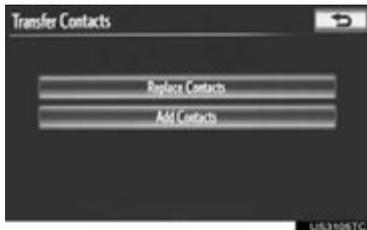

● If the phonebook contains phonebook data, this screen is displayed.

3 Transfer the phonebook data to the system using the Bluetooth® phone.

● Depending on the type of cellular phone, OBEX authentication may be required when transferring phonebook data. Enter “1234” into the Bluetooth® phone.



● This screen appears while transferring. To cancel this function, touch **“Cancel”**. If **“Add Contacts”** is touched and there is an interruption during the transfer of data, the phonebook data transferred until then will be stored in the system. This is not the case when **“Cancel”** is touched.

4 When the transfer is complete, **“Done”** will appear on the screen. Touch **“Done”**.

► When another Bluetooth® device is connected



● When another Bluetooth® device is currently connected, this screen is displayed.
● To disconnect it, touch **“Yes”**.


► From “Contacts” screen

Phonebooks of PBAP incompatible but OPP compatible phones can also be transferred from the “Contacts” screen.

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch “**Contacts**” on the “Phone” screen.
- 3 Touch “**Transfer**”.



- 4 This screen is displayed. The following operations are performed in the same manner as when they are performed from the “Setup” screen.

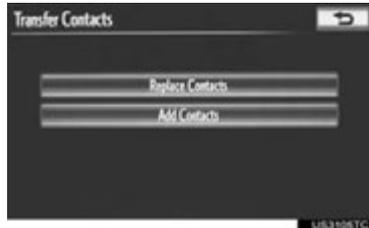


■ REGISTERING THE PHONEBOOK DATA

The phonebook data can be registered.

Up to 3 numbers per person can be registered. New phonebook data cannot be added for PBAP compatible Bluetooth® phones.

- 1 Touch “**New Contact**”.

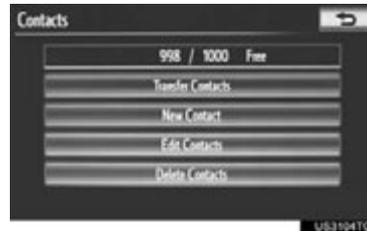

- 2 Use the software keyboard to input the name and touch “**OK**”.



- 3 Input the phone number and touch “**OK**”.



- To use a tone signal after the phone number, input the tone signal too.

4
PHONE

- 4 Touch the phone type.



- 5 When 2 or less numbers in total are registered to this contact, this screen is displayed.




- To add a number to this contact, touch “Yes”.

EDITING THE PHONEBOOK DATA

The phone number can be registered in “Phone # 1”, “Phone # 2” and “Phone # 3” separately. Phonebooks cannot be edited for PBAP compatible Bluetooth® phones via the navigation system.


- 1 Touch “Edit Contacts”.

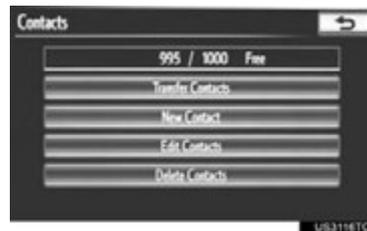

- 2 Touch the desired data to edit.



- 3 Touch the desired name or number.

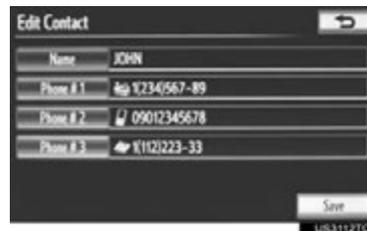


- 4 Edit the name or the number. (See “REGISTERING THE PHONEBOOK DATA” on page 163.)

- 5 Touch “Save” when editing is completed.

■ THE “Edit Contact” SCREEN CAN ALSO BE DISPLAYED

► From the “Contact” screen

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch “**Contacts**” on the “Phone” screen.
- 3 Touch the desired data from the list on the “Contacts” screen.
- 4 Touch “**Options**”.

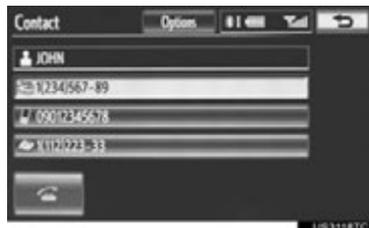


- 5 Touch “**Edit**”.



► From the “Call History” screen

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch “**Call History**” on the “Phone” screen.
- 3 Touch the desired number from the list on the “Call History” screen.
- 4 Touch “**Add to Contacts**” or “**Update Contact**”.

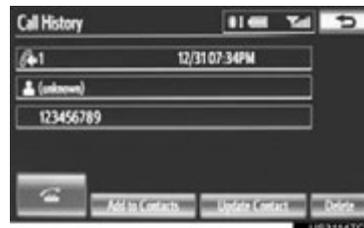

- 5 If “**Update Contact**” has been touched, this screen will be displayed. Touch the desired data from the list.




4

PHONE

DELETING THE PHONEBOOK DATA

The data can be deleted.
 When selling or disposing of the vehicle, delete all your data on the system. For PBAP compatible phones, delete the phonebook data after setting “Automatically Download Contacts” to “Off”. (See “PBAP compatible models automatic data transfer setting” on page 161.)

- 1 Touch “Delete Contacts”.

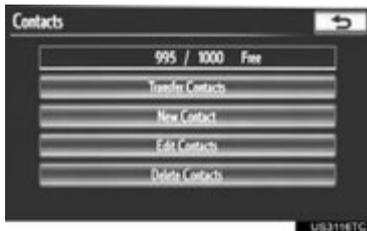

- 2 Touch the desired data or “Select All”, then touch “Delete”.




- Multiple data can be selected and deleted at the same time.
- 3 Touch “Yes”.


ALTERNATIVE PHONEBOOK DATA DELETION METHOD

▶ PBAP incompatible but OPP compatible models

- 1 Press the button or the switch on the steering wheel.
- 2 Touch “Contacts” on the “Phone” screen.
- 3 Touch the desired data from the list on the “Contacts” screen.
- 4 Touch “Options”.

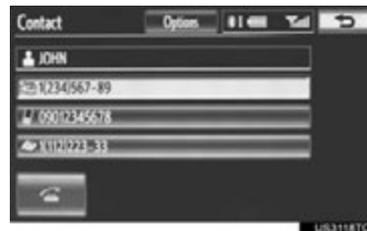

- 5 Touch “Delete”.

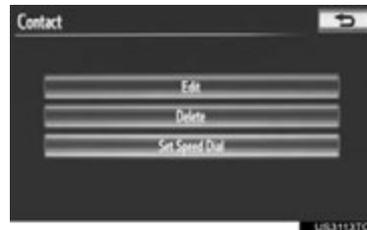

- 6 Touch “Yes”.


INFORMATION

- When a Bluetooth® phone is deleted, the phonebook data will be deleted at the same time.

SPEED DIALS SETTING

Speed dials can be registered and deleted.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Phone”** on the “Setup” screen.
- 3 Touch **“Phonebook”** on the “Phone Settings” screen.
- 4 Touch **“Manage Speed Dials”**.

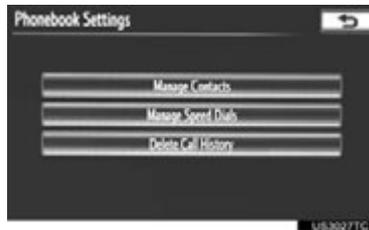

- 5 Perform each setting according to the procedures outlined on the following pages.



THE “Speed Dials” SCREEN CAN ALSO BE DISPLAYED


► From the “Speed Dial” screen

- 1 Press the button or the switch on the steering wheel.
- 2 Touch **“Speed Dials”** on the “Phone” screen.
- 3 Touch **“Options”**.



► From the “Contacts” screen

- 1 Press the button or the switch on the steering wheel.
- 2 Touch **“Contacts”** on the “Phone” screen.
- 3 Touch **“Options”**.

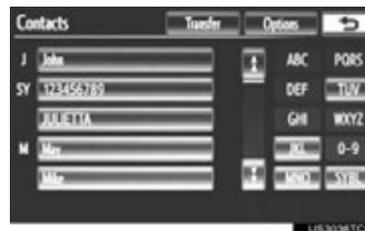

- 4 Touch **“Manage Speed Dials”**.



4

PHONE

2. SETUP

■ REGISTERING THE SPEED DIAL

Speed dial numbers can be registered by selecting the desired number from the phonebook. Up to 18 numbers per phone can be registered as a speed dial.


- 1 Touch **"New"**.




- 2 Touch the desired data to be registered.



- 3 Touch the desired phone number.

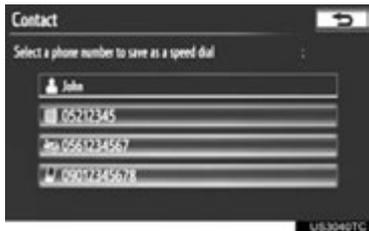

- 4 Touch the desired speed dial location.

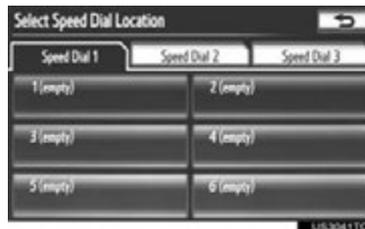

- 5 If a location that is already in use is touched, this screen will be displayed.



- Touch **"Yes"** to replace it.

- 6 When this screen is displayed, the operation is complete.



■ THE SPEED DIAL CAN ALSO BE REGISTERED

► From the “Speed Dial” screen

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch “**Speed Dials**” on the “Phone” screen.
- 3 Touch “(add new)”.




- 4 Touch “**Yes**” to set new speed dial.



- 5 Touch the desired data to be registered.



- 6 Touch the desired phone number.

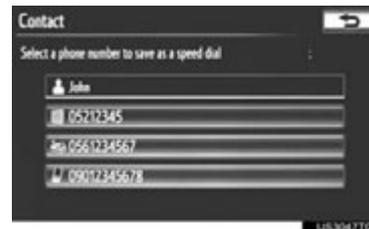

► From the “Contact” screen

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch “**Contacts**” on the “Phone” screen.
- 3 Touch the desired data from the list on the “Contacts” screen.
- 4 Touch “**Options**”.




- 5 Touch “**Set Speed Dial**”.



4

PHONE

- 6 This screen is displayed.

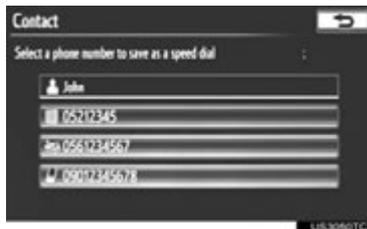

- The following operations are performed in the same manner as when they are performed from the "Setup" screen.

DELETING THE SPEED DIAL

The speed dial can be deleted.

- 1 Touch "Delete".



- 2 Touch the desired data, or to delete all the data touch "Select All", then touch "Delete".



- Multiple data can be selected and deleted at the same time.

- 3 Touch "Yes".

DELETING CALL HISTORY

The call history can be deleted.
For PBAP compatible phones, delete the call history after setting "Automatically Download Call History" to "Off". (See "PBAP compatible models automatic data transfer setting" on page 161.)


- 1 Touch "Delete Call History".



- 2 Touch the desired history to delete.



- 3 Touch the desired data, or to delete all the data touch **“Select All”**, then touch **“Delete”**.

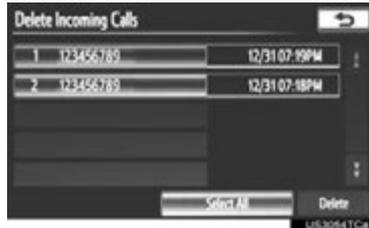

- Multiple data can be selected and deleted at the same time.


- 4 Touch **“Yes”**.

THE CALL HISTORY CAN ALSO BE DELETED

- 1 Press the button or the switch on the steering wheel.
- 2 Touch **“Call History”** on the “Phone” screen.
- 3 Touch **“Delete”**.



- 4 This screen is displayed.

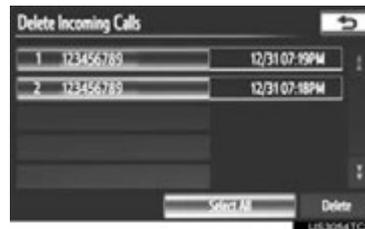

- The following operations are performed in the same manner as when they are performed from the “Setup” screen.
 - Other call history can be operated similarly.
- ▶ Deleting after call history has been displayed

- 1 Press the button or the switch on the steering wheel.
- 2 Touch **“Call History”** on the “Phone” screen.
- 3 Touch the desired history to be deleted.



- 4 Touch **“Delete”**.



- 5 Touch **“Yes”**.

4


PHONE

2. SETUP


MESSAGE SETTINGS

Message settings can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Phone”** on the “Setup” screen.
- 3 Touch **“Messaging Settings”**.

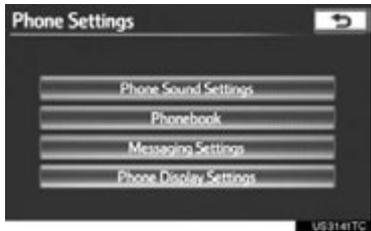


- 4 Perform each setting according to the procedures outlined on the following pages.

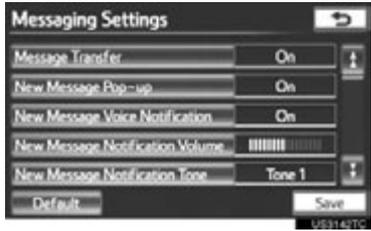



- 5 Touch **“Save”** when each setting is completed.

THE “Messaging Settings” SCREEN CAN ALSO BE DISPLAYED

- 1 Press the button or the switch on the steering wheel.
- 2 Touch **“Messages”** on the “Phone” screen.
- 3 Touch **“Options”**.

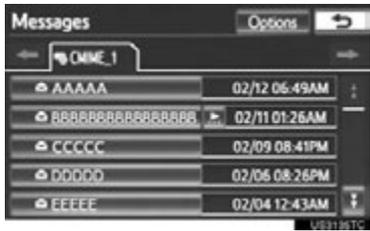

SCREEN FOR “Messaging Settings”

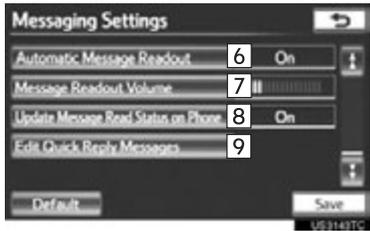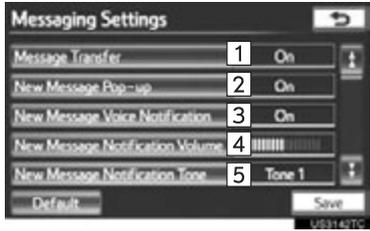

- On this screen, the following functions can be operated:

No.	Function
1	Touch to set message forwarding from cellular phones to “On” or “Off” .
2	Touch to set the new message notification display to “On” or “Off” .
3	Touch to set the new message voice notification to “On” or “Off” .
4	Touch to adjust the new message notification volume. (See “NEW MESSAGE NOTIFICATION VOLUME SETTINGS” on page 173.)
5	Touch to select a new message voice notification tone. (See “NEW MESSAGE NOTIFICATION TONE SETTINGS” on page 174.)
6	Touch to set the automatic message read out function to “On” or “Off” .
7	Touch to adjust the message read out volume. (See “MESSAGE READ OUT VOLUME SETTINGS” on page 174.)
8	Touch to set the cellular phone’s message read and unread status update function to “On” or “Off” .


No.	Function
9	Touch to edit “Edit Quick Reply Messages” . (See “EDIT QUICK REPLY MESSAGES” on page 175.)

- To reset all setup items, touch **“Default”**.

NEW MESSAGE NOTIFICATION VOLUME SETTINGS

The new message notification volume can be adjusted.


- 1 Touch **“New Message Notification Volume”**.

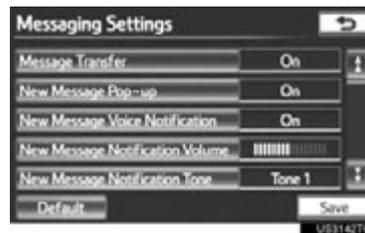

4

PHONE

- 2 Touch **“-”** or **“+”** to adjust the new message notification volume.

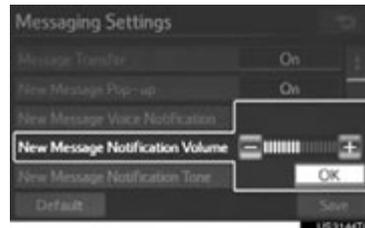

- 3 Touch **“OK”**.

2. SETUP


INFORMATION

- The system will automatically increase the volume when the speed exceeds 50 mph (80 km/h).


NEW MESSAGE NOTIFICATION TONE SETTINGS

A new message voice notification tone can be selected.

- 1 Touch **“New Message Notification Tone”**.

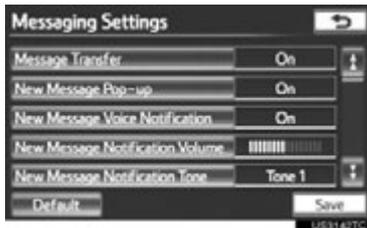

- 2 Touch the desired new message notification tone.

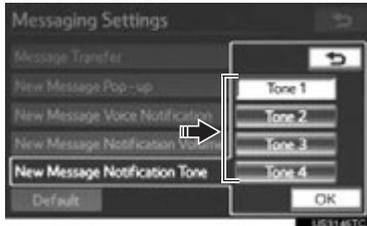

- New message notification tones can be heard by touching the screen buttons.

- 3 Touch **“OK”**.


MESSAGE READ OUT VOLUME SETTINGS

Message read out volume can be adjusted.

- 1 Touch **“Message Readout Volume”**.



- 2 Touch **“-”** or **“+”** to adjust the message read out volume.

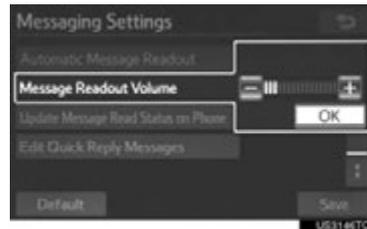

- 3 Touch **“OK”**.


INFORMATION

- The system will automatically increase the volume when the speed exceeds 50 mph (80 km/h).


EDIT QUICK REPLY MESSAGES

Quick reply messages can be edited. 15 messages have already been stored.

- 1 Touch “Edit Quick Reply Messages”.

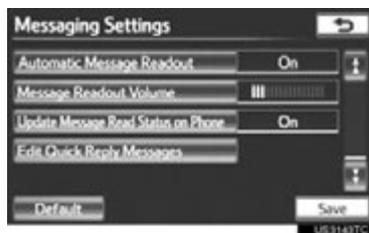

- 2 Touch the screen button corresponding to the desired message.

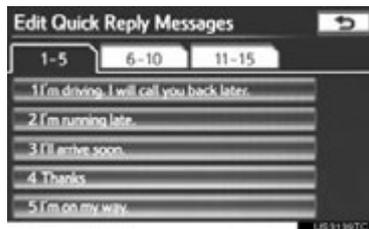


- 3 Use the software keyboard to edit the message.
- 4 Touch “OK”.

INITIALIZING THE SETTINGS

The settings can be initialized.

- 1 Touch “Default”.

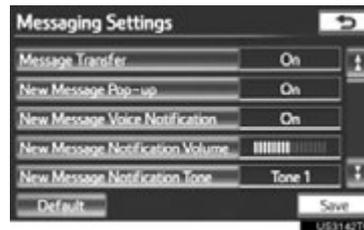

- 2 Touch “Yes”.


4

PHONE


PHONE DISPLAY SETTINGS

The phone display settings can be changed.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Phone”** on the “Setup” screen.
- 3 Touch **“Phone Display Settings”**.

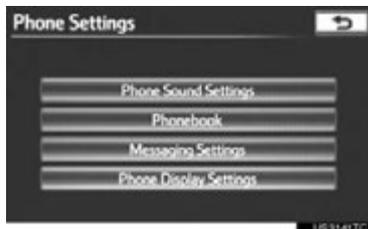


- 4 Perform each setting according to the procedures outlined on the following pages.

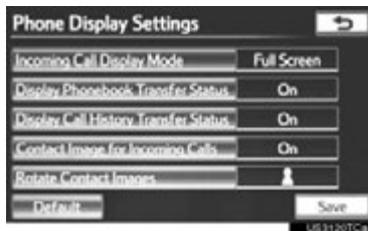

- 5 When each setting is completed, touch **“Save”**.

SCREEN FOR “Phone Display Settings”

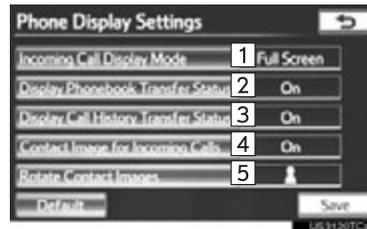

- On this screen, the following functions can be operated:

No.	Function
1	Touch to change the incoming call display. (See “INCOMING CALL DISPLAY” on page 177.)
2	For PBAP compatible models, touch to set the display of the automatic phonebook transfer completion message to “On” or “Off”.
3	For PBAP compatible models, touch to set the display of the automatic call history transfer completion message to “On” or “Off”.
4	For PBAP compatible models, touch to set the display of images during calls to “On” or “Off”.
5	For PBAP compatible models, touch to set the orientation of images displayed during calls. (See “ROTATING CONTACT IMAGES” on page 178.)

- To reset all setup items, touch **“Default”**.

INFORMATION


- Depending on the phone, these functions may not be available even if the phone is PBAP compatible.

INCOMING CALL DISPLAY


The type of incoming call display can be selected.



- 1 Touch **“Incoming Call Display Mode”**.

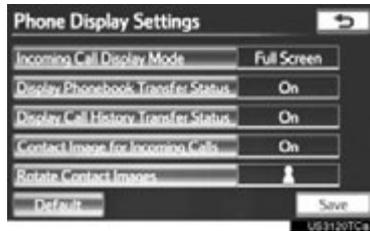

- 2 Touch **“Full Screen”** or **“Drop Down”**.

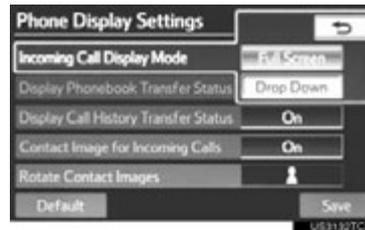

Screen button	Function
“Full Screen”	When a call is received, the hands-free screen is displayed and it can be operated on the screen.
“Drop Down”	The message is displayed on the upper side of the screen and it can only be operated via the steering wheel switches.

4
PHONE


- 3 Touch **“Save”**.

2. SETUP


ROTATING CONTACT IMAGES

For PBAP compatible models, when **“Contact Image for Incoming Calls”** is set to **“On”**, images stored together with phone numbers in the cellular phone’s phonebook will be transferred and displayed during the incoming call. The orientation of the image can be set.

- 1 Touch **“Rotate Contact Images”**.

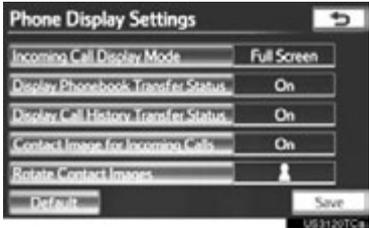

- 2 Select the desired orientation of the image to be displayed.

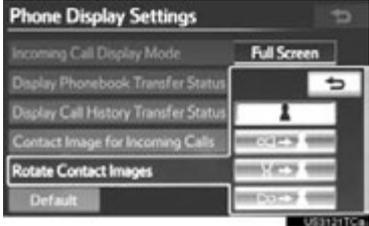


- 3 Touch **“Save”**.

INITIALIZING THE SETTINGS

The settings can be initialized.

- 1 Touch **“Default”**.

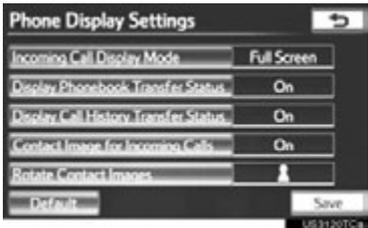


- 2 Touch **“Yes”**.

2. SETUP

2. Bluetooth® SETTINGS

A Bluetooth® device can be set up.

 - 1 Press the **“SETUP”** button.



- 2 Touch **“Bluetooth*”**.




- 3 Perform each setting according to the procedures outlined on the following pages.



REGISTERED DEVICES

A Bluetooth® device can be registered, deleted or set up.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Bluetooth*”** on the “Setup” screen.
- 3 Touch **“Registered Devices”**.

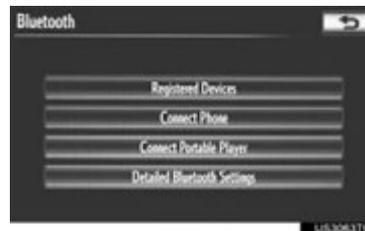

- 4 Perform each setting according to the procedures outlined on the following pages.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4

PHONE

REGISTERING A Bluetooth® DEVICE

Bluetooth® devices compatible with phones (HFP) and portable players (AVP) can be registered simultaneously. Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.

- 1 Touch “Add New” to register a Bluetooth® device to the system.




- If 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. See “When 5 Bluetooth® devices have already been registered” on page 181.

- 2 When this screen is displayed, input the passcode displayed on the screen into the Bluetooth® device.



- For details about entering the passcode into the Bluetooth® device, see the manual that comes with it.
 - A passcode is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® phone being connected, a message confirming registration may be displayed on the Bluetooth® phone’s screen. Respond and operate the Bluetooth® phone according to the confirmation message.
 - To cancel the registration, touch “Cancel”.
- 3 When the connection is completed, this screen is displayed.

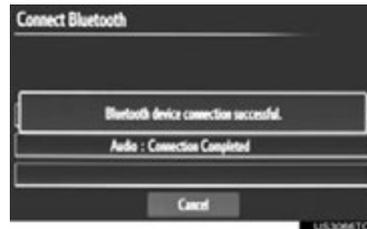

- When using the same device, it is not necessary to register it again.



- When this screen is displayed, follow the guidance on the screen to try again.



- When another Bluetooth® device is currently connected, this screen is displayed.
- To disconnect the Bluetooth® device, touch **“Yes”**.
- ▶ When 5 Bluetooth® devices have already been registered

- 1 When 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. Touch **“Yes”** to delete 1 or more.
- 2 Touch the device to be deleted, then touch **“Remove”**.
- 3 Touch **“Yes”**.

DELETING A Bluetooth® DEVICE

- 1 Touch **“Remove”**.



- 2 Touch the desired device, or to delete all the devices touch **“Select All”**, then touch **“Remove”**.



- Multiple devices can be selected and deleted at the same time.

- 3 Touch **“Yes”**.

INFORMATION

- When deleting a Bluetooth® phone, the phonebook data will be deleted at the same time.

4

PHONE

EDITING THE Bluetooth® DEVICE

The Bluetooth® device's information can be displayed on the screen. The displayed information can also be edited.

“Device Name”: The name of the Bluetooth® device which is displayed on the screen. It can be changed to a desired name.

- Even if the device name is changed, the name registered in your Bluetooth® device does not change.

“Device Address”: The device address is unique to each device. It cannot be changed.

- If 2 Bluetooth® devices have been registered with the same device name, the devices can be distinguished referring to the device's address.

“My Phone Number”: The phone number of the Bluetooth® phone is displayed on the screen. Depending on the type of phone, the phone number may not be displayed.

“Profiles”: The compatibility profile of the Bluetooth® device is displayed on the screen.

“Connect Portable Player from”: There are 2 portable player connection settings available; **“Vehicle”** and **“Portable Player”**.

CHANGING A DEVICE NAME

- 1 Touch **“Details”**.



- 2 Touch the device to be edited.



- 3 Touch **“Device Name”**.



- 4 Use the software keyboard to input the device name and touch **“OK”**.



- 5 Confirm the device name and touch **“OK”**.

SETTING PORTABLE PLAYER CONNECTION METHOD

- 1 Touch “Connect Portable Player from”.



- 2 Touch the desired connection method.



“**Vehicle**”: Touch to connect the audio system to the portable player.

“**Portable Player**”: Touch to connect the portable player to the audio system.

- Depending on the portable player, the “**Vehicle**” or “**Portable Player**” connection method may be best. As such, refer to the manual that comes with the portable player.

- 3 Touch “OK”.


SELECTING A Bluetooth® PHONE

If more than 1 Bluetooth® phone has been registered, it is necessary to select which phone to connect to.

It is possible to select from up to 5 registered Bluetooth® devices (Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.)

Although up to 5 Bluetooth® phones can be registered in the system, only 1 Bluetooth® phone can function at a time.

- 1 Press the “**SETUP**” button.
- 2 Touch “**Bluetooth***” on the “Setup” screen.
- 3 Touch “**Connect Phone**”.

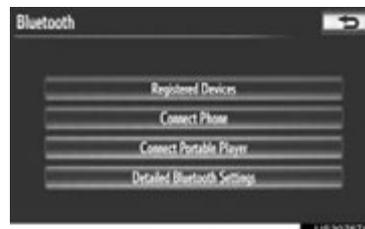

- 4 Touch the phone to be connected.



- The indicator of the selected Bluetooth® phone will turn on.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4

PHONE

2. SETUP

- If the desired Bluetooth® phone is not on the list, touch “**Add New**” to register the phone. (See page 180.)
- The currently connected Bluetooth® phone’s screen button will have a Bluetooth® mark displayed on it. If the currently connected Bluetooth® phone’s screen button is touched, the Bluetooth® phone can be disconnected. Touch “**Yes**” to disconnect.

5 This screen is displayed.



6 When the result message is displayed, the Bluetooth® phone can be used.



- ▶ When a phone is connected while Bluetooth® audio is playing
- This screen is displayed, and the Bluetooth® audio will stop temporarily.



- ▶ When another Bluetooth® device is connected
- When another Bluetooth® device is currently connected, this screen is displayed. To disconnect the Bluetooth® device, touch “**Yes**”.




SELECTING PORTABLE PLAYER

If more than 1 portable player has been registered, it is necessary to select which portable player to connect to.

It is possible to select from up to 5 registered Bluetooth® devices (Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.)

Although up to 5 portable players can be registered in the system, only 1 portable player can function at a time.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Bluetooth*”** on the “Setup” screen.
- 3 Touch **“Connect Portable Player”**.

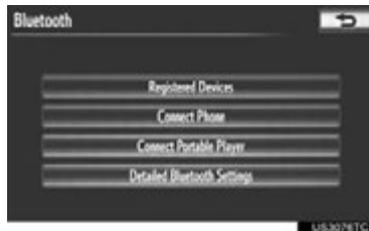

- 4 Touch the desired portable player to be connected.



- The indicator of the selected portable player will turn on.

- If the desired portable player is not on the list, touch **“Add New”** to register the portable player. (See page 180.)
- The currently connected portable player’s screen button will have a Bluetooth® mark displayed on it. If the currently connected portable player’s screen button is touched, the portable player can be disconnected. Touch **“Yes”** to disconnect.

- 5 This screen is displayed.



- 6 When the result message is displayed, the portable player can be used.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4 PHONE

2. SETUP


- ▶ When another Bluetooth® device is connected
- When another Bluetooth® device is currently connected, this screen is displayed. To disconnect it, touch “Yes”.



DETAILED Bluetooth® SETTINGS

The Bluetooth® settings can be confirmed and changed.

- 1 Press the “SETUP” button.
- 2 Touch “Bluetooth*” on the “Setup” screen.
- 3 Touch “Detailed Bluetooth* Settings”.

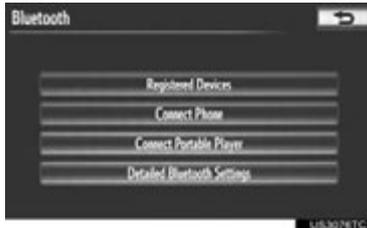

- 4 This screen is displayed.



- The information displays the following items:

Screen button/ Screen item	Information
“Device Name”	This name will be displayed on the device when it is connected. It can be changed to a desired name.
“Passcode”	The password that was set when the Bluetooth® device was registered can be changed.
Device Address	The device address is unique to each device. It cannot be changed.
Profiles	The compatibility profile of the Bluetooth® device is displayed on the screen. (See pages 134 and 245.)

- If it is desirable to change the settings, refer to the following pages.
- When the settings have been changed, touch “Save”.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

CHANGING THE Bluetooth® SETTINGS

The Bluetooth® settings can be changed according to the following procedures.

CHANGING “Bluetooth* Power”

The “Bluetooth* Power” display shows the following state.

When “Bluetooth* Power” is “On”:

The Bluetooth® device is automatically connected when the “POWER” switch is in ACCESSORY or ON mode.

When “Bluetooth* Power” is “Off”:


The Bluetooth® device is disconnected, and the system will not connect to it next time.

- The “Bluetooth* Power” auto connection state can be set on or off.
 - “On”: The auto connection is turned on.
 - “Off”: The auto connection is turned off.
- The auto connection state cannot be changed from “On” to “Off” while driving, but it can be changed from “Off” to “On”.

1 Touch “Bluetooth* Power”.



2 Touch “On” or “Off”.

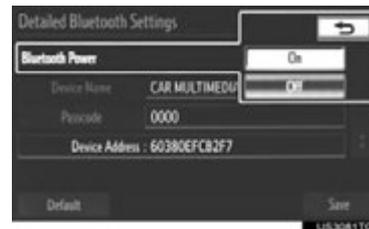

3 Touch “Save”.

- In the event the state of “Bluetooth* Power” is changed from “Off” to “On”, Bluetooth® connection will begin.

EDITING THE DEVICE NAME

1 Touch “Device Name”.



2 Use the software keyboard to input the device name and touch “OK”.



3 Touch “Save”.

- *: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. SETUP

■ EDITING THE PASSCODE

- 1 Touch **“Passcode”**.



- 2 Input a passcode and touch **“OK”**.




- 3 Touch **“Save”**.

■ Bluetooth® DEVICE CONNECTION STATUS DISPLAY SETTINGS

When **“Bluetooth* Power”** is **“On”** and the **“POWER”** switch is in **ACCESSORY** or **ON** mode, the Bluetooth® phone and portable player's connection status can be displayed. (See **“CHANGING “Bluetooth* Power”**” on page 187.)

- 1 Touch **“Display Phone Status”** or **“Display Portable Player Status”**.

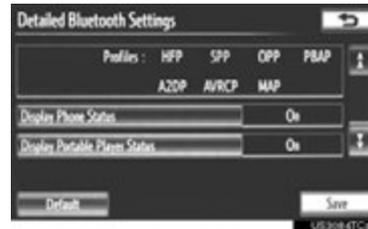

- 2 Touch **“On”**.



- 3 Touch **“Save”**.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INITIALIZING THE Bluetooth® SETTINGS

The settings can be initialized.

1 Touch "Default".



2 Touch "Yes".

- If the state of "Bluetooth* Power" is changed from "Off" into "On", Bluetooth® connection will begin.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

5

AUDIO/VIDEO SYSTEM

1 AUDIO/VIDEO SYSTEM OPERATION

- 1. **QUICK REFERENCE** 192
- 2. **SOME BASICS** 194
 - VOICE COMMAND SYSTEM 195
 - AUDIO SPLIT SCREEN DISPLAY 195
 - TURNING THE SYSTEM ON AND OFF 195
 - SWITCHING BETWEEN FUNCTIONS 196
 - DSP CONTROL 197
 - TONE AND BALANCE 197
 - SELECTING SCREEN SIZE 198
 - DVD PLAYER 199
 - AUX PORT 199
 - USB PORT 199
- 3. **RADIO OPERATION** 200
 - LISTENING TO THE RADIO 200
 - PRESETTING A STATION 200
 - SELECTING A STATION 201
 - RADIO BROADCAST DATA SYSTEM 201
 - TRAFFIC ANNOUNCEMENT 202
- 4. **HD Radio™ TECHNOLOGY INFORMATION** 203
 - USING HD Radio™ TECHNOLOGY... 203
 - AVAILABLE HD Radio™ TECHNOLOGY 204
 - TROUBLESHOOTING GUIDE 206

5


AUDIO/VIDEO SYSTEM

5. RADIO OPERATION (XM Satellite Radio BROADCAST)	208	8. USB MEMORY OPERATION	236	1
HOW TO SUBSCRIBE TO AN XM Satellite Radio.....	208	CONNECTING A USB MEMORY	236	2
DISPLAYING THE RADIO ID	209	PLAYING A USB MEMORY	237	3
LISTENING TO SATELLITE RADIO ...	209	9. iPod OPERATION	241	4
CHANNEL CATEGORY	210	CONNECTING iPod.....	241	5
PRESETTING A CHANNEL	210	PLAYING iPod	242	6
SELECTING A CHANNEL.....	210	10. Bluetooth® AUDIO OPERATION	245	7
DISPLAYING THE TITLE AND NAME	211	CONNECTING A Bluetooth® AUDIO PLAYER	248	8
IF THE SATELLITE RADIO TUNER MALFUNCTIONS.....	212	PLAYING Bluetooth® AUDIO.....	249	9
6. RADIO OPERATION (INTERNET RADIO BROADCAST).....	214	11. AUDIO/VIDEO REMOTE CONTROLS (STEERING SWITCHES)	255	
LISTENING TO INTERNET RADIO	214	12. AUDIO/VIDEO SYSTEM OPERATING HINTS.....	257	
7. DVD PLAYER OPERATION	215	RADIO RECEPTION.....	257	
INSERTING A DISC	215	iPod.....	258	
EJECTING A DISC	215	USB MEMORY	259	
PLAYING A DISC	216	CARING FOR YOUR DVD PLAYER AND DISC	259	
PLAYING AN AUDIO DISC	217	MP3/WMA FILES	261	
PLAYING AN MP3/WMA DISC	219	CD-R AND CD-RW DISCS	263	
OPERATING A DVD DISC.....	222	TERMS	263	
PLAYING A DVD DISC	223			
DVD OPTIONS.....	224			
IF THE PLAYER MALFUNCTIONS.....	233			
DVD PLAYER AND DVD VIDEO DISC INFORMATION	233			
		2 SETUP		
		1. AUDIO SETTINGS	267	
		HD Radio™ SYSTEM SETTINGS	267	
		iPod SETTINGS.....	268	

1. AUDIO/VIDEO SYSTEM OPERATION

1. QUICK REFERENCE

Operations such as selecting a preset station and adjusting the sound balance are carried out on the screen. Press the **“AUDIO”** button to display the audio screen.

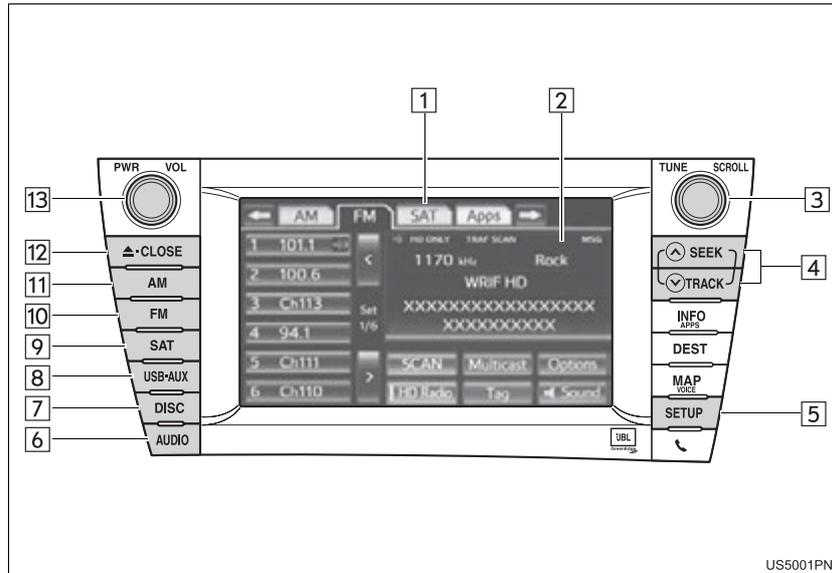

No.	Name	Function	Page
1	Function menu tab	Touch the screen tabs to select the desired radio or media mode.	196
2	Function menu display screen	Touch the screen buttons to control the selected radio or media mode.	196
3	“TUNE SCROLL” knob	Turn to step up and step down the station band, change to the next or previous satellite radio channel, or skip to the next or previous track, DVD chapter, etc. Also, the knob can be used to enter selections on the track/file and album/folder screens by pressing it.	200, 209, 217, 219, 223, 237, 242, 249

1. AUDIO/VIDEO SYSTEM OPERATION

No.	Name	Function	Page
4	"SEEK/TRACK" button	Press the "▲" or "▼" button to seek up or down for a station or channel, or to access a desired track, file or chapter.	201, 210, 217, 219, 223, 237, 242, 249
5	"SETUP" button	Press to display the "Setup" screen.	267
6	"AUDIO" button	Press to display the audio control screen.	195
7	"DISC" button	Press to turn the DVD player on.	196, 216, 223
8	"USB-AUX" button	Press to turn the Bluetooth® audio, AUX, USB memory or iPod on.	196, 237, 242, 249
9	"SAT" button	Press to choose a SAT station.	196, 200, 209
10	"FM" button	Press to choose an FM station.	196, 200
11	"AM" button	Press to choose an AM station.	196, 200
12	"▲-CLOSE" button	Press to insert or eject a disc.	199, 215
13	"PWR VOL" knob	Press to turn the audio system on and off, and turn to adjust the volume.	195

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION

2. SOME BASICS

This section describes some of the basic features of the audio/video system. Some information may not pertain to your system.

Your audio/video system works when the "POWER" switch is turned to ACCESSORY or ON mode.

CAUTION

- For vehicles sold in U.S.A. and Canada: Part 15 of the FCC Rules
FCC Warning: Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Radio frequency exposure. This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20 cm) between the antenna and the body of any person at all time during use.

CAUTION


- Laser products
 - Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.
 - This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

NOTICE

- To prevent the 12-volt battery from being discharged, do not leave the audio/video system on longer than necessary when the hybrid system is not operating.

VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.

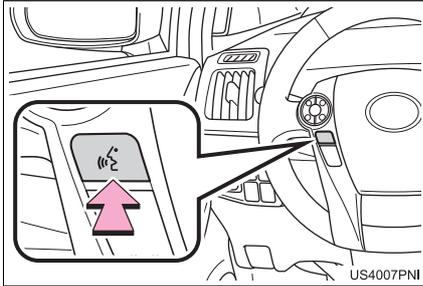


- For the operation of the voice command system and its list of commands, see pages 270 and 279.

AUDIO SPLIT SCREEN DISPLAY

The audio split screen can be displayed while the map screen is displayed. For details, see page 39.



TURNING THE SYSTEM ON AND OFF

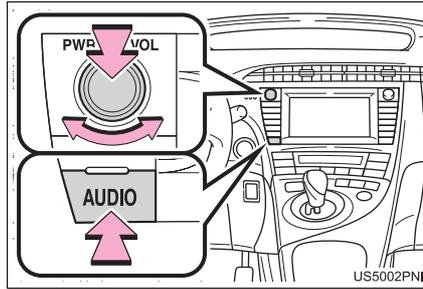

“**AUDIO**” button: Press to display screen buttons for the audio/video system (audio control mode).

“**PWR VOL**” knob: Press to turn the audio system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

- A function that enables automatic return to the previous screen from the audio screen can be selected. See page 43 for details.


5

AUDIO/VIDEO SYSTEM

SWITCHING BETWEEN FUNCTIONS


► Using the audio control buttons

- 1 Press the **“AM”**, **“FM”**, **“SAT”**, **“USB-AUX”** or **“DISC”** button.

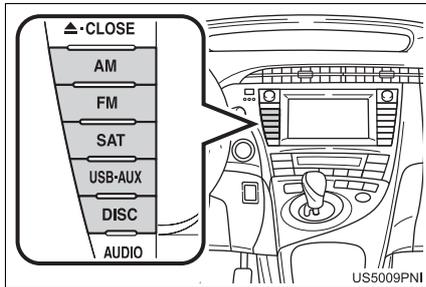

► Using the AUDIO button

- 1 Every time the **“AUDIO”** button is pressed, the audio control mode changes.

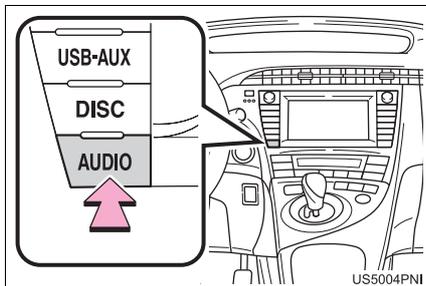

- The audio control mode changes in the following order:
 - **“AM”**, **“FM”**, **“SAT”**, **“Apps”**, **“DISC”**, **“USB”**, **“iPod”**, **“BT Audio”** and **“AUX”**

► Using the audio function menu tabs

- 1 Press the **“AUDIO”** button.
- 2 Touch the desired tab.



- Up to 4 tabs can be displayed on the screen. Touch or , located either side of the screen tabs, to display tabs from the previous or next page.
- The desired audio mode can be found by touching or and then selecting that audio mode tab.

INFORMATION


- If a disc is not inserted, the DVD player cannot be turned on.
- The DVD player can be turned off by ejecting a disc.
- When radio or media mode is selected, the respective screen buttons are displayed on the screen.
- Dimmed screen buttons cannot be operated.
- If the system does not respond to a touch of a screen button, move your finger away from the screen and then touch it again.
- Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the screen.

DSP CONTROL

- 1 Press the **"AUDIO"** button.
- 2 Touch **Sound**.



- 3 Touch the **"DSP"** tab to display this screen.

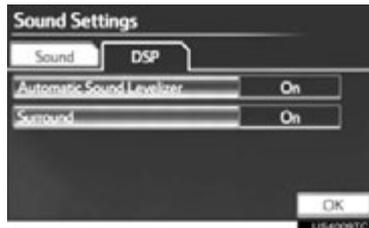

- 4 Touch the desired items to be set.
- 5 Touch **"OK"**.

AUTOMATIC SOUND LEVELIZER (ASL)

The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.

- 1 Touch **"Automatic Sound Levelizer"**.
- 2 Touch **"On"** or **"Off"**.

SURROUND FUNCTION

This function can create a feeling of presence.

- 1 Touch **"Surround"**.
- 2 Touch **"On"** or **"Off"**.

STONE AND BALANCE

TONE


How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

BALANCE

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

- 1 Touch the **“Sound”** tab to display this screen.

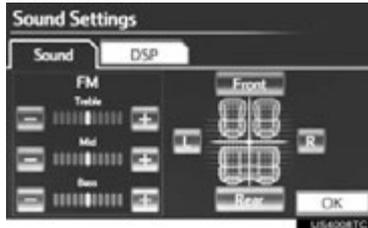

- 2 Touch the desired screen button.

Screen button	Function
“Treble” “+” or “-”	Touch to adjust high-pitched tones.
“Mid” “+” or “-”	Touch to adjust mid-pitched tones.
“Bass” “+” or “-”	Touch to adjust low-pitched tones.
“Front” or “Rear”	Touch to adjust the sound balance between the front and rear speakers.
“L” or “R”	Touch to adjust the sound balance between the left and right speakers.

- 3 Touch **“OK”**.

INFORMATION

- The tone of each mode (such as AM, FM and DVD player) can be adjusted.

SELECTING SCREEN SIZE

Before selecting screen size, it is necessary to insert a DVD disc and select DISC mode.


- 1 Press the **“AUDIO”** button.
- 2 Touch the **“DISC”** tab.
- 3 Touch **“Options”**.



- 4 Touch **“Wide”**.



- 5 Touch the desired screen button.

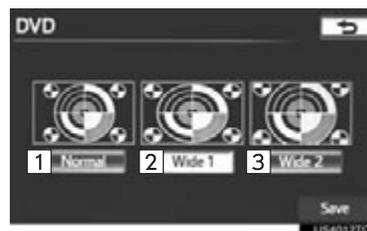


No.	Function
1	Touch to display a 3 : 4 screen, with either side in black.
2	Touch to widen the 3 : 4 screen horizontally to fill the screen.
3	Touch to widen the 3 : 4 screen vertically and horizontally, by the same ratio, to fill the screen.

- When  is touched, the previous screen is displayed.

6 Touch “Save”.

DVD PLAYER

- 1 When inserting a disc, press the “▲·CLOSE” button and gently insert the disc with the label facing up.

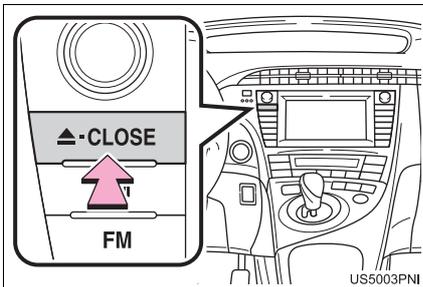

NOTICE

- Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

INFORMATION

- The player is intended for use with 4.7 in. (12 cm) discs only.

AUX PORT

The sound of portable audio players connected to the AUX port can be enjoyed. For details, refer to “Owner’s Manual”.

- 1 Press the “USB·AUX” button repeatedly to change to AUX mode and press the “AUDIO” button to display the audio control screen.

- About the other operation methods, see “SWITCHING BETWEEN FUNCTIONS” on page 196.

INFORMATION

- When the portable audio player is not connected to the AUX port, the tab will be dimmed.

USB PORT

A USB memory/iPod can be connected to the USB port. For details, see “CONNECTING A USB MEMORY” on page 236 and “CONNECTING iPod” on page 241.

- 1 Press the “USB·AUX” button repeatedly to change to USB memory/iPod mode and press the “AUDIO” button to display the audio control screen.

- About the other operation methods, see “SWITCHING BETWEEN FUNCTIONS” on page 196.

INFORMATION

- When a USB memory/iPod is not connected with the USB port, the tab will be dimmed.


1. AUDIO/VIDEO SYSTEM OPERATION

3. RADIO OPERATION

LISTENING TO THE RADIO

SELECTING A RADIO STATION


- 1 Press the **“AM”**, **“FM”** or **“SAT”** buttons and press the **“AUDIO”** button to display the audio control screen.

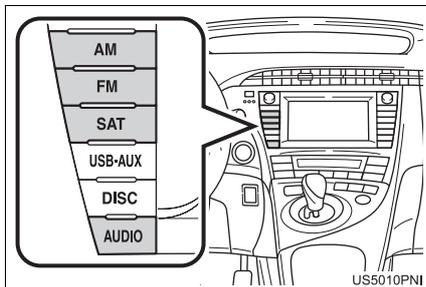

- About the other operation methods, see **“SWITCHING BETWEEN FUNCTIONS”** on page 196.

STEP UP AND DOWN THE STATION BAND

 - 1 Turn the knob clockwise to step up the station band or counterclockwise to step down.



INFORMATION

- The radio automatically changes to stereo reception when a stereo broadcast is received.

PRESETTING A STATION

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

- 1 Tune in the desired station.
- 2 Touch one of the left side screen buttons (1-6) and hold it until a beep is heard. This sets the frequency to the screen button. The station's frequency will be displayed in the screen button.



- To change the preset station to a different one, follow the same procedure.

SELECTING A STATION

Tune in the desired station using one of the following methods.

Preset tuning: Touch one of the mix preset channels on the left side of the screen to select the desired station. The screen button is highlighted and the station frequency appears on the screen.

Seek tuning: Press the “^” or “v” button of “SEEK/TRACK”. The radio will begin seeking up or down for a station of the nearest frequency and will stop when a station is found. Each time the button is pressed, the stations will be searched automatically one after another.

To scan all the frequencies: Touch “SCAN”. “SCAN” will appear on the screen. The radio will find the next station and stay there for 10 seconds if “All” or “HD Only” is selected, or 5 seconds if “Analog” is selected, and then scan again. To stay tuned to a station and stop the scanning, touch “SCAN” again. (To set HD Radio™ system, see page 267.)

RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the “FM info” indicator is on.

SELECTING A DESIRED TYPE

- 1 Touch “Options”.



5

AUDIO/VIDEO SYSTEM

- 2 Touch “**TYPE >**” or “**< TYPE**” to move forward and backward through the program list.



- Once a program type has been set, “TYPE SEEK” will appear on the screen.
- The program list is in the following order:
 - Classical
 - Country
 - EasyLis (Easy Listening)
 - Inform (Information)
 - Jazz
 - News
 - Oldies
 - Other
 - Pop Music
 - Religion
 - Rock
 - R&B (Rhythm and Blues)
 - Sports
 - Talk
 - Traffic (Not available when “HD Radio Settings” are set to analog.)
 - Alert (Emergency Alert)

- 3 Touch “**TYPE SEEK**” and the system will start to seek for stations in the relevant program type.

INFORMATION

- If no relevant program can be found, “no type” will appear on the screen.

TRAFFIC ANNOUNCEMENT

A station that regularly broadcasts traffic information is automatically located.



“**Traffic**”: Touch to seek a traffic program station. “TRAF SEEK” will appear on the screen.

INFORMATION

- If no traffic program station is found, “No Traffic” will appear on the screen.
- If a traffic program station is found, the name of the traffic program station will be displayed for a while.


1. AUDIO/VIDEO SYSTEM OPERATION

4. HD Radio™ TECHNOLOGY INFORMATION

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.

USING HD Radio™ TECHNOLOGY

- 1 Press the **“AM”** or **“FM”** buttons and press the **“AUDIO”** button to display the audio control screen.

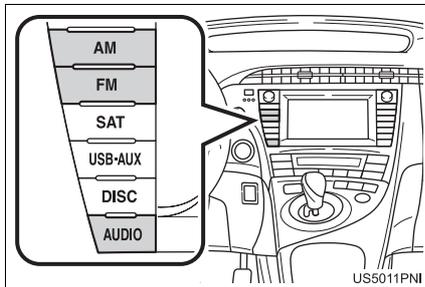

- About the other operation methods, see **“SWITCHING BETWEEN FUNCTIONS”** on page 196.



- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.
 - An orange **“HD”** logo indicator will be displayed on the screen when in digital. The **“HD”** logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
 - The song title, artist name and music genre will appear on the screen when available by the radio station.
- 2 This screen will be displayed if **“Options”** is touched.



5

AUDIO/VIDEO SYSTEM

- When **“Text”** is touched, information such as the artist name, song title, album title and music genre of the track being listened to are displayed on the text screen. To display messages from the station, touch **“Additional Information”**.
- When **“TYPE >”** or **“< TYPE”** is touched, a program type will be searched. Once a program type has been set, **“TYPE SEEK”** will appear on the screen. (See **“SELECTING A DESIRED TYPE”** on page 201.)

AVAILABLE HD Radio™ TECHNOLOGY

MULTICAST

On the FM radio frequency most digital stations have “multiple” or supplemental programs on one FM station.

- 1 Touch **“Multicast”**.




- Each time **“Multicast”** is touched, the supplemental program changes.
- If **“Multicast”** is touched when tuned to the last of the supplemental programs, the main program will be returned to.

TAG


- 1 Touch **“Tag”** to bookmark the music information.



- 2 Open the console box.

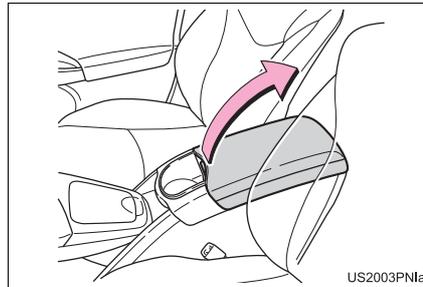

- 3 Open the cover and connect iPod using an iPod cable.

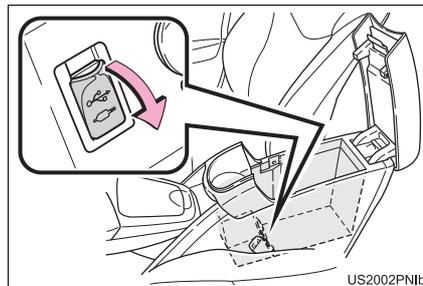

- Turn on the power of the iPod if it is not turned on.
- Once an iPod is connected, the music tag moves from the radio into the iPod.
- When the iPod is connected to iTunes, the “tagged” information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album which had been listened to on their radio.

4 Close the console box.

INFORMATION

- If tagging the music information fails, “Saving the HD Radio tag failed.” will be displayed on the screen. If this occurs, tag the information again.
- HD Radio™ stations can be preset.

TROUBLESHOOTING GUIDE

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Touching " Analog " can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibequality.com/automotive/report_radio_station_experiences .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibequality.com/automotive/report_radio_station_experiences .



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

1. AUDIO/VIDEO SYSTEM OPERATION

5. RADIO OPERATION (XM Satellite Radio BROADCAST)

HOW TO SUBSCRIBE TO AN XM Satellite Radio

To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary.

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

HOW TO SUBSCRIBE

It is necessary to enter into a separate service agreement with XM Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and digital satellite tuner.

- For complete information on subscription rates and terms, or to subscribe to XM Satellite Radio:
 - ▶ U.S.A.
Refer to www.siriusxm.com or call 1-800-967-2346.
 - ▶ Canada
Refer to www.xmradio.ca or call 1-877-209-0079.

INFORMATION

- XM Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM Satellite Radio customer service agreement.
- Customers should have their radio ID ready; the radio ID can be found by tuning to "CH 000" on the radio. For details, see "DISPLAYING THE RADIO ID" below.
- All fees and programming are the responsibility of XM Satellite Radio and are subject to change.

SATELLITE TUNER TECHNOLOGY NOTICE

Toyota's satellite radio tuners are awarded Type Approval Certificates from XM Satellite Radio Inc. as proof of compatibility with the services offered by XM Satellite Radio.


DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

- If “CH 000” is selected using the “**TUNE SCROLL**” knob, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

LISTENING TO SATELLITE RADIO

- 1 Press the “**SAT**” button and press the “**AUDIO**” button to display the audio control screen.

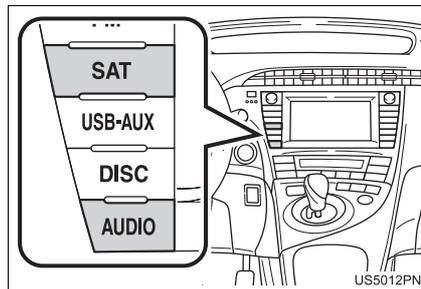

- About the other operation methods, see “**SWITCHING BETWEEN FUNCTIONS**” on page 196.
- 2 Turn the “**TUNE SCROLL**” knob to select the next or previous channel.
- Turning the knob quickly allows rapid scrolling through the channel list.

CHANNEL CATEGORY

- 1 Touch either “**TYPE >**” or “**< TYPE**” to go to the next or previous category.



PRESETTING A CHANNEL

- 1 Tune in the desired channel.
- 2 Touch one of the left side screen buttons (1-6) and hold it until a beep is heard. This sets the frequency to the screen button. The channel number will be displayed in the screen button.



- To change the preset channel to a different one, follow the same procedure.

SELECTING A CHANNEL

Tune in the desired channel using one of the following methods.

Preset tuning: Touch the channel selector screen button (1-6) to listen to the desired channel. The selected screen button (1-6) is highlighted and its related information appears on the right side of the screen.

To select a channel within the current category: Press the “^” or “v” button of “**SEEK/TRACK**”. The radio will change up or down to a channel within the current channel category.



To scan the currently selected channel category: Touch “**SCAN**”. “**SCAN**” appears on the screen. The radio will find the next channel in the same channel category, stay there for a few seconds, and then scan again. To select a channel, touch “**SCAN**” again.

DISPLAYING THE TITLE AND NAME

- 1 Touch **“Text”** to display the artist name and song title currently being listening to.



INFORMATION

- Up to 64 alphanumeric characters can be displayed. (Some information will not be fully displayed.)

1. AUDIO/VIDEO SYSTEM OPERATION

IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
Ck Antenna	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Toyota certified dealer for assistance.
Ch Unauth	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "CH 000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
No Signal	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
Loading	The unit is acquiring audio or program information. Wait until the unit has received the information.
Ch Off Air	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
Ch Unavail	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel.

INFORMATION

- Contact the XM Listener Care Center at 1-800-967-2346 (U.S.A.) or 1-877-209-0079 (Canada).

**NOTICE**

- This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Information to user
 - Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

INFORMATION

- This XM tuner supports "Audio Services" (Music and Talk) of only XM Satellite Radio and "Text Information*" linked to the respective "Audio Services".

*: Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.

 
1. AUDIO/VIDEO SYSTEM OPERATION

6. RADIO OPERATION (INTERNET RADIO BROADCAST)

LISTENING TO INTERNET RADIO

One of Entune's features is the ability to listen to internet radio. In order to use this service, an Entune compatible phone and the navigation system needs to be set. For details, refer to the "ENTUNE SERVICE" section. (See page 306.)

- 1 Press the "AUDIO" button to display the audio control screen.



- 2 Touch the "Apps" tab.



- About the other operation methods, see "SWITCHING BETWEEN FUNCTIONS" on page 196.

- If a compatible phone is already registered, it will be connected automatically.
 - If a compatible phone has not been registered or the Bluetooth® connection cannot be completed correctly, touch "Connect" to register and/or connect your phone. (See page 179.)
 - When connection is complete, the application screen can be displayed.
- 3 Touch "View Application Screen".
- The internet radio application screen is displayed.
 - Perform operations according to the displayed application screen.
 - By pressing the "AUDIO" button, the "Audio" screen can be returned to.

INFORMATION

- Other applications can be activated while listening to internet radio.
- An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using Entune by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.
- Services requiring a separate contract can also be used.*
- Some parts of "Apps" can be adjusted using the switches on the steering wheel.
- If internet radio has never been listened to by activating "Apps" from the "Information" screen, the "Apps" tab will be dimmed.

*: For details, refer to <http://www.toyota.com/entune/> or call 1-800-331-4331.

1. AUDIO/VIDEO SYSTEM OPERATION

7. DVD PLAYER OPERATION

 
For safety reasons, the DVD video discs can only be viewed when the following conditions are met:

- (a) The vehicle is completely stopped.
- (b) The "POWER" switch is in ACCESSORY or ON mode.
- (c) The parking brake is applied.

While driving in DVD video mode, only the DVD's audio can be heard.


INSERTING A DISC

- 1 Press the "**▲-CLOSE**" button to slide the display down.



- The display will slide down, opening the DVD slot.

- 2 Insert a disc into the disc slot.

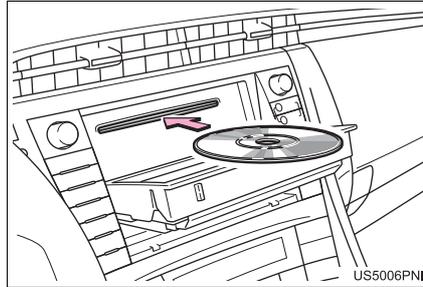


- After insertion, the disc is automatically loaded.

- 3 Press the "**▲-CLOSE**" button.

- The display will slide up, closing the DVD slot.
- Touching "**▲Disc**" ejects the currently inserted disc.

EJECTING A DISC

- 1 Press the "**▲-CLOSE**" button to slide the display down.

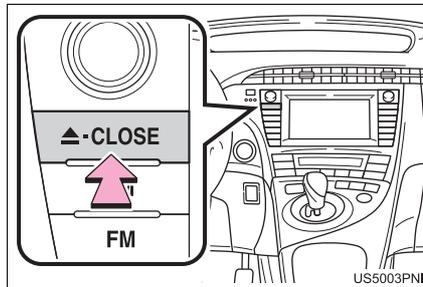

- When the "**▲-CLOSE**" button is pressed, the disc will be automatically ejected.

- 2 Press the "**▲-CLOSE**" button to close the display.

1. AUDIO/VIDEO SYSTEM OPERATION

CAUTION

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.

NOTICE


- Do not obstruct the display while it is moving. It could damage your audio system.

INFORMATION

- Under extremely cold conditions, the screen may react slowly or operation sound may become louder.
- If a disc is inserted with the label facing down, it cannot be played.

PLAYING A DISC

1 Press the **“DISC”** button and press the **“AUDIO”** button to display the audio control screen.

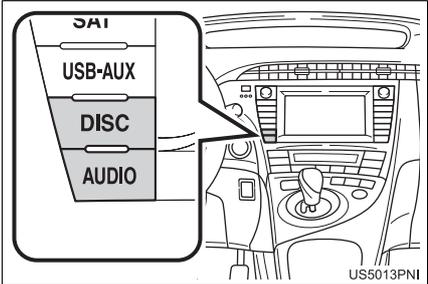

- About the other operation methods, see **“SWITCHING BETWEEN FUNCTIONS”** on page 196.

PLAYING AN AUDIO DISC

- 1 Touch the “DISC” tab.



- When CD-TEXT information exists, the name and artist of the CD currently being listened to will be displayed.

: Touch to pause the track.

: Touch to resume playing the track.

SELECTING A DESIRED TRACK

ON THE AUDIO TOP SCREEN



“**SEEK/TRACK**” button: Press the “^” or “v” button of “**SEEK/TRACK**” repeatedly until the desired track number appears on the screen. The player will start playing the selected track from the beginning.

“**TUNE SCROLL**” knob: Turn the knob clockwise or counterclockwise to skip to the desired track.

ON THE TRACK LIST SCREEN

- 1 Touch the track name screen button to display the CD's track list.



- 2 Touch the desired track number. The player will start playing the selected track from the beginning.

, : Touch to move the list up or down by 5 track groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.

“**SEEK/TRACK**” button: Press the “^” or “v” button of “**SEEK/TRACK**” to scroll through the track list one by one.

“**TUNE SCROLL**” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track list. To select the desired track, press the knob.


, : If appears to the right of an item name, the complete name is too long for the screen. Touch to scroll to the end of the name. Touch to move to the beginning of the name.

5

AUDIO/VIDEO SYSTEM

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “SEEK/TRACK” to fast forward or rewind the disc.

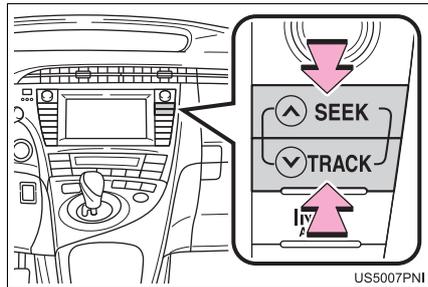

- When the button is released, the player resumes playing from that position.

REPEATING

The track currently being listened to can be repeated.

REPEATING A TRACK

- 1 Touch “RPT” while the track is playing.




- “RPT” appears on the screen. When the track is finished, the player will automatically play it again. To cancel this function, touch “RPT” again.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

PLAYING THE TRACKS ON THE DISC IN RANDOM ORDER

- 1 Touch “RAND” while the disc is playing.

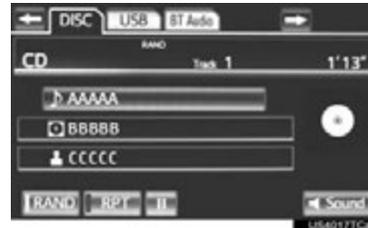

- Once “RAND” appears on the screen, the system selects a track randomly from the disc currently being listened to. To cancel this function, touch “RAND” again.

INFORMATION

- If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.

PLAYING AN MP3/WMA DISC

- 1 Touch the “DISC” tab.



- The file name, folder name and artist name currently being listened to and the disc icon are displayed on the screen.

⏸ : Touch to pause the file.

▶ : Touch to resume playing the file.

SELECTING A DESIRED FOLDER


ON THE AUDIO TOP SCREEN



⏪, ⏩ : Touch to skip to the next or previous folder.

ON THE FOLDER LIST SCREEN

- 1 Touch the folder name screen button to display the following folder list screen.

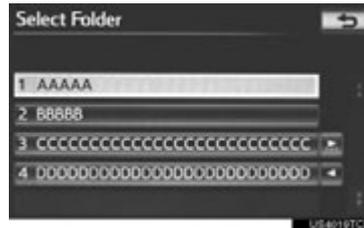

- 2 Touch the desired folder number to display the folder's file list. From the file list, select the desired file number.

⏪, ⏩ : Touch to move the list up or down by 5 folder groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.

“TUNE SCROLLER” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the folder list. To select the desired folder, press the knob.


⏪, ⏩ : If ▶ appears to the right of an item name, the complete name is too long for the screen. Touch ▶ to scroll to the end of the name. Touch ⏪ to move to the beginning of the name.

5

AUDIO/VIDEO SYSTEM

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “SEEK/TRACK” to fast forward or rewind the file.

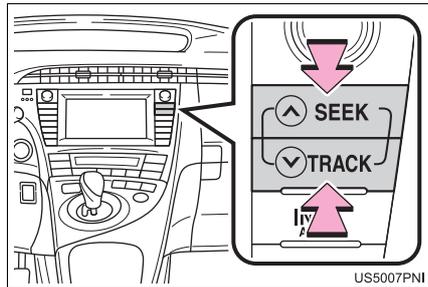

- When the button is released, the player resumes playing from that position.

SELECTING A DESIRED FILE

ON THE AUDIO TOP SCREEN




“SEEK/TRACK” button: Press the “^” or “v” button of “SEEK/TRACK” repeatedly until the desired file number appears on the screen. The player will start playing the selected file from the beginning.

“TUNE SCROLL” knob: Turn the knob clockwise or counterclockwise to skip to the desired file.

ON THE FILE LIST SCREEN

- 1 Touch the file name screen button to display the following file list screen.

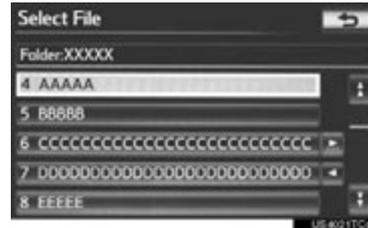

- 2 Touch the desired file number. The player will start playing the selected file from the beginning.

⏪, ⏩: Touch to move the list up or down by 5 file groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.


“SEEK/TRACK” button: Press the “^” or “v” button of “SEEK/TRACK” to scroll through the file list one by one.

“TUNE SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the file list. To select the desired file, press the knob.

⏪, ⏩: If ⏪ appears to the right of an item name, the complete name is too long for the screen. Touch ⏪ to scroll to the end of the name. Touch ⏩ to move to the beginning of the name.

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “SEEK/TRACK” to fast forward or rewind the file.

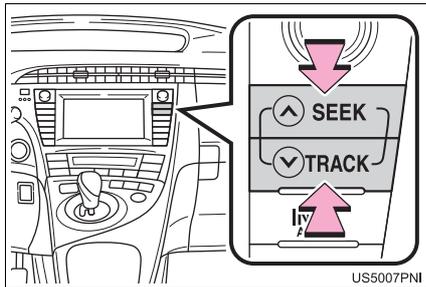

- When the button is released, the player resumes playing from that position.

REPEATING

The file or folder currently being listened to can be repeated.

REPEATING A FILE

- 1 Touch “RPT” while the file is playing.



- Each time “RPT” is touched, the mode changes as follows:

- ▶ When “RAND” is off
 - File Repeat → Folder Repeat → Off

- ▶ When “RAND” is on
 - File Repeat → Off

- “RPT” appears on the screen. When the file is finished, the player will automatically play it again. To cancel this function, touch “RPT” repeatedly until the repeat mode turns off.

REPEATING A FOLDER

- 1 Touch “RPT” repeatedly until “FLD.RPT” appears on the screen.

- When the folder is finished, the player will automatically go back to the beginning of the folder and play it again. To cancel this function, touch “RPT” again.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

PLAYING FILES FROM ONE FOLDER IN RANDOM ORDER

- 1 Touch “RAND” while the disc is playing.



- Each time “**RAND**” is touched, the mode changes as follows:
 - Random (1 Folder Random) → Folder Random (1 Disc Random) → Off
- Once “**RAND**” appears on the screen, the system selects a file randomly from the folder currently being listened to. To cancel this function, touch “**RAND**” repeatedly until the random mode turns off.

PLAYING THE FILES IN ALL THE FOLDERS ON THE DISC IN RANDOM ORDER

- 1 Touch “**RAND**” repeatedly until “**FLD.RAND**” appears on the screen.
- Once “**FLD.RAND**” appears on the screen, the system selects a file randomly from all of the existing folders. To cancel this function, touch “**RAND**” again.

INFORMATION

- When a file is skipped or the system is inoperative, touch “**RAND**” to reset.

OPERATING A DVD DISC

The playback condition of some DVD discs may be determined by the DVD software producer. This DVD player plays a disc as the software producer intended. As such some functions may not work properly. Be sure to read the instruction manual that comes with the individual DVD disc. For detailed information about DVD video discs, see “DVD PLAYER AND DVD VIDEO DISC INFORMATION” on page 233.

PRECAUTIONS ON DVD VIDEO DISC

When recording with a DVD video, audio tracks may not record in some cases while the menu is displayed. As audio will not play in this case, verify that the video tracks are playing and then activate playback.

When playback of a disc is completed:

If an audio CD or MP3/WMA disc is playing, the first track or file starts.

If a DVD video is playing, playback will stop or the menu screen will be displayed.


The title/chapter number and playback time display may not appear while playing back certain DVD video discs.

CAUTION

- Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

PLAYING A DVD DISC

- 1 Press the **“DISC”** button and press the **“AUDIO”** button to display the audio control screen.

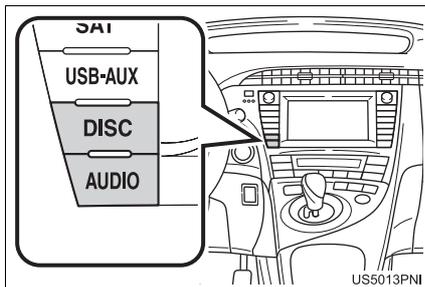

- About the other operation methods, see **“SWITCHING BETWEEN FUNCTIONS”** on page 196.



- Touch **“Options”** on the **“DVD”** screen, then touch **“Wide”** on the **“DVD Options”** screen. The screen mode can be changed.
- If **“Full Screen”** is touched when the vehicle is completely stopped and the parking brake is applied, the video screen returns.

DISPLAYING DVD CONTROLS



- If is touched, while watching a DVD, the DVD controls will appear.

INFORMATION

- If appears on the screen when a control is touched the operation relevant to the control is not permitted.

DESCRIPTION OF DVD VIDEO CONTROLS

Screen button	Function
“Top Menu”, “Menu”	Touch to display the menu screen for DVD video.
	The menu control key appears on the screen. (See page 224.)
	Touch to pause the video screen.
	Touch to rewind during playback.
	Touch to stop the video screen.
	Touch to resume normal play during pause.
	Touch to fast forward during playback and forward frame by frame during pause.

5 AUDIO/VIDEO SYSTEM

CHANGING A CHAPTER

- 1 Press and hold the **“^”** or **“v”** button of **“SEEK/TRACK”** or turn the **“TUNE SCROLL”** knob to change the chapter.

SELECTING A MENU ITEM

- 1 Select the menu item using , ,  or  and touch **“Enter”**. The player starts playing the disc from the start of the selected item.



- When any part of the screen is touched, the controls will disappear. To display them again, touch any part of the screen.
- When  is touched, the previous screen is displayed.

INFORMATION


- According to the DVD disc, some menu items can be selected by touching them directly. (For details, see the manual that comes with the DVD disc provided separately.)

DVD OPTIONS

- 1 Touch the **“DISC”** tab.
- 2 Touch **“Options”**.



- 3 This screen is displayed.

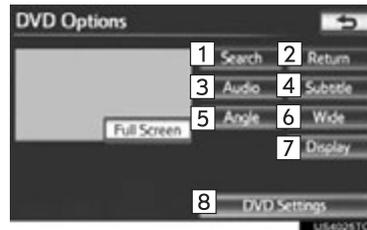

No.	Function
1	Touch to display the title search screen. (See page 225.)
2	Touch to display the predetermined scene on the screen and start playing.
3	Touch to display the audio selection screen. (See page 225.)
4	Touch to display the subtitle selection screen. (See page 226.)
5	Touch to display the angle selection screen. (See page 226.)
6	Touch to display the screen mode screen. (See page 198.)
7	Touch to display the image quality adjustment screen. (See page 226.)
8	Touch to display the initial setup screen. (See page 227.)

SEARCHING BY TITLE

- 1 Touch **“Search”** on the “DVD Options” screen.
- 2 Enter the title number and touch **“OK”**.



- The player starts playing video for that title number.
- If the wrong numbers are entered, touch  to delete the numbers.
- When  is touched, the previous screen is displayed.

CHANGING THE AUDIO LANGUAGE

- 1 Touch **“Audio”** on the “DVD Options” screen.
 - 2 Each time **“Change”** is touched, the audio language is changed.
- The languages available are restricted to those available on the DVD disc.



- When  is touched, the previous screen is displayed.

5

AUDIO/VIDEO SYSTEM

CHANGING THE SUBTITLE LANGUAGE

- 1 Touch **“Subtitle”** on the “DVD Options” screen.
 - 2 Each time **“Change”** is touched, the language the subtitles are displayed in is changed.
- The languages available are restricted to those available on the DVD disc.



- When **“Hide”** is touched, the subtitles can be hidden.
- When  is touched, the previous screen is displayed.

CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Touch **“Angle”** on the “DVD Options” screen.
- 2 Each time **“Change”** is touched, the angle is changed.

- The angles available are restricted to those available on the DVD disc.



- When  is touched, the previous screen is displayed.

AUDIO SCREEN ADJUSTMENT

The brightness, contrast, color and tone of the screen can be adjusted. In addition, the display can be turned off and the screen can be changed to either day or night mode.

CONTRAST, BRIGHTNESS, COLOR AND TONE ADJUSTMENT

- 1 Touch **“Display”** on the “DVD Options” screen.
- 2 Touch **“<”** or **“>”** to display the desired item to be adjusted.





Screen button	Function
“Contrast” “+”	Touch to strengthen the contrast of the screen.
“Contrast” “-”	Touch to weaken the contrast of the screen.
“Brightness” “+”	Touch to brighten the screen.
“Brightness” “-”	Touch to darken the screen.
“Color” “R”	Touch to strengthen the red color of the screen.
“Color” “G”	Touch to strengthen the green color of the screen.
“Tone” “+”	Touch to strengthen the tone of the screen.
“Tone” “-”	Touch to weaken the tone of the screen.

- After adjusting the screen, touch “OK”.
 - The screen goes off when “Screen Off” is touched. To turn the display screen back on, press any button. The selected screen appears.

DVD SETTINGS

- Touch “DVD Settings” on the “DVD Options” screen.
- Touch the items to be set.

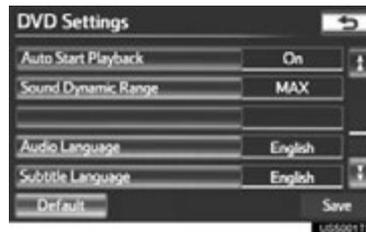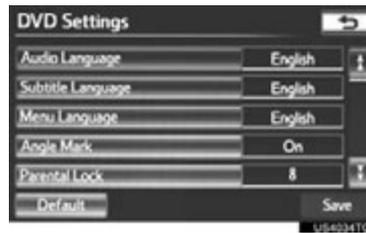

- After the initial setting has been changed, touch “Save”.
 - This screen will close, and the system will return to the previous screen.
 - When “Default” is touched, all menus are initialized.

5

AUDIO/VIDEO SYSTEM

AUDIO LANGUAGE

The audio language can be changed.

- 1 Touch **“Audio Language”** on the “DVD Settings” screen.
- 2 Touch the desired language to be heard on the “Audio Language” screen.
 - If the desired language to be heard cannot be found on this screen, touch **“Other”** and enter a language code. For entry of a language code, see “ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE” on page 230.
 - To return to the “DVD Settings” screen, touch .
- 3 Touch **“Save”** on the “DVD Settings” screen.

SUBTITLE LANGUAGE

The subtitle language can be changed.

- 1 Touch **“Subtitle Language”** on the “DVD Settings” screen.
- 2 Touch the desired language to be read on the “Subtitle Language” screen.
 - If the desired language to be read cannot be found on this screen, touch **“Other”** and enter a language code. For entry of a language code, see “ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE” on page 230.
 - To return to the “DVD Settings” screen, touch .
- 3 Touch **“Save”** on the “DVD Settings” screen.

MENU LANGUAGE

The language on the DVD video menu can be changed.

- 1 Touch **“Menu Language”** on the “DVD Settings” screen.
- 2 Touch the desired language to be read on the “Menu Language” screen.
 - If the desired language to be read cannot be found on this screen, touch **“Other”** and enter a language code. For entry of a language code, see “ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE” on page 230.
 - To return to the “DVD Settings” screen, touch .
- 3 Touch **“Save”** on the “DVD Settings” screen.

ANGLE MARK

The multi-angle mark can be turned on or off on the screen while discs that are multi-angle compatible are being played.

- 1 Touch **“Angle Mark”** on the “DVD Settings” screen.
- 2 Touch **“On”** or **“Off”**.
- 3 Touch **“Save”** on the “DVD Settings” screen.

PARENTAL LOCK

The level of viewer restrictions can be changed.

- 1** Touch **“Parental Lock”** on the “DVD Settings” screen.
- 2** Enter the 4-digit personal code on the “Key Code” screen.
 - If the wrong numbers are entered, touch  to delete the numbers.
 - To return to the “DVD Settings” screen, touch .
- 3** Touch a parental level (**1-8**) on the “Select Restriction Level” screen.
 - To return to the “DVD Settings” screen, touch .
- 4** Touch **“Save”** on the “DVD Settings” screen.

AUTO START PLAYBACK

Discs that are inserted while the vehicle is in motion will automatically start playing. Certain discs may not play.

- 1** Touch **“Auto Start Playback”** on the “DVD Settings” screen.
- 2** Touch **“On”** or **“Off”**.
- 3** Touch **“Save”** on the “DVD Settings” screen.

SOUND DYNAMIC RANGE

The difference between the lowest volume and the highest volume can be adjusted.


- 1** Touch **“Sound Dynamic Range”** on the “DVD Settings” screen.
- 2** Touch **“MAX”**, **“STD”** or **“MIN”**.
- 3** Touch **“Save”** on the “DVD Settings” screen.

1. AUDIO/VIDEO SYSTEM OPERATION

**ENTER AUDIO/SUBTITLE/
MENU LANGUAGE CODE**

If “Other” on the “Audio Language” screen, “Subtitle Language” screen or “Menu Language” screen is touched, the desired language to be heard or read can be selected by entering a language code.

1 Enter the 4-digit language code.

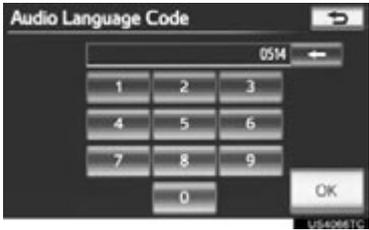

- If the wrong numbers are entered, touch  to delete the numbers.
 - To return to the “DVD Settings” screen, touch .
- 2 Touch “OK”.
- 3 Touch “Save” on the “DVD Settings” screen.

Code	Language
0514	English
1001	Japanese
0618	French
0405	German
0920	Italian
0519	Spanish
2608	Chinese
1412	Dutch
1620	Portuguese
1922	Swedish
1821	Russian
1115	Korean
0512	Greek
0101	Afar
0102	Abkhazian
0106	Afrikaans
0113	Amharic
0118	Arabic
0119	Assamese
0125	Aymara
0126	Azerbaijani
0201	Bashkir
0205	Byelorussian
0207	Bulgarian
0208	Bihari
0209	Bislama
0214	Bengali, Bangla
0215	Tibetan
0218	Breton

1. AUDIO/VIDEO SYSTEM OPERATION

Code	Language	Code	Language
0301	Catalan	0923	Hebrew
0315	Corsican	1009	Yiddish
0319	Czech	1023	Javanese
0325	Welsh	1101	Georgian
0401	Danish	1111	Kazakh
0426	Bhutani	1112	Greenlandic
0515	Esperanto	1113	Cambodian
0520	Estonian	1114	Kannada
0521	Basque	1119	Kashmiri
0601	Persian	1121	Kurdish
0609	Finnish	1125	Kirghiz
0610	Fiji	1201	Latin
0615	Faroese	1214	Lingala
0625	Frisian	1215	Laotian
0701	Irish	1220	Lithuanian
0704	Scottish-Gaelic	1222	Latvian, Lettish
0712	Galician	1307	Malagasy
0714	Guarani	1309	Maori
0721	Gujarati	1311	Macedonian
0801	Hausa	1312	Malayalam
0809	Hindi	1314	Mongolian
0818	Croatian	1315	Moldavian
0821	Hungarian	1318	Marathi
0825	Armenian	1319	Malay
0901	Interlingua	1320	Maltese
0905	Interlingue	1325	Burmese
0911	Inupiak	1401	Nauru
0914	Indonesian	1405	Nepali
0919	Icelandic	1415	Norwegian

5

AUDIO/VIDEO SYSTEM

1. AUDIO/VIDEO SYSTEM OPERATION

Code	Language
1503	Occitan
1513	(Afan) Oromo
1518	Oriya
1601	Panjabi
1612	Polish
1619	Pashto, Pushto
1721	Quechua
1813	Rhaeto-Romance
1814	Kirundi
1815	Romanian
1823	Kinyarwanda
1901	Sanskrit
1904	Sindhi
1907	Sango
1908	Serbo-Croatian
1909	Sinhalese
1911	Slovak
1912	Slovenian
1913	Samoaan
1914	Shona
1915	Somali
1917	Albanian
1918	Serbian
1919	Siswati
1920	Sesotho
1921	Sundanese
1923	Swahili
2001	Tamil
2005	Telugu

Code	Language
2007	Tajik
2008	Thai
2009	Tigrinya
2011	Turkmen
2012	Tagalog
2014	Setswana
2015	Tongan
2018	Turkish
2019	Tsonga
2020	Tatar
2023	Twi
2111	Ukrainian
2118	Urdu
2126	Uzbek
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

IF THE PLAYER MALFUNCTIONS

If the player or another unit equipped with the player malfunctions the audio/video system will display a message. These are described below.

If “Check DISC” appears on the screen: It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, “Check DISC” will also appear on the screen. For appropriate discs for this player, see “AUDIO/VIDEO SYSTEM OPERATING HINTS” on page 257.

If “Region code error” appears on the screen: It indicates that the DVD region code is not set properly.

If the malfunction is not rectified: Take your vehicle to your Toyota dealer.

INFORMATION

- If an MP3/WMA disc contains CD-DA files only, the CD-DA files can be played. If an MP3/WMA disc contains CD-DA files and files other than CD-DA files, only MP3/WMA files can be played.

DVD PLAYER AND DVD VIDEO DISC INFORMATION

DVD VIDEO DISCS

 
This DVD player conforms to NTSC/PAL color TV formats. DVD video discs conforming to another format such as SECAM cannot be used.

Region codes: Some DVD video discs have a region code indicating which countries the DVD video disc can be played in on this DVD player. If the DVD video disc is not labeled as “ALL” or “1”, you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, “Region code error” appears on the screen. Even if the DVD video disc does not have a region code, there are cases when it cannot be used.

5

AUDIO/VIDEO SYSTEM

MARKS SHOWN ON DVD VIDEO DISCS

	Indicates NTSC/PAL format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

DVD VIDEO DISC GLOSSARY

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help users enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

- Level 1: DVD video discs for children can be played.
- Level 2 - 7: DVD video discs for children and G-rated movie can be played.
- Level 8: All types of the DVD video discs can be played.

Multi-angle feature: The same scene can be enjoyed from different angles.

Multi-language feature: The subtitle and audio language can be selected.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes, see page 233.

Audio: This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

Title and chapter: Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A unit smaller than that of title. A title comprises of several chapters.

- Manufactured under license from Dolby Laboratories. "Dolby", and the double-D symbol are trademarks of Dolby Laboratories.
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

1. AUDIO/VIDEO SYSTEM OPERATION

8. USB MEMORY OPERATION

Connecting a USB memory enables users to enjoy music from the vehicle speakers.

⚠ CAUTION


- Do not operate the player's controls or connect the USB memory while driving.

⚠ NOTICE


- Depending on the size and shape of the USB memory that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the USB memory or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

CONNECTING A USB MEMORY

- 1 Open the console box.

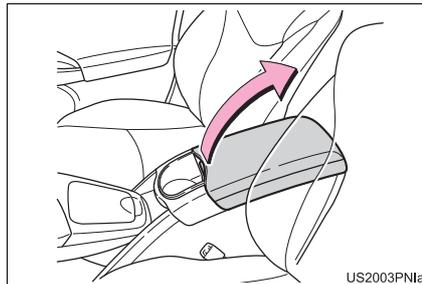

- 2 Open the cover and connect a USB memory.

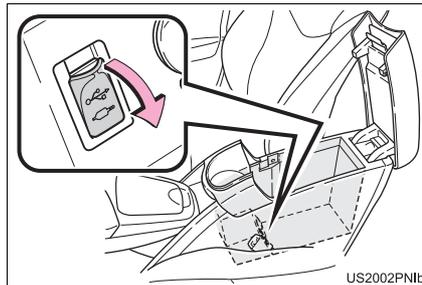


- Turn on the power of the USB memory if it is not turned on.
- 3 Close the console box.

PLAYING A USB MEMORY

PLAYING AND PAUSING A USB MEMORY

 1 If a USB memory has already been connected, press the “**USB-AUX**” button repeatedly to change to USB memory mode and press the “**AUDIO**” button to display the audio control screen.



● About the other operation methods, see “**SWITCHING BETWEEN FUNCTIONS**” on page 196.

▶ Tag mode



▶ Folder mode



INFORMATION

● If tag information exists, the file/folder names will be changed to track/album names.

▶: Touch to start playing the music.

⏸: Touch to pause the music.

● To start playing the music again, touch ▶.

INFORMATION

● When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume playing from the same point it was last used.

● Depending on the USB memory that is connected to the system, certain functions may not be available.

SELECTING A DESIRED FOLDER/ALBUM

ON THE USB TOP SCREEN



▶, ◀: Touch to skip to the next or previous folder/album.

5 AUDIO/VIDEO SYSTEM

SELECTING A DESIRED FOLDER, ARTIST OR ALBUM

- 1 Touch the folder/album name screen button.



- 2 Touch the desired tab and select the desired folder, artist or album.



- Character screen buttons, “ABC”, “DEF” etc., allow a direct jump to list entries that begin with the same letter as the character button. Each time the same character screen button is touched, the list starting with the subsequent character is displayed.

⬆️, ⬇️: Touch to move the list up or down by 5 folder/artist/album groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.

⬅️, ➡️: If ➡️ appears to the right of an item name, the complete name is too long for the screen. Touch ➡️ to scroll to the end of the name. Touch ⬅️ to move to the beginning of the name.

SELECTING A DESIRED FILE/ TRACK

ON THE USB TOP SCREEN




“**SEEK/TRACK**” button: Press the “^” or “v” button of “**SEEK/TRACK**” repeatedly until the desired file/track number appears on the screen. The player will start playing the selected file/track from the beginning.

“**TUNE SCROLL**” knob: Turn the knob clockwise or counterclockwise to skip to the desired file/track.

■ ON THE FILE/TRACK LIST SCREEN

- 1 Touch the file/track name screen button to display the following file/track list screen.

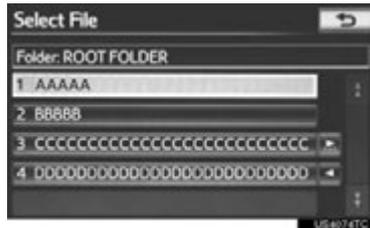

- 2 Touch the desired file/track number. The player will start playing the selected file/track from the beginning.

, : Touch to move the list up or down by 5 file/track groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.


“SEEK/TRACK” button: Press the “^” or “v” button of “SEEK/TRACK” to scroll through the file/track list one by one.

“TUNE SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the file/track list. To select the desired file/track, press the knob.

, : If appears to the right of an item name, the complete name is too long for the screen. Touch to scroll to the end of the name. Touch to move to the beginning of the name.

■ FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “SEEK/TRACK” to fast forward or rewind the file/track.

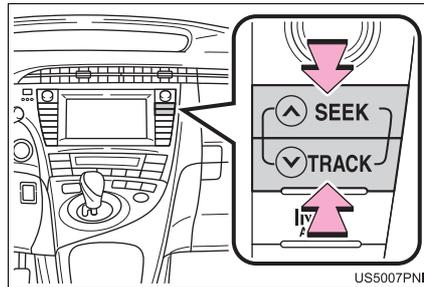

- When the button is released, the player resumes playing from that position.

REPEATING

The file or folder currently being listened to can be repeated.

REPEATING A FILE/TRACK

- 1 Touch "RPT" while the file or track is playing.



- Each time "RPT" is touched, the mode changes as follows:
 - ▶ When "RAND" is off
 - File/Track Repeat → Folder/Album Repeat → Off
 - ▶ When "RAND" is on
 - File/Track Repeat → Off
- "RPT" appears on the screen. When the file/track is finished, the player will automatically play it again. To cancel this function, touch "RPT" repeatedly until the repeat mode turns off.

REPEATING A FOLDER/ALBUM

- 1 Touch "RPT" repeatedly until "FLD.RPT" appears on the screen.
- When the folder/album is finished, the player will automatically go back to the beginning of the folder/album and play it again. To cancel this function, touch "RPT" again.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

PLAYING FILES/TRACKS IN RANDOM ORDER

- 1 Touch "RAND" while the file or track is playing.



- Each time "RAND" is touched, the mode changes as follows:
 - Random (1 Folder/Album Random) → Folder/Album Random (All Folder/Album Random) → Off
- Once "RAND" appears on the screen, the system selects a file/track randomly from the folder/album currently being listened to. To cancel this function, touch "RAND" repeatedly until the random mode turns off.

ALL FOLDER/ALBUM RANDOM PLAY

- 1 Touch "RAND" repeatedly until "FLD.RAND" appears on the screen.
- Once "FLD.RAND"/"ALB.RAND" appears on the screen, the system selects a file randomly from all of the existing folders or albums. To cancel this function, touch "RAND" again.

1. AUDIO/VIDEO SYSTEM OPERATION

9. iPod OPERATION

Connecting an iPod enables users to enjoy music from the vehicle speakers.



CAUTION

- Do not operate the player's controls or connect the iPod while driving.



NOTICE


- Depending on the size and shape of the iPod that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the iPod or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION


- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.

CONNECTING iPod

- 1 Open the console box.

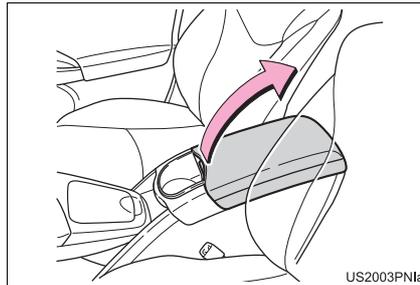

- 2 Open the cover and connect iPod using an iPod cable.

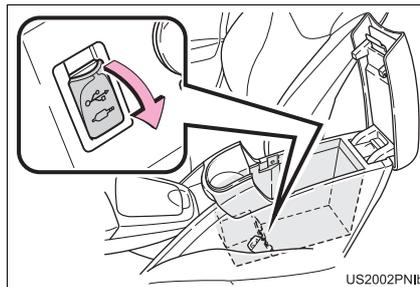

- Turn on the power of the iPod if it is not turned on.

- 3 Close the console box.

 
5

AUDIO/VIDEO SYSTEM

PLAYING iPod

PLAYING AND PAUSING iPod

- 1 If an iPod has already been connected, press the **"USB-AUX"** button repeatedly to change to iPod mode and press the **"AUDIO"** button to display the audio control screen.



- About the other operation methods, see "SWITCHING BETWEEN FUNCTIONS" on page 196.



: Touch to start playing the music.

: Touch to pause the music.

- To start playing the music again, touch .

INFORMATION


- When the iPod connected to the system includes iPod video, the system can only output the sound by touching **"Video"** on the "iPod" screen.
- Depending on the iPod, the video sound may not be able to be heard.

INFORMATION


- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to **"On"** or **"Off"**. See "iPod SETTINGS" on page 268. It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process. Only the iPod cover art that is saved in JPEG format can be displayed.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available.

SELECTING A PLAY MODE

- 1 Touch **"Browse"**.

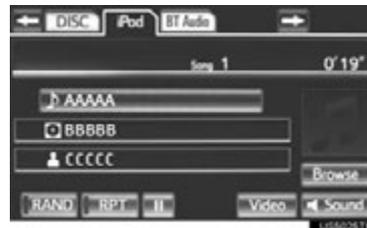

- 2 Select the desired play mode.

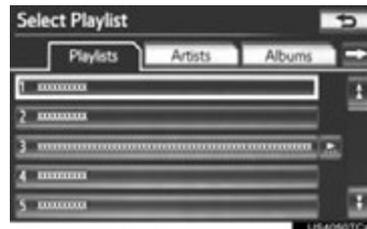

SELECTING A DESIRED TRACK

ON THE iPod TOP SCREEN



“SEEK/TRACK” button: Press the “^” or “v” button of **“SEEK/TRACK”** repeatedly until the desired track number appears on the screen. The player will start playing the selected track from the beginning.

“TUNE SCROLL” knob: Turn the knob clockwise or counterclockwise to skip to the desired track.

ON THE TRACK LIST SCREEN

1 Touch the track name screen button to display the following track list screen.



2 Touch the desired track number. The player will start playing the selected track from the beginning.

, : Touch to move the list up or down by 5 track groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.

“SEEK/TRACK” button: Press the “^” or “v” button of **“SEEK/TRACK”** to scroll through the track list one by one.

“TUNE SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track list. To select the desired track, press the knob.


, : If appears to the right of an item name, the complete name is too long for the screen. Touch to scroll to the end of the name. Touch to move to the beginning of the name.

5

AUDIO/VIDEO SYSTEM

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “SEEK/TRACK” to fast forward or rewind the player.

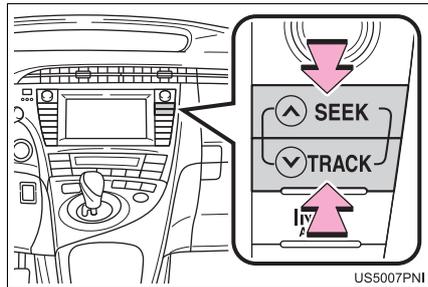

- When the button is released, the player resumes playing from that position.

REPEATING

The track currently being listened to can be repeated.

- 1 Touch “RPT” while the track is playing.



- “RPT” appears on the screen. When the track is finished, the player will automatically play it again. To cancel this function, touch “RPT” again.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

PLAYING TRACKS IN RANDOM ORDER

- 1 Touch “RAND” while the track is playing.



- Each time “RAND” is touched, the mode changes as follows:
 - Track Shuffle → Album Shuffle → Off
- Once “RAND” appears on the screen, the system selects a track randomly from all of the existing albums on the iPod. To cancel this function, touch “RAND” twice.

PLAYING ALBUMS IN RANDOM ORDER


- 1 Touch “RAND” repeatedly until “ALB.RAND” appears on the screen.
- Once “ALB.RAND” appears on the screen, the system selects an album randomly from all of the existing albums on the iPod. To cancel this function, touch “RAND” again.

1. AUDIO/VIDEO SYSTEM OPERATION

10. Bluetooth® AUDIO OPERATION

The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

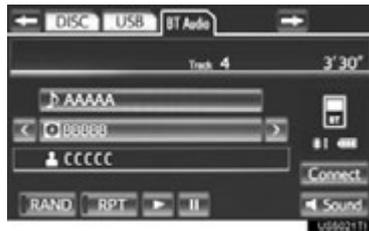

Bluetooth is a trademark owned by Bluetooth SIG, Inc.

CAUTION


- Do not operate the player's controls or connect to the Bluetooth® audio system while driving.

NOTICE

- Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

INFORMATION

- In the following conditions, the system may not function:
 - The portable player is turned off.
 - The portable player is not connected.
 - The portable player has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- Portable players must correspond to the following specifications in order to be connected to the Bluetooth® audio system. However, some functions may be limited depending on the type of portable player. Also, the different screen is displayed depending on which portable player is connecting.
 - Bluetooth® Specification Ver.1.1 or higher (Recommended: Ver.2.1 + EDR or higher)
 - Profile A2DP (Advanced Audio Distribution Profile) Ver.1.0 or higher (Recommended: Ver.1.2 or higher) AVRCP (Audio/Video Remote Control Profile) Ver.1.0 or higher (Recommended: Ver.1.4 or higher)
- Refer to <http://www.toyota.com/Bluetooth/> to find approved Bluetooth® devices for this system.

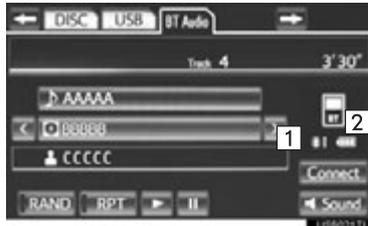

1 The quality of the Bluetooth® connection is indicated as follows:

: An excellent connection to Bluetooth®.

: Indicates a bad connection to Bluetooth®, resulting in possible deterioration of audio quality.

: No connection to Bluetooth®.

2 Indicates the amount of battery charge left.



INFORMATION

- Remaining charge is not displayed while the Bluetooth® device is connecting.
 - The amount of charge left does not always correspond correctly with your portable player.
 - This system does not have a charging function.
 - An antenna for Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may not be good and the system may not function when using a Bluetooth® portable player in the following conditions:
 - The portable player is obstructed by certain objects (behind a seat or in the glove box or console box).
 - The portable player touches or is covered with metal materials.
 - Leave the Bluetooth® portable player in a place where the condition of Bluetooth® connection is good.
- Portable player information is registered when the portable player is connected to the Bluetooth® audio system. When selling or disposing of the vehicle, remove the Bluetooth® audio information from the system. (See "DELETING A Bluetooth® DEVICE" on page 181.)

► U.S.A.

● **FCC ID : HYQDNNS059**
Type : DNNS059
IC : 1551A-DNNS059 Canada 310

● This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

! CAUTION

● **FCC WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

● **CAUTION: Radio Frequency Radiation Exposure**
 This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

● **Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► Canada

! CAUTION

● **NOTE**
 Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
 L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

● This equipment complies with IC radiation exposure limits set forth for uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).
 Cet équipement se conforme aux limites d'exposition aux radiations établies par Industrie Canada pour un environnement non contrôlé ainsi qu'aux directives d'exposition aux fréquences radioélectriques (RF) émises par Industrie Canada dans la norme CNR-102. Cet équipement émet un niveau d'énergie RF faible à un point tel qu'il se conforme sans devoir effectuer d'évaluation d'exposition maximum admissible (MPE). Lorsque l'équipement est utilisé, il est toutefois souhaitable de laisser au moins 20 cm entre l'antenne et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

CAUTION

● Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.
 Co-implantation: cet émetteur ne doit pas être co-implanté ou actionné en même temps qu'aucune autre antenne ou émetteur.

CONNECTING A Bluetooth® AUDIO PLAYER

To use the Bluetooth® audio system, it is necessary to register a portable player with the system. Once the portable player has been registered, it is possible to listen to the music.

Once the portable player has been registered, it is possible to listen to music through the navigation system. (See "REGISTERING A Bluetooth® DEVICE" on page 180.)

INFORMATION

● For operating the portable player, see the instruction manual that comes with it.

WHEN "Bluetooth* Power" IS ON

- The portable player will be automatically connected under the following conditions:
 - The "POWER" switch is in either ACCESSORY or ON mode.
 - When "Bluetooth* Power" is switched from off to on.
 - When the portable player is disconnected for some reason.

WHEN "Bluetooth* Power" IS OFF

Manually connect the portable player in accordance with the following procedure.

1 Touch "Connect".



2 Touch the desired portable player.



3 When the connection is completed, this screen is displayed. It is now possible to use the portable player.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INFORMATION

- Touching **“Connect Portable Player”** on the **“Bluetooth*”** screen also connects a Bluetooth® audio player. (See page 185.)
- When none of the selectable portable players have been registered, a screen confirming registration is displayed. Registration method is the same as phone registration. (See page 139.)
- When the currently connected portable player is selected, a screen confirming the selected player's disconnection is displayed. (See page 186.)
- If connection fails once, a changing connection method confirmation screen is displayed. If connection fails 2 or more times, a message will be displayed. When this message is displayed, try again.


RECONNECTING THE PORTABLE PLAYER

If the portable player is disconnected due to poor reception from the Bluetooth® network when the **“POWER”** switch is in **ACCESSORY** or **ON** mode, the system automatically reconnects the portable player.

- If the Bluetooth® device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.

PLAYING Bluetooth® AUDIO**PLAYING AND PAUSING Bluetooth® AUDIO**

- 1 If a Bluetooth® audio player has already been connected, press the **“USB-AUX”** button repeatedly to change to Bluetooth® audio mode and press the **“AUDIO”** button to display the audio control screen.

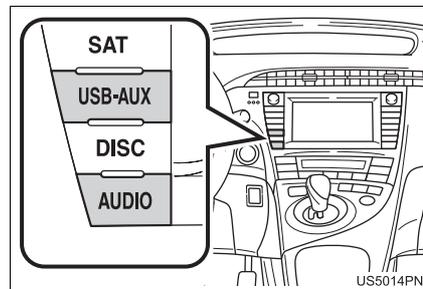

- About the other operation methods, see **“SWITCHING BETWEEN FUNCTIONS”** on page 196.


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



- ▶ : Touch to start playing the music.
- ⏸ : Touch to pause the music.
- To start playing the music again, touch ▶.
- Depending on the portable player that is connected to the system, the music may start playing when touching ⏸ while it is paused. Conversely, the music may pause when touching ▶ while it is playing.

SELECTING A DESIRED TRACK/FOLDER/ALBUM


ON THE AUDIO TOP SCREEN

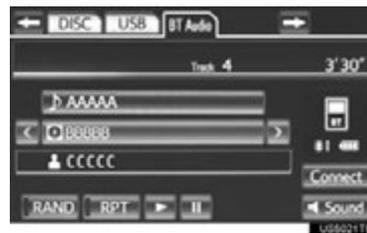


- ▶, ◀ : Touch to skip to the next or previous album.

ON THE PLAYLIST SCREEN

- 1 Touch the album name screen button to display the following playlist screen.

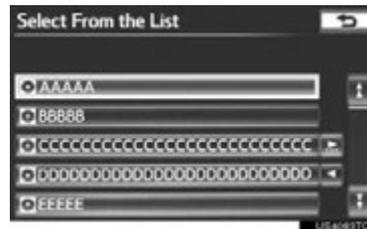

- 2 Touch the desired screen button.
 - If the folder name screen button is touched, the track list screen is displayed.
- 3 Touch the desired track name screen button.

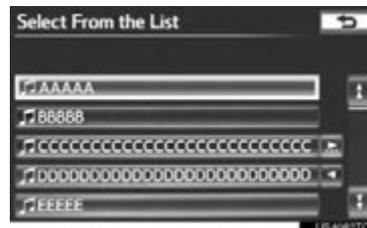

⏪, ⏩: Touch to move the list up or down by 5 track/folder groups. If either of these screen buttons is touched when the top/bottom page of the list is displayed, the last/first page is displayed.


“**SEEK/TRACK**” button: Press the “^” or “v” button of “**SEEK/TRACK**” to scroll through the track list one by one.

“**TUNE SCROLL**” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the track/folder list. To select the desired track/folder, press the knob.

⏪, ⏩: If ⏩ appears to the right of an item name, the complete name is too long for the screen. Touch ⏩ to scroll to the end of the name. Touch ⏪ to move to the beginning of the name.

FAST FORWARDING OR REWINDING

- 1 Press and hold the “^” or “v” button of “**SEEK/TRACK**” to fast forward or rewind the song.

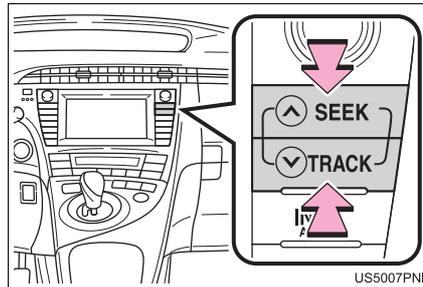


- When the button is released, the player resumes playing from that position.

INFORMATION

- Depending on the portable player that is connected to the system, certain functions may not be available.
- Some titles may not be displayed depending on the type of portable player.

FAST FORWARDING OR REWINDING

 - 1 Press and hold the “^” or “v” button of “SEEK/TRACK” to fast forward or rewind the track.



- When the button is released, the player resumes playing from that position.

REPEATING

The track or album currently being listened to can be repeated.

REPEATING A TRACK

- 1 Touch “RPT” while the track is playing.



- Each time “RPT” is touched, the mode changes as follows:
 - Track Repeat → Album Repeat → Off
- “RPT” appears on the screen. When the track is finished, the player will automatically play it again. To cancel this function, touch “RPT” repeatedly until the repeat mode turns off.

REPEATING AN ALBUM

- 1 Touch “RPT” repeatedly until “ALB.RPT” appears on the screen.


- When the album is finished, the player will automatically go back to the beginning of the album and play it again. To cancel this function, touch “RPT” again.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

PLAYING THE TRACKS ON THE ALBUM IN RANDOM ORDER

- 1 Touch “RAND” while the track is playing.

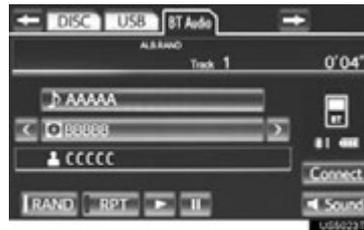

- Each time “RAND” is touched, the mode changes as follows:
 - Album Random → All Track Random → Off
- Once “RAND” appears on the screen, the system selects a track randomly from the album currently being listened to. To cancel this function, touch “RAND” repeatedly until the random mode turns off.

5 AUDIO/VIDEO SYSTEM

■ **PLAYING TRACKS FROM ALL THE ALBUMS IN RANDOM ORDER**

- 1 Touch **“RAND”** repeatedly until **“ALB.RAND”** appears on the screen.
- Once **“ALB.RAND”** appears on the screen, the system selects a track randomly from all of the existing albums on the Bluetooth® device. To cancel this function, touch **“RAND”** again.


INFORMATION

- Depending on the portable player that is connected to the system, certain functions may not be available.

1. AUDIO/VIDEO SYSTEM OPERATION

11. AUDIO/VIDEO REMOTE CONTROLS (STEERING SWITCHES)

Some parts of the audio/video system can be adjusted using the switches on the steering wheel.

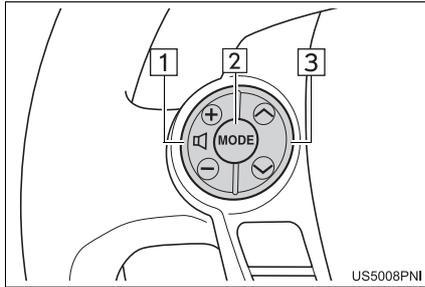

No.	Switch
1	Volume control switch
2	“MODE” switch
3	“Λ V” switch

1 Volume control switch

- Press the “+” side to increase the volume. The volume continues to increase while the switch is being pressed.
- Press the “-” side to decrease the volume. The volume continues to decrease while the switch is being pressed.

2 “MODE” switch

- Press the “MODE” switch to select an audio mode. Each press changes the mode sequentially if the desired mode is ready to use.
- To turn the audio/video system on, press the “MODE” switch.
- Press and hold the “MODE” switch to mute/unmute or pause/resume the current operation.

3 “Λ V” switch

► Radio

To select a preset station: Quickly press and release the “Λ” or “V” switch. Repeat this to select the next preset station.

To seek a station: Press and hold the “Λ” or “V” switch until a beep is heard. Repeat this to find the next station. If either switch is pressed during seek mode, seeking will be canceled.

- To seek up or down the frequency, press and hold the switch until a beep is heard. When you release the switch, the radio will begin seeking up or down for a station. Repeat to find the next station.

► DVD player

- Use the “Λ” or “V” switch to skip up or down to a different track, file or chapter in either direction.

To select a desired track, file or chapter:

Quickly press and release the “Λ” or “V” switch until the desired track, file or chapter to play is selected. To return to the beginning of the current track, file or chapter, press the “V” switch once quickly.

To select a desired folder: Press and hold the “Λ” or “V” switch until a beep is heard to change to the next or the previous folder. Repeat it until the desired folder is selected.

5

AUDIO/VIDEO SYSTEM

▶ Bluetooth® audio player

- Use the “^” or “v” switch to skip up or down to a different track or album in either direction.

To select a desired track: Quickly press and release the “^” or “v” switch until the desired track is selected. To return to the beginning of the current track, press the “v” switch once quickly.

To select a desired album: Press and hold the “^” or “v” switch until a beep is heard to change to the next or the previous album. Repeat it until the desired album is selected.

▶ USB memory/iPod

- Use the “^” or “v” switch to skip up or down to a different file or track in either direction.

To select a desired file or track: Press the “^” or “v” switch until the desired file or track is selected. To return to the beginning of the current file or track, press the “v” switch once quickly.

To select a desired folder or album (USB memory only): Press and hold the “^” or “v” switch until a beep is heard to change to the next or the previous folder or album. Repeat it until the desired folder or album is selected.

1. AUDIO/VIDEO SYSTEM OPERATION

12. AUDIO/VIDEO SYSTEM OPERATING HINTS



NOTICE

- To ensure correct audio/video system operations:
 - Be careful not to spill beverages over the audio/video system.
 - Do not put anything other than an appropriate disc into the disc slot.
 - The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/video system which you are listening to. However, this does not indicate a malfunction.

RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with the radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

FM

Fading and drifting stations: Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path: FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering: These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping: If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

1. AUDIO/VIDEO SYSTEM OPERATION

AM

Fading: AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference: When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static: AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening or electrical motors. This results in static.

XM

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

iPod



- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

COMPATIBLE MODELS

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

Made for

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Depending on differences between models or software versions etc., some models might be incompatible with this system.

USB MEMORY

- USB memory that can be used for MP3 and WMA playback:
 - USB communication formats: USB 2.0 HS (480 Mbps) and FS (12 Mbps)
 - File formats: FAT 16/32
 - Correspondence class: Mass storage class

CARING FOR YOUR DVD PLAYER AND DISC

- This DVD player is intended for use with 4.7 in. (12 cm) discs only.
- Extremely high temperatures can keep the DVD player from working. On hot days, use the air conditioning system to cool the inside of the vehicle before using the player.
- Bumpy roads or other vibrations may make the DVD player skip.
- If moisture gets into the DVD player, the discs may not be able to be played. Remove the discs from the player and wait until it dries.

CAUTION

- DVD players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

5

AUDIO/VIDEO SYSTEM


DVD PLAYER

Audio CDs		
DVD video discs		


● Use only discs marked as shown above. The following products may not be playable on your player:

- SACD
- dts CD
- Copy-protected CD
- DVD audio
- Video CD
- DVD+R
- DVD+RW
- DVD-RAM

 
▶ Special shaped discs




▶ Transparent/translucent discs

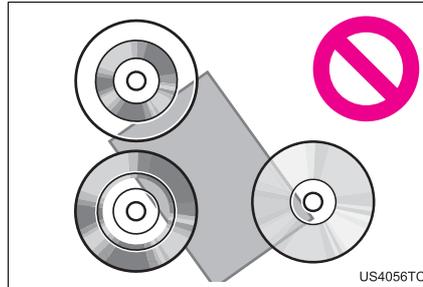

▶ Low quality discs

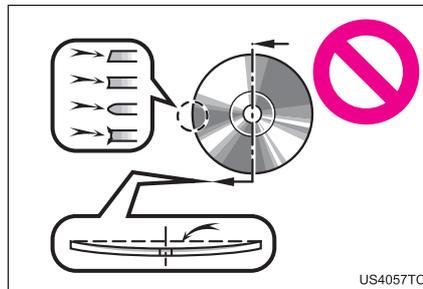


▶ Labeled discs

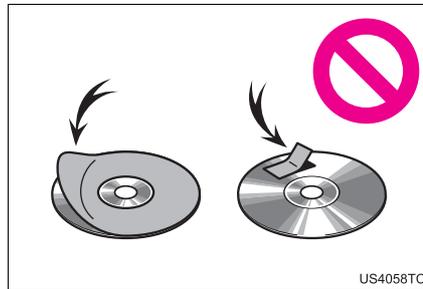


 **NOTICE**

 - Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring. The use of such discs may damage the player, or it may be impossible to eject the disc.



- Handle discs carefully, especially when inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when not in use. Store them in their plastic cases away from moisture, heat and direct sunlight.

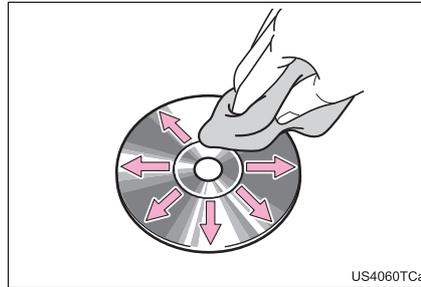

To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

MP3/WMA FILES

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.
- The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.
- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma).
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- The MP3/WMA player can play only the first session when using multi-session compatible CDs.


- MP3 player: MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.
- USB memory: MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3 and Ver. 2.4 formats. The unit cannot display track title and artist name in other formats.
- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz.

SAMPLING FREQUENCY


- MP3 files for MP3 player:
MPEG 1 LAYER 3 — 32, 44.1, 48 kHz
MPEG 2 LSF LAYER 3 — 16, 22.05, 24 kHz
MP3 files for USB memory:
MPEG 1 AUDIO LAYER 2, 3 — 32, 44.1, 48 kHz
MPEG 2 AUDIO LAYER 2, 3 — 16, 22.05, 24 kHz
WMA files for WMA player:
Ver. 7, 8, 9 CBR — 32, 44.1, 48 kHz
WMA files for USB memory:
Ver. 9 — HIGH PROFILE 32, 44.1, 48 kHz
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.

PLAYABLE BIT RATES

- MP3 files for MP3 player:
MPEG1 LAYER3 — 32 to 320 kbps
MPEG2 LSF LAYER3 — 8 to 160 kbps
MP3 files for USB memory:
MPEG 1 AUDIO LAYER 2, 3 — 32 to 320 kbps
MPEG 2 AUDIO LAYER 2, 3 — 8 to 160 kbps
WMA files for WMA player:
Ver. 7, 8 CBR — 48 to 192 kbps
Ver. 9 CBR — 48 to 320 kbps
WMA files for USB memory:
Ver. 9 HIGH PROFILE 32 to 320 kbps, VBR (Variable Bit Rate)
- The MP3/WMA player does not play back MP3/WMA files from discs recorded using packet write data transfer (UDF format). Discs should be recorded using “pre-mastering” software rather than packet-write software.
- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fastforward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA files.
- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than two levels of folders.

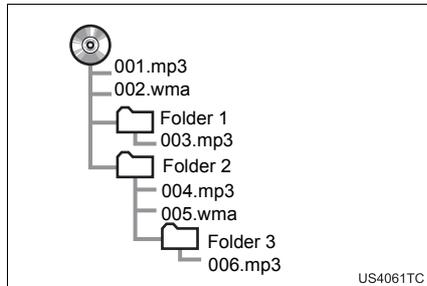

 - The play order of the compact disc with the structure shown above is as follows:



- MP3/WMA player: It is possible to play up to 192 folders or 255 files on one disc.
- USB memory: It is possible to play up to 3000 folders, 255 files per folder or 9999 files in the device.
- The order changes depending on the personal computer and MP3/WMA encoding software you use.

CD-R AND CD-RW DISCS

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)

- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

TERMS

PACKET WRITE

- This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 TAG

- This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist’s name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

WMA TAG

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

ISO 9660 FORMAT

- This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are 2 levels of regulations.
- Level 1: The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)
- Level 2: The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

m3u

- Playlists created using “WINAMP” software have a playlist file extension (.m3u).

MP3

- MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA

- WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.

- Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.



- CD and music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

● **Gracenote® End User License Agreement**

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present
Gracenote

2. SETUP

1. AUDIO SETTINGS


HD Radio™ SYSTEM SETTINGS

HD Radio™ system can be set using the procedure outlined below.


- 1 Press the **“SETUP”** button.
- 2 Touch **“Audio”**.




- 3 Touch **“HD Radio Settings”**.

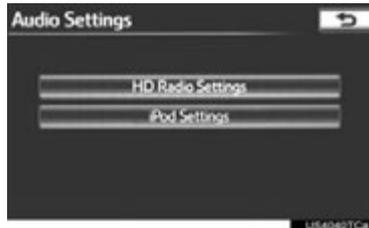

- 4 Touch **“HD Radio/Analog Setting”**.

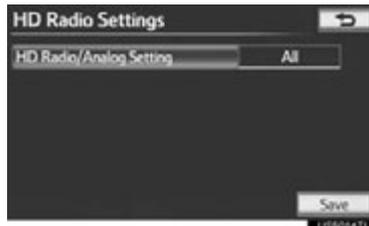

- 5 Touch the item to be set.

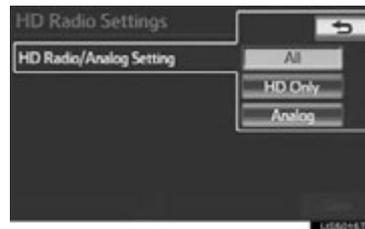

Screen button	Function
“All”	Touch to receive both analog and digital broadcasts.
“HD Only”	Touch to receive only digital broadcasts.
“Analog”	Touch to receive only analog broadcasts.

- 6 Touch **“Save”**.

5

AUDIO/VIDEO SYSTEM

2. SETUP


iPod SETTINGS

iPod can be set using the procedure outlined below.


- 1 Press the **“SETUP”** button.
- 2 Touch **“Audio”** on the “Setup” screen.
- 3 Touch **“iPod Settings”**.



- 4 Touch **“Display Cover Art”**.

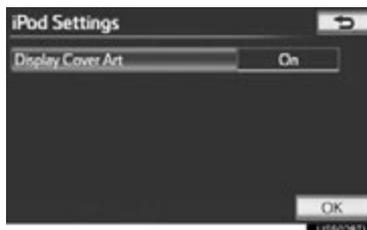

- 5 Touch **“On”** or **“Off”**.

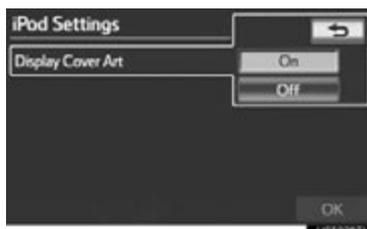

6

VOICE COMMAND SYSTEM

1 VOICE COMMAND SYSTEM OPERATION

- 1. VOICE COMMAND SYSTEM..... 270
 - STEERING SWITCHES FOR THE VOICE COMMAND SYSTEM ... 270
 - VOICE COMMAND SYSTEM OPERATION..... 270
- 2. NATURAL SPEECH INFORMATION (ENGLISH ONLY) 276
- 3. EXPANDED VOICE COMMANDS 278
- 4. COMMAND LIST 279

1

2

3

4

5

6

7

8

9

1. VOICE COMMAND SYSTEM OPERATION

1. VOICE COMMAND SYSTEM

 
The voice command system enables the navigation, audio/video and hands-free systems to be operated using voice commands.

The operating procedures of voice commands from the "Shortcut Menu" screen are explained here.

INFORMATION

- Commands that are not displayed in the "Shortcut Menu" screen can be operated from the "Main Menu" screen.

STEERING SWITCHES FOR THE VOICE COMMAND SYSTEM



1 Talk switch

- Press the talk switch to start the voice command system.
- To cancel voice recognition, press and hold the talk switch.

VOICE COMMAND SYSTEM OPERATION

1 Press the talk switch.

- After the "Shortcut Menu" screen has been displayed, voice guidance will commence.

- Voice guidance for the voice command system can be skipped by pressing the talk switch.

2 After a beep sounds, say the command of your choice.



- Voice commands are marked with . Some commonly used commands are displayed on the screen.

- By saying "Next page" or "Previous page", or by touching "Next Pg."/"Prev. Pg.", the screen will display the commands displayed on the page in the background.

- Saying "Main menu" or touching "Main Menu" when the "Shortcut Menu" screen is displayed will display the "Main Menu" screen.

- Registered POIs, registered names in the phonebook etc., can be said in the place of the "<>" next to the commands. (See page 279.)

For example: Say "Find nearby dining", "Call John" etc.

- Saying **“Help”** prompts voice guidance to offer examples of commands and operation methods.

- 3 Say the command displayed on the screen.



- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
 - Say **“Go back”**.
 - Touch **“Go Back”**.
- To cancel voice recognition, touch **“Cancel”**, or press and hold the talk switch.


INFORMATION

- If the navigation system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- If a voice command cannot be recognized within 6 seconds, voice guidance will say **“Pardon?”** (**“Command not recognized.”** will be displayed on the screen) and voice command reception will restart.
- If a voice command cannot be recognized 2 consecutive times, the voice command guidance system will say **“Paused. To restart voice recognition, push the talk switch. To cancel voice recognition, push and hold the talk switch.”** Voice recognition will then be suspended. Touch **“Cancel”** or **“Go Back”**.
- The voice recognition prompt can be set to on or off when **“Voice Prompts”** is touched. This setting can also be changed on the **“Voice Settings”** screen. (See page 53.)
- When **“Voice Prompts”** is touched, voice recognition will be temporarily suspended. Press the talk switch again.
- Voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.


MICROPHONE

It is unnecessary to speak directly into the microphone when giving a command.

► Type A

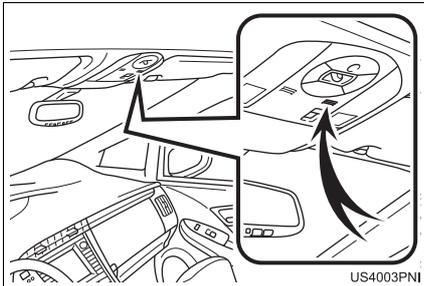

► Type B

 

INFORMATION

- Wait for the confirmation beep before speaking a command.
- Voice commands may not be recognized if:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while voice commands are spoken.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
 - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
 - There is excessive background noise, such as wind noise.

VOICE COMMAND EXAMPLE: SEARCHING FOR A ROUTE TO YOUR HOME

- 1 Press the talk switch.
- 2 Say **“Go home”**.
 - A confirmation screen will be displayed showing the recognition results.
- 3 Say **“Yes”** or touch **“Yes”**.
 - The system starts searching for a route to your home.



- When the voice command is recognized, the map of the area around the home address will be displayed and route guidance to the home address will begin.
- If a home address is not registered, voice guidance will say “Your home is not set. Please try again after setting a home location.” and you will be prompted to enter a home address. (See page 98.)

VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS

- 1 Press the talk switch.
- 2 Say **“Enter an address”**.
 - If the destination’s state/province has not been set or is not contained in the voice command recognition list, the screen to input a state/province will be displayed.



- Some areas cannot be recognized by the voice recognition system.

● For information regarding the state/province setting to perform a destination search by address, see “SELECTING THE SEARCH AREA” on page 58.

- 3 Say **“<city name>”**.
 - Say the desired city name that belongs to the set state in the place of the “<>”.
 - Say **“Change State”** to change the set voice recognition state.

4 Say “<street name>”.

- Say the desired full street name, or main body of the street name that belongs to the set state in the place of the “<>”.
- The voice command recognition is designed to recognize the main body of the official street name.

For example, if the official street name is “**East Main Street**”, the voice command recognition will recognize “**Main**”.

5 Say “<house number>”.

- Say the desired number, cardinal/intercardinal direction etc. in the place of the “<>”.

For example: Say “**West 555**”.

- Inputting the house number can be skipped.

6 Say “**Start guidance**” or “**Show map**”. Alternatively, touch “**Start Guidance**” or “**Show Map**”.

- After this, follow the voice guidance and search for a destination route by voice command operation.

INFORMATION

- Even if the state set using voice recognition is different from the set state in the “Address” screen (which was set when a destination was set manually), the set state in the “Address” screen will not change. (For more information on the “Address” screen, see “SELECTING THE SEARCH AREA” on page 58.)
- The house number voice recognition conditions are outlined below:
 - Numerals: 10 digits or less
 - Numerals and cardinal/intercardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say “and”).
 - Cardinal/Intercardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say “and”).
 - Numerals are recognized as single digits only.
 - The cardinal/intercardinal direction and hyphens are only recognized once.
 - The following cardinal/intercardinal directions can be recognized: North, East, West, South, North East, North West, South East and South West.
- When inputting the house number is skipped and the recognized candidate list has multiple entries and so forth, the full street name may need to be recognized. If this occurs, say the full street name. For example, say “**East Main Street**” and “**East Main Street**” will be recognized.

VOICE COMMAND EXAMPLE: SEARCH FOR A TRACK USING ARTIST NAME OR ALBUM NAME

- 1 Press the talk switch.
 - “Play Artist <name>” and “Play Album <name>” are displayed in the “Shortcut Menu” screen.
- 2 Say “**Play artist <name>**” or “**Play album <name>**”.
 - Say the desired artist name or album name in the place of the “<”.
 - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed.
 - When “Play Artist <name>” is used to play music, the first track is selected randomly. For operations beyond playing music, refer to the “AUDIO/VIDEO SYSTEM” section of this manual.
- 3 Say “**Yes**” or touch “**Yes**”.
 - The system starts playing music.



- Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information visit www.gracenote.com.

INFORMATION

- A USB memory or iPod must be connected to enable track searching and playback. (See “USB MEMORY OPERATION” on page 236 and “iPod OPERATION” on page 241.)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
 - When the USB memory or iPod data has changed.
 - When the voice recognition language is changed. (See page 46.)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.
- While “Play Music” is displayed in the “Shortcut menu” screen, say “**Play music**” to display the music screen from which searching for a track using a voice command can be performed.
- When “Play Music” is dimmed in the “Shortcut Menu” screen, it is not possible to search for a track using a voice command. In this situation, reduce the amount of music data in the USB memory or iPod and update the recognition data to enable searching by voice command.

1. VOICE COMMAND SYSTEM OPERATION

2. NATURAL SPEECH INFORMATION (ENGLISH ONLY)

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation. Not all voice commands are displayed in the short cut menu.

INFORMATION

- The “Set a Destination”, “Use the Phone”, “Play Music” and “Get Information” commands displayed on the “Shortcut Menu” screen can be operated using natural language speech recognition technology.
- If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

EXPRESSION EXAMPLES FOR EACH FUNCTION

Command	Expression examples
“Go Home”	<i>Let's go home. Take me home.</i>
“Enter an Address”	<i>I wanna enter an address, please. Put in an address.</i>
“Find Nearby <POI category>”	<i>Find nearby <Restaurants> for me. I need to see the nearby <Restaurants>.</i>
“Call <name> <type>”	<i>Get me <Robert Brown>. I need to call <Robert Brown> at <Work> right away.</i>
“Dial <number>”	<i>Please dial the number <3334445555>. Ring <3334445555>.</i>
“Play Artist <name>”	<i>Play the artist <XXXXX>. I'd like to hear the band <XXXXX>.*</i>
“Play Album <name>”	<i>Play album <XXXXX>. Music from album <XXXXX>.*</i>

*: Say the desired artist name or album name in the place of the “<>”.

Command	Expression examples
"Traffic"	<i>How's the traffic? Check the traffic.</i>
"Weather"	<i>What's the weather like? Let's get a forecast.</i>
"Sports Scores"	<i>Team scores. How are my favorite teams doing?</i>
"Stock Quotes"	<i>Stock quotes. How are my stocks do- ing?</i>
"Fuel Prices"	<i>Let's check fuel prices. Find the cheapest gas prices.</i>

INFORMATION

- Commands that are not displayed in the "Shortcut Menu" screen can be accessed from the main menu.
- For example, to make an "International Call", say "**Main menu**" while the "Shortcut Menu" screen is being displayed. Then say "**Use the phone**" followed by saying the desired number, e.g. "**123456789**".


1. VOICE COMMAND SYSTEM OPERATION

3. EXPANDED VOICE COMMANDS

Touching “On” next to “Expanded Voice Commands” on the “Voice Settings” screen enables voice command operation of the audio/video system. (See page 53.) For more information on operations that can be controlled using expanded voice commands, refer to “COMMAND LIST”. (See page 279.)

VOICE COMMAND EXAMPLE: TURN THE AUDIO SYSTEM ON

- 1 Press the talk switch.
- 2 Say “**Audio on**”.

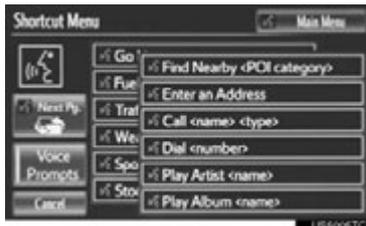

INFORMATION

- Commands relating to operation of the audio/video system can only be performed when the audio system is turned on.
- Expanded voice commands can be recognized when the “Shortcut Menu” screen is displayed.

1. VOICE COMMAND SYSTEM OPERATION

4. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- All commands are listed in the table.
 - For devices that are not installed in the vehicle, the related commands will not be displayed in the “Shortcut Menu” screen. Also, according to conditions, other commands may not be displayed in the “Shortcut Menu” screen.
 - The functions available may vary according to the navigation system installed.
- Voice recognition language can be changed. (See “SELECTING A LANGUAGE” on page 46.)

▶ “Set a Destination”

Command	Action	Shortcut Menu
“Find Nearby <POI category>”	Displays a list of <POI category* ¹ > near the current position.	○
“Enter an Address”	Enables setting a destination by saying the address.	○
“Go Home”	Displays the route to home.	○
“Destination by Phone Number” ^{*2}	Enables setting a destination by saying the phone number.	—

*1: For example; Gas stations, Restaurants, etc.

*2: To use this function, say “**Main menu**” and then “**Set a destination**” while the “Shortcut Menu” screen is being displayed.

6

VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION

▶“Use the Phone” (See “BY VOICE RECOGNITION” on page 147.)

Command	Action	Shortcut Menu
“Call <name> <type>”	Calls made by saying a name from the phone-book. For example: Say “ Call John Smith ”, “ Call John Smith, mobile ” etc.	○
“Dial <number>”	Calls made by saying the phone number. For example: Say “ Dial 911 ”, “ Dial 5556667777 ” etc.	○
“International Call” ^{*1}	Calls international numbers by saying the phone number.	—

*1: To use this function, say “**Main menu**” and then “**Use the phone**” while the “Shortcut Menu” screen is being displayed.

▶“Play Music”

Command	Action	Shortcut Menu
“Play Artist <name>”	Plays tracks by the selected artist. For example: Say “ Play artist <XXXXX> ” ^{*1}	○
“Play Album <name>”	Plays tracks from the selected album. For example: Say “ Play album <XXXXX> ” ^{*1}	○
“Play Song <name>” ^{*2}	Plays the selected track. For example: Say “ Play song Summertime ”, “ Play song Concerto in A Major ” etc.	—
“Play Playlist <name>” ^{*2}	Plays tracks from the selected playlist. For example: Say “ Play playlist My Favorite Songs ”, “ Play Playlist Classic Hits ” etc.	—

*1: Say the desired artist name or album name in the place of the “<>”.

*2: To use this function, say “**Main menu**” and then “**Play music**” while the “Shortcut menu” screen is being displayed.

▶ “Get Information”

Command	Action	Shortcut Menu
“Traffic”	Displays the traffic incident list.	O
“Weather”	Displays weather information.	O
“Sports Scores”	Displays the sports list.	O
“Stock Quotes”	Displays the stocks list.	O
“Fuel Prices”	Displays the fuel prices list.	O

▶ Select audio mode

When Expanded Voice Commands are turned “On”. (See page 278.)

Command	Action	Shortcut Menu
“Radio”	Sets the audio mode to radio.	O
“AM”	Selects the AM band.	O
“FM”	Selects the FM band.	O
“Satellite radio”	Selects the satellite radio mode.	O
“Disc”	Selects the disc audio mode.	O
“Auxiliary”	Selects the auxiliary audio mode.	O
“Bluetooth* audio”	Selects the Bluetooth® audio mode.	O
“iPod”	Selects the iPod audio mode.	O
“USB audio”	Selects the USB audio mode.	O
“Audio on”	Turns the audio system on.	O
“Audio off”	Turns the audio system off.	O

6

VOICE COMMAND SYSTEM

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INFORMATION

- Commands that have a “O” in the Shortcut Menu column can be recognized from the “Shortcut Menu” screen.
- Commands that have a “—” in the Shortcut Menu column can only be recognized from the screen that they are displayed in.

1. VOICE COMMAND SYSTEM OPERATION

7

INFORMATION

1 INFORMATION DISPLAY

- 1. **FUEL CONSUMPTION** 284
 - FUEL CONSUMPTION 284
- 2. **MAP DATABASE VERSION AND COVERAGE AREA**..... 285
 - MAP INFORMATION..... 285
 - CERTIFICATION 286

2 XM FUNCTION-OVERVIEW

- 1. **XM SERVICES** 287

3 XM FUNCTION OPERATION

- 1. **XM Sports** 288
 - RECEIVE SPORTS INFORMATION ... 288
 - XM Sports SETTINGS — ADD OR DELETE TEAMS 289
- 2. **XM Stocks** 291
 - RECEIVE STOCK DATA 291
 - XM Stocks SETTINGS — ADD OR DELETE STOCKS..... 292
- 3. **XM Fuel Prices** 294
 - SHOW XM Fuel Prices INFORMATION 294
 - VIEW DETAILED FUEL PRICE INFORMATION 294
 - XM Fuel Prices SETTINGS..... 295
- 4. **XM NavWeather™** 297
 - SHOW XM NavWeather™ INFORMATION 297
 - WEATHER INFORMATION 298
 - WEATHER WARNINGS 299
 - XM NavWeather™ INDICATOR 299
- 5. **XM NavTraffic®** 300
 - SHOW TRAFFIC EVENT 300
 - SHOW XM NavTraffic® INFORMATION 301

4 SETUP

- 1. **XM SETTINGS**..... 303

1

2

3

4

5

6

7

8

9

1. INFORMATION DISPLAY

1. FUEL CONSUMPTION

FUEL CONSUMPTION

Fuel consumption information, such as that shown below, can be displayed on the screen. For details see Section 1-1 of "Owner's Manual".

- Energy monitor
- Consumption

 
1. INFORMATION DISPLAY

2. MAP DATABASE VERSION AND COVERAGE AREA

MAP INFORMATION

Coverage areas and legal information can be displayed and map data can be updated.

- 1 Press the “INFO/APPS” button.




- 2 Touch “Map Data”.



- The “Map Information” screen will be displayed.

INFORMATION


- Map data updates are available for a fee. Contact your Toyota dealer for further information.
- The “Map Information” screen displays
 - 1 “Map Version” and
 - 2 “Map Update ID”. This data is needed to perform a map data update.

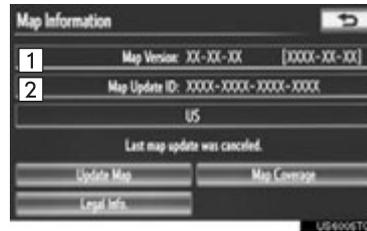

LEGAL INFORMATION

Legal information related to the map data can be displayed.

- 1 Press the “INFO/APPS” button.
- 2 Touch “Map Data” on the “Information” screen.
- 3 Touch “Legal Info.”.

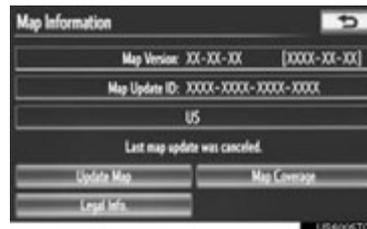

- The “Legal Information” screen will be displayed.

7


INFORMATION

1. INFORMATION DISPLAY

MAP COVERAGE

Map data coverage areas can be displayed.

- 1 Press the “**INFO/APPS**” button.
- 2 Touch “**Map Data**” on the “Information” screen.
- 3 Touch “**Map Coverage**”.

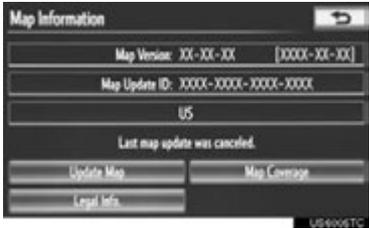

- The “Map Data Coverage” screen will be displayed.

CERTIFICATION

► For vehicles sold in Canada

- Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Category II radiocommunication device complies with Industry Canada Standard RSS-310.
- L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes: (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif. Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

2. XM FUNCTION-OVERVIEW

1. XM SERVICES

XM services are subscription-based XM Satellite Radio services to provide convenient features to subscribers.

- With an active XM subscription, the following features are available:
 - XM Sports*¹ (See page 288.)
 - XM Stocks*¹ (See page 291.)
 - XM Fuel Prices*² (See page 294.)
 - XM NavWeather™*² (See page 297.)
 - XM NavTraffic®*² (See page 300.)

*¹: Available at no extra charge with an active XM Satellite Radio subscription.

*²: Available via separate XM subscription(s).

SUBSCRIPTION(S)

- XM NavTraffic®, XM NavWeather™ and XM TravelLink require separate XM subscription(s). XM Sports*, XM Stocks* and XM Fuel Prices are available with an XM TravelLink subscription. After a 90-day trial, you must contact XM and set up the appropriate XM subscription(s) to continue receiving these services.

*: XM Sports and XM Stocks are included with an XM Satellite Radio subscription.

AVAILABILITY OF SERVICE(S)

- The XM NavTraffic® service is available in the contiguous 48 U.S. states and Canada.
- The XM NavWeather™, XM Sports, XM Stocks and XM Fuel Prices services are available in the contiguous 48 U.S. states.

ACTIVATION OF SERVICE(S)

- To receive XM NavTraffic®, XM NavWeather™, XM Sports, XM Stocks and XM Fuel Prices services, the XM service must be activated. To activate the service, call the XM Listener Care Center at 1-800-967-2346 (U.S.A.) or 1-877-209-0079 (Canada).
- Customers should have their radio ID ready. The radio ID can be found by selecting "CH 000" on the radio. For details, see "DISPLAYING THE RADIO ID" on page 209.

INFORMATION

- For details about the XM service coverage areas, refer to www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada), or call XM Listener Care Center at 1-800-967-2346 (U.S.A.) or 1-877-209-0079 (Canada).
- For further details about the service, contact your Toyota dealer.
- XM Satellite Radio is responsible for all fees and services, which are subject to change.

7

 
INFORMATION

3. XM FUNCTION OPERATION

1. XM Sports

XM Sports is a service included with an XM Satellite Radio subscription. This service is also available with an XM TravelLink subscription. With this service, you can receive updates via the navigation system on your personally selected sports teams.

- 1 Press the “**INFO/APPS**” button.



- 2 Touch “**XM Sports**”.




- The “XM Sports” screen is displayed.
- The following operations can be performed:
 - Sports information can be received. (See page 288.)
 - XM Sports settings can be set. (See page 289.)

RECEIVE SPORTS INFORMATION

The desired teams must be added in order to receive information. (See page 289.)

- 1 Press the “**INFO/APPS**” button.
- 2 Touch “**XM Sports**” on the “Information” screen.
- 3 Touch the desired team to receive information.

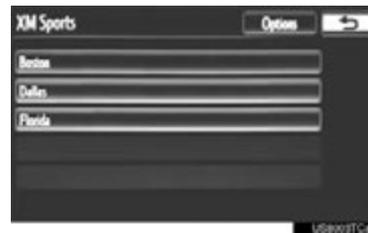

- Teams for which there is no current data available will be dimmed and you will not be able to select them.
- 4 Touch the individual information item to hear it, or touch “**Read All**” to hear all available information for that team.




- The selected information will be read out in its entirety.


XM Sports SETTINGS — ADD OR DELETE TEAMS

To input your personalized XM Sports team.

- 1 Press the **“INFO/APPS”** button.
- 2 Touch **“XM Sports”** on the “Information” screen.
- 3 Touch **“Options”**.

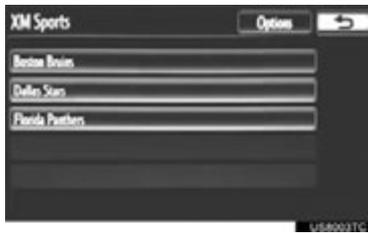


- 4 Perform each setting according to the procedures outlined on the following pages.

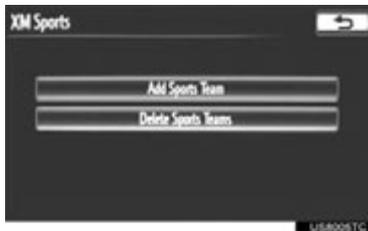

- Personalized XM Sports teams can also be input from the “Setup” screen. (See “XM SETTINGS” on page 303.)


ADD SPORTS TEAM

- 1 Touch **“Add Sports Team”**.

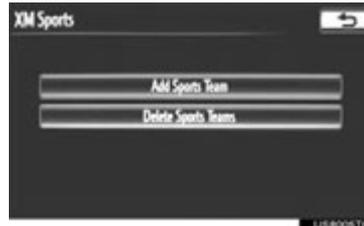

- Up to 5 teams can be added and saved in the system for which information will be received. The desired teams can be changed at any time. Teams must be added one at a time.

- 2 Touch the desired sporting league of the team.

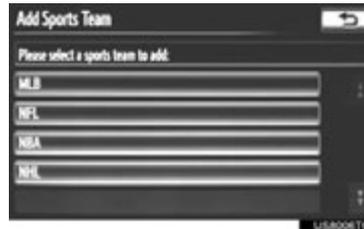

- 3 Touch the name of the desired team to be added from the list that appears.



- 4 Touch **“Yes”** to confirm or **“No”** to cancel.


7
INFORMATION

DELETE SPORTS TEAMS

- 1 Touch **“Delete Sports Teams”**.



- 2 Touch the individual sports team to be deleted or touch **“Select All”** to delete all the teams, and touch **“Delete”**.

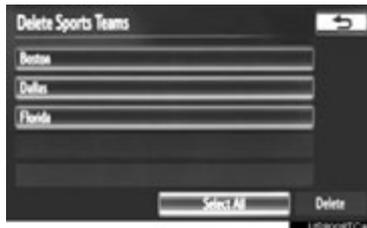


- 3 Touch **“Yes”** to confirm or **“No”** to cancel.

3. XM FUNCTION OPERATION


2. XM Stocks

XM Stocks is a service included with an XM Satellite Radio subscription. This service is also available with an XM TravelLink subscription. With this service, you can receive updates via the navigation system on your personally selected stocks.

- 1 Press the “INFO/APPS” button.

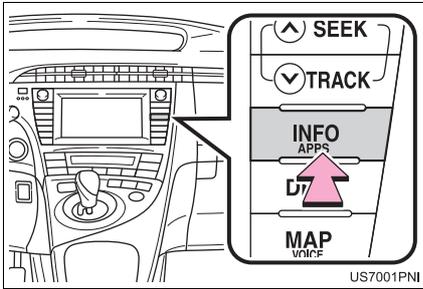

- 2 Touch “XM Stocks”.

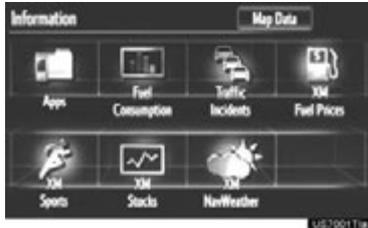


- The “XM Stocks” screen is displayed.
- The following operations can be performed:
 - Stock data can be received. (See page 291.)
 - XM Stocks setting can be set. (See page 292.)

RECEIVE STOCK DATA

You must first add your desired stocks prior to receiving data. (See page 292.)

- 1 Press the “INFO/APPS” button.
- 2 Touch “XM Stocks” on the “Information” screen.
- 3 Touch an individual stock to hear its related data, or touch “Read All” to hear the data for all the stocks saved in the system.

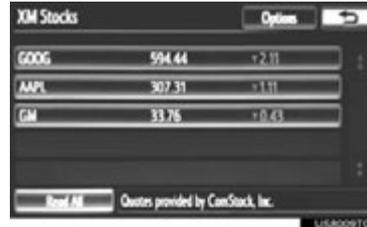


- The selected data will be read out in its entirety.
- Stock data may be delayed by approximately 20 minutes.

3. XM FUNCTION OPERATION


XM Stocks SETTINGS — ADD OR DELETE STOCKS

To input your personalized XM Stocks settings.

- 1 Press the **“INFO/APPS”** button.
- 2 Touch **“XM Stocks”** on the “Information” screen.
- 3 Touch **“Options”**.

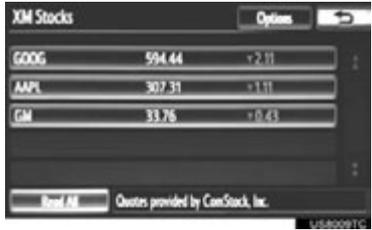

- 4 Perform each setting according to the procedures outlined on the following pages.

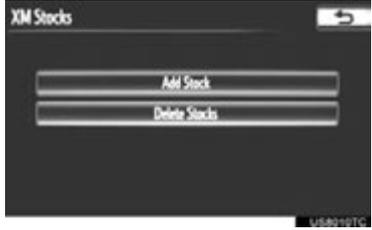

● Personalized XM Stocks settings can also be input from the “Setup” screen. (See “XM SETTINGS” on page 303.)

ADD STOCK

- 1 Touch **“Add Stock”**.




- 2 Input the desired stock symbol.




- 3 When finished, touch **“OK”**.
 - Up to 10 individual stock symbols can be added and saved in the system for which information will be received. Stocks must be input one at a time. To enter a stock, the symbol of the desired stock must be known.

DELETE STOCKS

- 1 Touch **"Delete Stocks"**.

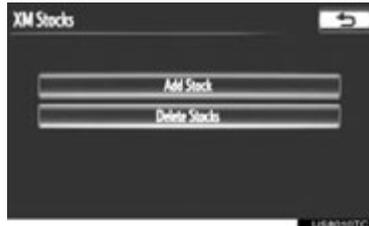

- 2 Touch the individual stock to be deleted or touch **"Select All"** to delete all the stocks, and touch **"Delete"**.

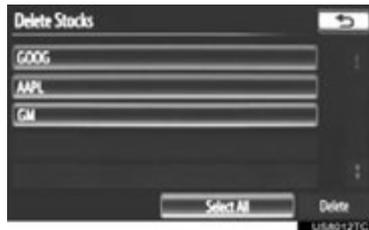

- 3 Touch **"Yes"** to confirm or **"No"** to cancel.

 
3. XM FUNCTION OPERATION

3. XM Fuel Prices


XM Fuel Prices is a service included with an XM TravelLink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

SHOW XM Fuel Prices INFORMATION

- 1 Press the “**INFO/APPS**” button.



- 2 Touch “**XM Fuel Prices**”.

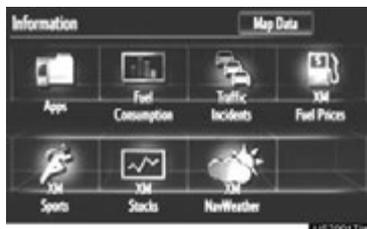

- The “Fuel Price” screen is displayed.

XM Fuel Prices SCREEN



- 1 Gas station name
- 2 Sort

VIEW DETAILED FUEL PRICE INFORMATION

- 1 Press the “**INFO/APPS**” button.
- 2 Touch “**XM Fuel Prices**” on the “Information” screen.
- 3 Touch the desired gas station from the list.



- The location of the selected gas station will be displayed on the map screen.

4 Touch “Info”.



- When the map scale is at the maximum range of 0.5 miles (800 m), [minus icon] is not shown. When the map scale is at the minimum range of 150 ft. (50 m), [plus icon] is not shown.



“**Mark**”: Touch to mark the selected gas station on the map screen.

“**Go to** [plus icon]”: Touch to set the selected gas station as a destination with route directions.

“**Add to Route**”: Touch to add the selected gas station as a destination.

“**Detail**”: Touch to read the selected gas station’s information.

- If [phone icon] is touched, the registered phone number can be called.

INFORMATION


- The information displayed is received via satellite radio. Depending on the time the information is received, the displayed information may not be up to date.

XM Fuel Prices SETTINGS

The desired fuel type, preferred brand, and show prices reported can be registered.

REGISTER FUEL TYPE


- 1 Press the “**SETUP**” button.

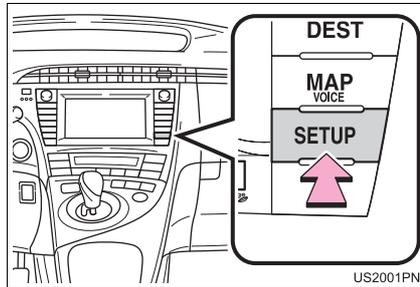

- 2 Touch “**Other**”.



- 3 Touch “**XM Fuel Prices**”.

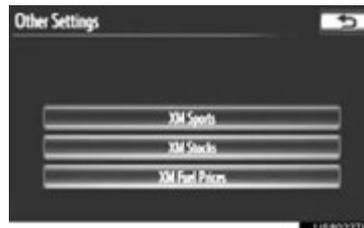

- 4 Touch **“Fuel Type”**.




- 5 Touch the desired fuel type.
- **“Premium”**, **“Midgrade”**, **“Regular”** or **“Diesel”** can be selected.

- 6 Touch **“Save”**.

REGISTER PREFERRED BRAND

- 1 Press the **“SETUP”** button.
- 2 Touch **“Other”** on the “Setup” screen.
- 3 Touch **“XM Fuel Prices”** on the “Other Settings” screen.
- 4 Touch **“Preferred Brand”**.

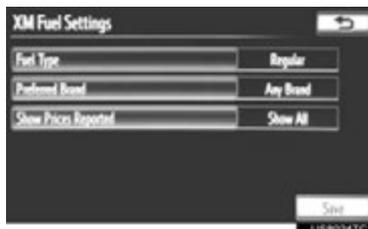

- 5 Touch the preferred brand.
- 6 Touch **“Save”**.

REGISTER SHOW PRICES REPORTED

- 1 Press the **“SETUP”** button.
- 2 Touch **“Other”** on the “Setup” screen.
- 3 Touch **“XM Fuel Prices”** on the “Other Settings” screen.
- 4 Touch **“Show Prices Reported”**.



- 5 Touch the desired period.
 - **“Last 24 Hours”**, **“Last 2 Days”** or **“Show All”** can be selected.
 - If **“Show All”** is selected, information about gas stations which fuel prices are not provided is also displayed on the list.
- 6 Touch **“Save”**.

3. XM FUNCTION OPERATION


4. XM NavWeather™

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map screen.

- The following operations can be performed:
 - Show XM NavWeather™ information: Weather forecast information is displayed on the map screen. (See page 297.)
 - Weather information: Weather information for the selected city is displayed. (See page 298.)
 - Weather warnings: Weather warnings issued within a radius of approximately 15 miles (25 km) or 7.8 miles (12.5 km) around the vehicle are displayed on the warning screen. (See page 299.)

SHOW XM NavWeather™ INFORMATION

- 1 Press the “INFO/APPS” button.

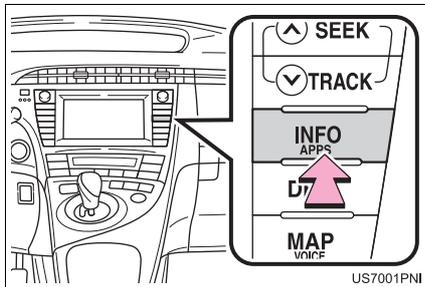

- 2 Touch “XM NavWeather”.



- The “XM NavWeather” screen is displayed.

XM NavWeather™ SCREEN



1 “Info”

- When the city icon is touched, “Info” is displayed on the map screen. Touching this screen button displays the “Forecast” screen. (See page 298.)

2 City icon

- When this screen button is touched, city names and “Info” are displayed on the upper part of the screen.

3 “Forecast”

- When this screen button is touched, the city selection screen is displayed.



- Touch a city to display weather information. Weather information of the selected city will be displayed. (See page 298.)

4 “Current Location”

- When “Current Location” is touched, the current position is displayed.

5 Zoom in/out screen button

- The scale of the map can be changed. Three zoom levels can be selected; 16 miles (26 km), 30 miles (48 km) and 60 miles (97 km).

7

INFORMATION


3. XM FUNCTION OPERATION

6 Weather icons and grids

- Inclement weather information is displayed on the map using weather icons and grids. Touching an icon shows the related information at the top of the screen.


Icon	Weather
	Tornado
	Hurricane
	Storm
	Flood
	Winter
	Wind
	Extremes
	Other
	Hail storm
	Severe thunderstorm
	Heavy fog
	Heavy freezing rain/ice
	Heavy snow
	Heavy rain

WEATHER INFORMATION

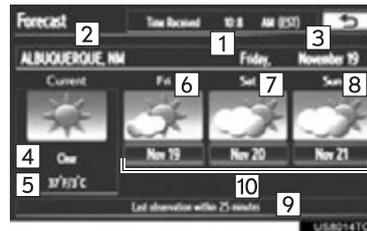

No.	Function
1	Received time
2	City name
3	Today's date
4	Current weather
5	Current temperature
6	Today's weather
7	Tomorrow's weather
8	Day after tomorrow's weather
9	Observed time (Time elapsed since last update)
10	Specified day's weather

- When the specified day's weather screen button is touched, weather information for a specified day is displayed.

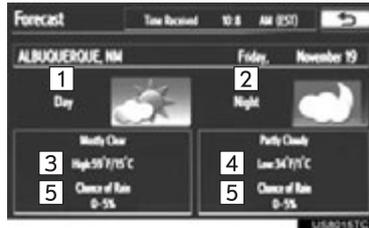

No.	Function
1	Daytime weather
2	Nighttime weather
3	Maximum temperature
4	Minimum temperature
5	Precipitation probability

WEATHER WARNINGS

Weather warnings issued within a radius of approximately 15 miles (25 km) or 7.8 miles (12.5 km) around the vehicle are displayed on the warning screen.



“Weather Map”: When this screen button is touched, the “XM NavWeather” screen is displayed.

“OK”: When this screen button is touched, the screen returns to the map of the current position.

XM NavWeather™ INDICATOR



- When an XM NavWeather™ warning is issued within the vicinity, the XM NavWeather™ indicator will appear on the map screen.

7

INFORMATION

3. XM FUNCTION OPERATION

5. XM NavTraffic®

The subscription-based XM NavTraffic® service allows the navigation system to display traffic information on the map screen.

The following operations can be performed:


- Show XM NavTraffic® Information: Traffic information is displayed on the map screen. (See page 301.)
- Auto Avoid Traffic: If any heavy congestion or moderate traffic has been detected on the guidance route, it may be possible for you to select another route offered by the system. (See page 115.)
- Traffic Incident Warning: Traffic congestion information is provided using voice guidance. (See page 54.)
- Show Free Flowing Traffic: Freely flowing traffic is shown by the arrow on the map. (See page 116.)

INFORMATION


- When the “Traffic Information” indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate.

SHOW TRAFFIC EVENT

- 1 Press the “INFO/APPS” button.

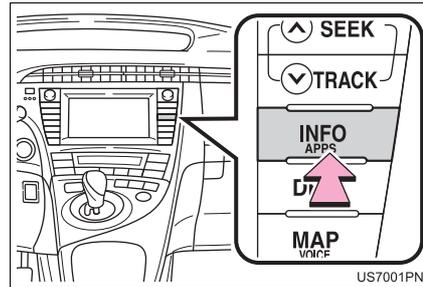

- 2 Touch “Traffic Incidents”.

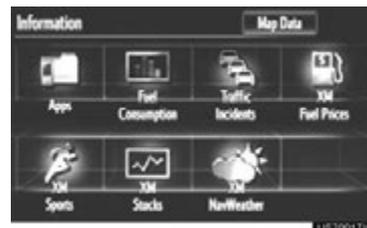

- A list of current traffic incidents is displayed along with information on the incident's distance and position relative to the vehicle.

- 3 Touch the desired traffic event.



“On Current Route”: Touch to display the traffic congestion information for the selected route, or the road which the current vehicle is on. If a route has not been set, **“On Current Road”** will be displayed.

4 This screen is displayed.



- Guidance route traffic information is displayed on the screen. Touch **“Detail”** to display detailed traffic event information.



SHOW XM NavTraffic® INFORMATION

1 Touch **“Show on Map”**.



2 Touch **“Traffic Information”**.



- The **“Traffic Information”** indicator is highlighted.

3 XM NavTraffic® information is displayed on the map screen.

▶ On the map screen



▶ On the freeway information screen



7

INFORMATION

3. XM FUNCTION OPERATION

1 XM NavTraffic® icon

- When any traffic information is received, the XM NavTraffic® icon will appear on the map screen. Touching the XM NavTraffic® icon on the screen will start voice guidance for the traffic information. (See page 37.)
- When the XM NavTraffic® icon is selected, voice guidance for the traffic information will start even if “Off” for “Traffic Incident Warning” is selected.

2 XM NavTraffic® information arrow

- When any XM NavTraffic® information is received, the XM NavTraffic® information arrow will appear on the map screen. The color of the arrow changes depending on the traffic information received.

Color	Function
Red	Heavy congestion
Yellow	Moderate traffic
Green	Freely flowing traffic

3 XM NavTraffic® indicator

- When any XM NavTraffic® information is received, the XM NavTraffic® indicator will appear on the screen. The color of the indicator changes depending on the traffic information received.

Color	Function
White	Traffic information has been received.
Yellow	Traffic restriction information on the guidance route has been received (screen button*).
Red	Congestion information on the guidance route has been received (screen button*).


*: Touching the XM NavTraffic® indicator will start voice guidance.

4. SETUP


1. XM SETTINGS

Used for changing settings for XM Sports, XM Stocks and XM Fuel Prices.


- 1 Press the **“SETUP”** button.

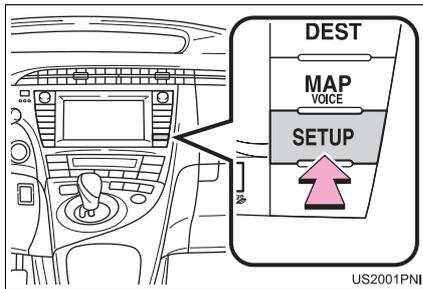

- 2 Touch **“Other”**.

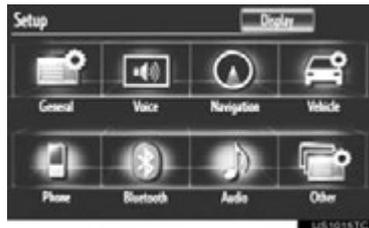

- 3 Touch the item to be set.

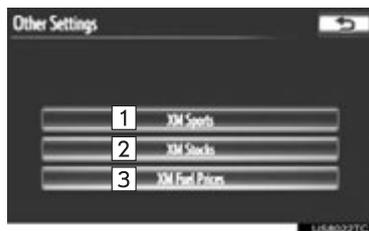

- On this screen, the following functions can be performed:

No.	Function	Page
1	Touch to set XM Sports.	288
2	Touch to set XM Stocks.	291
3	Touch to set XM Fuel Prices.	294

4. SETUP

8

APPS

1 ENTUNE-OVERVIEW

1. ENTUNE SERVICE	306
SUBSCRIPTION.....	307
AVAILABILITY OF SERVICE	307
INITIALIZING PERSONAL DATA.....	307
2. BEFORE USING ENTUNE	308
SETTINGS REQUIRED TO USE ENTUNE	308
USER REGISTRATION.....	308
REGISTERING THE ENTUNE APPLICATION	309

2 ENTUNE OPERATION


1. ACTIVATING “APPS”	310
ACTIVATING “APPS”	310
IF A MESSAGE APPEARS ON THE SCREEN	312
2. LINKING “APPS” AND NAVIGATION LOCAL FUNCTION.....	313
SETTING A DESTINATION USING “APPS”	314
MAKING A PHONE CALL USING “APPS”	314
3. INPUTTING KEYWORD OPERATION.....	315
INPUTTING A KEYWORD USING THE SOFTWARE KEYBOARD	315
INPUTTING A KEYWORD USING THE VOICE RECOGNITION FUNCTION.....	315

1
2
3
4
5
6
7
8
9

1. ENTUNE-OVERVIEW

1. ENTUNE SERVICE*¹

Entune is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before Entune can be used, a few settings need to be performed. (See page 308.)

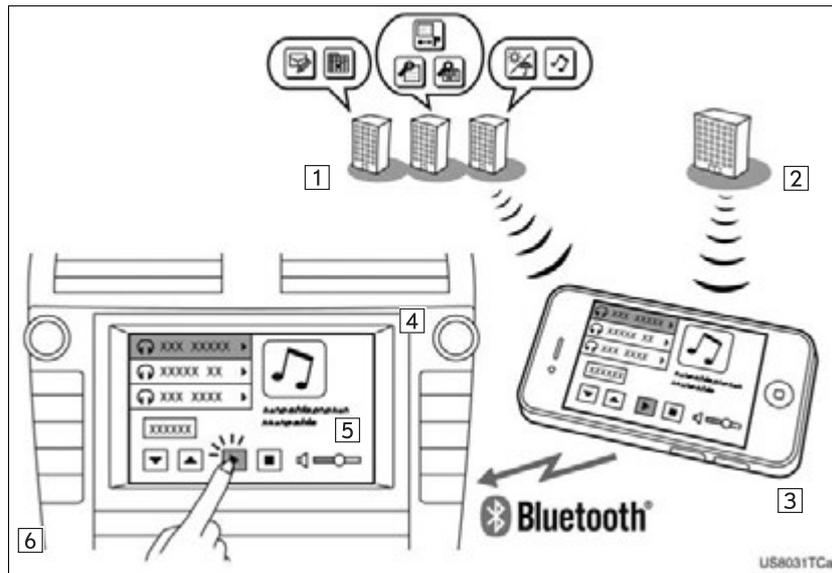

No.	Name	Function
1	Contents provider	Provides contents to the navigation system via a cellular phone.
2	Application server	Provides applications to the navigation system via a cellular phone.
3	Cellular phone* ²	Using the Entune application, communication is relayed between the navigation system, the application server and the contents provider.
4	Application player	Runs applications on the navigation system. The navigation system is equipped with an application player.
5	Applications ("Apps")	Displays and sounds the usable contents from the contents providers via a cellular phone on the application player.
6	Navigation system	Contents received, via a cellular phone, from the contents provider servers are displayed on the navigation screen.

*1: Entune is available in the 48 states, D.C. and Alaska.

*2: For known compatible phones, refer to <http://www.toyota.com/entune/>.

SUBSCRIPTION

- Entune will be available on a 3 year trial period included upon purchase of a new vehicle. User registration is required to start using the service. (See page 309.)
- When 3 years have elapsed after purchasing a new vehicle, a fee will be charged to renew the contract.*
- Services requiring a separate contract can also be used.*

*: For details, refer to <http://www.toyota.com/entune/> or call 1-800-331-4331.

AVAILABILITY OF SERVICE

- Entune is available in the 48 states, D.C. and Alaska.

INFORMATION

- When using Entune, depending on the details of your cellular phone contract, data usage fees may apply. Confirm data usage fees before using this service.
- In this section, the required operations to activate "Apps", connect a cellular phone to the navigation system and registration steps for Entune are explained. For details regarding Entune operations and each of the "Apps", refer to <http://www.toyota.com/entune/>.

INITIALIZING PERSONAL DATA

The personal data used in "Apps" can be reset. (See "DELETING PERSONAL DATA" on page 52.)

- The following personal data can be deleted and returned to their default settings:
 - Downloaded contents
 - Radio stations that were listened to
 - Input history

INFORMATION

- Once initialized, data will be erased. Pay close attention when initializing the data.

1. ENTUNE-OVERVIEW

2. BEFORE USING ENTUNE

SETTINGS REQUIRED TO USE ENTUNE

Perform the settings in the following order.

1 User registration



2 Download the Entune application to your cellular phone.



3 Register the cellular phone with the navigation system.

In order to use Entune, the following settings must first be performed:

- User registration with the service contract (See page 308.)
- Download the Entune application onto your cellular phone, and login to the application. (See page 309.)
- Register the cellular phone that the Entune application was downloaded to with the navigation system. (See page 309.)
- Register a Bluetooth® phone with the hands-free system. (For detailed information about registration and settings, see “Bluetooth® SETTINGS” on page 179.)

USER REGISTRATION

When purchasing the vehicle, an email address is registered at your Toyota dealer. If your email address was not registered at your Toyota dealer, your email address can be registered at the Entune website. A user registration guidance email containing a web address will be sent.

- 1** Perform user registration from the designated web address.

REGISTERING THE ENTUNE APPLICATION

- 1 Download the Entune application using your cellular phone.
- 2 Run the Entune application on your cellular phone.
- 3 Enter a user name and password into the Entune application. Login to the application.

INFORMATION

- “Apps” can only be used when the Entune application has been downloaded to your cellular phone and the application is running.
- If your email address was not registered at your Toyota dealer when the vehicle was purchased, an email address can be registered at <http://www.toyota.com/entune/>.
- Entune operational procedures can also be confirmed by visiting <http://www.toyota.com/entune/>.
- In order to use “Apps”, it is necessary to run the Entune application, enter your user name and password and display the main menu on the cellular phone.
- An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using Entune by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.

8

APPS


2. ENTUNE OPERATION

1. ACTIVATING “APPS”


Each time “Apps” is activated, the system checks for updates. When there are no updates available, the main menu screen will be displayed right after a screen indicating that updates are being checked for has been displayed.

ACTIVATING “APPS”


- 1 Press the “INFO/APPS” button.

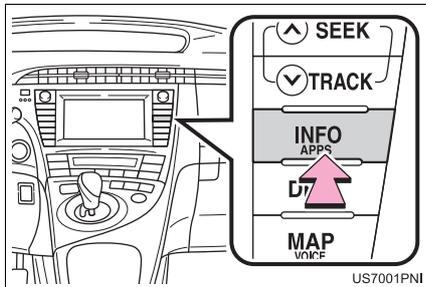

- 2 Touch “Apps”.

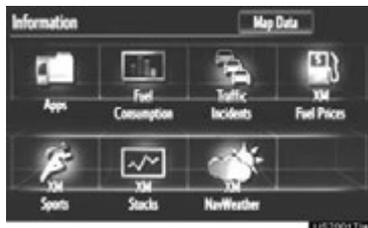


- 3 A screen indicating that updates are being checked for will be displayed.

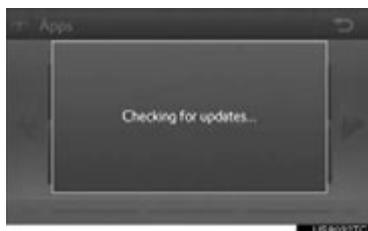

- 4 Touch “Update”.




- To cancel updating, touch “Cancel”.
 - After touching “Cancel”, the “Information” screen will be displayed.
 - The “Information” screen will also be displayed if updating fails.
- 5 A screen indicating that an update is in progress will be displayed.

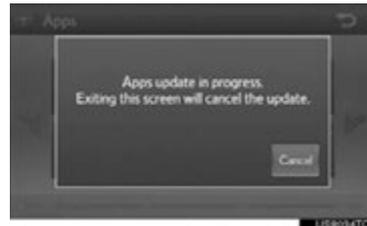


- To stop updating, touch “Cancel”.
- After touching “Cancel”, the “Information” screen will be displayed.
- The “Information” screen will also be displayed if updating fails.

- 6 Touch “OK”.

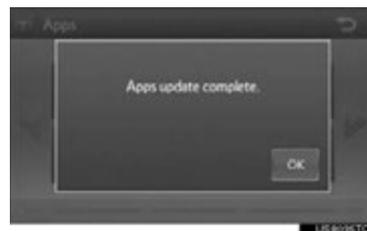

- 7 When updating is complete, the main menu screen will be displayed.

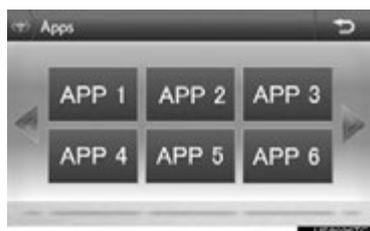

- The screen shown above is only an example. The actual screen may be different.
- For details about the function and service of each application displayed in the main menu, refer to <http://www.toyota.com/entune/>.

2. ENTUNE OPERATION

IF A MESSAGE APPEARS ON THE SCREEN

When problems occur starting up the application player, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Display conditions	Corrective action
"This feature is unavailable during an emergency call."	Safety Connect is being implemented.	After Safety Connect is finished, perform the operation again.
"This feature is unavailable while transferring contacts."	Contacts are being transferred manually from the phonebook.	When the transfer of contacts is complete, perform the operation.
"There is a problem with the Bluetooth* connection. For troubleshooting assistance, please visit toyota.com or call 1-800-331-4331."	The cellular phone cannot be connected.	Refer to http://www.toyota.com/entune/ to confirm if the phone is compatible or not.
"This feature is unavailable during a handsfree call."	A hands-free call is in progress.	After the hands-free call is finished, perform the operation.
"To use the services, an active application needs to be running on your phone. For more information, please visit toyota.com ."	The Entune application cannot be connected to SSP.	Refer to http://www.toyota.com/entune/ to confirm if the phone is SSP compatible or not, and then activate the Entune application.
"Communication error. Please try again."	Communication was disconnected.	After a few moments, retry the operation.


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. ENTUNE OPERATION


2. LINKING “APPS” AND NAVIGATION LOCAL FUNCTION

The navigation system's setting a destination and making a hands-free call can be performed via “Apps” of Entune.

- 1 Press the “INFO/APPS” button.

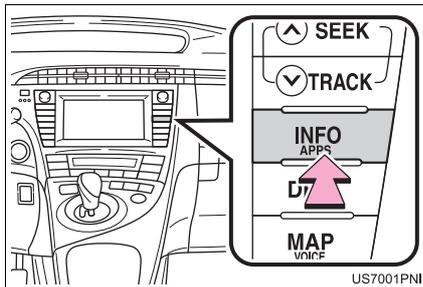

- 2 Touch “Apps”.

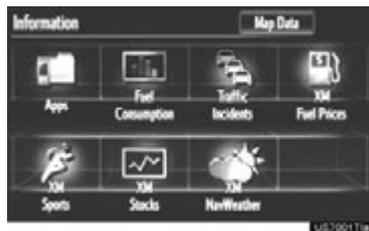

- 3 A screen indicating that updates are being checked for will be displayed.



- 4 When updating is complete, the main menu screen will be displayed.



- The screen shown above is only an example. The actual screen may be different.
- For details about the function and service of each application displayed in the main menu, refer to <http://www.toyota.com/entune/>.

INFORMATION


- Some parts of “Apps” can be adjusted using the switches on the steering wheel.

2. ENTUNE OPERATION

SETTING A DESTINATION USING “APPS”

Locations that were searched using “Apps” can be set as a destination.

1 Touch “Map”.

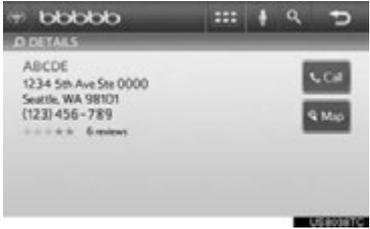

2 Touch “Go to”.



3 To start guidance, touch “OK”.




- For the operation of the route guidance screen and the function of each screen button, see “STARTING ROUTE GUIDANCE” on page 75.


MAKING A PHONE CALL USING “APPS”

Phone calls can be made to locations which were searched using “Apps”.

1 Touch “Call”.

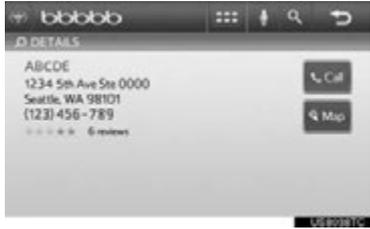

2 Touch “Yes”.

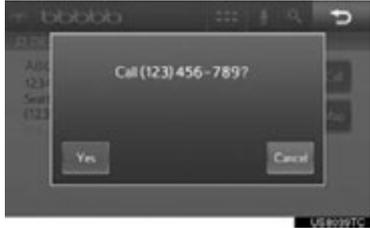

- To cancel making a phone call, touch “Cancel”.

3 A screen indicating that a call is in progress will be displayed.



- For phone operation and the function of each screen button, see “TALK ON THE Bluetooth® PHONE” on page 151.

2. ENTUNE OPERATION


3. INPUTTING KEYWORD OPERATION

A keyword can be input to “Apps” by the software keyboard or voice recognition function.

- The keyboard layout can be changed. (See page 47.)

INPUTTING A KEYWORD USING THE SOFTWARE KEYBOARD


- 1 Touch the character input space.

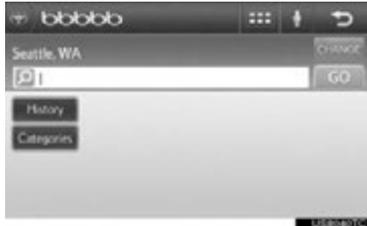

- 2 Touch the screen buttons to input the desired characters, and then touch “OK”.



- 3 Input characters will be reflected on the character input space.

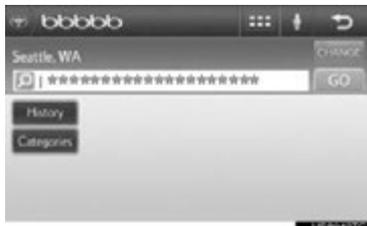


- For details on operating the keyboard, see “INPUTTING LETTERS AND NUMBERS/LIST SCREEN OPERATION” on page 28.

INPUTTING A KEYWORD USING THE VOICE RECOGNITION FUNCTION

Voice recognition is a function that uses the center’s database to enable the use of the voice recognition function.

- 1 Touch the microphone screen button.

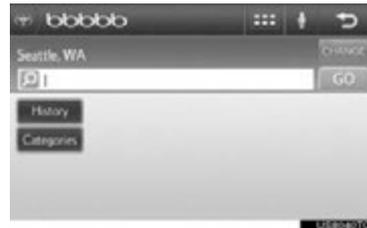

- 2 When this screen is displayed, say the desired keyword.



- Completion of saying the keyword will be detected automatically.



2. ENTUNE OPERATION

- 3 Search results will be displayed on the screen.



- The screen shown above is only an example. The actual screen may be different.

9

PERIPHERAL MONITORING SYSTEM

1 REAR VIEW MONITOR SYSTEM

1. REAR VIEW MONITOR SYSTEM OPERATION	318
AREA DISPLAYED ON SCREEN.....	320
THE REAR VIEW MONITOR SYSTEM CAMERA	320

1

2

3

4

5

6

7

8

9

1. REAR VIEW MONITOR SYSTEM

1. REAR VIEW MONITOR SYSTEM OPERATION

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle while backing up. The image is displayed in reverse on the screen. This reversed image is a similar image to the one on the inside rear view mirror.

- 1 To display the rear view image on the screen, shift the shift position to "R" when the "POWER" switch is in ON mode and the back door is completely closed.

- If you move the shift position out of the "R", the screen returns to the previous screen. Operating another function of the navigation system will display another screen.
- The rear view monitor system is a supplement device intended to assist back up. When backing up, be sure to check behind and all around the vehicle visually.

CAUTION

- Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear. Use caution, just as you would when backing up any vehicle.
- Never back up while looking only at the screen. The image on the screen is different from actual conditions. Depicted distances between objects and flat surfaces will differ from actual distance. If you back up while looking only at the screen, you may hit a vehicle, a person or an object. When backing up, be sure to check behind and all around the vehicle visually and with mirrors before proceeding.
- Do not use the system when the back door is not completely closed.
- Use your own eyes to confirm the vehicle's surroundings, as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle visually and with mirror before proceeding.

**NOTICE**

- If the back of the vehicle is hit, the position and mounting angle of the camera may change. Be sure to have the camera's position and mounting angle checked at your Toyota dealer.
- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- Do not hit the camera or subject it to strong impact as this may cause its position and mounting angle to change.
- Do not strongly rub the camera lens. If the camera lens is scratched, it cannot transmit a clear image.
- Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
- When replacing the tires, please consult your Toyota dealer. If you replace the tires, the area displayed on the screen may change.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.


INFORMATION

- If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow, or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.

1. REAR VIEW MONITOR SYSTEM


AREA DISPLAYED ON SCREEN

The image displayed on the screen is an approximation only.

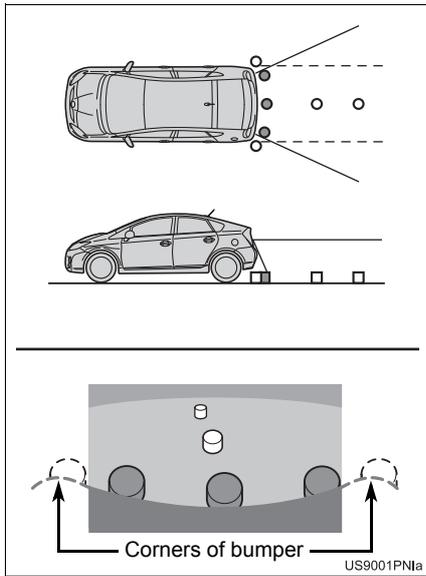

INFORMATION


- The area detected by the camera is limited. The camera does not detect objects which are close to either corner of the bumper or under the bumper.

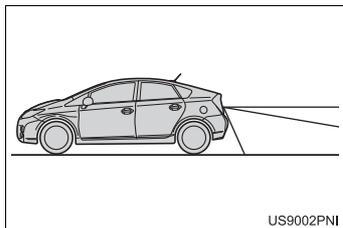

- The area displayed on the screen may vary according to vehicle orientation or road conditions.

THE REAR VIEW MONITOR SYSTEM CAMERA

The rear view monitor system camera is located as shown in the illustration.

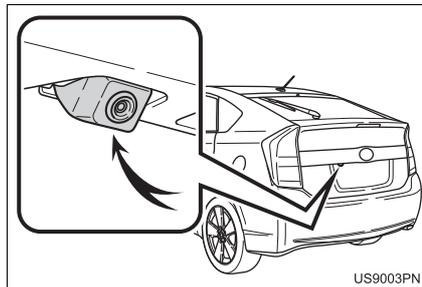


INFORMATION

- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- When the camera is used under fluorescent lights, sodium lights or mercury lights etc., the lights and the illuminated areas may appear to flicker.
- In the following cases, it may become difficult to see the images on the screen, even when the system is functioning:
 - In the dark (for example, at night)
 - When the temperature near the lens is high or low
 - When water droplets are adhering to the camera, or when humidity is high (for example, when it rains)
 - When foreign matter (for example, snow or mud) is adhering to the camera
 - When the camera has scratches or dirt on it
 - When the sun or the beam of headlights is shining directly into the camera lens

INFORMATION


- If a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera, the smear effect* peculiar to the camera may occur.

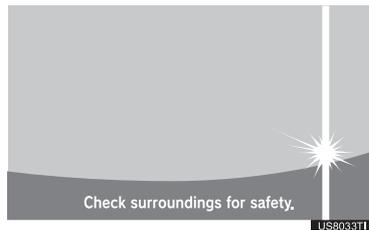

*: Smear effect

A phenomenon that occurs when a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

 1. REAR VIEW MONITOR SYSTEM



INDEX

1

2

3

4

5

6

7

8

9

ALPHABETICAL INDEX

A

Adding destinations.....	86
Address book.....	102
Address book entries.....	102
AM.....	200
AM button.....	192
Apps.....	306
Audio.....	192
AUDIO button.....	192
Audio language code.....	230
Audio settings.....	267
HD Radio™ system settings.....	267
iPod settings.....	268
Audio/video remote controls (Steering switches).....	255
Audio/video system.....	192
Audio/video system operating hints.....	257
Caring for your DVD player and disc...	259
CD-R and CD-RW discs.....	263
iPod.....	258
MP3/WMA files.....	261
Radio reception.....	257
Terms.....	263
USB memory.....	259
Automatic Sound Levelizer (ASL).....	197
AUX port.....	199

B

Basic function.....	26
Bluetooth®.....	132
Bluetooth® audio.....	245
Connecting a Bluetooth® audio player.....	248
Playing Bluetooth® audio.....	249
Bluetooth® phone.....	139
Bluetooth® phone message function.....	154
Checking messages.....	154
New message notification.....	156
Replying (Quick reply).....	155
Bluetooth® settings.....	179
Detailed Bluetooth® settings.....	186
Registered devices.....	179
Selecting a Bluetooth® phone.....	183
Selecting portable player.....	185
Brightness.....	31, 226

C

Call on the Bluetooth® phone.....	143
By call history.....	145
By dial.....	143
By phonebook.....	143
By POI call.....	149
By speed dial.....	145
By voice recognition.....	147
Calling using an SMS/MMS message.....	149
CD.....	215
CLOSE button.....	192
Color.....	47, 226
Command list.....	279
Contrast.....	31, 226
Current position calibration.....	118
Current position display.....	33



D

Deleting destinations 87
Deleting personal data 52
Deleting previous destinations 111
Deleting set destinations 74
DEST button 10
“Destination” screen 20
Destination search 58
 By “Address” 60
 By “Address Book” 69
 By “Coordinates” 73
 By “Emergency” 70
 By home 59
 By “Intersection & Freeway” 70
 By “Map” 73
 By “Point of Interest” 63
 By preset destinations 59
 By “Previous Destinations” 69
 Selecting the search area 58
Detailed navigation settings 113
Detour setting 88
Dial 143, 147
DISC button 192
Distance and time to destination 85
DSP control 197
DVD 215
DVD player 215
 DVD options 224
 DVD player and
 DVD video disc information 233
 Ejecting a disc 215
 If the player malfunctions 233
 Inserting a disc 215
 Operating a DVD disc 222
 Playing a disc 216
 Playing a DVD disc 223
 Playing an audio disc 217
 Playing an MP3/WMA disc 219

E

Emergency 70
Entune 306
Expanded voice commands 278

F

FM 200
FM button 192
Fuel consumption 284
Function index 18

G

General settings 43
GPS (Global Positioning System) 10, 127

H

HD Radio™ 203
Heading-up screen 41
Home 12, 17, 59, 98

I

INFO/APPS (INFO) button 10
Information 284
“Information” screen 24
Inputting letters and numbers 28
Internet radio broadcast 214
iPod 241
 Connecting iPod 241
 Playing iPod 242



ALPHABETICAL INDEX

K

Keyboard layout 47

L

Language 46

Limitations of the navigation system 127

List screen operation 28

M

Map 73

Map database information
and updates 330

Map database version
and coverage area 285

Map icons 42

Map scale 41

MAP/VOICE button 10

MP3 219

N

Natural speech information 276

Navigation system 58

North-up screen 41

O

Operation flow: Guiding the route 16

Orientation of the map 41

Overview button and guidance screen 10

P

Pausing guidance 92

Phone 132

Phone (Hands-free system
for cellular phone) 134

About the phonebook in this system 136

Using the phone switch 135

Using the steering switches 136

When selling or
disposing of the vehicle 137

PHONE button 132

Phone settings 157

Message settings 172

Phone display settings 176

Phone sound settings 157

Phonebook 159

Phonebook 143, 159

POI call 149

POI icons 93

Point of Interest 63

Preset destinations 14, 59

Previous destinations 69

PWR VOL knob 192

Q

Quick guide 10

Quick reference 20, 132, 192



R

Radio 200
 Listening to the radio 200
 Presetting a station 200
 Radio broadcast data system 201
 Selecting a station 201
 Traffic announcement 202
Radio broadcast data system 201
Rear view monitor system 318
 Area displayed on screen 320
 Rear view monitor system camera 320
Receive on the Bluetooth® phone 150
Register a Bluetooth® phone 139
 Connecting a Bluetooth® phone 140
 Reconnecting the Bluetooth® phone 142
Registering home 12
Registering preset destinations 14
Reordering destinations 86
Resuming guidance 92
Route guidance 75
Route guidance screen 79
Route overview 89
Route preference 90
Route trace 96

S

SAT button 192
Satellite radio (SAT) 208
Screen adjustment 31
Screen Off 31
Screen scroll operation 33
Screen settings adjustment 31
Screens for navigation settings 113
SEEK/TRACK button 192
Setting home as the destination 17
Setting up the “Address Book” 102
Setting up the “Areas to Avoid” 107
Setting up the “Home” 98
Setting up the “Preset Destinations” 100
SETUP button 10, 132, 192
“Setup” screen 22
Show on map 93
SMS/MMS message 149, 154
Speed dial 145
Standard map icons 42
Starting route guidance 75
Steering switches 136, 255, 270
Surround 197
Switching the screens 38

T

Talk on the Bluetooth® phone 151
 Incoming call waiting 153
Time zone 45
Tire change calibration 118
Tone 226
Tone and balance 197
Touch screen operation 27
Traffic incidents 300
TUNE SCROLL knob 192
Typical voice guidance prompts 82

ALPHABETICAL INDEX

U

USB memory.....	236
Connecting a USB memory.....	236
Playing a USB memory.....	237
USB port.....	199
USB-AUX button.....	192

V

Vehicle settings.....	121
Maintenance.....	121
Vehicle customization.....	126
Voice command system.....	195, 270
Steering switches for the voice command system.....	270
Voice recognition.....	147
Voice settings.....	53
Voice volume.....	54

W

WMA.....	219
----------	-----

X

XM Fuel Prices.....	294
Show XM Fuel Prices information.....	294
View detailed fuel price information.....	294
XM Fuel Prices settings.....	295
XM NavTraffic®.....	300
Show traffic event.....	300
Show XM Navtraffic® information.....	301
XM NavWeather™.....	297
Show XM NavWeather™ information.....	297
Weather information.....	298
Weather warnings.....	299
XM NavWeather™ indicator.....	299
XM Satellite Radio broadcast.....	208
Channel category.....	210
Displaying the radio ID.....	209
Displaying the title and name.....	211
How to subscribe to an XM Satellite Radio.....	208
If the satellite radio tuner malfunctions.....	212
Listening to satellite radio.....	209
Presetting a channel.....	210
Selecting a channel.....	210
XM Sports.....	288
Receive sports information.....	288
XM Sports settings.....	289
XM Stocks.....	291
Receive stock data.....	291
XM Stocks settings.....	292

Z

Zoom in button.....	10
Zoom out button.....	10



Map database information and updates

This system uses the maps of DENSO.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM. BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL TERMS AND CONDITIONS SET FORTH BELOW.

LICENSE GRANT

DENSO CORPORATION ("DENSO"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

OWNERSHIP

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by Tele Atlas North America, Inc. ("TANA") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE.

The DATABASE comprises confidential and proprietary information and materials of TANA. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TANA and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

LIMITATION OF LIABILITY

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

U.S. GOVERNMENT RIGHTS

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data - commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control.

Contractor/manufacture is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643. 0330. The DATABASE is made by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed.

If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

END-USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2009* NAVTEQ. All rights reserved.

* original publication date

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2009*. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.
*original publication date

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by DENSO and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/
SUPPLIER) NAME: NAVTEQ

CONTRACTOR (MANUFACTURER/
SUPPLIER) ADDRESS: 425 West
Randolph Street, Chicago, Illinois
60606

This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this data was provided.

© 2009* NAVTEQ - All rights reserved. *original publication date

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

END USER NOTICE

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by Infogroup Inc. ("Infogroup"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the Infogroup POI Data shall be retained by Infogroup.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOGROUP MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of Liability

EITHER INFOGROUP OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

Open source license

This product uses the following open source software.

· T-Kernel

This Product uses the Source Code of T-Kernel under T-License granted by the T-Engine Forum (www.t-engine.org).

· C Library

This product includes software developed by the University of California, Berkeley and its contributors. This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

Copyright © 1982, 1985, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1982, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1982, 1986, 1989, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1982, 1986, 1991, 1993, 1994 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1983, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1987, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1987, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1988 Regents of the University of California. All rights reserved.

Copyright © 1988 University of Utah.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by the Systems Programming Group of the University of Utah Computer Science Department and Ralph Campbell.

Copyright © 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1988, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by Arthur David Olson of the National Cancer Institute.

Copyright © 1989 The Regents of the University of California. All rights reserved.

Copyright © 1989 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1989, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1990, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Chris Torek.

Copyright © 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1991, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Berkeley Software Design, Inc.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Ralph Campbell.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This software was developed by the Computer Systems Engineering group at Lawrence Berkeley Laboratory under DARPA contract BG 91-66 and contributed to Berkeley. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Ralph Campbell. This file is derived from the MIPS RISC Architecture book by Gerry Kane.

Copyright © 1993 The Regents of the University of California. All rights reserved.

Copyright © 1994 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Andrew Hume of AT&T Bell Laboratories. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986 Regents of the University of California. All rights reserved.

Copyright © 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions Copyright © 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED “AS IS” AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright © 1982, 1986, 1990, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1990, 1993 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by the NetBSD Foundation, Inc. and its contributors.

Copyright © 1996 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by J.T. Conklin.

Copyright © 1997 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.

Copyright © 1997,98 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by J.T. Conklin.

Copyright © 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.

This code was contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1998 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1998, 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus J. Klein.

Copyright © 1999, 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Julian Coleman.

Copyright © 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Dieter Baron and Thomas Klausner.

Copyright © 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Jun-ichiro itojun Hagino and by Klaus Klein.

Copyright © 2001 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the NetBSD Foundation, Inc. and its contributors.

4. Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by Christos Zoulas.

Copyright © 1997 Christos Zoulas. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Christos Zoulas.
4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by Winning Strategies, Inc.
Copyright © 1994 Winning Strategies, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Winning Strategies, Inc.

4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright ©1999 Citrus Project, All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1995 Carnegie-Mellon University. All rights reserved. Author: Chris G. Demetriou

Copyright © 1995, 1996 Carnegie-Mellon University. All rights reserved. Author: Chris G. Demetriou

Permission to use, copy, modify and distribute this software and its documentation is hereby granted, provided that both the copyright notice and this permission notice appear in all copies of the software, derivative works or modified versions, and any portions thereof, and that both notices appear in supporting documentation.

CARNEGIE MELLON ALLOWS FREE USE OF THIS SOFTWARE IN ITS "AS IS" CONDITION. CARNEGIE MELLON DISCLAIMS ANY LIABILITY OF ANY KIND FOR ANY DAMAGES WHATSOEVER RESULTING FROM THE USE OF THIS SOFTWARE.

Carnegie Mellon requests users of this software to return to Software Distribution Coordinator or Software.Distribution@CS.CMU.EDU School of Computer Science Carnegie Mellon University Pittsburgh PA 15213-3890 any improvements or extensions that they make and grant Carnegie the rights to redistribute these changes.

· TCP/IP, Socket Library

This product includes software developed by the University of California, Berkeley and its contributors.

Copyright © 1980, 1983, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1987, 1989 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1985, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1985, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1989, 1993, 1995 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 2004 by Internet Systems Consortium, Inc. ("ISC") Portions Copyright © 1996-1999 by Internet Software Consortium. Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND ISC DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Portions Copyright © 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED "AS IS" AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

This product includes software developed by WIDE Project and its contributors.

Portions Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by WIDE Project and its contributors.

4. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1988 Stephen Deering.

Copyright © 1982, 1986 Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. [rescinded 22 July 1999]

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986, 1988 Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Rights, responsibilities and use of this software are controlled by the agreement found in the "LICENSE.H" file distributed with this source code. "LICENSE.H" may not be removed from this distribution, modified, enhanced nor references to it omitted.

Copyright 1983 by the Massachusetts Institute of Technology

Copyright 1984 by the Massachusetts Institute of Technology

Copyright 1984, 1985 by the Massachusetts Institute of Technology

Copyright 1990 by NetPort Software

Copyright 1990-1993 by NetPort Software.

Copyright 1990-1994 by NetPort Software.

Copyright 1990-1996 by NetPort Software.

Copyright 1990-1997 by NetPort Software.

Copyright 1993 by NetPort Software

Copyright 1986 by Carnegie Mellon

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

· OpenSSL

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.

(<http://www.openssl.org/>) This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

OpenSSL License

Copyright © 1998-2008 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"

4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.

5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.

6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License
Copyright © 1995-1998 Eric Young (ey@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com). Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (ey@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.