

1	QUICK GUIDE	11
2	BASIC FUNCTION	35
3	AUDIO SYSTEM	81
4	VOICE COMMAND SYSTEM	131
5	INFORMATION	147
6	PERIPHERAL MONITORING SYSTEM	151
7	PHONE	163
8	NAVIGATION SYSTEM	201
9	Toyota Apps	277
	INDEX	293

For more information about the following items, see the "Owner's Manual".

- Air conditioning
- Fuel consumption
- Energy monitor
- Vehicle customization settings

Introduction

NAVIGATION SYSTEM OWNER'S MANUAL

This manual explains the operation of this system. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of this system differ depending on whether the functions and/or a contract existed and the map data available at the time of producing this document.

Please be aware that the content of this manual may be different from this system in some cases, such as when the system's software is updated.

NAVIGATION SYSTEM

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. Map database is made based on AISIN AW maps, whose information source comes from HERE maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to page 272.

TOYOTA MOTOR CORPORATION

IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.

WARNING

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE


- This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

SYMBOLS USED IN ILLUSTRATIONS



Safety symbol


The symbol of a circle with a slash through it means "Do not", "Do not do this" or "Do not let this happen".

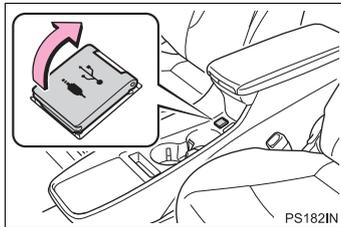

Arrows indicating operations

-  Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

HOW TO READ THIS MANUAL

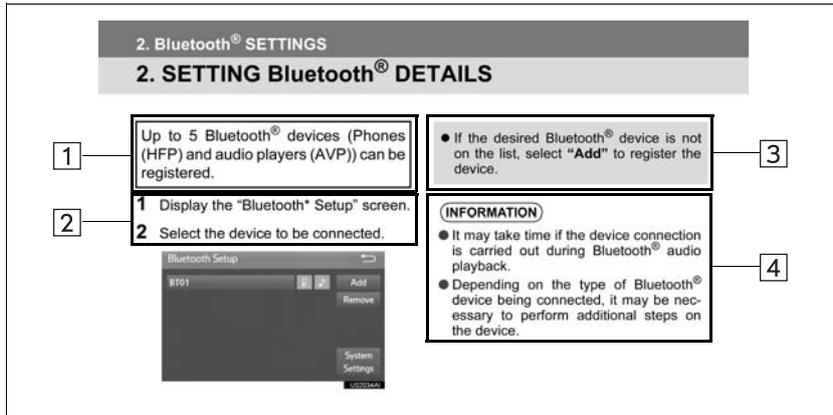

No.	Name	Description
1	Operational Outlines	An outline of the operation is explained.
2	Main Operations	The steps of an operation are explained.
3	Related Operations	A main operation's supplementary operations are described.
4	Information	Useful information for the user is described.

SAFETY INSTRUCTION



To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.

WARNING

- For safety, the driver should not operate the system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

TABLE OF CONTENTS

1 QUICK GUIDE

1. BASIC FUNCTION..... 12
 CONTROLS OVERVIEW..... 12
 MENU SCREEN 14
 MAP SCREEN 16
2. QUICK REFERENCE..... 22
 “Setup” SCREEN 22
 “Information” SCREEN..... 24
3. NAVIGATION OPERATION 26
 REGISTERING HOME 26
 REGISTERING PRESET
 DESTINATIONS..... 28
 OPERATION FLOW:
 GUIDING THE ROUTE 30
 SETTING HOME AS
 THE DESTINATION 31
4. FUNCTION INDEX..... 32
 FUNCTION INDEX 32

2 BASIC FUNCTION

**1. BASIC INFORMATION BEFORE
 OPERATION..... 36**
 INITIAL SCREEN 36
 CAPACITIVE TOUCH SWITCHES 38
 TOUCH SCREEN GESTURES..... 40
 TOUCH SCREEN OPERATION 41
 OPERATION OF MENU BUTTONS ON
 MAP SCREEN 42
 ENTERING LETTERS AND
 NUMBERS/LIST SCREEN
 OPERATION..... 44
 SCREEN ADJUSTMENT 48
 LINKING MULTI-INFORMATION
 DISPLAY AND NAVIGATION
 SYSTEM 50
2. CONNECTIVITY SETTINGS 51
 REGISTERING/CONNECTING
 Bluetooth® DEVICE 51
 SETTING Bluetooth® DETAILS 58
 Apple CarPlay® 68
3. OTHER SETTINGS 72
 GENERAL SETTINGS 72
 VOICE SETTINGS 75
 VEHICLE SETTINGS 76

3 AUDIO SYSTEM

1. BASIC OPERATION 82
 QUICK REFERENCE 82
 SOME BASICS 83

2. RADIO OPERATION 89
 AM/FM RADIO 89
 SiriusXM® Satellite Radio 98
 INTERNET RADIO 104

3. MEDIA OPERATION 105
 USB MEMORY 105
 iPod 109
 Bluetooth® AUDIO 113
 AUX 118

4. AUDIO REMOTE CONTROLS 119
 STEERING SWITCHES 119

5. SETUP 121
 AUDIO SETTINGS 121

6. TIPS FOR OPERATING THE AUDIO SYSTEM 123
 OPERATING INFORMATION 123

4 VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION 132
 VOICE COMMAND SYSTEM 132
 CASUAL SPEECH RECOGNITION 139
 COMMAND LIST 140

2. MOBILE ASSISTANT OPERATION 144
 MOBILE ASSISTANT 144

5 INFORMATION

1. USEFUL INFORMATION 148
 RECEIVING WEATHER INFORMATION 148
 DATA SERVICES SETTINGS 150

6 PERIPHERAL MONITORING SYSTEM

1. REAR VIEW MONITOR SYSTEM 152
 REAR VIEW MONITOR SYSTEM 152
 REAR VIEW MONITOR SYSTEM PRECAUTIONS 156
 THINGS YOU SHOULD KNOW 161

7 PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES) 164
 QUICK REFERENCE 164
 SOME BASICS 165
 CALLING ON THE Bluetooth® PHONE 170
 RECEIVING ON THE Bluetooth® PHONE 175
 TALKING ON THE Bluetooth® PHONE 176
 Bluetooth® PHONE MESSAGE FUNCTION 179

2. SETUP 184
 PHONE SETTINGS 184

3. WHAT TO DO IF... 195
 TROUBLESHOOTING 195



TABLE OF CONTENTS

8 NAVIGATION SYSTEM

1. BASIC OPERATION 204
 QUICK REFERENCE 204
 MAP SCREEN OPERATION 207
 MAP SCREEN INFORMATION 213
 TRAFFIC INFORMATION 220

2. DESTINATION SEARCH 223
 DESTINATION SEARCH SCREEN 223
 SEARCH OPERATION 225
 STARTING ROUTE GUIDANCE 235

3. ROUTE GUIDANCE 239
 ROUTE GUIDANCE SCREEN 239
 TYPICAL VOICE GUIDANCE
 PROMPTS 245
 EDITING ROUTE 246

4. MEMORY POINTS 251
 MEMORY POINTS SETTINGS 251

5. SETUP 261
 DETAILED NAVIGATION
 SETTINGS 261
 TRAFFIC SETTINGS 265

**6. TIPS FOR THE NAVIGATION
SYSTEM 272**
 GPS (GLOBAL POSITIONING
 SYSTEM) 272
 MAP DATABASE VERSION AND
 COVERED AREA 275

9 Toyota Apps

**1. CONNECTED SERVICE
OVERVIEW 278**
 CONNECTED SERVICES 278

**2. CONNECTED SERVICE
OPERATION 282**
 Toyota Apps 282

3. SETUP 291
 Toyota Apps Settings 291

INDEX

ALPHABETICAL INDEX 294

1

QUICK GUIDE

1 BASIC FUNCTION

- 1. CONTROLS OVERVIEW 12
- 2. MENU SCREEN 14
- 3. MAP SCREEN 16
 - DISPLAY AREAS 18
 - STATUS DISPLAY 20

2 QUICK REFERENCE

- 1. "Setup" SCREEN 22
- 2. "Information" SCREEN 24

3 NAVIGATION OPERATION

- 1. REGISTERING HOME 26
- 2. REGISTERING PRESET DESTINATIONS 28
- 3. OPERATION FLOW: GUIDING THE ROUTE 30
- 4. SETTING HOME AS THE DESTINATION 31

4 FUNCTION INDEX

- 1. FUNCTION INDEX 32

1

2

3

4

5

6


7

8

9

1. BASIC FUNCTION

1. CONTROLS OVERVIEW

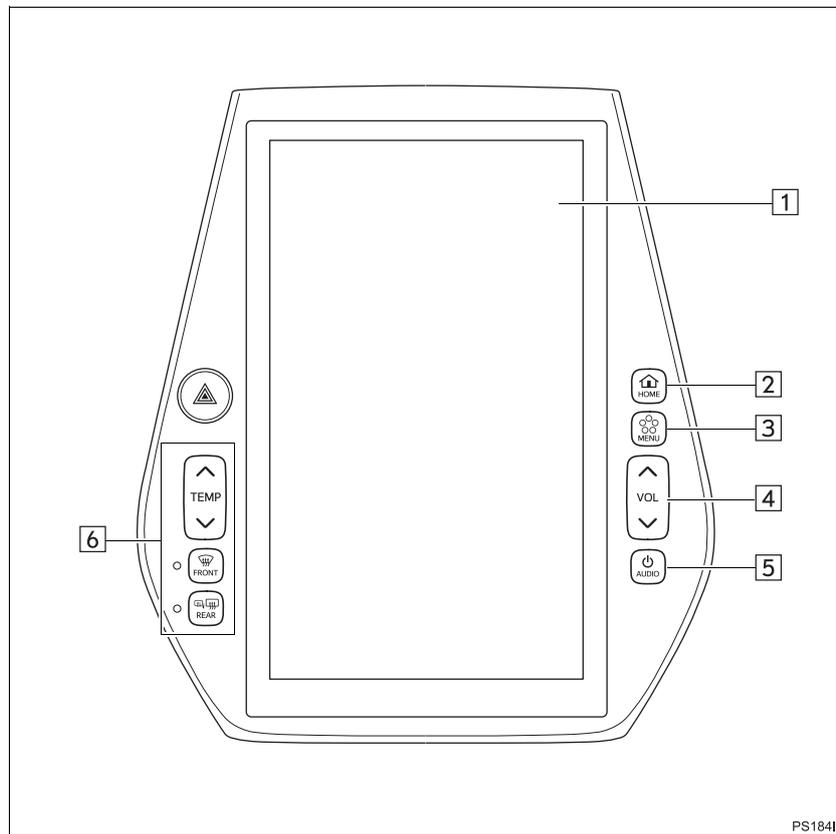

PS184II

No.	Function	Page
1	By touching the screen with your finger, you can control the selected functions.	40, 41
2	Press to display the home screen.	16, 42
3	Press to display the menu screen.	14
4	Press the "V" or "Λ" button to adjust the volume.	—
5	Press to turn audio system on and off.	82, 83
6	Operate the air conditioning/defogger.	"Owner's Manual"


INFORMATION

- Refer to the following page for precautions when using the control panel switch. (→P.38)

1. BASIC FUNCTION

2. MENU SCREEN

Press the “MENU” button to display the menu screen.

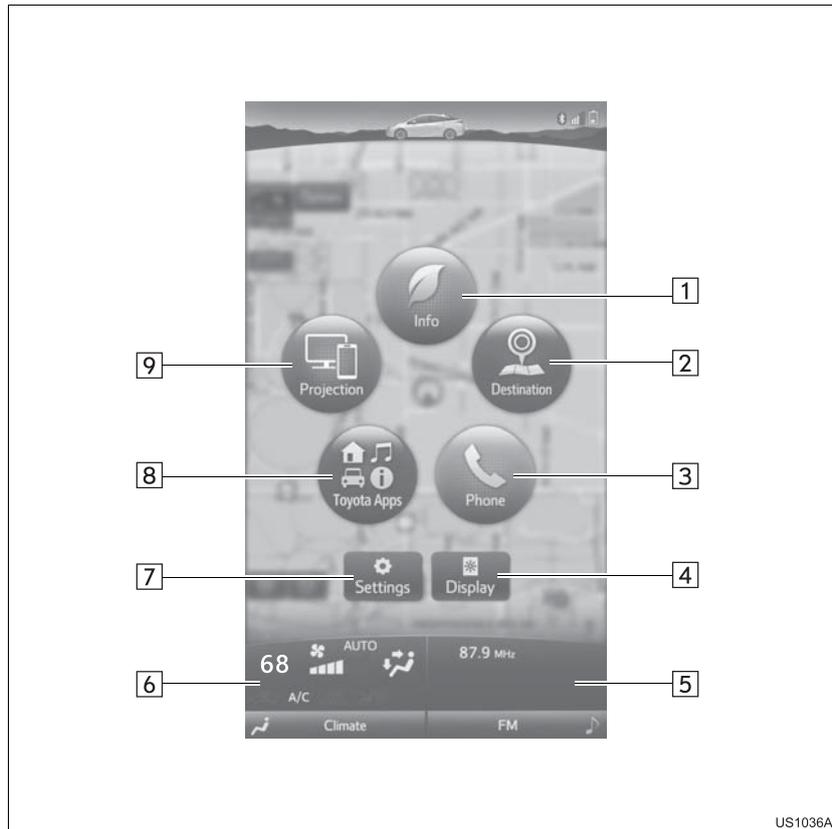

US1036AI

No.	Function	Page
1	Select to display the "Information" screen.	24
2	Select to display the "Destination" screen.	223
3	Select to display the hands-free operation screen. When an Apple CarPlay connection is established, select to display the phone app screen.*	68, 164
4	Select to adjust the contrast and brightness of the screens.	48
5	Select to display the audio control screen. This area is normally displayed, even when the menu screen is not.	82
6	Select to display the air conditioning control screen. This area is normally displayed, even when the menu screen is not.	"Owner's Manual"
7	Select to display the "Setup" screen.	22
8*	Select to display the Toyota apps screen.	282
9*	When an Apple CarPlay connection is established, this button is displayed as " Apple CarPlay ". Select to display the Apple CarPlay home screen.	68

*: This function is not made available in some countries or areas.


1. BASIC FUNCTION

3. MAP SCREEN

Press the **“HOME”** button to display the map screen.

The map screen can be shown full screen and the menu buttons for each function can be displayed on the map screen for quick access. Refer to the following page for the descriptions of each switch shown on the map screen. (→P.204)

▶ Map full-screen display

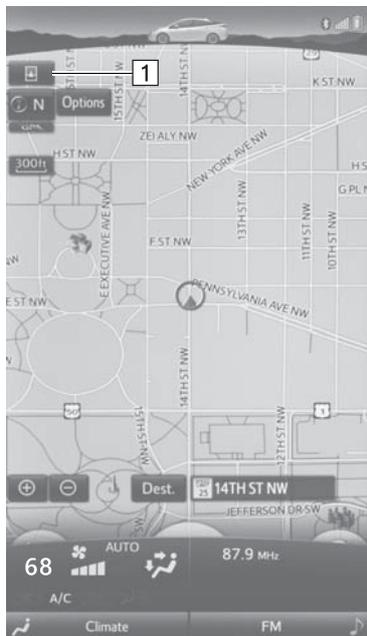

▶ Menu button display




US1023AI

No.	Function
1	Displays/hides the menu buttons. (→P.42)
2	Displays up to 3 shortcuts. Each function can be directly accessed through the shortcut. The first 3 buttons displayed on the Apps screen are displayed as shortcuts for the Apps buttons. (→P.282)

INFORMATION

- The visibility (displayed/not displayed) and position of the menu switch for each function is stored. When the screen is switched from the map screen to another screen and back, the condition of the display is the same as it was before switching took place.

DISPLAY AREAS

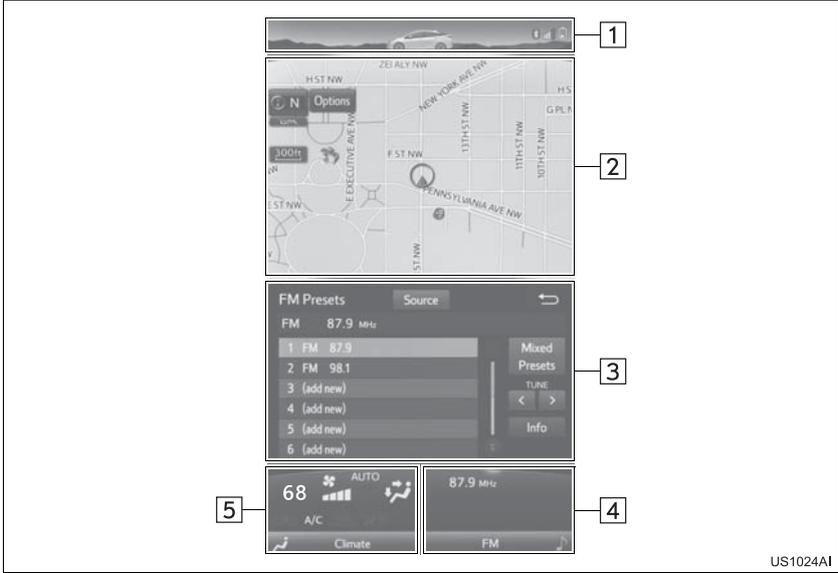

No.	Function	Page
1	Various statuses are shown in this area, including the reception level and Bluetooth® connection status.	20
2	Displays the map. When an Apple CarPlay connection is established, each screen of Apple CarPlay will be displayed.* The map can be displayed bigger by touching this area while the map screen is displayed. This function is not supported by the Apple CarPlay map app.	204
3	Displays operations for various functions. The energy monitor is displayed on a larger screen.	—
4	Displays audio information. Displays the audio control screen when this area is touched.	82
5	Displays air conditioner information. Displays the air conditioner control screen when this area is touched.	"Owner's Manual"

*: This function is not made available in some countries or areas.

STATUS DISPLAY

The condition of the Bluetooth® connection, as well as the level of reception and the amount of cellular phone battery charge left, are displayed on the status display.



No.	Indicators	Conditions
1	The condition of the Bluetooth® connection	 <p>No connection ↔ Poor ↔ Good</p> <ul style="list-style-type: none"> • An antenna for the Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places: The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box). The cellular phone is touching or is covered with metal materials. • Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.
2	The level of reception	 <p>Poor ↔ Excellent</p> <ul style="list-style-type: none"> • The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have. When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed. • "Rm" is displayed when receiving in a roaming area. While roaming, display "Rm" top-left on the icon. • The receiving area may not be displayed depending on the type of phone you have.
3	The amount of battery charge left	 <p>Empty ↔ Full</p> <ul style="list-style-type: none"> • The amount displayed does not always correspond with the amount displayed on the Bluetooth® device. The amount of battery charge left may not be displayed depending on the type of the Bluetooth® device connected. This system does not have a charging function.

2. QUICK REFERENCE

1. “Setup” SCREEN

The items shown on the “Setup” screen can be set. Press the “**MENU**” button, then select “**Settings**” to display the “Setup” screen.




No.	Function	Page
1	Select to change the selected language, operation sound, keyboard layout settings, etc.	72
2	Select to set the voice settings.	75
3	Select to set Bluetooth® phones and Bluetooth® audio devices.	58
4*	Select to set traffic information.	265
5	Select to set memory points (home, preset destinations, address book entries, areas to avoid), navigation details or to delete previous destinations.	251
6	Select to set audio settings.	121
7	Select to set vehicle information.	76
8	Select to set the phone sound, contacts, message settings, etc.	184
9*	Select to set Toyota apps settings.	291
10*	Select to set data services settings.	150

*: This function is not made available in some countries or areas.

2. QUICK REFERENCE

2. “Information” SCREEN

Press the “MENU” button, then select “Info” to display the “Information” screen.

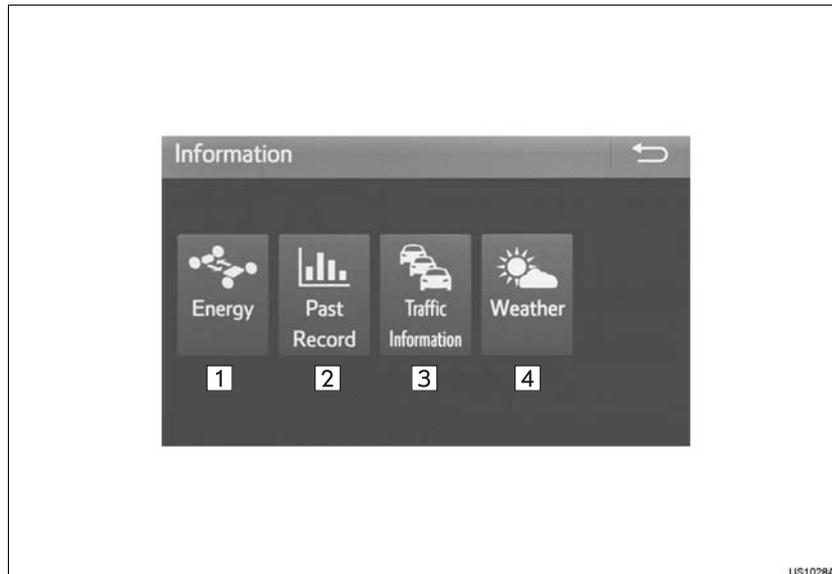


No.	Function	Page
1	Select to display the "Energy Monitor" screen.	"Owner's Manual"
2	Select to display the fuel consumption screen.	"Owner's Manual"
3*	Select to display traffic information.	220
4*	Select to display weather information.	148

*: This function is not made available in some countries or areas.

3. NAVIGATION OPERATION

1. REGISTERING HOME

1 Press the "MENU" button.

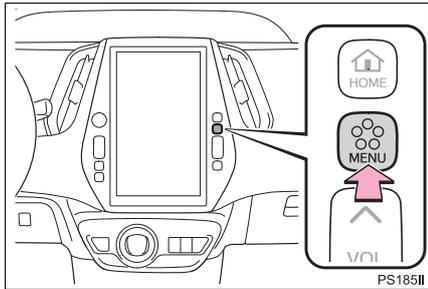

2 Select "Destination".




3 Select "Go Home".



4 Select "Yes".



5 Choose a search method.

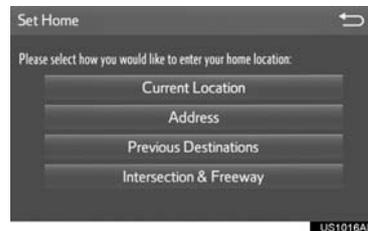

- There are different kinds of methods to search for your home. (→P.223)

6 Select “Enter”.**7 Select “OK”.**


Registration of home is complete.

- ▶ Registering home in a different way
→P.252
- ▶ Editing the name, location, phone number and icon
→P.252
- ▶ Setting home as the destination
→P.226

3. NAVIGATION OPERATION

2. REGISTERING PRESET DESTINATIONS


- 1 Press the "MENU" button.

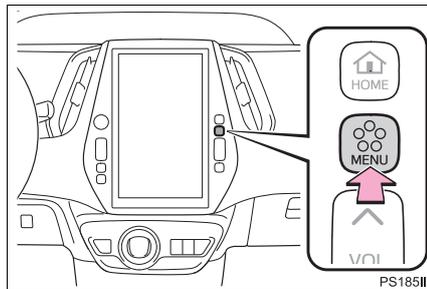

- 2 Select "Destination".




- 3 Select one of the preset destination buttons.

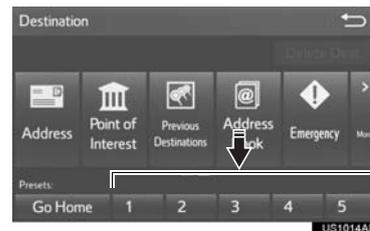

- 4 Select "Yes".

- 5 Choose a search method.

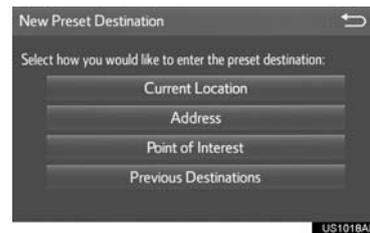

- There are different kinds of methods to search for a destination. (→P.223)

6 Select “Enter”.

7 Select a position for this preset destination.



8 Select “OK”.

 
Registration of preset destinations is complete.

- ▶ Registering preset destinations in a different way
→P.253
- ▶ Editing the name, location, phone number and icon
→P.254
- ▶ Setting preset destinations as the destination
→P.226

3. NAVIGATION OPERATION

3. OPERATION FLOW: GUIDING THE ROUTE

1 Press the "MENU" button.



2 Select "Destination".



3 Choose a search method.



- There are different kinds of methods to search for a destination. (→P.223)

4 Select "Go".



5 Select "OK".

 
Selecting routes other than the one recommended. (→P.235)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

3. NAVIGATION OPERATION

4. SETTING HOME AS THE DESTINATION

- 1 Press the "MENU" button.



- 4 Select "OK".

Selecting routes other than the one recommended. (→P.235)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

- 2 Select "Destination".



- 3 Select "Go Home".



4. FUNCTION INDEX

1. FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	204
Displaying the current position	207
Viewing the current position vicinity map	211
Changing the scale	208
Changing the map orientation	208
Displaying map information	213
Displaying the estimated travel/arrival time to the destination	240
Selecting the map mode	209
Displaying traffic information	220

Searching for destinations	Page
Searching for the destination	225
Changing the search area	226

► Route guidance

Before starting or during route guidance	Page
Starting route guide	235
Editing the route	246
Viewing the entire route map	241
Pausing guidance	238
Adjusting route guidance volume	75
Deleting the destination	247

Address book	Page
Registering address book entries	255
Marking icons on the map	256

► Useful functions

Information	Page
Displaying vehicle maintenance	76

Hands-free system (for cellular phone)	Page
Registering/connecting Bluetooth® phone	51
Making a call on a Bluetooth® phone	170
Receiving a call on the Bluetooth® phone	175

Voice command system	Page
Operating the system with your voice	132

2

BASIC FUNCTION

1 BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN.....	36
2. CAPACITIVE TOUCH SWITCHES	38
3. TOUCH SCREEN GESTURES.....	40
4. TOUCH SCREEN OPERATION	41
5. OPERATION OF MENU BUTTONS ON MAP SCREEN	42
DISPLAY/HIDE THE MENU BUTTONS.....	42
CHANGE THE MENU BUTTONS	43
6. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION	44
ENTERING LETTERS AND NUMBERS.....	44
LIST SCREEN.....	45
7. SCREEN ADJUSTMENT.....	48
8. LINKING MULTI-INFORMATION DISPLAY AND NAVIGATION SYSTEM	50

2

BASIC FUNCTION

2 CONNECTIVITY SETTINGS

1. REGISTERING/CONNECTING Bluetooth® DEVICE	51
REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME	51
REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME	52
PROFILES	53
CERTIFICATION	55
2. SETTING Bluetooth® DETAILS	58
“Bluetooth* Setup” SCREEN	58
REGISTERING A Bluetooth® DEVICE	59
DELETING A Bluetooth® DEVICE	60
CONNECTING A Bluetooth® DEVICE	61
EDITING THE Bluetooth® DEVICE INFORMATION	63
“System Settings” SCREEN	64
3. Apple CarPlay®	68
ESTABLISHING AN Apple CarPlay CONNECTION	68
TROUBLESHOOTING	70

3 OTHER SETTINGS

1. GENERAL SETTINGS	72
GENERAL SETTINGS SCREEN	72
2. VOICE SETTINGS	75
VOICE SETTINGS SCREEN	75
3. VEHICLE SETTINGS	76
MAINTENANCE	76

1

2

3

4

5

6

7

8


9

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

1. BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN

- 1 When the power switch is in ACCESSORY or ON mode, the initial screen will be displayed and the system will begin operating.

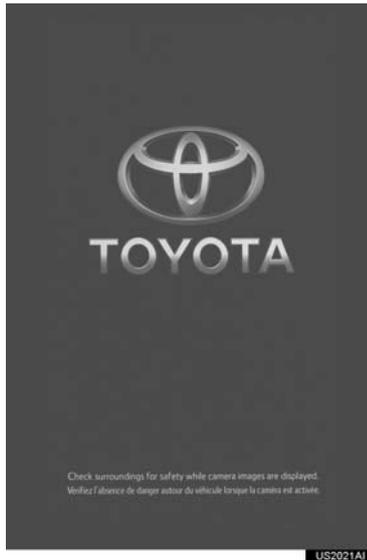

- After a few seconds displays the initial screen, the "CAUTION" screen will be displayed.
- After about 5 seconds, the "CAUTION" screen automatically switches to the next screen. (Select "Continue" to display the next screen.)

WARNING

- When the vehicle is stopped with the hybrid system operating, always apply the parking brake for safety.

MAINTENANCE INFORMATION

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Maintenance Reminder" screen will be displayed when the system is turned on.

 


- To prevent the screen from being displayed again, select "Do Not Tell Me Again".
- To register maintenance information: →P.76
- If  is selected, the registered phone number can be called.

RESTARTING THE SYSTEM

When system response is extremely slow, the system can be restarted.

- 1 Press and hold the **"AUDIO"** button for 3 or more seconds.




2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

2. CAPACITIVE TOUCH SWITCHES

The control panel uses capacitive touch sensors.

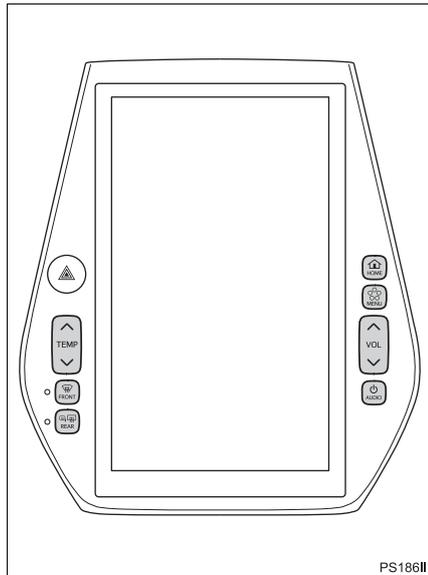

- Capacitive touch switch sensor sensitivity can be adjusted. (→P.72)

HANDLING OF THE CONTROL PANEL

In the following cases, incorrect operation or non-response may occur.

- If the operating section is dirty or has liquid attached to it, incorrect operation or non-response may occur.
- If the operating section receives electromagnetic waves, incorrect operation or non-response may occur.
- If wearing gloves during operation, non-response may occur.
- If fingernails are used to operate the system, non-response may occur.
- If a touch pen is used to operate the system, non-response may occur.
- If the palm of your hand touches the operating section, incorrect operation may occur.
- If operations are performed quickly, non-response may occur.
- If a film is applied to the operating section, incorrect operation or non-response may occur.
- If the operating section is painted, incorrect operation or non-response may occur.
- If the operating section is touched or covered by a metallic object, incorrect operation or non-response may occur.
- If the operating section is struck by hot or cold air, incorrect operation or non-response may occur.



INFORMATION

- Please do not push any of the side buttons when the system has just been turned on, because the buttons might become unresponsive. Please wait a few seconds before pressing any button.

1. BASIC INFORMATION BEFORE OPERATION

3. TOUCH SCREEN GESTURES

Operations are performed by touching the touch screen directly with your finger.

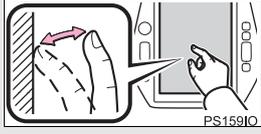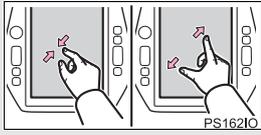Operation method	Outline	Main use
	<p>Touch Quickly touch and release once.</p>	<p>Changing and selecting various settings</p>
	<p>Drag*1 Touch the screen with your finger, and move the screen to the desired position.</p>	<ul style="list-style-type: none"> • Displaying and hiding the menu buttons. • Changing the menu buttons. • Scrolling the lists • Scrolling the map screen
	<p>Flick*1 Quickly move the screen by flicking with your finger.</p>	
	<p>Pinch in/Pinch out*2 Slide fingers toward each other or apart on the display</p>	

*1: The above operations may not be performed on all screens.

*2: All Maps apps in Apple CarPlay are not compatible with pinch in/pinch out gestures.

INFORMATION

- The system may not recognize flick operations in high altitude.

1. BASIC INFORMATION BEFORE OPERATION

4. TOUCH SCREEN OPERATION

This system is operated mainly by the buttons on the screen. (Referred to as screen buttons in this manual.)

- When a screen button is touched, a beep sounds. (To set the beep sound, see page 72.)



NOTICE

- To prevent damaging the screen, lightly touch the screen buttons with your finger.
- Do not use objects other than your finger to touch the screen.
- Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the screen, as they may damage the touch screen.

INFORMATION

- If the system does not respond to touching the screen button, move your finger away from the screen and then touch it again.
- Dimmed screen buttons cannot be operated.
- The displayed image may become darker and moving images may be slightly distorted when the screen is cold.
- In extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the screen buttons may not react properly.
- When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the “Display” screen or take off your sunglasses.

1. BASIC INFORMATION BEFORE OPERATION

5. OPERATION OF MENU BUTTONS ON MAP SCREEN


The buttons on the menu screen can be used while the map screen is displayed. The buttons can be changed and the menu buttons can be displayed/hidden by flicking the screen.

- 1 Press the “HOME” button.
- 2 Home screen is displayed.

DISPLAY/HIDE THE MENU BUTTONS

► Display the menu buttons

- 1 Press the  button or flick upwards

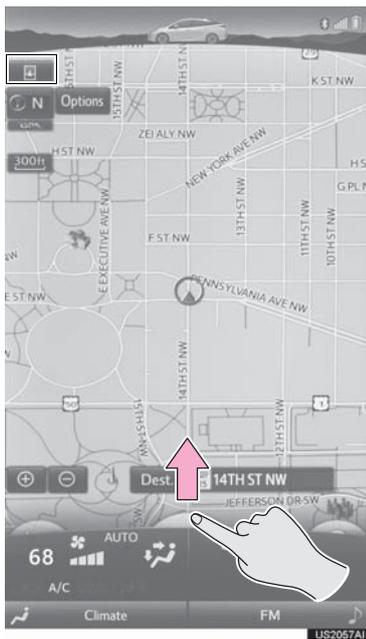

► Hide the menu buttons

- 1 Press the  button or flick downwards



CHANGE THE MENU BUTTONS

- 1 Flick to the side to change the menu buttons



INFORMATION

- The operation of the menu buttons is linked with the multi-information display. For details, refer to "Owner's Manual".

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

6. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION


When searching by an address, name, etc., or entering data, letters and numbers can be entered via the screen.

ENTERING LETTERS AND NUMBERS

► Type A



► Type B

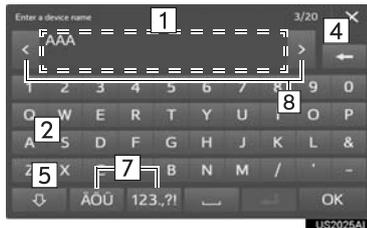

No.	Function
1	Text field. Entered character(s) will be displayed.
2	Select to enter desired characters.
3	While typing, when there only one available option for the next character(s), the next character(s) will be displayed in gray text in the text field automatically. Gray text is entered by selecting this button.
4	Select to erase one character.
5	Select to enter characters in lower case or in upper case.
6	Select to display the alphabet keys.
7	Select to display other symbols.
8	Select to move the cursor.

- Keyboard layout can be changed. (→P.72)

LIST SCREEN

The list screen may be displayed after entering characters.

DISPLAYING THE LIST

1 Enter characters and select “OK”.



- Matching items from the database are listed even if the entered address or name is incomplete.
- The list will be displayed automatically if the maximum number of characters is entered or matching items can be displayed on a single list screen.



INFORMATION

- The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays “***” on the screen.

2

BASIC FUNCTION

SELECTING ALL ITEMS

Some lists contain “Select All”. If “Select All” is selected, it is possible to select all items.

1 Select “Select All”.




“Unselect All”: Unselect all items in the list.

1. BASIC INFORMATION BEFORE OPERATION

LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

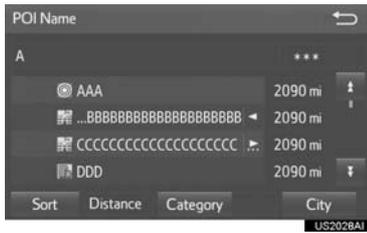


Icon	Function
	Select to skip to the next or previous page.
	Select and hold or to scroll through the displayed list.
	This indicates the displayed screen's position.
	If appears to the right of an item name, the complete name is too long to display.
	Select to scroll to the end of the name.
	Select to move to the beginning of the name.

SORTING

The order of a list displayed on the screen can be sorted in the order of distance from the current location, date, category, etc.

1 Select **"Sort"**.

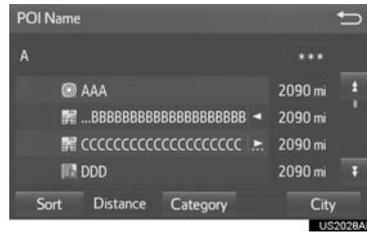

2 Select the desired sorting criteria.

CHARACTER JUMP BUTTONS IN LISTS

Some lists contain character screen buttons, "ABC", "DEF" etc., which allow a direct jump to list entries that begin with the same letter as the character screen button.

- 1 Select the desired character jump buttons.



INFORMATION

 
- Every time the same character screen button is selected, the list starting with the subsequent character is displayed.

1. BASIC INFORMATION BEFORE OPERATION

7. SCREEN ADJUSTMENT

The contrast and brightness of the screen display and the image of the camera display can be adjusted. The screen can also be turned off, and/or changed to either day or night mode. (For information regarding audio/visual screen adjustment: →P.87)

- 1 Press the “MENU” button.



- 2 Select “Display”.

- 3 Select the items to be set.



No.	Function	Page
1	Select to turn the screen off. To turn it on, press any button on the audio panel.	—
2	Select to turn day mode on/off.	48
3	Select to adjust the screen display.	49
4	Select to adjust the camera display.	

INFORMATION

- When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode. Also, day mode can be done when headlight is switched on.

- 1 Select “Day Mode”.

INFORMATION

- If the screen is set to day mode, this condition is memorized even with the hybrid system turned off.

**ADJUSTING THE CONTRAST/
BRIGHTNESS**

The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings.

- 1 Select **“General”** or **“Camera”**.
- 2 Select the desired item.



Screen button	Function
“Contrast” “+”	Select to strengthen the contrast of the screen.
“Contrast” “-”	Select to weaken the contrast of the screen.
“Brightness” “+”	Select to brighten the screen.
“Brightness” “-”	Select to darken the screen.

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

8. LINKING MULTI-INFORMATION DISPLAY AND NAVIGATION SYSTEM

The following functions of the navigation system are linked with the multi-information display in the instrument cluster:

- Menu buttons operation
- Navigation
- Audio
- Air conditioner

etc.

These functions can be operated using multi-information display control switches on the steering wheel. For details, refer to “Owner’s Manual”.

2. CONNECTIVITY SETTINGS

1. REGISTERING/CONNECTING Bluetooth® DEVICE

REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system.


Once the phone has been registered, it is possible to use the hands-free system.

This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P.59

When an Apple CarPlay connection is established, Bluetooth® functions of the system will become unavailable and any connected Bluetooth® devices will be disconnected.

- 1 Turn the Bluetooth® connection setting of your cellular phone on.
 - This function is not available when Bluetooth® connection setting of your cellular phone is set to off.
- 2 Press the **"MENU"** button.

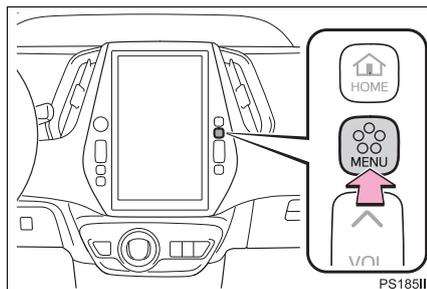

- 3 Select **"Phone"**.
 - Operations up to this point can also be performed by pressing the  switch on the steering wheel.

- 4 Select **"Yes"** to register a phone.
- 5 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.



- For details about operating the Bluetooth® device, see the manual that comes with it.
 - To cancel the registration, select **"Cancel"**.
- 6 Register the Bluetooth® device using your Bluetooth® device.
 - A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

2

BASIC FUNCTION

- 7 Check that the screen is displayed when registration is complete.
 - The system waits for connection requests coming from the registered device.
 - At this stage, the Bluetooth® functions are not yet available.
- 8 Check that “Connected” is displayed and registration is complete.



- If displayed, select “OK” to complete the registration process.
- If an error message is displayed, follow the guidance on the screen to try again.

REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME

To use the Bluetooth® Audio, it is necessary to register an audio player with the system.

Once the player has been registered, it is possible to use the Bluetooth® Audio.

This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P.59

When an Apple CarPlay connection is established, Bluetooth® functions of the system will become unavailable and any connected Bluetooth® devices will be disconnected.

- 1 Turn the Bluetooth® connection setting of your audio player on.
 - This function is not available when the Bluetooth® connection setting of your audio player is set to off.
- 2 Select the area for displaying audio information at right side bottom of the screen.
- 3 When control screen is displayed, select “Source” or select the area for displaying audio information at right side bottom of the screen.
- 4 Select “Bluetooth*”.
- 5 Select “Connect”.
- 6 Select “Yes” to register an audio player.
- 7 Follow the steps in “REGISTERING A Bluetooth® DEVICE” from “STEP 2”. (→P.59)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc

PROFILES

This system supports the following services.

Bluetooth® Device	Spec.	Function	Requirements	Recommendations
Bluetooth® Phone/ Bluetooth® Audio Player	Bluetooth® Specification	Registering a Bluetooth® device	Ver. 1.1	Ver. 3.0 +EDR
Bluetooth® Device	Profile	Function	Requirements	Recommendations
Bluetooth® Phone	HFP (Hands-Free Profile)	Hands-free system	Ver. 1.0	Ver. 1.6
	OPP (Object Push Profile)	Transferring the contacts	Ver. 1.1	Ver. 1.2
	PBAP (Phone Book Access profile)		Ver. 1.0	Ver. 1.1
	MAP (Message Access Profile)	Bluetooth® phone message	—	Ver. 1.0
	SPP (Serial Port Profile)	Toyota apps	—	Ver. 1.2
Bluetooth® Audio Player	A2DP (Advanced Audio Distribution Profile)	Bluetooth® audio system	Ver. 1.0	Ver. 1.3
	AVRCP (Audio/Video Remote Control Profile)		Ver. 1.0	Ver. 1.5

2

BASIC FUNCTION

2. CONNECTIVITY SETTINGS

INFORMATION

- This system is not guaranteed to operate with all Bluetooth® devices.
- If your cellular phone does not support HFP, registering the Bluetooth® phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
- If the connected Bluetooth® device version is older than recommended or incompatible, the Bluetooth® device function may not work properly.
- Refer to <http://www.toyota.com/audio-multimedia/> to find approved Bluetooth® phones for this system.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by DENSO Corporation is under license. Other trademarks and trade names are those of their respective owners.

CERTIFICATION

► U.S.A., Hawaii

FCC ID : HYQDNNS096

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION : Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

2

BASIC FUNCTION

► Canada

NOTE

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna cannot be removed (and changed) by user.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

NOTE

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :-

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'utilisateur n'est pas autorisé à retirer (ou modifier) l'antenne.

Emplacement : Cet émetteur ne doit pas être installé ou utilisé conjointement avec d'autres antennes ou émetteurs.


ATTENTION : exposition aux radiofréquences

Cet équipement est conforme aux limites d'exposition aux rayonnements d'ISDE établies pour un environnement non contrôlé ainsi que la norme CNR-102 de la réglementation d'ISDE relative à l'exposition aux radiofréquences (RF). Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et le corps.

2. CONNECTIVITY SETTINGS

2. SETTING Bluetooth® DETAILS

1 Press the “MENU” button.

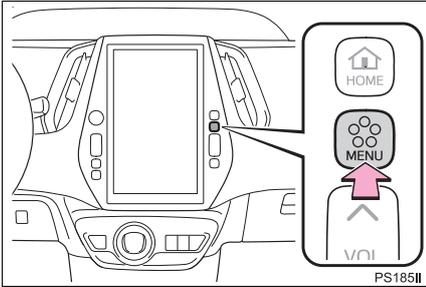

- 2 Select “Settings”.
- 3 Select “Bluetooth*”.
- 4 Select the desired item to be set.



“Bluetooth* Setup” SCREEN



Function	Page
Registering a Bluetooth® device	59
Deleting a Bluetooth® device	60
Connecting a Bluetooth® device	61
Editing the Bluetooth® device information	63
Bluetooth® system settings	64

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

DISPLAYING THE “Bluetooth* Setup” SCREEN IN A DIFFERENT WAY

- 1 Press the “MENU” button.
- 2 Select “Settings”.
- 3 Select “Phone”.
- 4 Select “Connect Phone”.

REGISTERING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices can be registered.

Bluetooth® compatible phones (HFP) and audio players (AVP) can be registered simultaneously.

This operation cannot be performed while driving.

2

BASIC FUNCTION

- 1 Display the “Bluetooth* Setup” screen. (→P.58)
- 2 Select “Add”.
 - ▶ When another Bluetooth® device is connected
 - To disconnect the Bluetooth® device, select “Yes”.
 - ▶ When 5 Bluetooth® devices have already been registered
 - A registered device needs to be replaced. Select “Yes”, and select the device to be replaced.
- 3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. CONNECTIVITY SETTINGS

- For details about operating the Bluetooth® device, see the manual that comes with it.
 - To cancel the registration, select **“Cancel”**.
- 4 Register the Bluetooth® device using your Bluetooth® device.
 - A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.
 - 5 Check that the screen is displayed when registration is complete.
 - The system waits for connection requests coming from the registered device.
 - At this stage, the Bluetooth® functions are not yet available.
 - 6 Check that **“Connected”** is displayed and registration is complete.



- If displayed, select **“OK”** to complete the registration process.
- If an error message is displayed, follow the guidance on the screen to try again.

DELETING A Bluetooth® DEVICE

- 1 Display the **“Bluetooth* Setup”** screen. (→P.58)
- 2 Select **“Remove”**.
- 3 Select the desired device.



- 4 Select **“Yes”** when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

INFORMATION

- When deleting a Bluetooth® phone, the contact data will be deleted at the same time.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

CONNECTING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices (Phones (HFP) and audio players (AVP)) can be registered.

If more than 1 Bluetooth® device has been registered, select the desired device to make a connection.

- 1 Display the “Bluetooth* Setup” screen. (→P.58)
- 2 Select the device to be connected.



- Supported profile icons will be displayed.

 : Phone

 : Audio player

 : Phone/Toyota apps services

- The profile icon for a currently connected device will be displayed in color.
- Selecting a profile icon which is not currently connected will switch the connection to the function.

- If the desired Bluetooth® device is not on the list, select “**Add**” to register the device. (→P.59)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 3 Select the desired connection.

▶ When another Bluetooth® device is connected

- To disconnect the Bluetooth® device, select “**Yes**”.

- 4 Check that a confirmation screen is displayed when the connection is complete.

- If an error message is displayed, follow the guidance on the screen to try again.

INFORMATION

- It may take time if the device connection is carried out during Bluetooth® audio playback.
- Depending on the type of Bluetooth® device being connected, it may be necessary to perform additional steps on the device.
- When disconnecting a Bluetooth® device, it is recommended to disconnect using the navigation system.

2

BASIC FUNCTION

■ AUTO CONNECTION MODE

To turn auto connection mode on, set "Bluetooth* Power" to on. (→P.64)
Leave the Bluetooth® device in a location where the connection can be established.

- When the power switch is in ACCESSORY or ON mode, the system searches for a nearby registered device.
- The system will connect with the registered device that was last connected, if it is nearby.

■ CONNECTING MANUALLY

When the auto connection has failed or "Bluetooth* Power" is turned off, it is necessary to connect Bluetooth® manually.

- 1 Press the "MENU" button and select "Settings".
- 2 Select "Bluetooth*".
- 3 Follow the steps in "CONNECTING A Bluetooth® DEVICE" from "STEP 2". (→P.61)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ RECONNECTING THE Bluetooth® PHONE

If a Bluetooth® phone is disconnected due to poor reception from the Bluetooth® network when the power switch is in ACCESSORY or ON mode, the system automatically reconnects the Bluetooth® phone.

- If the system is attempting to connect to a Bluetooth® phone and the Bluetooth® phone is turned off and then back on, the system will attempt to reconnect.



EDITING THE Bluetooth® DEVICE INFORMATION

The Bluetooth® device's information can be displayed on the screen. The displayed information can be edited.

- 1 Display the "Bluetooth* Setup" screen. (→P.58)
- 2 Select the desired device to be edited.
- 3 Select "Device Info".



- 4 Confirm and change the Bluetooth® device information.

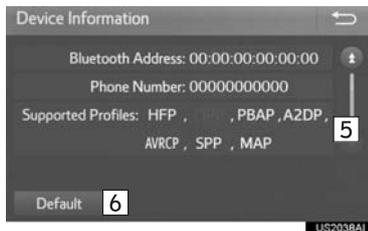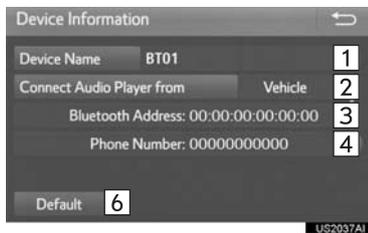

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

No.	Information
1	The name of the Bluetooth® device. Can be changed to a desired name. (→P.64)
2	Select to set the Bluetooth® audio player connection method. (→P.64)
3	Device address is unique to the device and cannot be changed.
4	Phone number of the Bluetooth® phone.
5	Compatibility profile of the Bluetooth® device.
6	Select to reset all setup items.

2

BASIC FUNCTION

INFORMATION

- If 2 Bluetooth® devices have been registered with the same device name, the devices can be distinguished by referring to the device's address.
- Depending on the type of phone, some information may not be displayed.

2. CONNECTIVITY SETTINGS

CHANGING A DEVICE NAME

- 1 Select **“Device Name”**.
- 2 Enter the name and select **“OK”**.

INFORMATION

- Even if the device name is changed, the name registered in your Bluetooth® device does not change.

SETTING AUDIO PLAYER CONNECTION METHOD

- 1 Select **“Connect Audio Player from”**.
- 2 Select the desired connection method.

“Vehicle”: Select to connect the audio system to the audio player.


“Device”: Select to connect the audio player to the audio system.

- Depending on the audio player, the “Vehicle” or “Device” connection method may be best. As such, refer to the manual that comes with the audio player.
- To reset the connection method, select **“Default”**.
- When the connection method is set to “Device”, the automatic connection is not be made even if “Bluetooth* Power” is on. (→P.64)

“System Settings” SCREEN

The Bluetooth® settings can be confirmed and changed.

- 1 Display the **“Bluetooth* Setup”** screen. (→P.58)
- 2 Select **“System Settings”**.
- 3 Select the desired item to be set.

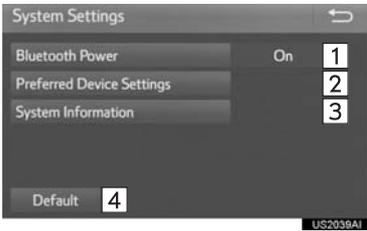

No.	Function	Page
1	Select to set Bluetooth® power on/off.	65
2	Select to change the automatic connection priority of the registered Bluetooth® devices.	65
3	Select to edit the system information.	66
4	Select to reset all setup items.	—

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

CHANGING “Bluetooth* Power”

1 Select “Bluetooth* Power”.

When “Bluetooth* Power” is on:

The Bluetooth® device is automatically connected when the power switch is in ACCESSORY or ON mode.

When “Bluetooth* Power” is off:

The Bluetooth® device is disconnected, and the system will not connect to it next time.

INFORMATION

- While driving, the auto connection state can be changed from off to on, but cannot be changed from on to off.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

SETTING AUTOMATIC CONNECTION PRIORITY

The automatic connection priority of the registered Bluetooth® devices can be changed.

1 Select “Preferred Device Settings”.

2 Select the desired item to be set.



2

BASIC FUNCTION

No.	Function	Page
1	Select to set automatic connection priority on/off.	—
2	Select to change the automatic connection priority of the registered Bluetooth® phones.	66
3	Select to change the automatic connection priority of the registered Bluetooth® audio players.	66
4	Select to reset all setup items.	—

INFORMATION

- A newly registered Bluetooth® device will automatically be given the highest automatic connection priority.

2. CONNECTIVITY SETTINGS

■ CHANGING PHONE AUTOMATIC CONNECTION PRIORITY


- 1 Select **“Preferred Phones”**.
- 2 Select the desired Bluetooth® device and select **“Up”** or **“Down”** to change the preferred order.

■ CHANGING AUDIO PLAYER AUTOMATIC CONNECTION PRIORITY

- 1 Select **“Preferred Audio Players”**.
- 2 Select the desired Bluetooth® device and select **“Up”** or **“Down”** to change the preferred order.

■ EDITING THE SYSTEM INFORMATION

- 1 Select **“System Information”**.
- 2 Select the desired item to be set.

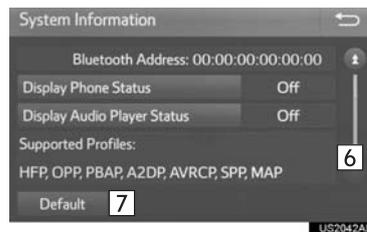

No.	Information	Page
1	Displays system name. Can be changed to a desired name.	67
2	PIN code used when the Bluetooth® device was registered. Can be changed to a desired code.	67
3	Device address is unique to the device and cannot be changed.	—
4	Select to set the phone connection status display on/off.	—
5	Select to set the connection status display of the audio player on/off.	—
6	Compatibility profile of the system	—
7	Select to reset all setup items.	—

■ EDITING THE SYSTEM NAME

- 1 Select “System Name”.
- 2 Enter a name and select “OK”.

■ EDITING THE PIN CODE

- 1 Select “System PIN Code”.
- 2 Enter a PIN code and select “OK”.

2

BASIC FUNCTION

2. CONNECTIVITY SETTINGS

3. Apple CarPlay®*

Apple CarPlay allows some applications, such as Map, Phone, and Music, to be used on the system.

When an Apple CarPlay connection is established, Apple CarPlay compatible applications will be displayed on the system display.

- Compatible device

Apple iPhone (iOS Ver. 9.3 or later) that supports Apple CarPlay.

For details, refer to

<https://www.apple.com/ios/carplay/>.

ESTABLISHING AN Apple CarPlay CONNECTION

- 1 Enable Siri on the device to be connected.
- 2 Connect the device to the USB port. (→P.85)
- 3 Select “**Always Enable**” or “**Enable Once**”.
 - If “**Don’t Enable**” is selected, an Apple CarPlay connection will not be established. In this case, the device can be operated as a normal Apple device, such as an iPod.
 - Depending on the device connected, it may take approximately 3 to 6 seconds before an Apple CarPlay connection is established.

- 4 Check that home screen of Apple CarPlay is displayed.



No.	Function
1	Select to display the home screen of Apple CarPlay. Touch and hold to activate Siri.
2	Select to start the application. User can use any iPhone application supported by Apple CarPlay.
3	Select to display the system screen.

INFORMATION

- When an Apple CarPlay connection is established, the function of some system buttons will change.
- When an Apple CarPlay connection is established, some system functions, such as the following, will be replaced by similar Apple CarPlay functions or will become unavailable:
 - iPod (Audio Playback)
 - Hands-free Phone
 - USB audio/USB video
 - Bluetooth® audio
 - Bluetooth® phone
 - Toyota apps
- When an Apple CarPlay/Android Auto connection is established, voice command system (Siri/Google Assistant) and map application voice guidance volume can be changed by selecting “Voice Volume” on the voice settings screen. It cannot be changed by “VOL” button on audio control panel. (→P.75)

*: This function is not made available in some countries or areas.

INFORMATION

- To disable Apple CarPlay while a device is connected, set **“Apple CarPlay”** on the “Projection Settings” screen to off. (→P.74)
- Apple CarPlay is an application developed by Apple Inc. Its functions and services may be terminated or changed without notice depending on the connected device’s operation system, hardware and software, or due to changes in Apple CarPlay specifications.
- If the vehicle’s navigation system is being used for route guidance and a route is set using the Apple CarPlay Maps app, route guidance will be performed through Apple CarPlay.
If the Apple CarPlay Maps app is being used for route guidance and a route is set using the vehicle’s navigation system, route guidance will be performed by the vehicle’s navigation system.
- In some regions, speed limit information is displayed on the route guidance screen of the iOS 11 or later map application. The displayed information is based on the information in the map application, so it may differ from the speed limit information displayed on the multi-information display.

**INFORMATION**

- Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone or iPod may affect wireless performance.
- Apple, iPad, iPhone, iPod, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.

WARNING

- Do not connect iPhone or operate the controls while driving.

NOTICE

- Do not leave your iPhone in the vehicle. In particular, high temperatures inside the vehicle may damage the iPhone.
- Do not push down on or apply unnecessary pressure to the iPhone while it is connected as this may damage the iPhone or its terminal.
- Do not insert foreign objects into the port as this may damage the iPhone or its terminal.

TROUBLESHOOTING

If you are experiencing difficulties with Apple CarPlay, check the following table.

Symptom	Solution
An Apple CarPlay connection cannot be established.	Check if the device supports Apple CarPlay. Check if Apple CarPlay is enabled on the connected device. For details, refer to https://www.apple.com/ios/carplay/ .
	Check if “ Apple CarPlay ” on the “Projection Settings” screen is set to on. (→P.74)
	Check if the Lightning cable being used is certified by Apple Inc., and if it is securely connected to the device and USB port.
	When the iPhone is connected using a USB hub, etc., an Apple CarPlay connection may not be established. Connect the lightning cable to USB the port directly. After checking all of the above, try to establish an Apple CarPlay connection. (→P.68)
When an Apple CarPlay connection is established and a video is being played, the video is not displayed, but audio is output through the system.	As the system is not designed to play video through Apple CarPlay, this is not a malfunction.
Although an Apple CarPlay connection is established, audio is not output through the system.	The system may muted or the volume may be low. Increase the system volume.
The Apple CarPlay screen has artifacts and/or audio from Apple CarPlay has noise.	Check if the Lightning cable being used to connect the device to the system is damaged. To check if the Lightning cable is damaged internally, connect the device to another system, such as a PC, and check if the device is recognized by the connected system. (The device should begin charging when connected.)
	Replace the USB cable with another cable. (A short USB cable is recommended)
	After checking all of the above, try to establish an Apple CarPlay connection. (→P.68)
The map display of the Apple CarPlay Maps app cannot be enlarged or contracted with pinch multi-touch gestures.	As the Apple CarPlay Maps app is not compatible with pinch multi-touch gestures, this is not a malfunction.

Symptom	Solution
During Apple CarPlay music application (Apple Music, Spotify, etc.) playback, if the iPhone is operated to start and play audio from an application that is not compatible with Apple CarPlay* and the onboard device volume is changed, the audio of the incompatible application stops and the system resumes playback of the original music application.	This operation is performed according to the specification of the onboard device, this is not a malfunction.
After interrupt audio (such as navigation route guidance) is played from an application that is not compatible with Apple CarPlay while the onboard device is playing audio (FM/AM, CD, etc.), the system does not resume playback of the original audio (FM/AM, CD, etc.).	This operation is performed according to the specification of the onboard device, this is not a malfunction. Manually change the audio source by yourself. Or, do not use applications that are not compatible with Apple CarPlay.* Due to some navigation applications are compatible from iOS 12, update to the latest iOS and application versions.

2
BASIC FUNCTION


*: Applications not compatible with Apple CarPlay are applications installed on the iPhone that are not displayed on the Apple CarPlay screen application list. (such as visual voicemail)

3. OTHER SETTINGS

1. GENERAL SETTINGS



Settings for the system time, operation sounds, etc., can be changed.

- 1 Press the **"MENU"** button.

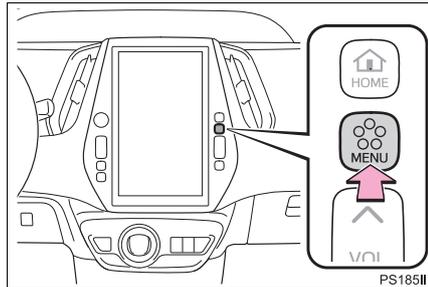

- 2 Select **"Settings"**.
- 3 Select **"General"**.
- 4 Select the items to be set.

GENERAL SETTINGS SCREEN

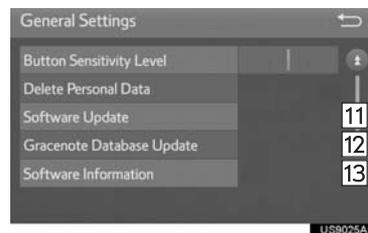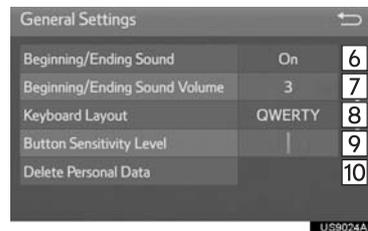

No.	Function
1	Select to change the time zone and set the daylight saving time on/off. (→P.73)
2	Select to change the language. The language setting of Apple CarPlay can only be changed on the connected iPhone.
3	Select to change the unit of measure for distance/fuel consumption.
4	Select to set the sound beeps on/off.
5	Select to set Apple CarPlay on/off.* (→P.74)
6	Select to set the beginning/ending sound on/off.
7	Select to adjust the beginning/ending sound volume.
8	Select to change the keyboard layout.
9	Select to change the capacitive touch switch sensor sensitivity. For details about the capacitive touch switch.: →P.38
10	Select to delete personal data. (→P.74)
11	Select to update software versions. For details, contact your Toyota dealer.
12	Select to update Gracenote® database versions. For details, contact your Toyota dealer.
13	Select to display the software information. Notices related to third party software used in this product are en-listed. (This includes instructions for obtaining such software, where applicable.)

*: This function is not made available in some countries or areas.

SYSTEM TIME SETTINGS

Used for changing time zones and the on/off settings of daylight saving time.

- 1 Display the "General Settings" screen. (→P.72)
- 2 Select "System Time".
- 3 Select the items to be set.




2
BASIC FUNCTION

No.	Function
1	Select to change the time zone. (→P.74)
2	Select to set daylight saving time on/off.
3	Select to set automatic adjustment of the clock by GPS on/off. When set to on, the system will automatically adjust the clock to the current position's time zone when the vehicle moves to a different time zone.

3. OTHER SETTINGS

SETTING THE TIME ZONE


- 1 Select **“Time Zone”**.
- 2 Select the desired time zone.

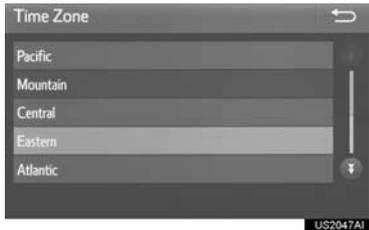

- If **“Other”** is selected, the zone can be adjusted manually. Select **“+”** or **“-”** to adjust the time zone.

PROJECTION SETTINGS

- 1 Display the **“General Settings”** screen. (→P.72)
- 2 Select **“Projection Settings”**.
- 3 Select the items to be set.

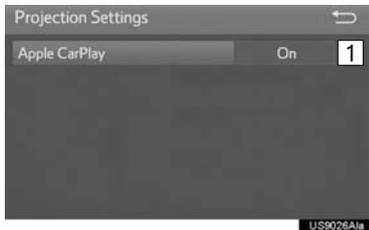

No.	Function
1	Select to turn automatic Apple CarPlay connection establishment on/off when a compatible iPhone is connected to the system via USB. (→P.68)

DELETING PERSONAL DATA

- 1 Display the **“General Settings”** screen. (→P.72)
 - 2 Select **“Delete Personal Data”**.
 - 3 Select **“Delete”**.
 - 4 Select **“Yes”** when the confirmation screen appears.
- Registered or changed personal settings will be deleted or returned to their default conditions.
For example:
 - General settings
 - Navigation settings
 - Audio settings
 - Phone settings

NOTICE


- Make sure the map microSD card is inserted when deleting personal data. The personal data cannot be deleted when the map microSD card is removed. To delete the data, after inserting the map microSD card, turn the power switch to ACCESSORY or ON mode.

3. OTHER SETTINGS

2. VOICE SETTINGS

Voice volume, etc., can be set.

- 1 Press the “MENU” button.


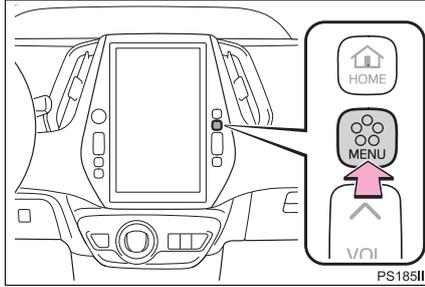


- 2 Select “Settings”.
- 3 Select “Voice”.
- 4 Select the items to be set.

INFORMATION

- “Voice Settings” screen can also be displayed from the voice recognition top screen. (→P.134)

VOICE SETTINGS SCREEN

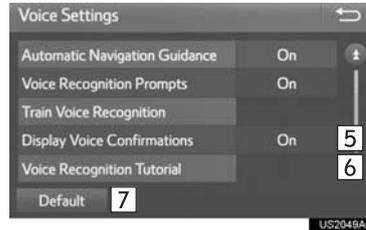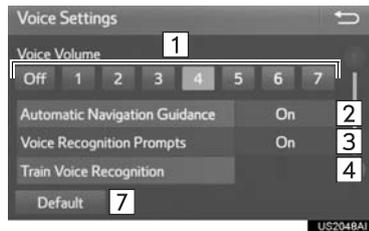

No.	Function
1	Select to adjust the volume of voice guidance.
2	Select to set the automatic voice guidance during route guidance.
3	Select to set the voice recognition prompts.
4	Select to train voice recognition. The voice command system adapt the user accent. (→P.135)
5	Select to set the voice confirmation display on/off.
6	Select to set the voice recognition tutorial.
7	Select to reset all setup items.

2


BASIC FUNCTION

3. OTHER SETTINGS


3. VEHICLE SETTINGS

Settings are available for maintenance and vehicle customization.

- 1 Press the **"MENU"** button.

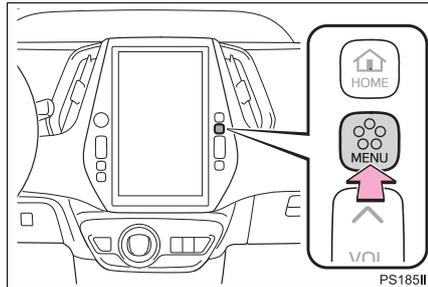

- 2 Select **"Settings"**.
- 3 Select **"Vehicle"**.
- 4 Select the desired item to be set.

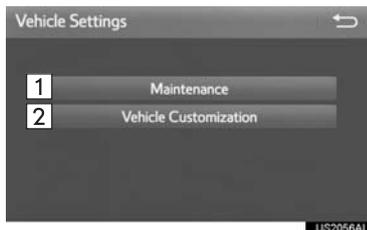

No.	Function	Page
1	Select to set maintenance.	76
2	Select to set vehicle customization.	"Owner's Manual"

MAINTENANCE

When this system is turned on, the "Maintenance Reminder" screen displays when it is time to replace a part or certain components. (→P.36)

- 1 Display the "Vehicle Settings" screen. (→P.76)
- 2 Select **"Maintenance"**.
- 3 Select the desired item.



No.	Function
1	Select to set the condition of parts or components.
2	Select to add new information items separately from provided ones.
3	Select to cancel all conditions which have been entered.
4	Select to reset the item which have expired conditions.
5	Select to call the registered dealer.
6	Select to register/edit dealer information. (→P.78)
7	When set to on, the indicator will illuminate. The system is set to give maintenance information with the "Maintenance Reminder" screen. (→P.36)

INFORMATION

- The item which has not been set yet is displayed in white. The item which has been set already is displayed in light blue. The item during maintenance guidance is displayed in orange.

MAINTENANCE INFORMATION SETTING

- 1 Select the desired part or component screen button.
 - When the vehicle needs to be serviced, the screen button color will change to orange.
- 2 Set the conditions.



2
BASIC FUNCTION

No.	Function
1	Select to enter the next maintenance date.
2	Select to enter the driving distance until the next maintenance check.
3	Select to cancel the conditions which have been entered.
4	Select to reset the conditions which have expired.

- 3 Select "OK" after entering the conditions.

3. OTHER SETTINGS


INFORMATION

- For scheduled maintenance information, refer to “Scheduled Maintenance Guide” or “Owner’s Manual Supplement”.
- Depending on driving or road conditions, the actual date and distance that maintenance should be performed may differ from the stored date and distance in the system.

DEALER SETTING

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- 1 Select “Set Dealer”.
- 2 Select the desired item to search for the location. (→P.223)

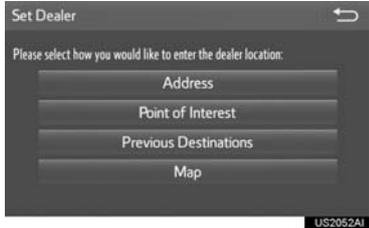

- The editing dealer screen appears after setting the location.

- 3 Select the items to be edited.



No.	Function	Page
1	Select to enter the name of a dealer.	79
2	Select to enter the name of a dealer member.	79
3	Select to set the location.	79
4	Select to enter the phone number.	79
5	Select to delete the dealer information displayed on the screen.	—
6	Select to set the displayed dealer as a destination.	235

■ **EDITING DEALER OR CONTACT NAME**

- 1 Select **"Edit"** next to "Dealer" or "Contact".
- 2 Enter the name and select **"OK"**.

■ **EDITING THE LOCATION**

- 1 Select **"Edit"** next to "Location".
- 2 Scroll the map to the desired point (→P.212) and select **"OK"**.

■ **EDITING PHONE NUMBER**

- 1 Select **"Edit"** next to "Phone #".
- 2 Enter the phone number and select **"OK"**.

2

BASIC FUNCTION

3

AUDIO SYSTEM

1 BASIC OPERATION

1. QUICK REFERENCE	82
2. SOME BASICS.....	83
TURNING THE SYSTEM ON AND OFF	83
SELECTING AN AUDIO SOURCE.....	84
USB/AUX PORT	85
"Sound Settings" SCREEN	85
AUDIO SCREEN ADJUSTMENT	87
VOICE COMMAND SYSTEM.....	88

2 RADIO OPERATION

1. AM/FM RADIO.....	89
OVERVIEW	89
PRESET BUTTON SCREEN	91
SELECTING A STATION FROM THE LIST	92
CACHING A RADIO PROGRAM	92
RADIO BROADCAST DATA SYSTEM	94
USING HD Radio™ TECHNOLOGY.....	95
AVAILABLE HD Radio™ TECHNOLOGY.....	95
TROUBLESHOOTING GUIDE	97
2. SiriusXM® Satellite Radio	98
OVERVIEW	98
HOW TO SUBSCRIBE TO SiriusXM Radio Services.....	100
DISPLAYING THE RADIO ID.....	101
SELECTING A CHANNEL FROM THE LIST	101
IF THE SATELLITE RADIO TUNER MALFUNCTIONS	102
3. INTERNET RADIO.....	104
LISTENING TO INTERNET RADIO	104

3

AUDIO SYSTEM


3 MEDIA OPERATION	4 AUDIO REMOTE CONTROLS
1. USB MEMORY 105	1. STEERING SWITCHES..... 119
OVERVIEW 105	
USB AUDIO 108	
USB VIDEO 108	
2. iPod 109	5 SETUP
OVERVIEW 109	1. AUDIO SETTINGS 121
iPod AUDIO 112	AUDIO SETTINGS SCREEN..... 121
3. Bluetooth® AUDIO 113	6 TIPS FOR OPERATING THE AUDIO SYSTEM
OVERVIEW 113	1. OPERATING INFORMATION 123
CONNECTING A Bluetooth® DEVICE..... 117	RADIO..... 123
LISTENING TO Bluetooth® AUDIO 117	iPod..... 124
4. AUX 118	FILE INFORMATION 125
OVERVIEW 118	TERMS 127
	ERROR MESSAGES 129

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9

1. BASIC OPERATION

1. QUICK REFERENCE

Select the area for displaying audio information at right side bottom of the screen to display the audio control screen.

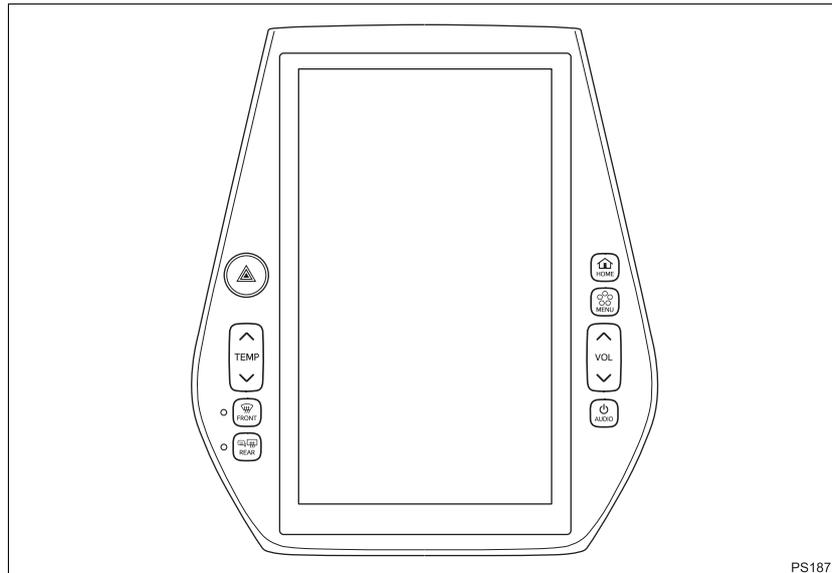

PS187II

Function	Page
Using the radio	89, 98, 104
Playing a USB memory	105
Playing an iPod	109
Playing a Bluetooth® device	113
Using the AUX port	118
Using the steering wheel audio switches	119
Audio system settings	121

1. BASIC OPERATION

2. SOME BASICS

This section describes some of the basic features of the audio system. Some information may not pertain to your system.


Your audio system works when the power switch is turned to ACCESSORY or ON mode.



NOTICE

- To prevent the 12-volt battery from being discharged, do not leave the audio system on longer than necessary when the hybrid system is not operating.

TURNING THE SYSTEM ON AND OFF

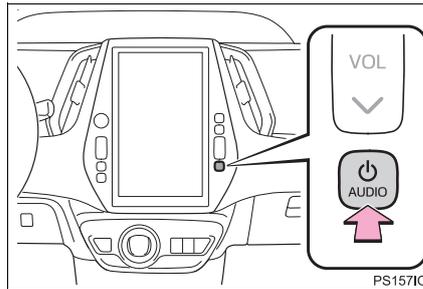

3

AUDIO SYSTEM

“**AUDIO**” button: Press to turn the audio system on and off. The system turns on in the last mode used.

SELECTING AN AUDIO SOURCE

- 1 Select the area for displaying audio information at right side bottom of the screen.
- 2 When control screen is displayed, select **"Source"** or select the area for displaying audio information at right side bottom of the screen.
- 3 Select the desired source.



INFORMATION

- Dimmed screen buttons cannot be operated.
 - When an Apple CarPlay connection is established, some system functions, such as the following, will be replaced by similar Apple CarPlay function or will become unavailable*:
 - iPod (Audio Playback)
 - USB audio/USB video
 - Bluetooth® audio
 - Toyota apps
- *: This function is not made available in some countries or areas.

REORDERING THE AUDIO SOURCE

- 1 Display the "Select Audio Source" screen. (→P.84)
- 2 Select **"Reorder"**.




- 3 Select the desired audio source then "**<<**" or "**>>**" to reorder.



- 4 Select **"OK"**.

USB/AUX PORT

- 1 Open the cover and connect a device.

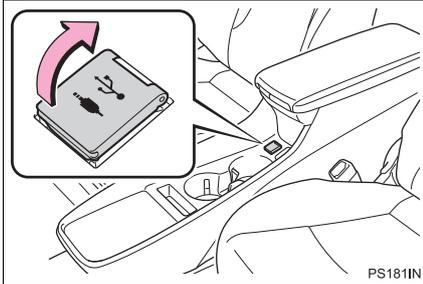


- Turn on the power of the device if it is not turned on.

INFORMATION

- The AUX port only supports audio input.

“Sound Settings” SCREEN

- 1 Display the audio control screen. (→P.82).
- 2 Select “Sound”.
- 3 Select the desired tab to be set.

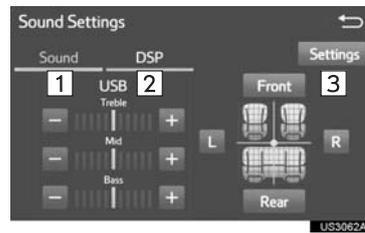

No.	Information	Page
1	Select to set the tone and balance.	86
2	Select to set the DSP control.	87
3	Select to change audio settings.	121

3

AUDIO SYSTEM

TONE AND BALANCE

TONE:


How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

BALANCE:

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

- 1 Select the **“Sound”** tab and select the desired item to be set.

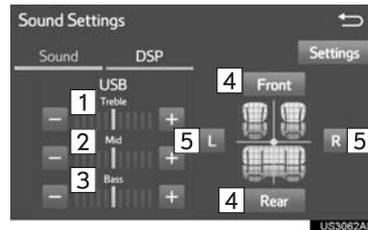

No.	Function
1	Select “+” or “-” to adjust high-pitched tones.
2	Select “+” or “-” to adjust mid-pitched tones.
3	Select “+” or “-” to adjust low-pitched tones.
4	Select to adjust the sound balance between the front and rear speakers.
5	Select to adjust the sound balance between the left and right speakers.

DSP CONTROL

The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.

- 1 Select the “**DSP**” tab and select the desired item to be set.
 - ▶ Type A
 - 2 Select “**Automatic Sound Levelizer**”.
 - 3 Select “**High**”, “**Mid**”, “**Low**”, or “**Off**”.
 - ▶ Type B
 - 2 Select “**Automatic Sound Levelizer**”.
 - 3 Select on or off.

AUDIO SCREEN ADJUSTMENT


SCREEN SIZE SETTINGS

The screen size can be selected for each type of media.

- ▶ USB video
 - 1 Display the audio control screen. (→P.82)
 - 2 Select “**Options**”.
 - 3 Select “**Wide**”.
 - 4 Select the desired item to be adjusted.

3

AUDIO SYSTEM

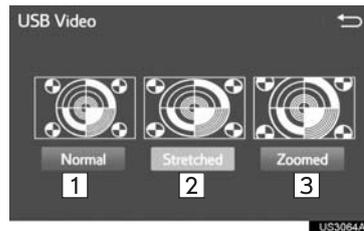

No.	Function
1	Select to display a 4 : 3 screen, with either side in black.
2	Select to enlarge the image horizontally and vertically to full screen.
3	Select to enlarge the image by the same ratio horizontally and vertically.

CONTRAST AND BRIGHTNESS ADJUSTMENT

The contrast and brightness of the screen can be adjusted.


▶ USB video

- 1 Display the audio control screen. (→P.82)
- 2 Select “Options”.
- 3 Select “Display”.
- 4 Select the desired item to be adjusted.

Screen button	Function
“Contrast” “+”	Select to strengthen the contrast of the screen.
“Contrast” “-”	Select to weaken the contrast of the screen.
“Brightness” “+”	Select to brighten the screen.
“Brightness” “-”	Select to darken the screen.

VOICE COMMAND SYSTEM

- 1 Press this switch to operate the voice command system.

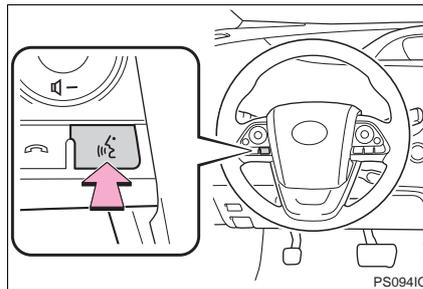


- The voice command system and its list of commands can be operated. (→P.132)

2. RADIO OPERATION

1. AM/FM RADIO

OVERVIEW

Select “AM” or “FM” on the “Select Audio Source” screen. (→P.84)

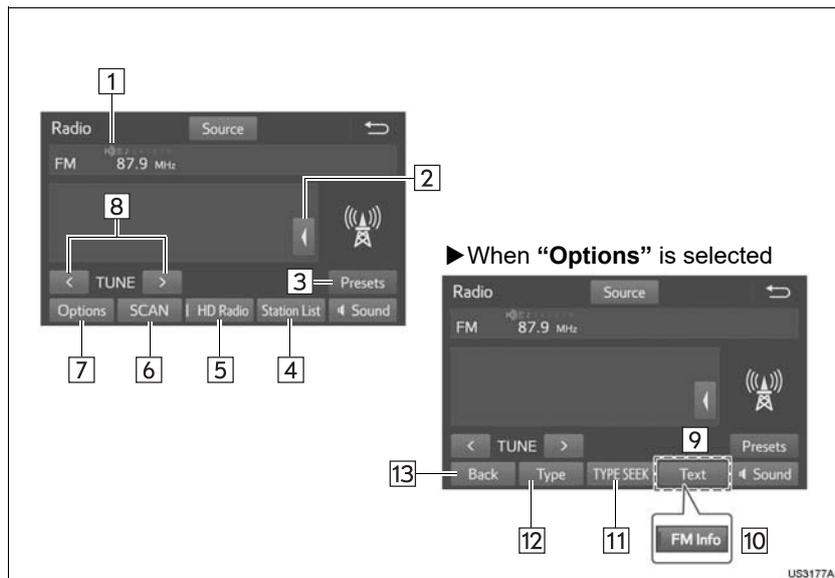

No.	Function
1	Select to display HD (multicast) channels available. (→P.95)
2	Select to display the cache radio operation buttons. (→P.92)
3	Select to display the radio preset buttons. (→P.91)
4	Select to display a list of receivable stations. (→P.92)
5	Select to turn HD Radio mode on/off. When the “ HD Radio ” indicator is off, the station list shows only analog broadcasts.
6	<ul style="list-style-type: none"> Select to scan for receivable stations. When a program type is selected: Select to scan for receivable stations of the selected program type/channel category.
7	Select to change the screen buttons (at the bottom of the screen) to the optional screen buttons.
8	<ul style="list-style-type: none"> Select to step up/down frequencies. Select and hold to seek for a station.
9	Select to display text messages.

2. RADIO OPERATION

No.	Function
10	Analog FM only: Select to display RBDS text messages. (→P.94)
11	Select to seek a receivable station of the selected category.
12	Select to display the "Type List" screen. (→P.94)
13	Select to change the screen buttons (at the bottom of the screen) back to the standard screen buttons.

INFORMATION

- The radio automatically changes to stereo reception when a stereo broadcast is received.


PRESET BUTTON SCREEN

Two preset button screens are available: the “Mixed Presets” screen and “Individual Presets” screen.

On the “Mixed Presets” screen, preset stations for all radio modes (AM, FM and XM Satellite Radio modes) are displayed together.

On the “Individual Presets” screen, only preset stations for the current radio mode are displayed.

- 1 Select “Presets”.
- 2 Select the desired item.

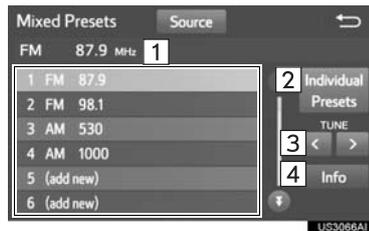

No.	Function
1	Select to tune in to the desired preset station/channel.
2	Select to change to the “Individual Presets” screen. (On the “Individual Presets” screen, select “Mixed Presets” to change to the “Mixed Presets” screen.)
3	Select to step up/down frequencies.
4	Select to display the control screen.

INFORMATION

- On the “Mixed Presets” screen, up to 36 stations (6 stations per page x 6 pages) can be set as presets. On the “Individual Presets” screen, up to another 12 AM stations, 12 FM stations, and 12 XM Satellite Radio stations can be set as presets. (Maximum 36 stations)

PRESETTING A STATION

- 1 Tune in the desired station.
- 2 Select “Presets”.
- 3 Select and hold “(Add New)”.

- To change a previously registered preset station to a different one, select and hold the preset station.
- When “(Add New)” is selected, a confirmation message appears. Select “Yes” and select “OK”.

INFORMATION

- The number of preset radio stations displayed on the screen can be changed. (→P.121)

SELECTING A STATION FROM THE LIST

- 1 Select **“Station List”**.
- 2 FM radio only: Select the desired program type.
- 3 Select the desired station.
“Info”: Select to display the control screen.

REFRESHING THE STATION LIST

- 1 Select **“Refresh”** on the “Station List” screen and the following screen will be displayed.
“Cancel Refresh”: Select to cancel the refresh.
“Source”: Select to change to another audio source while refreshing.

INFORMATION

- The audio system sound is muted during refresh operation.
- In some situations, it may take some time to update the station list.

CACHING A RADIO PROGRAM


A radio program can be cached and played back in a time-shifted manner.

PLAYING BACK THE CACHE MANUALLY

The broadcast cached in the program cache can be played back manually.

- 1 Select  on the right side of the screen.

- 2 Select the desired cache radio operation button.

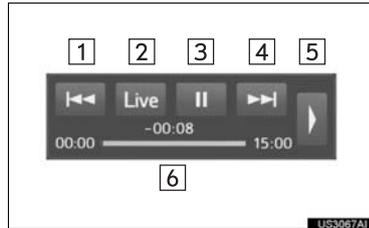

No.	Function
1	Select: Skips backward 2 minutes Select and hold: Fast rewinds continuously
2	Returns to the live radio broadcast
3	Pauses the playback (To restart, select )
4	Select: Skips forward 2 minutes Select and hold: Fast forwards continuously
5	Hides the cache operation buttons
6	Vertical bar: Shows what portion of the cached broadcast is currently playing Light blue bar: Shows time in which cache writing is in progress

AUTOMATIC PLAYBACK OF THE CACHE

If the radio broadcast is interrupted by another audio output, such as an incoming phone call, the system will automatically cache the interrupted portion and perform time-shift playback when the interruption ends. To manually operate the cache operation: (→P.92)

INFORMATION

- The system can store up to 15 minutes. Cached data will be erased when the radio mode or station is changed or when the audio system is turned off.
- If noise or silence occurs during the caching process, cache writing will continue, with the noise or silence recorded as is. In this case, the cached broadcast will contain the noise or silence when played back.

3

AUDIO SYSTEM

RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the “**FM Info**” indicator is on.

SELECTING A DESIRED PROGRAM TYPE

- 1 Select “**Options**”.
- 2 Select “**Type**”.
- 3 Select to select a program type/channel category.

- Once a program type has been set, “**TYPE SEEK**” will appear on the screen.
 - The program list is in the following order:
 - “Classical”
 - “Country”
 - “Easy Listening”
 - “Information”
 - “Jazz”
 - “News”
 - “Oldies”
 - “Other”
 - “Pop Music”
 - “Religion”
 - “Rock”
 - “R&B” (Rhythm and Blues)
 - “Sports”
 - “Talk”
 - “Traffic” (Not available when “HD Radio” indicator is off.)
 - “Emergency Alert”
- 4 Select “**TYPE SEEK**” and the system will start to seek for stations in the relevant program type/channel category.

INFORMATION

- If no relevant program can be found, “no type” will appear on the screen.

USING HD Radio™ TECHNOLOGY

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.

HD Radio features included in Toyota radios:

- Digital Sound — HD Radio broadcasts deliver crystal-clear, digital audio quality to listeners.
- HD2/HD3 Channels — FM stations can provide additional digital only audio programming with expanded content and format choices on HD2/HD3 channels.
- PSD — Program Service Data (PSD) gives you on-screen information such as artist name and song title.
- Artist Experience — Images related to the broadcast are displayed on the radio screen, such as album cover art and station logos.



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see <http://dts.com/patents>. HD Radio and the HD, HD Radio, and “ARC” logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.

3


AUDIO SYSTEM

AVAILABLE HD Radio™ TECHNOLOGY

MULTICAST

On the FM radio frequency most digital stations have “multiple” or supplemental programs on one FM station.

- 1 Select the “HD)” logo.

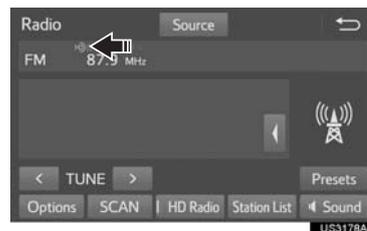

- 2 Select the desired channel.

- Press the “TUNE” button can also select the desired multicast channel.

INFORMATION

- HD Radio™ stations can be preset.
- An orange “HD)” logo indicator will be displayed on the screen when in digital. The “HD)” logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
- The song title, artist name and music genre will appear on the screen when available by the radio station. In addition, radios stations may send album cover pictures when available.
- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.

TROUBLESHOOTING GUIDE

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Turning the indicator of the "HD Radio" button off can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; https://hdradio.com/stations/feedback .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; https://hdradio.com/stations/feedback .

3


AUDIO SYSTEM

2. RADIO OPERATION

2. SiriusXM® Satellite Radio

OVERVIEW

Select **"SAT"** on the "Select Audio Source" screen. (→P.84)

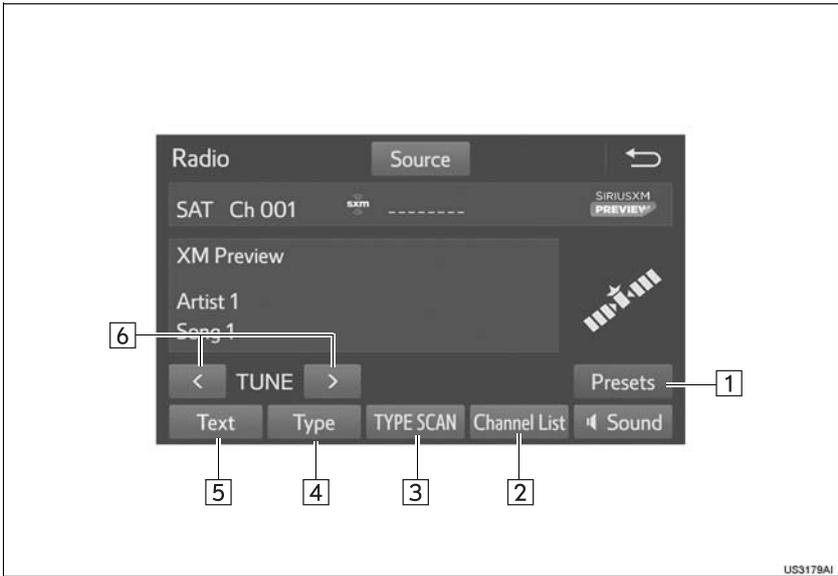

No.	Function
1	Select to display the radio preset buttons. (→P.91)
2	Select to display a receivable channel list. (→P.101)
3	Select to scan for receivable channels of the selected program type/channel category.
4	Select to display the "Type List" screen. (→P.94)
5	Select to display text messages.
6	Select to step up/down frequencies.

 **WARNING**

- **FCC WARNING:** Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **Radio frequency exposure.**
This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20cm) between the antenna and the body of any person at all time during use.

 **NOTICE**

- THIS DEVICE COMPLIES WITH PART15 OF THE FCC RULES.
- OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS,
1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

HOW TO SUBSCRIBE TO SiriusXM Radio Services

All SiriusXM services, including satellite radio and data services, plus streaming services, require a subscription, sold separately or as a package by Sirius XM Radio Inc. (or, in Canada, Sirius XM Canada Inc.), after any trial subscription which may be included with your vehicle purchase or lease. To subscribe after your trial subscription, call 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada).

IMPORTANT INFORMATION ABOUT YOUR SUBSCRIPTION

Your SiriusXM services will automatically stop at the end of your trial unless you decide to subscribe. If you decide to continue service, the paid subscription plan you choose will automatically renew and you will be charged the rate in effect at that time and according to your chosen payment method. Fees and taxes apply. You may cancel at any time by calling 1-866-635-2349. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada). All fees and programming subject to change. Traffic information not available in all markets.

NOTICE

- It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the SiriusXM Satellite Radio System or that support the SiriusXM website, the streaming service or any of its content. Furthermore, the AMBE[®] voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.
- Note: this applies to SiriusXM Satellite Radio receivers only and not SiriusXM Ready devices.

INFORMATION

- ABOUT SiriusXM Services
 - Most in-car trials today include SiriusXM's best package — All Access. It includes every channel available on your radio, plus streaming.

INFORMATION

- **SiriusXM All Access Subscription**
 - Listen everywhere with All Access. You get every channel available in your ride, plus you can listen on the app and online — so you can enjoy the best SiriusXM has to offer, anywhere life takes you. It's the only package that gives you all of our premium programming, including Howard Stern, every NFL, MLB[®] and NBA game, every NASCAR[®] race, NHL[®] games, 24/7 talk channels dedicated to the biggest leagues, and more. You get all kinds of commercial-free music, including artist-dedicated channels and more, plus sports, news, talk and entertainment.
 - Did you know? SiriusXM also delivers a wide variety of services to certain vehicles' entertainment and navigation systems such as Traffic, Weather, Sports Scores, Movie Listings, Fuel Prices, Stock Prices and more. For a list of available features in your vehicle, visit siriusxm.com/infotainment and get the most out of your driving experience.
- **RADIO OPERATION**
 - Look for the Sirius, XM, SiriusXM, Band, SAT, AUX, Radio or Source button and you're in. If you can't hear us, it's easy to get started:
Locate your Radio ID by turning to Channel 0. If you don't see your number there, go to siriusxm.com/activationhelp to find it.
Visit siriusxm.com/refresh or call 1-855-MYREFRESH (697-3373) to send a refresh signal to your radio.
Canadian Customers:
Locate your Radio ID by turning to Channel 0.
Visit siriusxm.ca/refresh to send a refresh signal to your radio or call 1-888-539-7474 for service.

DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

- If "Ch 000" is selected using the **"TUNE"** button, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

SELECTING A CHANNEL FROM THE LIST

- 1** Select **"Channel List"**.
- 2** Select the desired channel category.
- 3** Select the desired channel.

"Info": Select to display the control screen.

3

AUDIO SYSTEM

IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
"Ck Antenna"	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Toyota certified dealer for assistance.
"Ch Unauth"	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "Ch 000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
"No Signal"	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"Loading..."	The unit is acquiring audio or program information. Wait until the unit has received the information.
"Ch Off Air"	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
"Ch Unavail"	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel.

INFORMATION

- Contact the XM Listener Care Center at 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada).

2. RADIO OPERATION

3. INTERNET RADIO

LISTENING TO INTERNET RADIO

One of Toyota apps features is the ability to listen to internet radio. In order to use this service, a compatible phone and the system need to be set up. For details: →P.282

- 1 Display the “Select Audio Source” screen. (→P.84)
- 2 Select the internet radio application.



- The internet radio application screen is displayed.
- Perform operations according to the displayed application screen.
- If a compatible phone is already registered, it will be connected automatically.

INFORMATION

- Other applications can be activated while listening to internet radio.
- Some parts of applications can be adjusted using the switches on the steering wheel.
- For additional information, refer to <https://www.toyota.com/audio-multimedia/> or call 1-800-331-4331.

3. MEDIA OPERATION

1. USB MEMORY

OVERVIEW

The USB memory operation screen can be reached by the following methods:


- ▶ Connect a USB memory. (→P.85)
- ▶ Select “**USB**” on the “Select Audio Source” screen. (→P.84)

When an Apple CarPlay connection is established, this function will be unavailable.*

*: This function is not made available in some countries or areas.

3

AUDIO SYSTEM

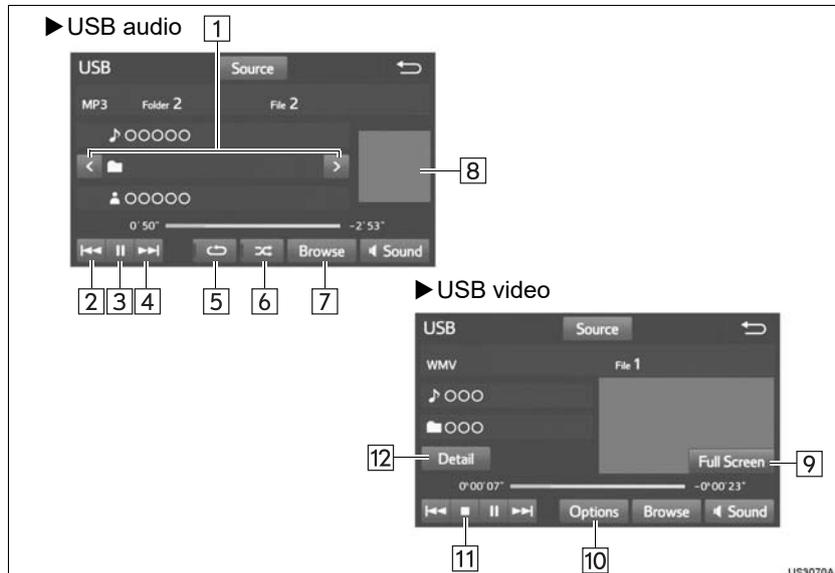

3. MEDIA OPERATION

No.	Function	
	Audio	Video
1	Select to select a folder/album.	—
2	<ul style="list-style-type: none"> • Select to select a file/track. • Select and hold to fast rewind. 	<ul style="list-style-type: none"> • Select to select a file. • Select and hold to fast rewind.
3	Select to play/pause.	Select to play/pause.
4	<ul style="list-style-type: none"> • Select to select a file/track. • Select and hold to fast forward. 	<ul style="list-style-type: none"> • Select to select a file. • Select and hold to fast forward.
5	Select to set repeat playback. (→P.108)	—
6	Select to set random playback. (→P.108)	—
7	Select to display the play mode selection screen. To return to the top screen, select “ Now playing ” on the list screen.	Select to display the play mode selection screen. To return to the top screen, select “ Now playing ” on the list screen.
8	<ul style="list-style-type: none"> • Displays cover art • Select to display a file/track list. To return to the top screen, select “ Now playing ” on the list screen.	—
9	—	Select to display expanded screen video.

No.	Function	
	Audio	Video
10	—	Select to display the option screen. (→P.108)
11	—	Select to stop the video screen.
12	—	Select to display the file information.

3

AUDIO SYSTEM

⚠ WARNING

- Do not operate the player's controls or connect the USB memory while driving.

⚠ NOTICE

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION

- The system can only output the sound while driving.

3. MEDIA OPERATION

USB AUDIO

REPEATING

The file/track currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

RANDOM ORDER

Files/tracks can be automatically and randomly selected.

- 1 Select the shuffle button to change on/off.

USB VIDEO

To change to USB video mode, select **“Browse”** on the USB audio screen, then select the **“Video”** tab and select the desired video file.

USB VIDEO OPTIONS

- 1 Select **“Options”**.



- 2 Select the desired setting to change.



No.	Function	Page
1	Select to change the screen size.	87
2	Select to display the image quality adjustment screen.	88


3. MEDIA OPERATION

2. iPod

OVERVIEW

The iPod operation screen can be reached by the following methods:

- ▶ Connect an iPod. (→P.85)
- ▶ Select “iPod (**DEVICE NAME**)” on the “Select Audio Source” screen. (→P.84)

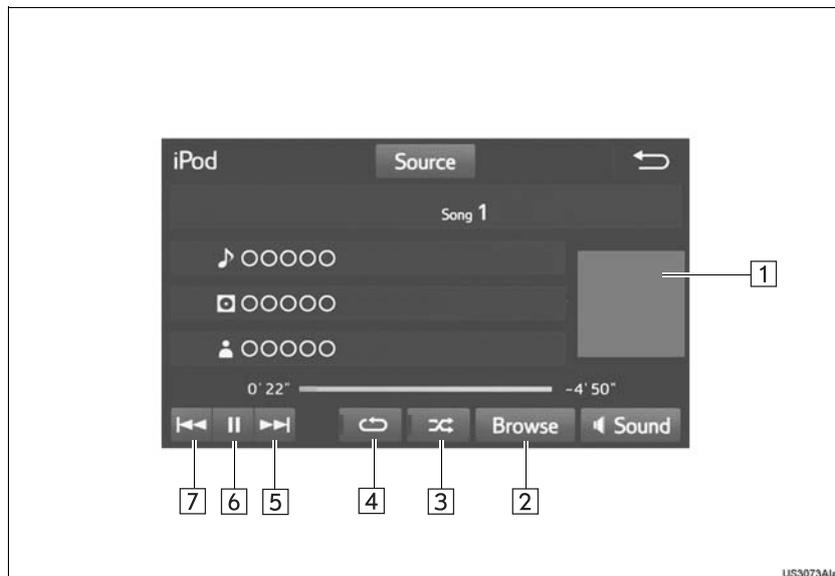

3

AUDIO SYSTEM

No.	Function
1	<ul style="list-style-type: none"> • Displays cover art • Select to display a track list. To return to the top screen, select “Now Playing” on the list screen.
2*	<ul style="list-style-type: none"> • Select to display the play mode selection screen. To return to the top screen, select “Now Playing” on the list screen.
3	<ul style="list-style-type: none"> • Select to set random playback.
4	<ul style="list-style-type: none"> • Select to set repeat playback.
5	<ul style="list-style-type: none"> • Press to select a track. • Press and hold to fast forward.
6	<ul style="list-style-type: none"> • Select to play/pause.
7	<ul style="list-style-type: none"> • Press to select a track. • Press and hold to fast rewind.

*: When an Apple CarPlay connection is established, this switch will not be displayed.

3. MEDIA OPERATION

WARNING

- Do not operate the player's controls or connect the iPod while driving.

NOTICE

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION

- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.
- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to on/off. (→P.121) It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available.
- Files/tracks selected by operating a connected iPod may not be recognized or displayed properly.
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable.
For known phone compatibility information, refer to <https://www.toyota.com/audio-multimedia/>.

iPod AUDIO

REPEATING

The track currently being listened to can be repeated.

- 1 Select the repeat button to change on/off.

RANDOM ORDER

Tracks can be automatically and randomly selected.

- 1 Select the shuffle button to change on/off.

3. MEDIA OPERATION

3. Bluetooth® AUDIO

The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your device does not support Bluetooth®, the Bluetooth® audio system will not function.

3

OVERVIEW

Select **“Bluetooth*1”** on the “Select Audio Source” screen. (→P.84)


Depending on the type of portable player connected, some functions may not be available and/or the screen may look differently than shown in this manual.

When an Apple CarPlay connection is established, Bluetooth® audio will be suspended and become unavailable.*2

AUDIO SYSTEM

*1: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

*2: This function is not made available in some countries or areas.

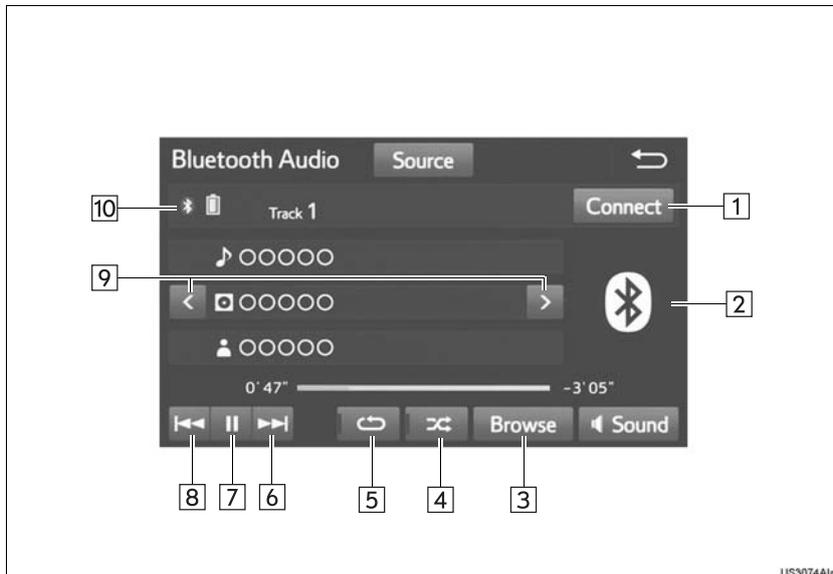

3. MEDIA OPERATION

No.	Function
1	Select to display the portable device connection screen. (→P.117)
2	<ul style="list-style-type: none">• Displays cover art• Select to display a track list. To return to the top screen, select “Now Playing” on the list screen.
3	Select to display the playlist screen. To return to the top screen, select “ Now Playing ” on the list screen.
4	Select to set random playback. (→P.117)
5	Select to set repeat playback. (→P.117)
6	<ul style="list-style-type: none">• Select to select a track.• Select and hold to fast forward.
7	Select to play/pause.
8	<ul style="list-style-type: none">• Select to select a track.• Select and hold to rewind.
9	Select to select an album.
10	Displays Bluetooth® device condition

**WARNING**

- Do not operate the player's controls or connect to the Bluetooth® audio system while driving.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

**NOTICE**

- Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

INFORMATION

- Depending on the Bluetooth® device that is connected to the system, the music may start playing when selecting  while it is paused. Conversely, the music may pause when selecting  while it is playing.
- In the following conditions, the system may not function:
 - The Bluetooth® device is turned off.
 - The Bluetooth® device is not connected.
 - The Bluetooth® device has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- For operating the portable player, see the instruction manual that comes with it.
- If the Bluetooth® device is disconnected due to poor reception from the Bluetooth® network when the power switch is in ACCESSORY or ON mode, the system automatically reconnects the portable player.
- If the Bluetooth® device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.
- Bluetooth® device information is registered when the Bluetooth® device is connected to the Bluetooth® audio system. When selling or disposing of the vehicle, remove the Bluetooth® audio information from the system. (→P.74)
- In some situations, sound output via the Bluetooth® audio system may be out of sync with the connected device or output intermittently.

CONNECTING A Bluetooth® DEVICE

To use the Bluetooth® audio system, it is necessary to register a Bluetooth® device with the system.

► Registering an additional device

- 1 Select **“Connect”** on the Bluetooth® audio control screen.
 - 2 For more information: →P.59
- Selecting a registered device
- 1 Select **“Connect”** on the Bluetooth® audio control screen.
 - 2 For more information: →P.61

LISTENING TO Bluetooth® AUDIO

REPEATING

The track or album currently being listened to can be repeated.

1 Select .

- Each time  is selected, the mode changes as follows:
 - track repeat → album repeat → off

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

1 Select .

- Each time  is selected, the mode changes as follows:
 - album random → all track random → off

3

AUDIO SYSTEM

3. MEDIA OPERATION

4. AUX

OVERVIEW

Select **"AUX"** on the "Select Audio Source" screen. (→P.84)



WARNING

- Do not connect portable audio device or operate the controls while driving.


NOTICE

- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

4. AUDIO REMOTE CONTROLS

1. STEERING SWITCHES

Some parts of the audio system can be adjusted using the switches on the steering wheel.

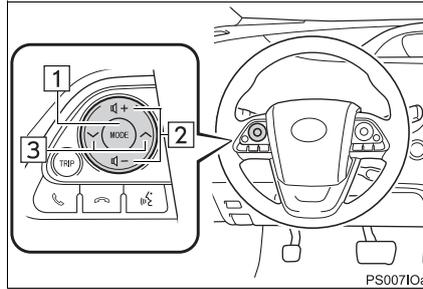

3

AUDIO SYSTEM

No.	Switch
1	"MODE" switch
2	Volume control switch
3	"V ^" switch

► "MODE" switch

Mode	Operation	Function
XM, AUX	Press	Change audio modes
	Press and hold	Mute (Press and hold again to resume the sound.)
AM, FM, USB*, iPod, BT audio*, APPS*	Press	Change audio modes
	Press and hold	Pause (Press and hold again to resume the playmode.)

*: When Apple CarPlay connection is established, this function will be unavailable.

► Volume control switch

Mode	Operation	Function
All	Press	Volume up/down
	Press and hold	Volume up/down continuously

4. AUDIO REMOTE CONTROLS

▶ “V Λ” switch

Mode	Operation	Function
AM/FM Radio	Press	Preset station/channel up/down
	Press and hold (0.8 sec. or more)	Seek up/down
	Press and hold (1.5 sec. or more)	Fast station/channel up/down
XM	Press	Preset channel up/down
	Press and hold (0.8 sec. or more)	Type seek up/down
	Press and hold (1.5 sec. or more)	Fast up/down
USB*, iPod, BT audio*	Press	Track/file up/down Track/file list up/down
	Press and hold	Fast track/file up/down Fast track/file list up/down

*: When Apple CarPlay connection is established, this function will be unavailable.

INFORMATION

 
- In the APPS mode, some operation may be done on the screen depend on the selected APPS.

5. SETUP

1. AUDIO SETTINGS

Detailed audio settings can be programmed.

- 1 Press the **"MENU"** button.



- 2 Select **"Settings"**.
- 3 Select **"Audio"**.
- 4 Select the items to be set.

AUDIO SETTINGS SCREEN



No.	Function	Page
1*	Select to change the number of preset radio stations/channels displayed on the screen.	122
2	Select to set detailed cover art settings.	122


*: Only in "Mixed Presets" (→P.91)

3

AUDIO SYSTEM


SETTING THE NUMBER OF RADIO PRESETS

- 1 Display the audio setting screen. (→P.121)
- 2 Select “**Number of Radio Presets**”.
- 3 Select the button with the desired number to be displayed.

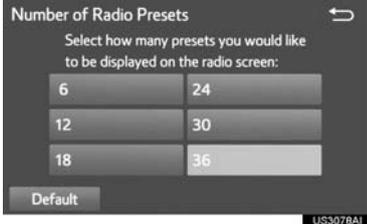

COVER ART SETTINGS

- 1 Display the audio setting screen. (→P.121)
- 2 Select “**Cover Art Settings**”.
- 3 Select the desired button to be set.

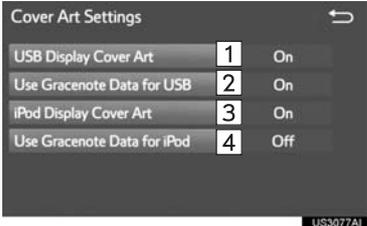

No.	Function
1	Select on/off to set the cover art display in USB mode.
2	Select on/off to set the priority of the Gracenote database in USB mode.
3	Select on/off to set the cover art display in iPod mode.
4	Select on/off to set the priority of the Gracenote database in iPod mode.

INFORMATION

- Images from the Gracenote database displayed on the screen may be different from the actual cover art.
- Selecting “Settings” on the “Sound Settings” screen can also display “Cover Art Settings” screen.

6. TIPS FOR OPERATING THE AUDIO SYSTEM

1. OPERATING INFORMATION



NOTICE

- To avoid damage to the audio system:
 - Be careful not to spill beverages over the audio system.

INFORMATION

- The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.

RADIO

Usually, a problem with radio reception does not mean there is a problem with the radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

FM

Fading and drifting stations: Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path: FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering: These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping: If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

3

AUDIO SYSTEM

AM

Fading: AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference: When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static: AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening or electrical motors. This results in static.

XM

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

iPod

- “Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.
- iPad, iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.
- The Lightning connector works with iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPod touch (5th generation), and iPod nano (7th generation).
- The 30-pin connector works with iPhone 4S, iPhone 4, iPhone 3GS, iPod touch (4th generation), iPod classic, and iPod nano (6th and 7th generation).

COMPATIBLE MODELS

The following iPod nano®, iPod touch® and iPhone® devices can be used with this system.

Made for

- iPod touch (6th generation)
- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6S Plus
- iPhone 6S
- iPhone 6 Plus
- iPhone 6
- iPhone 5S
- iPhone 5C
- iPhone 5
- iPhone 4S

INFORMATION

- This system only supports audio playback.
- Depending on differences between models or software versions etc., some models might be incompatible with this system.
When the portable player is not operated properly, make sure the connection to the vehicle.

FILE INFORMATION**COMPATIBLE USB DEVICES**

USB communication formats	USB 2.0 HS (480 Mbps) and FS (12 Mbps)
File formats	FAT 16/32
Correspondence class	Mass storage class

COMPATIBLE FILES **COMPRESSED**

Item	USB/iPod
Compatible file format	MP3/WMA/AAC
Folders in the device	Maximum 9999
Files in the device	Maximum 9999
Files per folder	Maximum 255

3

AUDIO SYSTEM

CORRESPONDING SAMPLING FREQUENCY

File type	Frequency (kHz)
MP3 files: MPEG 1 LAYER 3	32/44.1/48
MP3 files: MPEG 2 LSF LAYER 3	16/22.05/24
WMA files: Ver. 7, 8, 9 (9.1/9.2)	32/44.1/48
AAC files: MPEG4/AAC-LC	11.025/12/16/ 22.05/24/32/ 44.1/48


CORRESPONDING BIT RATES

File type	Bit rate (kbps)
MP3 files: MPEG 1 LAYER 3	32 - 320
MP3 files: MPEG 2 LSF LAYER 3	8 - 160
WMA files: Ver. 7, 8	CBR 48 - 192
WMA files: Ver. 9 (9.1/9.2)	CBR 48 - 320
AAC files: MPEG4/AAC-LC	16 - 320

(Variable Bit Rate (VBR) compatible)

- MP3 (MPEG Audio Layer 3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) are audio compression standards.
- This system can play MP3/WMA/AAC files on USB memory.
- MP4, WMV and AVI files can use the following resolutions: 128×96, 160×120, 176×144 (QCIF), 320×240 (QVGA), 352×240 (SIF), 352×288 (CIF), 640×480 (VGA), 720×480 (NTSC), 720×576 (PAL)
- When naming an MP3/WMA/AAC file, add an appropriate file extension (.mp3/.wma/.m4a).
- This system plays back files with .mp3/.wma/.m4a file extensions as MP3/WMA/AAC files respectively. To prevent noise and playback errors, use the appropriate file extension.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. This system cannot display album title, track title and artist name in other formats.
- WMA/AAC files can contain a WMA/AAC tag that is used in the same way as an ID3 tag. WMA/AAC tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz.
- This system can play back AAC files encoded by iTunes.
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, files recorded with a bit rate of at least 128 kbps are recommended.

- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fast forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA/AAC files.
- MP3/WMA/AAC files in folders up to 8 levels deep can be played.

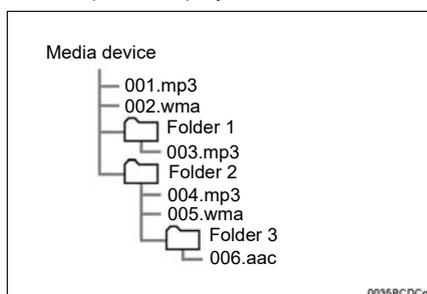

- The order changes depending on the personal computer and MP3/WMA/AAC encoding software you use.

TERMS

PACKET WRITE

- This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 TAG

- This is a method of embedding track related information in an MP3 file. This embedded information can include the track number, track title, the artist's name, the album title, the music genre, the year of production, comments, cover art and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

WMA TAG

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

MP3

- MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA

- WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.
- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

AAC

- AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

ERROR MESSAGES

Mode	Message	Explanation
USB	"USB error"	This indicates a problem in the USB memory or its connection.
	"No music files found"	This indicates that no MP3/WMA/AAC files are included in the USB memory.
iPod	"iPod error"	This indicates a problem in the iPod or its connection.
	"No music files found"	This indicates that there is no music data in the iPod.
	"Please check the iPod firmware version."	This indicates that the software version is not compatible. Perform the iPod firmware updates and try again.
	"iPod authorization failed."	This indicates that it failed to authorize the iPod. Please check your iPod.

3

AUDIO SYSTEM

INFORMATION

- If the malfunction is not rectified: Take your vehicle to your Toyota dealer.

6. TIPS FOR OPERATING THE AUDIO SYSTEM

4

VOICE COMMAND SYSTEM

1 VOICE COMMAND SYSTEM OPERATION

- 1. VOICE COMMAND SYSTEM..... 132
 - USING THE VOICE COMMAND SYSTEM..... 132
 - VOICE COMMAND SYSTEM OPERATION 133
- 2. CASUAL SPEECH RECOGNITION..... 139
- 3. COMMAND LIST 140

2 MOBILE ASSISTANT OPERATION

- 1. MOBILE ASSISTANT..... 144

1

2

3

4

5

6

7

8

9

 
1. VOICE COMMAND SYSTEM OPERATION

1. VOICE COMMAND SYSTEM

The voice command system enables the audio, hands-free systems, etc. to be operated using voice commands. Refer to the command list for samples of voice commands. (→P.140)

USING THE VOICE COMMAND SYSTEM

STEERING SWITCH



1 Talk switch


Voice command system:

- Press the talk switch to start the voice command system.
- To cancel voice recognition, press and hold the talk switch.

When an Apple CarPlay connection is established:

- Press and hold the talk switch to start Siri. To cancel Siri, press the talk switch.
- Press the talk switch to start the voice command system.

MICROPHONE

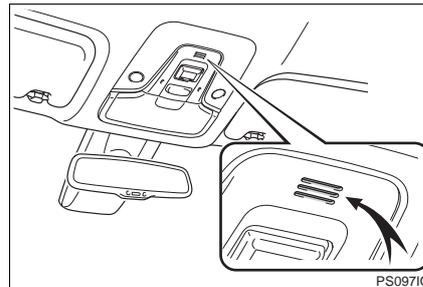

- It is unnecessary to speak directly into the microphone when giving a command.

INFORMATION

- Voice guidance for the voice command system can be skipped by pressing the talk switch.
- Voice commands may not be recognized if:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while voice commands are spoken.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
 - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
 - There is excessive background noise, such as wind noise.
- The ability to dial a contact using voice commands may take some time after the power switch is in ACCESSORY or ON mode, especially when the phone has many contacts.

VOICE COMMAND SYSTEM OPERATION


The voice command system is operated by selecting a category corresponding to each function.

- 1 Press the talk switch.
- 2 Say a category name or select **“Shortcut Menu”**.



- Selecting  or saying **“Help”** prompts voice guidance to offer examples of commands and operation methods.

- 3 Say the command displayed on the screen.

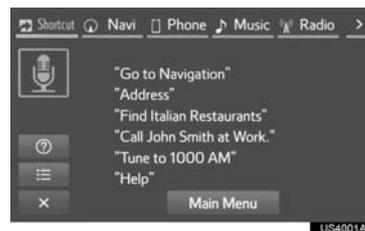

- Commands related with each function are displayed on the screen of the each function tab. Some commonly used commands are displayed on the screen of the function tab.
- The tabs are found on the upper part of the screen.

4


VOICE COMMAND SYSTEM

- Registered POIs, registered names in the contacts list etc., can be said in the place of the “<>” next to the commands. (→P.140)
For example: Say **“Find nearby dining”**, **“Call John smith”** etc.
- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
 - Say **“Go back”**.
- To cancel voice recognition, select  , or press and hold the talk switch.

INFORMATION


- If the system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- “Voice Recognition Prompts” can be set on the “Voice Settings” screen. (→P.75)
- Some voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.

DISPLAYING THE “Voice Settings” SCREENS

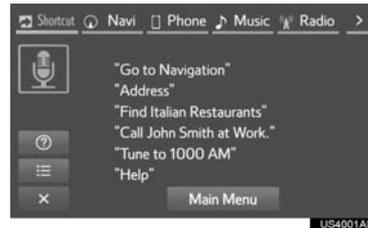

- Selecting  can be displayed the “Voice Settings” screen. In this case, the voice command system will be finished. (→P.75)

INCREASING THE VOICE RECOGNITION PERFORMANCE

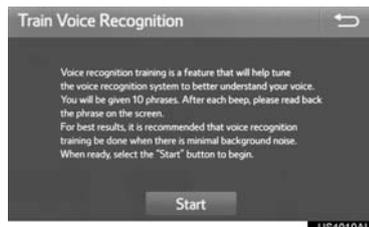

In order to improve voice recognition performance, select "Train Voice Recognition" on the "Voice Settings" screen. (→P.75)

When "Train Voice Recognition" is selected, the user will be asked to say 10 sample phrases. This will help the voice command system adapt to the user's accent.

VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS (ENGLISH ONLY)

- 1 Press the talk switch.
- 2 Say "**Enter an address**".
- 3 Say "**<house number, street name, city name, State>**" continuously.
 - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "**<number>**" or select the number.
 - Some areas cannot be recognized by the voice recognition system.
 - For information regarding the state/province setting to perform a destination search by address: →P.226
- 4 Say "**Yes**".
 - If another destination already is set, User should say command, "Go directly" or "Add to route". (→P.225)
 - After this, follow the voice guidance and search for a destination route by voice command operation.

4

VOICE COMMAND SYSTEM

INFORMATION

- The voice command recognition is designed to recognize the main body of the official street name.

For example: if the official street name is "East Main Street", the voice command recognition will recognize "Main".

- Say the desired number, cardinal direction etc. in the place of the "<>".

For example: Say "**West 555**".

- Inputting the house number can be skipped.
- Even if the state set using voice recognition is different from the set state in the "Address" screen (which was set when a destination was set manually), the set state in the "Address" screen will not change. (→P.227)
- The house number voice recognition conditions are outlined below:
 - Numerals: 10 digits or less
 - Numerals and cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "**and**".)
 - Cardinal direction and numerals: A total of 9 digits or less (Do not say "**and**".)
 - Numerals are recognized as single digits only.
 - The cardinal direction and hyphens are only recognized once.
 - The following cardinal directions can be recognized: North, East, West and South.

**VOICE COMMAND EXAMPLE:
SEARCH FOR A SONG***

1 Press the talk switch.

2 Say "**Play song <name>**".

- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "**<number>**" or select the number.
- The system starts playing music and the song lists are displayed.

INFORMATION

- The Gracenote database is only compatible with the USB or iPod mode.
- A USB memory or iPod must be connected to enable track searching and playback. (→P.105, 109)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
 - When the USB memory or iPod data has changed.
 - When the voice recognition language is changed. (→P.72)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.

*: Only for external music device

**VOICE COMMAND EXAMPLE:
CALL NAME**

- 1 Press the talk switch.
- 2 Say **“Call <contacts> <phone types>”**.
 - A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say **“<number>”** or select the number.

INFORMATION

- In the same manner as it is displayed on the screen, “Call <contacts> <phone types>”, after saying **“Call a contact”** say the name, or the name and type of phone, of a contact.
For example: **“Call a contact”, “John Smith”** or **“Call a contact”, “Mary Davis”, “Mobile”**
- There are 4 types of phones: Home, Mobile, Work and Other.
- Short or abbreviated names in the contacts list may not be recognized. Change names in the contacts list to full names.
- Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say **“Yes”** or **“No”**.
- When the system recognizes multiple names from the contacts list, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say or select the number of the name from the candidate list (number 1, number 2, etc.) to select a name from the candidate list.
- When a contact has multiple phone numbers registered in the contacts list, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say or select the number of the desired phone number from the candidate list (number 1, number 2, etc.) to select a phone number from the candidate list.

**VOICE COMMAND EXAMPLE:
DIAL NUMBER**

- 1 Press the talk switch.
- 2 Say the phone number.
 - In the same manner as it is displayed on the screen, "Dial <number>", after saying "**Dial a number**" say the phone number.
 - Say the phone number one digit at a time. For example, if the phone number is 2345678:
Say "**two three four five six seven eight**"
Do not say "**twenty three forty five sixty seven eight**"
 - ▶ Calling to the following phone numbers
 - 3 digit numbers (911, 411, 611)
 - 7 digit numbers (Local phone numbers)
 - 10 digit numbers (Area code + Local phone number)
 - 11 digit phone numbers (1 + Area code + Local phone number)
 - As the system cannot recognize additional numbers, say the complete number without stopping.
 - ▶ Calling to other phone numbers
- 3 Say "**Call**" or press the  switch on the steering wheel.

- When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen.

Pressing the  switch on the steering wheel makes a call to the top entry on the list. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list to select a phone number from the candidate list.

1. VOICE COMMAND SYSTEM OPERATION

2. CASUAL SPEECH RECOGNITION

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation. Not all voice commands are displayed in the function menu.

INFORMATION

- If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

EXPRESSION EXAMPLES FOR EACH FUNCTION

Command	Expression examples
"Go Home"	<i>Navigate to my house. Take me home.</i>
"Enter an Address"	<i>I need directions to an address. Give me a street.</i>
"Find Nearby <POI category>"	<i>Search for a <Restaurants> around here. Find a <Restaurants> nearby.</i>
"Call <contacts> <phonetypes>"	<i>Get me <Robert Brown>.</i>
"Dial <number>"	<i>Call <911>.</i>
"Play Artist <name>"*	<i>Play the artist <name>. I want to hear the band <name>.</i>

*: Only for external music device

4

VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION

3. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- Frequently used commands are listed in the following tables.
- For devices that are not installed in the vehicle, the related commands will not be displayed in the screen. Also, according to conditions, other commands may not be displayed in the screen.
- The functions available may vary according to the system installed.

- Voice recognition language can be changed. (→P.72)

▶ Main Menu

Command	Action
"Navigation"	Displays navigation short cut menu
"Phone"	Displays phone short cut menu
"Music"	Displays music short cut menu
"Radio"	Displays radio short cut menu
"Information"	Displays information short cut menu
"Climate"	Displays climate short cut menu

▶ Shortcut Menu

Command	Action
"Go to <tab>"	Displays the command list of the selected tab
"Address"	Enables setting a destination by saying the address
"Find <POI category>"	Displays a list of <POI category* ¹ > near the current position* ²
"Call <contacts> <phonetypes>"	Places a call to the said phone type of the contact from the phone book
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Help"	Prompts voice guidance to offer examples of commands or operation methods

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the Toyota apps. (→P.286)

▶ Navi Menu

Command	Action
"Address"	Enables setting a destination by saying the address
"Find <POI category>"	Displays a list of <POI category* ¹ > near the current position* ²
"Go Home"	Displays the route to home
"Delete Destination"	Deletes the destination
"More Hints"	Displays more commonly used commands

*¹: For example; "Gas stations", "Restaurants", etc.

*²: Depending on the search results, a POI list may be provided by a relevant POI application of the Toyota apps. (→P.286)

▶ Phone Menu*

Command	Action
"Call <contacts> <phonetypes>"	Places a call to the said phone type of the contact from the phone book
"Dial <phone number>"	Places a call to the said phone number
"Show Recent Calls"	Displays the call history screen
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call

*: When an Apple CarPlay connection is established, this voice commands will be unavailable.

1. VOICE COMMAND SYSTEM OPERATION

► Music Menu

Command	Action
“Play Artist <name>”*	Plays tracks from the selected artist
“Play Album <name>”*	Plays tracks from the selected album
“Play Song <name>”*	Plays the selected track
“Turn Music On/Off”	Turns the audio system on/off
“More Hints”	Displays more commonly used commands

*: When an Apple CarPlay connection is established, this voice commands will be unavailable.

► Radio Menu

Command	Action
“Tune to <frequency> AM”	Changes the radio to the specified AM frequency
“Tune to preset <number>”	Changes the radio to the specified preset radio station
“Tune to satellite <channel name>”*	Changes the radio to the specified satellite radio station with the specified name
“Listen to <genre>”*	Changes the radio to the specified satellite radio station of the specified genre
“Listen to <genre> on satellite”*	
“More Hints”	Displays more commonly used commands

*: When the voice recognition language is set to English.

► Info menu

Command	Action
"Show Forecast"	Displays weather information
"Get the forecast for <area>"	Display the forecast for specified area
"Show Doppler weather map"	Displays doppler weather map
"Show Traffic"	Displays traffic information
"Get traffic along this road"	Displays traffic information along the current road
"Show predictive traffic"	Displays predictive traffic information

4

► Climate menu

Command	Action
"Turn Climate Control On/Off"	Turns air conditioning system on/off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees* ¹

*1: Only within the possible temperature range of the air conditioning system


2. MOBILE ASSISTANT OPERATION

1. MOBILE ASSISTANT


The Mobile Assistant feature will activate Apple's Siri® Eyes Free mode via the steering wheel switches. To operate the Mobile Assistant, a compatible cellular phone must be registered and connected to this system via Bluetooth®. (→P.51)

When an Apple CarPlay connection is established, this function will be unavailable.

- 1 Press and hold the talk switch on the steering wheel until you hear the beeps.

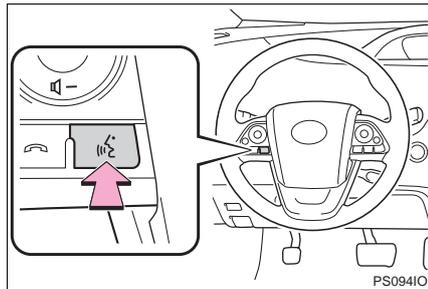

- 2 The Mobile Assistant can be used only when the following screen is displayed.

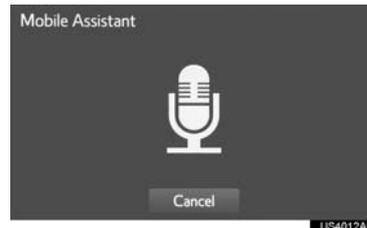

- To cancel the Mobile Assistant: Select **“Cancel”** or press and hold the talk switch on the steering wheel.
- To restart the Mobile Assistant for additional commands, press the talk switch on the steering wheel.
 - Mobile Assistant can only be restarted after the system responds to a voice command.
 - After some phone and music commands, the Mobile Assistant feature will automatically end to complete the requested action.
- The volume of the Mobile Assistant can be adjusted using the **“VOL”** button or steering wheel volume control switches. The Mobile Assistant and phone call volumes are synchronized.

INFORMATION

- The available features and functions may vary based on the iOS version installed on the connected device.
- Some Siri® features are limited in Eyes Free mode. If you attempt to use an unavailable function, Siri® will inform you that the function is not available.
- If Siri® is not enabled on the cellular phone connected via Bluetooth®, an error message will be displayed on the screen.
- While a phone call is active, the Mobile Assistant cannot be used.
- If using the navigation feature of the cellular phone, ensure the active audio source is Bluetooth® audio or iPod in order to hear turn by turn direction prompts.

MICROPHONE

It is not necessary to speak directly into the microphone when using the Mobile Assistant. (Microphone location: →P.132)

INFORMATION

- Wait for the listening beeps before using the Mobile Assistant.
- The Mobile Assistant may not recognize commands in the following situations:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while the Mobile Assistant is being used.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned toward the microphone.

4

VOICE COMMAND SYSTEM

2. MOBILE ASSISTANT OPERATION

5

INFORMATION

1 USEFUL INFORMATION

- 1. RECEIVING WEATHER INFORMATION 148
 - DISPLAYING WEATHER INFORMATION 148
- 2. DATA SERVICES SETTINGS 150
 - SETTING DOWNLOAD METHODS 150

1

2

3

4

5

6

7

8

9

 
1. USEFUL INFORMATION

1. RECEIVING WEATHER INFORMATION

Weather information can be received via the HD Radio or by the Toyota mobile application on a Bluetooth® phone. For details about the Toyota mobile application: →P.281

DISPLAYING WEATHER INFORMATION

- 1 Press the “MENU” button.



- 2 Select “Info”.
- 3 Select “Weather”.

- 4 Check that the “Weather” screen is displayed.



No.	Function
1	Select to display the weather of the current location. (→P.149)
2	Select to display the weather of a desired location in the recently checked locations list.
3	Select to display the weather of a desired location in the national cities list.
4	Select to display the weather of a desired location in the other local cities list.
5	Select to display weather information over the map.

INFORMATION

- Weather information is available in the 48 states, D.C. and Alaska of the United States.
- The weather for current location might not show the closest city when it first displays.

**DISPLAYING THE WEATHER
OF THE CURRENT LOCATION**

- 1** Display the “Weather” screen.
(→P.148)
- 2** Select “**Current Weather**”.
- 3** Select the desired tab to be displayed.


1. USEFUL INFORMATION

2. DATA SERVICES SETTINGS

SETTING DOWNLOAD METHODS

Data service information, which is comprised of traffic information and weather information, can be received via the HD Radio and by the Toyota mobile application on a Bluetooth® phone. The receiving method can be set to both or only via the HD Radio. For details about the Toyota mobile application: →P.281

- 1 Press the “MENU” button.

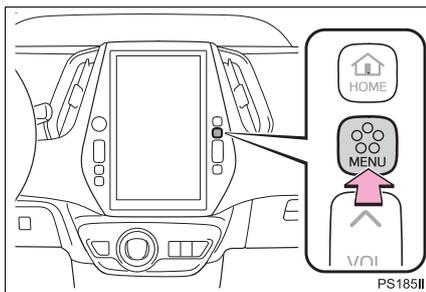

- 2 Select “Settings”.
- 3 Select “Data Services”.

- 4 Select the desired item to be set.



No.	Function
1	Select to receive data service information via both the HD Radio and the Toyota mobile application on a Bluetooth® phone. When both methods are available, the HD Radio will be preferred.

INFORMATION

- These settings are available in the 48 states, D.C. and Alaska of the United States.

6

PERIPHERAL MONITORING SYSTEM

1 REAR VIEW MONITOR SYSTEM

1. REAR VIEW MONITOR SYSTEM	152
REAR VIEW MONITOR SYSTEM	152
DRIVING PRECAUTIONS	152
SCREEN DESCRIPTION	154
2. REAR VIEW MONITOR SYSTEM PRECAUTIONS.....	156
AREA DISPLAYED ON SCREEN.....	156
THE CAMERA	157
DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD	158
WHEN APPROACHING THREE-DIMENSIONAL OBJECTS	159
3. THINGS YOU SHOULD KNOW	161
IF YOU NOTICE ANY SYMPTOMS	161

1

2

3

4

5

6

7

8

9

1. REAR VIEW MONITOR SYSTEM

1. REAR VIEW MONITOR SYSTEM

REAR VIEW MONITOR SYSTEM

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle with fixed guide lines on the screen while backing up, for example while parking.

INFORMATION

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.
- The image is displayed on the top half of the screen. A black image is displayed on the bottom half, but this is not a malfunction.

DRIVING PRECAUTIONS

The rear view monitor system is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the rear view monitor system.

! WARNING

- Never depend on the rear view monitor system entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.
Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- The instructions given are only guidelines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the rear view monitor system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.


! WARNING

- Do not use the rear view monitor system in the following cases:
 - On icy or slick road surfaces, or in snow
 - When using tire chains or emergency tires
 - When the back door is not closed completely
 - On roads that are not flat or straight, such as curves or slopes.
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the fixed guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P.158)

1. REAR VIEW MONITOR SYSTEM

SCREEN DESCRIPTION

The rear view monitor system screen will be displayed if the shift position is shifted to the "R" while the power switch is in ON mode.

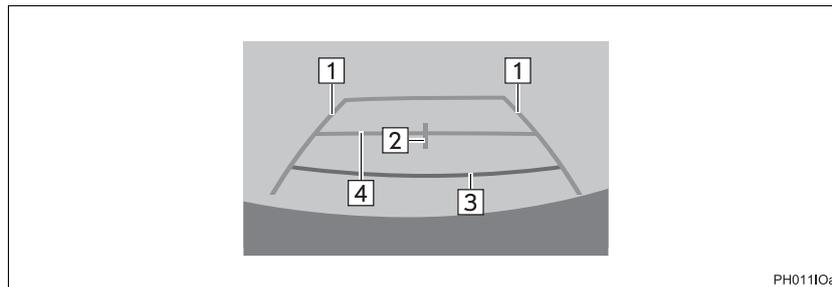

No.	Display	Function
1	Vehicle width guide lines	Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none">The displayed width is wider than the actual vehicle width.
2	Vehicle center guide line	This line indicates the estimated vehicle center on the ground.
3	Distance guide line	Shows distance behind the vehicle. <ul style="list-style-type: none">Displays a point approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.
4	Distance guide line	Shows distance behind the vehicle. <ul style="list-style-type: none">Displays a point approximately 3 ft. (1 m) (blue) from the edge of the bumper.

CANCELING REAR VIEW MONITOR SYSTEM


The rear view monitor system is canceled when the shift position is shifted into any position other than the "R".

1. REAR VIEW MONITOR SYSTEM

2. REAR VIEW MONITOR SYSTEM PRECAUTIONS

AREA DISPLAYED ON SCREEN

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle.

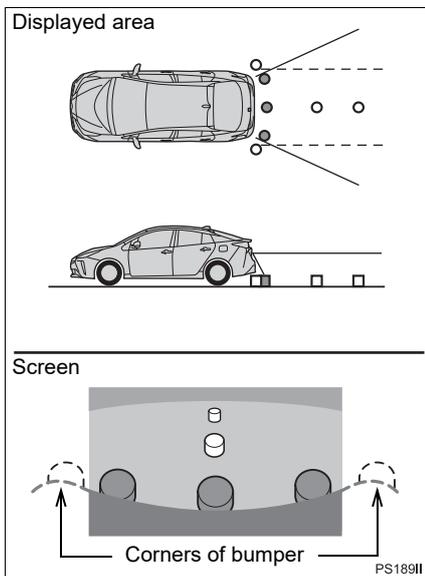


- The image adjustment procedure for the rear view monitor system screen is the same as the procedure for adjusting the navigation screen. (→P.48)

INFORMATION

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

THE CAMERA

The camera for the rear view monitor system is located as shown in the illustration.

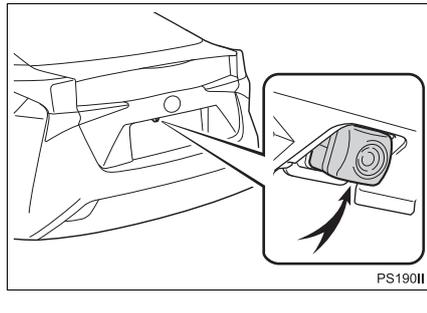**USING THE CAMERA**

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

NOTICE


- The rear view monitor system may not operate properly in the following cases.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
 - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
 - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Toyota dealer as soon as possible.

DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the fixed guide lines on the screen and the actual distance/course on the road.

WHEN THE GROUND BEHIND THE VEHICLE SLOPES UP SHARPLY


The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

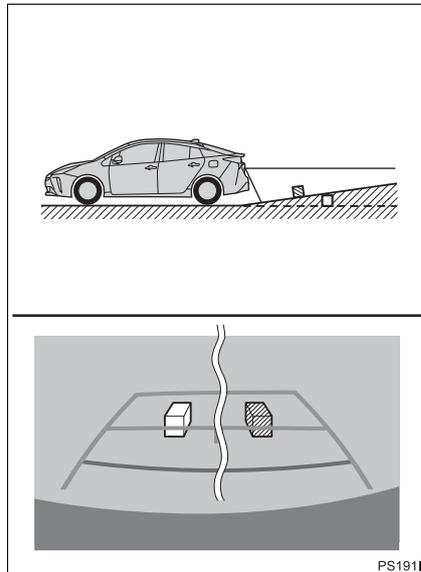

PS191II


WHEN THE GROUND BEHIND THE VEHICLE SLOPES DOWN SHARPLY

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide-lines and the actual distance/course on the road.

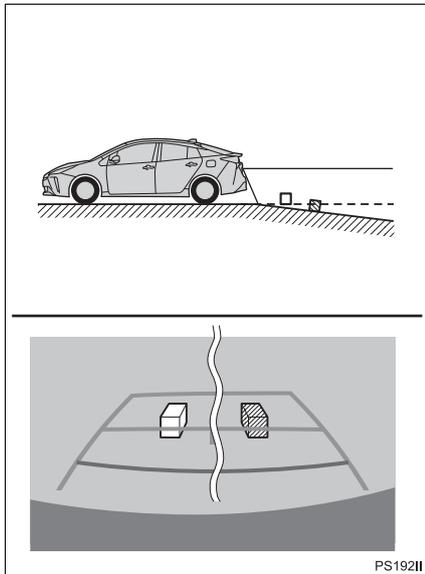

WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the fixed guide lines on the screen and the actual distance/course on the road.

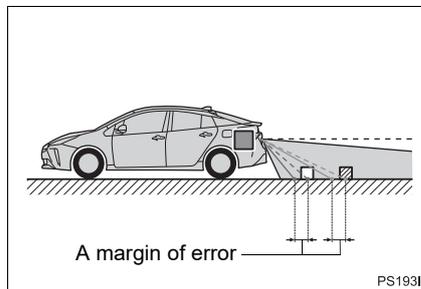


WHEN APPROACHING THREE-DIMENSIONAL OBJECTS

The distance guide lines are displayed according to flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the vehicle width guide lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

VEHICLE WIDTH GUIDE LINES

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the vehicle width guide lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the vehicle width guide lines. In reality if you back up as guided by the vehicle width guide lines, the vehicle may hit the truck.

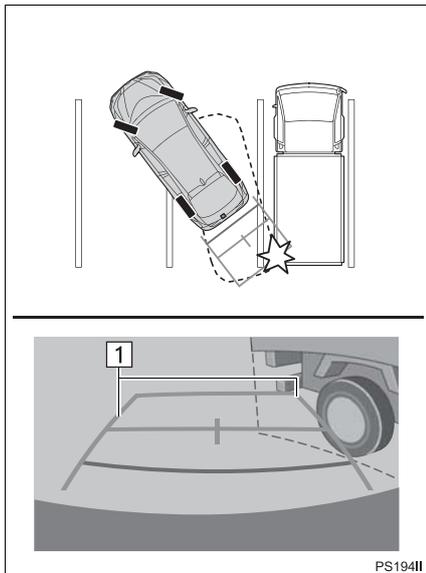


PS194II

▶ 1 Vehicle width guide lines

DISTANCE GUIDE LINES

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is farthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

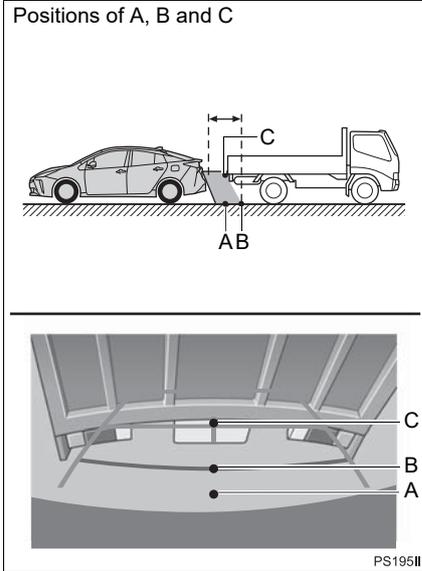

PS195II

1. REAR VIEW MONITOR SYSTEM

3. THINGS YOU SHOULD KNOW

IF YOU NOTICE ANY SYMPTOMS

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Toyota dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> • The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud etc.) is adhering to the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights etc. 	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the rear view monitor system is the same as the procedure for adjusting the navigation screen. (→P.48)</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Toyota dealer.
The fixed guide lines are very far out of alignment	<p>The camera position is out of alignment.</p> <ul style="list-style-type: none"> • The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.) • The vehicle is used on an incline. 	<p>Have the vehicle inspected by your Toyota dealer.</p> <p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings.</p>

1. REAR VIEW MONITOR SYSTEM

7

PHONE

1 PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

- 1. QUICK REFERENCE 164
- 2. SOME BASICS 165
 - REGISTERING/CONNECTING A
Bluetooth® PHONE 166
 - USING THE PHONE SWITCH/
MICROPHONE 166
 - VOICE COMMAND SYSTEM..... 167
 - ABOUT THE CONTACTS IN THE
CONTACT LIST 168
 - WHEN SELLING OR DISPOSING OF
THE VEHICLE..... 169
- 3. CALLING ON THE Bluetooth®
PHONE..... 170
 - BY FAVORITES LIST 171
 - BY CALL HISTORY 171
 - BY CONTACTS LIST 172
 - BY DIAL PAD 174
 - BY OFF HOOK SWITCH 174

- 4. RECEIVING ON THE Bluetooth®
PHONE 175
 - INCOMING CALLS 175
- 5. TALKING ON THE Bluetooth®
PHONE 176
 - INCOMING CALL WAITING 178
- 6. Bluetooth® PHONE MESSAGE
FUNCTION 179
 - MESSAGE INBOX SCREEN 179
 - RECEIVING A MESSAGE 180
 - CHECKING MESSAGES 181
 - REPLYING TO A MESSAGE
(QUICK REPLY)..... 182
 - CALLING THE MESSAGE
SENDER 183

2 SETUP

- 1. PHONE SETTINGS 184
 - “Sounds” SCREEN 185
 - “Contacts/Call History” SCREEN 186
 - “Messaging” SCREEN 192
 - “Notifications” SCREEN 193

3 WHAT TO DO IF...

- 1. TROUBLESHOOTING 195

1

2

3

4

5

6

7

8


9

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

1. QUICK REFERENCE

The phone top screen can be used to make a phone call. To display the hands-free operation screen, press the **“MENU”** button and select **“Phone”**, or press the  switch on the steering wheel.

Several functions are available to operate on each screen that is displayed by selecting the 4 tabs.

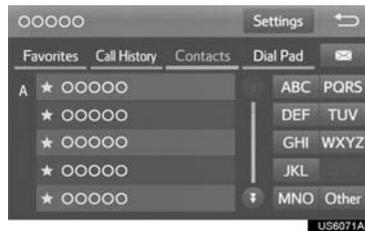

Function		Page
Phone operation	Registering/connecting Bluetooth® phone	51
	Calling on the Bluetooth® phone	170
	Receiving on the Bluetooth® phone	175
	Talking on the Bluetooth® phone	176
Message function	Using the Bluetooth® phone message function	179
Setting up a phone	Phone settings	184
	Bluetooth® settings	58

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

2. SOME BASICS

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth®. Bluetooth® is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.

When an Apple CarPlay connection is established, phone functions will be performed by Apple CarPlay instead of the hands-free system.



WARNING

- While driving, do not use a cellular phone or connect the Bluetooth® phone.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.



NOTICE

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

INFORMATION

- This system is not guaranteed to operate with all Bluetooth® devices.
- If your cellular phone does not support Bluetooth®, this system cannot function.
- In the following conditions, the system may not function:
 - The cellular phone is turned off.
 - The current position is outside the communication area.
 - The cellular phone is not connected.
 - The cellular phone has a low battery.
- When using Bluetooth® audio and hands-free at the same time, the following problems may occur:
 - The Bluetooth® connection may be cut.
 - Noise may be heard on the Bluetooth® audio playback.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

REGISTERING/CONNECTING A Bluetooth® PHONE

To use the hands-free system for cellular phones, it is necessary to register a cellular phone with the system. (→P.51)


Bluetooth® PHONE CONDITION DISPLAY

The condition of the Bluetooth® phone appears on the upper right side of the screen. (→P.20)

USING THE PHONE SWITCH/MICROPHONE

► Steering switch

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

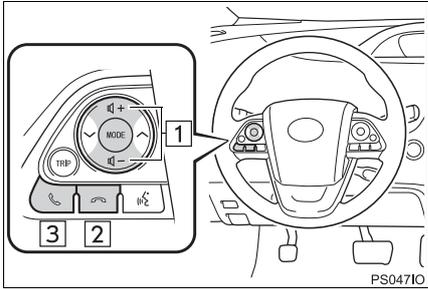


- 1 Volume control switches
 - Press the “+” side to increase the volume.
 - Press the “-” side to decrease the volume.
- 2 On hook switch
- 3 Off hook switch
 - If the switch is pressed when an Apple CarPlay connection is established, the Apple CarPlay phone application will be displayed on the system screen.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


► Microphone

 The microphone is used when talking on the phone.



VOICE COMMAND SYSTEM

 Press this switch to operate the voice command system.



- The voice command system and its list of commands can be operated. (→P.132)

INFORMATION

- The other party's voice will be heard from the front speakers. The audio system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
 - Driving on an unpaved road. (Making excessive traffic noise.)
 - Driving at high speeds.
 - The roof or windows are open.
 - The air conditioning vents are pointed towards the microphone.
 - The sound of the air conditioning fan is loud.
 - There is a negative effect on sound quality due to the phone and/or network being used.

ABOUT THE CONTACTS IN THE CONTACT LIST

- The following data is stored for every registered phone. When another phone is connected, the following registered data of the previously connected phone cannot be read:
 - Contact data
 - Call history data
 - Favorites data
 - Image data
 - All phone settings
 - Message settings

INFORMATION

- When a phone's registration is deleted, the above-mentioned data is also deleted.

WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (→P.74)

- The following data in the system can be initialized:
 - Contact data
 - Call history data
 - Favorites data
 - Image data
 - All phone settings
 - Message settings

INFORMATION


- Once initialized, the data and settings will be erased. Pay careful attention when initializing the data.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

3. CALLING ON THE Bluetooth® PHONE


After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are several methods by which a call can be made, as described below.

- 1 Press the “MENU” button.

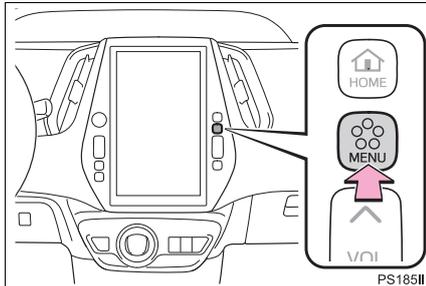

- 2 Select “Phone”.

- 3 Select the desired tab to call from.

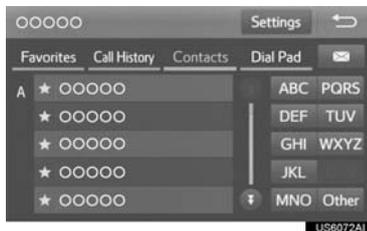

- The phone top screen can be displayed by pressing the  switch on the steering wheel.

How to make a call list	Page
By favorites list	171
By call history	171
By contacts list*	172
By dial pad*	174
By e-mail/SMS/MMS	183
By POI call*	218
By off hook switch	174
By Toyota apps*	287
By voice command system	137

*: The operation cannot be performed while driving.

BY FAVORITES LIST

Calls can be made using registered contacts which can be selected from a contact list. (→P.191)

- 1 Display the phone top screen. (→P.170)
- 2 Select the “**Favorites**” tab and select the desired contact.




- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

BY CALL HISTORY

Up to 30 of the latest call history items (missed, incoming and outgoing) can be selected from the “Call History” tab.

- 1 Display the phone top screen. (→P.170)
- 2 Select the “**Call History**” tab and select  or the desired contact.

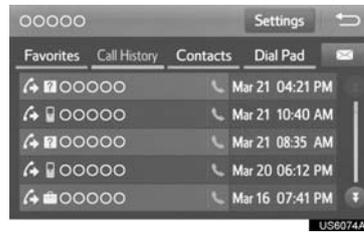

- The icons of call type are displayed.

 : Missed call

 : Incoming call

 : Outgoing call

- ▶ When  is selected

- 3 Check that the “Call” screen is displayed.

- ▶ When the desired contact is selected

- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

INFORMATION


- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the contact list is received, the name is displayed.
- Number-withheld calls are also memorized in the system.
- International phone calls may not be made depending on the type of cellular phone you have.
- The list should group together consecutive entries with the same phone number and same call type. For example, two calls from Kay Rowles's mobile would be displayed as follows: Kay Rowles (2)
- By pressing the  switch on the steering wheel, a call to the latest history item can be made.

BY CONTACTS LIST

Calls can be made by using contact data which is transferred from a registered cellular phone. (→P.173)

Up to 2500 contacts (maximum of 4 phone numbers and e-mail addresses per contact) can be registered in the contact list.

- 1 Display the phone top screen. (→P.170)
- 2 Select the **“Contacts”** tab and select the desired contact.

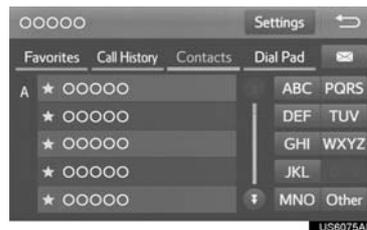


- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

WHEN THE CONTACT IS EMPTY

FOR PBAP COMPATIBLE Bluetooth® PHONES

▶ When “Automatic Transfer” is set to off (→P.186)


- 1 Display the phone top screen. (→P.170)
- 2 Select the desired item.
 - The following screen will not display when transferring from a hands-free mode.

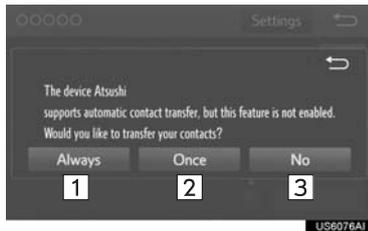

No.	Function
1	Select to transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Transfer”.
2	Select to transfer all the contacts from a connected cellular phone only once.
3	Select to cancel transferring.

FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES

- 1 Select the desired item.

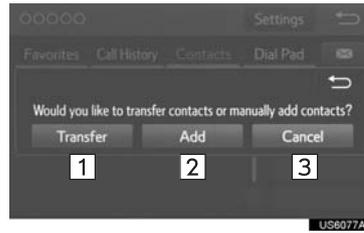

No.	Function
1	Select to transfer the contacts from the connected cellular phone.
2	Select to add a new contact manually.
3	Select to cancel transferring.

- ▶ When “Transfer” is selected
- 2 Follow the steps in “TRANSFER CONTACTS FROM PHONE” from “STEP 2”. (→P.188)
- ▶ When “Add” is selected
- 2 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.189)

7 PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

INFORMATION

- Manual transfer operation cannot be performed while driving.
- If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.
- Depending on the type of Bluetooth® phone:
 - It may be necessary to perform additional steps on the phone when transferring contact data.
 - The registered image in the contact list may not transfer depending on the type of Bluetooth® phone connected.

BY DIAL PAD

- 1 Display the phone top screen.
(→P.170)
- 2 Select the “Dial Pad” tab and enter the phone number.



- 3 Select  or press the  switch on the steering wheel.
- 4 Check that the “Call” screen is displayed.

INFORMATION

- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

BY OFF HOOK SWITCH

Calls can be made using the latest call history item.


- 1 Press the  switch on the steering wheel to display the phone top screen.
- 2 Press the  switch on the steering wheel to display the “Call History” screen.
- 3 Press the  switch on the steering wheel to call the latest history item.
- 4 Check that the “Call” screen is displayed.

4. RECEIVING ON THE Bluetooth® PHONE

INCOMING CALLS

When a call is received, this screen is displayed with a sound.

- 1 Select  or press the  switch on the steering wheel to talk on the phone.

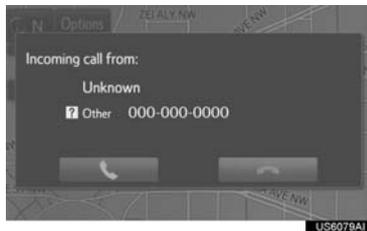

To refuse to receive the call: Select  or press the  switch on the steering wheel.

To adjust the volume of a received call: Press the “VOL” switch, or use the volume control switch on the steering wheel.


INFORMATION

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The incoming call display mode can be set. (→P.193)
- The ringtone that has been set in the “Sound Settings” screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the system and Bluetooth® phone may sound simultaneously when there is an incoming call. (→P.185)

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

5. TALKING ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.

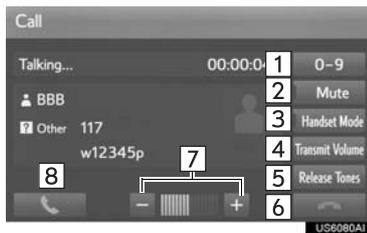

No.	Function	Page
1	Select to display the dial pad to send tones.	176
2	Select to mute your voice to the other party.	—
3	Select to change handset modes between hands-free and cellular phone.	—
4	Select to adjust your voice volume that the other party hears from their speaker.	177
5	Select to send tones. This button only appears when a number that contains a (w) is dialed in hands-free mode.	177
6	Select to hang up the phone.	—
7	Select “+” or “-” to adjust the volume of the other party’s voice.	—

No.	Function	Page
8	Select to start talking with the other party.	178

INFORMATION

- Changing from hands-free call to cellular phone call is not possible while driving.
- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.

SENDING TONES

BY DIAL PAD

This operation cannot be performed while driving.

- 1 Select “0-9”.



- 2 Enter the desired number.

BY SELECTING “Release Tones”

“Release Tones” appear when a continuous tone signal(s) containing a (w) is registered in the contact list.

This operation can be performed while driving.


- 1 Select “Release Tones”.

INFORMATION

- A continuous tone signal is a character string that consists of numbers and the characters p or w. (e.g. 056133w0123p#1*)
- When the “p” pause tone is used, the tone data up until the next pause tone will be automatically sent after 2 seconds have elapsed. When the “w” pause tone is used, the tone data up until the next pause tone will be automatically sent after a user operation is performed.
- Release tones can be used when automated operation of a phone based service such as an answering machine or bank phone service is desired. A phone number with continuous tone signals can be registered in the contact list.
- Tone data after a “w” pause tone can be operated on voice command during a call.

TRANSMIT VOLUME SETTING

- 1 Select “Transmit Volume”.
- 2 Select the desired level for the transmit volume.

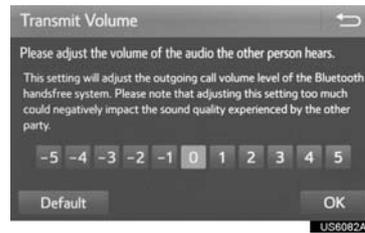

- 3 Select “OK”.

INFORMATION


- The sound quality of the voice heard from the other party’s speaker may be negatively impacted.
- To reset the transmit volume, select “Default”.
- “Transmit Volume” is dimmed when mute is on.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

INCOMING CALL WAITING

When a call is interrupted by a third party while talking, this screen is displayed.

- 1 Select  or press the  switch on the steering wheel to start talking with the other party.

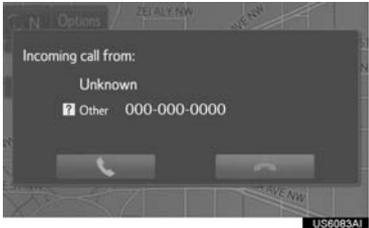

To refuse to receive the call: Select  or press the  switch on the steering wheel.

- Each time  is selected or the  switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

INFORMATION

- This function may not be available depending on the type of cellular phone.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

 
6. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying using the system.

Depending on the type of Bluetooth® phone connected, received messages may not be transferred to the message inbox.

If the phone does not support the message function, this function cannot be used.


- 1 Press the “MENU” button.



- 2 Select “Phone”.

- 3 Select .

MESSAGE INBOX SCREEN

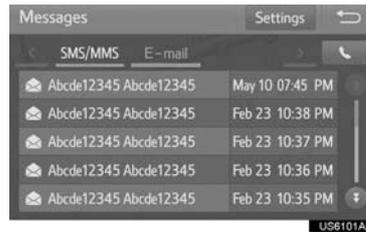

 : Select to change to phone mode.

Function	Page
Receiving a message	180
Checking messages	181
Replying to a message (quick reply)	182
Calling the message sender	183
Message settings	192

7

PHONE

RECEIVING A MESSAGE

When an e-mail/SMS/MMS is received, the incoming message screen pops up with sound and is ready to be operated on the screen.



No.	Function
1	Select to check the message.
2	Select to not open the message.
3	Select to call the message sender.

INFORMATION

- Depending on the cellular phone used for receiving messages, or its registration status with the system, some information may not be displayed.
- The pop up screen is separately available for incoming e-mail and SMS/MMS messages under the following conditions:

E-mail:


- “Incoming E-mail Display” is set to “Full Screen”. (→P.192)
- “E-mail Notification Popup” is set to on. (→P.192)

SMS/MMS:

- “Incoming SMS/MMS Display” is set to “Full Screen”. (→P.192)
- “SMS/MMS Notification Popup” is set to on. (→P.192)

CHECKING MESSAGES

- 1 Display the message inbox screen. (→P.179)
- 2 Select the desired message from the list.
- 3 Check that the message is displayed.

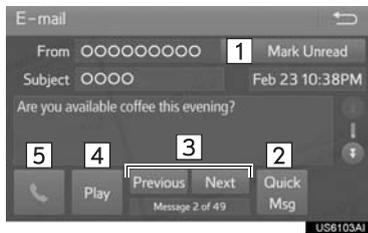

No.	Function
1*	Select “Mark Unread” or “Mark Read” to mark mail unread or read on the message inbox screen. This function is available when “Update Read Status on Phone” is set to on. (→P.192)
2	Select to reply the message. (→P.182)
3	Select to display the previous or next message.
4	Select to have messages read out. To cancel this function, select “Stop” . When “Automatic Message Read-out” is set to on, messages will be automatically read out. (→P.192)

No.	Function
5	Select to make a call to the sender.

*: E-mail only

INFORMATION

- Reading a text message is not available while driving.
- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.
- Messages are displayed in the appropriate connected Bluetooth® phone’s registered mail address folder. Select the tab of the desired folder to be displayed.
- Only received messages on the connected Bluetooth® phone can be displayed.
- The text of the message is not displayed while driving.
- Press the **“VOL”** switch, or use the volume control switch on the steering wheel to adjust the message read out volume.

7
PHONE

REPLYING TO A MESSAGE (QUICK REPLY)

15 messages have already been stored.

- 1 Display the message inbox screen. (→P.179)
- 2 Select the desired message from the list.
- 3 Select **“Quick Msg”**.



- 4 Select the desired message.
- 5 Select **“Send”**.
 - While the message is being sent, a sending message screen is displayed.
 - To cancel sending the message, select **“Cancel”**.


INFORMATION

- Depending on the type of Bluetooth® phone, reply function is not available.

EDITING QUICK REPLY MESSAGES

This operation cannot be performed while driving.

- 1 Select **“Quick Msg”**.

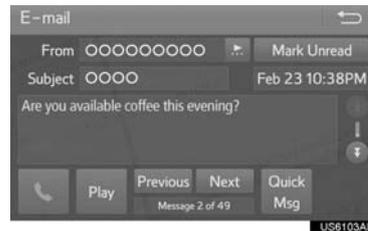

- 2 Select  corresponding to the desired message to edit.
- 3 Select **“OK”** when editing is completed.

INFORMATION


- To reset the editquick reply messages, select **“Default”**.
- **“Quick Message 1” (“I am driving and will arrive in approximately [ETA] minutes.”)**:
This message cannot be edited and will automatically fill in [ETA] with the navigation calculated estimated time of arrival on the confirm message screen. If there are waypoints set, [ETA] to the next waypoint will be shown. If there is no route currently set in the navigation system, “Quick Message 1” cannot be selected.

CALLING THE MESSAGE SENDER

Calls can be made to an e-mail/SMS/MMS message sender's phone number.
This operation can be performed while driving.

CALLING FROM E-MAIL/SMS/MMS MESSAGE DISPLAY

- 1 Display the message inbox screen. (→P.179)
- 2 Select the desired message.
- 3 Select .

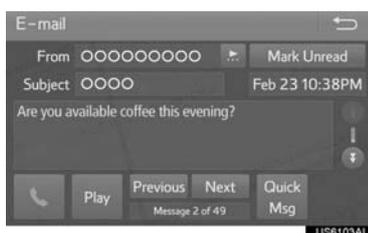

- If there are 2 or more phone numbers, select the desired number.
- 4 Check that the "Call" screen is displayed.

INFORMATION

- Calling the sender is only possible when the phone number has been acquired. For Email/MMS, the phone number cannot be acquired if it is not already registered in the address book. Even for SMS, the phone number may be acquired depending on the device operation.

CALLING FROM A NUMBER WITHIN A MESSAGE

Calls can be made to a number identified in a message's text area.
This operation cannot be performed while driving.

- 1 Display the message inbox screen. (→P.179)
- 2 Select the desired message.
- 3 Select the text area.



- 4 Select the desired number.
- Identified phone numbers contained in the message are displayed.
- 5 Check that the "Call" screen is displayed.

INFORMATION

- A series of numbers may be recognized as a phone number. Additionally, some phone numbers may not be recognized, such as those for other countries.

CALLING FROM THE INCOMING MESSAGE SCREEN


→P.180

7
PHONE

2. SETUP

1. PHONE SETTINGS

- 1 Press the "MENU" button.

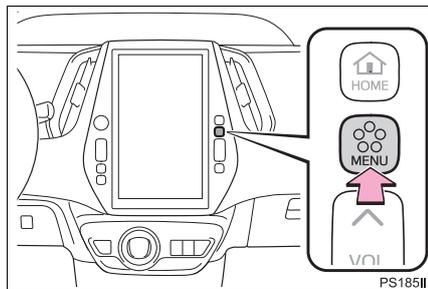

- 2 Select "Settings".

- 3 Select "Phone".

- 4 Select the item to be set.



No.	Information	Page
1	Registering/connecting a phone	58
2*	Sound settings	185
3*	Contact/call history settings	186
4*	Message settings	192
5*	Notification settings	193

*: This operation cannot be performed while driving.



DISPLAYING THE PHONE SETTINGS SCREEN IN A DIFFERENT WAY

- 1 Display the phone top screen. (→P.170)
- 2 Select "Settings".

“Sounds” SCREEN

The call and ringtone volume can be adjusted. A ringtone can be selected.

- 1 Display the “Phone Settings” screen. (→P.184)
- 2 Select **“Sounds”**.
- 3 Select the desired item to be set.

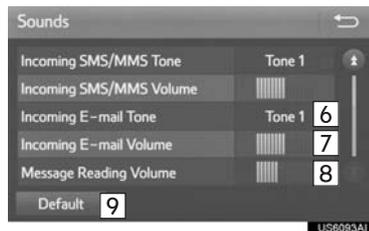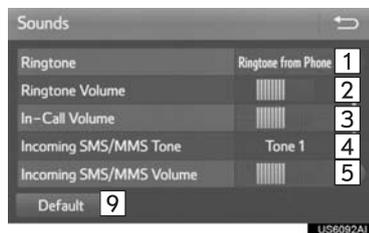

No.	Function
1	Select to set the desired ringtone.
2	Select “-” or “+” to adjust the ringtone volume.
3	Select “-” or “+” to adjust the default volume of the other party’s voice.
4	Select to set the desired incoming SMS/MMS tone.
5	Select “-” or “+” to adjust the incoming SMS/MMS tone volume.
6	Select to set the desired incoming e-mail tone.
7	Select “-” or “+” to adjust the incoming e-mail tone volume.
8	Select “-” or “+” to adjust the message readout volume.
9	Select to reset all setup items.

7
PHONE**INFORMATION**

- Depending on the type of phone, certain functions may not be available.

“Contacts/Call History” SCREEN


The contact can be transferred from a Bluetooth® phone to the system. If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.

The contact also can be added, edited and deleted.

The call history can be deleted and contact and favorites can be changed.

No.	Function	Page
1	For PBAP compatible Bluetooth® phones: Select to change the contact/history transfer settings.	187
2	Select to update contacts from the connected phone.	188
3	Select to sort contacts by the first name or last name field.	—
4	Select to add contacts to the favorites list.	191
5	Select to delete contacts from the favorites list.	192

- 1 Display the “Phone Settings” screen. (→P.184)
- 2 Select “Contacts/Call History”.
- 3 Select the desired item to be set.

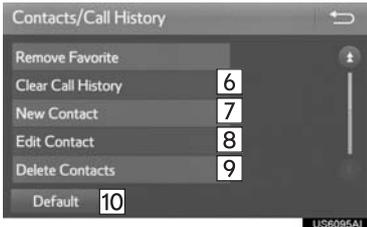

No.	Function	Page
6*	Select to clear contacts from the call history.	—
7*	Select to add new contacts to the contact list.	189
8*	Select to edit contacts in the contact list.	190
9*	Select to delete contacts from the contact list.	190
10	Select to reset all setup items.	—

*: For PBAP compatible Bluetooth® phones, this function is available when “Automatic Transfer” is set to off. (→P.186)

INFORMATION

- Depending on the type of phone, certain functions may not be available.
- Contact data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

SETTING AUTOMATIC CONTACT/HISTORY TRANSFER

The automatic contact/history transfer function is available for PBAP compatible Bluetooth® phones only.

- 1 Select “Automatic Transfer”.
- 2 Select the desired item to be set.



No.	Function
1	Select to set automatic contact/history transfer on/off. When set to on, the phone's contact data and history are automatically transferred.
2	Select to update contacts from the connected phone. (→P.188)
3	Select to set the transferred contact image display on/off.
4	Select to reset all setup items.

7
PHONE

■ UPDATING CONTACTS FROM PHONE

- 1 Select **“Update Now”**.
 - Contacts are transferred automatically.
- 2 Check that a confirmation screen is displayed when the operation is complete.
 - This operation may be unnecessary depending on the type of cellular phone.
 - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter “1234” into the Bluetooth® phone.
 - If another Bluetooth® device is connected when transferring contact data, depending on the phone, the connected Bluetooth® device may need to be disconnected.
 - Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

■ TRANSFER CONTACTS FROM PHONE

- ▶ When the contact is not registered
- 1 Select **“Transfer Contacts from Phone”**.
 - 2 Transfer the contact data to the system using a Bluetooth® phone.
 - This operation may be unnecessary depending on the type of cellular phone.
 - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter “1234” into the Bluetooth® phone.
 - To cancel this function, select **“Cancel”**.
 - 3 Check that a confirmation screen is displayed when the operation is complete.

► When the contact is registered

- 1** Select **“Transfer Contacts from Phone”**.
- 2** Select **“Replace Contacts”** or **“Add Contact”**.
“Replace Contacts”: Select to transfer the contact from the connected cellular phone and replace the current one.
“Add Contact”: Select to transfer the desired contact data from the connected cellular phone to add to the current one.
- 3** Transfer the contact data to the system using a Bluetooth® phone.
 - This operation may be unnecessary depending on the type of cellular phone.
 - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter “1234” into the Bluetooth® phone.
 - To cancel this function, select **“Cancel”**.
- 4** Check that a confirmation screen is displayed when the operation is complete.

REGISTERING A NEW CONTACT TO THE CONTACTS LIST

New contact data can be registered.
Up to 4 numbers per person can be registered.

- 1** Select **“New Contact”**.
- 2** Enter the name and select **“OK”**.
- 3** Enter the phone number and select **“OK”**.
- 4** Select the phone type for the phone number.
- 5** In order to add phone numbers, select one number between Phone 2 through 4 and then input the number.
- 6** Select **“OK”**.

REGISTERING A NEW CONTACT IN A DIFFERENT WAY (FROM THE “Call History” SCREEN)

- 1** Display the phone top screen.
(→P.170)
- 2** Select the **“Call History”** tab and select a contact not yet registered in the contact list.
- 3** Select **“Add to Contacts”**.
- 4** Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACTS LIST” from “STEP 2”. (→P.189)

EDITING THE CONTACT DATA

- 1 Select **"Edit Contact"**.
- 2 Select the desired contact.
- 3 Select the desired name or number.
 - ▶ For editing the name
- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 2". (→P.189)
 - ▶ For editing the number
- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 3". (→P.189)

EDITING THE CONTACT IN A DIFFERENT WAY (FROM THE "Contact Details" SCREEN)

- 1 Display the phone top screen. (→P.170)
- 2 Select the **"Contacts"**, **"Call History"** or **"Favorites"** tab and select the desired contact.
- 3 Select **"Edit Contact"**.
"E-mail Addresses": Select to display all registered e-mail addresses for the contact.
- 4 Follow the steps in "EDITING THE CONTACT DATA" from "STEP 3". (→P.190)

DELETING THE CONTACT DATA

- 1 Select **"Delete Contacts"**.
- 2 Select the desired contact and select **"Delete"**.
- 3 Select **"Yes"** when the confirmation screen appears.

INFORMATION

- Multiple data can be selected and deleted at the same time.

DELETING THE CONTACT IN A DIFFERENT WAY (FROM THE "Contact Details" SCREEN)

- 1 Display the phone top screen. (→P.170)
- 2 Select the **"Contacts"**, **"Call History"** or **"Favorites"** tab and select the desired contact.
- 3 Select **"Delete Contact"**.
- 4 Select **"Yes"** when the confirmation screen appears.

INFORMATION


- When a Bluetooth® phone is deleted, the contact data will be deleted at the same time.

FAVORITES LIST SETTING

Up to 15 contacts (maximum of 4 numbers per contact) can be registered in the favorites list.

REGISTERING THE CONTACTS IN THE FAVORITES LIST

- 1 Select **"Add Favorite"**.
 - 2 Select the desired contact to add to the favorites list.
 - Dimmed contacts are already stored as a favorite.
 - 3 Check that a confirmation screen is displayed when the operation is complete.
 - ▶ When 15 contacts have already been registered to the favorites list
 - 1 When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced. Select **"Yes"** when the confirmation screen appears to replace a contact.
 - 2 Select the contact to be replaced.
 - 3 Check that a confirmation screen is displayed when the operation is complete.
- ▶ Registering contacts in the favorites list in a different way (from the "Contacts" screen)
- 1 Display the phone top screen. (→P.170)
 - 2 Select the **"Contacts"** tab.
 - 3 Select ☆(grey) at the beginning of the desired contact list name to be registered in the favorites list.

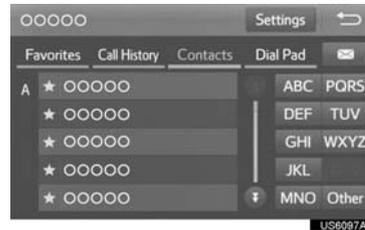

- When selected, ☆(grey) is changed to ★(yellow), and the contact is registered in the favorites list.

- ▶ Registering contacts in the favorites list in a different way (from the "Contact Details" screen)

- 1 Display the phone top screen. (→P.170)
- 2 Select the **"Contacts"** or **"Call History"** tab and select the desired contact.
- 3 Select **"Add Favorite"**.
- 4 Check that a confirmation screen is displayed when the operation is complete.

■ DELETING THE CONTACTS IN THE FAVORITES LIST


- 1 Select **“Remove Favorite”**.
 - 2 Select the desired contacts and select **“Remove”**.
 - 3 Select **“Yes”** when the confirmation screen appears.
 - 4 Check that a confirmation screen is displayed when the operation is complete.
- ▶ Deleting contacts in the favorites list in a different way (from the “Contacts” screen)
- 1 Display the phone top screen. (→P.170)
 - 2 Select the **“Contacts”** tab.
 - 3 Select ★(yellow) at the beginning of the contact list name to be deleted from the favorites list.
- When selected, ★(yellow) is changed to ☆(grey), and the data is deleted from the list.

▶ Deleting contacts in the favorites list in a different way (from the “Contact Details” screen)

- 1 Display the phone top screen. (→P.170)
- 2 Select the **“Contacts”, “Call History”** or **“Favorites”** tab and select the desired contact to delete.
- 3 Select **“Remove Favorite”**.
- 4 Select **“Yes”** when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

“Messaging” SCREEN

- 1 Display the “Phone Settings” screen. (→P.184)
- 2 Select **“Messaging”**.
- 3 Select the desired item to be set.

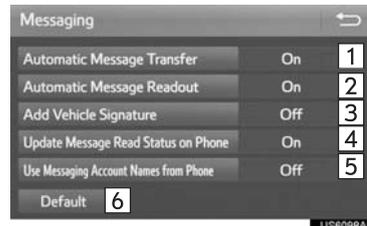



No.	Function
1	Select to set automatic message transfer on/off.
2	Select to set automatic message readout on/off.
3	Select to set adding the vehicle signature to outgoing messages on/off.
4	Select to set updating message read status on phone on/off.
5	Select to set display of messaging account names on the inbox tab on/off. When set to on, messaging account names used on the cellular phone will be displayed.
6	Select to reset all setup items.

INFORMATION

- Depending on the phone, these functions may not be available.

“Notifications” SCREEN

- 1 Display the “Phone Settings” screen. (→P.184)
- 2 Select “Notifications”.
- 3 Select the desired item to be set.

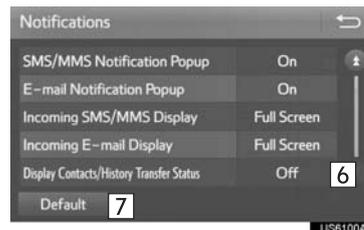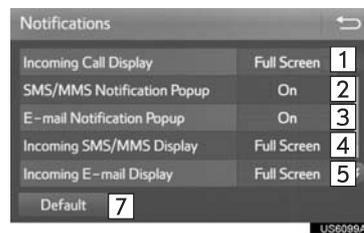

7

PHONE

2. SETUP

No.	Function
1	<ul style="list-style-type: none"> Select to change the incoming call display. <p>“Full Screen”: When a call is received, the hands-free screen is displayed and can be operated on the screen.</p> <p>“Drop-Down”: A message is displayed on the upper side of the screen and can only be operated via the steering wheel switches.</p>
2	Select to set the SMS/MMS notification popup on/off.
3	Select to set the e-mail notification popup on/off.
4	Select to change the incoming SMS/MMS display. <p>“Full Screen”: When an SMS/MMS message is received, the incoming SMS/MMS display screen is displayed and can be operated on the screen.</p> <p>“Drop-Down”: When an SMS/MMS message is received, a message is displayed on the upper side of the screen.</p>

No.	Function
5	Select to change the incoming e-mail display. <p>“Full Screen”: When an e-mail is received, the incoming e-mail display screen is the displayed and can be operated on the screen.</p> <p>“Drop-Down”: When an e-mail is received, a message is displayed on the upper side of the screen.</p>
6	Select to set display of the contact/history transfer completion message on/off.
7	Select to reset all setup items.

INFORMATION

- Depending on the phone, these functions may not be available.

3. WHAT TO DO IF...

1. TROUBLESHOOTING

If there is a problem with the hands-free system or a Bluetooth® device, first check the table below.

► When using the hands-free system with a Bluetooth® device

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The hands-free system or Bluetooth® device does not work.	The connected device may not be a compatible Bluetooth® cellular phone.	For a list of specific devices which operation has been confirmed on this system, check with your Toyota dealer or the following website: http://www.toyota.com/audio-multimedia/	*	—
	The Bluetooth® version of the connected cellular phone may be older than the specified version.	Use a cellular phone with Bluetooth® version 2.0 or higher (recommended: Ver. 3.0 +EDR or higher).	*	53

7

PHONE

► When registering/connecting a cellular phone

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A cellular phone cannot be registered.	An incorrect passcode was entered on the cellular phone.	Enter the correct passcode on the cellular phone.	*	—
	The registration operation has not been completed on the cellular phone side.	Complete the registration operation on the cellular phone (approve registration on the phone).	*	—
	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	60
A Bluetooth® connection cannot be made.	Another Bluetooth® device is already connected.	Manually connect the cellular phone you wish to use to this system.	—	61
	Bluetooth® function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	—
	Automatic Bluetooth® connection on this system is set to off.	Set automatic Bluetooth® connection on this system to on when the power switch is in ACCESSORY or ON mode.	—	65

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
"Unable to dial. Please check your phone."	Bluetooth® function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	—
	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	60

► When making/receiving a call

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A call cannot be made/received.	Your vehicle is in a "No Service" area.	Move to where "No Service" no longer appears on the display.	—	—

7
PHONE

► When using the phonebook

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Phonebook data cannot be transferred manually/automatically.	The profile version of the connected cellular phone may not be compatible with transferring phonebook data.	For a list of specific devices which operation has been confirmed on this system, check with your Toyota dealer or the following website: http://www.toyota.com/audio-multimedia/	*	—
	Automatic contact transfer function on this system is set to off.	Set automatic contact transfer function on this system to on.	—	186
	Passcode has not been entered on the cellular phone.	Enter the passcode on the cellular phone if requested (default passcode: 1234).	*	—
	Transfer operation on the cellular phone has not completed.	Complete transfer operation on the cellular phone (approve transfer operation on the phone).	*	—
Phonebook data cannot be edited.	Automatic contact transfer function on this system is set to on.	Set automatic contact transfer function on this system to off.	—	186

► When using the Bluetooth® message function

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Messages cannot be viewed.	Message transfer is not enabled on the cellular phone.	Enable message transfer on the cellular phone (approve message transfer on the phone).	*	—
	Automatic transfer function on this system is set to off.	Set automatic transfer function on this system to on.	—	192
New message notifications are not displayed.	Notification of SMS/MMS/E-mail reception on this system is set to off.	Set notification of SMS/MMS/E-mail reception on this system to on.	*	192
	Automatic message transfer function is not enabled on the cellular phone.	Enable automatic transfer function on the cellular phone.	*	—

7

PHONE

► In other situations

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The Bluetooth® connection status is displayed at the top of the screen each time the power switch is in ACCESSORY or ON mode.	Connection confirmation display on this system is set to on.	To turn off the display, set connection confirmation display on this system to off.	—	64
Even though all conceivable measures have been taken, the symptom status does not change.	The cellular phone is not close enough to this system.	Bring the cellular phone closer to this system.	—	—
	The cellular phone is the most likely cause of the symptom.	Turn the cellular phone off, remove and reinstall the battery pack, and then restart the cellular phone.	*	—
		Enable the cellular phone's Bluetooth® connection.	*	—
		Stop the cellular phone's security software and close all applications.	*	—
		Before using an application installed on the cellular phone, carefully check its source and how its operation might affect this system.	*	—

*: For details, refer to the owner's manual that came with the cellular phone.

8

NAVIGATION SYSTEM

1 BASIC OPERATION

- 1. QUICK REFERENCE 204
 - MAP SCREEN 204
 - NAVIGATION OPTIONS SCREEN..... 206
- 2. MAP SCREEN OPERATION..... 207
 - CURRENT POSITION DISPLAY 207
 - MAP SCALE 208
 - ORIENTATION OF THE MAP 208
 - SWITCHING THE MAP MODE..... 209
 - SCREEN SCROLL OPERATION 211
 - ADJUSTING LOCATION IN SMALL INCREMENTS..... 212
- 3. MAP SCREEN INFORMATION 213
 - DISPLAYING MAP INFORMATION 213
 - DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET 218
 - STANDARD MAP ICONS 219
- 4. TRAFFIC INFORMATION 220
 - DISPLAYING TRAFFIC INFORMATION ON THE MAP..... 222

1

2

3

4

5

6

7

8

9

2 DESTINATION SEARCH

1. DESTINATION SEARCH SCREEN	223
2. SEARCH OPERATION	225
SELECTING SEARCH AREA.....	226
SETTING HOME AS DESTINATION	226
SETTING PRESET DESTINATIONS AS DESTINATION	226
SEARCHING BY ADDRESS	227
SEARCHING BY POINT OF INTEREST	228
SEARCHING FROM PREVIOUS DESTINATIONS	231
SEARCHING BY ADDRESS BOOK.....	231
SEARCHING BY EMERGENCY.....	232
SEARCHING BY INTERSECTION AND FREEWAY	232
SEARCHING BY MAP	234
SEARCHING BY COORDINATES	234
3. STARTING ROUTE GUIDANCE	235
STARTING ROUTE GUIDANCE	235
PAUSING GUIDANCE.....	238

3 ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN	239
SCREEN FOR ROUTE GUIDANCE	239
ROUTE OVERVIEW	241
DURING FREEWAY DRIVING	242
WHEN APPROACHING INTERSECTION	243
TURN LIST SCREEN.....	244
TURN-BY-TURN ARROW SCREEN.....	244
2. TYPICAL VOICE GUIDANCE PROMPTS	245
3. EDITING ROUTE	246
ADDING DESTINATIONS.....	247
REORDERING DESTINATIONS	247
DELETING DESTINATIONS.....	247
SETTING ROUTE PREFERENCES	248
SELECTING ROUTE TYPE	248
DETOUR SETTING.....	249
STARTING FROM ADJACENT ROAD	250

4 MEMORY POINTS

1. MEMORY POINTS SETTINGS 251
SETTING UP HOME 252
SETTING UP PRESET DESTINATIONS..... 253
SETTING UP ADDRESS BOOK 255
SETTING UP AREAS TO AVOID..... 258
DELETING PREVIOUS DESTINATIONS..... 260

5 SETUP

1. DETAILED NAVIGATION SETTINGS..... 261
SCREENS FOR NAVIGATION SETTINGS 261
2. TRAFFIC SETTINGS..... 265
SCREEN FOR TRAFFIC SETTINGS 265
AUTO AVOID TRAFFIC..... 266
MY TRAFFIC ROUTES 267

6 TIPS FOR THE NAVIGATION SYSTEM

1. GPS (GLOBAL POSITIONING SYSTEM)..... 272
LIMITATIONS OF THE NAVIGATION SYSTEM..... 272
2. MAP DATABASE VERSION AND COVERED AREA..... 275
MAP INFORMATION 275
ABOUT THE MAP DATA 276




1. BASIC OPERATION

1. QUICK REFERENCE

MAP SCREEN

To display this screen, press the “HOME” button.

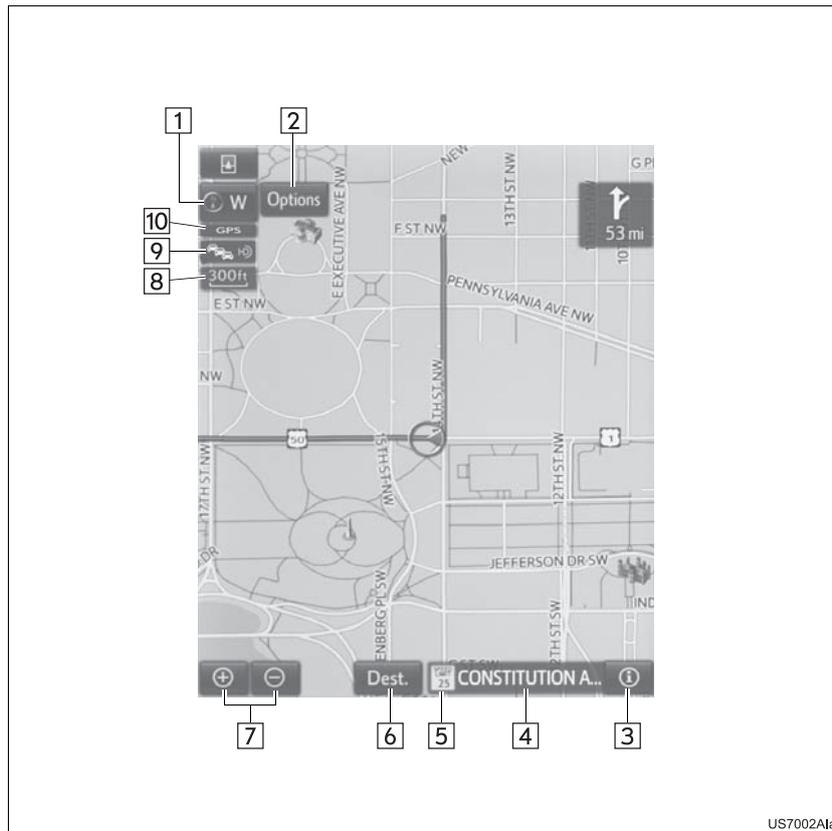

US7002A1a

No.	Name	Function	Page
1	2D North-up, 2D heading-up or 3D heading-up symbol	Indicates whether the map orientation is set to north-up or heading-up. The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north). In 3D map, only a heading-up view is available.	208
2	Options button	Select to display the “Navigation Options” screen.	206

No.	Name	Function	Page
3	Route information button	Select to change the display between the current street name and the distance with the estimated travel/arrival time.	240
4	Route information bar	Displays the current street name, or the distance with the estimated travel time/arrival time to the destination. The route information bar fills from left to right as the vehicle progresses on the route.	240
5	Speed limit icon	Indicates the speed limit on the current road. The display of the speed limit icon can be set to on/off.	213
6	Destination button	Select to display the "Destination" screen.	223
7	Zoom in/out button	Select to magnify or reduce the map scale. When either button is selected, the map scale indicator bar appears at the bottom of the screen.	208
8	Scale indicator	This figure indicates the map scale.	208
9	Traffic indicator	Shows that traffic information is received. Select to start voice guidance for traffic information. When traffic information is received via HD, HD mark is displayed on the right.	220
10	"GPS" mark (Global Positioning System)	Shows that the vehicle is receiving signals from the GPS.	272

NAVIGATION OPTIONS SCREEN

The navigation options allow you to change map configurations, display/hide POI icons, and edit the navigation routes. To display the “Navigation Options” screen, press the “HOME” button, then select “Options” on the map screen.




No.	Function	Page
1	Select to change the map configuration.	209
2	Select to change the displayed map information such as POI icons, route trace, speed limit, etc.	213
3	Select to display the map version and coverage area.	275
4	Select to edit the set route.	246
5	Select to pause or resume route guidance.	238
6	Select to display the overview of the entire route.	241

1. BASIC OPERATION

2. MAP SCREEN OPERATION

CURRENT POSITION DISPLAY

- 1 Press the "HOME" button.

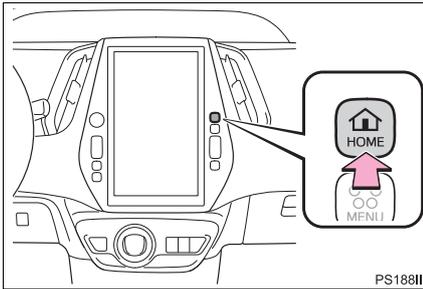

- 2 Check that the current position map is displayed.



- To correct the current position manually:
→P.263

INFORMATION

- While driving, the current position mark is fixed on the screen and the map moves.
- The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.
- After the battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.

MAP SCALE

- 1 Select  or  to change the scale of the map screen.



- The scale indicator bar appears at the bottom of the screen.
- Select and hold  or  to continue changing the scale of the map screen.
- The scale of the map screen can also be changed by selecting the scale bar directly. This function is not available while driving.

INFORMATION

- The map scale is displayed at the left of the screen. (→P.204)

ORIENTATION OF THE MAP


The orientation of the map can be changed between 2D north-up, 2D heading-up and 3D heading-up by selecting the orientation symbol displayed at the top left of the screen.

- 1 Select ,  or .

► North-up screen



► Heading-up screen

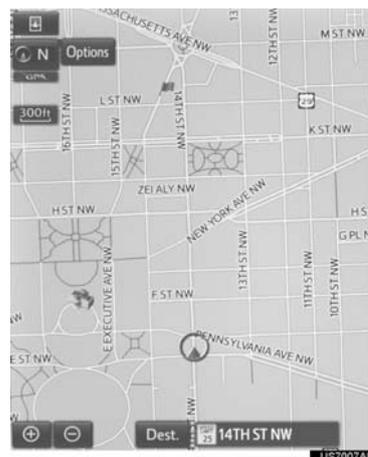

▶ 3D screen



- The map cannot be rotated on the 3D Map screen. Only the one-touch (short press) scroll and linear scroll (long press) operations are available.

: North-up symbol

Regardless of the direction of vehicle travel, north is always up.

: Heading-up symbol

The direction of vehicle travel is always up.


: 3D Heading-up symbol

The direction of vehicle travel is always up.

- The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north).

SWITCHING THE MAP MODE

- 1 Select “Options” on the map screen.
- 2 Select “Map Mode”.
- 3 Select the desired configuration button.

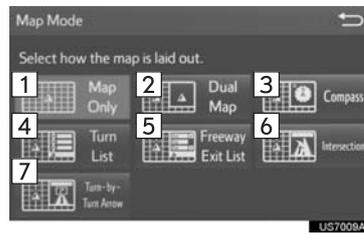

No.	Function	Page
1	Select to display the single map screen.	210
2	Select to display the dual map screen.	210
3	Select to display the compass mode screen.	211
4	Select to display the turn list screen.	244
5	Select to display the freeway exit list screen.	242
6	Select to display the intersection guidance screen or the guidance screen on the freeway.	243
7	Select to display the turn-by-turn arrow screen.	244

1. BASIC OPERATION

- Depending on the conditions, certain screen configuration buttons cannot be selected.

MAP ONLY



DUAL MAP



- The map on the left is the main map.

Editing right map

The right side map can be edited.

- Select any point on the right side map.
- Select the desired item.



No.	Function	Page
1	Select to change the orientation of the map.	208
2	Select to display POI icons.	213
3	Select to show traffic information.	220
4	Select to change the map scale.	208

- When set to on, the indicator will illuminate.

COMPASS

Information about the destination, current position and a compass is displayed on the screen.

**INFORMATION**

- The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.
- When the vehicle travels out of the coverage area, the guidance screen changes to the whole compass mode screen.

SCREEN SCROLL OPERATION

Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.



8

NAVIGATION SYSTEM

No.	Information/Function
1	Cursor mark
2	Distance from the current position to the cursor mark.
3	Select to set as a destination. When selecting “Go to  <ul style="list-style-type: none"> ● To scroll over the map screen, place the cursor mark in the desired position and then touch and hold the map screen. The map will continue scrolling in that direction until the finger is released. (Only for 3D map screen)

ADJUSTING LOCATION IN SMALL INCREMENTS

The cursor location can be adjusted in small increments when “**Adjust Location**” is selected on the setting map screen.

Also, when changing the location of memory points on the editing screen (P.257) and adjusting the current position mark manually on the “Calibration” screen (P.263), 8 directional arrows may appear for this purpose.

- 1 Select one of the 8 directional arrows to move the cursor to the desired point and then select “OK”.




1. BASIC OPERATION

3. MAP SCREEN INFORMATION

DISPLAYING MAP INFORMATION

Information such as POI icons, route trace, speed limit, etc. can be displayed on the map screen.

- 1 Select **“Options”** on the map screen.
- 2 Select **“Map Information”**.
- 3 Select the desired items to be displayed.

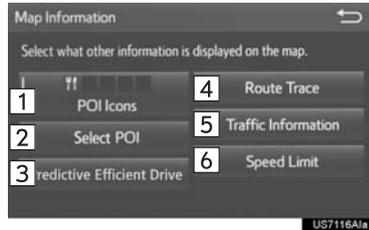


No.	Function	Page
1	Select to display the selected POI icons.	—
2	Select to select or change POI icons.	213
3	Select to display the predictive efficient drive icons.	215
4	Select to display route trace.	217
5	Select to display traffic information.	220
6	Select to display speed limit icon.	—

- When set to on, the indicator will illuminate.

SELECTING THE POI ICONS

- 1 Display the **“Map Information”** screen. (→P.213)
- 2 Select **“Select POI”**.
 - When the POI icons to be displayed on the map screen have already been set, **“Change POI”** is displayed.
- 3 Select the desired POI category and select **“OK”**.

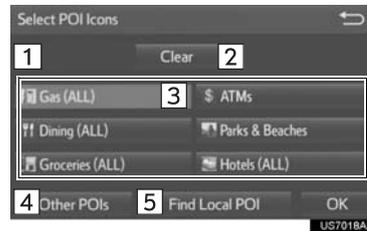


No.	Information/Function	Page
1	Displays up to 5 selected POI icons on the map screen	—
2	Select to cancel the selected POI icons.	—
3	Displays up to 6 POI icons as favorite POI categories	262
4	Select to display other POI categories if the desired POIs cannot be found on the screen.	214
5	Select to search for the nearest POIs.	214

8

NAVIGATION SYSTEM

■ SELECTING OTHER POI ICONS TO BE DISPLAYED

- 1 Select **“Other POIs”**.
- 2 Select the desired POI categories and select **“OK”**.

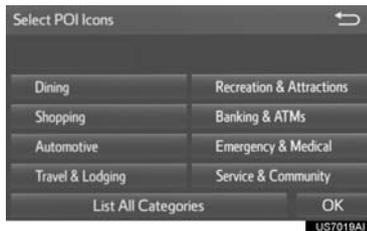

“List All Categories”: Select to display all POI categories. To add more POI categories, select **“More”**.

■ DISPLAYING THE LOCAL POI LIST

POIs that are within 20 miles (32 km) of the current position will be listed from among the selected categories.

- 1 Select **“Find Local POI”**.
- 2 Select the desired POI.



“Near...”: Select to search for POIs near the current position or along the route.

- 3 Check that the selected POI is displayed on the map screen. (→P.211)



► When “Near...” is selected

1 Select the desired item.

“Near Here”: Select to search for POIs near the current position.

“Along My Route”: Select to search for POIs along the route.

PREDICTIVE EFFICIENT DRIVE (PREDICTIVE DECELERATION SUPPORT)

The system automatically stores and registers support points where the driver always decelerates or stops based on pedal operation and the vehicle speed of the driver.

The registered points are shown on the map as icons  for use as predictive deceleration support points.

When registered support points are approached, the optimal timing for releasing the accelerator pedal is notified to the user using the eco acceleration guide of the hybrid system indicator along with emphasizing the display of the icon. (Refer to the separate Prius owner's manual for details on the eco acceleration guide)

After releasing the accelerator pedal, the engine brake (regeneration brake) amount increases. (regeneration boost control)

As a result, the battery charge amount can be increased when decelerating or stopping the vehicle contributing to improved power and fuel economy.

This function only operates in the contiguous United States.

This function does not operate outside the contiguous United States (Example: Alaska and Hawaii).

- The predictive efficient drive function can be turned on/off. (→P.261)

■ DISPLAYING PREDICTIVE EFFICIENT DRIVE INFORMATION

The icon for the predictive deceleration support point can be displayed on the map.

- 1 Display the "Map Information" screen. (→P.213)
- 2 Select "**Predictive Efficient Drive**".
 - The "**Predictive Efficient Drive**" indicator illuminates.
 - The  icon is displayed on the map for the predictive deceleration support points. Also, when the position of the vehicle approaches the predictive deceleration support point, the icon changes to a .

INFORMATION

- Up to 100 icons can be displayed on one screen.
- When the maximum number of icons that can be displayed is exceeded, the predictive efficient drive points near the position of the vehicle are displayed.
- Icons for the predictive efficient drive points can be displayed on maps more detailed than 0.75 miles. (excluding the city map)
- When a destination is set, predictive deceleration support points not along the guided route are not emphasized.

■ TURNING OFF THE PREDICTIVE EFFICIENT DRIVE INFORMATION DISPLAY

- 1 Display the "Map Information" screen. (→P.213)
- 2 Select "**Predictive Efficient Drive**".
 - The "**Predictive Efficient Drive**" indicator dims.
 - After the "**Predictive Efficient Drive**" function is turned off, the screen to confirm whether to clear the predictive efficient drive point information is displayed. To keep the points (only remove the display icon), select "**Yes**". To clear registered points, select "**No**".

INFORMATION

- Once the predictive deceleration support point information is cleared, it cannot be restored.
- The predictive deceleration support point information cannot be selected and individually cleared.

ROUTE TRACE

The traveled route can be stored and retraced on the map screen. This feature is available when the map scale is 30 miles (50 km) or less.

- 1 Display the "Map Information" screen. (→P.213)
- 2 Select "Route Trace".
 - The "Route Trace" indicator illuminates and the route trace starts.
- 3 Check that the traveled line is displayed.



STOP RECORDING THE ROUTE TRACE

- 1 Select "Route Trace" again.
- 2 A confirmation screen will be displayed.
 - "Yes": Select to keep the recorded route trace.
 - "No": Select to erase the recorded route trace.

INFORMATION

- The traveled route can be stored up to 124 miles (200 km).


DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

When the cursor is placed over an icon on the map screen, the name bar is displayed on the upper part of the screen. If “Info” appears on the right side of the name bar, detailed information can be displayed.


- 1 Place the cursor over an icon.
- 2 Select “Info”.




► POI information

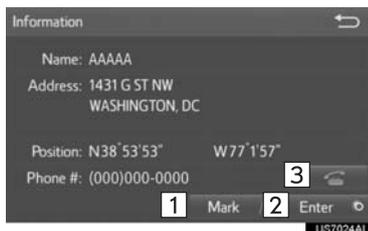

► Memory point information

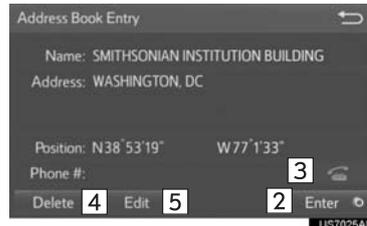

► Destination information

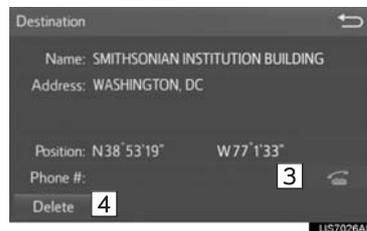

No.	Function
1	Select to register as a memory point. To change the icon, name, etc.: →P.255
2	Select to set as a destination.
3	Select to call the registered number.
4	Select to delete destination or memory point.
5	Select to display the edit memory point screen.

INFORMATION

- Even when traffic information is not currently being received, traffic information and “Info” will be displayed for a while after traffic information has been received.

STANDARD MAP ICONS


Icon	Name
	Island
	Park
	Industry
	Business facility
	Airport
	Military
	University
	Hospital
	Stadium
	Shopping mall
	Golf

1. BASIC OPERATION


4. TRAFFIC INFORMATION

Traffic data can be received via HD or Toyota apps to display traffic information on the map screen.

- 1 Press the **"MENU"** button.

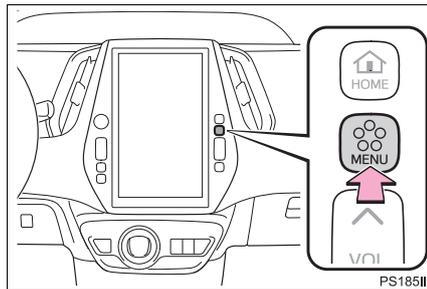

- 2 Select **"Info"**.
- 3 Select **"Traffic Information"**.
- 4 Select the desired item.

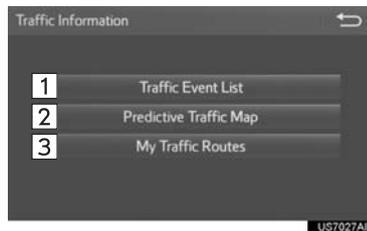

No.	Function	Page
1	Select to display a list of current traffic information.	220
2	Select to display a map with predictive traffic data.	221
3	Select to display traffic along the saved routes.	221

DISPLAYING TRAFFIC INFORMATION

A list of current traffic information can be displayed along with information on the incident's distance and position relative to the vehicle.

- 1 Display the **"Traffic Information"** screen. (→P.220)
- 2 Select **"Traffic Event List"**.
- 3 Select the desired traffic information.
 - "On Current Road"**: Select to display traffic information for the current road.
 - "On Current Route"**: Select to display traffic information for the set route.
 - When set to on, the indicator will illuminate.
- 4 Check that the traffic information is displayed.



- **"Detail"**: Select to display detailed traffic information.

DISPLAYING PREDICTIVE TRAFFIC INFORMATION

A map with predictive traffic data can be displayed.

- 1 Display the "Traffic Information" screen. (→P.220)
- 2 Select "**Predictive Traffic Map**".
- 3 Scroll the map to the desired point and set the time of predictive traffic information.



- The time of the predictive traffic information can be displayed in 15-minute steps up to +45 minutes.
- ">": Moves the time forward 15 minutes.
 "<": Moves the time back 15 minutes.

MY TRAFFIC ROUTES

Traffic information along the saved routes can be displayed. To use this function, it is necessary to register a route. (→P.268)

- 1 Display the "Traffic Information" screen. (→P.220)
- 2 Select "**My Traffic Routes**".
 - If map data has been updated, a confirmation screen will be displayed. Select "**OK**" or "**Do Not Tell Me Again**".
- 3 Select the desired route.



"Options": Select to add, edit or delete personal routes. (→P.267)

- If routes have not been registered yet, a confirmation screen will be displayed. Select "**Yes**" to register the route.
- 4 Select the desired traffic information.

- 5** Check that the traffic information is displayed.



“Detail”: Select to display detailed traffic information.

DISPLAYING TRAFFIC INFORMATION ON THE MAP

- 1** Select “Options” on the map screen.
 - 2** Select “Map Information”.
 - 3** Select “Traffic Information”.
- When set to on, the indicator will illuminate.

- 4** Check that the traffic information is displayed.



No.	Information/Function
1	The icons show traffic incident, road repair, traffic obstacles, etc. Select to display traffic information and start voice guidance for the traffic information.
2	The color of the arrow changes depending on the traffic information received.
3	The indicator is displayed as follows.  : Traffic information has been received.  : Traffic information has been received via HD. No icon: Traffic information has not been received.


INFORMATION

- Traffic information may take some time to load after the system is turned on.

2. DESTINATION SEARCH

1. DESTINATION SEARCH SCREEN

The “Destination” screen enables to search for a destination. To display the “Destination” screen, press the “MENU” button, and select “Destination” on the “Menu” screen.

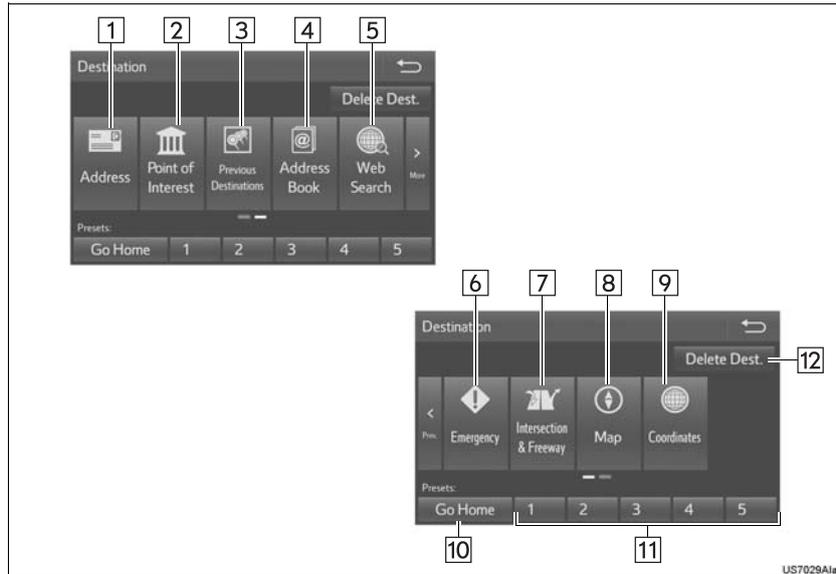

2. DESTINATION SEARCH


No.	Function	Page
1	Select to search for a destination by address.	227
2	Select to search for a destination by point of interest.	228
3	Select to search for a destination from previously set destinations.	231
4	Select to search for a destination from a registered entry in "Address book".	231
5*	Select to search for a destination by online database.	286
6	Select to search for a destination from emergency service points.	232
7	Select to search for a destination by intersection or freeway entrance/exit.	232
8	Select to search for a destination by the last displayed map.	234
9	Select to search for a destination by coordinates.	234
10	Select to set a destination by home.	226
11	Select to set a destination from preset destinations.	226
12	Select to delete set destinations.	247

*: This function is not made available in some countries or areas.

2. DESTINATION SEARCH

2. SEARCH OPERATION

- 1 Press the "MENU" button.

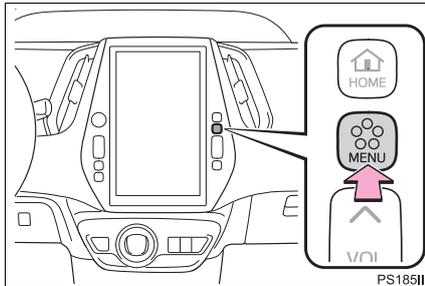

- 2 Select "Destination".

- 3 Search for a destination.



- There are different kinds of methods to search for a destination. (→P.223)

- 4 Select "Go" when the confirm destination screen is displayed.




No.	Function
1	Select to adjust the position in smaller increments. (→P.212)
2	Select to register as a memory point.
3	Select to call the registered number.
4	Select to search for the route. (→P.235) If a destination has already been set, "Go Directly" and "Add to Route" will be displayed. "Go Directly": Select to delete the existing destination(s) and set a new one. "Add to Route": Select to add a destination.

SELECTING SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using **“Address”**, **“Point of Interest”** or **“Intersection & Freeway”**.

- 1 Display the “Destination” screen. (→P.225)
- 2 Select **“Address”**, **“Point of Interest”** or **“Intersection & Freeway”**.
- 3 Select **“Select State/Province”** or **“Change State/Province”**.
 - If a state (province) has not been selected yet, **“Select State/Province”** is displayed.
- 4 Select the desired state (province).

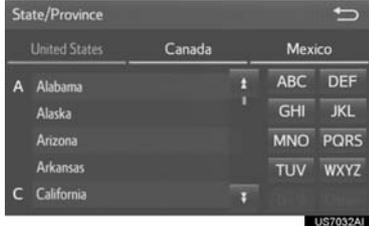

- To change countries, select the **“United States”**, **“Canada”** or **“Mexico”** tab.
- For map database information and updates: →P.275

SETTING HOME AS DESTINATION


To use this function, it is necessary to register a home address. (→P.252)

- 1 Display the “Destination” screen. (→P.225)
- 2 Select **“Go Home”**.
 - The navigation system performs a search for the route and the entire route map is displayed. (→P.235)

SETTING PRESET DESTINATIONS AS DESTINATION

To use this function, it is necessary to register preset destinations to the preset screen buttons (1-5). (→P.253)

- 1 Display the “Destination” screen. (→P.225)
- 2 Select any of the preset destination buttons (1-5).

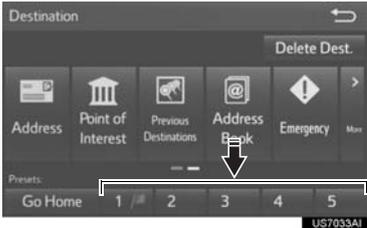

- The navigation system performs a search for the route and the entire route map is displayed. (→P.235)

SEARCHING BY ADDRESS

There are 2 methods to search for a destination by address.

- 1 Display the "Destination" screen. (→P.225)
- 2 Select "Address".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by city.	227
2	Select to search by street address.	227

SEARCHING BY CITY

- 1 Select "City".
- 2 Enter a city name and select "OK".
"Last 5 Cities": Select the city name from the list of the last 5 cities.
- 3 Select the desired city name.
- 4 Enter a street name and select "OK".

- 5 Select the desired street name.
 - 6 Enter a house number and select "OK".
- If the same address exists, the address list screen will be displayed. Select the desired address.

SEARCHING BY STREET ADDRESS

- 1 Select "Street Address".
 - 2 Enter a house number and select "OK".
 - 3 Enter a street name and select "OK".
 - 4 Select the desired street name.
 - 5 Enter a city name and select "OK".
 - 6 Select the desired city name.
- If the same address exists, the address list screen will be displayed. Select the desired address.

INFORMATION

- A street name can be searched using only the body part of its name.
For example: S WESTERN AVE
- A search can be performed by entering "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

2. DESTINATION SEARCH

SEARCHING BY POINT OF INTEREST

There are 3 methods to search for a destination by Points of Interest.


- 1 Display the "Destination" screen. (→P.225)
- 2 Select "Point of Interest".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by name.	228
2	Select to search by category.	229
3	Select to search by phone number.	230

SEARCHING BY NAME

- 1 Select "Name".
- 2 Enter a POI name and select "OK".
- 3 Select the desired POI.

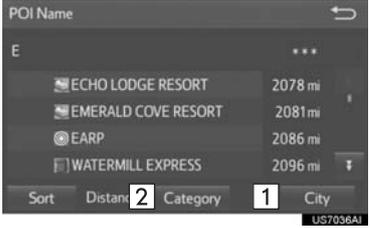

No.	Function	Page
1	Select to search for POI in the desired city.	229
2	Select to search for POI from the category list.	229

- When entering the name of a specific POI, and there are 2 or more sites with the same name, the list screen will be displayed. Select the desired POI.

INFORMATION


- To search for a facility name using multiple search words, put a space between each word.

SELECTING A CITY TO SEARCH

- 1 Select "City".
- 2 Enter a city name and select "OK".
"Any City": Select to cancel the city setting.
- 3 Select the desired city name.
- 4 Select the desired POI.

SELECTING FROM THE CATEGORIES

- 1 Select "Category".
- 2 Select the desired category.

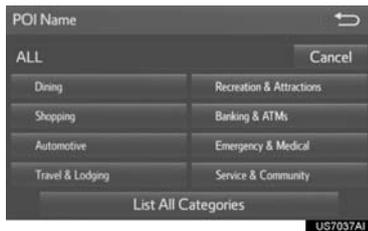

- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

"List All Categories": Select to display all POI categories.

- 3 Select the desired POI.


SEARCHING BY CATEGORY

- 1 Select "Category".
- 2 Select the desired search point.



No.	Function
1	Select to set the search point from near the current position.
2	Select to search for POIs along the set route.
3	Select to set the search point from near a city center. (→P.230)
4	Select to set the search point from near a destination.

- 3 Select the desired POI category.

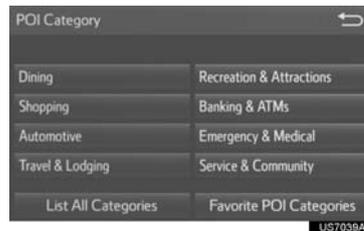

- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

“List All Categories”: Select to display all POI categories.

“Favorite POI Categories”: Select to use the 6 POIs that have been previously set. (→P.262)

4 Select the desired POI.

INFORMATION

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

▶ When “Near a City Center in XX*” is selected

1 Select **“Near a City Center in XX”**.

2 Enter a city name and select **“OK”**.

“Last 5 Cities”: Select the city name from the list of the last 5 cities.

3 Select the desired city name.

4 Select **“OK”** when the city center map screen is displayed.

5 Follow the steps from 3 onward in **“SEARCHING BY CATEGORY”**. (→P.229)

*:XX represents the selected search area name.

INFORMATION

- If the navigation system has never been used, selecting the city name from **“Last 5 Cities”** will not be available.

SEARCHING BY PHONE NUMBER

1 Select **“Phone #”**.

2 Enter a phone number and select **“OK”**.


- If there is more than 1 site with the same number, the list screen will be displayed.

INFORMATION

- If there is no match for the entered phone number, a list of identical numbers with different area codes will be displayed.

SEARCHING FROM PREVIOUS DESTINATIONS

- 1 Display the “Destination” screen. (→P.225)
- 2 Select “**Previous Destinations**”.
- 3 Select the desired destination.

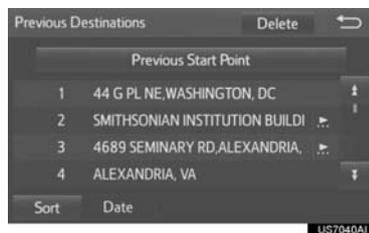

“**Previous Start Point**”: Select to display the start point map of the previous guided route.

“**Delete**”: Select to delete the previous destination. (→P.260)


INFORMATION

- The previous start point and up to 100 previously set destinations are displayed on the screen.

SEARCHING BY ADDRESS BOOK

To use this function, it is necessary to register an address book entry. (→P.255)

- 1 Display the “Destination” screen. (→P.225)
- 2 Select “**Address Book**”.
- 3 Select the desired address book entry.

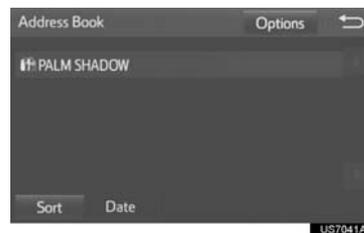

- “**Options**”: Select to register or edit address book entries. (→P.256)

2. DESTINATION SEARCH

SEARCHING BY EMERGENCY

- 1 Display the “Destination” screen. (→P.225)
- 2 Select “**Emergency**”.
- 3 Select the desired emergency category.



- 4 Select the desired destination.

INFORMATION

- The navigation system does not guide in areas where route guidance is unavailable. (→P.273)

SEARCHING BY INTERSECTION AND FREEWAY

There are 2 methods to search for a destination by Intersection & Freeway.

- 1 Display the “Destination” screen. (→P.225)
- 2 Select “**Intersection & Freeway**”.
- 3 Select the desired method.




No.	Function	Page
1	Select to search by intersection.	233
2	Select to search by freeway entrance/exit.	233

SEARCHING BY INTERSECTION

- 1 Select **“Intersection”**.
- 2 Enter the name of the first intersecting street which is located near the destination and select **“OK”**.
- 3 Select the desired street name.




- 4 Enter the name of the second intersecting street and select **“OK”**.
- 5 Select the desired street name.
- If the 2 streets cross at more than 1 intersection in a city, the list of intersections will be displayed.

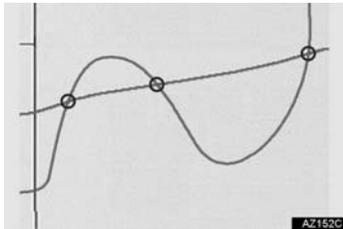

SEARCHING BY FREEWAY ENTRANCE/EXIT

- 1 Select **“Freeway Entrance / Exit”**.
- 2 Enter a freeway name and select **“OK”**.
- 3 Select the desired freeway.
- 4 Select **“Entrance”** or **“Exit”**.

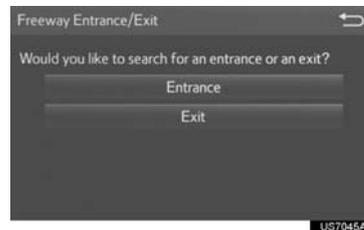

- 5 Enter a freeway entrance or exit name and select **“OK”**.
- 6 Select the desired entrance or exit name.

INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).

2. DESTINATION SEARCH

SEARCHING BY MAP

By selecting **“Map”** the last displayed location is displayed again on the map screen. You can search for a destination from this map.

- 1 Display the “Destination” screen. (→P.225)
- 2 Select **“Map”**.
- 3 Scroll the map to the desired point and select **“Go to 📍”**.



- “Adjust Location”**: Select to adjust the position in smaller increments. (→P.212)
- If a destination has already been set, **“Go to 📍”** and **“Add to Route”** will be displayed.
- “Go to 📍”**: Select to delete the existing destination(s) and set a new one.
- “Add to Route”**: Select to add a destination.
- The navigation system performs a search for the route and the entire route map is displayed. (→P.235)

SEARCHING BY COORDINATES

- 1 Display the “Destination” screen. (→P.225)
- 2 Select **“Coordinates”**.
- 3 Enter the latitude and longitude and select **“OK”**.



2. DESTINATION SEARCH

3. STARTING ROUTE GUIDANCE

When the destination is set, the entire route map from the current position to the destination is displayed.

STARTING ROUTE GUIDANCE

- 1 Select "OK" to start guidance.



No.	Information/Function
1	Select the desired route from 3 possible routes. (→P.236)
2	Select to change the route. (→P.237)
3	Select to display a list of the turns required to reach the destination. (→P.237)
4	Current position
5	Destination point
6	Type of route and its distance
7	Distance of the entire route

No.	Information/Function
8	Select to start guidance. If "OK" is selected and held until a beep sounds, demo mode will start. Press the "HOME" button to end demo mode.

! WARNING

- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

INFORMATION

- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route or a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale more than 0.5 mile (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the selected point is set as the destination.


8

NAVIGATION SYSTEM

2. DESTINATION SEARCH

3 ROUTES SELECTION

- 1 Select "3 Routes".
- 2 Select the desired route.

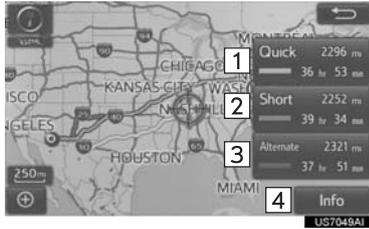

No.	Function
1	Select to display the quickest route.
2	Select to display the route that is the shortest distance to the set destination.
3	Select to display the alternative route.
4	Select to display the information about the 3 routes. (→P.236)

DISPLAYING 3 ROUTES INFORMATION

- 1 Select "Info".
- 2 Check that the "3 Route Information" screen is displayed.



No.	Information
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Distance of the toll road
4	Distance of the freeway
5	Distance of the ferry trip

DISPLAYING TURN LIST

A list of turn information from the current position to the destination can be displayed.

- 1 Select "Turn List".
- 2 Check that the turn list is displayed.



No.	Information
1	Current position
2	Distance to the next turn
3	Turn direction at the intersection
4	Select to display the map of the selected point.


INFORMATION

- However, not all road names on the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

EDITING ROUTE

Destinations can be added, reordered or deleted, and conditions for the route to the destination can be changed.

- 1 Select "Edit Route".
- 2 Select the desired item.

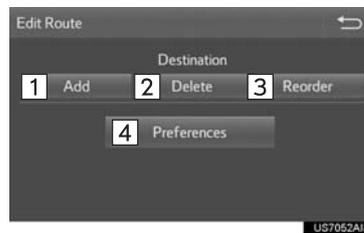

No.	Function	Page
1	Select to add destinations.	247
2	Select to delete destinations.	247
3	Select to reorder destinations.	247
4	Select to set route preferences.	248

INFORMATION

- Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases. (→P.248)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After traveling by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

PAUSING GUIDANCE

- 1 Select “**Options**” on the map screen.
- 2 Select “**Pause Guidance**”.

RESUMING GUIDANCE


- 1 Select “**Resume Guidance**”.

3. ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN

During the route guidance, various types of guidance screens can be displayed depending on conditions.

SCREEN FOR ROUTE GUIDANCE

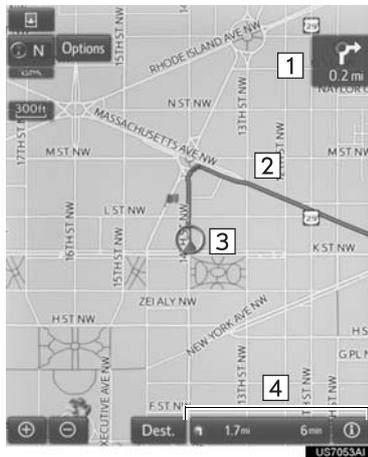

No.	Information/Function
1	Distance to the next turn and an arrow indicating the turning direction
2	Guidance route
3	Current position
4	Current street name or route information

INFORMATION


- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.
- When arriving at the set destination the destination name will be displayed on the upper part of the screen.

3. ROUTE GUIDANCE

CHANGING ROUTE INFORMATION BAR

When the vehicle is on the guidance route, the route information bar displays the current street name or the distance with the estimated travel/arrival time to the destination.

- 1 Select the route information bar (1) or the route information button (2) to change the display of the route information bar.

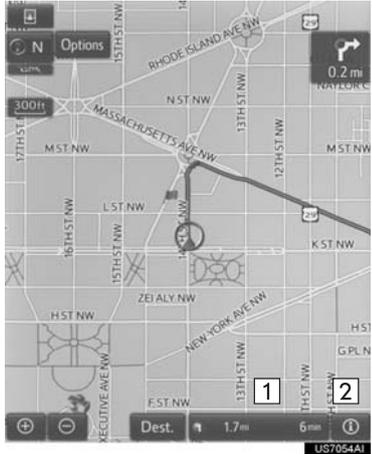

No.	Information/Function
1	Select to change the display between the estimated travel time and the estimated arrival time.
2	Select to change the display between the current street name and the distance with the estimated travel/arrival time.

INFORMATION

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the average speed for the specified speed limit.
- When the vehicle gets off the guidance route, the arrow facing the destination is displayed instead of the estimated travel/arrival time.
- The route information bar fills from left to right as the vehicle progresses on the route.

DISTANCE AND TIME TO DESTINATION

When driving on the guidance route with more than 1 destination set, a list of the distance with estimated travel/arrival time from the current position to each destination is displayed.

- 1 Select the route information bar.
- 2 Check that the list of the distance and time is displayed.



- By selecting one of the number buttons, the desired route information is displayed.

ROUTE OVERVIEW

The entire route from the current position to the destination can be displayed during the route guidance.

- 1 Select “**Options**” on the map screen.
- 2 Select “**Route Overview**”.
- 3 Check that the entire route map is displayed.




- For details about this screen: →P.235

3. ROUTE GUIDANCE

DURING FREEWAY DRIVING


During freeway driving, the freeway exit information screen will be displayed.

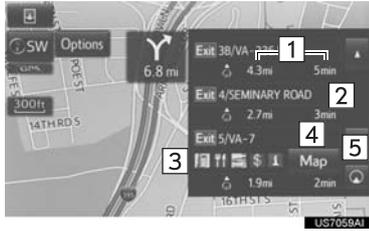

No./Icon	Information/Function
1	Distance and time from the current position to the freeway exit/rest area
2	Name of the freeway exit/rest area
3	POIs that are close to a freeway exit.
4	Select to display the selected map of the exit vicinity.
5	Select to display the nearest freeway exit/rest area from the current position.
	Select to scroll to farther freeway exit/rest area
	Select to scroll to closer freeway exit/rest area

WHEN APPROACHING FREEWAY EXIT OR JUNCTION


When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

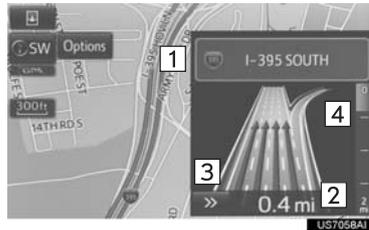

No.	Information/Function
1	Next exit or junction name
2	Distance from the current position to the exit or junction
3	Select to hide the freeway guidance screen. To return to the freeway guidance screen, press the "HOME" button.
4	Remaining distance bar to the guidance point

TOLLGATE GUIDANCE

When the vehicle approaches a tollgate, the tollgate view will be displayed.

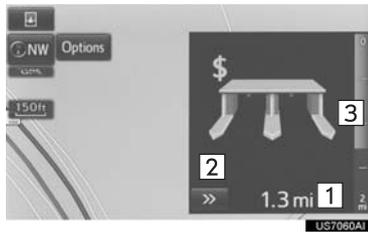

No.	Information/Function
1	Distance from the current position to the tollgate
2	Select to hide the tollgate guidance screen. To return to the tollgate guidance screen, press the "HOME" button.
3	Remaining distance bar to the guidance point

WHEN APPROACHING INTERSECTION

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.



No.	Information/Function
1	Next street name
2	Distance to the intersection
3	Select to hide the intersection guidance screen. To return to the intersection guidance screen, press the "HOME" button.
4	Remaining distance bar to the guidance point

3. ROUTE GUIDANCE

TURN LIST SCREEN

- 1 Select **“Turn List”** on the **“Map Mode”** screen. (→P.209)
- 2 Check that the turn list screen is displayed.



No.	Information/Function
1	Turn direction
2	Distance between turns
3	Next street or destination name

TURN-BY-TURN ARROW SCREEN

On this screen, information about the next turn on the guidance route can be displayed.

- 1 Select **“Turn-by-Turn Arrow”** on the **“Map Mode”** screen. (→P.209)
- 2 Check that the turn-by-turn arrow screen is displayed.



No.	Information/Function
1	Exit number or street name
2	Turn direction
3	Distance to the next turn

3. ROUTE GUIDANCE

2. TYPICAL VOICE GUIDANCE PROMPTS

As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.



WARNING

- Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads (roads that are not completely digitized in our database). The route guidance may not have the updated information such as the direction of a one way street.


INFORMATION

- If a voice guidance command cannot be heard, press the "**HOME**" button to hear it again.
- To adjust the voice guidance volume:
→P.75
- Voice guidance may be made early or late.
- If the system cannot determine the current position correctly, you may not hear voice guidance or may not see the magnified intersection on the screen.

3. ROUTE GUIDANCE

3. EDITING ROUTE

1 Press the “HOME” button.

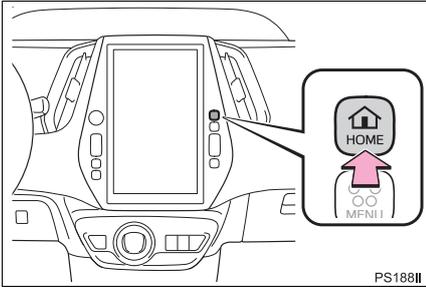

2 Select “Options”.

3 Select “Edit Route”.



4 Select the item to be set.




No.	Function	Page
1	Select to add destinations.	247
2	Select to delete destinations.	247
3	Select to reorder destinations.	247
4	Select to set route preferences.	248
5	Select to change route type.	248
6	Select to set detours.	249
7	Select to start from adjacent road.	250

5 Check that the entire route map is displayed. (→P.235)

ADDING DESTINATIONS


- 1 Display the “Edit Route” screen. (→P.246)
- 2 Select “Add”.
- 3 Search for an additional destination in the same way as a destination search. (→P.223)
- 4 Select “Add Destination Here” to insert the new destination into the route.

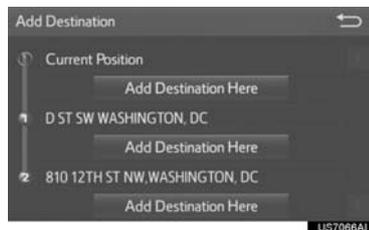

REORDERING DESTINATIONS

When more than 1 destination has been set, the arrival order of the destinations can be changed.

- 1 Display the “Edit Route” screen. (→P.246)
- 2 Select “Reorder”.
- 3 Select the desired destination and select “Move Up” or “Move Down” to change the arrival order. Then select “OK”.

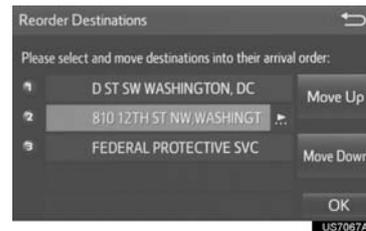

8

DELETING DESTINATIONS

- 1 Display the “Edit Route” screen. (→P.246)
 - 2 Select “Delete”.
 - 3 Select “Yes” when the confirmation screen appears.
 - When more than 1 destination has been set, a list will be displayed on the screen. Select the item(s) to be deleted.
- “Delete All”: Select to delete all destinations on the list.
- If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.


NAVIGATION SYSTEM

3. ROUTE GUIDANCE

SETTING ROUTE PREFERENCES

The conditions to determine the route can be selected from various choices such as freeways, toll roads, ferries, etc.

- 1 Display the “Edit Route” screen. (→P.246)
- 2 Select “**Preferences**”.
- 3 Select the desired route preferences and select “**OK**”.

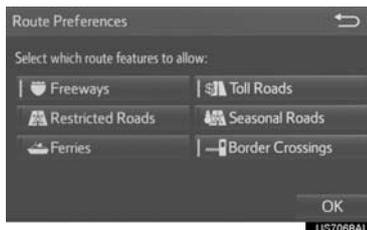

- When set to on, the indicator will illuminate.

SELECTING ROUTE TYPE

- 1 Display the “Edit Route” screen. (→P.246)
- 2 Select “**Route Type**”.
- 3 Select the desired route type.



- During driving, the route guidance starts after selecting the desired route type.
- 4 The entire route from the starting point to the destination is displayed.
- For details about this screen: →P.235

DETOUR SETTING

During the route guidance, the route can be changed to detour around a section of the route where a delay is caused by road repairs, an accident, etc.


- 1 Display the "Edit Route" screen. (→P.246)
- 2 Select "Detour".
- 3 Select the desired detour distance.



No.	Function
1	Select to detour the route for the next 1 mile.
2	Select to detour the route for the next 3 miles.
3	Select to detour the route for the next 5 miles.
4	Select to detour the entire route.

No.	Function
5	Select to make the system search for the route based on traffic congestion information received from traffic information. (→P.220) If the "Auto Avoid Traffic" setting is "Off", this function does not work. (→P.266)

INFORMATION

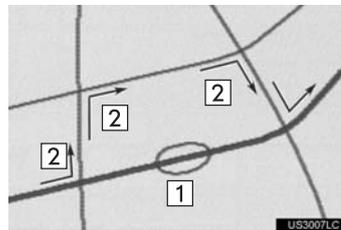

- This picture shows an example of how the system would guide around a delay caused by a traffic jam.
- 1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.
- 2 This route indicates the detour suggested by the system.
- When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).
- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

STARTING FROM ADJACENT ROAD

When a freeway and a surface road run in parallel, the system may show the guidance route going on the freeway while driving on the surface road, or vice versa.

If this happens, you can instantly choose the adjacent road for the route guidance.

- 1 Display the "Edit Route" screen.
(→P.246)
- 2 Select "**Start from Adjacent Road**".

INFORMATION

- When there is no adjacent road, this screen button will not be displayed.


4. MEMORY POINTS

1. MEMORY POINTS SETTINGS

Home, preset destinations, address book entries, areas to avoid can be set as memory points. The registered points can be used as the destinations. (→P.223)


Registered areas to avoid, will be avoided when the system searches for a route.

- 1 Press the **"MENU"** button.

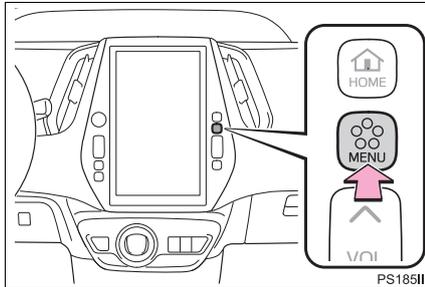

- 2 Select **"Settings"**.
- 3 Select **"Navigation"**.

- 4 Select the desired item to be set.

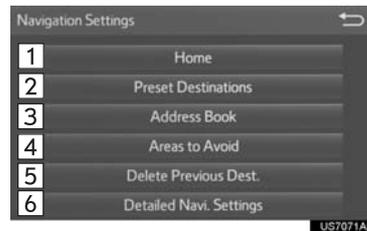

No.	Function	Page
1	Select to set home.	252
2	Select to set preset destinations.	253
3	Select to set the address book.	255
4	Select to set areas to avoid.	258
5	Select to delete previous destinations.	260
6	Select to set detailed navigation settings.	261

4. MEMORY POINTS

SETTING UP HOME

If home has been registered, that information can be recalled by selecting **“Go Home”** on the **“Destination”** screen. (→P.226)

- 1 Display the **“Navigation Settings”** screen. (→P.251)
- 2 Select **“Home”**.
- 3 Select the desired item to be set.




No.	Function	Page
1	Select to register home.	252
2	Select to edit home.	252
3	Select to delete home.	252

REGISTERING HOME

- 1 Select **“Set Home”**.
- 2 Select the desired item to search for the location. (→P.223)
- 3 Select **“OK”** when the editing home screen appears.

EDITING HOME

- 1 Select **“Edit”**.
- 2 Select the desired item to be edited.

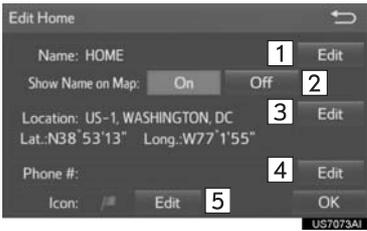

No.	Function	Page
1	Select to edit the home name.	257
2	Select to set display of the home name on/off.	—
3	Select to edit location information.	257
4	Select to edit the phone number.	257
5	Select to change the icon to be displayed on the map screen.	256

- 3 Select **“OK”**.

DELETING HOME

- 1 Select **“Delete”**.
- 2 Select **“Yes”** when the confirmation screen appears.

SETTING UP PRESET DESTINATIONS

If a preset destination has been registered, that information can be recalled by using preset destinations on the "Destination" screen. (→P.226)


- 1 Display the "Navigation Settings" screen. (→P.251)
- 2 Select **"Preset Destinations"**.
- 3 Select the desired item.



No.	Function	Page
1	Select to register a preset destination.	253
2	Select to edit a preset destination.	254
3	Select to delete a preset destination.	254

REGISTERING PRESET DESTINATIONS

- 1 Select **"Set"**.
- 2 Select the desired item to search for the location. (→P.223)
- 3 Select a position for this preset destination.

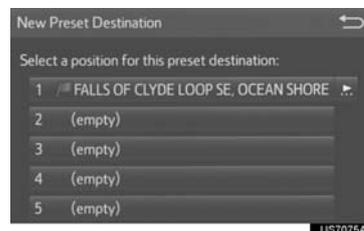

- 4 Select **"OK"** when the editing preset destination screen appears. (→P.254)

INFORMATION

- Up to 5 preset destinations can be registered.


8

NAVIGATION SYSTEM

4. MEMORY POINTS

EDITING PRESET DESTINATIONS

- 1 Select **“Edit”**.
- 2 Select the desired preset destination.
- 3 Select the item to be edited.

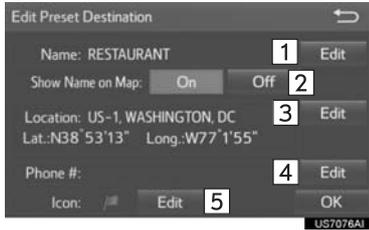

No.	Function	Page
1	Select to edit the preset destination name.	257
2	Select to set display of the preset destination name on/off.	—
3	Select to edit location information.	257
4	Select to edit the phone number.	257
5	Select to change the icon to be displayed on the map screen.	256

- 4 Select **“OK”**.

DELETING PRESET DESTINATIONS

- 1 Select **“Delete”**.
- 2 Select the preset destination to be deleted and select **“Delete”**.




- 3 Select **“Yes”** when the confirmation screen appears.

SETTING UP ADDRESS BOOK

Points on the map can be registered.

- 1 Display the "Navigation Settings" screen. (→P.251)
- 2 Select "**Address Book**".
- 3 Select the desired item.

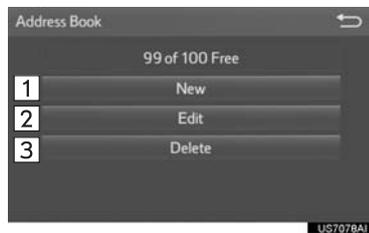

No.	Function	Page
1	Select to register address book entries.	255
2	Select to edit address book entries.	256
3	Select to delete address book entries.	257

REGISTERING ADDRESS BOOK ENTRIES

- 1 Select "**New**".
- 2 Select the desired item to search for the location. (→P.223)
- 3 Select "**OK**" when the editing address book entry screen appears. (→P.256)

INFORMATION


- Up to 100 address book entries can be registered.

4. MEMORY POINTS

EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Select **“Edit”**.
- 2 Select the desired address book entry.
- 3 Select the item to be edited.

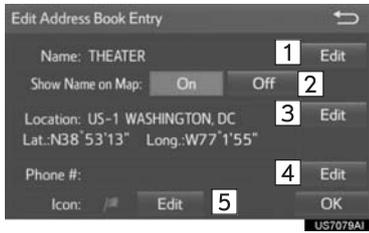

No.	Function	Page
1	Select to edit the address book entry name.	257
2	Select to set display of the address book entry name on/off.	—
3	Select to edit location information.	257
4	Select to edit the phone number.	257
5	Select to change the icon to be displayed on the map screen.	256

- 4 Select **“OK”**.

CHANGING THE ICON

- 1 Select **“Edit”** next to the **“Icon”**.
- 2 Select the desired icon.



- Change pages by selecting the **“Page 1”**, **“Page 2”** or **“With Sound”** tab.
- “With Sound”**: Select the memory points with a sound

► When the **“With Sound”** tab is selected

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

- 1 Select the **“With Sound”** tab.
- 2 Select the desired sound icon.

 : Select to play the sound.

- When **“Bell (with Direction)”** is selected, select an arrow to adjust the direction and select **“OK”**.



INFORMATION

- The bell sounds only when the vehicle approaches this point in the direction that has been set.

■ CHANGING THE NAME

- 1 Select **“Edit”** next to **“Name”**.
- 2 Enter a name and select **“OK”**.

■ CHANGING THE LOCATION


- 1 Select **“Edit”** next to **“Location”**.
- 2 Scroll the map to the desired point (→P.212) and select **“OK”**.

■ CHANGING PHONE NUMBER

- 1 Select **“Edit”** next to **“Phone #”**.
- 2 Enter the phone number and select **“OK”**.

DELETING ADDRESS BOOK ENTRIES

- 1 Select **“Delete”**.
- 2 Select the item to be deleted and select **“Delete”**.

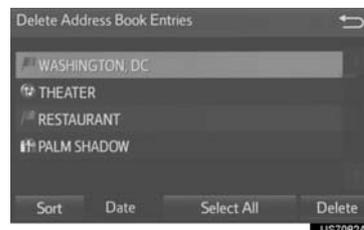

- 3 Select **“Yes”** when the confirmation screen appears.

8

NAVIGATION SYSTEM

4. MEMORY POINTS

SETTING UP AREAS TO AVOID

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as "Areas to Avoid".


- 1 Display the "Navigation Settings" screen. (→P.251)
- 2 Select "Areas to Avoid".
- 3 Select the desired item.



No.	Function	Page
1	Select to register areas to avoid.	258
2	Select to edit areas to avoid.	259
3	Select to delete areas to avoid.	260

REGISTERING AREAS TO AVOID

- 1 Select "New".
- 2 Select the desired item to search for the location. (→P.223)
- 3 Select either or to change the size of the area to be avoided and select "OK".

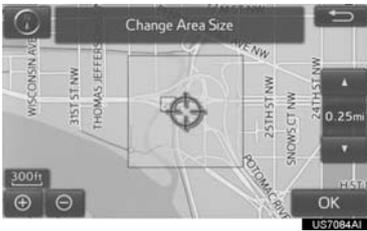

- 4 Select "OK" when the editing area to avoid screen appears.


INFORMATION

- If a destination is entered in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

EDITING AREAS TO AVOID

The name, location and/or area size of a registered area can be edited.

- 1 Select **"Edit"**.
- 2 Select the area and select **"OK"**.
- 3 Select the item to be edited.

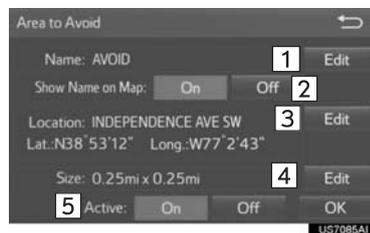

No.	Function	Page
1	Select to edit the name of the area to avoid.	259
2	Select to set display of the area to avoid name on/off.	—
3	Select to edit area location.	259
4	Select to edit area size.	259
5	Select to set the area to avoid function on/off.	—

- 4 Select **"OK"**.

CHANGING THE NAME

- 1 Select **"Edit"** next to **"Name"**.
- 2 Enter a name and select **"OK"**.

CHANGING THE LOCATION

- 1 Select **"Edit"** next to **"Location"**.
- 2 Scroll the map to the desired point (→P.212) and select **"OK"**.

CHANGING THE AREA SIZE

- 1 Select **"Edit"** next to **"Size"**.
- 2 Select either  or  to change the size of the area to be avoided and select **"OK"**.



4. MEMORY POINTS

DELETING AREAS TO AVOID

- 1 Select **“Delete”**.
- 2 Select the area to be deleted and select **“Delete”**.
- 3 Select **“Yes”** when the confirmation screen appears.

DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Display the **“Navigation Settings”** screen. (→P.251)
- 2 Select **“Delete Previous Dest.”**.
- 3 Select the previous destination to be deleted and select **“Delete”**.



 
- 4 Select **“Yes”** when the confirmation screen appears.

5. SETUP

1. DETAILED NAVIGATION SETTINGS



Settings are available for pop-up information, favorite POI categories, low fuel warning, etc.

- 1 Press the **"MENU"** button.



- 2 Select **"Settings"**.
- 3 Select **"Navigation"**.
- 4 Select **"Detailed Navi. Settings"**.
- 5 Select the items to be set.
- 6 Select **"OK"**.

SCREENS FOR NAVIGATION SETTINGS

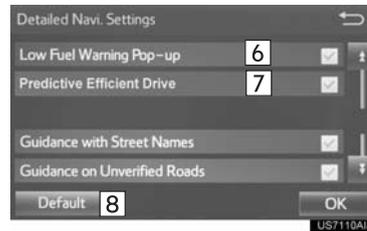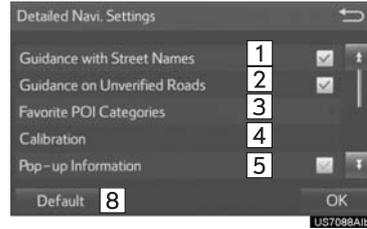

8

NAVIGATION SYSTEM

5. SETUP

No.	Function	Page
1	Select to set the voice guidance for the next street name on/off.	—
2	Select to set IPD road guidance on/off.	—
3	Select to set favorite POI categories that are used for POI selection to display on the map screen.	262
4	Select to adjust the current position mark manually or to adjust miscalculation of the distance caused by tire replacement.	263
5	Select to set display of pop-up information on/off.	—
6	Select to set display of low fuel warning on/off.	264
7	Select to set predictive efficient drive on/off.	—
8	Select to reset all setup items.	—

FAVORITE POI CATEGORIES (SELECT POI ICONS)

Up to 6 POI icons, which are used for selecting POIs on the map screen, can be selected as favorites.

- 1 Display the “Detailed Navi. Settings” screen. (→P.261)
- 2 Select “**Favorite POI Categories**”.
- 3 Select the category to be changed.



“**Default**” : Select to set the default categories.


- 4 Select the desired POI category.
- “**List All Categories**” : Select to display all POI categories.

- 5 Select the desired POI icon.

CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Display the "Detailed Navi. Settings" screen. (→P.261)
- 2 Select "**Calibration**".
- 3 Select the desired item.

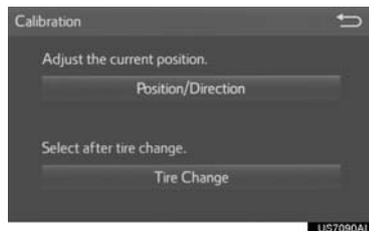

- For additional information on the accuracy of a current position: →P.272

POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Select "**Position / Direction**".
- 2 Scroll the map to the desired point (→P.212) and select "**OK**".
- 3 Select an arrow to adjust the direction of the current position mark and select "**OK**".



5. SETUP

TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

1 Select **“Tire Change”**.

- The message appears and the quick distance calibration starts automatically.

INFORMATION

- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

LOW FUEL WARNING POP-UP

When the fuel level is low, a warning message will pop up on the screen.

- 1** Display the **“Detailed Navi. Settings”** screen. (→P.261)
- 2** Select **“Low Fuel Warning Pop-up”**.

SEARCHING GAS STATION IN LOW FUEL WARNING

A nearby gas station can be selected as a destination.

- 1** Select **“Yes”** when the low fuel warning appears.
- 2** Select the desired nearby gas station.



- 3** Select **“Enter”** to set as a destination.



 
“Info”: Select to display gas station information. (→P.218)

5. SETUP

2. TRAFFIC SETTINGS


Traffic information such as traffic congestion or traffic incident warnings can be made available.

- 1 Press the "MENU" button.



- 2 Select "Settings".
- 3 Select "Traffic".
- 4 Select the items to be set.
- 5 Select "OK".

SCREEN FOR TRAFFIC SETTINGS

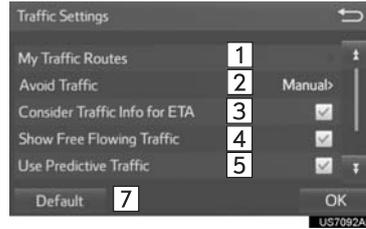

No.	Function
1	Select to set specific routes (such as frequently used routes) on which you wish to receive traffic information. (→P.267)
2	Select to set the avoid traffic function auto/manual. (→P.266)
3	Select to set the usage of traffic information for the estimated arrival time on/off.
4	Select to set the display of an arrow of free flowing traffic on/off.
5	Select to set to on/off whether to consider the predictive traffic information (→P.221) with estimated arrival time and detoured route search.

8

NAVIGATION SYSTEM

5. SETUP

No.	Function
6	Select to set of traffic incident voice warning on/off.
7	Select to reset all setup items.

AUTO AVOID TRAFFIC

- 1** Display the "Traffic Settings" screen. (→P.265)
- 2** Select "**Avoid Traffic**".
- 3** Select the desired item.




No.	Function
1	Select to automatically change routes when congestion information of the guidance route has been received.
2	Select to select manually whether or not to change routes when congestion information of the guidance route has been received. In this mode, a screen will appear to ask if you wish to reroute.
3	Select to not reroute when congestion information for the guidance route has been received.

- 4** Select "**OK**".

CHANGING THE ROUTE MANUALLY

When the navigation system calculates a new route, the following screen will be displayed.

- 1 Select the desired item.

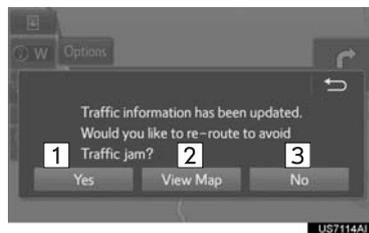

No.	Function
1	Select to start route guidance using the new route.
2	Select to confirm the new route and current route on the map.
3	Select to continue the current route guidance.

MY TRAFFIC ROUTES

Specific routes (such as frequently used routes) on which you wish to receive traffic information can be registered as "My Traffic Routes". A route is set by defining a start point and end point, and can be adjusted by setting up to 2 preferred roads.

- 1 Display the "Traffic Settings" screen. (→P.265)
- 2 Select "My Traffic Routes".
- 3 Select the desired item.



No.	Function	Page
1	Select to register personal routes.	268
2	Select to edit personal routes.	269
3	Select to delete personal routes.	269

8

NAVIGATION SYSTEM


5. SETUP

REGISTERING PERSONAL ROUTES

- 1 Select **"New"**.
- 2 Select **"Edit"** next to "Name".



- 3 Enter the name and select **"OK"**.
- 4 Select **"Edit"** next to "Start".
- 5 Select the desired item to search for the location. (→P.223)

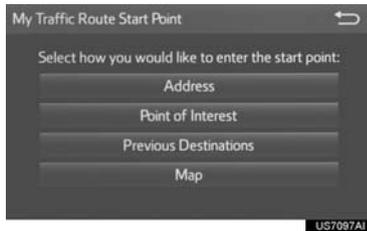

- 6 Select **"Edit"** next to "End".
 - 7 Select the desired item to search for the location. (→P.223)
 - 8 Select **"OK"** when the editing traffic route screen appears.
- The routes can be adjusted by setting preferred roads. (→P.270)

INFORMATION


- Up to 5 routes can be registered.

EDITING PERSONAL ROUTES

- 1 Select **"Edit"**.
- 2 Select the desired traffic route.



- 3 Select **"Edit"** next to the item to be edited.

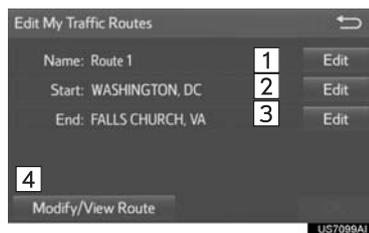

No.	Function	Page
1	Select to edit the name of the personal route.	268
2	Select to edit start location.	
3	Select to edit end location.	
4	Select to see and modify the entire route.	270

- 4 Select **"OK"**.
 - The entire route map will be displayed.

DELETING PERSONAL ROUTES

- 1 Select **"Delete"**.
- 2 Select the traffic route to be deleted and select **"Delete"**.




- 3 Select **"Yes"** when the confirmation screen appears.

SETTING PREFERRED ROADS

“My Traffic Routes” can be adjusted by setting up to 2 preferred roads.

- 1 Select “Set Preferred Roads”.

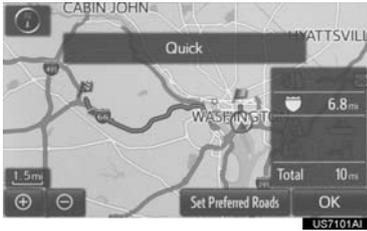


- 2 Select the desired item.




No.	Function	Page
1	Select to add preferred roads.	270
2	Select to modify preferred roads.	271
3	Select to delete preferred roads.	271

ADDING PREFERRED ROADS

- 1 Select “Add”.
- 2 Scroll the map to the desired point and select “OK”.

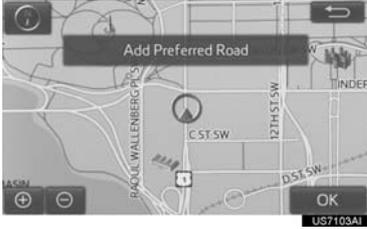


- 3 Select “OK” to use this road.
“Next”: Select to change road.
- 4 Select “Add Here” for the desired location.

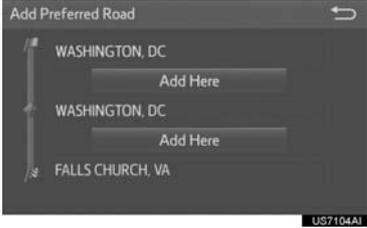


- If a preferred road is already set, a second preferred road can be added anywhere between the start point, the end point and the existing preferred road.

■ MODIFYING PREFERRED ROADS

- 1 Select **"Modify"**.
- 2 Select the preferred road to be modified if 2 preferred roads have been set.

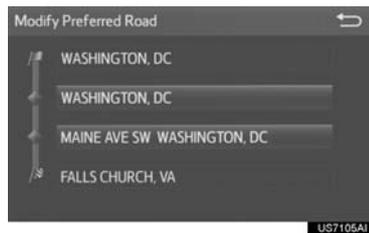


- 3 Scroll the map to the desired point and select **"OK"**.

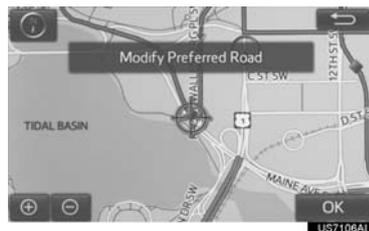

- 4 Select **"OK"** to use this road.
"Next": Select to change road.

■ DELETING PREFERRED ROADS

- 1 Select **"Delete"**.
- 2 Select the preferred road to be deleted if 2 preferred roads have been set.

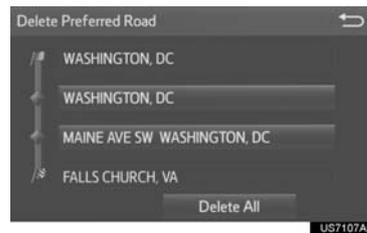

"Delete All": Select to delete all preferred roads on the list.

- 3 Select **"Yes"** when the confirmation screen appears.

6. TIPS FOR THE NAVIGATION SYSTEM

1. GPS (GLOBAL POSITIONING SYSTEM)

LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system compensates for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When the vehicle is receiving signals from satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the control panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.



NOTICE

- The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

- Accurate current position may not be shown in the following cases:
 - When driving on a small angled Y-shaped road.
 - When driving on a winding road.
 - When driving on a slippery road such as in sand, gravel, snow, etc.
 - When driving on a long straight road.
 - When freeway and surface streets run in parallel.
 - After moving by ferry or vehicle carrier.
 - When a long route is searched during high speed driving.
 - When driving without setting the current position calibration correctly.
 - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
 - When leaving a covered parking lot or parking garage.
 - When a roof carrier is installed.
 - When driving with tire chains installed.
 - When the tires are worn.
 - After replacing a tire or tires.
 - When using tires that are smaller or larger than the factory specifications.
 - When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration: →P.263
- Inappropriate route guidance may occur in the following cases:
 - When turning at an intersection off the designated route guidance.
 - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
 - When turning at an intersection for which there is no route guidance.
 - When passing through an intersection for which there is no route guidance.
 - During auto reroute, the route guidance may not be available for the next turn to the right or left.
 - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
 - After auto reroute, the route may not be changed.
 - If an unnecessary U-turn is shown or announced.
 - If a location has multiple names and the system announces 1 or more of them.
 - When a route cannot be searched.
 - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
 - Your destination point might be shown on the opposite side of the street.
 - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
 - The road and map data stored in the navigation system may not be complete or may not be the latest version.
- After replacing a tire: →P.264

6. TIPS FOR THE NAVIGATION SYSTEM

INFORMATION

- This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.

 
6. TIPS FOR THE NAVIGATION SYSTEM

2. MAP DATABASE VERSION AND COVERED AREA

MAP INFORMATION

Coverage areas and legal information can be displayed and map data can be updated.

- 1 Press the **"HOME"** button.



- 2 Select **"Options"**.
- 3 Select **"Map Data"**.

- 4 Check that the map data screen is displayed.



No.	Function
1	Map version
2	Select to display map coverage areas.
3	Select to display legal information.


INFORMATION

- Map data updates are available for a fee. Contact your Toyota dealer for further information.

ABOUT THE MAP DATA

Map data for the navigation system is contained in a SD card that is inserted in the SD card slot.

Do not eject the SD card, as doing so may deactivate the navigation system.

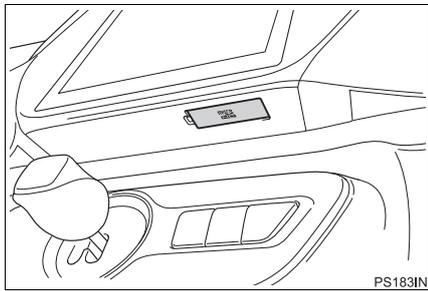

WARNING

- Do not allow children to touch the SD card. It may be accidentally swallowed and get stuck in the throat resulting in death or serious injury.

NOTICE

- Do not edit or delete the map data on the SD card, as doing so may deactivate the navigation system.
- Take care not to lose the micro SD card, as it is a small part that may easily become lost when ejected or dropped.

INFORMATION



- microSDHC Logo is a trademark of SD-3C,LLC.

9

Toyota Apps

1 CONNECTED SERVICE OVERVIEW

- 1. **CONNECTED SERVICES** 278
 - BEFORE USING THE FUNCTION 280
 - PREPARATION BEFORE USING Toyota Apps 281

2 CONNECTED SERVICE OPERATION

- 1. **Toyota Apps** 282
 - USING Toyota Apps 282
 - LINKING Toyota Apps AND NAVIGATION FUNCTION 286
 - Toyota Apps KEYWORD OPERATION 288
 - FUEL APPLICATION 289

3 SETUP

- 1. **Toyota Apps Settings** 291

1

2

3

4

5

6

7


8

9

1. CONNECTED SERVICE OVERVIEW

1. CONNECTED SERVICES*

Toyota apps is a service that enables downloadable applications to be displayed on and operated from the navigation screen. Before Toyota apps can be used, a few actions need to be performed first. (→P.281)

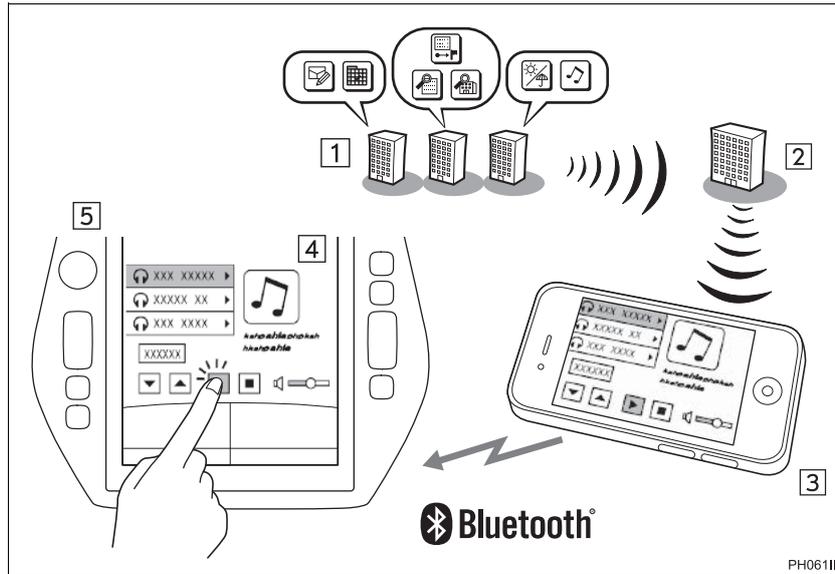

PH061II

*: Toyota apps is available in the contiguous United States, D.C., Alaska, Puerto Rico, Canada and United States Virgin Islands.

No.	Name	Function
1	Content provider	Provides content to the system via a cellular phone.
2	Application server	Provides downloadable application to the system via a cellular phone.
3	Cellular phone*	Using the Toyota mobile application, communication is relayed between the system, the application server and the contents provider.
4	Applications	Downloaded Toyota mobile applications provide access to audio/visual content from a content provider when connected via a compatible phone with a data connection.
5	Toyota apps	Contents received, via a cellular phone, from the contents provider servers are displayed on the screen. The system is equipped with an application player to run applications.

*: For known compatible phones, refer to <http://www.toyota.com/audio-multimedia/>.

INFORMATION

- The actual service availability is dependent on the network condition.

BEFORE USING THE FUNCTION

SUBSCRIPTION

- Services requiring a separate subscription can also be used.*

*: For details, refer to

<http://www.toyota.com/connected-services/> or call 1-800-331-4331.

AVAILABILITY OF SERVICE

- Toyota apps are available in the contiguous United States, D.C., Alaska, Puerto Rico, Canada and United States Virgin Islands.

INFORMATION

- When using Toyota apps, depending on the details of your cellular phone contract, data usage fees may apply. Confirm data usage fees before using this service.
- The actual service availability is dependent on the network connection and signal strength.

INITIALIZING PERSONAL DATA

The personal data used in applications can be removed from the system. (→P.74)

- The following personal data can be deleted from the system and returned to their default settings:
 - Downloaded applications
 - Downloaded application content
 - Input history

INFORMATION

- Once initialized, data will be erased from the system. Pay close attention when initializing the data.

PREPARATION BEFORE USING Toyota Apps

SETUP REQUIRED TO USE Toyota Apps

Perform the following actions.

1 Download the Toyota mobile application to your smart phone.



2 Open the Toyota mobile application on your smart phone and follow instructions. Bluetooth Pairing is required.

In order to use Toyota mobile application, the following actions must first be performed:

- Register a Bluetooth® phone with the hands-free system. (→P.51)

INFORMATION

- Applications can only be used when the Toyota mobile application has been downloaded to your smart phone and the application is running.
- In order to use applications, it is necessary to run the Toyota mobile application on your smart phone.
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <http://www.toyota.com/audio-multimedia/>.

DOWNLOADING Toyota Mobile Applications

- 1** The actions on P.281 need to be performed before Toyota mobile applications can be downloaded to the system.
- 2** Once your phone is running the Toyota mobile application and is connected to the system, an on-screen pop-up will be displayed offering to begin downloading Toyota mobile applications to the system. After download has started, see P.284 for more information.


2. CONNECTED SERVICE OPERATION

1. Toyota Apps

USING Toyota Apps

Toyota apps enable compatible cellular phone content to be displayed on and operated from the screen. Before Toyota apps can be used, a few actions need to be performed first. (→P.281)

1 Press the “MENU” button.

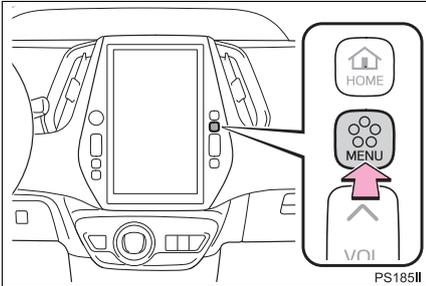

2 Select “Toyota Apps”.

3 Select the desired application button.



No.	Function	Page
1	Select to activate an application.	—
2	Select to update the application.	283
3	Select to reorder the applications.	284

UPDATING AN APPLICATION

When Toyota apps are activated, an application may need to be updated. By updating, an application can be kept to the latest version. When updating the application, it is necessary to download the updated data and install it.

DOWNLOADING THE UPDATED DATA

If an update is available, **“Update”** can be selected.

1 Select **“Update”**.



2 Check that downloading is started.



“Download in Background”: Select to operate other function while downloading.

“Cancel”: Select to cancel updating.

3 Check that downloading is completed.



No.	Function
1	Select to install the updated data. Follow the steps “INSTALLING THE UPDATED DATA” from “STEP 2”. (→P.284)
2	Select to display detailed information about the updated data.
3	Select to install the update later. The screen will return to the last displayed screen. Installing the updated data later: →P.284

INFORMATION


- Application download time may vary based on the speed of the cellular network.
- Application download can be resumed after turning off and back on.
- Future mandatory updates will display an on-screen pop-up when available.
- Toyota apps function cannot be operated while mandatory updates downloading.

2. CONNECTED SERVICE OPERATION

■ INSTALLING THE UPDATED DATA

After the downloading is complete, **“Update”** will be changed to **“Install”**.

- 1 Select **“Install”**.
- 2 Select **“Continue”**.

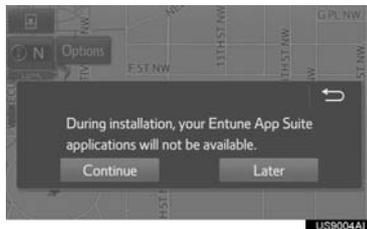

“Later”: Select to postpone the installation of the updated data and go back to the previous screen.

- 3 Check that installing is started.
- “Install in Background”**: Select to operate other function while installing.
- 4 Select **“OK”** after the installing is complete.

INFORMATION

- Toyota apps function cannot be operated while installing.

REORDERING THE APPLICATIONS

Order of the applications can be changed.

- 1 Display the Toyota apps screen. (→P.282)
- 2 Select **“App Catalog”**.



- 3 Select the desired application to be moved.
- 4 Select **◀** or **▶** to move the application, and select **“Done”**.

IF A MESSAGE APPEARS ON THE SCREEN

When problems occur starting up the application player, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action. The following messages are only a few examples. If a message other than the following is displayed, follow the instructions displayed on the screen.

Message	Display conditions	Corrective action
"Unable to connect to a Bluetooth phone. For troubleshooting assistance, please visit the Toyota website or contact your dealer."	The cellular phone cannot be connected.	Refer to http://www.toyota.com/audio-multimedia/ to confirm if the phone is compatible or not.
"To use services the Toyota mobile application needs to be running on your phone"	The Toyota mobile application cannot be connected to Bluetooth® SPP.	Refer to http://www.toyota.com/audio-multimedia/ to confirm if the phone is Bluetooth SPP compatible. Once confirmed then activate Toyota mobile application.
"Communication error Please try again."	Communication was disconnected.	After a few moments, retry the operation.


INFORMATION

- The actual messages displayed on screen may differ from the messages in this manual.

LINKING Toyota Apps AND NAVIGATION FUNCTION

The system can set a destination and make a hands-free call via Toyota apps. For details about the function and service of each application, refer to <http://www.toyota.com/audio-multimedia/>.

- 1 Press the “**MENU**” button.

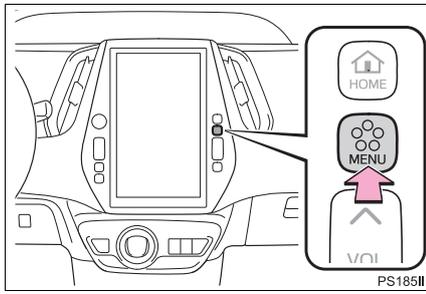

- 2 Select “**Destination**”.
- 3 Select “**Web Search**”.
- 4 Check that the “Web Search” screen is displayed.


SETTING A DESTINATION USING Toyota Apps

Locations that were searched using Toyota apps can be set as a destination.

- 1 Display the “Web Search” screen. (→P.286)
- 2 Select the desired application button to search.
- 3 Enter a search term, and select “**OK**”.
- 4 Select an item in list.
- 5 Select “**Go to**”.



- 6 Select "OK" to start guidance.

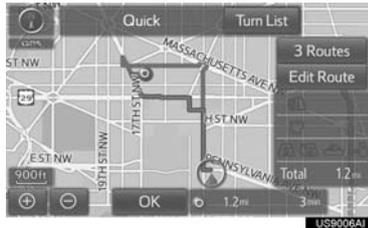

- For the operation of the route guidance screen and the function of each screen button: →P.235

INFORMATION

- Actual sequence may vary based on the application.

MAKING A PHONE CALL USING A POI DESTINATION

Phone call can be made to POI locations which were searched.

- 1 Display the "Web Search" screen. (→P.286)
- 2 Select the desired application button to search.
- 3 Enter a search term, and select "GO".
- 4 Select "Call".
- 5 Select "Yes".

"Cancel": Select to cancel making a phone call.

- 6 Check that the "Call" screen is displayed.

- For phone operation and the function of each screen button: →P.176

2. CONNECTED SERVICE OPERATION

Toyota Apps KEYWORD OPERATION

Information can be entered to an application by the software keyboard.

- The keyboard layout can be changed. (→P.72)

USING THE SOFTWARE KEYBOARD

- 1 Display the Toyota apps screen. (→P.282)
- 2 Select the desired application button.



- 3 Select the character input space.
- 4 Enter a search term, and then select "OK".




- 5 Entering characters will be reflected on the character input space.

- For details on operating the keyboard: →P.44

FUEL APPLICATION

Gas and charging stations can be displayed on the list.
Their location can also be set as a destination.

- 1 Press the **"MENU"** button.

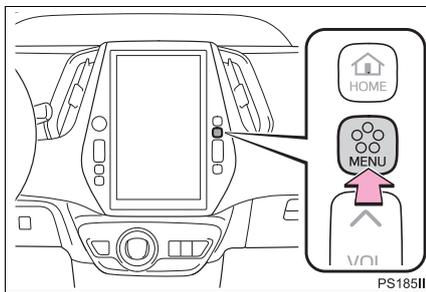

- 2 Select **"Toyota Apps"**.

- 3 Select **"Fuel"**.



- The screen shown above is only an example. The actual screen may be different.


- 4 Select a desired gas and charging station.



"Sort": Select to sort the gas and charging stations. (→P.290)

"Fuel Type": Select to narrow down the desired fuel type. (→P.290)

- 5 The detailed informations about the gas and charging stations will be displayed.

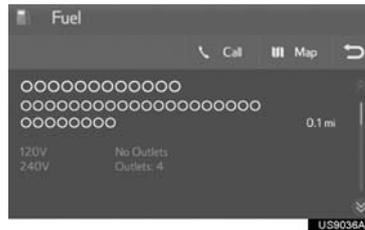

"Map": Select to display the map of the selected station.


"Call": Select to call the registered number.

9
Toyota Apps

SORTING

The order of a list displayed on the screen can be sorted in the order of distance from the current location, name, and price.

- 1 Displaying the “Fuel” screen. (→P.289)
- 2 Select “**Sort**”.
- 3 Select the desired sorting criteria.

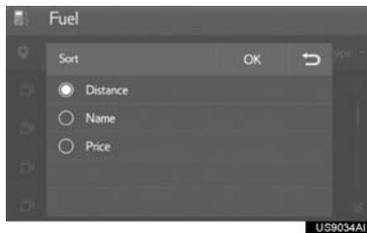

SELECTING A FUEL TYPE

The list displayed on the screen can be narrowed down the supported fuel type.

- 1 Displaying the “Fuel” screen. (→P.289)
- 2 Select “**Fuel Type**”.
- 3 Select the desired fuel type.

 


3. SETUP

1. Toyota Apps Settings

The phone data plan pop-up can be set when a paid application is downloaded.

- 1 Press the **"MENU"** button.




- 2 Select **"Settings"**.
- 3 Select **"Toyota Apps"**.
- 4 Select the items to be set.



No.	Function
1	Select to set the notification reminder for mobile data usage.
2	Select to automatically detect and activate the Toyota mobile application of the connected iPhone.
3	Select to reorder the applications.
4	Select to reset all setup items.

 3. SETUP



INDEX

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
-

ALPHABETICAL INDEX

A

AM/FM radio	89
Available HD Radio™ Technology	95
Caching a radio program	92
Overview	89
Preset button screen	91
Radio broadcast data system	94
Selecting a station from the list	92
Troubleshooting guide	97
Using HD Radio™ Technology	95
Apple CarPlay®	68
Establishing an Apple CarPlay connection	68
Troubleshooting	70
Audio remote controls	119
Audio settings	121
Audio settings screen	121
Audio system	81
AUX	118
Overview	118

B

Basic function	12, 35
Basic information before operation	36
Basic operation	82, 204
Bluetooth® audio	113
Connecting a Bluetooth® device	117
Listening to Bluetooth® audio	117
Overview	113
Bluetooth® phone message function	179
Calling the message sender	183
Checking messages	181
Message inbox screen	179
Receiving a message	180
Replying to a message (Quick reply)	182

C

Calling on the Bluetooth® phone	170
By call history	171
By contacts list	172
By dial pad	174
By favorites list	171
By off hook switch	174
Capacitive touch switches	38
Casual speech recognition	139
Command list	140
Connected service	278
Before using the function	280
Preparation before using Toyota Apps	281
Connected service operation	282
Connected service overview	278
Connectivity settings	51
Controls overview	12

D

Data services settings	150
Setting download methods	150
Destination search	223
Destination search screen	223
Detailed navigation settings	261
Screens for navigation settings	261



E	
Editing route.....	246
Adding destinations.....	247
Deleting destinations.....	247
Detour setting.....	249
Reordering destinations.....	247
Selecting route type.....	248
Setting route preferences.....	248
Starting from adjacent road.....	250
Entering letters and numbers/ list screen operation.....	44
Entering letters and numbers.....	44
List screen.....	45

F	
Function index.....	32

G	
General settings.....	72
General settings screen.....	72
GPS (Global positioning system).....	272
Limitations of the navigation system.....	272

I	
Information.....	147
“Information” screen.....	24
Initial screen.....	36
Internet radio.....	104
Listening to internet radio.....	104
iPod.....	109
iPod audio.....	112
Overview.....	109

L	
Linking multi-information display and navigation system.....	50

M	
Map database version and covered area.....	275
About the map data.....	276
Map information.....	275
Map screen.....	16
Display areas.....	18
Status display.....	20
Map screen information.....	213
Displaying information about the icon where the cursor is set.....	218
Displaying map information.....	213
Standard map icons.....	219
Map screen operation.....	207
Adjusting location in small increments.....	212
Current position display.....	207
Map scale.....	208
Orientation of the map.....	208
Screen scroll operation.....	211
Switching the map mode.....	209
Media operation.....	105
Memory points.....	251
Memory points settings.....	251
Deleting previous destinations.....	260
Setting up address book.....	255
Setting up areas to avoid.....	258
Setting up home.....	252
Setting up preset destinations.....	253
Menu screen.....	14
Mobile assistant.....	144
Mobile assistant operation.....	144

ALPHABETICAL INDEX

N

Navigation operation.....	26
Navigation system.....	201

O

Operating information	123
Error messages	129
File information.....	125
iPod	124
Radio.....	123
Terms	127
Operation flow: Guiding the route	30
Operation of menu buttons on map screen.....	42
Change the menu buttons.....	43
Display/hide the menu buttons	42
Other settings.....	72

P

Peripheral monitoring system	151
Phone.....	163
Phone operation (Hands-free system for cellular phones).....	164
Phone settings	184
“Contacts/Call History” screen.....	186
“Messaging” screen.....	192
“Notifications” screen.....	193
“Sounds” screen	185

Q

Quick guide	11
Quick reference.....	22, 82, 164, 204
Map screen.....	204
Navigation options screen	206

R

Radio operation.....	89
Rear view monitor system.....	152
Driving precautions.....	152
Screen description.....	154
Rear view monitor system precautions ...	156
Area displayed on screen.....	156
Differences between the screen and the actual road	158
The camera	157
When approaching three-dimensional objects.....	159
Receiving on the Bluetooth® phone	175
Incoming calls.....	175
Receiving weather information.....	148
Displaying weather information	148
Registering home	26
Registering preset destinations.....	28
Registering/connecting Bluetooth® device	51
Certification.....	55
Profiles.....	53
Registering a Bluetooth® audio player for the first time	52
Registering a Bluetooth® phone for the first time	51
Route guidance	239
Route guidance screen	239
During freeway driving.....	242
Route overview	241
Screen for route guidance	239
Turn list screen	244
Turn-by-turn arrow screen	244
When approaching intersection	243



S

Screen adjustment..... 48

Search operation 225

 Searching by address 227

 Searching by address book..... 231

 Searching by coordinates..... 234

 Searching by emergency 232

 Searching by intersection and
 freeway 232

 Searching by map 234

 Searching by point of interest..... 228

 Searching from previous
 destinations 231

 Selecting search area 226

 Setting home as destination..... 226

 Setting preset destinations as
 destination 226

Setting Bluetooth® details 58

 “Bluetooth* Setup” screen 58

 Connecting a Bluetooth® device 61

 Deleting a Bluetooth® device 60

 Editing the Bluetooth® device
 information..... 63

 Registering a Bluetooth® device 59

 “System Settings” screen 64

Setting home as the destination..... 31

Setup..... 121, 184, 261, 291

“Setup” screen 22

SiriusXM® Satellite Radio 98

 Displaying the radio ID 101

 How to subscribe to SiriusXM Radio
 Services 100

 If the satellite radio tuner
 malfunctions..... 102

 Overview 98

 Selecting a channel from the list 101

Some basics 83, 165

 About the contacts in the contact list... 168

 Audio screen adjustment..... 87

 Registering/connecting a Bluetooth®
 phone 166

 Selecting an audio source 84

 “Sound Settings” screen..... 85

 Turning the system on and off..... 83

 USB/AUX port 85

 Using the phone switch/microphone ... 166

 Voice command system 88, 167

 When selling or disposing of the
 vehicle..... 169

Starting route guidance..... 235

 Pausing guidance..... 238

 Starting route guidance 235

Steering switches..... 119

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

ALPHABETICAL INDEX

T

Talking on the Bluetooth® phone	176
Incoming call waiting	178
Things you should know	161
If you notice any symptoms	161
Tips for operating the audio system	123
Tips for the navigation system	272
Touch screen gestures	40
Touch screen operation	41
Toyota Apps	277, 282
Fuel application	289
Linking Toyota Apps and navigation function	286
Toyota Apps keyword operation	288
Using Toyota Apps	282
Toyota Apps settings	291
Traffic information	220
Displaying traffic information on the map	222
Traffic settings	265
Auto avoid traffic	266
My traffic routes	267
Screen for traffic settings	265
Troubleshooting	195
Typical voice guidance prompts	245

U

USB memory	105
Overview	105
USB audio	108
USB video	108
Useful information	148

V

Vehicle settings	76
Maintenance	76
Voice command system	131, 132
Using the voice command system	132
Voice command system operation	133
Voice command system operation	132
Voice settings	75
Voice settings screen	75

W

What to do if...	195
------------------------	-----



Map database information and updates

END USER LICENSE AGREEMENT

END USER TERM

The content provided by HERE ("Data") is licensed, not sold. By opening this package, or installing, copying, or otherwise using the Data, you agree to be bound by the terms of this agreement.

The Data is provided for your personal, internal use only and may not be resold. It is protected by copyright, and is subject to the following terms (this "End User License Agreement") and conditions which are agreed to by you, on the one hand, and HERE and its licensors (including their licensors and suppliers) on the other hand. For purposes of these terms, "HERE" shall mean (a) HERE North America, LLC with respect to Data for the Americas and/or the Asia Pacific region and (b) HERE Europe B.V. for Data for Europe, the Middle East and/or Africa.

The Data includes certain information and related content provided under license to HERE from third parties and is subject to the applicable supplier terms and copyright notices set forth at the following URL:http://corporate.navteq.com/supplier_terms.html.

TERMS AND CONDITIONS

License Limitations on Use: You agree that your license to use this Data is limited to and conditioned on use for solely personal, noncommercial purposes, and not for service bureau, timesharing or other similar purposes. Except as otherwise set forth herein, you agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

License Limitations on Transfer: Your limited license does not allow transfer or resale of the Data, except on the condition that you may transfer the Data and all accompanying materials on a permanent basis if: (a) you retain no copies of the Data; (b) the recipient agrees to the terms of this End User License Agreement; and (c) you transfer the Data in the exact same form as you purchased it by physically transferring the original media (e.g., the CD-ROM or DVD you purchased), all original packaging, all Manuals and other documentation. Specifically, Multidisc sets may only be transferred or sold as a complete set as provided to you and not as a subset thereof.

Additional License Limitations: Except where you have been specifically licensed to do so by HERE in a separate written agreement, and without limiting the preceding paragraph, your license is conditioned on use of the Data as prescribed in this agreement, and you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with, or in communication with, including without limitation, cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning: This Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic Data, any of which may lead to incorrect results.

No Warranty: This Data is provided to you “as is” , and you agree to use it at your own risk. HERE and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error free.

Disclaimer of Warranty: HERE AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: HERE AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THIS DATA; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS DATA, ANY DEFECT IN THIS DATA, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF HERE OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control: You agree not to export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such export laws, rules or regulations prohibit HERE from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

Entire Agreement: These terms and conditions constitute the entire agreement between HERE (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Severability: You and HERE agree that if any portion of this agreement is found illegal or unenforceable, that portion shall be severed and the remainder of the Agreement shall be given full force and effect.

Governing Law: The above terms and conditions shall be governed by the laws of the State of Illinois (for Data for the Americas and/or the Asia Pacific region) or The Netherlands (for Data for Europe, the Middle East and Africa), without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. For any and all disputes, claims and actions arising from or in connection with the Data ("Claims"), you agree to submit to the personal jurisdiction of (a) the State of Illinois for Claims related to Data for the Americas and/or the Asia Pacific region provided to you hereunder, and (b) The Netherlands for Data for Europe, the Middle East and/or Africa provided to you hereunder.

Government End Users: If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with this End User License Agreement, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use" , and be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME:

HERE

CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS:

425 West Randolph Street, Chicago, IL 60606.

This Data is a commercial item as defined in FAR 2.101 and is subject to the End User License Agreement under which this Data was provided.

© 1987-2020* HERE. All rights reserved. *original publication date

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify HERE prior to seeking additional or alternative rights in the Data.

© 1987-2020* HERE. All rights reserved. *original publication date

**END OF TERMS AND CONDITIONS
EXHIBIT A END USER TERMS**

A. General Terms. Prior to the delivery of any Data to a user, Licensee shall obtain the user's agreement to terms and conditions of use substantially similar to, but no less protective of TCS, its licensors or VISA than the following terms:

"1. Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, except for the in vehicle navigation system this information appears in, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation positioning, dispatch, real time route guidance, fleet management or similar applications.

2. No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. AISIN AW CO, LTD, Inc. and its licensors (and their licensors and suppliers, collectively, "AISIN") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and AISIN expressly disclaims any warranties regarding, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

3. Disclaimer of Liability. AISIN SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF AISIN OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

4. Indemnity. You agree to indemnify, defend and hold AISIN and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information."

B. VISA. With respect to any VISA data, VISA specifically requires the following:

1. Licensee shall provide the Attribution to VISA with respect to the VISA data.

2. Licensee shall not allow data mining or downloading of the Information except in strictly limited quantities (a maximum of nine (9) locations per end-user search. An **end-user search** is a request by an end-user for a search of listings in a specific geographic area meeting certain criteria (for example, nearest listing to a waypoint or listings along a route segment). Any individual listing may be selected manually by the end-user for storage in a personal electronic address book or other form of memory in the navigation system. The personal electronic address book in the navigation system may be synchronized (not copied, reproduced, republished, uploaded, posted, transmitted, stored or distributed) with other devices operated by the end-user.

3. Licensee shall incorporate updates to the Data as soon as commercially feasible.

4. In addition to the general minimum terms included above, Licensee shall agree to require end-users to accept the following VISA-standard end user terms as a condition of access to the Data:

i.) All materials are the copyrighted property of AISIN and/or TELECOMMUNICATION SYSTEMS, INC. and its licensors. No material from this site may be copied, reproduced, republished, uploaded, posted, transmitted, stored, or distributed in any way, except that end user may download one listing (a location's name and address) on an individual non-automated basis per visiting session to the Licensee site or application, into end user's personal electronic address book. A personal electronic address book may not be shared by end user with other end users, nor may it be copied, reproduced, republished, uploaded, posted, transmitted, stored or distributed in any way. Use of the personal electronic address book must be for end user's personal, noncommercial use only.

ii.) End user may not use any material from AISIN's site or application for the purpose of compiling, enhancing, verifying, supplementing, or otherwise modifying VISA databases, lists, or directories of any kind, including, but not limited to, location databases, mailing lists, contact lists, marketing lists, geographic directories, or any other compilation or collation of information which is sold, rented, published, distributed, or in any manner supplied to a third party.

Certain business data provided by Infogroup © 2018, All Rights Reserved.



Certification

- Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID, Playlist Plus and MediaVOCS are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries



Gracenote[®] End User License Agreement - Music

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present Gracenote

►U.S.A.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to User - Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

► For U.S. owners

I. Clear Channel Disclaimers

"Total Traffic Network, a division of Clear Channel Broadcasting, Inc., owns or holds the rights to the traffic, news, sports, weather, stocks and other data (the "TOTAL TRAFFIC-HD+ Data") and TOTAL TRAFFIC-HD+ network through which it is delivered, together the "TTN Service". Use of the TTN Service is subject to the terms of these Device End User Terms.

"The TTN Service is informational only. User assumes all risk of use. Total Traffic Network and its suppliers and licensors make no representations about the accuracy or timeliness of any of the TOTAL TRAFFIC-HD+ Data, including traffic and road conditions, route usability, or speed."

"TOTAL TRAFFIC-HD+ NETWORK DATA IS PROVIDED "AS IS," AND "WHERE IS". TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS EXPRESSLY DISCLAIM ALL WARRANTIES WITH RESPECT TO THE DATA (INCLUDING, WITHOUT LIMITATION, THAT THE DATA WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE."

"TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER LEGAL THEORY."

II. The Weather Channel's (TWC's) Disclaimers

THE FOLLOWING TERMS APPLY TO THE USE OF ANY MATERIAL, DATA OR INFORMATION PROVIDED BY THE WEATHER CHANNEL, LLC ("THE WEATHER CHANNEL"), INCLUDING WEATHER-RELATED INFORMATION AND REPORTS, OBTAINED BY YOU OR OTHERS THROUGH THE TTN SERVICE ("THE WC DATA").

DISCLAIMER OF WARRANTIES.

YOUR USE OF THE WC DATA IS AT YOUR SOLE RISK. THE WC DATA IS PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. THE WEATHER CHANNEL EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT.

THE WEATHER CHANNEL MAKES NO REPRESENTATION OR WARRANTY THAT (i) THE WC DATA WILL MEET YOUR REQUIREMENTS, (ii) THE WC DATA WILL BE UNINTERRUPTED, TIMELY, SECURE, OR ERROR-FREE, (iii) THE RESULTS THAT MAY BE OBTAINED FROM THE USE OF THE WC DATA WILL BE ACCURATE OR RELIABLE, OR (iv) ANY ERRORS OR BUGS IN THE WC DATA WILL BE CORRECTED. ACCORDINGLY, THE WEATHER CHANNEL SHALL NOT BE RESPONSIBLE OR LIABLE FOR THE ACCURACY, USEFULNESS OR AVAILABILITY OF THE WC DATA.

LIMITATION OF LIABILITY.

YOU EXPRESSLY UNDERSTAND AND AGREE THAT THE WEATHER CHANNEL, ITS SUPPLIERS, ITS LICENSORS AND ITS AFFILIATE COMPANIES SHALL NOT BE LIABLE, UNDER ANY LEGAL THEORY, INCLUDING CONTRACT, TORT, NEGLIGENCE OR STRICT LIABILITY, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, CONSEQUENTIAL OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, GOODWILL, USE, DATA OR OTHER INTANGIBLE LOSSES (EVEN IF THE WEATHER CHANNEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES), RESULTING FROM OR ARISING OUT OF YOUR USE OF, OR YOUR INABILITY TO USE, THE WC DATA, THIS AGREEMENT, OR ANY OTHER MATTER RELATING TO THE WC DATA. YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY DISPUTE WITH THE WEATHER CHANNEL RELATED TO THE WC DATA OR CONTENT SHALL BE CANCELLATION OF RECEIPT OF THE WC DATA.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.