

SECTION 1

BASIC FUNCTIONS

Basic information before operation

• Initial screen	22
• Touch screen operation	23
• Inputting letters and numbers/list screen operation	24
• Function help	27
• Map screen operation	28
Current position display	28
Screen scroll operation	29
Switching the screens	33
Map scale	35
Foot print map	36
Orientation of the map	37

Initial screen



When the "POWER" switch is in ACCESSORY or ON mode, the initial screen will be displayed and the system will begin operating.



After a few seconds, the "CAUTION" screen will be displayed.



After about 5 seconds, the "CAUTION" screen automatically switches to the map screen. When the "MAP/VOICE" button is also pushed, the map screen is displayed.

While the "CAUTION" screen is displayed, the "DEST" or "MENU" button cannot be operated. And if the "Language", "Calendar" or "Maintenance" buttons on the "Information" screen are touched, the screen will change back to "CAUTION" screen and then change to the map screen in about 5 seconds later or if the "MAP/VOICE" button is pushed.

● Maintenance information

This system informs about when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Information" screen will be displayed when the navigation system is in operation.




To disable this screen, touch "Do Not Display This Message Again.". This screen goes off if the screen is not operated for several seconds.

To prevent this information screen from being displayed again, touch "Do Not Display This Message Again.".

To register "Maintenance information", see "Maintenance information" on page 118.

● Memo information

This system notifies about a memo entry. At the specified date, the memo information will be displayed when the navigation system is in operation. The memo information screen will be displayed every time the system is turned on.

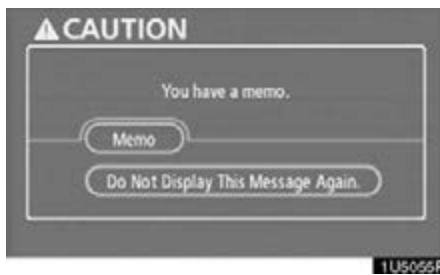

The memo of the current date can be viewed by touching "Memo". (See " — Editing a memo" on page 125.)

To disable this screen, touch "Do Not Display This Message Again.". This screen goes off if the screen is not operated for several seconds.

To prevent this information screen from being displayed again, touch "Do Not Display This Message Again.".

To register a memo information, see "Calendar with memo" on page 122.

Touch screen operation

This system is operated mainly by the touch-screen buttons on the screen.

To prevent damage to the screen, lightly touch the touch-screen buttons on the screen with the finger. When a touch-screen button on the screen is touched, a beep sounds.

Do not use objects other than the finger to touch the screen.

INFORMATION

- *If the system does not respond to a touch on a touch-screen button, move the finger away from the screen and then touch it again.*
- *Dimmed touch-screen buttons cannot be operated.*
- *Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the touch screen.*
- *The displayed image may become darker and moving images may be slightly distorted when the display is cold.*
- *Under extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the touch-screen buttons may be harder than usual to depress.*
- *When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the "Display" screen, or take off your sunglasses.*

BASIC FUNCTIONS

Inputting letters and numbers/list screen operation

When searching for an address or a name, or entering a memo, letters and numbers can be input via the touch screen.

INFORMATION

Key layout can be changed. (See “● Input key layout” on page 108.)

- **To input letters**

To display the alphabet keys, touch “A-Z” or “A-Y”.



Enter letters by touching the alphabet keys directly.



Touching this touch-screen button erases one letter. By holding this touch-screen button, letters will continue to be erase.

On certain letter entry screens, letters can be entered in upper or lower case.



To enter in lower case.



To enter in upper case.

- To input numerals and symbols

To display the number keys and symbol keys, touch "0-9".



Enter numerals and symbols by touching the number keys and symbol keys directly.

 : Touching this button erases one letter. By holding this button, letters will continue to be erased.

 1/2 : Touching this button displays other symbols.

 2/2

- To display the list



To search for an address or a name, touch "List". Matching items from the database are listed even if the entered address or name is incomplete.

If the number of matches is four or less, the list is displayed without touching "List".



INFORMATION

*The number of matching items is shown to the right side of the screen. If the number of matching items is more than 9,999, the system displays "****" on the screen.*

BASIC FUNCTIONS

• List screen operation

When a list is displayed, use the appropriate touch-screen button to scroll through the list.



To shift to the next or previous page.



To scroll up or down one item at a time.



This expresses a displayed screen position.

- If  appears to the right of the item name, the complete name is too long for the display. Touch  to scroll to the end of the name. Touch  to scroll to the beginning of the name.

• Sorting

The order of a list displayed on the screen can be rearranged.

TYPE A



1. Touch "Sort by".



2. Select the desired sorting criteria.

Sorting criteria are as follows:

"Distance": To sort in the order of distance from your current location.

"Date": To sort in the order of the date.

"Category": To sort in the order of the category.

"Icon": To sort in the order of the icons.

"Name": To sort in order by name.

"Attribute": To sort in order by attribute.

TYPE B



“Dist. Sort”: To sort in the order of distance from the current vehicle location. The distance from current vehicle position up to the destination is displayed to the right of the name.

“Name Sort”: To sort in alphabetical order by name.

Function help

Explanations for the functions of the “Destination”, “Setup”, and “Menu” screens can be viewed.



Touch “?”.



- : To view the previous page.
- : To view the next page.
- : To return to the previous screen.

BASIC FUNCTIONS

Map screen operation — — Current position display

When starting the navigation system, the current position is displayed first.

This screen displays the current vehicle position and a map of the surrounding local area.



The current vehicle position mark (1) appears in the center or bottom center of the map screen.

A street name will appear on the bottom of the screen, depending on the scale of the map (2).

You can return to this map screen that shows your current position at any time from any screen by pushing the **"MAP/VOICE"** button.

While driving, the current vehicle position mark is fixed on the screen and the map moves.

The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.

INFORMATION

- *After 12 volt battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.*
- *To correct the current position manually, see "• Current position/tire change calibration" on page 115.*

— Screen scroll operation (one-touch scroll)

When any point on the map is touched, that point moves to the center of the screen and is shown by the cursor mark (1).



Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position of the vehicle.

If the finger is continuously held on the screen, the map will continue scrolling in that direction until the finger is removed.

A street name, city name, etc. of the touched point will be shown, depending on the scale of the map (2). Distance from the current position to the cursor mark will also be shown (3).

After the screen is scrolled, the map remains centered at the selected location until another function is activated. The current vehicle position mark will continue to move along your actual route and may move off the screen. When the "MAP/VOICE" button is pushed, the current vehicle position mark returns to the center of the screen and the map moves as the vehicle proceeds along the designated route.

● To set the cursor position as a destination

A specific point on the map can be set as a destination using the one-touch scroll function.



Touch "Enter" (1).

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 60.)

If there is already a set destination, "Add to (1)" or "Replace (1)" are displayed.

"Add to (1)": To add a destination.

"Replace (1)": To delete the existing destinations and set a new one.

INFORMATION

When the one-touch scroll feature is used, the current vehicle position mark may disappear from the screen. Move the map with a one-touch scroll again or push the "MAP/VOICE" button to return to the current vehicle position map location display.

BASIC FUNCTIONS

- **To register the cursor position as a memory point**

Memory point registration enables easy access to a specific point.



Up to 106 memory points can be registered. If there is an attempt to register more than 106, a message appears for confirmation.



Touch “Mark”.

When you touch “Mark”, the following screen appears for a few seconds, and then the map screen returns.



The registered point is shown by  on the map.

To change the icon or name, etc., see “ — Editing memory points” on page 94.

- To see information about the icon where the cursor is set



To display information about an icon, set the cursor on it.

POI INFORMATION

When the cursor is set on a POI icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Add to” and “Replace” are displayed.

“Add to”: To add a destination.

“Replace”: To delete the existing destinations and set a new one.

To register this POI as a memory point, touch “Mark”. (See page 93.)

If is touched, the registered telephone number can be called.

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 78.)

BASIC FUNCTIONS

MEMORY POINT INFORMATION

When the cursor is set on a memory point icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

If “Enter” is touched, the position of the cursor is set as a destination.

If there is already a set destination, “Add to” and “Replace” are displayed.

“Add to”: To add a destination.

“Replace”: To delete the existing destinations and set a new one.

To edit a memory point, touch “Edit”. (See “— Editing memory points” on page 94.)

To delete a memory point, touch “Delete”.

If is touched, the registered telephone number can be called.

DESTINATION INFORMATION

When the cursor is set on a destination icon, the name and “Info.” are displayed on the top of the screen.



Touch “Info.”.



Information such as the name, address, and phone number are displayed.

To delete a destination, touch “Delete”.

If is touched, the registered telephone number can be called.

— Switching the screens

Any one of the screen configurations can be selected.



1. Touch this touch-screen button to display the following screen.



2. To select the desired screen configuration, touch one of the following touch-screen buttons.

Depending on the conditions, certain screen configuration buttons cannot be selected.

-  : To display the single map screen. (See page 34.)
-  : To display the dual map screen. (See page 34.)
-  : To display the compass mode screen. (See page 35.)
-  : To display the turn list screen. (See page 68.)
-  : To display the arrow screen. (See page 68.)
-  : To display the freeway information screen. (See page 66.)
-  : To display the intersection guidance screen or the guidance screen on the freeway. (See page 67.)

BASIC FUNCTIONS

- **Screen configurations**

SINGLE MAP

This is a regular map screen.

While on a different screen, touching  will display the single map screen.



The screen shows the single map.

DUAL MAP

A map can be displayed split in two.

While on a different screen, touching  will display the dual map screen.



The screen shows the dual map. The map on the left is the main map.

The right side map can be edited by touching any specific point on the right side map.



This screen can perform the following procedures:

1. Changing the map scale
2. Displaying the POI icon
3. Changing the orientation of the map

Touch "OK" when you complete editing.

The screen returns to the dual map screen.

COMPASS MODE

Current vehicle position is indicated with a compass, not with a map.

While on a different screen, touching  will display the compass mode screen.



Information about the destination and current position, as well as a compass, is displayed on the screen.

The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates and the compass, to make sure that your vehicle is headed in the direction of the destination.

INFORMATION

When the vehicle goes out of the disc area, the guidance screen changes into compass mode.

— Map scale

Touch  or  to change the scale of the map display. The scale bar and indicator at the bottom of the screen indicates the map scale menu. The scale range is 150 feet (50 m) to 250 miles (400 km).

Touch  or  until the scale bar changes normally. By continuing to touch the touch-screen button, the scale bar changes smoothly.

The scale of the map display can be changed by touching the scale bar directly. It is not available while driving.

The map scale is displayed under the north-up symbol or heading-up symbol at the top left of the screen.

INFORMATION

When the map scale is at the maximum range of 250 miles (400 km),  is not shown. When the map scale is at the minimum range of 150 feet (50 m),  is not shown. However, in the area where the foot print map is contained, when the map scale is changed to 150 feet (50 m),  changes to .


BASIC FUNCTIONS

— Foot print map

For the area which is covered by the foot print map (Some areas in the following cities; Detroit, Chicago, N.Y., L.A), you can switch to the foot print map on a scale of 75 feet (25 m).

- **To switch to the foot print map**

 changes into  when the map is scaled down to 150 feet (50 m).

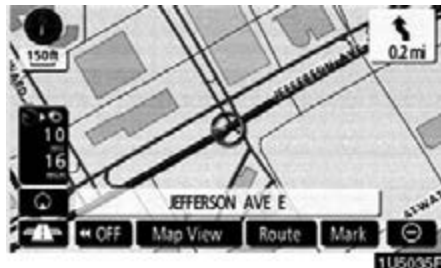

To display the foot print map, touch .

To delete the foot print map display, touch .

INFORMATION

- If the map or the current position is moved to the area which is not covered by the foot print map, the screen scale automatically changes to 150 feet (50 m).
- On the foot print map, a one way street is displayed by .
- It is not possible to perform scrolling on the foot print map (one-touch scroll) while driving.

- **To display building information**

Information is available only for buildings for which information is recorded on the map disc.




1. Touch "Info." while the foot print map is displayed.

If the map is displayed by a split screen, the map turned into a single map display.



2. Using an eight-direction arrow, move the cursor to the position of the building to display building information.
3. Touch "Building Info."

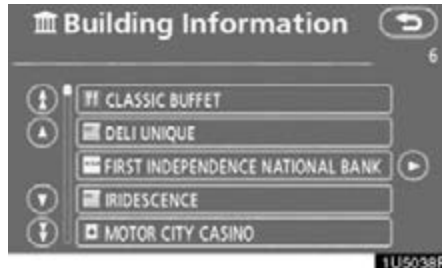

Details of POIs in some buildings may be displayed.

For detailed POI information, touch the building name. You can see details of the selected POIs.

— Orientation of the map

The orientation of the map can be changed from north-up to heading-up by touching the orientation symbol at the top left of the screen.

Touch  or .



► North-up screen



► Heading-up screen

North-up symbol

Regardless of the direction of vehicle travel, North is always up.

Heading-up symbol

The direction of vehicle travel is always up. A red arrow indicates North.

BASIC FUNCTIONS

SECTION 2


DESTINATION SEARCH

● Quick reference ("Destination" screen)	40
● Destination search	41
Selecting the search area	42
Destination search by Home	44
Destination search by Quick access	44
Destination search by "Address"	45
Destination search by "POI* Name"	49
Destination search by "POI* Category"	52
Destination search by "Emergency"	55
Destination search by "Memory"	56
Destination search by "Previous"	56
Destination search by "Map"	57
Destination search by "Intersection"	57
Destination search by "Freeway Ent./Exit"	58
Destination search by "Coordinates"	59
Destination search by "Phone #"	60
● Starting route guidance	60

*: Point of Interest

Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the **“DEST”** button.

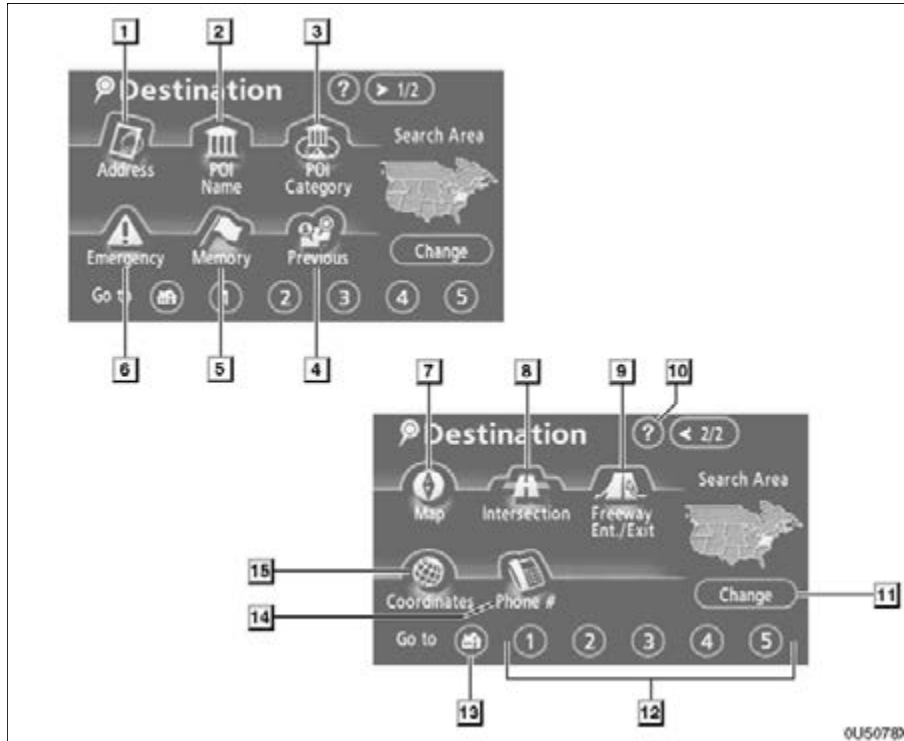

1 “Address”

A house number and the street address can be input by using the input keys.

..... 45

2 “POI Name”

Select one of the many POIs (Points of Interest) that have already been stored in the system’s database.

..... 49

3 “POI Category”

A destination can be selected from the POI category.

..... 52

4 “Previous”

A destination can be selected from any of the last 100 previously set destinations and from the previous starting point.

..... 56

5 “Memory”

The location can be selected from the registered “Memory points”. (To register memory points, see “ — Registering memory points” on page 93.)

..... 56

6 “Emergency”

One of the four categories of emergency service points that are already stored in the system’s database can be selected.

..... 55

7 “Map”

A destination can be selected simply by touching the location on the displayed map.

..... 57

Destination search —

8 “Intersection”

The names of two intersecting streets can be entered. This is helpful if only the general vicinity, not the specific address, is known. 57

9 “Freeway Ent./Exit”

The name of a freeway (interstate) entrance or exit can be entered. 58

10 “?”

Function help for the “Destination” screen can be viewed on this screen. 27

11 “Change”

To change the search area, touch this touch-screen button. 42

12 Quick access touch-screen buttons

One of 5 preset destinations can be selected by touching the screen directly. To use this function, it is necessary to set the “Quick access” for each memory point. (To register a “Quick Access”, see “ — Editing memory points” on page 94.) 44

13 Home touch-screen button


A personal home address can be selected without entering the address each time. To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see “ — Registering home” on page 100.) 44

14 “Phone #”

A destination can be entered by the telephone number. 60

15 “Coordinates”

A destination can be set by using latitude and longitude as coordinates. 59

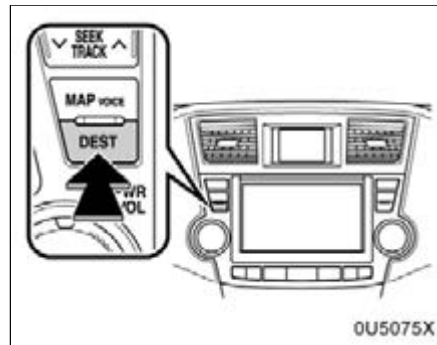

Push the “DEST” button.



You can use one of 13 different methods to search your destination. (See pages 44 through 60.)

INFORMATION

When searching the destination, the response to the touch-screen button may be slow.

— Selecting the search area

SELECTING THE SEARCH AREA ON THE DESTINATION SCREEN

1. Push the “DEST” button.



2. Touch “Change” on the “Destination” screen to display a map of the United States and Canada divided into 12 areas. (For map database information and updates, see “Map database information and updates” on page 258.)



3. Touch one of “US1” through “CAN” to select a search area.
4. Touch “OK” and the “Destination” screen returns.

SELECTING THE SEARCH AREA ON THE INPUT SCREEN

Change the search area in order to set a destination from a different area by using “Address”, “POI Name”, “Freeway Ent./Exit”, or “Intersection”.



1. Touch the search area button like “US9” on the input screen to display a map of the United States and Canada divided into 12 areas. (For map database information and updates, see “Map database information and updates” on page 258.)



2. Touch one of “US1” through “CAN” to select a search area.
3. Touch “OK” and the previous screen returns.

DESTINATION SEARCH

U.S.A.	
Button	States included in the search area
"US1"	Idaho Oregon Washington
"US2"	California Nevada
"US3"	Arizona Colorado Montana New Mexico Utah Wyoming
"US4"	Iowa Kansas Minnesota Missouri North Dakota Nebraska South Dakota
"US5"	Oklahoma Texas
"US6"	Illinois Indiana Kentucky Michigan Ohio Wisconsin
"US7"	Arkansas Alabama Louisiana Mississippi Tennessee
"US8"	Connecticut Massachusetts Maine New Hampshire New Jersey New York Rhode Island Vermont

"US9"	Washington, D.C. Delaware Maryland Pennsylvania Virginia West Virginia
"US10"	Florida Georgia North Carolina South Carolina
"HI"	Hawaii

Canada	
Button	Provinces and regions included in the search area
"CAN"	All provinces and regions in Canada included in this button.

DESTINATION SEARCH

— Destination search by Home

1. Push the “DEST” button.



2. Touch the home touch-screen button on the “Destination” screen.

The screen changes and displays the map location for home and the route preference. (See “Starting route guidance” on page 60.)

To use this function, it is necessary to set “Home” for the memory point. (To register “Home”, see page 100.)

INFORMATION

Guidance starts from the current vehicle position to your home if “Enter” is touched even while driving.

— Destination search by Quick access

1. Push the “DEST” button.



2. Touch any of the quick access touch-screen buttons on the “Destination” screen.

The screen changes and displays the map location of the quick access point and the route preference. (See “Starting route guidance” on page 60.)

To use this function, it is necessary to set “Quick access” for each memory point. (To register “Quick Access”, see page 96.)

INFORMATION

Guidance starts from the current vehicle position to the quick access point if “Enter” is touched even while driving.

— Destination search by “Address”

There are 2 ways to input a destination by address.

1. Push the “DEST” button.
2. Touch “Address” on the “Destination” screen.



(a) Inputting a house number and a street name



1. Touch numerals directly on the screen to input a house number.

After inputting a house number, touch “OK” to display the screen for inputting a street name.

It is possible to input a street name first. Touch “Street” to display the screen for inputting a street name.



2. Input the street name.

DESTINATION SEARCH



3. When the desired street name is found, touch the corresponding touch-screen button.

The screen changes and displays the map location of the selected destination and the route preference. (See "Starting route guidance" on page 60.)

If the same address exists in more than one city, the current screen changes to the city list screen.




4. Select or enter the desired city.

"Input Name": To narrow down the listed items by inputting the city name.



If inputting a street name first, the screen changes. The house number can then be input.

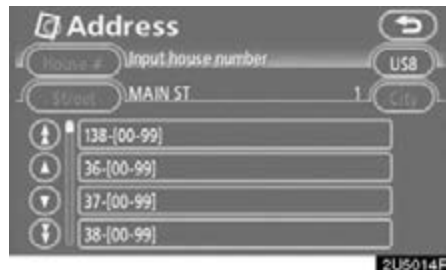


If the above screen appears, an address range on the screen can be selected.




If the same address exists in more than one city, the current screen changes to the city list screen.

(b) Selecting a city to search

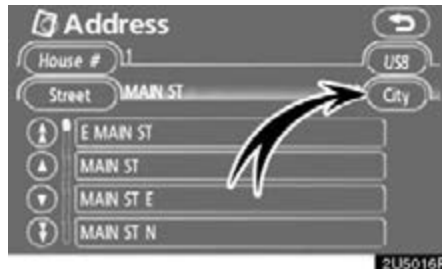

Touch "City".

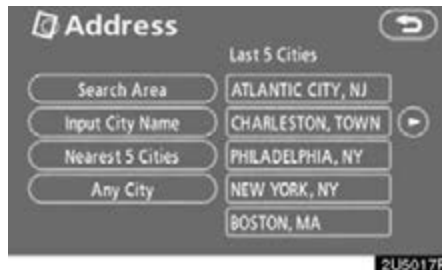

To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

INFORMATION

- To change the search area, touch "Search Area".
- To cancel the city setting, touch "Any City".

INPUTTING THE CITY NAME

1. Touch "Input City Name".



2. Input a city name.



3. Touch the touch-screen button of the desired city name from the displayed list.

"Map": To display the selected destination and the route preference. (See "Starting route guidance" on page 60.)

The current screen changes to the screen for inputting a house number or a street name. (See "(a) Inputting a house number and a street name" on page 45.)

DESTINATION SEARCH

SELECTING FROM THE NEAREST 5 CITIES

1. Touch "Nearest 5 Cities".



2. Touch the touch-screen button of the desired city name from the displayed list.

The current screen changes to the screen for inputting a house number or a street name. (See "(a) Inputting a house number and a street name" on page 45.)

SELECTING FROM THE LAST 5 CITIES



Touch the touch-screen button of the desired city name.

If the navigation has not be used, no cities will be displayed on the screen.

The current screen changes to the screen for inputting a house number or a street name. (See "(a) Inputting a house number and a street name" on page 45.)

— Destination search by “POI Name”

1. Push the “DEST” button.
2. Touch “POI Name” on the “Destination” screen.



3. Input the name of the Point of Interest.



4. Touch the touch-screen button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

When inputting the name of a specific Point of Interest, and there are two or more sites with the same name, the list screen is displayed.



Touch the touch-screen button of the desired destination.


If the same name exists in more than one city, a search can be performed more easily with “City” and “Category”. (See “(a) Selecting a city to search” on page 50 and “(b) Selecting from the categories” on page 52.)

INFORMATION

The desired Point of Interest can be displayed on the map screen. (See “ — Display POI icons” on page 78.)

DESTINATION SEARCH

(a) Selecting a city to search

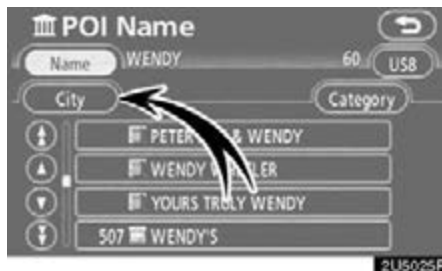

Touch "City".



To search by city, the following three methods are possible.

1. Input the city name
2. Select from the nearest 5 cities
3. Select from the last 5 cities

INFORMATION


- To change the search area, touch "Search Area".
- To cancel the city setting, touch "Any City".

INPUTTING THE CITY NAME

1. Touch "Input City Name".



2. Input the city name.

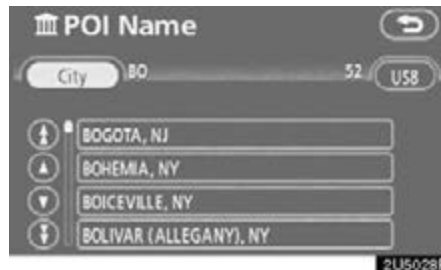

3. Touch the touch-screen button of the desired city name from the displayed list.


SELECTING FROM THE NEAREST 5 CITIES

1. Touch "Nearest 5 Cities".



2. Touch the touch-screen button of the desired city name.

SELECTING FROM THE LAST 5 CITIES

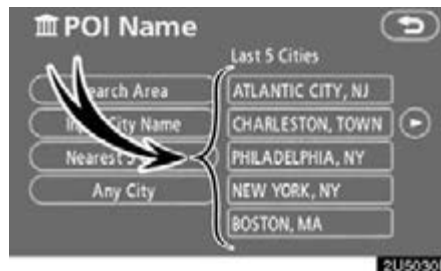

Touch the touch-screen button of the desired city name.

If the navigation has not be used, no cities will be displayed on the screen.

DESTINATION SEARCH

(b) Selecting from the categories



Touch “Category”.



If the desired POI category is on the screen, touch the name to display a detailed list of the POI category.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.



When the desired category is touched, the POI name list screen is displayed.

— Destination search by “POI Category”

The destination can be set by selecting the search point and the POI category.

1. Push the “DEST” button.
2. Touch “POI Category” on the “Destination” screen.



3. Set the search point by the following method:

1. Input the city center
2. Set the current position as the search point
3. Set the search point via the map screen
4. Set the search point from any destination

It is possible to display the names of POIs located within approximately 20 miles (32 km) from the selected search point.

INPUTTING THE CITY CENTER

1. Touch "Input City Center".



2. Input the city center name.



3. Touch the touch-screen button of the desired city center name.



When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling

4. Touch "Enter".

The search point is set and the "POI Category" screen will be displayed.


SETTING THE CURRENT POSITION AS THE SEARCH POINT

- Touch "Current Position".

The search point is set at the current position, and the "POI Category" screen will be displayed.

SETTING THE SEARCH POINT VIA THE MAP SCREEN

1. Touch "Map".

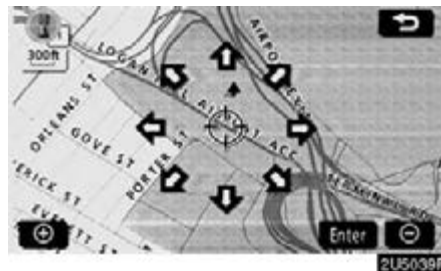

When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling

2. Touch "Enter".

The search point is set and the "POI Category" screen will be displayed.

DESTINATION SEARCH

SETTING THE SEARCH POINT FROM DESTINATIONS

1. Touch the destination buttons at the bottom of the screen.



When an arrow facing the desired point is touched, the map scrolls in that direction. Releasing the finger from the arrow will stop the scrolling.

2. Touch "Enter".

The search point is set and the "POI Category" screen will be displayed.

- To search POIs near the search point

When the search point is set, the "POI Category" screen will be displayed.



Select the desired POI categories.

"List": If the desired POI categories have already been selected, a list of POI will be displayed from among the selected categories.

The selected category icon appears on the top left of the screen.

If the desired POI category is not on the screen, touch **"List All Categories"** to list all POI categories.



Select the desired POI categories from the list and touch "OK".

The selected category icon appears on the top left of the screen.



“Select Category”: To return to the POI category selection screen.

“Show List”: To display the list of POIs in the selected categories.



By touching the touch-screen button of the desired item, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

“On Route”: When the indicator is illuminated by touching this touch-screen button, the list of the items searched along the route is displayed.

— Destination search by “Emergency”

1. Push the “DEST” button.
2. Touching “Emergency” on the “Destination” screen.

The display changes to a screen to select police stations, dealers, hospitals or fire stations. While driving, only nearby police stations, dealers, hospitals, or fire stations are shown. The current position is shown with an address, and the latitude and the longitude at the top of the screen.



3. Touch the desired emergency category.

The selected emergency category list is displayed.



4. Touch the touch-screen button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

INFORMATION

The navigation system does not guide in areas where route guidance is unavailable. (See page 257.)

DESTINATION SEARCH

— Destination search by “Memory”

1. Push the “DEST” button.
2. Touch “Memory” on the “Destination” screen.

A list of registered memory points is displayed. (To register or edit memory points, see “My places” on page 92.)



3. Touch the touch-screen button of your desired memory point.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

— Destination search by “Previous”

1. Push the “DEST” button.
2. Touch “Previous” on the “Destination” screen.



The previous starting point and up to 100 previously set destinations are displayed on the screen.

3. Touch the touch-screen button of the desired destination.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

INFORMATION

The list of previous destinations can be deleted while the vehicle is stopped, if these destinations are no longer necessary. (See “ — Deleting previous points” on page 106.)

— Destination search by “Map”

1. Push the “DEST” button.
2. Touch “Map” on the “Destination” screen.



The screen changes and displays the map location that was previously displayed just before the destination input operation and the route preference. (See “Starting route guidance” on page 60.)

INFORMATION

Guidance starts if “Enter” is touched even while driving. However, the cursor cannot be moved.

— Destination search by “Intersection”

1. Push the “DEST” button.
2. Touch “Intersection” on the “Destination” screen.




3. Input the name of the two intersecting streets which are located near the destination to be set.



4. Touch the touch-screen button of the desired item.

After inputting the two intersecting streets, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

— Destination search by “Freeway Ent./Exit”

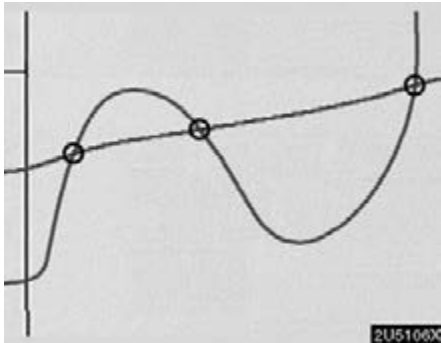


If the same two streets cross at more than one intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

1. Push the “DEST” button.
2. To input a freeway entrance or exit, touch “Freeway Ent./Exit” on the “Destination” screen.



Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an “I” (I-405). US highways use the state designation before the number (CA-118).

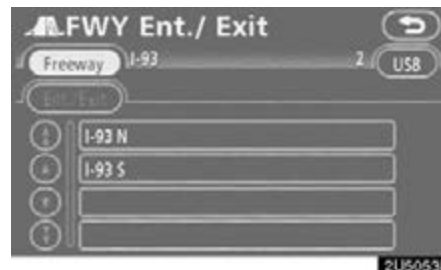

3. Select the desired freeway by touching the touch-screen button.



4. Either a freeway “Entrance” or “Exit” can be selected.

— Destination search by “Coordinates”


1. Push the “DEST” button.
2. Touch “Coordinates” on the “Destination” screen.



5. Touch the touch-screen button of the desired entrance or exit name.

The screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

“**Input Name**”: An applicable list is displayed by touching this touch-screen button and inputting the name.

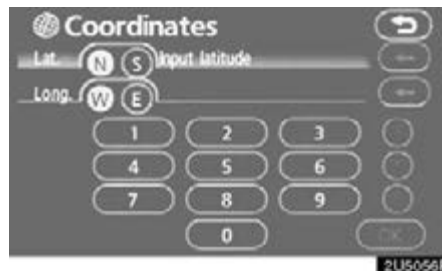

3. Input the latitude and the longitude.
4. When the input is finished, touch “OK”.

By touching the touch-screen button of the desired point, the screen changes and displays the map location of the selected destination and the route preference. (See “Starting route guidance” on page 60.)

DESTINATION SEARCH

— Destination search by “Phone #”


1. Push the “DEST” button.
2. Touch “Phone #” on the “Destination” screen.



3. Input a telephone number.
4. After inputting a telephone number, touch “OK”.

The screen changes and displays the map location of the selected destination and the road preference. (See “Starting route guidance” on page 60.)

If there is more than one site having the same number, the following screen will be displayed.

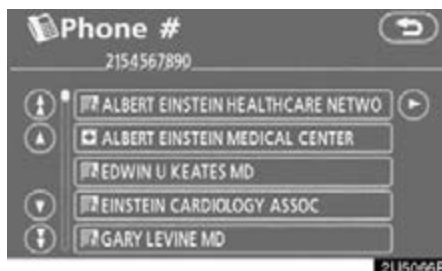

INFORMATION

- If there is no match for the telephone number inputted, a list of identical numbers with different area codes will be displayed.
- To set a memory point as a destination using the phone number, the number must be registered previously. (See page 99.)

Starting route guidance

After inputting the destination, the screen changes and displays the map location of the selected destination and the route preference. Registering the destination allows you select a route.



1. When an arrow facing the desired point is touched, the map scrolls in that direction.

Releasing the finger from the arrow will stop the scrolling.

2. Touch “Enter”.

The system starts route search and displays recommended routes.

If there is already a set destination, “Add to Ⓞ” and “Replace Ⓞ” are displayed.

“Add to Ⓞ”: To add a destination.

“Replace Ⓞ”: To delete the existing destinations and set a new one.

“Route Preference”: To change the route preference. (See page 62.)

“Info.”: If this touch-screen button is displayed on the top of the screen, touch the switch to view items such as name, address, and phone number.



- 1 Current position
- 2 Destination point
- 3 Type of the route and the distance
- 4 Distance of the entire route

3. To start guidance, touch "Guide".

"3 Routes": To select the desired route from three possible routes. (See page 63.)

"Route": To change the route. (See pages 72 and 74.)

INFORMATION

- Guidance can be suspended or resumed. (See "Suspending and resuming guidance" on page 88.)
- If "Guide" is touched until a beep sounds, Demo mode will start. Push the "MAP/VOICE" button to finish Demo mode.
- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. Set the destination again.
- If a destination is entered, the road nearest to the point you selected is set as the destination.



CAUTION

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may provide incorrect information.

DESTINATION SEARCH

- To change the route before starting guidance

ROUTE PREFERENCE



1. You can change route preference by touching "Route Preference".



2. Select desired route preferences by touching each button on/off.

When searching for a route, the system will avoid routes for preferences that are deselected.

3. After choosing the desired route preference, touch "OK".

INFORMATION

- Even if the "Allow Freeway" indicator is dimmed, the route cannot avoid including a freeway in some cases.
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current vehicle position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

3 ROUTES SELECTION



1. To select the desired route from three routes, touch “3 Routes”.



2. Touch “Quick1”, “Quick2” or “Short” to select the desired route.

“Quick1”: Recommended route.
This route is indicated by an orange line.

“Quick2”: Alternative route.
This route is indicated by a purple line.

“Short”: A route by which you can reach the destination in the shortest distance.
This route is indicated by a green line.

“Info.”: To display the following information about each of the 3 routes.

3 Routes Info.

	Quick1	Quick2	Short
1	8h 57min	9h 59min	8h 57min
2	475mi	534mi	475mi
3	1.4mi		1.4mi
4	443mi	506mi	433mi
5			

- 1 Time necessary for the entire trip
- 2 Distance of the entire trip
- 3 Toll road
- 4 Freeway
- 5 Ferry

DESTINATION SEARCH

SECTION 3

ROUTE GUIDANCE


- Route guidance screen 66
- Typical voice guidance prompts 69
- Distance and time to destination 71
- **Setting and deleting destination** 72
 - Adding destinations 72
 - Reordering destinations 72
 - Deleting destinations 73
- **Setting route** 74
 - Search condition 74
 - Detour setting 75
 - Route preference 77
 - Starting route from adjacent road 77
- **Map view** 78
 - Display POI* icons 78
 - Route overview 81
 - Route preview 82
 - Route trace 83

*: Point of Interest

Route guidance screen

During route guidance, various types of guidance screens can be displayed depending on conditions.

- **Screen layout**

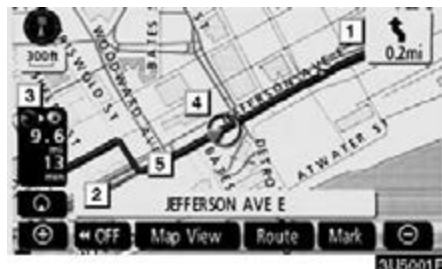

- 1 Distance to the next turn and the arrow indicating turning direction
- 2 Current street name
- 3 Distance and travel/arrival time to the destination
- 4 Current position
- 5 Guidance route

INFORMATION

- *If the vehicle goes off the guidance route, the route is searched again.*
- *For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select road that should not be traveled on.*
- *When you arrive at your destination, the destination name will be displayed on the top of the screen. Touching "OFF" clears the display.*

- **During freeway driving**

During freeway driving, the freeway information screen will be displayed.

This screen displays the distance to the next junction and exit, or POIs in the vicinity of the freeway exit.



- 1 Current position
- 2 Points of Interest that are close to a freeway exit.
- 3 Exit number and junction name
- 4 Distance from the current position to the exit or junction
- 5 Current street name

- ①: To display the selected map of the exit vicinity.
- ▲: To scroll for farther junctions or exits.
- ▼: To scroll for closer junctions or exits.
- ⌂: To scroll for the closest three junctions or exits.

● When approaching a freeway exit or junction

When the vehicle approaches an entrance, exit, or junction, the guidance screen for the freeway will be displayed.



- 1 Road/area name
- 2 Distance from the current position to the exit or junction
- 3 Current position

“OFF”: The guidance screen on freeway disappears and the map screen appears.

When touching  or pushing the “MAP/VOICE” button, the guidance screen on freeway reappears.

● When approaching an intersection

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.



- 1 Next street name
- 2 Distance to the intersection
- 3 Current position

“OFF”: The intersection guidance screen disappears and the map screen appears.

When touching  or pushing the “MAP/VOICE” button, the intersection guidance screen reappears.


ROUTE GUIDANCE

• Other screens

TURN LIST SCREEN

On this screen, the list of turns on the guidance route can be viewed.

Touching  during guidance displays the turn list.

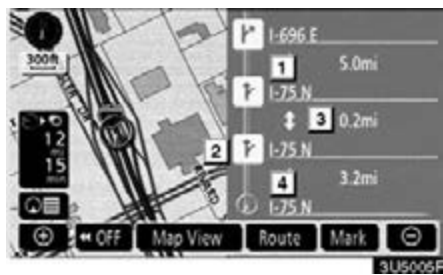

- 1 Next street name or destination name
- 2 Turn direction
- 3 Distance to the next turn
- 4 Current street name

ARROW SCREEN

On this screen, information about next turns on the guidance route can be viewed.


Touching  during guidance displays the arrow screen.




- 1 Exit number, street name containing number or next street name
- 2 Turn direction
- 3 Distance to the next turn
- 4 Current street name

Typical voice guidance prompts

The voice guidance provides various messages as you approach an intersection, or other point where you need to maneuver the vehicle.

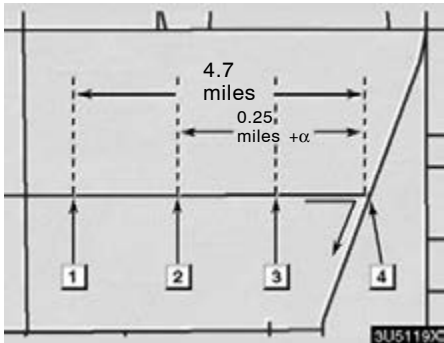

- 1 "Proceed about 5 miles."
- 2 "In a quarter of a mile, right turn."
- 3 "Right turn."
- 4 (Beep sound only)

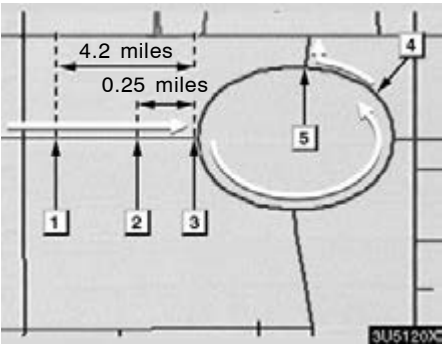


- 1 "Proceed about 4 miles to the traffic circle."
- 2 "In a quarter of a mile, traffic circle ahead, and then 3rd exit ahead."
- 3 "The 3rd exit ahead."
- 4 "The exit ahead."
- 5 (Beep sound only)

INFORMATION


On freeways, interstates or other highways with higher speed limits, the voice guidance will be made at earlier points than on city streets in order to allow time to maneuver.

ROUTE GUIDANCE

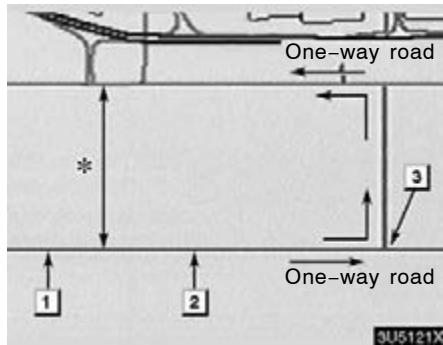

*: The system indicates a U-turn if the distance between two one-way roads (of opposite directions) is less than 50 feet (15 m) in residential areas or 164 feet (50 m) in non-residential areas.

- 1  "In half of a mile, make a legal U-turn."
- 2  "Make a legal U-turn ahead."
- 3  (Beep sound only)

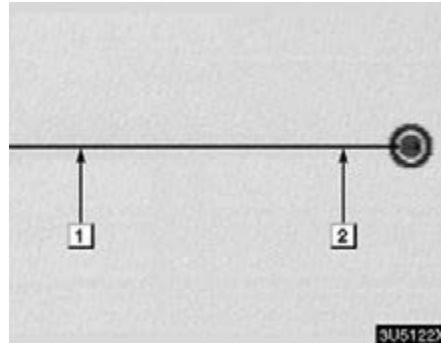

The system announces the approach to the final destination.

- 1  "Your destination is ahead."
- 2  "You have arrived at your destination. The route guidance is now finished."

INFORMATION

- *If the system cannot determine the current vehicle position correctly (in cases of poor GPS signal reception), the voice guidance may be made early or delayed.*
- *If you did not hear the voice guidance command, push the "MAP/VOICE" button to hear it again.*
- *To adjust the voice guidance volume, see "Volume" on page 89.*

Distance and time to destination



When the vehicle is on the guidance route, the distance and the estimated travel/arrival time to the destination are displayed. When the vehicle is not on the guidance route, the distance and the direction of the destination are displayed.

When driving on the guidance route and more than one destination is set, the distance and the estimated travel/arrival time from the current position to each destination are displayed.

1. Touch this touch-screen button to display the following screen.



2. Touch the number button to display the desired destination.

The distance, the estimated travel time and the estimated arrival time from the current position to the selected destination are displayed.



Estimated travel time is displayed.



Estimated arrival time is displayed.



To switch to estimated arrival time.



To switch to estimated travel time.



Displayed while driving off the guidance route. The destination direction is indicated by an arrow.

INFORMATION

When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time is calculated based on the set vehicle speed information. (See page 107.) However, when the vehicle is not on the guidance route, the distance is the linear distance between the current position and the destination.

ROUTE GUIDANCE

Setting and deleting destination — — Adding destinations

Adding destinations and searching again for the routes can be done.




1. Touch "Route".



2. Touch "Add".

3. Input an additional destination in the same way as the destination search. (See "Destination search" on page 41.)

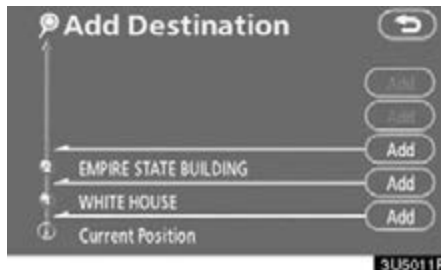

4. Touch the desired "Add" to determine the arrival order of the additional destination.

— Reordering destinations

When more than one destination is set, you can change the arrival order of the destinations.



1. Touch "Route".



2. Touch "Reorder".



3. Select the destination in the order of arrival by touching the destination button.

Reordered number of arrival is displayed on the right side of the screen.

Touching "Undo" will cancel each selected order number from the previously input number.

— Deleting destinations

4. After selecting the destinations, touch “OK”.

The system searches for the guidance route again, and displays the entire route. Even if “OK” is not touched, the entire route is displayed automatically within a few seconds when the order is fixed.

A set destination can be deleted.



1. Touch “Route”.



2. Touch “Delete”.

When more than one destination is set, a list will be displayed on the screen.



3. Touch the destination for deletion.

“Delete All”: To delete all destinations on the list.

A message appears to confirm the request to delete.

Setting route — — Search condition

4. To delete the destination(s), touch “Yes”.

If “Yes” is touching, the data cannot be recovered.

If “No” is touching, the previous screen will return.

5. If more than one destination is set, touch “OK” after deleting the destinations.

The system searches for the guidance route again, and displays the entire route.

You can designate the route conditions of the route to the destination.



1. Touch “Route”.



2. Touch “Search Condition”.



3. Touch “Quick”, “Quick1”, “Quick2” or “Short” and touch “OK”.

— Detour setting

While the route guidance is operating, you can change the route to detour around a section of the route where a delay is caused by road repairs, or an accident, etc.




The entire route from the starting point to the destination is displayed.

“**Guide**”: To start guidance.

“**Route**”: To change a route. (See pages 72 and 74.)



1. Touch “Route”.

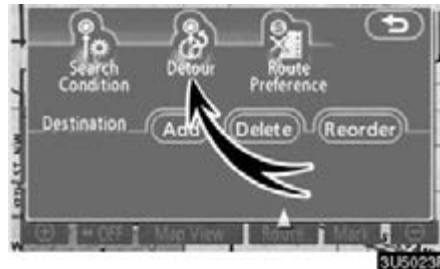

2. Touch “Detour”.


ROUTE GUIDANCE



3. Select the touch-screen button below to select the desired detour distance.

“1 mile (km)”, “3 miles (km)” or “5 miles (km)”: Touch one of these touch-screen buttons to start the detour process. After detouring, the system returns to the original guidance route.

“Whole Route”: By touching this touch-screen button, the system will calculate an entire new route to the destination.

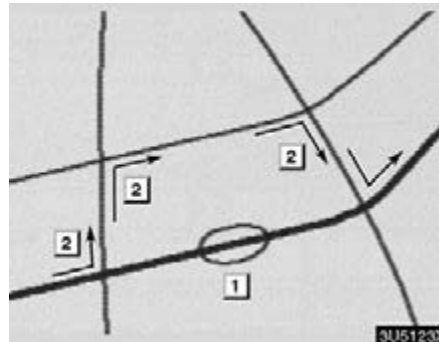

This picture shows an example of how the system would guide around a delay caused by a traffic jam.

- 1 This position indicates the location of a traffic jam caused by road repairs or an accident.
- 2 This route indicates the detour suggested by the system.

INFORMATION


- *When your vehicle is on a freeway, the detour distance selections are 5, 15, and 25 miles (km).*
- *The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.*

— Route preference

A number of choices are provided on the conditions which the system uses to determine the route to the destination.



1. Touch “Route”.

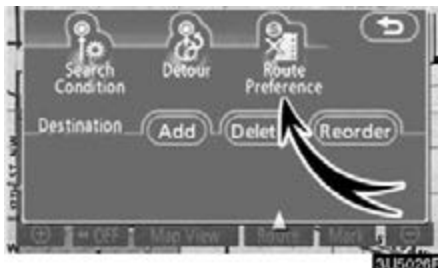

2. Touch “Route Preference” to change the conditions which are to determine the route to the destination.



3. Select desired route preferences by touching each button on/off.

When searching for a route, the system will avoid routes for preferences that are deselected.

4. After choosing the conditions, touch “OK”.

— Starting route from adjacent road

You can start the route guidance from the adjacent road.

(ex. When route guidance is set on the freeway, but the vehicle is driven parallel along the freeway.)



1. Touch “Route”.



2. Touch “Start from Adjacent Road”.


When there is no adjacent road, this button will not be displayed.

Map view — — Display POI icons

Points of Interest such as gas stations and restaurants can be displayed on the map screen. You can also set their location as a destination and use them for route guidance.



1. Touch "Map View".

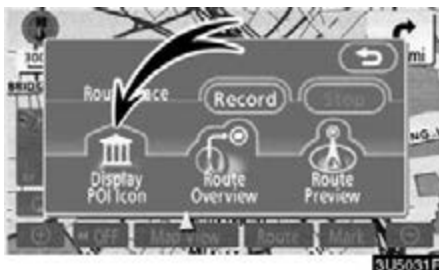

2. Touch "Display POI Icon" to display a particular type of Point of Interest on the screen.



A screen with a limited choice of Points of Interest will be displayed. (To change the displayed POI, see page 110.)

● Selecting POIs to be displayed

Up to 5 categories of icons can be displayed on the screen.



Touch the desired Point of Interest category to display POI location symbols on the map screen.

By selecting the desired POI category and then touching "OK", the selected POI icons are displayed on the map screen.

To turn off the Points of Interest icon on the map screen, touch "Delete".

"Other POIs": If the desired Point of Interest can not be found on the limited choice screen, touch this button. The screen then displays the complete POI listing screen.

"Local POI List": When searching for the nearest Point of Interest, touch this touch-screen button. The system will list the points within 20 miles (32 km). (See page 80.)

Touch “Other POIs” on the “Display POI Icons” screen.

When a Point of Interest category is selected from either the limited list or the complete list, the screen will display symbols at those locations on the map screen.




Select the desired POI categories.

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

If the desired POI category is not on the screen, touch “List All Categories” to list all POI categories.

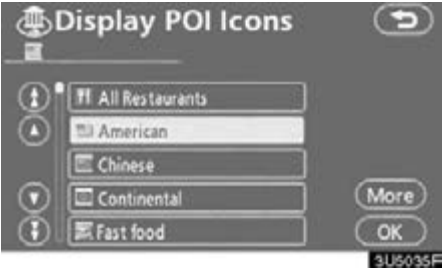

Select the desired POI categories from the list.

The selected category icon appears on the top left of the screen.

By selecting the desired POI category and then touching “OK”, the selected POI icons are displayed on the map screen.

To return to the POI category selection screen, touch “More”.

ROUTE GUIDANCE

- **To display the local POI list**

Points of Interest that are within 20 miles (32 km) of the current position will be listed from among the selected categories.



1. Touch “Local POI List” on the “Display POI Icons” screen.



2. Touch the touch-screen button of the desired Point of Interest.

The selected Points of Interest are displayed on the map screen.

“On Route”: When the indicator is illuminated by touching this touch-screen button, the list of the items searched along the route is displayed

- **To set a POI as a destination**

You can select one of the Points of Interest icons on the map screen as a destination and use it for route guidance.



1. Directly touch the Point of Interest icon that you want to set as a destination.

The map will shift so that the icon is centered on the screen and overlaps with the cursor. At this time, the distance from the current position is displayed on the screen. The distance shown is measured as a straight line from the current vehicle position to the POI.

2. When the desired Point of Interest overlaps with the cursor, touch “Enter”.

The screen changes and displays the map location of the selected destination and route preference. (See “Starting route guidance” on page 60.)

— Route overview



1. Touch “Map View”.



2. Touch “Route Overview”.



The entire route from the current position to the destination is displayed.

“**Guide**”: To start guidance.

“**Route**”: To change the route. (See pages 72 and 74.)

“**Turn List**”: The following screen displays the list of the roads up to the destination.



You can scroll through the list of roads by touching ▲ or ▼. However, not all road names in the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through two or more cities), the name change will not appear on the list. The street name closest to the starting point will be displayed with the mileage to the next turn.

These marks indicate the direction in which you should turn at an intersection.

Touch “Map” on the “Turn List” screen.

The point which you choose is displayed on the map screen.



— Route preview



1. Touch “Map View”.



2. Touch “Route Preview”.



-  : To indicate the next destination.
-  : To preview the route to the next destination.
-  : To preview the route to the next destination in fast-forward mode.
-  : To stop the preview.
-  : To review the route to the previous destination or starting point.
-  : To review the route to the previous destination or starting point in fast-forward mode.
-  : To indicate the previous destination or starting point.

— Route trace

It is possible to store the traveled route up to 124 miles (200 km) and retrace the route on the display.

INFORMATION

This feature is available on the map with more detailed map scale than 30 mile (50 km).



Touch "Map View".



"Record": To start recording the route trace.

"Stop": To stop recording the route trace.

If you touch **"Stop"** to display the following screen.



Touching **"Yes"** stops recording and the route trace remains displayed on the screen.

Touching **"No"** stops recording and the route trace is erased.

ROUTE GUIDANCE

SECTION 4


ADVANCED FUNCTIONS

Descriptions of functions for more effective use

• Quick reference ("Menu" screen)	86
• Quick reference ("Setup" screen)	87
• Suspending and resuming guidance	88
• Volume	89
• User selection	90
• My places	92
Registering memory points	93
Editing memory points	94
Deleting memory points	99
Registering home	100
Deleting home	101
Registering area to avoid	101
Editing area to avoid	102
Deleting area to avoid	105
Deleting previous points	106
• Setup	106

Quick reference (“Menu” screen)


The “Menu” screen allows effective use of the navigation system. To display the “Menu” screen, push the “MENU” button.

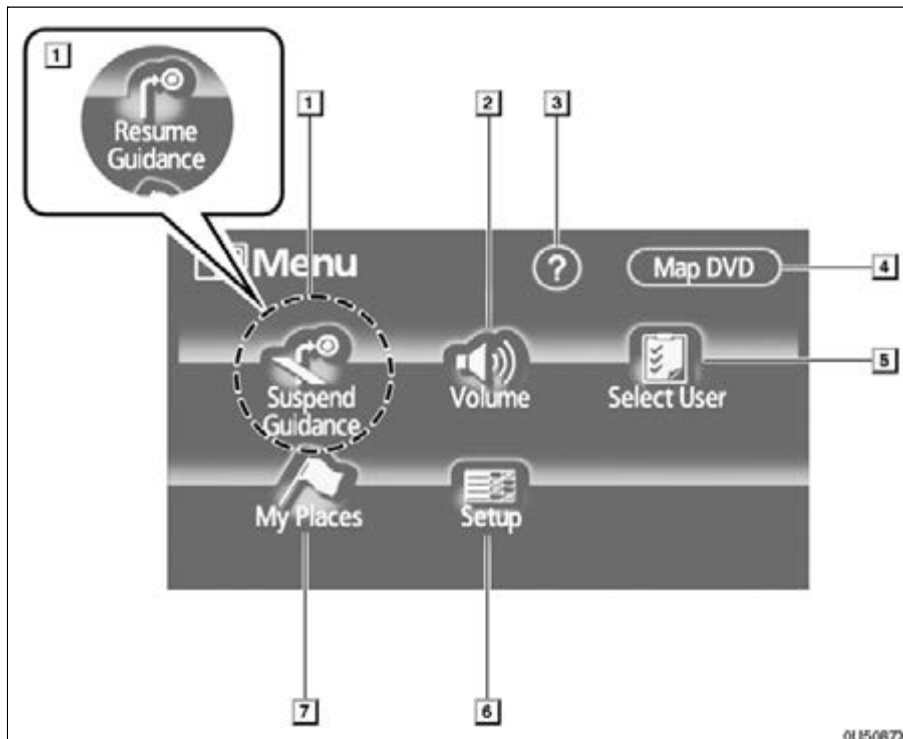

- | | |
|---|---|
| <p>1 “Suspend Guidance” or “Resume Guidance”
Suspends or resumes guidance 88</p> <p>2 “Volume”
Sets the volume for voice guidance. . 89</p> <p>3 “?”
Function help for the “Menu” screen can be viewed on this screen. 27</p> <p>4 “Map DVD”
Displays information regarding the disc version or covered area. 268</p> | <p>5 “Select User”
Up to 3 different settings for different users can be memorized. 90</p> <p>6 “Setup”
Enables various settings for the navigation system. 87, 106</p> <p>7 “My Places”
Enables changes to “Memory points”, “Home” and “Areas to avoid”. Enables deletion of the previous point. 92</p> |
|---|---|

Quick reference (“Setup” screen)

The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “MENU” button and touch “Setup”.

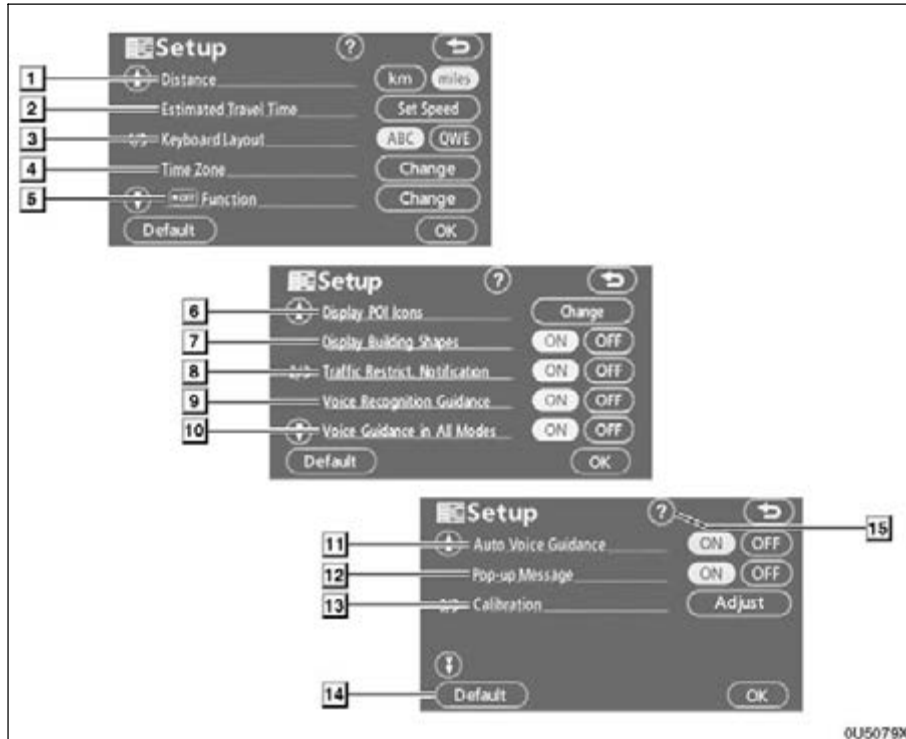

1 “Distance”

The distance units “km” or “miles” can be selected. 107

2 “Estimated Travel Time”

The system to display the travel time and the arrival time to the destination on the route guidance screen can be set. 107

3 “Keyboard Layout”

Key layout can be changed. 108

4 “Time Zone”

The desired time zone can be selected. 109

5 “Function”

The choice whether to display each touch-screen button and current street name on the map screen can be set. 110

6 “Display POI Icons”

A selection of 6 icons displayed on the “Display POI Icons” top screen is possible. 110


7 “Display Building Shapes”

Selection of either ON or OFF to display the building shape on the map screen is possible. 111

- 8 "Traffic Restrict. Notification"**
Notification of seasonal restrictions can be selected. 112
- 9 "Voice Recognition Guidance"**
Voice recognition guidance can be set. 112
- 10 "Voice Guidance in All Modes"**
Voice guidance can be set in all modes. 113
- 11 "Auto Voice Guidance"**
Automatic voice guidance can be set. 113
- 12 "Pop-up Message"**
Selection of either ON or OFF to display the pop-up message is possible. 114
- 13 "Calibration"**
Adjustment of the current vehicle position mark can be done manually, or mis-calculation by changing tire will be adjusted. 115
- 14 "Default"**
This touch-screen button initializes all of the settings. 106
- 15 "?"**
Function help for the "Setup" screen can be viewed. 27

Suspending and resuming guidance

- To suspend guidance

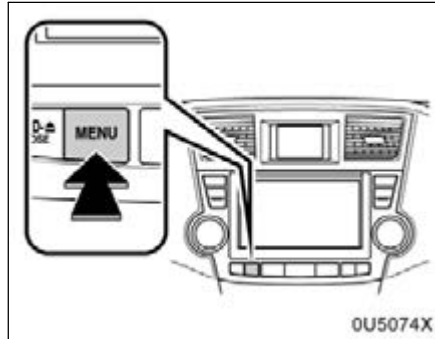

1. Push the "MENU" button.



2. Touch "Suspend Guidance".

INFORMATION

Without route guidance, "Suspend Guidance" cannot be used.



The screen will return to the current position map without route guidance.

- To resume guidance

1. Push the "MENU" button.



2. Touch "Resume Guidance".




The screen will change to the current position map with route guidance.

Volume

Voice guidance can be used when approaching a destination.


The volume of the voice or turn off voice guidance can be adjusted.

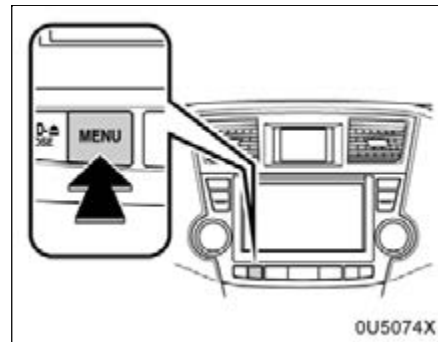

1. Push the "MENU" button.



2. Touch "Volume".

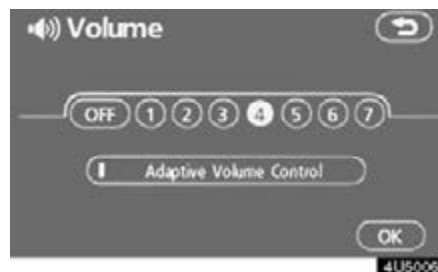

To adjust the volume, select the desired level by touching the appropriate number.

If voice guidance is unneeded, touch "OFF".

The selected item is highlighted.

INFORMATION

During route guidance, the voice guidance continues even if the navigation screen is changed to other screens.


“Adaptive Volume Control”: By turning “Adaptive Volume Control” on, the volume is turned up automatically when the vehicle speed exceeds 50 mph (80 km/h).

To turn the “Adaptive Volume Control” system on, touch the button. The indicator will be highlighted.

User selection

The system can memorize the following settings for up to three users.

- Map direction
- Map scale
- Map configuration
- Guidance mode
- Setup
- Volume
- Language
- Route trace
- Travel time/arrival time
- Right screen of dual map
- Route preference
- Maintenance notification

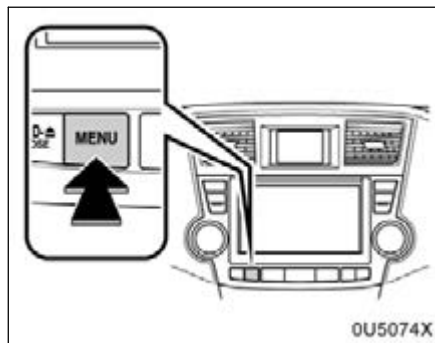


1. Push the “MENU” button.




2. Touch “Select User”.

- To register

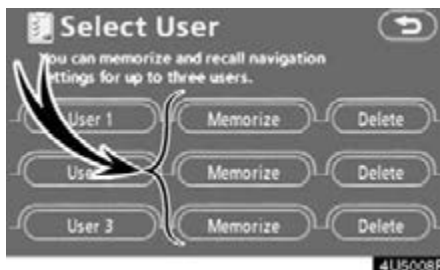

1. Touch "Memorize".

The confirmation screen will be displayed.

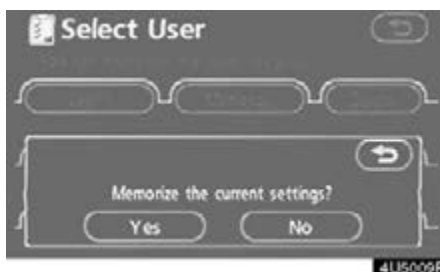

2. To register, touch "Yes". To return to the previous screen, touch "No" or .

When a touch-screen button that is already registered is touched, the following screen appears.



To replace, touch "Yes". To cancel the replacement, touch "No" or .

- To change user



Touch "User number".



The above message appears, then the map screen will be displayed.

- To delete user



1. Touch "Delete".

The confirmation screen will be displayed.




2. To delete, touch "Yes". To return to the previous screen, touch "No" or the back button.

My places —

Points or areas on the map can be registered.

The registered points can be used on the "Destination" screen. (See " — Destination search by Home" on page 44 and " — Destination search by Quick access" on page 44.)

Registered areas are avoided at the time of route search.

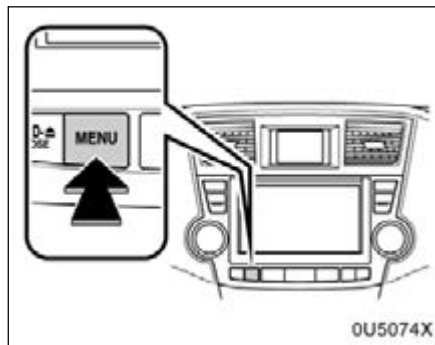


1. Push the "MENU" button.



2. Touch "My Places".

— Registering memory points

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.

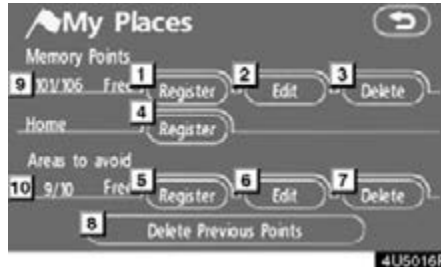


On this screen, the following operations can be performed.

1. **Registers memory points.** (See “— Registering memory points” on page 93.)
2. **Edits memory points.** (See “— Editing memory points” on page 94.)
3. **Deletes memory points.** (See “— Deleting memory points” on page 99.)
4. **Registers or deletes home.** (See “— Registering home” or “— Deleting home” on pages 100 or 101.)
5. **Registers areas to avoid.** (See “— Registering area to avoid” on page 101.)
6. **Edits areas to avoid.** (See “— Editing area to avoid” on page 102.)
7. **Deletes areas to avoid.** (See “— Deleting area to avoid” on page 105.)
8. **Deletes previous points.** (See “— Deleting previous points” on page 106.)
9. **Number of remaining memory points**
10. **Number of remaining areas to avoid**



3. Touch “Register”.

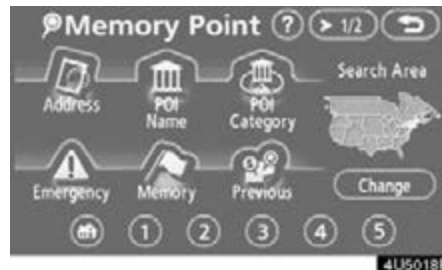

4. **Enter the location in the same way as for a destination search.** (See “Destination search” on page 41.)

After memory point registration is completed, the “Memory Point” screen will be displayed.

ADVANCED FUNCTIONS



5. Touch “OK”.

To edit registered information, see “ — Editing memory points” on page 94.

INFORMATION

Up to 106 memory points can be registered.

— Editing memory points

The icon, attribute, name, location and/or telephone number of a registered memory point can be edited.

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Edit”.



4. Touch the desired memory point button.



5. Touch the touch-screen button to be edited.

“Icon”: To select icons to be displayed on the map. (See page 95.)

“Quick Access”: To set an attribute. Memory points with a set attribute can be used as a “Quick access” or “Home” button. (See page 96.)

“Name”: To edit memory point names. The names can be displayed on the map. (See page 97.)

“Location”: To edit location information. (See page 98.)

“Phone #”: To edit telephone numbers. (See page 99.)

6. Touch “OK”.

• To change “Icon”

1. Touch “Icon” on the “Memory Point” screen.



2. Touch the desired icon.

Turn the page by touching “Page 1”, “Page 2” or “with Sound”.

ADVANCED FUNCTIONS

SOUND ICONS


When the vehicle approaches the memory point, the selected sound will be heard.

1. Touch “with Sound” on the “Change Icon” screen.



2. Touch the desired sound icon.

The next screen appears when “Bell (with Direction)” is touched.

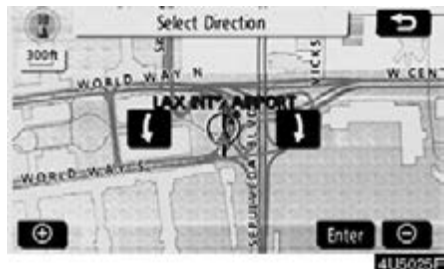

Touch either  or  to adjust the direction. Touch “Enter”.

The bell sounds only when the vehicle approaches this point in the direction that has been set.

● To change “Quick Access”

It is possible to change attributes of the quick access points. Memory points with a set attribute can be used as a “Quick access” or “Home” touch-screen button. (See “ — Destination search by Home” on page 44 and “ — Destination search by Quick access” on page 44.)

1. Touch “Quick Access” on the “Memory Point” screen.



2. Touch the desired attribute.

It is possible to replace a registered attribute.



3. To replace the attribute, touch “Yes”. To return to the previous screen, touch “No” or .

INFORMATION

One “Home” and five “Quick access” can be set.

DELETING “Quick Access”



1. Touch “Del.”.



2. To delete an attribute, touch “Yes”. To return to the previous screen, touch “No” or .

• To change “Name”

1. Touch “Name” on the “Memory Point” screen.



2. Enter the name using the alphanumeric keys.

Up to 24 letters can be entered.


3. Touch “OK”.

The previous screen will be displayed.

ADVANCED FUNCTIONS

DISPLAYING MEMORY POINT NAMES

The name of a memory point that may be displayed on the map can be set.

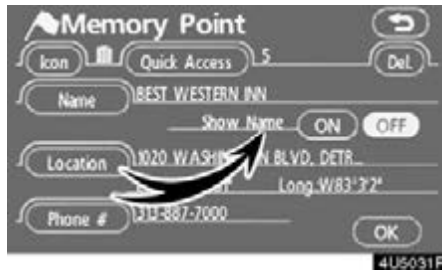

To show the name, touch "ON" on the "Memory Point" screen. To not show it, touch "OFF".

● To change "Location"

1. Touch "Location" on the "Memory Point" screen.



2. Touch the eight directional touch-screen button to move the cursor  to the desired point on the map.

3. Touch "Enter".

The previous screen will be displayed.

- To change “Phone #” (telephone number)

1. Touch “Phone #” on the “Memory Point” screen.



2. Enter the number using numeral keys.

3. Touch “OK”.


The previous screen will be displayed.

— Deleting memory points

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete”.

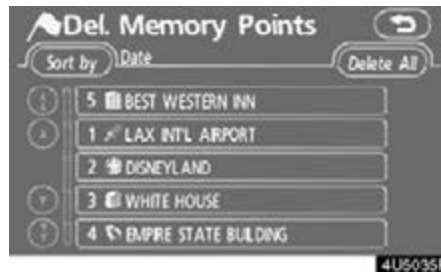

4. Touch the touch-screen button to be deleted.

“Delete All”: To delete all memory points in the system.

5. To delete the memory point, touch “Yes”. To cancel the deletion, touch “No”.

— Registering home

If home has been registered, that information can be recalled by using the “Home” touch-screen button on the “Destination” screen. (See “ — Destination search by Home” on page 44.)

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.




3. Touch “Register”.



4. Enter the location in the same way as for a destination search. (See “Destination search” on page 41.)

When registration of home is completed, the “Memory Point” screen will be displayed.

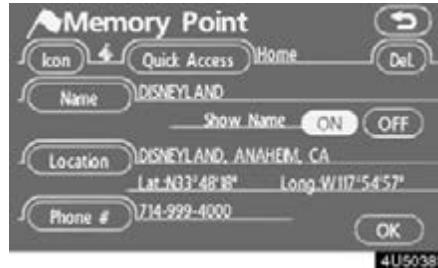

5. Touch “OK”.

To edit registered information, see “ — Editing memory points” on page 94.

— Deleting home

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete”.
4. To delete home, touch “Yes”. To cancel the deletion, touch “No”.

— Registering area to avoid

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Register”.



4. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “Destination search” on page 41.)



5. Set the cursor in the center of the area to avoid, and touch “Enter”.



6. Touch either  or  to change the size of the area to be avoided.
7. Touch "OK".

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid. If there are 10 locations already registered, the following message will be displayed: "Unable to register additional points. Perform operation again after deleting unnecessary points."


— Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the "MENU" button.
2. Touch "My Places" on the "Menu" screen.



3. Touch "Edit".

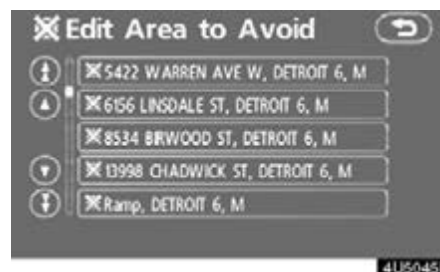

4. Touch the desired area button.

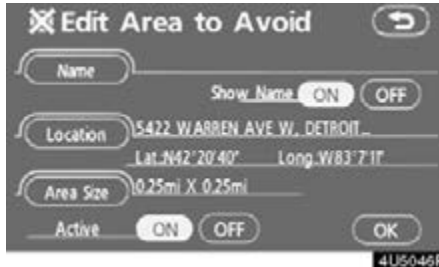

5. Touch the touch-screen button to be edited.

“Name”: To edit the name of the area to avoid. The names can be displayed on the map. (See page 103.)

“Location”: To edit area location. (See page 104.)

“Area Size”: To edit area size. (See page 105.)

“Active”: To turn on or off the area to avoid feature. To turn on the feature touch **“ON”** on the “Edit Area to Avoid” screen. To turn off the feature touch **“OFF”** on the “Edit Area to Avoid” screen.

6. Touch “OK”.

● To change “Name”

1. Touch “Name” on the “Edit Area to Avoid” screen.



2. Enter the name using alphanumeric keys.

Up to 24 letters can be entered.


3. Touch “OK”.

The previous screen will be displayed.

ADVANCED FUNCTIONS

DISPLAYING NAMES OF AREAS TO BE AVOIDED

The name of an area to be avoided that may be displayed on the map can be set.

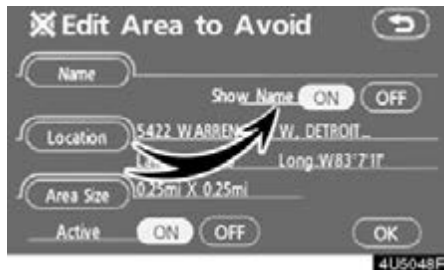

To show the name, touch “ON” on the “Edit Area to Avoid” screen. To not show it, touch “OFF”.

- To change “Location”

1. Touch “Location” on the “Edit Area to Avoid” screen.



2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch “Enter”.

The previous screen will be displayed.

- To change “Area Size”

1. Touch “Area Size” on the “Edit Area to Avoid” screen.



2. Touch either  or  to change the size of the area to be avoided.

3. Touch “OK”.

The previous screen will be displayed.

— Deleting area to avoid

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete”.



4. Touch the touch-screen button to be deleted.

“Delete All”: To delete all registered areas to avoid in the system.

5. To delete the area, touch “Yes”. To cancel the deletion, touch “No”.

— Deleting previous points

The previous destination can be deleted.

1. Push the “MENU” button.
2. Touch “My Places” on the “Menu” screen.



3. Touch “Delete Previous Points”.



4. Touch the touch-screen button you want to delete.


“Delete All”: To delete all previous points in the system.



5. To delete the point, touch “Yes”. To cancel the deletion, touch “No”.

Setup

Setting the items shown on the “Setup” screen can be done. (See page 87.)

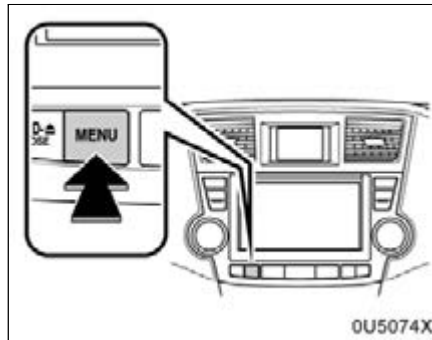

1. Push the “MENU” button.



2. Touch “Setup”.



3. Touch the items to be set.

4. Touch “OK”.

The previous screen will be displayed.


INFORMATION

To reset all setup items, touch “Default”.

- **Distance unit**

Distance unit can be changed.

1. Push the "MENU" button.
2. Touch "Setup" on the "Menu" screen.

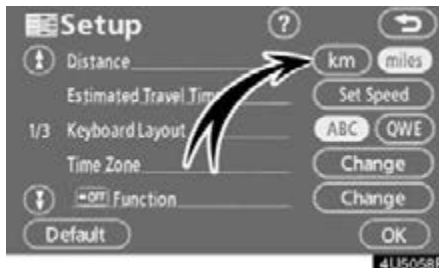

3. Touch "km" or "miles" of "Distance" to choose the distance unit.

The selected button is highlighted.

4. Touch "OK".


INFORMATION

This function is available only in English or Spanish. To switch language, see "Select language" on page 183.

- **Estimated travel time**

The speed that is used for the calculation of the estimated travel time and the estimated arrival time can be set.

1. Push the "MENU" button.
2. Touch "Setup" on the "Menu" screen.

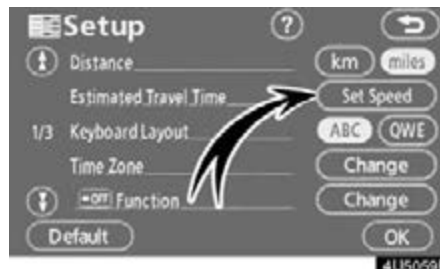

3. Touch "Set Speed" of the "Estimated Travel Time".



4. Touch  or  to set the average vehicle speeds for "Residential", "Main street", and "Freeway".

To set the default speeds, touch "Default".

5. After setting of the desired speeds is completed, touch "OK".


INFORMATION

- *The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.*
- *The time shown on the screen may vary greatly depending on progress along the route, which may be affected by road conditions such as traffic jams, and construction work.*
- *It is possible to display up to 99 hours 59 minutes.*

• Input key layout

Key layout can be changed.

1. Push the "MENU" button.
2. Touch "Setup" on the "Menu" screen.

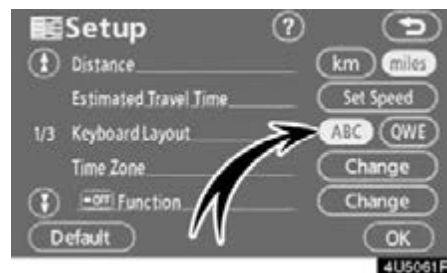

3. Touch "ABC" or "QWE" of "Keyboard Layout" to choose the Input key layout.

LAYOUT TYPE



► “ABC” type



► “QWE” type


The selected button is highlighted.

4. Touch “OK”.

● Time zone

Time zone can be changed.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

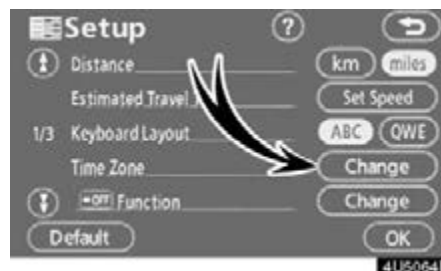

3. Touch “Change” of “Time Zone”.

The “Adjust Time Zone” screen will be displayed on the display.



4. Touch the desired time zone.

The selected button is highlighted.

“Daylight Saving Time”: Daylight saving time can be set or cancelled.

To set daylight saving time, touch “ON”, and to cancel it, touch “OFF”.


5. Touch “OK”.

ADVANCED FUNCTIONS

- Screen layout function (Function)

Each touch-screen button and current street name on the map screen can be displayed or hidden.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

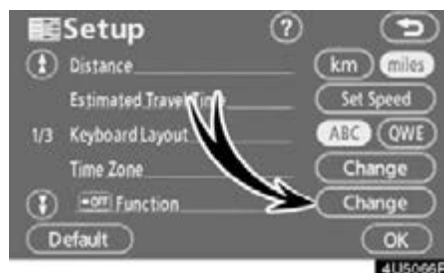

3. Touch “Change” of “ Function”.



4. Touch the touch-screen button to be turned off. The button becomes dimmed.

To set the default, touch “Default”.


5. Touch “OK”.

- POI category change (Display POI Icons)

Select from among the 6 icons displayed on the “Display POI Icons” top screen, so that setting of the icons to be displayed on the map screen can be done easily.

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  to display page 2 of the “Setup” screen.

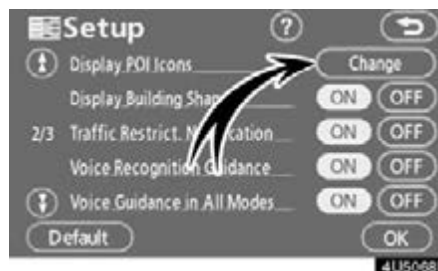

3. Touch “Change” of “Display POI Icons”.



4. Touch the category button to be changed.



5. Touch the category button to be displayed on the “Display POI Icons” top screen.

6. Touch “OK”.

● Display of building shape

When the “Display Building Shapes” feature is turned on, the system will display the building shape on the map screen using a scale of 150 feet (50 m) to 300 feet (100 m).

To turn the “Display Building Shapes” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch  to display page 2 of the “Setup” screen.



3. Touch “ON” of “Display Building Shapes”.

The selected button is highlighted.

4. Touch “OK”.

ADVANCED FUNCTIONS

- **Notifying traffic restriction**

When the “Traffic Restrict. Notification” feature is turned on, the system notifies you of traffic or seasonal restrictions.

To turn the “Traffic Restrict. Notification” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Traffic Restrict. Notification”.

The selected button is highlighted.

4. Touch “OK”.

- **Voice recognition guidance**

When the “Voice Recognition Guidance” feature is turned on, the voice recognition guidance can be heard automatically.

To turn the “Voice Recognition Guidance” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Voice Recognition Guidance”.

The selected button is highlighted.

4. Touch “OK”.

- **Voice guidance in all modes**

When the “Voice Guidance in All Modes” feature is turned on, the voice guidance in all modes can be heard.

When the “Voice Guidance in All Modes” feature is turned off, voice guidance cannot be heard when using the audio/video system.

To turn the “Voice Guidance in All Modes” on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ to display page 2 of the “Setup” screen.



3. Touch “ON” of “Voice Guidance in All Modes”.

The selected button is highlighted.

4. Touch “OK”.

- **Auto voice guidance**

When the “Auto Voice Guidance” feature is turned on, the voice guidance can be heard automatically.

When the “Auto Voice Guidance” feature is turned off, the voice guidance can be heard only if the “MAP/VOICE” button is pushed.

To turn the “Auto Voice Guidance” mode on:

1. Push the “MENU” button.
2. Touch “Setup” on the “Menu” screen.

Then touch ⓘ twice to display page 3 of the “Setup” screen.



3. Touch “ON” of “Auto Voice Guidance”.

The selected button is highlighted.

4. Touch “OK”.

ADVANCED FUNCTIONS

- **Pop-up message**

When the "Pop-up Message" is turned on, the Pop-up message will be displayed.

To turn the "Pop-up Message" on:

1. Push the "MENU" button.
2. Touch "Setup" on the "Menu" screen.

Then touch ⓘ twice to display page 3 of the "Setup" screen.




3. Touch "ON" of "Pop-up Message".

The selected button is highlighted.

4. Touch "OK".

When the "Pop-up Message" is turned off, following messages are not displayed.

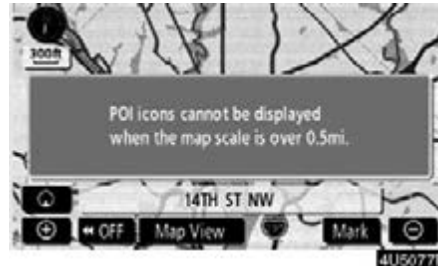

This message appears when the system is in the POI mode and the map scale is over 0.5 mile (800 m) or greater.



The message appears when the map is switched to the dual map screen mode.

- **Current position/tire change calibration**


The current vehicle position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

1. Push the "MENU" button.
2. Touch "Setup" on the "Menu" screen.

Then touch  twice to display page 3 of the "Setup" screen.




3. Touch "Adjust" of "Calibration".

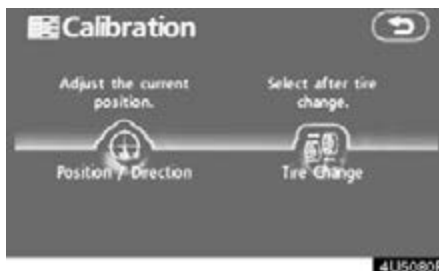

4. Touch the desired touch-screen button.

POSITION/DIRECTION CALIBRATION

When driving, the current vehicle position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, you can manually adjust the current vehicle position mark.

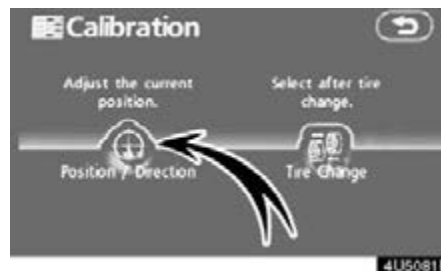

1. Touch "Position/Direction".



2. Touch the scroll arrows to move the cursor  to your desired location.
3. Touch "Enter".

INFORMATION

For additional information on the accuracy of a current vehicle position, see "Limitations of the navigation system" on page 256.

ADVANCED FUNCTIONS




4. Touch either  or  to adjust the direction of the current vehicle position mark.

5. Touch “Enter”.

The map screen will be displayed.

TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust the mis-calculation caused by the circumference difference between the old and new tires. If this procedure is not performed when tires are replaced, the current vehicle position mark may be incorrectly displayed.

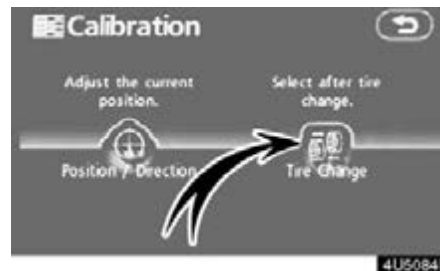

To perform a distance calibration procedure, touch “Tire Change” on the “Calibration” screen.

The message appears and the quick distance calibration is automatically started. A few seconds later, a map screen will be displayed.

SECTION 5


OTHER FUNCTIONS

- **Maintenance information** 118
 - Maintenance information setting 118
 - Dealer setting 120
- **Calendar with memo** 122
 - Adding a memo 124
 - Editing a memo 125
 - Memo list 125
- Trip information 127
- Hands-free system (for cellular phone) 127
- Speech command system 174
- Help screen 177
- Screen adjustment 178
- Screen setting 180
- Beep setting 183
- Select language 183


OTHER FUNCTIONS

Maintenance information — — Maintenance information setting

When the Navigation System is turned on, the “Information” screen displays when it is time to replace a part or certain components. (See page 22.)

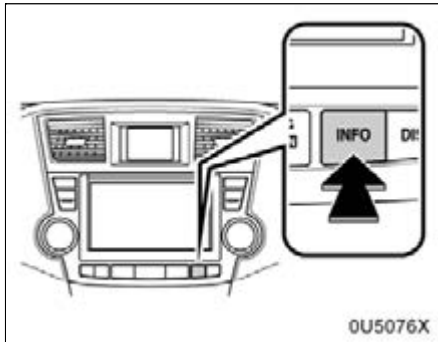

1. Push the “INFO” button.

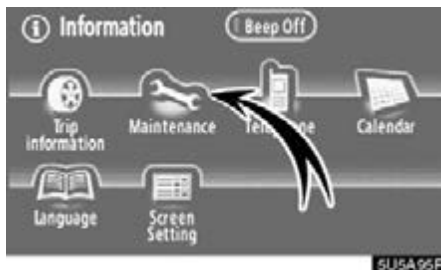

2. Touch “Maintenance”.



3. Touch the desired touch-screen button.

For details of each touch-screen button, see “INFORMATION ITEMS” on page 119.

“Delete All”: To cancel all conditions which have been inputted.

“Reset All”: To reset the item which has satisfied a condition.

“Set Dealer”: To register or edit dealer information. (See “ — Dealer setting” on page 120.)

If “ON” is selected, the system gives maintenance information with the “Information” screen when the system is turned on. (See page 22.)

If “OFF” is selected, the “Information” screen is disabled.

When the vehicle needs to be serviced, the touch-screen button color will change to orange.

INFORMATION ITEMS

"ENGINE OIL": Replace engine oil

"OIL FILTER": Replace engine oil filter

"ROTATION": Rotate tires

"TIRES": Replace tires

"BATTERY": Replace battery

"BRAKE PAD": Replace brake linings

"WIPERS": Replace wiper blades

"LLC": Replace engine coolant

"BRAKE OIL": Replace brake fluid

"ATF": Replace ATF

"SERVICE": Scheduled maintenance

"AIR FILTER": Replace air filter

"PERSONAL": New information items can be created separately from provided ones

**4. Input the conditions.**

Notice of "Date": The next maintenance date can be input.

Notice of "Distance": The driving distance until the next maintenance check can be input.

"Delete": To cancel the date and distance conditions.

"Reset": To reset the date and distance conditions.

5. Touch "OK".

The screen then returns to the "Maintenance" screen.

INFORMATION

- *For scheduled maintenance information, please refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".*
- *Depending on driving or road conditions, the actual date and distance may differ from the stored date and distance in the system.*

OTHER FUNCTIONS

— Dealer setting

It is possible to register a dealer in the system. With dealer information registered, route guidance to the dealer is available.

1. Push the “INFO” button.
2. Touch “Maintenance” on the “Information” screen.
3. Touch “Set Dealer” on the “Maintenance” screen.



4. If the dealer has not been registered, enter the location of the dealer in the same way as for a destination search. (See “Destination search” on page 41.)

When “Set Dealer” registration is finished, the “Edit Dealer” screen will be displayed.



5. Touch the touch-screen button to be edited.

“**Dealer**”: To enter the name of a dealer. (See page 121.)

“**Contact**”: To enter the name of a dealer member. (See page 121.)

“**Location**”: To set a location. (See page 121.)

“**Phone #**”: To set a telephone number. (See page 122.)

“**Delete Dealer**”: To delete the dealer information displayed on the screen.

“**Enter**”: To set the displayed dealer as a destination. (See “Starting route guidance” on page 60.)

- To edit “Dealer” or “Contact”

1. Touch “Dealer” or “Contact” on the “Edit Dealer” screen.



2. Enter the name using the alphanumeric keys.


Up to 24 letters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

- To edit “Location”

1. Touch “Location” on the “Edit Dealer” screen.

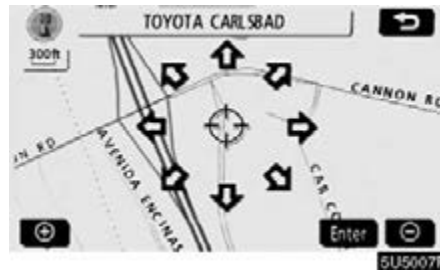

2. Touch the eight directional touch-screen button to move the cursor to the desired point on the map.

3. Touch “Enter”.

The previous screen will be displayed.

OTHER FUNCTIONS

- To edit “Phone #” (telephone number)

1. Touch “Phone #” on the “Edit Dealer” screen.




2. Enter the number using numeral keys.

3. Touch “OK”.


The previous screen will be displayed.

Calendar with memo —

It is possible to enter memos for particular dates on the calendar. The system informs you of the memo entry when the system is turned on. (See page 23.) Memos can also be used for route guidance if the memo has been registered with location information.

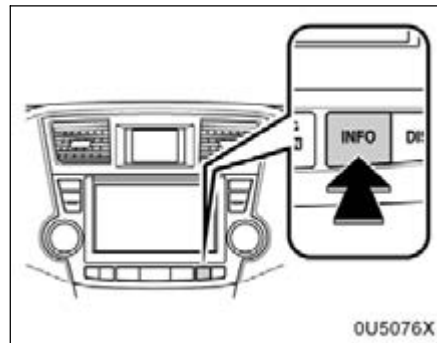

1. Push the “INFO” button.

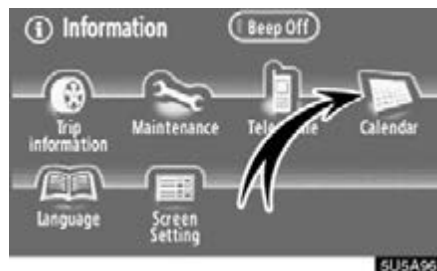

2. Touch “Calendar”.



On this screen, the current date is highlighted in yellow.

▲M or **▼M**: To change month.

▲Y or **▼Y**: To change year.

“Today”: To display the current month calendar (if another month will be displayed).

“List”: To display the list of registered memos. (See “ — Memo list” on page 125.)

Touching a date button on the “Calendar” screen displays the “Memo” screen.



Memos can be edited by touching the list button. (See “ — Editing a memo” on page 125.)

“Add Memo”: To add a memo. (See “ — Adding a memo” on page 124.)

“Mark ○”: To change the color of the mark displayed next to the date. To default the mark color, touch **“Delete”** on the “Mark color” screen.

“Date ○”: To change the color of the date. To default the date color, touch **“Delete”** on the “Date color” screen.

“Prev. Day”: To go to the “Memo” screen of the previous date.


“Today”: To go to the “Memo” screen for the current day.

“Next Day”: To go to the “Memo” screen of the next date.

— Adding a memo

If a memo is added, the system informs of the memo entry when the system is started on the memo date. (See page 23.)

1. Push the “INFO” button.
2. Touch “Calendar” on the “Information” screen.
3. Touch the date you want to add a memo on the “Calendar” screen.

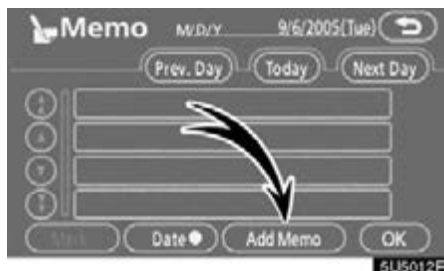

4. Touch “Add Memo”.

Up to 100 memos can be added.



5. Touch “Memo”.



6. Enter text using the keys.

Up to 24 letters can be entered.

After entering the text, touch “OK” at the bottom right of the screen.



7. When registering information on the memo, touch “Location”.

A screen similar to the destination search screen appears. Search the same way as searching a destination. (See “Destination search” on page 41.)

— Editing a memo

The registered memo can be edited.

1. Push the “INFO” button.
2. Touch “Calendar” on the “Information” screen.
3. Touch the day you want to edit a memo on the “Calendar” screen.



4. Touch the memo to be edited.



5. Touch the item to be edited.

“Memo”: To edit a memo. (See “ — Adding a memo” on page 124.)

“Location”: To change a registered location. (See “ — Adding a memo” on page 124.)


“Enter Ⓞ”: To set the registered location as a destination. (See “Starting route guidance” on page 60.)

“Delete”: To delete the memo.

— Memo list

It is possible to display a memo list by setting a condition.

1. Push the “INFO” button.
2. Touch “Calendar” on the “Information” screen.
3. Touch “List” on the “Calendar” screen.

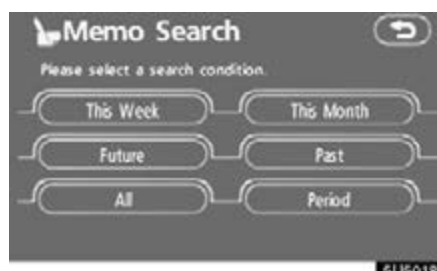

4. Touch the desired search condition to list the memos.

“This Week”: To display the list of memos for the current week.

“This Month”: To display the list of memos for the current month.

“Future”: To display a list of future memos.

“Past”: To display the list of past memos.

“All”: To display the list of all memos.

“Period”: To display the list of memos for a specified period. (See page 126.)

OTHER FUNCTIONS



5. To delete and/or edit the memo, touch the desired memo button.


“Delete All”: To delete all the displayed memos.

A message will be displayed.

6. To delete, touch “Yes”. To cancel the deletion, touch “No”.

- To display memos for a specified period of time

1. Touch “Period” on the “Memo Search” screen.

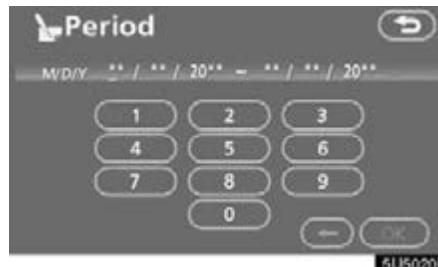

2. Enter the period using the numeral keys.

The period from January 1, 2005 through December 31, 2024 can be set for searching.

3. After setting the period, touch “OK”.

The “Memo List” screen will be displayed.

Trip information

Trip information such as shown below can be displayed on the screen. For details, see Section 1-1 of the vehicle owner's manual.

- Energy monitor
- Fuel consumption
- Regenerated energy
- Cruising range

Hands-free system (for cellular phone)

Hands-free system allows you to make or receive a call without taking your hands off the steering wheel by connecting your cellular phone.

This system supports Bluetooth®. Bluetooth® is a wireless data system by which you can call without your cellular phone being connected with a cable or placed on a cradle.

If your cellular phone does not support Bluetooth®, this system can not function.



CAUTION

While you are driving, do not use a cellular phone or connect the Bluetooth® phone.

NOTICE


Do not leave your cellular phone in the car. The temperature indoor may be high and damage the phone.

INFORMATION


In the following conditions, the system may not function.

- *The cellular phone is turned OFF.*
- *The current position is outside the communication area.*
- *The cellular phone is not connected.*
- *The cellular phone has a low battery.*

OTHER FUNCTIONS

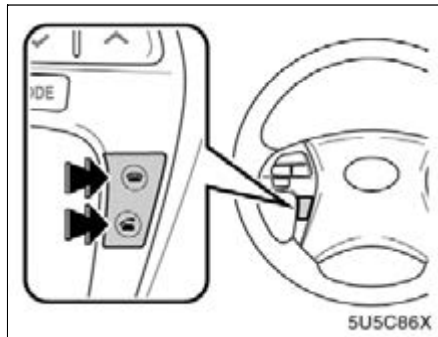

By pushing the telephone switch above, you can receive a call or hang up without taking your hands off the steering wheel.

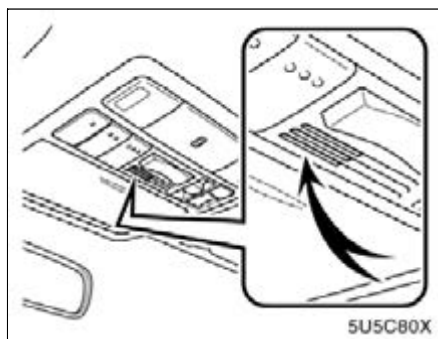

►Microphone

You can use the microphone above when talking on the phone.

The other party's voice outputs from the driver's speaker. When the received calls or received voice outputs, the audio from the Audio/video system or voice guidance from the Navigation system will be muted.

INFORMATION

- *Talk alternately with the other party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)*
- *Keep the volume of receiving voice down. Otherwise, echo is coming up. When you talk on the phone, speak clearly towards the microphone.*
- *In the following situations, your voice may not reach the other party.*
 - *Driving on unpaved road. (Too much road noise.)*
 - *Driving at high speed.*
 - *Windows are open.*
 - *If air-conditioning vents are turned towards the microphone.*
 - *The sound of the air-conditioning fan is loud.*



- 1** Indicates the condition of Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of voice quality.



: no connection to Bluetooth®.

- 2** Indicates the amount of battery charge left.



Empty



Full

It is not displayed while the Bluetooth® is connecting or the phone book data is being transferred.

The amount left does not always correspond with the one of your cellular phone. This system doesn't have a charging function.

- 3** Indicates the receiving area.

“Rm” is displayed when receiving in Roaming area.

“Hm” is displayed when receiving in Home area.

- 4** Indicates the level of reception.



Too bad ← → Excellent

The level of reception does not always correspond with the one of your cellular phone.

INFORMATION

This system supports the following service.

- HFP (Hands Free Profile) Ver. 1.0
- OPP (Object Push Profile) Ver. 1.1

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP service individually.

OTHER FUNCTIONS

An antenna for the Bluetooth® connection is built in the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or is covered with metal materials.

Leave the Bluetooth® phone on the place where “Blue” indication is displayed.



Bluetooth is a trademark owned by Bluetooth SIG, Inc.

When you sell your car:

A lot of personal data is registered when you use the Hands-free system. When you sell your car, initialize the system so your personal information is no longer recorded. (See “(d) Delete personal data” on page 182.)

If you initialize it, the former state will never come back again. Be careful when initializing data, because once the data is initialized it can not be recovered.

You can initialize the following data in the system.

- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code

FCC ID: HYQDNNS016
IC ID: 1551A-DNNS016
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Radio Frequency Radiation Exposure


This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.


OTHER FUNCTIONS

(a) Enter a Bluetooth® phone

To use the hands-free system, you need to enter your phone into the system. Once you have registered it, you can make a hands-free call.

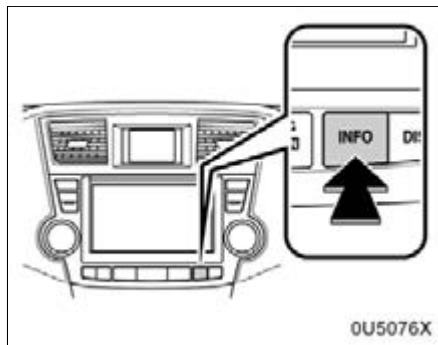

1. Push the “INFO” button.

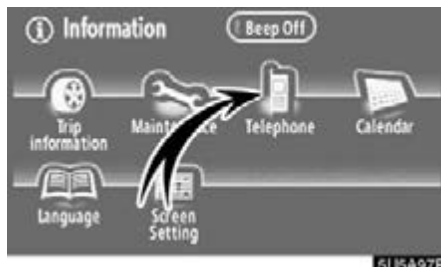

2. Touch “Telephone” to display “Telephone” screen.

You can also push the  switch of the steering wheel to display this screen when the vehicle is stopped.



3. Touch “Settings” to display “Settings” screen.



4. Touch “Bluetooth*” to display the “Bluetooth* Settings” screen.



5. Touch “Register” to connect your cellular phone to the system.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



6. When this screen is displayed, input the Passkey displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, touch “Cancel”.



7. When the connection is completed, this screen is displayed.

You will not need to reenter the passkey when this phone is used in the future.



When this screen is displayed, follow the guidance on the screen to try again.

- Connecting a Bluetooth® phone
 - (i) Automatically



When you register your phone, auto connection will be turned on. Always set it to this mode and leave the Bluetooth® phone in a condition where connection can be established.

Each time you touch “Auto Connect”, auto connection will be switched on or off.



When the “POWER” switch is in ACCESSORY or ON mode, the selected Bluetooth® phone will be automatically connected and the connection result is displayed.

This screen appears when the Bluetooth® phone is first connected after the “POWER” switch is in ACCESSORY or ON mode.

OTHER FUNCTIONS

(ii) Manually

When the auto connection fails or is turned off, you have to connect Bluetooth® manually.



Touch “Connect” after enabling the Bluetooth® connection on the phone.



When the connection is completed, this screen is displayed.

Now you can use the Bluetooth® phone.

- Reconnecting the Bluetooth® phone

If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the “POWER” switch is in ACCESSORY or ON mode, the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone OFF, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

(b) Call on the Bluetooth® phone

After you enter the Bluetooth® phone, you can call by using hands-free system. You can call using the 7 methods described below.

(i) By dial

You can call by inputting the telephone number.

This cannot be operated while driving.



Touch the desired key to input the telephone number.

Each time you touch ◀, an inputted digit is deleted.

When you touch ☎, the number you called last is inputted.

Touch 📶 or push the 📶 switch of the steering wheel.

(ii) By phone book

You can call by phone book data which is transferred from your cellular phone.


The system has one phone book. You can register up to 1000 numbers.

This cannot be operated while driving.



Touch the desired key to input the telephone number.

1. Touch "Phone Book" to display "Phone Book" screen.

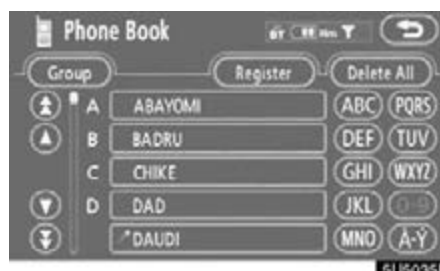

2. Select the desired number from the list.



Touch 📶 or push the 📶 switch of the steering wheel.

OTHER FUNCTIONS

(iii) By dialed numbers


You can call by dialed number. The system memorizes up to 5 dialed numbers. If it is more than 5, the oldest number is deleted.

This cannot be operated while driving.



Touch  or push the  switch of the steering wheel.

1. Touch “Call Log” to display “Outgoing Calls” screen.

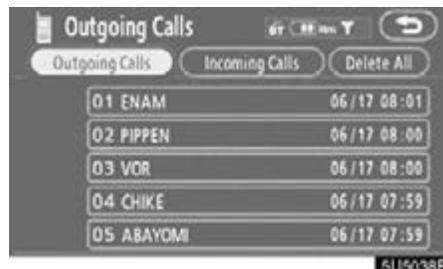

- When you call by phone book, the name (if registered) is displayed.
- When you call the same number continuously, only the newest number is registered.

2. Select the desired number from the list.


(iv) By received calls

You can call by received calls. When a call is received, the system memorizes up to 5 numbers. If it is more than 5, the oldest number is deleted.

This cannot be operated while driving.



1. Touch "Call Log" to display "Outgoing Call" screen.

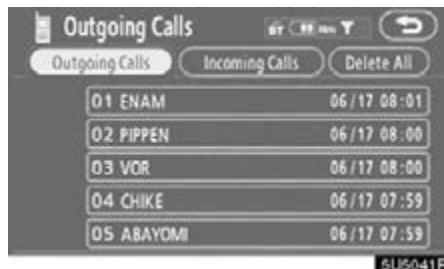

2. Touch "Incoming Calls" to display "Incoming Calls" screen.



- When a telephone number registered in the phone book is received, the name and the number are displayed.
- Received calls which you did not answer are also memorized in the system and "Abs." is displayed on the left side of the number.
- Received calls which you refused are also memorized in the system and "ⓧ" is displayed on the left side of the number.
- Unnoticed telephone number such as a public telephone is not memorized in the system.

3. Select the desired number from the list.



Touch  or push the  switch of the steering wheel.

- An international phone call may not be made depending on the cellular phone which you have.

OTHER FUNCTIONS

(v) By speed dial

You can call by registered telephone number which you selected from a phone book, dialed numbers and received calls. (See page 144 for registering the speed dial.)



1. Touch “Speed Dial” to display “Speed Dial” screen.



2. Touch the desired number to call. You can change the page by touching “Speed Dial 2” or “Speed Dial 3”.

When you push the telephone button while driving, the screen above appears. Touch the desired name to call. (The telephone number is not displayed.)

(vi) By voice recognition




You can call by giving a command. (For the operation and command of voice recognition, see “Speech command system” on page 174 and “Help screen” on page 177.)

- Dialing by name

You can call by giving a voice tag registered in the phone book. For setting the voice recognition, see “Setting the voice recognition” on page 157.

Example: Call DAD

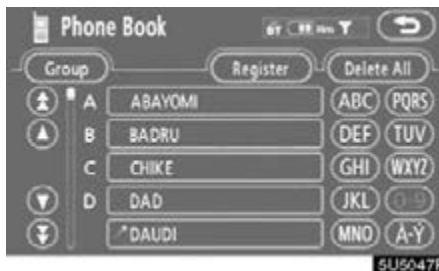

You: Push the talk switch.
 System: “After the beep, please say the name.”
 You: “DAD”
 System: “DAD chosen, when ready, please briefly push the talk switch or push the off-hook switch to dial.”
 You: Push the talk switch.
 System: “After the beep, please say “Dial”.”
 You: “Dial.”
 System: “Dialing the name.”
 Now you are calling DAD.



“Next” is displayed when multiple entries are found for a searched name.

Up to 6 entries can be displayed including the first searched one.

Do the following to change the entry to the next one.

- Touch “Next”
- Push the talk switch to say “Next Candidate”.

Calling without the voice recognition

After the entry number is displayed, you can also call by pushing the telephone switch or touching “Dial”.

Cancelling the voice recognition

The voice recognition will be cancelled when you do the following.

- Keep on pushing the talk switch
- Push the  switch of the steering wheel.
- Touch “Cancel”. (Except for recognizing the command)
- Say “Cancel”

OTHER FUNCTIONS

- **Dialing by phone number**

You can call by giving a desired number.



You: Push the talk switch.
 System: "After the beep, please say the number."
 You: "812387"
 System: "When ready, please briefly push the talk switch or push the off-hook switch to dial."
 You: Push the talk switch.
 System: "After the beep, please continue to add numbers or say "Dial"."
 You: "Dial."
 System: "Dialing the number."
 Now you are calling 812387.

- **Sending a tone**

You can send a tone by giving a desired number.



You: Push the talk switch.
 System: "Say numbers, pound, or star."
 You: "1234."
 System: "1234." "Push the talk switch."
 You: Push the talk switch.
 System: "Send? Say Yes or No."
 You: "Yes."
 System: "Sending."
 Now you are sending the tone.

(vii) By POI call

You can call by touching  when it is displayed on the screen from Navigation system. (See page 31 for details.)

(c) Receive on the Bluetooth® phone

When a call is received, this screen is displayed with a sound. Touch  or push the  switch of the steering wheel to talk on the phone.

To hang up the phone:

Touch  or push the  switch of the steering wheel again.

To refuse to receive the call:

Touch  and hold it.

To adjust the volume of received call:

Touch “-” or “+” or use the volume switch of the steering wheel.

On the international phone call, the other party's name may not be displayed correctly depending on the cellular phone which you have.

OTHER FUNCTIONS

(d) Talk on the Bluetooth® phone



While you are talking on the phone, this screen is displayed. You can do the operation below on the screen.

To adjust the volume of the other party's voice:

Touch “-” or “+” or use the volume switch of the steering wheel.

To hang up the phone:

Touch  or push the  switch of the steering wheel.

To mute your voice:

Touch “**Mute**”.

To input a Key:

Touch “**0-9**”.

To transfer the call

Touch “**Transfer Call**”.

You cannot change from Hands-free call to cellular phone call while driving.

When you change from cellular phone call to Hands-free call, the Hands-free screen will be displayed and you can operate it on the screen.

Transferring method and behavior are different depending on the cellular phone which you have.

For the operation of the phone, see the manual that comes with your cellular phone.



Touch the desired number to input the key.

To hang up the phone:

Touch  or push the  switch of the steering wheel.

This cannot be operated while driving.



If the continuous tone signal is registered in a phone book, this screen appears. (If not registered, "Send" and "Exit" are not displayed.)

Confirm the number displayed on the screen and touch "Send". The number before marked sign will be sent.

When you touch "Exit", this function will be finished and normal tone screen appears.

To hang up the phone:

Touch  or push the  switch of the steering wheel.

The continuous tone signal is the marked sign (p or w) and the number following telephone number. (ex. 056133p0123w#1*)

You can do this operation when you want to operate an answering machine or use a telephone service in bank for example. You can register the phone number and the code number in the phone book.

- Sending a tone by the speed tone

You can send a tone by the speed tone. (For registering the speed tone, see "Registering the speed tone" on page 146.)



1. Touch "Speed Tone".



2. Touch the desired switch to send a tone.

OTHER FUNCTIONS

(e) Change the settings of the Bluetooth® phone



Touch “Settings” to display “Settings” screen.



You can change the settings of the phone.

(i) Registering the speed dial

You can register the desired telephone number from phone book, dialed numbers and received calls. Up to 17 speed dial numbers can be registered.


The 6th entry is the speed dial for redialing.




1. Touch “Speed Dial” to display the “Speed Dial Settings” screen.



2. Touch “Register” of “Speed Dial”.

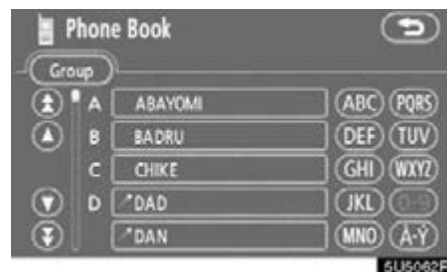

3. Select the data you want to register.

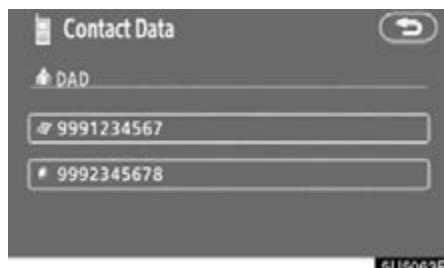

4. Touch the desired telephone number.



5. Touch the touch-screen button you want to register in.

The latest dialed number is registered in the 6th item (speed redial).



6. If you select a touch-screen button you registered before, this screen is displayed.

Touch "Yes" if you want to overwrite it.

- Deleting the speed dial individually
You can delete "01" – "17" of the speed dial individually.

If you delete them all at once, all of 17 numbers are deleted.



1. Touch "Delete" of "Speed Dial".



2. Touch the touch-screen button you want to delete.



3. Touch "Yes".

OTHER FUNCTIONS

- Deleting all of the speed dial



1. Touch "Delete All" of "Speed Dial".



2. Touch "Yes".

- (ii) Registering the speed tone

You can register the desired tone number. Up to 6 speed tone numbers can be registered.



1. Touch "Register" of "Speed Tone".



2. Use the software keyboard to input the name.



3. Input the number and touch "OK".



4. Touch the desired touch-screen button you want to register in.



5. If you select a touch-screen button you register before, this screen is displayed. Touch "Yes" if you want to overwrite it.

- Editing the speed tone
You can edit the speed tone.



1. Touch "Edit" of "Speed Tone".



2. Touch the touch-screen button you want to edit.



3. Use the software keyboard to input the name.

OTHER FUNCTIONS



4. Input the number and touch “OK”.

- Deleting the speed tone individually
You can delete “1” to “6” of the speed tone.

If you delete them all at once, all of 6 numbers are deleted.



1. Touch “Delete” of “Speed Tone”.



2. Touch the touch-screen button you want to delete.




3. Touch “Yes”.

• Deleting all the speed tone



1. Touch “Delete All” of “Speed Tone”.

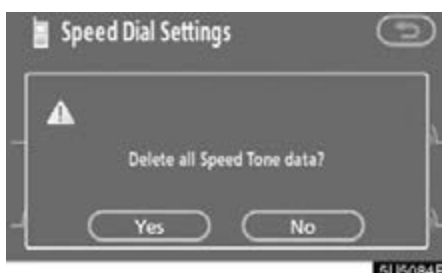


2. Touch “Yes”.

(iii) Setting the volume



1. Touch “Volume” to display the “Volume Settings” screen.

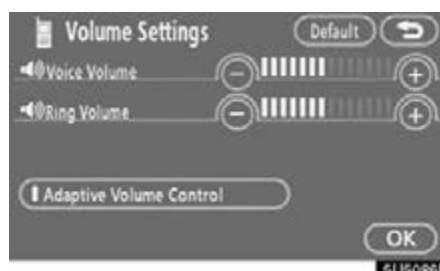

2. Touch “–” or “+” to adjust the “Voice Volume” or “Ring Volume”.

“Voice Volume” Adjusting the other party’s voice.

“Ring Volume” Adjusting the ring volume.

OTHER FUNCTIONS


- Automatic volume settings for high speed

You can set the volume one step up when the speed is over 80 km/h. (When it is under 70 km/h, previous volume is back.)

Each time you touch “Adaptive Volume Control”, you can switch on or off.

- Initializing the settings

You can initialize the settings.

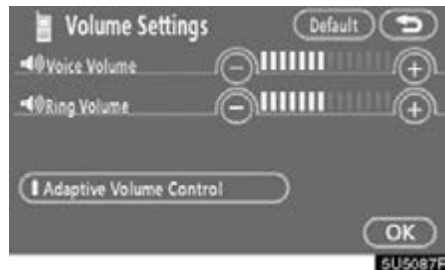

Touch “Default”.




Touch “Yes”.

(iv) Setting the screen




1. Touch "Screen" to display the "Screen Settings" screen.

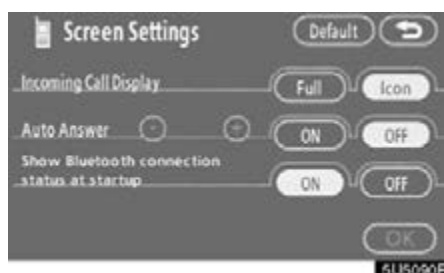

2. Do the detail settings of the screen and touch "OK".

- Receiving Call Display

You can select the method of the receiving call display.

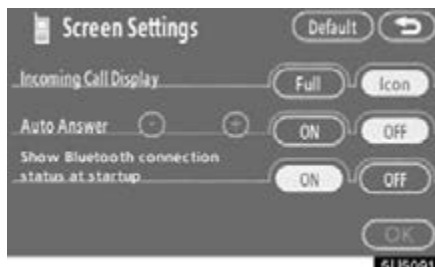

Touch "Full" or "Icon".

"Full mode"

..... When a call is received, the Hands-free screen is displayed and you can operate it on the screen.

"Icon mode"

..... The message is displayed on the upper side of the screen. You can only operate the steering switch.

OTHER FUNCTIONS

- Auto answer

When a call is received, the display automatically changes to the talking screen and you can start to talk on the phone (without touching any switch) after the preset time.




Touch "ON" of "Auto Answer" and "-" or "+" to adjust the waiting time of auto answer within 1 – 60 seconds.

- The Bluetooth® connection status at startup



When the "POWER" switch is in ACCESSORY or ON mode and the Bluetooth® is automatically connected, the connection check is displayed.

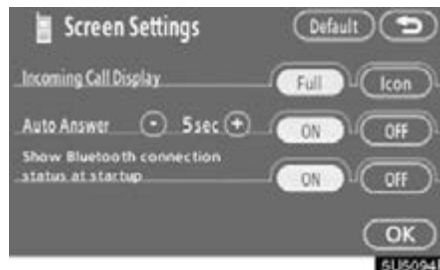


Touch "ON" or "OFF" of "Show Bluetooth* connection status at start up".


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- Initializing the settings

You can initialize the settings.

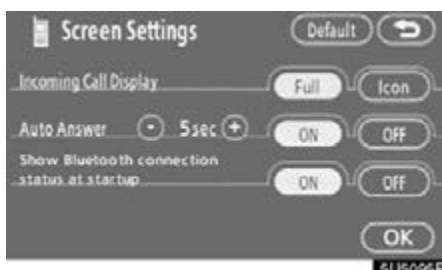

Touch "Default".

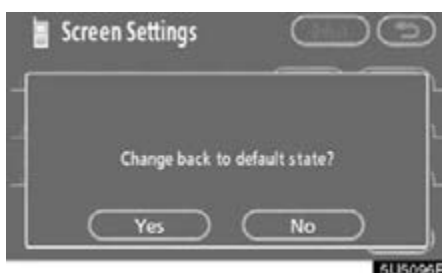

Touch "Yes".

- (v) Setting the phone book

You can register phone numbers in the phone book.



Touch "Phone Book" to display the "Phone Book Management" screen.



You can do the detail settings of phone book.

OTHER FUNCTIONS

- Transferring a telephone number

You can transfer the telephone numbers in your Bluetooth® phone to the system. Up to 1000 person's data (up to 2 numbers a person) can be registered in the phone book.

Transfer it while the engine is running.



1. Touch “Transfer Data” to display “Select Group” screen.



2. Select the group you want to transfer to.



3. Touch “Overwrite” or “Add To”.



4. Transfer the phone book data to the system using the Bluetooth® phone.

This screen appears while transferring. To cancel it, touch “Cancel”. If the transferring is interrupted on the way, the phone book data transferred until then can be memorized in the system.



5. When this screen is displayed, the transfer is completed.



When this screen is displayed, try the transfer operation again.

- Registering the phone book data

You can register the phone book data.



1. Touch “Register” of “Phone Book”.



2. Touch the desired touch-screen button to edit the phone book.



3. When you complete the edit, touch “OK”.

- Editing the name

When you don't input the name, the number is displayed.



1. Touch “Name”.



2. Use the software keyboard to input the name.

OTHER FUNCTIONS

- Editing the phone number

You can register the phone number in “TEL1” and “TEL2” separately. Up to 2 numbers a person can be registered.



1. Touch “TEL1” or “TEL2”.



2. Input the number and touch “OK”.



3. Select the desired icon.

- Selecting the group

You can set a group for a contact (for example: “Family”, “Friends”, “Office”...). It will then be easier for you to find this contact when needed, by using the group display.

You can select “No group” or “Group 01” to “Group 19”.

“No group” is displayed if you don’t set the group.



1. Touch “Group”.



2. Select the desired group.

- **Setting the voice recognition**

You can set the voice recognition. Up to 20 numbers can be registered for the voice recognition.



1. Touch "Voice Rec.".



2. Select the phone number and touch "REC" to record a voicetag.




3. Touch "PLAY" to play the voicetag.
If you want to delete it, touch "Delete" and "OK".

- **Adding the data to the phone book**

You can add data to the phone book.



1. Touch "Add to".

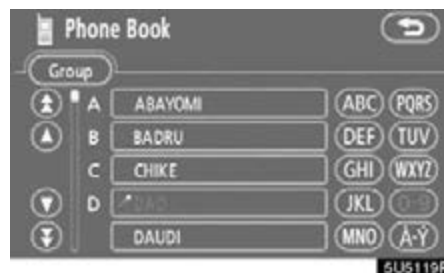

2. Select the data you want to add log data to.



3. Confirm the added data on the screen and touch "OK".

OTHER FUNCTIONS


- **Editing the data**

You can edit the registered data.



When you also touch “Edit” on this screen, you can edit it.

1. Touch “Edit”.

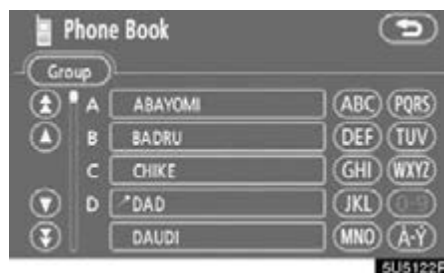

2. Select the data you want to edit.



3. Touch the desired touch-screen button.

When you edit the data, touch “OK”.


- Deleting the data

You can delete the data.

When you release your car, delete all your data on the system.



1. Touch "Delete" of "Phone Book".

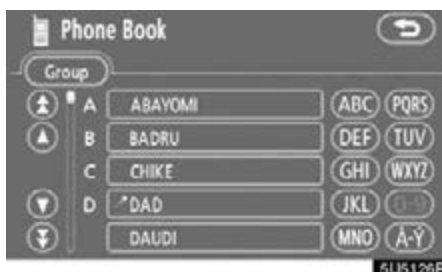

2. Touch the desired touch-screen button.




3. Touch "Yes".

You can also delete it in the following way.



1. Touch "Phone Book".

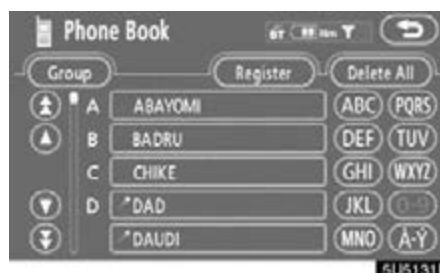

2. Select the desired data.




3. Touch "Delete".

OTHER FUNCTIONS



4. Touch "Yes".

- Deleting all the phone data

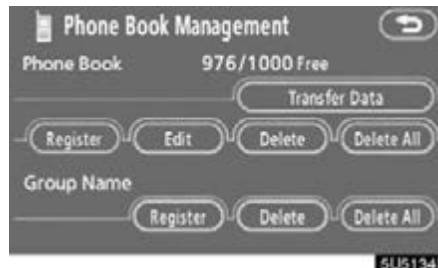

1. Touch "Delete All" of "Phone Book".



2. Select the deleting method.


"Group Data"

..... Deleting all the phone data in group.

"All Contact Data"

..... Deleting all the phone data.

3. When you select “Group Data”, the “Select Group” screen is displayed.

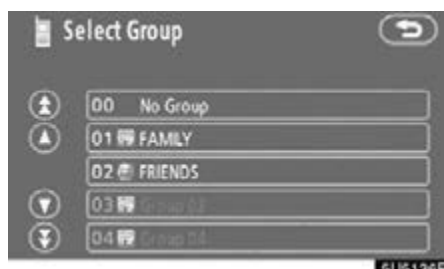


You can also delete it in the following way.



4. Select the desired group.



1. Touch “Phone Book”.

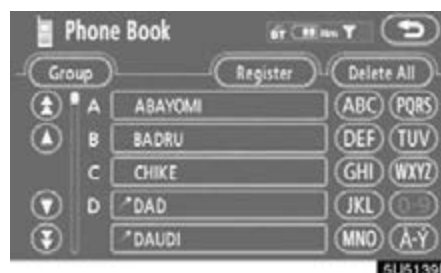

5. Touch “Yes”.

2. Touch “Delete All”.



3. Touch “Yes”.

OTHER FUNCTIONS

- Registering a group name

You can register 20 groups. “No Group”, “Group 01” – “Group 19” is registered by default.


You can change “Group 01” – “Group 19” into desired names.



1. Touch “Register” of “Group Name”.




2. Select the group you want to register.

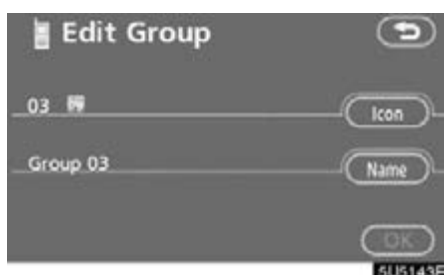


3. When you complete all the edit, touch “OK”.

- Selecting a group icon

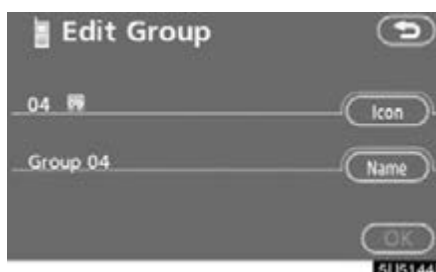

1. Touch “Icon”.

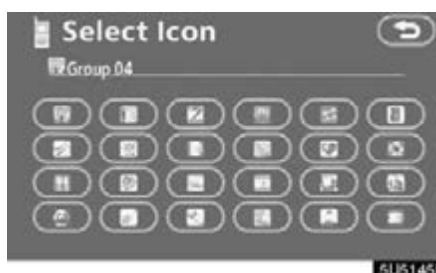

2. Select the desired icon.

- Editing a group name



1. Touch "Name".



2. Use the software keyboard to input the name.

- Deleting a group name

You can delete the group names individually or all at once. If you delete a group name, that group will return to the default setting. (excluding "No Group")



1. Touch "Delete" of "Group Name".



2. Select the group you want to delete the name of.




3. Touch "Yes".

OTHER FUNCTIONS

- Deleting all the group name



1. Touch “Delete All” of “Group Name”.

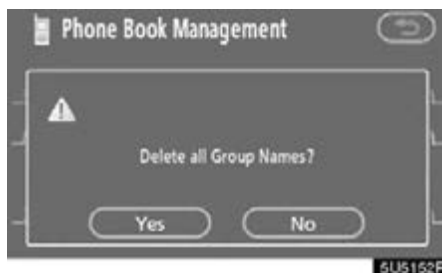

2. Touch “Yes”.

- Deleting the log data

You can delete the log data individually or all at once.

When you release your car, delete all the data on the system.


(a) Individually



1. Touch “Delete” on the “Log Data” screen.



2. Touch “Yes”.

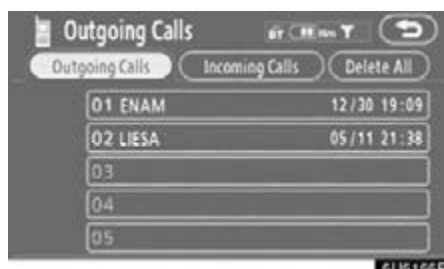(b) All at once

1. Touch "Delete All" on the "Outgoing Calls" or "Incoming Calls" screen.



2. Touch "Yes".

(vi) Setting the security

When you set the security, you can prevent people from using some functions of the Hands-free system. It is useful when you leave your car with the hotel or you don't want others to see the data you registered.

When you set or unlock the security, you have to input the security code. Be sure to change the default code when you use the security for the first time.

OTHER FUNCTIONS

- **Changing the security code**

The security code is 4 digits and the default is “0000”.


Change a new code that is hard for other people to know.

When you change the security code, don't forget the code. The dealers cannot unlock the security when you forget it.

If you forget the security code, initialize your personal data. When you initialize it, not only the phonebook data but also the memory points in the navigation system, etc. will be deleted. (See “● Initializing the security code” on page 168.)



1. Touch “Phone Book Lock”.

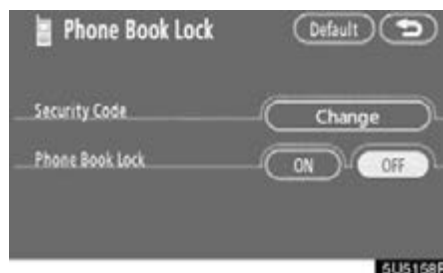

2. Touch “Change”.



3. Input the current code.

Each time you touch ◀, an inputted digit is deleted.



4. Input a new code.




5. Touch “Yes”.

- **Phone Book Lock**

When you set the phone book lock, you can have the following functions locked.

- Display of the phone book screen and transferring, registering, editing, deleting the phone book data.
- Display of speed dial screen, registering, deleting the speed dial and speed dialing.
- Display of the other party's name for calls being received or made.
- Display of dialed numbers screen and received calls screen, deleting dialed numbers and received numbers.
- Display of phone information screen.
- Changing the security code.

When you set this function, the speed dial screen is not displayed while you are driving.

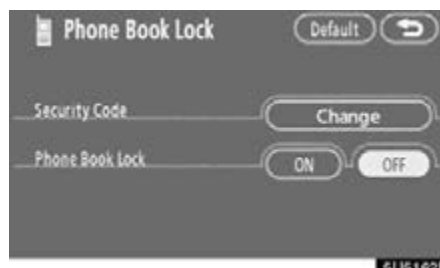


1. Touch "ON".



2. Input the security code and touch "OK".

OTHER FUNCTIONS

- Initializing the security code
You can initialize the settings.

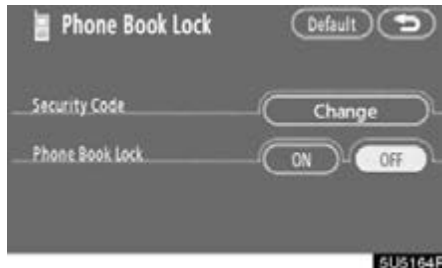

1. Touch "Default".



2. Input the security code and touch "OK".



3. Touch "Yes".

(f) Set a Bluetooth® phone

- Selecting a Bluetooth® phone

In case you register more than one Bluetooth® phone, you need to choose a favorite one.



1. Touch "Settings" to display "Settings" screen.



2. Touch "Select Telephone" to display "Select Telephone" screen.

You can select the Bluetooth® phone from a maximum of 6 numbers.

“Empty” is displayed when you have not registered a Bluetooth® phone yet.

Bluetooth® mark is displayed when you choose the phone.



When another Bluetooth® phone is trying to connect, this screen is displayed.



Touch “Yes” or “No”.

Although you can register up to 6 Bluetooth® phones in the system, only one Bluetooth® phone can function at a time.



3. Touch “OK”.



When the result message is displayed, you can use the Bluetooth® phone.

OTHER FUNCTIONS

- **Displaying Bluetooth® information**
You can see or set the information of the Bluetooth® phone on the system.

“Device Name”

..... The name of Bluetooth® phone which is displayed on the screen. You can change it into a desired name.

“Bluetooth* Device Address”

..... The address peculiar to the system. You cannot change it.



1. Select the desired phone and touch “Information”.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.



2. Touch “Change”.



3. When you complete the setting, touch .

- **Changing a Device Name**

You can change a Device Name. If you change a Device Name, the name registered in your cellular phone is not changed.



1. Touch "Change".



2. Use the software keyboard to input the Device name.

- **Changing the Bluetooth® settings**

You can change the display and settings of Bluetooth® information on the system.

The information displays the following items.

"Device Name"

..... The name in the Bluetooth® network. You can change it.

"Passkey"

..... The password when you register your cellular phone in the system. You can change it into the figure of 4–8 digits.

"Bluetooth* Device Address"

..... The address peculiar to the system. You can not change it. If you have registered two Bluetooth® phones with the same Device Name or Passkey and you cannot distinguish one from the other, refer to it.


*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

OTHER FUNCTIONS

When you change the Device Name or Passkey, do the followings.



1. Touch “Bluetooth*”.

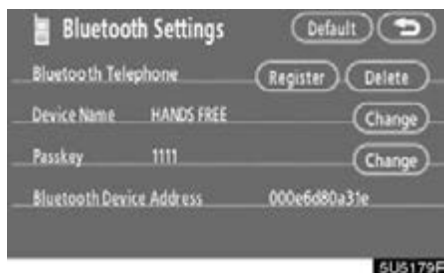

2. Touch “Change” of “Device Name” or “Passkey”.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.




3. Use the software keyboard to input the Device Name.

You can input up to 20 characters.




4. Input a Passkey with 4 – 8 digits.

When you touch ◀, the inputted number is deleted.

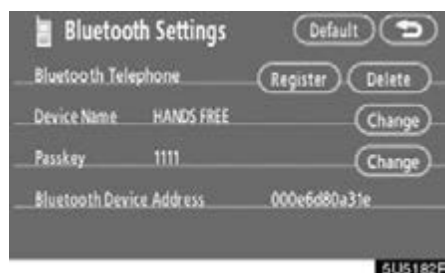

5. When you complete the setting, touch .

- **Initializing the Bluetooth® settings**
You can initialize the settings.

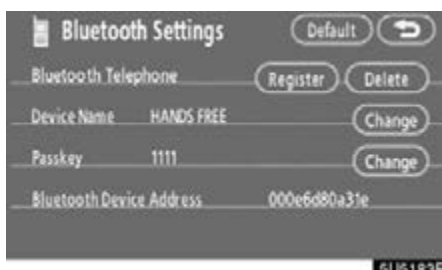

1. Touch "Default".



2. Touch "Yes".

- **Deleting a Bluetooth® phone**



1. Touch "Delete" of "Bluetooth* Telephone".



2. Select the telephone you want to delete and touch "OK".



3. Touch "Yes".

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- Displaying the information of the Bluetooth® phone you delete

You can display the information of the Bluetooth® phone before you delete it and you can make sure whether the telephone you delete is correct or not.




1. Select the telephone you want to display the information about.



2. When you complete confirming it, touch .


Speech command system

The speech command system enables you to operate the navigation system, audio/video system and hands-free system by giving a command.

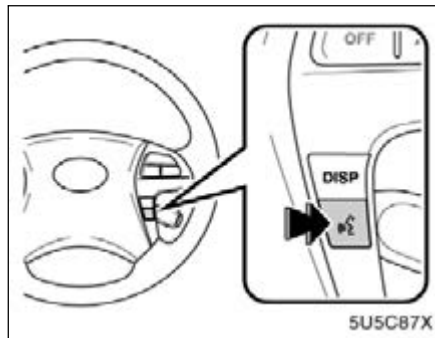

1. Push the talk switch.

A beep sounds and on screen message is displayed with an indicator at the top left.

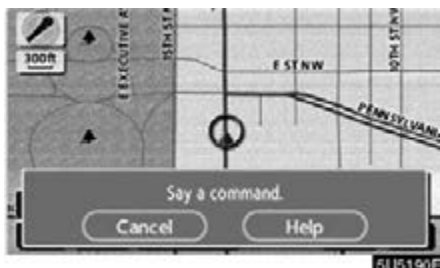


2. Say a command while the indicator is shown on the display.

If you want to check the command list, touch "Help" to display the help screen. (See "Help screen" on page 177.) When you touch "Cancel", the previous screen returns.

If the navigation system does not respond or the confirmation screen does not disappear, please push the talk switch and try again.

If no command is given, a beep sounds and the indicator disappears 6 seconds later.

If the system does not recognize your speech, the system will respond with this message ("System does not recognize this command, please rephrase your command."). Start the operation from the beginning.

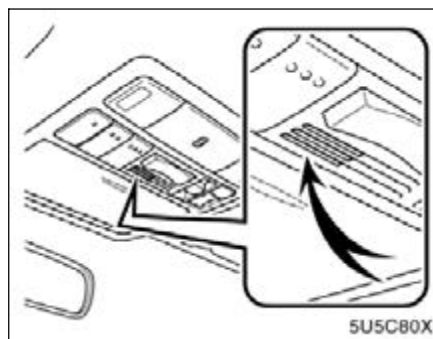

►Microphone

It is unnecessary to speak directly into the microphone when giving a command.

OTHER FUNCTIONS

Speech command example: Searching for a route to your home.

1. Push the talk switch.
2. Say **"Home"**.

You can also say the street name or address.* (ex. say **"Woodridge Avenue"**.)

*: "Hawaii" or Hawaii area is not covered by the voice recognition.

If your home is not registered, you will hear "Home is not registered".



3. If the system recognized the command, the recognition result **"Home"** is displayed on the top of the screen with the screen message. (Displayed message and the switches on the screen depend on the situation.)

Touch or say "Cancel", and the system will be canceled. Touch or say "Help", and display the "Help" screen.



4. Touch **"Enter"** or say **"Enter destination"**, and the system starts searching for a route to your home. (If the destination is already registered, **"Add"** or **"Replace"** is displayed on the screen.)

Touch or say "Cancel", and the search will be canceled.

When you search the destination by "POI Name", this screen is displayed.



Touch **"Enter"** or say **"Enter destination"**.

When you touch **"Show List"**, you can search another spot in its category.

INFORMATION

In the following conditions, the system may not recognize the command properly and using speech commands may not be possible.

- *The command is not correct or clear. Note that certain words, accents, or speech patterns may be difficult for the system to recognize.*
- *There are some noises such as wind noise, etc.*

Help screen

This system has a function which displays the voice recognition help screen. You can see the command list and operating guide on it.

(a) Command List



1. Touch the “Command List” tab on the upper side of the screen and the touch-screen buttons on the right side of the screen to select the desired category.

2. You can scroll through the list of the command list by touching  or .

Touch “OK” after you check it.

(b) Operating Guide



1. Touch the “Operating Guide” tab on the upper side of the screen and the touch-screen buttons on the right side of the screen to select the desired category.

2. You can scroll through the list of the operating guide by touching  or .

Touch “OK” after you check it.

Screen adjustment


You can adjust the brightness, contrast, color and tone of the screen. You can also turn the display off, and change the screen to either day or night mode.

- **Contrast and brightness adjustment**

The brightness and contrast of the screen can be adjusted depending on the brightness of your surroundings. You can also turn the display off.

If your vehicle is equipped with the rear seat entertainment system, the rear screen turns on or off when “Rear” is touched.

The screen goes off when “Screen Off” is touched. To turn the display screen back on, push any button such as “INFO”, etc. The selected screen appears.

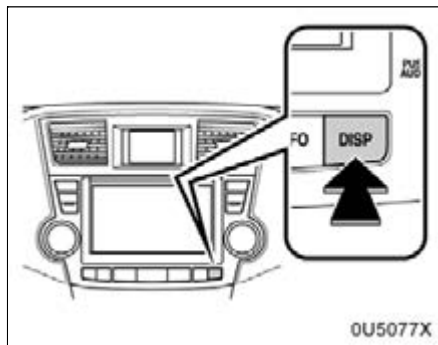

INFORMATION

When you do not touch any touch-screen button on the “Display” screen for 20 seconds, the previous screen will be displayed.

1. Push the “DISP” button.



2. Touch the desired button to adjust contrast and brightness.

“Contrast” “+”:

Strengthens the contrast of the screen.

“Contrast” “-”:

Weakens the contrast of the screen.

“Brightness” “+”:

Brightens the screen.

“Brightness” “-”:


Darkens the screen.

3. After adjusting the screen, touch “OK”.

- **Color and tone adjustment**

The color and tone of the screen can be adjusted while a DVD video or video CD is being played.

1. Push the “DISP” button.

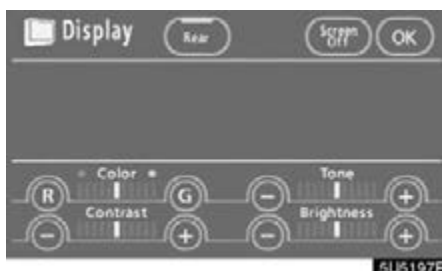

2. Touch the desired button to adjust color and tone. (with rear seat entertainment system)

“Color” “R”:

Strengthens the red color of the screen.

“Color” “G”:

Strengthens the green color of the screen.

“Tone” “+”: Strengthens the tone of the screen.

“Tone” “-”: Weakens the tone of the screen.

3. After adjusting the screen, touch “OK”.

The rear screen turns on or off when “Rear” is touched.

The screen turns off when “Screen Off” is touched. To turn the screen back on, push any button such as “INFO”, etc. The selected screen appears.

- **Changing between day mode and night mode**

Depending on the position of the headlight switch, the screen changes to the day mode or night mode.




To display the screen in the day mode even with the headlight switch on, touch “Day Mode” on the adjustment screen for brightness and contrast control.

If the screen is set in the day mode with the headlight switch turned on, this condition is memorized even with the hybrid system turned off.


INFORMATION

When you do not touch any touch-screen button on the “Display” screen for 20 seconds, the previous screen will be displayed.

Screen setting

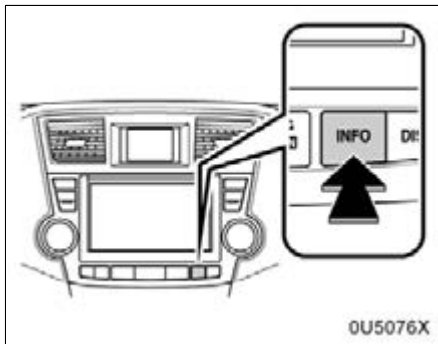

1. Push the "INFO" button.

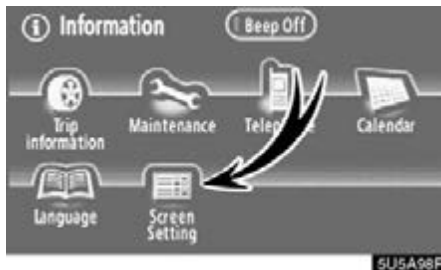

2. Touch "Screen Setting".

(a) Automatic transition

You can select a function that enables automatic return to the navigation screen from the audio screen.



Select "ON" or "OFF" and then touch "OK".

"ON": The navigation screen automatically returns from the audio screen 20 seconds after the end of audio operation.

"OFF": The audio screen remains on.

(b) Switch color

You can select a color of touch-screen buttons.



Select "Green" or "Orange" and then touch "OK".

**(c) Rear system lock
(with rear seat entertainment system)**

If the vehicle is equipped with the rear seat entertainment system, the rear seat entertainment system can be locked to prevent rear passengers from operating the entertainment system.



Select "ON" or "OFF" and then touch "OK".

"ON": The rear passengers cannot operate the rear seat entertainment system. Only front passengers can operate the system.

"OFF": Both the front and rear passengers can operate the rear seat entertainment system.


OTHER FUNCTIONS

(d) Delete personal data

The following personal data can be deleted or returned to their default settings:

- Maintenance conditions
- Maintenance information “off” setting
- Memory points
- Areas to avoid
- Previous points
- Route trace
- User selection settings
- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code

This function is available only when the vehicle is not moving.

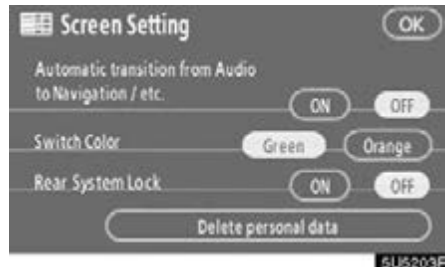

1. Touch “Delete personal data”. The “Delete personal data” screen appears.




2. Touch “Delete”. The “Confirmation to delete all personal data” screen appears.




3. Touch “Yes”.

Beep setting

You can turn the beep sound off.

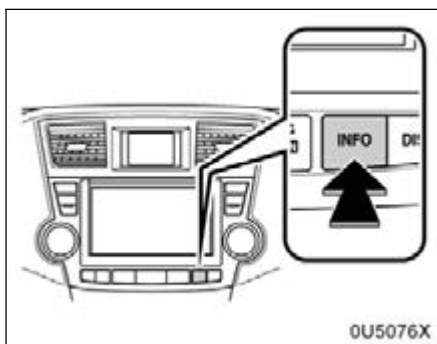


1. Push the "INFO" button.

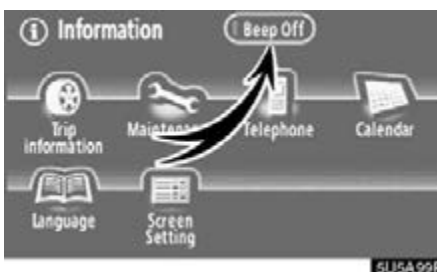

2. Touch "Beep Off". "Beep Off" is highlighted. To set the beep sound on, touch "Beep Off" again.

Select language

The language of the touch-screen buttons, pop-up messages and the voice guidance can be changed.

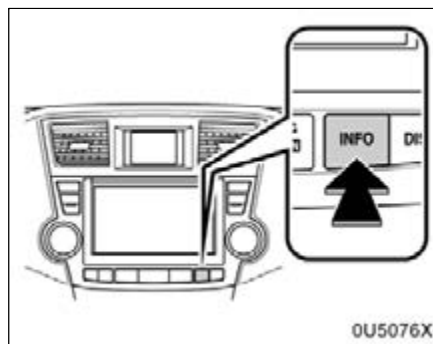

1. Push the "INFO" button.



2. Touch "Language".



3. Touch "English", "Français" or "Español" to select a language.

4. Touch "OK".

The language is changed and the screen returns to the map display.

OTHER FUNCTIONS


SECTION 6

AUDIO/VIDEO SYSTEM

- [Quick reference](#) 186
- [Using your audio/video system](#) 187
- [Audio/video remote controls](#) 240
- [Audio/video system operating hints](#) 241

Quick reference

Operations such as selecting a preset station and adjusting the sound balance are carried out on the touch screen. To display the audio screen, push the “**AUDIO**” button.

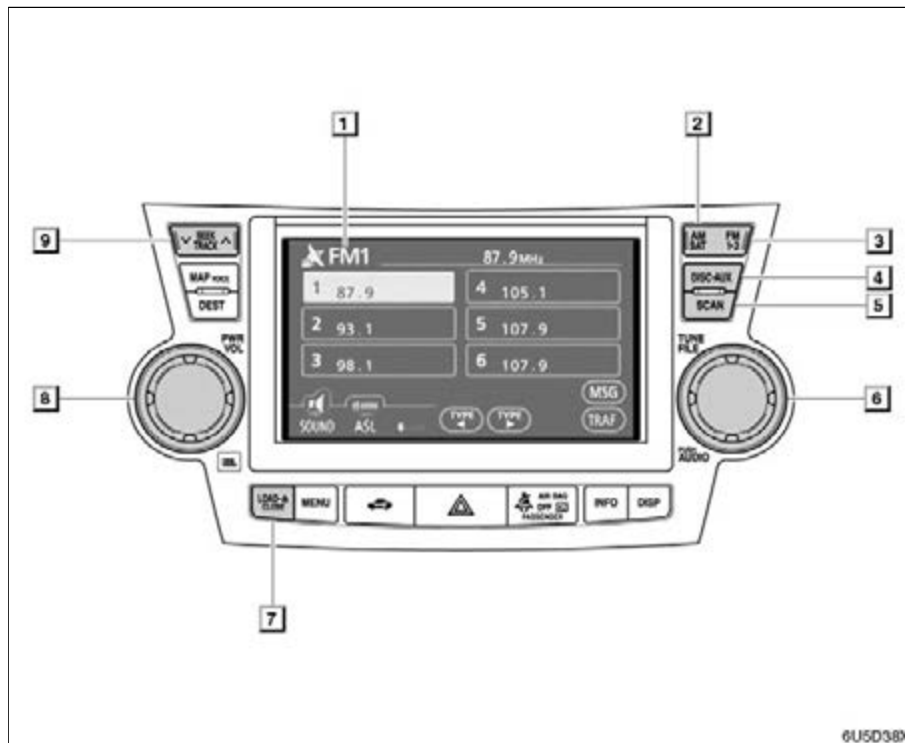

- | | |
|--|--|
| <p>1 Function menu display screen
To control the radio, CD changer or DVD player, touch the touch-screen buttons. For details, see page 189.</p> <p>2 "AM·SAT" button
Push this button to choose an AM or SAT station. For details, see pages 188 and 193.</p> <p>3 "FM 1·2" button
Push this button to choose an FM station. For details, see pages 188 and 193.</p> <p>4 "DISC·AUX" button
Push this button to turn the CD changer, DVD player and AUX on. For details, see pages 188, 192, 206 and 218.</p> | <p>5 "SCAN" button
Push this button to scan radio stations or scan the tracks, discs, files or folders. For details, see pages 194, 209, 213, 220 and 223.</p> <p>6 "TUNE/FILE"/"AUDIO" knob
Push this knob to display the audio control screen, and turn this knob to move the station band and files up or down. For details, see pages 188, 193 and 212.</p> <p>7 "LOAD·EJECT"/"CLOSE" button
Push this button to display the "LOAD·EJECT" screen or close the display. For details, see page 204.</p> |
|--|--|

8 "PWR/VOL" knob

Push this knob to turn the audio/video system on and off, and turn it to adjust the volume. For details, see page 188.

9 "SEEK/TRACK" button

Push either side of this button to seek up or down for a station, or to access a desired track, file or chapter. For details, see pages 194, 208, 212, 219 and 222.

Using your audio/video system — — Some basics

This section describes some of the basic features of your audio/video system. Some information may not pertain to your system.

Your audio/video system works when the "POWER" switch is in ACCESSORY or ON mode.

NOTICE

To prevent the 12 volt battery from being discharged, do not leave the audio/video system on longer than necessary when the hybrid system is not operating.

**CAUTION**

For vehicles sold in U.S.A. and Canada:

- Part 15 of the FCC Rules

FCC Warning:


Any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

- Laser products


- Do not take this unit apart or attempt to make any changes yourself. This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

(a) Turning the system on and off

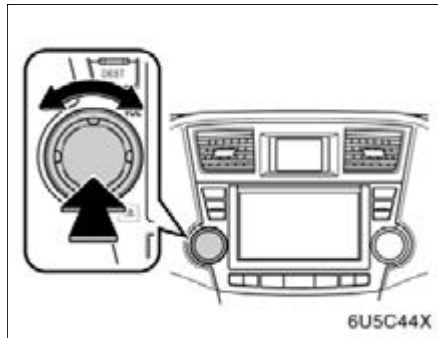


“PWR/VOL”: Push this knob to turn the audio/video system on and off. Turn this knob to adjust the volume. The system turns on in the last mode used.

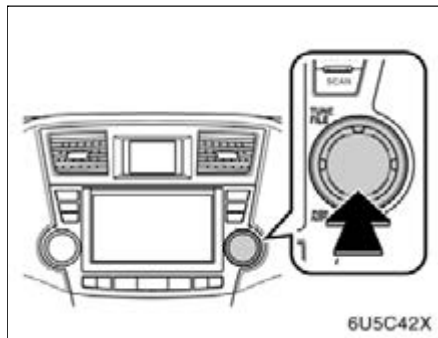

“TUNE/FILE”/“AUDIO”: Push this knob to display touch-screen buttons for audio/video system (audio control mode).

You can select the function that enables automatic return to the previous screen from the audio screen. See page 180 for details.

(b) Switching between functions

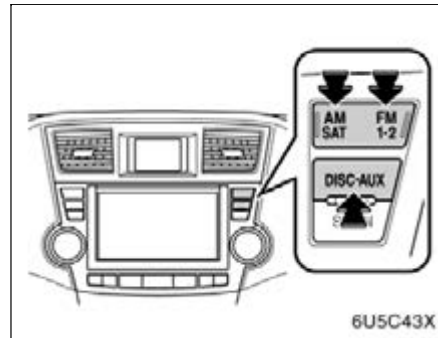


Push **“AM·SAT”**, **“FM 1·2”** or **“DISC·AUX”** button to turn on the desired mode. The selected mode turns on immediately.

Push these buttons if you want to switch from one mode to another.

If the disc is not inserted, the **“CD CHANGER”** screen or **“DVD”** screen will not appear.

You can turn off each player by ejecting all the discs. If the audio/video system was previously off, then the entire audio/video system will be turned off when you eject all the discs. If the other function was previously playing, it will come on again.

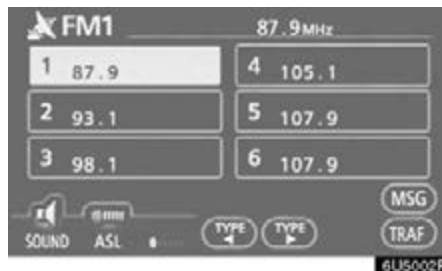

The touch-screen buttons for radio, CD changer and DVD player operation are displayed on the function touch-screen button display screen when the audio control mode is selected. Touch them lightly and directly on the screen. The selected switch is highlighted.

INFORMATION

- If the system does not respond to a touch of a touch-screen button, move your finger away from the screen and then touch it again.
- You cannot operate dimmed touch-screen buttons.
- Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the touch screen.

(c) Tone and balance

How good an audio program sounds to you is largely determined by the mix of the treble, midrange, and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid-range, and bass.


A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.

1. Push the “TUNE/FILE”/“AUDIO” knob.



2. Touch “SOUND”.

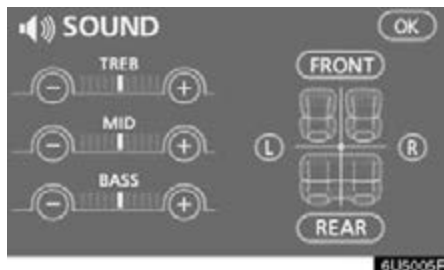

3. Adjust the tone and balance as follows:

To adjust the tone, touch “+” or “-” on the screen. To adjust the balance between the front and rear speakers, touch “FRONT” or “REAR” on the screen, and to adjust the balance between the left and right, touch “L” or “R” on the screen.

“TREB”: Adjusts high-pitched tones.

“MID”: Adjusts mid-pitched tones.

“BASS”: Adjusts low-pitched tones.

As the yellow display approaches “+”, each tone is more emphasized.

(d) Automatic sound levelizer (ASL):

When the audio sound becomes difficult to be heard due to road noise, wind noise or other noises while driving, the system adjusts to the optimum volume according to the noise level. To turn this function, touch “ASL” on the audio control screen.

(e) Selecting screen size (with rear seat entertainment system)

The video screen can be changed from normal mode to wide mode.

1. Push the “TUNE/FILE”/“AUDIO” knob.



2. Touch “WIDE”.



“NORMAL”: Displays a 3 × 4 screen, with either side in black.

“WIDE 1”: Widens the 3 × 4 screen horizontally to fill the screen.

“WIDE 2”: Widens the 3 × 4 screen vertically and horizontally, in the same ratio, to fill the screen.

When you touch , the previous screen returns.

(f) Your CD changer

When you insert a disc, touch “LOAD” and gently push the disc in with the label side up. This CD changer can store up to four discs. The changer will play from track 1 through to the end of the disc. Then it will play from track 1 of the next disc.

The changer is intended for use with 12 cm (4.7 in.) discs only.



NOTICE

- **Do not stack up two discs for insertion, or it will cause damage to the changer. Insert only one disc into slot at a time.**
- **Never try to disassemble or oil any part of the changer. Do not insert anything other than a disc into the slot.**

AUDIO/VIDEO SYSTEM


**(g) Your DVD player
(with rear seat entertainment system)**

The sound of the rear seat entertainment system can be enjoyed by pushing the **"DISC·AUX"** button.

(h) AUX adapter

The sound of portable audio players connected to the AUX adapter can be enjoyed. Push the **"DISC·AUX"** button to switch to AUX mode. For details, refer to the "Owner's Manual".


— Radio operation

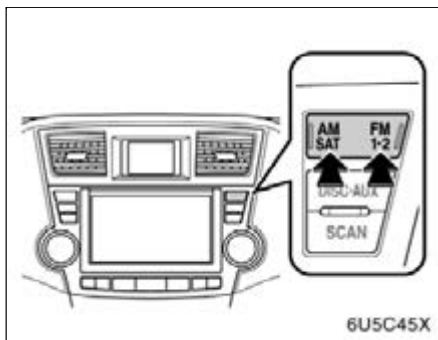

(a) Listening to the radio
Push these buttons to choose either an AM or FM station.

"AM", "FM1" or "FM2" appears on the screen.

If your vehicle is equipped with a satellite radio broadcast system, when you push the **"AM·SAT"** button, "AM", "SAT1", "SAT2", "SAT3" station appears on the display. For details about satellite radio broadcast, see "— Radio operation (XM® Satellite Radio broadcast)" on page 197.

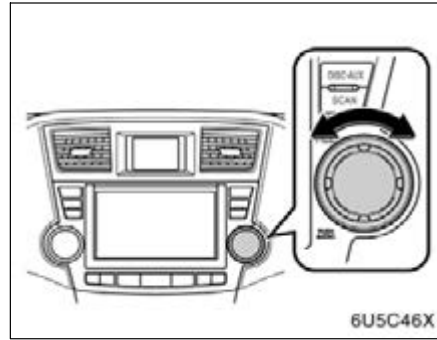

Turn the knob clockwise to step up the station band or counterclockwise to step down.

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the screen. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the screen.



(b) Presetting a station

1. Tune in the desired station.
2. Touch one of the touch-screen buttons (1 — 6) you want and hold it until a beep is heard. This sets the station to the touch-screen button and the frequency appears on the touch-screen button.

Each radio mode (AM, FM1 or FM2) can store up to 6 stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by 12 volt battery disconnection or a blown fuse.

(c) Selecting a station

Tune in the desired station using one of the following methods.

Preset tuning: Touch the touch-screen button (1 — 6) for the station you want. The touch-screen button is highlighted and the station frequency appears on the screen.

Seek tuning: Push the “SEEK/TRACK” button on either side. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched automatically one after another.

To scan all the frequencies: Touch “SCAN” on the screen or push the “SCAN” button briefly. “SCAN” appears on the screen. The radio will find the next station and stay there for a few seconds, and then scan again. To select a station, touch “SCAN” or push the “SCAN” button again.

To scan the preset stations: Touch “SCAN” on the screen or push the “SCAN” button for longer than a second. “P. SCAN” appears on the screen. The radio will tune in the next preset station, stay there for a few seconds, and then move to the next preset station. To select a station, touch “SCAN” or push the “SCAN” button again.


(d) Radio Data System

Your audio/video system is equipped with Radio Data Systems (RDS). RDS mode provides you to receive text messages from radio stations that utilize RDS transmitters.

When RDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RDS features are available for the use only on FM stations which broadcast RDS information.

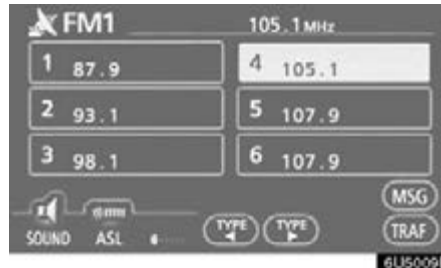

“TYPE ◀▶”

If the system receives no RDS stations, “NO PTY” appears on the display.

Each time you touch “TYPE ◀” or “TYPE ▶”, the program type changes as in the following:

- ROCK
- MISC (Miscellaneous)
- INFORM (Information)
- EASY LIS (Easy listening)
- CLS/JAZZ (Classical music and Jazz)
- R & B (Rhythm and Blues)
- RELIGION
- ALARM (Emergency message)



“TYPE SEEK”

When a program is set, “TYPE SEEK” appears. Touch the switch and the system starts to seek the station in the relevant program type.

If any type program station is not found, “NOTHING” appears on the display.



“MSG” (MESSAGE)

If the system receives a radio text from an RDS station, “MSG” appears on the display. Touch “MSG”, and a text message is displayed on the screen. This function is available only when the vehicle is not moving.

When you touch “MSG OFF”, the display returns.



(e) Traffic announcement

“TRAF”

A station that regularly broadcasts traffic information is automatically located.

When you touch “TRAF”, “TRAF SEEK” appears on the display and the radio will start seeking any traffic program station.

If no traffic program station is found, “NOTHING” appears on the display.

If a traffic program station is found, the name for traffic program station is displayed for a while until a traffic announcement is received.

— Radio operation (XM® Satellite Radio broadcast)

To listen to a satellite radio broadcast in your vehicle, an additional genuine Toyota satellite receiver and antenna (or equivalents) must be purchased and installed. A subscription to the XM® Satellite Radio service is also necessary.

● How to subscribe to an XM® Satellite Radio

An XM® Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous states and 10 Canadian provinces.

How to subscribe:

You must enter into a separate service agreement with the XM® Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and optional digital satellite tuner.

For detailed information about XM® Satellite Radio or to subscribe:

U.S.A.—

Visit on the web at www.xmradio.com or call 1 – 800 – 967 – 2346.

Canada—

Visit on the web at www.xmradio.ca or call 1 – 877 – 438 – 9677.

The XM® Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM® Satellite Radio customer service agreement.

Customers should have their radio ID ready; the radio ID can be found by tuning “channel 000” on the radio. For details, see “Displaying the radio ID” below.

All fees and programming are the responsibility of the XM® Satellite Radio and are subject to change.

Satellite tuner technology notice: Toyota's satellite radio tuners are awarded Type Approval Certificates from XM® Satellite Radio Inc. as proof of compatibility with the services offered by the XM® Satellite Radio.

- **Displaying the radio ID**


Each XM® tuner is identified with a unique radio ID. You will need the radio ID when activating XM® service or when reporting a problem.

If you select the "CH 000" using the "TUNE/FILE"/"AUDIO" knob, the ID code of 8 alphanumeric characters appears. If you select another channel, display of the ID code is canceled. The channel (000) alternates the display between the radio ID and the specific radio ID code.

INFORMATION


Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM® Satellite Radio.

- **Listening to satellite radio**

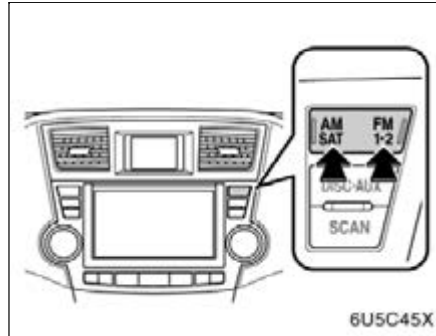

Push the "AM-SAT" button to choose either an AM station or a SAT (satellite) channel.

Besides "AM", "SAT1", "SAT2" or "SAT3" appears on the display.

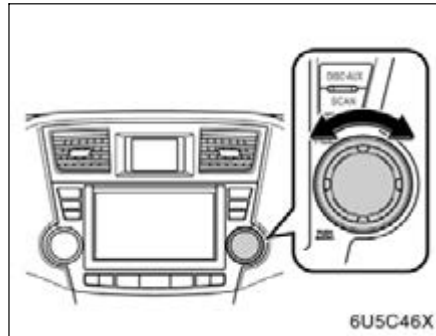

Turn this knob to select the next or previous channel.

If you turn continuously, you can rapidly scroll forward or down through the channels.

- Channel category



Touch either “TYPE◀” or “TYPE▶” to go to the next or previous category.

- Presetting a channel

1. Tune in the desired channel.



2. Touch one of the channel selector buttons (1 — 6) and hold it until a beep is heard.

This sets the channel to the touch-screen button and the name and number of the channel appears on the touch-screen button.

Each touch-screen button can store three SAT channels. To change the preset channel to a different one, follow the same procedure.

The preset channel memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

- **Selecting a channel**

Tune in the desired channel using one of the following methods.

Preset tuning: Touch the channel selector button (1 — 6) for the channel you want. The button (1 — 6) is highlighted and channel number appears on the display.


To select channel within the current category: Push the “^” or “v” button of “SEEK/TRACK”. The radio will step up or down the channel within the current channel category. Touch “**TYPE SEEK**”. The radio will step up the channel within the current channel category.



To scan the currently selected channel category: Touch “**TYPE SCAN**” or push the “**SCAN**” button briefly. “SCAN” appears on the display. The radio will find the next channel in the same channel category, stay there for a few seconds, and then scan again. To select a channel, touch “**TYPE SCAN**” or push the “**SCAN**” button a second time.

To scan the preset channels: Push the “**SCAN**” button and hold it until you hear a beep. “P.SCAN” appears on the display. The radio will find the next preset channel, stay there for a few seconds, and then move to the next preset channel. To select a channel, push the “**SCAN**” button a second time.

- **Displaying the title and name**

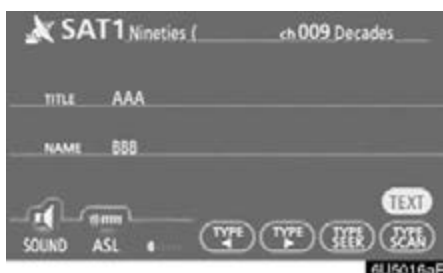

When you touch “**TEXT**”, the song/program title and the artist name/feature are displayed.

Up to 16 alphanumeric characters can be displayed. (Some information will not be fully displayed.)

When you touch “**TEXT**” again, the display returns.

AUDIO/VIDEO SYSTEM

- **If the satellite radio tuner malfunctions**

When problems occur with the XM® tuner, a message will appear on the display. Referring to the table below to identify the problem, take the suggested corrective action.

ANTENNA	The XM® antenna is not connected. Check whether the XM® antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Toyota certified dealer for assistance.
UPDATING	You have not subscribed to the XM® Satellite Radio. The radio is being updated with the latest encryption code. Contact the XM® Satellite Radio for subscription information. When a contract is canceled, you can choose the "CH000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel. If you want to listen to the premium channel, contact the XM® Satellite Radio.
NO SIGNAL	The XM® signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
LOADING	The unit is acquiring audio or program information. Wait until the unit has received the information.
OFF AIR	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action needed.
---	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH001". If it does not change automatically, select another channel.

Contact the XM® Listener Care Center at 1 – 800 – 967 – 2346 (U.S.A.) or 1 – 877 – 438 – 9677 (Canada).

NOTICE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.*
- Increase the separation between the equipment and receiver.*
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- Consult the dealer or an experienced radio/TV technician for help.*

Information to user


Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

INFORMATION

This XM® tuner supports "Audio Services" (Music and Talk) of only XM® Satellite Radio and "Text Information" linked to the respective "Audio Services".*

**Text Information includes, Station Name, (Artist) Name, (Song) Title and Category Name.*

— CD changer operation

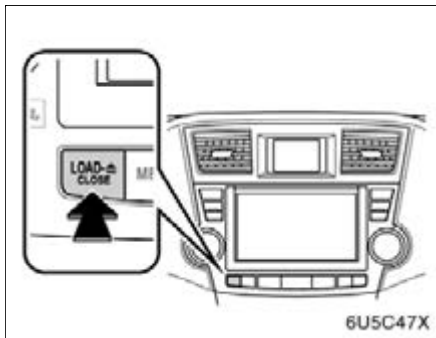

(a) Inserting discs

The "POWER" switch is in ACCESSORY or ON mode.

Your CD changer can store up to 4 discs. You can set a disc at the lowest empty disc number.

1. Push the "LOAD-▲/CLOSE" button. The "LOAD-EJECT" screen appears.



2. Touch "LOAD". The display opens.

3. The amber indicators at either side of the slot start blinking. When the indicators change to green, insert only one disc. After the disc is loaded, the amber indicators at either side of the slot start blinking again. When the indicators change to green, you can insert the next disc.

4. Push the "LOAD-▲/CLOSE" button to close the display.

The changer will automatically start playing from the last disc you inserted.

If the label faces down, the disc cannot be played. In this case, "CD CHECK" appears on the screen.



CAUTION

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.

NOTICE


- Do not obstruct the display while it is moving. It could damage your audio/video system.
- Do not insert one disc stacked on top of another one or feed them in continuously, to prevent discs from getting stuck in the changer.

INFORMATION

Under extremely cold conditions, the display may react slowly or operation sound may become louder.

(b) Ejecting discs

- A single disc alone:

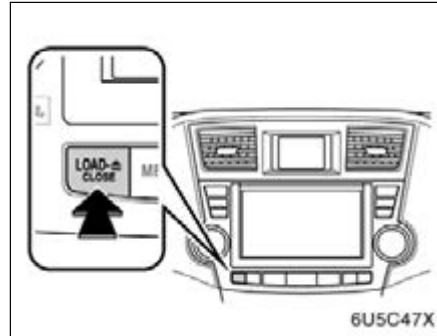

1. Push the “LOAD-▲/CLOSE” button. The “LOAD-EJECT” screen appears.



2. Touch the disc number to be ejected.

The display opens and the amber indicators at either side of the slot start blinking. After the disc is ejected, the amber indicators change to green. A disc can be inserted.

- All the discs:

1. Push the “LOAD·▲/CLOSE” button. The “LOAD·EJECT” screen appears.



2. Touch “ALL CD ▲”.


The display opens and the amber indicators at either side of the slot start blinking. After the disc is ejected, the blinking indicators stay on.

3. Remove the disc.


The indicators start blinking again and the next disc is ejected.

If a disc is not removed within 15 seconds after it is ejected, the operation will be canceled.

When all the discs are removed, the amber indicators change to green. A disc can be inserted.

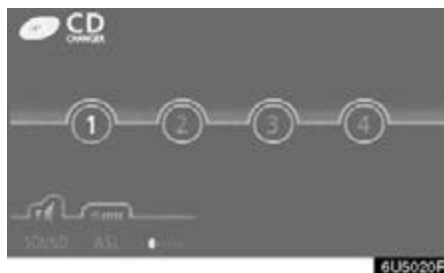

The numbers of the trays where the disc is not set are dimmed.

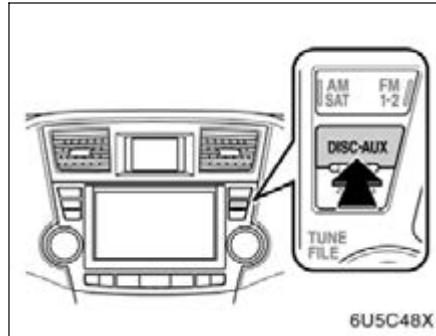

(c) Playing a disc

Push the “DISC·AUX” button if the discs are already loaded in the changer.

“CD CHANGER” appears on the screen.

The discs set in the changer are played continuously, starting with the last disc you inserted. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the screen.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The changer will skip any empty disc trays.

Vehicles with rear entertainment system

—
If the DVD player is turned on, push the “DISC·AUX” button again to switch to the CD changer.

If the rear seat entertainment system is on, pushing the “DISC·AUX” button switches the sound of the front audio/video system and that of the rear seat entertainment system.



(d) Selecting a desired disc

Touch the desired disc number on the screen.


The selected disc number is highlighted.

The changer will start playing the selected disc from the first track.



(e) Playing an audio disc

Push the “TUNE/FILE”/“AUDIO” knob to display this screen.

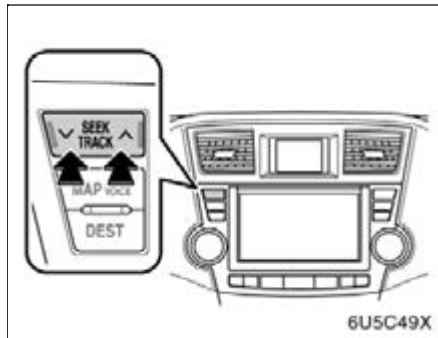

SELECTING A DESIRED TRACK

“SEEK/TRACK” button: Use for a direct access to a desired track.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired track number appears on the screen. As you release the button, the changer will start playing the selected track from the beginning.

“TRACK LIST”: The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch **“TRACK LIST”**. The track list is displayed.



Touch the desired track number. The changer will start playing the selected track from the beginning.

▲: By touching this touch-screen button, the list moves up by 6 track groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 track groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

Vehicles with rear entertainment system —

While the DVD player is in operation, the chapter or track can be changed by pushing either side of the **“SEEK/TRACK”** button.

Fast forward: Push **“^”** side of the **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

Reverse: Push **“v”** side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the changer will resume playing.



SEARCHING FOR A DESIRED TRACK OR DISC

Searching for a desired track —

Touch **“SCAN”** on the screen or push the **“SCAN”** button briefly while the disc is playing.

“SCAN” appears on the screen. The changer will play the next track for 10 seconds, then scan again. To select a track, touch **“SCAN”** on the screen or push the **“SCAN”** button a second time. If the changer reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

Searching for a desired disc —

Touch **“SCAN”** on the screen or push the **“SCAN”** button for longer than a second while the disc is playing.

“D.SCAN” appears on the screen. The program at the beginning of each audio disc will be played for 10 seconds. To continue listening to the program of your choice, touch **“SCAN”** on the screen or push the **“SCAN”** button a second time.

After all the audio discs are scanned in one pass, normal play resumes.

OTHER FUNCTIONS

“RPT”: Use it for automatic repeat of the track or disc you are currently listening to.

Repeating a track —

Touch **“RPT”** briefly while the track is playing. **“RPT”** appears on the screen. When the track is finished, the changer will automatically go back to the beginning of the track and play the track again. To cancel it, touch **“RPT”** once again.

Repeating a disc —

Touch **“RPT”** for longer than a second while the disc is playing. **“D.RPT”** appears on the screen. When the disc is finished, the changer will automatically go back to the beginning of the disc and play the disc again. To cancel it, touch **“RPT”** once again.

“RAND”: Use it for automatic and random selection.

Playing the tracks on one disc in random order —

Touch **“RAND”** briefly while the disc is playing. **“RAND”** appears on the screen. The system selects a track on the disc being listened to in random order. To cancel it, touch **“RAND”** once again.

Playing the tracks on all the audio discs in random order —

Touch **“RAND”** for longer than a second while the disc is playing. **“D.RAND”** appears on the screen. The system selects a track on all the audio discs in the changer in random order. To cancel it, touch **“RAND”** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 29 letters can be displayed.



(f) Playing a MP3/WMA disc

Push the **“TUNE/FILE”/“AUDIO”** knob and touch a MP3/WMA disc number to display this screen.

SELECTING A DESIRED FOLDER

“FOLDER▲”: Touch this touch-screen button to go to the next folder.

“FOLDER▼”: Touch this touch-screen button to go to the previous folder.

“FOLDER LIST”: The desired folder can be selected in a list. This function is available only when the vehicle is not moving. Touch **“FOLDER LIST”**. The folder list is displayed.





Touch the desired folder number. The changer will start playing the first file of the selected folder.

▲: By touching this touch-screen button, the list moves up by 6 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

“FILE”: The file list is displayed.

“DETAIL”: Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.

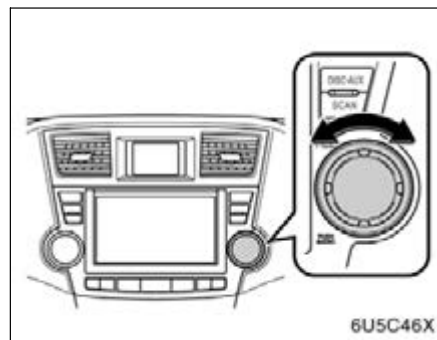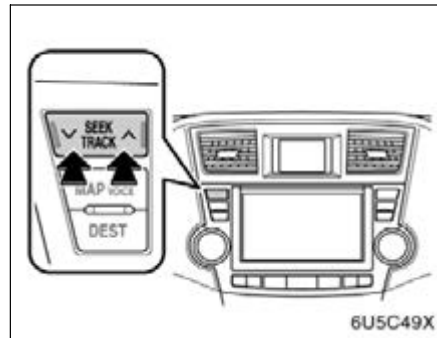

SELECTING A DESIRED FILE

“SEEK/TRACK” button: Use for direct access to a desired file.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired file number appears on the display. As you release the button, the changer will start playing the selected file from the beginning. When **“RAND”** or **“FLD.RPT”** is on, the file number within the folder you are currently being listened to appears.

Fast forward: Push **“^”** side of the **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the changer will resume playing from that position.

Reverse: Push **“v”** side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the changer will resume playing.

“TUNE/FILE”/“AUDIO” knob: Use for direct access to a desired file in the disc.

Turn the **“TUNE/FILE”/“AUDIO”** knob to step up or down all the files in the disc you are currently listening to. The file number appears on the display. When **“RAND”** or **“FLD. RPT”** is on, all the files in the folder you are currently being listened to can be stepped up or down.



“FILE”: The desired file can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“FILE”**. The file list is displayed.



Touch the desired file number. The changer will start playing the selected file from the beginning.

▲: By touching this touch-screen button, the list moves up by 6 file groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 file groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

"FOLDER": The folder list is displayed.

"DETAIL": Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.



SEARCHING FOR A DESIRED FILE

Touch **"SCAN"** on the screen or push the **"SCAN"** button briefly while the disc is playing.

"SCAN" appears on the screen. The changer will play the next file in the folder for 10 seconds, then scan again. To select a file, touch **"SCAN"** on the screen or push the **"SCAN"** button a second time. If the changer reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.



SEARCHING FOR A DESIRED FOLDER

Touch “SCAN” on the screen or push the “SCAN” button for longer than a second while the disc is playing.

“FLD.SCAN” appears on the screen. The program at the beginning of each folder will be played for 10 seconds. To continue listening to the program of your choice, touch “SCAN” on the screen or push the “SCAN” button a second time.

After all the folders are scanned in one pass, normal play resumes.



OTHER FUNCTIONS

“RPT”: Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch “RPT” briefly while the file is playing. “RPT” appears on the screen. When the file is finished, the changer will automatically go back to the beginning of the file and play the file again. To cancel it, touch “RPT” once again.

Repeating a folder —

Touch “RPT” for longer than a second while the folder is playing. “FLD.RPT” appears on the screen. When the folder is finished, the changer will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch “RPT” once again.

"RAND": Use it for automatic and random selection of the folder or the disc which you are currently listening to.

Playing the files in one folder in random order —

Touch **"RAND"** briefly while the disc is playing. **"RAND"** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **"RAND"** once again.

Playing the files in all the folders on one disc in random order —

Touch **"RAND"** for longer than a second while the disc is playing. **"FLD.RAND"** appears on the screen. The system selects a file in all the folders. To cancel it, touch **"RAND"** once again.

When a file is skipped or the system is inoperative, touch **"RAND"** to reset.

(g) If the player malfunctions

If **"CD ERROR"** appears on the screen, audio signals of the disc cannot be read or the system has trouble. Push the **"DISC-AUX"** button once again.

If the changer does not operate, check that the disc surface is not soiled or damaged. If the disc is O.K., the temperature of the changer's internal mechanism may be raised because of high external temperature. Remove the disc from the changer to cool it.

If the changer still does not operate, have it checked by your dealer.

If an MP3/WMA disc contains CD-DA files, only CD-DA files are played. If an MP3/WMA disc contains files other than CD-DA, only MP3/WMA files are played.


—DVD player operation

The DVD player can play DVD video, audio CD, video CD, CD text, dts-CD or MP3 disc only when a disc is loaded in the DVD player. A WMA disc cannot be played.

For details of "Rear seat entertainment system", refer to "Owner's Manual".


For appropriate discs for this player, see "Audio/video system operating hints" on page 241.

(a) Inserting the disc

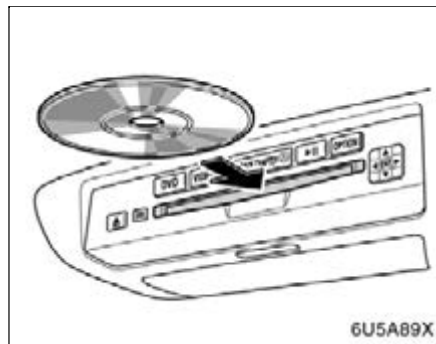

Insert the disc into the slot with the label side up.

An adapter must be used for 8 cm (3 in.) discs which are loaded in the same manner as for 12 cm (4.7 in.) discs.

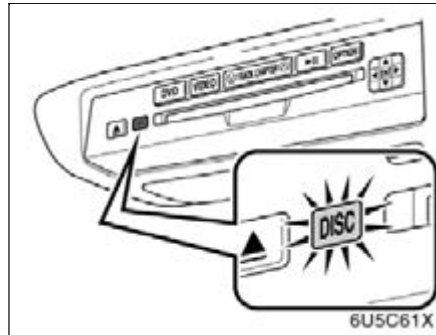


The indicator light turns on while the disc is loaded.

If the label faces forward, the disc cannot be played. In this case, "DISC CHECK" appears on the screen.

If a disc which is not playable is inserted, "DISC CHECK" will also appear on the screen. For appropriate discs for this player, see "Audio/video system operating hints" on page 241.


NOTICE

Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

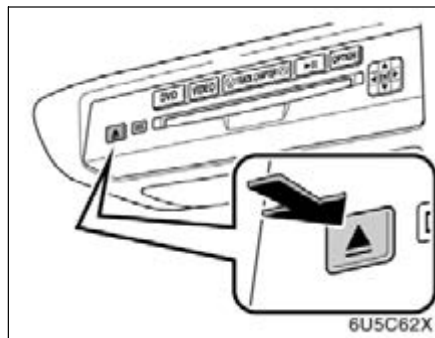

(b) Ejecting a disc

Push the  button.

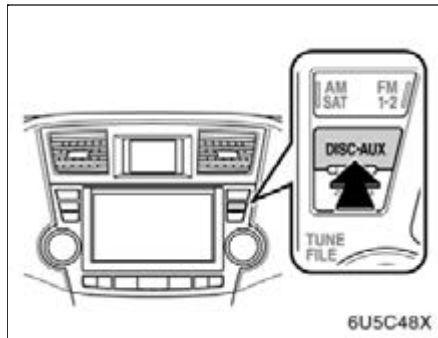

(c) Playing a disc

Push the “DISC·AUX” button if a disc is already loaded in the player.


“DVD” appears on the screen. (If the CD changer is turned on, push the “DISC” button again to switch to the DVD player.)



(d) Operating an audio CD

PLAYING AN AUDIO CD

Push the “TUNE/FILE”/“AUDIO” knob to display this screen.

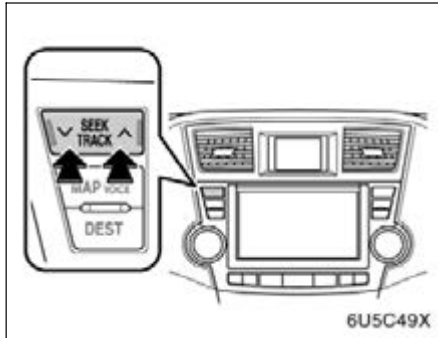

SELECTING A DESIRED TRACK

“SEEK/TRACK” button: Use for direct access to a desired track.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired track number appears on the display. As you release the button, the player will start playing the selected track from the beginning.

“TRACK LIST”: The desired track can be selected from a list. This function is available only when the vehicle is not moving.

Touch **“TRACK LIST”**. The track list is displayed.



Touch the desired track number. The player will start playing the selected track from the beginning.

▲: By touching this touch-screen button, the list moves up by 6 track groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 track groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

Fast forward: Touch **“^”** side of **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

Reverse: Touch **“v”** side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the player will resume playing.



SEARCHING FOR A DESIRED TRACK

Touch **"SCAN"** on the screen or push the **"SCAN"** button.

"SCAN" will be highlighted on the screen. The player will play the next track for 10 seconds, then scan again. To select a track, touch **"SCAN"** on the screen or push the **"SCAN"** button a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.



OTHER FUNCTIONS

"RPT": Use it for automatic repeat of the track you are currently listening to.

Touch **"RPT"** while the track is playing. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, touch **"RPT"** once again.

"RAND": Use it for automatic and random selection of the disc which you are currently listening to.

When **"RAND"** is touched, the system selects a track in the disc you are currently listening to. To cancel it, touch **"RAND"** once again.

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 29 letters can be displayed.



(e) Operating a MP3 DISC

PLAYING A MP3 DISC

Push the “TURN/FILE” knob to display this screen.

SELECTING A DESIRED FOLDER

“**FOLDER▲**”: Touch this touch-screen button briefly to go to the next folder.

“**FOLDER▼**”: Touch this touch-screen button briefly to go to the previous folder. To jump up to the first folder, touch and hold this touch-screen button until the beep sounds.

“**FOLDER LIST**”: The desired folder can be selected in a list. This function is available only when the vehicle is not moving. Touch “**FOLDER LIST**”. The folder list is displayed.


Touch the desired folder number. The player will start playing the first file of the selected folder.

▲: By touching this touch-screen button, the list moves up by 6 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

“**FILE**”: The file list is displayed.

“**DETAIL**”: Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.

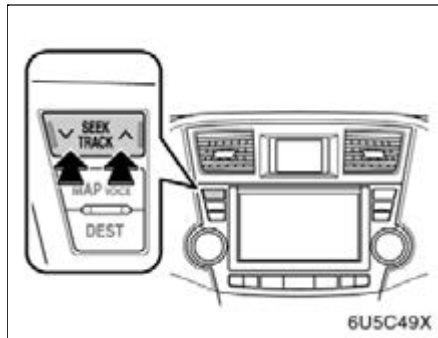

SELECTING A DESIRED FILE

“SEEK/TRACK” button: Use for direct access to a desired file.

Push either side of the **“SEEK/TRACK”** button and repeat it until the desired file number appears on the display. As you release the button, the player will start playing the selected file from the beginning.

Fast forward: Push **“^”** side of the **“SEEK/TRACK”** button and hold it to fast forward the disc. When you release the button, the player will resume playing from that position.

Reverse: Push **“v”** side of the **“SEEK/TRACK”** button and hold it to reverse the disc. When you release the button, the player will resume playing.

“FILE”: The desired file can be selected in a list. This function is available only when the vehicle is not moving.

Touch **“FILE”**. The file list is displayed.



Touch the desired file number. The player will start playing the selected file from the beginning.

▲: By touching this touch-screen button, the list moves up by 6 file groups. If this touch-screen button is touched when the top page of the list is displayed, the last page is displayed.

▼: By touching this touch-screen button, the list moves down by 6 file groups. If this touch-screen button is touched when the last page of the list is displayed, the top page is displayed.

“FOLDER”: The folder list is displayed.

“DETAIL”: Details of the file currently playing is displayed. This function is available only when the vehicle is not moving.



SEARCHING FOR A DESIRED FILE

Touch “SCAN” on the screen or push the “SCAN” button briefly.

“SCAN” appears on the screen. The DVD player will play the next file in the folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen or push the “SCAN” button a second time. If the player reaches the end of the folder, it will continue scanning from file 1.

After all the files are scanned in one pass, normal play resumes.



SEARCHING FOR A DESIRED FOLDER

Touch and hold “SCAN” on the screen or push the “SCAN” button until the beep sounds.

“FLD.SCAN” appears on the screen. The DVD player will play the file at the beginning of each folder for 10 seconds, then scan again. To select a file, touch “SCAN” on the screen or push the “SCAN” button a second time.

After all the folders are scanned in one pass, normal play resumes.



OTHER FUNCTIONS

“RPT”: Use it for automatic repeat of the file or folder you are currently listening to.

Repeating a file —

Touch **“RPT”** briefly while the file is playing. **“RPT”** appears on the screen. When the file is finished, the player will automatically go back to the beginning of the file and play the file again. To cancel it, touch **“RPT”** once again.

Repeating a folder —

Touch and hold **“RPT”** until the beep sounds while the folder is playing. **“FLD.RPT”** appears on the screen. When the folder is finished, the player will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch **“RPT”** once again.

“RAND”: Use it for automatic and random selection of the folder which you are currently listening to or of all the folders.

Playing the files in one folder in random order —

Touch **“RAND”** briefly. **“RAND”** appears on the screen. The system selects a file in the folder you are currently listening to. To cancel it, touch **“RAND”** once again.

Playing the files in all the folders in random order —

Touch and hold **“RAND”** until the beep sounds. **“FLD.RAND”** appears on the screen. The system selects a file in the folders of all the trays which are set and plays it. To cancel it, touch **“RAND”** once again.

When a file is skipped or the system is inoperative, touch **“RAND”** to reset.

(f) Operating a DVD video disc

NOTE: The playback condition of some DVD video discs may be determined by a DVD video software producer. This DVD player plays a disc as the software producer intended. So some functions may not work properly. Be sure to read the instruction manual for the DVD video disc separately provided. For the detailed information about DVD video discs, see “(i) DVD player and DVD video disc information”.

Precautions on DVD video disc

When recording with a DVD video or video CD, audio tracks may not record in some cases while the menu is displayed. As audio will not play in this case, verify that the video tracks are playing and then activate playback.

When playback of a disc is completed:

- If an audio CD or MP3 disc is playing, the first track or file starts.
- If a DVD video or video CD is playing, playback will stop or the menu screen will be displayed.

The title/chapter number and playback time display may not appear while playing back certain DVD video discs.



This “DVD Hint!” screen appears when the video screen is first displayed after the “POWER” switch is in ACCESSORY or ON mode.

Touch “OK” when you read the message.

 CAUTION
Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.



PLAYING A DVD DISC

Push the "TUNE/FILE"/"AUDIO" knob to display this screen.

When you touch "WIDE", the screen mode can be changed.

If you touch "PICTURE" when the vehicle is completely stopped and the parking brake is applied, the video screen returns.



DISPLAYING DVD CONTROLS

If you touch a part of the screen, where controls are not located while watching video, DVD controls will appear.

"Page2": Touching this will display on the second page of DVD controls.

"Page1": Touching this will display the top page of DVD controls.

"Hide Buttons": Touching this will turn off the controls from the screen.

If "⊘" appears on the screen when you touch a control, the operation relevant to the control is not permitted.

DESCRIPTION OF DVD CONTROLS

● Top page of DVD video controls

“Menu” and “Top Menu”: If you touch any of the above controls, the menu screen for DVD video appears. (For the operation, see the manual that come with the DVD video disc provided separately.)

: The menu control key appears on the screen. (See page 228.)

: Touching this will pause the video screen. When you touch this again, the video screen advances frame by frame.

: Touching this will fast reverse during playback.

: Touching this will stop the video screen.

: Touching this will pause during playback and resume normal play during pause or slow forward.

: Touching this will fast forward during playback and forward slowly during pause.

● Second page of DVD video controls

“Setup”: The initial set up screen appears. (See page 230.)

“Search”: The title search screen appears. (See page 228.)

“Return”: Touching this will display the predetermined scene and start playing from there.

“AUDIO”: The audio changing screen appears. (See page 229.)

“Subtitle”: The subtitle changing screen appears. (See page 229.)

“Angle”: The angle selection screen appears. (See page 230.)



SELECTING A MENU ITEM

Enter the menu item using ▲, ▶, ▼ and ◀ and touch “Enter”. The player starts playing video for that menu item. (For details, see the manual that comes with the DVD video disc provided separately.)

Each time you touch “Move Buttons”, the controls on the screen move upward and downward.

When you touch “<<OFF”, the controls will disappear. To display them again, touch “ON>>”.

When you touch , the previous screen returns.



SEARCHING BY TITLE

Enter the title number and touch “Enter”. The player starts playing video for that title number.

When you push either side of the “SEEK/ TRACK” button, you can select a chapter.

If you enter the wrong numbers, touch “Clear” to delete the numbers.

When you touch , the previous screen returns.



CHANGING THE SUBTITLE LANGUAGE

Each time you touch “Subtitle”, the language is selected from the ones stored in the discs and changed.

When you touch , the previous screen returns.



CHANGING THE AUDIO LANGUAGE

Each time you touch “AUDIO”, the language is selected from the ones stored in the discs and changed.

When you touch , the previous screen returns.



CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

Each time you touch “Angle”, the angle changes.

When you touch , and the previous screen returns.



SETUP MENU

There are initial setting touch-screen buttons on the “Setup Menu” screen.

After you change the initial setting, touch “Enter”. The initial setting screen will be turned off and return to the picture previously.

When “Default” is touched, all menus are initialized.

The initial setting can be changed.

- Audio language

You can change the audio language.

1. Touch “Audio Language”.
2. Touch the language you want to hear on the “Select Audio Language” screen.

If you cannot find the language you want to hear on this screen, touch “Others” and enter a language code. For the entry of language code, see the following “ENTER AUDIO LANGUAGE CODE”.

To return to the “Setup Menu” screen, touch the .

- **Subtitle language**

You can change the subtitle language.

1. Touch "Subtitle Language".
2. Touch a language you want to read on the "Select Subtitle Language" screen.

If you cannot find the language you want to read on this screen, touch "**Others**" and enter a language code. For the entry of language code, see the following "ENTER AUDIO LANGUAGE CODE".

To return to the "Setup Menu" screen, touch the .

- **DVD language**

You can change the language on the DVD video menu.

1. Touch "DVD Language".
2. Touch the language you want to read on the "DVD Language" screen.

If you cannot find the language you want to read on this screen, touch "**Others**" and enter a language code. For the entry of language code, see the following "ENTER AUDIO LANGUAGE CODE".

To return to the "Setup Menu" screen, touch .

- **Angle mark**

The multi-angle mark can be turned on or off on the screen while the disc which is multi-angle compatible is being played.

Each time you touch "Angle Mark", the angle mark on the screen turns on or off alternately.

- **Parental lock**

The level of viewer restrictions can be changed.

1. Touch "Parental Lock".
2. Enter the 4-digit personal code on the "Enter Personal Code" screen.


If you enter the wrong numbers, touch  to delete the numbers.

10 touches of  will initialize the personal code.

To return to the "Setup Menu" screen, touch .

3. Touch a parental level (1 — 8) on the "Select Restriction Level". Touch the  switch to return to the "Setup Menu" screen.

ENTER AUDIO LANGUAGE CODE

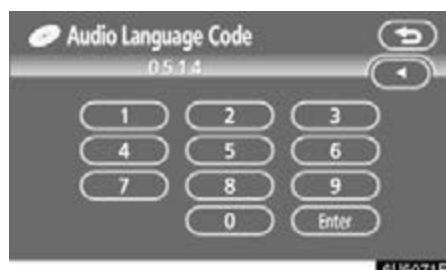

If you touch “Others” on the “Select Audio Language” screen, “Select Subtitle Language” screen or “DVD Language” screen, you can select the language you want to hear or read by entering a language code.

1. Enter the 4-digit language code.

If you enter the wrong numbers, touch ◀ to delete the numbers.

2. Touch “Enter”.

Code	Language
1001	Japanese
0514	English
0618	French
0405	German
0920	Italian
0519	Spanish
2608	Chinese
1412	Dutch
1620	Portuguese
1922	Swedish
1821	Russian
1115	Korean
0512	Greek
0101	Afar
0102	Abkhazian
0106	Afrikaans

0113	Amharic
0118	Arabic
0119	Assamese
0125	Aymara
0126	Azerbaijani
0201	Bashkir
0205	Byelorussian
0207	Bulgarian
0208	Bihari
0209	Bislama
0214	Bengali
0215	Tibetan
0218	Breton
0301	Catalan
0315	Corsican
0319	Czech
0325	Welsh
0401	Danish
0426	Bhutani
0515	Esperanto
0520	Estonian
0521	Basque
0601	Persian
0609	Finnish
0610	Fiji
0615	Faroese
0625	Frisian
0701	Irish
0704	Scots-Gaelic
0712	Galician
0714	Guarani
0721	Gujarati

0801	Hausa	1318	Marathi
0809	Hindi	1319	Malay
0818	Croatian	1320	Maltese
0821	Hungarian	1325	Burmese
0825	Armenian	1401	Nauru
0901	Interlingua	1405	Nepali
0905	Interlingue	1415	Norwegian
0911	Inupiak	1503	Occitan
0914	Indonesian	1513	(Afan)Oromo
0919	Icelandic	1518	Oriya
0923	Hebrew	1601	Panjabi
1009	Yiddish	1612	Polish
1023	Javanese	1619	Pashto, Pushto
1101	Georgian	1721	Quechua
1111	Kazakh	1813	Rhaeto–Romance
1112	Greenlandic	1814	Kirundi
1113	Cambodian	1815	Romanian
1114	Kannada	1823	Kinyarwanda
1119	Kashmiri	1901	Sanskrit
1121	Kurdish	1904	Sindhi
1125	Kirghiz	1907	Sangho
1201	Latin	1908	Serbo–Croatian
1214	Lingala	1909	Sinhalese
1215	Laothian	1911	Slovak
1220	Lithuanian	1912	Slovenian
1222	Latvian	1913	Samoa
1307	Malagasy	1914	Shona
1309	Maori	1915	Somali
1311	Macedonian	1917	Albanian
1312	Malayalam	1918	Serbian
1314	Mongolian	1919	Siswati
1315	Moldavian	1920	Sesotho

1921	Sundanese
1923	Swahili
2001	Tamil
2005	Telugu
2007	Tajik
2008	Thai
2009	Tigrinya
2011	Turkmen
2012	Tagalog
2014	Setswana
2015	Tonga
2018	Turkish
2019	Tsonga
2020	Tatar
2023	Twi
2111	Ukrainian
2118	Urdu
2126	Uzbek
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

SETUP OPERATION FROM THE REAR SEAT



This screen appears when a rear passenger selects the setup menu.

If you want to cancel the setup operation from the rear seat, touch **“Play”**. The player will resume normal play.

Under the same condition, the rear passenger can cancel the setup operation from the front seat.

To lock the operation of the player from the rear seat, see “(c) Rear system lock” on page 181.




(g) Operating a video CD

PLAYING A VIDEO CD

Push the “AUDIO” button to display this screen.

When you touch “WIDE”, the screen mode can be changed.

If you touch “PICTURE” when the vehicle is completely stopped and the parking brake is applied, the video screen returns.

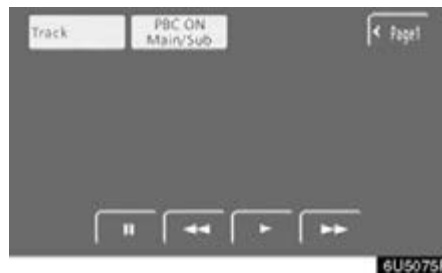

DISPLAYING VIDEO CD CONTROLS

If you touch the part where controls are not located while you are watching video on the video CD, video CD controls will appear.

“**Page2**”: Touching this will display on the second page of video CD controls.

“**Page1**”: Touching this will display on the top page of video CD controls.

“**Hide Buttons**”: Touching this will turn off the controls from the screen.

If “” appears on the display when you touch a control, the operation is not permitted.

DESCRIPTION OF VIDEO CD CONTROLS

- Controls on top page

“Select Number”: The track or number search screen appears. (See “SEARCHING BY TRACK” on page 237.)

“Prev. Menu”: When you touch this while the disc menu is displayed, the previous page appears on the screen. If you touch this while the player is playing video, the previous track is searched and played.

“Next Menu”: When you touch this while the disc menu is displayed, the next page appears on the display. If you touch this while the player is playing video, the next track is searched and played.

“Main/Sub”: A multiplex transmission changing control. The mode changes from Main/Sub to Main, to Sub and back to Main/Sub by touching this control.

“Return”: Touching this will display the predetermined scene and start playing from there.

- Controls on second page



: Use this to pause the video screen. When you touch this again, the video screen advance frame by frame.



: Touch this to fast reverse during playback.



: Touch this to pause during playback and resume playing during pause.



: Touch this to fast forward during the playback and start playing slowly during pause.



SEARCHING BY TRACK

Enter the track numbers and touch “Enter”. The player starts playing video for that title number.

You can select a track number by pushing “^” or “v” on the “SEEK/TRACK” button.

If you enter the wrong numbers, touch “Clear” to delete the numbers.

Touch , and the previous screen returns.

(h) If the player malfunctions

If the player or another unit equipped with the player malfunction, your audio/video system will display following messages.

If “DISC CHECK” appears on the display: It indicates that the disc dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. If a disc which is not playable is inserted, “DISC CHECK” will also appear on the screen. For appropriate discs for this player, see “Audio/video system operating hints” on page 241.

If “REGION CODE ERROR” appears on the display: It indicates that the DVD region code is not set properly.

If “DVD ERROR” appears on the display: It indicates that the inside of the player unit may be too hot due to the very high ambient temperature. Remove the disc from the player and allow the player to cool down.

If the malfunction is not rectified: Take your vehicle to your dealer.

If an MP3 disc contains CD-DA files, only CD-DA files are played. If an MP3 disc contains files other than CD-DA, only MP3 files are played.

(i) DVD player and DVD video disc information

DVD VIDEO DISCS

This DVD player conforms to NTSC color TV formats. The DVD video disc conforming to another formats such as PAL or SECAM cannot be used.

Region codes: Some DVD video discs have a region code indicating a country where you can use the DVD video disc on this DVD player. If the DVD video disc is not labeled as "ALL" or "1", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "REGION CODE ERROR" appears on the screen. Even if the DVD video disc does not have a region code, there is a case that you cannot use it.

Marks shown on DVD video discs:

NTSC	Indicates NTSC format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

DVD VIDEO DISC GLOSSARY

DVD video discs: Digital versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2 – 7: DVD video discs for children and G-rated movie can be played.

Level 8: All types of the DVD video discs can be played.

Multi-angle feature: You can enjoy the same scene at different angles.

Multi-language feature: You can select a language of the subtitle and audio.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes, see page 238.

Audio: This DVD player can play liner PCM, Dolby digital and MPEG audio format DVD. Other decoded type cannot be played.

Title and chapter: Video and audio programs stored in DVD video disc are divided in parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one piece of movie, one album, or one audio program is assigned as a title.

Chapter: The unit smaller than that of title. A title comprises plural chapters.


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works.

©1992–1997 Dolby Laboratories. All rights reserved.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

"DTS" is a trademark of Digital Theater Systems, Inc.

Audio/video remote controls — — Steering switches

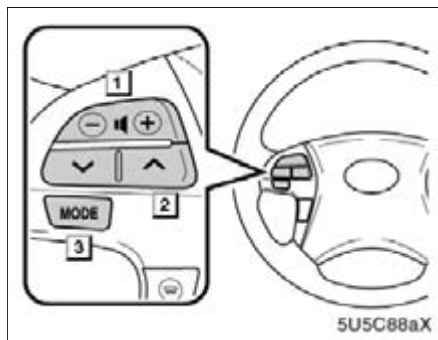

Some parts of the audio/video system can be adjusted with the switches on the steering wheel.

Details of the specific switches, controls, and features are described below.

- 1** Volume control switch
- 2** “^” “v” switches
- 3** “MODE” switch

1 Volume control switch

Push “+” side to increase the volume. The volume continues to increase while the switch is being pressed.

Push “-” side to decrease the volume. The volume continues to decrease while the switch is being pressed.

2 “^” “v” switches

Radio

To select a preset station:

Quickly push and release the “^” or “v” switch. Do this again to select the next preset station.

To seek a station:

Push and hold the “^” or “v” switch until you hear a beep. Do this again to find the next station. If you push either the “^” or “v” switch in seek mode, the seek mode will cancel.

CD changer

Use this button to skip up or down to a different track or file in either direction.

To select a desired track or file:

Quickly push and release the “^” or “v” switch until the track or file you want to play is set. If you want to return to the beginning of the current track or file, push the “v” switch once quickly.

To select a desired disc:

Push and hold the “^” or “v” switch until you hear a beep to change to the next or the previous disc. Repeat this operation until you reach the disc you want to listen to.

Vehicles with rear seat entertainment system —

While the DVD player is in operation, the chapter or track can be changed by pushing the “^” or “v” switch.

Audio/video system operating hints

3 "MODE" switch

Each time you push the "MODE" switch, the system changes the audio mode.

The DVD player will be selectable if a rear seat entertainment system is installed in your vehicle.

To turn the audio/video system on, push the "MODE" switch.

To turn the audio/video system off, push and hold the "MODE" switch until you hear a beep.

NOTICE

To ensure correct audio/video system operations:

- *Be careful not to spill beverages over the audio/video system.*
- *Do not put anything other than a disc into the slot.*
- *Do not put anything other than an appropriate disc into the CD changer or DVD player.*
- *The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/video system which you are listening to. However, this does not indicate a malfunction.*

RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with your radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations — Generally, the effective range of FM is about 40 km (25 miles). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path — FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering — These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping — If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

AM

Fading — AM broadcasts are reflected by the upper atmosphere — especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference — When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static — AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

CARING FOR YOUR CD CHANGER, DVD PLAYER AND DISCS

- Your CD changer is intended for use with 12 cm (4.7 in.) discs only.
- Extremely high temperatures can keep your CD changer and DVD player from working. On hot days, use the air conditioning to cool the vehicle interior before you use the changer and player.
- Bumpy roads or other vibrations may make your CD changer and DVD player skip.
- If moisture gets into your CD changer and DVD player, you may not play even though they appear to be working. Remove the disc from the changer and player and wait until it dries.

CAUTION

CD changers and DVD players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the changers and players correctly.

Audio CDs		
		


CD changer

- Use only discs marked as shown above. The following products may not be playable on your changer.
Copy-protected CDs
CD-ROMs


Audio CDs			
DVD video discs			
Video CDs			

DVD player


- Use only discs marked as shown above. The following products may not be playable on your player.
SACDs
Copy-protected CDs
CD-ROMs
DVD-Rs
DVD+Rs
DVD-RWs
DVD+RWs
DVD-ROMs
DVD-RAMs

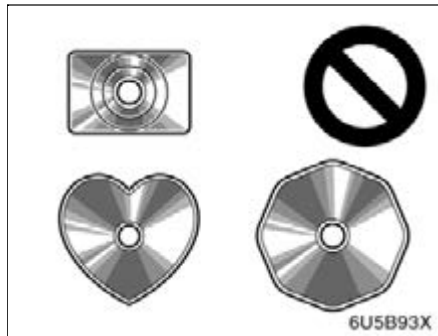

► Special shaped discs

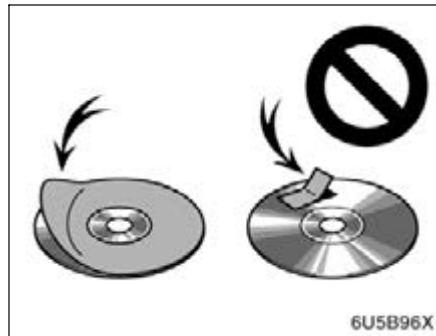


► Labeled discs

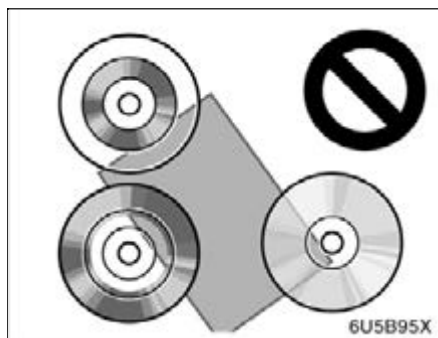


► Transparent/translucent discs

NOTICE
• Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player or changer, or it may be impossible to eject the disc. • This system is not designed for use of Dual Disc. Do not use Dual Disc because it may cause damage to the player or changer.

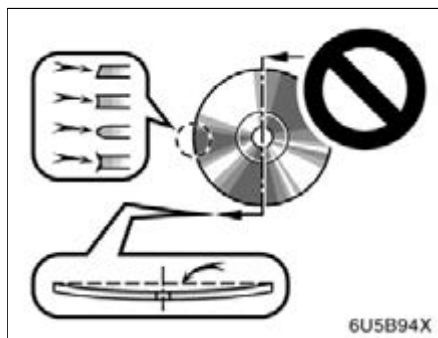

► Low quality discs

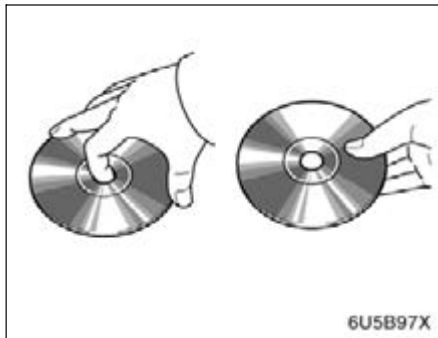

► Correct

► Wrong



- Handle discs carefully, especially when you are inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when you are not using them. Store them in their plastic cases away from moisture, heat, and direct sunlight.

To clean a compact disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

MP3/WMA FILES

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.

The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.

- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma).
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- The player can play only the first session using multi-session compatible CDs.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.
- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz. (The system can play MP3 files with sampling frequencies of 16, 22.05, and 24 kHz. However, the emphasis function is not available for files recorded at these frequencies.)

- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.

Playable bit rates

MP3 files:

MPEG1 LAYER3—64 to 320 kbps


MPEG2 LSF LAYER3—64 to 160 kbps

WMA files:


Ver. 7, 8 CBR—48 to 192 kbps

Ver. 9 CBR—48 to 320 kbps

- The MP3/WMA player does not play back MP3/WMA files from discs recorder using packet write data transfer (UDF format). Discs should be recorded using “pre-mastering” software rather than packet-write software.
- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The MP3 player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if fast-forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA files.
- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than two levels of folders.
- It is possible to play up to 192 folders or 255 files on one disc.

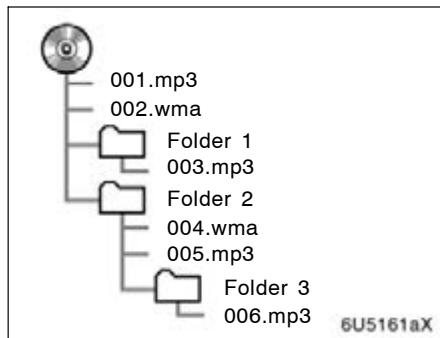

 - The play order of the compact disc with the structure shown on the left is as follows:



CD-R and CD-RW discs

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

TERMS

Packet write—

This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 Tag—

This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

WMA Tag—

WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.

ISO 9660 format—

This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are two levels of regulations.

Level 1:

The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)

Level 2:

The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

m3u—

Playlists created using “WINAMP” software have a playlist file extension (.m3u).

MP3—

MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA—

WMA (Windows Media Audio) is an audio compression format developed by Microsoft. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8, and 9.

SECTION 7

REAR VIEW MONITOR SYSTEM

- [Rear view monitor system](#) 250

Rear view monitor system

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle while backing up. The image is displayed in reverse on the screen. This allows the image to appear in the same manner as that of the rear view mirror.

To display the rear view image on the screen, place the shift lever in the “R” position when the “POWER” switch is in ON mode.

If you move the shift lever out of the “R” position, the screen returns to the previous screen. Operating another function of the navigation system will display another screen.

The rear view monitor system is a supplement device intended to assist back up. When backing up, be sure to check behind and all around the vehicle visually.

CAUTION

- Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear.

Use caution, just as you would when backing up any vehicle.

- Never back up while looking only at the screen. The image on the screen is different from actual conditions. Depicted distances between objects and flat surfaces will differ from actual distance. If you back up while looking only at the screen, you may hit a vehicle, a person or an object. When backing up, be sure to check behind and all around the vehicle visually and with mirrors before proceeding.
- Do not use the system when the back door is not completely closed.
- If the back of the vehicle is hit, the position and mounting angle of the camera may change. Be sure to have the camera's position and mounting angle checked at your Toyota dealer.
- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.


- If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow, or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.
- Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
- Use your own eyes to confirm the vehicle's surroundings, as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle visually and with mirror before proceeding.

NOTICE

When replacing the tires, please consult your Toyota dealer. If you replace the tires, the area displayed on the screen may change.

● Area displayed on screen


Image is displayed approximately level on screen.

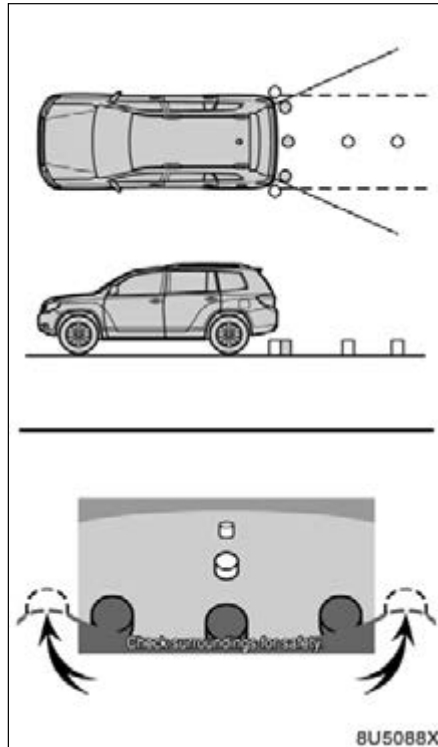

► Corners of bumper


The area detected by the camera is limited. The camera does not detect objects which are close to either corner of the bumper or under the bumper.

REAR VIEW MONITOR SYSTEM

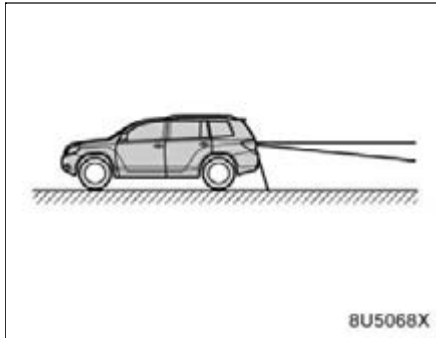

The area displayed on the screen may vary according to vehicle orientation or road conditions.

- The rear view monitor system camera

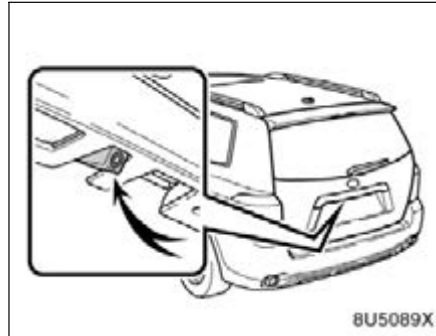

The rear view monitor system camera is located on the back door as shown in the illustration. The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.

In the following cases, it may become difficult to see the images on the screen, even when the system is functioning.

- In the dark (for example, at night)
- When the temperature near the lens is high or low
- When water droplets are adhering to the camera, or when humidity is high (for example, when it rains)
- When foreign matter (for example, snow or mud) is adhering to the camera
- When the camera has scratches or dirt on it
- When the sun or the beam of headlights is shining directly into the camera lens



If a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera, the smear effect* peculiar to the camera may occur.

*: Smear effect—A phenomenon that occurs when a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

REAR VIEW MONITOR SYSTEM

SECTION 8

APPENDIX

- [Limitations of the navigation system](#) 256
- [Map database information and updates](#) 258

Limitations of the navigation system

This navigation system calculates the current vehicle position using satellite signals, various vehicle signals, map data, etc. However, the accurate position may not be shown depending on the satellite condition, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current vehicle position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system will compensate for this most of the time, occasional positioning errors of up to 300 feet (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When your vehicle is receiving signals from the satellites, the "GPS" mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map display. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

(a) Accurate current vehicle position may not be shown in the following cases:

- When driving on a small angled Y-shaped road.
- When driving on a winding road.
- When driving on a slippery road such as in sand, gravel, snow, etc.
- When driving on a long straight road.
- When freeway and surface streets run in parallel.
- After moving by ferry or vehicle carrier.
- When a long route is searched during high speed driving.
- When driving without setting the current position calibration correctly.
- After repeating a change of direction by going forward and backward, or turning on a turntable in the parking lot.
- When leaving a covered parking lot or parking garage.
- When a roof carrier is installed.
- When driving with tire chains installed.
- When the tires are worn.
- After replacing a tire or tires.
- When using tires that are smaller or larger than the factory specifications.
- When the tire pressure in any of the four tires is not correct.

INFORMATION

If your vehicle cannot receive GPS signals, you can correct the current position manually. For information on setting the current position calibration, see "● Current position/tire change calibration" on page 115.

(b) Inappropriate route guidance may occur in the following cases:

- When turning at an intersection off the designated route guidance.
- If you set more than one destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
- When turning at an intersection for which there is no route guidance.
- When passing through an intersection, there is no route guidance.
- During auto reroute, the route guidance may not be available for the next turn to the right or left.
- It may take a long time to operate auto reroute during high speed driving. In auto reroute, a detour route may be shown.
- After auto reroute, the route may not be changed.
- An unnecessary U-turn may be shown or announced.
- A location may have multiple names and the system will announce one or more.
- Some routes may not be searched.
- If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
- Your destination point might be shown on the opposite side of the street.
- When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time or season or other reasons.
- The road and map data stored in your navigation system may not be complete or may not be the latest version.

Map database information and updates —

After replacing the tire, implement the operation described in the “● Current position/tire change calibration”. (See page 115.)

This navigation system uses tire turning data and is designed to work with factory-specified tires for your vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the vehicle's position. The tire pressure also affects the diameter of the tires so please make sure the tire pressure of all four tires is correct.

This system uses the maps of DENSO.

© 2008 DENSO CORPORATION

© 2007 NAVTEQ. All rights reserved.

© 2007 Tele Atlas North America, Inc. All rights reserved. This material is proprietary and the subject of copyright protection and other intellectual property rights owned by or licensed to Tele Atlas North America, Inc. The use of this material is subject to the terms of a license agreement. You will be held liable for any unauthorized copying or disclosure of this material.

Data by infoUSA Copyright © 2007, All Rights Reserved.

© 2007 VISA Corporation

Copyright © CoStar Realty Information, Inc.

The Bullseye Design is a registered trademark of Target Brands, Inc.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT
CAREFULLY BEFORE USING THE
NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT
FOR YOUR COPY OF THE SPATIAL
MAP DATABASE, INCLUDING LOCA-
TION CODES AND RELATED PROD-
UCTS (COLLECTIVELY, THE "DATA-
BASE"), USED IN THE NAVIGA-
TION SYSTEM. BY USING THE NAVIGA-
TION SYSTEM AND THE DATA-
BASE, YOU ACCEPT AND AGREE
TO BE BOUND BY ALL TERMS AND
CONDITIONS SET FORTH BELOW.

LICENSE GRANT

DENSO CORPORATION ("DENSO"),
as a licensed distributor of the
DATABASE, grants to you a
non-exclusive, non-perpetual license
to use your copy of the DATABASE for
your personal use or for your use in
your business' internal operations and
not for any other purpose. This license
does not include the right to grant
sub-licenses.

OWNERSHIP

The DATABASE and the copyrights
and intellectual property and
neighboring rights therein are owned
by Tele Atlas North America, Inc.
("TANA") and its licensors. This
Agreement does not transfer any title
or interest in the DATABASE, except
for the license to use the DATABASE
according and subject to the terms and
conditions of this Agreement. You
shall not alter, obscure or remove any
copyright notices, trademark notices or
other restrictive legends relating to the
DATABASE.

The DATABASE comprises confiden-
tial and proprietary information and
materials of TANA. Accordingly, you
shall hold the DATABASE in confi-
dence and trust. You shall take rea-
sonable steps to protect the DATA-
BASE from misappropriation or mis-
use. You shall not extract stand-alone
data from or publish any part of the DA-
TABASE without the prior written con-
sent of TANA and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in
the specific system for which it was
created. Except to the extent explicitly
permitted by mandatory laws, you may
not extract or reutilize any portion of
the contents of the DATABASE, nor
reproduce, copy, duplicate, modify,
adapt, translate, disassemble,
decompile, or reverse engineer any
portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE
to third parties, except together with
the system for which it was created,
provided that you do not retain any
copy of the DATABASE, and provided
that the transferee agrees to all terms
and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

THE DATABASE IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND DENSO AND TANA (AND THEIR LICENSORS AND SUPPLIERS) EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY DENSO OR TANA (OR ANY OF THEIR LICENSORS, AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS) SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT.

LIMITATION OF LIABILITY

IN NO EVENT SHALL DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT OR YOUR USE OF THE DATABASE, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT WILL THE TOTAL LIABILITY OF DENSO OR TANA (OR THEIR LICENSORS OR SUPPLIERS) EXCEED THE AMOUNTS PAID BY YOU FOR THE DATABASE.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

U.S. GOVERNMENT RIGHTS

If you are an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 227.7202-1 (DOD policy on commercial computer software), FAR52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data – commercial items clause); FAR 52.227-14 Alternates I, II, and III (JUN 1987) (civilian agency technical data and noncommercial computer software clause); and/or FAR 12.211 and FAR 12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Agreement, the construction that provides greater limitations on the Government's rights shall control.

Contractor/manufacturer is Tele Atlas North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643.0330. The DATABASE is ©1984-2007 by Tele Atlas North America, Inc. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the DATABASE is a trade secret and a proprietary commercial product and not subject to disclosure.

If you are an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then you hereby agree to protect the DATABASE from public disclosure and to consider the DATABASE exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this Agreement shall be considered breached and any and all right to retain any copies or to use of the DATABASE shall be terminated and considered immediately null and void. Any copies of the DATABASE held by you shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this Agreement shall be considered terminated and null and void, in its entirety, and any and all copies of the DATABASE shall immediately be destroyed.

END USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2007 NAVTEQ. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®.

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2007. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by DENSO and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

APPENDIX

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use", and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/SUPPLIER) NAME: NAVTEQ
CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS: 425 West Randolph Street, Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this Data was provided.

©2007 NAVTEQ – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

END USER NOTICE**PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM**

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by infoUSA Inc. ("infoUSA"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the infoUSA POI Data shall be retained by infoUSA.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOUSA MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of liability

EITHER INFOUSA OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.


END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

There are two types of areas available for route guidance. In one type of area, primarily around metropolitan centers, detailed route guidance is available for the entire area. In the other type of area, all roads are displayed on the map but route guidance is limited. The navigation route might lack precision because the data (no right turns, one-way traffic, etc.) is not complete. It is still possible to reach the destination by following the arrow direction and distance as shown on the bottom left of the screen. The arrow points in the direction of the destination. The distance shown is as measured in a straight line from the current vehicle position to the destination area.

In order to provide you with as accurate map information as possible, we are always gathering information such as on road repairs and carrying out on-site investigations. However, the names of roads, streets, facilities, and their locations are often changed. In some places, construction on roads may be in progress. For that reason, information on some areas in this system might be different from the actual location.

— Changing the map DVD-ROM

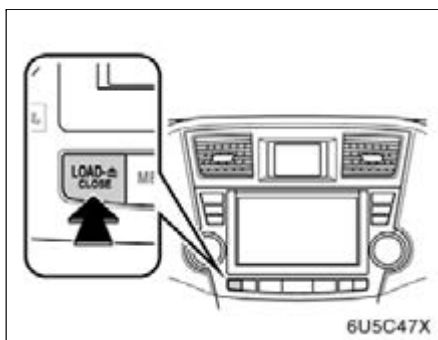

1. Push the “LOAD·▲” button. The “LOAD·EJECT” screen appears.



2. Touch “MAP ▲”. The display opens and the map disc is ejected.



3. Insert the new map DVD-ROM with the label side up.

4. Push the “LOAD·▲” button to close the display.

The map database is normally updated once a year. Contact your dealer for information about the availability and pricing of an update.

CAUTION

- Do not place anything on the opened display, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in the case of an accident or sudden stopping while driving, keep the display closed.
- Take care not to jam your hand while the display is moving. Otherwise, you could be injured.

NOTICE


Do not obstruct the display while it is moving. It could damage your navigation system.

INFORMATION

Under extremely cold conditions, the display may react slowly or operation sound may become louder.

APPENDIX

- To confirm the database version and disc coverage area

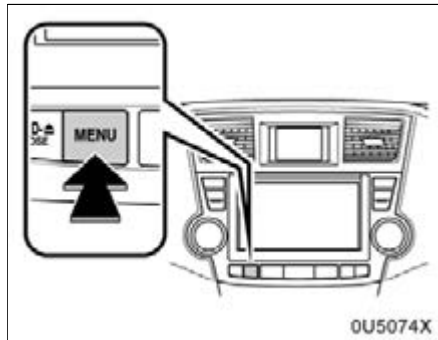

1. Push the "MENU" button.



2. Touch "Map DVD".



Make sure the version of the database on this screen.

To display the disc coverage area, touch **"Covered Area"**. Confirm the covered area on the screen.

Contact your dealer to find out if there is a more recent update released.

INDEX

For navigation system function, please also refer to the “**Navigation system function index**” on page 18.

INDEX

Numbers/Symbols

- ? button 40,86,87
- 3 Routes selection 63

A

- Adaptive volume control 149
- Adding a memo 124
- Adding destinations 72
- Address button 40
- Alphabet key 24
- AM-SAT button 186
- Angle mark 230
- Area to avoid 101
- Arrow screen 33,68
- Audio language 230
- Audio remote controls 240
- Auto answer 151
- Auto voice guidance 87,113
- Automatic transition 180
- Automatic volume settings for
 - high speed 149
- AUX adapter 192

B

- BASS 190
- Beep setting 182
- Bluetooth® 127
- Bluetooth® information 170
- Brightness 178
- Building information 36

C

- Calendar with memo 122
- Calibration 87
- Call by dial 135
- Call by dialed numbers 135
- Call by phone book 135
- Call by POI 140
- Call by received calls 136
- Call by speed dial 137
- Call by voice recognition 138
- Call on the Bluetooth® phone 134
- Categories 52
- CAUTION screen 22
- CD changer operation 204
- Cellular phone 127
- Change "Area Size" 105
- Change "Icon" 95
- Change "Location" 98,104
- Change "Name" 97,103
- Change "Phone #" 99

- Change "Quick Access" 96
- Change button 40
- Change the route 62
- Changing the angle 230
- Changing the audio language 229
- Changing the map DVD-ROM 267
- Changing the subtitle language 229
- Chapter 239
- City center 53
- City name 47,50
- City to search 47,50
- Color 177
- Command list 176
- Compass mode 35
- Compass mode screen 33
- Connecting a Bluetooth® phone 133
- Contrast 177
- Coordinates button 40
- Current position as the search point 53
- Current position display 28
- Current position/tire change calibration 115
- Cursor position as a destination 29
- Cursor position as a memory point 30

D

- Database version 268
- Dealer setting 120
- Default 87
- Delete personal data 181
- Deleting "Quick Access" 97
- Deleting a Bluetooth® phone 173
- Deleting a group name 163
- Deleting all of the speed dial 145
- Deleting all the group name 163
- Deleting all the phone data 160
- Deleting all the speed tone 148
- Deleting area to avoid 105
- Deleting destinations 73
- Deleting home 101
- Deleting memory points 99
- Deleting previous points 106
- Deleting the phone data 158
- Deleting the speed dial
 - individually 145
- Deleting the speed tone
 - individually 148
- DEST button 10,40,41
- Destination information 32
- Destination screen 40
- Destination search 41
- Destination search by "Address" 45
- Destination search by "Coordinates" 59
- Destination search by "Emergency" 55

- Destination search by
 "Freeway Ent./Exit" 58
Destination search by "Intersection" 57
Destination search by "Map" 57
Destination search by "Memory" 56
Destination search by "Phone #" 60
Destination search by
 "POI Category" 52
Destination search by "POI Name" 49
Destination search by "Previous" 56
Destination search by home 44
Destination search by quick access 44
Detour setting 75
Dialing by name 138
Disc coverage area 268
DISC·AUX button 186
DISP button 10
Display building shapes 87
Display of building shape 111
Display POI icons 78,87,110
Displaying DVD controls 226
Displaying the title and name 201
Displaying video CD controls 235
Distance 87
Distance and time to destination 10,71
Distance unit 107
Dual map 34
Dual map screen 33
DVD controls 227
DVD language 230
DVD player and DVD video disc
 information 238
DVD player operation 216
DVD video disc glossary 239
DVD video discs 238
- E**
Edit "Dealer" or "Contact" 121
Edit "Location" 121
Edit "Phone #" 122
Editing a group name 162
Editing a memo 125
Editing area to avoid 102
Editing memory points 94
Editing the phone data 157
Editing the speed tone 147
Ejecting disc 217
Ejecting discs 205
Emergency button 40
Enter a Bluetooth® phone 131
Estimated arrival time 71
Estimated travel time 71,87,107
- F**
FILE button 212,222
FM 1·2 button 186
FOLDER LIST button 211,221
Foot print map 36
Foot print map button 10
Freeway Ent./Exit button 40
Freeway exit information screen 66
Freeway information screen 33
Function button display screen 186
Function help 27
- G**
GPS 256
GPS mark 10
Guidance screen for the freeway 67
Guidance screen on the freeway 33
Guiding the route 16
- H**
Hands-free system 127
Heading-up 10
Heading-up symbol 37
Help 27
Help screen 176
HFP (Hands Free Profile) 127
Home 12,100
Home touch-screen button 40
House number 45
- I**
If the changer malfunctions 237
If the player malfunctions 215
Incoming calls 136
INFO button 10
Information about the icon 31
Information items 119
Initial screen 22
Initializing the Bluetooth® settings 172
Inputting letters and numbers 24
Inserting disc 216
Inserting discs 204
Intersection button 40
Intersection guidance screen 33,67

INDEX

K

- Key layout 108
- Keyboard layout 87

L

- Last 5 cities 48,51
- Limitations of the navigation system 256
- List 25
- List all categories button 52,54
- List screen operation 24
- Listening to satellite radio 198
- Listening to the radio 193
- LOAD-EJECT/CLOSE button 186,204,205
- Local POI list 80

M

- Maintenance information 22,118
- Maintenance information setting 118
- Map button 40
- Map database information and updates 258
- Map DVD button 86
- Map scale 35
- Map screen operation 28
- Map view 78
- Map view button 10
- MAP/VOICE button 10,28,29
- Mark button 10
- Marks shown on DVD video discs 238
- Memo information 23
- Memo list 125
- Memory button 40
- Memory point information 32
- Memory point names 98
- Memory point screen 93
- Memos for a specified period of time 126
- MENU button 10,86,87
- Menu screen 86
- Message 195
- Microphone 127,174
- MID 190
- MP3/WMA 210,221
- MSG button 195
- My places 92
- My Places button 86

N

- Names of areas to be avoided 104
- Nearest 5 cities 48,51
- North-up 10
- North-up symbol 37
- Notifying traffic restriction 112
- Numbers and symbols 25

O

- Off function 10,87,110
- On route button 54
- One-touch scroll 29
- Operating a DVD video disc 225
- Operating a MP3/WMA disc 210,221
- Operating a video CD 235
- Operating an audio CD 207,218
- Operating guide 176
- OPP (Object Push Profile) 127
- Orientation of the map 37
- Outgoing calls 135
- Overview buttons and guidance screen 10

P

- Parental lock 230
- Phone # button 40
- Phone book 154,157,158
- Phone book lock 166
- Playing a disc 206,218
- Playing a DVD disc 226
- Playing a MP3/WMA disc 210,221
- Playing a video CD 235
- Playing an audio CD 207,218
- POI as a destination 80
- POI Category button 40
- POI category change 110
- POI information 31
- POI Name button 40
- POIs near the search point 54
- POIs to be displayed 78
- Pop-up message 87,114
- Portable audio players 192
- Position/direction calibration 115
- Preset memory points 14
- Presetting a satellite radio channel 199
- Presetting a station 194
- Previous button 40
- PWR/VOL knob 186

Q

- Quick access 14
- Quick access touch-screen buttons ... 40

R

- Radio data system 195
- Radio ID 198
- Radio operation 193,197
- RAND button 209,214,220,224
- RDS 195
- Rear system lock 181
- Rear view monitor system 250
- Receive on the Bluetooth® phone 141
- Receiving call display 151
- Reconnecting the
 - Bluetooth® phone 134
- Region codes 238
- Registering a group name 161
- Registering area to avoid 101
- Registering home 12,100
- Registering memory points 93
- Registering preset memory points 14
- Registering the phone book data 154
- Registering the speed dial 144
- Registering the speed tone 146
- Reordering destinations 72
- Resume guidance 89
- Resume guidance button 86
- Route button 10
- Route guidance screen 66
- Route overview 81
- Route preference 62,77
- Route preview 82
- Route trace 83
- RPT button 209,214,220,224

S

- Satellite radio channel category 199
- Satellite tuner 197
- Scale indicator 10
- SCAN button 186
- Screen adjustment 177
- Screen configuration button 10
- Screen layout function 110
- Screen off 177
- Screen scroll operation 29
- Screen setting 179
- Search condition 74
- Search point from destinations 54
- Search point via the map screen 53
- Searching by title 228
- Searching by track 237
- Searching for a desired file 213,223

- Searching for a desired folder 214,223
- Searching for a desired
 - track or a disc 209,220
- SEEK/TRACK button 186
- Select user button 86
- Selecting a desired disc 207
- Selecting a desired file 212,222
- Selecting a desired folder 211,221
- Selecting a desired track 208,219
- Selecting a group icon 162
- Selecting a language 183
- Selecting a menu item 228
- Selecting a satellite radio channel 200
- Selecting a station 194
- Selecting the search area 42
- Sending a tone 140
- Sending a tone by the speed tone 143
- Setting and deleting destination 72
- Setting home as the destination 17
- Setting route 74
- Setup 106
- Setup button 86
- Setup menu 230
- Setup screen 87
- Single map 34
- Single map screen 33
- Sort 26
- Sound icons 96
- Speech command system 174
- Speech command system indicator 10
- Speed dial 137,144,145
- Speed tone 143,146,147,148
- Starting route from adjacent road 77
- Starting route guidance 60
- Steering switches 240
- Street name 45
- Subtitle language 230
- Suspend guidance 88
- Suspend guidance button 86
- Suspending and resuming guidance ... 88
- Switch color 180
- Switching the screens 33

T

- Talk on the Bluetooth® phone 141
- Talk switch 138,174
- Telephone switch 127
- Time zone 87,109
- Tire change calibration 116
- Title 239
- Tone 140,177
- Tone and balance 190
- Touch screen operation 23
- TRACK LIST button 208,219
- Traffic announcement 197

INDEX

Traffic restrict. notification	87
Transfer phonebook	153
Transferring a telephone number	153
TREB	190
TUNE/FILE (AUDIO) knob	186
Turn list screen	33,68
Turning the audio system	
on and off	188
TYPE SCAN button	200
TYPE SEEK button	195
Typical voice guidance prompts	69

U

User selection	90
----------------------	----

V

Video CD controls	236
Viewer restrictions	239
Voice guidance in all modes	87,113
Voice recognition guidance	87,112
Voice tag	138
Volume	89
Volume button	86

X

XM® Satellite Radio broadcast	197
-------------------------------------	-----

Z

Zoom in button	10
Zoom out button	10

Introduction

Thank you for your purchase of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes about 75 Point of Interest categories to allow you to easily select destinations such as restaurants and banks. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there. The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in approaching a fork or intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.



**HIGHLANDER_HV_Navi_U
(L/O 0808)**

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on the satellite condition, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 256 through 258.

TOYOTA MOTOR CORPORATION

Important information about this manual

For safety reasons, this manual indicates items requiring particular attention with the following marks.

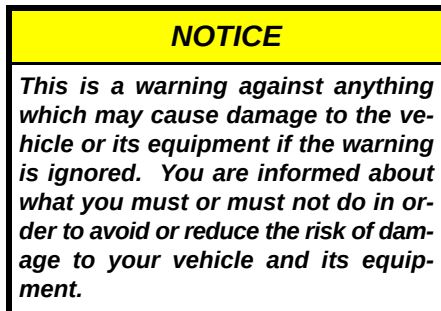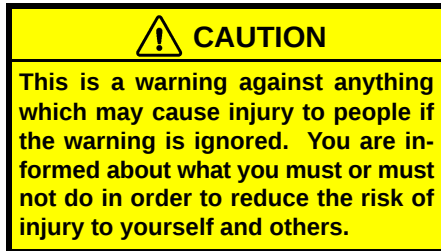

Safety Instruction



To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable touch-screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.

HIGHLANDER_HV_Navi_U (L/O 0808)



CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While you are driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may provide incorrect information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current vehicle position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instruction from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. **Under no circumstances is this system a substitute for the driver's personal judgement.**

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

Table of Contents

Quick guide —

— Overview buttons and guidance screen	10
— Registering home	12
— Registering preset memory points (Quick access)	14
— Operation flow: guiding the route	16
— Setting home as the destination	17
Navigation system function index	18

Quick
Guide

1 Basic Functions

〈Basic information before operation〉

Initial screen	22
Touch screen operation	23
Inputting letters and numbers/list screen operation	24
Function help	27

Map screen operation	28
Current position display	28
Screen scroll operation	29
Switching the screens	33
Map scale	35
Foot print map	36
Orientation of the map	37

2 Destination Search

Quick reference ("Destination" screen)	40
Destination search	41
Selecting the search area	42
Destination search by Home	44
Destination search by Quick access	44
Destination search by "Address"	45
Destination search by "POI* Name"	49
Destination search by "POI* Category"	52
Destination search by "Emergency"	55
Destination search by "Memory"	56
Destination search by "Previous"	56
Destination search by "Map"	57
Destination search by "Intersection"	57
Destination search by "Freeway Ent./Exit"	58
Destination search by "Coordinates"	59
Destination search by "Phone #"	60
Starting route guidance	60

3 Route Guidance

Route guidance screen	66
Typical voice guidance prompts	69
Distance and time to destination	71
Setting and deleting destination	72
Adding destinations	72
Reordering destinations	72
Deleting destinations	73
Setting route	74
Search condition	74
Detour setting	75
Route preference	77
Starting route from adjacent road	77
Map view	78
Display POI* icons	78
Route overview	81
Route preview	82
Route trace	83

*: Point of Interest

4 Advanced Functions

〈Descriptions of functions for more effective use〉

Quick reference ("Menu" screen)	86
Quick reference ("Setup" screen)	87
Suspending and resuming guidance	88
Volume	89
User selection	90
My places	92
Registering memory points	93
Editing memory points	94
Deleting memory points	99
Registering home	100
Deleting home	101
Registering area to avoid	101
Editing area to avoid	102
Deleting area to avoid	105
Deleting previous points	106
Setup	106

5 Other Functions

Maintenance information	118
Maintenance information setting	118
Dealer setting	120
Calendar with memo	122
Adding a memo	124
Editing a memo	125
Memo list	125
Trip information	127
Hands-free system (for cellular phone)	127
Speech command system	174
Help screen	177
Screen adjustment	178
Screen setting	180
Beep setting	183
Select language	183

6 Audio/video System
Quick reference 186
Using your audio/video system 187
Audio/video remote controls 240
Audio/video system operating hints 241

7 Rear View Monitor System
Rear view monitor system 250


8 Appendix
Limitations of the navigation system 256
Map database information and updates 258

Index 269

For information about the optional “**Rear seat entertainment system**”, please refer to the *Owner’s Manual*.

HIGHLANDER_HV_Navi_U
(L/O 0808)


Quick guide — — Overview buttons and guidance screen

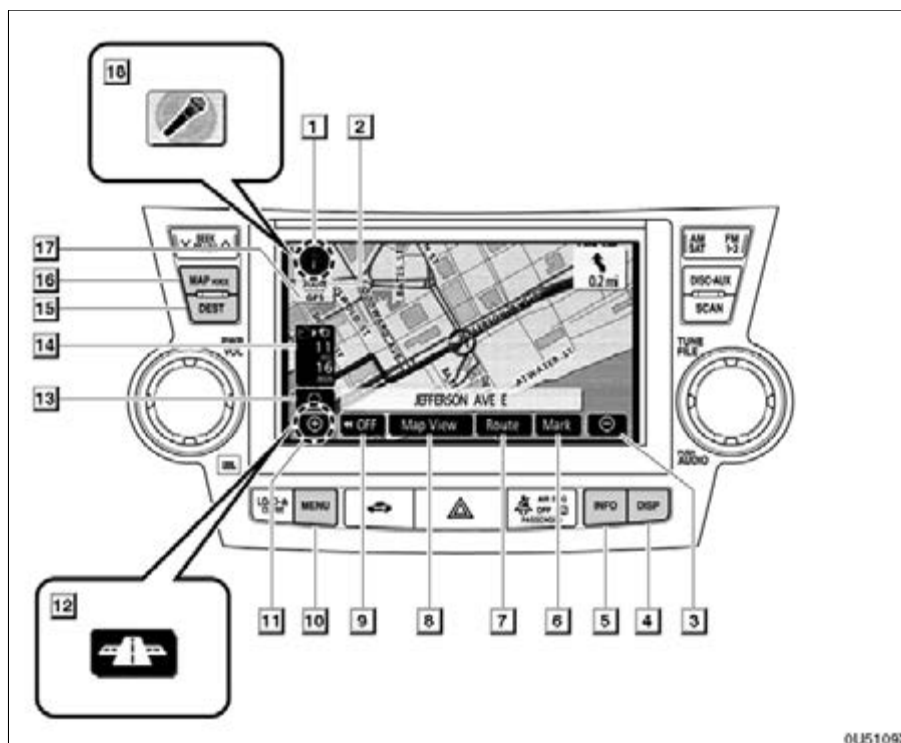

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	37
2	Scale indicator	This figure indicates the map scale.	35
3	Zoom out button	Touch this button to reduce the map scale.	35
4	“DISP” button	Push this button to display the “Display” screen.	178
5	“INFO” button	Push this button to display the “Information” screen.	118, 122, 132, 180, 183
6	“Mark”	Touch this button to register the current position or the cursor position as a memory point.	30
7	“Route”	Touch this button to change the route.	72, 74

No.	Name	Function	Page
8	“Map View”	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	78, 81, 82, 83
9	“◀◀OFF”	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “ON▶▶” .	110
10	“MENU” button	Push this button to display the “Menu” screen.	12, 14, 88, 89, 90, 92, 106, 268
11	Zoom in button	Touch this button to magnify the map scale.	35
12	Foot print map button	Touch this button to display the foot print map and the building information.	36
13	Screen configuration button	Touch this button to change the screen mode.	33
14	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	71
15	“DEST” button	Push this button to display the “Destination” screen.	16, 17, 40, 41
16	“MAP/VOICE” button	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	28, 70
17	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	256
18	Speech command system indicator	The microphone is shown by pushing the talk switch. The speech command system can be operated while this indicator is shown.	174

— Registering home

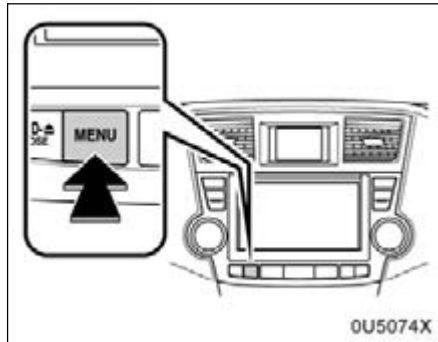

1 Push “MENU” button.



2 Touch “My Places”.



3 Touch “Register” of the home.



4 There are 12 different methods to search your home.

See “Destination search” on page 41.



5 Touch "Enter".

The "Memory Point" screen is displayed.




6 Touch "OK".

Registration of home is complete.

You can change the icon, quick access, name, location and phone number. (See " — Editing memory points" on page 94.)

— Registering preset memory points (Quick access)

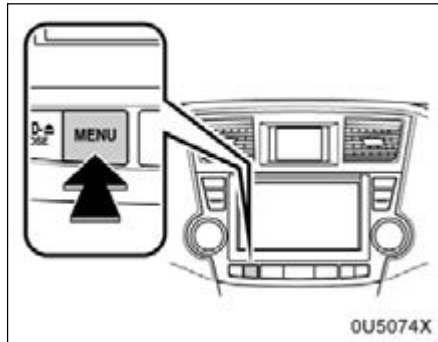

1 Push “MENU” button.



2 Touch “My Places”.



3 Touch “Register” of the memory points.



4 There are 13 different methods to search preset memory points.

See “Destination search” on page 41.



5 Touch “Enter”.

The “Memory Point” screen is displayed.



6 Touch “Quick Access”.



7 Touch one of preset buttons 1 to 5.




8 Touch “OK”.

Registration of preset memory points is complete.

You can change the icon, quick access, name, location and phone number. (See “ — Editing memory points” on page 94.)

The registered points can be used on the “Destination” screen. (See “ — Destination search by Quick access” on page 44.)

— Operation flow: guiding the route

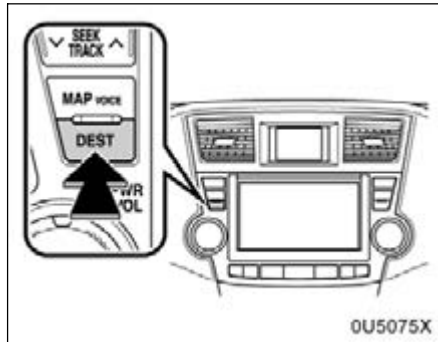

1 Push “DEST” button.



2 There are 13 different methods to search destinations.

See “Destination search” on page 41.



3 Touch “Enter”.

The navigation system performs a search for the route.




4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 60.)

5 Guidance to the destination is given via voice and on the guidance screen.

— Setting home as the destination

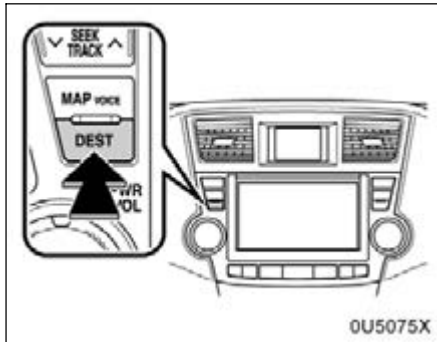


1 Push “DEST” button.



2 Touch .

The  can be used if your home has been registered. (To register “Home”, see “— Registering home” on page 100.)

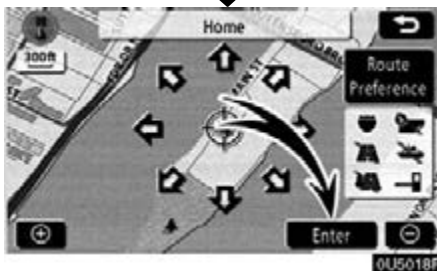

3 Touch “Enter”.

The navigation system performs a search for the route.



4 Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 60.)

5 Guidance to the destination is given via voice and on the guidance screen.

Navigation system function index

〈Map〉

Displaying maps	Page
Viewing the map screen	10
Displaying the current vehicle position	28
Viewing the current position vicinity map	29
Changing the scale	35
Changing the map orientation	37
Displaying POIs*	78
Displaying the estimated travel/arrival time to the destination	71
Selecting the dual map screen	33
Viewing foot print map	36
Deleting map screen touch-screen buttons	110
Searching destination	Page
Searching the destination (by home, POI*, phone #, etc.)	41
Changing the search area	42
Operating the map location of the selected destination	60

〈Route guidance〉

Before starting route guidance	Page
Setting the destination	60
Viewing alternative routes	60
Starting route guidance	60
Before starting or during route guidance	Page
Viewing the route	60
Adding destinations	72
Changing the route	74
Displaying the estimated travel/arrival time to the destination	71

*: Point(s) of Interest

**HIGHLANDER_HV_Navi_U
(L/O 0808)**

During route guidance	Page
Suspending route guidance	88
Adjusting route guidance volume	89
Deleting the destination	73
Displaying the entire route map	81

〈Useful functions〉

Memory points	Page
Registering your own memory points	92
Marking icons on the map	92
Information	Page
Displaying vehicle maintenance timing	118
Displaying the calendar	122
Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	132
Making a call on the Bluetooth® phone	135
Receiving a call on the Bluetooth® phone	141
Speech command system	Page
Operating the system with your voice	174

HIGHLANDER_HV_Navi_U
(L/O 0808)