

1	QUICK GUIDE	11
2	BASIC FUNCTION	29
3	NAVIGATION SYSTEM	73
4	AUDIO/VISUAL SYSTEM	145
5	VOICE COMMAND SYSTEM	317
6	INFORMATION	331
7	PERIPHERAL MONITORING SYSTEM	335
8	PHONE	361
9	LEXUS ENFORM	403
10	12.3-INCH DISPLAY	437
	INDEX	443

About the following equipment, see the "Owner's Manual".

- Air conditioning
- Fuel consumption
- Energy monitor (LS600hL)
- Vehicle customization settings
- Lexus night view

Introduction

NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL

This manual explains the operation of the system. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of the system differ depending on whether the functions and/or a contract existed and the map data available at the time of producing this document.

Please be aware that the content of this manual may be different from the system in some cases, such as when the system's software is updated.

NAVIGATION SYSTEM (WITH NAVIGATION FUNCTION)

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to page 140.

TOYOTA MOTOR CORPORATION

IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.

CAUTION

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE


- This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

SYMBOLS USED IN ILLUSTRATIONS



Safety symbol


The symbol of a circle with a slash through it means “Do not”, “Do not do this” or “Do not let this happen”.

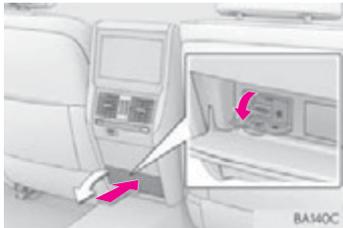

Arrows indicating operations

-  Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
-  Indicates the outcome of an operation (e.g. a lid opens).

HOW TO READ THIS MANUAL

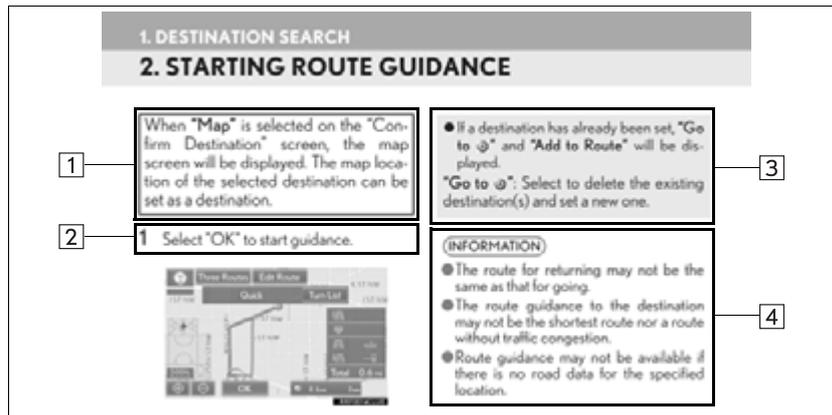

No.	Name	Description
1	Operational Outlines	An outline of the operation is explained.
2	Main Operations	The steps of an operation are explained.
3	Related Operations	A main operation's supplementary operations are described.
4	Information	Useful information for the user is described.

INFORMATION FOR HYBRID VEHICLES IS WRITTEN IN BRACKETS NEXT TO THE INFORMATION FOR GASOLINE VEHICLES

Different writing styles for gasoline and hybrid vehicles

Example

When the engine*1 <power>*2 switch is in ACCESSORY or IGNITION ON*1 <ON>*2 mode, the initial screen will be displayed and the system will begin operating.

*1: Vehicles with gasoline engine

*2: Vehicles with hybrid system

SAFETY INSTRUCTION (WITH NAVIGATION FUNCTION)

To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

SAFETY INSTRUCTION (WITHOUT NAVIGATION FUNCTION)

To use this system in the safest possible manner, follow all the safety tips shown below.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed.



CAUTION

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.

TABLE OF CONTENTS

<p>1 QUICK GUIDE</p> <p>1. BASIC FUNCTION..... 12 Remote Touch.....12 “Menu” SCREEN14</p> <p>2. QUICK REFERENCE..... 18 “Setup” SCREEN.....18 “Information” SCREEN.....20</p> <p>3. NAVIGATION OPERATION 22 REGISTERING HOME.....22 REGISTERING PRESET DESTINATIONS.....23 OPERATION FLOW: GUIDING THE ROUTE24 SETTING HOME AS THE DESTINATION.....25</p> <p>4. FUNCTION INDEX..... 26 FUNCTION INDEX.....26</p> <p>2 BASIC FUNCTION</p> <p>1. BASIC INFORMATION BEFORE OPERATION 30 INITIAL SCREEN30 HOW TO USE THE Remote Touch32 ENTERING LETTERS AND NUMBERS/ LIST SCREEN OPERATION.....34 SCREEN ADJUSTMENT38</p> <p>2. Bluetooth® SETTINGS..... 40 REGISTERING/CONNECTING Bluetooth® DEVICE.....40 SETTING Bluetooth® DETAILS48</p> <p>3. OTHER SETTINGS 57 GENERAL SETTINGS57 VOICE SETTINGS.....65 VEHICLE SETTINGS.....67</p>	<p>3 NAVIGATION SYSTEM</p> <p>1. BASIC OPERATION..... 74 QUICK REFERENCE.....74 MAP SCREEN OPERATION77 MAP SCREEN INFORMATION.....85 TRAFFIC INFORMATION.....90</p> <p>2. DESTINATION SEARCH..... 93 DESTINATION SEARCH SCREEN93 SEARCH OPERATION95 STARTING ROUTE GUIDANCE106</p> <p>3. ROUTE GUIDANCE..... 110 ROUTE GUIDANCE SCREEN110 TYPICAL VOICE GUIDANCE PROMPTS.....116 EDITING ROUTE117</p> <p>4. MEMORY POINTS 122 MEMORY POINTS SETTINGS.....122</p> <p>5. SETUP 132 DETAILED NAVIGATION SETTINGS.....132 TRAFFIC SETTINGS.....137</p> <p>6. TIPS FOR THE NAVIGATION SYSTEM 140 GPS (GLOBAL POSITIONING SYSTEM)140 MAP DATABASE VERSION AND COVERED AREA143</p>
---	--

4 AUDIO/VISUAL SYSTEM

1. BASIC OPERATION 148
QUICK REFERENCE 148
SOME BASICS..... 150

2. RADIO OPERATION 157
AM/FM RADIO 157
XM Satellite Radio 168
INTERNET RADIO 175

3. MEDIA OPERATION 176
CD..... 176
DVD..... 181
USB MEMORY 187
iPod..... 191
Bluetooth® AUDIO 197
AUX 203
VTR..... 206

4. AUDIO/VISUAL REMOTE CONTROLS 209
STEERING SWITCHES..... 209
REAR SEAT AUDIO CONTROLS 212

5. SETUP 215
AUDIO SETTINGS..... 215

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM 221
OPERATING INFORMATION..... 221

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES 233
REAR SEAT ENTERTAINMENT SYSTEM FEATURES..... 233
SOME BASICS..... 236

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION..... 245

AM/FM/SAT RADIO..... 245
CD 246
VIDEO CD..... 250
DVD (DVD VIDEO AND AVCHD™ DISC)..... 253
Blu-ray Disc™ (BD-Video AND BDAV)..... 261
USB MEMORY 269
iPod..... 272
Bluetooth® AUDIO 275
SD CARD..... 278
EXTERNAL DEVICES 291

9. SETUP 292

REAR SEAT ENTERTAINMENT SYSTEM SETTINGS 292

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM..... 295

OPERATING INFORMATION 295

5 VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION..... 318

VOICE COMMAND SYSTEM..... 318
CASUAL SPEECH RECOGNITION..... 324
COMMAND LIST 325

2. MOBILE ASSISTANT OPERATION..... 329

MOBILE ASSISTANT 329

6 INFORMATION

1. INFORMATION DISPLAY 332

RECEIVING DOPPLER WEATHER INFORMATION..... 332
DATA SERVICES SETTINGS..... 334

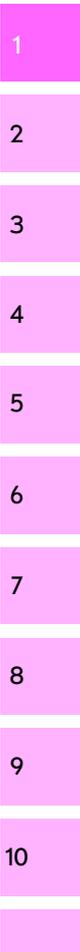


TABLE OF CONTENTS

7 PERIPHERAL MONITORING SYSTEM

1. LEXUS PARKING ASSIST MONITOR	336
LEXUS PARKING ASSIST MONITOR.....	336
ESTIMATED COURSE LINE DISPLAY MODE.....	341
PARKING ASSIST GUIDE LINE DISPLAY MODE.....	343
LEXUS PARKING ASSIST MONITOR PRECAUTIONS.....	345
THINGS YOU SHOULD KNOW.....	350
2. INTUITIVE PARKING ASSIST	352
INTUITIVE PARKING ASSIST.....	352
INTUITIVE PARKING ASSIST SETTING.....	359

8 PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)	362
QUICK REFERENCE.....	362
SOME BASICS.....	363
CALLING ON THE Bluetooth® PHONE.....	367
RECEIVING ON THE Bluetooth® PHONE.....	373
TALKING ON THE Bluetooth® PHONE.....	374
Bluetooth® PHONE MESSAGE FUNCTION.....	377
2. SETUP	383
PHONE/MESSAGE SETTINGS.....	383
3. WHAT TO DO IF...	397
TROUBLESHOOTING.....	397

9 LEXUS ENFORM

1. LEXUS ENFORM-OVERVIEW	404
FUNCTIONAL OVERVIEW.....	404
TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE.....	406
TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM.....	410
TYPE C: FUNCTION ACHIEVED BY USING DCM.....	413
2. LEXUS ENFORM OPERATION	414
LEXUS Enform Remote.....	414
LEXUS App Suite.....	415
LEXUS Enform Destinations.....	425
Lexus Insider.....	430
3. SETUP	434
LEXUS App Suite SETTINGS.....	434

10 12.3-INCH DISPLAY

1. 12.3-INCH DISPLAY OPERATION	438
12.3-INCH DISPLAY-OVERVIEW.....	438
USING "Side Display".....	440

INDEX

ALPHABETICAL INDEX	444
---------------------------------	------------

1

QUICK GUIDE

1 BASIC FUNCTION

- 1. Remote Touch..... 12
- 2. "Menu" SCREEN..... 14
 - STATUS DISPLAY..... 16

2 QUICK REFERENCE

- 1. "Setup" SCREEN..... 18
- 2. "Information" SCREEN..... 20

3 NAVIGATION OPERATION

- 1. REGISTERING HOME..... 22
- 2. REGISTERING PRESET DESTINATIONS..... 23
- 3. OPERATION FLOW: GUIDING THE ROUTE..... 24
- 4. SETTING HOME AS THE DESTINATION..... 25

4 FUNCTION INDEX

- 1. FUNCTION INDEX..... 26

1

2

3

4

5

6

7

8

9

10


No.	Name	Function	Page
1	"MENU" button	Press to display the "Menu" screen.	14
2	"∧·∨" button	Press to scroll the list screen and to change the scale of the map*.	32, 36, 78
3	"MAP/VOICE" button	Press to display the current position, cancel the screen scroll, start guidance, and repeat a voice guidance.	74, 77
4	Remote Touch knob	Move in the desired direction to select a function, letter and screen button. Press to enter the selected function, letter or screen button.	32
5	 button	Press to display the compass mode screen.	—

*: With navigation function

1. BASIC FUNCTION

2. "Menu" SCREEN

Press the "MENU" button on the Remote Touch to display the "Menu" screen.

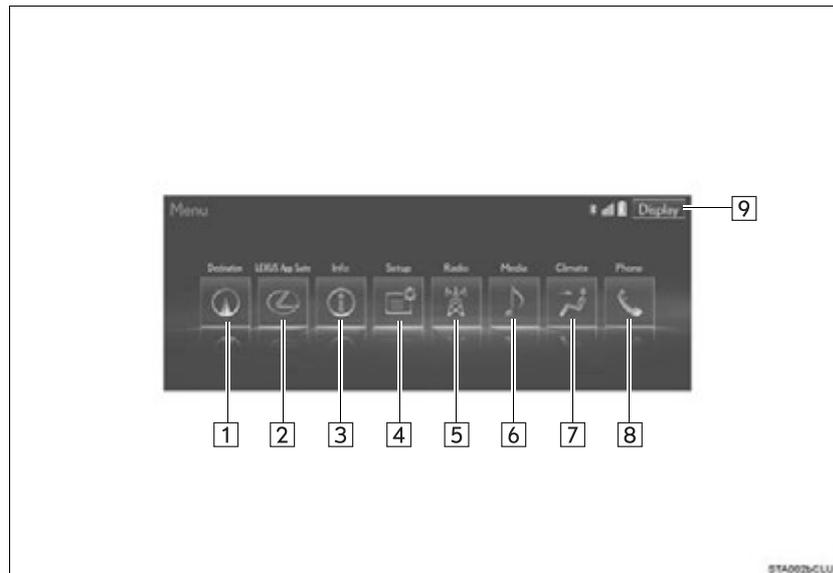

No.	Function	Page
1*	Select to display the "Destination" screen.	93
2*	Select to display the "LEXUS App Suite" screen.	415
3	Select to display the "Information" screen.	20
4	Select to display the "Setup" screen.	18
5	Select to display the radio control screen.	148
6	Select to display the media control screen.	
7	Select to display the air conditioning control screen.	"Owner's Manual"
8	Select to display the phone top screen.	362
9	Select to adjust the contrast and brightness of the screens, turn the screen off, etc.	38

*: With navigation function

INFORMATION

- When an interruption screen is being displayed on the "Side Display", the "Menu" screen will be shown on the "Main Display". (→P. 441)

STATUS DISPLAY

The condition of the Bluetooth® connection, as well as the level of reception and the amount of cellular phone battery charge left, are displayed on the status bar. This status bar is always shown on all modes.



FAV001BCLUS


No.	Indicators	Conditions
1	The condition of the Bluetooth® connection	<p>No connection ↔ Poor ↔ Good</p> <ul style="list-style-type: none"> An antenna for the Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places: The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box). The cellular phone is touching or is covered with metal materials. Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.

No.	Indicators	Conditions
2	The level of reception	  <p>Poor ←————→ Excellent</p> <ul style="list-style-type: none"> • The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have. When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed. • "Rm" is displayed when receiving in a roaming area. While roaming, display "Rm" top-left on the icon. • The receiving area may not be displayed depending on the type of phone you have.
3	The amount of battery charge left	  <p>Empty ←————→ Full</p> <ul style="list-style-type: none"> • The amount displayed does not always correspond with the amount displayed on the Bluetooth[®] device. The amount of battery charge left may not be displayed depending on the type of the Bluetooth[®] device connected. This system does not have a charging function.

2. QUICK REFERENCE

1. "Setup" SCREEN

The items shown on the "Setup" screen can be set. Press the "MENU" button on the Remote Touch, then select "Setup" to display the "Setup" screen.

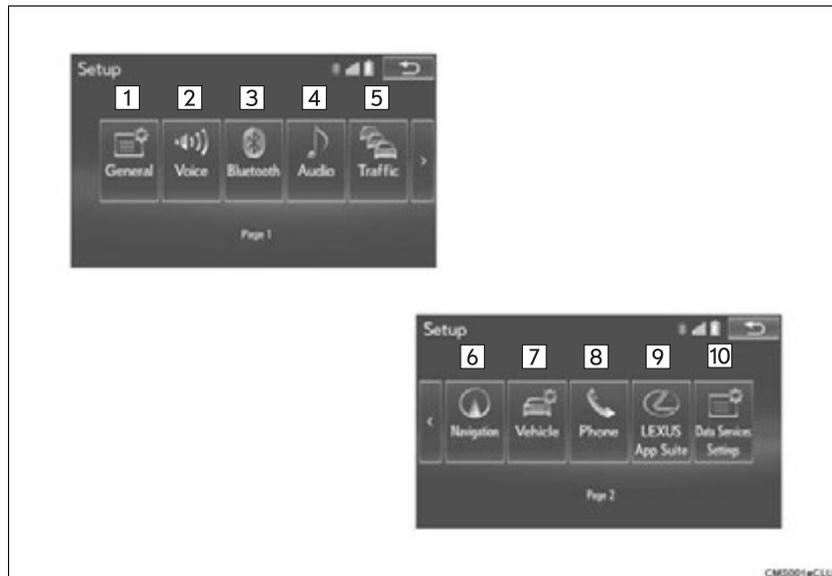

No.	Function	Page
1	Select to change the selected language, operation sound, automatic screen change settings, etc.	57
2	Select to set the voice guidance settings.	65
3	Select to set Bluetooth® phones and Bluetooth® audio devices.	48
4	Select to set radio and external media settings.	215
5*	Select to set traffic information.	137
6*	Select to set memory points (home, preset destinations, address book entries, areas to avoid), navigation details or to delete previous destinations.	122, 132
7	Select to set vehicle information such as maintenance information.	67
8	Select to set the phone sound, contacts, message settings, etc.	383
9*	Select to set LEXUS App Suite settings.	434
10*	Select to set data services settings.	334

*: With navigation function

2. QUICK REFERENCE

2. "Information" SCREEN

This screen can be used to display traffic information, fuel consumption, etc. Press the "MENU" button on the Remote Touch, then select "Info" to display the "Information" screen.




No.	Function	Page
1	Select to display the fuel consumption screen.	"Owner's Manual"
2*	Select to display traffic information.	90
3*	Select to display weather information.	332
4*	Select to display the "LEXUS Insider" screen.	430

*: With navigation function

3. NAVIGATION OPERATION

1. REGISTERING HOME*

- 1 Press the "MENU" button on the Remote Touch.

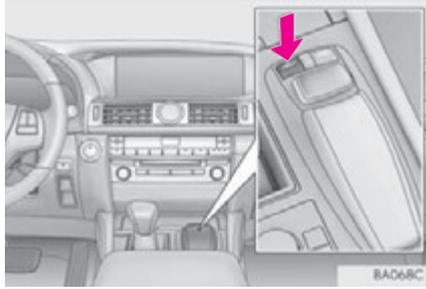


- 2 Select "Destination".




- 3 Select "Go Home".



- 4 Select "Yes".

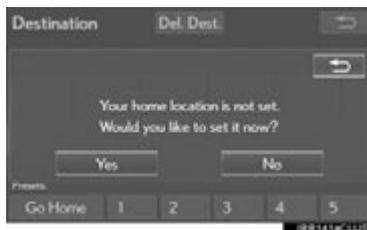


- 5 There are different kinds of methods to search for your home. (→P. 93)

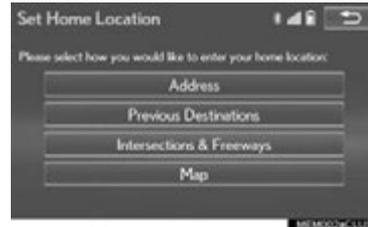

- 6 Select "Enter".



- 7 Select "OK".

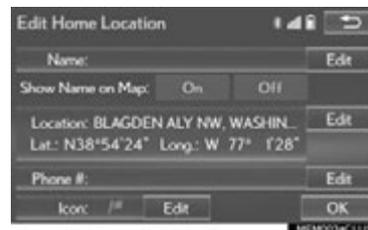

Registration of home is complete.


- ▶ Registering home in a different way →P. 123
- ▶ Editing the name, location, phone number and icon →P. 123
- ▶ Setting home as the destination →P. 96

*: With navigation function

3. NAVIGATION OPERATION

2. REGISTERING PRESET DESTINATIONS*


- 1 Press the "MENU" button on the Remote Touch.

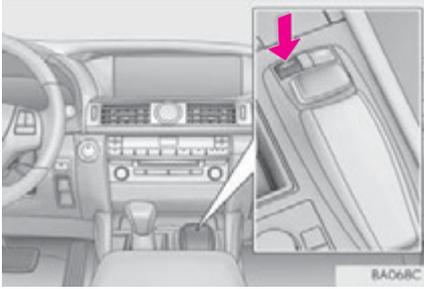

- 2 Select "Destination".



- 3 Select one of the preset destination buttons.

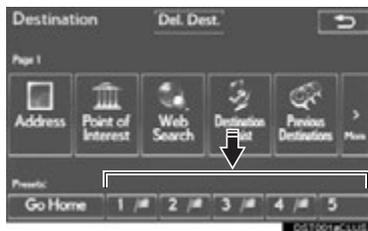

- 4 Select "Yes".




- 5 There are different kinds of methods to search for a destination. (→P. 93)



- 6 Select "Enter".



- 7 Select "OK".

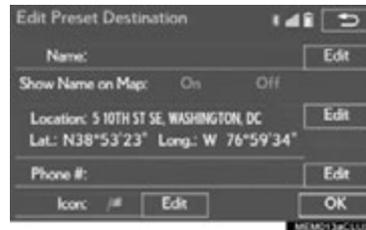

Registration of preset destinations is complete.


- ▶ Registering preset destinations in a different way
→P. 124
- ▶ Editing the name, location, phone number and icon
→P. 125
- ▶ Setting preset destinations as the destination
→P. 96

*: With navigation function

3. NAVIGATION OPERATION

3. OPERATION FLOW: GUIDING THE ROUTE*

- 1 Press the "MENU" button on the Remote Touch.

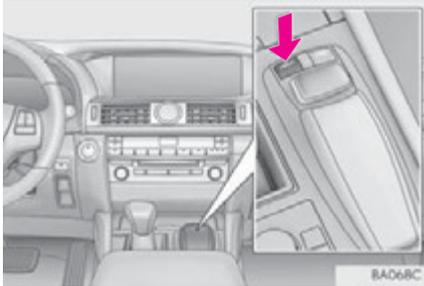

- 2 Select "Destination".



- 3 There are different kinds of methods to search for a destination. (→P. 93)



- 4 Select "Go".



- 5 Select "OK".



Selecting routes other than the one recommended (→P. 106)


Guidance to the destination is displayed on the screen and can be heard via voice guidance.

*: With navigation function

3. NAVIGATION OPERATION

4. SETTING HOME AS THE DESTINATION*

- 1 Press the "MENU" button on the Remote Touch.

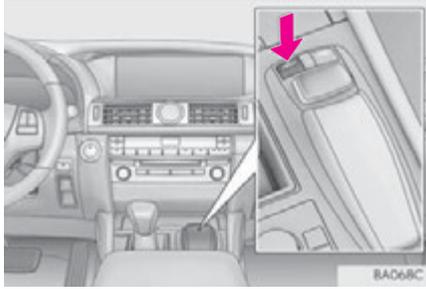

- 2 Select "Destination".



- 3 Select "Go Home".



- 4 Select "OK".



Selecting routes other than the one recommended (→P. 106)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

*: With navigation function

4. FUNCTION INDEX

1. FUNCTION INDEX

► Map*

Displaying maps	Page
Viewing the map screen	74
Displaying the current position	77
Viewing the current position vicinity map	83
Changing the scale	78
Changing the map orientation	80
Displaying map Information	85
Displaying the estimated travel/arrival time to the destination	110
Selecting the map mode	81
Displaying traffic information	90

Searching for destinations	Page
Searching for the destination	95
Changing the search area	96

► Route guidance*

Before starting or during route guidance	Page
Starting route guidance	106
Editing the route	117
Viewing the entire route map	112
Pausing guidance	109
Adjusting route guidance volume	65
Deleting the destination	118

Address book	Page
Registering address book entries	126
Marking icons on the map	127

► Useful functions

Information	Page
Displaying vehicle maintenance*	68
Hands-free system (for cellular phone)	Page
Registering/connecting a Bluetooth® phone	40
Making a call on a Bluetooth® phone	367
Receiving a call on the Bluetooth® phone	373
Voice command system	Page
Operating the system with your voice	318
Peripheral monitoring system	Page
Viewing behind the rear of the vehicle	336

*: With navigation function

2

BASIC FUNCTION

1 BASIC INFORMATION BEFORE OPERATION

- 1. INITIAL SCREEN 30
- 2. HOW TO USE THE Remote Touch..... 32
- 3. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION..... 34
 - ENTERING LETTERS AND NUMBERS..... 34
 - LIST SCREEN..... 35
- 4. SCREEN ADJUSTMENT 38

2 Bluetooth® SETTINGS

- 1. REGISTERING/CONNECTING Bluetooth® DEVICE 40
 - REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME 40
 - REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME 42
 - PROFILES 44
 - CERTIFICATION 46
- 2. SETTING Bluetooth® DETAILS 48
 - “Bluetooth* Setup” SCREEN..... 48
 - REGISTERING A Bluetooth® DEVICE 49
 - DELETING A Bluetooth® DEVICE..... 51
 - CONNECTING A Bluetooth® DEVICE 51
 - EDITING THE Bluetooth® DEVICE INFORMATION..... 53
 - “System Settings” SCREEN 55

3 OTHER SETTINGS

- 1. GENERAL SETTINGS..... 57
 - GENERAL SETTINGS SCREEN..... 58
- 2. VOICE SETTINGS..... 65
 - VOICE SETTINGS SCREEN..... 66
- 3. VEHICLE SETTINGS 67
 - MAINTENANCE..... 68

1

2

3

4

5

6

7

8

9

10

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

1. BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN

- 1 When the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode, the initial screen will be displayed and the system will begin operating.



- Images shown on the initial screen can be changed to suit individual preferences. (→P. 61.)

- After a few seconds, the "CAUTION" screen will be displayed. Waiting about 5 seconds or selecting "Continue" switches to the last displayed screen. (Press any button on the Remote Touch, the function's corresponding screen will be displayed.)


CAUTION

- When the vehicle is stopped with the engine running <the hybrid system operating>, always apply the parking brake for safety.

MAINTENANCE INFORMATION*

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Maintenance Reminder" screen will be displayed when the system is turned on.

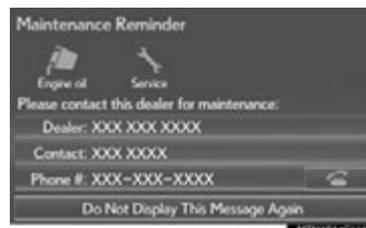


- This screen goes off if the screen is not operated for several seconds.
- To prevent this screen from being displayed again, select "Do Not Display This Message Again".
- To register maintenance information: →P. 68
- If  is selected, the registered phone number can be called.

*: With navigation function

RESTARTING THE SYSTEM

When system response is extremely slow, the system can be restarted.

- 1 Press and hold the “PWR•VOL” knob for 3 seconds or more.

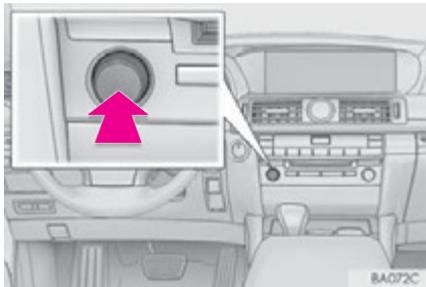

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION


2. HOW TO USE THE Remote Touch

This system can be operated by the Remote Touch when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

- 1 Use the Remote Touch knob to select the desired button on the screen.

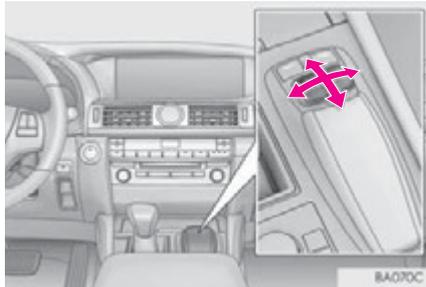

- 2 To select the button on the screen, press the Remote Touch knob. Once a button has been selected, the screen will change.

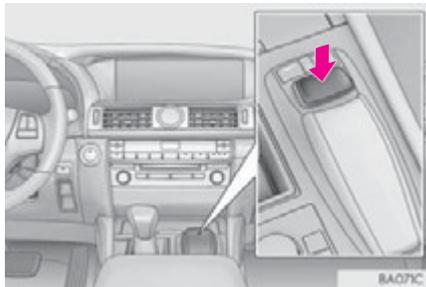

- When the pointer moves close to a button, it will be automatically pulled onto that button. The strength of this pull can be adjusted. (→P. 57)
- The pointer will disappear from the screen if it is not moved for 6 seconds. Operation of the Remote Touch knob will cause the pointer to reappear.
- “^” and “v” buttons on the Remote Touch can be used to scroll up and down on list screens.
With navigation function: Press the “^” button on the Remote Touch to zoom in on the map screen and the “v” button to zoom out.
- When  is displayed on the screen, select  to return to the previous screen.
- Press the “MENU” button on the Remote Touch to display the “Menu” screen. (→P. 14)
- Without navigation function: The compass screen can be displayed by pressing the  button on the Remote Touch.
- With navigation function: The map screen can be displayed by pressing the “MAP/VOICE” button on the Remote Touch. (→P. 77)

 CAUTION

- Do not allow fingers, fingernails or hair to become caught in the Remote Touch as this may cause an injury.
- Be careful when touching the Remote Touch in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

 NOTICE

- Do not allow the Remote Touch to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Remote Touch to excessive pressure or strong impact as the knob may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Remote Touch as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Remote Touch knob.
- If your hand or any object is on the Remote Touch knob when the engine <power> switch is turned to ACCESSORY mode, the Remote Touch knob may not operate properly.

INFORMATION


- Under extremely cold conditions, the Remote Touch knob may react slowly.

1. BASIC INFORMATION BEFORE OPERATION

3. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION

When searching by an address, name, etc., or entering data, letters and numbers can be entered via the screen.

ENTERING LETTERS AND NUMBERS

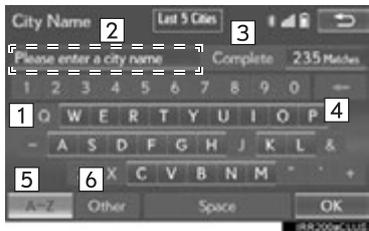

- On certain letter entry screens, letters can be entered in upper or lower case.

 : Select to enter in lower case.

 : Select to enter in upper case.

- Keyboard layout can be changed. (→P. 57)

No.	Function
1	Select to enter desired characters.
2	Text field. Entered character(s) will be displayed.
3	During character entry, when there is only one available option for the next character(s), the next character(s) will be displayed in gray text in the text field automatically. Gray text is entered by selecting this button.
4	Select to erase one character. Select and hold to continue erasing characters.
5	Select to display the alphabet keys.
6	Select to display other symbols.

LIST SCREEN


DISPLAYING THE LIST*

The list screen may be displayed after entering characters.

- 1 Enter characters and select "OK".



- Matching items from the database are listed even if the entered address or name is incomplete.
- The list will be displayed automatically if the maximum number of characters is entered or matching items can be displayed on a single list screen.

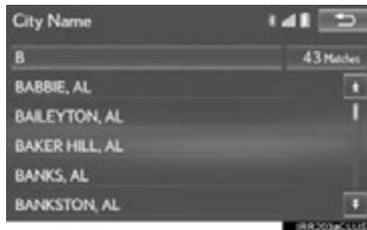


INFORMATION

- The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays "***" on the screen.

SELECTING ALL ITEMS

Some lists contain "Select All". If "Select All" is selected, it is possible to select all items.

- 1 Select "Select All".

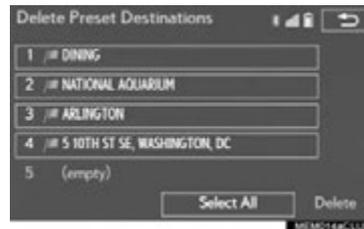

"Unselect All": Unselect all items in the list.


2 BASIC FUNCTION

*: With navigation function

1. BASIC INFORMATION BEFORE OPERATION

LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

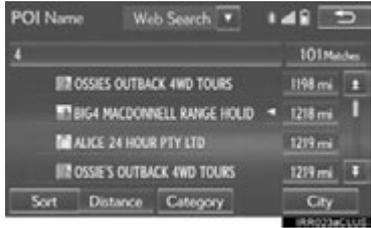

Icon	Function
	Select to skip to the next or previous page.
	Select and hold or to scroll through the displayed list.
	This indicates the displayed screen's position.
	If appears to the right of an item name, the complete name is too long to display. Select to scroll to the end of the name. Select to move to the beginning of the name.


INFORMATION

- The “^” and “v” buttons on the Remote Touch can be used to scroll up and down on list screens.

SORTING*

The order of a list displayed on the screen can be sorted in the order of distance from the current location, date, category, etc.

1 Select “Sort”.

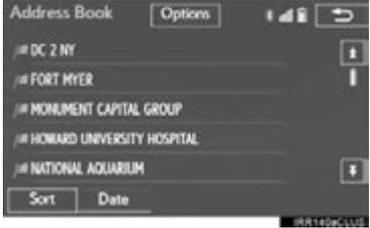

2 Select the desired sorting criteria.




*: With navigation function

CHARACTER JUMP BUTTONS IN LISTS

Some lists contain character screen buttons, "ABC", "DEF" etc., which allow a direct jump to list entries that begin with the same letter as the character screen button.

- 1 Select the desired character jump buttons.

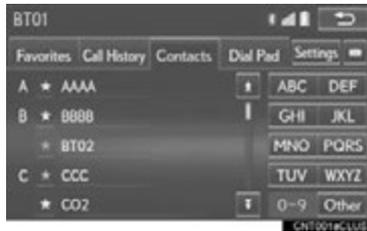

INFORMATION

- Every time the same character screen button is selected, the list starting with the subsequent character is displayed.

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

4. SCREEN ADJUSTMENT

The contrast and brightness of the screen display and the image of the camera display can be adjusted. The screen can also be turned off, and/or changed to either day or night mode. (For information regarding audio/visual screen adjustment: →P. 155)


1 Press the "MENU" button on the Remote Touch.

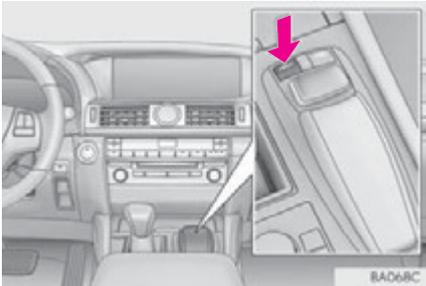

2 Select "Display".



3 Select the items to be set.

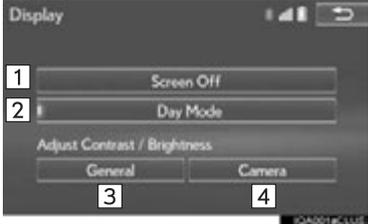

No.	Function	Page
1	Select to turn the screen off. To turn it on, press any button on the audio panel or on the Remote Touch.	—
2	Select to turn day mode on/off.	39
3	Select to adjust the screen display.	39
4	Select to adjust the camera display.	

CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode. This feature is available when the headlight is switched on.

- 1 Select **"Day Mode"**.

INFORMATION

- If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the engine <hybrid system> turned off.

ADJUSTING THE CONTRAST/ BRIGHTNESS

The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings.

- 1 Select **"General"** or **"Camera"**.
- 2 Select the desired item.



- "Display (General)" screen only: Select "<" or ">" to select the desired display.

Screen button	Function
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

2 BASIC FUNCTION

2. Bluetooth® SETTINGS

1. REGISTERING/CONNECTING Bluetooth® DEVICE

REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME


To use the hands-free system, it is necessary to register a Bluetooth® phone with the system.

Once the phone has been registered, it is possible to use the hands-free system.

This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P. 49

- 1 Turn the Bluetooth® connection setting of your cellular phone on.
 - This function is not available when Bluetooth® connection setting of your cellular phone is set to off.
- 2 Press the “MENU” button on the Remote Touch.

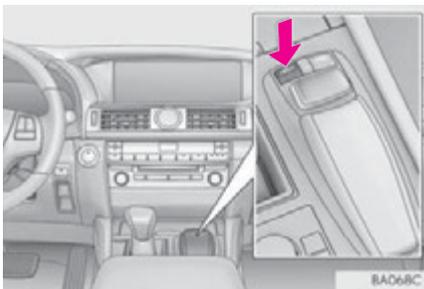

- 3 Select “Phone”.



- Operations up to this point can also be performed by pressing the  switch on the steering wheel.

- 4 Select “Yes” to register a phone.



- 5 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.




- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select “Cancel”.

6 Register the Bluetooth® device using your Bluetooth® device.


- A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

7 Check that the following screen is displayed when registration is complete.

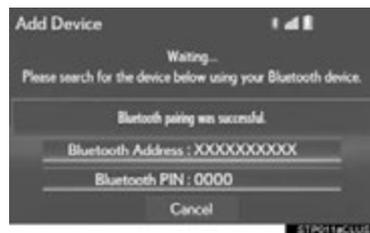

- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth® functions are not yet available.

8 Select "OK" when the connection status changes from "Connecting..." to "Connected".

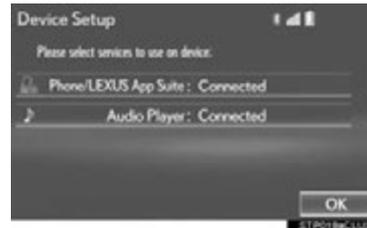

- If an error message is displayed, follow the guidance on the screen to try again.

2

BASIC FUNCTION

2. Bluetooth® SETTINGS

REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME

To use the Bluetooth® Audio, it is necessary to register an audio player with the system.


Once the player has been registered, it is possible to use the Bluetooth® Audio. This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P. 49

- 1 Turn the Bluetooth® connection setting of your audio player on.

 - This function is not available when the Bluetooth® connection setting of your audio player is set to off.

- 2 Press the “MENU” button on the Remote Touch.

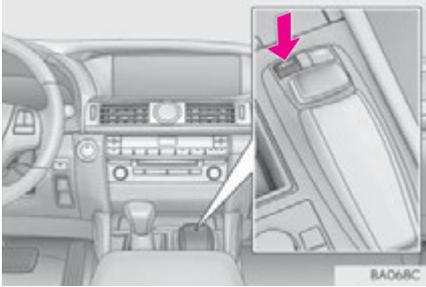

- 3 Select “Radio” or “Media”.



- 4 Select “Source”.




- 5 Select “Bluetooth*”.




*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 6 Select "Connect".

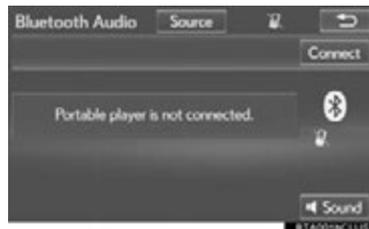

- 7 Select "Yes" to register a audio player.

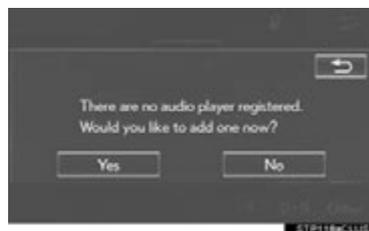

- 8 Follow the steps in "REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME" from "STEP 5". (→P. 40)

2. Bluetooth® SETTINGS

PROFILES

This system supports the following services.

Bluetooth® Device	Spec.	Function	Requirements	Recommendations
Bluetooth® Phone/ Bluetooth® Audio Player	Bluetooth® Specification	Registering a Bluetooth® device	Ver.2.0	Ver.3.0 +EDR
Bluetooth® Device	Profile	Function	Requirements	Recommendations
Bluetooth® Phone	HFP (Hands-Free Profile)	Hands-free system	Ver. 1.0	Ver. 1.6
	OPP (Object Push Profile)	Transferring the contacts	Ver.1.1	Ver.1.2
	PBAP (Phone Book Access Profile)		Ver. 1.0	Ver. 1.1
	MAP (Message Access Profile)	Bluetooth® phone message	—	Ver. 1.0
	SPP (Serial Port Profile)	"LEXUS App Suite" function*	—	Ver. 1.1
Bluetooth® Audio Player	A2DP (Advanced Audio Distribution Profile)	Bluetooth® audio system	Ver. 1.0	Ver. 1.2
	AVRCP (Audio/Video Remote Control Profile)		Ver. 1.0	Ver. 1.4

*: With navigation function

INFORMATION

- If your cellular phone does not support HFP, registering the Bluetooth® phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
- If the connected Bluetooth® device version is older than recommended or incompatible, the Bluetooth® device function may not work properly.
- Refer to <http://www.lexus.com/MobileLink> to find approved Bluetooth® phones for this system.

2

BASIC FUNCTION



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

CERTIFICATION

► U.S.A.

- **FCC ID: AJDK061**
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- **FCC WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **Co-location:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

► Canada

● IC : 775E-K061

- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- The Bluetooth* antenna cannot be removed (or replaced) by user.
L'antenne Bluetooth* ne peut pas être supprimé (ou remplacé) par l'utilisateur.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


2

BASIC FUNCTION

2. Bluetooth® SETTINGS

2. SETTING Bluetooth® DETAILS

1 Press the “MENU” button on the Remote Touch.

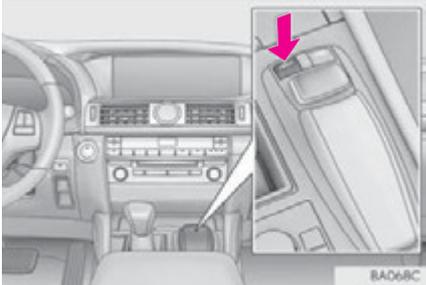

2 Select “Setup”.



3 Select “Bluetooth*”.



4 Select the desired item to be set.



“Bluetooth* Setup” SCREEN



Function	Page
Registering a Bluetooth® device	49
Deleting a Bluetooth® device	51
Connecting a Bluetooth® device	51
Editing the Bluetooth® device information	53
Bluetooth® system settings	55

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

DISPLAYING THE “Bluetooth* Setup” SCREEN IN A DIFFERENT WAY

- 1 Press the “MENU” button on the Remote Touch. (→P. 12)
- 2 Select “Setup”.
- 3 Select “Phone”.
- 4 Select “Connect Phone”.



REGISTERING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices can be registered.

Bluetooth® compatible phones (HFP) and audio players (AVP) can be registered simultaneously.

This operation cannot be performed while driving.

2

BASIC FUNCTION

- 1 Display the “Bluetooth* Setup” screen. (→P. 48)
- 2 Select “Add”.
 - ▶ When another Bluetooth® device is connected
 - To disconnect the Bluetooth® device, select “Yes”.
 - ▶ When 5 Bluetooth® devices have already been registered
 - A registered device needs to be replaced. Select “Yes”, and select the device to be replaced.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. Bluetooth® SETTINGS

- 3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.



- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select “Cancel”.

- 4 Register the Bluetooth® device using your Bluetooth® device.


- A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

- 5 Check that the following screen is displayed when registration is complete.



- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth® functions are not yet available.

- 6 Select “OK” when the connection status changes from “Connecting...” to “Connected”.

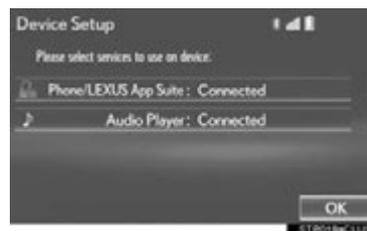

- If an error message is displayed, follow the guidance on the screen to try again.

DELETING A Bluetooth® DEVICE

- 1 Display the “Bluetooth* Setup” screen. (→P. 48)
- 2 Select “Remove”.
- 3 Select the desired device.



- 4 Select “Yes” when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

INFORMATION

- When deleting a Bluetooth® phone, the contact data will be deleted at the same time.

CONNECTING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices (Phones (HFP) and audio players (AVP)) can be registered.

If more than 1 Bluetooth® device has been registered, select which device to connect to.

- 1 Display the “Bluetooth* Setup” screen. (→P. 48)
- 2 Select the device to be connected.



- Supported profile icons will be displayed.

 : Phone

 : Audio player

 : Phone/“LEXUS App Suite” service

- The profile icon for a currently connected device will be displayed in color.
- Selecting a profile icon which is not currently connected will switch the connection to the function.

- If the desired Bluetooth® device is not on the list, select “Add” to register the device. (→P. 49)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3 Select the desired connection.



- ▶ When another Bluetooth® device is connected
 - To disconnect the Bluetooth® device, select “Yes”.
- 4** Check that a confirmation screen is displayed when the connection is complete.
- If an error message is displayed, follow the guidance on the screen to try again.

INFORMATION

- It may take time if the device connection is carried out during Bluetooth® audio playback.
- Depending on the type of Bluetooth® device being connected, it may be necessary to perform additional steps on the device.
- When disconnecting a Bluetooth® device, it is recommended to disconnect using the system.

AUTO CONNECTION MODE

To turn auto connection mode on, set “Bluetooth* Power” to on. (→P. 56)
 Leave the Bluetooth® device in a location where the connection can be established.

- When the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode, the system searches for a nearby registered device.
- The system will connect with the registered device that was last connected, if it is nearby.

CONNECTING MANUALLY

When the auto connection has failed or “Bluetooth* Power” is turned off, it is necessary to connect Bluetooth® manually.

- 1** Press the “MENU” button on the Remote Touch and select “Setup”.
- 2** Select “Bluetooth*”.
- 3** Follow the steps in “CONNECTING A Bluetooth® DEVICE” from “STEP 2”. (→P. 51)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ RECONNECTING THE Bluetooth® PHONE

If a Bluetooth® phone is disconnected due to poor reception from the Bluetooth® network when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode, the system automatically reconnects the Bluetooth® phone.

- If a Bluetooth® phone is disconnected on purpose, such as turning it off, this does not happen. Reconnect the Bluetooth® phone manually.

EDITING THE Bluetooth® DEVICE INFORMATION

The Bluetooth® device's information can be displayed on the screen. The displayed information can be edited.

- 1 Display the "Bluetooth* Setup" screen. (→P. 48)
- 2 Select the desired device to be edited.
- 3 Select "Device Info".



*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2

BASIC FUNCTION

4 Confirm and change the Bluetooth® device information.



No.	Information
1	The name of the Bluetooth® device. Can be changed to a desired name. (→P. 54)
2	Select to set the Bluetooth® audio player connection method. (→P. 55)
3	Device address is unique to the device and cannot be changed.
4	Phone number of the Bluetooth® phone.
5	Compatibility profile of the Bluetooth® device.
6	Select to reset all setup items.

INFORMATION

- If 2 Bluetooth® devices have been registered with the same device name, the devices can be distinguished referring to the device's address.
- Depending on the type of phone, some information may not be displayed.

CHANGING A DEVICE NAME

- 1 Select "Device Name".
- 2 Enter the name and select "OK".

INFORMATION

- Even if the device name is changed, the name registered in your Bluetooth® device does not change.

SETTING AUDIO PLAYER CONNECTION METHOD

- 1 Select "Connect Audio Player from".
- 2 Select the desired connection method.



"Vehicle": Select to connect the audio system to the audio player.


"Device": Select to connect the audio player to the audio system.

- Depending on the audio player, the "Vehicle" or "Device" connection method may be best. As such, refer to the manual that comes with the audio player.
- To reset the connection method, select "Default".

"System Settings" SCREEN

The Bluetooth® settings can be confirmed and changed.

- 1 Display the "Bluetooth* Setup" screen. (→P. 48)
- 2 Select "System Settings".
- 3 Select the desired item to be set.

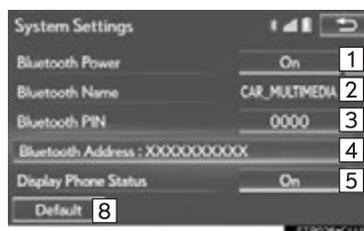

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2

BASIC FUNCTION

2. Bluetooth® SETTINGS

No.	Information	Page
1	Select to set Bluetooth® connection on/off.	56
2	Displays system name. Can be changed to a desired name.	56
3	PIN-code used when the Bluetooth® device was registered. Can be changed to a desired code.	56
4	Device address is unique to the device and cannot be changed.	—
5	Select to set the phone connection status display on/off.	—
6	Select to set the connection status display of the audio player on/off.	—
7	Compatibility profile of the system	—
8	Select to reset all setup items.	—

CHANGING “Bluetooth* Power”

1 Select “Bluetooth* Power”.

When “Bluetooth* Power” is on:

The Bluetooth® device is automatically connected when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

When “Bluetooth* Power” is off:

The Bluetooth® device is disconnected, and the system will not connect to it next time.

INFORMATION

- While driving, the auto connection state can be changed from off to on, but cannot be changed from on to off.

EDITING THE SYSTEM NAME

1 Select “Bluetooth* Name”.

2 Enter a name and select “OK”.

EDITING THE PIN-CODE

1 Select “Bluetooth* PIN”.

2 Enter a PIN-code and select “OK”.


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. OTHER SETTINGS

1. GENERAL SETTINGS

Settings are available for automatic screen change, operation sounds, etc.


- 1 Press the "MENU" button on the Remote Touch.

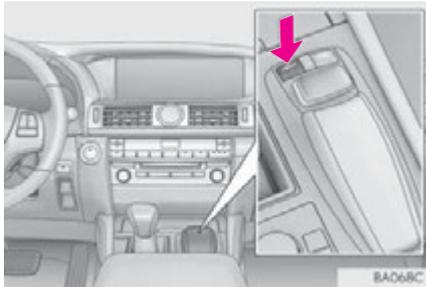


- 2 Select "Setup".



- 3 Select "General".

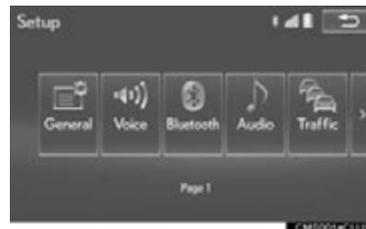

- 4 Select the items to be set.

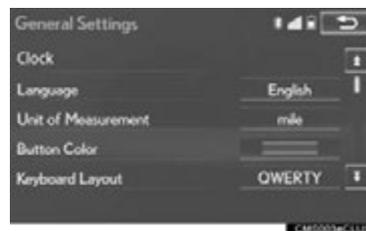


2

BASIC FUNCTION

3. OTHER SETTINGS

GENERAL SETTINGS SCREEN

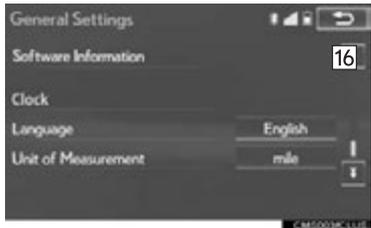

No.	Function
1	Select to change the time zone, set the daylight saving time on/off and set the automatic adjustment of the clock on/off. (→P. 59)
2	Select to change the language.
3*	Select to change the unit of measure for distance.
4	Select to change the screen button color.
5	Select to change the keyboard layout.
6	Select to customize the startup/screen off images. (→P. 61)
7*	Select to set automatic screen changes from the audio/air conditioning control screen to the previous screen to on/off. When set to on, the screen will automatically return to the previous screen from the audio/air conditioning control screen after 20 seconds.
8	Select to set the selection sounds on/off.
9	Select to set the pointer sounds on/off.
10	Select to set the error sounds on/off.

*: With navigation function

No.	Function
11	Select to adjust the pointer sound volume.
12	Select to adjust the strength of the pull from the buttons to the pointer.
13	Select to delete personal data. (→P. 63)
14	Select to update software versions. For details, contact your Lexus dealer.
15	Select to update "Gracenote" database versions. For details, contact your Lexus dealer.
16	Select to display the software information. Notices related to third party software used in this product are en-listed. (This includes instructions for obtaining such software, where applicable.)


CLOCK SETTINGS

Used for changing the time zone and setting of daylight saving time and automatic time adjustment on/off.

2

BASIC FUNCTION

- 1 Display the "General Settings" screen. (→P. 57)
- 2 Select "Clock".
- 3 Select the items to be set.

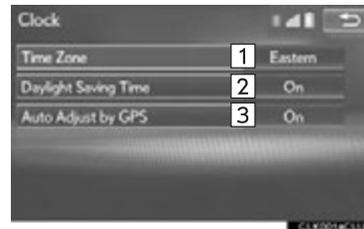


No.	Function
1	Select to change the time zone. (→P. 60)
2	Select to set daylight saving time on/off.
3	Select to set automatic adjustment of the clock by GPS on/off. When set to on, the system will automatically adjust the clock to the current position's time zone when the vehicle moves to a different time zone. When set to off, the clock can be manually adjusted. (→P. 60)

3. OTHER SETTINGS

■ SETTING THE TIME ZONE

- 1 Select "Time Zone".
- 2 Select the desired time zone.

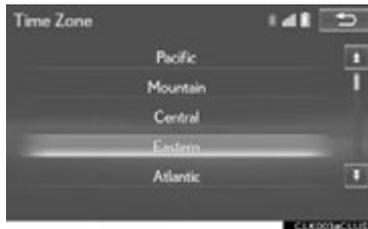

- If "Other" is selected, the zone can be adjusted manually. Select "+" or "-" to adjust the time zone.



■ MANUAL CLOCK SETTING

When "Auto Adjust by GPS" is turned "Off", the clock can be manually adjusted.

- 1 Select the desired item.



No.	Function
1	Select "+" to set the time forward one hour and "-" to set the time back one hour.
2	Select "+" to set the time forward one minute and "-" to set the time back one minute.
3	Select to round to the nearest hour. e.g. 1:00 to 1:29 → 1:00 1:30 to 1:59 → 2:00

CUSTOMIZING THE STARTUP AND SCREEN OFF IMAGES

An image can be copied from a USB memory and used as the startup and screen off images.

One of 3 built-in movies can also be set as the startup image.

When the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the initial screen (startup image) will be displayed. (→P. 30)

When “Screen Off” on the “Display” screen is selected, the screen is turned off and the desired screen off image that is set is displayed. (To turn the screen off: →P. 38)

- 1 Display the “General Settings” screen. (→P. 57)
- 2 Select “Customize Images”.

- 3 Select the items to be set.




No.	Function	Page
1	Select to copy images from a USB memory.	61
2	Select to delete images.	63
3	Select to set an image as the startup or screen off image.	63

2

BASIC FUNCTION

TRANSFERRING IMAGES


- 1 Open the console box, then open the cover and connect a USB memory.

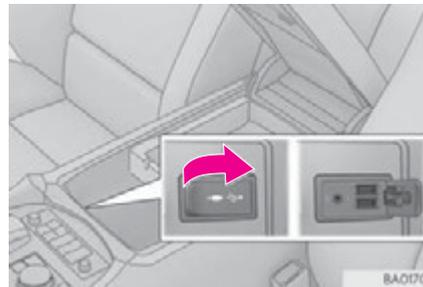

- Turn on the power of the USB memory if it is not turned on.

3. OTHER SETTINGS

- 2 Close the console box.
- 3 Select **“Copy from USB”**.
- 4 Select the desired images from the list and then select **“Copy”**.

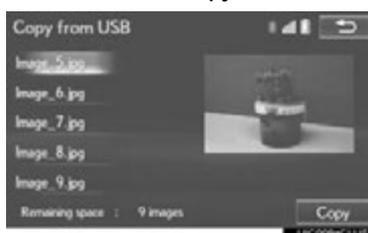

- The selected image is displayed on the right side of the screen. If the selected image file is broken or incompatible,  will be displayed.
 - The remaining number of image files that can be transferred is displayed at the bottom of the screen.
- 5 Select **“Yes”** when the confirmation screen appears.

INFORMATION

- When saving image files to a USB memory to be transferred to the system, save the images in a folder named “Image” (I-m-a-g-e, case sensitive). If a different folder name is used, the system will not recognize the image files.
- The compatible file extensions are JPG and JPEG.
- An image’s file name, including file extension, can be up to 32 characters.
- Image files of 10 MB or less can be transferred.
- Up to 10 images can be transferred to the system.
- Files with non-ASCII filenames can not be transferred.

■ SETTING THE STARTUP AND SCREEN OFF IMAGES

- 1 Select "Set Images".
- 2 Select the desired image.



- One of the 3 built-in movies displayed on the right side of the screen can be set as the startup image.

- 3 Select the desired items to be set.



No.	Function
1	Select to set an image as the startup image.
2	Select to set an image as the screen off image.
3	Select to set an image as both the startup and screen off image.

■ DELETING TRANSFERRED IMAGES

- 1 Select "Delete Images".
- 2 Select the images to be deleted and select "Delete".



- 3 Select "Yes" when the confirmation screen appears.

2 BASIC FUNCTION

■ DELETING PERSONAL DATA

- 1 Display the "General Settings" screen. (→P. 57)
- 2 Select "Delete Personal Data".
- 3 Select "Delete".



3. OTHER SETTINGS

4 Select “Yes” when the confirmation screen appears.

● Registered or changed personal settings will be deleted or returned to their default conditions.

For example:

- General settings
- Navigation settings*
- Audio settings
- Phone settings
- Lexus Enform settings*

*: With navigation function



NOTICE


- With navigation function: Make sure the map SD card is inserted when deleting personal data. The personal data cannot be deleted when the map SD card is removed. To delete the data, after inserting the map SD card, turn the engine <power> switch to ACCESSORY or IGNITION ON <ON> mode.

3. OTHER SETTINGS

2. VOICE SETTINGS

Voice guidance etc. can be set.


- 1 Press the "MENU" button on the Remote Touch.

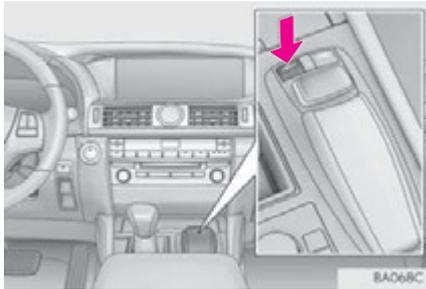

- 2 Select "Setup".



- 3 Select "Voice".

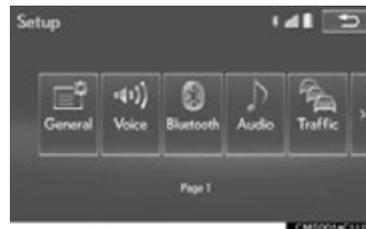

- 4 Select the items to be set.




INFORMATION

- "Voice Settings" screen can also be displayed from the voice recognition top screen. (→P.320)

3. OTHER SETTINGS

VOICE SETTINGS SCREEN

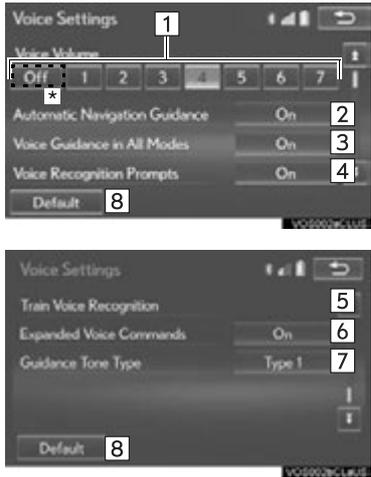

No.	Function
1	Select to adjust the volume of voice guidance.
2*	Select to set the voice guidance during route guidance on/off.
3*	Select to set the voice guidance during audio/visual and/or air conditioning system use on/off.
4	Select to set the voice recognition prompts on/off.
5	Select to train voice recognition. The voice command system adapt the user accent.
6	When "On" is selected, expanded voice commands can be operated using voice commands. (→P. 323)
7*	Select to set the beep sound of navigation guidance.
8	Select to reset all setup items.


*: With navigation function

3. OTHER SETTINGS

3. VEHICLE SETTINGS

Settings are available for maintenance, vehicle customization, intuitive parking assist-sensor, etc.

- 1 Press the "MENU" button on the Remote Touch.

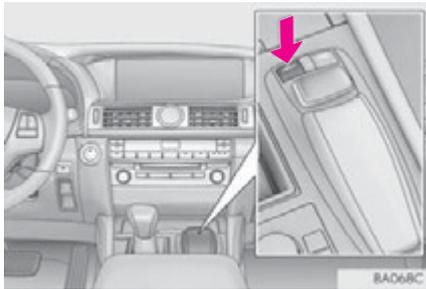

- 2 Select "Setup".



- 3 Select "Vehicle".



- 4 Select the desired item to be set.



2

BASIC FUNCTION

No.	Function	Page
1*	Select to set maintenance.	68
2	Select to set vehicle customization.	"Owner's Manual"
3	Select to set intuitive parking assist-sensor.	359
4	Select to set back camera guide line.	340

*: With navigation function

3. OTHER SETTINGS

MAINTENANCE*

When the system is turned on, the "Maintenance Reminder" screen displays when it is time to replace a part or certain components. (→P. 30)

- 1 Display the "Vehicle Settings" screen. (→P. 67)
- 2 Select "Maintenance".
- 3 Select the desired item.



No.	Function
1	Select to set the condition of parts or components.
2	Select to add new information items separately from provided ones.
3	Select to cancel all conditions which have been entered.
4	Select to reset the items which have expired conditions.
5	Select to call the registered dealer.
6	Select to register/edit dealer information. (→P. 69)
7	When set to on, the indicator will illuminate. The system is set to give maintenance information with the "Maintenance Reminder" screen. (→P. 30)


INFORMATION

- When the vehicle needs to be serviced, the screen button color will change to orange.

*: With navigation function

MAINTENANCE INFORMATION SETTING

- 1 Select the desired part or component screen button.
- 2 Set the conditions.

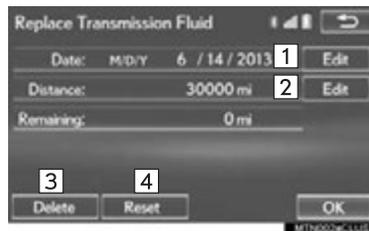

No.	Function
1	Select to enter the next maintenance date.
2	Select to enter the driving distance until the next maintenance check.
3	Select to cancel the conditions which have been entered.
4	Select to reset the conditions which have expired.

- 3 Select "OK" after entering the conditions.

INFORMATION


- For scheduled maintenance information, refer to "Warranty and Services Guide/Owner's Manual Supplement/Scheduled Maintenance".
- Depending on driving or road conditions, the actual date and distance that maintenance should be performed may differ from the stored date and distance in the system.

2 BASIC FUNCTION

DEALER SETTING

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.


- 1 Select "Set Dealer".
- 2 Select the desired item to search for the location. (→P. 93)

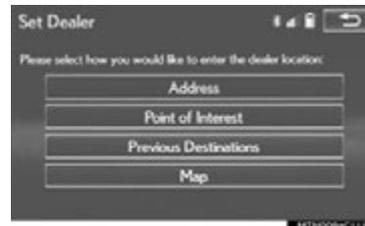

- The editing dealer screen appears after setting the location.

3. OTHER SETTINGS

3 Select the items to be edited.

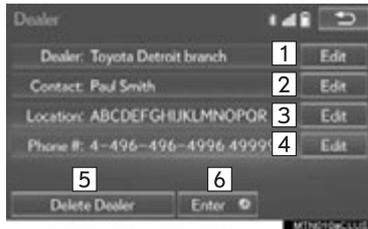

No.	Function	Page
1	Select to enter the name of a dealer.	70
2	Select to enter the name of a dealer member.	70
3	Select to set the location.	70
4	Select to enter the phone number.	70
5	Select to delete the dealer information displayed on the screen.	—
6	Select to set the displayed dealer as a destination.	106

■ EDITING DEALER OR CONTACT NAME

- 1 Select “Edit” next to “Dealer” or “Contact”.
- 2 Enter the name and select “OK”.

■ EDITING THE LOCATION

- 1 Select “Edit” next to “Location”.
- 2 Scroll the map to the desired point (→P. 84) and select “OK”.

■ EDITING PHONE NUMBER

- 1 Select “Edit” next to “Phone #”.
- 2 Enter the phone number and select “OK”.

3

NAVIGATION SYSTEM*

1 BASIC OPERATION

1. QUICK REFERENCE.....	74
MAP SCREEN.....	74
NAVIGATION OPTIONS SCREEN.....	76
2. MAP SCREEN OPERATION.....	77
CURRENT POSITION DISPLAY.....	77
MAP SCALE.....	78
ORIENTATION OF THE MAP.....	80
SWITCHING THE MAP MODE.....	81
SCREEN SCROLL OPERATION.....	83
ADJUSTING LOCATION IN SMALL INCREMENTS.....	84
3. MAP SCREEN INFORMATION.....	85
DISPLAYING MAP INFORMATION.....	85
DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET.....	88
STANDARD MAP ICONS.....	89
4. TRAFFIC INFORMATION.....	90
DISPLAYING TRAFFIC INFORMATION ON THE MAP.....	92

2 DESTINATION SEARCH

1. DESTINATION SEARCH SCREEN.....	93
2. SEARCH OPERATION.....	95
SELECTING SEARCH AREA.....	96
SETTING HOME AS DESTINATION.....	96
SETTING PRESET DESTINATIONS AS DESTINATION.....	96
SEARCHING BY ADDRESS.....	97
SEARCHING BY POINT OF INTEREST.....	98
DESTINATION SEARCH BY DESTINATION ASSIST.....	102
SEARCHING FROM PREVIOUS DESTINATIONS.....	102
SEARCHING BY ADDRESS BOOK.....	102
SEARCHING BY EMERGENCY.....	103
SEARCHING BY INTERSECTION AND FREEWAY.....	103
SEARCHING BY MAP.....	105
SEARCHING BY COORDINATES.....	105
3. STARTING ROUTE GUIDANCE.....	106
STARTING ROUTE GUIDANCE.....	106
PAUSING GUIDANCE.....	109

3

NAVIGATION SYSTEM*

3	ROUTE GUIDANCE	5	SETUP	3	
1.	ROUTE GUIDANCE SCREEN	110	1.	DETAILED NAVIGATION SETTINGS	132
	SCREEN FOR ROUTE GUIDANCE.....	110		SCREENS FOR NAVIGATION SETTINGS.....	133
	ROUTE OVERVIEW	112	2.	TRAFFIC SETTINGS	137
	DURING FREEWAY DRIVING.....	112		SCREEN FOR TRAFFIC SETTINGS.....	138
	WHEN APPROACHING INTERSECTION.....	114		AUTO AVOID TRAFFIC	138
	TURN LIST SCREEN.....	115	6	TIPS FOR THE NAVIGATION SYSTEM	
	TURN-BY-TURN ARROW SCREEN.....	115	1.	GPS (GLOBAL POSITIONING SYSTEM)	140
2.	TYPICAL VOICE GUIDANCE PROMPTS	116		LIMITATIONS OF THE NAVIGATION SYSTEM.....	140
3.	EDITING ROUTE	117	2.	MAP DATABASE VERSION AND COVERED AREA	143
	ADDING DESTINATIONS	118		MAP INFORMATION	143
	REORDERING DESTINATIONS.....	118		ABOUT THE MAP DATA	144
	DELETING DESTINATIONS	118			
	SETTING ROUTE PREFERENCES.....	119			
	SELECTING ROUTE TYPE	119			
	DETOUR SETTING	120			
	STARTING FROM ADJACENT ROAD.....	121			
4	MEMORY POINTS				
1.	MEMORY POINTS SETTINGS	122			
	SETTING UP HOME	123			
	SETTING UP PRESET DESTINATIONS.....	124			
	SETTING UP ADDRESS BOOK	126			
	SETTING UP AREAS TO AVOID	129			
	DELETING PREVIOUS DESTINATIONS.....	131			


*: With navigation function

1. BASIC OPERATION

1. QUICK REFERENCE

MAP SCREEN

To display the map screen, press the “MAP/VOICE” button on the Remote Touch.

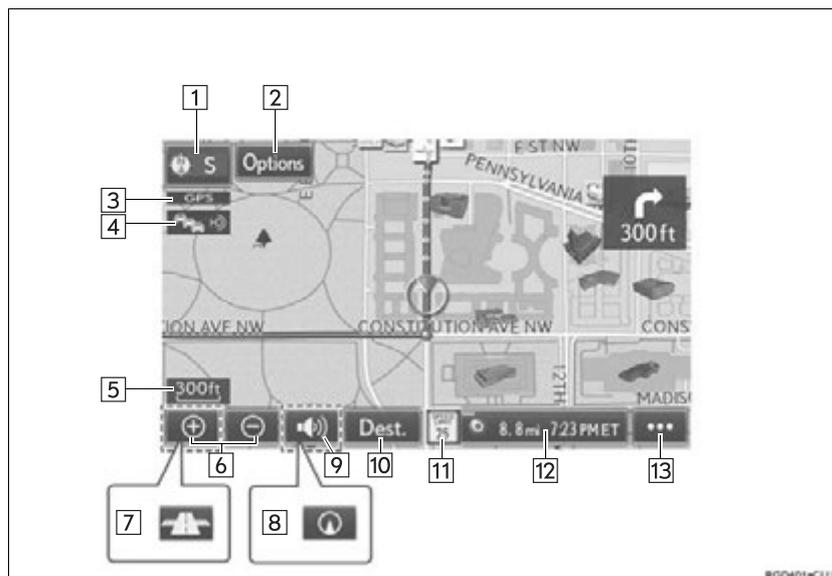

No.	Name	Function	Page
1	2D north up, 2D heading up or 3D heading up symbol	Indicates whether the map orientation is set to north-up or heading-up. The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north). In 3D map, only a heading-up view is available.	80
2	Options button	Select to display the “Navigation Options” screen.	76
3	“GPS” mark (Global Positioning System)	Shows that the vehicle is receiving signals from the GPS.	140
4	Traffic indicator	Shows that traffic information is received. Select to start voice guidance for traffic information. When traffic information is received via HD Radio broadcast, HD mark is displayed on the right.	90
5	Scale indicator	This figure indicates the map scale.	78

No.	Name	Function	Page
6	Zoom in/out button	Select to magnify or reduce the map scale. When either button is selected, the map scale indicator bar appears at the bottom of the screen.	78
7	Footprint map button	Select to display the footprint map screen.	78
8	Current position button	Select to display the current position address.	—
9	Voice guidance button	Select to repeat voice guidance.	116
10	Destination button	Select to display the "Destination" screen.	93
11	Speed limit icon	Indicates the speed limit on the current road. The display of the speed limit icon can be set to on/off.	85
12	Route information bar	Displays the current street name, or the distance with the estimated travel time/arrival time to the destination. The route information bar fills from left to right as the vehicle progresses on the route.	110
13	Route information button	Select to change the display between the current street name and the distance with the estimated travel/arrival time.	

NAVIGATION OPTIONS SCREEN

The navigation options allow you to change map configurations, display/hide POI icons, and edit the navigation routes.

To display the "Navigation Options" screen, press the "MAP/VOICE" button on the Remote Touch, and select "Options".



No.	Function	Page
1	Select to display the desired map configuration.	81
2	Select to set display of the map information such as POI icons, route trace, speed limit, etc.	85
3	Select to display the map version and coverage area.	143
4	Select to edit the set route.	117
5	Select to pause or resume route guidance.	109
6	Select to display the overview of the entire route.	112

1. BASIC OPERATION

MAP SCALE

1 Select or to change the scale of the map screen.



- The scale indicator bar appears at the bottom of the screen.
- Select and hold or to continue changing the scale of the map screen.
- The scale of the map screen can also be changed by selecting the scale bar directly. This function is not available while driving.

INFORMATION

- Press the “^” button on the Remote Touch to zoom in on the map screen and the “v” button to zoom out.
- The map scale is displayed above the zoom in button at the bottom left of the screen.
- In areas where the footprint map is available the map scale changes from to when at the minimum range.

FOOTPRINT MAP

For areas covered by the footprint map (some major cities), a footprint map on a scale of 75 ft. (25 m) can be selected. When the map is scaled down to 150 ft. (50 m), changes to and can be selected to display the footprint map.

- 1 Select on the map screen.
- 2 Check that the footprint map is displayed.



- To return to the normal map display, select .

INFORMATION

- If the map or the current position is moved to the area which is not covered by the footprint map, the screen scale automatically changes to 150 ft. (50 m).
- On the footprint map, a one way street is displayed by .
- Scrolling on the footprint map is not available while driving.

Building footprints in the database were created and provided by NAVTEQ.

3D CITY MODEL MAP

A 3D city model map can be displayed for some areas in major cities when the map scale is 700 ft. (200 m) or less on the 3D map screen.



- To display the normal map, select .

INFORMATION

- The 3D city model map can be set the display on/off. (→P.132)

ROTATING 3D MAP

3D map and 3D city model map can be rotated when arrows appear around the cursor while scrolling.

- 1 Select an arrow to rotate.

**INFORMATION**

- The viewing angle of the 3D map can be changed. (→P.135)

1. BASIC OPERATION

ORIENTATION OF THE MAP

The orientation of the map can be changed between 2D north-up, 2D heading-up and 3D heading-up by selecting the orientation symbol displayed at the top left of the screen.

1 Select ,  or .

▶ North-up screen



▶ Heading-up screen



▶ 3D screen



 E : North-up symbol

Regardless of the direction of vehicle travel, north is always up.

 E : Heading-up symbol

The direction of vehicle travel is always up.

 E : 3D Heading-up symbol

The direction of vehicle travel is always up.


- The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north).

SWITCHING THE MAP MODE

- 1 Select "Options" on the map screen.
- 2 Select "Map Mode".



- 3 Select the desired configuration button.

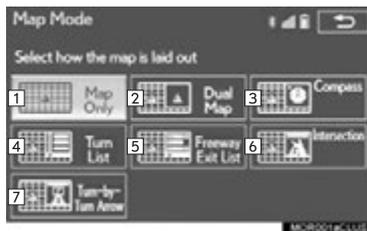

No.	Function	Page
1	Select to display the single map screen.	82
2	Select to display the dual map screen.	82
3	Select to display the compass mode screen.	83
4	Select to display the turn list screen.	115
5	Select to display the freeway exit list screen.	112
6	Select to display the intersection guidance screen or the guidance screen on the freeway.	114
7	Select to display the turn-by-turn arrow screen.	115

3

NAVIGATION SYSTEM

- Depending on the conditions, certain screen configuration buttons cannot be selected.

1. BASIC OPERATION

MAP ONLY



DUAL MAP



- The map on the left is the main map.

Editing right map

The right side map can be edited.

- 1 Select any point on the right side map.
- 2 Select the desired item.



No.	Function	Page
1	Select to change the orientation of the map.	80
2	Select to display POI icons.	85
3	Select to show traffic information.	90
4	Select to display eDestination icons.	426
5	Select to change the map scale.	78

- When set to on, the indicator will illuminate.

■ COMPASS

Information about the destination, current position and a compass is displayed on the screen.



INFORMATION

- The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.
- When the vehicle travels out of the coverage area, the guidance screen changes to the whole compass mode screen.

SCREEN SCROLL OPERATION

Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.



No.	Information/Function
1	Cursor mark
2	Distance from the current position to the cursor mark
3	Select to set as a destination. When selecting "Go to" on the following map screen, the navigation system performs a search for the route. (→P. 106) If a destination has already been set, "Go to" and "Add to Route" will be displayed. "Go to": Select to delete the existing destination(s) and set a new one. "Add to Route": Select to add a destination.
4	Select to register as a memory point. To change the icon, name, etc.: →P. 126
5	Select to return to the current position.

3

NAVIGATION SYSTEM

1. BASIC OPERATION

- To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob. The map will continue scrolling in that direction until the knob is released.

ADJUSTING LOCATION IN SMALL INCREMENTS

The cursor location can be adjusted in small increments when **“Adjust Location”** is selected on the setting map screen.

Also, when changing the location of memory points on the editing screen (→P. 128) and adjusting the current position mark manually on the “Calibration” screen (→P. 135), 8 directional arrows may appear for this purpose.

- 1 Select one of the 8 directional arrows to move the cursor to the desired point and then select **“OK”**.



1. BASIC OPERATION

3. MAP SCREEN INFORMATION


DISPLAYING MAP INFORMATION

Information such as POI icons, route trace, speed limit, etc. can be displayed on the map screen.

- 1 Select "Options" on the map screen.
- 2 Select "Map Information".



- 3 Select the desired items to be displayed.

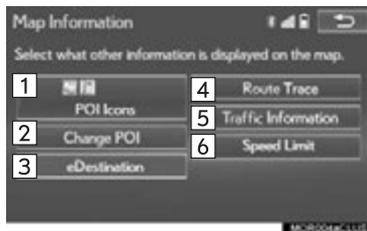

No.	Function	Page
1	Select to display the selected POI icons.	—
2	Select to select or change POI icons.	85
3	Select to display eDestination icons.	426
4	Select to display route trace.	87
5	Select to display traffic information.	90
6	Select to display speed limit icon.	—

3

NAVIGATION SYSTEM

- When set to on, the indicator will illuminate.

SELECTING THE POI ICONS


- 1 Display the "Map Information" screen. (→P. 85)
- 2 Select "Select POI".



- When the POI icons to be displayed on the map screen have already been set, "Change POI" is displayed.

1. BASIC OPERATION

3 Select the desired POI category and select “OK”.

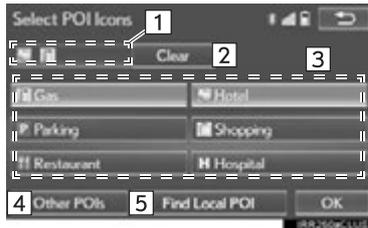

No.	Information/Function	Page
1	Displays up to 5 selected POI icons on the map screen.	–
2	Select to cancel the selected POI icons.	–
3	Displays up to 6 POI icons as favorite POI categories	134
4	Select to display other POI categories if the desired POIs cannot be found on the screen.	86
5	Select to search for the nearest POIs.	86

■ SELECTING OTHER POI ICONS TO BE DISPLAYED

- 1 Select “Other POIs”.
- 2 Select the desired POI categories and select “OK”.



“List All Categories”: Select to display all POI categories. To add more POI categories, select “More”.

■ DISPLAYING THE LOCAL POI LIST

POIs that are within 20 miles (32 km) of the current position will be listed from among the selected categories.

- 1 Select “Find Local POI”.
- 2 Select the desired POI.



“Near...”: Select to search for POIs near the current position or along the route.

- 3 Check that the selected POI is displayed on the map screen. (→P. 83)



► When "Near..." is selected

- 1 Select the desired item.



"Near Here": Select to search for POIs near the current position.

"Along My Route": Select to search for POIs along the route.

ROUTE TRACE

The traveled route can be stored and re-traced on the map screen. This feature is available when the map scale is 30 miles (50 km) or less.

- 1 Display the "Map Information" screen. (→P. 85)

- 2 Select "Route Trace".

● The "Route Trace" indicator illuminates and the route trace starts.

- 3 Check that the traveled line is displayed.



STOP RECORDING THE ROUTE TRACE

- 1 Select "Route Trace" again.

- 2 A confirmation screen will be displayed.

"Yes": Select to keep the recorded route trace.

"No": Select to erase the recorded route trace.

INFORMATION

- The traveled route can be stored up to 124 miles (200 km).

1. BASIC OPERATION


DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

When the cursor is placed over an icon on the map screen, the name bar is displayed on the upper part of the screen. If "Info" appears on the right side of the name bar, detailed information can be displayed.


- 1 Place the cursor over an icon.
- 2 Select "Info".




► POI information

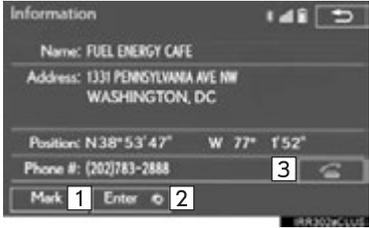

► Memory point information

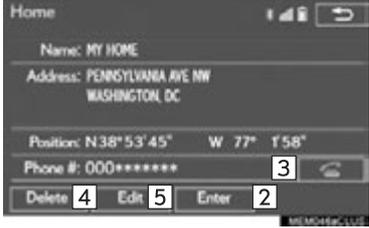

► Destination information

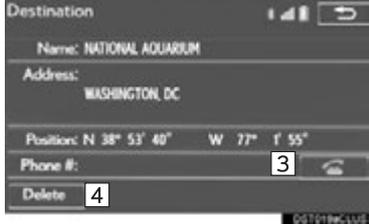

► Traffic information



No.	Function
1	Select to register as a memory point. To change the icon, name, etc.: →P. 126
2	Select to set as a destination.
3	Select to call the registered number.
4	Select to delete destination or memory point.
5	Select to display the edit memory point screen.
6	Select to display detailed information.

INFORMATION

- Even when traffic information is not currently being received, traffic information and "Info" will be displayed for a while after traffic information has been received.

STANDARD MAP ICONS

Icon	Name
	Island
	Park
	Industry
	Business facility
	Airport
	Military
	University
	Hospital
	Stadium
	Shopping mall
	Golf

3


NAVIGATION SYSTEM

1. BASIC OPERATION

4. TRAFFIC INFORMATION

Traffic data can be received via HD Radio broadcast or LEXUS App Suite to display traffic information on the map screen.

- 1 Press the "MENU" button on the Remote Touch.

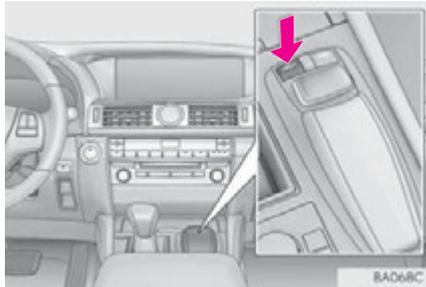


- 2 Select "Info".



- 3 Select "Traffic Incidents".



- 4 Select the desired item.

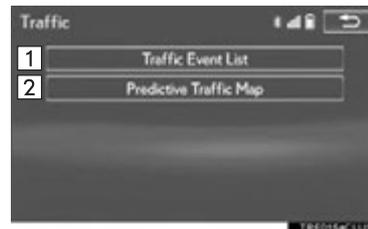


No.	Function	Page
1	Select to display a list of current traffic information.	91
2	Select to display a map with predictive traffic data.	91

DISPLAYING TRAFFIC INFORMATION

A list of current traffic information can be displayed along with information on the location and the distance of the incident.

- 1 Display the "Traffic" screen. (→P. 90)
- 2 Select "Traffic Event List".
- 3 Select the desired traffic information.

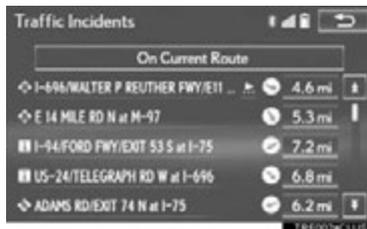

"On Current Road": Select to display traffic information for the current road.

"On Current Route": Select to display traffic information for the set route.

- When set to on, the indicator will illuminate.

- 4 Check that the traffic information is displayed.



"Detail": Select to display detailed traffic information.

DISPLAYING PREDICTIVE TRAFFIC INFORMATION

A map with predictive traffic data can be displayed.

- 1 Display the "Traffic" screen. (→P. 90)
- 2 Select "Predictive Traffic Map".
- 3 Scroll the map to the desired point and set the time of predictive traffic information. Then select "Info".



- The time of the predictive traffic information can be displayed in 15-minute steps up to +45 minutes.

"+": Moves the time forward 15 minutes.

"-": Moves the time back 15 minutes.

- 4 Check that the traffic information is displayed.



"Detail": Select to display detailed traffic information.


1. BASIC OPERATION

DISPLAYING TRAFFIC INFORMATION ON THE MAP

- 1 Select "Options" on the map screen.
- 2 Select "Map Information".




- 3 Select "Traffic Information".

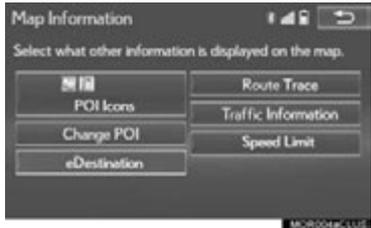

- When set to on, the indicator will illuminate.
- 4 Check that the traffic information is displayed.

▶ On the map screen

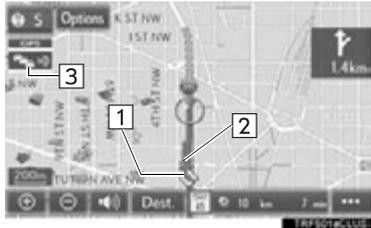

▶ On the freeway information screen




No.	Information/Function
1	The icons show traffic incident, road repair, traffic obstacles, etc. Select to display traffic information and start voice guidance for the traffic information.
2	The color of the arrow changes depending on the traffic information received.
3	The indicator is displayed as follows.  : Traffic information has been received.  : Traffic information has been received via HD Radio broadcast. No icon: Any traffic information has not been received.

2. DESTINATION SEARCH

1. DESTINATION SEARCH SCREEN

To display the “Destination” screen, press the “MENU” button on the Remote Touch, and select “Destination”.

The “Destination” screen can also be displayed by selecting “Dest.” on the map screen. (→P.74)

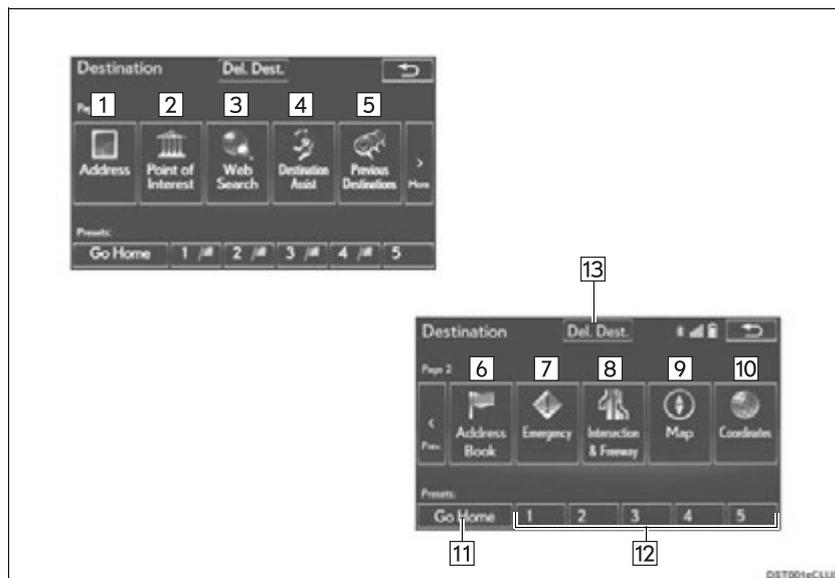

3

NAVIGATION SYSTEM

No.	Function	Page
1	Select to search for a destination by address.	97
2	Select to search for a destination by point of interest.	98
3	Select to search for a destination by online database.	420
4	Select to search for a destination via the Lexus response center.	425
5	Select to search for a destination from previously set destinations.	102
6	Select to search for a destination from a registered entry in “Address Book”.	102
7	Select to search for a destination from emergency service points.	103
8	Select to search for a destination by intersection or freeway entrance/exit.	103
9	Select to search for a destination by the last displayed map.	105


2. DESTINATION SEARCH

No.	Function	Page
10	Select to search for a destination by coordinates.	105
11	Select to set a destination by home.	96
12	Select to set a destination from preset destinations.	96
13	Select to delete set destinations.	118

2. DESTINATION SEARCH

2. SEARCH OPERATION

- 1 Press the "MENU" button on the Remote Touch.

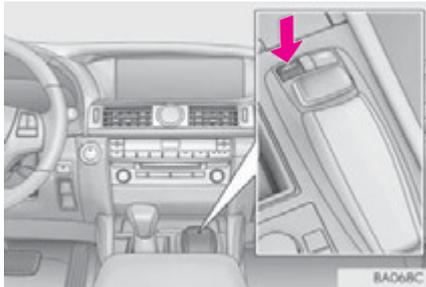

- 2 Select "Destination".




- 3 Search for a destination.



- There are different kinds of methods to search for a destination. (→P. 93)

- 4 Select "Go" when the confirm destination screen is displayed.

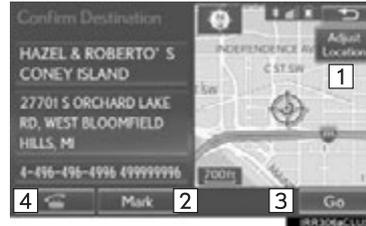


No.	Function
1	Select to adjust the position in smaller increments. (→P. 84)
2	Select to register as a memory point.
3	Select to search for the route. (→P. 106) If a destination has already been set, "Go Directly" and "Add to Route" will be displayed. "Go Directly": Select to delete the existing destination(s) and set a new one. "Add to Route": Select to add a destination.
4	Select to call the registered number.

2. DESTINATION SEARCH

SELECTING SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using **“Address”, “Point of Interest”** or **“Intersection & Freeway”**.

- 1 Display the “Destination” screen. (→P. 95)
- 2 Select **“Address”, “Point of Interest”** or **“Intersection & Freeway”**.
- 3 Select **“Select State/Province”** or **“Change State/Province”**.

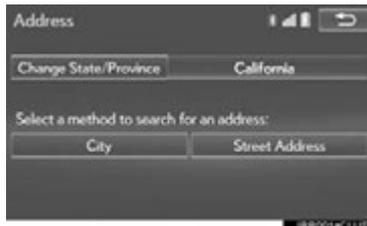

- If a state (province) has not been selected yet, **“Select State/Province”** is displayed.
- 4 Select the desired state (province).



- To change countries, select the **“United States”, “Canada”** or **“Mexico”** tab.
- For map database information and updates: →P. 143

SETTING HOME AS DESTINATION


To use this function, it is necessary to register a home address. (→P. 123)

- 1 Display the “Destination” screen. (→P. 95)
- 2 Select **“Go Home”**.
 - The navigation system performs a search for the route and the entire route map is displayed. (→P. 106)

SETTING PRESET DESTINATIONS AS DESTINATION

To use this function, it is necessary to register preset destinations to the preset screen buttons (1-5). (→P. 124)

- 1 Display the “Destination” screen. (→P. 95)
- 2 Select any of the preset destination buttons (1-5).

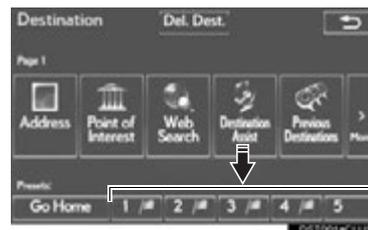

- The navigation system performs a search for the route and the entire route map is displayed. (→P. 106)

SEARCHING BY ADDRESS

There are 2 methods to search for a destination by address.

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select "Address".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by city.	97
2	Select to search by street address.	98

SEARCHING BY CITY

- 1 Select "City".
- 2 Enter a city name and select "OK".



"Last 5 Cities": Select the city name from the list of the last 5 cities.

- 3 Select the desired city name.
 - 4 Enter a street name and select "OK".
 - 5 Select the desired street name.
 - 6 Enter a house number and select "OK".
- If the same address exists, the address list screen will be displayed. Select the desired address.

2. DESTINATION SEARCH

SEARCHING BY STREET ADDRESS

- 1 Select "Street Address".
- 2 Enter a house number and select "OK".



- 3 Enter a street name and select "OK".
 - 4 Select the desired street name.
 - 5 Enter a city name and select "OK".
 - 6 Select the desired city name.
- If the same address exists, the address list screen will be displayed. Select the desired address.

INFORMATION

- A street name can be searched using only the body part of its name.
For example: S WESTERN AVE
 - A search can be performed by entering "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

SEARCHING BY POINT OF INTEREST

There are 4 methods to search for a destination by Points of Interest.

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select "Point of Interest".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by name.	99
2	Select to search by category.	100
3	Select to search by phone number.	101
4	Select to search by eDestination.	428

SEARCHING BY NAME

- 1 Select "Name".
- 2 Enter a POI name and select "OK".
- 3 Select the desired POI.



No.	Function	Page
1	Select to search for POI in the desired city.	99
2	Select to search for POI from the category list.	99
3	Select to search for POI using online database.	100

- When entering the name of a specific POI, and there are 2 or more sites with the same name, the list screen will be displayed. Select the desired POI.

INFORMATION

- To search for a facility name using multiple search words, put a space between each word.

SELECTING A CITY TO SEARCH

- 1 Select "City".
- 2 Enter a city name and select "OK".



"Any City": Select to cancel the city setting.

- 3 Select the desired city name.
- 4 Select the desired POI.

SELECTING FROM THE CATEGORIES

- 1 Select "Category".
- 2 Select the desired category.



- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

"List All Categories": Select to display all POI categories.


- 3 Select the desired POI.

3 NAVIGATION SYSTEM

2. DESTINATION SEARCH

SEARCHING FOR POI USING WEB SEARCH

- 1 Select "▼" next to "Web Search" to select a search engine.

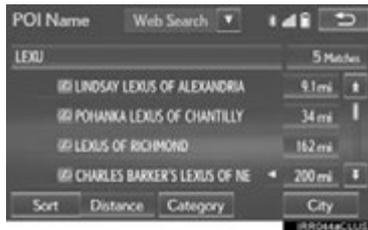


- 2 Select the desired search engine icon.



- The selected search engine icon will be displayed on the top center of the POI list screen.

- 3 Select the search engine icon.

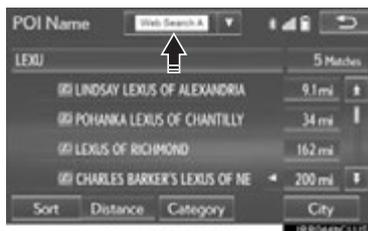

- Accessing to a search engine

For the procedure on how to conduct a search via a search engine, go to "SETTING A DESTINATION USING LEXUS App Suite" (→P. 421), and follow the steps from 3 onward.

SEARCHING BY CATEGORY

- 1 Select "Category".
- 2 Select the desired search point.



No.	Function
1	Select to set the search point from near the current position.
2	Select to search for POIs along the set route.
3	Select to set the search point from near a city center. (→P. 101)
4	Select to set the search point from near a destination.

3 Select the desired POI category.




- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

“List All Categories”: Select to display all POI categories.

“Favorite POI Categories”: Select to use the 6 POIs that have been previously set.(→P.134)

4 Select the desired POI.

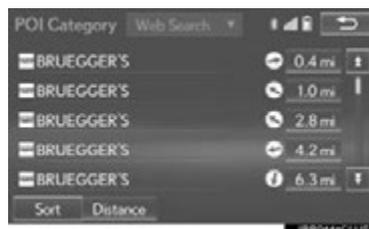

“Web Search”: Select to search for POI using online database. (→P.100)

INFORMATION

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

▶ When “Near a City Center in XX*” is selected

1 Select “Near a City Center in XX”.

2 Enter a city name and select “OK”.

“Last 5 Cities”: Select the city name from the list of the last 5 cities.

3 Select the desired city name.

4 Select “OK” when the city center map screen is displayed.

5 Follow the steps from 3 onward in “SEARCHING BY CATEGORY”. (→P.100)

*: XX represents the selected search area name.

INFORMATION

- If the navigation system has never been used, selecting the city name from **“Last 5 Cities”** will not be available.

SEARCHING BY PHONE NUMBER

1 Select “Phone #”.

2 Enter a phone number and select “OK”.

- If there is more than 1 site with the same number, the list screen will be displayed.

INFORMATION

- If there is no match for the entered phone number, a list of identical numbers with different area codes will be displayed.

3

NAVIGATION SYSTEM

2. DESTINATION SEARCH

DESTINATION SEARCH BY DESTINATION ASSIST

The destination can be searched by calling an operator of Destination Assist. You can request either a specific business, address, or ask for help locating your desired destination. (→P. 425)

SEARCHING FROM PREVIOUS DESTINATIONS

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select "**Previous Destinations**".
- 3 Select the desired destination.



"Previous Start Point": Select to display the start point map of the previous guided route.

"Delete": Select to delete the previous destination. (→P. 131)


INFORMATION

- The previous start point and up to 100 previously set destinations are displayed on the screen.

SEARCHING BY ADDRESS BOOK

To use this function, it is necessary to register an address book entry. (→P. 126)

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select "**Address Book**".
- 3 Select the desired address book entry.

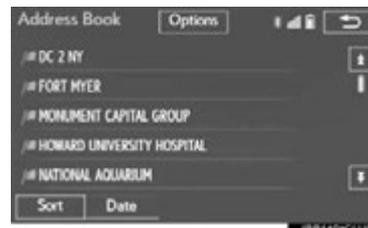

"Options": Select to register or edit address book entries. (→P. 127)

SEARCHING BY EMERGENCY

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select "Emergency".
- 3 Select the desired emergency category.



- 4 Select the desired destination.



INFORMATION

- The navigation system does not guide in areas where route guidance is unavailable. (→P. 141)

SEARCHING BY INTERSECTION AND FREEWAY

There are 2 methods to search for a destination by Intersection & Freeway.

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select "Intersection & Freeway".
- 3 Select the desired method.



No.	Function	Page
1	Select to search by intersection.	104
2	Select to search by freeway entrance/exit.	104

3 NAVIGATION SYSTEM

2. DESTINATION SEARCH

SEARCHING BY INTERSECTION


- 1 Select "Intersection".
- 2 Enter the name of the first intersecting street which is located near the destination and select "OK".
- 3 Select the desired street name.



- 4 Enter the name of the second intersecting street and select "OK".
- 5 Select the desired street name.



- If the 2 streets cross at more than 1 intersection in a city, the list of intersections will be displayed.

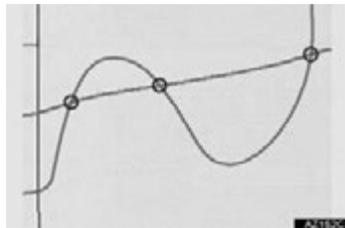

SEARCHING BY FREEWAY ENTRANCE/EXIT

- 1 Select "Freeway Entrance / Exit".
- 2 Enter a freeway name and select "OK".
- 3 Select the desired freeway.
- 4 Select "Entrance" or "Exit".



- 5 Enter a freeway entrance or exit name and select "OK".
- 6 Select the desired entrance or exit name.

INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

SEARCHING BY MAP

By selecting **"Map"** the last displayed location is displayed again on the map screen. You can search for a destination from this map.

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select **"Map"**.
- 3 Scroll the map to the desired point and select **"Go to"**.



"Adjust Location": Select to adjust the position in smaller increments. (→P. 84)

- If a destination has already been set, **"Go to"** and **"Add to Route"** will be displayed.

"Go to": Select to delete the existing destination(s) and set a new one.

"Add to Route": Select to add a destination.

- The navigation system performs a search for the route and the entire route map is displayed. (→P. 106)

SEARCHING BY COORDINATES

- 1 Display the "Destination" screen. (→P. 95)
- 2 Select **"Coordinates"**.
- 3 Enter the latitude and longitude and select **"OK"**.




2. DESTINATION SEARCH

3. STARTING ROUTE GUIDANCE

When the destination is set, the entire route map from the current position to the destination is displayed.

STARTING ROUTE GUIDANCE

- 1 Select "OK" to start guidance.

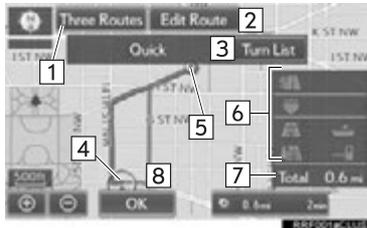

No.	Information/Function
1	Select the desired route from 3 possible routes. (→P.107)
2	Select to change the route. (→P.108)
3	Select to display a list of the turns required to reach the destination. (→P.108)
4	Current position
5	Destination point
6	Type of route and its distance
7	Distance of the entire route
8	Select to start guidance. If "OK" is selected and held until a beep sounds, demo mode will start. Press the "MAP/VOICE" or "MENU" button on the Remote Touch to end demo mode.

CAUTION


- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

INFORMATION

- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route or a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale more than 0.5 mile (800 m), the map scale changes to 0.5 mile (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the selected point is set as the destination.

3 ROUTES SELECTION


- 1 Select "Three Routes".
- 2 Select the desired route.

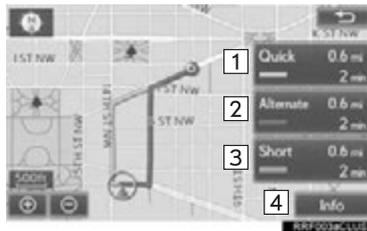

No.	Function
1	Select to display the quickest route.
2	Select to display the alternative route.
3	Select to display the route that is the shortest distance to the set destination.
4	Select to display the information about the 3 routes. (→P. 107)

■ DISPLAYING 3 ROUTES INFORMATION

- 1 Select "Info".
- 2 Check that the "Information for Three Routes" screen is displayed.

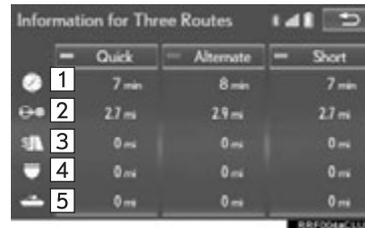

No.	Information
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Distance of the toll road
4	Distance of the freeway
5	Distance of the ferry trip

3

NAVIGATION SYSTEM

2. DESTINATION SEARCH

DISPLAYING TURN LIST

A list of turn information from the current position to the destination can be displayed.

- 1 Select "Turn List".
- 2 Check that the turn list is displayed.



No.	Information
1	Current position
2	Distance to the next turn
3	Turn direction at the intersection
4	Select to display the map of the selected point.

INFORMATION

- However, not all road names on the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

EDITING ROUTE

Destinations can be added, reordered or deleted, and conditions for the route to the destination can be changed.

- 1 Select "Edit Route".
- 2 Select the desired item.




No.	Function	Page
1	Select to add destinations.	118
2	Select to delete destinations.	118
3	Select to reorder destinations.	118
4	Select to set route preferences.	119
5	Select to change route type.	119

INFORMATION

- Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases. (→P. 119)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After traveling by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

PAUSING GUIDANCE

- 1 Select “Options” on the map screen.
- 2 Select “Pause Guidance”.

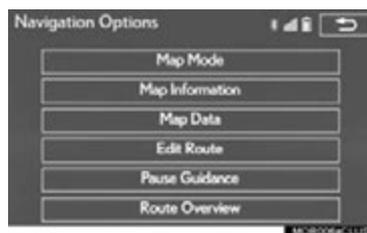**RESUMING GUIDANCE**

- 1 Select “Resume Guidance”.



3. ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN

During the route guidance, various types of guidance screens can be displayed depending on conditions.

SCREEN FOR ROUTE GUIDANCE



No.	Information
1	Distance to the next turn and an arrow indicating the turning direction
2	Guidance route
3	Current position
4	Current street name or route information

(INFORMATION)

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.
- When arriving at the set destination the destination name will be displayed on the upper part of the screen.

CHANGING ROUTE INFORMATION BAR

When the vehicle is on the guidance route, the route information bar displays the current street name or the distance with the estimated travel/arrival time to the destination.

- 1 Select the route information bar (1) or the route information button (2) to change the display of the route information bar.



No.	Information
1	Select to change the display between the estimated travel time and the estimated arrival time.
2	Select to change the display between the current street name and the distance with the estimated travel/arrival time.

INFORMATION

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the average speed for the specified speed limit.
- When the vehicle gets off the guidance route, the arrow facing the destination is displayed instead of the estimated travel/arrival time.
- The route information bar fills from left to right as the vehicle progresses on the route.

DISTANCE AND TIME TO DESTINATION


When driving on the guidance route with more than 1 destination set, a list of the distance with estimated travel/arrival time from the current position to each destination is displayed.

3 NAVIGATION SYSTEM

- 1 Select the route information bar.



- 2 Check that the list of the distance and time is displayed.

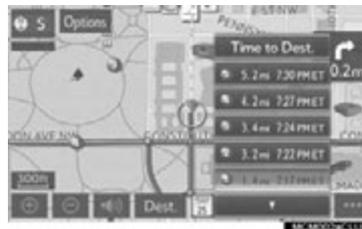

- By selecting one of the number buttons, the desired route information is displayed.

3. ROUTE GUIDANCE


ROUTE OVERVIEW

The entire route from the current position to the destination can be displayed during the route guidance.

- 1 Select "Options" on the map screen.



- 2 Select "Route Overview".

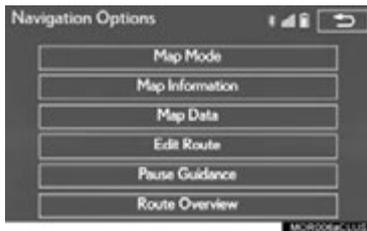

- 3 Check that the entire route map is displayed.



- For details about this screen: →P.106

DURING FREEWAY DRIVING


During freeway driving, the freeway exit information screen will be displayed.



No./Icon	Information/Function
1	Distance and time from the current position to the road traffic facilities.
2	Name of the road traffic facilities.
3	POIs that are close to a freeway exit
4	Select to display the selected map of the exit vicinity.
▲	Select to scroll to farther road traffic facilities.
▼	Select to scroll to closer road traffic facilities.

WHEN APPROACHING FREEWAY EXIT OR JUNCTION

When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

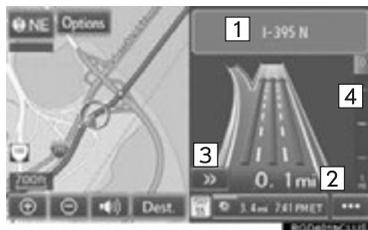

No.	Information/Function
1	Next exit or junction name
2	Distance from the current position to the exit or junction
3	Select to hide the freeway guidance screen. To return to the freeway guidance screen, select  .
4	Remaining distance bar to the guidance point

TOLLGATE GUIDANCE

When the vehicle approaches a tollgate, the tollgate view will be displayed.



No.	Information/Function
1	Distance from the current position to the tollgate
2	Select to hide the tollgate guidance screen. To return to the tollgate guidance screen, select  .
3	Remaining distance bar to the guidance point

3. ROUTE GUIDANCE

REAL FREEWAY JUNCTION VIEW


When the vehicle approaches a junction, the junction view with signage will be displayed.



No.	Information/Function
1	Next junction or street name
2	Select to hide the real freeway junction view. To return to the real freeway junction view, select  .
3	Distance from the current position to the next junction
4	Remaining distance bar to the guidance point

WHEN APPROACHING INTERSECTION

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.

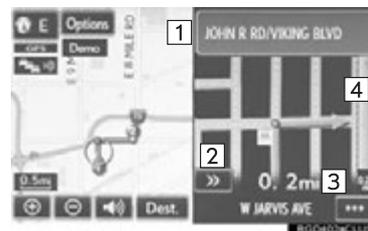

No.	Information/Function
1	Next street name
2	Select to hide the intersection guidance screen. To return to the intersection guidance screen, select  .
3	Distance to the intersection
4	Remaining distance bar to the guidance point

TURN LIST SCREEN

- 1 Select **"Turn List"** on the "Map Mode" screen. (→P. 81)
- 2 Check that the turn list screen is displayed.




No.	Information
1	Turn direction
2	Distance between turns
3	Next street or destination name

TURN-BY-TURN ARROW SCREEN

On this screen, information about the next turn on the guidance route can be displayed.

- 1 Select **"Turn-by-Turn Arrow"** on the "Map Mode" screen. (→P. 81)
- 2 Check that the turn-by-turn arrow screen is displayed.

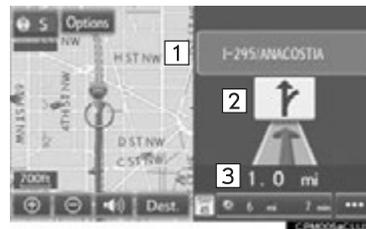

No.	Information
1	Exit number or street name
2	Turn direction
3	Distance to the next turn

3. ROUTE GUIDANCE

2. TYPICAL VOICE GUIDANCE PROMPTS

As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.

CAUTION

- Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads (roads that are not completely digitized in our database). The route guidance may not have the updated information such as the direction of a one way street.


INFORMATION

- If a voice guidance command cannot be heard, select  on the map screen to hear it again.
- To adjust the voice guidance volume:
→P. 66
- Voice guidance may be made early or late.
- If the system cannot determine the current position correctly, you may not hear voice guidance or may not see the magnified intersection on the screen.

3. ROUTE GUIDANCE

3. EDITING ROUTE


- 1 Press the "MAP/VOICE" button on the Remote Touch.

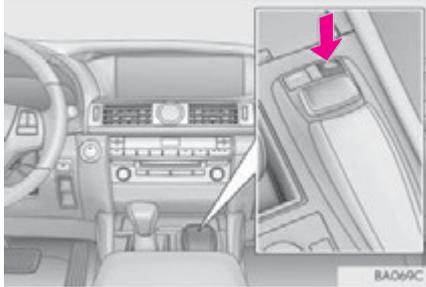

- 2 Select "Options".



- 3 Select "Edit Route".

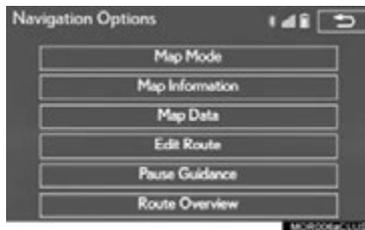

- 4 Select the item to be set.



No.	Function	Page
1	Select to add destinations.	118
2	Select to delete destinations.	118
3	Select to reorder destinations.	118
4	Select to set route preferences.	119
5	Select to change route type.	119
6	Select to set detours.	120
7	Select to start from adjacent road.	121

- 5 Check that the entire route map is displayed. (→P. 106)

3

NAVIGATION SYSTEM

ADDING DESTINATIONS

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "Add".
- 3 Search for an additional destination in the same way as a destination search. (→P. 93)
- 4 Select "Add Destination Here" to insert the new destination into the route.



REORDERING DESTINATIONS

When more than 1 destination has been set, the arrival order of the destinations can be changed.

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "Reorder".

- 3 Select the desired destination and select "Move Up" or "Move Down" to change the arrival order. Then select "OK".



DELETING DESTINATIONS

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "Delete".
- 3 Select "Yes" when the confirmation screen appears.
 - When more than 1 destination has been set, a list will be displayed on the screen. Select the item(s) to be deleted.



"Delete All": Select to delete all destinations on the list.

- If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.

SETTING ROUTE PREFERENCES

The conditions to determine the route can be selected from various choices such as freeways, toll roads, ferries, etc.

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "Preferences".
- 3 Select the desired route preferences and select "OK".



- When set to on, the indicator will illuminate.

SELECTING ROUTE TYPE

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "Route Type".
- 3 Select the desired route type and select "OK".



- During driving, the route guidance starts after selecting the desired route type.
- 4 The entire route from the starting point to the destination is displayed.



- For details about this screen: →P. 106

DETOUR SETTING


During the route guidance, the route can be changed to detour around a section of the route where a delay is caused by road repairs, an accident, etc.

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "Detour".
- 3 Select the desired detour distance.



No.	Function
1	Select to detour within 1 mile of the current position.
2	Select to detour within 3 miles of the current position.
3	Select to detour within 5 miles of the current position.
4	Select to detour on the entire route.
5	Select to make the system search for the route based on traffic congestion information received from traffic information. (→P. 90)

INFORMATION

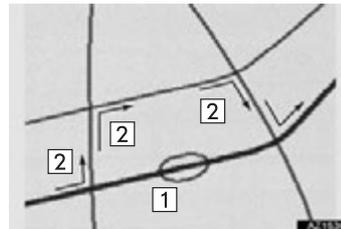

- This picture shows an example of how the system would guide around a delay caused by a traffic jam.
- 1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.
- 2 This route indicates the detour suggested by the system.
- When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).
- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

STARTING FROM ADJACENT ROAD

When a freeway and a surface road run in parallel, the system may show the guidance route going on the freeway while driving on the surface road, or vice versa.

If this happens, you can instantly choose the adjacent road for the route guidance.

- 1 Display the "Route" screen. (→P. 117)
- 2 Select "**Start from Adjacent Road**".

INFORMATION

- When there is no adjacent road, this screen button will not be displayed.


4. MEMORY POINTS

1. MEMORY POINTS SETTINGS

Home, preset destinations, address book entries, areas to avoid can be set as memory points. The registered points can be used as the destinations. (→P. 93)

Registered areas to avoid, will be avoided when the system searches for a route.

1 Press the “MENU” button on the Remote Touch.

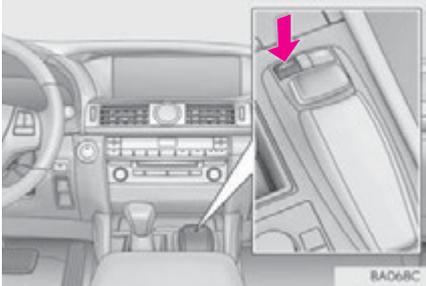

2 Select “Setup”.



3 Select “Navigation”.



4 Select the desired item to be set.




No.	Function	Page
1	Select to set home.	123
2	Select to set preset destinations.	124
3	Select to set the address book.	126
4	Select to set areas to avoid.	129
5	Select to delete previous destinations.	131
6	Select to set detailed navigation settings.	132

SETTING UP HOME

If home has been registered, that information can be recalled by selecting **“Go Home”** on the **“Destination”** screen. (→P. 96)

- 1 Display the **“Navigation Settings”** screen. (→P. 122)
- 2 Select **“Home”**.
- 3 Select the desired item to be set.

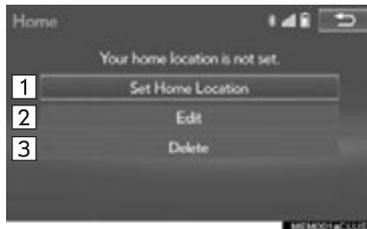


No.	Function	Page
1	Select to register home.	123
2	Select to edit home.	123
3	Select to delete home.	123

REGISTERING HOME

- 1 Select **“Set Home Location”**.
- 2 Select the desired item to search for the location. (→P. 93)
- 3 Select **“OK”** when the editing home screen appears.

EDITING HOME

- 1 Select **“Edit”**.
- 2 Select the desired item to be edited.

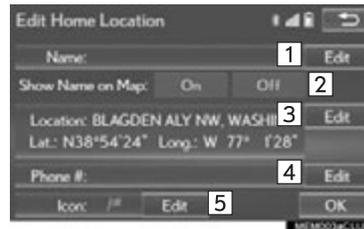

No.	Function	Page
1	Select to edit the home name.	128
2	Select to set display of the home name on/off.	—
3	Select to edit location information.	128
4	Select to edit the phone number.	128
5	Select to change the icon to be displayed on the map screen.	127

- 3 Select **“OK”**.

DELETING HOME

- 1 Select **“Delete”**.
- 2 Select **“Yes”** when the confirmation screen appears.

3 NAVIGATION SYSTEM

4. MEMORY POINTS

SETTING UP PRESET DESTINATIONS

If a preset destination has been registered, that information can be recalled by using preset destinations on the "Destination" screen. (→P. 96)

- 1 Display the "Navigation Settings" screen. (→P. 122)
- 2 Select "Preset Destinations".
- 3 Select the desired item.



No.	Function	Page
1	Select to register a preset destination.	124
2	Select to edit a preset destination.	125
3	Select to delete a preset destination.	125

REGISTERING PRESET DESTINATIONS

- 1 Select "Set".
- 2 Select the desired item to search for the location. (→P. 93)
- 3 Select a position for this preset destination.




- 4 Select "OK" when the editing preset destination screen appears. (→P. 125)

INFORMATION

- Up to 5 preset destinations can be registered.

EDITING PRESET DESTINATIONS

- 1 Select "Edit".
- 2 Select the desired preset destination.
- 3 Select the item to be edited.

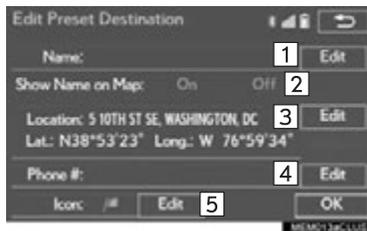


No.	Function	Page
1	Select to edit the preset destination name.	128
2	Select to set display of the preset destination name on/off.	—
3	Select to edit location information.	128
4	Select to edit the phone number.	128
5	Select to change the icon to be displayed on the map screen.	127

- 4 Select "OK".

DELETING PRESET DESTINATIONS

- 1 Select "Delete".
- 2 Select the preset destination to be deleted and select "Delete".

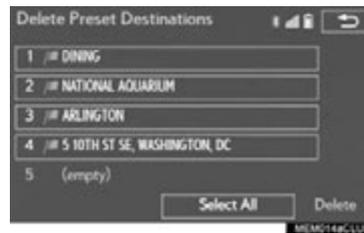

- 3 Select "Yes" when the confirmation screen appears.

3 NAVIGATION SYSTEM

4. MEMORY POINTS

SETTING UP ADDRESS BOOK

Points on the map can be registered.

- 1 Display the "Navigation Settings" screen. (→P. 122)
- 2 Select "Address Book".
- 3 Select the desired item.



No.	Function	Page
1	Select to register address book entries.	126
2	Select to edit address book entries.	127
3	Select to delete address book entries.	128

REGISTERING ADDRESS BOOK ENTRIES

- 1 Select "New".
- 2 Select the desired item to search for the location. (→P. 93)
- 3 Select "OK" when the editing address book entry screen appears. (→P. 127)


INFORMATION

- Up to 100 address book entries can be registered.

EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Select "Edit".
- 2 Select the desired address book entry.
- 3 Select the item to be edited.

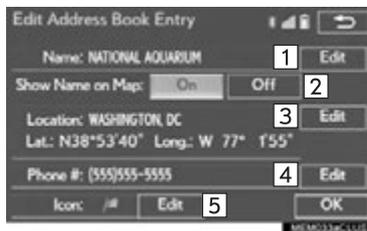

No.	Function	Page
1	Select to edit the address book entry name.	128
2	Select to set display of the address book entry name on/off.	—
3	Select to edit location information.	128
4	Select to edit the phone number.	128
5	Select to change the icon to be displayed on the map screen.	127

- 4 Select "OK".

CHANGING THE ICON

- 1 Select "Edit" next to the "Icon".
- 2 Select the desired icon.



- Change pages by selecting the "Page 1", "Page 2" or "With Sound" tab.

"With Sound": Select the memory points with a sound

- ▶ When the "With Sound" tab is selected

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

- 1 Select the "With Sound" tab.
- 2 Select the desired sound icon.



 : Select to play the sound.

3 NAVIGATION SYSTEM

4. MEMORY POINTS

- When **“Bell (with Direction)”** is selected, select an arrow to adjust the direction and select **“OK”**.



INFORMATION

- The bell sounds only when the vehicle approaches this point in the direction that has been set.

■ CHANGING THE NAME

- 1 Select **“Edit”** next to **“Name”**.
- 2 Enter a name and select **“OK”**.

■ CHANGING THE LOCATION


- 1 Select **“Edit”** next to **“Location”**.
- 2 Scroll the map to the desired point (→P. 84) and select **“OK”**.

■ CHANGING PHONE NUMBER

- 1 Select **“Edit”** next to **“Phone #”**.
- 2 Enter the phone number and select **“OK”**.

■ DELETING ADDRESS BOOK ENTRIES

- 1 Select **“Delete”**.
- 2 Select the item to be deleted and select **“Delete”**.

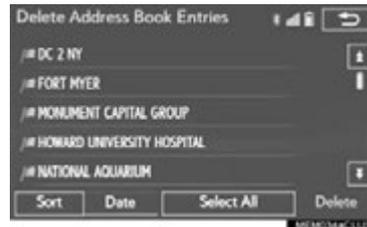

- 3 Select **“Yes”** when the confirmation screen appears.

SETTING UP AREAS TO AVOID

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as "Areas to Avoid".

- 1 Display the "Navigation Settings" screen. (→P. 122)
- 2 Select "Areas to Avoid".
- 3 Select the desired item.



No.	Function	Page
1	Select to register areas to avoid.	129
2	Select to edit areas to avoid.	129
3	Select to delete areas to avoid.	130

REGISTERING AREAS TO AVOID

- 1 Select "New".
- 2 Select the desired item to search for the location. (→P. 93)
- 3 Select either  or  to change the size of the area to be avoided and select "OK".



- 4 Select "OK" when the editing area to avoid screen appears.

INFORMATION

- If a destination is entered in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


EDITING AREAS TO AVOID

The name, location and/or area size of a registered area can be edited.


- 1 Select "Edit".

4. MEMORY POINTS

- 2 Select the area and select "OK".

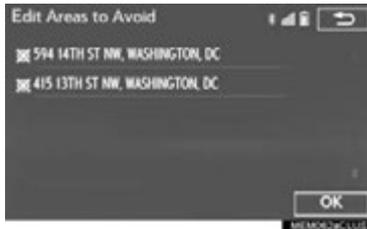

- 3 Select the item to be edited.

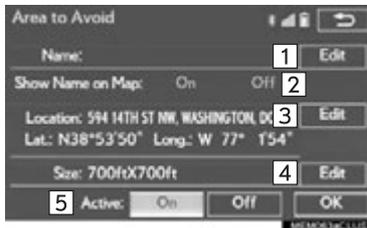

No.	Function	Page
1	Select to edit the name of the area to avoid.	130
2	Select to set display of the area to avoid name on/off.	—
3	Select to edit area location.	130
4	Select to edit area size.	130
5	Select to set the area to avoid function on/off.	—

- 4 Select "OK".

■ CHANGING THE NAME

- 1 Select "Edit" next to "Name".
- 2 Enter a name and select "OK".

■ CHANGING THE LOCATION

- 1 Select "Edit" next to "Location".
- 2 Scroll the map to the desired point (→P. 84) and select "OK".


■ CHANGING THE AREA SIZE

- 1 Select "Edit" next to "Size".
- 2 Select either  or  to change the size of the area to be avoided and select "OK".



■ DELETING AREAS TO AVOID

- 1 Select "Delete".
- 2 Select the area to be deleted and select "Delete".

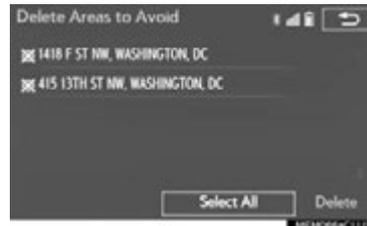

- 3 Select "Yes" when the confirmation screen appears.

DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Display the “Navigation Settings” screen. (→P. 122)
- 2 Select “Delete Previous Dest.”.
- 3 Select the previous destination to be deleted and select “Delete”.



- 4 Select “Yes” when the confirmation screen appears.

3


NAVIGATION SYSTEM

5. SETUP

1. DETAILED NAVIGATION SETTINGS

Settings are available for pop-up information, favorite POI categories, low fuel warning, etc.

1 Press the "MENU" button on the Remote Touch.

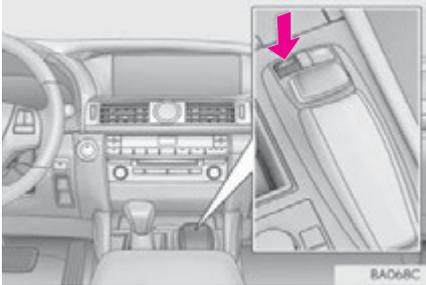


2 Select "Setup".



3 Select "Navigation".





4 Select "Detailed Navi. Settings".

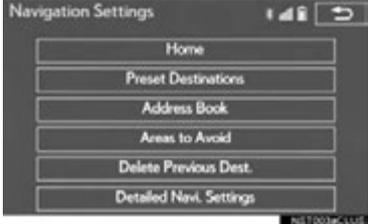

5 Select the items to be set.



SCREENS FOR NAVIGATION SETTINGS

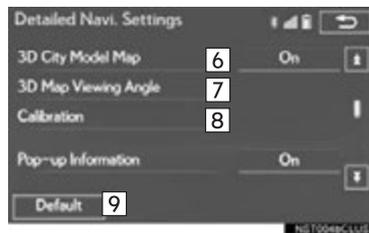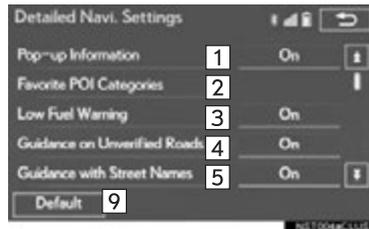

No.	Function	Page
1	Select to set display of pop-up information on/off.	—
2	Select to set favorite POI categories that are used for POI selection to display on the map screen.	134
3	Select to set display of low fuel warning on/off.	134
4	Select to set IPD road guidance on/off.	—
5	Select to set the voice guidance for the next street name on/off.	—
6	Select to set display of the 3D city model map on/off.	—
7	Select to change the viewing angle of the 3D map.	135
8	Select to adjust the current position mark manually or to adjust miscalculation of the distance caused by tire replacement.	135
9	Select to reset all setup items.	—

3
NAVIGATION SYSTEM

FAVORITE POI CATEGORIES (SELECT POI ICONS)

Up to 6 POI icons, which are used for selecting POIs on the map screen, can be selected as favorites.

- 1 Display the "Detailed Navi. Settings" screen. (→P.132)
- 2 Select "Favorite POI Categories".
- 3 Select the category to be changed.



"Default": Select to set the default categories.

- 4 Select the desired POI category.



"List All Categories": Select to display all POI categories.

- 5 Select the desired POI icon.

LOW FUEL WARNING

When the fuel level is low, a warning message will pop up on the screen.

- 1 Display the "Detailed Navi. Settings" screen. (→P.132)
- 2 Select "Low Fuel Warning".
- 3 Select "On" or "Off".

SEARCHING GAS STATION IN LOW FUEL WARNING

A nearby gas station can be selected as a destination.

- 1 Select "Yes" when the low fuel warning appears.
- 2 Select the desired nearby gas station.



- 3 Select "Enter" to set as a destination.



"Info": Select to display gas station information. (→P. 88)

CHANGING VIEWING ANGLE OF 3D MAP

- 1 Display the "Detailed Navi. Settings" screen. (→P.132)
- 2 Select "3D Map Viewing Angle".
- 3 Select "Up" or "Down" to change the viewing angle.




"Default": Select to set the initial angle.

CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Display the "Detailed Navi. Settings" screen. (→P.132)
- 2 Select "Calibration".
- 3 Select the desired item.

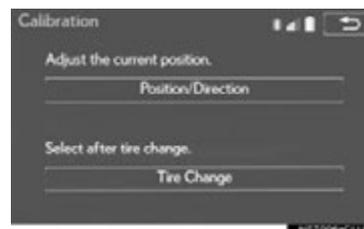

- For additional information on the accuracy of a current position: →P.140

POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Select "Position / Direction".
- 2 Scroll the map to the desired point (→P. 84) and select "OK".

5. SETUP

- 3 Select an arrow to adjust the direction of the current position mark and select "OK".



■ TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

- 1 Select "Tire Change".
 - The message appears and the quick distance calibration starts automatically.

INFORMATION


- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

5. SETUP

2. TRAFFIC SETTINGS

Traffic information such as traffic congestion or traffic incident warnings can be made available.


- 1 Press the "MENU" button on the Remote Touch.

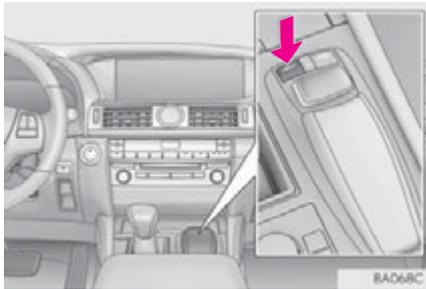


- 2 Select "Setup".



- 3 Select "Traffic".

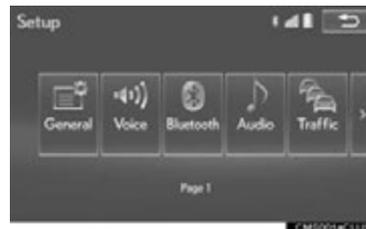


- 4 Select the items to be set.

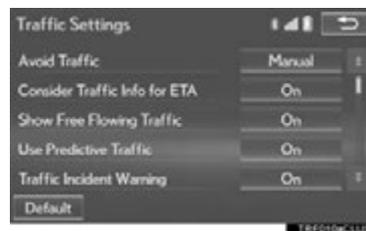

3

NAVIGATION SYSTEM

SCREEN FOR TRAFFIC SETTINGS

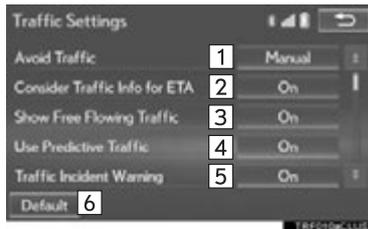

No.	Function
1	Select to set the avoid traffic function auto/manual. (→P. 138)
2	Select to set the usage of traffic information for the estimated arrival time on/off.
3	Select to set the display of an arrow of free flowing traffic on/off.
4	Select to set to on/off whether to consider the predictive traffic information (→P. 91) with estimated arrival time and detoured route search.
5	Select to set traffic incident voice warning on/off.
6	Select to reset all setup items.

AUTO AVOID TRAFFIC

- 1 Display the "Traffic Settings" screen. (→P. 137)
- 2 Select "Avoid Traffic".
- 3 Select the desired item.




No.	Function
1	Select to automatically change routes when congestion information of the guidance route has been received.
2	Select to select manually whether or not to change routes when congestion information of the guidance route has been received. In this mode, a screen will appear to ask if you wish to reroute.
3	Select to not reroute when congestion information for the guidance route has been received.

■ CHANGING THE ROUTE MANUALLY

When the navigation system calculates a new route, the following screen will be displayed.

- 1 Select the desired item.

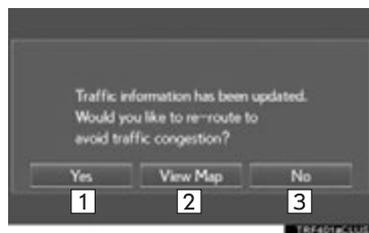

No.	Function
1	Select to start route guidance using the new route.
2	Select to confirm the new route and current route on the map.
3	Select to continue the current route guidance.

3

NAVIGATION SYSTEM

6. TIPS FOR THE NAVIGATION SYSTEM

1. GPS (GLOBAL POSITIONING SYSTEM)

LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system compensates for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When the vehicle is receiving signals from satellites, the "GPS" mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

NOTICE

- The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

- Accurate current position may not be shown in the following cases:
 - When driving on a small angled Y-shaped road.
 - When driving on a winding road.
 - When driving on a slippery road such as in sand, gravel, snow, etc.
 - When driving on a long straight road.
 - When freeway and surface streets run in parallel.
 - After moving by ferry or vehicle carrier.
 - When a long route is searched during high speed driving.
 - When driving without setting the current position calibration correctly.
 - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
 - When leaving a covered parking lot or parking garage.
 - When a roof carrier is installed.
 - When driving with tire chains installed.
 - When the tires are worn.
 - After replacing a tire or tires.
 - When using tires that are smaller or larger than the factory specifications.
 - When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration: →P. 135
- Inappropriate route guidance may occur in the following cases:
 - When turning at an intersection off the designated route guidance.
 - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
 - When turning at an intersection for which there is no route guidance.
 - When passing through an intersection for which there is no route guidance.
 - During auto reroute, the route guidance may not be available for the next turn to the right or left.
 - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
 - After auto reroute, the route may not be changed.
 - If an unnecessary U-turn is shown or announced.
 - If a location has multiple names and the system announces 1 or more of them.
 - When a route cannot be searched.
 - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
 - Your destination point might be shown on the opposite side of the street.
 - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time, season or other reasons.
 - The road and map data stored in the navigation system may not be complete or may not be the latest version.
- After replacing a tire: →P. 136

6. TIPS FOR THE NAVIGATION SYSTEM

INFORMATION

- This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.


6. TIPS FOR THE NAVIGATION SYSTEM

2. MAP DATABASE VERSION AND COVERED AREA

MAP INFORMATION

Coverage areas and legal information can be displayed and map data can be updated.


- 1 Press the "MAP/VOICE" button on the Remote Touch.

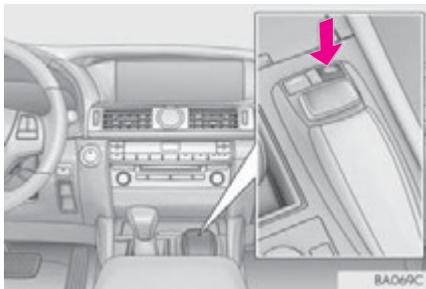

- 2 Select "Options".



- 3 Select "Map Data".

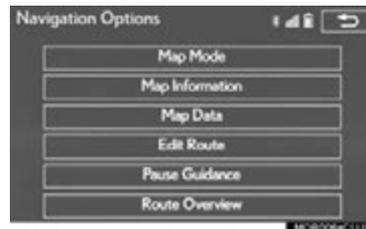

- 4 Check that the map data screen is displayed.



3

NAVIGATION SYSTEM

No.	Function
1	Map version
2	Select to update map.
3	Select to display map coverage areas.
4	Select to display legal information.

INFORMATION


- Map data updates are available for a fee. Contact your Lexus dealer for further information.

6. TIPS FOR THE NAVIGATION SYSTEM

ABOUT THE MAP DATA

Map data for the navigation system is contained in a SD card that is inserted in the SD card slot located at the bottom of the audio control panel.

Do not eject the SD card, as doing so may deactivate the navigation system.

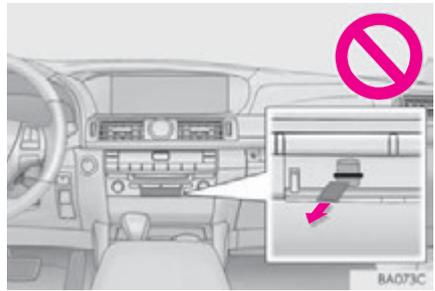

NOTICE

- Do not edit or delete the map data on the SD card, as doing so may deactivate the navigation system.

INFORMATION



- microSDHC Logo is a trademark of SD-3C,LLC.

4

AUDIO/VISUAL SYSTEM

1 BASIC OPERATION

1. QUICK REFERENCE	148
2. SOME BASICS	150
TURNING THE SYSTEM ON AND OFF.....	150
SELECTING AN AUDIO SOURCE	151
DISC SLOT.....	152
USB/AUX PORT	153
SOUND SETTINGS.....	154
AUDIO SCREEN ADJUSTMENT.....	155
VOICE COMMAND SYSTEM.....	156

2 RADIO OPERATION

1. AM/FM RADIO.....	157
OVERVIEW	157
PRESETTING A STATION	160
SELECTING A STATION FROM THE LIST.....	160
CACHING A RADIO PROGRAM.....	161
RADIO BROADCAST DATA SYSTEM	163
TRAFFIC ANNOUNCEMENT (FM RADIO).....	164
USING HD Radio™ TECHNOLOGY.....	165
AVAILABLE HD Radio™ TECHNOLOGY	165
TROUBLESHOOTING GUIDE.....	167
2. XM Satellite Radio.....	168
OVERVIEW	168
HOW TO SUBSCRIBE TO AN XM Satellite Radio.....	171

DISPLAYING THE RADIO ID	173
PRESETTING A CHANNEL.....	173
SELECTING A CHANNEL FROM THE LIST.....	173
IF THE SATELLITE RADIO TUNER MALFUNCTIONS	174
3. INTERNET RADIO	175
LISTENING TO INTERNET RADIO.....	175

3 MEDIA OPERATION

1. CD.....	176
OVERVIEW	176
PLAYING AN AUDIO CD	179
PLAYING AN MP3/WMA/AAC DISC.....	180
2. DVD.....	181
OVERVIEW	181
DVD OPTIONS.....	185
3. USB MEMORY.....	187
OVERVIEW.....	187
4. iPod.....	191
OVERVIEW	191
iPod AUDIO	195
iPod VIDEO	196
5. Bluetooth® AUDIO	197
OVERVIEW	197
CONNECTING A Bluetooth® DEVICE.....	201
LISTENING TO Bluetooth® AUDIO	201

1

2

3

4

5

6

7

8

9

10

6. AUX	203
OVERVIEW.....	203
7. VTR	206
OVERVIEW.....	206
VTR OPTIONS	208

4 AUDIO/VISUAL REMOTE CONTROLS

1. STEERING SWITCHES	209
2. REAR SEAT AUDIO CONTROLS	212

5 SETUP

1. AUDIO SETTINGS	215
AUDIO SETTINGS SCREEN.....	215

6 TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

1. OPERATING INFORMATION	221
RADIO.....	221
DVD PLAYER AND DISC	222
iPod.....	227
FILE INFORMATION.....	228
TERMS.....	230
ERROR MESSAGES.....	232

7 REAR SEAT ENTERTAINMENT SYSTEM FEATURES

1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES	233
QUICK REFERENCE.....	233
2. SOME BASICS	236
USING THE REMOTE CONTROLLER.....	236
TURNING ON/OFF THE REAR ENTERTAINMENT SYSTEM.....	237
INSERTING MEDIA OR CONNECTING A DEVICE TO THE REAR PLAYER	239
SELECTING THE SOUND MODE	241
SELECTING THE SOURCE.....	242
OPERATING REAR SEAT ENTERTAINMENT SYSTEM FROM THE FRONT SEATS.....	244

8 REAR SEAT ENTERTAINMENT SYSTEM OPERATION

1. AM/FM/SAT RADIO	245
OVERVIEW	245
2. CD	246
OVERVIEW	246
AUDIO CD	248
MP3/WMA/AAC DISC	249
3. VIDEO CD	250
OVERVIEW	250
VIDEO CD OPTIONS.....	251

4. DVD (DVD VIDEO AND AVCHD™ DISC).....	253
OVERVIEW	253
DVD VIDEO OPTIONS.....	255
AVCHD™ VIDEO OPTIONS.....	260
5. Blu-ray Disc™ (BD-Video AND BDAV).....	261
OVERVIEW	261
BD-VIDEO OPTIONS.....	263
BDAV OPTIONS.....	267
6. USB MEMORY	269
OVERVIEW	269
7. iPod.....	272
OVERVIEW	272
iPod AUDIO	274
8. Bluetooth® AUDIO	275
OVERVIEW	275
Bluetooth® AUDIO.....	277
9. SD CARD	278
SELECTING THE SD MODE	278
MUSIC.....	279
PICTURE	282
VIDEO/MOVIE.....	285
VIDEO (SD AVCHD™).....	289
10. EXTERNAL DEVICES.....	291
OVERVIEW	291

9 SETUP FOR REAR SEAT ENTERTAINMENT SYSTEM

1. REAR SEAT ENTERTAINMENT SYSTEM SETTINGS.....	292
DISPLAYING THE SETTING SCREEN.....	292

10 TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

1. OPERATING INFORMATION.....	295
CAUTION SCREEN.....	296
WHEN  APPEARS ON THE SCREEN	296
THE REMOTE CONTROLLER.....	296
HEADPHONES.....	297
VOLUME.....	297
COPYRIGHTS AND TRADEMARKS.....	298
CD/DVD/Blu-ray Disc™ PLAYER AND DISCS	302
SD CARD	311
A/V INPUT PORT	316

1

2

3

4

5

6

7

8

9

10

1. BASIC OPERATION

1. QUICK REFERENCE

Operations such as selecting a preset station and adjusting the sound balance are carried out on the screen.

The audio functions can also be displayed and operated on the "Side Display".
(→P. 440)

Some audio functions can also be operated from the rear seat.
(→P. 233)

▶ Using the instrument panel

Press the "RADIO" or "MEDIA" button to display the audio/visual screen.


▶ Using the Remote Touch

Press the "MENU" button on the Remote Touch, then select "Radio" or "Media" to display the audio/visual screen.

■ CONTROL SCREEN



■ CONTROL PANEL

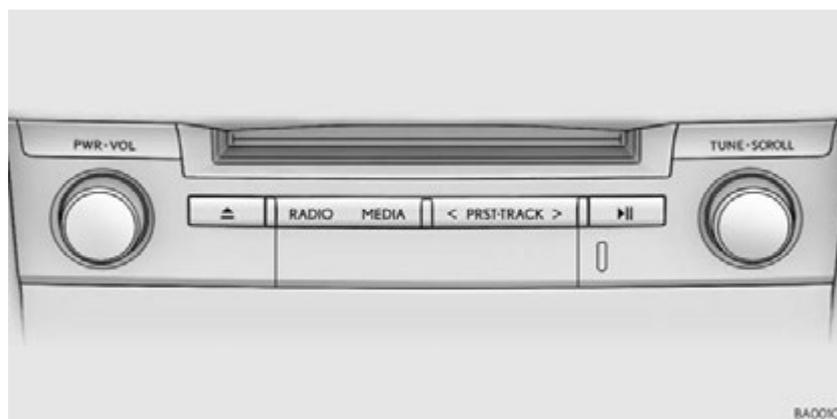

4

AUDIO/VISUAL SYSTEM

Function	Page
Using the radio	157
Playing an audio CD or MP3/WMA/AAC disc	176
Playing a DVD	181
Playing a USB memory	187
Playing an iPod®	191
Playing a Bluetooth® device	197
Using the AUX port	203
Playing the VTR	206
Using the steering wheel audio switches	209
Using the rear seat audio controls*	212
Audio system settings	215
Using the rear seat entertainment system*	233

INFORMATION

- The display and button positions will differ depending on the type of the system.

*: If equipped

1. BASIC OPERATION

2. SOME BASICS

This section describes some of the basic features of the audio/visual system. Some information may not pertain to your system.

Your audio/visual system works when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

NOTICE


- To prevent the 12-volt battery from being discharged, do not leave the audio/visual system on longer than necessary when the engine is not running <the hybrid system is not operating>.

CERTIFICATION

CAUTION:

- For vehicles sold in U.S.A.:
Part 15 of the FCC Rules
FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Laser products
 - USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
 - THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

TURNING THE SYSTEM ON AND OFF

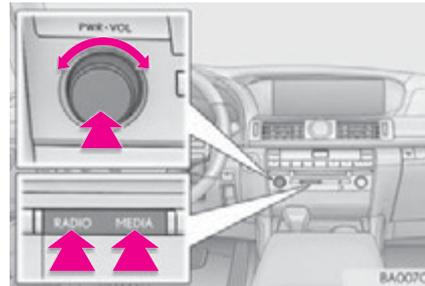

"PWR-VOL" knob: Press to turn the audio/visual system on and off. The system turns on in the last mode used. Turn this knob to adjust the volume.


"RADIO", "MEDIA" button: Press to display screen buttons for the audio/visual system.

- A function that enables automatic return to the previous screen from the audio/visual screen can be selected. (→P. 57)

SELECTING AN AUDIO SOURCE

► Using the instrument panel

- 1 Each time the "RADIO" or "MEDIA" button is pressed, the audio control mode changes.

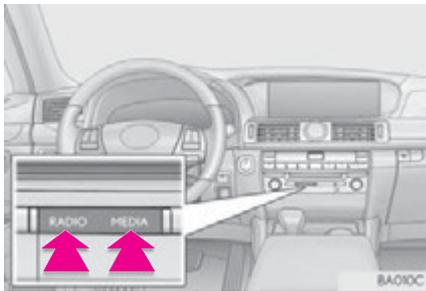


"RADIO" button: To display the radio operation screen.

"MEDIA" button: To display the external media operation screen.

► Using the Remote Touch

- 1 Press the "MENU" button on the Remote Touch.

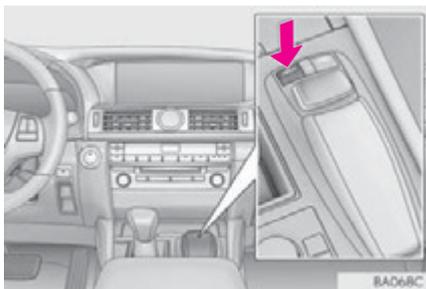

- 2 Select "Radio" or "Media".



- 3 Select "Source".



- 4 Select the desired source.



INFORMATION

- Dimmed screen buttons cannot be operated.
- When there are two pages, select ">" or "<" to change the page.
- When "Rear" is selected, the rear seat entertainment system can be operated from the front seats. (→P. 244)

4

AUDIO/VISUAL SYSTEM

1. BASIC OPERATION

REORDERING THE AUDIO SOURCE

- 1 Select "Source".



- 2 Select "Reorder".



- 3 Select the desired audio source then "<<" or ">>" to reorder.



DISC SLOT

INSERTING A DISC


- 1 Insert a disc into the disc slot.



- After insertion, the disc is automatically loaded.

EJECTING A DISC

- 1 Press the ▲ button and remove the disc.

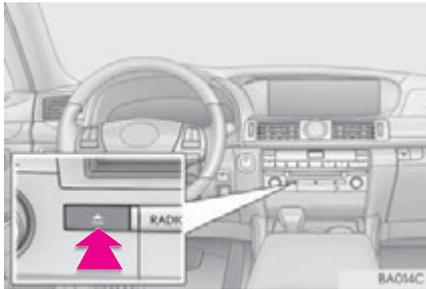

 **NOTICE**

- Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.


INFORMATION

- The player is intended for use with 4.7 in. (12 cm) discs only.
- When inserting a disc, gently insert the disc with the label facing up.

USB/AUX PORT

There are 2 USB ports and an AUX port in the console box.

- 1 Open the console box, then open the cover and connect a USB memory.

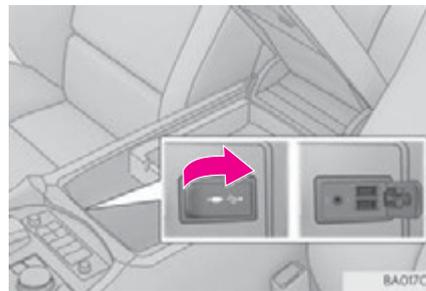

- Turn on the power of the device if it is not turned on.

- 2 Close the console box.

INFORMATION

- There are grooves in the tray allowing audio devices and cellular phones to be connected to the sockets while they are on the tray in the console box.



- Up to two portable players can be connected to the USB port at the same time.

4

AUDIO/VISUAL SYSTEM

1. BASIC OPERATION

SOUND SETTINGS

DSP CONTROL

1 Select **Sound**.



2 Select the "DSP" tab.



No.	Function
1	The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.
2	This function can create a feeling of presence.

3 Select the desired items to be set.

TONE AND BALANCE


TONE:
 How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

BALANCE:
 A good balance of the left and right stereo channels and of the front and rear sound levels is also important. Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

- 1 Select **Sound**.



- 2 Select the **"Sound"** tab.

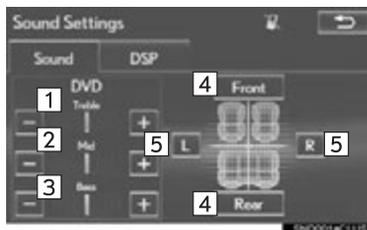

- 3 Select the desired screen button.

No.	Function
1	Select "+" or "-" to adjust high-pitched tones.
2	Select "+" or "-" to adjust mid-pitched tones.
3	Select "+" or "-" to adjust low-pitched tones.
4	Select to adjust the sound balance between the front and rear speakers.
5	Select to adjust the sound balance between the left and right speakers.


AUDIO SCREEN ADJUSTMENT

SCREEN SIZE SETTINGS

The screen size can be selected for each type of media.

- ▶ DVD video/iPod video/VTR

- 1 Select **"Options"** on the control screen.
- 2 Select **"Wide"** on the options screen.
- 3 Select the desired item to be adjusted.

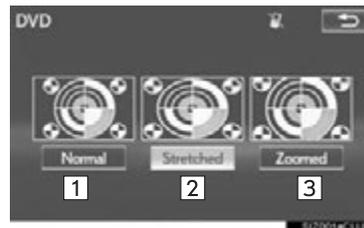

No.	Function
1	Select to display a 4 : 3 screen, with either side in black.
2	Select to enlarge the image horizontally and vertically to full screen.
3	Select to enlarge the image by the same ratio horizontally and vertically.

4 AUDIO/VISUAL SYSTEM

1. BASIC OPERATION

CONTRAST, BRIGHTNESS, COLOR AND TONE ADJUSTMENT

The brightness, contrast, color and tone of the screen can be adjusted.

- ▶ DVD video/iPod video/VTR
- 1 Select "Options" on the control screen.
- 2 Select "Display" on the option screen.
- 3 Select the desired item to be adjusted.



Screen button	Function
"Color" "R"	Select to strengthen the red color of the screen.
"Color" "G"	Select to strengthen the green color of the screen.
"Tone" "+"	Select to strengthen the tone of the screen.
"Tone" "-"	Select to weaken the tone of the screen.
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

INFORMATION

- Depending on the audio source, some functions may not be available.

VOICE COMMAND SYSTEM

- 1 Press this switch to operate the voice command system.



- The voice command system and its list of commands can be operated. (→P. 318)

2. RADIO OPERATION

1. AM/FM RADIO

OVERVIEW

The radio operation screen can be reached by the following methods:

▶ Using the instrument panel


Press the **"RADIO"** button to display the audio control screen.

▶ Using the Remote Touch

Press the **"MENU"** button on the Remote Touch, then select **"Radio"** to display the audio control screen.

4


CONTROL SCREEN

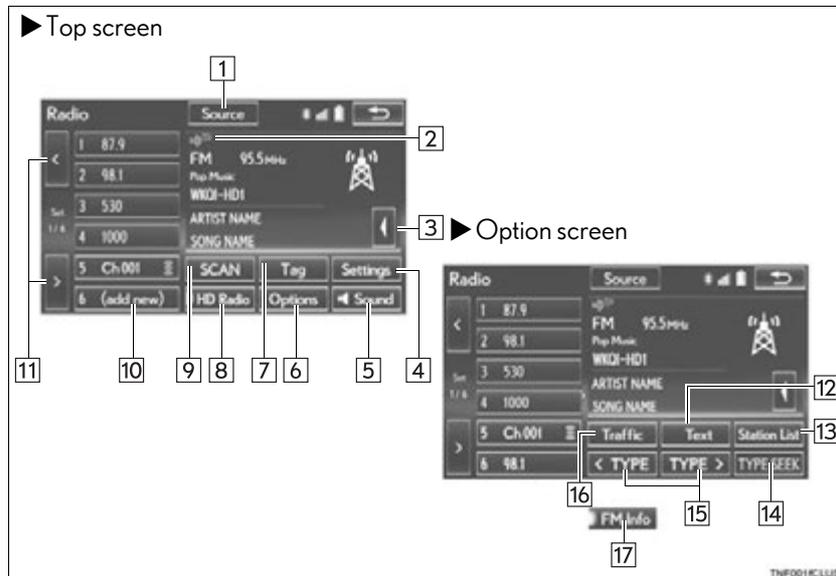

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

■ CONTROL PANEL

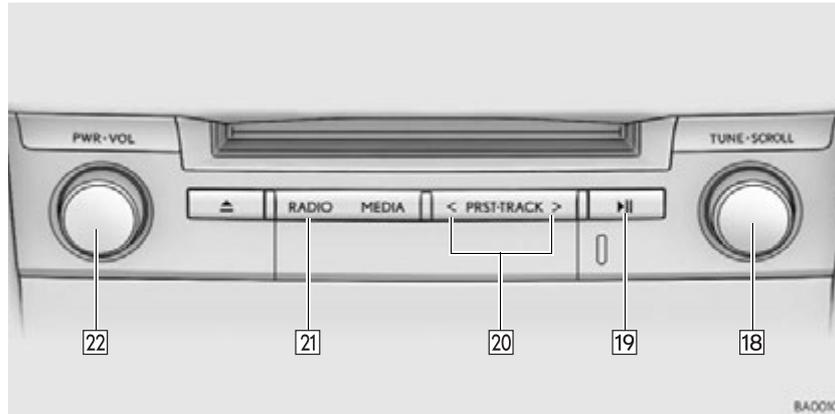

No.	Function
1	Select to display the audio source selection screen.
2	Select to display HD) multicast channels available.
3	Select to display the cache radio operation buttons.
4	Select to display the audio setting screen.
5	Select to display the sound setting screen.
6	Select to display the option screen.
7	Select to store artist and song title information.
8	<ul style="list-style-type: none"> Select to turn HD Radio mode on/off. When the "HD Radio" indicator is off, the station list shows only analog broadcasts.
9	Select to scan for receivable stations.
10	Select to tune to preset stations/channels.
11	Select to change the page of preset buttons.
12	Select to display text messages.

No.	Function
13	Select to display a list of receivable stations.
14	Select to seek a receivable station of the selected category.
15	Select to select a program type/channel category.
16	FM only: Select to display traffic messages.
17	Analog FM only: Select to display RBDS text messages.
18	<ul style="list-style-type: none"> • Turn to step up/down frequencies. • Turn to move up/down the list.
19	Cache radio only: Press to turn mute on/off.
20	<ul style="list-style-type: none"> • Press to select a preset station. • Press and hold to seek for a station.
21	<ul style="list-style-type: none"> • Press to select a radio mode. • While in a radio mode, pressing the "RADIO" button changes radio modes.
22	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

4

AUDIO/VISUAL SYSTEM

INFORMATION

- The radio automatically changes to stereo reception when a stereo broadcast is received.

2. RADIO OPERATION

PRESETTING A STATION

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

- 1 Tune in the desired station.
- 2 Select "add new".



- To change the preset station to a different one, select and hold the preset station.
- 3 Select "Yes" on the confirmation screen.
 - 4 Select "OK" after setting the new preset station.

INFORMATION

- The number of preset radio stations displayed on the screen can be changed. (→P. 217)

SELECTING A STATION FROM THE LIST

A station list can be displayed.


- 1 Select "Options".



- 2 Select "Station List".



- 3 FM radio only: Select the desired program type.

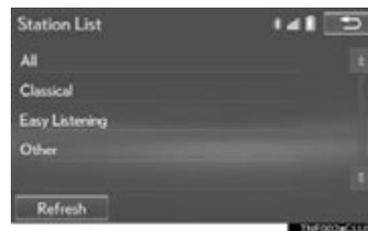


- 4 Select the desired station and select "OK".



REFRESHING THE STATION LIST

- 1 Select "Refresh" on the "Station List" screen and the following screen will be displayed.

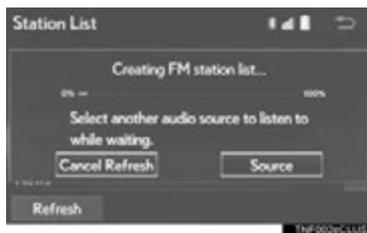

"Cancel Refresh": Select to cancel the refresh.

"Source": Select to change to another audio source while refreshing.

INFORMATION

- The audio system sound is muted during refresh operation.
- In some situations, it may take some time to update the station list.

CACHING A RADIO PROGRAM

A radio program can be cached and played back in a time-shifted manner.

PLAYING BACK THE CACHE MANUALLY

The broadcast cached in the program cache can be played back manually.

- 1 Select  on the right side of the screen.




4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

- 2 Select the desired cache radio operation button.

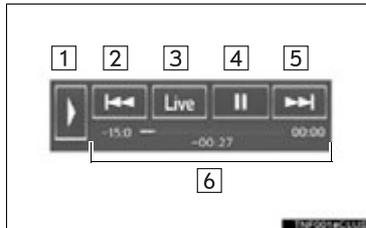

No.	Function
1	Hides the cache operation buttons
2	Select: Skips backward 2 minutes Select and hold: Fast rewinds continuously
3	Returns to the live radio broadcast
4	Pauses the playback (To restart, select )
5	Select: Skips forward 2 minutes Select and hold: Fast forwards continuously
6	Red vertical bar: Shows what portion of the cached broadcast is currently playing Light blue bar: Shows time in which cache writing is in progress

AUTOMATIC PLAYBACK OF THE CACHE

If the radio broadcast is interrupted by another audio output, such as an incoming phone call, the system will automatically cache the interrupted portion and perform time-shift playback when the interruption ends. To manually operate the cache operation: (→P. 161)

INFORMATION

- The system can store up to 15 minutes. Cached data will be erased when the radio mode or station is changed or when the audio system is turned off.
- If noise or silence occurs during the caching process, cache writing will continue, with the noise or silence recorded as is. In this case, the cached broadcast will contain the noise or silence when played back.

RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the “FM Info” indicator is on.

SELECTING A DESIRED PROGRAM TYPE

- 1 Select “Options”.



- 2 Select “TYPE >” or “< TYPE” to move forward and backward through the program list.



4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

- Once a program type has been set, "TYPE SEEK" will appear on the screen.
- The program list is in the following order:
 - "Classical"
 - "Country"
 - "EasyLis" (Easy Listening)
 - "Inform" (Information)
 - "Jazz"
 - "News"
 - "Oldies"
 - "Other"
 - "Pop Music"
 - "Religion"
 - "Rock"
 - "R&B" (Rhythm and Blues)
 - "Sports"
 - "Talk"
 - "Traffic" (Not available when "HD Radio" indicator is off.)
 - "Alert" (Emergency Alert)
- 3 Select "TYPE SEEK" and the system will start to seek for stations in the relevant program type.

INFORMATION

- If no relevant program can be found, "no type" will appear on the screen.

TRAFFIC ANNOUNCEMENT (FM RADIO)

A station that regularly broadcasts traffic information is automatically located.

- 1 Select "Options".



- 2 Select "Traffic" to seek a traffic program station. "TRAF SEEK" will appear on the screen.



INFORMATION

- If no traffic program station is found, "No Traffic" will appear on the screen.
- If a traffic program station is found, the name of the traffic program station will be displayed for a while.

USING HD Radio™ TECHNOLOGY

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.

HD Radio features included in Lexus radios:

- Digital Sound — HD Radio broadcasts deliver crystal-clear, digital audio quality to listeners.
- HD2/HD3 Channels — FM stations can provide additional digital only audio programming with expanded content and format choices on HD2/HD3 channels.
- PSD — Program Service Data (PSD) gives you on-screen information such as artist name and song title.
- iTunes Tagging — Listeners can tag (store) songs they like for later review and purchase through iTunes.
- Artist Experience — Images related to the broadcast are displayed on the radio screen, such as album cover art and station logos.

HD Radio®

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

AVAILABLE HD Radio™ TECHNOLOGY

MULTICAST

On the FM radio frequency most digital stations have “multiple” or supplemental programs on one FM station.

- 1 Select the “HD)” logo.



- 2 Select the desired channel.



- Turning the “TUNE-SCROLL” knob can also select the desired multicast channel.

4

AUDIO/VISUAL SYSTEM

PRESERVING A MUSIC INFORMATION

Tag information in the music broadcasting is preserved in the system and transmits to an iPod.

- 1 Select **"Tag"** to bookmark the music information.



- 2 Connect an iPod. (→P. 153)

- Turn on the power of the iPod if it is not turned on.
- Once an iPod is connected, the music tag moves from the radio into the iPod.
- When the iPod is connected to iTunes, the "tagged" information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album which had been listened to on their radio.

INFORMATION

- The tag information can not be preserved while scanning or caching the radio station.
- If tagging the music information fails, "Saving the HD Radio tag failed." will be displayed on the screen. If this occurs, tag the information again.
- HD Radio™ stations can be preset.
- An orange "HD)" logo indicator will be displayed on the screen when in digital. The "HD)" logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
- The song title, artist name and music genre will appear on the screen when available by the radio station. In addition, radios stations may send album cover pictures when available.
- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.

TROUBLESHOOTING GUIDE

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Turning the indicator of the "HD Radio" button off can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION


2. XM Satellite Radio

OVERVIEW


The radio operation screen can be reached by the following methods:

- ▶ Using the instrument panel
Press the **"RADIO"** button to display the audio control screen.
- ▶ Using the Remote Touch
Press the **"MENU"** button on the Remote Touch, then select **"Radio"** to display the audio control screen.

■ CONTROL SCREEN

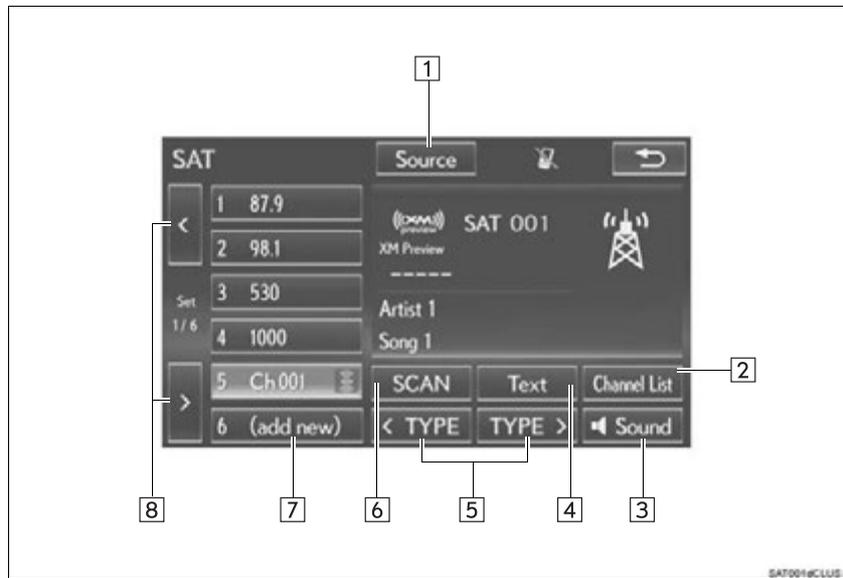

■ CONTROL PANEL

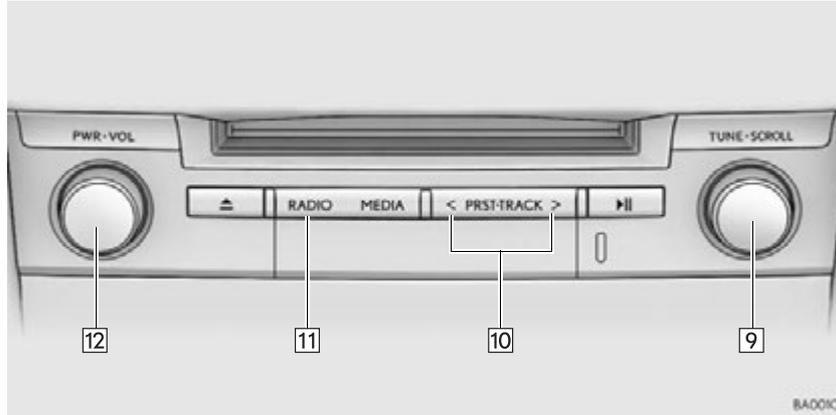

4
AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

No.	Function
1	Select to display the audio source selection screen.
2	Select to display a receivable channel list.
3	Select to display the sound setting screen.
4	Select to display text messages.
5	Select to select a program type/channel category.
6	Select to scan for receivable channels.
7	Select to tune to preset stations/channels.
8	Select to change the page of preset buttons.
9	<ul style="list-style-type: none">• Turn to step up/down channels.• Turn to move up/down the list.
10	<ul style="list-style-type: none">• Press to select a preset channel.• Press and hold to seek for a channel.
11	<ul style="list-style-type: none">• Press to select a radio mode.• While in a radio mode, pressing the "RADIO" button changes radio modes.
12	<ul style="list-style-type: none">• Turn to adjust volume.• Press to turn the audio system on/off.• Press and hold to restart the audio system.

HOW TO SUBSCRIBE TO AN XM Satellite Radio

To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary.

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

HOW TO SUBSCRIBE

It is necessary to enter into a separate service agreement with XM Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and digital satellite tuner.

- For complete information on subscription rates and terms, or to subscribe to XM Satellite Radio:
 - ▶ U.S.A.
Refer to www.siriusxm.com or call 1-877-515-3987.
 - ▶ Canada
Refer to www.xmradio.ca or call 1-877-438-9677.

NOTICE

- XM Radio Services — Legal Disclaimers and Warnings
 - Fees and Taxes — Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change.
Subscriptions subject to Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and Canada.
 - Explicit Language Notice — Channels with frequent explicit language are indicated with an "XL" preceding the channel name. Channel blocking is available for XM Satellite Radio receivers by notifying XM at:
 - U.S.A. Customers:
Visit www.siriusxm.com or calling 1-877-515-3987
 - Canadian Customers:
Visit www.xmradio.ca or calling 1-877-438-9677
- It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the XM Satellite Radio System or that support the XM website, the Online Service or any of its content. Furthermore, the AMBE[®] voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.
- Note: this applies to XM receivers only and not XM Ready devices.

2. RADIO OPERATION

INFORMATION

- XM Radio Services — Descriptions
 - Radio and Entertainment
XM offers more than 170 satellite radio channels of commercial-free music and premier sports, news, talk, and entertainment. XM is broadcast via satellites to millions of listeners across the continental United States. XM subscribers listen to XM on satellite radio receivers for the car, home, and portable use. More information about XM is available online at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada).
- XM Radio Services — Subscription Instructions
 - For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.
Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.
For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at: U.S.A. Customers:
Visit www.siriusxm.com or call 1-877-515-3987
Canadian Customers:
Visit www.xmradio.ca or call 1-877-438-9677

INFORMATION

- XM Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM Satellite Radio customer service agreement.
- Customers should have their radio ID ready; the radio ID can be found by tuning to "Ch 000" on the radio. For details, see "DISPLAYING THE RADIO ID" below.
- All fees and programming are the responsibility of XM Satellite Radio and are subject to change.

SATELLITE TUNER TECHNOLOGY NOTICE

Lexus's satellite radio tuners are awarded Type Approval Certificates from XM Satellite Radio Inc. as proof of compatibility with the services offered by XM Satellite Radio.

INFORMATION

- Satellite tuner
The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM[®] Satellite Radio.

DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

- If “Ch 000” is selected using the “TUNE-SCROLL” knob, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

PRESETTING A CHANNEL

- 1 Tune in the desired channel.
- 2 Select “add new”.




- To change the preset channel to a different one, select and hold the preset station/channel.
- 3 Select “Yes” on the confirmation screen.
 - 4 Select “OK” after setting the new preset channel.

SELECTING A CHANNEL FROM THE LIST


- 1 Select “Channel List”.



- 2 Select the desired program type.

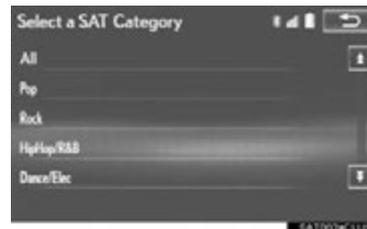

- 3 Select the desired channel and select “OK”.

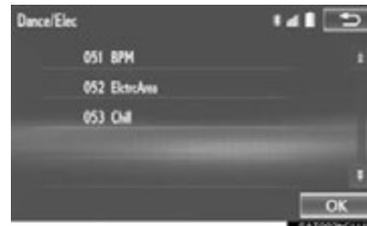

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
"Ck Antenna"	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Lexus certified dealer for assistance.
"Ch Unauth"	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "Ch 000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
"No Signal"	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"Loading..."	The unit is acquiring audio or program information. Wait until the unit has received the information.
"Ch Off Air"	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
"Ch Unavail"	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel.

INFORMATION

- Contact the XM Listener Care Center at 1-877-515-3987 (U.S.A.) or 1-877-438-9677 (Canada).

2. RADIO OPERATION

3. INTERNET RADIO*

LISTENING TO INTERNET RADIO

One of LEXUS App Suite's features is the ability to listen to internet radio. In order to use this service, a compatible phone and the system needs to be set up. For details: →P. 415

- 1 Select the desired application screen button.



- The internet radio application screen is displayed.
- Perform operations according to the displayed application screen.
- For the instrument panel operation method and the Remote Touch operation method: →P.151
- By pressing the "RADIO" button, the "Audio" screen can be returned to.

INFORMATION

- Other applications can be activated while listening to internet radio.
- An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using applications by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.
- Some parts of applications can be adjusted using the switches on the steering wheel.
- For additional information, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

4

AUDIO/VISUAL SYSTEM

*: With navigation function

3. MEDIA OPERATION

1. CD

OVERVIEW

The CD operation screen can be reached by the following methods:


- ▶ Inserting a disc (→P. 152)
- ▶ Using the instrument panel

Press the “**MEDIA**” button to display the audio control screen.


- ▶ Using the Remote Touch

Press the “**MENU**” button on the Remote Touch, then select “**Media**” to display the audio control screen.

■ CONTROL SCREEN

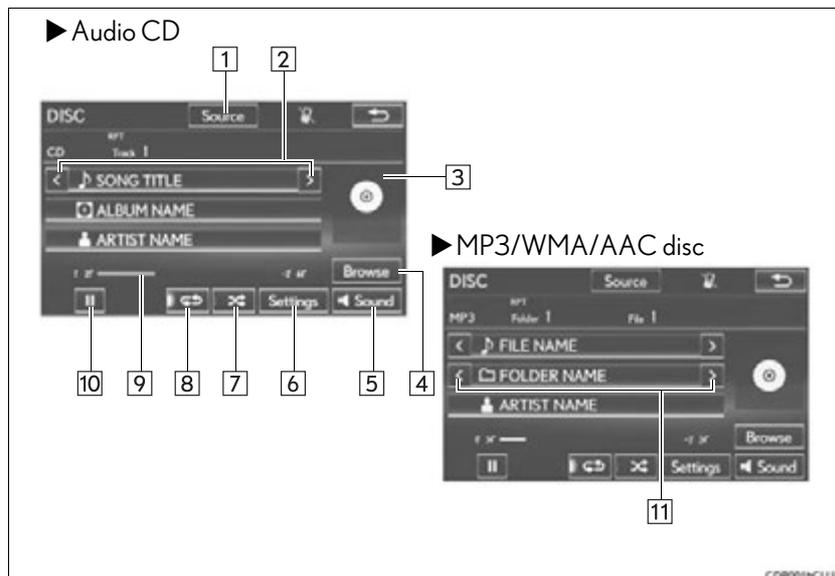

■ CONTROL PANEL

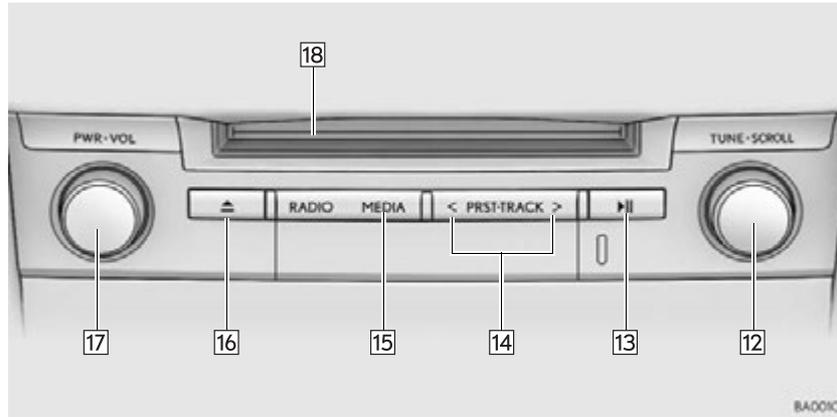

4
AUDIO/VISUAL SYSTEM

No.	Function
1	Select to display the audio source selection screen.
2	Select to select a track/file.
3	<ul style="list-style-type: none"> • Displays cover art • Select to display a track/file list.
4	<ul style="list-style-type: none"> • Audio CD: Select to display a track list. • MP3/WMA/AAC disc: Select to display a folder list. To return to the top screen, select "Now Playing" on the list screen.
5	Select to display the sound setting screen.
6	Select to display the audio setting screen.
7	Select to set random playback.
8	Select to set repeat playback.
9	Shows progress
10	Select to play/pause.
11	Select to select a folder.

3. MEDIA OPERATION

No.	Function
12	<ul style="list-style-type: none">• Turn to select a track/file.• Turn to move up/down the list.
13	Press to play/pause.
14	<ul style="list-style-type: none">• Press to select a track/file.• Press and hold to fast forward/rewind.
15	<ul style="list-style-type: none">• Press to select a media mode.• While in a media mode, pressing the "MEDIA" button changes media modes.
16	Press to eject a disc.
17	<ul style="list-style-type: none">• Turn to adjust volume.• Press to turn the audio system on/off.• Press and hold to restart the audio system.
18	Disc slot

INFORMATION

- If a disc contains CD-DA files and MP3/WMA/AAC files, only the CD-DA files can be played back.
- If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.

PLAYING AN AUDIO CD

REPEATING

The track currently being listened to can be repeated.

1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → off

INFORMATION

- When  is selected, "RPT" appears on the screen.

RANDOM ORDER

Tracks can be automatically and randomly selected.

1 Select .



- Each time  is selected, the mode changes as follows:
 - random (1 disc random) → off

INFORMATION

- When  is selected, "RAND" appears on the screen.

4

AUDIO/VISUAL SYSTEM

PLAYING AN MP3/WMA/
AAC DISC

REPEATING

The file or folder currently being listened to can be repeated.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file repeat → folder repeat → off
 - ▶ When random playback is on
 - file repeat → off

INFORMATION

- Each time  is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - random (1 folder random) → folder random (1 disc random) → off

INFORMATION

- Each time  is selected, "RAND"/"FLD.RAND" appears on the screen.

3. MEDIA OPERATION

2. DVD

For safety reasons, the DVD video discs can only be viewed when the following conditions are met:

- (a) The vehicle is completely stopped.
- (b) The engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.
- (c) The parking brake is applied.

While driving in DVD video mode, only the DVD's audio can be heard.

The playback condition of some DVD discs may be determined by the DVD software producer. This DVD player plays a disc as the software producer intended. As such, some functions may not work properly. Be sure to read the instruction manual that comes with the individual DVD disc. (→P. 222)

4

AUDIO/VISUAL SYSTEM

OVERVIEW

The DVD operation screen can be reached by the following methods:

- ▶ Inserting a disc (→P. 152)
- ▶ Using the instrument panel


Press the **"MEDIA"** button to display the audio control screen.

- ▶ Using the Remote Touch


Press the **"MENU"** button on the Remote Touch, then select **"Media"** to display the audio control screen.

3. MEDIA OPERATION

■ CONTROL SCREEN

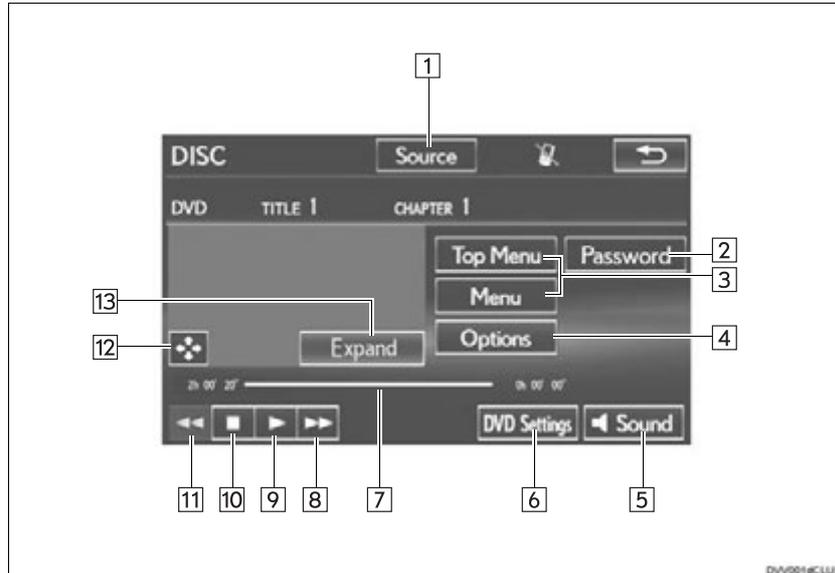

■ CONTROL PANEL

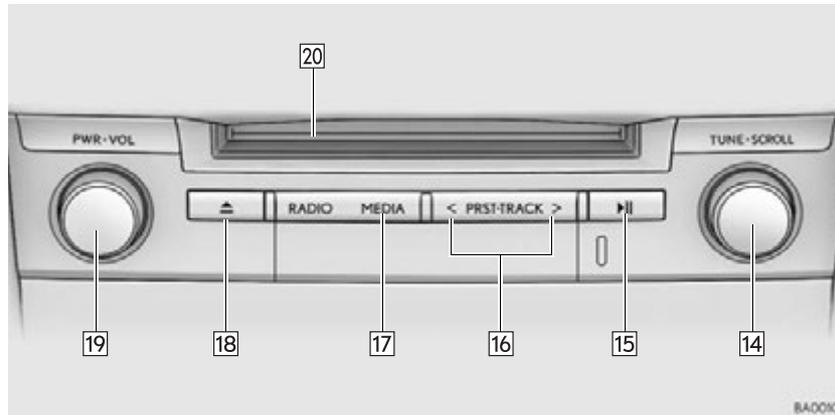

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the password input screen.
3	Select to display the menu screen.
4	Select to display the option screen. (→P. 185)
5	Select to display the sound setting screen.
6	Select to display the DVD setting screen.
7	Shows progress
8	<ul style="list-style-type: none"> • During playback: Select to fast forward. • During a pause: Select to slow forward.
9	Select to play/pause.
10	Select to stop the video screen.
11	Select to rewind.
12	Select to display the menu control key.
13	Select to display full screen video.
14	Turn to select a chapter.
15	Press to play/pause.
16	<ul style="list-style-type: none"> • Press to select a chapter. • Press and hold to fast forward/rewind.
17	<ul style="list-style-type: none"> • Press to select a media mode. • While in a media mode, pressing the "MEDIA" button changes media modes.
18	Press to eject a disc.
19	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.
20	Disc slot

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

CAUTION

- Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

INFORMATION

- According to the DVD disc, some menu items can be selected directly. (For details, see the manual that comes with the DVD disc provided separately.)
- If  appears on the screen when a control is selected, the operation relevant to the control is not permitted.

DVD OPTIONS

1 Select "Options".



2 The following screen is displayed.



No.	Function	Page
1	Select to display the title search screen.	186
2	Select to display the predetermined scene on the screen and start playing.	—
3	Select to display the audio selection screen.	186
4	Select to display the subtitle selection screen.	186
5	Select to display the angle selection screen.	186
6	Select to change the screen size.	155
7	Select to display the image quality adjustment screen.	156

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

SEARCHING BY TITLE


- 1 Select "Search".
- 2 Enter the title number and select "OK".



- The player starts playing video for that title number.

CHANGING THE AUDIO LANGUAGE


- 1 Select "Audio".
- 2 Each time "Change" is selected, the audio language is changed.

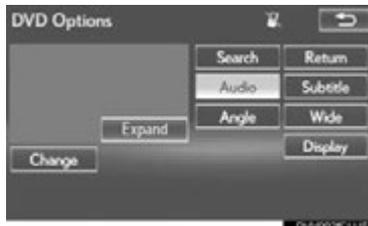

- The languages available are restricted to those available on the DVD disc.

CHANGING THE SUBTITLE LANGUAGE

- 1 Select "Subtitle".
- 2 Each time "Change" is selected, the language the subtitles are displayed in is changed.

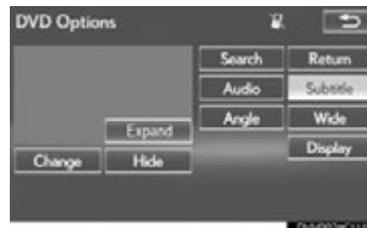

- The languages available are restricted to those available on the DVD disc.
- When "Hide" is selected, the subtitles can be hidden.

CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select "Angle".
- 2 Each time "Change" is selected, the angle is changed.



- The angles available are restricted to those available on the DVD disc.

3. MEDIA OPERATION

3. USB MEMORY

OVERVIEW

The USB memory operation screen can be reached by the following methods:

▶ Connecting a USB memory (→P. 153)

▶ Using the instrument panel


Press the **"MEDIA"** button to display the audio control screen.

▶ Using the Remote Touch

Press the **"MENU"** button on the Remote Touch, then select **"Media"** to display the audio control screen.

4


■ CONTROL SCREEN

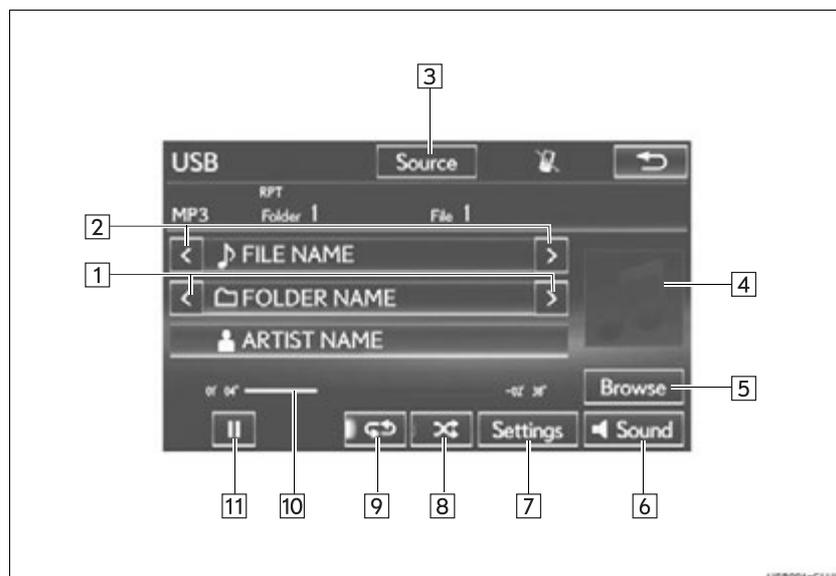

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

■ CONTROL PANEL

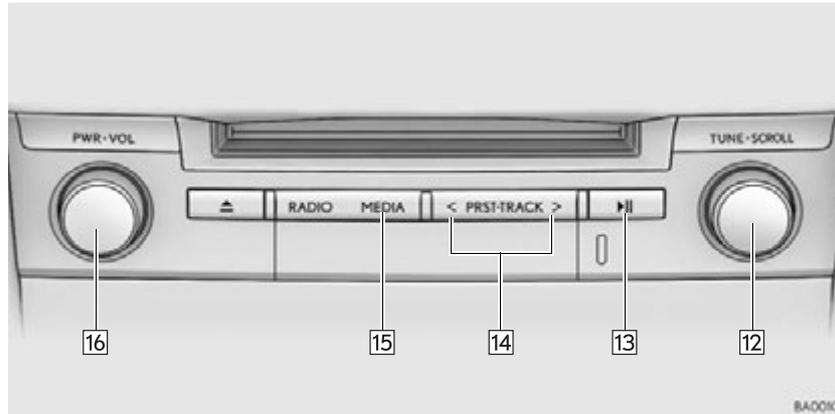

No.	Function
1	Select to select a folder/album.
2	Select to select a file/track.
3	Select to display the audio source selection screen.
4	<ul style="list-style-type: none"> • Displays cover art • Select to display a file/track list. To return to the top screen, select "Now Playing" on the list screen.
5	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.
6	Select to display the sound setting screen.
7	Select to display the audio settings screen.
8	Select to set random playback.
9	Select to set repeat playback.
10	Shows progress
11	Select to play/pause.
12	<ul style="list-style-type: none"> • Turn to select a track/file. • Turn to move up/down the list.

No.	Function
13	Press to play/pause.
14	<ul style="list-style-type: none"> • Press to select a track/file. • Press and hold to fast forward/rewind.
15	<ul style="list-style-type: none"> • Press to select a media mode. • While in a media mode, pressing the “MEDIA” button changes media modes.
16	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

4

AUDIO/VISUAL SYSTEM

CAUTION

- Do not operate the player’s controls or connect the USB memory while driving.

NOTICE

- Depending on the size and shape of the USB memory that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the USB memory or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION

- If tag information exists, the file/folder names will be changed to track/album names.

REPEATING

The file/track or folder/album currently being listened to can be repeated.

1 Select .



- Each time  is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file/track repeat → folder/album repeat → off
 - ▶ When random playback is on
 - file/track repeat → off

INFORMATION

- Each time  is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files/tracks or folders/albums can be automatically and randomly selected.

1 Select .



- Each time  is selected, the mode changes as follows:
 - random (1 folder/album random) → folder/album random (all folder/album random) → off

INFORMATION

- Each time  is selected, "RAND"/"FLD.RAND" appears on the screen.

3. MEDIA OPERATION

4. iPod

OVERVIEW

The iPod operation screen can be reached by the following methods:

▶ Connecting an iPod (→P. 153)

▶ Using the instrument panel


Press the **"MEDIA"** button to display the audio control screen.

▶ Using the Remote Touch

Press the **"MENU"** button on the Remote Touch, then select **"Media"** to display the audio control screen.

4


CONTROL SCREEN

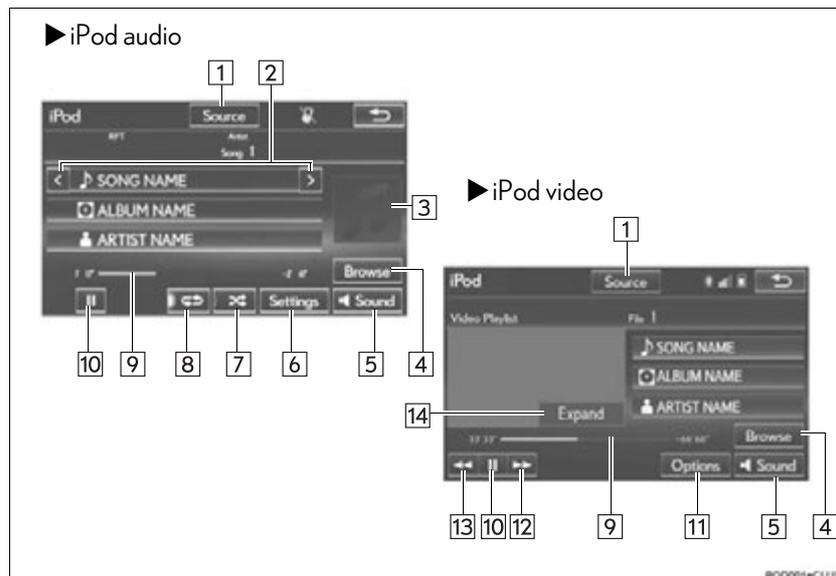

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

■ CONTROL PANEL

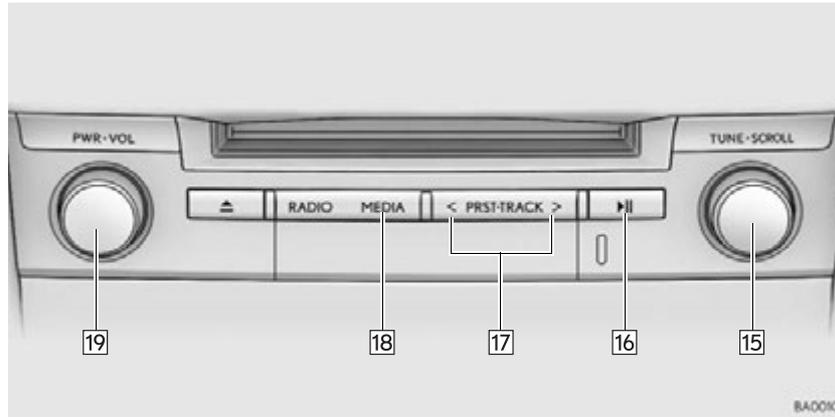

No.	Function	
	Audio	Video
1	Select to display the audio source selection screen.	Select to display the audio source selection screen.
2	Select to select a track.	—
3	<ul style="list-style-type: none"> • Displays cover art • Select to display a track list. To return to the top screen, select "Now Playing" on the list screen.	—
4	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.
5	Select to display the sound setting screen.	Select to display the sound setting screen.
6	Select to display the audio settings screen.	—
7	Select to set random playback.	—
8	Select to set repeat playback.	—
9	Shows progress	Shows progress
10	Select to play/pause.	Select to play/pause.

No.	Function	
	Audio	Video
11	—	Select to display the option screen. (→P. 196)
12	—	Select to fast forward.
13	—	Select to rewind.
14	—	Select to display full screen video.
15	<ul style="list-style-type: none"> • Turn to select a track. • Turn to move up/down the list. 	<ul style="list-style-type: none"> • Turn to select a file. • Turn to move up/down the list.
16	Press to play/pause.	Press to play/pause.
17	<ul style="list-style-type: none"> • Press to select a track. • Press and hold to fast forward/rewind. 	<ul style="list-style-type: none"> • Press to select a file. • Press and hold to fast forward/rewind.
18	<ul style="list-style-type: none"> • Press to select a media mode. • While in a media mode, pressing the "MEDIA" button changes media modes. 	<ul style="list-style-type: none"> • Press to select a media mode. • While in a media mode, pressing the "MEDIA" button changes media modes.
19	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system. 	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

CAUTION

- Do not operate the player's controls or connect the iPod while driving.

NOTICE

- Depending on the size and shape of the iPod that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the iPod or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION

- The system can only output the sound while driving.
- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.
- Depending on the iPod, the video sound may not be able to be heard.
- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to "On" or "Off". (→P. 217) It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available.
- For viewing videos from an iPod, it is necessary to set "Video Sound Input" to "A/V". (→P. 216)
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <http://www.lexus.com/enform/>.

iPod AUDIO

REPEATING

The track currently being listened to can be repeated.

1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → off

INFORMATION

- When  is selected, "RPT" appears on the screen.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

1 Select .



- Each time  is selected, the mode changes as follows:
 - track shuffle → album shuffle → off

INFORMATION

- Each time  is selected, "Shuffle"/"Alb.Shuffle" appears on the screen.

4 AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

iPod VIDEO

To change to iPod video mode, select **“Browse”** on the iPod audio screen, then select the **“Videos”** tab and select the desired video file.

iPod VIDEO OPTIONS

1 Select **“Options”**.



2 Select the desired settings to change.



No.	Function	Page
1	Select to change the screen size.	155
2	Select to display the image quality adjustment screen.	156
3	Select to change audio settings.	215

3. MEDIA OPERATION

5. Bluetooth® AUDIO

The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your device does not support Bluetooth®, the Bluetooth® audio system will not function.

OVERVIEW

The Bluetooth® audio operation screen can be reached by the following methods:
Depending on the type of portable player connected, some functions may not be available and/or the screen may look differently than shown in this manual.

▶ Connecting a Bluetooth® audio device (→P. 201)

▶ Using the instrument panel

Press the **"MEDIA"** button to display the audio control screen.

▶ Using the Remote Touch

Press the **"MENU"** button on the Remote Touch, then select **"Media"** to display the audio control screen.

4

AUDIO/VISUAL SYSTEM

No.	Function
1	Select to select an album.
2	Select to select a track.
3	Displays Bluetooth® device condition
4	Select to display the audio source selection screen.
5	Select to display the portable device connection screen.
6	<ul style="list-style-type: none"> • Displays cover art • Select to display a track list. To return to the top screen, select “Now Playing” on the list screen.
7	Select to display the playlist screen. To return to the top screen, select “ Now Playing ” on the list screen.
8	Select to display the sound settings screen.
9	Select to set random playback.
10	Select to set repeat playback.
11	Shows progress
12	Select to play.
13	Select to pause.
14	<ul style="list-style-type: none"> • Turn to select a track. • Turn to move up/down the list.
15	Press to play/pause.
16	<ul style="list-style-type: none"> • Press to select a track. • Press and hold to fast forward/rewind.
17	<ul style="list-style-type: none"> • Press to select a media mode. • While in a media mode, pressing the “MEDIA” button changes media modes.
18	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

CAUTION

- Do not operate the player's controls or connect to the Bluetooth® audio system while driving.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

NOTICE

- Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

INFORMATION

- Depending on the Bluetooth® device that is connected to the system, the music may start playing when selecting  while it is paused. Conversely, the music may pause when selecting  while it is playing.
- In the following conditions, the system may not function:
 - The Bluetooth® device is turned off.
 - The Bluetooth® device is not connected.
 - The Bluetooth® device has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- For operating the portable player, see the instruction manual that comes with it.
- If the Bluetooth® device is disconnected due to poor reception from the Bluetooth® network when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode, the system automatically reconnects the portable player.
- If the Bluetooth® device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.
- Bluetooth® device information is registered when the Bluetooth® device is connected to the Bluetooth® audio system. When selling or disposing of the vehicle, remove the Bluetooth® audio information from the system. (→P. 63)

CONNECTING A Bluetooth® DEVICE

To use the Bluetooth® audio system, it is necessary to register a Bluetooth® device with the system.

▶ Registering an additional device

- 1 Select **"Connect"** on the Bluetooth® audio control screen.
 - 2 For more information: →P. 49
- ▶ Selecting a registered device
- 1 Select **"Connect"** on the Bluetooth® audio control screen.
 - 2 For more information: →P. 51

LISTENING TO Bluetooth® AUDIO

REPEATING

The track or album currently being listened to can be repeated.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → album repeat → off

INFORMATION

- Each time  is selected, "RPT"/"ALB.RPT" appears on the screen.

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

1 Select .



- Each time  is selected, the mode changes as follows:
 - album random → all track random → off

INFORMATION

- Each time  is selected, "RAND"/"ALB.RAND" appears on the screen.

3. MEDIA OPERATION

6. AUX

OVERVIEW

The AUX operation screen can be reached by the following methods:

▶ Connecting a device to the AUX port (→P. 153)

▶ Using the instrument panel

Press the **"MEDIA"** button to display the audio control screen.


▶ Using the Remote Touch

Press the **"MENU"** button on the Remote Touch, then select **"Media"** to display the audio control screen.

4


AUDIO/VISUAL SYSTEM

■ CONTROL SCREEN

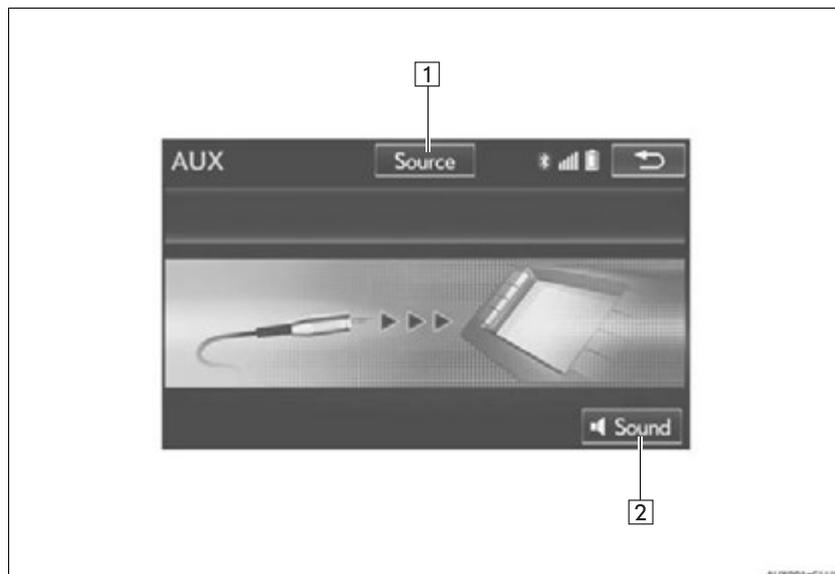

3. MEDIA OPERATION

■ CONTROL PANEL

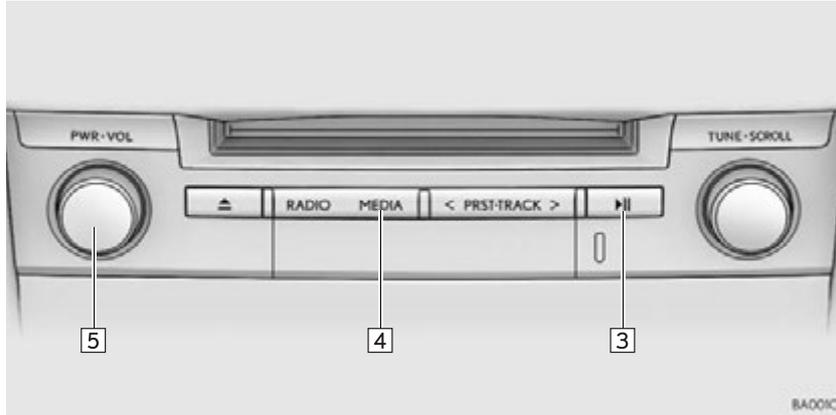

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the sound setting screen.
3	Press to turn mute on/off.
4	<ul style="list-style-type: none">• Press to select a media mode.• While in a media mode, pressing the "MEDIA" button changes media modes.
5	<ul style="list-style-type: none">• Turn to adjust volume.• Press to turn the audio system on/off.• Press and hold to restart the audio system.

 **CAUTION**

- Do not connect portable audio device or operate the controls while driving.

 **NOTICE**

- Depending on the size and shape of the portable audio device that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the portable audio device or the terminal, etc.
- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

7. VTR

While driving, video will not be displayed. Only sound will be output.

OVERVIEW

The VTR operation screen can be reached by the following methods:

▶ Connecting a device to the AUX port (→P. 153)


▶ Using the instrument panel

Press the “**MEDIA**” button to display the audio control screen.


▶ Using the Remote Touch

Press the “**MENU**” button on the Remote Touch, then select “**Media**” to display the audio control screen.

■ CONTROL SCREEN

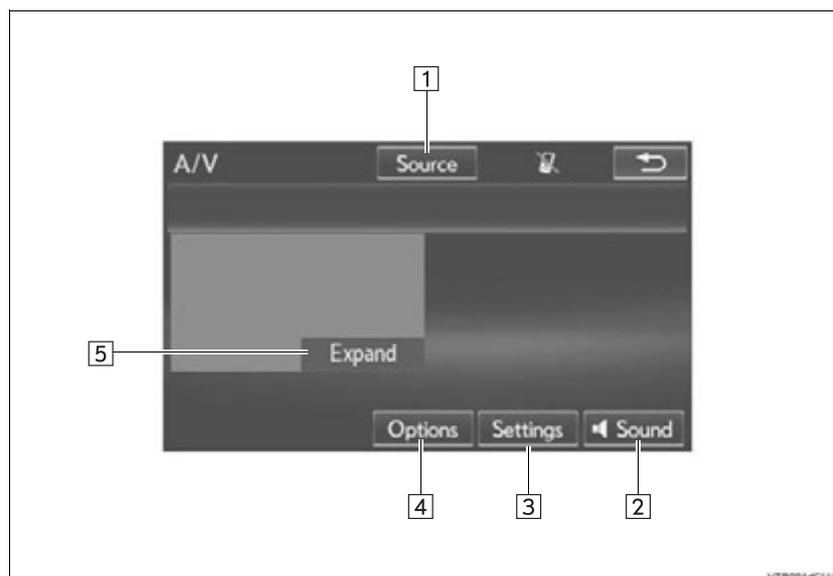

■ CONTROL PANEL

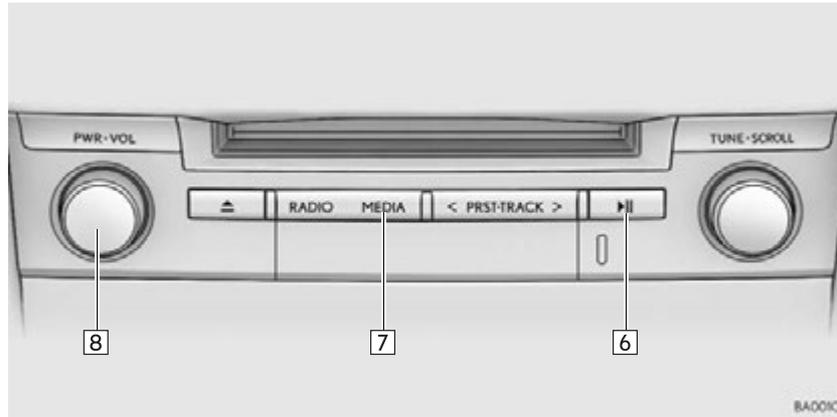

4

AUDIO/VISUAL SYSTEM

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the sound setting screen.
3	Select to display the audio setting screen.
4	Select to display the option screen. (→P. 208)
5	Select to display full screen video.
6	Press to turn mute on/off.
7	<ul style="list-style-type: none"> • Press to select a media mode. • While in a media mode, pressing the “MEDIA” button changes media modes.
8	<ul style="list-style-type: none"> • Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

3. MEDIA OPERATION

VTR OPTIONS

1 Select "Options".



2 Select the desired settings to change.




No.	Function	Page
1	Select to change the screen size.	155
2	Select to display the image quality adjustment screen.	156

4. AUDIO/VISUAL REMOTE CONTROLS

1. STEERING SWITCHES

Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.

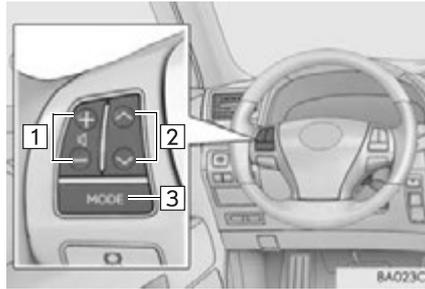

4

AUDIO/VISUAL SYSTEM

No.	Switch
1	Volume control switch
2	"∧ ∨" switch
3	"MODE" switch

► Volume control switch

Mode	Operation	Function
All	Press	Volume up/down
	Press and hold (0.8 sec. or more)	Volume up/down continuously

4. AUDIO/VISUAL REMOTE CONTROLS

▶ “^ v” switch

Mode	Operation	Function
AM/FM Radio	Press	Preset station up/down
	Press and hold (0.8 sec. or more)	Seek up/down continuously while the switch is being pressed
SAT	Press	Preset channel up/down
	Press and hold (0.8 sec. or more)	Type seek up/down
	Press and hold (1.5 sec. or more)	Fast up/down
CD	Press	Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
MP3/ WMA/AAC disc	Press	File up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
DVD	Press	Chapter up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
USB	Press	File/Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
iPod	Press	Track/File up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
BT audio	Press	Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind

▶ "MODE" switch

Mode	Operation	Function
AM/FM Radio, SAT, AUX, VTR	Press	Change audio modes
	Press and hold (0.8 sec. or more)	Mute
CD, MP3/ WMA/AAC disc, DVD, USB, iPod, BT audio, APPS*	Press	Change audio modes
	Press and hold (0.8 sec. or more)	Pause

*: With navigation function


INFORMATION

- In the APPS mode, some operation may be done on the screen depend on the selected APPS.

4. AUDIO/VISUAL REMOTE CONTROLS

2. REAR SEAT AUDIO CONTROLS*

Some parts of the audio/visual system can be adjusted using the switches on the rear seat audio controls.

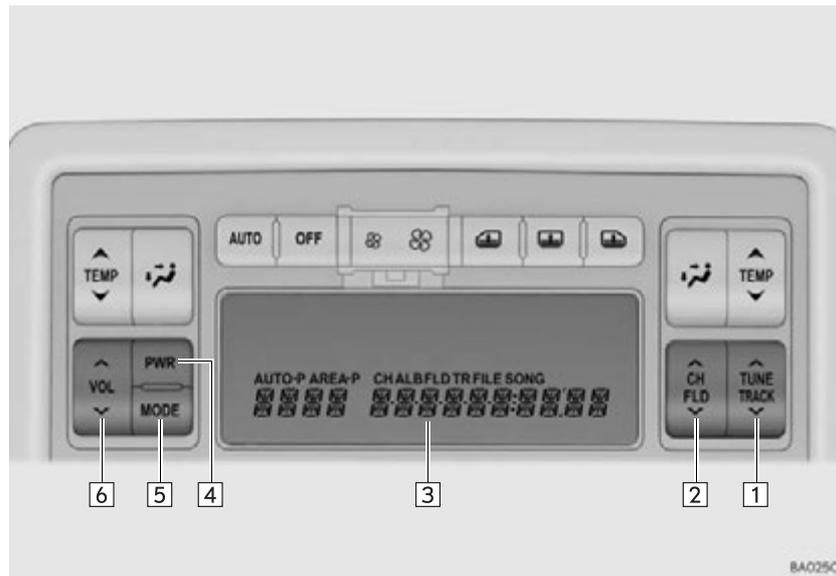

No.	Switch
1	"TUNE/TRACK" switch
2	"CH/FLD" switch
3	Display
4	"PWR" switch
5	"MODE" switch
6	"VOL" switch

*: If equipped

▶ "TUNE/TRACK" switch

Mode	Operation	Function
AM/FM Radio	Press	Tune the frequency up/down
	Press and hold (0.8 sec. or more)	Seek up/down continuously while the switch is being pressed
SAT	Press	Select a channel
	Press and hold (0.8 sec. or more)	Fast up/down
CD	Press	Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
MP3/ WMA/AAC disc	Press	File up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
DVD	Press	Chapter up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
USB	Press	File/Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
iPod	Press	Track/File up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
BT audio	Press	Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind

4

AUDIO/VISUAL SYSTEM

4. AUDIO/VISUAL REMOTE CONTROLS

▶ “CH/FLD” switch

Mode	Operation	Function
AM/FM Radio, SAT	Press	Preset station/channel up/down
MP3/WMA/AAC disc	Press	Folder up/down
USB	Press	Folder/Album up/down
BT audio	Press	Album up/down

▶ “PWR” switch

Mode	Operation	Function
All	Press	Audio system on/off
	Press and hold (3 sec. or more)	Control panel illumination on the rear armrest on/off

▶ “MODE” switch

Mode	Operation	Function
All	Press	Change audio modes
	Press and hold (3 sec. or more)	Lock/Unlock the buttons on the rear armrest

▶ “VOL” switch

Mode	Operation	Function
All	Press	Volume up/down
	Press and hold (0.8 sec. or more)	Volume up/down continuously

(INFORMATION)


- In the APPS mode, some operation may be done on the screen depend on the selected APPS.

5. SETUP

1. AUDIO SETTINGS

Detailed audio settings can be programmed.

- 1 Press the "MENU" button on the Remote Touch.

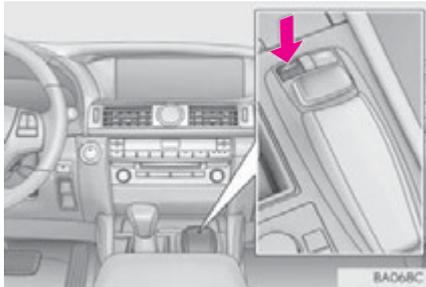


- 2 Select "Setup".




- 3 Select "Audio".



- 4 Select the items to be set.

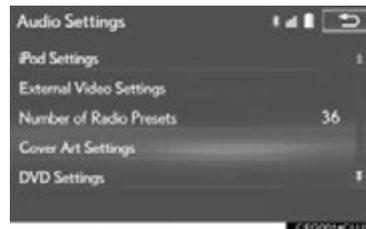

AUDIO SETTINGS SCREEN

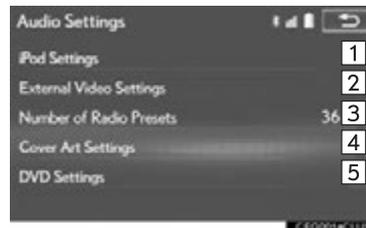

4

AUDIO/VISUAL SYSTEM


No.	Function	Page
1	Select to set the iPod audio signal input settings.	216
2	Select to set the video signal format settings.	216
3	Select to change the number of preset radio stations displayed on the screen.	217
4	Select to set detailed cover art settings.	217
5*	Select to set detailed DVD settings.	218

*: Only in DVD video mode

5. SETUP

iPod SETTINGS

- 1 Display the audio setting screen. (→P. 215)
- 2 Select "iPod Settings".
- 3 Select "Video Sound Input".

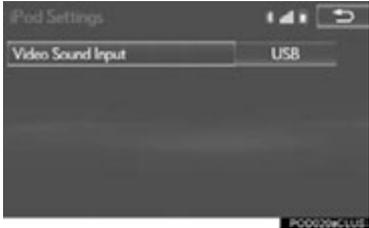

- 4 Select a screen button for the desired setting.



EXTERNAL VIDEO SETTINGS

- 1 Display the audio setting screen. (→P. 215)
- 2 Select "External Video Settings".
- 3 Select "Video Signal Switch".




- 4 Select a screen button for the desired setting.



SETTING THE NUMBER OF RADIO PRESETS

- 1 Display the audio setting screen. (→P. 215)
- 2 Select “Number of Radio Presets”.
- 3 Select the button with the desired number to be displayed.

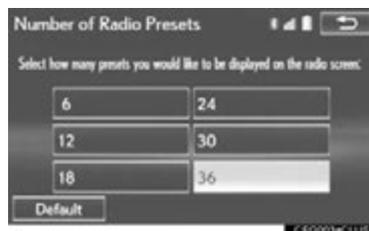

- “Default”: Select to default the settings.

COVER ART SETTINGS

- 1 Display the audio setting screen. (→P. 215)
- 2 Select “Cover Art Settings”.
- 3 Select the desired button to be set.



No.	Function
1	Select on/off to set the cover art display in DISC mode.
2	Select on/off to set the cover art display in USB mode.
3	Select on/off to set the priority of the Gracenote database in USB mode.
4	Select on/off to set the cover art display in iPod mode.
5	Select on/off to set the priority of the Gracenote database in iPod mode.

INFORMATION

- Images from the Gracenote database displayed on the screen may be different from the actual cover art.

4

AUDIO/VISUAL SYSTEM

DVD SETTINGS

- 1 Display the audio setting screen. (→P. 215)
- 2 Select “DVD Settings”.
 - Selecting “DVD Settings” on the DVD top screen can also display “DVD Settings” screen. (→P. 181)
- 3 Select the items to be set.



- When “Default” is selected, all menus are initialized.

AUDIO LANGUAGE

The audio language can be changed.

- 1 Select “Audio Language”.
- 2 Select the desired language to be heard on the “Audio Language” screen.
 - If the desired language to be heard cannot be found on this screen, select “Other” and enter a language code. (→P. 219)

SUBTITLE LANGUAGE

The subtitle language can be changed.

- 1 Select “Subtitle Language”.
- 2 Select the desired language to be read on the “Subtitle Language” screen.
 - If the desired language to be read cannot be found on this screen, select “Other” and enter a language code. (→P. 219)

MENU LANGUAGE

The language on the DVD video menu can be changed.

- 1 Select “Menu Language”.
- 2 Select the desired language to be read on the “Menu Language” screen.
 - If the desired language to be read cannot be found on this screen, select “Other” and enter a language code. (→P. 219)

■ ANGLE MARK

The multi-angle mark can be turned on or off on the screen while discs that are multi-angle compatible are being played.

- 1 Select **"Angle Mark"**.
- 2 Select **"On"** or **"Off"**.

■ PARENTAL LOCK

The level of viewer restrictions can be changed.

- 1 Select **"Parental Lock"**.
- 2 Enter the 4-digit personal code on the **"Key Code"** screen.
- 3 Select a parental level (1-8) on the **"Select Restriction Level"** screen.

■ AUTO START

Discs that are inserted while the vehicle is in motion will automatically start playing. Certain discs may not play.

- 1 Select **"Auto Start Playback"**.
- 2 Select **"On"** or **"Off"**.

■ SOUND DYNAMIC RANGE

The difference between the lowest volume and the highest volume can be adjusted.

- 1 Select **"Dynamic Range"**.
- 2 Select **"MAX"**, **"STD"** or **"MIN"**.

■ ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE

If **"Other"** on the **"Audio Language"** screen, **"Subtitle Language"** screen or **"Menu Language"** screen is selected, the desired language to be heard or read can be selected by entering a language code.

- 1 Enter the 4-digit language code.



- 2 Select **"OK"**.

4

AUDIO/VISUAL SYSTEM

5. SETUP

LANGUAGE CODES LIST

Code	Language	Code	Language	Code	Language	Code	Language
0514	English	0515	Esperanto	1214	Lingala	1913	Samoan
1001	Japanese	0520	Estonian	1215	Laotian	1914	Shona
0618	French	0521	Basque	1220	Lithuanian	1915	Somali
0405	German	0601	Persian	1222	Latvian, Lettish	1917	Albanian
0920	Italian	0609	Finnish	1307	Malagasy	1918	Serbian
0519	Spanish	0610	Fiji	1309	Maori	1919	Siswati
2608	Chinese	0615	Faroese	1311	Macedonian	1920	Sesotho
1412	Dutch	0625	Frisian	1312	Malayalam	1921	Sundanese
1620	Portuguese	0701	Irish	1314	Mongolian	1923	Swahili
1922	Swedish	0704	Scottish-Gaelic	1315	Moldavian	2001	Tamil
1821	Russian	0712	Galician	1318	Marathi	2005	Telugu
1115	Korean	0714	Guarani	1319	Malay	2007	Tajik
0512	Greek	0721	Gujarati	1320	Maltese	2008	Thai
0101	Afar	0801	Hausa	1325	Burmese	2009	Tigrinya
0102	Abkhazian	0809	Hindi	1401	Nauru	2011	Turkmen
0106	Afrikaans	0818	Croatian	1405	Nepali	2012	Tagalog
0113	Amharic	0821	Hungarian	1415	Norwegian	2014	Setswana
0118	Arabic	0825	Armenian	1503	Occitan	2015	Tongan
0119	Assamese	0901	Interlingua	1513	(Afan) Oromo	2018	Turkish
0125	Aymara	0905	Interlingue	1518	Oriya	2019	Tsonga
0126	Azerbaijani	0911	Inupiak	1601	Punjabi	2020	Tatar
0201	Bashkir	0914	Indonesian	1612	Polish	2023	Twi
0205	Byelorussian	0919	Icelandic	1619	Pashto, Pushto	2111	Ukrainian
0207	Bulgarian	0923	Hebrew	1721	Quechua	2118	Urdu
0208	Bihari	1009	Yiddish	1813	Rhaeto-Romance	2126	Uzbek
0209	Bislama	1023	Javanese	1814	Kirundi	2209	Vietnamese
0214	Bengali, Bangla	1101	Georgian	1815	Romanian	2215	Volapük
0215	Tibetan	1111	Kazakh	1823	Kinyarwanda	2315	Wolof
0218	Breton	1112	Greenlandic	1901	Sanskrit	2408	Xhosa
0301	Catalan	1113	Cambodian	1904	Sindhi	2515	Yoruba
0315	Corsican	1114	Kannada	1907	Sango	2621	Zulu
0319	Czech	1119	Kashmiri	1908	Serbo-Croatian		
0325	Welsh	1121	Kurdish	1909	Sinhalese		
0401	Danish	1125	Kirghiz	1911	Slovak		
0426	Bhutani	1201	Latin	1912	Slovenian		

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

1. OPERATING INFORMATION

NOTICE

- To avoid damage to the audio/visual system:
 - Be careful not to spill beverages over the audio/visual system.
 - Do not put anything other than an appropriate disc into the disc slot.

INFORMATION

- The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/visual system which you are listening to. However, this does not indicate a malfunction.

RADIO

Usually, a problem with radio reception does not mean there is a problem with the radio – it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

FM

Fading and drifting stations: Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path: FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering: These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping: If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

4

AUDIO/VISUAL SYSTEM

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

AM

Fading: AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference: When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static: AM is easily affected by external sources of electrical noise, such as high tension power lines, lightning or electrical motors. This results in static.

XM

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

DVD PLAYER AND DISC

- This DVD player is intended for use with 4.7 in. (12 cm). discs only.
- Extremely high temperatures can keep the DVD player from working. On hot days, use the air conditioning system to cool the inside of the vehicle before using the player.
- Bumpy roads or other vibrations may make the DVD player skip.
- If moisture gets into the DVD player, the discs may not be able to be played. Remove the discs from the player and wait until it dries.

 CAUTION
● The DVD player uses an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

DVD PLAYER


Audio CDs		
DVD video discs		
DVD-R/RW discs		

- Use only discs marked as shown above. The following products may not be playable on your player:
 - SACD
 - dts CD
 - Copy-protected CD
 - DVD audio
 - Video CD
 - DVD-RAM


▶ Special shaped discs



▶ Transparent/translucent discs

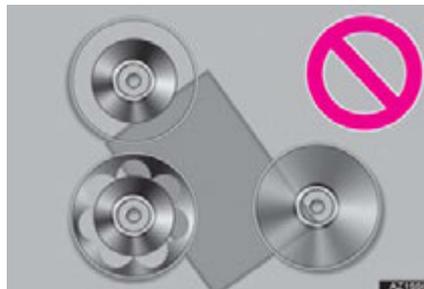

▶ Low quality discs

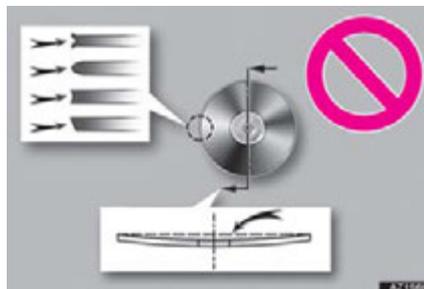

4

AUDIO/VISUAL SYSTEM


6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

► Labeled discs



⚠ NOTICE

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring. The use of such discs may damage the player, or it may be impossible to eject the disc.
- Do not use printable discs. The use of such discs may damage the player, or it may be impossible to eject the disc.

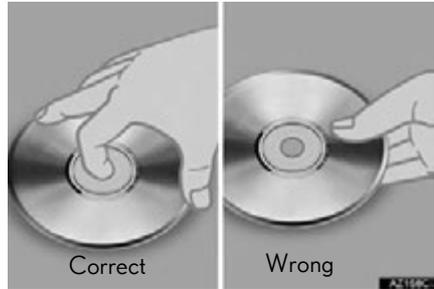

- Handle discs carefully, especially when inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when not in use. Store them in their plastic cases away from moisture, heat and direct sunlight.



To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

CD-R/RW AND DVD-R/RW DISCS

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

DVD VIDEO DISCS

This DVD player conforms to NTSC/PAL color TV formats. DVD video discs conforming to another format such as SECAM cannot be used.

Region codes: Some DVD video discs have the following region code indicating which countries the DVD video disc can be played in on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, error message appears on the screen. Even if the DVD video disc does not have a region code, there are cases when it cannot be used.

Code	Country
ALL	All countries
1	North America

4

AUDIO/VISUAL SYSTEM

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

MARKS SHOWN ON DVD VIDEO DISCS

NTSC/PAL	Indicates NTSC/PAL format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this video disc can be played. "ALL": in all countries Number: region code

DVD VIDEO DISC GLOSSARY

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help users enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

- Level 1: DVD video discs for children can be played.
- Level 2 - 7: DVD video discs for children and G-rated movie can be played.
- Level 8: All types of the DVD video discs can be played.

Multi-angle feature: The same scene can be enjoyed from different angles.

Multi-language feature: The subtitle and audio language can be selected.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes: (→P. 225)

Audio: This DVD player can play liner PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

Title and chapter: Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A unit smaller than that of title. A title comprises of several chapters.

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

iPod



- "Made for iPod", "Made for iPhone", and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.
- iPad, iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.
- The Lightning connector works with iPhone 5, iPod touch (5th generation), and iPod nano (7th generation).
- The 30-pin connector works with iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 4th generation), iPod classic, and iPod nano (1st through 6th generation).
- USB works with iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 5th generation), iPod classic, and iPod nano (1st through 7th generation).
- Bluetooth® technology works with iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, and iPod touch (2nd through 5th generation).

4

AUDIO/VISUAL SYSTEM

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

COMPATIBLE MODELS

The following iPod®, iPod nano®, iPod classic®, iPod touch® and iPhone® devices can be used with this system.

Made for

- iPod touch (5th generation)*
 - iPod touch (4th generation)
 - iPod touch (3rd generation)
 - iPod touch (2nd generation)
 - iPod touch (1st generation)
 - iPod classic
 - iPod with video
 - iPod nano (7th generation)*
 - iPod nano (6th generation)
 - iPod nano (5th generation)
 - iPod nano (4th generation)
 - iPod nano (3rd generation)
 - iPod nano (2nd generation)
 - iPod nano (1st generation)
 - iPhone 5*
 - iPhone 4S
 - iPhone 4
 - iPhone 3GS
 - iPhone 3G
 - iPhone
- *: iPod video not supported

INFORMATION

- Depending on differences between models or software versions etc., some models might be incompatible with this system.

FILE INFORMATION

COMPATIBLE USB DEVICES

USB communication formats	USB 2.0 HS (480 Mbps) and FS (12 Mbps)
File formats	FAT 16/32
Correspondence class	Mass storage class

COMPATIBLE COMPRESSED FILES

Item	USB	DISC
Compatible file format (audio)	MP3/WMA/AAC	
Folders in the device	Maximum 3000	Maximum 192
Files in the device	Maximum 9999	Maximum 255
Files per folder	Maximum 255	—

CORRESPONDING SAMPLING FREQUENCY

File type	Frequency (kHz)
MP3 files: MPEG 1 LAYER 3	32/44.1/48
MP3 files: MPEG 2 LSF LAYER 3	16/22.05/24
WMA files: Ver. 7, 8, 9*1 (9.1/9.2)	32/44.1/48
AAC files: MPEG4/AAC-LC	11.025/12/16/ 22.05/24/32/ 44.1/48

*1: Only compatible with Windows Media Audio Standard

CORRESPONDING BIT RATES*2

File type	Bit rate (kbps)
MP3 files: MPEG 1 LAYER 3	32 - 320
MP3 files: MPEG 2 LSF LAYER 3	8 - 160
WMA files: Ver. 7, 8	CBR 48 - 192
WMA files: Ver. 9*1 (9.1/9.2)	CBR 48 - 320
AAC files: MPEG4/AAC-LC	16 - 320

*1: Only compatible with Windows Media Audio Standard

*2: Variable Bit Rate (VBR) compatible

COMPATIBLE CHANNEL MODES

File type	Channel mode
MP3 files	Stereo, joint stereo, dual channel and monaural
WMA files	2ch
AAC files	1ch, 2ch (Dual channel is not supported)


- MP3 (MPEG Audio Layer 3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) are audio compression standards.
- This system can play MP3/WMA/AAC files on CD-R/CD-RW/DVD-R/DVD-RW discs and USB memory.
- This system can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system and UDF (2.01 or lower).
- When naming an MP3/WMA/AAC file, add an appropriate file extension (.mp3/.wma/.m4a).
- This system plays back files with .mp3/.wma/.m4a file extensions as MP3/WMA/AAC files respectively. To prevent noise and playback errors, use the appropriate file extension.
- This system can play only the first session/border when using multi session/border compatible discs.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. This system cannot display disc title, track title and artist name in other formats.
- WMA/AAC files can contain a WMA/AAC tag that is used in the same way as an ID3 tag. WMA/AAC tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3 files.
- This system can play back AAC files encoded by iTunes.

4


AUDIO/VISUAL SYSTEM

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.
- m3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fast forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA/AAC files.
- MP3/WMA/AAC files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than 2 levels of folders.

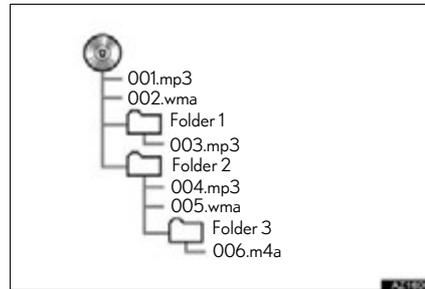

- The play order of the compact disc with the structure shown above is as follows:

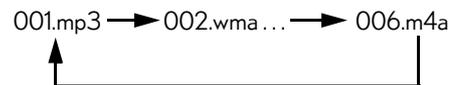

- The order changes depending on the personal computer and MP3/WMA/AAC encoding software you use.

TERMS

PACKET WRITE

- This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3 TAG

- This is a method of embedding track-related information in an MP3 file. This embedded information can include the track number, track title, the artist's name, the album title, the music genre, the year of production, comments, cover art and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

WMATAG

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

ISO 9660 FORMAT

- This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are 2 levels of regulations.
- Level 1: The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)
- Level 2: The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

m3u

- Playlists created using “WINAMP” software have a playlist file extension (.m3u).

MP3

- MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA

- WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.

AAC

- AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

ERROR MESSAGES

Mode	Message	Explanation
CD/DVD	"No disc found."	It indicates that there is no disc in the DVD player.
	"Check disc"	It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. It indicates a disc which is not playable is inserted.
	"DISC Error"	There is a trouble inside the system. Eject the disc.
	"Region Code Error"	It indicates that the DVD region code is not set properly.
USB	"USB Error"	This indicates a problem in the USB memory or its connection.
	"No music files found."	This indicates that no MP3/WMA/AAC files are included in the USB memory.
iPod	"iPod Error."	This indicates a problem in the iPod or its connection.
	"No music files found."	This indicates that there is no music data in the iPod.
	"No video files found."	This indicates that no video files are included in the iPod.
	"Please check the iPod firmware version."	This indicates that the software version is not compatible. Perform the iPod firmware updates and try again.
	"iPod authorization failed."	This indicates that it failed to authorize the iPod. Please check your iPod.
Bluetooth® Audio	"Music tracks not supported. Please check your portable player."	This indicates a problem in the Bluetooth® device.

INFORMATION

- If the malfunction is not rectified: Take your vehicle to your Lexus dealer.

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES*

QUICK REFERENCE

The rear seat entertainment system is designed for the rear passengers to enjoy video such as Blu-ray Disc™ (BD) and DVD disc separately from the front audio/visual system.

The system can be used when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

FUNCTION INDEX

Operation	Page
Using the remote controller	236
Turning on/off the rear entertainment system	237
Turning on/off the display (with rear console display)	238
Opening/Closing the display (with overhead display)	238
Inserting media or connecting a device to the rear player	239
Selecting the sound mode	241
Selecting the source	242
Operating rear seat entertainment system from the front seats	244
Rear seat entertainment system operation	245
Rear seat entertainment system settings	292
Tips for operating rear seat entertainment system	295

4

AUDIO/VISUAL SYSTEM


*: If equipped

233

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

OVER VIEW


► 5-seat models

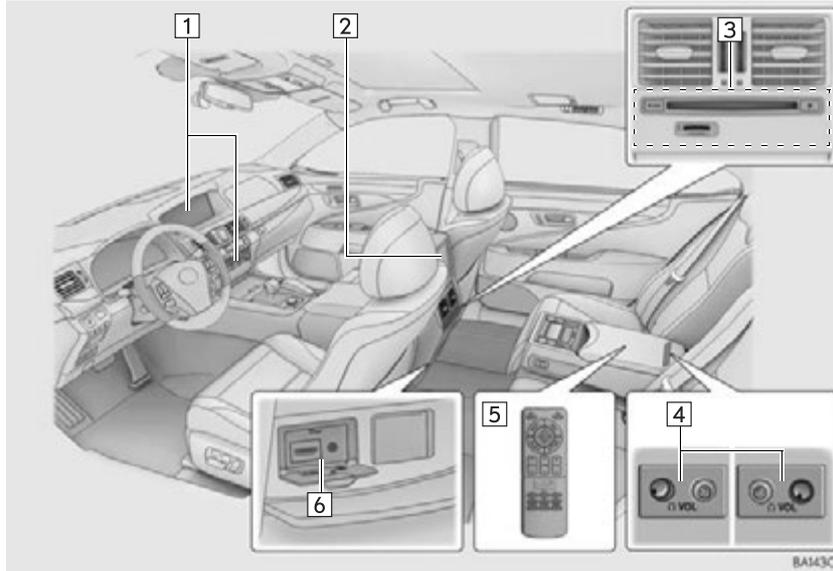

No.	Name
1	Front audio/visual system
2	Display
3	Rear player
4	Headphone volume control dials and headphone jacks
5	Remote controller
6	A/V input port (VTR and HDMI port)

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

► 4-seat models

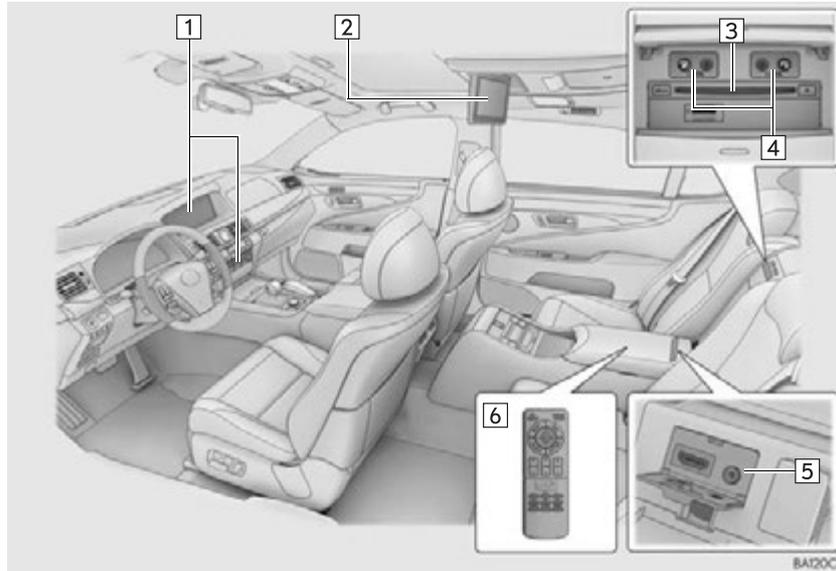

4

AUDIO/VISUAL SYSTEM

No.	Name
1	Front audio/visual system
2	Display
3	Rear player
4	Headphone volume control dials and headphone jacks
5	A/V input port (VTR and HDMI port)
6	Remote controller

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES


2. SOME BASICS

USING THE REMOTE CONTROLLER


The rear seat entertainment system can be operated with the remote controller. The system cannot be operated by touching the switches on the screen directly. Before using the remote controller (for new vehicle owners): →P.296

OPENING THE COVER

- 1 To use the buttons under the cover, slide the cover down.

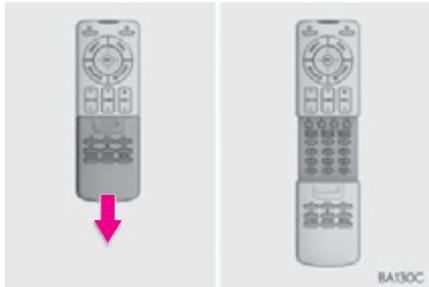

BASIC OPERATION

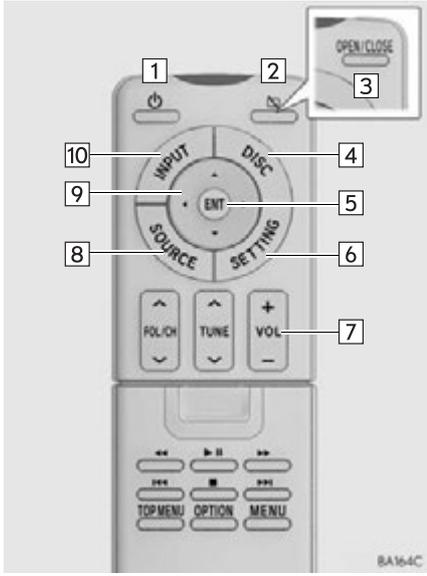

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

No.	Function
1	Press to turn on/off the rear seat entertainment system.
2	Press to turn on/off the display (with rear console display). (→P.238)
3	Press to open/close the display (with overhead display). (→P.238)
4	Press to change the external source between the following modes: <ul style="list-style-type: none"> • "DISC" (Font player) • "Rear-DISC" (Rear player)
5	Press to input the selected control icon.
6	Press to display the setting screen. (→P.292)
7	Press to adjust the volume. This function is only available when sound is being output from the speakers. (→P.241)
8	Press to display the audio/visual source selection screen. (→P.242)
9	Press to select a control icon.
10	Press to change the external source between the following modes: <ul style="list-style-type: none"> • "Rear-A/V" • "Rear-HDMI"

TURNING ON/OFF THE REAR ENTERTAINMENT SYSTEM

- 1 Press the , "DISC", "INPUT", "SOURCE" or "OPEN/CLOSE" (with overhead display) button.



4

AUDIO/VISUAL SYSTEM

- To turn off the system, press the  button again.


INFORMATION

- Turning on/off operations can be performed from the front seat. (→P.244)

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

TURNING ON/OFF THE DISPLAY (WITH REAR CONSOLE DISPLAY)

- 1 Press the  button.

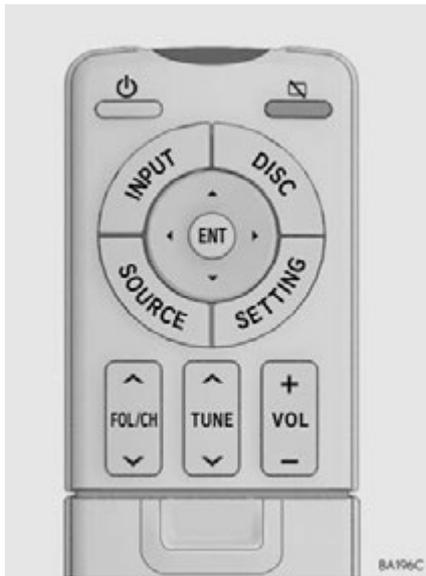


- To turn off the display, press the  button again.

INFORMATION

- When you press the  button, the sound will not be turned off.

OPENING/CLOSING THE DISPLAY (WITH OVERHEAD DISPLAY)

- 1 Press the "OPEN/CLOSE" button.

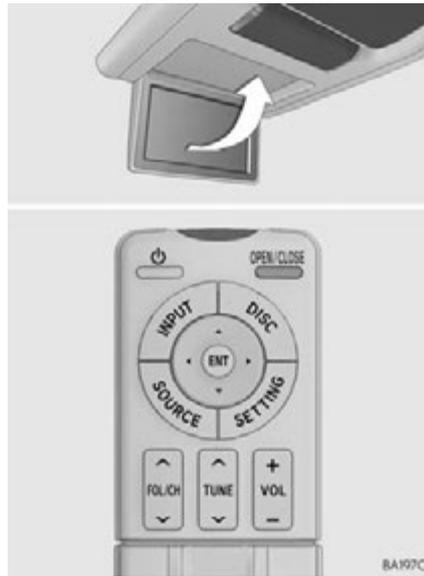

- To close the display, press the "OPEN/CLOSE" button again.

INFORMATION


- When you press the "OPEN/CLOSE" button, the sound will not be turned off.
- The overhead console display can be tilted. (→P.294)
- Opening and closing operation can be set to auto. (→P.294)
- The display will stop closing and return to its previous position if something gets in the way of it closing.

INSERTING MEDIA OR CONNECTING A DEVICE TO THE REAR PLAYER

DISC SLOT

LOADING A DISC

- 1 Insert the disc into the slot with the label side up.

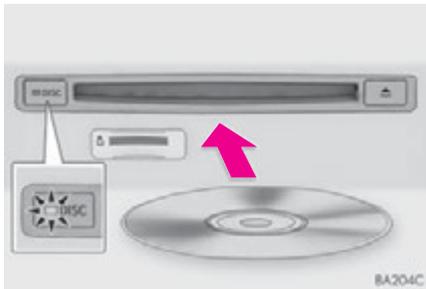

- The "DISC" indicator light turns on when the disc is loaded.
- The player will start to play the disc automatically.

EJECTING A DISC

- 1 Press the ▲ button and remove the disc.



NOTICE

- If a disc cannot be ejected, do not forcibly take out the disc. Keep pressing the ▲ button for approximately 10 seconds and release it.

INFORMATION

- If the ejected disc remains in the slot for 15 seconds, the player will automatically reload the disc.

4


AUDIO/VISUAL SYSTEM

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

SD CARD SLOT

■ INSERTING AN SD CARD

- 1 Insert the SD card with the label side up, positioning the cut off corner to the right.
- 2 After inserting the SD card, push it straight in until you hear a click.

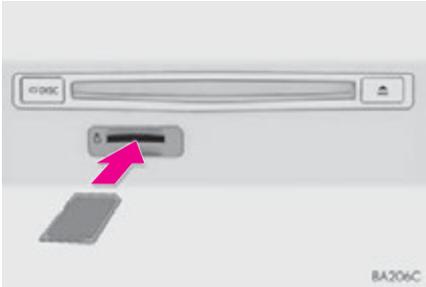

■ EJECTING AN SD CARD


- 1 Push on the center of the SD card.
- 2 When it is ejected slightly, pull it straight out.




A/V INPUT PORT

- 1 Open the cover and connect audio/visual equipment to the A/V input port.

▶ 5-seat models

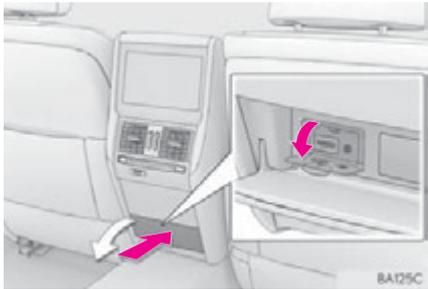

▶ 4-seat models

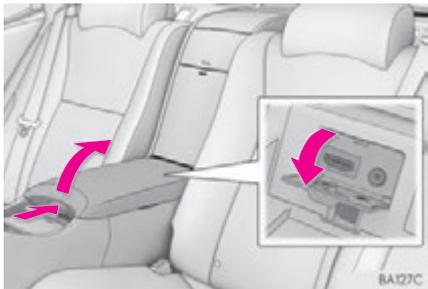


SELECTING THE SOUND MODE


HEADPHONE MODE

To listen to the rear seat entertainment system, use headphones.

► 5-seat models

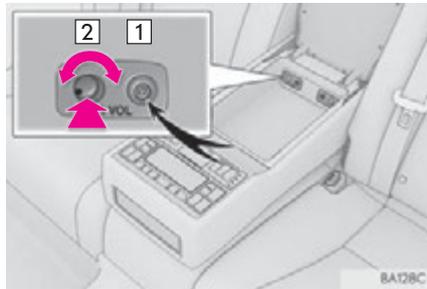

► 4-seat models

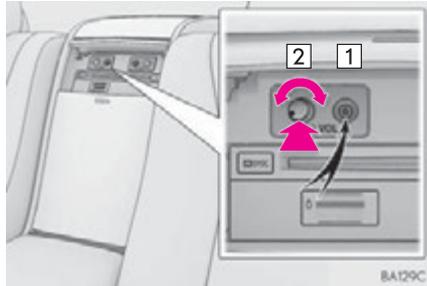

1 Headphones jack

- Connect a pair of headphones to the jack.

2 Volume knob

- Push and then turn clockwise/counter-clockwise to increase/decrease the volume.

SPEAKER MODE

Sound from the rear seat entertainment system can be output through the speakers.

- 1 Display the audio control screen. (→P.242)

- 2 Select .



- The speaker volume is adjusted using the remote controller. (→P.236)

4

AUDIO/VISUAL SYSTEM

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

SELECTING THE SOURCE

The front and rear audio/visual source can be controlled from the rear seat entertainment system.

- 1 Press the "SOURCE" button.



- 2 Select the desired source.



INFORMATION

- The page indicators above the source icons can be selected to change the source icon page.
- If the cursor is on the rightmost source icon, pressing the ► will change the source icon page.

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

Audio/visual source	Available front audio/ visual source	Available rear audio/ visual source	Page
AM/FM/SAT	"AM", "FM", "SAT"	—	245
Internet radio	"Apps"	—	—
Audio CD MP3/WMA/AAC disc	"DISC"	"Rear-DISC"	246
Video CD	—		250
DVD	"DISC"		253
Blu-ray Disc™	—		261
USB audio	"USB1", "USB2"	—	269
iPod audio/video	"iPod1", "iPod2"	—	272
Bluetooth® audio	"Bluetooth*"	—	275
SD audio/video/picture	—	"Rear-SD"	278
AUX, VTR, HDMI	"AUX", "A/V"	"Rear-A/V", "Rear-HDMI"	291

4

AUDIO/VISUAL SYSTEM

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INFORMATION

- If the selected source is currently being received or played on the front audio/visual system, the same content will be output by the rear seat entertainment system.

7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

OPERATING REAR SEAT ENTERTAINMENT SYSTEM FROM THE FRONT SEATS

- 1 Display the audio control screen. (→P.151)
- 2 Select "Source".
- 3 Select "Rear".
- 4 Select the desired button.



No.	Function
1	Select to turn the rear seat entertainment system on/off.
2	Select to lock the system so passengers in the rear seats cannot operate the rear seat entertainment system.
3	Select to play the rear seat entertainment system over the speakers in the vehicle.


8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

1. AM/FM/SAT RADIO

OVERVIEW

The radio operation screen can be reached by the following method:
Press the “SOURCE” button, and select “AM”, “FM” or “SAT” (The XM Satellite radio).

■ REMOTE CONTROLLER

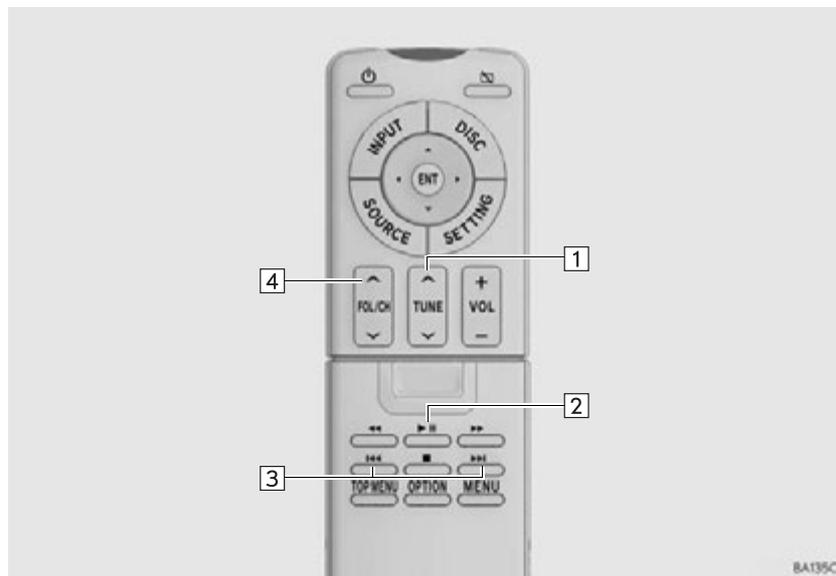

4

AUDIO/VISUAL SYSTEM

No.	Function
1	AM/FM Radio: Press to adjust the frequency. SAT Radio: Press to select a channel. Press and hold until you hear a beep to seek for receivable stations/channels.
2	Cache radio only: Press to play/pause.
3	Press to select a preset station/channel. Press and hold until you hear a beep to seek for receivable stations/channels. Press to skip forward/rewind 2 minutes. (Cache radio only) Press and hold to fast forward/rewind continuously. (Cache radio only)
4	AM/FM Radio: Press to select a preset station/channel. SAT Radio: Press to select a program type/channel category.

INFORMATION

- To return to the live radio broadcast, select “Live”.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


2. CD

OVERVIEW


Audio CD and MP3/WMA/AAC discs can be played on this system. The disc operation screen can be reached by the following methods:
Press the “SOURCE” button, and select “DISC” or “Rear-DISC”.

- ▶ Inserting a disc
The front player: →P.152
The rear player: →P.239
- ▶ Selecting a disc to play (disc in the front player or rear player)
Press the “DISC” button.

CONTROL SCREEN

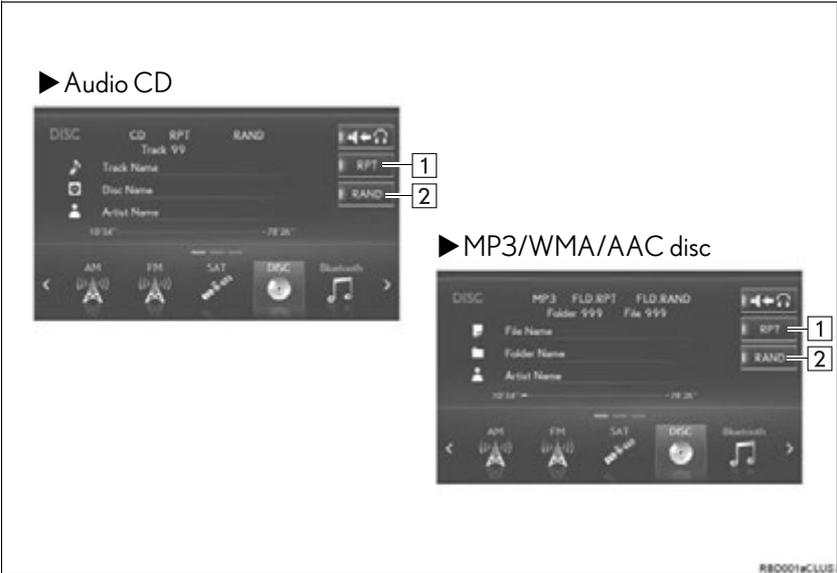

■ REMOTE CONTROLLER

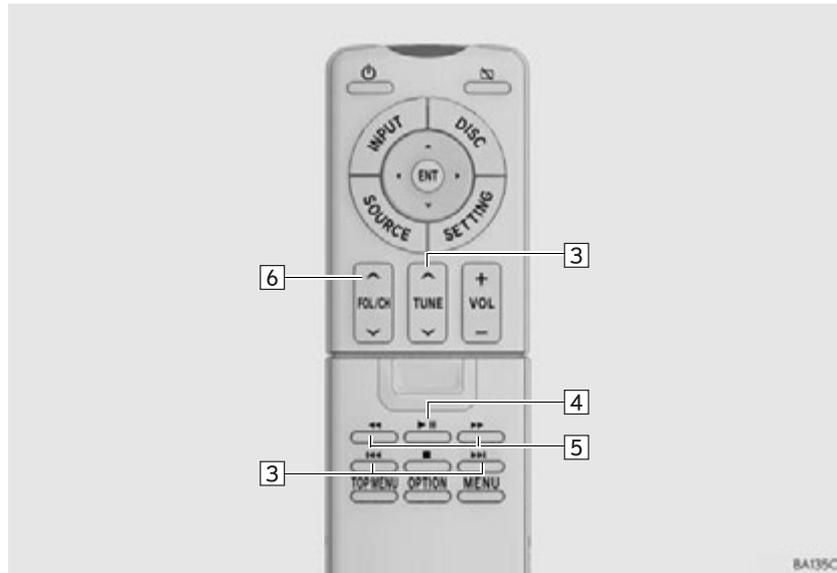

4
AUDIO/VISUAL SYSTEM

No.	Function
1	Select to set repeat playback. (→P.248, 249)
2	Select to set random playback. (→P.248, 249)
3	Press to select a track/file. Press and hold to fast forward/rewind.
4	Press to play/pause.
5	Press and hold to fast forward/rewind.
6	MP3/WMA/AAC disc: Press to select a folder. Press and hold the “v” button to select the top file stored in the top folder in the disc.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

AUDIO CD

REPEATING

The track currently being listened to can be repeated.

1 Select "RPT".



- Each time "RPT" is selected, the mode changes as follows:
 - track repeat → off

INFORMATION

- When "RPT" is selected, "RPT" appears on the screen.

RANDOM ORDER

Tracks can be automatically and randomly selected.

1 Select "RAND".



- Each time "RAND" is selected, the mode changes as follows:
 - random (1 disc random) → off

INFORMATION

- When "RAND" is selected, "RAND" appears on the screen.

MP3/WMA/AAC DISC

REPEATING

The file or folder currently being listened to can be repeated.

1 Select "RPT".



- Each time "RPT" is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file repeat → folder repeat → off
 - ▶ When random playback is on
 - file repeat → off

INFORMATION

- When "RPT" is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

1 Select "RAND".



- Each time "RAND" is selected, the mode changes as follows:
 - random (1 folder random) → folder random (1 disc random) → off

INFORMATION

- When "RAND" is selected, "RAND"/"FLD.RAND" appears on the screen.

4

AUDIO/VISUAL SYSTEM


8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

3. VIDEO CD

OVERVIEW

The disc operation screen can be reached by the following methods:
 Press the "SOURCE" button, and select "Rear-DISC".
 ▶ Inserting a disc (→P.239)

■ REMOTE CONTROLLER

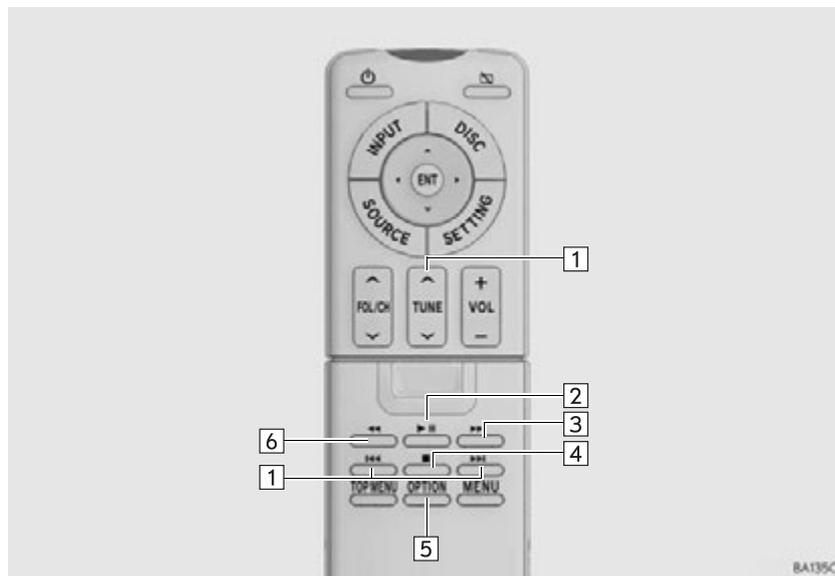


No.	Function
1	<ul style="list-style-type: none"> • Press to select a track. • Press and hold to fast forward/rewind.
2	Press to play/pause.
3	<ul style="list-style-type: none"> • During playback: Press to fast forward. • During a pause: Press to slow forward.
4	Press to stop.
5	Press to display the option screen. (→P.251)
6	Press and hold to fast rewind.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

VIDEO CD OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.

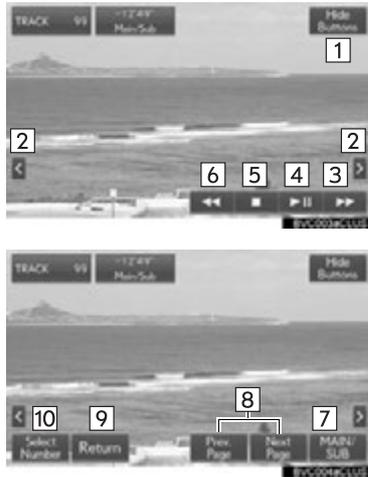

No.	Function
1	Select to turn off the option screen.
2	Select to display the next or previous page.
3	<ul style="list-style-type: none"> • During playback: Select to fast forward. • During a pause: Select to slow forward.
4	Select to play/pause.
5	Select to stop.
6	Select to rewind.
7	Select to change the audio channel. (→P.252)
8	Select to change the page.
9	Select to return to a predetermined scene.
10	Select to select the desired content using numbers. (→P.252)

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


CHANGING THE AUDIO CHANNEL

The audio channel can be changed for discs with multiple audio channels.

- 1 Select **"MAIN/SUB"**.
- 2 Each time **"MAIN/SUB"** is selected, the mode changes in the following order:
"Main": Main audio channel
"Sub": Sub audio channel
"Main/Sub": Both the main and sub audio channels

SELECT THE DESIRED CONTENT USING NUMBERS

- 1 Select **"Select Number"**.
- 2 Enter the title number and select **"OK"**.

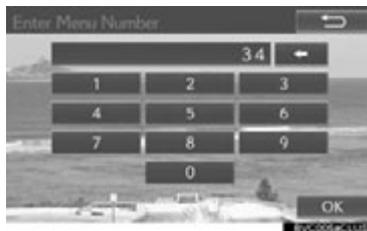

- The player starts playing video for that title number.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

4. DVD (DVD VIDEO AND AVCHD™ DISC)

OVERVIEW

Commercial DVD titles and AVCHD™ videos (rear seat entertainment system only) can be played on this system, therefore digital TV recorded by home digital video recorders and DVD home videos recorded by home digital video cameras can also be played on this system.

The disc operation screen can be reached by the following methods:

Press the **"SOURCE"** button, and select **"DISC"** or **"Rear-DISC"**.

▶ Inserting a disc

The front player: →P.152

The rear player: →P.239

▶ Selecting a disc to play (disc in the front player or rear player)


Press the **"DISC"** button.

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ REMOTE CONTROLLER

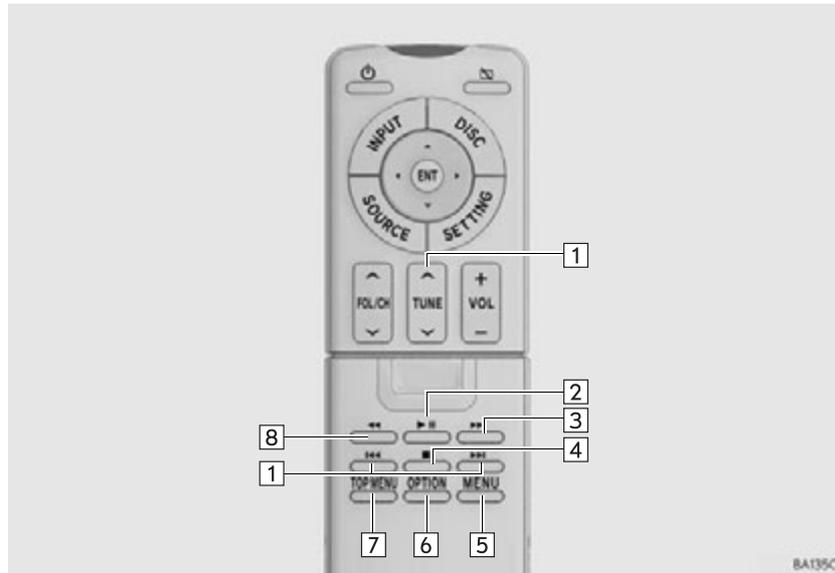


No.	Function
1	Press to select a chapter. Press and hold to fast forward/rewind.
2	Press to play/pause.
3	<ul style="list-style-type: none"> • During playback: Press and hold to fast forward. • During a pause: Press and hold to slow forward.
4	Press to stop.
5	DVD video only: Press to display the menu screen.
6	Press to display the option screen. (→P.255, 260)
7	Press to display the top menu screen.
8	Press and hold to fast rewind.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

DVD VIDEO OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.

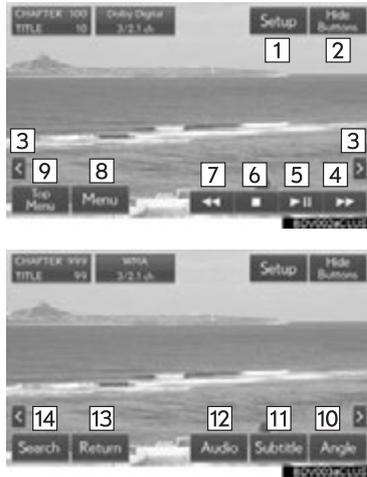

No.	Function	Page
1	Select to display the initial setup screen.	256
2	Select to turn off the option screen.	—
3	Select to display the next or previous page.	—
4	<ul style="list-style-type: none"> • During playback: Select and hold to fast forward. • During a pause: Select and hold to slow forward. 	—
5	Select to play/pause.	—
6	Select to stop.	—
7	Select and hold to rewind.	—
8	Select to display the menu screen.	—
9	Select to display the top menu screen.	—
10	Select to change the angle.	258
11	Select to change the subtitle language.	258
12	Select to change the audio language.	259
13	Select to return to a predetermined scene.	—
14	Select to search for a title.	259

4 AUDIO/VISUAL SYSTEM

INFORMATION

- Depending on the disc, some buttons may not be displayed on the screen.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

INITIAL SETUP

- 1 Select "Setup".
- 2 Select the items to be set.
- ▶ When "DISC" is selected



- ▶ When "Rear-DISC" is selected



No.	Function	Page
1	Select to change the initial audio language.	257
2	Select to change the initial subtitle language.	257
3	Select to change the initial language of the disc menu.	257
4	Select to set the angle mark on/off.	—
5	Select to set the parental lock.	257
6	Select to set a dynamic range.	257
7	Select to initialize all menus.	—
8	Select to display the second page.	—
9	BD history data such as bookmarks and resume point can be deleted.	—
10	Select to set the restriction age.	257
11	Select to set a quick playback. (BD-Video) After inserting a BD disc you can skip over to the first playback point and can immediately playback the main story.	—
12	Select to set the BD-Video secondary audio.	—

- 3 Select "OK".

■ AUDIO LANGUAGE

The audio language can be changed.

- 1 Select **"Audio Language"**.
- 2 Select the desired language to be heard on the "Audio Language" screen.
 - If the desired language to be heard cannot be found on this screen, select **"Other"** and enter a language code. (→P.310)

■ SUBTITLE LANGUAGE

- 1 Select **"Subtitle Language"**.
- 2 Select the desired language to be read on the "Subtitle Language" screen.
 - If the desired language to be read cannot be found on this screen, select **"Other"** and enter a language code. (→P.310)

■ MENU LANGUAGE

- 1 Select **"Menu Language"**.
- 2 Select the desired language to be read on the "Menu Language" screen.
 - If the desired language to be read cannot be found on this screen, select **"Other"** and enter a language code. (→P.310)

■ PARENTAL LOCK

- 1 Select **"Parental Lock"**.
- 2 Enter the 4-digit personal code on the "Key code" screen.
- 3 Select a parental level (1-8) on the "Select restriction level" screen.

■ DYNAMIC RANGE

The difference between the lowest and highest sound volumes can be adjusted.

- 1 Select **"Dynamic Range"**.
- 2 Each time **"Dynamic Range"** is selected, the setting changes in the following order:
 - "MAX": Maximum dynamic range
 - "STD": Standard dynamic range
 - "MIN": Minimum dynamic range
 - "AUTO": Automatic adjust (Dolby TrueHD only)

INFORMATION

- "AUTO" is available for BD-Video only.
- "MIN" is not available for BD-Video.

■ BD PARENTAL LOCK

- 1 Select **"BD Parental Lock"**.
- 2 Enter the 4-digit personal code on the "Key code" screen.
- 3 Enter the age on the **"Enter restriction age"** screen.

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select **"Angle"**.
- 2 Each time **"Angle"** is selected, the angle is changed.




- The angles available are restricted to those available on the DVD disc.

CHANGING THE SUBTITLE LANGUAGE

The subtitle language can be changed for discs with multiple subtitle languages.

- 1 Select **"Subtitle"**.
- 2 Each time **"Subtitle"** is selected, another language available on the disc is selected.

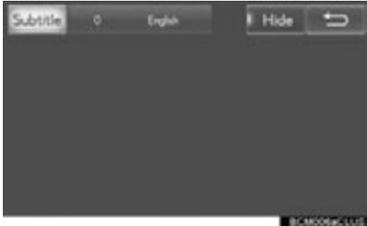

- The languages available are restricted to those available on the DVD disc.
- When **"Hide"** is selected, the subtitles can be hidden.

CHANGING THE AUDIO LANGUAGE

The audio language can be changed for discs with multiple audio languages.

- 1 Select **"Audio"**.
- 2 Each time **"Audio"** is selected, another language available on the disc is selected.



- The languages available are restricted to those available on the DVD disc.

SEARCHING FOR A TITLE OR CHAPTER

▶ DVD video

- 1 Select **"Search"**.

▶ AVCHD™ video

- 1 Select **"Title Search"** or **"Chapter Search"**.
- 2 Enter the title number or chapter number, and select **"OK"**.



- The player starts playing video for that title or chapter number.


4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

AVCHD™ VIDEO OPTIONS

- 1 Press the “OPTION” button.
- 2 Check that the following screen is displayed.

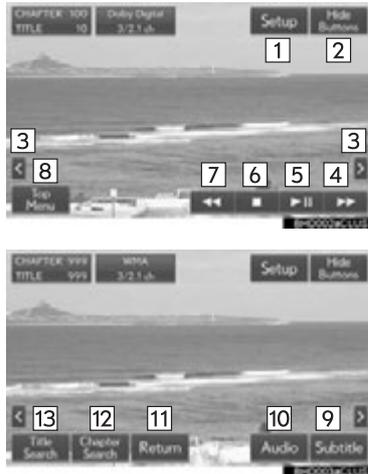

No.	Function	Page
1	DVD only: Select to display the initial setup screen.	256
2	Select to turn off the option screen.	—
3	Select to display the next or previous page.	—
4	<ul style="list-style-type: none"> • During playback: Select to fast forward. • During a pause: Select to slow forward. 	—
5	Select to play/pause.	—
6	Select to stop.	—
7	Select to rewind.	—
8	Select to display the top menu screen.	—
9	Select to change the subtitle language.	258
10	Select to change the audio language.	259
11	Select to return to a predetermined scene.	—
12	Select to search for a chapter.	259
13	Select to search for a title.	259

INFORMATION

- Depending on the disc, some buttons may not be displayed on the screen.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

5. Blu-ray Disc™ (BD-Video AND BDAV)

OVERVIEW

This system can play Blu-ray Disc™ (BD) videos with digital sound.

In addition to commercial BD titles, BDAV videos can be played on this system, therefore digital TV recorded by home digital video recorders can also be played on this system.

The disc operation screen can be reached by the following methods:


Press the “SOURCE” button and select “Rear-DISC”.

▶ Inserting a disc (→P.239)

4

■ REMOTE CONTROLLER

▶ When the cover is closed

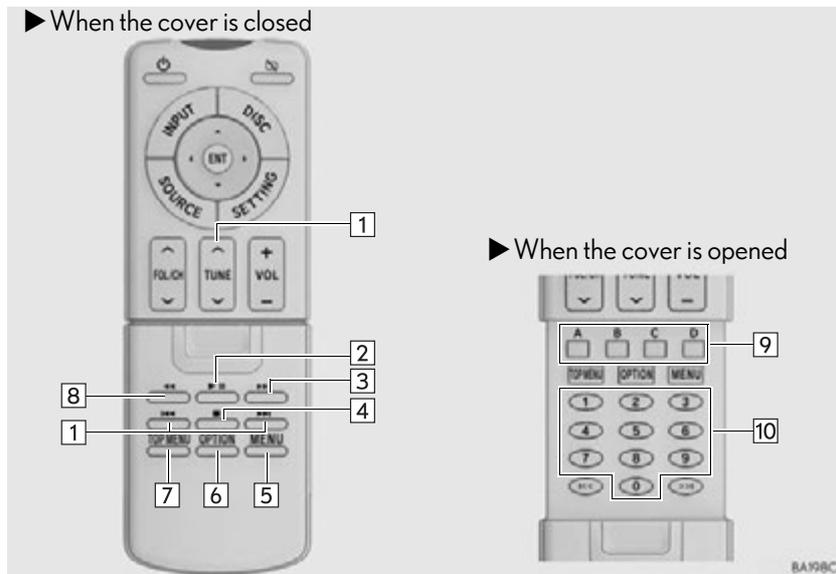

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

No.	Function
1	Press to select a chapter. BD-Video only: Press and hold to fast forward/rewind. BD-Video only: Press and hold to select a program/playlist.
2	Press to play/pause.
3	<ul style="list-style-type: none"> • During playback: Press and hold to fast forward. • During a pause: Press and hold to slow forward.
4	Press to stop.
5	BD-Video only: Press to display the pop-up menu screen.
6	Press to display the option screen. (→P.263, 267)
7	BD-Video only: Press to display the top menu screen.
8	Press and hold to fast rewind.
9	BD-Video only: Color buttons
10	BD-Video only: 10 key buttons

(INFORMATION)

- Some BD-Video discs have a local storage feature which allows the disc's additional information, such as resume information, to be stored. This additional information can be utilized when BD-Video is being played. Refer to the manual that came with the BD-Video disc to see whether it has a local storage feature. If it does, the local storage feature can be enabled by inserting an SD card into this system.
- If an SD card with existing data, is inserted, BD-Video disc information will not be stored on the SD card in order to protect the data on the SD card. To enable the local storage feature, use an SD card that does not have any data on it.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

BD-VIDEO OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.



No.	Function	Page
1	Select to display the initial setup screen.	256
2	Select to turn off the option screen.	—
3	Select to display the next or previous page.	—
4	<ul style="list-style-type: none"> • During playback: Select to fast forward. • During a pause: Select to slow forward. 	—
5	Select to play/pause.	—
6	Select to stop.	—
7	Select to rewind.	—
8	Select to display the pop-up menu.	264
9	Select to display the top menu screen.	—
10	Select to change the angle.	264
11	Select to change the subtitle language.	265
12	Select to change the audio language.	265
13	Select to return to a predetermined scene.	—
14	Select to search for a chapter.	265
15	Select to search for a title.	265
16	Select to change the secondary audio.	265
17	Select to display the secondary video (Picture-in-picture).	266

4 AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

No.	Function	Page
18	Select to display the 10 key pad.	266
19	Select to display the color key buttons.	266

INFORMATION

- Depending on the disc, some buttons may not be displayed on the screen.

DISPLAYING THE POP-UP MENU

Some BD-Video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

- 1 Select "Pop-up Menu".
- 2 Select the menu item using the ▲, ▼, ◀ or ▶ on the "ENT" button, and press the "ENT" button.

CHANGING THE ANGLE

The angle can be changed for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select "Angle".
- 2 Each time "Angle" is selected, the angle changes.




- The angles available are restricted to those available on the BD disc.

CHANGING THE SUBTITLE LANGUAGE

The subtitle language can be changed for discs with multiple subtitle languages.

- 1 Select **"Subtitle"**.
- 2 Each time **"Subtitle"** is selected, another language available on the disc is selected.

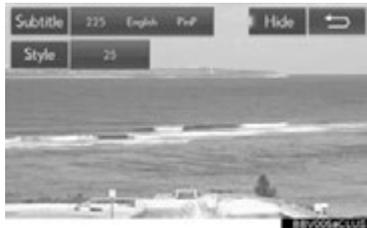

"Hide": Subtitle can be hidden
"Style": Subtitle style can be changed.

CHANGING THE AUDIO LANGUAGE

The audio language can be changed for discs with multiple audio languages.

- 1 Select **"Audio"**.
- 2 Each time **"Audio"** is selected, another language available on the disc is selected.



SEARCHING FOR A TITLE OR CHAPTER

- 1 Select **"Title Search"** or **"Chapter Search"**.
- 2 Input the title number or chapter number, and select **"OK"**.



- The player starts playing video for that title or chapter number.

CHANGING THE SECONDARY AUDIO

The secondary audio that for the secondary video can be changed.

- 1 Select **"PinP Audio"**.
- 2 Each time **"PinP Audio"** is selected, another secondary audio stored on the disc is selected.



"OFF": Select to turn the secondary audio off

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

DISPLAYING THE SECONDARY VIDEO (PICTURE-IN-PICTURE)

Picture-in-picture is a secondary video that plays embedded in the primary video. The secondary video can be played from a disc compatible with the picture-in-picture function.

- 1 Select **"PinP"**.
- 2 The secondary video is displayed on the screen.
Each time **"PinP"** is selected, another secondary video available on the disc is selected.



"Hide": Secondary video can be hidden.

DISPLAYING THE 10 KEY PAD

The 10 key pad is used when inputting numbers according to directions of contents.

- 1 Select **"Key Pad"**.
- 2 Select the number button.
You can also press the 10 key buttons (1-0).



DISPLAYING THE COLOR KEY BUTTONS

The color button is used for various uses according to directions of contents.


- 1 Select **"Color Keys"**.
- 2 Select the color button.
You can also press the color buttons (A-D).



8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

BD/AV OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.

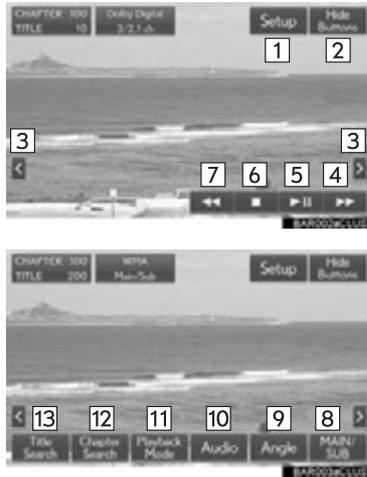

No.	Function	Page
1	Select to display the initial setup screen.	256
2	Select to turn off the option screen.	—
3	Select to display the next or previous page.	—
4	<ul style="list-style-type: none"> • During playback: Select to fast forward. • During a pause: Select to slow forward. 	—
5	Select to play/pause.	—
6	Select to stop.	—
7	Select to rewind.	—
8	Select to change the audio channel.	268
9	Select to change the angle.	264
10	Select to change the audio language.	265
11	Select to change the playback mode.	268
12	Select to search for a chapter.	265
13	Select to search for a title.	265

4 AUDIO/VISUAL SYSTEM

INFORMATION

- Depending on the disc, some buttons may not be displayed on the screen.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

CHANGING THE AUDIO CHANNEL

The audio channel can be changed for discs with multiple audio channels.

- 1 Select **"MAIN/SUB"**.
- 2 Each time **"MAIN/SUB"** is selected, the mode changes in the following order:
"Main": Main audio channel
"Sub": Sub audio channel
"Main/Sub": Both the main and sub audio channels

CHANGING THE PLAYBACK MODE

The playback mode can be changed to program mode or playlist mode. Playlist mode cannot be selected if a playlist is not stored on the disc.

- 1 Select **"Playback Mode"**.
- 2 Each time **"Playback Mode"** is selected, the mode changes.



"Program": Playback the disc in order of program number

"Playlist": Playback the disc in order of playlist number

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

6. USB MEMORY

OVERVIEW

USB audio can be played on this system.

The USB memory operation screen can be reached by the following methods:

Press the **"SOURCE"** button, and select **"USB 1"** or **"USB 2"**.

▶ Connecting a USB memory (→P.153)

■ CONTROL SCREEN




4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ REMOTE CONTROLLER

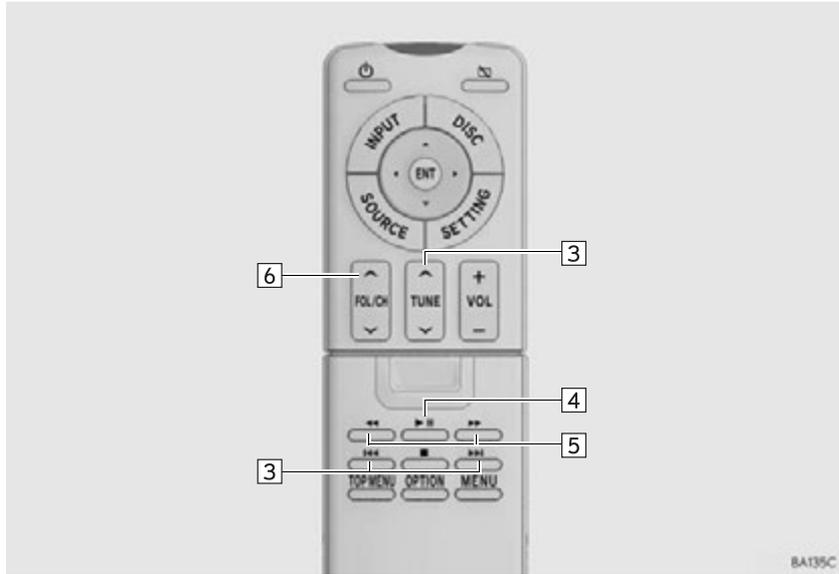

No.	Function
1	Select to set repeat playback. (→P.271)
2	Select to set random playback. (→P.271)
3	Press to select a file/track. Press and hold to fast forward/rewind.
4	Press to play/pause.
5	Press and hold to fast forward/rewind.
6	Press to select a folder/album.

REPEATING

The file/track or folder/album currently being listened to can be repeated.

1 Select "RPT".



- Each time "RPT" is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file/track repeat → folder/album repeat → off
 - ▶ When random playback is on
 - file/track repeat → off

INFORMATION

- When "RPT" is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files/tracks or folders/albums can be automatically and randomly selected.

1 Select "RAND".



- Each time "RAND" is selected, the mode changes as follows:
 - random (1 folder/album random) → folder/album random (all folder/album random) → off

INFORMATION

- When "RAND" is selected, "RAND"/"FLD.RAND" appears on the screen.

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

7. iPod


OVERVIEW

iPod audio and iPod video can be played on this system.
However, the iPod operation screen cannot be displayed if “USB” is selected for the front audio/visual system’s audio/video input. (→P.216)
The iPod operation screen can be reached by the following methods:
Press the “SOURCE” button, and select “iPod 1” or “iPod 2”.
▶ Connecting an iPod (→P.153)

■ CONTROL SCREEN



■ REMOTE CONTROLLER

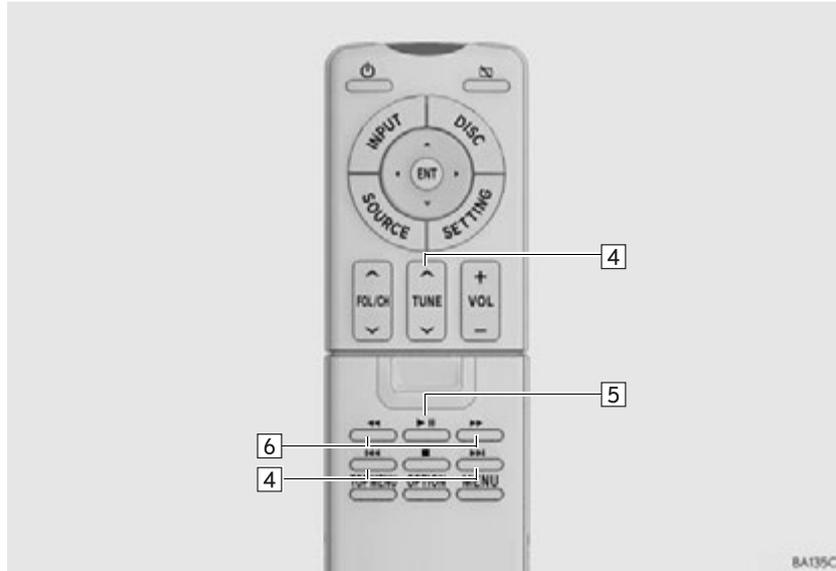

4
AUDIO/VISUAL SYSTEM

No.	Function
1	Select to set repeat playback. (→P.274)
2	Select to set random playback. (→P.274)
3	Select to display the video screen. To return to the audio screen, press the "Source" button and select "Music" .
4	Press to select a track/file. Press and hold to fast forward/rewind.
5	Press to play/pause.
6	Press and hold to fast forward/rewind.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

iPod AUDIO

REPEATING

The track currently being listened to can be repeated.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → off

INFORMATION

- When  is selected, "RPT" appears on the screen.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - track shuffle → album shuffle → off

INFORMATION

- When  is selected, "Shuffle"/"ALB.Shuffle" appears on the screen.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

8. Bluetooth® AUDIO

OVERVIEW

The Bluetooth® audio operation screen can be reached by the following method:
Press the “SOURCE” button and select “Bluetooth*”.

▶ Connecting a Bluetooth® audio device (→P.201)

■ CONTROL SCREEN




4

AUDIO/VISUAL SYSTEM

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ REMOTE CONTROLLER

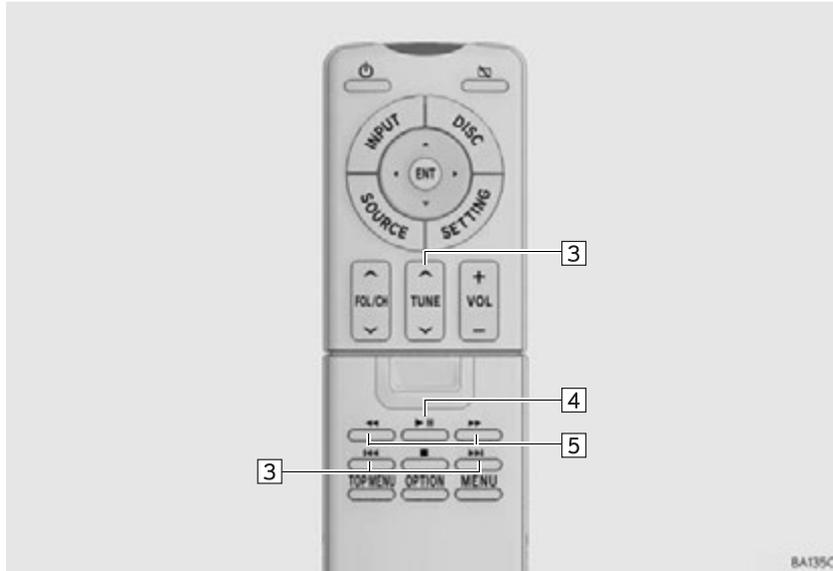

No.	Function
1	Select to set repeat playback. (→P.277)
2	Select to set random playback. (→P.277)
3	Press to select a track. Press and hold to fast forward/rewind.
4	Press to play/pause.
5	Press and hold to fast forward/rewind.

Bluetooth® AUDIO

REPEATING

The track or album currently being listened to can be repeated.

- 1 Select "RPT".



- Each time "RPT" is selected, the mode changes as follows:
 - track repeat → album repeat → off

INFORMATION

- When "RPT" is selected, "RPT"/"ALB.RPT" appears on the screen.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

- 1 Select "RAND".



- Each time "RAND" is selected, the mode changes as follows:
 - album random → all track random → off

INFORMATION

- When "RAND" is selected, "RAND"/"ALB.RAND" appears on the screen.

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

9. SD CARD


This system can play still pictures, music and movies (SD video, AVCHD™ video, etc.) that are stored on an SD card.

The SD operation screen can be reached by the following method:

Press the “SOURCE” button and select “Rear-SD”.

▶ Inserting an SD card (→P.240)

3 Select the desired mode.

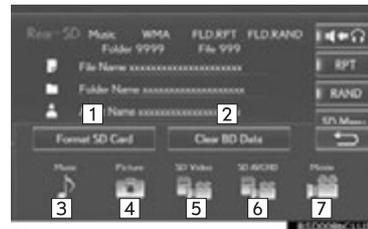

SELECTING THE SD MODE

1 Press the “SOURCE” button and select “Rear-SD”.



2 Select “SD Menu”.



No.	Function	Page
1	Select to format the SD card. If the SD card is formatted, all data on the card will be erased.	—
2	Select to delete stored BD-Video data from the SD card.	—
3	Select to play music.	279
4	Select to play still pictures.	282
5	Select to play SD video.	285
6	Select to play AVCHD™ Video.	289
7	Select to play a movie.	285

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

MUSIC

OVERVIEW

MP3/WMA/AAC files stored on an SD card can be played.

The SD music operation screen can be reached by the following methods: →P.278

CONTROL SCREEN




4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ REMOTE CONTROLLER

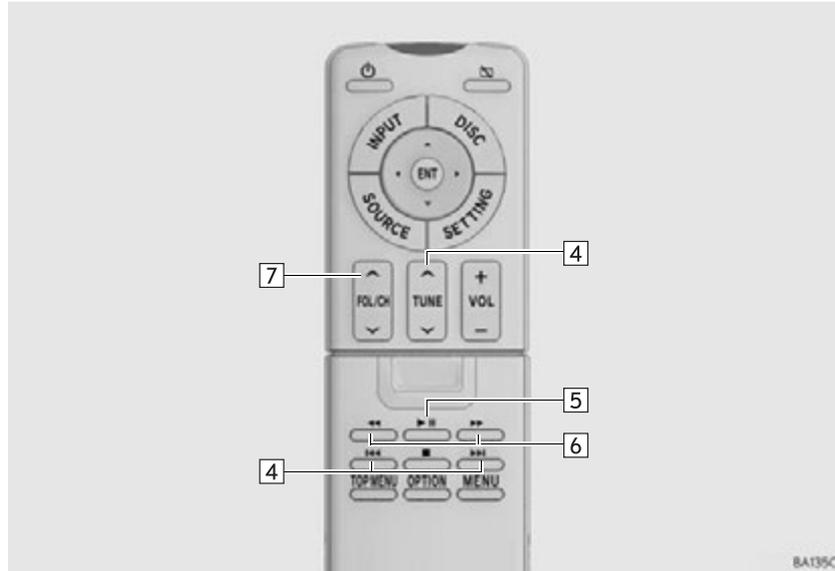

No.	Function
1	Select to set repeat playback. (→ P.281)
2	Select to set random playback. (→P.281)
3	Select to display the SD menu screen. (→ P.278)
4	Press to select a file. Press and hold to fast forward/rewind.
5	Press to play/pause.
6	Press and hold to fast forward/rewind.
7	Press to select a folder. Press and hold “V”, the top file stored in the top folder in the disc will be selected.

SD MUSIC

REPEATING

The file or folder currently being listened to can be repeated.

1 Select "RPT".



- Each time "RPT" is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file repeat → folder repeat → off
 - ▶ When random playback is on
 - file repeat → off

INFORMATION

- When "RPT" is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

1 Select "RAND".



- Each time "RAND" is selected, the mode changes as follows:
 - random (1 folder random) → folder random (1 disc random) → off

INFORMATION

- When "RAND" is selected, "RAND"/"FLD.RAND" appears on the screen.

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

PICTURE


OVERVIEW

Image files stored on an SD card can be displayed individually or in a slideshow.
The SD picture operation screen can be reached by the following methods: →P.278

■ CONTROL SCREEN



■ REMOTE CONTROLLER

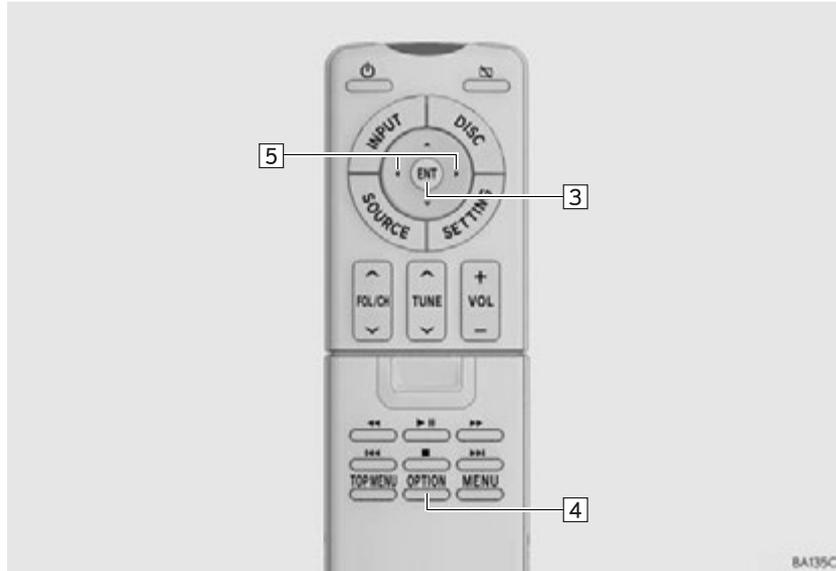


4
AUDIO/VISUAL SYSTEM

No.	Function
1	Select to display the next/previous page.
2	Select to display the desired still picture.
3	<ul style="list-style-type: none"> When the picture thumbnail list is displayed: Press to display the selected picture in full screen. When a full screen picture is displayed: Press to display the picture thumbnail list.
4	When a full screen picture is displayed, press to display the option screen. (→P.284)
5	When a full screen picture is displayed, press to change the displayed picture.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

OPTION SCREEN


- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.

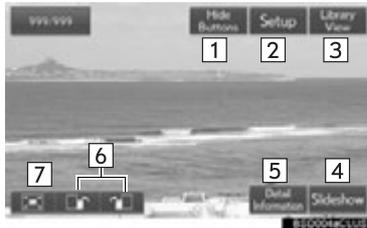

No.	Function
1	Select to turn off the option screen.
2	Select to start the slide show settings. (→P.284)
3	Select to display the picture list screen.
4	Select to start a slideshow. To end the slideshow, press the "OPTION" or "ENT" button.
5	Select to display the current still picture information.
6	Select to rotate the still picture.
7	Select to zoom on the still picture.

PICTURE SETTINGS SCREEN

- 1 Select "Setup".
- 2 Select the items to be set.

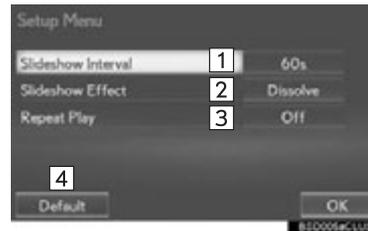

No.	Function
1	Select to set slideshow interval time. "5s" → "10s" → "15s" → "30s" → "60s"
2	Select to set slideshow effect. "Fade" → "Slide" → "Wipe1" → "Wipe2" → "Dissolve" → "Zoom" → "OFF"
3	Select to set repeat of the slideshow on/off.
4	Select to restore the default settings.


- 3 Select "OK".

VIDEO/MOVIE

OVERVIEW

SD videos/movies stored on an SD card can be played.
 The SD video/movie operation screen can be reached by the following methods:
 →P.278

REMOTE CONTROLLER

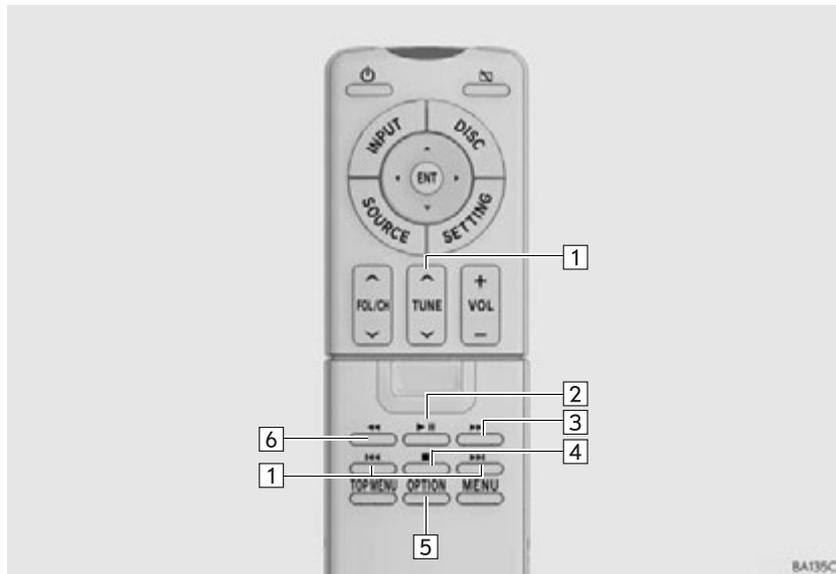

4


AUDIO/VISUAL SYSTEM

No.	Function
1	Press to select a file/chapter. Press and hold to fast forward/rewind.
2	Press to play/pause.
3	<ul style="list-style-type: none"> • During playback: Press and hold to fast forward. • During a pause: Press and hold to slow forward.
4	Press to stop.
5	Press to display the option screen. (→P.286)
6	Press and hold to fast rewind.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

VIDEO/MOVIE OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.

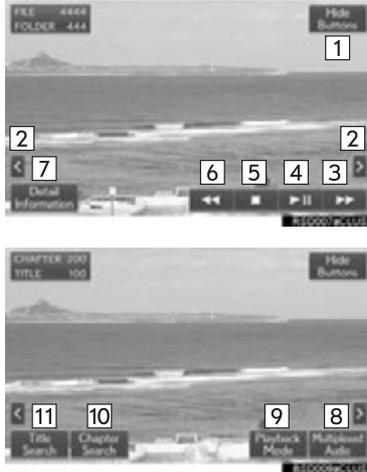

No.	Function	Page
1	Select to turn off the option screen.	—
2*	Select to display the next or previous page.	—
3	<ul style="list-style-type: none"> • During playback: Select and hold to fast forward. • During a pause: Select and hold to slow forward. 	—
4	Select to play/pause.	—
5	Select to stop.	—
6	Select and hold to rewind.	—
7	Select to display the file information.	—
8*	Select to change the audio channel.	287
9*	Select to change the playback mode.	287
10*	Select to search for a chapter.	288
11*	Select to search for a title.	288

*: SD Video only

INFORMATION

- Depending on the data stored on the SD card, some buttons may not be displayed on the screen.

CHANGING THE AUDIO CHANNEL

The audio channel can be changed for videos with multiple audio channels.

- 1 Select **"Multiplexed Audio"**.
- 2 Each time **"Audio"** is selected, the mode changes in the following order:



- "Main": Main audio channel
- "Sub": Sub audio channel
- "Main/Sub": Both the main and sub audio channels

CHANGING THE PLAYBACK MODE

The playback mode can be changed to program mode or playlist mode. Playlist mode cannot be selected if a playlist is not stored on the disc.

- 1 Select **"Playback Mode"**.
- 2 Each time **"Playback Mode"** is selected, the mode changes.



- "Program": Playback the disc in order of program number
- "Playlist": Playback the disc in order of playlist number

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ SEARCHING FOR A TITLE OR CHAPTER

- 1 Select “Title Search” or “Chapter Search”.
- 2 Enter the title or chapter number and select “OK”.




- The player starts playing video for that title or chapter number.

VIDEO (SD AVCHD™)

OVERVIEW

SD Videos (AVCHD™ videos) stored on an SD card can be played.
The SD video (AVCHD™) operation screen can be reached by the following methods: →P.278

REMOTE CONTROLLER

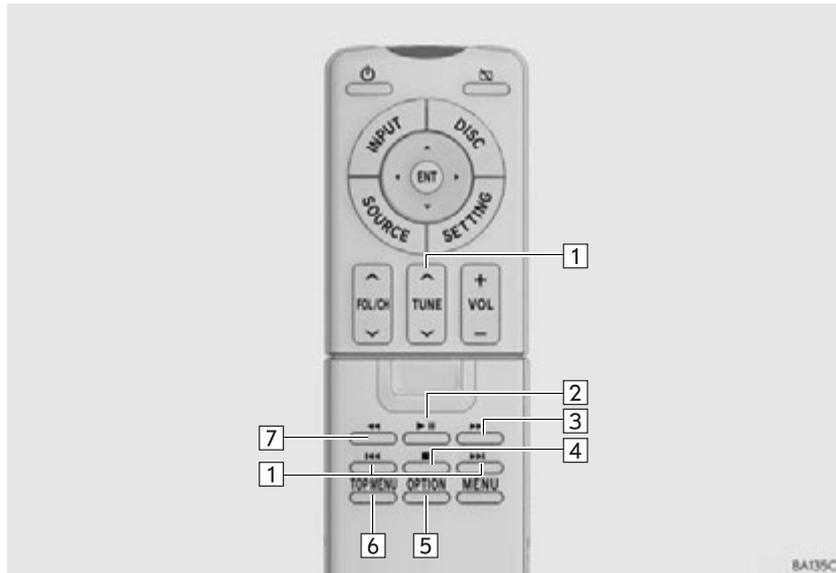

4

AUDIO/VISUAL SYSTEM

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

No.	Function
1	Press to select a chapter. Press and hold to fast forward/rewind.
2	Press to play/pause.
3	<ul style="list-style-type: none">• During playback: Press and hold to fast forward.• During a pause: Press and hold to slow forward.
4	Press to stop.
5	Press to display the option screen. (→P.260)
6	Press to display the top menu screen.
7	Press and hold to fast rewind.

8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

10. EXTERNAL DEVICES

OVERVIEW

The rear seat entertainment system plays videos and sound when audio/visual equipment is connected to the A/V input port.

The external devices operation screen can be reached by the following methods:

Press the **"SOURCE"** button, and select **"AUX"**, **"A/V"**, **"Rear-A/V"** or **"Rear-HDMI"**.

▶ Connecting a external device

The front player: →P.153

The rear player: →P.240

▶ Selecting a input port to use (VTR input port or HDMI input port)

Press the **"INPUT"** button.

4

AUDIO/VISUAL SYSTEM

9. SETUP FOR REAR SEAT ENTERTAINMENT SYSTEM


1. REAR SEAT ENTERTAINMENT SYSTEM SETTINGS

DISPLAYING THE SETTING SCREEN

1 Press the "SETTING" button.



2 Select the tab to be set.

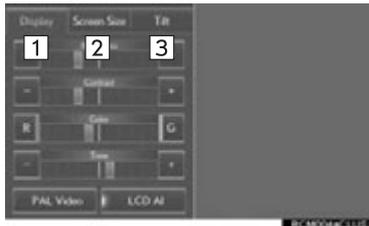


No.	Function	Page
1	Select to adjust the screen.	292
2	Select to change the screen size.	293
3*	Select to tilt the display.	294

*: With overhead display

ADJUSTING THE SCREEN

The screen image quality, such as the brightness and contrast levels, can be adjusted. Adjustable items depend on the selected input source.

- 1 Display the settings screen. (→P.292)
- 2 Select the "Display" tab.
- 3 Select the item to be set.

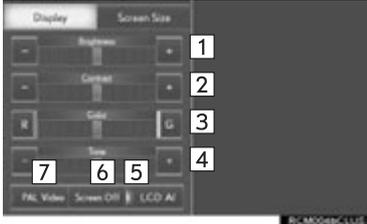

No.	Function	
1	"Brightness" "-"	Select to darken the screen.
	"Brightness" "+"	Select to brighten the screen.
2	"Contrast" "-"	Select to weaken the contrast.
	"Contrast" "+"	Select to strengthen the contrast.
3	"Color" "R"	Select to strengthen the red color.
	"Color" "G"	Select to strengthen the green color.
4	"Tone" "-"	Select to weaken the tone.
	"Tone" "+"	Select to strengthen the tone.

No.	Function
5	Select to turn on/off the "LCD AI". The "LCD AI" automatically determines the tone of the video image and sets the contrast to an optimum level, displaying a sharp image.
6	Select to turn the display off (with rear console display). To turn it on, press any button.
7	Select to switch between NTSC/PAL input format. (PAL: indicator on, NTSC: indicator off)

CHANGING THE SCREEN SIZE

The screen size can be changed for each input mode individually. Depending on the audio source, some functions may not be available.

- 1 Display the settings screen. (→P.292)
- 2 Select the "Screen Size" tab.
- 3 Select the desired screen size.



4


AUDIO/VISUAL SYSTEM

No.	Function
1	Select to display the screen at the original ratio.
2	Select to widen the 4:3 aspect screen horizontally to fill the screen.

9. SETUP FOR REAR SEAT ENTERTAINMENT SYSTEM

TILTING THE DISPLAY (WITH OVERHEAD DISPLAY)

- 1 Display the settings screen. (→P.292)
- 2 Select the "Tilt" tab.
- 3 Select the item to be set.

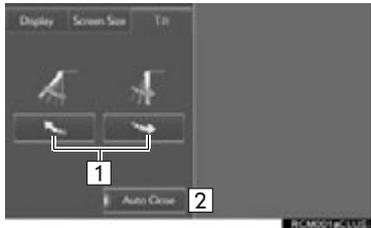

No.	Function
1	Select to adjust the display angle. The display angle is memorized and will be recalled when the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode.
2	Select to turn automatic closing of the display on/off. If "Auto Close" is on, the display will automatically close when the engine <power> switch is turned off. The display will automatically open when the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode again.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

1. OPERATING INFORMATION

CAUTION

- When the rear seat entertainment system is not used (with overhead display): Keep the display closed. In the event of an accident or sudden braking, the opened display may hit an occupant's body, resulting in injury.
- To prevent accidents and electric shock: Do not disassemble or modify the remote controller.
- When the remote controller is not used: Stow the remote controller. Injuries may result in the event of an accident or sudden braking.
- Closing the display (with overhead display): Never use any part of your body to intentionally activate the jam protection function.
- Removed battery and other parts: These parts are small and if swallowed by a child they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

NOTICE

- Cleaning the display: Wipe the display with a dry soft cloth. If the screen is wiped with a rough cloth, the surface of the screen may be scratched.
- To prevent damage to the remote controller:
 - Keep the remote controller away from direct sunlight, heat and high humidity.
 - Do not drop or strike the remote controller against hard objects.
 - Do not sit on or place heavy objects on the remote controller.
- BD/DVD/CD player: Never try to disassemble or oil any part of the BD/DVD/CD player. Do not insert anything other than a disc into the slot.
- Closing the display (with overhead display): Do not close the display using your hand. Doing so may result in a malfunction.
- For normal operation after replacing the battery: Observe the following precautions to prevent accidents.
 - Always work with dry hands. Moisture may cause the battery to rust.
 - Do not touch or move any other components inside the remote controller.
 - Do not bend either of the battery terminals.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

CAUTION SCREEN

A caution screen appears for a few seconds when the rear display turns on. During this time, only the "OPEN/CLOSE" button can be operated (with overhead display).


WHEN APPEARS ON THE SCREEN

 indicates that the selected icon cannot be used at this time.

THE REMOTE CONTROLLER

■ BEFORE USING THE REMOTE CONTROLLER (FOR NEW VEHICLE OWNERS)

Remove the insulating sheet before using the remote controller.

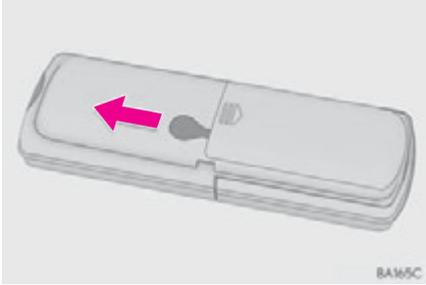


INFORMATION

- An insulating sheet is set to prevent the batteries from being depleted.

■ WHEN THE REMOTE CONTROLLER BATTERIES ARE FULLY DEPLETED

Remove the depleted batteries and install new batteries.

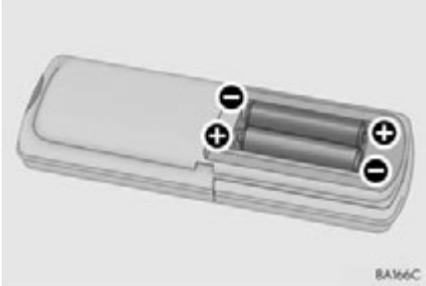

■ IF THE REMOTE CONTROLLER BATTERIES ARE DISCHARGED

The following symptoms may occur.

- The remote controller will not function properly.
- The operational range is reduced.

■ USE TWO AA BATTERIES

- Batteries can be purchased at Lexus dealer, electric appliance shop, or camera stores.
- Replace only with the same or equivalent type recommended by Lexus dealer.
- Dispose of used batteries according to the local laws.

HEADPHONES

Infrared wireless headphones can also be used. However, with some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Contact your Lexus dealer.

VOLUME

- Adjust the volume when you connect the headphone to the jack. Loud sounds may have a significant impact on the human body.
- Conversational speech on some BD/DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

COPYRIGHTS AND TRADEMARKS

- Blu-ray Disc™, Blu-ray™, BD-Live™, BDXL™, and the logos are trademarks of the Blu-ray Disc Association.



- Java is a registered trademark of Oracle and/or its affiliates.



- “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.



- “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation.



- SDXC Logo is a trademark of SD-3C, LLC.



- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS-HD Master Audio | Essential is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or (ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide MPEG-4/AVC/VC-1 Video.
No license is granted or shall be implied for any other use.
Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

- **Cinavia Notice**
This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.
More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.
- This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2014 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.
- WMA (Windows Media Audio), Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.
This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

- This product incorporates the following software:
 - (1) the software developed independently by or for Panasonic Corporation,
 - (2) the software owned by third party and licensed to Panasonic Corporation,
 - (3) the software licensed under the GNU General Public License, Version 2 (GPL V2),
 - (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL v2.1) and/or,
 - (5) open sourced software other than the software licensed under the GPL v2 and/or LGPL v2.1

For the software categorized as (3) and (4), please refer to the terms and conditions of GPL v2 and LGPL v2.1, as the case may be at <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html> and <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>.

In addition, the software categorized as (3) and (4) are copyrighted by several individuals. Please refer to the copyright notice of those individuals at <http://car.panasonic.jp/oss/44bu9ph2/>

The GPL/LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of products, we will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL v2/LGPL v2.1.

[Contact address]
 Engineering Administration Group Manager Panasonic Corporation
 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama City 224-8520, Japan
 Source code is also freely available to you and any other member of the public via our website bellow.
<http://car.panasonic.jp/oss/44bu9ph2/>

For the software categorized as (5) includes as follows.

 1. This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)
 2. This product includes software developed by the University of California, Berkeley and its contributors.
 3. Free Type code.
 4. The Independent JPEG Group's JPEG software.
 5. Vera Fonts. (<http://www.gnome.org/fonts/>)

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

CD/DVD/Blu-ray Disc™ PLAYER AND DISCS

DISCS THAT CAN BE USED

⚠ CAUTION

- Certification for the player: This product is a class I laser product.
 - A laser beam leak may result in hazardous radiation exposure.
 - Do not open the cover of the player or attempt to repair the unit yourself. Refer servicing to qualified personnel.
 - Laser power: No hazardous
- BD/DVD video precaution: Conversational speech on some BDs/DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source. Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

Discs with the marks shown below can be used.
Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



The following discs cannot be used on this system:

- BDXL™ disc
- BD-RE with the cartridge
- HD DVD
- DVD-Audio
- SACD

⚠ NOTICE


- Player precautions: Failure to follow the precautions below may result in damage to the discs or the player itself.
 - Do not insert anything other than discs into the disc slot.
 - Do not apply oil to the player.
 - Store discs away from direct sunlight.
 - Never try to disassemble any part of the player.

NOTICE

- Discs and adapters that cannot be used:
Do not use the following types of discs.
Also, do not use 3 in. (8 cm) disc adapters, Dual Discs or printable discs.
Doing so may damage the player and/or disc insert/eject function.
- Discs that have a diameter that is not 4.7 in (12 cm)




- Low-quality or deformed discs

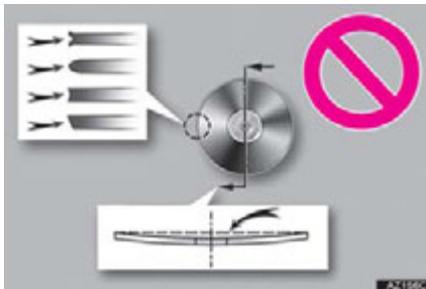

NOTICE

- Discs with a transparent or translucent recording area

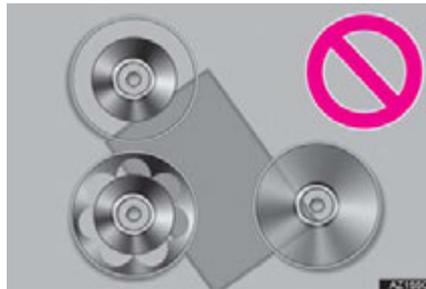

- Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off



ABOUT MP3/WMA/AAC FILES AND COMPATIBILITY

MP3 (MPEG Audio LAYER3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) is a standard audio compression format.

There is a limit to the MP3, WMA and AAC file standards and to the media/formats recorded by them that can be used.

MP3 FILE COMPATIBILITY

Compatible standards	MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
Compatible sampling frequencies	MPEG1 LAYER3: 32, 44.1, 48 (kHz) MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
Compatible bit rates	MPEG1 LAYER3: 32-320 (kbps) MPEG2 LSF LAYER3: 8-160 (kbps) (compatible with VBR)
Compatible channel modes	stereo, joint stereo, dual channel and mono
ID3 tags	ID3 Ver. 1.0, 1.1, 2.3 and Ver. 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA FILE COMPATIBILITY

Compatible standards	WMA Ver. 7, 8, 9 (9.1/9.2)
Compatible sampling frequencies	8, 11.025, 16, 22.05, 32, 44.1, 48 (kHz)
Compatible bit rates	Ver. 7, 8, 9 (9.1/9.2): CBR 5-320 (kbps) (only compatible with 2-channel playback)

■ AAC FILE COMPATIBILITY

Compatible standards	MPEG2/AAC-LC, MPEG4/AAC-LC (ADIF is not supported)
Compatible sampling frequencies	ADTS (MPEG2 AAC): 16, 22.05, 24, 32, 44.1, 48 (kHz) MP4 (MPEG4 AAC): 16, 22.05, 24, 32, 44.1, 48 (kHz)
Compatible bit rates	ADTS (MPEG2 AAC): 8-384 (kbps) MP4 (MPEG4 AAC): 8-384 (kbps)
Compatible channel mode	ADTS (MPEG2 AAC): 1/0, 2/0, 3/0, 2/1, 2/2, 3/1, 3/2.1 MP4 (MPEG4 AAC): 1/0, 2/0, 3/0, 2/1, 2/2, 3/1, 3/2.1

4

■ COMPATIBLE MEDIA AND DISC FORMATS

Compatible media	CD-ROM/R/RW DVD-ROM/R/RW
Disc formats	CD-ROM Mode 1, CD-ROM XA Mode 2 Form 1
File formats	ISO9660 Level 1, 2 (Romeo, Joliet, RockRidge), UDF (1.02, 1.50, 2.00, 2.01)
Maximum directory hierarchy	8 levels
Maximum length of folder names/file names	The number of the maximum indication letters by design specifications of the indication machine side (support proportional font, and there are distinction of the half size and full size)
Maximum number of folders	255 (including the root)
Maximum number of files per disc	512

AUDIO/VISUAL SYSTEM

■ FILE NAMES

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

■ MULTI-SESSIONS

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3, WMA and AAC files.

■ MP3, WMA AND AAC PLAYBACK

- When a disc containing MP3, WMA or AAC files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3, WMA or AAC files or create any unnecessary folders. If the discs contain a mixture of music data and MP3, WMA or AAC format data, only music data can be played.
- To play MP3 files with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- Playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3, WMA or AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3, WMA or AAC files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.

■ EXTENSIONS

If the file extensions .mp3, .wma and .m4a are used for files other than MP3, WMA and AAC files, they will be mistakenly recognized and played as MP3, WMA and AAC files. This may result in large amounts of interference and damage to the speakers.

DYNAMIC RANGE

“Dynamic Range” can be set only when Dolby Digital or Dolby TrueHD is selected. When Dolby TrueHD is selected, the dynamic range is the same as “MAX” even when set to “MIN”. (→P.257)

BD-Video SECONDARY AUDIO

If BD-Video secondary audio is set to on, secondary audio is output during sections that have secondary audio recorded. During these sections, HD sound, such as 7.1 ch audio, will not be output.

However, if you are playing sections that meet all of the following conditions, HD sound can be output:

- There is no interactive audio
- There is no secondary audio
- There are no BD-J titles

If BD-Video secondary audio is set to off, HD sound can be output. However, for sections that have secondary audio recorded, secondary audio will not be output.

BD/DVD VIDEO DISCS

COMPATIBLE MEDIA

Media that can be used for playback are BD-ROMs, BD-Rs, BD-REs, DVD-ROMs, DVD-Rs and DVD-RWs.

COMPATIBLE DISC FORMATS

Disc formats that can be used for playback are BD-Video formats, BDAV formats, AVCHD™ formats, and DVD video formats.

INFORMATION

- When storing content on BD-R, BD-RE, DVD-R or DVD-RW discs, they must be finalized using a recorder. Discs that are not finalized cannot be played by this system.
- Discs that are recorded with multi session cannot be played by this system.
- BD-Live™ is not supported.

THE COLOR TV FORMATS

This player conforms to NTSC/PAL color TV formats.

REGION CODES

Some BD/DVD video discs have a region code indicating the region in which you can use the BD/DVD video disc.

If the BD-Video disc is not labeled “A” or “ABC” or if the DVD video disc is not labeled “1” or “ALL”, you cannot use it on this player.

Depending on the disc production company, some Blu-ray Disc™ may be designed to not be able to be played in some countries and regions.

If you attempt to play BD/DVD video discs with incompatible region codes on this player, an error message appears on the screen. Even if the BD/DVD video disc does not have a region code, in some cases it cannot be used.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

MARKS SHOWN ON BD/DVD VIDEO DISCS

Mark	Meaning
PAL/NTSC	Indicates compatibility with PAL/NTSC format color TVs
	Indicates the number of audio tracks
	Indicates the number of language subtitles
	Indicates the number of angles
	Indicates the screen display ratios available Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code <ul style="list-style-type: none"> BD-Video "ABC": all regions Alphabet: region code DVD video "ALL": all regions Number: region code

BD/DVD VIDEO DISC INFORMATION

PARENTAL CONTROLS

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the BD/DVD video disc. Some BD/DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

DVD VIDEO

Level 1	DVD video discs for children can be played.
Level 2 - 7	DVD video discs for children and G-rated movies can be played.
Level 8	All types of DVD video discs can be played.

BD-VIDEO

Parental controls of BD-Videos can be set up by inputting an age. If the target age of BD-Video exceeds the age restriction that was set up, then playback will not be possible.

MULTI-ANGLE FEATURE

You can enjoy the same scene from different angles.

MULTI-LANGUAGE OPTION

You can select the subtitle and audio languages.

■ REGION CODES

The region codes are provided on BD/DVD players and BD/DVD discs. If the BD/DVD disc does not have the same region code as the BD/DVD player, you cannot play the disc on the player.

■ TITLE AND CHAPTER

Video and audio stored on BD/DVD video discs are divided into parts by title and chapter.

Title: The largest portion of the video and audio stored on BD/DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A title comprises of one or more chapters.

■ AVCHD™

AVCHD™ is a new format (standard) for high definition video cameras that can record and play high-resolution HD images.

DVDs and SD cards with videos recorded in AVCHD™ format can be used on this system.

■ BDAV (Blu-ray Disc™ AUDIO/VISUAL)

BDAV is one of the audio/visual recording formats for Blu-ray Disc™, has been made primarily for the purpose of broadcasting the recording.

It is used when recording to BD-R and BD-RE by Blu-ray Disc™ recorder.

■ BD-J

Some BD-Video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

■ POP-UP MENU

Some BD-Video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

■ PICTURE-IN-PICTURE

This is a function of BD-Video that plays the primary video and secondary video simultaneously. For instance, the function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.

■ DUBA (DISC UNBOUND BD-J APPLICATION)

For BD-Videos that come as a 2 disc set or more, after finishing and ejecting one of the discs, continuation of the video can be seen shortly after replacing the disc with the proper disc.

■ PLAYLIST (BDAV ONLY)

A playlist of favorite scenes by Blu-ray Disc™ recorder can be created and the scenes can playback via playlist.

AUDIO

This player can play Linear PCM, Dolby Digital, DTS and MPEG audio format. Other decoded types cannot be played.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

LANGUAGE CODES LIST

Code	Language	Code	Language	Code	Language	Code	Language
0514	English	0515	Esperanto	1201	Latin	1912	Slovenian
1001	Japanese	0520	Estonian	1214	Lingala	1913	Samoan
0618	French	0521	Basque	1215	Laotian	1914	Shona
0405	German	0601	Persian	1220	Lithuanian	1915	Somali
0920	Italian	0609	Finnish	1222	Latvian, Lettish	1917	Albanian
0519	Spanish	0610	Fiji	1307	Malagasy	1918	Serbian
2608	Chinese	0615	Faroese	1309	Maori	1919	Siswati
1412	Dutch	0625	Frisian	1311	Macedonian	1920	Sesotho
1620	Portuguese	0701	Irish	1312	Malayalam	1921	Sundanese
1922	Swedish	0704	Scottish-Gaelic	1314	Mongolian	1923	Swahili
1821	Russian	0712	Galician	1315	Moldavian	2001	Tamil
1115	Korean	0714	Guarani	1318	Marathi	2005	Telugu
0512	Greek	0721	Gujarati	1319	Malay	2007	Tajik
0101	Afar	0801	Hausa	1320	Maltese	2008	Thai
0102	Abkhazian	0809	Hindi	1325	Burmese	2009	Tigrinya
0106	Afrikaans	0818	Croatian	1401	Nauru	2011	Turkmen
0113	Amharic	0821	Hungarian	1405	Nepali	2012	Tagalog
0118	Arabic	0825	Armenian	1415	Norwegian	2014	Setswana
0119	Assamese	0901	Interlingua	1503	Occitan	2015	Tongan
0125	Aymara	0905	Interlingue	1513	(Afan) Oromo	2018	Turkish
0126	Azerbaijani	0911	Inupiak	1518	Oriya	2019	Tsonga
0201	Bashkir	0914	Indonesian	1601	Punjabi	2020	Tatar
0205	Byelorussian	0919	Icelandic	1612	Polish	2023	Twi
0207	Bulgarian	0921	Inuktitut	1619	Pashto, Pushto	2107	Uighur
0208	Bihari	0923	Hebrew	1721	Quechua	2111	Ukrainian
0209	Bislama	1009	Yiddish	1813	Rhaeto-Romance	2118	Urdu
0214	Bengali, Bangla	1023	Javanese	1814	Kirundi	2126	Uzbek
0215	Tibetan	1101	Georgian	1815	Romanian	2209	Vietnamese
0218	Breton	1111	Kazakh	1823	Kinyarwanda	2215	Volapük
0301	Catalan	1112	Greenlandic	1901	Sanskrit	2315	Wolof
0315	Corsican	1113	Cambodian	1904	Sindhi	2408	Xhosa
0319	Czech	1114	Kannada	1907	Sango	2515	Yoruba
0325	Welsh	1119	Kashmiri	1908	Serbo-Croatian	2601	Zhuang
0401	Danish	1121	Kurdish	1909	Sinhalese	2621	Zulu
0426	Bhutani	1125	Kirghiz	1911	Slovak		

SD CARD

SD CARDS THAT CAN BE USED

- Memory cards are restricted to the following sizes based on SD standards.

SD	From 512 MB to 2 GB
SDHC	From 4 GB to 32 GB
SDXC	From 48 GB to 256 GB

- Mini SD cards and Micro SD cards can be used, but must be used with an adaptor card.
- MultiMedia Card (MMC) cannot be used.

CAUTION

- SD cards: Keep away from children. These are small and if swallowed by a child they can cause choking.

NOTICE

- SD card precaution: Failure to follow the precautions below may result in damage to the SD cards or the SD card slot.
 - Do not insert anything other than an SD card into the SD card slot.
 - Do not stick labels or stickers on SD card. There is a possibility that it may become impossible to eject the SD card from inside the slot.
 - Do not handle an SD card with wet hands. Doing so may cause electric shock or a malfunction.
 - Do not allow hands or metal objects to contact the interface pins of SD cards.
 - Do not place SD cards on the instrument panel, on any place with direct sunlight or in areas with a lot of moisture.
 - Do not use SD cards in any place where static electricity or electric noise adversely affects SD cards. This may cause data corruption or data loss.
 - Always place the SD card in its storage case when not in use.

SD CARD FUNCTIONS

- Local storage
 - Some BD videos have a feature to memorize disc information, such as a resume point, in a local storage. The rear seat entertainment system uses an SD card as a local storage device. To use this function, insert an SD card into the SD card slot.
 - The SD card memory function may differ depending on the BD videos played.
 - When an SD card that contains any kind of data is inserted, BD video disc information will not be stored into the SD card to protect the existing data in the card. To use an SD card as a local storage, use another SD card that does not contain any data.

COMPATIBILITY**COMPATIBLE FILES**

Music file format	MP3/WMA/AAC file types: →P.304
Video file format	MPEG-4 Video, H.264/AVC Video (.mp4/.m4v), MPEG-2 Video (.mpg), Windows Media Video (.wmv), AVI container (.avi)
Photo file format	JPEG (Gray scale JPEG and Motion JPEG are not supported.)
Pixel size (photo)	Between 1 x 1 and 8192 x 8192 pixels

4

AUDIO/VISUAL SYSTEM

MPEG-4

Profile	Simple Profile, Advanced Simple Profile
Video codec	MPEG-4 Video
Audio codec	MPEG-4 AAC-LC (AAC Low Complexity)
Resolution (pixel)	Maximum 1920 x 1080
Bit rate	Maximum 6Mbps
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps

H.264/AVC

Profile	Baseline Profile, Main Profile, High Profile
Video codec	H.264/AVC Video
Audio codec	MPEG-4 AAC-LC (AAC Low Complexity)
Resolution (pixel)	Maximum 1920 x 1080
Bit rate	Maximum 20Mbps
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

■ MPEG-2

Profile	MP@HL, MP@ML
Video codec	MPEG-2 PS (Program Stream)
Audio codec	MPEG-1 Audio Layer 2, Dolby Digital
Resolution (pixel)	Maximum 1920 x 1080
Bit rate	Maximum 12Mbps
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps

■ WINDOWS MEDIA VIDEO (WMV)

Profile	Simple Profile, Main Profile, Advanced Profile
Video codec	WMV (VC-1)
Audio codec	WMA (WMA Professional and Lossless are not supported.)
Resolution (pixel)	Maximum 1920 x 1080
Bit rate	Simple and Main Profile: Maximum 15Mbps Advanced Profile: Maximum 20Mbps
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps

■ AVI CONTAINER

Profile	Refer to other tables in this section for compatible MPEG-4, H.264/AVC and WMV profiles.
To be played back video and audio codec	Video: H.264/AVC Video Audio: MPEG-4 AAC-LC, MP3
	Video: MPEG-4 Video Audio: MPEG-4 AAC-LC, MP3
	Video: WMV (VC-1) Audio: MP3
Resolution (pixel)	Maximum 1920 x 1080
Bit rate	Refer to other tables in this section for compatible MPEG-4, H.264/AVC and WMV profiles.
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps

4

AUDIO/VISUAL SYSTEM

■ SD-VIDEO H.264 MOBILE VIDEO PROFILE

Profile	Baseline Profile
Video codec	H.264/AVC Video
Audio codec	MPEG-4 AAC
Resolution (pixel)	640 x 480 and 640 x 360
Bit rate	Video: Maximum 1.5Mbps, Audio: Maximum 128kbps
Frame rate	30 fps

INFORMATION

- For information on how to create a video file, refer to the manual that comes with the encoder software to be used. Depending on the encoder software used, some video files may not be played back.

10. TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM

SD CARDS

- An SD card is not provided with the rear seat entertainment system and needs to be purchased separately.
- Compatible formats: This system is compatible with SD memory cards that meet SD card specifications FAT16 formats, SDHC memory cards in FAT32 format, and SDXC memory cards in exFAT format.
- Panasonic SD memory card format software version 4.0 or higher is recommended.
- Data stored on an SD card may be lost. Before playing back pictures and videos stored on an SD card, make certain to back up the data.
- Before an SD card that contains any kind of data is played, slide the lock switch on the SD card to "LOCK" in order to prevent any data from being accidentally deleted or overwritten.
- When discarding or transferring ownership of an SD card: When using format or delete functions on this system or a personal computer, file management data changes but the data on the SD card is not completely erased. Destroying the body of the SD card or using commercial computer software that erases data is recommended when discarding or transferring ownership of an SD card to completely erase the data stored on the card. The management of data stored on an SD card is the customer's responsibility.

A/V INPUT PORT

OPERATING AUDIO/VISUAL EQUIPMENT CONNECTED TO THE SYSTEM

The volume can be adjusted using the vehicle's audio controls. All other operations must be made on the audio/visual equipment itself.

For details about operation of audio/visual equipment, refer to the manufacturer's instructions.



NOTICE

- When the A/V input port is not in use: Keep the A/V input port cover closed. Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

5

VOICE COMMAND SYSTEM

1 VOICE COMMAND SYSTEM OPERATION

- 1. VOICE COMMAND SYSTEM 318
 - USING THE VOICE COMMAND SYSTEM..... 318
 - VOICE COMMAND SYSTEM OPERATION 319
 - EXPANDED VOICE COMMANDS 323
- 2. CASUAL SPEECH RECOGNITION..... 324
- 3. COMMAND LIST 325

2 MOBILE ASSISTANT OPERATION

- 1. MOBILE ASSISTANT 329

1

2

3

4

5

6

7

8

9

10

1. VOICE COMMAND SYSTEM OPERATION

1. VOICE COMMAND SYSTEM

The voice command system enables the audio/visual, hands-free systems, etc. to be operated using voice commands. Refer to the command list for samples of voice commands. (→P. 325)


USING THE VOICE COMMAND SYSTEM

STEERING SWITCH



- 1 Talk switch
 - Press the talk switch to start the voice command system.
 - To cancel voice recognition, press and hold the talk switch.
- 2 Back switch
 - Press the back switch to return to the previous screen.

MICROPHONE

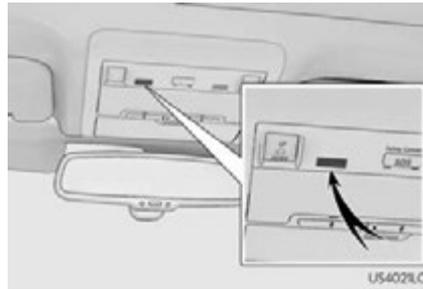

- It is unnecessary to speak directly into the microphone when giving a command.

INFORMATION

- Wait for the confirmation beep before speaking a command.
- Voice commands may not be recognized if:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while voice commands are spoken.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
 - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
 - There is excessive background noise, such as wind noise.

VOICE COMMAND SYSTEM OPERATION

The voice command system is operated by speaking commands corresponding to each function. Also you can confirm the each command by selecting a tab. The tabs are found on the upper part of the screen.

All commands that are not displayed on the screen can be recognized on any screens.

1 Press the talk switch.

- Voice guidance for the voice command system can be skipped by pressing the talk switch.


2 Say the tab selection command or select the desired tab.



- Commands related with each function are displayed on the screen of the each function tab. Some commonly used commands are displayed on the screen of the shortcut tab. Say **"More Hints"** to display more commonly used commands.

- Saying **"Help"** prompts voice guidance to offer examples of commands and operation methods.

3 Say the desired command.

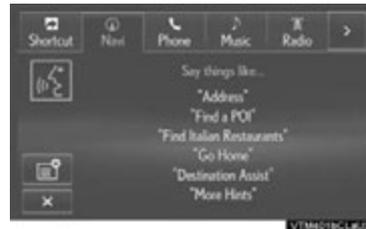

- Registered POIs, registered names in the contacts list etc., can be said in the place of the "<>" next to the commands. (→P. 325)
For example: Say **"Find nearby dining"**, **"Call John Smith"** etc.
- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
 - Say **"Go back"**.
 - Select **"Go Back"**.
 - Press the back switch on the steering wheel.
- To cancel voice recognition, select , or press and hold the talk switch.

1. VOICE COMMAND SYSTEM OPERATION

INFORMATION

- If the system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- If a voice command cannot be recognized, voice guidance will say "Pardon?" ("Command not recognized." will be displayed on the screen) and voice command reception will restart.
- If a voice command cannot be recognized 2 consecutive times, the voice command guidance system will say "Paused. To restart voice recognition, please push the talk switch. To cancel voice recognition, please push and hold the talk switch." Then voice recognition will be suspended.
- "Voice Recognition Prompts" can be set to on or off on the "Voice Settings" screen. (→P. 66)
- Voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.
- The side display cannot be operated during voice recognition.

■ DISPLAYING THE "Voice Settings" SCREENS



- Selecting  can be displayed the "Voice Settings" screen. (→P. 65)

VOICE COMMAND EXAMPLE: LAUNCH LEXUS App Suite APPLICATION*


- 1 Press the talk switch.
- 2 Say "Launch <application name>".



- LEXUS App Suite application screen is displayed.

VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS (ENGLISH ONLY)*

- 1 Press the talk switch.
- 2 Say "Enter an address".
- 3 Say "<house number, street name, city name, State>" continuously.

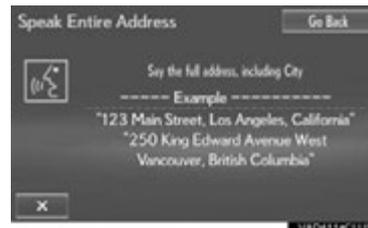

*: With navigation function

- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say “<number>” or select the number.
 - Some areas cannot be recognized by the voice recognition system.
- For information regarding the state/province setting to perform a destination search by address: →P. 96

4 Say “Go directly”.



- After this, follow the voice guidance and search for a destination route by voice command operation.

INFORMATION

- The voice command recognition is designed to recognize the main body of the official street name.

For example: if the official street name is “East Main Street”, the voice command recognition will recognize “Main”.

- Say the desired number, cardinal direction etc. in the place of the “<>”.

For example: Say “West 555”.

- Inputting the house number can be skipped.

- Even if the state set using voice recognition is different from the set state in the “Address” screen (which was set when a destination was set manually), the set state in the “Address” screen will not change. (→P. 97)

- The house number voice recognition conditions are outlined below:

- Numerals: 10 digits or less
- Numerals and cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say “and”.)
- Cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say “and”.)
- Numerals are recognized as single digits only.
- The cardinal direction and hyphens are only recognized once.
- The following cardinal directions can be recognized: North, East, West and South.

VOICE COMMAND EXAMPLE: SEARCH FOR A SONG

- 1 Press the talk switch.
 - 2 Say "Play song <name>".
- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<number>" or select the number.
 - The system starts playing music and the song lists are displayed.

INFORMATION

- The Gracenote database is only compatible with the USB or iPod mode.
- The list screens can be operated by selecting using the Remote Touch as well as by recognizing the voice commands.
- A USB memory or iPod must be connected to enable track searching and playback. (→P. 187, 191)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
 - When the USB memory or iPod data has changed.
 - When the voice recognition language is changed. (→P. 57)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.
- When the "Music" tab is disappeared on the shortcut menu screen, it is not possible to search for a track using a voice command.

VOICE COMMAND EXAMPLE: CALL NAME

- 1 Press the talk switch.
 - 2 Say "Call <contacts> <phone types>".
- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<number>" or select the number.

INFORMATION

- In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact.
For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"
- There are 4 types of phones: Home, Mobile, Office and Other.
- Short or abbreviated names in the contacts list may not be recognized. Change names in the contacts list to full names.
- Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say "Yes" or "No".
- When the system recognizes multiple names from the contacts list, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say or select the number of the name from the candidate list to select a name from the candidate list.
- When a contact has multiple phone numbers registered in the contacts list, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say or select the number of the desired phone number from the candidate list to select a phone number from the candidate list.

VOICE COMMAND EXAMPLE: DIAL NUMBER

- 1 Press the talk switch.
- 2 Say the phone number.
 - In the same manner as it is displayed on the screen, "Dial <number>", after saying "*Dial a number*" say the phone number.
 - Say the phone number one digit at a time. For example, if the phone number is 2345678:
Say "*two three four five six seven eight*"
- 3 Say "*Call*" or press the  switch on the steering wheel.
 - When the confirmation screen appears, say "*Yes*" or select "*Yes*" or press the  switch on the steering wheel.

- When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen. Pressing the  switch on the steering wheel makes a call to the top entry on the list. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list to select a phone number from the candidate list.

EXPANDED VOICE COMMANDS

Selecting "**On**" next to "Expanded Voice Commands" on the "Voice Settings" screen enables expanded voice commands operation. (→P. 65)

Expanded voice commands are displayed on the screen of the "Other" tab. Expanded voice commands are listed in the table (→P. 325)

INFORMATION

- The "Other" tab is not displayed when "Expanded Voice Commands" is "Off".

5

VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION

2. CASUAL SPEECH RECOGNITION

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation. Not all voice commands are displayed in the short cut menu.

INFORMATION

- If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

EXPRESSION EXAMPLES FOR EACH FUNCTION

Command	Expression examples
"Go Home"	<i>Navigate to my house. Take me home.</i>
"Enter an Address"	<i>I need a route to a street address. Give me a street.</i>
"Find <POI category>"	<i>Search for a <Restaurants> around here. I need a route to a nearby <Restaurants>.</i>
"Call <name> <type>"	<i>Get me <Robert Brown>. Contact the <Robert Brown> phone of <Work>.</i>
"Dial <number>"	<i>Can you get me <3334445555>. Ring <3334445555>.</i>
"Play Artist <name>"	<i>Play the artist <name>. I want to hear the band <name>.</i>
"Play Album <name>"	<i>Switch to the album <name>.</i>

1. VOICE COMMAND SYSTEM OPERATION

3. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- Frequently used commands are listed in the following tables.
 - For devices that are not installed in the vehicle, the related commands will not be displayed in the screen. Also, according to conditions, other commands may not be displayed in the screen.
 - The functions available may vary according to the system installed.
- Voice recognition language can be changed. (→P. 57)

▶ Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

▶ Apps*

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

*: With navigation function

1. VOICE COMMAND SYSTEM OPERATION

► Navi*1

Command	Action
"Find <POI category>"	Displays a list of <POI category*2> near the current position*3
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

*1: With navigation function

*2: For example; "Gas stations", "Restaurants", etc.

*3: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite. (→P. 415)

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

▶ Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

5

VOICE COMMAND SYSTEM

▶ Audio

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album

▶ Info*

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"	Displays the Lexus insider list

*: With navigation function

1. VOICE COMMAND SYSTEM OPERATION

► Other

When "Expanded Voice Commands" is turned "On". (→P. 65)

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees* ¹
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* ² Audio"	Selects Bluetooth® audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

*¹: Only within the possible temperature range of the air conditioning system

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INFORMATION

- Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on.

2. MOBILE ASSISTANT OPERATION


1. MOBILE ASSISTANT

The Mobile Assistant feature will activate Apple's Siri® Eyes Free mode via the steering wheel switches. To operate the Mobile Assistant, a compatible cellular phone must be registered and connected to this system via Bluetooth®. (→P.40.)

- 1 Press and hold this switch until you hear the beeps.



- 2 The Mobile Assistant can be used only when the following screen is displayed.

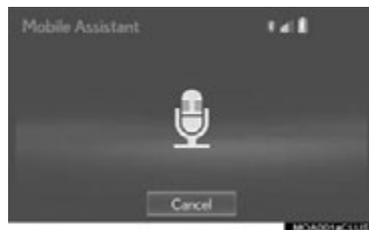

- To cancel the Mobile Assistant, select "Cancel", or press and hold the  on the steering wheel.
- To restart the Mobile Assistant for additional commands, press the  on the steering wheel.
 - Mobile Assistant can only be restarted after the system responds to a voice command.

- After some phone and music commands, the Mobile Assistant feature will automatically end to complete the requested action.

- The volume of the Mobile Assistant can be adjusted using the "PWR-VOL" knob or steering wheel volume control switches. The Mobile Assistant and phone call volumes are synchronized.

INFORMATION

- The available features and functions may vary based on the iOS version installed on the connected device.
- Some Siri features are limited in Eyes Free mode. If you attempt to use an unavailable function, Siri will inform you that the function is not available.
- If Siri is not enabled on the cellular phone connected via Bluetooth®, an error message will be displayed on the screen.
- While a phone call is active, the Mobile Assistant cannot be used.
- If using the navigation feature of the cellular phone, ensure the active audio source is Bluetooth® audio or iPod in order to hear turn by turn direction prompts.

5

VOICE COMMAND SYSTEM

2. MOBILE ASSISTANT OPERATION

MICROPHONE

It is not necessary to speak directly into the microphone when using the Mobile Assistant. (Microphone location: →P.318.)

INFORMATION

- Wait for the listening beeps before using the Mobile Assistant.
- The Mobile Assistant may not recognize commands in the following situations:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while the Mobile Assistant is being used.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned toward the microphone.

6

INFORMATION*

1 INFORMATION DISPLAY

- 1. RECEIVING DOPPLER WEATHER INFORMATION 332
DISPLAYING DOPPLER WEATHER INFORMATION 332
- 2. DATA SERVICES SETTINGS 334
SETTING DOWNLOAD METHODS 334

1

2

3

4

5

6

7

8

9

10

*: With navigation function


1. INFORMATION DISPLAY

1. RECEIVING DOPPLER WEATHER INFORMATION

Doppler weather radar information can be received via HD Radio broadcast or by the LEXUS App Suite application on a Bluetooth® phone. For details about the LEXUS App Suite application: →P. 409

DISPLAYING DOPPLER WEATHER INFORMATION

1 Press the “MENU” button on the Remote Touch.

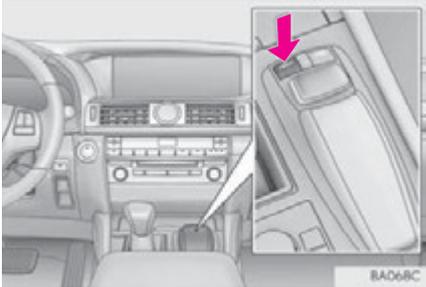

2 Select “Info”.



3 Select “Weather”.



4 Check that the “Weather” screen is displayed.



No.	Function
1	Select to display the weather of the current location. (→P. 333)
2	Select to display the weather of a desired location in the recently checked locations list.
3	Select to display the weather of a desired location in the national cities list.
4	Select to display the weather of a desired location in the other local cities list.
5	Select to display Doppler weather radar information over the map.

DISPLAYING THE WEATHER OF THE CURRENT LOCATION

- 1 Display the "Weather" screen. (→P. 332)
- 2 Select "Current Weather".
- 3 Select the desired tab to be displayed.



- ▶ When the "Current" tab is selected



- ▶ When the "3 Day" tab is selected



- When a specific day is selected, weather information for that day will be displayed.
- ▶ When the "6/12 Hour" tab is selected




1. INFORMATION DISPLAY

2. DATA SERVICES SETTINGS

SETTING DOWNLOAD METHODS

Data service information, which is comprised of traffic information and weather information, can be received via HD Radio broadcast and by the LEXUS App Suite application on a Bluetooth® phone. The receiving method can be set to both or only via HD Radio broadcast. For details about the LEXUS App Suite application: →P. 409

1 Press the "MENU" button on the Remote Touch.

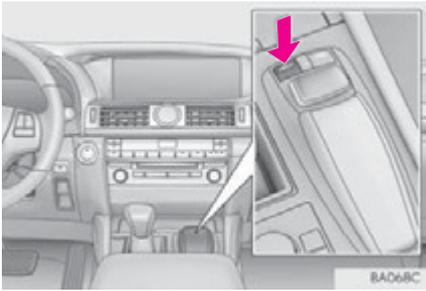

2 Select "Setup".



3 Select "Data Services Settings".



4 Select the desired item to be set.



● Select a checkbox on the right to set.

No.	Function
1	Select to receive data service information via both HD Radio broadcast and the LEXUS App Suite application on a Bluetooth® phone. When both methods are available, HD Radio broadcast will be selected.
2	Select to receive data only via HD Radio broadcast.

7

PERIPHERAL MONITORING SYSTEM

1 LEXUS PARKING ASSIST MONITOR

1. LEXUS PARKING ASSIST MONITOR	336
DRIVING PRECAUTIONS	336
SCREEN DISPLAY	338
USING THE SYSTEM.....	339
2. ESTIMATED COURSE LINE DISPLAY MODE	341
SCREEN DESCRIPTION	341
PARKING	342
3. PARKING ASSIST GUIDE LINE DISPLAY MODE	343
SCREEN DESCRIPTION	343
PARKING	344
4. LEXUS PARKING ASSIST MONITOR PRECAUTIONS	345
AREA DISPLAYED ON SCREEN.....	345
THE CAMERA	346
DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD	347
WHEN APPROACHING THREE-DIMENSIONAL OBJECTS	348
5. THINGS YOU SHOULD KNOW.....	350
IF YOU NOTICE ANY SYMPTOMS	350

2 INTUITIVE PARKING ASSIST

1. INTUITIVE PARKING ASSIST	352
TYPES OF SENSORS.....	352
INTUITIVE PARKING ASSIST SWITCH.....	352
DISPLAY	353
THE DISTANCE DISPLAY AND BUZZER	354
DETECTION RANGE OF THE SENSORS	356
SENSOR DETECTION INFORMATION.....	356
INTUITIVE PARKING ASSIST-SENSOR FAILURE WARNING	358
CERTIFICATION.....	358
2. INTUITIVE PARKING ASSIST SETTING.....	359
SETTING AN ALERT VOLUME.....	360
SETTING A PARKING SONAR DISPLAY.....	360
SETTING A DISPLAY AND TONE INDICATION.....	360

1

2

3

4

5

6

7

8

9

10

1. LEXUS PARKING ASSIST MONITOR

1. LEXUS PARKING ASSIST MONITOR

The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.

INFORMATION

- The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

DRIVING PRECAUTIONS

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the parking assist monitor.

CAUTION

- Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.
Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehicle.
- The instructions given are only guidelines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the parking assist system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.


 CAUTION

- Do not use the parking assist monitor system in the following cases:
 - On icy or slick road surfaces, or in snow
 - When using tire chains or emergency tires
 - When the trunk is not closed completely
 - On roads that are not flat or straight, such as curves or slopes
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P. 347)

1. LEXUS PARKING ASSIST MONITOR

SCREEN DISPLAY

The parking assist monitor screen will be displayed if the shift lever is shifted to the "R" position while the engine <power> switch is in IGNITION ON <ON> mode.

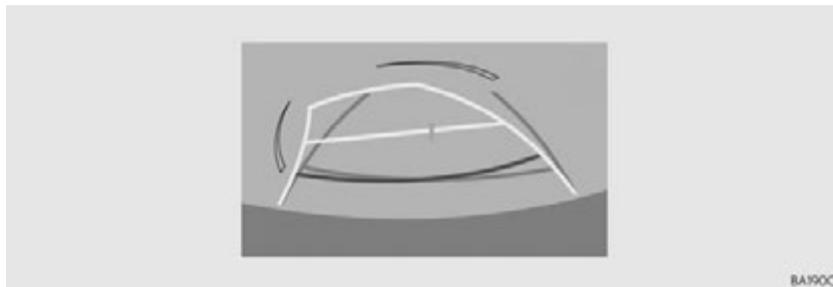

CANCELING LEXUS PARKING ASSIST MONITOR

The parking assist monitor is canceled when the shift lever is shifted into any position other than the "R" position.


USING THE SYSTEM

Use any of the following modes.




▶ Estimated course line display mode
(→P. 341)

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

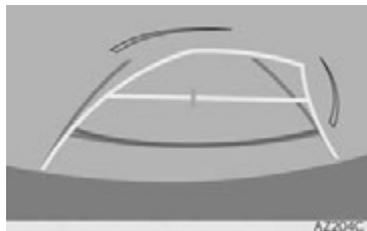


▶ Parking assist guide line display mode
(→P. 343)

The steering wheel return points (parking assist guide lines) are displayed.

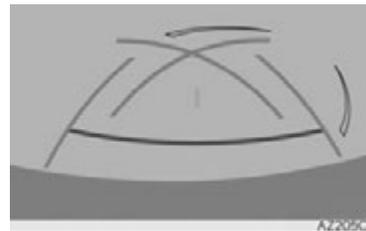

▶ Distance guide line display mode

Distance guide lines only are displayed.

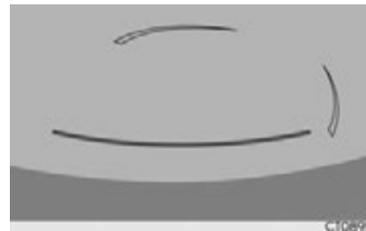

1. LEXUS PARKING ASSIST MONITOR


SWITCHING THE DISPLAY MODE

When the shift lever is in any position other than the “R” position, the display mode can be changed in the following procedure.

- 1 Press the “MENU” button on the Remote Touch.
- 2 Select “Setup”.
- 3 Select “Vehicle”.
- 4 Select “Back Camera Guide Line Setting”.



- 5 Select the display mode.

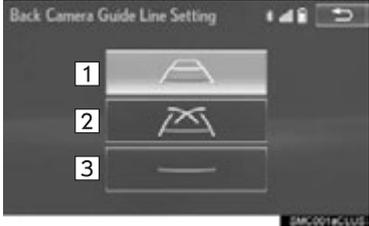


No.	Name	Detail
1	Estimated course line display mode	341
2	Parking assist guide line display mode	343
3	Distance guide line display mode	Distance guide lines only are displayed.

1. LEXUS PARKING ASSIST MONITOR

2. ESTIMATED COURSE LINE DISPLAY MODE

SCREEN DESCRIPTION

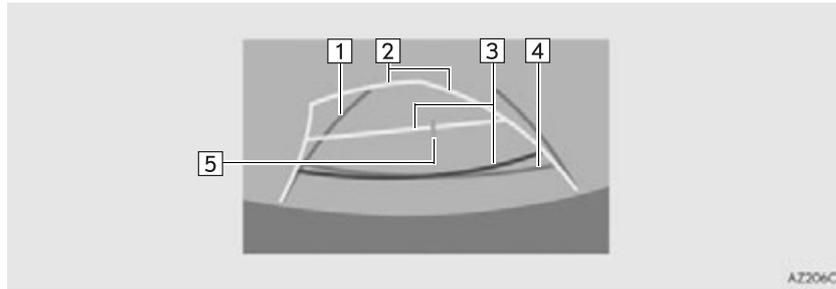

No.	Display	Function
1	Vehicle width guide line	Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none"> The displayed width is wider than the actual vehicle width. These guide lines align with the estimated course lines when the vehicle is going straight ahead.
2	Estimated course lines	Shows an estimated course when the steering wheel is turned.
3	Distance guide lines	Shows distance behind the vehicle when the steering wheel is turned. <ul style="list-style-type: none"> The guide lines move in conjunction with the estimated course lines. The guide lines display points approximately 1.5 ft. (0.5 m) (red) and approximately 3 ft. (1 m) (yellow) from the center of the edge of the bumper.
4	Distance guide line	Shows distance behind the vehicle. <ul style="list-style-type: none"> Displays a point approximately 1.5 ft. (0.5 m) (blue) from the edge of the bumper.
5	Vehicle center guide line	The line indicates the estimated vehicle center on the ground.

7

PERIPHERAL MONITORING SYSTEM

CAUTION


- If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Lexus dealer.

1. LEXUS PARKING ASSIST MONITOR

PARKING


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.

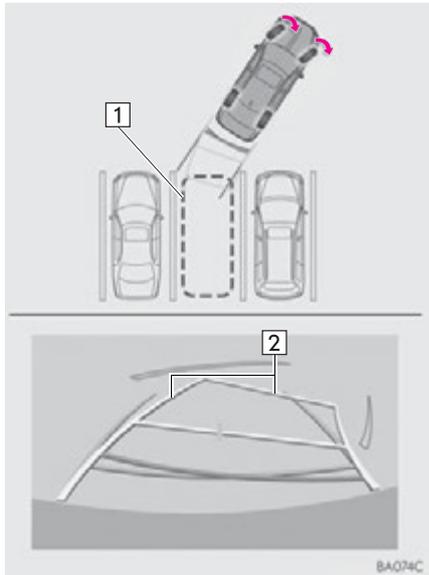

- ▶ 1 Parking space
- ▶ 2 Estimated course lines

- 3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right dividing lines of the parking space.

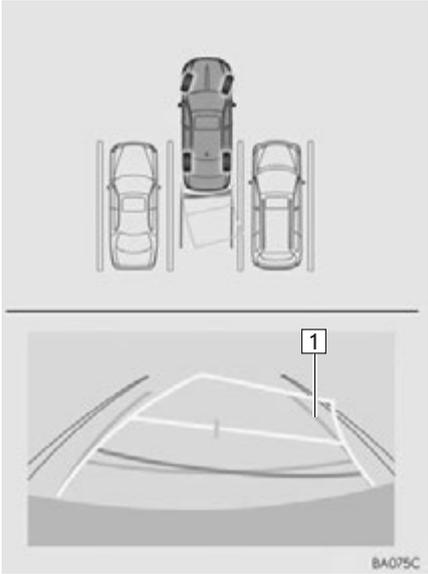


- ▶ 1 Vehicle width guide line
- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

1. LEXUS PARKING ASSIST MONITOR

3. PARKING ASSIST GUIDE LINE DISPLAY MODE

SCREEN DESCRIPTION

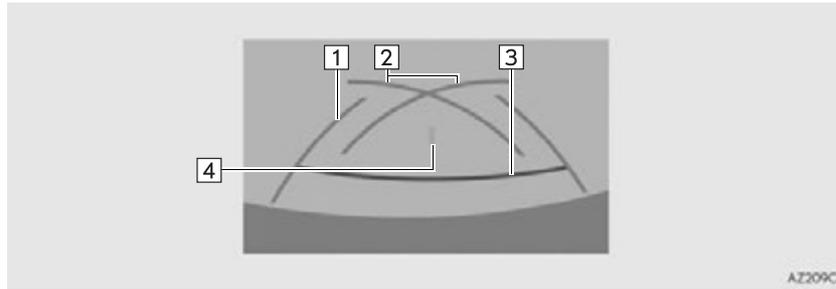

No.	Display	Function
1	Vehicle width guide line	Displays a guide path when the vehicle is being backed straight up. <ul style="list-style-type: none"> The displayed width is wider than the actual vehicle width.
2	Parking assist guide lines	Shows the path of the smallest turn possible behind the vehicle. <ul style="list-style-type: none"> Shows the approximate position of the steering wheel when parking.
3	Distance guide line	Shows distance behind the vehicle. <ul style="list-style-type: none"> Display points approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.
4	Vehicle center guide line	The line indicates the estimated vehicle center on the ground.

7


PERIPHERAL MONITORING SYSTEM

1. LEXUS PARKING ASSIST MONITOR

PARKING

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.

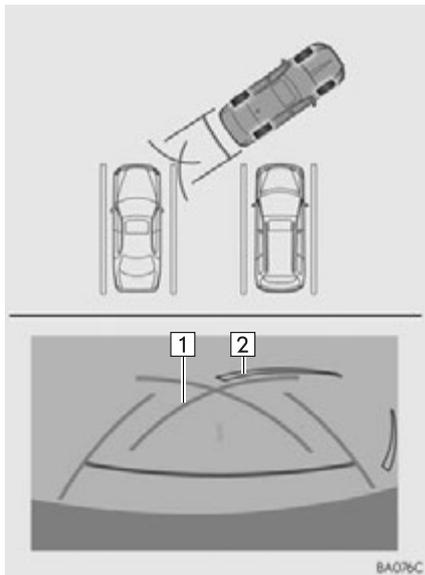

- ▶ 1 Parking assist guide line
- ▶ 2 Parking space dividing line


- 3 Turn the steering wheel all the way to the right, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

1. LEXUS PARKING ASSIST MONITOR

4. LEXUS PARKING ASSIST MONITOR PRECAUTIONS

AREA DISPLAYED ON SCREEN

The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.

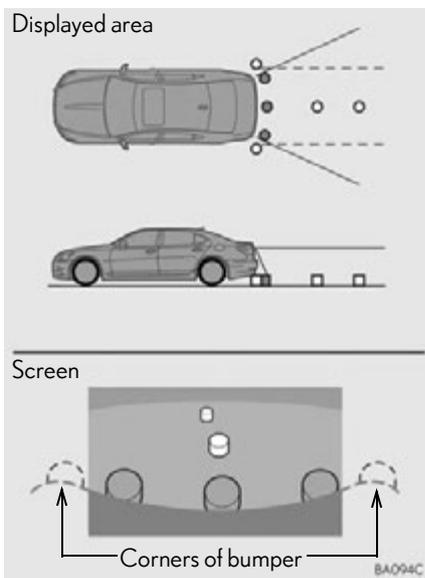


- The image adjustment procedure for the parking assist monitor screen is the same as the procedure for adjusting the screen. (→P. 38)

INFORMATION

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

THE CAMERA

The camera for the parking assist monitor is located as shown in the illustration.

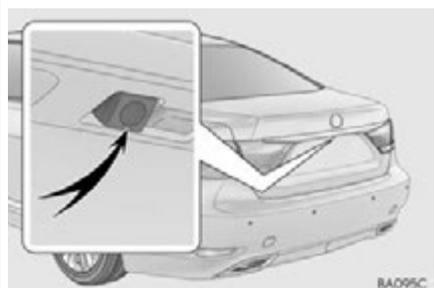

USING THE CAMERA

If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.

NOTICE

- The parking assist monitor may not operate properly in the following cases.
 - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
 - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
 - Do not strongly rub the camera lens. If the camera lens is scratched, it cannot transmit a clear image.
 - Do not allow organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
 - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
 - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Lexus dealer as soon as possible.

DIFFERENCES BETWEEN THE SCREEN AND THE ACTUAL ROAD

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

WHEN THE GROUND BEHIND THE VEHICLE SLOPES UP SHARPLY

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.




7

PERIPHERAL MONITORING SYSTEM

1. LEXUS PARKING ASSIST MONITOR


WHEN THE GROUND BEHIND THE VEHICLE SLOPES DOWN SHARPLY

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

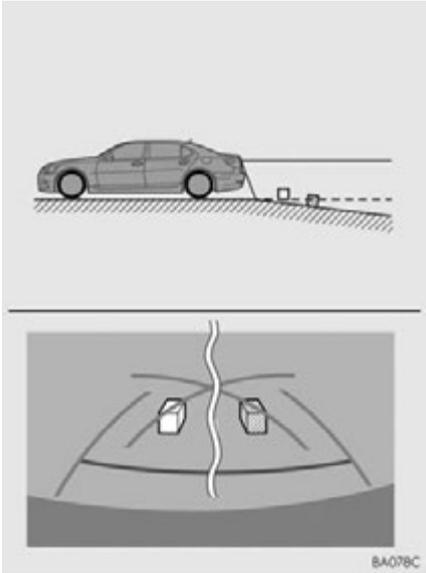

WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

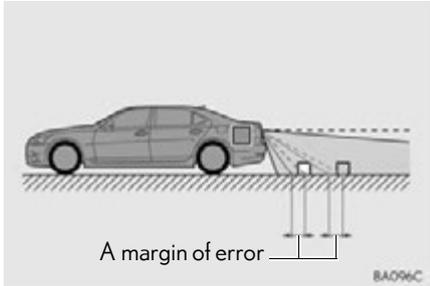


WHEN APPROACHING THREE-DIMENSIONAL OBJECTS

The estimated course lines target flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

ESTIMATED COURSE LINES


Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

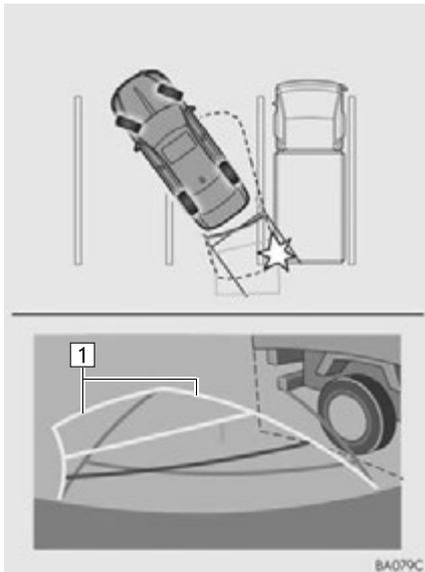

► 1 Estimated course lines

DISTANCE GUIDE LINES

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is farthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

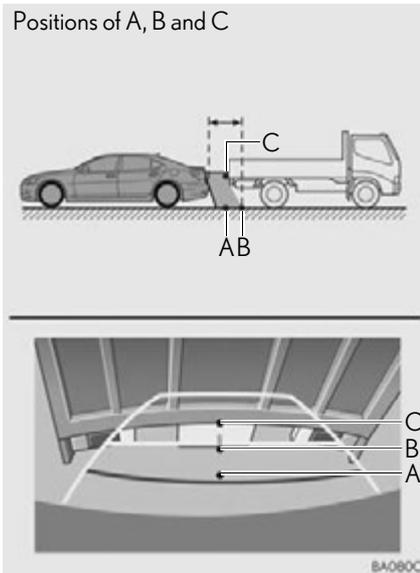

7 PERIPHERAL MONITORING SYSTEM

1. LEXUS PARKING ASSIST MONITOR

5. THINGS YOU SHOULD KNOW

IF YOU NOTICE ANY SYMPTOMS

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Lexus dealer.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> • The vehicle is in a dark area • The temperature around the lens is either high or low • The outside temperature is low • There are water droplets on the camera • It is raining or humid • Foreign matter (mud etc.) is adhering to the camera • Sunlight or headlights are shining directly into the camera • The vehicle is under fluorescent lights, sodium lights, mercury lights etc. 	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the parking assist monitor is the same as the procedure for adjusting the screen. (→P. 38)</p>
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	<p>Rinse the camera lens with water and wipe it clean with a soft cloth.</p> <p>Wash with a mild soap if the dirt is stubborn.</p>
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Lexus dealer.
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Lexus dealer.
	<ul style="list-style-type: none"> • The vehicle is tilted. (There is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.) • The vehicle is used on an incline. 	<p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Back up while visually checking the vehicle's surroundings.</p>
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Lexus dealer.

1. LEXUS PARKING ASSIST MONITOR

Symptom	Likely cause	Solution
Guide lines are not displayed	The trunk is open.	Close the trunk. If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.
The estimated course lines are not displayed	<ul style="list-style-type: none"> • The steering wheel has been moved while the 12-volt battery was being reinstalled. • 12-volt battery power is low. • The steering sensor has been reinstalled. • There is a malfunction in the signals being output by the steering sensor. 	Stop the vehicle, and turn the steering wheel as far as it will go to the left and right. If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.

7


PERIPHERAL MONITORING SYSTEM

2. INTUITIVE PARKING ASSIST

1. INTUITIVE PARKING ASSIST

The distance to obstacles measured by the sensors is communicated via the display and a buzzer when parallel parking or maneuvering into a garage. Always check the surrounding area when using this system.


TYPES OF SENSORS

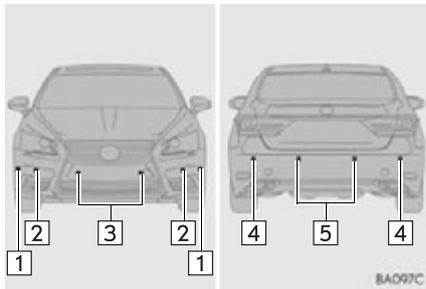

- 1 Front side sensors
- 2 Front corner sensors
- 3 Front center sensors
- 4 Rear corner sensors
- 5 Rear center sensors

INTUITIVE PARKING ASSIST SWITCH

- 1 Turn the intuitive parking assist on/off.

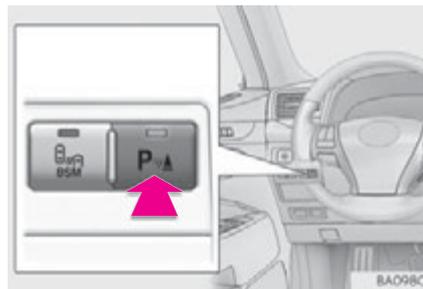


- When on, the indicator light comes on to inform the driver that the system is operational.

DISPLAY

When the sensors detect an obstacle, the graphic is shown on the multi-information display and screen display according to position and distance to the obstacle.

MULTI-INFORMATION DISPLAY

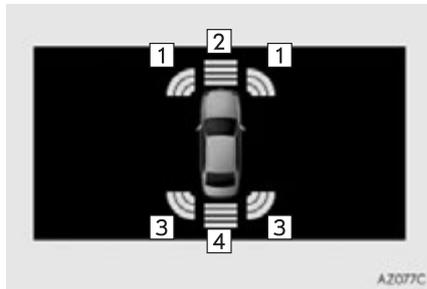

- 1 Front side and front corner sensors operation
- 2 Front center sensors operation
- 3 Rear corner sensors operation
- 4 Rear center sensors operation

SCREEN DISPLAY



-  : Select to mute the buzzer sounds.
- The graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 359)

2. INTUITIVE PARKING ASSIST

THE DISTANCE DISPLAY AND BUZZER

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

■ CORNER SENSORS AND SIDE SENSORS

Level	1	2	3	4
Display example	—			
Buzzer	—	Medium	Fast	Continuous

■ CENTER SENSORS

Level	1	2	3	4
Display example				
Buzzer	Slow	Medium	Fast	Continuous


■ DETECTION LEVEL AND APPROXIMATE DISTANCE TO AN OBSTACLE

Level	1	2	3	4
Front side sensors	—	1.6 to 1.2 ft. (50 to 37.5 cm)	1.2 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Front corner sensors	—	2.0 to 1.2 ft. (60 to 37.5 cm)	1.2 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Front center sensors	3.3 to 1.6 ft. (100 to 50 cm)	1.6 to 1.2 ft. (50 to 37.5 cm)	1.2 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Rear corner sensors	—	2.0 to 1.2 ft. (60 to 37.5 cm)	1.2 to 0.8 ft. (37.5 to 25 cm)	0.8 ft. (25 cm) or less
Rear center sensors	4.9 to 2.0 ft. (150 to 60 cm)	2.0 to 1.5 ft. (60 to 45 cm)	1.5 to 1.1 ft. (45 to 35 cm)	1.1 ft. (35 cm) or less

INFORMATION

- Settings (e.g. buzzer volume) can be changed. (→P. 359)

DETECTION RANGE OF THE SENSORS

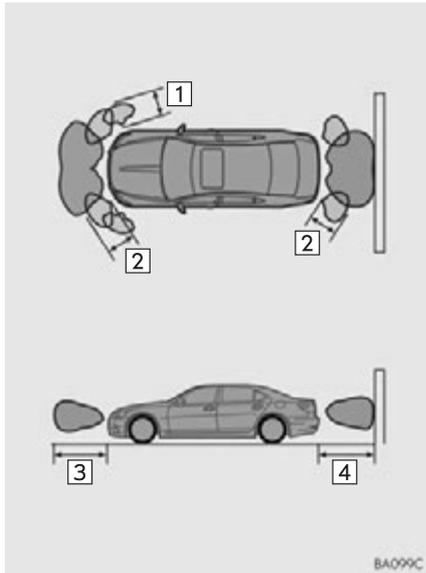

- 1 Approximately 1.6 ft. (50 cm)
- 2 Approximately 2.0 ft. (60 cm)
- 3 Approximately 3.3 ft. (100 cm)
- 4 Approximately 4.9 ft. (150 cm)
- The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.
- The range of the sensors may change depending on the shape of the object etc.

SENSOR DETECTION INFORMATION

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an obstacle. Particular instances where this may occur are listed below.

- There is dirt, snow or ice on a sensor.
- A sensor is frozen.
- A sensor is covered in any way.
- The vehicle is leaning considerably to one side.
- On an extremely bumpy road, on an incline, on gravel, or on grass
- The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- There is another vehicle equipped with parking assist-sensors in the vicinity.
- A sensor is coated with a sheet of spray or heavy rain.
- The vehicle is equipped with a fender pole or radio antenna.
- Towing eyelets are installed.
- A bumper or sensor receives a strong impact.

- The vehicle is approaching a tall or right-angled curb.
- In harsh sunlight or intense cold weather.
- A non-genuine Lexus suspension (lowered suspension etc.) is installed.

● In addition to the examples above, there are instances in which, because of their shapes, signs and other objects may be judged by a sensor to be closer than they are.

- The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:
 - Wires, fences, ropes, etc.
 - Cotton, snow and other materials that absorb sound waves
 - Sharply-angled objects
 - Low obstacles
 - Tall obstacles with upper sections projecting outwards in the direction of your vehicle

CAUTION

- Caution when using the intuitive parking assist-sensor
Observe the following precautions. Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.
 - Do not use the sensor at speeds in excess of 6 mph (10 km/h).
 - Do not attach any accessories within the sensor range.
- Even though sensors which are functioning properly continue to detect obstacles, never use the intuitive parking assist if one more sensor(s) may be malfunctioning.

2. INTUITIVE PARKING ASSIST

NOTICE

- Notes when washing the vehicle
- Do not apply intensive bursts of water or steam to the sensor area.
- Doing so may result in the sensor malfunctioning.
- As the intuitive parking assist-sensor might be malfunctioning in the following cases, have it checked by your Lexus dealer.
 - The graphic which indicates that an obstacle has been detected does not come on and a beep does not sound even when the intuitive parking assist mode is turned on.
 - The graphic which indicates that an obstacle has been detected comes on despite no obstacle around the vehicle.
 - If your vehicle has been involved in an accident.
 - If the graphic which indicates that an obstacle has been detected remains on without a beeping sound.

INTUITIVE PARKING ASSIST- SENSOR FAILURE WARNING

If an error is detected when the intuitive parking assist-sensor is turned on, the vehicle symbol comes on or flashes with beeping sounds.

INFORMATION

- The intuitive parking assist-sensor failure warning display is not given in either of the following operations:
 - Changing to another screen
 - Turning off the main switch for the intuitive parking assist-sensor

IF THE FAILURE WARNING APPEARS

: This symbol indicates that a sensor is covered with foreign matter such as snow or mud. Remove the foreign matter from the sensor.

If the failure warning does not go off even after the foreign matter is removed, the intuitive parking assist-sensor may be malfunctioning. Have your vehicle inspected by your Lexus dealer.

: This symbol indicates that the intuitive parking assist-sensor is malfunctioning. Have your vehicle inspected by your Lexus dealer.

CERTIFICATION

► For vehicles sold in Canada.


- This ISM device complies with Canadian ICES-001.
- Cet appareil ISM est conforme a la norme NMB-001 du Canada.

2. INTUITIVE PARKING ASSIST

2. INTUITIVE PARKING ASSIST SETTING

The volume of the beeps, turning on or off of the display, etc. can be set.

- 1 Press the "MENU" button on the Remote Touch.

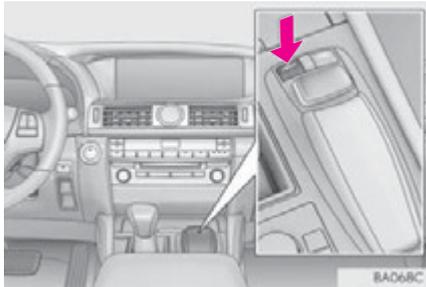

- 2 Select "Setup".



- 3 Select "Vehicle".



- 4 Select "LEXUS Park Assist".



- 5 Select the desired button.



7

PERIPHERAL MONITORING SYSTEM

SETTING AN ALERT VOLUME

The alert volume can be adjusted.

- 1 Display the "LEXUS Park Assist Settings" screen. (→P. 359)
- 2 Select the desired screen button.



- The volume has 5 levels, increasing with higher value.

SETTING A PARKING SONAR DISPLAY

Parking sonar display can be set to on or off.

- 1 Display the "LEXUS Park Assist Settings" screen. (→P. 359)
- 2 Select "Display Off" to turn off the parking sonar display.



INFORMATION

- Although "Display Off" is selected, if the obstacle is detected during the intuitive parking assist monitoring, the warning appears on the right top of the screen.

SETTING A DISPLAY AND TONE INDICATION

Front and back sensors display and tone indication can be set.

- 1 Display the "LEXUS Park Assist Settings" screen. (→P. 359)
- 2 Select "Front" or "Rear".



- Selecting "Front" or "Rear" to switch the distance for the front or back sensors display and tone indication, from long distance to short distance, or from short distance to long distance.

8

PHONE

1	PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)	
1.	QUICK REFERENCE	362
2.	SOME BASICS	363
	REGISTERING/CONNECTING A Bluetooth® PHONE.....	364
	USING THE PHONE SWITCH/MICROPHONE	364
	VOICE COMMAND SYSTEM.....	365
	ABOUT THE CONTACTS IN THE CONTACT LIST	366
	WHEN SELLING OR DISPOSING OF THE VEHICLE	366
3.	CALLING ON THE Bluetooth® PHONE.....	367
	BY FAVORITES LIST	368
	BY CALL HISTORY	368
	BY CONTACTS LIST	369
	BY DIAL PAD	371
	BY OFF HOOK SWITCH	372
4.	RECEIVING ON THE Bluetooth® PHONE.....	373
	INCOMING CALLS.....	373
5.	TALKING ON THE Bluetooth® PHONE.....	374
	INCOMING CALL WAITING.....	376

6.	Bluetooth® PHONE MESSAGE FUNCTION.....	377
	RECEIVING A MESSAGE.....	378
	CHECKING MESSAGES.....	379
	REPLYING TO A MESSAGE (QUICK REPLY).....	380
	CALLING THE MESSAGE SENDER	381

2 SETUP

1.	PHONE/MESSAGE SETTINGS	383
	PHONE/MESSAGE SETTINGS SCREEN	383
	"Sound Settings" SCREEN	384
	"Contact/Call History Settings" SCREEN	385
	"Messaging Settings" SCREEN	395
	"Phone Display Settings" SCREEN	396

3 WHAT TO DO IF...

1.	TROUBLESHOOTING	397
----	-----------------------	-----

1

2

3

4

5

6

7

8

9


10

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

1. QUICK REFERENCE

The phone top screen can be used to make a phone call. To display the phone top screen, press the “MENU” button on the Remote Touch and select “Phone”, or the  switch on the steering wheel.

Several functions are available to operate on each screen that is displayed by selecting the 4 tabs.

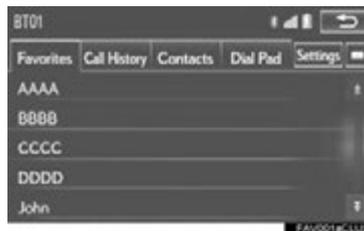

	Function	Page
Phone operation	Registering/connecting Bluetooth® device	40
	Calling on the Bluetooth® phone	367
	Receiving on the Bluetooth® phone	373
	Talking on the Bluetooth® phone	374
Message function	Using the Bluetooth® phone message function	377
Setting up a phone	Phone settings	383
	Bluetooth® settings	48

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

2. SOME BASICS

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth®. Bluetooth® is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.



CAUTION

- While driving, do not use a cellular phone or connect the Bluetooth® phone.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.



NOTICE

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

INFORMATION

- If your cellular phone does not support Bluetooth®, this system cannot function.
- In the following conditions, the system may not function:
 - The cellular phone is turned off.
 - The current position is outside the communication area.
 - The cellular phone is not connected.
 - The cellular phone has a low battery.
- When using Bluetooth® audio and hands-free system at the same time, the following problems may occur:
 - The Bluetooth® connection may be cut.
 - Noise may be heard on the Bluetooth® audio playback.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

REGISTERING/ CONNECTING A Bluetooth® PHONE

To use the hands-free system for cellular phones, it is necessary to register a cellular phone with the system. (→P. 40)

Bluetooth® PHONE CONDITION DISPLAY

The condition of the Bluetooth® phone appears on the upper right side of the screen. (→P. 16)

USING THE PHONE SWITCH/ MICROPHONE

► Steering switch

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.



1 Volume control switch


- Press the "+" side to increase the volume.
- Press the "-" side to decrease the volume.

2 Off hook switch

3 On hook switch

► Microphone

The microphone is used when talking on the phone.

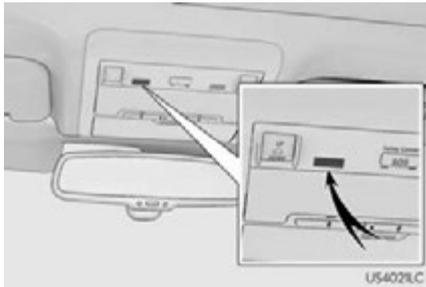

VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.



- The voice command system and its list of commands can be operated. (→P. 318)

INFORMATION

- The other party's voice will be heard from the front speakers. The audio/visual system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
 - Driving on an unpaved road. (Making excessive traffic noise.)
 - Driving at high speeds.
 - The roof or windows are open.
 - The air conditioning vents are pointed towards the microphone.
 - The sound of the air conditioning fan is loud.
 - There is a negative effect on sound quality due to the phone and/or network being used.

ABOUT THE CONTACTS IN THE CONTACT LIST

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
 - Contact data
 - Call history data
 - Favorites data
 - Image data
 - All phone settings
 - Message settings

INFORMATION

- When a phone's registration is deleted, the above-mentioned data is also deleted.

WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (→P. 63)

- The following data in the system can be initialized:
 - Contact data
 - Call history data
 - Favorites data
 - Image data
 - All phone settings
 - Message settings

INFORMATION


- Once initialized, the data and settings will be erased. Pay much attention when initializing the data.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

3. CALLING ON THE Bluetooth® PHONE

After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are several methods by which a call can be made, as described below.

- 1 Press the “MENU” button on the Remote Touch.

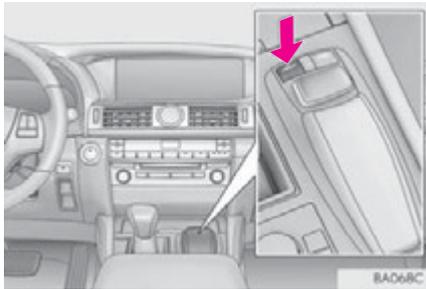

- 2 Select “Phone”.



- 3 Select the desired tab to call from.



- The phone top screen can be displayed by pressing the  switch on the steering wheel.

How to make a call list	Page
By favorites list	368
By call history	368
By contacts list* ¹	369
By dial pad* ¹	371
By e-mail/SMS/MMS	381
By POI call* ²	88
By off hook switch	372
By LEXUS App Suite* ²	422
By voice command system	322

8
PHONE

*¹: The operation cannot be performed while driving.


*²: With navigation function

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


BY FAVORITES LIST

Calls can be made using registered contacts which can be selected from a contact list. (→P. 391)

- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Favorites” tab and select the desired contact.

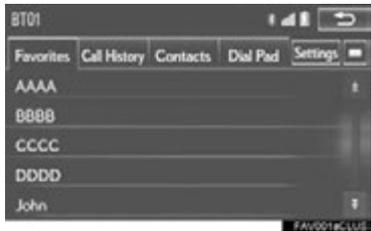

- 3 Select the desired number.

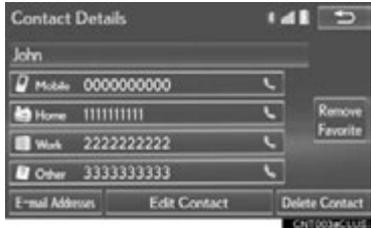


- 4 Check that the “Call” screen is displayed on the “Side Display”.

BY CALL HISTORY

Up to 30 of the latest call history items (missed, incoming and outgoing) can be selected from the “Call History” tab.

- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Call History” tab and select or the desired contact.

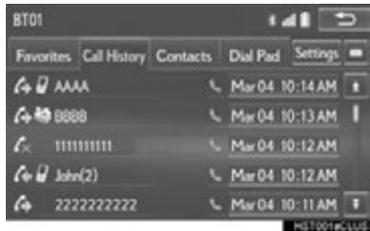

● The icons of call type are displayed.

- : Missed call
- : Incoming call
- : Outgoing call

- ▶ When  is selected
- 3 Check that the “Call” screen is displayed on the “Side Display”.
- ▶ When the desired contact is selected
- 3 Select the desired number.



- 4 Check that the “Call” screen is displayed on the “Side Display”.

INFORMATION


- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the contact list is received, the name is displayed.
- Number-withheld calls are also memorized in the system.
- International phone calls may not be made depending on the type of cellular phone you have.
- The list should group together consecutive entries with the same phone number and same call type. For example, two calls from John’s mobile would be displayed as follows: John (2)
- By pressing the  switch on the steering wheel, a call to the latest history item can be made.

BY CONTACTS LIST


Calls can be made by using contact data which is transferred from a registered cellular phone. (→P. 370)

Up to 2500 contacts (maximum of 4 phone numbers and e-mail addresses per contact) can be registered in the contact list.

- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Contacts” tab and select the desired contact.

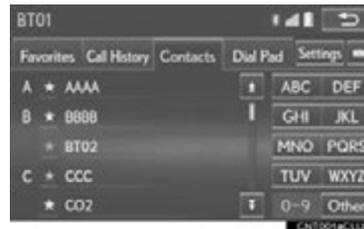

- 3 Select the desired number.

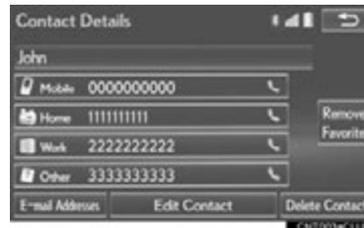

- 4 Check that the “Call” screen is displayed on the “Side Display”.


1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

WHEN THE CONTACT IS EMPTY

FOR PBAP COMPATIBLE Bluetooth® PHONES

- ▶ When “Automatic Contact/History Transfer” is set to on (→P. 385)
- Contacts are transferred automatically.
- ▶ When “Automatic Contact/History Transfer” is set to off (→P. 385)

1 Select the desired item.

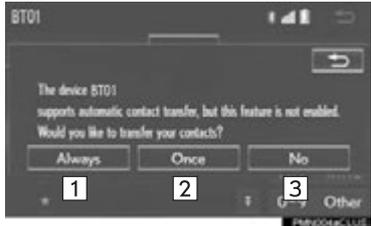


No.	Function
1	Select to always transfer all the contacts from a connected cellular phone automatically.
2	Select to transfer all the contacts from a connected cellular phone only once.
3	Select to cancel transferring.

2 Check that a confirmation screen is displayed when the operation is complete.

FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES

1 Select the desired item.

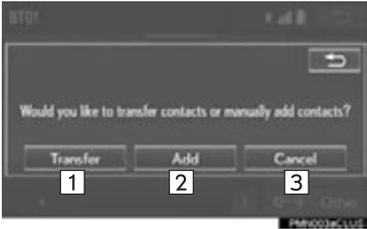

No.	Function
1	Select to transfer the contacts from the connected cellular phone.
2	Select to add a new contact manually.
3	Select to cancel transferring.

- ▶ When "Transfer" is selected
- 2 Follow the steps in "FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES" from "STEP 3". (→P. 387)
- ▶ When "Add" is selected
- 2 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 2". (→P. 388)

INFORMATION

- Manual transfer operation cannot be performed while driving.
- If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.
- Depending on the type of Bluetooth® phone:
 - It may be necessary to perform additional steps on the phone when transferring contact data.
 - The registered image in the contact list may not transfer depending on the type of Bluetooth® phone connected.

BY DIAL PAD

- 1 Display the phone top screen. (→P. 367)
- 2 Select the "Dial Pad" tab and enter the phone number.



- 3 Select  or press the  switch on the steering wheel.
- 4 Check that the "Call" screen is displayed on the "Side Display".

INFORMATION

- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

BY OFF HOOK SWITCH

Calls can be made using the latest call history item.

- 1 Press the  switch on the steering wheel to display the phone top screen.
- 2 Press the  switch on the steering wheel to display the "Call History" screen.
- 3 Press the  switch on the steering wheel to call the latest history item.
- 4 Check that the "Call" screen is displayed on the "Side Display".

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


4. RECEIVING ON THE Bluetooth® PHONE

INCOMING CALLS

When a call is received, this screen is displayed with a sound.

This screen can also be displayed on the "Side Display". (→P. 439)

- 1 Select  or press the  switch on the steering wheel to talk on the phone.

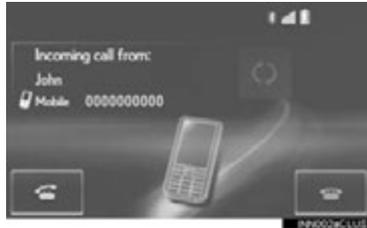

To refuse to receive the call: Select  or press the  switch on the steering wheel.

To adjust the volume of a received call: Turn the "PWR·VOL" knob, or use the volume control switch on the steering wheel.

INFORMATION


- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The ringtone that has been set in the "Sound Settings" screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the system and Bluetooth® phone may sound simultaneously when there is an incoming call. (→P. 384)
- This screen can be displayed on the "Main Display" or "Side Display". (→P. 396)

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

5. TALKING ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.

This screen can also be displayed on the "Side Display". (→P. 439)

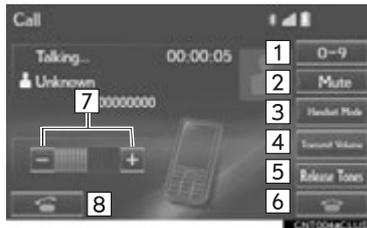

No.	Function	Page
1	Select to display the dial pad to send tones.	375
2	Select to mute your voice to the other party.	—
3	Select to change handset modes between hands-free and cellular phone.	—
4	Select to adjust your voice volume that the other party hears from their speaker.	376
5	Select to send tones. This button only appears when a number that contains a (w) is dialed in hands-free mode.	375
6	Select to hang up the phone.	—
7	Select "+" or "-" to adjust the volume of the other party's voice.	—
8	Select to start talking with the other party.	376

INFORMATION

- Changing from hands-free call to cellular phone call is not possible while driving.
- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.
- This screen can be displayed on the "Main Display" or "Side Display". (→P. 396)

SENDING TONES

BY DIAL PAD

This operation cannot be performed while driving.

- 1 Select "0-9".



- 2 Enter the desired number.

BY SELECTING "Release Tones"

"Release Tones" appear when a continuous tone signal(s) containing a (w) is registered in the contact list.

This operation can be performed while driving.

- 1 Select "Release Tones".

INFORMATION

- A continuous tone signal is a character string that consists of numbers and the characters p or w. (e.g. 056133w0123p#1*)
- When the "p" pause tone is used, the tone data up until the next pause tone will be automatically sent after 2 seconds have elapsed. When the "w" pause tone is used, the tone data up until the next pause tone will be automatically sent after a user operation is performed.
- Release tones can be used when automated operation of a phone based service such as an answering machine or bank phone service is desired. A phone number with continuous tone signals can be registered in the contact list.
- Tone data after a "w" pause tone can be operated on voice command during a call.

TRANSMIT VOLUME SETTING

- 1 Select "Transmit Volume".
- 2 Select the desired level for the transmit volume.



- 3 Select "OK".

INFORMATION

- The sound quality of the voice heard from the other party's speaker may be negatively impacted.
- To reset the transmit volume, select "Default".
- "Transmit Volume" is dimmed when mute is on.

INCOMING CALL WAITING

When a call is interrupted by a third party while talking, this screen is displayed. This screen can also be displayed on the "Side Display". (→P. 439)

- 1 Select  or press the  switch on the steering wheel to start talking with the other party.



To refuse to receive the call: Select  or press the  switch on the steering wheel.

- Each time  is selected or the  switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

INFORMATION

- This function may not be available depending on the type of cellular phone.
- This screen can be displayed on the "Main Display" or "Side Display". (→P. 396)

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


6. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying using the system.

Depending on the type of Bluetooth® phone connected, received messages may not be transferred to the message inbox.

If the phone does not support the message function, this function cannot be used.


- 1 Press the "MENU" button on the Remote Touch.

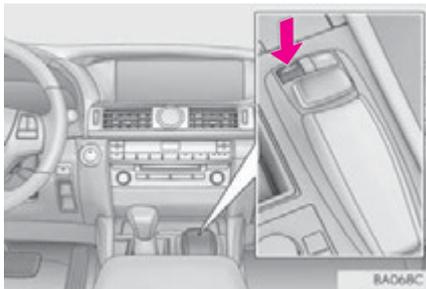

- 2 Select "Phone".




- 3 Select [Phone icon].

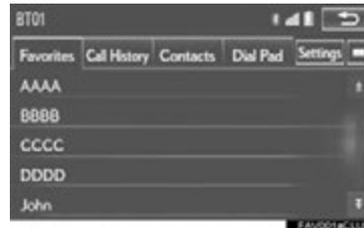

- The phone top screen can be displayed by pressing the [Phone icon] switch on the steering wheel.

- 4 Check that the message inbox screen is displayed.

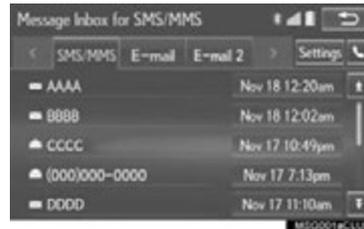

- [Phone icon]: Select to change to phone mode.

Function	Page
Receiving a message	378
Checking messages	379
Replying to a message (quick reply)	380
Calling the message sender	381
Message settings	395


8

PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

RECEIVING A MESSAGE

When an e-mail/SMS/MMS is received, the incoming message screen pops up with sound and is ready to be operated on the screen.

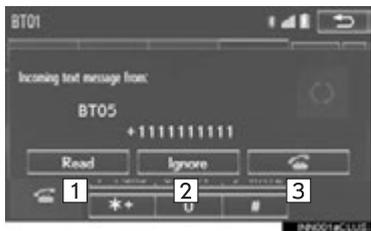


No.	Function
1	Select to check the message.
2	Select to not open the message.
3	Select to call the message sender.

INFORMATION

- Depending on the cellular phone used for receiving messages, or its registration status with the system, some information may not be displayed.
- The pop up screen is separately available for incoming e-mail and SMS/MMS messages under the following conditions:
 E-mail:
 - “E-mail Notification Popup” is set to on. (→P. 395)
 SMS/MMS:
 - “SMS/MMS Notification Popup” is set to on. (→P. 395)

CHECKING MESSAGES

- 1 Display the message inbox screen. (→P. 377)
- 2 Select the desired message from the list.
- 3 Check that the message is displayed.

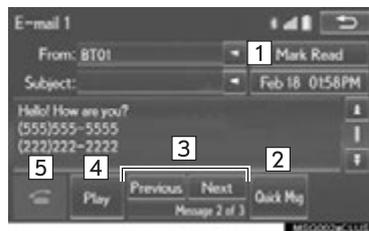

No.	Function
1	Select “Mark Unread” or “Mark Read” to mark mail unread or read on the message inbox screen. This function is available when “Update Message Read Status on Phone” is set to on. (→P. 395)
2	Select to reply the message. (→P. 380)
3	Select to display the previous or next message.
4	Select to have messages read out. To cancel this function, select “Stop” . When “Automatic Message Read-out” is set to on, messages will be automatically read out. (→P. 395)
5	Select to make a call to the sender.

INFORMATION


- Reading a text message is not available while driving.
- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.
- Messages are displayed in the appropriate connected Bluetooth® phone's registered mail address folder. Select the tab of the desired folder to be displayed.
- Only received messages on the connected Bluetooth® phone can be displayed.
- The text of the message is not displayed while driving.
- Turn the **“PWR-VOL”** knob, or use the volume control switch on the steering wheel to adjust the message read out volume.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

REPLYING TO A MESSAGE (QUICK REPLY)

15 messages have already been stored.

- 1 Display the message inbox screen. (→P. 377)
- 2 Select the desired message from the list.
- 3 Select "Quick Msg".

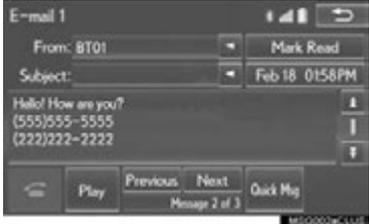

- 4 Select the desired message.



- 5 Select "Send".




- While the message is being sent, a sending message screen is displayed.
 - To cancel sending the message, select "Cancel".
- 6 Check that a confirmation screen is displayed when the operation is complete.
 - If an error message is displayed, follow the guidance on the screen to try again.


EDITING QUICK REPLY MESSAGES

This operation cannot be performed while driving.

- 1 Select "Quick Msg".

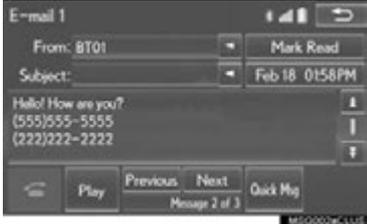

- 2 Select  corresponding to the desired message to edit.

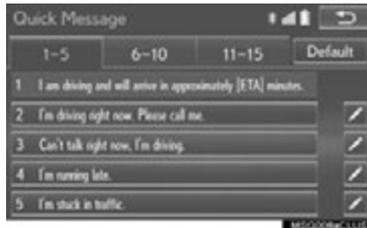

- 3 Select "OK" when editing is completed.

INFORMATION

- To reset the edited quick reply messages, select "Default".
- "Quick Message 1" ("I am driving and will arrive in approximately [ETA] minutes.")*: This message cannot be edited and will automatically fill in [ETA] with the navigation calculated estimated time of arrival on the confirm message screen. If there are waypoints set, [ETA] to the next waypoint will be shown. If there is no route currently set in the navigation system, "Quick Message 1" cannot be selected.

*: With navigation function

CALLING THE MESSAGE SENDER

Calls can be made to an e-mail/SMS/MMS message sender's phone number. This operation can be performed while driving.

CALLING FROM E-MAIL/SMS/MMS MESSAGE DISPLAY

- 1 Display the message inbox screen. (→P. 377)
- 2 Select the desired message.

- 3 Select .




- If there are 2 or more phone numbers, select the desired number.
- 4 Check that the "Call" screen is displayed on the "Side Display".


■ **CALLING FROM A NUMBER WITHIN A MESSAGE**

Calls can be made to a number identified in a message's text area.
This operation cannot be performed while driving.

- 1 Display the message inbox screen. (→P. 377)
- 2 Select the desired message.
- 3 Select the text area.

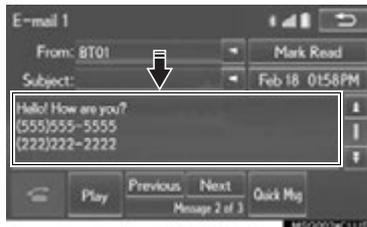

- 4 Select the desired number.

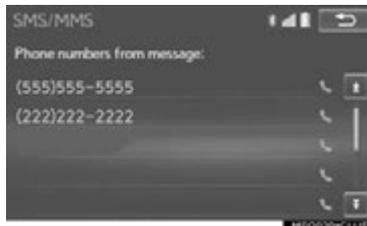

- Identified phone numbers contained in the message are displayed.

- 5 Check that the "Call" screen is displayed on the "Side Display".

(INFORMATION)

- A series of numbers may be recognized as a phone number. Additionally, some phone numbers may not be recognized, such as those for other countries.


■ **CALLING FROM THE INCOMING MESSAGE SCREEN**

→P. 378

2. SETUP

1. PHONE/MESSAGE SETTINGS

- 1 Press the "MENU" button on the Remote Touch.

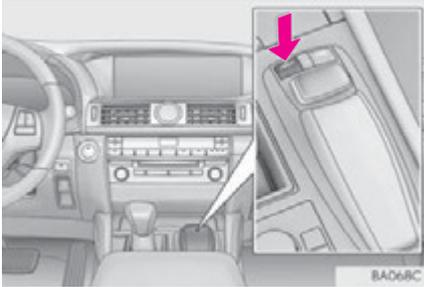

- 2 Select "Setup".



- 3 Select "Phone".



- 4 Select the item to be set.



PHONE/MESSAGE SETTINGS SCREEN




No.	Information	Page
1	Registering/connecting a phone	48
2	Sound settings	384
3	Contact/call history settings	385
4	Messaging settings	395
5	Phone display settings	396

8
PHONE

DISPLAYING THE PHONE/MESSAGE SETTINGS SCREEN IN A DIFFERENT WAY


- 1 Display the phone top screen. (→P. 367)
- 2 Select "Settings".

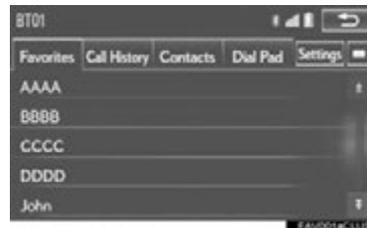

“Sound Settings” SCREEN

The call and ringtone volume can be adjusted. A ringtone can be selected.

- 1 Display the “Phone/Message Settings” screen. (→P. 383)
- 2 Select “**Sound Settings**”.
- 3 Select the desired item to be set.

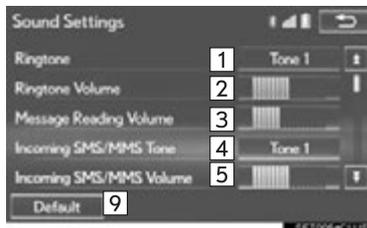

No.	Function
1	Select to set the desired ringtone.
2	Select “-” or “+” to adjust the ringtone volume.
3	Select “-” or “+” to adjust the message readout volume.
4	Select to set the desired incoming SMS/MMS tone.
5	Select “-” or “+” to adjust the incoming SMS/MMS tone volume.
6	Select to set the desired incoming e-mail tone.
7	Select “-” or “+” to adjust the incoming e-mail tone volume.
8	Select “-” or “+” to adjust the default volume of the other party’s voice.
9	Select to reset all setup items.

INFORMATION



- Depending on the type of phone, certain functions may not be available.

“Contact/Call History Settings” SCREEN

The contact can be transferred from a Bluetooth® phone to the system. The contact also can be added, edited and deleted.

The call history can be deleted and contact and favorites can be changed.

- 1 Display the “Phone/Message Settings” screen. (→P. 383)
- 2 Select “Contact/Call History Settings”.
- 3 Select the desired item to be set.

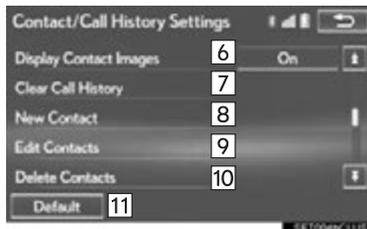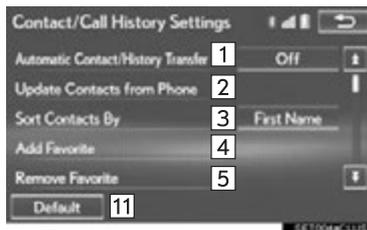

No.	Function	Page
1	For PBAP compatible Bluetooth® phones, select to set automatic contact/history transfer on/off. When set to on, the phone's contact data and history are automatically transferred.	—
2	Select to update contacts from the connected phone.	386
3	Select to sort contacts by the first name or last name field.	—
4	Select to add contacts to the favorites list.	391
5	Select to delete contacts from the favorites list.	393
6	Select to set the transferred contact image display on/off. The contact image cannot be displayed on the “Side Display” when a call is received.	—
7*	Select to clear contacts from the call history.	—
8*	Select to add new contacts to the contact list.	388
9*	Select to edit contacts in the contact list.	389
10*	Select to delete contacts from the contact list.	390
11	Select to reset all setup items.	—

8
PHONE

*: For PBAP compatible Bluetooth® phones, this function is available when “Automatic Contact/History Transfer” is set to off. (→P. 385)

INFORMATION

- Depending on the type of phone, certain functions may not be available.
- Contact data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

UPDATE CONTACTS FROM PHONE

Operation methods differ between PBAP compatible and PBAP incompatible but OPP compatible Bluetooth[®] phones.

If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.

■ FOR PBAP COMPATIBLE Bluetooth[®] PHONES

- 1 Select "Update Contacts from Phone".
 - Contacts are transferred automatically.
- 2 Check that a confirmation screen is displayed when the operation is complete.
 - This operation may be unnecessary depending on the type of cellular phone.
 - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth[®] phone.
 - If another Bluetooth[®] device is connected when transferring contact data, depending on the phone, the connected Bluetooth[®] device may need to be disconnected.
 - Depending on the type of Bluetooth[®] phone being connected, it may be necessary to perform additional steps on the phone.

■ FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES

This operation cannot be performed while driving.

- 1 Select "Update Contacts from Phone".
- 2 Select "Replace Contacts" or "Add Contacts".



"Replace Contacts": Select to transfer the contact from the connected cellular phone and replace the current one.

"Add Contacts": Select to transfer the desired contact data from the connected cellular phone to add to the current one.


- 3 Transfer the contact data to the system using a Bluetooth® phone.
 - This operation may be unnecessary depending on the type of cellular phone.
 - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth® phone.
 - To cancel this function, select "Cancel".

- 4 Select "Done" when it appears on the screen.
- 5 Check that a confirmation screen is displayed when the operation is complete.

■ UPDATING THE CONTACTS IN A DIFFERENT WAY (FROM THE "Call History" SCREEN)

For PBAP compatible Bluetooth® phones, this function is available when "Automatic Contact/History Transfer" is set to off. (→P. 385)


- 1 Display the phone top screen. (→P. 367)
- 2 Select the "Call History" tab and select a contact not yet registered in the contact list.
- 3 Select "Update Contact".

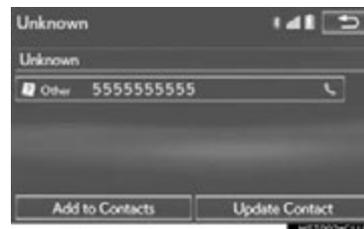

8
PHONE

2. SETUP

- 4 Select the desired contact.

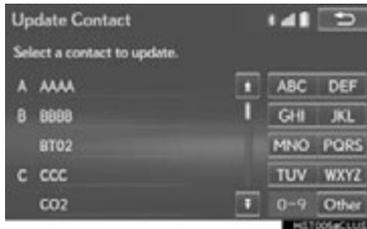


- 5 Select a phone type for the phone number.



REGISTERING A NEW CONTACT TO THE CONTACT LIST

New contact data can be registered. Up to 4 numbers per person can be registered. For PBAP compatible Bluetooth® phones, this function is available when “Automatic Contact/History Transfer” is set to off. (→P. 385)


- 1 Select “**New Contact**”.
- 2 Enter the name and select “**OK**”.
- 3 Enter the phone number and select “**OK**”.
- 4 Select the phone type for the phone number.

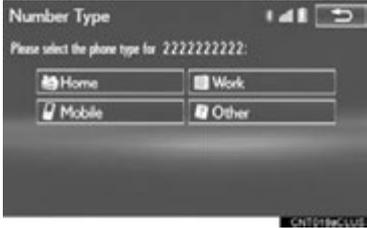

- 5 To add another number to this contact, select “**Yes**”.

■ REGISTERING A NEW CONTACT IN A DIFFERENT WAY (FROM THE "Call History" SCREEN)

- 1 Display the phone top screen. (→P. 367)
- 2 Select the "Call History" tab and select a contact not yet registered in the contact list.
- 3 Select "Add to Contacts".

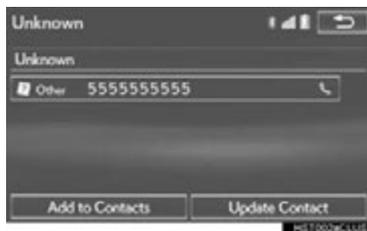

- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACT LIST" from "STEP 2". (→P.388)


EDITING THE CONTACT DATA

For PBAP compatible Bluetooth® phones, this function is available when "Automatic Contact/History Transfer" is set to off. (→P. 385)

- 1 Select "Edit Contacts".
- 2 Select the desired contact.



- 3 Select  corresponding to the desired name or number.

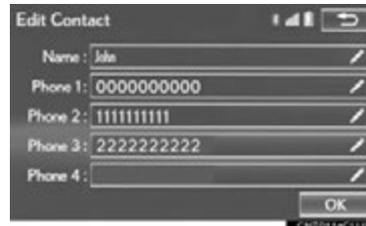

- ▶ For editing the name


- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACT LIST" from "STEP 2". (→P. 388)

- ▶ For editing the number

- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACT LIST" from "STEP 3". (→P. 388)

■ EDITING THE CONTACT IN A DIFFERENT WAY (FROM THE “Contact Details” SCREEN)

- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Contacts”, “Call History” tab or the “Favorites” tab and select the desired contact.
- 3 Select “Edit Contact”.

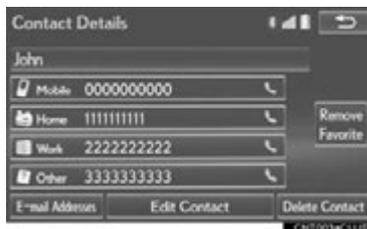

“E-mail Addresses”: Select to display all registered e-mail addresses for the contact.

- 4 Follow the steps in “EDITING THE CONTACT DATA” from “STEP 3”. (→P. 389)

DELETING THE CONTACT DATA

For PBAP compatible Bluetooth® phones, this function is available when “Automatic Contact/History Transfer” is set to off. (→P. 385)

- 1 Select “Delete Contacts”.
- 2 Select the desired contact and select “Delete”.




- 3 Select “Yes” when the confirmation screen appears.

INFORMATION

- Multiple data can be selected and deleted at the same time.

■ DELETING THE CONTACT IN A DIFFERENT WAY (FROM THE “Contact Details” SCREEN)

- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Contacts”, “Call History” tab or the “Favorites” tab and select the desired contact.
- 3 Select “Delete Contact”.

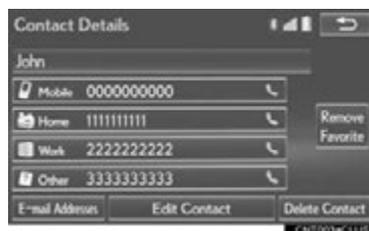

- 4 Select “Yes” when the confirmation screen appears.

INFORMATION

- When a Bluetooth[®] phone is deleted, the contact data will be deleted at the same time.

FAVORITES LIST SETTING

Up to 15 contacts (maximum of 4 numbers per contact) can be registered in the favorites list.

■ REGISTERING THE CONTACTS IN THE FAVORITES LIST

- 1 Select “Add Favorite”.
- 2 Select the desired contact to add to the favorites list.




- Dimmed contacts are already stored as a favorite.
- 3 Check that a confirmation screen is displayed when the operation is complete.

2. SETUP

► When 15 contacts have already been registered to the favorites list

1 When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced. Select **“Yes”** when the confirmation screen appears to replace a contact.

2 Select the contact to be replaced.

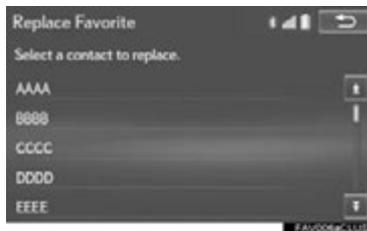


3 Check that a confirmation screen is displayed when the operation is complete.

► Registering contacts in the favorites list in a different way (from the “Contacts” screen)

1 Display the phone top screen. (→P. 367)

2 Select the **“Contacts”** tab.


3 Select ☆(grey) at the beginning of the desired contact list name to be registered in the favorites list.

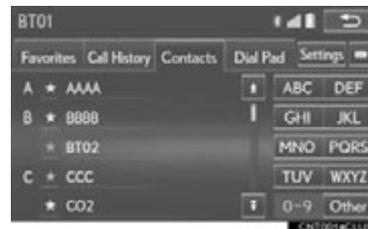

● When selected, ☆(grey) is changed to ★(yellow), and the contact is registered in the favorites list.

► Registering contacts in the favorites list in a different way (from the “Contact Details” screen)


- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Contacts” tab or the “Call History” tab and select the desired contact.
- 3 Select “Add Favorite”.

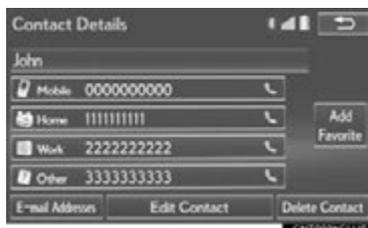

- 4 Check that a confirmation screen is displayed when the operation is complete.

■ DELETING THE CONTACTS IN THE FAVORITES LIST

- 1 Select “Remove Favorite”.
- 2 Select the desired contacts and select “Remove”.

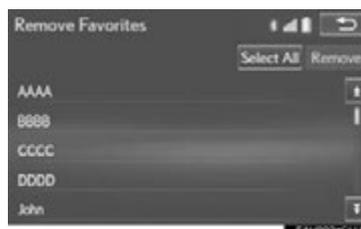


- 3 Select “Yes” when the confirmation screen appears.
- 4 Check that a confirmation screen is displayed when the operation is complete.

2. SETUP

▶ Deleting contacts in the favorites list in a different way (from the “Contacts” screen)


- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Contacts” tab.
- 3 Select ★ (yellow) at the beginning of the contact list name to be deleted from the favorites list.

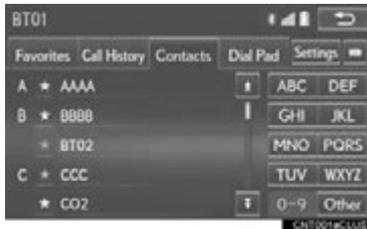

- When selected, ★ (yellow) is changed to ☆ (grey), and the data is deleted from the list.

▶ Deleting contacts in the favorites list in a different way (from the “Contact Details” screen)


- 1 Display the phone top screen. (→P. 367)
- 2 Select the “Contacts”, “Call History” tab or the “Favorites” tab and select the desired contact to delete.
- 3 Select “Remove Favorite”.

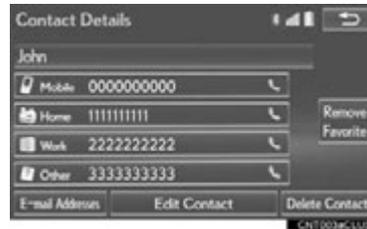

- 4 Select “Yes” when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

“Messaging Settings” SCREEN

- 1 Display the “Phone/Message Settings” screen. (→P. 383)
- 2 Select “Messaging Settings”.
- 3 Select the desired item to be set.

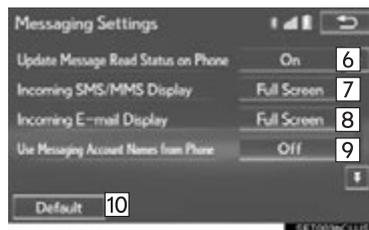

No.	Function
1	Select to set automatic message transfer on/off.
2	Select to set automatic message readout on/off.
3	Select to set the SMS/MMS notification popup on/off.
4	Select to set the e-mail notification popup on/off.
5	Select to set adding the vehicle signature to outgoing messages on/off.
6	Select to set updating message read status on phone on/off.
7	Select to change the incoming SMS/MMS display. “Full Screen” : When an SMS/MMS message is received, the incoming SMS/MMS display screen is displayed and can be operated on the screen. “Drop-Down” : When an SMS/MMS message is received, a message is displayed on the upper side of the screen.
8	Select to change the incoming e-mail display. “Full Screen” : When an e-mail is received, the incoming e-mail display screen is the displayed and can be operated on the screen. “Drop-Down” : When an e-mail is received, a message is displayed on the upper side of the screen.
9	Select to set display of messaging account names on the inbox tab on/off. When set to on, messaging account names used on the cellular phone will be displayed.
10	Select to reset all setup items.


8
PHONE

INFORMATION

- Depending on the phone, these functions may not be available.

DISPLAYING THE “Messaging Settings” SCREEN IN A DIFFERENT WAY


- 1 Display the phone top screen. (→P. 367)
- 2 Select “Settings”.

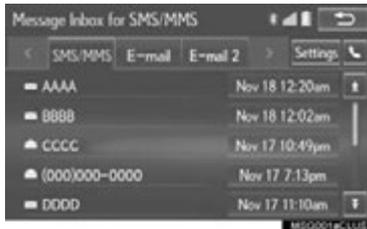

- 3 Select “Messaging Settings”.

“Phone Display Settings” SCREEN

- 1 Display the “Phone/Message Settings” screen. (→P. 383)
- 2 Select “Phone Display Settings”.
- 3 Select the desired item to be set.

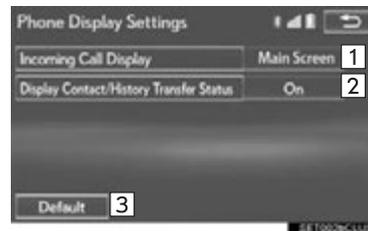

No.	Function
1	Select to change where the screen is displayed between the “Main Display” and “Side Display”. “Main Screen”: Select to display and operate the screen on the “Main Display”. “Side Screen”: Select to display and operate the screen on the “Side Display”. For details of the screen: →P. 442
2	Select to set display of the contact/history transfer completion message on/off.
3	Select to reset all setup items.

INFORMATION

- Depending on the phone, these functions may not be available.

3. WHAT TO DO IF...

1. TROUBLESHOOTING

If there is a problem with the hands-free system or a Bluetooth® device, first check the table below.

► When using the hands-free system with a Bluetooth® device

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The hands-free system or Bluetooth® device does not work.	The connected device may not be a compatible Bluetooth® cellular phone.	For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website: http://www.lexus.com/MobileLink	*	—
	The Bluetooth® version of the connected cellular phone may be older than the specified version.	Use a cellular phone with Bluetooth® version 2.0 or higher (recommended: Ver. 3.0 +EDR or higher).	*	44

8
PHONE

3. WHAT TO DO IF...

► When registering/connecting a cellular phone

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A cellular phone cannot be registered.	An incorrect passcode was entered on the cellular phone.	Enter the correct passcode on the cellular phone.	*	—
	The registration operation has not been completed on the cellular phone side.	Complete the registration operation on the cellular phone (approve registration on the phone).	*	—
	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	51
A Bluetooth® connection cannot be made.	Another Bluetooth® device is already connected.	Manually connect the cellular phone you wish to use to this system.	—	51
	Bluetooth® function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	—
	Automatic Bluetooth® connection on this system is set to off.	Set automatic Bluetooth® connection on this system to on when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.	—	56

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
"Unable to dial. Please check your phone." message is displayed.	Bluetooth® function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	—
	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	51

► When making/receiving a call

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A call cannot be made/received.	Your vehicle is in a "No Service" area.	Move to where "No Service" no longer appears on the display.	—	—

3. WHAT TO DO IF...

► When using the phonebook

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Phonebook data cannot be transferred manually/automatically.	The profile version of the connected cellular phone may not be compatible with transferring phonebook data.	For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website: http://www.lexus.com/MobileLink	*	—
	Automatic contact transfer function on this system is set to off.	Set automatic contact transfer function on this system to on.	—	385
	Passcode has not been entered on the cellular phone.	Enter the passcode on the cellular phone if requested (default passcode: 1234).	*	—
	Transfer operation on the cellular phone has not completed.	Complete transfer operation on the cellular phone (approve transfer operation on the phone).	*	—
Phonebook data cannot be edited.	Automatic contact transfer function on this system is set to on.	Set automatic contact transfer function on this system to off.	—	385

▶ When using the Bluetooth® message function

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Messages cannot be viewed.	Message transfer is not enabled on the cellular phone.	Enable message transfer on the cellular phone (approve message transfer on the phone).	*	—
	Automatic transfer function on this system is set to off.	Set automatic transfer function on this system to on.	—	395
New message notifications are not displayed.	Notification of SMS/MMS/E-mail reception on this system is set to off.	Set notification of SMS/MMS/E-mail reception on this system to on.	*	395
	Automatic message transfer function is not enabled on the cellular phone.	Enable automatic transfer function on the cellular phone.	*	—

8

▶ In other situations

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The Bluetooth® connection status is displayed at the top of the screen each time the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.	Connection confirmation display on this system is set to on.	To turn off the display, set connection confirmation display on this system to off.	—	55

PHONE

3. WHAT TO DO IF...

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Even though all conceivable measures have been taken, the symptom status does not change.	The cellular phone is not close enough to this system.	Bring the cellular phone closer to this system.	—	—
	Radio interference has occurred.	Turn off Wi-Fi [®] devices or other devices that may emit radio waves.	—	—
	The cellular phone is the most likely cause of the symptom.	Turn the cellular phone off, remove and reinstall the battery pack, and then restart the cellular phone.	*	—
		Enable the cellular phone's Bluetooth [®] connection.	*	—
		Disable the Wi-Fi [®] connection of the cellular phone.	*	—
		Stop the cellular phone's security software and close all applications.	*	—
		Before using an application installed on the cellular phone, carefully check its source and how its operation might affect this system.	*	—

*: For details, refer to the owner's manual that came with the cellular phone.

9

LEXUS ENFORM*

1 LEXUS ENFORM-OVERVIEW

- 1. FUNCTIONAL OVERVIEW 404
 - LEXUS Enform Remote 405
- 2. TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE 406
 - BEFORE USING THE FUNCTION 408
 - PREPARATION BEFORE USING LEXUS App Suite 409
- 3. TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM 410
 - BEFORE USING THE FUNCTION 411
- 4. TYPE C: FUNCTION ACHIEVED BY USING DCM 413

2 LEXUS ENFORM OPERATION

- 1. LEXUS Enform Remote 414
- 2. LEXUS App Suite 415
 - USING LEXUS App Suite 415
 - LINKING LEXUS App Suite AND NAVIGATION SYSTEM LOCAL FUNCTION 420
 - ENTERING KEYWORD OPERATION 423
- 3. LEXUS Enform Destinations 425
 - Destination Assist 425
 - eDestination 426
- 4. Lexus Insider 430
 - NEW MESSAGE NOTIFICATION 430
 - VIEWING AND PLAYING RECEIVED Lexus Insider MESSAGES 430

3 SETUP

- 1. LEXUS App Suite SETTINGS 434
 - SCREEN FOR LEXUS App Suite SETTINGS 434

*: With navigation function

1. LEXUS ENFORM-OVERVIEW

1. FUNCTIONAL OVERVIEW

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

- The functions included in Lexus Enform are classified into the following three types.
 - Type A: Function achieved by using a cellular phone
 - Type B: Function achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module) and the navigation system
 - Type C: Function achieved by using DCM

Function	Type
LEXUS App Suite	Type A
LEXUS Enform Destinations (Destination Assist, eDestination)	Type B
Lexus Insider	Type B
LEXUS Enform Safety Connect	Type C

- Each function is available in the following areas:
 - LEXUS App Suite is available in the contiguous United States, Washington D.C. and Alaska.
 - LEXUS Enform Destinations is available in the contiguous United States, Washington D.C. and limited areas of Alaska for vehicles that contain the appropriate map data.
 - Lexus Insider is available in the contiguous United States, Washington D.C. and Alaska.
 - LEXUS Enform Safety Connect features include: Automatic Collision Notification, Emergency Assistance, Stolen Vehicle Location (available in the contiguous United States, Washington D.C., Hawaii, Alaska, and Canada) and Enhanced Roadside Assistance (available in the contiguous United States, Washington D.C., Alaska, and Canada).

(INFORMATION)

- Availability of functions of the Lexus Enform service is dependent on network reception level.

LEXUS Enform Remote

LEXUS Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.


For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>.

- Function of the LEXUS Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).
- Lexus Enform Remote is available in the contiguous United States, Washington D.C. and Alaska.

1. LEXUS ENFORM-OVERVIEW

2. TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE

Of the functions included with Lexus Enform, the App Suite relies on the use of a cellular phone. App Suite enables applicable apps installed on a cellular phone to be displayed on and operated from the navigation screen via a Bluetooth®. A few settings must be performed before App Suite can be used. (→P. 409)

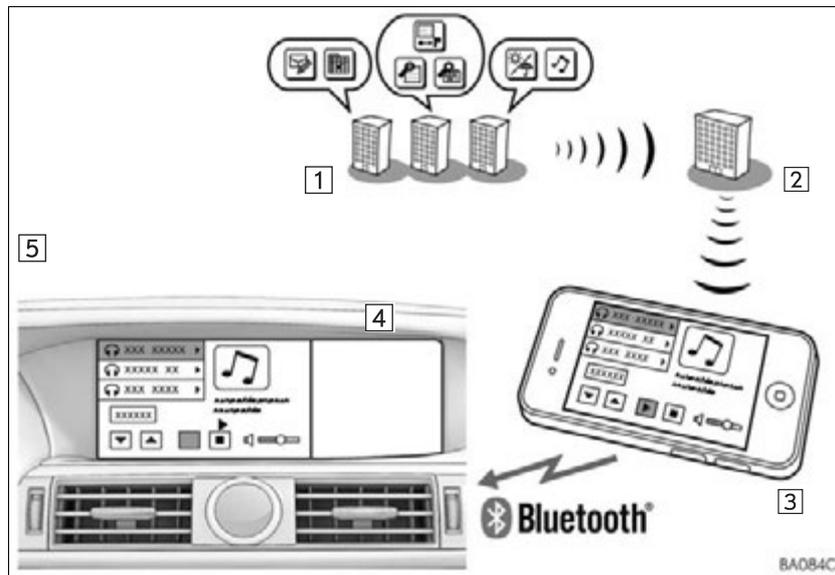

No.	Name	Function
1	Content provider	Provides contents to the navigation system via a cellular phone.
2	Application server	Provides applications to the navigation system via a cellular phone.
3	Cellular phone*	Using the App Suite, communication is relayed between the navigation system, application server and contents provider. The cellular phone cannot be operated while communicating.
4	Applications	Display usable content from the content providers on the screen using the data connection of the connected cellular phone.
5	Navigation system	Content received, via a cellular phone, from content provider servers is displayed on the navigation screen. The navigation system is equipped with an application player to run applications.

*: For known compatible phones, refer to <http://www.lexus.com/MobileLink>.

BEFORE USING THE FUNCTION

SUBSCRIPTION

- User registration is required to start using the App Suite function. (→P. 409)
- App Suite does not require an activation fee or monthly recurring fees.
- Services requiring a separate contract can also be used.*

*: For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

AVAILABILITY OF FUNCTION

- LEXUS App Suite is available in the contiguous United States, Washington D.C. and Alaska.

INFORMATION

- Data usage fees may apply while using App Suite function. Confirm data usage fees before using this function.
- The required operations to activate applications and connect a cellular phone to the navigation system, and the registration steps for the App Suite are explained in this section. For details regarding operation of the App Suite and the applications, refer to <http://www.lexus.com/enform/>.
- Availability of functions of the Lexus Enform service is dependent on network reception level.

INITIALIZING PERSONAL DATA

The personal data used in applications can be reset. (→P. 63)

- The following personal data can be deleted and returned to their default settings:
 - Downloaded contents
 - Radio stations that were listened to
 - Input history

INFORMATION

- Once initialized, data will be erased. Pay close attention when initializing data.

PREPARATION BEFORE USING LEXUS App Suite

SETTINGS REQUIRED TO USE LEXUS App Suite

Perform the settings in the following order.

- 1 User registration
- 2 Download the App Suite application to your cellular phone.
- 3 Register the cellular phone with the navigation system.

In order to use App Suite, the following must first be performed:

- User registration with the service (→P. 409)
- Download the App Suite application onto your cellular phone, and login to the application. (→P. 409)
- Register the cellular phone, on which the App Suite application was installed, with the navigation system. (→P. 409)
- Register a Bluetooth® phone with the hands-free system. (→P. 40)

USER REGISTRATION

- 1 Perform user registration at <http://www.lexus.com/enform/>.

REGISTERING THE LEXUS App Suite APPLICATION

- 1 Download the App Suite application to your cellular phone.
- 2 Run the App Suite application on your cellular phone.
- 3 Enter the information required into the App Suite application. Login to the application.

INFORMATION

- Applications can only be used when the App Suite application has been downloaded to your cellular phone and the application is running.
- App Suite operational procedures can also be confirmed by visiting <http://www.lexus.com/enform/>.
- In order to use applications, it is necessary to run the App Suite application on your cellular phone.
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <http://www.lexus.com/enform/>.
- If a App Suite application is used while iPod audio/video is being played back, system operation may become unstable.


1. LEXUS ENFORM-OVERVIEW

3. TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM

The functionality of Lexus Enform Safety Connect, Lexus Enform Destinations, and Lexus Insider is made possible through the shared work of the DCM and the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data and embedded cellular technology to provide safety and security as well as convenience features.

These services are available by subscription on select, telematics hardware-equipped vehicles and supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

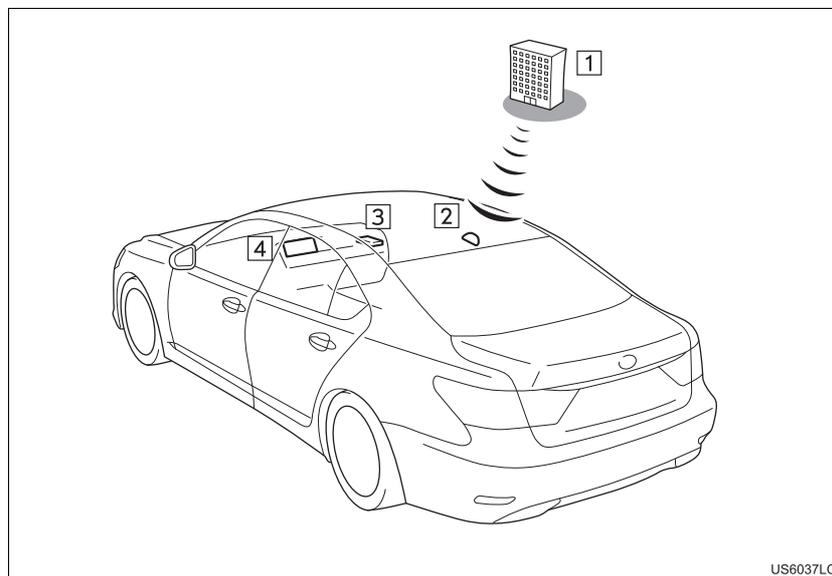

No.	Name
1	Lexus' designated response center
2	TEL, GPS antenna
3	DCM
4	Navigation system

BEFORE USING THE FUNCTION

SUBSCRIPTION

- After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select **"Destination Assist"** in your vehicle for further subscription details. (→P. 425)

AVAILABILITY OF FUNCTION(S)

- Destinations is available in the contiguous United States, Washington D.C. and limited areas of Alaska for vehicles that contain the appropriate map data.
- Lexus Insider is available in the contiguous United States, Washington D.C. and Alaska.

ACTIVATION OF FUNCTION(S)

- Enrollment in Lexus Enform Safety Connect (via your dealership) is required to activate all functions.

- Certification for Lexus Enform Safety Connect

FCC ID: O6Y-CDMRF101
 FCC ID: XOECDMRF101B
 FCC ID: N7NGTM2

FCC WARNING

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

1. LEXUS ENFORM-OVERVIEW

INFORMATION

- Exposure to radio frequency signals:
The Lexus Enform system installed in your vehicle includes a low power radio transmitter and receiver. The system receives and also sends out radio frequency (RF) signals.
- In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.
 - ANSI (American National Standards Institute) C95.1 [1992]
 - NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
 - ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]
- These standards are based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of Lexus Enform system complies with the FCC guidelines in addition to those standards.

INFORMATION

- Available beginning Fall 2009 on select Lexus models. Contact with the Lexus response center is dependent upon the telematics device being in operative condition, cellular connection availability, navigation map data, and GPS satellite signal reception, which can limit the ability to reach the response center or receive support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms are available; charges vary by subscription term selected.
- The Lexus response center offers support in multiple languages.
- Select Lexus Enform Safety Connect-subscribed vehicles are capable of communicating vehicle information. Please see the terms and conditions for additional details.
Owners who do not wish to have their vehicle transmit this information can opt out at the time of enrollment or by calling 1-800-255-3987 and following the prompts for Lexus Enform Safety Connect.
- For further details about the service, contact your Lexus dealer.
- Lexus Enform functions are not subject to section 255 of the Telecommunications Act and the system is not TTY compatible.

1. LEXUS ENFORM-OVERVIEW

4. TYPE C: FUNCTION ACHIEVED BY USING DCM

The functionality of Lexus Enform Safety Connect is made possible by the use of a DCM.

For details, refer to "Owner's Manual".

2. LEXUS ENFORM OPERATION

1. LEXUS Enform Remote

For details about the functions and services provided by this app, refer to <http://www.lexus.com/enform/>.

SUBSCRIPTION

- After you sign the Telematics Subscription Service Agreement (see the LEXUS Enform Safety Connect section in "Owner's Manual"), download the LEXUS Enform Remote app from your cellular phone's app store, and register within the app (or enroll and complete registration at the dealer), you can begin using these services.
- A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) for further subscription details.

AVAILABILITY OF FUNCTION

- Lexus Enform Remote is available in the contiguous United States, Washington D.C., and Alaska.

INFORMATION

- Lexus Enform Remote should only be used by authorized users.
- Laws in some communities may require that the vehicle be within view of the user when operating Lexus Enform Remote.
In some states, use of Lexus Enform Remote may violate state or local laws. Before using Lexus Enform Remote, check your state and local laws.
- Any malfunction of the Lexus should be repaired by your Lexus dealer.
- Lexus Enform Remote is designed to work at temperatures above -22 °F (-30 °C). This specification is related to the Lexus Enform Remote operation, but is dependent on the vehicle's operating temperature range which may be different.
- Content is subject to change without notice.
- Some features of the Lexus Enform Remote may not be available on some models.
- Additional information can be found at www.lexus.com/enform/.

2. LEXUS ENFORM OPERATION


2. LEXUS App Suite

USING LEXUS App Suite

App Suite is a function that enables applicable apps installed on a cellular phone to be displayed on and operated from the navigation screen. Before App Suite can be used, a few settings need to be performed. (→P. 409)

For details about the functions and services provided by each application, refer to <http://www.lexus.com/enform/>.


- 1 Press the "MENU" button on the Remote Touch.

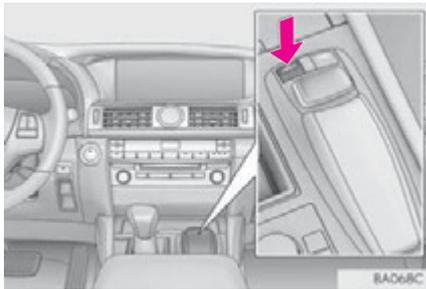

- 2 Select "LEXUS App Suite".



- 3 Select the desired application screen button.

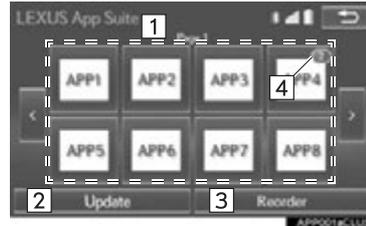

No.	Function	Page
1	Select to activate an application.	—
2	Select to update the applications.	416
3	Select to change the order of the applications.	418
4	Displays the number of new notifications for the application	—

9

LEXUSENFORM

UPDATING AN APPLICATION

When App Suite is activated, an application may need to be updated. By updating the application, it can be kept to the latest version. To update an application, it is necessary to download update data and install it.

DOWNLOADING UPDATE

If an update is available, **“Update”** can be selected.

1 Select **“Update”**.



2 Check that downloading starts.




“Download in Background”: Select to operate other functions while downloading.


“Cancel”: Select to cancel updating.

3 Check that downloading is complete.

► From the **“Update”** screen

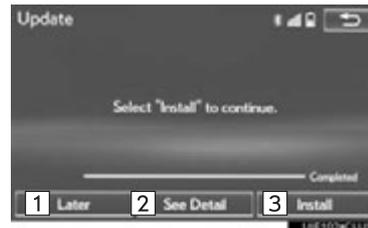

► From other screens

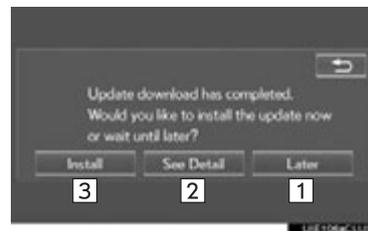

No.	Function
1	Select to install later. When this screen button is selected, the screen will return to the last displayed screen. To install the update data: →P. 417
2	Select to display detailed information on the update data.
3	Select to install the update data. Follow the steps “INSTALLING THE UPDATE DATA” from “STEP 2” . (→P. 417)

■ INSTALLING THE UPDATE DATA

After the downloading is complete, "Update" will be changed to "Install".

1 Select "Install".



2 Select "Continue".




"Later": Select to postpone the installation of the update data and go back to the previous screen.

3 Check that installing is started.



"Install in Background": Select to operate other function while installing.

4 Select "OK" after the installing is complete.

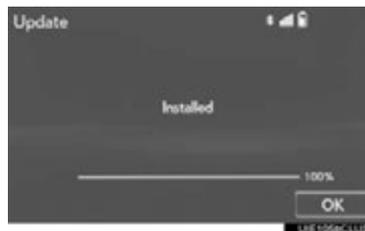

INFORMATION

- The App Suite function cannot be operated while installing.

2. LEXUS ENFORM OPERATION

REORDERING THE APPLICATIONS

Order of the applications can be changed.

- 1 Display the "LEXUS App Suite" screen. (→P. 415)
- 2 Select "Reorder".



- 3 Select the desired application to be moved.



- 4 Select "<<" or ">>" to move the application, and select "OK".

IF A MESSAGE APPEARS ON THE SCREEN

When problems occur with starting the application player, a message will appear on the screen. Referring to the table below, identify the problem and take the suggested corrective action.


Message	Display conditions	Corrective action
"This feature is unavailable during an emergency call."	Safety Connect is being implemented.	After the Safety Connect call is finished, perform the operation again.
"This feature is unavailable while transferring contacts."	Contacts are being transferred manually from the phonebook.	When the transfer of contacts is complete, perform the operation again.
"Unable to connect to a Bluetooth* phone. For troubleshooting assistance, please visit the Lexus website or contact your dealer."	The cellular phone cannot be connected.	Refer to http://www.lexus.com/enform/ to confirm if the phone is compatible or not.
"This feature is unavailable during a handsfree call."	A hands-free call is in progress.	After the hands-free call is finished, perform the operation.
"To use the services, an active application needs to be running on your phone. For more information, please visit lexus.com ."	The LEXUS App Suite application cannot be connected to Bluetooth® SPP.	Refer to http://www.lexus.com/enform/ to confirm if the phone is Bluetooth® SPP compatible or not, and then activate the App Suite application.
"Communication error. Please try again."	Communication was disconnected.	After a few moments, retry the operation.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

LINKING LEXUS App Suite AND NAVIGATION SYSTEM LOCAL FUNCTION

The setting a destination and making a hands-free call functions of the navigation system can be performed via App Suite. For details about the functions and services provided by each application, refer to <http://www.lexus.com/enform/>.

- 1 Press the “MENU” button on the Remote Touch.

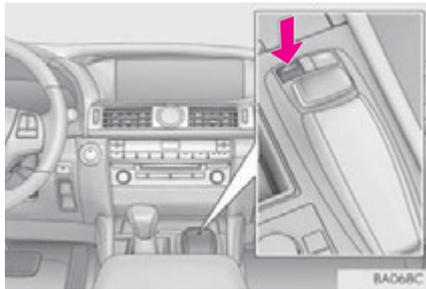

- 2 Select “Destination”.



- 3 Select “Web Search”.



- 4 Check that the “Web Search” screen is displayed.




SETTING A DESTINATION USING LEXUS App Suite

Locations that were searched for using the App Suite can be set as a destination.


- 1 Display the "Web Search" screen. (→P. 420)
- 2 Select the desired application screen button to perform search.



- 3 Enter a search term, and select "Go".

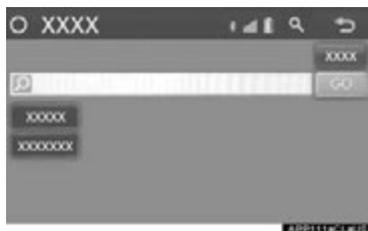

- 4 Select "Map".

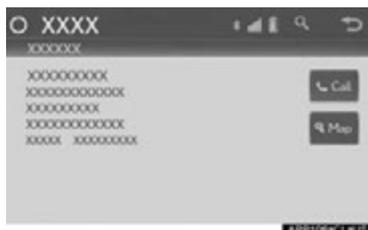

- 5 Select "Go to" icon.



- 6 Select "OK" to start guidance.



● For the operation of the route guidance screen and the function of each screen button: →P.106

**MAKING A PHONE CALL
USING LEXUS App Suite**

Phone calls can be made to locations which were searched for using App Suite.


- 1 Display the "Web Search" screen. (→P. 420)
- 2 Select the desired application screen button to perform search.



- 3 Enter a search term, and select "Go".



- 4 Select "Call".

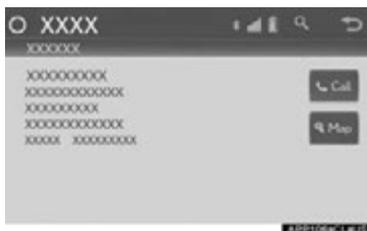

- 5 Select "Yes".



"Cancel": Select to cancel making a phone call.

- 6 Check that the "Call" screen is displayed on the "Side Display".

- For phone operation and the function of each screen button: →P. 374

ENTERING KEYWORD OPERATION

A keyword can be entered to an application by the software keyboard or voice recognition function. For details about the functions and services provided by each application, refer to <http://www.lexus.com/enform/>.


- The keyboard layout can be changed. (→P. 57)

ENTERING A KEYWORD USING THE SOFTWARE KEYBOARD

- 1 Display the "LEXUS App Suite" screen. (→P. 415)
- 2 Select the desired application screen button.




- 3 Select the character entering space.

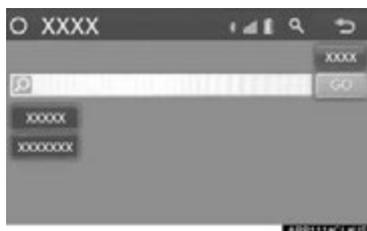

- 4 Enter a search term, and then select "OK".



- 5 Entering characters will be reflected on the character entering space.

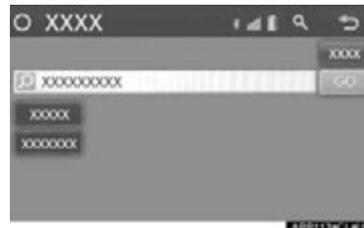

- For details on operating the keyboard: →P. 34

2. LEXUS ENFORM OPERATION

ENTERING A KEYWORD USING THE VOICE RECOGNITION FUNCTION


- 1 Display the "LEXUS App Suite" screen. (→P. 415)
- 2 Select the desired application screen button.



- 3 Press the talk switch. (→P. 318)



- 4 When this screen is displayed, say the desired keyword.

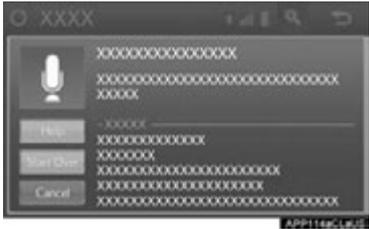

- Completion of the keyword will be detected automatically.

- 5 Search results will be displayed on the screen.



2. LEXUS ENFORM OPERATION

3. LEXUS Enform Destinations


Destination Assist

Destinations provide you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other Points of Interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

MAKE A CALL WITH Destination Assist


- 1 Press the "MENU" button on the Remote Touch.

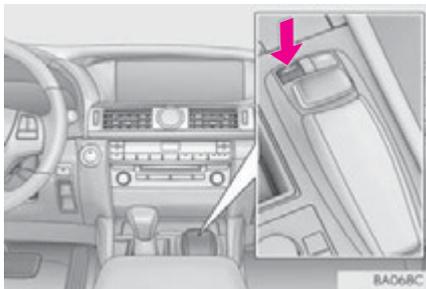

- 2 Select "Destination".



- 3 Select "Destination Assist".

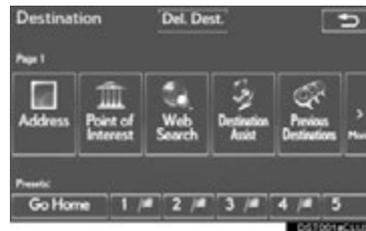

- 4 When an agent comes on the line, tell the agent the address, business name, or the type of POI or service.




- To adjust the call volume, select "-" or "+", or use the volume switch on the steering wheel during the call.
- To hang up the phone, select "Disconnect" or press the  switch on the steering wheel.

9

LEXUSENFORM

2. LEXUS ENFORM OPERATION

- 5 After the agent helps you determine your location of choice, this screen is displayed. Select the screen button of the desired action.

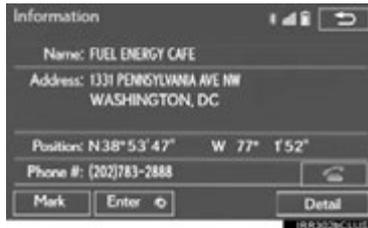

“Mark”: Select to mark the POI on the map screen.

“Enter” (with location pin icon): Select to set as a destination.

“Detail”: Select to display detailed information.

- If (with phone icon) is selected, the registered phone number can be called.

eDestination

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. Up to 200 locations can be stored online and accessed or updated at any time.

- Locations can be organized into up to 20 personalized folders.


INFORMATION

- You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

DOWNLOADING eDestinations

After updating eDestination folders online, it is necessary to download the updated data to the vehicle.

- 1 Press the “MENU” button on the Remote Touch.

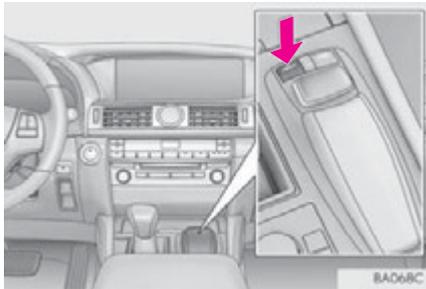

- 2 Select “Destination”.



- 3 Select “Point of Interest”.



- 4 Select “eDestination”.




- 5 Select “Download”.



- 6 Select “Yes” when the confirmation screen appears.

- 7 Check that downloading starts.

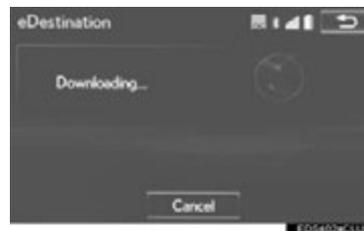

- The most recent Destinations data will be loaded to the navigation system.

9

LEXUS ENFORM

2. LEXUS ENFORM OPERATION

SEARCHING eDestinations

1 Press the "MENU" button on the Remote Touch.



2 Select "Destination".




3 Select "Point of Interest".



4 Select "eDestination".



5 Select the desired eDestination category.

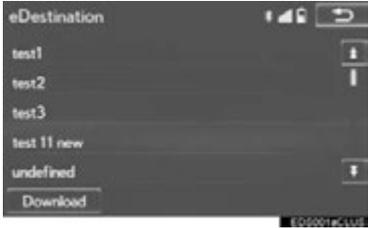

- 6 Select the desired location.



- 7 Select the button of the desired action.



“Mark”: Select to mark the POI on the map screen.

“Go”: Select to set the POI as a destination with route directions.


- If  is selected, the registered phone number can be called.

DISPLAYING eDestination ICONS


- 1 Select “Options”.



- 2 Select “Map Information”.

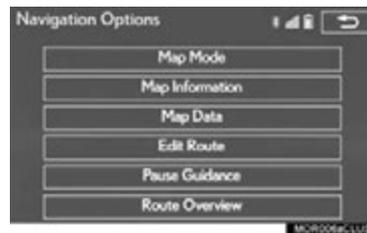

- 3 Select “eDestination”.

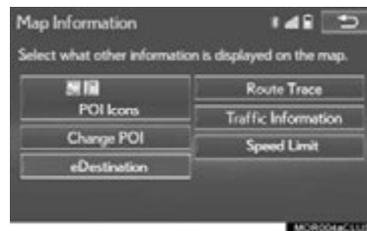

- The “eDestination” indicator will illuminate.

2. LEXUS ENFORM OPERATION

4. Lexus Insider

Lexus Insider is an optional function that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

NEW MESSAGE NOTIFICATION

When the vehicle is first powered on and a new Lexus Insider article is available, a notification will appear on the navigation screen. The notice will appear for only approximately 6 seconds unless one of the options listed is selected.

- 1 When the new message notification appears, any of the following options can be selected.




"Listen Now": Select to play newly received Lexus Insider article(s).

"Listen Later": Select to close the notification screen without playing articles. The notification screen will be displayed again when the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode.

VIEWING AND PLAYING RECEIVED Lexus Insider MESSAGES

- 1 Press the **"MENU"** button on the Remote Touch.

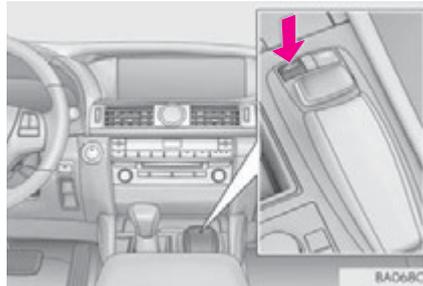

- 2 Select **"Info"**.



3 Select "Lexus Insider".



4 Select the desired article title.



"Read All": Select to listen to all stored Lexus Insider broadcasts.

- To disrupt the audio read of Lexus Insider, press the "MODE" switch on the steering wheel, or press the "RADIO" or "MEDIA" button on the audio system.

MESSAGE ICONS

Icons appear at the left of the Lexus Insider story titles and indicate the following.

Icon	Article
	Unread article
	Previously read article
	Unread article with downloadable Point of Interest (POI)
	Previously read article with downloadable Point of Interest (POI)

2. LEXUS ENFORM OPERATION

LISTENING TO ANOTHER ARTICLE

- 1 Display the "LEXUS Insider" screen. (→P. 430)
- 2 Select the desired article.



- 3 Select "Next" or "Previous" to listen to another article.



- The "∧" or "∨" switch on the steering wheel can be used to move to the previous or next article.
- To stop listening to the broadcast, select "Stop" or press the "PWR:VOL" knob of the audio system.

DOWNLOADING A POI

Some Lexus Insider articles will contain a downloadable POI relevant to the content.

- 1 Display the "LEXUS Insider" screen. (→P. 430)
- 2 Select the desired article.



- 3 Select "Enter" (⊙).



- If a POI is contained, "Enter" (⊙) can be selected to download a POI to the navigation system.
- 4 Select "Go" to set the POI as a destination with route directions.

DELETING Lexus Insider ARTICLE

- 1 Display the "LEXUS Insider" screen.
(→P. 430)
- 2 Select "Delete".



- 3 Select the item to be deleted and select "Delete".




- 4 Select "Yes" when the confirmation screen appears.

3. SETUP

1. LEXUS App Suite SETTINGS

The settings of App Suite can be changed.

- 1 Press the "MENU" button on the Remote Touch.

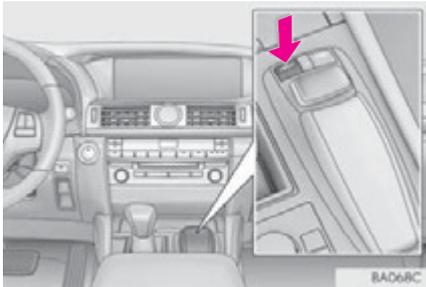


- 2 Select "Setup".




- 3 Select "LEXUS App Suite".



- 4 Select the items to be set.

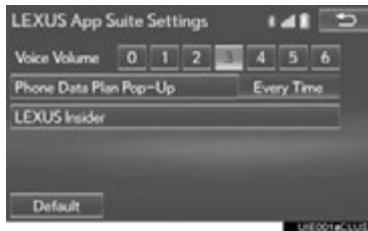

SCREEN FOR LEXUS App Suite SETTINGS

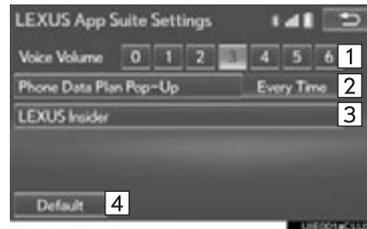

No.	Information	Page
1	Select to set the voice guidance volume.	435
2	Select to set the pop up reminder for cellular phone data usage.	435
3	Select to set Lexus Insider settings.	436
4	Select to reset all setup items.	—

VOICE VOLUME SETTINGS

The voice guidance volume can be adjusted.


- 1 Display the "LEXUS App Suite Settings" screen. (→P. 434)
- 2 Select the desired level by selecting the appropriate number.




PHONE DATA PLAN POP-UP SETTINGS

The phone data plan pop-up can be set when a paid application is downloaded.

- 1 Display the "LEXUS App Suite Settings" screen. (→P. 434)
- 2 Select "Phone Data Plan Pop-Up".

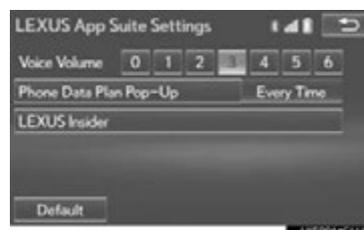

- 3 Check the desired function to be operated.

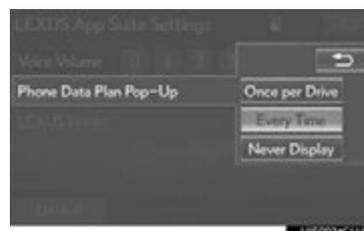

9

LEXUSENFORM

3. SETUP


Lexus Insider SETTINGS

Lexus Insider settings, notification, and opt in or out of article receipt can be changed.

- 1 Display the “LEXUS App Suite Settings” screen. (→P. 434)
- 2 Select “LEXUS Insider”.



- 3 Select the items to be set.

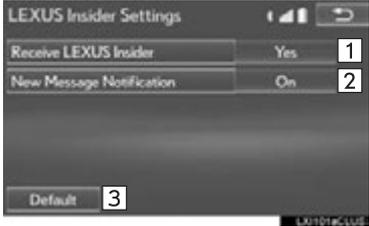

No.	Function
1	Select to set the receiving of Lexus Insider articles yes/no.
2	Select to set the new message notification on/off.
3	Select to reset all setup items.

10

12.3-INCH DISPLAY

1 12.3-INCH DISPLAY OPERATION

- 1. 12.3-INCH DISPLAY-OVERVIEW 438
 - FULL SCREEN DISPLAY 438
 - SPLIT-SCREEN DISPLAY 438
- 2. USING "Side Display" 440
 - BASIC SCREENS 440
 - INTERRUPTION SCREENS 441

1

2

3

4

5

6

7

8

9

10

1. 12.3-INCH DISPLAY OPERATION

1. 12.3-INCH DISPLAY-OVERVIEW

FULL SCREEN DISPLAY

The initial screen and “Menu” screen fill the entirety of the display area.
For details about the initial screen and “Menu” screen: →P.14, 30



SPLIT-SCREEN DISPLAY

Different information can be displayed on the left and right of the screen. For example, audio, air conditioning or consumption information screens can be displayed and operated while the map screen is being displayed.

The large screen on the left of the display is called the “Main Display”, and the small screen to the right is called the “Side Display”.



“Main Display”

For details about the functions and operation of the “Main Display”, refer to the respective section.

“Side Display”

The following functions can be displayed and operated on the “Side Display”.

▶ Basic screens

Function	Page
Audio	440
Air conditioning	“Owner’s Manual”
Vehicle information	“Owner’s Manual”

▶ Interrupt screens

Function	Page
Intuitive parking assist	353
Phone	442
Destination Assist	425
Driving mode	“Owner’s Manual”
Lexus night view	“Owner’s Manual”

OPERATING CHARACTERISTICS OF THE SPLIT-SCREEN DISPLAY

When the split-screen is displayed, it is necessary to select the screen you wish to operate (“Main Display” or “Side Display”).

▶ When selecting the “Side Display”

- 1 Move the Remote Touch knob to the right until  is displayed at the boundary between the “Main Display” and the “Side Display”, and then move it further to the right.

▶ When selecting the “Main Display”

- 1 Move the Remote Touch knob to the left until  is displayed at the boundary between the “Main Display” and the “Side Display”, and then move it further to the left.

INFORMATION

- Selecting the “Main Display” will dim the “Side Display”.

1. 12.3-INCH DISPLAY OPERATION

2. USING "Side Display"

BASIC SCREENS

The audio control screen, air conditioning control screen and vehicle information screen can each be displayed and operated on the "Side Display".



SWITCHING THE BASIC SCREEN

1 Select the desired tab.

Screen button	Function
	Select to display the audio control screen.
	Select to display the air conditioning control screen.
	Select to display the vehicle information screen.


TO DISPLAY ON THE "Main Display"

Detailed information that is not shown on the "Side Display" can be set to display on the "Main Display". For "Main Display" operation, refer to the respective section.

1 Select , or .

AUDIO/VIDEO SYSTEM

Operations such as selecting a preset station or track are carried out on the screen.

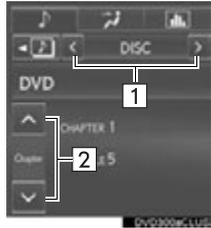

No.	Function
1	Select or to select the desired audio mode.
2	Select or to select the desired station, track, file, chapter, etc.

INFORMATION

and is not display in some audio modes.

VEHICLE INFORMATION

Vehicle information (the fuel consumption, compass etc.) can be displayed. The details of the information, refer to "Owner's Manual".

SWITCHING THE VEHICLE INFORMATION

- 1 Select or for select the desired screen.

COMPASS

Displays a compass and information about the current position. The orientation of the compass can be changed from north-up to heading-up by selecting the orientation symbol.

- 1 Select or .

▶ North-up screen



▶ Heading-up screen



INTERRUPTION SCREENS

Intuitive parking assist screen, phone screen, etc. are displayed automatically in accordance with conditions.

SWITCHING THE INTERRUPTION SCREEN

When multiple interruption screens have been opened, the hidden screens can be brought forward and displayed once again. (The driving mode screen cannot be displayed again.)

- 1 Select the button for the screen you want to display at the front.



Screen button	Function
	Select to display the Lexus night view screen.
	Select to display the intuitive parking assist screen.
	Select to display the phone screen.
	Select to display the Destination Assist screen.

10

12.3-INCH DISPLAY

**HANDS-FREE SYSTEM
(FOR CELLULAR PHONE)**

The following functions can also be displayed and operated on the “Side Display”. For details about these functions, refer to the respective section.



- ▶ Calling on the Bluetooth® phone
→P.367
- ▶ Incoming calls
→P.373
- ▶ Incoming call waiting
→P.376
- ▶ Talking on the Bluetooth® phone
→P.374

INFORMATION

- If “Side Display” is selected for any of the functions above and the function is activated, the status bar will be displayed on the “Side Display”. For details about the status bar: →P.16

DISPLAYING ON THE “Main Display”


The screen can be displayed on the “Main Display” when carrying out an operation that cannot be conducted on the “Side Display”.

- 1 Select



INFORMATION

- Operation is still possible using the steering phone switch even if the phone screen is hidden behind another interruption screen. If the operation is conducted using a steering switch, the phone screen will automatically be brought to the front. For details on operating the steering phone switch and the “Main Display”: →P.362

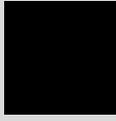

INDEX

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
-

ALPHABETICAL INDEX

Numerics

12.3-inch display	438
Full screen display	438
Split-screen display	438

A

AAC	176, 228, 230
Adding destinations	118
“Address”	97
“Address Book”	102, 126
Adjacent road	121
AM	157
Angle	135
Applications	404, 415
Area to avoid	129
Arrival time	110
Audio	148
Audio screen adjustment	155
Basic operation	150
Disc slot	152
Selecting an audio source	151
Sound settings	154
System on/off	150
USB/AUX port	153
Voice command system	156
Audio settings	215
Auto avoid traffic	138
AUX	203
Control screen/panel	203
AUX port	153, 203, 206

B

Bluetooth®	40
Profiles	44
Registering a Bluetooth® audio player	42
Registering a Bluetooth® phone	40
Bluetooth® audio	197
Connecting	201
Control screen/panel	197
Listening	201
Bluetooth® phone	362
Basic operation	363
Phone switch/microphone	364
Phonebook	366
Selling or disposing of the vehicle	366
Voice command system	365
Bluetooth® settings	48
Bluetooth® setup screen	48
Connecting a Bluetooth® device	51
Deleting a Bluetooth® device	51
Detailed Bluetooth® settings	55
Editing the Bluetooth® device information	53
Registering a Bluetooth® device	49



C

Caching a radio program..... 161
Calibration..... 135
Call history..... 368
Calling on the Bluetooth® phone..... 367
 Call history..... 368
 Dial pad..... 371
 Favorites lists..... 368
 Off hook switch..... 372
 Phonebook..... 369
Camera..... 346
Camera display..... 38, 338, 345
Casual speech recognition..... 324
CD..... 176
 Control screen/panel..... 176
 Playing an audio CD..... 179
 Playing an MP3/WMA/AAC disc..... 180
Clock setting..... 59
Command list..... 325
Compass..... 81
Connecting a Bluetooth® device..... 51
Contacts..... 369, 385
"Coordinates"..... 105
Current position..... 77

D

Data services settings..... 334
Day mode..... 38
DCM..... 410, 413
Dealer setting..... 69
Deleting destinations..... 118
Deleting personal data..... 63
Deleting previous destinations..... 131
Destination Assist..... 102, 425
"Destination" screen..... 93
Destination search..... 95
 "Address"..... 97
 "Address Book"..... 102
 "Coordinates"..... 105
 "Destination Assist"..... 102
 "Emergency"..... 103
 Home..... 96
 "Intersection & Freeway"..... 103
 "Map"..... 105
 "Point of Interest"..... 98
 Preset destinations..... 96
 "Previous Destinations"..... 102
 Search area..... 96
Detailed navigation settings..... 132
Detour..... 120
Dial pad..... 371
Disc slot..... 152
Doppler weather..... 332
DSP..... 154
Dual map..... 81
DVD..... 181
 Control screen/panel..... 181
 DVD options..... 185
DVD player and disc..... 222



ALPHABETICAL INDEX

E

e-mail	377
eDestination.....	426
Downloading.....	427
Icons.....	429
Searching.....	428
Editing route.....	117
Adding destinations.....	118
Adjacent road.....	121
Deleting destinations	118
Detour.....	120
Reordering destinations	118
Route preference.....	119
Route type.....	119
“Emergency”	103

F

Favorites lists.....	368
File (audio).....	228
FM.....	157
Foot print map.....	78
Freeway.....	112
Function index.....	26

G

General settings.....	57
GPS (Global Positioning System).....	140
Guiding the route	24, 110, 116

H

Heading-up.....	80
Home.....	25, 96, 123



I

- Icon information 88
- Incoming call waiting..... 376
- Incoming calls..... 373
- “Information” screen..... 20
- Initial screen 30
- Internet radio 175
- Intersection..... 114
- “Intersection & Freeway” 103
- Intuitive parking assist..... 352
 - Detection range 356
 - Display 353
 - Distance display and buzzer 354
 - Failure warning 358
 - Information 356
 - Sensors..... 352
 - Switch 352
- Intuitive parking assist setting 359
 - Alert volume 360
 - Display and tone indication 360
 - Parking sonar display 360
- iPod..... 191, 227
 - Control screen/panel 191
 - Music..... 195
 - Video..... 196

K

- Keyboard..... 34

L

- Language code 219
- LEXUS App Suite 409, 415
 - Entering keyword..... 423
 - Using..... 415
 - Web search 420
- LEXUS App Suite settings 434
- Lexus Enform 404
 - Before using the function 408
 - LEXUS App Suite..... 409
- LEXUS Enform Destinations 425
- LEXUS Enform Remote..... 405, 414
- Lexus Insider..... 430
 - Viewing and playing..... 430
- Lexus parking assist monitor 336
 - Area displayed on screen..... 345
 - Camera..... 346
 - Driving precautions..... 336
 - Screen display..... 338
- List screen..... 35
- Low fuel warning..... 134



ALPHABETICAL INDEX

M

Maintenance.....	68	MEDIA button.....	151
“Map”.....	105	Memory point.....	102, 126
Map database.....	143	Memory points settings.....	122
SD card.....	144	“Address Book”.....	126
Map icons.....	89	Area to avoid.....	129
Map screen.....	74, 77	Deleting previous destinations.....	131
Adjusting location.....	84	Home.....	123
Current position.....	77	“Preset Destinations”.....	124
Map mode.....	81	“Menu” screen.....	14
Map scale.....	78	Status display.....	16
Orientation.....	80	Message.....	377
Scrolling the map.....	83	Calling the message sender.....	381
Map screen information.....	85	Checking.....	379
Icon information.....	88	Receiving.....	378
Map icons.....	89	Replying.....	380
Route trace.....	87	Microphone.....	318
		MMS.....	377
		Mobile Assistant.....	329
		MP3.....	176, 228, 230



N

Navigation 74
Navigation options 76
North-up 80

O

Off hook switch 372
Online search 98, 420
Operating information 221
 DVD player and disc 222
 Error messages 232
 File (audio) 228
 iPod 227
 Radio 221
 Terms 230

P

Phone switch/microphone 364
Phone/message settings 383
 “Contact/Call History Settings” 385
 “Messaging Settings” 395
 “Phone Display Settings” 396
 “Sound Settings” 384
Phonebook 366, 369
POI category 85, 98, 134
 “Point of Interest” 98
Predictive traffic data 91
Preset destinations 96
“Previous Destinations” 102
Profiles 44
PRST-TRACK button 148
PWR-VOL knob 31, 150



ALPHABETICAL INDEX

R	S
Radio 157, 221	Safety Connect 413
Caching a radio program 161	Scale 78
Control screen/panel 157	Screen adjustment 38
Presetting a station 160	Camera display 38
Radio broadcast data system 163	Screen off 38
Selecting a station from the list 160	Screen off image 61
Traffic announcement 164	Screen size 155
Troubleshooting guide 167	Scrolling the map 83
Using HD Radio™ technology 165	SD card 144
RADIO button 151	Search area 96
Radio ID 173	Search engine 98, 420
Rear seat audio controls 212	Sending tones 374
Rear seat entertainment system 233	Sensors 352
Receiving on the Bluetooth® phone 373	“Setup” screen 18
Incoming calls 373	Side display 440
Registering home 22, 123	Basic screens 440
Registering preset destinations 23, 124	Interruption screens 441
Remote Touch 12, 32	Single map 81
Reordering destinations 118	SMS 377
Restarting the system 31	Sound settings 154
Road preference 108, 119	Startup image 61
Route guidance 106	Status display 16
Pause 109	Steering switches 209, 318
Starting 106	
Route guidance screen 110	
Arrow screen 115	
Freeway 112	
Intersection 114	
Route overview 112	
Turn list screen 115	
Route information bar 111	
Route overview 112	
Route preferences 119	
Route trace 87	
Route type 119	



T

Talking on the Bluetooth® phone..... 374
 Incoming call waiting..... 376
Time zone..... 59
Traffic announcement..... 164
Traffic information 90
 Show traffic event information 90
 Show traffic information..... 92
Traffic settings 137
 Auto avoid traffic..... 138
Transmit volume..... 374
Travel time 110
TUNE-SCROLL knob 148
Turn list..... 81, 108, 115
Turn list screen..... 115

U

USB memory 187
 Control screen/panel 187
USB/AUX port 153

V

“Vehicle”..... 67
 Dealer setting..... 69
 Maintenance 68
Voice command system..... 318, 365
 Casual speech recognition 324
 Command list..... 325
 Operation..... 319
 Steering switches 318
Voice guidance prompts..... 116
Voice settings..... 65
VTR 206
 Control screen/panel..... 206
 VTR options 208



ALPHABETICAL INDEX

W

Weather	332
Web search.....	420
WMA.....	176, 228, 230

X

XM Satellite Radio.....	168
Control screen/panel.....	168
How to subscribe to an XM Satellite Radio.....	171
If the satellite radio tuner malfunctions.....	174
Presetting a channel.....	173
Radio ID.....	173
Selecting a channel from the list.....	173

Map database information and updates

This system uses the maps of DENSO.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM. BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL TERMS AND CONDITIONS SET FORTH BELOW.

LICENSE GRANT

DENSO CORPORATION ("DENSO"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

OWNERSHIP

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by TomTom North America, Inc. ("TomTom") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE.

The DATABASE comprises confidential and proprietary information and materials of TomTom. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TomTom and its licensors.

LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

THE LICENSED PRODUCTS ARE PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND TOMTOM AND ITS SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY TOMTOM OR ANY OF ITS AGENTS, EMPLOYEES OR THIRD PARTY PROVIDERS SHALL CREATE A WARRANTY, AND LICENSEE IS NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THE AGREEMENT.

LIMITATION OF LIABILITY

NEITHER TOMTOM NOR ITS SUPPLIERS SHALL BE LIABLE TO THE UNDERSIGNED FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT, INCLUDING LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

NOTWITHSTANDING ANYTHING TO THE CONTRARY CONTAINED HEREIN, TOMTOM SHALL HAVE NO MONETARY LIABILITY TO THE UNDERSIGNED FOR ANY CAUSE (REGARDLESS OF THE FORM OF ACTION) UNDER OR RELATING TO THIS AGREEMENT.

WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

End Users shall acknowledge that the use of the Licensed Products with a non-TomTom map may result in increased variance between the location displayed on the map and ground truth location.

The covenants and obligations undertaken by the End User herein are intended for the direct benefit of TomTom and may be enforced by TomTom directly against the End User.

U.S. GOVERNMENT RIGHTS

U.S. GOVERNMENT RIGHTS. If End User is an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in any applicable DFARS or FAR. In case of conflict between any of the FAR and/or DFARS that may apply to the Licensed Product, the construction that provides greater limitations on the Government's rights shall control. Contractor/manufacturer is TomTom North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643. 0330. The Licensed Products are © 2006-Present by TomTom. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the Licensed Products are a trade secret and a proprietary commercial product and not subject to disclosure.

If End User is an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then End User hereby agrees to protect the Licensed Products from public disclosure and to consider the Licensed Products exempt from any statute, law, regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this EULA shall be considered breached and any and all right to retain any copies or to use of the Licensed Products shall be terminated and considered immediately null and void. Any copies of the Licensed Products held by Licensee shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this EULA shall be considered terminated and null and void, in its entirety, and any and all copies of the Licensed Products shall immediately be destroyed.

END-USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2012* NAVTEQ. All rights reserved. *original publication date

NAVTEQ holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2012*. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4. *original publication date

TERMS AND CONDITIONS

Personal Use Only. You agree to use this Data together with vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. Multi-disc sets may only be transferred or sold as a complete set as provided by DENSO and not as a subset thereof.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control: You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement: These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law: The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users: If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

<p style="text-align: center;">NOTICE OF USE</p> <p style="text-align: center;">CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: NAVTEQ</p> <p style="text-align: center;">CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS: 425 West Randolph Street, Chicago, Illinois 60606</p> <p>This Data is a commercial item as defined in FAR 2.101 and is subject to these End-User Terms under which this data was provided.</p> <p style="text-align: center;">© 2012* NAVTEQ – All rights reserved. *original publication date</p>

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Data.

END USER NOTICE

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by Infogroup Inc. ("Infogroup"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the Infogroup POI Data shall be retained by Infogroup.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOGROUP MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of Liability

EITHER INFOGROUP OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

End User's use of the Brand Icon Licensed Product and any portion thereof, is limited to use solely for the purpose of enhancing the value and/or use of the spatial vector data furnished or made by TomTom. Notwithstanding anything to the contrary herein, or in any attachment or exhibit hereto, in no event shall End User use the Brand Icon Licensed Product or any portion thereof in connection with or in conjunction with spatial street vector data furnished or made by a party other than TomTom. End User may only use the icons, brand names, logos, trademarks or other features within (and not separate from) the map data in any collateral, marketing and product packaging. In addition, End shall not modify or alter the color, shape, size, and orientation of the Brand Icon Licensed Product as provided to End User without TomTom's prior written approval.

Licensee agrees that the use of Brand Icon Licensed Product subject to the terms and conditions set forth in this Agreement and that there may be additional third party terms, conditions and restrictions to which the use of the Brand Icon Licensed Product will be subject provided to the End User from time to time by TomTom in the Release Notes applicable to the Licensed Products.

1. Certification

- Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID, Playlist Plus and MediaVOCS are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries



Gracenote[®] End User License Agreement - Music

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© 2013 Gracenote, Inc. All rights reserved.

► For U.S. owners

I. Clear Channel Disclaimers

"Total Traffic Network, a division of Clear Channel Broadcasting, Inc., owns or holds the rights to the traffic, news, sports, weather, stocks and other data (the "TOTAL TRAFFIC-HD+ Data") and TOTAL TRAFFIC-HD+ network through which it is delivered, together the "TTN Service". Use of the TTN Service is subject to the terms of these Device End User Terms.

"The TTN Service is informational only. User assumes all risk of use. Total Traffic Network and its suppliers and licensors make no representations about the accuracy or timeliness of any of the TOTAL TRAFFIC-HD+ Data, including traffic and road conditions, route usability, or speed."

"TOTAL TRAFFIC-HD+ NETWORK DATA IS PROVIDED "AS IS," AND "WHERE IS". TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS EXPRESSLY DISCLAIM ALL WARRANTIES WITH RESPECT TO THE DATA (INCLUDING, WITHOUT LIMITATION, THAT THE DATA WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE."

"TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER LEGAL THEORY."

II. The Weather Channel's (TWC's) Disclaimers

THE FOLLOWING TERMS APPLY TO THE USE OF ANY MATERIAL, DATA OR INFORMATION PROVIDED BY THE WEATHER CHANNEL, LLC ("THE WEATHER CHANNEL"), INCLUDING WEATHER-RELATED INFORMATION AND REPORTS, OBTAINED BY YOU OR OTHERS THROUGH THE TTN SERVICE ("THE WC DATA").

DISCLAIMER OF WARRANTIES.

YOUR USE OF THE WC DATA IS AT YOUR SOLE RISK. THE WC DATA IS PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. THE WEATHER CHANNEL EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. THE WEATHER CHANNEL MAKES NO REPRESENTATION OR WARRANTY THAT (i) THE WC DATA WILL MEET YOUR REQUIREMENTS, (ii) THE WC DATA WILL BE UNINTERRUPTED, TIMELY, SECURE, OR ERROR-FREE, (iii) THE RESULTS THAT MAY BE OBTAINED FROM THE USE OF THE WC DATA WILL BE ACCURATE OR RELIABLE, OR (iv) ANY ERRORS OR BUGS IN THE WC DATA WILL BE CORRECTED. ACCORDINGLY, THE WEATHER CHANNEL SHALL NOT BE RESPONSIBLE OR LIABLE FOR THE ACCURACY, USEFULNESS OR AVAILABILITY OF THE WC DATA.

LIMITATION OF LIABILITY.

YOU EXPRESSLY UNDERSTAND AND AGREE THAT THE WEATHER CHANNEL, ITS SUPPLIERS, ITS LICENSORS AND ITS AFFILIATE COMPANIES SHALL NOT BE LIABLE, UNDER ANY LEGAL THEORY, INCLUDING CONTRACT, TORT, NEGLIGENCE OR STRICT LIABILITY, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, CONSEQUENTIAL OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, GOODWILL, USE, DATA OR OTHER INTANGIBLE LOSSES (EVEN IF THE WEATHER CHANNEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES), RESULTING FROM OR ARISING OUT OF YOUR USE OF, OR YOUR INABILITY TO USE, THE WC DATA, THIS AGREEMENT, OR ANY OTHER MATTER RELATING TO THE WC DATA. YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY DISPUTE WITH THE WEATHER CHANNEL RELATED TO THE WC DATA OR CONTENT SHALL BE CANCELLATION OF RECEIPT OF THE WC DATA. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.