

TABLE OF CONTENTS

1	QUICK GUIDE	9
2	BASIC FUNCTION	27
3	NAVIGATION SYSTEM	69
4	AUDIO/VISUAL SYSTEM	155
5	VOICE COMMAND SYSTEM	279
6	INFORMATION	295
7	PHONE	299
8	LEXUS ENFORM	345
	INDEX	371

Introduction

NAVIGATION SYSTEM OWNER'S MANUAL

This manual explains the operation of the Navigation System. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of the navigation system differ depending on whether the functions and/or a contract existed and the map data was available at the time of producing this document.

Please be aware that the content of this manual may be different from the navigation system in some cases, such as when the system's software is updated.

NAVIGATION SYSTEM

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to pages 149 through 151.

TOYOTA MOTOR CORPORATION

IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.

WARNING

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE


- This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

SYMBOLS USED IN ILLUSTRATIONS



Safety symbol


The symbol of a circle with a slash through it means “Do not”, “Do not do this”, or “Do not let this happen”.

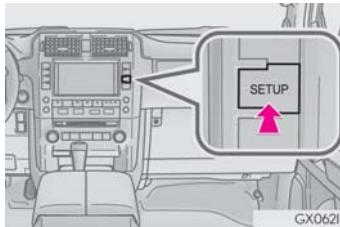

Arrows indicating operations

- ➡ Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

HOW TO READ THIS MANUAL

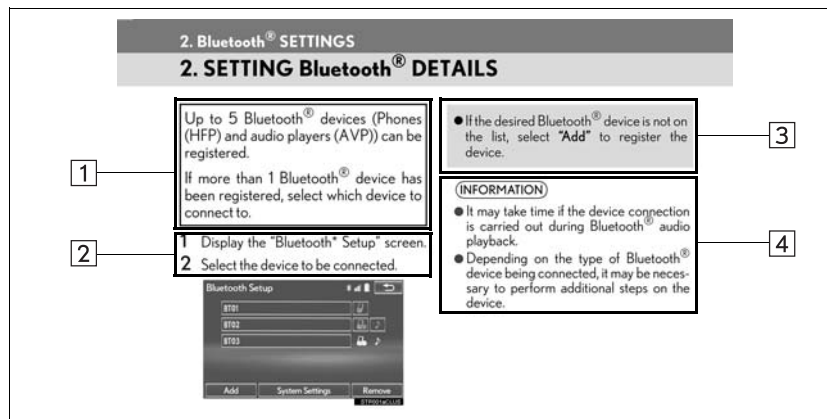

No.	Name	Description
1	Operational Outlines	An outline of the operation is explained.
2	Main Operations	The steps of an operation are explained.
3	Related Operations	A main operation's supplementary operations are described.
4	Information	Useful information for the user is described.

SAFETY INSTRUCTION

To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire Navigation System Owner's Manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.



WARNING

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

TABLE OF CONTENTS

1 QUICK GUIDE

1. BASIC FUNCTION	10
BUTTONS OVERVIEW	10
HOME SCREEN	12
2. QUICK REFERENCE	16
"Setup" SCREEN.....	16
"Information" SCREEN.....	18
3. NAVIGATION OPERATION	19
REGISTERING HOME.....	19
REGISTERING PRESET DESTINATIONS.....	21
OPERATION FLOW: GUIDING THE ROUTE.....	23
SETTING HOME AS THE DESTINATION.....	24
4. FUNCTION INDEX	25
FUNCTION INDEX	25

2 BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION	28
INITIAL SCREEN	28
TOUCH SCREEN GESTURES	30
TOUCH SCREEN OPERATION.....	31
HOME SCREEN OPERATION.....	32
ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION.....	34
SCREEN ADJUSTMENT	38
2. Bluetooth® SETTINGS	40
REGISTERING/CONNECTING Bluetooth® DEVICE.....	40
SETTING Bluetooth® DETAILS	45
3. OTHER SETTINGS	55
GENERAL SETTINGS	55
VOICE SETTINGS	62
VEHICLE SETTINGS	64

3 NAVIGATION SYSTEM

1. BASIC OPERATION	72
QUICK REFERENCE.....	72
MAP SCREEN OPERATION	75
MAP SCREEN INFORMATION.....	83
TRAFFIC INFORMATION	90
2. DESTINATION SEARCH	95
DESTINATION SEARCH SCREEN	95
SEARCH OPERATION	97
STARTING ROUTE GUIDANCE	110
3. ROUTE GUIDANCE	115
ROUTE GUIDANCE SCREEN	115
TYPICAL VOICE GUIDANCE PROMPTS.....	122
EDITING ROUTE	123
4. MEMORY POINTS	129
MEMORY POINTS SETTINGS.....	129
5. SETUP	141
DETAILED NAVIGATION SETTINGS.....	141
TRAFFIC SETTINGS	147
6. TIPS FOR THE NAVIGATION SYSTEM	149
GPS (GLOBAL POSITIONING SYSTEM)	149
MAP DATABASE VERSION AND COVERED AREA	152

4 AUDIO/VISUAL SYSTEM

1. BASIC OPERATION	158
QUICK REFERENCE	158
SOME BASICS	160
2. RADIO OPERATION	168
AM/FM RADIO	168
XM Satellite Radio	180
INTERNET RADIO	188
3. MEDIA OPERATION	189
CD	189
DVD	195
USB MEMORY	202
iPod	207
Bluetooth® AUDIO	214
AUX	221
VTR	224
4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION	227
REAR SEAT ENTERTAINMENT SYSTEM FEATURES	227
5. AUDIO/VISUAL REMOTE CONTROLS	255
STEERING SWITCHES	255
6. SETUP	258
AUDIO SETTINGS	258
7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM	266
OPERATING INFORMATION	266

5 VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION	280
VOICE COMMAND SYSTEM	280
CASUAL SPEECH RECOGNIZATION	288
COMMAND LIST	289
2. MOBILE ASSISTANT OPERATION	293
MOBILE ASSISTANT	293

6 INFORMATION

1. INFORMATION DISPLAY	296
RECEIVING DOPPLER WEATHER INFORMATION	296
DATA SERVICES SETTINGS	298

7 PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)	300
QUICK REFERENCE	300
SOME BASICS	301
CALLING ON THE Bluetooth® PHONE	305
RECEIVING ON THE Bluetooth® PHONE	311
TALKING ON THE Bluetooth® PHONE	312
Bluetooth® PHONE MESSAGE FUNCTION	315
2. SETUP	322
PHONE/MESSAGE SETTINGS	322
3. WHAT TO DO IF	338
TROUBLESHOOTING	338

TABLE OF CONTENTS

8	LEXUS ENFORM
1. LEXUS ENFORM-OVERVIEW	346
FUNCTIONAL OVERVIEW	346
TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE	348
TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM	352
TYPE C: FUNCTION ACHIEVED BY USING DCM	355
2. LEXUS ENFORM OPERATION	356
LEXUS Enform Remote	356
LEXUS App Suite	357
LEXUS Enform Destinations	367
3. SETUP	369
LEXUS App Suite SETTINGS	369
	INDEX
ALPHABETICAL INDEX	372

1

QUICK GUIDE

1 BASIC FUNCTION

1. BUTTONS OVERVIEW..... 10
2. HOME SCREEN..... 12
- STATUS DISPLAY 14

2 QUICK REFERENCE

1. "Setup" SCREEN..... 16
2. "Information" SCREEN..... 18

3 NAVIGATION OPERATION


1. REGISTERING HOME..... 19
2. REGISTERING PRESET
DESTINATIONS..... 21
3. OPERATION FLOW:
GUIDING THE ROUTE..... 23
4. SETTING HOME AS THE
DESTINATION 24

4 FUNCTION INDEX

1. FUNCTION INDEX..... 25

1. BASIC FUNCTION

1. BUTTONS OVERVIEW

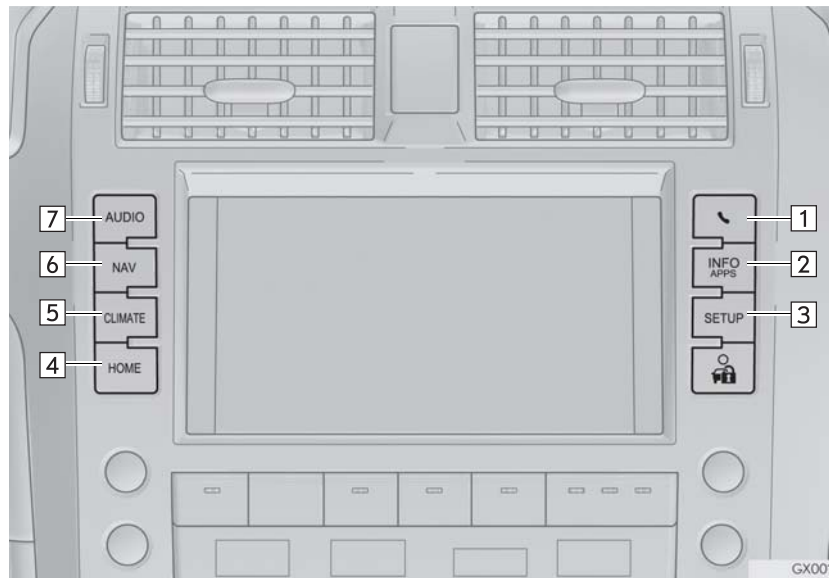

No.	Function	Page
1	Press to display the hands-free operation screen.	300
2	Press to display the "Information" screen.	18
3	Press to display the "Setup" screen.	16
4	Press to display the home screen.	12
5	Press to display the air conditioning control screen.	"Owner's Manual"
6	Press to display the map screen.	72
7	Press to display the audio/visual screen.	158

1. BASIC FUNCTION


2. HOME SCREEN

Press the “HOME” button to display the home screen.


The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display. The home screen can be set to either a three-way split screen or a two-way split screen.

For details about setting the home screen: → P.32

► Three-way split screen

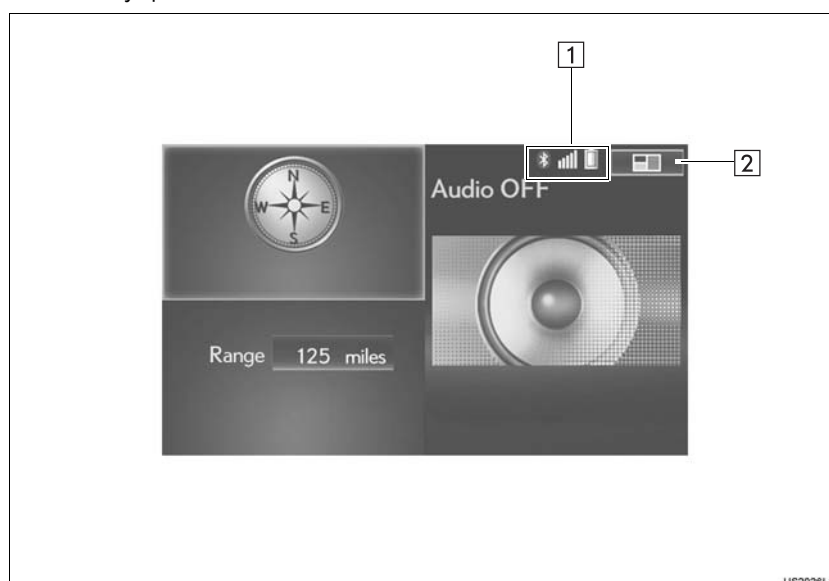

► Two-way split screen

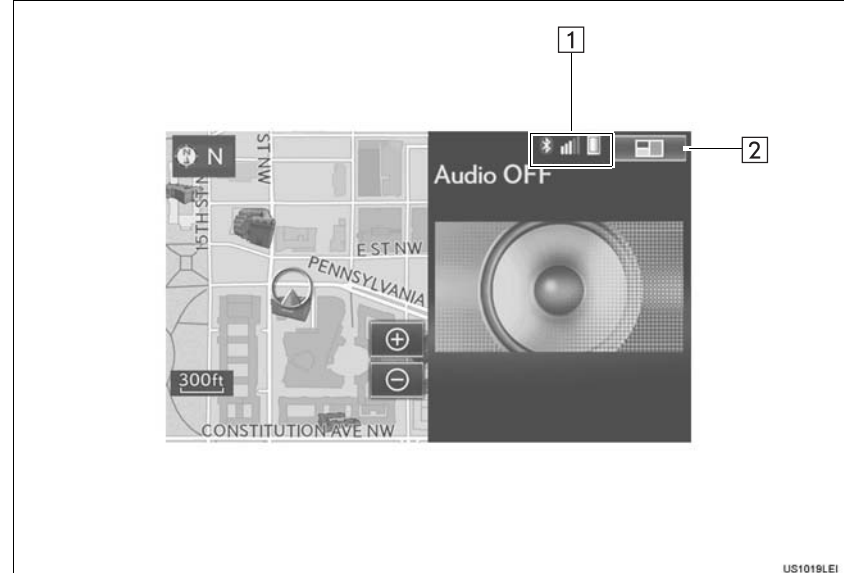

No.	Function	Page
1	Displays the condition of the Bluetooth® connection	14
2	Select to change the display items/area and the home screen layout.	32

STATUS DISPLAY

The condition of the Bluetooth® connection, as well as the level of reception and the amount of cellular phone battery charge left, are displayed on the status bar. This status bar is always shown on all modes.




No.	Indicators	Conditions
1	The condition of the Bluetooth® connection	 No connection ↔  (Gray) Poor ↔  (Blue) Good • An antenna for the Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places: The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box). The cellular phone is touching or is covered with metal materials. • Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.

No.	Indicators	Conditions
2	The level of reception	  Poor ←————→ Excellent - The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have. - When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed. "Rm" is displayed when receiving in a roaming area. While roaming, display "Rm" top-left on the icon. - The receiving area may not be displayed depending on the type of phone you have.
3	The amount of battery charge left	  Empty ←————→ Full - The amount displayed does not always correspond with the amount displayed on the Bluetooth® device. - The amount of battery charge left may not be displayed depending on the type of the Bluetooth® device connected. - This system does not have a charging function.

2. QUICK REFERENCE

1. "Setup" SCREEN

The items shown on the "Setup" screen can be set. Press the "SETUP" button to display the "Setup" screen.

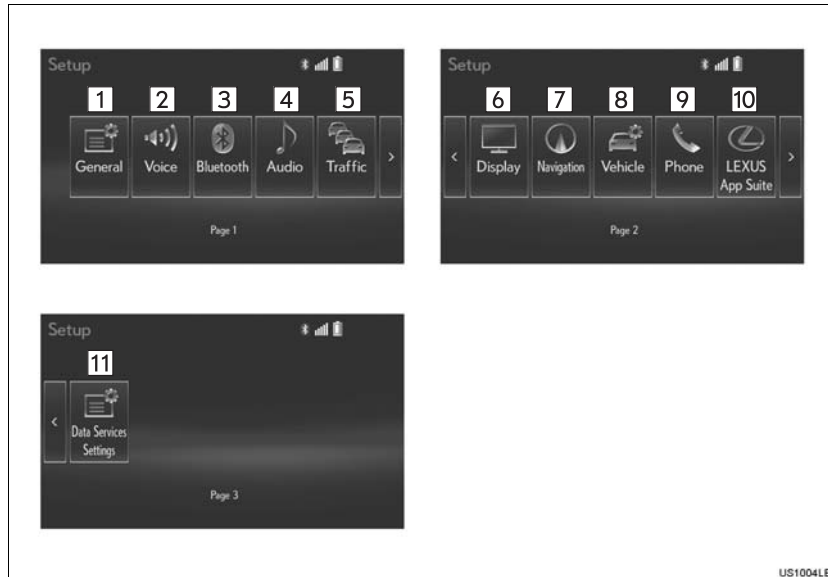


No.	Function	Page
1	Select to change the selected language, operation sound, automatic screen change settings, etc.	55
2	Select to set the voice guidance settings.	62
3	Select to set Bluetooth® phones and Bluetooth® audio devices.	45
4	Select to set radio and external media settings.	258
5	Select to set traffic information.	147
6	Select to adjust the contrast and brightness of the screens, turn the screen off, etc.	38
7	Select to set memory points (home, preset destinations, address book entries, areas to avoid), navigation details or to delete previous destinations.	129, 141
8	Select to set vehicle information such as maintenance information.	64
9	Select to set the phone sound, contacts, message settings, etc.	322
10	Select to set LEXUS App Suite settings.	369
11	Select to set data services settings.	298

2. QUICK REFERENCE

2. “Information” SCREEN

This screen can be used to display traffic information, fuel consumption, etc. Press the “INFO/APPS” button to display the “Information” screen.

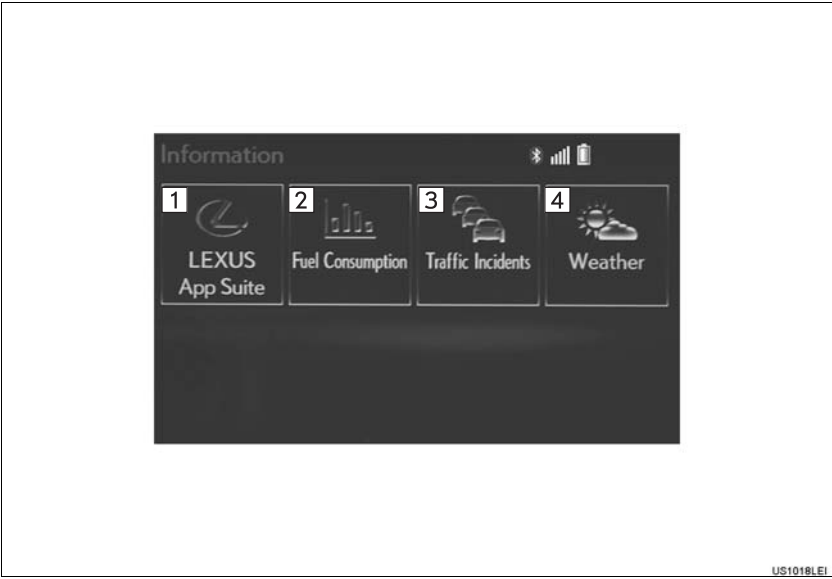


No.	Function	Page
1	Select to display the “LEXUS App Suite” screen.	357
2	Select to display the fuel consumption screen.	“Owner’s Manual”
3	Select to display traffic information.	90
4	Select to display weather information.	296

3. NAVIGATION OPERATION

1. REGISTERING HOME

- 1 Press the "NAV" button.

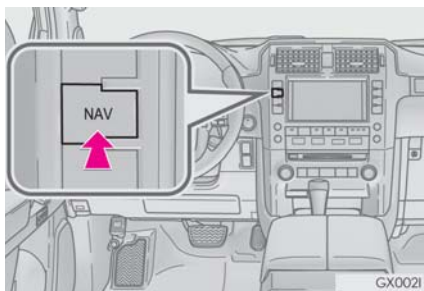

- 2 Select "Dest.".



- 3 Select "Go Home".



- 4 Select "Yes".




- 5 There are different kinds of methods to search for your home. (→P.95)




3. NAVIGATION OPERATION

6 Select "Enter".

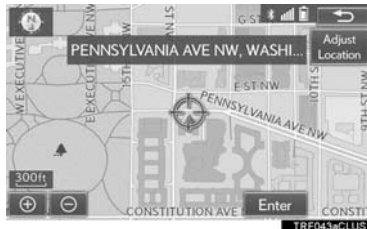

7 Select "OK".

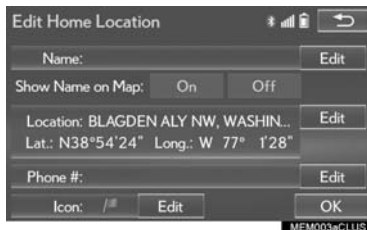


Registration of home is complete.

- ▶ Registering home in a different way
→P.130
- ▶ Editing the name, location, phone number and icon
→P.131
- ▶ Setting home as the destination
→P.98

3. NAVIGATION OPERATION

2. REGISTERING PRESET DESTINATIONS


- 1 Press the "NAV" button.

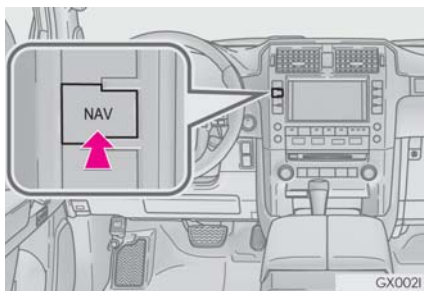


- 2 Select "Dest.".



- 3 Select one of the preset destination buttons.

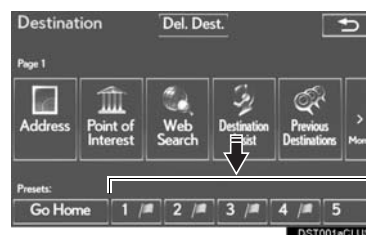

- 4 Select "Yes".

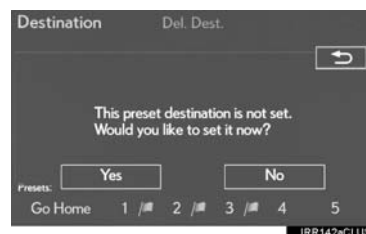

- 5 There are different kinds of methods to search for a destination. (→P.95)




3. NAVIGATION OPERATION

6 Select "Enter".



7 Select "OK".

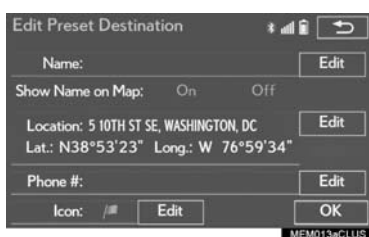


Registration of preset destinations is complete.

- ▶ Registering preset destinations in a different way
→P.132
- ▶ Editing the name, location, phone number and icon
→P.133
- ▶ Setting preset destinations as the destination
→P.99

3. NAVIGATION OPERATION

3. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the "NAV" button.

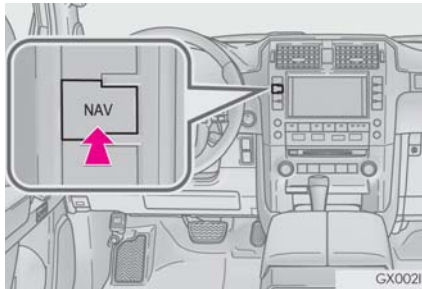


- 2 Select "Dest.".




- 3 There are different kinds of methods to search for a destination. (→P.95)



- 4 Select "Go".

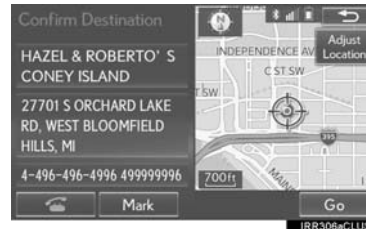

- 5 Select "OK".

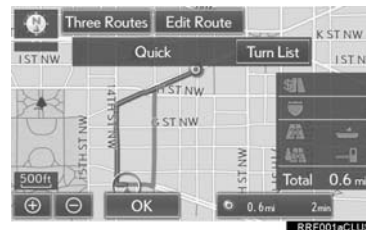


Selecting routes other than the one recommended (→P.110)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

3. NAVIGATION OPERATION

4. SETTING HOME AS THE DESTINATION

- 1 Press the "NAV" button.

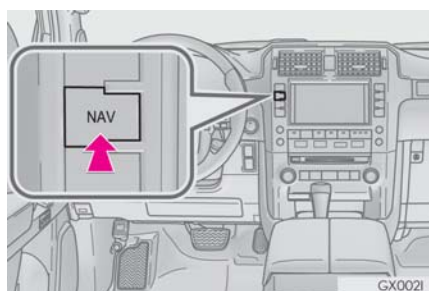

- 2 Select "Dest.".



- 3 Select "Go Home".



- 4 Select "OK".



Selecting routes other than the one recommended (→P.110)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

4. FUNCTION INDEX

1. FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	72
Displaying the current position	75
Viewing the current position vicinity map	81
Changing the scale	75
Changing the map orientation	77
Displaying map Information	83
Displaying the estimated travel/arrival time to the destination	116
Selecting the map mode	78
Displaying traffic information	90

Searching for destinations	Page
Searching for the destination	97
Changing the search area	98

► Route guidance

Before starting or during route guidance	Page
Starting route guidance	110
Editing the route	123
Viewing the entire route map	117
Pausing guidance	114
Adjusting route guidance volume	62
Deleting the destination	125

4. FUNCTION INDEX

► Useful functions

Address book	Page
Registering address book entries	134
Marking icons on the map	135
Information	Page
Displaying vehicle maintenance	65
Hands-free system (for cellular phone)	Page
Registering/connecting a Bluetooth® phone	40
Making a call on a Bluetooth® phone	305
Receiving a call on a Bluetooth® phone	311
Voice command system	Page
Operating the system with your voice	280
Peripheral monitoring system	Page
Viewing behind the rear of the vehicle	"Owner's Manual"

2

BASIC FUNCTION

1 BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN 28
2. TOUCH SCREEN GESTURES..... 30
3. TOUCH SCREEN OPERATION..... 31
4. HOME SCREEN OPERATION 32
5. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION..... 34
ENTERING LETTERS AND NUMBERS 34
LIST SCREEN..... 35
6. SCREEN ADJUSTMENT 38

2 Bluetooth® SETTINGS

1. REGISTERING/CONNECTING Bluetooth® DEVICE 40
REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME 40
REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME 41
PROFILES..... 43
2. SETTING Bluetooth® DETAILS 45
“Bluetooth* Setup” SCREEN 45
REGISTERING A Bluetooth® DEVICE 46
DELETING A Bluetooth® DEVICE..... 48
CONNECTING A Bluetooth® DEVICE 48
EDITING THE Bluetooth® DEVICE INFORMATION 50
“System Settings” SCREEN 53

3 OTHER SETTINGS

1. GENERAL SETTINGS..... 55
GENERAL SETTINGS SCREEN..... 55
2. VOICE SETTINGS..... 62
VOICE SETTINGS SCREEN..... 62
3. VEHICLE SETTINGS 64
MAINTENANCE 65

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

1. BASIC INFORMATION BEFORE OPERATION

1. INITIAL SCREEN

- 1 When the engine switch is in ACCESSORY or IGNITION ON mode, the initial screen will be displayed and the system will begin operating.



- Images shown on the initial screen can be changed to suit individual preferences. (→P.58)
- After a few seconds, the "Caution" screen will be displayed.
- After about 5 seconds, the "Caution" screen automatically switches to the map screen. (Select "Continue" to display the map screen.)

! WARNING

- When the vehicle is stopped with the engine running, always apply the parking brake for safety.

MAINTENANCE INFORMATION

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Maintenance Reminder" screen will be displayed when the navigation system is turned on.




- This screen goes off if the screen is not operated for several seconds.
- To prevent this screen from being displayed again, select "Do Not Display This Message Again".
- To register maintenance information: →P.65
- If  is selected, the registered phone number can be called.

RESTARTING THE SYSTEM

When system response is extremely slow, the system can be restarted.

- 1 Press and hold the “PWR/VOL” knob for 3 seconds or more.

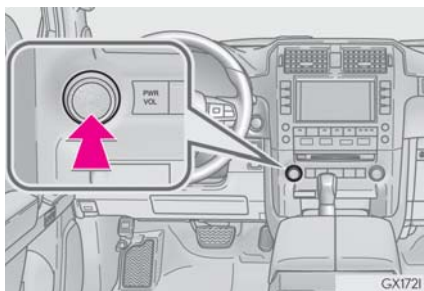



2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

2. TOUCH SCREEN GESTURES

Operations are performed by touching the touch screen directly with your finger.

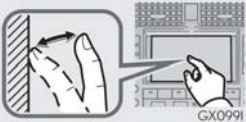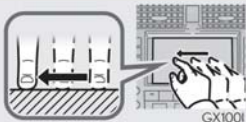Operation method	Outline	Main use
	Touch Quickly touch and release once.	Changing and selecting various settings.
	Drag* Touch the screen with your finger, and move the screen to the desired position.	Scrolling the lists
	Flick* Quickly move the screen by flicking with your finger.	Scrolling the map (→P.81)

*: The above operations may not be performed on all screens.

1. BASIC INFORMATION BEFORE OPERATION

3. TOUCH SCREEN OPERATION

This system is operated mainly by the buttons on the screen. (Referred to as screen buttons in this manual.)

- When a screen button is touched, a beep sounds. (To set the beep sound, see page 55.)



NOTICE

- To prevent damaging the screen, lightly touch the screen buttons with your finger.
- Do not use objects other than your finger to touch the screen.
- Wipe off fingerprints using a glass cleaning cloth. Do not use chemical cleaners to clean the screen, as they may damage the touch screen.

INFORMATION

- If the system does not respond to touching a screen button, move your finger away from the screen and then touch it again.
- Dimmed screen buttons cannot be operated.
- The displayed image may become darker and moving images may be slightly distorted when the screen is cold.
- In extremely cold conditions, the map may not be displayed and the data input by a user may be deleted. Also, the screen buttons may be harder than usual to depress.
- When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the "Display" screen or take off your sunglasses.
- When  is displayed on the screen, select  to return to the previous screen.

2

 
BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

4. HOME SCREEN OPERATION

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously.

- 1 Press the "HOME" button.



- 2 Check that the home screen is displayed.



- When a screen is selected, the selected screen will change to a full-screen display.


CUSTOMIZING THE HOME SCREEN

The display items/area on the home screen and the home screen layout can be changed.

- 1 Select .



- 2 Check that "Customize Home Screen" is displayed.

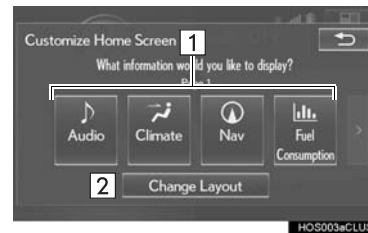

No.	Function	Page
1	Select to change the display items/area.	33
2	Select to change the home screen layout.	33

■ CHANGING THE DISPLAY ITEMS/AREA

- 1 Select the desired item.
- 2 Select the desired area.




INFORMATION

- When the selected item is already being displayed and another area is selected for that item, the item that it is replacing will be displayed in the original item's location.

■ CHANGING THE HOME SCREEN LAYOUT

- 1 Select "Change Layout".
- 2 Select the desired screen layout.

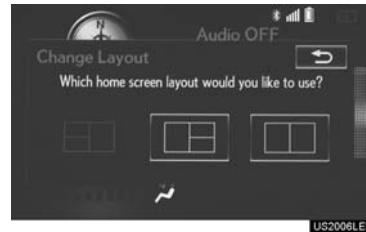

2

BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

5. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION

When searching by an address, name, etc., or entering data, letters and numbers can be entered via the screen.

ENTERING LETTERS AND NUMBERS



- On certain letter entry screens, letters can be entered in upper or lower case.

 : Select to enter in lower case.

 : Select to enter in upper case.

- Keyboard layout can be changed. (→P.55)

No.	Function
1	Select to enter desired characters.
2	Text field. Entered character(s) will be displayed.
3	During entering character(s), when there is only one available option for the next character(s), the next character(s) will be displayed in gray text in the text field automatically. Gray text is entered by selecting this button.
4	Select to erase one character. Select and hold to continue erasing characters.
5	Select to display the alphabet keys.
6	Select to display other symbols.

LIST SCREEN


DISPLAYING THE LIST

The list screen may be displayed after entering characters.

1 Enter characters and select "OK".



- Matching items from the database are listed even if the entered address or name is incomplete.
- The list will be displayed automatically if the maximum number of characters is entered or the number of matching items is 5 or less.

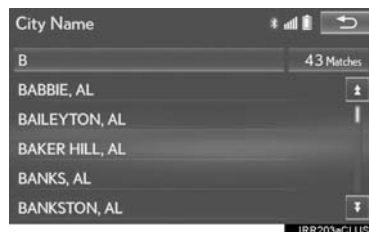


INFORMATION

- The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays "***" on the screen.

SELECTING ALL ITEMS

Some lists contain "Select All". If "Select All" is selected, it is possible to select all items.

1 Select "Select All".

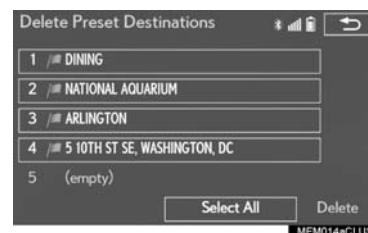

2


BASIC FUNCTION

"Unselect All": Unselect all items in the list.

1. BASIC INFORMATION BEFORE OPERATION

LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

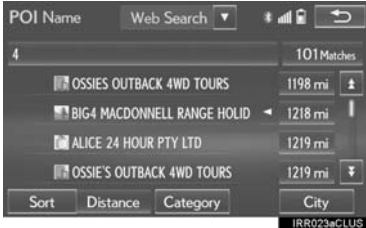


Icon	Function
	Select to skip to the next or previous page. Select and hold or to scroll through the displayed list.
	This indicates the displayed screen's position.
	If appears to the right of an item name, the complete name is too long to display. Select to scroll to the end of the name. Select to move to the beginning of the name.

SORTING

The order of a list displayed on the screen can be sorted in the order of distance from the current location, date, category, etc.

1 Select "Sort".

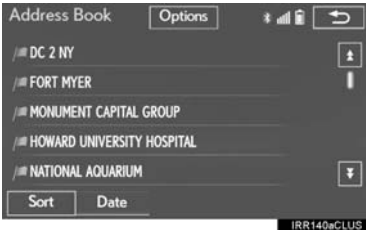


2 Select the desired sorting criteria.



CHARACTER JUMP BUTTONS IN LISTS

Some lists contain character screen buttons, "ABC", "DEF" etc., which allow a direct jump to list entries that begin with the same letter as the character screen button.

- 1 Select the desired character jump buttons.

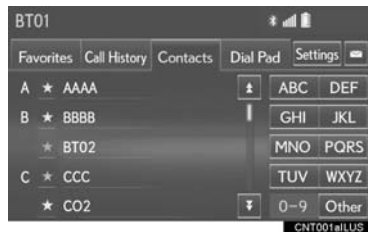

INFORMATION

- Every time the same character screen button is selected, the list starting with the subsequent character is displayed.

2


BASIC FUNCTION

1. BASIC INFORMATION BEFORE OPERATION

6. SCREEN ADJUSTMENT

The contrast and brightness of the screen display and the image of the camera display can be adjusted. The screen can also be turned off, and/or changed to either day or night mode. (For information regarding audio/visual screen adjustment: →P.166)


1 Press the “SETUP” button.

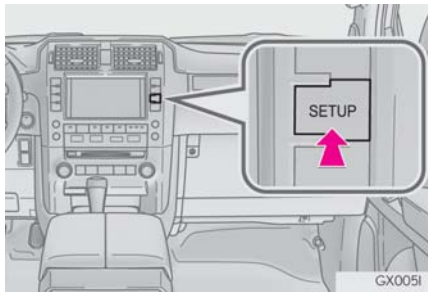

2 Select “Display”.



3 Select the items to be set.

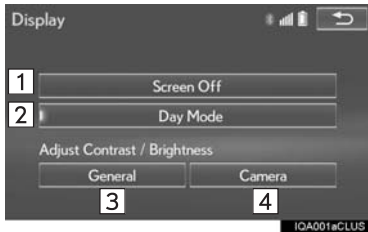

No.	Function	Page
1	Select to turn the screen off. To turn it on, press any button.	—
2	Select to turn day mode on/off.	39
3	Select to adjust the screen display.	39
4	Select to adjust the camera display.	

CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode. This feature is available when the headlight is switched on.

- 1 Select **"Day Mode"**.

INFORMATION

- If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the engine turned off.

ADJUSTING THE CONTRAST/ BRIGHTNESS

The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings.

- 1 Select **"General"** or **"Camera"**.
- 2 Select the desired item.



- "Display (General)" screen only: Select "<" or ">" to select the desired display.

Screen button	Function
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

2

BASIC FUNCTION

2. Bluetooth® SETTINGS

1. REGISTERING/CONNECTING Bluetooth® DEVICE

REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system.


Once the phone has been registered, it is possible to use the hands-free system. This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P.46

- 1 Turn the Bluetooth® connection setting of your cellular phone on.

- This function is not available when Bluetooth® connection setting of your cellular phone is set to off.

- 2 Press the  button.

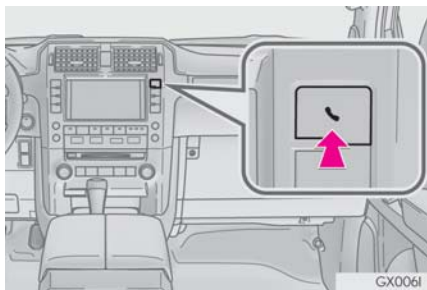

- Operations up to this point can also be performed by pressing the  switch on the steering wheel.

- 3 Select "Yes" to register a phone.



- 4 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.




- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select "Cancel".

5 Register the Bluetooth® device using your Bluetooth® device.

- A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

6 Check that the following screen is displayed when registration is complete.

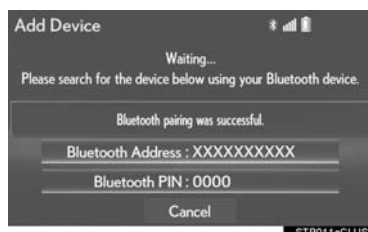

- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth® functions are not yet available.

7 Select "OK" when the connection status changes from "Connecting..." to "Connected".



- If an error message is displayed, follow the guidance on the screen to try again.

REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME

To use the Bluetooth® Audio, it is necessary to register an audio player with the system.

Once the player has been registered, it is possible to use the Bluetooth® Audio. This operation cannot be performed while driving.

For details about registering a Bluetooth® device: →P.46

2


BASIC FUNCTION

2. Bluetooth® SETTINGS

- 1 Turn the Bluetooth® connection setting of your audio player on.

● This function is not available when the Bluetooth® connection setting of your audio player is set to off.

- 2 Press the “AUDIO” button.

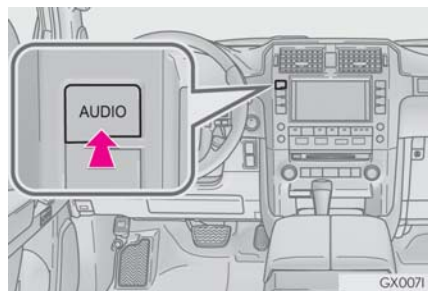


- 3 Select “Source”.



- 4 Select “Bluetooth*”.



- 5 Select “Connect”.

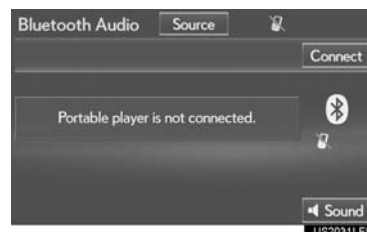

- 6 Follow the steps in “CONNECTING A Bluetooth® DEVICE” from “STEP 2”. (→P.48)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

PROFILES

This system supports the following services.

Bluetooth® Device	Spec.	Function	Requirements	Recommendations
Bluetooth® Phone/ Bluetooth® Audio Player	Bluetooth® Specification	Registering a Bluetooth® device	Ver.2.0	Ver.3.0 +EDR
Bluetooth® Device	Profile	Function	Requirements	Recommendations
Bluetooth® Phone	HFP (Hands-Free Profile)	Hands-free system	Ver. 1.0	Ver. 1.6
	OPP (Object Push Profile)	Transferring the contacts	Ver.1.1	Ver.1.2
	PBAP (Phone Book Access Profile)		Ver. 1.0	Ver. 1.1
	MAP (Message Access Profile)	Bluetooth® phone message	—	Ver. 1.0
	SPP (Serial Port Profile)	"LEXUS App Suite" function	—	Ver. 1.1
Bluetooth® Audio Player	A2DP (Advanced Audio Distribution Profile)	Bluetooth® audio system	Ver. 1.0	Ver. 1.2
	AVRCP (Audio/Visual Remote Control Profile)		Ver. 1.0	Ver. 1.4

2

BASIC FUNCTION

2. Bluetooth® SETTINGS

INFORMATION

- This system is not guaranteed to operate with all Bluetooth® devices.
- If your cellular phone does not support HFP, registering the Bluetooth® phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
- If the connected Bluetooth® device version is older than recommended or incompatible, the Bluetooth® device function may not work properly.
- Refer to <http://www.lexus.com/MobileLink> to find approved Bluetooth® phones for this system.




Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. Bluetooth® SETTINGS

2. SETTING Bluetooth® DETAILS

1 Press the “SETUP” button.

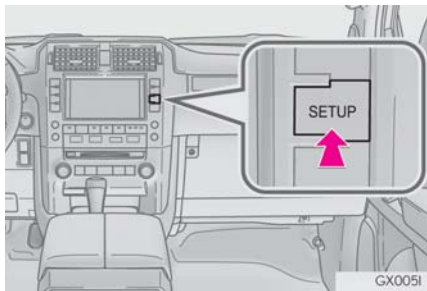


“Bluetooth* Setup” SCREEN



2

2 Select “Bluetooth*”.

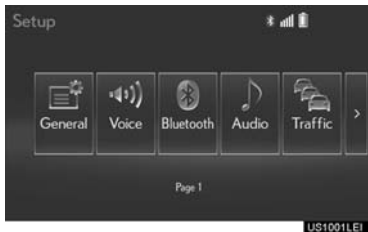

3 Select the desired item to be set.



Function	Page
Registering a Bluetooth® device	46
Deleting a Bluetooth® device	48
Connecting a Bluetooth® device	48
Editing the Bluetooth® device information	50
Bluetooth® system settings	53

BASIC FUNCTION

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. Bluetooth® SETTINGS

DISPLAYING THE "Bluetooth* Setup" SCREEN IN A DIFFERENT WAY

- 1 Press the "SETUP" button
- 2 Select "Phone".
- 3 Select "Connect Phone".



REGISTERING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices can be registered.

Bluetooth® compatible phones (HFP) and audio players (AVP) can be registered simultaneously.

This operation cannot be performed while driving.

- 1 Display the "Bluetooth* Setup" screen. (→P.45)

- 2 Select "Add".

► When another Bluetooth® device is connected

- To disconnect the Bluetooth® device, select "Yes".

► When 5 Bluetooth® devices have already been registered

- A registered device needs to be replaced. Select "Yes", and select the device to be replaced.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.



- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select **"Cancel"**.

- 4 Register the Bluetooth® device using your Bluetooth® device.

- A PIN-code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

- 5 Check that the following screen is displayed when registration is complete.



- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth® functions are not yet available.

- 6 Select **"OK"** when the connection status changes from "Connecting..." to "Connected".



- If an error message is displayed, follow the guidance on the screen to try again.

2

BASIC FUNCTION

DELETING A Bluetooth® DEVICE

- 1 Display the "Bluetooth* Setup" screen. (→P.45)
- 2 Select **"Remove"**.
- 3 Select the desired device.



- 4 Select **"Yes"** when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

INFORMATION

- When deleting a Bluetooth® phone, the contact data will be deleted at the same time.

CONNECTING A Bluetooth® DEVICE

Up to 5 Bluetooth® devices (Phones (HFP) and audio players (AVP)) can be registered.

If more than 1 Bluetooth® device has been registered, select which device to connect to.

- 1 Display the "Bluetooth* Setup" screen. (→P.45)
- 2 Select the device to be connected.



- Supported profile icons will be displayed.

 : Phone

 : Audio player

 : Phone/"LEXUS App Suite" service

- The profile icon for a currently connected device will be displayed in color.
- Selecting a profile icon which is not currently connected will switch the connection to the function.

- If the desired Bluetooth® device is not on the list, select **"Add"** to register the device. (→P.46)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3 Select the desired connection.



- ▶ When another Bluetooth® device is connected
 - To disconnect the Bluetooth® device, select "Yes".
- 4 Check that a confirmation screen is displayed when the connection is complete.
- If an error message is displayed, follow the guidance on the screen to try again.

INFORMATION

- It may take time if the device connection is carried out during Bluetooth® audio playback.
- Depending on the type of Bluetooth® device being connected, it may be necessary to perform additional steps on the device.
- When disconnecting a Bluetooth® device, it is recommended to disconnect using the navigation system.

AUTO CONNECTION MODE

To turn auto connection mode on, set "Bluetooth* Power" to on. (→P.53)
Leave the Bluetooth® device in a location where the connection can be established.

- When the engine switch is in ACCESSORY or IGNITION ON mode, the system searches for a nearby registered device.
- The system will connect with the registered device that was last connected, if it is nearby.

CONNECTING MANUALLY

When the auto connection has failed or "Bluetooth* Power" is turned off, it is necessary to connect Bluetooth® manually.

- 1 Press the "SETUP" button.
- 2 Select "Bluetooth*".
- 3 Follow the steps in "CONNECTING A Bluetooth® DEVICE" from "STEP 2". (→P.48)

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2

BASIC FUNCTION

■ RECONNECTING THE Bluetooth® PHONE


If a Bluetooth® phone is disconnected due to poor reception from the Bluetooth® network when the engine switch is in ACCESSORY or IGNITION ON mode, the system automatically reconnects the Bluetooth® phone.

- If a Bluetooth® phone is disconnected on purpose, such as turning it off, this does not happen. Reconnect the Bluetooth® phone manually.

EDITING THE Bluetooth® DEVICE INFORMATION


The Bluetooth® device's information can be displayed on the screen. The displayed information can be edited.

- 1 Display the "Bluetooth* Setup" screen. (→P.45)
- 2 Select the desired device to be edited.
- 3 Select "Device Info".

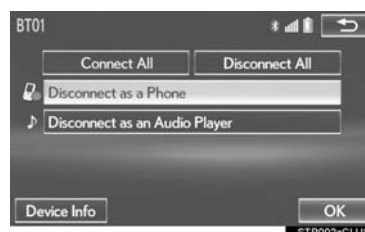

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4 Confirm and change the Bluetooth® device information.

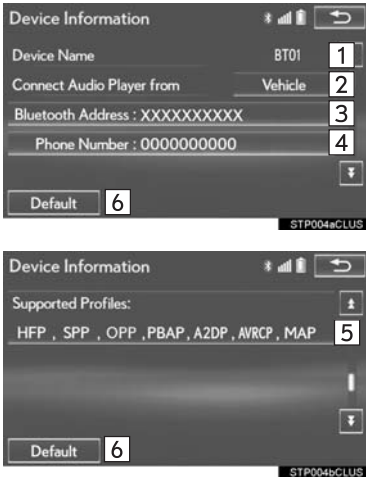

No.	Information
1	The name of the Bluetooth® device can be changed to a desired name. (→P.52)
2	Select to set the Bluetooth® audio player connection method. (→P.52)
3	Device address is unique to the device and cannot be changed.
4	Phone number of the Bluetooth® phone.
5	Compatibility profile of the Bluetooth® device.
6	Select to reset all setup items.

2

BASIC FUNCTION

INFORMATION

- If 2 Bluetooth® devices have been registered with the same device name, the devices can be distinguished referring to the device's address.
- Depending on the type of phone, some information may not be displayed.

2. Bluetooth® SETTINGS

CHANGING A DEVICE NAME

- 1 Select **"Device Name"**.
- 2 Enter the name and select **"OK"**.

INFORMATION

- Even if the device name is changed, the name registered in your Bluetooth® device does not change.

SETTING AUDIO PLAYER CONNECTION METHOD

- 1 Select **"Connect Audio Player from"**.
- 2 Select the desired connection method.



"Vehicle": Select to connect the audio system to the audio player.


"Device": Select to connect the audio player to the audio system.

- Depending on the audio player, the "Vehicle" or "Device" connection method may be best. As such, refer to the manual that comes with the audio player.
- To reset the connection method, select **"Default"**.

“System Settings” SCREEN

The Bluetooth® settings can be confirmed and changed.

- 1 Display the “Bluetooth* Setup” screen. (→P.45)
- 2 Select “System Settings”.
- 3 Select the desired item to be set.

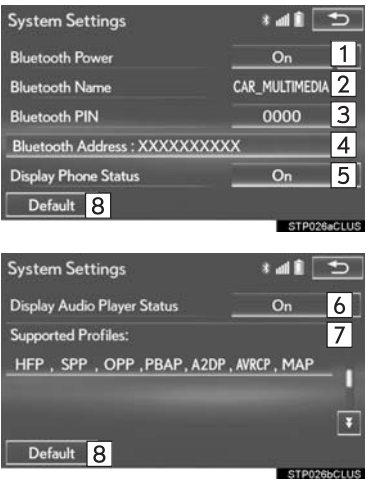

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

No.	Information	Page
1	Select to set Bluetooth® connection on/off.	54
2	Displays system name can be changed to a desired name.	54
3	PIN-code used when the Bluetooth® device was registered. It can be changed to a desired code.	54
4	Device address is unique to the device and cannot be changed.	—
5	Select to set the phone connection status display on/off.	—
6	Select to set the connection status display of the audio player on/off.	—
7	Compatibility profile of the system.	—
8	Select to reset all setup items.	—

2

BASIC FUNCTION

2. Bluetooth® SETTINGS

CHANGING "Bluetooth* Power"

- 1 Select "Bluetooth* Power".

When "Bluetooth* Power" is on:

The Bluetooth® device is automatically connected when the engine switch is in ACCESSORY or IGNITION ON mode.

When "Bluetooth* Power" is off:

The Bluetooth® device is disconnected, and the system will not connect to it next time.

INFORMATION

- While driving, the auto connection state can be changed from off to on, but cannot be changed from on to off.

EDITING THE SYSTEM NAME

- 1 Select "Bluetooth* Name".
- 2 Enter a name and select "OK".

EDITING THE PIN-CODE

- 1 Select "Bluetooth* PIN".
- 2 Enter a PIN-code and select "OK".


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. OTHER SETTINGS


1. GENERAL SETTINGS

Settings are available for auto screen change, operation sounds, etc.

1 Press the “SETUP” button.

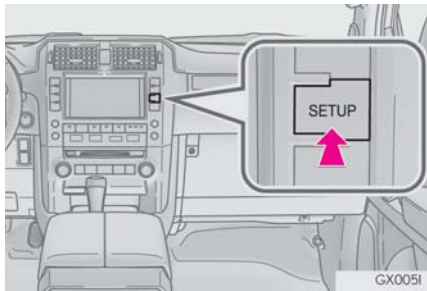



2 Select “General”.

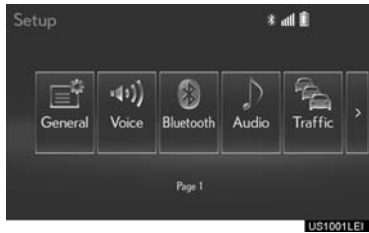

3 Select the items to be set.



GENERAL SETTINGS SCREEN

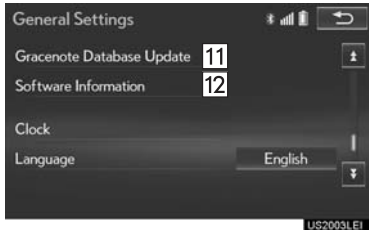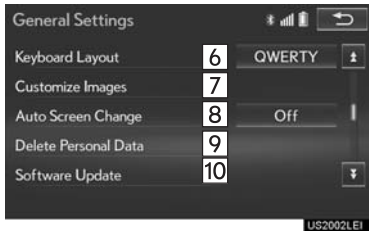

2

BASIC FUNCTION

No.	Function
1	Select to change the time zone and set the daylight saving time and automatic adjustment of the clock by GPS on/off. (→P.56)
2	Select to change the language.
3	Select to change the unit of measure for distance.

3. OTHER SETTINGS

No.	Function
4	Select to set the sound beeps on/off.
5	Select to change the screen button color.
6	Select to change the keyboard layout.
7	Select to customize the startup/screen off images. (→P.58)
8	Select to set automatic screen changes from the audio/air conditioning control screen to the previous screen to on/off. When set to on, the screen will automatically return to the previous screen from the audio/air conditioning control screen after 20 seconds.
9	Select to delete personal data. (→P.61)
10	Select to update software versions. For details, contact your Lexus dealer.
11	Select to update "Gracenote" database versions. For details, contact your Lexus dealer.
12	Select to display the software information. Notices related to third party software used in this product are enlisted. (This includes instructions for obtaining such software, where applicable.)

CLOCK SETTINGS

Used for changing time zones and the on/off settings of daylight saving time and automatic adjustment of the clock by GPS.


- 1 Display the "General Settings" screen. (→P.55)
- 2 Select "Clock".
- 3 Select the items to be set.



No.	Function
1	Select to change the time zone. (→P.57)
2	Select to set daylight saving time on/off.
3	Select to set automatic adjustment of the clock by GPS on/off. When set to on, the system will automatically adjust the clock to the current position's time zone when the vehicle moves to a different time zone.
4	When "Auto Adjust by GPS" is turned off, the clock can be manually adjusted. (→P.57)

■ SETTING THE TIME ZONE

- 1 Select “Time Zone”.
- 2 Select the desired time zone.

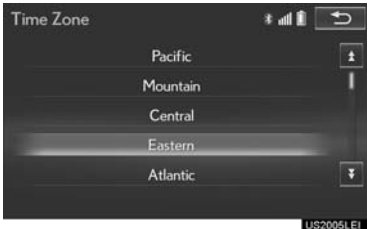


- If “Other” is selected, the zone can be adjusted manually. Select “+” or “-” to adjust the time zone.



■ MANUAL CLOCK SETTING

When “Auto Adjust by GPS” is turned “Off”, the clock can be manually adjusted.

- 1 Display the “Clock” screen. (→ P.56)
- 2 Select the items to be set.

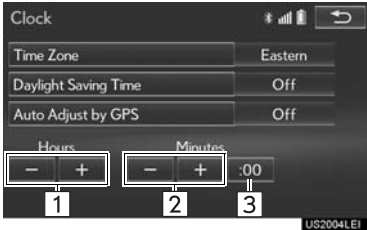

2

BASIC FUNCTION

No.	Function
1	Select “+” to set the time forward one hour and “-” to set the time back one hour.
2	Select “+” to set the time forward one minute and “-” to set the time back one minute.
3	Rounds to the nearest hour*.

*: e.g. 1:00 to 1:29 → 1:00
1:30 to 1:59 → 2:00

3. OTHER SETTINGS

CUSTOMIZING THE STARTUP AND SCREEN OFF IMAGES

An image can be copied from a USB memory and used as the startup and screen off Images.

When the engine switch is in ACCESSORY or IGNITION ON mode, the initial screen will be displayed. (→P.28)

When “Screen Off” on the “Display” screen is selected, the screen is turned off and the desired screen off image that is set is displayed. (To turn the screen off: →P.38)


- 1 Display the “General Settings” screen. (→P.55)
- 2 Select “Customize Images”.
- 3 Select the items to be set.




No.	Function	Page
1	Select to copy images from a USB memory.	59
2	Select to delete images.	61
3	Select to set an image as the startup or screen off image.	60

■ TRANSFERRING IMAGES

- 1 Slide the auxiliary box lid.

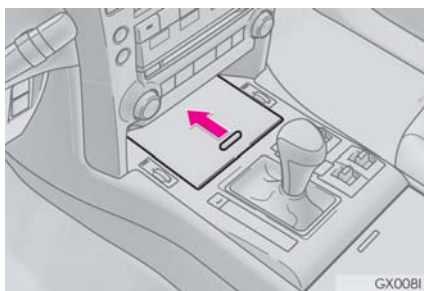


- 2 Connect a USB memory.

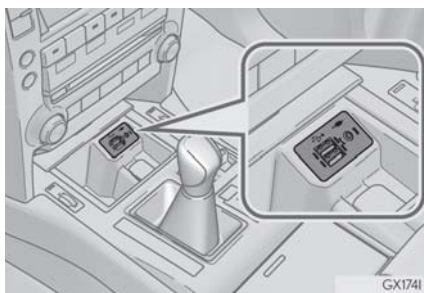

- Turn on the power of the USB memory if it is not turned on.

- 3 Select "Copy from USB".

- 4 Select the desired images from the list and then select "Copy".

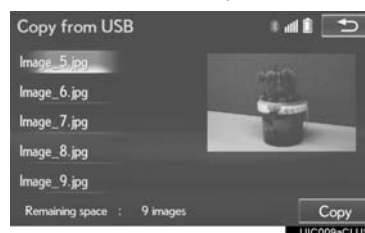

- The selected image is displayed on the right side of the screen. If the selected image file is broken or incompatible,  will be displayed.
- The remaining number of image files that can be transferred is displayed at the bottom of the screen.

- 5 Select "Yes" when the confirmation screen appears.

2

BASIC FUNCTION


3. OTHER SETTINGS

INFORMATION

- When saving image files to a USB memory to be transferred to the navigation system, save the images in a folder named "Image" (I-m-a-g-e, case sensitive). If a different folder name is used, the navigation system will not recognize the image files.
- The compatible file extensions are JPG and JPEG.
- An image's file name, including file extension, can be up to 32 characters.
- Image files of 5 MB or less can be transferred.
- Up to 10 images can be transferred to the navigation system.

SETTING THE STARTUP AND SCREEN OFF IMAGES

- 1 Select "Set Images".
- 2 Select the desired image.

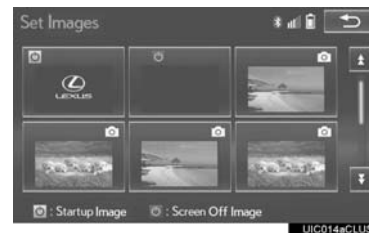

- 3 Select the desired items to be set.



No.	Function
1	Select to set an image as the startup image.
2	Select to set an image as the screen off image.
3	Select to set an image as both the startup and screen off image.

■ DELETING TRANSFERRED IMAGES

- 1 Select **"Delete Images"**.
- 2 Select the images to be deleted and select **"Delete"**.



- 3 Select **"Yes"** when the confirmation screen appears.

■ DELETING PERSONAL DATA

- 1 Display the **"General Settings"** screen. (→P.55)
- 2 Select **"Delete Personal Data"**.
- 3 Select **"Delete"**.



- 4 Select **"Yes"** when the confirmation screen appears.

- Registered or changed personal settings will be deleted or returned to their default conditions.

For example:

- General settings
- Navigation settings
- Audio settings
- Phone settings
- Lexus Enform settings

2


BASIC FUNCTION

3. OTHER SETTINGS


2. VOICE SETTINGS

Voice guidance etc. can be set.

- 1 Press the "SETUP" button.

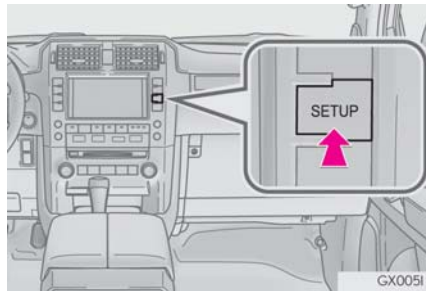

- 2 Select "Voice".

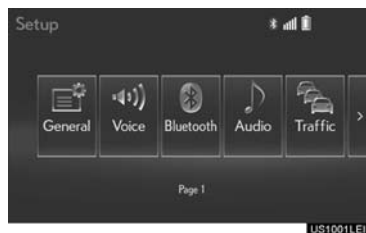


- 3 Select the items to be set.



INFORMATION

- "Voice Settings" screen can also be displayed from the voice recognition top screen. (→P.282)

VOICE SETTINGS SCREEN

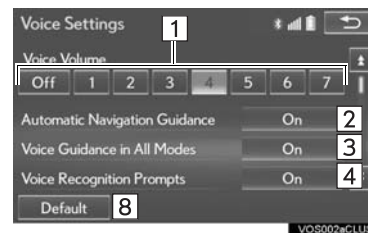

No.	Function
1	Select to adjust the volume of voice guidance.
2	Select to set the voice guidance during route guidance on/off.
3	Select to set the voice guidance during audio/visual and/or air conditioning system use on/off.
4	Select to set the voice recognition prompts on/off.
5	Select to train voice recognition. The voice command system adapt the user accent.
6	When "On" is selected, expanded voice commands can be operated using voice commands. (→P.287)
7	Select to set the beep sound of navigation guidance.
8	Select to reset all setup items.

2


BASIC FUNCTION

3. OTHER SETTINGS

3. VEHICLE SETTINGS

Settings are available for maintenance, vehicle customization and intuitive parking assist-sensor.

1 Press the “SETUP” button.

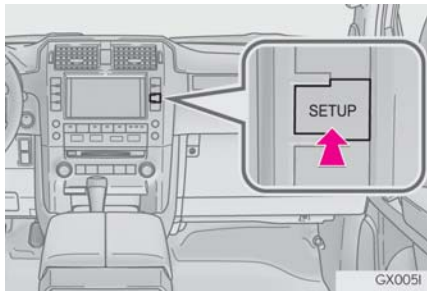

2 Select “Vehicle”.



3 Select the desired item to be set.



No.	Function	Page
1	Select to set maintenance.	65
2	Select to set vehicle customization.	Owner's Manual
3	Select to set intuitive parking assist.	Owner's Manual

MAINTENANCE

When the navigation system is turned on, the “Maintenance Reminder” screen displays when it is time to replace a part or certain components. (→P.28)

- 1 Display the “Vehicle Settings” screen. (→P.64)
- 2 Select “Maintenance”.
- 3 Select the desired item.



No.	Function
1	Select to set the condition of parts or components.
2	Select to add new information items separately from provided ones.
3	Select to cancel all conditions which have been entered.
4	Select to reset the item which has expired a condition.
5	Select to call the registered dealer.
6	Select to register/edit dealer information. (→P.67)
7	When set to on, the indicator will illuminate. The system is set to give maintenance information with the “Maintenance Reminder” screen. (→P.28)

2

BASIC FUNCTION

INFORMATION

- When the vehicle needs to be serviced, the screen button color will change to orange.

3. OTHER SETTINGS

MAINTENANCE INFORMATION SETTING

- 1 Select the desired part or component screen button.
- 2 Set the conditions.

INFORMATION

- For scheduled maintenance information, refer to "Warranty and Services Guide/ Owner's Manual Supplement/Scheduled Maintenance".
- Depending on driving or road conditions, the actual date and distance that maintenance should be performed may differ from the stored date and distance in the system.


No.	Function
1	Select to enter the next maintenance date.
2	Select to enter the driving distance until the next maintenance check.
3	Select to cancel the conditions which have been entered.
4	Select to reset the conditions which have expired.

- 3 Select "OK" after entering the conditions.

DEALER SETTING


Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- 1 Select "Set Dealer".
- 2 Select the desired item to search for the location. (→P.95)

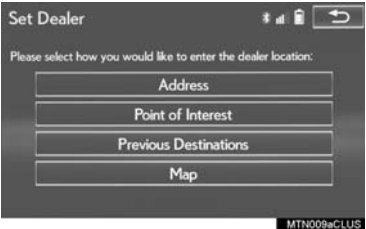

- The editing dealer screen appears after setting the location.

- 3 Select the items to be edited.

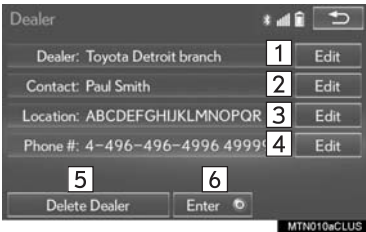

No.	Function	Page
1	Select to enter the name of a dealer.	68
2	Select to enter the name of a dealer member.	68
3	Select to set the location.	68
4	Select to enter the phone number.	68
5	Select to delete the dealer information displayed on the screen.	—
6	Select to set the displayed dealer as a destination.	110

2

BASIC FUNCTION

3. OTHER SETTINGS

■ EDITING DEALER OR CONTACT NAME

- 1 Select **"Edit"** next to **"Dealer"** or **"Contact"**.
- 2 Enter the name and select **"OK"**.

■ EDITING THE LOCATION

- 1 Select **"Edit"** next to **"Location"**.
- 2 Scroll the map to the desired point (→P.82) and select **"OK"**.

■ EDITING PHONE NUMBER

- 1 Select **"Edit"** next to **"Phone #"**.
- 2 Enter the phone number and select **"OK"**.

3

NAVIGATION SYSTEM

1 BASIC OPERATION

1. QUICK REFERENCE	72
MAP SCREEN	72
NAVIGATION OPTIONS SCREEN	74
2. MAP SCREEN OPERATION	75
CURRENT POSITION DISPLAY	75
MAP SCALE	75
ORIENTATION OF THE MAP	77
SWITCHING THE MAP MODE	78
SCREEN SCROLL OPERATION	81
ADJUSTING LOCATION IN SMALL INCREMENTS	82
3. MAP SCREEN INFORMATION	83
DISPLAYING MAP INFORMATION	83
DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET	87
STANDARD MAP ICONS	89
4. TRAFFIC INFORMATION	90
DISPLAYING TRAFFIC INFORMATION ON THE MAP	93

1

2

3

4

5

6

7

8

2 DESTINATION SEARCH

1. DESTINATION SEARCH SCREEN.....	95
2. SEARCH OPERATION	97
SELECTING SEARCH AREA.....	98
SETTING HOME AS DESTINATION	98
SETTING PRESET DESTINATIONS AS DESTINATION	99
SEARCHING BY ADDRESS.....	99
SEARCHING BY POINT OF INTEREST	101
DESTINATION SEARCH BY DESTINATION ASSIST	105
SEARCHING FROM PREVIOUS DESTINATIONS.....	106
SEARCHING BY ADDRESS BOOK.....	106
SEARCHING BY EMERGENCY	107
SEARCHING BY INTERSECTION AND FREEWAY	107
SEARCHING BY MAP	109
SEARCHING BY COORDINATES.....	109
3. STARTING ROUTE GUIDANCE	110
STARTING ROUTE GUIDANCE	110
PAUSING GUIDANCE.....	114

3 ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN	115
SCREEN FOR ROUTE GUIDANCE.....	115
ROUTE OVERVIEW	117
DURING FREEWAY DRIVING	118
WHEN APPROACHING INTERSECTION.....	120
TURN LIST SCREEN.....	120
TURN-BY-TURN ARROW SCREEN.....	121
2. TYPICAL VOICE GUIDANCE PROMPTS.....	122
3. EDITING ROUTE	123
ADDING DESTINATIONS	124
REORDERING DESTINATIONS	124
DELETING DESTINATIONS	125
SETTING ROUTE PREFERENCES.....	125
SELECTING ROUTE TYPE	126
DETOUR SETTING	126
STARTING FROM ADJACENT ROAD.....	128

4 MEMORY POINTS

1. MEMORY POINTS SETTINGS..... 129
 - SETTING UP HOME 130
 - SETTING UP PRESET DESTINATIONS..... 132
 - SETTING UP ADDRESS BOOK 134
 - SETTING UP AREAS TO AVOID 137
 - DELETING PREVIOUS DESTINATIONS..... 140

5 SETUP

1. DETAILED NAVIGATION SETTINGS..... 141
 - SCREENS FOR NAVIGATION SETTINGS..... 142
2. TRAFFIC SETTINGS 147
 - SCREEN FOR TRAFFIC SETTINGS..... 147
 - AUTO AVOID TRAFFIC 148

6 TIPS FOR THE NAVIGATION SYSTEM

1. GPS (GLOBAL POSITIONING SYSTEM) 149
 - LIMITATIONS OF THE NAVIGATION SYSTEM 149
2. MAP DATABASE VERSION AND COVERED AREA..... 152
 - MAP INFORMATION 152
 - ABOUT THE MAP DATA 153

1

2

3

4

5

6

7


8

1. BASIC OPERATION

1. QUICK REFERENCE

MAP SCREEN

To display this screen, press the “NAV” button.

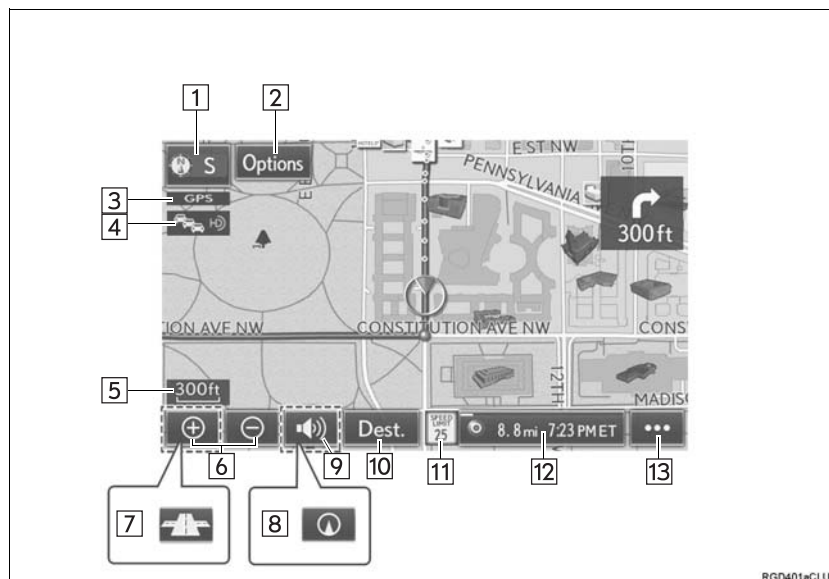

RGD401aCLUS

No.	Name	Function	Page
[1]	2D north up, 2D heading up or 3D heading up symbol	Indicates whether the map orientation is set to north-up or heading-up. The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north). In 3D map, only a heading-up view is available.	77
[2]	Options button	Select to display the “Navigation Options” screen.	74
[3]	“GPS” mark (Global Positioning System)	Shows that the vehicle is receiving signals from the GPS.	149

No.	Name	Function	Page
4	Traffic indicator	Shows that traffic information is received. Select to start voice guidance for traffic information. When traffic information is received via HD, HD mark is displayed on the right.	90
5	Scale indicator	This figure indicates the map scale.	75
6	Zoom in/out button	Select to magnify or reduce the map scale. When either button is selected, the map scale indicator bar appears at the bottom of the screen.	75
7	Footprint map button	Select to display the footprint map screen.	76
8	Current position button	Select to display the current position address.	—
9	Voice guidance button	Select to repeat voice guidance.	122
10	Destination button	Select to display the "Destination" screen.	95
11	Speed limit icon	Indicates the speed limit on the current road. The display of the speed limit icon can be set to on/off.	83
12	Route information bar	Displays the current street name, or the distance with the estimated travel time/arrival time to the destination. The route information bar fills from left to right as the vehicle progresses on the route.	116
13	Route information button	Select to change the display between the current street name and the distance with the estimated travel/arrival time.	

NAVIGATION OPTIONS SCREEN

The navigation options allow you to change map configurations, display/hide POI icons, and edit the navigation routes. To display the “Navigation Options” screen, press the “NAV” button, then select “Options” on the map screen.




No.	Function	Page
1	Select to display the desired map configuration.	78
2	Select to set display of the map information such as POI icons, route trace, speed limit, etc.	83
3	Select to display the map version and coverage area.	152
4	Select to edit the set route.	123
5	Select to pause or resume route guidance.	114
6	Select to display the overview of the entire route.	117

1. BASIC OPERATION

2. MAP SCREEN OPERATION

CURRENT POSITION DISPLAY

- 1 Press the "NAV" button.

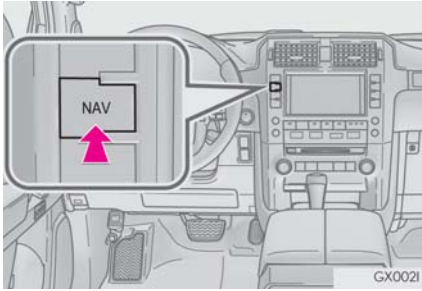

- 2 Check that the current position map is displayed.



- To correct the current position manually:
→P.145

INFORMATION

- While driving, the current position mark is fixed on the screen and the map moves.
- The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.
- After the battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.

MAP SCALE

- 1 Select or to change the scale of the map screen.



- The scale indicator bar appears at the bottom of the screen.
- Select and hold or to continue changing the scale of the map screen.
- The scale of the map screen can also be changed by selecting the scale bar directly. This function is not available while driving.

INFORMATION

- The map scale is displayed above the zoom in button at the bottom left of the screen.
- In areas where the footprint map is available the map scale changes from to when at the minimum range.

1. BASIC OPERATION

FOOTPRINT MAP

For areas covered by the footprint map (some major cities), a footprint map on a scale of 75 ft. (25 m) can be selected.

When the map is scaled down to 150 ft. (50 m),  changes to  and can be selected to display the footprint map.

- 1 Select  on the map screen.
- 2 Check that the footprint map is displayed.



- To return to the normal map display, select .

INFORMATION

- If the map or the current position is moved to the area which is not covered by the footprint map, the screen scale automatically changes to 150 ft. (50 m).
- On the footprint map, a one way street is displayed by .
- Scrolling on the footprint map is not available while driving.

Building footprints in the database were created and provided by HERE.

3D CITY MODEL MAP

A 3D city model map can be displayed for some areas in major cities when the map scale is 700 ft. (200 m) or less on the 3D map screen.



- To display the normal map, select  E .


INFORMATION

- The 3D city model map can be set the display on/off. (→P.141)

ROTATING 3D MAP

3D map and 3D city model map can be rotated when arrows appear around the cursor while scrolling.

- 1 Select an arrow to rotate.

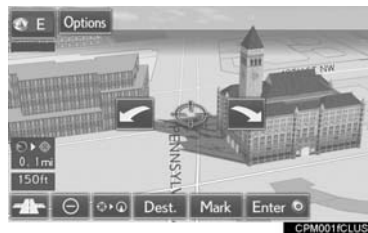

INFORMATION

- The viewing angle of the 3D map can be changed. (→P.144)

ORIENTATION OF THE MAP

The orientation of the map can be changed between 2D north-up, 2D heading-up and 3D heading-up by selecting the orientation symbol displayed at the top left of the screen.

- 1 Select ,  or .

- ▶ North-up screen



- ▶ Heading-up screen



- ▶ 3D screen



1. BASIC OPERATION

 **E** : North-up symbol

Regardless of the direction of vehicle travel, north is always up.

 **E** : Heading-up symbol

The direction of vehicle travel is always up.

 **E** : 3D Heading-up symbol


The direction of vehicle travel is always up.

- The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north).

SWITCHING THE MAP MODE

1 Select “Options” on the map screen.

2 Select “Map Mode”.

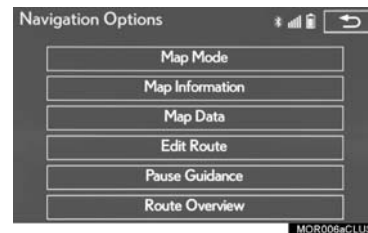

3 Select the desired configuration button.



No.	Function	Page
1	Select to display the single map screen.	79
2	Select to display the dual map screen.	79
3	Select to display the compass mode screen.	80
4	Select to display the turn list screen.	120
5	Select to display the freeway exit list screen.	118
6	Select to display the intersection guidance screen or the guidance screen on the freeway.	120
7	Select to display the turn-by-turn arrow screen.	121

- Depending on the conditions, certain screen configuration buttons cannot be selected.

■ MAP ONLY



■ DUAL MAP



- The map on the left is the main map.

1. BASIC OPERATION

► Editing right map

The right side map can be edited.

- 1 Select any point on the right side map.
- 2 Select the desired item.



No.	Function	Page
1	Select to change the orientation of the map.	77
2	Select to display POI icons.	84
3	Select to show traffic information.	90
4	Select to change the map scale.	75

- When set to on, the indicator will illuminate.

■ COMPASS

Information about the destination, current position and a compass is displayed on the screen.



INFORMATION

- The destination mark is displayed in the direction of the destination. When driving, refer to the longitude and latitude coordinates, and the compass, to make sure that the vehicle is headed in the direction of the destination.
- When the vehicle travels out of the coverage area, the guidance screen changes to the whole compass mode screen.

SCREEN SCROLL
OPERATION

Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.



No.	Information/Function
1	Cursor mark
2	Distance from the current position to the cursor mark.
3	Select to set as a destination. When selecting “Go to” on the following map screen, the navigation system performs a search for the route. (→P.110) If a destination has already been set, “Go to” and “Add to Route” will be displayed. “Go to”: Select to delete the existing destination(s) and set a new one. “Add to Route”: Select to add a destination.
4	Select to register as a memory point. To change the icon, name, etc.: →P.134
5	Select to return to the current position.

- To scroll over the map screen, touch the screen with your finger, and move the screen to the desired position or quickly move the screen by flicking with your finger. (→P.30)
- If a finger touches and holds the map screen, it will continue scrolling in that direction until the finger is removed. (3D map only)

ADJUSTING LOCATION IN SMALL INCREMENTS

The cursor location can be adjusted in small increments when **“Adjust Location”** is selected on the setting map screen.

Also, when changing the location of memory points on the editing screen (→P.136) and adjusting the current position mark manually on the “Calibration” screen (→P.145), 8 directional arrows may appear for this purpose.

- 1 Select one of the 8 directional arrows to move the cursor to the desired point and then select **“OK”**.




1. BASIC OPERATION

3. MAP SCREEN INFORMATION


DISPLAYING MAP INFORMATION

Information such as POI icons, route trace, speed limit, etc. can be displayed on the map screen.

- 1 Select “Options” on the map screen.
- 2 Select “Map Information”.

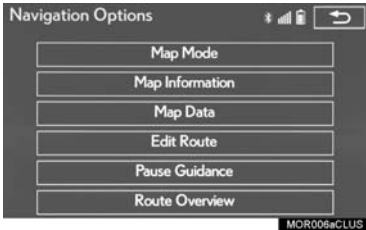

- 3 Select the desired items to be displayed.

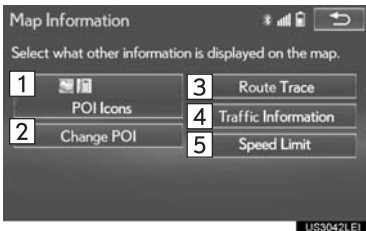


No.	Function	Page
1	Select to display the selected POI icons.	—
2	Select to select or change POI icons.	84
3	Select to display route trace.	86
4	Select to display traffic information.	90
5	Select to display speed limit icon.	—

● When set to on, the indicator will illuminate.

3 NAVIGATION SYSTEM


SELECTING THE POI ICONS

- 1 Display the "Map Information" screen. (→P.83)
- 2 Select "Select POI".

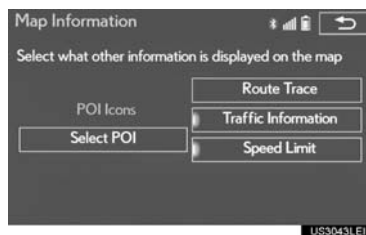

- When the POI icons to be displayed on the map screen have already been set, "Change POI" is displayed.


- 3 Select the desired POI category and select "OK".

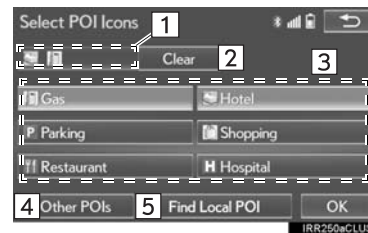

No.	Information/Function	Page
1	Displays up to 5 selected POI icons on the map screen.	–
2	Select to cancel the selected POI icons.	–
3	Displays up to 6 POI icons as favorite POI categories	143
4	Select to display other POI categories if the desired POIs cannot be found on the screen.	85
5	Select to search for the nearest POIs.	85

■ SELECTING OTHER POI ICONS TO BE DISPLAYED

- 1 Select "Other POIs".
- 2 Select the desired POI categories and select "OK".

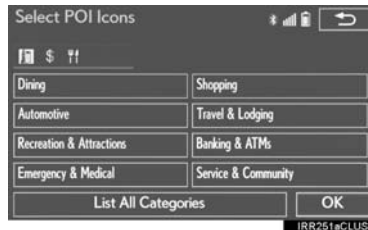

"List All Categories": Select to display all POI categories. To add more POI categories, select **"More"**.

■ DISPLAYING THE LOCAL POI LIST


POIs that are within 20 miles (32 km) of the current position will be listed from among the selected categories.

- 1 Select **"Find Local POI"**.
- 2 Select the desired POI.



"Near...": Select to search for POIs near the current position or along the route.

- 3 Check that the selected POI is displayed on the map screen. (→P.81)

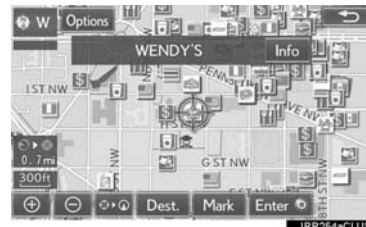

3

NAVIGATION SYSTEM

1. BASIC OPERATION

► When “Near...” is selected

- 1 Select the desired item.



“Near Here”: Select to search for POIs near the current position.

“Along My Route”: Select to search for POIs along the route.

ROUTE TRACE

The traveled route can be stored and re-traced on the map screen. This feature is available when the map scale is 30 miles (50 km) or less.

- 1 Display the “Map Information” screen. (→P.83)
- 2 Select “Route Trace”.
 - The “Route Trace” indicator illuminates and the route trace starts.
- 3 Check that the traveled line is displayed.



■ STOP RECORDING THE ROUTE TRACE

- 1 Select **"Route Trace"** again.
- 2 A confirmation screen will be displayed.
"Yes": Select to keep the recorded route trace.
"No": Select to erase the recorded route trace.


INFORMATION

- The traveled route can be stored up to 124 miles (200 km).


DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

When the cursor is placed over an icon on the map screen, the name bar is displayed on the upper part of the screen. If **"Info"** appears on the right side of the name bar, detailed information can be displayed.


- 1 Place the cursor over an icon.
- 2 Select **"Info"**.

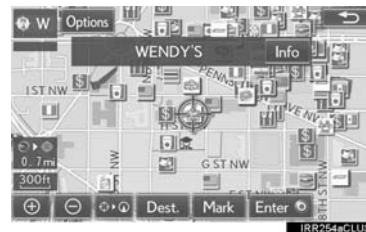

► POI information

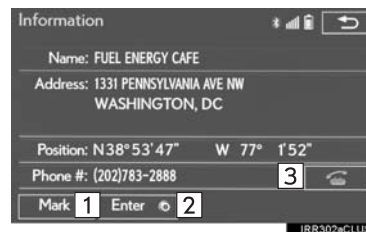

► Memory point information

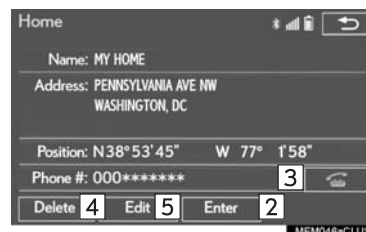


3

NAVIGATION SYSTEM

1. BASIC OPERATION

► Destination information

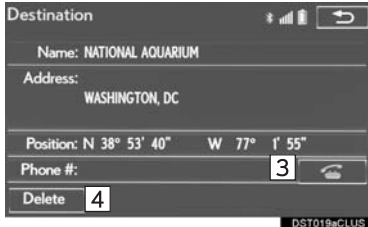

► Traffic information



No.	Function
1	Select to register as a memory point. To change the icon, name, etc.: →P.134
2	Select to set as a destination.
3	Select to call the registered number.
4	Select to delete destination or memory point.
5	Select to display the edit memory point screen.
6	Select to display detailed information.

INFORMATION

- Even when traffic information is not currently being received, traffic information and “Info” will be displayed for a while after traffic information has been received.

STANDARD MAP ICONS


Icon	Name
	Island
	Park
	Industry
	Business facility
	Airport
	Military
	University
	Hospital
	Stadium
	Shopping mall
	Golf

1. BASIC OPERATION

4. TRAFFIC INFORMATION

Traffic data can be received via HD or LEXUS App Suite to display traffic information on the map screen.


1 Press the “INFO/APPS” button.

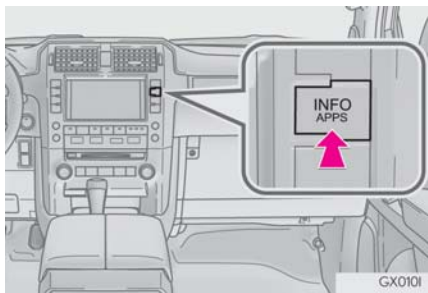

2 Select “Traffic Incidents”.



3 Select the desired item.

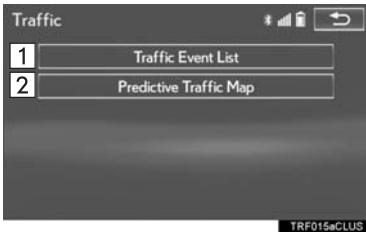


No.	Function	Page
1	Select to display a list of current traffic information.	91
2	Select to display a map with predictive traffic data.	92

DISPLAYING TRAFFIC INFORMATION

A list of current traffic information can be displayed along with information on the incident's distance and position relative to the vehicle.

- 1 Display the "Traffic" screen. (→P.90)
- 2 Select **"Traffic Event List"**.
- 3 Select the desired traffic information.

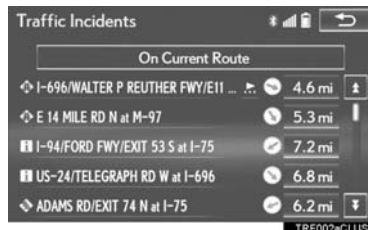

"On Current Road": Select to display traffic information for the current road.

"On Current Route": Select to display traffic information for the set route.

- When set to on, the indicator will illuminate.

- 4 Check that the traffic information is displayed.



"Detail": Select to display detailed traffic information.

3

NAVIGATION SYSTEM

1. BASIC OPERATION

DISPLAYING PREDICTIVE TRAFFIC INFORMATION

A map with predictive traffic data can be displayed.

- 1 Display the "Traffic" screen. (→P.90)
- 2 Select "**Predictive Traffic Map**".
- 3 Scroll the map to the desired point and set the time of predictive traffic information. Then select "**Info**".



- The time of the predictive traffic information can be displayed in 15-minute steps up to +45 minutes.

"+": Moves the time forward 15 minutes.

"-": Moves the time back 15 minutes.


- 4 Check that the traffic information is displayed.




"**Detail**": Select to display detailed traffic information.

DISPLAYING TRAFFIC INFORMATION ON THE MAP

- 1 Select "Options" on the map screen.
- 2 Select "Map Information".

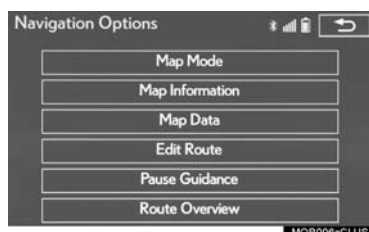


- 3 Select "Traffic information".

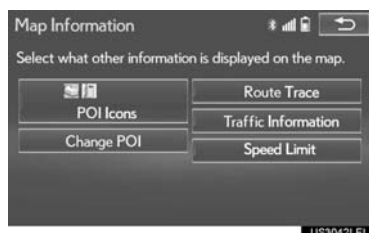

- When set to on, the indicator will illuminate.

- 4 Check that the traffic information is displayed.

► On the map screen

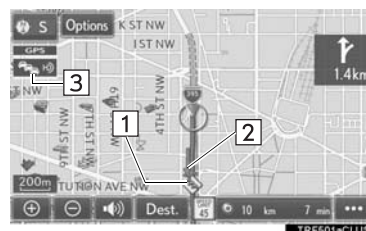

► On the freeway information screen



3

NAVIGATION SYSTEM


1. BASIC OPERATION

No.	Information/Function
1	The icons show traffic incident, road repair, traffic obstacles, etc. Select to display traffic information and start voice guidance for the traffic information.
2	The color of the arrow changes depending on the traffic information received.
3	The indicator is displayed as follows.  : Traffic information has been received.  : Traffic information has been received via HD. No icon: Any traffic information has not been received.

2. DESTINATION SEARCH

1. DESTINATION SEARCH SCREEN

The “Destination” screen enables to search for a destination. To display the “Destination” screen, press the “NAV” button, then select “Dest.” on the map screen.

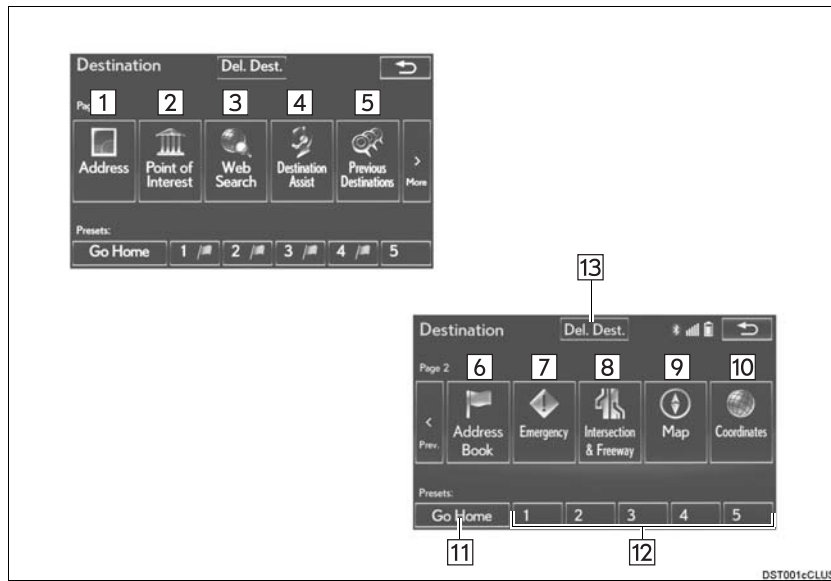

3

NAVIGATION SYSTEM


2. DESTINATION SEARCH

No.	Function	Page
1	Select to search for a destination by address.	99
2	Select to search for a destination by point of interest.	101
3	Select to search for a destination by online database.	362
4	Select to search for a destination via the Lexus response center.	367
5	Select to search for a destination from previously set destinations.	106
6	Select to search for a destination from a registered entry in "Address Book".	106
7	Select to search for a destination from emergency service points.	107
8	Select to search for a destination by intersection or freeway entrance/exit.	107
9	Select to search for a destination by the last displayed map.	109
10	Select to search for a destination by coordinates.	109
11	Select to set a destination by home.	98
12	Select to set a destination from preset destinations.	99
13	Select to delete set destinations.	125

2. DESTINATION SEARCH

2. SEARCH OPERATION

- 1 Press the "NAV" button.

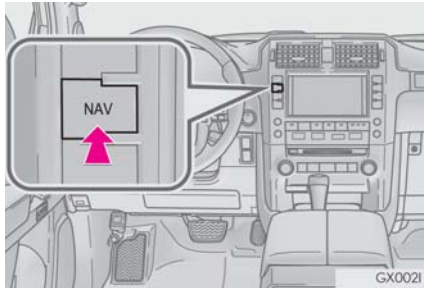

- 2 Select "Dest.".




- 3 Search for a destination.



- There are different kinds of methods to search for a destination. (→P.95)

- 4 Select "Go" when the confirm destination screen is displayed.

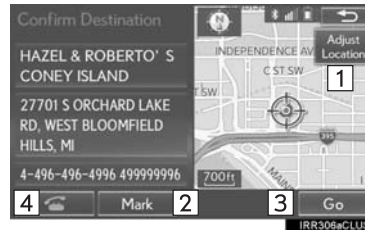

No.	Function
1	Select to adjust the position in smaller increments. (→P.82)
2	Select to register as a memory point.
3	Select to search for the route. (→P.110) If a destination has already been set, "Go Directly" and "Add to Route" will be displayed. "Go Directly": Select to delete the existing destination(s) and set a new one. "Add to Route": Select to add a destination.
4	Select to call the registered number.


3 NAVIGATION SYSTEM

2. DESTINATION SEARCH

SELECTING SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using **“Address”, “Point of Interest”** or **“Intersection & Freeway”**.

- 1 Display the **“Destination”** screen. (→P.97)
- 2 Select **“Address”, “Point of Interest”** or **“Intersection & Freeway”**.
- 3 Select **“Select State/Province”** or **“Change State/Province”**.

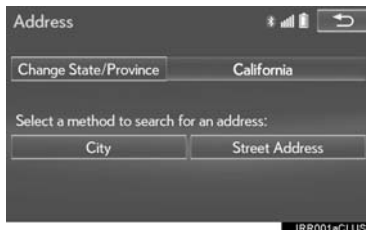

- If a state (province) has not been selected yet, **“Select State/Province”** is displayed.

- 4 Select the desired state (province).



- To change countries, select the **“United States”, “Canada”** or **“Mexico”** tab.
- For map database information and updates:
→P.152

SETTING HOME AS DESTINATION


To use this function, it is necessary to register a home address. (→P.130)

- 1 Display the **“Destination”** screen. (→P.97)
- 2 Select **“Go Home”**.
 - The navigation system performs a search for the route and the entire route map is displayed. (→P.110)

SETTING PRESET DESTINATIONS AS DESTINATION

To use this function, it is necessary to register preset destinations to the preset screen buttons (1-5). (→P.132)

- 1 Display the “Destination” screen. (→P.97)
- 2 Select any of the preset destination buttons (1-5).

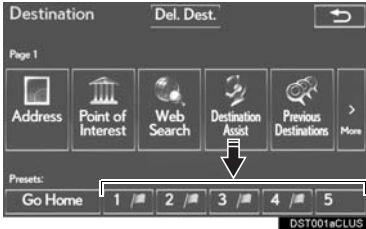


- The navigation system performs a search for the route and the entire route map is displayed. (→P.110)

SEARCHING BY ADDRESS

There are 2 methods to search for a destination by address.

- 1 Display the “Destination” screen. (→P.97)
- 2 Select “Address”.
- 3 Select the desired search method.

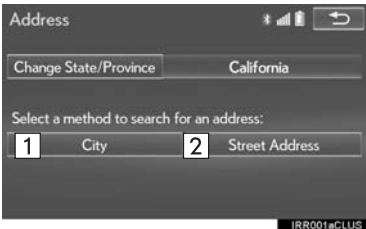

No.	Function	Page
1	Select to search by city.	100
2	Select to search by street address.	100

3
NAVIGATION SYSTEM

2. DESTINATION SEARCH

SEARCHING BY CITY

- 1 Select "City".
- 2 Enter a city name and select "OK".



"Last 5 Cities": Select the city name from the list of the last 5 cities.

- 3 Select the desired city name.
 - 4 Enter a street name and select "OK".
 - 5 Select the desired street name.
 - 6 Enter a house number and select "OK".
- If the same address exists, the address list screen will be displayed. Select the desired address.

SEARCHING BY STREET ADDRESS

- 1 Select "Street Address".
- 2 Enter a house number and select "OK".



- 3 Enter a street name and select "OK".
 - 4 Select the desired street name.
 - 5 Enter a city name and select "OK".
 - 6 Select the desired city name.
- If the same address exists, the address list screen will be displayed. Select the desired address.

INFORMATION

- A street name can be searched using only the body part of its name.
For example: S WESTERN AVE
 - A search can be performed by entering "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

SEARCHING BY POINT OF INTEREST

There are 4 methods to search for a destination by Points of Interest.

- 1 Display the "Destination" screen. (→P.97)
- 2 Select "Point of Interest".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by name.	101
2	Select to search by category.	103
3	Select to search by phone number.	105

SEARCHING BY NAME

- 1 Select "Name".
- 2 Enter a POI name and select "OK".
- 3 Select the desired POI.



No.	Function	Page
1	Select to search for POI in the desired city.	102
2	Select to search for POI from the category list.	102
3	Select to search for POI using online database.	102

- When entering the name of a specific POI, and there are 2 or more sites with the same name, the list screen will be displayed. Select the desired POI.

INFORMATION

- To search for a facility name using multiple search words, put a space between each word.

2. DESTINATION SEARCH

■ SELECTING A CITY TO SEARCH

- 1 Select "City".
- 2 Enter a city name and select "OK".



"Any City": Select to cancel the city setting.

- 3 Select the desired city name.
- 4 Select the desired POI.

■ SELECTING FROM THE CATEGORIES

- 1 Select "Category".
- 2 Select the desired category.




- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

"List All Categories": Select to display all POI categories.

- 3 Select the desired POI.

■ SEARCHING FOR POI USING WEB SEARCH

- 1 Select "▼" next to "Web Search" to select a search engine.

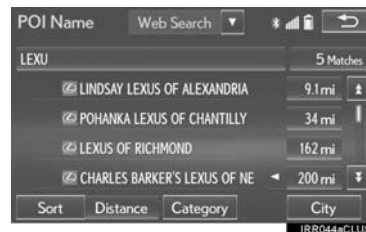


- 2 Select the desired search engine icon.



- The selected search engine icon will be displayed on the top center of the POI list screen.

3 Select the search engine icon.

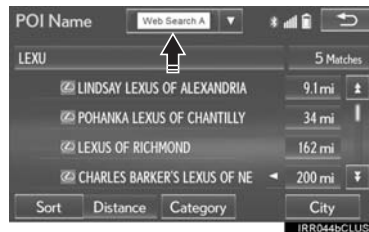


● Accessing to a search engine

For the procedure on how to conduct a search via a search engine, go to "SETTING A DESTINATION USING LEXUS App Suite" (→P.363), and follow the steps from 3 onward.

SEARCHING BY CATEGORY

1 Select "Category".

2 Select the desired search point.

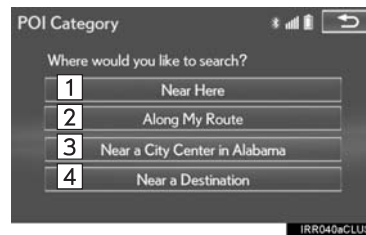

No.	Function
1	Select to set the search point from near the current position.
2	Select to search for POIs along the set route.
3	Select to set the search point from near a city center. (→P.104)
4	Select to set the search point from near a destination.

3

NAVIGATION SYSTEM

2. DESTINATION SEARCH

3 Select the desired POI category.




- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

“List All Categories”: Select to display all POI categories.

“Favorite POI Categories”: Select to use the 6 POIs that have been previously set. (→P.143)

4 Select the desired POI.

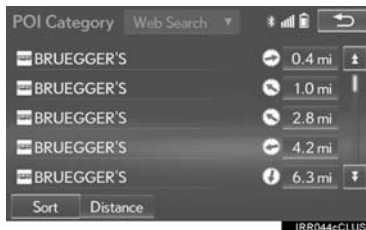

“Web Search”: Select to search for POI using online database. (→P.102)

INFORMATION

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

- ▶ When “Near a City Center in XX*” is selected

1 Select **“Near a City Center in XX”**.

2 Enter a city name and select **“OK”**.

“Last 5 Cities”: Select the city name from the list of the last 5 cities.

3 Select the desired city name.

4 Select **“OK”** when the city center map screen is displayed.

5 Follow the steps from 3 onward in **“SEARCHING BY CATEGORY”**. (→P.103)

*: XX represents the selected search area name.

INFORMATION

- If the navigation system has never been used, selecting the city name from **“Last 5 Cities”** will not be available.

SEARCHING BY PHONE NUMBER

- 1 Select "Phone #".
 - 2 Enter a phone number and select "OK".
- If there is more than 1 site with the same number, the list screen will be displayed.

INFORMATION

- If there is no match for the entered phone number, a list of identical numbers with different area codes will be displayed.

DESTINATION SEARCH BY DESTINATION ASSIST

The destination can be searched by calling an operator of Destination Assist. You can request either a specific business, address, or ask for help locating your desired destination. (→P.367)


3

NAVIGATION SYSTEM

2. DESTINATION SEARCH

SEARCHING FROM PREVIOUS DESTINATIONS

- 1 Display the “Destination” screen. (→P.97)
- 2 Select “Previous Destinations”.
- 3 Select the desired destination.

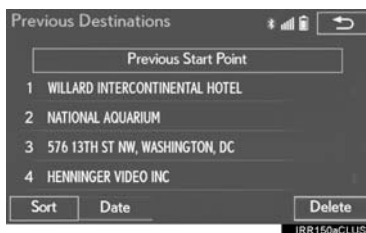

“Previous Start Point”: Select to display the start point map of the previous guided route.

“Delete”: Select to delete the previous destination. (→P.140)


INFORMATION

- The previous start point and up to 100 previously set destinations are displayed on the screen.

SEARCHING BY ADDRESS BOOK

To use this function, it is necessary to register an address book entry. (→P.134)

- 1 Display the “Destination” screen. (→P.97)
- 2 Select “Address Book”.
- 3 Select the desired address book entry.

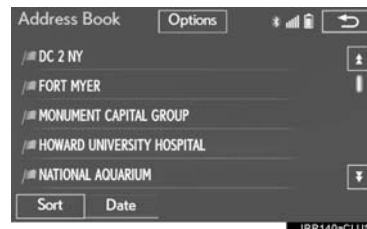


“Options”: Select to register or edit address book entries. (→P.135)

SEARCHING BY EMERGENCY

- 1 Display the "Destination" screen. (→P.97)
- 2 Select "Emergency".
- 3 Select the desired emergency category.



- 4 Select the desired destination.

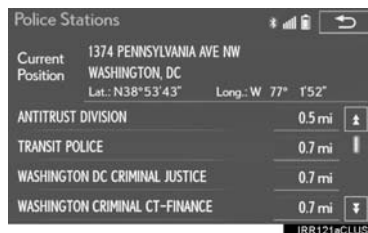


INFORMATION

- The navigation system does not guide in areas where route guidance is unavailable. (→P.150)

SEARCHING BY INTERSECTION AND FREEWAY

There are 2 methods to search for a destination by Intersection & Freeway.

- 1 Display the "Destination" screen. (→P.97)
- 2 Select "Intersection & Freeway".
- 3 Select the desired method.

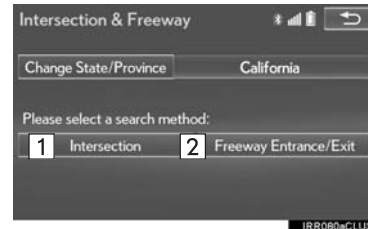

No.	Function	Page
1	Select to search by intersection.	108
2	Select to search by freeway entrance/exit.	108

2. DESTINATION SEARCH

SEARCHING BY INTERSECTION


- 1 Select **"Intersection"**.
- 2 Enter the name of the first intersecting street which is located near the destination and select **"OK"**.
- 3 Select the desired street name.



- 4 Enter the name of the second intersecting street and select **"OK"**.
- 5 Select the desired street name.



- If the 2 streets cross at more than 1 intersection in a city, the list of intersections will be displayed.

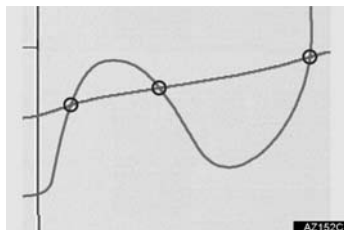

SEARCHING BY FREEWAY ENTRANCE/EXIT

- 1 Select **"Freeway Entrance / Exit"**.
- 2 Enter a freeway name and select **"OK"**.
- 3 Select the desired freeway.
- 4 Select **"Entrance"** or **"Exit"**.



- 5 Enter the name of the second intersecting street and select **"OK"**.
- 6 Select the desired entrance or exit name.

INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

SEARCHING BY MAP

By selecting **"Map"** the last displayed location is displayed again on the map screen. You can search for a destination from this map.

- 1 Display the "Destination" screen. (→P.97)
- 2 Select **"Map"**.
- 3 Scroll the map to the desired point and select **"Go to Ⓞ"**.



"Adjust Location": Select to adjust the position in smaller increments. (→P.82)

- If a destination has already been set, **"Go to Ⓞ"** and **"Add to Route"** will be displayed.

"Go to Ⓞ": Select to delete the existing destination(s) and set a new one.

"Add to Route": Select to add a destination.

- The navigation system performs a search for the route and the entire route map is displayed. (→P.110)

SEARCHING BY COORDINATES

- 1 Display the "Destination" screen. (→P.97)
- 2 Select **"Coordinates"**.
- 3 Enter the latitude and longitude and select **"OK"**.



3

NAVIGATION SYSTEM


2. DESTINATION SEARCH

3. STARTING ROUTE GUIDANCE

When the destination is set, the entire route map from the current position to the destination is displayed.

STARTING ROUTE GUIDANCE

1 Select “OK” to start guidance.

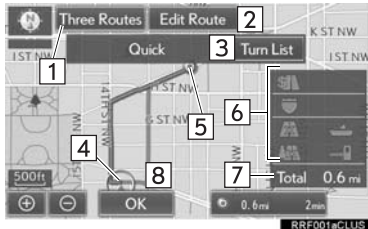

No.	Information/Function
1	Select the desired route from 3 possible routes. (→P.111)
2	Select to change the route. (→P.113)
3	Select to display a list of the turns required to reach the destination. (→P.112)
4	Current position
5	Destination point
6	Type of route and its distance
7	Distance of the entire route

No.	Information/Function
8	Select to start guidance. If “OK” is selected and held until a beep sounds, demo mode will start. Press the “HOME” or “NAV” button to end demo mode.

 **WARNING**


- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

INFORMATION

- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route or a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale more than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the selected point is set as the destination.

3 ROUTES SELECTION


- 1 Select “Three Routes”.
- 2 Select the desired route.

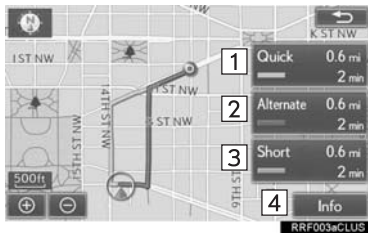

No.	Function
1	Select to display the quickest route.
2	Select to display the alternative route.
3	Select to display the route that is the shortest distance to the set destination.
4	Select to display the information about the 3 routes. (→P.111)

■ DISPLAYING 3 ROUTES INFORMATION

- 1 Select “Info”.
- 2 Check that the “Information for Three Routes” screen is displayed.

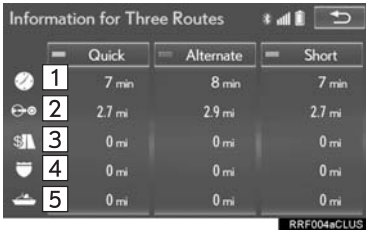

No.	Information
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Distance of the toll road
4	Distance of the freeway
5	Distance of the ferry trip

3

NAVIGATION SYSTEM

2. DESTINATION SEARCH

DISPLAYING TURN LIST

A list of turn information from the current position to the destination can be displayed.

- 1 Select “Turn List”.
- 2 Check that the turn list is displayed.



No.	Information
1	Current position
2	Distance to the next turn
3	Turn direction at the intersection
4	Select to display the map of the selected point.

INFORMATION

- However, not all road names on the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

EDITING ROUTE

Destinations can be added, reordered or deleted, and conditions for the route to the destination can be changed.

- 1 Select “Edit Route”.
- 2 Select the desired item.



No.	Function	Page
1	Select to add destinations.	124
2	Select to delete destinations.	125
3	Select to reorder destinations.	124
4	Select to set route preferences.	125
5	Select to change route type.	126


INFORMATION

- Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases. (→P.125)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After traveling by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

2. DESTINATION SEARCH


PAUSING GUIDANCE

- 1 Select “Options” on the map screen.
- 2 Select “Pause Guidance”.

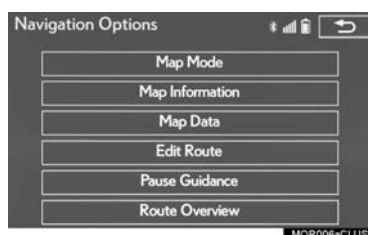

RESUMING GUIDANCE

- 1 Select “Resume Guidance”.

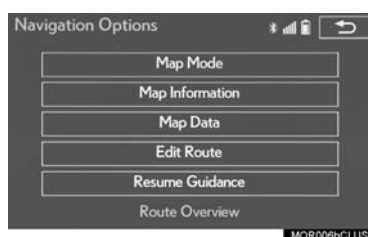


3. ROUTE GUIDANCE

1. ROUTE GUIDANCE SCREEN

During the route guidance, various types of guidance screens can be displayed depending on conditions.

SCREEN FOR ROUTE GUIDANCE

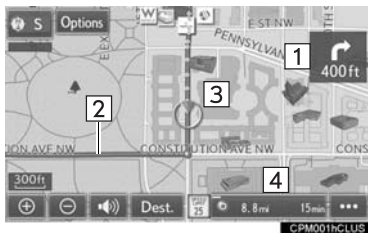

No.	Information
1	Distance to the next turn and an arrow indicating the turning direction
2	Guidance route
3	Current position
4	Current street name or route information

INFORMATION

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.
- When arriving at the set destination the destination name will be displayed on the upper part of the screen.

3. ROUTE GUIDANCE

CHANGING ROUTE INFORMATION BAR

When the vehicle is on the guidance route, the route information bar displays the current street name or the distance with the estimated travel/arrival time to the destination.

- 1 Select the route information bar (1) or the route information button (2) to change the display of the route information bar.



No.	Information
1	Select to change the display between the estimated travel time and the estimated arrival time.
2	Select to change the display between the current street name and the distance with the estimated travel/arrival time.

INFORMATION

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the average speed for the specified speed limit.
- When the vehicle gets off the guidance route, the arrow facing the destination is displayed instead of the estimated travel/arrival time.
- The route information bar fills from left to right as the vehicle progresses on the route.

DISTANCE AND TIME TO DESTINATION

When driving on the guidance route with more than 1 destination set, a list of the distance with estimated travel/arrival time from the current position to each destination is displayed.

- 1 Select the route information bar.



- 2 Check that the list of the distance and time is displayed.



- By selecting one of the number buttons, the desired route information is displayed.


ROUTE OVERVIEW

The entire route from the current position to the destination can be displayed during the route guidance.

- 1 Select “Options” on the map screen.



- 2 Select “Route Overview”.

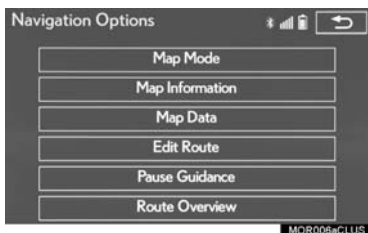

- 3 Check that the entire route map is displayed.



- For details about this screen: →P.110

3 NAVIGATION SYSTEM

3. ROUTE GUIDANCE

DURING FREEWAY DRIVING


During freeway driving, the freeway exit information screen will be displayed.



No./Icon	Information/Function
1	Distance and time from the current position to the road traffic facilities.
2	Name of the road traffic facilities.
3	POIs that are close to a freeway exit
4	Select to display the selected map of the exit vicinity.
	Select to scroll to farther road traffic facilities.
	Select to scroll to closer road traffic facilities.

WHEN APPROACHING FREEWAY EXIT OR JUNCTION


When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

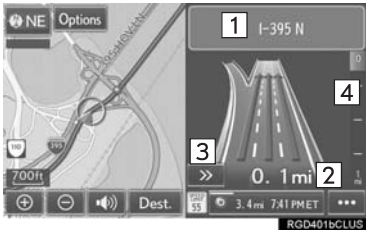

No.	Information/Function
1	Next exit or junction name
2	Distance from the current position to the exit or junction
3	Select to hide the freeway guidance screen. To return to the freeway guidance screen, select
4	Remaining distance bar to the guidance point

TOLLGATE GUIDANCE

When the vehicle approaches a tollgate, the tollgate view will be displayed.

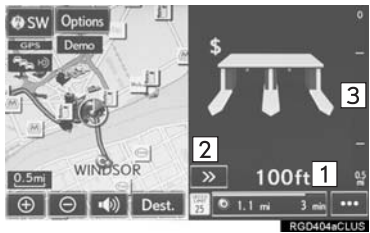

No.	Information/Function
1	Distance from the current position to the tollgate
2	Select to hide the tollgate guidance screen. To return to the tollgate guidance screen, select  .
3	Remaining distance bar to the guidance point

REAL FREEWAY JUNCTION VIEW

When the vehicle approaches a junction, the junction view with signage will be displayed.




No.	Information/Function
1	Next junction or street name
2	Select to hide the real freeway junction view. To return to the real freeway junction view, select  .
3	Distance from the current position to the next junction
4	Remaining distance bar to the guidance point

3
NAVIGATION SYSTEM

3. ROUTE GUIDANCE

WHEN APPROACHING INTERSECTION


When the vehicle approaches an intersection, the intersection guidance screen will be displayed.

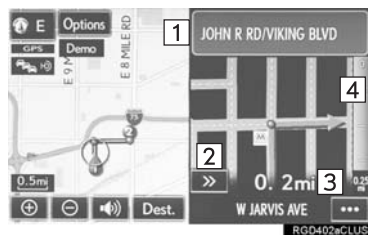

No.	Information/Function
1	Next street name
2	Select to hide the intersection guidance screen. To return to the intersection guidance screen, select  .
3	Distance to the intersection
4	Remaining distance bar to the guidance point

TURN LIST SCREEN

- 1 Select "Turn List" on the "Map Mode" screen. (→P.78)
- 2 Check that the turn list screen is displayed.

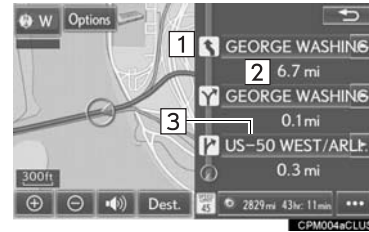


No.	Information
1	Turn direction
2	Distance between turns
3	Next street or destination name

TURN-BY-TURN ARROW
SCREEN

On this screen, information about the next turn on the guidance route can be displayed.

- 1 Select “Turn-by-Turn Arrow” on the “Map Mode” screen. (→P.78)
- 2 Check that the turn-by-turn arrow screen is displayed.

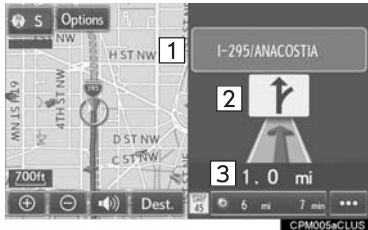

No.	Information
1	Exit number or street name
2	Turn direction
3	Distance to the next turn

3. ROUTE GUIDANCE

2. TYPICAL VOICE GUIDANCE PROMPTS

As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.



WARNING

- Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads (roads that are not completely digitized in our database). The route guidance may not have the updated information such as the direction of a one way street.


INFORMATION

- If a voice guidance command cannot be heard, select  on the map screen to hear it again.
- To adjust the voice guidance volume: →P.62
- Voice guidance may be made early or late.
- If the system cannot determine the current position correctly, you may not hear voice guidance or may not see the magnified intersection on the screen.

3. ROUTE GUIDANCE

3. EDITING ROUTE

1 Press the “NAV” button.

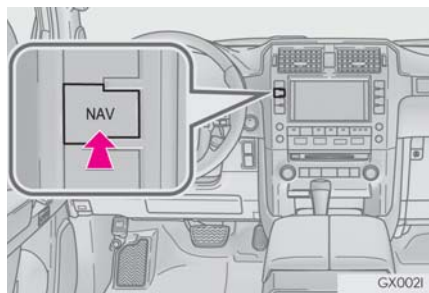

2 Select “Options”.



3 Select “Edit Route”.



4 Select the item to be set.



No.	Function	Page
1	Select to add destinations.	124
2	Select to delete destinations.	125
3	Select to reorder destinations.	124
4	Select to set route preferences.	125
5	Select to change route type.	126
6	Select to set detours.	126
7	Select to start from adjacent road.	128

5 Check that the entire route map is displayed. (→P.110)


3

NAVIGATION SYSTEM

3. ROUTE GUIDANCE

ADDING DESTINATIONS

- 1 Display the "Route" screen. (→P.123)
- 2 Select **"Add"**.
- 3 Search for an additional destination in the same way as a destination search. (→P.95)
- 4 Select **"Add Destination Here"** to insert the new destination into the route.

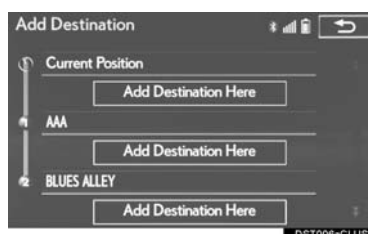

REORDERING DESTINATIONS

When more than 1 destination has been set, the arrival order of the destinations can be changed.

- 1 Display the "Route" screen. (→P.123)
- 2 Select **"Reorder"**.
- 3 Select the desired destination and select **"Move Up"** or **"Move Down"** to change the arrival order. Then select **"OK"**.



DELETING DESTINATIONS

- 1 Display the "Route" screen. (→P.123)
 - 2 Select **"Delete"**.
 - 3 Select **"Yes"** when the confirmation screen appears.
- When more than 1 destination has been set, a list will be displayed on the screen. Select the item(s) to be deleted.




- "Delete All"**: Select to delete all destinations on the list.
- If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.

SETTING ROUTE PREFERENCES

The conditions to determine the route can be selected from various choices such as freeways, toll roads, ferries, etc.

- 1 Display the "Route" screen. (→P.123)
- 2 Select **"Preferences"**.
- 3 Select the desired route preferences and select **"OK"**.

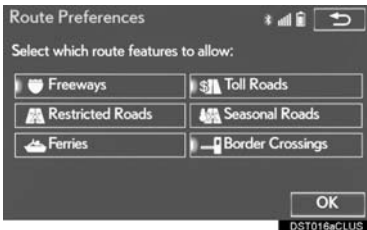

- When set to on, the indicator will illuminate.

3

NAVIGATION SYSTEM

3. ROUTE GUIDANCE

SELECTING ROUTE TYPE

- 1 Display the "Route" screen. (→P.123)
- 2 Select **"Route Type"**.
- 3 Select the desired route type and select **"OK"**.



- During driving, the route guidance starts after selecting the desired route type.
- 4 The entire route from the starting point to the destination is displayed.



- For details about this screen: →P.110

DETOUR SETTING


During the route guidance, the route can be changed to detour around a section of the route where a delay is caused by road repairs, an accident, etc.

- 1 Display the "Route" screen. (→P.123)
- 2 Select **"Detour"**.
- 3 Select the desired detour distance.



No.	Function
1	Select to detour within 1 mile of the current position.
2	Select to detour within 3 miles of the current position.
3	Select to detour within 5 miles of the current position.
4	Select to detour on the entire route.
5	Select to make the system search for the route based on traffic congestion information received from traffic information. (→P.90)

INFORMATION

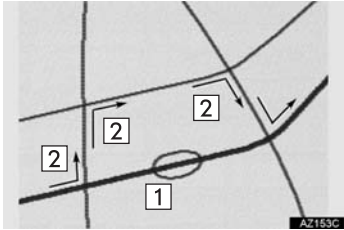

- This picture shows an example of how the system would guide around a delay caused by a traffic jam.
- 1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.
- 2 This route indicates the detour suggested by the system.
- When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).
- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

3. ROUTE GUIDANCE

STARTING FROM ADJACENT ROAD

When a freeway and a surface road run in parallel, the system may show the guidance route going on the freeway while driving on the surface road, or vice versa.

If this happens, you can instantly choose the adjacent road for the route guidance.

- 1 Display the "Route" screen. (→P.123)
- 2 Select **"Start from Adjacent Road"**.

INFORMATION

- When there is no adjacent road, this screen button will not be displayed.


4. MEMORY POINTS

1. MEMORY POINTS SETTINGS

Home, preset destinations, address book entries, areas to avoid can be set as memory points. The registered points can be used as the destinations. (→P.95)

Registered areas to avoid, will be avoided when the system searches for a route.

1 Press the “SETUP” button.

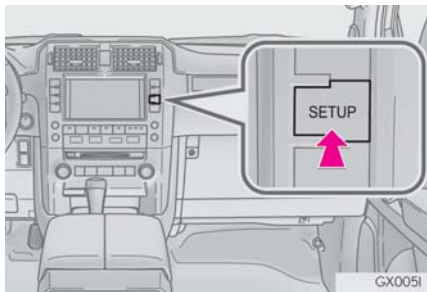

2 Select “Navigation”.



3 Select the desired item to be set.



No.	Function	Page
1	Select to set home.	130
2	Select to set preset destinations.	132
3	Select to set the address book.	134
4	Select to set areas to avoid.	137
5	Select to delete previous destinations.	140
6	Select to set detailed navigation settings.	141

3

NAVIGATION SYSTEM

4. MEMORY POINTS

SETTING UP HOME

If home has been registered, that information can be recalled by selecting **“Go Home”** on the **“Destination”** screen. (→P.98)

- 1 Display the **“Navigation Settings”** screen. (→P.129)
- 2 Select **“Home”**.
- 3 Select the desired item to be set.




REGISTERING HOME

- 1 Select **“Set Home Location”**.
- 2 Select the desired item to search for the location. (→P.95)
- 3 Select **“OK”** when the editing home screen appears.

No.	Function	Page
1	Select to register home.	130
2	Select to edit home.	131
3	Select to delete home.	131

EDITING HOME

- 1 Select “Edit”.
- 2 Select the desired item to be edited.

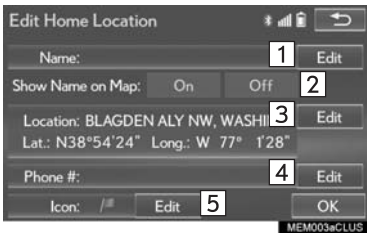

No.	Function	Page
1	Select to edit the home name.	136
2	Select to set display of the home name on/off.	—
3	Select to edit location information.	136
4	Select to edit the phone number.	136
5	Select to change the icon to be displayed on the map screen.	135

- 3 Select “OK”.

DELETING HOME

- 1 Select “Delete”.
- 2 Select “Yes” when the confirmation screen appears.

4. MEMORY POINTS

SETTING UP PRESET DESTINATIONS

If a preset destination has been registered, that information can be recalled by using preset destinations on the "Destination" screen. (→P.99)

- 1 Display the "Navigation Settings" screen. (→P.129)
- 2 Select "Preset Destinations".
- 3 Select the desired item.



No.	Function	Page
1	Select to register a preset destination.	132
2	Select to edit a preset destination.	133
3	Select to delete a preset destination.	133

REGISTERING PRESET DESTINATIONS

- 1 Select "Set".
- 2 Select the desired item to search for the location. (→P.95)
- 3 Select a position for this preset destination.




- 4 Select "OK" when the editing preset destination screen appears. (→P.133)

INFORMATION

- Up to 5 preset destinations can be registered.

EDITING PRESET DESTINATIONS

- 1 Select "Edit".
- 2 Select the desired preset destination.
- 3 Select the item to be edited.

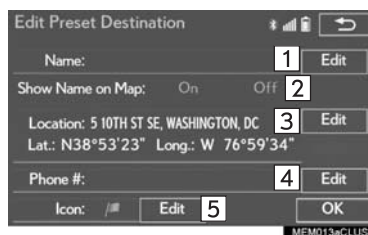


No.	Function	Page
1	Select to edit the preset destination name.	136
2	Select to set display of the preset destination name on/off.	—
3	Select to edit location information.	136
4	Select to edit the phone number.	136
5	Select to change the icon to be displayed on the map screen.	135

- 4 Select "OK".

DELETING PRESET DESTINATIONS

- 1 Select "Delete".
- 2 Select the preset destination to be deleted and select "Delete".

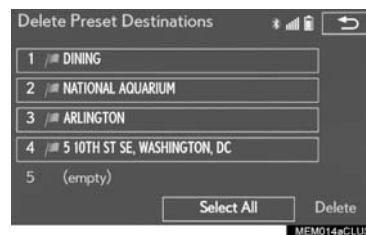

- 3 Select "Yes" when the confirmation screen appears.

4. MEMORY POINTS

SETTING UP ADDRESS BOOK

Points on the map can be registered.

- 1

 Display the “Navigation Settings” screen. (→P.129)
- 2

 Select “Address Book”.
- 3

 Select the desired item.

A screenshot of a mobile application's 'Address Book' screen. At the top, it says 'Address Book' with a back arrow icon. Below that, it indicates '94 of 100 Free'. There are three numbered options: '1 New', '2 Edit', and '3 Delete'. The screen has a dark background with light text and icons.

No.	Function	Page
1	Select to register address book entries.	134
2	Select to edit address book entries.	135
3	Select to delete address book entries.	137

REGISTERING ADDRESS BOOK ENTRIES

- 1

 Select “New”.
- 2

 Select the desired item to search for the location. (→P.95)
- 3

 Select “OK” when the editing address book entry screen appears. (→P.135)


INFORMATION

- Up to 100 address book entries can be registered.

EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Select **"Edit"**.
- 2 Select the desired address book entry.
- 3 Select the item to be edited.

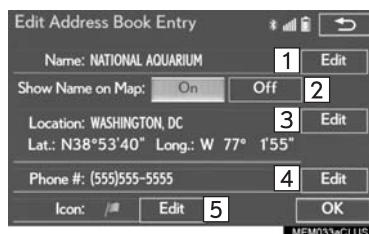

No.	Function	Page
1	Select to edit the address book entry name.	136
2	Select to set display of the address book entry name on/off.	—
3	Select to edit location information.	136
4	Select to edit the phone number.	136
5	Select to change the icon to be displayed on the map screen.	135

- 4 Select **"OK"**.

CHANGING THE ICON

- 1 Select **"Edit"** next to the **"Icon"**.
- 2 Select the desired icon.



- Change pages by selecting the **"Page 1"**, **"Page 2"** or **"With Sound"** tab.


"With Sound": Select the memory points with a sound

4. MEMORY POINTS

► When the **“With Sound”** tab is selected

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

- 1 Select the **“With Sound”** tab.
- 2 Select the desired sound icon.

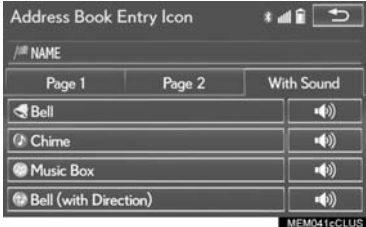

 : Select to play the sound.

- When **“Bell (with Direction)”** is selected, select an arrow to adjust the direction and select **“OK”**.



INFORMATION

- The bell sounds only when the vehicle approaches this point in the direction that has been set.

■ **CHANGING THE NAME**

- 1 Select **“Edit”** next to **“Name”**.
- 2 Enter a name and select **“OK”**.

■ **CHANGING THE LOCATION**


- 1 Select **“Edit”** next to **“Location”**.
- 2 Scroll the map to the desired point (→P.82) and select **“OK”**.

■ **CHANGING PHONE NUMBER**

- 1 Select **“Edit”** next to **“Phone #”**.
- 2 Enter the phone number and select **“OK”**.

DELETING ADDRESS BOOK ENTRIES

- 1 Select “Delete”.
- 2 Select the item to be deleted and select “Delete”.
- 3 Select “Yes” when the confirmation screen appears.

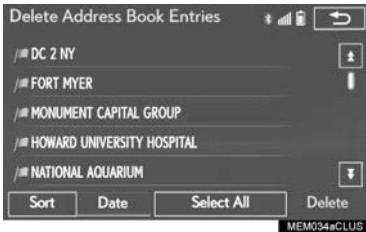

SETTING UP AREAS TO AVOID

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as “Areas to Avoid”.

- 1 Display the “Navigation Settings” screen. (→P.129)
- 2 Select “Areas to Avoid”.
- 3 Select the desired item.



No.	Function	Page
1	Select to register areas to avoid.	138
2	Select to edit areas to avoid.	138
3	Select to delete areas to avoid.	140

3
NAVIGATION SYSTEM

4. MEMORY POINTS

REGISTERING AREAS TO AVOID

- 1 Select "New".
- 2 Select the desired item to search for the location. (→P.95)
- 3 Select either  or  to change the size of the area to be avoided and select "OK".



- 4 Select "OK" when the editing area to avoid screen appears.


INFORMATION

- If a destination is entered in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


EDITING AREAS TO AVOID

The name, location and/or area size of a registered area can be edited.

- 1 Select "Edit".
- 2 Select the area and select "OK".

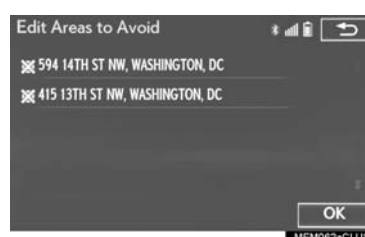

3 Select the item to be edited.

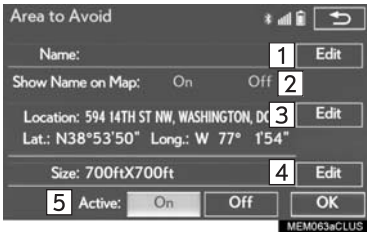

No.	Function	Page
1	Select to edit the name of the area to avoid.	139
2	Select to set display of the area to avoid name on/off.	—
3	Select to edit area location.	139
4	Select to edit area size.	139
5	Select to set the area to avoid function on/off.	—

4 Select “OK”.

■ CHANGING THE NAME

- 1 Select “Edit” next to “Name”.
- 2 Enter a name and select “OK”.

■ CHANGING THE LOCATION

- 1 Select “Edit” next to “Location”.
- 2 Scroll the map to the desired point (→P.82) and select “OK”.

■ CHANGING THE AREA SIZE


- 1 Select “Edit” next to “Size”.
- 2 Select either  or  to change the size of the area to be avoided and select “OK”.



4. MEMORY POINTS

DELETING AREAS TO AVOID

- 1 Select **"Delete"**.
- 2 Select the area to be deleted and select **"Delete"**.

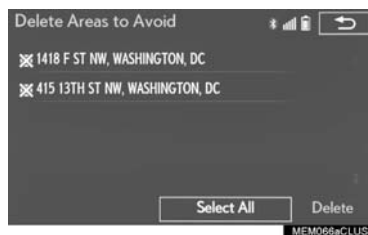


- 3 Select **"Yes"** when the confirmation screen appears.

DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Display the **"Navigation Settings"** screen. (→P.129)
- 2 Select **"Delete Previous Dest."**.
- 3 Select the previous destination to be deleted and select **"Delete"**.

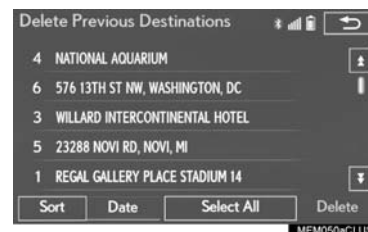


- 4 Select **"Yes"** when the confirmation screen appears.

5. SETUP

1. DETAILED NAVIGATION SETTINGS

Settings are available for pop-up information, favorite POI categories, etc.

 - 1 Press the "SETUP" button.



- 2 Select "Navigation".



- 3 Select "Detailed Navi. Settings".



- 4 Select the items to be set.





3

NAVIGATION SYSTEM

5. SETUP

SCREENS FOR NAVIGATION SETTINGS

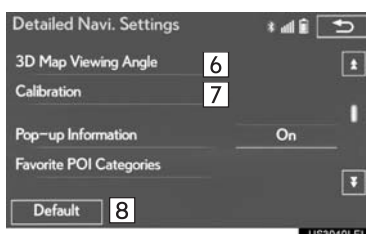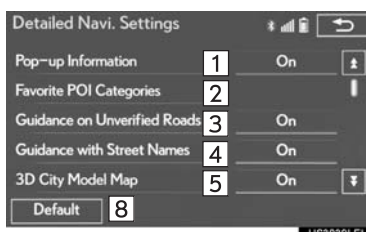

No.	Function	Page
1	Select to set display of pop-up information on/off.	—
2	Select to set favorite POI categories that are used for POI selection to display on the map screen.	143
3	Select to set IPD road guidance on/off.	—
4	Select to set the voice guidance for the next street name on/off.	—
5	Select to set display of the 3D city model map on/off.	—
6	Select to change the viewing angle of the 3D map.	144
7	Select to adjust the current position mark manually or to adjust miscalculation of the distance caused by tire replacement.	145
8	Select to reset all setup items.	—

FAVORITE POI CATEGORIES (SELECT POI ICONS)

Up to 6 POI icons, which are used for selecting POIs on the map screen, can be selected as favorites.

- 1 Display the "Detailed Navi. Settings" screen. (→P.141)
- 2 Select **"Favorite POI Categories"**.
- 3 Select the category to be changed.



"Default": Select to set the default categories.

- 4 Select the desired POI category.



"List All Categories": Select to display all POI categories.

- 5 Select the desired POI icon.

3

NAVIGATION SYSTEM

CHANGING VIEWING ANGLE OF 3D MAP

- 1 Display the "Detailed Navi. Settings" screen. (→P.141)
- 2 Select "3D Map Viewing Angle".

- 3 Select "Up" or "Down" to change the viewing angle.




"Default": Select to set the initial angle.

CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Display the "Detailed Navi. Settings" screen. (→P.141)
- 2 Select "**Calibration**".
- 3 Select the desired item.

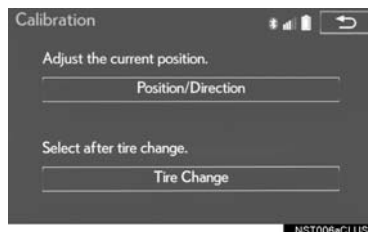

- For additional information on the accuracy of a current position: →P.149

POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Select "**Position / Direction**".
- 2 Scroll the map to the desired point (→P.82) and select "**OK**".
- 3 Select an arrow to adjust the direction of the current position mark and select "**OK**".



3 NAVIGATION SYSTEM

■ TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

1 Select "Tire Change".

- The message appears and the quick distance calibration starts automatically.

INFORMATION


- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

5. SETUP


2. TRAFFIC SETTINGS

Traffic information such as traffic congestion or traffic incident warnings can be made available.


- 1 Press the "SETUP" button.

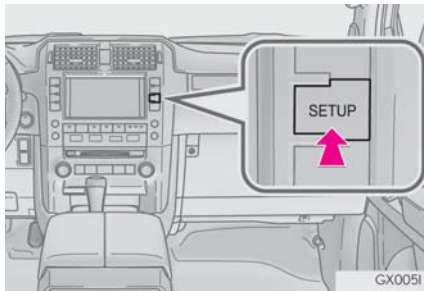


- 2 Select "Traffic".

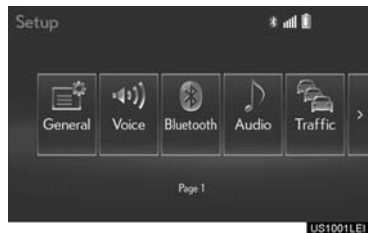

- 3 Select the items to be set.

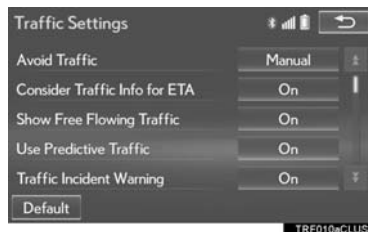

SCREEN FOR TRAFFIC SETTINGS

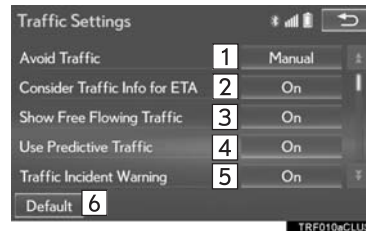


No.	Function
1	Select to set the avoid traffic function auto/manual. (→P.148)
2	Select to set the usage of traffic information for the estimated arrival time on/off.
3	Select to set the display of an arrow of free flowing traffic on/off.
4	Select to set to on/off whether to consider the predictive traffic information (→P.92) with estimated arrival time and detoured route search.
5	Select to set traffic incident voice warning on/off.
6	Select to reset all setup items.

3 NAVIGATION SYSTEM

AUTO AVOID TRAFFIC

- 1 Display the "Traffic Settings" screen. (→P.147)
- 2 Select "Avoid Traffic".
- 3 Select the desired item.

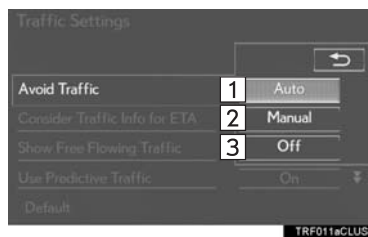


No.	Function
1	Select to automatically change routes when congestion information of the guidance route has been received.
2	Select to select manually whether or not to change routes when congestion information of the guidance route has been received. In this mode, a screen will appear to ask if you wish to reroute.
3	Select to not reroute when congestion information for the guidance route has been received.

CHANGING THE ROUTE MANUALLY

When the navigation system calculates a new route, the following screen will be displayed.

- 1 Select the desired item.

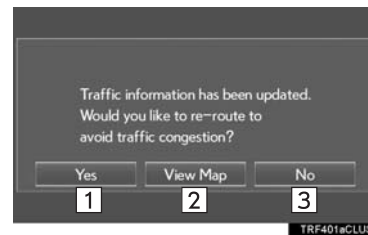

No.	Function
1	Select to start route guidance using the new route.
2	Select to confirm the new route and current route on the map.
3	Select to continue the current route guidance.

6. TIPS FOR THE NAVIGATION SYSTEM

1. GPS (GLOBAL POSITIONING SYSTEM)

LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system compensates for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.



When the vehicle is receiving signals from satellites, the “GPS” mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.



NOTICE

- The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

6. TIPS FOR THE NAVIGATION SYSTEM

- Accurate current position may not be shown in the following cases:
 - When driving on a small angled Y-shaped road.
 - When driving on a winding road.
 - When driving on a slippery road such as in sand, gravel, snow, etc.
 - When driving on a long straight road.
 - When freeway and surface streets run in parallel.
 - After moving by ferry or vehicle carrier.
 - When a long route is searched during high speed driving.
 - When driving without setting the current position calibration correctly.
 - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
 - When leaving a covered parking lot or parking garage.
 - When a roof carrier is installed.
 - When driving with tire chains installed.
 - When the tires are worn.
 - After replacing a tire or tires.
 - When using tires that are smaller or larger than the factory specifications.
 - When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration: →P.145
- Inappropriate route guidance may occur in the following cases:
 - When turning at an intersection off the designated route guidance.
 - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
 - When turning at an intersection for which there is no route guidance.
 - When passing through an intersection for which there is no route guidance.
 - During auto reroute, the route guidance may not be available for the next turn to the right or left.
 - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
 - After auto reroute, the route may not be changed.
 - If an unnecessary U-turn is shown or announced.
 - If a location has multiple names and the system announces 1 or more of them.
 - When a route cannot be searched.
 - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
 - Your destination point might be shown on the opposite side of the street.
 - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time, season or other reasons.
 - The road and map data stored in the navigation system may not be complete or may not be the latest version.

- After replacing a tire: →P.146

INFORMATION

- This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.


6. TIPS FOR THE NAVIGATION SYSTEM

2. MAP DATABASE VERSION AND COVERED AREA

MAP INFORMATION

Coverage areas and legal information can be displayed and map data can be updated.

1 Press the “NAV” button.

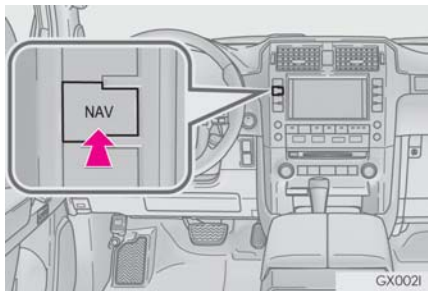


2 Select “Options”.



3 Select “Map Data”.



4 Check that the map data screen is displayed.

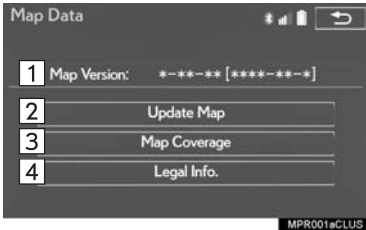

No.	Function
1	Map version
2	Select to update map.
3	Select to display map coverage areas.
4	Select to display legal information.


INFORMATION

- Map data updates are available for a fee. Contact your Lexus dealer for further information.

ABOUT THE MAP DATA

Map data for the navigation system is contained in a SD card that is inserted in the SD card slot located at the bottom of the audio control panel.

Do not eject the SD card, as doing so may deactivate the navigation system.

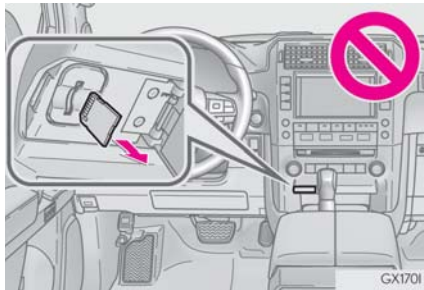

NOTICE

- Do not edit or delete the map data on the SD card, as doing so may deactivate the navigation system.

INFORMATION



- microSDHC Logo is a trademark of SD-3C, LLC.

6. TIPS FOR THE NAVIGATION SYSTEM

4

AUDIO/VISUAL SYSTEM

1 BASIC OPERATION

1. QUICK REFERENCE	158
2. SOME BASICS	160
TURNING THE SYSTEM ON AND OFF	160
SELECTING AN AUDIO SOURCE	161
DISC SLOT	162
USB/AUX PORT	163
SOUND SETTINGS	164
AUDIO SCREEN ADJUSTMENT	166
VOICE COMMAND SYSTEM	167

1

2

3

4

5

6

7

8

2 RADIO OPERATION

1. AM/FM RADIO	168
OVERVIEW	168
PRESETTING A STATION	171
SELECTING A STATION FROM THE LIST	171
CACHING A RADIO PROGRAM	173
RADIO BROADCAST DATA SYSTEM	174
TRAFFIC ANNOUNCEMENT (FM RADIO)	176
USING HD Radio™ TECHNOLOGY	176
AVAILABLE HD Radio™ TECHNOLOGY	177
TROUBLESHOOTING GUIDE	179
2. XM Satellite Radio	180
OVERVIEW	180
HOW TO SUBSCRIBE TO XM Satellite Radio	183
DISPLAYING THE RADIO ID	185
PRESETTING A CHANNEL	186
SELECTING A CHANNEL FROM THE LIST	186
IF THE SATELLITE RADIO TUNER MALFUNCTIONS	187
3. INTERNET RADIO	188
LISTENING TO INTERNET RADIO	188

3 MEDIA OPERATION

1. CD	189
OVERVIEW	189
PLAYING AN AUDIO CD	193
PLAYING AN MP3/WMA/AAC DISC	194
2. DVD	195
OVERVIEW	195
DVD OPTIONS	199
3. USB MEMORY	202
OVERVIEW	202
USB AUDIO	206
4. iPod	207
OVERVIEW	207
iPod AUDIO	212
iPod VIDEO	213
5. Bluetooth® AUDIO	214
OVERVIEW	214
CONNECTING A Bluetooth® DEVICE	219
LISTENING TO Bluetooth® AUDIO	219
6. AUX	221
OVERVIEW	221
7. VTR	224
OVERVIEW	224
VTR OPTIONS	226

4 REAR SEAT ENTERTAINMENT SYSTEM OPERATION

1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES	227
DISPLAY	228
REAR SEAT ENTERTAINMENT SYSTEM CONTROLLER	228
HEADPHONE JACKS	229
HEADPHONES	230
CAUTION SCREEN	231
TURNING THE REAR DISPLAY ON/OFF	231
CHANGING THE DISPLAY TO BE OPERATED	231
TURNING THE REAR DISPLAY OFF USING THE REMOTE CONTROLLER	231
CHANGING THE SOURCE	232
CHANGING THE SPEAKER OUTPUT	233
OPERATION FROM THE FRONT SEATS	234
USING THE RADIO	236
USING THE RADIO (INTERNET RADIO BROADCAST)	238
PLAYING AN AUDIO CD/CD TEXT	238
PLAYING MP3/WMA/AAC DISCS	239
PLAYING DVD VIDEO	240
PLAYING A USB MEMORY	246

PLAYING iPod	247
PLAYING Bluetooth® AUDIO	249
USING THE AUX MODE	250
USING THE VIDEO MODE	250
CHANGING SETTINGS	252
IF THE REAR SEAT ENTERTAINMENT SYSTEM MALFUNCTIONS	254

5 AUDIO/VISUAL REMOTE CONTROLS

1. STEERING SWITCHES	255
----------------------------	-----

6 SETUP

1. AUDIO SETTINGS	258
AUDIO SETTINGS SCREEN	258

7 TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

1. OPERATING INFORMATION	266
RADIO	266
DVD PLAYER AND DISC	268
iPod	273
FILE INFORMATION	274
TERMS	276
ERROR MESSAGES	278

1. BASIC OPERATION

1. QUICK REFERENCE

Operations such as selecting a preset station and adjusting the sound balance are carried out on the screen.


Press the “AUDIO” button to display the audio/visual screen.

■ CONTROL SCREEN



US4069LEI

■ CONTROL PANEL

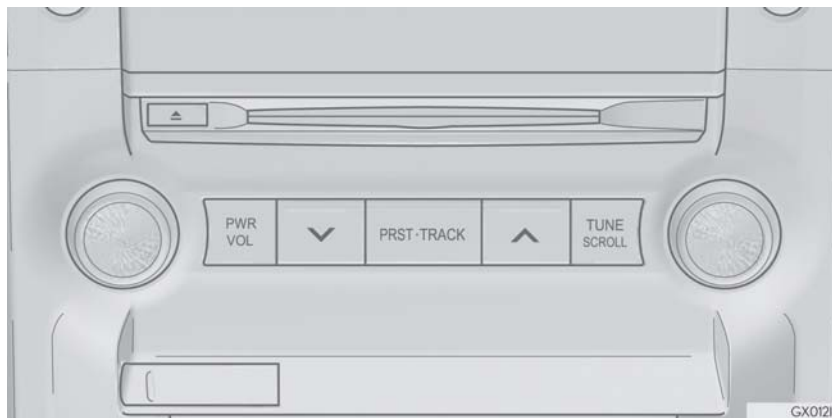

Function	Page
Using the radio	168
Playing an audio CD or MP3/WMA/AAC disc	189
Playing a DVD	195
Playing a USB memory	202
Playing an iPod	207
Playing a Bluetooth® device	214
Using the AUX port	221
Playing the VTR	224
Using the rear seat entertainment system*	227
Using the steering wheel audio switches	255
Audio system settings	258

INFORMATION

- The display and button positions will differ depending on the type of the system.

*: If equipped

1. BASIC OPERATION

2. SOME BASICS

This section describes some of the basic features of the audio/visual system. Some information may not pertain to your system.

Your audio/visual system works when the engine switch is turned to ACCESSORY or IGNITION ON mode.


WARNING

- For vehicles sold in U.S.A.:
Part 15 of the FCC Rules
FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Laser products
 - USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
 - THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

NOTICE

- To prevent the battery from being discharged, do not leave the audio/visual system on longer than necessary when the engine is not running.

TURNING THE SYSTEM ON AND OFF

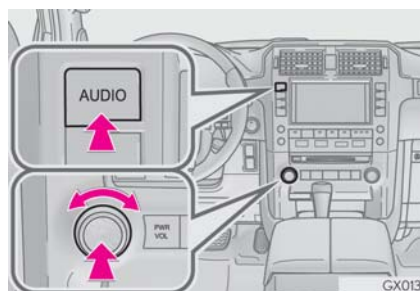


"PWR/VOL" knob: Press to turn the audio/visual system on and off. The system turns on in the last mode used. Turn this knob to adjust the volume.

"AUDIO" button: Press to display screen buttons for the audio/visual system (audio control mode).

- A function that enables automatic return to the previous screen from the audio/visual screen can be selected. (→P.55)

SELECTING AN AUDIO SOURCE

- 1 Press the "AUDIO" button.

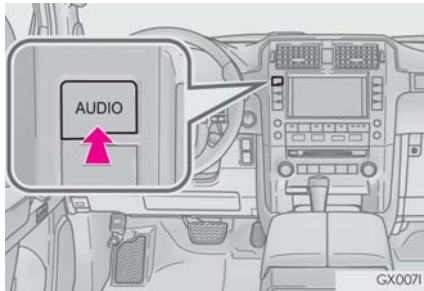

- 2 Select "Source".



- 3 Select the desired source.




INFORMATION

- Dimmed screen buttons cannot be operated.
- When there are two pages, select ">" or "<" to change the page.

REORDERING THE AUDIO SOURCE

- 1 Select "Source".

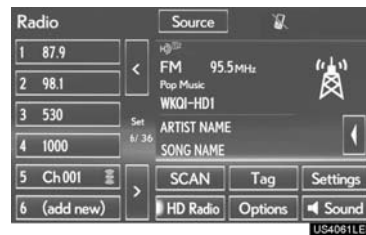

- 2 Select "Reorder".



- 3 Select the desired audio source then "<<" or ">>" to reorder.



4


AUDIO/VISUAL SYSTEM

1. BASIC OPERATION

DISC SLOT

INSERTING A DISC


- 1 Insert a disc into the disc slot.

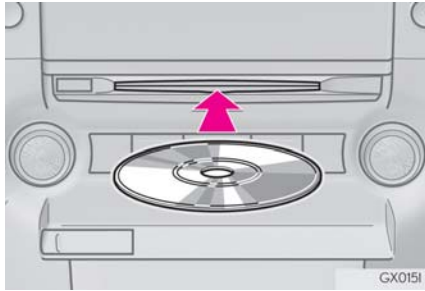

- After insertion, the disc is automatically loaded.

EJECTING A DISC

- 1 Press the “▲” button and remove the disc.

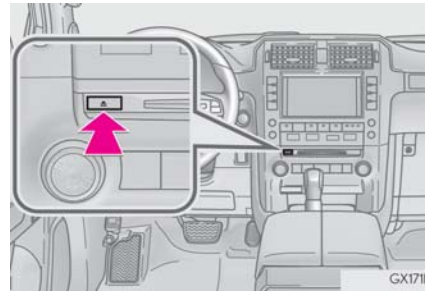

NOTICE

- Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.


INFORMATION

- The player is intended for use with 4.7 in. (12 cm) discs only.
- When inserting a disc, gently insert the disc with the label facing up.


USB/AUX PORT

There are 2 USB ports and an AUX port in the auxiliary box.

- 1 Slide the auxiliary box lid.

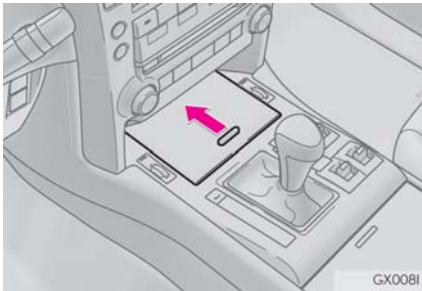

- 2 Connect a device.

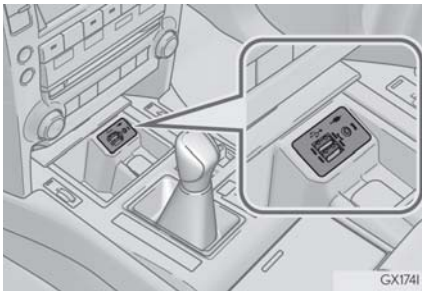

- Turn on the power of the device if it is not turned on.


INFORMATION

- Up to two portable players can be connected to the USB port at the same time.
- Even if a USB hub is used to connect more than two USB devices, only the first two connected devices will be recognized.

USING A 4-POLE AUX CABLE

To view a video on an iPod video or VTR, it is necessary to use a 4-pole AUX cable to connect the portable audio device.

When connecting a portable audio device to the AUX port, use a 4-pole AUX cable with a plug that matches the exact layout shown in the illustration.

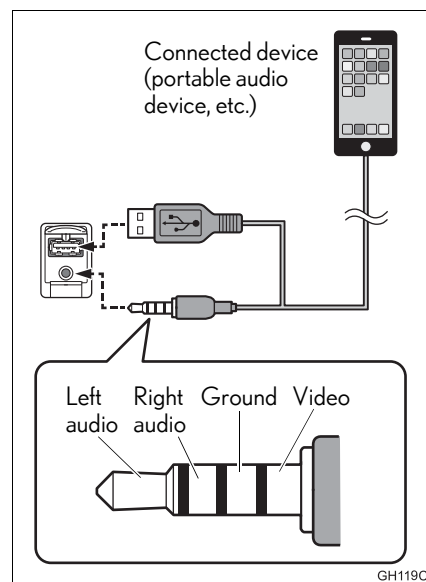

- When using an iPod video, a cable that has a 4-pole AUX plug and a USB connector is necessary. Connect the plug and connector to the AUX and USB ports.


INFORMATION

- If a 4-pole AUX cable with a different layout is used, audio and/or video may not be output properly.

1. BASIC OPERATION

SOUND SETTINGS

DSP CONTROL

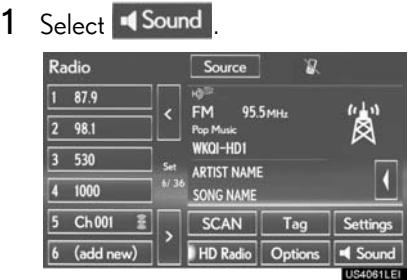


2 Select the “DSP” tab.

► Type A



► Type B

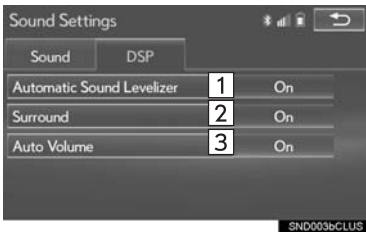

No.	Function
1	The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.
2	This function creates a surrounded by sound effect.
3	The system adjusts to the optimum volume for files with different recording levels.

3 Select the desired items to be set.

TONE AND BALANCE

TONE:

How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.


BALANCE:

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

1 Select Sound.

2 Select the "Sound" tab.

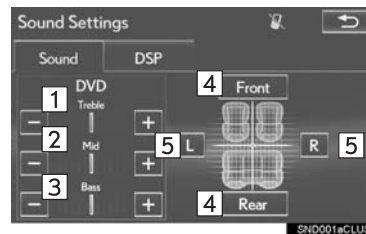

3 Select the desired screen button.

No.	Function
1	Select "+" or "-" to adjust high-pitched tones.
2	Select "+" or "-" to adjust mid-pitched tones.
3	Select "+" or "-" to adjust low-pitched tones.
4	Select to adjust the sound balance between the front and rear speakers.
5	Select to adjust the sound balance between the left and right speakers.

4


AUDIO/VISUAL SYSTEM

AUDIO SCREEN
ADJUSTMENT

SCREEN SIZE SETTINGS

The screen size can be selected for each type of media.

- DVD video/iPod video/VTR
- 1 Select “Options” on the control screen.
 - 2 Select “Wide” on the options screen.
 - 3 Select the desired item to be adjusted.

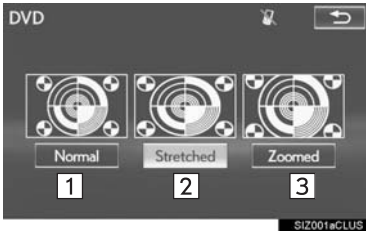

No.	Function
1	Select to display a 4 : 3 screen, with either side in black.
2	Select to enlarge the image horizontally and vertically to full screen.
3	Select to enlarge the image by the same ratio horizontally and vertically.

CONTRAST, BRIGHTNESS,
COLOR AND TONE
ADJUSTMENT

The brightness, contrast, color and tone of the screen can be adjusted.

- DVD video/iPod video/VTR
- 1 Select “Options” on the control screen.
 - 2 Select “Display” on the option screen.
 - 3 Select the desired item to be adjusted.




Screen button	Function
"Color" "R"	Select to strengthen the red color of the screen.
"Color" "G"	Select to strengthen the green color of the screen.
"Tone" "+"	Select to strengthen the tone of the screen.
"Tone" "-"	Select to weaken the tone of the screen.
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

INFORMATION

- Depending on the audio source, some functions may not be available.

VOICE COMMAND SYSTEM

- 1 Press this switch to operate the voice command system.

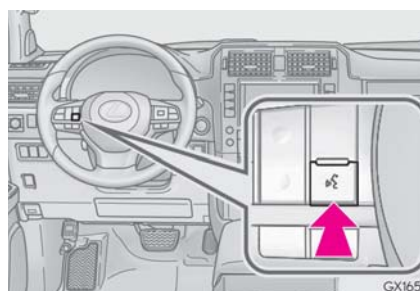

- The voice command system and its list of commands can be operated. (→P.280)

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

1. AM/FM RADIO

OVERVIEW


The radio operation screen can be reached by the following methods:

Press the “AUDIO” button to display the audio control screen.


Select “Source” and select “AM” or “FM” to change the radio mode.

■ CONTROL SCREEN

► Top screen

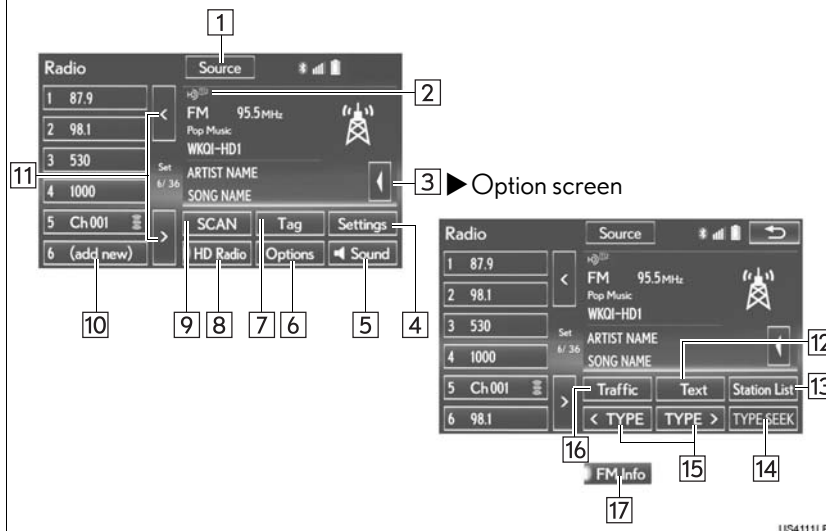

■ CONTROL PANEL

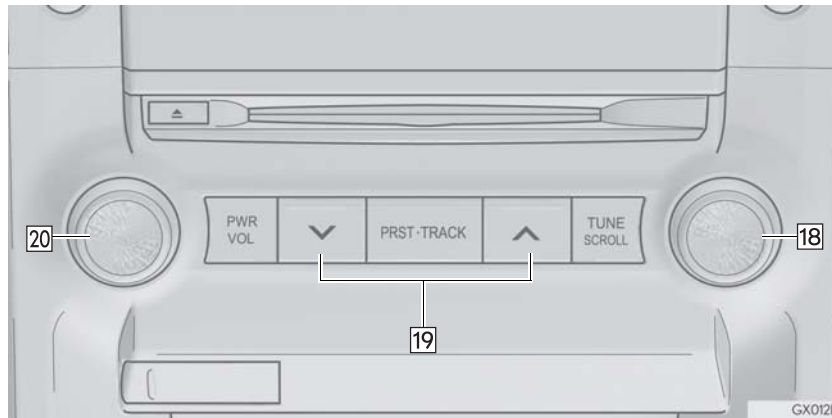

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the multicast channel selection screen.
3	Select to display the cache radio operation buttons.
4	Select to display the audio setting screen.
5	Select to display the sound setting screen.
6	Select to display the option screen.
7	Select to store information of the audio currently being broadcast on the radio.
8	Select to turn HD radio mode on/off. When the "HD Radio" indicator is off, the station list shows only analog broadcasts.

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

No.	Function
9	Select to scan for receivable stations.
10	Select to tune to preset stations/channels.
11	Select to change the page of preset buttons.
12	Select to display text messages.
13	Select to display a list of receivable stations.
14	Select to seek a receivable station of the selected category.
15	Select to select a program type/channel category.
16	FM only: Select to display traffic messages.
17	Analog FM only: Select to display RBDS text messages.
18	• Turn to step up/down frequencies. • Turn to move up/down the list.
19	• Press to select a preset station. • Press and hold to seek for a station.
20	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

INFORMATION

- The radio automatically changes to stereo reception when a stereo broadcast is received.

PRESETTING A STATION

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

- 1 Tune in the desired station.
- 2 Select "add new".



- To change the preset station to a different one, select and hold the preset station.
- 3 Select "Yes" on the confirmation screen.
 - 4 Select "OK" after setting the new preset station.

INFORMATION

- The number of preset radio stations displayed on the screen can be changed. (→P.260)

SELECTING A STATION FROM THE LIST

A station list can be displayed.

- 1 Select "Options".



- 2 Select "Station List".



4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

- 3 FM radio only: Select the desired program type.



- 4 Select the desired station and select "OK".



REFRESHING THE STATION LIST

- 1 Select "Refresh" on the "Station List" screen and the following screen will be displayed.



"Cancel Refresh": Select to cancel the refresh.

"Source": Select to change to another audio source while refreshing.

INFORMATION

- The audio system sound is muted during refresh operation.
- In some situations, it may take some time to update the station list.

CACHING A RADIO PROGRAM

A radio program can be cached and played back in a time-shifted manner.


PLAYING BACK THE CACHE MANUALLY

The broadcast cached in the program cache can be played back manually.

- 1 Select  on the right side of the screen.



- 2 Select the desired cache radio operation button.

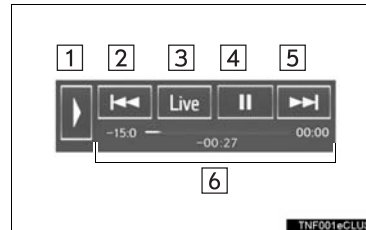

No.	Function
1	Hides the cache operation buttons
2	Select: Skips backward 2 minutes Select and hold: Fast rewinds continuously
3	Returns to the live radio broadcast
4	Pauses the playback (To restart, select )
5	Select: Skips forward 2 minutes Select and hold: Fast forwards continuously
6	Red vertical bar: Shows what portion of the cached broadcast is currently playing Light blue bar: Shows time in which cache writing is in progress

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

AUTOMATIC PLAYBACK OF THE CACHE

If the radio broadcast is interrupted by another audio output, such as an incoming phone call, the system will automatically cache the interrupted portion and perform time-shift playback when the interruption ends. To manually operate the cache operation: (→P.173)

INFORMATION

- The system can store up to 15 minutes. Cached data will be erased when the radio mode or station is changed or when the audio system is turned off.
- If noise or silence occurs during the caching process, cache writing will continue, with the noise or silence recorded as is. In this case, the cached broadcast will contain the noise or silence when played back.

RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the “FM Info” indicator is on.

SELECTING A DESIRED PROGRAM TYPE

1 Select "Options".



2 Select "TYPE >" or "< TYPE" to move forward and backward through the program list.



- Once a program type has been set, "TYPE SEEK" will appear on the screen.

- The program list is in the following order:

- "Classical"
- "Country"
- "EasyLis" (Easy Listening)
- "Inform" (Information)
- "Jazz"
- "News"
- "Oldies"
- "Other"
- "Pop Music"
- "Religion"
- "Rock"
- "R&B" (Rhythm and Blues)
- "Sports"
- "Talk"
- "Traffic" (Not available when "HD Radio" indicator is off.)
- "Alert" (Emergency Alert)

- #### 3 Select "TYPE SEEK" and the system will start to seek for stations in the relevant program type.

INFORMATION

- If no relevant program can be found, "no type" will appear on the screen.

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

TRAFFIC ANNOUNCEMENT (FM RADIO)

A station that regularly broadcasts traffic information is automatically located.

- 1 Select “Options”.



- 2 Select “Traffic” to seek a traffic program station. “TRAF SEEK” will appear on the screen.



INFORMATION

- If no traffic program station is found, “No Traffic” will appear on the screen.
- If a traffic program station is found, the name of the traffic program station will be displayed for a while.

USING HD Radio™ TECHNOLOGY

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see <http://dts.com/patents>. HD Radio, Artist Experience, and the HD, HD Radio, and “ARC” logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.

AVAILABLE HD Radio™ TECHNOLOGY


MULTICAST

On the FM radio frequency most digital stations have “multiple” or supplemental programs on one FM station.

- 1 Select the “HD” logo.



- 2 Select the desired channel.

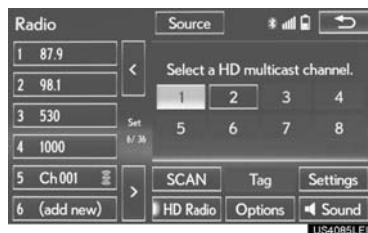

- Turning the “TUNE/SCROLL” knob can also select the desired multicast channel.

SAVING MUSIC INFORMATION

Tag information in the music broadcasting is preserved in the system and transmits to an iPod.

- 1 Select “Tag” to bookmark the music information.



- 2 Connect an iPod. (→P.163)

- Turn on the power of the iPod if it is not turned on.
- Once an iPod is connected, the music tag moves from the radio into the iPod.
- When the iPod is connected to iTunes, the “tagged” information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album which had been listened to on their radio.

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

INFORMATION

- The tag information can not be preserved while scanning or caching the radio station.
- If tagging the music information fails, "Saving the HD Radio tag failed." will be displayed on the screen. If this occurs, tag the information again.
- HD Radio™ stations can be preset.
- An orange "HD)" logo indicator will be displayed on the screen when in digital. The "HD)" logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
- The song title, artist name and music genre will appear on the screen when available by the radio station.
- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.
- Tag information cannot be obtained while scanning or while time-shift playback of the cache operation is being performed.

TROUBLESHOOTING GUIDE

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Turning the indicator of the "HD radio" button off can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/report_radio_station_experiences .


2. RADIO OPERATION

2. XM Satellite Radio


OVERVIEW

The radio operation screen can be reached by the following methods:
Press the “AUDIO” button to display the audio control screen.
Select “Source” and select “SAT”.

■ CONTROL SCREEN

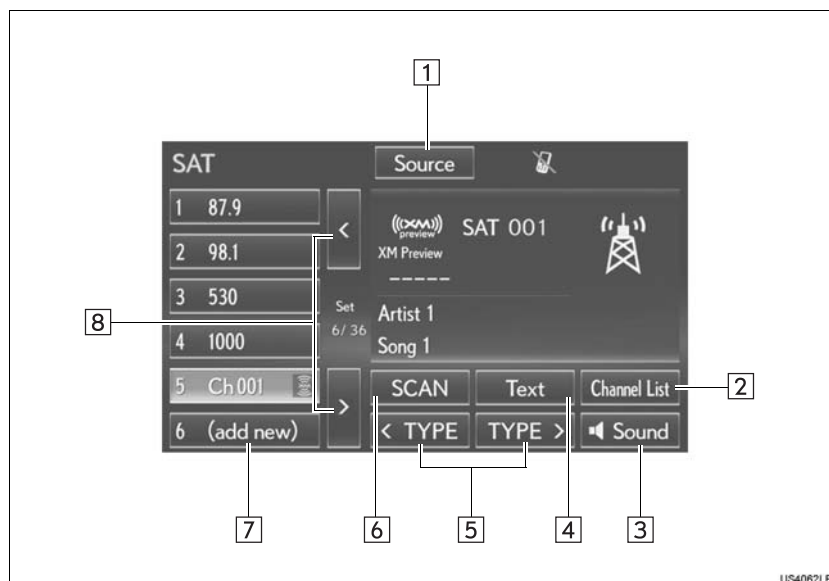

■ CONTROL PANEL

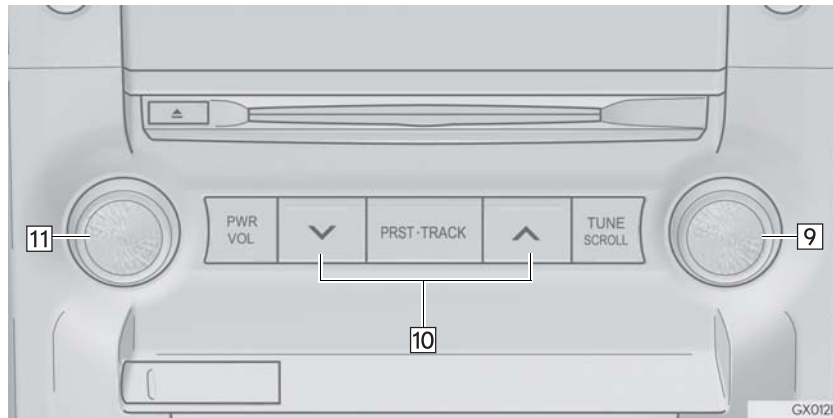

4

AUDIO/VISUAL SYSTEM

2. RADIO OPERATION

No.	Function
1	Select to display the audio source selection screen.
2	Select to display a receivable channel list.
3	Select to display the sound setting screen.
4	Select to display text messages.
5	Select to select a program type/channel category.
6	Select to scan for receivable channels.
7	Select to tune to preset stations/channels.
8	Select to change the page of preset buttons.
9	• Turn to step up/down channels. • Turn to move up/down the list.
10	• Press to select a preset channel. • Press and hold to seek for a channel.
11	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

HOW TO SUBSCRIBE TO XM Satellite Radio

To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary.

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

HOW TO SUBSCRIBE

It is necessary to enter into a separate service agreement with XM Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and digital satellite tuner.

- For complete information on subscription rates and terms, or to subscribe to XM Satellite Radio:
 - U.S.A.
Refer to www.siriusxm.com or call 1-877-447-0011.
 - Canada
Refer to www.siriusxm.ca or call 1-877-438-9677.



NOTICE

● XM Radio Services—Legal Disclaimers and Warnings

- Fees and Taxes—Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change.

Subscriptions subject to Customer Agreement available at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and Canada.

Explicit Language Notice—Channels with frequent explicit language are indicated with an “XL” preceding the channel name. Channel blocking is available for XM Satellite Radio receivers by notifying XM at;

U.S.A. Customers:
Visit www.siriusxm.com or calling 1-877-447-0011

Canadian Customers:
Visit www.siriusxm.ca or calling 1-877-438-9677

2. RADIO OPERATION



NOTICE

- It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the XM Satellite Radio System or that support the XM website, the Online Service or any of its content. Furthermore, the AMBE[®] voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.
- Note: this applies to XM receivers only and not XM Ready devices.

INFORMATION

- XM Radio Services—Descriptions
 - Radio and Entertainment
XM offers more than 170 satellite radio channels of commercial-free music and premier sports, news, talk, and entertainment. XM is broadcast via satellites to millions of listeners across the continental United States. XM subscribers listen to XM on satellite radio receivers for the car, home, and portable use. More information about XM is available online at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada).

INFORMATION

- XM Radio Services—Subscription Instructions
 - For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included.
Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.
For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:
U.S.A. Customers:
Visit www.siriusxm.com or call 1-877-447-0011
Canadian Customers:
Visit www.siriusxm.ca or call 1-877-438-9677

INFORMATION

- XM Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM Satellite Radio customer service agreement.
- Customers should have their radio ID ready; the radio ID can be found by tuning to "CH 000" on the radio. For details, see "DISPLAYING THE RADIO ID" below.
- All fees and programming are the responsibility of XM Satellite Radio and are subject to change.

SATELLITE TUNER TECHNOLOGY NOTICE

Lexus's satellite radio tuners are awarded Type Approval Certificates from XM Satellite Radio Inc. as proof of compatibility with the services offered by XM Satellite Radio.

INFORMATION

- Satellite tuner
The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM[®] Satellite Radio.

DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

- If "CH 000" is selected using the "TUNE/SCROLL" knob, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

2. RADIO OPERATION

PRESETTING A CHANNEL

- 1 Tune in the desired channel.
- 2 Select “add new”.




- To change the preset channel to a different one, select and hold the preset station/channel.
- 3 Select “Yes” on the confirmation screen.
 - 4 Select “OK” after setting the new preset channel.

SELECTING A CHANNEL FROM THE LIST


- 1 Select “Channel List”.



- 2 Select the desired program type.

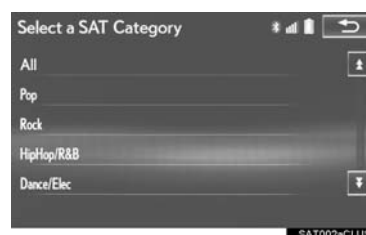

- 3 Select the desired channel and select “OK”.

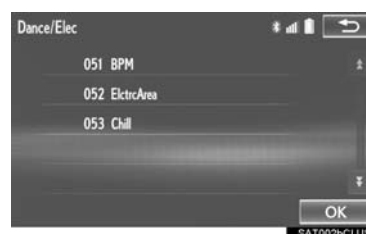

IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
"SAT Ck Antenna"	The XM antenna is not connected. Check whether the XM antenna cable is attached securely.
	A short circuit occurs in the antenna or the surrounding antenna cable. See a Lexus certified dealer for assistance.
"SAT Ch Unauth"	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "CH 000" and all free-to-air channels.
	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
"SAT No Signal"	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"Loading"	The unit is acquiring audio or program information. Wait until the unit has received the information.
"SAT Ch Off Air"	The channel you selected is not broadcasting any programming. Select another channel.
-----	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
"SAT Ch Unavail"	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "CH 001". If it does not change automatically, select another channel.

INFORMATION

- Contact the XM Listener Care Center at 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada).

2. RADIO OPERATION

3. INTERNET RADIO

LISTENING TO INTERNET RADIO

One of LEXUS App Suite's features is the ability to listen to internet radio. In order to use this service, a compatible phone and the navigation system needs to be set up. For details: →P.357

- 1 Select the desired application screen button.



- The internet radio application screen is displayed.
- Perform operations according to the displayed application screen.
- If a compatible phone is already registered, it will be connected automatically.
- By pressing the "AUDIO" button, the "Audio" screen can be returned to.

INFORMATION

- Other applications can be activated while listening to internet radio.
- An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using applications by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.
- Some parts of applications can be adjusted using the switches on the steering wheel.
- For additional information, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

3. MEDIA OPERATION

1. CD

OVERVIEW


The CD operation screen can be reached by the following methods:

► Inserting a disc (→P.162)

Press the **"AUDIO"** button to display the audio control screen.

Select **"Source"** and select **"DISC"**.

■ CONTROL SCREEN

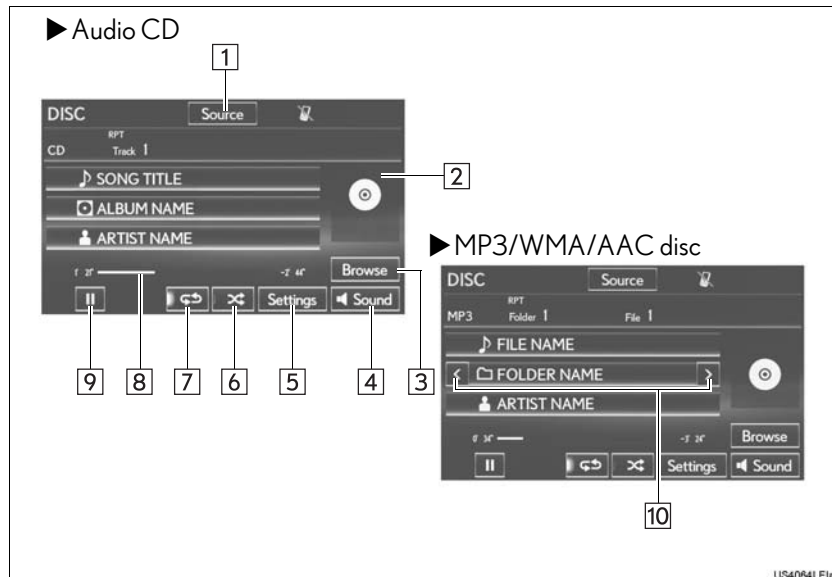


4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

■ CONTROL PANEL

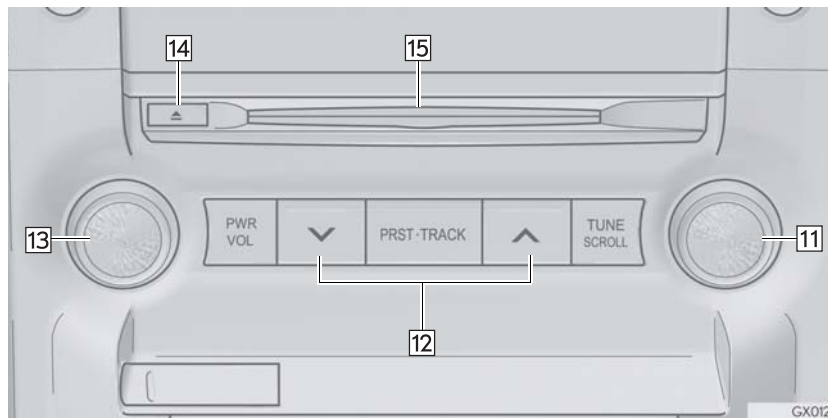

No.	Function
1	Select to display the audio source selection screen.
2	- Displays cover art - Select to display a track/file list.
3	- Audio CD: Select to display a track list. - MP3/WMA/AAC disc: Select to display a folder list. To return to the top screen, select "Now Playing" on the list screen.
4	Select to display the sound setting screen.
5	Select to display the audio setting screen.
6	Select to set random playback.
7	Select to set repeat playback.
8	Shows progress.
9	Select to play/pause.
10	Select to select a folder.
11	- Turn to select a track/file. - Turn to move the cursor up/down on the list. - Press to select the list.
12	- Press to select a track/file. - Press and hold to fast forward/rewind.
13	- Turn to adjust volume. - Press to turn the audio system on/off. - Press and hold to restart the audio system.
14	Press to eject a disc.
15	Disc slot

3. MEDIA OPERATION

INFORMATION

- If a disc contains CD-DA files and MP3/WMA/AAC files, only the CD-DA files can be played back.
- If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.

PLAYING AN AUDIO CD

REPEATING

The track currently being listened to can be repeated.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → off

INFORMATION

- When  is selected, "RPT" appears on the screen.

RANDOM ORDER

Tracks can be automatically and randomly selected.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - random (1 disc random) → off

INFORMATION

- When  is selected, "RAND" appears on the screen.

4

AUDIO/VISUAL SYSTEM

PLAYING AN MP3/WMA/ AAC DISC

REPEATING

The file or folder currently being listened to can be repeated.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file repeat → folder repeat → off
 - ▶ When random playback is on
 - file repeat → off

INFORMATION

- Each time  is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files or folders can be automatically and randomly selected.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - random (1 folder random) → folder random (1 disc random) → off

INFORMATION

- Each time  is selected, "RAND"/"FLD.RAND" appears on the screen.

3. MEDIA OPERATION

2. DVD

For safety reasons, the DVD video discs can only be viewed when the following conditions are met:

- (a) The vehicle is completely stopped.
- (b) The engine switch is in ACCESSORY or IGNITION ON mode.
- (c) The parking brake is applied.

While driving in DVD video mode, only the DVD's audio can be heard.

The playback condition of some DVD discs may be determined by the DVD software producer. This DVD player plays a disc as the software producer intended. As such, some functions may not work properly. Be sure to read the instruction manual that comes with the individual DVD disc. (→P.268)

OVERVIEW

The DVD operation screen can be reached by the following methods:

► Inserting a disc (→P.162)

Press the **"AUDIO"** button to display the audio control screen.


Select **"Source"** and select **"DISC"**.

4


AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

■ CONTROL SCREEN

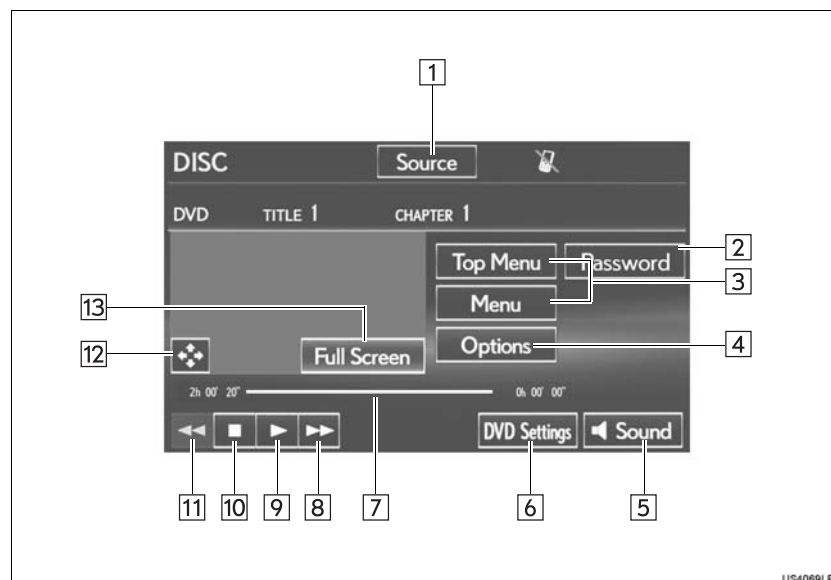

■ CONTROL PANEL

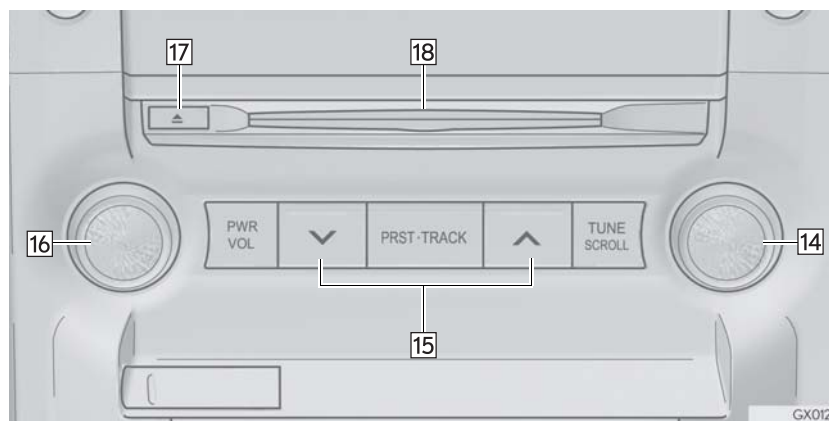

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the password input screen.
3	Select to display the menu screen.
4	Select to display the option screen. (→P.199)
5	Select to display the sound setting screen.
6	Select to display the DVD setting screen.
7	Shows progress
8	• During playback: Select to fast forward. • During a pause: Select to slow forward.
9	Select to play/pause.
10	Select to stop the video screen.
11	Select to rewind.
12	Select to display the menu control key.
13	Select to display full screen video.
14	Turn to select a chapter.
15	• Press to select a chapter. • Press and hold to fast forward/rewind.
16	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.
17	Press to eject a disc.
18	Disc slot

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION



WARNING

- Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

INFORMATION


- According to the DVD disc, some menu items can be selected directly. (For details, see the manual that comes with the DVD disc provided separately.)
- If  appears on the screen when a control is selected, the operation relevant to the control is not permitted.

DVD OPTIONS

1 Select “Options”.



2 The following screen is displayed.

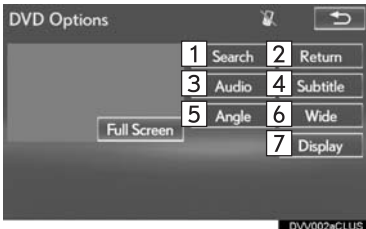

No.	Function	Page
1	Select to display the title search screen.	200
2	Select to display the pre-determined scene on the screen and start playing.	—
3	Select to display the audio selection screen.	200
4	Select to display the subtitle selection screen.	200
5	Select to display the angle selection screen.	200
6	Select to change the screen size.	166
7	Select to display the image quality adjustment screen.	166

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

SEARCHING BY TITLE


- 1 Select **"Search"**.
- 2 Enter the title number and select **"OK"**.



- The player starts playing video for that title number.

CHANGING THE AUDIO LANGUAGE

- 1 Select **"Audio"**.
- 2 Each time **"Change"** is selected, the audio language is changed.

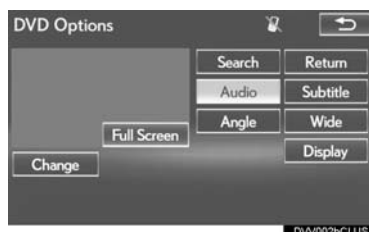

- The languages available are restricted to those available on the DVD disc.

CHANGING THE SUBTITLE LANGUAGE

- 1 Select **"Subtitle"**.
- 2 Each time **"Change"** is selected, the language the subtitles are displayed in is changed.



- The languages available are restricted to those available on the DVD disc.
- When **"Hide"** is selected, the subtitles can be hidden.

CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select **"Angle"**.
- 2 Each time **"Change"** is selected, the angle is changed.




- The angles available are restricted to those available on the DVD disc.

SETUP OPERATION FROM THE REAR SEAT

- ▶ Vehicles with rear seat entertainment system

This screen appears when a rear passenger selects the setup menu.

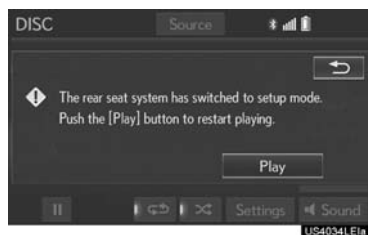

- Front passengers can cancel this setup operation by touching **“Play”**. The player will resume normal play.
- Likewise, a rear passenger can cancel a front passenger’s selection of the setup menu.
- To lock the rear seat entertainment system, see **“OPERATION FROM THE FRONT SEATS”** on page 234.

3. MEDIA OPERATION

3. USB MEMORY

OVERVIEW


The USB memory operation screen can be reached by the following methods:

► Connecting a USB memory (→P.163)


Press the “AUDIO” button to display the audio control screen.

Select “Source” and select “USB”.

■ CONTROL SCREEN

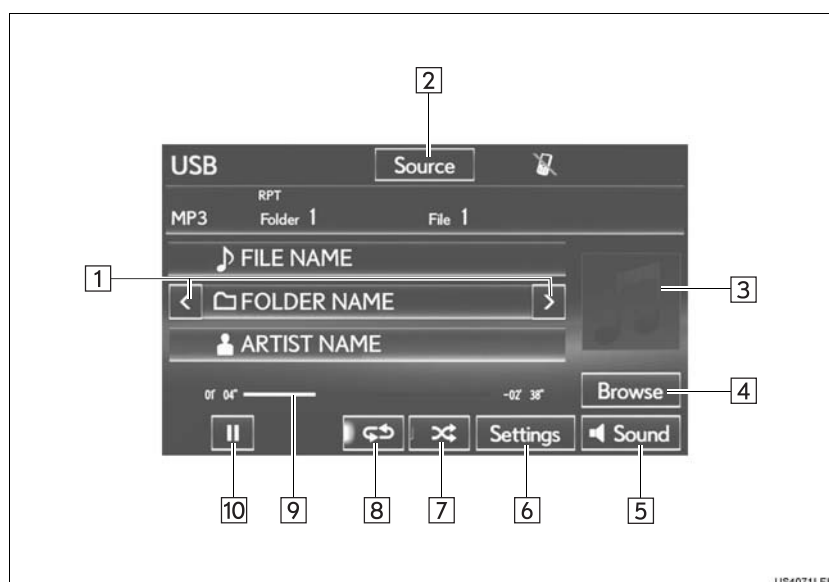

■ CONTROL PANEL

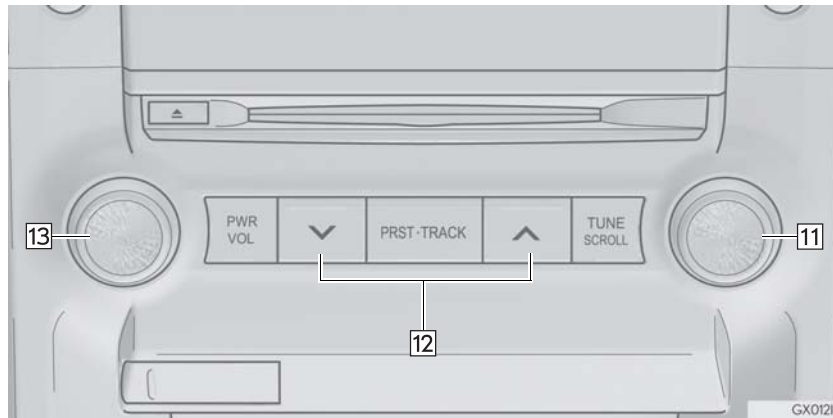

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

No.	Function
1	Select to select a folder/album.
2	Select to display the audio source selection screen.
3	• Displays cover art • Select to display a file/track list. To return to the top screen, select "Now Playing" on the list screen.
4	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.
5	Select to display the sound setting screen.
6	Select to display the audio settings screen.
7	Select to set random playback.
8	Select to set repeat playback.
9	Shows progress
10	Select to play/pause.
11	• Turn to select a track/file. • Turn to move the cursor up/down on the list. • Press to select the list.
12	• Press to select a track/file. • Press and hold to fast forward/rewind.
13	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

**WARNING**

- Do not operate the player's controls or connect the USB memory while driving.

**NOTICE**

- Depending on the size and shape of the USB memory that is connected to the system, the lid may not close fully. In this case, do not forcibly close the lid as this may damage the USB memory or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION

- If tag information exists, the file/folder names will be changed to track/album names.

USB AUDIO

REPEATING

The file/track or folder/album currently being listened to can be repeated.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - ▶ When random playback is off
 - file/track repeat → folder/album repeat → off
 - ▶ When random playback is on
 - file/track repeat → off

INFORMATION

- Each time  is selected, "RPT"/"FLD.RPT" appears on the screen.

RANDOM ORDER

Files/tracks or folders/albums can be automatically and randomly selected.

- 1 Select .



- Each time  is selected, the mode changes as follows:
 - random (1 folder/album random) → folder/album random (all folder/album random) → off

INFORMATION

- Each time  is selected, "RAND"/"FLD.RAND" appears on the screen.

3. MEDIA OPERATION

4. iPod

OVERVIEW


The iPod operation screen can be reached by the following methods:

► Connecting an iPod (→P.163)

Press the **"AUDIO"** button to display the audio control screen.

Select **"Source"** and select **"iPod (DEVICE NAME)"**.

■ CONTROL SCREEN

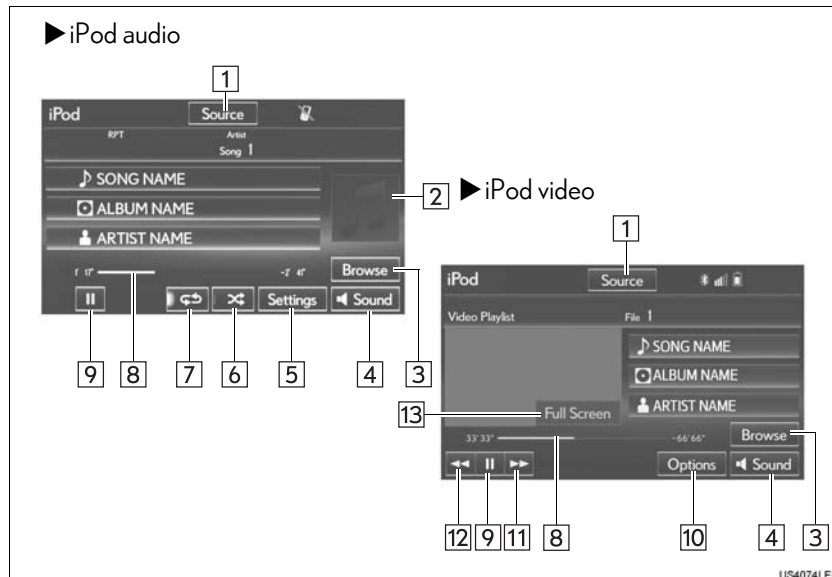


4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

■ CONTROL PANEL

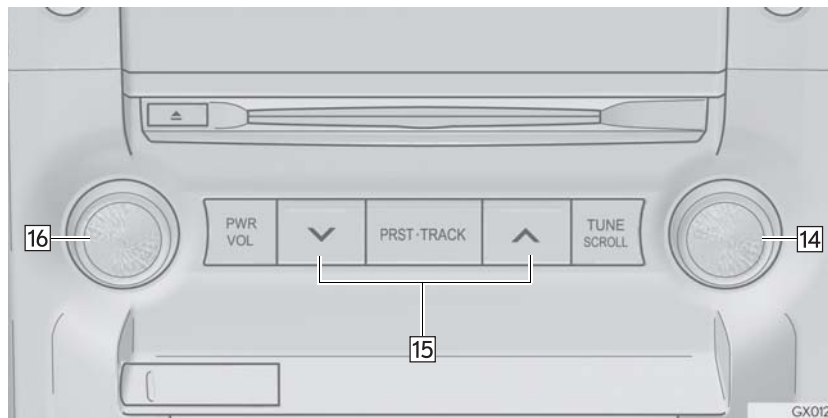

No.	Function	
	Audio	Video
1	Select to display the audio source selection screen.	Select to display the audio source selection screen.
2	- Displays cover art - Select to display a track list. To return to the top screen, select "Now Playing" on the list screen.	—
3	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.
4	Select to display the sound setting screen.	Select to display the sound setting screen.
5	Select to display the audio settings screen.	—
6	Select to set random playback.	—
7	Select to set repeat playback.	—
8	Shows progress.	Shows progress.
9	Select to play/pause.	Select to play/pause.
10	—	Select to display the option screen. (→P.213)
11	—	Select to fast forward.
12	—	Select to rewind.
13	—	Select to display full screen video.

3. MEDIA OPERATION

No.	Function	
	Audio	Video
14	• Turn to select a track. • Turn to move the cursor up/down on the list. • Press to select the list.	• Turn to select a file. • Turn to move the cursor up/down on the list. • Press to select the list.
15	• Press to select a track. • Press and hold to fast forward/rewind.	• Press to select a file. • Press and hold to fast forward/rewind.
16	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.



WARNING

- Do not operate the player's controls or connect the iPod while driving.



NOTICE

- Depending on the size and shape of the iPod that is connected to the system, the lid may not close fully. In this case, do not forcibly close the lid as this may damage the iPod or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its terminal.

INFORMATION

- The system can only output the sound while driving.
- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.
- Depending on the iPod, the video sound may not be able to be heard.
- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to “On” or “Off”. (→P.260) It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available.
- For viewing videos from an iPod, it is necessary to set “Video Sound Input” to “A/V”. (→P.259)
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <http://www.lexus.com/enform/>.

3. MEDIA OPERATION

iPod AUDIO

REPEATING

The track currently being listened to can be repeated.

1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → off

INFORMATION

- When  is selected, "RPT" appears on the screen.

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

1 Select .



- Each time  is selected, the mode changes as follows:
 - track shuffle → album shuffle → off

INFORMATION

- Each time  is selected, "Shuffle"/"ALB.Shuffle" appears on the screen.

iPod VIDEO


To change to iPod video mode, select **"Browse"** on the iPod audio screen, then select the **"Videos"** tab and select the desired video file.

iPod VIDEO OPTIONS

1 Select "Options".



2 Select the desired settings to change.

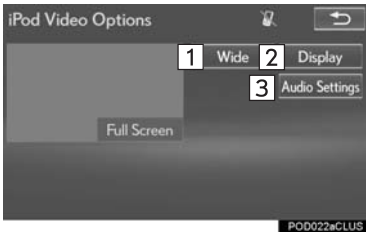

No.	Function	Page
1	Select to change the screen size.	166
2	Select to display the image quality adjustment screen.	166
3	Select to change audio settings.	258

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

5. Bluetooth® AUDIO

The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your device does not support Bluetooth®, the Bluetooth® audio system will not function.

OVERVIEW

The Bluetooth® audio operation screen can be reached by the following methods:

Depending on the type of portable player connected, some functions may not be available and/or the screen may look differently than shown in this manual.


► Connecting a Bluetooth® audio device (→P.219)

Press the “**AUDIO**” button to display the audio control screen.


Select “**Source**” and select “**Bluetooth***”.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ CONTROL SCREEN

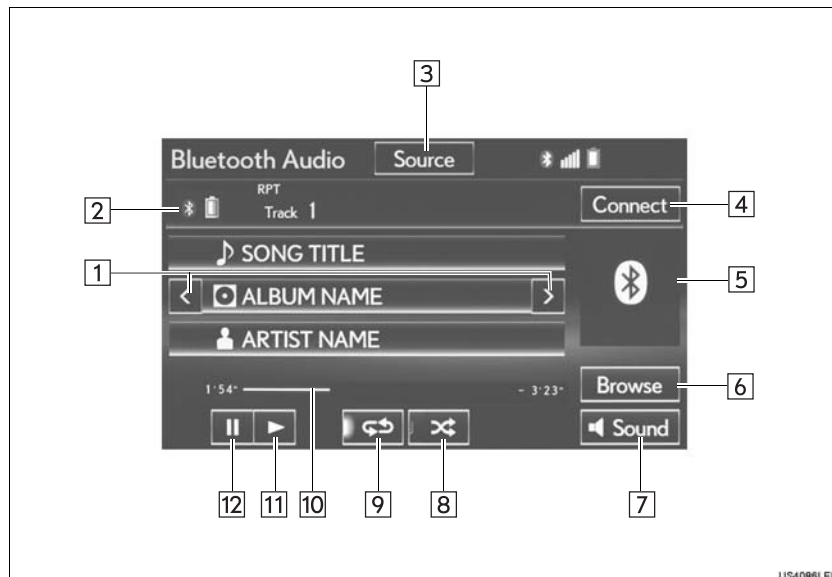

■ CONTROL PANEL

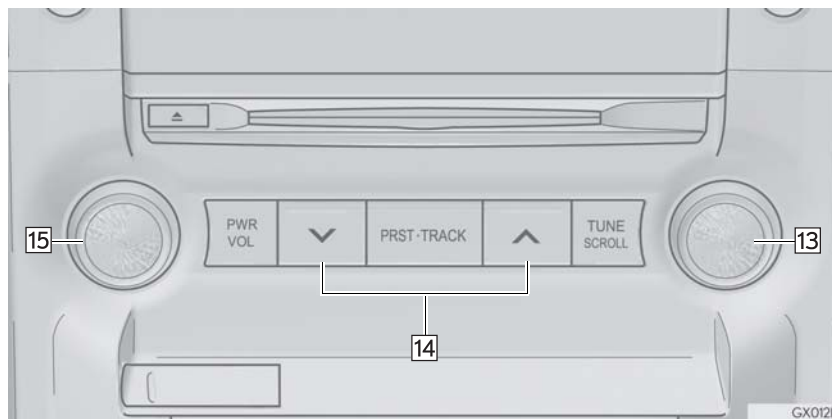

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

No.	Function
1	Select to select an album.
2	Displays Bluetooth® device condition
3	Select to display the audio source selection screen.
4	Select to display the portable device connection screen.
5	• Displays cover art • Select to display a track list. To return to the top screen, select "Now Playing" on the list screen.
6	Select to display the playlist screen. To return to the top screen, select "Now Playing" on the list screen.
7	Select to display the sound settings screen.
8	Select to set random playback.
9	Select to set repeat playback.
10	Shows progress
11	Select to play.
12	Select to pause.
13	• Turn to select a track/file. • Turn to move the cursor up/down on the list. • Press to select the list.
14	• Press to select a track/file. • Press and hold to fast forward/rewind. • Press to select the list.
15	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

 WARNING

- Do not operate the player's controls or connect to the Bluetooth® audio system while driving.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE

- Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

3. MEDIA OPERATION

INFORMATION

- Depending on the Bluetooth® device that is connected to the system, the music may start playing when selecting  while it is paused. Conversely, the music may pause when selecting  while it is playing.
- In the following conditions, the system may not function:
 - The Bluetooth® device is turned off.
 - The Bluetooth® device is not connected.
 - The Bluetooth® device has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- For operating the portable player, see the instruction manual that comes with it.
- If the Bluetooth® device is disconnected due to poor reception from the Bluetooth® network when the engine switch is in ACCESSORY or IGNITION ON mode, the system automatically reconnects the portable player.
- If the Bluetooth® device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.
- Bluetooth® device information is registered when the Bluetooth® device is connected to the Bluetooth® audio system. When selling or disposing of the vehicle, remove the Bluetooth® audio information from the system. (→P.61)

CONNECTING A Bluetooth® DEVICE

To use the Bluetooth® audio system, it is necessary to register a Bluetooth® device with the system.

► Registering an additional device

1 Select **"Connect"** on the Bluetooth® audio control screen.

2 For more information: →P.46

► Selecting a registered device

1 Select **"Connect"** on the Bluetooth® audio control screen.

2 For more information: →P.48

LISTENING TO Bluetooth® AUDIO

REPEATING

The track or album currently being listened to can be repeated.

1 Select .



- Each time  is selected, the mode changes as follows:
 - track repeat → album repeat → off

INFORMATION

- Each time  is selected, "RPT"/"ALB.RPT" appears on the screen.

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

1 Select .



- Each time  is selected, the mode changes as follows:
 - album random → all track random → off

INFORMATION

- Each time  is selected, "RAND"/"ALB.RAND" appears on the screen.

3. MEDIA OPERATION

6. AUX

OVERVIEW


The AUX operation screen can be reached by the following methods:

► Connecting a device to the AUX port (→P.163)

Press the **"AUDIO"** button to display the audio control screen.

Select **"Source"** and select **"AUX"**.

■ CONTROL SCREEN

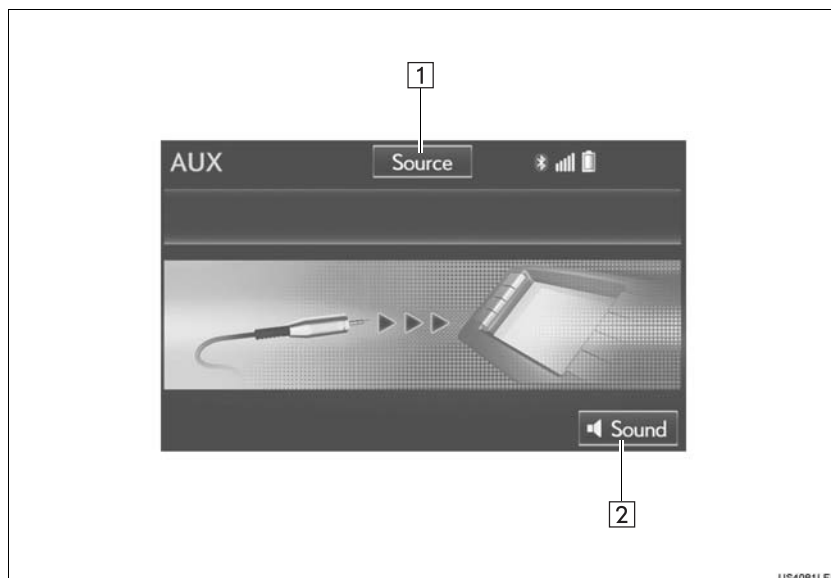


4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

■ CONTROL PANEL

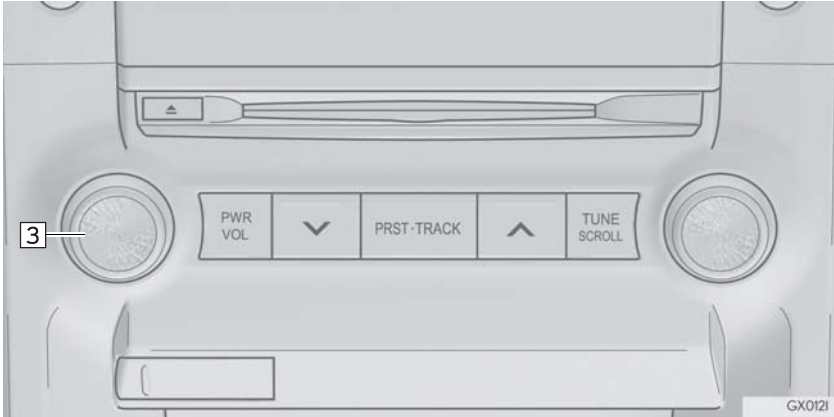

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the sound setting screen.
3	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.

**WARNING**

- Do not connect portable audio device or operate the controls while driving.

**NOTICE**

- Depending on the size and shape of the portable audio device that is connected to the system, the lid may not close fully. In this case, do not forcibly close the lid as this may damage the portable audio device or the terminal, etc.
- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

7. VTR

OVERVIEW


The VTR operation screen can be reached by the following methods:

► Connecting a device to the AUX port (→P.163)


Press the **"AUDIO"** button to display the audio control screen.

Select **"Source"** and select **"A/V"**.

■ CONTROL SCREEN

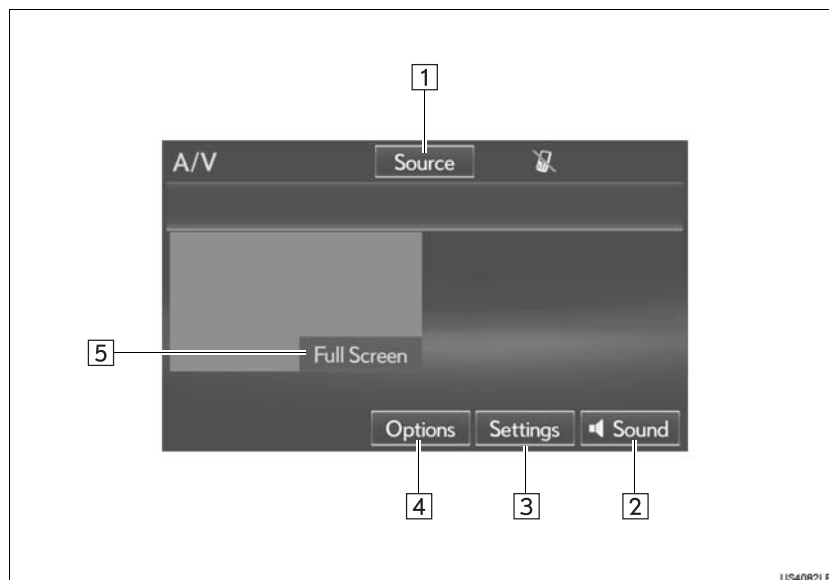

■ CONTROL PANEL

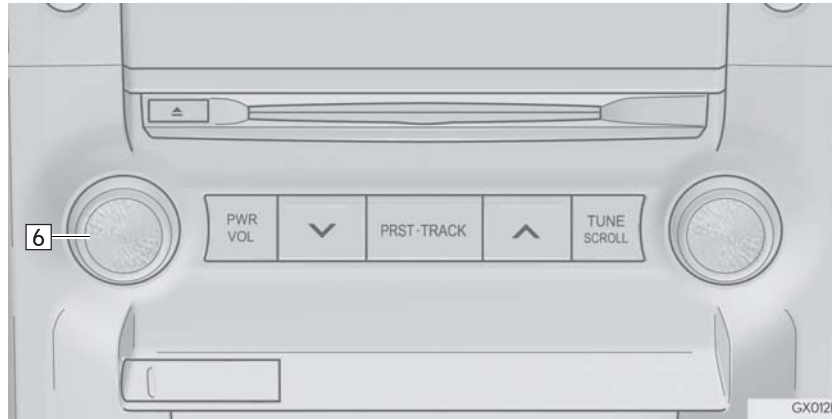

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the sound setting screen.
3	Select to display the audio setting screen.
4	Select to display the option screen. (→P.226)
5	Select to display full screen video.
6	• Turn to adjust volume. • Press to turn the audio system on/off. • Press and hold to restart the audio system.


4

AUDIO/VISUAL SYSTEM

3. MEDIA OPERATION

VTR OPTIONS

1 Select “Options”.

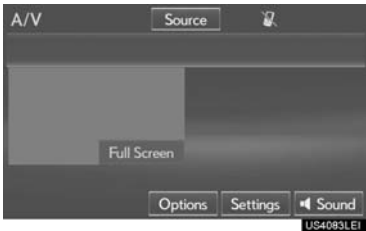

2 Select the desired settings to change.




No.	Function	Page
1	Select to change the screen size.	166
2	Select to display the image quality adjustment screen.	166

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES*

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio/visual system. The rear seat entertainment system can be used when the engine switch is in ACCESSORY or IGNITION ON mode.

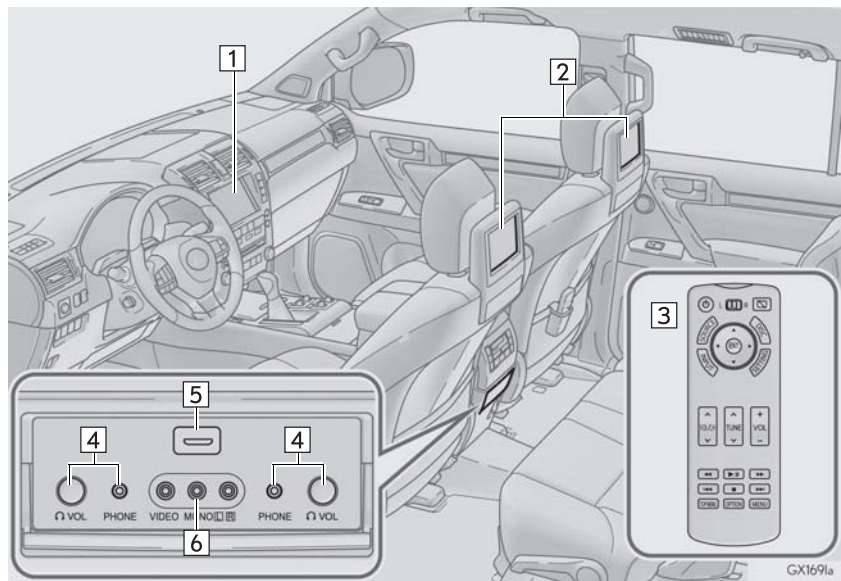

4

AUDIO/VISUAL SYSTEM

No.	Name
1	Front audio/visual system
2	Displays
3	Rear seat entertainment system controller
4	Headphone volume control dials and headphone jacks
5	HDMI port
6	A/V input port

*: If equipped

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

DISPLAY


A display is installed in the back of each front seat. When audio-video equipment is connected to the A/V input port or HDMI port, rear passengers can enjoy different audio sources on each display. (→P.250)



REAR SEAT ENTERTAINMENT SYSTEM CONTROLLER

BEFORE USING THE CONTROLLER (FOR NEW VEHICLE OWNERS)

- 1 Remove the insulating sheet before using the remote controller.

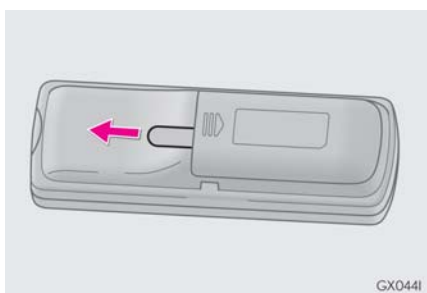


INFORMATION


- An insulating sheet is set to prevent the batteries from being discharged.

REPLACING THE CONTROLLER BATTERIES

- 1 Remove the cover.

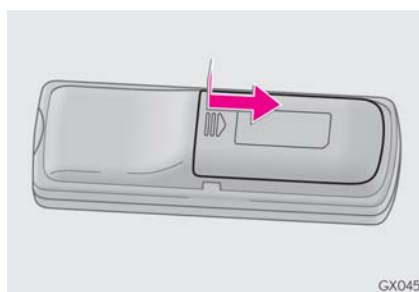

- 2 Remove the depleted batteries and install the new ones.

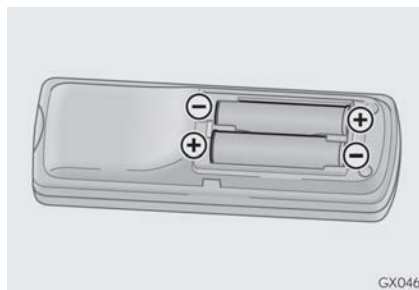

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


INFORMATION

- If the batteries are discharged, the following symptoms may occur:
 - The rear seat entertainment system controller will not function properly.
 - The operational range is reduced.
- When using AA batteries
 - Batteries can be purchased at your Lexus dealer, electric appliance shop, or camera stores.
 - Replace only with the same or equivalent type recommended by your Lexus dealer.
 - Dispose of used batteries according to the local laws.


HEADPHONE JACKS

Adjust the volume when you connect the headphones to the jack. Loud sounds may have a significant impact on the human body.

1 Press and release the lid.

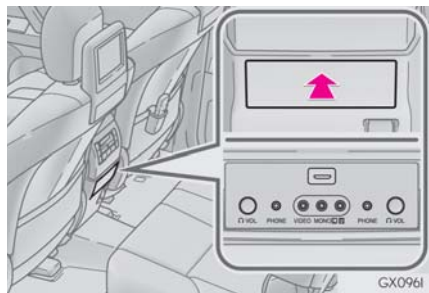

 2 Turn the knob clockwise to increase the volume. Turn the knob counterclockwise to decrease the volume.



No.	Function
1	To use the headphones, connect them to the jack.
2	To adjust the volume.

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

HEADPHONES

To listen to the rear audio, use headphones.

- With some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.
- Contact your Lexus dealer for further details.

USING WIRELESS HEADPHONES

The rear audio channels (frequencies) that are output from the left and right rear seat displays are different.


When using wireless headphones, use headphones that comply with the following conditions.

■ COMMUNICATION SYSTEM

Infrared rays

■ CHANNEL (FREQUENCY) SPECIFICATION

- 1 To listen to the audio of the right side display
R channel: 3.8 MHz
L channel: 3.2 MHz
- 2 To listen to the audio of the left side display
R channel: 2.8 MHz
L channel: 2.3 MHz

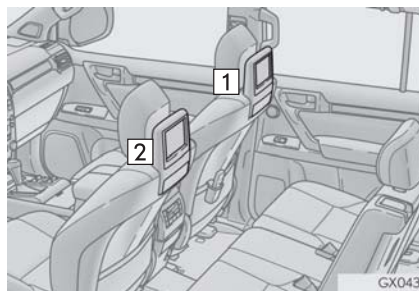

GX043I

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

CAUTION SCREEN

- This screen appears for a few seconds when the engine switch is in ACCESSORY or IGNITION ON mode.



TURNING THE REAR DISPLAY ON/OFF

- 1 Press the  button.



CHANGING THE DISPLAY TO BE OPERATED

When the switch is moved to "R", operations can be performed on the right screen. When switch is moved to "L", operations can be performed on the left screen.



4

TURNING THE REAR DISPLAY OFF USING THE REMOTE CONTROLLER

- 1 Press the  button.



- While the display is off, some remote control buttons can be operated.


AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

CHANGING THE SOURCE

1

Press the “SOURCE” button to display the audio source selection screen.

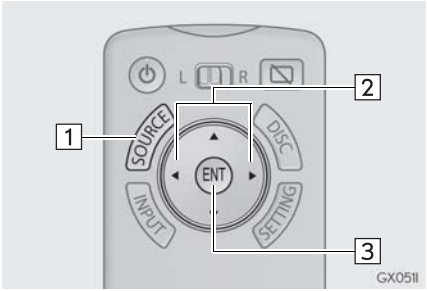

No.	Function
1	Press to display the audio source selection screen.
2	Press to select an icon.
3	Press to input the selected icon.

2

Select the desired source.



●

To switch the screen page, move the cursor point to the left or right side edge of the icons list. Then press the “◀” or “▶” button on the controller.

CHANGING THE SPEAKER OUTPUT

When the  is turned on, the rear seat entertainment system can be operated in link with front audio/visual system.

- 1 Select .



- The  indicator is highlighted.
- If the below message is appeared on the screen when the audio source is selected, use after the  is turned on.



! WARNING

- While driving
 - Do not use headphones. Doing so may cause an accident, resulting in death or serious injury.
- To prevent accidents and electric shock
 - Do not disassemble or modify the remote control.
- When the remote control is not used
 - Stow the remote control. Injuries may result in the event of sudden braking, sudden swerving or an accident.
- Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.
- Removed battery and other parts:
 - Keep away from children. These parts are small and if swallowed by a child they can cause choking. Failure to do so could result in death or serious injury.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION




NOTICE

- Cleaning the display
 - Wipe the display with a dry soft cloth.
 - If the screen is wiped with a rough cloth, the surface of the screen may be scratched.
- To prevent damage to the remote control
 - Keep the remote control away from direct sunlight, temperature heat and high humidity.
 - Do not drop or knock the remote control against hard objects.
 - Do not sit on or place heavy objects on the remote control.
- For normal operation after replacing the battery, observe the following precautions to prevent accidents:
 - Always work with dry hands. Moisture may cause the battery to rust.
 - Do not touch or move any other components inside the remote control.
 - Do not bend either of the battery terminals.

OPERATION FROM THE FRONT SEATS

The rear seat display can be operated from the front seats.

- 1 Press the “AUDIO” button.

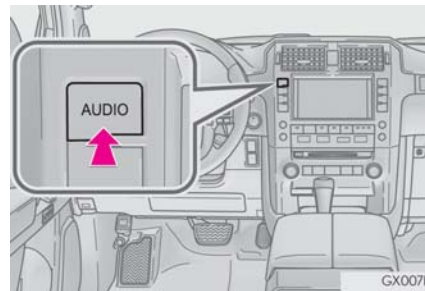

- 2 Select “Source”.
- 3 Select “Rear”.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

- 4 Select the desired button.




No.	Function
1	Turns the rear screen on or off.
2	Locks the system so passengers in the rear seats cannot operate the rear entertainment system.
3	When the "Speaker Output" is turned on, the rear seat entertainment system can be operated in link with front audio/visual system. (→P.235)

- The selected button indicator is highlighted.

CHANGING THE SPEAKER OUTPUT

- 1 Select "Speaker Output".
- 2 Select "Right" or "Left".

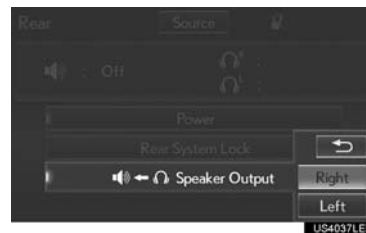

"Right": Link with the mode of right side display

"Left": Link with the mode of left side display

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

USING THE RADIO

When a different audio source is selected at the front seats, radio mode cannot be selected at the rear seats.


- 1 Display the audio source selection screen. (→P.232)
- 2 Select “AM”, “FM” or “SAT”.

CONTROL SCREEN



No.	Function	Page
1	Select to display the cache radio operation screen.	237

CONTROLLER

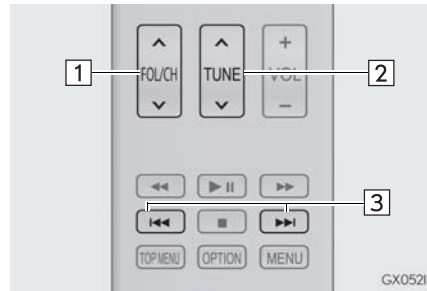

No.	Function
1	Press to select a preset station/channel.
2	● Press to select a station/channel. ● Press and hold to seek for a station/channel.
3	● Press to select a station/channel. ● Press and hold to seek for a station/channel.

CACHING A RADIO PROGRAM

- 1 Select “◀” on the radio control screen.
- 2 Select the desired cache radio operation button.



No.	Function
1	Hides the cache operation buttons
2	Returns to the live radio broadcast
3	White dot: Shows what portion of the cached broadcast is currently playing. White bar: Shows time in which cache writing is in progress

CONTROLLER



No.	Function
1	Press and hold fast rewinds continuously
2	Pauses the playback (To restart, select “▶”)
3	Press and hold fast forwards continuously

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

USING THE RADIO (INTERNET RADIO BROADCAST)

One of Apps's features is the ability to listen to internet radio. In order to use this service, an Apps compatible phone and the navigation system needs to be set. (→P.357)

- 1 Select Apps mode on the source screen to display the control screen.

■ CONTROL SCREEN



PLAYING AN AUDIO CD/CD TEXT


- 1 Display the audio source selection screen. (→P.232)
- 2 Select "DISC".
 - Even the "DISC" button is pressed, the mode can be changed to the DISC mode.

■ CONTROL SCREEN



No.	Function
1	Select to set repeat playback.
2	Select to set random playback.

■ CONTROLLER

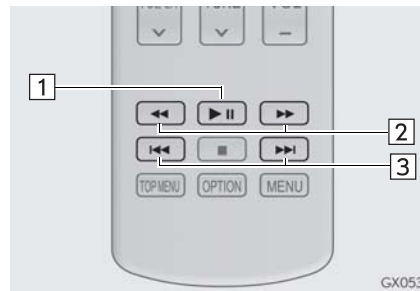

No.	Function
1	Press to play/pause.
2	Press to fast forward/rewind.
3	● Press to select a track. ● Press and hold to fast forward/rewind.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

PLAYING MP3/WMA/AAC DISCS


- 1 Display the audio source selection screen. (→P.232)
- 2 Select "DISC".
 - Even the "DISC" button is pressed, the mode can be changed to the DISC mode.

CONTROL SCREEN



No.	Function
1	Select to set repeat playback.
2	Select to set random playback.

 CONTROLLER



No.	Function
1	Press to select a folder.
2	Press to play/pause.
3	Press to fast forward/rewind.
4	● Press to select a file. ● Press and hold to fast forward/rewind.

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


PLAYING DVD VIDEO

1 Display the audio source selection screen. (→P.232)

2 Select "DISC".

- Even the "DISC" button is pressed, the mode can be changed to the DISC mode.

CONTROLLER

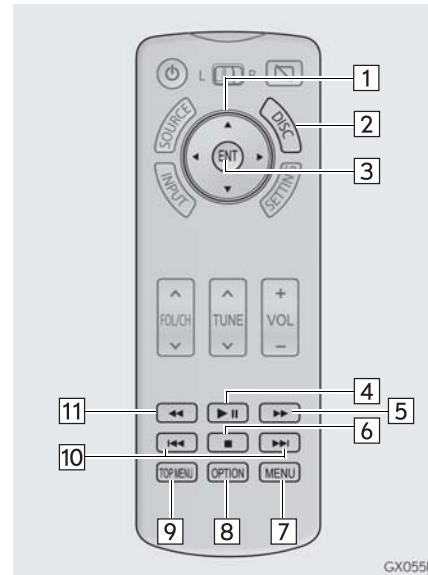


No.	Function
1	Press to select an Icon.
2	Press to select a DISC mode.
3	Press to input the selected icon.
4	Press to play/pause.
5	Press to fast forward. A disc during playback and forward slowly during pause.
6	Press to stop the screen.
7	Press to display the menu screen.
8	Press to display the option screen.
9	Press to display the title selection screen.
10	Selecting a chapter. Press and hold to fast forward or re-wind a chapter.
11	Press to rewind a disc during play-back

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

OPTION SCREEN

- 1 Press the “OPTION” button if no icons are shown while watching a DVD video and this screen appears.

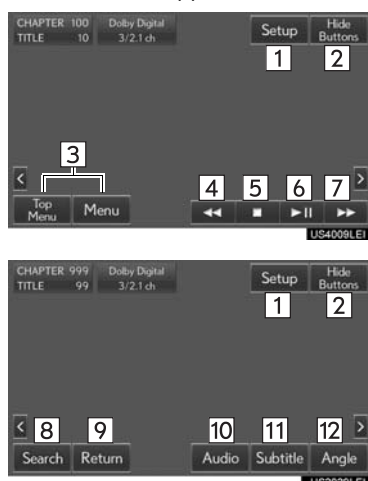

- When there are two pages, select “>” or “<” to change the page.

No.	Function	Page
1	Select to display the initial setup screen.	243
2	Select to turn off the icons from the screen.	—
3	Select to display the menu screen for DVD video. (For the operation, see the manual that comes with the DVD video disc provided separately.)	—

No.	Function	Page
4	Press and hold to rewind during playback.	—
5	Select to stop the video.	—
6	Select to pause/resume the video screen.	—
7	Press and hold to fast forward during playback and play in slow motion when the player is paused.	—
8	Select to display the title search screen.	242
9	Select to display the pre-determined scene on the screen and start playing.	—
10	Select to display the audio selection screen.	242
11	Select to display the subtitle selection screen.	242
12	Select to display the angle selection screen.	242

INFORMATION

- If  appears on the screen when a control is selected, the operation relevant to the control is not permitted.


4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ SEARCHING BY TITLE

- 1 Select **"Search"**.
- 2 Enter the title number and select **"OK"**.

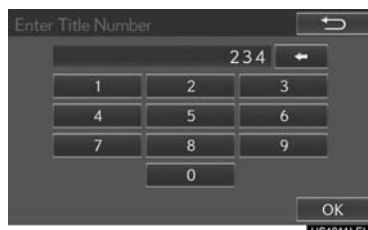

- The player starts playing video for that title number.

■ CHANGING THE SUBTITLE LANGUAGE

- 1 Select **"Subtitle"**.
- 2 Each time **"Subtitle"** is selected, the language the subtitles are displayed in is changed.



- The languages available are restricted to those available on the DVD disc.
- When **"Hide"** is selected, the subtitles can be hidden.

■ CHANGING THE AUDIO LANGUAGE

- 1 Select **"Audio"**.
- 2 Each time **"Audio"** is selected, the audio language is changed.



- The languages available are restricted to those available on the DVD disc.

■ CHANGING THE ANGLE

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select **"Angle"**.
- 2 Each time **"Angle"** is selected, the angle is changed.




- The angles available are restricted to those available on the DVD disc.

SETUP MENU

The initial setting can be changed. There are initial setting buttons on the "Setup Menu 1" and "Setup Menu 2" screens.

- 1 Display the option screen. (→P.241)
- 2 Select "**Setup**".
- 3 Select the items to be set.

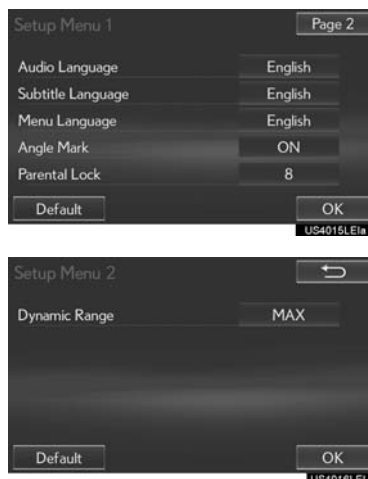

- 4 After the initial setting has been changed, select "**OK**".
- This screen will close, and the system will return to the DVD video screen.
 - When "**Default**" is selected, all menus are initialized.

AUDIO LANGUAGE

The audio language can be changed.

- 1 Select "**Audio Language**".
 - 2 Select the desired language to be heard on the "Audio Language" screen.
- If the desired language to be heard cannot be found on this screen, select "**Other**" and enter a language code. (→P.245)

SUBTITLE LANGUAGE

The subtitle language can be changed.

- 1 Select "**Subtitle Language**".
 - 2 Select the desired language to be read on the "Subtitle Language" screen.
- If the desired language to be read cannot be found on this screen, select "**Other**" and enter a language code. (→P.245)

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ MENU LANGUAGE

The language on the DVD video menu can be changed.

- 1 Select **"Menu Language"**.
- 2 Select the desired language to be read on the "Menu Language" screen.
 - If the desired language to be read cannot be found on this screen, select **"Other"** and enter a language code. (→P.245)

■ ANGLE MARK

The multi-angle mark can be turned on or off on the screen while discs that are multi-angle compatible are being played.

- 1 Select **"Angle Mark"**.
- 2 Select **"ON"** or **"OFF"**.

■ PARENTAL LOCK

The level of viewer restrictions can be changed.

- 1 Select **"Parental Lock"** on the "Setup Menu 1" screen.
- 2 Enter the 4-digit personal code on the "Enter Key Code" screen.
 - If the wrong numbers are entered, select  to delete the numbers.
- 3 Select a parental level (1-8) on the "Select Restriction Level" screen.

■ DYNAMIC RANGE

The difference between the lowest volume and the highest volume can be adjusted.

- 1 Select **"Dynamic Range"** on the "Setup Menu 2" screen.
- 2 Select **"MAX"**, **"STD"** or **"MIN"**.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

■ ENTER AUDIO/SUBTITLE/DVD LANGUAGE CODE

If “Other” on the “Audio Language” screen, “Subtitle Language” screen or “Menu Language” screen is selected, the desired language to be heard or read can be selected by entering a language code. (→P.262)


- 1 Enter the 4-digit language code.



- 2 Select “OK”.

■ SETUP OPERATION FROM THE FRONT SEAT

This screen appears when a front passenger selects the setup menu.

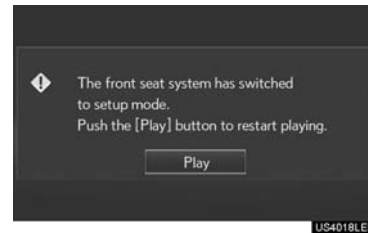

- Rear passengers can cancel this setup operation by selecting “Play”. The player will resume normal play.
- Likewise, a front passenger can cancel a rear passenger's selection of the setup menu.

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

PLAYING A USB MEMORY

When a different audio source is selected at the front seats, USB mode cannot be selected at the rear seats.


- 1 Connect a USB memory. (→P.163)
- 2 Display the audio source selection screen. (→P.232)
- 3 Select "USB".

CONTROL SCREEN



No.	Function
1	Select to set repeat playback.
2	Select to set random playback.

CONTROLLER

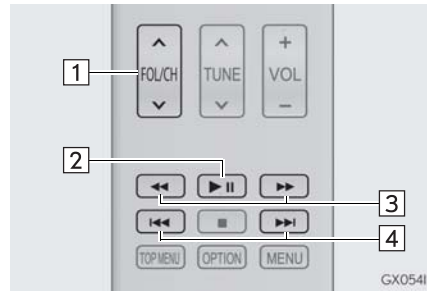

No.	Function
1	Press to select a folder/album.
2	Press to play/pause.
3	Press to fast forward/rewind.
4	● Press to select a file/track. ● Press and hold to fast forward/rewind.

INFORMATION

- Depending on the USB memory that is connected to the system, certain functions may not be available.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

PLAYING iPod

When a different audio source is selected at the front seats, iPod mode cannot be selected at the rear seats.

- 1 Connect iPod. (→P.163)
- 2 Display the audio source selection screen. (→P.232)
- 3 Select "iPod (DEVICE NAME)".


iPod AUDIO

CONTROL SCREEN



No.	Function
1	Select to set repeat playback.
2	Select to set random playback.
3	Select to display the iPod video control screen.

 CONTROLLER



No.	Function
1	Press to play/pause.
2	Press to fast forward/rewind.
3	● Press to select a track. ● Press and hold to fast forward/rewind.

4

AUDIO/VISUAL SYSTEM

iPod VIDEO

If iPod mode is selected again at the rear seats when iPod video is being displayed in the front monitor, iPod video can be displayed.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


■ CONTROL SCREEN



No.	Function
1	Select to display the iPod audio control screen.

- Select “iPod (DEVICE NAME)” to display full screen video.
- Press the “SOURCE” button and the system will return to the iPod video control screen.

■ CONTROLLER

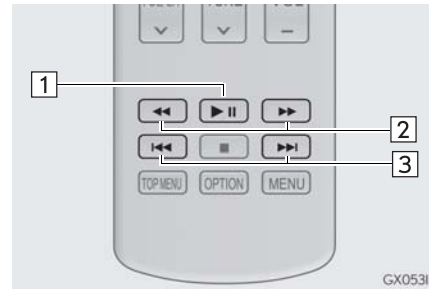

No.	Function
1	Press to play/pause.
2	Press to fast forward/rewind.
3	● Press to select a file. ● Press and hold to fast forward/rewind.

INFORMATION


- Depending on the iPod that is connected to the system, certain functions may not be available.

PLAYING Bluetooth® AUDIO

When a different audio source is selected at the front seats, Bluetooth® audio mode cannot be selected at the rear seats.

- 1 Display the audio source selection screen. (→P.232)
- 2 Select "Bluetooth*".


CONTROL SCREEN

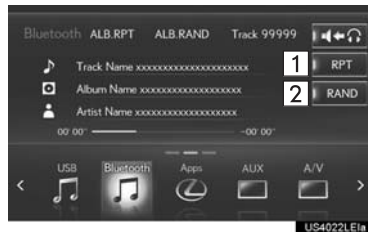

No.	Function
1	Select to set repeat playback.
2	Select to set random playback.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

 CONTROLLER



No.	Function
1	Press to select an album.
2	Press to play/pause.
3	Press to fast forward/rewind.
4	● Press to select a track. ● Press and hold to fast forward/rewind.

INFORMATION

- Depending on the portable player that is connected to the system, certain functions may not be available.

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

USING THE AUX MODE

When a different audio source is selected at the front seats, AUX mode cannot be selected at the rear seats.

- 1 Connecting a device to the AUX port. (→P.163)
- 2 Display the audio source selection screen. (→P.232)
- 3 Select "AUX".

USING THE VIDEO MODE

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the port.

(INFORMATION)


- The volume can be adjusted using the vehicle's audio controls. All other operations must be made on the audio/visual equipment itself. For details about operation of audio/visual equipment, refer to the manufacturer's instructions.

USING THE AUX PORT

- 1 Connecting a device to the AUX port. (→P.163)
- 2 Display the audio source selection screen. (→P.232)
- 3 Select "A/V".

USING THE A/V INPUT PORT

- 1 Press and release the lid, connecting an audio/visual device.

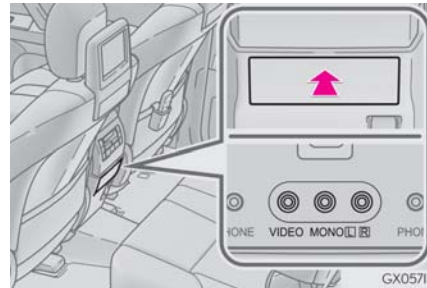

- The A/V input port is composed of 3 input ports.

Color	Function
Yellow	Video input port
White	Left channel audio input port
Red	Right channel audio input port

- 2 Display the audio source selection screen. (→P.232)
 - 3 Select "Rear-A/V".
- Video mode can be selected by using the controller. (→P.251)


⚠ NOTICE

- When the A/V input port and/or head-phone jack is not in use, keep the lid closed. Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

USING THE HDMI PORT

About the HDMI terminal, the interface that is connecting video and audio to system and audio/visual device. You can enjoy high-definition video and audio by connecting the single cable to the HDMI terminal and the system.

- 1 Press and release the lid, connecting an audio/visual device.

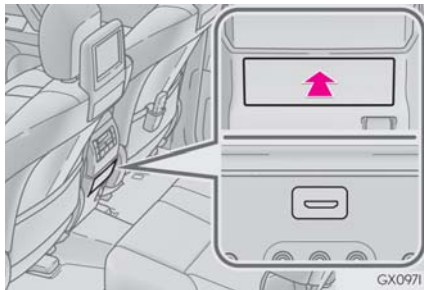

- 2 Display the audio source selection screen. (→P.232)
- 3 Select "Rear-HDMI".
 - Video mode can be selected by using the controller. (→P.251)



NOTICE

- When the HDMI port and/or headphone jack is not in use, keep the lid closed. Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

COMPATIBLE FORMAT

- Compatible video signal
480p, 576p, VGA
- Compatible sound signal
LPCM 2ch

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

SELECTING THE VIDEO MODE BY USING THE CONTROLLER

- 1 Press the "INPUT" button.



- When the audio/visual device is connected to A/V input port and HDMI port at the same time, the mode will be switched by pressing "INPUT" button each time.
- In video mode, different sound/visual modes can be enjoyed for the left and right screens when  is off.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


CHANGING SETTINGS

CONTRAST, BRIGHTNESS,
COLOR AND TONE
ADJUSTMENT

1 Press the “SETTING” button.



2 Select the desired item to be adjusted.

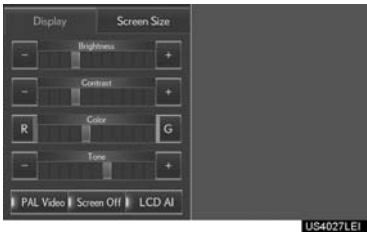

Screen button	Function
“Brightness” “+”	Select to brighten the screen.
“Brightness” “-”	Select to darken the screen.
“Contrast” “+”	Select to strengthen the contrast of the screen.
“Contrast” “-”	Select to weaken the contrast of the screen.
“Color” “G”	Select to strengthen the green color of the screen.
“Color” “R”	Select to strengthen the red color of the screen.
“Tone” “+”	Select to strengthen the tone of the screen.
“Tone” “-”	Select to weaken the tone of the screen.

- The screen goes off when “Screen Off” is selected. To turn the screen back on, press any remote control button. The selected screen appears.

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


CHANGING TO PAL FORMAT

Turn **"PAL Video"** on when PAL format equipment is connected to the A/V input port.

- 1 Press the **"SETTING"** button.



- 2 Select **"PAL Video"**.

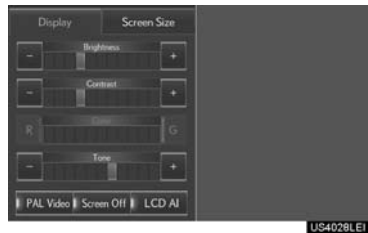

- The **"PAL Video"** indicator is highlighted.

SETTING LCD AI

Automatically determines the tone of the video image and sets the contrast to an optimum level, displaying a sharp image.

- 1 Press the **"SETTING"** button.



- 2 Select **"LCD AI"**.



- The **"LCD AI"** indicator is highlighted.

INFORMATION

- Because the image quality is automatically adjusted when the **"LCD AI"** indicator is on, brightness and contrast adjustment becomes less effective.

4

AUDIO/VISUAL SYSTEM

4. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

SCREEN SIZE SETTINGS

- 1 Press the "SETTING" button.



- 2 Select the "Screen Size" tab.
- 3 Select "Normal 1", "Normal 2" or "Full".



IF THE REAR SEAT ENTERTAINMENT SYSTEM MALFUNCTIONS

If the rear seat entertainment system malfunctions, the system will display a message.

These are described below.

If "Check DISC" appears on the screen: It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly.

If "Region code error" appears on the screen: It indicates that the DVD region code is not set properly. Insert a disc with a region code of "ALL" or "1".

If "DISC error" appears on the screen: The following causes are possible:

- There is a problem inside the system. Eject the disc.
- The inside of the player unit may be too hot due to a very high ambient temperature. Eject the disc and allow the player to cool down.


If "No supported data." appears on the screen: It indicates that the iPod or USB has no playable data. If a disc which is not playable is inserted, "No supported data." will also appear on the screen. For appropriate discs for the player: →P.268

If the malfunction is not rectified: Take your vehicle to your Lexus dealer.

5. AUDIO/VISUAL REMOTE CONTROLS

1. STEERING SWITCHES

Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.

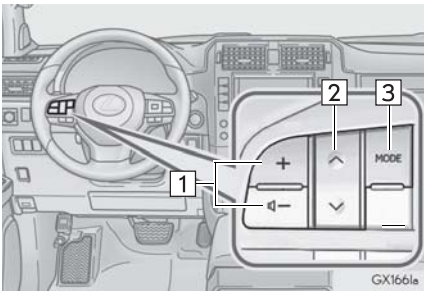

No.	Switch
1	Volume control switch
2	"^ v" switch
3	"MODE" switch

► Volume control switch

Mode	Operation	Function
All	Press	Volume up/down
	Press and hold (0.8 sec. or more)	Volume up/down continuously

4

AUDIO/VISUAL SYSTEM

5. AUDIO/VISUAL REMOTE CONTROLS

▶ ▲ ▼ switch

Mode	Operation	Function
AM/FM Radio	Press	Preset station up/down
	Press and hold (0.8 sec. or more)	Seek up/down continuously while the switch is being pressed
SAT	Press	Preset channel up/down
	Press and hold (0.8 sec. or more)	Type seek up/down
	Press and hold (1.5 sec. or more)	Fast up/down
CD	Press	Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
MP3/ WMA/AAC disc	Press	File up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
DVD	Press	Chapter up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
USB	Press	File/Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
iPod	Press	Track/File up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind
BT audio	Press	Track up/down
	Press and hold (0.8 sec. or more)	Fast forward/rewind

► “MODE” switch

Mode	Operation	Function
AM, FM, SAT, AUX, VTR	Press	Change audio modes
	Press and hold (0.8 sec. or more)	Mute
CD/MP3/ WMA/AAC disc, DVD, USB, iPod, BT audio, APPS	Press	Change audio modes
	Press and hold (0.8 sec. or more)	Pause

INFORMATION

 
- In the APPS mode, some of the operations may be done on the screen, it will depend on the selected APPS.

6. SETUP


1. AUDIO SETTINGS

Detailed audio settings can be programmed.


1 Press the “SETUP” button.




2 Select “Audio”.

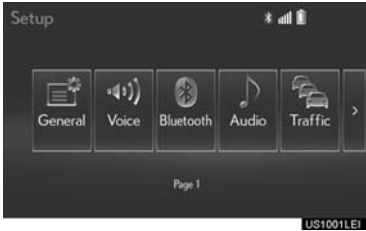

3 Select the items to be set.

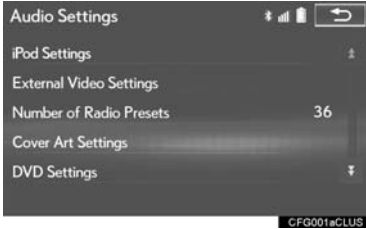

AUDIO SETTINGS SCREEN

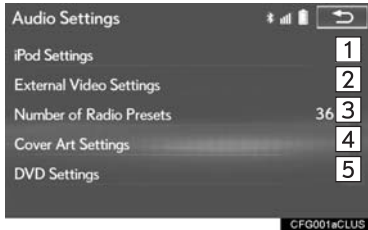


No.	Function	Page
1	Select to set the iPod audio signal input settings.	259
2	Select to set the video signal format settings.	259
3	Select to change the number of preset radio stations displayed on the screen.	260
4	Select to set detailed cover art settings.	260
5*	Select to set detailed DVD settings.	261

*: Only in DVD video mode

iPod SETTINGS

- 1 Display the audio setting screen. (→P.258)
- 2 Select "iPod Settings".
- 3 Select "Video Sound Input".

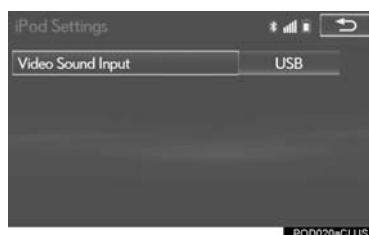

- 4 Select a screen button for the desired setting.

**EXTERNAL VIDEO SETTINGS**

- 1 Display the audio setting screen. (→P.258)
- 2 Select "External Video Settings".
- 3 Select "Video Signal Switch".



- 4 Select a screen button for the desired setting.




4

AUDIO/VISUAL SYSTEM

SETTING THE NUMBER OF RADIO PRESETS


- 1 Display the audio setting screen. (→P.258)
- 2 Select “Number of Radio Presets”.
- 3 Select the button with the desired number to be displayed.

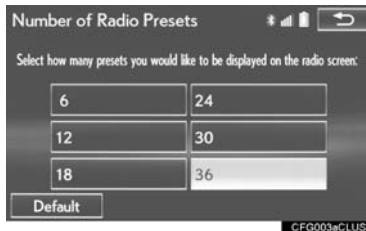

- “Default”: Select to default the settings.

COVER ART SETTINGS

- 1 Display the audio setting screen. (→P.258)
- 2 Select “Cover Art Settings”.
- 3 Select the desired button to be set.

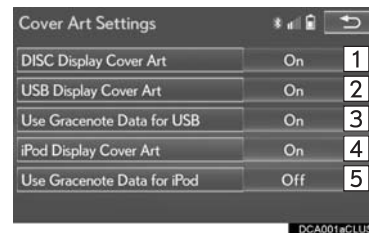

No.	Function
1	Select on/off to set the cover art display in DISC mode.
2	Select on/off to set the cover art display in USB mode.
3	Select on/off to set the priority of the Gracenote database in USB mode.
4	Select on/off to set the cover art display in iPod mode.
5	Select on/off to set the priority of the Gracenote database in iPod mode.

INFORMATION

- Images from the Gracenote database displayed on the screen may be different from the actual cover art.

DVD SETTINGS

- 1 Display the audio setting screen. (→P.258)
- 2 Select “DVD Settings”.
 - Selecting “DVD Settings” on the DVD top screen can also display “DVD Settings” screen. (→P.195)
- 3 Select the items to be set.



- When “Default” is selected, all menus are initialized.

AUDIO LANGUAGE

The audio language can be changed.

- 1 Select “Audio Language”.
- 2 Select the desired language to be heard on the “Audio Language” screen.
 - If the desired language to be heard cannot be found on this screen, select “Other” and enter a language code. (→P.262)

SUBTITLE LANGUAGE

The subtitle language can be changed.

- 1 Select “Subtitle Language”.
- 2 Select the desired language to be read on the “Subtitle Language” screen.
 - If the desired language to be read cannot be found on this screen, select “Other” and enter a language code. (→P.262)

MENU LANGUAGE

The language on the DVD video menu can be changed.

- 1 Select “Menu Language”.
- 2 Select the desired language to be read on the “Menu Language” screen.
 - If the desired language to be read cannot be found on this screen, select “Other” and enter a language code. (→P.262)

4

AUDIO/VISUAL SYSTEM

■ **ANGLE MARK**

The multi-angle mark can be turned on or off on the screen while discs that are multi-angle compatible are being played.

- 1 Select **"Angle Mark"**.
- 2 Select **"On"** or **"Off"**.

■ **PARENTAL LOCK**

The level of viewer restrictions can be changed.

- 1 Select **"Parental Lock"**.
- 2 Enter the 4-digit personal code on the **"Key Code"** screen.
- 3 Select a parental level (1-8) on the **"Select Restriction Level"** screen.

■ **AUTO START**

Discs that are inserted while the vehicle is in motion will automatically start playing. Certain discs may not play.

- 1 Select **"Auto Start Playback"**.
- 2 Select **"On"** or **"Off"**.

■ **DYNAMIC RANGE**

The difference between the lowest volume and the highest volume can be adjusted.

- 1 Select **"Dynamic Range"**.
- 2 Select **"MAX"**, **"STD"** or **"MIN"**.

■ **ENTER AUDIO/SUBTITLE/MENU LANGUAGE CODE**

If **"Other"** on the **"Audio Language"** screen, **"Subtitle Language"** screen or **"Menu Language"** screen is selected, the desired language to be heard or read can be selected by entering a language code.

- 1 Enter the 4-digit language code.



- 2 Select **"OK"**.

Code	Language	Code	Language
0514	English	0214	Bengali, Bangla
1001	Japanese	0215	Tibetan
0618	French	0218	Breton
0405	German	0301	Catalan
0920	Italian	0315	Corsican
0519	Spanish	0319	Czech
2608	Chinese	0325	Welsh
1412	Dutch	0401	Danish
1620	Portuguese	0426	Bhutani
1922	Swedish	0515	Esperanto
1821	Russian	0520	Estonian
1115	Korean	0521	Basque
0512	Greek	0601	Persian
0101	Afar	0609	Finnish
0102	Abkhazian	0610	Fiji
0106	Afrikaans	0615	Faroese
0113	Amharic	0625	Frisian
0118	Arabic	0701	Irish
0119	Assamese	0704	Scottish-Gaelic
0125	Aymara	0712	Galician
0126	Azerbaijani	0714	Guarani
0201	Bashkir	0721	Gujarati
0205	Byelorussian	0801	Hausa
0207	Bulgarian	0809	Hindi
0208	Bihari	0818	Croatian
0209	Bislama	0821	Hungarian

4

AUDIO/VISUAL SYSTEM

6. SETUP

Code	Language	Code	Language
0825	Armenian	1314	Mongolian
0901	Interlingua	1315	Moldavian
0905	Interlingue	1318	Marathi
0911	Inupiak	1319	Malay
0914	Indonesian	1320	Maltese
0919	Icelandic	1325	Burmese
0923	Hebrew	1401	Nauru
1009	Yiddish	1405	Nepali
1023	Javanese	1415	Norwegian
1101	Georgian	1503	Occitan
1111	Kazakh	1513	(Afan) Oromo
1112	Greenlandic	1518	Oriya
1113	Cambodian	1601	Panjabi
1114	Kannada	1612	Polish
1119	Kashmiri	1619	Pashto, Pushto
1121	Kurdish	1721	Quechua
1125	Kirghiz	1813	Rhaeto-Romance
1201	Latin	1814	Kirundi
1214	Lingala	1815	Romanian
1215	Laotian	1823	Kinyarwanda
1220	Lithuanian	1901	Sanskrit
1222	Latvian, Lettish	1904	Sindhi
1307	Malagasy	1907	Sango
1309	Maori	1908	Serbo-Croatian
1311	Macedonian	1909	Sinhalese
1312	Malayalam	1911	Slovak

Code	Language
1912	Slovenian
1913	Samoaan
1914	Shona
1915	Somali
1917	Albanian
1918	Serbian
1919	Siswati
1920	Sesotho
1921	Sundanese
1923	Swahili
2001	Tamil
2005	Telugu
2007	Tajik
2008	Thai
2009	Tigrinya
2011	Turkmen
2012	Tagalog
2014	Setswana
2015	Tongan
2018	Turkish
2019	Tsonga
2020	Tatar
2023	Twi
2111	Ukrainian
2118	Urdu
2126	Uzbek

Code	Language
2209	Vietnamese
2215	Volapük
2315	Wolof
2408	Xhosa
2515	Yoruba
2621	Zulu

7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

1. OPERATING INFORMATION



NOTICE

- To avoid damage to the audio/visual system:
 - Be careful not to spill beverages over the audio/visual system.
 - Do not put anything other than an appropriate disc into the disc slot.

INFORMATION

- The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/visual system which you are listening to. However, this does not indicate a malfunction.

RADIO

Usually, a problem with radio reception does not mean there is a problem with the radio – it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

FM

Fading and drifting stations: Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path: FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering: These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping: If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

AM

Fading: AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference: When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static: AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening or electrical motors. This results in static.

7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

XM

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

DVD PLAYER AND DISC

- This DVD player is intended for use with 4.7 in. (12 cm). discs only.
- Extremely high temperatures can keep the DVD player from working. On hot days, use the air conditioning system to cool the inside of the vehicle before using the player.
- Bumpy roads or other vibrations may make the DVD player skip.
- If moisture gets into the DVD player, the discs may not be able to be played. Remove the discs from the player and wait until it dries.

WARNING

- DVD players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

DVD PLAYER

Audio CDs		
		
DVD video discs		
DVD-R/RW discs		

- Use only discs marked as shown above. The following products may not be playable on your player:
 - SACD
 - dts CD
 - Copy-protected CD
 - DVD audio
 - Video CD
 - DVD-RAM

7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM


► Special shaped discs




► Labeled discs



► Transparent/translucent discs

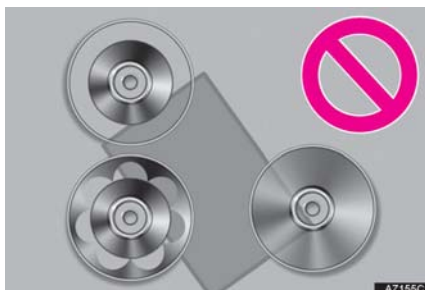

► Low quality discs

 


NOTICE

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring. The use of such discs may damage the player, or it may be impossible to eject the disc.
- Do not use printable discs. The use of such discs may damage the player, or it may be impossible to eject the disc.


4

AUDIO/VISUAL SYSTEM

7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

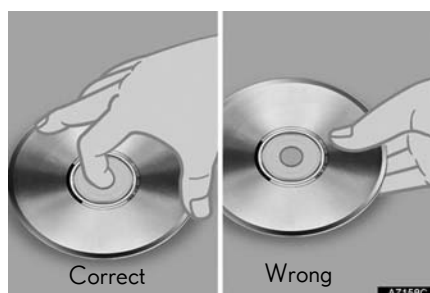

- Handle discs carefully, especially when inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when not in use. Store them in their cases away from moisture, heat and direct sunlight.

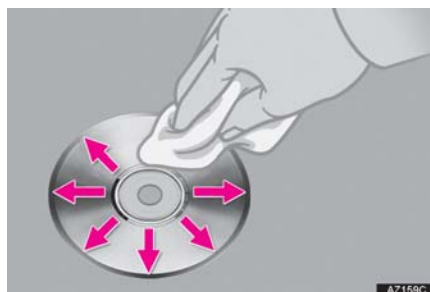

To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

CD-R/RW AND DVD-R/RW DISCS

- CD-R/CD-RW discs that have not been subject to the “finalizing process” (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

DVD VIDEO DISCS

This DVD player conforms to NTSC/PAL color TV formats. DVD video discs conforming to another format such as SECAM cannot be used.

Region codes: Some DVD video discs have the following region code indicating which countries the DVD video disc can be played in on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, error message appears on the screen. Even if the DVD video disc does not have a region code, there are cases when it cannot be used.

Code	Country
All	All countries
1	North America

MARKS SHOWN ON DVD VIDEO DISCS

NTSC/PAL	Indicates NTSC/PAL format of color TV.
	Indicates the number of audio tracks.
	Indicates the number of language subtitles.
	Indicates the number of angles.
	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this video disc can be played. ALL: in all countries Number: region code

4

AUDIO/VISUAL SYSTEM

DVD VIDEO DISC GLOSSARY

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help users enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

- Level 1: DVD video discs for children can be played.
- Level 2 - 7: DVD video discs for children and G-rated movie can be played.
- Level 8: All types of the DVD video discs can be played.

Multi-angle feature: The same scene can be enjoyed from different angles.

Multi-language feature: The subtitle and audio language can be selected.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes: (→P.271)

Audio: This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

Title and chapter: Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A unit smaller than that of title. A title comprises of several chapters.

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

iPod

Made for
 iPhone | iPod

Conçu pour
 iPhone | iPod

- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, iPod touch, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- The Lightning connector works with iPhone 5, iPod touch (5th generation), and iPod nano (7th generation).
- The 30-pin connector works with iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPod touch (1st through 4th generation), iPod classic, and iPod nano (1st through 6th generation).
- USB works with iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPod touch (1st through 5th generation), iPod classic, and iPod nano (1st through 7th generation).

- Bluetooth® technology works with iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, and iPod touch (2nd through 5th generation).

COMPATIBLE MODELS

The following iPod®, iPod nano®, iPod classic®, iPod touch®, and iPhone® devices can be used with this system.

Made for

- iPhone 5*
 - iPhone 4S
 - iPhone 4
 - iPhone 3GS
 - iPhone 3G
 - iPhone
 - iPod touch (5th generation)*
 - iPod touch (4th generation)
 - iPod touch (3rd generation)
 - iPod touch (2nd generation)
 - iPod touch (1st generation)
 - iPod classic
 - iPod with video
 - iPod nano (7th generation)*
 - iPod nano (6th generation)
 - iPod nano (5th generation)
 - iPod nano (4th generation)
 - iPod nano (3rd generation)
 - iPod nano (2nd generation)
 - iPod nano (1st generation)
- *: iPod video not supported

INFORMATION

- Depending on differences between models or software versions etc., some models might be incompatible with this system.

7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

FILE INFORMATION

COMPATIBLE USB DEVICES

USB communication formats	USB 2.0 HS (480 Mbps) and FS (12 Mbps)
File formats	FAT16/32
Correspondence class	Mass storage class

COMPATIBLE COMPRESSED FILES

Item	USB	DISC
Compatible file format (audio)	MP3/WMA/AAC	
Folders in the device	Maximum 3000	Maximum 192
Files in the device	Maximum 9999	Maximum 255
Files per folder	Maximum 255	—

CORRESPONDING SAMPLING FREQUENCY


File type	Frequency (kHz)
MP3 files: MPEG1 LAYER 3	32/44.1/48
MP3 files: MPEG2 LSF LAYER 3	16/22.05/24
WMA files: Ver. 7, 8, 9 (9.1/9.2)	32/44.1/48
AAC files: MPEG4/AAC-LC	11.025/12/16/22.05/24/32/44.1/48

CORRESPONDING BIT RATES


File type	Bit rate (kbps)
MP3 files: MPEG1 LAYER 3	32 - 320
MP3 files: MPEG2 LSF LAYER 3	8 - 160
WMA files: Ver. 7, 8	CBR 48 - 192
WMA files: Ver. 9 (9.1/9.2)	CBR 48 - 320
AAC files: MPEG4/AAC-LC	16 - 320

(Variable Bit Rate (VBR) compatible)

 - MP3 (MPEG Audio Layer 3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) are audio compression standards.
- This system can play MP3/WMA/AAC files on CD-R, CD-RW, DVD-R, DVD-RW discs and USB memory.
- This system can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.
- When naming an MP3/WMA/AAC file, add an appropriate file extension (.mp3/.wma/.m4a).
- This system plays back files with .mp3/.wma/.m4a file extensions as MP3/WMA/AAC files respectively. To prevent noise and playback errors, use the appropriate file extension.
- This system can play only the first session when using multi-session compatible CDs.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. This system cannot display disc title, track title and artist name in other formats.
- WMA/AAC files can contain a WMA/AAC tag that is used in the same way as an ID3 tag. WMA/AAC tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz.
- This system can play back AAC files encoded by iTunes.
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.
- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fast forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA/AAC files.
- MP3/WMA/AAC files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than 2 levels of folders.



 - The play order of the compact disc with the structure shown above is as follows:



- The order changes depending on the personal computer and MP3/WMA/AAC encoding software you use.

TERMS

PACKET WRITE

- This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

ID3TAG

- This is a method of embedding track-related information in an MP3 file. This embedded information can include the track number, track title, the artist's name, the album title, the music genre, the year of production, comments, cover art and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

WMA TAG

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

ISO 9660 FORMAT

- This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are 2 levels of regulations.
- Level 1: The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The “_” symbol may also be included.)
- Level 2: The file name can have up to 31 characters (including the separation mark “.” and file extension). Each folder must contain fewer than 8 hierarchies.

MP3

- MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

WMA

- WMA (Windows Media Audio) is an audio compression format developed by Microsoft®. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.

AAC

- AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

7. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

ERROR MESSAGES

Mode	Message	Explanation
CD/DVD	"Check disc"	It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. It indicates a disc which is not playable is inserted.
	"DISC Error"	There is a trouble inside the system. Eject the disc.
	"Region Code Error"	It indicates that the DVD region code is not set properly.
USB	"USB Error"	This indicates a problem in the USB memory or its connection.
	"No music files found."	This indicates that no MP3/WMA/AAC files are included in the USB memory.
iPod	"iPod Error"	This indicates a problem in the iPod or its connection.
	"No music files found."	This indicates that there is no music data in the iPod.
	"No video files found."	This indicates that no video files are included in the iPod.
	"Please check the iPod firmware version."	This indicates that the software version is not compatible. Perform the iPod firmware updates and try again.
	"Unable to authorize the iPod."	This indicates that it failed to authorize the iPod. Please check your iPod.
Bluetooth® Audio	"Music tracks not supported. Please check your portable player."	This indicates a problem in the Bluetooth® device.

INFORMATION

- If the malfunction is not rectified: Take your vehicle to your Lexus dealer.

5

VOICE COMMAND SYSTEM

1 VOICE COMMAND SYSTEM OPERATION

1. VOICE COMMAND SYSTEM 280
 USING THE VOICE COMMAND
 SYSTEM..... 280
 VOICE COMMAND SYSTEM
 OPERATION 281
 EXPANDED VOICE COMMANDS 287
2. CASUAL SPEECH
 RECOGNIZATION..... 288
3. COMMAND LIST 289

2 MOBILE ASSISTANT OPERATION

1. MOBILE ASSISTANT 293

1

2

3

4

5

6

7

8

1. VOICE COMMAND SYSTEM OPERATION


1. VOICE COMMAND SYSTEM

The voice command system enables the navigation, audio/visual, hands-free and air conditioning systems to be operated using voice commands.

Refer to the command list for samples of voice commands. (→P.289)

USING THE VOICE COMMAND SYSTEM


STEERING SWITCH

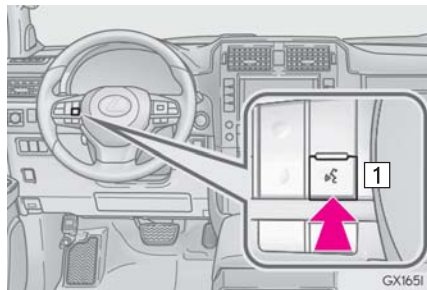

1 Talk switch

- Press the talk switch to start the voice command system.
- To cancel voice recognition, press and hold the talk switch.

MICROPHONE

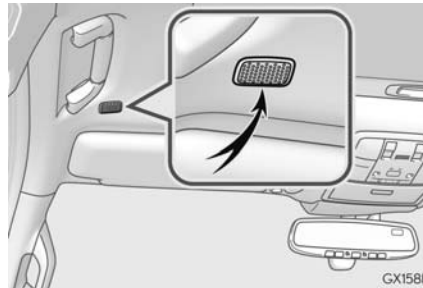

- It is unnecessary to speak directly into the microphone when giving a command.

INFORMATION

- Wait for the confirmation beep before speaking a command.
- Voice commands may not be recognized if:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while voice commands are spoken.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
 - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
 - There is excessive background noise, such as wind noise.

VOICE COMMAND SYSTEM OPERATION

The voice commands of multifunction can be confirmed by selecting a tab. The tabs are found on the upper part of the screen.

All commands that are not displayed on the screen can be recognized on any screens.

1 Press the talk switch.

- Voice guidance for the voice command system can be skipped by pressing the talk switch.

2 Say the tab selection command or select the desired tab.



- Commands related with each function are displayed on the screen of the each function tab.

- Saying **"Help"** prompts voice guidance to offer examples of commands and operation methods.

3 Say the desired command.



- Registered POIs, registered names in the contacts list etc., can be said in the place of the "<>" next to the commands. (→P.289)
For example: Say **"Find nearby dining"**, **"Call John Smith"** etc.
- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
 - Say **"Go back"**.
 - Select **"Go Back"**.
- To cancel voice recognition, select , or press and hold the talk switch.

5

VOICE COMMAND SYSTEM

INFORMATION

- If the navigation system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- If a voice command cannot be recognized, voice guidance will say "Pardon?" ("Command not recognized." will be displayed on the screen) and voice command reception will restart.
- If a voice command cannot be recognized 2 consecutive times, the voice command guidance system will say "Paused. To restart voice recognition, push the talk switch. To cancel voice recognition, press and hold the talk switch." Then voice recognition will be suspended.
- **"Voice Recognition Prompts"** can be set to on or off on the "Voice Settings" screen. (→P.62)
- Voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.

■ DISPLAYING THE "Voice Settings" SCREENS



- Selecting  can be displayed the "Voice Settings" screen.

VOICE COMMAND EXAMPLE: LAUNCH LEXUS App Suite APPLICATION


- 1 Press the talk switch.
- 2 Say "Launch <application name>".



- LEXUS App Suite application screen is displayed.

VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS (ENGLISH ONLY)

- 1 Press the talk switch.
- 2 Say "Enter an address".
- 3 Say "<house number, street name, city name, State>" continuously.

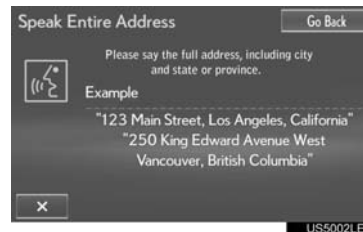


- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<Number>" or select the number.
- Some areas cannot be recognized by the voice recognition system.

5

VOICE COMMAND SYSTEM

4 Say "Go directly".

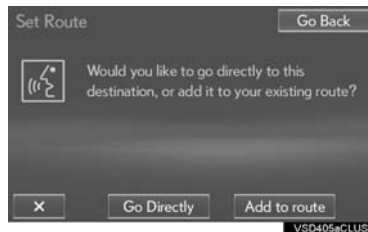

- After this, follow the voice guidance and search for a destination route by voice command operation.

INFORMATION

- The voice command recognition is designed to recognize the main body of the official street name.

For example, if the official street name is "East Main Street", the voice command recognition will recognize "Main".

- Say the desired number, cardinal direction etc. in the place of the "<>".

For example: Say "West 555".

- Inputting the house number can be skipped.
- Even if the state set using voice recognition is different from the set state in the "Address" screen (which was set when a destination was set manually), the set state in the "Address" screen will not change. (→P.99)

- The house number voice recognition conditions are outlined below:

- Numerals: 10 digits or less
- Numerals and cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "and".)
- Cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "and".)
- Numerals are recognized as single digits only.
- The cardinal direction and hyphens are only recognized once.
- The following cardinal directions can be recognized: North, East, West and South.

VOICE COMMAND EXAMPLE: SEARCH FOR A SONG

- 1 Press the talk switch.
 - 2 Say "Play song <name>".
- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<Number>" or select the number.
- When "Play Artist <name>" is used to play music, the first track is selected randomly. For operations beyond playing music: →P.155
- The system starts playing music and the song lists are displayed.

INFORMATION

- The Gracenote database is only compatible with the USB or iPod mode.
- The list screens can be operated by selecting a screen button as well as by recognizing the voice commands.
- A USB memory or iPod must be connected to enable track searching and playback. (→P.202, 207)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
 - When the USB memory or iPod data has changed.
 - When the voice recognition language is changed. (→P.55)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.
- When the "Music" tab is disappeared on the shortcut menu screen, it is not possible to search for a track using a voice command.

VOICE COMMAND EXAMPLE: CALL NAME

- 1 Press the talk switch.
 - 2 Say "**Call** <contacts> <phone types>".
- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<Number>" or select the number.

INFORMATION

- In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "**Call a contact**" say the name, or the name and type of phone, of a contact.
For example: "**Call a contact**", "**John Smith**" or "**Call a contact**", "**Mary Davis**", "**Mobile**"
- There are 4 types of phones: Home, Mobile, Office and Other.
- Short or abbreviated names in the contacts list may not be recognized. Change names in the contacts list to full names.
- Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say "**Yes**" or "**No**".
- When the system recognizes multiple names from the contacts list, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say or select the number of the name from the candidate list to select a name from the candidate list.
- When a contact has multiple phone numbers registered in the contacts list, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say or select the number of the desired phone number from the candidate list to select a phone number from the candidate list.

VOICE COMMAND EXAMPLE: DIAL NUMBER

- 1 Press the talk switch.
- 2 Say the phone number.
 - In the same manner as it is displayed on the screen, "Dial <number>", after saying "**Dial a number**" say the phone number.
 - Say the phone number one digit at a time. For example, if the phone number is 2345678:
Say "**two three four five six seven eight**"
 - ▶ Calling to the following phone number
 - 3 digit numbers (911, 411, 611)
 - 7 digit numbers (Local phone numbers)
 - 10 digit numbers (Area code + Local phone number)
 - 11 digit phone numbers (1 + Area code + Local phone number)
- 3 When the confirmation screen appears, say "**Yes**" or select "**Yes**" or press the  switch on the steering wheel.
 - As the system cannot recognize additional numbers, say the complete number without stopping.
 - ▶ Calling to other phone number
- 3 Say "**Call**" or push the  switch on the steering wheel.

- When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen.

Pressing the  switch on the steering wheel makes a call to the top entry on the list. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list to select a phone number from the candidate list.

EXPANDED VOICE COMMANDS

Selecting "**On**" next to "Expanded Voice Commands" on the "Voice Settings" screen enables expanded voice commands operation. (→P.62)

Expanded voice commands are displayed on the screen of the "Other" tab. Expanded voice commands are listed in the table (→P.289)

INFORMATION

- The "Other" tab is not displayed when "Expanded Voice Commands" is "Off".

1. VOICE COMMAND SYSTEM OPERATION

2. CASUAL SPEECH RECOGNITION

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation.

INFORMATION

- If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

EXPRESSION EXAMPLES FOR EACH FUNCTION

Command	Expression examples
"Go Home"	<i>Navigate to my house. Take me home.</i>
"Enter an Address"	<i>I need a route to a street address. Give me a street.</i>
"Find <POI category>"	<i>Search for a <Restaurants> around here. I need a route to a nearby <Restaurants>.</i>
"Call <name> <type>"	<i>Get me <Robert Brown>. Contact the <Robert Brown> phone of <Work>.</i>
"Dial <number>"	<i>Can you get me <3334445555>. Ring <3334445555>.</i>
"Play Artist <name>"	<i>Play the artist <name>. I want to hear the band <name>.</i>
"Play Album <name>"	<i>Play album <name>. Switch to the album <name>.</i>

1. VOICE COMMAND SYSTEM OPERATION

3. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- Frequently used commands are listed in the following tables.
 - For devices that are not installed in the vehicle, the related commands will not be displayed in the shortcut menu screen. Also, according to conditions, other commands may not be displayed in the shortcut menu screen.
 - The functions available may vary according to the navigation system installed.
- Voice recognition language can be changed. (→P.55)

► Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

► Apps

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

5

VOICE COMMAND SYSTEM

1. VOICE COMMAND SYSTEM OPERATION

► Navi

Command	Action
"Find <POI category>"	Displays a list of <POI category* ¹ > near the current position* ²
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

*¹: For example; "Gas stations", "Restaurants", etc.

*²: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite. (→P.357)

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

5

► Audio

Command	Action
"Play Playlist <playlists>"	Plays tracks from the selected playlist
"Play Artist <artist>"	Plays tracks from the selected artist
"Play Song <songs>"	Plays the selected track
"Play Album <albums>"	Plays tracks from the selected album

VOICE COMMAND SYSTEM

► Info

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

1. VOICE COMMAND SYSTEM OPERATION

► Other

When "Expanded Voice Commands" is turned "On". (→P.62)

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees*1
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth*2 Audio"	Selects Bluetooth® audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

*1: Only within the possible temperature range of the air conditioning system

*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INFORMATION


- Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on.

2. MOBILE ASSISTANT OPERATION


1. MOBILE ASSISTANT

The Mobile Assistant feature will activate Apple's Siri® Eyes Free mode via the steering wheel switches. To operate the Mobile Assistant, a compatible cellular phone must be registered and connected to this system via Bluetooth®. (→P.40)

- 1 Press and hold this switch until you hear the beeps.

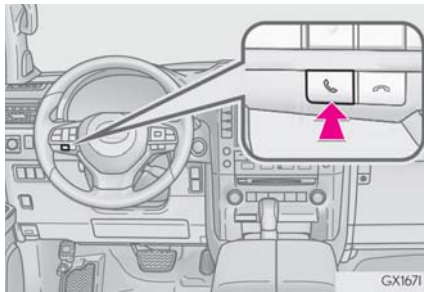

- 2 The Mobile Assistant can be used only when the following screen is displayed.

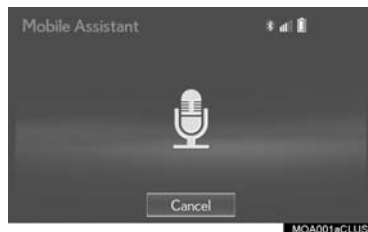

- To cancel the Mobile Assistant, select "Cancel", or press and hold the  on the steering wheel.
- To restart the Mobile Assistant for additional commands, press the  on the steering wheel.
 - Mobile Assistant can only be restarted after the system responds to a voice command.

- After some phone and music commands, the Mobile Assistant feature will automatically end to complete the requested action.

- The volume of the Mobile Assistant can be adjusted using the "PWR/VOL" knob or steering wheel volume control switches. The Mobile Assistant and phone call volumes are synchronized.

INFORMATION

- The available features and functions may vary based on the iOS version installed on the connected device.
- Some Siri features are limited in Eyes Free mode. If you attempt to use an unavailable function, Siri will inform you that the function is not available.
- If Siri is not enabled on the cellular phone connected via Bluetooth®, an error message will be displayed on the screen.
- While a phone call is active, the Mobile Assistant cannot be used.
- If using the navigation feature of the cellular phone, ensure the active audio source is Bluetooth® audio or iPod in order to hear turn by turn direction prompts.

2. MOBILE ASSISTANT OPERATION

MICROPHONE

It is not necessary to speak directly into the microphone when using the Mobile Assistant. (Microphone location: → P.280)

INFORMATION

- Wait for the listening beeps before using the Mobile Assistant.
- The Mobile Assistant may not recognize commands in the following situations:
 - Spoken too quickly.
 - Spoken at a low or high volume.
 - The roof or windows are open.
 - Passengers are talking while the Mobile Assistant is being used.
 - The air conditioning speed is set high.
 - The air conditioning vents are turned toward the microphone.

6

INFORMATION

1 INFORMATION DISPLAY

1. RECEIVING DOPPLER WEATHER INFORMATION..... 296
DISPLAYING DOPPLER WEATHER INFORMATION..... 296
2. DATA SERVICES SETTINGS 298
SETTING DOWNLOAD METHODS 298

1

2

3

4

5

6

7

8


1. INFORMATION DISPLAY

1. RECEIVING DOPPLER WEATHER INFORMATION


Doppler weather radar information can be received via the HD radio or by the LEXUS App Suite application on a Bluetooth[®] phone. For details about the LEXUS App Suite application: →P.351

DISPLAYING DOPPLER WEATHER INFORMATION

1 Press the “INFO/APPS” button.

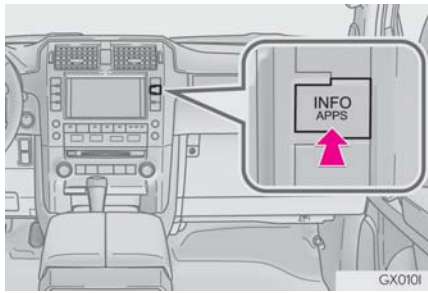

2 Select “Weather”.

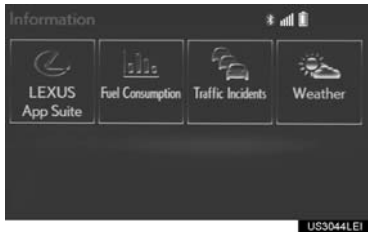

3 Check that the “Weather” screen is displayed.



No.	Function
1	Select to display the weather of the current location. (→P.297)
2	Select to display the weather of a desired location in the recently checked locations list.
3	Select to display the weather of a desired location in the national cities list.
4	Select to display the weather of a desired location in the other local cities list.
5	Select to display Doppler weather radar information over the map.

DISPLAYING THE WEATHER
OF THE CURRENT LOCATION


- 1 Display the "Weather" screen. (→P.296)
- 2 Select "Current Weather".
- 3 Select the desired tab to be displayed.



- When the "Current" tab is selected



- When the "3 Day" tab is selected

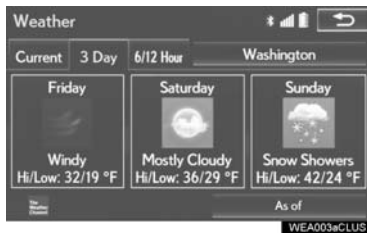

- When a specific day is selected, weather information for that day will be displayed.

- When the "6/12 Hour" tab is selected



INFORMATION

- If weather is set to the home screen, the weather screen of the current location will be displayed.


1. INFORMATION DISPLAY

2. DATA SERVICES SETTINGS

SETTING DOWNLOAD METHODS

Data service information, which is comprised of traffic information and weather information, can be received via the HD radio and by the LEXUS App Suite application on a Bluetooth® phone. The receiving method can be set to both or only via the HD radio. For details about the LEXUS App Suite application: →P.351

1 Press the “SETUP” button.

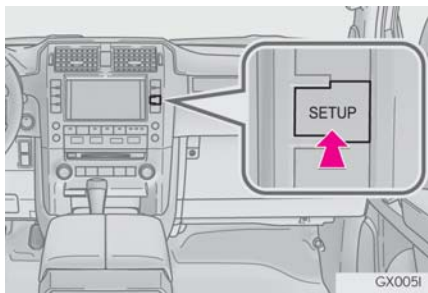

2 Select “Data Services Settings”.



3 Select the desired item to be set.



● Select a checkbox on the right to set.

No.	Function
1	Select to receive data service information via both the HD radio and the LEXUS App Suite application on a Bluetooth® phone. When both methods are available, the HD radio will be selected.
2	Select to receive data only via the HD radio.

7

PHONE

1	PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)	
1.	QUICK REFERENCE	300
2.	SOME BASICS	301
	REGISTERING/CONNECTING A Bluetooth® PHONE.....	302
	USING THE PHONE SWITCH/MICROPHONE	302
	VOICE COMMAND SYSTEM.....	303
	ABOUT THE CONTACTS IN THE CONTACT LIST	304
	WHEN SELLING OR DISPOSING OF THE VEHICLE	304
3.	CALLING ON THE Bluetooth® PHONE.....	305
	BY FAVORITES LIST	306
	BY CALL HISTORY	306
	BY CONTACTS LIST	307
	BY DIAL PAD	310
	BY OFF HOOK SWITCH	310
4.	RECEIVING ON THE Bluetooth® PHONE.....	311
	INCOMING CALLS.....	311

5.	TALKING ON THE Bluetooth® PHONE.....	312
	INCOMING CALL WAITING.....	314
6.	Bluetooth® PHONE MESSAGE FUNCTION.....	315
	RECEIVING A MESSAGE.....	316
	CHECKING MESSAGES.....	317
	REPLYING TO A MESSAGE (QUICK REPLY).....	318
	CALLING THE MESSAGE SENDER	320

2 SETUP

1.	PHONE/MESSAGE SETTINGS.....	322
	PHONE/MESSAGE SETTINGS SCREEN	322
	"Sound Settings" SCREEN	323
	"Contact/Call History Settings" SCREEN	324
	"Messaging Settings" SCREEN	335
	"Phone Display Settings" SCREEN	337

3 WHAT TO DO IF...

1.	TROUBLESHOOTING.....	338
----	----------------------	-----

1

2

3

4

5

6

7

8

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

1. QUICK REFERENCE

The phone top screen can be used to make a phone call. To display the hands-free operation screen, press the  button, or the  switch on the steering wheel.

Several functions are available to operate on each screen that is displayed by selecting the 4 tabs.



Function		Page
Phone operation	Registering/connecting Bluetooth® device	40
	Calling on the Bluetooth® phone	305
	Receiving on the Bluetooth® phone	311
	Talking on the Bluetooth® phone	312
Message function	Using the Bluetooth® phone message function	315
Setting up a phone	Phone settings	322
	Bluetooth® settings	45

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

2. SOME BASICS

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth®. Bluetooth® is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.



WARNING

- While driving, do not use a cellular phone or connect the Bluetooth® phone.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.



NOTICE

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

INFORMATION

- This system is not guaranteed to operate with all Bluetooth® devices.
- If your cellular phone does not support Bluetooth®, this system cannot function.
- In the following conditions, the system may not function:
 - The cellular phone is turned off.
 - The current position is outside the communication area.
 - The cellular phone is not connected.
 - The cellular phone has a low battery.
- When using Bluetooth® audio and hands-free system at the same time, the following problems may occur:
 - The Bluetooth® connection may be cut.
 - Noise may be heard on the Bluetooth® audio playback.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

REGISTERING/ CONNECTING A Bluetooth® PHONE

To use the hands-free system for cellular phones, it is necessary to register a cellular phone with the system. (→P.40)


Bluetooth® PHONE CONDITION DISPLAY

The condition of the Bluetooth® phone appears on the upper right side of the screen. (→P.14)

USING THE PHONE SWITCH/ MICROPHONE

► Steering switch

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

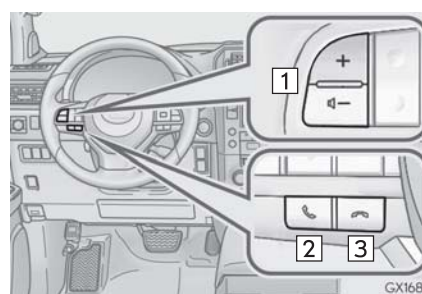

1 Volume control switch

- Press the "+" side to increase the volume.
- Press the "-" side to decrease the volume.

 
2 Off hook switch

3 On hook switch

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


► Microphone

The microphone is used when talking on the phone.



VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.

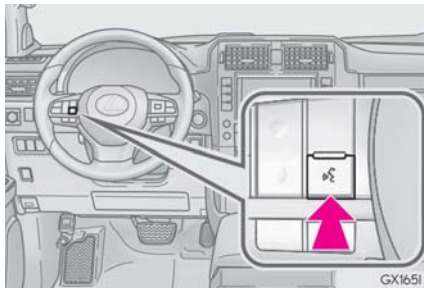

- The voice command system and its list of commands can be operated. (→P.280)

INFORMATION

- The other party's voice will be heard from the front speakers. The audio/visual system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
 - Driving on an unpaved road. (Making excessive traffic noise.)
 - Driving at high speeds.
 - The roof or windows are open.
 - The air conditioning vents are pointed towards the microphone.
 - The sound of the air conditioning fan is loud.
 - There is a negative effect on sound quality due to the phone and/or network being used.

7

PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

ABOUT THE CONTACTS IN THE CONTACT LIST

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
 - Contact data
 - Call history data
 - Favorites data
 - Image data
 - All phone settings
 - Message settings

INFORMATION

- When a phone's registration is deleted, the above-mentioned data is also deleted.

WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (→P.61)

- The following data in the system can be initialized:
 - Contact data
 - Call history data
 - Favorites data
 - Image data
 - All phone settings
 - Message settings

INFORMATION


- Once initialized, the data and settings will be erased. Pay much attention when initializing the data.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


3. CALLING ON THE Bluetooth® PHONE

After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are several methods by which a call can be made, as described below.

1 Press the  button.

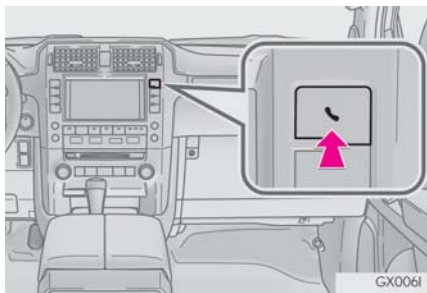

2 Select the desired tab to call from.

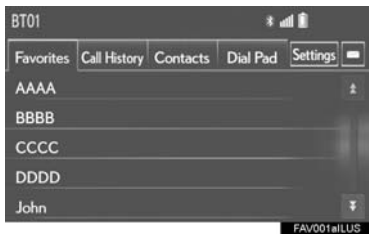

● The phone top screen can be displayed by pressing the  switch on the steering wheel.

How to make a call list	Page
By favorites list	306
By call history	306
By contacts list*	307
By dial pad*	310
By e-mail/SMS/MMS	320
By POI call	83
By off hook switch	310
By LEXUS App Suite*	364
By voice command system	286


*: The operation cannot be performed while driving.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


BY FAVORITES LIST

Calls can be made using registered contacts which can be selected from a contact list. (→P.332)

- 1 Display the phone top screen. (→P.305)
- 2 Select the **"Favorites"** tab and select the desired contact.

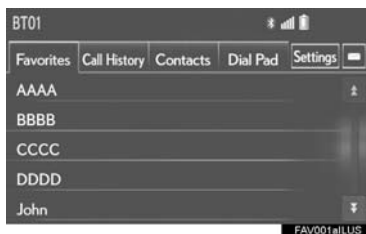

- 3 Select the desired number.

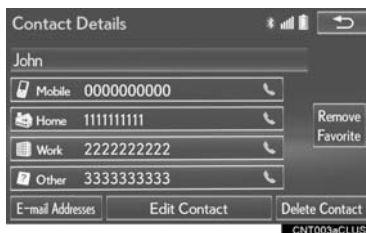


- 4 Check that the "Call" screen is displayed.

BY CALL HISTORY

Up to 30 of the latest call history items (missed, incoming and outgoing) can be selected from the "Call History" tab.

- 1 Display the phone top screen. (→P.305)
- 2 Select the **"Call History"** tab and select  or the desired contact.

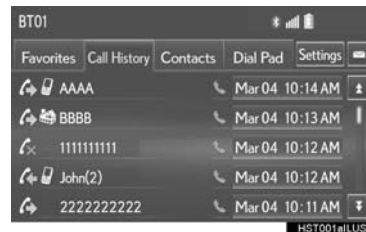

- The icons of call type are displayed.



: Missed call



: Incoming call




: Outgoing call

- When  is selected

- 3 Check that the “Call” screen is displayed.

- When the desired contact is selected

- 3 Select the desired number.

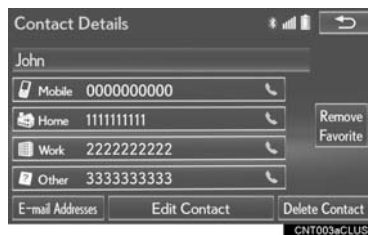

- 4 Check that the “Call” screen is displayed.

INFORMATION

- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the contact list is received, the name is displayed.
- Number-withheld calls are also memorized in the system.
- International phone calls may not be made depending on the type of cellular phone you have.
- The list should group together consecutive entries with the same phone number and same call type. For example, two calls from John’s mobile would be displayed as follows: John (2)
- By pressing the  switch on the steering wheel, a call to the latest history item can be made.


BY CONTACTS LIST

Calls can be made by using contact data which is transferred from a registered cellular phone. (→P.308)


Up to 2500 contacts (maximum of 4 phone numbers and e-mail addresses per contact) can be registered in the contact list.

- 1 Display the phone top screen. (→P.305)

- 2 Select the “Contacts” tab and select the desired contact.

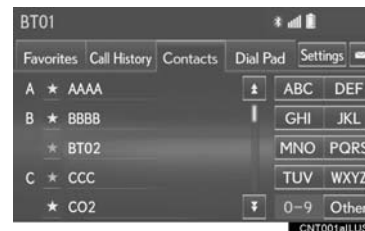

- 3 Select the desired number.

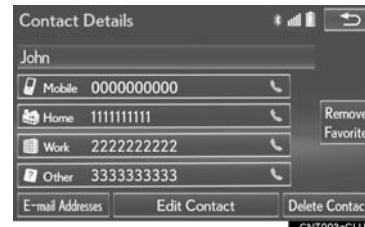

- 4 Check that the “Call” screen is displayed.

7
PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

WHEN THE CONTACT IS EMPTY


FOR PBAP COMPATIBLE Bluetooth® PHONES

▶ When “Automatic Contact/History Transfer” is set to on (→P.324)

- 1 Select the “Contacts” tab.
- Contacts are transferred automatically.
- 2 Check that a confirmation screen is displayed when the operation is complete.

▶ When “Automatic Contact/History Transfer” is set to off (→P.324)

- 1 Select the “Contacts” tab.
- 2 Select the desired item.

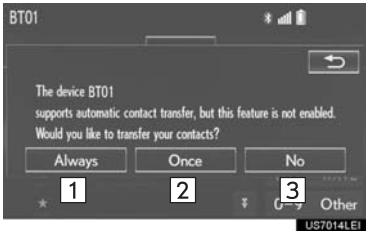


No.	Function
1	Select to always transfer all the contacts from a connected cellular phone automatically.
2	Select to transfer all the contacts from a connected cellular phone only once.
3	Select to cancel transferring.

- 3 Check that a confirmation screen is displayed when the operation is complete.

■ **FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES**

- 1 Select the “Contacts” tab.
- 2 Select the desired item.

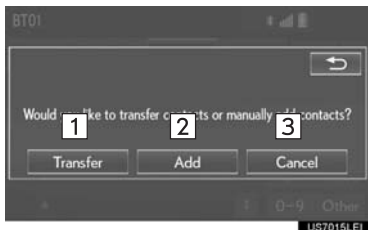

No.	Function
1	Select to transfer the contacts from the connected cellular phone.
2	Select to add a new contact manually.
3	Select to cancel transferring.

- ▶ When “Transfer” is selected
- 3 Follow the steps in “FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES” from “STEP 3”. (→P.326)
- ▶ When “Add” is selected
- 3 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.328)

INFORMATION

- Manual transfer operation cannot be performed while driving.
- If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.
- Depending on the type of Bluetooth® phone:
 - It may be necessary to perform additional steps on the phone when transferring contact data.
 - The registered image in the contact list may not transfer depending on the type of Bluetooth® phone connected.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

BY DIAL PAD

- 1 Display the phone top screen. (→P.305)
- 2 Select the **"Dial Pad"** tab and enter the phone number.



- 3 Select  or press the  switch on the steering wheel.
- 4 Check that the "Call" screen is displayed.

INFORMATION

- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

BY OFF HOOK SWITCH

Calls can be made using the latest call history item.

- 1 Press the  switch on the steering wheel to display the phone top screen.
- 2 Press the  switch on the steering wheel to display the "Call History" screen.
- 3 Press the  switch on the steering wheel to call the latest history item.
- 4 Check that the "Call" screen is displayed.


1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

4. RECEIVING ON THE Bluetooth® PHONE

INCOMING CALLS

When a call is received, this screen is displayed with a sound.

- 1 Select  or press the  switch on the steering wheel to talk on the phone.

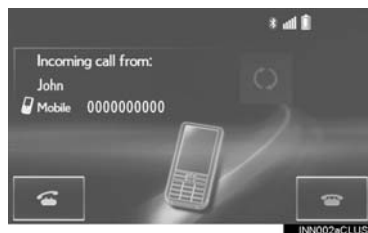

To refuse to receive the call: Select  or press the  switch on the steering wheel.

To adjust the volume of a received call: Turn the "PWR/VOL" knob, or use the volume control switch on the steering wheel.


INFORMATION

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The incoming call display mode can be set. (→P.337)
- The ringtone that has been set in the "Sound Settings" screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the navigation system and Bluetooth® phone may sound simultaneously when there is an incoming call. (→P.323)

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

5. TALKING ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.

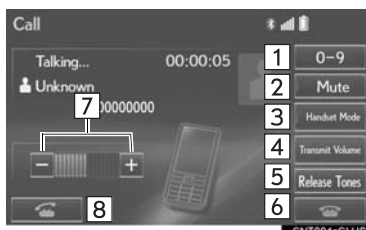

INFORMATION

- Changing from hands-free call to cellular phone call is not possible while driving.
- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.


No.	Function	Page
1	Select to display the dial pad to send tones.	313
2	Select to mute your voice to the other party.	—
3	Select to change handset modes between hands-free and cellular phone.	—
4	Select to adjust your voice volume that the other party hears from their speaker.	314
5	Select to send tones. This button only appears when a number that contains a (w) is dialed in hands-free mode.	313
6	Select to hang up the phone.	—
7	Select "+" or "-" to adjust the volume of the other party's voice.	—
8	Select to start talking with the other party.	314

SENDING TONES

■ BY DIAL PAD

This operation cannot be performed while driving.

- 1 Select "0-9".

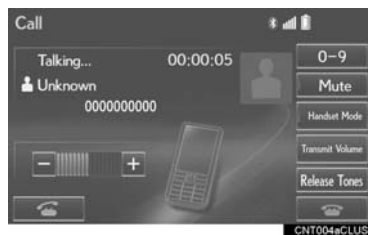

- 2 Enter the desired number.

■ BY SELECTING "Release Tones"

"Release Tones" appear when a continuous tone signal(s) containing a (w) is registered in the contact list.

This operation can be performed while driving.

- 1 Select "Release Tones".


INFORMATION

- A continuous tone signal is a character string that consists of numbers and the characters **p** or **w**. (e.g. 056133w0123p#1*)
- When the **"p"** pause tone is used, the tone data up until the next pause tone will be automatically sent after 2 seconds have elapsed. When the **"w"** pause tone is used, the tone data up until the next pause tone will be automatically sent after a user operation is performed.
- Release tones can be used when automated operation of a phone based service such as an answering machine or bank phone service is desired. A phone number with continuous tone signals can be registered in the contact list.
- Tone data after a **"w"** pause tone can be operated on voice command during a call.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

TRANSMIT VOLUME SETTING

- 1 Select "Transmit Volume".
- 2 Select the desired level for the transmit volume.

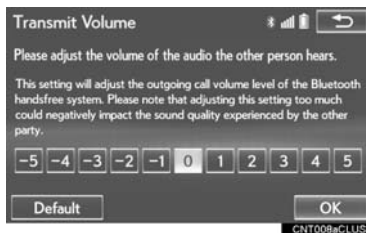

- 3 Select "OK".


INFORMATION

- The sound quality of the voice heard from the other party's speaker may be negatively impacted.
- To reset the transmit volume, select "Default".
- "Transmit Volume" is dimmed when mute is on.

INCOMING CALL WAITING

When a call is interrupted by a third party while talking, this screen is displayed.

- 1 Select  or press the  switch on the steering wheel to start talking with the other party.

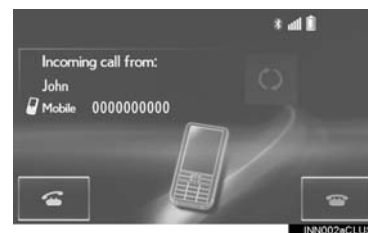

To refuse to receive the call: Select  or press the  switch on the steering wheel.

- Each time  is selected or the  switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

INFORMATION

- This function may not be available depending on the type of cellular phone.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)


6. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying using the navigation system.


Depending on the type of Bluetooth® phone connected, received messages may not be transferred to the message inbox.

If the phone does not support the message function, this function cannot be used.

1 Press the  button.

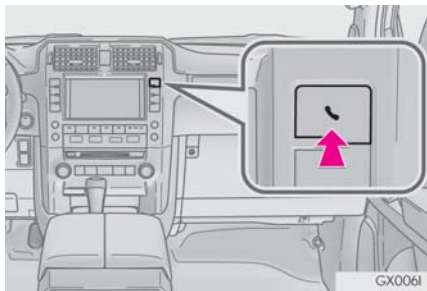


2 Select .

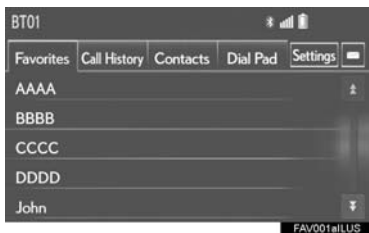

● The phone top screen can be displayed by pressing the  switch on the steering wheel.

3 Check that the message inbox screen is displayed.

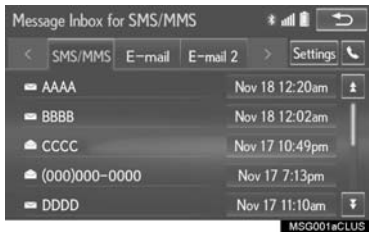

: Select to change to phone mode.

Function	Page
Receiving a message	316
Checking messages	317
Replying to a message (quick reply)	318
Calling the message sender	320
Message settings	335


7

PHONE

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

RECEIVING A MESSAGE

When an e-mail/SMS/MMS is received, the incoming message screen pops up with sound and is ready to be operated on the screen.

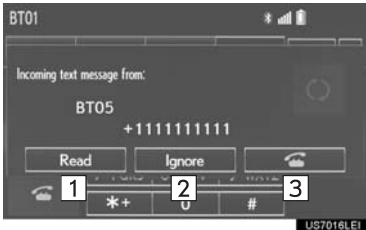

No.	Function
1	Select to check the message.
2	Select to not open the message.
3	Select to call the message sender.

INFORMATION

- Depending on the cellular phone used for receiving messages, or its registration status with the navigation system, some information may not be displayed.
- The pop up screen is separately available for incoming e-mail and SMS/MMS messages under the following conditions:
E-mail:
 - “Incoming E-mail Display” is set to “Full Screen”. (→P.335)
 - “E-mail Notification Popup” is set to on. (→P.335)SMS/MMS:
 - “Incoming SMS/MMS Display” is set to “Full screen”. (→P.335)
 - “SMS/MMS Notification Popup” is set to on. (→P.335)

CHECKING MESSAGES

- 1 Display the message inbox screen. (→P.315)
- 2 Select the desired message from the list.
- 3 Check that the message is displayed.



No.	Function
1	Select "Mark Unread" or "Mark Read" to mark mail unread or read on the message inbox screen. This function is available when "Update Message Read Status on Phone" is set to on. (→P.335)
2	Select to reply the message. (→P.318)
3	Select to display the previous or next message.
4	Select to have messages read out. To cancel this function, select "Stop" . When "Automatic Message Read-out" is set to on, messages will be automatically read out. (→P.335)
5	Select to make a call to the sender.

INFORMATION

- Reading a text message is not available while driving.
- Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.
- Messages are displayed in the appropriate connected Bluetooth® phone's registered mail address folder. Select the tab of the desired folder to be displayed.
- Only received messages on the connected Bluetooth® phone can be displayed.
- The text of the message is not displayed while driving.
- Turn the **"PWR/VOL"** knob, or use the volume control switch on the steering wheel to adjust the message read out volume.

1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

REPLYING TO A MESSAGE (QUICK REPLY)

15 messages have already been stored.

- 1 Display the message inbox screen.
(→P.315)
- 2 Select the desired message from the list.
- 3 Select **"Quick Msg"**.



- 4 Select the desired message.



- 5 Select **"Send"**.



- While the message is being sent, a sending message screen is displayed.
 - To cancel sending the message, select **"Cancel"**.
- 6 Check that a confirmation screen is displayed when the operation is complete.
 - If an error message is displayed, follow the guidance on the screen to try again.

■ EDITING QUICK REPLY MESSAGES

This operation cannot be performed while driving.

1 Select "Quick Msg".



2 Select corresponding to the desired message to edit.



3 Select "OK" when editing is completed.

INFORMATION

- To reset the edited quick reply messages, select "Default".

- "Quick Message 1" ("I am driving and will arrive in approximately [ETA] minutes.):

This message cannot be edited and will automatically fill in [ETA] with the navigation calculated estimated time of arrival on the confirm message screen.

If there are waypoints set, [ETA] to the next waypoint will be shown.

If there is no route currently set in the navigation system, "Quick Message 1" cannot be selected.

CALLING THE MESSAGE SENDER

Calls can be made to an e-mail/SMS/MMS message sender's phone number. This operation can be performed while driving.

■ CALLING FROM E-MAIL/SMS/MMS MESSAGE DISPLAY

- 1 Display the message inbox screen. (→P.315)
- 2 Select the desired message.
- 3 Select .



- If there are 2 or more phone numbers, select the desired number.
- 4 Check that the "Call" screen is displayed.


■ CALLING FROM A NUMBER WITHIN A MESSAGE

Calls can be made to a number identified in a message's text area. This operation cannot be performed while driving.

- 1 Display the message inbox screen. (→P.315)
- 2 Select the desired message.
- 3 Select the text area.



- 4 Select the desired number.

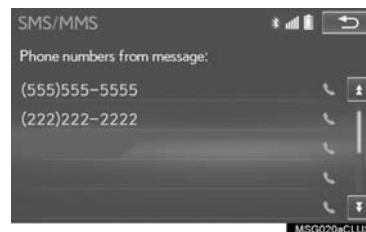

- Identified phone numbers contained in the message are displayed.

- 5 Check that the "Call" screen is displayed.

INFORMATION

- A series of numbers may be recognized as a phone number. Additionally, some phone numbers may not be recognized, such as those for other countries.


■ **CALLING FROM THE INCOMING MESSAGE SCREEN**

→P.316

2. SETUP

1. PHONE/MESSAGE SETTINGS


- 1 Press the “SETUP” button on the Remote Touch.

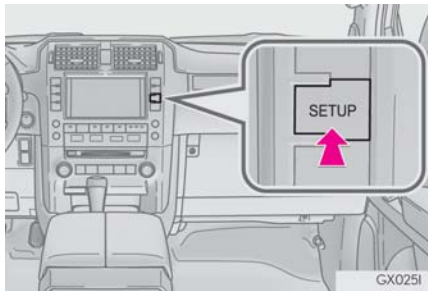

PHONE/MESSAGE SETTINGS
SCREEN



- 2 Select “Phone”.

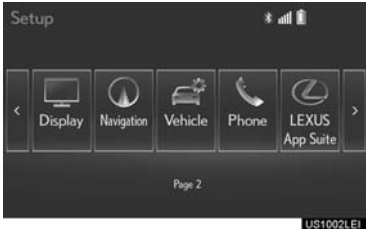


- 3 Select the item to be set.



No.	Information	Page
1	Registering/connecting a phone	40
2	Sound settings	323
3	Contact/call history settings	324
4	Messaging settings	335
5	Phone display settings	337

DISPLAYING THE PHONE/ MESSAGE SETTINGS SCREEN IN A DIFFERENT WAY



- 1 Display the phone top screen. (→P.305)
- 2 Select **"Settings"**.

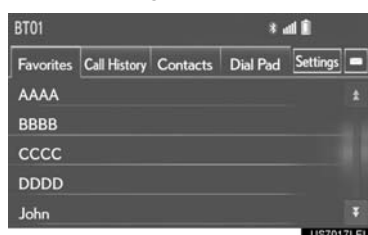

"Sound Settings" SCREEN

The call and ringtone volume can be adjusted. A ringtone can be selected.

- 1 Display the "Phone/Message Settings" screen. (→P.322)
- 2 Select **"Sound Settings"**.
- 3 Select the desired item to be set.

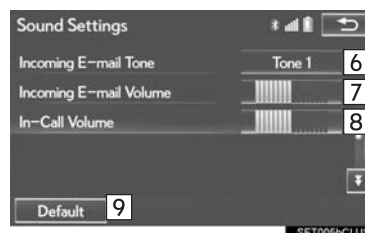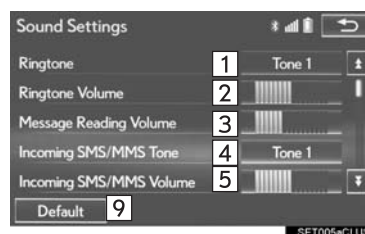

7

PHONE

2. SETUP

No.	Function
1	Select to set the desired ringtone.
2	Select “-” or “+” to adjust the ringtone volume.
3	Select “-” or “+” to adjust the message readout volume.
4	Select to set the desired incoming SMS/MMS tone.
5	Select “-” or “+” to adjust the incoming SMS/MMS tone volume.
6	Select to set the desired incoming e-mail tone.
7	Select “-” or “+” to adjust the incoming e-mail tone volume.
8	Select “-” or “+” to adjust the default volume of the other party’s voice.
9	Select to reset all setup items.

INFORMATION



- Depending on the type of phone, certain functions may not be available.

“Contact/Call History Settings” SCREEN

The contact can be transferred from a Bluetooth[®] phone to the system. The contact also can be added, edited and deleted.

The call history can be deleted and contact and favorites can be changed.

- 1 Display the “Phone/Message Settings” screen. (→P.322)
- 2 Select “Contact/Call History Settings”.
- 3 Select the desired item to be set.

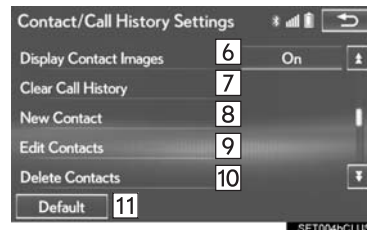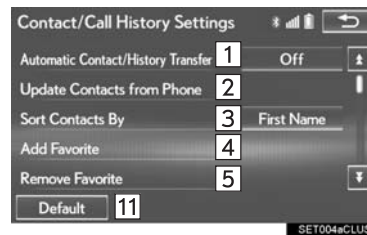

No.	Function	Page
1	For PBAP compatible Bluetooth® phones, select to set automatic contact/history transfer on/off. When set to on, the phone's contact data and history are automatically transferred.	—
2	Select to update contacts from the connected phone.	326
3	Select to sort contacts by the first name or last name field.	—
4	Select to add contacts to the favorites list.	332
5	Select to delete contacts from the favorites list.	334
6	Select to set the transferred contact image display on/off.	—
7*	Select to clear contacts from the call history.	—
8*	Select to add new contacts to the contact list.	328
9*	Select to edit contacts in the contact list.	329
10*	Select to delete contacts from the contact list.	331
11	Select to reset all setup items.	—

*: For PBAP compatible Bluetooth® phones, this function is available when "Automatic Contact/History Transfer" is set to off. (→P.324)

- Depending on the type of phone, certain functions may not be available.
- Contact data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

7

PHONE

UPDATE CONTACTS FROM PHONE

Operation methods differ between PBAP compatible and PBAP incompatible but OPP compatible Bluetooth® phones.

If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.

■ FOR PBAP COMPATIBLE Bluetooth® PHONES

- 1 Select **"Update Contacts from Phone"**.
 - Contacts are transferred automatically.
- 2 Check that a confirmation screen is displayed when the operation is complete.
 - This operation may be unnecessary depending on the type of cellular phone.
 - Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth® phone.
 - If another Bluetooth® device is connected when transferring contact data, depending on the phone, the connected Bluetooth® device may need to be disconnected.
 - Depending on the type of Bluetooth® phone being connected, it may be necessary to perform additional steps on the phone.

■ FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES

This operation cannot be performed while driving.

- 1 Select **"Update Contacts from Phone"**.
- 2 Select **"Replace Contacts"** or **"Add Contacts"**.



"Replace Contacts": Select to transfer the contact from the connected cellular phone and replace the current one.

"Add Contacts": Select to transfer the desired contact data from the connected cellular phone to add to the current one.

3 Transfer the contact data to the system using a Bluetooth® phone.

- This operation may be unnecessary depending on the type of cellular phone.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth® phone.
- To cancel this function, select **"Cancel"**.

4 Select **"Done"** when it appears on the screen.

5 Check that a confirmation screen is displayed when the operation is complete.

■ UPDATING THE CONTACTS IN A DIFFERENT WAY (FROM THE "Call History" SCREEN)

For PBAP compatible Bluetooth® phones, this function is available when "Automatic Contact/History Transfer" is set to off. (→P.324)

1 Display the phone top screen. (→P.305)

2 Select the **"Call History"** tab and select a contact not yet registered in the contact list.

3 Select **"Update Contact"**.




7


PHONE

2. SETUP

- 4 Select the desired contact.

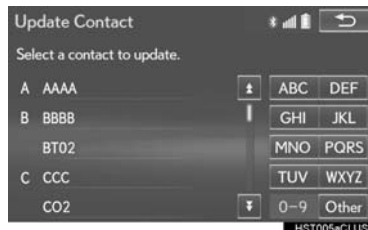

- 5 Select a phone type for the phone number.

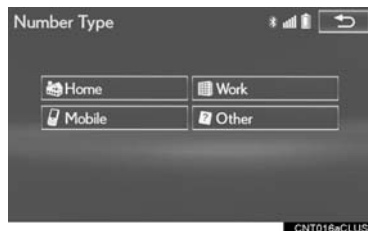

REGISTERING A NEW CONTACT TO THE CONTACT LIST

New contact data can be registered.

Up to 4 numbers per person can be registered. For PBAP compatible Bluetooth® phones, this function is available when "Automatic Contact/History Transfer" is set to off. (→P.324)

- 1 Select **"New Contact"**.
- 2 Enter the name and select **"OK"**.
- 3 Enter the phone number and select **"OK"**.
- 4 Select the phone type for the phone number.



- 5 To add another number to this contact, select **"Yes"**.

■ REGISTERING A NEW CONTACT IN A DIFFERENT WAY (FROM THE “Call History” SCREEN)

- 1 Display the phone top screen. (→P.305)
- 2 Select the “Call History” tab and select a contact not yet registered in the contact list.
- 3 Select “Add to Contacts”.




- 4 Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.328)


EDITING THE CONTACT DATA

For PBAP compatible Bluetooth® phones, this function is available when “Automatic Contact/History Transfer” is set to off. (→P.324)

- 1 Select “Edit Contacts”.
- 2 Select the desired contact.

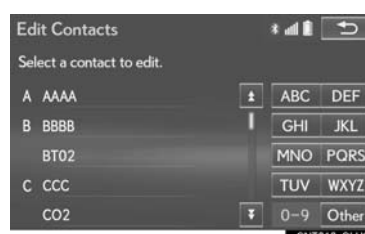

- 3 Select  corresponding to the desired name or number.

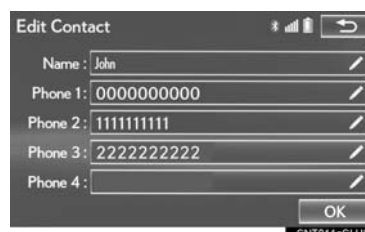

7

PHONE

2. SETUP

► For editing the name


- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACT LIST" from "STEP 2". (→P.328)

► For editing the number

- 4 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACT LIST" from "STEP 3". (→P.328)

■ EDITING THE CONTACT IN A DIFFERENT WAY (FROM THE "Contact Details" SCREEN)

- 1 Display the phone top screen. (→P.305)
- 2 Select the "Contacts", "Call History" tab or the "Favorites" tab and select the desired contact.
- 3 Select "Edit Contact".

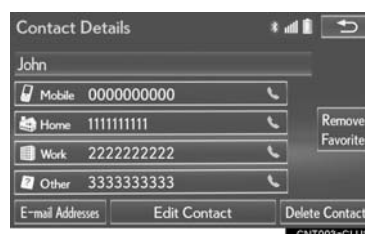


"E-mail Addresses": Select to display all registered e-mail addresses for the contact.

- 4 Follow the steps in "EDITING THE CONTACT DATA" from "STEP 4". (→P.329)

DELETING THE CONTACT DATA

For PBAP compatible Bluetooth® phones, this function is available when "Automatic Contact/History Transfer" is set to off. (→P.324)

- 1 Select "Delete Contacts".
- 2 Select the desired contact and select "Delete".

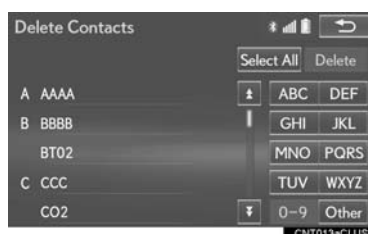


- 3 Select "Yes" when the confirmation screen appears.

INFORMATION

- Multiple data can be selected and deleted at the same time.

DELETING THE CONTACT IN A DIFFERENT WAY (FROM THE "Contact Details" SCREEN)

- 1 Display the phone top screen. (→P.305)
- 2 Select the "Contacts", "Call History" tab or the "Favorites" tab and select the desired contact.
- 3 Select "Delete Contact".

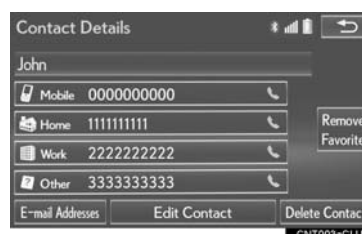

- 4 Select "Yes" when the confirmation screen appears.

INFORMATION

- When a Bluetooth® phone is deleted, the contact data will be deleted at the same time.

7


PHONE

FAVORITES LIST SETTING

Up to 15 contacts (maximum of 4 numbers per contact) can be registered in the favorites list.

REGISTERING THE CONTACTS IN THE FAVORITES LIST


- 1 Select "Add Favorite".
- 2 Select the desired contact to add to the favorites list.

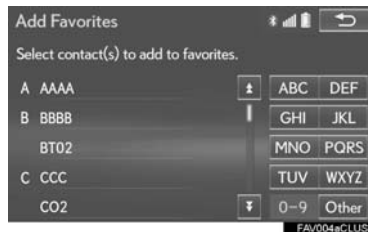

- Dimmed contacts are already stored as a favorite.
- 3 Check that a confirmation screen is displayed when the operation is complete.

► When 15 contacts have already been registered to the favorites list


- 1 When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced. Select "Yes" when the confirmation screen appears to replace a contact.
- 2 Select the contact to be replaced.

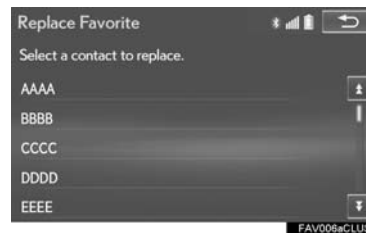

- 3 Check that a confirmation screen is displayed when the operation is complete.

- Registering contacts in the favorites list in a different way (from the “Contacts” screen)


- 1 Display the phone top screen. (→P.305)
- 2 Select the **“Contacts”** tab.
- 3 Select ☆(gray) at the beginning of the desired contact list name to be registered in the favorites list.

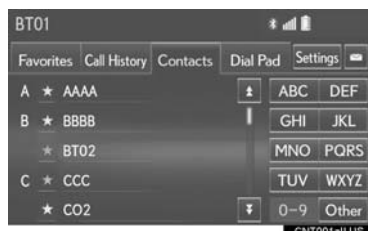

- When selected, ☆(gray) is changed to ★(yellow), and the contact is registered in the favorites list.

- Registering contacts in the favorites list in a different way (from the “Contact Details” screen)


- 1 Display the phone top screen. (→P.305)
- 2 Select the **“Contacts”** tab or the **“Call History”** tab and select the desired contact.
- 3 Select **“Add Favorite”**.

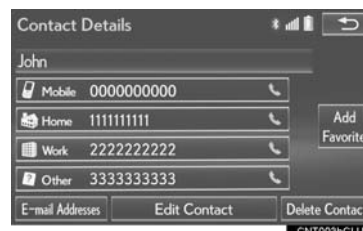

- 4 Check that a confirmation screen is displayed when the operation is complete.

■ DELETING THE CONTACTS IN THE FAVORITES LIST


- 1 Select **"Remove Favorite"**.
- 2 Select the desired contacts and select **"Remove"**.

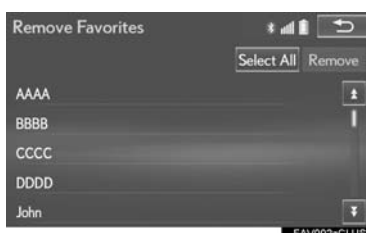

- 3 Select **"Yes"** when the confirmation screen appears.
- 4 Check that a confirmation screen is displayed when the operation is complete.

► Deleting contacts in the favorites list in a different way (from the "Contacts" screen)


- 1 Display the phone top screen. (→P.305)
- 2 Select the **"Contacts"** tab.
- 3 Select ★(yellow) at the beginning of the contact list name to be deleted from the favorites list.

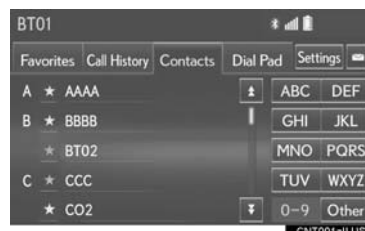

- When selected, ★(yellow) is changed to ☆(gray), and the data is deleted from the list.

- Deleting contacts in the favorites list in a different way (from the “Contact Details” screen)



- 1 Display the phone top screen. (→P.305)
- 2 Select the “Contacts”, “Call History” tab or the “Favorites” tab and select the desired contact to delete.
- 3 Select “Remove Favorite”.

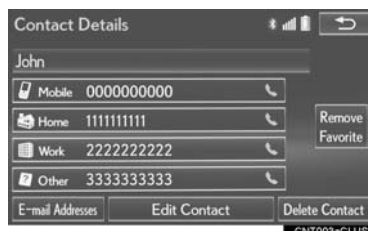

- 4 Select “Yes” when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

“Messaging Settings” SCREEN

- 1 Display the “Phone/Message Settings” screen. (→P.322)
- 2 Select “Messaging Settings”.
- 3 Select the desired item to be set.

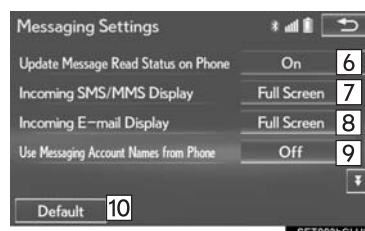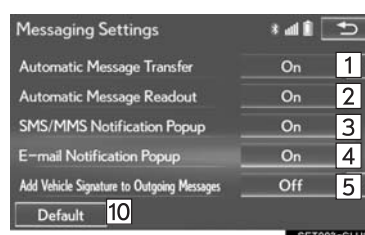

7

PHONE

2. SETUP


No.	Function
1	Select to set automatic message transfer on/off.
2	Select to set automatic message read-out on/off.
3	Select to set the SMS/MMS notification popup on/off.
4	Select to set the e-mail notification popup on/off.
5	Select to set adding the vehicle signature to outgoing messages on/off.
6	Select to set updating message read status on phone on/off.
7	Select to change the incoming SMS/MMS display. "Full Screen" : When an SMS/MMS message is received, the incoming SMS/MMS display screen is displayed it can be operated by selecting the switches on the screen. "Drop-Down" : When an SMS/MMS message is received, a message is displayed on the upper side of the screen.
8	Select to change the incoming e-mail display. "Full Screen" : When an e-mail is received, the incoming e-mail display screen is the displayed and it can be operated by selecting the switches on the screen. "Drop-Down" : When an e-mail is received, a message is displayed on the upper side of the screen.
9	Select to set display of messaging account names on the inbox tab on/off. When set to on, messaging account names used on the cellular phone will be displayed.
10	Select to reset all setup items.

INFORMATION

- Depending on the phone, these functions may not be available.

DISPLAYING THE “Messaging Settings” SCREEN IN A DIFFERENT WAY

- 1 Display the phone top screen. (→P.305)
- 2 Select .
- 3 Select “Settings”.

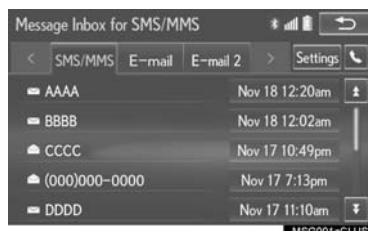

“Phone Display Settings” SCREEN

- 1 Display the “Phone/Message Settings” screen. (→P.322)
- 2 Select “Phone Display Settings”.
- 3 Select the desired item to be set.



No.	Function
1	Select to change the incoming call display. “Full Screen”: When a call is received, the hands-free screen is displayed it can be operated by selecting the switches on the screen. “Drop-Down”: A message is displayed on the upper side of the screen.
2	Select to set display of the contact/history transfer completion message on/off.
3	Select to reset all setup items.

7

PHONE

INFORMATION

- Depending on the phone, these functions may not be available.

3. WHAT TO DO IF...

1. TROUBLESHOOTING

If there is a problem with the hands-free system or a Bluetooth® device, first check the table below.

► When using the hands-free system with a Bluetooth® device

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The hands-free system or Bluetooth® device does not work.	The connected device may not be a compatible Bluetooth® cellular phone.	For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website: http://www.lexus.com/MobileLink	*	—
	The Bluetooth® version of the connected cellular phone may be older than the specified version.	Use a cellular phone with Bluetooth® version 2.0 or higher (recommended: Ver. 3.0+EDR or higher).	*	43

► When registering/connecting a cellular phone

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A cellular phone cannot be registered.	An incorrect passcode was entered on the cellular phone.	Enter the correct passcode on the cellular phone.	*	—
	The registration operation has not been completed on the cellular phone side.	Complete the registration operation on the cellular phone (approve registration on the phone).	*	—
	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	48

3. WHAT TO DO IF...

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A Bluetooth® connection cannot be made.	Another Bluetooth® device is already connected.	Manually connect the cellular phone you wish to use to this system.	—	48
	Bluetooth® function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	—
	Automatic Bluetooth® connection on this system is set to off.	Set automatic Bluetooth® connection on this system to on when the engine switch is in ACCESSORY or IGNITION ON mode.	—	54
"Unable to dial. Please check your phone." message is displayed.	Bluetooth® function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	—
	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	48

► When making/receiving a call

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
A call cannot be made/received.	Your vehicle is in a "No Service" area.	Move to where "No Service" no longer appears on the display.	—	—

3. WHAT TO DO IF...

► When using the phonebook

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Phonebook data cannot be transferred manually/automatically.	The profile version of the connected cellular phone may not be compatible with transferring phonebook data.	For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website: http://www.lexus.com/MobileLink	*	—
	Automatic contact transfer function on this system is set to off.	Set automatic contact transfer function on this system to on.	—	324
	Passcode has not been entered on the cellular phone.	Enter the passcode on the cellular phone if requested (default passcode: 1234).	*	—
	Transfer operation on the cellular phone has not completed.	Complete transfer operation on the cellular phone (approve transfer operation on the phone).	*	—
Phonebook data cannot be edited.	Automatic contact transfer function on this system is set to on.	Set automatic contact transfer function on this system to off.	—	324

► When using the Bluetooth® message function

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Messages cannot be viewed.	Message transfer is not enabled on the cellular phone.	Enable message transfer on the cellular phone (approve message transfer on the phone).	*	—
	Automatic transfer function on this system is set to off.	Set automatic transfer function on this system to on.	—	335
New message notifications are not displayed.	Notification of SMS/MMS/E-mail reception on this system is set to off.	Set notification of SMS/MMS/E-mail reception on this system to on.	*	335
	Automatic message transfer function is not enabled on the cellular phone.	Enable automatic transfer function on the cellular phone.	*	—

► In other situations

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The Bluetooth® connection status is displayed at the top of the screen each time the engine switch is in ACCESSORY or IGNITION ON mode.	Connection confirmation display on this system is set to on.	To turn off the display, set connection confirmation display on this system to off.	—	53

7

PHONE

3. WHAT TO DO IF...

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
Even though all conceivable measures have been taken, the symptom status does not change.	The cellular phone is not close enough to this system.	Bring the cellular phone closer to this system.	—	—
	The cellular phone is the most likely cause of the symptom.	Turn the cellular phone off, remove and reinstall the battery pack, and then restart the cellular phone.	*	—
		Enable the cellular phone's Bluetooth® connection.	*	—
		Stop the cellular phone's security software and close all applications.	*	—
		Before using an application installed on the cellular phone, carefully check its source and how its operation might affect this system.	*	—

*: For details, refer to the owner's manual that came with the cellular phone.

LEXUS ENFORM

1 LEXUS ENFORM-OVERVIEW

1. FUNCTIONAL OVERVIEW 346
LEXUS Enform Remote 347
2. TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE 348
BEFORE USING THE FUNCTION 350
PREPARATION BEFORE USING LEXUS App Suite 351
3. TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM 352
BEFORE USING THE FUNCTION 353
4. TYPE C: FUNCTION ACHIEVED BY USING DCM 355

2 LEXUS ENFORM OPERATION

1. LEXUS Enform Remote 356
2. LEXUS App Suite 357
USING LEXUS App Suite 357
LINKING LEXUS App Suite AND NAVIGATION SYSTEM LOCAL FUNCTION 362
ENTERING KEYWORD OPERATION 365
3. LEXUS Enform Destinations 367
Destination Assist 367

3 SETUP

1. LEXUS App Suite SETTINGS 369
SCREEN FOR LEXUS App Suite SETTINGS 369

LEXUS Enform connected services consists of five products:

- LEXUS Enform Safety Connect
- LEXUS Enform Service Connect
- LEXUS Enform Remote
- LEXUS Enform Destinations
- LEXUS Enform App Suite

For availability and to learn more, visit <http://www.lexus.com/enform/>.

1. LEXUS ENFORM-OVERVIEW

1. FUNCTIONAL OVERVIEW

Lexus Enform is a service that includes Safety Connect, Remote, Destinations and App Suite.

- The functions included in Lexus Enform are classified into the following three types.
 - Type A: Function achieved by using a cellular phone
 - Type B: Function achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module) and the navigation system
 - Type C: Function achieved by using DCM

Function	Type
LEXUS App Suite	Type A
LEXUS Enform Destinations (Destination Assist)	Type B
LEXUS Enform Safety Connect	Type C

- Each function is available in the following areas:
 - LEXUS App Suite is available in the contiguous United States, Washington D.C. and Alaska.
 - LEXUS Enform Destinations is available in the contiguous United States, Washington D.C. and limited areas of Alaska for vehicles that contain the appropriate map data.
 - LEXUS Enform Safety Connect features include:
 - Automatic Collision Notification, Emergency Assistance, Stolen Vehicle Location (available in the contiguous United States, Washington D.C., Hawaii, Alaska, and Canada) and Enhanced Roadside Assistance (available in the contiguous United States, Washington D.C., Alaska, and Canada).

INFORMATION

- Availability of functions of the Lexus Enform service is dependent on network reception level.

LEXUS Enform Remote

LEXUS Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>.


- Function of the LEXUS Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).
- Lexus Enform Remote is available in the contiguous United States, Washington D.C. and Alaska.

1. LEXUS ENFORM-OVERVIEW

2. TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE

Of the functions included with Lexus Enform, the App Suite relies on the use of a cellular phone.

App Suite enables applicable apps installed on a cellular phone to be displayed on and operated from the navigation screen via a Bluetooth®. A few settings must be performed before App Suite can be used. (→P.351)

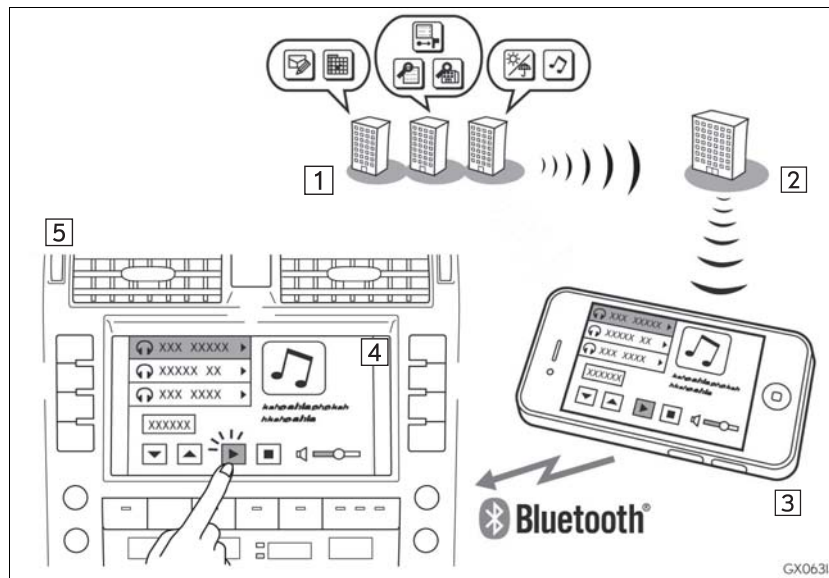

No.	Name	Function
1	Content provider	Provides contents to the navigation system via a cellular phone.
2	Application server	Provides applications to the navigation system via a cellular phone.
3	Cellular phone*	Using the App Suite, communication is relayed between the navigation system, application server and contents provider. The cellular phone cannot be operated while communicating.
4	Applications	Display usable content from the content providers on the screen using the data connection of the connected cellular phone.
5	Navigation system	Content received, via a cellular phone, from content provider servers is displayed on the navigation screen. The navigation system is equipped with an application player to run applications.

*: For known compatible phones, refer to <http://www.lexus.com/MobileLink>.

BEFORE USING THE FUNCTION

SUBSCRIPTION

- User registration is required to start using the App Suite function. (→P.351)
- App Suite does not require an activation fee or monthly recurring fees.
- Services requiring a separate contract can also be used.*

*: For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

AVAILABILITY OF FUNCTION

- LEXUS App Suite is available in the contiguous United States, Washington D.C. and Alaska.

INFORMATION

- Data usage fees may apply while using App Suite function. Confirm data usage fees before using this function.
- The required operations to activate applications and connect a cellular phone to the navigation system, and the registration steps for the App Suite are explained in this section. For details regarding operation of the App Suite and the applications, refer to <http://www.lexus.com/enform/>.
- Availability of functions of the Lexus Enform service is dependent on network reception level.

INITIALIZING PERSONAL DATA

The personal data used in applications can be reset. (→P.61)

- The following personal data can be deleted and returned to their default settings:
 - Downloaded contents
 - Radio stations that were listened to
 - Input history

INFORMATION

- Once initialized, data will be erased. Pay close attention when initializing data.

PREPARATION BEFORE USING LEXUS App Suite

SETTINGS REQUIRED TO USE LEXUS App Suite

Perform the settings in the following order.

1 User registration



2 Download the App Suite application to your cellular phone.



3 Register the cellular phone with the navigation system.

In order to use App Suite, the following must first be performed:

- User registration with the service (→P.351)
- Download the App Suite application onto your cellular phone, and login to the application. (→P.351)
- Register the cellular phone, on which the App Suite application was installed, with the navigation system. (→P.351)
- Register a Bluetooth® phone with the hands-free system. (→P.40)

USER REGISTRATION

- 1 Perform user registration at <http://www.lexus.com/enform/> or register within the App Suite application after you download it onto your cellular phone.

REGISTERING THE LEXUS App Suite APPLICATION

- 1 Download the App Suite application to your cellular phone.
- 2 Run the App Suite application on your cellular phone.
- 3 Enter the information required into the App Suite application. Login to the application.

INFORMATION

- Applications can only be used when the App Suite application has been downloaded to your cellular phone and the application is running.
- App Suite operational procedures can also be confirmed by visiting <http://www.lexus.com/enform/>.
- In order to use applications, it is necessary to run the App Suite application on your cellular phone.
- If an iPhone is connected via Bluetooth® and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <http://www.lexus.com/enform/>.
- If a App Suite application is used while iPod audio/video is being played back, system operation may become unstable.


1. LEXUS ENFORM-OVERVIEW

3. TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM

The functionality of Lexus Enform Safety Connect and Lexus Enform Destinations is made possible through the shared work of the DCM and the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data and embedded cellular technology to provide safety and security as well as convenience features.

These services are available by subscription on select, telematics hardware-equipped vehicles and supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

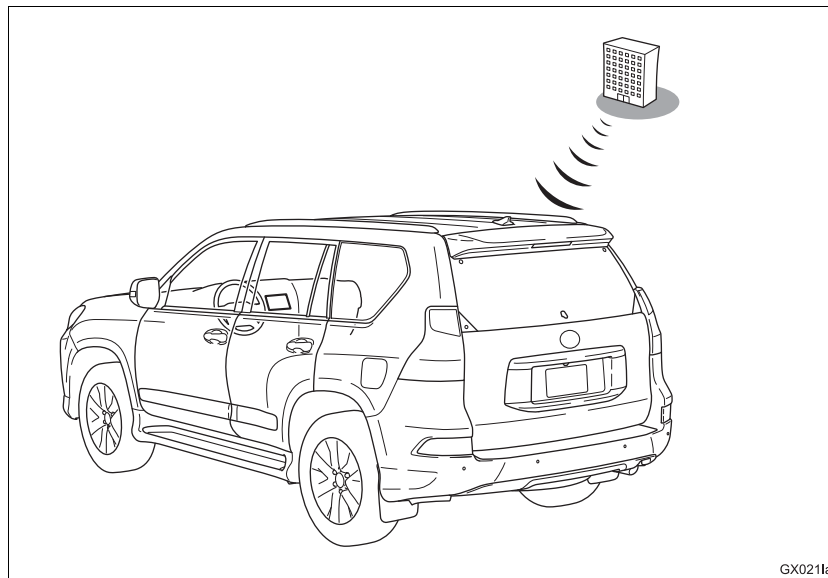

GX0211a

BEFORE USING THE FUNCTION

SUBSCRIPTION

- After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available. Contact your Lexus dealer or call 1-800-25-LEXUS (1-800-255-3987), for further subscription details. (→P.367)

AVAILABILITY OF FUNCTION(S)

- Destination Assist is available in the contiguous United States, D.C. and limited areas of Alaska for vehicles that contain map data.

ACTIVATION OF FUNCTION(S)

- Enrollment in Lexus Enform Safety Connect (via your dealership) is required to activate all functions.

- Certification for Lexus Enform Safety Connect

FCC ID: JOYJ79

FCC WARNING:

Changes or modifications not expressly approved by the manufacture could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The antennas used for this transmitter must be installed to provide a separation distance of least 20cm from all persons.

INFORMATION

- Exposure to radio frequency signals:
The Lexus Enform system installed in your vehicle includes a low power radio transmitter and receiver. The system receives and also sends out radio frequency (RF) signals.
- In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.
 - ANSI (American National Standards Institute) C95.1 [1992]
 - NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
 - ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]
- These standards are based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of Lexus Enform system complies with the FCC guidelines in addition to those standards.
- Contact with the Lexus response center is dependent upon the telematics device being in operative condition, cellular connection availability, navigation map data, and GPS satellite signal reception, which can limit the ability to reach the response center or receive support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms are available; charges vary by subscription term selected.
- The Lexus response center offers support in multiple languages.
- Select Lexus Enform Safety Connect-subscribed vehicles are capable of communicating vehicle information. Please see the terms and conditions for additional details.
Owners who do not wish to have their vehicle transmit this information can opt out at the time of enrollment or by calling 1-800-255-3987 and following the prompts for Lexus Enform Safety Connect.
- For further details about the service, contact your Lexus dealer.
- Lexus Enform functions are not subject to section 255 of the Telecommunications Act and the system is not TTY compatible.

1. LEXUS ENFORM-OVERVIEW

4. TYPE C: FUNCTION ACHIEVED BY USING DCM

The functionality of Lexus Enform Safety Connect is made possible by the use of a DCM.

For details, refer to "Owner's Manual".

2. LEXUS ENFORM OPERATION

1. LEXUS Enform Remote

For details about the functions and services provided by this app, refer to <http://www.lexus.com/enform/>.

SUBSCRIPTION

- After you sign the Telematics Subscription Service Agreement (see the LEXUS Enform Safety Connect section in "Owner's Manual"), download the LEXUS Enform Remote app from your cellular phone's app store, and register within the app (or enroll and complete registration at the dealer), you can begin using these services.
- A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) for further subscription details.

AVAILABILITY OF FUNCTION

- Lexus Enform Remote is available in the contiguous United States, Washington D.C., and Alaska.
Lexus Enform Remote is not available in some countries or areas.

INFORMATION

- Lexus Enform Remote should only be used by authorized users.
- Laws in some communities may require that the vehicle be within view of the user when operating Lexus Enform Remote.
In some states, use of Lexus Enform Remote may violate state or local laws. Before using Lexus Enform Remote, check your state and local laws.
- Any malfunction of the Lexus should be repaired by your Lexus dealer.
- Lexus Enform Remote is designed to work at temperatures above -22 °F (-30 °C). This specification is related to the Lexus Enform Remote operation, but is dependent on the vehicle's operating temperature range which may be different.
- Content is subject to change without notice.
- Some features of the Lexus Enform Remote may not be available on some models.
- Additional information can be found at www.lexus.com/enform/.
- Availability of functions of the Lexus Enform service is dependent on network reception level.


2. LEXUS ENFORM OPERATION

2. LEXUS App Suite

USING LEXUS App Suite

App Suite is a function that enables applicable apps installed on a cellular phone to be displayed on and operated from the navigation screen. Before App Suite can be used, a few settings need to be performed. (→P.351)
For details about the functions and services provided by each application, refer to <http://www.lexus.com/enform/>.


1 Press the “INFO/APPS” button.

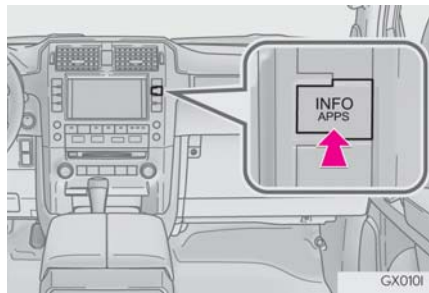

2 Select “LEXUS App Suite”.



3 Select the desired application screen button.

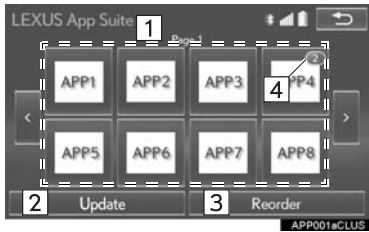

No.	Function	Page
1	Select to activate an application.	—
2	Select to update the applications.	358
3	Select to change the order of the applications.	360
4	Displays the number of new notifications for the application	—

2. LEXUS ENFORM OPERATION

UPDATING AN APPLICATION

When App Suite is activated, an application may need to be updated. By updating the application, it can be kept to the latest version. To update an application, it is necessary to download update data and install it.

DOWNLOADING UPDATE

If an update is available, “Update” can be selected.

1 Select “Update”.



2 Check that downloading starts.




“Download in Background”: Select to operate other functions while downloading.


“Cancel”: Select to cancel updating.

3 Check that downloading is complete.

► From the “Update” screen

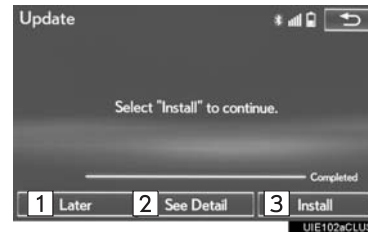

► From other screens

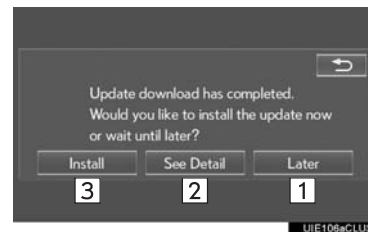

No.	Function
1	Select to install later. When this screen button is selected, the screen will return to the last displayed screen. To install the update data: →P.359
2	Select to display detailed information on the update data.
3	Select to install the update data. Follow the steps “INSTALLING THE UPDATE DATA” from “STEP 2”. (→P.359)

■ INSTALLING THE UPDATE DATA

After the downloading is complete, "Update" will be changed to "Install".

- 1 Select "Install".




- 2 Select "Continue".




"Later": Select to postpone the installation of the update data and go back to the previous screen.

- 3 Check that installing is started.

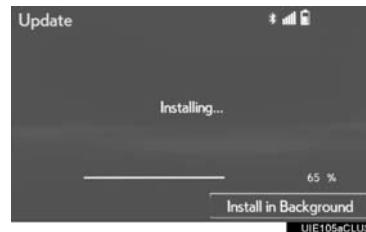

"Install in Background": Select to operate other function while installing.

- 4 Select "OK" after the installing is complete.

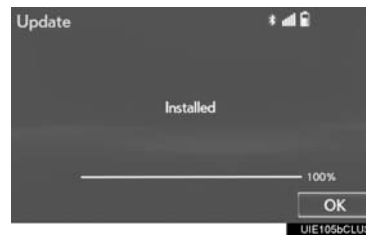

INFORMATION

- The App Suite function cannot be operated while installing.

2. LEXUS ENFORM OPERATION

REORDERING THE APPLICATIONS

Order of the applications can be changed.

- 1 Display the "LEXUS App Suite" screen.
(→P.357)
- 2 Select "Reorder".



- 3 Select the desired application to be moved.



- 4 Select "<<" or ">>" to move the application, and select "OK".

IF A MESSAGE APPEARS ON THE SCREEN

When problems occur with starting the application player, a message will appear on the screen. Referring to the table below, identify the problem and take the suggested corrective action.

Message	Display conditions	Corrective action
"This feature is unavailable during an emergency call."	Safety Connect is being implemented.	After the Safety Connect call is finished, perform the operation again.
"This feature is unavailable while transferring contacts."	Contacts are being transferred manually from the phonebook.	When the transfer of contacts is complete, perform the operation again.
"Unable to connect to a Bluetooth* phone. For troubleshooting assistance, please visit the Lexus website or contact your dealer."	The cellular phone cannot be connected.	Refer to http://www.lexus.com/enform/ to confirm if the phone is compatible or not.
"This feature is unavailable during a handsfree call."	A hands-free call is in progress.	After the hands-free call is finished, perform the operation.
"To use the services, an active application needs to be running on your phone. For more information, please visit lexus.com ."	The LEXUS App Suite application cannot be connected to Bluetooth® SPP.	Refer to http://www.lexus.com/enform/ to confirm if the phone is Bluetooth® SPP compatible or not, and then activate the App Suite application.
"Communication error. Please try again."	Communication was disconnected.	After a few moments, retry the operation.


*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

2. LEXUS ENFORM OPERATION

LINKING LEXUS App Suite AND NAVIGATION SYSTEM LOCAL FUNCTION

The setting a destination and making a hands-free call functions of the navigation system can be performed via App Suite. For details about the functions and services provided by each application, refer to <http://www.lexus.com/enform/>.

- 1 Press the “NAV” button.

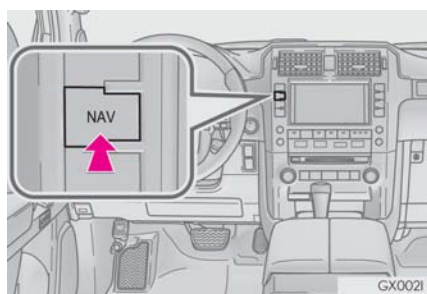


- 2 Select “Dest.”.



- 3 Select “Web Search”.



- 4 Check that the “Web Search” screen is displayed.

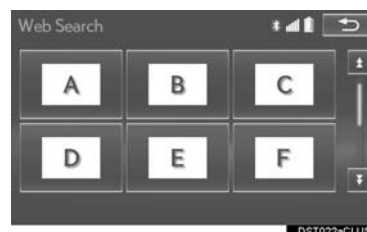


SETTING A DESTINATION USING LEXUS App Suite

Locations that were searched for using the App Suite can be set as a destination.


- 1 Display the "Web Search" screen.
(→P.362)
- 2 Select the desired application screen button to perform search.



- 3 Enter a search term, and select "Go".

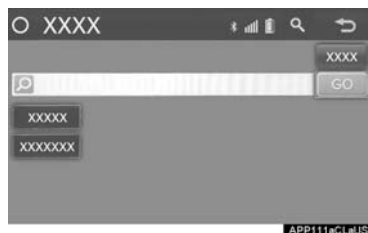

- 4 Select "Map".

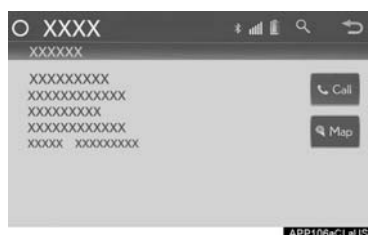

- 5 Select "Go to" icon.



- 6 Select "OK" to start guidance.




- For the operation of the route guidance screen and the function of each screen button: →P.110

2. LEXUS ENFORM OPERATION

MAKING A PHONE CALL USING LEXUS App Suite

Phone calls can be made to locations which were searched for using App Suite.

- 1 Display the "Web Search" screen.
(→P.362)
- 2 Select the desired application screen button to perform search.

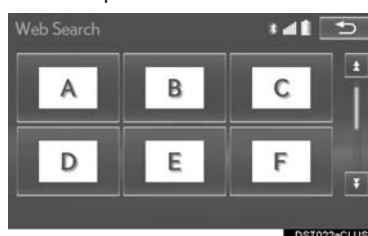

- 3 Enter a search term, and select "Go".



- 4 Select "Call".



- 5 Select "Yes".



"Cancel": Select to cancel making a phone call.

- 6 Check that the "Call" screen is displayed.



- For phone operation and the function of each screen button: →P.312

ENTERING KEYWORD OPERATION

A keyword can be entered to an application by the software keyboard or voice recognition function. For details about the functions and services provided by each application, refer to <http://www.lexus.com/enform/>.


- The keyboard layout can be changed. (→P.55)

ENTERING A KEYWORD USING THE SOFTWARE KEYBOARD

- 1 Display the "LEXUS App Suite" screen. (→P.357)
- 2 Select the desired application screen button.




- 3 Select the character entering space.

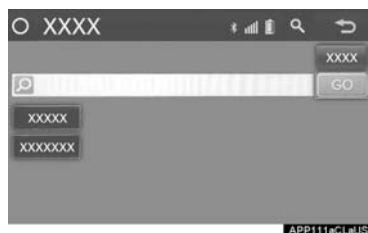

- 4 Enter a search term, and then select "OK".



- 5 Entering characters will be reflected on the character entering space.

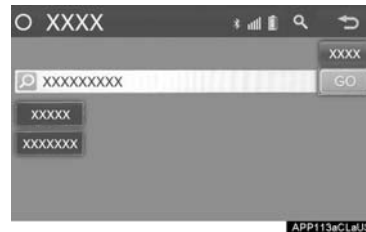

- For details on operating the keyboard: →P.34


2. LEXUS ENFORM OPERATION

ENTERING A KEYWORD USING THE VOICE RECOGNITION FUNCTION

- 1 Display the "LEXUS App Suite" screen. (→P.357)
- 2 Select the desired application screen button.



- 3 Press the talk switch. (→P.280)

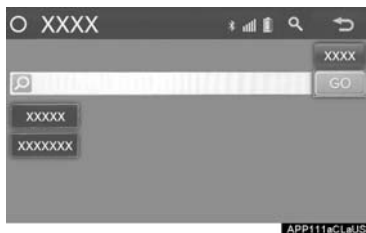

- 4 When this screen is displayed, say the desired keyword.



- Completion of the keyword will be detected automatically.

- 5 Search results will be displayed on the screen.



- Voice recognition can also be used by using the talk switch on the steering wheel. (→P.280)

2. LEXUS ENFORM OPERATION

3. LEXUS Enform Destinations


Destination Assist

Destinations provide you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other Points of Interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

MAKE A CALL WITH Destination Assist

- 1 Press the "NAV" button.

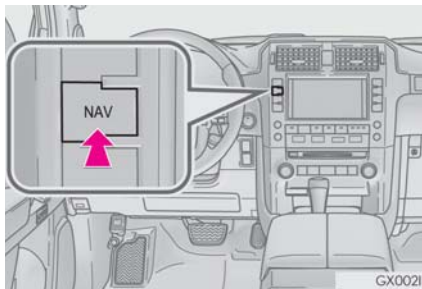

- 2 Select "Dest.".




- 3 Select "Destination Assist".



2. LEXUS ENFORM OPERATION


- 4 When an agent comes on the line, tell the agent the address, business name, or the type of POI or service.

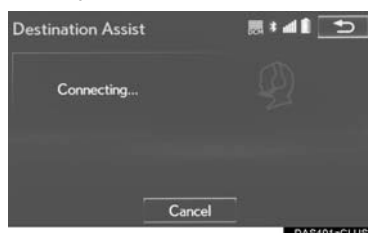

To adjust the volume of a received call: Use the volume control switch on the steering wheel.

- To hang up the phone, select **"Disconnect"** or press the  switch on the steering wheel.

- 5 After the agent helps you determine your location of choice, this screen is displayed. Select the screen button of the desired action.

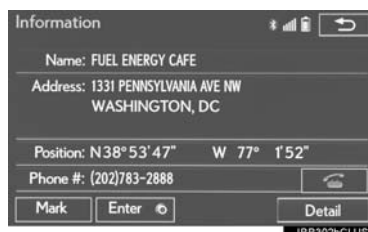

"Mark": Select to mark the POI on the map screen.

"Enter  Select to set as a destination.

"Detail": Select to display detailed information.


- If  is selected, the registered phone number can be called.

3. SETUP

1. LEXUS App Suite SETTINGS

The settings of App Suite can be changed.

1 Press the “SETUP” button.

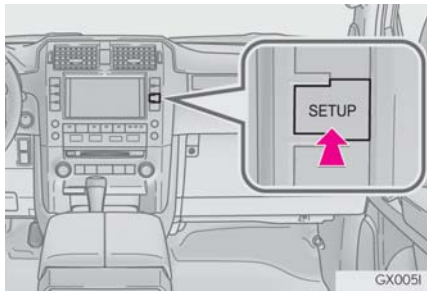


2 Select “LEXUS App Suite”.



3 Select the items to be set.



SCREEN FOR LEXUS App Suite SETTINGS

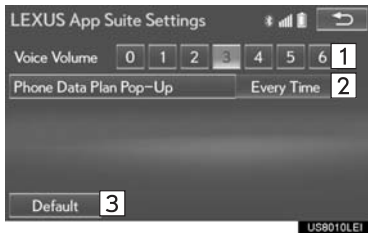

No.	Information	Page
1	Select to set the voice guidance volume.	370
2	Select to set the pop up reminder for cellular phone data usage.	370
3	Select to reset all setup items.	—

3. SETUP

VOICE VOLUME SETTINGS

The voice guidance volume can be adjusted.


- 1 Display the "LEXUS App Suite Settings" screen. (→P.369)
- 2 Select the desired level by selecting the appropriate number.




PHONE DATA PLAN POP-UP SETTINGS

The phone data plan pop-up can be set when a paid application is downloaded.

- 1 Display the "LEXUS App Suite Settings" screen. (→P.369)
- 2 Select "Phone Data Plan Pop-Up".

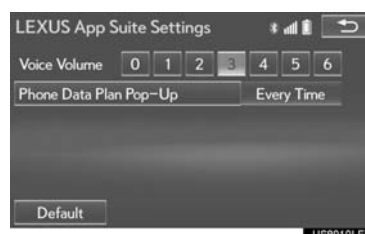

 - 3 Check the desired function to be operated.



INDEX

1

2

3

4

5

6

7

8

ALPHABETICAL INDEX

A

AM/FM radio	168
Available HD radio™ technology	177
Caching a radio program	173
Overview	168
Presetting a station	171
Radio broadcast data system	174
Selecting a station from the list	171
Traffic announcement (FM radio)	176
Troubleshooting guide	179
Using HD radio™ technology	176
Audio settings	258
Audio settings screen	258
Audio/visual remote controls	255
Audio/visual system	155
AUX	221
Overview	221

B

Basic function	10, 27
Basic information before operation	28
Basic operation	72, 158
Bluetooth® audio	214
Connecting a Bluetooth® device	219
Listening to Bluetooth® audio	219
Overview	214
Bluetooth® phone message function	315
Calling the message sender	320
Checking messages	317
Receiving a message	316
Replying to a message (quick reply)	318
Bluetooth® settings	40
Buttons overview	10

C

Calling on the Bluetooth® phone	305
By call history	306
By contacts list	307
By dial pad	310
By favorites list	306
By off hook switch	310
Casual speech recognition	288
CD	189
Overview	189
Playing an audio CD	193
Playing an MP3/WMA/AAC disc	194
Clock settings	56
Command list	289

D

Data services settings	298
Setting download methods	298
Destination search	95
Destination search screen	95
Detailed navigation settings	141
Screens for navigation settings	142
DVD	195
DVD options	199
Overview	195



E	
Editing route	123
Adding destinations.....	124
Deleting destinations.....	125
Detour setting	126
Reordering destinations	124
Selecting route type.....	126
Setting route preferences	125
Starting from adjacent road	128
Entering letters and numbers/list screen operation	34
Entering letters and numbers	34
List screen.....	35

F	
Function index.....	25
Functional overview.....	346
Lexus Enform Remote.....	347

G	
General settings.....	55
General settings screen.....	55
GPS (global positioning system).....	149
Limitations of the navigation system	149

H	
Home screen	12
Status display	14
Home screen operation.....	32

I	
Information.....	295
Information display	296
“Information” screen	18
Initial screen.....	28
Internet radio.....	188
Listening to internet radio.....	188
iPod	207
iPod audio.....	212
iPod video.....	213
Overview	207

L	
Lexus App Suite.....	357
Entering keyword operation.....	365
Linking Lexus App Suite and navigation system local function	362
Using Lexus App Suite.....	357
Lexus App Suite settings.....	369
Screen for Lexus App Suite settings	369
LEXUS enform.....	345
Lexus Enform Destinations	367
Destination assist	367
Lexus Enform operation.....	356
Lexus Enform Remote.....	356
Lexus Enform-Overview.....	346



ALPHABETICAL INDEX

M

Map database information and updates.....	378
Map database version and covered area	152
About the map data.....	153
Map information	152
Map screen information	83
Displaying information about the icon where the cursor is set	87
Displaying map information	83
Standard map icons.....	89
Map screen operation.....	75
Adjusting location in small increments.....	82
Current position display	75
Map scale.....	75
Orientation of the map.....	77
Screen scroll operation.....	81
Switching the map mode.....	78
Media operation	189
Memory points	129
Memory points settings	129
Deleting previous destinations	140
Setting up address book.....	134
Setting up areas to avoid	137
Setting up home	130
Setting up preset destinations	132
Mobile assistant.....	293
Mobile assistant operation	293

N

Navigation operation.....	19
Navigation system.....	69

O

Operating information.....	266
DVD player and disc	268
Error messages.....	278
File information	274
iPod	273
Radio	266
Terms.....	276
Operation flow: Guiding the route.....	23
Other settings.....	55

P

Phone	299
Phone operation (hands-free system for cellular phones)	300
Phone/message settings.....	322
"Contact/call history settings" screen.....	324
"Messaging settings" screen	335
"Phone display settings" screen	337
Phone/message settings screen	322
"Sound settings" screen.....	323

Q

Quick guide.....	9
Quick reference.....	16, 72, 158, 300
Map screen.....	72
Navigation options screen	74

R

Radio operation.....	168
Rear seat entertainment system features.....	227
Caution screen.....	231
Changing settings.....	252
Changing the display to be operated.....	231
Changing the source.....	232
Changing the speaker output	233
Display.....	228
Headphone jacks.....	229
Headphones	230
If the rear seat entertainment system malfunctions.....	254
Operation from the front seats	234
Playing a USB memory	246
Playing an audio CD/CD text.....	238
Playing Bluetooth® audio	249
Playing DVD video	240
Playing iPod	247
Playing MP3/WMA/AAC discs.....	239
Rear seat entertainment system controller.....	228
Turning the rear display off using the remote controller.....	231
Turning the rear display on/off.....	231
Using the AUX mode.....	250
Using the radio.....	236
Using the radio (Internet radio broadcast).....	238
Using the video mode.....	250
Rear seat entertainment system operation.....	227
Receiving doppler weather information.....	296
Displaying doppler weather information	296
Receiving on the Bluetooth® phone.....	311
Incoming calls	311
Registering home	19
Registering preset destinations.....	21
Registering/connecting Bluetooth® device	40
Profiles	43
Registering a Bluetooth® audio player for the first time.....	41
Registering a Bluetooth® phone for the first time	40
Route guidance	115
Route guidance screen	115
During freeway driving	118
Route overview	117
Screen for route guidance.....	115
Turn list screen	120
Turn-by-turn arrow screen.....	121
When approaching intersection.....	120

ALPHABETICAL INDEX

S

Screen adjustment	38	Setting home as the destination	24
Search operation	97	Setup	141, 258, 322, 369
Destination search by Destination Assist.....	105	“Setup” screen.....	16
Searching by address	99	Some basics.....	160, 301
Searching by address book.....	106	About the contacts in the contact list	304
Searching by coordinates	109	Audio screen adjustment.....	166
Searching by emergency	107	Disc slot	162
Searching by intersection and freeway	107	Registering/connecting a Bluetooth® phone	302
Searching by map.....	109	Selecting an audio source	161
Searching by point of interest	101	Sound settings	164
Searching from previous destinations	106	Turning the system on and off.....	160
Selecting search area	98	USB/AUX port	163
Setting home as destination	98	Using the phone switch/microphone.....	302
Setting preset destinations as destination	99	Voice command system.....	167, 303
Setting Bluetooth® details.....	45	When selling or disposing of the vehicle	304
“Bluetooth* setup” screen	45	Starting route guidance.....	110
Connecting a Bluetooth® device	48	Pausing guidance.....	114
Deleting a Bluetooth® device	48	Steering switches	255
Editing the Bluetooth® device information	50		
Registering a Bluetooth® device	46		
“System Settings” screen.....	53		

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



T	
Talking on the Bluetooth® phone.....	312
Incoming call waiting.....	314
Tips for operating the audio/visual system.....	266
Tips for the navigation system	149
Touch screen gestures	30
Touch screen operation.....	31
Traffic information	90
Displaying traffic information on the map.....	93
Traffic settings	147
Auto avoid traffic.....	148
Screen for traffic settings.....	147
Troubleshooting	338
Type A: Function achieved by using a cellular phone.....	348
Before using the function	350
Preparation before using Lexus App Suite.....	351
Type B: Function achieved by using DCM and the navigation system.....	352
Before using the function	353
Type C: Function achieved by using DCM.....	355
Typical voice guidance prompts	122
U	
USB memory	202
Overview	202
USB audio.....	206

V	
Vehicle settings.....	64
Maintenance	65
Voice command system.....	279
Expanded voice commands	287
Using the voice command system	280
Voice command system operation.....	281
Voice command system operation.....	280
Voice settings.....	62
Voice settings screen	62
VTR	224
Overview	224
VTR options	226
W	
What to do if.....	338
X	
XM satellite radio.....	180
Displaying the radio ID	185
How to subscribe to XM satellite radio	183
If the satellite radio tuner malfunctions.....	187
Overview	180
Presetting a channel.....	186
Selecting a channel from the list	186



Map database information and updates

This system uses the maps of DENSO.

AUTOMOTIVE PRODUCTS END USER LICENSE PROVISIONS

This End-User License Agreement ("EULA") is a legal agreement between you and TomTom International B.V. ("TomTom"). You agree that this EULA is enforceable like any written negotiated agreement signed by you. This EULA applies to your use of the TomTom software, services or any other materials made available by or on behalf of TomTom to you (together the "Services"). If you do not agree to the terms of this EULA, you are not permitted to use the Services.

1) GRANT OF LICENSE: In consideration of you agreeing to abide by the terms of this EULA, TomTom hereby grants to you a non-exclusive, personal, non-transferable license to use the Services for your personal non-commercial use subject to the terms of this EULA and solely in combination with the hardware device which is incorporated into your vehicle. This License does not grant any rights to obtaining future upgrades, updates or supplements to the Services. If upgrades, updates or supplements to the Services are obtained, however, the use of such upgrades or updates is governed by this EULA and the amendments to it unless other terms accompany the upgrades, updates or supplements in which case those terms apply.

2) RESTRICTIONS: You are prohibited from renting, lending, public presentation, performance or broadcasting or any other kind of distribution of the Services. Other than as permitted by applicable legislation, you will not, and you will not allow any person to, copy or modify the Services or any part thereof or to reverse engineer, decompile or disassemble the Services.

In respect of the TomTom Places Service You must not: (i) Modify, alter, edit, merge or otherwise change the search results from the format or order in which they are delivered to You via the TomTom Places Service, including, modifying, altering, editing, or otherwise changing any trademarks which are displayed as part of the search results; (ii) Combine, co-mingle or merge the search results with any other search services results including Google Local Search; (iii) On-sell, commercialize, syndicate or otherwise derive any revenue, either directly or indirectly, or permit any third party to derive revenue from the search results; (iv) Undertake any action which would prevent, hinder, distort or otherwise interfere with TomTom's ability to calculate any advertising revenues generated from the search results.

3) OWNERSHIP: Copyright and other intellectual, industrial and/or proprietary rights to the Services are owned by TomTom and/or its suppliers. TomTom permits you to use the Services only in accordance with the terms of this EULA. All rights not specifically granted in this EULA are reserved by TomTom. To the extent applicable, you acknowledge that you have no right to have access to the Services in source code or in unlocked coding or with comments.

4) CONFIDENTIALITY: You acknowledge and agree that the Services were developed at considerable time and expense by TomTom and are confidential to and a trade secret of TomTom and/or third parties. You agree to maintain the Services in strict confidence and not to disclose or provide access thereto to any person.

5) THIRD PARTY SOFTWARE LICENSES: The Services may make use of third party software. Notwithstanding Clauses 2, 3 and 4, use of some third party materials included in the Software may be subject to other terms and conditions. The official copyright notices and specific license conditions of these third party software codes and algorithms are to be found via <http://www.tomtom.com>. You hereby agree to the terms and conditions for such third party software.

6) LIMITED WARRANTY:

a) YOU ACKNOWLEDGE THAT THE SERVICES HAVE NOT BEEN DEVELOPED TO MEET YOUR INDIVIDUAL REQUIREMENTS AND THAT IT IS THEREFORE YOUR RESPONSIBILITY TO ENSURE THAT THE FACILITIES AND FUNCTIONS OF THE SERVICES MEET YOUR REQUIREMENTS. TOMTOM DOES NOT AND CANNOT WARRANT THAT THE SERVICES OPERATE UNINTERRUPTED OR ERROR-FREE. YOU SHOULD BE PARTICULARLY AWARE OF THE FACT THAT CALCULATION ERRORS MAY OCCUR WHEN USING SOFTWARE IN A NAVIGATION SYSTEM FOR INSTANCE CAUSED BY LOCAL ENVIRONMENTAL CONDITIONS AND/OR INCOMPLETE DATA. TOMTOM DOES NOT WARRANT THAT THE SERVICES ARE CAPABLE OF INTEROPERATING WITH ANY OTHER SYSTEM, DEVICE OR PRODUCT (E.G. SOFTWARE OR HARDWARE).

b) TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, TOMTOM AND ITS SUPPLIERS PROVIDE THE SERVICES "AS IS AND WITH ALL FAULTS", AND HEREBY DISCLAIM ALL OTHER WARRANTIES AND CONDITIONS, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, ANY (IF ANY) IMPLIED WARRANTIES, DUTIES OR CONDITIONS OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY OR COMPLETENESS OF RESPONSES, OF RESULTS, WITH REGARD TO THE SERVICES, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE SERVICES OR OTHERWISE ARISING OUT OF THE USE OF THE SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF QUIET ENJOYMENT, QUIET POSSESSION, OR NON-INFRINGEMENT WITH REGARD TO THE SERVICES.

c) TOMTOM DRAWS YOUR ATTENTION TO THE FACT THAT, WHEN USING THE SERVICES, OBSERVING THE TRAFFIC REGULATIONS AND RULES (E.G. USE OF OBLIGATORY AND/OR REASONABLE AND SUITABLE SECURITY MEASURES, PROPER AND GENERALLY EXPECTED CARE AND ATTENTION IN THE GIVEN SITUATION, AND SPECIAL CARE AND ATTENTION DUE TO THE USE OF THE SERVICES) IS YOUR EXCLUSIVE RESPONSIBILITY. TOMTOM SHALL NOT ASSUME (AND HEREBY EXPRESSLY DISCLAIMS) ANY RESPONSIBILITY FOR ANY DAMAGES OCCURRED IN RELATION TO THE USE OF THE SERVICES IN A MOTOR VEHICLE.

7) LIMITATION OF LIABILITY:

a) Neither TomTom nor its suppliers shall be liable (whether in contract, negligence or anything else) to you or to any third party: (i) for any inability to use any third party equipment or access data, loss of or corruption to data, loss of business, loss of profits, loss of revenue and

anticipated savings, business interruption or the like (whether such loss or damage is direct or indirect); or (ii) for any indirect, incidental, consequential loss or damage whatsoever, in each case, arising out of the use of or inability to use the Services even if TomTom has been advised of the possibility of such loss or damages.

b) Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of TomTom and any of its suppliers arising from or related to this EULA shall be limited to the amount actually paid by you for the Services in the six months prior to any claim or series of related claims.

c) Notwithstanding clauses 7(a) and (b), or anything else contained in this EULA, nothing shall exclude TomTom's liability for death or personal injury resulting from its negligence, willful or grossly negligent mis-conduct, fraud or fraudulent misrepresentation or for any other liability that cannot be excluded by applicable law.

8) TERMINATION: Without prejudice to any other rights, TomTom may immediately terminate this EULA if you fail to comply with any of its terms and conditions. The provisions of this Agreement, which by their nature are intended to survive termination, will remain in effect after termination of this EULA. TomTom reserves the right, with or without notice, to discontinue update, upgrade and supplement services provided to you or made available to you through the use of the Services.

9) LINKS TO THIRD PARTY SITES: TomTom and other third parties involved in making the Services available to you ("Third Parties") are not responsible for the contents of any third-party sites or services, any links contained in third-party sites or services, or any changes or updates to third-party sites or services which are delivered by the Services or otherwise. TomTom (and, as applicable, each of the Third Parties) is providing these links and access to third-party sites and services to you only as a convenience, and the inclusion of any link or access does not imply an endorsement by TomTom or any Third Parties of the third-party site or service. Any use by you of such links or third party sites and the manner in which you use such third party sites and links shall be your responsibility and at your risk and you shall not use them in any illegal or fraudulent manner.

10) THIRD PARTY RIGHTS: A party which is not a party to this EULA has no rights under applicable legislation in relation to the rights of third parties to rely upon or enforce any term of this EULA but that does not affect any right or remedy of a third party which exists or is available apart from such applicable legislation.

11) ENTIRE AGREEMENT: This EULA (including any addendum or amendment to it which may be supplied with the Services and any other terms and conditions, if applicable, is the entire agreement between you and TomTom relating to the Services and they supersede all prior or contemporaneous oral or written communications, proposals and representations with respect to the Services or any other subject matter covered by this EULA. To the extent that the terms of any TomTom policies conflict with the terms of this EULA, the terms of this EULA shall govern. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

12) TRANSLATIONS: The English version of this EULA is the controlling version. Any translations are provided for convenience only.

13) GOVERNING LAW: This EULA and any disputes arising under or in connection with this EULA (including any non-contractual claims or disputes) are subject to Dutch law. The United Nations Convention on Contracts for the International Sales of Goods is hereby excluded from application to this EULA. All disputes arising out of this EULA (including any non-contractual claims or disputes) shall be settled by the courts of Amsterdam (The Netherlands), which will have exclusive jurisdiction in respect of any such disputes.

Should you have any questions concerning this EULA, or if you desire to contact TomTom for any reason, please visit TomTom's website at <http://www.tomtom.com>.

END-USER TERMS

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 1987-2019* HERE. All rights reserved. *original publication date

This data includes information taken with permission from Canadian authorities, including © Her Majesty, © Queen's Printer for Ontario, © Canada Post, GeoBase®, © Department of Natural Resources Canada. All rights reserved.

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2012*. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4. *original publication date

Fuente: INEGI (Instituto Nacional de Estadística y Geografía), Red Nacional De Caminos (RNC) 2014*, Mapa Digital de México, 2015* *original publication date

Terms and Conditions

Personal Use Only. You agree to use this Data together with the vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Notwithstanding the foregoing, You may use the Data for purposes of Your business operations. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You shall not export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such export laws, rules or regulations prohibit HERE from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of The State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of The State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, the Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with the End-User Terms, and each copy of the Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

NOTICE OF USE
CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: HERE
CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS:
c/o Nokia 425 West Randolph Street, Chicago, Illinois 60606
This Data is a commercial item as defined in FAR 2.101 and is subject to the End-User Terms under which this Data was provided.
© 1987-2019* HERE. All rights reserved. *original publication date

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify HERE prior to seeking additional or alternative rights in the Data

END USER NOTICE

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by Infogroup Inc. ("Infogroup"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the Infogroup POI Data shall be retained by Infogroup.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOGROUP MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of Liability

EITHER INFOGROUP OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

End User's use of the Brand Icon Licensed Product and any portion thereof, is limited to use solely for the purpose of enhancing the value and/or use of the spatial vector data furnished or made by TomTom. Notwithstanding anything to the contrary herein, or in any attachment or exhibit hereto, in no event shall End User use the Brand Icon Licensed Product or any portion thereof in connection with or in conjunction with spatial street vector data furnished or made by a party other than TomTom. End User may only use the icons, brand names, logos, trademarks or other features within (and not separate from) the map data in any collateral, marketing and product packaging. In addition, End shall not modify or alter the color, shape, size, and orientation of the Brand Icon Licensed Product as provided to End User without TomTom's prior written approval.

Licensee agrees that the use of Brand Icon Licensed Product subject to the terms and conditions set forth in this Agreement and that there may be additional third party terms, conditions and restrictions to which the use of the Brand Icon Licensed Product will be subject provided to the End User from time to time by TomTom in the Release Notes applicable to the Licensed Products.

Certification

Gracenote, the Gracenote logo and logotype, "Powered by Gracenote" and Gracenote MusicID are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.



Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. **YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present Gracenote

► For U.S. owners

I. Clear Channel Disclaimers

"Total Traffic Network, a division of Clear Channel Broadcasting, Inc., owns or holds the rights to the traffic, news, sports, weather, stocks and other data (the "TOTAL TRAFFIC-HD+ Data") and TOTAL TRAFFIC-HD+ network through which it is delivered, together the "TTN Service". Use of the TTN Service is subject to the terms of these Device End User Terms.

"The TTN Service is informational only. User assumes all risk of use. Total Traffic Network and its suppliers and licensors make no representations about the accuracy or timeliness of any of the TOTAL TRAFFIC-HD+ Data, including traffic and road conditions, route usability, or speed."

"TOTAL TRAFFIC-HD+ NETWORK DATA IS PROVIDED "AS IS," AND "WHERE IS". TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS EXPRESSLY DISCLAIM ALL WARRANTIES WITH RESPECT TO THE DATA (INCLUDING, WITHOUT LIMITATION, THAT THE DATA WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE."

"TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER LEGAL THEORY."

II. The Weather Channel's (TWC's) Disclaimers

THE FOLLOWING TERMS APPLY TO THE USE OF ANY MATERIAL, DATA OR INFORMATION PROVIDED BY THE WEATHER CHANNEL, LLC ("THE WEATHER CHANNEL"), INCLUDING WEATHER-RELATED INFORMATION AND REPORTS, OBTAINED BY YOU OR OTHERS THROUGH THE TTN SERVICE ("THE WC DATA").

DISCLAIMER OF WARRANTIES.

YOUR USE OF THE WC DATA IS AT YOUR SOLE RISK. THE WC DATA IS PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. THE WEATHER CHANNEL EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT.

THE WEATHER CHANNEL MAKES NO REPRESENTATION OR WARRANTY THAT (i) THE WC DATA WILL MEET YOUR REQUIREMENTS, (ii) THE WC DATA WILL BE UNINTERRUPTED, TIMELY, SECURE, OR ERROR-FREE, (iii) THE RESULTS THAT MAY BE OBTAINED FROM THE USE OF THE WC DATA WILL BE ACCURATE OR RELIABLE, OR (iv) ANY ERRORS OR BUGS IN THE WC DATA WILL BE CORRECTED. ACCORDINGLY, THE WEATHER CHANNEL SHALL NOT BE RESPONSIBLE OR LIABLE FOR THE ACCURACY, USEFULNESS OR AVAILABILITY OF THE WC DATA.

LIMITATION OF LIABILITY.

YOU EXPRESSLY UNDERSTAND AND AGREE THAT THE WEATHER CHANNEL, ITS SUPPLIERS, ITS LICENSORS AND ITS AFFILIATE COMPANIES SHALL NOT BE LIABLE, UNDER ANY LEGAL THEORY, INCLUDING CONTRACT, TORT, NEGLIGENCE OR STRICT LIABILITY, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, CONSEQUENTIAL OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, GOODWILL, USE, DATA OR OTHER INTANGIBLE LOSSES (EVEN IF THE WEATHER CHANNEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES), RESULTING FROM OR ARISING OUT OF YOUR USE OF, OR YOUR INABILITY TO USE, THE WC DATA, THIS AGREEMENT, OR ANY OTHER MATTER RELATING TO THE WC DATA. YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY DISPUTE WITH THE WEATHER CHANNEL RELATED TO THE WC DATA OR CONTENT SHALL BE CANCELLATION OF RECEIPT OF THE WC DATA.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► U.S.A.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to User - Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

► U.S.A.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body in normal use position.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: BABFT0048A

► Canada

IC: 2024B-FT0048A

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ATTENTION: l'exposition aux rayonnements radiofréquence

– Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.