



2024

**LX600**

MULTIMEDIA OWNER'S MANUAL



©2023 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

<b>Basic operation</b>	Basic operation of multimedia system	1
<b>Settings and registration</b>	Registering and setting various features	2
<b>Connecting a smartphone or communication device</b>	Using Bluetooth® or Wi-Fi®	3
<b>Navigation</b>	Operating the map screen Searching the map Activating the route guidance	4
<b>Audio system</b>	Listening to the radio Enjoying music	5
<b>Rear Seat Entertainment System</b>	Listening to the radio and music in the rear seats	6
<b>Hands-free calls</b>	For hands-free cellular phone use	7
<b>Connected Services</b>	Operating the connected services	8
<b>Appendix</b>	Reference Information Certification and trademark information	9
<b>Index</b>	Search alphabetically	

**Introduction**

For your information..... **8**  
 Reading this manual ..... **11**  
 Pictorial index ..... **13**

**1 Basic operation**

**1-1. Basic operation of multimedia system**

Display and control..... **17**  
 Outline of multimedia screen ..... **19**  
 Main menu ..... **20**  
 Status icons ..... **21**  
 Operating the touch screen..... **23**  
 Basic screen function..... **26**  
 Entering letters and numbers.... **28**

**1-2. Basic operation of navigation system**

Map screen overview ..... **29**  
 Operating the map screen ..... **30**

**1-3. Basic operation of audio system**

Audio system ON/OFF and volume adjustment..... **33**  
 Changing the audio source..... **34**  
 Connecting to the USB port..... **35**

**1-4. Basic operations of the Rear Seat Entertainment System**

Rear Seat Entertainment System functions and operations..... **36**  
 Operating the Rear Seat Entertainment System..... **39**  
 Operating the Rear Seat Entertainment System on the rear multi-operation panel..... **40**

Turning the Rear Seat Entertainment System on or off..... **42**

Turning off the Rear Seat Entertainment System screen to output audio only..... **43**

Adjusting the angle of the rear seat display..... **44**

Connecting an HDMI device to the Rear Seat Entertainment System (5-passenger/7-passenger)..... **46**

Connecting an HDMI device to the Rear Seat Entertainment System (4-passenger)..... **47**

Changing the source of the Rear Seat Entertainment System ..... **48**

Adjust the volume of the Rear Seat Entertainment System..... **50**

Switching the audio output mode of the Rear Seat Entertainment System..... **51**

Using headphones (5-passenger/7-passenger) ..... **52**

Using headphones (4-passenger)..... **53**

Operating the Rear Seat Entertainment System from the front seat audio system ..... **54**

**1-5. Intelligent Assistant**

Using the Intelligent Assistant system..... **55**

Starting voice control ..... **57**

Speaking a voice command ..... **59**

Using the search function..... **63**

## 2 Settings and registration

### 2-1. Multimedia system initial setup

Registering a driver..... **67**

### 2-2. Various settings

Changing the various settings.... **72**

### 2-3. Driver settings

Changing and registering a driver ..... **74**

Setting up how to identify a driver ..... **76**

### 2-4. General settings

Changing general multimedia system settings ..... **78**

### 2-5. Notification settings

Notifications settings ..... **80**

### 2-6. Screen settings

Changing the screen display settings ..... **81**

### 2-7. Voice control settings

Changing the voice control settings ..... **83**

### 2-8. Vehicle settings

Setting dealer information ..... **84**

Changing the security settings ..... **85**

Updating and checking the software information..... **87**

### 2-9. Navigation system settings

Displaying the navigation system settings screen..... **92**

Map details settings screen..... **93**

Route options..... **95**

### 2-10. Sound and media settings

Changing sound and media settings ..... **96**

### 2-11. Wi-Fi® Settings

Changing Wi-Fi® settings ..... **100**

Setting Wi-Fi® Hotspot..... **102**

### 2-12. Bluetooth® Settings

Setting Bluetooth® devices..... **104**

### 2-13. Rear seat entertainment system settings

Changing the screen settings of the rear seat entertainment system..... **107**

Adjusting the image quality of the video and image source during playback on the Rear Seat Entertainment System... **108**

Switching the screen mode of the Rear Seat Entertainment System ..... **109**

Using the audio read aloud function ..... **110**

Changing the rear seat HDMI settings on the Rear Seat Entertainment System..... **112**

Checking the Rear Seat Entertainment System license information..... **114**

### 2-14. Apps settings

Apps settings..... **115**

## 3 Connecting a smartphone or communication device

### 3-1. Using the Bluetooth® function

Precautions when using Bluetooth® devices..... **118**

Bluetooth® specifications and compatible profiles ..... 121

Registering a Bluetooth® device from the multimedia system ..... 122

Deleting a registered Bluetooth® device ..... 125

Connecting with a Bluetooth® device ..... 126

Setting a Bluetooth® device as a primary device ..... 130

Setting a Bluetooth® device as a secondary device ..... 131

**3-2. Connecting to a Wi-Fi® network**

Precautions when using Wi-Fi® devices ..... 132

Connecting to a network using Wi-Fi® ..... 134

Establishing a connection to Wi-Fi® Hotspot ..... 137

**3-3. Using Apple CarPlay and Android Auto**

Precautions when using Apple CarPlay and Android Auto ..... 140

Using Apple CarPlay with an unregistered smartphone ..... 143

Using Apple CarPlay with a registered smartphone ..... 146

Using Android Auto with an unregistered smartphone ..... 149

Using Android Auto with a registered smartphone ..... 152

When Apple CarPlay or Android Auto might be malfunctioning ..... 155

**4 Navigation**

**4-1. Navigation**

Navigation function ..... 160

**4-2. Map information**

Map options screen ..... 161

Information displayed on the map screen ..... 162

**4-3. Searching for a destination**

Destination search screen ..... 163

Destination search result list screen ..... 167

POI suggestion ..... 168

Destination Assist ..... 169

**4-4. Starting route guidance**

Starting route guidance ..... 171

Full route map screen ..... 172

**4-5. Route guidance screen**

Route guidance screen ..... 174

Typical voice guidance prompts ..... 178

**5 Audio system**

**5-1. Radio operation**

Listening to the radio ..... 180

Troubleshooting guide ..... 183

Refer to the table below to identify the problem and take the suggested corrective action ..... 184

Handling the radio antenna ..... 185

**5-2. USB flash drive operation**

Precautions for playback of USB flash drive ..... 186

Playing music files on a USB  
flash drive..... **188**

### **5-3. iPod/iPhone operation**

Precautions for playback of  
iPod/iPhone ..... **190**

Playing iPod/iPhone..... **191**

### **5-4. Apple CarPlay operation**

Precautions for playback of  
Apple CarPlay ..... **193**

Playing Apple CarPlay ..... **194**

### **5-5. Android Auto operation**

Precautions for playback of  
Android Auto..... **196**

Playing Android Auto..... **197**

### **5-6. Bluetooth® audio operation**

Precautions for Bluetooth®  
audio playback ..... **199**

Playing Bluetooth® audio ..... **200**

### **5-7. Integrated Streaming**

Playing Integrated Streaming. **202**

**6**

## **Rear Seat Entertainment System**

### **6-1. Operating the radio on the Rear Seat Entertainment System**

Listening to the radio on the  
Rear Seat Entertainment  
System ..... **206**

Listening to SiriusXM® Satel-  
lite Radio on the Rear Seat  
Entertainment System..... **207**

### **6-2. Operating USB connected media on the Rear Seat Entertainment System**

Playing music files from a USB  
flash drive on the Rear Seat  
Entertainment System..... **209**

Playing music files from an  
iPod or iPhone on the Rear  
Seat Entertainment System.... **211**

### **6-3. Operating smartphone music on the Rear Seat Entertainment System**

Playing music from Apple  
CarPlay on the Rear Seat  
Entertainment System..... **213**

Playing music from Android  
Auto on the Rear Seat En-  
tertainment System..... **215**

### **6-4. Operating Bluetooth® audio on the Rear Seat Entertainment System**

Playing music from a Blue-  
tooth® connected device on  
the Rear Seat Entertainment  
System ..... **217**

### **6-5. Operating an HDMI connected device on the Rear Seat Entertainment System**

Playing rear seat HDMI me-  
dia on the Rear Seat Enter-  
tainment System ..... **219**

### **6-6. Operating a Miracast® connected device on the Rear Seat Entertainment System**

Precautions for using Mira-  
cast® in the rear seat..... **220**

Connecting to Miracast® in  
the rear seat..... **221**

Playing rear seat Miracast®  
on the Rear Seat Entertain-  
ment System..... **222**

Disconnecting Miracast® in  
the rear seat..... **223**

**6-7. Operating Integrated Streaming on the Rear Seat Entertainment System**

Playing Integrated Streaming on the Rear Seat Entertainment System..... **224**

**7 Hands-free calls**

**7-1. Precautions when using hands-free calls**

Precautions for hands-free calling..... **226**

Precautions when selling or disposing of the vehicle ..... **229**

When hands-free calling might be malfunctioning ..... **230**

**7-2. Operating hands-free calls with the steering switches**

Operating with the steering switches ..... **234**

**7-3. How to make calls**

Making calls from call history. **236**

Making calls from the favorites list..... **237**

Making calls from contacts..... **238**

Making calls from keypad ..... **239**

**7-4. How to receive calls**

Answering calls..... **240**

Declining calls..... **241**

**7-5. In-call operations**

Performing operations from the call screen..... **242**

Answering a second call ..... **244**

Making a call to another party during an ongoing call..... **245**

Making conference calls..... **246**

Ending calls..... **247**

**7-6. Changing phones for hands-free calls**

Switching phones for hands-free calls..... **248**

**7-7. Editing contact data**

Transferring contact data..... **249**

**7-8. How to use the message function**

Precautions when using the message function..... **251**

Making calls from the message function..... **255**

**8 Connected Services**

**8-1. Connected Services overview**

Functional overview..... **258**

Type A: Function achieved by using DCM and the system.. **259**

Type B: Function achieved by using DCM ..... **260**

Type C: Function achieved by using DCM and a smart phone..... **261**

**9 Appendix**

**9-1. Appendix**

Information about media and data that can be used in the audio system..... **264**

Information about HD Radio™/SiriusXM Radio ..... **274**

Information on media and data that can be used on the Rear Seat Entertainment System ..... **277**

Certification and trademark information..... **278**

**Index.....285**

### For your information

#### Multimedia owner's manual

- This manual describes the operation of the multimedia system. Please read this manual and the separate "OWNER'S MANUAL" carefully to ensure proper use.
- Please be aware that the content of this manual may be different from the system in some cases, such as due to software updates and changes to specifications.
- This manual contains information related to system software Ver.1040 and earlier. For the latest information, refer to the following URL. Before using this system, be sure to read the information relating to the latest software version. Refer to "Updating and checking the software information" (→ P.87) for the software version of the multimedia system.

Depending on the country or area, the software update service may not be available.

#### ► U.S.A.

- URL:

<https://drivers.lexus.com/lexusdrivers/resources/owners-manuals/manual?om=om60v77u.lx.2024.2310.cv.mm>

- QR Code:



#### ► Canada

- URL:

<https://www.lexus.ca/lexus/know-your-lexus/manual?om=om60v77u.lx.2024.2310.cv.mm>

- QR Code:



- The screens shown in this manual may differ from the actual screen of the system depending on availability of functions, subscription status, and map data available at the time this manual was produced.
- The company names and products listed in this manual are trademarks and/or registered trademarks of their respective companies.

### **Disclaimer about data compensation**

This system saves data onto the internal memory. Data saved in the memory may become corrupted or lost due to system failure, repair, malfunction, bugs, or other causes.

Please note that Toyota takes no responsibility whatsoever for direct and/or indirect damage, and offers no compensation for data if the data that was saved in the internal memory could not be saved properly.

### **About battery disconnection**

The multimedia system saves various data in the multimedia system every time the engine switch is turned off. If the battery terminal is disconnected before the data saving is complete, the data may not be saved correctly.

### **For safe use**

To use this system in the safest possible manner, follow all the safety tips shown below.

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of the vehicle and the safety of your passengers. Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

Do not use in a manner that impairs safe driving. Drive safely by always following the traffic rules while driving.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect or delayed guidance, or no voice guidance at all.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

### **WARNING**

- For safety, the driver should not operate the system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions.


## Reading this manual

Explains symbols used in this manual.


## Symbols in this manual

Symbols	Meanings
	<b>WARNING</b> : Explains something that, if not obeyed, could cause death or serious injury to people.
	<b>NOTICE</b> : Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.
1 2 3...	Indicates operating or working procedures.
	<b>INFORMATION</b> : Explains something other than descriptions about operation methods and functions that you should know and are useful to know.

## Symbols in illustrations

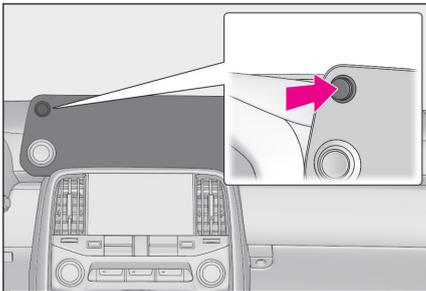


Symbols	Meanings
	Indicates the action (pushing, turning, etc.) used to operate buttons and other devices.

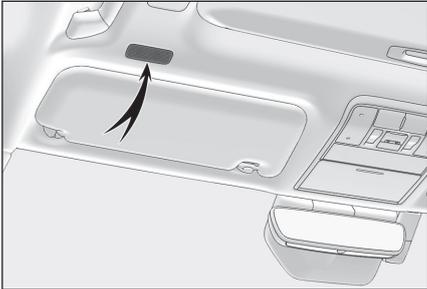

Symbols	Meanings
	Indicates the component or place being explained.

## Pictorial index

## Instrument panel

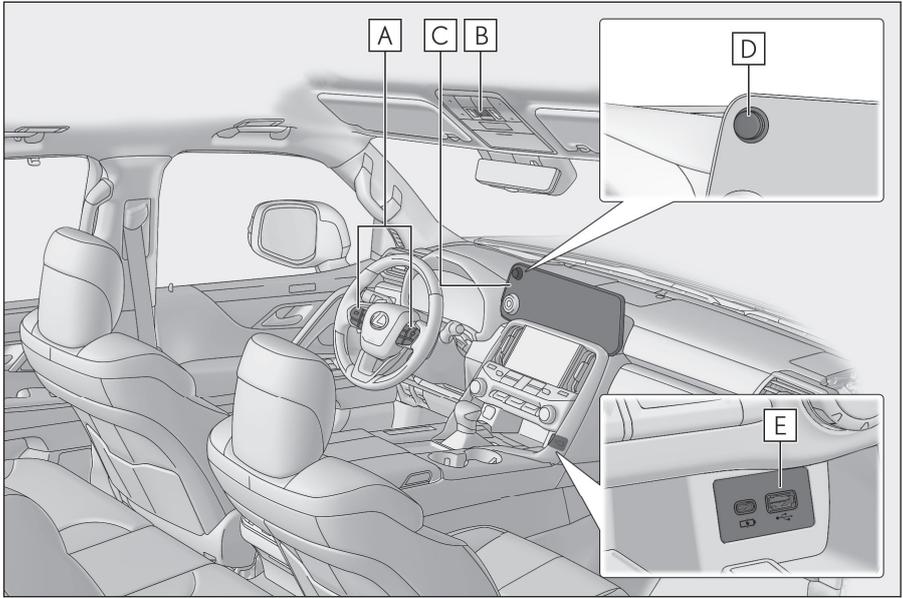**A** Steering wheel switches

Controlling audio .....	P.34
Using voice command .....	P.57
Making a phone call .....	P.234

**B** SOS button \*1

<b>C</b> Display .....	P.17
------------------------	------

<b>D</b> [PWR • VOL] knob .....	P.33
---------------------------------	------

<b>E</b> USB port .....	P.35
-------------------------	------

\*1: Refer to the separate "OWNER'S MANUAL".



## 1-1. Basic operation of multimedia system

Display and control.....	17
Outline of multimedia screen.....	19
Main menu .....	20
Status icons .....	21
Operating the touch screen ..	23
Basic screen function.....	26
Entering letters and numbers.....	28

## 1-2. Basic operation of navigation system

Map screen overview .....	29
Operating the map screen.....	30

## 1-3. Basic operation of audio system

Audio system ON/OFF and volume adjustment.....	33
Changing the audio source ...	34
Connecting to the USB port ..	35

## 1-4. Basic operations of the Rear Seat Entertainment System

Rear Seat Entertainment System functions and operations.....	36
Operating the Rear Seat Entertainment System.....	39
Operating the Rear Seat Entertainment System on the rear multi-operation panel .....	40

Turning the Rear Seat Entertainment System on or off .....	42
--	----

Turning off the Rear Seat Entertainment System screen to output audio only .....	43
--	----

Adjusting the angle of the rear seat display .....	44
--	----

Connecting an HDMI device to the Rear Seat Entertainment System (5-passenger/7-passenger).....	46
--	----

Connecting an HDMI device to the Rear Seat Entertainment System (4-passenger).....	47
--	----

Changing the source of the Rear Seat Entertainment System.....	48
--	----

Adjust the volume of the Rear Seat Entertainment System.....	50
--	----

Switching the audio output mode of the Rear Seat Entertainment System.....	51
--	----

Using headphones (5-passenger/7-passenger).....	52
---	----

Using headphones (4-passenger).....	53
-------------------------------------	----


Operating the Rear Seat Entertainment System from the front seat audio system.....	54
--	----

---

## 1-5. Intelligent Assistant

Using the Intelligent Assistant system.....	55
Starting voice control .....	57
Speaking a voice command...	59
Using the search function .....	63

## Display and control

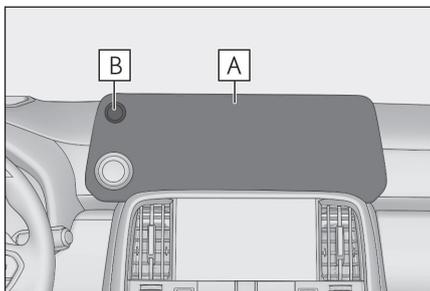

### A Display

Operate the touch screen by directly touching it.

### B [PWR·VOL] knob

Turns the audio on/off and adjusts the volume.

### INFORMATION

- The LCD screen may appear washed out or dark depending on the surrounding environment or angle it is viewed.
- The screen may be difficult to see if sunlight or other external light hits the screen.
- The screen may appear dark or hard to see if you wear polarized sunglasses.

### WARNING

For safety, the driver should operate the display as little as possible while driving and should stop the vehicle to operate the display. Operating the display while driving is dangerous such as mistakenly turning the steering wheel or other unforeseen accidents. Additionally, look at the display only as necessary and as briefly as possible when driving the vehicle.

### NOTICE

Do not use for extended periods when the engine is stopped. Doing so may cause the battery to run down.


## Restarting the system

When the system response is extremely slow, you can restart the system.

## 1-1. Basic operation of multimedia system

---

- Press and hold the [PWR · VOL] knob for 3 sec. or more.

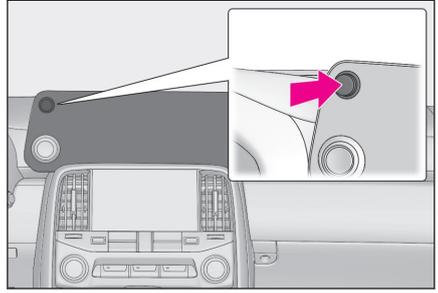

## Outline of multimedia screen



### A Main menu

The function displayed on the screen can be switched by selecting an icon.

### B Microphone button

Displays the voice control screen, enabling various functions such as the navigation and audio to be operated by voice. The button will change depending on the situation.



: While driving



: When stopped

### C Status icons

Icons for information such as the time and communication status are displayed.

---

### Related Links

[Main menu\(P. 20\)](#)


[Starting voice control\(P. 57\)](#)

[Status icons\(P. 21\)](#)

## 1-1. Basic operation of multimedia system

### Main menu

The function to be displayed on the screen can be changed by touching an icon.

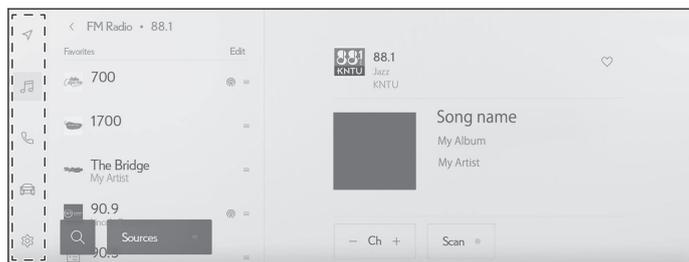

[] : Apple CarPlay®

Displays the Apple CarPlay screen.

[] : Android Auto™

Displays the Android Auto screen.

[] : Navigation system

Displays the map screen. The navigation system can be operated to search for a destination or perform other navigation system-related tasks.

[] : Audio

Displays the audio control screen. The desired source can be selected to play audio.

[] : Phone

Displays the phone screen. A cellular phone connected via Bluetooth® can be used to make hands-free phone calls.

[] : Vehicle information\*1

Displays the vehicle information screen. Vehicle information such as fuel consumption can be displayed and vehicle equipment settings can be made.

[] : Settings


Displays the settings screen. Multimedia system and vehicle settings can be changed.

#### INFORMATION

The Apple CarPlay/Android Auto icons are displayed when a supported device connects to the system and the applicable function is enabled.

## Status icons

The time and icons with information about communication statuses are displayed at the top of the screen.

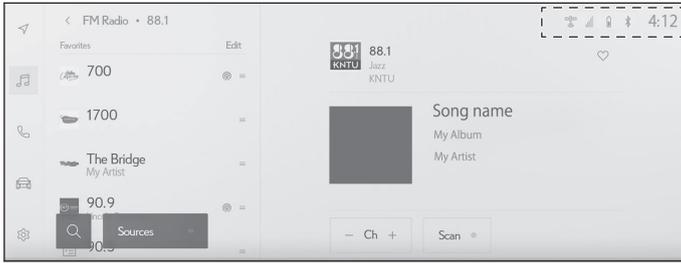

[ 4:12 ]

Displays the current time. Touching the clock displays the date and time settings screen.

[ Bluetooth ]

Displays the connection status of the cellular phone connected via Bluetooth<sup>®</sup>. Touching the icon displays the Bluetooth<sup>®</sup> settings screen.

[ Cellular Signal ]

Displays the reception level of the connected cellular phone.

[ Battery ]

Displays the remaining battery charge of the connected cellular phone.

[ DCM ]

Displays the reception status of the Data Communication Module (DCM). (This function is not available in some countries or areas.)

[ Wi-Fi ]

Displays the Wi-Fi<sup>®</sup> reception level.

[ Wi-Fi Hotspot ]

Displays the reception status of the Wi-Fi<sup>®</sup> Hotspot. (This function is not available in some countries or areas.)

[ Parking Assist ]

Displayed when the intuitive parking assist is operating.\*1

\*1: Refer to the separate "OWNER'S MANUAL".



Displayed when a hands-free call was made while a screen other than the phone screen was being displayed.



Displayed if the wireless charger is equipped.

### INFORMATION

- The displayed remaining battery charge for the cellular phone may not match the display on the cellular phone. Additionally, the remaining battery charge may not be able to be displayed depending on the phone model.
- You may not be able to use Wi-Fi<sup>®</sup> if the reception level is poor.
- If you use your cellular phone at places or states like the following, you may not be able to connect via Bluetooth<sup>®</sup>:
  - The cellular phone is behind or under a seat, or inside the glove box or console box
  - The cellular phone is touching or covered with metallic materials
- If the cellular phone is set to power saving mode, the Bluetooth<sup>®</sup> connection may automatically be disconnected. If that happens, disable power saving mode on the cellular phone.

---

### Related Links

[Changing general multimedia system settings\(P. 78\)](#)

[Setting Bluetooth<sup>®</sup> devices\(P. 104\)](#)


\*1: If equipped

## Operating the touch screen

Operate the touch screen by directly touching it with a finger.


### ■ Touch

Gently touch the screen. You can select items on the screen.

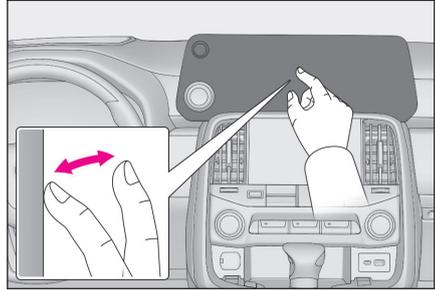


### ■ Drag

Move your finger while it is touching the screen. You can scroll on the list and map screens by the amount that your finger is moved.

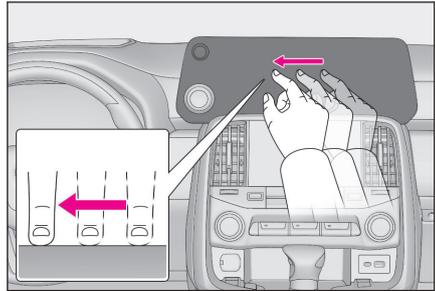

### ■ Flick


Quickly swipe your fingertip that touches the screen. You can largely scroll on the list and map screens.

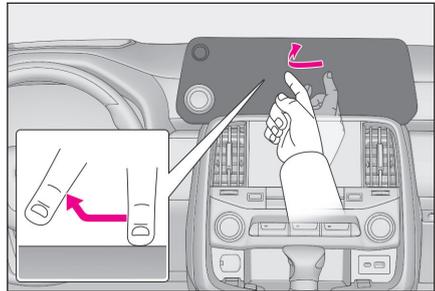

## 1-1. Basic operation of multimedia system

### ■ Pinch in/pinch out

Move two fingers in and out while touching the screen. You can zoom in and out on maps.

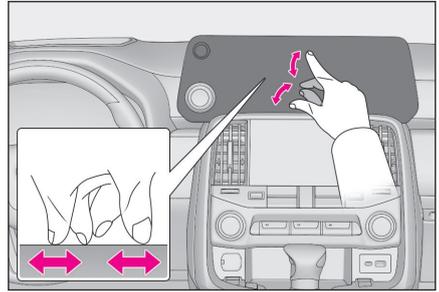

#### □ INFORMATION

- In order to operate some functions, it may be necessary to touch and hold or double tap (touch 2 times quickly) the screen.
- The sensitivity level when touching the screen can be changed.
- Response sound when the screen button is touched can be turned on/off. (→ P.78)
- Flick operations may not work smoothly in high altitude areas.
- Operation of the screen is restricted while driving.

#### — Related Links —

[Changing general multimedia system settings\(P. 78\)](#)

### Notes for operating the touch screen

#### □ INFORMATION

- If there is no response from the buttons on the screen, take your finger off the screen and try again.
- In the following situations, the screen buttons may not respond or malfunction:
  - If a glove is worn
  - If the screen is operated with a fingernail
  - If the screen is being touched with another finger or palm at the same time
  - Dirt or water is on the screen
  - If a plastic film or coating is on the screen
  - If the vehicle is near a TV tower, power plant, filling station, broadcast station, large display, airport, or any other place from which strong radio waves or noise emanates


- When you are carrying or charging a portable wireless communication device, such as a radio or cellular phone, in the vehicle
- If the screen is touched or covered with a metallic object like one of the following, the screen buttons may not respond or malfunction:
  - A card covered in metal such as aluminum foil
  - A cigarette case that uses aluminum foil
  - A wallet, purse, or bag with metallic parts
  - Coins
  - Media, such as CDs and DVDs, a USB cable, etc.
- If your hand is touching the screen when the system starts, the touch screen operations may not respond. Move your hand away from the screen and operate again. If the screen still does not respond, turn the engine switch off and restart the system.
- The Apple CarPlay map application does not support the pinch in/pinch out feature.

 **NOTICE**

- To protect the screen, gently touch the screen with your finger when operating it.
- Do not operate the touch screen with anything other than your finger.
- Gently clean the screen with a glasses cleaning cloth or similar soft cloth. Touching the screen forcibly with your finger or a hard cloth may scratch the surface of the screen.
- Do not use benzine or an alkaline solution to clean the screen. Doing so may damage the screen.
- Under certain conditions, the screen may feel slightly hot. Be careful as if it is touched for a long time, it may cause slight burns.

### Basic screen function

A list screen will be displayed if there are multiple candidates such as settings and audio. Scroll the list to select the desired item.

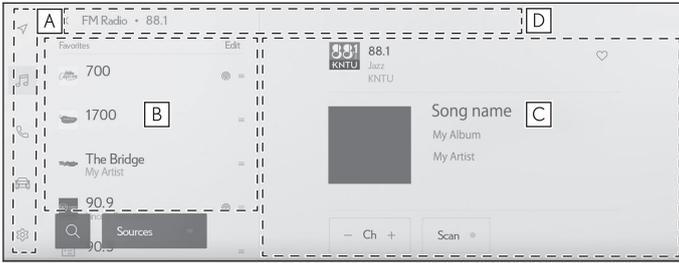

**A** Main menu

Changes the function to be displayed on the screen by touching an icon.

**B** Sub menu

Displays items on a list. Scrolling the list can be done by dragging or flicking the screen.

**C** Main area

Displays detailed information about the item you selected on the sub menu.

**D** Breadcrumb list


Displays screen titles in a hierarchy. Touching [] returns to the previous screen.

#### INFORMATION

Operation of the screen is restricted while driving.

### ■ Searching a list

Touching text in an index displays the desired item from the list.

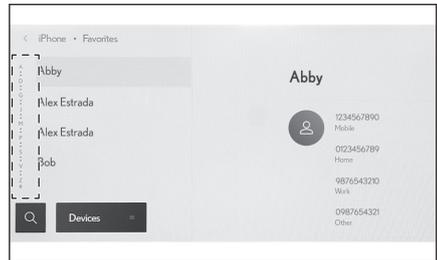


## ■ Turning the settings on or off

Touching an item turns the setting on or off.


[  ] : ON

[  ] : OFF

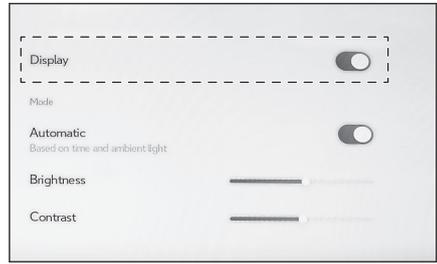

## ■ Multiple setting options

Touching an item that has [  ] to it enables you to select an item from multiple options.

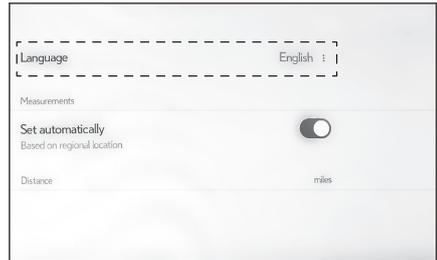

## ■ Adjusting the level

Dragging the slider enables the level of the setting to be adjusted.



## — Related Links —

[Main menu\(P. 20\)](#)

### Entering letters and numbers

Letters and numbers can be entered by using the keyboard. Entering letters displays predictive text.

#### ► Screen example



[✕] : Closes the keyboard and returns to the previous screen.

[✕] : Deletes one character.

[🌐] : Switches the keyboard.

[↕] : Toggles between uppercase and lowercase.

[Go] : Perform search based on input text.

[📄] : Closes the keyboard.

[123] : Changes to the numbers and symbols input mode.

[ABC] : Changes to the alphabetic characters input mode.

#### 📄 INFORMATION

- The displayed keyboard type differs depending on the feature.
- Double tap [↕] to fix the letters to uppercase for input.

## Map screen overview

To display the map screen, touch [  ] on the main menu.



### A Speed limit icon

Displays the speed limit of the road being driven on.

### B North up, heading up or 3D heading up icon

### C Zoom in/out buttons

Touch to increase or reduce the map scale.

### D Map options button

Touch to display the map options screen.

### E Current position icon

Displays the current position and orientation of the vehicle. Touch to display detailed information about the current position. Also, touch to share the current position of the vehicle.

### F Destination search button

Touch to display the destination search screen.

## INFORMATION

[  ] is not displayed for this vehicle.

## Related Links

[Current position\(P. 30\)](#)

[Map scale\(P. 30\)](#)

[Orientation of the map\(P. 30\)](#)

[Map options screen\(P. 161\)](#)

[Destination search result list screen\(P. 167\)](#)

## 1-2. Basic operation of navigation system

### Operating the map screen


This section explains the basic operations relating to the map display, such as the current position display and scrolling the map

#### Current position

Touch [▲] to display detailed information about the current position.

[Share location]: Touch to share the vehicle's current position with a registered contact.

To use this function, a smartphone must be connected to the navigation system.

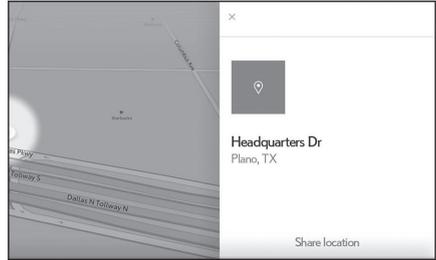

#### Map scale

Touch [ + ] or [ - ] to change the scale of the map screen.



#### INFORMATION

- Pinch out on the screen to zoom in and pinch in to zoom out.
- Double tapping with 1 finger can also be used to zoom in. Double tapping with 2 fingers can be used to zoom out.
- Can also two finger tilt to change to 3D and back to 2D.

#### Orientation of the map

Touch [▲N] to change the orientation of the map screen between north up, heading up, and 3D heading up.

[▲N]: North up icon

The map is always displayed with north up, regardless of the direction travel of the vehicle.

The letter(s) under this symbol indicate the vehicle' heading direction (e.g. N for north).

[]: Heading up icon

The map is always displayed with the direction of travel during an active route navigation.

[]: 3D Heading up icon

The map is always displayed with the direction of travel of the vehicle always up.

## Map scrolling operation

The map can be moved and a touched point can be set as the center of the map screen.

### Related Links

[Operating the touch screen\(P.23\)](#)

## Flick/drag operation

The map screen can be moved by touching, dragging or flicking it.

Touch [**Recenter**] to return to the center of the map to the current position.



## Touch and hold operation

If a desired point on the map screen is touched and held, the full route map screen to the selected point will be displayed.


1 Touch and hold the desired point.



## 1-2. Basic operation of navigation system

---

- 2 Full route map screen will be displayed for the selected point.

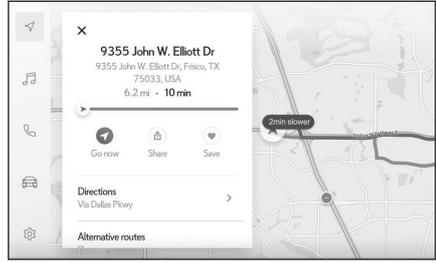

---

### Related Links

[Full route map screen\(P.172\)](#)

## Audio system ON/OFF and volume adjustment

The audio can be turned off when not in use, or the volume can be adjusted to an appropriate level.

The system can be used while the engine switch is in ACC or ON.


### ⚠ NOTICE

- Do not use the audio system for extended periods when the engine is not running. Doing so may cause the battery to run down.
- Listen to the audio at an appropriate volume that will not interfere with safe driving.

### ■ Operating with the audio control knob

#### [PWR · VOL] knob

Turns audio on or off with each press. Turn to adjust the volume.

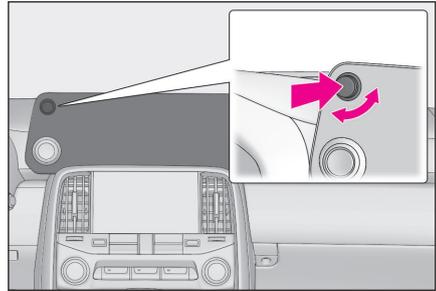

### ■ Operating with the steering switches

#### [+] switch


Turns the volume up.

Press and hold to adjust continuously.

#### [-] switch

Turns the volume down.

Press and hold to adjust continuously.

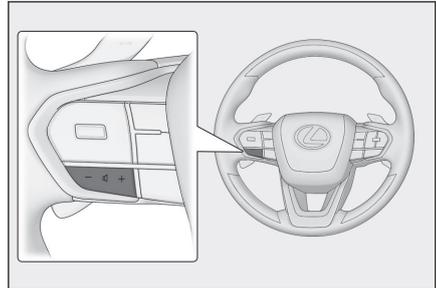

### Changing the audio source

Source can be changed to radio, USB, etc.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch the source you wish to select.



#### INFORMATION


- When no device is connected to the multimedia system, the button does not appear on the source selection screen. (USB/iPod/Apple CarPlay/Android Auto/Bluetooth® Audio)
- If a cellular phone is used inside the vehicle or nearby while listening to audio, noise may be output from the audio speakers.
- The following functions cannot be used while Apple CarPlay is connected via USB.
  - iPod
  - USB audio
- USB audio cannot be used while Android Auto is connected via USB.

### Changing the source with the steering switch

Changing the source with the steering switch is possible.

#### [MODE] switch


The sources will switch in order.  
Press and hold to pause or mute.  
Press and hold again to cancel.

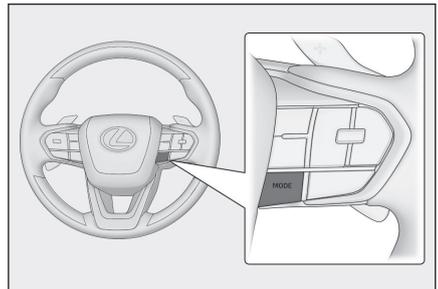

## Connecting to the USB port

Connect a device such as smartphone or portable player.

### ● Connect the USB cable to the port.

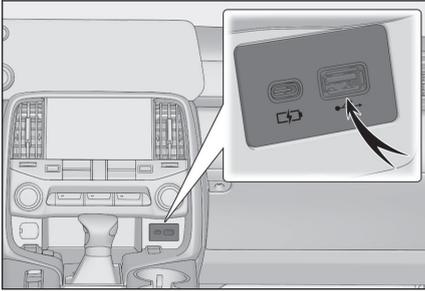

When connecting a USB flash drive, connect it directly to the USB port.

#### INFORMATION

- Viewing may not be possible, depending on your device.
- When a USB hub is used to connect multiple devices, devices other than the first device to be recognized cannot be used.
- Refer to the instruction manual of the USB cable and the device to be connected.
- Use a power source such as the battery supplied with the connected device. Using the accessory socket installed in the vehicle may cause noise output. (Refer to the separate "OWNER'S MANUAL" for details on the accessory socket.)

#### NOTICE


- Do not push down on or subject the connected device to unnecessary pressure. The device or its port may be damaged.
- Keep the port free of foreign matter. The device or its port may be damaged.

## 1-4. Basic operations of the Rear Seat Entertainment System

### Rear Seat Entertainment System functions and operations<sup>\*1</sup>


The Rear Seat Entertainment System enables watching and listening to the same source as the front seat audio system or a different source in the rear seats. Select the source for the left and right rear seat displays.

#### ■ 5-passenger/7-passenger models

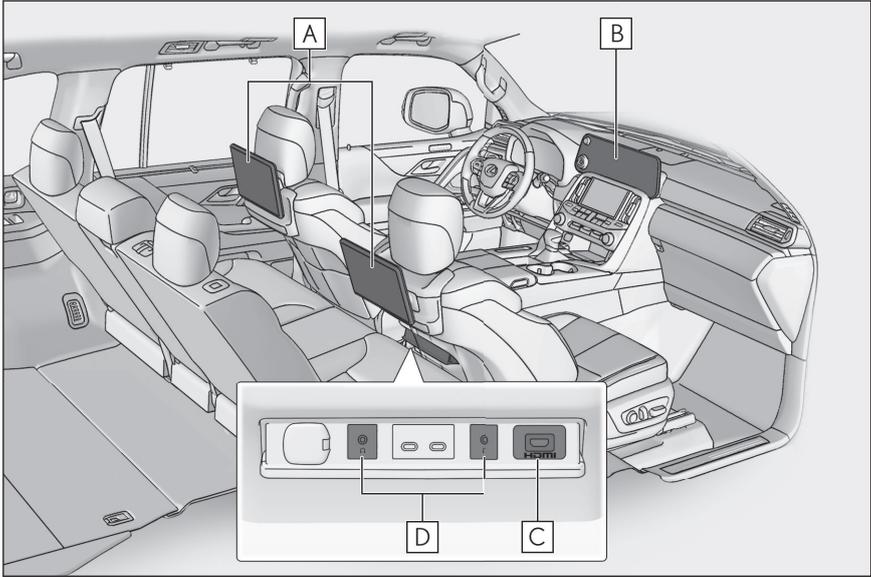

- A Rear seat display
- B Front seat audio system
- C HDMI port
- D Headphone jack

## ■ 4-passenger

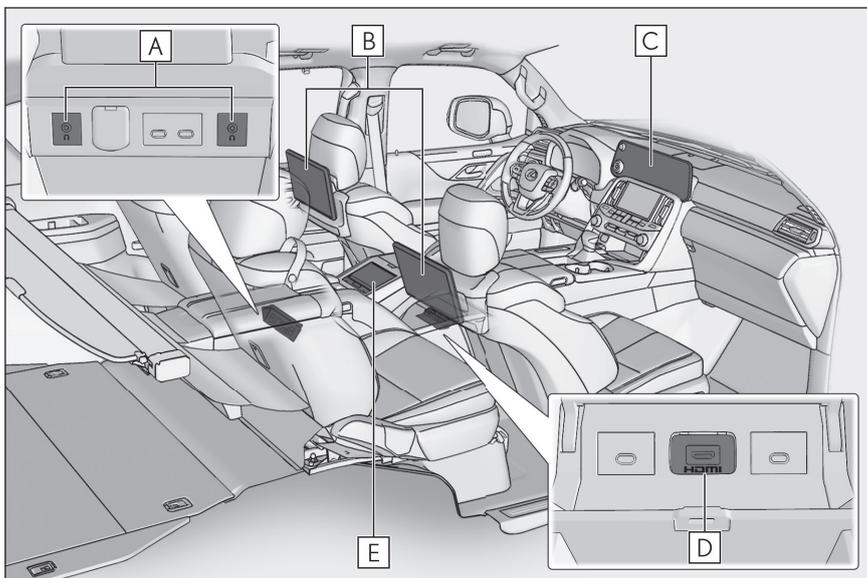

- A Headphone jack
- B Rear seat display
- C Front seat audio system
- D HDMI port
- E Rear multi-operation panel

 **INFORMATION**

- The Rear Seat Entertainment System is available while the engine switch is turned to ACC or ON.
- When the system starts, the warning screen regarding use is displayed for a while.

 **NOTICE**

Clean dirt off the screen by wiping the screen gently with a soft and dry cloth.  
Rough actions such as pressing strongly by hand or using a hard cloth may scratch the surface.

■ **Information about text information display**

There are limits to the number of characters that can be displayed as information on each screen. The system may not be able to display all of the information. In

\*1: If equipped

## 1-4. Basic operations of the Rear Seat Entertainment System

---

addition, there are cases where information is not displayed properly depending on the stored content.

## Operating the Rear Seat Entertainment System

Use the following step to operate the Rear Seat Entertainment System.

### **Touch panel**

Directly touch the screen to operate it.

### **Rear multi-operation panel\*<sup>1</sup>**

Perform operations with the rear multi-operation panel on the rear seat armrest.

---

### **Related Links**

[Operating the Rear Seat Entertainment System on the rear multi-operation panel\(P. 40\)](#)

\*1: If equipped

### Operating the Rear Seat Entertainment System on the rear multi-operation panel<sup>\*1</sup>

Operate the Rear Seat Entertainment System on the rear multi-operation panel located on the rear armrest.

1 Press [  ] on the rear armrest.

The home screen of the rear multi-operation panel is displayed.

2 Select [Audio].

3 Select [Left] or [Right] to select the display to operate.

The Rear Seat Entertainment System operation screen is displayed.

Displayed buttons will vary depending on the source being played.

4 Operate the Rear Seat Entertainment System as necessary.

[Front] : Displays the operation screen of the front seat audio system.

[Left]/[Right] : Select a screen to operate.

[  ] : Turns the Rear Seat Entertainment System on or off.

[Screen] [On/Off] : Turns the rear seat display screen on or off.

[Advanced] : Displays the Rear Seat Entertainment System advanced operation screen.

[Sources] : Select the source.

If the desired source is not displayed on the screen, select [Other] to display the audio source selection screen.

Displayed sources will vary depending on the country or region.

[Display tilt]<sup>\*2</sup> : Adjust the angle of the rear seat display.

[Vol] : Adjusts the speaker volume with [+ ] and [- ].


While the audio output mode is independent mode, this adjusts the volume of the headphones.<sup>\*3</sup>

Audio operation buttons (such as [  ], [  ], [  ]) : Operate the audio source.

Displayed buttons will vary depending on the audio source.

Refer to the operation manual of each source for details on the audio operation buttons.

[  ] : Returns to the home screen.

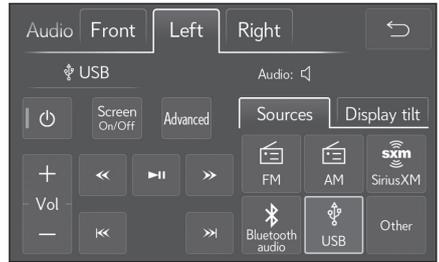

## Operating the Rear Seat Entertainment System on the advanced operation screen

1

Basic operation

### 1 Select [Advanced] on the Rear Seat Entertainment System operation screen.


The Rear Seat Entertainment System advanced operation screen is displayed.

### 2 Operate the Rear Seat Entertainment System as necessary.

[Sources] : Displays the audio source selection screen.

[] : Displays the Rear Seat Entertainment System setting screen.

[Audio output] : Switches the audio output mode.

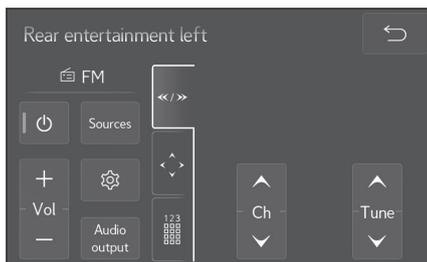

[] : Displays the audio operation screen.\*4

[]/[]\*5 : Displays the cursor key screen.\*4

This is used to operate the buttons shown on the rear seat display.

[] : Displays the numeric keypad or 12-key keypad operation screen.\*4

This is used to enter numbers depending on the content.

\*1: If equipped

\*2: Operation available only on the passenger's side.

\*3: While the audio output mode is in independent mode,  is displayed.

\*4: Displayed buttons will vary depending on the selected source.

\*5: The icon varies depending on the source that can be operated using the Rear Seat Entertainment System.

### Turning the Rear Seat Entertainment System on or off

The Rear Seat Entertainment System can be turned on or off from the front seat or rear seat.

#### ● Perform operations from the front seat audio system

- 1 Displays the audio source selection screen.
- 2 Select **[Rear]**.  
The Rear Seat Entertainment System operation screen is displayed.
- 3 Select **[Power]**.
- 4 Press the ON/OFF switch.

#### ● Perform operations from the rear seat display

- 1 Press the power button on the display you want to operate.  
Switches on or off with each press.

#### ● Perform operations from the rear multi-operation panel\*<sup>1</sup>

- 1 Display the Rear Seat Entertainment System operation screen on the rear multi-operation panel.
  - 2 Select **[Left]** or **[Right]** to select the display to operate.
  - 3 Select .
- Switches on or off each time that it is selected.

\*1: If equipped

## Turning off the Rear Seat Entertainment System screen to output audio only

The Rear Seat Entertainment System screen can be turned off while continuing to output audio.

- 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select [  ] from the main menu.
- Select [  ] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.


- 2 Select [Screen off] from the sub menu.

- 3 Select [Screen off] from the main area.

The Rear Seat Entertainment System screen turns off while continuing to output audio.

To display the screen, perform any of the following operations.

- Directly touch anywhere on the screen.
- Press [SOURCE] on the rear seat display.
- Select [  ] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

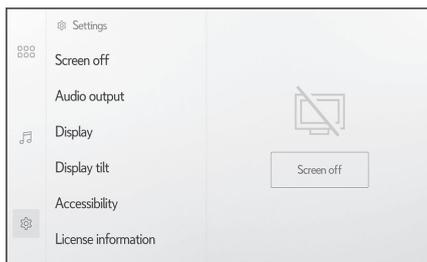


## Turning off the rear seat screen on the rear multi-operation panel\*1

- 1 Display the Rear Seat Entertainment System operation screen on the rear multi-operation panel.
- 2 Select [Left] or [Right] to select the display to operate.
- 3 Select [Screen][On/Off].

The Rear Seat Entertainment System screen turns off while continuing to output audio.

To display the screen, select [Screen][On/Off] again.

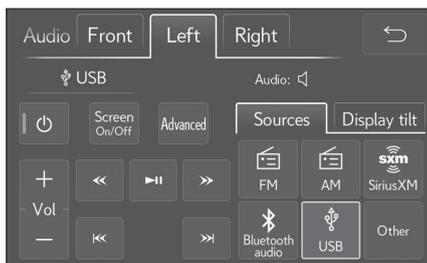

### Adjusting the angle of the rear seat display

Adjust the angle of the screen such as when the screen is difficult to see.

#### **WARNING**

- Take care to prevent your hands from being caught while adjusting the angle of the display. This can cause injury and the display to malfunction.
- When parking in extremely hot temperatures, the display may become hot, and adjusting the angle may result in burns.\*<sup>1</sup>

#### **NOTICE**

Do not move the rear seat display by hand. This can damage the rear seat display.\*<sup>2</sup>

#### ● Perform adjustments manually\*<sup>1</sup>

- 1 Move the display by hand and adjust it to the desired angle.

#### ● Perform operations from the Rear Seat Entertainment System setting screen\*<sup>2</sup>

- 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select [] from the main menu.
- Select [] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.

- 2 Select [**Display tilt**].

The display angle adjustment screen is displayed.

- 3 Select [] or [] to adjust to the desired angle.

#### ● Perform operations from the rear multi-operation panel\*<sup>2</sup>

- 1 Display the Rear Seat Entertainment System operation screen on the rear multi-operation panel.
- 2 Select the passenger seat display.
- 3 Select [**Display tilt**].
- 4 Select [] or [] to adjust to the desired angle.

\*1: If equipped

 **INFORMATION**

- When the passenger seat display is not being used and  is selected while the passenger seat position is extra front<sup>\*3</sup>, the rear seat display folds to almost a horizontal position to improve the forward visibility.

To return to the original position, select  again or return the passenger seat position from extra front<sup>\*3</sup>.

\*1: 5-passenger, 7-passenger or driver's side only in 4-passenger


\*2: Only on passenger side of 4-passenger

\*3: Please refer to the separate "OWNER'S MANUAL" for details on how to adjust the seat position.


### Connecting an HDMI device to the Rear Seat Entertainment System (5-passenger/7-passenger)

Connect a device that supports HDMI output to the Rear Seat Entertainment System.

- 1 Open the lid at the rear end of the front console box.

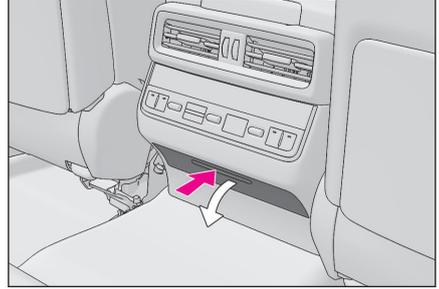

- 2 Connect the HDMI cable to the HDMI port.

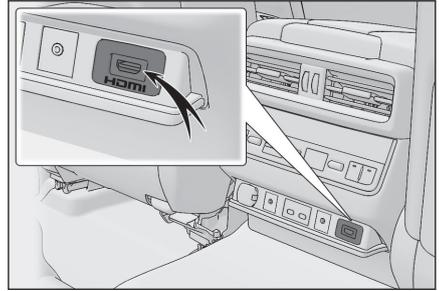

#### INFORMATION

Use a power source such as the battery supplied with the connected device. Using the accessory socket installed in the vehicle may cause noise output.

(Refer to the separate "OWNER'S MANUAL" for details on the accessory socket.)


#### Related Links

[Playing rear seat HDMI media on the Rear Seat Entertainment System\(P. 219\)](#)


## Connecting an HDMI device to the Rear Seat Entertainment System (4-passenger)

Connect a device that supports HDMI output to the Rear Seat Entertainment System.

- 1 Open the lid of the rear auxiliary box.

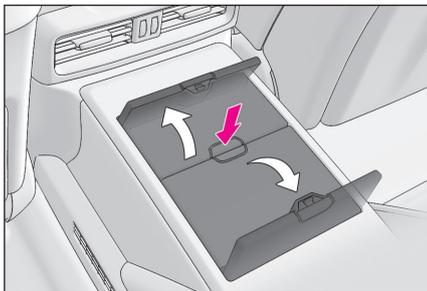

- 2 Connect the HDMI cable to the HDMI port.

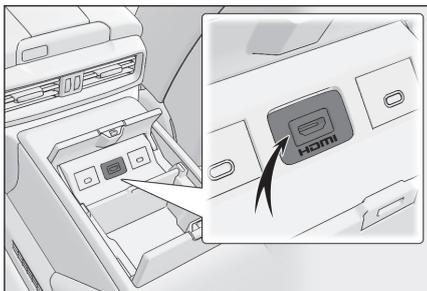

### INFORMATION

Use a power source such as the battery supplied with the connected device. Using the accessory socket installed in the vehicle may cause noise output.

(Refer to the separate "OWNER'S MANUAL" for details on the accessory socket.)

### Related Links

[Playing rear seat HDMI media on the Rear Seat Entertainment System\(P. 219\)](#)

### Changing the source of the Rear Seat Entertainment System

Select the source to view or listen to in the rear seat from options such as radio and USB.

#### 1 Perform any of the following operations to display the source selection screen.


- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

#### 2 Select the desired source.

The selected source screen is displayed.

Displayed sources will vary depending on the country or region.

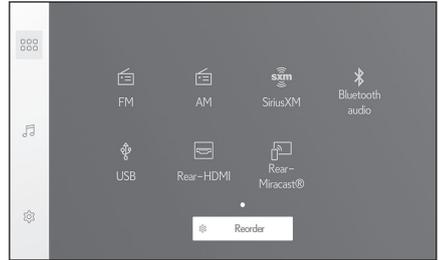

#### INFORMATION

- Wi-Fi<sup>®</sup> network connections and Bluetooth<sup>®</sup> perform wireless communication using the same 2.4 GHz radio frequency band. Depending on the usage environment, radio wave interference may occur, resulting in image distortion and audio stuttering.
- While the same sources are selected on the rear seat right side and left side, operations such as pause and fast forward are linked between left and right.

### Rearranging the source icons of the Rear Seat Entertainment System

Source icons can be rearranged for ease of operation as required.

#### 1 Select [ ] from the main menu.

The source selection screen is displayed.

#### 2 Select [Reorder].

#### 3 Touch the icon of the source to rearrange, drag the icon, and then release it.

If there are multiple pages on the source selection screen, release the icon at [  ]/[  ] on the edge of the screen to move it to the previous or next page.

#### 4 When the rearrangement is complete, select [OK].

The display returns to the source selection screen.

**Rearranging the source icons on the rear multi-operation panel<sup>\*1</sup>**

- 1 Select [  ] from the main menu on the rear seat display.

The source selection screen is displayed.

- 2 Use the cursor key to select [Reorder].
- 3 Select the icon of the source to be rearranged.
- 4 Use the cursor key to move the icon.
- 5 Select [Enter].
- 6 When the rearrangement is complete, select [OK].

The display returns to the source selection screen.

\*1: If equipped

### Adjust the volume of the Rear Seat Entertainment System

When adjusting the volume of the Rear Seat Entertainment System, set the audio output mode to independent mode. If the volume is adjusted in linked mode, the volume of all vehicle speakers will be adjusted.

#### NOTICE

Play back at an appropriate volume so as not to interfere with safe driving.

#### ● Perform any of the following operations to adjust the volume.

- Press [+]**or** [-] of [VOL] on the rear seat display.
- Select [+]**or** [-] of  \*1 on the Rear Seat Entertainment System operation screen on the rear multi-operation panel.

#### WARNING

- Please note the volume level when switching sources. In particular for video content, some normal conversation scenes are recorded at a low volume in order to obtain powerful sound effects. If the volume of such content is adjusted during a conversation scene, the volume may be too loud when switching to a sound effect scene or another source.
- While using headphones, adjust the volume with the headphones connected.  
Setting the volume too high may seriously damage a person's hearing.

#### — Related Links —

[Using headphones \(5-passenger/7-passenger\)\(P. 52\)](#)

[Using headphones \(4-passenger\)\(P. 53\)](#)

\*1: While the audio output mode is in linked mode, [Vol] is displayed.

## Switching the audio output mode of the Rear Seat Entertainment System

The Rear Seat Entertainment System has two audio output modes: linked mode, for enjoying the same source as the front seat audio system, and independent mode, for enjoying a different source.

### Linked mode

Enables controlling the audio while linked to the front seat audio system.

Audio is output from the speakers.

### Independent mode

Lets you enjoy a different source than the front seat audio system.

For example, passengers in the rear seats can listen to Bluetooth<sup>®</sup> audio while radio is listened to through the front seat audio system.

The Rear Seat Entertainment System audio is output from the headphones.


#### INFORMATION

While the same sources are selected for the front seats and rear seats, operations such as pause and fast forward are linked between front and rear.

- 1 Select either [Audio:], [Synchronize], or [Separate] at the top of the screen.

If [Audio:] is not displayed, select  to display it.

- 2 Select [Separate] or [Synchronize].

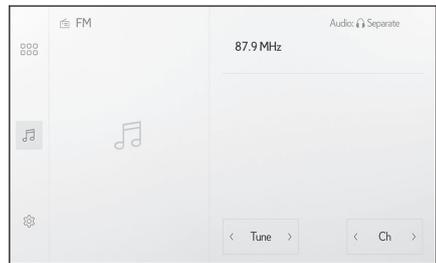

#### Related Links

[Using headphones \(5-passenger/7-passenger\)\(P. 52\)](#)

[Using headphones \(4-passenger\)\(P. 53\)](#)

### Using headphones (5-passenger/7-passenger)

The rear seat audio can only be listened to with headphones when selecting a different source than the front seat.


Use headphones that connect to the headphone jack.

#### **▲ WARNING**


While using headphones, adjust the volume with the headphones connected.

Setting the volume too high may seriously damage a person's hearing.

- 1 Open the lid at the rear end of the front console box.

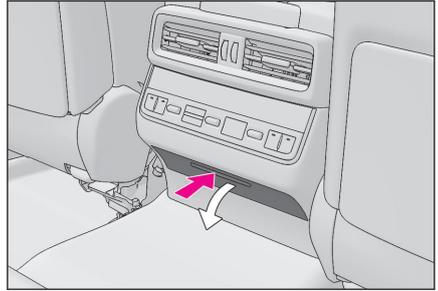

- 2 Insert the headphone connector into the headphone jack.

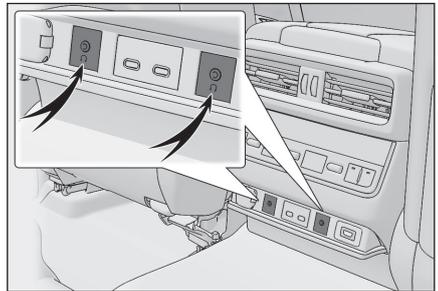

#### **Related Links**

[Adjust the volume of the Rear Seat Entertainment System\(P. 50\)](#)

[Switching the audio output mode of the Rear Seat Entertainment System\(P. 51\)](#)

[Using headphones \(4-passenger\)\(P. 53\)](#)

## Using headphones (4-passenger)

Use commercial headphones to listen to audio in the rear seat.

The rear seat audio can only be listened to with headphones when selecting a different source than the front seat.


Use headphones that connect to the headphone jack.

### ⚠ WARNING

While using headphones, adjust the volume with the headphones connected.

Setting the volume too high may seriously damage a person's hearing.

- 1 Open the lid of the rear console box.

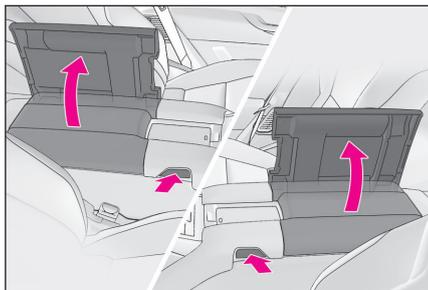

- 2 Insert the headphone connector into the headphone jack.



### Related Links

[Adjust the volume of the Rear Seat Entertainment System\(P. 50\)](#)


[Switching the audio output mode of the Rear Seat Entertainment System\(P. 51\)](#)

[Using headphones \(5-passenger/7-passenger\)\(P. 52\)](#)

### Operating the Rear Seat Entertainment System from the front seat audio system

- 1 Display the audio source selection screen on the front seat audio system.
- 2 Select [Rear seat entertainment].

The Rear Seat Entertainment System operation screen is displayed.

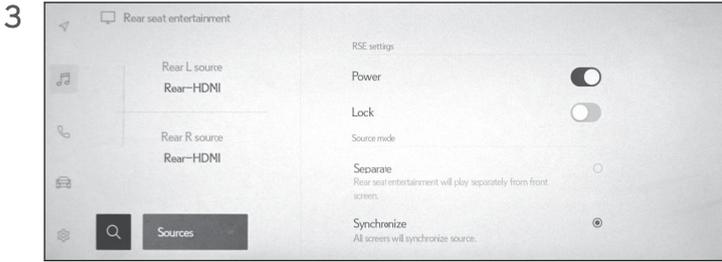

Operate the Rear Seat Entertainment System as necessary.

[**Power**] : Turns the Rear Seat Entertainment System on or off.

[**Lock**] : Turns the operations on the rear seat side on and off.

[**Separate**] : Sets the audio output mode to independent mode.

[**Synchronize**] : Sets the audio output mode to linked mode.


Select the seat to be linked from [**Left**] or [**Right**].

#### Related Links

[Changing the audio source\(P. 34\)](#)

## Using the Intelligent Assistant system

Intelligent Assistant is a subscription-based service that allows you to control the multimedia system with voice command and allows you to operate Navigation, Integrated Streaming, Radio and Phone. Without the subscription, the Assistant will only be able to support voice commands for Radio and Phone.

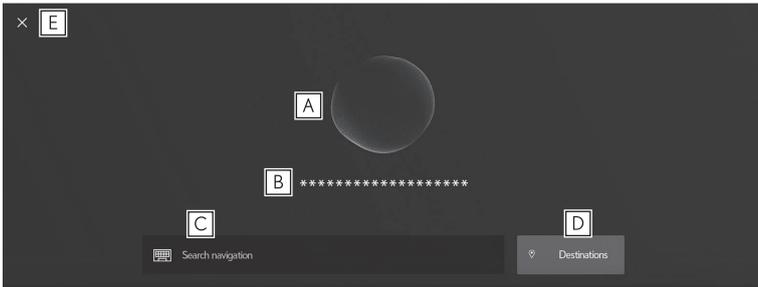

**A** Displays the voice recognition status.

 /  : Waiting for user's voice command

 : Listening

 : Processing

**B** Displays the response of the Intelligent Assistant system.

**C** Displays the keyboard screen.

Various items can be searched by using the keyboard.

**D** Sets a destination by selecting a previous destination.

**E** Closes the voice control screen.

### INFORMATION

While driving, the voice recognition screen will appear as a bar at the bottom of the screen.



### Related Links

---

[Using the search function\(P. 63\)](#)

[Searching for a destination by category\(P. 163\)](#)


## Intelligent Assistant

The Intelligent Assistant allows the customer with the following enhancements:

- **Enhanced Voice Recognition / Natural Language Understanding**  
Improved voice performance by utilizing both in-vehicle and cloud-based voice recognition.
- **Personalized experience**  
Offers a unique experience catered to the particular user by utilizing learned user data stored in the cloud.
- **Up-to-date information**  
Cloud content is constantly kept up-to-date in the Lexus cloud, so there is no need to visit dealer for a data update.

### INFORMATION

You can update Intelligent Assistant cloud subscription by touching the [**Update subscription**] button or using Lexus app.

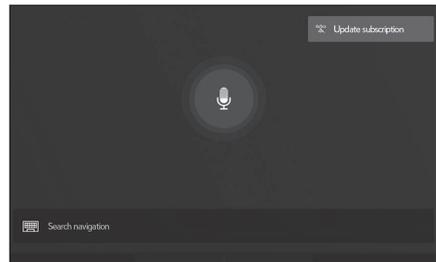

## Supported languages


Languages that the Intelligent Assistant recognizes are English, French, and Spanish.

## Starting voice control

Voice control can be started by any of the following operations:

### ■ Press the talk switch

Press the  switch (talk switch) on the steering.

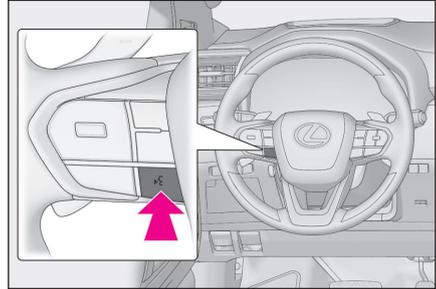


### ■ Say the wake word

Say any of the following wake-word: "Hey Lexus".

- The wake word can be turned on or off.
- The wake word can be used and then immediately issue a voice command.

Example: "Hey Lexus" "Take me to an Italian restaurant."

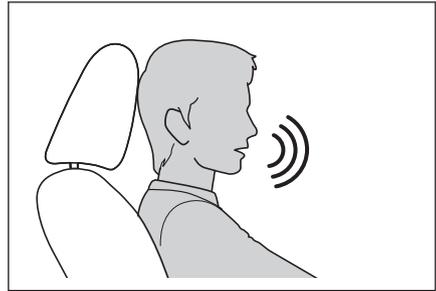

### ■ Touch the microphone button

Touch  or  on the screen.



## INFORMATION

- Voice controls can be done from the driver seat or passenger seat by activating the Intelligent Assistant system with wake word. In this case, voice commands from seats other than the seat from which the system was activated are not recognized.
- Some features are not available for voice control from passenger seat.

## 1-5. Intelligent Assistant

---

- If Intelligent Assistant was activated by the  switch on the steering or microphone button, voice controls can be performed only from the driver's seat.
- The Intelligent Assistant may not recognize commands if they are not said clearly. Take note of the following points when using it:
  - Speak in a clear voice.
  - Close the window as commands may not be recognized properly due to noise (wind noise or external noise).
  - If music is being played loudly while a command is issued, that command may not be recognized, so lower the music volume. If the air conditioner blows loudly, commands may not be recognized properly, so reduce the fan speed.
  - Commands may not be recognized if several people speak at once.
- You can interrupt the voice prompt by saying a voice command.
- You can turn voice prompt on or off on the voice control settings screen.
- You can adjust the system voice volume on the sound and media settings screen.

---

### Related Links

[Changing the voice control settings\(P. 83\)](#)

### Stopping voice control

Voice control can be ended by any of the following operations:

- Say "Cancel".
- Touch  on the voice recognition screen.
- Press and hold the  switch on the steering.

## Speaking a voice command

When the voice control screen appears, say a voice command. The system can recognize natural speech.



### INFORMATION

- Commands may not be recognized if said with an accent or non-standard phrasing.
- If the Intelligent Assistant does not recognize aliases or abbreviations when searching for place names and facilities, say the official name.

## Function list

The following tables list frequently used commands for each function category.

- The functions available may vary according to the system installed.
- Items with subscription will require Intelligent Assistant functionality.

### ■ Common

Action	Example voice command	Subscription
Shows list of general commands	"Help"	No
Stops the current conversation and re-starts at the beginning	"Start over"	No
Cancels the voice control system	"Cancel"	No

### ■ Navigation

Intelligent Assistant system enables navigation voice search. This allows you with variety of features such as searching a point of interest (POI), navigate to an address as well as discovering new POIs.

## 1-5. Intelligent Assistant

Function	Example voice command	Subscription
Destination search	"Take me to <location category/business name>" "Take me to <an Italian restaurant>" "Take me to <address>" "Take me to <6565 Headquarters drive Plano TX>" "Take me home" "Take me to work"	Yes
Map control	"Map zoom in" "Map zoom out"	Yes
Route information	"Cancel trip"	Yes
Telematics	"Call destination assist"	No

### ■ Multimedia control

Allows you to engage in a dialog with the Intelligent Assistant to complete various multimedia tasks via voice input.

Function	Example voice command	Subscription
Radio	"Tune to 99.5 FM" "Tune to Rock on FM" "Tune to channel 2 on SiriusXM"	No
Media	"Mute audio" "Next" "Previous"	No
Media Streaming	"Play <artist/album/song/genre/playlist>" "Play <Frank Sinatra>"	Yes

### ■ Hands-free phone operation

Allows you to engage in a dialog with the Intelligent Assistant to complete various tasks via voice input, such as making a phone call to a contact, or calling Destination Assist.

Function	Example voice command	Subscription
Phone call	"Call <John Smith>" Dial <555 212 1212> "Call back" "Redial"	No
Message	"Send message to <John Smith>" "Read message"	No

### ■ Screen display switching

Allows you to easily change to various function screen by voice.

Function	Example voice command	Subscription
Navigation	"Show map"	Yes
Phone	"Show recent calls"	No
Multimedia	"Show the FM station list"	No
Settings	"Show display settings"	No

### ■ Vehicle device control

Allows you to easily change a vehicle setting or activate a function by voice.

Function	Example voice command	Subscription
Climate	"Turn on the air conditioner" "Set the temperature to <70> degrees" "Turn the fan speed up"	No
Illumination <sup>*1</sup>	"Set the illumination to red"	No

### ■ Notifications

Offers notifications based on user preferences, vehicle geolocation and learned behavior. Each service can be set to On/Off from the Lexus app.

Function	Detail	Subscription
POI suggestion (Navigation)	Parking suggestions near destination	Yes

\*1: This function is not available in some countries or areas.

## 1-5. Intelligent Assistant

---

Function	Detail	Subscription
Low fuel reminder (Navigation)	Automatically notifies user of low fuel level. If applicable, provides POI list nearby (ahead) or along route and allows user to select and navigate by touch.	Yes

## Using the search function

The keyboard can be used to search for contacts, music, locations, and vehicle settings. If using the Intelligent Assistant, information that takes advantage of content in the cloud can be searched.

- 1 Touch .
- 2 Touch the desired domain to search.

**[Navigation]**: Searches by the address, intersection, Points of Interest, telephone number, street name, etc.

**[Media]**: Searches by artist name, song title, album name, station name, genre, etc.

**[Phone]**: Searches by contact name or phone number.

**[Vehicle]**: Searches by entering the items you want to set, such as climate, seats, tire pressure.

**[Settings]**: Searches by entering the items you want to set, such as general, date & time, language & units, notifications.

- 3 Enter the search text and touch **[Go]**.

If multiple conditions need to be specified, search by inserting a space between words.



- 4 When the list of search results is displayed, touch the desired item.

### INFORMATION

- Operation of the screen is restricted when the vehicle is moving exceeds about 5 mph (8 km/h).
- Keyboard search is not available when Apple CarPlay and Android Auto screens are active.



**2-1. Multimedia system initial setup**

Registering a driver ..... 67

**2-2. Various settings**

Changing the various settings ..... 72

**2-3. Driver settings**

Changing and registering a driver ..... 74

Setting up how to identify a driver ..... 76

**2-4. General settings**

Changing general multimedia system settings ..... 78

**2-5. Notification settings**

Notifications settings ..... 80

**2-6. Screen settings**

Changing the screen display settings ..... 81

**2-7. Voice control settings**

Changing the voice control settings ..... 83

**2-8. Vehicle settings**

Setting dealer information ..... 84

Changing the security settings ..... 85

Updating and checking the software information ..... 87

**2-9. Navigation system settings**

Displaying the navigation system settings screen ..... 92

Map details settings screen ..... 93

Route options ..... 95

**2-10. Sound and media settings**

Changing sound and media settings ..... 96

**2-11. Wi-Fi® Settings**

Changing Wi-Fi® settings... 100

Setting Wi-Fi® Hotspot ..... 102

**2-12. Bluetooth® Settings**

Setting Bluetooth® devices 104

**2-13. Rear seat entertainment system settings**

Changing the screen settings of the rear seat entertainment system ..... 107

Adjusting the image quality of the video and image source during playback on the Rear Seat Entertainment System ..... 108

Switching the screen mode of the Rear Seat Entertainment System ..... 109

Using the audio read aloud function ..... 110

Changing the rear seat HDMI settings on the Rear Seat Entertainment System ..... 112

Checking the Rear Seat Entertainment System license information ..... 114

---

## 2-14. Apps settings

Apps settings..... 115

## Registering a driver

Register a driver for the main user as the initial setup for the multimedia system.

By registering a driver, you can save the driving position, multimedia, and various other settings as the my settings for each driver. You can drive the vehicle without having to change the settings of other drivers in the case that multiple drivers, such as your friends and family, drive the vehicle.

You can drive the vehicle in guest mode if you do not want to use the my settings.

This function is not available in some countries or areas.

## My settings

Driving positions, multimedia settings, and other vehicle settings for each driver can be saved and the applicable driver can load them when driving the vehicle.

- Up to 3 my settings can be registered.
  - The following setting information can be saved in the my settings:
    - Some multimedia settings : Volume, navigation, audio (These settings are saved in the cloud.\*<sup>1</sup>)
    - Some vehicle settings : Driving position, meters, etc. (These settings are saved in the vehicle only and not in the cloud.\*<sup>1</sup>)
  - Settings are automatically saved to the current my settings when they are changed.
  - Search history, individual settings, and other private information can be protected by setting up the my settings.
  - By registering a device to identify the driver, my settings will be automatically loaded. You can select a smartphone and smart key as the device to be registered.
- **Linking to a "Lexus Connected App" account\*<sup>1</sup>**
- An active Lexus Connected App account is required to use the my settings.
  - By using the Lexus app and linking to a Lexus account, the my settings can be loaded from the cloud in any vehicle.
  - The driver who is registered as the owner can delete all drivers registered in the vehicle. Drivers who are not the vehicle owner cannot delete the owner's my settings.
  - The same my settings cannot be used in another vehicle at the same time.

## 2.1. Multimedia system initial setup

- Changing some multimedia settings automatically updates the my settings saved in the cloud and a screen notifying the driver that the profile has been updated appears.
- My settings portability from vehicle to vehicle may not be available in the regions other than the U.S. 48 States.
- Some multimedia settings are saved in the cloud, so even if the my settings are deleted in the vehicle, it is not deleted from the cloud.


### Related Links

[Setting up how to identify a driver\(P. 76\)](#)

## Registering a driver for the first time


An active Lexus account is required to use a profile.

- 1 After start the vehicle, the language selection screen will be displayed. Touch the desired language.

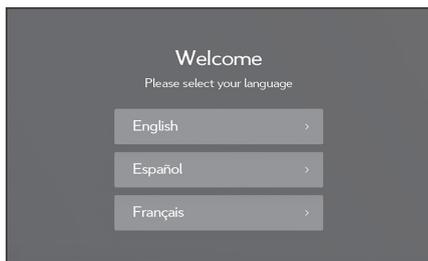

- 2 To use the Lexus app on a smartphone to register a profile, touch [Enter phone number].

If you do not want to register a profile, touch [Cancel]. If you touch [Do not show setup again], the profile registration screen will no longer be displayed.

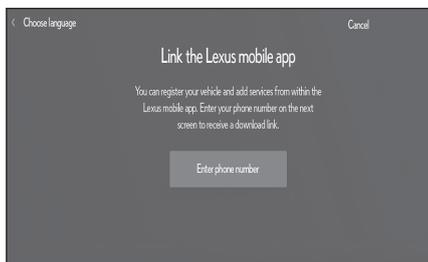

- 3 Enter your phone number and then touch [Send].  
Download the Lexus app using the link sent by text to your smartphone.
- 4 Start the Lexus app and follow the instructions to scan the QR code on the screen or enter an authentication code.
- 5 On the Lexus app, complete the setup to activate your subscription or trial and touch [I've completed app setup].
  - Once registration is complete, a message is displayed and my settings is saved.

\*1: This function is not available in some countries or areas.

- If you completed the setup for the subscription or trial in the Lexus app, the map screen will be displayed and you can use the navigation system.
- If you do not complete the setup for the subscription or trial in the Lexus app, the subscription screen will be displayed and you cannot use the navigation system.

## 6 After registering your profile, register your Bluetooth® device in order to identify the driver. To continue with setup, touch [Yes].

You can also register a device at a later time.

### INFORMATION

If a driver was not registered, registration can be restarted on the driver list screen.

### Related Links

[Changing and registering a driver \(P. 74\)](#)

## Automatically loading the my settings

Taking a smartphone, smart key in the vehicle to identify the driver enables the my settings to be automatically loaded.

- The vehicle detects the device registered in the my settings when the engine switch is turned to ACC or ON. When a registered device is detected, the my settings that the device is assigned to is automatically loaded.
- If the device registered in the my settings is not detected, the vehicle is used in guest driver mode.
- Touching [**Settings**] displays the driver list screen enabling you to change the my settings.
- You can select a smartphone, smart key or some other device as the device to identify the driver.

### INFORMATION

Only the Bluetooth® devices used when the vehicle was last driven are detected among the devices assigned in the my settings. Driver identification may be delayed or may not be able to be performed before starting the vehicle depending on the usage conditions of the Bluetooth® device. It is therefore recommended to register a smart key in addition to Bluetooth® devices.

### Related Links


[Changing and registering a driver \(P. 74\)](#)

[Setting up how to identify a driver\(P. 76\)](#)

### Changing the my settings

You can select the my settings that you want to use on the my settings list registered on the vehicle.

- 1 Touch [  ] from the main menu.
- 2 From "Saved profiles", select the driver name that you want to change to.

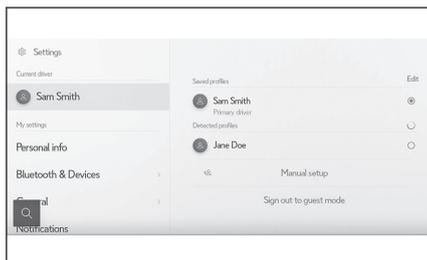

- 3 Enter the PIN code.
  - Enter the PIN code set on the Lexus app when the Lexus account was created.  
PIN code is not required if a Bluetooth<sup>®</sup> device is linked to the driver as an identification device.
  - Once the my settings has changed, a message is displayed on the screen.

#### INFORMATION


If the multimedia system detects a device set to a different my settings, a pop-up will display. Touching [  ] will enable the my settings to be changed.

### Loading detected profile

If the system detects a Lexus app on a smartphone that another driver is using, the detected profile name will appear on the screen. Touch the profile name desired to be used and enter the PIN code to change the profile.

- 1 Touch [  ] from the main menu.
- 2 From [Detected profiles], select the driver name that you want to change to.

Touch [Refresh] to update the profile list.

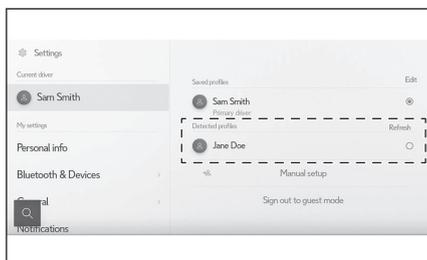


- 3 Enter the PIN code.

- Enter the PIN code that you set on the Lexus app when the Lexus account was created.
- Once the profile has changed, a message is displayed on the screen.

#### 4 To save the profile in the vehicle, touch [Continue].


- The loaded profile can be saved in the vehicle as a primary driver or a secondary driver.
- If you do not want to save the profile on this vehicle, you can use it temporarily.

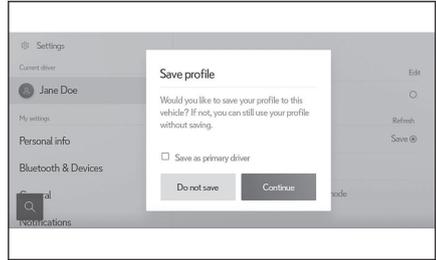

## Changing the various settings

The various settings related to the multimedia system can be changed.

- 1 Touch [  ] from the main menu.
- 2 Select the desired item.

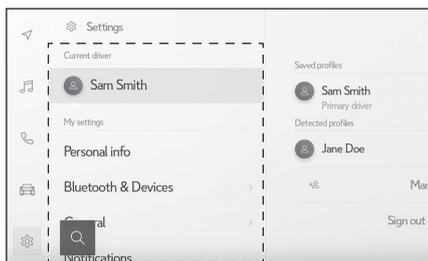

Setting	Description
"Current driver"	
[  ](Driver name) [  ] [Guest]	Displays the name of the current my settings. Touching the profile enables you to change or register the my settings. (→ P.74)
"My settings"	
[Personal info]	Register a device to identify the driver. (→ P.76)
[Bluetooth & Devices]	Register or edit a Bluetooth® device. (→ P.104)
[General]	Change the time settings, display language, and other general multimedia settings.(→ P.78)
[Notifications]	Change software update and other notification settings.(→ P.80)
[Wi-Fi]	Configure Wi-Fi® settings and other advanced settings.(→ P.100)
[Display]	Adjust the screen contrast and brightness, etc.(→ P.81)
[Sound & Media]	Change the system voice settings and radio settings.(→ P.96)
[Navigation]	Change settings related to map display and route guidance.(→ P.92)

Setting	Description
[Vehicle customize]	Change settings related to vehicle devices.*1
[Voice & Search]	Change setting for Intelligent Assistant.(→ P.83)
"Vehicle"	
[Dealer info]	Add, edit or delete dealer information.(→ P.84)
[Info & Security]	Change settings related to security and privacy.(→ P.85)
[Software update]	Check and update software information.(→ P.87)
[Apps]	Re-install applications and check information about the applications.(→ P.115)

 **INFORMATION**

For safety purposes, there are functions that cannot be operated while the vehicle is moving.

\*1: Refer to the separate "OWNER'S MANUAL".

## Changing and registering a driver\*1

The driver can be registered or changed. By registering a driver, driving positions, multimedia settings, and various other individual vehicle settings can be saved as the my settings for each driver.

- 1 Touch [⚙️] from the main menu.
- 2 Touch [👤](driver name) or [👤][Guest] on the sub menu.
- 3 Select the desired item.



Setting	Description
[Get started]	If the primary my settings has not been registered, profile registration will start.(→ P.68)
[Saved profiles]	The drivers registered on the vehicle are displayed in a list. Touch the profile that desired to be used and enter the PIN code to change the driver. Touching [Edit] enables you to delete a registered driver. Profile is still stored on Lexus cloud preserving all settings and personalization information. Up to three my settings can be saved on the vehicle.
[Detected profiles]	If the system detects the Lexus app on a smartphone being used by another driver, the driver name of the detected driver will be displayed on the screen. To switch the driver in use, touch the desired driver name and enter the PIN code. Touch [Refresh] to update the profile list. Manually refreshes the detected profile list, when a Bluetooth® device is not found in the list.
[+👤] [Manual setup]	Manually registers a new driver. A driver can be registered by entering their Lexus account ID and password. Some multimedia settings saved in the cloud will be loaded. Some vehicle settings will be set to the default settings.

\*1: This function is not made available in some countries or areas.

Setting	Description
[Sign out to guest mode]	<p>Sign out of the current my settings to go to Guest mode. This feature can be used for Valet to protect personal informatoin</p> <p>Values of the my settings other than search history and personal settings will be carried over to the my setting of the guest.</p>

 **INFORMATION**

For safety purposes, these settings cannot be operated while the vehicle is moving.

## Setting up how to identify a driver

Set a device in order to identify a driver. When the engine switch is turned to ACC or ON and a registered device is detected, the my settings that the device is assigned to is automatically loaded. You can select a smartphone and smart key as the device to be registered.

- 1 Touch [  ] from the main menu.
- 2 Touch [Personal info] on the sub menu.
- 3 Select the desired item.



Setting	Description
"Profile Name"	The name of the driver is displayed.
"Bluetooth devices"	Driver identification is performed using a smartphone or other Bluetooth® device and the applicable my settings is loaded. Touch [Link devices] to register. (→ P.130)
[Link key] *1*2	Place all the desired electronic keys to be registered in the vehicle and then perform registration. Key(s) registered and allocated to other driver(s) cannot be registered. When the smart access system with push-button start is disabled, the key used to unlock the doors will be assigned to the driver.
[Reset settings]	Some multimedia settings of the selected my settings will be deleted.
[Delete driver]	The selected my settings will be removed from the vehicle.

\*1: Refer to the separate "OWNER'S MANUAL".

\*2: Cannot be used with fleet vehicles such as rental cars.

## Troubleshooting


If there is a problem with the my settings function, first check the table below.

Problem	Likely cause	Solution
Unable to load saved profile	System is not loading the previously saved profile.	Turn the Bluetooth® setting on and ensure the device is paired with the system and set as primary device.
Unable to load saved profile with Bluetooth® setting turned on		Ensure Bluetooth® setting is turned on and Lexus app is running on device.
Forgot PIN	PIN needs to be reset.	PIN can be reset using the Lexus app.
Unable to add a Bluetooth® device to a profile	System does not accept the Bluetooth® device thus preventing you to add the device to your profile.	Verify your device is not associated with other driver's profile.
Unable to detect profile	System does not show the profile in the detected list.	Verify your device's Bluetooth® setting is on and Lexus app is running on your device.
Unable to generate QR / authorization code	System is not loading your QR code or manual authorization code.	Verify that car is in good network area and DCM connection is active.
Failed to complete registration	QR and manual authorization code are valid for a limited time of few minutes.	Restart registration process by going back previous screen and entering phone number again to get a new QR code / manual authorization code.

## Changing general multimedia system settings

The time settings, display language, and other general multimedia system settings can be changed.

- 1 Touch [⚙️] from the main menu.
- 2 Touch [General] on the sub menu.
- 3 Select the desired item.

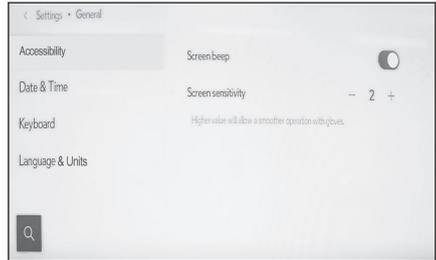

● [Accessibility]

Setting	Description
[Screen beep]	Turn the sound that is made when you touch the screen on or off.
[Screen sensitivity]	Adjust the screen touch sensitivity.

● [Date & Time]

Setting	Description
[Set date & time by GPS]	Use GPS information and map data to automatically set the time. Turning this setting off will enable you to set the time and time zone manually.
"Time"	
[24-hour time]	Change between 24-hour and 12-hour time display.
[Time zone]	While [Set date & time by GPS] is off, the time zone can be set.
[Daylight savings]	While [Set date & time by GPS] is off, daylight saving time can be set to either [Auto][On] or [Off].
[Set time automatically]	Use GPS information to automatically set the time.

Setting	Description
[Set time manually]	When [Set time automatically] is turned off, you can set the time.
"Date"	
[Format]	Change the date display format. (MM/DD/YYYY, DD/MM/YYYY, YYYY/MM/DD, etc.)

- [Keyboard]

Setting	Description
"History"	
[Clear search history]	Delete the keyboard search history.

- [Language & Units]

Setting	Description
[Language]	Change languages. Both the language displayed on the screen and system voice language change.
"Measurements"	
[Set automatically]	Automatically sets the display units for distance, fuel economy, and so on based on the country information.
[Fuel/Electricity consumption]	When [Set automatically] is turned off, you can manually set the fuel economy display unit.

### INFORMATION

- Even if you change the language settings, not all the displayed content and voice guidance will change to the selected language. Additionally, some guidance will no longer function after you change the language.
- Set the Apple CarPlay/Android Auto language using the connected device.

## Notifications settings

Software update and other notifications can be changed.

- 1 Touch [⚙️] from the main menu.
- 2 Touch [Notifications] on the sub menu.
- 3 Select the desired item.



Setting	Description
[Software updates]	Turn the notification for software updates on or off.
[Vehicle suggestions]	Change the frequency of the suggestion notification from the system.
[Virtual assistant]	Turn the notification from the Intelligent Assistant service on or off.
"Navigation"	
[Navigation during calls]	Turn the navigation system voice guidance on or off during a phone call.
[Turn by turn]	Turn the turn-by-turn voice guidance on or off.
[Traffic alerts]	Turn the traffic information voice guidance on or off.
[State border guidance]	Turn the voice guidance informing you that you have crossed a border on or off.
[Unverified roads]	Turn the guidance for unverified roads on or off.
[HOV / HOT lanes]	Turn the guidance for high-occupancy vehicles lane/high-occupancy toll lane on or off.

## Changing the screen display settings

The screen contrast and brightness can be adjusted.

- 1 Touch [⚙️] from the main menu.
- 2 Touch [Display] on the sub menu.
- 3 Select the desired item.



2

Settings and registration

### ● [Screen]

Setting	Description
[Display]	Set whether to turn the screen display on or off. If the screen is turned off, nothing will be displayed on the screen and only audio will be played.  To display the screen again, touch the screen and touch the button in the center of the screen.
"Mode"	
[Automatic] *1	The screen can automatically be changed between daytime mode and nighttime mode when the headlights illuminate or turn off.
[Daytime (light)]	When [Automatic] is turned off, the screen can be changed to daytime mode manually.
[Nighttime (dark)]	When [Automatic] is turned off, the screen can be changed to nighttime mode manually.
[Brightness]	Adjust the screen brightness.
[Contrast]	Adjust the strength of the screen contrast.

## 2-6. Screen settings

### ● [Camera]

Setting	Description
"Camera screen"	
[Brightness]	Adjust the camera screen brightness.
[Contrast]	Adjust the strength of the camera screen contrast.

### ☐ INFORMATION


- GPS will continue tracking the present position with the screen turned off.
- Screen
  - When the screen is off, if it is touched, the unlock button will be displayed. If the button is not operated for 3 seconds, the screen will turn off again.
  - If the screen is touched anywhere other than the center button, the screen will turn off again.
  - While the screen is off, the screen may be displayed temporarily in cases such as pressing the [  ] switch on the steering wheel or when the camera screen is displayed after shifting the shift lever to R. Once such a screen is closed, the screen will turn off again.

\*1: While using the auto headlight feature, the lights are switched on and off depending on the intensity of light outside. Depending on the location, the system may not switch automatically between daytime (light) and night-time (dark) modes.

## Changing the voice control settings

The settings related to the voice recognition feature can be changed.

- 1 Touch [  ] from the main menu.
- 2 Touch [Voice & Search] on the sub menu.
- 3 Select the desired item.

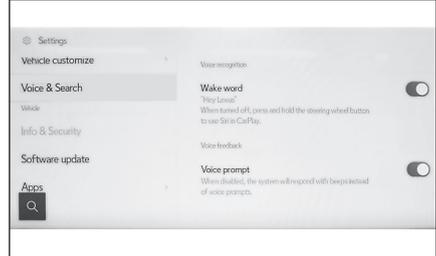


Setting	Description
"Voice recognition"	
[Wake word]	Voice control can be started by speaking the wake word.
"Voice feedback"	
[Voice prompt]	Turn the voice prompts on or off.

### Setting dealer information <sup>\*1</sup>

You can register and delete dealer information. Registering the information of the dealer at which you get your vehicle serviced enables you to contact the dealer from the settings screen when you want to reserve a service.

- 1 Touch [  ] from the main menu.
- 2 Touch [Dealer info] on the sub menu.
- 3 Select the desired item.

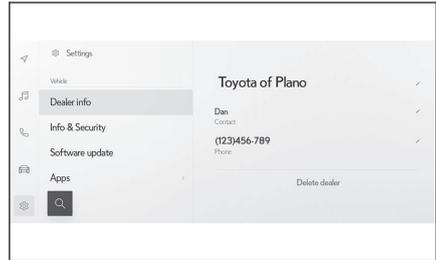


Setting	Description
[Add dealer]	Register the desired dealer.
[(Dealer name)]	Change the dealer name.
[Contact]	Register or change the name of the person in charge at the dealer.
[Phone]	Register or change the dealer phone number.
[Delete dealer]	Delete the dealer information.

\*1: Vehicles equipped with DCM

## Changing the security settings

Settings related to security and privacy can be changed.

- 1 Touch [  ] from the main menu.
- 2 Touch [Info & Security] on the sub menu.
- 3 Select the desired item.

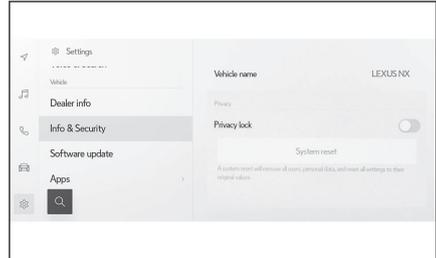

Setting	Description
[Vehicle name]	Displays the system name (vehicle name). This is the device name displayed when searching for a Bluetooth <sup>®</sup> device from an external device. You can change the name by touching it.
"Privacy"	
[Privacy lock]	Enable the password-protected privacy lock to protect personal information. When set ON, entering the password will be required when the 12-volt battery is replaced or the multimedia system is removed from the vehicle.
[Reset privacy lock password]	Reset the set privacy lock password.
[System reset]	Reset all of the system's data and restore the settings to the factory defaults.

### INFORMATION

- Communication may be cut off after resetting the system. In that case, restart the system.
- After initializing all the information, all the data in the multimedia system will be initialized and returned to the factory default. It cannot be returned to the state before initialization.

### — Related Links —

---

[Restarting the system\(P.17\)](#)

### Setting up the privacy lock

- 1 Touch [] from the main menu.
- 2 Touch [Info & Security] on the sub menu.
- 3 Touch [Privacy lock].
- 4 Touch [OK].
- 5 Set a password that contains between 4 and 15 alphanumeric characters.
- 6 Reenter your password.

A message will appear and the privacy lock is enabled.


#### INFORMATION

- Once a password is set, the password must be entered to operate the multimedia system in situations such as when restarted after replacing the battery or when disconnecting the multimedia system from the vehicle and reconnecting it. Enter the set password.
- If the password is entered incorrectly a certain number of times, you will no longer be able to enter a password. If that happens, ask your dealer to unlock the system or reset it by touching [**System reset**].
- To ensure security, do not repeatedly use the same password or a word that can be found in the dictionary when setting a password.

## Updating and checking the software information

Software information can be checked or updated. The software is updated for the purpose of improving multimedia system functions and operations for more smoother usability.

- 1 Touch [  ] from the main menu.
- 2 Touch [Software update] on the sub menu.
- 3 Select the desired item.

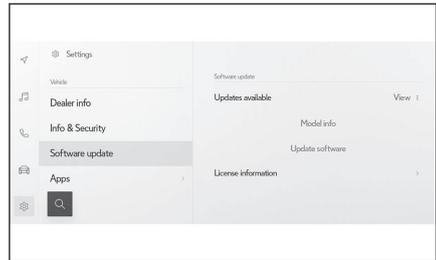

Setting	Description
"Software update"	
[Updates available]	Touch [ <b>View</b> ] to check software update information. After checking whether there is an update available and the content of the update, the updated data can be downloaded and software update can be installed. If there is no updated data available [ <b>No updates available</b> ] will be displayed.
[Model info]	Check the current software version etc.
[Update software]	Updating the software. This will not be displayed if there is no update data available.
[Output info to USB memory]	Copy the vehicle information to update the software to the USB flash drive. Download the update data from the user portal site based on the information written to the USB flash drive and update the software for the multimedia system.(→ P.90) This setting will not be displayed if the USB flash drive is not inserted into the USB port.
[History]	Check software update history. This setting will not be displayed if there is no update history.
[License information]	Check the software license information.

### Updating the software

Use one of the following methods to update the software:

- Update the software using Data Communication Module (DCM)
- Update the software using Wi-Fi®
- Update the software using a USB flash drive

#### INFORMATION

- Map data cannot be updated using this service.
- Some operations cannot be performed while the software is updating.
- If there are any questions, contact your Lexus dealer.

#### NOTICE

- To update the software using a USB flash drive, a USB flash drive that has more than 4 GB of available space and a computer that can connect to the internet are required. Note that communication charges may be high depending on your computer environment.
- Update the software at your own risk.
- The software cannot be restored to the previous version once the software has been updated.
- The update software can only be used on this system. It cannot be used on any other device.
- Depending on the content of the software update, some settings may be reset. If that happens, reconfigure the applicable settings after the software has been updated.
- Although basic functions are possible during the software update, operation may be slow. If possible, do not operate the system.
- After the software is updated, the Toyota Motor Corporation distribution server will be automatically notified that the update has completed. Note that Toyota Motor Corporation does not use the information it receives for any purpose other than software updates. You may also be charged for communication fees depending on your subscription.

### Updating the software using DCM\*1 or Wi-Fi®

This system regularly accesses the distribution server to check for software updates.

1. Touch the button in the software update notification.

\*1: This function is not available in some countries or areas.

2. Follow the on-screen instructions to check and agree to the update content and terms.
  - Downloading of the update data will start. Once the data has been downloaded, installation will begin.
  - The time required for download and installation may increase depending on the communications environment. If the engine switch is turned off during installation, the installation will resume the next time the engine switch is turned to ACC or ON.
  - Once the update is complete, a message is displayed on the screen.
  - If the system needs to be restarted, a message will appear. Touching [Yes] restarts the system.
  - To check the software update history, touch [History] on the software update history screen.

### ■ Manually updating the software

1. Touch [- 2. Touch [Software update] on the sub menu.
- 3. Touch [View] of "Updates available".
- 4. Follow the on-screen instructions to check and agree to the update content and terms.
  - Downloading of the update data will start. Once the data has been downloaded, installation will begin.
  - The time required for download and installation may increase depending on the communications environment. If the engine switch is turned off during installation, the installation will resume the next time the engine switch is turned to ACC or ON.
  - Once the update is complete, a message is displayed on the screen.
  - If the system needs to be restarted, a message will appear. Touching [Yes] restarts the system.
  - To check the software update history, touch [History] on the software update history screen.

#### INFORMATION

- If critical update data is available on the distribution server, a message will be displayed. Touch [OK] to download the update data.
- The following conditions must be met to use Wi-Fi<sup>®</sup> to update the software:

## 2-8. Vehicle settings

- The Wi-Fi® function is turned on. (→ P.100)
- The vehicle must be in a location where it can access Wi-Fi®
- The system must be connected to a Wi-Fi® access point (e.g. home, work, etc.)
- A USB update process may be used if a Data Communication Module (DCM) or Wi-Fi® update is not possible.

### Updates using a USB flash drive

This function is not made available in some countries or areas.

#### ■ Copying the update data to a USB flash drive

1. Touch [  ] from the main menu.
2. Touch [ **Software update** ] on the sub menu.
3. Insert the USB flash drive into the USB port on the vehicle.
4. Touch [ **Output info to USB memory** ].  
The vehicle information to update the software is copied to the USB flash drive.
5. Touch [ **OK** ] to remove the USB flash drive.
6. Insert the USB flash drive with the copied vehicle information into the USB port on a computer.
7. On the computer, go to the user portal site (<https://www.lexus.com/firmware-updates>) and download the update data onto the computer.
  - The update data will be downloaded based on the vehicle information written on the USB flash drive.
  - If you cannot find any update data, this means that there is currently no update data available for the applicable system. Update data is released as necessary.
8. Copy the update data that was downloaded to the computer onto the USB flash drive.  
Save the update data in the root directory on the USB flash drive. If the update data is saved in folder that was created, the update software cannot be loaded.
9. Once the updated data has finished copying, remove the USB flash drive.

 **INFORMATION**

The vehicle information written to the USB flash drive is also required when updating the software on this system, so do not delete the vehicle information on the USB flash drive until the update has completed.

**■ Updating the software**

1. Touch [] from the main menu.
2. Touch [**Software update**] on the sub menu.
3. Insert the USB flash drive with the copied update data into the USB port on the vehicle.
4. Touch [**Update software**].
5. Follow the on-screen instructions to check and agree to the update content and terms.
  - The update data is copied and installation begins.
  - Once installation is complete, a message is displayed stating that the update has finished.
  - Leave the USB flash drive connected if the system needs to be restarted. A message will appear when restart is ready and touching [**Yes**] restarts the system.
6. Remove the USB flash drive.
  - To check the software update history, touch [**History**] on the software update history screen.
  - If the software update was done offline, an update completion report data will be created on the USB flash drive. It is necessary to upload the update completion report data to the portal site.

 **NOTICE**

Do not remove the USB flash drive or turn the engine switch off while the software is updating.

**— Related Links —**

[Connecting to the USB port\(P. 35\)](#)

### Displaying the navigation system settings screen

Through the navigation system settings, various settings can be changed.

- 1 Touch [] from the main menu.
- 2 Touch [Navigation].
- 3 Touch the desired item.

Setting	Description
[Map details]	Touch to display the map details settings screen
[Route options]	Touch to display the route options

---


#### Related Links

[Map details settings screen\(P. 93\)](#)

[Route options\(P. 95\)](#)

## Map details settings screen

- 1 Touch [  ] from the main menu.
- 2 Touch [Navigation].
- 3 Touch [Map details].
- 4 Touch the desired item.

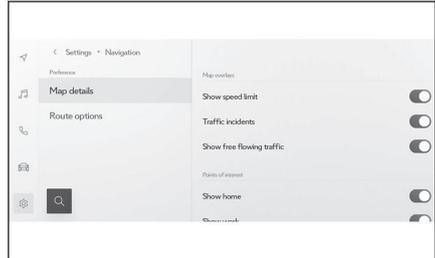

Setting	Content
[Map overlays]	
[Show speed limit]	Touch to turn the speed limit information on/off.
[Traffic incidents]	Touch to turn the display of the traffic incident display on/off.
[Show free flowing traffic]	Touch to turn the display of an arrow for free flowing traffic on/off.
[Points of interest]	
[Show home]	Touch to turn the icon of the home display on/off.*1
[Show work]	Touch to turn the icon of the work display on/off.*1
[Show favorites]	Touch to turn the icon of the favorites display on/off.
[Show nearby parking]	Touch to turn the icon of the nearby parking display on/off.
[Calibrate map]	Touch to adjust the position of the current position mark manually.

\*1: Home and Work must be added via Lexus app.

### — Related Links —

---

[Traffic Information\(P. 162\)](#)

[Destination search screen\(P. 163\)](#)

### Calibrating position/direction


When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor at the current location, the current position mark can be adjusted manually.

- 1 Touch [] from the main menu.
- 2 Touch [Navigation].
- 3 Touch [Map details].
- 4 Touch [Calibrate map].
- 5 Scroll the map to the desired point.
- 6 Touch or hold [] to change the heading.
- 7 Touch [Save].

[Reset]: Touch to return the current position mark to its previous position.

## Route options


- 1 Touch [  ] from the main menu.
- 2 Touch [Navigation].
- 3 Touch [Route options].
- 4 Touch the desired item.

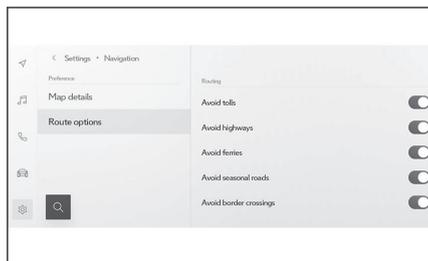

Setting	Content
[Avoid tolls]	Touch to avoid toll roads.
[Avoid highways]	Touch to avoid expressways.
[Avoid ferries]	Touch to avoid ferries.
[Avoid seasonal roads]	Touch to avoid seasonally restricted road segments.
[Avoid border crossings]	Touch to avoid border crossings.

## Changing sound and media settings

- 1 Touch [⚙️] from the main menu.
- 2 Touch [Sound & Media].
- 3 Touch the desired item.

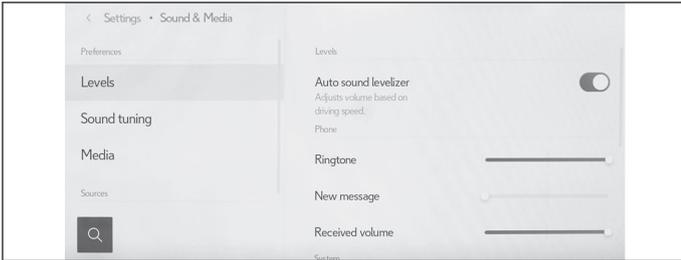

● [Levels] > [Levels]

Setting	Content
[Auto sound levelizer]	Automatically adjusts audio volume according to the vehicle speed.

● [Levels] > [Phone]

Setting	Content
[Ringtone]	Adjusts the ringtone.
[New message]	Adjusts the volume when a message is received.
[Received volume]	Adjusts the receiver volume.

● [Levels] > [System]

Setting	Content
[System voice]	Adjust the system volume.
[Driving assist]	Adjust the volume of the driving support system.

● [Levels] > [Speakers]

Setting	Content
[Surround sound]	<p><b>Type A</b> Set to an immersive sound quality.</p> <p><b>Type B</b> Set to [2D] for an immersive sound quality, and set to [3D] for three-dimensional sound quality.</p>

● [Sound tuning] > [Equalizer]

Setting	Content
[Treble]	Adjusts the level of the treble.
[Mid]	Adjusts the level of the midrange.
[Bass]	Adjusts the level of the bass.
[Balance & Fade]	Adjust the fader and balance by moving [  ]. Touch [Recenter] to return to the center.

● [Media] > [General]

Setting	Content
[Default source] *1	Preferred source for Integrated Streaming search by Intelligent Assistant.
[Display cover art]	Displays cover art such as for music albums.

● [Radio] > [Radio]

Setting	Content
[Display FM info]	Displays RDS (Radio Data System) text.
[HD Radio FM]	Receives HD radio™ in all frequency bands of FM radio.
[HD Radio AM]	Receives HD radio™ in all frequency bands of AM radio.
[Clear radio station history]	Clears the AM and FM reception history.

● [Radio] > [Gracenote database]

Setting	Content
[Enhance metadata/artwork]	Uses the Gracenote® radio recognition technology. <ul style="list-style-type: none"> <li>• Displays the logos of the favorites and the station list.</li> <li>• Changes the category names of the station list.</li> <li>• Automatically updates the station list.</li> </ul>

● [SiriusXM] > [Account information] \*1

Setting	Content
[Active] or [No Subscription]	Displays the current contract status. If the service cannot be used, contact Customer Care according to the displayed screen.

- [SiriusXM] > [Preferences] \*1

Setting	Content
[Notifications]	Display notifications from SiriusXM® Satellite Radio.
[Block explicit]	Blocks harmful designated channels.
[Tune start]	Plays from the beginning of the track when a music channel is selected.
[Clear listening history]	Clears the SiriusXM Radio reception history.

- [Sports] \*1

Setting	Content
[Sports]	Notifications for the start of games involving sports teams registered as favorites.
NFL	Touch <b>[Edit]</b> to register your favorite NFL team.
MLB	Touch <b>[Edit]</b> to register your favorite MLB team.
NBA	Touch <b>[Edit]</b> to register your favorite NBA team.
NHL	Touch <b>[Edit]</b> to register your favorite NHL team.
College football	Touch <b>[Edit]</b> to register your favorite College football team.
College basketball	Touch <b>[Edit]</b> to register your favorite College basketball team.

- [Music] \*1

Setting	Content
[Artists & Songs]	Notification when an artist or song registered as a favorite is played on SiriusXM Radio.
[Edit]	Deletes the artist or song.
[Delete all]	Deletes all the artists or songs registered as favorites.

- [Help and support] \*1

Setting	Content
[Contact]	Displays the number of SiriusXM Radio Customer Care. Touch the number to call directly.
[Radio ID]	The Radio ID information required when calling SiriusXM Radio Customer Care is displayed.

Setting	Content
[Version]	Version information is displayed.

 **INFORMATION**


Turn the [PWR • VOL] knob during system voice guidance to adjust the volume of the voice guidance.

\*1: This function is not made available in some countries or areas.

## Changing Wi-Fi® settings

Changes Wi-Fi® settings.

- 1 Touch [⚙️] from the main menu.
- 2 In order, touch [Wi-Fi] > [Wi-Fi] from the sub menu.
- 3 Set each item.

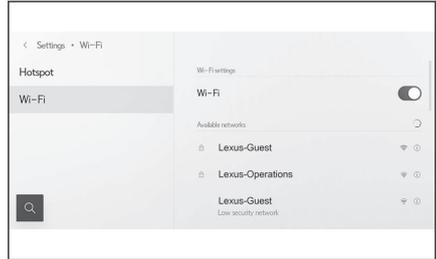

● "Wi-Fi settings"

Setting	Content
[Wi-Fi]	Enables or disables the Wi-Fi® function.

- A message may be displayed depending on the multimedia system settings. Perform the operation according to the guidance on the screen.
- Turning on [Wi-Fi] will display nearby networks that are available.
- Turning off [Wi-Fi] will disconnect the Wi-Fi® connection.

● "Available networks" ("Available networks" will display while [Wi-Fi] is on.)

Setting	Content
Name of network to connect to (Network SSID)	Connects to the network touched.
Name of network display (Network SSID) [ ⓘ ]	Displays the network information display.

- Network name may display as duplicate when more than one MAC address shares the same network.
- A maximum of 30 networks can be displayed. The list is automatically updated every six seconds.
- If there are devices using the same network name (Network SSID), it cannot identify which device to use. If using multiple devices, use different network names (Network SSID) for each device.

● Network information display (Displays when [ ⓘ ] for the network name is touched.)

Setting	Content
[Auto connect]*1	Turns on or off the setting to automatically connect when searching for networks.
"Network SSID"	Displays the network name (SSID).
"MAC address"	Displays the MAC address of the network.
"Security"	Displays the security protocol of the network.
"Frequency band"	Displays the network frequency.
[Forget this network]*1	Deletes the connection history of the selected network from the multimedia system. The deleted network will be recognized as a network which has never been connected to the system before.

- [Forget this network] does not disconnect the current Wi-Fi® network connection. The network information will not be remembered and not reconnect to this Wi-Fi® network when restarting Wi-Fi®.



#### INFORMATION

- The network connection history retains up to 20 items, deleting the oldest when a new one is saved.
- Insecure networks are not registered in the network connection history.

#### Related Links

[Precautions when using Wi-Fi® devices\(P.132\)](#)

[Connecting to a network using Wi-Fi® \(P.134\)](#)

\*1: Only networks with a connection history to the multimedia system are displayed.

### Setting Wi-Fi® Hotspot

The access point settings can be changed via the Wi-Fi® Hotspot function.

Use of this function requires a Wi-Fi® Hotspot subscription that is provided by Wi-Fi service provider.


Contact your Lexus dealer for details.

This function is not made available in some countries or areas.

#### INFORMATION

- This function cannot be used if the Wi-Fi® function is on.
- A total of ten devices (five using 2.4 GHz and five using 5.0 GHz) can be connected. Recommend connecting up to five devices at a time for optimum performance. If connected to Apple CarPlay or Android Auto over wireless, the limit will be five devices using 2.4GHz.

- 1 Touch [] from the main menu.
- 2 Touch sub menu [Wi-Fi] > [Hotspot] in this order.
- 3 Set each item.

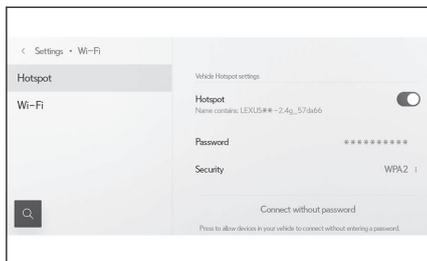

#### ● "Vehicle Hotspot settings"

Setting	Content
[Hotspot]	Enables or disables the Wi-Fi® Hotspot function.
[Password] *1	Changes the access point password.
[Security] *1	Changes the security protocol for the access point.
[Connect without password] *1	<p>Accepts connections to the access point with the simple setup.</p> <ul style="list-style-type: none"> <li>• No selections can be made when the maximum number of devices are already connected.</li> <li>• This cannot be selected if the acceptance time is exceeded.</li> <li>• This is only for WPS supported devices.</li> </ul>

- A message may be displayed depending on the multimedia system settings. Follow the instructions on the screen.

#### INFORMATION

- When changing the setting, the Wi-Fi® Hotspot function will need to be restarted. All devices connected via Wi-Fi® will be disconnected.
- The following guidelines are recommended when setting a password, to prevent a third party from gaining unauthorized access.
  - Use at least 13 characters
  - Use a mixture of letters and numbers
  - Change it regularly
  - If the password is written down, do not store it out in the open
  - Do not reuse the same password, or use a similar password
  - Do not use the vehicle name or license plate number, or a common word found in the dictionary or the like
  - Do not substitute letters for common dictionary words in a way that would be easy to guess (for example, using "c@t" instead of "cat")

---

#### Related Links

[Precautions when using Wi-Fi® devices\(P.132\)](#)

[Establishing a connection to Wi-Fi® Hotspot\(P.137\)](#)

[Functional overview\(P.258\)](#)

\*1: This will only display when [Hotspot] is turned on.

## Setting Bluetooth® devices

How to use the multimedia system and the connected Bluetooth® device can be set.

### INFORMATION

- Settings details are set separately for each individual Bluetooth® device.
- Audio may skip if hands-free calling is selected while playing Bluetooth® audio.
- Depending on the Bluetooth® device model, it may be necessary to perform operations on the Bluetooth® device.
- A Bluetooth® device cannot be selected during an emergency call.
- Settings cannot be selected while driving.
- Settings may not be selectable depending on the status of the Bluetooth® device.

- 1 Touch [⚙️] from the main menu.
- 2 Touch [Bluetooth & Devices].
- 3 Touch the Bluetooth® device to configure from the sub menu.

Nothing will display unless at least one Bluetooth® device is registered.

- 4 Set each item.



Setting	Description
[Use for phone]	Enables or disables the hands-free call function. *1
[Use for media]	Enables or disables the audio function. *1
[Use for Apple CarPlay]	Enables or disables the Apple CarPlay function. *1
[Use for Android Auto]	Enables or disables the Android Auto function. *1*2

- "General"

Setting	Description
[Sort contacts by]	The display of names registered in your contacts can be changed as follows. <ul style="list-style-type: none"> <li>Sort contacts by the first name.</li> <li>Sort contacts by the last name.</li> </ul>
[Do not disturb]	The following settings are available for hands-free calling for incoming calls.*3 <ul style="list-style-type: none"> <li>Set to [Off] to enable notification by ringtone and display.</li> <li>Set to [Silent] to disable notification by ringtone.</li> <li>Set to [On] to decline incoming calls and disable notification by audio and display.</li> </ul>
[Auto read messages]	Enables or disables the automated message read out function.
[Clear call history]	Deletes hands-free call history data.*4

● "Syncing"

Setting	Description
[Sync contacts]	Enables or disables automatic transfer of contacts, favorites, and history to the multimedia system. When the setting is switched from OFF to ON, automatic transfer of the phone book starts. Favorites may not be transferred depending on the connected cellular phone even if it is supported.
[Set as secondary device]	Sets the device as a secondary device.*5
[Remove secondary device setting]	Removes the device as a secondary device.
[Connect]	Connects the multimedia system to a Bluetooth® device.
[Disconnect]	Disconnects a Bluetooth® device from the multimedia system.
[Forget]	Allows registered Bluetooth® devices to be deleted.

— Related Links —

[Precautions when using Bluetooth® devices\(P.118\)](#)

## 2-12. Bluetooth® Settings

---

Bluetooth® specifications and compatible profiles(P. 121)

Precautions for hands-free calling(P. 226)

Precautions for Bluetooth® audio playback (P. 199)

Precautions when using Apple CarPlay and Android Auto(P. 140)

Setting a Bluetooth® device as a primary device(P. 130)

Setting a Bluetooth® device as a secondary device(P. 131)

Registering a driver(P. 67)

Changing and registering a driver (P. 74)

\*1: Only displayed when the Bluetooth® device can execute this function. Toggling the function on or off will display or hide related functions, or turn them on or off. This cannot be used for calls or audio while Apple CarPlay or Android Auto is set to on. The same also applies in reverse. Connection does not start immediately just by switching. To start connection, touch [**Connect**].

\*2: If the [**Use for Android Auto**] settings are switched OFF while using Android Auto, [**Use for phone**] settings will be switched ON.

\*3: It cannot be used for the phone function of Apple CarPlay and Android Auto. While Android Auto is connected, it cannot be used for the hands-free function of multimedia.

\*4: Displayed when a cellular phone with [**Sync contacts**] turned off is connected.

\*5: This can be set while the driver is identified and the cellular phone has not been set as the primary device. Touch [**Set as secondary device**] to set the device as the secondary device. The priority order for connecting Bluetooth® devices is primary device, secondary device, and latest device in the connection history.

## Changing the screen settings of the rear seat entertainment system\*1

Change the color mode, brightness, and contrast of the Rear Seat Entertainment System screen.

### 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select [  ] from the main menu.
- Select [  ] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.

### 2 Select [Display] or [Display (Common)].


### 3 Set each item.

**[Synchronized]** : Turns on or off linking of the screen color mode with the front seat audio system. When turned on, the color mode setting of the rear seat display matches that of the front seat display.

**[Light]/[Dark]**\*2 : Changes the screen color mode.

**[Brightness]** : Adjust the brightness by moving the slider or selecting [ + ] and [ - ].

**[Contrast]** : Adjust the contrast by moving the slider or selecting [ + ] and [ - ].

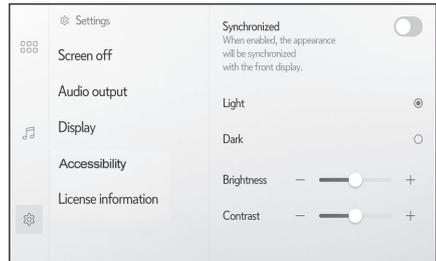

\*1: If equipped

\*2: This is not displayed while [Synchronized] is on.

## Adjusting the image quality of the video and image source during playback on the Rear Seat Entertainment System

Changes the brightness, contrast, color tone, and color of the video and image source during playback. Settings can be changed while watching the video or image source from the rear seat.

### 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select [⚙️] from the main menu.
- Select [⚙️] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.

### 2 Select [Display (Video)].


### 3 Set each item.

**[Brightness]** : Adjust the brightness by moving the slider or selecting [ + ] and [ - ].

**[Contrast]** : Adjust the contrast by moving the slider or selecting [ + ] and [ - ].

**[Tone]** <sup>\*1</sup> : Adjust the color tone by moving the slider or selecting [ + ] and [ - ].

**[Color]** <sup>\*1</sup> : Adjust the color by moving the slider or selecting [ R ] and [ G ].

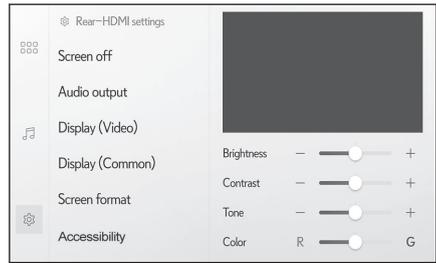

#### INFORMATION

The following restrictions apply when the vehicle lights are illuminated: <sup>\*2</sup>

- The brightness of the passenger seat display cannot be adjusted greater than the default value while the passenger seat position is at the extra front <sup>\*3</sup>.
- When the passenger seat is moved to the extra front <sup>\*3</sup> while the brightness of the passenger seat display is greater than the default value, the brightness is set to the default value.

<sup>\*1</sup>: Not displayed when rear seat source is [Rear-Miracast®].

<sup>\*2</sup>: Only on passenger's side of 4-passenger.

<sup>\*3</sup>: Please refer to the "OWNER'S MANUAL" for details on how to adjust the seat position.

## Switching the screen mode of the Rear Seat Entertainment System

Change the screen mode during video source playback.

### 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select [  ] from the main menu.
- Select [  ] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.


The Rear Seat Entertainment System settings screen is displayed.

### 2 Select [Screen format]\*1.

### 3 Select the desired screen mode.

[**Normal**] : Displays the input video in a 4:3 aspect ratio.

[**Stretched**] : Enlarges the input video display to fit the screen.

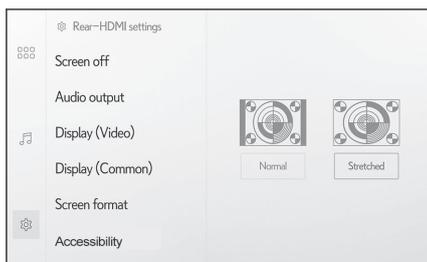

\*1: Depending on the selected source, this may not be displayed.

## Using the audio read aloud function

This function reads aloud the operations of the selected button. Audio read aloud is only output to headphones.

- 1 **Connect the headphones.**
- 2 **Perform any of the following operations to display the Rear Seat Entertainment System setting screen.**

- Select [  ] from the main menu.
- Select [  ] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.


- 3 **Select [Accessibility].**

- 4 **Set each item.**

[**Voice guidance**] : Turns on or off the read aloud function.

[**Guidance volume**] \*1 : Adjusts the read aloud volume.

[**Reset settings**] : Resets the settings.

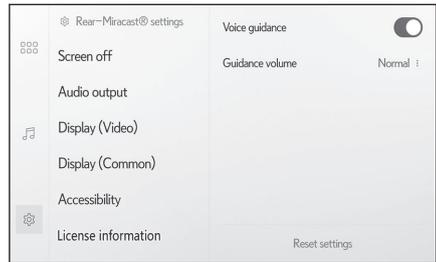

### INFORMATION

- The read aloud function can be turned on or off and the volume can be set independently for the left and right displays.
- The following operations are not read by the voice guidance.
  - Start screen
  - Track names, artist names, and other content-dependent text
  - Operations on the rear multi-operation panel
- Touch panel operations change as follows while the read aloud function is on.
 

When a button on the screen is touched, the name of the touched button is read aloud. When the button is touched again within about 10 seconds, its name is read aloud again, and the operation is performed. If another button is touched after touching the first button, or the same button is touched after about 10 seconds, the name of the button is read aloud, but the operation is not performed.
- Cursor operations change as follows while the read aloud function is on. \*2

When the cursor is moved to a button or menu item on the screen, a description of the item at the cursor position is read aloud. When a button or menu item is selected, its name is read aloud, and the operation is performed.

- Messages displayed on the screen are read aloud.
- If an invalid operation is performed, a message indicating that is read aloud.

\*1: This is not displayed while [**Voice guidance**] is off.

\*2: Vehicles with rear multi-operation panel

## Changing the rear seat HDMI settings on the Rear Seat Entertainment System

Check that the source is set to **[Rear-HDMI]** in advance.

### 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select  from the main menu.
- Select  on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.

### 2 Select **[Rear-HDMI]**.

### 3 Set each item.

**[Enable HDMI control]** \*1 : Turns on or off the operation of the HDMI device using the Rear Seat Entertainment System. Turning on enables operation of the HDMI device from the Rear Seat Entertainment System.


**[One Touch Play]** \*2 : This links source switching on the Rear Seat Entertainment System with turning on the HDMI device. Turning on enables the Rear Seat Entertainment System to be turned on and the source to be switched to **[Rear-HDMI]** automatically when the HDMI device is turned on.

**[System Standby]** \*2 : This links source switching on the Rear Seat Entertainment System with turning off the HDMI device. Turning on enables the HDMI device to be turned off automatically when the Rear Seat Entertainment System source is switched from **[Rear-HDMI]** to another source.

**[Overscan]** : Turns on or off the overscan function. Turning on hides skewing and distortion that occurs at the edge of the video. (Some parts of the image might become cut off)

This can be set independently for the left and right displays.

**[Reset settings]** : Resets the settings.

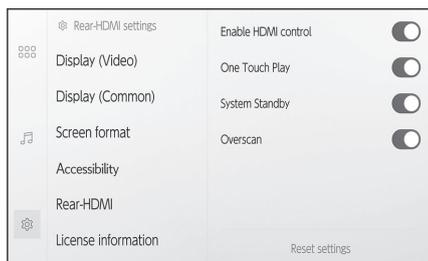

\*1: Depending on the device, **[Enable HDMI control]** may not be supported, or it may not operate as expected even if it is supported.

\*2: This is not displayed while **[Enable HDMI control]** is off.

### — Related Links —

---

[Connecting an HDMI device to the Rear Seat Entertainment System \(5-passenger/7-passenger\)\(P. 46\)](#)

[Connecting an HDMI device to the Rear Seat Entertainment System \(4-passenger\)\(P. 47\)](#)

[Playing rear seat HDMI media on the Rear Seat Entertainment System\(P. 219\)](#)

### Checking the Rear Seat Entertainment System license information

#### 1 Perform any of the following operations to display the Rear Seat Entertainment System setting screen.

- Select [] from the main menu.

- Select [] on the Rear Seat Entertainment System advanced operation screen on the rear multi-operation panel.

The Rear Seat Entertainment System settings screen is displayed.

#### 2 Select [License information].

The software information is displayed.

## Apps settings

Your navigation and multimedia system now have Apps that integrated in the system. These apps come pre-installed to provide a seamless experience without the need to connect your mobile device.

- 1 Touch [  ] from the main menu.
- 2 Touch [Apps].
- 3 Touch the desired item.



Setting	Description
[General]	Under some circumstances it is possible that the App may not be able to communicate and may require its memory to be cleaned out. The [Reinstall all Apps] will enable you to do this.
[Remote Connect]	For vehicles that are Remote capable, you may use the Remote feature from your mobile device to lock, unlock and many more features. When a mobile device requests a remote activation to a vehicle, you may select this feature and complete the authorization process.



## 3-1. Using the Bluetooth® function

- Precautions when using Bluetooth® devices..... **118**
- Bluetooth® specifications and compatible profiles ..... **121**
- Registering a Bluetooth® device from the multimedia system ..... **122**
- Deleting a registered Bluetooth® device ..... **125**
- Connecting with a Bluetooth® device ..... **126**
- Setting a Bluetooth® device as a primary device..... **130**
- Setting a Bluetooth® device as a secondary device..... **131**

## 3-2. Connecting to a Wi-Fi® network

- Precautions when using Wi-Fi® devices..... **132**
- Connecting to a network using Wi-Fi® ..... **134**
- Establishing a connection to Wi-Fi® Hotspot..... **137**

## 3-3. Using Apple CarPlay and Android Auto

- Precautions when using Apple CarPlay and Android Auto ..... **140**
- Using Apple CarPlay with an unregistered smartphone..... **143**

- Using Apple CarPlay with a registered smartphone ..... **146**
- Using Android Auto with an unregistered smartphone.. **149**
- Using Android Auto with a registered smartphone ..... **152**
- When Apple CarPlay or Android Auto might be malfunctioning..... **155**

#### Precautions when using Bluetooth® devices

Pay special attention to the following information when using a Bluetooth® device on the multimedia system.

##### INFORMATION

- Bluetooth® is a best-effort function that performs wireless communication with the 2.4 GHz band frequency.
- Simultaneous use of Wi-Fi® using the same 2.4 GHz band wireless communication as Bluetooth® could cause mutual interference.
- Mutual interference between Bluetooth® and Wi-Fi® could cause issues such as garbled video, audio skipping, or reduced communication speed.

The effect of interference will be reduced if a Bluetooth® device is connected. If a Bluetooth® device has been registered, connecting with the registered device could improve this issue. (The connection of a Bluetooth® device can be checked with by the status icon on the multimedia system screen.)

- Using a Bluetooth® cellular phone simultaneously with a wireless device could negatively affect communication for each.
- The simultaneous use of a Wi-Fi® function (Wi-Fi®, Wi-Fi® Hotspot) and Bluetooth® device that use the same 2.4 GHz band for wireless communication could negatively affect communication for each. Turning off the Wi-Fi® function will allow for use without issue.
- When a Bluetooth® device is connected via Bluetooth®, its battery will be consumed more quickly than normal.
- Bluetooth® connections will be disconnected during emergency calls. Any disconnected Bluetooth® devices will be reconnected once the emergency call is finished.

##### WARNING

- For safety, the driver should not operate the cellular phone itself while driving when using hands-free calling.
- Stop the vehicle in a safe location prior to calling. If a call is received while driving, be sure to drive safely and keep the call short.

##### NOTICE

- Do not use a Bluetooth® device near the multimedia system. Coming too close could worsen sound quality or the connection.

**⚠ NOTICE**

- Do not leave a cellular phone inside the vehicle. The inside of the vehicle can become hot, which could cause the cellular phone to malfunction.

**■ Users with pacemakers or other electrical medical devices**

Observe the following precautions with regard to radio waves during Bluetooth® communication.

**⚠ WARNING**

- The vehicle antenna for Bluetooth® communication is built into the vehicle near the instrument panel center.
- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

**■ When used simultaneously with Bluetooth® audio**

- The following behaviors will occur if a Bluetooth®-compatible device (cellular phone) is used hands-free and simultaneously with Bluetooth® audio.
  - The Bluetooth® connection of the cellular phone may be disconnected.
  - There is possibility that background noise may exist during a hands-free phone call.
  - Hands-free call operation may lag.
- Audio may skip if the communication device selected for hands-free calling is changed during Bluetooth® audio playback.
- The portable device connection may be disconnected when transferring contact data. It will be reconnected once transfer is complete. (Reconnection may not be possible for some models)
- It may not be possible to make both a hands-free connection and audio connection, even for cellular phones that support both hands-free connections and audio connections.

### 3.1. Using the Bluetooth® function

---

- For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website: <https://lexusconnected-technologysupport.com/>

---

#### Related Links

Precautions when using Wi-Fi® devices(P. 132)

Precautions for Bluetooth® audio playback (P. 199)

Precautions for hands-free calling(P. 226)

Status icons(P. 21)

## Bluetooth® specifications and compatible profiles

The multimedia system supports the following specifications and compatible profiles. Operation is not guaranteed for all Bluetooth® devices.

### ■ Supported Bluetooth® specifications

Bluetooth® Core Specification Ver. 5.0

### ■ Compatible profiles

#### ● HFP (Hands Free Profile) supported versions: Ver. 1.7.2

This is a profile to allow hands-free phone calls using a cellular phone. It has outgoing and incoming call functions.

#### ● PBAP (Phone Book Access Profile) supported versions: Ver. 1.2.3

Profile for synchronizing data such as contact data and call history

#### ● MAP (Message Access Profile) supported versions: Ver. 1.4.2

This is a profile to use phone message functions.

#### ● SPP (Serial Port Profile) supported versions: Ver. 1.2

- Profile for converting Bluetooth®-equipped devices as virtual serial ports
- Profile for linking smartphones

#### ● A2DP (Advanced Audio Distribution Profile) supported versions: Ver. 1.3.2

This is a profile to transmit stereo audio or high quality sound to the audio system.

#### ● AVRCP (Audio/Video Remote Control Profile) supported versions: Ver. 1.6.2

Profile for controlling audio remotely

## 3.1. Using the Bluetooth® function

### Registering a Bluetooth® device from the multimedia system

A cellular phone or portable device must be registered in order to use hands-free calling or Bluetooth® audio. Once registration is complete, Bluetooth® will automatically be connected each time the multimedia system is started.

When Apple CarPlay or Android Auto is connected via USB, the device will be automatically registered.

If no Bluetooth® device is connected, the registration screen can also be displayed by pressing and holding the [] switch on the steering.

#### INFORMATION

- A cellular phone can be registered as both a hands-free phone and Bluetooth® audio device.
- Up to 5 Bluetooth® devices can be registered. However, a maximum of 2 devices can be used as a hands-free phone. (Setting of a driver is required to connect 2 hands-free phones.)
- Refer to the Bluetooth® device's instruction manual for information on how to operate the Bluetooth® device.
- Registration will need to be repeated once for each Bluetooth® device if multiple Bluetooth® devices will be used.
- A PIN code is a verification code used when registering a Bluetooth® device to the multimedia system.
- Dialing may be locked out after connecting, depending on the cellular phone settings. Cancel the auto lock function on the cellular phone before use.
- If another device is registered while connected to a cellular phone or portable device, the connection to the portable device or cellular phone playing audio will be disconnected.
- For safety reasons, devices cannot be registered while driving.
- If Bluetooth® device registration cannot be completed, restart the Bluetooth® device.

1 Touch [] from the main menu.


2 Touch [Bluetooth & Devices].

If no device is registered, Procedure 4.

3 Touch [Add another device].

While a device is connected to the multimedia system, the confirmation screen for disconnecting the device may be displayed. Disconnect the device to perform registration.

## 4 Touch [Search for devices].

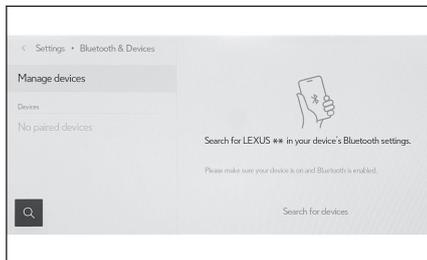

## 5 Touch the device to register from the main area.

- The Bluetooth® address may be displayed instead of the device name.
- Certain models of Bluetooth® devices may not be displayed in the device list, unless a certain screen is displayed on the Bluetooth® device. Refer to the Bluetooth® device's instruction manual for details.

## 6 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth® device, and then touch [OK].

- Some Bluetooth® devices may need to be operated to complete registration.
- You may be prompted to install the Lexus Application on your phone. Please follow the displayed instruction.
- Primary device settings may be displayed. Perform the operation according to the screen guidance.
- The Apple CarPlay or Android Auto settings may be displayed. The Apple CarPlay or Android Auto screen will be displayed if the use of either is enabled.
- A message indicating that connection is complete is displayed, and the name of the registered Bluetooth® device is displayed in the sub menu.
- If an operation failed screen is displayed, follow the operation instructions on the screen.

---

**Related Links**


---

[Registering a driver\(P. 67\)](#)

[Changing and registering a driver \(P. 74\)](#)

[Precautions when using Apple CarPlay and Android Auto\(P. 140\)](#)

### Registering from a Bluetooth® device

If the Bluetooth® device cannot be found by searching with the multimedia system, register by searching for the multimedia system from the Bluetooth® device.

- 1 Touch [⚙️] from the main menu.
- 2 Touch [Bluetooth & Devices].

### 3.1. Using the Bluetooth® function

---


If no device is registered, Procedure 4.

#### 3 Touch [Add another device].

While a device is connected to the multimedia system, the confirmation screen for disconnecting the device may be displayed. Disconnect the device to perform registration.

#### 4 Register the multimedia system from the Bluetooth® device to be used.

- Perform the operation according to the operating procedure of the Bluetooth® device.
- Be sure to display this Bluetooth® connection screen before performing registration on the Bluetooth® device.

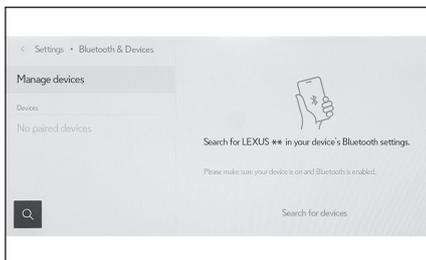

#### 5 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth® device, and then touch [OK].

- Some Bluetooth® devices may need to be operated to complete registration.
- You may be prompted to install the Lexus Application on your phone. Please follow the displayed instruction.
- Primary device settings may be displayed. Perform the operation according to the screen guidance.
- The Apple CarPlay or Android Auto settings may be displayed. The Apple CarPlay or Android Auto screen will be displayed if the use of either is enabled.
- A message indicating that connection is complete is displayed, and the name of the registered Bluetooth® device is displayed in the sub menu.
- If an operation failed screen is displayed, follow the operation instructions on the screen.

---

#### Related Links

[Registering a driver\(P. 67\)](#)

[Changing and registering a driver \(P. 74\)](#)


[Precautions when using Apple CarPlay and Android Auto\(P. 140\)](#)

## Deleting a registered Bluetooth® device

Registered Bluetooth® devices can be deleted.

- 1 Touch [] from the main menu.
- 2 Touch [Bluetooth & Devices].
- 3 Touch the Bluetooth® device to be deleted from the sub menu.
- 4 Touch [Forget].
- 5 Touch [Forget].

A device that has been set as the primary device of another user cannot be deleted.

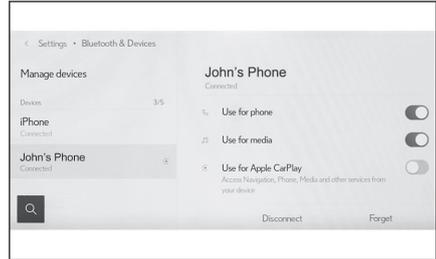

### INFORMATION

- A registered cellular phone cannot be deleted during an emergency call.
- It may not be possible to delete on the first try, depending on the status of the Bluetooth® device.

### Related Links

[Setting a Bluetooth® device as a primary device\(P. 130\)](#)

[Registering a driver\(P. 67\)](#)

[Changing and registering a driver \(P. 74\)](#)

### Connecting with a Bluetooth® device

Connection with a Bluetooth® device is required to use various function of the multimedia system. There are two connection methods, automatic and manual.

#### INFORMATION

- Refer to the Bluetooth® device's instruction manual for information on how to operate the Bluetooth® device.
- If multimedia system behavior is unstable when connecting a cellular phone, end the call and try connecting again.
- A connection cannot be made if Bluetooth® on the Bluetooth® device is not turned on.
- When connection of the Bluetooth® device is completed, a message will be displayed at the top of the screen.
- While the Bluetooth® device is connected, the Bluetooth® connection status icon is displayed.
- The display area may illuminate and stay on while the engine switch is turned on, depending on the model of cellular phone. If this occurs, turn illumination off on the cellular phone. (For information on setting, refer to the cellular phone instruction manual)
- The Bluetooth® function cannot be used on the device connected as Apple CarPlay.
- The Bluetooth® function except the hands-free function cannot be used on the device connected as Android Auto.

#### ■ Bluetooth® reconnection

If a Bluetooth® connection that was once established is disconnected while the engine switch is turned on, a reconnection will be automatically attempted.

#### ■ Number of Bluetooth® device connections

- When a driver is set  
Up to two hands-free phones and one audio device will be connected automatically. (The hands-free phone and audio device can also be set as the same device.)
- When a driver is not set  
Up to one hands-free phone and one audio device will be connected automatically. (The hands-free phone and audio device can also be set as the same device.)

**INFORMATION**

- Try connecting manually if reconnection fails.
- If Apple CarPlay is connected, you may not be able to reconnect the Bluetooth® connection.

**Related Links**

[Status icons\(P. 21\)](#)

[Registering a driver\(P. 67\)](#)

[Changing and registering a driver \(P. 74\)](#)

[Manually connecting Bluetooth® devices\(P.128\)](#)

**Automatically connecting Bluetooth® devices**

The multimedia system will automatically connect to Bluetooth® devices in the set priority order each time the engine switch is turned from off to on.

- When a driver is set

Automatically connects in order of the primary device, secondary device, and then devices in order of most recent connection.

Up to two hands-free phones and one audio device will be connected automatically. (The hands-free phone and audio device can also be set as the same device.)

- When a driver is not set

Automatically connects in order of most recent connection.

Up to one hands-free phone and one audio device will be connected automatically. (The hands-free phone and audio device can also be set as the same device.)

Try connecting manually if reconnection fails.

**INFORMATION**

The Bluetooth® device may need to be operated, depending on the model of Bluetooth® device.

**Related Links**

[Setting a Bluetooth® device as a primary device\(P.130\)](#)

[Setting a Bluetooth® device as a secondary device\(P.131\)](#)

[Registering a driver\(P. 67\)](#)

## 3.1. Using the Bluetooth® function

Changing and registering a driver (P. 74)

### Manually connecting Bluetooth® devices

In order to connect another Bluetooth® device, or if automatic connection fails, it is possible to connect to registered Bluetooth® devices.

1 Touch [⚙️] from the main menu.

2 Touch [Bluetooth & Devices] from the sub menu.


The device search screen will display on the multimedia system if no Bluetooth® devices are registered. Register the Bluetooth® device.

3 Touch the Bluetooth® device to connect to from the sub menu.

If the Bluetooth® device to connect to is not listed in the sub menu, register the Bluetooth® device.

4 Touch [Connect] from the main area.

A confirmation screen may be displayed if another device is already connected.

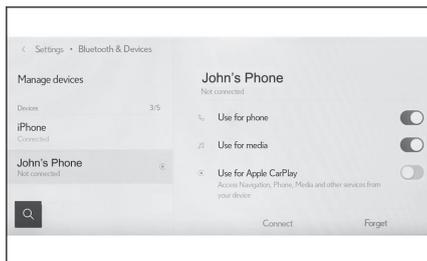

#### INFORMATION

It may not be possible to connect on the first try, depending on the status of the Bluetooth® device. If this occurs, try connecting again after a while.

#### Related Links

[Registering a Bluetooth® device from the multimedia system\(P. 122\)](#)

### Disconnecting Bluetooth® devices


Connected Bluetooth® devices can be disconnected from the multimedia system.

1 Touch [⚙️] from the main menu.

2 Touch [Bluetooth & Devices] from the sub menu.

3 Touch the Bluetooth® device to be disconnected from the sub menu.

- 4 Touch [Disconnect] from the main area.

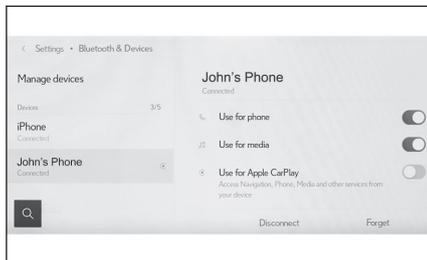

## 3.1. Using the Bluetooth® function

### Setting a Bluetooth® device as a primary device

Setting a Bluetooth® device as the primary device makes it the first to be connected during automatic connection.


- A Bluetooth® device that supports HFP must be connected to the multimedia system.
- Registration of a driver is required to set a device as the primary device.

#### INFORMATION

A Bluetooth® device set as the primary device of another user cannot be set as the primary device.

- 1 Touch [] from the main menu.
- 2 Touch [Personal info].
- 3 Touch [Link devices] from the main area.

The device search screen will be displayed if there is no Bluetooth® device that can be set as the primary device. Search for the Bluetooth® device and newly register it to the multimedia system. After the device is newly registered, it can be set as the primary device.

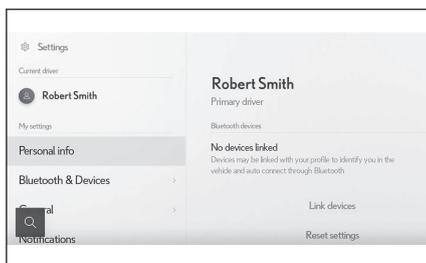

- 4 Select the Bluetooth® device to set as the primary device.

Disconnect the currently connected Bluetooth® device, then connect the primary device and secondary device.

#### Related Links

[Automatically connecting Bluetooth® devices\(P. 127\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

[Registering a driver\(P. 67\)](#)

[Changing and registering a driver \(P. 74\)](#)

[Registering a Bluetooth® device from the multimedia system\(P. 122\)](#)

## Setting a Bluetooth® device as a secondary device

By setting a Bluetooth® device as a secondary device, it will be recognized as a secondary device when connected.

- The same Bluetooth® device cannot be set as a primary device and secondary device for a driver.
- A Bluetooth® device that supports HFP must be connected to the multimedia system.
- Registration of a driver is required to set a device as the secondary device.

1 Touch [⚙️] from the main menu.

2 Touch [Bluetooth & Devices] from the sub menu.


The device search screen will display if no Bluetooth® devices are registered. Register a Bluetooth® device.

3 Touch the Bluetooth® device to set as the secondary device.

If the Bluetooth® device to be set is not listed, register the Bluetooth® device.

4 Touch [Set as secondary device] from the main area.

This will change to a [Remove secondary device setting] if the device is already set as a secondary device.

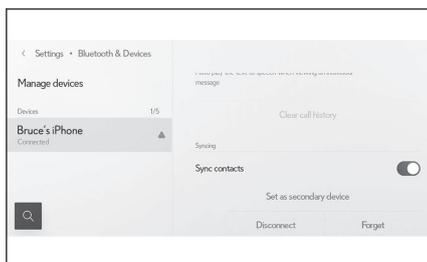

### Related Links

[Automatically connecting Bluetooth® devices\(P.127\)](#)

[Setting Bluetooth® devices\(P.104\)](#)

[Registering a driver\(P.67\)](#)

[Changing and registering a driver \(P.74\)](#)

### Precautions when using Wi-Fi® devices

Pay special attention to the following information when using the Wi-Fi® of the multimedia system.

#### ■ Users with pacemakers or other electrical medical devices

Observe the following precautions with regard to radio waves during Wi-Fi® communication.

#### ▲ WARNING

- Use Wi-Fi® devices only when safe and legal to do so.
- The vehicle antenna for Wi-Fi® communication is built into the vehicle near the instrument panel center.
- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Wi-Fi® antennas.  
The radio waves may affect the operation of such devices.
- Before using Wi-Fi® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.  
Radio waves could have unexpected effects on the operation of such medical devices.

#### ■ Using Wi-Fi® and Bluetooth® simultaneously

Wi-Fi® is a best-effort function that performs wireless communication with the 2.4 GHz or 5 GHz band frequency. Simultaneous use of Bluetooth® using the same 2.4 GHz band wireless communication as Wi-Fi® (2.4 GHz) could cause mutual interference.

#### ■ Things to know about Wi-Fi®

#### □ INFORMATION

- Wi-Fi®, Miracast®, Wi-Fi Direct® and WMM® are registered trademarks of Wi-Fi Alliance®.
- Wi-Fi Protected Setup™, Wi-Fi CERTIFIED™, WPA™, WPA2™ and WPA3™ are trademarks of Wi-Fi Alliance®.
- This is a best-effort function.

- Use this function when connecting to a portable device. Connections to devices other than portable devices may be disconnected, depending on the environment.
- Leaving the Wi-Fi® area will disconnect communication.
- Leaving the DCM area will disconnect Wi-Fi® Hotspot function communication.
- If a connected device is taken out of the Wi-Fi® connection area, the connection will be severed.
- If the vehicle is driven out of the cellular communication coverage area, connecting to the internet via the Wi-Fi® Hotspot will not be possible.
- If a Bluetooth® device is used while a device is connected using the Wi-Fi® Hotspot function, the communication speed may decrease.
- Depending on the Wi-Fi® Hotspot environment, communication may be slow or impossible.
- If the vehicle is near a radio antenna, radio station or other source of strong radio waves and electrical noise, communication may be slow or impossible.
- The communication speed may drop or it even may become impossible to use this service in certain usage environments (due to factors such as the wireless antenna location and any wireless devices being used nearby).

### Compatible Wi-Fi® communication protocols

IEEE 802.11b/g/n (2.4GHz)

IEEE 802.11a/n/ac (5 GHz)

### Compatible security protocols

- WEP
- WPA™
- WPA2™
- WPA3™

---

### Related Links

[Precautions when using Bluetooth® devices\(P. 118\)](#)

[Status icons\(P. 21\)](#)

[Changing Wi-Fi® settings\(P. 100\)](#)

[Setting Wi-Fi® Hotspot\(P. 102\)](#)

[Functional overview\(P. 258\)](#)

## 3-2. Connecting to a Wi-Fi® network

### Connecting to a network using Wi-Fi®

The multimedia system can be connected to the Internet by connecting to a Wi-Fi® network.

This function is not made available in some countries or areas.

#### INFORMATION

- The reception level is displayed at the top of the screen.
- This function cannot be used while the Wi-Fi® Hotspot is on. Also, this function cannot be used while Apple CarPlay or Android Auto is connected wirelessly.
- Some smartphone models may require establishing a connection each time.
- If networks are detected while the Wi-Fi® function is on, automatic connection will prioritize connecting to the network with the most recent connection.

#### Related Links

[Changing Wi-Fi® settings\(P.100\)](#)

### Connecting to Wi-Fi® using a smartphone

Refer to the following operation example to establish a Wi-Fi® connection using a smartphone that supports Wi-Fi® tethering. For details on setting up tethering, refer to documents such as the instruction manual for the smartphone. Some smartphone models may require establishing a connection each time.

- 1 Touch  from the main menu.
- 2 In order, touch [Wi-Fi] > [Wi-Fi] from the sub menu.
- 3 Set [Wi-Fi] in the main area to on.

- A message may be displayed depending on the multimedia system settings. Perform the operation according to the screen guidance.
- Turning on [Wi-Fi] will display nearby networks that are available.



- 4 Select the name of the network that matches the name being broadcasted by the smartphone.
  - Network name may display as duplicate when more than one MAC address shares the same network.

- A maximum of 30 networks can be displayed. The list is automatically updated every six seconds.
- If there are devices using the same network name (Network SSID), it cannot identify which device to use. Use different network names (Network SSID) if using multiple devices.
- No selections can be made while driving.

## 5 Enter the corresponding password for this network.

- If no password is set, the connection will be made after selecting the network.
- If networks are detected with the automatic connection setting on, they will be connected to automatically.

### INFORMATION

The network connection history retains up to 20 items, deleting the oldest when a new one is saved.


## Establishing a Wi-Fi® connection to an available network

Connect to the Internet from a nearby network using Wi-Fi®.

Confirm the password of the network to be used in advance.

- 1 Touch [] from the main menu.
- 2 In order, touch [Wi-Fi] > [Wi-Fi] from the sub menu.
- 3 Set [Wi-Fi] in the main area to on.

- A message may be displayed depending on the multimedia system settings. Perform the operation according to the screen guidance.
- Turning on [Wi-Fi] will display nearby networks that are available.

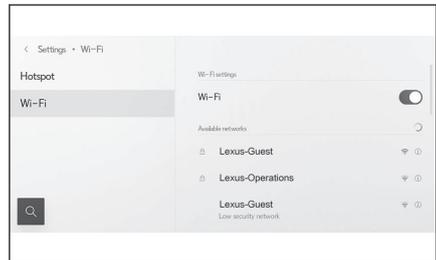

- 4 Touch the network to be connected to from [Available networks] in the main area.

- Network name may display as duplicate when more than one MAC address shares the same network.
- A maximum of 30 networks can be displayed. The list is automatically updated every six seconds.
- If there are devices using the same network name (Network SSID), it cannot identify which device to use. Use different network names (Network SSID) if using multiple devices.
- No selections can be made while driving.

## 3-2. Connecting to a Wi-Fi® network

- Touch [  ] for the applicable network to check network details.

### 5 Enter the corresponding password for this network.

- If no password is set, the connection will be made after selecting the network.
- If networks are detected with the automatic connection setting on, they will be connected to automatically.


#### INFORMATION

The network connection history retains up to 20 items, deleting the oldest when a new one is saved.

## Disconnecting Wi-Fi®

Wi-Fi® can be disconnected by turning off the Wi-Fi® function.

- 1 Touch [  ] from the main menu.
- 2 In order, touch [Wi-Fi] > [Wi-Fi] from the sub menu.
- 3 Set [Wi-Fi] in the main area to off.

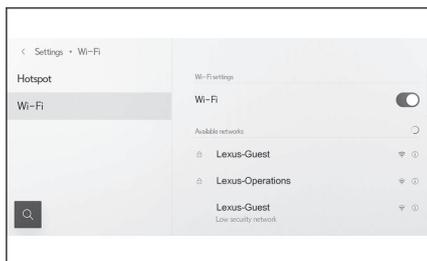

## Establishing a connection to Wi-Fi® Hotspot

The Wi-Fi® Hotspot function can be used to set the Wi-Fi® access point and connect to a Wi-Fi® device.

This function is not made available in some countries or areas.

Use of this function requires a Wi-Fi® Hotspot subscription that is provided by Wi-Fi® service provider.

Contact your Lexus dealer for details.

### INFORMATION

- This function cannot be used while the Wi-Fi® function is on.
- A total of ten devices (five using 2.4 GHz and five using 5.0 GHz) can be connected. Recommend connecting up to five devices at a time for optimum performance. If connected to Apple CarPlay or Android Auto over wireless, the limit will be five devices using 2.4 GHz.

- 1 Turn on the Wi-Fi® function of the Wi-Fi® device.
- 2 Touch [⚙️] from the main menu.
- 3 In order, touch [Wi-Fi] > [Hotspot] from the sub menu.
- 4 Turn on [Hotspot] in the main area.

A message may be displayed depending on the multimedia system settings. Perform the operation according to the screen guidance.

- 5 Connect to Wi-Fi® Hotspot of the multimedia system from the Wi-Fi® device.

- Refer to the Wi-Fi® device's instruction manual on how to connect using the Wi-Fi® device.
- The network name will be displayed under the Hotspot in the main area.
- The network password will be displayed in the main area. If the password is long, some of the characters may be omitted from the display. Touch the screen to check on the password edit screen.



### Related Links

[Setting Wi-Fi® Hotspot\(P.102\)](#)

## 3-2. Connecting to a Wi-Fi® network

Functional overview(P. 258)

### Connecting to Wi-Fi® Hotspot using easy setup

If the Wi-Fi® device is compatible with Wi-Fi Protected Setup™, connecting a device is even easier.

- 1 Touch [⚙️] from the main menu.
- 2 In order, touch [Wi-Fi] > [Hotspot] from the sub menu.
- 3 Turn on [Hotspot] in the main area.

A message may be displayed depending on the multimedia system settings. Perform the operation according to the screen guidance.


- 4 Touch [Connect without password] from the main area.

The multimedia system will begin accepting connections with easy setup.

- No selections can be made while driving.
- This is only for WPS supported devices.
- This cannot be selected when the maximum number of devices are already connected.

- 5 Operate the Wi-Fi® device to establish a connection.

- Refer to the Wi-Fi® device's instruction manual for information on how to connect using the Wi-Fi® device's easy setup.
- A connection failed message will be displayed if the acceptance time is exceeded.

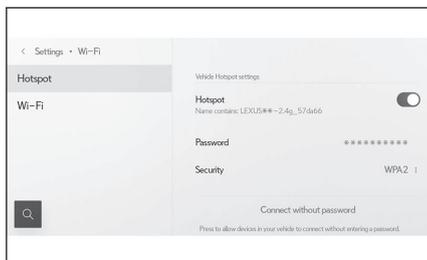

### Disconnecting Wi-Fi® Hotspot

Wi-Fi® Hotspot can be disconnected by turning off the Wi-Fi® Hotspot function.

- 1 Touch [⚙️] from the main menu.
- 2 In order, touch [Wi-Fi] > [Hotspot] from the sub menu.

### 3 Set [Hotspot] in the main area to off.



#### Precautions when using Apple CarPlay and Android Auto

Apple CarPlay and Android Auto allow for some applications (such as map, phone, and music applications) to be used by the multimedia system. While connected to Apple CarPlay or Android Auto, supported applications will display. Pay special attention to the following information when using Apple CarPlay or Android Auto.

To use Android Auto in your car, install the Android Auto app from Google Play Store™.

#### ■ Compatible devices

- Apple iPhone devices that supports Apple CarPlay.

For details, refer to <https://www.apple.com/ios/carplay/>.<sup>\*1</sup>

- Android™ devices that supports Android Auto.

For details, refer to <https://www.android.com/auto/>.<sup>\*1</sup>

#### ⚠ WARNING

For safety reasons, drivers should not operate the smartphone itself while driving.

#### ⚠ NOTICE

- Do not leave the smartphone inside the vehicle. The inside of the vehicle can become hot, which could cause the smartphone to malfunction.
- Do not push down on or subject the smartphone to unnecessary pressure while it is connected. The smartphone or port may be damaged.
- Keep the USB port free of foreign matter. The smartphone or port may be damaged.

#### 📄 INFORMATION

- For USB connections, use a data USB cable provided by the phone manufacturer.
- Some system button functions will change while connected to Apple CarPlay or Android Auto.
- When connected via Apple CarPlay and Android Auto, some related features like Bluetooth® Audio and Phone will be managed by Apple CarPlay/Android Auto.
- The guidance volume can be changed on the voice settings screen. It can also be changed using the [PWR·VOL] knob.
- While Apple CarPlay or Android Auto of a device is connected, Apple CarPlay or Android Auto of a different device cannot be used.

\*1: Operation is not guaranteed.

- Apple CarPlay/Android Auto is an application developed by Apple Inc./Google LLC. Its functions and services may be terminated or changed without notice depending on the connected device's operation system, hardware and software, or due to changes in Apple CarPlay/Android Auto specifications.
- For applications that support Apple CarPlay or Android Auto, refer to the respective website.
- While using Apple CarPlay or Android Auto, vehicle and user information such as the location and vehicle speed will be shared with the application publisher and cellular phone service provider.
- Downloading and using an application signifies your consent with its terms of use.
- Data is sent over the Internet and may result in charges being incurred. For information on data rates, contact the cellular phone service provider.
- Some functions including music playback may be restricted, depending on the application.
- Each function is an application provided by its respective company, and may be changed or suspended without prior notice. For details, refer to the website for the respective function.
- If the vehicle's navigation system is being used during route guidance and a new route is set using the Apple CarPlay or Android Auto map app, route guidance using the vehicle's navigation system will stop. If the Apple CarPlay or Android Auto map app is being used during route guidance and a new route is set using the vehicle's navigation system, route guidance using the Apple CarPlay or Android Auto map app will stop.
- Devices connected via Apple CarPlay cannot use Bluetooth® functions.
- Devices connected via Android Auto cannot use Bluetooth® functions other than hands-free calling.
- In case of USB connection, if the USB cable is unplugged, Apple CarPlay or Android Auto will stop operating. Audio output will stop and the screen will switch to the multimedia system screen.
- Even if Android Auto is disconnected, the hands-free phone system can be used because the phone will still be connected.

---

### Related Links

[Changing sound and media settings\(P. 96\)](#)

[Audio system ON/OFF and volume adjustment\(P. 33\)](#)

[Precautions for playback of iPod/iPhone \(P. 190\)](#)

[Precautions for playback of Apple CarPlay\(P. 193\)](#)

[Precautions for playback of Android Auto\(P. 196\)](#)

[Precautions when using Bluetooth® devices\(P. 118\)](#)

### 3-3. Using Apple CarPlay and Android Auto

---

[Precautions when using Wi-Fi® devices\(P.132\)](#)

[Precautions for Bluetooth® audio playback \(P.199\)](#)

## Using Apple CarPlay with an unregistered smartphone

Apple CarPlay can be used by connecting an unregistered smartphone to the multimedia system. The procedure is different for registered smartphones.

This function is not made available in some countries or areas.

- Siri is a trademark of Apple Inc., registered in the U.S. and other countries.

### Related Links

[Using Apple CarPlay with a registered smartphone\(P.146\)](#)

## Using Apple CarPlay with a USB connection

Apple CarPlay can be used by connecting a smartphone to the multimedia system using a data USB cable.

- 1 **Enable Siri from your smartphone's settings menu.**
- 2 **Connect the smartphone to the USB port.**
  - The Apple CarPlay home screen is displayed.
  - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.
  - If guidance is displayed on the smartphone screen, follow those operation instructions.
- 3 **Operate Apple CarPlay.**

iPhone applications that support Apple CarPlay can be used by touching the application.



Displays the multimedia system screen.

To display the Apple CarPlay home screen again, touch [  ] from the main menu.



Switch the screen display.

Touching and holding this will start Siri.



#### INFORMATION

- While Apple CarPlay is connected, press and hold the  switch on the steering to start Siri. To cancel, perform a short press of the  switch on the steering.
- While **[Wake word]** is activated and Apple CarPlay is connected, speaking the Siri wake word will start Siri.  
The wake word function of Siri can only be used when the language is set to English. Also, the connected device must have iOS version 14.3 or later.
- If wireless connection is set to be used on the smartphone when registered via USB connection, the device can be wirelessly connected on the next attempt.

#### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

[Changing the voice control settings\(P. 83\)](#)

### Using Apple CarPlay with wireless connection

Apple CarPlay can be connected to the multimedia system wirelessly using vehicle's wireless connection capability.

- 1 **Enable Siri from your smartphone's settings menu.**
- 2 **Touch  from the main menu.**
- 3 **Touch [Bluetooth & Devices].**
  - The device search screen will be displayed if there is no smartphone registered to the multimedia system. Proceed to Procedure 5.
- 4 **Touch [Add another device].**
- 5 **Touch [Search for devices].**
- 6 **Select the smartphone to register.**
- 7 **Check that the displayed PIN code matches the PIN code displayed on the smartphone, and then touch [OK].**
  - Perform the operation according to the guidance on the screen.
- 8 **If Apple CarPlay settings are displayed, touch [Yes].**
  - The Apple CarPlay home screen is displayed.
  - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.

- If an operation failed screen is displayed, follow the operation instructions on the screen.
- If guidance is displayed on the smartphone screen, follow those operation instructions.

## 9 Operate Apple CarPlay.

iPhone applications that support Apple CarPlay can be used by touching the application.



Displays the multimedia system screen.

To display the Apple CarPlay home screen again, touch [  ] from the main menu.



Switch the screen display

Touching and holding this will start Siri.



### INFORMATION

- While Apple CarPlay is connected, press and hold the [  ] switch on the steering to start Siri. To cancel, perform a short press of the [  ] switch on the steering.
- While [Wake word] is activated and Apple CarPlay is connected, speaking the Siri wake word will start Siri.

The wake word function of Siri can only be used when the language is set to English. Also, the connected device must have iOS version 14.3 or later.

### Related Links

[Setting Bluetooth® devices\(P.104\)](#)

[Changing the voice control settings\(P.83\)](#)

## Using Apple CarPlay with a registered smartphone

Apple CarPlay can be used by connecting a registered smartphone to the multimedia system. The procedure is different for unregistered smartphones.

This function is not made available in some countries or areas.

### Related Links

[Using Apple CarPlay with an unregistered smartphone\(P. 143\)](#)

## Using Apple CarPlay with a USB connection

Apple CarPlay can be used by connecting a smartphone to the multimedia system using a data USB cable.

- Check that your smartphone is connected to multimedia system.
- 1 **Enable Siri from your smartphone's settings menu.**
  - 2 **Connect the smartphone to the USB port.**
    - The Apple CarPlay home screen is displayed.
    - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.
    - If an operation failed screen is displayed, follow the operation instructions on the screen.
    - If guidance is displayed on the smartphone screen, follow those operation instructions.
    - If the Apple CarPlay home screen is not displayed, check the following.
      - Touch [  ] from the main menu.
      - If [  ] of the main menu is not displayed, select the smartphone to use with Apple CarPlay and set [ **Use for Apple CarPlay** ] to ON.
      - After confirming the 2 items above, press [ **Connect** ] in the Bluetooth® settings to connect your smartphone.
  - 3 **Operate Apple CarPlay.**

iPhone applications that support Apple CarPlay can be used by touching the application.



Displays the multimedia system screen.



To display the Apple CarPlay home screen again, touch [  ] from the main menu.



Switch the screen display.

Touching and holding this will start Siri.

#### INFORMATION

- While Apple CarPlay is connected, press and hold the [  ] switch on the steering to start Siri. To cancel, perform a short press of the [  ] switch on the steering.
- While [Wake word] is activated and Apple CarPlay is connected, speaking the Siri wake word will start Siri.

The wake word function of Siri can only be used when the language is set to English. Also, the connected device must have iOS version 14.3 or later.

#### — Related Links —

[Connecting to the USB port\(P. 35\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

[Changing the voice control settings\(P. 83\)](#)

### Using Apple CarPlay with wireless connection

Apple CarPlay can be connected to the multimedia system wirelessly using vehicle's wireless connection capability.

- Check that your smartphone is connected to multimedia system.
- 1 Enable Siri from the settings menu on the smartphone.
  - 2 Touch [  ] from the main menu.
  - 3 Touch [Bluetooth & Devices].
  - 4 Select the smartphone to use with Apple CarPlay and set [Use for Apple CarPlay] to ON.
  - 5 If your smartphone is not connected, press [Connect] to connect your smartphone.
    - The Apple CarPlay home screen is displayed.
    - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.
    - If an operation failed screen is displayed, follow the operation instructions on the screen.

### 3-3. Using Apple CarPlay and Android Auto

- If guidance is displayed on the smartphone screen, follow those operation instructions.
- If the Apple CarPlay home screen is not displayed, touch [  ] from the main menu.

#### 6 Operate Apple CarPlay.

iPhone applications that support Apple CarPlay can be used by touching the application.



Displays the multimedia system screen.

To display the Apple CarPlay home screen again, touch [  ] from the main menu.



Switch the screen display.

Touching and holding this will start Siri.

#### INFORMATION

- While Apple CarPlay is connected, press and hold the [  ] switch on the steering to start Siri. To cancel, perform a short press of the [  ] switch on the steering.
- While [Wake word] is activated and Apple CarPlay is connected, speaking the Siri wake word will start Siri.  
The wake word function of Siri can only be used when the language is set to English. Also, the connected device must have iOS version 14.3 or later.

#### Related Links

[Setting Bluetooth® devices\(P. 104\)](#)

[Changing the voice control settings\(P. 83\)](#)

## Using Android Auto with an unregistered smartphone

Android Auto can be used by connecting an unregistered smartphone to the multimedia system. The procedure is different for registered smartphones.

This function is not made available in some countries or areas.

### Related Links

[Using Android Auto with a registered smartphone\(P.152\)](#)

## Using Android Auto with a USB connection

Android Auto can be used by connecting a smartphone to the multimedia system using a data USB cable.

- 1 **Confirm that the Android Auto application is installed on the smartphone to connect.**
- 2 **Connect the smartphone to the USB port.**
  - The Android Auto home screen is displayed.
  - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.
  - If guidance is displayed on the smartphone screen, follow those operation instructions.
- 3 **Operate Android Auto.**

Applications that support Android Auto can be used by touching the application.




Displays the multimedia system screen.

To display the Android Auto home screen again, touch  from the main menu.



Start Google Assistant™.

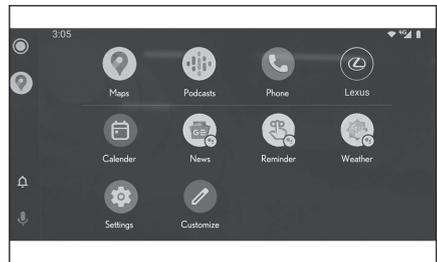

### INFORMATION

While Android Auto is connected, press and hold the  switch on the steering to start Google Assistant™. To cancel, perform a short press of the  switch on the steering.

### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

### Using Android Auto with wireless connection

Android Auto can be connected to the multimedia system wirelessly using vehicle's wireless connection capability.

1 **Confirm that the Android Auto application is installed on the smartphone to connect.**

2 **Touch [⚙️] from the main menu.**

3 **Touch [Bluetooth & Devices].**

The device search screen will be displayed if there is no smartphone registered to the multimedia system. Proceed to Procedure 5.

4 **Touch [Add another device].**

5 **Touch [Search for devices].**

6 **Select the smartphone to register.**

7 **Check that the displayed PIN code matches the PIN code displayed on the smartphone, and then touch [OK].**

● Perform the operation according to the guidance on the screen.

8 **If Android Auto settings are displayed, touch [Yes].**

The Android Auto home screen is displayed.

● It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.

● If an operation failed screen is displayed, follow the operation instructions on the screen.


9 **Operate Android Auto.**

Applications that support Android Auto can be used by touching the application.



Displays the multimedia system screen.

To display the Android Auto home screen again, touch [⏪] from the main menu.

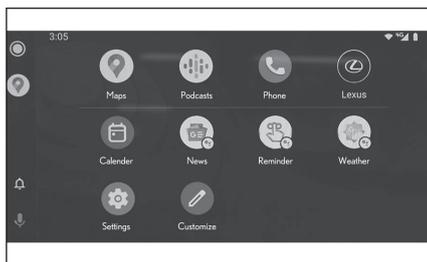



Start Google Assistant™.

#### INFORMATION

While Android Auto is connected, press and hold the switch on the steering to start Google Assistant™. To cancel, perform a short press of the switch on the steering.

#### Related Links

[Setting Bluetooth® devices\(P. 104\)](#)

#### Using Android Auto with a registered smartphone

Android Auto can be used by connecting a registered smartphone to the multimedia system. The procedure is different for unregistered smartphones.

This function is not made available in some countries or areas.

#### Related Links

[Using Android Auto with an unregistered smartphone\(P. 149\)](#)

#### Using Android Auto with a USB connection


Android Auto can be used by connecting a smartphone to the multimedia system using a data USB cable.

- Check that your smartphone is connected to multimedia system.
- 1 **Confirm that the Android Auto application is installed on the smartphone to connect.**
- 2 **Connect the smartphone to the USB port.**
  - The Android Auto home screen is displayed.
  - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.
  - If an operation failed screen is displayed, follow the operation instructions on the screen.
  - If guidance is displayed on the smartphone screen, follow those operation instructions.
  - If the Android Auto home screen is not displayed, check the following.
    - Touch [  ] from the main menu.
    - If [  ] of the main menu is not displayed, select the smartphone to use with Android Auto and set [Use for Android Auto] to ON.
    - After confirming the 2 items above, press [Connect] in the Bluetooth® settings to connect your smartphone.
- 3 **Operate Android Auto.**

Applications that support Android Auto can be used by touching the application.



Displays the multimedia system screen.

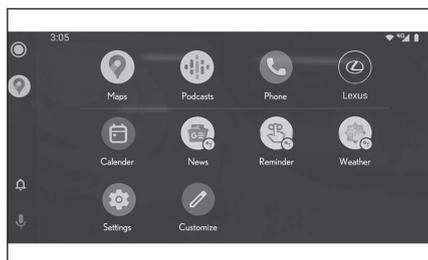

To display the Android Auto home screen again, touch [] from the main menu.



Start Google Assistant™.

#### INFORMATION

While Android Auto is connected, press and hold the [] switch on the steering to start Google Assistant™. To cancel, perform a short press of the [] switch on the steering.

#### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

### Using Android Auto with wireless connection

Android Auto can be connected to the multimedia system wirelessly using vehicle's wireless connection capability.

- Check that your smartphone is connected to multimedia system.
- 1 **Confirm that the Android Auto application is installed on the smartphone to connect.**
- 2 Touch [] from the main menu.
- 3 Touch [Bluetooth & Devices]
- 4 Select the smartphone to use with Android Auto and set [Use for Android Auto] to ON.
- 5 **If your smartphone is not connected, press [Connect] to connect your smartphone.**
  - The Android Auto home screen is displayed.
  - It may take around three to six seconds to return to the original screen, depending on the smartphone being connected.
  - If an operation failed screen is displayed, follow the operation instructions on the screen.
  - If guidance is displayed on the smartphone screen, follow those operation instructions.
  - If the Android Auto home screen is not displayed, touch [] from the main menu.

## 6 Operate Android Auto.

Applications that support Android Auto can be used by touching the application.




Displays the multimedia system screen.

To display the Android Auto home screen again, touch [▲] from the main menu.



Start Google Assistant™.

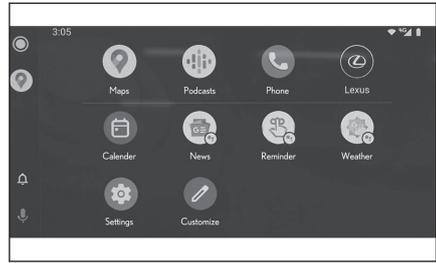

#### INFORMATION

While Android Auto is connected, press and hold the [▲] switch on the steering to start Google Assistant™. To cancel, perform a short press of the [▲] switch on the steering.

#### Related Links

[Setting Bluetooth® devices\(P.104\)](#)

## When Apple CarPlay or Android Auto might be malfunctioning

If having trouble with Apple CarPlay or Android Auto, check the following table first.

Symptom	Solution
Apple CarPlay or Android Auto does not start.	<p>Confirm that the smartphone being connected supports Apple CarPlay or Android Auto.</p> <p>Confirm that Apple CarPlay or Android Auto is enabled on the smartphone.</p> <p>Confirm that the Android Auto application is installed on the smartphone being connected.</p> <p>For details, refer to the following URL.</p> <ul style="list-style-type: none"> <li>● Apple CarPlay: <a href="https://www.apple.com/ios/car-play/">https://www.apple.com/ios/car-play/</a></li> <li>● Android Auto: <a href="https://www.android.com/auto/">https://www.android.com/auto/</a></li> </ul>
	<p>Confirm that the Apple CarPlay or Android Auto function on the registered smartphone is turned on in the multimedia system.</p>
	<p>If connecting with a USB cable, confirm that the USB cable is securely connected to the smartphone and the USB port. Connect the smartphone directly to the USB port. Do not use a USB hub.</p> <p>Make sure the correct USB port is used to connect Apple CarPlay and Android Auto. USB port used exclusively for charging cannot be used for smartphone apps. Wireless charger<sup>*1</sup> used for wireless charging will not start wireless Apple CarPlay or wireless Android Auto connection.</p> <p>For a wireless connection, check the following items.</p> <ul style="list-style-type: none"> <li>● Confirm that the smartphone can be connected via Bluetooth® to the multimedia system.</li> <li>● Confirm that the smartphone is set to be able to use Wi-Fi®.</li> </ul> <p>For Apple CarPlay: Confirm that the Lightning cable being used is Apple-certified.</p> <p>Confirm that Siri is enabled.</p> <p>The smartphone linking function cannot be used with a charging-only USB cable.</p>

### 3-3. Using Apple CarPlay and Android Auto

Symptom	Solution
Apple CarPlay or Android Auto does not start.	<p>Use a cable capable of transferring data. Some cables may not be supported.</p> <p>Recommended USB cable requirements are listed below.</p> <ul style="list-style-type: none"> <li>● iPhone: Use an official Apple USB cable or a USB cable that has been Apple MFi certified.</li> <li>● Android: Use a cable that is 6 ft. (1.8 m) or shorter, and do not use an extension cable.</li> <li>● Use a cable displaying the USB logo .</li> </ul> <p>If the smartphone linking function worked previously but no longer works, replacing the USB cable may resolve the issue.</p>
	After checking all of the above, connect Apple CarPlay or Android Auto.
When an Apple CarPlay/Android Auto connection is established and a video is being played, the video is not displayed, but audio is output through the system.	As the system is not designed to play video through Apple CarPlay/Android Auto, this is not a malfunction.
Audio is not output.	The volume of the multimedia system may be muted or set too low. Increase the volume on the multimedia system.
	Make sure Apple supported apps are used for Apple CarPlay and Google™ supported apps are used for Android Auto. Playing music from web browser will lead to no or improper audio output.
The screen flickers and audio is noisy.	Check whether the USB cable connected to the multimedia system is damaged. To check whether there is internal damage to the USB cable, connect the smartphone to another system such as a PC, then confirm that charging starts and that it is recognized by the system.
	Replace the USB cable with another cable.
The map display cannot be enlarged or shrunk using the Apple CarPlay map app.	Pinch operations are not supported for the Apple CarPlay map app.

Symptom	Solution
The Apple CarPlay screen is shown in the center and does not fill up the whole display.	Full-screen display is supported on iOS Ver. 10 or later. Update to the latest iOS version.
During music app (such as Spotify) playback, if an app that is not compatible with Apple CarPlay <sup>*2</sup> is started on the iPhone and audio is output and then the volume is changed on the multimedia system, the audio of the incompatible application stops and the system resumes playback on the original music application.	This operation is in accordance with the specifications of the multimedia system, and is not a malfunction.
During audio playback on the multimedia system (such as FM), if interrupt audio is output from an app that is not compatible with Apple CarPlay <sup>*2</sup> , the system does not return to the original audio source.	This operation is in accordance with the specifications of the multimedia system, and is not a malfunction. Manually change the audio source. Alternatively, avoid using apps that are not compatible with Apple CarPlay <sup>*2</sup> . Some navigation apps are compatible beginning with iOS 12. Update iOS and apps to the latest versions.
While using Android Auto, turn-by-turn navigation is not displayed on the multi-information display or the multimedia system screen.	This is not a malfunction as display of these items is not possible with this function.
While using Android Auto, hands-free call audio cannot be heard from the vehicle's speakers.	End current call. Disconnect the USB cable from the smartphone and try using hands-free calling. Check whether audio can be heard now.
	Increase the volume on the multimedia system and check whether hands-free call audio can be heard. Try using another smartphone. Check whether audio can be heard now.
The phone was connected after Android Auto was stopped.	This operation is in accordance with the specifications of the multimedia system, and is not a malfunction.

\*1: If equipped

#### — Related Links —

---

[Setting Bluetooth® devices\(P. 104\)](#)

[Connecting to the USB port\(P. 35\)](#)

[Connecting with a Bluetooth® device\(P. 126\)](#)

[Audio system ON/OFF and volume adjustment\(P. 33\)](#)

[Changing sound and media settings\(P. 96\)](#)

[Notes for operating the touch screen\(P. 24\)](#)

\*2: Apps that are not compatible with Apple CarPlay are the apps installed on an iPhone that are not displayed in the app list on the Apple CarPlay screen.

**4-1. Navigation**

Navigation function ..... 160

**4-2. Map information**

Map options screen..... 161

Information displayed on  
the map screen ..... 162

**4-3. Searching for a destination**

Destination search screen .... 163

Destination search result list  
screen..... 167

POI suggestion ..... 168

Destination Assist..... 169

**4-4. Starting route guidance**

Starting route guidance..... 171

Full route map screen ..... 172

**4-5. Route guidance screen**

Route guidance screen ..... 174

Typical voice guidance  
prompts ..... 178

## 4.1. Navigation


### Navigation function

The navigation system indicates your present position and assists in locating a desired destination.

The navigation function is a subscription service. It is necessary to enter a subscription service contract to use the navigation function.


If a subscription service contract has not been entered, the subscription service contract screen will be displayed when the engine switch is turned to ON.

To enter a subscription service contract and use the navigation function, touch [Subscribe].

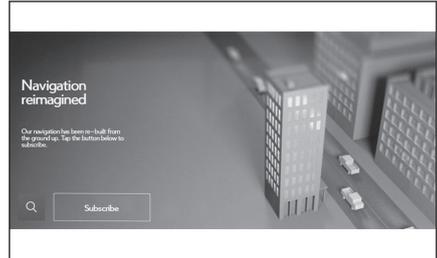

## Map options screen

- 1 Touch [ ≡ ] on the map screen.
- 2 Touch the desired item.
  - A Touch to turn the display of traffic information on/off.
  - B Touch to use Destination Assist.
  - C Touch to display the navigation settings screen.
  - D Touch to display the software version and license information.

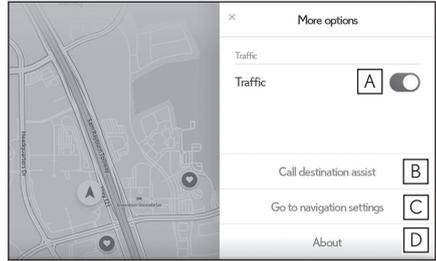

### Related Links

- [Displaying the navigation system settings screen\(P. 92\)](#)
- [Traffic Information\(P. 162\)](#)
- [Destination Assist\(P. 169\)](#)

### Information displayed on the map screen

#### Traffic Information


Traffic data can be received via DCM (Data Communication Module) to display traffic information on the map screen.

- 1 Touch [ ≡ ] on the map screen.
- 2 Touch [Traffic].

Traffic information will be displayed on the map screen.

- Icons are used to indicate road conditions and incidents.
- Arrows indicate the direction of traffic.
- Colors indicate the speed at which traffic is moving.

If the traffic icon is touched, details about the touched traffic incident can be displayed.

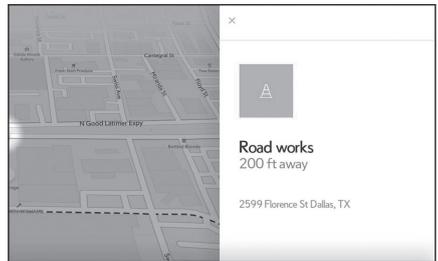

## Destination search screen

### Searching for a destination using the keyboard

A destination can be searched for by entering keywords.

- 1 Touch [🗨️] or [🔍] on the map screen.
- 2 Touch [📄].



- 3 Select [Navigation].
- 4 Enter characters using the keyboard.



- 5 Touch [Go].
- 6 Touch the desired item from the list.

#### Related Links

[Destination search result list screen\(P. 167\)](#)

[Full route map screen\(P. 172\)](#)

### Searching for a destination by category

A destination can be searched for from a list of categories.

- 1 Touch [🗨️] or [🔍] on the map screen.

### 2 Touch [Destinations].



### 3 Touch the desired search method.

**[Home]** : Touch to set the registered home as the destination.

A point must be registered as home before using this function.\*<sup>1</sup>

**[Work]** : Touch to set the registered workplace as the destination.

A point must be registered as a workplace before using this function.\*<sup>1</sup>

**[Favorites]** : Touch to set a registered favorite as the destination.

A point must be registered as a favorite before using this function.

**[Recents]** : Touch to set a destination from the destination history as the destination.

**[Sent to car]** : Sent to car enables customer to send a destination or POI to the vehicle from Lexus app.


**[Parking]** : Touch to search for a nearby parking lot to set as a destination.

**[Fuel]** : Touch to search for a fuel station to set as a destination.

**[Food]** : Touch to search for a restaurant to set as a destination.

**[Hospitals]** : Touch to search for a hospital to set as a destination.

When setting a business as a destination, if your estimated time of arrival is outside of business hours or near closing time, a notification asking to confirm the destination will be displayed.

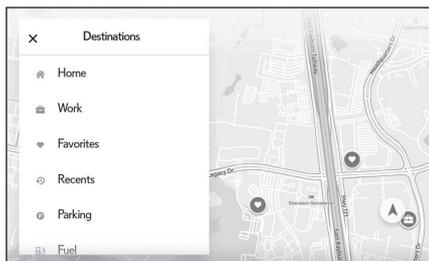

### 4 Touch the desired destination from the list.

---

#### Related Links

[Destination search result list screen\(P. 167\)](#)

[Full route map screen\(P. 172\)](#)

\*1: Home and Work must be added via Lexus app.


## Editing the favorites list

The favorites list can be edited.

- 1 Touch [🎤] or [🔍] on the map screen.
- 2 Touch [Destinations].
- 3 Touch [Favorites].
- 4 Touch [✏️].

Touch [⊖] to delete a favorite.

The favorites list editing screen will be displayed.

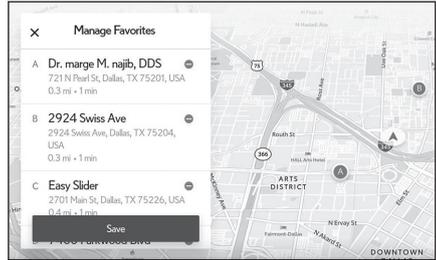

- 5 Touch [Save].


## Editing the destination history

The destination history can be edited.

- 1 Touch [🎤] or [🔍] on the map screen.
- 2 Touch [Destinations].
- 3 Touch [Recents].
- 4 Touch [✏️].

The destination history editing screen will be displayed.

Touch [⊖] to delete a destination history item.

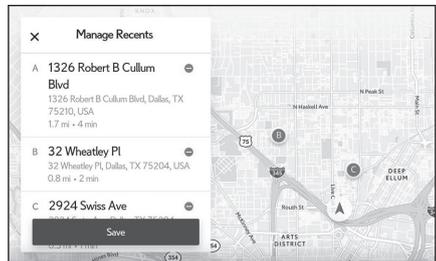

- 5 Touch [Save].


## Searching for a destination using voice controls

- 1 Touch [🎤] or [🔍] on the map screen.

### 4-3. Searching for a destination

---

- 2 Say the keyword you wish to use for the search.

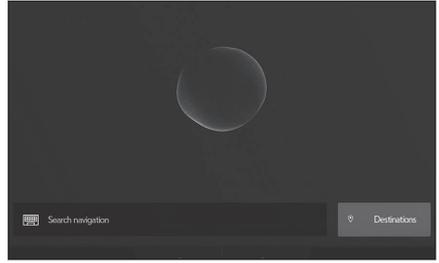

- 3 Touch or Use Voice Command for Desired result from List.

---

#### Related Links


[Starting voice control\(P. 57\)](#)

## Destination search result list screen

When a destination has been searched for, a list of search results will be displayed.

- **Touch or Use Voice Command for the desired destination from the list. The full route map screen will be displayed.**

By touching [  ], the order of the list can be filtered or sorted.

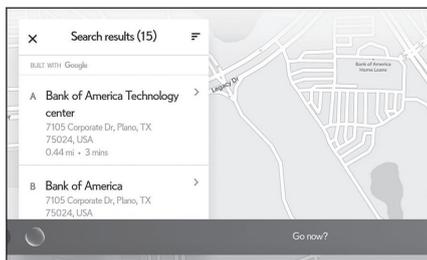

### Related Links


[Full route map screen\(P.172\)](#)

## Changing the order/filtering the suggested destination list

This function can only be used with an internet connection. As the results are obtained from the internet, the displayed content may change.

By touching [  ] on the suggested destination list screen, the order of the list can be changed or filtered.

- A** Touch to clear the order/filter conditions.
- B** Touch to filter the list by price.
- C** Touch to filter the list by locations which are open now.
- D** Touch to change the list order conditions.
- E** Touch to apply the order/filter conditions and return to the list.

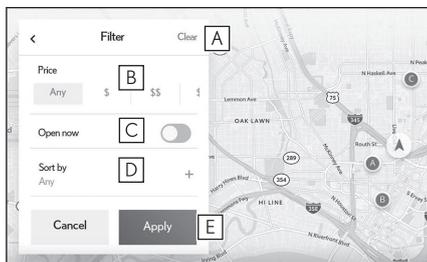

## 4-3. Searching for a destination


### POI suggestion

Based on various information, such as the current position, fuel level, driving time, etc., the navigation system may suggest destinations.


For example:

- When the fuel level is low, fuel stations are suggested as a destination.
- When approaching the destination during route guidance, parking lots near the destination will be displayed.


1 When a destination is suggested by the navigation system, touch [☰].

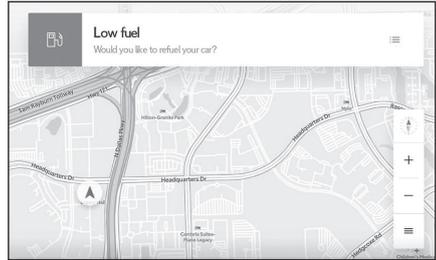

2 Touch the suggested point.

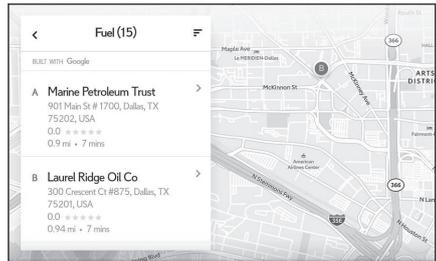

3 Touch [Go now].

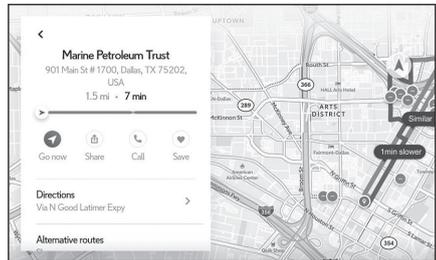

### Related Links

[Full route map screen\(P.172\)](#)

## Destination Assist

Destination Assist is subscription-based telematics services that use Global Positioning System (GPS) data and embedded cellular technology to provide safety and security as well as convenience features.

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other Points of Interest (POI).

After you tell the agent your choice of destination, its coordinates/address/destination name are sent wirelessly to your vehicle's navigation system.

The hands-free system cannot be used while Destination Assist is being used.

POI sent by Destination Assist agent cannot be added as favorites.

### From the voice recognition screen

- 1 Touch [  ] or [  ] on the map screen.
- 2 Say [Destination Assist].

#### Related Links

[Starting voice control\(P. 57\)](#)

### From steering wheel

- 1 Press the talk switch on the steering wheel.
- 2 Say [Destination Assist].

#### Related Links

[Starting voice control\(P. 57\)](#)

### Initiate Intelligent Assistant voice commands

- 1 Say the wake-up phrase [Hey Lexus].
- 2 Say [Destination Assist].

#### Related Links


[Starting voice control\(P. 57\)](#)

### From the map screen

- 1 Touch [☰] on the map screen.




- 2 Touch [Call destination assist].

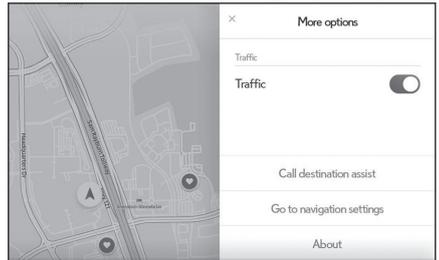


- 3 When the call is connected, speak to the operator.

The operator will confirm the desired destination information and send the destination to vehicle navigation screen. You can also ask agent to send additional destination to select destination as a way-point or replace the current destination.

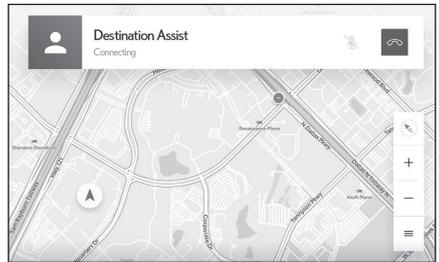

- 4 Touch [Go now].

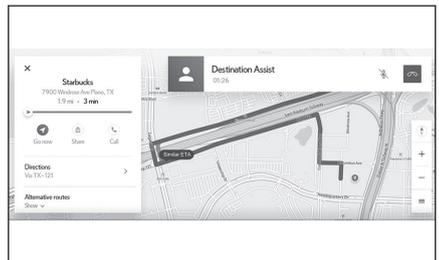

- 5 Touch [📞] to end the call.


- After the destination is set, you can also ask the agent to end the call.

## Starting route guidance

After setting a destination, the search for a route will begin. When the search for a route is completed, the full route map screen (the full route from the current location to the destination) will be displayed. On the full route map screen, the desired route can be selected or the route information can be checked.

A route cannot be searched for if the destination is closer than 300 ft. (100 m) to your current vehicle location.

### ● Touch [Go now].

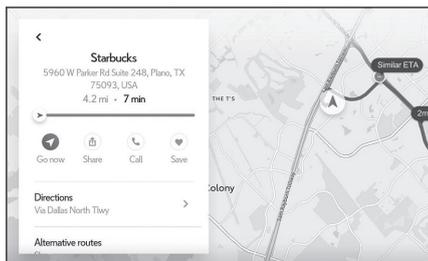

### 📄 INFORMATION

- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route or a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the selected point is set as the destination.

### ⚠️ WARNING

Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.


### — Related Links —

[Full route map screen\(P. 172\)](#)

## 4-4. Starting route guidance

### Full route map screen

- A Colors denote congestion, aka traffic flow.

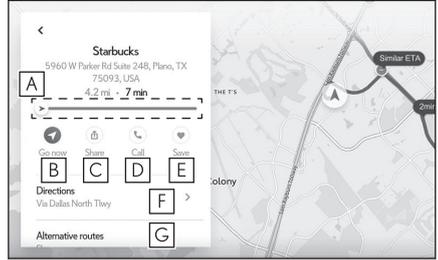

- When congestion is low, it's blue. When congestion is severe, it's red. If the road is closed it's broken red line.

- B Touch to start route guidance. Touch and hold to start demo mode.

- C Touch to share position information with a registered contact.

To use this function, a smartphone must be connected to the navigation system.

- D Touch to call the phone number registered to the POI.

- E Touch to register the destination as a favorite.

- F The directions list will be displayed.

- G Touch to select another route.

- If POI is set as the destination, business hours etc. are also displayed.

### Related Links

[Searching for a destination by category\(P. 163\)](#)

[Performing operations from the call screen\(P. 242\)](#)

[Directions list screen\(P. 172\)](#)


[Route select screen\(P. 173\)](#)

[Starting demo mode\(P. 173\)](#)

### Directions list screen


A directions list is displayed for the route.

Displays the names of intersections which are passed through or turned at, and their distance from the current position.

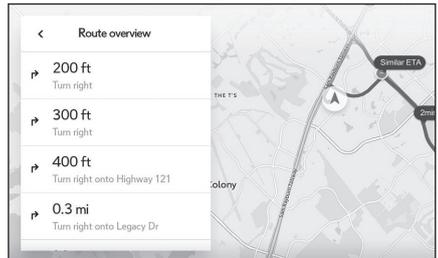

## Route select screen

- 1 Touch [3 total routes].
- 2 Touch the desired route.

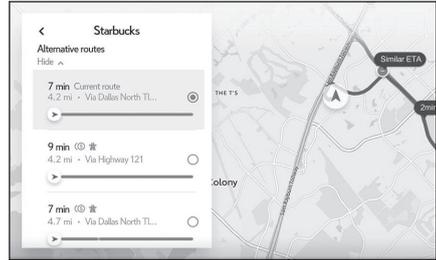

- 3 Touch [ < ].


## Starting demo mode

After searching for a route, before route guidance is started, a demo of the route guidance can be viewed.

- Touch and hold [Go now] on the full route map screen.  
To end the demo, touch [End] or begin driving.

## Route guidance screen

During route guidance, various guidance screens can be displayed, depending on the situation.

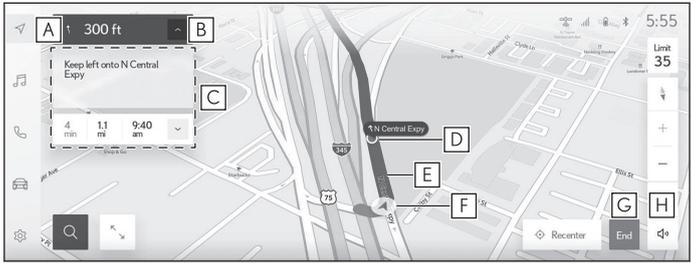

**A** Displays the distance to the next turn and an arrow indicating the turn direction.  
Touch to display the directions list.

**B** **Update to say**  
Displays information about the next guidance point.



Touch to display/hide the information for the next guidance point.

**C** Displays route information

- When driving along the guidance route, displays the distance, estimated travel time, and estimated time of arrival at the destination.
- When not driving along the guidance route, [**Proceed to the highlighted**] will be displayed.
- Touch [  ] to display the destination information screen.

**D** Displays guidance points.

**E** Displays the guidance route.

**F** Displays the current position of the vehicle.

**G** Touch to cancel/end active navigation.

**H** Touch to mute voice guidance.

- If a faster route is found during route guidance, a suggestion to change routes will be displayed.

### INFORMATION

- If the vehicle goes off the guidance route, the route will be recalculated.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on.

**Related Links**[Directions list screen\(P. 172\)](#)[Destination information screen\(P. 175\)](#)**Destination information screen**

- A** Touch to return to the route guidance screen.
- B** Touch to cancel/end active navigation.
- C** Touch to add/edit destinations.  
If multiple destinations are set, the edit stop screen will be displayed.




- D** Touch to share your estimated time of arrival.

To use this function, a smartphone must be connected to the navigation system.

- E** Touch to select alternate route.

**Related Links**[Sharing your ETA\(P. 176\)](#)[Route select screen\(P. 173\)](#)**Adding a destination**


- 1 Display the destination information screen.
- 2 Touch [Add stop].
- 3 Search for a destination to add.
- 4 Touch [Add stop].

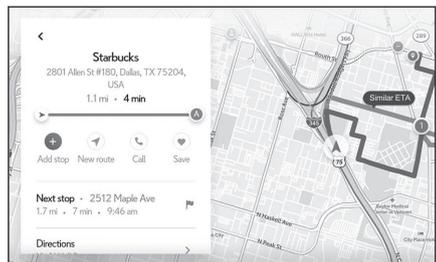**Deleting a destination (when multiple destinations have been set)**

- 1 Display the destination information screen.
- 2 Touch [Edit stops].

## 4-5. Route guidance screen

- 3 Touch [ - ] for the destination you wish to delete.

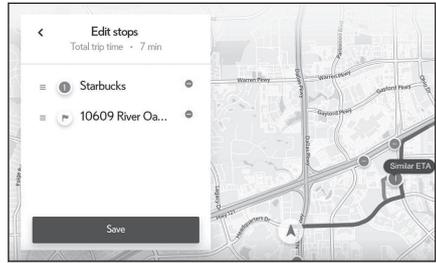


- 4 Touch [Save].


The destination order can also be changed by touching and dragging the name of a destination.

### Sharing your ETA


- 1 Display the destination information screen.
- 2 Touch [Share ETA].
- 3 Touch the contact with whom you wish to share your estimated time of arrival.

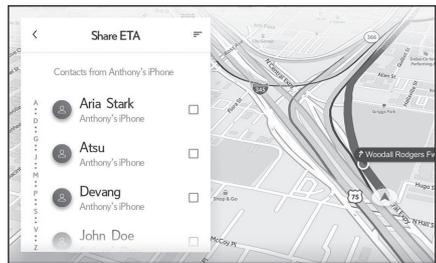

- 4 Touch [Share].

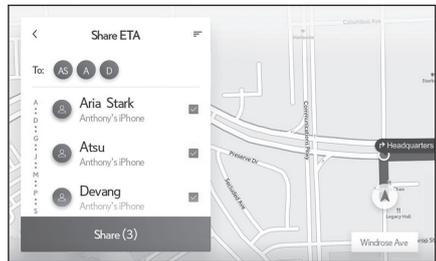


- 5 Touch [OK].

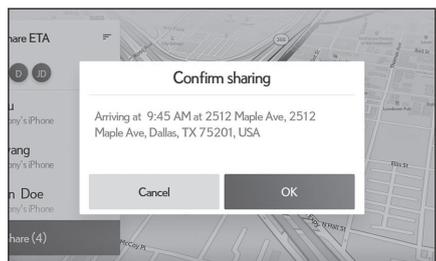

## When you arrive at a destination

When you arrive at a destination, the destination arrival screen will be displayed.

- A** Touch to share position information with a registered contact.  
To use this function, a smartphone must be connected to the navigation system.
- B** Touch to register the destination as a favorite.

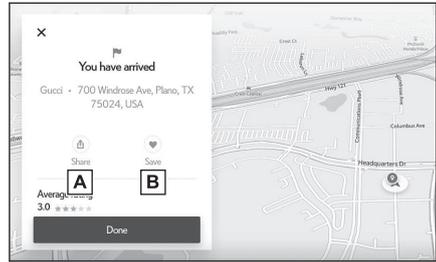

### Typical voice guidance prompts

When a user is in active navigation and may or may not be on the navigation screen on the head unit; voice guidance for the active route will help user for maneuvers to turns, exits from highway/ freeway, entrance to highway/ freeway, U-turns, which lanes to stay in for these maneuvers, etc. Such maneuver points are referred to as guidance points. These voice prompts are audible to the user 2-3 times at specific distances when approaching a guidance point. Voice guidance can be heard in the language of user setting.

#### **WARNING**

Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads (roads that are not completely digitized in our database). The route guidance may not have the updated information such as the direction of a one way street.

---

#### **Related Links**

[Changing sound and media settings\(P. 96\)](#)

**5-1. Radio operation**

- Listening to the radio ..... **180**
- Troubleshooting guide..... **183**
- Refer to the table below to identify the problem and take the suggested corrective action.....**184**
- Handling the radio antenna **185**

**5-2. USB flash drive operation**

- Precautions for playback of USB flash drive ..... **186**
- Playing music files on a USB flash drive..... **188**

**5-3. iPod/iPhone operation**

- Precautions for playback of iPod/iPhone ..... **190**
- Playing iPod/iPhone..... **191**

**5-4. Apple CarPlay operation**

- Precautions for playback of Apple CarPlay..... **193**
- Playing Apple CarPlay ..... **194**

**5-5. Android Auto operation**

- Precautions for playback of Android Auto..... **196**
- Playing Android Auto..... **197**

**5-6. Bluetooth® audio operation**

- Precautions for Bluetooth® audio playback ..... **199**
- Playing Bluetooth® audio... **200**

**5-7. Integrated Streaming**

- Playing Integrated Streaming ..... **202**

### Listening to the radio

Switch to your preferred frequency or service and listen to the radio.

#### INFORMATION

- The radio automatically blends to an HD Radio™ signal in AM or FM where available. The radio automatically changes to stereo reception when a stereo broadcast is received.
- Radio mode has a mix preset function, which can store up to 20 stations from any of the AM, FM and SiriusXM bands.
- If you navigate to another radio screen while playing music, the playback screen is minimized. Selecting the minimized playback screen restores the playback screen to its original size.

1 Touch  from the main menu.

2 Touch [Sources].

3 Touch [Radio].

4 Select the station selection method or service as necessary.

[Favorites] : Select a broadcasting station from those registered as favorites.

[Tune] : Select the broadcasting station by entering a frequency with the numeric keypad.

[FM Radio] : Switches to FM mode. The FM station list, the 3 most recently listened stations, and the receivable FM broadcasting stations are displayed.

[AM Radio] : Switches to AM mode. The AM station list, the 3 most recently listened stations, and the receivable AM broadcasting stations are displayed.

[SiriusXM] : Switches to SiriusXM Radio mode.


Displays [For You] and contents/Super Categories/[All channels]/[Listening History].

(This function is not made available in some countries or areas)

5 Select the broadcasting station from the station list or genre.

6 Operate the radio that is being received as necessary.

- Operating AM/FM from the screen

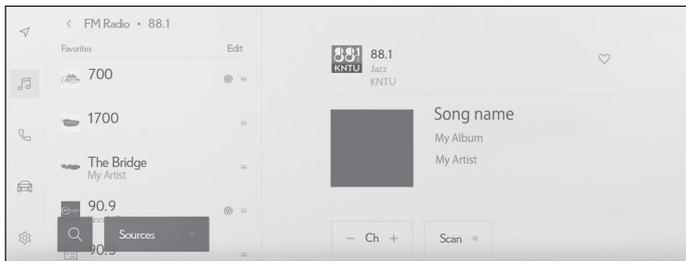

[Ch] : Touch [ - ] or [ + ] to search for the receivable broadcasting stations. Touch and hold to jump to the next frequency with available radio signal. When released, the broadcasting station closest to that position with the best reception sensitivity is selected automatically.

[Scan] : SEEK UP and output the audio of the detected station for 10 sec. This is repeated.


[HD 12] : Displayed when Multicast CH is supported in FM mode. Touch to display the SPS channel list. The mode can be changed to the displayed SPS channel list.

[♥] : Registers the currently received broadcasting station in favorites. When registered, touch to cancel.

Preset buttons of sub menu : Receive the registered broadcasting stations.

## ● Operating SiriusXM Radio from the screen

(This function is not made available in some countries or areas)

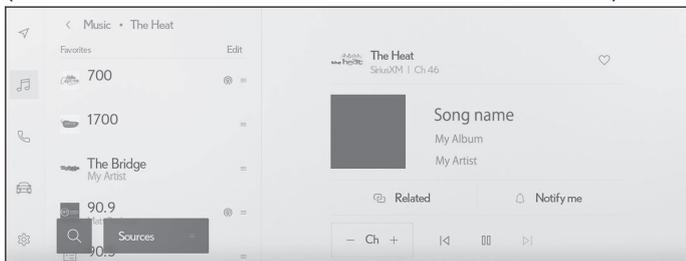

[Ch] : Touch [ - ] or [ + ] to search for the receivable channels.

Touch and hold to jump to the next frequency with available radio signal. When released, the current channel is received.

[⏮]/[⏭] : Fast rewind or fast forward the radio cache.

Touch and hold to jump to the start or end of the buffer.

[⏸] : Pause the radio cache.

[▶] : Play the radio cache.

## 5-1. Radio operation

---

[**Related**] : Displays content related to the received channel.

[**Notify me**] : Select an artist or song, or both an artist and song, to receive a notification when the corresponding broadcast starts.

(When receiving a regular channel) Select a sports team to receive a notification when the corresponding broadcast starts. (When receiving a sport channel)

[  ] : Registers the currently received channel in favorites. When registered, touch to cancel.

Preset buttons of sub menu : Receives the registered channels.

### ● Operating with the steering switches

#### [<]/[>] switches

- AM/FM


Switch the frequencies or broadcasting stations registered in the preset buttons in order.

Press and hold to switch frequencies. When released, the broadcasting station closest to that position with the best reception sensitivity is selected automatically.

- SiriusXM Radio

Switch the channels registered in the preset buttons in order.

Press and hold to switch channels. When released, the channel closest to that position with the best reception sensitivity is selected automatically.

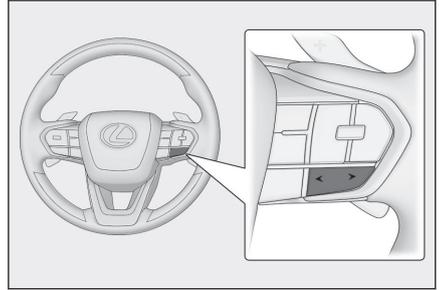

---

### Related Links

[Changing sound and media settings\(P. 96\)](#)

## Troubleshooting guide

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Turning the indicator of the <b>[HD Radio AM]</b> and <b>[HD Radio FM]</b> button off can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new station.
Audio mute delay when selecting an HD2/HD3 multicast channel pre-set.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form: <a href="https://hdrodio.com/stations/feedback/">https://hdrodio.com/stations/feedback/</a> .
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form: <a href="https://hdrodio.com/stations/feedback/">https://hdrodio.com/stations/feedback/</a> .

**Refer to the table below to identify the problem and take the suggested corrective action**

When problems occur with the SiriusXM Radio tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
"SAT Antenna Error"	The SiriusXM Radio antenna is not connected. Check whether the SiriusXM Radio antenna cable is attached securely. Contact your Lexus certified dealer for assistance.
	A short circuit occurs in the antenna or the surrounding antenna cable. Contact your Lexus certified dealer for assistance.
"No Satellite Signal"	The SiriusXM Radio signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"Channel not available"	The channel you selected is not broadcasting any programming. Select another channel.
"SAT Hardware Error"	This indicates a problem in the SiriusXM Radio module. Contact your Lexus certified dealer for assistance.
"Something went wrong"	Please try another channel.

## Handling the radio antenna

The antenna that receives the radio signals is embedded into the rear quarter glass and rear spoiler.

### NOTICE

Clean the glass with the embedded antenna (interior side) by wiping gently with a moist cloth along the wire direction. Do not use glass cleaner or other detergents, because it may damage the antenna.

Do not attach the following things to the antenna wire of the rear quarter glass. This may reduce reception sensitivity or generate noise.

- Window film that contains metal
- Other metallic objects (such as antennas other than Lexus genuine parts)

### Precautions for playback of USB flash drive

Pay special attention to the following information about playing a USB flash drive. Refer to "Information about media that can be used" for the USB memory devices that can be used by the multimedia system.

#### INFORMATION

- Removing a USB flash drive or disconnecting a connected device during playback may cause noise to be output.
- When a USB flash drive is connected and the source is switched from another source to the USB flash drive, the first file on the drive is played. If the same USB flash drive (without its contents changed) is inserted again, playback will be started from the previously played song.
- Reading a file in an unsupported format may affect operations.
- When a USB hub is used to connect multiple devices, devices other than the first device to be recognized cannot be used.

#### WARNING

For safety reasons, the driver should not operate the USB flash drive while driving.

#### NOTICE

- Do not leave a USB flash drive inside the vehicle. The inside of the vehicle can become hot, which could cause the USB flash drive to malfunction.
- Do not push down on or subject the connected USB flash drive to unnecessary pressure. The USB flash drive or port may be damaged.
- Keep the port free of foreign matter. The USB flash drive or port may be damaged.

#### Playback of MP3/WMA/AAC/WAV/FLAC/ALAC/Ogg Vorbis

When a USB flash drive storing MP3/WMA/AAC/WAV/FLAC/ALAC/Ogg Vorbis files is connected, first all the files on the USB flash drive are checked.

It is recommended that no files other than MP3/WMA/AAC/WAV/FLAC/ALAC/Ogg Vorbis files and no unnecessary folders are written onto the USB flash drive. This ensures that the USB flash drive check finishes quickly.

#### INFORMATION

Many types of encoder software, such as freeware, are available in the market for MP3/WMA/AAC/WAV/FLAC/ALAC/Ogg Vorbis. Depending on the encoder condi-

tion or file format, audio quality deterioration or noise at playback start may occur, or playback may not be possible.

 **NOTICE**

Do not add an incorrect extension to a file. Adding an extension to a file that does not match the file contents may result in files being incorrectly recognized and played. This will output a loud noise that may damage the speakers.

Incorrect examples:

- Adding the ".mp3" extension to a file that is not MP3
- Adding the ".wma" extension to a file that is not WMA

---

**Related Links**

[Information about media that can be used\(P. 264\)](#)

[Format information\(P. 264\)](#)

[Information USB memories\(P. 269\)](#)


### Playing music files on a USB flash drive

Play music files on a USB flash drive connected to the USB port to enjoy music. When a USB flash drive is connected, a button with the device's name is displayed on the source selection screen. This may not be displayed for some devices.

Connect the USB flash drive.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch the device name or [USB].
- 4 Operate the USB flash drive that is playing as necessary.

● Operating from the screen

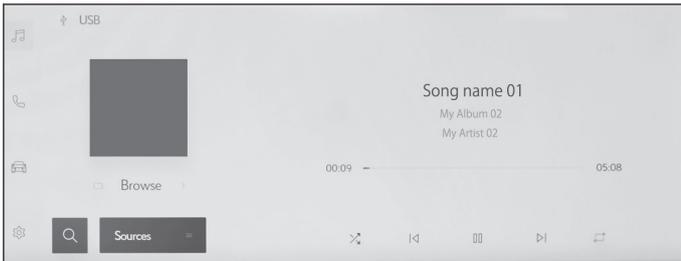

[  ] : Performs random playback.

Each time this is touched, the mode switches between random playback for all files or tracks, random playback canceled, and random playback of the currently playing folder or album.

[  ] : Plays the currently playing file or track from the beginning. When at the start of the file or track, the previous file or track will play from the beginning.

Touch and hold to fast rewind. Release to start playback from that position.

[  ] : Pauses playback.

[  ] : Plays.

[  ] : Switches the files or tracks.

Touch and hold to fast forward. Release to start playback from that position.

[  ] : Performs repeat playback.

Each time this is touched, the mode switches in order from repeat the currently playing file or track, repeat playback of the currently playing folder or album, and repeat playback of all files or tracks.

[**Browse**] : Displays the playback mode in the sub menu.


Tracks can be selected from a list sorted by artist, album, folder, song, genre, or composer.

- Operating with the steering switches

#### [<]/[>] switches

Switches the files or tracks.

Press and hold to fast forward or fast rewind. Release to start playback from that position.

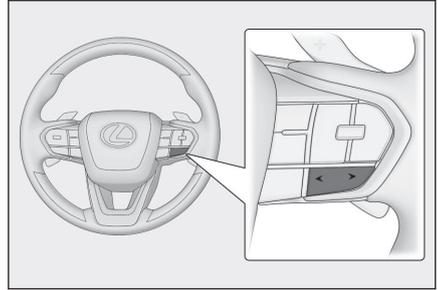

#### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Changing sound and media settings\(P. 96\)](#)

### Precautions for playback of iPod/iPhone

Pay special attention to the following information about playing iPod/iPhone. Refer to "iPhone/iPod information" for the iPod/iPhone that can be used by the multimedia system.

#### INFORMATION

- Disconnecting a port or disconnecting a connected device while in iPod/iPhone mode may cause noise to be output.
- When a USB hub is used to connect multiple devices, devices other than the first device to be recognized cannot be used.
- When switching from a different source to an iPod/iPhone while the iPod/iPhone is connected, playback will be started from the previously played track. Playback may not start for some devices.

#### WARNING

For safety reasons, the driver should not operate the iPod/iPhone while driving.

#### NOTICE

- Do not leave the iPod/iPhone inside the vehicle. The inside of the vehicle can become hot, which could cause the iPod/iPhone to malfunction.
- Do not push down on or subject the connected iPod/iPhone to unnecessary pressure. The iPod/iPhone, or the port, may be damaged.
- Keep the port free of foreign matter. The iPod/iPhone or the port may be damaged.

---

#### Related Links

[iPhone/iPod information\(P. 267\)](#)

## Playing iPod/iPhone


Play back music files on an iPod or iPhone connected to the USB port. When an iPod or iPhone is connected, a button with the device's name is displayed on the source selection screen. This may not be displayed for some devices.

### INFORMATION

- Depending on the generation and model of iPod or iPhone that is connected, the cover art image may look grainy or display of the list scroll may be slow.
- Some operations may not be available or they may operate differently, depending on the generation and model of iPod/iPhone that is connected.

Connect an iPod or iPhone.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch the device name or [USB].
- 4 Operate the iPod or iPhone that is playing as necessary.
  - Perform operations from the screen

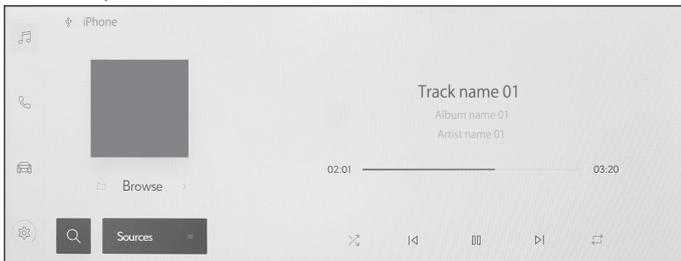

[  ] : Performs shuffle playback.

Each touch switches the shuffle setting.\*1

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

Touch and hold to fast rewind. Release to start playback from that position.

[  ] : Pauses playback.

[  ] : Plays.

[  ] : Switches the tracks.

Touch and hold to fast forward. Release to start playback from that position.

[  ] : Performs repeat playback.

Each touch switches the repeat setting.\*<sup>1</sup>

[**Browse**] : Displays the playback mode in the sub menu.

Tracks can be selected from a list sorted by artist, album, song, playlist, genre, Podcast, composer, audiobook, or radio.


[**Shuffle play**] is displayed when playing a track selected from the list. Touch this to return to the playback screen and perform shuffle playback.

### ● Operating with the steering switches

#### [<]/[>] switches

Switches the tracks.

Press and hold to fast forward or fast rewind. Release to start playback from that position.

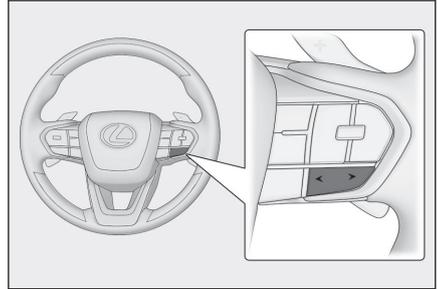

---

### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Changing sound and media settings\(P. 96\)](#)

\*1: The order in which shuffle or repeat settings switch depends on the connected device.

## Precautions for playback of Apple CarPlay

Pay special attention to the following information about playing Apple CarPlay. This function is not made available in some countries or areas.

### INFORMATION

- This function cannot be used while Android Auto is connected.
- Disconnecting a connected device while Apple CarPlay is connected via USB may cause noise to be output.
- When a different source is switched to Apple CarPlay while an iPhone is connected, playback will be started from the previously played track.

### WARNING

For safety reasons, the driver should not operate the iPhone while driving.

### NOTICE

- Do not leave the iPhone inside the vehicle. The inside of the vehicle can become hot, which could cause the iPhone to malfunction.
- Do not push down on or subject the connected iPhone to unnecessary pressure. The iPhone or port may be damaged.
- Keep the port free of foreign matter. The iPhone or port may be damaged.

### Related Links

[Precautions when using Apple CarPlay and Android Auto\(P.140\)](#)

### Playing Apple CarPlay


Play music files on an iPhone connected to the USB port or a wirelessly connected iPhone. When Apple CarPlay is connected, a button with the device's name is displayed on the source selection screen. This may not be displayed for some devices.

#### INFORMATION

- Some operations may not be available or they may operate differently, depending on the generation and model of iPhone that is connected.
- In cases such as the track not playing normally or audio skipping, update iOS to the latest version. Updating may resolve the issues.

Connect Apple CarPlay.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch [Apple CarPlay] (device name).
- 4 Operate the Apple CarPlay that is playing as necessary.
  - Perform operations from the screen

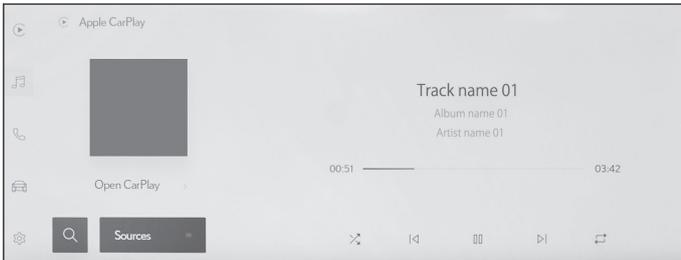

[  ] : Performs shuffle playback.

Each touch switches the shuffle setting.\*1

[  ] : Plays the currently playing track from the beginning.

When at the start of the track, the previous track will play from the beginning.

Touch and hold to fast rewind. Release to start playback from that position.

[  ] : Pauses playback.

[  ] : Plays.

[  ] : Switches the tracks.

Touch and hold to fast forward. Release to start playback from that position.

[  ] : Performs repeat playback.

Each touch switches the repeat setting.\*<sup>1</sup>


[Open CarPlay] : Playing Apple CarPlay

- Operating with the steering switches

#### [<]/[>] switches

Switches the tracks.

Press and hold to fast forward or fast rewind. Release to start playback from that position.

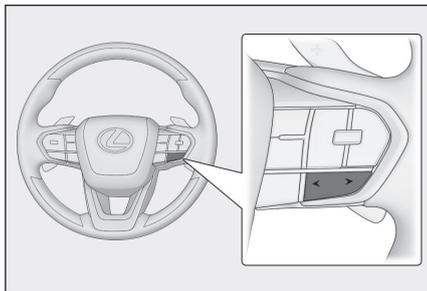

#### Related Links

[Changing sound and media settings\(P. 96\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

[Using Apple CarPlay with an unregistered smartphone\(P. 143\)](#)

[Using Apple CarPlay with a registered smartphone\(P. 146\)](#)

\*1: The order in which shuffle or repeat settings switch depends on the connected device.

### Precautions for playback of Android Auto

Pay special attention to the following information about playing Android Auto. This function is not made available in some countries or areas.

#### INFORMATION

- This function cannot be used while Apple CarPlay is connected.
- Disconnecting a connected device while Android Auto is connected via USB may cause noise to be output.
- When a different source is switched to Android Auto while an Android device is connected, playback will be started from the previously played track.

#### WARNING

For safety reasons, the driver should not operate the Android device while driving.

#### NOTICE

- Do not leave the Android device inside the vehicle. The inside of the vehicle can become hot, which could cause the Android device to malfunction.
- Do not push down on or subject the connected Android device to unnecessary pressure. The Android device or port may be damaged.
- Keep the port free of foreign matter. The Android device or port may be damaged.

---

#### Related Links

[Precautions when using Apple CarPlay and Android Auto\(P.140\)](#)


## Playing Android Auto

Play music files on an Android device connected to the USB port or a wirelessly connected Android device. When an Android device is connected, a button with the device's name is displayed on the source selection screen. This may not be displayed for some devices.

Connect Android Auto.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch [Android Auto] (device name).
- 4 Operate the Android Auto that is playing as necessary.

### ● Operating from the screen

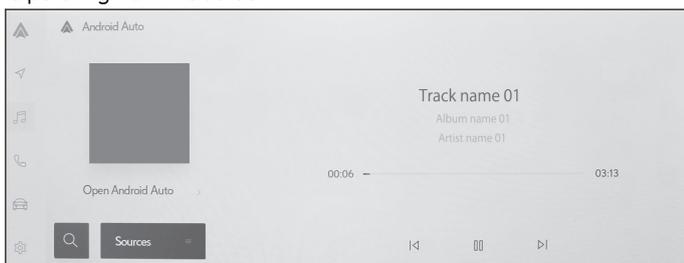

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

[  ] : Pauses playback.

[  ] : Plays.


[  ] : Switches the tracks.

[Open Android Auto] : Displays the Android Auto screen.

### ● Operating with the steering switches

#### [<|>] switches

Switches the tracks.

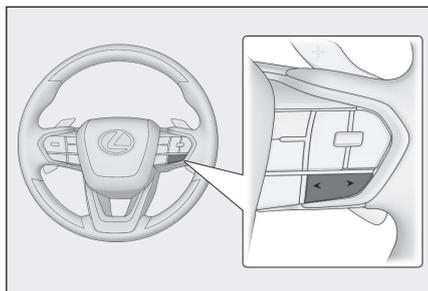

### — Related Links —

---

[Changing sound and media settings\(P. 96\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

[Using Android Auto with an unregistered smartphone\(P. 149\)](#)

[Using Android Auto with a registered smartphone\(P. 152\)](#)

## Precautions for Bluetooth® audio playback

Pay special attention to the following information when using Bluetooth® audio playback.

### INFORMATION

- Registration of the cellular phone or other Bluetooth® portable audio player (hereafter referred to as portable device) in the multimedia system is required before use.
- Please be aware that some functions may be limited depending on the model of portable device.
- Using simultaneously with a wireless device could negatively affect communication for each.
- When the Wi-Fi® function is enabled in the multimedia system settings, the Bluetooth® audio sound may be interrupted.

### WARNING

- For safety reasons, the driver should not operate the portable device while driving.
- The vehicle antenna for Bluetooth® communication is built into the vehicle near the instrument panel center.

People using electrical medical devices other than implantable cardiac pacemakers, implantable cardiac resynchronization therapy-pacemakers, or implantable cardioverter defibrillators should consult with their physician and the device manufacturer to determine whether electrical waves could adversely affect devices before use.

### NOTICE

- Do not leave the portable device inside the vehicle. The inside of the vehicle can become hot, which could cause the portable device to malfunction.
- Do not use a portable device near the multimedia system. Bringing it too close could cause sound or connection quality to deteriorate.

### Related Links

[Changing Wi-Fi® settings\(P. 100\)](#)

[Setting Wi-Fi® Hotspot\(P. 102\)](#)

[Precautions when using Bluetooth® devices\(P. 118\)](#)

[Bluetooth® information\(P. 270\)](#)

[Registering a Bluetooth® device from the multimedia system\(P. 122\)](#)

### Playing Bluetooth® audio


By connecting a portable device, the portable device can be used without operating it directly.

#### INFORMATION

- The following information/buttons may not be displayed depending on the connected portable device.
  - Folder title
  - Song name
  - Album name
  - Artist name
  - Playback time
  - Total time
  - Random
  - Repeat
  - Playback/pause
  - Track up/down
- The following issues may occur depending on the connected device.
  - Operation cannot be performed from the multimedia system.
  - Operation or volume is different.
  - The display of data such as song information or time may differ between the multimedia system and the portable device.
  - The connection may disconnect when playback stops.
- When playing for a long time, the sound may skip.
- The volume while connected may differ depending on the portable device.

A portable device can be connected to the multimedia system.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch the device name or [Bluetooth].
- 4 Operate the Bluetooth® audio that is playing as necessary.
  - Operating from the screen

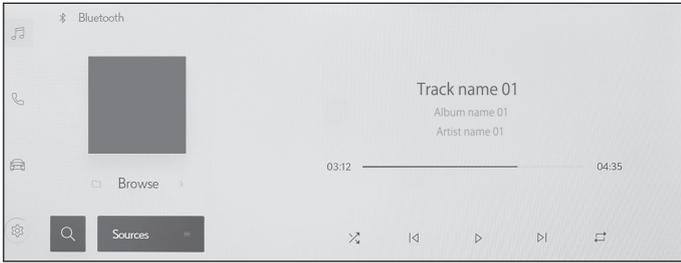

[  ] : Performs random playback.

Each touch switches the random setting.\*1

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

Touch and hold to fast rewind. Release to start playback from that position.

[  ] : Pauses playback.

[  ] : Plays.

[  ] : Switches the tracks.

Touch and hold to fast forward. Release to start playback from that position.

[  ] : Performs repeat playback.

Each touch switches the repeat setting.\*1


[**Browse**] : Displays the playback mode in the sub menu. Tracks can be selected from a list.

#### ● Operating with the steering switches

##### [<]/[>] switches

Switches the tracks.

Press and hold to fast forward or fast rewind. Release to start playback from that position.

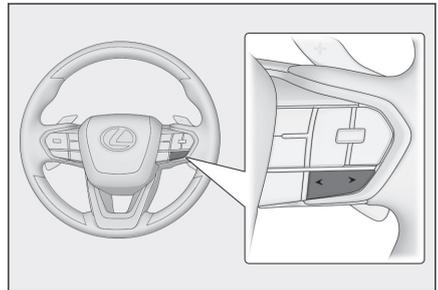

#### — Related Links —

[Changing sound and media settings\(P. 96\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

\*1: The order in which random or repeat settings switch depends on the model.

### Playing Integrated Streaming

The Integrated Streaming can be listened via audio system. In order to use this function, the customer needs to download and install the Lexus app to mobile device first. Your music account must be linked in Lexus app.

Go to <https://www.lexus.com> for more information.


This function is not made available in some countries or areas.

#### INFORMATION

- The available functions may vary depending on the music app.
- If you navigate to another Integrated Streaming screen while playing music, the playback screen is minimized. Selecting the minimized playback screen restores the playback screen to its original size.
- The screen layout may vary depending on the music app.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Select the desired streaming music service name to display the playback screen.
- 4 As necessary, operate the following while playing music.

#### ● Screen operation

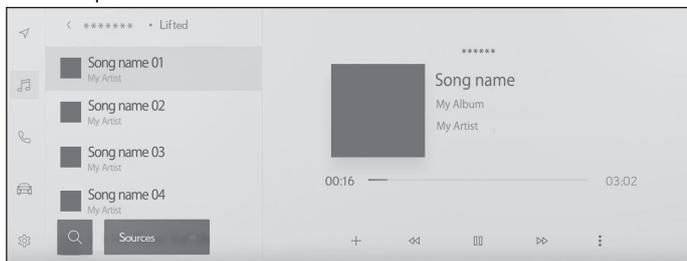

[  ] : Stores the current playing song to library.

[  ]/[  ] : Switches the track.

Touch and hold to fast rewind/fast forward. Release to start playback from that position.

[  ] : Stops the current playing music.

[  ] : Pauses playback.

[  ] : Plays.

[  ] : Displays the menu. The selectable contents as follow:

- [  ] : Creates a station that play songs similar to current playing song.
- [  ] : Performs random playback. Tracks or albums can be automatically and randomly selected.
- [  ] : Performs repeat playback. Each time this is touched, the mode switches in order of playlist, single track, and off.
- [Love]/[Dislike] : Helps to personalize recommended content in music app's homepage to better match your preferences.

Song name on sub menu list : The current playing song can be changed by touching folder name or song name.

---

### Related Links

[Changing sound and media settings\(P. 96\)](#)



### 6-1. Operating the radio on the Rear Seat Entertainment System

Listening to the radio on the Rear Seat Entertainment System..... 206

Listening to SiriusXM® Satellite Radio on the Rear Seat Entertainment System..... 207

### 6-2. Operating USB connected media on the Rear Seat Entertainment System

Playing music files from a USB flash drive on the Rear Seat Entertainment System..... 209

Playing music files from an iPod or iPhone on the Rear Seat Entertainment System..... 211

### 6-3. Operating smartphone music on the Rear Seat Entertainment System

Playing music from Apple CarPlay on the Rear Seat Entertainment System..... 213

Playing music from Android Auto on the Rear Seat Entertainment System..... 215

### 6-4. Operating Bluetooth® audio on the Rear Seat Entertainment System

Playing music from a Bluetooth® connected device

on the Rear Seat Entertainment System..... 217

### 6-5. Operating an HDMI connected device on the Rear Seat Entertainment System

Playing rear seat HDMI media on the Rear Seat Entertainment System..... 219

### 6-6. Operating a Miracast® connected device on the Rear Seat Entertainment System

Precautions for using Miracast® in the rear seat..... 220

Connecting to Miracast® in the rear seat..... 221

Playing rear seat Miracast® on the Rear Seat Entertainment System..... 222

Disconnecting Miracast® in the rear seat..... 223

### 6-7. Operating Integrated Streaming on the Rear Seat Entertainment System

Playing Integrated Streaming on the Rear Seat Entertainment System..... 224

### Listening to the radio on the Rear Seat Entertainment System

#### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

#### 2 Select [AM] or [FM].


The radio reception screen is displayed.

#### 3 Operate the radio that is being received as necessary.

- Rear seat display

[Tune] : Select [  ] or [  ] to switch the frequency.

Select and hold to jump to the next frequency with available radio signal. When released, the broadcasting station closest to that position with the best reception sensitivity is selected automatically.

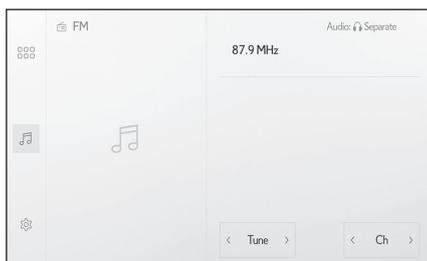


[Ch] : Select [  ] or [  ] to switch the broadcasting stations stored in the preset buttons.

- Rear multi-operation panel\*1

[Ch] : Select [  ] or [  ] to switch the broadcasting stations stored in the preset buttons.

[Tune] : Select [  ] or [  ] to switch the frequency.

Select and hold to jump to the next frequency with available radio signal. When released, the broadcasting station closest to that position with the best reception sensitivity is selected automatically.

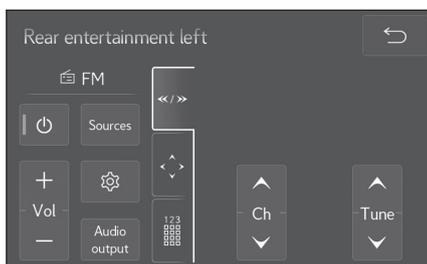

#### Related Links

[Listening to the radio\(P. 180\)](#)

\*1: If equipped

## Listening to SiriusXM® Satellite Radio on the Rear Seat Entertainment System

This function is not made available in some countries or areas.

### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

### 2 Select [SiriusXM].

The SiriusXM Radio reception screen is displayed.

### 3 Operate the radio that is being received as necessary.

- Rear seat display

[Ch] : Select [  ] or [  ] to switch the channel.

[Tune] : Select [  ] or [  ] to search for the receivable channels. Select and hold to jump to the next frequency with available radio signal. When released, the current channel is received.

[  ]/[  ] : Fast rewinds or fast forwards.

[  ] : Plays or pauses playback.

- Rear multi-operation panel\*1



[Ch] : Select [  ] or [  ] to switch the channel.

[Tune] : Select [  ] or [  ] to search for the receivable channels. Select and hold to jump to the next frequency with available radio signal. When released, the current channel is received.

[  ]/[  ] : Fast rewind or fast forward the radio cache.

Select and hold to jump to the start or end of the buffer.

[  ] : Plays or pauses playback.

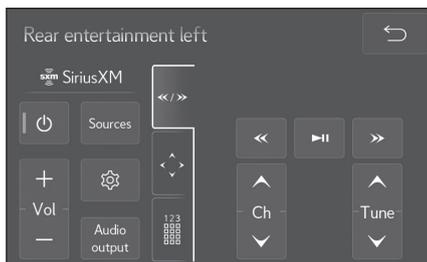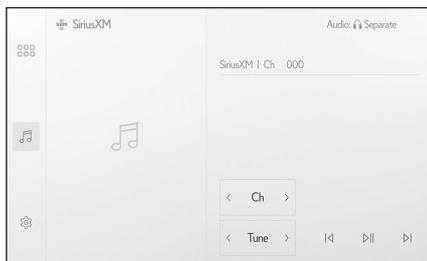

## 6-1. Operating the radio on the Rear Seat Entertainment System

---

### — Related Links —

---

[Listening to the radio\(P. 180\)](#)

\*1: If equipped

## Playing music files from a USB flash drive on the Rear Seat Entertainment System

Play music files on a USB flash drive connected to the USB port.

Insert the USB flash drive into the front seat audio system.

### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

### 2 Select [USB] or the name of the connected device.

### 3 Select the desired file from the displayed list.

### 4 Operate the music that is playing as necessary.

- Rear seat display

[  ] : Performs random playback. Each time this is selected, the mode switches between random playback for all files or tracks, random playback canceled, and random playback of the currently playing folder or album.

[  ] : Plays the currently playing file or track from the beginning.

When at the start of the file or track, the previous file or track will play from the beginning. Select and hold to fast rewind. Release to start playback from that position.

[  ] : Pauses playback.

[  ] : Plays.


[  ] : Switches the files or tracks.

Select and hold to fast forward. Release to start playback from that position.

[  ] : Performs repeat playback.

Each time this is selected, the mode switches in order from repeat the currently playing file or track, repeat playback of the currently playing folder or album, and repeat playback of all files or tracks.

- Rear multi-operation panel\*1

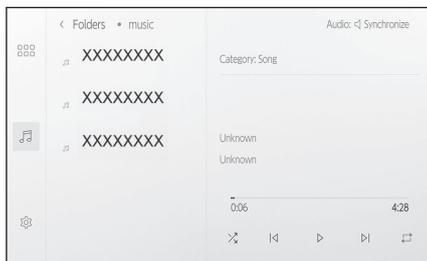

## 6-2. Operating USB connected media on the Rear Seat Entertainment System

---


[  ]/[  ] : Select and hold to fast rewind or fast forward. Release to start playback from that position.

[  ]/ : Plays the currently playing file or track from the beginning. When at the start of the file or track, the previous file or track will play from the beginning.

[  ] : Switches the files or tracks.

[  ] : Plays or pauses playback.

[Folder Album] : Select [  ] or [  ] to switch the folder.

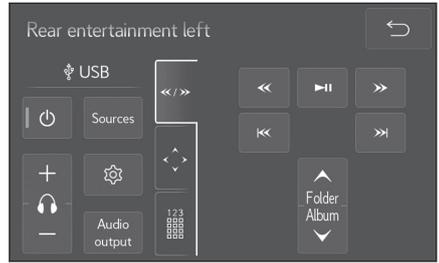

---

### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Information about media and data that can be used in the audio system\(P. 264\)](#)

\*1: If equipped

## Playing music files from an iPod or iPhone on the Rear Seat Entertainment System

Play back music files on an iPod or iPhone connected to the USB port.

Connect an iPod or iPhone to the front seat audio system with a USB cable.

### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

### 2 Select the device name or [USB].

The iPod audio screen is displayed.

### 3 Select the desired file from the displayed list.

### 4 Operate the music that is playing as necessary.

- Rear seat display

[  ] : Performs shuffle playback. Each time this is selected, the shuffle setting switches. \*1\*2

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning. \*1


[  ] : Pauses playback.

[  ] : Plays.

[  ] : Switches the tracks. \*1

[  ] : Performs repeat playback. Each time this is selected, the repeat setting switches. \*1\*2

- Rear multi-operation panel\*3

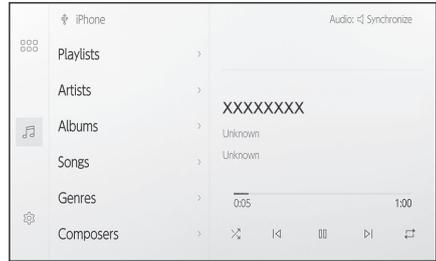


## 6-2. Operating USB connected media on the Rear Seat Entertainment System

---

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning. Select and hold to fast rewind. Release to start playback from that position. \*1

[  ] : Switches the tracks. Select and hold to fast forward. Release to start playback from that position. \*1

[  ] : Plays or pauses playback.

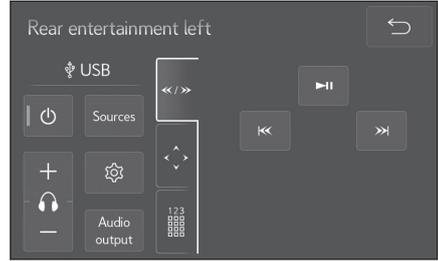

---

### Related Links

[Connecting to the USB port\(P. 35\)](#)

[Information about media and data that can be used in the audio system\(P. 264\)](#)

\*1: This cannot be operated during playback of radio.

\*2: The order in which shuffle or repeat settings switch depends on the connected device.

\*3: If equipped

## Playing music from Apple CarPlay on the Rear Seat Entertainment System

Play back music files on an Apple CarPlay connected device. This function can be used only while the audio output mode is in linked mode. This function cannot be used while Android Auto is connected.

Connect Apple CarPlay to the front seat audio system.

### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

### 2 Select [Apple CarPlay] (device name).

The Apple CarPlay audio screen is displayed.

### 3 Operate the music that is playing as necessary.

- Rear seat display

[  ] : Performs shuffle playback. Each touch switches the shuffle setting.\*1

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.



[  ] : Plays or pauses playback.

[  ] : Switches the tracks.

[  ] : Performs repeat playback. Each time this is selected, the repeat setting switches.\*1

- Rear multi-operation panel\*2

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning. Select and hold to fast rewind. Release to start playback from that position.

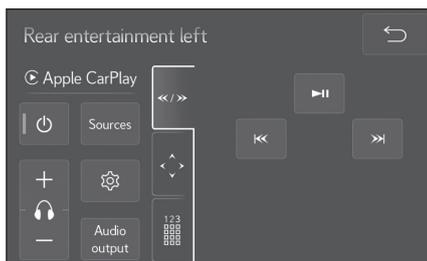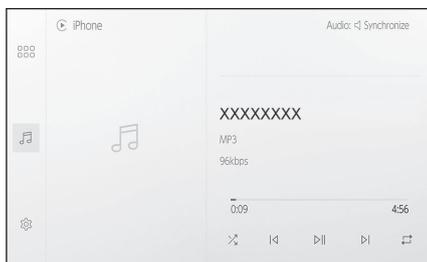

## 6-3. Operating smartphone music on the Rear Seat Entertainment System

---

[  ] : Switches the tracks. Select and hold to fast forward. Release to start playback from that position.

[  ] : Plays or pauses playback.

---

### Related Links

[Precautions for playback of Apple CarPlay\(P.193\)](#)

[Using Apple CarPlay with an unregistered smartphone\(P.143\)](#)

[Using Apple CarPlay with a registered smartphone\(P.146\)](#)

\*1: The order in which shuffle or repeat settings switch depends on the connected device.

\*2: If equipped

## Playing music from Android Auto on the Rear Seat Entertainment System

Play back music files on an Android Auto connected device. This function can be used only while the audio output mode is in linked mode. This function cannot be used while Apple CarPlay is connected.

Connect Android Auto to the front seat audio system.

### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

### 2 Select [Android Auto].

The Android Auto audio screen is displayed.


### 3 Operate the music that is playing as necessary.

- Rear seat display

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

[  ] : Plays or pauses playback.

[  ] : Switches the tracks.

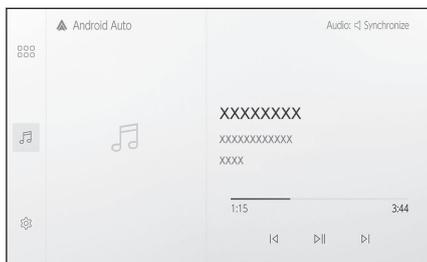


- Rear multi-operation panel\*<sup>1</sup>

[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

[  ] : Switches the tracks.

[  ] : Plays or pauses playback.

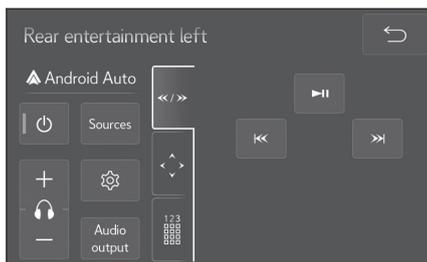

### Related Links

[Precautions for playback of Android Auto\(P. 196\)](#)

[Using Android Auto with an unregistered smartphone\(P. 149\)](#)

\*1: If equipped

## 6-3. Operating smartphone music on the Rear Seat Entertainment System

---

Using Android Auto with a registered smartphone(P. 152)

## Playing music from a Bluetooth® connected device on the Rear Seat Entertainment System

By connecting a Bluetooth® portable audio player (portable device) to the front seat audio system, the portable device can be used without operating it directly.

Connect a portable device to the front seat audio system via Bluetooth®.

### 1 Perform any of the following operations to display the source selection screen.

- Select [  ] from the main menu.
- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

### 2 Select [Bluetooth audio].

The Bluetooth® audio screen is displayed.

### 3 Operate the music that is playing as necessary.

- Rear seat display

[  ] : Performs random playback. Each time this is selected, the random setting switches.


[  ] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning. Select and hold to fast rewind. Release to start playback from that position.

[  ] : Pauses playback.

[  ] : Plays.

[  ] : Switches the tracks. Select and hold to fast forward. Release to start playback from that position.

[  ] : Performs repeat playback. Each time this is selected, the repeat setting switches.

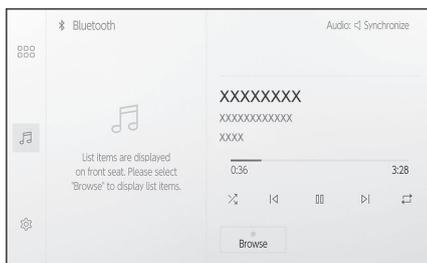

## 6-4. Operating Bluetooth® audio on the Rear Seat Entertainment System

---

[**Browse**] : Displays or hides the list screen.

While the list screen is displayed, a track can be selected and played from the list.

The list is not displayed in the front seats while the list is displayed in the rear seats.

If not operated for a certain period after the list is displayed in the rear seats, the list will automatically be hidden for the rear seats.


### ● Rear multi-operation panel\*1

[**⏮**]/[**⏭**] : Select and hold to fast rewind or fast forward. Release to start playback from that position.

[**⏪**] : Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

[**⏩**] : Switches the tracks.

[**⏸**] : Play or pause playback.

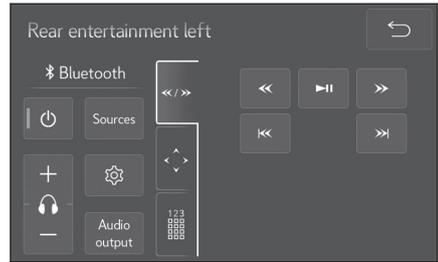

---

### Related Links

[Precautions for Bluetooth® audio playback \(P. 199\)](#)

[Bluetooth® information\(P. 270\)](#)

[Precautions when using Bluetooth® devices\(P. 118\)](#)

[Registering a Bluetooth® device from the multimedia system\(P. 122\)](#)

\*1: If equipped

## Playing rear seat HDMI media on the Rear Seat Entertainment System

Play an external device connected to the rear seat HDMI port using a commercial cable.

Connect an HDMI device to the rear seat HDMI port.

- 1 Turn on the HDMI device.
- 2 Perform any of the following operations to display the source selection screen.
  - Select [  ] from the main menu.
  - Press [SOURCE] on the rear seat display.The source selection screen is displayed.
- 3 Select [Rear-HDMI].

 **NOTICE**

When not using the HDMI port, close the lid.

A malfunction or short may occur if the connection ports are exposed to foreign matter, liquid from drinks, or other substances.

### Related Links

[Connecting an HDMI device to the Rear Seat Entertainment System \(5-passenger/7-passenger\)\(P. 46\)](#)

[Connecting an HDMI device to the Rear Seat Entertainment System \(4-passenger\)\(P. 47\)](#)

[Changing the rear seat HDMI settings on the Rear Seat Entertainment System\(P. 112\)](#)

### Precautions for using Miracast<sup>®</sup> in the rear seat

Displays the screen or plays the audio of a smartphone or tablet connected to the Rear Seat Entertainment System via Miracast<sup>®</sup> onto the Rear Seat Entertainment System screen.

#### INFORMATION

- The Rear Seat Entertainment System connects to devices via Wi-Fi<sup>®</sup> (P2P mode).
- Wi-Fi<sup>®</sup> and Miracast<sup>®</sup> are registered trademarks of Wi-Fi Alliance<sup>®</sup>.
- This is a best-effort function.
- The displayed names of Miracast<sup>®</sup> vary depending on the device.
- Miracast<sup>®</sup> performs wireless communication using the same 2.4 GHz radio frequency band as Bluetooth<sup>®</sup>. Depending on the usage environment, radio wave interference may occur, resulting in image distortion and audio stuttering.
- When the Wi-Fi<sup>®</sup> network connection is set to on, Wi-Fi<sup>®</sup> network connection communication and Miracast<sup>®</sup> communication may affect each other, causing image distortion and audio stuttering.
- Android smartphones and tablets that support Miracast<sup>®</sup> can connect.  
To determine whether a device supports Miracast<sup>®</sup>, refer to the instruction manual and other documentation included with the device.\*1

#### NOTICE

Do not leave the smartphone or tablet inside the vehicle. The inside of the vehicle can become hot, which could cause the smartphone or tablet to malfunction.

#### — Related Links —

[Connecting to Miracast<sup>®</sup> in the rear seat\(P. 221\)](#)


[Playing rear seat Miracast<sup>®</sup> on the Rear Seat Entertainment System\(P. 222\)](#)

[Disconnecting Miracast<sup>®</sup> in the rear seat\(P. 223\)](#)

\*1: Operations are not guaranteed on the Rear Seat Entertainment System.

### Connecting to Miracast<sup>®</sup> in the rear seat

- 1 Perform any of the following operations to display the source selection screen.
  - Select [  ] from the main menu.
  - Press [SOURCE] on the rear seat display.  
The source selection screen is displayed.
- 2 Select [Rear-Miracast<sup>®</sup>].  
The connection screen is displayed.
- 3 This makes Miracast<sup>®</sup>-compatible devices capable of connecting.
  - For details on how to operate the device, refer to the instruction manual included with the device.
  - If a connection failed screen is displayed, start the connection procedure over from the beginning.
- 4 Check the device name and then select [OK].

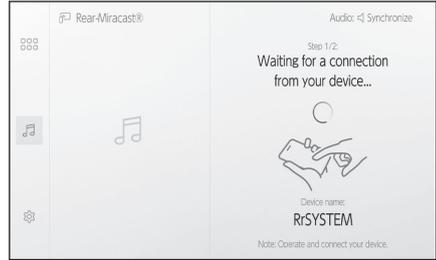

#### Related Links

[Precautions for using Miracast<sup>®</sup> in the rear seat\(P. 220\)](#)

[Playing rear seat Miracast<sup>®</sup> on the Rear Seat Entertainment System\(P. 222\)](#)

[Disconnecting Miracast<sup>®</sup> in the rear seat\(P. 223\)](#)

### Playing rear seat Miracast® on the Rear Seat Entertainment System

Connect a Miracast®-compatible device to the Rear Seat Entertainment System.

#### 1 Perform any of the following operations to display the source selection screen.

- Select [- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

#### 2 Select [Rear-Miracast®].

The [Rear-Miracast®] screen is displayed.

- Playback of Miracast® stops in the following cases:
  - When the Miracast® function ends on the Miracast® supported device
  - When rear seat Miracast® is disconnected on the Rear Seat Entertainment System



#### INFORMATION

The connected device can be operated by directly touching the rear seat display during Miracast® connection.\*1

#### Related Links

[Precautions for using Miracast® in the rear seat\(P. 220\)](#)

[Connecting to Miracast® in the rear seat\(P. 221\)](#)

[Disconnecting Miracast® in the rear seat\(P. 223\)](#)

\*1: Not all devices necessarily support this function.

### Disconnecting Miracast<sup>®</sup> in the rear seat

- 1 Perform any of the following operations to display the source selection screen.
  - Press [SOURCE] on the rear seat display.
  - Press [Rear menu] on the cursor key screen of the rear multi-operation panel.
- 2 Select [] from the main menu.
- 3 Select [Disconnect].

---

#### Related Links

[Precautions for using Miracast<sup>®</sup> in the rear seat\(P. 220\)](#)

[Connecting to Miracast<sup>®</sup> in the rear seat\(P. 221\)](#)

[Playing rear seat Miracast<sup>®</sup> on the Rear Seat Entertainment System\(P. 222\)](#)

### Playing Integrated Streaming on the Rear Seat Entertainment System

Play back Integrated Streaming on the Rear Seat Entertainment System. In order to use this function, the customer needs to download and install the Lexus app to mobile device first. Your music account must be linked in Lexus app. Go to <https://www.lexus.com> for more information.

This function is not made available in some countries or areas.

#### 1 Perform any of the following operations to display the source selection screen.

- Select [- Press [SOURCE] on the rear seat display.

The source selection screen is displayed.

#### 2 Select the desired streaming music service.

The Integrated Streaming screen is displayed.

---

#### Related Links

[Playing Integrated Streaming\(P. 202\)](#)

**7.1. Precautions when using hands-free calls**

- Precautions for hands-free calling ..... **226**
- Precautions when selling or disposing of the vehicle..... **229**
- When hands-free calling might be malfunctioning... **230**

**7.2. Operating hands-free calls with the steering switches**

- Operating with the steering switches ..... **234**

**7.3. How to make calls**

- Making calls from call history..... **236**
- Making calls from the favorites list..... **237**
- Making calls from contacts **238**
- Making calls from keypad.... **239**

**7.4. How to receive calls**

- Answering calls..... **240**
- Declining calls..... **241**

**7.5. In-call operations**

- Performing operations from the call screen..... **242**
- Answering a second call ..... **244**
- Making a call to another party during an ongoing call..... **245**
- Making conference calls..... **246**
- Ending calls..... **247**

**7.6. Changing phones for hands-free calls**

- Switching phones for hands-free calls ..... **248**

**7.7. Editing contact data**

- Transferring contact data ..... **249**

**7.8. How to use the message function**

- Precautions when using the message function..... **251**
- Making calls from the message function ..... **255**

### Precautions for hands-free calling

By connecting a Bluetooth® cellular phone (hereafter referred to as "cellular phone") that has been verified with the system, the phone function can be used to make and receive calls without operating the cellular phone directly. This is known as hands-free calling.

A cellular phone must support the multimedia system specifications in order to connect to the system. However, be aware that some functions may be limited depending on the model of cellular phone.

Even while connected to Apple CarPlay or Android Auto, the hands-free phone screen for Apple CarPlay or Android Auto may not be displayed, depending on conditions.

#### INFORMATION

- Observe the following precautions when using the cellular phone with the hands-free function.
  - A cellular phone must be registered to the multimedia system and connected with Bluetooth® before hands-free calling can be used. To use hands-free calling, first register a cellular phone.
  - Make sure the cellular phone is able to utilize the Bluetooth® function.
  - If attempting to make or receive a call during Bluetooth® audio playback, the screen display and dial tone or ringtone sound may be delayed.
- The multimedia system is not guaranteed to operate with all Bluetooth® devices. The following issues may occur depending on the cellular phone model.
  - When the engine switch is operated during a hands-free call, the call may be disconnected.
  - The calling screen may not be displayed, or the call screen may be displayed before the other party answers the phone.
  - Even if numbers are entered using the numeric keypad on the calling screen, the tone signal may not be transmitted depending on the cellular phone service provider.
  - After dialing, it may be necessary to perform operations on the cellular phone.
- Hands-free calling may be unavailable in the following situations.
  - When outside of the calling area
  - When outgoing calls are restricted, such as when the lines are congested
  - During emergency calls
  - While contact data is being transferred from the cellular phone

- When dial lock is turned on for the cellular phone
  - When the cellular phone is in use, such as when transmitting data
  - When the cellular phone is malfunctioning
  - When the cellular phone is not connected
  - When the cellular phone has a low battery
  - When the cellular phone is turned off
  - When the settings prevent the cellular phone from being used for hands-free calls
  - When switching from data communication or contact transfer to hands-free calling with the multimedia system. (While switching, Bluetooth<sup>®</sup> connection status for the multimedia system will not be displayed)
  - When the cellular phone itself cannot be used for any other reason
- If hands-free calling and the Wi-Fi<sup>®</sup> function (Wi-Fi<sup>®</sup> or Wi-Fi<sup>®</sup> Hotspot<sup>\*1</sup>) are used simultaneously, the Bluetooth<sup>®</sup> connection of the cellular phone may be disconnected.

### WARNING

- For safety reasons, the driver should not operate the cellular phone itself while driving.
- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth<sup>®</sup> antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth<sup>®</sup> devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

### NOTICE

Do not leave a cellular phone inside the vehicle. The inside of the vehicle can become hot, which could cause the cellular phone to malfunction.

### — Related Links —

[Precautions when using Bluetooth<sup>®</sup> devices\(P. 118\)](#)

[Bluetooth<sup>®</sup> specifications and compatible profiles\(P. 121\)](#)

[Registering a Bluetooth<sup>®</sup> device from the multimedia system\(P. 122\)](#)

\*1: This function is not made available in some countries or areas.

### Precautions for call audio

In a hands-free call, the car's built-in microphone can be used to speak. Pay special attention to the following information when making a hands-free call.

- The audio when receiving calls or when talking during calls are output from speakers on both sides of the front seats.
- The audio is muted when a voice or ringtone is output from the hands-free system.

#### INFORMATION

- During calls, take turns speaking with the other party on the phone. If both parties speak at the same time, it may be difficult to hear what the other party is saying.
- If the receiver volume is too high, the other party's voice may be audible outside the vehicle or echoes may be heard.
- Speak clearly in a loud voice.
- In the following cases, it may be difficult for the other party to hear your voice.
  - Driving on an unpaved road.
  - Driving at high speeds.
  - The roof or windows are open.
  - The sound of the air conditioning fan is loud.
- There is an adverse effect on sound quality (such as noise or echo) due to the phone or network being used.
- If other Bluetooth<sup>®</sup> devices are connected at the same time, noise may be generated in the hands-free system audio.
- If the multimedia system has been configured to use the Wi-Fi<sup>®</sup> function (Wi-Fi<sup>®</sup> or Wi-Fi<sup>®</sup> Hotspot<sup>\*2</sup>), noise may be generated in the hands-free system.

\*2: This function is not made available in some countries or areas.

## Precautions when selling or disposing of the vehicle

A lot of personal information is registered when using the hands-free system. Make sure to clear all information before selling or disposing of the vehicle.

After initializing all the information, all the data in the multimedia system will be initialized and returned to the factory default. It cannot be returned to the state before initialization.

---

### Related Links

[Changing the security settings\(P. 85\)](#)

### When hands-free calling might be malfunctioning

If you notice any of the following symptoms, refer to the following table for possible reasons and solutions, and check the symptom again.

#### ■ Using hands-free calls

Symptom	Possible reason	Solution
Hands-free calls cannot be used	Your cellular phone does not support Bluetooth®.	For a list of specific devices which operation has been confirmed on multimedia system, check with your Lexus dealer or the following web-site: <a href="https://lexusconnectedtechnology.com/">https://lexusconnectedtechnology.com/</a>
	Your cellular phone version is not compatible with Bluetooth®.	Use a cellular phone compatible with Bluetooth® Core Specification Ver. 5.0 or later.

#### ■ Cellular phone registration and connection

Symptom	Possible reason	Solution
Your cellular phone cannot be registered	The cellular phone registration operation has not been completed.	Select the authentication button when it is shown on your cellular phone and continue the registration operation.
	There is registration information remaining on either the cellular phone or the multimedia system.	Perform the registration operation again after deleting the registration information from both the multimedia system and the cellular phone.
Cannot connect via Bluetooth®	A cellular phone other than the one to use is already connected via Bluetooth®.	Manually connect the cellular phone to use via Bluetooth® from the multimedia system.
	The Bluetooth® function of the cellular phone is not activated.	While the engine switch is in ACC or ON, activate the Bluetooth® function on the cellular phone.
	The cellular phone registration information has been deleted.	Perform the registration operation after deleting the registration information from both the multimedia system and the cellular phone.

### ■ Calling and receiving calls

Symptom	Possible reason	Solution
Cannot make or receive calls	Outside the service area	Move the vehicle into to a service coverage area.
	Call restriction (dial lock) is turned on for the cellular phone.	Turn off call restriction (dial lock) for the cellular phone.

### ■ Contacts

Symptom	Possible reason	Solution
Cannot transfer or automatically transfer contact data	The cellular phone profile does not support transferring contact data.	For a list of specific devices which operation has been confirmed on multimedia system, check with your Lexus dealer or the following web-site: <a href="https://lexusconnectedtechnologysupport.com/">https://lexusconnectedtechnologysupport.com/</a>
	[Sync contacts] in the Bluetooth® settings on the multimedia system is set to off.	Set [Sync contacts] in the Bluetooth® settings on the multimedia system to on. (→ P.104)
	The cellular phone is waiting for approval to transfer contacts.	Select the contacts transfer approval button on the cellular phone.
An approval confirmation screen is displayed on the cellular phone	"Always allow" is not selected during approval.	Select "Always allow" and approve on the cellular phone.
The contact data is registered elsewhere	The contacts are not registered to the cellular phone.	Please register the contacts to the cellular phone.

### ■ When using the Bluetooth® message function

Symptom	Possible reason	Solution
New message notifications are not displayed.	Set [Do not disturb] on multimedia system to ON.	Set [Do not disturb] on multimedia system to OFF. (→ P.104)

## 7.1. Precautions when using hands-free calls

Symptom	Possible reason	Solution
New message notifications are not displayed.	Automatic message transfer function is not enabled on the cellular phone.	Enable automatic transfer function on the cellular phone.

### ■ Other conditions

Symptom	Possible reason	Solution
If symptoms do not improve after applying possible solutions.	The cellular phone and multimedia system are too far apart.	Move the cellular phone and multimedia system closer together.
	Electromagnetic interference is being generated.	Turn the power off for any devices that may be generating electromagnetic waves, such as Wi-Fi® devices. Set the Wi-Fi® setting and Wi-Fi® Hotspot setting on the multimedia system to off.
	The cause lies in the cellular phone.	Turn the power off for the cellular phone, and remove the battery pack.
		Turn the cellular phone's Bluetooth® connection from off to on.
		Turn off the cellular phone's Wi-Fi® connection.
Stop any security software or background applications that are running on the cellular phone.		
Make sure to carefully confirm the provider and operating status of applications installed on the cellular phone before use.		

### INFORMATION

For more details, refer to the instruction manual included with the cellular phone.

### — Related Links —

[Registering a Bluetooth® device from the multimedia system\(P. 122\)](#)

[Deleting a registered Bluetooth® device\(P. 125\)](#)

Setting Bluetooth® devices(P. 104)

Disconnecting Wi-Fi®(P. 136)

Disconnecting Wi-Fi® Hotspot(P. 138)

### Operating with the steering switches

Some hands-free call functions can be operated from the steering switches, such as receiving or making calls. The steering switch functions change depending on the status of the multimedia system.

#### ● Operate the switches as necessary.

##### [+] switch

Increases the ringtone volume or receiver volume.

Press and hold to adjust continuously.

##### [-] switch

Decreases the ringtone volume or receiver volume.

Press and hold to adjust continuously.


##### [] switch

Calls can be made using voice command.

To end Intelligent Assistant, press and hold the talk switch.

##### [] switch

- While a call cannot be made, displays call history screen or phone menu.
- Phone calls can be made when [] is displayed on the phone screen.
- While making a call or during a call, ends the call.
- While receiving a call or during call waiting, answers the call.

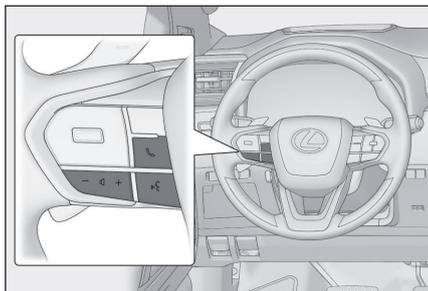

#### INFORMATION

- While Apple CarPlay or Android Auto is connected, press [] to display the Apple CarPlay or Android Auto phone screen on the multimedia system.
- While Apple CarPlay and a hands-free phone are connected, press [] to display the Apple CarPlay or multimedia system phone screen. The function that was used last is prioritized. If neither has been used, the primary device is prioritized.
- While Android Auto and a hands-free phone are connected, press [] to display the Android Auto phone screen.
- When receiving a call, the incoming call screen for the cellular phone (hands-free phone, Apple CarPlay, or Android Auto) is displayed.

### — Related Links —

---

[Precautions when using Apple CarPlay and Android Auto\(P. 140\)](#)

[Starting voice control\(P. 57\)](#)


### Making calls from call history

Calls can be made to phone numbers that have been recorded in the call history as outgoing or incoming calls.

- 1 Touch [  ] from the main menu.
- 2 Touch [Recents].
- 3 Select the contact.

For phone numbers that are not registered in the contact, the phone number will be displayed as it is.

- 4 Touch the desired phone number.

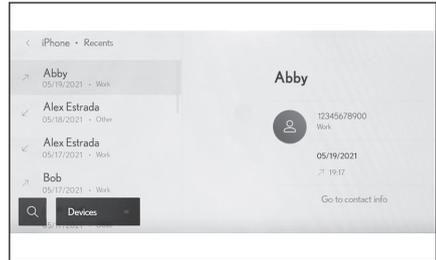


#### INFORMATION

- The latest 100 entries in the call history are shown. If the call history exceeds 100 entries, history items are automatically deleted starting from the oldest.
- The outgoing call history is registered as follows, depending on conditions.
  - If the call was placed to a phone number registered in contacts or to the multimedia system, the name and image data are also registered if they exist.
  - If you make a call to the same phone number, the number of calls is displayed after the destination name.
- The incoming call history is registered as follows, depending on conditions.
  - If the call was received from a phone number registered in contacts, the name and image data are also registered if they exist.
  - If multiple calls were received from the same phone number, all are registered.
  - Missed calls and declined calls are also registered.
  - If the other party does not support caller ID, the call is registered as "Unknown".
- Calls that were placed on hold are also registered to the call history.
- Depending on the model of cellular phone, it may not be possible to make international calls.

## Making calls from the favorites list

Make a call from your favorites list.

- 1 Touch [  ] from the main menu.
- 2 Touch [Favorites].
- 3 Select the person you want to call from your favorites list.
- 4 Touch the desired phone number.

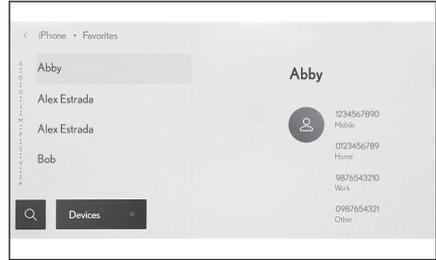

### INFORMATION

- If [**Sync contacts**] is on, cellular phone favorites will be automatically transferred to the multimedia system. (→ P.104)
- Depending on the cellular phone model, favorites cannot be transferred.


### Related Links

[Transferring contact data\(P. 249\)](#)

### Making calls from contacts

Make a call from the contacts registered on the multimedia system.

- 1 Touch [  ] from the main menu.
- 2 Touch [Contacts].
- 3 Select a contact.
- 4 Touch the desired phone number.

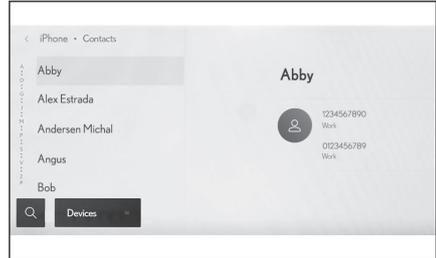

#### INFORMATION

- If no contact data has been registered, contact data must be transferred to the multimedia system.
- The contact data of the connected hands-free phone is displayed as the contact data of the multimedia system. When the hands-free phone is switched during a 2-phone connection, the contact data also switches.

#### Related Links


[Transferring contact data\(P. 249\)](#)

## Making calls from keypad

Enter the phone number on the keypad to make a call.

- 1 Touch [  ] from the main menu.
- 2 Touch [Keypad].
- 3 Enter the phone number.
- 4 Touch [  ] or press the [  ] switch on the steering.

Calls can also be made by touching a contact displayed on the sub menu.

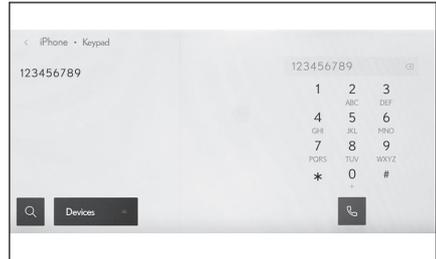

### Related Links


[Operating with the steering switches\(P.234\)](#)

### Answering calls

When there is an incoming call, the incoming call sounds and the incoming call screen or incoming call notification is displayed.

● **Answer the call by doing one of the following.**

- Touch .
- Press the  switch on the steering.

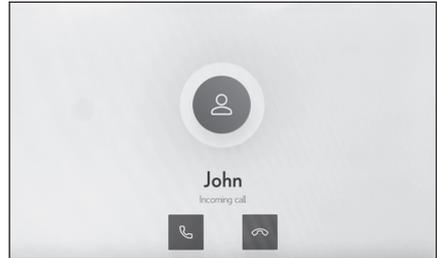

#### INFORMATION

- The incoming call screen is not displayed while the peripheral monitoring screen is being displayed. Incoming call notification is provided by ringtone only.
- During an incoming call, all sounds other than those coming from the hands-free call are muted. However, voice guidance with a higher priority than the hands-free call is not muted.
- Even if the cellular phone ringtone is set on the multimedia system, the multimedia system may output a different ringtone depending on the cellular phone settings.
- Depending on the cellular phone settings such as drive mode, you may not be able to receive calls.
- Depending on the cellular phone model, the following may occur.
  - The ringtone may be heard from both the vehicle speakers and the cellular phone.
  - When receiving a call, the caller's phone number may not be displayed.
  - If a call was received by operating the cellular phone directly, or if the cellular phone has been set to automatically answer calls, the call may stay on the cellular phone.
  - If there was an incoming call while the cellular phone is transmitting data, the incoming call screen may not be displayed on the multimedia system and the ringtone may not sound.
- The call is declined when a call is received from a phone number that is set to be declined in the cellular phone settings.

#### Related Links

[Operating with the steering switches\(P. 234\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

## Declining calls

On the multimedia system, calls can be declined using several methods.

- **When receiving a call, perform any of the following operations to decline the call.**
  - Touch .
  - Operate the cellular phone directly.

### INFORMATION

- The call is declined when a call is received from a phone number that is set to be declined in the cellular phone settings.
- Setting [**Do not disturb**] in the Bluetooth® settings to on enables hands-free calls to be declined and notification by audio and display to be disabled. However, this is not applied to the phone function of Apple CarPlay or Android Auto. Even while a hands-free phone and Android Auto are connected, this is not applied to the hands-free call function. (→ P.104)

### Related Links

[Operating with the steering switches\(P. 234\)](#)

### Performing operations from the call screen

During a call, various operations can be performed from the call screen.

[  ] : Mutes the sound transmission so that the other party on the call cannot hear you speak. While muted, the button changes to blue. To deactivate, touch the button again.



● You can hear what the other party is saying.

[  ] : Displays the keypad screen. The call screen will be displayed as small while the keypad screen is displayed.

[  ] : Hang up during a call.

[  ] : Display the contact list in the sub menu to make a call to another person.

● You can make a call to another person by touching the phone number during a call to make a call.

[  ] : Allows a call to be switched between the cellular phone and the multimedia system. During a cellular phone call, the button changes to blue.

[  ] : Cancel the pending call. Only displayed on hold.

[  ] : Reduce the call screen.

[  ] : Display the call screen in the main area.

#### INFORMATION

- Depending on the state of the multimedia system, the call screen may be reduced or not displayed.
- Switching calls may not be possible depending on the cellular phone model.
- Calls cannot be switched from the hands-free system to the cellular phone while driving. Switching calls may not be possible depending on the cellular phone model.
- If the cellular phone you are talking on is connected to the multimedia system as a hands-free phone, the call screen is displayed. Depending on the model of cellular phone, the call will either continue on the cellular phone or switch to a call on the multimedia system.

- If you operate the engine switch during a call with a hands-free phone, the call may be disconnected or continued on the cellular phone depending on the cellular phone model. If you want to continue on your cellular phone, you may need to operate your cellular phone.

---

### Related Links


[Operating with the steering switches\(P. 234\)](#)

### Answering a second call

If you receive a second call from another party during an ongoing call, call-waiting can be used to handle both calls. When a second call is received, an incoming call notification is displayed at the top of the screen.

#### INFORMATION

- You must have a call waiting contract with your cellular phone provider.
  - If the cellular phone does not support HFP Ver. 1.5 or later, call-waiting will not be available.
  - Depending on the cellular phone model and subscription details, it may not be possible to use this function.
- **While receiving a second call, touch  on the screen, or press the  switch on the steering.**
- Answering the second call places the previous call on hold.
- The caller will be switched each time **[Swap calls]** is touched.

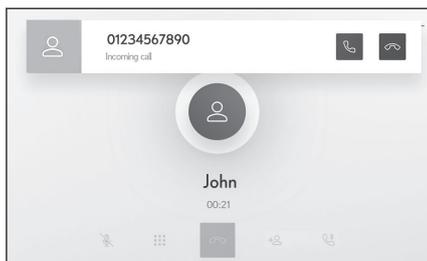

#### Related Links

[Operating with the steering switches\(P. 234\)](#)

### Declining second calls

When a second call is received during another call, the call waiting call can be declined.

When receiving a second call, touch .

#### INFORMATION

Depending on the model of cellular phone, both calls may be disconnected. Refer to the instruction manual included with the cellular phone.

#### Related Links

[Operating with the steering switches\(P. 234\)](#)

## Making a call to another party during an ongoing call

You can call a new third party during an ongoing call.

- 1 Touch [  ] on the call screen.
- 2 Select the contact.
- 3 Select the phone number.

This function puts the other party on hold during a call.



### INFORMATION

- You must have a call waiting contract with your cellular phone provider.
- If the cellular phone does not support HFP Ver. 1.5 or later, call-waiting will not be available.
- Depending on the cellular phone model and subscription details, it may not be possible to use this function.

### Making conference calls

Add the person on hold when talking to another party while a call is on hold.

- **Touch [Merge calls] during an ongoing call with a third party.**

Calls on hold are taken off hold and switched to a conference call.



#### **INFORMATION**

- A subscription for conference calls must be purchased with the cellular phone provider.
- Depending on the cellular phone model and subscription details, it may not be possible to use this function.
- When the conference call ends, the call ends with all members of the conference call.

## Ending calls

Several methods are available for ending a hands-free call.

- **Perform any of the following operations during a call.**

- Press the  switch on the steering.  
If the switch is pressed and held, all calls will be ended, including calls on hold.
- Touch  while making a call or on the call screen.
- Operate the cellular phone to end the call.

---

### Related Links

[Operating with the steering switches\(P. 234\)](#)


### Switching phones for hands-free calls

If two cellular phones are connected as hands-free phones, each cellular phone can be used. Hands-free phones provide functionality to switch which cellular phone to use. The hands-free phone screen displays the selected cellular phone data, such as contacts and history. Functions such as incoming calls can also be used with the unselected cellular phone.

To connect two hands-free phones, you need to register a user profile and set the registered driver.

- 1 Touch [  ] from the main menu.
- 2 Touch [Devices].
- 3 Select the cellular phone you want to use.

A cellular phone that is on a call, receiving a call, or making a call cannot be selected.

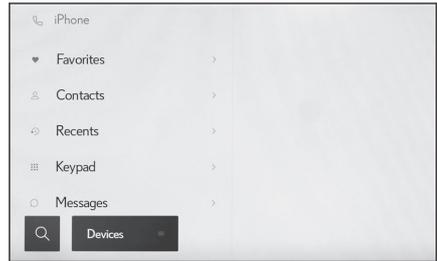

#### INFORMATION

- If making a call from a screen other than the hands-free phone screen, the call is placed as the primary device.
- If you are on a hands-free call using either one of the devices, calls cannot be placed from the other device.
- When a hands-free call is being made by any of the hands-free phones and an incoming call is answered by another hands-free phone, the first call is disconnected.
- The following functions are also available on the unselected cellular phone.
  - Phone incoming call function
  - Message receiving and sending functions (when receiving a message)
- The primary device will not necessarily be changed even if the cellular phone is switched.

#### Related Links

[Registering a driver\(P. 67\)](#)

[Changing and registering a driver \(P. 74\)](#)

[Setting a Bluetooth® device as a primary device\(P.130\)](#)

## Transferring contact data

Up to 5,000 contacts can be registered for each connected cellular phone. Only the contacts corresponding to the connected cellular phone can be displayed. In the contacts, up to 4 phone numbers can be registered for each contact. Contacts are managed for each connected phone.

This function can be used with cellular phones that support automatic contact data transfer (PBAP). Refer to the included instruction manual or compatible profiles for the connected cellular phone, to determine whether it supports automatic contact data transfer (PBAP).

To transfer contacts with automatic contact data transfer (PBAP), [**Sync contacts**] must be set to on in the Bluetooth® settings. (→ P.104)

### INFORMATION

- When transferring contact data, each data is subject to the following restrictions.
  - When five or more phone numbers are registered to a single contact, all phone numbers will be registered to the multimedia system as multiple contacts with the same name.
  - The name is transferred at the same time as the phone number. Depending on the model, some letters, such as symbols, or all letters may not be transferred. Furthermore, even if they are transferred they may not be displayed correctly.
  - Typically, secret memory is not read. (It is possible in some cases, depending on cellular phone specifications)
  - The group names registered to the cellular phone are not transferred.
  - The phone number type shown in contacts on the multimedia system is automatically assigned based on information from the source device. However, depending on the model of cellular phone and usage environment, the icons may all be identical.
- Models of cellular phone that support batch transfer have the following characteristics when transferring contact data.
  - Transfer may take as long as 10 minutes.
  - Even if the contact data transfer screen is being displayed, it is possible to switch to another screen. In this case, contact data transfer will continue.
- If the engine switch is turned off during contact list transfer, the transfer will be canceled. In this case, start the engine and carry out transfer operations again.
- In the following cases, the contact data being transferred is not saved. (Some of the transferred data is not saved either.)

## 7.7. Editing contact data

---

- When automatic transfer (PBAP) ends in the middle due to the memory capacity of the multimedia system.
- When automatic transfer (PBAP) is interrupted for some reason.
- The multimedia system's contact data cannot be transferred to the cellular phone.
- During contact data transfer, the Bluetooth® audio connection may be disconnected. It will be reconnected once transfer is complete. (Reconnection may not be possible for some models)
- When transferring, make sure the multimedia system has been started.
- The automatic contact data transfer (PBAP) function enables the transfer of contacts, favorites, and history to the multimedia system. Some cellular phone models do not allow favorites to be transferred.
- If [**Sync contacts**] is on, cellular phone favorites will be automatically transferred to the multimedia system. (→ P:104)
- Depending on the model, it may be necessary to perform operations on the cellular phone when transferring contact data with automatic contact data transfer (PBAP).
- If you want to transfer contacts by automatic transfer (PBAP), you need to enable the contact sharing setting on your cellular phone.
- If automatic contact data transfer (PBAP) does not start, it may start if you end all other functions.
- To transfer the contact image data, [**Sync contacts**] must be set to on in the Bluetooth® settings. (→ P.104)

---

### Related Links

[Bluetooth® specifications and compatible profiles\(P. 121\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

## Precautions when using the message function

Messages are transferred from the cellular phone connected for hands-free calls. The multimedia system can be used to check, reply, and send messages. Depending on the cellular phone model being connected, it may not be possible to transfer messages to the multimedia system. If the cellular phone does not support messaging, this function cannot be used.

This function can be used with cellular phones that support HFP and MAP. To check if a cellular phone is compatible with HFP and MAP, check the user's manual that came with the cellular phone, or its compatible profiles.

### INFORMATION

- You need to enable the message sharing setting from your cellular phone settings.
- This function cannot be used during emergency calls.
- E-mail function is not supported.
- Depending on the cellular phone model, it may not be possible to use the reply function.
- Cellular phone messages will be automatically transferred when each message function is used.
- Messages sent and received after connecting to the multimedia system are transferred to the multimedia system.
- Depending on the connected cellular phone model, it may be necessary to perform additional operations on the cellular phone.
- For SMS messages, the subject is not displayed.
- Depending on the cellular phone model, the subject name of a received MMS may not be displayed.
- Text messages can be replaced with voice data while driving.
- If [**Auto read messages**] is on, messages are read aloud.(→ P.104)
- Outgoing messages created using Intelligent Assistant can will be read aloud before being sent.
- Some information may not be displayed depending on your cellular phone model and registration status to the multimedia system.

### Related Links

[Bluetooth® specifications and compatible profiles\(P. 121\)](#)

[Setting Bluetooth® devices\(P. 104\)](#)

### Checking messages

Sent and received messages can be checked.

- 1 Touch [  ] from the main menu.
- 2 Touch [Messages].
- 3 Select the message sender.


If the body of the message fails to be read, start over from the beginning.

- 4 Select each item as necessary.

[  ] : Reads the message aloud. To stop the message being read aloud, touch

[  ].

[Send message] : Intelligent Assistant starts.

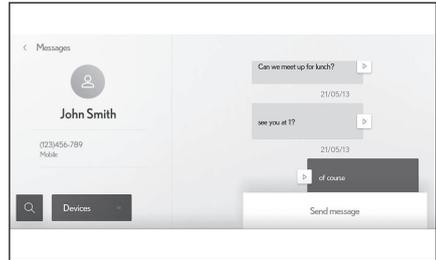

#### INFORMATION

When [Auto read messages] is enabled, unread messages will be read out in chronological order if any.

#### Related Links

[Replying to messages\(P. 253\)](#)

[Making calls from the message function\(P. 255\)](#)


### Checking new messages

When an SMS or MMS message is received, a new message notification is displayed at the top of the screen.

- The following operations can be performed when a message is received.

[  ] : Allows a reply to the message.

[  ] : Reads the message aloud.

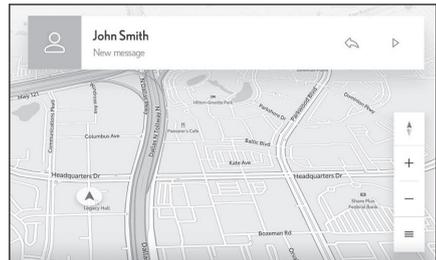


#### Related Links

[Replying to messages\(P. 253\)](#)

## Replying to messages

Reply to messages by selecting the Intelligent Assistant, touch [🔍] or [🎤], and saying "Send a message" and follow voice prompts. Also, reply to messages by using the hands-free screen, follow those operation instructions below.

- 1 Touch [📞] from the main menu.
- 2 Touch [Messages].
- 3 Select the message sender.
  - Chat is displayed.
- 4 Touch [Send message].
- 5 Enter a message using Intelligent Assistant.
  - Replies can be sent with templates using Intelligent Assistant. (Quick reply)
  - If there is a valid subscription to the service<sup>\*1</sup>, Intelligent Assistant can be used to enter the text of the message. (Templates can also be used to reply.)

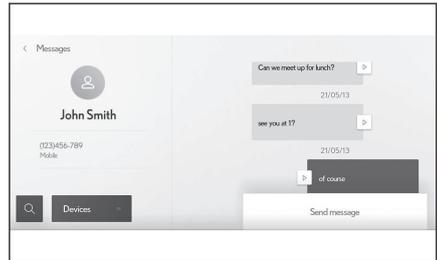

### Related Links

[Using the Intelligent Assistant system\(P. 55\)](#)

## Sending new messages

New SMS messages can be created. MMS is not supported.

- 1 Touch [📞] from the main menu.
- 2 Touch [Messages].
- 3 Touch [New message].
- 4 Follow voice prompt and on screen directions to complete your task.



\*1: This function is not made available in some countries or areas.

**Related Links**

---

[Using the Intelligent Assistant system\(P. 55\)](#)

## Making calls from the message function

Hands-free calls can be made using the message function.

- **Touch the blue number to make a call.**

Consecutive numbers may be recognized as phone numbers. In addition, some phone numbers, such as phone numbers from other countries, may not be recognized.



**8-1. Connected Services overview**

Functional overview .....	<b>258</b>
Type A: Function achieved by using DCM and the system.....	<b>259</b>
Type B: Function achieved by using DCM .....	<b>260</b>
Type C: Function achieved by using DCM and a smart phone.....	<b>261</b>

### Functional overview

Connected Services include My settings, Drive Connect (including Cloud Navigation, Intelligent Assistant, and Destination Assist), Wi-Fi<sup>®</sup> Connect (including Wi-Fi<sup>®</sup> Hotspot and Integrated Streaming), Safety Connect, Remote Connect, and Service Connect.

### Types of functions

The functions included are classified into the following types.

- Type A: Function achieved by using DCM and the system
- Type B: Function achieved by using DCM
- Type C Function achieved by using DCM and a smart phone

Function	Type
My settings, Drive Connect, Wi-Fi <sup>®</sup> Connect, OTA	Type A
Safety Connect	Type B
Remote Connect, Service Connect	Type C

#### INFORMATION

Connected services functionality is dependent upon network reception level and signal strength.

### Before using the function

#### ■ Subscription

- After you have accepted the Connected Services Agreement ("Connected Services Terms of Use" and "Connected Services Privacy Notice") on the Lexus App when you register the vehicle to your account, you can begin receiving services. A variety of subscription agreements are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico, 1-800-26-LEXUS (1-800-265-3987) in Canada or 800-00-LEXUS (800-00-53987) in Mexico.

#### ■ Availability of function(s)

These functions are not made available in some countries, areas, or on some models.

## Type A: Function achieved by using DCM and the system

The functionality of My settings, Drive Connect (Cloud Navigation, Intelligent Assistant, Destination Assist), Wi-Fi® Connect (Wi-Fi® Hotspot, Integrated Streaming) is made possible through the shared work of the DCM and the system.

These services are available by subscription on select, telematics hardware-equipped vehicles and supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

---

### Related Links

- [Using the Intelligent Assistant system\(P. 55\)](#)
- [Registering a driver\(P. 67\)](#)
- [Updating and checking the software information\(P. 87\)](#)
- [Establishing a connection to Wi-Fi® Hotspot\(P. 137\)](#)
- [Navigation function\(P. 160\)](#)
- [Destination Assist\(P. 169\)](#)
- [Playing Integrated Streaming\(P. 202\)](#)

### Type B: Function achieved by using DCM

The functionality of Safety Connect is made possible by the use of a DCM.

For details, refer to the separate "OWNER'S MANUAL".

#### INFORMATION

- Exposure to radio frequency signals: The system installed in your vehicle includes a low power radio transmitter and receiver. The system receives and also sends out radio frequency (RF) signals.
- In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.
  - ANSI (American National Standards Institute) C95.1 [1992]
  - NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
  - ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]
- These standards are based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The system complies with the FCC guidelines in addition to those standards.
- Contact with the Lexus response center is dependent upon the telematics device being in operative condition, cellular connection availability, navigation map data, and GPS satellite signal reception, which can limit the ability to reach the Lexus response center or receive support. Enrollment and Connected Services Agreement ("Connected Services Terms of Use" and "Connected Services Privacy Notice") required. A variety of subscription terms are available; charges vary by subscription term selected.
- The Lexus response center offers support in multiple languages.
- Select Safety Connect-subscribed vehicles are capable of communicating vehicle information. Please see the terms and conditions for additional details. Owners who do not wish to have their vehicle transmit this information can opt out at the time of enrollment or by calling 1-800-255-3987 in the United States, 1-877-539-8777 in Puerto Rico, 1-800-265-3987 in Canada or 800-00-53987 in Mexico and following the prompts for Safety Connect.
- For further details about the service, contact your Lexus dealer.
- The system functions are not subject to section 255 of the Telecommunications Act and the system is not TTY compatible.

## Type C: Function achieved by using DCM and a smart phone

The functionality of Remote Connect and Service Connect are made possible by the use of a DCM and a smartphone.

For details about these services, refer to

<https://www.lexus.com> (U.S.A.), <https://www.lexus.ca> (Canada) or <https://www.lexus.mx> (Mexico).

### Remote Connect

Remote Connect is a smartphone application that lets you view and remotely control certain aspects of your vehicle.

#### INFORMATION

- Availability of functions of the Remote Connect is dependent on network reception level.
- Remote Connect should only be used by authorized users.
- Laws in some communities may require that the vehicle be within view of the user when operating Remote Connect. In some states, use of Remote Connect may violate state or local laws. Before using Remote Connect, check your state and local laws.
- Any malfunction of the vehicle should be repaired by your Lexus dealer.
- Remote Connect is designed to work at temperatures above approximately -22 °F (-30 °C). This specification is related to the Remote Connect operation, but is dependent on the vehicle's operating temperature range which may be different.
- Content is subject to change without notice.
- Additional information can be found at <https://www.lexus.com>.

#### WARNING

Operating Remote Connect incorrectly may lead to unforeseen accidents or malfunctions. Check the vehicle condition and assume full responsibility before using.

### Service Connect

Service Connect uses DCM to collect and transmit vehicle data that allows Lexus to provide:

- Vehicle Health Report (VHR) (Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- Maintenance Notifications

### ● Vehicle Alert Notifications

 **INFORMATION**

Availability of functions of the Service Connect is dependent on network reception level.

**9-1. Appendix**

Information about media and data that can be used in the audio system.....	<b>264</b>
Information about HD Radio™/SiriusXM Radio.....	<b>274</b>
Information on media and data that can be used on the Rear Seat Entertainment System.....	<b>277</b>
Certification and trademark information.....	<b>278</b>

## Information about media and data that can be used in the audio system

### Information about media that can be used

The specifications of the media and other devices that can be used are as follows.

#### ■ Formats and specifications of USB flash drives

The formats and standards of the USB flash drives that can be used, and the restrictions for use, are as follows.

USB communication format	USB2.0 HS (480MBPS)
File format	FAT 16/32
Communication class	Mass storage class
Maximum number of folders	3000 (including root)
Maximum number of folder levels	8
Maximum number of files	9999 (maximum of 255 files per folder)
Memory capacity	Up to 32 GB
Maximum size of one file	2GB

- Files other than the formats above may not be played correctly, or information such as the file or folder name may not display correctly.
- Please understand in advance that this device may not be able to play your USB flash drive.
- Depending on the computer used to save files on a USB flash drive, hidden files may be saved in addition to the playback files. Deletion of such hidden files is recommended. They may have a negative effect during playback and prevent files from being switched correctly.

### Format information

The specifications of the music data that can be used are as follows.

#### ■ MP3

Supported standard	MP3 (MPEG1 LAYER 3, MPEG2 LSF LAYER 3)
Supported sampling frequency (kHz)	MPEG1 LAYER 3: 32, 44.1, 48 MPEG2 LSF LAYER 3: 16, 22.05, 24

Supported bit rate (kbps) <sup>(1)</sup>	MPEG1 LAYER 3:32 to 320 MPEG2 LSF LAYER 3:8 to 160
Supported channel mode	Stereo, joint stereo, dual channel, monaural
ID3 tag	ID3 Ver. 1.0, 1.1, 2.2, 2.3 (number of characters as specified by each version)

(1) VBR (Variable Bit Rate) is supported.

## ■ WMA

Supported standard	WMA Ver. 7, 8, 9 (9.1, 9.2)
Supported sampling frequency (kHz)	32, 44.1, 48
Supported bit rate (kbps) <sup>(1)(2)</sup>	Ver. 7, 8: CBR (Constant Bit Rate) 48 to 192 Ver. 9 (9.1/9.2): CBR 48 to 320

(1) VBR (Variable Bit Rate) is supported.

(2) Multi-channel audio sources are converted to 2ch.

## ■ AAC

Supported standard <sup>(1)</sup>	MPEG4 AAC-LC
Supported sampling frequency (kHz)	11.025, 12, 16, 22.05, 24, 32, 44.1, 48
Supported bit rate (kbps) <sup>(2)</sup>	8 to 320
Supported channel mode <sup>(3)</sup>	1ch (1/0), 2ch (2/0)

(1) ADIF is not supported.

(2) VBR (Variable Bit Rate) is supported.

(3) Dual channel is not supported.

## ■ WAV (LPCM)

Supported sampling frequency (kHz) <sup>(1)</sup>	8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48, 88.2, 96, 176.4, 192
Supported number of quantization bits (bit) <sup>(2)</sup>	16/24
Supported channel mode	1ch (1/0), 2ch (2/0)

(1) Audio sources higher than 96 kHz/24 bit are down-converted to 96 kHz/24 bit.

(2) Multi-channel audio sources are converted to 2ch.

■ **FLAC**

Supported sampling frequency (kHz) <sup>(1)</sup>	8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48, 88.2, 96, 176.4, 192
Supported number of quantization bits (bit) <sup>(2)</sup>	16/24

- (1) Audio sources higher than 96 kHz/24 bit are down-converted to 96 kHz/24 bit.
- (2) Multi-channel audio sources are converted to 2ch.

■ **ALAC**

Supported sampling frequency (kHz) <sup>(1)</sup>	8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48, 64, 88.2, 96
Supported number of quantization bits (bit) <sup>(2)</sup>	16/24

- (1) Audio sources higher than 96 kHz/24 bit are down-converted to 96 kHz/24 bit.
- (2) Multi-channel audio sources are converted to 2ch.

■ **Ogg Vorbis**

Supported sampling frequency (kHz) <sup>(1)</sup>	8, 11.025, 16, 22.05, 32, 44.1, 48
Supported bit rate (kbps) <sup>(2)</sup>	32 to 500

- (1) Audio sources higher than 96 kHz/24 bit are down-converted to 96 kHz/24 bit.
- (2) VBR (Variable Bit Rate) is supported.

■ **File names**

The only files that can be recognized as MP3/WMA/AAC/WAV(LPCM)/FLAC/ALAC/Ogg Vorbis and played are those with the extension ".mp3"/".wma"/".m4a"/".3gp"/".aac"/".wav"/".flac"/".fla"/".ogg"/".ogx"/".oga". Save MP3/WMA/AAC/WAV(LPCM)/FLAC/ALAC/Ogg Vorbis files with a ".mp3"/".wma"/".m4a"/".3gp"/".aac"/".wav"/".flac"/".fla"/".ogg"/".ogx"/".oga".

■ **About ID3 tags, WMA tags, AAC tags, and Vorbis comments**

- MP3 files have ancillary character information called ID3 tags that can store song artist names, title names, album names, and more.
- WMA files have ancillary character information called WMA tags that can store song artist names, title names, album names, and more.
- AAC files have ancillary character information called AAC tags that can store song artist names, title names, album names, and more.

- WAV (LPCM) files have ancillary character information called tags that can store song artist names, title names, album names, and more.
- FLAC files have ancillary character information called tags that can store song artist names, title names, album names, and more.
- ALAC files have ancillary character information called tags that can store song artist names, title names, album names, and more.
- Ogg Vorbis files have ancillary text information called Vorbis comment that allows saving of the song artist names, title names, album names, and more.

### ■ High resolution sound sources

This device supports high-resolution sound sources. "High-resolution" is based on the definition of the Japan Electronics and Information Technology Industries Association (JEITA). Supported formats and playable media are as follows.

### Supported formats

WAV, FLAC, ALAC, Ogg Vorbis

### Playable media

USB flash drive

## iPhone/iPod information

### ☐ INFORMATION

#### ■ Trademark and design certification information



Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards.

Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards.

Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards.

Please note that the use of this accessory with an Apple product may affect wireless performance.

## 9-1. Appendix

---

iPhone, iPod, iPod touch, Apple CarPlay, Siri and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

Made for

- iPhone 12 Pro Max
- iPhone 12 Pro
- iPhone 12
- iPhone 12 mini
- iPhone SE (2nd generation)
- iPhone 11 Pro Max
- iPhone 11 Pro
- iPhone 11
- iPhone XS Max
- iPhone XS
- iPhone XR
- iPhone X
- iPhone 8 Plus
- iPhone 8
- iPhone 7 Plus
- iPhone 7
- iPhone SE
- iPhone 6s Plus
- iPhone 6s
- iPod touch (7th generation)

## Apple CarPlay information

### □ INFORMATION

#### ■ Trademark and design certification information

Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone, iPod, or iPad may affect wireless performance.

Apple CarPlay is a trademark of Apple Inc., registered in the U.S. and other countries.



## Android Auto information

### □ INFORMATION

#### ■ Trademark and design certification information

- Android and Android Auto are trademarks of Google LLC.

androidauto

## Information USB memories

#### ■ Music files recorded using a computer

The following music files can be played.

- MP3

- WMA
- AAC
- FLAC
- WAV
- ALAC
- Ogg Vorbis

### MP3/WMA/AAC specifications

Certain restrictions apply to the standards of the MP3/WMA/AAC files that can be used, and the media and formats that store such files. Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the USA and other countries.

The specifications of the music data that can be used are as follows.

#### MP3

MP3 (MPEG Audio LAYER 3) is the standard format related to audio compression technology. When MP3 is used, the file can be compressed to approximately 1/10 the size of the original file.

#### WMA

WMA (Windows Media Audio) is the audio compression format of Microsoft Corporation. This can compress files to an even smaller size than MP3.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

#### AAC

AAC (Advanced Audio Coding) is the standard format related to audio compression technology that is used in MPEG2 and MPEG4.

### Bluetooth® information

The Bluetooth® specifications and profiles that can be used are as follows.

Item	Bluetooth® audio
Supported Bluetooth® specifications	Bluetooth® Core Specification Ver.5.0 or later

Item	Bluetooth® audio
Supported profiles	<ul style="list-style-type: none"> <li>● A2DP (Advanced Audio Distribution Profile) profile for transmitting music data: Ver. 1.3.2 or later</li> <li>● AVRCP (Audio/Video Remote Control Profile) profile for controlling (playing, stopping, etc.) portable audio from a multimedia system: Ver. 1.6.2 or higher</li> </ul>
Supported codec	LDAC, AAC, SBC

### INFORMATION

This is not a guarantee that all Bluetooth® devices can connect to the multimedia system.

### ■ Certification

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.



### ■ LDAC

LDAC and LDAC logo are trademarks of Sony Corporation.



### Gracenote® information

When music is played, the database of the multi media system is searched for the album name, artist name, genre, and track name. If the corresponding information is stored in the database, then the information is assigned automatically. The Gracenote® media database is used for the database information stored in this multi media system.

Gracenote, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either a registered trademark or a trademark of Gracenote, Inc. in the United States and/or other countries.



 **INFORMATION**

**■ Gracenote® media database**

- The title information assigned automatically may differ from the actual title information.
- The contents of the data provided by the "Gracenote media database" is not guaranteed to be 100% accurate.

**Information about text information display**

There are limits to the number of characters that can be displayed as information on each screen. The system may not be able to display all of the information. In addition, there are cases where information is not displayed properly or cannot be displayed depending on the stored content.

**Wi-Fi® information**

Wi-Fi®, Miracast®, Wi-Fi Direct® and WMM® are registered trademarks of Wi-Fi Alliance®.

Wi-Fi Protected Setup™, Wi-Fi CERTIFIED™, WPA™, WPA2™ and WPA3™ are trademarks of Wi-Fi Alliance®.

**MPEG LA information**

This product is licensed under the AVC patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to

(i) encode video in compliance with the AVC Standard (“AVC Video”) and/or

(ii) decode AVC Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC Video.

No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>.

## Information about HD Radio™/SiriusXM Radio

### Using HD Radio™ technology

HD Radio™ Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to [www.hdradio.com](http://www.hdradio.com).

This function is not available in some countries or areas.

HD Radio™ features included in this radio:

- Digital Sound: HD Radio™ broadcasts deliver crystal-clear, digital audio quality to listeners.
- Multicast Channels (HD2/HD3): FM stations can provide additional digital only audio programming with expanded content and format choices on HD2/HD3 channels.
- Program Service Data (PSD): PSD gives you on-screen information such as artist name and song title.
- Artist Experience Images related to the broadcast are displayed on the radio screen, such as album cover art and station logos.

#### INFORMATION

##### ■ Certification

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see <http://dts.com/patents>. HD Radio, Artist Experience, and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.



## HOW TO SUBSCRIBE TO SiriusXM Radio Services

All SiriusXM Radio services, including satellite radio and data services, plus streaming services, require a subscription, sold separately or as a package by Sirius XM Radio Inc. (or, in Canada, Sirius XM Canada Inc.), after any trial subscription which may be included with your vehicle purchase or lease. To subscribe after your trial subscription, call 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada). SiriusXM Radio and all related marks and logos are trademarks of Sirius XM Radio Inc.

Note: If a trademark notice is elsewhere, you don't need to add it here too.

This function is not available in some countries or areas.

### ■ IMPORTANT INFORMATION ABOUT YOUR TRIAL SUBSCRIPTION:

Your SiriusXM Radio services will automatically stop at the end of your trial unless you decide to continue service. If you decide to continue service, the paid subscription plan you choose will automatically renew and you will be charged the rate in effect at that time and according to your chosen payment method. Fees and taxes apply. You may cancel at any time by calling 1-866-635-2349. See SiriusXM Radio Customer Agreement and Privacy Policy for complete terms at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada). All fees, content and features subject to change. Traffic information not available in all markets. Certain features and/or content may not be available in vehicles with SiriusXM Radio with 360L unless an active data connection is enabled in the vehicle.

### ■ ABOUT SiriusXM Radio Services

Most in-car trials today include SiriusXM Radio's All Access package. It includes every channel available on your radio.

### ■ SiriusXM Radio All Access Subscription

Listen everywhere with All Access. You get every channel available in your ride, plus you can listen on the app and online - so you can enjoy the best SiriusXM Radio has to offer, anywhere life takes you. This package gives you all of our premium programming, including Howard Stern, every NFL, MLB<sup>®</sup> and NBA game, every NASCAR<sup>®</sup> race, NHL<sup>®</sup> games, 24/7 talk channels dedicated to the biggest leagues, and more. You get all kinds of ad-free music, including artist-dedicated channels and more, plus sports, news, talk and entertainment.

All content subject to change.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that

may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### ■ RADIO OPERATION

Look for the Sirius, XM, SiriusXM, Band, SAT, AUX, Radio or Source button and you're in. If you can't hear us, it's easy to get started: Find your Radio ID in [**Help and support**] on the SiriusXM Radio setting screen. If you don't see your number there, go to [siriusxm.com/activationhelp](http://siriusxm.com/activationhelp) to find it. Visit [siriusxm.com/refresh](http://siriusxm.com/refresh) or call 1-855-MYREFRESH (697-3373) to send a refresh signal to your radio. Canadian Customers: Find your Radio ID in [**Help and support**] on the SiriusXM Radio setting screen. Visit [siriusxm.ca/refresh](http://siriusxm.ca/refresh) to send a refresh signal to your radio or call 1-888-539-7474 for service.

#### NOTICE

- It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the SiriusXM Satellite Radio System or that support the SiriusXM Radio website, the streaming service or any of its content. Furthermore, the AMBE<sup>®</sup> voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.
- Note: this applies to SiriusXM Satellite Radio receivers only and not SiriusXM Radio Ready devices.

### Displaying the radio ID

Each SiriusXM Radio tuner is identified with a unique radio ID. The radio ID is required when activating an SiriusXM Radio service or when reporting a problem.

This function is not available in some countries or areas.

- To see radio ID on the screen, go to [**Sound & Media**] in the setting screen and select SiriusXM Radio, and then select [**Help and support**].

## Information on media and data that can be used on the Rear Seat Entertainment System \*1

### Information about HDMI

The video and audio signal standards of the available HDMI devices are as follows.

Item	Standard
Supported video signal	480p, 576p, 720p, 1080p, VGA
Supported audio signal	LPCM 2ch

#### INFORMATION

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



### Information about open software

The open source software license information of the Rear Seat Entertainment System can be checked from the Rear Seat Entertainment System setting screen.

#### — Related Links —

[Checking the Rear Seat Entertainment System license information\(P. 114\)](#)

### Wi-Fi® information

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

\*1: If equipped

### Certification and trademark information

FCC ID : ACJ932AT2105

**NOTE:**

<§15.19(a)(3)> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING:**

<§15.21> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CAUTION:**

<§2.1091> Radio frequency radiation exposure information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This radio transmitter [216J-AT2105] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Antenna type: Inverted F type antenna Gain: +0.33 dBi Impedance: 50Ω

Le présent émetteur radio [216J-AT2105] a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal.

Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué pour tout type figurant sur la liste, sont strictement interdits pour l'exploitation de l'émetteur.

Type d'antenne: Antenne de type F inversée Gain: +0.33 dBi l'impédance: 50Ω

#### CAUTION

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE.

Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

## 9-1. Appendix

---

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.



Este equipo ha sido diseñado para operar con las antenas que enseguida se enlistan y para una ganancia máxima de antena de [+0.33 dBi].

El uso con este equipo de antenas no incluidas en esta lista o que tengan una ganancia mayor que [+0.33 dBi] quedan prohibidas.

La impedancia requerida de la antena es de [50 ohms].

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

FCC ID : ACJ932AT2106

**NOTE:**

<§15.19(a)(3)> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING:**

<§15.21> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CAUTION:**

<§2.1091> Radio frequency radiation exposure information:  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### CAUTION

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE.

Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to User - Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

FEDERAL COMMUNICATIONS COMMISSION  
SUPPLIER'S DECLARATION OF CONFORMITY

Product Name: In-vehicle equipment

Model Number: GM-4619

Responsible Party Name: PIONEER ELECTRONICS (USA) INC.  
SERVICE SUPPORT DIVISION

Address: 970 W. 190TH STREET, SUITE 360, TORRANCE,  
CA 90502, U.S.A.

Phone: 1-800-421-1404

URL: <http://www.pioneerelectronics.com>



### Information on Data Communication Module (DCM)

Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL.

<https://www.denso.com/global/en/opensource/dcm/toyota/>

FCC ID: JOYCW1011

**NOTE**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**CAUTION : Radio Frequency Radiation Exposure**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

IC: 574B-CW1011

**NOTE**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna cannot be removed (and changed) by user.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**CAUTION: Radio Frequency Radiation Exposure**

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

### NOTE

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'utilisateur n'est pas autorisé à retirer (ou modifier) l'antenne.

Emplacement: Cet émetteur ne doit pas être installé ou utilisé conjointement avec d'autres antennes ou émetteurs.

ATTENTION : exposition aux radiofréquences

Cet équipement est conforme aux limites d'exposition aux rayonnements ISDE établies pour un environnement non contrôlé et satisfait à la norme CNR-102 de la réglementation ISDE sur l'exposition aux radiofréquences (RF). Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et le corps.

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

- Instituto Federal de Telecomunicaciones (IFT)
- Número de aprobación: RLVDEDN22-0556
- Modelo aprobado: DN0007A
- Nombre del fabricante (nombre de la marca) : DENSO Corporation
- Número de IMEI : vea el producto.

### QR Code

The word QR Code is registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

### Map data

©2023 HERE

Visit the link below for the data license.

<https://legal.here.com/terms/general-content-supplier/terms-and-notice/>

END USER LICENSE AGREEMENT

<https://legal.here.com/en-gb/terms/end-user-license-agreement>

## A

<b>Adding a destination</b> .....	<b>175</b>
<b>Adjusting the volume</b>	
Audio.....	33
Phone (receiving calls and receiver).....	234
<b>Adjustment</b>	
Sound quality.....	96
<b>AM radio</b> .....	<b>180</b>
<b>Android Auto</b>	
Registered smartphone.....	152
Unregistered smartphone.....	149
<b>Antenna</b>	
Radio.....	185
<b>Apple CarPlay</b>	
Registered smartphone.....	146
Unregistered smartphone.....	143
<b>Apps settings</b> .....	<b>115</b>
<b>Audio</b> .....	<b>180</b>
<b>Audio system on/off</b> .....	<b>33</b>
<b>Auto sound levelizer</b> .....	<b>96</b>

## B

<b>Bluetooth® devices</b>	
Connect.....	126
Delete.....	125
Register.....	122
Setting as a primary device.....	130
Setting as a secondary device.....	131

## C

<b>Cellular phone</b>	
Connect.....	126
Delete.....	125

Register.....	122
<b>Compatible profiles</b> .....	<b>121</b>
<b>Connected Services</b> .....	<b>258</b>
<b>Connecting</b>	
Bluetooth® devices.....	126
iPod.....	35
USB port.....	35
Wi-Fi®.....	134
Wi-Fi® Hotspot.....	137
<b>Contact data (Phone number)</b>	
Transfer.....	249
<b>Current position</b> .....	<b>30,94</b>

## D

<b>Dealer information</b> .....	<b>84</b>
<b>Declined call</b>	
Second call.....	244
<b>Declining calls</b> .....	<b>241</b>
<b>Deleting</b>	
Bluetooth® devices.....	125
User profile.....	76
<b>Deleting a destination</b> .....	<b>175</b>
<b>Destination</b> .....	<b>163</b>
Destination history.....	165
<b>Destination Assist</b> .....	<b>169</b>
<b>Destination search</b> .....	<b>163,167</b>
Category.....	163
Destination history.....	163
Favorite.....	163
Home.....	163
Keyboard.....	163
Voice control.....	165
Work.....	163

<b>E</b>		<b>M</b>	
Ending calls.....	247	Main menu.....	20
<b>F</b>		Making calls	
Favorite.....	93,163,172	Contacts.....	238
Editing the favorites list.....	165	Favorites list.....	237
FM radio.....	180	History.....	236
Format information.....	264	In-call.....	245
Function achieved by using DCM.....	260	Message.....	255
Function achieved by using DCM and a smart phone.....	261	Numeric keypad input.....	239
Function achieved by using DCM and the system.....	259	Making conference calls.....	246
<b>G</b>		Map	
Gracenote® .....	271	Full route map.....	172
<b>H</b>		Information.....	162
Hands-free (Phone).....	226	Navigation.....	160
HD radio.....	180	Options.....	161
High resolution sound sources.....	264	Route guidance.....	174
Home.....	93,163	Map scale.....	30
<b>I</b>		Map screen.....	29
In-call operations.....	242	Message.....	251
Intelligent Assistant system.....	55	<b>N</b>	
<b>K</b>		Navigation.....	29
Keyboard		Adding a destination.....	175
Entering letters and numbers.....	28	Deleting a destination.....	175
<b>L</b>		Destination Assist.....	169
Lexus account.....	67	Destination search.....	163,167
Listening to the radio.....	180	Full route map.....	172
		Information.....	162
		Map options.....	161
		POI suggestion.....	168
		Route guidance.....	171,174
		Subscription.....	160
		Voice guidance.....	178
		Notifications settings.....	80

## O

Orientation of the map..... 30

## P

Parking..... 93,163

## Playback

Android Auto.....197

Apple CarPlay.....194

Bluetooth® audio..... 200

Integrated Streaming..... 202

iPod/iPhone.....191

USB memory.....188

Playing Android Auto.....197

Playing Apple CarPlay.....194

Playing Bluetooth® audio..... 200

Playing Integrated Streaming..... 202

Playing iPod/iPhone.....191

Playing USB flash drive.....188

POI suggestion.....168

## R

Rear Seat Entertainment System..... 205

Adjusting the display angle..... 44

Adjusting the image quality.....108

Android Auto.....215

Apple CarPlay.....213

Bluetooth® audio.....217

Changing the source.....48

Connecting an HDMI device.....46,47

Connection method for rear seat Miracast®.....221

Disconnection method for rear seat Miracast®.....223

Functions and operations.....36

Headphone connection method..52,53

Integrated Streaming.....224

iPod/iPhone.....211

Licensing information.....114

Operating from the front seats.....54

Operating the rear multi-operation panel.....40

Operation methods.....39

Outputting audio only.....43

Power source on and off.....42

Precautions for rear seat Miracast®.....220

Radio.....206

Read aloud function.....110

Rear seat HDMI.....219

Rear seat HDMI settings.....112

Rear seat Miracast®.....222

Screen settings.....107

SiriusXM Radio.....207

Switching screen modes.....109

Switching the audio output mode.....51

USB flash drive.....209

Volume adjustment.....50

Receiving calls or answering calls.....240

Second call.....244

## Registering

Bluetooth® devices.....122

Dealer information.....84

Saved profiles.....74

User profile.....67

User profile settings.....74

Remote Connect.....261

Replying to messages.....253

Route guidance.....171

<b>S</b>	
Screen basic operations.....	26
Searching by keywords.....	63
Security settings.....	85
Sending new messages.....	253
Service Connect.....	261
<b>Settings</b>	
Apps.....	115
Bluetooth® device settings.....	104
Dealer information settings.....	84
Driver settings.....	76
General settings.....	78
Map details screen.....	93
Navigation setting screen.....	92
Notifications settings.....	80
Privacy settings.....	85
Radio settings.....	96
Route option.....	95
Screen display settings.....	81
Security settings.....	85
Sound and media settings.....	96
Various settings.....	72
Voice control settings.....	83
Wi-Fi® Hotspot settings.....	102
Wi-Fi® settings.....	100
SiriusXM radio.....	180
<b>Smartphone</b>	
Connect.....	126
Delete.....	125
Register.....	122
Speed limit.....	93
Status icons.....	21
<b>Steering switches</b>	
Hands-free (Phone).....	234
Voice control.....	57
Surround sound.....	96
Switching phones.....	248
<b>T</b>	
Touch screen.....	23
Traffic Information.....	93,162
<b>Transferring</b>	
Contact data (Phone number).....	249
<b>Troubleshooting</b>	
Apple CarPlay/Android Auto.....	155
Hands-free (Phone).....	230
Radio.....	183
<b>U</b>	
USB port.....	35
<b>User profile</b>	
Changing and registering a profile.....	74
Register.....	67
<b>Using Android Auto</b>	
Registered smartphone.....	152
Unregistered smartphone.....	149
<b>Using Apple CarPlay</b>	
Registered smartphone.....	146
Unregistered smartphone.....	143
<b>V</b>	
Voice commands.....	59
Volume adjustment.....	33
Phone (Ringtone/receiver).....	96

## W

Wi-Fi®	
Connecting.....	134
Wi-Fi® Hotspot settings.....	102
Wi-Fi® settings.....	100
Work.....	93,163

## Z

Zoom in/out.....	30
------------------	----





Multimedia Owner's Manual:  
Publication No. OM60V77U  
Part No. 01999-60V77  
Printed in Japan 01-2310-00 C  
LX600 Multimedia (北美U)