

OWNER'S MANUAL
2010 MODEL YEAR PRIUS
USB INTERFACE

– USB memory player/ iPod® player operation

Connecting a USB memory player or an iPod® player enables you to enjoy music through the vehicle speakers.


CAUTION

Do not operate the player's controls or connect it to the USB memory player or the iPod® player while driving.

NOTICE

- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down or apply unnecessary pressure to the connection cable while it is connected, as this may damage the portable player or the terminal port.
- Do not insert foreign objects into the port, as this may damage the portable player or the terminal port.

1. Connecting a USB memory player or an iPod® player

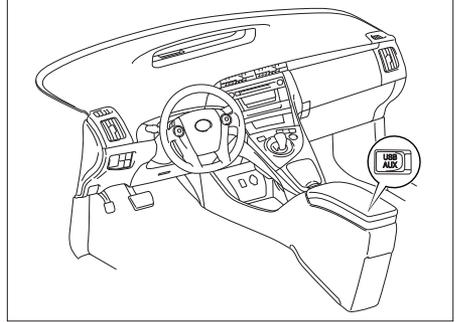


Open the cover and connect a USB memory player or an iPod® player using a USB or iPod® cable.

2. Playing a USB memory player or an iPod® player

- (a) To play or pause a file or track

► USB memory player

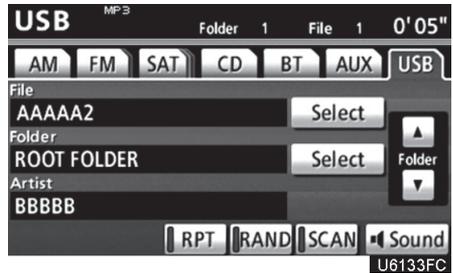

Once the USB memory player has been connected, touch the "USB" tab and the device will start playing automatically.

Note: There is no pause feature when using a USB memory player.

► iPod® player



Once the iPod® player has been connected: touch the “USB” tab to display this screen.

Touch  to start the music.

Touch  to pause the music.

Touch  to resume the music.

INFORMATION


- When an iPod® player is connected and the audio source is changed to iPod® player mode, the iPod® player will resume playing from the same point where it had previously stopped.
- When a USB device is connected and the audio source is changed to USB memory player mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point where it had previously stopped.

(b) To select a play mode (iPod® player only)

(1) Select “Menu”




(2) Select a desired play mode

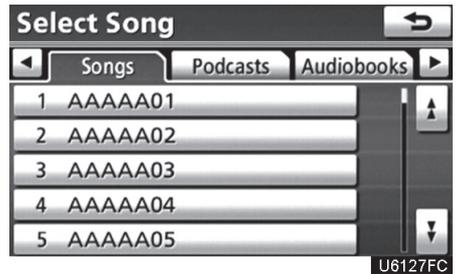

3. Selecting a track or a file


(a) To select a desired folder (USB memory player only)

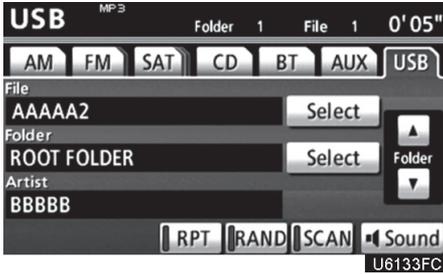

“Folder ▲”: Touch this button to go to the next folder.

“Folder ▼”: Touch this button to go to the previous folder.

Touch “Select” for Folder: The folder list is displayed. The desired folder can be selected from the list. This function is available only when the vehicle is not moving.

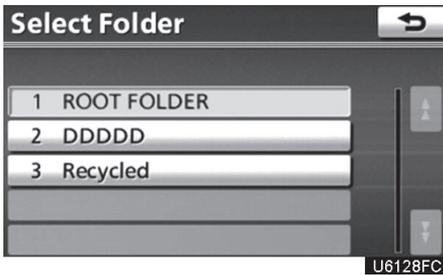

Touch the desired folder name. The changer will start playing the first file of the selected folder.


 : By touching this touch-screen button, the list moves up by 5 folder groups. If this touch-screen button is touched when the top page of the list is displayed, the last page will be displayed.

 : By touching this touch-screen button, the list moves down by 5 folder groups. If this touch-screen button is touched when the last page of the list is displayed, the top page will be displayed.

(b) To select a desired file or track

“Select” File or Track: The desired file or track can be selected from a list. This function is available only when the vehicle is not moving.


Touch “Select”. The file list or the track list is displayed.

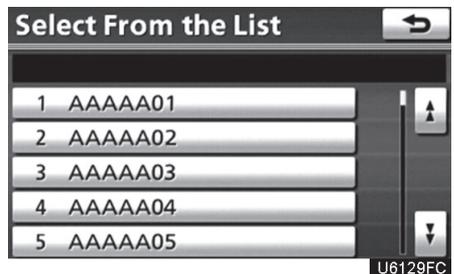

Touch the desired file or track number. The changer will start playing the selected file or track from the beginning.

 : By touching this touch-screen button, the list moves up by 5 file or track groups. If this touch-screen button is touched when the top page of the list is displayed, the last page will be displayed.

 : By touching this touch-screen button, the list moves down by 5 file or track groups. If this touch-screen button is touched when the last page of the list is displayed, the top page will be displayed.

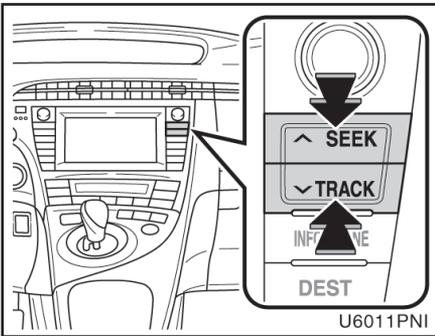

“SEEK·TRACK” button: Use for direct access to a desired file or track.


Push the “**^SEEK**” or “**vTRACK**” button and repeat this action until the desired file or track appears on the screen. As the button is released, the USB memory player or the iPod® player will start playing the selected file or track from the beginning.

Fast forward:

Push and hold the “**^SEEK**” button to fast forward the player. When the button is released, the player will resume playing from the position in the track that the cursor indicates.

Reverse:


Push and hold the “**vTRACK**” button to reverse the player. When the button is released, the player will resume playing from the position in the track that the cursor indicates.

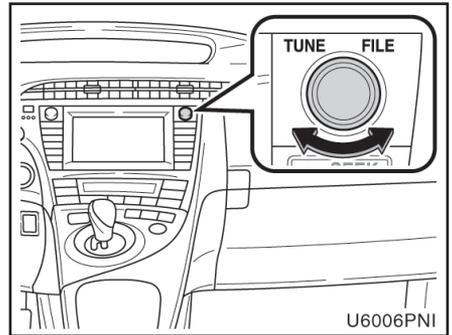

“TUNE·FILE” knob: Use for direct access to a desired file or track in the player.

Turn the “**TUNE·FILE**” knob to move up or down on all the different files or tracks in the player that you are currently listening to.

► USB memory player


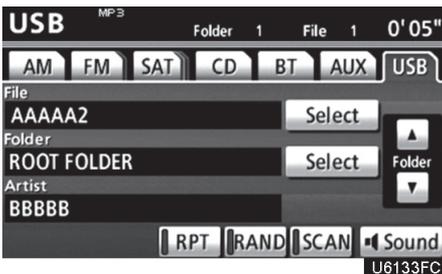


a file, touch “SCAN” on the screen a second time. If the player reaches the last track in its memory, it will restart the play list from the first track.

After all the files are scanned in one pass, normal play resumes.


- (b) To search for a desired folder (USB memory player only)

► iPod® player

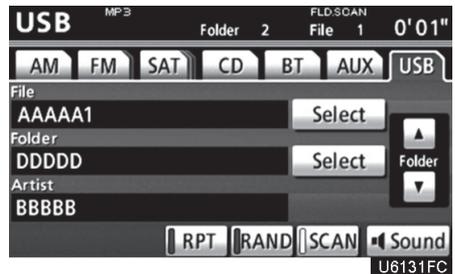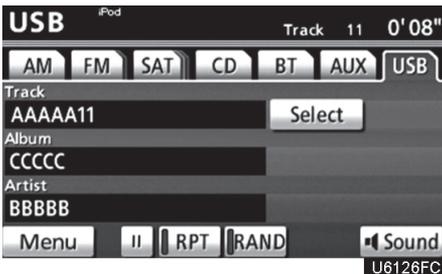

4. Scanning for a file or a track

- (a) To search for a desired file (USB memory player only)

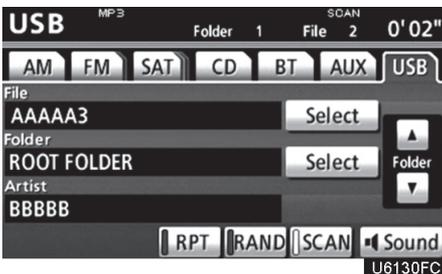

Touch “SCAN” on the screen for longer than a second while the music is playing.

“FLD.SCAN” appears on the screen. The file at the beginning of each folder will be played for 10 seconds. To continue listening to the file of your choice, touch “SCAN” on the screen a second time.

After all the folders are scanned in one pass, normal play resumes.

Touch “SCAN” on the screen briefly while the music is playing.

“SCAN” appears on the screen. The player will play the next file for 10 seconds, then scan again. To select

(c) Other functions

► USB memory player



► iPod® player



“RPT”: Use this control to automatically replay the file or track you are currently listening to.

Repeating a file or track:

While the file or track is playing, touch “RPT” briefly.

“RPT” appears on the screen. When the file or track is finished, the player will automatically play it again. To cancel the repeat, select “RPT” once again.

Repeating a folder (USB memory player only):

While the folder is playing, press “RPT” for two seconds or more.

“FLD.RPT” appears on the screen. When the folder has completed its play list, the changer will automatically restart the folder’s play list from the first track.

5. Random selection of files or tracks

“RAND”: Use this control for automatic and random selection of files or tracks in the folders that you are currently listening to.

(a) Playing the file or track in random order

While the file or track is playing, touch “RAND” briefly.

“RAND” appears on the screen. The system selects a file or track you are currently listening to. To cancel this function, touch “RAND” once again.


(b) Playing the files in random order

Touch “RAND” for two seconds or more, while the music is playing.

“FLD.RAND” will appear on the screen. The system selects a file in all files. To cancel it, touch “RAND” once again.

When a file is skipped or the system is inoperative, select “RAND” to reset.

**6. Audio remote controls
(steering switches)**

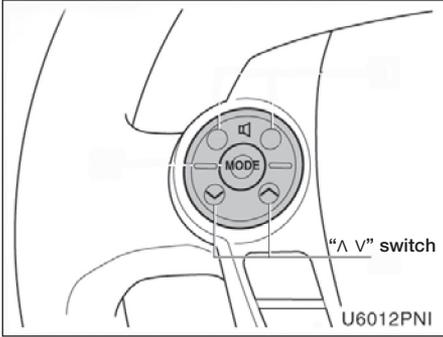

USB memory player/iPod® player

Use this switch to skip up or down to a different file or track in either direction.

- (a) To select a desired file or track

Push the “Λ” or “V” side of the switch until the file or track you want to listen to is set. If you want to return to the beginning of the current file or track, push the “V” side of the switch once quickly.

- (b) To select a desired folder (USB memory player only)

Push and hold “Λ” or “V” switch until you hear a beep to change to the next or the previous folder. Repeat this operation until you reach the folder you want to listen to.

iPod® player

About iPod®:

iPod® is a registered trademark of Apple, Inc.

Compatible models:

- (a) iPod® 5th generation Ver. 1.2 or later
- (b) iPod® nano 3rd generation Ver. 1.0 or later
- (c) iPod® nano 2nd generation Ver. 1.1.2 or later
- (d) iPod® nano Ver. 1.2 or later
- (e) iPod® touch Ver. 1.1 or later
- (f) iPod® classic Ver. 1.0 or later

Non-Compatible models:

- (a) iPhone®, iPod® mini, iPod® shuffle
- (b) iPod® photo and 4th generation and earlier models of iPod® are not compatible with this system

USB memory player:

USB memory players that can be used for MP3 and WMA playback.

- (a) USB communication formats: USB 2.0 FS (12 MBPS)
- (b) File formats: FAT 16/32 (Windows®)
- (c) Correspondence class: Mass storage class