

2009-

COROLLA

TVIP V5

RS3200 PLUS
OWNER'S GUIDE



RS3200 PLUS

SECURITY SYSTEM
DESIGNED FOR USE WITH YOUR VEHICLE'S
REMOTE KEYLESS ENTRY SYSTEM

OWNER'S GUIDE



Rev. A 09/07/07

090002-31250700

To better understand the features and functions of this security system, please read this Owner's Guide completely prior to use.

TABLE OF CONTENTS

DESCRIPTION	PAGE
INTRODUCTION	2
BRIEF DESCRIPTION-RS3200 PLUS FEATURES	3, 4
OPERATION	
ARMING THE RS3200 PLUS (except PASSIVE ARMING)	5
DISARMING THE RS3200 PLUS (except PASSIVE DISARMING)	6
PASSIVE (AUTOMATIC) ARMING & DISARMING	7
AUTOMATIC REARMING	8
ARMING SUSPENSION	8
ALARM INFORMATION	9
ALARM TRIGGERS	9
ALARM DESCRIPTIONS	10
STOPPING AN ALARM	10
GLASS BREAKAGE SENSOR INFORMATION	
GLASS BREAKAGE SENSOR CHECK PROCEDURE	11
PROGRAMMING	
PASSIVE (AUTOMATIC) ARMING AND ENTRY DELAY	12
(Not applicable to Highlander and Sienna. Please consult your Toyota Dealer for programming information.)	
WARNING and CAUTION INFORMATION	13




INTRODUCTION

Congratulations on your choice of the RS3200 PLUS add-on security system to protect your vehicle. To get the most from the system, we strongly recommend that you read this Owner's Guide completely to learn all of its features and functions.

The RS3200 PLUS provides security through point-of-entry monitoring, glass breakage detection and ignition switch monitoring. While ARMED, the system will be TRIGGERED and sound an ALARM when door, trunk or hatch is forcibly unlocked or opened*, or when a window is tapped on or broken. During the ALARM, the vehicle's horn sounds and the headlights, tail lights and front marker or turn signal lights flash. Also, the vehicle's starter is disabled, preventing engine start. In addition to the comprehensive protection, the RS3200 PLUS works in conjunction with your vehicle's remote keyless entry system, enabling you to ARM and DISARM the security system at the same time the door are remotely locked and unlocked. In vehicles equipped with a buzzer, it will chirp when the system is REMOTE ARMED and DISARMED.

An important note about your system

Throughout this guide, there are references to the STATUS MONITOR^{① ②} for this system. Illustrated below, this panel holds the LED indicator (for the system's operating status) and the GLASS BREAKAGE SENSOR's microphone. In vehicles equipped with an engine immobilizer system, there is a LED already installed, so the RS3200 PLUS utilizes the vehicle's engine immobilizer system LED instead and a microphone mounted in a separate location. If your vehicle falls into this category, remember to look at that LED when the information refers to the STATUS MONITOR. If you do not know where the LED is located, refer to your vehicle's owner's guide for specific information.

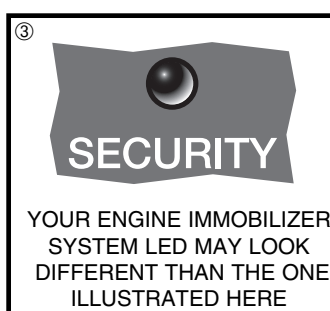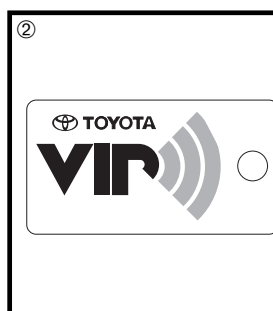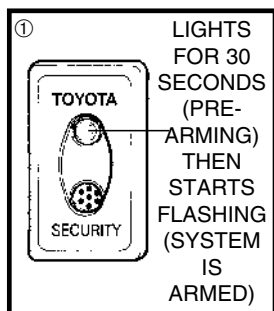

* When the system is PASSIVELY (AUTOMATICALLY) ARMED, there is an ENTRY DELAY that will elapse when a door is opened before an ALARM is TRIGGERED.

Specifications are subject to change without notification.

BRIEF DESCRIPTION—RS3200 PLUS FEATURES

FEATURES	FUNCTIONS
REMOTE ARMING/DISARMING	The RS3200 PLUS will ARM 30 seconds after the lock button on the remote keyless entry system's remote control is pressed, and DISARM when the unlock button is pressed. If your vehicle is equipped with a buzzer that chirps when the lock and unlock buttons on the remote controls are pressed, the buzzer will also chirp when the system is REMOTE ARMED and DISARMED.
AUTOMATIC REARMING	The RS3200 PLUS will automatically REARM at the same time the vehicle's remote keyless entry system relocks the vehicle's doors, if no door is opened within 30 seconds after REMOTE DISARMING.
KEY ARMING/DISARMING	The RS3200 PLUS will ARM 30 seconds after you close the trunk (if open) and lock the vehicle's doors with the key, and will DISARM when you unlock a door with the key.
ARMED MODE SUSPENSION**	While ARMED, the trunk may be opened with the key (or trunk release button on your remote control, if so equipped) without TRIGGERING an ALARM. Once the open trunk is closed, the system ARMS again.
PASSIVE (AUTOMATIC) ARMING Not available on Smart Vehicles.	The RS3200 PLUS may be programmed to automatically ARM 30 seconds after the ignition key is removed, the vehicle exited and the last door and the trunk closed, without the necessity of locking doors.
PASSIVE DISARMING Not available on Smart Vehicles.	The RS3200 PLUS may be DISARMED with the vehicle's ignition key after it was PASSIVELY ARMED.
ADJUSTABLE ENTRY DELAY Not available on Smart Vehicles.	When the RS3200 PLUS has been PASSIVELY ARMED, an ENTRY DELAY (user-selectable at 0, 15, or 30 seconds) will start when a door is opened before an ALARM is TRIGGERED.
MANUAL ARMING	When you lock the vehicle with the central lock switch (while a door is open), the RS3200 PLUS will ARM 30 seconds after you close all the doors and the trunk (if open).
POINT-OF-ENTRY PROTECTION	Forcibly unlocking or opening a door or trunk while the RS3200 PLUS is ARMED will TRIGGER an ALARM immediately. (If the system was PASSIVELY ARMED, the ENTRY DELAY must pass after opening a door before the ALARM is TRIGGERED.)
GLASS BREAKAGE SENSOR	The RS3200 PLUS utilizes a microphone (usually mounted in the STATUS MONITOR) to sense the noise from tapping on window glass, or glass breaking, and TRIGGER the system to sound an ALARM. It is fine tuned to "listen" for this type of noise, and ignore other sounds.
WARN AWAY ALARM	When the GLASS BREAKAGE SENSOR's microphone picks up tapping or breaking of window glass, it TRIGGERS a WARN AWAY ALARM; the headlights and tail and marker or turn signal lights flash, and the horn sounds for 20 seconds, but the starter is not disabled. If there is another detection of glass tapping or breaking, or if a door is opened or unlocked without a key, the regular ALARM is TRIGGERED.
IGNITION SWITCH MONITORING	While ARMED, the RS3200 PLUS monitors the ignition switch. If an attempt is made to start the vehicle without a key, an ALARM is TRIGGERED.

****Starting from 2002 M.Y., Arming Suspension Mode by using the key to unlock the trunk is not applicable to Camry, Solara, and Corolla.**


BRIEF DESCRIPTION—RS3200 PLUS FEATURES

FEATURES	FUNCTIONS
STARTER DISABLE	When an ALARM is TRIGGERED, the system disables the vehicle's starter and prevents engine start until the system is reset (DISARMED).
FORCED LOCK DURING ALARM	During an ALARM, the system will lock the doors if one is unlocked, and will continue to do so for the duration of the ALARM.
TRIGGER MEMORY	The user is notified that an ALARM occurred. Upon DISARMING the system after an ALARM was TRIGGERED, the vehicle's tail and marker lights will be turned on for 2 seconds.
EXTERIOR LIGHT ACTIVATION	The RS3200 PLUS flashes the vehicle's tail and marker or turn signal lights during REMOTE ARMING and REMOTE DISARMING, and during an ALARM. Also, during an ALARM the headlights flash.
BUZZER ACTIVATION	If your vehicle is equipped with a buzzer that chirps when the lock and unlock buttons on the remote keyless entry system's remote controls are pressed, the buzzer will also chirp when the system is REMOTE ARMED and DISARMED.
HORN ACTIVATION	During an ALARM, the RS3200 PLUS activates the vehicle's horn.
POWER LOSS MEMORY	If power to the RS3200 PLUS is disrupted while it is ARMED, an ALARM is TRIGGERED once power is restored.
STATUS MONITOR	This panel houses the GLASS BREAKAGE SENSOR microphone and the flashing LED that indicates the operating status of the security system. (Some vehicle applications utilize the vehicle's engine immobilizer system LED and a separate microphone, instead.)

OPERATION

ARMING THE RS3200 PLUS (except PASSIVE ARMING)


The system may be ARMED in several ways. Do *one* of the following:

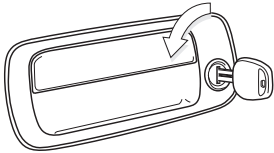

TURN TOWARD THE
FRONT
OF THE VEHICLE

Lock the doors with your key:
Remove the key from the ignition switch.
Exit the vehicle, and close all the doors.*
Close the trunk or hatch, if necessary.*
Insert the key into the door key switch and turn it toward the front of the vehicle:


The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.^① The system is now ARMED.

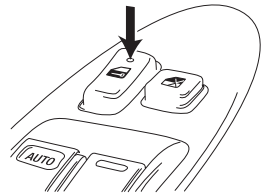

PUSH THE LOCK
SWITCH WHILE THE
DOOR IS OPEN

Lock the doors from inside the vehicle:
Remove the key from the ignition switch.
Open the driver's or front passenger's door.
Push the central lock switch.
Exit the vehicle, and close all the doors.*
Close the trunk or hatch, if necessary.* Then:

The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.^① The system is now ARMED.

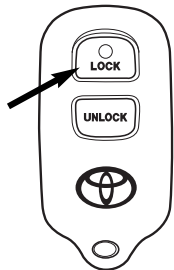

PRESS AND RELEASE
THE LOCK BUTTON


Lock the doors with the remote control:
Remove the key from the ignition switch.
Exit the vehicle, and close all the doors.*
Close the trunk or hatch, if necessary.*
Press the lock button on the remote control. Simultaneously:

The doors lock.^②


The vehicle's tail and marker or turn signal lights flash once.^③

The vehicle's buzzer chirps once.^Δ


The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.^① The system is now ARMED.

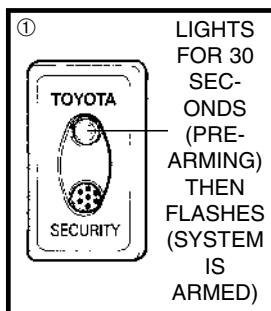

① LIGHTS
FOR 30
SEC-
ONDS
(PRE-
ARMING)
THEN
FLASHES
(SYSTEM
IS
ARMED)

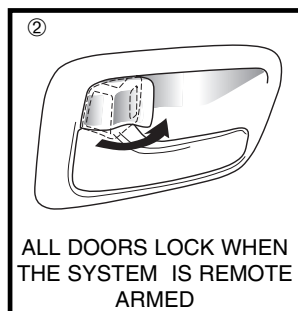

② ALL DOORS LOCK WHEN
THE SYSTEM IS REMOTE
ARMED

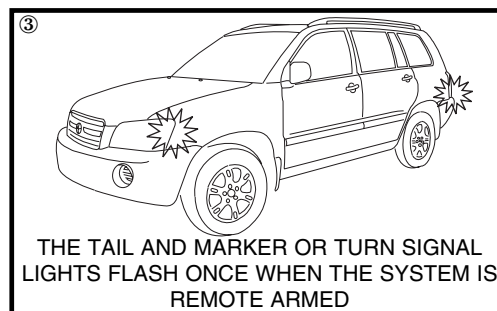

③ THE TAIL AND MARKER OR TURN SIGNAL
LIGHTS FLASH ONCE WHEN THE SYSTEM IS
REMOTE ARMED


* The system will not ARM while any of the doors, trunk or hatch is open.

Δ If your vehicle is equipped with a buzzer.

OPERATION

DISARMING THE RS3200 PLUS (except PASSIVE DISARMING)

The system may be DISARMED in several ways. Do one of the following:

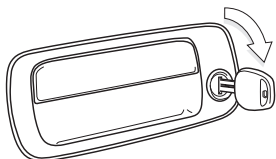


TURN TOWARD THE
REAR
OF THE VEHICLE

Unlock the doors with your key:

Insert the key into the door key switch and turn it toward the rear of the vehicle:

The STATUS MONITOR'S LED stops flashing.^①The system is now DISARMED.*

In the case of Highlander, Sienna, and 4Runner, you may also disarm the system using the key in the back door; all doors will unlock at the same time.

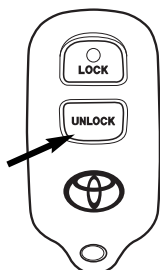

PUSH THE UNLOCK
BUTTON

Unlock the doors with the remote control:

Press the unlock button on the remote control. Simultaneously:

The driver's door unlocks.^②




The vehicle's tail and marker or turn signal lights flash twice.^③

The vehicle's buzzer chirps twice.^Δ

The STATUS MONITOR'S LED stops flashing.^①The system is now DISARMED.*

Press the unlock button again within 3 seconds after unlocking the driver's door to unlock the remaining doors.

NOTE: If your vehicle's tail and marker or turn signal lights turn on for 2 seconds when the system is DISARMED,* the TRIGGER MEMORY was activated; something TRIGGERED an ALARM while you were away from the vehicle.

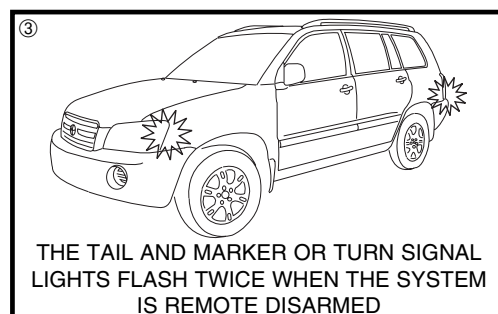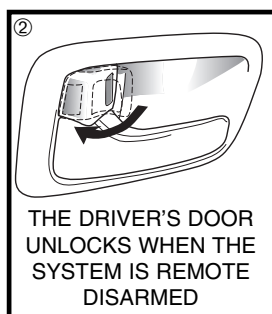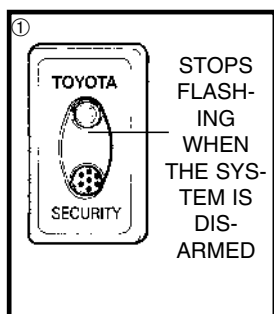


* Please note, if the system utilizes your vehicle's engine immobilizer system LED instead of the STATUS MONITOR, the LED will continue to flash.

Δ If your vehicle is equipped with a buzzer.

OPERATION

PASSIVE (AUTOMATIC) ARMING & DISARMING Not available on Smart Vehicles.

When the RS3200 PLUS is programmed to PASSIVELY ARM, the system will ARM after the ignition key is removed and all doors and the trunk are closed; you do not need to lock the doors. When you come back to your vehicle and open a door, you must insert the key into the ignition switch and turn it to "ON" during the ENTRY DELAY (0, 15 or 30 seconds), or an ALARM will be TRIGGERED. If you lock the doors, regular ARMING will override PASSIVE ARMING; there will be no ENTRY DELAY. See the PROGRAMMING information on page 13 to activate the PASSIVE ARMING mode, as well as to select the ENTRY DELAY time. **(Not applicable to Highlander and Sienna. Please consult your Toyota Dealer for programming information .)**

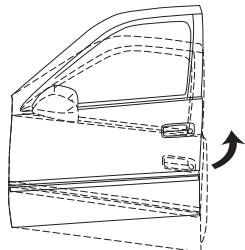

THE SYSTEM ARMS 30 SECONDS AFTER THE LAST ENTRY POINT (DOOR, TRUNK OR HATCH) IS CLOSED

To PASSIVELY ARM the system:


Remove the key from the ignition switch.

Exit the vehicle, and close all the doors. *(The system will not ARM while any of the doors are open.)*

Close the trunk or hatch, if necessary. *(The system will not ARM while the trunk or hatch is open.)*

After the last door, trunk or hatch is closed:

The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.^① The system is now ARMED.

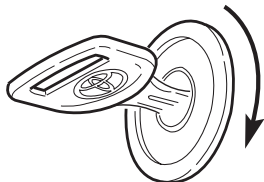

THE SYSTEM DISARMS WHEN YOU INSERT THE KEY AND TURN IT TO "ON"

To DISARM the PASSIVELY ARMED system:

Enter the vehicle through a front door.

The ENTRY DELAY begins:



The STATUS MONITOR'S LED turns on (no flashing.)^②

Insert the key into the ignition switch and turn it to "ON" before the ENTRY DELAY ends.*

The LED turns off. The system is now DISARMED.

You may also DISARM the system following any of the methods described on page 6.

NOTE: If your vehicle's tail and marker lights turn on for 2 seconds when the ignition key is turned to "ON", the TRIGGER MEMORY was activated; something TRIGGERED an ALARM while you were away from the vehicle.

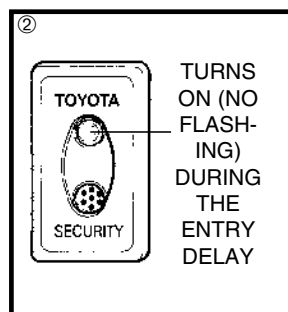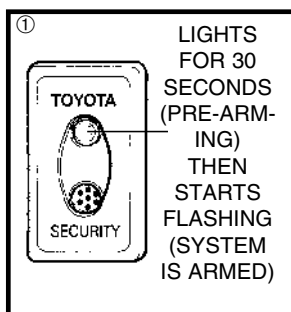


* If the ENTRY DELAY time elapses before the ignition switch is turned to "ON", an ALARM will be TRIGGERED. To DISARM the system during an ALARM, insert the ignition key and turn it to "ON", or press and release the remote control's unlock button.

OPERATION

AUTOMATIC REARMING


When you unlock the doors using the remote control, the RS3200 PLUS is DISARMED at the same time. However, if you do not open a door or the trunk within 30 seconds, the keyless entry system will relock the doors and the RS3200 PLUS will REARM 30 seconds later.

How the RS3200 PLUS automatically REARMS:

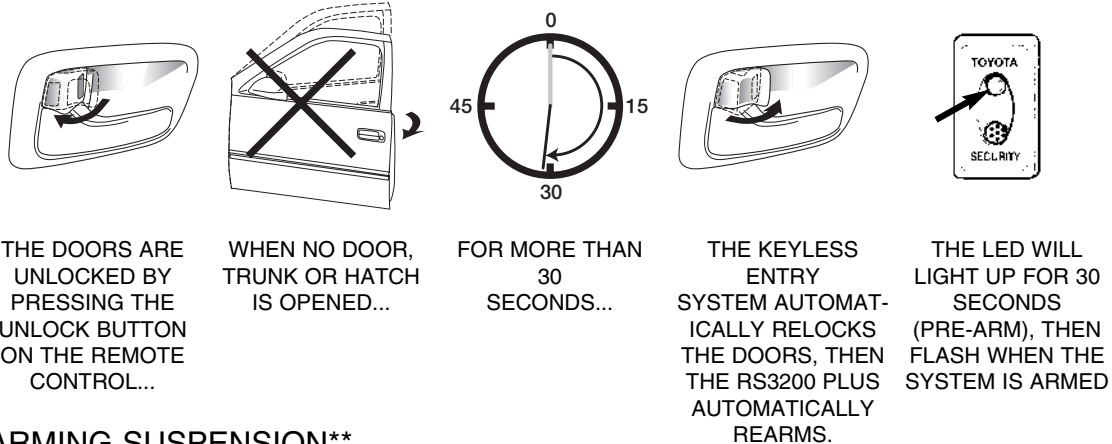

ARMING SUSPENSION**

The ARMED state of the RS3200 PLUS can be suspended temporarily by using the key to unlock and open the trunk. If your remote control is so equipped, you may also suspend the ARMED state using the trunk release button^① to open the trunk. When the ARMING is suspended, the STATUS MONITOR'S LED will turn off^② until the trunk is closed again.

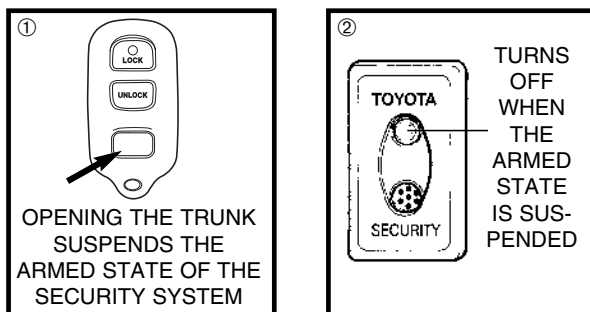


**Starting from 2002 M.Y., Arming Suspension Mode by using the key to unlock the trunk is not applicable to Camry, Solara, and Corolla.

ALARM INFORMATION


ALARM TRIGGERS

While the system is ARMED, an ALARM will be TRIGGERED when any of the following occurs:

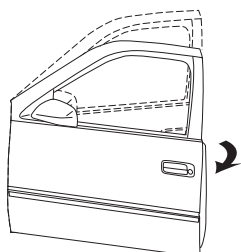

- Forcibly opening a door, or the trunk or hatch without a key


Pulling the trunk release lever inside the vehicle will also TRIGGER an ALARM.

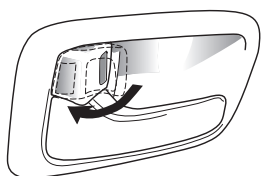

- Manually unlocking a door


Manually operating an inside lock button will TRIGGER an ALARM.

Note: Because this action will TRIGGER an ALARM, it is important that you do not ARM the system while someone is in the vehicle.

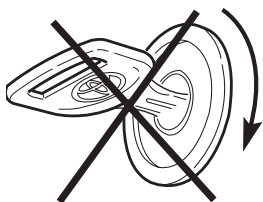


- "Hot wiring" the vehicle

The RS3200 PLUS can detect the absence of the ignition key if the ignition circuit is shorted in attempt to start the vehicle.

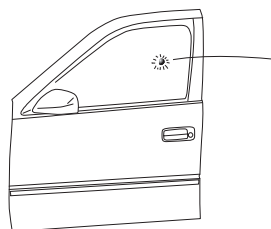

- Tapping on or breaking the glass

The noise from tapping on, or breaking of glass TRIGGERS a WARN AWAY ALARM first, then a regular ALARM. See the description of how the GLASS BREAKAGE SENSOR TRIGGERS ALARMS on page 12.

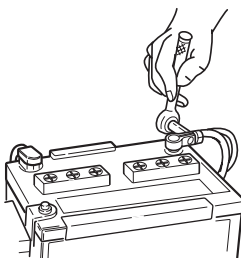

- Power restoration

If power to the system is interrupted while it is ARMED, an ALARM will be TRIGGERED immediately when power is restored.


ALARM INFORMATION

ALARM DESCRIPTIONS

Regular ALARM ①

When an ALARM is triggered in any way other than initial detection by the GLASS BREAKAGE SENSOR, the following occur:

- The horn sounds repeatedly for 60 seconds.
- The headlights flash repeatedly for 60 seconds.
- The tail and marker or turn signal lights flash repeatedly for 60 seconds.
- The starter is disabled (no engine start) until the system is DISARMED.
- The door lock will be relocked if someone reaches in and unlocks the inside lock button.
- After 60 seconds of ALARM, the system will REARM and continue to protect the vehicle.

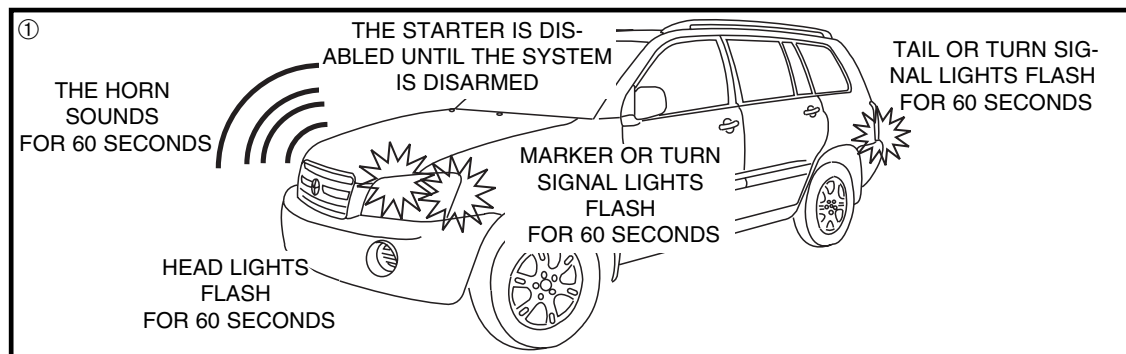


WARN-AWAY ALARM ②

Upon initial detection of noise from tapping on, or breaking glass, the GLASS BREAKAGE SENSOR TRIGGERS a WARN AWAY ALARM:

- The horn sounds repeatedly for 20 seconds.
- The headlights flash repeatedly for 20 seconds.
- The tail and marker or turn signal lights flash repeatedly for 20 seconds.

If the GLASS BREAKAGE SENSOR detects noise again, or if a door or trunk is opened while the system is still ARMED, the regular ALARM (described above) is activated.

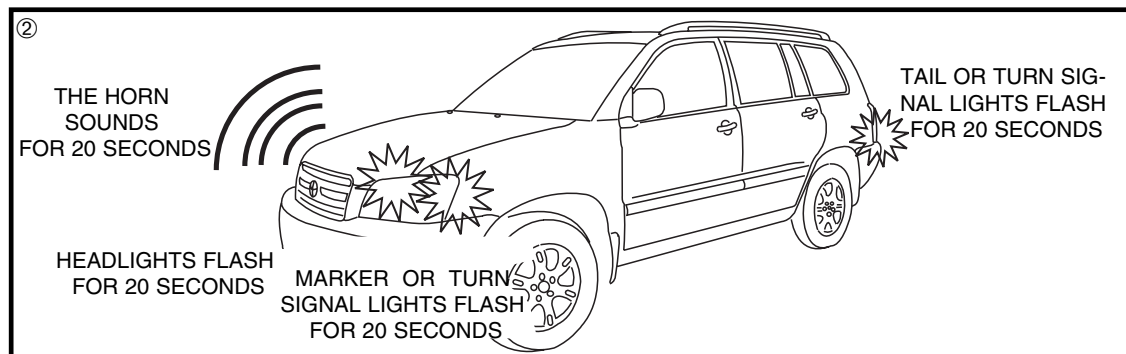

STOPPING AN ALARM


Simply DISARM the system using the remote control or key as described on page 6.

GLASS BREAKAGE SENSOR INFORMATION

The RS3200 PLUS provides protection for your vehicle above and beyond entry point monitoring—it “listens” for the noise made by tapping on, or breaking of glass. Using a microphone designed specifically for this task, the GLASS BREAKAGE SENSOR is capable of ignoring other noises, which helps to prevent “false alarms” from occurring.


GLASS BREAKAGE SENSOR CHECK PROCEDURE

When the RS3200 PLUS was installed in your vehicle, care was taken to adjust the sensitivity level of the GLASS BREAKAGE SENSOR. You may observe how it works following the procedure listed below.

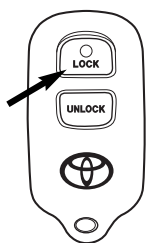


1. ARM the system.
Press the lock button on the remote control or lock the doors with the key.

(Remember, the system will not ARM if any door, the trunk or hatch is open.)

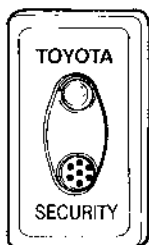


2. Wait until the STATUS MONITOR's LED starts flashing.
The LED will flash 30 seconds after the last door, the trunk or hatch is closed.

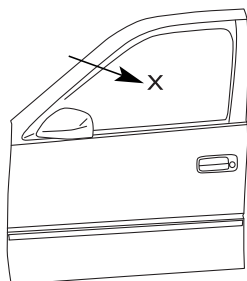

3. With the tip of a key, tap the center of the driver's door window.
Tap the glass with light to moderate force.

WARNING: Do not hit the glass with excessive force, especially in cold weather, or you may crack or break it.

A WARN AWAY ALARM should be TRIGGERED. If the ALARM is not TRIGGERED, make sure you performed the procedure correctly and try again. If you find that the system did not perform as expected, contact your Toyota dealer for more information.

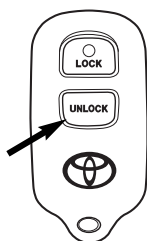


4. DISARM the system to stop the WARN AWAY ALARM.
Press the unlock button on the remote control or use the key to DISARM the system.

PROGRAMMING Not available on Smart Vehicles.


The RS3200 PLUS is factory-set to not PASSIVELY ARM. To change the system's operation for PASSIVE ARMING operation, as well as adjust the ENTRY DELAY time, follow the procedure below. For more information on this feature, please refer to page 7. **(Not applicable to Highlander and Sienna. Please consult your Toyota Dealer for programming information.)**

PASSIVE ARMING ON/OFF SELECTION, ENTRY DELAY TIME SELECTION

1. Before you begin:
Open the driver's door. Close the remaining doors and the trunk or hatch. Unlock all doors with the inside lock switch. Remove the key from the ignition switch.

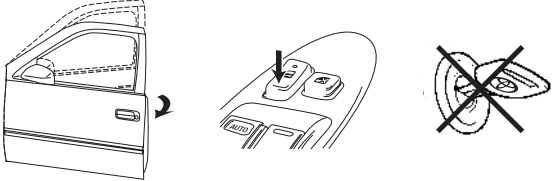


2. Insert and remove the key from the ignition key cylinder 3 times; this must be completed within 5 seconds.

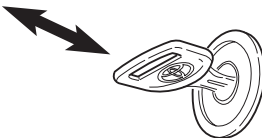


Start the Programming Procedure. (Complete these steps within 40 seconds.)


a. Close the driver's door.

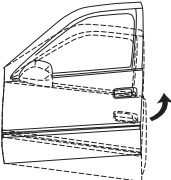


b. **Lock and unlock** all doors **3 times** by key or remote control.

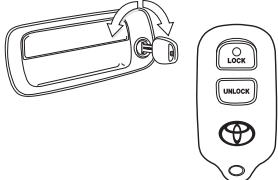


c. Open and close the driver's door.

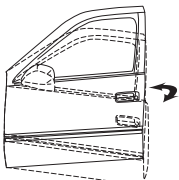


d. **Lock, then unlock** the driver's door inside lock button **3 times**.

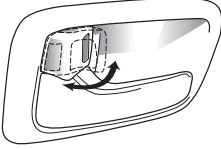


e. Open the driver's door.

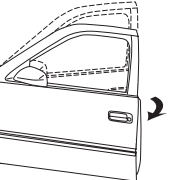

f. The system locks the door in 2 seconds; if this does not happen, start over.

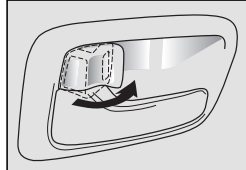


g. Unlock the driver's door knob.

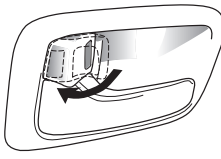


3. Select the Operating Mode and Complete the Programming Procedure.

a. Close, then Open the driver's door:


- 2 times = PASSIVE ARMING OFF
- 3 times = PASSIVE ARMING ON, 0 Sec. ENTRY DELAY
- 4 times = PASSIVE ARMING ON, 15 Sec. ENTRY DELAY
- 5 times = PASSIVE ARMING ON, 30 Sec. ENTRY DELAY

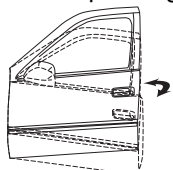

b. **Lock then unlock** the driver's door inside lock button **1 time**.

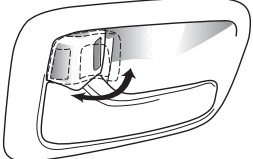

c. The system locks the door in 2 seconds; if this does not happen, start over. Programming is now complete.

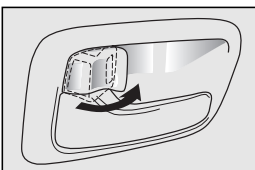

Warning

- This product is applicable only to vehicles with 12V DC, negative grounding specifications. *Do not use in vehicles with 24V specifications.* Otherwise, damage to the unit or a fire may result.
- Never attempt to disassemble or modify the product. Otherwise, an accident, fire or electric shock may result.
- When replacing fuses, be sure to use fuses with the same specified capacity (amperage.) Otherwise, damage to the unit or vehicle, fire or electric shock may result.
- If an abnormal condition occurs, such as liquids spilling onto the product, or the product emitting smoke or strange odors, stop using it immediately and consult the dealer from whom you purchased the product. Continued use of the product before corrective actions are taken may result in an accident, injury or fire.
- Never pull the plastic bag over your head. Otherwise, a serious injury or death from suffocation may occur.

Caution

- Do not use this product for applications other than in-vehicle use. Otherwise, an electric shock or injury may result.
- Do not allow children to play with the remote controls. Otherwise, the doors may be locked or unlocked, the security system armed or disarmed, or an alarm triggered unintentionally.
- If this product is dropped or its case is damaged, disconnect the power supply lead and contact the dealer from whom you purchased it to obtain service. Otherwise, a fire or electric shock may result.
- All security features may not be applicable to all vehicle models.
- Contents subject to change.