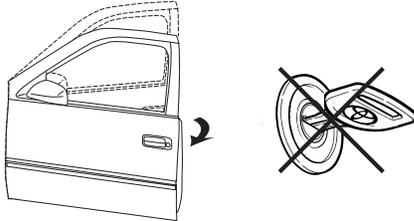
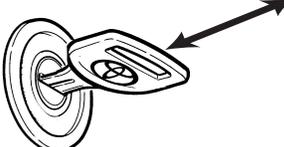
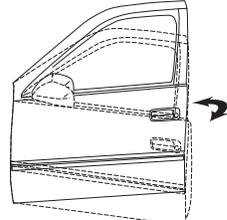
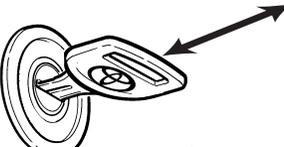
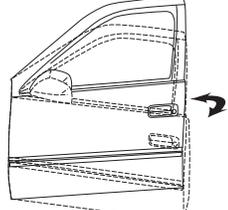
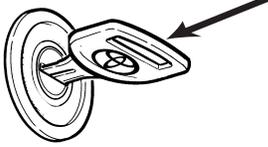
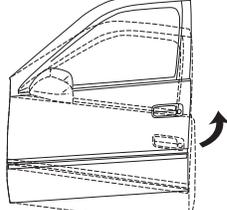
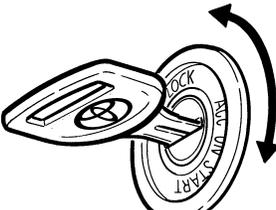
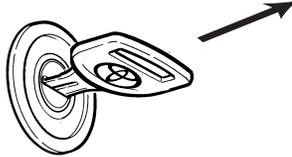
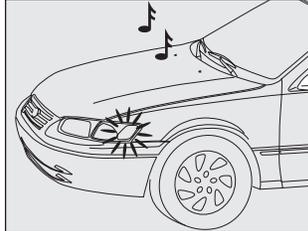
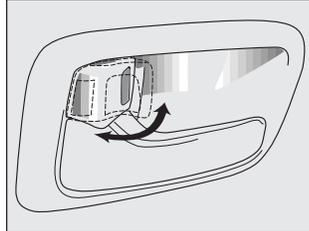


REMOTE KEYLESS ENTRY FOR 2001-2002 MY MR2 SPYDER

REMOTE CONTROL PROGRAMMING RS3200/ REMOTE KEYLESS ENTRY FOR MR2-SPYDER

The RS3200 ECU of the MR2 Spyder Remote Keyless Entry (RKE) system can be programmed to be operated with as many as 4 remote controls. To add or delete remote controls, you must follow the procedure below. This procedure also applies when replacing the RKE ECU.

NOTE: The RKE is factory-set to unlock the driver's door when the UNLOCK button is pressed on the remote control, then unlock the remaining doors when the UNLOCK button is pressed again within 3 seconds.


<p>1. Before you begin: Open the driver's door. Remove the key from the ignition switch.</p> 	<p>2. Start the Programming Procedure. (Complete these steps within 40 seconds.)</p> <p>a.  Insert the key into, and remove it from the ignition switch 2 times.</p> <p>b.  Close, then open the driver's door 2 times.</p>
<p>c.  Insert the key into, and remove it from the ignition switch 1 time.</p> <p>d.  Close, then open the driver's door</p>	<p>e.  Insert the key into the ignition and leave it in.</p> <p>f.  Close the driver's door.</p>
<p>g.  Turn the key from LOCK to ON 1 times (ending at LOCK.)</p> <p>h.  Remove the key from the ignition switch.</p>	<p>i.  The tail and marker lights flash 1 times and the buzzer chirps 1 times.</p> <p>j.  The doors will lock and unlock 1 time.</p>

Note: If the system does not activate the lights and buzzer, start over.


REMOTE KEYLESS ENTRY FOR 2001-2002 MY MR2 SPYDER

REMOTE CONTROL PROGRAMMING (continued)


3. Select the Operating Mode and Complete the Programming Procedure.

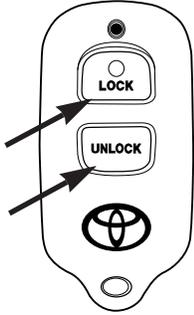


a. Press and release both LOCK and UNLOCK buttons at the same time.

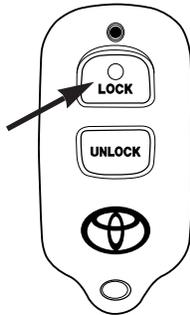


b. Press and release the LOCK button once for driver's door unlock.

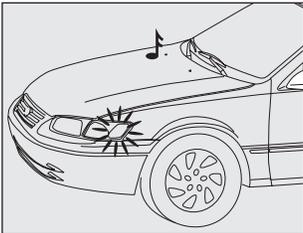

c. The tail and marker lights flash 1 time and the buzzer chirps 1 time.

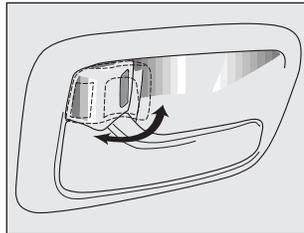

d. The doors will lock and unlock 1

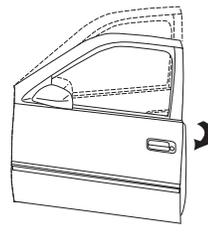

e. Open the driver's door; programming is now complete.

Note: If the system locks the doors twice, start over.