



## OWNERS GUIDE

The G.B.S. (GLASS BREAKAGE SENSOR) provides protection for your vehicle above and beyond the entry point monitoring performed by the TDS (Theft Deterrent System)—it “listens” for the noise made by tapping on, or breaking of glass, and triggers alarms upon detection of these types of noise. Using a microphone designed specifically for this task, the G.B.S. is capable of ignoring other noises, which helps prevent “false alarms” from occurring. (See reverse for descriptions of alarms.)

### GLASS BREAKAGE SENSOR CHECK PROCEDURE

When the G.B.S. was installed in your vehicle, care was taken to adjust the sensitivity level properly. you may observe how it works following the procedure listed below.




1. Arm the theft deterrent system.  
Press the lock button on the remote control or lock the doors with the key. (Remember, the system will not arm if any door, or the trunk, is open.)

Please note, your remote controls may look different than the one pictured here.



2. Wait until the Security LED starts flashing.  
The LED will begin to flash 30 seconds after the last door or the trunk is closed.  
Please note, your vehicle's Security LED may look different than the one pictured here.

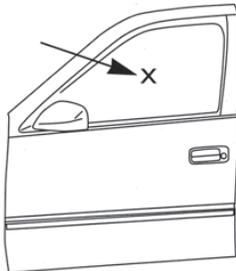

3. With the tip of a key, tap the center of the driver's door window.  
Tap the glass with light to moderate force.

**WARNING:** Do not hit the glass with excessive force, especially in cold weather, or you may crack or break it.

A WARN AWAY ALARM should be triggered. (See reverse for details.) If the ALARM IS not triggered, make sure you performed the procedure correctly and try again. If the system did not perform as you expected, contact your Toyota dealer for more information.



4. Disarm the theft deterrent system to stop the WARN AWAY ALARM. Press the unlock button on the remote control, or use the key to unlock a door, to disarm the system.

Please note, your remote controls may look different than the one pictured here.

# ALARM INFORMATION


## ALARM DESCRIPTIONS

### WARN-AWAY ALARM

Upon initial detection of noise from tapping on, or breaking glass, the GLASS BREAKAGE SENSOR triggers a WARN AWAY ALARM:

- The horn sounds repeatedly for 20 seconds.
- The headlights flash repeatedly for 20 seconds.
- The tail and marker lights flash repeatedly for 20 seconds.
- The interior lights turn on for 20 seconds.

If the GLASS BREAKAGE SENSOR detects noise again, or if a door or the trunk is forcibly opened, the regular alarm (described below) is activated.

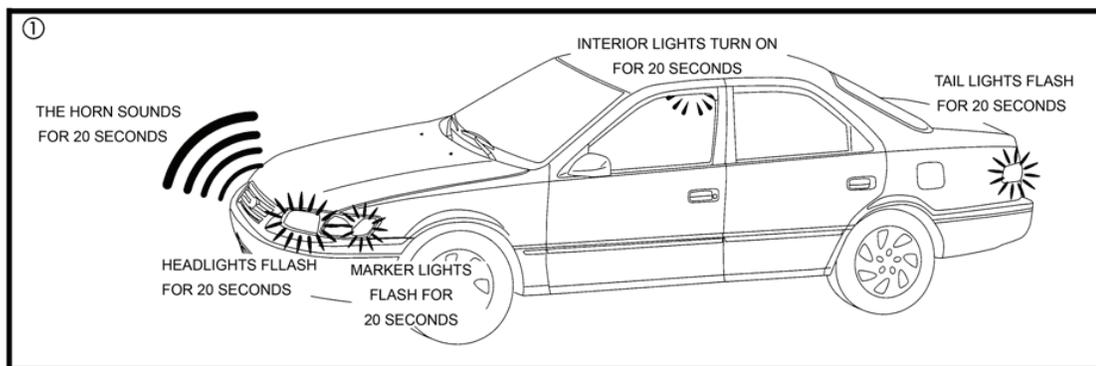


### REGULAR ALARM

When an alarm is triggered in any way other than initial detection by the GLASS BREAKAGE SENSOR, the following occurs:

- The horn sounds repeatedly for 60 seconds.
- The headlights flash repeatedly for 60 seconds.
- The tail and marker lights flash repeatedly for 60 seconds.
- The interior lights turn on for 60 seconds.

Any door lock will be re-locked if someone reaches in and unlocks an inside lock button. After 60 seconds, the theft deterrent system will rearm and continue to protect the vehicle.

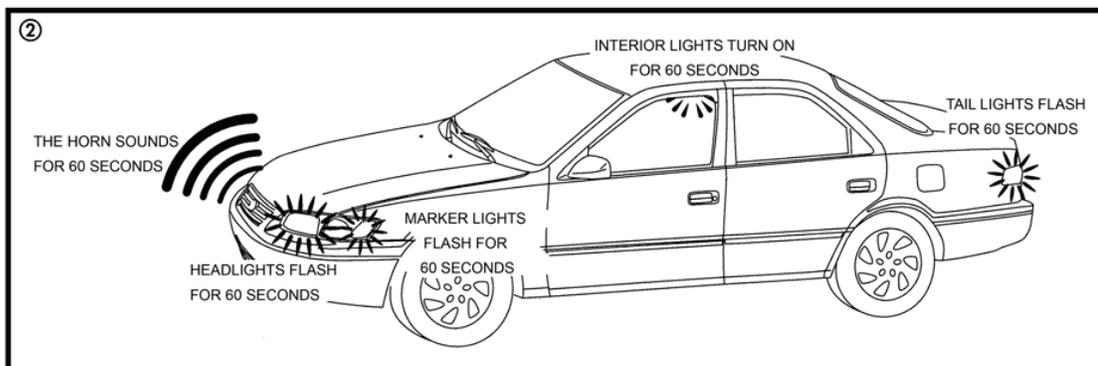

## STOPPING AN ALARM

Simply disarm the theft deterrent system using the remote control or key as described in the Owner's Guide for your vehicle.