

2014-

Highlander / Highlander HV

TVIP V5

RS3200 PLUS  
OWNER'S GUIDE



## RS3200 PLUS

SECURITY SYSTEM DESIGNED FOR  
USE WITH YOUR VEHICLE'S REMOTE  
KEYLESS ENTRY SYSTEM

## Owner's Guide



04-16-12  
090002-3413A700

---

## TABLE OF CONTENTS

To better understand the features and functions of this security system, please read this Owner's Guide completely prior to use.

DESCRIPTION	PAGE
INTRODUCTION	2
BRIEF DESCRIPTION—RS3200 PLUS FEATURES OPERATION	3, 4
ARMING THE RS3200 PLUS	5
DISARMING THE RS3200 PLUS	6
AUTOMATIC REARMING	7
ARMING SUSPENSION	7
ALARM INFORMATION	
ALARM TRIGGERS	8
ALARM DESCRIPTIONS	9
STOPPING AN ALARM	9
GLASS BREAKAGE SENSOR INFORMATION	
GLASS BREAKAGE SENSOR CHECK PROCEDURE	10
WARNING and CAUTION INFORMATION	11




## INTRODUCTION

Congratulations on your choice of the RS3200 PLUS add-on security system to protect your vehicle! To get the most from the system, we strongly recommend that you read this Owner’s Guide completely to learn all of its features and functions.

The RS3200 PLUS provides security through point-of-entry monitoring, glass breakage detection and ignition switch monitoring. While ARMED, the system will be TRIGGERED and sound an ALARM when a door, trunk or hatch is forcibly unlocked or opened, or when a window is tapped on or broken. During the ALARM, the vehicle’s horn sounds and the headlights, tail lights and front marker or turn signal lights flash. Also, the vehicle’s starter is disabled, preventing engine start. In addition to the comprehensive protection, the RS3200 PLUS works in conjunction with your vehicle’s remote keyless entry system, enabling you to ARM and DISARM the security system at the same time the doors are remotely locked and unlocked. In vehicles equipped with a buzzer, it will chirp when the system is REMOTE ARMED and DISARMED.

An important note about your system:

Throughout this guide, there are references to the STATUS MONITOR for this system. Illustrated below, this panel holds the LED indicator (for the system’s operating status) and the GLASS BREAKAGE SENSOR’S microphone. In vehicles equipped with an engine immobilizer system, there is a LED already installed, so the RS3200 PLUS utilizes the vehicle’s engine immobilizer system LED instead and a microphone mounted in a separate location. If your vehicle falls into this category, remember to look at that LED when the information refers to the STATUS MONITOR. If you do not know where the LED is located, refer to your vehicle’s owner’s guide for specific information.

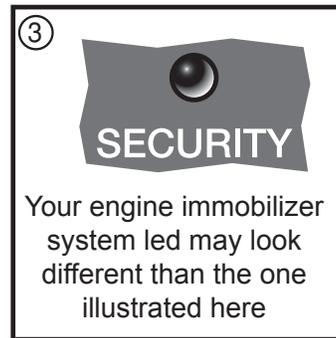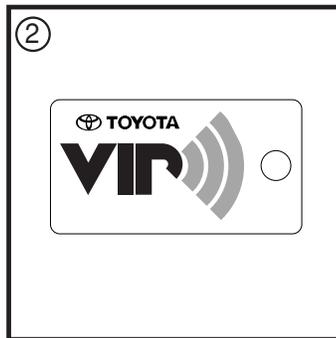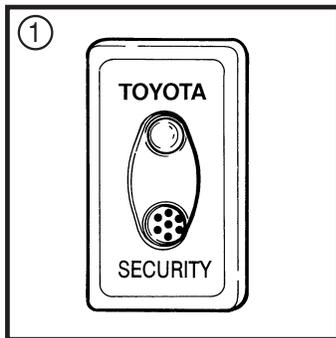

## BRIEF DESCRIPTION—RS3200 PLUS FEATURES

FEATURES	FUNCTIONS
REMOTE ARMING / DISARMING	The RS3200 PLUS will ARM 30 seconds after the lock button on the remote keyless entry system's remote control is pressed, and DISARM when the unlock button is pressed. If your vehicle is equipped with a buzzer that chirps when the lock and unlock buttons on the remote controls are pressed, the buzzer will also chirp when the system is REMOTE ARMED and DISARMED.
AUTOMATIC REARMING	The RS3200 PLUS will automatically REARM at the same time the vehicle's remote keyless entry system relocks the vehicle's doors, if no door is opened within 30 seconds after REMOTE DISARMING.
KEY ARMING / DISARMING	The RS3200 PLUS will ARM 30 seconds after you close the trunk (if open) and lock the vehicle's doors with the key, and will DISARM when you unlock a door with the key.
ARMED MODE SUSPENSION**	While ARMED, the trunk may be opened with the key (or trunk release button on your remote control, if so equipped) without TRIGGERING an ALARM. Once the open trunk is closed, the system ARMS again.
MANUAL ARMING	When you lock the vehicle with the central lock switch (while a door is open), the RS3200 PLUS will ARM 30 seconds after you close all the doors and the trunk (if open).
IGNITION KEY DISARMING	The RS3200 PLUS may be DISARMED by inserting the key into the ignition switch and turning it to "ON."
POINT-OF-ENTRY PROTECTION	Forcibly unlocking or opening a door or trunk while the RS3200 PLUS is ARMED will TRIGGER an ALARM immediately.
GLASS BREAKAGE SENSOR	The RS3200 PLUS utilizes a microphone (usually mounted in the STATUS MONITOR) to sense the noise from tapping on window glass, or glass breaking, and TRIGGER the system to sound an ALARM. It is fine tuned to "listen" for this type of noise, and ignore other sounds.
WARN AWAY ALARM	When the GLASS BREAKAGE SENSOR'S microphone picks up tapping or breaking of window glass, it TRIGGERS a WARN AWAY ALARM; the headlights and tail and marker or turn signal lights flash, and the horn sounds for 20 seconds, but the starter is not disabled. If there is another detection of glass tapping or breaking, or if a door is opened or unlocked without a key, the regular ALARM is TRIGGERED.

\*\* Starting from 2002 M.Y., Arming Suspension Mode by using the key to unlock the trunk is not applicable to Camry, Solara, and Corolla.

## BRIEF DESCRIPTION—RS3200 PLUS FEATURES


FEATURES	FUNCTIONS
IGNITION SWITCH MONITORING	While ARMED, the RS3200 PLUS monitors the ignition switch. If an attempt is made to start the vehicle without a key, an ALARM is TRIGGERED.
STARTER DISABLE	When an ALARM is TRIGGERED, the system disables the vehicle's starter and prevents engine start until the system is reset (DISARMED).
FORCED LOCK DURING ALARM	During an ALARM, the system will lock the doors if one is unlocked, and will continue to do so for the duration of the ALARM.
TRIGGER MEMORY*	The user is notified that an ALARM occurred. Upon DISARMING the system after an ALARM was TRIGGERED, the vehicle's tail and marker lights will be turned on for 2 seconds.
EXTERIOR LIGHT ACTIVATION	The RS3200 PLUS flashes the vehicle's tail and marker or turn signal lights during REMOTE ARMING and REMOTE DISARMING, and during an ALARM. Also, during an ALARM the headlights flash.
BUZZER ACTIVATION	If your vehicle is equipped with a buzzer that chirps when the lock and unlock buttons on the remote keyless entry system's remote controls are pressed, the buzzer will also chirp when the system is REMOTE ARMED and DISARMED.
HORN ACTIVATION	During an ALARM, the RS3200 PLUS activates the vehicle's horn.
POWER LOSS MEMORY	If power to the RS3200 PLUS is disrupted while it is ARMED, an ALARM is TRIGGERED once power is restored.
STATUS MONITOR	This panel houses the GLASS BREAKAGE SENSOR microphone and the flashing LED that indicates the operating status of the security system. (Some vehicle applications utilize the vehicle's engine immobilizer system LED and a separate microphone, instead.)

\* TRIGGER MEMORY is not available for Corolla / Matrix.

## OPERATION

### ARMING THE RS3200 PLUS

The system may be ARMED in several ways. Do one of the following:

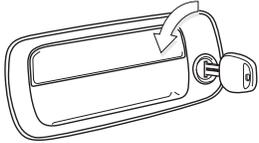


Turn toward the front of the vehicle.

#### Lock the doors with your key:

Remove the key from the ignition switch. Exit the vehicle, and close all the doors.\* Close the trunk or hatch, if necessary.\* Insert the key into the door key switch and turn it toward the front of the vehicle:

The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.\*\*<sup>①</sup> The system is now ARMED.

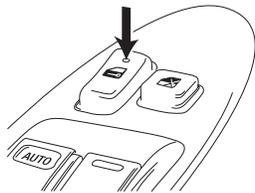


Push the lock switch while the door is open.

#### Lock the doors from inside the vehicle:

Remove the key from the ignition switch. Open the driver's or front passenger's door. Push the central lock switch. Exit the vehicle, and close all the doors.\* Close the trunk or hatch, if necessary.\* Then:

The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.\*\*<sup>①</sup> The system is now ARMED.

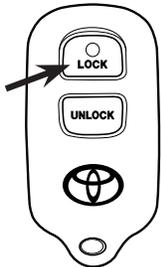

Press and release the lock button.

#### Lock the doors with the remote control:




Remove the key from the ignition switch. Exit the vehicle, and close all the doors.\* Close the trunk or hatch, if necessary.\* Press the lock button on the remote control. Simultaneously:

The doors lock.<sup>②</sup>

The vehicle's tail and marker or turn signal lights flash once.<sup>③</sup>

The vehicle's buzzer chirps once.Δ

The STATUS MONITOR'S LED turns on for 30 seconds, then starts flashing.\*\*<sup>①</sup> The system is now ARMED.

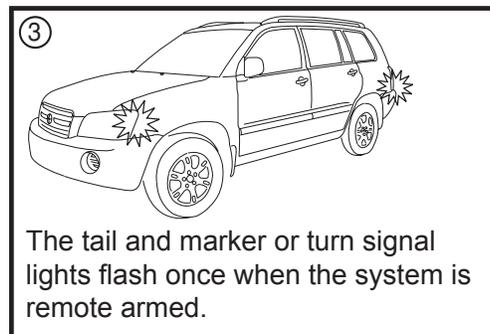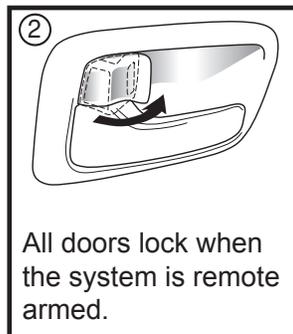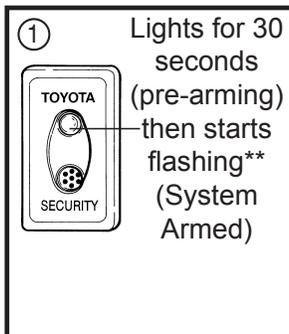

\* The system will not ARM while any of the doors, trunk or hatch is open.


Δ If your vehicle is equipped with a buzzer.

\*\* For some vehicles the LED flashes during and after the 30 seconds (pre-arming).

# OPERATION

## DISARMING THE RS3200 PLUS

The system may be DISARMED in several ways. Do one of the following:

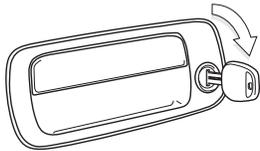

Turn toward the rear of the vehicle.


### Unlock the doors with your key:

Insert the key into the door key switch and turn it toward the rear of the vehicle:

The STATUS MONITOR'S LED stops flashing.\*<sup>①</sup>

The system is now DISARMED.\*

*In the case of Highlander, Sienna, and 4Runner, you may also disarm the system using the key in the back door; all doors will unlock at the same time.*

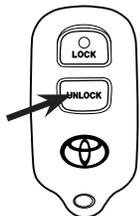

Push the unlock Button.

### Unlock the doors with the remote control:

Press the unlock button on the remote control. Simultaneously:

The driver's door unlocks.<sup>②</sup>


The vehicle's tail and marker or turn signal lights flash twice.<sup>③</sup>

The vehicle's buzzer chirps twice.Δ

The STATUS MONITOR'S LED stops flashing.\*<sup>①</sup>

The system is now DISARMED.\*

Press the unlock button again within 3 seconds after unlocking the driver's door to unlock the remaining doors.

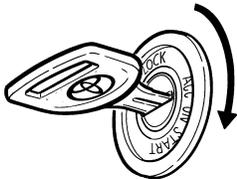

Turn the key to "on" to disarm the system

### Use the ignition switch:



Insert the key into the ignition switch, then turn it to ON:

The STATUS MONITOR'S LED stops flashing.<sup>①</sup>

The system is now DISARMED.

*This method of disarming is rarely used. You must be inside the vehicle while the system is armed in order to do it.*

**NOTE:** If your vehicle's tail and marker or turn signal lights turn on for 2 seconds when the system is DISARMED, the TRIGGER MEMORY was activated; something TRIGGERED an ALARM while you were away from the vehicle. This feature is not available for Corolla / Matrix.

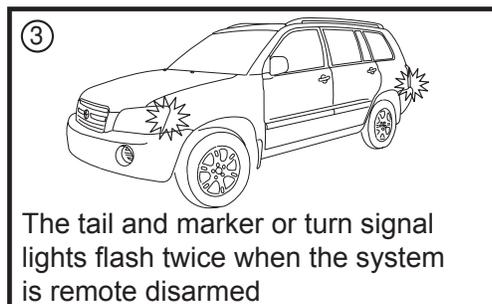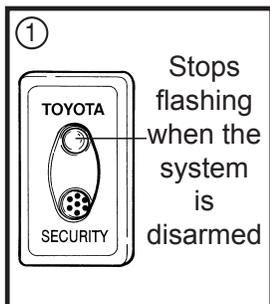

\* Please note, if the system utilizes your vehicle's engine immobilizer system LED instead of the STATUS MONITOR, the LED will continue to flash.


Δ If your vehicle is equipped with a buzzer.

# OPERATION

## AUTOMATIC REARMING


When you unlock the doors using the remote control, the RS3200 PLUS is DISARMED at the same time. However, if you do not open a door or the trunk within 30 seconds, the keyless entry system will relock the doors and the RS3200 PLUS will REARM 30 seconds later.

How the RS3200 PLUS automatically REARMS:

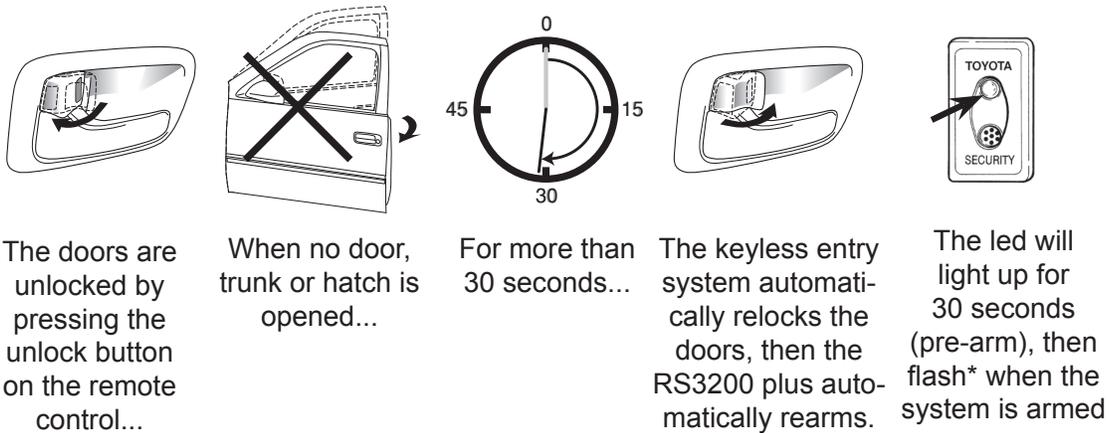

## ARMING SUSPENSION\*\*

The ARMED state of the RS3200 PLUS can be suspended temporarily by using the key to unlock and open the trunk. If your remote control is so equipped, you may also suspend the ARMED state using the trunk release button<sup>①</sup> to open the trunk. When the ARMING is suspended, the STATUS MONITOR'S LED will turn off<sup>②</sup> until the trunk is closed again.

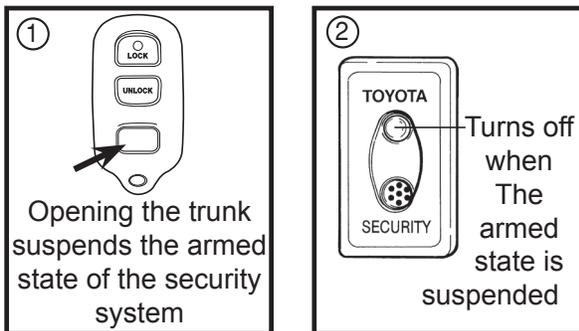


\*\* Starting from 2002 M.Y., Arming Suspension Mode by using the key to unlock the trunk is not applicable to Camry, Solara, and Corolla.

\* For some vehicles the LED flashes during and after the 30 seconds (pre-arming).


# ALARM INFORMATION

## ALARM TRIGGERS

While the system is ARMED, an ALARM will be TRIGGERED when any of the following occurs:

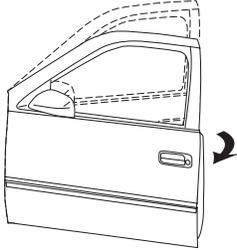

→ Forcibly opening a door, or the trunk or hatch without a key  
 Pulling the trunk release lever inside the vehicle will also TRIGGER an ALARM.

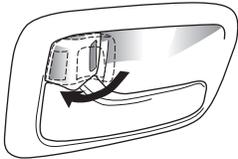


→ Manually unlocking a door  
 Manually operating an inside lock button will TRIGGER an ALARM.


Note: Because this action will TRIGGER an ALARM, it is important that you do not ARM the system while someone is in the vehicle.




→ Pressing the Start Button  
 If the start button is pressed while the vehicle is ARMED, an ALARM will be TRIGGERED.

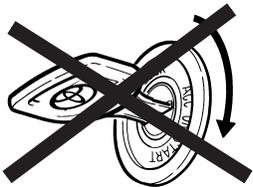

→ "Hot wiring" the vehicle  
 The RS3200 PLUS can detect the absence of the ignition key if the ignition circuit is shorted in attempt to start the vehicle.

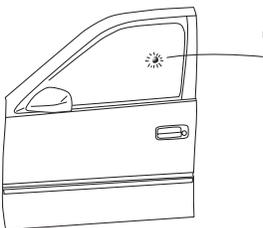

→ Tapping on or breaking the glass  
 The noise from tapping on, or breaking of glass TRIGGERS a WARN AWAY ALARM first, then a regular ALARM. See the description of how the GLASS BREAKAGE SENSOR TRIGGERS ALARMS on page 9.

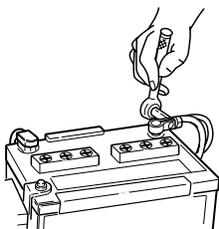

→ Power restoration  
 If power to the system is interrupted while it is ARMED, an ALARM will be TRIGGERED immediately when power is restored.


# ALARM INFORMATION

## ALARM DESCRIPTIONS

### Regular ALARM ①

When an ALARM is triggered in any way other than initial detection by the GLASS BREAKAGE SENSOR, the following occur:

- The horn sounds repeatedly for 60 seconds.
- The headlights flash repeatedly for 60 seconds.
- The tail and marker or turn signal lights flash repeatedly for 60 seconds.
- The starter is disabled (no engine start) until the system is DISARMED.
- The door lock will be relocked if someone reaches in and unlocks the inside lock button.
- After 60 seconds of ALARM, the system will REARM and continue to protect the vehicle.

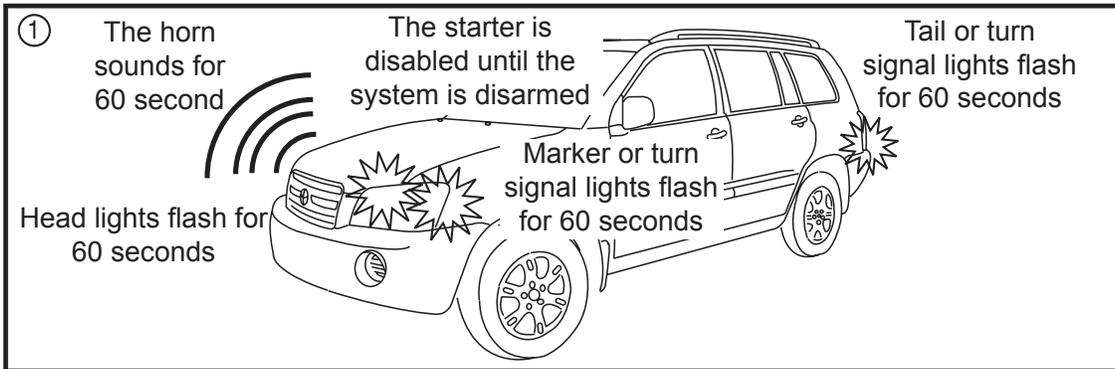


### WARN-AWAY ALARM ②

Upon initial detection of noise from tapping on, or breaking glass, the GLASS BREAKAGE SENSOR TRIGGERS a WARN AWAY ALARM:

- The horn sounds repeatedly for 20 seconds.
- The headlights flash repeatedly for 20 seconds.
- The tail and marker or turn signal lights flash repeatedly for 20 seconds.

If the GLASS BREAKAGE SENSOR detects noise again, or if a door or trunk is opened while the system is still ARMED, the regular ALARM (described above) is activated.

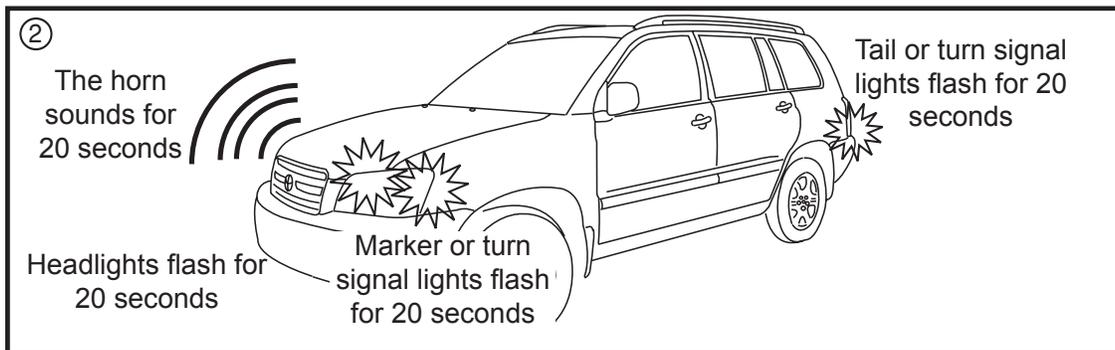

## STOPPING AN ALARM


Simply DISARM the system using the remote control or key as described on page 6.

## GLASS BREAKAGE SENSOR INFORMATION

The RS3200 PLUS provides protection for your vehicle above and beyond entry point monitoring—it “listens” for the noise made by tapping on, or breaking of glass. Using a microphone designed specifically for this task, the GLASS BREAKAGE SENSOR is capable of ignoring other noises, which helps to prevent “false alarms” from occurring.

### GLASS BREAKAGE SENSOR CHECK PROCEDURE

When the RS3200 PLUS was installed in your vehicle, care was taken to adjust the sensitivity level of the GLASS BREAKAGE SENSOR. You may observe how it works following the procedure listed below.

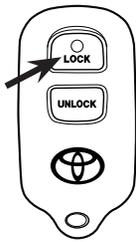


1. ARM the system.  
Press the lock button on the remote control or lock the doors with the key.

*(Remember, the system will not ARM if any door, the trunk or hatch is open.)*



2. Wait until the STATUS MONITOR'S LED starts flashing.  
The LED will flash 30 seconds after the last door, the trunk or hatch is closed.


NOTE: For some vehicles the LED flashes during and after the 30 seconds (pre-arming).

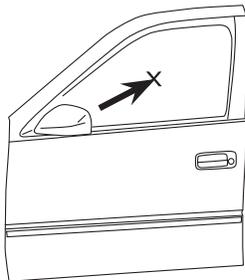

3. With the tip of a key, tap the center of the driver's door window. Tap the glass with light to moderate force.

WARNING: Do not hit the glass with excessive force, especially in cold weather, or you may crack or break it.

A WARN AWAY ALARM should be TRIGGERED. If the ALARM is not TRIGGERED, make sure you performed the procedure correctly and try again. If you find that the system did not perform as expected, contact your Toyota dealer for more information.

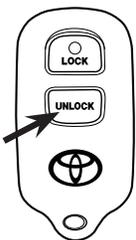

4. DISARM the system to stop the WARN AWAY ALARM.  
Press the unlock button or use the key to DISARM the system.

---

 **Warning**

---

- This product is applicable only to vehicles with 12V DC, negative grounding specifications. Do not use in vehicles with 24V specifications. Otherwise, damage to the unit or a fire may result.
- Never attempt to disassemble or modify the product. Otherwise, an accident, fire or electric shock may result.
- When replacing fuses, be sure to use fuses with the same specified capacity (amperage.) Otherwise, damage to the unit or vehicle, fire or electric shock may result.
- If an abnormal condition occurs, such as liquids spilling onto the product, or the product emitting smoke or strange odors, stop using it immediately and consult the dealer from whom you purchased the product. Continued use of the product before corrective actions are taken may result in an accident, injury or fire.
- Never pull the plastic bag over your head. Otherwise, a serious injury or death from suffocation may occur.

---

 **Caution**

---

- Do not use this product for applications other than in-vehicle use. Otherwise, an electric shock or injury may result.
- Do not allow children to play with the remote controls. Otherwise, the doors may be locked or unlocked, the security system armed or disarmed, or an alarm triggered unintentionally.
- If this product is dropped or its case is damaged, disconnect the power supply lead and contact the dealer from whom you purchased it to obtain service. Otherwise, a fire or electric shock may result.
- All features may not be applicable to all vehicle models.
- Content is subject to change without notice.