

CAMRY

2 0 1 6



QUICK REFERENCE GUIDE

2016 Camry

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Camry operations. Every Camry owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	9
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<i>Keyless entry</i> ^{1,2}	6
Light control-Instrument panel	8
<i>Smart Key system</i> ^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	19-20
Audio	22
<i>Auto lock/unlock</i> ^{1,2}	10
Automatic Transmission	10
Bluetooth® Device Pairing Section	33-42
Bottle holders/Cup holders	24
Blind Spot Monitor (BSM)	18
Clock	19
Cruise control	16
Dynamic radar cruise control	17
Garage door opener (HomeLink®) ³	16
<i>Lights¹ & turn signals</i>	15
Lane Departure Alert (LDA)	25
Moon roof	12
<i>Multi-Information Display¹</i>	24
Parking brake	11
Power outlets-12V DC	14
Pre-Collision System (PCS)	25
Rear view monitor system	18
Seat adjustments-Front	13
Seat adjustments-Rear	13
Seat heaters	19
Seats-Head restraints	12
Steering lock release	11
Steering wheel switches and Telephone controls (Bluetooth®)	21
Tilt and telescopic steering wheel	11
USB/AUX port	23
Windows-Power	12
Windshield wipers & washers	14
Wireless Charging	23

SAFETY AND EMERGENCY FEATURES

Door locks	26
Doors-Child safety locks	26
Floor mat installation	30
Safety Connect	27
Seat belts	26
Seat belts-Shoulder belt anchor	27
Spare tire & tools	28
Star Safety System™	29-30
Trunk internal release	27

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.




OVERVIEW

Instrument panel



Steering wheel controls

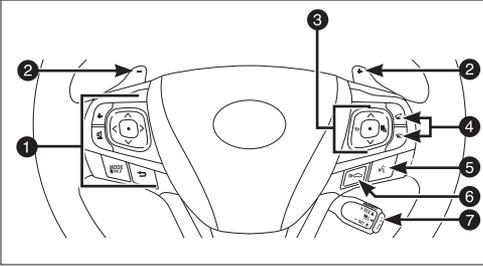

Automatic Air Conditioning

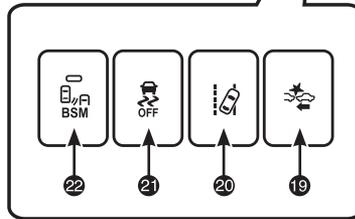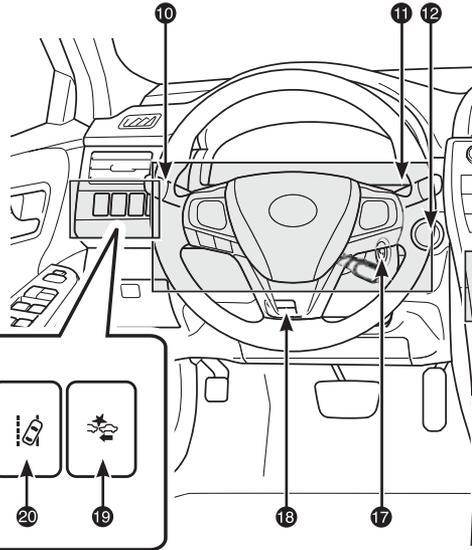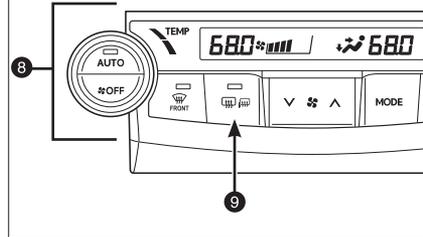

- ① Steering wheel audio controls²
- ② Paddle shift levers¹
- ③ Meter control switches
- ④ Telephone controls²
- ⑤ Voice command button²
- ⑥ Vehicle-to-vehicle distance button¹
- ⑦ Cruise control
- ⑧ Air Conditioning controls
- ⑨ Outside rearview mirror/Rear window defogger button
- ⑩ Headlight and turn signal controls/Headlight, turn signal and front DRL (Daytime Running Light)¹ controls
- ⑪ Wiper and washer controls
- ⑫ "ENGINE START STOP" button (Smart Key)¹
- ⑬ Audio system¹/Navigation system^{1,2}
- ⑭ Emergency flasher button
- ⑮ Tire pressure warning reset switch¹

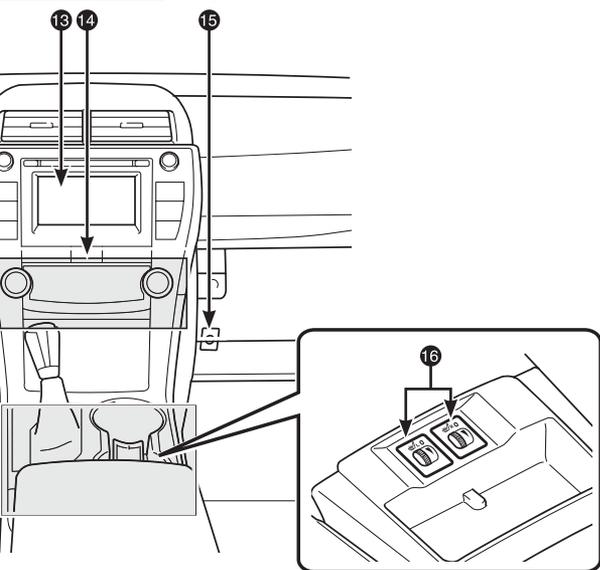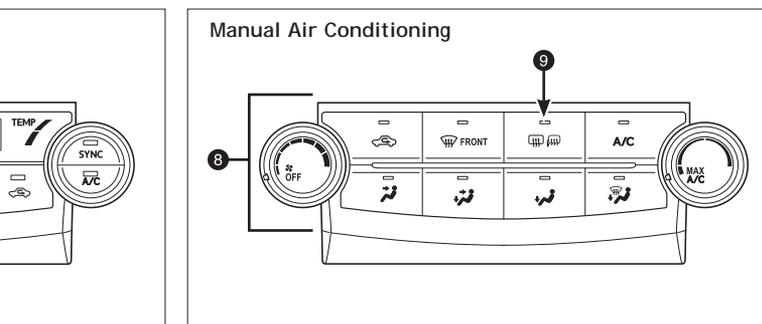


- 16 Seat heater controls¹
- 17 Key ignition¹
- 18 Tilt and telescopic steering lock release
- 19 Pre-Collision System (PCS) switch¹
- 20 Lane Departure Alert (LDA) switch¹
- 21 VSC OFF switch
- 22 Blind Spot Monitor (BSM) main switch¹

¹ If equipped

² For details, refer to the “*Navigation System Owner’s Manual*” and “*2016 Entune™ Audio Quick Reference Guide.*”

Instrument cluster

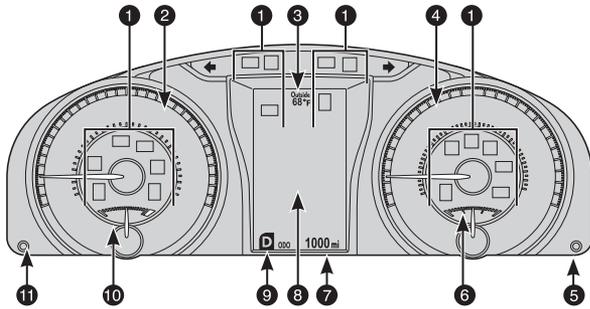

- ❶ Service indicators and reminders
- ❷ Tachometer
- ❸ Outside temperature display
- ❹ Speedometer
- ❺ Display change button
- ❻ Fuel gauge
- ❼ Odometer/Trip meter
- ❽ Multi-information display
- ❾ Shift position/Shift range display
- ❿ Engine coolant temperature display
- ⓫ Instrument panel light control button

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, *2016 Owner’s Manual*.

-  Brake system warning¹
-  Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
-  Pre-collision system warning^{1,2}
-  Electric power steering system warning¹
-  Master system warning¹
-  Malfunction/Check Engine indicator¹
-  Low fuel level warning
-  SRS airbag warning¹

¹ If indicator does not come on or does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

-  Low Tire Pressure Warning^{1,2}
-  **ABS** Anti-lock Brake System warning¹
-  Theft deterrent/Engine immobilizer system indicator
-   Headlight low/high beam indicator
-   Automatic high beam indicator ²
-  Turn signal indicator
-  Slip indicator¹
-  Vehicle Stability Control OFF indicator¹
-  **SET** Cruise control indicator/Cruise control SET indicator³
-  **SET** Dynamic radar cruise control indicator /
Dynamic radar cruise control SET indicator^{2,4}
-  Land Departure Alert (LDA) warning²
-  Passenger Air Bag ON/OFF indicator¹
-  Low outside temperature indicator
-  **ECO** Eco Driving indicator¹
-  Arrow direction indicates fuel tank door position



² If equipped.

³ If this light flashes, refer to "Cruise control," Section 4-5, 2016 Owner's Manual.

⁴ If this light flashes, refer to "Dynamic Radar Cruise control," Section 4-5, 2016 Owner's Manual.



Keyless entry (if equipped)

Locking operation

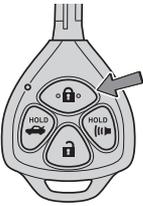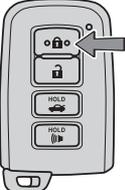Type A	Type B	Type C
		

Push 




Unlocking operation

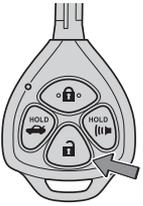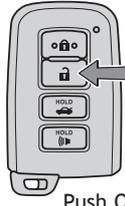Type A	Type B	Type C
		

Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Trunk lid

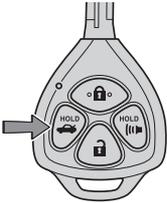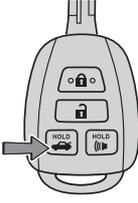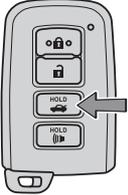Type A	Type B	Type C
		

Push and hold 


Panic button



Push and hold 

Smart Key system (if equipped)

Start function

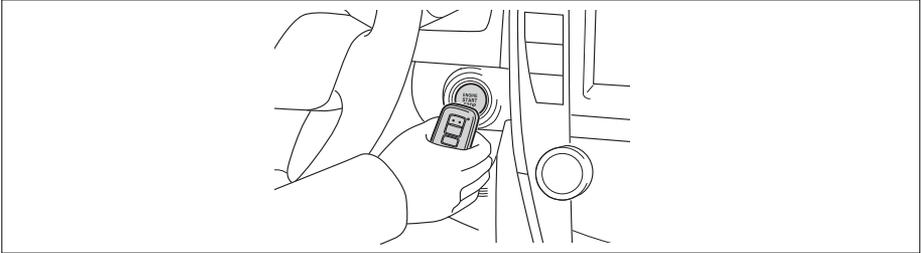

NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

ACC

Accessories such as the radio will operate.

ON


Power ON; the engine not running.

OFF

All systems OFF.

Locking operation


Front door lock

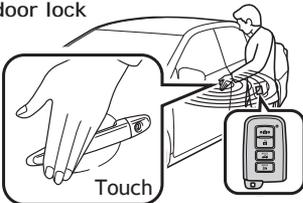

Carry remote to lock


Unlocking operation

Front door unlock*

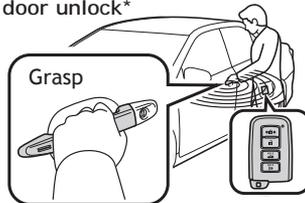

Carry remote to unlock

Trunk lock/unlock

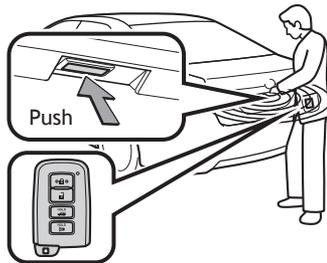


Carry remote to lock/unlock

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.


NOTE: Doors may also be locked/unlocked using remote.

Fuel tank door release and cap

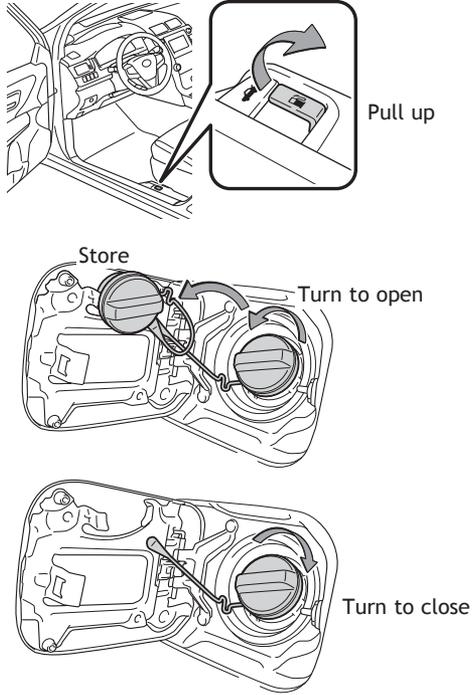


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Light control-Instrument panel

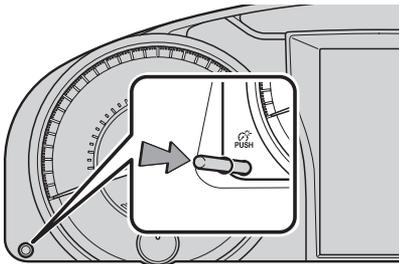


Brightness control

Hood release

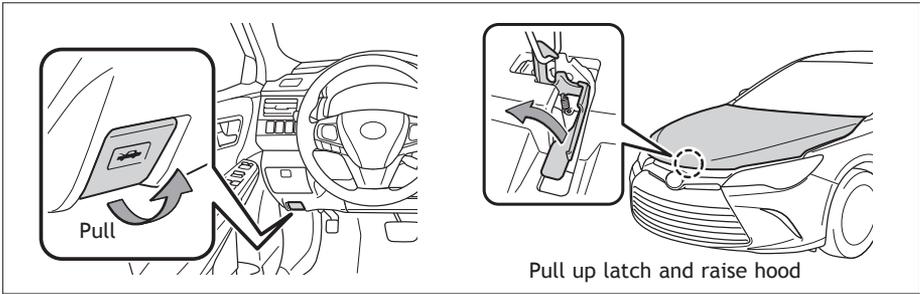


Engine maintenance

4 cylinder (2AR-FE) engine

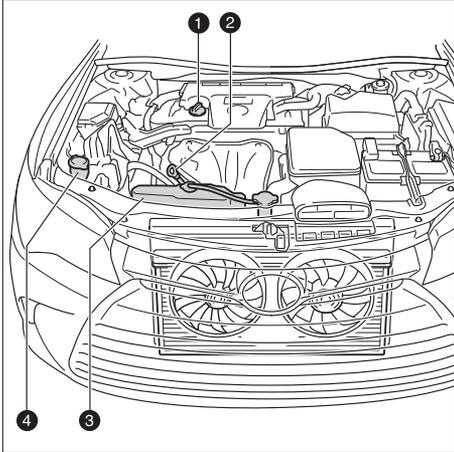

V6 (2GR-FE) engine

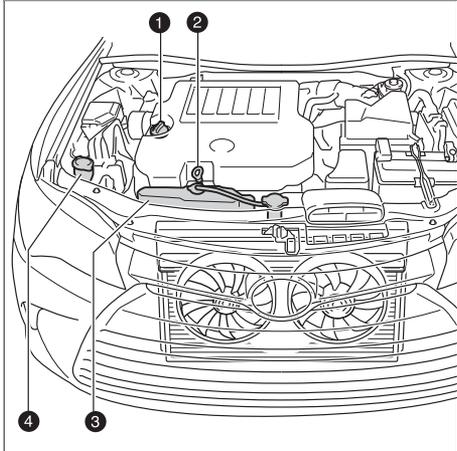

- ① Engine oil filler cap
- ② Engine oil level dipstick
- ③ Engine coolant reservoir
- ④ Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS

Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.

Vehicles without Smart Key system


- Doors unlock when the ignition switch is set from “ON” to “ACC” or “LOCK” and driver’s door is opened.

Vehicles with Smart Key system

- Doors unlock when the “ENGINE START STOP” switch is set to OFF and driver’s door is opened.

Refer to the *Owner’s Manual* for more details.

Automatic Transmission

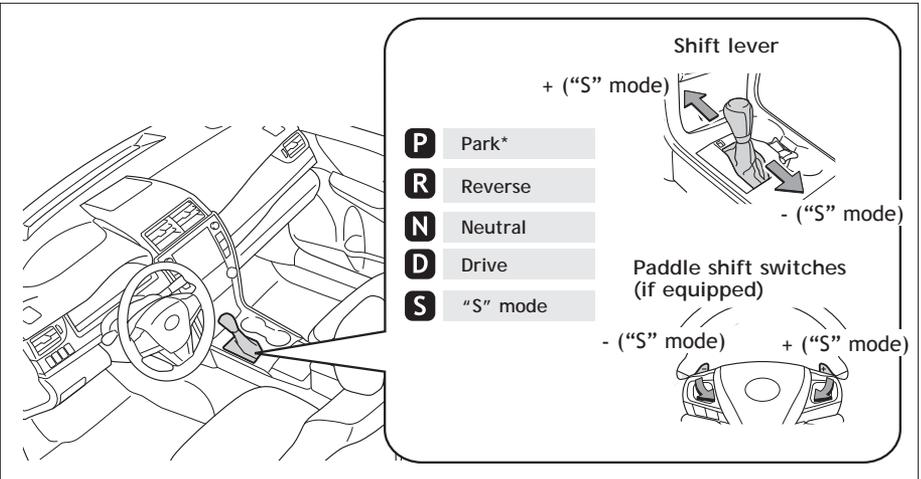

* The “ENGINE START STOP”/ignition switch must be “ON” and the brake pedal depressed to shift from Park.

“S” (Sequential) mode

Shift the shift lever to “S” position from “D” position.

- +: Upshifting
- : Downshifting


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Steering lock release


Smart Key system



Without Smart Key system

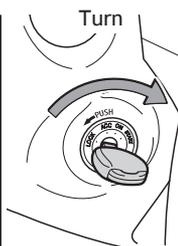


Tilt and telescopic steering wheel

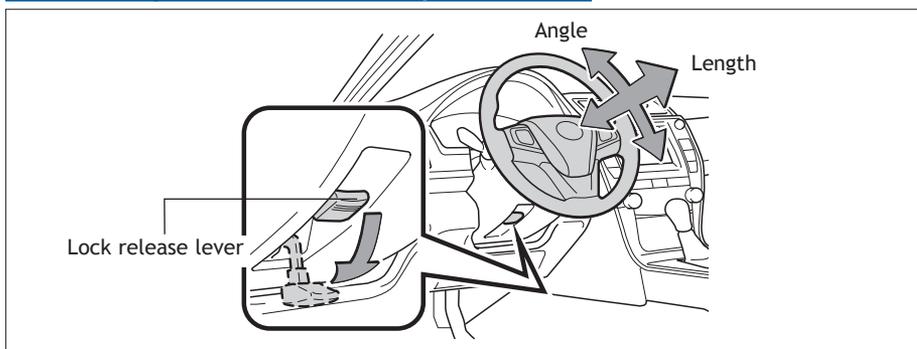

Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Parking brake

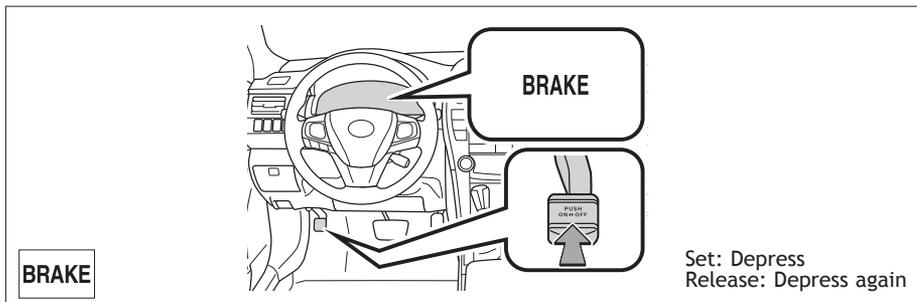

BRAKE

Set: Depress
Release: Depress again


Windows-Power

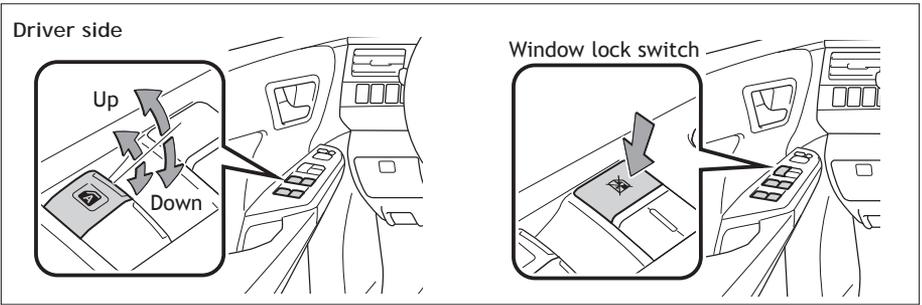

Automatic operation (driver's and passenger's side) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Moon roof (if equipped)

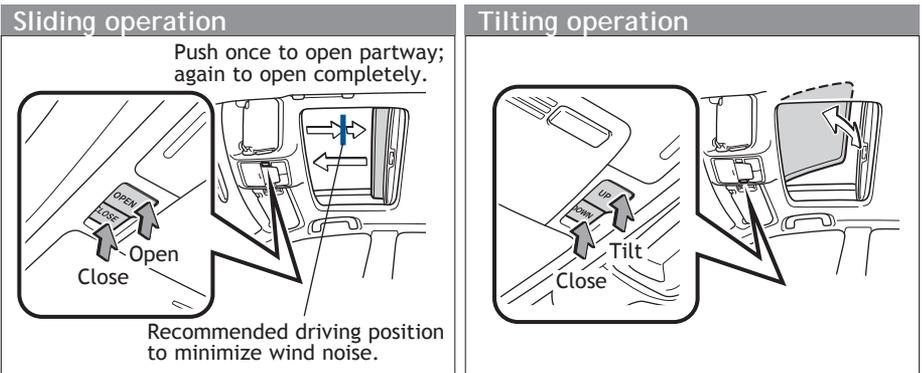


Push once to open; moon roof will automatically stop at the recommended position. Push again to open completely.

Seats-Head restraints

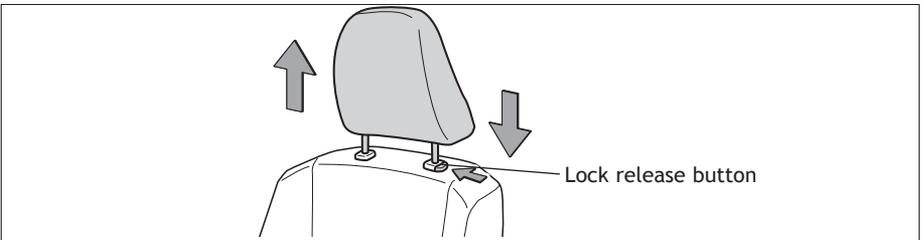

Seat adjustments-Front


Power seat*

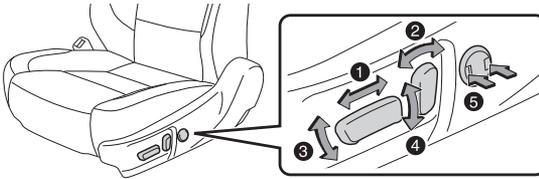

- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Height crank (driver side only)
- ④ Seat position, cushion angle (driver side only) and height (driver side only)
- ⑤ Lumbar support (driver side only)

* Power passenger seat equipped on some models, see Owner's Manual for more details.


Seat adjustments-Rear

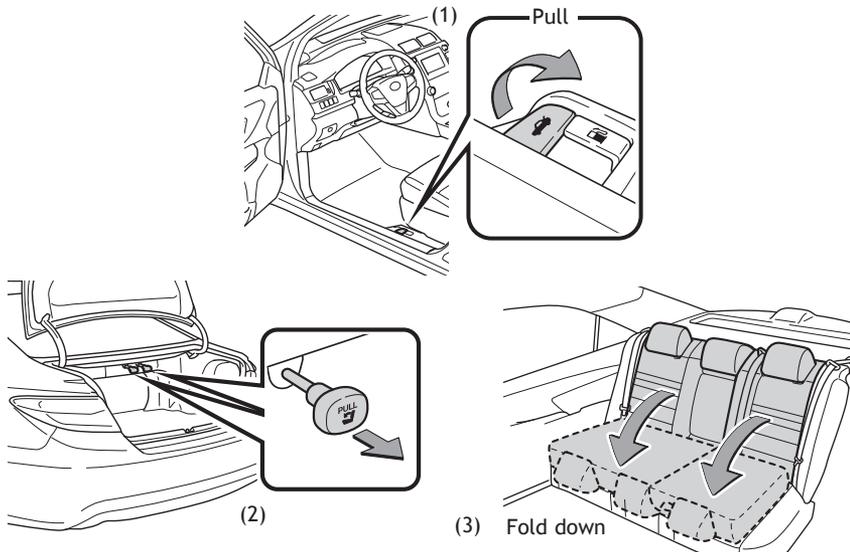

Tip: To fold rear seats, the release button is located in the trunk.

Refer to the *Owner's Manual* for more details.

Windshield wipers & washers

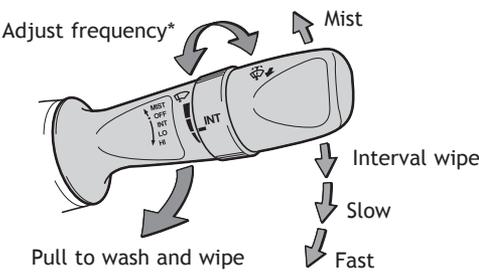

Adjust frequency* (rotational arrow)

Mist (spray icon)

Interval wipe (downward arrow)

Slow (downward arrow)


Fast (downward arrow)

Pull to wash and wipe (pulling arrow)


* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

Power outlets-12V DC

Front console

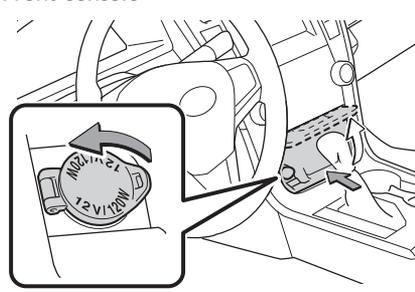


Center console

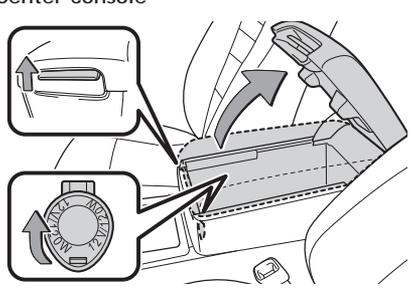

The “ENGINE START STOP” switch/ignition switch must be in the “ACC” or “ON” position for use.


Lights & turn signals

Headlights

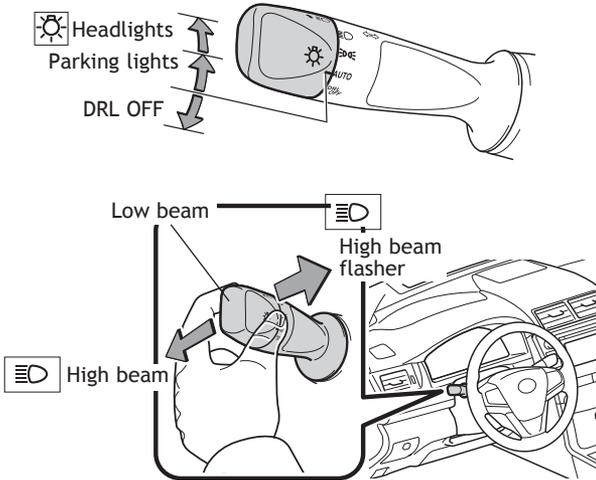

- Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.
- Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.


Turn signals

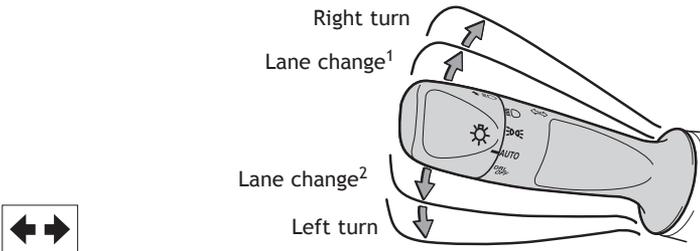

¹ The right hand signals will flash three times.

² The left hand signals will flash three times.

Garage door opener (HomeLink®)* (if equipped)

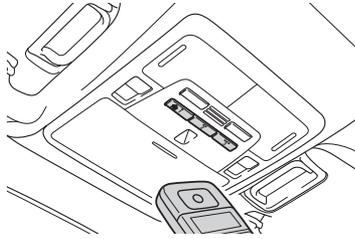

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 6-4 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Gentex Corporation.

Cruise control (if equipped)

Turning system ON/OFF	Functions
<p>Indicator</p> <p>SET 60 MPH</p> <p>System ON/OFF</p>	<p>Resume²/Increase speed</p> <p>Cancel¹</p> <p>Set/Decrease speed</p> <p>SET</p>


¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic radar cruise control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic radar cruise control."

Switch to fixed speed mode

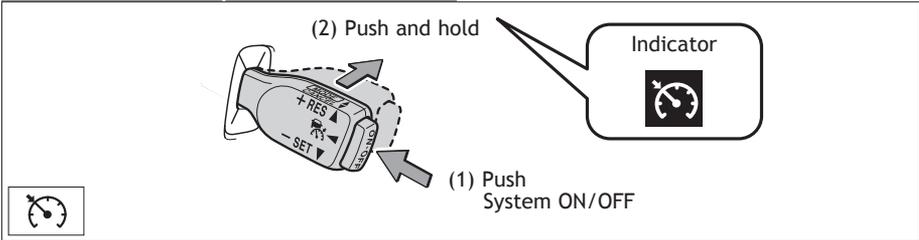

To set, cancel and resume a speed Refer to "Summary of Functions" in the *Cruise Control* section, and to the *Owner's Manual* for more details.


Distance control mode

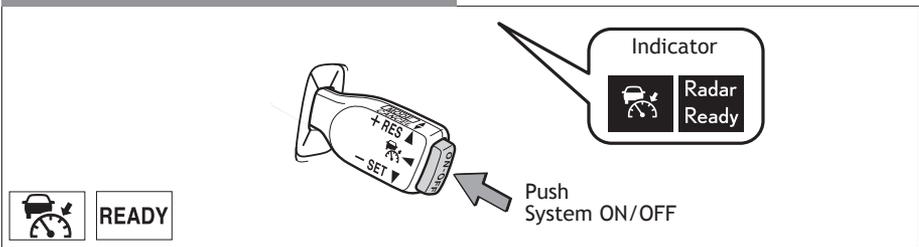

The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.


To set, cancel and resume a speed Refer to "Summary of Functions" in the *Cruise Control* section, and your *Owner's Manual* for more details.

NOTE: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

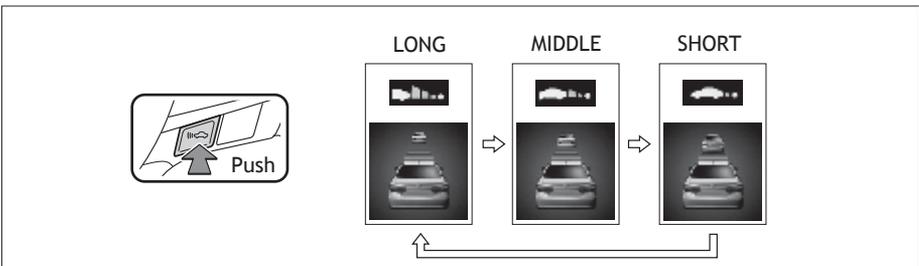

To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Blind Spot Monitor (BSM)(if equipped)

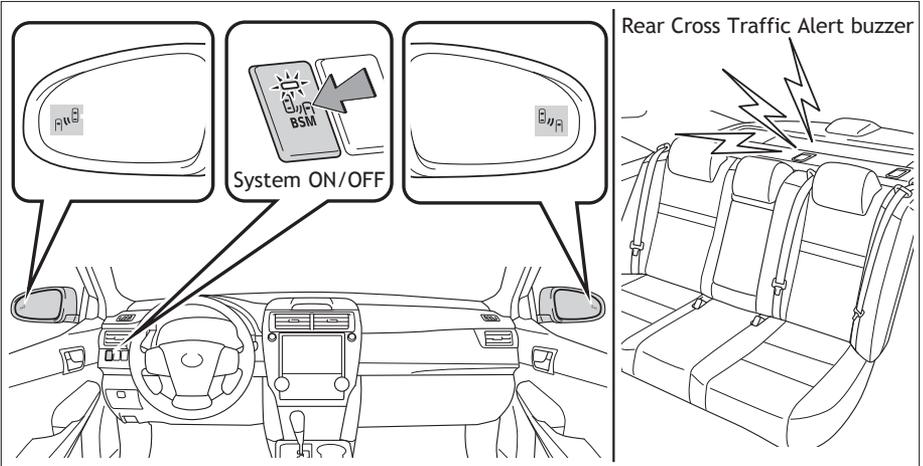


The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in decision-making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The Blind Spot Monitor function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicles existence via the outside rear view mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Rear view monitor system

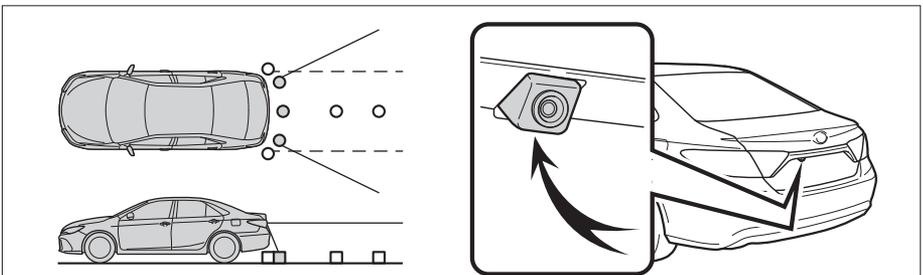


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the “SETUP” button and select “Display” on the “Setup” screen. Select “Camera” to adjust the screen contrast and brightness.

Refer to the *Owner's Manual* for more details on this system.

Clock

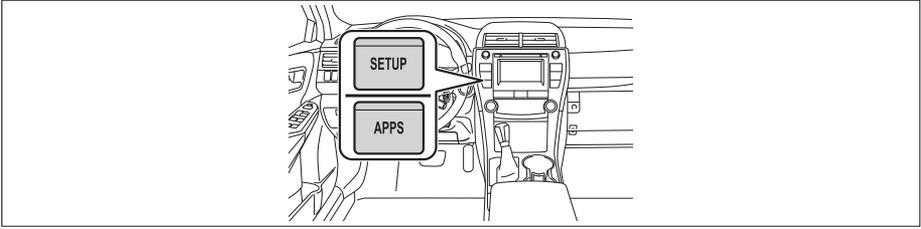

To find your system, refer to page 22 of this guide,

For Entune™ Audio


Push “SETUP” button next to the screen
then select “General” in the touch screen to access clock setting.

For Entune™ Audio Plus and Entune™ Premium Audio

Push “APPS” button next to the screen
then select “General” in the touch screen to access clock setting.

Air Conditioning/Heating


Automatic Air Conditioning*

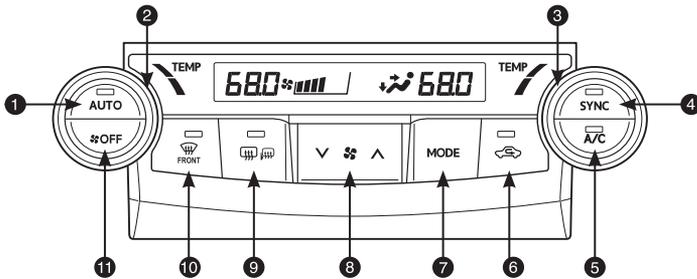

- 1 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2 Temperature selector (driver side)
- 3 Temperature selector (passenger side)
- 4 “SYNC” button
Indicator ON: Synchronized temperature settings for driver and passengers.
Indicator OFF: Separate temperature settings for driver and passengers.
- 5 Air Conditioning ON/OFF
- 6 Recirculate cabin air (outside air when OFF)
- 7 Airflow vent mode
In “” or “” mode, use outside air (“” indicator OFF) to reduce window fogging.
- 8 Fan speed
- 9 Outside rearview mirror/Rear defogger
- 10 Windshield airflow/defogger
- 11 Climate control OFF

*if equipped


Manual Air Conditioning*

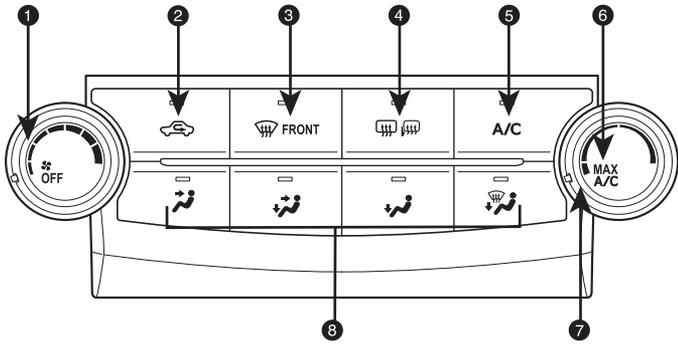



- ❶ Fan speed
- ❷ Recirculate cabin air (outside air when OFF)
- ❸ Windshield airflow/defogger
- ❹ Outside rearview mirror defoggers/Rear defogger
- ❺ Air Conditioning ON/OFF
Use outside air to quickly cool interior, then change to recirculate for cooler air.
- ❻ Select for maximum cooling. Air intake will automatically be set to recirculate. It is not possible to change intake to outside, or to turn A/C OFF in this mode.
- ❼ Temperature selector
- ❽ Airflow vent
In “❸” mode, use outside air (“❷” indicator OFF) to reduce window fogging. “❹” mode uses outside air only.

*if equipped


Seat heaters (if equipped)

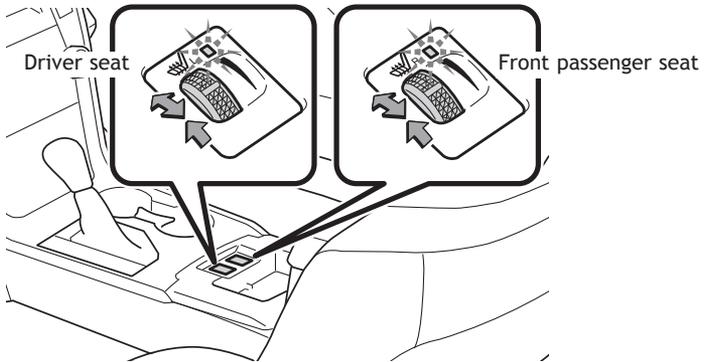

Steering wheel switches and telephone controls (Bluetooth®)

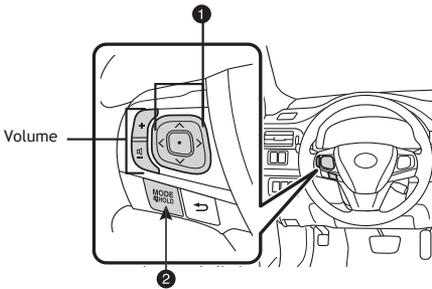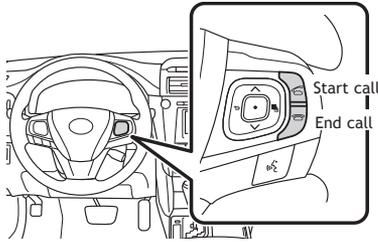

- 1 "▲ ▼" Use to search within the selected audio medium (radio, CD, etc.).
- 2 "MODE" Push to turn audio ON and select an audio mode. Push and hold to turn the audio OFF.

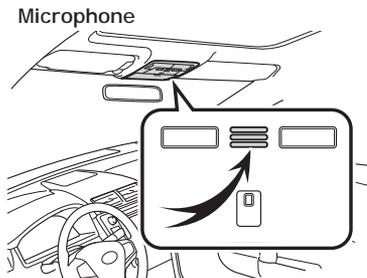


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to "Bluetooth® audio/phone," Section 5-7,8 in the *Owner's Manual*, for more information about phone connections and compatibility.


Refer to "Bluetooth® device pairing section" at the end of this booklet, to connect your smart phone to the Entune™ touch screen system.

Audio


Type 1 - Entune™ Audio

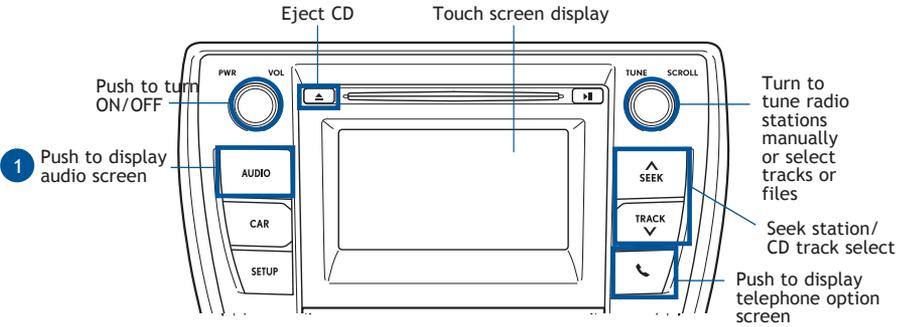

Type 2 - Entune™ Audio Plus with Connected Navigation App Suite

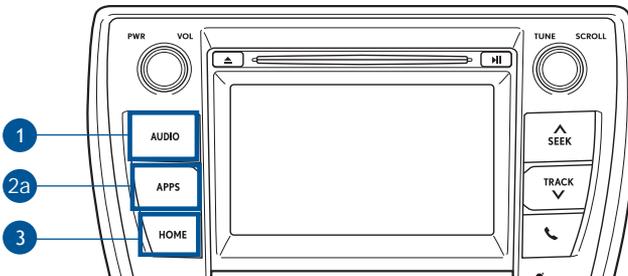

Type 3 - Entune™ Premium (JBL®) Audio with Integrated Navigation and App Suite
Some XLE and XSE models may be equipped with the JBL upgrade in this unit.

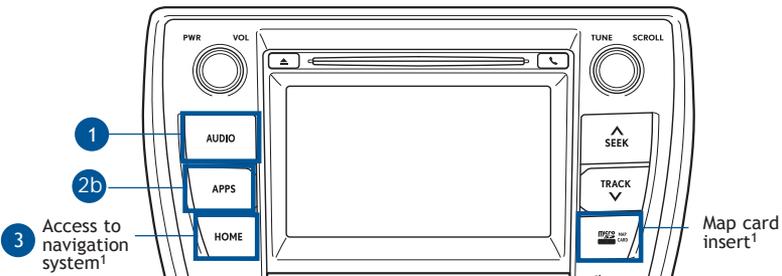


¹ Refer to the "Navigation System Owner's Manual" and "2016 Entune™ Audio Quick Reference Guide."

- 1 AUDIO Button
Access to audio functions.
- 2a APPS Button
Access to traffic and weather
- 2b APPS Button
Access to Entune® App Suite, sports, stocks, news, traffic and weather

- 3 HOME Button
Access to Home screen.

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.


USB/AUX port

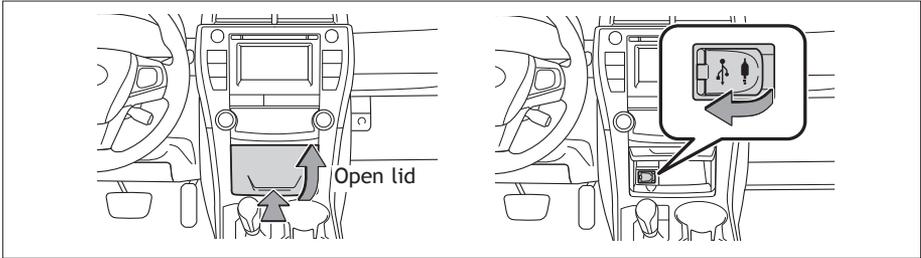

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


Wireless Charging (if equipped)

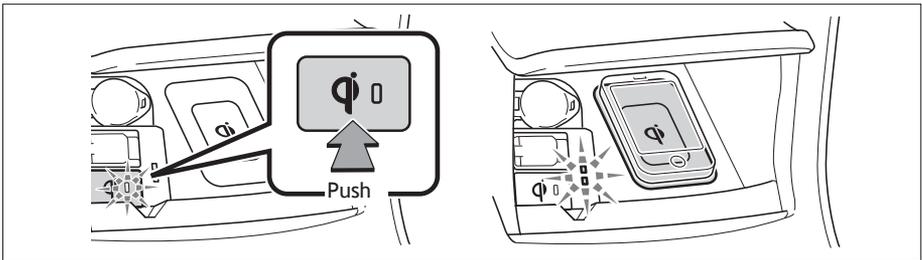


A mobile device can be charged wirelessly on the tray. Open the lid and press the wireless charger switch. Place a mobile device on the tray as shown in the illustration. An amber indicator is illuminated while charging is in progress. When charging is complete, a green indicator will also be illuminated. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Bottle holders/Cup holders

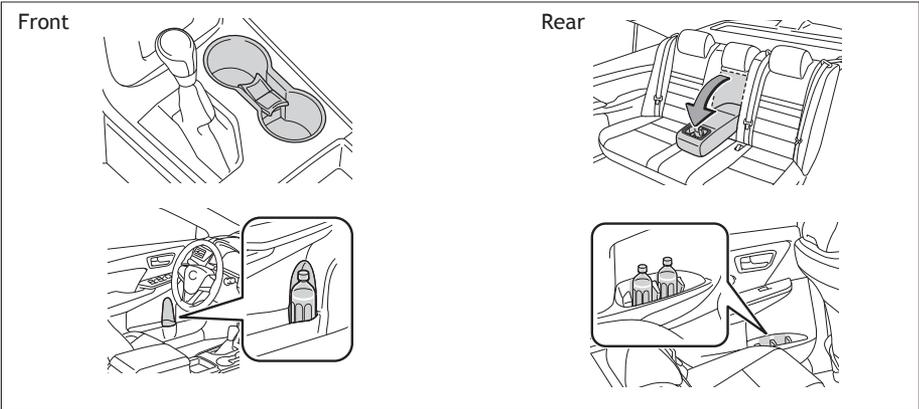

Multi-Information display

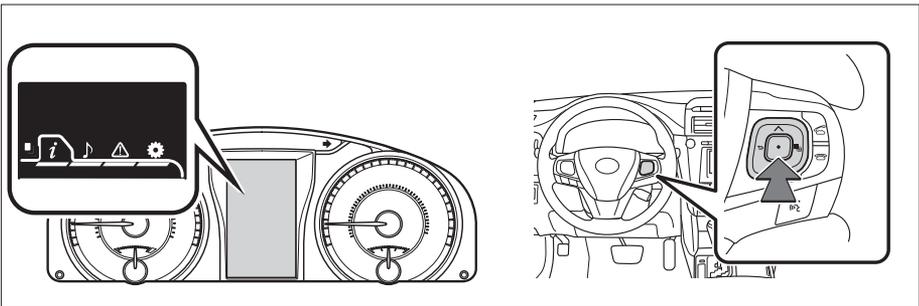


Push “meter control switches” to change information in the following:

- (1) Drive information
- (2) Navigation system linked display
- (3) Audio system linked display
- (4) Dynamic radar cruise control*
- (5) LDA (Lane Departure Alert) status*
- (6) Warning messages
- (7) Settings display
- (8) Tire pressure monitoring (warning) system*

* If equipped


Pre-Collision System (PCS) (if equipped)

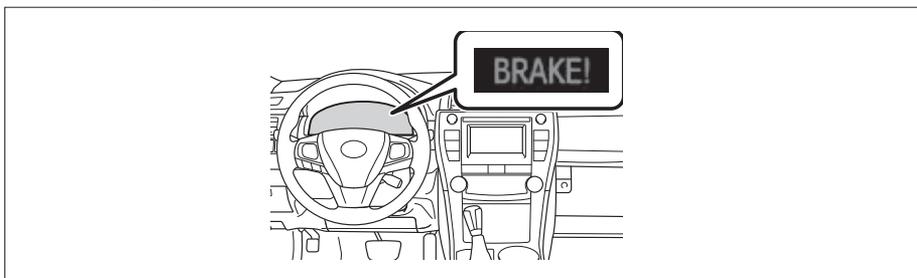

When a high possibility of a frontal collision is detected by the radar sensor, a buzzer sounds and a message urging the driver to take evasive action appears on the multi-information display. If the driver then applies brakes, the system applies greater brake force in relation to how strongly the brake pedal is depressed. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Lane Departure Alert (LDA) (if equipped)

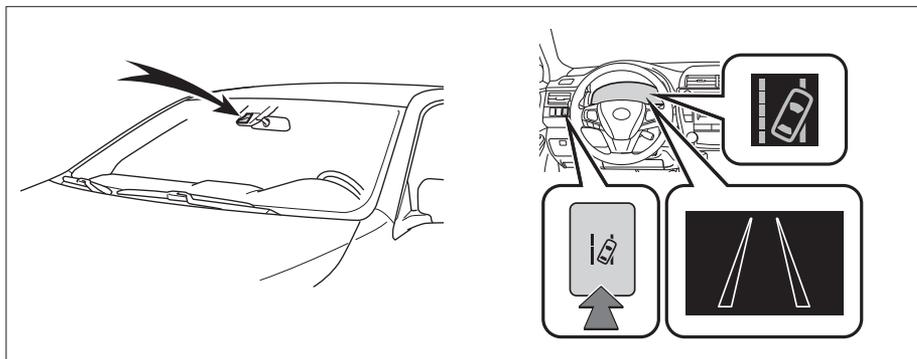


The Lane Departure Alert recognizes the visible lane markers using a camera as a sensor and alerts the driver with beeping and flashing indicators when the vehicle deviates from its lane. Press the LDA switch to activate the system.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

SAFETY AND EMERGENCY FEATURES

Door locks

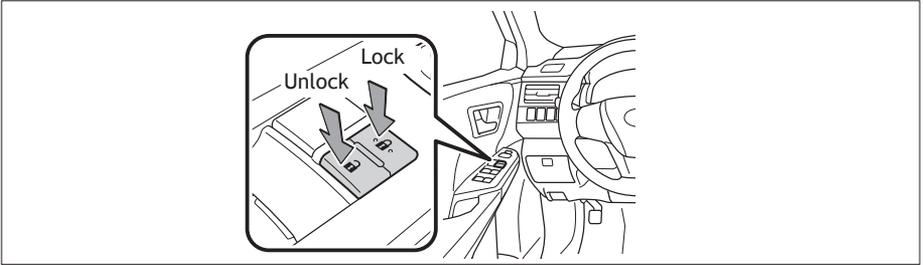


Doors-Child safety locks



Moving the lever to downward will allow the door to be opened only from the outside.


Seat belts

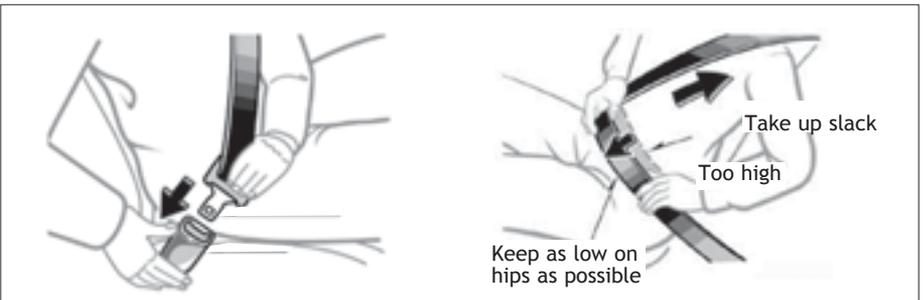


NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

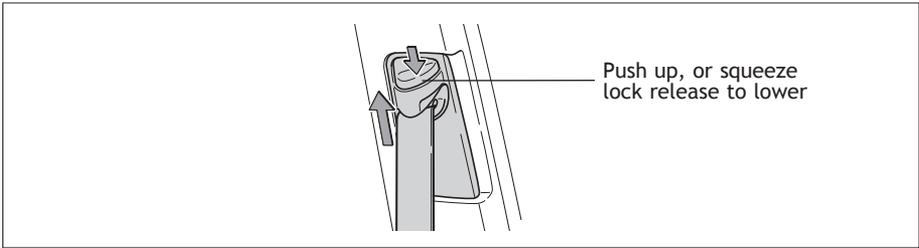


Safety Connect (if equipped)

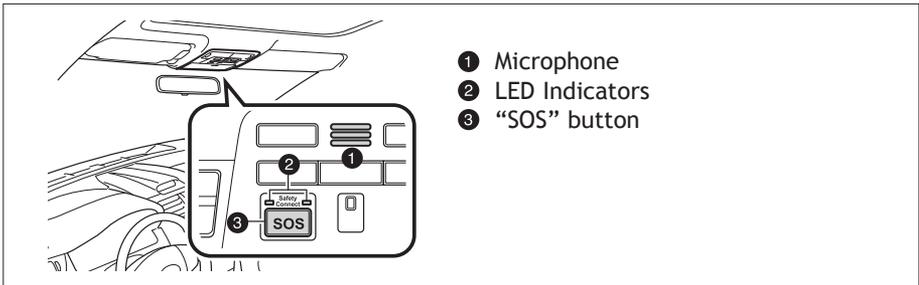

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Toyota's designated response center, which operates 24 hours per day, 7 days per week. Services for subscribers include: Automatic collision notification, Stolen vehicle location, Emergency assistance button and Enhanced roadside assistance


Contact your dealer for more information about Safety Connect.

Trunk-Internal release

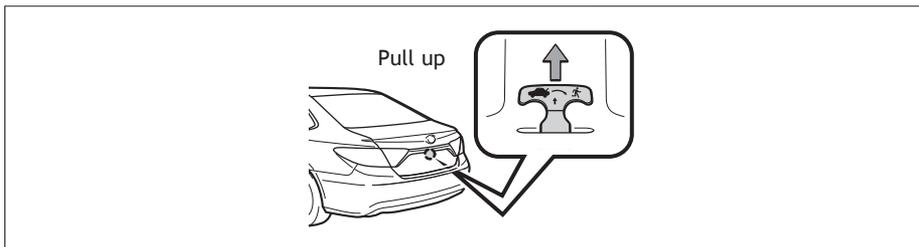

Spare tire & tools


Tool location

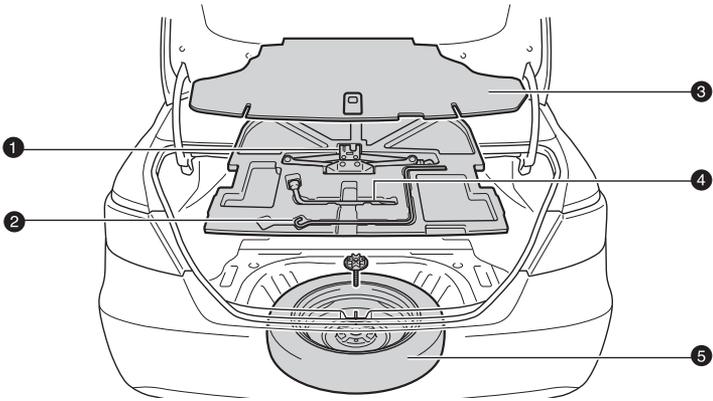


- ① Jack
- ② Jack handle
- ③ Luggage floor cover
- ④ Wheel nut wrench
- ⑤ Spare tire

Removing the spare tire

(1) Remove the tool tray.

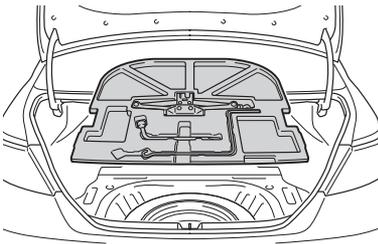

(2) Loosen the center fastener that secures the spare tire.

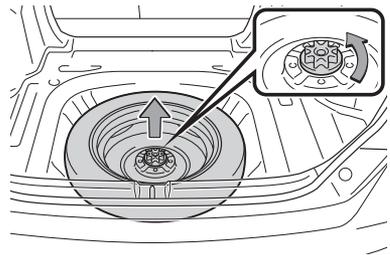

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SAFETY AND EMERGENCY FEATURES

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.


SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

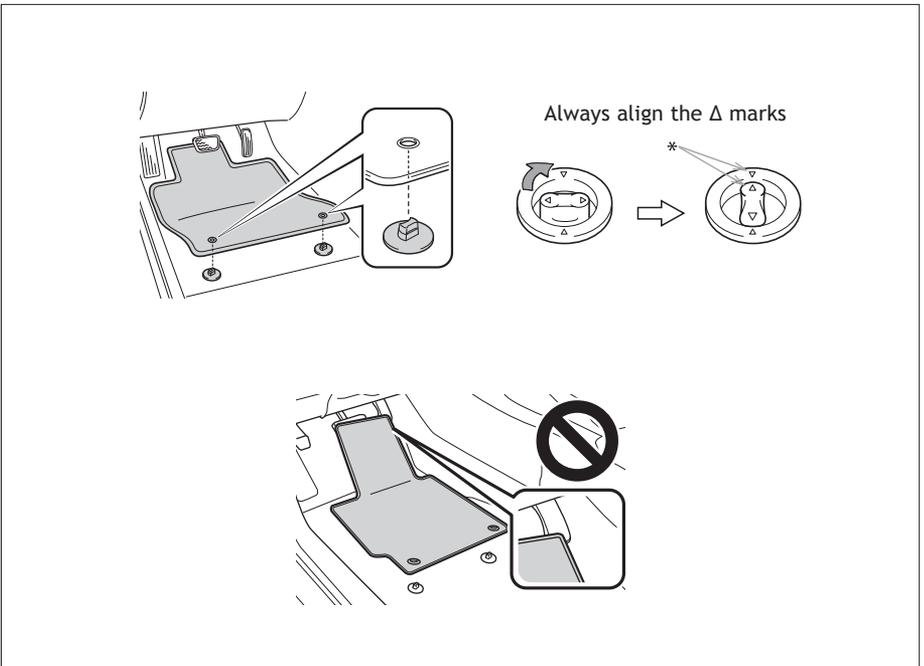

BLUETOOTH® DEVICE PAIRING SECTION


BLUETOOTH® DEVICE PAIRING

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹

Bluetooth® Pairing for Android® phone and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

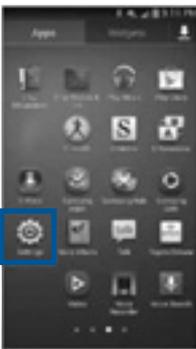

STEP 1

From your APPS SCREEN, select SETTINGS

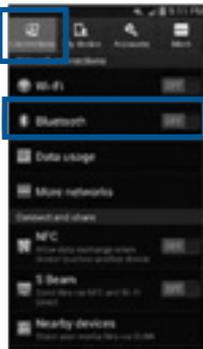


STEP 2

Select CONNECTIONS and select BLUETOOTH



STEP 3


Ensure BLUETOOTH is ON

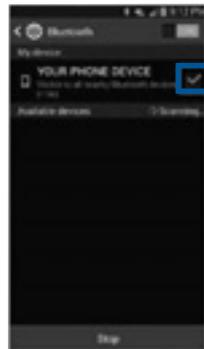

STEP 4

Select YOUR PHONE DEVICE to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.

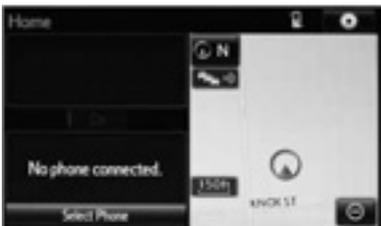

STEP 5


While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

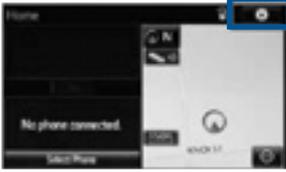


STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.




STEP 7

Select BLUETOOTH

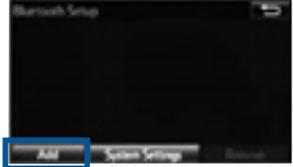

STEP 8

Select ADD, to add your phone device

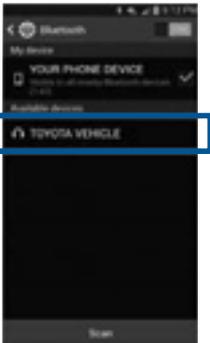

STEP 9


Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.

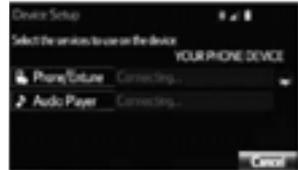


STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING


Initiate Bluetooth® on your Entune™ Multimedia Head Unit

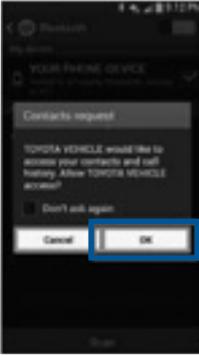

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota

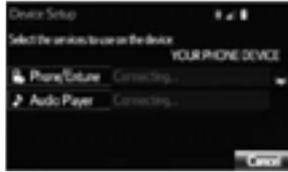

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the HOME SCREEN, select SETTINGS

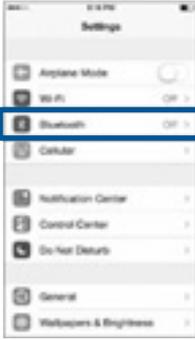


STEP 2

Select BLUETOOTH




STEP 3

Ensure BLUETOOTH is ON

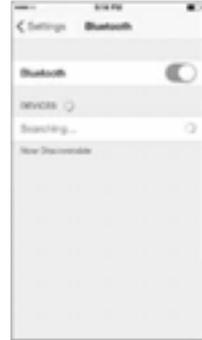

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable

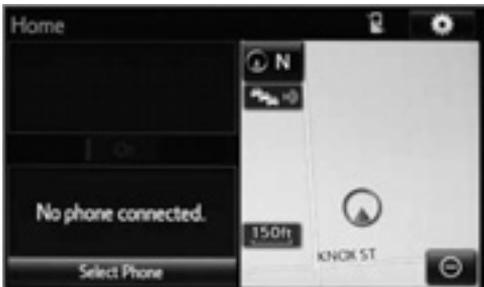

STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

Select SETUP BUTTON on the Home Screen.



STEP 7

Select BLUETOOTH

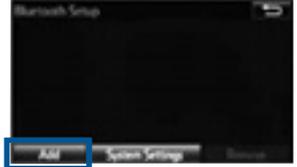

STEP 8

Select ADD, to add your phone device



STEP 9


Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.




STEP 10

Your smartphone is now paired with Entune.

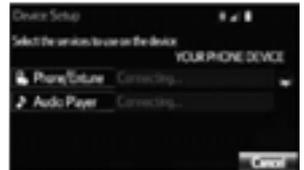

STEP 11


Once paired, Entune will attempt to connect audio and contacts on your phone.

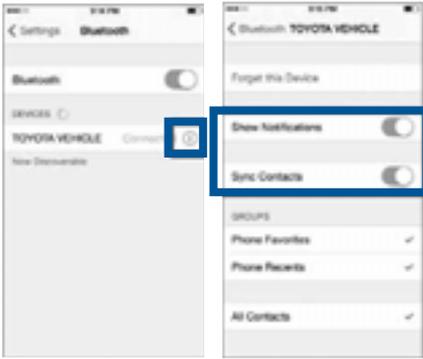

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.

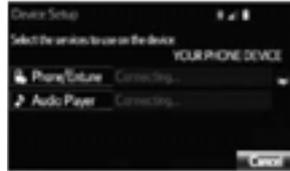

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:

www.toyota.com/connect

Your Toyota Owner's Manual

Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®



STEP 1

From your APP LIST, select SETTINGS



STEP 2

Select BLUETOOTH




STEP 3

Ensure BLUETOOTH is ON



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable

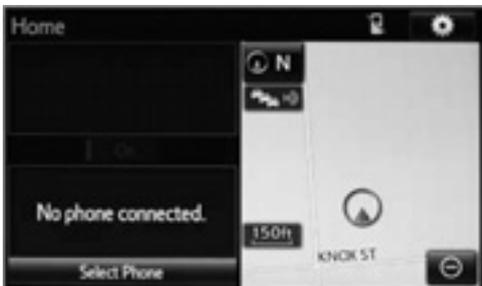


STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

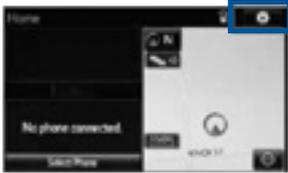


STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP** BUTTON on the Home Screen.



STEP 7

Select **BLUETOOTH**

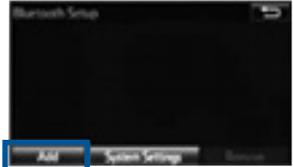

STEP 8

Select **ADD**, to add your phone device



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.

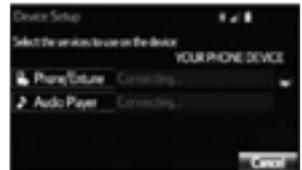

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.


BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts

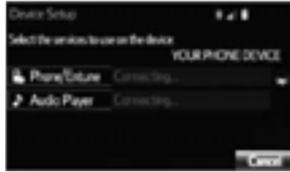

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

NOTES

NOTES



CUSTOMER EXPERIENCE CENTER
1-800-331-4331