

CAMRY HYBRID

2 0 1 6



QUICK REFERENCE GUIDE

# 2016 Camry Hybrid

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Camry Hybrid.

## A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Camry Hybrid operations. Every Camry Hybrid owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	9
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1,2</sup></b>	<b>6</b>
Light control-Instrument panel	8
<b>Smart Key system<sup>1,2</sup></b>	<b>7</b>

## FEATURES/OPERATIONS

Air Conditioning/Heating	20
Audio	23
<b>Auto lock/unlock<sup>1,2</sup></b>	<b>11</b>
<b>Bluetooth® Pairing Section</b>	<b>33-42</b>
Bottle holders/Cup holders	24
Blind Spot Monitor (BSM)	19
Clock	20
Cruise control	17
Dynamic radar cruise control	18
Garage door opener (HomeLink®) <sup>3</sup>	17
Hybrid Synergy Drive System	10
Lane Departure Alert (LDA)	26
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>16</b>

## FEATURES/OPERATIONS

Moon roof	13
<b>Multi-Information Display<sup>1</sup></b>	<b>25</b>
Parking brake	12
Power outlets-12V DC	15
Pre-Collision System (PCS)	25
Rear view monitor system	19
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat heaters	21
Seats-Head restraints	13
Steering lock release	12
Steering wheel audio controls and telephone controls (Bluetooth®)	22
Tilt and telescopic steering wheel	12
Transmission	11
USB/AUX port	21
Windows-Power	13
Windshield wipers & washers	15
Wireless Charging	24

## SAFETY AND EMERGENCY FEATURES

Door locks	27
Doors-Child safety locks	27
Floor mat installation	31
Safety Connect	28
Seat belts	27
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Star Safety System™	30-31
Trunk internal release	29

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.



<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink® is a registered trademark of Gentex Corporation.


# OVERVIEW

## Instrument panel

### Steering wheel controls

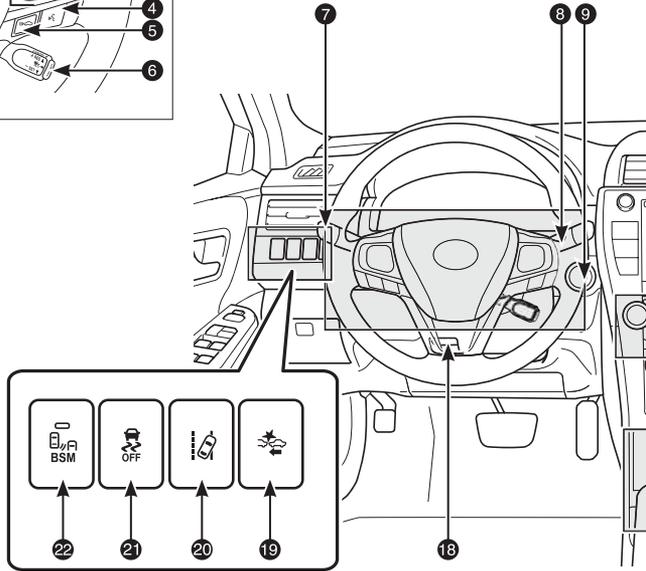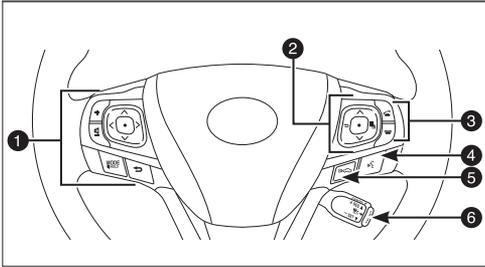

- ① Steering wheel audio controls<sup>2</sup>
- ② Meter control switches
- ③ Telephone controls<sup>2</sup>
- ④ Voice command button<sup>2</sup>
- ⑤ Vehicle-to-vehicle distance button<sup>1</sup>
- ⑥ Cruise control
- ⑦ Headlight/turn signal/front DRL (Daytime Running Light) controls
- ⑧ Wiper and washer controls
- ⑨ "ENGINE START STOP" button
- ⑩ Audio system<sup>1</sup>/Navigation system<sup>1,2</sup>
- ⑪ Emergency flasher button
- ⑫ Air conditioning/heating controls
- ⑬ Outside rear view mirror/Rear window defogger button
- ⑭ Eco drive mode switch
- ⑮ EV drive mode switch
- ⑯ Seat heater controls<sup>1</sup>

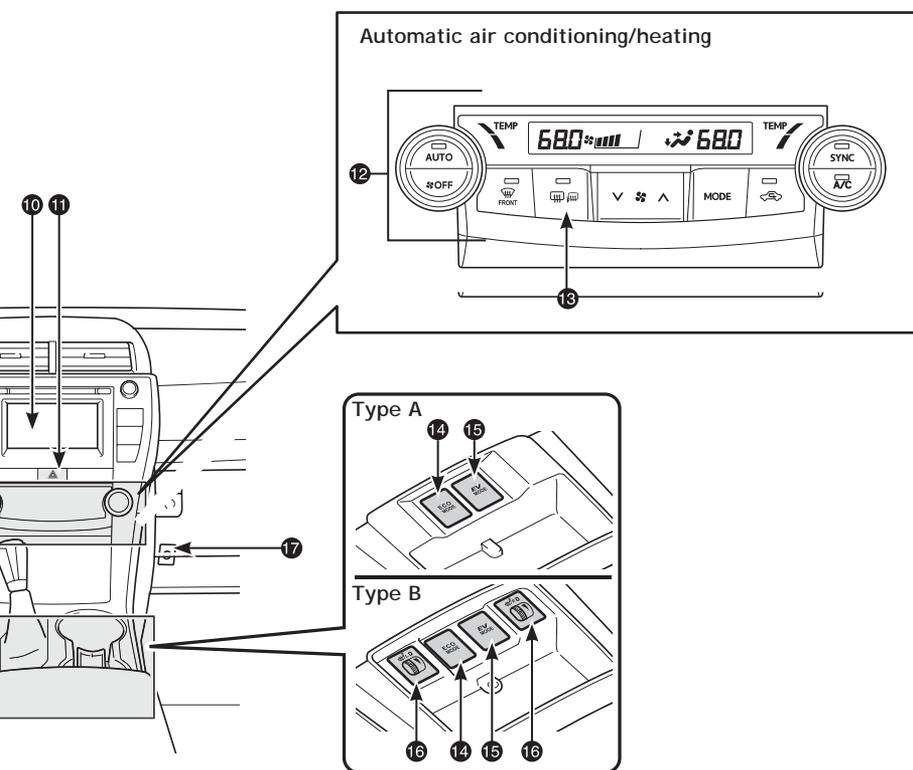


- 17 Tire pressure warning reset switch<sup>1</sup>
- 18 Tilt and telescopic steering lock release
- 19 Pre-Collision System (PCS) switch<sup>1</sup>
- 20 Lane Departure Alert (LDA) switch<sup>1</sup>
- 21 VSC OFF switch
- 22 Blind Spot Monitor (BSM) main switch<sup>1</sup>

<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the "Navigation System Owner's Manual" and "2016 Entune™ Audio Quick Reference Guide."

**Instrument cluster**

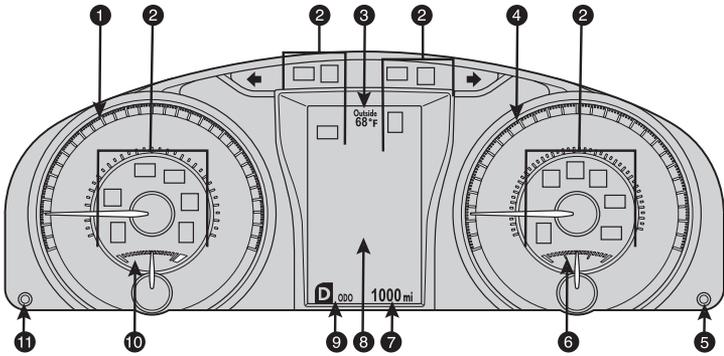

- ❶ Hybrid system indicator
- ❷ Service indicators and reminders
- ❸ Outside temperature display
- ❹ Speedometer
- ❺ Display change button
- ❻ Fuel gauge
- ❼ Odometer/trip meter display
- ❽ Multi-information display
- ❾ Shift position display
- ❿ Engine coolant temperature display
- ⓫ Instrument panel light control button

**Indicator symbols**

For details, refer to “Indicators and warning lights,” Section 2-2, 2016 Owner’s Manual.

-  Brake system warning<sup>1</sup>
-  Brake system warning
-  Driver/Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
-  Pre-collision system warning<sup>1,4</sup>
-  Electric power steering system warning<sup>1</sup>
-  Master system warning<sup>1</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If this light flashes, refer to “Cruise control,” Section 2-4, 2016 Owner’s Manual.


	Malfunction/Check Engine indicator <sup>1</sup>
	Low fuel level warning
	SRS airbag warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1,4</sup>
	"ECO MODE" indicator
	Theft deterrent/Engine immobilizer system indicator
	Headlight low/high beam indicator
	Automatic high beam indicator <sup>4</sup>
	Turn signal indicator
	Slip indicator <sup>1</sup>
	Vehicle Stability Control OFF indicator <sup>1</sup>
	"READY" indicator
	<b>SET</b> Cruise control indicator <sup>2</sup> /Cruise control SET indicator <sup>2</sup>
	Dynamic radar cruise control indicator <sup>4</sup>
	Anti-lock Brake System warning <sup>1</sup>
	Lane Departure Alert (LDA) warning <sup>4</sup>
	Passenger Air Bag ON/OFF indicator <sup>1</sup>
	EV indicator
	EV drive mode indicator
	Low outside temperature indicator
	Fuel tank door position

<sup>3</sup> Light flashes in yellow to indicate a malfunction. Light flashes quickly in green to indicate that the steering lock has not been released.

<sup>4</sup> If equipped.

## Keyless entry (if equipped)


### Locking operation

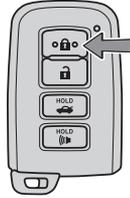

Push



### Unlocking operation

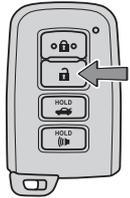


Push ONCE: Driver door  
TWICE: All doors



**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

### Trunk lid

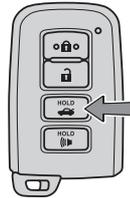

Push and hold



### Panic button




Push and hold



## Smart Key system

### Start function

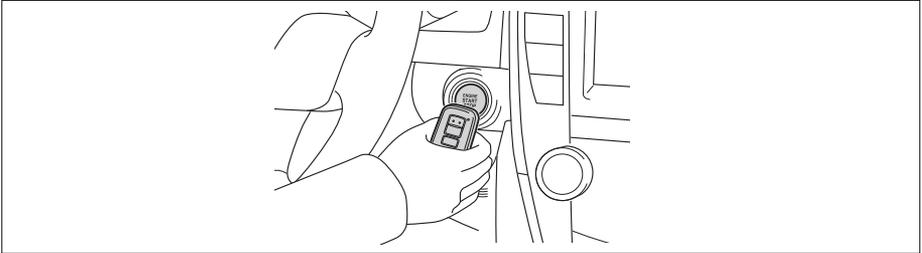

**NOTE:** Gear shift lever must be in Park and brake pedal depressed.

### Power (without starting engine)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

**ACC**

Accessories such as the radio will operate.

**ON**


Power ON; the engine not running.

**OFF**

All systems OFF.

### Locking operation


#### Front door lock

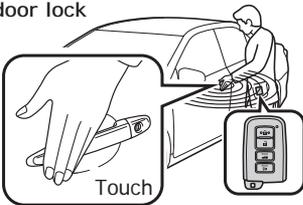

Carry remote to lock


### Unlocking operation

#### Front door unlock\*

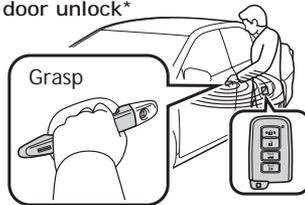

Carry remote to unlock

### Trunk lock/unlock



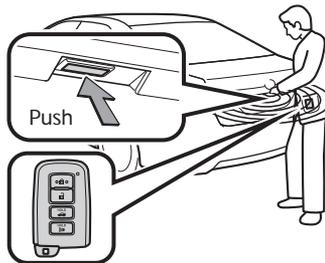


Carry remote to lock/unlock

\* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping front passenger door handle will unlock all doors.


**NOTE:** Doors may also be locked/unlocked using remote.

### Fuel tank door release and cap

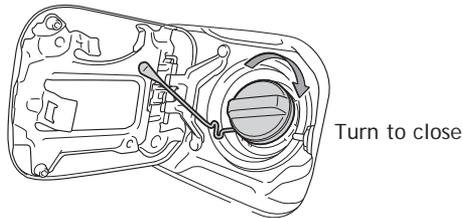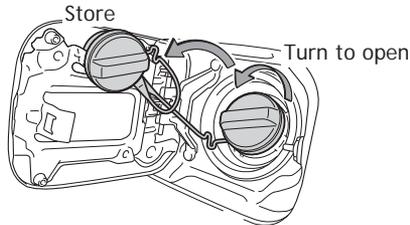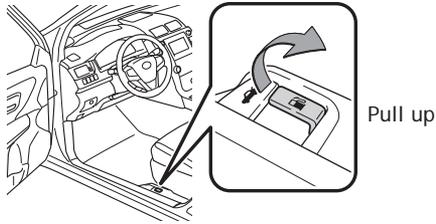


**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

### Light control-Instrument panel

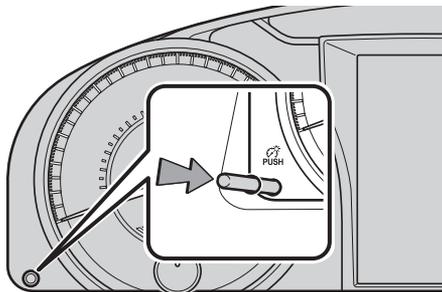


Push to control brightness

## Hood release

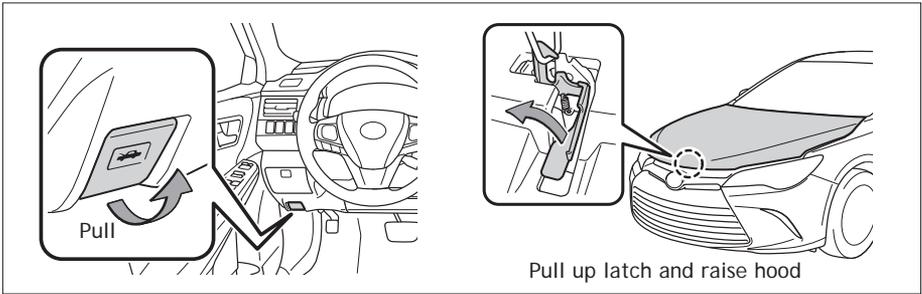

## Engine maintenance

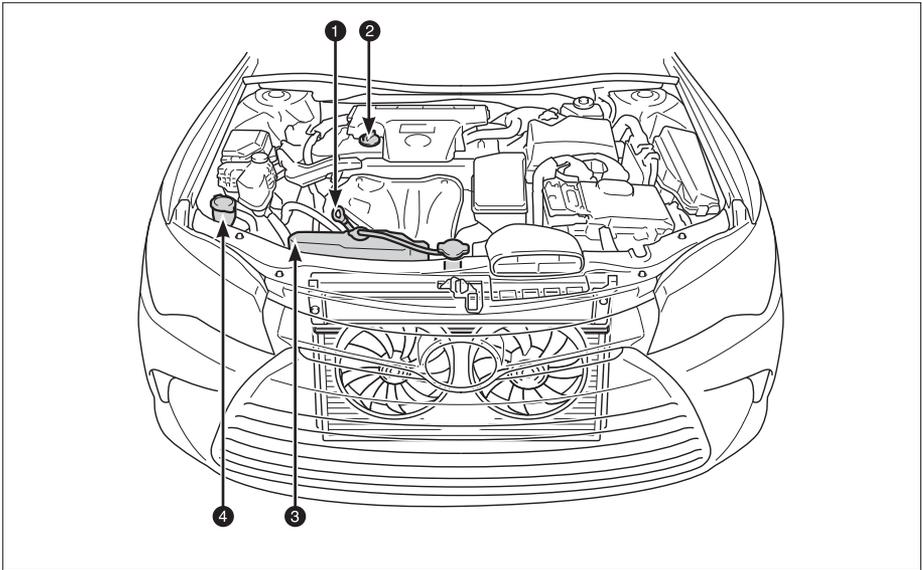

- ① Engine oil level dipstick
- ② Engine oil filler cap
- ③ Engine coolant reservoir
- ④ Windshield washer fluid tank

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

# FEATURES/OPERATIONS

## Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

**NOTE:** Fuel consumption and energy information of the Hybrid System are shown on the Multi-Information Display and/or navigation system screen (if equipped).

### Tips for improved fuel economy

1. Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
2. Link trips to reduce engine cold starts whenever possible.
3. Avoid driving at speeds that are higher than necessary, especially on the highway.
4. When possible, avoid sudden stops to maximize regenerative braking energy.
5. Minimize use of the Air Conditioning.

### Starting the Hybrid System

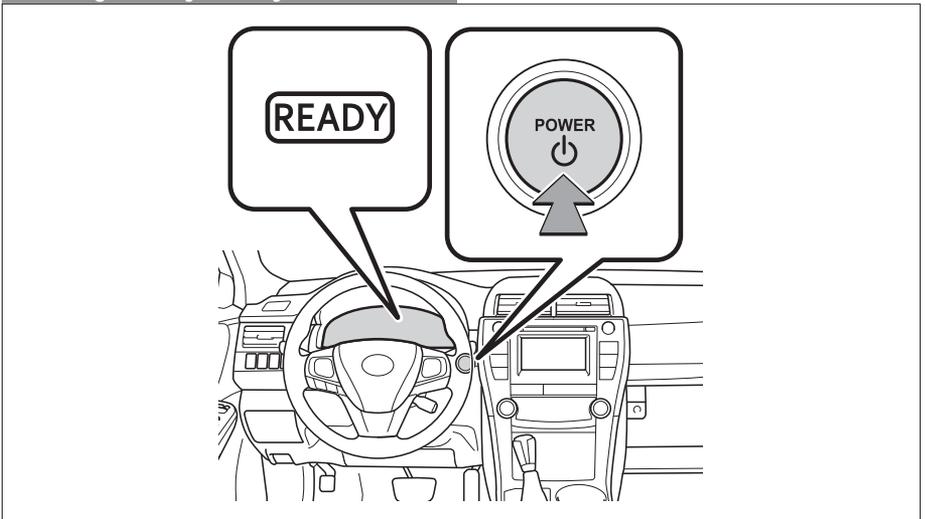

- (1) Put the selector lever in "P."
- (2) Depress the brake pedal, and "P" will be displayed on the Multi-Information Display.
- (3) Press the "POWER" switch briefly and firmly.
- (4) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


## Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.
- Doors unlock when the "ENGINE START STOP" switch is set to OFF and driver's door is opened.

Refer to the *Owner's Manual* for more details.


## Transmission

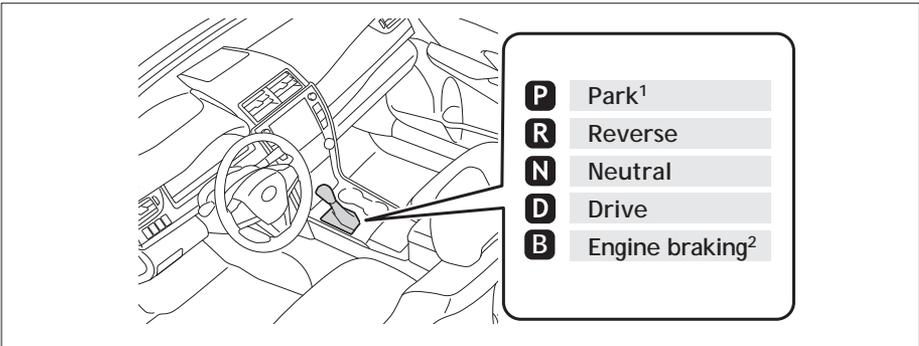


<sup>1</sup> The "POWER" switch must be set at "ON" and the brake pedal depressed to shift from Park.

<sup>2</sup> The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).

### Steering lock release

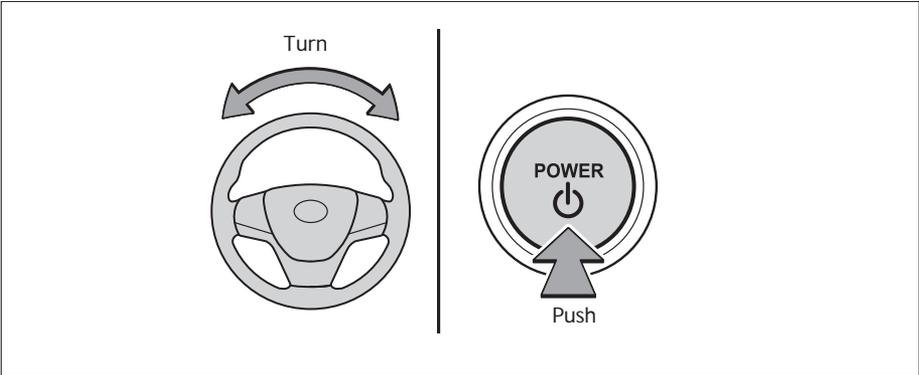


### Tilt and telescopic steering wheel

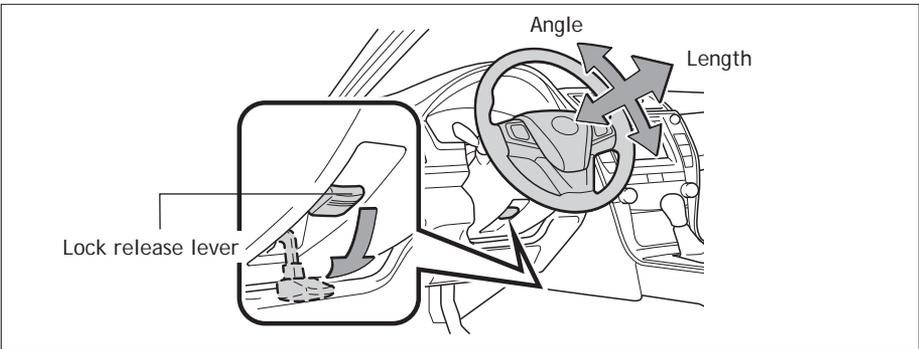





Hold wheel, push lever down, set angle and length, and return lever.  
**NOTE:** Do not attempt to adjust while the vehicle is in motion.

### Parking brake

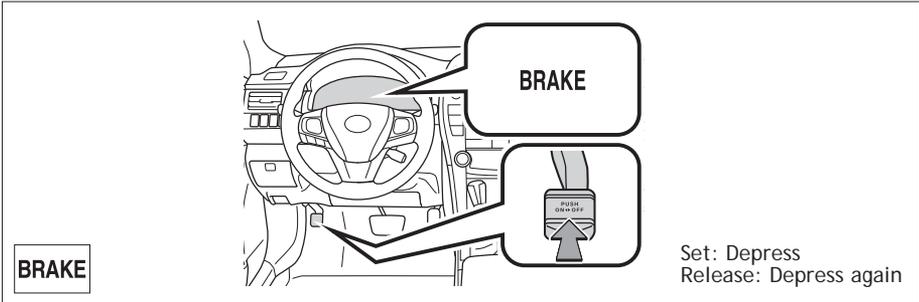

## Windows-Power

Driver side

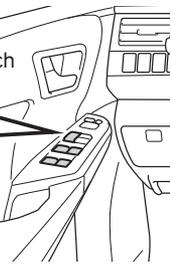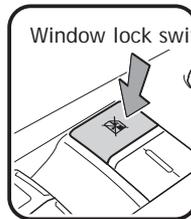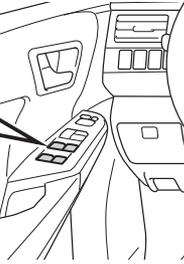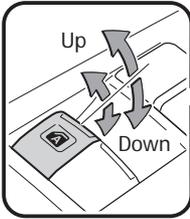



**Automatic operation (driver's and passenger's side)** Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

## Moon roof (if equipped)


Sliding operation

Push once to open partway; again to open completely.

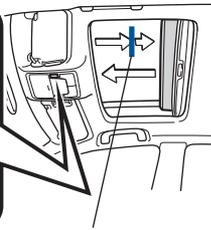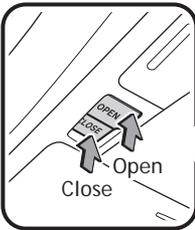


Recommended driving position to minimize wind noise.

Tilting operation

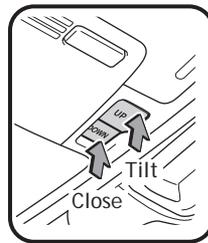


Push once to open; moon roof will automatically stop at the recommended position. Push again to open completely.

## Seats-Head restraints

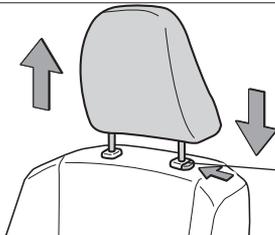

Lock release button


## Seat adjustments-Front

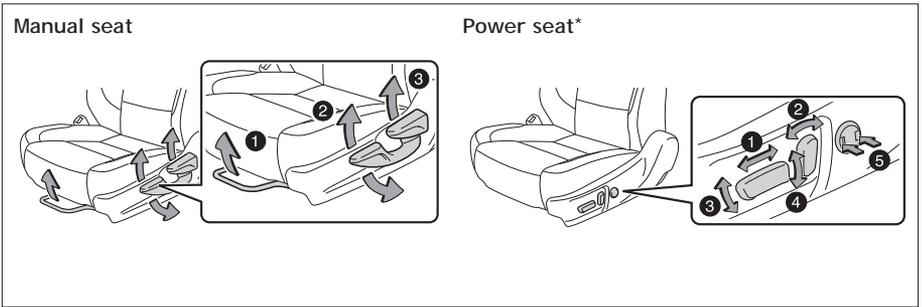

- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Height crank (driver side only)
- ④ Seat position, cushion angle (driver side only) and height (driver side only)
- ⑤ Lumbar support (driver side only)


\* Power passenger seat equipped on some models, see *Owner's Manual* for more details.

## Seat adjustments-Rear

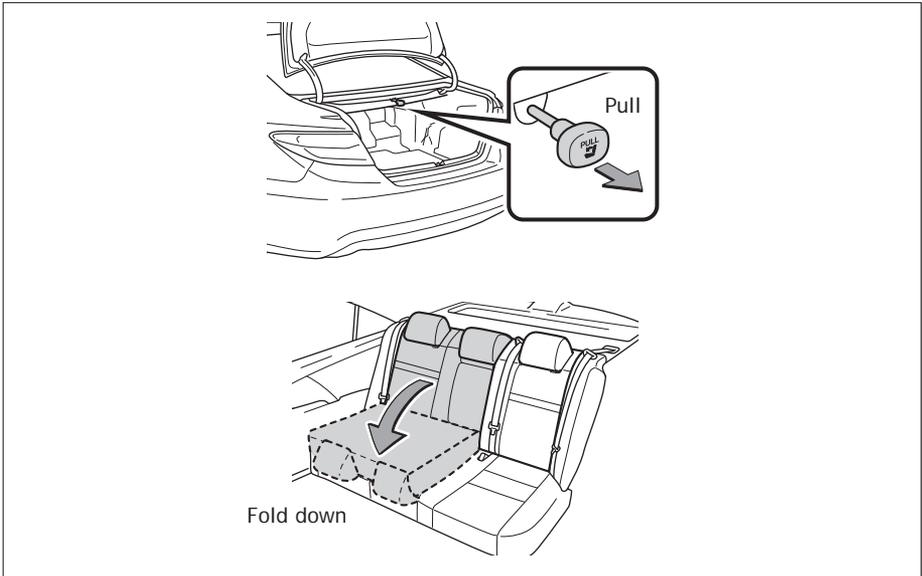

Refer to the *Owner's Manual* for more details.


## Windshield wipers & washers

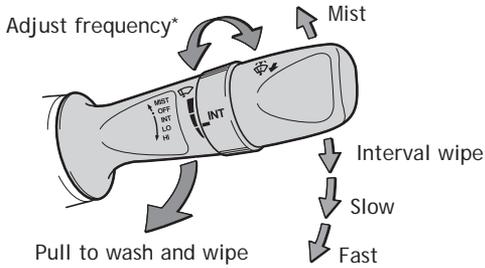


\* Intermittent windshield wiper frequency adjustment  
Rotate to increase/decrease wipe frequency.

## Power outlets-12V DC

Front console

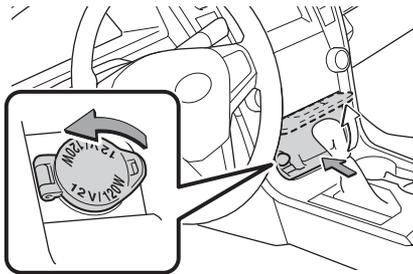


Center console

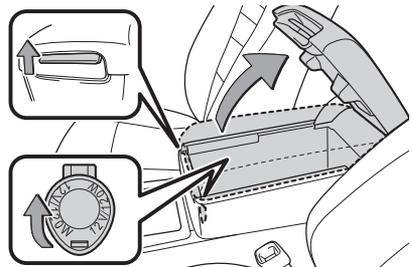

The "POWER" switch/ignition switch must be in the "ACC" or "ON" position for use.


## Lights & turn signals

### Headlights

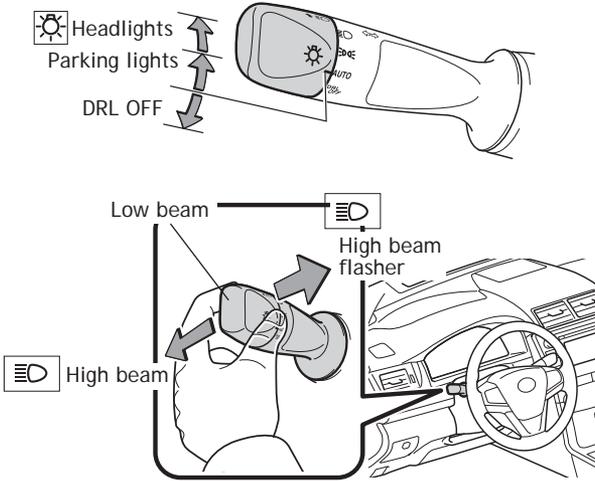


- Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.
- Automatic light cut off system Automatically turns lights off after 30-second delay, or lock switch on remote may be pushed after locking.

### Turn signals

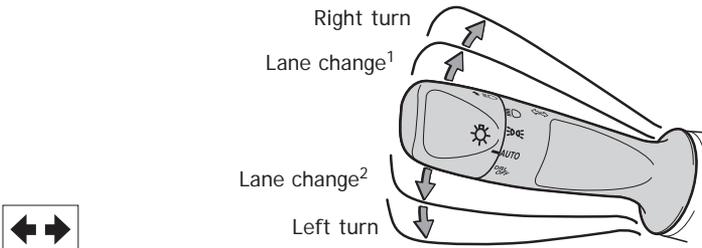

- <sup>1</sup> The right hand signals will flash three times.
- <sup>2</sup> The left hand signals will flash three times.

## Garage door opener (HomeLink®)\* (if equipped)

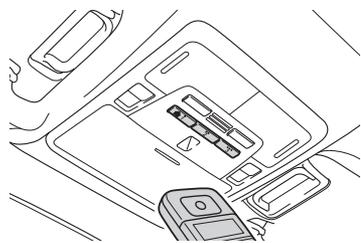

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to "Garage door opener," Section 3-5 in the *Owner's Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.


\* HomeLink® is a registered trademark of Gentex Corporation.

## Cruise control (if equipped)

### Turning system ON/OFF

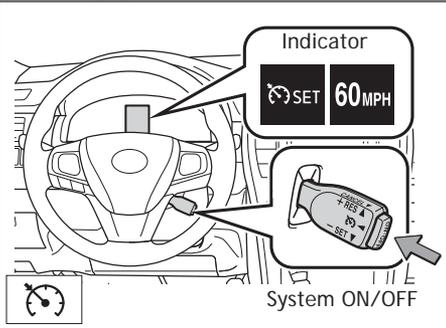

### Functions

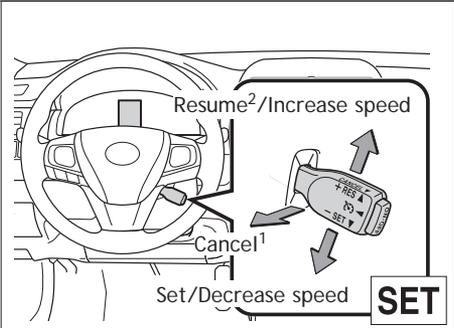


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed reaches 25 mph.

## Dynamic radar cruise control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic radar cruise control."

### Switch to fixed speed mode

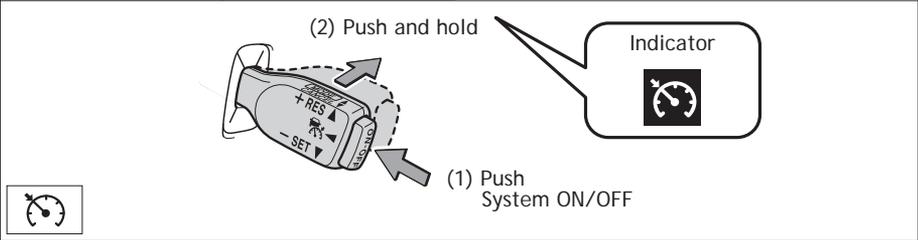

To set, cancel and resume a speed Refer to "Summary of Functions" in the *Cruise Control* section, and to the *Owner's Manual* for more details.

### Distance control mode

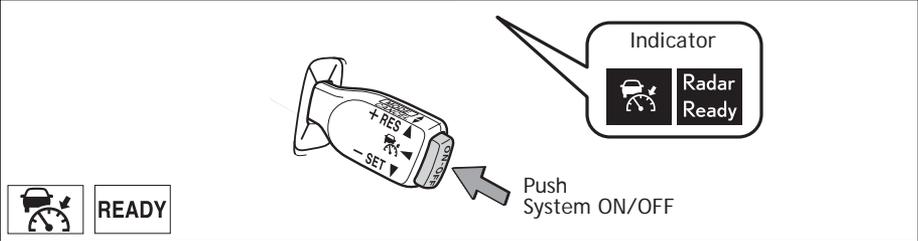


The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

To set, cancel and resume a speed Refer to "Summary of Functions" in the *Cruise Control* section, and your *Owner's Manual* for more details.


**NOTE:** Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

### Vehicle-to-vehicle distance

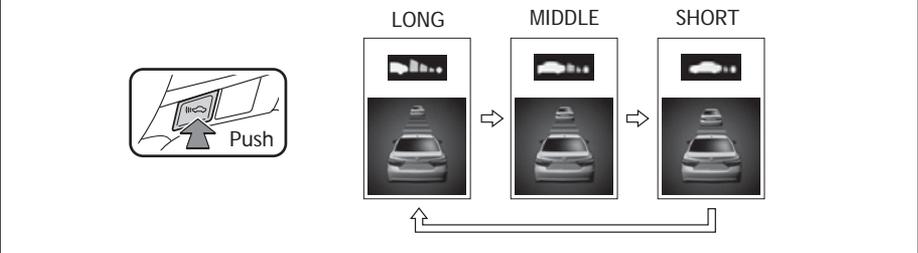

To change the vehicle-to-vehicle distance Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

## Blind Spot Monitor (BSM) (if equipped)

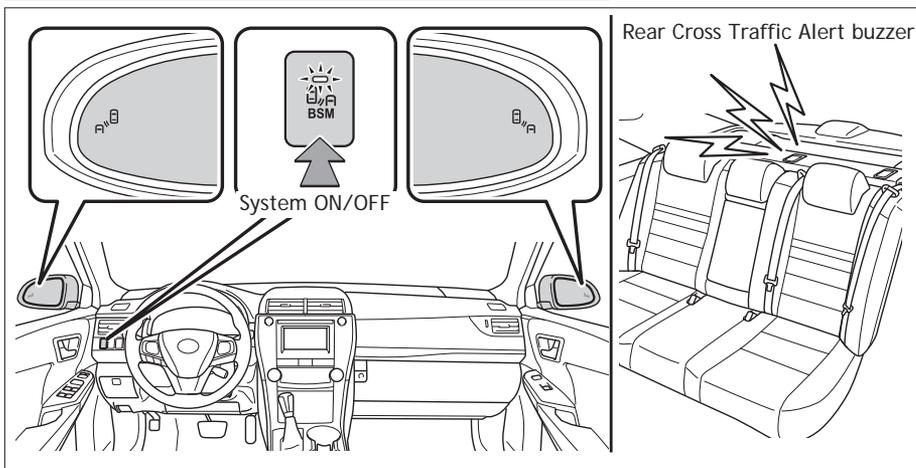


The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in decision-making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The Blind Spot Monitor function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicles existence via the outside rear view mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

## Rear view monitor system

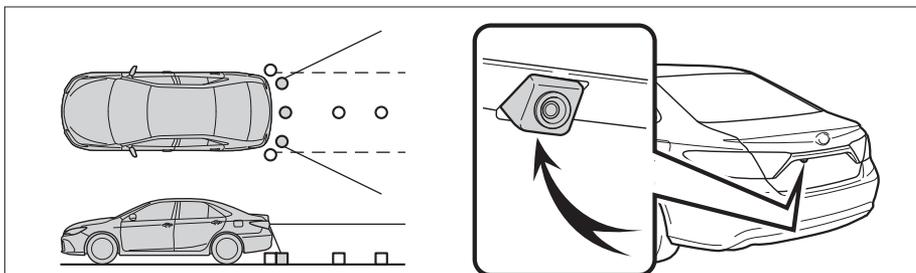


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the "SETUP" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.

Refer to the *Owner's Manual* for more details on this system.

**Clock**

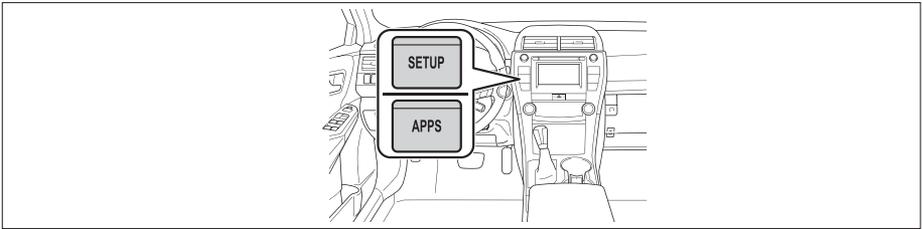

To find your system, refer to page 23 of this guide,

For Entune™ Audio


Push “SETUP” button next to the screen then select “General” in the touch screen to access clock setting.

For Entune™ Audio Plus and Entune™ Premium Audio

Push “APPS” button next to the screen then select “General” in the touch screen to access clock setting.


**Air Conditioning/Heating**

**Automatic Air Conditioning**

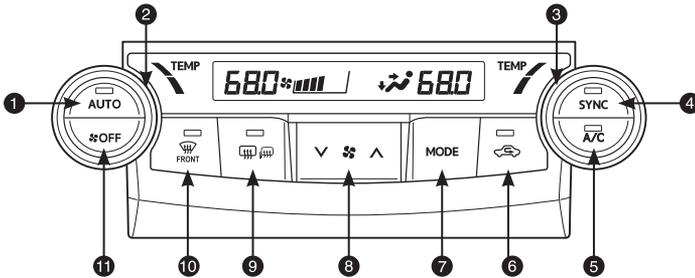


- 1 Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2 Temperature selector (driver side)
- 3 Temperature selector (passenger side)
- 4 “SYNC” button  
Indicator ON: Synchronized temperature settings for driver and passengers.  
Indicator OFF: Separate temperature settings for driver and passengers.
- 5 Air Conditioning ON/OFF
- 6 Recirculate cabin air (outside air when OFF)
- 7 Airflow vent mode  
In “” or “” mode, use outside air (“” indicator OFF) to reduce window fogging.
- 8 Fan speed
- 9 Outside rearview mirror/Rear defogger
- 10 Windshield airflow/defogger
- 11 Climate control OFF

## Seat heaters (if equipped)

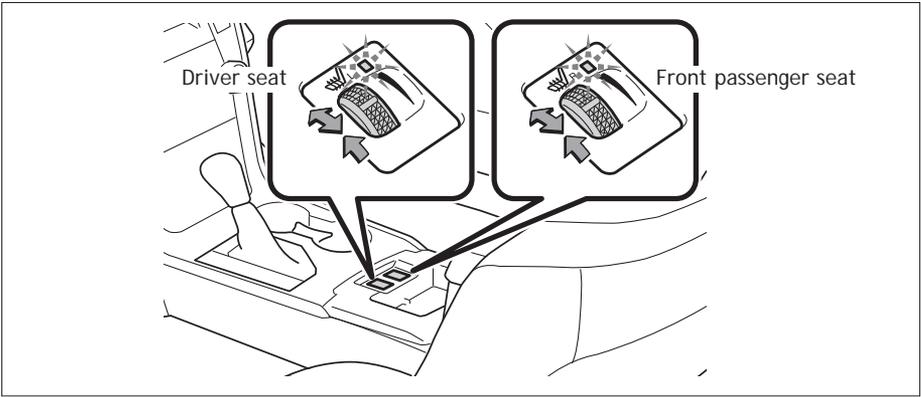



## USB/AUX port

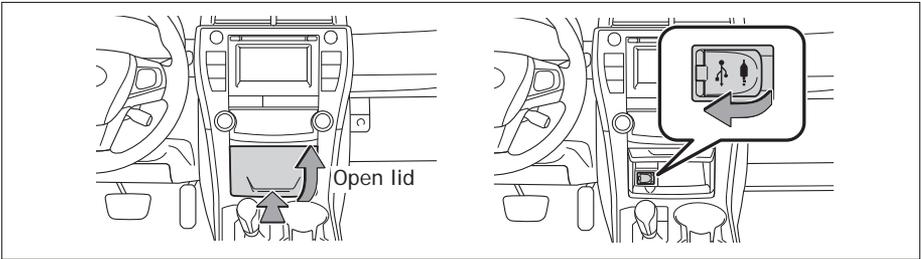


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

## Steering wheel audio controls and telephone controls (Bluetooth®)

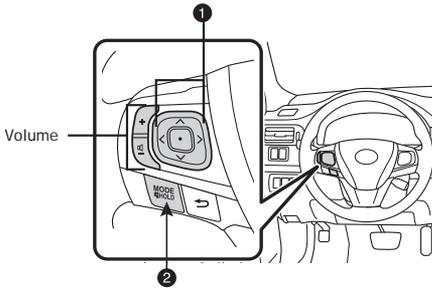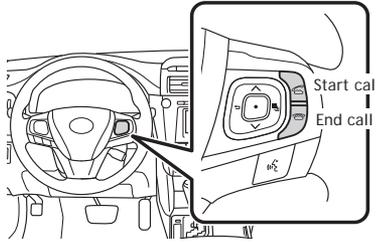

- ① "∧ V" Use to search within the selected audio medium (radio, CD, etc.).
- ② "MODE" Push to turn audio ON and select an audio mode. Push and hold to turn the audio OFF.

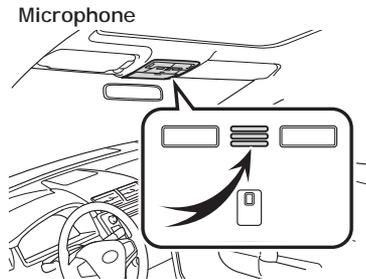


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to "Bluetooth® audio/phone," Section 5-7,8 in the *Owner's Manual*, for more information about phone connections and compatibility.


Refer to "Bluetooth® device pairing section" at the end of this booklet, to connect your smart phone to the Entune™ touch screen system.

# Audio


## Type 1 - Entune™ Audio

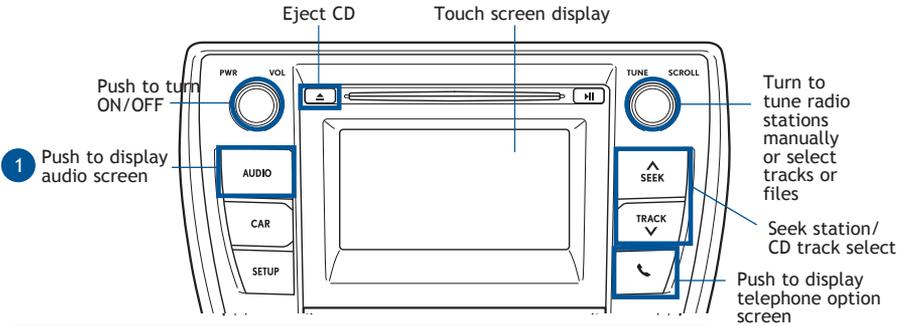

## Type 2 - Entune™ Audio Plus with Connected Navigation App Suite

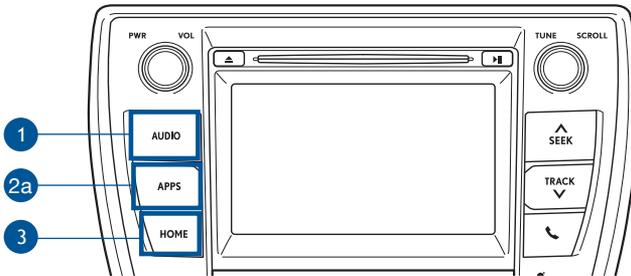

## Type 3 - Entune™ Premium (JBL®) Audio with Integrated Navigation and App Suite Some XLE and XSE models may be equipped with the JBL upgrade in this unit.

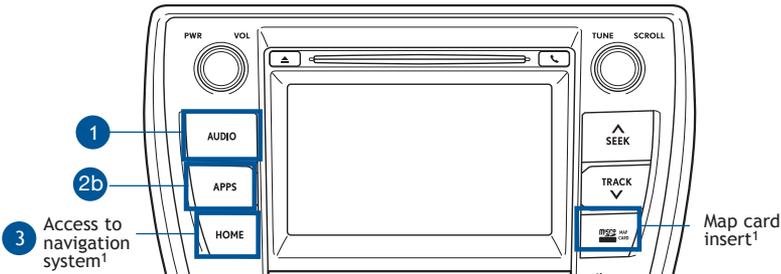


¹ Refer to the “Navigation System Owner’s Manual” and “2016 Entune™ Audio Quick Reference Guide.”


- 1** AUDIO Button  
Access to audio functions.
- 2a** APPS Button  
Access to traffic and weather
- 2b** APPS Button  
Access to Entune® App Suite, sports, stocks, news, traffic and weather

- 3** HOME Button  
Access to Home screen.  
HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

**Bottle holders/Cup holders**

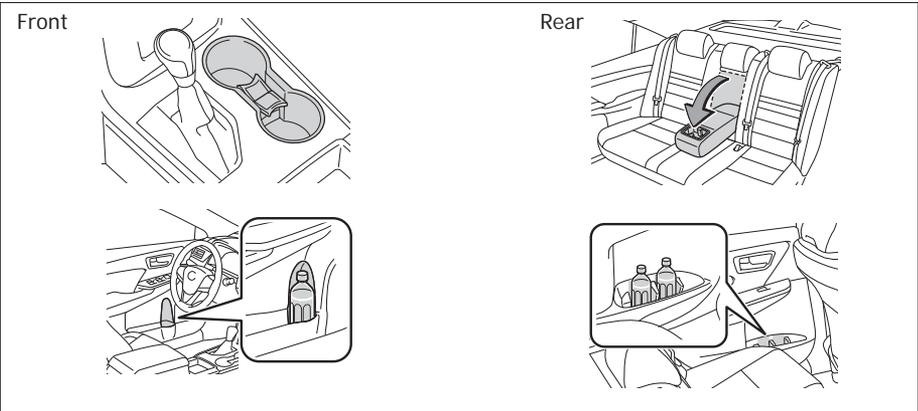


**Wireless Charging (if equipped)**

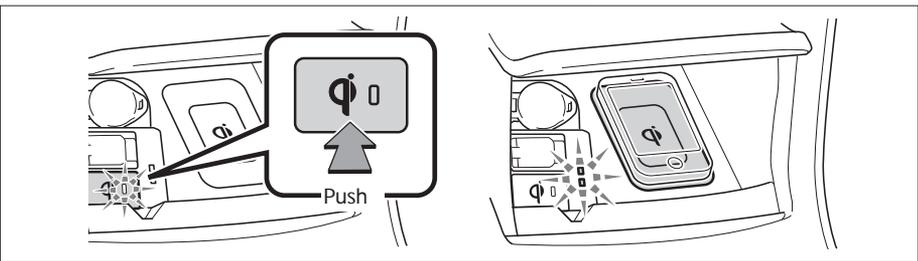

A mobile device can be charged wirelessly on the tray. Open the lid and press the wireless charger switch. Place a mobile device on the tray as shown in the illustration. An amber indicator is illuminated while charging is in progress. When charging is complete, a green indicator will also be illuminated. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

## Multi-Information display

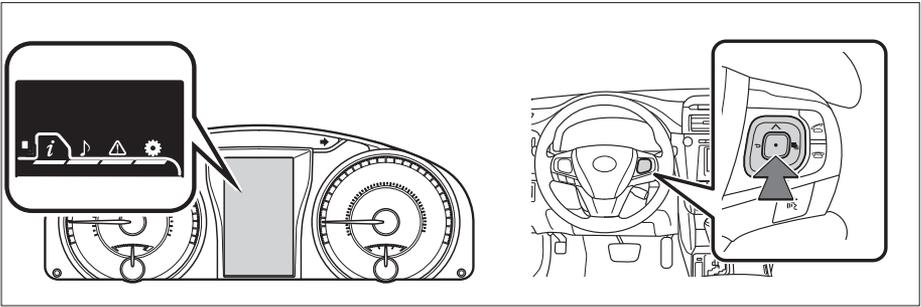


Push “meter control switches” to change information in the following:

- (1) Drive information
- (2) Navigation system linked display
- (3) Audio system linked display
- (4) Dynamic radar cruise control\*
- (5) LDA (Lane Departure Alert) status\*
- (6) Warning messages
- (7) Settings display
- (8) TPMS (Tire Pressure Monitoring System)\*

\* If equipped


## Pre-Collision System (PCS) (if equipped)

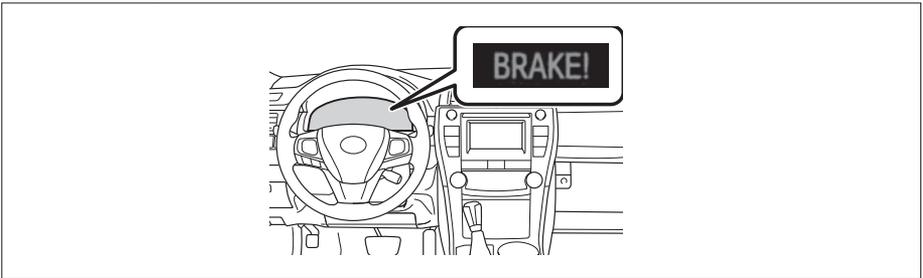

When a high possibility of a frontal collision is detected by the radar sensor, a buzzer sounds and a message urging the driver to take evasive action appears on the multi-information display. If the driver then applies brakes, the system applies greater brake force in relation to how strongly the brake pedal is depressed. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Lane Departure Alert (LDA) (if equipped)

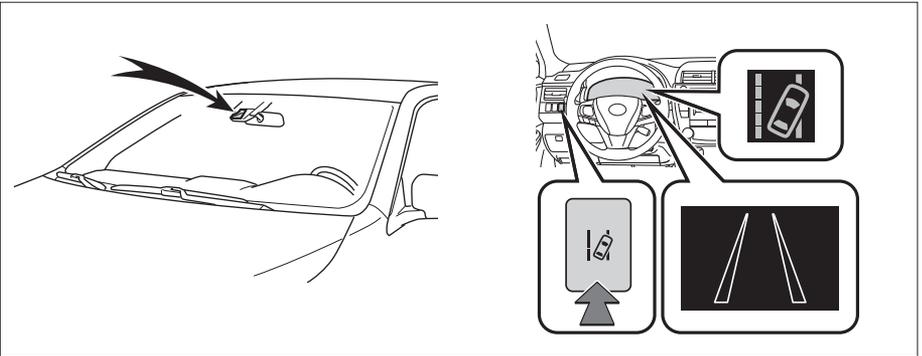


The Lane Departure Alert recognizes the visible lane markers using a camera as a sensor and alerts the driver with beeping and flashing indicators when the vehicle deviates from its lane. Press the LDA switch to activate the system.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

# SAFETY AND EMERGENCY FEATURES

## Door locks

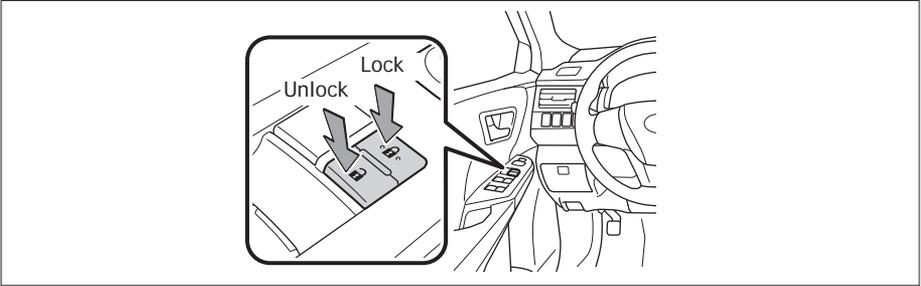

OVERVIEW


## Doors-Child safety locks



FEATURES/OPERATIONS

Moving the lever to downward will allow the door to be opened only from the outside.

## Seat belts

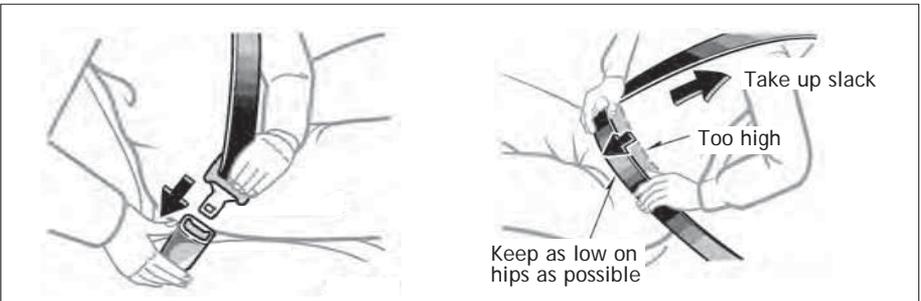


NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


SAFETY AND EMERGENCY FEATURES

## SAFETY AND EMERGENCY FEATURES

### Seat belts-Shoulder belt anchor

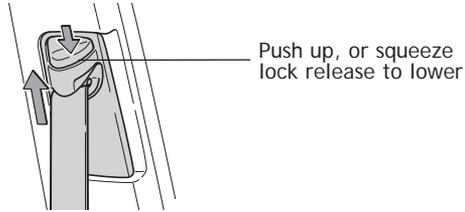

### Safety Connect (if equipped)

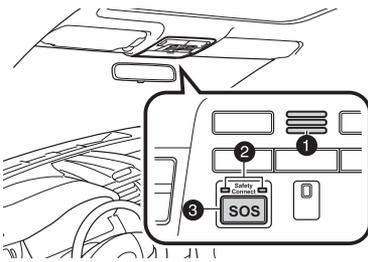


- 1 Microphone
- 2 LED Indicators
- 3 "SOS" button

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Toyota's designated response center, which operates 24 hours per day, 7 days per week. Services for subscribers include: Automatic collision notification, Stolen vehicle location, Emergency assistance button and Enhanced roadside assistance

Contact your dealer for more information about Safety Connect.

## Spare tire & tools


### Tool location

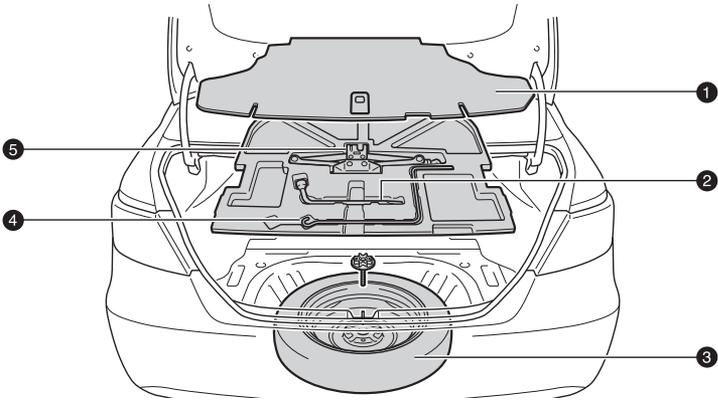


- ① Luggage floor cover
- ② Wheel nut wrench
- ③ Spare tire
- ④ Jack handle
- ⑤ Jack

### Removing the spare tire

(1) Remove the tool tray.

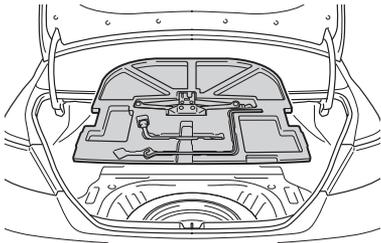


(2) Loosen the center fastener that secures the spare tire.

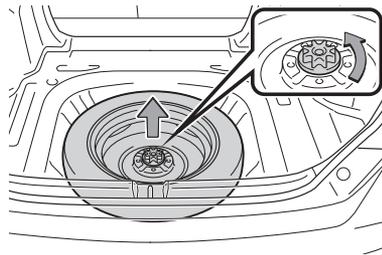

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

### Trunk-Internal release

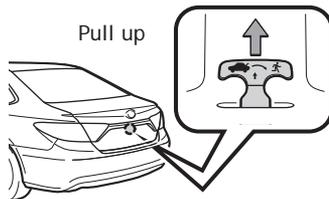

## SAFETY AND EMERGENCY FEATURES

### Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

#### Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

#### Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

#### Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

#### Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

#### Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

## Smart Stop Technology (SST)


Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

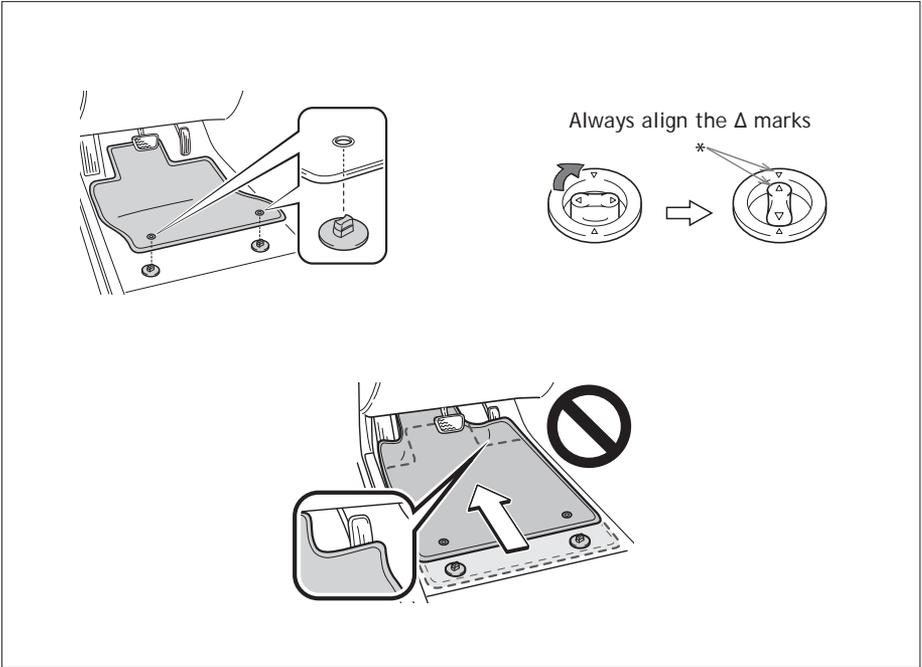



# BLUETOOTH® DEVICE PAIRING SECTION


# BLUETOOTH® DEVICE PAIRING

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.<sup>1</sup>

## Bluetooth® Pairing for Android® phone and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>2</sup>

### Initiate Bluetooth® on your Android®

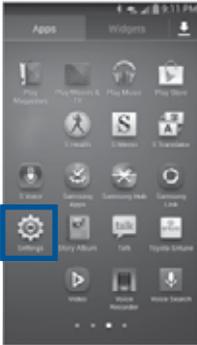

#### STEP 1

From your APPS SCREEN, select SETTINGS

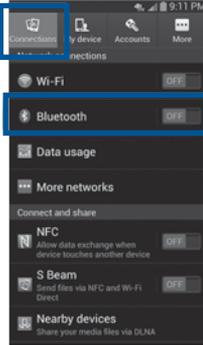


#### STEP 2

Select CONNECTIONS and select BLUETOOTH



#### STEP 3

Ensure BLUETOOTH is ON

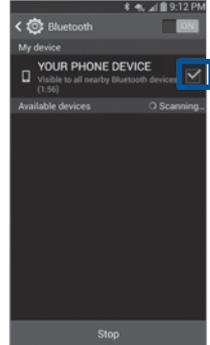

#### STEP 4

Select YOUR PHONE DEVICE to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*



#### STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

1 To determine which head unit is installed in your vehicle, refer to the Audio section in this guide.

2 Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.




### STEP 7

Select **BLUETOOTH**

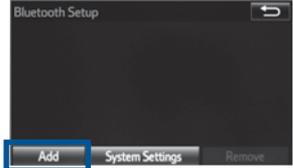

### STEP 8

Select **ADD**, to add your phone device

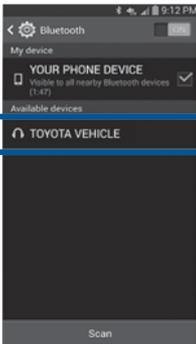

### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10

Your smartphone is now paired with Entune.

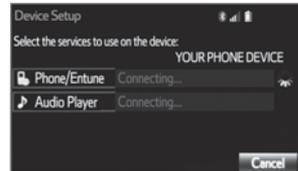


### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

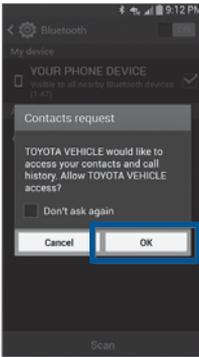

### STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota*



### STEP 13

A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer  
Experience Center  
*(800) 331-4331*

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your iPhone®



#### STEP 1

From the HOME SCREEN, select SETTINGS

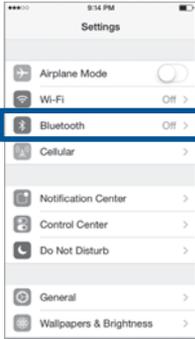


#### STEP 2

Select BLUETOOTH



#### STEP 3

Ensure BLUETOOTH is ON

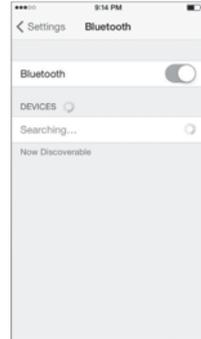

#### STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

*CONTINUE ON THE NEXT PAGE...*

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




### STEP 6

Select **SETUP** BUTTON on the Home Screen.



### STEP 7

Select **BLUETOOTH**

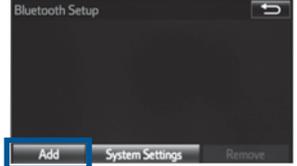

### STEP 8

Select **ADD**, to add your phone device



### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*




### STEP 10

Your smartphone is now paired with Entune.

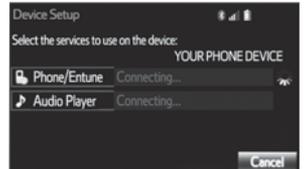

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

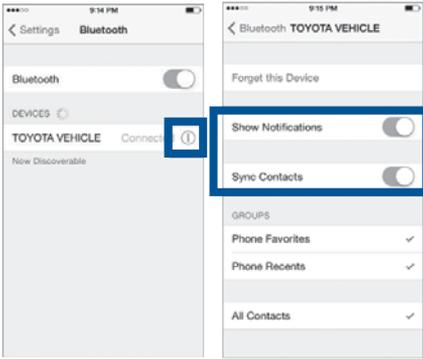

### STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts

*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*

### STEP 13

A confirmation will appear once your phone has been paired and connected.

## Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:

[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual

*Located in the vehicle glovebox*

Toyota Customer  
Experience Center  
(800) 331-4331

## Disclosures


This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

## Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your Windows Phone®

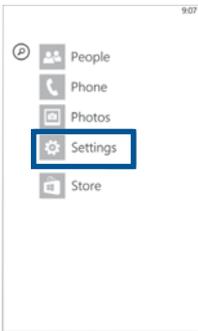


#### STEP 1

From your APP LIST, select **SETTINGS**

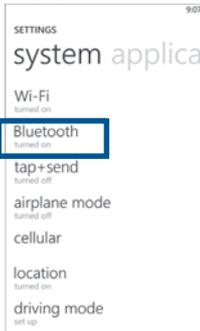

#### STEP 2

Select **BLUETOOTH**

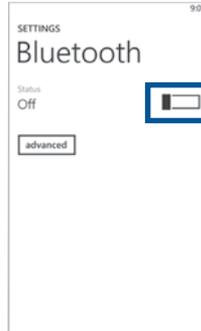

#### STEP 3

Ensure **BLUETOOTH** is ON



#### STEP 4

Phone will seek out Bluetooth devices while remaining discoverable



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



### STEP 7

Select **BLUETOOTH**

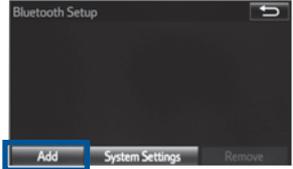

### STEP 8

Select **ADD**, to add your phone device



### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10


Your smartphone is now paired with Entune.



### STEP 11


Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

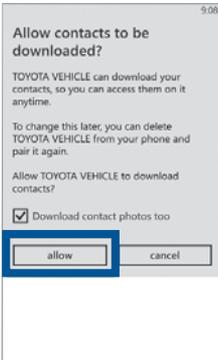

### STEP 12

Using your smartphone, you may need to allow Entune access to your contacts

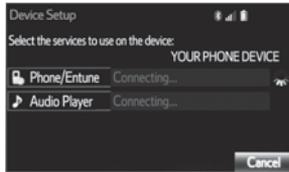

### STEP 13

A confirmation will appear that your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
*Located in the vehicle glovebox*

Toyota Customer  
Experience Center  
*(800) 331-4331*

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

# NOTES

# NOTES

# NOTES



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

