



PRIUS
2 0 1 6



QUICK REFERENCE GUIDE

2016 Prius

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Prius operations. Every Prius owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Digital Instrumentation	4
Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument panel	2-3
Keyless entry^{1,2}	6
Light control-Digital Instrumentation	9
Smart Key System^{1,2}	7

FEATURES/OPERATIONS

Air conditioning/heating	17
Audio	20
Auto lock/unlock^{1,2}	10
Bluetooth® Device Pairing Section 41-50	
Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA)	25
Clock	22
Color Dual Multi-information display (MID) Screens²	18
Color Head-up Display (HUD)	21
Cruise control	22
Driving mode select switch	11
EV mode	11
Garage door opener (HomeLink®) ³	25
Heated seats	17
Hybrid Synergy Drive System	10
Hybrid transmission	11
Intelligent Parking Assist (IPA)	23
Intelligent Clearance Sonar (ICS)	24
Lights¹ & turn signals	16
Moon roof	14
Parking brake	12
Power outlets	19
Qi-compatible wireless charging	21
Rear view monitor system	23
Seat adjustments-Front	13
Seats-Folding down rear seat	13
Seats-Head restraints	13
Steering wheel switches and telephone controls (Bluetooth®)	19
Tilt and telescopic steering wheel	12

USB/AUX Port	20
Vehicle Stability Control (VSC)/ TRAC OFF switch	12
Windshield wipers & washers	15
Windows-Power	14

TOYOTA SAFETY SENSE

Auto High Beams (AHB)	35
Full-Speed Dynamic Radar Cruise Control (DRCC)	32-34
Lane Departure Alert with Steering Assist function	29-31
Pedestrian detection function	29
Pre-Collision System (PCS)	27-28
Quick overview- Toyota Safety Sense P Sensors	26 26

SAFETY AND EMERGENCY FEATURES



Doors-Child safety locks	37
Door locks	37
Floor mat installation	40
Seat belts	36
Seat belts-Shoulder belt anchor	36
Spare Tire/Tire Repair Kit & tools	38-39
Star Safety System™	39-40
Tire Pressure Monitoring (warning) System	36

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.

OVERVIEW

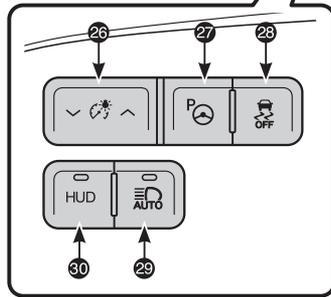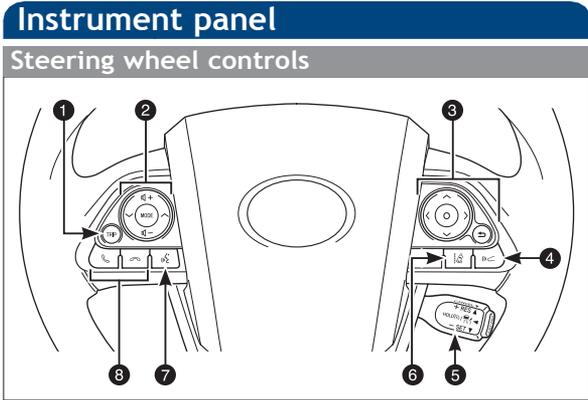

- ① “TRIP” switch
- ② Steering wheel audio controls^{2,3}
- ③ Meter control switches
- ④ Full-Speed Dynamic Radar Cruise Control (DRCC) vehicle-to-vehicle distance switch¹
- ⑤ Full-Speed Dynamic Radar Cruise Control (DRCC)/Cruise control switch
- ⑥ Lane Departure Alert (LDA) switch
- ⑦ Voice command button^{2,3}
- ⑧ Telephone control switches^{2,3}
- ⑨ Headlight and turn signal controls/Headlight, turn signal and front fog light controls¹
- ⑩ Wiper and washer controls
- ⑪ Digital instrumentation
- ⑫ “P” position switch
- ⑬ Multi-Information Display (MID)
- ⑭ Shift lever
- ⑮ Emergency flasher switch
- ⑯ Audio³/navigation system^{1,2,3}
- ⑰ Air conditioning controls

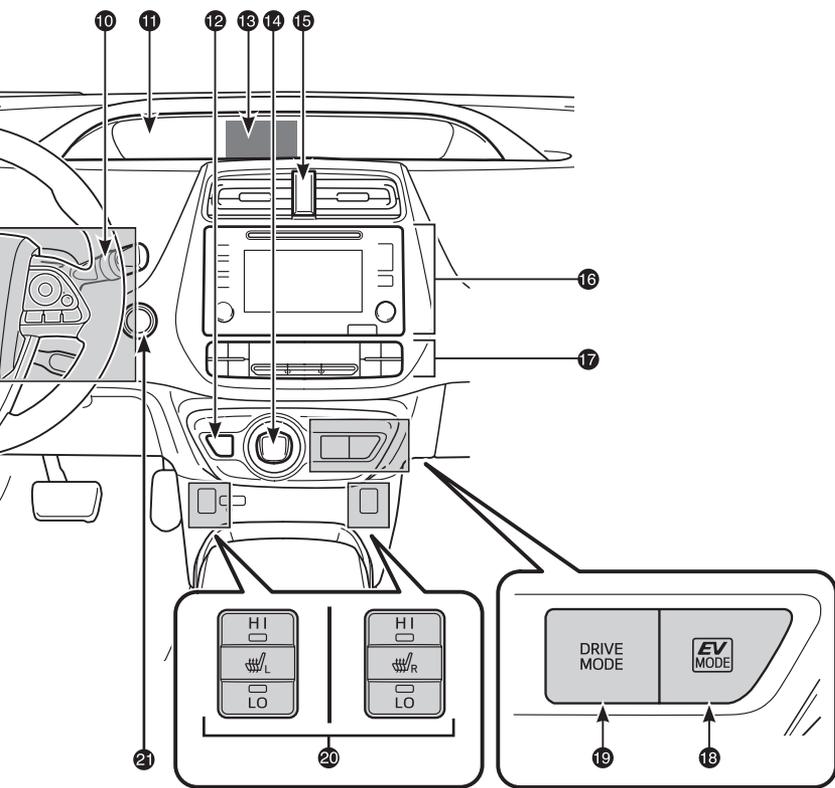


- 18 EV drive mode switch
- 19 Driving mode select switch
- 20 Seat heater switches¹
- 21 “ENGINE START STOP” button (Smart key)
- 22 Tilt and telescopic steering lock release lever
- 23 Parking brake
- 24 Hood lock release lever
- 25 Fuel tank door opener
- 26 Instrument cluster light control switch
- 27 Intelligent Parking Assist (IPA) switch¹
- 28 Vehicle Stability Control (VSC) OFF switch
- 29 Automatic High Beam (AHB) switch¹
- 30 Color Head-up Display (HUD) switch¹

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual.”

³ For details, refer to the “2016 Entune™ Audio Quick Reference Guide.”

Digital Instrumentation

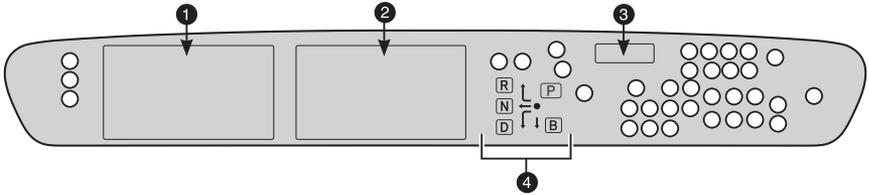

- ❶ Main Display
- ❷ Multi-Information Display (MID)
- ❸ Clock Display
- ❹ Transmission shift position indicator
- Service indicators and reminders

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2, *2016 Owner’s Manual*.

-  BRAKE Brake system warning¹
-  Brake system warning light (yellow indicator)¹
-  Driver seat belt reminder (alarm will sound if speed is over 12 mph)
-  Charging system warning¹
-  Air bag ON/OFF indicator
-  Malfunction/Check Engine indicator¹
-  Low fuel level warning
-  Open door warning
-  Airbag SRS warning¹
-  Master warning¹
-  Low Tire Pressure Warning¹

¹ If indicator does not turn off within a few seconds of starting hybrid system, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² The light flashes to indicate a malfunction.

	Electric power steering system warning ¹		Intelligent Parking Assist ⁴
	Immobilizer system indicator		S-APGS indicator ⁴
	Headlight low/ high beam indicator		Parking brake indicator
	Turn signal indicator		Shift position indicators
	READY indicator		VSC OFF indicator ¹
	EV indicator		Lane Departure Alert indicator ⁴
	EV Drive Mode indicator		Steering Assist indicator ⁴
	ECO Mode indicator		Arrow direction indicates fuel tank door position
	Power Mode indicator		
	Front fog light indicator ⁴		
	Slip indicator/Hill-start Assist Control indicator ^{1,2}		
	Anti-lock Brake System warning ¹		
	Low engine oil pressure warning ¹		
	Pre-collision System warning ^{1,2,4}		
	Intelligent Clearance Sonar (ICS) OFF indicator ^{1,2,4}		
	SET		Cruise control indicator ^{3/} Full-Speed Dynamic Radar Cruise Control ^{3,4}
	High coolant temperature warning light ¹		
	Automatic High Beams ^{1,4}		
	BSM		Blind Spot Monitor ⁴
	Smart key system		
	Brake Override System/Drive-Start control/Intelligent Clearance Sonar ⁴		
	Lane Departure Alert (LDA) with Steering Assist ⁴		
	Lane Departure Alert (LDA) Sway Control ⁴		

³ If this light flashes, refer to “Cruise control,” or “Full-Speed Dynamic radar cruise control,” Section 4-5, 2016 Owner’s Manual.

⁴ If equipped.

Keyless entry

Locking operation



Push 

Unlocking operation



Push ONCE: Driver door
TWICE: All doors 

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Panic button



Push and hold 

Smart Key System (if equipped)


Start function

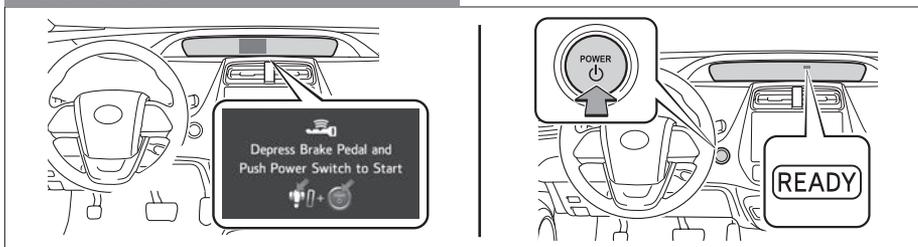


When starting the hybrid system, make sure you are carrying the Smart key, the parking brake is set and shift position is in P.

Power modes (without starting Hybrid System)


Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

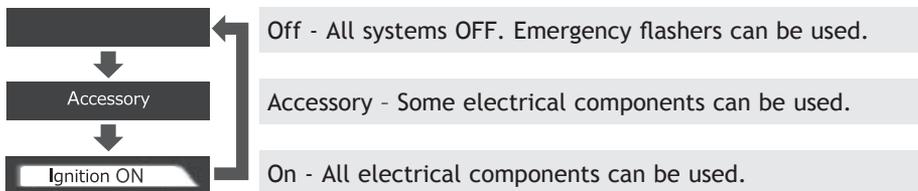


Unlocking

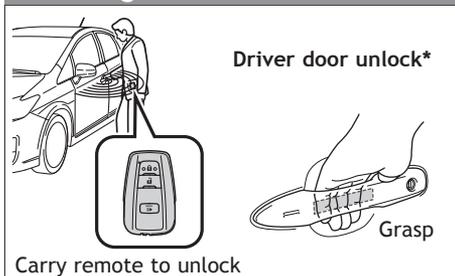

Locking

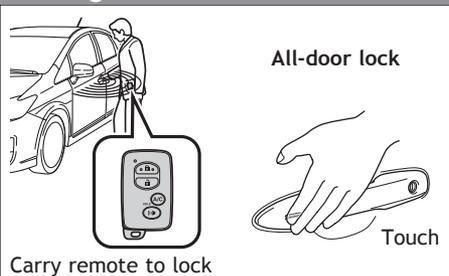



Back door lock/unlock (if equipped)

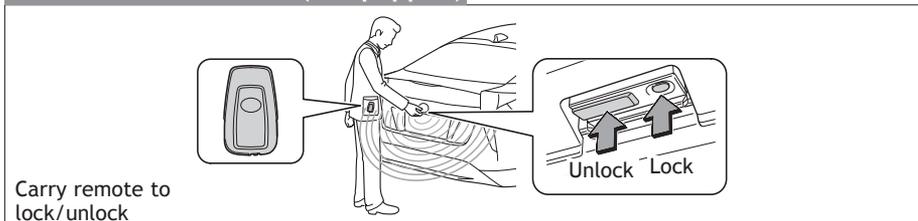

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle or pushing unlock button on rear hatch will unlock all doors. (If equipped)




NOTE: Fuel consumption and energy information of the hybrid system are shown on the Dual Multi-Information Displays

Fuel tank door release and cap

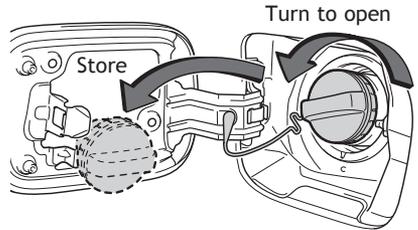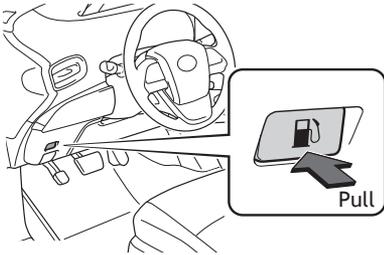


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.


Hood release

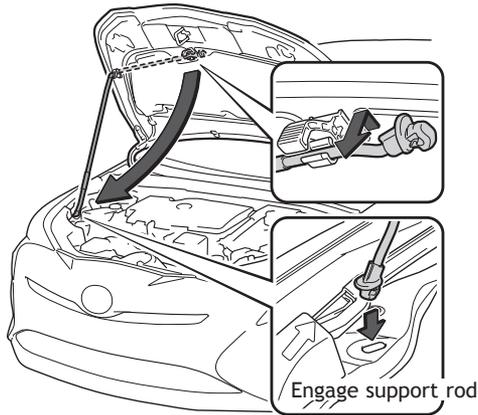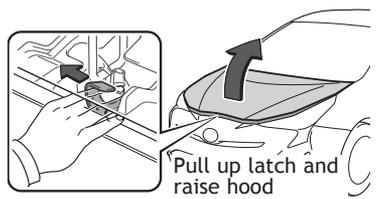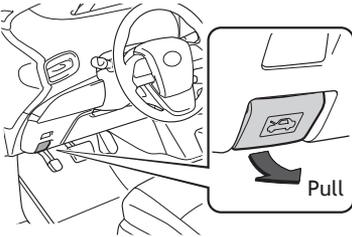

Light control-Digital Instrumentation

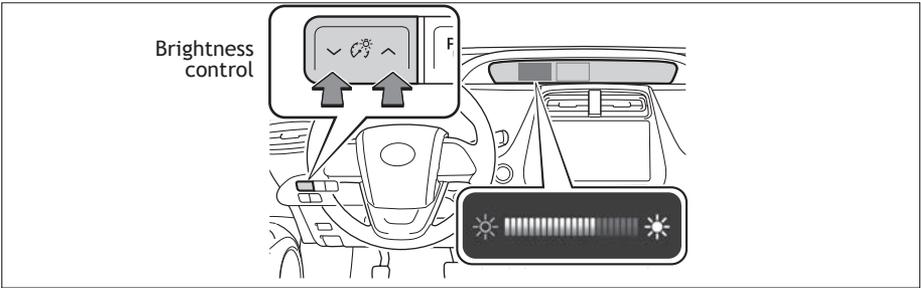

Engine maintenance

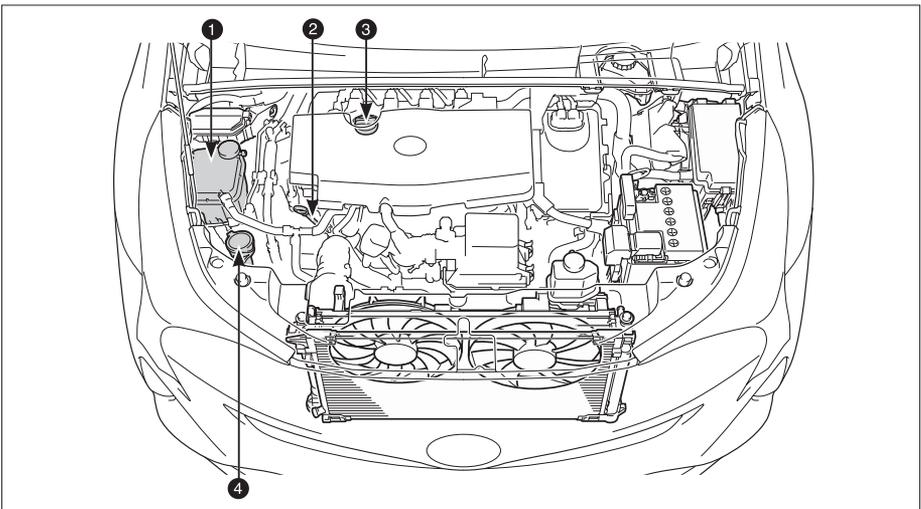

- ① Engine coolant reservoir
- ② Engine oil level dipstick
- ③ Engine oil filler cap
- ④ Windshield washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES/OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the hybrid system are shown on the Multi-Information Displays.

Tips for improved fuel economy

- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Starting your vehicle

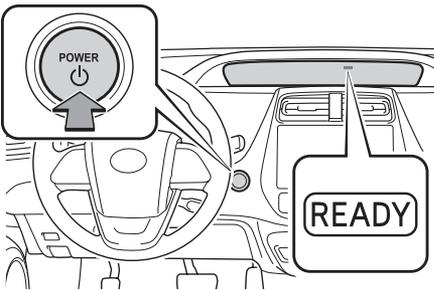

- (1) Depress the brake pedal, and press the "POWER" switch briefly and firmly.
- (2) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "POWER" switch OFF.


Refer to the *Owner's Manual* for more details.

Hybrid transmission

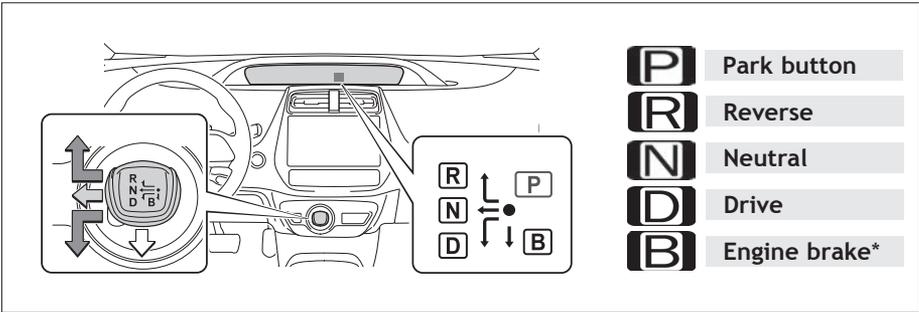

* The engine brake is the equivalent of downshifting. Shift to “B” when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).


Driving mode select switch

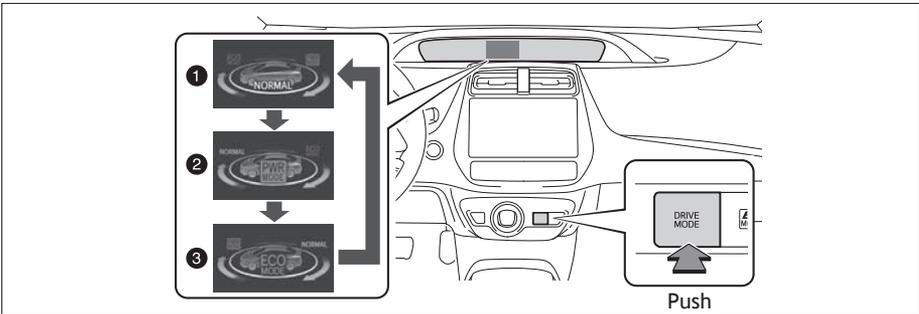

- ① **Normal** - Suitable for normal driving.
- ② **Power mode** - Use when a higher level of response is desired, such as when driving in mountainous regions.
- ③ **ECO drive mode** - Helps achieve lower fuel consumption during trips that involve frequent accelerating and braking.

Refer to the *Owner's Manual* for more details.


EV mode

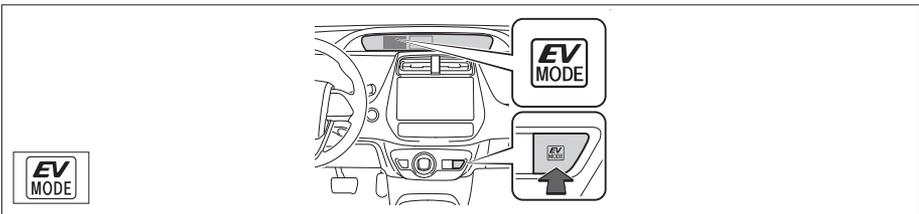

EV-Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.


Refer to the *Owner's Manual* for more details.

Vehicle Stability Control (VSC)/TRAC OFF switch

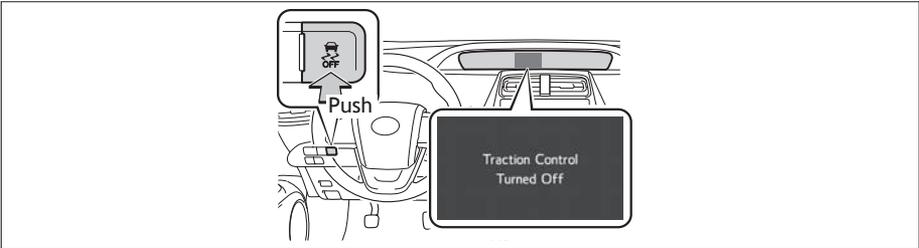

The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While car is stopped, press switch to disable the TRAC system. To disable both VSC and TRAC systems, press the switch for at least 3 seconds. Refer to the *Owner's Manual* for more details.


Tilt and telescopic steering wheel

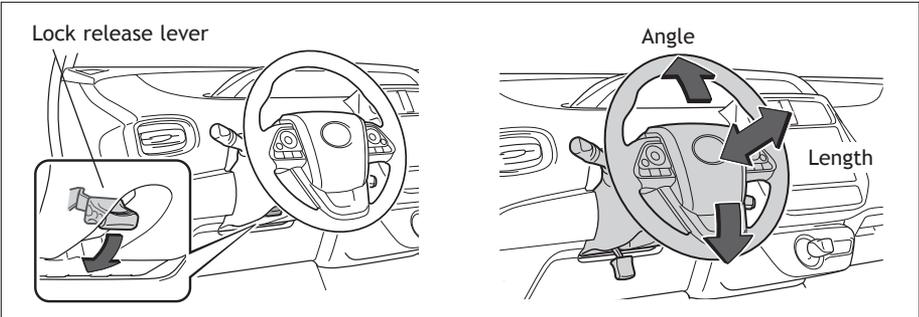



Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

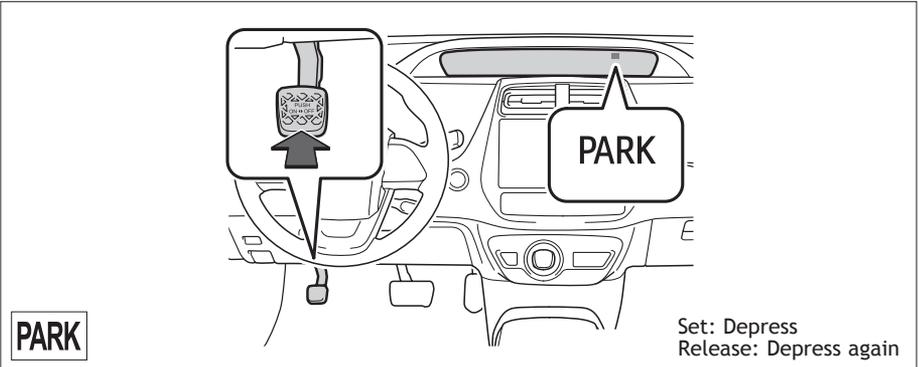


Seat adjustments-Front

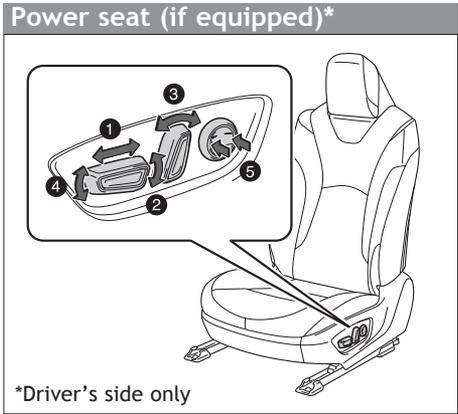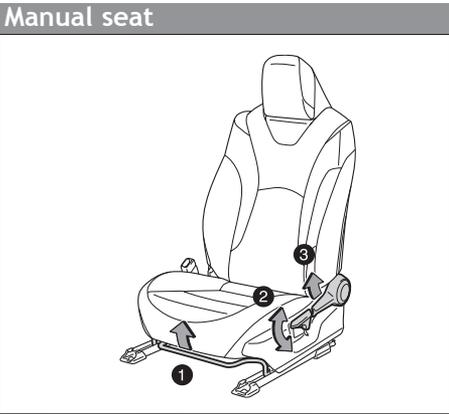


- ❶ Seat position (forward/backward)
- ❷ Height crank (driver side only)
- ❸ Seatback angle
- ❹ Seat position, cushion angle and height
- ❺ Lumbar support


Seats-Head restraints (if equipped)

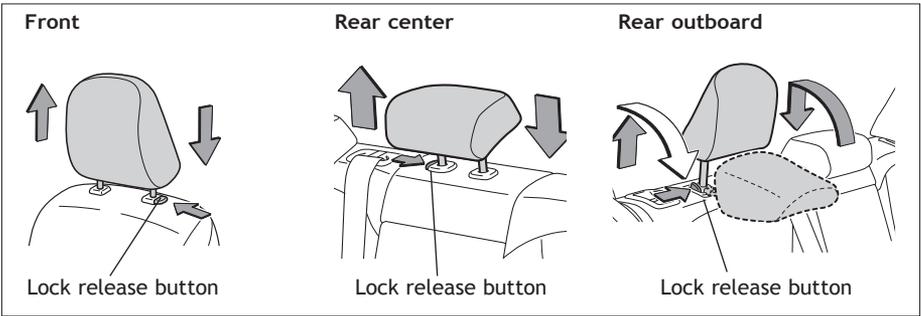

Seat-Folding down rear seat

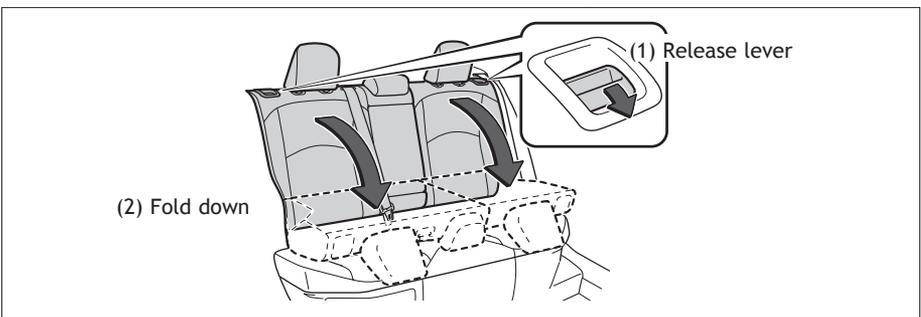

Windows-Power

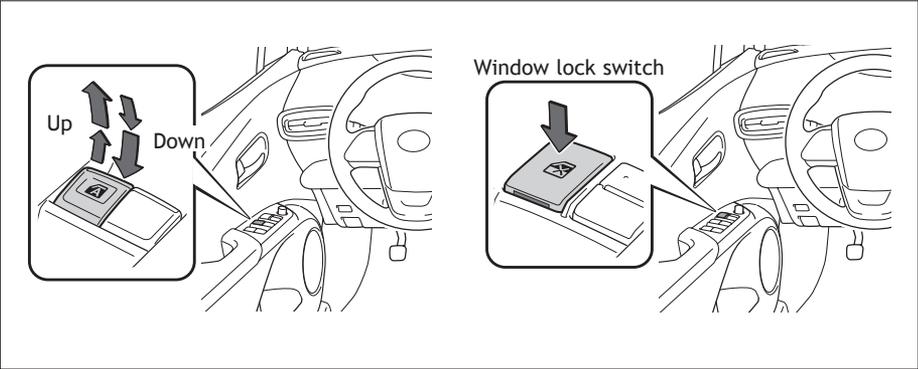


Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Moon roof (if equipped)

Tilting operation

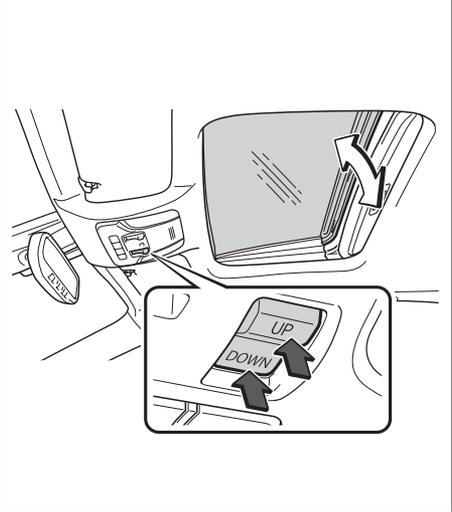


Sliding operation

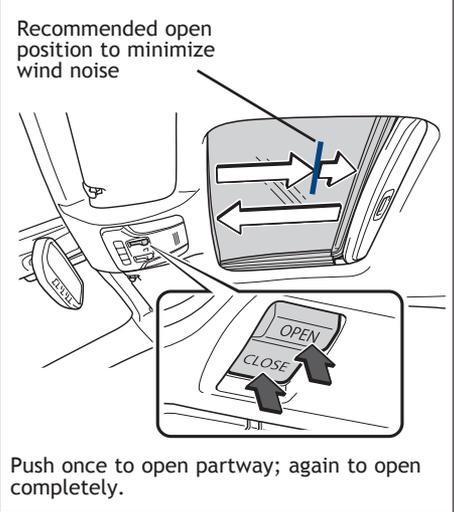


Windshield wipers & washers

Front-Intermittent (if equipped)

Type A

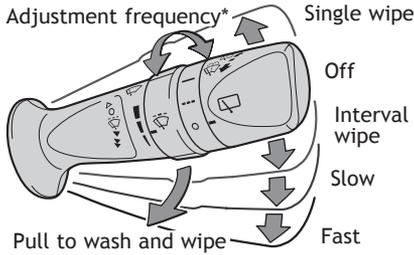


Type B

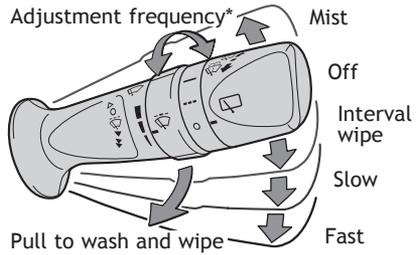


¹ Intermittent windshield wiper frequency adjustment Rotate to increase/decrease wipe frequency.

Front-Auto (Rain-sensing)(if equipped)

Type A

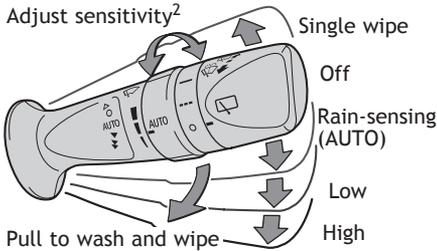


Type B

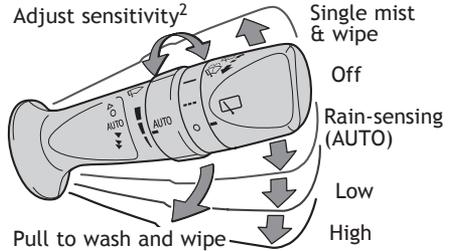


² Rain-sensing windshield wipers Rotate to increase/decrease sensor sensitivity.

Rear (if equipped)

Type A

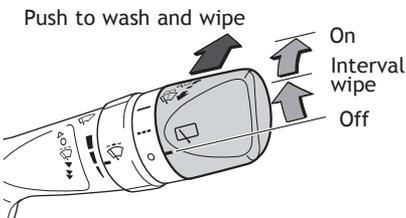


Type B

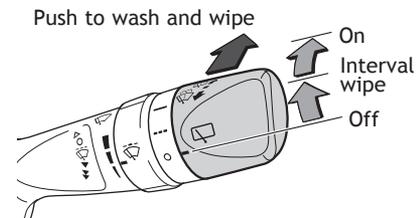


Lights & turn signals

Headlights


Type A

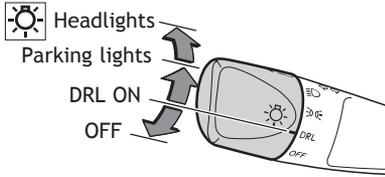

Type B

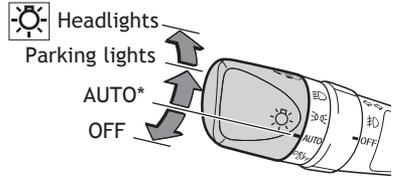


*if equipped

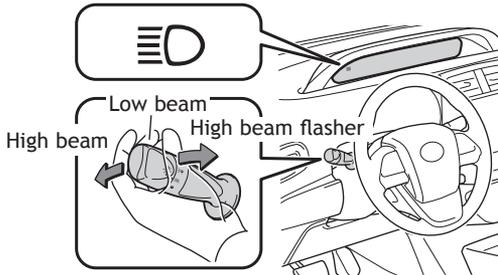


Automatic light cutoff system Automatically turns lights off after a delay of 30 seconds, or when lock switch on remote is pushed after all doors are locked.

Front fog lights (if equipped)

Type A

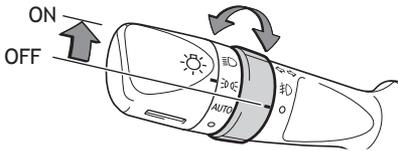


Type B

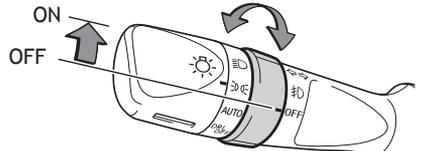


*Front fog lights come on only when the headlights are on low beam.

Turn signals

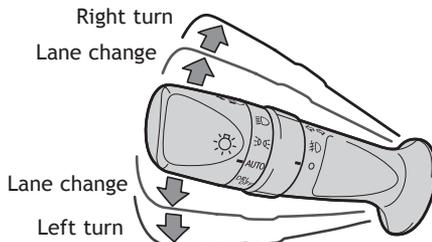


Heated seats (if equipped)

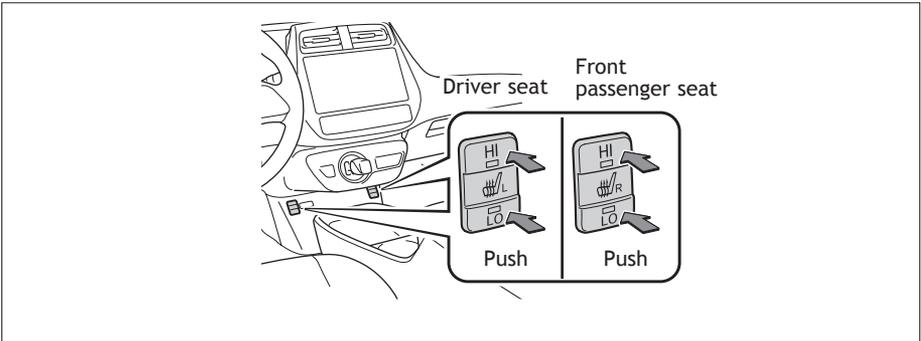

Air conditioning/heating


Energy saving climate control

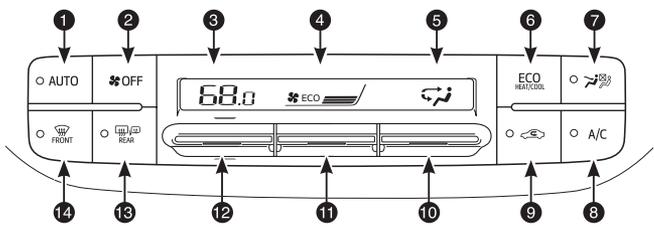


- ❶ Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ❷ Climate control OFF
- ❸ Temperature setting display
- ❹ Fan speed display
- ❺ Air outlet display
- ❻ Climate control that minimizes fuel consumption. This option may reduce fan speed.
- ❼ Smart-flow (S-Flow) mode gives airflow priority to the front seats, reducing the airflow and air conditioning effect on rear seats when there are no passengers.
- ❽ Air conditioning ON/OFF
- ❾ Recirculate cabin air (outside air when OFF)
- ❿ Airflow vent
Use “” or “” mode to reduce window fogging.
- ⓫ Fan speed control
- ⓬ Temperature selector
- ⓭ Outside rearview mirror/Rear defogger
- ⓮ Windshield defogger




Color Dual Multi-Information Display (MID) Screens

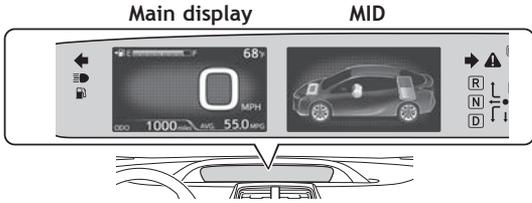

Main display

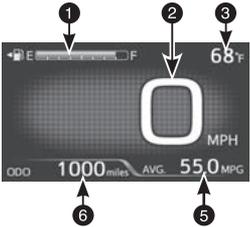

Simple screen

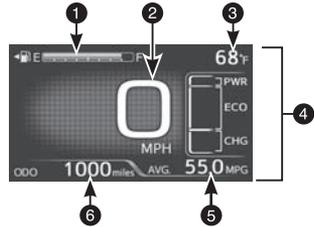


Split screen

Split screen mode shown above (can also be viewed in simple screen mode.) The main display shows basic drive information. Push “**TRIP**” to view more info for mileage and average fuel consumption display:

- ① Fuel gauge
- ② Speedometer
- ③ Outside temperature
- ④ Hybrid system indicator and current fuel consumption
- ⑤ Average fuel consumption display
- ⑥ Mileage display (odometer/trip meters/driving range)

Multi-Information Display (MID)

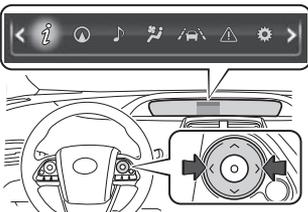


- Drive information
- Navigation system-linked display (if equipped)
- Audio system-linked display (if equipped)
- Air conditioning system settings screen
- Driving assist system information (if equipped)
- Warning message display
- Settings display

Push “<>” to change between the following information screens, “**O**” to select, “**▲▼**” to switch contents and “**←**” to go back:


For more details, see *Owner’s Manual*.

Power outlets

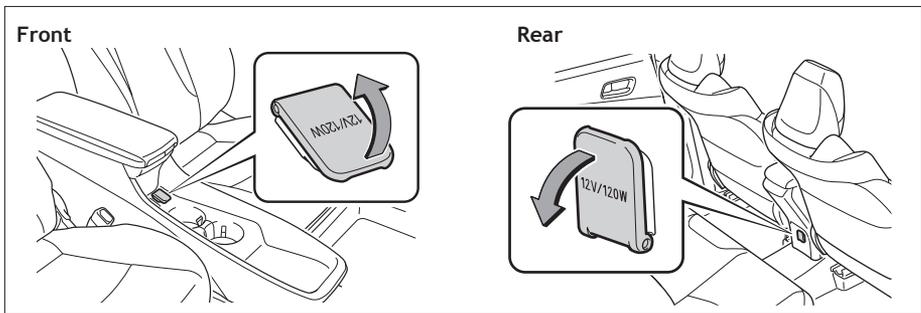

Power switch must be set at “ACCESSORY” or “ON” mode to be used.

Steering wheel switches and telephone controls (Bluetooth®)*

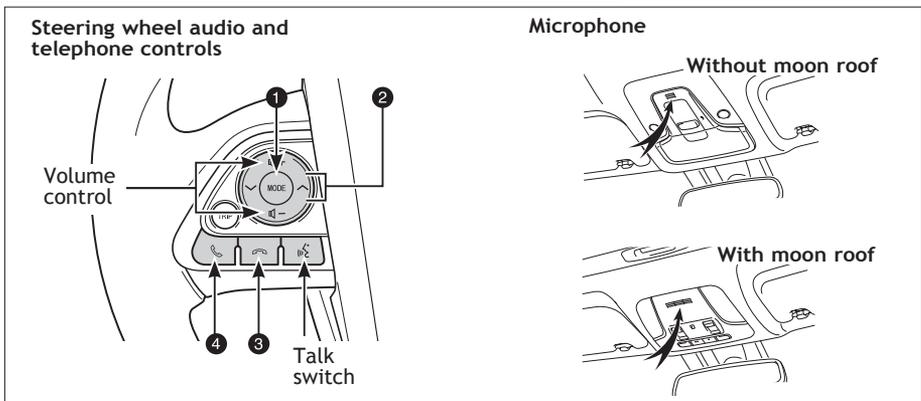

1 “MODE”

Push to turn audio ON and select an audio mode. Push and hold to mute/unmute or pause/resume the current operation.

2 “▲▼” Use to search within the selected audio medium (radio, CD, etc.).

3 End call


4 Start call

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system. Refer to “Bluetooth® Device Pairing Section,” in this guide, for more information about phone connections and compatibility.


* Position of buttons may vary on some vehicles, for more details please refer to the *Owner’s Manual*.

Audio

Type 1 - Entune™ Audio

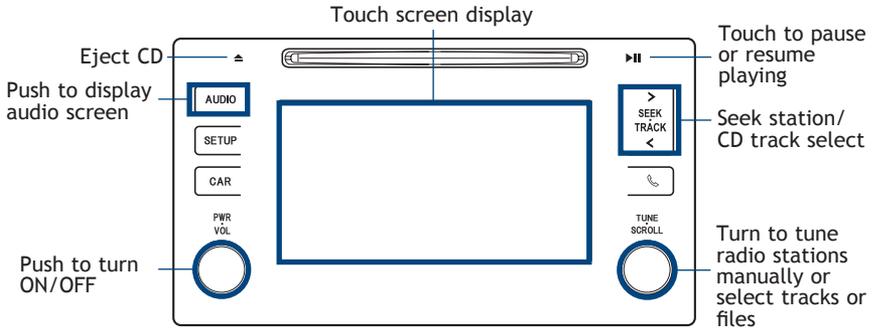


Type 2 - Entune™ Premium (JBL®) Audio with Integrated Navigation and App Suite

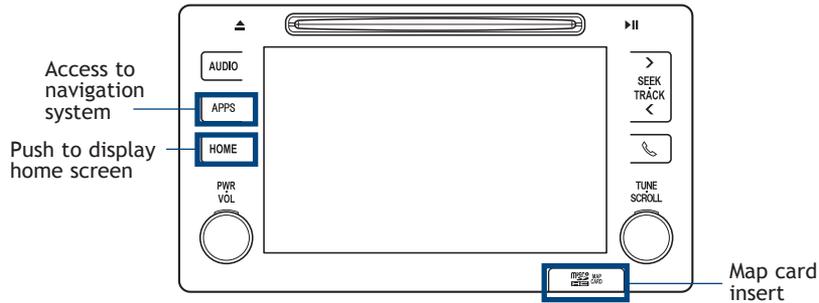

Refer to the “2016 Entune™ Audio Quick Reference Guide” or the “Navigation System Owner’s Manual” for more details.


USB/AUX port

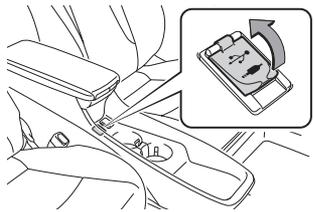

By inserting a USB or an auxiliary cable plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in USB/AUX mode.

Refer to the “Navigation System Owner’s Manual” for instructions and more information.


Color Head-up display (HUD) (if equipped)

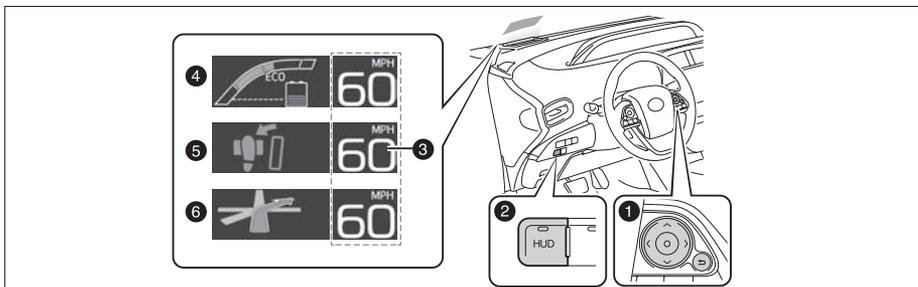

The color head-up display can display the current vehicle speed and hybrid system indicator in front of the driver. Also, it can display various types of information to assist the driver.

- ❶ Meter control switches adjust position and brightness of HUD
- ❷ Head-up display (HUD) switch activates or switches between items
- ❸ Vehicle speed display
- ❹ Hybrid system current driving and energy regeneration status
- ❺ Insert display driving support system information
- ❻ Route guidance display (if equipped with navigation system)

Qi-compatible wireless charging (if equipped)

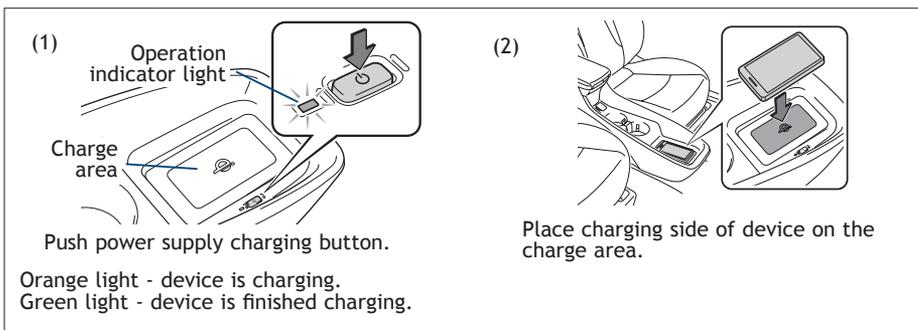


The power switch must be in ACCESSORY or ON mode.

A portable device can be charged by just placing Qi standard wireless charge compatible portable devices according to the Wireless Power Consortium, such as smart phones and mobile batteries, etc., on the charge area.

This function cannot be used with portable devices that are larger than the charging area. Also, depending on the portable device, it may not operate as normal.

See *Owner's Manual* for compatible portable devices.


Clock

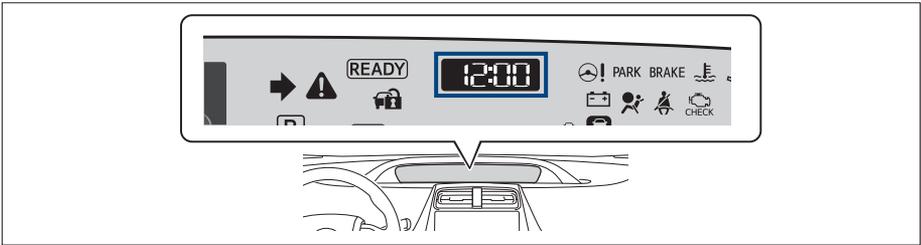


To adjust the time, use meter control switches to go to the screen on the MID. Then, select the option to access the clock setting.

Cruise control

Turning system ON/OFF

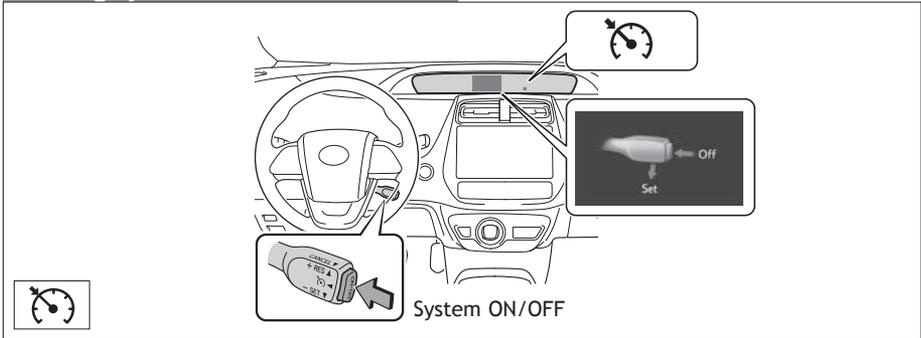


Functions

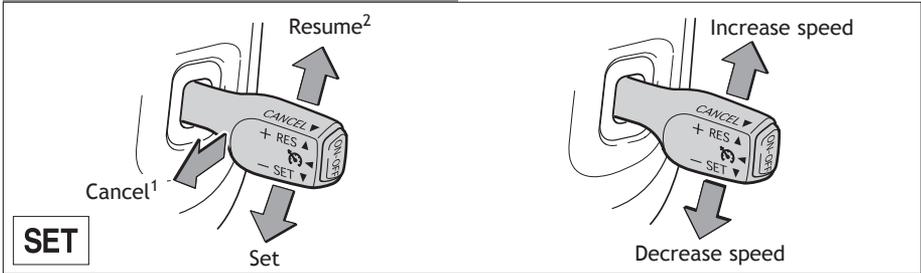

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Intelligent Parking Assist (IPA) (if equipped)

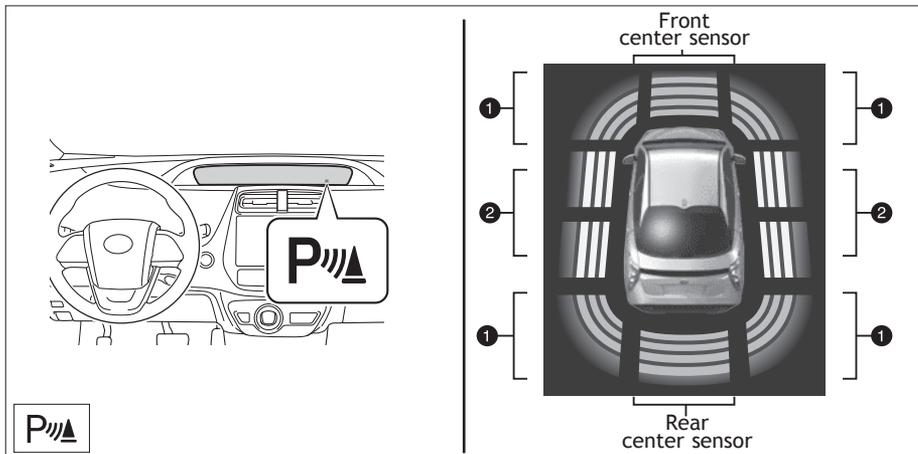


- ❶ Corner sensors (front and rear)
- ❷ Side sensors (front and rear)

When the sensors detect an obstacle, the buzzer and MID display informs the driver of the approximate position and distance of the obstacle by illuminating continuously (far) or blinking (near).

Note: Use  in the Multi-Information Display (MID) to change settings. The system will continue in the last state it was in (ON or OFF) when the engine is started again.

Refer to section S-APGS (Simple Advanced Parking Guidance System) in the *Owner's Manual* for more details.

Rear view monitor system

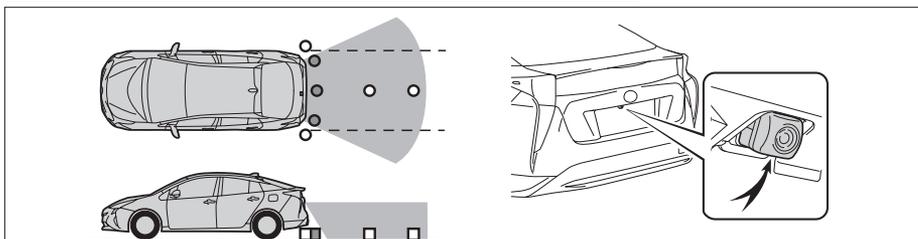

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.


To adjust the image on the rear view monitor screen, press the "SETUP" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.

Refer to the *Owner's Manual* for more details on this system.

Intelligent Clearance Sonar (if equipped)

When parking, this available system scans for stationary objects, like walls or lampposts. Should the system anticipate a collision, it will emit an audible and visible alert, reduce engine or motor output, and automatically apply the brakes if needed. And with advanced side-collision detection, Prius can help you get in and out of parking spots with plenty of room to spare.


Change settings

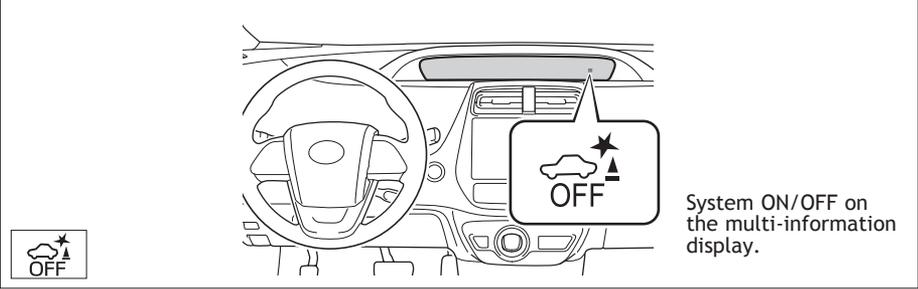

System ON/OFF on the multi-information display.

Refer to the *Owner's Manual* for more details on this system.

Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) (if equipped)

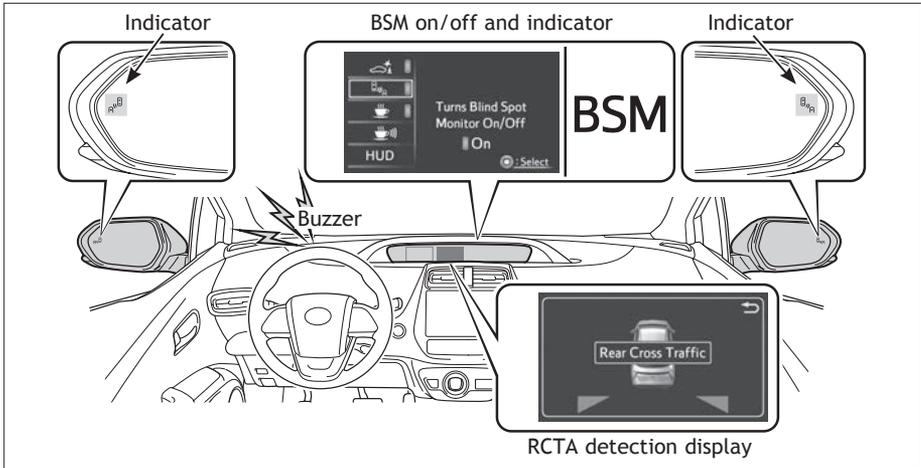


Blind Spot Monitor (BSM) uses an indicator light in the outside mirror to alert the driver to a vehicle in the blind spot.

When backing up the vehicle, **Rear Cross Traffic Alert (RCTA) (if equipped)** uses an indicator light in the outside mirror and an audible sound to alert the driver if another vehicle is approaching from the left or right.

Note: Use  in the Multi-Information Display (MID) to change settings. The system will continue in the last state it was in (ON or OFF) when the engine is started again.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

Garage door opener (HomeLink®)* (if equipped)

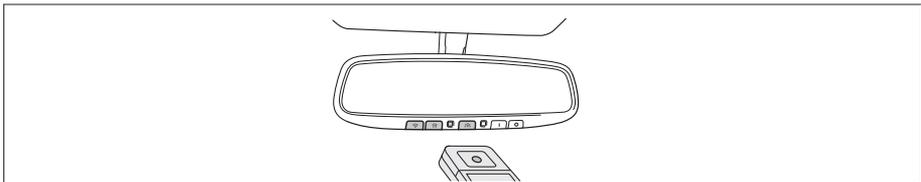

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to "Garage door opener," Section 3-5 in the *Owner's Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.

TOYOTA SAFETY SENSE

Quick overview-Toyota Safety Sense P (if equipped)

Toyota Safety Sense (TSS) P is a set of active safety technologies designed to help prevent or mitigate collisions across a wide range of traffic situations. TSS P is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe and comfortable driving experience.

Refer to the *Owner's Manual* for more details to understand these functions and complete safety precautions before attempting to use any of TOYOTA SAFETY SENSE P functions.



Pre-Collision System (PCS)

Provides collision avoidance or damage mitigation support in speed ranges where rear end collisions are likely to occur.



Pedestrian Detection Function

Advanced sensor system helps to recognize pedestrians in some circumstances and provides collision avoidance support and/or damage mitigation.



Lane Departure Alert (LDA)

Provides notification regarding the risk of unintended lane departure.



Full-Speed Dynamic Radar Cruise Control (DRCC)

The vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle at any speed.






Auto High Beams (AHB)

Vehicle detects lights of leading or opposing vehicles and automatically changes between high and low beam headlight settings.


Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems. The single-lens camera in front of inside rear view mirror detects and recognizes shapes and visible white or yellow lane markings.

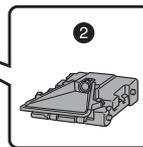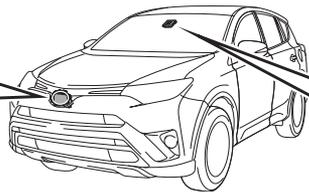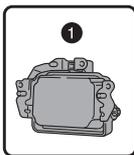

- ① Radar sensor
- ② Camera sensor

Pre-Collision System (PCS)

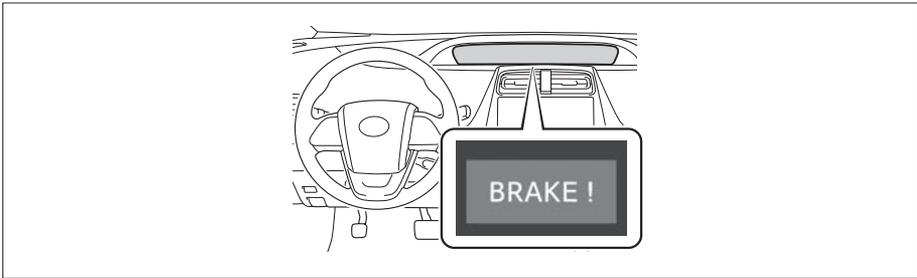

The Pre-Collision System uses a radar sensor and camera sensor to help detect vehicles and pedestrians in front of your vehicle. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, the system warns the driver to take evasive action while the potential brake pressure is increased to help the driver avoid collision or reduce the impact to the vehicle and its occupants.

Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the warning timing of the system can be changed.

Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.


Pre-collision brake assist

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

Pre-collision braking

When the system determines that the possibility of a frontal collision is high, the system warns the driver. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the collision speed.

Changing the pre-collision warning distance

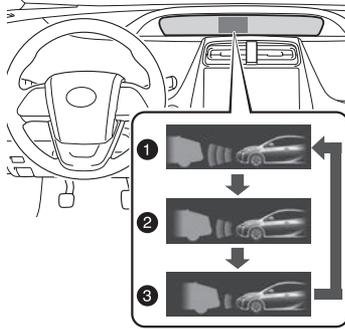


- (1) Press “<>” switches and select  from the Multi-Information Display (MID).
- (2) Press “◇” switches and select  from the MID.
- (3) Press “⊙” from the meter switches.

Each time “⊙” is pressed, the response to the warning distance changes as follows:

- ① Far
- ② Middle (default)
- ③ Near

Note: The PCS warning timing is set when the power switch is turned off.

Disabling the Pre-Collision System (PCS)

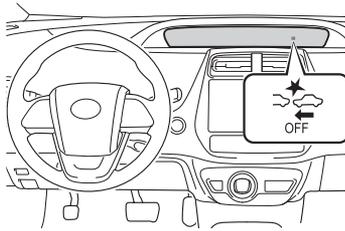


- (1) Press “<>” switches and select  from the Multi-Information Display (MID).
- (2) Press “◇” switches and select  from the MID.
- (3) Press “⊙” from the meter switches.

The Pre-Collision System will be disabled.

Note: The system is automatically enabled each time the power switch is turned to ON mode.


Pedestrian Detection Function

The Pre-Collision System also features a pedestrian detection function. Using a millimeter wave radar and monocular camera sensor, this advanced sensor system can recognize pedestrians in some circumstances. It may provide detection capability while driving at low as well as higher speeds.

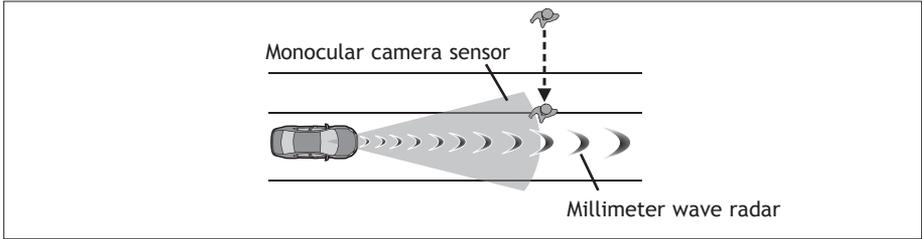


As part of PCS, this function is also designed to first provide an alert and then automatic braking if needed.

Lane Departure Alert (LDA) with Steering Assist (SA) function

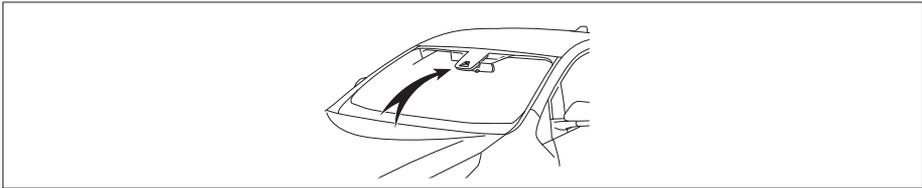

The Lane Departure Alert system recognizes visible white or yellow lane markers via camera sensor. The system alerts the driver with a warning buzzer sound and message in the Multi-Information Display (MID) when it detects the vehicle deviating from or swaying multiple times within its lane.


Turning on the LDA system

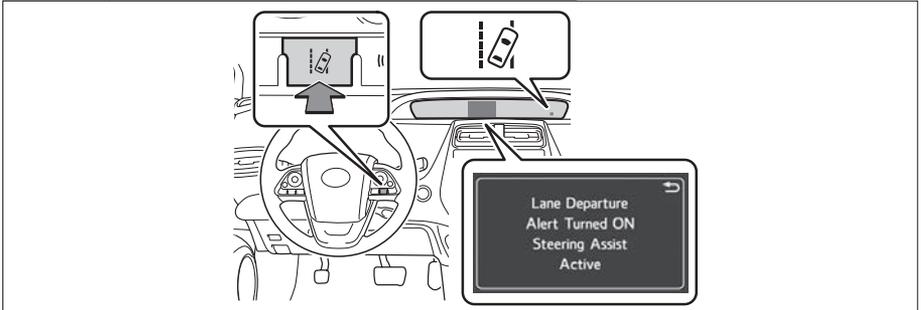

Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: The system will continue in the last state it was in (ON or OFF) when the engine is started again.

Functions

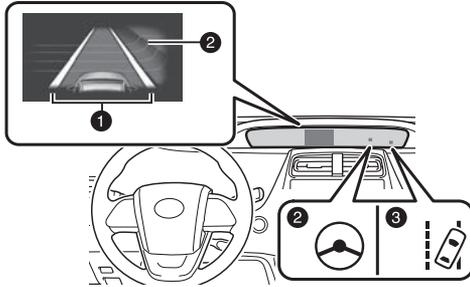

- ❶ Lane displays when MID switches to driving assist information screen
- ❷ Steering assist indicator and operation display of steering wheel operation support
- ❸ Lane Departure Alert (LDA) indicator (flashes orange when operating)



(1)



(2)

The LDA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

(1) The system displays solid white lines on the LDA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.

(2) The system displays outlines on the LDA indicator when lane markers on the road are not detected or the function is temporarily cancelled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

Adjusting LDA sensitivity




High - Warns **before** the front tire crosses the lane marker.

Normal - Warns **when** the front tire crosses the lane marker.

The driver can adjust the sensitivity of the LDA (warning) function from the MID customization screen.


Steering assist function

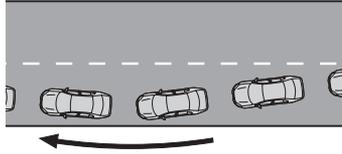


When the system determines that the vehicle might depart from its lane, the system provides assistance as necessary by operating the steering wheel in small amounts for a short period of time to keep the vehicle in its lane.

If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the warning buzzer sounds.

Sway control function

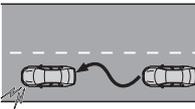

Continuous lane deviations from swaying.

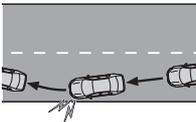


Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

The sway warning function can detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning displays in the MID.


Full-Speed Dynamic Radar Cruise Control (DRCC) (if equipped)

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle at any speed. In constant speed control mode, the vehicle runs at a fixed speed.


Use the DRCC with full-speed range on freeways and highways.

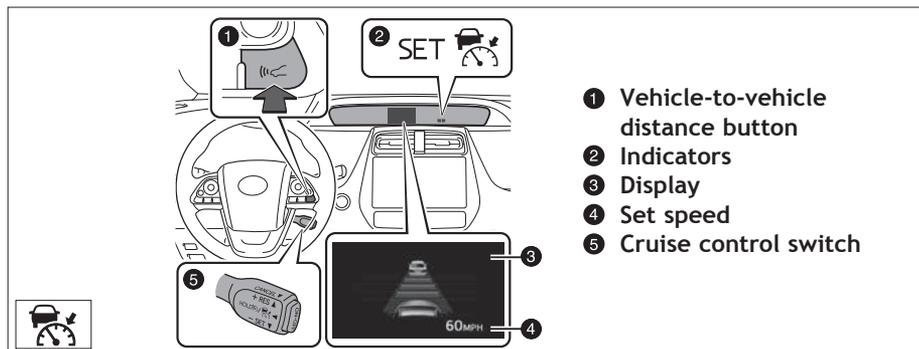

Turning system ON/OFF

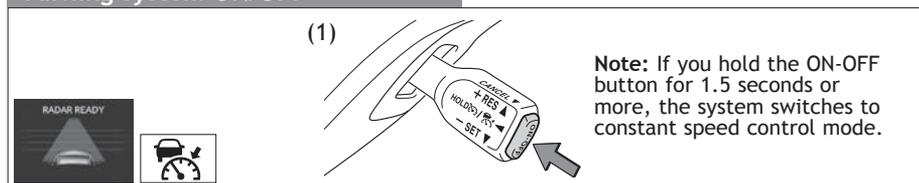

Adjusting set speed

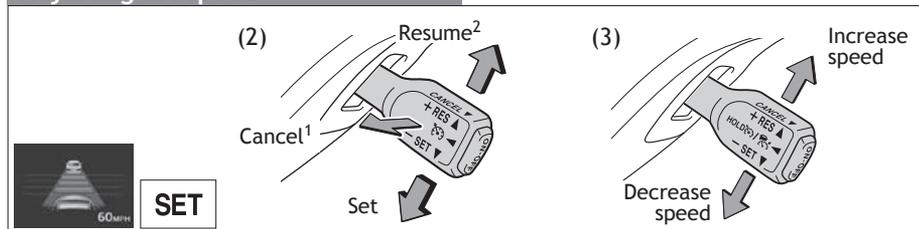


Vehicle will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Push the “ON-OFF” button. The “RADAR READY” or “” indicator will come on.
- (2) Push the lever down to SET speed, push it up to Resume and pull it or depress brake to Cancel.
- (3) Push up to increase the set speed, push down to decrease (1mph increments).

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

Adjusting distance

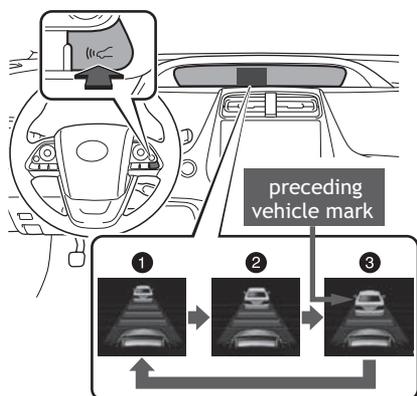


To change the vehicle-to-vehicle distance

Push the “” button to cycle through the settings, which will change progressively.

- ① LONG (default setting)
- ② MIDDLE
- ③ SHORT.

This mode employs a radar sensor to detect the presence of vehicles up to approximately 400ft (120m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a suitable following distance from the vehicle ahead.

Note: Vehicle-to-vehicle distance may lessen when traveling on long downhill slopes.

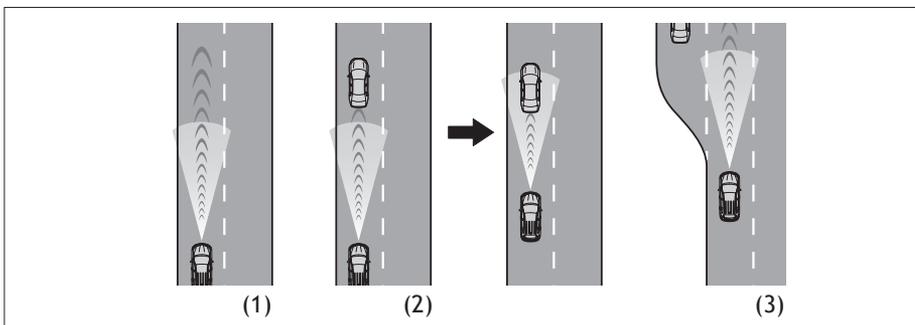

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears


When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.


Switching to constant speed control mode

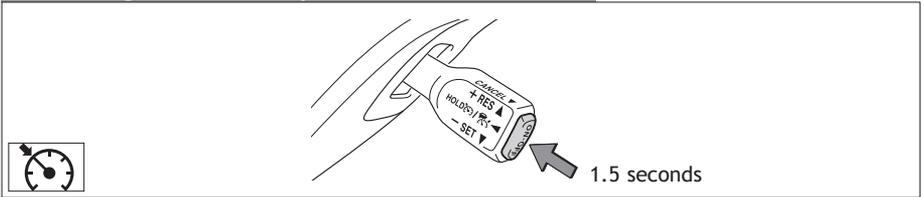

If you are already using Full-Speed DRCC “”, push “ON-OFF” button to turn the system off first, then push and hold “ON-OFF” button for at least 1.5 seconds to switch.

Note: When the engine is turned off, it will automatically default to Full-Speed Dynamic Radar Cruise Control.

Auto High Beams (AHB) (if equipped)

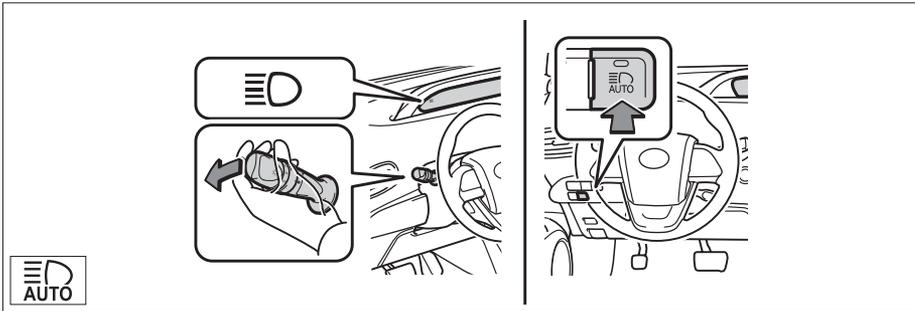

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

Activating the Automatic High Beam System

- (1) With the engine switch in IGNITION ON mode and headlight switch turned to "AUTO" position, depress the Automatic High Beam switch and push lever away from you.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

- (2) Pull the lever back toward you to turn the Automatic High Beam system off.

The Automatic High Beam indicator will turn off and the high beam indicator turn on.

Conditions where Automatic High Beams will turn ON/OFF automatically

When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):


- Vehicle speed is above approximately 25 mph (40 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

If any of these conditions occur, high beams will be automatically turned off:

- Vehicle speed drops below approximately 19 mph (30 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

SAFETY AND EMERGENCY FEATURES


Seat belts

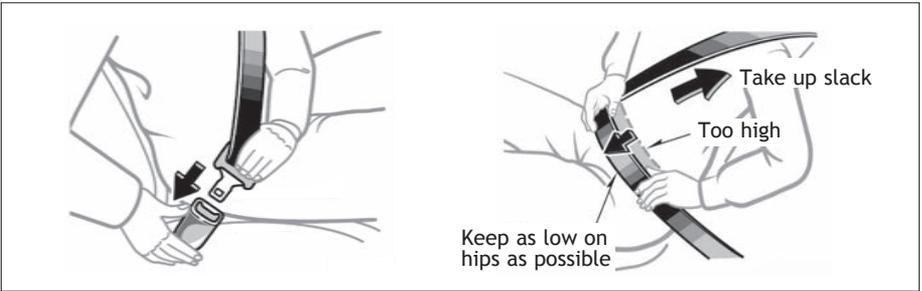

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

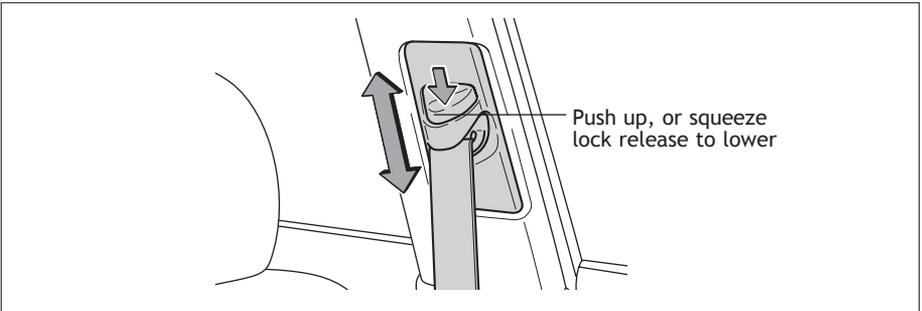

Tire Pressure Monitoring (warning) System


If the Tire Pressure Warning indicator “(⚠)” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Refer to the *Owner's Manual* for more details.


* Refer to load label on door jamb or the *Owner's Manual* for tire inflation specifications.

Door locks

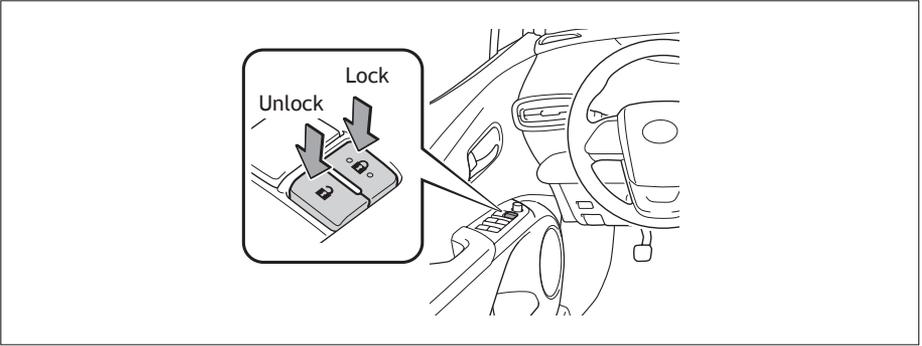

Doors-Child safety locks

Rear door

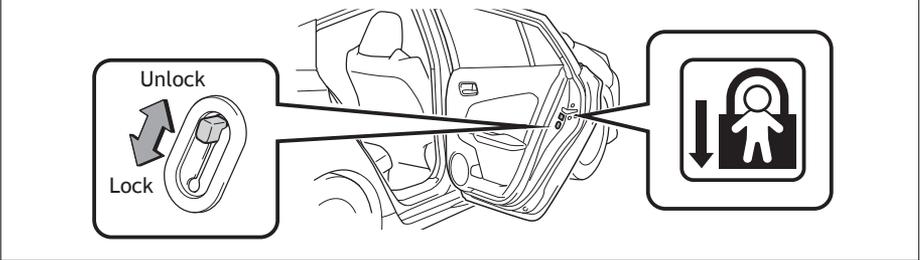


Moving the lever to lock position will allow the door to be opened only from the outside.


Spare Tire/Tire Repair Kit & tools

Tool location


With compact spare tire

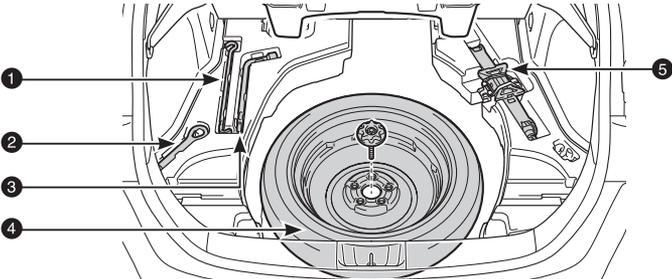


With full-size spare tire

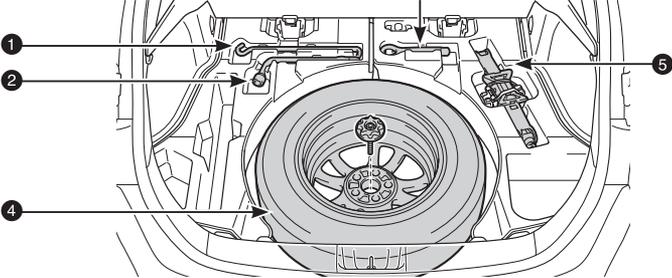

With tire repair kit and tools (vehicles without spare tire)

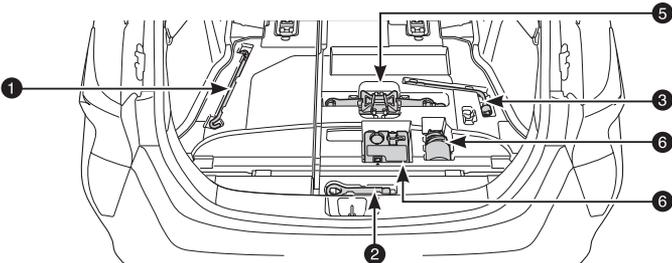


Tire repair kit components

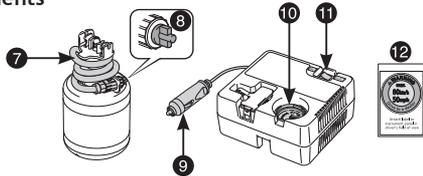

- ① Jack handle
- ② Towing eyelet
- ③ Wheel nut wrench
- ④ Spare tire
- ⑤ Jack
- ⑥ Emergency tire puncture repair kit
- ⑦ Hose
- ⑧ Air release cap
- ⑨ Power plug
- ⑩ Air pressure gauge
- ⑪ Compressor switch
- ⑫ Sticker

Removing the spare tire

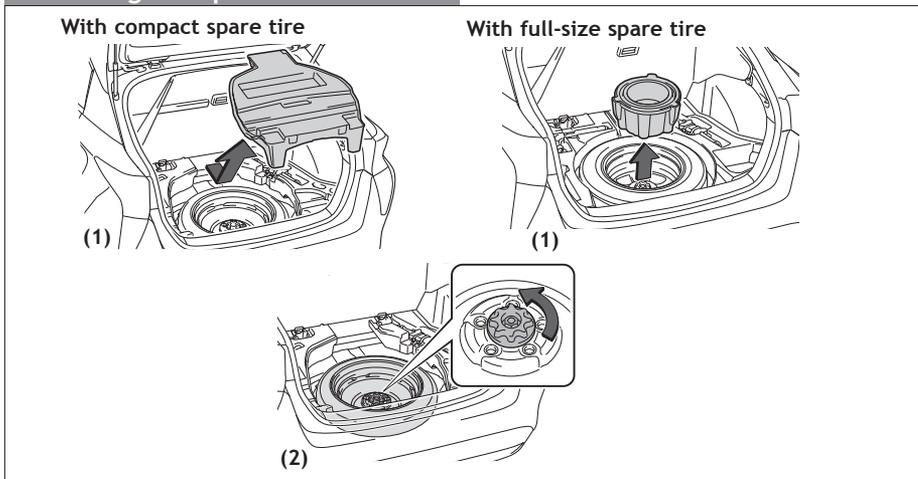

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Enhanced Vehicle Stability Control (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing Hybrid System output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Hybrid System output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

SAFETY AND EMERGENCY FEATURES

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)


Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

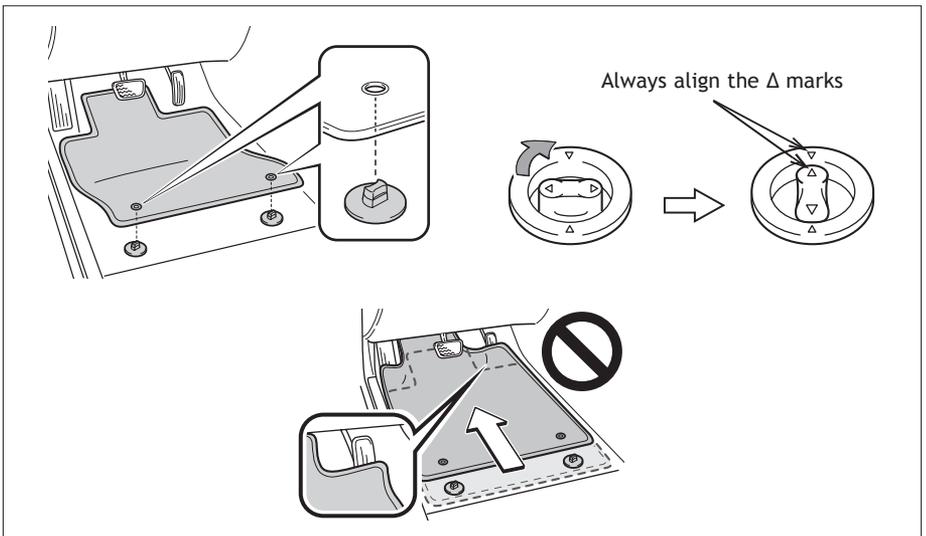

BLUETOOTH® DEVICE PAIRING SECTION


BLUETOOTH® DEVICE PAIRING

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹

Bluetooth® Pairing for Android® phone and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

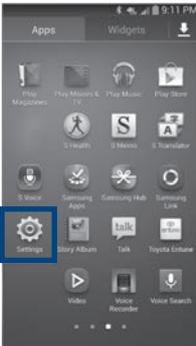

STEP 1

From your APPS SCREEN, select **SETTINGS**.

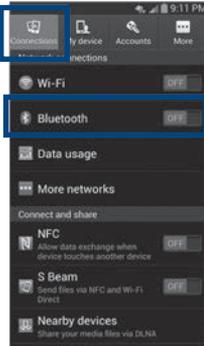


STEP 2

Select **CONNECTIONS** and select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is ON.

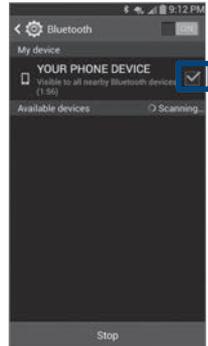

STEP 4

Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.




STEP 7

Select **BLUETOOTH**.
Image shown is a sample image, features may vary.

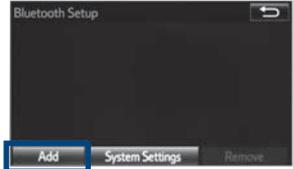

STEP 8

Select **ADD**, to add your phone device.

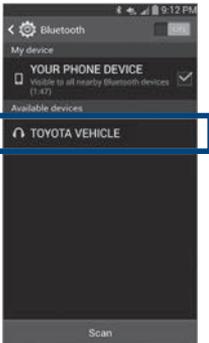

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.




STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

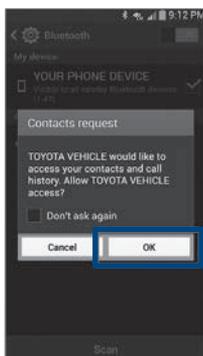

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the HOME SCREEN, select SETTINGS.

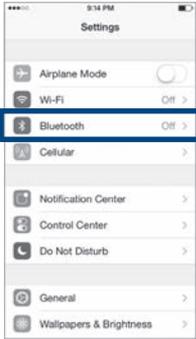


STEP 2

Select BLUETOOTH.



STEP 3

Ensure BLUETOOTH is ON.

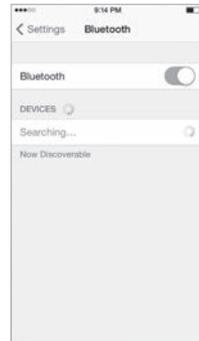

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

Select **SETUP** BUTTON on the Home Screen.



STEP 7

Select **BLUETOOTH**.
Image shown is a sample image, features may vary.

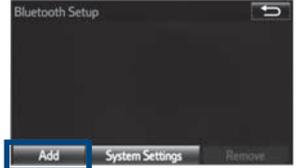

STEP 8

Select **ADD**, to add your phone device.



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.




STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

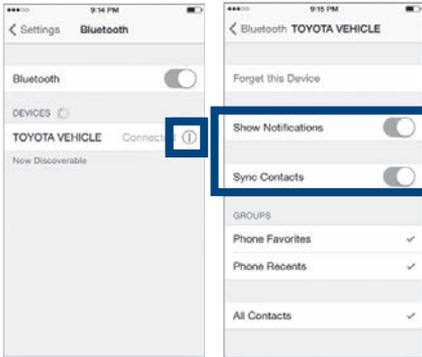

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
 Experience Center
 (800) 331-4331

Disclosures


This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®

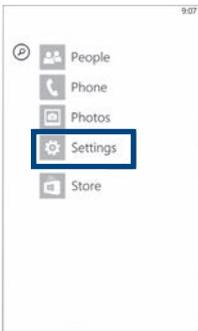


STEP 1

From your APP LIST, select **SETTINGS**.



STEP 2

Select **BLUETOOTH**.

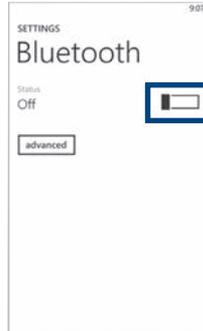

STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7

Select **BLUETOOTH**.
Image shown is a sample image, features may vary.

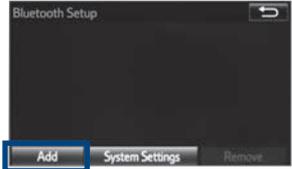

STEP 8

Select **ADD**, to add your phone device.



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

NOTES

NOTES

NOTES



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

