



YARIS HATCHBACK

2 0 1 8



QUICK REFERENCE GUIDE

2018

YARIS HB

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Yaris HB.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Yaris HB operations. Every Yaris HB owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	6
Keyless entry*	6

FEATURES & OPERATIONS

Air conditioning/heating	14
Audio	18
Automatic transmission	8
Clock	16
Cruise control	12
Door-Back door lock/unlock	8
Door locks-Power	16
Lights & turn signals	9
Manual transmission	8
Multi-Information Display (MID)	14
Parking brake	11
Power outlet	16
Rear view monitor system	15
Seat adjustments-Front	12
Seats Folding-Rear	13
Seats-Head restraints	13
Steering wheel switches	17
Tilt steering wheel	11
USB/AUX port	17
Windows-Power	11
Windshield wipers & washers	10

TOYOTA SAFETY SENSE™ C (TSS-C)

Auto High Beams (AHB)	24
Lane Departure Alert (LDA)	22-23
Pre-Collision System (PCS)	20-21
Quick overview-	
Toyota Safety Sense™ C (TSS-C)	19
Sensors	19


SAFETY & EMERGENCY FEATURES

Doors-Child protector rear door locks	25
Floor mat installation	28
Seat belts	25
Spare tire & tools	26
Star Safety System™	27-28
Tire Pressure Monitoring (warning) System (TPMS)	26


PAIRING A BLUETOOTH® DEVICE 29

Instrument panel


¹ If equipped

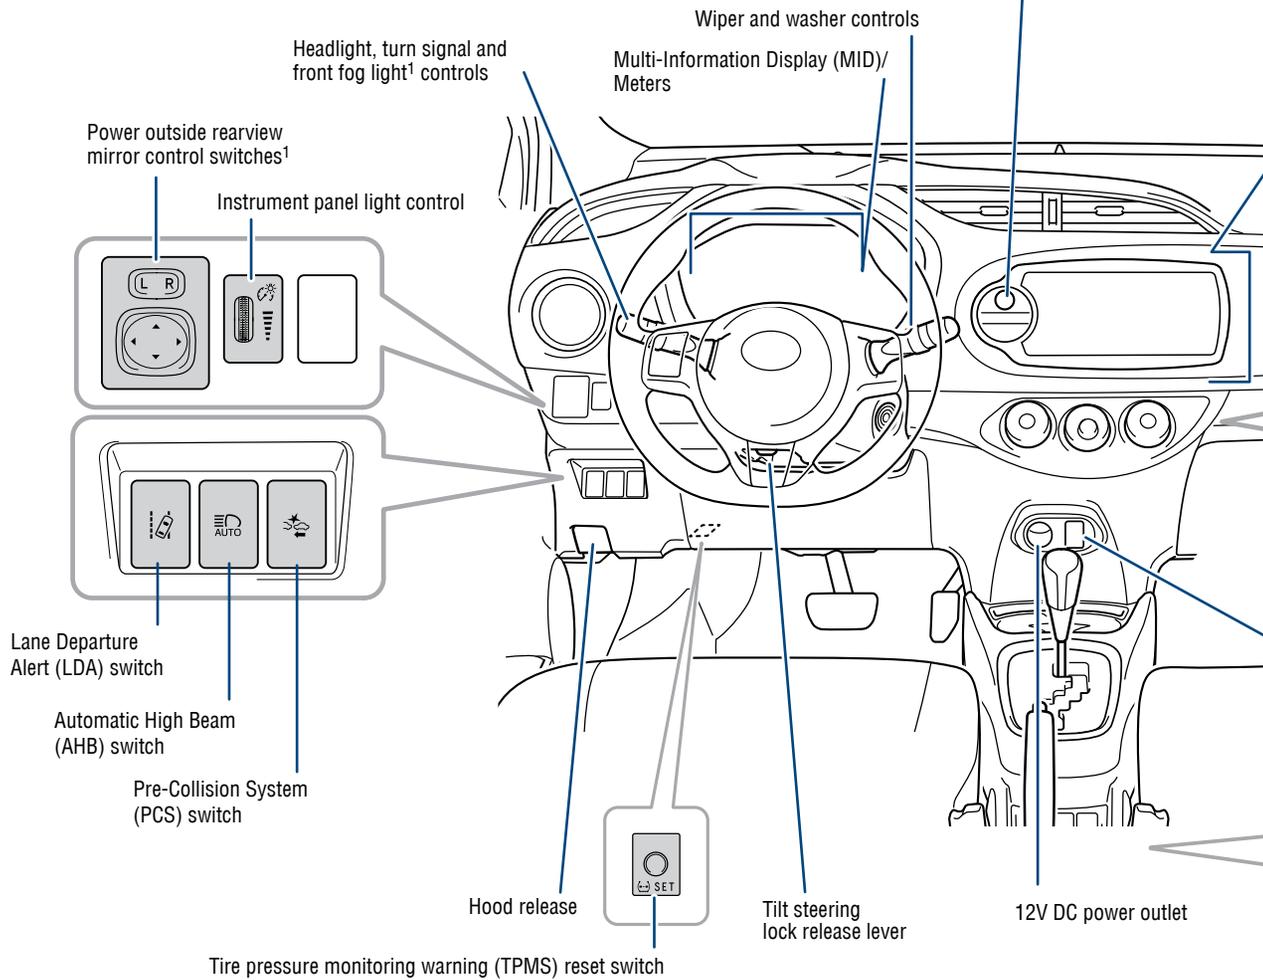

Automatic air conditioning/heating controls

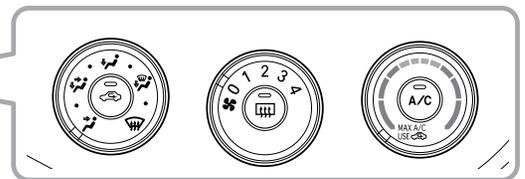


USB port/AUX port

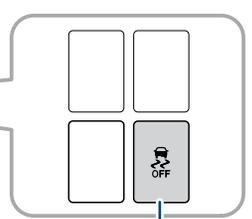

VSC off switch

Instrument cluster

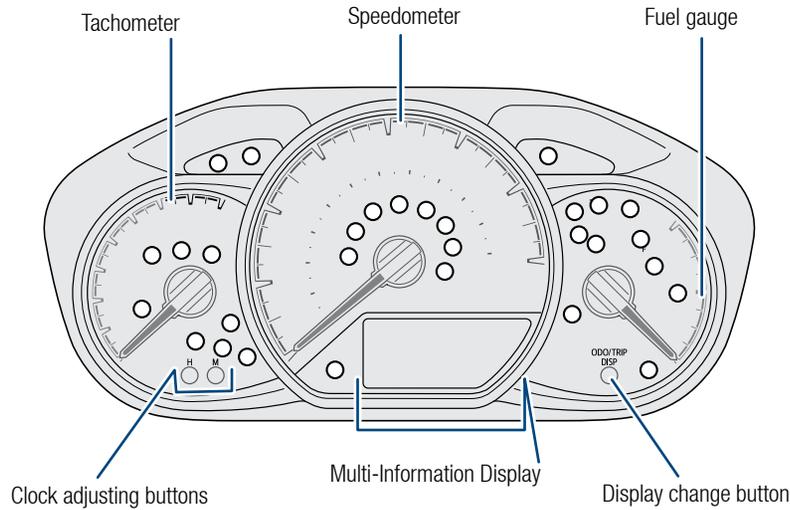

Instrument symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2018 Owner's Manual.

	AIR BAG ON indicator
	AIR BAG OFF indicator ¹
	Anti-lock Brake System warning ¹
	Arrow direction indicates fuel tank door position
	Automatic high beam indicator
	Brake system warning ¹
	Charging system warning ¹
	Cruise control indicator/ Cruise control SET indicator ²
	Seat belt reminder (speeds over 12 mph sounds alarm)
	ECO driving indicator ^{1,4}

	Electric power steering system warning ¹
	Engine coolant temperature warning ¹
	Front fog light indicator
	Headlight high beam indicator
	Lane Departure Alert (LDA) indicator
	Lane marker indicators
	Low engine oil pressure warning ¹
	Low fuel level warning
	Low Tire Pressure Warning ¹
	Low windshield washer fluid warning ³
	Maintenance required warning ¹
	Malfunction/Check Engine indicator ¹
	Open door warning
	Pre-Collision System (PCS) warning ¹
	Pre-Collision System (PCS) activator indicator
	Slip indicator ¹
	SRS warning ¹
	TRAC OFF indicator ¹
	Turn signal indicator
	Vehicle Stability Control (VSC) OFF indicator ¹

¹ If indicator does not turn off within a few seconds of starting the engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.


² If this light flashes, refer to "Cruise control" Section 4-6, 2018 Owner's Manual.

³ If equipped.


⁴ Only vehicles with automatic transmission.

Keyless entry (if equipped)*

LOCKING OPERATION

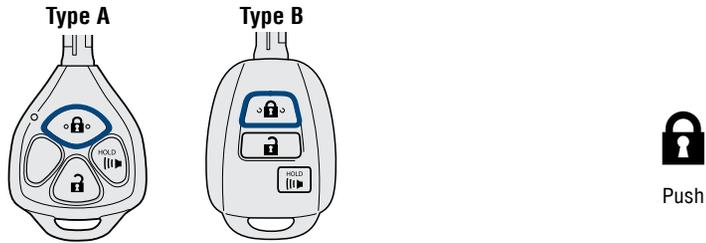


UNLOCKING OPERATION

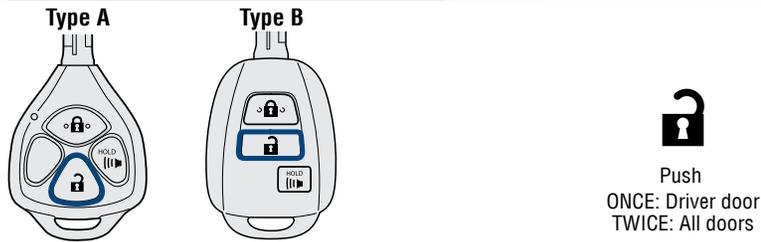


* Engine immobilizer feature if equipped. As an anti-theft feature, the vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer. *Please refer to the Owner's Manual for more details.*

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

PANIC BUTTON

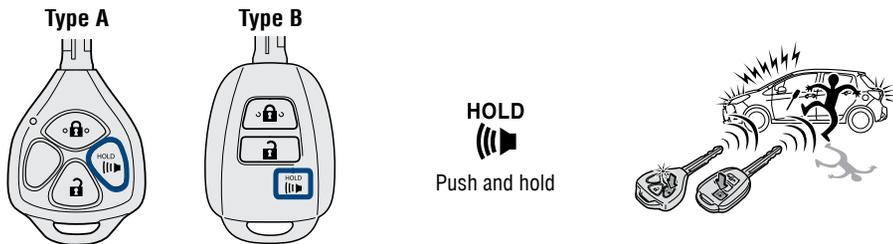

Instrument panel light control

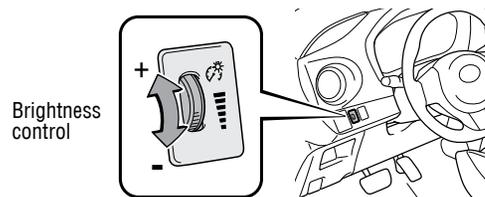


Fuel tank door release and cap




NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check engine  indicator may illuminate.


Hood release

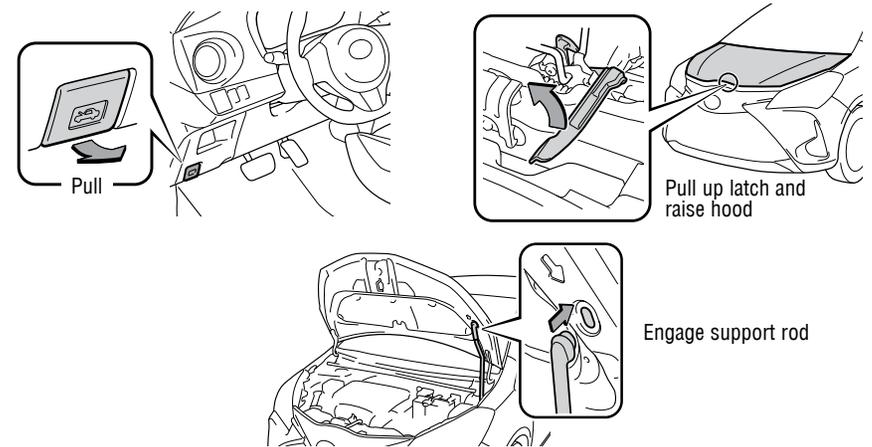

Engine maintenance

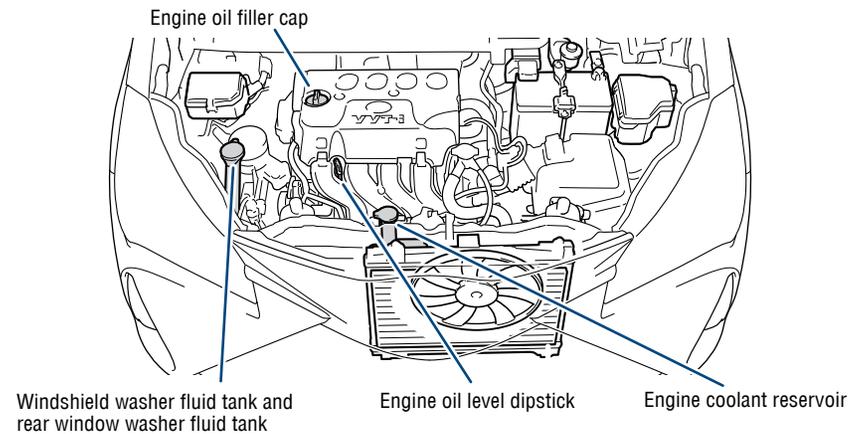


Automatic transmission (if equipped)

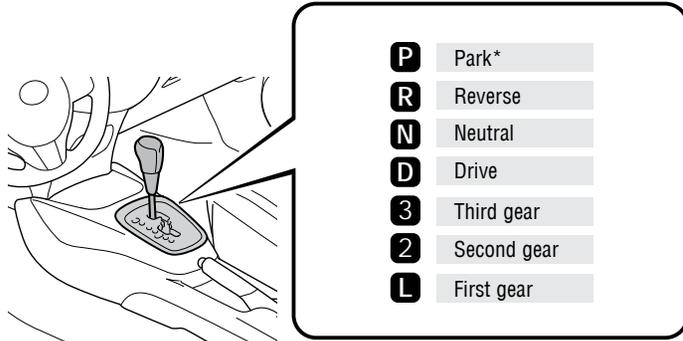

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Manual transmission (if equipped)

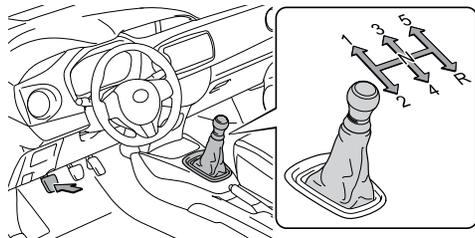


Door-Back door lock/unlock

OPEN/CLOSE

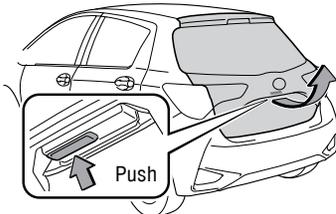


Lights & turn signals

HEADLIGHTS

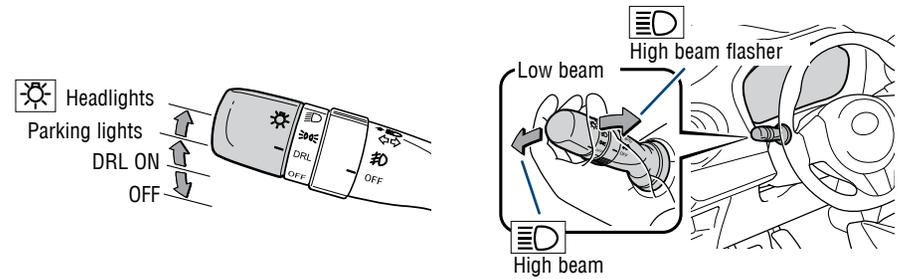


TURN SIGNALS

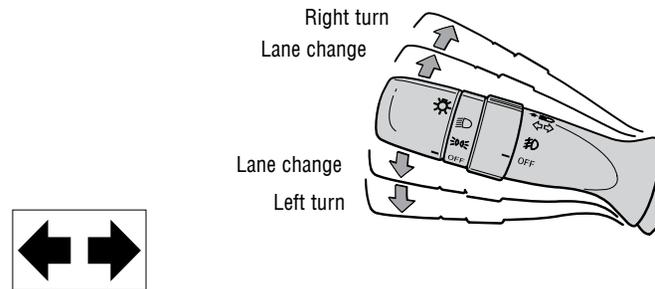

FRONT FOG LIGHTS (IF EQUIPPED)

Type A

Type B

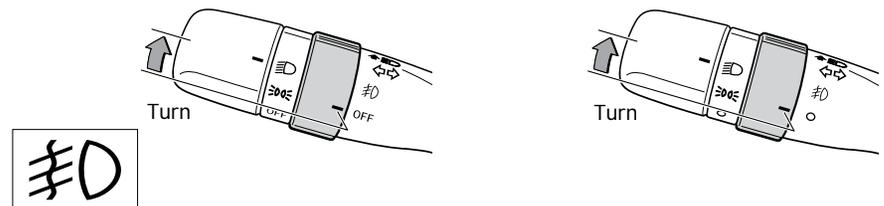


Front fog lights turn on only when the headlights are on low beam.


Windshield wipers & washers

FRONT

Type A

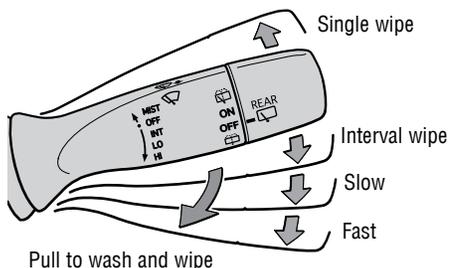


Type B

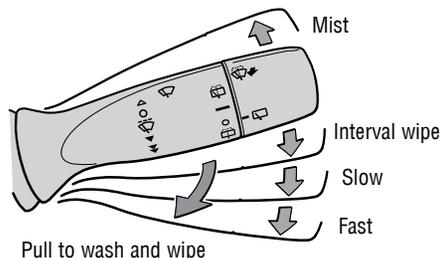


REAR


Type A

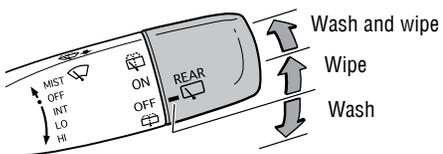

Type B

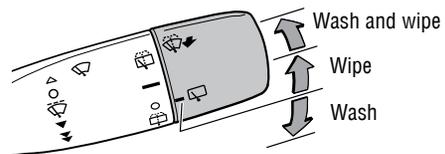


Windows-Power

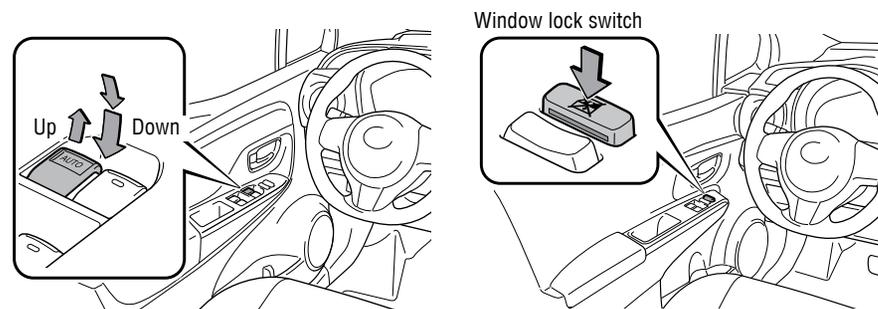

Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop window partway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Tilt steering wheel

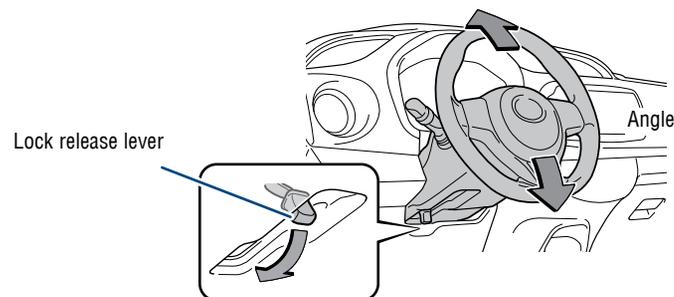


Hold wheel, push lever down, set angle and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

Set

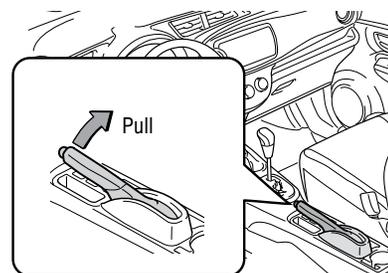


Release

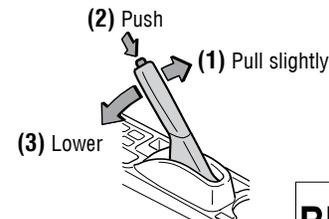

BRAKE

Cruise control (if equipped)

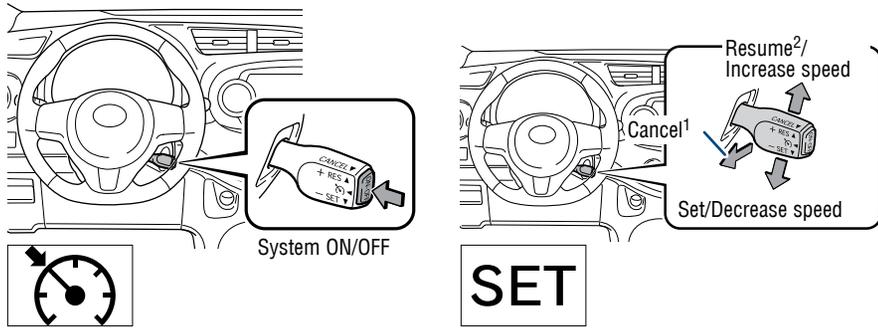


¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (manual transmission).

² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.


Refer to the Owner's Manual for more details.

Seat adjustments-Front



Driver seat

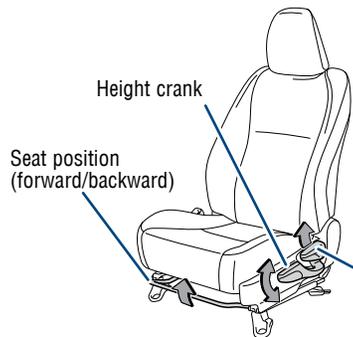


Passenger seat

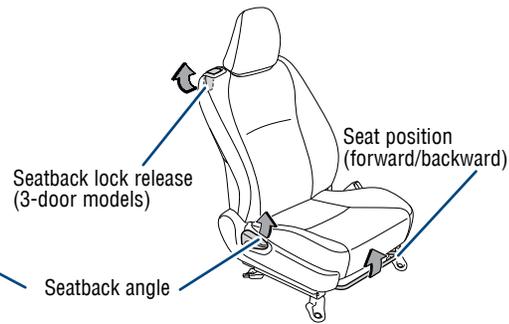

Seats Folding-Rear

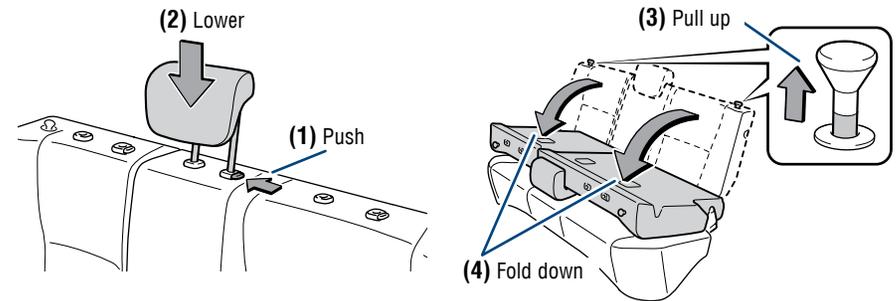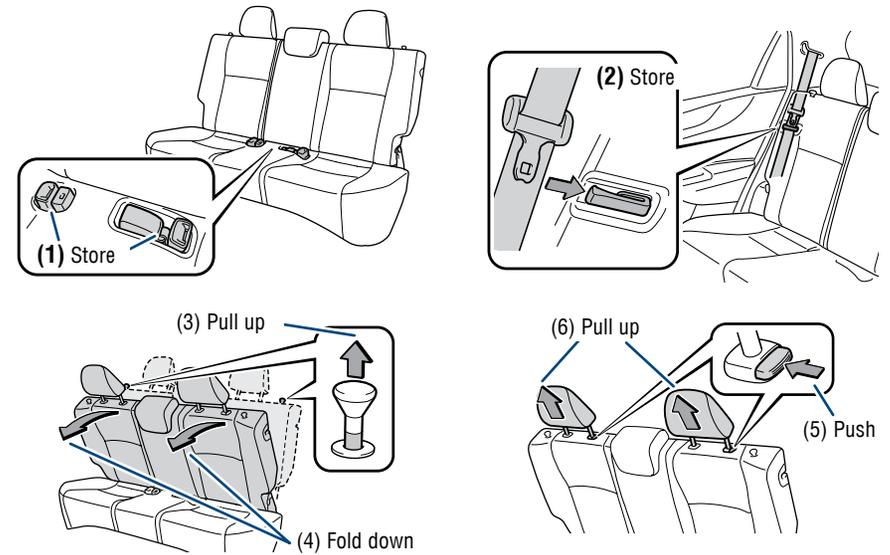


Seats-Head restraints

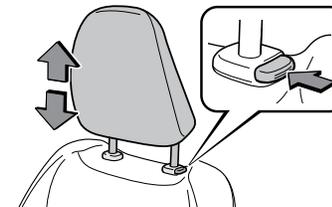


Air conditioning/heating

WITH AIR CONDITIONING ON/OFF BUTTON

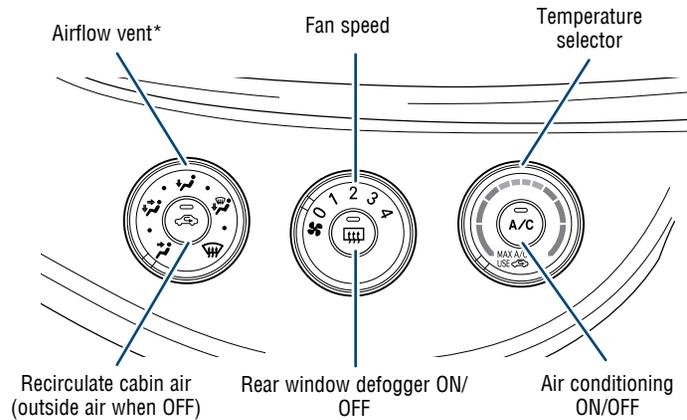

*“” mode uses outside air to reduce window fogging


Multi-Information Display (MID) (if equipped)

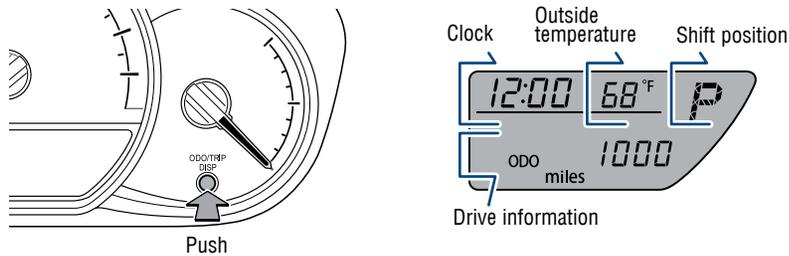

Push button to change information in the following succession (shown in box indicated above):

- (1) Odometer
- (2) Trip meters
- (3) Miles left on remaining fuel (RANGE/MI)
- (4) Average gas mileage (AVG/MPG)
- (5) Current gas mileage (MPG)
- (6) Average vehicle speed from engine start (AVG/MPH)

Rear view monitor system

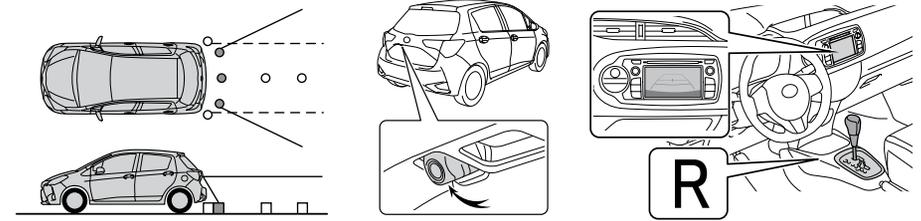


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.


To adjust the image on the rear view monitor screen, press the “SETUP” button and select “Display” on the “Setup” screen. Select “Camera” to adjust the screen contrast and brightness.

Refer to the Owner's Manual for limitations and more details on this system.


Clock

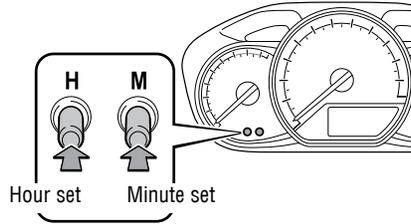

Door locks-Power

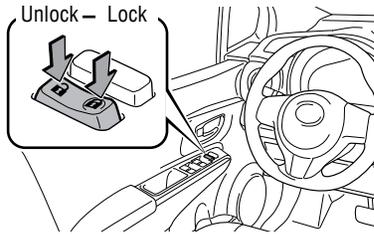


Power outlet

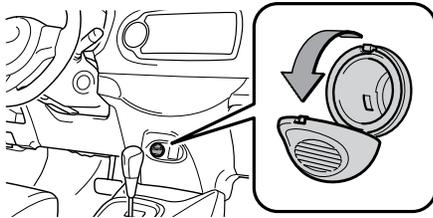

Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.

Steering wheel switches

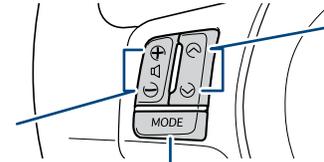


-In radio mode Push to select a preset station; push and hold to seek the next strong station.

-In CD mode Push to skip up or down to a next/previous track.¹

Push to turn audio ON and select an audio mode.
Push and hold to turn the audio system OFF.


¹ If equipped.

USB/AUX port

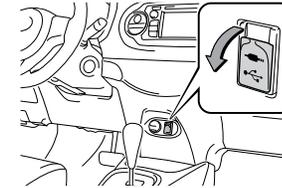


Audio

ENTUNE™ AUDIO

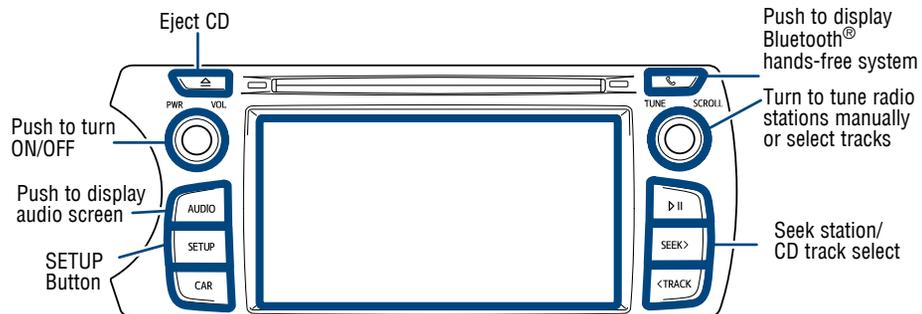

ENTUNE™ AUDIO PLUS WITH CONNECTED NAVIGATION APP

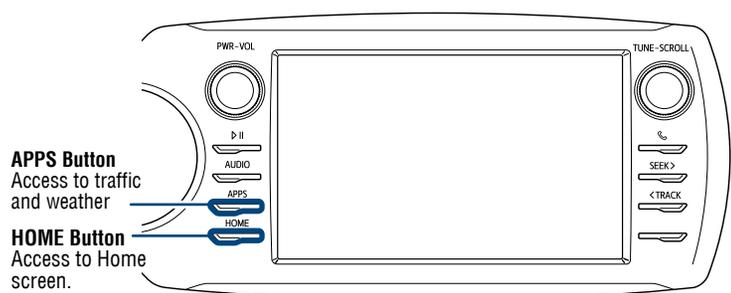

HOME SCREEN - The home screen offers a two and three panel layout. Information and layout will vary depending on selected set up.

Refer to the "Navigation System Owner's Manual" or the "2018 Entune® Audio Quick Reference Guide" for more details.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.



TOYOTA SAFETY SENSE

Quick overview-Toyota Safety Sense™ C (TSS-C)


Toyota Safety Sense™ C (TSS-C) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS-C is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to <http://www.toyota.com/safety-sense>.



Pre-Collision System (PCS)

PCS is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

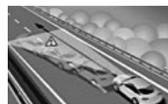

Lane Departure Alert (LDA)

LDA is designed to provide notification when the system detects an unintended lane departure.




Auto High Beams (AHB)


AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.

Sensors

TSS-C combines an in-vehicle camera and laser mounted in front of the inside rear view mirror. These sensors support the driver assist systems.

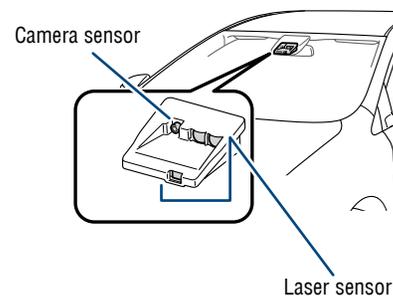

Pre-Collision System (PCS)

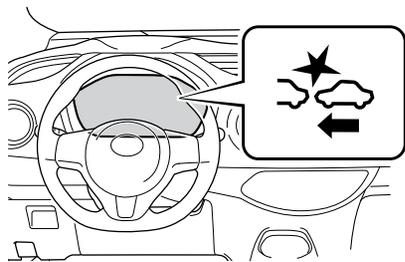

The Pre-Collision System uses a laser sensor and camera sensor to help detect vehicles in front of your vehicle.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle may not be detected by the laser and camera sensors, preventing the system from operating or engaging properly.

Refer to a Toyota Owner's Manual for a list of additional situations in which the system may not operate properly.

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist


If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.

Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.


Refer to the Toyota Owner's Manual for additional information on PCS operation, settings adjustments, limitations, and precautions before attempting to use it.

CHANGING THE PRE-COLLISION WARNING TIMING

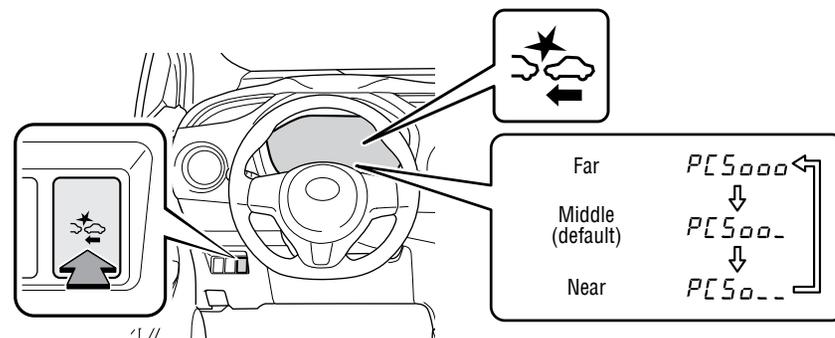

Each time the Pre-Collision System switch is pressed, the response to the warning distance changes.

DISABLING THE PRE-COLLISION SYSTEM (PCS)

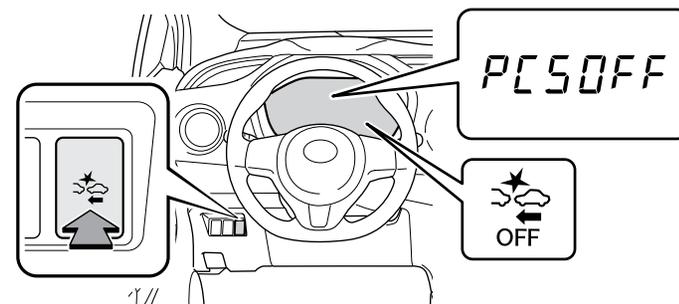

To disable the system

Press the PCS switch for 3 seconds or more.

The PCS warning light will turn on and a message will be displayed on the Multi-Information Display (MID).


To enable the system

Press the PCS switch again.

The system is enabled each time the engine switch is turned to IGNITION ON mode.

Refer to the Owner's Manual for limitations and more details on this system.


Lane Departure Alert (LDA)

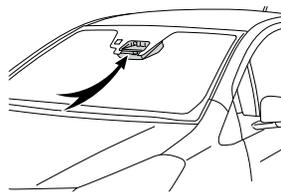

LDA in TSS-C uses an in-vehicle camera designed to detect visible white and yellow lane markers in front of the vehicle and the vehicle's position on the road. If the system determines that the vehicle is starting to unintentionally deviate from its lane, the system alerts the driver with an audio and visual alert. When the alerts occur, the driver must check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center part of their lane.

LDA is designed to function at speeds of approximately 32 MPH or higher on relatively straight roadways with a lane width of more than 9.8 ft.

TURNING ON THE LDA SYSTEM

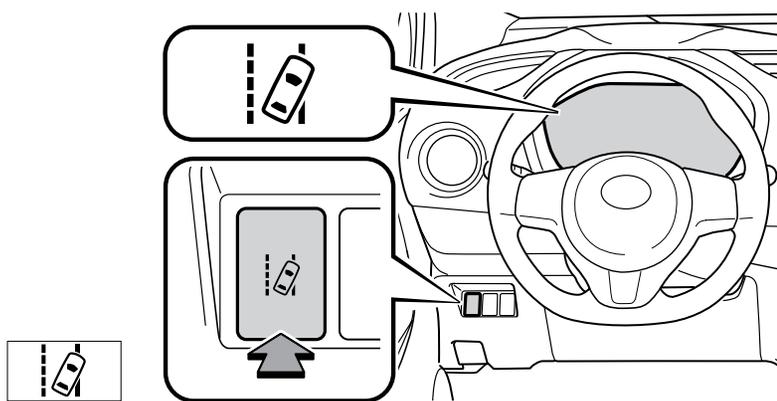


Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.


Refer to the Toyota Owner's Manual for additional information on LDA operating conditions, system operation, settings adjustments, limitations, and precautions before attempting to use it.

LDA FUNCTIONS

LDA function display

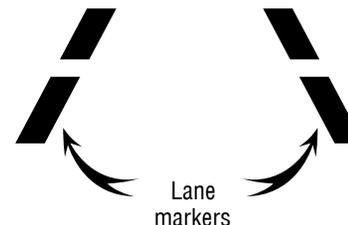

Lane Departure Alert (LDA) and lane marker indicators illuminate green when the system is turned on.*

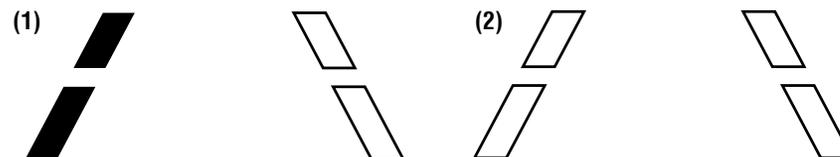

(1) The lane marker indicators display solid green on the side that visible lane markers on the road are detected. If the vehicle deviates from the lane, the lane marker indicator will flash in yellow.


(2) The system does not display lane marker indicators when lane markers on the road are not detected or the function is temporarily cancelled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

Refer to the Toyota Owner's Manual for additional information on LDA operating conditions, system operation, settings adjustments, limitations, and precautions before attempting to use it.

* A yellow LDA indicator indicates a malfunction and should be inspected by your Toyota dealer.

Auto High Beams (AHB)

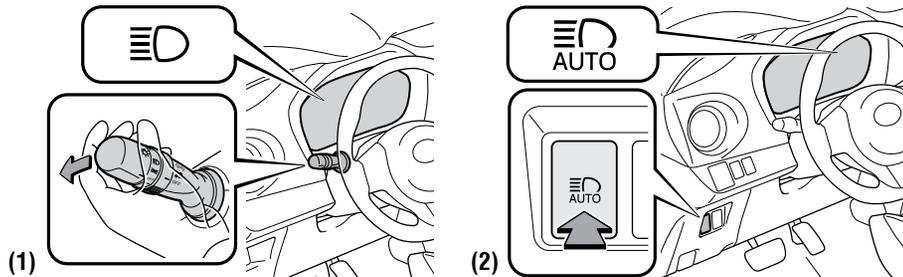

AHB is a safety system designed to help drivers see more of what's ahead at nighttime without dazzling other drivers. When enabled, AHB uses an in-vehicle camera to help detect the headlights of oncoming vehicles and tail lights of preceding vehicles, then automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. By using high beams more frequently, the system may allow earlier detection of pedestrians and obstacles.

Refer to the Toyota Owner's Manual for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

(1) With the engine switch in IGNITION ON mode and headlight switch turned to  position, push lever away from you.

(2) Depress the Automatic High Beam "AUTO" switch.

The  indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you to turn the AHB system off.

The  indicator will turn off and the high beam indicator turns on.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 25 mph (40 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.


If any of these conditions occur, high beams will be automatically turned off:

- Vehicle speed drops below approximately 19 mph (30 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

Refer to the Owner's Manual for limitations and more details on this system.


Doors-Child protector rear door locks

Rear door
(5-door models only)

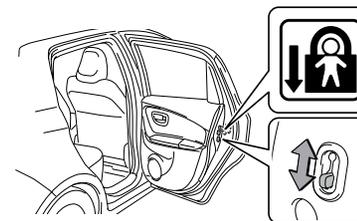

Moving the lever to downward will allow the door to be opened only from the outside.


Seat belts

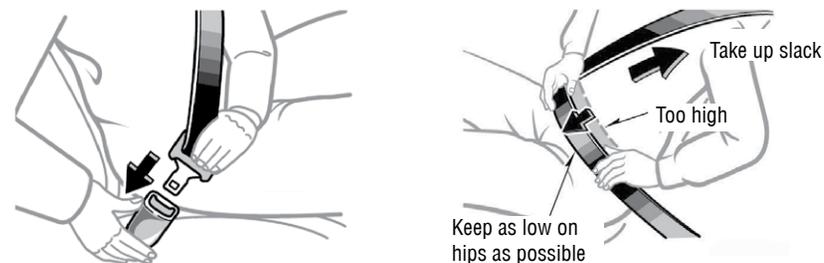

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

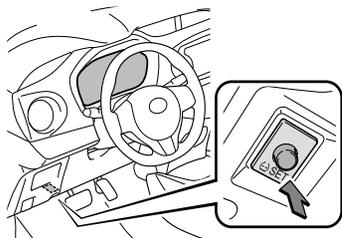

System reset initialization


1. Push and hold “ SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

If tire pressure becomes critically low on any of the tires (excluding the spare), “” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the Owner's Manual for more details.

Spare tire & tools

TOOL LOCATION

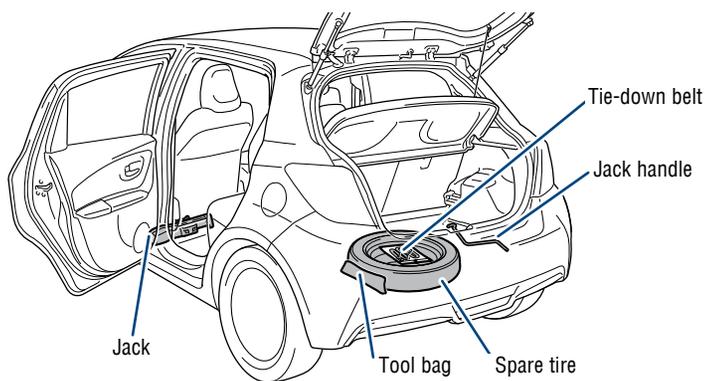

REMOVING THE SPARE TIRE

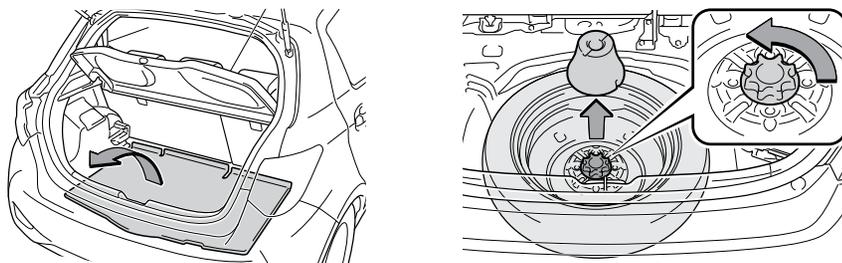

Refer to the Owner's Manual for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

SAFETY & EMERGENCY FEATURES

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.


Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

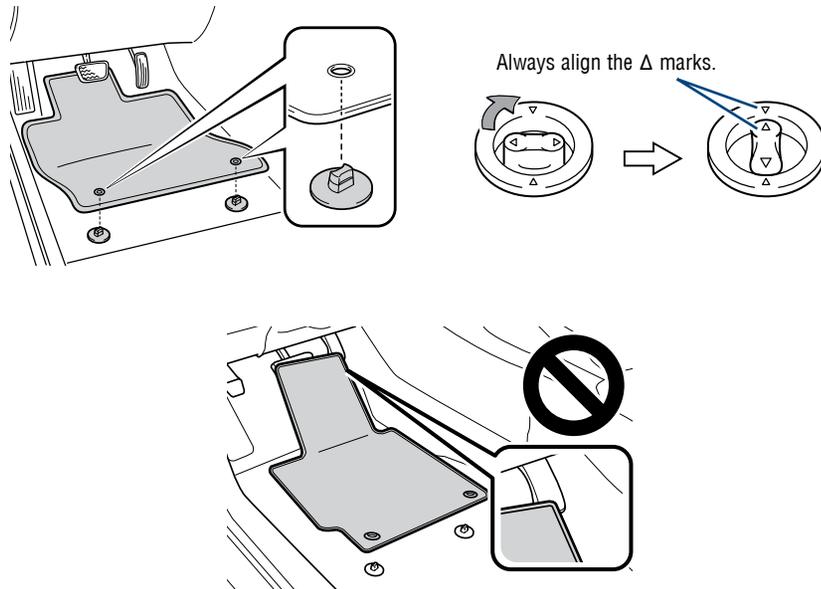

BLUETOOTH® DEVICE PAIRING

Pairing a Bluetooth® Device

**** Do not attempt the Bluetooth® Pairing process while driving. ****

Setup multimedia system for pairing

1. Press the "SETUP" button if you have Entune® Audio or press the "Home" button if you have Entune® Audio Plus.
* Please refer page 18 to determine which audio system you have.
2. Select the "Setup" icon in the upper right corner of the display.
3. Select "Bluetooth".

Pairing your phone

1. Make sure Bluetooth is ON
2. Select your "Multimedia System Name" from the list.
3. Select "Yes" on the multimedia system.
4. Select the vehicle name Toyota Yaris displayed on your phone. Also, if a PIN# is required, enter it now.
5. The system displays "Bluetooth pairing was successful". Select "OK".
6. The system displays connected devices. Select "OK".

* For more details, go to "<http://www.toyota.com/connect/>" or see the Owner's Manual.

