



PRIUS C

2 0 1 9



QUICK REFERENCE GUIDE

2019

PRIUS *c*

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Prius *c*.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Prius *c* operations. Every Prius *c* owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless entry ^{1,2}	6
Smart Key system ^{1,2}	7

FEATURES & OPERATIONS

Air conditioning/heating	16
Audio	18
Auto lock/unlock ^{1,2}	17
Clock	19
Cruise control	20
Door locks	17
Drive mode	11
Hill-start Assist Control (HAC)	23
Hybrid Synergy Drive System	10
Hybrid transmission	11
Lights ^{1,2} & turn signals	14
Multi-Information Display (MID) ¹	21
Parking brake	20
Power outlet-12V DC	18
Rear view monitor system	23
Seat adjustments-Front	12
Seat-Folding down rear seat	13
Seats-Head restraints	12
Steering lock release	13
Steering wheel switches & telephone controls (Bluetooth®)	22
Tilt & telescopic steering wheel	21
Vehicle Stability Control (VSC)/ TRAC OFF switch	23
USB media/AUX port	19
Windows-Power	13
Windshield wipers & washers	15

TOYOTA SAFETY SENSE™ C (TSS-C)

Automatic High Beams (AHB)	29
Lane Departure Alert (LDA)	27-28
Pre-Collision System with Pedestrian Detection (PCS w/PD)	25-27
Quick overview-	
Toyota Safety Sense™ C (TSS-C)	24
Sensors	24

SAFETY & EMERGENCY FEATURES

Floor mat installation	33
Rear door child safety locks	31
Seat belts	30
Spare tire & tools	31
Star Safety System™	32-33
Tire Pressure Monitoring (warning) System (TPMS)	30



BLUETOOTH® DEVICE PAIRING SECTION

34-43

¹ Visit your Toyota dealer for information on customizing this feature.



² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

Instrument panel

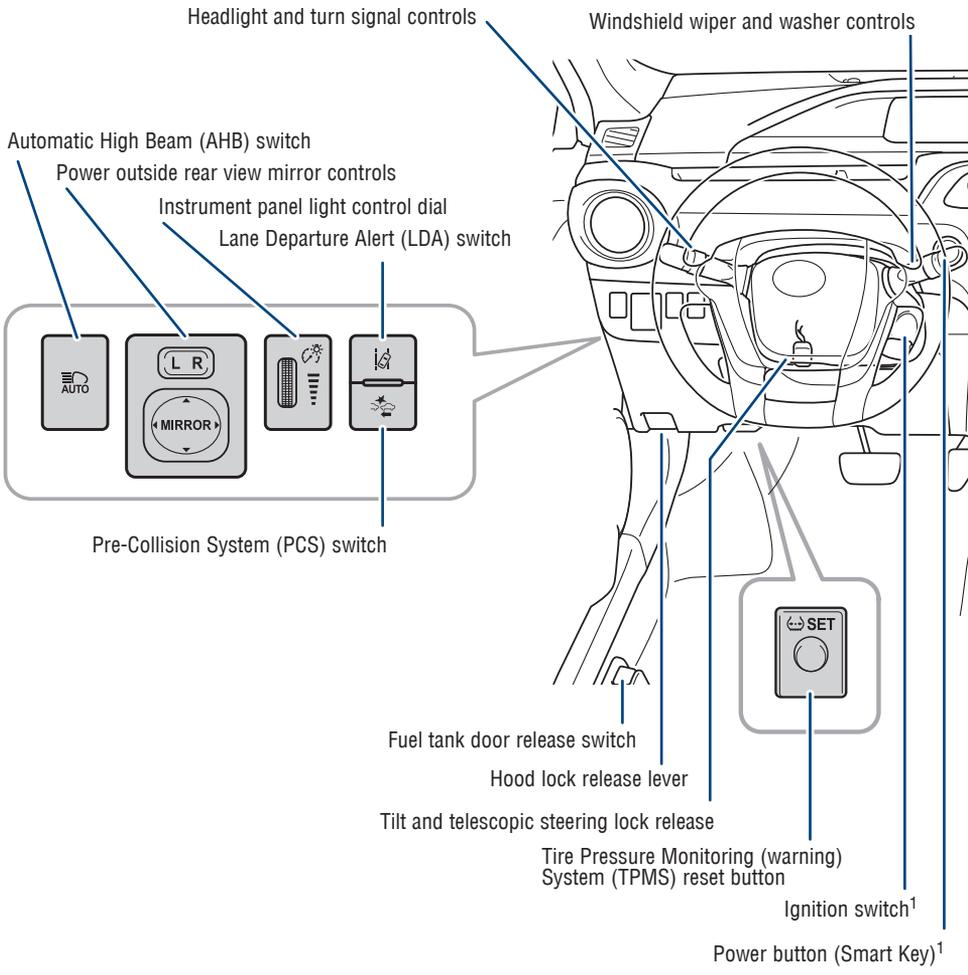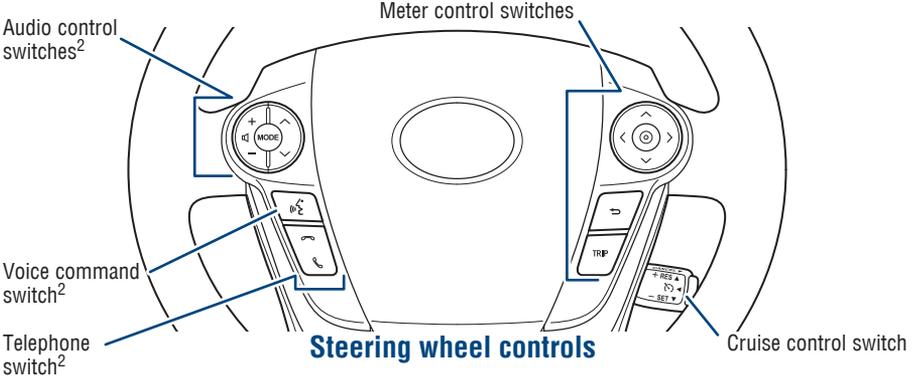


¹ If equipped.

² For details, refer to the “Navigation and Multimedia System Owner’s Manual” and “2019 Entune™ Audio Quick Reference Guide.”

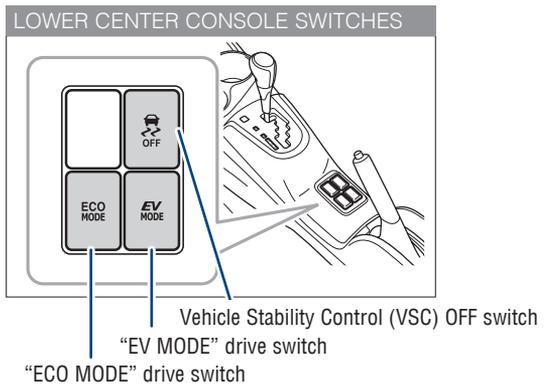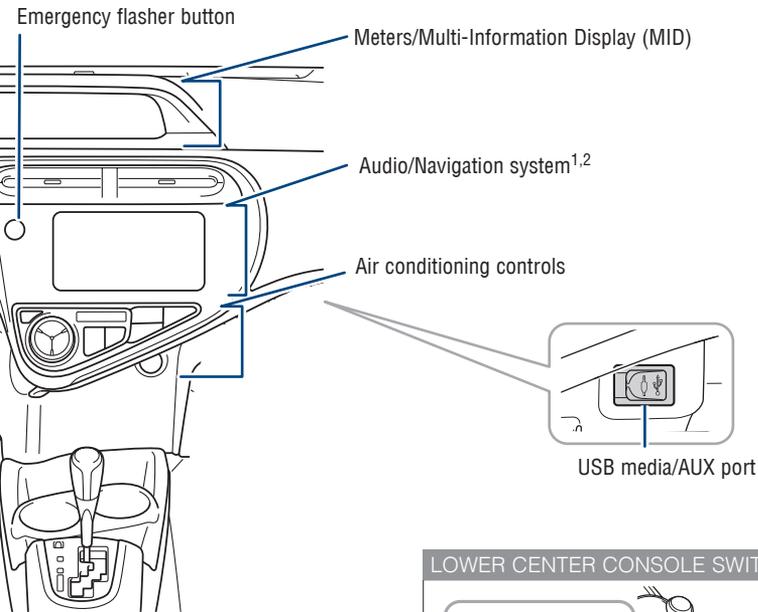

Instrument cluster

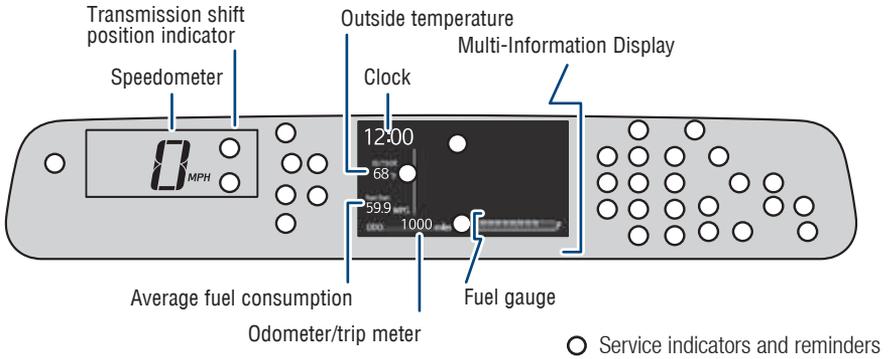

Indicator symbols

For details, refer to "Indicators and warning lights," Section 2, 2019 Owner's Manual.

-  AIR BAG ON/OFF indicator¹
-  Airbag SRS warning¹
-  **ABS** Anti-lock Brake System (ABS) warning¹
-  Arrow direction indicates fuel tank door position
-  **AUTO** Automatic High Beam (AHB) indicator¹
-  **BRAKE** Brake system warning¹
-  Brake system warning light (yellow indicator)¹
-  **SET** Cruise control/cruise control "SET" indicators
-  Driver and/or front passenger seat belt reminder (alarm will sound if speed is over 12 mph)

	Eco Mode indicator
	Electric power steering system warning ¹
	EV drive indicator
	EV Drive Mode indicator
	Headlight low/high beam indicator
	Immobilizer system indicator
	Lane Departure Alert (LDA) indicator
	Low fuel level warning
	Low outside temperature indicator
	Low tire pressure warning ¹
	Malfunction/Check Engine indicator ¹
	Master warning ^{1,2}
	Parking brake warning
	Pre-Collision System (PCS) warning ^{1,2}
	READY indicator
	Shift position indicator
	Slip indicator/Hill-start Assist Control indicator ^{1,3}
	Turn signal indicator
	Vehicle Stability Control (VSC) OFF indicator ¹

¹ If the indicator does not turn off within a few seconds of starting the Hybrid system, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.

OVERVIEW


Keyless (and remote) entry

UNLOCKING OPERATION




NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION

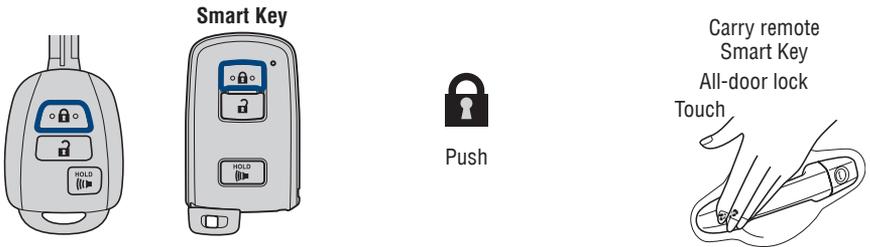

BACK DOOR LOCKING/UNLOCKING

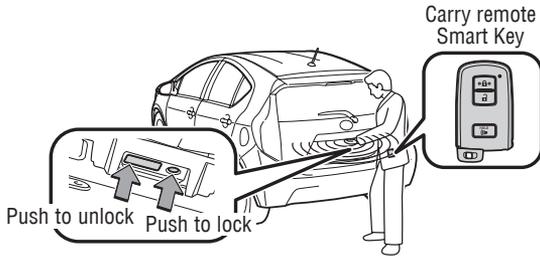

PANIC BUTTON




* Driver door unlocking function can be programmed to unlock driver door only, or all doors. In some models, grasping front passenger door handle will unlock all doors. *Please refer to the Owner's Manual for more details on how to program the doors.*

NOTE: Doors may also be locked/unlocked using remote.

Smart Key system (if equipped)

START FUNCTION


READY

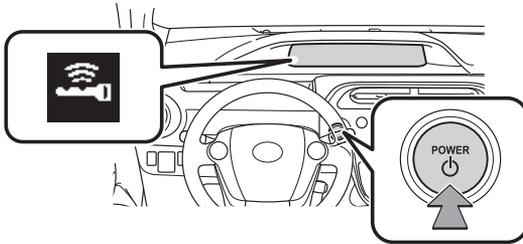


NOTE: The smart key must be carried to enable the start function. With the Park position selected and the brake pedal depressed, push the “POWER” switch.

POWER (WITHOUT STARTING HYBRID SYSTEM)

Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

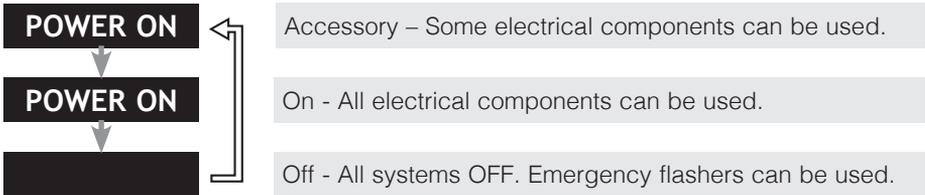


Fuel tank door release & cap

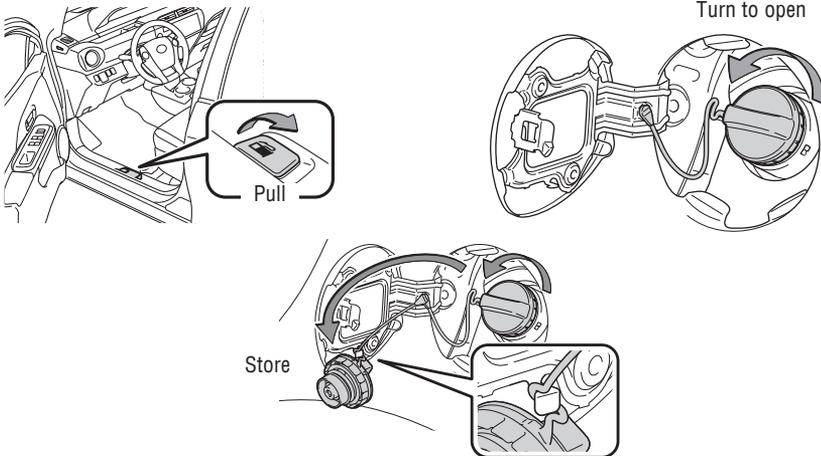


NOTE: Tighten until one click is heard. If the cap is not locked or tightened, Check Engine “” indicator may illuminate.

Hood release

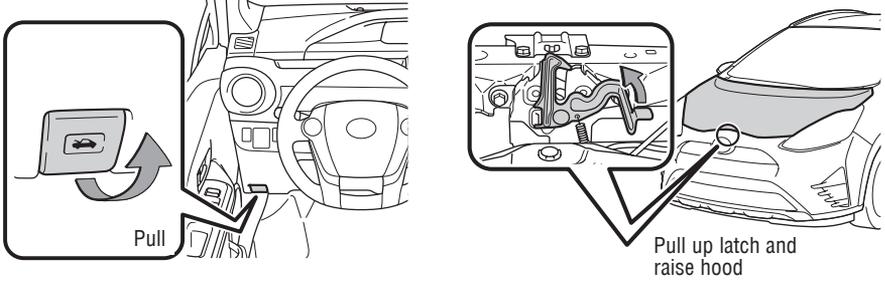


Instrument panel light control

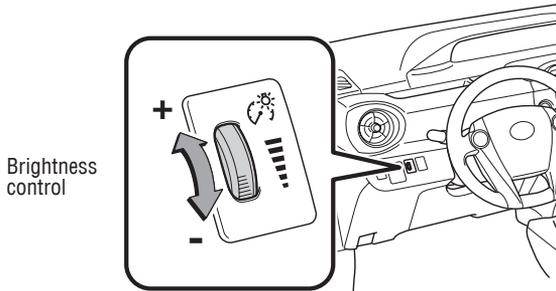

Engine maintenance

Windshield washer fluid tank

Engine oil filler cap

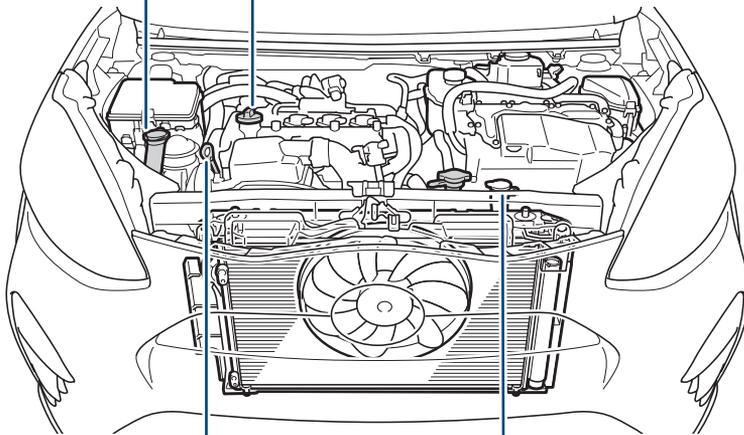

Engine oil level dipstick

Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

Maintenance reset light instructions can be found in “Maintenance Requirements Chapter” in Owner’s Manual.

FEATURES & OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied the braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the multi-information display or the Display Audio System.

TIPS FOR IMPROVED FUEL ECONOMY


- Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- When possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

STARTING THE HYBRID SYSTEM

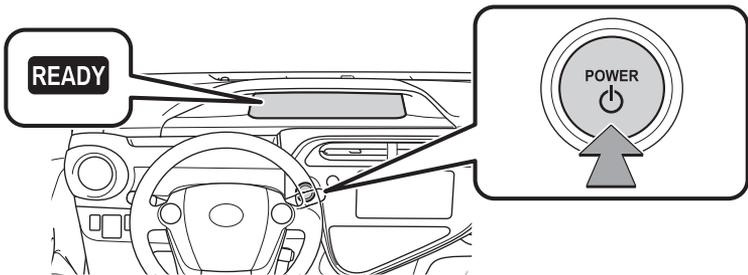

- (1) Put the shift lever in Park.
- (2) Vehicles with Smart Key system:
Depress the brake pedal, and press the "POWER" switch briefly and firmly.
Vehicles without Smart Key system:
Depress the brake pedal, and turn the key to the "START" position.
- (3) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.

Hybrid transmission

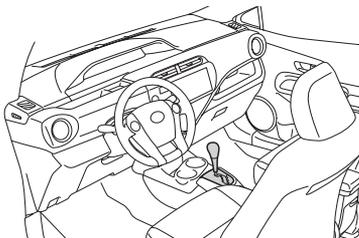


P	Park ¹
R	Reverse
N	Neutral
D	Drive
B	Engine brake ²

¹ The “POWER”/ignition switch must be “ON” and the brake pedal depressed to shift from Park.

² The engine brake is the equivalent of downshifting. Shift to “B” when engine braking is desired (e.g. downhill driving, coasting to a stop).

Drive mode

ECO MODE

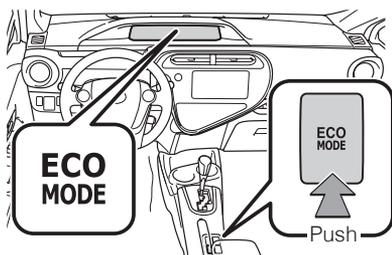


**ECO
MODE**

Eco Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

Refer to the Owner's Manual for more details.

EV MODE

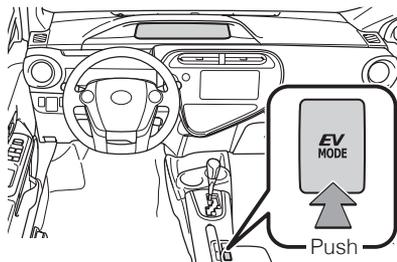


**EV
MODE**

EV Drive Mode allows the electric motor (traction motor), powered by the hybrid battery (traction battery), to be used to drive the vehicle under certain driving conditions.


FEATURES & OPERATIONS

Seats-Head restraints


FRONT (ADJUSTABLE TYPE)/REAR CENTER

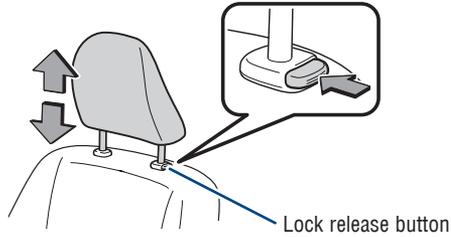

REAR OUTBOARD

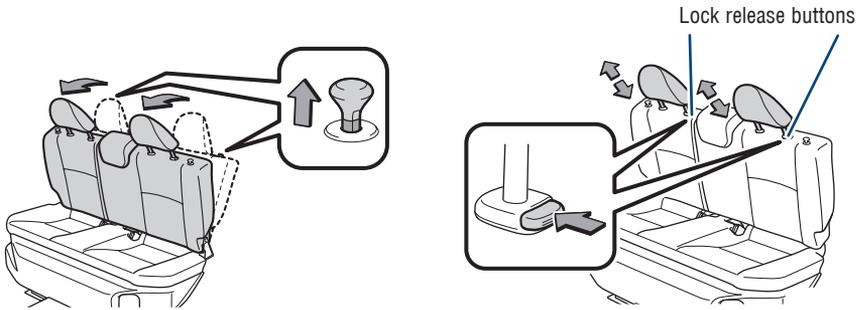


Seat adjustments-Front

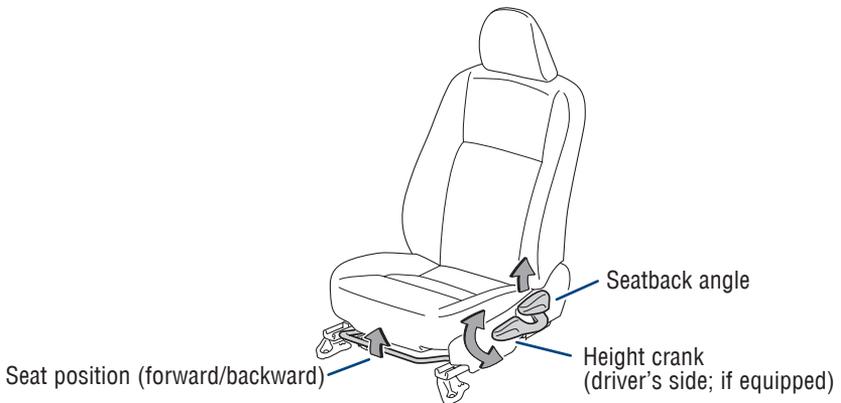


Seat-Folding down rear seat

SPLIT REAR SEATS

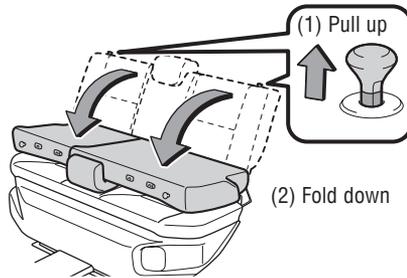


Steering lock release

Without Smart Key system

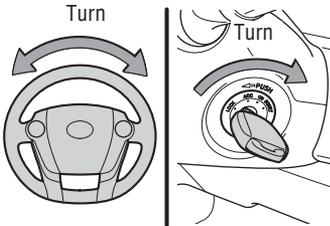

When starting the hybrid system, the power switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly left and right.


With Smart Key system

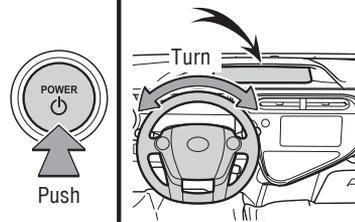

"STEERING LOCK ACTIVE" will be displayed on the multi-information display. Check that the shift lever is set in P. Press the power switch while turning the steering wheel left and right.


Windows-Power

Driver side

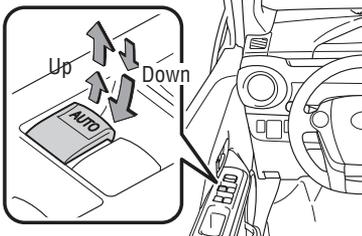

Automatic operation (driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

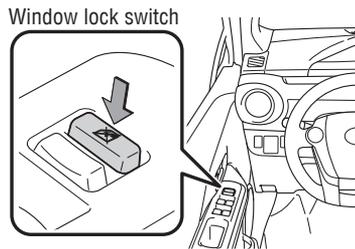

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS

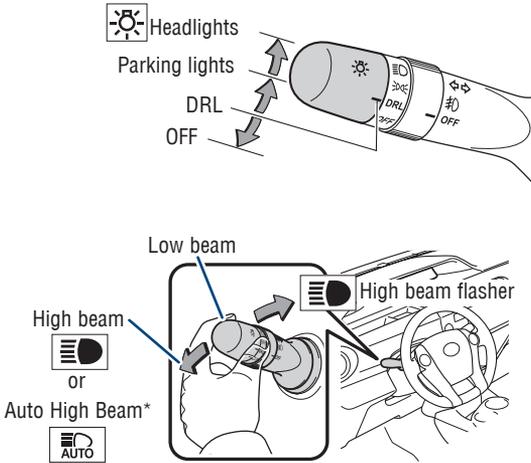

Daytime Running Light (DRL) system Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night.


Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

Automatic High Beam (AHB) system Automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility.

Refer to *Toyota Safety Sense™ C (TSS-C)* in this guide or the *Owner's Manual* for more details on the *Automatic High Beam* feature.


* Operating conditions must be met. Refer to *Owner's Manual* for details.

TURN SIGNALS

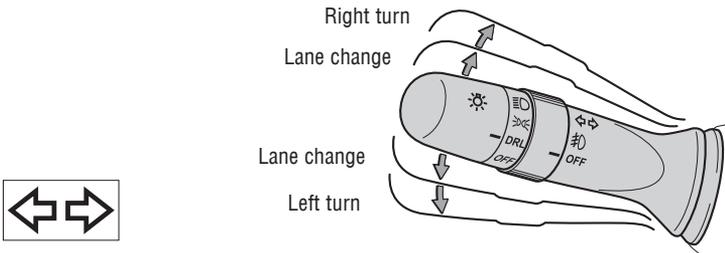


Windshield wipers & washers

FRONT

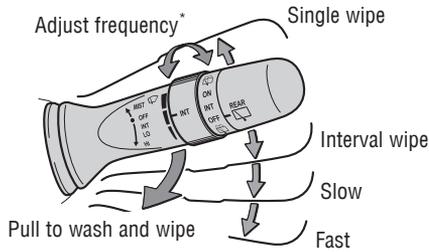

* **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency. (if equipped)

REAR

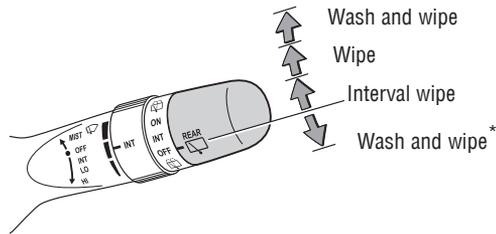


* The wipers will automatically operate a couple of times after the washer squirts.

Air conditioning/heating

Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.

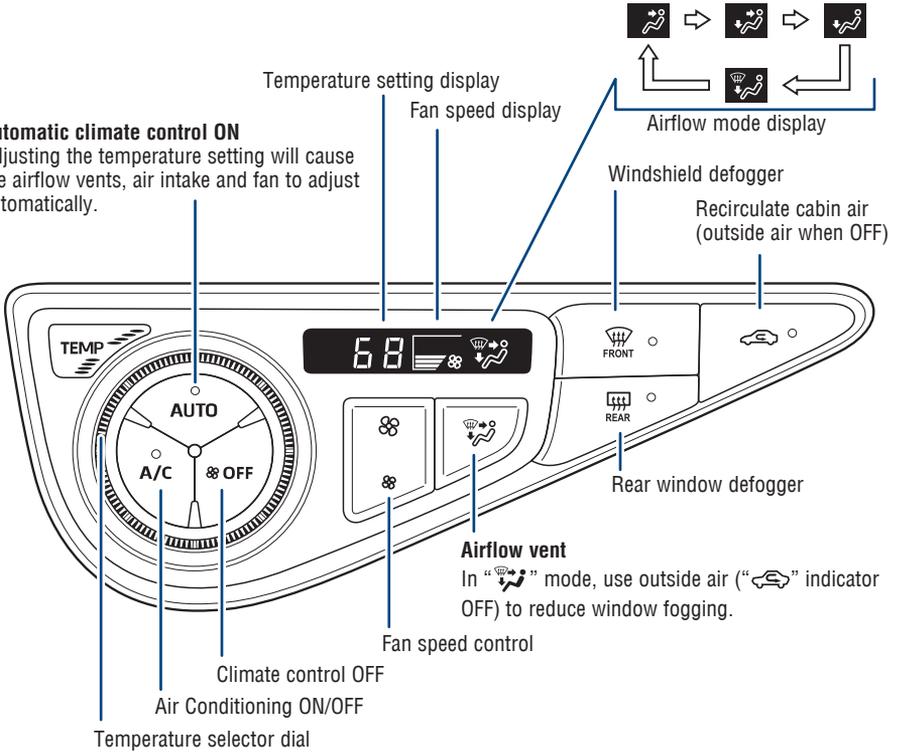

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

Speed linked door locking function


- Doors lock when the vehicle speed goes above approximately 12 mph.

Driver's door linked door unlocking function

- (Vehicles without a Smart Key system) Doors unlock when the driver's door is opened within 45 seconds after the engine switch is set from "ON" to "ACC" or "LOCK".
- (Vehicles with a Smart Key system) Doors unlock when the driver's door is opened within 45 seconds after the "POWER" switch is set to OFF.

Refer to the Owner's Manual for more details.


Door locks

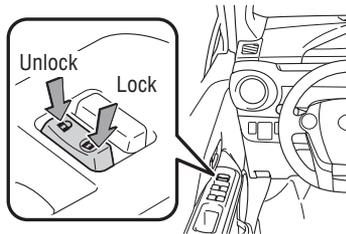


FEATURES & OPERATIONS

Audio

ENTUNE™ AUDIO

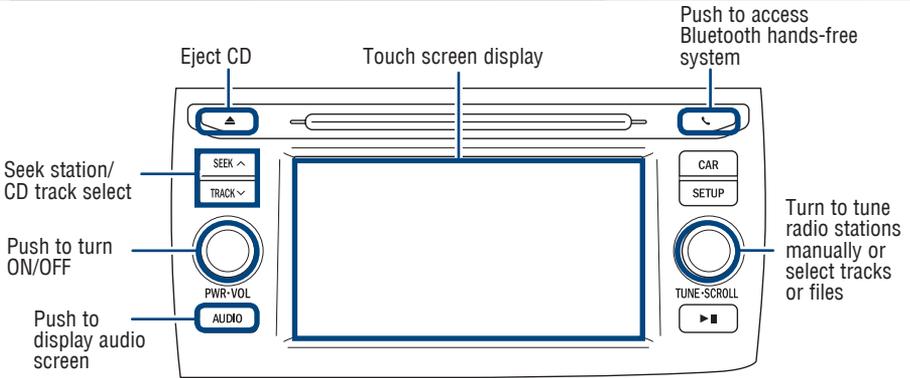


ENTUNE™ PREMIUM AUDIO WITH INTEGRATED NAVIGATION AND APP SUITE

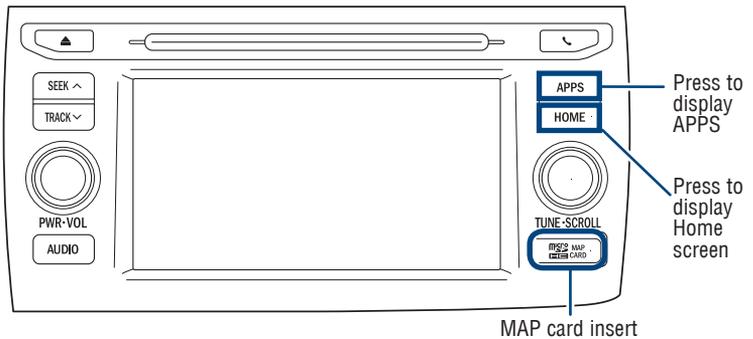


Refer to the “Navigation and Multimedia System Owner’s Manual” and “2019 Entune™ Audio Quick Reference Guide.”

Power outlet-12V DC

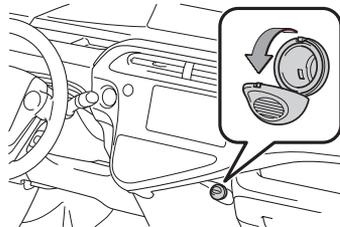

For vehicles with a “POWER” button, make sure vehicle is in “POWER ON” mode. Or, for vehicles with an ignition switch, key must be in the “ACC” or “ON” position for use.

USB media/AUX port

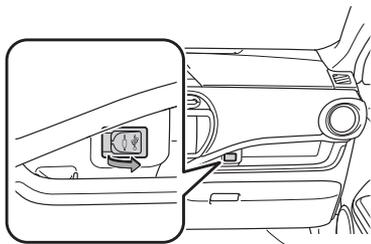

USB media port

By connecting a USB-compatible portable audio device or USB memory stick into the USB media port, you can listen to music through the vehicle's speaker system.

AUX port


By inserting an AUX cable into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Clock

Display



Meter control switches

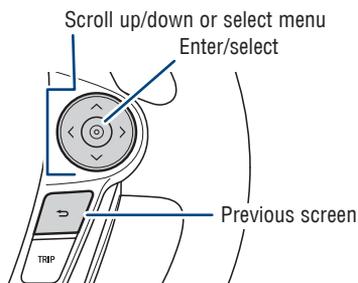


- (1) Press “<” switches and select  from the Multi-Information Display (MID).
 - (2) Press “>” switches and press “⊙” to select Meter Settings screen.
 - (3) Press “⊙” to select Time and date screen.
 - (4) Press “>” switches and press “⊙” to select Clock screen to adjust time.
- You can press “←” to go back to the previous screen at any time.


FEATURES & OPERATIONS

Cruise control

TURNING SYSTEM ON/OFF

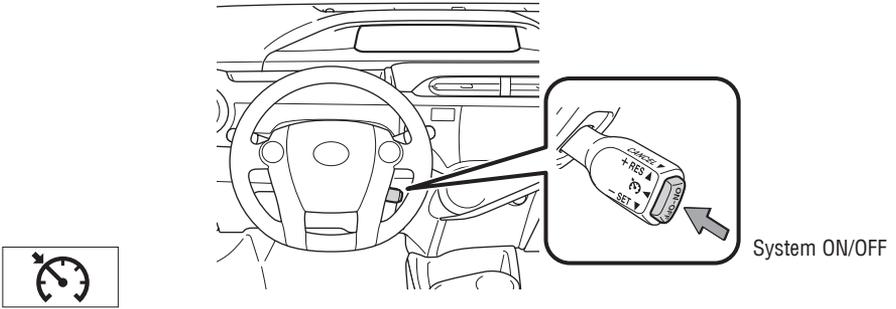

FUNCTIONS

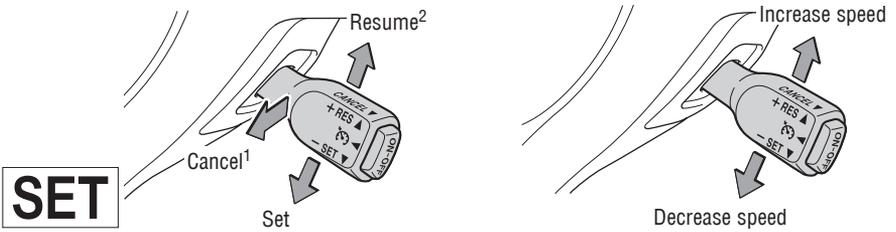


¹ The set speed may also be cancelled by depressing the brake pedal.


² The set speed may be resumed once vehicle speed exceeds 25 mph.

Parking brake



Set

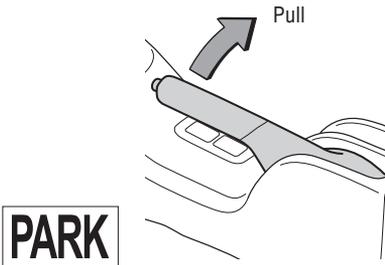

Release

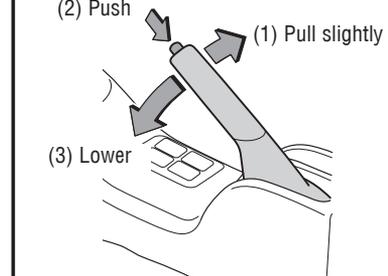

Tilt & telescopic steering wheel

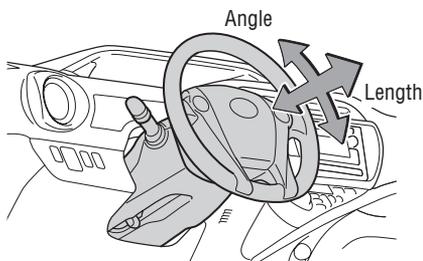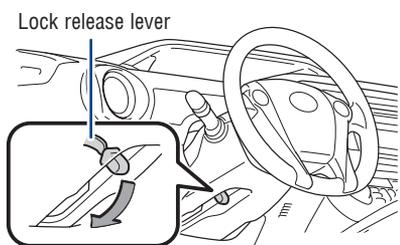


Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Multi-Information Display (MID)

Display

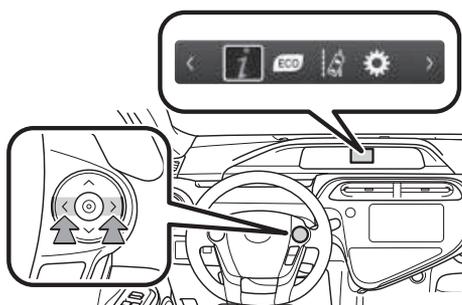

Meter controls

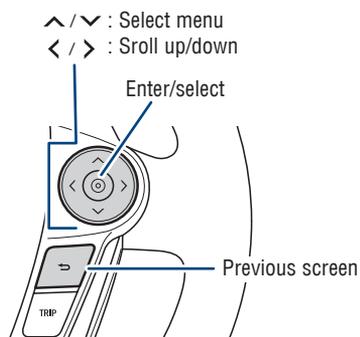

Push “ \wedge / \vee ” or “ \langle / \rangle ” to scroll through the following information screens:

- (1) Drive information
- (2) Settings and screen OFF
- (3) Warning messages
- (4) Menu icons

Menu icons

- Drive information
- ECO fuel consumption information
- LDA operational status
- Settings display

FEATURES & OPERATIONS


Steering wheel switches & telephone controls (Bluetooth®)

Steering wheel telephone switches


“MODE”

Push to change the audio source.

Push and hold to mute or pause the audio.

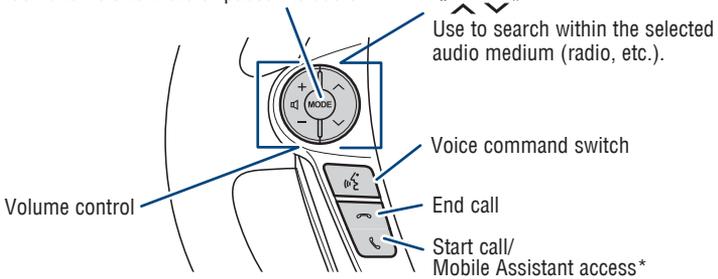

Microphone

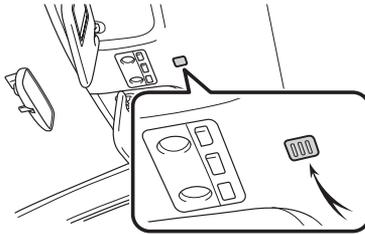

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.



* Push and hold to access Mobile Assistant. When a compatible smartphone is Bluetooth® connected push and hold the off hook switch 2-3 seconds to access Siri® Eyes Free.

Refer to the “Navigation and Multimedia System Owner’s Manual” for more details.

Refer to “Bluetooth® Device Pairing Section” in this guide for more information about phone connections and compatibility.

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.



Hill-start Assist Control (HAC)

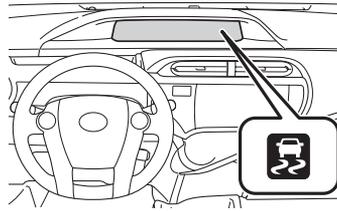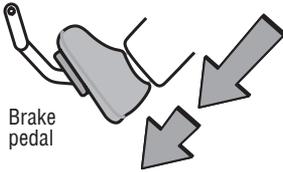

HAC helps prevent rolling backwards on an incline. To engage, push the brake pedal farther down while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately two seconds after releasing brake pedal.

Refer to the Owner's Manual for more details.

Rear view monitor system

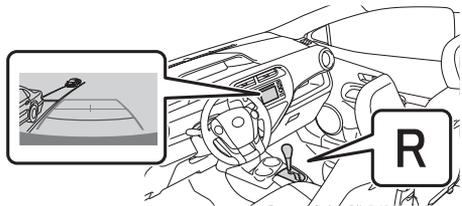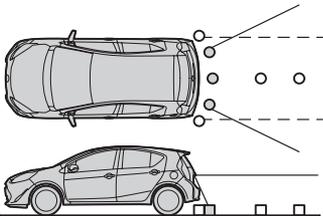


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the "SETUP" button and select "Display" on the "Setup" screen. Select "Camera" to adjust the screen contrast and brightness.

Refer to the Owner's Manual and the Navigation and Multimedia System Owner's Manual for limitations and more details on this system.

Vehicle Stability Control (VSC)/TRAC OFF switch

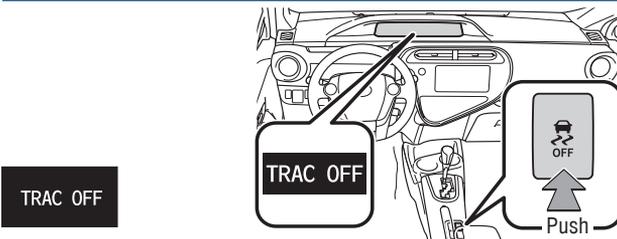

TRAC OFF

The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds.

Refer to the Owner's Manual for limitations and more details.

Quick overview-Toyota Safety Sense™ C (TSS-C)

Toyota Safety Sense™ C (TSS-C) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS-C is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to <http://www.toyota.com/safety-sense>.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

Laser sensors are designed to work with the camera sensor to help recognize a preceding pedestrian, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert (LDA)

LDA is designed to provide notification when the system detects an unintended lane departure.




Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.

Sensors

TSS-C combines an in-vehicle camera and lasers mounted in front of the inside rear view mirror. These sensors support the driver assist systems.

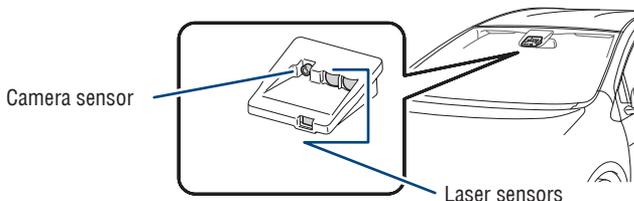

Pre-Collision System with Pedestrian Detection (PCS w/PD)



The Pre-Collision System uses laser sensors and camera sensor to help detect a vehicle or pedestrian in front of your vehicle.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the pre-collision system yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle may not be detected by the laser and camera sensors, preventing the system from operating or engaging properly.

Refer to a Toyota Owner's Manual for a list of additional situations in which the system may not operate properly.

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.

Pre-Collision Braking


If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

TOYOTA SAFETY SENSE™


PEDESTRIAN DETECTION FUNCTION

In certain conditions, the PCS system included with the TSS-C package may also help to detect a pedestrian in front of your vehicle. With Toyota Safety Sense™ C, PCS uses an in-vehicle camera and lasers to help detect a pedestrian in front of your vehicle in certain conditions. The system of PCS detects a potential pedestrian based on size, profile, and motion of the detected pedestrian. However, a pedestrian may not be detected depending on the conditions, including the surrounding brightness and the motion, posture and angle of the potential detected pedestrian, preventing the system from operating or engaging. Refer to a Toyota Owner's Manual for additional information.

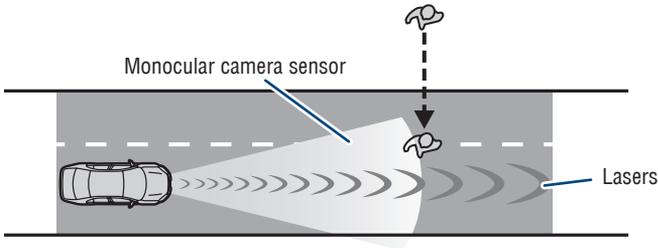

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.


CHANGING PCS ALERT TIMING

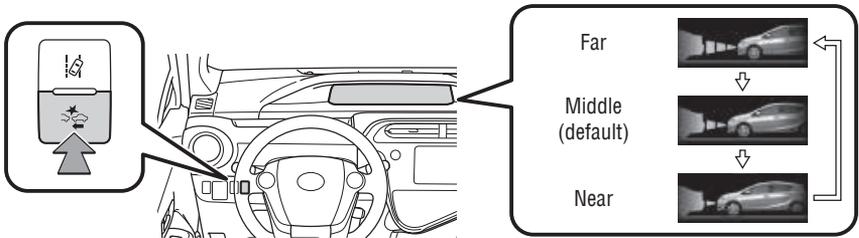

Each time the PCS switch is pressed, the response to the PCS alert timing changes.

Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same).

DISABLING PRE-COLLISION SYSTEM (PCS)

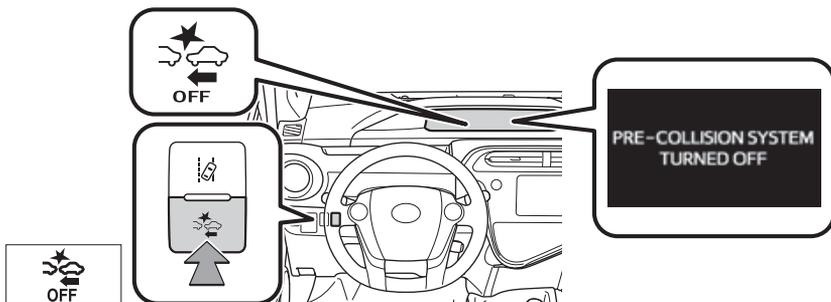

To disable the system

Press the PCS switch for 3 seconds or more.

The  will turn on and a message will be displayed on the Multi-Information Display (MID).


To enable the system

Press the PCS switch again. The system is enabled.

Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same).

Refer to a Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Departure Alert (LDA)

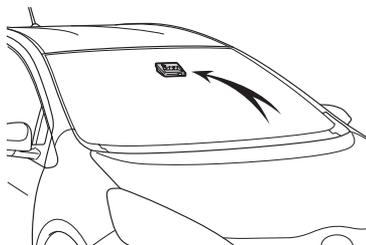


LDA in TSS-C uses an in-vehicle camera designed to detect visible white and yellow lane markers in front of the vehicle and the vehicle's position on the road. If the system determines that the vehicle is starting to unintentionally deviate from its lane, the system alerts the driver with an audio and visual alert. When the alerts occur, the driver must check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center part of their lane.

LDA is designed to function at speeds of approximately 32 MPH or higher on relatively straight roadways.

TOYOTA SAFETY SENSE™

TURNING ON THE LDA SYSTEM

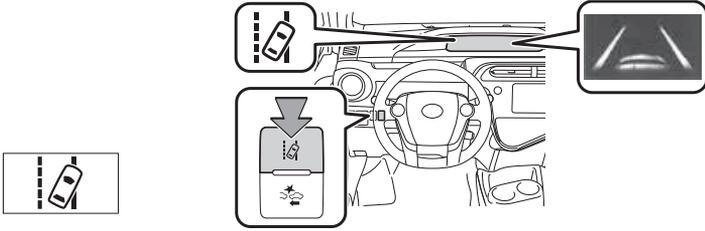

Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the *Toyota Owner's Manual* for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

LANE DEPARTURE ALERT

The LDA function displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

LDA function display



Lane markers

Lane Departure Alert (LDA) indicator flashes orange when operating.



The system displays solid white lines on the LDA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.




The system displays outlines on the LDA indicator when lane markers on the road are not detected or the function is temporarily cancelled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

Refer to the *Toyota Owner's Manual* for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

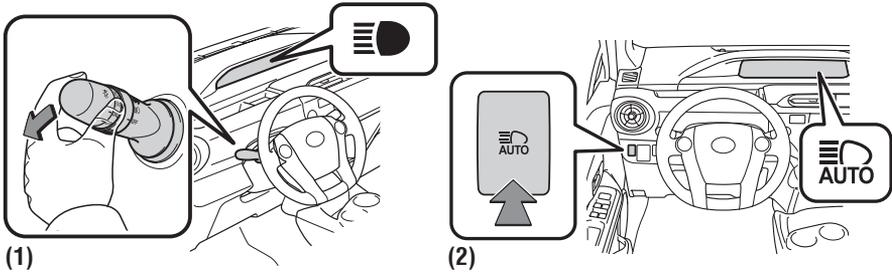

AHB is a safety system designed to help drivers see more of what's ahead at nighttime and reduce glare for oncoming drivers. When enabled, AHB uses an in-vehicle camera to help detect the headlights of oncoming vehicles and tail lights of preceding vehicles, then automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. By using high beams more frequently, the system may allow earlier detection of pedestrians and obstacles.

Refer to the Toyota Owner's Manual for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

With the engine switch in IGNITION ON mode and headlight switch turned to  position, push lever away from you.

The  will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you to turn the AHB system off.

The  will turn off and the high beam indicator turns on.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (33 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few streetlights on the road ahead.

If any of these conditions occur, high beams will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

SAFETY & EMERGENCY FEATURES


Seat belts



NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic Locking Retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

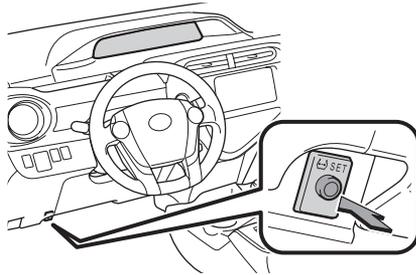

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.



After adjusting tire pressures, or after tires have been rotated or replaced, turn the "POWER"/ignition switch "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.


Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Rear door child safety locks


Rear door

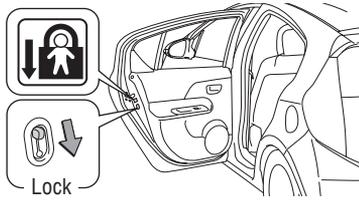

Moving the lever to the lock position will allow the door to be opened only from the outside.

Spare tire & tools


Tool location

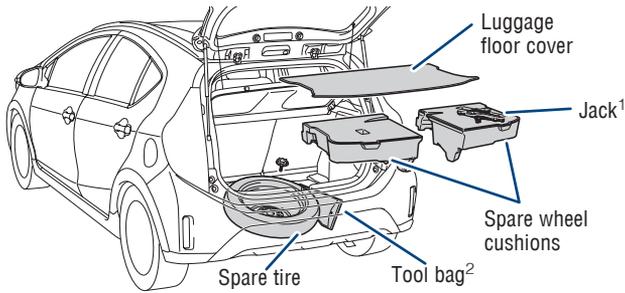

¹ For detailed directions on removing the jack from under the driver's seat, refer to the Owner's Manual.

² Jack handle, wheel nut wrench and towing eyelet

Removing the spare tire

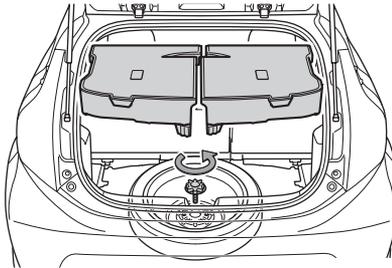

Refer to the Owner's Manual for tire changing and jack positioning procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC),

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

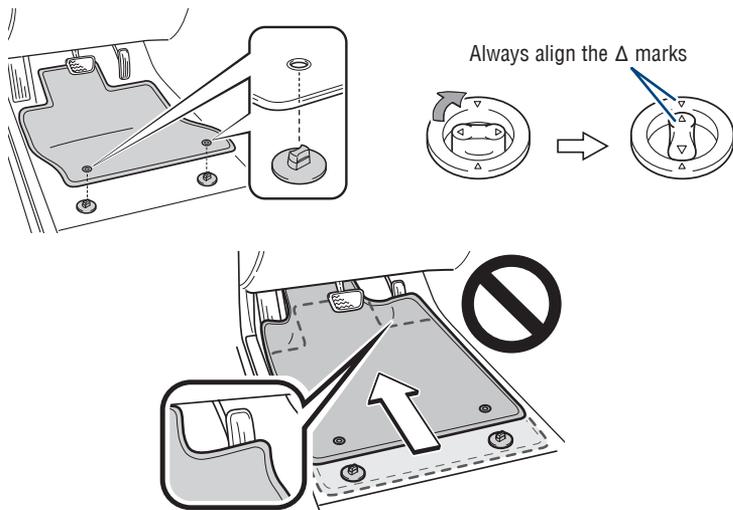

BLUETOOTH® DEVICE PAIRING SECTION


Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

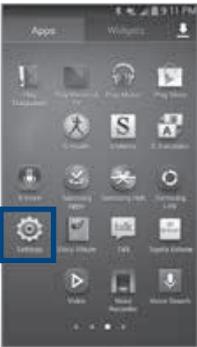

STEP 1
From your **APPS SCREEN**, select **SETTINGS**.

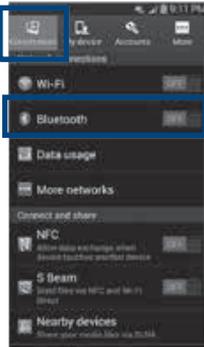

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.



STEP 3
Ensure **BLUETOOTH** is **ON**.



STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7


Select **BLUETOOTH**.
Image shown is a sample image, features may vary.



STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

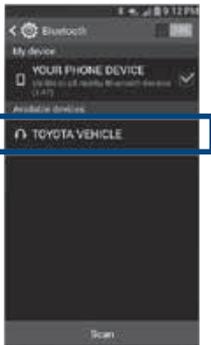

STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.

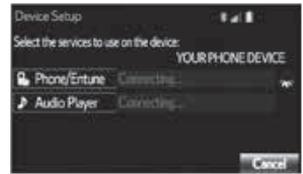

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.


Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.

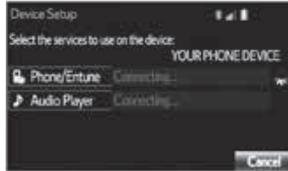

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**.




STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.

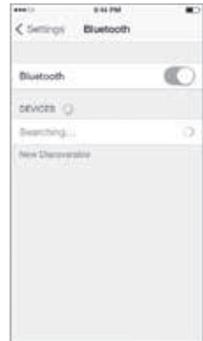

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.



STEP 8

Select **ADD**, to add your phone device.



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.

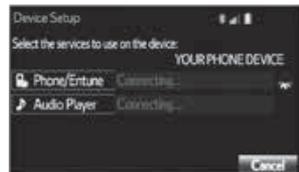

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

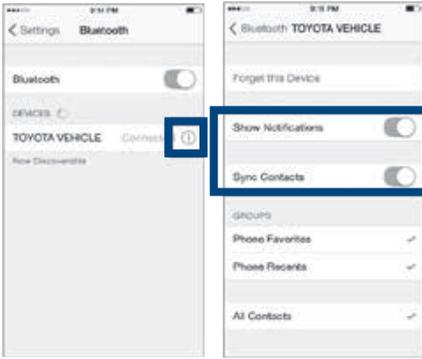

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®




STEP 1

From your APP LIST, select **SETTINGS**.

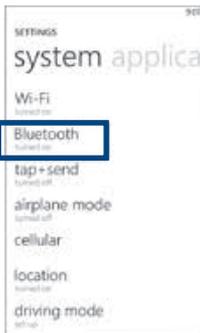

STEP 2

Select **BLUETOOTH**.

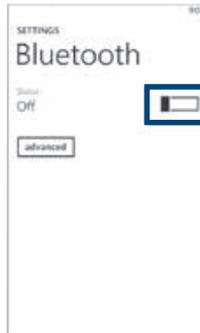

STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

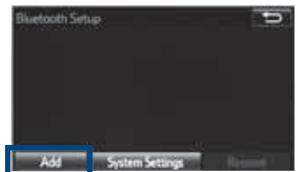

STEP 8

Select **ADD**, to add your phone device.



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.

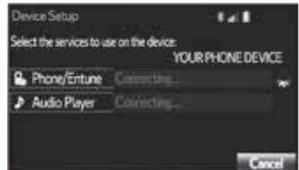

STEP 11


Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.

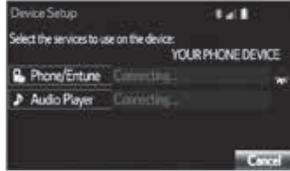

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

NOTES



www.toyota.com/owners

CUSTOMER EXPERIENCE CENTER
1-800-331-4331



Printed in U.S.A. 07/18
18-MKG-12047



00505QRG19PRIC