

QUICK REFERENCE GUIDE



MIRAI

2024

2024

MIRAI

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Mirai.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Mirai operations. Every Mirai owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Fuel cell compartment maintenance	11
Fuel door release button & cap	10
Hood release	11
Indicator symbols	6-7
Instrument cluster	5
Instrument panel	2-4
Instrument panel light control	10
Keyless entry ^{1,2}	8-9
Smart Key system ^{1,2}	9

HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

Hydrogen Fuel Cell System	12-16
Water release (H ₂ O) switch	17

FEATURES & OPERATIONS

Active Sound Control (ASC)	19
Advanced Park ²	46-47
Air conditioning/heating ^{1,2}	30-31
Audio Multimedia	28
Auto lock/unlock ^{1,2}	18
Automatic transmission	18
Blind Spot Monitor (BSM) ² and Rear Cross Traffic Alert (RCTA) ²	42
Clock	20
Door lock switches	18
Driving mode select switch	37
Driver Monitor Alert	49
Electric parking brake	23
Electric sunshade	21
Front and Rear Parking Assist with Automatic Braking (PA w/AB) ²	44-45
Front Cross Traffic Alert (FCTA)	50
Front seats-Adjustments	22
Garage door opener (HomeLink®) ³	36
Head-Up Display (HUD) ²	25
Heated steering wheel, Heated/ventilated seats ^{1,2}	29
Intuitive parking assist ²	39
Lane Change Assist (LCA)	51
Lights ^{1,2} & turn signals ¹	26
Luggage security system	20
Multi-Information Display (MID) ^{1,2}	24
Panoramic View Monitor (PVM)	41
Power outlet-12V DC	33
Power outlets-120V AC	32
Power windows ¹	19
Qi wireless charger	34-35

FEATURES & OPERATIONS (continued)

RCD (Rear Camera Detection) ²	40
Rear sunshade ¹	21
Safe Exit Assist (SEA)	43
Seats-Head restraints	22
Snow mode	37
Steering wheel switches & telephone controls (Bluetooth®)	28
Tilt & telescopic steering wheel	19
Toyota parking assist monitor	38
Traffic Jam Assist (TJA)	48-49
USB Type-C charge ports	33
USB Type-C media port	33
Vehicle Stability Control (VSC)/ TRAC OFF switch	38
Windshield wipers & washers	27

TOYOTA SAFETY SENSE™ 3.0

Automatic High Beams (AHB)	66-67
Cruise Control	64-65
Full-Speed Range Dynamic Radar Cruise Control (DRCC)	61-64
Lane Departure Alert (LDA) with Steering Assist	58-60
Lane Tracing Assist (LTA)	57
Over-The-Air (OTA) Updates	53
Pre-Collision System with Pedestrian Detection (PCS w/PD)	54-56
Proactive Driving Assist (PDA)	69-71
Quick overview- Toyota Safety Sense™ 3.0	52-53
Road Sign Assist (RSA)	67-68
Sensors	53

SAFETY & EMERGENCY FEATURES

Emergency tire puncture repair kit	74-75
Floor mat installation	78
Rear door child safety locks	72
Safety Connect®	72
Seat belts	73
Seat belts-Shoulder belt anchor	73
Star Safety System™	77-78
Tire Pressure Monitoring (warning) System (TPMS)	76
Trunk-Internal release	75

GETTING STARTED WITH TOYOTA AUDIO MULTIMEDIA AND CONNECTED SERVICES


80-91

¹ Visit your Toyota dealer for information on customizing this feature.

² Programmable by customer. Refer to the "Owner's Manual" for instructions and more information.


³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

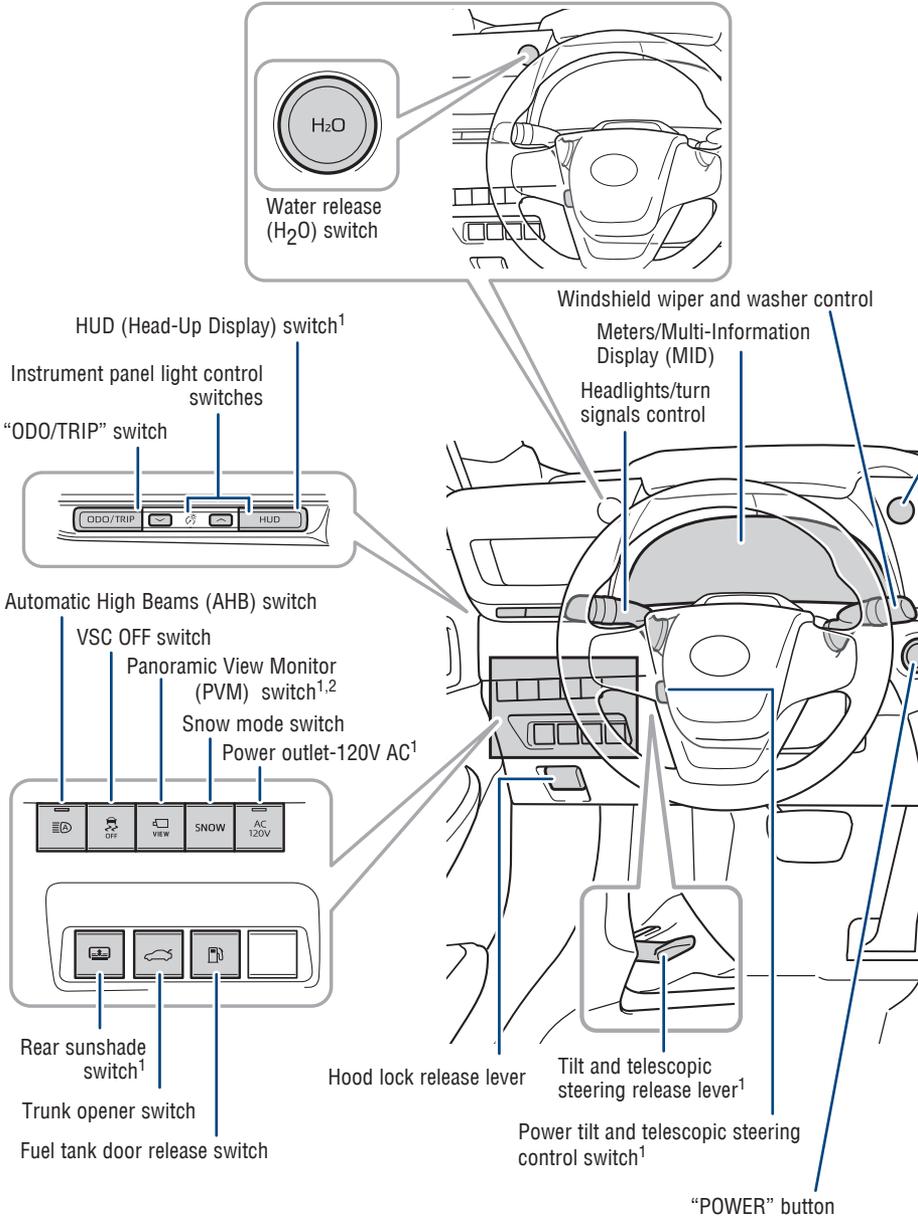

¹ If equipped.



² For details, refer to the “Multimedia Owner’s Manual” or visit www.toyota.com/audio-multimedia for additional resources.

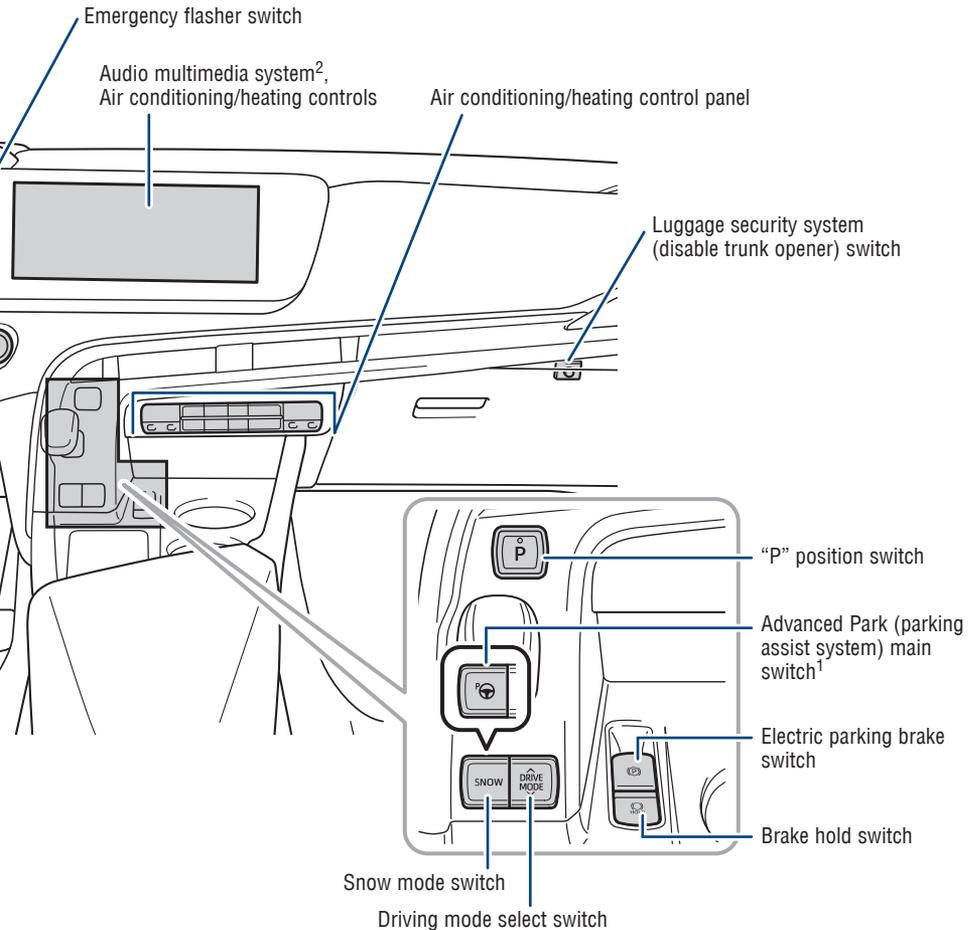

OVERVIEW

Instrument panel (continued)

STEERING WHEEL CONTROLS

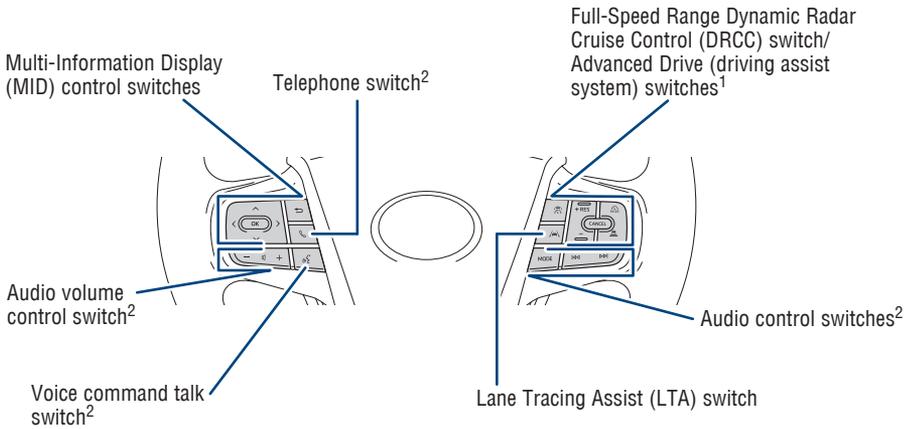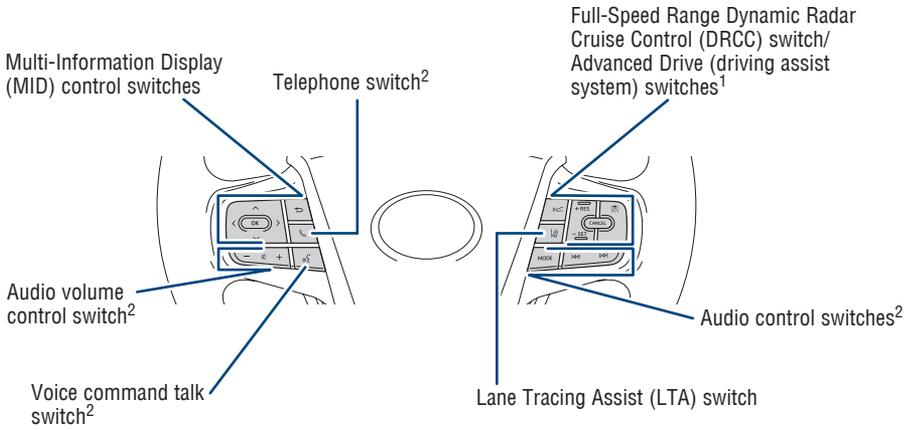


¹ If equipped.

² For details, refer to the "Multimedia Owner's Manual" or visit www.toyota.com/audio-multimedia for additional resources.


³ Refer to the "Toyota Teammate Advanced Drive Owner's Manual" on Toyota.com.

Instrument cluster

Type 1/Type 2

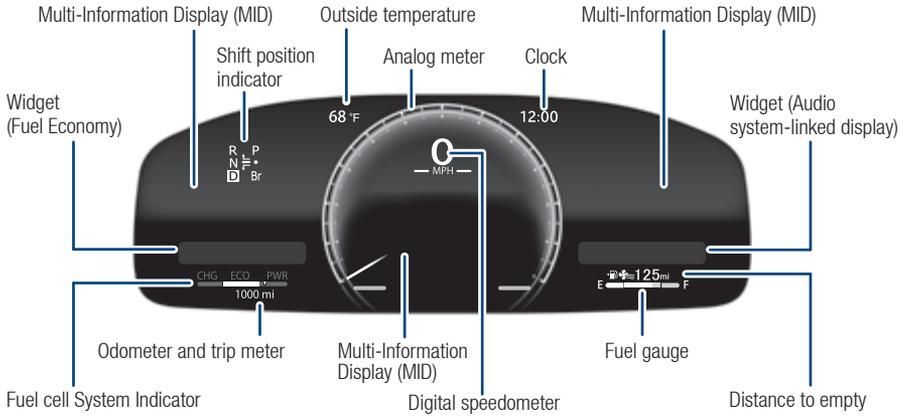

Type 3

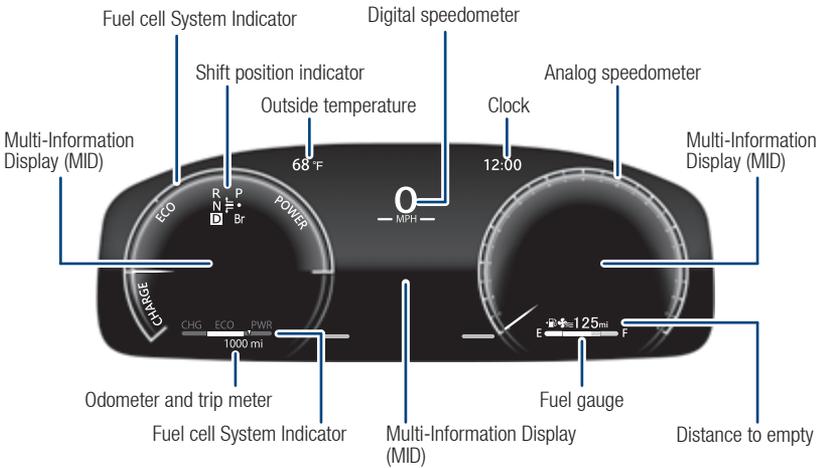

OVERVIEW

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 3-1, 2024 “Owner’s Manual”.



AIRBAG ON/OFF indicator¹

ABS

ABS (Anti-lock Brake System) warning¹



AHB (Automatic high beams) indicator

Br

Br mode indicator

HOLD

Brake hold operating indicator^{1,2,6}



Brake hold standby indicator¹

BRAKE

Brake system warning^{1,6}



Brake system warning^{1,6} [yellow]



Charging system warning⁶



Driver's and front passenger's seat belt reminder (alarm will sound when the vehicle is on)



Driving assist information indicator¹

ECO

Eco drive mode indicator



Electric power steering system warning^{1,6} [red/yellow]



Fuel cell system overheat warning⁶



Full-Speed Range Dynamic Radar Cruise Control (DRCC) indicator⁶ [yellow]



Headlight low/high beam indicator



High coolant temperature warning [red]/
Low coolant temperature indicator [blue]

H2

Hydrogen leak warning^{1,6}



Inappropriate pedal operation warning⁶



Intuitive parking assist detection indicator⁴



Intuitive parking assist OFF indicator^{4,6}



LDA (Lane Departure Alert) indicator⁶ [white/green/yellow]



LDA OFF indicator [white/green/yellow]



Low fuel level warning



Low outside temperature indicator



Low tire pressure warning¹



LTA (Lane Tracing Assist) indicator⁶ [white/green/yellow³]



Open door warning



Outside rear view mirror indicators¹

	Parking brake indicator ^{2,6}
	PCS (Pre-Collision System) warning ^{1,2,6}
	PDA (Proactive Driving Assist) indicator ⁶ [white/green]
	Pop Up Hood warning ¹
	READY indicator
	REC indicator
	Rear passengers' seatbelt reminder ⁶
	Security indicator
	Smart key system indicator
	Slip indicator ^{1,3}
	Snow mode indicator
	Sport mode indicator
	SRS airbag warning ¹
	Stop lights indicator
	Turn signal indicator
	VSC (Vehicle Stability Control) OFF indicator ¹

¹ If the indicator does not turn off within a few seconds of starting the fuel cell system, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the "Owner's Manual".

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.



⁵ Refer to section PKSB (Parking Support Braking function) in the "Owner's Manual".

⁶ With warning buzzer.

OVERVIEW

Keyless entry

UNLOCKING OPERATION

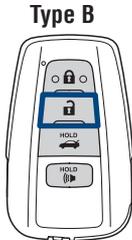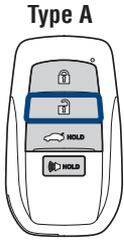


Press
ONCE: Driver door
TWICE: All doors

Carry Smart Key remote


Driver door unlock*

Grasp

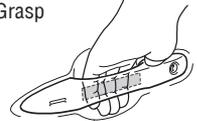

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION

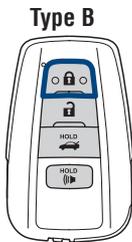

Press


Carry Smart Key remote

All-door lock

Touch




TRUNK LID OPERATION (OPENING/LOCKING/UNLOCKING)

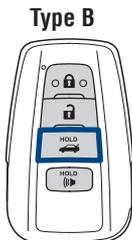

Press and hold

Carry Smart Key remote

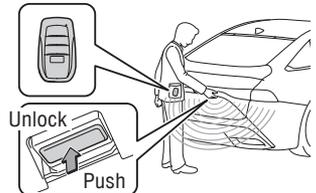


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping any passenger door handle will unlock all doors.

Please refer to the "Owner's Manual" for more details on how to program the doors.

NOTE: Doors may also be locked/unlocked using the mechanical key. (Slide the release lever on the back (Type A) or bottom (Type B) bottom of Smart Key and take the mechanical key out.)

PANIC BUTTON

Type A

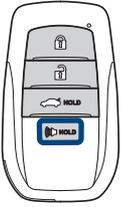


Type B



Smart Key system


START FUNCTION

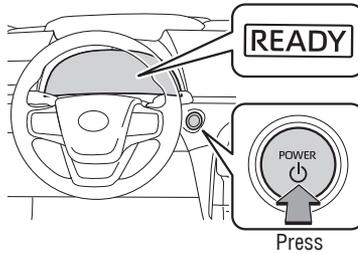

NOTE: The Smart Key must be carried to enable the start function. With the shift lever in Park and the brake pedal depressed, press the power button.



POWER (WITHOUT STARTING THE FUEL CELL SYSTEM)

Without depressing the brake pedal, pressing the power button will change the operation mode in succession from:

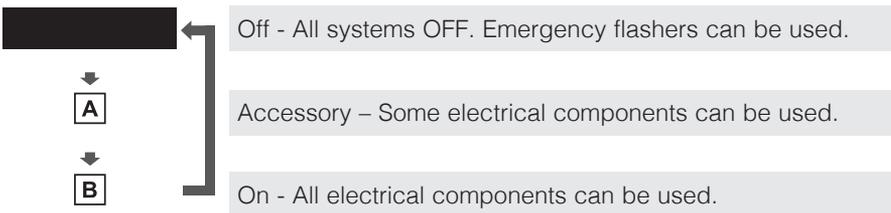


A - "ACCESSORY", **B** - "POWER ON"

Fuel door release button & cap

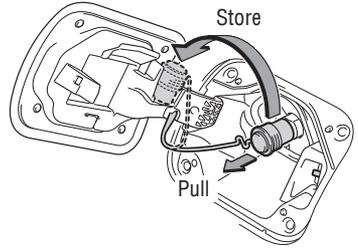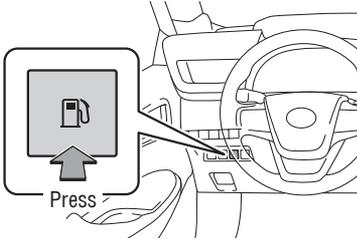


Closing the door


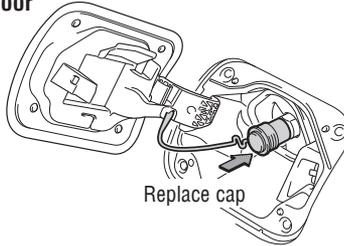


When the fuel door is open, the fuel cell system will not start. When the “READY” indicator is on or the vehicle is on, the fuel door will not open.

Instrument panel light control

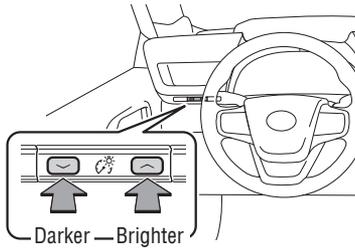


Hood release

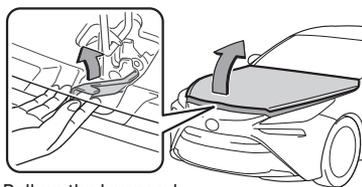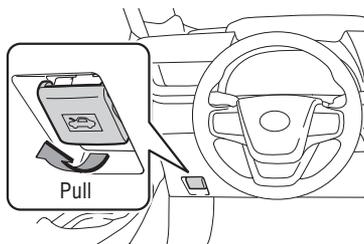

Pull up the lever and raise the hood

Fuel cell compartment maintenance

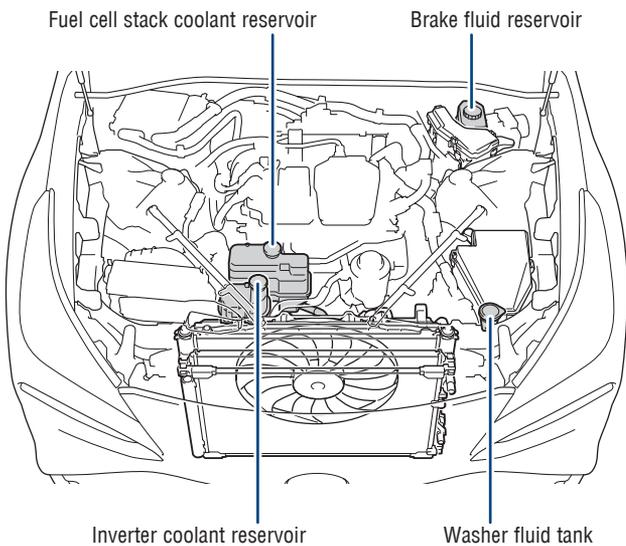

NOTE: Regularly scheduled maintenance at your Toyota dealer will help extend the life of your vehicle and maintain performance.
Please refer to the "Warranty & Maintenance Guide."

HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

Hydrogen Fuel Cell System

Fuel cell vehicles use electricity, which is generated by a chemical reaction between hydrogen and oxygen in a fuel cell stack. Excess electricity is stored in a traction battery that is used to power high voltage systems and assist on initial acceleration.

The fuel is H₂ (compressed hydrogen gas), so the exhaust, when running, is only water and water vapor. As they do not emit CO₂ (Carbon Dioxide) and NO_x (Nitrogen Oxides) at the tailpipe, fuel cell vehicles are considered zero emission vehicles.

NOTE: Fuel consumption and energy information of the Hydrogen Fuel Cell System are shown on the Multi-Information Display (MID) and the multimedia display.

TIPS FOR IMPROVED FUEL ECONOMY

- Ensure the tire pressures are maintained at levels specified in the “Owner’s Manual”.
- Drive the vehicle smoothly. Avoid abrupt acceleration and deceleration.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the air conditioning.

Fill with fuel at hydrogen stations compliant with SAE J2601.

If you have questions about hydrogen station compliance, consult your Authorized Mirai Fuel Cell Toyota Dealer.

Observe the notices and cautions shown at the hydrogen station.

The filling time and amount may differ depending on the equipment of the hydrogen station. It may make the possible driving distance shorter.

BEFORE FUELING

When you arrive at the station, prepare for fueling:


- 1) Ensure the vehicle is OFF and in Park with parking brake set.
- 2) Press the fuel door release button and refer to instructions in ‘Fuel door release button & cap section’ to prepare the vehicle to accept hydrogen fuel.

Note: Fuel door will not open if the READY indicator is on. The fuel door will automatically re-lock if you don’t open within 30 seconds.

- 3) Now you are ready to refuel. Outside the vehicle at the pump, use the station’s best practice guidelines and instructions on how to refuel using their nozzle.


For assistance, call Mirai Dedicated Customer Support toll free at 1-800-331-4331 (Option 2.)

TATSUNO H70 HYDROGEN GAS NOZZLE

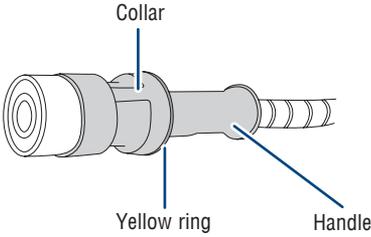


The integrated collar snaps into place with a “click,” creating a secure connection.

Place nozzle on receptacle

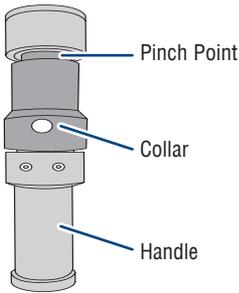

- (1) Grasp the black handle with one hand, and support the blue collar with the other.
- (2) Place the nozzle on Mirai's fuel receptacle and push toward the car using the handle.
- (3) A yellow ring will be visible below the collar when the nozzle is fully connected. To ensure a positive connection, gently tug on the handle. Begin fueling.
- (4) Once fueling is finished, grab the black handle with one hand while supporting the blue collar with the other, just as before.
- (5) Pull on the collar and the nozzle will release. Keep pulling until the nozzle is fully disconnected.


WALTHER H70 HYDROGEN GAS NOZZLE

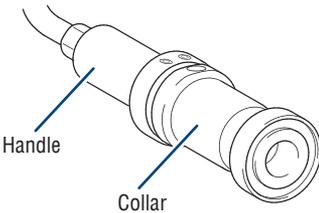

Operation of the Walther nozzle is identical to that of the Tatsuno nozzle with one notable exception: When connected, the Walther indicator ring is green.


HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

WEH H70 HYDROGEN GAS NOZZLE

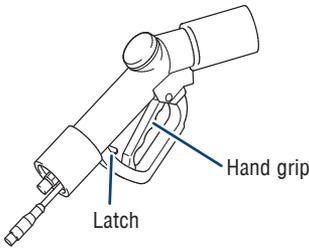



The integrated hand grip locks and unlocks the nozzle, creating a secure connection for safe fueling.

Place nozzle on receptacle

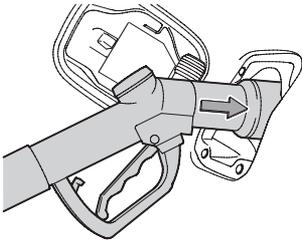

- (1) Seat the nozzle onto the receptacle fully. (This is the first step to help create a secure connection for safe fueling.)

- (2) To lock the nozzle to the vehicle, squeeze the hand grip until the latch is engaged.

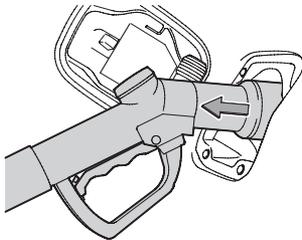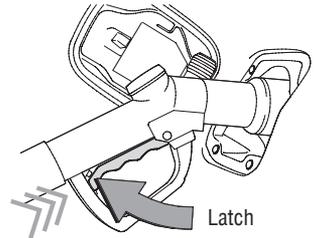


- (3) Gently pull back on the nozzle to ensure it is locked onto the receptacle. (Be careful not to squeeze or contact the hand grip when checking if the nozzle is secure, as it may unlock the nozzle.)

Once the nozzle is secure, you can follow the station's instructions to begin dispensing fuel.


CAUTION: Ensure that the nozzle lock is properly engaged to the vehicle. Failure to do this may result in the nozzle **coming off when the flow of hydrogen begins**. This may result in damage to the nozzle, station, or vehicle and/or injury/death to you and people near the fueling station.

- (4) After fueling is complete, pull the latch to unlock the hand grip and remove the nozzle.

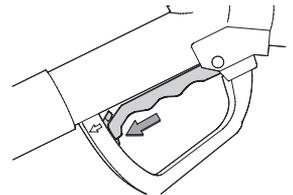

WEH H35 HYDROGEN GAS NOZZLE


H35 allows for up to a half tank fill from empty.

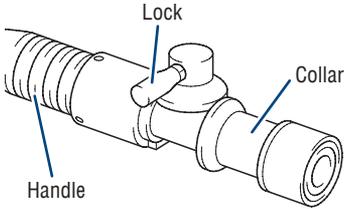


Integrated collar snaps into place with a 'click.' Rotate the cam lock handle clockwise to secure connection for safe fueling.

Place nozzle on receptacle


(1) Make sure the lock is in the OFF position.

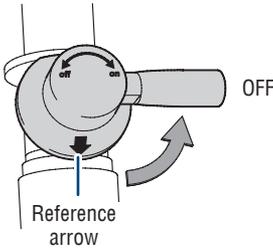


(2) Holding the handle, fully seat the nozzle onto the receptacle.

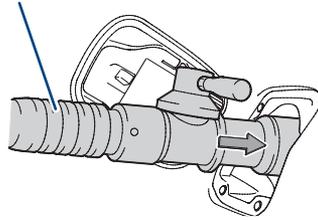

(3) Rotate the lock fully clockwise to the ON position to lock the nozzle.

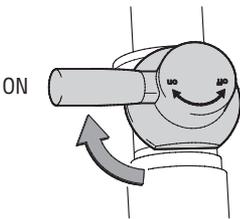

(4) Holding the handle, gently pull back on the collar to ensure the nozzle is securely locked. Once the nozzle is secure, you can follow the station's instructions to begin dispensing fuel.

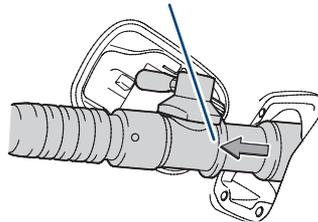


CAUTION: Ensure that the nozzle lock is properly engaged to the vehicle. Failure to do this may result in the nozzle **coming off when the flow of hydrogen begins**. This may result in damage to the nozzle, station, or vehicle and/or injury/death to you and people near the fueling station.


HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

WEH H35 HYDROGEN GAS NOZZLE (CONTINUED)

- (5) After filling is complete, rotate the lock back to the OFF position.

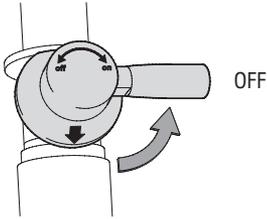

- (6) Holding the handle and collar, pull back on the collar to unlock and remove the fuel nozzle.

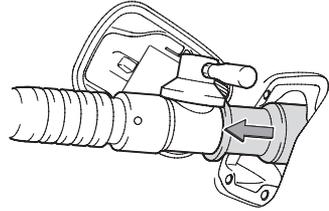


TIP-AFTER REFUELING

NOTE: If the nozzle cannot be removed after fueling, it may be frozen to the vehicle. Wait for the hydrogen nozzle to thaw before attempting to remove. Do not pull or rotate the hydrogen nozzle forcibly or damage will occur.

Refer to the Refueling section in the "Owner's Manual" for additional information.

Water release (H₂O) switch

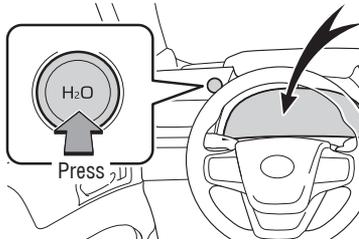

Water is a natural by-product of the fuel cell process. The system is designed to automatically purge water from the drain pipe at the rear of the vehicle while driving and sometimes while it is shut off.

Water can be manually purged before parking in certain situations by pressing the "H₂O" switch with the vehicle in "READY" mode. The system will regulate water levels automatically. Drivers should typically let the vehicle handle this as opposed to using this switch.

Refer to the "Owner's Manual" for more details on this system before attempting to use it.

FEATURES & OPERATIONS

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

DEFAULT SETTING

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into P.

CUSTOMIZED SETTING

Speed linked door locking function


- Doors lock when the vehicle speed is approximately 12 mph (20 km/h) or higher.

Driver's door linked door unlocking function


- Doors unlock when the driver's door is opened within approximately 45 seconds after the vehicle is turned off.

Refer to the "Owner's Manual" for more details.

Door lock switches

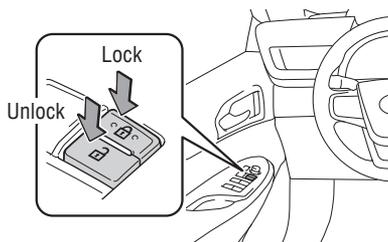

Automatic transmission

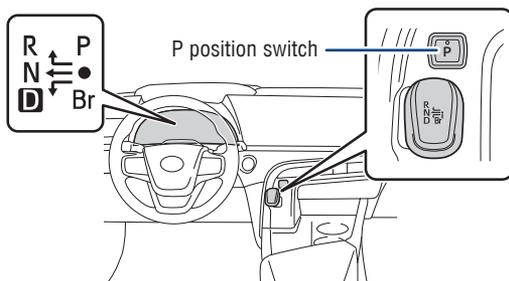

P	Park
R	Reverse
N	Neutral
D	Drive
Br	Br Mode*


* Br Mode is the equivalent of downshifting. Shift to "Br" when strong regenerative braking is desired (i.e. downhill driving, coasting to a stop, etc.). To select Br mode, shift the shift lever down.

Refer to the "Owner's Manual" for limitations and more details on this system.

Active Sound Control (ASC) (if equipped)

The ASC is a system that conveys the operating conditions, such as acceleration and deceleration of the vehicle, with sounds to the driver. The respective tone changes for normal mode and sport mode.

Power windows

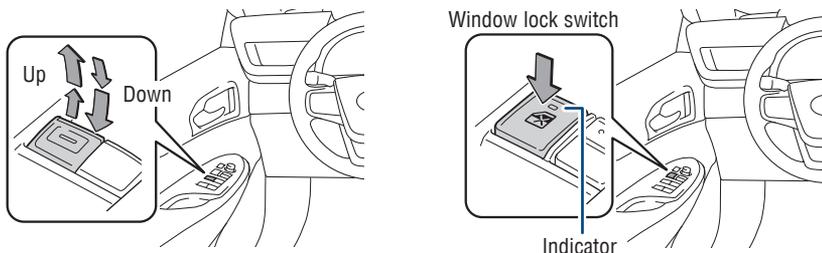


All window auto up/down

Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch

Deactivates all passenger windows. Driver's window remains operable.

Tilt & telescopic steering wheel (if equipped)

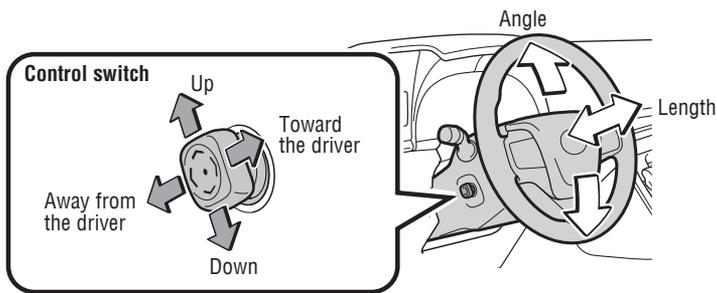

Toggle the control switch to set angle and length.

NOTE: Do not attempt to adjust while the vehicle is in motion.


Automatic tilt-away & returning function (if equipped)

When the vehicle is turned off, the steering wheel moves up and away from driver and stows, but returns to its position when the vehicle is "ACC" or "ON" mode.

Power easy access system (if equipped)

The steering wheel and driver's seat move in accordance with power switch mode and the driver's seat belt condition.

Clock

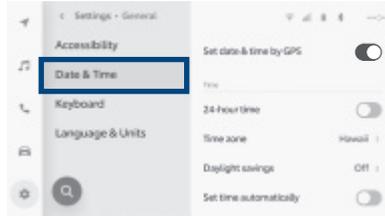

- 1) Press “” on the main menu.
- 2) Select “**General**” on the submenu.
- 3) Select “**Date & Time**.”
- 4) Select the desired items to be set.


NOTE: It is recommended to “Set date & time by GPS” feature to ON for automatic time updates based on your location.

Refer to the “Multimedia Owner’s Manual” for more details.

Luggage security system

To protect luggage stored in the trunk against theft, the luggage security system can be set to on.


Trunk opener main switch (in the glove box)

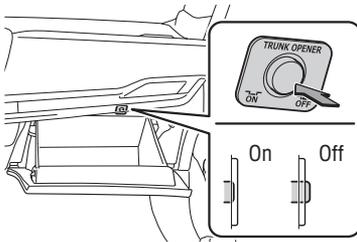

To disable the trunk opener switch, turn the main switch off.

The trunk lid cannot be opened even with the wireless remote control or the entry function.

Electric sunshade (if equipped)

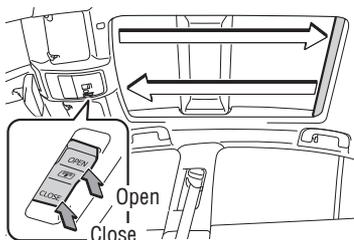

Lightly press either side of the switch while opening/closing is in progress, the electric sunshade stops partway.

The vehicle must be on for use.


Rear sunshade (if equipped)

The rear sunshade can be extended and retracted using the rear sunshade switch and rear control panel.

OPERATION

From front seat

Press the switch to extend/retract.

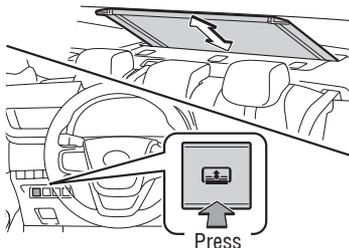


From rear seat

Press “” on the rear control panel.


Then select “”.

Rear control panel

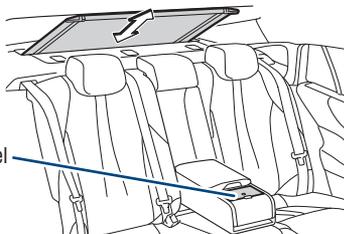

The vehicle must be on for use.


Front seats-Adjustments

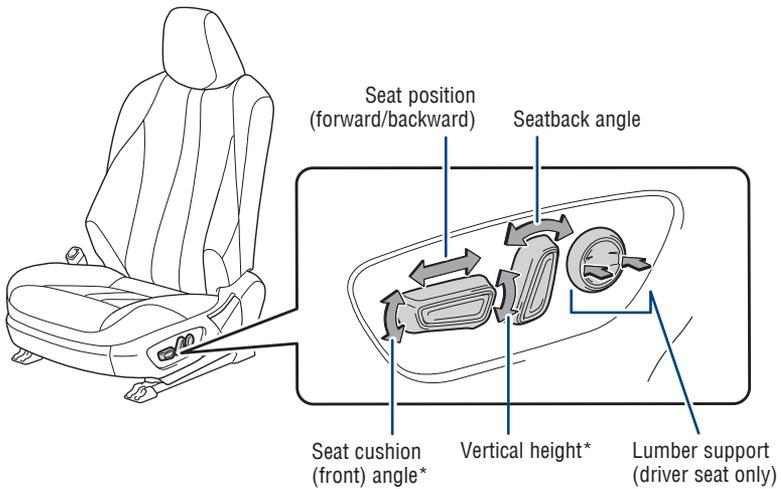

* If equipped.

Power easy access system (if equipped): The driver's seat and steering wheel move in accordance with power switch mode and the driver's seat belt condition.


Seats-Head restraints

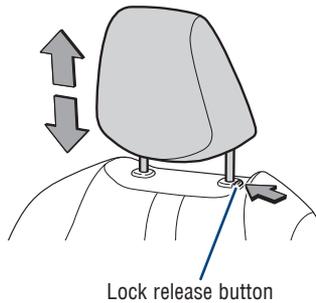

Electric parking brake

PARKING BRAKE


Automatic mode

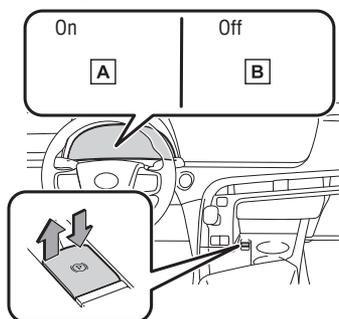

A "EPB Shift Interlock Function Activated"

B "EPB Shift Interlock Function Deactivated"

Manual mode

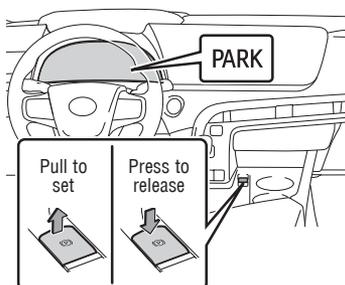

Automatic mode (shift lever operation)

To turn automatic mode ON, while vehicle is stopped, pull and hold the parking brake switch until "EPB Shift Interlock Function Activated" displays on the Multi-Information Display (MID). While depressing the brake pedal, shifting the lever into P position will automatically set the brake and turn the parking brake indicator light on. To release the brake pedal, depress brake and shift the lever out of P. The indicator will turn off.


To turn automatic mode OFF, press and hold the parking brake switch until "EPB Shift Interlock Function Deactivated" displays on the MID.

Manual mode

While the vehicle is stopped and the brake pedal is depressed, pull the switch to set the parking brake and turn the parking brake indicator light on. To release, depress the brake pedal and press the switch. The indicator will turn off.

Refer to the "Owner's Manual" for limitations and more details.


BRAKE HOLD

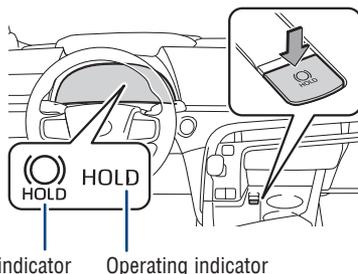

The brake hold system keeps the brake applied when the shift lever is in D or N while the system is on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D to allow smooth start off.

Refer to the "Owner's Manual" for limitations and more details.

Multi-Information Display (MID)

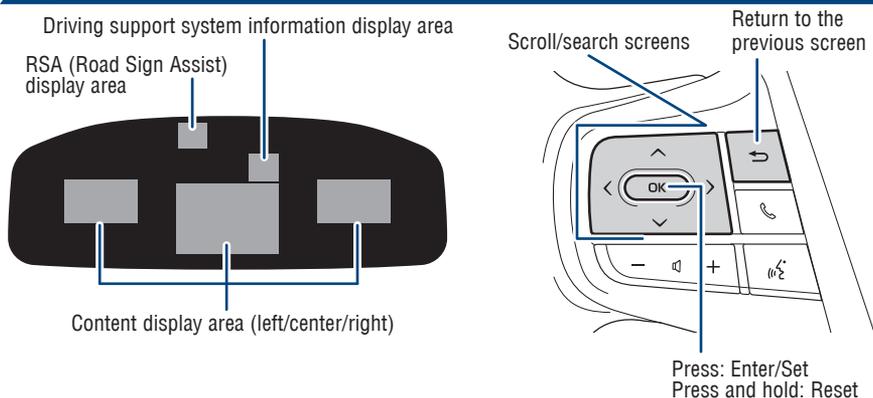


Press MID control switches to change and select information in the following:

-  Driving information display
-  Navigation system-linked display
-  Audio system-linked display
-  Vehicle information display
-  Settings display
-  Warning message display


Refer to the "Owner's Manual" for more settings and customizable features.

Head-Up Display (HUD) (if equipped)


The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield.

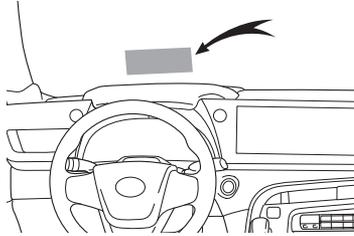


Display type - Full -

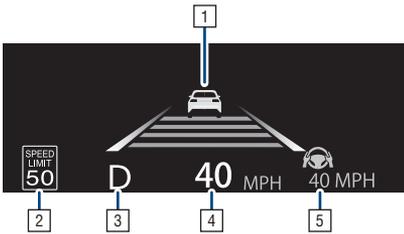

- Standard -

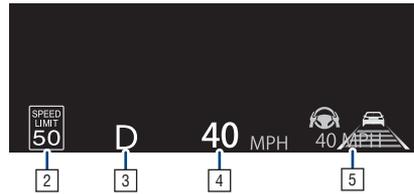


- Minimum -

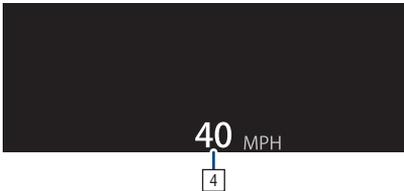

- 1 Driving support system display area/
Navigation system-linked display area/
Fuel cell system indicator display area
- 2 RSA (Road Sign Assist) display
- 3 Shift position
- 4 Speedometer
- 5 Driving support system display area

DISPLAY ON/OFF

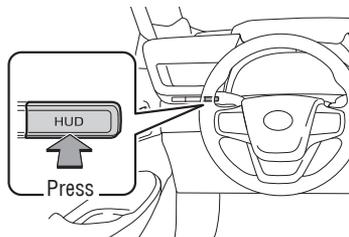

CHANGE SETTINGS

Press MID control switches and select “” on the Multi-Information Display (MID) and select “Head-up Display” to access Head-up display settings. And push “” to enter selection.


Refer to the “Owner’s Manual” for more details.

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS

Operating the “☀️” switch turns on the headlight indicator .

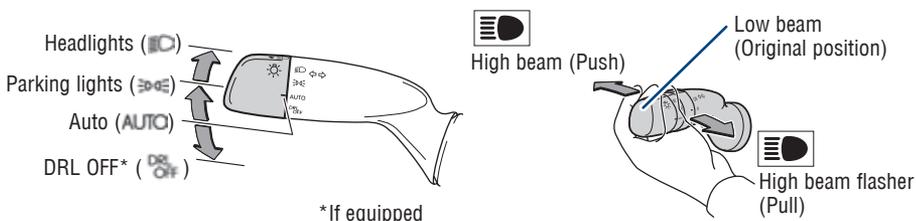

Daytime Running Light system (DRL)

Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night. (The parking brake needs to be released and the headlight switch must be in the “☀️” or “AUTO” position while the vehicle is on.)

Automatic light cut off system (AUTO)

- Headlights are on: The headlights and taillights will turn off automatically 30 seconds after the vehicle is turned from ON to ACC or OFF and the driver’s door is opened and closed. (If the “🔒” or “🔑” switch on the Smart Key remote is pressed after all doors are closed, the lights will turn off immediately.)
- Only the taillights are on: The taillights will turn off automatically if the vehicle is turned from ON to ACC or OFF and the driver’s door is opened.


Automatic High Beams system (AHB)*

Automatically switches between high and low beams as appropriate to enhance vision at night.

Refer to *Toyota Safety Sense™ 3.0* in this guide or the “Owner’s Manual” for more details on the Automatic High Beams feature.

* Operating conditions must be met. Refer to the “Owner’s Manual” for details.



TURN SIGNALS

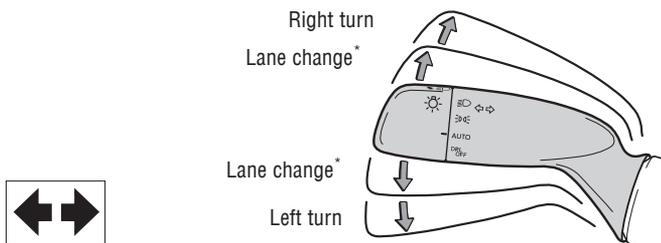

* Move the lever partway and release. The signals will flash three times.

Windshield wipers & washers


WITH INTERMITTENT WIPER

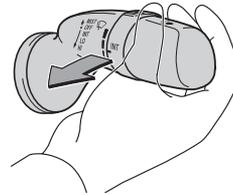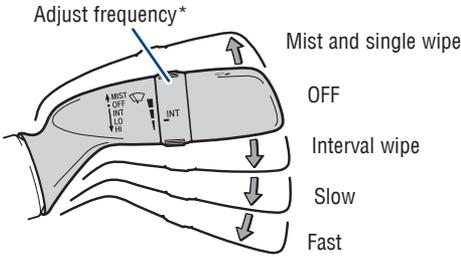


Pull to wash and wipe

* **Intermittent windshield wiper frequency adjustment:** Rotate to increase/decrease wiper frequency.

WITH RAIN-SENSING WIPER

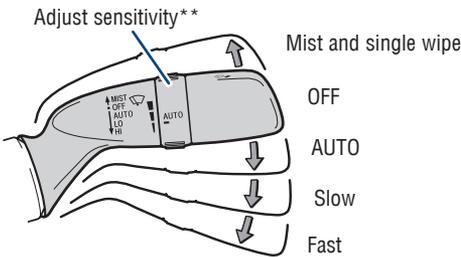

Push to wash rear camera

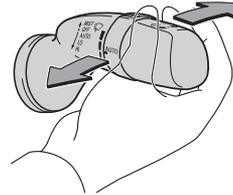


Pull to wash and wipe

** **Rain-sensing windshield wiper sensitivity adjustment:** Rotate to increase/decrease sensor sensitivity.

Refer to the "Owner's Manual" for more information.

FEATURES & OPERATIONS

Steering wheel switches & telephone controls (Bluetooth®)

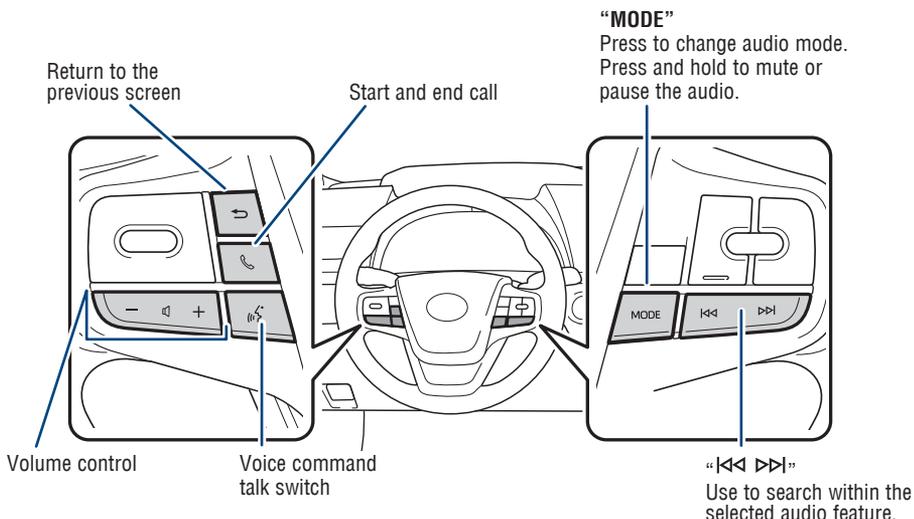


Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel.

Refer to the Bluetooth® device pairing in this guide or the "Multimedia Owner's Manual" for additional user instructions.

NOTE: Always use safe driving practices and follow all traffic rules.

Audio Multimedia

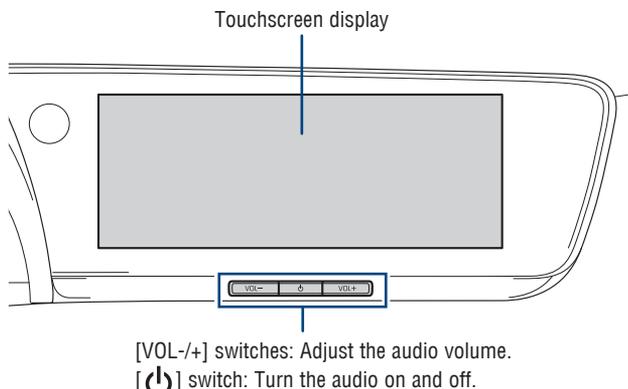


Refer to the "Multimedia Owner's Manual" or visit www.toyota.com/audio-multimedia for additional resources.

NOTE: Always use safe driving practices and follow all traffic rules.


Heated steering wheel, Heated/ventilated seats (if equipped)

FRONT AIR CONDITIONER CONTROLS


Front

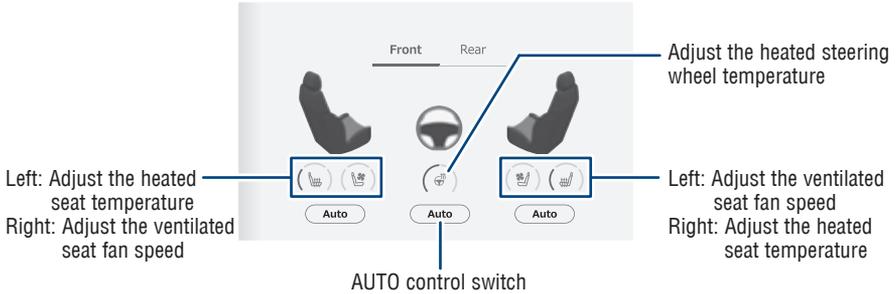

Rear

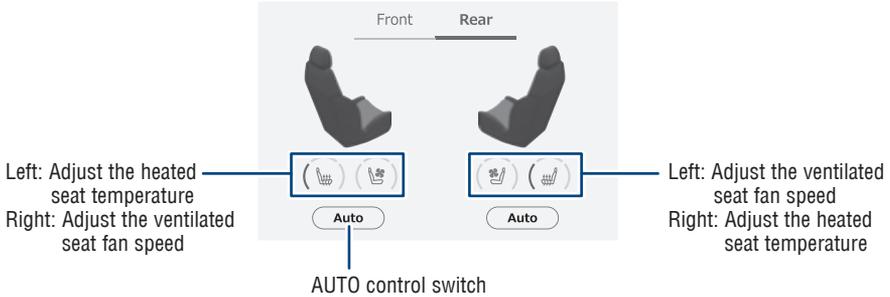

REAR CONTROL PANEL (IF EQUIPPED)

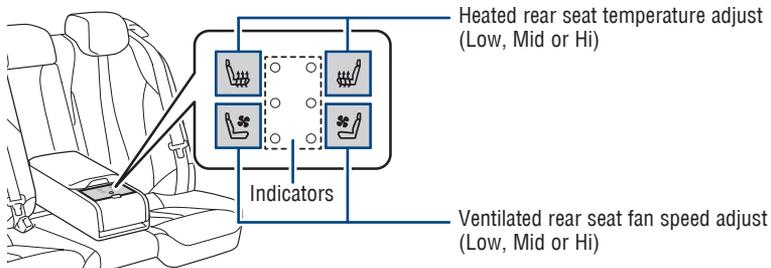


The vehicle must be on for use.

Refer to the "Owner's Manual" for more details.



Air conditioning/heating

FRONT AUTOMATIC AIR CONDITIONING

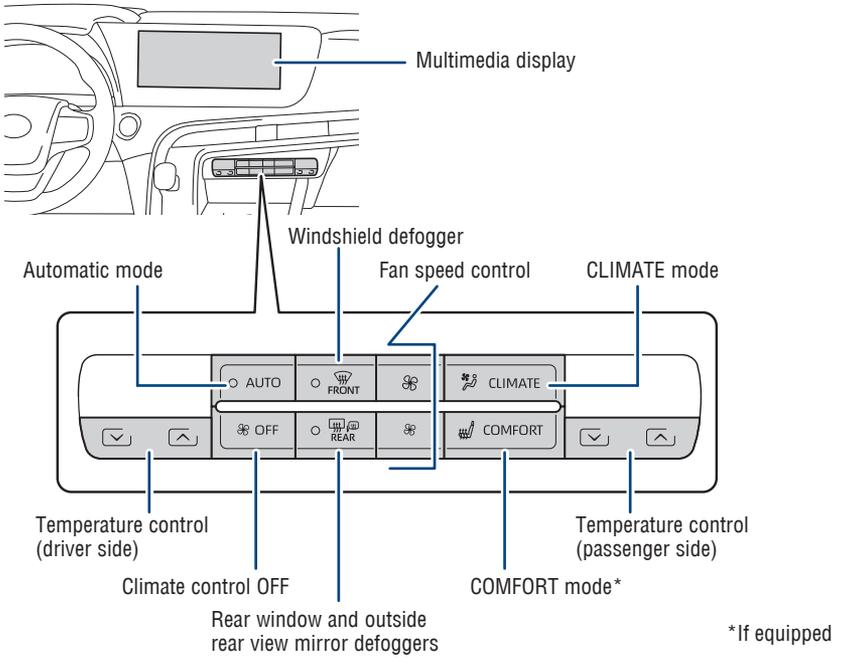


Air conditioning control screen

- (1) Touch “” on the main manu on the multimedia display.
- (2) Select “Climate” on the sub menu.
- (3) Select the desired setting.

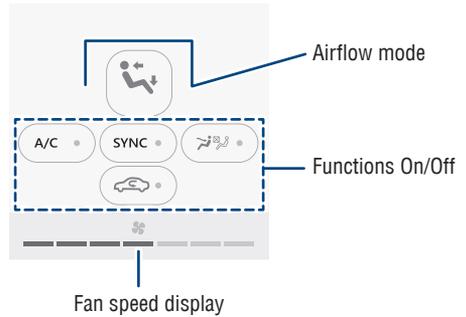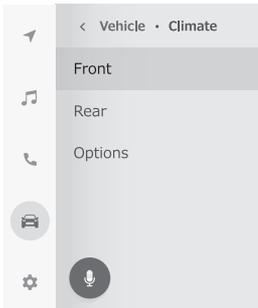


FRONT AUTOMATIC AIR CONDITIONING (CONTINUED)

Rear air conditioning control screen

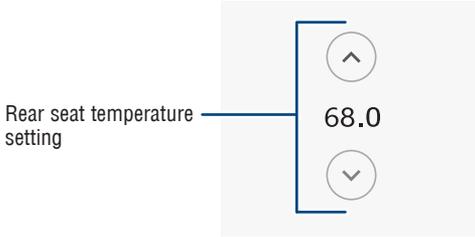


Option control screen

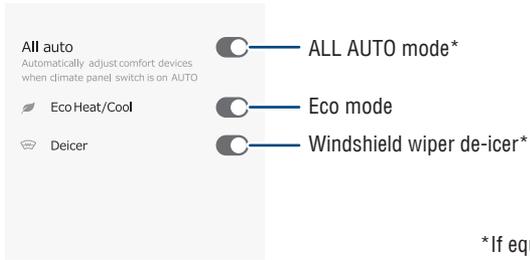

*If equipped

REAR AUTOMATIC AIR CONDITIONING (IF EQUIPPED)

Rear control panel

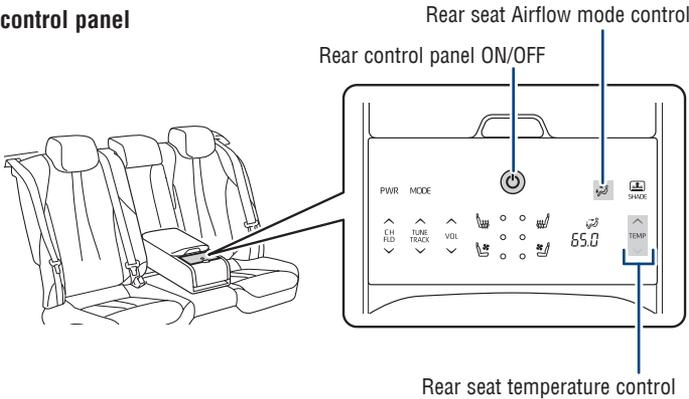


Refer to the "Owner's Manual" for more details.

FEATURES & OPERATIONS


Power outlets-120V AC (if equipped)

OUTLET LOCATION (100W)

Rear of the console box (if equipped)

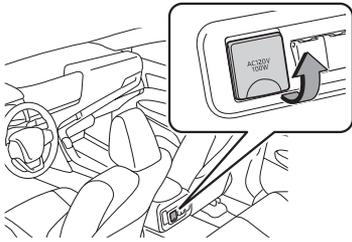


In the trunk

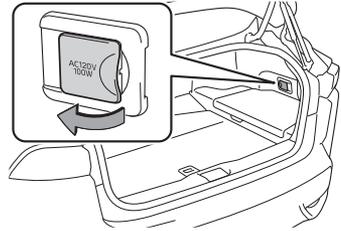


OUTLET LOCATION (1500W)


Rear of the console box (if equipped)

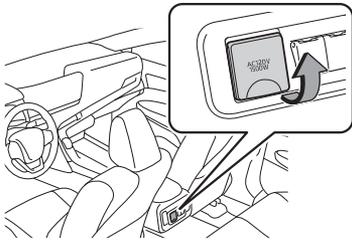

In the trunk

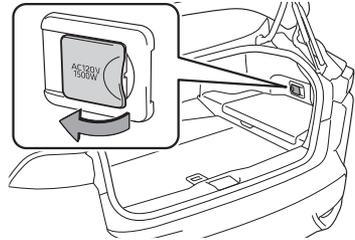

POWER OUTLET ON/OFF MASTER SWITCH

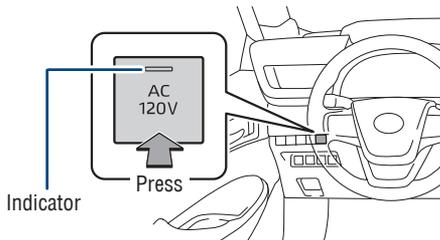


Check that the “Ready” indicator is illuminated, then press the AC 120V master switch. The power outlets can be used when the indicator on the AC 120V master switch is illuminated.

To turn off the 120V outlets, press the master switch and observe that the indicator is no longer illuminated.


Refer to the “Owner’s Manual” for more details.

Power outlet-12V DC

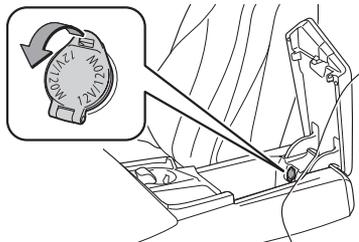

The vehicle must be in the “ACCESSORY” or “POWER ON” mode for use.


USB Type-C media port

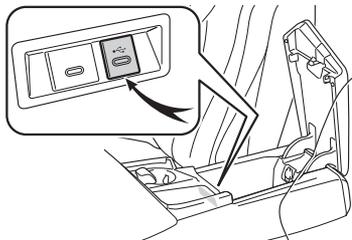


Connecting a compatible device and cable into the USB media port will support charging and music playback through the audio multimedia system.

USB Type-C charge ports

In the console box

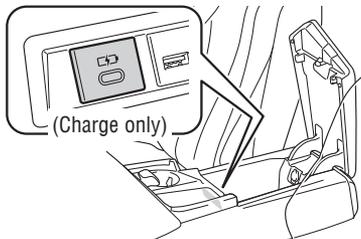



Rear of the console box

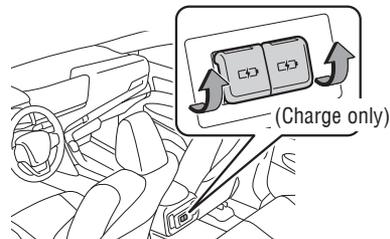


The vehicle must be in the “ACCESSORY” or “POWER ON” mode for use.

Qi Wireless charger

TYPE A

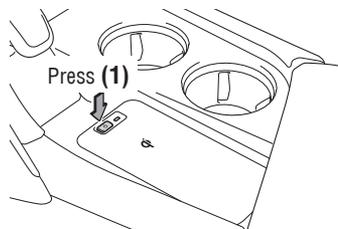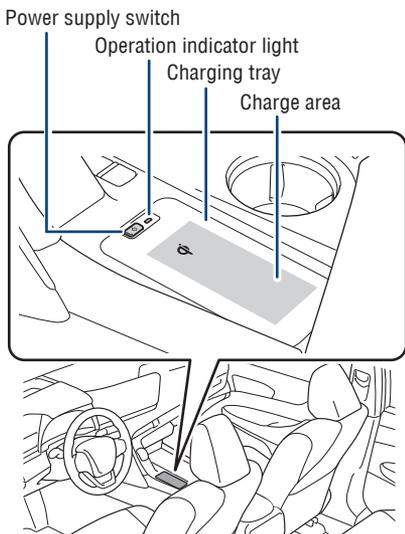

When the vehicle is turned off, the last state (ON/OFF) of the charger is retained.

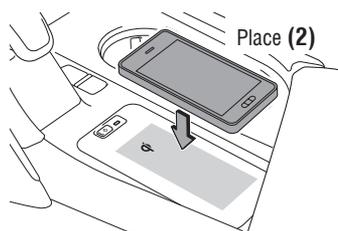


Place device nearest in the center of the charging area for best results. If the charging coil is not in the center of the device, place the device so that its charging coil is centered in the charging area.

A mobile device can be charged wirelessly on the tray. **(1)** Press the power supply switch and the green operation indicator light turns on. **(2)** Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.

The vehicle must be in the “ACCESSORY” or “POWER ON” mode for use.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.


TYPE B

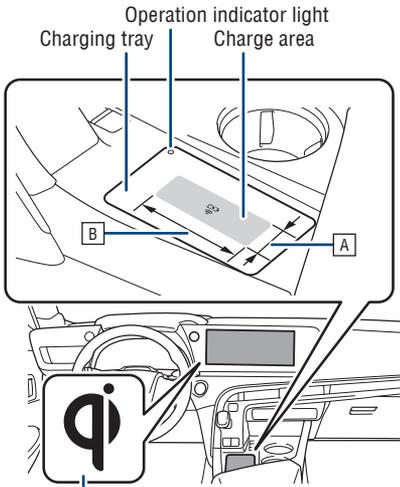

Operation indicator light

A Approximately 1.0 in. (2.5 cm)

B Approximately 3.9 in. (10 cm)

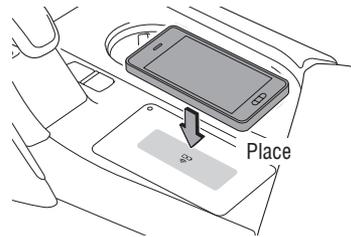

Place device nearest in the center of the charging area for best results. If the charging coil is not in the center of the device, place the device so that its charging coil is centered in the charging area.

A mobile device can be charged wirelessly on the tray. Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.


The vehicle must be in the “ACCESSORY” or “POWER ON” mode for use.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.


FEATURES & OPERATIONS

Garage door opener (HomeLink®)*

VEHICLES WITH AUTO ANTI-GLARE INSIDE REAR VIEW MIRROR

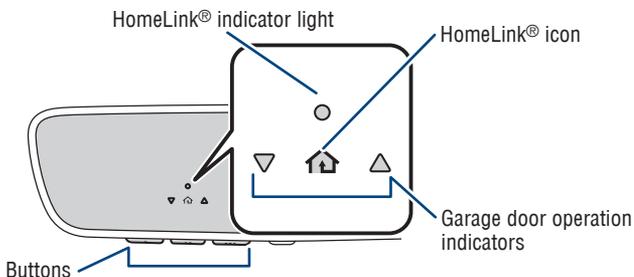

VEHICLES WITH DIGITAL REARVIEW MIRROR

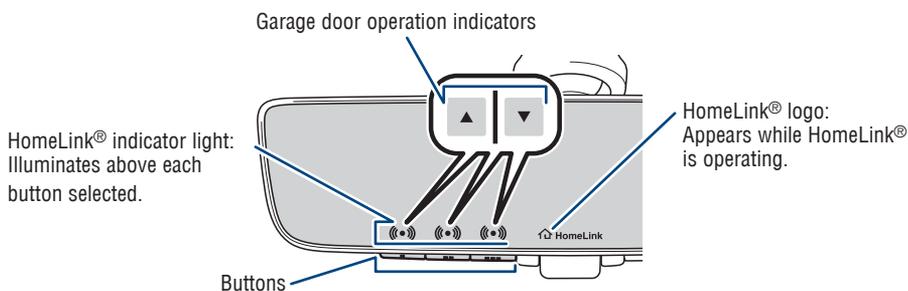

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to the "Owner's Manual" for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit www.homelink.com/toyota.



* HomeLink® is a registered trademark of Gentex Corporation.

Driving mode select switch

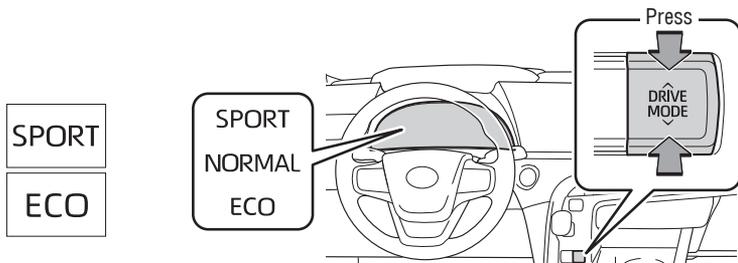

Sport mode

Use Sport mode when agile driving response is desired, for example, when driving on roads with many curves.

Normal mode

Use for normal driving.

Eco drive mode


Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.

Refer to the "Owner's Manual" for limitations and more details on this system.


Snow mode

Snow mode can be selected to suit the conditions when driving on slippery road surfaces, such as on snow.

Type A

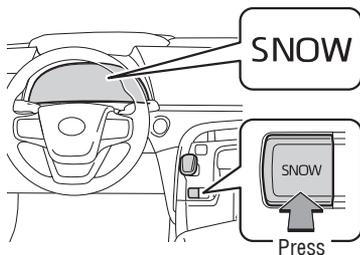


Type B

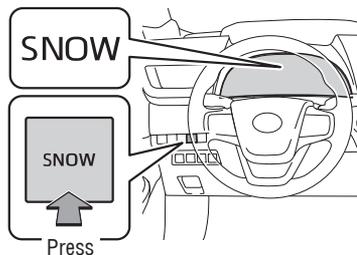

FEATURES & OPERATIONS

Vehicle Stability Control (VSC)/ TRAC OFF switch

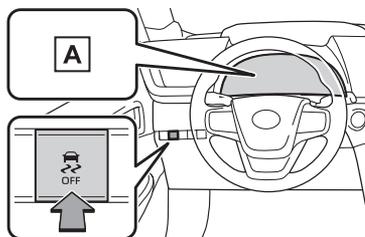



A - "Traction Control Turned OFF"

The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press the switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds while the vehicle is stopped.

Refer to the "Owner's Manual" for limitations and more details.

Toyota parking assist monitor

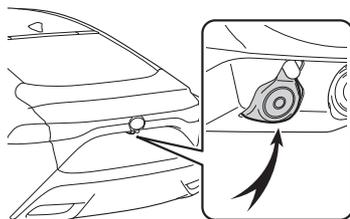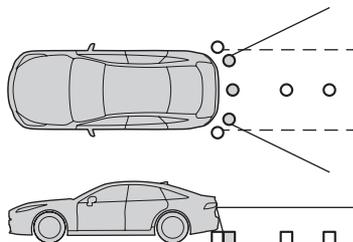


Toyota parking assist monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press "⚙️" on the main menu on the Multimedia display and select "Display". Select "Camera" to adjust the screen contrast and brightness.

Refer to the "Multimedia Owner's Manual" for limitations and more details on this system.

Intuitive parking assist (if equipped)

Multimedia display

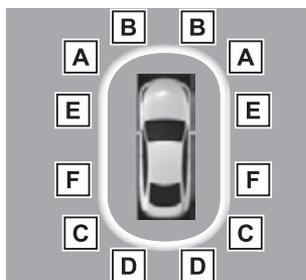

- A** - Front corner sensor detection
- B** - Front center sensor detection
- C** - Rear corner sensor detection
- D** - Rear center sensor detection
- E** - Front side sensor detection
- F** - Rear side sensor detection

The parking assist system operates when the vehicle approaches an obstacle. The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by sensors and communicated via the Multi-Information Display (MID) and/or the multimedia display and a buzzer.

When the sensor detects an obstacle, the direction and the approximate distance to the obstacle are displayed on the MID and/or the multimedia display by illuminating continuously (far) or blinking (near), and beeping sounds will switch from intermittent to continuous as you approach and get closer to a detected obstacle. When the sensors detect two or more obstacles, the audible alerts will respond to the nearest zone.

Always check the surrounding area when using this system.

SYSTEM ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ Parking Assist” and then press “” to turn the system On/Off.
- (3) Press “” to go back to the menu.


Refer to the “Owner’s Manual” for limitations and more details.

FEATURES & OPERATIONS

RCD (Rear Camera Detection)

The rear camera detection (RCD) feature is designed to detect pedestrians in the detection area behind the vehicle when the vehicle is backing up. If a pedestrian is detected, a buzzer will sound and an icon will be displayed on the Multimedia display to inform the driver of the pedestrian.

DISPLAY ON AUDIO SYSTEM SCREEN

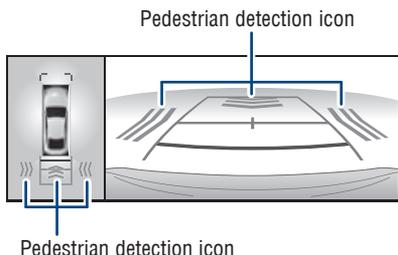

Pedestrian detection icon:


The icon will be displayed automatically when a pedestrian behind the vehicle.

SYSTEM ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ RCD” and then press “” to turn the system On/Off.
- (3) Press “” to go back to the menu.


Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.

Panoramic View Monitor (PVM) (if equipped)

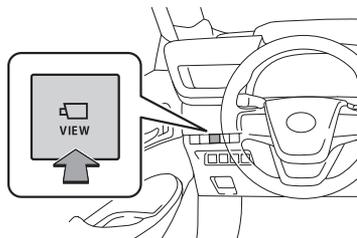


See-through view

Display mode switching button

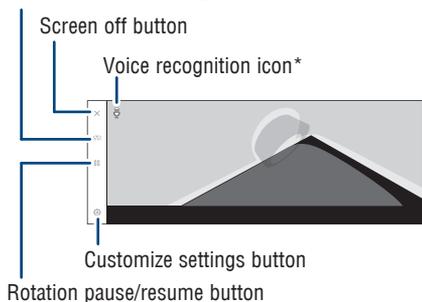

Moving view

Display mode switching button

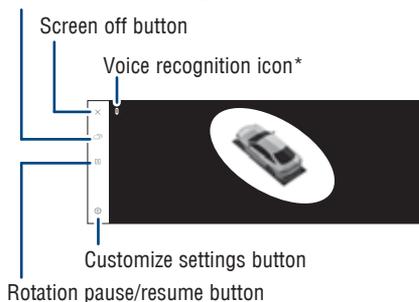

* If equipped


The Panoramic View Monitor (PVM) is designed to assist the driver in viewing the surroundings, when operating at low speeds or parking, by combining front, side and rear cameras and displaying an overhead image on the Audio Multimedia screen.

To view the moving view/see-through view screen, press the camera switch when the shift lever is in the "P" position and the Intuitive parking assist is enabled. Press the camera switch again to display the previous display screen, such as the navigation screen.

Refer to the "Multimedia Owner's Manual" for limitations and more details on this system.

FEATURES & OPERATIONS

Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA)

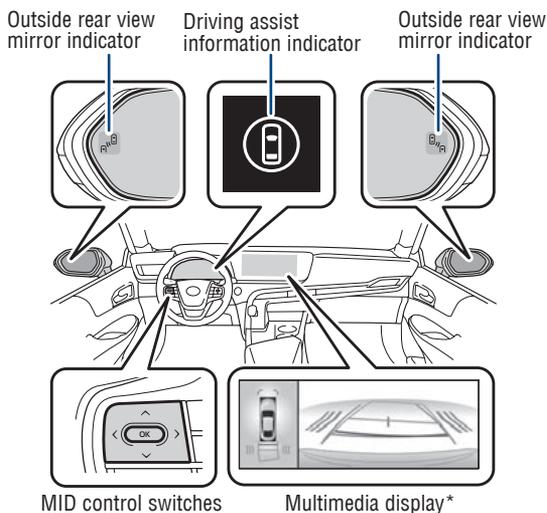

* RCTA only

BLIND SPOT MONITOR (BSM)

The system is designed to use radar sensors to detect vehicles traveling in the Mirai's blind spot. If a vehicle is detected, the driver will be alerted via the outside rear view mirror indicator on the detected side.

REAR CROSS TRAFFIC ALERT (RCTA)


While in reverse, when a vehicle approaching from the right or left rear of the Mirai is detected, the outside rear view mirror indicators will flash. Also, the RCTA icon for the detected side will be displayed on the multimedia display, and the RCTA buzzer will sound.

SYSTEM ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ BSM” or “ RCTA” and then press “” to turn BSM or RCTA On/Off.
- (3) Press “” to go back to the menu.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.

Safe Exit Assist (SEA) (if equipped)

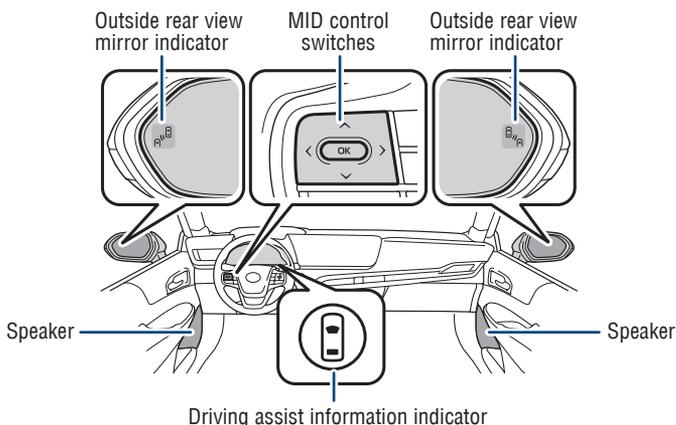

Safe Exit Assist is a system that uses rear side radar sensors installed on the inner side of the rear bumper to help warn occupants if an approaching vehicle or bicycle may collide with an opened door, before or as the door is being opened, to reduce the possibility of a collision.

SYSTEM ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ SEA” and then press “” to turn the system On/Off.
- (3) Press “” to go back to the menu.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.


FEATURES & OPERATIONS

Front and Rear Parking Assist with Automatic Braking (PA w/AB) (if equipped)


Front and Rear Parking Assist with Automatic Braking consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that the possibility of a collision with a detected object or pedestrian is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

FUNCTIONALITY


For static objects front and rear

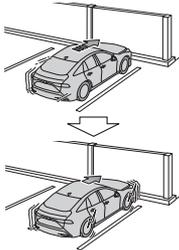

When traveling at a low speed and the brake pedal is not depressed, or is depressed late.

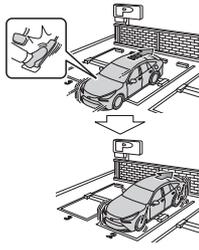


When the accelerator pedal is depressed excessively.

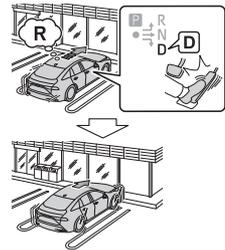


When the vehicle moves forward due to the incorrect shift position being selected.

For static objects around the vehicle (vehicles with the Advanced Park)

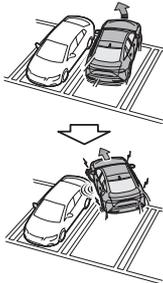

When moving forward and a collision with a stationary object on the inner side of a turn is likely.

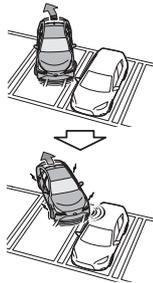


When reversing and a collision with a stationary object on the outer side of a turn is likely.

For moving vehicles rear of the vehicles



When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late.

For pedestrians rear of the vehicle

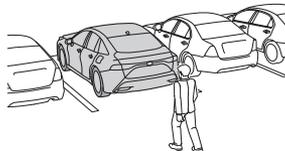

When an approaching pedestrian is detected behind the vehicle while backing up, and when the brake pedal is not depressed or is depressed late.

SYSTEM ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ PKSB” and then press “” to turn the system On/Off.
- (3) Press “” to go back to the menu.

Refer to the sections “Parking Support Brake function” in the “Owner’s Manual” for limitations and more details.

FEATURES & OPERATIONS

Advanced Park (if equipped)

Advanced Park is designed to assist in safely and smoothly parking in a target parking space by displaying the blind spots around the vehicle and the parking spot through a bird's eye view, delivering operation guidance through displays and buzzer operation, and changing the shift position, operating the steering wheel, accelerator pedal, and brake pedal. Advanced Park does not operate the turn signal.

Additionally, the panoramic view monitor can display the area in front, behind, and from above the vehicle, helping confirm the condition of the area around the vehicle.


Depending on the condition of the road surface or the vehicle, the distance between the vehicle and a parking space, etc., it may not be possible to assist in parking in the target space.

FUNCTIONALITY


- Perpendicular parking (forward/reverse) function
- Perpendicular exiting (forward/reverse) function
- Parallel parking function
- Parallel exiting function
- Memory function
- Remote control function

CAMERAS


Front camera

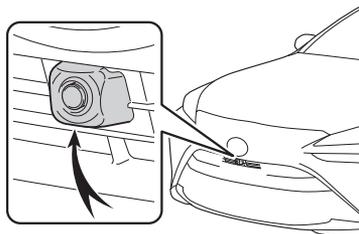


Side cameras

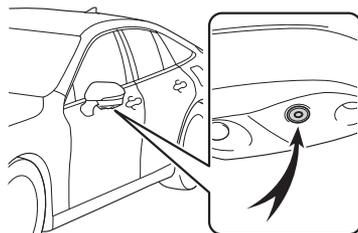

Rear camera

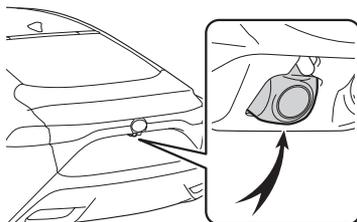

SYSTEM ON/OFF MAIN SWITCH

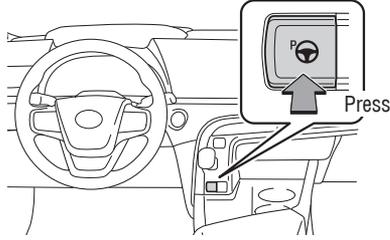

CONDITIONS WHERE ASSISTANCE WILL BEGIN

When all of the following conditions are met, the assistance will begin:

- The brake pedal is depressed
- The vehicle is stopped
- The driver's seat belt is fastened
- The steering wheel is not being operated
- The accelerator pedal is not depressed
- All of the doors and the trunk are closed
- The outside rear view mirrors are not folded
- The parking brake is not engaged
- The dynamic radar cruise control with full-speed range is not operating
- ABS, VSC, TRAC, PCS and PKSB are not operating
- The vehicle is not on a steep slope
- The VSC and TRAC are not turned off

Refer to the "Owner's Manual" for limitations and more details on this system before attempting to use it.

FEATURES & OPERATIONS

Traffic Jam Assist (TJA)

The Traffic Jam Assist (TJA) function, under the active supervision of the driver, provides lane keeping, accelerating/decelerating and stopping support on certain controlled access highways and expressways at vehicle speeds of approximately 25 mph (40 km/h) and below. The necessary operating conditions for this system include setting a speed using Dynamic Radar Cruise Control (DRCC) and having Lane Tracing Assist (LTA) activated. The DRCC setting “Extended Resume” Time must be set to ON. Additionally, the Driver Monitor Camera must confirm the driver is looking forward at the roadway. When TJA is operating, it is possible to take your hands off of the steering wheel.

Traffic Jam Assist is not an autonomous driving system; the driver must pay attention to the roadway and be ready to assume full control at any time.

Before using the Traffic Jam Assist function, familiarize yourself with the operation of the dynamic Dynamic Radar Cruise Control (DRCC) and the Lane Tracing Assist (LTA). Under all conditions, the driver must steer the vehicle when entering a service area/parking area or toll gate, or when changing lanes.


Display	Status	Action to be taken
	Traffic Jam Assist function is operating	–
 Gray	Traffic Jam Assist function is about to end	Hold the steering wheel.
 Orange	Traffic Jam Assist function has ended	Hold the steering wheel.
 Red	Operation of either or both of dynamic radar cruise control/LTA (Lane Tracing Assist) ended	Manually operate the steering wheel immediately.
 Yellow	Indicates that driving actions are necessary to cope with cut-in or other behavior of surrounding vehicles	The driver must operate the steering wheel, accelerator pedal and brake pedal in accordance with the surrounding environment.
	Indicates that the recording function of the driver monitor camera is operational (Blinking of this icon indicates that recording is undergoing, and constant illumination indicates ready for recording.)	–

TURNING TJA ON/OFF


- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ Vehicle Settings” and then press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select “TrafficJamAsst” and then press “” to turn the system On/Off.
- (4) Press “” to go back to the menu.

Refer to the Toyota “Owner’s Manual” for additional information on TJA operation, settings adjustments, limitations, and precautions before attempting to use it.

Driver Monitor Alert

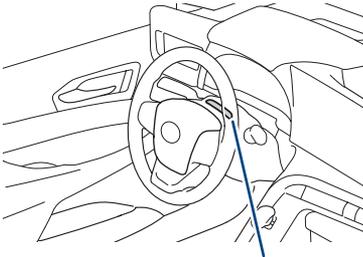

Driver monitor camera

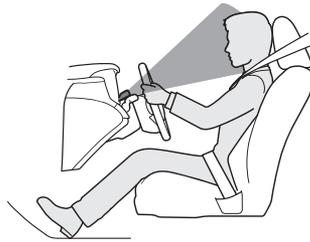

Driver monitor camera detects the position and direction the driver is facing, and whether their eyes are opened or closed. The system determines if the driver is checking their surroundings and if the driver can perform driving operations.

In situations such as the following, a buzzer will sound and a message will be displayed to warn the driver:

- When the system determines that the driver is not paying attention to the road or their eyes are closed.
- When the driver’s face cannot be detected or the system determines that the driver has poor driving posture.

These functions may not operate when the vehicle speed is low.

TURNING DRIVER MONITOR ALERT ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ Vehicle Settings” and then press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select “Driver Monitor Settings” and then press “.”
- (4) Press “” switches and select “Driver Monitor Alert” and then press “” to turn the system On/Off.
- (5) Press “” to go back to the menu.

Refer to the “Owner’s Manual” for limitations and more details on this system before attempting to use it.

FEATURES & OPERATIONS

Front Cross Traffic Alert (FCTA)

When approaching an intersection, etc., at a low speed, vehicles approaching from the left and right of the front of the vehicle can be detected and the driver informed of these vehicles.


Operation of the Front Cross Traffic Alert is controlled by the following situations.

- When the system detects a vehicle approaching from the left or right of the front of your vehicle when approaching an intersection, a notification will be displayed.
- When the system determines that your vehicle may be about to enter an intersection even though a vehicle is approaching from the left or right in front of your vehicle, a buzzer will sound and a message will be displayed to urge you to depress the brake pedal.

Head-Up Display (HUD)



Multi-Information Display (MID)

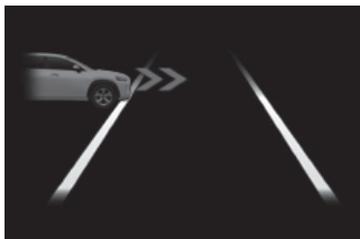

TURNING FCTA ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ Vehicle Settings” and then press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select “FCTA” or “Front Cross Traffic Alert” and then press “” to turn FCTA On/Off.
- (4) Press “” to go back to the menu.

CONDITIONS WHEN FCTA WILL BE OPERATED

When all of the following conditions are met, the system will be operated:

- A shift position other than P or R is selected.
- The vehicle speed is approximately 10 mph (15 km/h) or less.
- A vehicle is approaching from the left or right of the front of your vehicle at a speed between approximately 7 to 37 mph (10 to 60 km/h).
- There are no vehicles in front of your vehicle.
- The accelerator pedal is not being strongly depressed.
- The brake pedal is not being strongly depressed.

Refer to the Toyota “Owner’s Manual” for additional information on FCTA operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Change Assist (LCA)

Lane Change Assist provides steering assistance during a lane change signaled by the driver while Dynamic Radar Cruise Control and Lane Tracing Assist are activated, and the vehicle speed is between approximately 55 and 85 mph (90 and 140 km/h). This function should only be used on highways and expressways. The steering assist operation can be overridden by the steering wheel operation of the driver. The lane change assist function is not designed to operate when changing lanes at a junction.



LCA display	Steering icon	Condition
 Blue arrow and white line	 Green	LCA is operating
	 Gray	Approaching vehicle detected while LCA is operating
Not displayed	 Gray	Lane line no longer detected while LCA is operating

TURNING LCA ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ Vehicle Settings” and then press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select “LCA” or “Lane Change Assist” and then press “” to turn LCA On/Off.
- (4) Press “” to go back to the menu.

OPERATING LCA

If the turn signal lever is held in the first position, the lane change direction will be displayed and the function will operate.

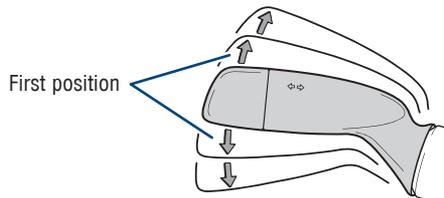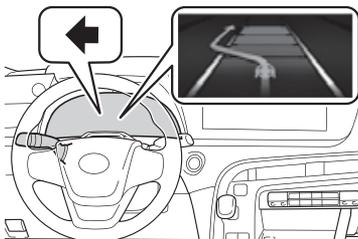

Refer to the Toyota “Owner’s Manual” for additional information on LCA operation, settings adjustments, limitations, and precautions before attempting to use it.

Quick overview-Toyota Safety Sense™ 3.0

Toyota Safety Sense™ (TSS) 3.0 is a suite of safety and driver assistance technologies designed to support driver awareness, decision making, and vehicle operation. TSS includes features such as Pre-Collision System with Pedestrian Detection, Lane Departure Alert with Steering Assist, and Dynamic Radar Cruise Control.

Refer to the Owner's Manual for details including system operation, limitations, and setting adjustments.

For more information, please visit www.toyota.com/safety-sense.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system determines there is potential for a collision with a detected object.


The advanced front radar system is designed to work with the forward-facing camera to help recognize a preceding vehicle, bicyclist, pedestrian or motorcyclist in certain conditions.



Lane Tracing Assist (LTA)

When driving on a road with clear lane lines with the dynamic radar cruise control operating, Lane Tracing Assist detects the lane lines and preceding and surrounding vehicles using the front camera and radar sensor, and operates the steering wheel to maintain the vehicle's lane position. LTA requires the driver to grip the steering wheel.

When LTA is activated, if the system does not detect driving operations, such as if the driver is not holding the steering wheel, and determines the driver is not responsive, the Emergency Driving Stop System (EDSS) is designed to decelerate the vehicle to a stop within its current lane to help avoid or mitigate a possible collision.

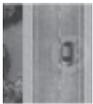

Lane Departure Alert (LDA) with Steering Assist

LDA uses the front camera to detect lane lines or certain other roadway boundaries. This system warns the driver if the vehicle may deviate from the current lane or course and also can slightly operate the steering wheel to help avoid deviation from the lane or course. If LDA detects that the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.



Full-Speed Range Dynamic Radar Cruise Control (DRCC)

Full-Speed Range DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed.



Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the taillights of preceding vehicles and switch between high beams and low beams as appropriate.



Road Sign Assist (RSA)

RSA is designed to recognize specific road signs using the forward-facing camera to provide information to the driver via the display.



Proactive Driving Assist (PDA)


When system operating conditions are met, using the vehicle's camera and radar, Proactive Driving Assist (PDA) provides gentle braking into curves or gentle braking and/or steering to help control distance between your vehicle and a preceding vehicle, pedestrian or bicyclist.

Over-The-Air (OTA) Updates

TSS 3.0 is capable of over-the-air updates. To use this function it is necessary to opt-in to the Connected Service Master Data Consent. In some instances when software is updated, the operating methods or functions may change. Before using the system, make sure to read the Digital Owner's Manual corresponding to the current software version, available at www.toyota.com/owners/resources/warranty-owners-manuals.

Sensors

TSS 3.0 combines a forward-facing camera mounted in front of the inside rear view mirror and a grille-mounted radar mounted in the front grille. These sensors support the driving assist systems.

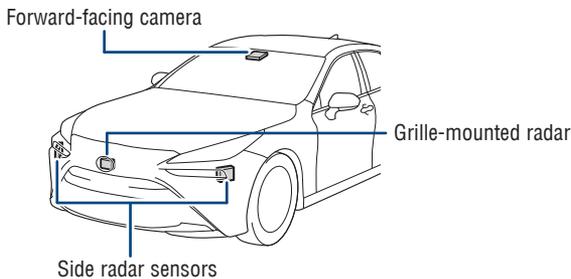

Pre-Collision System with Pedestrian Detection (PCS w/PD)

The Pre-Collision System with Pedestrian Detection (PCS w/PD) is designed to help detect a vehicle, bicyclist, pedestrian or motorcyclist in certain situations. Using both a camera and front radar, PCS w/ PD can provide an audio/visual alert to warn you of a possible collision under certain circumstances. If you don't react, the system is designed to automatically brake.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle, bicyclist, pedestrian or motorcyclist may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

Refer to the Toyota "Owner's Manual" for a list of additional situations in which the system operation may be limited.

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and an icon and warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Brake Control

If the driver does not brake in a set time and the system determines that the possibility of a collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

See www.toyota.com/safety-sense for more information.

PCS PEDESTRIAN DETECTION

Under certain conditions, the PCS included with TSS 3.0 may also help to detect a pedestrian, bicyclist or motorcyclist in front of your vehicle using the forward-facing camera and the front radar sensor. The forward-facing camera of PCS detects a potential pedestrian, bicyclist or motorcyclist based on size, profile, and motion of the detected pedestrian, bicyclist or motorcyclist. However, a pedestrian, bicyclist or motorcyclist may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian, bicyclist or motorcyclist, preventing the system from operating or engaging.

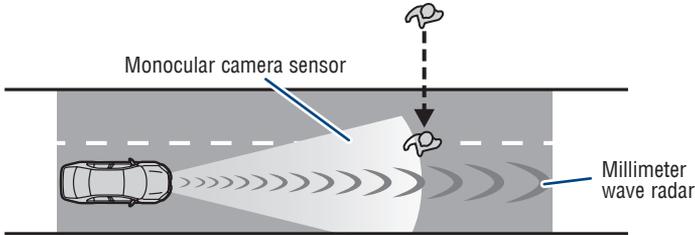

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.


Refer to the Toyota "Owner's Manual" for additional limitations and information.

CHANGING PCS WARNING TIMING

- (1) Press "⬆" switches and select "⚙️" from the Multi-Information Display (MID).
- (2) Press "⬆" switches and select "🚗 PCS" and then press and hold "OK". The setting screen is displayed.
- (3) Press "⬆" switches and select "Warning timing" and then press "OK" to change the desired setting. Each time it is pressed, the PCS warning timing changes "Later" or "Default" or "Earlier."
- (4) Press "↩" to go back to the menu.

Note: PCS is enabled each time the vehicle is turned on. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same.)

DISABLING PRE-COLLISION SYSTEM (PCS)

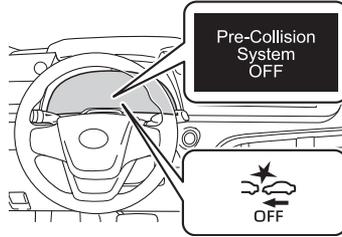

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ PCS” and then press and hold “.
- The setting screen is displayed.
- (3) Press “” switches and select “ PCS” and then press “

Refer to the Toyota “Owner’s Manual” for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Tracing Assist (LTA)

When driving on a road with clear lane lines with the dynamic radar cruise control operating, Lane Tracing Assist detects the lane lines and preceding and surrounding vehicles using the front camera and radar sensor, and operates the steering wheel to maintain the vehicle's lane position. LTA requires the driver to grip the steering wheel.

When LTA is activated, if the system does not detect driving operations, such as if the driver is not holding the steering wheel, and determines the driver is not responsive, the Emergency Driving Stop System (EDSS) is designed to decelerate the vehicle to a stop within its current lane to help avoid or mitigate a possible collision.

See www.toyota.com/safety-sense for more information.


Operation of the Lane Tracing Assist function is indicated by the following icons on the instrument cluster.

Indicator	Lane display	Steering icon	Situation
 White	 Gray/White	 Gray	LTA is on standby
 Green	 Green	 Green	LTA is operating
 Yellow Flashing	 Yellow Flashing	 Green	The vehicle is departing the lane toward the side which the lane display is flashing

Refer to the Toyota "Owner's Manual" for additional information on LTA operation, settings adjustments, limitations, and precautions before attempting to use it.

TURNING LANE TRACING ASSIST (LTA) ON/OFF

Press the LTA switch to turn LTA ON/OFF.

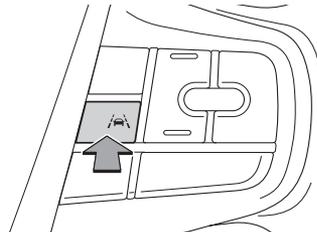

Note: Operation of LTA and setting adjustments continues in the same condition regardless of power switch modes until changed by the driver or the system is reset. The LTA indicator is illuminated when LTA is on.


Lane Departure Alert (LDA) with Steering Assist

LANE DEPARTURE ALERT (LDA) WITH STEERING ASSIST


By detecting visible lane markings or the road's edge at speeds above 30 mph, Lane Departure Alert (LDA) with Steering Assist is designed to issue a visual alert and audio or steering vibration alert if an inadvertent lane departure is detected. If the driver does not take corrective action, the Steering Assist function is designed to provide gentle corrective steering.* If LDA detects that the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.

* See www.toyota.com/safety-sense for more information and limitations.


Lane departure alert function

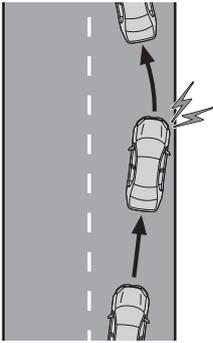

Lane departure prevention function

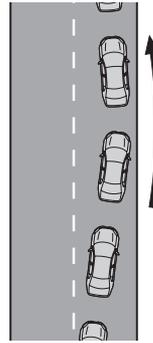

Break suggestion function (Sway Warning)

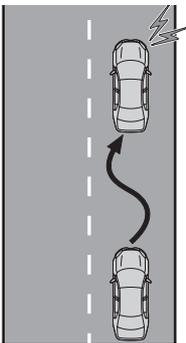

LANE DEPARTURE ALERT (LDA) WITH STEERING ASSIST (CONTINUED)

Operation of the Lane Departure Alert function is indicated by the following icons on the instrument cluster.

Indicator	Lane display	Steering icon	Operation
Not illuminated	Not illuminated	Not illuminated	System disabled
 White	 Gray	Not illuminated	Lane lines are not detected by the system
 White	 White	Not illuminated	Lane lines are detected by the system
 Yellow Flashing	 Yellow Flashing	Not illuminated	Lane departure alert function is operating for the side which the lane display is flashing
 Green	 Green	 Green	Lane departure prevention function is operating for the side which the lane display is illuminated
 Yellow Flashing	 Yellow Flashing	 Green	Lane departure alert function/lane departure prevention function is operating for the side which the lane display is flashing

TURNING LDA ON/OFF

- Press “” switches and select “” from the Multi-Information Display (MID).
- Press “” switches and select “ LDA” and then press and hold “.

The setting screen is displayed.

- Press “” switches and select “ LDA” and then press “” to turn LDA On/Off.
- Press “” to go back to the menu.

TOYOTA SAFETY SENSE™

ADJUSTING LDA ALERT TIMING

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ LDA” and then press and hold “.

The setting screen is displayed.

- (3) Press “” switches and select “Alert Timing” and then press “.

Each time it is pressed, the LDA alert timing changes “Default” or “Earlier.”

- (4) Press “.

ADJUSTING LDA ALERT OPTIONS

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ LDA” and then press and hold “.

The setting screen is displayed.

- (3) Press “” switches and select “Alert Options” and then press “.

Each time it is pressed, the LDA alert options changes “Vibration” or “Beep.”

- (4) Press “.

TURNING THE DRIVER BREAK SUGGESTION (SWAY WARNING) ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
 - (2) Press “” switches and select “ Vehicle Settings” and then press and hold “.

The setting screen is displayed.

 - (3) Press “” switches and select “ Driver Break Suggestion” and then press “.
- (4) Press “.

Refer to the Toyota “Owner’s Manual” for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.


Full-Speed Range Dynamic Radar Cruise Control (DRCC)

Intended for highway use, Full-Speed Range Dynamic Radar Cruise Control (DRCC) lets you drive at a preset speed, with a minimum set speed of approximately 20 mph. The system uses vehicle-to-vehicle distance control, helping maintain a preset distance from the vehicle ahead of you.*


* See www.toyota.com/safety-sense for more information

Refer to the Toyota "Owner's Manual" for a list of additional situations in which the system operation may be limited.

Meter display

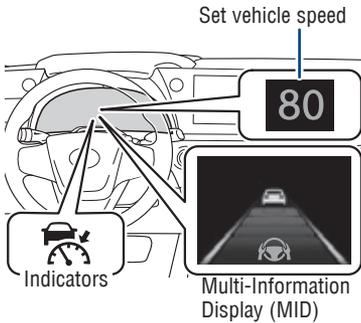


Switches

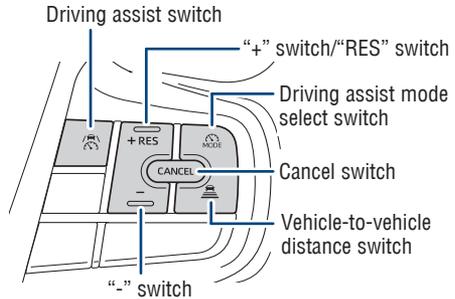


ACTIVATING DRCC

(1)

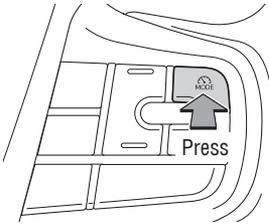

(2)


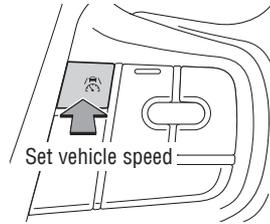


The vehicle will cruise at a set vehicle speed, decelerate to maintain a selected distance from a slower preceding vehicle and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Press "MODE" switch to select DRCC. The dynamic radar cruise control indicator "MODE" will illuminate and the message "Adaptive Cruise Mode" will be displayed on the MID.
- (2) Using the accelerator pedal, accelerate or decelerate to the desired vehicle speed (approximately 20 mph [30 km/h] or more), and press "+" switch to set the set vehicle speed. The set vehicle speed will be displayed on the Multi-Information Display (MID).

TOYOTA SAFETY SENSE™


ADJUSTING SET VEHICLE SPEED

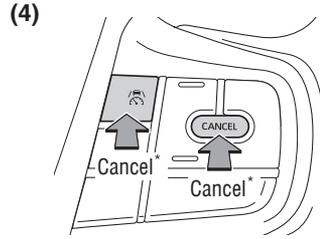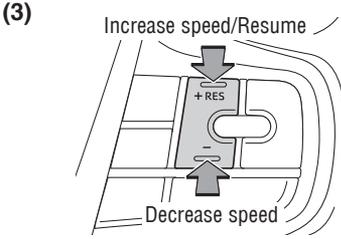


- (3) To change the set vehicle speed, press the “+” (increase) or “-” (decrease) switch until the desired speed is displayed. Press and hold to continuously adjust the speed in 1 mph (1.6 km/h) increments, or use a single press to adjust in individual increments of 1 mph (1.6 km/h).
- (4) Press “” switch or “” switch to cancel the speed control. (Press the “” switch to resume control.)

* The speed control may also be canceled by depressing the brake pedal.

ADJUSTING DISTANCE

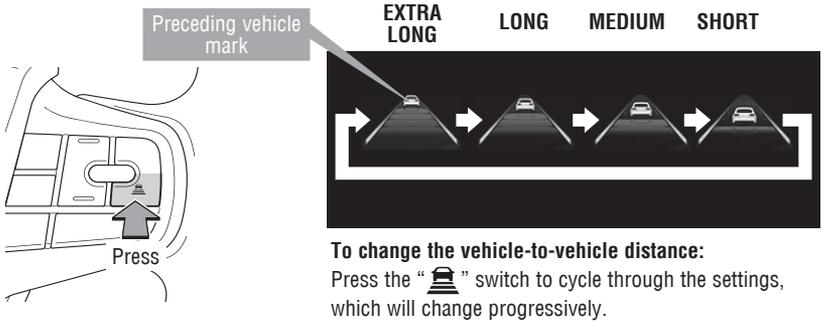

The actual vehicle-to-vehicle distance varies in accordance with the vehicle speed. Also, when the vehicle is stopped by system control, it will be stopped at a certain distance from the preceding vehicle, depending on the situation, regardless of the setting.

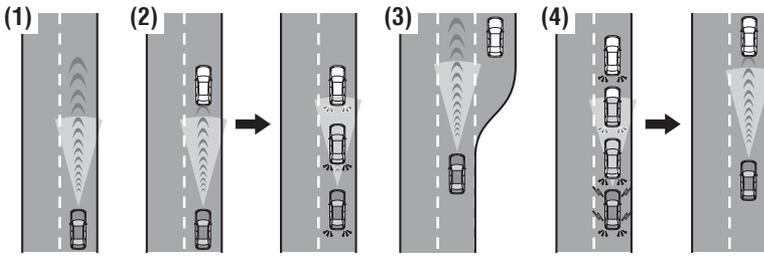

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. If the set vehicle speed is exceeded while driving down a hill, the set vehicle speed display will blink and a buzzer will sound.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set vehicle speed is detected

When a slower vehicle is detected running ahead of your vehicle, the vehicle automatically decelerates and if a greater reduction in vehicle speed is necessary, the brakes may be applied (the brake lights will come on at this time). The vehicle is controlled to maintain the vehicle-to-vehicle distance set by the driver, in accordance with changes in the speed of the preceding vehicle. If vehicle deceleration is not sufficient and the vehicle approaches the vehicle ahead, the approach warning will sound.

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set vehicle speed

The vehicle accelerates until the set vehicle speed is reached and then resumes constant speed cruising.

(4) Starting off

If a preceding vehicle stops, the vehicle will also stop (controlled stop). After the preceding vehicle starts off, pressing the "RES" switch or depressing the accelerator pedal will resume follow-up cruising (start off operation). If a start off operation is not performed, the controlled stop will continue.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

ADDITIONAL DRCC SETTINGS

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ Vehicle Settings” then press and hold “.”
- (3) Press “” switches and select “ DRCC” and then press “.”
The setting screen is displayed.
- (4) Press “” switches to select a DRCC setting from the menu, and then press “” to change the desired setting.
- (5) Press “” to go back to the menu.


Refer to the Toyota “Owner’s Manual” for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

Cruise Control


Intended for highway use, Cruise Control lets you drive at a preset speed. The system is designed to function at speeds greater than 20 mph.

Refer to the Toyota “Owner’s Manual” for a list of additional situations in which the system operation may be limited.

Meter display

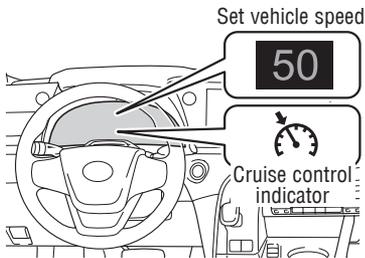


Switches

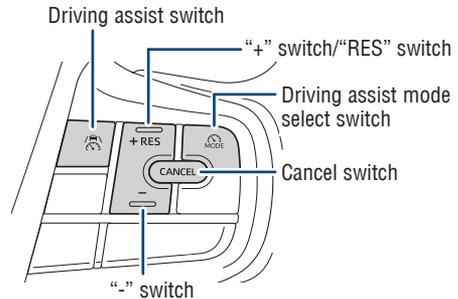


ACTIVATING CRUISE CONTROL

(1)

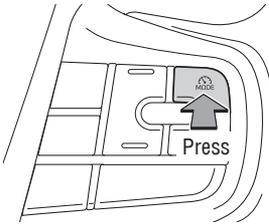

(2)

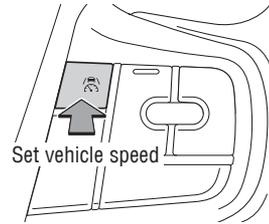


Vehicle will cruise at a set vehicle speed.


- (1) Press "MODE" switch to select "Cruise Control Mode." The cruise control indicator  will illuminate.
- (2) Using the accelerator pedal, accelerate or decelerate to the desired vehicle speed (approximately 20 mph [30 km/h] or more), and press  switch to set the set vehicle speed. The set vehicle speed will be displayed on the Multi-Information Display (MID).

ADJUSTING SET VEHICLE SPEED

(3)

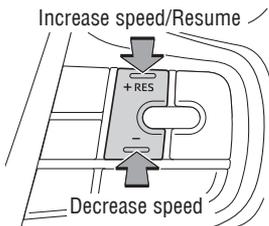

(4)

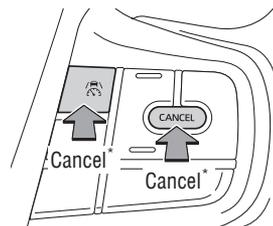


- (3) To change the set vehicle speed, press the "+" (increase) or "-" (decrease) switch until the desired speed is displayed. Press and hold to continuously adjust the speed in 1 mph (1.6 km/h) increments, or use a single press to adjust in individual increments of 1 mph (1.6 km/h).
- (4) Press "CANCEL" switch or  switch to cancel the speed control. (Press the "CANCEL" switch to resume control.)

* The speed control may also be canceled by depressing the brake pedal.

Note: NOTE: On steep downhills, or where there are sudden changes between sharp up and down gradients, vehicle speed may exceed the set speed when driving down a steep hill.

Refer to the Toyota "Owner's Manual" for additional information on Cruise Control operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

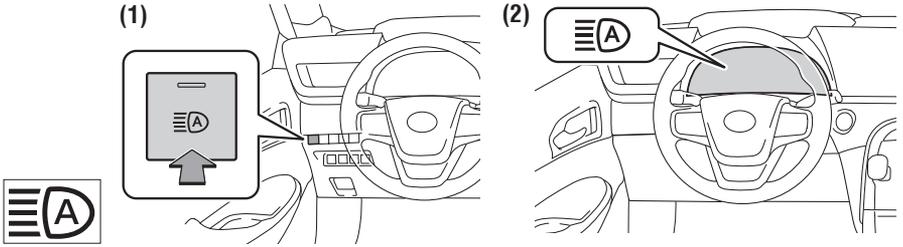

The Automatic High Beams (AHB) safety system is designed to help the driver see more clearly at night. At speeds above 21 mph, AHB can detect the headlights of oncoming vehicles and taillights of preceding vehicles, then automatically toggles between high and low beams accordingly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota “Owner’s Manual” for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

- (1) Press the “” switch.
- (2) Turn the headlight switch to the “” or “AUTO” position.

The AHB indicator “” will come on when the headlights are on and the headlight switch lever is in the low beam position to indicate the system is active.

Note: Push the lever away from you to manually turn on high beams. Press the AHB switch to turn the AHB system off.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY


When all of the following conditions are met, the high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is approximately 21 mph (34 km/h) or more.
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or taillights turned on.
- There are few streetlights or other light on the road ahead.

If any of the following conditions occur, the high beams will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or taillights turned on.
- There are many streetlights or other light on the road ahead.

TEMPORARILY SWITCHING TO THE LOW BEAMS

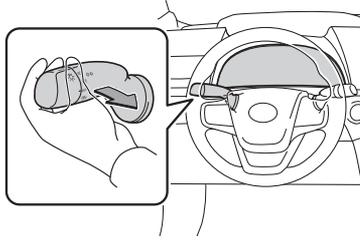

Pull the lever rearward and then return it to its original position to switch to the low beams temporarily.

The high beams will illuminate while the lever is pulled. However, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. Afterwards, the Automatic High Beams will be activated again.

NOTE: It is recommended to switch to the low beams when the high beams may cause problems or distress to other drivers or pedestrians nearby.

Refer to the Toyota "Owner's Manual" for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

Road Sign Assist (RSA)

Using the forward-facing camera and/or navigation system (if equipped), Road Sign Assist (RSA) is designed to detect certain road signs and display them on the instrument cluster.

All vehicle actions must be driver-initiated and are not automated.

Refer to the Toyota "Owner's Manual" for additional information and limitations.

SUPPORTED TYPES OF ROAD SIGNS

The following types of road signs can be displayed.



Speed limit



Do Not Enter



No U-turn



No Turn On Red



Stop



Yield



Warning

Depending on the specifications of the vehicle, signs may be displayed overlapping.

TOYOTA SAFETY SENSE™

SYSTEM ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ RSA” and then press “” to turn RSA On/Off.
- (3) Press “” to go back to the menu.

Note: If the vehicle was last turned off while a speed limit sign was displayed on the Multi-Information Display (MID), the same sign displays again when the vehicle is turned back ON.

ADDITIONAL RSA SETTINGS


- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ RSA” and then press and hold “.”
The setting screen is displayed.
- (3) Press “” switches to select an RSA setting from the menu, and press “” to select or change a desired setting.
- (4) Press “” to go back to the menu.

Refer to the Toyota “Owner’s Manual” for additional information on RSA operation, settings adjustments, limitations, and precautions before attempting to use it.

Proactive Driving Assist (PDA)

When system operating conditions are met, using the vehicle's camera and radar, Proactive Driving Assist (PDA) provides gentle braking into curves or gentle braking and/or steering to help support driving tasks such as distance control between your vehicle and a preceding vehicle, pedestrian or bicyclist.

SYSTEM OPERATION DISPLAY

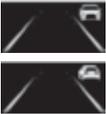Icon	Meaning
	<ul style="list-style-type: none"> • White: Monitoring for detectable objects • Green: Detectable object crossing the road or detectable object on the side of the road assistance operating
	A pedestrian has been detected as crossing the road or on the side of the road and brake or steering assistance is operating
	A vehicle has been detected on the side of the road and brake or steering operation assistance is being performed
	<ul style="list-style-type: none"> • Steering operation assistance is being performed to prevent the vehicle from approaching too close to a detectable object on the side of the road • When the steering assist is operating
	Preceding vehicle deceleration assistance is being performed
	Warning to maintain appropriate vehicle-to-vehicle distance
	Curve deceleration assistance is being performed

TURNING PDA ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ PDA” and then press “” to turn PDA On/Off.
- (3) Press “” to go back to the menu.

TOYOTA SAFETY SENSE™

ADJUSTING PDA SUPPORT TIMING

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ PDA” and then press and hold “.
- The setting screen is displayed.
- (3) Press “” switches and select “Sensitivity” and then press “.
- the desired setting. Each time it is pressed, the timing options changes “Later”, “Default” or “Earlier.”
- (4) Press “.

OBSTACLE ANTICIPATION ASSIST (OAA)

Obstacle Anticipation Assist (OAA) is designed to detect vehicles parked on the side of the road, or pedestrians or bicyclists on the side of the road or crossing the road, and depending on the circumstances, OAA may provide mild braking and/or steering assist to control distance between the detected object and the vehicle. This system operates at vehicle speeds of approximately 20-35 mph (30-60 km/h).

TURNING OBSTACLE ANTICIPATION ASSIST (OAA) ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ PDA” and then press and hold “.
- The setting screen is displayed.
- (3) Press “” switches and select “OAA” or “Obstacle Anticipation Assist” and then press “.
- to turn the system On/Off.
- (4) Press “.

DECELERATION ASSIST (DA)

Deceleration Assist (DA) is designed to provide braking assist and gently reduce vehicle speed when the system detects preceding vehicles or certain upcoming curves in the road and the driver is not pressing on the accelerator or brake pedals. This feature operates at speeds above approximately 15 mph (20 km/h). DA does not provide steering support and will not bring the vehicle to a complete stop.

TURNING DECELERATION ASSIST (DA) ON/OFF

- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select “ PDA” and then press and hold “.
- The setting screen is displayed.
- (3) Press “” switches and select “DA” or “Deceleration Assist” and then press “.
- to turn the system On/Off.
- (4) Press “.

STEERING ASSIST (SA)

PDA Steering Assist (SA) is designed to detect the lines of the roadway and vary the assistance from the power steering to help the driver stay within the lane. Steering Assist does not actively steer the vehicle. This feature is designed to operate at vehicle speeds between 5-80 miles per hour and does not require DRCC to be engaged.


TURNING STEERING ASSIST (SA) ON/OFF

- (1) Press “

Refer to the Toyota “Owner’s Manual” for additional information on PDA operation, settings adjustments, limitations, and precautions before attempting to use it.

SAFETY & EMERGENCY FEATURES

Safety Connect®

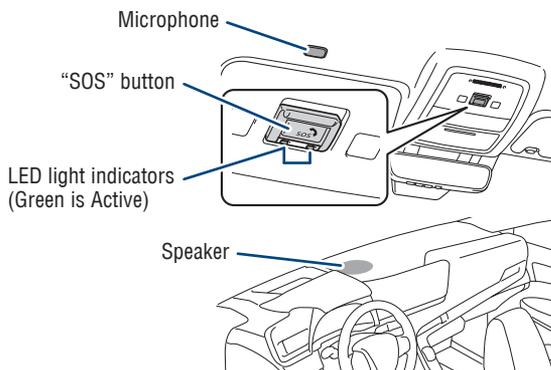

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is staffed with live agents at the Toyota response center, which operates 24 hours per day, 7 days per week.


Services for subscribers include:

- Automatic collision notification
- Stolen vehicle locator
- Emergency assistance ("SOS" button)
- Enhanced roadside assistance

For limitations and additional information, refer to the "Owner's Manual" or visit www.toyota.com/connected-services.


Rear door child safety locks

Rear door

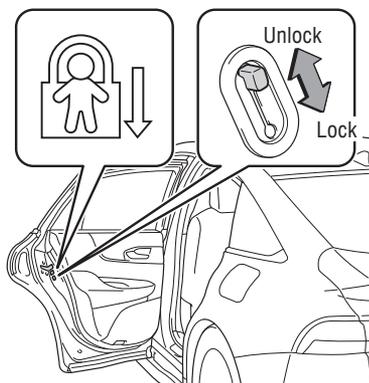

Moving the lever downward will allow the door to be opened only from the outside.


Seat belts

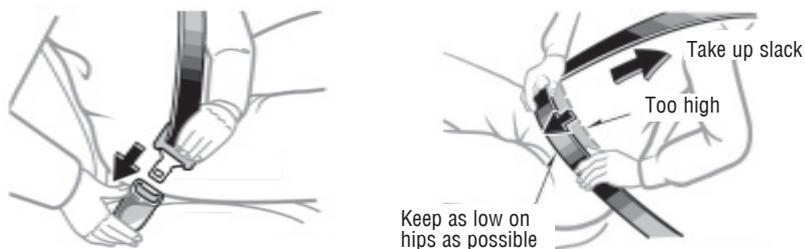

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the "Owner's Manual".

Seat belts-Shoulder belt anchor

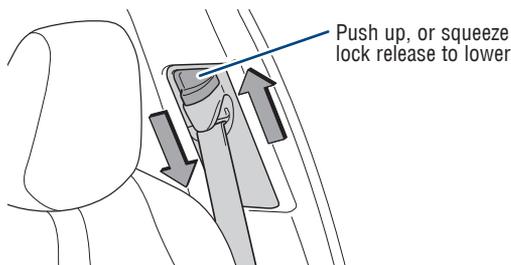


SAFETY & EMERGENCY FEATURES

Emergency tire puncture repair kit


Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit (a bottle of sealant and compressor). After temporarily repairing the tire with the repair kit, have the tire repaired or replaced by your Toyota dealer.

TOOL LOCATION

Type A

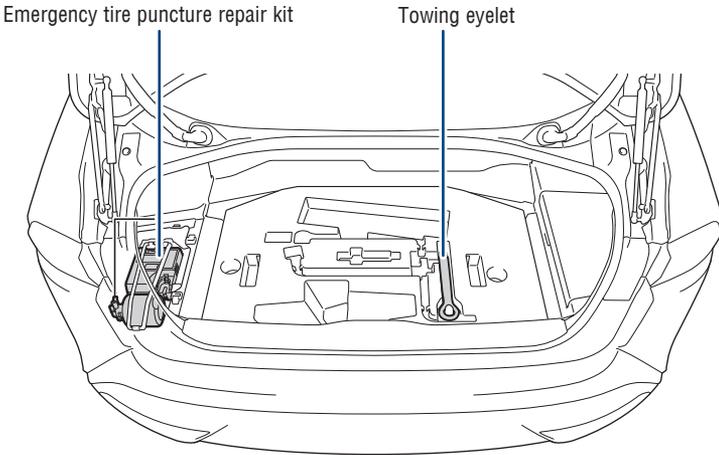


Type B

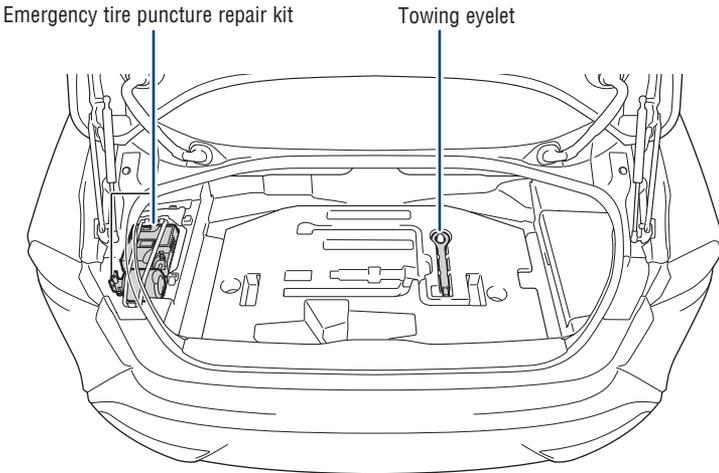

TIRE REPAIR KIT COMPONENTS


Bottle

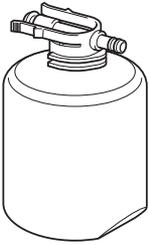

Sticker



Compressor

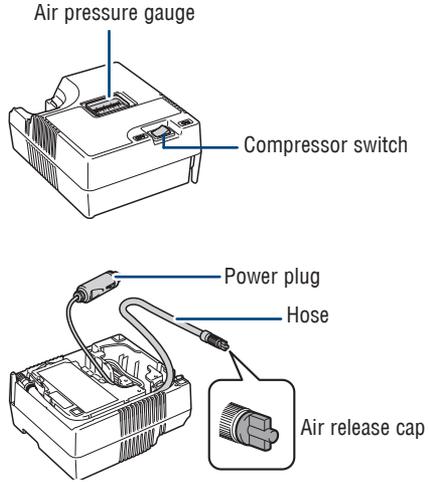


Refer to the "Owner's Manual" for tire changing procedures.


Trunk-Internal release

The trunk lid can be opened by pulling the glow-in-the-dark lever located on the inside of the trunk lid to the side.

The lever will continue to glow for some time after the trunk lid is closed.

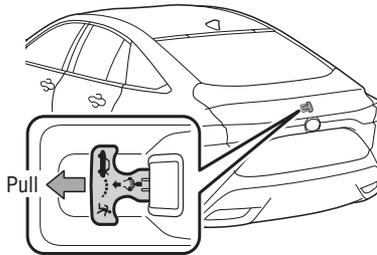

Tire Pressure Monitoring (warning) System (TPMS)

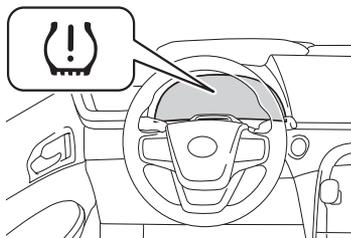

The tire pressure detected by the tire pressure warning system can be displayed on the Multi-Information Display (MID).

The tire pressure warning system can be selected on “” of the Multi-Information Display (MID).

System reset initialization

(1) Press “” switches and select “” from the Multi-Information Display (MID).

(2) Press “” switches and select “Vehicle Settings” then press and hold “”.

(3) Press “” switches and select “TPWS setting” and then press “”.

(4) Press “” switches and select “Tire Pressure Setting Pressure”, then press and hold “”.

- Setting by selecting a specified tire inflation pressure -

(5) Press “” switches and select “Setting by Specified Pressure” and then press “”. And then select the desired front and rear tire pressures, then press “”. The tire pressure warning light will slowly blink three times.

- Setting using the current tire inflation pressure -

(5) Press “” switches and select “Setting by Current Pressure” and then press “”. The tire pressure warning light will slowly blink three times and a message indicating that tire pressure is being set will be displayed on the MID.

If the tire pressure indicator flashes for approximately 1 minute and then remains on, take the vehicle to your local Toyota dealer.

Refer to the load label on the door jamb or the “Owner’s Manual” for tire inflation specifications.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the “Owner’s Manual” for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota’s Anti-lock Brake System detects which wheels are locking up and limits wheel lockup by “pulsing” each wheel’s brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle’s stopping distance. When there’s only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota’s ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces motor power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn’t engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

SAFETY & EMERGENCY FEATURES

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing Motor power output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).




Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Motor power output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Only use one floor mat at a time, using the equipped fasteners to keep the mat in place.
- Install floor mats right side up.

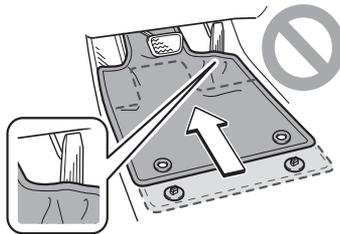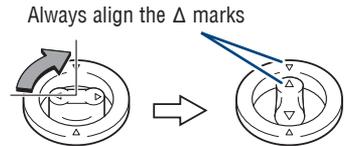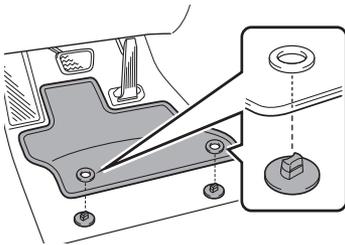

GETTING STARTED WITH TOYOTA AUDIO MULTIMEDIA AND CONNECTED SERVICES

- Registering Your Vehicle
- Toyota App
- Bluetooth® Pairing
- Connected Services
- Connected Technology Support
- Apple CarPlay®
- Android Auto™
- SiriusXM®
- Updating System Software

Scan QR Code to Download Toyota app:

Apple



Android



Connected Technology Support



Visit the Toyota Connected Technology Support site for the latest instructions and setup of your Connected Technology services.

Do not attempt the process while driving.

Registering Your Vehicle

Please visit <https://toyotaaudioandconnectedservicesupport.com> for the most up to date instructions.



Toyota App



TOYOTA

Toyota app allows access to valuable information about your vehicle and control of capable features equipped with your vehicle.

- Manuals & Warranties
- Schedule Maintenance
- Roadside Assistance
- Vehicle Health Report
- SiriusXM® Radio
- Safety Recalls
- Toyota Financial Services - Vehicle Payment

Remote Connect equipped vehicle functions:

- Lock/Unlock
- Start Vehicle
- Vehicle Finder
- Guest Driver settings
- Hazard Lights On
- Remote Climate
- Vehicle Status Alerts

Scan QR Code to Download Toyota app.

Apple



Android



Or

Search "Toyota" at your applicable app store.



If you have a Toyota Owner's account, use your credentials to "Sign In" and get started with Toyota app.


Or

If you do not have a Toyota Owner's account, "Register" now to get started with Toyota app.



GETTING STARTED WITH

Bluetooth® Pairing¹

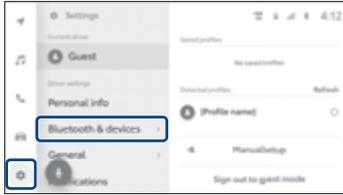


Note:
Do not attempt the Bluetooth® Pairing process while driving.

STEP 1 Select [GEAR ICON] from the main menu, then “Bluetooth & Devices.”




iPhone Bluetooth Menu Android Bluetooth Menu


STEP 2 Ensure Bluetooth is turned on for your phone.

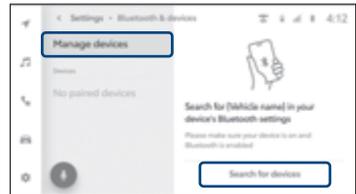

STEP 3 Select “Manage devices”, then “Search for devices.”

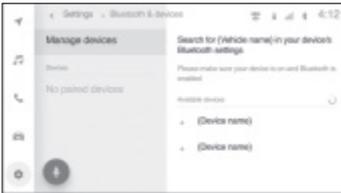


STEP 4 Select “Device name” to register.

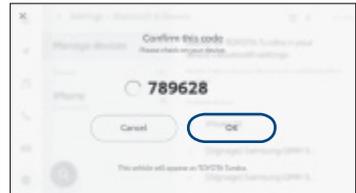

STEP 5 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth® device, and then select [OK].




STEP 6 If your device supports Apple CarPlay / Android Auto, select “Yes” to enable.

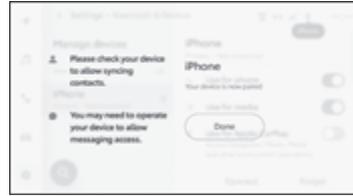

STEP 7 While pairing your device, a message may display asking to check your device to allow syncing contacts and allow messaging.


Note: You may also select “Skip” on display screen to skip enabling notifications. If skipped, proceed to **STEP 9**.

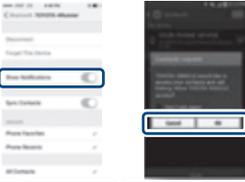

iPhone

Android

STEP 8 Turn on “Show Notifications” for iPhone® or “ON” for Android.

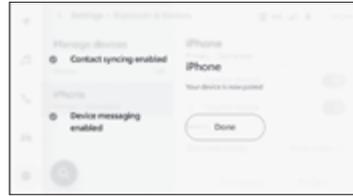

STEP 9 A confirmation will appear once your phone has been paired and connected.

GETTING STARTED WITH

Connected Services²

Your vehicle may come available with a trial period for the following Connected Services.

Learn more at www.toyota.com/connected-services/.

Safety Connect³

- (SOS) EMERGENCY ASSISTANCE BUTTON
- AUTOMATIC COLLISION NOTIFICATION
- ROADSIDE ASSISTANCE
- STOLEN VEHICLE LOCATOR

Remote Connect⁴ (if equipped)

- START VEHICLE
- VEHICLE STATUS ALERTS
- HAZARD LIGHTS ON
- GUEST DRIVER SETTINGS
- LOCK/UNLOCK VEHICLE DOORS
- VEHICLE FINDER
- REMOTE CLIMATE

Completing the registration process is required to enable Remote Connect.

Service Connect⁵ (if equipped)

- VEHICLE HEALTH REPORT
- VEHICLE MAINTENANCE ALERT NOTIFICATION

Completing the registration process is required to enable Service Connect.

Drive Connect

- CLOUD NAVIGATION
- DESTINATION ASSIST
- INTELLIGENT ASSISTANT


Wi-Fi Connect⁷

Multiple mobile devices

- Connect up to 5 Wi-Fi enabled devices
- Passengers can use smartphones, laptops and tablets

Infotainment

- Browse the internet
- Send and receive email
- Stay connected on social media
- Access favorite apps
- Stream movies

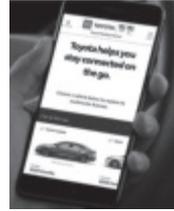


Several factors may affect smartphone and/or system performance including:

1. Smartphone operating system software version
2. Smartphone battery power level
3. Poor cellular reception to the smartphone
4. Multiple applications running on a smartphone at the same time
5. Charge/media cable quality
6. Smartphone operating system updates may also affect Toyota app functionality

For additional information, please visit: www.toyota.com/connected-services

Connected Technology Support

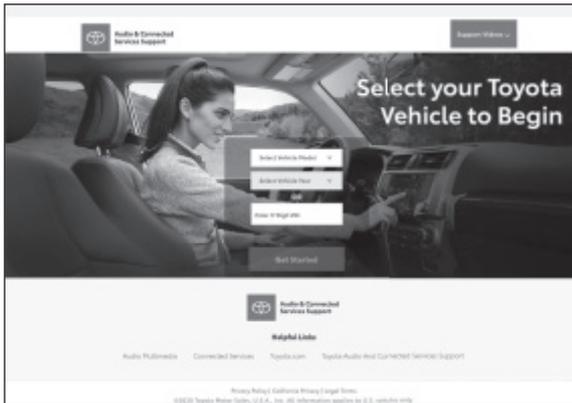

Toyota's online support tool provides intuitive "How-To" instruction and videos.

To begin, please visit: <https://toyotaaudioandconnectedservicesupport.com/>.

Or Scan the QR code below:



GETTING STARTED WITH

Apple CarPlay[®] (Compatible iPhone[®] required)


Setup of Apple CarPlay[®]



STEP 1 Ensure Siri[®] is enabled on your phone.




STEP 2 Plug a compatible iPhone[®] into the USB media port using an Apple[®] approved cable or have the smartphone and vehicle connected through Bluetooth[®].

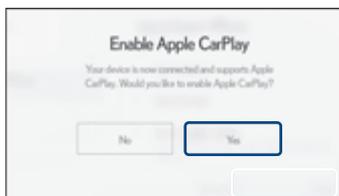

STEP 3 On the multimedia system, select “Yes” when asked if you would like to Enable Apple CarPlay[®].



STEP 4 Select Allow to use CarPlay[®] while the phone is locked.

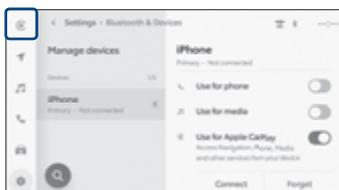

* Screen depiction accurate at time of posting.

STEP 5 To launch Apple CarPlay[®], select the Apple CarPlay[®] icon on the top of the side menu bar.



* Screen depiction accurate at time of posting.

STEP 6 Apple CarPlay[®] is now ready to operate. You can go back to the Toyota multimedia system by using the Toyota icon in the Apple CarPlay[®] screen.


Requirements:

Bluetooth[®] functions will be inoperable while CarPlay[®] is in use. Wireless CarPlay[®] is supported. Features may vary by vehicle model and phone.

To learn more about how your iPhone[®] works with CarPlay[®] visit: <https://support.apple.com/en-us/HT205634>

To view a full list of CarPlay[®] supported apps visit: <https://www.apple.com/ios/carplay/>

Siri® through CarPlay®

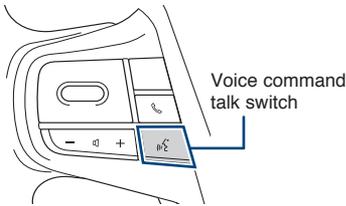

Press and hold the voice command talk switch for 2-3 seconds to activate.



* Screen depiction accurate at time of posting.

Once Siri® is activated you can ask to: make calls, send and receive text messages, listen to music and more.

Android Auto™ (Compatible Android™ device required)

Setup of Android Auto™



STEP 1 With Android 9 or below, the Android Auto™ app download is required. With Android 10, Android Auto™ is built in and the app is NOT required.



STEP 2 Open Android Auto™ app and tap get started.



STEP 3 Ensure Android Auto™ is enabled on the phone.




STEP 4 Plug a compatible Android™ smartphone into the USB media port using an Android approved cable or have the smartphone and vehicle connected through Bluetooth®.

GETTING STARTED WITH


Android Auto™ (Compatible Android™ device required) (continued)

Setup of Android Auto™ (continued)

STEP 5 On the multimedia system, select “Yes” when asked if you would like to Enable Android Auto™.

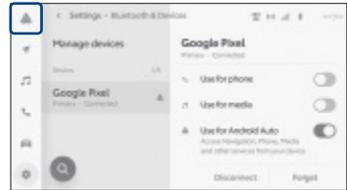

STEP 6 To launch Android Auto™, select the Android Auto™ icon on the top of the side menu bar.

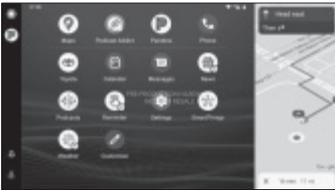

* Screen depiction accurate at time of posting.


STEP 7 Android Auto™ is now ready to operate. You can go back to the Toyota multimedia system by using the Toyota icon in the Android Auto™ screen.

Requirements:

Bluetooth® functions will be inoperable while Android Auto™ is in use. Wireless Android Auto™ is supported. Features may vary by vehicle model and phone.

To learn more about how to use Android Auto™ visit: <https://www.android.com/auto>

Google Assistant through Android Auto™

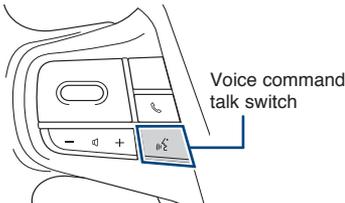

Press and hold the voice command talk switch for 2-3 seconds to activate.




* Screen depiction accurate at time of posting.

Once Google Assistant is activated, you can ask to: make calls, send and receive text messages, listen to music and more.

SiriusXM® 8 (If equipped)

SiriusXM® Audio

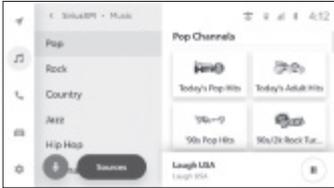

* Screen depiction accurate at time of posting.

Toyota vehicles equipped with SiriusXM® come with a 3-month Platinum Plan trial subscription. With the Platinum Plan, you get 425+ channels, including 165+ channels in your vehicle to enjoy ad-free music, plus sports, news, talk, comedy and more. Experience even more on the SXM App, featuring a collection of podcasts, Xtra channels of music, personalized Pandora® stations, SiriusXM video and more.



Updating System Software

The Toyota Audio Multimedia system is capable of over-the-air, over Wi-Fi®, and through USB flash drive updates. To use this function it is necessary to opt-in to the Connected Service Master Data Consent. When the Toyota Audio Multimedia system software is updated, the operating methods of functions may change. Each update will identify the proper updating method to one or all of the following methods:

- Update the software using the Data Communication Module (DCM)
- Update the software using Wi-Fi
- Update the software using a USB flash drive

See the Owner's Manual for complete details on the updating procedure.

After updating make sure to read the Digital Navigation Owner's Manual corresponding to the current software version available at <https://www.toyota.com/owners/resources/warranty-owners-manuals>.

GETTING STARTED WITH

Privacy & Protection

To learn about Toyota's Connected Services data collection, use, sharing and retention, visit: www.toyota.com/privacyvts.

- 1 The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage and carrier.
- 2 Visit Toyota.com/connected-services or see your local Toyota Dealer for additional details.
- 3 Safety Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, all of which can limit system functionality or availability, including access to response center and emergency support. Stolen vehicle police report required to use Stolen Vehicle Locator. Some features may require the Toyota app. Registration required. Subscription required after trial. Service subject to change at any time without notice. Terms of Use apply. Data charges may apply. Service may vary by vehicle and region. See usage precautions and service limitations in Owner's Manual and Toyota.com/connected-services/ for additional details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- 4 Toyota - Remote Connect
Use only if aware of circumstances surrounding vehicle and it is legal and safe to do so (e.g., do not remotely start engine if vehicle is in an enclosed space or vehicle is occupied by a child). Toyota Remote Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, which can limit system functionality and availability. Service may vary by vehicle and region. Registration and Toyota app download required. Subscription required after trial. Terms of Use apply. Data charges may apply. Remote start/stop not available on manual transmission-equipped vehicles. Services subject to change at any time without notice. See usage precautions and service limitations in Toyota Owner's Manual and <https://www.toyota.com/connected-services> for additional details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- 5 Service Connect information provided is based on the last time data was collected from the vehicle and is not real time data. Service Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, which can limit functionality or availability. Service may vary by vehicle and region. Registration required. Subscription required after trial. Service subject to change at any time without notice. Terms of Use apply. Data charges may apply. See usage precautions and service limitations in Owner's Manual and Toyota.com/connected-services for additional details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- 6 Destination Assist depends on an operative telematics device, a cellular connection, navigation map data and GPS signal strength and other factors outside of Toyota's control, which can limit system ability functionality or availability. Use common sense when relying on this information. Service may vary by vehicle and region. Registration required. Subscription required after trial. Services subject to change at any time without notice. Terms of Use apply. Data charges may apply. See Owner's Manual and Toyota.com/connected-services for additional limitations and details.
To learn about Toyota's data collection, use, sharing and retention practices, please visit <https://www.toyota.com/privacyvts/>.
- 7 Wi-Fi Connect is available on select 2018 and newer Toyota vehicles.
Visit Toyota.com/connectedservices for vehicle availability.
- 8 SiriusXM® audio services require a subscription sold separately by Sirius XM Radio Inc. To cancel, you must call SiriusXM at 1-866-635-2349. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.
All fees and programming subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM.
SiriusXM and all related marks and logos are trademarks of Sirius XM Radio Inc.

NOTES

NOTES



MIRAI

Quick Reference Guide 2024



00505QRG24MIR

toyota.com



Printed in U.S.A. 11/23
23-MKG-18262