

|   |                                    |                                                                                                         |  |
|---|------------------------------------|---------------------------------------------------------------------------------------------------------|--|
|   | <b>Pictorial index</b>             | Search by illustration                                                                                  |  |
| 1 | <b>For safety and security</b>     | Make sure to read through them                                                                          |  |
| 2 | <b>Instrument cluster</b>          | How to read the gauges and meters, the variety of warning lights and indicators, etc.                   |  |
| 3 | <b>Operation of each component</b> | Opening and closing the doors and windows, adjustment before driving, etc.                              |  |
| 4 | <b>Driving</b>                     | Operations and advice which are necessary for driving                                                   |  |
| 5 | <b>Interior features</b>           | Usage of the interior features, etc.                                                                    |  |
| 6 | <b>Maintenance and care</b>        | Caring for your vehicle and maintenance procedures                                                      |  |
| 7 | <b>When trouble arises</b>         | What to do in case of malfunction or emergency                                                          |  |
| 8 | <b>Vehicle specifications</b>      | Vehicle specifications, customizable features, etc.                                                     |  |
| 9 | <b>For owners</b>                  | Reporting safety defects for U.S. owners, and seat belt and SRS airbag instructions for Canadian owners |  |
|   | <b>Index</b>                       | Search by symptom                                                                                       |  |
|   |                                    | Search alphabetically                                                                                   |  |

## 2 TABLE OF CONTENTS

---

|                           |    |
|---------------------------|----|
| For your information..... | 8  |
| Reading this manual.....  | 12 |
| How to search.....        | 13 |
| Pictorial index.....      | 14 |

### 1 For safety and security

|                                                         |    |
|---------------------------------------------------------|----|
| <b>1-1. For safe use</b>                                |    |
| Before driving .....                                    | 26 |
| For safe driving .....                                  | 28 |
| Seat belts .....                                        | 30 |
| SRS airbags .....                                       | 38 |
| Front passenger occupant<br>classification system ..... | 49 |
| Safety information for<br>children .....                | 55 |
| Child restraint systems .....                           | 56 |
| Installing child restraints.....                        | 61 |
| Exhaust gas precautions.....                            | 73 |
| <b>1-2. Lexus Enform</b>                                |    |
| LEXUS Enform Safety<br>Connect.....                     | 74 |
| <b>1-3. Theft deterrent system</b>                      |    |
| Engine immobilizer system.....                          | 80 |
| Alarm .....                                             | 82 |

### 2 Instrument cluster

|                                       |     |
|---------------------------------------|-----|
| <b>2. Instrument cluster</b>          |     |
| Warning lights and<br>indicators..... | 86  |
| Gauges and meters.....                | 92  |
| Multi-information display .....       | 96  |
| Head-up display.....                  | 105 |
| Fuel consumption<br>information ..... | 110 |

### 3 Operation of each component

- 3-1. Key information
  - Keys ..... 116
- 3-2. Opening, closing and locking the doors
  - Side doors ..... 121
  - Back door ..... 128
  - Smart access system with push-button start ..... 138
- 3-3. Adjusting the seats
  - Front seats ..... 146
  - Rear seats ..... 148
  - Driving position memory ..... 157
  - Head restraints ..... 161
- 3-4. Adjusting the steering wheel and mirrors
  - Steering wheel ..... 164
  - Inside rear view mirror ..... 166
  - Outside rear view mirrors ..... 168
- 3-5. Opening, closing the windows and moon roof
  - Power windows ..... 171
  - Moon roof ..... 174

### 4 Driving

- 4-1. Before driving
  - Driving the vehicle ..... 180
  - Cargo and luggage ..... 188
  - Vehicle load limits ..... 192
  - Trailer towing ..... 193
  - Dinghy towing ..... 210
- 4-2. Driving procedures
  - Engine (ignition) switch ..... 211
  - Automatic transmission ..... 216
  - Turn signal lever ..... 223
  - Parking brake ..... 224
- 4-3. Operating the lights and wipers
  - Headlight switch ..... 227
  - Automatic High Beam ..... 230
  - Fog light switch ..... 235
  - Windshield wipers and washer ..... 237
  - Rear window wiper and washer ..... 241
  - Headlight cleaner switch ..... 244
- 4-4. Refueling
  - Opening the fuel tank cap ..... 245

**4-5. Using the driving support systems**

|                                                          |     |
|----------------------------------------------------------|-----|
| Lexus Safety System + .....                              | 248 |
| PCS (Pre-Collision System) .....                         | 255 |
| LDA (Lane Departure Alert) .....                         | 267 |
| Dynamic radar cruise control with full-speed range ..... | 275 |
| Cruise control .....                                     | 287 |
| Driving mode select switch .....                         | 290 |
| Intuitive parking assist .....                           | 293 |
| 4-Wheel AHC (Active Height Control Suspension) .....     | 301 |
| Four-wheel drive system .....                            | 309 |
| Crawl Control (with Turn Assist function) .....          | 313 |
| Multi-terrain Select .....                               | 318 |
| Multi-terrain Monitor .....                              | 322 |
| BSM (Blind Spot Monitor) .....                           | 369 |
| • BSM function .....                                     | 373 |
| • RCTA function .....                                    | 377 |
| Driving assist systems .....                             | 383 |

**4-6. Driving tips**

|                            |     |
|----------------------------|-----|
| Winter driving tips .....  | 388 |
| Off-road precautions ..... | 392 |

**5 Interior features**

**5-1. Remote Touch screen**

|                                      |     |
|--------------------------------------|-----|
| Remote Touch/12.3-inch display ..... | 398 |
|--------------------------------------|-----|

**5-2. Lexus Climate Concierge**

|                               |     |
|-------------------------------|-----|
| Lexus Climate Concierge ..... | 404 |
|-------------------------------|-----|

**5-3. Using the air conditioning system and defogger**

|                                                           |     |
|-----------------------------------------------------------|-----|
| Front automatic air conditioning system .....             | 405 |
| Rear air conditioning system .....                        | 416 |
| Heated steering wheel/seat heaters/seat ventilators ..... | 419 |

**5-4. Using the interior lights**

|                            |     |
|----------------------------|-----|
| Interior lights list ..... | 423 |
| • Interior lights .....    | 424 |
| • Personal lights .....    | 425 |

**5-5. Using the storage features**

|                                |     |
|--------------------------------|-----|
| List of storage features ..... | 426 |
| • Glove box .....              | 427 |
| • Console box .....            | 427 |
| • Overhead console .....       | 428 |
| • Cup holders .....            | 429 |
| • Bottle holders .....         | 430 |
| • Card holder .....            | 430 |
| • Auxiliary boxes .....        | 431 |

|                                    |     |
|------------------------------------|-----|
| Luggage compartment features ..... | 433 |
|------------------------------------|-----|

**5-6. Using the other interior features**

|                               |     |
|-------------------------------|-----|
| Other interior features ..... | 436 |
| • Cool box .....              | 436 |
| • Sun visors .....            | 437 |
| • Vanity mirrors .....        | 437 |
| • Clock .....                 | 438 |
| • Power outlets .....         | 438 |
| • Wireless charger .....      | 441 |
| • Armrest .....               | 449 |
| • Rear door sunshades .....   | 450 |
| • Coat hooks .....            | 450 |
| • Assist grips .....          | 451 |
| Garage door opener .....      | 452 |

**6 Maintenance and care****6-1. Maintenance and care**

|                                                    |     |
|----------------------------------------------------|-----|
| Cleaning and protecting the vehicle exterior ..... | 460 |
| Cleaning and protecting the vehicle interior ..... | 463 |

**6-2. Maintenance**

|                                                          |     |
|----------------------------------------------------------|-----|
| Maintenance requirements .....                           | 466 |
| General maintenance .....                                | 468 |
| Emission inspection and maintenance (I/M) programs ..... | 471 |

**6-3. Do-it-yourself maintenance**

|                                          |     |
|------------------------------------------|-----|
| Do-it-yourself service precautions ..... | 472 |
| Hood .....                               | 474 |
| Engine compartment .....                 | 475 |
| Tires .....                              | 488 |
| Tire inflation pressure .....            | 497 |
| Wheels .....                             | 501 |
| Air conditioning filter .....            | 503 |
| Electronic key battery .....             | 505 |
| Checking and replacing fuses .....       | 507 |
| Light bulbs .....                        | 510 |

**7 When trouble arises**

|                                                                    |     |
|--------------------------------------------------------------------|-----|
| <b>7-1. Essential information</b>                                  |     |
| Emergency flashers .....                                           | 512 |
| If your vehicle has to be<br>stopped in an emergency.....          | 513 |
| If the vehicle is trapped<br>in rising water .....                 | 514 |
| <b>7-2. Steps to take in an emergency</b>                          |     |
| If your vehicle needs<br>to be towed .....                         | 515 |
| If you think something is<br>wrong.....                            | 521 |
| Fuel pump shut off system.....                                     | 522 |
| If a warning light turns<br>on or a warning buzzer<br>sounds ..... | 523 |
| If a warning message is<br>displayed .....                         | 531 |
| If you have a flat tire .....                                      | 535 |
| If the engine will not start .....                                 | 547 |
| If the electronic key does<br>not operate properly .....           | 549 |
| If the vehicle battery is<br>discharged.....                       | 552 |
| If your vehicle overheats.....                                     | 555 |
| If the vehicle becomes<br>stuck .....                              | 558 |

**8 Vehicle specifications**

|                                                  |     |
|--------------------------------------------------|-----|
| <b>8-1. Specifications</b>                       |     |
| Maintenance data<br>(fuel, oil level, etc.)..... | 562 |
| Fuel information .....                           | 570 |
| Tire information .....                           | 573 |
| <b>8-2. Customization</b>                        |     |
| Customizable features.....                       | 584 |
| <b>8-3. Initialization</b>                       |     |
| Items to initialize.....                         | 598 |

**9 For owners**

|                                                                    |     |
|--------------------------------------------------------------------|-----|
| Reporting safety defects<br>for U.S. owners .....                  | 600 |
| Seat belt instructions<br>for Canadian owners<br>(in French).....  | 601 |
| SRS airbag instructions<br>for Canadian owners<br>(in French)..... | 603 |

## Index

|                          |     |
|--------------------------|-----|
| What to do if...         |     |
| (Troubleshooting).....   | 612 |
| Alphabetical index ..... | 616 |

1

2

3

4

5

6

7

8

9

For vehicles with a navigation system or a multimedia system, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL” for information regarding the equipment listed below.

- Navigation system
- Audio/video system
- Rear seat entertainment system
- Hands-free system (for cellular phone)

## For your information

### Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

### Noise from under vehicle after turning off the engine

Approximately five hours after the engine is turned off, you may hear sound coming from under the vehicle for several minutes. This is the sound of a fuel evaporation leakage check and, it does not indicate a malfunction.

### Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Lexus vehicle.

This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

### Installation of a mobile two-way radio system

The installation of a mobile two-way radio system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Lexus Safety System +
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation of a mobile two-way radio system.

## Vehicle data recording

The vehicle is equipped with sophisticated computers that will record certain data, such as:

The recorded data varies according to the vehicle grade level and options with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

- Engine speed/Electric motor speed (traction motor speed)
- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the driving assist systems, such as the ABS and pre-collision system
- Images from the front camera (available only when certain safety systems are activated, which varies depending on the vehicle specifications).

### ● Data Transmission

Your vehicle may transmit the data recorded in these computers to Lexus without notification to you.

### ● Data usage

Lexus may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

### ● Recorded image information can be erased by your Lexus dealer.

The image recording function can be disabled. However, if the function is disabled, data from when the pre-collision system operates will not be available.

### ● To learn more about the vehicle data collected, used and shared by Lexus, please visit [www.lexus.com/privacyvts/](http://www.lexus.com/privacyvts/).

## Usage of data collected through Lexus Enform (U.S.mainland only)

If your Lexus has Lexus Enform and if you have subscribed to those services, please refer to the Lexus Enform Telematics Subscription Service Agreement for information on data collected and its usage.

### ● To learn more about the vehicle data collected, used and shared by Lexus, please visit [www.lexus.com/privacyvts/](http://www.lexus.com/privacyvts/).

## Event data recorder

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

### ● Disclosure of the EDR data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit

However, if necessary, Lexus may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

## Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

## Perchlorate Material

Special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate). Your vehicle has components that may contain perchlorate. These components may include airbag, seat belt pretensioners, and wireless remote control batteries.

### WARNING

#### ■ General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

#### ■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

## Reading this manual



### WARNING:

Explains something that, if not obeyed, could cause death or serious injury to people.



### NOTICE:

Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.




... Indicates operating or working procedures. Follow the steps in numerical order.



Indicates the action (pushing, turning, etc.) used to operate switches and other devices.




Indicates the outcome of an operation (e.g. a lid opens).

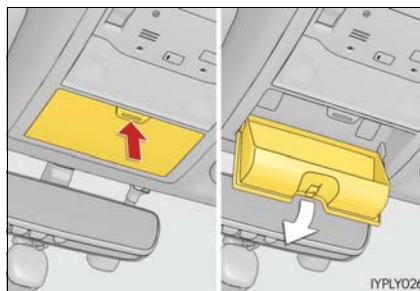

Indicates the component or position being explained.




Means "Do not", "Do not do this", or "Do not let this happen".

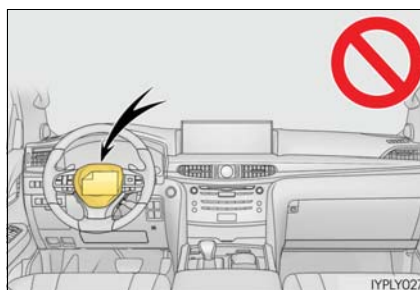

## How to search


### ■ Searching by name

- Alphabetical index..... P. 616

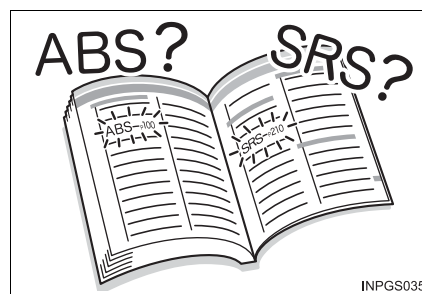

### ■ Searching by installation position

- Pictorial index..... P. 14

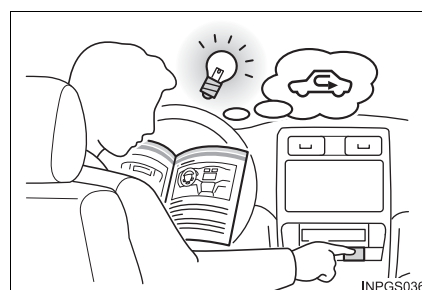


### ■ Searching by symptom or sound

- What to do if...  
(Troubleshooting)..... P. 612




### ■ Searching by title

- Table of contents..... P. 2

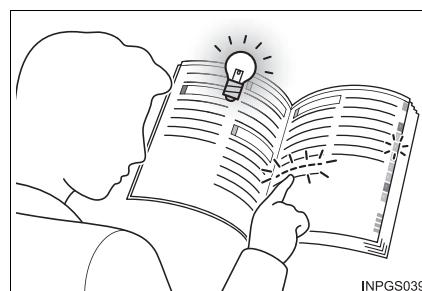

## Pictorial index

### ■ Exterior

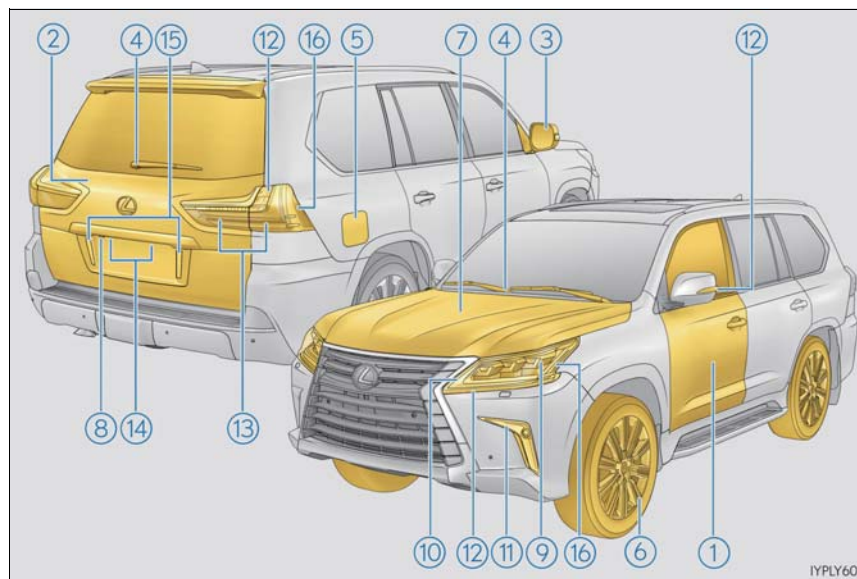

- ① **Side doors** ..... P. 121
  - Locking/unlocking ..... P. 121
  - Opening/closing the door glasses ..... P. 171
  - Locking/unlocking by using the mechanical key ..... P. 549
  - Warning lights/warning messages ..... P. 525, 531
- ② **Back door** ..... P. 128
  - Opening from outside ..... P. 129
  - Warning lights/warning messages ..... P. 525, 531
- ③ **Outside rear view mirrors** ..... P. 168
  - Adjusting the mirror angle ..... P. 168
  - Folding the mirrors ..... P. 168
  - Driving position memory ..... P. 157
  - Defogging the mirrors ..... P. 411


|   |                                                      |               |
|---|------------------------------------------------------|---------------|
| ④ | <b>Windshield wipers</b> .....                       | <b>P. 237</b> |
|   | Precautions against winter season .....              | P. 388        |
|   | To prevent freezing (windshield wiper de-icer) ..... | P. 411        |
|   | Precautions against car wash .....                   | P. 461        |
| ⑤ | <b>Fuel filler door</b> .....                        | <b>P. 245</b> |
|   | Refueling method .....                               | P. 245        |
|   | Fuel type/fuel tank capacity .....                   | P. 564        |
| ⑥ | <b>Tires</b> .....                                   | <b>P. 488</b> |
|   | Tire size/inflation pressure .....                   | P. 569        |
|   | Winter tires/tire chain .....                        | P. 388        |
|   | Checking/rotation/tire pressure warning system ..... | P. 488        |
|   | Coping with flat tires .....                         | P. 535        |
| ⑦ | <b>Hood</b> .....                                    | <b>P. 474</b> |
|   | Opening .....                                        | P. 474        |
|   | Engine oil .....                                     | P. 564        |
|   | Coping with overheat .....                           | P. 555        |
| ⑧ | <b>Camera</b> * .....                                | <b>P. 322</b> |

#### Light bulbs of the exterior lights for driving

|   |                                                    |               |
|---|----------------------------------------------------|---------------|
| ⑨ | <b>Headlights</b> .....                            | <b>P. 227</b> |
| ⑩ | <b>Parking lights/daytime running lights</b> ..... | <b>P. 227</b> |
| ⑪ | <b>Fog lights</b> .....                            | <b>P. 235</b> |
| ⑫ | <b>Turn signal lights</b> .....                    | <b>P. 223</b> |
| ⑬ | <b>Stop/tail lights</b> .....                      | <b>P. 227</b> |
|   | Hill-start assist control .....                    | P. 383        |
| ⑭ | <b>License plate lights</b> .....                  | <b>P. 227</b> |
| ⑮ | <b>Back-up lights</b>                              |               |
|   | Shifting the shift lever to R .....                | P. 216        |
| ⑯ | <b>Side marker lights</b> .....                    | <b>P. 227</b> |

\*: If equipped

■ Instrument panel

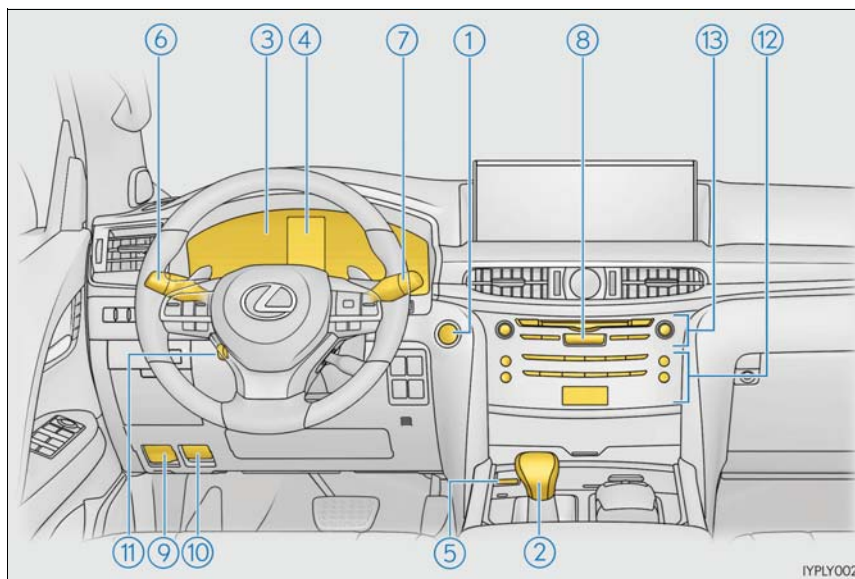


- ① **Engine switch** ..... P. 211
  - Starting the engine/changing the modes..... P. 211
  - Emergency stop of the engine ..... P. 513
  - When the engine will not start ..... P. 547
  - Warning messages ..... P. 531
- ② **Shift lever** ..... P. 216
  - Changing the shift position..... P. 216
  - Precautions against towing ..... P. 515
  - When the shift lever does not move..... P. 221
- ③ **Meters** ..... P. 92
  - Reading the meters/adjusting the instrument panel light ..... P. 92
  - Warning lights/indicators..... P. 86
  - When the warning lights come on ..... P. 523


|   |                                                                    |             |
|---|--------------------------------------------------------------------|-------------|
| ④ | <b>Multi-information display</b> .....                             | P. 96       |
|   | Display .....                                                      | P. 96       |
|   | When the warning messages are displayed .....                      | P. 531      |
| ⑤ | <b>Parking brake</b> .....                                         | P. 224      |
|   | Applying/releasing .....                                           | P. 224      |
|   | Precautions against winter season .....                            | P. 389      |
|   | Warning buzzer/message .....                                       | P. 226, 531 |
| ⑥ | <b>Turn signal lever</b> .....                                     | P. 223      |
|   | <b>Headlight switch</b> .....                                      | P. 227      |
|   | Headlights/parking lights/tail lights/daytime running lights ..... | P. 227      |
|   | Fog lights .....                                                   | P. 235      |
| ⑦ | <b>Windshield wiper and washer switch</b> .....                    | P. 237      |
|   | <b>Rear window wiper and washer switch</b> .....                   | P. 241      |
|   | Usage .....                                                        | P. 237, 241 |
|   | Adding washer fluid .....                                          | P. 487      |
|   | Warning messages .....                                             | P. 531      |
| ⑧ | <b>Emergency flasher switch</b> .....                              | P. 512      |
| ⑨ | <b>Fuel filler door opener</b> .....                               | P. 246      |
| ⑩ | <b>Hood lock release lever</b> .....                               | P. 474      |
| ⑪ | <b>Tilt and telescopic steering control switch</b> .....           | P. 164      |
|   | Adjustment .....                                                   | P. 164      |
|   | Driving position memory .....                                      | P. 157      |
| ⑫ | <b>Front air conditioning system</b> .....                         | P. 405      |
|   | Usage .....                                                        | P. 405      |
|   | Rear window defogger .....                                         | P. 411      |
| ⑬ | <b>Audio system*</b>                                               |             |
|   | Hands-free system*                                                 |             |

\*: Refer to "NAVIGATION SYSTEM OWNER'S MANUAL".

■ Switches

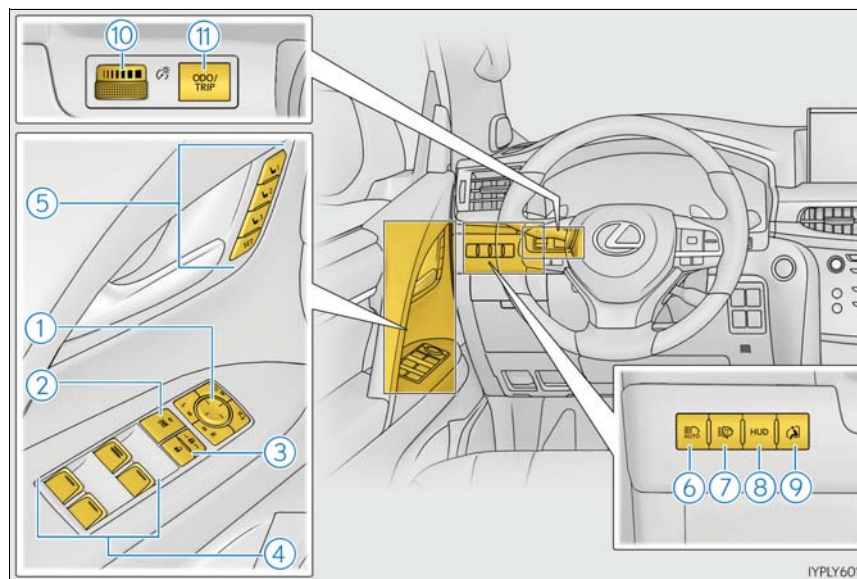


- ① Outside rear view mirror switches..... P. 168
- ② Window lock switch ..... P. 171
- ③ Door lock switches ..... P. 123
- ④ Power window switches ..... P. 171
- ⑤ Driving position memory buttons ..... P. 157
- ⑥ Automatic High Beam switch ..... P. 230
- ⑦ Headlight cleaner switch\* ..... P. 244
- ⑧ HUD (Head-up display) switches\* ..... P. 105
- ⑨ Easy access mode switch..... P. 303
- ⑩ Instrument panel light control dial ..... P. 94
- ⑪ Odometer/trip meter and trip meter reset button..... P. 93

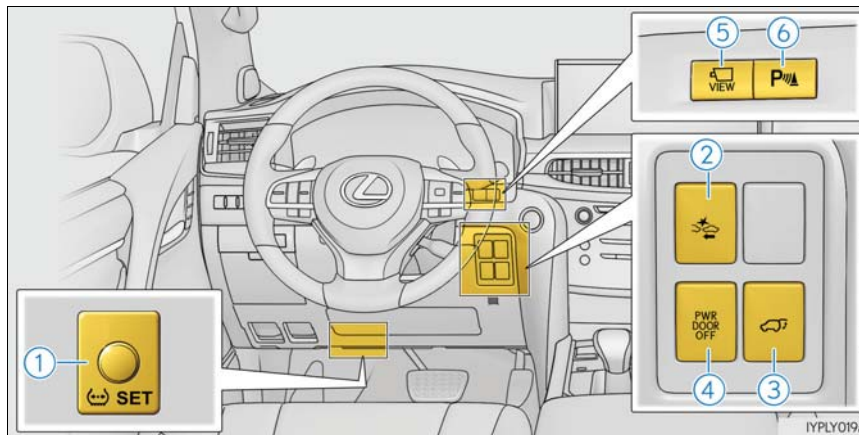


- ① Tire pressure warning reset switch ..... P. 489
- ② PCS (Pre-Collision System) switch\* ..... P. 259
- ③ Power back door switch ..... P. 128
- ④ Power back door main switch ..... P. 128
- ⑤ VIEW switch ..... P. 322
- ⑥ Intuitive parking assist switch ..... P. 293

\*: If equipped

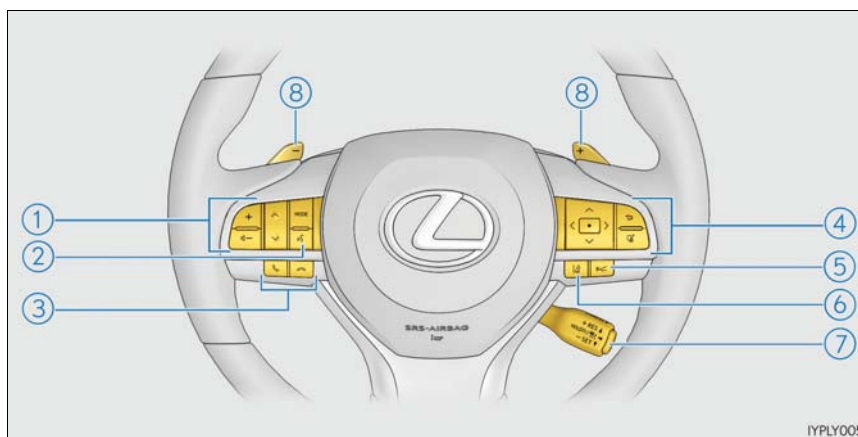

- ① Audio remote control switches<sup>\*1</sup>
- ② Talk switch<sup>\*1</sup>
- ③ Telephone switches<sup>\*1</sup>
- ④ Meter control switches..... P. 98
- ⑤ Vehicle-to-vehicle distance switch<sup>\*2</sup>..... P. 275
- ⑥ LDA (Lane Departure Alert) switch<sup>\*2</sup> ..... P. 267
- ⑦ Cruise control switch  
     Cruise control<sup>\*2</sup> ..... P. 287  
     Dynamic radar cruise control with full-speed range<sup>\*2</sup> ..... P. 275
- ⑧ Paddle shift switches<sup>\*2</sup>..... P. 218

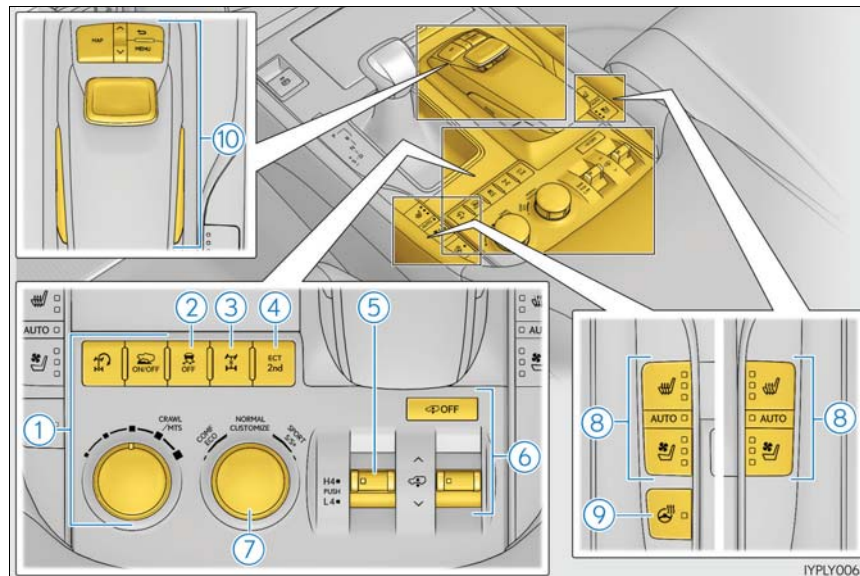


- ① Crawl Control switches/Multi-terrain Select mode selector switch.....P. 313, 318
- ② VSC OFF switch..... P. 384
- ③ Center differential lock/unlock switch ..... P. 310
- ④ Second start mode switch ..... P. 217
- ⑤ Four-wheel drive control switch ..... P. 309
- ⑥ Height select/height control OFF switches ..... P. 301
- ⑦ Driving mode select switch..... P. 290
- ⑧ Front seat heater/ventilator switches<sup>\*2</sup>..... P. 419
- ⑨ Heated steering wheel switch<sup>\*2</sup> ..... P. 420
- ⑩ Remote Touch<sup>\*1</sup> ..... P. 398


<sup>\*1</sup>: Refer to "NAVIGATION SYSTEM OWNER'S MANUAL".

<sup>\*2</sup>: If equipped

■ Interior

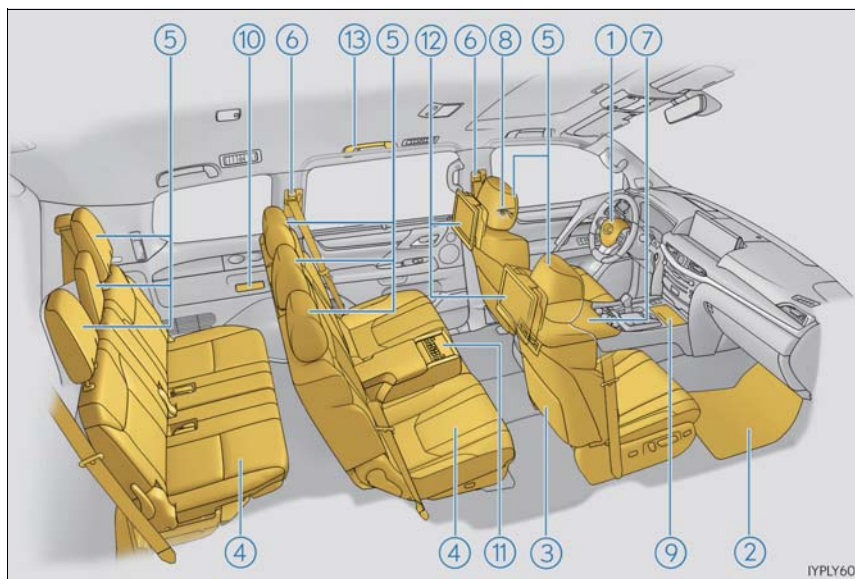

|                                           |        |
|-------------------------------------------|--------|
| ① SRS airbags.....                        | P. 38  |
| ② Floor mats.....                         | P. 26  |
| ③ Front seats.....                        | P. 146 |
| ④ Rear seats.....                         | P. 148 |
| ⑤ Head restraints.....                    | P. 161 |
| ⑥ Seat belts.....                         | P. 30  |
| ⑦ Console box*1.....                      | P. 426 |
| Cool box*1.....                           | P. 436 |
| ⑧ Inside lock buttons.....                | P. 123 |
| ⑨ Cup holders.....                        | P. 426 |
| ⑩ Auxiliary boxes.....                    | P. 426 |
| ⑪ Rear air conditioning system.....       | P. 416 |
| ⑫ Rear seat entertainment system*1,2..... |        |
| ⑬ Assist grips.....                       | P. 451 |

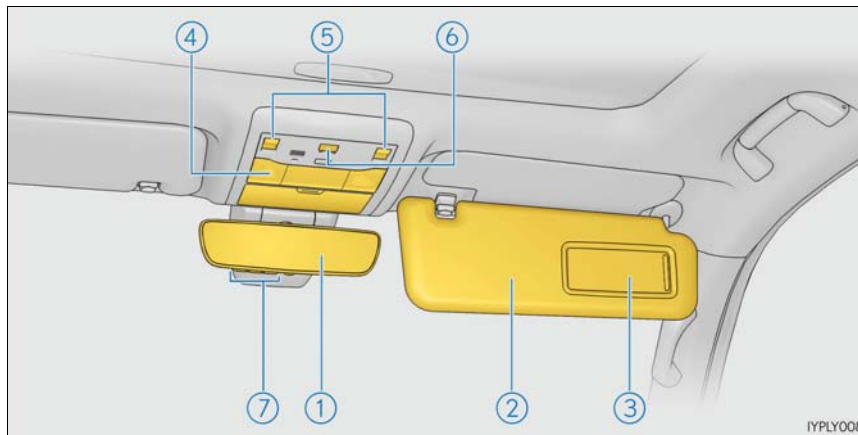

- ① Inside rear view mirror ..... P.166
- ② Sun visors ..... P.437
- ③ Vanity mirrors ..... P.437
- ④ Personal/interior lights<sup>\*3</sup> ..... P.423
- ⑤ Moon roof switches ..... P.174
- ⑥ "SOS" button<sup>\*1</sup> ..... P.74
- ⑦ Garage door opener buttons ..... P.452

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: Refer to "NAVIGATION SYSTEM OWNER'S MANUAL".

<sup>\*3</sup>: The illustration shows the front, but they are also equipped in the rear.



**For safety and security****1**


- 1-1. For safe use**
  - Before driving..... 26
  - For safe driving .....28
  - Seat belts .....30
  - SRS airbags .....38
  - Front passenger occupant  
classification system..... 49
  - Safety information for  
children .....55
  - Child restraint systems .....56
  - Installing child restraints.....61
  - Exhaust gas precautions..... 73
- 1-2. Lexus Enform**
  - LEXUS Enform Safety  
Connect..... 74
- 1-3. Theft deterrent system**
  - Engine immobilizer system.....80
  - Alarm .....82

## Before driving

### Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

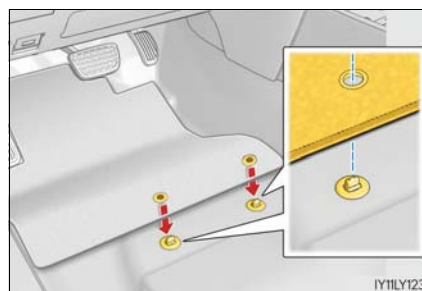

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

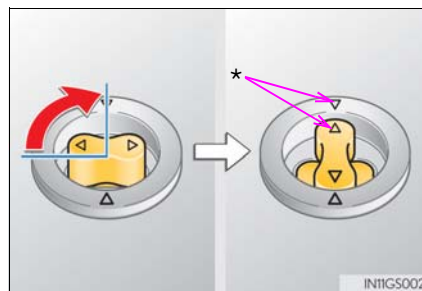

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

**⚠ WARNING**

Observe the following precautions.

Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

**■ When installing the driver's floor mat**

- Do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

**■ Before driving**

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.




## For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

### Correct driving posture

- ① Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 146)
- ② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 146)
- ③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 161)
- ④ Wear the seat belt correctly. (→P. 30)

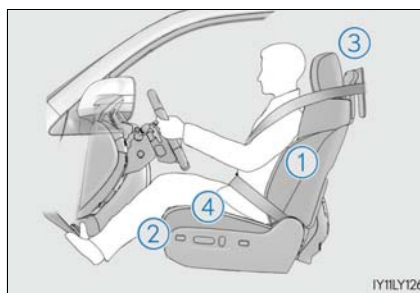

### Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 30)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 56)

### Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P. 166, 168)



#### WARNING

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not adjust the position of the driver's seat while driving.  
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.  
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.  
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.  
Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

## Seat belts

**Make sure that all occupants are wearing their seat belts before driving the vehicle.**


### Correct use of the seat belts

- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.




### Fastening and releasing the seat belt (except for the third center seat)

- ① To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- ② To release the seat belt, press the release button.

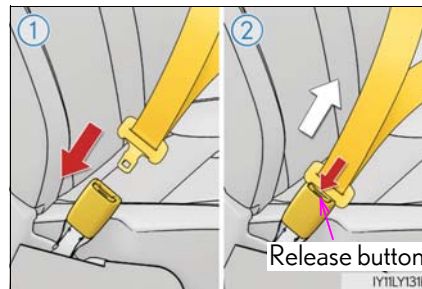


**Fastening and releasing the third center seat belt (if equipped)**


- 1** Pull out the tab.

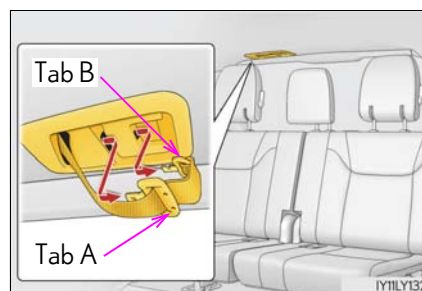

- 2** Push tab B into buckle B until a clicking sound is heard.

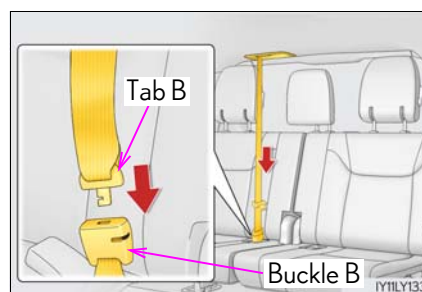


- 3** Push tab A into buckle A until a clicking sound is heard.  
To release, push the release button on buckle A.

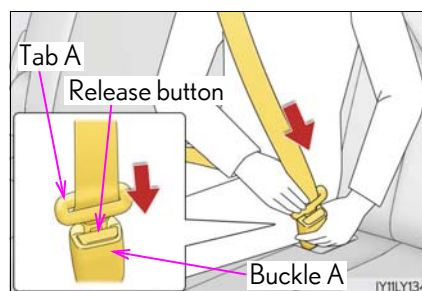


**Releasing and stowing the third center seat belt (if equipped)**

- 1** Push the release button on buckle A.

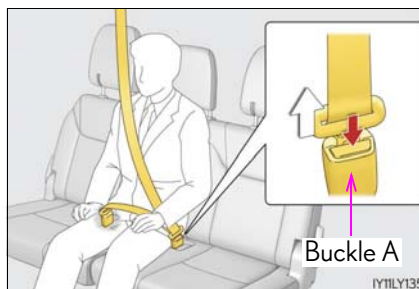


- 2** Push either the mechanical key or tab A into buckle B.

When releasing and storing the seat belt, hold the belt while winding it back gently.

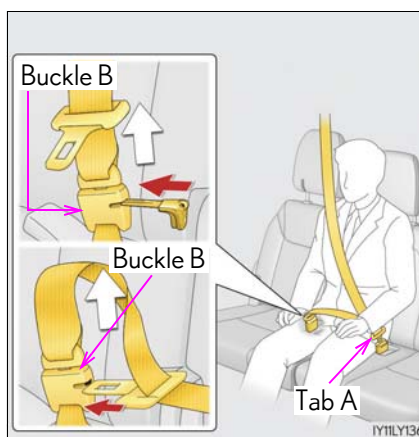


- 3** Put tabs A and B together and stow them in the holder.

To reattach the seat belt, reverse the above procedure, pulling out the tabs and inserting tab B into buckle B.

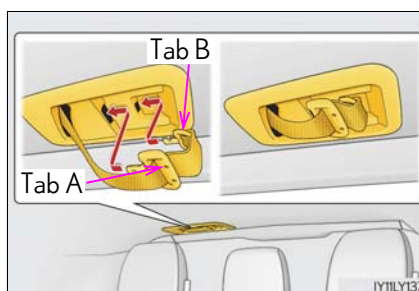

### Adjusting the seat belt shoulder anchor height (front and second outboard seats)


- ① Push the seat belt shoulder anchor down while pressing the release button.
  - ② Push the seat belt shoulder anchor up.
- Move the height adjuster up and down as needed until you hear a click.

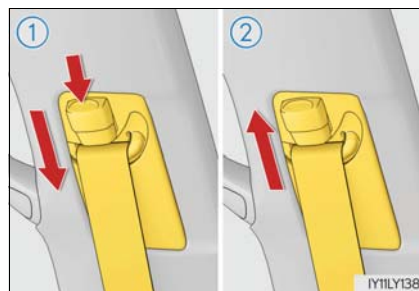

### Seat belt pretensioners (front and second outboard seats)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal collision or a vehicle roll-over.

The pretensioners do not activate in the event of a minor frontal impact, a side impact or a rear impact.

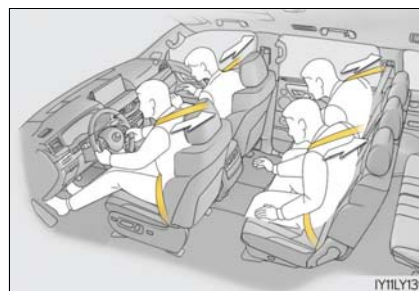

**■ Emergency locking retractor (ELR)**

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

**■ Automatic locking retractor (ALR)**

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. (→P. 61)

**■ When the third center seat belt cannot be extended (if equipped)**

Put your fingers between the seat belt and the holder.

Pull the seat belt forcefully in the direction of the arrow and then release it to unlock.

**■ Child seat belt usage**

The seat belts of your vehicle were principally designed for persons of adult size.


- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 56)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 30 regarding seat belt usage.

**■ Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

**■ Seat belt extender**

If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

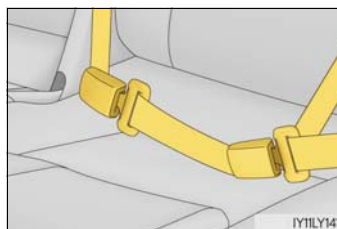

# WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident. Failure to do so may cause death or serious injury.

## ■ Wearing a seat belt


- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

## ■ Pregnant women

Obtain medical advice and wear the seat belt in the proper way. (→P. 30)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking, sudden swerving or a collision.

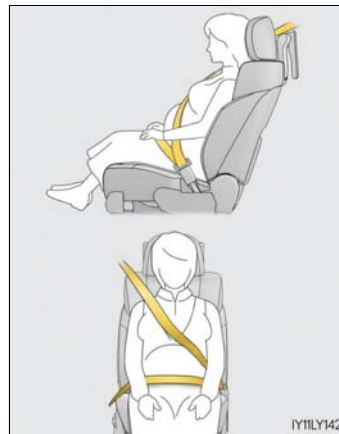

## ■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way. (→P. 30)

### WARNING

#### ■ When the children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

#### ■ Seat belt pretensioners

- Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the front passenger's seat may not activate in the event of a collision.
- If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Lexus dealer.

#### ■ Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 33)

#### ■ When using the third center seat belt (if equipped)

Do not use the third center seat belt with either buckle released. Fastening only one of the buckles may result in death or serious injury in case of sudden braking, sudden swerving or an accident.



#### ■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belt cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted.  
If the seat belt does not function correctly, immediately contact your Lexus dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling may lead to incorrect operation.

 **WARNING** **Using a seat belt extender**


- Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.

 **NOTICE** **Using a seat belt extender**

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.  
This helps prevent damage to the vehicle interior and the extender itself.

## SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

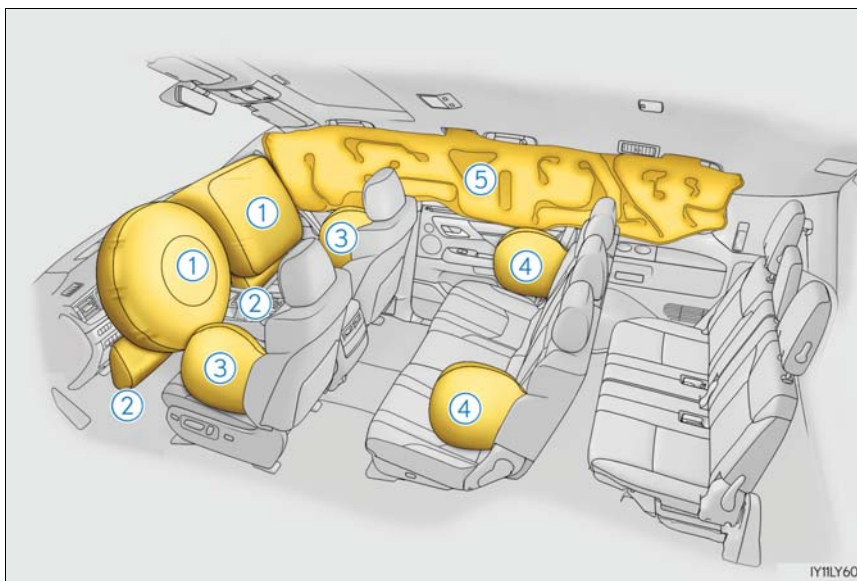

### ◆ SRS front airbags

- ① SRS driver airbag/front passenger airbag  
Can help protect the head and chest of the driver and front passenger from impact with interior components
- ② SRS knee airbags  
Can help provide driver and front passenger protection

---

◆ SRS side and curtain shield airbags


---

- ③ SRS front side airbags  
Can help protect the torso of the front seat occupants
- ④ SRS rear side airbags  
Can help protect the torso of occupants in the second outboard seats
- ⑤ SRS curtain shield airbags
  - Can help protect primarily the head of occupants in the outboard seats
  - Can help prevent the occupants from being thrown from the vehicle in the event of vehicle rollover

1

For safety and security

### SRS airbag system components

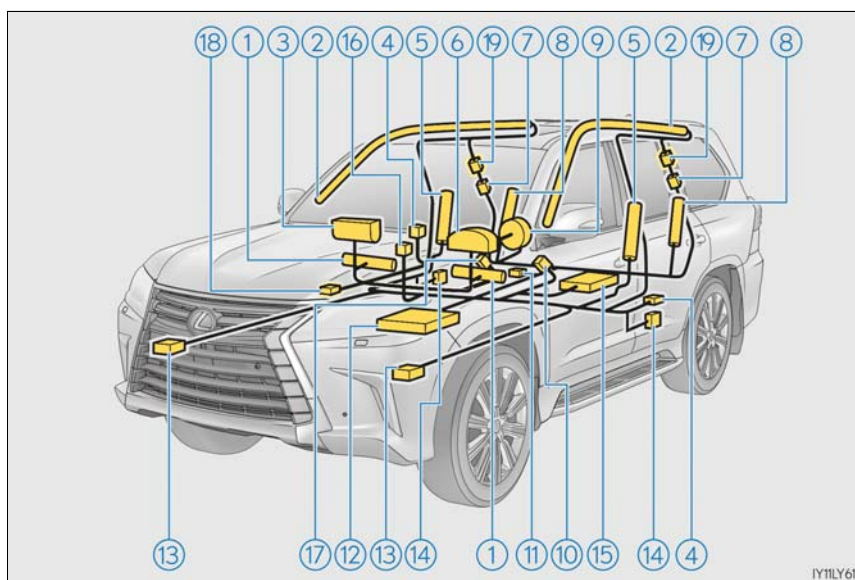

- |                                            |                                                                    |
|--------------------------------------------|--------------------------------------------------------------------|
| ① Knee airbags                             | ⑫ Airbag sensor assembly                                           |
| ② Curtain shield airbags                   | ⑬ Front impact sensors                                             |
| ③ Front passenger airbag                   | ⑭ Seat belt pretensioners and force limiters (front seats)         |
| ④ Side impact sensors (front door)         | ⑮ Driver's seat position sensor                                    |
| ⑤ Front side airbags                       | ⑯ "AIR BAG ON" and "AIR BAG OFF" indicator lights                  |
| ⑥ SRS warning light                        | ⑰ Front passenger's seat belt buckle switch                        |
| ⑦ Side impact sensors (rear)               | ⑱ Front passenger occupant classification system (ECU and sensors) |
| ⑧ Rear side airbags (second outboard seat) | ⑲ Seat belt pretensioners (second outboard seats)                  |
| ⑨ Driver airbag                            |                                                                    |
| ⑩ Driver's seat belt buckle switch         |                                                                    |
| ⑪ Safing sensor (rear)                     |                                                                    |

Your vehicle is equipped with ADVANCED AIRBAGS designed based on the US motor vehicle safety standards (FMVSS208). The airbag sensor assembly (ECU) controls airbag deployment based on information obtained from the sensors etc. shown in the system components diagram above. This information includes crash severity and occupant information. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

**WARNING****■ SRS airbag precautions**

Observe the following precautions regarding the SRS airbags.  
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.  
The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag. The National Highway Traffic Safety Administration (NHTSA) advises:

Since the risk zone for the driver's airbag is the first 2 - 3 in. (50 - 75 mm) of inflation, placing yourself 10 in. (250 mm) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 10 in. (250 mm) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat.  
Although vehicle designs vary, many drivers can achieve the 10 in. (250 mm) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended by NHTSA above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

# WARNING

## ■ SRS airbag precautions

- If the seat belt extender has been connected to the front seat belt buckles but the seat belt extender has not also been fastened to the latch plate of the seat belt, the SRS front airbags will judge that the driver and front passenger are wearing the seat belt even though the seat belt has not been connected. In this case, the SRS front airbags may not activate correctly in a collision, resulting in death or serious injury in the event of collision. Be sure to wear the seat belt with the seat belt extender.
- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 56)
- Do not sit on the edge of the seat or lean against the dashboard.
- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.



**⚠ WARNING****■ SRS airbag precautions**


- Do not lean against the door, the roof side rail or the front, side and rear pillars.



- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.



- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel. These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

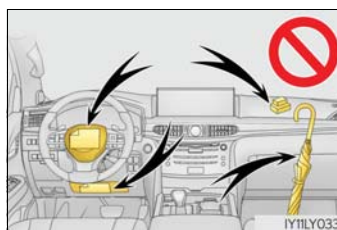

# WARNING

## ■ SRS airbag precautions

- Do not attach anything to areas such as a door, windshield glass, side door glass, front or rear pillars, roof side rail and assist grip.



- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If the vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components.  
Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by your Lexus dealer.
- Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the SRS front airbags for the front passenger may not deploy in the event of a collision.

**WARNING**

■ **Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting your Lexus dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats, seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows, winches or roof luggage carrier
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios and CD players
- Modifications to your vehicle for a person with a physical disability

■ **If the SRS airbags deploy (inflate)**

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front, side and rear pillars and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- For Lexus Enform Safety Connect subscribers, if the SRS airbags deploy or in the event of a severe rear-end collision, the system is designed to send an emergency call to the response center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P. 74)

### ■ SRS airbag deployment conditions (SRS front airbags)

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 12 - 18 mph [20 - 30 km/h] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:

- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.
- The SRS front airbags for the front passenger will not activate if there is no passenger sitting in the front passenger seat. However, the SRS front airbags for the front passenger may deploy if luggage is put in the seat, even if the seat is unoccupied.


### ■ SRS airbag deployment conditions (SRS side and curtain shield airbags)

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 3300 lb. [1500 kg] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 12 - 18 mph [20 - 30 km/h]).
- The SRS curtain shield airbags will deploy in the event of vehicle rollover.
- The SRS side and curtain shield airbags will deploy in the event of a severe frontal collision.

### ■ Conditions under which the SRS airbags may deploy (inflate), other than a collision


The SRS front airbags and SRS side and curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

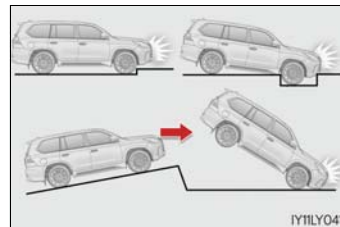

The SRS curtain shield airbags may also deploy under the situations shown in the illustration.


- The angle of vehicle tip-up is marginal
- The vehicle skids and hits a curb stone

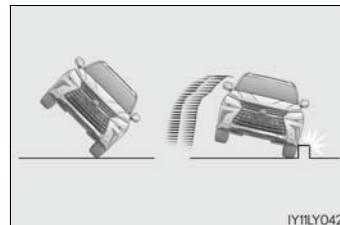

### ■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

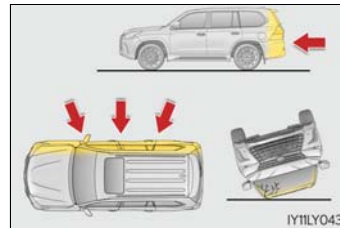

### ■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)

The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

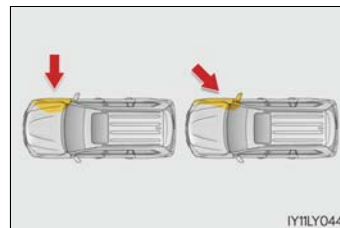


The SRS side airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.

- Collision from the rear
- Vehicle rollover



The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it pitches end over end, or if it is involved in a low-speed side or low-speed frontal collision.





- Collision from the rear
- Pitching end over end

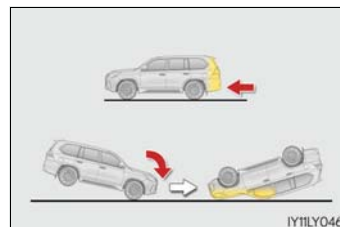

### ■ When to contact your Lexus dealer


In the following cases, the vehicle will require inspection and/or repair. Contact your Lexus dealer as soon as possible.

- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.
- A portion of a door or its surrounding area is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.
- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.
- The surface of the seats with the side airbag is scratched, cracked or otherwise damaged.
- The portion of the front, side and rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked or otherwise damaged.

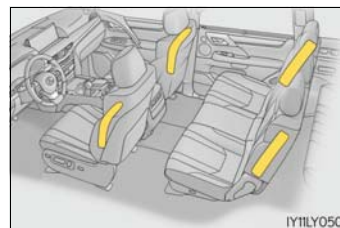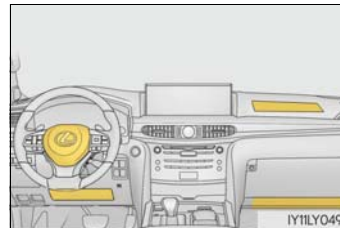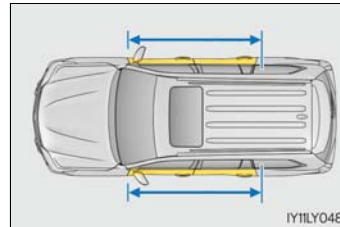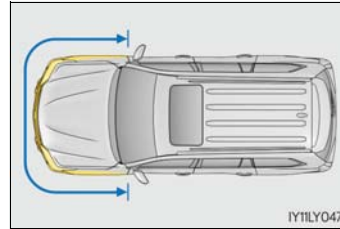

## Front passenger occupant classification system

Your vehicle is equipped with a front passenger occupant classification system. This system detects the conditions of the front passenger seat and activates or deactivates the devices for the front passenger.

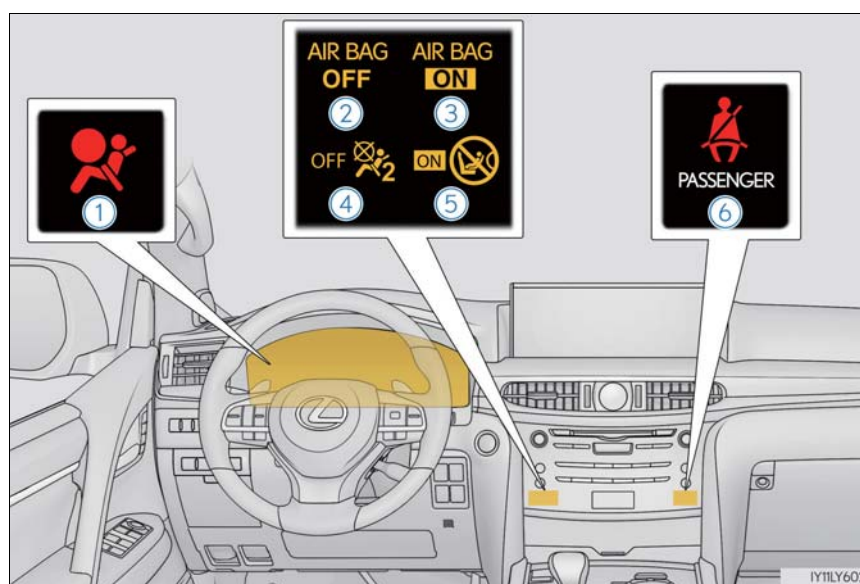

- ① SRS warning light
  - For the U.S.A.
- ② “AIR BAG OFF” indicator light
- ③ “AIR BAG ON” indicator light
  - For Canada
- ④ “AIR BAG OFF” indicator light
- ⑤ “AIR BAG ON” indicator light
- ⑥ Front passenger’s seat belt reminder light

### Condition and operation in the front passenger occupant classification system

#### ■ Adult\*<sup>1</sup>

|                             |                                                      |                                             |
|-----------------------------|------------------------------------------------------|---------------------------------------------|
| Indicator/<br>warning light | "AIR BAG ON" and "AIR BAG OFF"<br>indicator lights   | "AIR BAG ON"                                |
|                             | SRS warning light                                    | Off                                         |
|                             | Front passenger's seat belt reminder light           | Off* <sup>2</sup> or flashing* <sup>3</sup> |
| Devices                     | Front passenger airbag                               | Activated                                   |
|                             | Side airbag<br>on the front passenger seat           |                                             |
|                             | Curtain shield airbag<br>in the front passenger side |                                             |
|                             | Front passenger knee airbag                          |                                             |
|                             | Front passenger's seat belt pretensioner             |                                             |

#### ■ Child\*<sup>4</sup> or child restraint system with infant\*<sup>5</sup>

|                             |                                                      |                                                |
|-----------------------------|------------------------------------------------------|------------------------------------------------|
| Indicator/<br>warning light | "AIR BAG ON" and "AIR BAG OFF"<br>indicator lights   | "AIR BAG OFF"* <sup>6</sup>                    |
|                             | SRS warning light                                    | Off                                            |
|                             | Front passenger's seat belt reminder light           | Off* <sup>2</sup> or<br>flashing* <sup>3</sup> |
| Devices                     | Front passenger airbag                               | Deactivated                                    |
|                             | Side airbag<br>on the front passenger seat           | Activated                                      |
|                             | Curtain shield airbag<br>in the front passenger side |                                                |
|                             | Front passenger knee airbag                          | Deactivated                                    |
|                             | Front passenger's seat belt pretensioner             | Activated                                      |

## ■ Unoccupied

|                             |                                                      |                 |
|-----------------------------|------------------------------------------------------|-----------------|
| Indicator/<br>warning light | "AIR BAG ON" and "AIR BAG OFF"<br>indicator lights   | Not illuminated |
|                             | SRS warning light                                    | Off             |
|                             | Front passenger's seat belt reminder light           |                 |
| Devices                     | Front passenger airbag                               | Deactivated     |
|                             | Side airbag<br>on the front passenger seat           | Activated       |
|                             | Curtain shield airbag<br>in the front passenger side |                 |
|                             | Front passenger knee airbag                          | Deactivated     |
|                             | Front passenger's seat belt pretensioner             |                 |

## ■ There is a malfunction in the system

|                             |                                                      |               |
|-----------------------------|------------------------------------------------------|---------------|
| Indicator/<br>warning light | "AIR BAG ON" and "AIR BAG OFF"<br>indicator lights   | "AIR BAG OFF" |
|                             | SRS warning light                                    | On            |
|                             | Front passenger's seat belt reminder light           |               |
| Devices                     | Front passenger airbag                               | Deactivated   |
|                             | Side airbag<br>on the front passenger seat           | Activated     |
|                             | Curtain shield airbag<br>in the front passenger side |               |
|                             | Front passenger knee airbag                          | Deactivated   |
|                             | Front passenger's seat belt pretensioner             | Activated     |

- \*1: The system judges a person of adult size as an adult. When a smaller adult sits in the front passenger seat, the system may recognize him/her as a child depending on his/her physique and posture.
- \*2: In the event the front passenger is wearing a seat belt.
- \*3: In the event the front passenger does not wear a seat belt
- \*4: When a larger child who has outgrown a child restraint system sits in the front passenger seat, the system may recognize him/her as an adult depending on his/her physique or posture.
- \*5: Never install a rear-facing child restraint system on the front passenger seat. A forward-facing child restraint system should only be installed on the front passenger seat when it is unavoidable. (→P. 56)
- \*6: In case the indicator light is not illuminated, consult this manual on how to install the child restraint system properly. (→P. 61)

**WARNING****■ Front passenger occupant classification system precautions**

Observe the following precautions regarding the front passenger occupant classification system.

Failure to do so may cause death or serious injury.

- Wear the seat belt properly.
- Make sure the front passenger's seat belt plate has not been left inserted into the buckle before someone sits in the front passenger seat.
- Make sure the "AIR BAG OFF" indicator light is not illuminated when using the seat belt extender for the front passenger seat. If the "AIR BAG OFF" indicator light is illuminated, disconnect the extender tongue from the seat belt buckle, and reconnect the seat belt. Reconnect the seat belt extender after making sure the "AIR BAG ON" indicator light is illuminated. If you use the seat belt extender while the "AIR BAG OFF" indicator light is illuminated, the SRS airbags for the front passenger will not activate, which could cause death or serious injury in the event of a collision.
- Do not apply a heavy load to the front passenger seat or equipment (e.g. seatback pocket).
- Do not put weight on the front passenger seat by putting your hands or feet on the front passenger seat seatback from the rear passenger seat.
- Do not let a rear passenger lift the front passenger seat with their feet or press on the seatback with their legs.
- Do not put objects under the front passenger seat.

**WARNING****■ Front passenger occupant classification system precautions**

- Do not recline the front passenger seatback so far that it touches the rear seat. This may cause the "AIR BAG OFF" indicator light to be illuminated, which indicates that the SRS airbags for the front passenger will not activate in the event of a severe accident. If the seatback touches the rear seat, return the seatback to a position where it does not touch the rear seat. Keep the front passenger seatback as upright as possible when the vehicle is moving. Reclining the seatback excessively may lessen the effectiveness of the seat belt system.
- If an adult sits in the front passenger seat, the "AIR BAG ON" indicator light is illuminated. If the "AIR BAG OFF" indicator is illuminated, ask the passenger to sit up straight, well back in the seat, feet on the floor, and with the seat belt worn correctly. If the "AIR BAG OFF" indicator still remains illuminated, either ask the passenger to move to the rear seat, or if that is not possible, move the front passenger seat fully rearward.
- When it is unavoidable to install a forward-facing child restraint system on the front passenger seat, install the child restraint system on the front passenger seat in the proper order. (→P. 61)
- Do not modify or remove the front seats.
- Do not kick the front passenger seat or subject it to severe impact. Otherwise, the SRS warning light may come on to indicate a malfunction of the front passenger occupant classification system. In this case, contact your Lexus dealer immediately.
- Child restraint systems installed on the second seat should not contact the front seatbacks.
- Do not use a seat accessory, such as a cushion and seat cover, that covers the seat cushion surface.
- Do not modify or replace the upholstery of the front seat.

## Safety information for children

Observe the following precautions when children are in the vehicle.  
Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P. 124, 171)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats etc.



### WARNING

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

## Child restraint systems

A child restraint system for a small child or baby must itself be properly restrained on the seat with the LATCH anchors or the lap portion of the lap/shoulder belt.

The laws of all 50 states of the U.S.A. and Canada now require the use of child restraint systems.

### Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one on the front passenger seat.


- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.

General installation instructions are provided in this manual. (→P. 61)

### Types of child restraints

Child restraint systems are classified into the following 3 types according to the age and size of the child:

- ▶ Rear facing — Infant seat/convertible seat
- ▶ Forward facing — Convertible seat

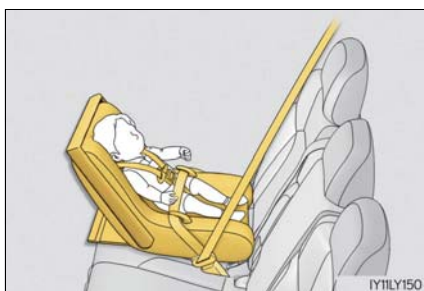

- ▶ Booster seat



**■ When installing a child restraint system on the front passenger seat**

When you have to use a child restraint system on the front passenger seat, adjust the following:

- The seatback to the most upright position
- The seat cushion to the fully rearward and highest position
- The seat belt height to the lowest position

**■ Selecting an appropriate child restraint system**

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 30)

**WARNING****■ Child restraint precautions**

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Lexus strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restraint system on the front passenger seat even if the "AIR BAG OFF" indicator light is illuminated.  
In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.
- A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat. Adjust the seatback as upright as possible and always move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not use the seat belt extender when installing a child restraint system on the front or rear passenger seat. If installing a child restraint system with the seat belt extender connected to the seat belt, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.
- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front, side and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or accident.

**WARNING****■ When children are in the vehicle**

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

**■ When the child restraint system is not in use**

- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment. This will prevent it from injuring passengers in the event of a sudden stop, sudden swerve or accident.


## Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure the child restraints to the outboard second seats using the LATCH anchors or a seat belt. Attach the top tether strap when installing a child restraint.

The lap/shoulder belt can be used if your child restraint system is not compatible with the LATCH (Lower Anchors and Tethers for Children) system.

### Child restraint LATCH anchors

LATCH anchors are provided for the second outboard seats. (Buttons displaying the location of the anchors are attached to the seats.)

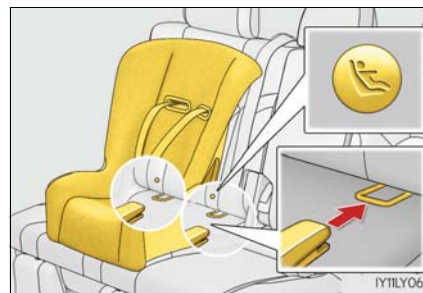

Seat belts equipped with a child restraint locking mechanism (ALR/ELR belts except driver's seat belt)



### Anchor bracket (for top tether strap)

Anchor brackets are provided for all second seats.




**Installation with LATCH system**

- 1 Fold the seatback forward and then adjust it as upright as possible.



- 2 Take off the covers between the seat cushion and seatback, then confirm the position of the LATCH anchors below the symbol in the seatback.

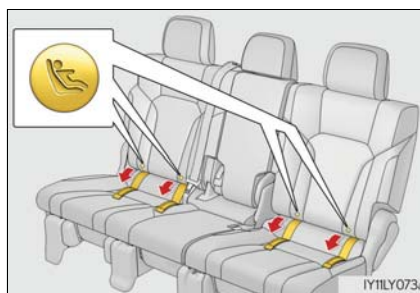


## ► Type A

- 3 Latch the hooks of the lower straps onto the LATCH anchors.
- 4 If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:

The symbol on a child restraint system indicates the presence of a lower connector system.

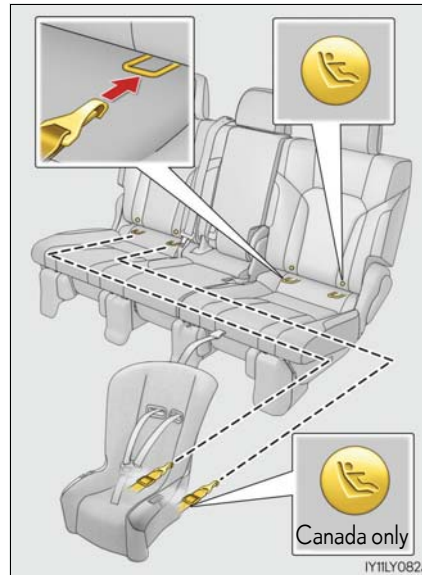


## ► Type B

- 3 Latch the buckles onto the LATCH anchors.
- 4 If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:




The symbol on a child restraint system indicates the presence of a lower connector system.

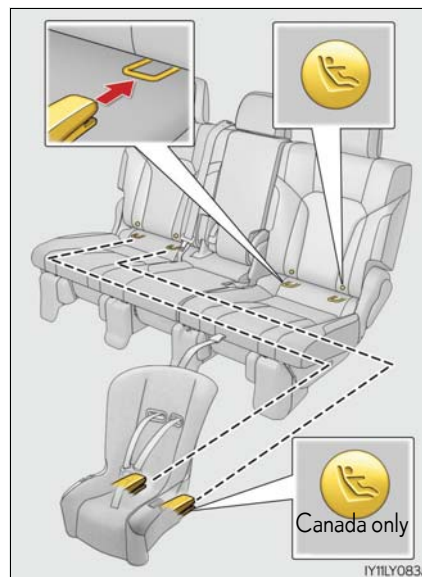

### Installing child restraints using a seat belt (child restraint lock function belt)


#### ■ Rear-facing — Infant seat/Convertible seat

- 1** Fold the seatback while pulling the seatback angle lever. Return the seatback and secure it at the first lock position. (→P. 148)
- 2** Place the child restraint system on the second seat or the third outboard seat (if equipped) facing the rear of the vehicle.
- 3** Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

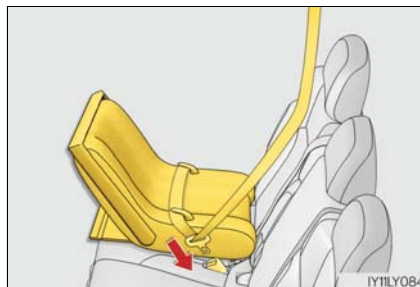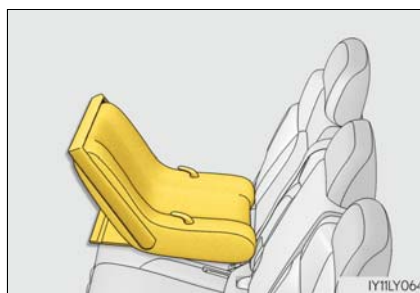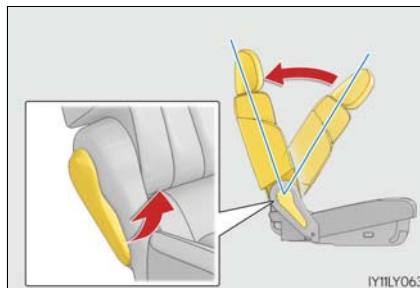


- 4** Fully extend the shoulder belt and then allow it to retract slightly in order to activate the ALR lock mode.

Lock mode allows the seat belt to retract only.

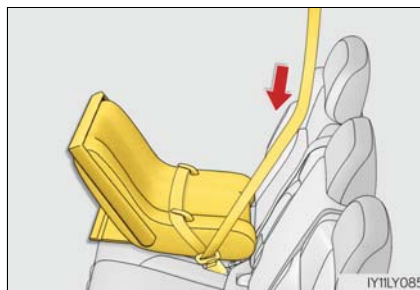



- 5** While pushing the child restraint system down into the second seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

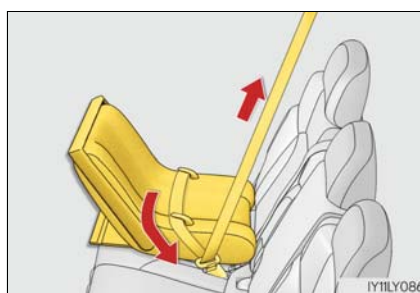

**■ Forward-facing— Convertible seat**

- 1** Fold the seatback while pulling the seatback angle lever. Return the seatback and secure it at the first lock position. (→P. 148)
- 2** Place the child restraint system on the seat facing the front of the vehicle.
- 3** Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

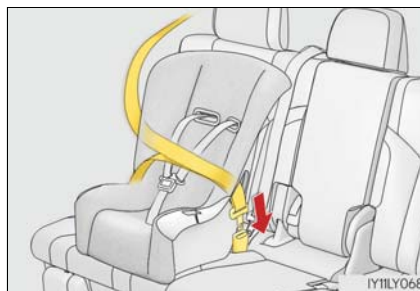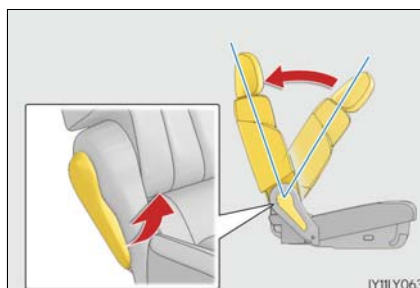

- 4** Fully extend the shoulder strap and then allow it to retract slightly into the ALR lock mode.

Lock mode allows the seat belt to retract only.



- 5** While pushing the child restraint system into the second seat, allow the shoulder belt to retract until the child restraint system is securely in place.


After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.



- 6** If the child restraint system has a top tether strap, the top tether strap should be latched onto the top tether strap anchor. (→P. 69)

**■ Booster seat**

- 1** Fold the seatback while pulling the seatback angle lever. Return the seatback and secure it at the first lock position. (→P. 148)

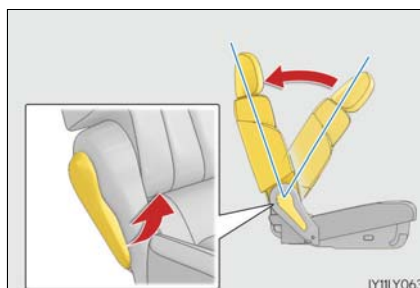

- 2** Place the child restraint system on the seat facing the front of the vehicle.




- 3** Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

Check that the shoulder belt is correctly positioned over the child's shoulder, and that the lap belt is as low as possible. (→P. 30)



### Removing a child restraint system installed with a seat belt


Push the buckle release button and fully retract the seat belt.

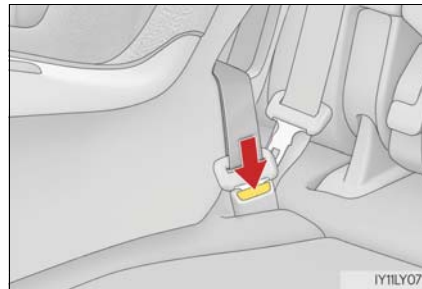

### Child restraint systems with a top tether strap

► Second outboard seats

- 1 Secure the child restraint system using a seat belt or LATCH anchors, and move the head restraint in place at the upmost position.

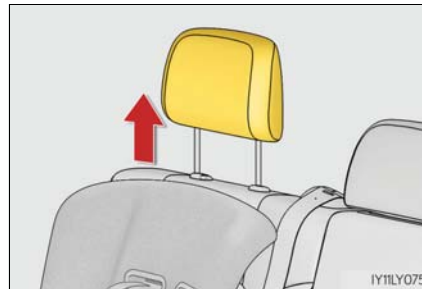


- 2 Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top tether strap.

Make sure the top tether strap is securely latched.



- 3 Adjust the head restraint to the downmost position.

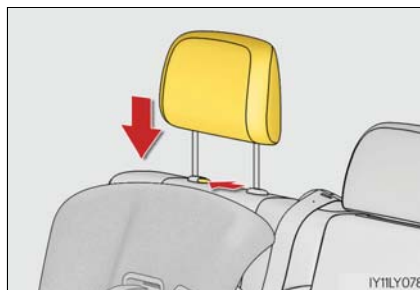

► Second center seat

- 1 Secure the child restraint system using a seat belt and remove the head restraint.




- 2 Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top tether strap.

Make sure the top tether strap is securely latched.



- 3 Install the head restraint.

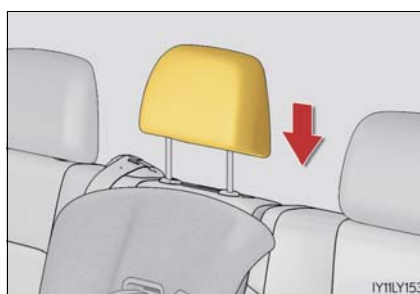

■ Laws and regulations pertaining to Anchors

The LATCH system conforms to FMVSS225 or CMVSS210.2.

Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used.

This vehicle is designed to conform to the SAE J1819.

# WARNING

## ■ When installing a booster seat

To prevent the belt from going into ALR lock mode, do not fully extend the shoulder belt. ALR mode causes the belt to tighten only. This could cause injury or discomfort to the child. (→P. 34)

## ■ When installing a child restraint system

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving or an accident.

- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat.
- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- Vehicles with third seats: Child restraint system installed on the third seat should not contact the second seatbacks.



- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated. Failure to do so may result in death or serious injury if the airbags deploy (inflate).



- When installing a child restraint system on the second center seat, adjust both seat cushions to the same position and align both seatbacks at the same angle. The seatbacks must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.
- When using the LATCH anchors for a child restraint system, move the seat as far back as possible, with the seatback close to the child restraint system.

**WARNING****■ When installing a child restraint system**

- When a booster seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failing to do so may result in death or serious injury in the event of sudden braking, sudden swerving or an accident.
- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When securing some types of child restraint systems in second or third row seats, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

**■ Do not use a seat belt extender**

If a seat belt extender is used when installing a child restraint system, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of sudden braking, sudden swerving or an accident.

**■ To correctly attach a child restraint system to the anchors**

When using the LATCH anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.

## Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.

### WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions. Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

#### ■ Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at your Lexus dealer as soon as possible.

#### ■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.
- Do not leave the vehicle with the engine running for a long time.  
If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the engine running in an area with snow build-up, or where it is snowing.  
If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

#### ■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Lexus dealer.

## LEXUS Enform Safety Connect\*


Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

By using the Safety Connect service, you are agreeing to be bound by the Telematics Subscription Service Agreement and its Terms and Conditions, as in effect and amended from time to time, a current copy of which is available at [Lexus.com](http://Lexus.com). All use of the Safety Connect service is subject to such then-applicable Terms and Conditions.

### System components

- ① Microphone
- ② LED light indicators
- ③ "SOS" button

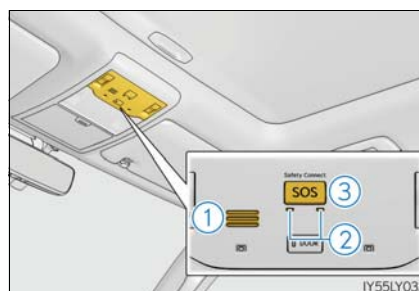

\*: If equipped

## Services

Subscribers have the following Safety Connect services available:

- Automatic Collision Notification\*

Helps drivers receive necessary response from emergency service providers.  
(→P. 77)

\*: U.S. Patent No. 7,508,298 B2

- Stolen Vehicle Location

Helps drivers in the event of vehicle theft. (→P. 77)

- Emergency Assistance Button (SOS)

Connects drivers to response-center support. (→P. 78)

- Enhanced Roadside Assistance

Provides drivers various on-road assistance. (→P. 78)

## Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call the following or push the "SOS" button in your vehicle for further subscription details.

- The United States

1-800-25-LEXUS (1-800-255-3987)

- Canada

1-800-26-LEXUS (1-800-265-3987)

- Puerto Rico

1-877-539-8777

---

**■ Safety Connect Services Information**

- Phone calls using the vehicle's Bluetooth® technology will not be possible during Safety Connect.
- Contact with the Safety Connect response center is dependent upon the telematics device being in operative condition, cellular connection availability, and GPS satellite signal reception, which can limit the ability to reach the response center or receive emergency service support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms is available; charges vary by subscription term selected and location.
- Automatic Collision Notification, Emergency Assistance and Stolen Vehicle Location will function in the United States, including Hawaii and Alaska, Puerto Rico and in Canada, and Enhanced Roadside Assistance will function in the United States, Puerto Rico and in Canada.
- Automatic Collision Notification, Emergency Assistance, Stolen Vehicle and Enhanced Road Assistance will not function in the United States Virgin Islands. For vehicles first sold in the USVI, no Safety Connect services will function in and outside the United States Virgin Islands.
- Safety Connect services are not subject to section 255 of the Telecommunications Act and the device is not TTY compatible.

**■ Languages**

The Safety Connect response center will offer support in multiple languages. The Safety Connect system will offer voice prompts in English, Spanish, and French. Please indicate your language of choice when enrolling.

**■ When contacting the response center**

You may be unable to contact the response center if the network is busy.

**■ Safety Connect backup battery depletion**

An exclusive backup battery is built in to assist the Automatic Collision Notification, which is activated when impact above a certain level is applied to the vehicle, or when the airbags operate. This battery is a primary battery, and cannot be recharged. The red LED indicator will flash to indicate that the battery should be replaced.

The backup battery will need to be replaced if the Automatic Collision Notification operates for 60 seconds or more. For replacement, consult your Lexus dealer.

### Safety Connect LED light Indicators

When the engine switch is turned to IGNITION ON mode, the red indicator light comes on for 2 seconds then turns off. Afterward, the green indicator light comes on, indicating that the service is active.

The following indicator light patterns indicate specific system usage conditions:

- Green indicator light on = Active service
- Green indicator light flashing = Safety Connect call in process
- Red indicator light (except at vehicle start-up) = System malfunction (contact your Lexus dealer)
- No indicator light (off) = Safety Connect service not active

### Safety Connect services

#### ■ Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

#### ■ Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico or 1-800-265-3987 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

### ■ Emergency Assistance Button (“SOS”)

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

### ■ Enhanced Roadside Assistance

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## Safety information for Safety Connect

Important! Read this information before using Safety Connect.

### ■ Exposure to radio frequency signals

The Safety Connect system installed in your vehicle is a low-power radio transmitter and receiver. It receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by the following U.S. and international standards bodies.

- ANSI (American National Standards Institute) C95.1 [1992]
- NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
- ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, and government health agencies and industries reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of Safety Connect complies with the FCC guidelines in addition to those standards.

■ Certification for Lexus Enform with Safety Connect

FCC ID: JOYJ79

IC: 574B-J79

**FCC/IC WARNING:**

Changes or modifications not expressly approved by the manufacture could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standards. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for uncontrolled environment.

The antennas used for this transmitter must be installed to provide a separation distance of least 20cm from all persons.

**FCC/IC AVERTISSEMENT:**

L'utilisateur est averti que les changements ou modifications non expressément approuvés par le fabricant pourraient annuler l'autorité de l'utilisateur à utiliser l'équipement.

Ce appareil est compatible avec la Partie 15 du règlement FCC et de la Licence de l'industrie canadienne et des normes exemptes de RSS. Opération soumise aux deux conditions suivantes :

- (1) ce appareil ne doit pas causer des interférences nuisibles, et
- (2) cet appareil doit accepté toutes les interférences, y compris les interférences qui peuvent entraîner un fonctionnement indésirable de l'appareil.

Cet appareil est compatible aux limites d'exposition aux radiation IC RSS-102 définies pour un environnement non contrôlé.

Les antennes utilisées pour cet émetteur doivent être installées à une distance d'au moins 20 cm de toutes les personnes.

## Engine immobilizer system

The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.

**Never leave the keys inside the vehicle when you leave the vehicle.**

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.



### ■ System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

### ■ Conditions that may cause the system to malfunction

- If the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

#### ■ Certifications for the engine immobilizer system

- For vehicles sold in the U.S.A., Hawaii, Guam and Puerto Rico

FCC ID: NI4TMIMB-3 ✓

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) l'appareil ne doit pas produire de brouillage; 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### WARNING

##### ■ Certifications for the engine immobilizer system

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTICE

##### ■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

## Alarm

### The alarm

The alarm uses light and sound to give an alert when an intrusion is detected.


The alarm is triggered in the following situations when the alarm is set:

- A locked door is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- The battery is reconnected.

### Setting the alarm system

Close the doors and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

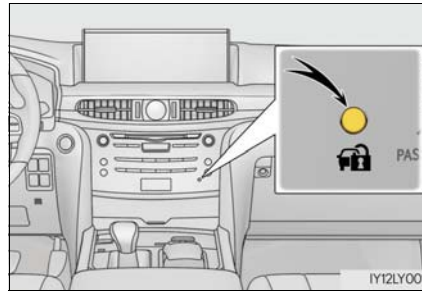

### Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarms:

- Unlock the doors using the entry function or wireless remote control.
- Turn the engine switch to ACCESSORY or IGNITION ON mode, or start the engine. (The alarm will be deactivated or stopped after a few seconds.)

**■ System maintenance**

The vehicle has a maintenance-free type alarm system.

**■ Items to check before locking the vehicle**



To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following.

- Nobody is in the vehicle.
- The windows and moon roof are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

**■ Triggering of the alarm**

The alarm may be triggered in the following situations:  
(Stopping the alarm deactivates the alarm system.)

- The doors are unlocked using the mechanical key.
- A person inside the vehicle opens a door or hood, or unlocks the vehicle using an inside lock button.
- The battery is recharged or replaced when the vehicle is locked. (→P. 552)

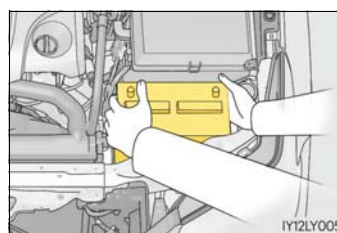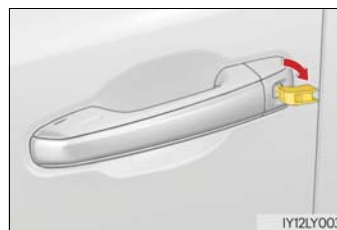

**■ Alarm-operated door lock**

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the battery.

**NOTICE****■ To ensure the system operates correctly**

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

**2. Instrument cluster**

|                                    |     |
|------------------------------------|-----|
| Warning lights and indicators..... | 86  |
| Gauges and meters .....            | 92  |
| Multi-information display .....    | 96  |
| Head-up display .....              | 105 |
| Fuel consumption information ..... | 110 |

## Warning lights and indicators

The warning lights and indicators on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

For the purpose of explanation, the following illustration display all warning lights and indicators illuminated.



The units used on the speedometer and some indicators may differ depending on the target region.

## Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems.

|                                                                                                        |                                                     |                                                                                                      |                                                             |
|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------|------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| <sup>*1</sup><br>     | Brake system warning light<br>(→P. 523)<br>(U.S.A.) | <sup>*1</sup><br>   | Automatic headlight leveling system warning light (→P. 524) |
| <sup>*1</sup><br>     | Brake system warning light<br>(→P. 523)<br>(Canada) | <sup>*2</sup><br>   | Low speed four-wheel drive indicator light (→P. 525)        |
| <sup>*1</sup><br>     | Charging system warning light (→P. 523)             | <sup>*2</sup><br>   | Center differential lock indicator light (→P. 525)          |
| <sup>*1</sup><br>     | Malfunction indicator lamp (→P. 523)<br>(U.S.A.)    |                     | Open door warning light (→P. 525)                           |
| <sup>*1</sup><br>   | Malfunction indicator lamp (→P. 523)<br>(Canada)    |                   | Low fuel level warning light (→P. 525)                      |
| <sup>*1</sup><br>   | SRS warning light (→P. 523)                         |                   | Driver's seat belt reminder light (→P. 525)                 |
| <sup>*1</sup><br>   | ABS warning light (→P. 523)<br>(U.S.A.)             | <sup>*3</sup><br> | Front passenger's seat belt reminder light (→P. 525)        |
| <sup>*1</sup><br>   | ABS warning light (→P. 523)<br>(Canada)             | <sup>*1</sup><br> | Master warning light (→P. 525)                              |
| <sup>*1,4</sup><br> | PCS warning light (→P. 524)<br>(if equipped)        | <sup>*1</sup><br> | Tire pressure warning light (→P. 525)                       |
| <sup>*1</sup><br>   | Slip indicator light (→P. 524)                      | <sup>*2</sup><br> | Parking brake indicator (→P. 525)<br>(U.S.A.)               |

2

Instrument cluster

|                                                                                                    |                                                  |                                                                                                    |                                                  |
|----------------------------------------------------------------------------------------------------|--------------------------------------------------|----------------------------------------------------------------------------------------------------|--------------------------------------------------|
| <sup>*2</sup><br> | Parking brake indicator<br>(→P. 525)<br>(Canada) | <sup>*1</sup><br> | Power steering system<br>warning light (→P. 525) |
| <sup>*1</sup><br> | Brake system warning light<br>(→P. 526)          | <sup>*5</sup><br> | Brake Override System<br>warning light (→P. 181) |

<sup>\*1</sup>: These lights turn on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is on, or after a few seconds. There may be a malfunction in a system if the lights do not turn on, or turn off. Have the vehicle inspected by your Lexus dealer.

<sup>\*2</sup>: The light flashes to indicate a malfunction.

<sup>\*3</sup>: This light illuminates on the center panel.

<sup>\*4</sup>: The light flashes or illuminates to indicate a malfunction.

<sup>\*5</sup>: This light is displayed on the multi-information display.

## Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator  
(→P. 223)



(if equipped)

LDA indicator (→P. 267)



(U.S.A.)

Headlight indicator  
(→P. 227)



\*1, 2

Slip indicator (→P. 384)



(Canada)

Tail light indicator  
(→P. 227)



\*1

VSC OFF indicator  
(→P. 384)



Headlight high beam  
indicator (→P. 228)



Multi-terrain Select  
indicator (→P. 318)



Automatic High Beam  
indicator (→P. 230)



\*1

Crawl Control indicator  
(→P. 313)



Fog light indicator  
(→P. 235)



Automatic transmission  
second start indicator  
(→P. 216)



\*1

Eco Driving Indicator  
Light (→P. 91)



Low speed four-wheel  
drive indicator light  
(→P. 309)



Cruise control indicator  
(→P. 287, 275)



Center differential lock  
indicator (→P. 310)



Cruise control "SET"  
indicator (→P. 287, 275)



\*1

Easy access mode  
indicator (→P. 301)



(if equipped)

Dynamic radar cruise  
control indicator  
(→P. 275)



Intuitive parking assist  
indicator (→P. 293)

2

Instrument cluster

|                                                                                                                       |                                                                              |                                                                                                      |                                                                           |
|-----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| <sup>*1,3</sup><br><br>(if equipped) | PCS warning light<br>(→P. 255)                                               |                     | Turn Assist indicator<br>(→P. 313)                                        |
|                                      | BSM (Blind Spot Monitor)<br>indicator (→P. 369)                              | <br>(U.S.A.)        | Parking brake indicator<br>(→P. 224)                                      |
| <sup>*4,5</sup><br>                  | BSM (Blind Spot Monitor)<br>outside rear view mirror<br>indicators (→P. 369) | <br>(Canada)        | Parking brake indicator<br>(→P. 224)                                      |
|                                      | RCTA (Rear Cross Traffic<br>Alert) indicator (→P. 377)                       |                     | TRAC OFF indicator<br>(→P. 384)                                           |
| <sup>*6</sup><br><br>(U.S.A.)        | "AIR BAG ON/<br>OFF" indicator<br>(→P. 49)                                   | <sup>*7</sup><br>   | Low outside temperature<br>indicator (→P. 92)                             |
| <sup>*6</sup><br><br>(Canada)      | "AIR BAG ON/<br>OFF" indicator<br>(→P. 49)                                   | <sup>*8</sup><br> | Smart access system with<br>push-button start indicator<br>(→P. 211, 550) |

<sup>\*1</sup>: These lights turn on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is on, or after a few seconds. There may be a malfunction in a system if the lights do not turn on, or turn off. Have the vehicle inspected by your Lexus dealer.

<sup>\*2</sup>: The light flashes to indicate that the system is operating.

<sup>\*3</sup>: The light turns on when the system is turned off.

<sup>\*4</sup>: In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the engine switch is turned to IGNITION ON mode while the system is set to on.
- When the system is set to on while the engine switch is in IGNITION ON mode.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction with the system.

If this occurs, have the vehicle inspected by your Lexus dealer.

<sup>\*5</sup>: This light illuminates on the outside rear view mirrors.

<sup>\*6</sup>: This light illuminates on the center panel.

<sup>\*7</sup>: When the outside temperature is approximately 37°F (3°C) or lower, the indicator will flash for approximately 10 seconds, then stay on.

\*8: This light is displayed on the multi-information display.

### ■ Eco Driving Indicator Light

During Eco-Friendly acceleration operation (Eco driving), Eco Driving Indicator Light will turn on. When the acceleration exceeds Zone of Eco driving (→P. 103), or when the vehicle is stopped, the light turns off.

Eco Driving Indicator Light will not operate in the following conditions:

- The shift lever is in any position other than D.
- The vehicle is set to second start mode. (→P. 216)
- The vehicle is set to sport mode or customized mode. (→P. 290)
- The vehicle speed is approximately 81 mph (130 km/h) or higher.
- The Crawl Control is operating. (→P. 313)
- The paddle shift switch (if equipped) is operating.




### ⚠ WARNING

#### ■ If a safety system warning light does not come on

Should a safety system light such as the Multi Terrain ABS and the SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Lexus dealer immediately if this occurs.

## Gauges and meters

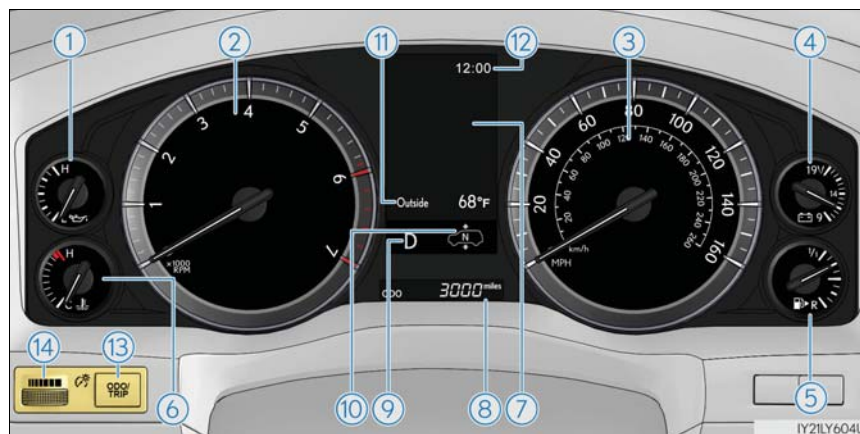

The units used on the speedometer may differ depending on the target region.

- ① Engine oil pressure gauge  
Displays the engine oil pressure
- ② Tachometer  
Displays the engine speed in revolutions per minute
- ③ Speedometer  
Displays the vehicle speed
- ④ Voltmeter  
Displays the charge state
- ⑤ Fuel gauge  
Displays the quantity of fuel remaining in the tank
- ⑥ Engine coolant temperature gauge  
Displays the engine coolant temperature
- ⑦ Multi-information display  
Presents the driver with a variety of driving-related data (→P. 96)

⑧ Odometer and trip meter display

Odometer:

Displays the total distance the vehicle has been driven

Trip meter:

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

⑨ Shift position and shift range display

Displays the selected shift position or selected shift range (→P. 216)

⑩ 4-Wheel AHC display

Display the status of 4-Wheel AHC (Active Height Control Suspension). (→P. 301)

⑪ Outside temperature

Displays the outside temperature within the range of -40°F (-40°C) to 122°F (50°C). Low outside temperature indicator comes on when the ambient temperature is 37°F (3°C) or lower.

⑫ Clock

Time displayed is linked to the analog clock on the instrument panel. (→P. 438)

⑬ Odometer/trip meter display change button


Switches between odometer and trip meter displays

⑭ Instrument panel light control dial

The brightness of the instrument panel light can be adjusted

### Changing the display


Switches between odometer and trip meter displays. When the trip meter is displayed, pressing and holding the button will reset the trip meter.

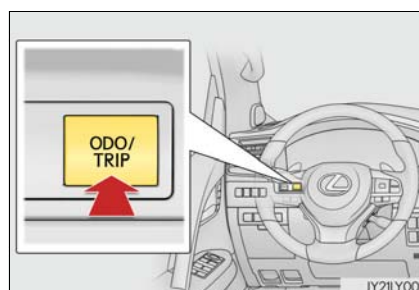

### Instrument panel light control

The brightness of the instrument panel lights can be adjusted.

- ① Darker
- ② Brighter

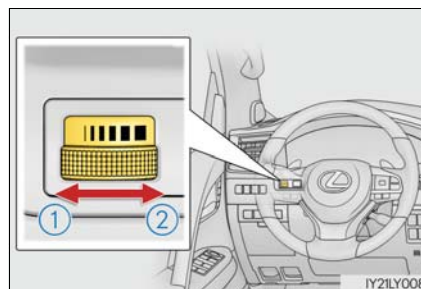

#### ■ The meters and display illuminate when

The engine switch is in IGNITION ON mode.

#### ■ The brightness of the instrument panel lights

When the tail lights are turned on, the meter's brightness will be reduced slightly unless the meter brightness level adjustment is set to the brightest setting.

If the tail lights are turned on when the surroundings are dark, the meter's brightness will be reduced slightly. However, when the surroundings are bright, such as during the day-time, the meter's brightness will not be reduced even if the tail lights are turned on.

#### ■ Customization

The meter display can be customized on the multi-information display. (→P. 584)

### ⚠ WARNING

#### ■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.



## NOTICE

**■ To prevent damage to the engine and its components**

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 555)

**■ Voltmeter**

When the voltmeter indicates 19 V or higher or 9 V or lower while the engine is running, there may be a battery or charging system malfunction. Have the vehicle inspected at your Lexus dealer.

**■ Engine oil pressure gauge**

When the value of the engine oil pressure gauge drops while the engine is running, stop the vehicle in a safe place immediately and check the amount of engine oil. (→ P. 477)


When the oil pressure drops even though the engine oil amount has not decreased, or if the oil pressure does not increase when engine oil is added, contact your Lexus dealer, as there may be a problem with the lubrication system.

## Multi-information display

### Display contents

The following information will be displayed when a menu icon is selected. (→P. 98)

Some of the information may be displayed automatically depending on the situation.

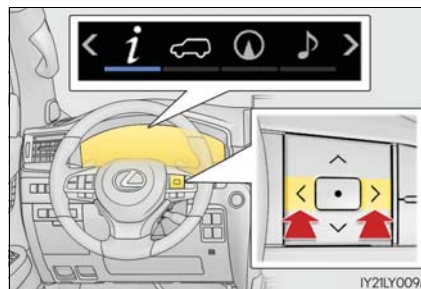

#### Drive information

Select to display various drive data. (→P. 99)



#### Vehicle information display (if equipped)

Select to display the vehicle information. (→P. 100)



#### Navigation system-linked display

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



#### Audio system-linked display

Select to enable selection of an audio source or track on the display using the meter control switches.

**Driving assist system information (if equipped)**

Select to display the operational status of the following systems:

- Dynamic radar cruise control with full-speed range (→P. 275)  
When the vehicle is in constant speed control mode (→P. 283), the menu

icon will change to



- LDA (Lane Departure Alert) (→P. 267)

**Warning message display**

Select to display warning messages and measures to be taken if a malfunction is detected. (→P. 531)

**Settings display**

Select to change the meter display settings and the operation settings of some vehicle functions. (→P. 101)

### Operating the meter control switches

The multi-information display is operated using the meter control switches.

- ①   : Switch menu
-   : Change displayed content, scroll up/down the screen and move the cursor up/down

- ② Press: Enter/Set  
Press and hold: Reset


- ③ Return to the previous screen

- ④ Press: Displays the screen registered to 

When no screen has been registered, the drive information screen will be displayed.

Press and hold: Registers the currently displayed screen to 

When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.

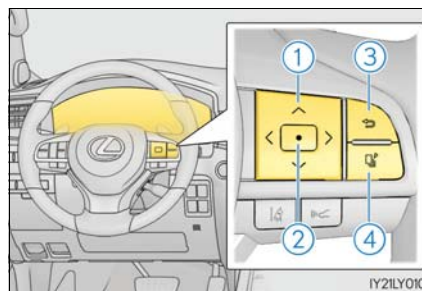

## Drive information

### ■ Drive information

4 of the following items can be registered and displayed as the drive information 1 and the drive information 2 (2 items on each screen).

Refer to P. 101 for the registration method of the drive information 1 and the drive information 2.

- Current fuel consumption (bar type/value type)

Displays the current rate of fuel consumption.

- Average fuel consumption (after reset<sup>\*2</sup>/after start/after refuel)<sup>\*1</sup>

Displays the average fuel consumption since the function was reset, the engine was started, and the vehicle was refueled, respectively.

- Average vehicle speed (after reset<sup>\*2</sup>/after start)

Displays the average vehicle speed since the function was reset and the engine was started, respectively.

- Elapsed time (after reset<sup>\*2</sup>/after start)

Displays the elapsed time since the function was reset and the engine was started, respectively.

- Distance (driving range/after start)

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

<sup>\*1</sup>: Use the displayed average fuel consumption as a reference.

<sup>\*2</sup>: The function can be reset by pressing  for longer than 1 second when the item to reset is displayed. If there is more than one item that can be reset, the item selection screen will appear.

**■ Eco Indicator (Eco Driving Indicator Zone Display)**

→P. 103

**■ Speed**

Displays the vehicle speed.

**■ Outside temperature**

Displays the outside temperature within the range of -40°F (-40°C) to 122°F (50°C).

**■ Sway warning (if equipped)**

Detects the sway of the vehicle within a lane, which is often associated with a decrease in the driver's attention level, and displays the decrease in attention using a bar display.

The shorter the bar length, the more the driver may need to rest.

This display is a part of the LDA (Lane Departure Alert) system. The display is enabled when the operating conditions of the vehicle sway warning are met.  
(→P. 267)

**■ Blank screen (display off)**

Drive information is not displayed.

**Vehicle information****■ Front tire angle (if equipped)**

Displays the direction of the front tires.

The tire direction is displayed in 3 stages for both left and right, in accordance with the angle of the tire.

If a battery terminal is disconnected and reconnected, the display may be disabled temporarily. After driving the vehicle for a while, the display will be enabled.

**■ Tire inflation pressure**

Displays inflation pressure of each tire.

The inflation pressure of the spare tire will be displayed.

**■ Oil maintenance (if equipped)**

Displays the remaining distance before the next maintenance is required.

## Settings display

The settings of some features can be changed by using the meter control switches.

### ■ Setting procedure

For functions that can be enabled or disabled, the function switches between on and off each time  is pressed.

### ■ Setting items

-  LDA (Lane Departure Alert)\*
  - Select to set up LDA. (→P. 584)
    - Alert method
    - Alert sensitivity
    - Sway warning
    - Sway sensitivity
-  BSM (Blind Spot Monitor)
  - Select to set up BSM. (→P. 584)
    - BSM on/off
    - RCTA (Rear Cross Traffic Alert) on/off
- Head-up display\*
  - Select to set up Head-up display. (→P. 584)
    - Display brightness/location
    - Display content
- Scheduled maintenance
  - Select to reset the message indicating maintenance is required.
- Oil maintenance\*
  - Select to reset the engine oil maintenance information

## ● Meter settings


Select to set the following items.

- Language  
Select to change the language on the display.
- Units  
Select to change the unit for measure.
-  Eco Driving Indicator Light  
Select to activate/deactivate the Eco Driving Indicator Light. (→P. 91)
-  switch settings  
You can register 1 screen as the top screen. To register, press and hold  while the desired screen is displayed.
- Drive information 1 and 2  
Select to select up to 2 items that will be displayed on a drive information screen, up to 2 drive information screens can be set.
- Clock  
Select to set the display mode of the clock.
- Pop-up display  
Select to set the pop-up displays, which may appear in some situations, on/off. (→P. 103)
- Accent color  
Select to change the accent colors on the screen, such as the cursor color.
- Initialization  
Registered or changed meter settings will be deleted or returned to their default setting.

\*: If equipped

### ■ Eco Driving Indicator

- ① Eco Driving Indicator Light (→P. 91)
- ② Eco Driving Indicator Zone Display  
Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.
- ③ Eco driving ratio based on acceleration  
If the acceleration exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display will illuminate.
- ④ Zone of Eco driving

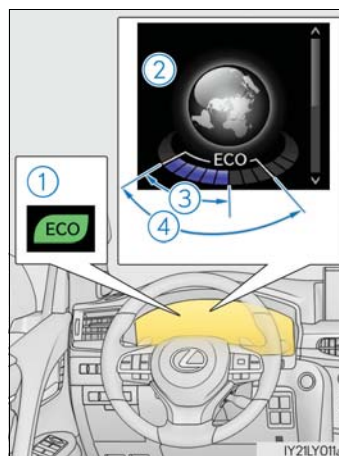

### ■ When disconnecting and reconnecting battery terminals

The drive information will be reset (only items that can be reset manually).

### ■ Pop-Up display

The pop-up display is displayed on the multi-information display according to the operating conditions of the following functions:

- Route guidance display of the navigation system-linked system
- Incoming call display of the hands-free phone system (if equipped)

The pop-up display function can be disabled. (→P. 101)

### ■ Tire inflation pressure

- It may take a few minutes to display the tire inflation pressure after the engine switch is turned to IGNITION ON mode. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.
- “---” may be displayed if the tire information cannot be determined due to unfavorable radio wave conditions.
- Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.

### ■ When setting up the display

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P.

### ■ Suspension of the settings display

In the following situations, the settings display using the meter control switches will be suspended.

- When a warning message appears on the multi-information display
- When the vehicle begins to move

### ■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

**WARNING****■ Caution for use while driving**

For safety, avoid operating the meter control switch while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switch. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

**■ Cautions while setting up the display**

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.


**NOTICE****■ While setting up the display**

To prevent battery discharge, ensure that the engine is running while setting up the display features.

## Head-up display\*

### Summary of functions

The head-up display is linked to the meters and navigation system and projects a variety of information in front of the driver, such as the current vehicle speed and route guidance to a set destination.

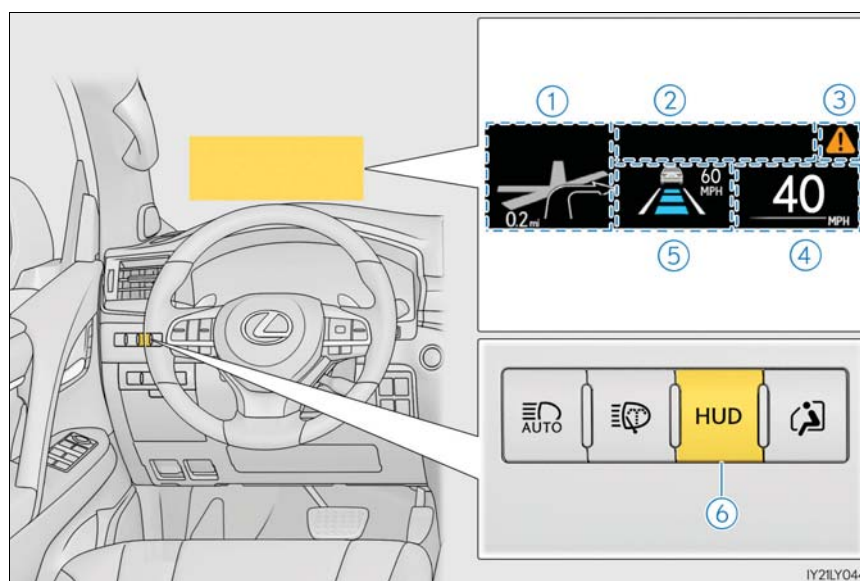

① Navigation system-linked display area (→P. 107)

Displays the following items, which are linked to the navigation system:

- Route guidance to destination
- Compass

② Message display area (→P. 107)

Displays the following items:

- Warning/Message (if equipped)
- Audio system operation status
- Outside temperature

③ Warning and information icons (→P. 107)

④ Vehicle speed display area

Displays the following items:

- Vehicle speed
- Speed limit

\*: If equipped

⑤ Driving assist system status display area (if equipped)

Select to display the operational status of the following systems:

- Dynamic radar cruise control with full-speed range (→P. 275)
- LDA (Lane Departure Alert) (→P. 267)
- Intuitive parking assist (→P. 293)


Displayed content is the same as that displayed on the multi-information display. For details, refer to the explanations of each system.

⑥ HUD (Head-up display) switch (→P. 106)

### Using the head-up display

#### ◆ Enabling/Disabling the head-up display

Press the HUD (head-up display) switch.

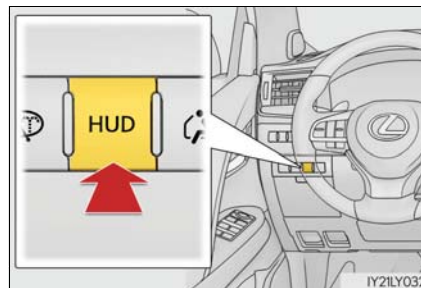

#### ◆ Changing settings of the head-up display

Select  on the multi-information display (→P. 96), and then select "HUD" to change the following settings:

##### ■ Display brightness/location

Select to adjust the brightness and location of the head-up display.

##### ■ Display content

Select to enable/disable the following items:

- Route guidance to destination
- Driving assist system status
- Compass
- Audio system operation status

### Warning and information icons

Displays the following multi-information display linked icons:



**Master warning icon**

Displayed when a warning message is displayed on the multi-information display. (→P. 531)



**Information icon**

Displayed when a suggestion/advice pop-up display is displayed on the multi-information display. (→P. 96)

### Message display area

Displays the following items in the appropriate situation:

#### ■ Warning/Message (if equipped)

Displays the following system warning/messages:

- Pre-collision warning (pre-collision system)
- Notification message (dynamic radar cruise control with full-speed range)

#### ■ Audio system operation status

Displayed when the audio system is operated.

#### ■ Outside temperature

Displayed in the following situations:

- When the engine switch is turned to IGNITION ON mode
- When the low outside temperature indicator is flashing

Displayed content is the same as that displayed on the multi-information display. (→P. 92)

### Navigation system-linked display area

Displays the following items which are linked to the navigation system:

#### ■ Route guidance to destination

Displayed when the navigation system is performing route guidance. When approaching an intersection, an arrow will be displayed to indicate the suggested direction of travel.

#### ■ Compass

Displays the direction of travel.

**■ Head-up display**

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses.

Adjust the brightness of the head-up display or remove your sunglasses.

**■ When the battery is disconnected**

The customize settings of the head-up display will be reset.

**■ Display brightness**

- The brightness of the head-up display can be adjusted on  of the multi-information display. Also, it is automatically adjusted according to the ambient brightness.
- When the vehicle is stopped, the display may dim temporarily. This is not a malfunction.

**■ Enabling/disabling of the head-up display**

If the head-up display is disabled, it will remain disabled when the engine switch is turned off then back to IGNITION ON mode.

**■ Head-up display automatic position adjustment**

If the display position is recorded into memory, the head-up display will be automatically adjusted to the desired position. (→P. 157)

**WARNING****■ Before using the head-up display**

- Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.
- Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.

**■ Caution for changing settings of the head-up display**


As the engine needs to be running while changing the settings of the head-up display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



## NOTICE

## ■ To prevent damage to components

- Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.
- Do not place anything on or put stickers onto the head-up display projector. Doing so could interrupt head-up display indications.
- Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector. Doing so could cause mechanical malfunctions.

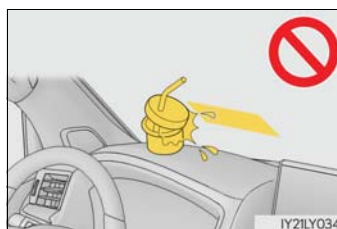


## ■ When changing the settings of the head-up display

To prevent battery discharge, ensure that the engine is running while the changing the settings of the head-up display.

## Fuel consumption information

Fuel consumption information can be displayed on the Remote Touch screen. The fuel consumption information can be displayed and operated on the side display.

- ① Remote Touch screen
- ② Remote Touch knob (→P. 398)
- ③ "MENU" button
- ④ "ENTER" button

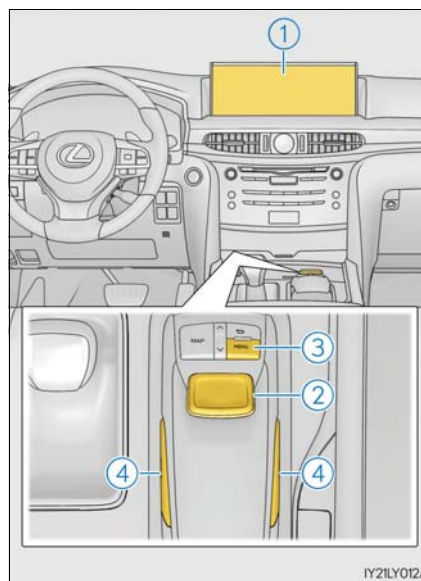

## Fuel consumption

Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

### ■ Trip information

If the "Past Record" screen is displayed, select "Trip Information".

- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Average vehicle speed since the engine was started.
- ⑤ Elapsed time since the engine was started.
- ⑥ Cruising range (→P. 112)



Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the engine switch was last turned to IGNITION ON mode. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

### ■ Past record

If the "Trip Information" screen is displayed, select "Past Record".

- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last reset. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.



### ■ Updating the past record data

Update the average fuel consumption by selecting "Update" to measure the current fuel consumption again.

### ■ Resetting the data

The fuel consumption data can be deleted by selecting "Clear".

### ■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.


As a result, the actual distance that can be driven may differ from that displayed.

### Using the side display

Vehicle information can be displayed on the side display (→P. 403), then select **<** or **>** to select the desired screen.


#### ► Fuel consumption

Displays the average fuel consumption for the past 10 minutes in 1 minute intervals, as well as the cruising range.

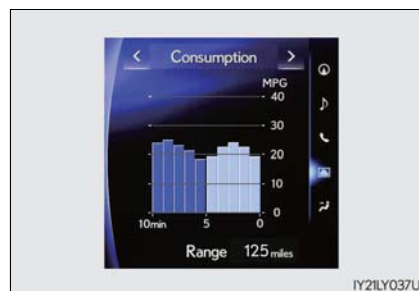


#### ► Past record

Displays the average fuel consumption and highest fuel consumption.

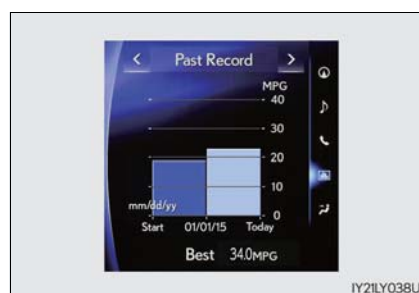

#### ► Trip information

Displays the cruising range, average fuel consumption and the amount of time elapsed since the engine was started.

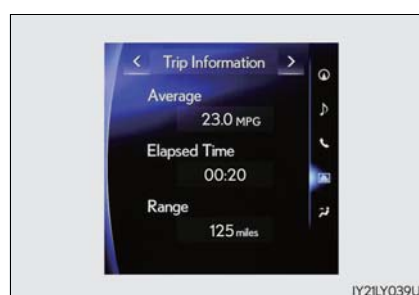

The image is an example only, and may vary slightly from actual conditions.




|                                                        |     |
|--------------------------------------------------------|-----|
| <b>3-1. Key information</b>                            |     |
| Keys .....                                             | 116 |
| <b>3-2. Opening, closing and locking the doors</b>     |     |
| Side doors .....                                       | 121 |
| Back door .....                                        | 128 |
| Smart access system with push-button start .....       | 138 |
| <b>3-3. Adjusting the seats</b>                        |     |
| Front seats .....                                      | 146 |
| Rear seats .....                                       | 148 |
| Driving position memory .....                          | 157 |
| Head restraints .....                                  | 161 |
| <b>3-4. Adjusting the steering wheel and mirrors</b>   |     |
| Steering wheel .....                                   | 164 |
| Inside rear view mirror .....                          | 166 |
| Outside rear view mirrors .....                        | 168 |
| <b>3-5. Opening, closing the windows and moon roof</b> |     |
| Power windows .....                                    | 171 |
| Moon roof .....                                        | 174 |

## Keys

### The keys


The following keys are provided with the vehicle.

- ① Electronic keys
  - Operating the smart access system with push-button start (→P. 138)
  - Operating the wireless remote control function
- ② Mechanical keys
- ③ Key number plate
- ④ Card key (electronic key)  
Operating the smart access system with push-button start (→P. 138)

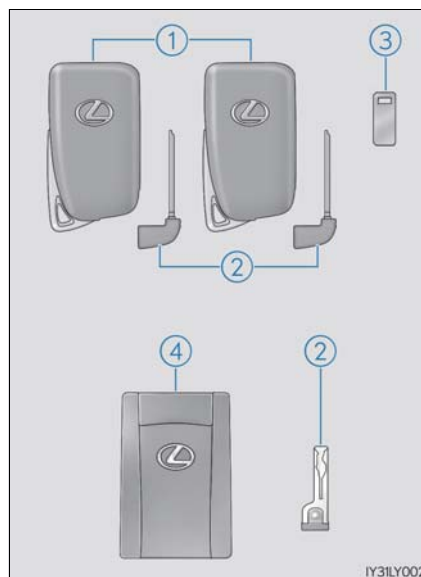

### Wireless remote control

- ① Locks the doors (→P. 121)
- ② Unlocks the doors (→P. 121)
- ③ Opens the windows and moon roof\* (→P. 121)
- ④ Opens/closes the power back door (→P. 128)
- ⑤ Sounds the alarm (→P. 117)

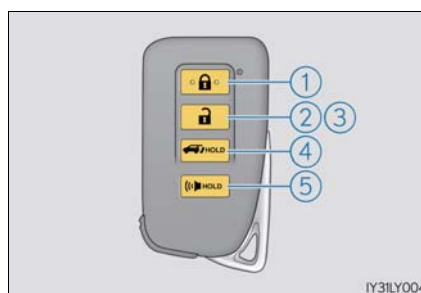


\*: This setting must be customized at your Lexus dealer.

### Using the mechanical key

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.


After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 549)

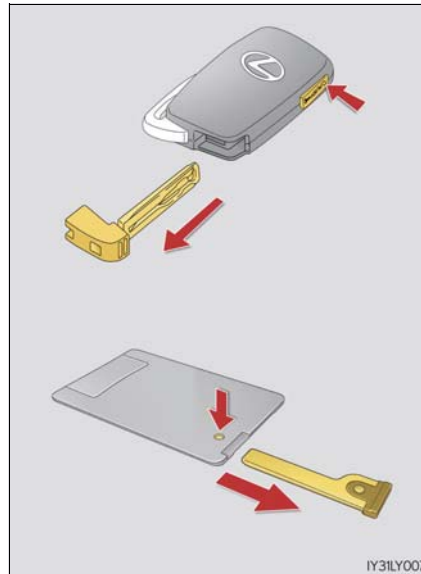

### ■ Panic mode


When  is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the electronic key.

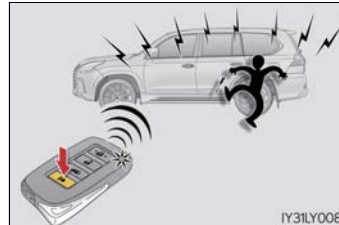


### ■ Card key

- The mechanical key that is stored inside the card key should be used only in an emergency, such as when the key does not operate properly.
- If it is difficult to take out the mechanical key, push down the lock release button using a pen tip etc. If it is difficult to pull it out, use a coin etc.
- To store the mechanical key in the card key, insert it inside while pressing the lock release button.

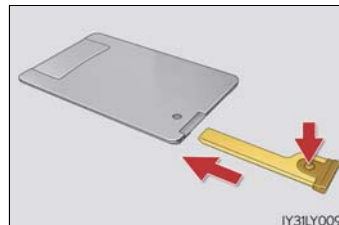

- If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.

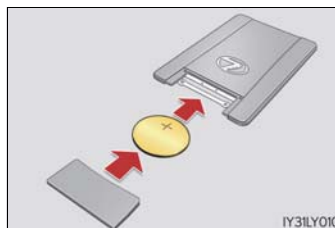

- The card key is not waterproof.

#### ■ When required to leave the vehicle's key with a parking attendant

Lock the glove box as circumstances demand. (→P. 427)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

#### ■ If you lose your mechanical keys

New genuine mechanical keys can be made by your Lexus dealer using another mechanical key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

#### ■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

#### ■ Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
- If the battery becomes low, an alarm will sound in the cabin when the engine stops.
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 505)
  - The smart access system with push-button start or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 3 ft. (1 m) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Recharging cellular phones or cordless phones
  - Table lamps
  - Induction cookers

**■ Replacing the key battery**

→P. 505

**■ Confirmation of the registered key number**

The number of keys already registered to the vehicle can be confirmed. Ask your Lexus dealer.

**NOTICE****■ To prevent key damage**

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not disassemble the keys.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers.
- Do not place the keys near medical electrical equipment such as low-frequency therapy equipment or microwave therapy equipment, and do not receive medical attention with the keys on your person.



## NOTICE

**■ Handling the card keys**

- Do not apply excess force when inserting the mechanical key to the card key. Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode and the card key may stop working.  
If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals.  
(To remove the battery cover, lightly grasp it and pull.) If the battery is corroded, have your Lexus dealer replace the battery.
- Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the cover may become loose.
- When installing the battery, make sure to check the direction of the battery. Installing the battery in the wrong direction may cause the battery to deplete rapidly.
- The surface of the card key may be damaged, or its coating may peel off in the following situations:
  - The card key is carried together with hard objects, such as coins or keys.
  - The card key is scraped with a sharp object, such as a tip of mechanical pencil.
  - The surface of the card key is wiped with thinners or benzene.

**■ Carrying the electronic key on your person**

Carry the electronic key 3.9 in. (10 cm) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 3.9 in. (10 cm) of the electronic key may interfere with the key, causing the key to not function properly.

**■ In case of a smart access system with push-button start malfunction or other key-related problems**

Take your vehicle with all the electronic keys provided with your vehicle, including the card key, to your Lexus dealer.

**■ When an electronic key is lost**

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit your Lexus dealer immediately with all remaining electronic keys and the card key that were provided with your vehicle.

## Side doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.

### Locking and unlocking the doors from the outside

#### ◆ Smart access system with push-button start

Carry the electronic key to enable this function.

- ① Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.\*

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

\*: The door unlock settings can be changed. (→P. 126)

- ② Touch the lock sensor (the indentation on the upper part or lower part of the handle) to lock the doors.

Check that the door is securely locked.



3

Operation of each component

#### ◆ Wireless remote control

- ① Locks all the doors


Check that the door is securely locked.

- ② Unlocks all the doors

Pressing the button unlocks the driver's door. Pressing the button again unlocks the other doors.

Press and hold to open the windows and moon roof.\*

\*: These settings must be customized at your Lexus dealer.

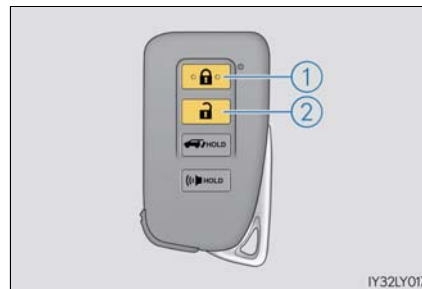

**■ Operation signals**

Doors: A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

Windows and moon roof: A buzzer sounds to indicate that the windows and moon roof are operating.

**■ Security feature**

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

**■ When the door cannot be locked by the lock sensor on the upper part of the door handle**

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

**■ Door lock buzzer**

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously. Fully close the door to stop the buzzer, and lock the vehicle once more.

**■ Setting the alarm**


Locking the doors will set the alarm system. (→P. 82)

**■ If the smart access system with push-button start or the wireless remote control does not operate properly**

- Use the mechanical key to lock and unlock the doors. (→P. 549)
- Replace the battery with a new one if it is depleted. (→P. 505)

**Locking and unlocking the doors from the inside****◆ Door lock switches**


- ① Locks all the doors
- ② Unlocks all the doors

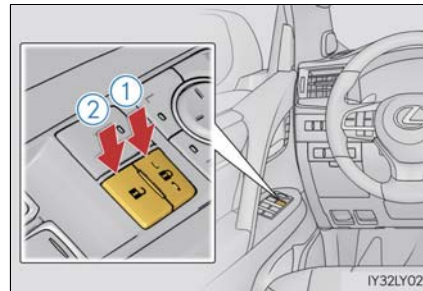**◆ Inside lock buttons**

- ① Locks the door
- ② Unlocks the door

The front doors can be opened by pulling the inside handles even if the lock buttons are in the lock position.

The other doors can be unlocked by pulling the inside handles.

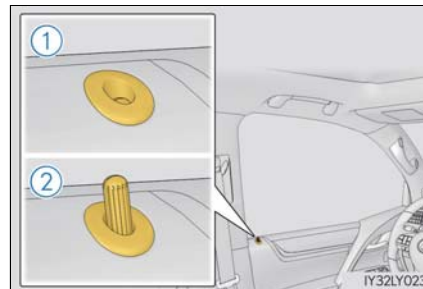

3

Operation of each component

**Locking the driver's door from the outside without a key**

- 1 Move the inside lock button to the lock position.
- 2 Close the door.

The door cannot be locked if the engine switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle.


Depending on the position of the electronic key, the key may not be detected correctly and the door may be locked.

**Rear door child-protector lock**

The door cannot be opened from inside the vehicle when the lock is set.

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

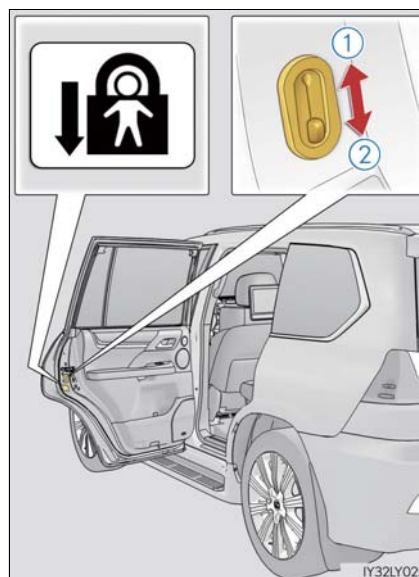

Automatic door locking and unlocking systems

The following functions can be set or canceled:  
For instructions on customizing, refer to P. 584.

| Function                                      | Operation                                                                                                          |
|-----------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Shift position linked door locking function   | Shifting the shift lever out of P locks all the doors.                                                             |
| Shift position linked door unlocking function | Shifting the shift lever to P unlocks all the doors.                                                               |
| Speed linked door locking function            | All the doors are locked when the vehicle speed is approximately 12 mph (20 km/h) or higher.                       |
| Driver's door linked door unlocking function  | All the doors are unlocked when the driver's door is opened within 45 seconds after turning the engine switch off. |

3

Operation of each component

### ■ Changing the door unlock function setting

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the engine switch off.
- 2 When the indicator light on the key surface is not on, press and hold  for approximately 5 seconds while pressing and holding .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

| Multi-information display                                                          | Unlocking function                                               | Beep                                            |
|------------------------------------------------------------------------------------|------------------------------------------------------------------|-------------------------------------------------|
|   | Holding the driver's door handle unlocks only the driver's door. | Exterior: Beeps 3 times<br>Interior: Pings once |
|                                                                                    | Holding a passenger's door handle unlocks all the doors.         |                                                 |
|  | Holding a door handle unlocks all the doors.                     | Exterior: Beeps twice<br>Interior: Pings once   |

To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 60 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In a case that the alarm is triggered, immediately stop the alarm. (→P. 82)

- **Impact detection door lock release system**  
In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.
- **Using the mechanical key**  
The doors can also be locked and unlocked with the mechanical key. (→P. 549)
- **Conditions affecting the operation of the smart access system with push-button start or wireless remote control**  
→P. 140
- **Customization**  
Settings (e.g. unlocking function using a key) can be changed.  
(Customizable features: →P. 584)

 **WARNING**

- **To prevent an accident**  
Observe the following precautions while driving the vehicle.  
Failure to do so may result in a door opening and an occupant being thrown out of the vehicle, resulting in death or serious injury.
  - Ensure that all doors are properly closed and locked.
  - Do not pull the inside handle of the doors while driving.  
Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
  - Set the rear door child-protector locks when children are seated in the rear seats.

## Back door


The back door can be locked/unlocked and opened by the following procedures.

### Locking and unlocking the back door

#### ◆ Smart access system with push-button start

Carry the electronic key to enable this function.

- ① Locks all the doors  
Check that the door is securely locked.
- ② Unlocks all the doors  
The doors cannot be unlocked for 3 seconds after the doors are locked.

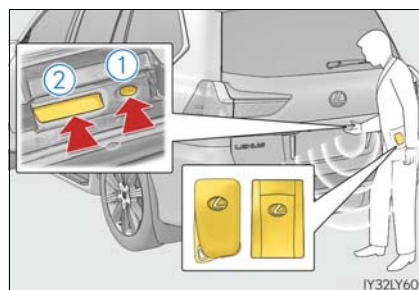

#### ◆ Wireless remote control

→P. 121

#### ◆ Door lock switches

→P. 123

### Opening/closing the back door with the wireless remote control

Press and hold the switch.

The power back door can be operated even when the back door is locked.\*


\*: This setting can be customized so that the power back door can be operated only when the back door is unlocked. (→P. 584)



### Opening/closing the back door from the inside

Press and hold the power back door switch to open/close the back door.

Pressing the switch again while the power back door is operating will cause the operation to reverse.

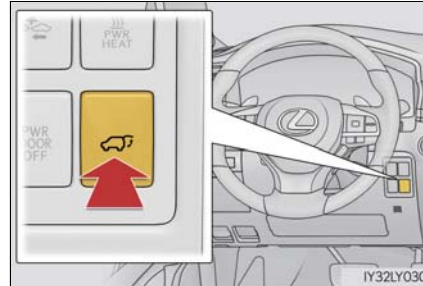

### Opening the back door from the outside

#### 1 Open the upper back door


When the power back door is unlocked: Press the back door opener switch.

When the power back door is locked: While carrying an electronic key, press and hold the back door opener switch.

The upper back door will automatically\* open.

\*: Using the customization function, the upper back door can be set to not automatically open, even when the back door opener switch is pressed. (→P. 584)


When the automatic open function is disabled, the upper back door can be opened by lifting it up with the back door opener switch pressed and held.

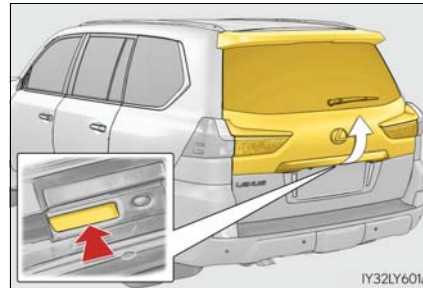

#### 2 Open the lower back door

Pull the handle.

The lower back door will open.

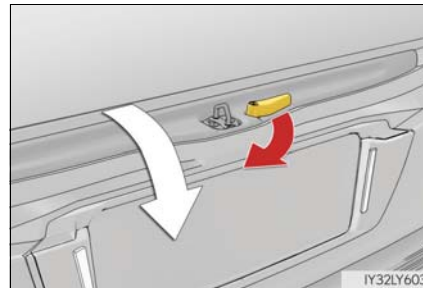


3

Operation of each component

### Power back door switch

Pressing the switch closes the upper back door automatically. (A buzzer sounds.)

Pressing the switch while the upper back door is closing opens it again.

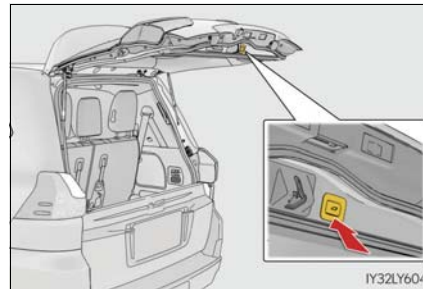

### Canceling the power back door system


Turn the main switch off to disable the power back door system.

#### ① Off

The back door cannot be operated even with the wireless remote control or power back door switch.


#### ② On

Orange mark on the switch should be visible when the switch is on.

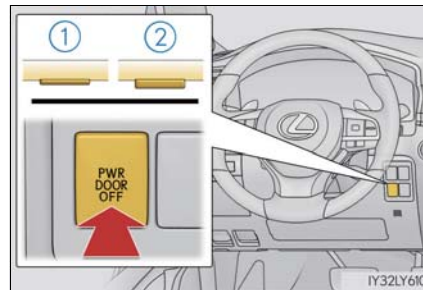


### When closing the back door

- Make sure that the lower back door is closed before closing the upper back door.
- Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

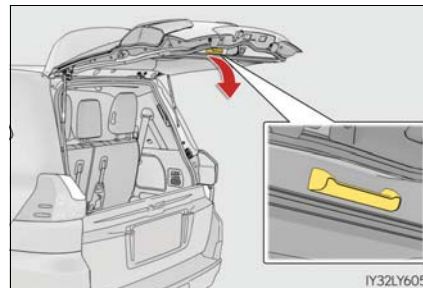

### Rear step bumper

The rear step bumper is for rear end protection and easier step-up loading.

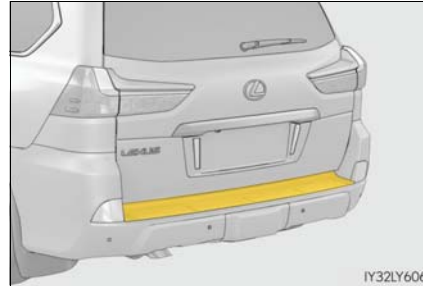

IY32LY606

### Power back door operating conditions

When the engine switch is off or in accessory mode, the power back door can be opened and closed if the power back door main switch is on and all of the following conditions are met.

- The lower back door is closed (only when closing)\*<sup>1</sup>

When the engine switch is in IGNITION ON mode, the power back door can be opened and closed if the power back door main switch is on and all of the following conditions are met.\*<sup>2</sup>

- The lower back door is closed (only when closing)\*<sup>1</sup>
- The vehicle speed is below 1 mph (3 km/h) and the shift lever is in P


\*<sup>1</sup>: If the lower back door is opened while the upper back door is in a closing operation, it automatically opens again.

\*<sup>2</sup>: The back door cannot be operated using the wireless remote control.

### If the back door opener is inoperative

The back door can be operated from the inside.

- 1 Remove the cover on the back door trim.  
Use a cloth to prevent scratches.

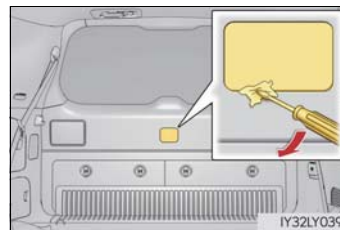

IY32LY039

- 2 Push the lever for the back door motor, open the back door.



IY32LY041

3

Operation of each component

**■ Jam protection function**

If anything obstructs the power back door while it is closing/opening, the back door will automatically operate in the opposite direction.

**■ When re-connecting the battery**

To enable the power back door to operate properly, perform the following:

- Unlock the back door using the door lock switch
- Close the back door manually

**■ Back door closer**

In the event that the upper and lower back doors are left slightly open, the back door closer will automatically close them to the fully closed position.

**■ Fall-down protection function**

While the power back door is opening automatically, applying excessive force to it will stop the opening operation to prevent the power back door from rapidly falling down.

**■ Back door reserve lock function**

This function is a function which reserves locking of all doors, beforehand, when the back door is open. When the following procedure is performed, all the doors except the back door are locked and then back door will also be locked at the same time it is closed.

- 1 Close all doors, except the back door.
- 2 Perform any of the following during the automatic closing operation of the back door.
  - Press the lock button on the wireless remote control. (→P. 116)
  - Touch the lock sensor on the side door handle with carrying the electronic key on your person. (→P. 121)

Also, if the back door does not fully close due to the operation of the jam protection function, etc., while the back door is automatically closing after a reserve lock operation is performed, the reserve lock function is canceled and all the doors will unlock.

**■ Customization**

Settings (e.g. switch operation) can be changed.  
(Customizable features →P. 584)

**WARNING****■ While driving**

- Keep the back door closed while driving.  
If the back door is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident.  
In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
- Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.

**■ When children are in the vehicle**

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not allow children to play in the luggage compartment.  
If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.  
Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

### WARNING

#### ■ Operating the back door

Observe the following precautions.


Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.
- The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.
- When closing the back door, take extra care to prevent your fingers etc. from being caught. Also pay attention to your personal belongings such as bags and ties.
- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay. Doing so may cause hands to be caught or the back door damper stay to break, causing an accident.
- If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended.



**⚠ WARNING****■ Back door closer**

- In the event that the upper or lower back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious injuries.

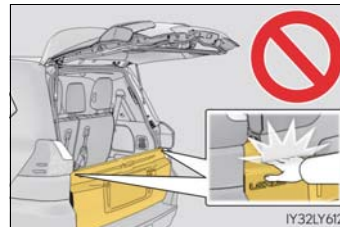

- Use caution when using the back door closer as it still operates when the power back door system is canceled.

 **WARNING****■ Power back door**

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- If the power back door system is turned off with the main switch while the back door is operating automatically, the automatic operation is stopped. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close unexpectedly.
- When the back door opener switch is pressed a second time during an automatic open operation that was performed by pressing the back door opener switch, the operation stops and the back door has to be operated manually. At this time, take extra care, as the back door may open or close abruptly.
- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
- On an incline, the back door may suddenly shut after it opens. Make sure the back door is fully open and secure.
- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
  - When the back door contacts an obstacle
  - When the battery voltage suddenly drops, such as when the engine switch is turned to IGNITION ON mode or the engine is started during automatic operation
- If a bicycle carrier or similar heavy object is attached to the back door, the power back door may not operate, causing itself to malfunction, or the back door may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended.

**■ Jam protection function**

Observe the following precautions. Failure to do so may cause death or serious injury.


- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

 NOTICE

**■ Back door damper stays**

The back door is equipped with damper stays that hold the back door in place. Observe the following precautions. Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Lexus parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

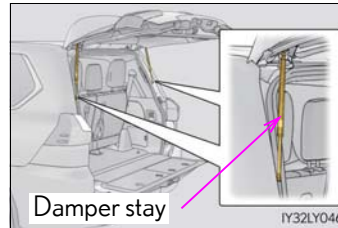
**■ To prevent back door closer malfunction**

Do not apply excessive force to the back door while the back door closer is operating.

**■ To prevent damage to the power back door**

- Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.
- Do not apply excessive force to the back door while the power back door is operating.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If the sensor is disconnected, the power back door will not operate in automatic operation.

**■ When operating the back door reserve lock function**

Make sure to carry the electronic key on your person.

If the electronic key is returned inside the vehicle during the closing operation, it may be locked even if the electronic key is inside the vehicle depending on the location of electronic key.

Before leaving the vehicle, make sure that all the doors are closed and locked.


### Smart access system with push-button start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.

- Locks and unlocks the side doors (→P. 121)
- Locks and unlocks the back door (→P. 128)
- Starts the engine (→P. 211)


#### ■ Antenna location

- ① Antennas outside the cabin
- ② Antennas inside the cabin
- ③ Antenna outside the luggage compartment

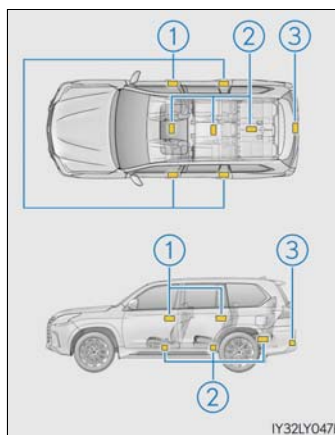

■ Effective range (areas within which the electronic key is detected)

-  When locking or unlocking the doors
- The system can be operated when the electronic key is within about 2.3 ft. (0.7 m) of either of the outside front door handle. (Only the doors detecting the key can be operated.)

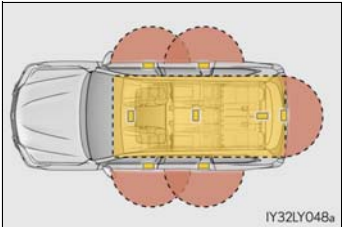

-  When starting the engine or changing engine switch modes
- The system can be operated when the electronic key is inside the vehicle.

■ Alarms and warning indicators

A combination of exterior and interior alarms as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures in response to any warning message on the multi-information display.

The following table describes circumstances and correction procedures when only alarms are sounded.

| Alarm                                    | Situation                                                                                                                                                       | Correction procedure                                   |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| Exterior alarm sounds once for 5 seconds | An attempt was made to lock the vehicle while a door is open                                                                                                    | Close all of the doors and lock the doors again        |
| Interior alarm pings continuously        | The engine switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the engine switch was in ACCESSORY mode) | Turn the engine switch off and close the driver's door |
|                                          | The engine switch was turned off while the driver's door was open                                                                                               | Close the driver's door                                |

### ■ Battery-saving function

The battery-saving function will be activated in order to prevent the electronic key battery and the battery from being discharged while the vehicle is not in operation for a long time.

- In the following situations, the smart access system with push-button start may take some time to unlock the doors.
  - The electronic key has been left in an area of approximately 6 ft. (2 m) of the outside of the vehicle for 10 minutes or longer.
  - The smart access system with push-button start has not been used for 5 days or longer.
- If the smart access system with push-button start has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door. In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to unlock the doors.

### ■ Electronic Key Battery-Saving Function

When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press  twice while pressing and holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart access system with push-button start cannot be used. To cancel the function, press any of the electronic key buttons.



The smart access system with push-button start uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart access system with push-button start, wireless remote control and engine immobilizer system from operating properly.  
(Ways of coping: →P. 549)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Portable radio, cellular phone, cordless phone or other wireless communication device
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby

- When carrying the electronic key together with the following devices that emit radio waves
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices

■ **Note for the entry function**

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
  - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
  - The electronic key is on the instrument panel, luggage cover (if equipped) or floor, or in the door pockets or glove box when the engine is started or engine switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the doors will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
- The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash, when the electronic key is within the effective range. (The doors will automatically be locked after approximately 60 seconds if the doors are not opened and closed.)
- Touching the door lock or unlock sensor while wearing gloves may prevent lock or unlock operation.
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In this case, follow the following correction procedures to wash the vehicle.
  - Place the electronic key in a location 6 ft. (2 m) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
  - Set electronic key to battery-saving mode to disable the smart access system with push-button start. (→P. 140)

- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped or back door unlock switch is pressed.
- A sudden approach to the effective range of door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.

■ **When the vehicle is not driven for extended periods**

- To prevent theft of the vehicle, do not leave the electronic key within 6 ft. (2 m) of the vehicle.
- The smart access system with push-button start can be deactivated in advance. (→P. 584)

■ **To operate the system properly**

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

■ **If the smart access system with push-button start does not operate properly**

- Locking and unlocking the doors: Use the mechanical key. (→P. 549)
- Starting the engine: →P. 550

■ **Customization**

Settings (e. g. smart access system with push-button start) can be changed. (Customizable features: →P. 584)

■ **If the smart access system with push-button start has been deactivated in a customized setting**

- Locking and unlocking the doors:  
Use the wireless remote control or mechanical key. (→P. 121, 549)
- Starting the engine and changing engine switch modes: →P. 550
- Stopping the engine: →P. 212

**■ Certification for the smart access system with push-button start**

- For vehicles sold in the U.S.A., Hawaii, Guam and Puerto Rico

|                                                          |
|----------------------------------------------------------|
| FCC ID: HYQ23AAP<br>FCC ID: HYQ14FBA<br>FCC ID: HYQ14CBB |
|----------------------------------------------------------|

**NOTE:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

**NOTE:**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

**NOTE:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- For vehicles sold in the U.S.A., Hawaii, Guam and Puerto Rico

FCC ID: NI4TMLF12-1 ✓

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) l'appareil ne doit pas produire de brouillage; 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**WARNING****■ Caution regarding interference with electronic devices**

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should keep away from the smart access system antennas. (→P. 138)

The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Lexus dealer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.


- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.

Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Lexus dealer for details on disabling the entry function.

## Front seats


### Adjustment procedure

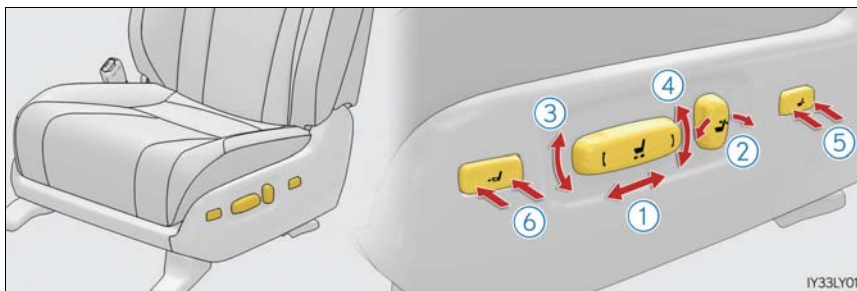

- ① Seat position adjustment switch
- ② Seatback angle adjustment switch
- ③ Seat cushion (front) angle adjustment switch
- ④ Vertical height adjustment switch
- ⑤ Lumbar support adjustment switch
- ⑥ Seat cushion length adjustment switch (driver's side only)

### Active head restraints

When the occupant's lower back presses against the seatback during a rear-end collision, the head restraint moves slightly forward and upward to help reduce the risk of whiplash on the seat occupant.

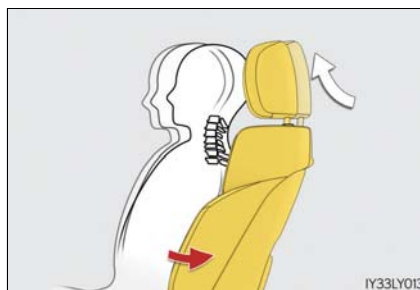


#### ■ Power easy access system

The driver's seat and steering wheel move in accordance with engine switch mode and the driver's seat belt condition. (→P. 157)

#### ■ Active head restraints

Even small forces applied to the seatback may cause the head restraint to move. Pushing up a locked head restraint forcibly may appear the head restraint inner structure. These do not indicate problems.

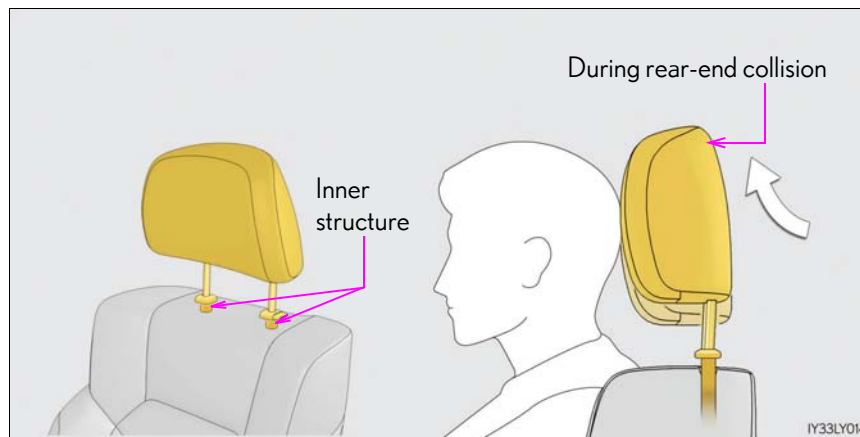

#### ⚠ WARNING

##### ■ When adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism.

##### ■ Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.


Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

## Rear seats

### Adjustment procedure


► Second seats

- ① Seatback angle adjustment lever
- ② Seat position adjustment switch

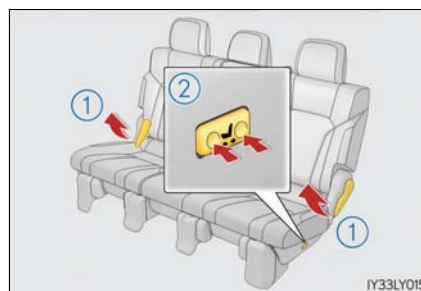

► Third seats (if equipped)

- ① Seatback angle adjustment lever

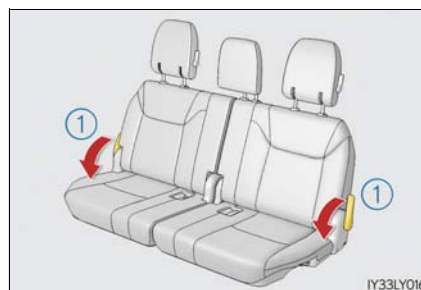


### Tumbling the second seats and third seat entry

For easy access to the third seat (if equipped), perform **1** in "Tumbling the second seats" (→P. 150).

#### ■ Before tumbling the second seats


- 1** Stow the seat belt buckles and lower the head restraints to the lowest position.

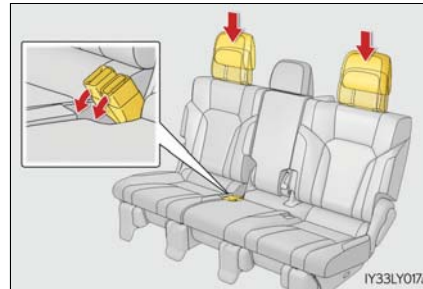

- 2** Pass the outer seat belts through the seat belt hangers and secure the seat belt plates.


This prevents the shoulder belt from being damaged.

Make sure that the seat belts are removed from the hangers before using them.

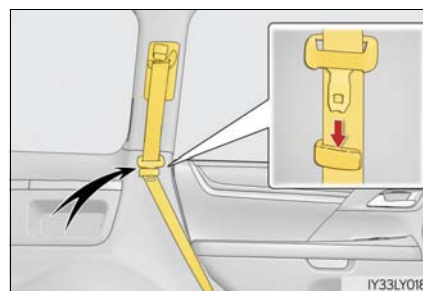


- 3** Vehicles with rear seat entertainment system: Install the display cover for the rear seat entertainment system.

Pass the cover belt under the display and slide the cover up.

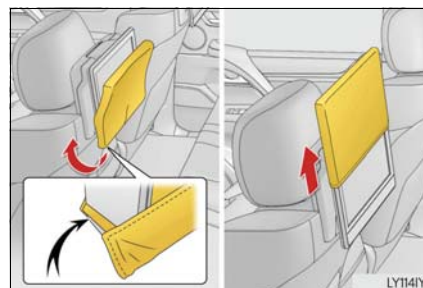

Slide the cover down from the top of the display to cover it.

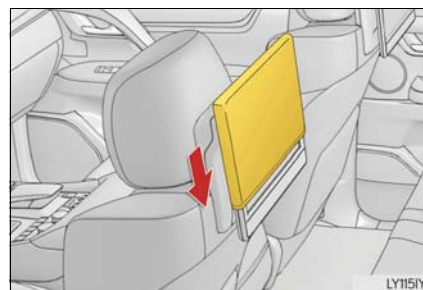


3

Operation of each component


**■ Tumbling the second seats**

- 1** Fold down the seatback while pulling the seatback angle adjustment lever, and swing the whole seat up and forward.

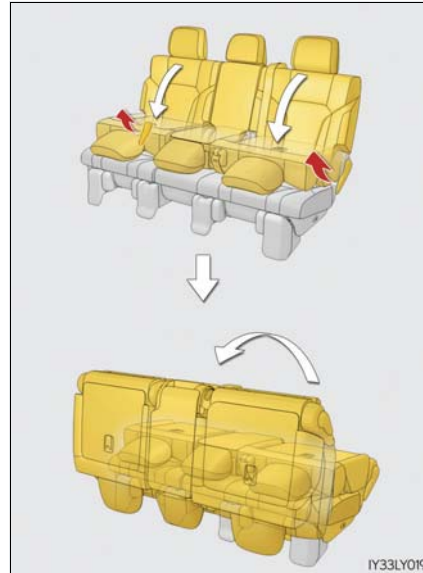


- 2** Hook the holding strap to the assist grip and secure the seat by pulling its free end.

When returning the second seat to its original position, stow the holding strap.

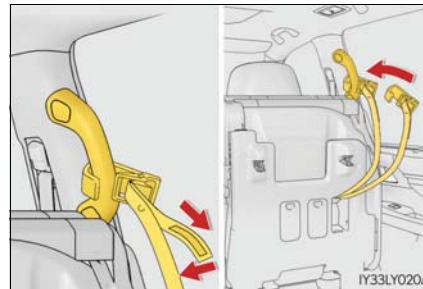

- 3** Remove the seat hook covers from the back of the seat cushion, and install them on the seat hooks.


When returning the second seat to its original position, remove the seat hook covers from the floor and install them in the back of the seat cushion.

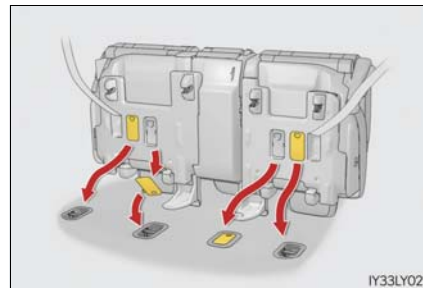

### Folding the third seats (if equipped)

#### ■ Before folding the third seats

- 1 Stow the seat belts buckles.

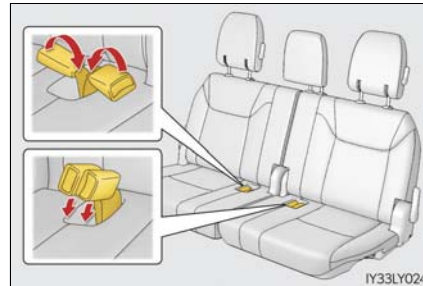


- 2 Stow the center head restraint in the seatback. (→P. 163)

- 3 Pass the outer seat belts through the seat belt hangers and secure the seat belt plates.

This prevents the shoulder belt from being damaged.


Make sure that the seat belts are removed from the hangers before using them.

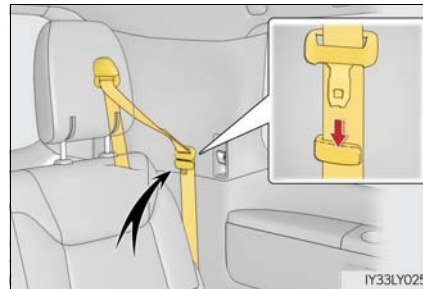

- 4 Stow the center seat belt tabs in the cover set in the roof. (→P. 32)

#### ■ Folding down the third seatback

- ① For right side
- ② For left side

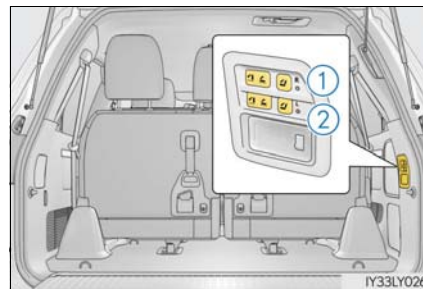


3

Operation of each component

## 152 3-3. Adjusting the seats

The seat will automatically fold when the switch is pressed.

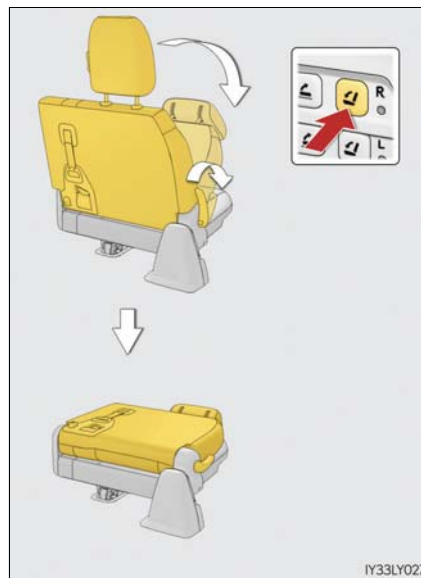


### ■ Folding up the third seats


1 Perform following steps in “Before folding the third seats”. (→P. 151)

2 If the switch is pressed and held, the seat will automatically fold and lift sideward. (The buzzer sounds twice when the seat is about to lift.)

If the switch is released while the seat is lifting sideward, operation will stop and a buzzer will sound continuously. Before operating, make sure that the handle on the rear of the seatback is secure.

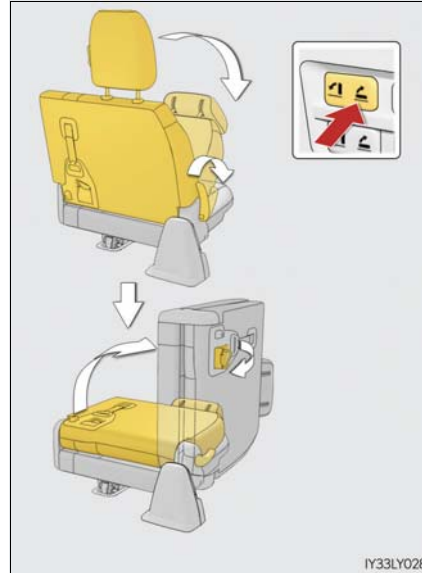


3 Remove the seat hook covers from the underside of the seat cushion, and install them on the seat hooks.

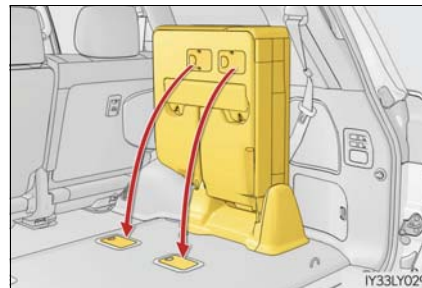


### ■ Returning the third seats

1 Remove the seat hook covers from the floor and install them into the underside of the seat cushion.

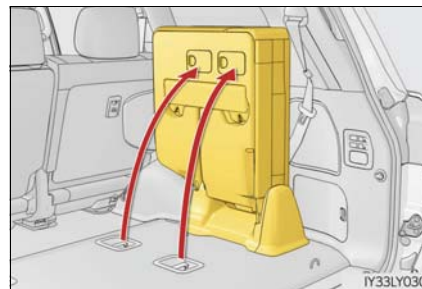


- 2** If the switch is held down the seat will automatically return to the folding position. (Buzzer sounds twice)

If the switch is released while returning to the folding position, operation will stop and a buzzer will sound continuously.

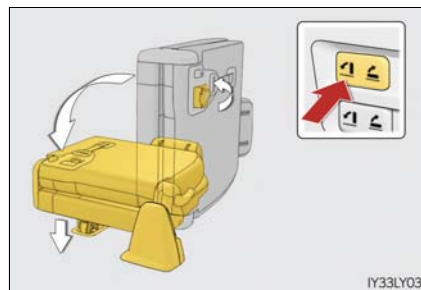


- 3** Pull the handle and raise the seat-backs.

Fix the handle securely in its original position after use.

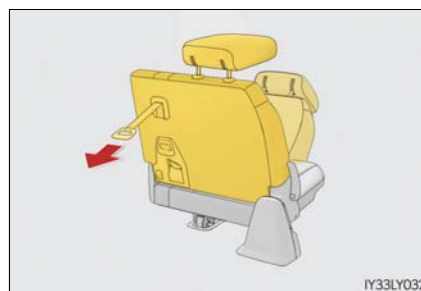

- 4** Raise the head restraints.

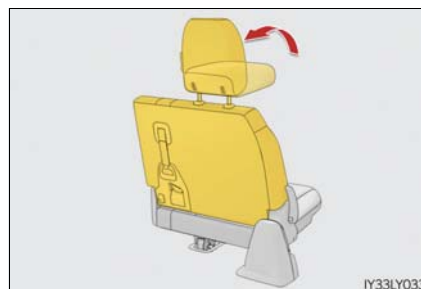

### ■ Alarms and indicators (vehicles with third seat)

The following table describes circumstances and correction procedures when only alarms are sound.

| Indicator light and buzzer                                  | Situation                                                                                                                                                   | Correction procedure                                                                                                                                                                                                                               |
|-------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Buzzer sounds for 10 seconds Indicator light on*            | Shift lever is not in the P position with the engine switch in IGNITION ON mode.<br>Stop the switch operation during the automatic third seat is in motion. | Move the shift lever in the P position with the engine switch in IGNITION ON mode.<br>Return the third seat from a halfway position to tumbling position or the original position with the third seat return switch or third seat tumbling switch. |
| Indicator light flashes*                                    | The seat movement is stopped in a half way when the back door is opened.                                                                                    |                                                                                                                                                                                                                                                    |
| Buzzer sounds for 10 seconds* Indicator light flashes*      | Automatic tumbling or return operation is stopped because of a system problem.                                                                              | Have the system checked by your Lexus dealer.                                                                                                                                                                                                      |
|                                                             | The seat is not moved to the table mode from the original position after 10 seconds the tumbling switch is pressed.                                         | Check something is caught between the seat cushion and seatback. If nothing is caught, have the system checked by your Lexus dealer.                                                                                                               |
| Buzzer sounds for 10 seconds Indicator light blinks slowly* | Automatic closing operation is stopped because of a system problem.                                                                                         | Have the system checked by your Lexus dealer.                                                                                                                                                                                                      |
| Indicator light flashes                                     | Any of the tumbling or return switch is pushed when shift lever is not in the P position with the engine switch in IGNITION ON mode.                        | Move the shift lever in the P position with the engine switch in IGNITION ON mode.                                                                                                                                                                 |
| Indicator light flashes 3 times                             | Table mode switch is pushed when shift lever is not in the P position with the engine switch in IGNITION ON mode.                                           |                                                                                                                                                                                                                                                    |

\*: A warning will be shown on the multi-information display in the instrument cluster.

**WARNING****■ Seat adjustment**

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

**■ When the seatback is folded**

- Do not sit on or place anything on the seatback while driving.
- Be sure to install the seat hook covers on the seat hooks, or you may get burned when they become hot.

**■ When returning the seatbacks to their original position**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Be careful not to get your hands or feet pinched in the seat.
- Make sure the seats are securely locked. Failure to do so will prevent the seat belt from operating properly.
- Check that the seat belts are not twisted or caught under the seat.
- Arrange the seat belts in the proper positions for ready use.

**■ Avoiding damage to seat components**

Do not hang or attach anything on the seatback striker.

**NOTICE****■ Before tumbling, folding up the seats**

The seat belts and buckles must be stowed.

**■ After returning the third seat (if equipped)**

Make sure that the handle on the rear of the seatback has been secured.

## Driving position memory


This feature automatically adjusts the driver's seats, steering wheel and outside rear view mirrors to make entering and exiting the vehicle easier or to suit your preferences.

### Power easy access system

The seat and steering wheel are automatically adjusted to allow the driver to enter and exit the vehicle easily.

When all of the following have been performed, the driver's seat and steering wheel are automatically adjusted to a position that allows driver to enter and exit the vehicle easily.

- The shift lever has been shifted to P.
- The engine switch has been turned off.
- The driver's seat belt has been unfastened.

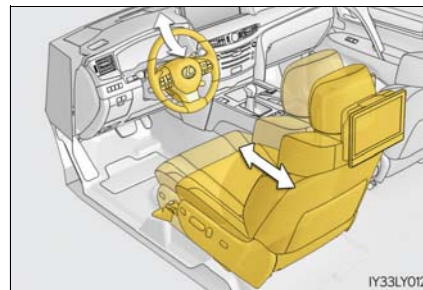

When any of the following has been performed, the driver's seat and steering wheel automatically return to their original positions.

- The engine switch has been turned to ACCESSORY mode or IGNITION ON mode.
- The driver's seat belt has been fastened.

#### ■ Operation of the power easy access system

When exiting the vehicle, the power easy access system may not operate if the seat is already close to the rearmost position, etc.

#### ■ Customization

The seat movement amount settings of the power easy access system can be customized. (Customizable features: →P. 584)

3

Operation of each component

### Driving position memory

Your preferred driving position (the position of the driver's seat, steering wheel, outside rear view mirrors and HUD [head-up display] [if equipped]) can be entered into the computer's memory and recalled with the touch of a button. It is also possible to set this function to activate automatically when the doors are unlocked.

Three different driving positions can be recorded into memory.

#### ■ Recording procedure


- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Adjust the driver's seat, steering wheel, outside rear view mirrors and HUD (head-up display) (if equipped) to the desired positions.
- 4 While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.



#### ■ Recall procedure

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Press one of the buttons for the driving position you want to recall until the buzzer sounds.

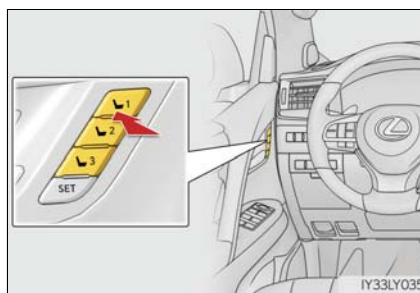

#### ■ To stop the position recall operation part-way through

Perform any of the following:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Operate any of the seat adjustment switches (only cancels seat position recall).
- Operate the tilt and telescopic steering control switch (only cancels steering wheel position recall).

#### ■ Operating the driving position memory after turning the engine switch off

Recorded seat positions can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again.

#### ■ If the battery is disconnected

The memorized positions must be reset because the computer's memory is erased when the battery is disconnected.

### Memory recall function (driver's side only)

Each electronic key can be registered to recall your preferred driving position.

#### ■ Registering procedure


Record your driving position to button "1", "2" or "3" before performing the following:

Carry only the key you want to register, and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be recorded properly.

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Recall the driving position that you want to record.
- 4 While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

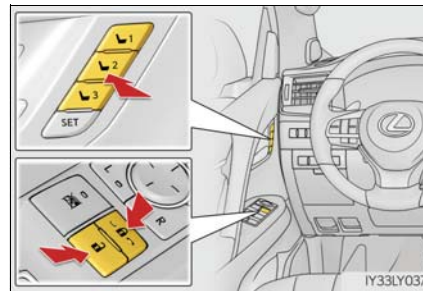

**■ Recall procedure**

- 1** Make sure that the doors are locked before recalling the driving position. Carry the electronic key that has been registered to the driving position, and then unlock and open the driver's door using the smart access system with push-button start or wireless remote control.

The driving position will move to the recorded position (not including the steering wheel and HUD [head-up display] [if equipped]). However, the seat will move to a position slightly behind the recorded position in order to make entering the vehicle easier.

If the driving position is in a position that has already been recorded, the seat and outside rear view mirrors will not move.

- 2** Turn the engine switch to ACCESSORY mode or IGNITION ON mode, or fasten a seat belt.

The seat, steering wheel and HUD (head-up display) (if equipped) will move to the recorded position.

**■ Cancellation procedure**

Carry only the key you want to cancel and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1** Turn the engine switch to IGNITION ON mode.
- 2** While pressing the "SET" button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds twice.

If the button could not be canceled, the buzzer sounds continuously for approximately 3 seconds.

**■ Recalling the driving position using the memory recall function**

- Different driving positions can be registered for each electronic key. Therefore, the driving position that is recalled may be different depending on the key being carried.
- If a door other than the driver's door is unlocked with the smart access system with push-button start, the driving position cannot be recalled. In this case, press the driving position button which has been set.

**■ Customization**

The unlock door settings of the memory recall function can be customized.  
(Customizable features: →P. 584)

**WARNING****■ Seat adjustment caution**

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.


## Head restraints

Head restraints are provided for all seats.


### Front seats

Vertical adjustment

- ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pushing the lock release button.

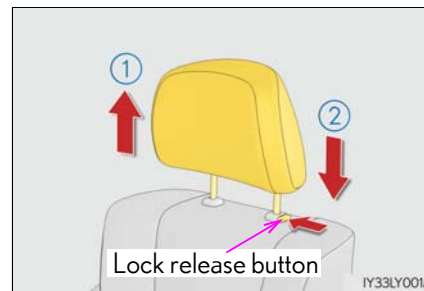


Angle adjustment (if equipped)

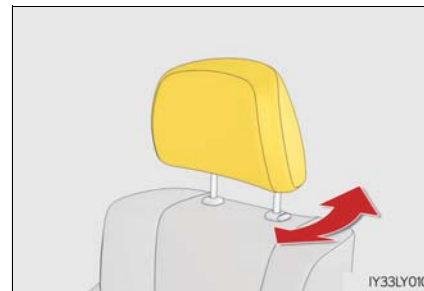

### Second seats

- ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pushing the lock release button.

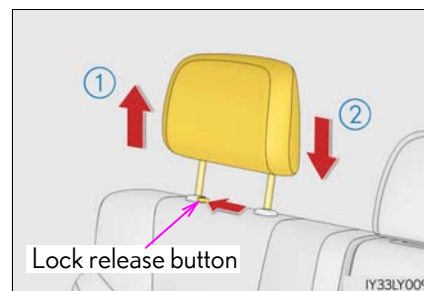

3  
Operation of each component


### Third outboard seats (if equipped)

To fold the head restraints, pull the head restraint angle lever



### ■ Adjusting the height of the head restraints


Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

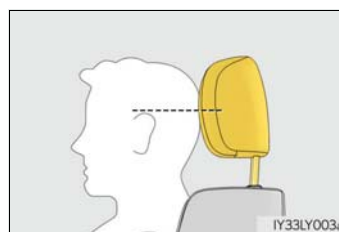

### ■ Removing the head restraints

#### ► Front seats


- 1 Push a flathead screwdriver into the slot. The slot is located on the right side of the right head restraint anchor.

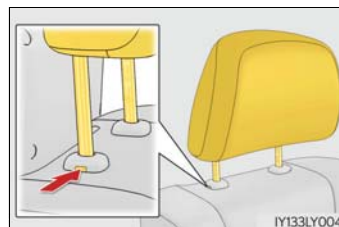

- 2 While pressing in the flathead screwdriver, pull up the head restraint.


#### ► Second seats

Pull the head restraint up while pressing the lock release button.

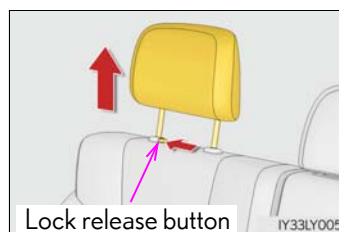

► Third center seat (if equipped)

Pull the head restraint up while pressing the lock release button.

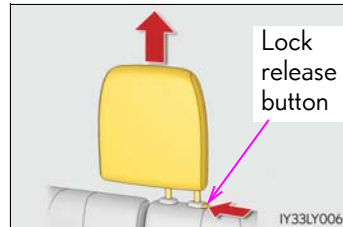

► Third outboard seats (if equipped)

The head restraint cannot be removed.

■ Installing the head restraints (except for the third outboard seats)

1 Align the head restraint with the installation holes.

2 Push down the head restraint to the lock position.

Press and hold the lock release button when lowering the head restraint.

■ When not using the third center seat head restraint (if equipped)

Open the zipper on the back of the third seat and stow the head restraint inside.



3

Operation of each component

**⚠ WARNING**

■ Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.


- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

## Steering wheel

### Adjustment procedure


Operating the switch moves the steering wheel in the following directions:

- ① Up
- ② Down
- ③ Toward the driver
- ④ Away from the driver

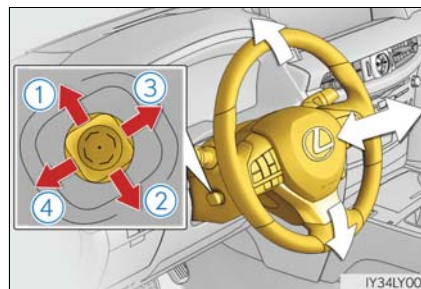

### Horn

To sound the horn, press on or close to the  mark.

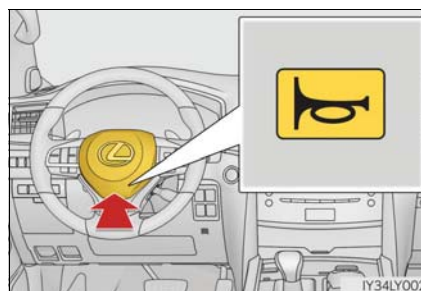

**■ The steering wheel can be adjusted when**

The engine switch is in ACCESSORY or IGNITION ON mode\*.

\*: If the driver's seat belt is fastened, the steering wheel can be adjusted regardless of engine switch mode.

**■ Automatic adjustment of the steering position**

A desired steering position can be entered to memory and recalled automatically by the driving position memory system. (→P. 157)

**■ Power easy access system**

The steering wheel and driver's seat move in accordance with engine switch mode and the driver's seat belt condition. (→P. 157)

**⚠ WARNING**

Do not adjust the steering wheel while driving.  
Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

3

Operation of each component


## Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

### Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

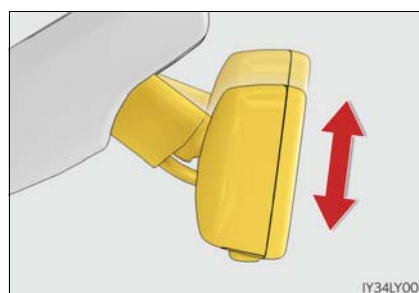


### Anti-glare function

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode


ON/OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates. The function will set to ON mode each time the engine switch is turned to IGNITION ON mode. Pressing the button turns the function to OFF mode. (The indicator also turns off.)

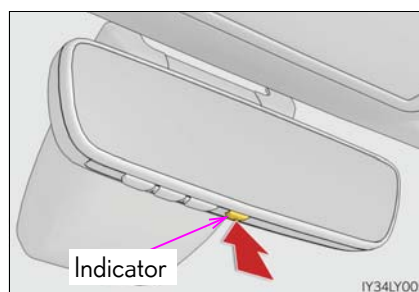

### ■ To prevent sensor error

To ensure that the sensors operate properly, do not touch or cover them.

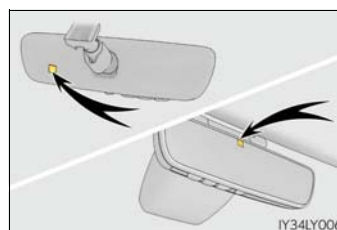

 **WARNING**

Do not adjust the position of the mirror while driving.  
Doing so may lead to mishandling of the vehicle and an accident, resulting in death or serious injury.


## Outside rear view mirrors

### Adjustment procedure

- 1** To select a mirror to adjust, press the switch.


- ① Left
- ② Right

Pressing the same switch again will put the switch in neutral.

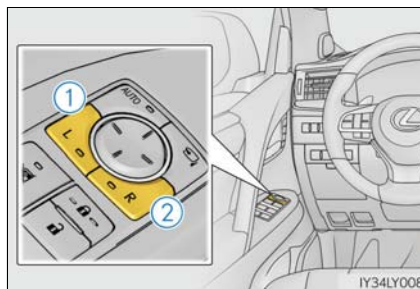

- 2** To adjust the mirror, press the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

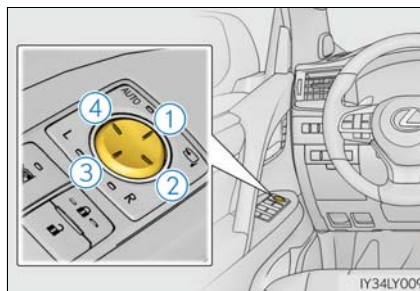


### Automatically folding and extending the mirrors

#### ■ Using the switch

Press the switch to fold the mirrors.

Press it again to extend them to the original position.

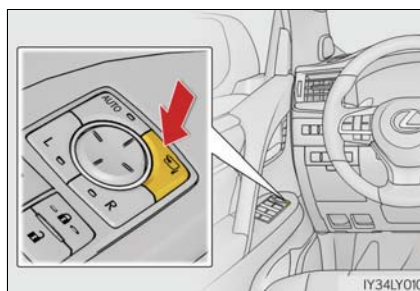


### ■ Setting automatic mode

Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

Press the "AUTO" switch to set automatic mode.

The indicator will come on.

Pressing the switch once more will return to manual mode.

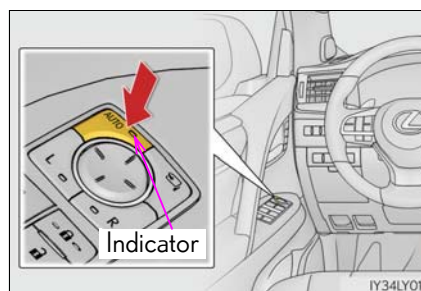

### Linked mirror function when reversing

When either "L" or "R" of the mirror select switch is selected, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground.

To disable this function, select neither "L" nor "R".

### ■ Adjusting the mirror angle when the vehicle is reversing

With the shift lever in R, adjust the mirror angle at a desired position. The adjusted angle will be memorized and the mirror will automatically tilt to the memorized angle whenever the shift lever is shifted to R from next time.

The memorized downward tilt position of the mirror is linked to the normal position (angle adjusted with the shift lever in other than R). Therefore, if the normal position is changed after adjustment, the tilt position will also change.

When the normal position is changed, readjust the angle in reversing.

### ■ Mirror angle can be adjusted when

The engine switch is in ACCESSORY or IGNITION ON mode.

### ■ When the mirrors are fogged up

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 411)

### ■ Automatic adjustment of the mirror angle

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P. 157)

### ■ Auto anti-glare function

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P. 166)

**■ Using automatic mode in cold weather**

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this event, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

**WARNING****■ Important points while driving**

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

**■ When a mirror is moving**

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

**■ When the mirror defoggers are operating**

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

**NOTICE****■ If ice should jam the mirror**

Do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

## Power windows


### Opening and closing procedures

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

- ① Closing
- ② One-touch closing\*
- ③ Opening
- ④ One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

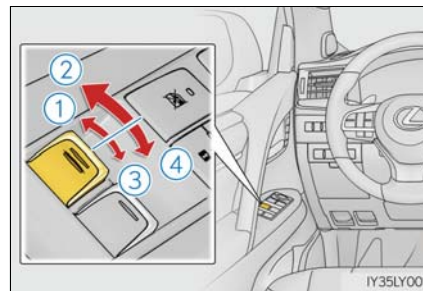


### Window lock switch

Press the switch to lock the passenger window switches.

The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

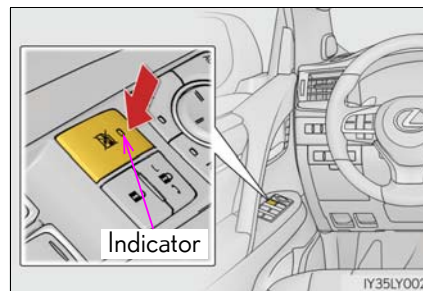

#### ■ The power windows can be operated when

The engine switch is in IGNITION ON mode.

#### ■ Operating the power windows after turning the engine off

The power windows can be operated for approximately 45 seconds even after the engine switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

#### ■ Jam protection function

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is opened slightly.

#### ■ Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

**■ When the window cannot be opened or closed**

When the jam protection function or catch protection function operates unusually and the door window cannot be opened or closed, perform the following operations with the power window switch of that door.

- Stop the vehicle. With the engine switch in IGNITION ON mode, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the door window can be opened and closed.
- If the door window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.
  - 1 Turn the engine switch to IGNITION ON mode.
  - 2 Pull and hold the power window switch in the one-touch closing direction and completely close the door window.
  - 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
  - 4 Press and hold the power window switch in the one-touch opening direction. After the door window is completely opened, continue holding the switch for an additional 1 second or more.
  - 5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.
  - 6 Pull and hold the power window switch in the one-touch closing direction again. After the door window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.

If the window reverses and cannot be fully closed or opened, have the vehicle inspected by your Lexus dealer.

**■ When the battery is disconnected**

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the battery.

**■ Door lock linked window operation**

- The power windows can be opened and closed using the mechanical key.\* (→P. 549)
- The power windows can be opened using the wireless remote control.\* (→P. 121)

\*: These settings must be customized at your Lexus dealer.

**■ Power windows open warning buzzer**

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the power windows open.

**■ Customization**

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features: →P. 584)

**WARNING**

Observe the following precautions.  
Failing to do so may result in death or serious injury.

**■ Closing the windows**

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P. 171)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window. Also, do not let a child operate window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.
- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

**■ Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of your body jammed in the window.

**■ Catch protection function**

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window.

## Moon roof

Use the overhead switches to open and close the moon roof and tilt it up and down.


### Opening and closing

- ① Opens the moon roof\*

The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open the moon roof.

- ② Closes the moon roof\*

\*: Lightly press either way of the moon roof switch to stop the moon roof part-way.

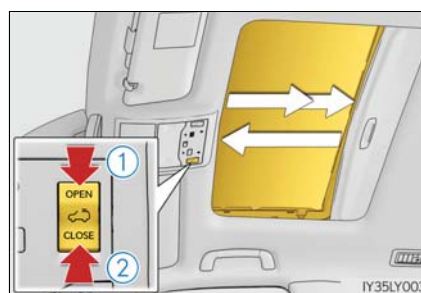


### Tilting up and down

- ① Tilts the moon roof up\*

- ② Tilts the moon roof down\*

\*: Lightly press either way of the moon roof switch to stop the moon roof part-way.

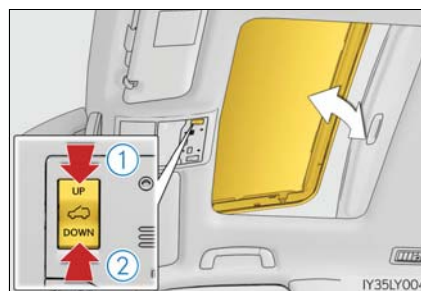

**■ The moon roof can be operated when**

The engine switch is in IGNITION ON mode.

**■ Operating the moon roof after turning the engine off**

The moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.

**■ Jam protection function**

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

**■ Sunshade**

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

**■ Door lock linked moon roof operation**

● The moon roof can be opened and closed using the mechanical key\*. (→P. 549)

● The moon roof can be opened using the wireless remote control\*. (→P. 121)

\*: These settings must be customized at your Lexus dealer.

**■ If the moon roof cannot be closed automatically**

Keep the switch depressed.

**■ When the moon roof does not close normally**

Perform the following procedure:

● If the moon roof closes but then re-opens slightly

**1** Stop the vehicle.

**2** Press and hold the "CLOSE" switch.\*1

The moon roof will close, re-open and pause for approximately 10 seconds.\*2 Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

**3** Check to make sure that the moon roof is completely closed and then release the switch.

- If the moon roof tilts down but then tilts back up

- 1 Stop the vehicle.
- 2 Press and hold the "UP" switch <sup>\*1</sup> until the moon roof moves into the tilt up position and stops.
- 3 Release the "UP" switch once and then press and hold the "UP" switch again. <sup>\*1</sup>  
The moon roof will pause for approximately 10 seconds in the tilt up position. <sup>\*2</sup>  
Then it will adjust slightly and pause for approximately 1 second.  
Finally, it will tilt down, open and close.
- 4 Check to make sure that the moon roof is completely closed and then release the switch.

<sup>\*1</sup>: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

<sup>\*2</sup>: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the "CLOSE" or "UP" switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

#### ■ Moon roof open warning buzzer

The buzzer sounds and message is shown on the multi-information display in the instrument panel when the engine switch is turned off and the driver's door is opened with the moon roof open.

#### ■ Customization

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features: →P. 584)

**WARNING**

Observe the following precautions.  
Failing to do so may cause death or serious injury.

**■ Opening the moon roof**

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

**■ Closing the moon roof**

- The driver is responsible for moon roof opening and closing operations.  
In order to prevent accidental operation, especially by a child, do not let a child operate the moon roof. It is possible for children and other passengers to have body parts caught in the moon roof.
- Check to make sure that all passengers do not have any part of their bodies in a position where it could be caught when the moon roof is being operated.
- When using the wireless remote control or mechanical key and operating the moon roof, operate the moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the moon roof. Also, do not let a child operate moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the moon roof.
- When exiting the vehicle, turn the engine switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

**■ Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.



|                                                          |     |
|----------------------------------------------------------|-----|
| <b>4-1. Before driving</b>                               |     |
| Driving the vehicle.....                                 | 180 |
| Cargo and luggage.....                                   | 188 |
| Vehicle load limits.....                                 | 192 |
| Trailer towing.....                                      | 193 |
| Dinghy towing .....                                      | 210 |
| <b>4-2. Driving procedures</b>                           |     |
| Engine (ignition) switch .....                           | 211 |
| Automatic transmission.....                              | 216 |
| Turn signal lever.....                                   | 223 |
| Parking brake .....                                      | 224 |
| <b>4-3. Operating the lights and wipers</b>              |     |
| Headlight switch.....                                    | 227 |
| Automatic High Beam .....                                | 230 |
| Fog light switch .....                                   | 235 |
| Windshield wipers and washer.....                        | 237 |
| Rear window wiper and washer.....                        | 241 |
| Headlight cleaner switch .....                           | 244 |
| <b>4-4. Refueling</b>                                    |     |
| Opening the fuel tank cap.....                           | 245 |
| <b>4-5. Using the driving support systems</b>            |     |
| Lexus Safety System + .....                              | 248 |
| PCS (Pre-Collision System).....                          | 255 |
| LDA (Lane Departure Alert).....                          | 267 |
| Dynamic radar cruise control with full-speed range ..... | 275 |
| Cruise control .....                                     | 287 |
| Driving mode select switch .....                         | 290 |
| Intuitive parking assist.....                            | 293 |
| 4-Wheel AHC (Active Height Control Suspension).....      | 301 |
| Four-wheel drive system .....                            | 309 |
| Crawl Control (with Turn Assist function).....           | 313 |
| Multi-terrain Select.....                                | 318 |
| Multi-terrain Monitor .....                              | 322 |
| BSM (Blind Spot Monitor) .....                           | 369 |
| • BSM function.....                                      | 373 |
| • RCTA function.....                                     | 377 |
| Driving assist systems .....                             | 383 |
| <b>4-6. Driving tips</b>                                 |     |
| Winter driving tips.....                                 | 388 |
| Off-road precautions.....                                | 392 |

## Driving the vehicle

The following procedures should be observed to ensure safe driving:

### Starting the engine

→P. 211

### Driving

- 1 With the brake pedal depressed, shift the shift lever to D. (→P. 216)
- 2 Release the parking brake. (→P. 225)  
If the parking brake is in automatic mode, the parking brake is released automatically when shifting the shift lever to any position other than P. (→P. 224)
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

### Stopping

- 1 With the shift lever in D, depress the brake pedal.
- 2 If necessary, set the parking brake.  
If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 216)

### Parking the vehicle

- 1 With the shift lever in D, depress the brake pedal.
- 2 Set the parking brake (→P. 225), and shift the shift lever to P (→P. 216).
- 3 Press the engine switch to stop the engine.
- 4 Lock the door, making sure that you have the key on your person.  
If parking on a hill, block the wheels as needed.

### Starting off on a steep uphill

- 1 With the brake pedal depressed, shift the shift lever to D. (→P. 216)
- 2 Pull the parking brake switch and parking brake is set manually. (→P. 225)
- 3 Release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.
- 4 Press the parking brake switch and parking brake is released manually. (→P. 225)

#### ■ When starting off on a uphill

The hill-start assist control is available. (→P. 383)

#### ■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

#### ■ Engine speed while driving

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed

#### ■ Restraining engine output (Brake Override System)

- When the accelerator and brake pedals are depressed at the same time, the engine output may be restrained.
- A warning message is displayed on the multi-information display while the system is operating. If a warning message is shown on the multi-information display, read the message and follow the instructions.

#### ■ Breaking in your new Lexus

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 200 miles (300 km):  
Avoid sudden stops.
- For the first 500 miles (800 km):  
Do not tow a trailer.
- For the first 600 miles (1000 km):
  - Do not drive at extremely high speeds.
  - Avoid sudden acceleration.
  - Do not drive continuously in the low gears.
  - Do not drive at a constant speed for extended periods.

**■ Drum-in-disc type parking brake system**

Your vehicle has a drum-in-disc type parking brake system.

This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced.

Have your Lexus dealer, perform the bedding-down operation.

**■ Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 564)

**■ When turning off the engine**

Emission system operating sounds may continue for a short time after the engine is turned off. This is not a malfunction, and helps to ensure optimal performance of the emission system.

**WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

■ **When starting the vehicle**

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

■ **When driving the vehicle**

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
  - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
  - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
  - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
  - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so. However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 513
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill. Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 216)
- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving. Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.
- Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 85 mph (140 km/h) unless your vehicle has high-speed capability tires. Driving over 85 mph (140 km/h) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.
- When crossing rivers, turn off height control after putting the vehicle height in high mode, and drive at 18 mph (30 km/h) or less. Otherwise the vehicle height may change due to the automatic leveling function, resulting in an accident. (→P. 301)

**WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ When driving on slippery road surfaces**

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

**■ When shifting the shift lever**

- Do not let the vehicle roll backwards while the shift lever is in a driving position, or roll forward while the shift lever is in R.  
Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Moving the shift lever to N while the vehicle is moving will disengage the engine from the transmission. Engine braking is not available when N is selected.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident.

**■ If you hear a squealing or scraping noise (brake pad wear limit indicators)**

Have the brake pads checked and replaced by your Lexus dealer as soon as possible.  
Rotor damage may result if the pads are not replaced when needed.  
It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

**⚠ WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ When the vehicle is stopped**

- Do not race the engine.  
If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine. Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

**■ When the vehicle is parked**

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.  
Doing so may result in the following:
  - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
  - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
  - Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle.  
Do not leave the vehicle unattended while the engine is running.  
If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.

**WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ When the vehicle is parked**

- If the shift lever is moved before the low speed four-wheel drive indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.)

Therefore, the vehicle is free to roll even if the automatic transmission is in P.

You or someone else could be seriously injured. You must complete the shifting of the transfer mode. (→P. 309)

- Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off.  
Doing so may cause burns.

**■ When taking a nap in the vehicle**

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

**■ When braking**

- When the brakes are wet, drive more cautiously.  
Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.
- If the brake booster device does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking. In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- Do not pump the brake pedal if the engine stalls.  
Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- The brake system consists of 2 individual hydraulic systems: If one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase.  
Have your brakes fixed immediately.

**■ If the vehicle becomes stuck**

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

**NOTICE**

■ **When driving the vehicle**

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the engine output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

■ **When parking the vehicle**

Always set the parking brake, and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

■ **Avoiding damage to vehicle parts**

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.  
Doing so may damage the power steering pump.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

■ **If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire. (→P. 535)

■ **When encountering flooded roads**

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Lexus dealer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, transmission, transfer, differentials, etc.
- Lubricant condition for the propeller shaft, bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

## Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

### Capacity and distribution

Cargo capacity depends on the total weight of the occupants.


$(\text{Cargo capacity}) = (\text{Total load capacity}) - (\text{Total weight of occupants})$

#### Steps for Determining Correct Load Limit —

- (1) Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle’s placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity.  
For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs.  $(1400 - 750 (5 \times 150) = 650 \text{ lbs.})$
- (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- (6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle. (→P. 192)

### Calculation formula for your vehicle

- ① Cargo capacity
- ② Total load capacity (vehicle capacity weight) (→P. 562)

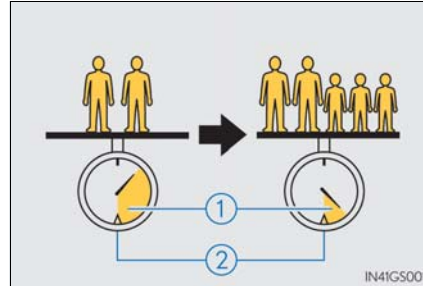

When 2 people with the combined weight of A lb. (kg) are riding in your vehicle, which has a total load capacity (vehicle capacity weight) of B lb. (kg), the available amount of cargo and luggage load capacity will be C lb. (kg) as follows:

$$B^{*2} \text{ lb. (kg)} - A^{*1} \text{ lb. (kg)} = C^{*3} \text{ lb. (kg)}$$

\*1: A = Weight of people

\*2: B = Total load capacity

\*3: C = Available cargo and luggage load

In this condition, if 3 more passengers with the combined weight of D lb. (kg) get on, the available cargo and luggage load will be reduced E lb. (kg) as follows:

$$C \text{ lb. (kg)} - D^{*4} \text{ lb. (kg)} = E^{*5} \text{ lb. (kg)}$$

\*4: D = Additional weight of people

\*5: E = Available cargo and luggage load

As shown in the example above, if the number of occupants increases, the cargo and luggage load will be reduced by an amount that equals the increased weight due to the additional occupants. In other words, if an increase in the number of occupants causes an excess of the total load capacity (combined weight of occupants plus cargo and luggage load), you must reduce the cargo and luggage on your vehicle.

**WARNING****■ Things that must not be carried in the luggage compartment**

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

**■ Storage precautions**

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack cargo and luggage in the luggage compartment higher than the seat-backs.
- Do not place cargo or luggage in or on the following locations.
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the luggage cover (if equipped)
  - On the instrument panel
  - On the dashboard
  - On the auxiliary box or tray that has no lid
- Secure all items in the occupant compartment.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

**■ Capacity and distribution**

- Do not exceed the maximum axle weight rating or the total vehicle weight rating.
- Even if the total load of occupant's weight and the cargo load is less than the total load capacity, do not apply the load unevenly. Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

 **WARNING****■ Roof luggage carrier precautions (if equipped)**

To use the roof rails as a roof luggage carrier, you must fit the roof rails with two or more genuine Lexus cross rails or their equivalent.

When you load cargo on the roof luggage carrier, observe the following:

- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle overall length or width. (→P. 562)
- Before driving, make sure the cargo is securely fastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for a long distance, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.
- Do not exceed 154 lb. (70 kg) cargo weight on the roof luggage carrier.

**■ Cross rail adjustment (if equipped)**

Make sure the cross rails are locked securely by pushing forward and rearward them. Failure to do so may cause an accident or serious injury in the event of emergency braking or a collision.

 **NOTICE****■ Cross rail adjustment (if equipped)**

Do not remove the cross rail stoppers, or the moon roof may be damaged when it is tilted.

**■ When loading the luggage**

Be careful not to scratch the surface of the moon roof.

## Vehicle load limits

Vehicle load limits include total load capacity, seating capacity, TWR (Trailer Weight Rating) and cargo capacity.

### ◆ Total load capacity (vehicle capacity weight): →P. 562

Total load capacity means the combined weight of occupants, cargo and luggage.

### ◆ Seating capacity:

Vehicles with third seats: 8 occupants (Front 2, Rear 6)

Vehicles without third seats: 5 occupants (Front 2, Rear 3)

Seating capacity means the maximum number of occupants whose estimated average weight is 150 lb. (68 kg) per person.

### ◆ TWR (Trailer Weight Rating): →P. 197, 562

TWR means the maximum gross trailer weight (trailer weight plus its cargo weight) that your vehicle is able to tow.

### ◆ Cargo capacity

Cargo capacity may increase or decrease depending on the weight and the number of occupants.

### ■ Total load capacity and seating capacity

These details are also described on the tire and loading information label. (→P. 497)

### ⚠ WARNING

#### ■ Overloading the vehicle

Do not overload the vehicle.

It may not only cause damage to the tires, but also degrade steering and braking ability, resulting in an accident.

## Trailer towing

Your vehicle is designed primarily as a passenger-and-load-carrying vehicle. Towing a trailer can have an adverse impact on handling, performance, braking, durability, and fuel consumption. For your safety and the safety of others, you must not overload your vehicle or trailer. You must also ensure that you are using appropriate towing equipment, that the towing equipment has been installed correctly and used properly, and that you employ the requisite driving habits.

Vehicle-trailer stability and braking performance are affected by trailer stability, brake performance and setting, trailer brakes, the hitch and hitch systems (if equipped).


To tow a trailer safely, use extreme care and drive the vehicle in accordance with your trailer's characteristics and operating conditions.

Lexus warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.


Contact your Lexus dealer for further information about additional requirements such as towing kits, etc.

**Towing related terms****■ GCWR (Gross Combination Weight Rating)**

The maximum allowable gross combination weight. The gross combination weight is the sum of the total vehicle weight (including the occupants, cargo and any optional equipment installed on the vehicle) and the weight of the trailer being towed (including the cargo in the trailer).

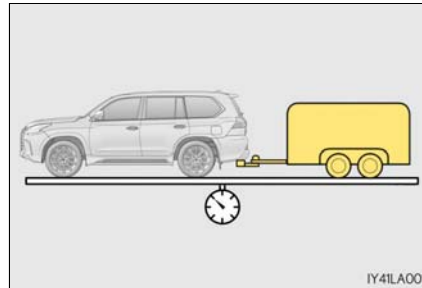
**■ GVWR (Gross Vehicle Weight Rating)**

The maximum allowable gross vehicle weight. The gross vehicle weight is the total weight of the vehicle. When towing a trailer, it is the sum of the vehicle weight (including the occupants, cargo and any optional equipment installed on the vehicle) and the tongue weight.

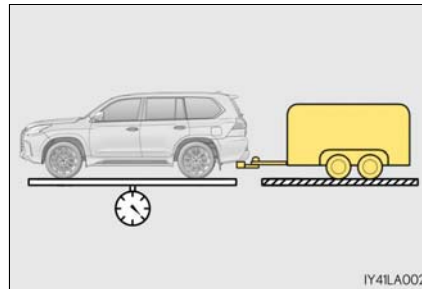

### ■ GAWR (Gross Axle Weight Rating)

The maximum allowable gross axle weight. The gross axle weight is the load placed on each axle (front and rear).

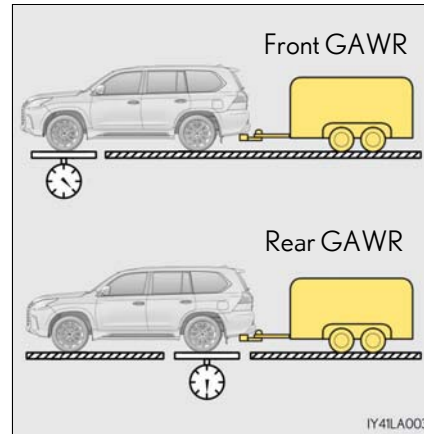


### ■ TWR (Trailer Weight Rating)

The maximum allowable gross trailer weight. The gross trailer weight is the sum of the trailer weight and the weight of the cargo in the trailer.

TWR is calculated assuming base vehicle with one driver, one front passenger, towing package (if available), hitch and hitch systems (if required).


Additional optional equipment, passengers and cargo in the vehicle will reduce the trailer weight rating so as not to exceed GCWR, GVWR and GAWR.

If the gross trailer weight exceeds 3000 lb. (1360 kg), it is recommended to use a trailer with 2 or more axles.

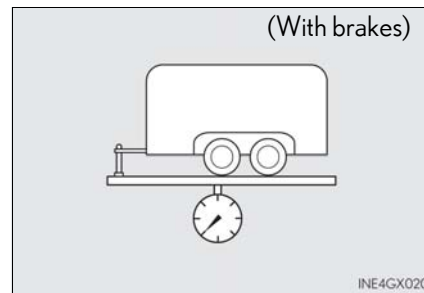


**■ Unbraked TWR (Unbraked Trailer Weight Rating)**

The trailer weight rating for towing a trailer without a trailer service brake system.

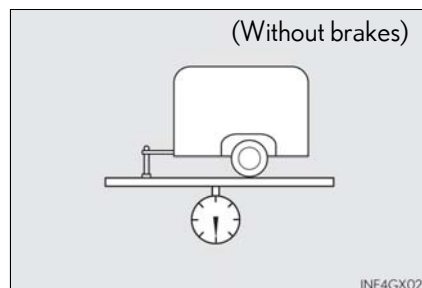
**■ Tongue Weight**

The load placed on the trailer hitch ball. (→P. 198)

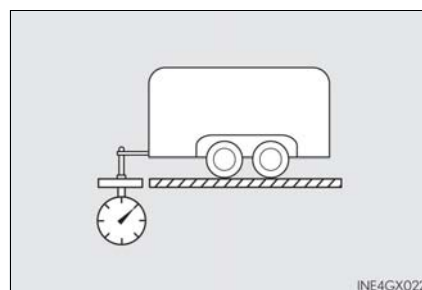

### Weight limits

- The gross trailer weight must never exceed 7000 lb. (3175 kg).
- The gross combination weight must never exceed 13400 lb. (6078 kg).
- The gross vehicle weight must never exceed the GVWR indicated on the Certification Label.
- The gross axle weight on each axle must never exceed the GAWR indicated on the Certification Label.

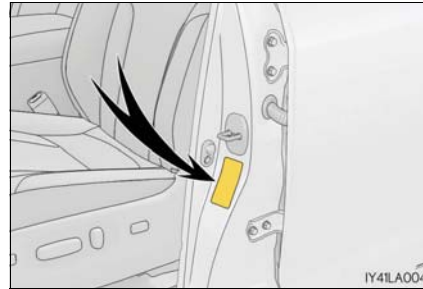

- If the gross trailer weight is over the unbraked TWR, trailer service brakes are required.
- If the gross trailer weight is over 2000 lb. (907 kg), a sway control device with sufficient capacity is required.
- If the gross trailer weight is over 5000 lb. (2268 kg), a weight distributing hitch with sufficient capacity is required.

### GCWR, TWR and Unbraked TWR

Confirm that the gross trailer weight, gross combination weight, gross vehicle weight, gross axle weight and tongue weight are all within the limits.

- **GCWR\***  
13400 lb. (6078 kg)
- **TWR\***  
7000 lb. (3175 kg)
- **Unbraked TWR\***  
1000 lb. (454 kg)

\*: This model meets the tow-vehicle trailering requirement of SAE International per SAE J2807.


### Trailer Tongue Weight

- A recommended tongue weight varies in accordance with the types of trailers or towing as described below.
- To ensure the recommended values shown below, the trailer must be loaded by referring to the following instructions.

- Tongue Weight

The gross trailer weight should be distributed so that the tongue weight is 9 % to 11 %. (Tongue weight/Gross trailer weight  $\times$  100 = 9 % to 11 %)

- ① Gross trailer weight
- ② Tongue weight

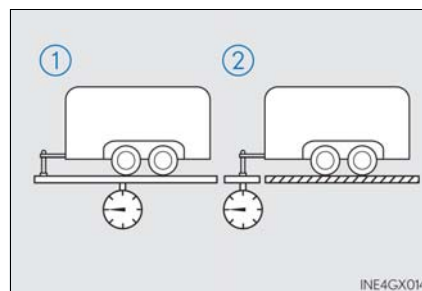

If using a weight distributing hitch when towing, return the front axle to the same weight as before the trailer connection.

If front axle weight cannot be measured directly, measure the front fender height above the front axle before connection. Adjust weight distributing hitch torque until front fender is returned to the same height as before connection.

The gross trailer weight, gross axle weight and tongue weight can be measured with platform scales found at a highway weighing station, building supply company, trucking company, junk yard, etc.


## Hitch

Trailer hitch assemblies have different weight capacities. Lexus recommends the use of Lexus hitch/bracket for your vehicle. For details, contact your Lexus dealer.

- If you wish to install a trailer hitch, contact your Lexus dealer.
- Use only a hitch that conforms to the gross trailer weight requirement of your vehicle.
- Follow the directions supplied by the hitch manufacturer.
- Lubricate the hitch ball with a light coating of grease.
- Remove the trailer hitch whenever you are not towing a trailer. After removing the hitch, seal any mounting hole in the vehicle body to prevent entry of any substances into the vehicle.


## Removing hitch cover

- 1 Remove the clip.

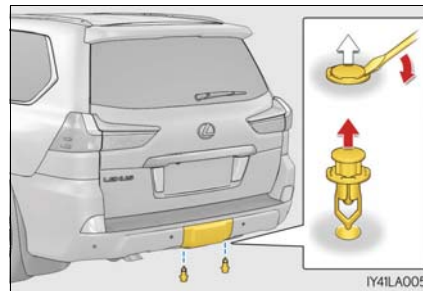

- 2 Grasp the lower edge of the hitch cover and raise the cover.

When reattaching the cover, reverse the steps listed.

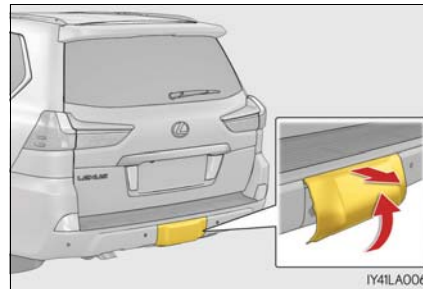


### Selecting trailer ball

Use the correct trailer ball for your application.

- ① Trailer ball load rating  
Matches or exceeds the gross trailer weight rating of the trailer.
- ② Ball diameter  
Matches the size of the trailer coupler. Most couplers are stamped with the required trailer ball size.


| Trailer class | Typical trailer ball size |
|---------------|---------------------------|
| IV            | 2 5/16 in.                |
| II and III    | 2 in.                     |
| I             | 1 7/8 in.                 |

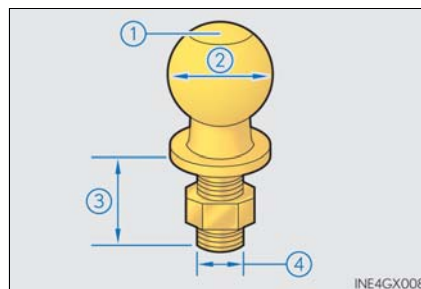

- ③ Shank length  
Protrudes beyond the bottom of the lock washer and nut by at least 2 threads.
- ④ Shank diameter  
Matches the ball mount hole diameter size.


### Positions for towing hitch receiver

- ① Hitch receiver pin hole position:  
45.3 in. (1151 mm)

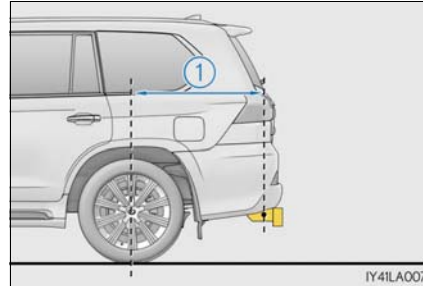

### Connecting trailer lights

Use the wire harness stored in the rear end under the vehicle body.

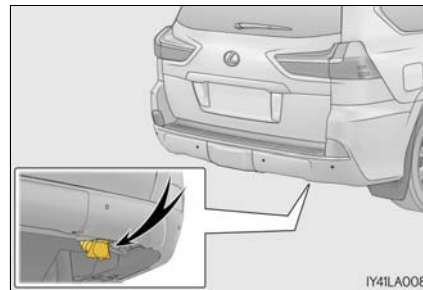

Please consult your dealer when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.

### ■ Service connector for towing brake controller

Your vehicle is equipped with a service connector for the trailer brake controller. Please consult your dealer when installing trailer brake systems to the vehicle.

### Connecting and disconnecting a trailer

Stop your vehicle and a trailer in line and perform the following:

- Connecting a trailer

- 1 Put the 4-Wheel AHC in the "LO" (low) mode.
- 2 Turn off the engine switch or the 4-Wheel AHC.
- 3 Connect a trailer.
- 4 Turn on the engine switch or the 4-Wheel AHC.
- 5 Select the N (normal) mode with the height select switch.

When a vehicle loaded with four occupants tows a trailer of about 4000 lb. (1800 kg) with more than about 400 lb. (180 kg) tongue load, the normal mode may not be selected. However, there is no problem to continue normal driving. Drive with sufficient care because of large load.

- Disconnecting a trailer

- 1 Put the 4-Wheel AHC in the "LO" (low) mode. (Make sure the vehicle height is in the "LO" mode by pulling the switch to "v" on the height select switch.)
- 2 Turn off the engine switch or the 4-Wheel AHC.
- 3 Set the supporting leg of a trailer on the ground and raise the hitch by 4 in. (100 mm).
- 4 Turn on the engine switch or the 4-Wheel AHC.
- 5 Wait for about 20 seconds until the rear vehicle height is lowered by the automatic leveling function.
- 6 Make sure the hitch is disconnected. If not, raise the hitch higher and repeat steps 2 through 5.
- 7 Move the vehicle forward in the "LO" mode where the hitch does not touch anything in the N (normal) mode.
- 8 Put the 4-Wheel AHC in the N mode.

**Trailer towing tips**

Your vehicle will handle differently when towing a trailer. Help to avoid an accident, death or serious injury, keep the following in mind when towing:


- Speed limits for towing a trailer vary by state or province. Do not exceed the posted towing speed limit.
- Lexus recommends that the vehicle-trailer speed limit is 65 mph (104 km/h) on a flat, straight, dry road. Do not exceed this limit, the posted towing speed limit or the speed limit for your trailer as set forth in your trailer owner's manual, whichever is lowest. Instability of the towing vehicle-trailer combination (trailer sway) increases as speed increases. Exceeding speed limits may cause loss of control.
- Before starting out, check the trailer lights, tires and the vehicle-trailer connections. Recheck after driving a short distance.
- Practice turning, stopping and reversing with the trailer attached in an area away from traffic until you become accustomed to the feel of the vehicle-trailer combination.
- Reversing with a trailer attached is difficult and requires practice. Grip the bottom of the steering wheel and move your hand to the left to move the trailer to the left. Move your hand to the right to move the trailer to the right. (This is generally opposite to reversing without a trailer attached.) Avoid sharp or prolonged turning. Have someone guide you when reversing to reduce the risk of an accident.
- As stopping distance is increased when towing a trailer, vehicle-to-vehicle distance should be increased. For each 10 mph (16 km/h) of speed, allow at least one vehicle and trailer length.
- Avoid sudden braking as you may skid, resulting in the trailer jackknifing and loss of vehicle control. This is especially true on wet or slippery surfaces.

- Avoid jerky starts or sudden acceleration.
- Avoid jerky steering and sharp turns, and slow down before making a turn.
- Note that when making a turn, the trailer wheels will be closer than the vehicle wheels to the inside of the turn. Compensate by making a wider than normal turning radius.
- Slow down before making a turn, in crosswinds, on wet or slippery surfaces, etc.  
Increasing vehicle speed can destabilize the trailer.
- Take care when passing other vehicles. Passing requires considerable distance. After passing a vehicle, do not forget the length of your trailer, and be sure you have plenty of room before changing lanes.
- To maintain engine braking efficiency and charging system performance when using engine braking, do not put the transmission in D.  
If in the S mode, the transmission shift range position must be in 6 or lower.  
(→P. 216)
- Instability happens more frequently when descending steep or long downhill grades. Before descending, slow down and downshift. Do not make sudden downshifts while descending steep or long downhill grades.
- Avoid holding the brake pedal down too long or applying the brakes too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.
- Due to the added load of the trailer, your vehicle's engine may overheat on hot days (at temperatures over 85°F [30°C]) when driving up a long or steep grade. If the engine coolant temperature gauge indicates overheating, immediately turn off the air conditioning (if in use), pull your vehicle off the road and stop in a safe spot. (→P. 555)


- Always place wheel blocks under both the vehicle's and the trailer's wheels when parking. Apply the parking brake firmly, and put the transmission in P. Avoid parking on a slope, but if unavoidable, do so only after performing the following:
  - 1 Apply the brakes and keep them applied.
  - 2 Have someone place wheel blocks under both the vehicle's and trailer's wheels.
  - 3 When the wheel blocks are in place, release the brakes slowly until the blocks absorb the load.
  - 4 Shift into P and apply the parking brake.
  - 5 Turn off the engine.
- When restarting after parking on a slope:
  - 1 With the transmission in P, start the engine. Be sure to keep the brake pedal pressed.
  - 2 Shift into a forward gear. If reversing, shift into R.
  - 3 If the parking brake is in manual mode, release the parking brake. (→P. 225)
  - 4 Release the brake pedal, and slowly pull or back away from the wheel blocks. Stop and apply the brakes.
  - 5 Have someone retrieve the blocks.

### ■ Matching trailer ball height to trailer coupler height

No matter which class of tow hitch applies, for a more safe trailer hookup, the trailer ball setup must be the proper height for the coupler on the trailer.

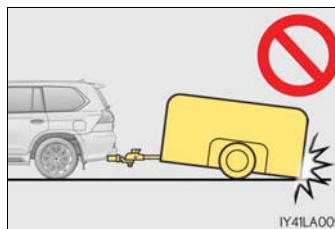

- ① Coupler
- ② Trailer ball

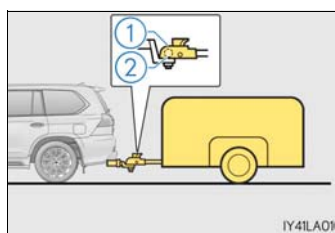

### ■ Before towing

Check that the following conditions are met:

- Ensure that your vehicle's tires are properly inflated. (→P. 569)
- Trailer tires are inflated according to the trailer manufacturer's recommendation.
- All trailer lights work as required by law.
- All lights work each time you connect them.
- The trailer ball is set at the proper height for the coupler on the trailer.
- The trailer is level when it is hitched.  
Do not drive if the trailer is not level, and check for improper tongue weight, overloading, worn suspension, or other possible causes.
- The trailer cargo is securely loaded.
- The rear view mirrors conform to all applicable federal, state/provincial or local regulations. If they do not, install rear view mirrors appropriate for towing purposes.

**■ Driving mode select switch**

The suspension can be switched for improvement in driveability. (→P. 290)

**■ Break-in schedule**

If your vehicle is new or equipped with any new power train components (such as an engine, transmission, differential or wheel bearing), Lexus recommends that you do not tow a trailer until the vehicle has been driven for over 500 miles (800 km).

After the vehicle has been driven for over 500 miles (800 km), you can start towing. However, for the next 500 miles (800 km), drive the vehicle at a speed of less than 50 mph (80 km/h) when towing a trailer, and avoid full throttle acceleration.

**■ Maintenance**

- If you tow a trailer, your vehicle will require more frequent maintenance due to the additional load. (See "Owner's Guide", "Warranty and Services Guide", "Owner's Manual Supplement" or "Warranty Booklet".)
- Retighten the fixing bolts of the towing ball and bracket after approximately 600 miles (1000 km) of trailer towing.

**■ If trailer sway occurs**

One or more factors (crosswinds, passing vehicles, rough roads, etc.) can adversely affect handling of your vehicle and trailer, causing instability.

- If trailer swaying occurs:
  - Firmly grip the steering wheel. Steer straight ahead.  
Do not try to control trailer swaying by turning the steering wheel.
  - Begin releasing the accelerator pedal immediately but very gradually to reduce speed.  
Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize.

- After the trailer swaying has stopped:
  - Stop in a safe place. Get all occupants out of the vehicle.
  - Check the tires of the vehicle and the trailer.
  - Check the load in the trailer.  
Make sure the load has not shifted.  
Make sure the tongue weight is appropriate, if possible.
  - Check the load in the vehicle.  
Make sure the vehicle is not overloaded after occupants get in.

If you cannot find any problems, the speed at which trailer swaying occurred is beyond the limit of your particular vehicle-trailer combination.

Drive at a lower speed to prevent instability. Remember that swaying of the towing vehicle-trailer increases as speed increases.

**WARNING****■ Trailer towing precautions**

- To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions. Failure to do so could cause an accident resulting in death or serious injury. Vehicle stability and braking performance are affected by trailer stability, brake setting and performance, and the hitch. Your vehicle will handle differently when towing a trailer.
- Set the vehicle height to the "LO" mode and turn off the 4-Wheel AHC when you connect a trailer, otherwise the vehicle height may change due to the automatic leveling function, and you may catch part of your body in the vehicle, resulting in an accident. (→P. 301)

**■ To avoid accident or injury**

- Do not exceed the TWR, unbraked TWR, GCWR, GVWR or GAWR.
- If the gross trailer weight is over 2000 lb. (907 kg), a sway control device with sufficient capacity is required.
- If the gross trailer weight is over 5000 lb. (2268 kg), a weight distributing hitch with sufficient capacity is required.
- Adjust the tongue weight within the appropriate range. Place heavier loads as close to the trailer axle as possible.
- Do not exceed 65 mph (104 km/h), the posted towing speed limit or the speed limit for your trailer as set forth in your trailer owner's manual, whichever is lowest. Slow down sufficiently before making a turn, in crosswinds, on wet or slippery surface, etc. to help avoid an accident. If you experience a vehicle-trailer instability from reducing a certain speed, slow down and make sure you keep your vehicle speed under the speed of which you experience the instability.
- Do not make jerky, abrupt or sharp turns.
- Do not apply the brakes suddenly as you may skid, resulting in jackknifing and loss of vehicle control. This is especially true on wet or slippery surfaces.
- Do not exceed the trailer hitch assembly weight, gross vehicle weight, gross axle weight and trailer tongue weight capacities.
- Do not use cruise control (if equipped) or dynamic radar cruise control with full-speed range (if equipped) when trailer towing.
- Slow down and downshift before descending steep or long downhill grades. Do not make sudden downshifts while descending steep or long downhill grades.
- Vehicle-trailer instability is more likely on steep long down hills. Before descending steep or long downhill grades, slow down and downshift. Do not make sudden downshifts when descending steep or long downhill grades. Avoid holding the brake pedal down too long or applying the brakes too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.

**⚠ WARNING****■ Hitch**

Trailer hitch assemblies have different weight capacities established by the hitch manufacturer. Even though the vehicle may be physically capable of towing a higher weight, the operator must determine the maximum weight rating of the particular hitch assembly and never exceed the maximum weight rating specified for the trailer-hitch. Exceeding the maximum weight rating set by the trailer-hitch manufacturer can cause an accident resulting in death or serious personal injuries.

**■ When towing a trailer**

Lexus recommends trailers with brakes that conform to any applicable federal and state/provincial regulations.

- If the gross trailer weight exceeds unbraked TWR, trailer brakes are required. Lexus recommends trailers with brakes that conform to all applicable federal and state/provincial regulations.
- Never tap into your vehicle's hydraulic system, as this will lower the vehicle's braking effectiveness.
- Never tow a trailer without using a safety chain securely attached to both the trailer and the vehicle. If damage occurs to the coupling unit or hitch ball, there is danger of the trailer wandering into another lane.

**⚠ NOTICE****■ When installing a trailer hitch**


Use only the position recommended by your Lexus dealer. Do not install the trailer hitch on the bumper; this may cause body damage.

**■ Do not directly splice trailer lights**

Do not directly splice trailer lights. Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

## Dinghy towing

Your vehicle is not designed to be dinghy towed (with 4 wheels on the ground) behind a motor home.

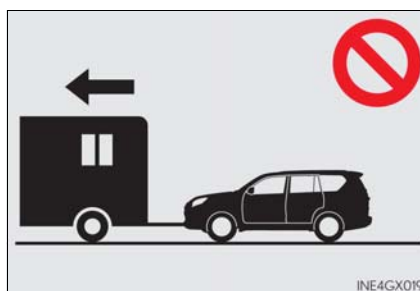

### NOTICE

- **To avoid serious damage to your vehicle**  
Do not tow your vehicle with four wheels on the ground.

## Engine (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

### Starting the engine

- 1 Pull the parking brake switch to check that the parking brake is set. (→P. 224)  
Parking brake indicator will come on.
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the engine cannot be started.

- 4 Press the engine switch shortly and firmly.


When operating the engine switch, one short, firm press is enough.

It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any engine switch mode.

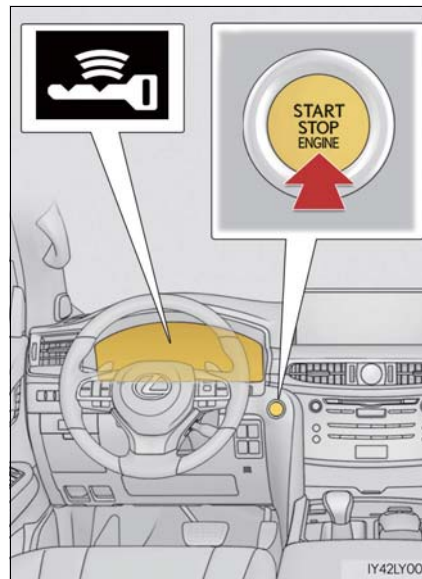

4

Driving


### Stopping the engine

- 1 Stop the vehicle.
- 2 Set the parking brake (→P. 225), and shift the shift lever to P.
- 3 Press the engine switch.
- 4 Release the brake pedal and check that the display on the instrument cluster is off.

### Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

- ① Off\*  
The emergency flashers can be used.
  - ② ACCESSORY mode  
Some electrical components such as the audio system can be used.  
"ACCESSORY" will be displayed on the multi-information display.
  - ③ IGNITION ON mode  
All electrical components can be used.  
"IGNITION ON" will be displayed on the multi-information display.
- \*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

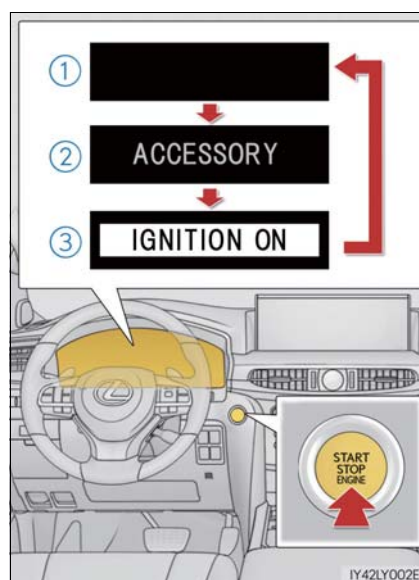

### When stopping the engine with the shift lever in a position other than P

If the engine is stopped with the shift lever in a position other than P, the engine switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

- 1 Check that the parking brake is set.
- 2 Shift the shift lever to P.
- 3 Check that "Turn Off Vehicle" is displayed on the multi-information display and then press the engine switch once.
- 4 Check that "Turn Off Vehicle" on the multi-information display is off.

#### ■ Auto power off function

If the vehicle is left in ACCESSORY mode for more than 20 minutes or IGNITION ON mode (the engine is not running) for more than an hour with the shift lever in P, the engine switch will automatically turn off. However, this function cannot entirely prevent battery discharge. Do not leave the vehicle with the engine switch in ACCESSORY or IGNITION ON mode for long periods of time when the engine is not running.

#### ■ Operation of the engine switch

- If the switch is not pressed shortly and firmly, the engine switch mode may not change or the engine may not start.
- If attempting to restart the engine immediately after turning the engine switch off, the engine may not start in some cases. After turning the engine off, please wait a few seconds before restarting the engine.

#### ■ Electronic key battery depletion

→P. 118

#### ■ Conditions affecting operation

→P. 140

#### ■ Note for the entry function

→P. 141

#### ■ If the engine does not start

- The engine immobilizer system may not have been deactivated. (→P. 80)  
Contact your Lexus dealer.
- Check that the shift lever is securely set in P. The engine may not start if the shift lever is displaced out of P.  
A message will be displayed on the multi-information display.


#### ■ Steering lock

After turning the engine switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.

### ■ When the steering lock cannot be released

A message will be displayed on the multi-information display.

Check that the shift lever is set in P. Press the engine switch while turning the steering wheel left and right.

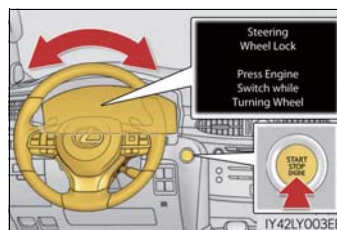

### ■ Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from running the engine. After about 10 seconds, the steering lock motor will resume functioning.

### ■ When “Smart Access System Malfunction See Owner’s Manual” is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer, immediately.

### ■ If the electronic key battery is depleted

→P. 505

### ■ If the smart access system with push-button start has been deactivated in a customized setting

→P. 549



## WARNING

### ■ When starting the engine

Always start the engine while sitting in the driver’s seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

### ■ Caution while driving

If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

### ■ Stopping the engine in an emergency

- If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 513)

However, do not touch the engine switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

- If the engine switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.
- When restarting the engine after it was turned off while driving, shift the shift lever to N and press the engine switch.



## NOTICE

■ **To prevent battery discharge**

- Do not leave the engine switch in ACCESSORY or IGNITION ON mode for long periods of time without the engine running.
- If "ACCESSORY" or "IGNITION ON" is displayed on the multi-information display, the engine switch is not off. When exiting the vehicle, always check that the engine switch is off.
- Do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the engine switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, battery discharge may occur.

■ **When starting the engine**


- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by your Lexus dealer immediately.

■ **Symptoms indicating a malfunction with the engine switch**

If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Lexus dealer immediately.

## Automatic transmission

### Shifting the shift lever

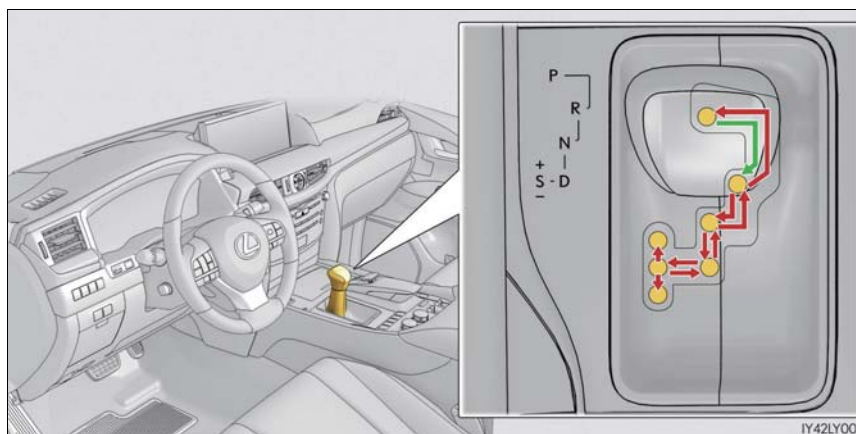

← While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

### Shift position purpose

| Shift position | Purpose and condition                                                                 |
|----------------|---------------------------------------------------------------------------------------|
| P              | Parking the vehicle/starting the engine                                               |
| R              | Reversing                                                                             |
| N              | Neutral<br>(Condition in which the power is not transmitted)                          |
| D              | Normal driving <sup>*1</sup> or temporary shift range selection driving <sup>*2</sup> |
| S              | S mode driving <sup>*3</sup> (→P. 219)                                                |

<sup>\*1</sup>: Shifting to the D position allows the system to select a gear suitable for the driving conditions. Setting the shift lever to the D position is recommended for normal driving.

<sup>\*2</sup>: If equipped, by selecting shift ranges using paddle shift switches, you can control engine braking forces.


<sup>\*3</sup>: Selecting shift ranges using S mode restricts the upper limit of the possible gear ranges, controls engine braking forces, and prevents unnecessary upshifting.

### Selecting the second start mode

Use second start mode for accelerating and driving on slippery road surfaces such as snow.

Press the button to use second start mode.

Press the button again to cancel second start mode.

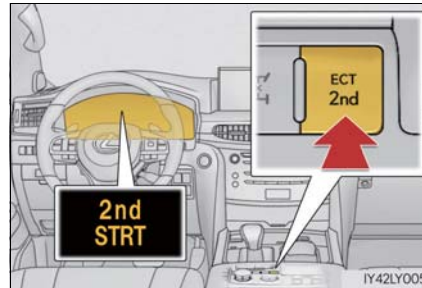

### Changing shift range in D position (vehicles with paddle shift switches)

To drive using temporary shift range selection, operate the “-” or “+” paddle shift switch.

When the “-” paddle shift switch is operated, the shift range will be downshifted to a range that enables engine braking force that is suitable to driving conditions.

When the “+” paddle shift switch is operated, the shift range will be one gear upper than the gear in use during normal D position driving.


Changing the shift range allows restriction of the highest shift range, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

① Downshifting

② Upshifting

The selected shift range, from D1 to D8, will be displayed in the meter.

To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.

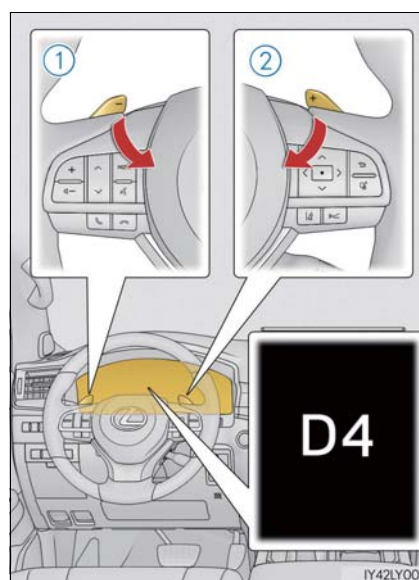

| Meter display | Function                                                                                                                      |
|---------------|-------------------------------------------------------------------------------------------------------------------------------|
| D2-D8         | A gear in the range between 1 and the selected gear is automatically chosen depending on vehicle speed and driving conditions |
| D1            | Setting the gear at 1                                                                                                         |

A lower shift range will provide greater engine braking forces than a higher shift range.


### Changing shift ranges in S mode

When the shift lever is in the S position, the shift lever or paddle shift switches can be operated as follows:

- ① Upshifting
- ② Downshifting

The selected shift range, from 1 to 8, will be displayed in the meter.

The initial shift range in S mode is set automatically to 6, 5 or 4 according to vehicle speed. However, the initial shift range may be set to 3 or 2 if AI-SHIFT has operated while the shift lever was in the D position. (→P. 220)

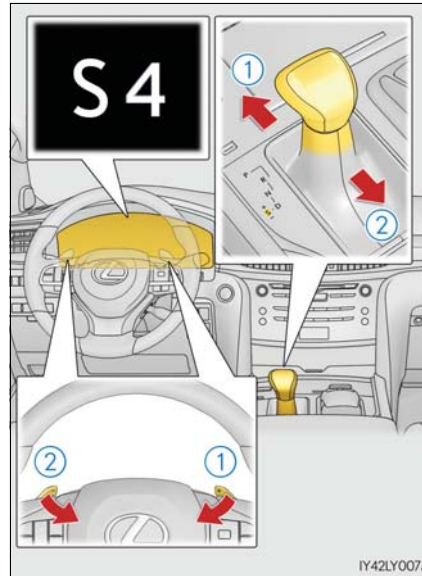

4

Driving

#### ■ Shift ranges and their functions

- Automatically selecting gears between 1 and 8 according to vehicle speed and driving conditions. But, the gear is limited according to selected shift range.
- You can choose from 8 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine speed will also increase.

#### ■ Paddle shift switches (if equipped)

- When the “-” paddle shift switch is operated in the D position, a shift range will be automatically selected. The highest gear of the first shift range will be one gear lower than the gear in use during normal D position driving.
- Automatic deactivation of shift range selection in the D position  
Shift range selection in the D position will be deactivated in the following situations:
  - When the vehicle comes to a stop
  - If the accelerator pedal is depressed for longer than a certain period of time in one shift range

#### ■ Driving on a downhill

On declines, there may be case where the vehicle shifts down automatically to obtain engine braking. As a result of the downshifting, the engine speed may increase.

#### ■ Second start mode automatic deactivation

Second start mode is automatically deactivated if the engine is turned off after driving in second start mode.

#### ■ S mode

When the shift range is 7 or lower, holding the shift lever toward “+” sets the shift range to 8.

#### ■ AI-SHIFT

AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

AI-SHIFT automatically operates when the shift lever is in the D position. (Shifting the shift lever to the S position cancels the function.)

#### ■ When driving with cruise control or dynamic radar cruise control with full-speed range activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control or dynamic radar cruise control with full-speed range will not be canceled.

- While driving in D position (vehicles with paddle shift switches) or S mode, downshifting to 7, 6, 5 or 4. (→P. 275, 287)
- When switching the driving mode to sport mode while driving in D position. (→P. 290)

#### ■ Shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the engine switch is in IGNITION ON mode and the brake pedal is being depressed.

**■ If the shift lever cannot be shifted from P**

First, check whether the brake pedal is being depressed.


If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by your Lexus dealer, immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.


Releasing the shift lock:

- 1** Set the parking brake.
- 2** Turn the engine switch off.
- 3** Depress the brake pedal.
- 4** Pry the cover up with a flathead screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.

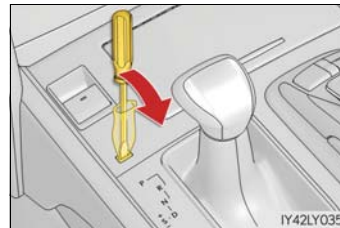

- 5** Press the shift lock override button.  
The shift lever can be shifted while the button is pressed.

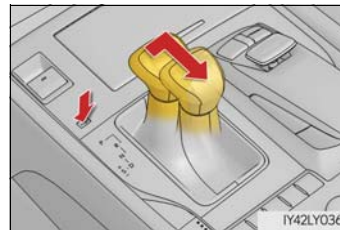**■ If the "S" indicator does not come on even after shifting the shift lever to S**

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by your Lexus dealer immediately.

(In this situation, the transmission will operate in the same manner as when the shift lever is in D.)

**■ Downshift restriction warning buzzer**

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

**WARNING****■ When driving on slippery road surfaces**

Do not accelerate or shift gears suddenly.

Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

**■ To prevent an accident when releasing the shift lock**

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal.


If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

## Turn signal lever

### Operating instructions

The turn signal lever can be used to show the following intentions of the driver:

- ① Right turn
- ② Lane change to the right (move the lever partway and then release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and then release it)  
The left hand signals will flash 3 times.
- ④ Left turn

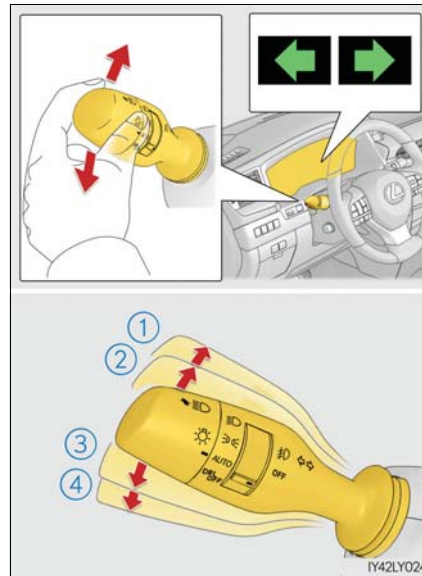

4

Driving

#### ■ Turn signals can be operated when

The engine switch is in IGNITION ON mode.

#### ■ If the indicator flashes faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

#### ■ If the turn signals stop flashing before a lane change has been performed

Operate the lever again.

#### ■ To discontinue flashing of the turn signals during a lane change

Operate the lever in the opposite direction

#### ■ Customization

The number of times the turn signals flash during a lane change can be changed.  
(Customizable features → P. 584)

## Parking brake

A selections can be made as desired from the following modes.

### Automatic mode

The parking brake is set or released automatically according to shift lever operation.


Even when in automatic mode, the parking brake can be set and released manually. (→P. 225)

#### ■ Turns automatic mode on

While the vehicle is stopped, pull and hold the parking brake switch until a message is shown on the multi-information display


- When the shift lever is moved out of P, the parking brake will be released, and the parking brake indicator light turn off.
- When the shift lever is moved into P, the parking brake will be set, and the parking brake indicator light turn on.

Operate the shift lever with the brake pedal depressed.

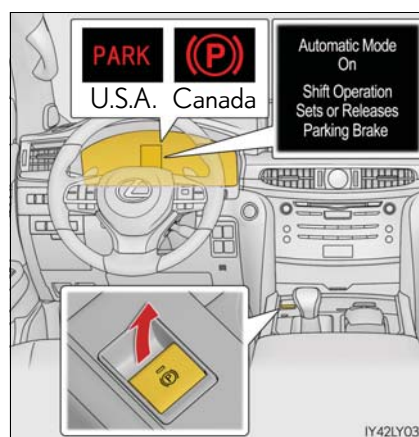

#### ■ Turns automatic mode off

While the vehicle is stopped, press and hold the parking brake switch until a message is shown on the multi-information display

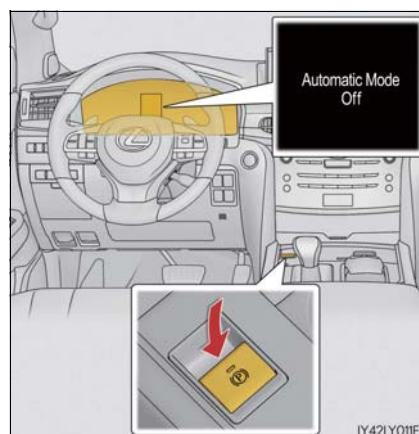

### Manual mode


#### ① Sets the parking brake

The parking brake indicator light will come on. (→P. 225)

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

#### ② Releases the parking brake

Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

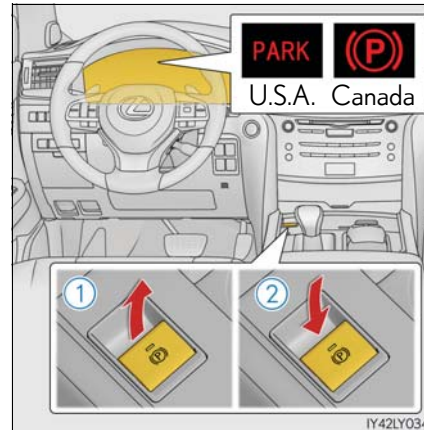

### ■ Parking the vehicle

→P. 180

### ■ Parking brake operation

- When the engine switch is not in IGNITION ON mode, the parking brake cannot be released using the parking brake switch.
- When the engine switch is not in IGNITION ON mode, automatic mode (automatic brake setting and releasing) is not available.

### ■ If "Parking Brake Overheated Parking Brake Unavailable" is displayed on the multi-information display

If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

### ■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

### ■ Parking brake indicator light

- Depending on the engine switch mode, the parking brake indicator light will come on and stay on as described below:  
IGNITION ON mode: Comes on until the parking brake is released.  
Not in IGNITION ON mode: Stays on for approximately 15 seconds.
- When the engine switch is turned off with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

### ■ Changing the mode

When changing the automatic mode on/off, the message will be shown on the multi-information display and the buzzer sounds.

### ■ Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. "Release Parking Brake" is displayed on the multi-information display.

**■ Warning messages and buzzers**

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

**■ If the brake system warning light comes on**

→P. 525

**■ Usage in winter time**

→P. 388

**WARNING****■ When parking the vehicle**

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

**NOTICE****■ When parking the vehicle**

Before you leave the vehicle, set the parking brake, shift the shift lever to P and make sure that the vehicle does not move.

**■ When the system malfunctions**

Stop the vehicle in a safe place and check the warning messages.

**■ When the parking brake cannot be released due to a malfunction**

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear. Have the vehicle inspected by your Lexus dealer immediately if this occurs.


## Headlight switch

The headlights can be operated manually or automatically.

### Operating instructions

Operating the  switch turns on the lights as follows:

- ①  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights (→P. 228) turn on.
- ②  The headlights and all lights listed above (except daytime running lights) turn on.
- ③ AUTO The headlights, daytime running lights (→P. 228) and all lights listed above turn on and off automatically. (When the engine switch is in IGNITION ON mode.)
- ④  Off  
(U.S.A.)  
 The daytime running lights  
(Canada) turn on. (→P. 228)

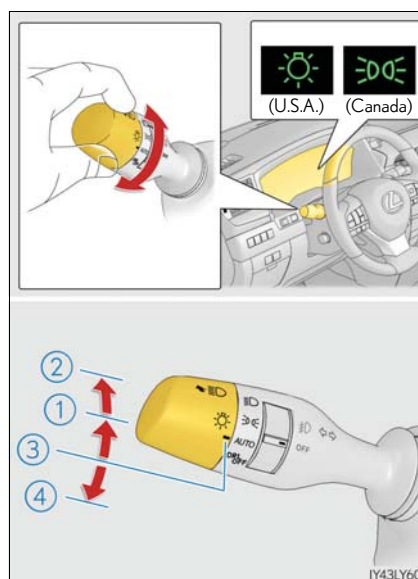


4

Driving

### Turning on the high beam headlights

- ① With the headlights on, push the lever forward to turn on the high beams.

Pull the lever back to the center position to turn the high beams off.

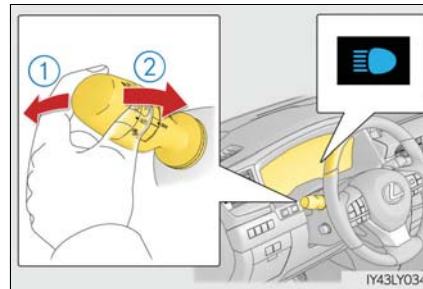

- ② Pull the lever toward you to turn on the high beams.

Release the lever to turn them off. You can flash the high beams with the headlights on or off.

### Daytime running light system

- The daytime running lights illuminate using the same lights as the parking lights and illuminate brighter than the parking lights.
- To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically when all of the following conditions are met. (The daytime running lights are not designed for use at night.)
  - The engine is running
  - The parking brake is released
  - The headlight switch is in the  (Canada only),  or "AUTO"\* position

\*: When the surroundings are bright


The daytime running lights remain on after they illuminate, even if the parking brake is set again.

- For the U.S.A.: Daytime running lights can be turned off by operating the switch.
- Compared to turning on the headlights, the daytime running light system offers greater durability and consumes less electricity, so it can help improve fuel economy.

### Headlight control sensor

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

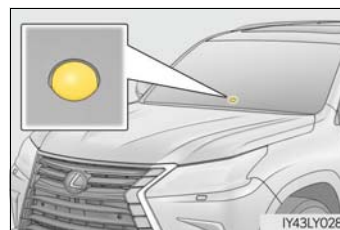

- Automatic light off system
- When the headlights are on: The headlights and tail lights turn off 30 seconds after a door is opened and closed if the engine switch has been switched to ACCESSORY or off mode.

● When only the tail lights are on: The tail lights turn off automatically if the engine switch is switched to ACCESSORY or off mode and driver's door is opened.
- To turn the lights on again, turn the engine switch to IGNITION ON mode, or turn the light switch off once and then back to  or  position.
- Automatic headlight leveling system
- The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.
- Welcome lighting
- If the headlight switch is turned to **AUTO** and the surrounding area is dark, unlocking the doors using the smart access system with push-button start or wireless remote control will turn the parking lights and tail lights on automatically.
- If the automatic headlight leveling system warning light flashes
- It may indicate a malfunction in the system. Contact your Lexus dealer.
- Light reminder buzzer
- A buzzer sounds when the engine switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the tail lights remain on.
- Customization
- Settings (e.g. light sensor sensitivity) can be changed.  
(Customizable features: →P. 584)

 NOTICE

■ To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.

## Automatic High Beam

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.



### WARNING

#### ■ Limitations of the Automatic High Beam

Do not rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beam on or off manually if necessary.

#### ■ To prevent incorrect operation of the Automatic High Beam system

Do not overload the vehicle.




### NOTICE

#### ■ Notes when using the Automatic High Beam system

##### ► Vehicles without PCS (Pre-Collision System):


Observe the following to ensure that the Automatic High Beam functions correctly.

- Do not touch the camera sensor.
  - Do not subject the inside rear view mirror or the camera sensor to a strong impact.
  - Do not disassemble the camera sensor.
  - Do not spill liquid onto the inside rear view mirror or the camera sensor.
  - Do not apply window tinting or stickers to the camera sensor or the area of windshield near the camera sensor.
  - Do not place items on the dashboard. There is a possibility that the camera sensor will mistake items reflected in the windshield for streetlights, the headlights of other vehicles, etc.
  - Do not install a parking tag or any other accessories near or around the inside rear view mirror and the camera sensor.
  - Do not modify the vehicle.
  - Do not replace windshield with non-genuine windshield.  
Contact your Lexus dealer.
  - Do not replace headlights with non-genuine headlights.  
Contact your Lexus dealer.
- Vehicles with PCS (Pre-Collision System): →P. 251

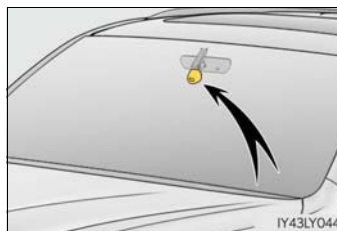


**Activating the Automatic High Beam system**

- 1 Push the lever away from you with the headlight switch in the **AUTO** or  position.

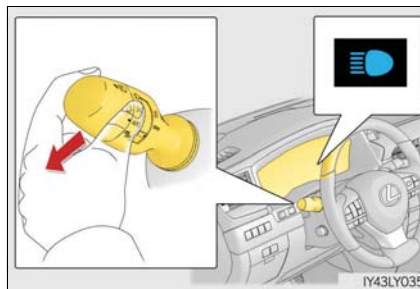

- 2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

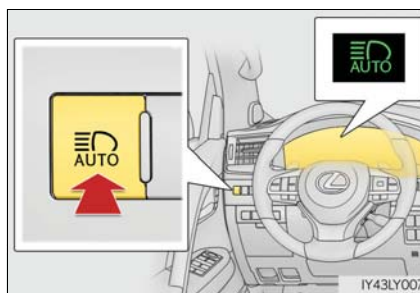


### Turning the high beam on/off manually

#### ■ Switching to low beam

Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

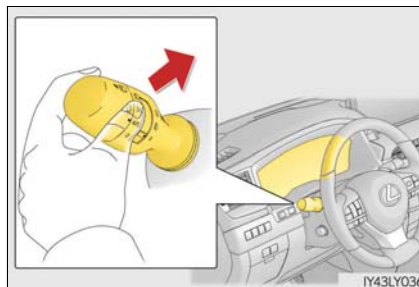


#### ■ Switching to high beam

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

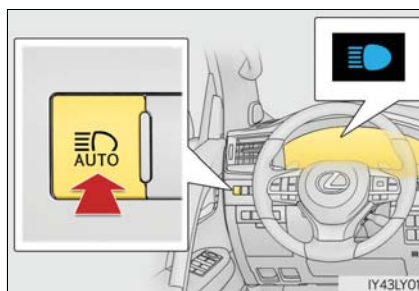

#### ■ High beam automatic turning on or off conditions

- When all of the following conditions are fulfilled, the high beam will be automatically turned on:
  - Vehicle speed is above approximately 21 mph (34 km/h).
  - The area ahead of the vehicle is dark.
  - There are no vehicles ahead with headlights or tail lights turned on.
  - There are few streetlights on the road ahead.
- If any of the following conditions are fulfilled, the high beam will be automatically turned off:
  - Vehicle speed drops below approximately 17 mph (27 km/h).
  - The area ahead of the vehicle is not dark.
  - Vehicles ahead have headlights or tail lights turned on.
  - There are many streetlights on the road ahead.

#### ■ Camera sensor detection information

- The high beam may not be automatically turned off in the following situations:
  - When oncoming vehicles suddenly appear from a curve
  - When the vehicle is cut in front of by another vehicle
  - When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
  - When vehicles ahead appear from the faraway lane on wide road
  - When vehicles ahead have no lights
- The high beam may be turned off if a vehicle ahead that is using fog lights without using the headlights is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beam to switch to the low beams, or the low beams to remain on.
- The following factors may affect the amount of time taken to turn the high beam on or off:
  - The brightness of headlights, fog lights, and tail lights of vehicles ahead
  - The movement and direction of vehicles ahead
  - When a vehicle ahead only has operational lights on one side
  - When a vehicle ahead is a two-wheeled vehicle
  - The condition of the road (gradient, curve, condition of the road surface etc.)
  - The number of passengers and amount of luggage
- The high beam may be turned on or off when the driver does not expect it.
- Bicycles or similar objects may not be detected.
- In the situations shown below, the system may not be able to accurately detect surrounding brightness levels. This may cause the low beams to remain on or the high beams to cause problems for pedestrians, vehicles ahead or other parties. In these cases, manually switch between the high and low beams.
  - In bad weather (rain, snow, fog, sandstorms etc.)
  - The windshield is obscured by fog, mist, ice, dirt etc.
  - The windshield is cracked or damaged.
  - The camera sensor is deformed or dirty.
  - The camera sensor temperature is extremely high.
  - Surrounding brightness levels are equal to those of headlights, tail lights or fog lights.
  - Vehicles ahead have headlights that are either switched off, dirty, are changing color, or are not aimed properly.
  - When driving through an area of intermittently changing brightness and darkness.
  - When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel tracks etc.).
  - When frequently and repeatedly taking curves or driving on a winding road.
  - There is a highly reflective object ahead of the vehicle, such as a sign or a mirror.
  - The back of a vehicle ahead is highly reflective, such as a container on a truck.
  - The vehicle's headlights are damaged or dirty.
  - The vehicle is listing or tilting, due to a flat tire, a trailer being towed etc.
  - The high beam and low beam are repeatedly being switched between in an abnormal manner.
  - The driver believes that the high beam may be causing problems or distress to other drivers or pedestrians nearby.

**■ Temporary lowering sensor sensitivity**

The sensitivity of the sensor can be temporarily lowered.

**► Vehicles without PCS (Pre-Collision System):**

To lower the sensitivity, push and hold  on the inside rear view mirror for 15 to 20 seconds, and release. The indicator light on the inside rear view mirror will flash to indicate that the sensitivity has been lowered.

When the engine switch is turned off, the sensitivity will be returned to its normal level.

**► Vehicles with PCS (Pre-Collision System):**

**1** Turn the engine switch off while the following conditions are met.

- The headlight switch is in **AUTO**.
- The headlight switch lever is in low beam position.

**2** Turn the engine switch to **IGNITION ON** mode.

**3** Within 30 seconds after **2**, repeat pushing the headlight switch lever to the high beam position then pulling it to the low beam position quickly 10 times, then leave the lever in high beam position.


Automatic High Beam (headlights) may turn on even the vehicle is stopped.

## Fog light switch

The fog lights assist visibility in difficult driving conditions, such as in rain or fog.

► Type A

- ① OFF Turns the fog lights off
- ②  Turns the fog lights on

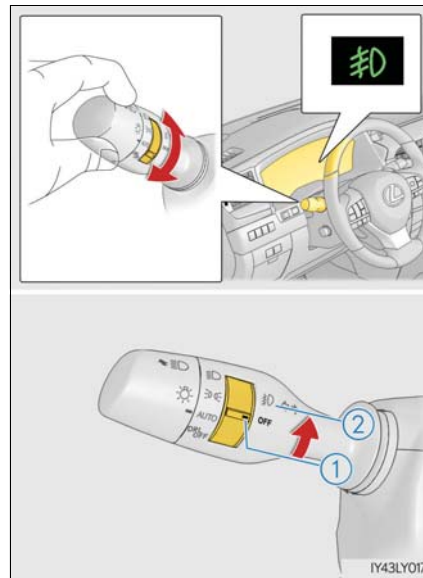


4

Driving

► Type B

- ① ○ Turns the fog lights off
- ②  Turns the fog lights on

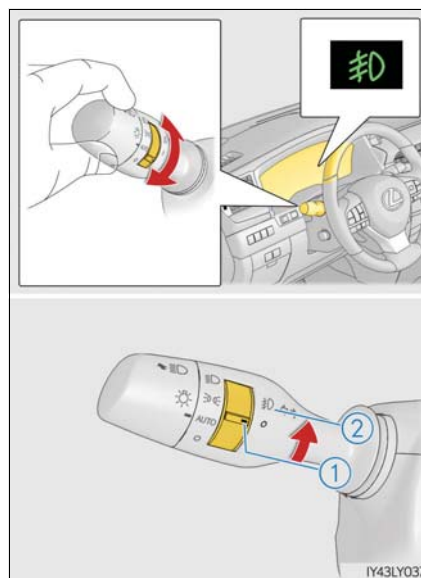

■ Fog lights can be used when

The headlights are on in low beam.



NOTICE

■ To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.

## Windshield wipers and washer


### Operating the wiper lever

Operating the  lever operates the wipers or washer as follows.

► Type A


- ① **MIST** Temporary operation
- ② **AUTO** Rain-sensing operation
- ③ **LO** Low speed operation
- ④ **HI** High speed operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

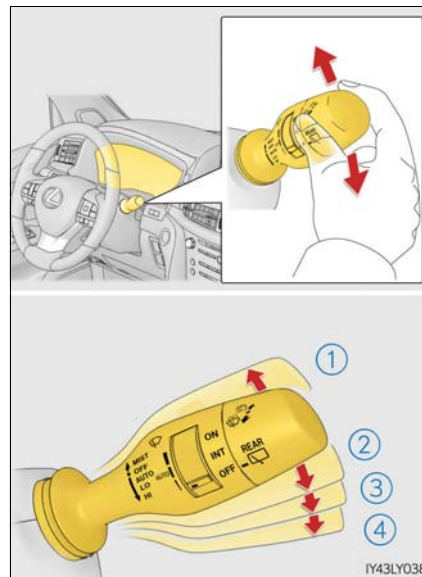

The sensor sensitivity can be adjusted when "AUTO" is selected.


- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

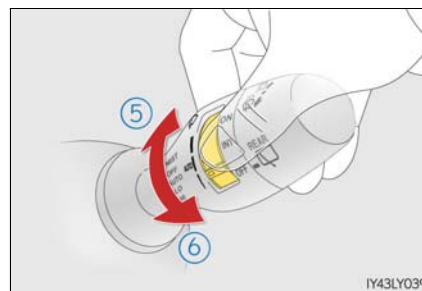

⑦  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

After operating several times, the wipers operate one more time after a short delay to prevent dripping.

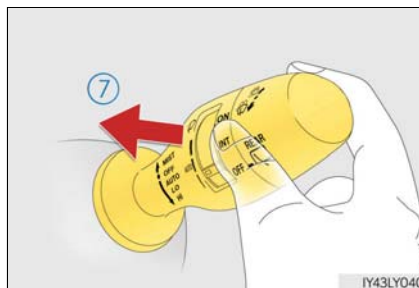

► Type B


①  Temporary operation

② **AUTO** Rain-sensing operation

③  Low speed operation


④  High speed operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

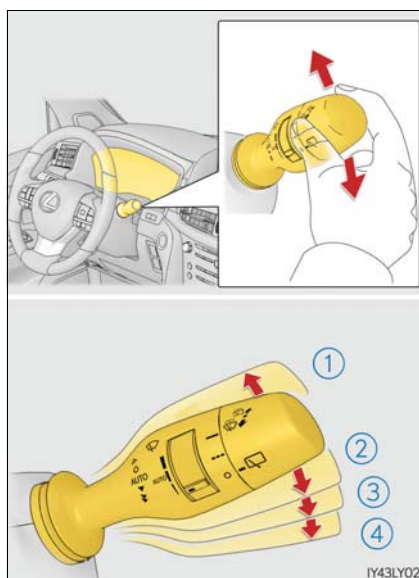

The sensor sensitivity can be adjusted when "AUTO" is selected.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

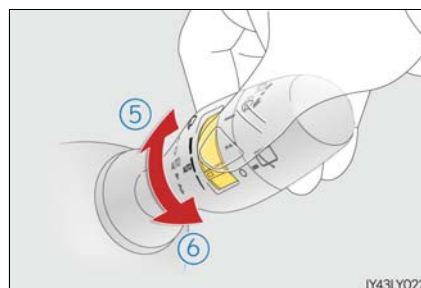

- ⑦ Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

After operating several times, the wipers operate one more time after a short delay to prevent dripping.




#### ■ The windshield wipers and washer can be operated when

The engine switch is in IGNITION ON mode.

#### ■ Raindrop sensor

- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

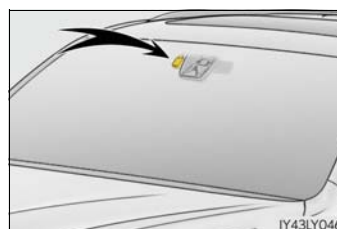

- If the wiper switch is turned to the "AUTO" position while the engine switch is in IGNITION ON mode, the wipers will operate once to show that "AUTO" mode is activated.
- When the sensor sensitivity ring is turned toward high while in "AUTO" mode, the wipers will operate once to indicate that the sensor sensitivity is enhanced.
- If the temperature of the rain drop sensor is 185°F (85°C) or higher, or -22°F (-30°C) or lower, the automatic operation may not occur. In this case, operate the wipers in any mode other than "AUTO".

**■ If no windshield washer fluid sprays**

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

**WARNING****■ Caution regarding the use of windshield wipers in "AUTO" mode**

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in "AUTO" mode. Take care that your fingers etc. anything else does not become caught in the windshield wipers.

**■ Caution regarding the use of washer fluid**

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

**NOTICE****■ When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

**■ When the washer fluid tank is empty**

Do not operate the switch continually as the washer fluid pump may overheat.

**■ When there is no washer fluid spray from the nozzle**

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

**■ When a nozzle becomes blocked**


Do not try to clear it with a pin or other object. The nozzle will be damaged.

## Rear window wiper and washer

### ► Type A


Operating the  switch operates the rear window wiper as follows:

- ① **INT** Intermittent operation
- ② **ON** Normal operation

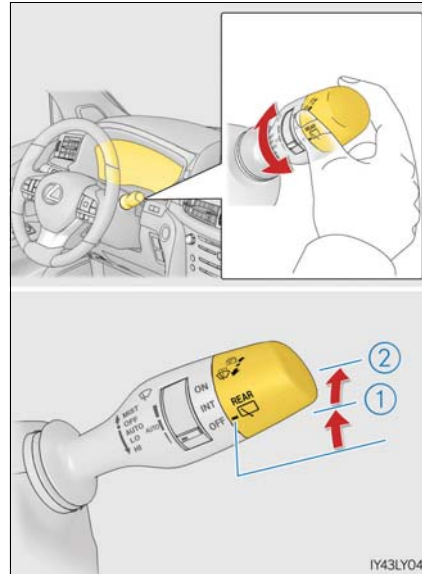

- ③  Washer/wiper dual operation

Pushing the lever operates the wiper and washer.

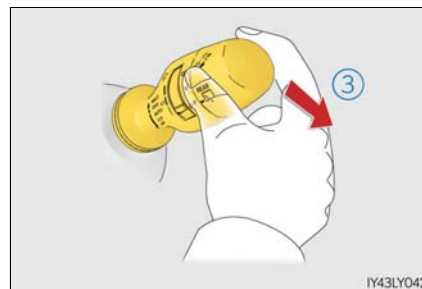


## 242 4-3. Operating the lights and wipers

### ► Type B

Operating the  switch operates the rear window wiper as follows:

①  Intermittent operation

②  Normal operation

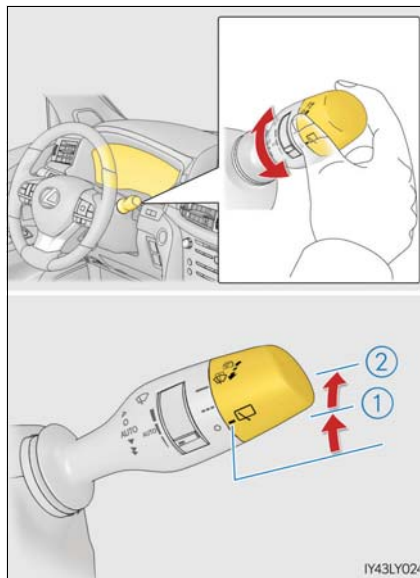

③  Washer/wiper dual operation

Pushing the lever operates the wiper and washer.



- **The rear window wiper and washer can be operated when**  
The engine switch is in IGNITION ON mode.
- **If no washer fluid sprays**  
Check that the washer nozzles are not blocked if there is washer fluid in the washer fluid reservoir.
- **Dripping prevention wiper sweep**  
After washing and wiping operation several times, the wipers operate one more time after a short delay to prevent dripping.
- **Effect of vehicle and shift position on wiper operation**
  - ▶ Type A  
With **INT** or **OFF** selected, the rear window wiper sweeps once when you shift the shift lever to R while windshield wipers operating or with 17 seconds from their deactivation.
  - ▶ Type B  
With **---** or **○** selected, the rear window wiper sweeps once when you shift the shift lever to R while windshield wipers operating or with 17 seconds from their deactivation.
- **Customization**  
Settings (e.g. drip prevention function) can be changed.  
(Customizable features →P. 584)



**NOTICE**

- **When the rear window is dry**  
Do not use the wiper, as it may damage the rear window.
- **When the washer fluid tank is empty**  
Do not operate the switch continually as the washer fluid pump may overheat.

## Headlight cleaner switch \*

Washer fluid can be sprayed on the headlights.

Press the switch to clean the headlights.

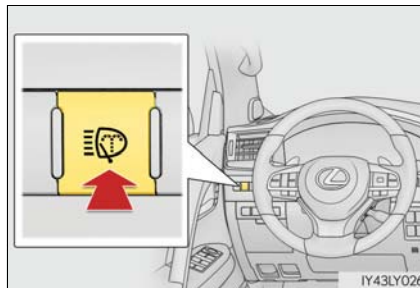

### ■ The headlight cleaners can be operated when

The engine switch is in IGNITION ON mode and the headlight switch is turned on.

### ⚠ NOTICE

#### ■ When the washer fluid tank is empty

Do not press the switch continually as the washer fluid pump may overheat.

\*: If equipped

## Opening the fuel tank cap

Perform the following steps to open the fuel tank cap.

### Before refueling the vehicle

- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

#### Fuel types

→P. 570

#### Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Lexus has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.



### WARNING

#### ■ When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it.  
A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their bodies to come close to an open fuel tank.
- Do not inhale vaporized fuel.  
Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.  
Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.  
This may cause static electricity to build up, resulting in a possible ignition hazard.

#### ■ When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.


**NOTICE****■ Refueling**

Do not spill fuel during refueling.


Doing so may damage the vehicle, such as causing the emission control systems to operate abnormally or damaging fuel system components or the vehicle's painted surface.

**Opening the fuel tank cap**


- 1** Pull the lever.

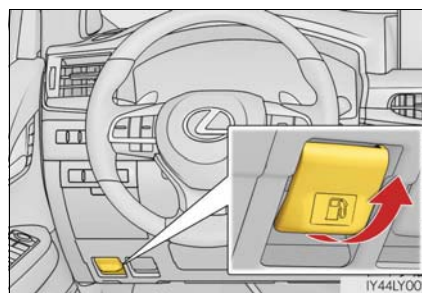

- 2** Turn the fuel tank cap slowly and remove it, then put it into the holder on the fuel filler door.

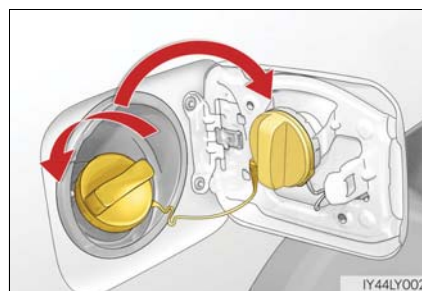**Closing the fuel tank cap**

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

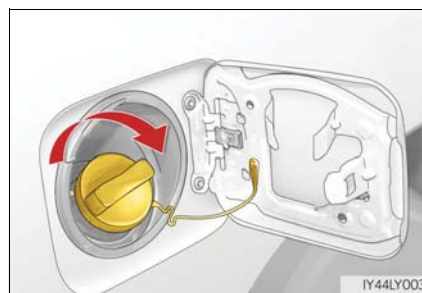

 **WARNING** **When replacing the fuel tank cap**

Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

## Lexus Safety System +\*

The Lexus Safety System + consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

### ◆ PCS (Pre-Collision System)\*

→P. 255

### ◆ LDA (Lane Departure Alert)\*

→P. 267

### ◆ Dynamic radar cruise control with full-speed range\*

→P. 275

### ◆ Automatic High Beam

→P. 230

## WARNING

### ■ Lexus Safety System +

The Lexus Safety System + is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

\*: If equipped

### Vehicle data recording

The pre-collision system is equipped with a sophisticated computer that will record certain data, such as:

- Accelerator status
- Brake status
- Vehicle speed
- Operation status of the pre-collision system functions
- Information (such as the distance and relative speed between your vehicle and the vehicle ahead or other objects)
- Images from the camera sensor (available only when the pre-collision braking function or the pre-collision brake assist function was operating)

The pre-collision system does not record conversations, sounds or images of the inside of the vehicle.

#### ● Data usage

Lexus may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner


#### ● Recorded images can be erased using a specialized device.

The image recording function can be disabled. However, if the function is disabled, data from when the pre-collision system operates will not be available.

## Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

- ① Radar sensor
- ② Camera sensor

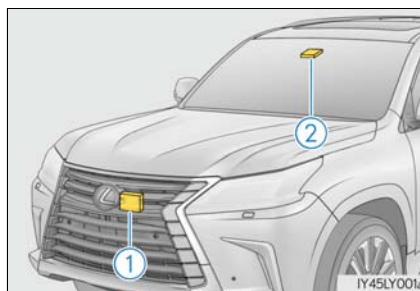

### ⚠ WARNING

#### ■ To avoid malfunction of the radar sensor

Observe the following precautions.


Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the radar sensor and front grille emblem clean at all times.

- ① Radar sensor
- ② Front grille emblem

If the front of the radar sensor or the front or back of the front grille emblem is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and front grille emblem with a soft cloth so you do not mark or damage them.

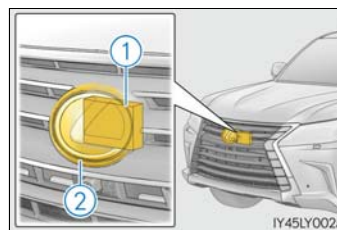

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, front grille emblem or surrounding area.
- Do not subject the radar sensor or surrounding area to a strong impact.  
If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by your Lexus dealer.
- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor, front grille emblem or surrounding area.
- If the radar sensor, front grille, or front bumper needs to be removed and installed, or replaced, contact your Lexus dealer.


**⚠ WARNING****■ To avoid malfunction of the camera sensor**

Observe the following precautions.

Otherwise, the camera sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
  - If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clear the windshield.
  - If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the camera sensor.
  - If the inner side of the windshield where the camera sensor is installed is dirty, contact your Lexus dealer.
- Do not attach objects, such as stickers, transparent stickers, and so forth, to the outer side of the windshield in front of the camera sensor (shaded area in the illustration).
 

A: From the top of the windshield to approximately 0.4 in. (1 cm) below the bottom of the camera sensor  
 B: Approximately 7.9 in. (20 cm) (Approximately 4.0 in. (10 cm) to the right and left from the center of the camera sensor)
- If the part of the windshield in front of the camera sensor is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation or ice. (→P. 405)
- If water droplets cannot be properly removed from the area of the windshield in front of the camera sensor by the windshield wipers, replace the wiper insert or wiper blade.  
 If the wiper inserts or wiper blades need to be replaced, contact your Lexus dealer.
- Do not attach window tinting to the windshield.
- Replace the windshield if it is damaged or cracked.  
 If the windshield needs to be replaced, contact your Lexus dealer.
- Do not get the camera sensor wet.
- Do not allow bright lights to shine into the camera sensor.
- Do not dirty or damage the camera sensor.  
 When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens. Also, do not touch the lens.  
 If the lens is dirty or damaged, contact your Lexus dealer.
- Do not subject the camera sensor to a strong impact.

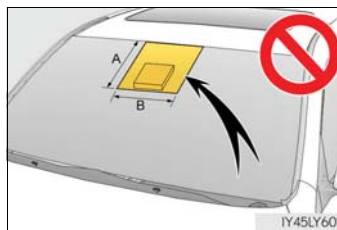

**WARNING**

- Do not change the installation position or direction of the camera sensor or remove it.
- Do not disassemble the camera sensor.
- Do not modify any components of the vehicle around the camera sensor (inside rear view mirror, etc.) or ceiling.
- Do not attach any accessories that may obstruct the camera sensor to the hood, front grille or front bumper. Contact your Lexus dealer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the camera sensor.
- Do not modify the headlights or other lights.

---

**■ Certification**

FCC ID: HYQDNMWR008

**NOTE:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Radiofrequency radiation exposure Information:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator (antenna) and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**NOTE:**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

**NOTE:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps.

## PCS (Pre-Collision System)\*

The pre-collision system uses a radar sensor and camera sensor to detect vehicles and pedestrians in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P. 259)


4

Driving

\*: If equipped

◆ **Pre-collision warning**

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

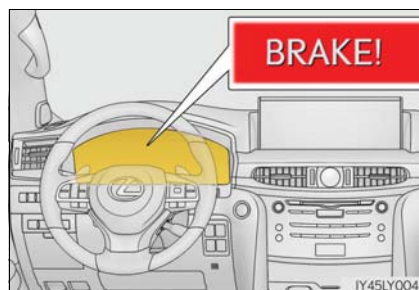

◆ **Pre-collision brake assist**

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

◆ **Pre-collision braking**

When the system determines that the possibility of a frontal collision is high, the system warns the driver. If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the collision speed.

◆ **Suspension control**

When the system determines that the possibility of a frontal collision is high, the Adaptive Variable Suspension System (→P. 383) will control the damping force of the shock absorbers to help maintain an appropriate vehicle posture.

**WARNING**

■ **Limitations of the pre-collision system**

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.  
Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.  
Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - Conditions under which the system may operate even if there is no possibility of a collision: →P. 261
  - Conditions under which the system may not operate properly: →P. 263
- Do not attempt to test the operation of the pre-collision system yourself, as the system may not operate properly, possibly leading to an accident.

■ **Pre-collision braking**

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- In some situations, while the pre-collision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.

**WARNING****■ When to disable the pre-collision system**

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation
- When the vehicle is raised on a lift with the engine running and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is used
- If equipment (snow plow, etc.) that may obstruct the radar sensor or camera sensor is temporarily installed to the vehicle

## Changing settings of the pre-collision system


### ■ Disabling the pre-collision system

Press the PCS switch for 3 seconds or more.

The PCS warning light will turn on and a message will be displayed on the multi-information display.

To enable the system, press the PCS switch again.

The system is enabled each time the engine switch is turned to IGNITION ON mode.

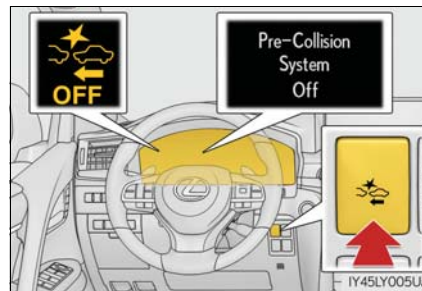

### ■ Changing the pre-collision warning timing

Press the PCS switch to display the current warning timing on the multi-information display. Each time the PCS switch is pressed with the warning timing displayed, the warning timing will change as follows.

The operation timing setting is retained when the engine switch is turned off.

#### ① Far


The warning will begin to operate earlier than with the default timing.

#### ② Middle

This is the default setting.

#### ③ Near

The warning will begin to operate later than with the default timing.

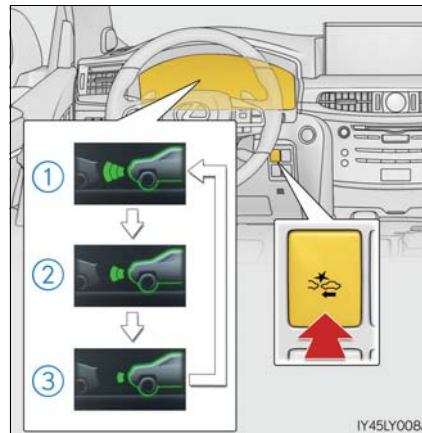

**■ Operational conditions**

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high.

Each function is operational at the following speeds:

- Pre-collision warning:
  - Vehicle speed is between approximately 7 and 110 mph (10 and 180 km/h). (For detecting a pedestrian, vehicle speed is between approximately 7 and 50 mph [10 and 80 km/h].)
  - The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 7 mph (10 km/h) or more.
- Pre-collision brake assist:
  - Vehicle speed is between approximately 20 and 110 mph (30 and 180 km/h). (For detecting a pedestrian, vehicle speed is between approximately 20 and 50 mph [30 and 80 km/h].)
  - The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 20 mph (30 km/h) or more.
- Pre-collision braking:
  - Vehicle speed is between approximately 7 and 110 mph (10 and 180 km/h). (For detecting a pedestrian, vehicle speed is between approximately 7 and 50 mph [10 and 80 km/h].)
  - The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 7 mph (10 km/h) or more.

The system may not operate in the following situations:

- If a battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- If the shift lever is in R
- If VSC is disabled (only the pre-collision warning function will be operational)
- If the low speed four-wheel drive indicator is illuminated (only the pre-collision warning function will be operational)

### ■ Pedestrian detection function

The pre-collision system detects pedestrians based on the size, profile, and motion of a detected object. However, a pedestrian may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P. 265)



### ■ Cancellation of the pre-collision braking


If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.


### ■ Conditions under which the system may operate even if there is no possibility of a collision

- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.


- When passing a vehicle or pedestrian
- When changing lanes while overtaking a preceding vehicle
- When overtaking a preceding vehicle that is changing lanes
- When overtaking a preceding vehicle that is making a left/right turn

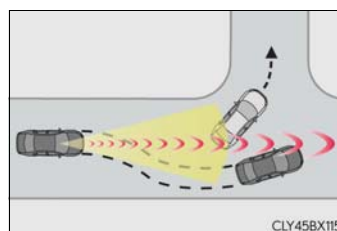


- When passing a vehicle in an oncoming lane that is stopped to make a right/left turn

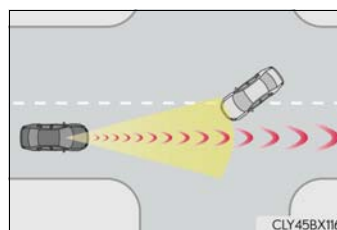


- When driving on a road where relative location to vehicle ahead in an adjacent lane may change, such as on a winding road

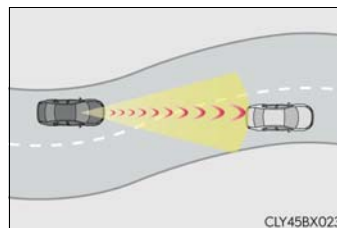


- When rapidly closing on a vehicle ahead
- If the front of the vehicle is raised or lowered, such as when the road surface is uneven or undulating
- When approaching objects on the roadside, such as guardrails, utility poles, trees, or walls
- When there is a vehicle, pedestrian, or object by the roadside at the entrance of a curve

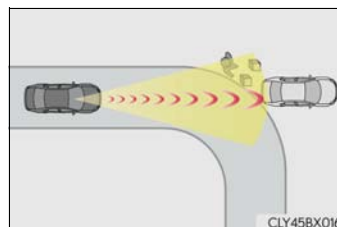


- When driving on a narrow path surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion on the road surface or roadside
- When a crossing pedestrian approaches very close to the vehicle

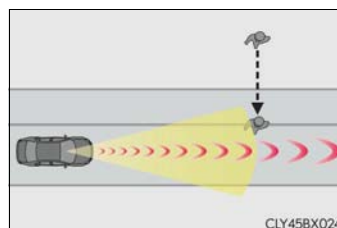


- When passing through a place with a low structure above the road (low ceiling, traffic sign, etc.)

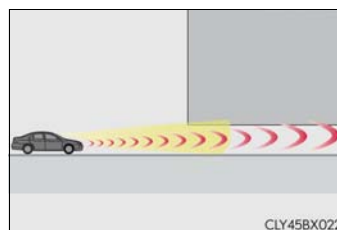

- When passing under an object (billboard, etc.) at the top of an uphill road

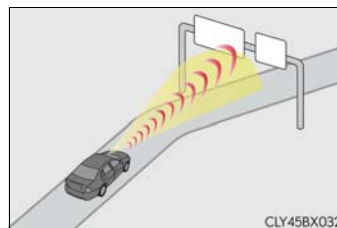


- When rapidly closing on an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- When using an automatic car wash
- When driving through or under objects that may contact the vehicle, such as thick grass, tree branches, or a banner

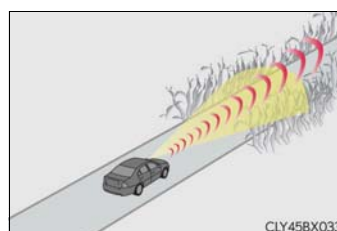


- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke
- When there are patterns or paint on the road or a wall that may be mistaken for a vehicle or pedestrian
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present

#### ■ Situations in which the system may not operate properly


- In some situations such as the following, a vehicle may not be detected by the radar sensor and camera sensor, preventing the system from operating properly:
  - If an oncoming vehicle is approaching your vehicle
  - If a vehicle ahead is a motorcycle or bicycle
  - When approaching the side or front of a vehicle
  - If a preceding vehicle has a small rear end, such as an unloaded truck
  - If a preceding vehicle has a low rear end, such as a low bed trailer

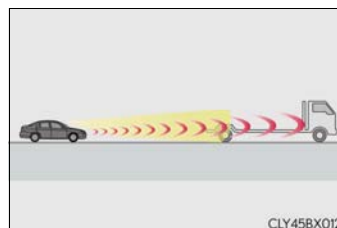


- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead has extremely high ground clearance

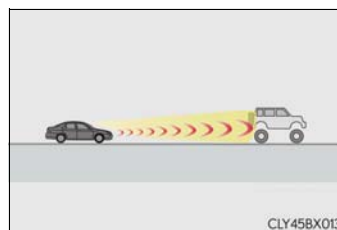

- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If the sun or other light is shining directly on a vehicle ahead
- If a vehicle cuts in front of your vehicle or emerges from beside a vehicle
- If a vehicle ahead makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When suddenly cutting behind a preceding vehicle
- When a vehicle ahead is not directly in front of your vehicle

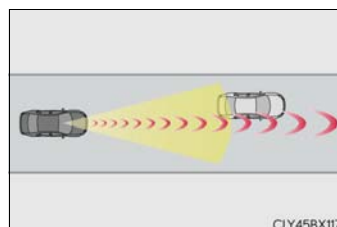

- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- When the vehicle is hit by water, snow, dust, etc. from a vehicle ahead
- When driving through steam or smoke
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- When a very bright light, such as the sun or the headlights of oncoming traffic, shines directly into the camera sensor
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel
- After the engine has started the vehicle has not been driven for a certain amount of time
- While making a left/right turn and for a few seconds after making a left/right turn
- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

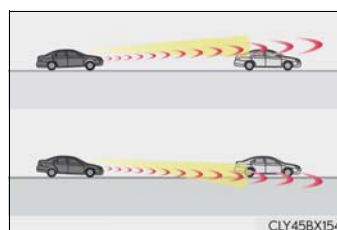

- If the wheels are misaligned
- If a wiper blade is blocking the camera sensor
- The vehicle is wobbling.
- The vehicle is being driven at extremely high speeds.

- When driving on a hill
- If the radar sensor or camera sensor is misaligned
- In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:
  - If the braking functions cannot operate to their full extent, such as when the brake parts are extremely cold, extremely hot, or wet
  - If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
  - When the vehicle is being driven on a gravel road or other slippery surface
- Some pedestrians such as the following may not be detected by the radar sensor and camera sensor, preventing the system from operating properly:
  - Pedestrians shorter than approximately 3.2 ft. (1 m) or taller than approximately 6.5 ft. (2 m)
  - Pedestrians wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure
  - Pedestrians who are carrying large baggage, holding an umbrella, etc., hiding part of their body
  - Pedestrians who are bending forward or squatting
  - Pedestrians who are pushing a stroller, wheelchair, bicycle or other vehicle
  - Groups of pedestrians which are close together
  - Pedestrians who are wearing white and look extremely bright
  - Pedestrians in the dark, such as at night or while in a tunnel
  - Pedestrians whose clothing appears to be nearly the same color or brightness as their surroundings
  - Pedestrians near walls, fences, guardrails, or large objects
  - Pedestrians who are on a metal object (manhole cover, steel plate, etc.) on the road
  - Pedestrians who are walking fast
  - Pedestrians who are changing speed abruptly
  - Pedestrians running out from behind a vehicle or a large object
  - Pedestrians who are extremely close to the side of the vehicle (outside rear view mirror, etc.)

■ **If the PCS warning light flashes or illuminates and a warning message is displayed on the multi-information display**

The pre-collision system may be temporarily unavailable or there may be a malfunction in the system.

- In the following situations, the warning light will turn off, the message will disappear and the system will become operational when normal operating conditions return:

- When the radar sensor or camera sensor or the area around either sensor is hot, such as in the sun
- When the radar sensor or camera sensor or the area around either sensor is cold, such as in an extremely cold environment
- When a front sensor is dirty or covered with snow, etc.
- When the part of the windshield in front of the camera sensor is fogged up or covered with condensation or ice (Defogging the windshield: →P. 411)
- If the camera sensor is obstructed, such as when the hood is open or a sticker is attached to the windshield near the camera sensor

- If the PCS warning light continues to flash or remains illuminated or the warning message does not disappear even though the vehicle has returned to normal, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ **If VSC is disabled**


- If VSC is disabled (→P. 384), the pre-collision brake assist and pre-collision braking functions are also disabled.
- The PCS warning light will turn on and “VSC Turned Off Pre-Collision Brake System Unavailable” will be displayed on the multi-information display.

## LDA (Lane Departure Alert)\*

### Summary of functions

When driving on roads with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the front windshield.

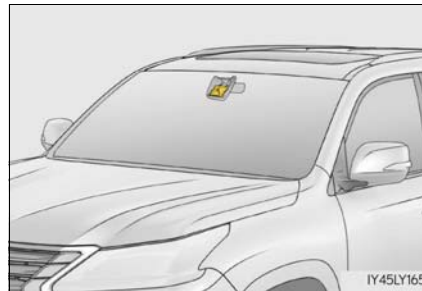


### Functions included in LDA system

#### ◆ Lane departure alert function

When the system determines that the vehicle might depart from its lane, a warning is displayed on the multi-information display, and either the warning buzzer sounds or the steering wheel vibrates to alert the driver.

When the warning buzzer sounds or the steering wheel vibrates, check the surrounding road situation and carefully operate the steering wheel to move the vehicle back to the center of the lane.

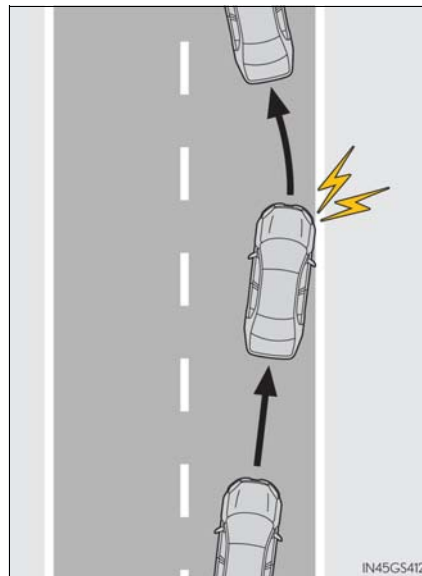


4

Driving

\*: If equipped

### ◆ Vehicle sway warning function

When the vehicle is swaying or appears as if it may depart from its lane multiple times, the warning buzzer sounds and a message is displayed on the multi-information display to alert the driver.

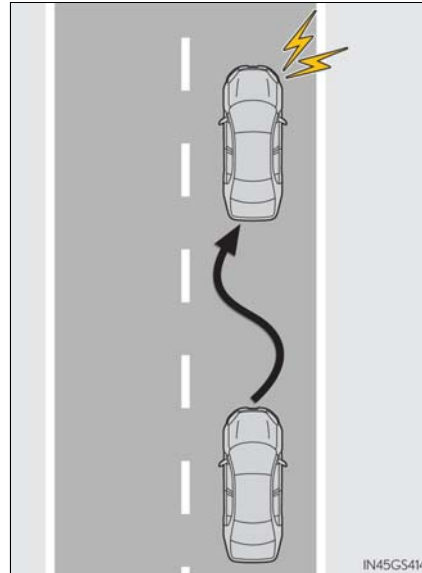

### ⚠ WARNING

#### ■ Before using LDA system

Do not rely solely upon the LDA system. The LDA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.

Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.

#### ■ To avoid operating LDA system by mistake

When not using the LDA system, use the LDA switch to turn the system off.

**⚠ WARNING****■ Situations unsuitable for LDA system**

Do not use the LDA system in the following situations.

The system may not operate properly and lead to an accident, resulting in death or serious injury.

- A spare tire, tire chains, etc. are equipped.
- Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, curbs, reflective poles, etc.).
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Asphalt repair marks, white (yellow) line marks, etc. are present due to road repair.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven in a construction zone.

**■ Preventing LDA system malfunctions and operations performed by mistake**

- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact your Lexus dealer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact your Lexus dealer.

4

Driving


**Turning LDA system on**

Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates.

Press the LDA switch again to turn the LDA system off.


When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

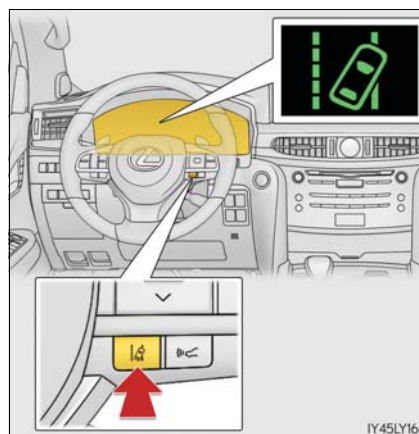

### Indications on multi-information display

#### Lane departure alert function display

Displayed when the multi-information display is switched to the driving assist system information screen.

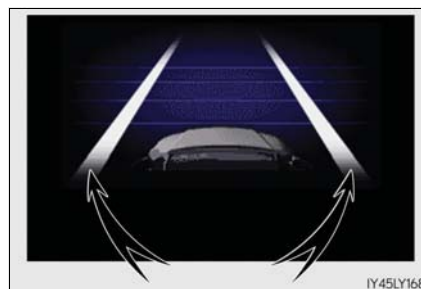

► Inside of displayed white lines is white

► Inside of displayed white lines is black



Indicates that the system is recognizing white (yellow) lines. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.



Indicates that the system is not able to recognize white (yellow) lines or is temporarily canceled.

### ■ Operation conditions of each function

#### ● Lane departure alert function

This function operates when all of the following conditions are met.

- LDA is turned on.
- Vehicle speed is approximately 32 mph (50 km/h) or more.
- System recognizes white (yellow) lines.
- Width of traffic lane is approximately 9.8 ft. (3 m) or more.
- Turn signal lever is not operated.
- Vehicle is driven on a straight road or around a gentle curve with a radius of more than approximately 492 ft. (150 m).
- No system malfunctions are detected. (→P. 273)

#### ● Vehicle sway warning function

This function operates when all of the following conditions are met.

- Setting for "Sway Warning" in  (Settings display) of the multi-information display is set to "On". (→P. 584)
- Vehicle speed is approximately 32 mph (50 km/h) or more.
- Width of traffic lane is approximately 9.8 ft. (3 m) or more.
- No system malfunctions are detected. (→P. 273)

### ■ Temporary cancellation of functions

When the operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P. 271)


#### ■ Lane departure alert function

The warning buzzer may be difficult to hear due to external noise, audio playback, etc. Also, it may be difficult to feel steering wheel vibrations due to the road conditions etc.

#### ■ Vehicle sway warning function

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a buzzer sounds and a warning message urging the driver to rest and the symbol shown in the illustration are simultaneously displayed on the multi-information display.

Depending on the vehicle and road conditions, the warning may not operate.

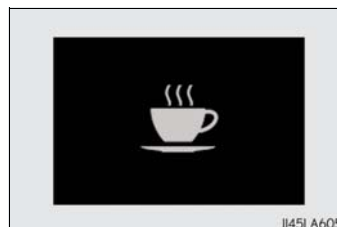

#### ■ White (yellow) lines are only on one side of road

The LDA system will not operate for the side on which white (yellow) lines could not be recognized.

**■ Conditions in which functions may not operate properly**

In the following situations, the camera sensor may not detect white (yellow) lines and various functions may not operate normally.

- There are shadows on the road that run parallel with, or cover, the white (yellow) lines.
- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, "Botts' dots", "Raised pavement marker" or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.
- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- The vehicle is driven on a surface that is bright due to reflected light, etc.
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven where the road diverges, merges, etc.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The vehicle is driven around a sharp curve.
- The traffic lane is excessively narrow or wide.
- The vehicle is extremely tilted due to carrying heavy luggage or having improper tire pressure.
- The distance to the preceding vehicle is extremely short.
- The vehicle is moving up and down a large amount due to road conditions during driving (poor roads or road seams).
- The headlight lenses are dirty and emit a faint amount of light at night, or the beam axis has deviated.
- The vehicle has just changed lanes or crossed an intersection.

### ■ Warning message

If the following warning message is displayed on the multi-information display and the LDA indicator turns off, follow the appropriate troubleshooting procedure.

| Warning message                                                 | Details/Actions                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "Lane Departure Alert<br>Malfunction<br>Visit Your Dealer"      | The system may not be operating properly.<br>→ Have the vehicle inspected at your Lexus dealer.                                                                                                                                                                                                        |
| "Forward Camera System<br>Unavailable<br>Clean Windshield"      | Dirt, rain, condensation, ice, snow, etc. are present on the windshield in front of the camera sensor.<br>→ Turn the LDA system off, remove any dirt, rain, condensation, ice, snow, etc. from the windshield, and then turn the LDA system back on.                                                   |
| "Forward Camera System<br>Unavailable"                          | The operation conditions of the camera sensor (temperature, etc.) are not met.<br>→ When the operation conditions of the camera sensor (temperature, etc.) are met, the LDA system will become available. Turn the LDA system off, wait for a little while, and then turn the LDA system back on.      |
| "Lane Departure Alert Unavailable"                              | The LDA system is temporarily canceled due to a malfunction in a sensor other than the camera sensor.<br>→ Turn the LDA system off and follow the appropriate troubleshooting procedures for the warning message. Afterward, drive the vehicle for a short time, and then turn the LDA system back on. |
| "Lane Departure Alert<br>Unavailable<br>Below Approx<br>32 mph" | The LDA system cannot be used as the vehicle speed is less than approximately 32 mph (50 km/h).<br>→ Drive the vehicle at approximately 32 mph (50 km/h) or more.                                                                                                                                      |

If a different warning message is displayed, follow the instructions displayed on the screen.

**■ Customization**

The following settings can be changed.

| Function                      | Setting details          |
|-------------------------------|--------------------------|
| Lane departure alert function | Adjust alert sensitivity |
|                               | Adjust alert type        |
| Vehicle sway warning function | Turn function on and off |
|                               | Adjust alert sensitivity |

For how to change settings, refer to P. 584.

## Dynamic radar cruise control with full-speed range\*


### Summary of functions

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P. 278)
- Constant speed control mode (→P. 283)

- ① Indicators
- ② Display
- ③ Set speed
- ④ Vehicle-to-vehicle distance switch
- ⑤ Cruise control switch

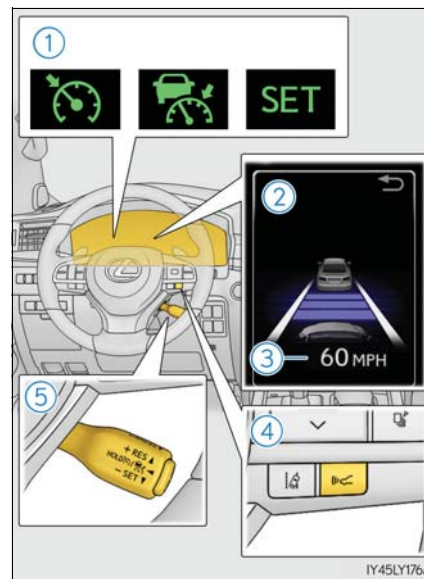

4

Driving

\*: If equipped

**WARNING**

■ **Before using dynamic radar cruise control with full-speed range**

- Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.
- The dynamic radar cruise control with full-speed range provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided. Read the following conditions carefully. Do not overly rely on this system and always drive carefully.
  - When the sensor may not be correctly detecting the vehicle ahead: →P. 285
  - Conditions under which the vehicle-to-vehicle distance control mode may not function correctly: →P. 286
- Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc.
- Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.
- Switch the dynamic radar cruise control with full-speed range off using the "ON/OFF" button when not in use.

■ **Cautions regarding the driving assist systems**

Observe the following precautions, as there are limitations to the assistance provided by the system.

Failure to do so may cause an accident resulting in death or serious injury.

- **Assisting the driver to measure following distance**  
The dynamic radar cruise control with full-speed range is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.
- **Assisting the driver to judge proper following distance**  
The dynamic radar cruise control with full-speed range determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.
- **Assisting the driver to operate the vehicle**  
The dynamic radar cruise control with full-speed range has limited capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

 **WARNING****■ Situations unsuitable for dynamic radar cruise control with full-speed range**

Do not use dynamic radar cruise control with full-speed range in any of the following situations.


Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients  
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)
- When there is rain, snow, etc. on the front surface of the radar sensor or camera sensor
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer or during emergency towing
- When an approach warning buzzer is heard often

### Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 328 ft. (100 m) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

When driving on downhill slopes, the vehicle-to-vehicle distance may become shorter.

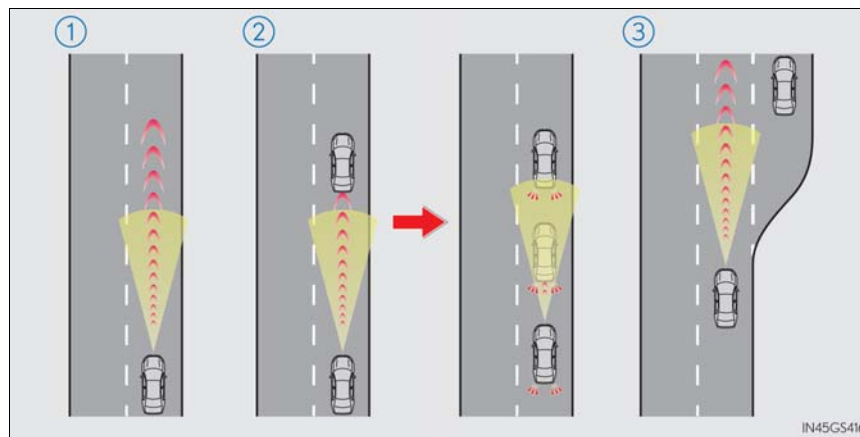

① Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

② Example of deceleration cruising and follow-up cruising

When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

When the vehicle ahead of you stops, your vehicle will also stop (vehicle is stopped by system control). After the vehicle ahead starts off, pushing the cruise control lever up or depressing the accelerator pedal will resume follow-up cruising.

③ Example of acceleration

When there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.


### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode. (→P. 283)

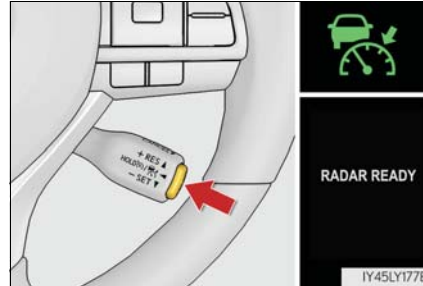


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

If the lever is operated while the vehicle speed is below approximately 30 mph (50 km/h) and a preceding vehicle is present, the set speed will be adjusted to approximately 30 mph (50 km/h).

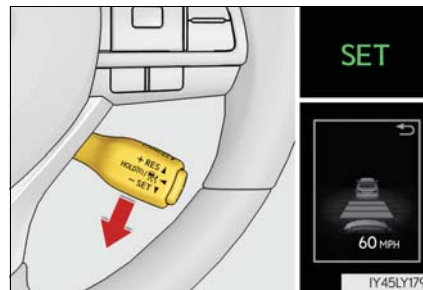

### Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.


① Increases the speed

(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

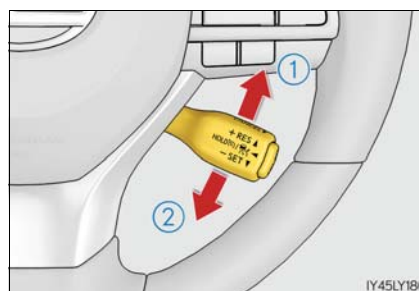

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

► For vehicles sold in the U.S.A. and Hawaii

Fine adjustment: By 1 mph (1.6 km/h)<sup>\*1</sup> or 1 km/h (0.6 mph)<sup>\*2</sup> each time the lever is operated

Large adjustment: Increases or decreases in 1 mph (1.6 km/h)<sup>\*1</sup> or 1 km/h (0.6 mph)<sup>\*2</sup> increments for as long as the lever is held

► For vehicles sold in Canada, Guam and Puerto Rico

Fine adjustment: By 1 mph (1.6 km/h)<sup>\*1</sup> or 1 km/h (0.6 mph)<sup>\*2</sup> each time the lever is operated

Large adjustment: Increases or decreases in 5 mph (8 km/h)<sup>\*1</sup> or 5 km/h (3.1 mph)<sup>\*2</sup> increments for as long as the lever is held

In the constant speed control mode (→P. 283), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 mph (1.6 km/h)<sup>\*1</sup> or 1 km/h (0.6 mph)<sup>\*2</sup> each time the lever is operated

Large adjustment: The speed will continue to change while the lever is held.

\*1: When the set speed is shown in "MPH"

\*2: When the set speed is shown in "km/h"


### Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

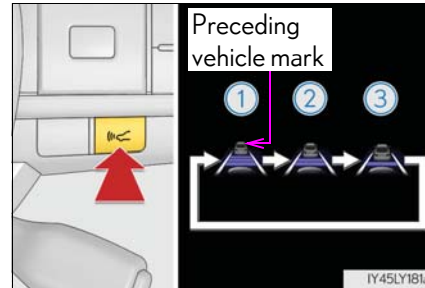

### Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)


Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 50 mph (80 km/h). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed. When the vehicle is stopped by system control, the vehicle stops at a certain vehicle-to-vehicle distance depending on the situation.

| Distance options | Vehicle-to-vehicle distance  |
|------------------|------------------------------|
| Long             | Approximately 160 ft. (50 m) |
| Medium           | Approximately 130 ft. (40 m) |
| Short            | Approximately 100 ft. (30 m) |

### Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

After the vehicle ahead of you starts off, push the lever up.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

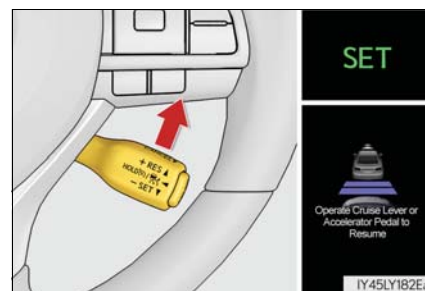


### Canceling and resuming the speed control

- ① Pulling the lever toward you cancels the speed control.

The speed control is also canceled when the brake pedal is depressed.

(When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)


- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

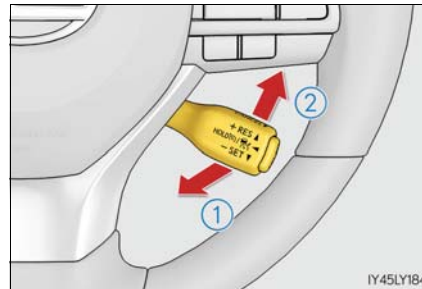

However, when a vehicle ahead is not detected, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.

### Approach warning (vehicle-to-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

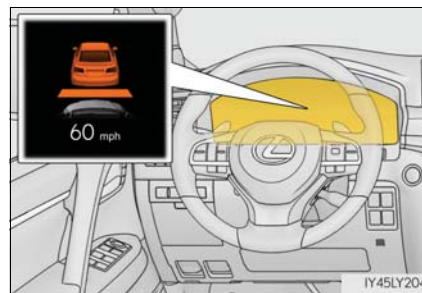

#### ■ Warnings may not occur when

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal

### Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar sensor, etc.

- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.

Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.



- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 25 mph [40 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

Adjusting the speed setting: →P. 280

Canceling and resuming the speed setting: →P. 282

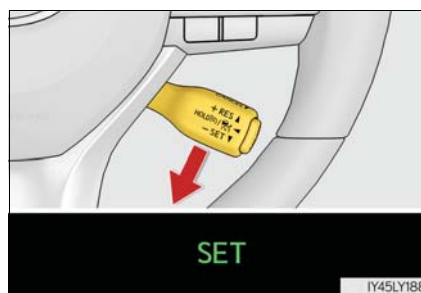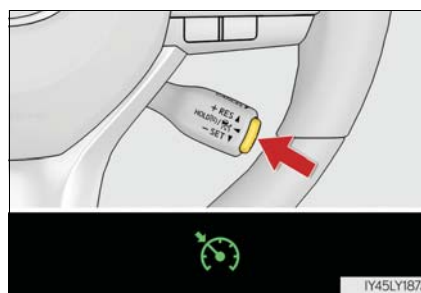

4

Driving

#### ■ Dynamic radar cruise control with full-speed range can be set when

- The shift lever is in D or range 4 or higher of S has been selected.
- Range 4 or higher of D has been selected by using the paddle shift switch (vehicles with paddle shift switches).
- Vehicle speed is at or above approximately 30 mph (50 km/h).  
However, when a preceding vehicle is detected, the dynamic radar cruise control with full-speed range can be set even if the vehicle speed is below approximately 30 mph (50 km/h).

#### ■ Accelerating after setting the vehicle speed

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

#### ■ When the vehicle stops while follow-up cruising

- Pushing the lever up while the vehicle ahead stops will resume follow-up cruising if the vehicle ahead starts off within approximately 3 seconds after the lever is pushed up.
- If the vehicle ahead starts off within 3 seconds after your vehicle stops, follow-up cruising will be resumed.

#### ■ Automatic cancelation of vehicle-to-vehicle distance control mode

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations:

- Actual vehicle speed falls below approximately 25 mph (40 km/h) when there are no vehicles ahead.
- The preceding vehicle leaves the lane when your vehicle is following at a vehicle speed at or below approximately 25 mph (40 km/h). Otherwise, the sensor can not properly detect the vehicle. ("CRUISE NOT AVAILABLE No Preceding Vehicles" is displayed on the multi-information display)
- VSC is activated.
- Active TRAC is activated for a period of time.
- When the VSC or Active TRAC system is turned off.
- When second start mode is set.
- The sensor cannot detect correctly because it is covered in some way.
- Pre-collision braking is activated.
- The parking brake is operated.
- The vehicle is stopped by system control on a steep incline.
- The following are detected when the vehicle has been stopped by system control:
  - The driver is not wearing a seat belt.
  - The driver's door is opened.
  - The vehicle has been stopped for about 3 minutes
- The switching operation continues for 5 seconds or more after the center differential lock switch has been operated.

If vehicle-to-vehicle distance control mode is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

#### ■ Automatic cancelation of constant speed control mode

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 10 mph (16 km/h) below the set vehicle speed.
- Actual vehicle speed falls below approximately 25 mph (40 km/h).
- VSC is activated.
- Active TRAC is activated for a period of time.
- When the VSC or Active TRAC system is turned off.
- Pre-collision braking is activated.
- The switching operation continues for 5 seconds or more after the center differential lock switch has been operated.

If constant speed control mode is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

#### ■ Brake system operation sound

If the brakes are applied automatically while the vehicle is in vehicle-to-vehicle distance control mode, a brake system operation sound may be heard. This does not indicate a malfunction.

#### ■ Warning messages and buzzers for dynamic radar cruise control with full-speed range


Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions.

#### ■ When the sensor may not be correctly detecting the vehicle ahead

In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.


As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 282) may not be activated.

- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

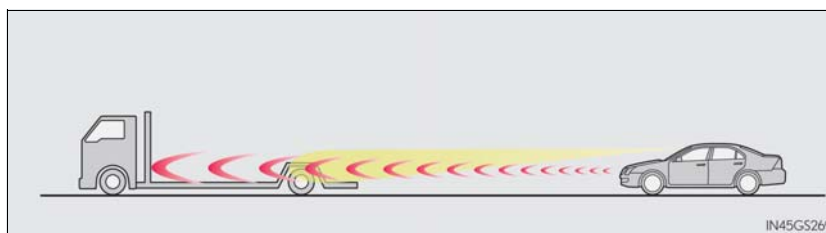


- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor

- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

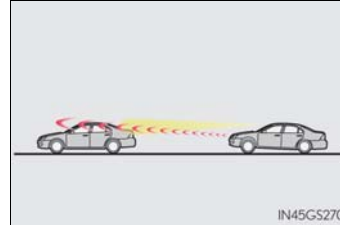

- Preceding vehicle has an extremely high ground clearance

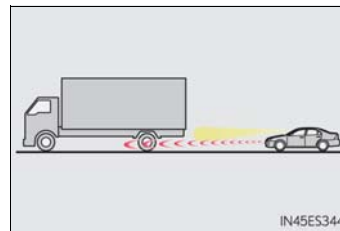


■ **Conditions under which the vehicle-to-vehicle distance control mode may not function correctly**


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

- When the road curves or when the lanes are narrow

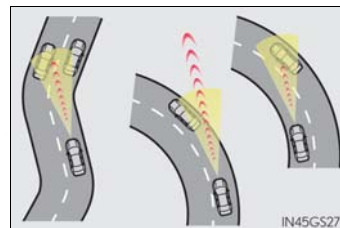

- When steering wheel operation or your position in the lane is unstable

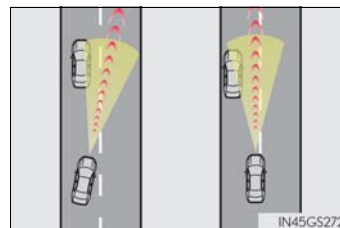


- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge
- While the vehicle speed is decreasing to the set speed after the vehicle accelerates by depressing the accelerator pedal

## Cruise control\*

### Summary of functions

Use the cruise control to maintain a set speed without depressing the accelerator pedal.


- ① Indicators
- ② Cruise control switch

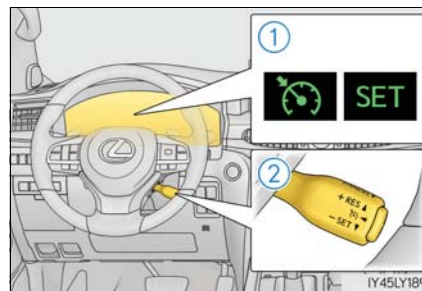

### Setting the vehicle speed


- 1 Press the "ON/OFF" button to activate the cruise control.

Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.

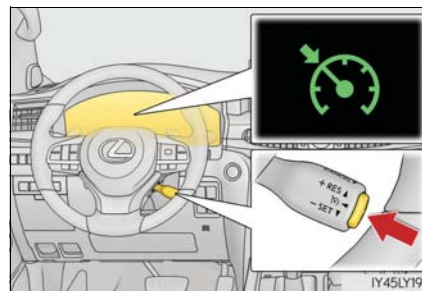

- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

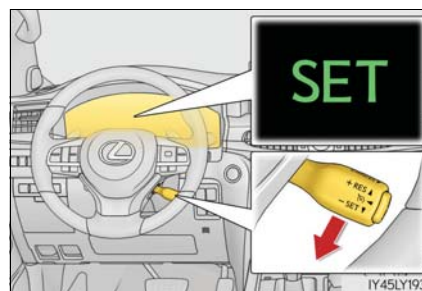

4

Driving

\*: If equipped


### Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

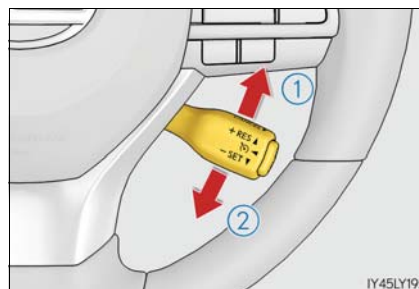

The set speed will be increased or decreased as follows:

Fine adjustment: By 1 mph (1.6 km/h)\*<sup>1</sup> or 1 km/h (0.6 mph)\*<sup>2</sup> each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

\*1: When the set speed is shown in "MPH"

\*2: When the set speed is shown in "km/h"


### Canceling and resuming the constant speed control

- ① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

- ② Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

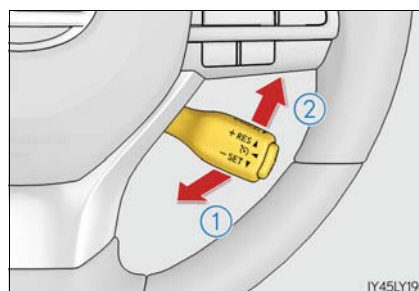

#### ■ Cruise control can be set when

- The shift lever is in the D or range 4 or higher of S has been selected.
- Range 4 or higher has been selected by using the paddle shift. (vehicles with paddle shift switches)
- Vehicle speed is above approximately 25 mph (40 km/h).

#### ■ Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

■ **Automatic cruise control cancelation**

Cruise control will stop maintaining the vehicle speed in any of the following situations:

- Actual vehicle speed falls more than approximately 10 mph (16 km/h) below the preset vehicle speed.  
At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 25 mph (40 km/h).
- VSC is activated.
- Active TRAC is activated for a period of time.
- The switching operation continues for 5 seconds or more after the center differential lock switch has been operated.
- When the VSC or Active TRAC system is turned off.

■ **If “Cruise Control Malfunction Visit Your Dealer” is shown on the multi-information display**

Press the “ON/OFF” button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Lexus dealer.



**WARNING**

■ **To avoid operating the cruise control by mistake**

Switch the cruise control off using the “ON/OFF” button when not in use.

■ **Situations unsuitable for cruise control**


Do not use cruise control in any of the following situations.

Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills  
Vehicle speed may exceed the set speed when driving down a steep hill.
- When your vehicle is towing a trailer or during emergency towing

## Driving mode select switch

The driving modes can be selected to suit driving condition.

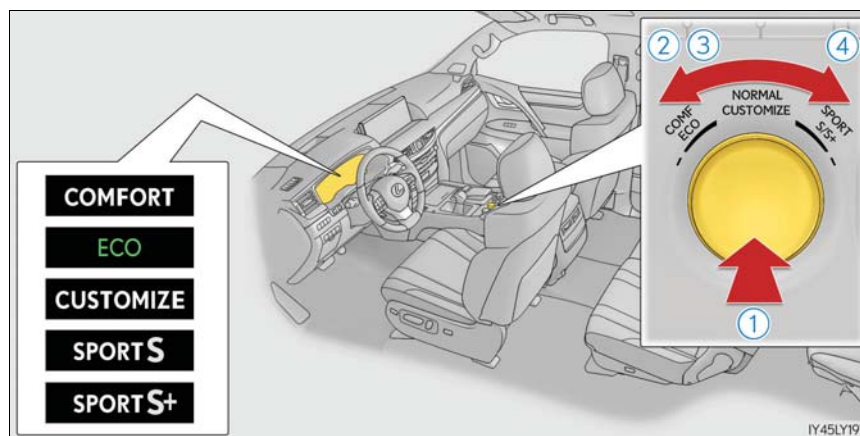

### ① Normal mode/Customized mode

Normal mode and customized mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and customized mode. When customized mode is selected, the "CUSTOMIZE" indicator will be illuminated.

Press the switch to change the driving mode to normal mode when not in normal mode.

- Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- Customized mode

Allows you to drive with the following functions set to your preferred settings.

Customized mode settings can only be changed on the drive mode customization display of the Remote touch screen. (→P. 584)

| Function                | Setting |
|-------------------------|---------|
| Powertrain              | Normal  |
|                         | Power   |
|                         | Eco     |
| Chassis                 | Normal  |
|                         | Sport   |
| Air conditioning system | Normal  |
|                         | Eco     |

#### ② Comfort mode

By controlling the suspension, riding comfort is further enhanced. Suitable for city driving.

When not in comfort mode and the driving mode select switch is turned to the left, the "COMFORT" indicator comes on in the multi-information display.

#### ③ Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When in comfort mode, if the driving mode select switch is turned to the left, the "ECO" indicator will come on in the multi-information display.

#### ④ Sport mode

##### • SPORT S mode

Controls the transmission and engine to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.

When not in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S" indicator will come on in the multi-information display.

##### • SPORT S+ mode

Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the transmission and engine. Suitable for sportier driving.

When in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S+" indicator will come on in the multi-information display.

**■ Operation of the air conditioning system in Eco drive mode**

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, adjust the fan speed or turn off eco mode of the air conditioning system. (→P. 405)

**■ Automatic deactivation of sport mode and customized mode**

If the engine switch is turned off after driving in sport mode or customized mode, the drive mode will be changed to normal mode.

**■ Driving mode pop-up display**


When the driving mode is changed, the selected driving mode will be temporarily displayed on the side display. (→P. 398)

## Intuitive parking assist

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, the remote touch screen, and a buzzer. Always check the surrounding area when using this system.

### Types of sensors

- ① Front corner sensors
- ② Front center sensors
- ③ Rear corner sensors
- ④ Rear center sensors

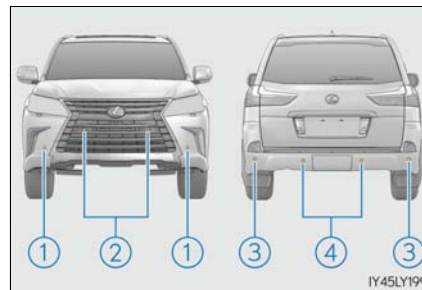


### Intuitive parking assist switch

#### On/off

To turn the system on, press the switch. The indicator light comes on and the buzzer sounds to inform the driver that the system is operational.

To turn the system off, press the switch again.

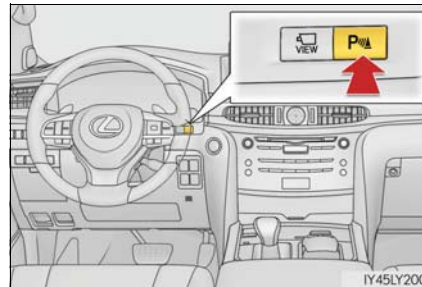


## Display

When the sensors detect an obstacle, a graphic is shown on the multi-information display and the remote touch screen depending on the position and distance to the obstacle.

### ► Multi-information display

- ① Front corner sensor operation
- ② Front center sensor operation
- ③ Rear corner sensor operation
- ④ Rear center sensor operation

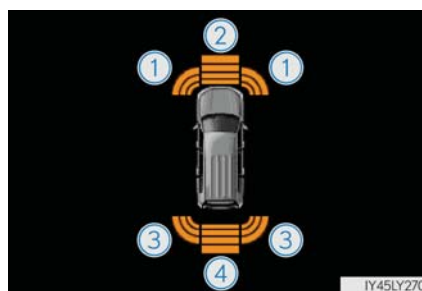


### ► Remote touch screen

- ① Intuitive parking assist
- ② Rear Cross Traffic Alert (if equipped)

A graphic is automatically displayed on the side display when an obstacle is detected. The screen can be set so that the graphic is not displayed.



: Select to mute the buzzer sounds.

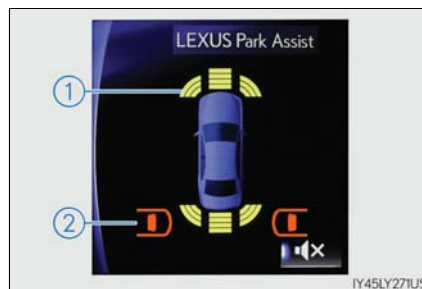

### Sensor detection display, obstacle distance

#### ■ Distance display

Sensors that detect an obstacle will illuminate continuously or blink.

| Multi-information display                                                                           | Remote touch screen                                                                                 | Approximate distance to obstacle                               |                                        |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------|----------------------------------------|
|                                                                                                     |                                                                                                     | Corner sensor/<br>front center sensor                          | Rear center sensor                     |
| <br>(continuous)   | <br>(continuous)   | Front center sensor:<br>3.3 ft. (100 cm) to<br>2.0 ft. (60 cm) | 4.9 ft. (150 cm) to<br>2.6 ft. (80 cm) |
| <br>(continuous)  | <br>(continuous)  | 2.0 ft. (60 cm) to<br>1.5 ft. (45 cm)                          | 2.6 ft. (80 cm) to<br>2.1 ft. (65 cm)  |
| <br>(continuous) | <br>(continuous) | 1.5 ft. (45 cm) to<br>1.1 ft. (35 cm)                          | 2.1 ft. (65 cm) to<br>1.6 ft. (50 cm)  |
| <br>(blinking)   | <br>(continuous) | Less than<br>1.1 ft. (35 cm)                                   | Less than<br>1.6 ft. (50 cm)           |

### ■ Buzzer operation and distance to an obstacle

A buzzer sounds when the sensors are operating.


- The buzzer sounds faster as the vehicle approaches an obstacle.  
When the vehicle comes within the following distance of the obstacle, the buzzer sounds continuously.
  - Front center sensors: Approximately 1.1 ft. (35 cm)
  - Corner: Approximately 1.1 ft. (35 cm)
  - Rear center sensors: Approximately 1.6 ft. (50 cm)
- When 2 or more obstacles are detected simultaneously, the buzzer system responds to the nearest obstacle. If one or both come within the above distances, the beep will repeat a long tone, followed by fast beeps.
- You can change the volume of the warning beeps. (→P. 297)

### Detection range of the sensors

- ① Approximately 3.3 ft. (100 cm)
- ② Approximately 4.9 ft. (150 cm)
- ③ Approximately 2.0 ft. (60 cm)
- ④ Approximately 2.0 ft. (60 cm)

The diagram shows the detection range of the sensors. Note that the sensors may not be able to detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.

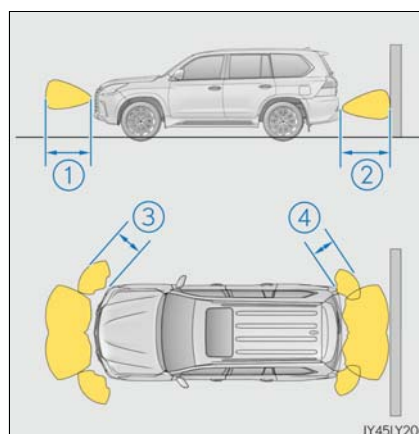

### Setting up intuitive parking assist

You can change the buzzer sound volume and the screen operating conditions.

- 1 Press the "SETUP" button.
- 2 Select "Vehicle", and then select "LEXUS Park Assist"/"LEXUS Park Assist Settings" on the screen.
- 3 Select the desired item.
  - ① The buzzer sound volume can be adjusted.
  - ② On or off can be selected for intuitive parking assist display.
  - ③ Front or rear center sensors display and tone indication can be set.



### ■ The intuitive parking assist can be operated when

- Front corner sensors:
  - The engine switch is in IGNITION ON mode.
  - The shift lever is in a position other than P.
  - The vehicle speed is less than approximately 6 mph (10 km/h).  
(At any speed when the shift lever is in R)
- Front center sensors:
  - The engine switch is in IGNITION ON mode.
  - The shift lever is in a position other than P or R.
  - The vehicle speed is less than about 6 mph (10 km/h).
- Rear corner and rear center sensors:
  - The engine switch is in IGNITION ON mode.
  - The shift lever is in R.

### ■ Intuitive parking assist display

When an obstacle is detected while the rear view monitor system, Lexus parking assist monitor or Multi-terrain Monitor is in use, the warning indicator will appear in the upper corner of the screen even if the display setting has been set to off.

### ■ Sensor detection information

- The sensor's detection areas are limited to the areas around the vehicle's bumper.
  - Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an obstacle. Particular instances where this may occur are listed below.
    - There is dirt, snow or ice on the sensor. (Wiping the sensors will resolve this problem.)
    - The sensor is frozen. (Thawing the area will resolve this problem.)  
In especially cold weather, if a sensor is frozen the screen may show an abnormal display, or obstacles may not be detected.
    - The sensor is covered in any way.
    - The vehicle is leaning considerably to one side.
    - On an extremely bumpy road, on an incline, on gravel, or on grass.
    - The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
    - There is another vehicle equipped with parking assist sensors in the vicinity.
    - The sensor is coated with a sheet of spray or heavy rain.
    - The vehicle is equipped with a fender pole or wireless antenna.
    - The bumper or sensor receives a strong impact.
    - The vehicle is approaching a tall or curved curb.
    - In harsh sunlight or intense cold weather.
    - The area directly under the bumpers is not detected.
    - If obstacles draw too close to the sensor.
    - A non-genuine Lexus suspension (lowered suspension etc.) is installed.
    - People may not be detected if they are wearing certain types of clothing.
- In addition to the examples above, there are instances in which, because of their shape, signs and other objects may be judged by a sensor to be closer than they are.

- The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:
  - Wires, fences, ropes, etc.
  - Cotton, snow and other materials that absorb sound waves
  - Sharply-angled objects
  - Low obstacles
  - Tall obstacles with upper sections projecting outwards in the direction of your vehicle
- The following situations may occur during use.
  - Depending on the shape of the obstacle and other factors, the detection distance may shorten, or detection may be impossible.
  - Obstacles may not be detected if they are too close to the sensor.
  - There will be a short delay between obstacle detection and display. Even at slow speeds, there is a possibility that the obstacle will come within the sensor's detection areas before the display is shown and the buzzer sounds.
  - Thin posts or objects lower than the sensor may not be detected when approached, even if they have been detected once.
  - It might be difficult to hear beeps due to the volume of audio system or air flow noise of the air conditioning system.
- **If “Clean Parking Assist Sensor” is displayed on the multi-information display**  
 A sensor may be dirty or covered with snow or ice. In such cases, if it is removed from the sensor, the system should return to normal.  
 Also, due to the sensor being frozen at low temperatures, a malfunction display may appear or an obstacle may not be detected. If the sensor thaws out, the system should return to normal.
- **If “Parking Assist Malfunction” is displayed on the multi-information display**  
 Depending on the malfunction of the sensor, the device may not be working normally. Have the vehicle inspected by your Lexus dealer.
- **Certification for the intuitive parking assist (Canada only)**  
 This ISM device complies with Canadian ICES-001.
- **Customization**  
 Settings (e.g. buzzer sounds volume) can be changed.  
 (Customizable features: →P. 584)

**WARNING****■ When using the intuitive parking assist**

Observe the following precautions.

Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 6 mph (10 km/h).
- The sensors' detection areas and reaction times are limited. When moving forward or reversing, check the areas surrounding the vehicle (especially the sides of the vehicle) for safety, and drive slowly, using the brake to control the vehicle's speed.
- Do not install accessories within the sensors' detection areas.

**NOTICE****■ When using intuitive parking assist**

In the following situations, the system may not function correctly due to a sensor malfunction etc. Have the vehicle checked by your Lexus dealer.

- A buzzer does not sound when you turn the intuitive parking assist on.
- The intuitive parking assist operation display flashes, and a buzzer sounds when no obstacles are detected.
- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper collides with something.
- If the display shows continuously without a buzzer.
- If a display error occurs, first check the sensor.  
If the error occurs even if there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.

**■ Notes when washing the vehicle**


Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

## 4-Wheel AHC (Active Height Control Suspension)

The 4-Wheel AHC adjusts the vehicle height in accordance with driving conditions. There are 3 selectable modes, “HI” (high), “N” (normal), and “LO” (low).

- ① Easy access mode switch
- ② Height control OFF switch
- ③ Height select switch

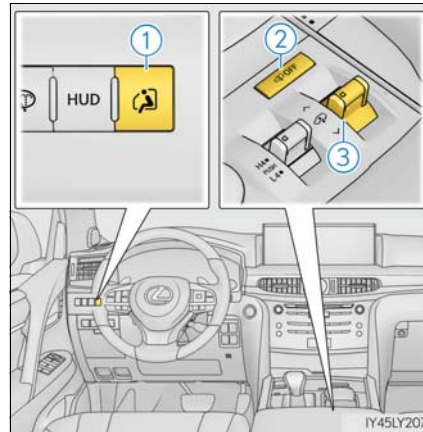


4

Driving

### Selecting vehicle height

- ① Higher
- ② Lower

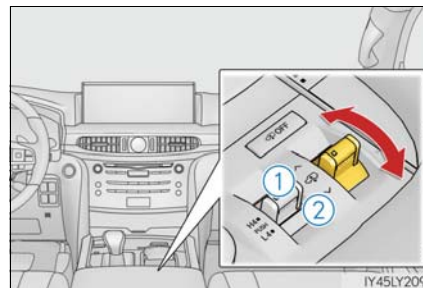

## Display

### ① Current mode

The vehicle is in the N (normal) height mode in the illustration.  and  show directions in which it is possible to adjust the vehicle height.

### ② Height up

### ③ Height down

### ④ Height control "OFF" indicator

When the height control "OFF" indicator is displayed, the vehicle height will not change even if the height select switch is operated.



## Vehicle height modes

Push the height select switch to "∧" to step up one height mode, and pull to "∨" to step down one height mode. (Ex. When in the low height mode, push to "∧" once to switch to the normal height mode, and twice to switch to the high height mode.)

### ■ "HI" (high) height mode

Vehicle height is about 2.0 in. (50 mm) higher at the front, and about 2.4 in. (60 mm) higher at the rear than the normal mode height.

This mode is suitable when driving on bumpy roads or through water.

High height mode is only available when the vehicle speed is under 18 mph (30 km/h).

### ■ N (normal) height mode

The standard vehicle height. This mode is suitable for ordinary driving.

When driving at high speeds, the vehicle height is automatically lowered by 0.8 in. (20 mm) in the front and 0.6 in. (15 mm) in the rear, to ensure excellent aerodynamic characteristics and stability.

If the vehicle speed drops, normal height mode is automatically resumed.

### ■ "LO" (low) height mode

Vehicle height is about 2.4 in. (60 mm) lower at the front, and about 1.6 in. (40 mm) lower at the rear than the normal mode height.

This mode allows easy access to the vehicle.

Low height mode is only available when the vehicle is travelling at 7 mph (12 km/h) or less. When the vehicle speed exceeds 7 mph (12 km/h), normal height mode is automatically selected.

### Conditions for changing the vehicle height mode

Some modes may not be selectable depending on the vehicle speed when the four-wheel drive control switch is in the H4 position. Refer to the following table.

|                                     | Low mode | Normal mode | High mode |
|-------------------------------------|----------|-------------|-----------|
| Under 7 mph (12 km/h)               | Yes      | Yes         | Yes       |
| 7 mph (12 km/h) to 18 mph (30 km/h) | No       | Yes         | Yes       |
| 18 mph (30 km/h) or over            | No       | Yes         | No        |

### Easy access mode

You can select this mode for easy access and easy loading of the vehicle.

If the engine switch is turned off within approximately 30 seconds after the vehicle is stopped while easy access mode is on, the vehicle height is lowered automatically.

When the vehicle begins to lower a beep will sound twice, and while the vehicle is lowering the indicator light will flash to alert the driver and surrounding people that the vehicle is lowering.


The indicator light stops blinking, and comes on continuously to indicate that the shift is completed.

Easy access mode is available if the following conditions have been met:

- The vehicle height mode is in normal mode.
- The vehicle is stopped on a flat surface.
- The shift lever is in P.
- The side doors and back door are not opened after the vehicle is stopped.

The following method will cancel the vehicle lowering operation and raise the vehicle again:


- Press the height control OFF switch.
- Push the height select switch to “^”.

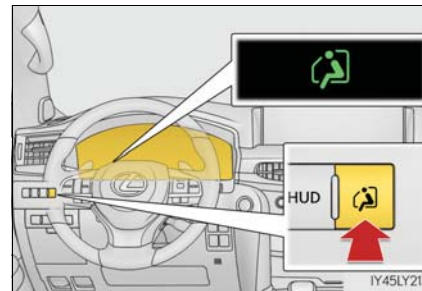

### Disabling the height control

When the height control OFF switch is pressed with the vehicle stopped.

The height control "OFF" indicator will appear on the multi-information display, and the vehicle height will be fixed in the current mode. Push the switch again to turn the system back on.

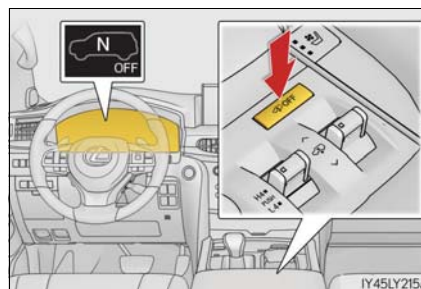

#### ■ Operating conditions

- The engine must be running.
- Vehicle height control must be turned off.
- All side doors and the back door must be closed.

#### ■ Switching vehicle height mode while the engine is stopped

- If the engine is stopped while the vehicle height is being lowered, lowering will continue.
- If any luggage is removed from the vehicle or if any occupants leave the vehicle within approximately 30 seconds of the engine switch being turned off, the vehicle height may be lowered by the auto leveling function.
- Operating the height select switch will have no effect while the engine is stopped.

#### ■ Automatic change in vehicle height when the four-wheel drive control switch is in the L4 position

If the vehicle speed exceeds 2 mph (3 km/h) while driving on an uneven road with the four-wheel drive control switch in the "L4" position, high mode is automatically selected. (On even roads, the height mode will not change.)

#### ■ Automatic change in vehicle height when in the high mode

- If the vehicle speed exceeds 18 mph (30 km/h) with the four-wheel drive control switch in the "H4" position, normal mode is automatically selected.
- If the vehicle speed exceeds 30 mph (50 km/h) with the four-wheel drive control switch in the "L4" position, the vehicle height is lowered to 1.0 in. (25 mm) higher than the normal mode height. If the vehicle speed drops to 13 mph (20 km/h) or less, high mode is automatically resumed.

### ■ Extra high mode

If the vehicle becomes stuck or the Crawl Control system requests the vehicle height be raised, extra high mode may be automatically selected when the vehicle height is in high mode with the four-wheel drive control switch in the L4 position.

The vehicle height is raised to 0.8 in. (20 mm) higher than the high mode height, or slightly higher.

- Extra high mode will change back to high mode when:
  - The vehicle speed exceeds 6 mph (10 km/h)
  - The four-wheel drive control switch is shifted to H4.
- If you pull the height select switch to "v" when in extra high mode, normal mode is selected.
- Extra high mode cannot be manually selected.

### ■ Turning off the height control

- The system will remain off until the height control "OFF" switch is pushed again, even if the engine switch is turned off.
- Even if the system is turned off, the system will intervene automatically if the vehicle speed exceeds the following.
  - 18 mph (30 km/h) with high or low mode
  - 50 mph (80 km/h) with normal mode

### ■ Automatic leveling function

The vehicle is adjusted to a fixed height for each mode, regardless of the number of occupants and the luggage load.

- However the vehicle cannot be raised if the vehicle load exceeds the following limits:
  - Up to 4 occupants\* plus approximately 661 lb. (300 kg) in the normal mode
  - Up to 4 occupants\* plus approximately 441 lb. (200 kg) in the high mode
- \*: average weight 150 lb. (68 kg) per person
- If the vehicle height cannot be raised when in the normal mode, and "LO" appears on the display, the vehicle is loaded too heavily. Take extra care when driving in this condition.
 

If the vehicle height cannot be raised even after unloading the vehicle, pull the height select switch to "v" then push to "Λ". If the vehicle height still cannot be raised, turn the ignition off then on again, then try once more.

### ■ When the vehicle is stopped during driving

The activation of the automatic leveling function may cause the vehicle height to change. This is not a malfunction.

### ■ If the vehicle height does not change

If the vehicle is loaded too heavily, or the undercarriage has come into contact with the road surface, the vehicle height cannot be raised/lowered.

**■ In the following cases the 4-Wheel AHC will not operate**

- The brake pedal has been depressed for a few seconds or longer while the vehicle is stopped.
- Vehicle height control has not been frequently used.
- The suspension fluid temperature is lower than -22°F (-30°C).
- There is ice on the suspension.
- Driving on bumpy roads which may cause the suspension to fully elongate.
- If the steering wheel is abruptly turned more than 3/4 of a revolution with the center differential lock system activated.

**■ Cold weather operation**

It may take longer for the vehicle height to change if the suspension fluid temperature drops below 5°F (-15°C).

The 4-Wheel AHC does not operate when the suspension fluid temperature drops below -22°F (-30°C).

- In this case, even if the height select switch is pressed, the vehicle height will not change. Once the vehicle has been driven for a short time and the suspension fluid has been warmed to within normal operating limits, the 4-Wheel AHC will begin operating and the vehicle height will automatically change to the selected mode.
- When the suspension fluid is around -22°F (-30°C), the vehicle height may not be able to be raised, even if the 4-Wheel AHC is operating. In this case, pull the height select switch to "v" then push to "Λ" after driving for a short time longer to select the desired vehicle height.

**■ Parking and stopping tips**

- If you immediately stop the engine after off-road driving, the vehicle height may gradually lower. When parking, make sure there is nothing under the vehicle that may come in contact with the underbody. The vehicle will return to the set height when the engine is started.
- The vehicle height may change as the temperature changes when the engine is stopped. The vehicle will return to the set height when the engine is started.

**■ Propeller shaft noise**

If the vehicle height is adjusted on a slope, or with the shift lever in a position other than P or N while the vehicle is stopped, you may hear a sound caused by the expansion and contraction of the propeller shaft. This does not indicate a malfunction.

**■ 4-Wheel AHC failure warning**

If a malfunction occurs in the 4-Wheel AHC, normal mode is automatically selected. However, the system may not switch to normal mode depending on the location of the malfunction.

The warning message is displayed on the multi-information display, and the 4-Wheel AHC cannot be activated until the malfunction is corrected.

Stop the engine and start it again. If the warning message turns off, the system is operating correctly. If the warning message continues to be displayed, have the vehicle checked at your Lexus dealer as soon as possible.

**WARNING****■ When switching the vehicle height mode**

Before lowering the vehicle height, check that there are no people under or around the vehicle, and check for obstacles.

If you do not do this, body parts may be caught in the vehicle, possibly leading to an accident.

**■ Using the high mode**

The high mode should only be used when driving on rough roads, for example when driving off-road. Because the vehicle's center of gravity will become higher when in the mode, the vehicle may become unstable when turning abruptly, resulting in an accident.

**■ When jacking up the vehicle or installing tire chains**

Turn off the height control and stop the engine, otherwise the vehicle height may change due to the automatic leveling function and you may catch part of your body in the vehicle, resulting in an accident.

**■ When crossing rivers**

Select the high mode and turn off the height control. Drive at 18 mph (30 km/h) or lower. Otherwise the vehicle height may change due to the automatic leveling function, resulting in an accident.

**■ If your vehicle must be towed**

Put the vehicle height in the normal mode and turn off the height control, otherwise the vehicle height may change due to the automatic leveling function and you may catch part of your body in the vehicle, resulting in an accident.

**■ If your vehicle becomes stuck in a ditch**

Turn off the height control, otherwise the vehicle height may change due to the automatic leveling function, resulting in an accident.

**■ When loading cargo on the roof luggage carrier**

Do not switch to high mode. Sudden steering could cause the vehicle to lose stability due to the vehicle's higher center of gravity, possibly leading to an accident.



## NOTICE

**■ When parking in areas with limited overhead height**

After leaving the vehicle or unloading the luggage, the vehicle height may be slightly higher than normal. Take care when overhead height is limited.

**■ To avoid damage to the vehicle**

- Normal mode will be switched to automatically even if the vehicle is started off in low mode. Take care when overhead height is limited.
- Do not select the low mode when driving on bumpy roads, as the underbody of the vehicle may contact the road surface.
- When traveling on bumpy roads or through water, or when towing, turn off easy access mode.

**■ Avoid rapid changes to the vehicle height**

As the pump may overheat. Leave at a few seconds between selections when changing the vehicle height mode.

## Four-wheel drive system

Use the four-wheel drive control switch and center differential lock/unlock switch to select the following transfer and center differential modes.

### Four-wheel drive control switch

- ① H4 (high speed position)  
Normal driving on all types of roads.
- ② L4 (low speed position)  
Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.  
The low speed four-wheel drive indicator will come on.



4

Driving


### Center differential lock/unlock switch

Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

The center differential lock indicator will come on.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

To unlock the center differential, push the switch again.

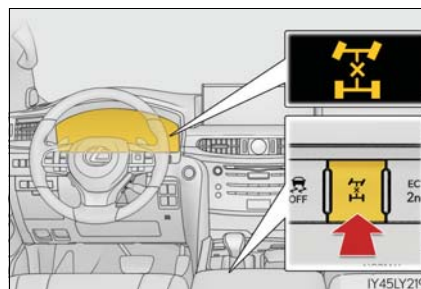

### Shifting between H4 and L4

#### ■ Shifting from H4 to L4

- 1 Stop the vehicle completely with brake pedal held down.
- 2 Shift the shift lever to N.
- 3 Push and shift the four-wheel drive control switch to L4.

Maintain this condition until the low speed four-wheel drive indicator turns on.

#### ■ Shifting from L4 to H4

- 1 Stop the vehicle completely with brake pedal held down.
- 2 Shift the shift lever to N.
- 3 Push and shift the four-wheel drive control switch to H4.

Maintain this condition until the low speed four-wheel drive indicator turns off.

#### ■ The four-wheel drive control switch can be operated when

- The engine switch is in IGNITION ON mode.
- The shift lever is in the N position.
- The vehicle is stopped completely.

#### ■ The low speed four-wheel drive indicator light

The indicator light blinks while shifting between H4 and L4.

#### ■ Advice for driving on slippery roads

- If you shift the four-wheel drive control switch to L4 and the shift lever to the 2 range of S or D (vehicles with paddle shift switches) while driving in steep off-road areas, the output of the brake can be controlled effectively by the Active TRAC, which assists the driver to control the driving power of 4 wheels.
- Use the 1 range of S or D (vehicles with paddle shift switches) for maximum power and traction when your wheels get stuck or when driving down a steep incline.

■ **The center differential lock indicator light**

The indicator light blinks while locking/unlocking the center differential.

■ **The center differential lock/unlock switch can be operated when**

- The engine switch is in IGNITION ON mode.
- The vehicle speed is less than 62 mph (100 km/h).

■ **Locking/unlocking the center differential**

- When the four-wheel drive control switch is in L4 with the center differential locked, VSC is automatically turned off. (The center differential lock and VSC OFF indicator lights come on.)
- If the operation is not completed, the center differential lock indicator blinks. If the indicator light does not turn off when unlocking the center differential, drive straight ahead while accelerating or decelerating, or drive in reverse.
- If the center differential lock/unlock is not completed within 5 seconds while the cruise control system is on, cancel the cruise control system.

■ **If the low speed four-wheel drive indicator light or the center differential lock indicator light blinks**

- If the low speed four-wheel drive indicator light continues to blink when using the four-wheel drive control switch, stop the vehicle completely, move the shift lever to N and operate the switch again.
- If the shift lever is moved before the low speed four-wheel drive indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.)  
Therefore, the vehicle is free to roll even if the automatic transmission is in P. You or someone else could be seriously injured. You must complete the shifting of the transfer mode.  
To complete the shifting, stop the vehicle completely, return the shift lever to N, and confirm that the shift was completed (the indicator turns on/off).
- If the engine coolant temperature is too low, the four-wheel drive control system may not be able to shift. When the engine is warmer operate the switch again.

If the low speed four-wheel drive indicator light or the center differential lock indicator light continues to blink even after attempting the above, there may be a malfunction in the engine, the brake system or the four-wheel drive system. In this case, you may not be able to shift between H4 and L4, and the center differential lock may not be operable. Have the vehicle inspected by your Lexus dealer immediately.

**WARNING****■ While driving**

Never move the four-wheel drive control switch if the wheels have lost traction. Doing so may cause an accident resulting in death or serious injury.

**■ When the vehicle is parked**

If the shift lever is moved before the low speed four-wheel drive indicator turns on/off, the transfer mode may not be shifted completely. The transfer mode disengages both the front and rear driveshafts from the powertrain and allows the vehicle to move regardless of the shift position. (At this time, the indicator blinks and the buzzer sounds.)

Therefore, the vehicle is free to roll even if the automatic transmission is in P. You or someone else could be seriously injured. You must complete the shifting of the transfer mode.

**NOTICE****■ To prevent damage to the center differential**

- For normal driving on dry and hard surface roads, unlock the center differential.
- Unlock the center differential after the wheels are out of the ditch or off the slippery or bumpy surface.
- Do not push the center differential lock/unlock switch when the vehicle is turning or when its wheels are spinning freely off the ground.

## Crawl Control (with Turn Assist function)

Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Minimizes loss of traction or vehicle slip when driving on slippery road surfaces, allowing for stable driving.


### Crawl Control switches

- ① ON/OFF switch
- ② Speed selection switch
- ③ Indicators

The Crawl Control indicator is lit and the slip indicator flashes when operating.

- ④ Multi-information display

The operating status and speed select status of the Crawl Control are shown on the multi-information display.

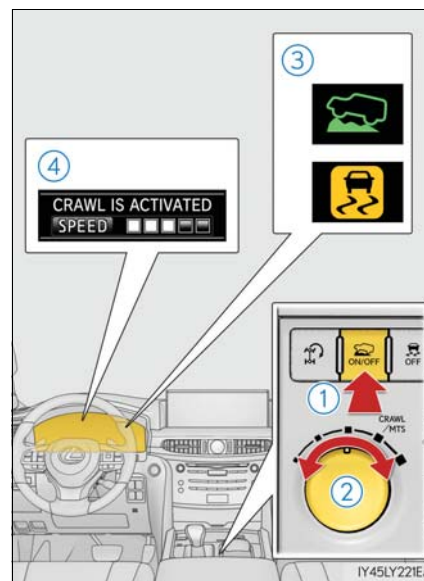


4

Driving

### Speed modes

The following table shows some typical terrains and the recommended speed modes.

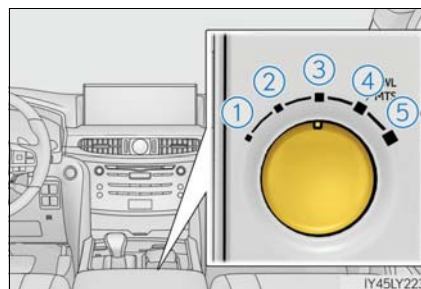

| Mode |        | Road condition                                                   |
|------|--------|------------------------------------------------------------------|
| ①    | Lo     | Rock, mogul (downhill) and gravel (downhill)                     |
| ②    | Lo-Med | Mogul (uphill)                                                   |
| ③    | Med    |                                                                  |
| ④    | Med-Hi | Snow, mud, gravel (uphill), sand, dirt, mogul (uphill) and grass |
| ⑤    | Hi     |                                                                  |


### Turn Assist function

This function assists cornering performance in accordance with steering operation when driving through a tight corner. It maintains vehicle speed while driving and reduces the number of turns needed to navigate a corner that requires turning the wheel in the opposite direction.

Press the Turn Assist switch while Crawl Control is operating.

Turn Assist indicator will come on.

To turn the system off, press the switch again.

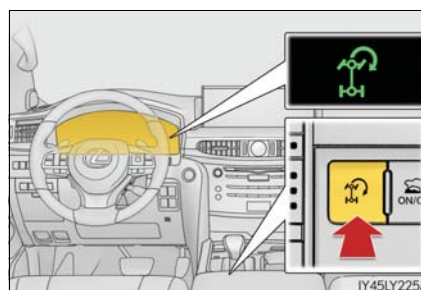

### When the system is turned off

#### ► Crawl Control

Press the ON/OFF switch while Crawl Control is operating. If the switch is turned off, the slip indicator and the Turn Assist indicator will go off (if the Turn Assist function is in use), the Crawl Control indicator will flash until the system has turned off completely, and a message stating that Crawl Control has been turned off will be displayed on the multi-information display for several seconds. When turning off Crawl Control while driving, stop the vehicle before the Crawl Control indicator turns off, or drive extremely carefully.

#### ► Turn Assist function

Press the Turn Assist switch while the Turn Assist function is operating. When the switch is pressed, the Turn Assist indicator will go off, and a message stating that the Turn Assist function has been turned off will be displayed on the multi-information display for several seconds.

### ■ The Crawl Control and Turn Assist function can be operated when

#### ► Crawl Control

- The engine is running.
- The shift lever is in any gear other than P or N.
- The four-wheel drive control switch is in L4.
- The driver's door is closed.

#### ► Turn Assist function

- Crawl Control is operating.
- The center differential is not locked.
- The accelerator and brake are not being operated.
- The shift lever is in any gear other than P, R or N.
- The steering wheel is turned very far.

#### ■ Automatic system cancelation

##### ► Crawl Control

In the following situations, the buzzer will sound intermittently and Crawl Control will be canceled automatically. In this event, the Crawl Control indicator will flash and then go off, the Turn Assist indicator will go off (if the Turn Assist function is in use), and a message stating that Crawl Control has been turned off will be displayed on the multi-information display for several seconds.

- When the shift lever is moved to P or N.
- When the four-wheel drive control switch is in H4.
- When the driver's door is opened.

##### ► Turn Assist function

When the center differential is locked, the buzzer will sound intermittently and the Turn Assist function will be canceled automatically. In this event, the Turn Assist indicator will go off, and a message stating that the Turn Assist function has been turned off will be displayed on the multi-information display for several seconds.

#### ■ Function limitations

##### ► Crawl Control

- In the following situations, brake control can be used to drive downhill at a constant speed. However, engine control is not available when driving uphill at a constant speed.
  - When switched to second start mode.
- In the following situation, engine control and brake control will stop temporarily. In this event, the Crawl Control indicator will flash.
  - When the vehicle speed exceeds approximately 15 mph (25 km/h).

##### ► Turn Assist function

In the following situations, the Turn Assist function will stop temporarily. In this event, the Turn Assist indicator will flash.

- When the vehicle speed exceeds approximately 6 mph (10 km/h).
- When the shift lever is moved to R.

#### ■ When the Crawl Control system is operated continuously

- If Crawl Control is used continuously for a long time, the buzzer will sound, a malfunction notification will be displayed on the multi-information display, the Crawl Control indicator will go off, and Crawl Control will be temporarily inoperable as a result of the brake system overheating. In this event, stop the vehicle immediately in a safe place, and allow the brake system to cool down sufficiently until the TRAC OFF indicator goes off. (In the meantime, normal driving is possible.)
- If Crawl Control is used continuously for a long time, the buzzer will sound, the system will be temporarily canceled, and a malfunction notification will be displayed on the multi-information display as a result of the automatic transmission system overheating. Stop the vehicle in a safe place until the display goes off.

#### ■ When depressing the accelerator pedal while the Crawl Control is operating

Multi-terrain Select operates in AUTO mode. (→P. 319)

- Sounds and vibrations caused by the Crawl Control system
 
  - A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in Crawl Control system.
  - Either of the following conditions may occur when the Crawl Control system is operating. None of these are indicators that a malfunction has occurred.
    - Vibrations may be felt through the vehicle body and steering.
    - A motor sound may be heard after the vehicle comes to a stop.
- When there is a malfunction in the system
 

Warning lights and/or warning messages will turn on. (→P. 523, 531)


**WARNING**

■ When using Crawl Control and Turn Assist function
 

Do not rely solely on the Crawl Control and Turn Assist function. This function does not extend the vehicle's performance limitations. Always thoroughly check the road conditions, and drive safely.

■ These conditions may cause the system not to operate properly
 

When driving on the following surfaces, the system may not be able to maintain a fixed low speed, which may result in an accident:

- Extremely steep inclines.
- Extremely uneven surfaces.
- Snow-covered roads, or other slippery surfaces.


**NOTICE**

■ When using Turn Assist function
 

The Turn Assist function is a function to assist turning performance when driving off road. The function may be less effective on paved road surfaces.

## Multi-terrain Select

**Multi-terrain Select is a system that helps drivability in off-road situations.**

- ▶ When the Crawl Control is turned off

Select a mode that most closely matches the type of terrain on which you are driving from among 5 modes.

Brake control can be optimized in accordance with the selected mode.


- ▶ When the Crawl Control is turned on

A mode which matches the road conditions is automatically selected by depressing the accelerator pedal (AUTO mode).

### Multi-terrain Select switch/indicators

- ① Multi-terrain Select mode selector switch
- ② Multi-terrain Select indicator
- ③ Multi-information display


Displays status information including operating status and road type selection.

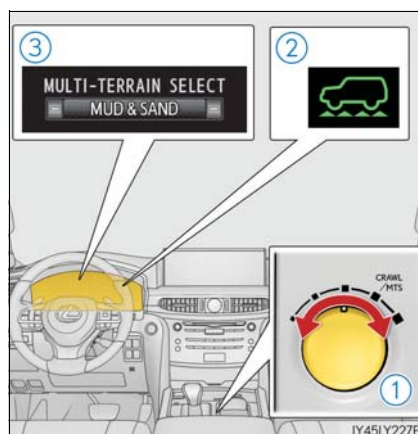

### Selectable modes

When the Crawl Control is turned off, a mode which matches the road conditions can be selected from among the following 5 modes.

- ① MUD & SAND
- ② LOOSE ROCK
- ③ MOGUL
- ④ ROCK & DIRT
- ⑤ ROCK

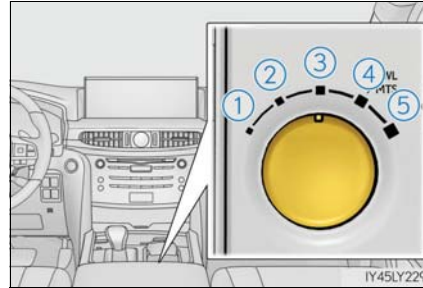

| Mode        | Road Conditions                                                                                               |
|-------------|---------------------------------------------------------------------------------------------------------------|
| MUD & SAND  | Suitable for muddy roads, sandy roads, snow-covered roads, dirt trails and other slippery or dirty conditions |
| LOOSE ROCK  | Suitable for slippery conditions consisting of mixtures of earth and loose rock                               |
| MOGUL       | Suitable for a wide range of off-road conditions, particularly very bumpy conditions                          |
| ROCK & DIRT | Suitable for very bumpy road conditions, such as mogul or rocky roads.                                        |
| ROCK        | Suitable for rocky terrain                                                                                    |

When the Crawl Control is turned on, the most suitable mode is automatically selected according to the Crawl Control mode selected.

### Multi-terrain Select control starting conditions


When all of the following conditions are satisfied, the Multi-terrain Select indicator will come on, the mode select screen will be displayed on the multi-information display, and Multi-terrain Select control will begin.

- The four-wheel drive control switch is in "L4".
- Both Active TRAC and VSC are not off.

### Switching modes

Operate the Multi-terrain Select mode selector switch during Multi-terrain Select control to select a mode.

Once the mode is confirmed, the mode name will be displayed and the control will switch.

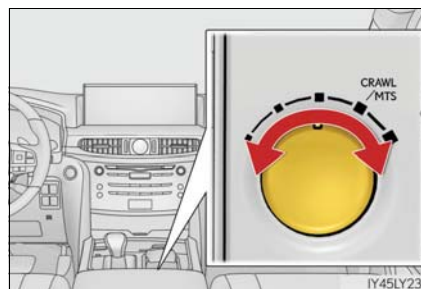

#### ■ Automatic system cancelation

In the following situations, the Multi-terrain Select indicator will go off, and Multi-terrain Select will be canceled automatically.

- When the four-wheel drive control switch is in H4.
- When Active TRAC and VSC are off.

#### ■ When it is difficult to generate traction

MUD & SAND mode provides the largest amount of tire slippage, followed by LOOSE ROCK, MOGUL, ROCK & DIRT and ROCK mode.

Drivability can be improved by selecting a mode which provides a smaller amount of tire slippage than the current mode when the amount of tire slippage is large, or conversely selecting a mode which provides a larger amount of tire slippage than the current mode when the amount of tire slippage is small.

#### ■ When the vehicle is stuck

Switching the transfer and differential

For the operation of the following functions, refer to the following pages.

- Four-wheel drive system (→P. 309)
- Center differential lock (→P. 310)

#### ■ When the brake system operates continuously

The brake system may overheat. In this case, a buzzer will sound, the TRAC OFF indicator will flash, and Multi-terrain Select will be temporarily inoperable. In this event, stop the vehicle immediately in a safe place, and allow the brake system to cool down sufficiently. (There is no problem with continuing normal driving.)

After a short time, the TRAC OFF indicator will go off, and you will be able to use Multi-terrain Select.

#### ■ When there is a malfunction in the system

The slip indicator light will come on. Have the vehicle inspected by your Lexus dealer immediately.

 **WARNING** **When using the Multi-terrain Select**

Observe the following precautions to avoid an accident that could result in death or serious injuries:

- There is a chance that the selected mode may not be the most appropriate in terms of road conditions such as pitch, slipperiness, undulation, etc. (→P. 319)
- Multi-terrain Select is not intended to expand the limits of the vehicle. Check the road conditions thoroughly beforehand, and drive safely and carefully.

 **NOTICE** **Precaution for use**

The Multi-terrain Select is intended for use during off-road driving. Do not use the system at any other time.

## Multi-terrain Monitor

The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.



### WARNING

#### ■ When using the Multi-terrain Monitor system

Observe the following precautions to avoid an accident that could result in death or serious injuries.

- Never rely solely on the Multi-terrain Monitor. As with unequipped vehicles, drive carefully while directly confirming the safety of your surroundings and the area to the rear of the vehicle. Take particular care to avoid parked cars and other obstacles.
- Due to the characteristics of the camera lens, the actual position and distance of people and other obstacles will differ from those shown on the Multi-terrain Monitor screen. Directly confirm the safety of your surroundings before driving.
- Do not drive while only looking at the screen. When driving, make sure to directly confirm the safety of your surroundings, such as by visually checking the area and using the vehicle's mirrors.
- In low temperatures, the screen may darken or the images may become faint. Images of moving objects in particular may distort or disappear from the screen. Therefore, make sure to drive carefully while directly visually confirming the safety of your surroundings.

## Multi-terrain Monitor screens

The following screens can be selected according to driving conditions.

- Screens that can be selected vary depending on conditions such as shift position and vehicle speed. (→P. 328)
- Depending on the displayed screen, the display can be switched from normal to wide view display.

■ Screens when the four-wheel drive control switch is in L4


- When checking the area to the front and sides of the vehicle

► Front view & dual side view



→P. 331

► Front view & dual side view (front magnified)

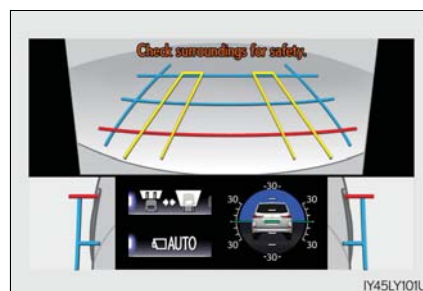

→P. 331


- When checking the condition of the road surface under the vehicle

► Under vehicle terrain view & dual side view



→P. 335

► Under vehicle terrain view & dual side view (front magnified)

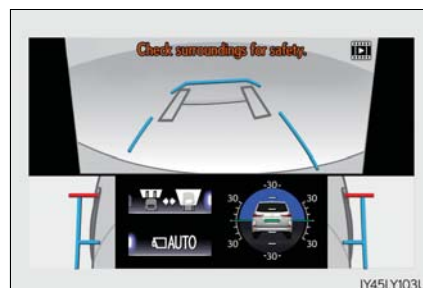


→P. 335

## 324 4-5. Using the driving support systems


- When checking the area to the rear of the vehicle

► Rear view & dual side view

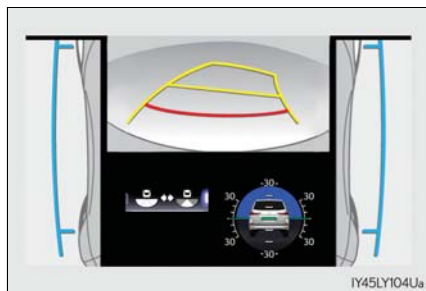

→P. 337

► Wide rear view

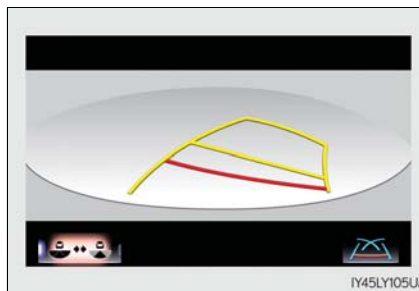


→P. 337

### ■ Screens when the four-wheel drive control switch is in H4


- When checking the area to the front of the vehicle (panoramic view & wide front view)

→P. 339

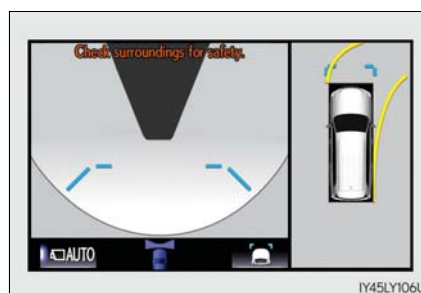


- When checking the area to the sides of the vehicle (side views)

→P. 341

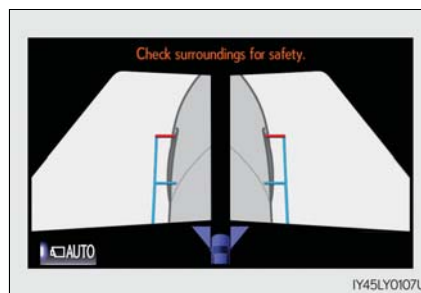


- When checking the area to the rear of the vehicle

- ▶ Panoramic view & rear view

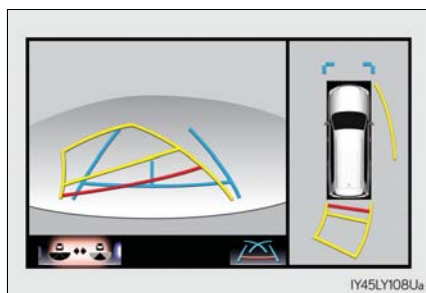

→P. 344


- ▶ Wide rear view

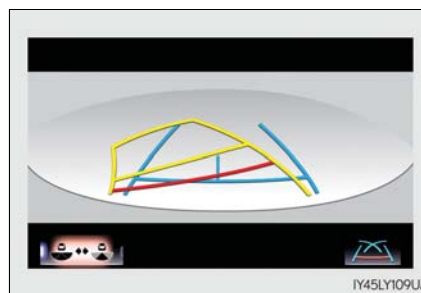

→P. 344


- When checking the area to the sides, front and rear of the vehicle (with out-side rear view mirrors retracted)

- ▶ Wide front view & side view

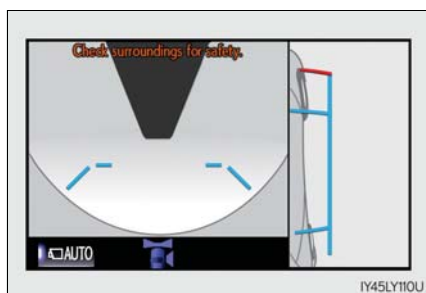


→P. 350

- ▶ Rear view & side view

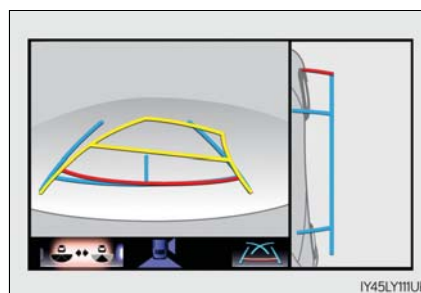

→P. 350

- ▶ Side views

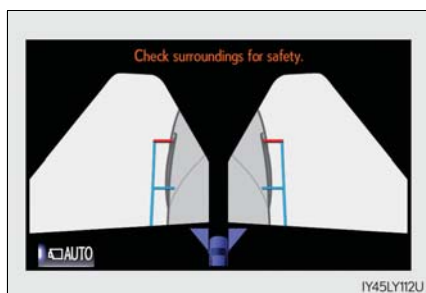

→P. 350

### Using the Multi-terrain Monitor screen


#### ■ Displaying the Multi-terrain Monitor screen

The Multi-terrain Monitor screen will be displayed when the VIEW switch is pressed while the engine switch is in IGNITION ON mode.

When the vehicle speed exceeds a certain value for a specific amount of time, the display returns to the navigation or information display screen.

The amount of time that the Multi-terrain Monitor is displayed differs depending on conditions such as the vehicle speed. (→P. 331)

- ① VIEW switch
- ② Display

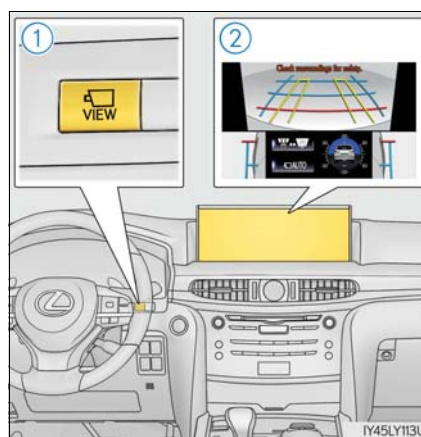

### ■ Switch operations

On some screens, the display mode or display settings can be changed using the switches.

#### ● Automatic display mode switch


When automatic display mode is turned on, the Multi-terrain Monitor screen is displayed in the following conditions, even if the VIEW switch has not been operated.

- The shift lever is shifted to D or N
- While driving, the vehicle speed drops to approximately 6 mph (10 km/h) or less (except when the shift lever is in R)

The automatic display mode switches between on and off each time  is selected.

When automatic display mode is on, an indicator illuminates on the icon.

Even when automatic display mode is on, the display can still be switched by pressing the VIEW switch.

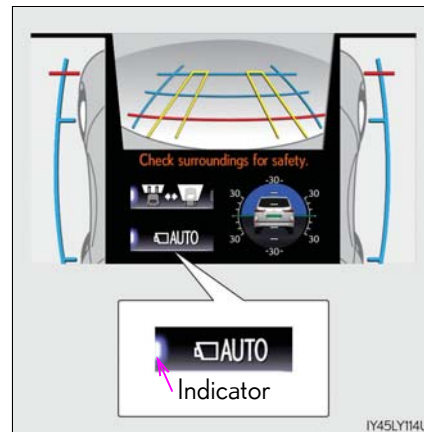

#### ● Display selection switches

The following switches can be pressed or selected to switch the Multi-terrain Monitor display screen and to switch from normal to wide view display.


| Switch                                      |                                                                                     | Switch Function                                                               |
|---------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| VIEW switch                                 |  | Changing a display (→P. 328)                                                  |
| Angle mode selection switch                 |  | Switches between the wide rear view and wide view display (→P. 337, 344)      |
| Under vehicle terrain view selection switch |  | Switches between the front view and under vehicle terrain view (→P. 331, 335) |

### Changing the Multi-terrain Monitor screen

The screen display can be switched by operating the switches as follows while the Multi-terrain Monitor screen is displayed. (Screens that can be displayed will vary depending on the positions of the shift lever and four-wheel drive control switch)

#### ■ Screens when the four-wheel drive control switch is in L4

-  : Press 
-  : Select 
-  : Select 
-  : Operate the shift lever

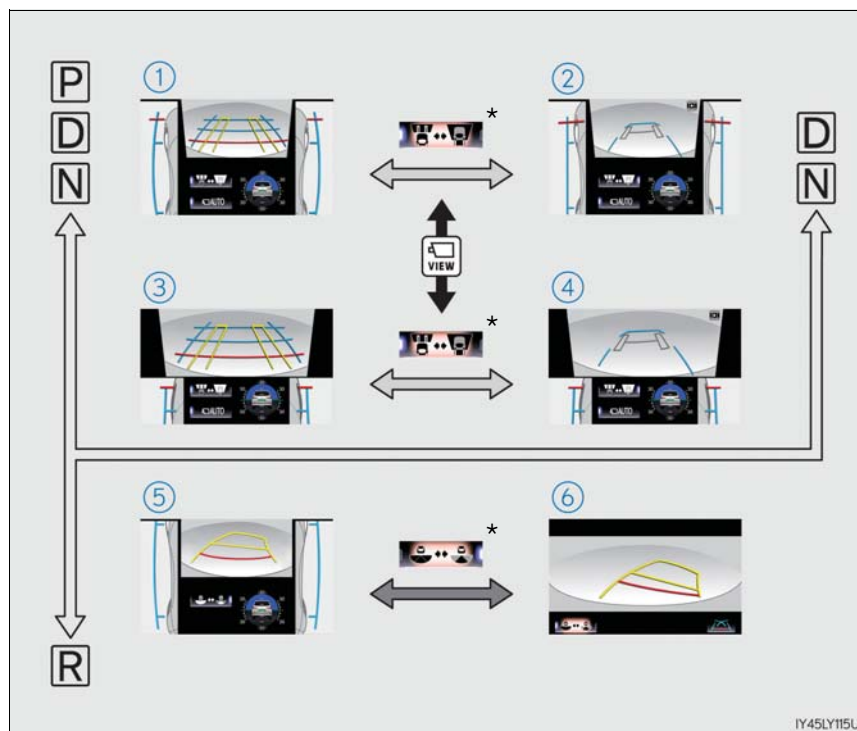

- ① Front view & dual side view: →P. 331
- ② Under vehicle terrain view & dual side view: →P. 335
- ③ Front view & dual side view (front magnified): →P. 331
- ④ Under vehicle terrain view & dual side view (front magnified): →P. 335
- ⑤ Rear view & dual side view: →P. 337
- ⑥ Wide rear view: →P. 337


\*: The screen display can be switched by touching the image from the camera on the screen.

■ Screens when the four-wheel drive control switch is in H4

➡ : Press 

➡ : Select 

➡ : Operate the shift lever

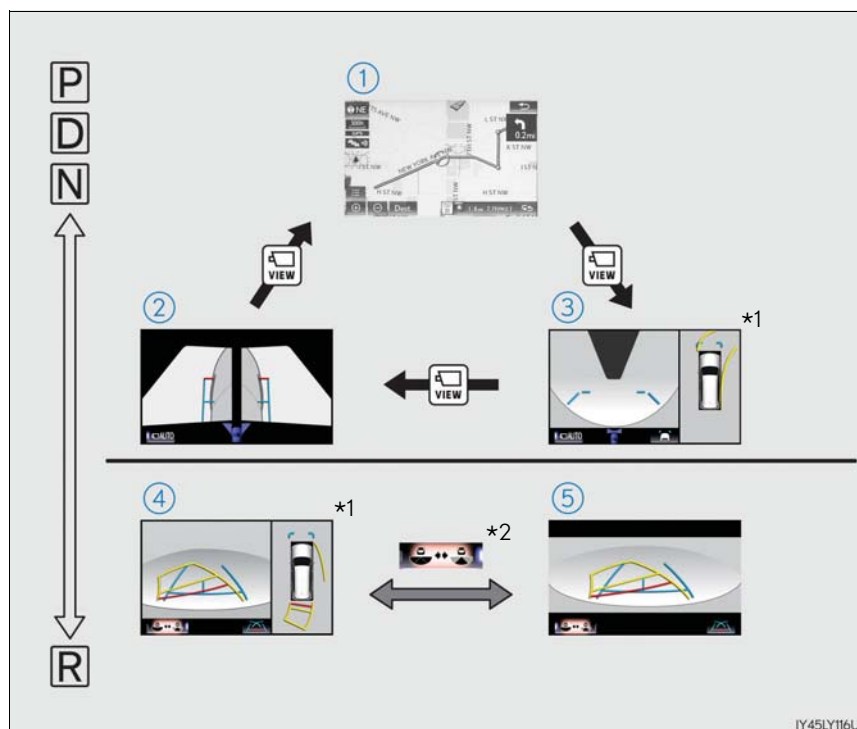

① Navigation screen, information settings screen, etc.      ④ Panoramic view & rear view: →P. 344

② Side views: →P. 341

⑤ Wide rear view: →P. 344

③ Panoramic view & wide front view: →P. 339

\*1: The displayed screen differs when the outside rear view mirrors are retracted.

\*2: The screen display can be switched by touching the image from the camera on the screen.

**■ Multi-terrain Monitor screen display**

The amount of time that the Multi-terrain Monitor screen is displayed changes as follows according to the vehicle speed at the time the VIEW switch was pressed.

The Multi-terrain Monitor screen is displayed if the vehicle speed is approximately 7 mph (12 km/h) or less when the camera switch is pressed.

If the vehicle speed exceeds approximately 7 mph (12 km/h), the Multi-terrain Monitor display is canceled.

**Screen display and functions**


The various screens of the Multi-terrain Monitor display information to support several different driving situations, such as when checking for obstacles when moving forward or in reverse, or when judging road surface conditions during off-road driving.

**■ Front view & dual side view**

Front view & dual side view can be used to check the area around the front of the vehicle.

- In addition to an image of the front of the vehicle, guide lines are displayed in a composite view to provide reference for when deciding a direction to move forward in.
- If the VIEW switch is pressed while the screen is displayed, the screen switches from normal to magnified display. (Pressing the switch again returns the screen to the normal display)
- If the steering wheel is turned 270° or more, guide lines and other features to support turning are automatically displayed.

## ● Screen description

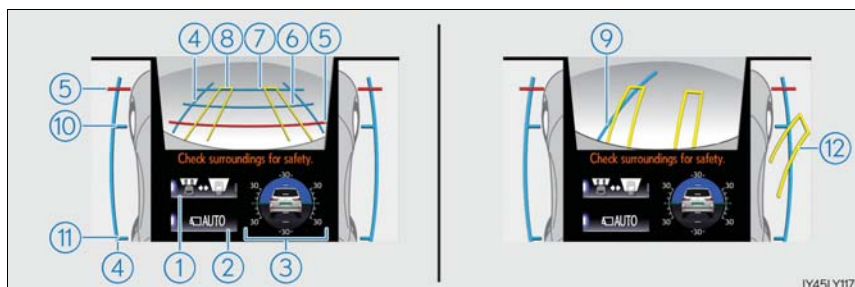


- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>① Under vehicle terrain view selection switch</p> <p>Switches between front view and under vehicle terrain view display each time the switch is selected.</p> <p>② Automatic display mode selection switch</p> <p>→P. 327</p> <p>③ Tilt meter/slip display</p> <p>Displays the vehicle's estimated degree of incline or indicates a tire slippage. (→P. 333)</p> <p>④ Vehicle width lines (blue)</p> <p>Indicate the width of the vehicle including the outside rear view mirror.</p> <p>⑤ 1.5 ft. (0.5 m) distance guide line (red)</p> <p>⑥ 3 ft. (1 m) distance guide line (blue)</p> | <p>⑦ 6 ft. (2 m) distance guide line (blue)</p> <p>Items ⑤ to ⑦ indicate the estimated distance from the front end of the vehicle.</p> <p>⑧ Front tire course line (yellow)</p> <p>Indicates the estimated course of the front tires according to steering wheel position.</p> <p>⑨ Forward movement guide line (blue)</p> <p>Indicates the estimated tire course of the tightest possible turn.</p> <p>⑩ Front tire contact line (blue)</p> <p>⑪ Rear tire contact line (blue)</p> <p>Items ⑩ and ⑪ indicate estimated tire positions on the image.</p> <p>⑫ Rear tire course line (yellow)</p> <p>Indicates the estimated course of the rear tires.</p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- Front view rotating display function

This function operates when the four-wheel drive control switch is in L4.

The front view image is automatically adjusted to be parallel and assist the driver to check road surface conditions regardless of the vehicle inclination.

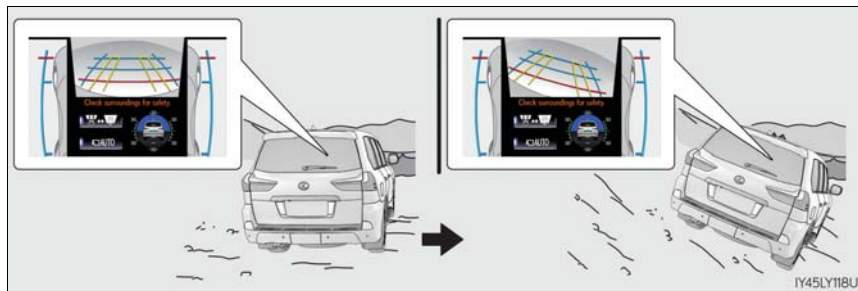

- Tilt meter

Tilt meter displays the vehicle inclination to the front, rear, left and right within a range of 0° to approximately 30°.

- ① Degree markers of incline to the front and rear


Indicates the vehicle inclination in degrees in the front and rear directions.

- ② Degree markers of incline to the left and right

Indicates the vehicle inclination in degrees in the left and right directions.

- ③ Pointer

Indicates the degree of the vehicle inclination in comparison to a parallel line.

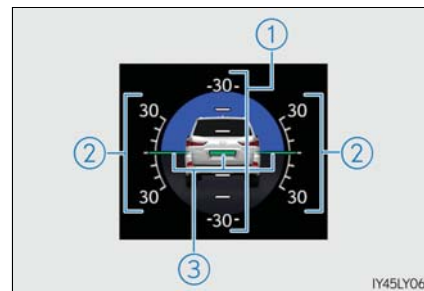


### ● Slip display

When tire slippage is detected, the tilt meter display area is automatically switched to the slip display.

#### ① Tire display

Indicates the position of freely spinning tires in yellow if the tire spins. (During Crawl Control is operating, all of the tires are indicated in yellow.)

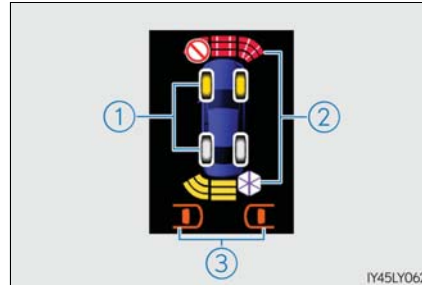

#### ② Pop-up display of the intuitive parking assist

Displayed if an obstacle is detected while the intuitive parking assist is turned on.

#### ③ Pop-up display of the RCTA (if equipped)

Displayed if a vehicle approaching from right or left rear of the vehicle is detected while the RCTA is turned on.

### ■ Front view & dual side view display

The screen can be displayed when the shift lever is in P, D or N.

### ■ Front view rotating display function

- The vehicle inclination displayed on the screen may differ from the actual state.
- When the rotated screen is displayed, the corners of the front bumper may not be seen on the screen.

### ■ Tilt meter display

- The display indicates the incline of the vehicle in degrees shown by the movement of the pointer and the rotation of the vehicle image.
- The color of the degree markers of incline to the front, rear, left and right changes according to the current incline of the vehicle.
- After the engine switch is turned to IGNITION ON mode, the degree of incline is not displayed until such information is determined.
- The degree of incline showed on the tilt meter is only an approximate indication, and may differ from the degree of incline measured using other equipment.

### ■ Tilt meter/slip display

When the intuitive parking assist or RCTA (if equipped) detects an obstacle or another vehicle, a warning message pops up in the tilt meter/slip display area.

### ■ Under vehicle terrain view & dual side view

Lines indicating current vehicle and tire position are displayed in a composite view on an image taken approximately 10 ft. (3 m) behind the current vehicle position and assists the driver to check conditions underneath the vehicle or determine the position of the front tires.



- ① Current vehicle position
- ② Image displayed in the under vehicle terrain view (image taken approximately 10 ft. (3 m) behind the current vehicle position)
- ③ Vehicle position at the time the image was taken (approximately 10 ft. (3 m) behind the current vehicle position)

#### ● Displaying the under vehicle terrain view

While the front view is displayed, stop the vehicle completely, and then press .

Pressing  again returns the screen to the front view display.

#### ● Screen description

- ① Tire position indicator lines (black)

Indicates the estimated position of the front tires.

- ② Vehicle position indicator lines (blue)

Indicates the estimated position of the vehicle.

- ③ Icon (flashing)

Indicates that the under vehicle terrain view display is of an image taken in the past.



**■ Under vehicle terrain view & dual side view**

- The screen can be displayed when the shift lever is in D or N.
- While the under vehicle terrain view is displayed, if the vehicle speed reaches or exceeds approximately 3 mph (5 km/h), the screen automatically returns to the front view display.
- In the following situations, the under vehicle terrain view selection switch cannot be operated.
  - The vehicle is not completely stopped
  - After the engine starts, a fixed distance or more has not been driven
  - After the four-wheel drive control switch is shifted to L4, a fixed distance or more has not been driven
- In the following situations, the system may not operate normally, or it may not be possible to switch to the under vehicle terrain view.
  - The road is covered with snow
  - It is nighttime and the road has no illumination
  - Dirt or foreign matter is adhering to the camera lens
  - There is water in front of the vehicle (a river, puddle, sea water, etc.)

**WARNING****■ Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

**■ Under vehicle terrain view display**

The image displayed is one that was previously taken at a point approximately 10 ft. (3 m) behind the current vehicle position. In cases such as when objects move after the image is taken, the image displayed on the screen may differ from the actual state.

### ■ Rear view & dual side view/wide rear view


Guide lines are displayed in a composite view on an image of the area to the rear of the vehicle to use as a reference when deciding a course of movement and assist the driver to check the safety of the area to the rear of the vehicle or to park the vehicle.

#### ● Screen description

The following 2 types of display mode can be selected according to conditions.

#### ► Rear view & dual side view display

#### ► Wide rear view display

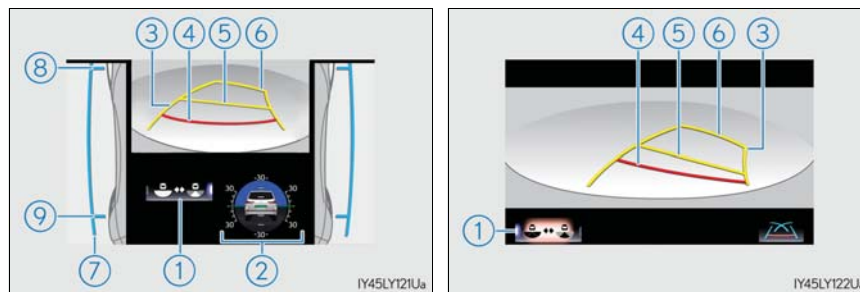

#### ① Angle selection switch

Switches between rear view & dual side view display and wide rear view display each time the switch is selected.

#### ② Tilt meter/slip display

→P. 333

#### ③ Projected course lines (yellow)

Indicate the estimated course of the vehicle according to steering operations.

#### ④ 1.5 ft. (0.5 m) distance guide line (red)

#### ⑤ 3 ft. (1 m) distance guide line (yellow)

#### ⑥ 8 ft. (2.5 m) distance guide line (yellow)

④, ⑤ and ⑥ indicate the estimated distance from the rear end of the vehicle.

#### ⑦ Vehicle width extension guide line (blue)

Indicates the estimated vehicle width including the outside rear view mirrors.

#### ⑧ Front tire contact line (blue)

#### ⑨ Rear tire contact line (blue)

Items ⑧ and ⑨ indicate estimated tire positions on the image.

**■ Rear view & dual side view/wide rear view**

The screen can be displayed when the shift lever is in R.

**■ Guide lines**

If the back door is not closed, guide lines will not be displayed. If the guide lines do not display even when the back door is closed, have the vehicle inspected at your Lexus dealer.

**WARNING****■ Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

### ■ Panoramic view & wide front view


The image looking down at the vehicle from above and the image from the front camera are displayed simultaneously and assist the driver to check conditions in front, and to the right and left, of the vehicle at intersections or T-junctions with poor visibility.

#### ● Screen description

The following 2 types of display mode can be selected according to conditions.

#### ▶ Distance guide line display mode

#### ▶ Projected course line display mode

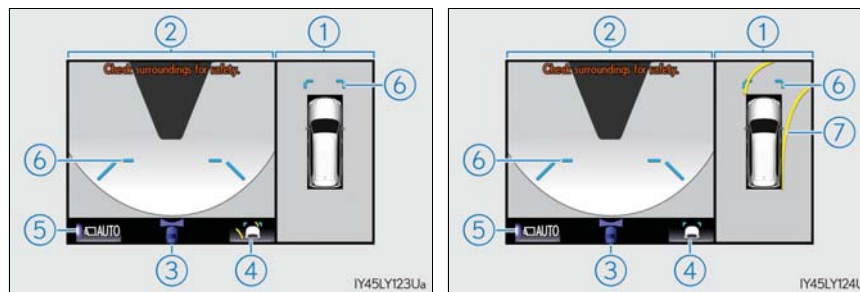

#### ① Panoramic view

Displays an image looking down at the vehicle from above.

#### ② Wide front view

Displays an image of the area to the front of the vehicle.

#### ③ Display area

#### ④ Guide line display selection switch

→P. 340

#### ⑤ Automatic display mode selection switch

→P. 327

#### ⑥ Front distance guide line (blue)

Indicates a distance approximately 3 ft. (1 m) from the front end of the vehicle.

#### ⑦ Forward projected course lines

Automatically displayed when the steering wheel is turned 90° or more from the center position.

Indicates the estimated course of the vehicle according to steering wheel operations.

- Switching to automatic display mode  
→P. 327
- Switching guide line display modes  
The mode switches and the switch display changes each time the guide line display selection switch is selected.

| Selected mode  | Distance guide line display mode                                                  | Projected course line display mode                                                  |
|----------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Switch display |  |  |

- Panoramic view & wide front view  
The screen can be displayed when the shift lever is in P, D or N.

 **WARNING**

 **Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

### ■ Side views

The image from the both side cameras is displayed and assists the driver to check conditions on the sides of the vehicle or to confirm the safety of narrow roads.

#### ● Screen description

- ① Side view (left front side)
- ② Side view (right front side)
- ③ Display area
- ④ Vehicle width lines (blue)

Indicate the estimated vehicle width including the outside rear view mirrors.

- ⑤ Front distance guide line (red)


Indicates a distance approximately 1.6 ft. (0.5 m) from the front end of the vehicle.

- ⑥ Front tire contact line (blue)

Indicates the estimated front tire position on the image.

- ⑦ Automatic display mode selection switch


→P. 327

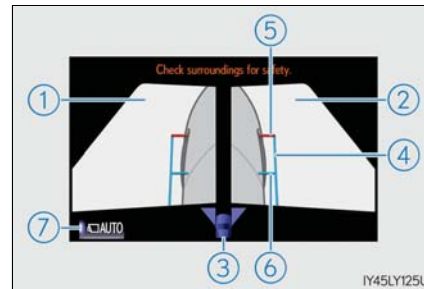


- Using the vehicle width lines

The relative distance of obstacles from the vehicle width lines can be confirmed.

Example 1: When there is an obstacle in front of the vehicle  
Operate the steering wheel so that the vehicle width line and the obstacle do not overlap.

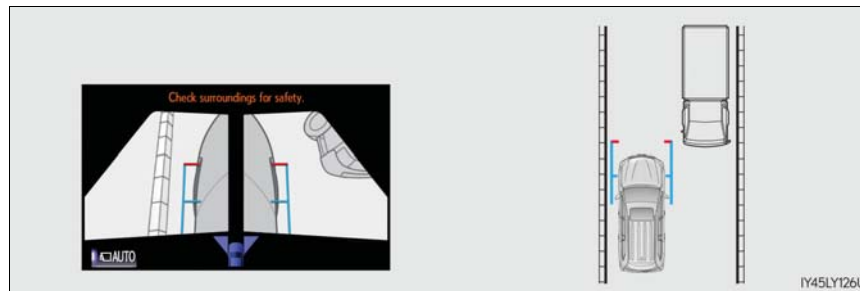

Example 2: When parking on the shoulder  
Approach the shoulder, but do not allow the vehicle width line to overlap the curb or other obstacles.  
After confirming the distance to the shoulder of the road, maneuvering the vehicle so that the vehicle width line and the curb or other obstacle are parallel allows the vehicle to be parked evenly.

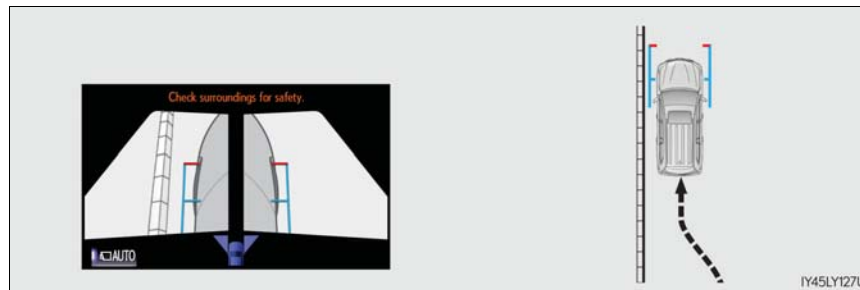

**■ Side views**

- The screen can be displayed when the shift lever is in P, D or N.
- When the outside rear view mirrors are retracted, the displayed area changes (the area on the screen that is not masked in black). (→P. 350)

**WARNING****■ Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

### ■ Panoramic view & rear view/wide rear view

- Panoramic view & rear view:


The image looking down at the vehicle from above and the image from the rear camera are displayed simultaneously and assist the driver to check the safety of the area when parking.

- Wide rear view:


The image from the rear camera is displayed in a range of approximately 180° and assists the driver to check the safety of the area when backing up.

#### ● Screen description

##### ► Panoramic view & rear view

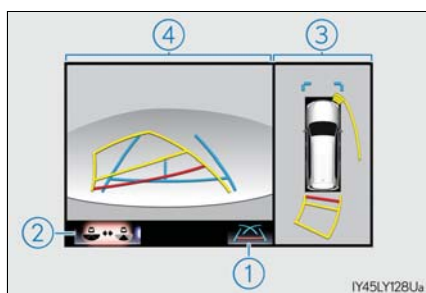

##### ► Wide rear view

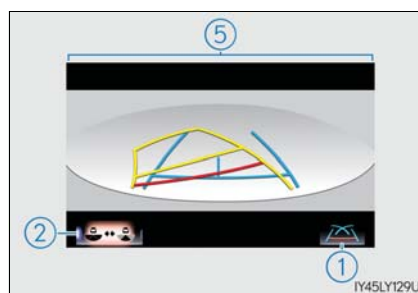

- ① Guide line selection switch

→P. 340

- ② Angle mode selection switch

Switches between the panoramic view & rear view and wide rear view display each time the switch is selected.

- ③ Panoramic view & rear view

- ④ Rear view


Switches the screen to wide rear view display when you touch the display.

- ⑤ Wide rear view

Switches the screen to the panoramic & rear view display when the display is touched.

● Switching modes

The display mode switches and the icon display changes each time the guide line display selection switch is selected.


| Selected mode | Projected course line display mode                                                | Parking assist guide line display mode                                            | Distance guide line display mode                                                    |
|---------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Icon display  |  |  |  |

- Projected course line display mode:  
Projected course lines that change according to steering wheel operations are displayed.
- Parking assist guide line display mode:  
Inverted steering wheel operations (parking assist guide line) are displayed. Use this mode if you are used to how the vehicle handles (if you can park without needing the course line display).
- Distance guide line display mode:  
Only distance guide lines are displayed.


● Guide lines

The panoramic view & rear view screen is explained here as an example.

- Projected course line display mode      ► Parking assist guide line display mode

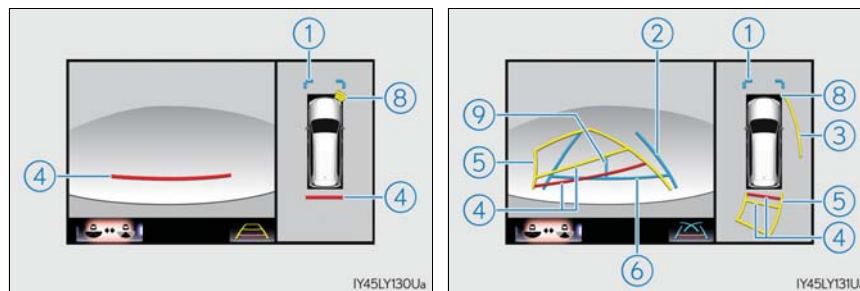

## ► Distance guide line display mode

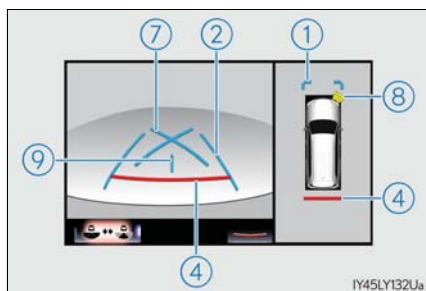

## ① Front distance guide line (blue)

Indicates a distance approximately 3 ft. (1 m) from the front end of the vehicle.

## ② Rear vehicle width extension guide lines

Indicate the estimated course of the vehicle when backing up straight.

- The displayed width is wider than the actual vehicle width.
- In projected course line display mode, this item overlaps the projected course lines when going straight.

## ③ Side projected course line (yellow)

Indicates the projected reverse course calculated by the angle of the steering wheel.

The projected reverse course line on the outside of the turn is displayed according to the direction of the steering wheel.

## ④ Rear distance guide line

Indicates the estimated distance from the end of the rear bumper (at the center). (Red line: approximately 1.5 ft. [0.5 m] away. Yellow line: approximately 3 ft. [1 m] away.)

In projected course line display mode, the rear distance guide line changes according to steering wheel operations.

## ⑤ Projected reverse course (yellow)

Changes according to steering wheel operations and indicates the estimated course of the vehicle.

## ⑥ Rear distance guide line (blue)

Indicates a distance approximately 1.5 ft. (0.5 m) from the end of the rear bumper (at the center).

## ⑦ Parking assist guide line (blue)

Indicates the estimated tire course of the tightest possible turn in reverse.

## ⑧ Intuitive parking assist

When the intuitive parking assist is on, an icon will be displayed when an obstacle is detected. (Refer to P. 293 for information about the intuitive parking assist.)

## ⑨ Vehicle center line (blue)

Indicates the estimated vehicle center on the ground.

● Parking operation (using the estimated course line)


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

1 Shift the shift lever to the R position.

2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.


① Parking space

② Estimated course lines

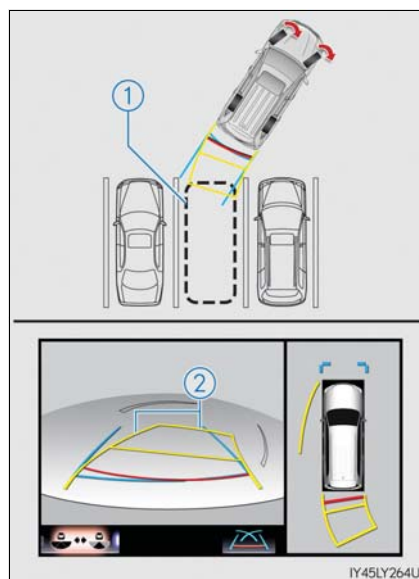

3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width extension guide lines are within the left and right dividing lines of the parking space.

③ Vehicle width extension guide line

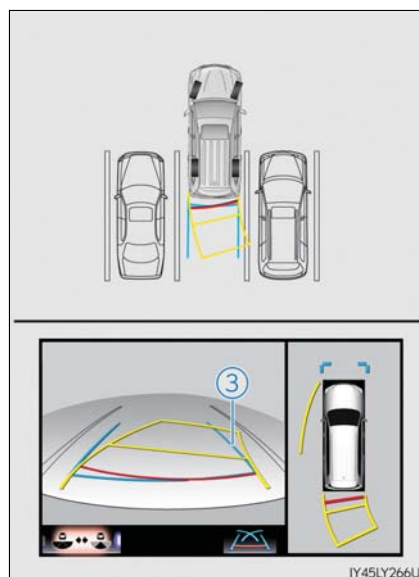

- 4 Once the vehicle width extension guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.

- 5 Stop the vehicle in an appropriate place, and finish parking.


● Parking operation (using the parking assist guide line)

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the R position.

- 2 Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.

- ① Parking assist guide line
- ② Parking space dividing line

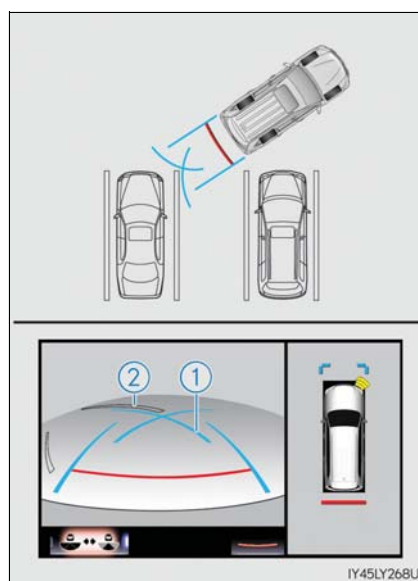

- 3 Turn the steering wheel all the way to the right, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

**■ Panoramic view & rear view/wide rear view**

The screen can be displayed when the shift lever is in R.

**■ Guide lines**

If the back door is not closed, guide lines will not be displayed. If the guide lines do not display even when the back door is closed, have the vehicle inspected at your Lexus dealer.

**WARNING****■ Guide lines**

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

**■ When using panoramic view & rear view or wide rear view**



- If the vehicle width extension guide lines and projected course lines are not aligned with the steering wheel in the center position, drive straight on a road without as little traffic and as few bends or curves as possible for approximately 5 minutes or more. If the symptom is not resolved, have the vehicle inspected by your Lexus dealer.
- Rear vehicle width extension guide lines are displayed wider than the actual vehicle width. When backing up, always confirm the safety of your surroundings and the area to the rear of the vehicle.

■ **Display when the outside rear view mirrors are retracted (side view and side views)**


When the outside rear view mirrors are retracted, one of the following screens is displayed and assists the driver to confirm the safety of the area around the vehicle, or park alongside and close to another object.

● **Screen description**

- ▶ When the wide front view is displayed
- ▶ When the rear view is displayed

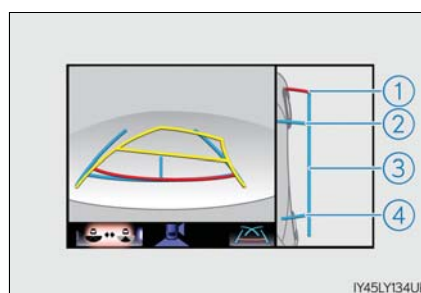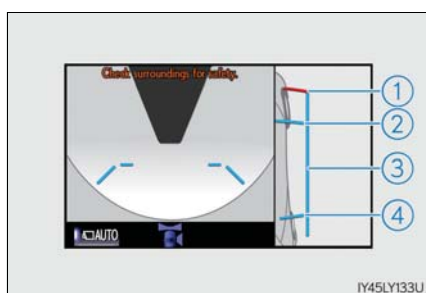

- ▶ When the side views is displayed

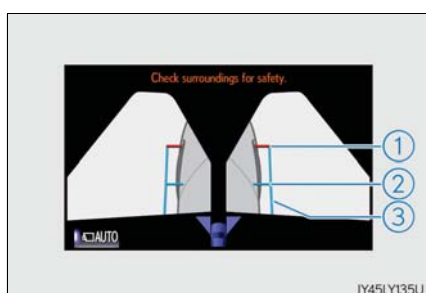


For information about other than the side view and side views display area, refer to the page for the respective screen.

- ① Front distance guide line (red)  
Indicates a distance approximately 1.5 ft. (0.5 m) from the front end of the vehicle.
- ② Front tire contact line (blue)  
Indicates the estimated front tire position on the image.
- ③ Vehicle width lines (blue)  
Indicate the estimated vehicle width including the outside rear view mirrors.
- ④ Rear tire contact line (blue)  
Indicates the estimated rear tire position on the image.

● Using the vehicle width lines

The relative distance of obstacles from the vehicle width lines can be confirmed.

- Approach the shoulder, but do not allow the vehicle width line to overlap the curb or other obstacles.
- After confirming the distance to the shoulder, maneuvering the vehicle so that the vehicle width line and the curb or other obstacle are parallel allows the vehicle to be parked evenly.

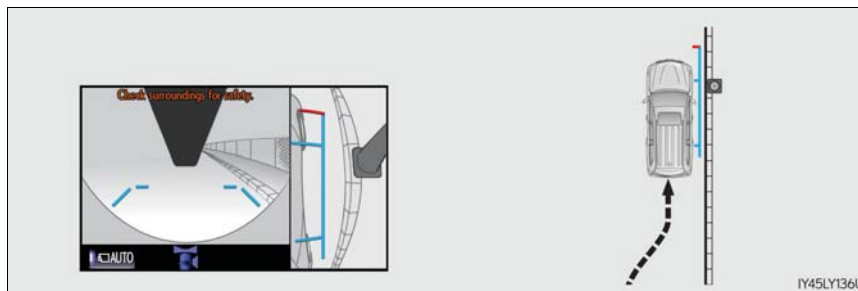


**! WARNING**

■ Guide lines

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.

■ **Intuitive parking assist and RCTA cooperative display**

When either the intuitive parking assist (→P. 293) or Blind Spot Monitor (→P. 369) is turned on, an icon warns the driver when an obstacle is detected.

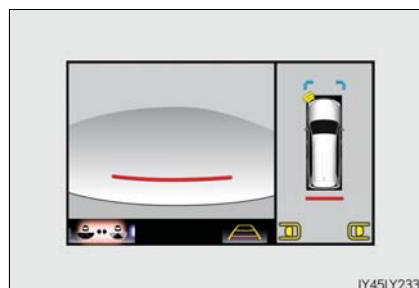

■ **Intuitive parking assist cooperative display**

While the intuitive parking assist is in use, an icon is displayed when an obstacle is detected (→P. 293).

However, this function only informs the driver that an obstacle is close to the vehicle and the detected obstacle is not displayed on the screen. Be sure to visually confirm the safety of your surroundings.

### When using the Multi-terrain Monitor

Observe the following precautions. Failure to do so may result in an unexpected accident. Also, when driving, make sure to directly confirm the safety of your surroundings and the area to the rear of the vehicle.

#### WARNING

##### ■ Conditions under which the Multi-terrain Monitor should not be used

Do not use the Multi-terrain Monitor in the following situations. The system may not operate properly, resulting in an unexpected accident.

- When driving on an icy, snow-covered or otherwise slippery road surface
- When using tire chains or a spare tire
- When either front door or the back door is not completely closed
- When driving on an uneven road, such as a hill
- When tires or suspension parts other than those specified are equipped  
When the tires are replaced, the position indicated by the guide lines displayed on the screen may differ.

##### ■ Guide lines

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, cargo weight, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while confirming the safety of your surroundings.




## NOTICE

■ **Panoramic view**

- In the panoramic view, the system combines images taken from the front, back, left and right side cameras into a single image. There are limits to the range and content that can be displayed. Understand the characteristics of this system before using.
- Image clarity may decline at the four corners of the panoramic view. However, this is not a malfunction, as these are the regions along the border of each camera image where the images are combined.
- Depending on lighting conditions near each of the cameras, bright and dark patches may appear on the panoramic view.
- The panoramic view display does not extend higher than the installation position and image capture range of each camera.
- There are blind spots around the vehicle and there are regions that are not displayed in the panoramic view.
- Three-dimensional objects displayed in wide front view or rear view may not be displayed in the panoramic view.
- People and other three-dimensional obstacles may appear differently when displayed in the panoramic view. (These differences include, among others, cases in which displayed objects appear to have fallen over, disappear near image processing areas, appear from image processing areas, or when the actual distance to an object differs from the displayed position.)
- The panoramic view will not be properly displayed when either front door or the back door is open.
- The vehicle icon displayed in the panoramic view is a computer generated image, and properties such as the color, shape and size will differ from the actual vehicle. Therefore, nearby three-dimensional objects may appear to be touching the vehicle, and actual distances to three-dimensional objects may differ from those displayed.


### ■ Display range

#### ● Panoramic view

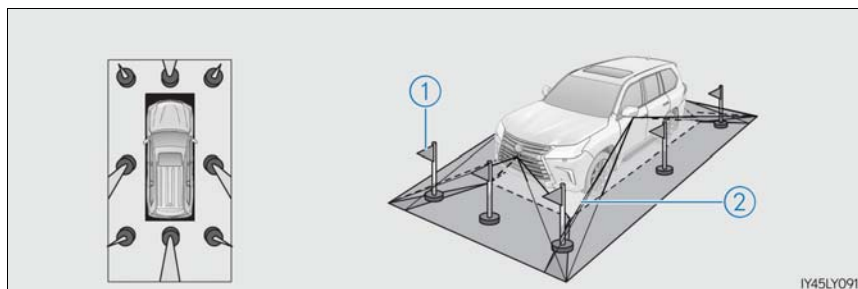


- ① Not displayed.
- ② Not displayed. (Displayed in black around the vehicle icon.)

#### ● Wide front view

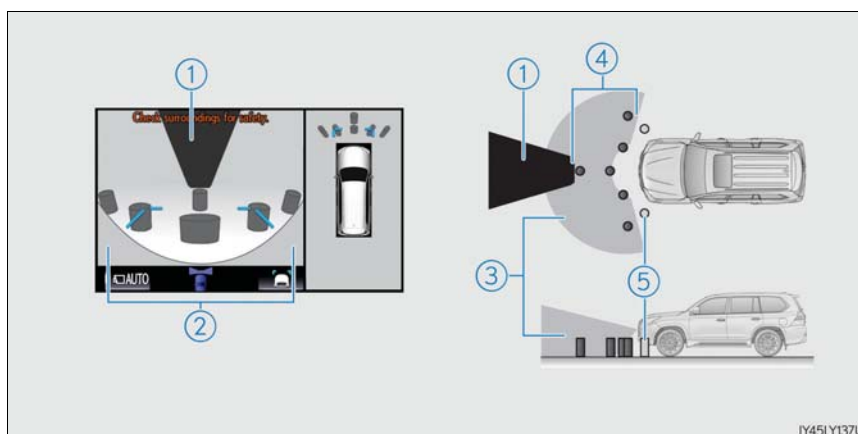


- ① Masking
- ② Parts of the vehicle (such as the bumper or grille) are displayed on the screen.
- ③ Camera visibility range
- ④ Object detectable by camera
- ⑤ Object not detectable by camera

● Side views

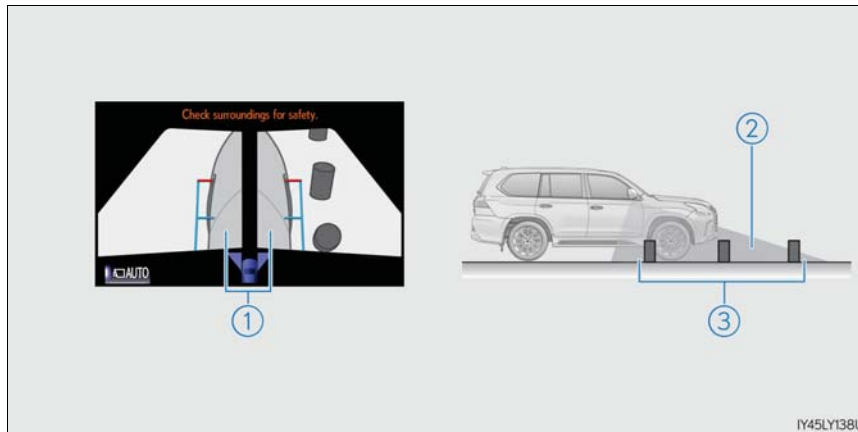


- ① The side of the vehicle is displayed on the screen.
- ② Camera visibility range
- ③ Object detectable by camera

● Side view

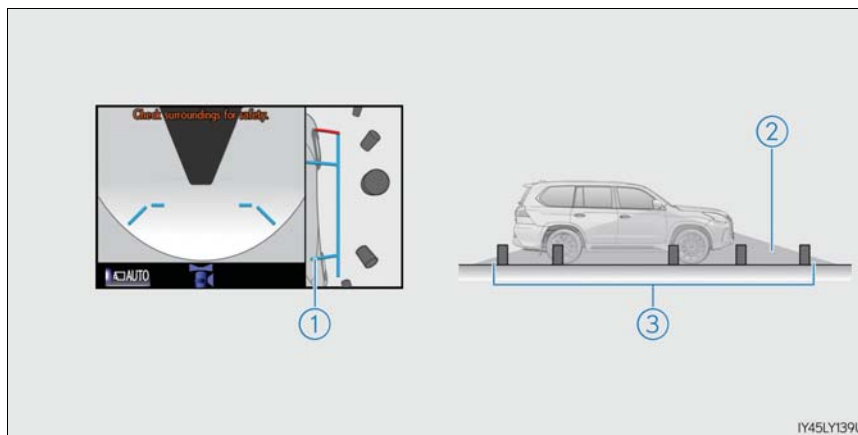


- ① The side of the vehicle is displayed on the screen.
- ② Camera visibility range
- ③ Object detectable by camera

## ● Rear view

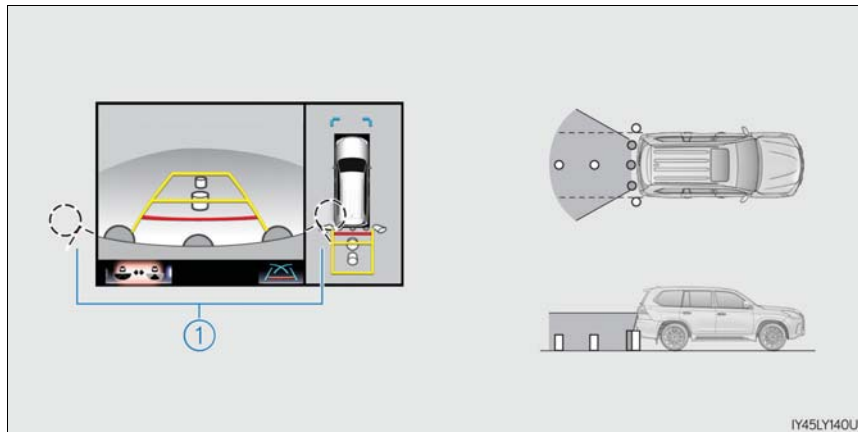

① The corners of the bumper are not seen on the screen.

## ● Wide rear view

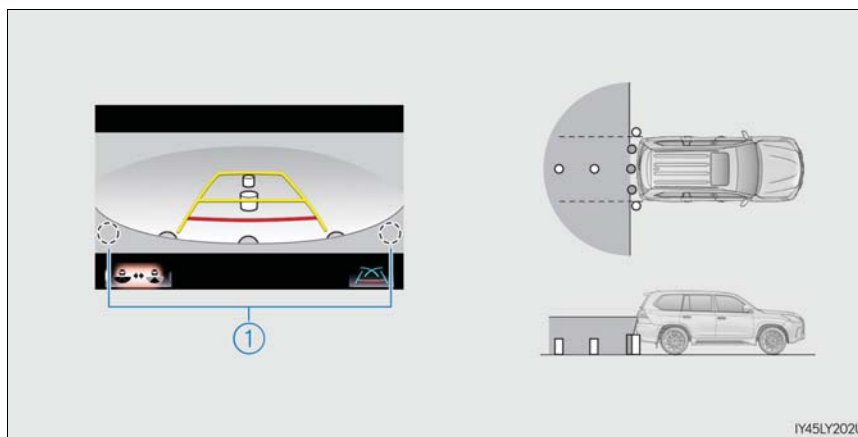


① The corners of the bumper are not seen on the screen.

4

Driving

#### ■ Panoramic view display range

- In the panoramic view, the system processes and displays images acquired from the 4 cameras under the assumption that the vehicle is on a flat road surface. Therefore, the display may appear as follows.
  - Three-dimensional objects may appear to have fallen over, and be long and thin or bigger than they actually are
  - Three-dimensional objects at a point higher than the surface of the road may appear further away than they actually are, or may not appear
  - Tall objects may appear to emerge from the image processing seams
- Inconsistencies in the brightness of images from each camera may occur depending on lighting conditions.
- The displayed image may not be aligned when the tilt or height of the vehicle changed due to the number of passengers, cargo weight or remaining quantity of gasoline.
- The displayed image may not be aligned when the vehicle is in other than "N" (normal) height mode. (→P. 301)
- Images and guide lines may not be properly displayed when the doors are not completely closed.
- The relative distances between the vehicle icon and road surface or an obstacle displayed in the panoramic view may differ from the actual state.
- If an illuminated license plate is used, it may appear on the screen.
- The black area around the vehicle icon is an area that is not appear in the camera. Check these areas directly.
- The circled areas shown in the illustration may be difficult to see, as these are points where images are combined.

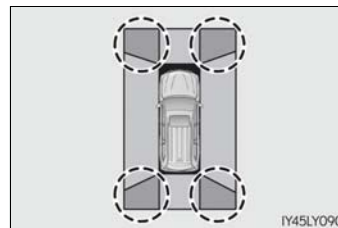

#### ■ Wide front view display range

- Certain areas at the front of the vehicle have a different sense of distance, and are masked in black so that they do not appear on the screen.
- There are limits to the range displayed on the screen. Objects at either corner of the bumper or directly below the bumper are not displayed.
- The perceived distance in images displayed on the screen differs from the actual distance.

#### ■ Images displayed on the screen


Cameras of the Multi-terrain Monitor system use special lenses. The distance of the image that appears on the screen differs from the actual distance.

### ■ Multi-terrain Monitor cameras

#### ● Camera positions

The cameras of the Multi-terrain Monitor system are installed as follows.

- ① Side camera (left and right sides)
- ② Front camera
- ③ Rear camera

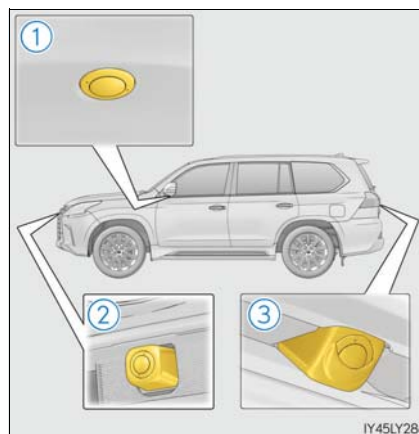

#### ● Using the cameras

If dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens with a soft and wet cloth.



### NOTICE

#### ■ How to use the cameras


- Observe the following precautions. Failure to do so may prevent the Multi-terrain Monitor from operating properly.
  - Do not strike the camera area, or allow any objects to bump into it  
If the camera or surrounding area has received a strong impact, the camera position, installation angle, etc., may deviate. If the camera is accidentally subjected to an impact, have the vehicle inspected at your Lexus dealer.
  - Do not remove, disassemble or modify the camera or surrounding parts  
Doing so may result in the camera malfunctioning. This also may result in a loss of waterproof performance.
  - If the camera lens is dirty, follow the above procedures to clean it  
If the camera lens is damaged it cannot transmit a clear image.  
Do not allow organic solvent, car wax, oil film remover, glass coating, etc. to contact the camera cover  
Doing so will negatively affect the camera cover (resin). If this happens, wipe it off immediately.
  - When the outside temperature is cold, do not cause any sudden changes in temperature, such as by applying hot water
- When washing the vehicle, do not apply water with a high-pressure washer to the camera or surrounding area. Doing so may cause the camera to receive a strong impact, and the camera may not operate properly

**■ Differences between the panoramic view screen and the actual road**

The distance guide lines, the combined panoramic view image, guide lines, etc., indicate estimated distances on a flat road surface. In the following situations, actual distances and vehicle course will differ from the guide lines on the screen.


**● When the ground behind the vehicle slopes up sharply**

The distance guide lines will appear to be closer to the vehicle than the actual distance. Therefore, obstacles on an upward slope appear further away than they actually are. In the same way, the actual course of the vehicle will differ from the course indicated by the guide lines.

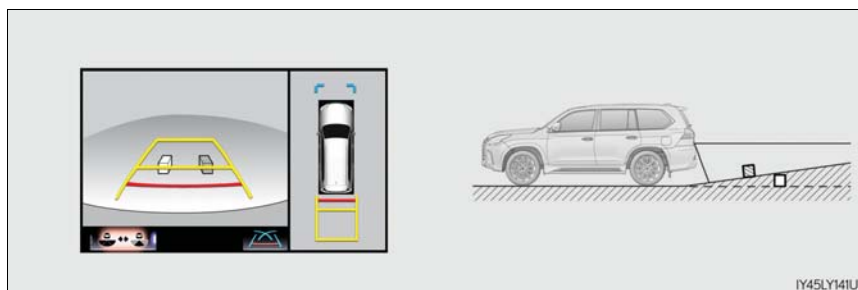

- When the ground behind the vehicle slopes down sharply


The distance guide lines are displayed further away than the actual distance. Therefore, obstacles on a downward slope appear closer than the actually are. In the same way, the actual course of the vehicle will differ from the course indicated by the guide lines.

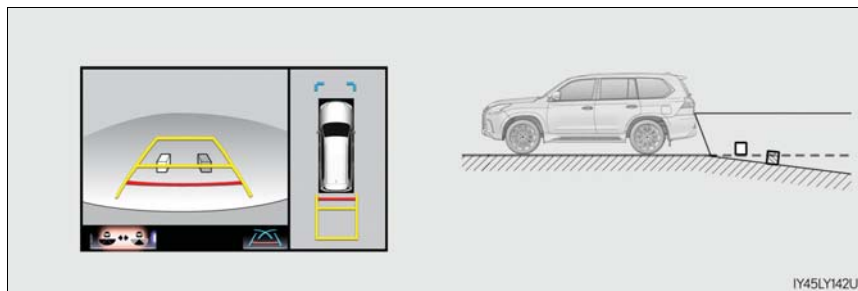

- When the vehicle is tilted

When the vehicle is tilted due to the number of passengers or weight of the load, actual distances and vehicle course will differ.

- ① Margin of error

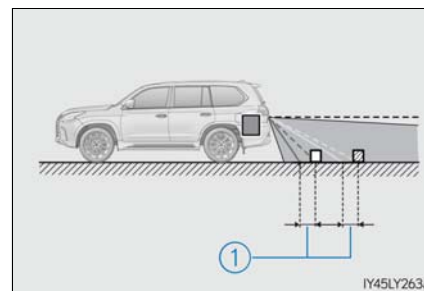


### ■ Differences between the panoramic view display and actual three-dimensional objects

Be aware of the following points when three-dimensional objects higher than the surface of the road (such as a vehicle bumper) are nearby.

#### ● Panoramic view display

In the panoramic view, the system processes and displays images under the assumption that the vehicle is on a flat road surface. Therefore, the position of three-dimensional objects higher than the road surface (such as a vehicle bumper) cannot be determined. Even if it seems that a collision will not occur according to the screen, there may not actually be any extra space between the vehicle and an obstacle higher than the road surface, resulting in a collision. In these cases, confirm the safety of your surroundings directly.

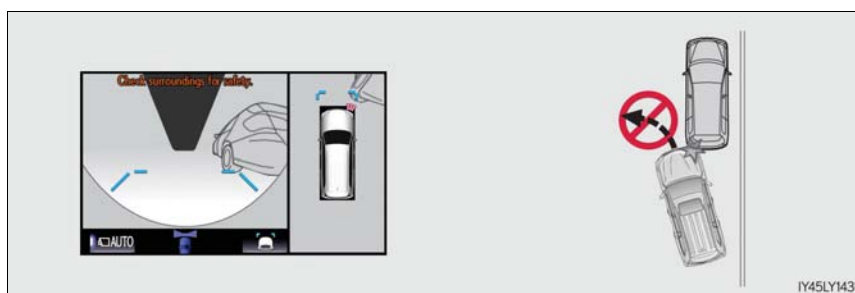

### ⚠ WARNING


#### ■ Intuitive parking assist pop-up display

When the intuitive parking assist pop-up display is red, park the vehicle and make sure to confirm the safety of your surroundings.

Failure to do so may lead to an unexpected accident.


- Projected course lines

Projected course lines are displayed under the assumption that the vehicle is on a flat road surface. Therefore, the position of three-dimensional objects higher than the road surface (such as a vehicle bumper) cannot be determined. Even if it seems that an obstacle is outside of the projected course lines and a collision will not occur according to the screen, an obstacle may actually be in the vehicle course, resulting in a collision.

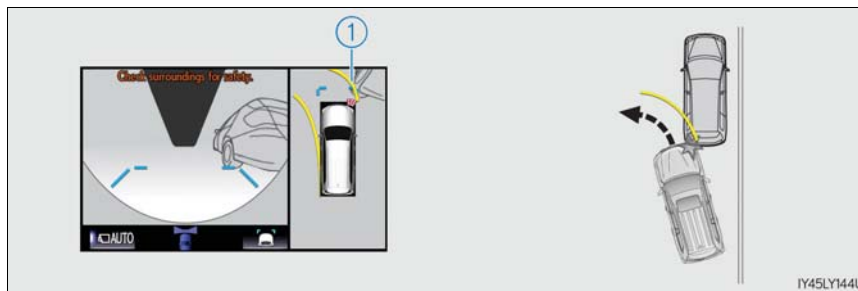

① Projected course lines

Three-dimensional objects in high positions (such as walls with protrusions or the loading areas of trucks) may not be displayed on the screen. Confirm the safety of your surroundings directly.

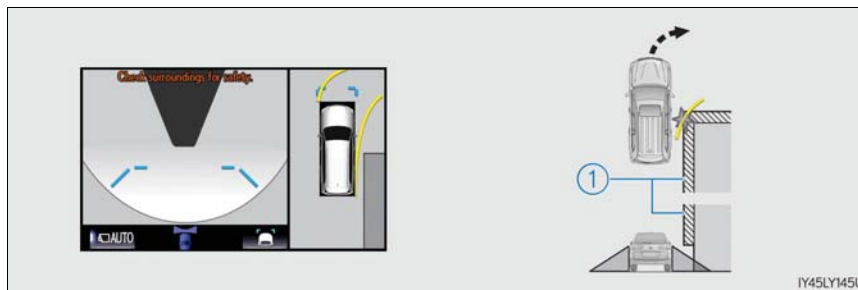


① Protrusion of a wall

**■ Differences between the rear view or wide rear view and actual roads**

The guide lines on the screen are intended for flat surfaces (such as the road). Be aware of the following points when three-dimensional objects with protrusions (obstacles such as the cargo bed of a truck) are nearby.

**● Projected course lines**

Guide lines are displayed in reference to a level road surface and cannot be used to determine the location of three-dimensional objects. Confirm the safety of your surroundings directly. Even if it seems that the cargo bed of a truck is outside the projected course lines and a collision will not occur according to the screen, it may actually be in the vehicle course, resulting in a collision.

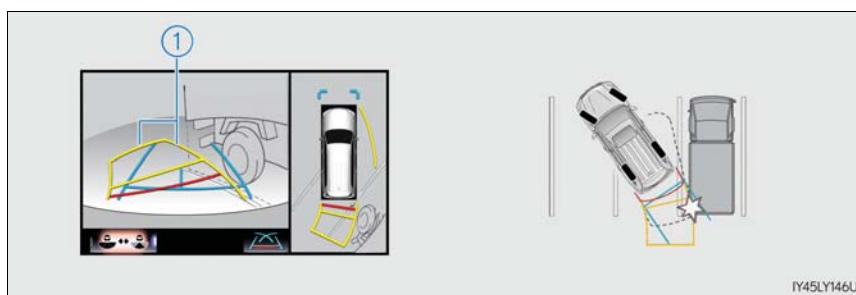


① Projected course lines

### ■ Differences between the panoramic view, rear view and wide rear view and actual roads

#### ● Distance guide lines

Guide lines are displayed in reference to the road surface and cannot be used to determine the distance of three-dimensional objects from the vehicle. Confirm the safety of your surroundings directly. On the screen, it appears that a truck is parking at point ② according to the distance guide lines. However, in reality if you back up to point ①, you will hit the truck. On the screen, it appears that ① is closest and ③ is farthest away. However, in reality, the distance to ① and ③ is same, and ② is farther than ① and ③.

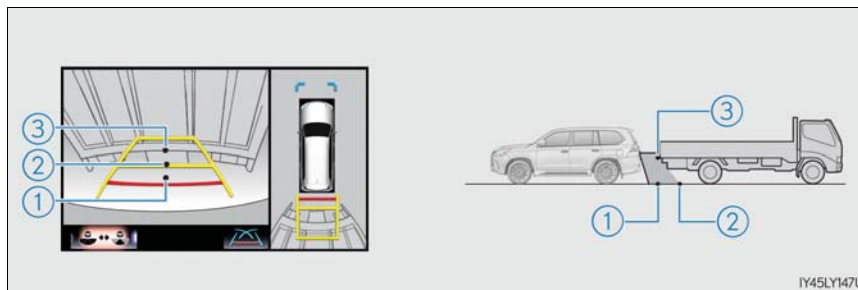

4

Driving

#### ● Under vehicle terrain view

The tire position indicator lines and vehicle position indicator lines may differ from actual vehicle positions depending on the number of passengers, weight of the load, road grade, road surface conditions, brightness of the surrounding environment, etc. Always drive the vehicle while directly confirming the safety of your surroundings.

**■ Using under vehicle terrain view**

- The images displayed were previously taken approximately 10 ft. (3 m) behind the current vehicle position.  
Therefore, actual conditions may differ from those shown on the screen in the following situations.
  - An obstacle has appeared after the image was taken
  - Loose material like sand or snow has crumbled or shifted
  - An obstacle has moved
  - There is a puddle, tract of mud, etc., within the display range
  - The vehicle slips
- In the following situations, actual tire positions and vehicle position may differ from those indicated by the tire position indicator lines and vehicle position indicator lines.
  - Tires have been replaced
  - Optional equipment has been installed

**WARNING****■ Guide lines**

The displayed guide lines are composed with the image that was previously taken and may differ from the actual state.

Always drive the vehicle while confirming your surroundings.

### ■ If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Lexus dealer.

| Likely cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Solution                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>❑ The image is difficult to see</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                               |
| <ul style="list-style-type: none"> <li>• The vehicle is in a dark area</li> <li>• The temperature around the lens is either high or low</li> <li>• The outside temperature is low</li> <li>• There are water droplets on the camera</li> <li>• It is raining or humid</li> <li>• Foreign matter (mud etc.) is adhering to the camera</li> <li>• Sunlight or headlights are shining directly into the camera</li> <li>• The vehicle is under fluorescent lights, sodium lights, mercury lights, etc.</li> </ul> | <p>Drive while visually checking the vehicle's surroundings. (Use the Multi-terrain Monitor again once conditions have been improved.)</p> <p>The procedure for adjusting the picture quality of the Multi-terrain Monitor is same as the procedure for adjusting the navigation screen. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".</p> |
| <b>❑ The image is blurry</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                               |
| Dirt or foreign matter (such as water droplets, snow, mud, etc.) is adhering to the camera                                                                                                                                                                                                                                                                                                                                                                                                                     | Flush the camera with a large quantity of water and wipe the camera lens with a soft and wet cloth.                                                                                                                                                                                                                                           |
| <b>❑ The image is out of alignment</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                               |
| The camera or surrounding area has received a strong impact                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Have the vehicle inspected by your Lexus dealer.                                                                                                                                                                                                                                                                                              |
| <b>❑ The guide lines are very far out of alignment</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                               |
| The camera position is out of alignment                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Have the vehicle inspected at your Lexus dealer.                                                                                                                                                                                                                                                                                              |
| <ul style="list-style-type: none"> <li>• The vehicle is tilted (there is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li> <li>• The vehicle is used on an incline</li> </ul>                                                                                                                                                                                                                                                                                               | <p>If this happens due to these causes, it does not indicate a malfunction.</p> <p>Drive while visually checking the vehicle's surroundings.</p>                                                                                                                                                                                              |

| Likely cause                                                                                                                                                         | Solution                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>❑ The projected course lines move even though the steering wheel is straight (vehicle width extension guide lines and projected course lines are not aligned)</b> |                                                                                                                                            |
| There is a malfunction in the signals being output by the steering sensor                                                                                            | Have the vehicle inspected by your Lexus dealer.                                                                                           |
| <b>❑ Guide lines are not displayed</b>                                                                                                                               |                                                                                                                                            |
| The back door is open                                                                                                                                                | Close the back door.<br>If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.                             |
| <b>❑ "!" is displayed</b>                                                                                                                                            |                                                                                                                                            |
| The battery is disconnected and reconnected                                                                                                                          | Turn the steering wheel fully to right and left.<br>If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer. |
| There is a malfunction in the Multi-terrain Monitor                                                                                                                  | Have the vehicle inspected by your Lexus dealer.                                                                                           |

 NOTICE

■ How to use the camera

- The Multi-terrain Monitor system may not operate properly in the following cases.
  - If the front or the rear of the vehicle or the outside rear view mirror has been hit, the camera's position and mounting angle may have changed.
  - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
  - When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
  - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
  - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
  - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
  - When the camera is used under fluorescent lights, sodium light or mercury light etc., the lights and the illuminated areas may appear to flicker.
  - The camera can be damaged by flying rocks and other debris.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Lexus dealer as soon as possible.


## BSM (Blind Spot Monitor)

### Summary of the Blind Spot Monitor

The Blind Spot Monitor is a system that has 2 functions:

- The BSM (Blind Spot Monitor) function  
Assists the driver in making a decision when changing lanes
- RCTA (Rear Cross Traffic Alert) function  
Assists the driver when backing up

These functions use same sensors.

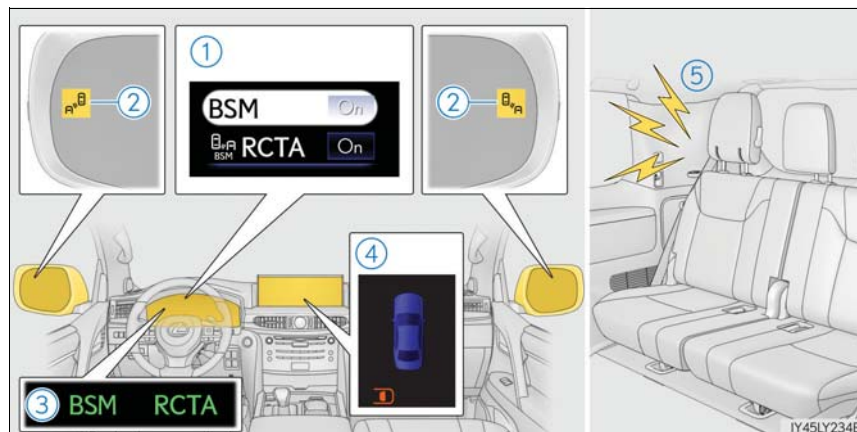

① Multi-information display

The BSM function/RCTA function can be turned on/off. (→P. 371)

The RCTA function is available when the BSM function is on.

② Outside rear view mirror indicators

BSM function:

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.

RCTA function:

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

③ "BSM" indicator/"RCTA" indicator

When the BSM function/RCTA function is turned on, the indicator illuminates

④ Monitor screen display (RCTA function only)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P. 378) for the detected side will be displayed on the monitor screen. This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.

⑤ RCTA buzzer (RCTA function only)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM function is operated to turn the system on.

### Turning the BSM function/RCTA function on/off

- 1 Press  or  of the meter control switches, select .
- 2 Press  or  of the meter control switches, select "BSM", and then press .
- 3 Press  or  of the meter control switches, select "BSM" or "RCTA", and then press .

#### ■ Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

#### ■ Hearing RCTA buzzer

The RCTA buzzer may be difficult to hear over loud noises, such as if the audio system volume is high.

#### ■ When "Blind Spot Monitor Unavailable" is shown on the multi-information display

Water, snow, mud, etc., may be built up in the vicinity of the sensor area of bumper. (→P. 372)  
Removing the water, snow, mud, etc., from the vicinity of the sensor area of bumper should return it to normal.

Also, the sensor may not function normally when used in extremely hot or cold weather.

#### ■ When "Blind Spot Monitor System Malfunction" is shown on the multi-information display

There may be a sensor malfunction or voltage abnormality. Have the vehicle inspected at your Lexus dealer.

#### ■ Certification for the Blind Spot Monitor

- For vehicles sold in the U.S.A., Hawaii, Guam and Puerto Rico

FCC ID : OAYSRR3A

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

##### FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

Applicable law : Canada 310

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Frequency bands : 24.05 - 24.25GHz

Output power : less than 20 milliwatts

Droit applicable : Canada 310

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Bandes de fréquences : 24.05 - 24.25GHz

Puissance émise : Moins de 20 milliwatts




## WARNING

### ■ Handling the radar sensor


One Blind Spot Monitor sensor is installed inside the left and right side of the vehicle rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can function correctly.

- Keep the sensors and the surrounding areas on the rear bumper clean at all times.  
If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message (→P. 371) will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P. 375) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by your Lexus dealer.
- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.  
If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.  
In the following situations, have your vehicle inspected by your Lexus dealer.
  - A sensor or its surrounding area is subject to a strong impact.
  - If the surrounding area of a sensor is scratched or dented, or part of it has become disconnected.
- Do not disassemble the sensor.
- Do not attach stickers to the sensor or surrounding area on the rear bumper.
- Do not modify the sensor or surrounding area on the rear bumper.
- Do not paint the rear bumper any color other than an official Lexus color.

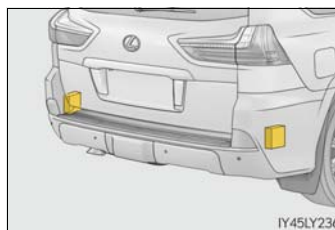

**BSM function**


The BSM function uses radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators on the outside rear view mirrors.

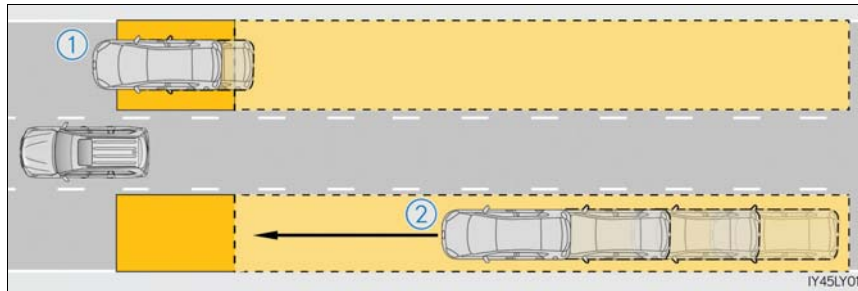

- ① Vehicles that are traveling in areas that are not visible using the outside rear view mirrors (the blind spots)
- ② Vehicles that are approaching rapidly from behind in areas that are not visible using the outside rear view mirrors (the blind spots)

### BSM function detection areas

The areas that vehicles can be detected in are outlined below.

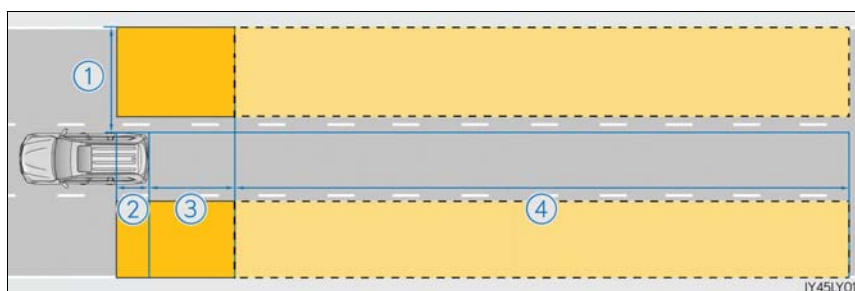

The range of each detection area is:

- ① Approximately 1.6 ft. (0.5 m) to 11.5 ft. (3.5 m) from either side of the vehicle\*

\*: The area between the side of the vehicle and 1.6 ft. (0.5 m) from the side of the vehicle cannot be detected.

- ② Approximately 3.3 ft. (1 m) forward of the rear bumper

- ③ Approximately 9.8 ft. (3 m) from the rear bumper

- ④ Approximately 9.8 ft. (3 m) to 197 ft. (60 m) from the rear bumper\*

\*: The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash.

### WARNING

#### ■ Cautions regarding the use of the function

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The BSM function is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the BSM function. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

**■ The BSM function is operational when**

The BSM function is operational when all of the following conditions are met:

- The BSM function is on.
- The shift lever is in a position other than R.
- The vehicle speed is greater than approximately 10 mph (16 km/h).

**■ The BSM function will detect a vehicle when**

The BSM function will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- Another vehicle enters the detection area when it changes lanes.

**■ Conditions under which the BSM function will not detect a vehicle**

The BSM function is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.\*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- Following vehicles that are in the same lane\*
- Vehicles traveling 2 lanes away from your vehicle\*


\*: Depending on the conditions, detection of a vehicle and/or object may occur.

**■ Conditions under which the BSM function may not function correctly**

- The BSM function may not detect vehicles correctly in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
  - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
  - When multiple vehicles are approaching with only a small gap between each vehicle
  - When the distance between your vehicle and a following vehicle is short
  - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
  - When the difference in speed between your vehicle and another vehicle is changing
  - When a vehicle enters a detection area traveling at about the same speed as your vehicle
  - As your vehicle starts from a stop, a vehicle remains in the detection area
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
  - When a bicycle carrier or other accessory is installed to the rear of the vehicle
  - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
  - Immediately after the BSM function is turned on
- Instances of the BSM function unnecessarily detecting a vehicle and/or object may increase in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When the distance between your vehicle and a guardrail, wall, etc. that enters the detection area is short
  - When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
  - When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
  - When driving on roads with sharp bends, consecutive curves, or uneven surfaces
  - When the tires are slipping or spinning
  - When the distance between your vehicle and a following vehicle is short
  - When a bicycle carrier or other accessory is installed to the rear of the vehicle

### RCTA function

The RCTA function uses radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

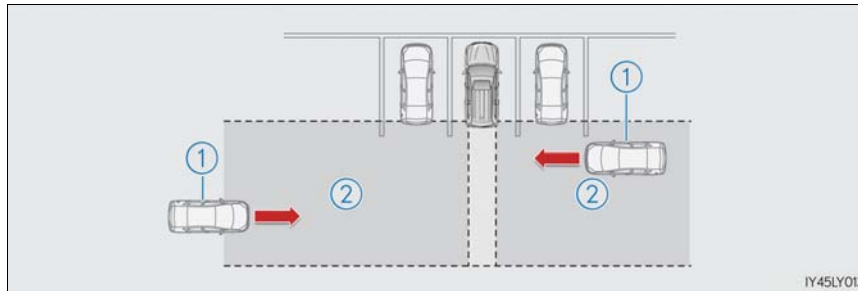

- ① Approaching vehicles
- ② Detection areas of approaching vehicles

### ■ RCTA icon display

When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the monitor screen

| Display                                                                             | Content                                                            |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------|
|    | A vehicle is approaching from the left at the rear of the vehicle  |
|    | A vehicle is approaching from the right at the rear of the vehicle |
|   | Vehicles are approaching from both sides of the vehicle            |
|  | The RCTA function is malfunctioning (→P. 371)                      |

### ⚠ WARNING


#### ■ Cautions regarding the use of the function

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The RCTA function is only a supplementary function which alerts the driver that a vehicle is approaching from the right or left at the rear of the vehicle. As the RCTA function may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary. Over reliance on this function may lead to an accident resulting death or serious injury.

### RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

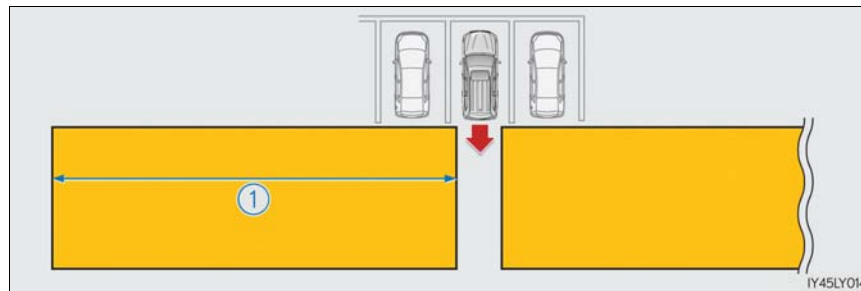

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

| Approaching vehicle | Speed            | ① Approximate alert distance |
|---------------------|------------------|------------------------------|
| Fast                | 18 mph (28 km/h) | 65 ft. (20 m)                |
| Slow                | 5 mph (8 km/h)   | 18 ft. (5.5 m)               |

4

Driving

#### ■ The Rear Cross Traffic Alert function is operational when


The Rear Cross Traffic Alert function operates when all of the following conditions are met:

- The RCTA function is on.
- The shift lever is in R.
- The vehicle speed is less than approximately 5 mph (8 km/h).
- The approaching vehicle speed is between approximately 5 mph (8 km/h) and 18 mph (28 km/h).

**■ Conditions under which the Rear Cross Traffic Alert function will not detect a vehicle**

The Rear Cross Traffic Alert function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

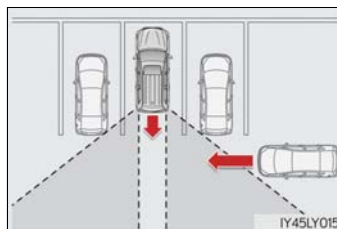


- Guardrails, walls, signs, parked vehicles and similar stationary objects \*
- Small motorcycles, bicycles, pedestrians, etc. \*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle \*


\*: Depending on the conditions, detection of a vehicle and/or object may occur.

### ■ Conditions under which the Rear Cross Traffic Alert function may not function correctly


- The Rear Cross Traffic Alert function may not detect vehicles correctly in the following situations:
  - When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
  - When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
  - When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
  - When multiple vehicles are approaching with only a small gap between each vehicle
  - When a vehicle is approaching at high speed
  - When backing up on a slope with a sharp change in grade

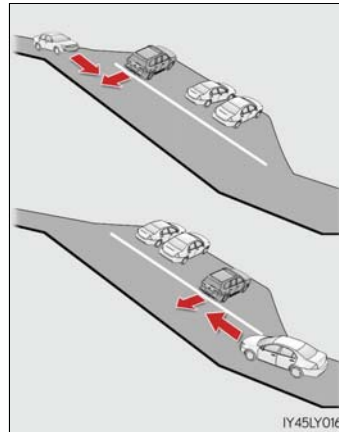


- When backing out of a shallow angle parking spot

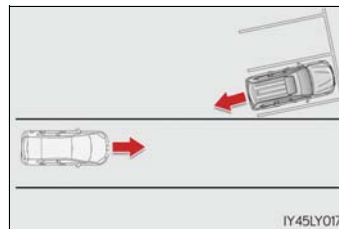

- Immediately after the BSM function is turned on
- Immediately after the engine is started with the BSM function on
- When the sensors cannot detect a vehicle due to obstructions

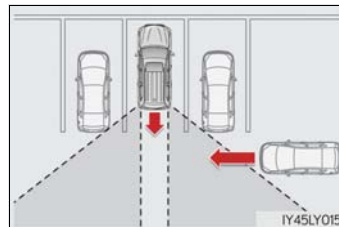

- Instances of the Rear Cross Traffic Alert function unnecessarily detecting a vehicle and/or object may increase in the following situations:
  - When a vehicle passes by the side of your vehicle
  - When the parking space faces a street and vehicles are being driven on the street

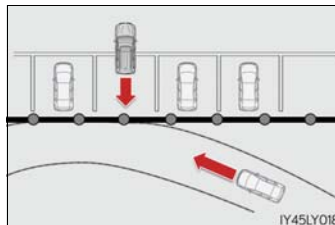

- When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

### Setting up BSM function/RCTA function

You can change the BSM function/RCTA function settings.

- 1** Press the "MENU" button on the Remote Touch, and then select "Setup" on the screen.
- 2** Select "Vehicle", and then select "Blind Spot Monitor Settings" on the screen.
- 3** Select the desired setting. (→P. 596)

## Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

### ◆ Multi Terrain ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface, or in off-road conditions (such as rough roads, sand and mud)

### ◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

### ◆ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

### ◆ Active TRAC (Traction Control)

Helps to maintain drive power and prevent the 4 wheels from spinning when starting the vehicle or accelerating on slippery roads, or in off-road conditions

### ◆ Hill-start assist control

Helps to reduce the backward movement of the vehicle when starting on an incline or slippery slope

### ◆ AVS (Adaptive Variable Suspension system)

By independently controlling the damping force of the shock absorbers for each of the 4 wheels according to the road and driving conditions, this system helps riding comfort with superior steering stability, and helps good vehicle posture. When SPORT S+ mode is selected by the driving mode select switch, the damping force is suitable for sporty driving. (→P. 290)

### ◆ VGRS (Variable Gear Ratio Steering)

Helps to adjust the wheel turning angle in accordance with the vehicle speed and steering wheel movement.

### ◆ Trailer Sway Control

Helps the driver to control trailer sway by selectively applying brake pressure for individual wheels and reducing engine torque when trailer sway is detected.

Trailer Sway Control is part of the VSC system and will not operate if VSC turned off or experiences a malfunction.

### When the VSC/Trailer Sway Control/Active TRAC/hill-start assist control systems are operating

The slip indicator light flashes to indicate that the VSC/Trailer Sway Control/Active TRAC/hill-start assist control systems have been engaged.

The stop lights and high mounted stop-light turn on when the hill-start assist control system or Trailer Sway Control is operating.




### Disabling the Active TRAC system

If the vehicle gets stuck in fresh snow or mud, Active TRAC system reduce power from the engine to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.

Quickly push and release the button to turn off Active TRAC.

The TRAC OFF indicator will come on.

Push the button again to turn the system back on.

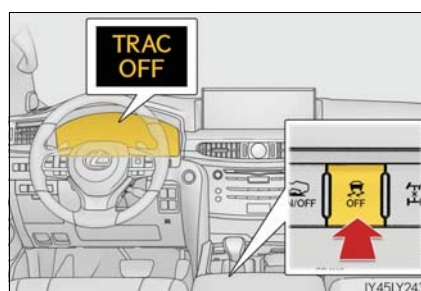

### ■ Turning off Active TRAC, VSC and Trailer Sway Control

Push and hold the button for more than 3 seconds while the vehicle is stopped to turn off Active TRAC, VSC and Trailer Sway Control

The VSC OFF indicator light and TRAC OFF indicator will come on.\*

Push the button again to turn the system back on.

\*: On vehicles with pre-collision system, pre-collision brake assist and pre-collision braking will also be disabled. The PCS warning light will come on and the message will be shown on the multi-information display. (→P. 255)

### ■ Automatic reactivation of Active TRAC, VSC and Trailer Sway Control

Turning the engine switch off after turning off the Active TRAC and VSC systems will automatically re-enable them.

#### ■ Automatic Active TRAC reactivation

If only the Active TRAC system is turned off, the Active TRAC system will turn on when vehicle speed increases.

#### ■ Automatic Active TRAC, VSC and Trailer Sway Control reactivation

If the Active TRAC, VSC and Trailer Sway Control are turned off, the systems will not turn on even when vehicle speed increases.

#### ■ If the brake system overheats

The brake system may overheat. In this case, a buzzer will sound, and the TRAC OFF indicator will flash, and Active TRAC and hill-start assist control will be temporarily inoperable. In this event, stop the vehicle immediately in a safe place, and allow the brake system to cool down sufficiently until the TRAC OFF indicator goes off. (There is no problem with continuing normal driving.)

#### ■ Sounds and vibrations caused by the Multi Terrain ABS, brake assist, Active TRAC, VSC, Trailer Sway Control, hill-start assist control and VGRS

- A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
  - Vibrations may be felt through the vehicle body and steering.
  - A motor sound may be heard after the vehicle comes to a stop.
  - The brake pedal may pulsate slightly after the Multi Terrain ABS is activated.
  - The brake pedal may move down slightly after the Multi Terrain ABS is activated.

#### ■ Hill-start assist control is operational when

- The shift lever is in D or S.
- The brake pedal is not depressed.

#### ■ VGRS is disabled in the following situations

- During stopping or the steering wheel has been moved for a long time while driving at lower speeds.
- After the engine is restarted at less than -22°F (-30°C).
- If you disconnect the battery with the steering wheel turned, the center position of the steering wheel could be slightly and temporary changed. To initialize the VGRS, drive for a short while.

**WARNING**

Any of the following conditions may result in an accident which could cause death or serious injury:

■ **The Multi Terrain ABS does not operate effectively when**

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on a wet or slick road.

■ **Stopping distance when the Multi Terrain ABS is operating may exceed that of normal conditions**

The Multi Terrain ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations.

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven roads

■ **Active TRAC may not operate effectively when**

Directional control and power may not be achievable while driving on slippery road surfaces, even if the Active TRAC is operating. Do not drive the vehicle in conditions where stability and power may be lost.

■ **If the hill-start assist control does not operate effectively**

Do not overly rely on the hill-start assist control. The hill-start assist control may not operate effectively on steep inclines and roads covered in ice.

■ **When Active TRAC, VSC and Trailer Sway Control are off**

Be especially careful and drive at a speed appropriate to the road conditions. As these are systems to help to ensure vehicle stability and driving force, do not turn off Active TRAC, VSC and Trailer Sway Control unless necessary.

■ **When the VSC and Trailer Sway Control are activated**

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

**⚠ WARNING****■ Replacing tires**

Make sure that all tires are of the same size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the specified tire pressure level.

The Multi Terrain ABS, Active TRAC, VSC and Trailer Sway Control will not function correctly if different tires are fitted on the vehicle.

Contact your Lexus dealer for further information when replacing tires or wheels.

**■ Handling of tires and suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause the system to malfunction.

**■ Trailer Sway Control precaution**

The Trailer Sway Control system is not able to reduce trailer sway in all situations. Depending on many factors such as the conditions of the vehicle, trailer, road surface, and driving environment, the Trailer Sway Control system may not be effective. Refer to your trailer owner's manual for information on how to tow your trailer properly.

**■ If trailer sway occurs**

Observe the following precautions.

Failing to do so may cause death or serious injury.

- Firmly grip the steering wheel. Steer straight ahead.  
Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed.  
Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize. (→P. 207)

## Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

### Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine coolant
  - Washer fluid
- Have a service technician inspect the condition of the battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the rear tires.\*

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

\*: Tire chains cannot be mounted on vehicles with 21-inch tires

### Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

**When driving the vehicle**

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

**When parking the vehicle**

- Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the wheels.

Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P\*.

When the parking brake is in automatic mode, release the parking brake after shifting the shift lever to P. (→P. 224)

\*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by your Lexus dealer immediately.

4

Driving


**Selecting tire chains**

- ▶ Vehicles with 20-inch tires

Use the correct tire chain size when mounting the snow chains.

Chain size is regulated for each tire size.

- ① Side chain  
(0.20 in. [5 mm] in diameter)
- ② Cross chain  
(0.25 in. [6.3 mm] in diameter)

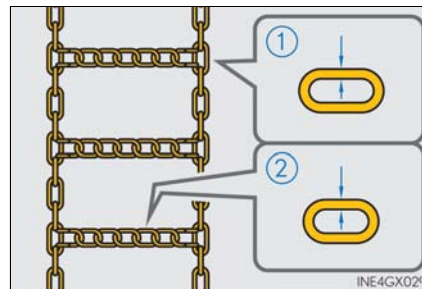

- ▶ Vehicles with 21-inch tires

Tire chains cannot be mounted.

Snow tires should be used instead.

### Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

#### ■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the rear tires. Do not install tire chains on the front tires.
- Install tire chains on rear tires as tightly as possible. Retighten chains after driving 1/4 - 1/2 mile (0.5 - 1.0 km).
- Install tire chains following the instructions provided with the tire chains.



#### WARNING

##### ■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents.

Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive in excess of 75 mph (120 km/h), regardless of the type of snow tires being used.
- Use snow tires on all, not just some wheels.

##### ■ Driving with tire chains (vehicles with 20-inch tires)

Observe the following precautions to reduce the risk of accidents.

Failing to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 30 mph (50 km/h), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LDA (Lane Departure Alert) system. (if equipped)

##### ■ When installing tire chains (vehicles with 20-inch tires)

Turn off the vehicle height control.

The vehicle height may change due to the automatic leveling function and you may catch part of your body in the vehicle, resulting in an accident. (→P. 304)



## NOTICE

**■ Repairing or replacing snow tires**

Request repairs or replacement of snow tires from Lexus dealers or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

**■ Fitting tire chains (vehicles with 20-inch tires)**

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

## Off-road precautions

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity to make it capable of performing in a wide variety of off-road applications.

## Off-road vehicle features

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause the vehicle to rollover.

**WARNING****■ Off-road vehicle precautions**

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should always fasten their seat belts.
- Avoid sharp turns or abrupt maneuvers, if at all possible.  
Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

### Off-road driving

When driving your vehicle off-road, please observe the following precautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles:

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.
- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

---

#### ■ Additional information for off-road driving

- ▶ For owners in U.S. mainland, Hawaii and Puerto Rico:

To obtain additional information pertaining to driving your vehicle off-road, consult the following organizations:

- State and Local Parks and Recreation Departments
- State Motor Vehicle Bureau
- Recreational Vehicle Clubs
- U.S. Forest Service and Bureau of Land Management

**WARNING****■ Off-road driving precautions**

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.
- After driving through tall grass, mud, rock, sand, rivers, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped on the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.



## NOTICE

**■ To prevent the water damage**

Take all necessary safety measures to ensure that water damage to the engine or other components does not occur.

- Water entering the engine air intake will cause severe engine damage.
- Water entering the automatic transmission will cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the differentials, transmission and transfer case, reducing the gear oil's lubricating qualities.

**■ When you drive through water**

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the riverbed for firmness. Drive slowly and avoid deep water.

**■ Inspection after off-road driving**

- Sand and mud that has accumulated in brake drums and around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water. For scheduled maintenance information, refer to the "Warranty and Services Guide", "Owner's Manual Supplement" or "Scheduled Maintenance".

## Interior features

## 5

**5-1. Remote Touch screen**

Remote Touch/12.3-inch  
display ..... 398

**5-2. Lexus Climate Concierge**

Lexus Climate Concierge..... 404

**5-3. Using the air conditioning system and defogger**

Front automatic air  
conditioning system ..... 405

Rear air conditioning  
system ..... 416

Heated steering wheel/seat  
heaters/seat ventilators..... 419

**5-4. Using the interior lights**

Interior lights list.....423

- Interior lights .....424
- Personal lights .....425

**5-5. Using the storage features**

List of storage features ..... 426

- Glove box ..... 427
- Console box..... 427
- Overhead console .....428
- Cup holders .....429
- Bottle holders .....430
- Card holder.....430
- Auxiliary boxes ..... 431

Luggage compartment  
features .....433

**5-6. Using the other interior features**

Other interior features ..... 436


- Cool box.....436
- Sun visors .....437
- Vanity mirrors .....437
- Clock .....438
- Power outlets.....438
- Wireless charger .....441
- Armrest.....449
- Rear door sunshades .....450
- Coat hooks.....450
- Assist grips.....451

Garage door opener .....452

## Remote Touch/12.3-inch display

The Remote Touch can be used to operate the Remote Touch screens. Owners of models equipped with a navigation system should refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".


### Remote Touch operation

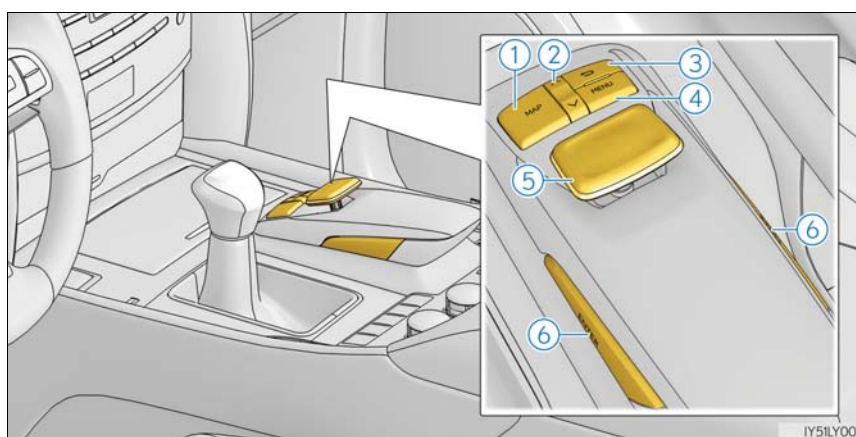

- ① "MAP" button  
Press this button to display the vehicle's current position.
- ② "∧•∨" button  
Press this button to change map scale and scroll through lists.
- ③ Back button  
Press this button to display the previous screen.
- ④ "MENU" button  
Press this button to display the "Menu" screen.
- ⑤ Remote Touch knob  
Move in the desired direction to select a function, letter and screen button.  
Press the knob to enter the selected function, letter or screen button.
- ⑥ "ENTER" button  
Press this button to enter the selected function, letter or screen button.

**Remote Touch operation**

- ① Select: Move the Remote Touch knob in the desired direction.
- ② Enter: Press the Remote Touch knob or "ENTER" button.

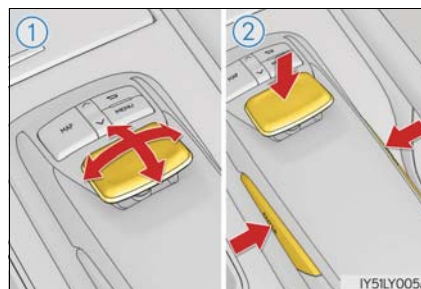**Screen display during low temperatures**

When the ambient temperature is extremely low, screen response may be delayed even if the Remote Touch is operated.

**⚠ WARNING****■ When using the Remote Touch**

- Do not allow fingers, fingernails or hair to become caught in the Remote Touch as this may cause an injury.
- Be careful when selecting the Remote Touch in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

**⚠ NOTICE****■ To prevent damage to the Remote Touch**

- Do not allow the Remote Touch to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Remote Touch to excessive pressure or strong impact as the knob may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Remote Touch as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Remote Touch knob.
- If your hand or any object is on the Remote Touch knob when the engine switch is in ACCESSORY mode, the Remote Touch knob may not operate properly.

**"Menu" screen**

Press the "MENU" button on the Remote Touch to display the "Menu" screen.  
The display may differ depending on the type of the system.



When the split-screen display is selected, the "Menu" screen will be displayed on the main display. (→P. 401)

| Switch                                                                              | Function                                                         |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------|
|  | Select to display the "Destination" screen.*                     |
|  | Select to display the radio control screen.*                     |
|  | Select to display the media control screen.*                     |
|  | Select to display the hands-free operation screen.*              |
|  | Select to display the "LEXUS App Suite" screen.*                 |
|  | Select to display the "Information" screen.*                     |
|  | Select to display the air conditioning control screen. (→P. 405) |
|  | Select to display the "Setup" screen.*                           |

| Switch    | Function                                                                                |
|-----------|-----------------------------------------------------------------------------------------|
| "Display" | Select to adjust the contrast and brightness of the screens, turn the screen off, etc.* |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

12.3-inch display operation

■ Full screen display




The following functions can be displayed full screen:

- Initial screen
- "Menu" screen (→P. 400)
- Map screen\*

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

### ■ Split-screen display

Different information can be displayed on the left and right of the screen. For example, air conditioning system or audio screens can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

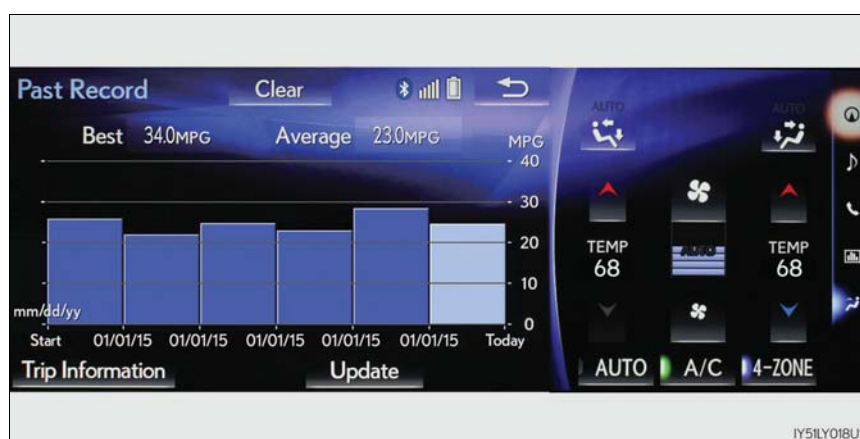

## Split-screen display operation

### ■ Main Display

For details about the functions and operation of the main display, refer to the respective section and "NAVIGATION SYSTEM OWNER'S MANUAL".

### ■ Side Display

#### ► Basic screens

To change the screen displayed on the side display, use the screen buttons on the right side of the display.

- ① Navigation system\*
- ② Audio\*
- ③ Phone\*
- ④ Vehicle information (→P. 110)
- ⑤ Air conditioning system (→P. 405)



#### ► Interruption screens

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist (→P. 293)
- Phone\*
- Destination Assist
- Driving mode (→P. 290)

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".


## Lexus Climate Concierge

The seat heaters, seat ventilators and heated steering wheel are each automatically controlled according to the set temperature of the air conditioning system, the outside and cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

### “CLIMATE CONCIERGE” switch

When the switch is pressed, the indicator above the switch illuminates and all of the following systems operate in automatic mode.

If any of the system is operated manually, the indicator turns off. However, all other functions continue to operate in automatic mode.

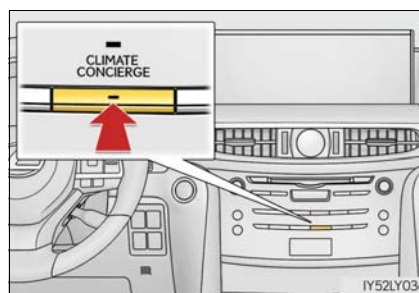

### ■ Automatic air conditioning system (→P. 405, 416)

The temperature can be adjusted individually for the driver seat, passenger seat, and rear seats.

When a passenger is detected in the second seat, the rear air conditioning operates in automatic mode.

### ■ Seat heaters and ventilators (if equipped) (→P. 419)

Heating or ventilation is automatically selected according to the set temperature of the air conditioning system, the outside temperature, etc.

The seat heaters and ventilators of the front passenger seat and second outboard seats operate in automatic mode if passengers are detected.

### ■ Heated steering wheel (if equipped) (→P. 419)

Heated steering wheel operates automatically according to the outside temperature and cabin temperature.

### ■ Front air conditioning system operation

To improve air conditioning performance in the front seat area, the air outlets on the rear of the console box may close when there is no passenger in the second seat.

### ■ Rear air conditioning system operation

The rear air conditioning system may stop automatically when there is no passenger in the second seat.

### ■ Seat heater/ventilator operation

When automatic mode is selected using the seat heater/ventilator switch, passenger detection is not performed.


## Front automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

Select the "MENU" button on the Remote Touch, then select  to display the air conditioning control screen. (→P. 400)

The air conditioning system can be displayed and operated on the side display. (→P. 402)

### Control panel

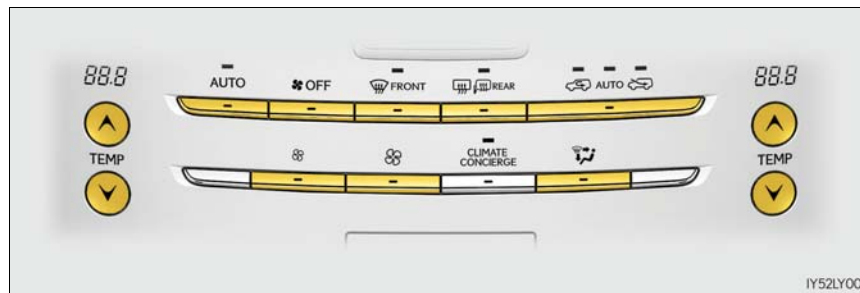

#### ■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

If the  indicator is turned off, the system will blow ambient temperature air or heated air.

#### ■ Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.


Press  to turn the fan off.

### ■ Change the airflow mode

To change the air outlets, press .

The air outlets used are switched each time the button is pressed.

- ① Air flows to the upper body.
- ② Air flows to the upper body and feet.
- ③ Air flows to the feet.
- ④ Air flows to the feet and the windshield defogger operates

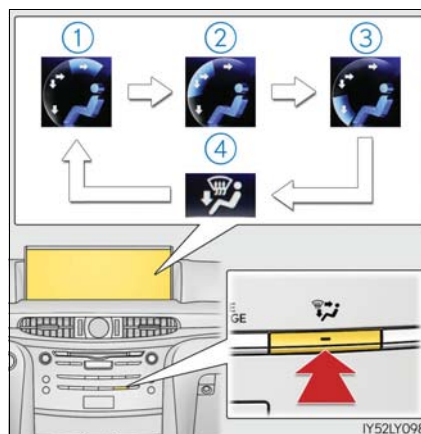

### ■ Other functions

- Switching between outside air and recirculated air modes (→P. 411)
- Defogging the windshield (→P. 411)
- Defogging the rear window and outside rear view mirrors (→P. 411)

## Control screen

### ■ Main display



- ① Left-hand front seat side temperature control
- ② Left-hand front seat side air outlet selector
- ③ Air flows to the feet and the windshield defogger operates
- ④ Fan speed control
- ⑤ Right-hand front seat side air outlet selector
- ⑥ Option control screen
- ⑦ Right-hand front seat side temperature control
- ⑧ Rear air conditioning operation screen
- ⑨ Eco mode
- ⑩ Adjust the temperature for driver, passenger and rear seats separately ("4-ZONE" mode)
- ⑪ Cooling and dehumidification function on/off
- ⑫ Automatic mode

### ■ Changing the air flow mode

To adjust settings, select the screen button.



— Air flows to the upper body.



— Air flows to the upper body and feet.




— Air flows to the feet.



— Air flows to the feet and the windshield defogger operates.

### ■ Side display


- ① Select the left-hand front seat side air flow mode
- ② Adjust the left-hand side temperature setting
- ③ Adjust the fan speed setting
- ④ Select the right-hand front seat side air flow mode
- ⑤ Adjust the right-hand side temperature setting
- ⑥ Adjust the temperature for driver and passenger seats separately ("4-ZONE" mode)
- ⑦ Select to set cooling and dehumidification function on/off
- ⑧ Select to set auto mode on

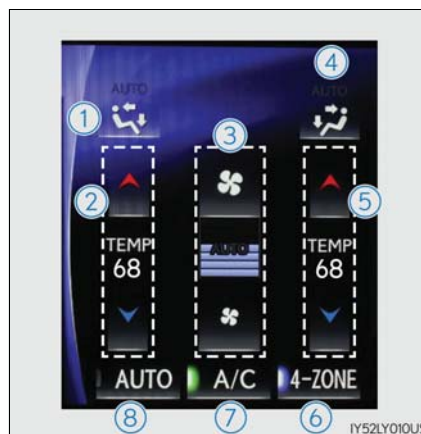

### ■ Option control screen


Select  on the main display to display the option control screen. The functions can be switched on and off.

- ① Prevent ice from building up on the windshield and wiper blades (→P. 411)
- ② Micro dust and pollen filter (→P. 411)

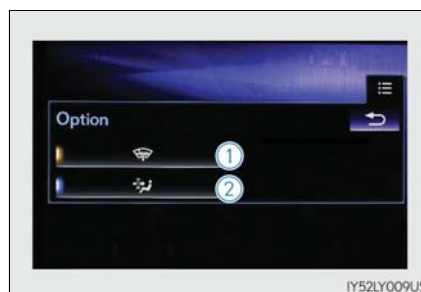

## Air conditioning controls

### ■ Using the automatic mode

- 1 Press  or select  on the control screen.

The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

- 2 Press  to switch to automatic air intake mode.

The air conditioning system automatically switches between outside air and recirculated air modes.

- 3 Press  or select  to increase the temperature and press  or select  to decrease the temperature.


The temperature for the driver's and front passenger's seats can be set separately.

- 4 To stop the operation, press .

### ■ Automatic mode indicator

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

## Adjusting the temperature for driver and passenger seats separately ("4-ZONE" mode)

The air conditioning system switches between individual and simultaneous modes each time  on the control screen is selected.

Individual mode (the indicator is on.): The temperature for the driver's, front passenger's and rear seats (→P. 416) can be adjusted separately. Operating the passenger's side or rear temperature control will enter individual mode.

In the simultaneous mode, only  (increase) or  (decrease) on the driver's side can be used to adjust the temperature for all seats.

### Changing the rear seat settings

#### ■ Using the automatic mode

- 1 Select  on the main display.
- 2 Select .
- 3 Select  to increase the temperature and  to decrease the temperature.



#### ■ Adjusting the temperature setting

- 1 Select  on the main display.
- 2 Select  to increase the temperature and  to decrease the temperature.

Operating the switch will enter individual mode.

- ① Left-hand rear seat
- ② Right-hand rear seat



#### ■ Adjusting the fan speed setting

- 1 Select  on the main display.
- 2 Select  to increase the fan speed and  to decrease the fan speed.
- 3 Select  to turn the fan off.

## Other functions

### ■ Switching between outside air and recirculated air modes

Press  on the control panel.

The mode switches among  (recirculated air mode), "AUTO" and  (outside air mode) each time  is pressed.

When the system is switched to automatic mode, it operates automatically.

### ■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press  on the control panel.

Set the outside/recirculated air mode button to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows early, turn the air flow and temperature up.

To return to the previous mode, press  again when the windshield is defogged.

### ■ Defogging the rear window and outside rear view mirrors

Defoggers are used to defog the rear window and to remove raindrops, dew and frost from the outside rear view mirrors.

Press  on the control panel.

Press  again to turn the defogger off.

### ■ Micro dust and pollen filter

Pollen is removed from the air and the air flows to the upper part of the body.

Select  on the option control screen.

In order to prevent the windshield from fogging up when the outside air is cold, the dehumidification function may operate.

The pollens are filtered out even if the micro dust and pollen filter is turned off.

### ■ Windshield wiper de-icer

This feature is used to prevent ice from building up on the windshield and wiper blades.

Select  on the option control screen.


When the windshield wiper de-icer is on, the indicator turns on.

The windshield wiper de-icer will automatically turn off after a period of time.

### Air outlets

#### ■ Location of air outlets


The air outlets and air volume changes according to the selected air flow mode.

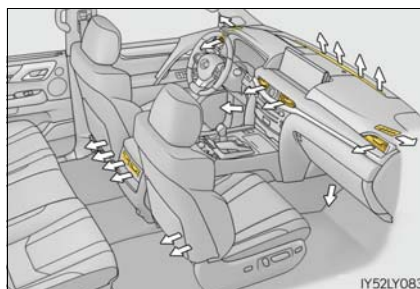

IY52LY083


#### ■ Adjusting the air flow direction and opening/closing the air outlets

##### ► Front side

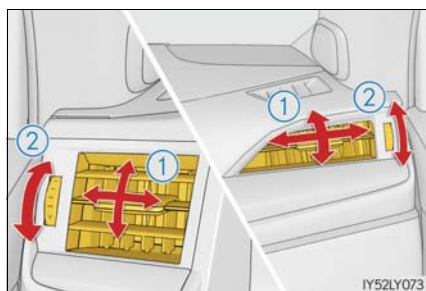


IY52LY073

##### ► Front center

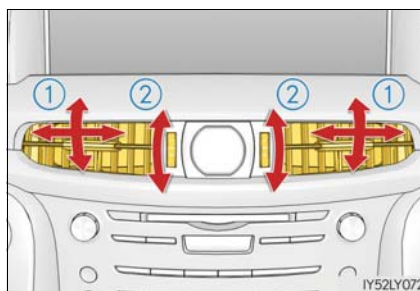

IY52LY072

##### ► Rear

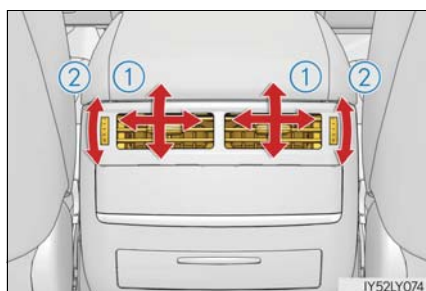

IY52LY074

- ① Direct air flow to the left or right, up or down
- ② Turn the knob to open or close the vent

#### ■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the  is pressed or  on the control screen is selected.

#### ■ Operation of the air conditioning system in Eco drive mode

- In the Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency
  - Engine speed and compressor operation controlled to restrict heating/cooling capacity
  - Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations
  - Adjust the fan speed
  - Turn off Eco mode

#### ■ Using the voice command system

Air conditioning system can be operated using voice commands. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

#### ■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Selecting  will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn  off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

#### ■ Outside/recirculated air mode

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

#### ■ When the outside temperature exceeds 75°F (24°C) and the air conditioning system is on

- In order to reduce the air conditioning power consumption, the air conditioning system may switch to recirculated air mode automatically. This may also reduce fuel consumption.
- Recirculated air mode is selected as a default mode when the engine switch is turned to IGNITION ON mode.
- It is possible to switch to outside air mode at any time by pressing .

#### ■ Automatic mode for air intake control

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the dehumidification function is off, and the fan is operating, turning automatic mode on will activate the dehumidification function.

#### ■ When the outside temperature is low

The dehumidification function may not operate even when  is selected.

#### ■ Micro dust and pollen filter

- In order to prevent the windows from fogging up when the outside air is cold, the following may occur.

- Outside air mode does not switch to recirculated air mode.
- The air conditioning system operates automatically.
- The operation cancels after 1 minute.

- In rainy weather, the windows may fog up. Press .

#### ■ The rear window defogger, outside rear view mirror defogger and windshield wiper de-icer can be operated when

The engine switch is in IGNITION ON mode.

#### ■ When the windshield wiper de-icer is on

The windshield wiper de-icer will automatically turn off after approximately 15 minutes.

#### ■ Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
  - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

#### ■ While the cool box is on (if equipped)

The front air conditioning system cannot be turned off.

#### ■ Air conditioning filter

→P. 503

#### ■ Customization

Settings (e.g. Exhaust gas sensor sensitivity) can be changed.  
(Customizable features: →P. 584)



#### WARNING

##### ■ To prevent the windshield from fogging up

- Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

##### ■ To prevent burns

- Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.
- Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper de-icer is on.


**NOTICE****■ To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is not running.

## Rear air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

The rear air conditioning operation switches are on the second seat armrest. (→P. 449)

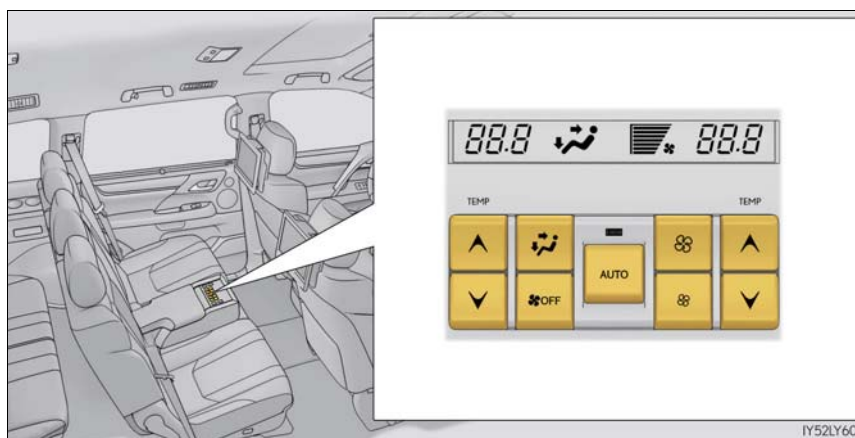

### ■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

### ■ Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.

Press  to turn the fan off.

### ■ Changing the air flow mode

Press .

The air flow mode switches each time the button is pressed.

## Air conditioning controls

### ■ Using the automatic mode

- 1 Press the .
- 2 Adjust the temperature setting.
- 3 To stop the operation, press the .


### ■ If the system is operated manually in automatic mode

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated are maintained.

## Air outlets

### ■ Location of air outlets

The air outlets and air volume changes according to the selected air flow mode.

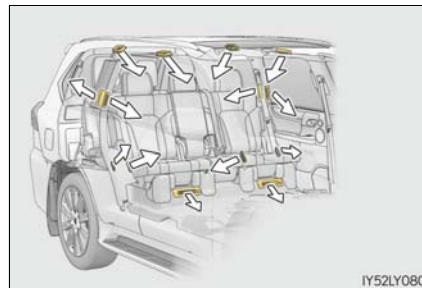


5

Interior features

### ■ Adjusting the position of and opening and closing the air outlets

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob fully to the back of the vehicle to close the vent.

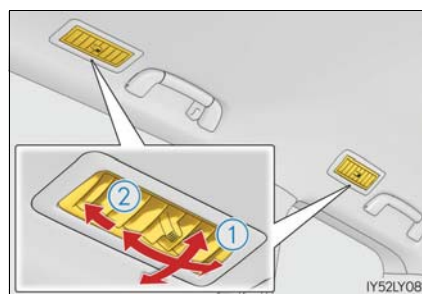

**NOTICE****■ To prevent battery discharge**

Do not leave the air conditioning system on longer than necessary when the engine is not running.

## Heated steering wheel\*/seat heaters/seat ventilators\*

Heated steering wheel and seat heaters heat the side grips of the steering wheel and seats. Seat ventilators maintain good airflow by blowing air from the seats.

### WARNING

- Care should be taken to prevent injury if anyone in the following categories comes in contact with the steering wheel and seats when the heater is on:
  - Babies, small children, the elderly, the sick and the physically challenged
  - Persons with sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Observe the following precautions to prevent the minor burns or overheating:
  - Do not cover the seat with a blanket or cushion when using the seat heater.
  - Do not use seat heater more than necessary.

### NOTICE

- Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.
- To prevent battery discharge, do not use the functions when the engine is off.

5

Interior features

\*: If equipped

**Heated steering wheel (if equipped)**

## ▶ Automatic operation

Operates automatically according to the outside and cabin temperature when "CLIMATE CONCIERGE" switch is on. (→P. 404) Automatic operation can be turned off using the switch.

The indicator light comes on when the heated steering wheel is operating.

## ▶ Manual operation

Turns the heated steering wheel on/off

The indicator light comes on when the heated steering wheel is operating.

■ **The heated steering wheel can be used when**

The engine switch is in IGNITION ON mode.

■ **Timer function**

Automatic operation: Operates for a maximum of 30 minutes.  
(Turns off according to outside and cabin temperature.)

Manual operation: Turns off after approximately 30 minutes.

■ **If the indicator light flashes**


Press the switch to turn the heated steering wheel off and then press the switch again. If the indicator light still flashes, a malfunction may be occurring. Turn the heated steering wheel off and have the vehicle inspected by your Lexus dealer.

■ **Customization**


The automatic turning on/off of the heated steering wheel can be customized. (Customizable features →P. 584)

### Seat heaters and ventilators (if equipped)

#### ► Front seats

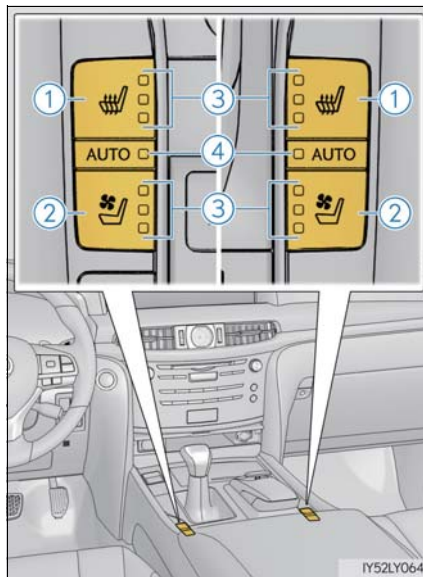

#### ► Second outboard seats

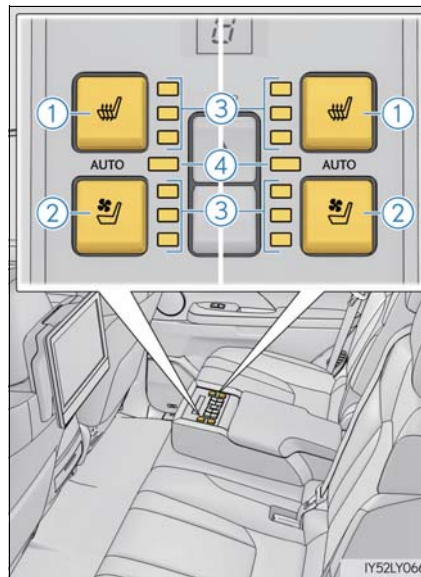

#### ① Seat heater switches

The indicator light (yellow) on the switch comes on when the seat heater is operating.

#### ② Seat ventilator switches (if equipped)

The indicator light (green) on the switch comes on when the seat ventilator is operating.

#### ③ Level indicator lights

The seat heater temperature level or the seat ventilator fan speed level (if equipped) is displayed.

#### ④ "AUTO" indicator lights

### ■ Modes and indicators

The mode can be changed by pressing the switch.

| Mode       | "AUTO" indicator light | Level indicator lights |
|------------|------------------------|------------------------|
| Off        | Off                    | Off                    |
| Automatic* | On                     | 3 to 1, or off         |
| Hi         | Off                    | 3                      |
| Mid        | Off                    | 2                      |
| Lo         | Off                    | 1                      |

\*: When automatic mode is selected, the level automatically changes depending on the air conditioning settings.

### ■ The seat heaters/seat ventilators can be used when

The engine switch is in IGNITION ON mode.


### ■ Replacing the air filters

Filters are installed in the seat ventilators. For replacement of the filters, contact your Lexus dealer.

### ■ Customization

The automatic mode settings for the seat heaters and ventilators can be changed.  
(Customizable features: →P. 584)

## Interior lights list

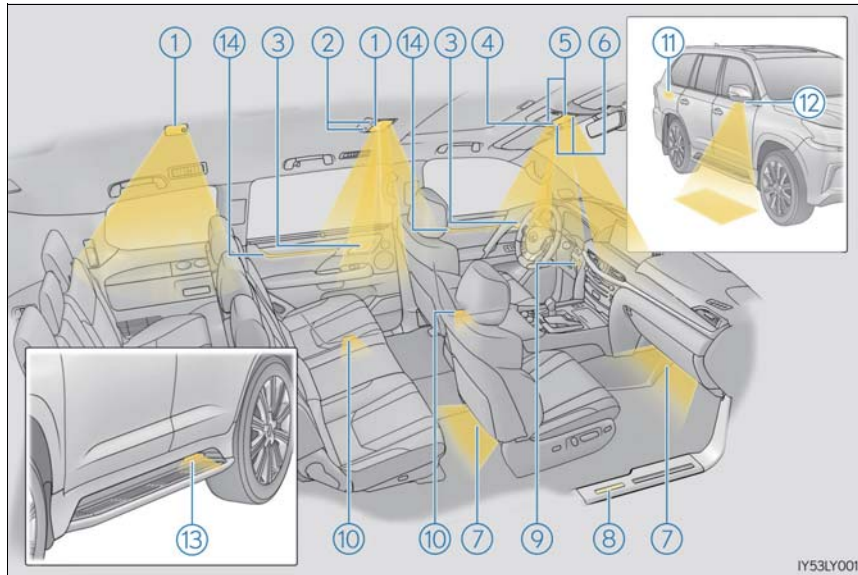


- |                                                                                  |                                           |
|----------------------------------------------------------------------------------|-------------------------------------------|
| ① Rear interior lights (→P. 424)                                                 | ⑦ Footwell lights                         |
| ② Rear personal lights (→P. 425)                                                 | ⑧ Scuff lights (if equipped)              |
| ③ Inside door handle light                                                       | ⑨ Engine switch light                     |
| ④ Front interior lights (→P. 424)                                                | ⑩ Door courtesy light                     |
| ⑤ Front personal lights (→P. 425)                                                | ⑪ Luggage compartment light (if equipped) |
| ⑥ Shift lever light (when the engine switch is in ACCESSORY or IGNITION ON mode) | ⑫ Outer foot lights                       |
|                                                                                  | ⑬ Running board lights                    |
|                                                                                  | ⑭ Door trim lights                        |

**Interior lights**


## ► Front

- ① On/off (touch the light)
- ② Door position on/off

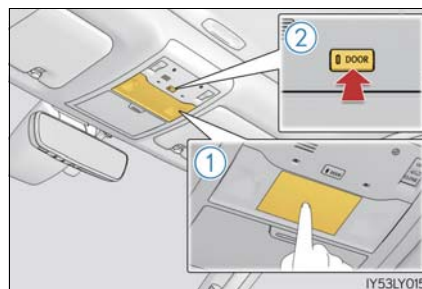


## ► Rear

On/door position on

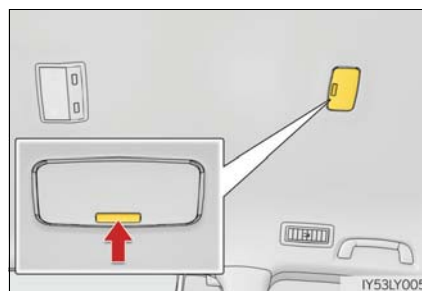


Personal lights

► Front

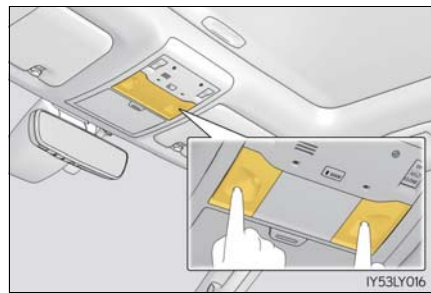

Turns the lights on/off (touch the lights)

► Rear

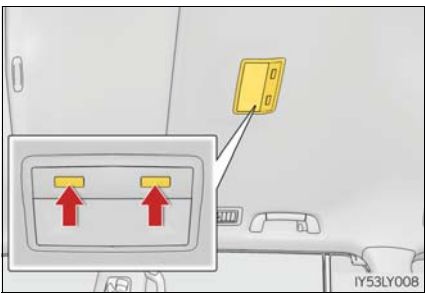

Turns the lights on/off

■ Illuminated entry system

The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.

■ To prevent battery discharge

If the interior lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes:

■ Customization


Settings (e.g. adjust the time elapsed before the interior lights automatically turn off) can be changed. (Customizable features: →P. 584)



NOTICE

To prevent battery discharge, do not leave the lights on longer than necessary when the engine is not running.

## List of storage features

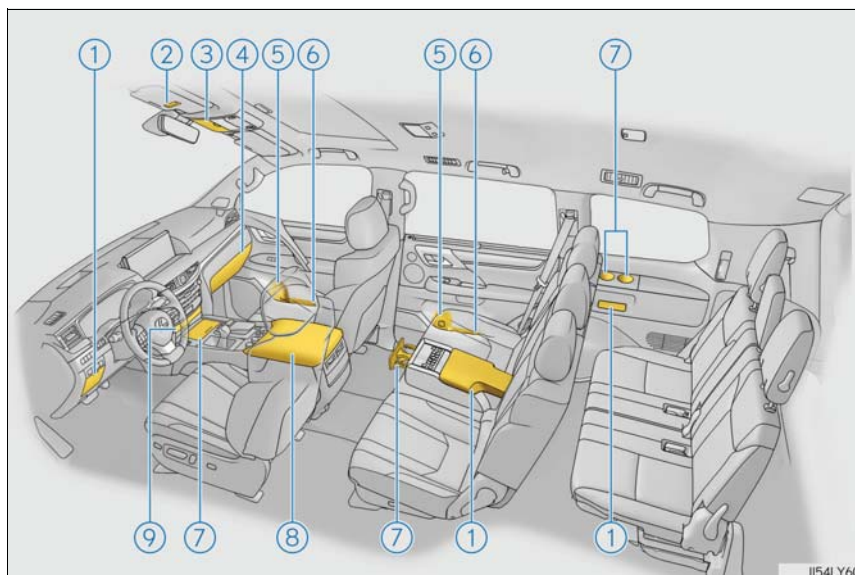

- |                              |                                          |
|------------------------------|------------------------------------------|
| ① Auxiliary boxes (→P. 431)  | ⑧ Console box (if equipped) (→P. 427)    |
| ② Card holder (→P. 430)      | Cool box (if equipped) (→P. 436)         |
| ③ Overhead console (→P. 428) | ⑨ Auxiliary box (if equipped) (→P. 431)  |
| ④ Glove box (→P. 427)        | Wireless charger (if equipped) (→P. 441) |
| ⑤ Bottle holders (→P. 430)   |                                          |
| ⑥ Door pockets               |                                          |
| ⑦ Cup holders (→P. 429)      |                                          |

### **⚠ WARNING**

#### ■ Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

### Glove box

- ① Open (push button)
- ② Unlock with the mechanical key
- ③ Lock with the mechanical key




### Glove box light

The glove box light turns on when the tail lights are on.

### Removing the separate tray

Pull out the separate tray while releasing the clips.

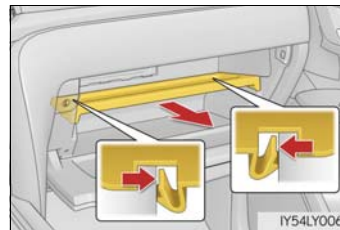

### ⚠ WARNING

Keep the glove box closed while driving.  
Injuries may result in the event of sudden braking, sudden swerving or an accident.

### Console box (if equipped)


Your vehicle is equipped with either a console box or cool box.

For vehicles with the cool box, refer to page 436.

- 1 Press the button to open the lid.



- 2 Remove the tray.

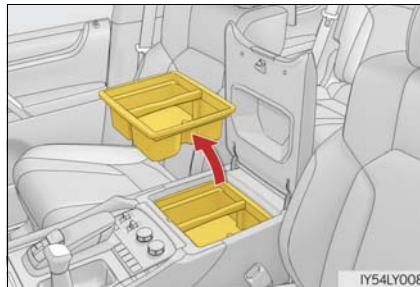


**! WARNING**

Keep the console box closed while driving.  
Injuries may result in the event of sudden braking, sudden swerving or an accident.

**Overhead console**

Press the button.

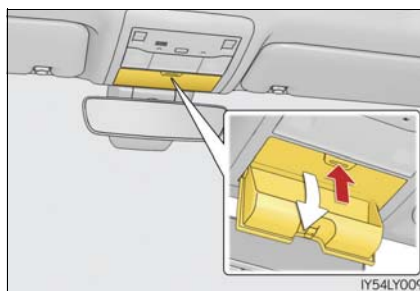

**! WARNING**

■ **Items unsuitable for storing**


Do not store items heavier than 0.4 lb (0.2 kg).  
Doing so may cause the overhead console to open and the items inside may fall out, resulting in an accident.

■ **While driving**

Do not leave the overhead console open.  
Items may fall out and cause injury.


## Cup holders

### ► Front seats

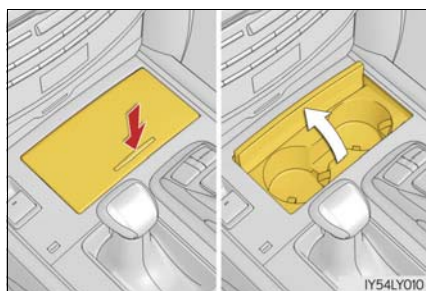

Press down and release the lid.

### ► Second seats

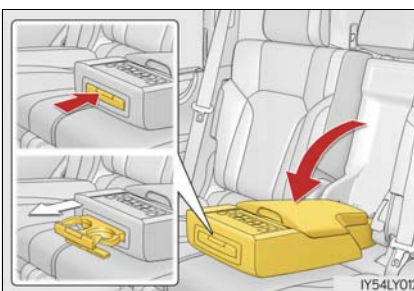

To open, pull down the armrest, press the button and release the rear cup holder on the armrest.

### ► Third seats (if equipped)



### ► Luggage compartment (if equipped)



5

Interior features

## ⚠ WARNING

### ■ Items unsuitable for the cup holders

Do not place anything other than cups or beverage cans in the cup holders. Even when the lid is closed, items must not be stored in the cup holders.

Other items may be thrown out of the holders in the event of an accident or sudden braking, and cause injury. If possible, cover hot drinks to prevent burns.

### ■ When not in use

Keep the cup holders closed.


Injuries may result in the event of sudden braking, sudden swerving or an accident.

 NOTICE■ **To prevent damage to the cup holders**

Stow the cup holders before stowing the rear armrest.

**Bottle holders**


## ► Front seats

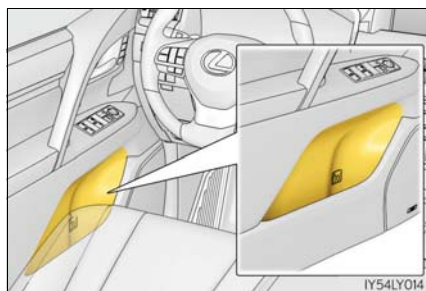

## ► Second seats

 NOTICE■ **Items that should not be stowed in the bottle holders**

Put the cap on before stowing a bottle. Do not place open bottles in the bottle holders, or glasses and paper cups containing liquid. The contents may spill and glasses may break.

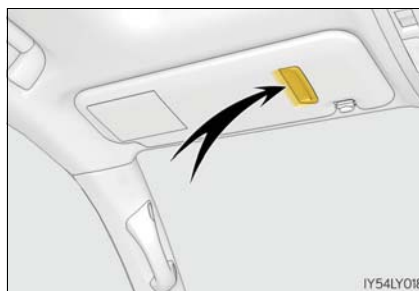**Card holder**

### Auxiliary boxes


Your vehicle is equipped with either a front auxiliary box type B or wireless charger.

For vehicles with wireless charger, refer to page 441.

#### ■ Front seats


##### ► Type A

Press the button to open.

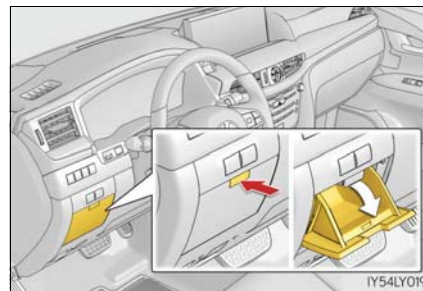

##### ► Type B (if equipped)

Press the lid to open.

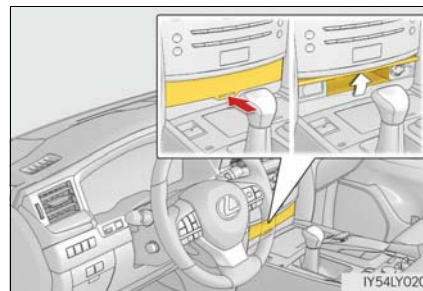

#### ■ Second seats

- 1 Pull down the armrest.




5

Interior features

- 2 Press the button to release the lock.



■ Third seats /luggage compartment

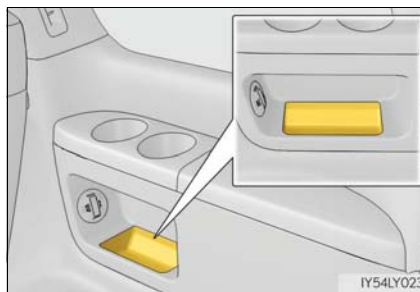

**⚠ WARNING**

■ While driving


For the front seats and the second seats: Do not leave the auxiliary box open while driving. Items stored in it may fall out and cause death or serious injury in case of an accident or sudden stop.

## Luggage compartment features

### Cargo hooks

Raise the hook to use.


The cargo hooks are provided for securing loose items.

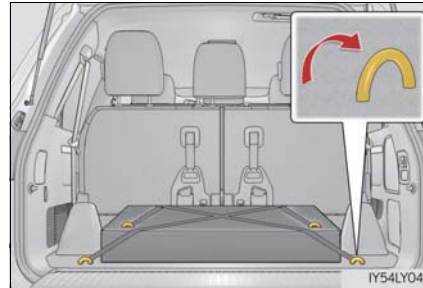

### Cargo net hooks


To hang the cargo net, use the cargo net hooks and rear tie-down hooks.

The cargo net itself is not included as an original equipment.

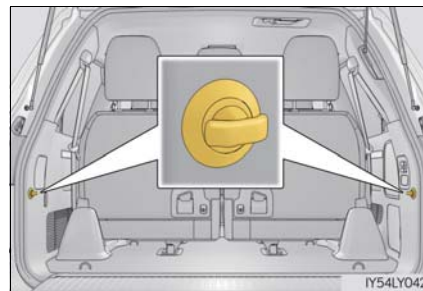

### Storage compartment (if equipped)


Remove the cover.

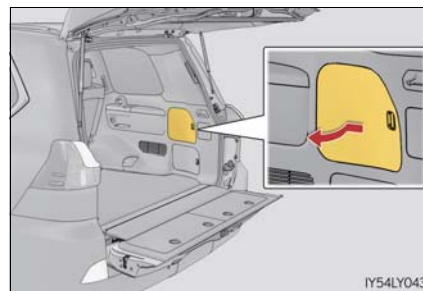

### Warning reflector holder

Remove the cover. Hold the warning reflector with the bands.


The warning reflector itself is not included as an original equipment.

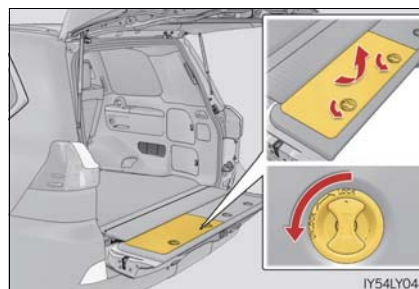

### First-aid kit holder

Remove the cover. Hold the first-aid kit with a band.


The first-aid kit itself is not included as an original equipment.

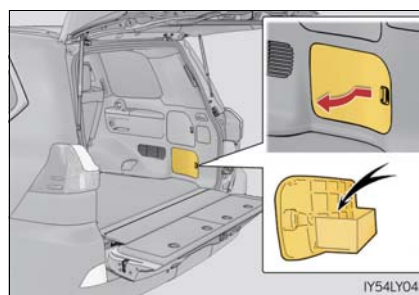

### Luggage cover (if equipped)

#### ■ Using the luggage cover


Pull out the luggage cover and hook it on the anchors.

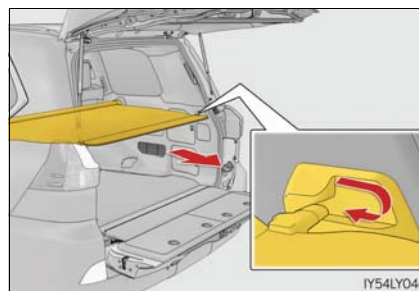

### ■ Removing the luggage cover


Retract the cover and release both ends, then lift it out.

After removing the luggage cover, place it somewhere other than the passenger compartment.

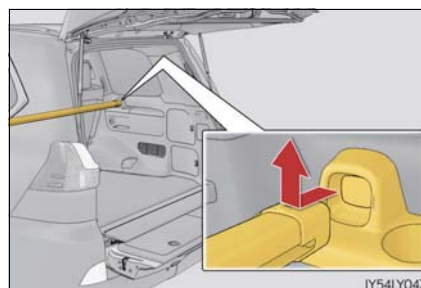

### ■ When installing the luggage cover (if equipped)

Keep the "TOP" mark on the luggage cover ends upward.

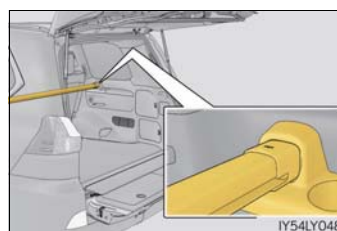

### ⚠ WARNING

- To avoid injury, always return the cargo hooks to their positions when not in use.
- Keep the auxiliary box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by an open auxiliary box or the items stored inside.
- Vehicles with luggage cover: Do not allow children to climb on the luggage cover. Climbing on the luggage cover could result in damage to the luggage cover, possibly causing death or serious injury to the child.

### ⚠ NOTICE


- **To prevent damage to the cargo net hooks**  
Avoid hanging things other than a cargo net on it.

## Other interior features


### Cool box (if equipped)

While the engine is running, the cool box, which is cooled by the air conditioning, can be used.

- 1 Press the button to open the lid.

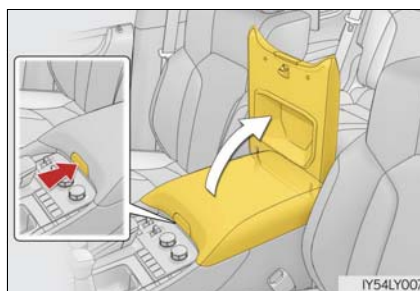

- 2 Turns the cool box on/off  
When on, the indicator light comes on.

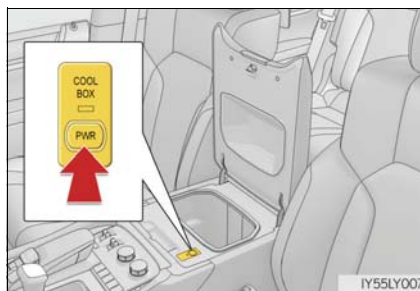

#### ■ While the cool box is on

The front air conditioning system cannot be turned off.

#### ■ When the outside temperature is 32°F (0°C) or below

The cool box may not operate.

### ⚠ WARNING

Keep the cool box closed while driving.

Injuries may result in the event of sudden braking, sudden swerving or an accident.


### ⚠ NOTICE

To prevent battery discharge, do not leave the cool box on longer than necessary when the engine is not running.

### Sun visors

#### ► Main sun visor

- ① To set the visor in the forward position, flip it down.
- ② To set the visor in the side position, flip down, unhook, and swing it to the side.
- ③ To use the side extender, place the visor in the side position, then slide it backward.

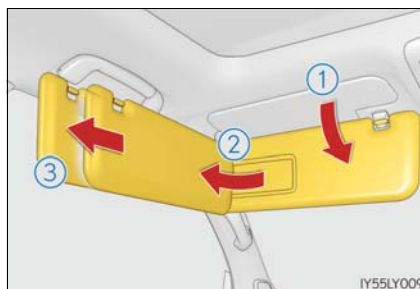

IY55LY009

#### ► Sub sun visor

Flip down with the main sun visor in position ② or ③.




IY55LY011

### Vanity mirrors

Slide the cover to open.

The light turns on when the cover is opened.

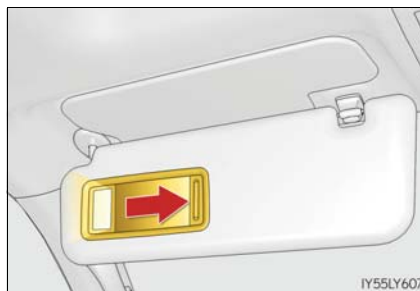

IY55LY607

If the vanity lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes.




#### NOTICE

To prevent battery discharge, do not leave the vanity lights on for extended periods when the engine is not running.

### Clock

The GPS clock's time is automatically adjusted by utilizing GPS time information. For details, refer to "NAVIGATION SYSTEM OWNER'S MANUAL".

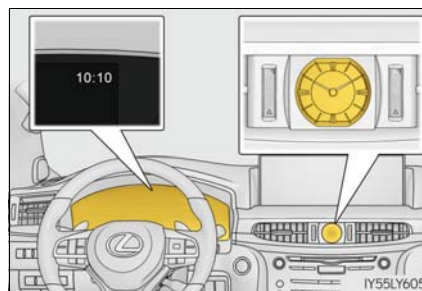

### Power outlets

The power outlet can be used for the following components:



12 V DC: Accessories that run on less than 10 A

120 V AC: Accessories that use less than 100 W


#### ■ Center of console

- ▶ Front (12 V DC)


Press the lid to open.

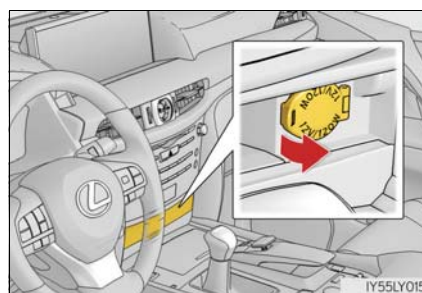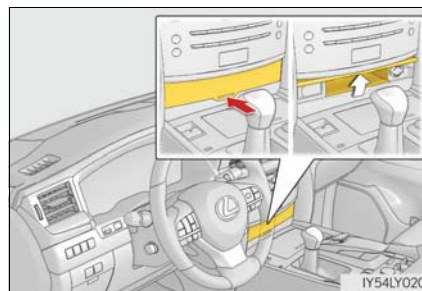

## ► Rear (12 V DC)

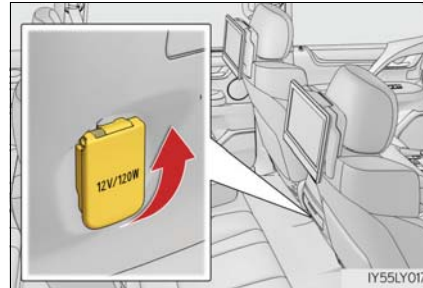

## ■ Luggage compartment (120 V AC)

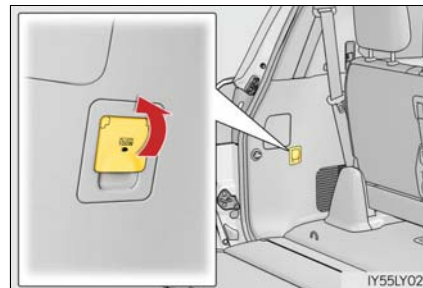

## ■ The power outlet can be used when

12 V DC: The engine switch is in ACCESSORY or IGNITION ON mode.

120 V AC: The engine switch is in IGNITION ON mode.



## NOTICE

**■ To avoid damaging the power outlet**

Close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

**■ To prevent the fuse from being blown**

12 V DC: Do not use an accessory that uses more than 12 V 10 A.

120 V AC: Do not use a 120 V AC appliance that requires more than 100 W.

If a 120 V AC appliance that consumes more than 100 W is used, the protection circuit will cut the power supply.

**■ To prevent the battery from being discharged**

Do not use the power outlet longer than necessary when the engine is not running.

**■ Appliances that may not operate properly (120 V AC)**

The following 120 V AC appliances may not operate properly even if their power consumption is under 100 W:

- Appliances with high initial peak wattage
- Measuring devices that process precise data
- Other appliances that require an extremely stable power supply

**Wireless charger (if equipped)**

A portable device can be charged by just placing Qi standard wireless charge compatible portable devices according to the Wireless Power Consortium, such as smart phones and mobile batteries, etc., on the charge area.


This function cannot be used with portable devices that are larger than the charging area. Also, depending on the portable device, it may not operate as normal. Please read the operation manual for portable devices to be used.

**■ The “Qi” symbol**

The “Qi” symbol is a trademark of the Wireless Power Consortium.


**■ Name for all parts**

- ① Power supply switch
- ② Operation indicator light
- ③ Charge area

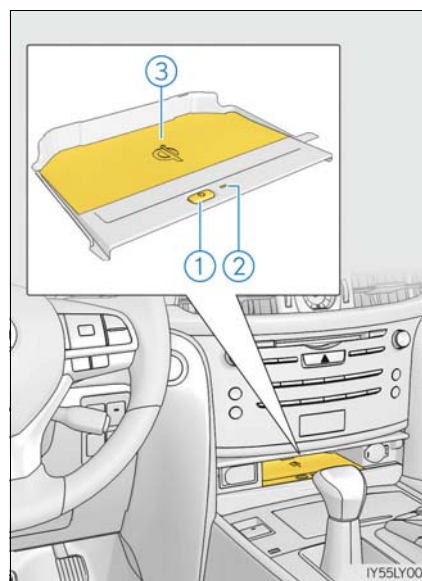

**■ Using the wireless charger**

- 1** Press the lid to open.

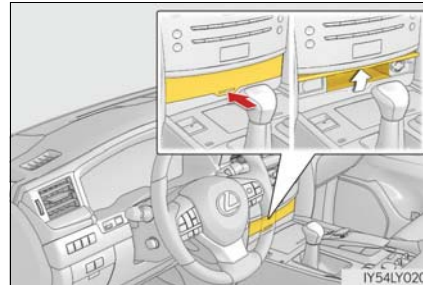


- 2** Press the power supply switch of the wireless charger.

Switches on and off with each press of the power supply switch.

When turned on, the operation indicator light (green) comes on.

Even with the engine off, the on/off state of the power supply switch is memorized.

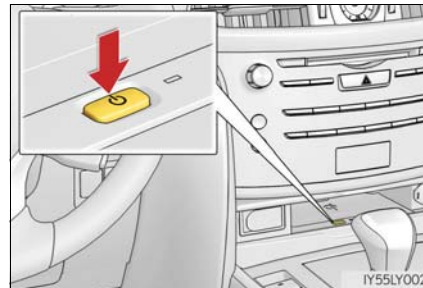


- 3** Place the charging side of the portable device down.

When charging, the operation indicator light (orange) comes on.

If charging is not occurring, try placing the portable device as close to the center of the charging area as possible.

When charging is complete, the operation indicator light (green) comes on.

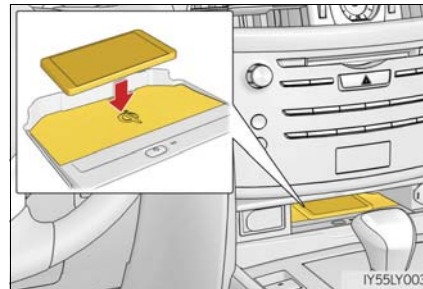**● Recharging function**

- When charging is complete and after a fixed time in the charge suspension state, charging restarts.
- When the portable device is moved, charging is stopped for a moment and then it restarts.

### ■ Lighting conditions of operation indicator light

| Operation indicator light | Conditions                                                                            |
|---------------------------|---------------------------------------------------------------------------------------|
| Turning off               | When the Wireless charger power supply is off                                         |
| Green (comes on)          | On Standby (charging possible state)                                                  |
|                           | When charging is complete*                                                            |
| Orange (comes on)         | When placing the portable device on the charging area (detecting the portable device) |
|                           | Charging                                                                              |

\*: Depending on the portable device, there are cases where the operation indicator light will continue being lit up orange even after the charging is complete.

#### ● When the operation indicator light flashes

When an error occurs, the operation indicator light flashes an orange color. Handle the error based on the following table.

| Operation indicator light                        | Suspected causes                                                                      | Handling method                                                                |
|--------------------------------------------------|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Flashing repeatedly once every second (Orange)   | Vehicle to charger communication failure.                                             | Contact your Lexus dealer.                                                     |
| Repeatedly flashes 3 times continuously (Orange) | A foreign substance is between the portable device and charge area.                   | Remove the foreign substance from between portable device and the charge area. |
|                                                  | The portable device is out of sync due to the device being shifted from its position. | Place the portable device near the center of the charge area.                  |
| Repeatedly flashes 4 times continuously (Orange) | Temperature rising within the wireless charger.                                       | Stop charging at once and start charging again after for a while.              |

### ■ The wireless charger can be operated when

The engine switch is in ACCESSORY or IGNITION ON mode.

### ■ Usable portable devices

Qi standard wireless charge standard can be used on compatible devices.

However, not all Qi standard devices and compatibility are guaranteed.

Starting with mobile phones and smart phones, it is aimed for low power electrically supplied portable devices of no more than 5W.

**■ When covers and accessories are attached to portable devices**

Do not charge in situations where cover and accessories not able to handle Qi are attached to the portable device. Depending on the type of cover and accessory, it may not be possible to charge. When charging is not performed even with the portable device placed on the charge area, remove the cover and accessories.

**■ While charging, noise enters the AM radio**

Turn off the wireless charger and confirm that the noise has decreased. If the noise decreases, continuously pushing the power supply switch of the wireless charger for 2 seconds, the frequency of the charger can be changed and the noise can be reduced. Also, on that occasion, the operation indicator light will flash orange 2 times.

**■ Important points of the wireless charger**

- If the electronic key cannot be detected within the vehicle interior, charging cannot be done. When the door is opened and closed, charging may be temporarily suspended.
- When charging, the wireless charging device and portable device will get warmer, however this is not a malfunction.  
When a portable device gets warm while charging, charging may stop due to the protection function on the portable device side. In this case, when the temperature of the portable device drops significantly, charge again.

**■ Operation sounds**

When the power supply is turned on, while searching for the portable device a sound will be produced, however this is not a malfunction.

## ■ Certification for the wireless charger



PRODUCT SAFETY AND COMPLIANCE DEPARTMENT, PANASONIC CORPORATION OF NORTH AMERICA, TWO RIVERFRONT PLAZA, 9<sup>TH</sup> FLOOR, NEWARK, NJ 07102-5490

### FCC Declaration of Conformity

|                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Product Name                        | Panasonic In-Vehicle Wireless Charger                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Model Numbers                       | CA-QS05H1AJ, CA-QS05H2AJ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| FCC Rule Parts                      | 47 CFR, FCC Part 18 for ISM Equipment<br>FCC's: KDB 0680106 D01 RF Exposure Wireless Charging Apps v02                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Product Description                 | All In-Vehicle Wireless Chargers contain same primary coil, type YEFNU00276 with rated power transfer operating frequency of 105~140 kHz, charge operating voltage 100V peak-to-peak and output rating DC 10.5~16.0V, 1A and 13.2 watts. This product receives its operating power from host vehicle it is installed into and enables wireless battery charging of any mobile device with Qi mark placed on charging pad.                                                                                                                                                                                                                                                                                                                                 |
| Special Conditions                  | Must be provided with product label with FCC logo.<br>Must be provided with User Manual with responsible party's name, address and telephone number or website address.<br>Must be installed and used exclusively within transportation vehicle.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| FCC Test Reports                    | UL Japan EMI Test Report 10120384Y, dated December 24, 2013. This reported CA-QS04H0AJ was tested, which represents CA-QS Series. This test report demonstrated compliance with FCC Part 18, Subpart C and Section 18.305(b) and was tested in accordance with test procedure MP-5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| RF Exposure Evaluation Test Reports | UL Japan MPE Test Report 101971575-E, dated March 19, 2014. This test report reported representative Model CA-QS04H0AJ was tested, which also represented Models: CA-QS03J1AJ and CA-QS04H0AJ.<br><ul style="list-style-type: none"> <li>Wireless Charging Pad complies with KDB 0680106 D01 RF Exposure Wireless Charging Apps v02.</li> <li>Test results for magnetic field strength is: 0.391 (A/m) at 118 kHz charging mode and 30% of MPE limits for frequency range 110~200 kHz is: 0.489 (A/m).</li> <li>Test results for electro-magnetic field strength is: 147.40 (V/m) at 118 kHz charging mode and 30% of MPE limits for 110~200 kHz is: 184.2 (V/m). MPE limits comply with limits in Table 1(B), refer to test report section 5.</li> </ul> |
| Responsible Applicant               | Panasonic Corporation<br>Automotive & Industrial Systems Company<br>4261, Ikonohe-cho, Tsuzuki-ku, Yokohama-shi, 224-8520, Japan                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Responsible Sales Company           | Panasonic Consumer Electronics Company<br>Division of Panasonic Corporation of North America<br>Two Riverfront Plaza, Newark, NJ 07102-5490<br>Support Contact: <a href="http://www.panasonic.com/contactinfo">http://www.panasonic.com/contactinfo</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |



Issued by:   
PSCD Issue Date: March 25, 2014  
Updated Date: December 29, 2014  
Applicant Ref No.: PAS-14-F004A  
PSCD Ref No.: DoC 2014-008A

FCC Note: This equipment has been tested and found to comply with Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Declaration of Conformity

Trade Name: Panasonic  
Model Numbers: CA-QS05H1AJ, CA-QS05H2AJ

Responsible Party: Panasonic Corporation of North America  
Two Riverfront Plaza, Newark, NJ 07102-5490

Support Contact: <http://www.panasonic.com/contactinfo>

This device complies with Part 18 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **WARNING****■ Caution while driving**

When charging a portable device, for safety reasons, the driver should not operate the portable device while driving.

**■ Caution regarding interference with electronic devices**

People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger. The operations of the wireless charger may have an affect on medical devices.

**■ To prevent damage or burns**

Observe the following precautions.

Failure to do so may result in a possibility of equipment failure and damage, catch fire, burns due to overheat.

- Do not insert any metallic objects between the charging area and the portable device while charging
- Do not attach stickers, metallic objects, etc., to the charger area or portable device
- Do not cover with cloth, etc., and charge
- Do not charge portable devices other than designated
- Do not attempt to dismantle for disassembly or modifications
- Do not hit or apply a strong force

**WARNING****■ Conditions in which the function may not operate correctly**

In the following conditions, the wireless charger may not operate correctly

- The portable device is fully charged
- There is foreign matter between the charge area and portable device
- The temperature of the portable device gets higher from charging
- The charging surface of the portable device is facing up
- The placement of the portable device is out of alignment with the charge area
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When other wireless keys (that emit radio waves) are being used nearby

In addition, excluding the above-mentioned, when the charger does not perform normally or the operation indicator light is flashing continuously, it is considered that the wireless charger is malfunctioning. Contact your Lexus dealer.

**■ To prevent failure or damage to data**


- Do not bring magnetic cards, such as credit cards, or magnetic recording media, etc., close to the charger while charging, otherwise, data may disappear under the influence of magnetism. Also, do not bring precision instruments such as wrist watches, etc., close to the charger, as such objects may break.
- Do not leave portable devices in the cabin. The temperature inside the cabin may become high, when under the sun, and cause damage to the device.

**■ To prevent battery discharge**

When the engine is stopped, do not use the wireless charger for a long time.

## Armrest

Fold down the armrest for use.

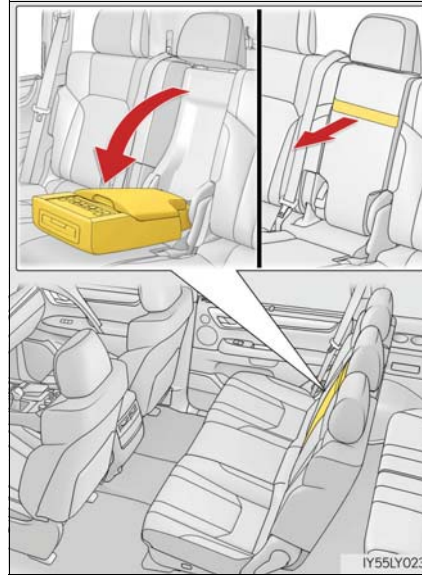


### NOTICE

To prevent damage, do not apply too much load on the armrest.

### Rear door sunshades

Pull the tab of the rear door sunshade and hook the shade on using the anchor.

To retract the rear door sunshade, unhook the shade and retract it slowly.

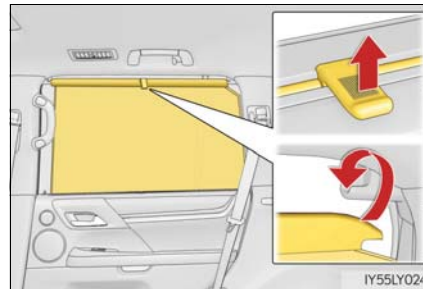


### NOTICE

To ensure normal operation of the rear door sunshade, observe the following precautions.

- Do not place anything where it may hinder the opening/closing of the sunshade.
- Do not attach anything to the rear door sunshade.
- Do not retract the rear door sunshade at an angle.

### Coat hooks

The coat hooks are provided with the second seat assist grips.

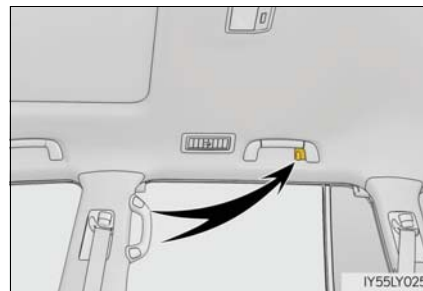

### WARNING


Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

### Assist grips

An assist grip (Type A) can be used to support your body while sitting on the seat.

An assist grip (Type B) can be used when getting in or out of the vehicle and others.

- ① Assist grip (Type A)
- ② Assist grip (Type B)

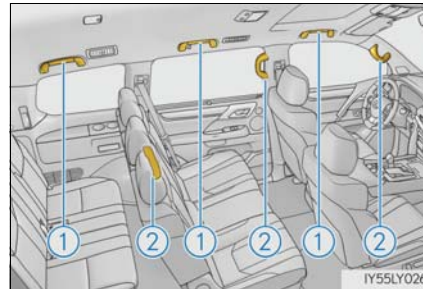

#### WARNING

Do not use the assist grip (Type A) when getting in or out of the vehicle or rising from your seat.

#### NOTICE

To prevent damage, do not hang heavy objects or put a heavy load on the assist grip.


## Garage door opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

### Programming HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ HomeLink® icon  
Illuminates while HomeLink® is operating.
- ④ Buttons

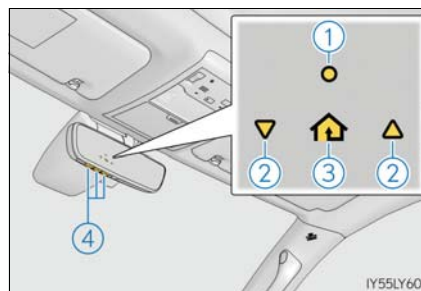

#### ■ Before programming HomeLink®

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.


### ■ Programming the HomeLink®

Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

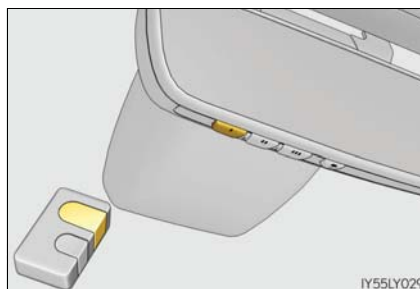

- 3** Program a device.

- Programming a device other than an entry gate (for U.S.A. owners)


Press and hold the remote control transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

- Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).

- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:

- Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink® button is pressed and released.

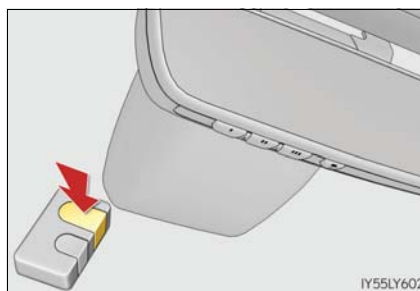

- Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink<sup>®</sup> button for 2 seconds then release it.
- If the garage door or other device does not operate, proceed to "Programming a rolling code system".


- 5 Repeat the steps above to program another device for any of the remaining HomeLink<sup>®</sup> buttons.

#### ■ Programming a rolling code system


2 or more people may be necessary to complete rolling code programming.

- 1 Locate the "Learn" or "Smart" button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner's manual supplied with the garage door opener motor for details.

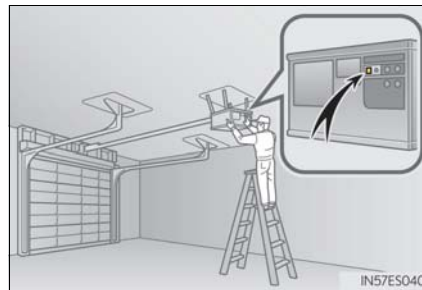


- 2 Press and release the "Learn" or "Smart" button.  
Perform 3 within 30 seconds after performing 2.

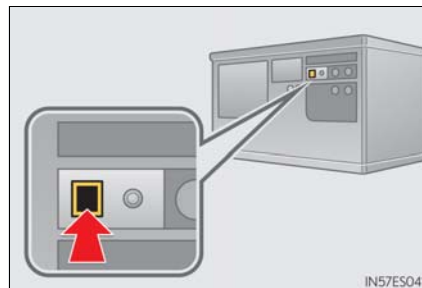

- 3 Press and hold the desired HomeLink<sup>®</sup> button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor operates when the HomeLink<sup>®</sup> button is pressed, the garage door opener motor recognizes the HomeLink<sup>®</sup> signal.

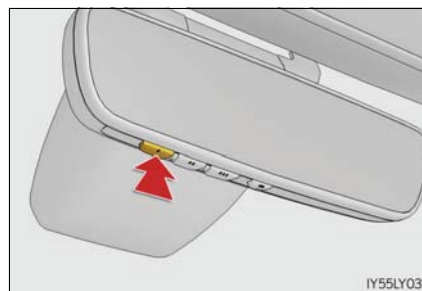

### ■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.HomeLink.com](http://www.HomeLink.com).)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink<sup>®</sup>, both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform 2 and 3 within the first 10 presses of the HomeLink<sup>®</sup> button after programming has been completed.

- 2 Press a programmed HomeLink<sup>®</sup> button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink<sup>®</sup> button, after the garage door operation has stopped, press the “Learn” or “Smart” button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

### ■ Reprogramming a single HomeLink<sup>®</sup> button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink<sup>®</sup> button.
- 2 When the HomeLink<sup>®</sup> indicator starts flashing (orange), continue to hold the HomeLink<sup>®</sup> button and perform “Programming HomeLink<sup>®</sup>” 1 (it takes 20 seconds for the HomeLink<sup>®</sup> indicator to start flashing).

### Operating HomeLink<sup>®</sup>


Press the appropriate HomeLink<sup>®</sup> button. The HomeLink<sup>®</sup> indicator light should turn on.

### Garage door operation indicators

The status of the opening and closing of a garage door is shown by the indicators.

- ① Opening
- ② Closing

This function is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.HomeLink.com](http://www.HomeLink.com).)

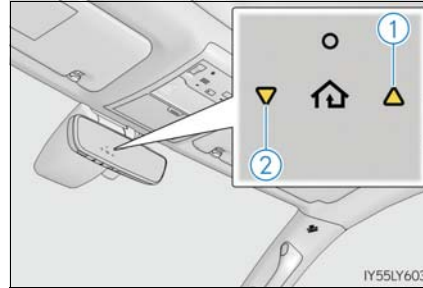

| Color             | Status                              |
|-------------------|-------------------------------------|
| Orange (flashing) | Currently opening/closing           |
| Green             | Opening/closing has completed       |
| Red (flashing)    | Feedback signals cannot be received |

The indicators can operate within approximately 820 ft. (250 m) of the garage door. However, if there are obstructions between the garage door and the vehicle, such as houses and trees, feedback signals from the garage door may not be received.


To recall the previous door operation status, press and release either Home-

Link<sup>®</sup> buttons  and  or  and  simultaneously. The last recorded status will be displayed for 3 seconds.

### Erasing the entire HomeLink<sup>®</sup> memory (all three codes)

Press and hold the 2 outside buttons for 10 seconds until the HomeLink<sup>®</sup> indicator light changes from continuously lit (orange) to rapidly flashing (green).

If you sell your vehicle, be sure to erase the programs stored in the HomeLink<sup>®</sup> memory.

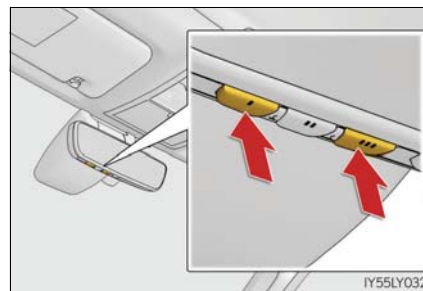

### ■ Codes stored in the HomeLink® memory

- The registered codes are not erased even if the battery cable is disconnected.
- If learning failed when registering a different code to a HomeLink® button that already has a code registered to it, the already registered code will not be erased.

### ■ Before programming

- Install a new battery in the transmitter.
- The battery side of the transmitter must be pointed away from the HomeLink®.

### ■ Certification for the garage door opener

This device complies with FCC rules part 15 and Innovation, Science, and Economic Development Canada RSS-210. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference that may be received including interference that may cause undesired operation. WARNING: The transmitter has been tested and complies with FCC and ISDE rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment complies with FCC and ISDE radiation exposure limits set forth for an uncontrolled environment. End Users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil est conforme aux règlements de la FCC, section 15, et au CNR-210 d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est assujéti aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris celle qui pourrait entraîner un dysfonctionnement. MISE EN GARDE : L'émetteur a subi des tests et est conforme aux règlements de la FCC et d'ISDE. Les changements ou modifications non approuvés explicitement par la partie responsable de la conformité pourraient rendre caduque l'autorisation de l'utilisateur de se servir du dispositif.

Cet appareil est conforme aux limites d'exposition aux radiations de la FCC et d'ISDE établies pour un environnement non contrôlé. Les utilisateurs finaux doivent respecter les instructions d'utilisation spécifiques pour satisfaire aux exigences de conformité aux expositions de RF. L'émetteur doit se trouver à 20 cm au minimum de l'utilisateur et ne doit pas être situé au même endroit que tout autre émetteur ou antenne ni fonctionner avec un autre émetteur ou antenne.

### ■ When support is necessary

Visit on the web at [www.homelink.com/lexus](http://www.homelink.com/lexus) or call 1-800-355-3515.

**WARNING****■ When programming a garage door or other remote control device**

The garage door or other device may operate, so ensure people and objects are out of danger to prevent potential harm.

**■ Conforming to federal safety standards**

Do not use the HomeLink<sup>®</sup> compatible transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an interfering object. A door or device without these features increases the risk of death or serious injury.

**■ When operating or programming HomeLink<sup>®</sup>**

Never allow a child to operate or play with the HomeLink<sup>®</sup> buttons.

**6-1. Maintenance and care**

Cleaning and protecting  
the vehicle exterior .....460

Cleaning and protecting  
the vehicle interior .....463

**6-2. Maintenance**

Maintenance  
requirements .....466

General maintenance .....468

Emission inspection and  
maintenance (I/M)  
programs .....471

**6-3. Do-it-yourself maintenance**

Do-it-yourself service  
precautions ..... 472

Hood ..... 474

Engine compartment ..... 475

Tires ..... 488

Tire inflation pressure ..... 497

Wheels ..... 501

Air conditioning filter .....503

Electronic key battery ..... 505

Checking and replacing  
fuses .....507

Light bulbs ..... 510

## Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

### ■ Automatic car washes

- Fold the mirrors back before washing the vehicle. Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.
- Rear spoiler may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

### ■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

### ■ Wheels (including surrounding parts)

- Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the paint.
- Do not use detergent on the wheels when they are hot, for example after driving for long distance in the hot weather.
- Wash detergent from the wheels immediately after use.

### ■ Bumpers

Do not scrub with abrasive cleaners.

### ■ Notes for a smart access system with push-button start

- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. Place the key in a position 6 ft. (2 m) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.




### WARNING

#### ■ When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

#### ■ When cleaning the windshield

Set the wiper switch to off.  
If the wiper switch is in "AUTO", the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

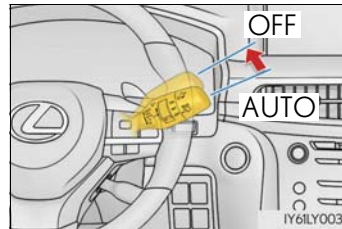

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

#### ■ Precautions regarding the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.

When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

#### ■ Precautions regarding the Blind Spot Monitor (if equipped)

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult your Lexus dealer.



## NOTICE

**■ To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)**

- Wash the vehicle immediately in the following cases:
  - After driving near the sea coast
  - After driving on salted roads
  - If coal tar or tree sap is present on the paint surface
  - If you see dead insects, insect droppings or bird droppings on the paint
  - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
  - If the vehicle becomes heavily soiled in dust or mud
  - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing wheels.

**■ Cleaning the exterior lights**

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax on the surfaces of the lights. Wax may cause damage to the lenses.

**■ When using an automatic car wash**

Set the wiper switch to the off position.  
If the wiper switch is in "AUTO", the wipers may operate and the wiper blades may be damaged.

**■ When using a high pressure car wash**

Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.

- Traction related parts
- Steering parts
- Suspension parts
- Brake parts

## Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

### Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

### Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe any excess dirt and dust with a soft cloth dampened with diluted detergent.  
Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded ventilated area.

### Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

**■ Caring for leather areas**

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

**■ Shampooing the carpets**

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. The excellent results are obtained when keeping the carpet as dry as possible.

**■ Seat belts**

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

**WARNING****■ Water in the vehicle**

- Do not splash or spill liquid in the vehicle.  
Doing so may cause electrical components etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P. 40)  
An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

**■ Cleaning the interior (especially instrument panel)**

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

**NOTICE****■ Cleaning detergents**

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
  - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

 NOTICE

■ **Preventing damage to leather surfaces**

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ **When cleaning the inside of the windshield (vehicles with Lexus Safety System +)**

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. (→P. 251)

■ **Water on the floor**

Do not wash the vehicle floor with water.  
Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

■ **Cleaning the inside of the rear quarter windows and rear window**

- Do not use glass cleaner to clean the rear quarter windows and rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

## Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. It is the owner's responsibility to perform regular checks. Lexus recommends the following maintenance:

### General maintenance

General maintenance should be performed on a daily basis. This can be done by yourself or by a Lexus dealer.

### Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For details about maintenance items and schedules, refer to the "Warranty and Service Guide", "Owner's Manual Supplement" or "Scheduled Maintenance".

### Do-it-yourself maintenance

You can perform some maintenance procedures by yourself.

Please be aware that do-it-yourself maintenance may affect warranty coverage.

The use of Lexus repair manuals is recommended.

For details about warranty coverage, refer to the separate "Owner's Guide", "Warranty and Service Guide", "Owner's Manual Supplement" or "Warranty Booklet".

### ■ Repair and replacement

It is recommended that genuine Lexus parts be used for repairs to ensure performance of each system. If non-Lexus parts are used in replacement or if a repair shop other than a Lexus dealer performs repairs, confirm the warranty coverage.

### ■ Resetting the message indicating maintenance is required (U.S.A. only)

After the required maintenance is performed according to the maintenance schedule, please reset the message.

To reset the message, follow the procedures described below:

- 1 Press  or  of the meter control switches, select .
- 2 Press  or  of the meter control switches, select "Scheduled Maintenance" and then press .
- 3 Select the "Yes" and press .
- 4 A message is displayed on the multi-information display.

### ■ Allow inspection and repairs to be performed by a Lexus dealer

- Lexus technicians are well-trained specialists and are kept up to date with the latest service information. They are well informed about the operation of all systems on your vehicle.
- Keep a copy of the repair order. It proves that the maintenance that has been performed is under warranty coverage. If any problem should arise while your vehicle is under warranty, your Lexus dealer will promptly take care of it.



### WARNING

#### ■ If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible serious injury or death.

#### ■ Handling of the battery

- Engine exhaust, some of its constituents, and a wide variety of automobile components contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm. Work in a well ventilated area.
- Oils, fuels and fluids contained in vehicles as well as waste produced by component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Avoid exposure and wash any affected area immediately.
- Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 484)

## General maintenance

Listed below are the general maintenance items that should be performed at the intervals specified in the “Warranty and Service Guide” or “Owner’s Manual Supplement”. It is recommended that any problem you notice should be brought to the attention of your Lexus dealer or qualified service shop for advice.

### Engine compartment

| Items                | Check points                                                              |
|----------------------|---------------------------------------------------------------------------|
| Battery              | Check the connections. (→P. 484)                                          |
| Brake fluid          | Is the brake fluid at the correct level? (→P. 481)                        |
| Engine coolant       | Is the engine coolant at the correct level? (→P. 480)                     |
| Engine oil           | Is the engine oil at the correct level? (→P. 477)                         |
| Exhaust system       | There should not be any fumes or strange sounds.                          |
| Power steering fluid | Is the power steering fluid at the correct level? (→P. 483)               |
| Radiator/condenser   | The radiator and condenser should be free from foreign objects. (→P. 481) |
| Washer fluid         | Is there sufficient washer fluid? (→P. 487)                               |

## Vehicle interior

| Items                                   | Check points                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Accelerator pedal                       | <ul style="list-style-type: none"> <li>The accelerator pedal should move smoothly (without uneven pedal effort or catching).</li> </ul>                                                                                                                                                                          |
| Automatic transmission "Park" mechanism | <ul style="list-style-type: none"> <li>When parked on a slope and the shift lever is in P, is the vehicle securely stopped?</li> </ul>                                                                                                                                                                           |
| Brake pedal                             | <ul style="list-style-type: none"> <li>Does the brake pedal move smoothly?</li> <li>Does the brake pedal have appropriate clearance from the floor? (→P. 568)</li> <li>Does the brake pedal have the correct amount of free play? (→P. 568)</li> </ul>                                                           |
| Brakes                                  | <ul style="list-style-type: none"> <li>The vehicle should not pull to one side when the brakes are applied.</li> <li>The brakes should work effectively.</li> <li>The brake pedal should not feel spongy.</li> <li>The brake pedal should not get too close to the floor when the brakes are applied.</li> </ul> |
| Head restraints                         | <ul style="list-style-type: none"> <li>Do the head restraints move smoothly and lock securely?</li> </ul>                                                                                                                                                                                                        |
| Indicators/buzzers                      | <ul style="list-style-type: none"> <li>Do the indicators and buzzers function properly?</li> </ul>                                                                                                                                                                                                               |
| Lights                                  | <ul style="list-style-type: none"> <li>Do all the lights come on?</li> </ul>                                                                                                                                                                                                                                     |
| Seat belts                              | <ul style="list-style-type: none"> <li>Do the seat belts operate smoothly?</li> <li>The seat belts should not be damaged.</li> </ul>                                                                                                                                                                             |
| Seats                                   | <ul style="list-style-type: none"> <li>Do the seat controls operate properly?</li> </ul>                                                                                                                                                                                                                         |
| Steering wheel                          | <ul style="list-style-type: none"> <li>Does the steering wheel rotate smoothly?</li> <li>Does the steering wheel have the correct amount of free play?</li> <li>There should not be any strange sounds coming from the steering wheel.</li> </ul>                                                                |

## Vehicle exterior

| Items                               | Check points                                                                                                                                                                                                                                                                     |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Doors                               | <ul style="list-style-type: none"> <li>Do the doors operate smoothly?</li> </ul>                                                                                                                                                                                                 |
| Engine hood                         | <ul style="list-style-type: none"> <li>Does the engine hood lock system work properly?</li> </ul>                                                                                                                                                                                |
| Fluid leaks                         | <ul style="list-style-type: none"> <li>There should not be any signs of fluid leakage after the vehicle has been parked.</li> </ul>                                                                                                                                              |
| Tires                               | <ul style="list-style-type: none"> <li>Is the tire inflation pressure correct?</li> <li>The tires should not be damaged or excessively worn.</li> <li>Have the tires been rotated according to the maintenance schedule?</li> <li>The wheel nuts should not be loose.</li> </ul> |
| Windshield wipers/rear window wiper | <ul style="list-style-type: none"> <li>The wiper blades should not show any signs of cracking, splitting, wear, contamination or deformation.</li> <li>The wiper blades should clear the windshield/rear window without streaking or skipping.</li> </ul>                        |

 **WARNING**
 **If the engine is running**

Turn off the engine and ensure that there is adequate ventilation before performing maintenance checks.

## Emission inspection and maintenance (I/M) programs

Some states have vehicle emission inspection programs which include OBD (On Board Diagnostics) checks. The OBD system monitors the operation of the emission control system.

### If the malfunction indicator lamp comes on

The OBD system determines that a problem exists somewhere in the emission control system. Your vehicle may not pass the I/M test and may need to be repaired. Contact your Lexus dealer to service the vehicle.

### Your vehicle may not pass the I/M test in the following situations:

- When the battery is disconnected or discharged  
Readiness codes that are set during ordinary driving are erased.  
Also, depending on your driving habits, the readiness codes may not be completely set.
- When the fuel tank cap is loose  
The malfunction indicator lamp comes on indicating a temporary malfunction and your vehicle may not pass the I/M test.

### When the malfunction indicator lamp still remains on after several driving trips

The error code in the OBD system will not be cleared unless the vehicle is driven 40 or more times.

### If your vehicle does not pass the I/M test

Contact your Lexus dealer to prepare the vehicle for re-testing.

## Do-it-yourself service precautions

If you perform maintenance yourself, be sure to follow the correct procedures as given in these sections.

| Items                                | Parts and tools                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery condition<br>(→P. 484)       | <ul style="list-style-type: none"> <li>• Warm water</li> <li>• Baking soda</li> <li>• Grease</li> <li>• Conventional wrench (for terminal clamp bolts)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                        |
| Brake fluid level<br>(→P. 481)       | <ul style="list-style-type: none"> <li>• FMVSS No.116 DOT 3 or SAE J1703 brake fluid</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding brake fluid)</li> </ul>                                                                                                                                                                                                                                                                                                                                                       |
| Engine coolant level<br>(→P. 480)    | <ul style="list-style-type: none"> <li>• "Toyota Super Long Life Coolant" or similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology.</li> <li>For the U.S.A.:<br/>"Toyota Super Long Life Coolant" is pre-mixed with 50 % coolant and 50 % deionized water.</li> <li>For Canada:<br/>"Toyota Super Long Life Coolant" is pre-mixed with 55 % coolant and 45 % deionized water.</li> <li>• Funnel (used only for adding coolant)</li> </ul> |
| Engine oil level<br>(→P. 477)        | <ul style="list-style-type: none"> <li>• "Toyota Genuine Motor Oil" or equivalent</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding engine oil)</li> </ul>                                                                                                                                                                                                                                                                                                                                                           |
| Fuses (→P. 507)                      | <ul style="list-style-type: none"> <li>• Fuse with same amperage rating as original</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Power steering fluid level (→P. 483) | <ul style="list-style-type: none"> <li>• Automatic transmission fluid DEXRON® II or III</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding power steering fluid)</li> </ul>                                                                                                                                                                                                                                                                                                                                           |
| Radiator and condenser<br>(→P. 481)  | —                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Tire inflation pressure (→P. 497)    | <ul style="list-style-type: none"> <li>• Tire pressure gauge</li> <li>• Compressed air source</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Washer fluid<br>(→P. 487)            | <ul style="list-style-type: none"> <li>• Water or washer fluid containing antifreeze (for winter use)</li> <li>• Funnel (used only for adding water or washer fluid)</li> </ul>                                                                                                                                                                                                                                                                                                                                                          |

 **WARNING**

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions:

■ **When working on the engine compartment**

- Keep hands, clothing and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper or rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel or the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.

■ **When working near the electric cooling fans or radiator grille**

Be sure the engine switch is off. With the engine switch in IGNITION ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 481)

■ **When working on or under the vehicle**

Do not get under the vehicle with just the jack supporting it.  
Always use automotive jack stands or other solid supports.

■ **Safety glasses**

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.

 **NOTICE**

■ **If you remove the air cleaner filter**


Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

## Hood


Release the lock from the inside of the vehicle to open the hood.

- 1** Pull the hood lock release lever.

The hood will pop up slightly.

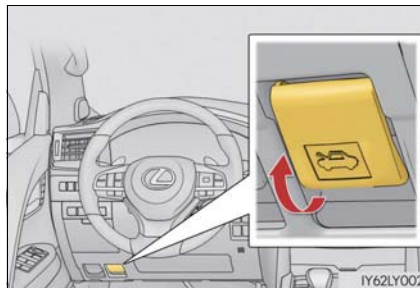

- 2** Lift the hood catch and lift the hood.

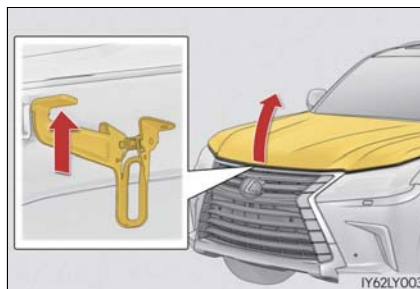


### WARNING

**■ Pre-driving check**

Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.


## Engine compartment

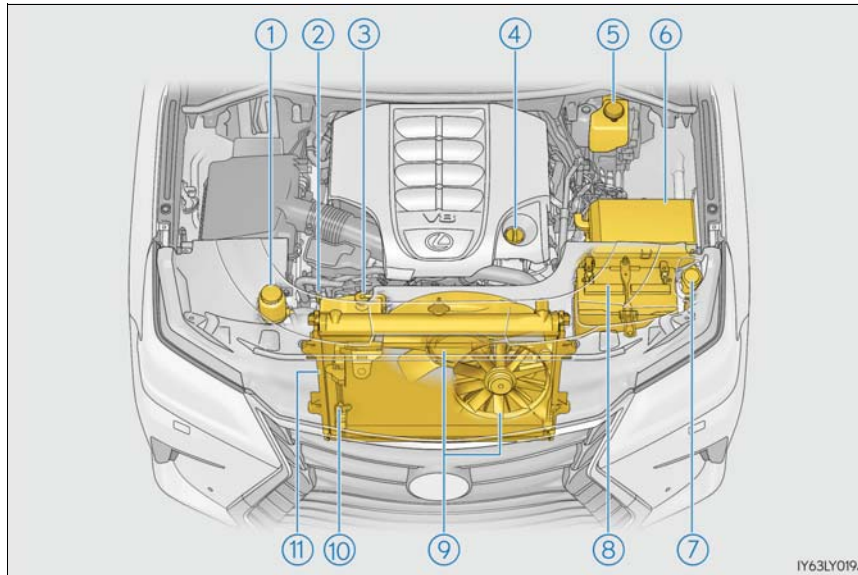

- |                                               |                                   |
|-----------------------------------------------|-----------------------------------|
| ① Power steering fluid reservoir<br>(→P. 483) | ⑤ Brake fluid reservoir (→P. 481) |
| ② Engine oil level dipstick<br>(→P. 477)      | ⑥ Fuse box (→P. 507)              |
| ③ Engine coolant reservoir<br>(→P. 480)       | ⑦ Washer fluid tank (→P. 487)     |
| ④ Engine oil filler cap (→P. 478)             | ⑧ Battery (→P. 484)               |
|                                               | ⑨ Cooling fans                    |
|                                               | ⑩ Condenser (→P. 481)             |
|                                               | ⑪ Radiator (→P. 481)              |


## Engine compartment cover

### ■ Removing the engine compartment cover

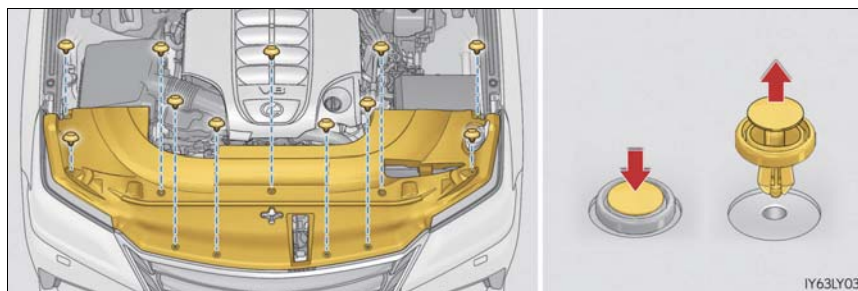

### ■ Installing the clips

- ① Push up center portion
- ② Insert
- ③ Press

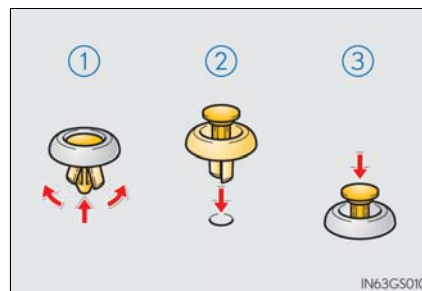

### ⚠ NOTICE

#### ■ After installing an engine compartment cover


Make sure the cover is securely installed in its original position.

## Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.


### ■ Checking the engine oil

- 1 Park the vehicle on level ground. After warming up the engine and turning it off, wait more than 5 minutes for the oil to drain back into the bottom of the engine.
- 2 Holding a rag under the end, pull the dipstick out.

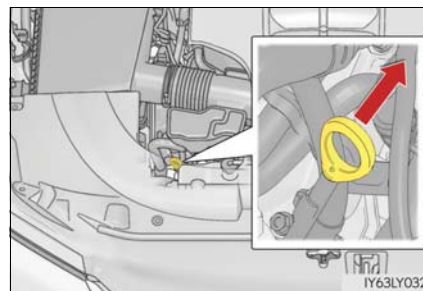

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.
  - ① Low
  - ② Normal
  - ③ Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

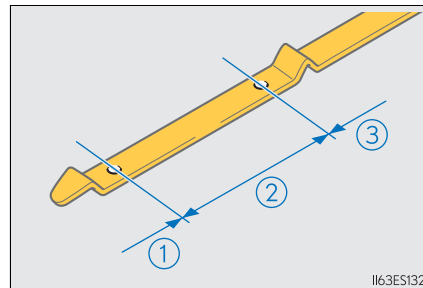


- 6 Wipe the dipstick and reinsert it fully.

6

Maintenance and care

### ■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as already in the engine.

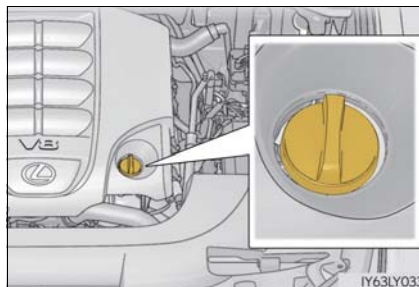

Make sure to check the oil type and prepare the items needed before adding oil.

|                           |                              |
|---------------------------|------------------------------|
| Engine oil selection      | →P. 564                      |
| Oil quantity (Low → Full) | 1.6 qt. (1.5 L, 1.3 Imp.qt.) |
| Items                     | Clean funnel                 |

- 1 Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

### ■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

### ■ After changing the engine oil

The engine oil maintenance data should be reset. Perform the following procedures:

- 1 Press or of the meter control switches, select .
- 2 Press or of the meter control switches, select "Oil Maintenance" and then press .
- 3 Select the "Yes" and press .
- 4 A message is displayed on the multi-information display.

 **WARNING****■ Used engine oil**

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Lexus dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

 **NOTICE****■ To prevent serious engine damage**

Check the oil level on regular basis.

**■ When replacing the engine oil**


- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

### Engine coolant

The coolant level is satisfactory if it is between the “F” and “L” lines on the reservoir when the engine is cold.

- ① Reservoir cap
- ② “F” line
- ③ “L” line

If the level is on or below the “L” line, add coolant up to the “F” line.

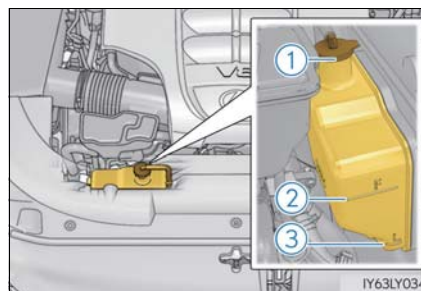

#### ■ Coolant selection

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

U.S.A.: “Toyota Super Long Life Coolant” is a mixture of 50 % coolant and 50 % deionized water. (Minimum temperature: -31°F [-35°C])

Canada: “Toyota Super Long Life Coolant” is a mixture of 55 % coolant and 45 % deionized water. (Minimum temperature: -44°F [-42°C])

For more details about engine coolant, contact your Lexus dealer.

#### ■ If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine coolant reservoir cap, radiator cap, drain cock and water pump. If you cannot find a leak, have your Lexus dealer test the cap and check for leaks in the cooling system.

#### ⚠ WARNING

##### ■ When the engine is hot

Do not remove the radiator cap, or the coolant reservoir cap.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

 NOTICE

■ **When adding coolant**

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■ **If you spill coolant**

Be sure to wash it off with water to prevent it from damage to parts or paint.

### Radiator and condenser

Check the radiator and condenser and clear any foreign objects.

If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle checked by your Lexus dealer.

 WARNING


■ **When the engine is hot**

Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

### Brake fluid

■ **Checking fluid level**

The brake fluid level should be between the "MAX" and "MIN" lines on the tank.

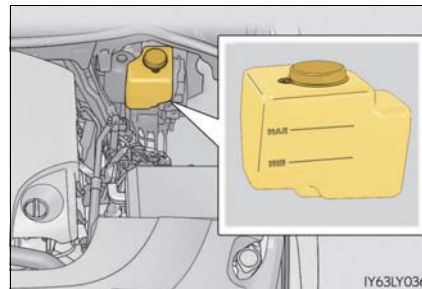

■ Adding fluid

Make sure to check the fluid type and prepare the necessary item.

|            |                                             |
|------------|---------------------------------------------|
| Fluid type | FMVSS No.116 DOT 3 or SAE J1703 brake fluid |
| Items      | Clean funnel                                |

■ Refilling brake fluid

- 1

Turn the engine switch off.
- 2

Depress the brake pedal more than 40 times.
- 3

Remove the reservoir cap by hand. Add brake fluid up to the “MAX” line.

■ Brake fluid can absorb moisture from the air

Excess moisture in the fluid can cause a dangerous loss of braking efficiency. Use only newly opened brake fluid.

WARNING

■ When filling the reservoir

Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your eyes, flush the affected area with clean water immediately. If you still experience discomfort, see a doctor.

NOTICE

■ If the fluid level is low or high


It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high. If the reservoir needs frequent refilling, it may indicate a serious problem.

## Power steering fluid

### ■ Fluid level

The fluid level should be within the appropriate range.

- ① Full (when cold)
- ② Add fluid (when cold)
- ③ Full (when hot)
- ④ Add fluid (when hot)

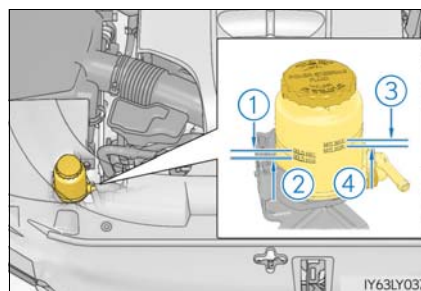

**Hot:** The vehicle has been driven around 50 mph (80 km/h) for 20 minutes, or slightly longer in frigid temperatures.  
(Fluid temperature, 140°F - 175°F [60°C - 80°C]).

**Cold:** The engine has not been run for about 5 hours.  
(Room temperature, 50°F - 85°F [10°C - 30°C]).

### ■ Checking the fluid level

Make sure to check the fluid type and prepare the necessary items.

|            |                                                    |
|------------|----------------------------------------------------|
| Fluid type | Automatic transmission fluid DEXRON® II or III     |
| Items      | Rag or paper, clean funnel (only for adding fluid) |

- 1 Clean all dirt off the reservoir.
- 2 Remove the cap by turning it counterclockwise.
- 3 Wipe the dipstick clean.
- 4 Reinstall the cap and remove it again.
- 5 Check the fluid level.

**WARNING****■ When checking the reservoir**

Take care as the reservoir may be hot.

**NOTICE****■ When adding fluid**

Avoid overfilling, or the power steering may be damaged.

**■ After replacing the reservoir cap**

Check the steering box case, vane pump and hose connections for leaks or damage.


**Battery**

Check the battery as follows.

**■ Battery exterior**

Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

- ① Terminals
- ② Hold-down clamp

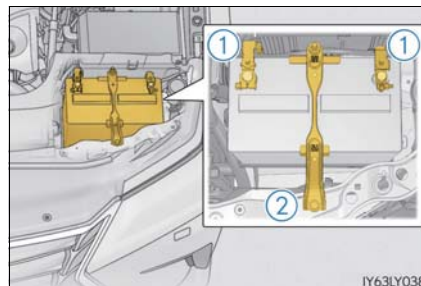

### ■ Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

### ■ After recharging/reconnecting the battery

The engine may not start. Follow the procedure below to initialize the system.

- 1 Shift the shift lever to P.
  - 2 Open and close any of the doors.
  - 3 Restart the engine.
- Unlocking the doors using the smart access system with push-button start may not be possible immediately after reconnecting the battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
  - Start the engine with the engine switch in ACCESSORY mode. The engine may not start with the engine switch turned off. However, the engine will operate normally from the second attempt.
  - The engine switch mode is recorded by the vehicle. If the battery is reconnected, the vehicle will return the engine switch mode to the status it was in before the battery was disconnected. Make sure to turn off the engine before disconnect the battery. Take extra care when connecting the battery if the engine switch mode prior to discharge is unknown.

If the engine will not start even after multiple attempts, contact your Lexus dealer.



### WARNING

#### ■ Chemicals in the battery

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

#### ■ Where to safely charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.

**WARNING****■ How to recharge the battery**

Only perform a slow charge (5A or less). The battery may explode if charged at a quicker rate.

**■ Emergency measures regarding electrolyte****● If electrolyte gets in your eyes**

Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.

**● If electrolyte gets on your skin**

Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.

**● If electrolyte gets on your clothes**

It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.

**● If you accidentally swallow electrolyte**


Drink a large quantity of water or milk. Get emergency medical attention immediately.

**NOTICE****■ When recharging the battery**

Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

### Washer fluid

If any washer does not work or “Windshield Washer Fluid Low” appears on the multi-information display, the washer tank may be empty. Add washer fluid.

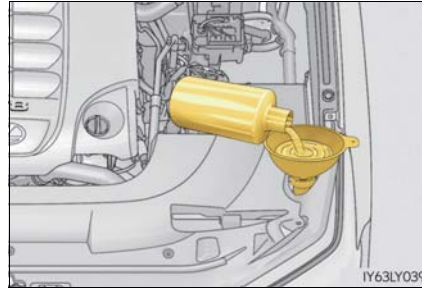

#### WARNING

##### ■ When adding washer fluid

Do not add washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

#### NOTICE

##### ■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surface, as well as damaging the pump leading to problems of the washer fluid not spraying.

##### ■ Diluting washer fluid


Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.

## Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

### Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear, such as excessive wear on one side of the tread. Check the spare tire condition and pressure if not rotated.

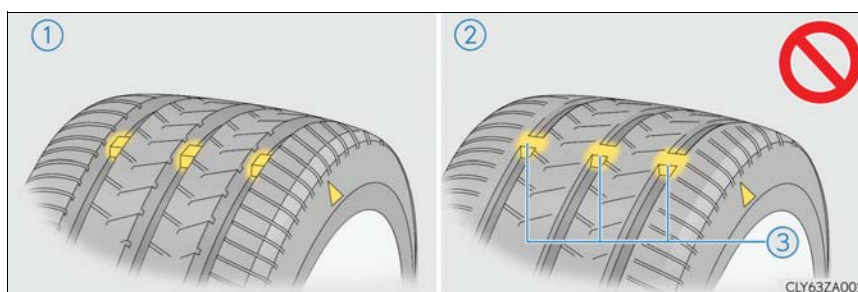

- ① New tread
- ② Worn tread
- ③ Treadwear indicator

The location of treadwear indicators is shown by a "TWI" or "△" mark, etc., molded on the sidewall of each tire.


Replace the tires if the treadwear indicators are showing on a tire.

### Tire rotation

Rotate the tires in the order shown.

To equalize tire wear and extend tire life, Lexus recommends that tire rotation is carried out at the same interval as tire inspection.


Do not fail to initialize the tire pressure warning system after tire rotation.

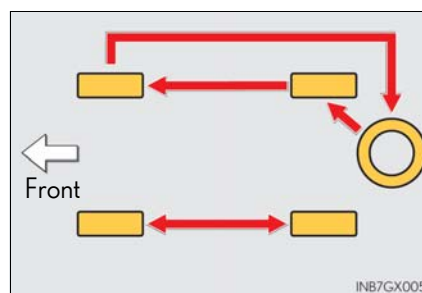

### Tire pressure warning system

Your Lexus is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

- If the tire pressure drops below a predetermined level, the driver is warned by a screen display and a warning light. (→P. 525)
- The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display. (→P. 96)

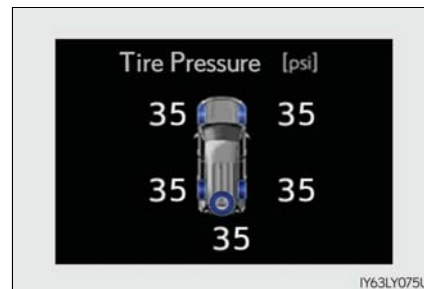

### ◆ Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by your Lexus dealer. (→P. 490)

### ◆ Initializing the tire pressure warning system

- The tire pressure warning system must be initialized in the following circumstances:

- When rotating the tires in above situation.
- When the set tire pressure has been changed before towing. (→P. 569)

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

### ■ How to initialize the tire pressure warning system

- 1 Park the vehicle in safe place and turn the engine switch to off.

Initialization cannot be performed while the vehicle is moved.


- 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 569)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3 Turn the engine switch to IGNITION ON mode.

- 4 Push and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

"--" will be displayed for inflation pressure of each tire on the multi-information display while the tire pressure warning system determines the position of each tire.

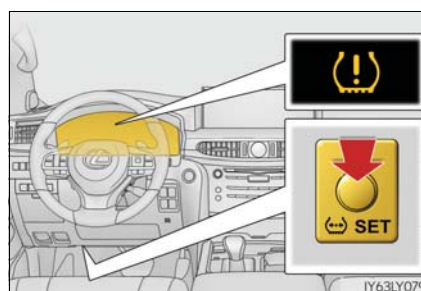

When position of each tire is determined, the inflation pressure of each tire will be displayed on the multi-information display.

- 5 Drive the vehicle at approximately 25 mph (40 km/h) or more for approximately 10 minutes.

When initialization is complete, the inflation pressure of each tire will be displayed on the multi-information display.

Initialization will take longer than approximately 10 minutes if the vehicle is stopped for a long time, such as at traffic signals.

### ◆ Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code of tire pressure warning valve and transmitter. Have the ID code registered by your Lexus dealer.

**■ When to replace your vehicle's tires**

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Lexus dealer.

**■ Replacing tires and wheels**

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 20 minutes, the tire pressure warning light comes on after blinking for 1 minute to indicate a system malfunction.

**■ Tire life**

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.


**■ Routine tire inflation pressure checks**

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

**■ Maximum load of tire**

Check that the number given by dividing the maximum load by 1.10 of the replacement tire is greater than 1/2 of the Gross Axle Weight Ratings (GAWR) of either the front axle or the rear axle, whichever is greater.

For the GAWR, see the Certification Label. For the maximum load of the tire, see the load limit at maximum cold tire inflation pressure mentioned on the sidewall of the tire. (→P. 573)

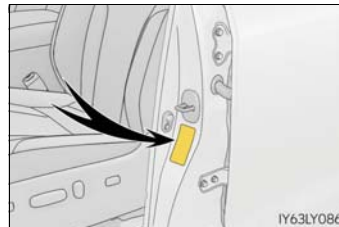

**■ Tire types****● Summer tires**

Summer tires are high-speed performance tires best suited to highway driving under dry conditions. Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered roads or icy roads, the use of snow tires is recommended. When installing snow tires, be sure to replace all four tires.

**● All season tires**

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions, as well as for use year round. All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

**● Snow tires**

For driving on snow-covered roads or icy roads, we recommend using snow tires. If you need snow tires, select tires of the same size, construction and load capacity as the originally installed tires. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restriction. Snow tires should be installed on all wheels. (→P. 388)

**■ Initializing the tire pressure warning system**

Initialize the tire pressure warning system with the tire inflation pressure adjusted to the specified level.

**■ If the tread on snow tires wears down below 0.16 in. (4 mm)**

The effectiveness of the tires as snow tires is lost.

**■ If you press the tire pressure warning reset switch accidentally**

If initialization is performed, adjust the tire inflation pressure to the specified level and initialize the tire pressure warning system again.

**■ Situations in which the tire pressure warning system may not operate properly****● In the following cases, the tire pressure warning system may not operate properly.**

- If non-genuine Lexus wheels are used.
- A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
- A tire has been replaced with a tire that is not of the specified size.
- Tire chains etc. are equipped.
- An auxiliary-supported run-flat tire is equipped.
- If a window tint that affects the radio wave signals is installed.
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
- If the tire inflation pressure is extremely higher than the specified level.
- If the spare tire is in a location subject to poor radio wave signal reception.
- If a large metallic object which can interfere with signal reception is put near the spare tire.
- If tires not equipped with the tire pressure warning valves and transmitters are used.
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.

- Performance may be affected in the following situations.
  - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
  - When carrying a portable radio, cellular phone, cordless phone or other wireless communication deviceIf tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by driving and changing the radio wave conditions.
- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

#### ■ The initialization operation

- Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the engine switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the engine switch has been turned to IGNITION ON mode for the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.
- While the position of each tire is being determined and the inflation pressures are not being displayed on the multi-information display, if the inflation pressure of a tire drops, the tire pressure warning light will come on.

#### ■ When the initialization of the tire pressure warning system has failed

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by your Lexus dealer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times and the setting message does not appear on the multi-information display.
- After carrying out the initialization procedure, the tire pressure warning light blinks for 1 minute then stays on after driving for about 20 minutes.

If the inflation of each tire is not displayed after driving for approximately 1 hour, perform the following procedure.

- Park the vehicle in a safe place for approximately 20 minutes. Then drive straight (with occasional left and right turns) at approximately 25 mph (40 km/h) or more for approximately 10 to 20 minutes.

However, in the following situations, the tire inflation pressure will not be recorded and the system will not operate properly. Perform initialization.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After performing initialization, the tire pressure warning light blinks for 1 minute then stays on after driving for about 20 minutes.

If the inflation pressure of each tire is still not displayed, have the vehicle inspected by your Lexus dealer.

#### ■ Tire pressure warning system certification

- For vehicles sold in the U.S.A., Hawaii, Guam and Puerto Rico

FCC ID: PAXPMVC015

##### NOTE

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

##### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

Model: PMV-C015

##### NOTE

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**WARNING****■ Tire pressure warning system operation**

The tire pressure warning system may not provide warning immediately if a tire bursts or if sudden air leakage occurs.

**■ When inspecting or replacing tires**

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train, as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.  
Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.  
Do not use tires if you do not know how they were used previously.

**■ When initializing the tire pressure warning system**

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.



## NOTICE

**■ Repairing or replacing tires, wheels, tire pressure warning valves and transmitters and tire valve caps**

- When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
- When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.

**■ To avoid damage to the tire pressure warning valves and transmitters**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Lexus dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 489)

**■ Driving on rough roads**

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.


**■ If tire inflation pressures become low while driving**

Do not continue driving, or your tires and/or wheels may be ruined.

## Tire inflation pressure


### Tire inflation pressure

The recommended cold tire inflation pressure and tire size are displayed on the tire and loading information label. (→P. 569)

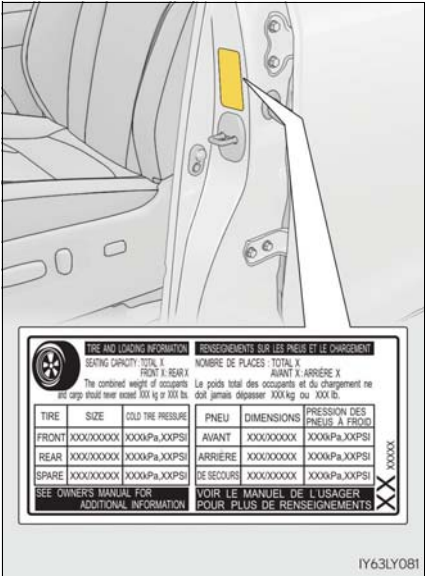

**Inspection and adjustment procedure**

- ① Tire valve
- ② Tire pressure gauge

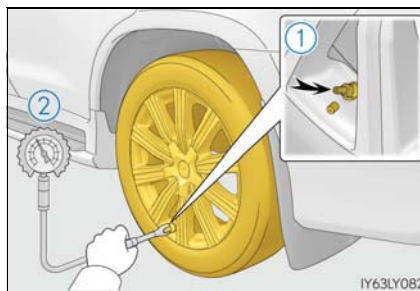

- 1 Remove the tire valve cap.
- 2 Press the tip of the tire pressure gauge onto the tire valve.
- 3 Read the pressure using the gauge gradations.
- 4 If the tire inflation pressure is not at the recommended level, adjust the pressure.  
If you add too much air, press the center of the valve to deflate.
- 5 After completing the tire inflation pressure measurement and adjustment, apply soapy water to the valve and check for leakage.
- 6 Put the tire valve cap back on.

**■ Tire inflation pressure check interval**

You should check tire inflation pressure every two weeks, or at least once a month. Do not forget to check the spare.

**■ Effects of incorrect tire inflation pressure**

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by your Lexus dealer.

**■ Instructions for checking tire inflation pressure**

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.  
If your vehicle has been parked for at least 3 hours and has not been driven for more than 1 mile or 1.5 km, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.  
It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Never exceed the vehicle capacity weight.  
Passengers and luggage weight should be placed so that the vehicle is balanced.

**WARNING****■ Proper inflation is critical to save tire performance**

Keep your tires properly inflated.

If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and wheel
- Wheel deformation and/ or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)

**NOTICE****■ When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on.

If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

## Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause loss of handling control.

### Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and inset\*.

Replacement wheels are available at your Lexus dealer.

\*: Conventionally referred to as "offset".

Lexus does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

### Aluminum wheel precautions

- Use only Lexus wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1000 miles (1600 km).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

#### ■ When replacing wheels

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 489)

**WARNING****■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

**■ Use of defective wheels prohibited**

Do not use cracked or deformed wheels.  
Doing so could cause the tire to leak air during driving, possibly causing an accident.

**NOTICE****■ Replacing tire pressure warning valves and transmitters**


- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Lexus dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Lexus dealer.
- Ensure that only genuine Lexus wheels are used on your vehicle.  
Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

## Air conditioning filter


The air conditioning filter must be cleaned or changed regularly to maintain air conditioning efficiency.

### Removal method

- 1 Turn the engine switch IGNITION ON mode and switch to recirculated air mode, then turn the engine switch off.
- 2 Open the glove box and remove the separate tray. (→P. 427)
- 3 Remove the filter cover.

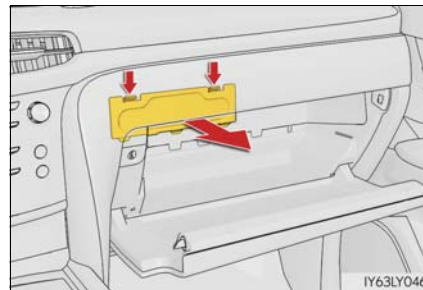

- 4 Remove the filter case.

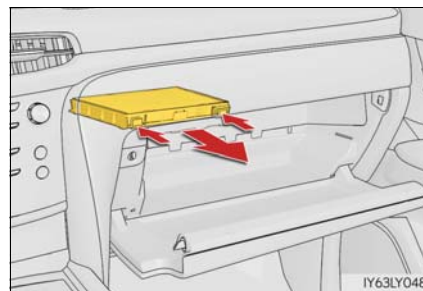


### Cleaning method

If the filter is dirty, clean by blowing compressed air through the filter from the downward side.

Hold the air gun 2 in. (5 cm) from the filter and blow for approximately 2 minutes at 72 psi (500 kPa, 5.0 kgf/cm<sup>2</sup> or bar).


If it is not available, have the filter cleaned by your Lexus dealer.

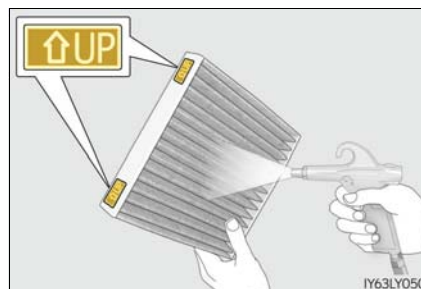

### Replacement method

Remove the air conditioning filter and replace it with a new one.

The "↑UP" marks shown on the filter should be pointing up.

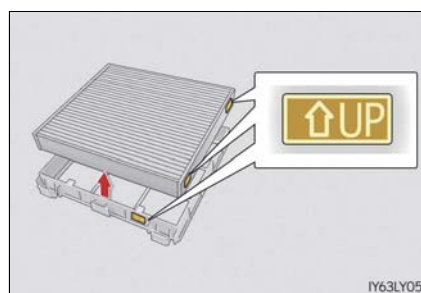

### ■ Checking interval

Inspect, clean and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, more frequent cleaning or early replacement may be required.

(For scheduled maintenance information, please refer to the "Owner's Manual Supplement" or "Scheduled Maintenance".)

### ■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.



NOTICE

### ■ To prevent damage to the system

- When using the air conditioning system, make sure that a filter is always installed.
- When cleaning the filter, do not clean the filter with water.

## Electronic key battery


Replace the battery with a new one if it is depleted.

### You will need the following items:

- Flathead screwdriver
- Lithium battery (CR2032)


### Replacing the battery

- 1** Take out the mechanical key.

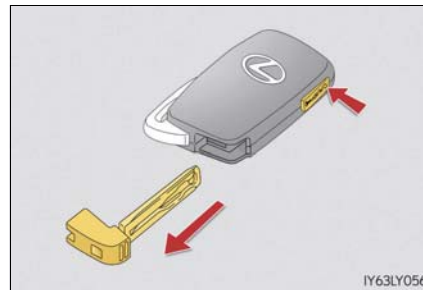

- 2** Remove the cover.


To prevent damage to the key, cover the tip of the flathead screwdriver with a tape.

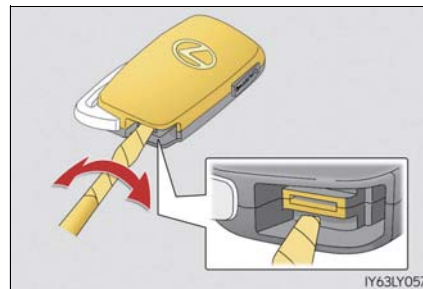

- 3** Remove the depleted battery.

When removing the cover, if the battery cannot be seen due to the electronic key module attaching to the upper cover, remove the electronic key module from the cover so that the battery is visible as shown in the illustration.

Insert a new battery with the "+" terminal facing up.

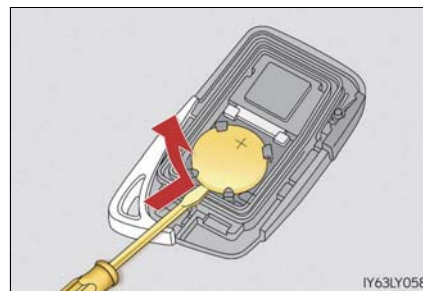

**■ Use a CR2032 lithium battery**

- Batteries can be purchased at your Lexus dealer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the local laws.

**■ When the card key battery needs to be replaced**

The battery for the card key is available only at Lexus dealers. Your Lexus dealer can replace the battery for you.

**■ If the electronic key battery is depleted**

The following symptoms may occur:

- The smart access system with push-button start and wireless remote control will not function properly.
- The operational range will be reduced.

**WARNING****■ Removed battery and other parts**

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

**NOTICE****■ For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:


- Always work with dry hands.  
Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.

## Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.


- 1 Turn the engine switch off.
- 2 Open the fuse box cover.

### ► Engine compartment

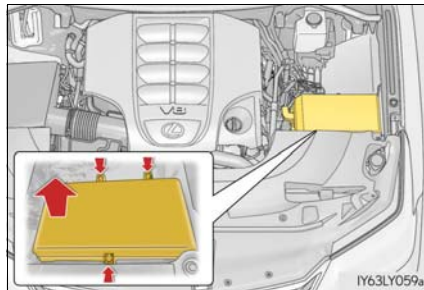

Push the tab in and lift the lid off.


### ► Driver's side instrument panel

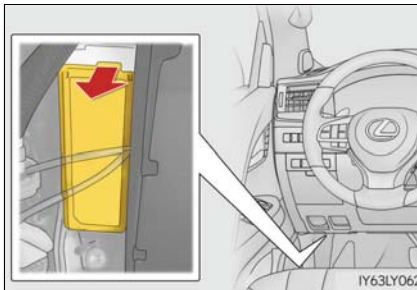

Remove the lid.

### ► Passenger's side instrument panel

Remove the cover.

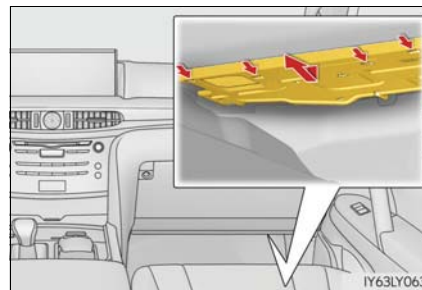


Remove the lid.



- 3** Remove the fuse with the pull-out tool.

Only type A fuse can be removed using the pull-out tool.

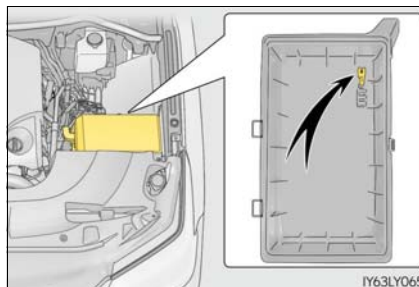


- 4** Check if the fuse is blown.

- ① Normal fuse
- ② Blown fuse


Type A and B:  
Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

Type C and D:  
Contact your Lexus dealer.


► Type A

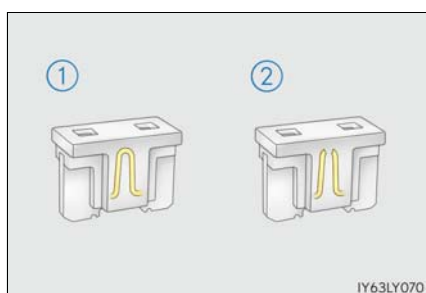


► Type B

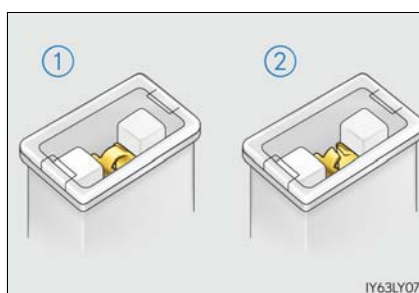

► Type C

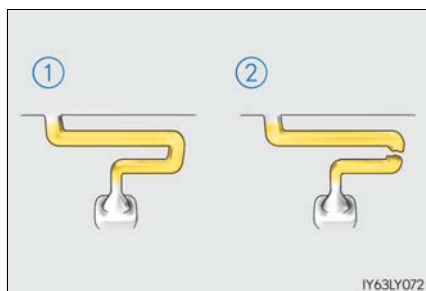

► Type D

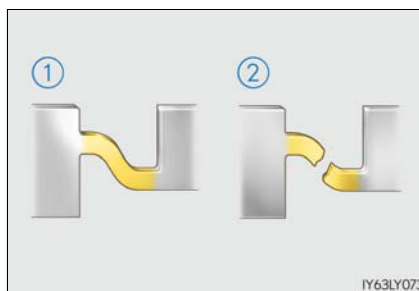

**■ After a fuse is replaced**

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 510)
- If the replaced fuse blows again, have the vehicle inspected by your Lexus dealer.

**■ If there is an overload in a circuit**

The fuses are designed to blow, protecting the wiring harness from damage.

**WARNING****■ To prevent system breakdowns and vehicle fire**

Observe the following precautions.

Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than indicated, or use any other object in place of a fuse.
- Always use a genuine Lexus fuse or equivalent.  
Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or the fuse boxes.

**NOTICE****■ Before replacing fuses**

Have the cause of electrical overload determined and repaired by your Lexus dealer, as soon as possible.

## Light bulbs

If any lights burn out, have it replaced by your Lexus dealer.

### ■ LED lights

If any of the lights listed below has burnt out, have it replaced by your Lexus dealer.

- Headlights
- Parking lights/daytime running lights
- Front side marker lights
- Fog lights
- Front turn signal lights
- Side turn signal lights
- Outer foot lights
- Rear turn signal lights
- High mounted stoplight
- Stop/tail lights
- License plate lights
- Stop lights
- Back-up lights
- Rear side marker lights
- Running board light

### ■ Condensation build-up on the inside of the lens

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact your Lexus dealer for more information in the following situations:

- Large drops of water are built up on the inside of the lens.
- Water has built up inside the headlight.



### WARNING

#### ■ Handling lights

Do not touch the lights while they are on or immediately after they have been turned off. Doing so may result in burns.

## When trouble arises

## 7

**7-1. Essential information**

Emergency flashers ..... 512

If your vehicle has to be  
stopped in an emergency..... 513

If the vehicle is trapped  
in rising water ..... 514

**7-2. Steps to take in an emergency**

If your vehicle needs  
to be towed..... 515

If you think something is  
wrong..... 521

Fuel pump shut off system..... 522

If a warning light turns  
on or a warning buzzer  
sounds..... 523

If a warning message is  
displayed..... 531

If you have a flat tire ..... 535

If the engine will not start ..... 547

If the electronic key does  
not operate properly ..... 549

If the vehicle battery is  
discharged ..... 552

If your vehicle overheats..... 555


If the vehicle becomes  
stuck ..... 558

## Emergency flashers

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.

Press the switch.

All the turn signal lights will flash.  
To turn them off, press the switch once again.

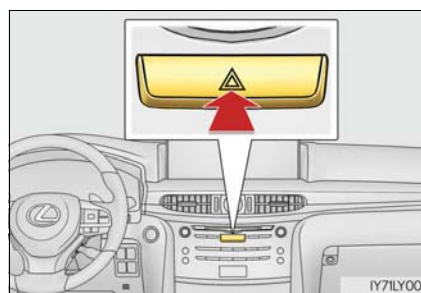

### ■ Emergency flashers

If the emergency flashers are used for a long time while the engine is not operating, the battery may discharge.

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1

Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2

Shift the shift lever to N.  
▶ If the shift lever is shifted to N
- 3

After slowing down, stop the vehicle in a safe place by the road.
- 4

Stop the engine.  
▶ If the shift lever cannot be shifted to N
- 3

Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4

To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.



- 5

Stop the vehicle in a safe place by the road.

 **WARNING**

- If the engine has to be turned off while driving

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine.

## If the vehicle is trapped in rising water

In the event the vehicle is submerged in water, remain calm and perform the following.

- Remove the seat belt first.
- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and exit the vehicle through the window.
- If the window can not be opened using the power window switch, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle, and then open the door and exit the vehicle.

### WARNING

#### ■ Using an emergency hammer\* for emergency escape

The rear side windows and rear window of this vehicle can be shattered by an emergency hammer\* used for emergency escape, however, since the windshield and front side windows are laminated glass they can not be shattered by an emergency hammer\*.

\*: Contact your Lexus dealer or aftermarket accessory manufacturer for further information about an emergency hammer.

#### ■ Escaping the vehicle from the window

There are cases where escaping the vehicle from the window is not possible due to seating position, passenger body type, etc.

When using an emergency hammer, consider your seat location and the size of the window opening to ensure that the opening is accessible and large enough to escape.

## If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Lexus dealer or commercial towing service, using a wheel-lift type truck or flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

If towing your vehicle with a wheel-lift type truck, use a towing dolly.  
(→P. 516, 519)

## Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact your Lexus dealer or commercial towing service before towing.


- The engine is running but the vehicle does not move.
- The vehicle makes an abnormal sound.

**Towing with a sling-type truck**

Do not tow with a sling-type truck to prevent body damage.


**Towing with a wheel-lift type truck**

► From the front

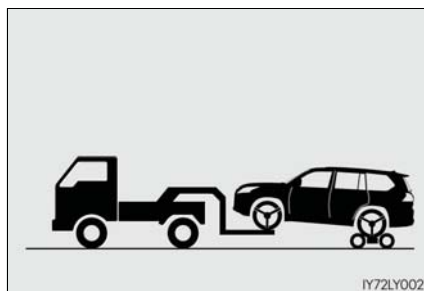

Use a towing dolly under the rear wheels.


► From the rear

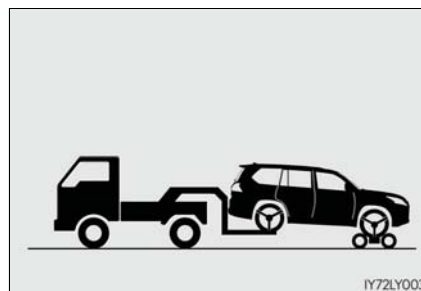

Use a towing dolly under the front wheels.


### Using a flatbed truck

If your vehicle is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.

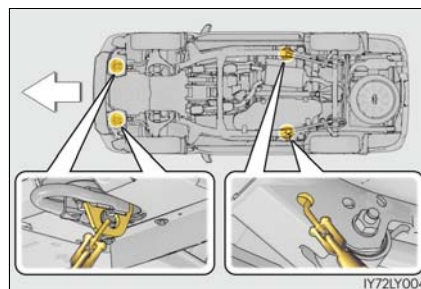

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

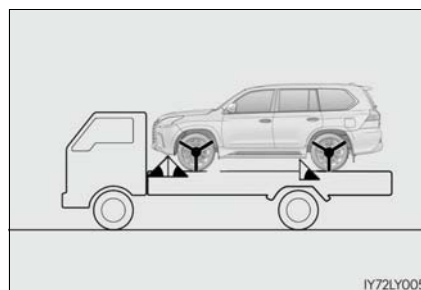

### Emergency towing


If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing hooks. This should only be attempted on hard surfaced roads for at most 50 miles (80 km) at under 18 mph (30 km/h).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

**Emergency towing procedure**

- 1** Securely attach cables or chains to the towing hooks.

Take care not to damage the vehicle body.

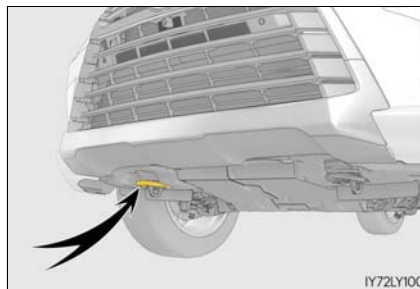

- 2** Enter the vehicle being towed and start the engine.  
If the engine does not start, turn the engine switch to IGNITION ON mode.
- 3** Shift the four-wheel drive control switch to "H4". (The center differential is unlocked.)
- 4** Change the vehicle height to N (normal) mode and press the height control OFF button to end the vehicle height control operation. (→P. 304)
- 5** Shift the shift lever to N and release the parking brake.  
When the shift lever cannot be shifted: →P. 221

**■ While towing**


If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

**⚠ WARNING**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ When towing the vehicle**

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck.

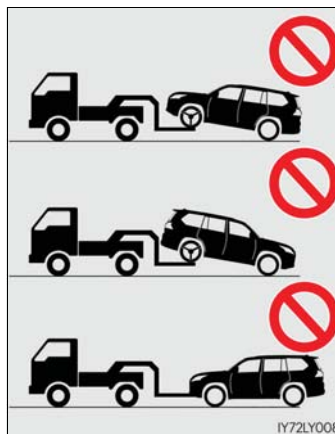**■ While towing**

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing hooks, cables or chains. The towing hooks, cables or chains may become damaged, broken debris may hit people and cause serious damage.
- Do not turn the engine switch off.  
There is a possibility that the steering wheel is locked and cannot be operated.



## NOTICE

**■ To prevent damage to the vehicle when towing using a wheel-lift type truck**

- Do not tow the vehicle from the rear when the engine switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

**■ To prevent damage to the vehicle when towing with a sling-type truck**


Do not tow with a sling-type truck, either from the front or rear.

**■ To prevent damage to the vehicle during emergency towing**

Do not secure cables or chains to the suspension components.

**■ To avoid serious damage to your vehicle**

Do not use the rear emergency towing hook.

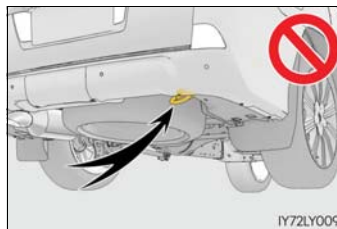

## If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Lexus dealer as soon as possible.

### Visible symptoms

- Fluid leaks under the vehicle  
(Water dripping from the air conditioning after use is normal)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal
- Engine oil pressure gauge continually points lower than normal
- Voltmeter continually points higher or lower than normal

### Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

### Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

## Fuel pump shut off system

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

- 1 Turn the engine switch to ACCESSORY mode or turn it off.
- 2 Restart the engine.



### NOTICE

#### ■ Before starting the engine

Inspect the ground under the vehicle.

If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

## If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Lexus dealer.

### Warning light and warning buzzer list

| Warning light                                                                                                                                                                                      | Warning light/Details/Actions                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>(U.S.A.)<br><br>(Canada)    | <b>Brake system warning light (warning buzzer)*<sup>1</sup></b><br>Indicates that: <ul style="list-style-type: none"> <li>• The brake fluid level is low; or</li> <li>• The brake system is malfunctioning.</li> </ul> → <b>Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.</b>                                  |
|                                                                                                                 | <b>Charging system warning light</b><br>Indicates a malfunction in the vehicle's charging system<br>→ <b>Immediately stop the vehicle in a safe place and contact your Lexus dealer.</b>                                                                                                                                                                                                       |
| <br>(U.S.A.)<br><br>(Canada) | <b>Malfunction indicator lamp</b><br>Indicates a malfunction in: <ul style="list-style-type: none"> <li>• The emission control system;</li> <li>• The electronic engine control system;</li> <li>• The electronic throttle control system; or</li> <li>• The electronic automatic transmission control system</li> </ul> → <b>Have the vehicle inspected by your Lexus dealer immediately.</b> |
|                                                                                                                 | <b>SRS warning light</b><br>Indicates a malfunction in: <ul style="list-style-type: none"> <li>• The SRS airbag system; or</li> <li>• The front passenger occupant classification system; or</li> <li>• The seat belt pretensioner system</li> </ul> → <b>Have the vehicle inspected by your Lexus dealer immediately.</b>                                                                     |
| <br>(U.S.A.)<br><br>(Canada) | <b>ABS warning light</b><br>Indicates a malfunction in: <ul style="list-style-type: none"> <li>• The ABS; or</li> <li>• The brake assist system</li> </ul> → <b>Have the vehicle inspected by your Lexus dealer immediately.</b>                                                                                                                                                               |

| Warning light                                                                                                 | Warning light/Details/Actions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>(Flashes or illuminates) | <p><b>PCS warning light (if equipped)</b><br/> Indicates a malfunction in the PCS (Pre-Collision System) or that the system is temporarily unavailable due to the vehicle being extremely hot/cold, or dirt around a front sensor, etc. (→P. 266, 531)<br/> → <b>Follow the instructions displayed on the multi-information display. (→P. 266, 531)</b><br/> If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate.<br/> → <b>P. 266</b></p> |
|                              | <p><b>Slip indicator</b><br/> Indicates a malfunction in:<br/> • The Multi-terrain Select;<br/> • The Crawl Control;<br/> • The VSC (Vehicle Stability Control) system;<br/> • Active TRAC (Traction Control) system;<br/> • Trailer Sway Control; or<br/> • The hill-start assist control system<br/> The light will flash when any of the above systems other than the Multi-terrain Select are operating.<br/> → <b>Have the vehicle inspected by your Lexus dealer immediately.</b></p>                           |
|                            | <p><b>Automatic headlight leveling system warning light</b><br/> Indicates a malfunction in the automatic headlight leveling system<br/> → <b>Have the vehicle inspected by your Lexus dealer immediately.</b></p>                                                                                                                                                                                                                                                                                                    |

| Warning light                                                                                                                                                                                                                | Warning light/Details/Actions                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>(Flashes)                                                                                                                               | <b>Low speed four-wheel drive indicator light</b><br>Indicates a malfunction in the four-wheel drive system if the light continues flashing. (→P. 309)<br>→ <b>Have the vehicle inspected by your Lexus dealer immediately.</b>                                                                                                   |
| <br>(Flashes)                                                                                                                               | <b>Center differential lock indicator light</b><br>Indicates a malfunction in the four-wheel drive system if the light continues flashing. (→P. 309)<br>→ <b>Have the vehicle inspected by your Lexus dealer immediately.</b>                                                                                                     |
|                                                                                                                                             | <b>Open door warning light (warning buzzer)*2</b><br>Indicates that a door is not fully closed<br>→ <b>Check that all the doors are closed.</b>                                                                                                                                                                                   |
|                                                                                                                                             | <b>Low fuel level warning light</b><br>Indicates that remaining fuel is approximately 4.0 gal. (15.0 L, 3.3 Imp.gal.) or less<br>→ <b>Refuel the vehicle.</b>                                                                                                                                                                     |
|                                                                                                                                            | <b>Driver's seat belt reminder light (warning buzzer)*3</b><br>Warns the driver to fasten his/her seat belt.<br>→ <b>Fasten the seat belt.</b>                                                                                                                                                                                    |
| <br>(On the center panel)                                                                                                                 | <b>Front passenger's seat belt reminder light (warning buzzer)*3</b><br>Warns the front passenger to fasten his/her seat belt.<br>→ <b>Fasten the seat belt.</b>                                                                                                                                                                  |
|                                                                                                                                           | <b>Master warning light</b><br>A buzzer sounds and the warning light comes on or flashes to indicate that the master warning system has detected a malfunction.<br>→ <b>P. 531</b>                                                                                                                                                |
|                                                                                                                                           | <b>Tire pressure warning light</b><br>Indicates that: <ul style="list-style-type: none"> <li>• Flat tire</li> <li>• Natural causes</li> <li>• The tire pressure warning system is malfunctioning</li> </ul> → <b>Immediately stop the vehicle in a safe place.</b><br><b>Handling method (→P. 528)</b>                            |
|                                                                                                                                           | <b>Power steering system warning light (warning buzzer)</b><br>Indicates a malfunction in the power steering system<br>→ <b>Have the vehicle inspected by your Lexus dealer immediately.</b>                                                                                                                                      |
| <br>(Flashes)<br>(U.S.A.)<br><br>(Flashes)<br>(Canada) | <b>Parking brake indicator</b><br>Indicates that the parking brake is not fully engaged or released<br>→ <b>Operate the parking brake switch once again.</b><br>This light comes on when the parking brake is not released.*4 If the light turns off after the parking brake is fully released, the system is operating normally. |

| Warning light                                                                     | Warning light/Details/Actions                                                                                                                                              |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Brake system warning light</b><br>Indicates a malfunction in the electric parking brake system<br>→ <b>Have the vehicle inspected by your Lexus dealer immediately.</b> |

\*1. Brake system warning buzzer:

The buzzer sounds to indicate that the brake fluid level is low (with the vehicle reached a speed of 3 mph [5 km/h]).

\*2. Open door warning buzzer:

The open door warning buzzer sounds to alert one or more of the doors is not fully closed (with the vehicle having reached a speed of 3mph [5 km/h]).

\*3. Driver's seat belt buzzer:

The driver's seat belt buzzer sounds to alert the driver that his or her seat belt is not fastened. Once the engine switch is turned to IGNITION ON mode, the buzzer sounds for 6 seconds. If the vehicle reaches a speed of 12 mph (20 km/h), the buzzer sounds once. If the seat belt is still unfastened after 24 seconds, the buzzer will sound intermittently for 10 seconds. Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

Front passenger's seat belt buzzer:

The front passenger's seat belt buzzer sounds to alert the front passenger that his or her seat belt is not fastened. The buzzer sounds once if the vehicle reaches a speed of 12 mph (20 km/h). If the seat belt is still unfastened after 24 seconds, the buzzer will sound intermittently for 10 seconds. Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

\*4. Parking brake engaged warning buzzer:

A buzzer sounds to indicate that the parking brake is still engaged (with the vehicle having reached a speed of 3 mph [5 km/h]).

**■ SRS warning light**

This warning light system monitors the airbag sensor assembly, front impact sensors, side impact sensors (rear), side impact sensors (front door), safing sensor (rear), driver's seat belt buckle switch, driver's seat position sensor, front passenger's seat belt buckle switch, airbags, interconnecting wiring and power sources, front passenger occupant classification system, "AIR BAG ON" and "AIR BAG OFF" indicator lights, seat belt pretensioners and force limiters. (→P. 38)

**■ Front passenger detection sensor, seat belt reminder and warning buzzer**

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

**■ If the malfunction indicator lamp comes on while driving**

First check the following:

- Is the fuel tank empty?  
If it is, fill the fuel tank immediately.
- Is the fuel tank cap loose?  
If it is, tighten it securely.

The light will go off after several driving trips.

If the light does not go off even after several trips, contact your Lexus dealer as soon as possible.

**■ If the low speed four-wheel drive indicator light or the center differential lock indicator light blinks**

Take the specified steps. (→P. 311)

If the brake system warning light or the malfunction indicator light also comes on, or the low speed four-wheel drive indicator light or the center differential lock indicator light continues to blink after taking the specified steps, there may be a malfunction in the engine, the brake system or the four-wheel drive system. In this case, you may not be able to transfer between "H4" and "L4" modes, and the center differential lock may not be able to be locked or unlocked. Have the vehicle inspected by your Lexus dealer, immediately.

■ **When the tire pressure warning light comes on**

Inspect the tires to check if a tire is punctured.

If a tire is punctured: →P. 535

If none of the tires are punctured:

Turn the engine switch off then turn it to IGNITION ON mode. Check if the tire pressure warning light comes on or flashes.

▶ If the tire pressure warning light comes on

**1** After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.

**2** If the warning light does not turn off even after several minutes have elapsed, check that the inflation pressure of each tire is at the specified level and perform initialization. (→P. 489)

If the warning light does not turn off even after several minutes have elapsed, have the vehicle inspected by your Lexus dealer immediately.

▶ If the tire pressure warning light flashes for 1 minute then stay on

There may be a malfunction in the tire pressure warning system. Have the vehicle inspected by your Lexus dealer immediately.

■ **The tire pressure warning light may turn on due to natural causes**

The tire pressure warning light may turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ **When a tire is replaced with a spare tire**

The spare tire is also equipped with the tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, even though the flat tire is replaced with the spare tire, the tire pressure warning light does not turn off. Replace the spare tire with the repaired tire and adjust the proper tire inflation pressure. The tire pressure warning light will turn off after a few minutes.

■ **Conditions that the tire pressure warning system may not function properly**

→P. 492

■ **Changing the engine oil**

Make sure to reset oil change system

■ **Warning buzzer**

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

**WARNING****■ If both the ABS and the brake system warning lights remain on**

Stop your vehicle in a safe place immediately and contact your Lexus dealer. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

**■ If the tire pressure warning light comes on**

Be sure to observe the following precautions. Failure to do so could cause loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If the tire is flat, change to the spare tire and have the flat tire repaired by the nearest Lexus dealer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

**■ If a blowout or sudden air leakage should occur**

The tire pressure warning system may not activate immediately.

**WARNING****■ Maintenance of the tires**

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (tire and load information label). (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label [tire and load information label], you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS-tire pressure warning system) that illuminates a low tire pressure telltale (tire pressure warning light) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale (tire pressure warning light) illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS (tire pressure warning system) is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale (tire pressure warning light).

Your vehicle has also been equipped with a TPMS (tire pressure warning system) malfunction indicator to indicate when the system is not operating properly. The TPMS (tire pressure warning system) malfunction indicator is combined with the low tire pressure telltale (tire pressure warning light). When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS (tire pressure warning system) malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS (tire pressure warning system) from functioning properly. Always check the TPMS (tire pressure warning system) malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS (tire pressure warning system) to continue to function properly.

**NOTICE****■ To ensure the tire pressure warning system operates properly**

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

## If a warning message is displayed

The multi-information display shows warnings of system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.

① Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the instrument cluster.

② Multi-information display

③ Handling Method

Follow the instructions of the message on the multi-information display.

If any of the warning messages are shown again after the following actions have been performed, contact your Lexus dealer.



### Messages and warnings

The warning lights and warning buzzers operate as follows depending on the content of the message. If a message indicates the need for inspection by a dealer, have the vehicle inspected by your Lexus dealer immediately.

|  | System warning light | Warning buzzer* | Warning                                                                                                                                                             |
|-----------------------------------------------------------------------------------|----------------------|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Comes on                                                                          | Comes on             | Sounds          | Indicates an important situation, such as when a system related to driving is malfunctioning or that danger may result if the correction procedure is not performed |
| Comes on                                                                          | —                    | Sounds          |                                                                                                                                                                     |
| —                                                                                 | Comes on or flashes  | Sounds          | Indicates an important situation, such as when the systems shown on the multi-information display may be malfunctioning                                             |
| Flashes                                                                           | —                    | Sounds          | Indicates a situation, such as when damage to the vehicle or danger may result                                                                                      |
| Comes on                                                                          | —                    | Does not sound  | Indicates a condition, such as malfunction of electrical components, their condition, or indicates the need for maintenance                                         |
| Flashes                                                                           | —                    | Does not sound  | Indicates a situation, such as when an operation has been performed incorrectly, or indicates how to perform an operation correctly                                 |

\*: A buzzer sounds the first time a message is shown on the multi-information display.

#### ■ System warning lights

The master warning light does not come on or flash in the following case. Instead, a separate system warning light will come on along with a message or image shown on the multi-information display.

- Indicates that the PCS (Pre-Collision System) is not currently functional  
The PCS warning light comes on. (→P. 524)

■ If “See Owner’s Manual” is shown

- If “Smart Access System Malfunction” is shown, this may be a malfunction. Immediately have the vehicle inspected by your Lexus dealer.
- If “Transmission Fluid Temp High” is shown, it indicates that the automatic transmission fluid temperature is too high.

Immediately stop the vehicle in a safe place, shift the shift lever to P and wait until the warning message and light go off. If the warning message and light go off, you may start the vehicle again. If the warning message and light do not go off, contact your Lexus dealer.

■ If “Shift to P Before Exiting Vehicle” is shown

Message is displayed when the driver’s door is opened without turning the engine switch to off with the shift lever in any position other than P.

Shift the shift lever to P.

■ If “Power Turned Off to Save Battery” is shown

Power was turned off due to the automatic power off function.

Next time when starting the engine, increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the battery.

■ When a message that indicates the need for the shift lever operation is shown

To prevent the shift lever from being operated incorrectly or the vehicle from moving unexpectedly, a message that requires shifting the shift lever may be shown on the multi-information display. In that case, follow the instruction of the message and shift the shift lever.

■ When “Headlight System Malfunction Visit Your Dealer” is displayed on the multi-information display

The following systems may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

- The LED headlight system
- The automatic headlight leveling system
- Automatic High Beam

■ If “Forward Camera System Unavailable” or “Forward Camera System Unavailable Clean Windshield” is displayed (if equipped)

The following systems may be suspended until the problem shown in the message is resolved. (→P. 266, 523)

- PCS (Pre-Collision System)
- LDA (Lane Departure Alert)
- Dynamic radar cruise control with full-speed range
- Automatic High Beam

■ If “Engine Oil Level Low” is shown

Indicates that engine oil level is low.

Check the level of engine oil, and add if necessary.

This message may appear if the vehicle is stopped on a slope.

Move the vehicle to a level surface and check to see if the message disappears.

■ **If a following message is shown, take appropriate action and confirm that the message has disappeared. (→P. 313)**

- "Crawl Not Available Select L4 and Shift to [D] or [R] Position"
- "Crawl Not Available Check System Operation Conditions"
- "Turn Assist Function Not Available Check System Operation Conditions"
- "Turn Assist Function Not Available Activate Crawl Control"

■ **If "Maintenance Required Soon" is shown (U.S.A. only)**

Indicates that all maintenance according to the driven distance on the maintenance schedule\* should be performed soon.

Comes on approximately 4500 miles (7200 km) after the message has been reset.

If necessary, perform maintenance.

\*: Refer to the separate "Scheduled Maintenance Guide" or "Owner's Manual Supplement" for the maintenance interval applicable to your vehicle.

■ **If "Maintenance Required Visit Your Dealer" is shown (U.S.A. only)**

Indicates that all maintenance is required to correspond to the driven distance on the maintenance schedule\*.

Comes on approximately 5000 miles (8000 km) after the message has been reset.

(The indicator will not work properly unless the message has been reset.)

Perform the necessary maintenance. Please reset the message after the maintenance is performed (→P. 467)

\*: Refer to the separate "Scheduled Maintenance Guide" or "Owner's Manual Supplement" for the maintenance interval applicable to your vehicle.

■ **If "Oil Maintenance Required Soon" is shown**

Indicates that the engine oil is scheduled to be changed. (The indicator will not work properly unless the message has been reset.)

Check the engine oil, and change if necessary. After changing the engine oil, the message should be reset. (→P. 477)

■ **If "Oil Maintenance Required Visit Your Dealer" is shown**

Indicates that the engine oil should be changed. (The indicator will not work properly unless the message has been reset.)

Check and change the engine oil, and oil filter by your Lexus dealer. After changing the engine oil, the message should be reset. (→P. 477)

■ **If "Visit Your Dealer" is shown**

The system or part shown on the multi-information display is malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ **Warning buzzer**

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.



**NOTICE**

■ **While the engine oil level warning is displayed**

Continued engine operation with low engine oil will damage the engine.

## If you have a flat tire

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P. 488

### ⚠ WARNING

#### ■ If you have a flat tire


Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

## Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to "P".
- Turn off the 4-Wheel AHC. (→P. 301)
- Stop the engine.
- Turn on the emergency flashers.

## Location of the spare tire, jack and tools

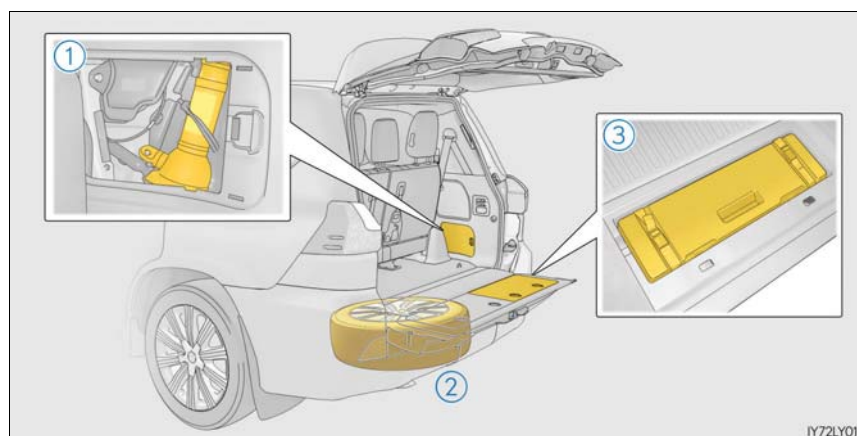

① Jack

② Spare tire

③ Tool box

**WARNING****■ Using the tire jack**

Improper use of the tire jack may lead to death or serious injuries due to the vehicle suddenly falling off the jack.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Always check that the tire jack is securely set to the jack point.
- Be sure to turn off the 4-Wheel AHC and stop the engine.
- Do not put any part of your body under the vehicle supported by a jack.
- Do not start or run the engine while your vehicle is supported by the jack.
- Do not raise the vehicle while someone is in it.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.


Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle will be injured.

**■ Using the jack handle**

Tighten all the jack handle bolts securely using a Phillips-head screwdriver, to prevent the extension parts from coming apart unexpectedly.

**Taking out the jack**

- 1** Remove the cover.

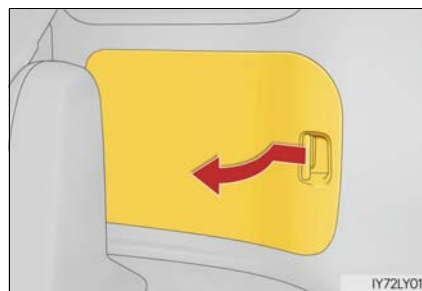

- 2** Unhook the rubber band and take out the jack.


① Loosen

② Tighten


Loosen and remove the jack.

**Taking out the tool box**

- 1** Remove the cover.

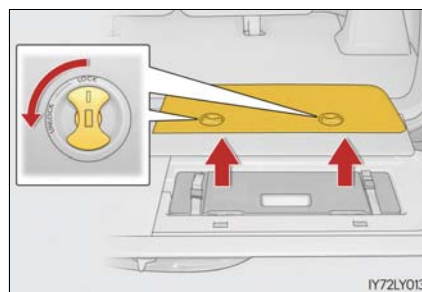

- 2** Take out the tool box.

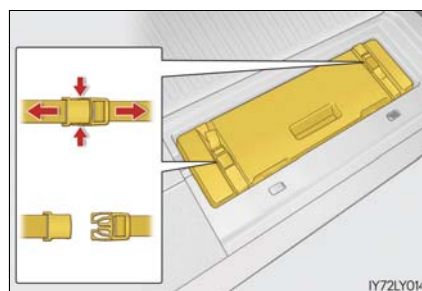


### Taking out the spare tire

#### 1 Assembling the jack handle.


Remove the jack handle and the jack extension bar from the tool box and assemble by following these steps.

- ① Loosen the screw using a screw-driver.

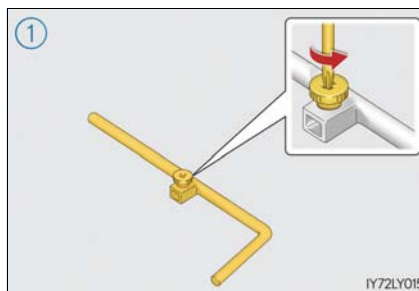

- ② Assemble the jack handle and the jack handle extension bar and tighten the screw.

Check that the screw is firmly tightened.

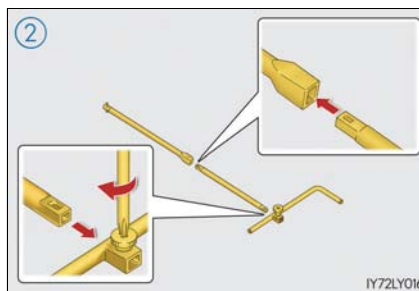

#### 2 Open the cover.




#### 3 Insert the jack handle extension into the lowering screw.


- ① Lower

- ② Raise


Place a rag under the jack handle extension to protect the back door.

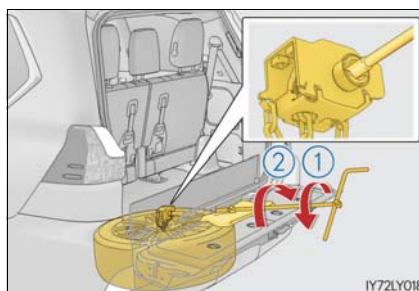

- 4 Lower the spare tire completely to the ground.

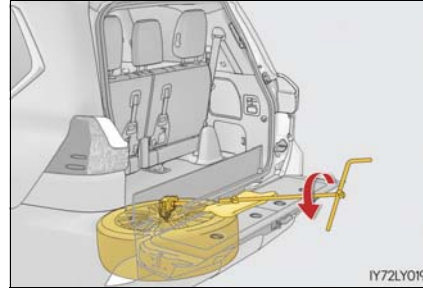


- 5 Pull out the spare tire and remove the holding bracket and spare wheel cover.

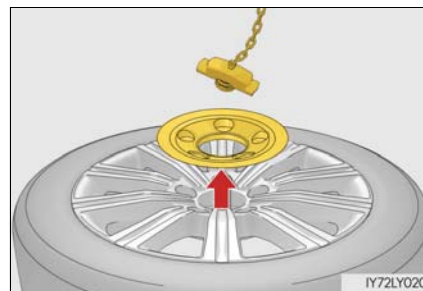


### Replacing a flat tire

- 1 Chock the tires.

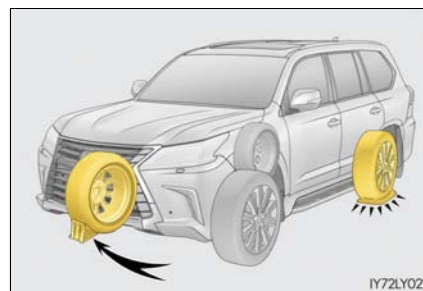


| Flat tire |                 | Wheel chock positions                      |
|-----------|-----------------|--------------------------------------------|
| Front     | Left-hand side  | Behind the rear right-hand side tire       |
|           | Right-hand side | Behind the rear left-hand side tire        |
| Rear      | Left-hand side  | In front of the front right-hand side tire |
|           | Right-hand side | In front of the front left-hand side tire  |

- 2** 21-inch tires: Pry off the wheel ornament, using the beveled end of the wheel ornament remover as shown.

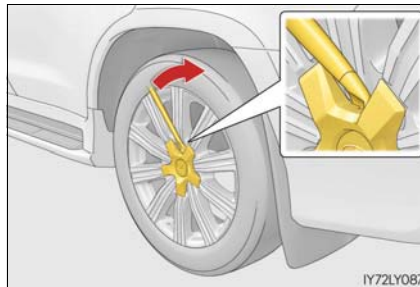


- 3** Slightly loosen the wheel nuts (one turn).

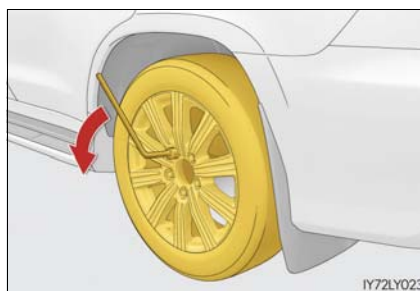

- 4** Assembling the jack handle.


Remove the jack handle, jack extension bar and jack handle bar from the tool box and assemble by following these steps.

- ① Loosen the bolts and the screw using either the jack handle or a screwdriver.

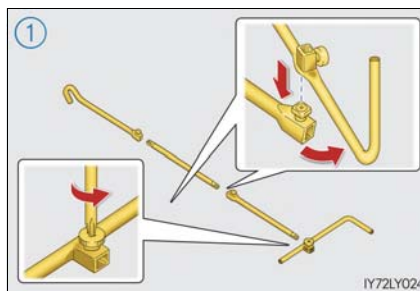


- ② Assemble the jack handle extension bar and the jack handle bar and tighten the bolts.

Check that the bolts are firmly tightened.

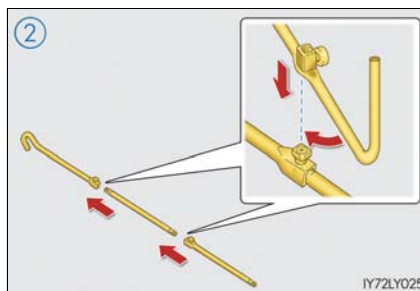


- ③ Assemble the jack handle extension bar and the jack handle and tighten the screw.

Check that the screw is firmly tightened.

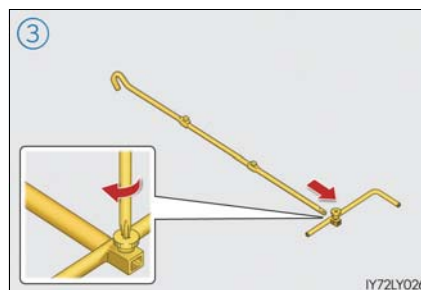

- ⑤ Position the jack at the jack points as shown.

- ① Front  
Under the chassis frame side rail
- ② Rear  
Under the rear axle housing

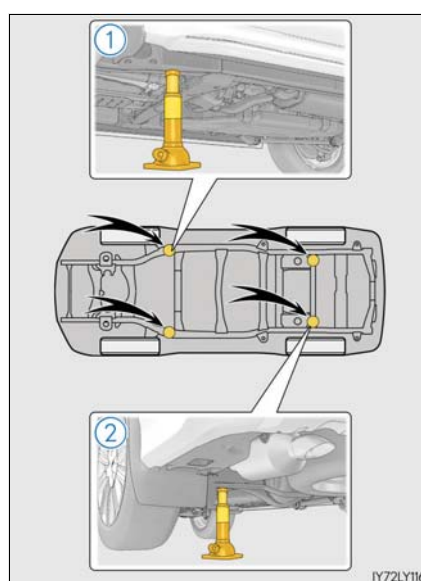


- ⑥ Raise the vehicle until the tire is slightly raised off the ground.



- 7** Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

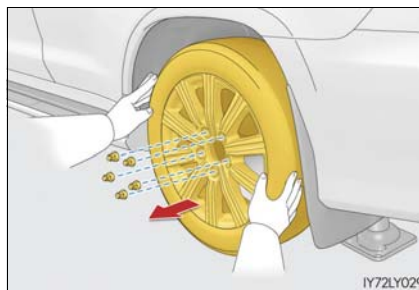

### **! WARNING**

#### ■ Replacing a flat tire

- Observe the following precautions.  
Failure to do so may result in serious injury:
  - Lower the spare tire completely to the ground before removing it from under the vehicle.
  - Do not try to remove the wheel ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.
  - Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.  
After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.
  - Turn off the vehicle height control.  
The vehicle height may change due to the automatic leveling function and you may catch part of your body in the vehicle, resulting in an accident. (→P. 301)
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
  - Never use oil or grease on the wheel bolts or wheel nuts.  
Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
  - Have the wheel nuts tightened with a torque wrench to 97 ft•lbf (131 N•m, 13.4 kgf•m) as soon as possible after changing wheels.
  - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
  - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Lexus dealer.
  - Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.

#### ■ Replacing a flat tire for vehicles with power back door

In cases such as when replacing tires, make sure to turn off the power back door main switch (→P. 130). Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.

### Installing the spare tire


- 1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, and the tire may come off the vehicle.



- 2 Install the spare tire and loosely tighten each nut by hand to approximately the same amount.

Turn the nut washers until they come into contact with the disc wheel.

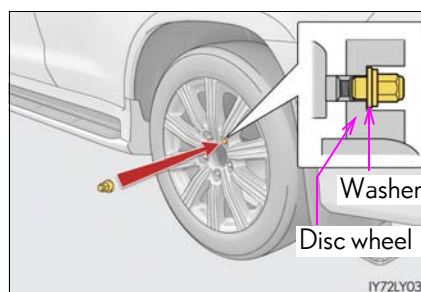


- 3 Lower the vehicle.




- 4 Firmly tighten each nut two or three times in the order shown in the illustration.

**Tightening torque:**  
97 ft•lbf (131 N•m, 13.4 kgf•m)

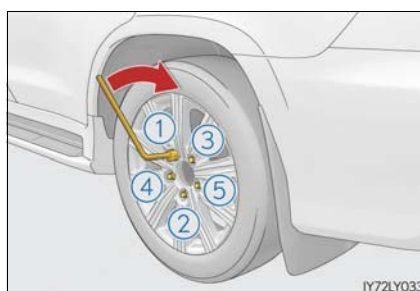


**5** Reinstall the wheel ornament.

## ► 20-inch tires

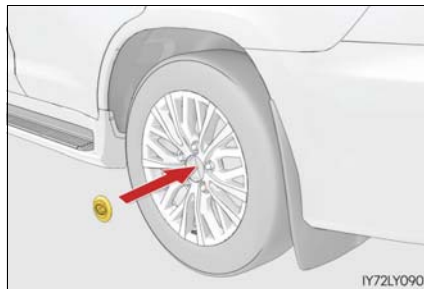

Remove the center wheel ornament from the flat tire by pushing from the reverse side, and reinstall it.

## ► 21-inch tires

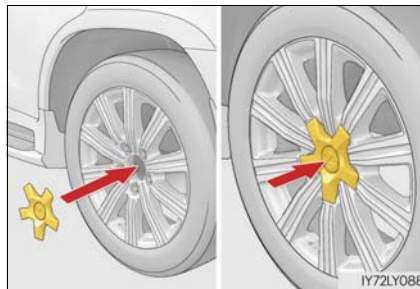


Make sure to push the center part of the wheel ornament.

**⚠ WARNING****■ Stowing the flat tire**

Failure to follow steps listed under stowing the tire may result in damage to the spare tire carrier and loss of the tire, which could result in death or serious injury.

**Stowing the flat tire, jack and all tools**


- 1** Lay down the tire with the valve stem facing up and install the spare wheel cover.

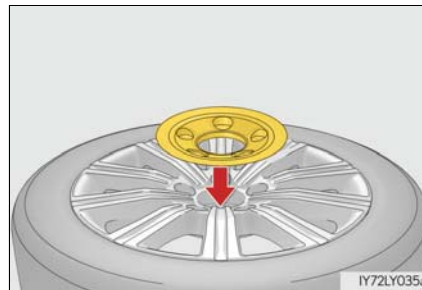

- 2** Install the holding bracket, inserting the claw into the wheel lug nut hole. Turn the jack handle extension clockwise to take up slack in the chain.

Then, check to ensure the claw is in the wheel lug nut hole and the holding bracket is centered in the wheel hub.

- ① Holding bracket
- ② Claw

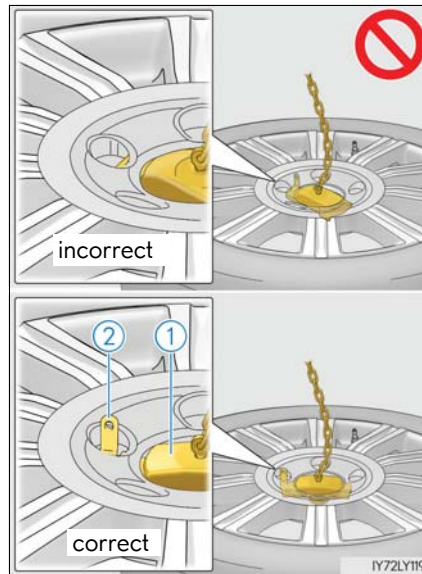


**3** Raise the tire.

While raising, secure the tire, taking care that the tire goes straight up without catching on any surrounding part, to prevent it from flying forward during a collision or sudden braking.

After the tire goes half way up, check that the suspended chain is able to enter the tire hole, for proper storage.

**Tightening torque:**


33.2 ft•lbf (45 N•m, 4.6 kgf•m)

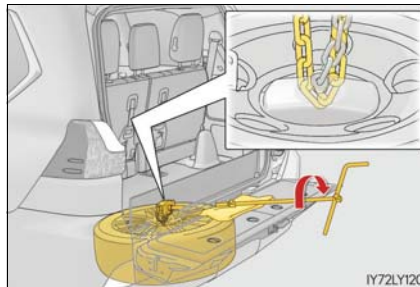**4** Confirm that the tire is not loose after tightening:

① Push and pull the tire

② Try rotating

Visually check to ensure the tire is not hung on surrounding parts.

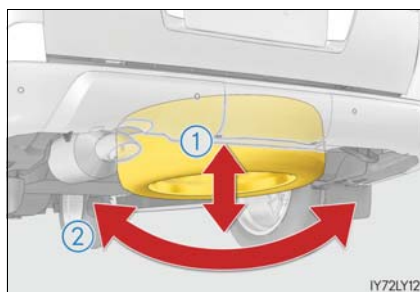

If looseness or misassembly exists, repeat step **3** and step **4**.

**5** Repeat step **4**, any time the tire is lowered or disturbed.**6** Stow the tools and jack securely.**After completing the tire change**

The tire pressure warning system must be reset. (→P. 489)

**NOTICE****When stowing the flat tire**

Ensure that there is no object caught between the tire and the vehicle underbody.

**When replacing the tires**

● When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

● Replace the grommets for the tire pressure warning valves and transmitters as well.

**To avoid damage to the tire pressure warning valves and transmitters**

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact your Lexus dealer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 489)

**If the engine will not start**

If the engine will not start even though correct starting procedures are being followed (→P. 211), consider each of the following points:

**The engine will not start even when the starter motor operates normally.**

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.  
Refuel the vehicle.
- The engine may be flooded.  
Try to restart the engine again following correct starting procedures.  
(→P. 211)
- There may be a malfunction in the engine immobilizer system. (→P. 80)

**The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.**

One of the following may be the cause of the problem:

- The battery may be discharged. (→P. 552)
- The battery terminal connections may be loose or corroded.

**The starter motor does not turn over.**

The engine starting system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, an interim measure is available to start the engine. (→P. 548)

**The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.**

One of the following may be the cause of the problem:

- One or both of the battery terminals may be disconnected.
- The battery may be discharged. (→P. 552)
- There may be a malfunction in the steering lock system.

Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

**Emergency start function**

When the engine does not start, the following steps can be used as an interim measure to start the engine if the engine switch is functioning normally.

- 1** Set the parking brake.
- 2** Put the shift lever in P.
- 3** Set the engine switch to the ACCESSORY mode.
- 4** Push and hold the engine switch for about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

## If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P. 140) or the electronic key cannot be used because the battery is depleted, the smart access system with push-button start and wireless remote control cannot be used. In such cases, the doors can be opened and the engine can be started by following the procedure below.


### Locking and unlocking the doors and key linked functions

Use the mechanical key (→P. 117) in order to perform the following operations (driver's door only):

- ① Locks all the doors
- ② Closes the windows and moon roof\* (turn and hold)
- ③ Unlocks the doors
- ④ Opens the windows and moon roof\* (turn and hold)

Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.

\*: These settings must be customized at your Lexus dealer.

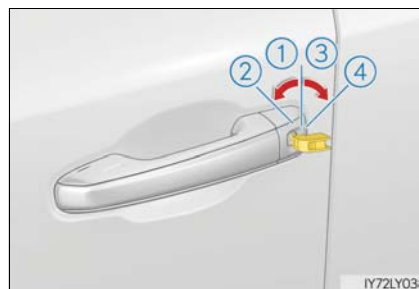


### Starting the engine

- 1 Ensure that the shift lever is in P and depress the brake pedal.

- 2 Touch the Lexus emblem side of the electronic key to the engine switch.

When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.

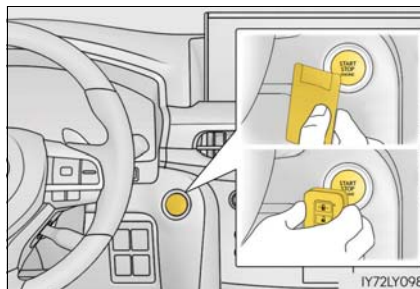

- 3 Firmly depress the brake pedal and check that  is shown on the multi-information display.

- 4 Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

### Stopping the engine

Shift the shift lever to P and press the engine switch as you normally do when stopping the engine.

### Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 505)

### Changing engine switch modes

Release the brake pedal and press the engine switch in 3 step above. The engine does not start and modes will be changed each time the switch is pressed. (→P. 212)

### Alarm

Using the mechanical key to lock the doors will not set the alarm system.

If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P. 82)

### When the electronic key does not work properly

- Make sure that the smart access system with push-button start has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features: →P. 584)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P. 140)

**WARNING****■ When using the mechanical key and operating the power windows or moon roof**

Operate the power window or moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or moon roof.

Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or moon roof.

## If the vehicle battery is discharged

The following procedures may be used to start the engine if the vehicle's battery is discharged.

You can also call your Lexus dealer or qualified repair shop.


If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your Lexus following the steps below.

- 1 Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P. 84)



- 2 Open the hood. Remove the engine compartment cover. (→P. 476)
- 3 Connect the jumper cables.

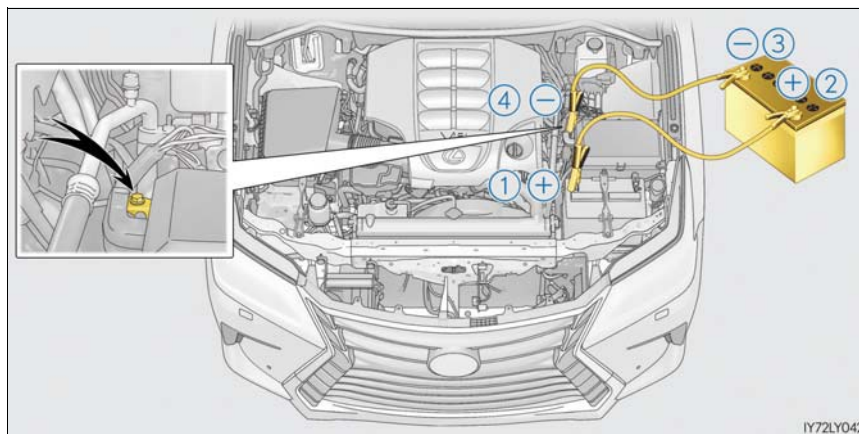

- ① Positive (+) battery terminal on your vehicle
- ② Positive (+) battery terminal on the second vehicle
- ③ Negative (-) battery terminal on the second vehicle
- ④ Connect the jumper cable to ground on your vehicle as shown in the illustration.

- 4 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- 5 Open and close any of the doors with the engine switch off.
- 6 Maintain the engine speed of the second vehicle and turn the engine switch to IGNITION ON mode, then start the vehicle's engine.
- 7 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order in which they were connected.

Once the engine starts, have the vehicle checked at your Lexus dealer, as soon as possible.

---

**■ Starting the engine when the battery is discharged**

The engine cannot be started by push-starting.

**■ Avoiding a discharged battery**

- Turn off the headlights and the audio system while the engine is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic, etc.

**■ Charging the battery**

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

**■ When the battery is removed or discharged**

The power back door must be initialized. (→P. 132)

**WARNING****■ Avoiding battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery.

- Make sure the jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any part other than the intended terminal.
- Do not allow the jumper cables to come into contact with the "+" and "-" terminals.
- Do not allow open flame or use matches, cigarette lighters or smoke near the battery.

**■ Battery precautions**

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery.

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.  
Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.

**NOTICE****■ When handling jumper cables**

Be careful that the jumper cables do not become tangled in the cooling fan or any of the belts when connecting or disconnecting them.


## If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P. 92) enters the red zone or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- Steam is coming from under the hood.


### Correction procedures

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.
- 2 If you see steam:  
Carefully lift the hood after the steam subsides.  
If you do not see steam:  
Carefully lift the hood.
- 3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.
  - ① Radiator
  - ② Cooling fansIf a large amount of coolant leaks, immediately contact your Lexus dealer.

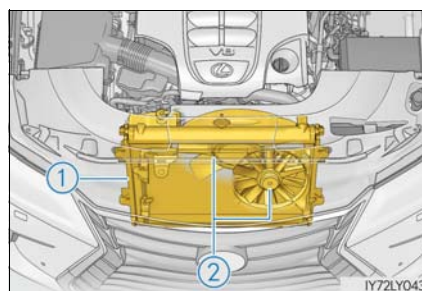


- 4** The coolant level is satisfactory if it is between the “F” and “L” lines on the reservoir.

- ① Reservoir
- ② “F” line
- ③ “L” line
- ④ Radiator cap

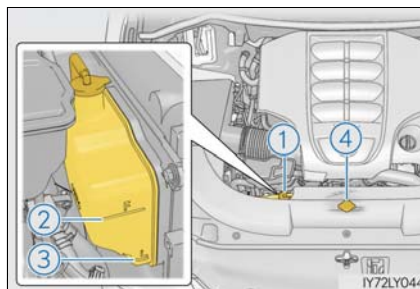

- 5** Add coolant if necessary.

Water can be used in an emergency if coolant is unavailable.

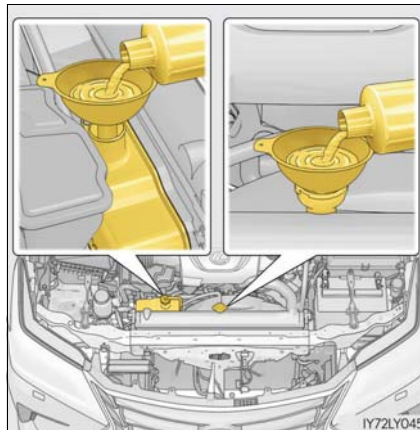

- 6** Start the engine and turn the air conditioning system on to check that the air conditioning condenser cooling fans operate and to check for coolant leaks from the radiator or hoses.

The fans operate when the air conditioning system is turned on immediately after a cold start. Confirm that the fans are operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fans may not operate in freezing temperatures.)

- 7** If the fans are not operating:

Stop the engine immediately and contact your Lexus dealer.

If the fans are operating:

Have the vehicle inspected at the nearest Lexus dealer.

**WARNING****■ When inspecting under the hood of your vehicle**

Observe the following precautions.

Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fans and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.
- Do not loosen the radiator cap or the coolant reservoir cap while the engine and radiator are hot. High temperature steam or coolant could spray out.

**NOTICE****■ When adding engine coolant**

Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

**■ To prevent damage to the cooling system**

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.


## If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt, or snow:

- 1 Stop the engine. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the rear wheels.
- 3 Place wood, stones or some other material under the rear wheels to help provide traction.
- 4 Restart the engine.
- 5 Shift the shift lever to the D or R position and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

### ■ When it is difficult to free the vehicle

Press  to turn off Active TRAC.

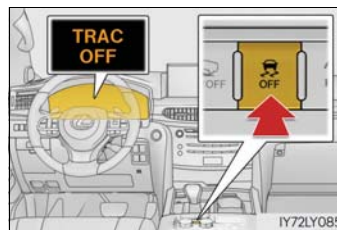

### ■ Extra high mode

→P. 305

**WARNING****■ When attempting to free a stuck vehicle**

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear, to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

**■ When shifting the shift lever**

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

**NOTICE****■ To avoid damaging the transmission and other components**

- Avoid spinning the rear wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.
- When a warning message for the automatic transmission fluid temperature is displayed while attempting to free a stuck vehicle, immediately remove your foot from the accelerator pedal and wait until the warning message disappears. Otherwise, the transmission may become damaged. (→P. 531)



8-1. Specifications

    Maintenance data  
        (fuel, oil level, etc.) ..... 562

    Fuel information..... 570

    Tire information ..... 573

8-2. Customization

    Customizable features ..... 584

8-3. Initialization

    Items to initialize ..... 598

## Maintenance data (fuel, oil level, etc.)

### Dimensions and weights

|                                                  |                  |                                                                      |
|--------------------------------------------------|------------------|----------------------------------------------------------------------|
| Overall length                                   |                  | 200.0 in. (5080 mm)                                                  |
| Overall width                                    |                  | 78.0 in. (1980 mm)                                                   |
| Overall height <sup>*1</sup>                     |                  | 73.4 in. (1865 mm)<br>75.2 in. (1910 mm) <sup>*2</sup>               |
| Wheelbase                                        |                  | 112.2 in. (2850 mm)                                                  |
| Tread                                            | Front            | 64.8 in. (1645 mm) <sup>*3</sup><br>65.0 in. (1650 mm) <sup>*4</sup> |
|                                                  | Rear             | 64.6 in. (1640 mm) <sup>*3</sup><br>65.0 in. (1650 mm) <sup>*4</sup> |
| Vehicle capacity weight<br>(Occupants + luggage) |                  | 1285 lb. (580 kg)                                                    |
| TWR<br>(trailer weight +<br>cargo weight)        | With brake       | 7000 lb. (3175 kg)                                                   |
|                                                  | Without<br>brake | 1000 lb. (454 kg)                                                    |

<sup>\*1</sup>: Unladen vehicles

<sup>\*2</sup>: Vehicles with roof antenna

<sup>\*3</sup>: Vehicles with 20-inch tires


<sup>\*4</sup>: Vehicles with 21-inch tires

## Vehicle identification


### ■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.

This number is stamped on the top left of the instrument panel.

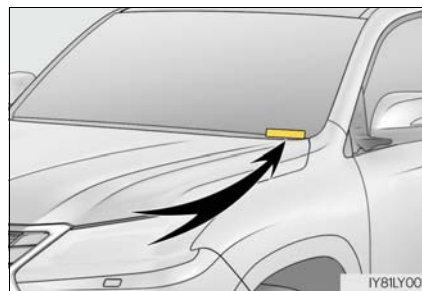


This number is also on the Certification Label.

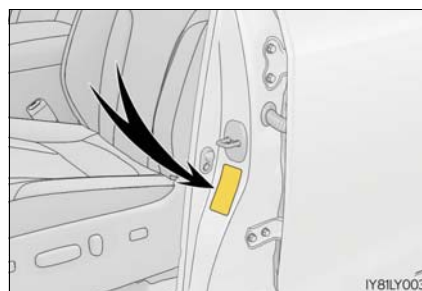

### ■ Engine number

The engine number is stamped on the engine block as shown.

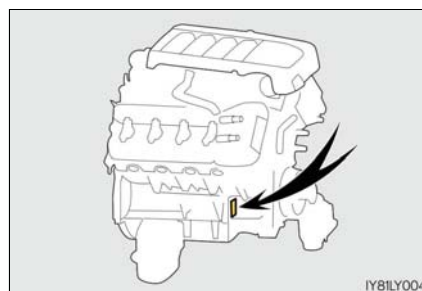

**Engine**

|                    |                                      |
|--------------------|--------------------------------------|
| Model              | 5.7L V8 (3UR-FE)                     |
| Type               | 8-cylinder V type, 4-cycle, gasoline |
| Bore and stroke    | 3.70 × 4.02 in. (94.0 × 102.0 mm)    |
| Displacement       | 345.6 cu.in. (5663 cm <sup>3</sup> ) |
| Valve clearance    | Automatic adjustment                 |
| Drive belt tension |                                      |

**Fuel**

|                                   |                                          |
|-----------------------------------|------------------------------------------|
| Fuel type                         | Unleaded gasoline only                   |
| Octane rating                     | 91 (Research Octane Number 96) or higher |
| Fuel tank capacity<br>(Reference) | 24.5 gal. (93 L, 20.4 Imp.gal.)          |

**Lubrication system**

|                                                              |                              |
|--------------------------------------------------------------|------------------------------|
| Oil capacity<br>(Drain and refill – reference <sup>*</sup> ) |                              |
| With filter                                                  | 7.9 qt. (7.5 L, 6.6 Imp.qt.) |
| Without filter                                               | 7.5 qt. (7.1 L, 6.2 Imp.qt.) |

<sup>\*</sup>: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

### ■ Engine oil selection


"Toyota Genuine Motor Oil" is used in your Lexus vehicle. Use Lexus approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade: ILSAC GF-5 multigrade engine oil

Recommended viscosity: SAE 0W-20

SAE 0W-20 is the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-20 is not available, SAE 5W-20 oil may be used. However, it must be replaced with SAE 0W-20 at the next oil change.

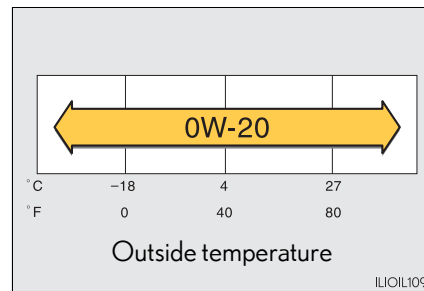

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is added to some oil containers to help you select the oil you should use.



### Cooling system

|                      |                                                                                                                                                                                                                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Capacity (Reference) | 17.1 qt. (16.2 L, 14.3 Imp.qt.)                                                                                                                                                                                                                                                                                  |
| Coolant type         | Use either of the following. <ul style="list-style-type: none"> <li>• "Toyota Super Long Life Coolant"</li> <li>• Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology</li> </ul> Do not use plain water alone. |

### Ignition system

|            |                    |
|------------|--------------------|
| Spark plug |                    |
| Make       | DENSO SK20HR11     |
| Gap        | 0.043 in. (1.1 mm) |

#### NOTICE

#### ■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust gap when tuning engine.

### Electrical system

|                              |                                                                                                                                                                          |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery                      |                                                                                                                                                                          |
| Open voltage at 68°F (20°C): | 12.6 — 12.8 V Fully charged<br>12.2 — 12.4 V Half charged<br>11.8 — 12.0 V Discharged<br>(Voltage is checked 20 minutes after the engine and all lights are turned off.) |
| Charging rates               | 5 A max.                                                                                                                                                                 |

**Differential**

|                        |                                                                   |
|------------------------|-------------------------------------------------------------------|
| Oil capacity           |                                                                   |
| Front                  | 2.01 qt. (1.90 L, 1.67 Imp.qt.)                                   |
| Rear                   | 4.44 qt. (4.20 L, 3.70 Imp.qt.)                                   |
| Oil type and viscosity | Toyota Genuine Differential Gear Oil LT 75W-85 GL-5 or equivalent |

Your Lexus vehicle is filled with “Toyota Genuine Differential Gear Oil” at the factory.

Use Lexus approved “Toyota Genuine Differential Gear Oil” or an equivalent of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

**Automatic transmission**

|                |                                |
|----------------|--------------------------------|
| Fluid capacity | 10.7 qt. (10.1 L, 8.9 Imp.qt.) |
| Fluid type     | Toyota Genuine ATF WS          |

The fluid capacity is the quantity of reference. If replacement is necessary, contact your Lexus dealer.

**NOTICE**

■ **Automatic transmission fluid type**

Using transmission fluid other than “Toyota Genuine ATF WS” may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

**Transfer**

|                           |                                                   |
|---------------------------|---------------------------------------------------|
| Oil capacity              | 1.53 qt. (1.45 L, 1.28 Imp.qt.)                   |
| Oil type*                 | Toyota Genuine Transfer Gear oil LF or equivalent |
| Recommended oil viscosity | SAE 75W                                           |

\*: Your Lexus vehicle is filled with "Toyota Genuine Transfer Gear oil LF" at the factory. Use Lexus approved "Toyota Genuine Transfer Gear oil LF" or an equivalent of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

**Brakes**

|                                 |                                  |
|---------------------------------|----------------------------------|
| Pedal clearance*                | 4.5 in. (114 mm) Min.            |
| Pedal free play                 | 0.04—0.24 in. (1.0—6.0 mm)       |
| Brake pad wear limit            | 0.04 in. (1.0 mm)                |
| Parking brake lining wear limit | 0.04 in. (1.0 mm)                |
| Fluid type                      | SAE J1703 or FMVSS No. 116 DOT 3 |

\*: Minimum pedal clearance when depressed with a force of 110 lbf (490 N, 50 kgf) while the engine is running

**Chassis lubrication**

|                  |            |                                                                                                       |
|------------------|------------|-------------------------------------------------------------------------------------------------------|
| Propeller shafts | Spider     | Lithium base chassis grease, NLGI No.2                                                                |
|                  | Slide yoke | Molybdenum-disulfide lithium base chassis grease, NLGI No.2 or Lithium base chassis grease, NLGI No.2 |

**Steering**

|                           |                                                |
|---------------------------|------------------------------------------------|
| Free play                 | Less than 1.18 in. (30 mm)                     |
| Power steering fluid type | Automatic transmission fluid DEXRON® II or III |

### Suspension

|            |                      |
|------------|----------------------|
| Fluid type | Suspension fluid AHC |
|------------|----------------------|

### Tires and wheels

#### ► 20-inch tires

|                                                                       |                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tire size                                                             | 285/50R20 112V                                                                                                                                                                                                                                                                                     |
| Tire inflation pressure<br>(Recommended cold tire inflation pressure) | Normal driving<br>Front:<br>33 psi (230 kPa, 2.3 kgf/cm <sup>2</sup> or bar)<br>Rear:<br>33 psi (230 kPa, 2.3 kgf/cm <sup>2</sup> or bar)<br>Spare:<br>33 psi (230 kPa, 2.3 kgf/cm <sup>2</sup> or bar)<br>Trailer towing<br>Add 2 psi (10 kPa, 0.1 kgf/cm <sup>2</sup> or bar) to the rear tires. |
| Wheel size                                                            | 20 × 8 1/2J                                                                                                                                                                                                                                                                                        |
| Wheel nut torque                                                      | 97 ft•lbf (131 N•m, 13.4 kgf•m)                                                                                                                                                                                                                                                                    |

#### ► 21-inch tires

|                                                                       |                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tire size                                                             | 275/50R21 113V XL                                                                                                                                                                                                                                                                                  |
| Tire inflation pressure<br>(Recommended cold tire inflation pressure) | Normal driving<br>Front:<br>33 psi (230 kPa, 2.3 kgf/cm <sup>2</sup> or bar)<br>Rear:<br>33 psi (230 kPa, 2.3 kgf/cm <sup>2</sup> or bar)<br>Spare:<br>33 psi (230 kPa, 2.3 kgf/cm <sup>2</sup> or bar)<br>Trailer towing<br>Add 6 psi (40 kPa, 0.4 kgf/cm <sup>2</sup> or bar) to the rear tires. |
| Wheel size                                                            | 21 X 8 1/2J                                                                                                                                                                                                                                                                                        |
| Wheel nut torque                                                      | 97 ft•lbf (131 N•m, 13.4 kgf•m)                                                                                                                                                                                                                                                                    |

## Fuel information

You must only use unleaded gasoline.

Select premium unleaded gasoline with an octane rating of 91 (Research Octane Number 96) or higher required for optimum engine performance and fuel economy. If the octane rating is less than 91, damage to the engine may occur and may void the vehicle warranty.

At minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A..

### ■ Gasoline quality

In very few cases, driveability problems may be caused by the brand of gasoline you are using. If driveability problems persist, try changing the brand of gasoline. If this does not correct the problem, consult your Lexus dealer.

### ■ Recommendation of the use of gasoline containing detergent additives

- Lexus recommends the use of gasoline that contains detergent additives to avoid the build-up of engine deposits.
- All gasoline sold in the U.S.A. contains minimum detergent additives to clean and/or keep clean intake systems, per EPA's lowest additives concentration program.
- Lexus strongly recommends the use of Top Tier Detergent Gasoline. For more information on Top Tier Detergent Gasoline and a list of marketers, please go to the official website [www.toptiergas.com](http://www.toptiergas.com).


### ■ Recommendation of the use of low emissions gasoline

Gasolines containing oxygenates such as ethers and ethanol, as well as reformulated gasolines, are available in some cities. These fuels are typically acceptable for use, providing they meet other fuel requirements.

Lexus recommends these fuels, since the formulations allow for reduced vehicle emissions.

**■ Non-recommendation of the use of blended gasoline**

- Use only gasoline containing up to 15% ethanol.  
DO NOT use any flex-fuel or gasoline that could contain more than 15% ethanol, including from any pump labeled E30, E50, E85 (which are only some examples of fuel containing more than 15% ethanol).

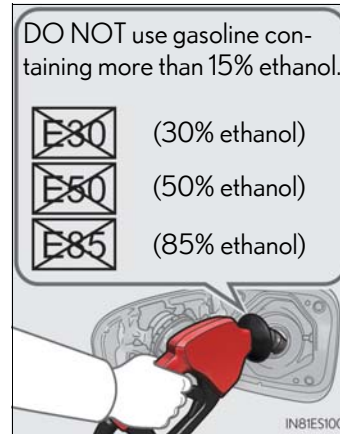

- If you use gasohol in your vehicle, be sure that it has an octane rating no lower than 91.
- Lexus does not recommend the use of gasoline containing methanol.

**■ Non-recommendation of the use of gasoline containing MMT**

Some gasoline contains an octane enhancing additive called MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

Lexus does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected.

The malfunction indicator lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

**■ If your engine knocks**

- Consult your Lexus dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.



## NOTICE

■ **Notice on fuel quality**

- Do not use improper fuels. If improper fuels are used the engine will be damaged.
- Do not use leaded gasoline.  
Leaded gasoline can cause damage to your vehicle's three-way catalytic converters causing the emission control system to malfunction.
- Do not use gasohol other than the type previously stated.  
Other gasohol may cause fuel system damage or vehicle performance problems.
- Using unleaded gasoline with an octane number or rating lower than the level previously stated may cause persistent heavy knocking.  
At worst, this may lead to engine damage and will void the vehicle warranty.

■ **Fuel-related poor driveability**


If poor driveability (poor hot starting, vaporization, engine knocking, etc.) is encountered after using a different type of fuel, discontinue the use of that type of fuel.

■ **When refueling with gasohol**

Take care not to spill gasohol. It can damage your vehicle's paint.

## Tire information


### Typical tire symbols

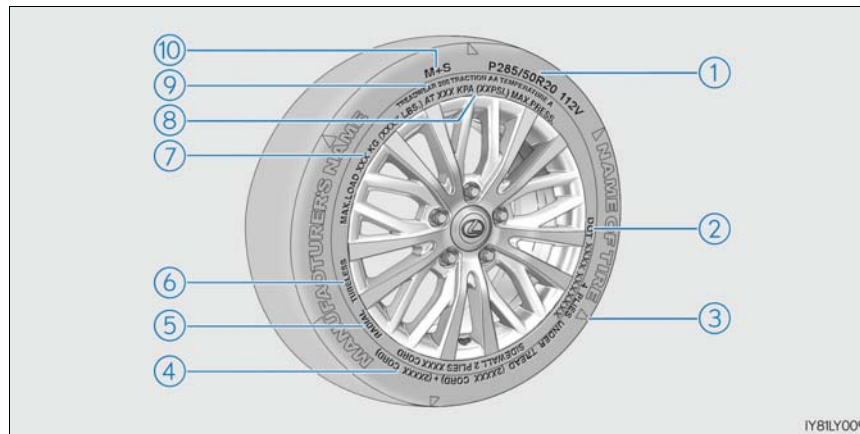


- ① Tire size (→P. 575)
- ② DOT and Tire Identification Number (TIN) (→P. 574)
- ③ Location of treadwear indicators (→P. 488)
- ④ Tire ply composition and materials  
Plies are layers of rubber-coated parallel cords. Cords are the strands which form the plies in a tire.
- ⑤ Radial tires or bias-ply tires  
A radial tire has "RADIAL" on the sidewall. A tire not marked "RADIAL" is a bias-ply tire.
- ⑥ TUBELESS or TUBE TYPE  
A tubeless tire does not have a tube and air is directly put into the tire. A tube type tire has a tube inside the tire and the tube maintains the air pressure.
- ⑦ Load limit at maximum cold tire inflation pressure (→P. 579)
- ⑧ Maximum cold tire inflation pressure (→P. 579)  
This means the pressure to which a tire may be inflated.
- ⑨ Uniform tire quality grading  
For details, see "Uniform Tire Quality Grading" that follows.
- ⑩ Summer tires or all season tires (→P. 492)  
An all season tire has "M+S" on the sidewall. A tire not marked "M+S" is a summer tire.

### Typical DOT and Tire Identification Number (TIN)

#### ► Type A

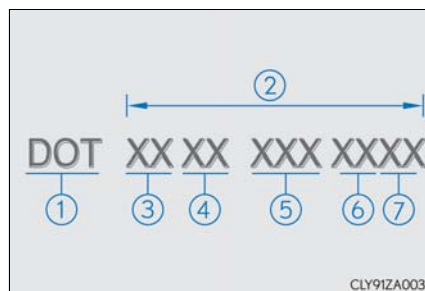

#### ► Type B

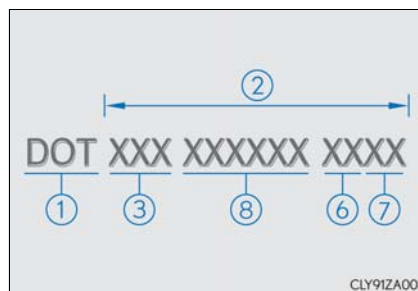

- ① DOT symbol\*
- ② Tire Identification Number (TIN)
- ③ Tire manufacturer's identification mark
- ④ Tire size code
- ⑤ Manufacturer's optional tire type code (3 or 4 letters)
- ⑥ Manufacturing week
- ⑦ Manufacturing year
- ⑧ Manufacturer's code

\*: The DOT symbol certifies that the tire conforms to applicable Federal Motor Vehicle Safety Standards.

## Tire size

### ■ Typical tire size information

The illustration indicates typical tire size.

- ① Tire use (P = Passenger car, T = Temporary use)
- ② Section width (millimeters)
- ③ Aspect ratio (tire height to section width)
- ④ Tire construction code (R = Radial, D = Diagonal)
- ⑤ Wheel diameter (inches)
- ⑥ Load index (2 digits or 3 digits)
- ⑦ Speed symbol (alphabet with one letter)




### ■ Tire dimensions

- ① Section width
- ② Tire height
- ③ Wheel diameter



**Tire section names**

- ① Bead
- ② Sidewall
- ③ Shoulder
- ④ Tread
- ⑤ Belt
- ⑥ Inner liner
- ⑦ Reinforcing rubber
- ⑧ Carcass
- ⑨ Rim lines
- ⑩ Bead wires
- ⑪ Chafer

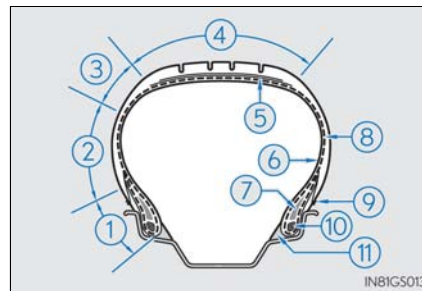

### Uniform Tire Quality Grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation.

It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

#### ■ DOT quality grades

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example: Treadwear 200 Traction AA Temperature A

#### ■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and a half (1 - 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use. Performance may differ significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

#### ■ Traction AA, A, B, C

The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete.

A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

**■ Temperature A, B, C**

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

Grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades of a tire assume that it is properly inflated and not overloaded.

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

### Glossary of tire terminology

| Tire related term              | Meaning                                                                                                                                                                                                                                                                                                |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cold tire inflation pressure   | Tire pressure when the vehicle has been parked for three hours or more, or has not been driven more than 1 mile or 1.5 km under that condition                                                                                                                                                         |
| Maximum inflation pressure     | The maximum cold inflated pressure to which a tire may be inflated, shown on the sidewall of the tire                                                                                                                                                                                                  |
| Recommended inflation pressure | Cold tire inflation pressure recommended by a manufacturer                                                                                                                                                                                                                                             |
| Accessory weight               | The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not)            |
| Curb weight                    | The weight of a motor vehicle with standard equipment, including the maximum capacity of fuel, oil and coolant, and if so equipped, air conditioning and additional weight optional engine                                                                                                             |
| Maximum loaded vehicle weight  | The sum of:<br>(a) Curb weight<br>(b) Accessory weight<br>(c) Vehicle capacity weight<br>(d) Production options weight                                                                                                                                                                                 |
| Normal occupant weight         | 150 lb. (68 kg) times the number of occupants specified in the second column of Table 1* that follows                                                                                                                                                                                                  |
| Occupant distribution          | Distribution of occupants in a vehicle as specified in the third column of Table 1* below                                                                                                                                                                                                              |
| Production options weight      | The combined weight of installed regular production options weighing over 5 lb. (2.3 kg) in excess of the standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim |
| Rim                            | A metal support for a tire or a tire and tube assembly upon which the tire beads are seated                                                                                                                                                                                                            |

| Tire related term                                | Meaning                                                                                                                                                                                                                    |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rim diameter<br>(Wheel diameter)                 | Nominal diameter of the bead seat                                                                                                                                                                                          |
| Rim size designation                             | Rim diameter and width                                                                                                                                                                                                     |
| Rim type designation                             | The industry manufacturer's designation for a rim by style or code                                                                                                                                                         |
| Rim width                                        | Nominal distance between rim flanges                                                                                                                                                                                       |
| Vehicle capacity weight<br>(Total load capacity) | The rated cargo and luggage load plus 150 lb. (68 kg) times the vehicle's designated seating capacity                                                                                                                      |
| Vehicle maximum load on the tire                 | The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two                                                                         |
| Vehicle normal load on the tire                  | The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1* below), and dividing by two |
| Weather side                                     | The surface area of the rim not covered by the inflated tire                                                                                                                                                               |
| Bead                                             | The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim                                                                                                     |
| Bead separation                                  | A breakdown of the bond between components in the bead                                                                                                                                                                     |
| Bias ply tire                                    | A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread                                                            |
| Carcass                                          | The tire structure, except tread and sidewall rubber which, when inflated, bears the load                                                                                                                                  |
| Chunking                                         | The breaking away of pieces of the tread or sidewall                                                                                                                                                                       |
| Cord                                             | The strands forming the plies in the tire                                                                                                                                                                                  |
| Cord separation                                  | The parting of cords from adjacent rubber compounds                                                                                                                                                                        |
| Cracking                                         | Any parting within the tread, sidewall, or innerliner of the tire extending to cord material                                                                                                                               |

| Tire related term                      | Meaning                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CT                                     | A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire                                                                                    |
| Extra load tire                        | A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire                                                                                                                                                                                                                                             |
| Groove                                 | The space between two adjacent tread ribs                                                                                                                                                                                                                                                                                                                     |
| Innerliner                             | The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire                                                                                                                                                                                                                                                 |
| Innerliner separation                  | The parting of the innerliner from cord material in the carcass                                                                                                                                                                                                                                                                                               |
| Intended outboard sidewall             | (a) The sidewall that contains a whitewall, bears white lettering, or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire, or<br>(b) The outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle |
| Light truck (LT) tire                  | A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles                                                                                                                                                                                                                                  |
| Load rating                            | The maximum load that a tire is rated to carry for a given inflation pressure                                                                                                                                                                                                                                                                                 |
| Maximum load rating                    | The load rating for a tire at the maximum permissible inflation pressure for that tire                                                                                                                                                                                                                                                                        |
| Maximum permissible inflation pressure | The maximum cold inflation pressure to which a tire may be inflated                                                                                                                                                                                                                                                                                           |
| Measuring rim                          | The rim on which a tire is fitted for physical dimension requirements                                                                                                                                                                                                                                                                                         |
| Open splice                            | Any parting at any junction of tread, sidewall, or innerliner that extends to cord material                                                                                                                                                                                                                                                                   |
| Outer diameter                         | The overall diameter of an inflated new tire                                                                                                                                                                                                                                                                                                                  |

| Tire related term   | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Overall width       | The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs                                                                                                                                                                                                                                                                                                        |
| Passenger car tire  | A tire intended for use on passenger cars, multipurpose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 lb. or less.                                                                                                                                                                                                                                                                                                         |
| Ply                 | A layer of rubber-coated parallel cords                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Ply separation      | A parting of rubber compound between adjacent plies                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Pneumatic tire      | A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load                                                                                                                                                                                                                                                             |
| Radial ply tire     | A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread                                                                                                                                                                                                                                                                                                                                  |
| Reinforced tire     | A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire                                                                                                                                                                                                                                                                                                                                                     |
| Section width       | The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands                                                                                                                                                                                                                                                                                                                 |
| Sidewall            | That portion of a tire between the tread and bead                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Sidewall separation | The parting of the rubber compound from the cord material in the sidewall                                                                                                                                                                                                                                                                                                                                                                                             |
| Snow tire           | A tire that attains a traction index equal to or greater than 110, compared to the ASTM E-1136 Standard Reference Test Tire, when using the snow traction test as described in ASTM F-1805-00, Standard Test Method for Single Wheel Driving Traction in a Straight Line on Snow-and Ice-Covered Surfaces, and which is marked with an Alpine Symbol (  ) on at least one sidewall |

| Tire related term          | Meaning                                                                                                               |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Test rim                   | The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire        |
| Tread                      | That portion of a tire that comes into contact with the road                                                          |
| Tread rib                  | A tread section running circumferentially around a tire                                                               |
| Tread separation           | Pulling away of the tread from the tire carcass                                                                       |
| Treadwear indicators (TWI) | The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread |
| Wheel-holding fixture      | The fixture used to hold the wheel and tire assembly securely during testing                                          |

\*: Table 1— Occupant loading and distribution for vehicle normal load for various designated seating capacities

| Designated seating capacity, Number of occupants | Vehicle normal load, Number of occupants | Occupant distribution in a normally loaded vehicle              |
|--------------------------------------------------|------------------------------------------|-----------------------------------------------------------------|
| 2 through 4                                      | 2                                        | 2 in front                                                      |
| 5 through 10                                     | 3                                        | 2 in front, 1 in second seat                                    |
| 11 through 15                                    | 5                                        | 2 in front, 1 in second seat, 1 in third seat, 1 in fourth seat |
| 16 through 20                                    | 7                                        | 2 in front, 2 in second seat, 2 in third seat, 1 in fourth seat |

## Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed by using the multi-information display, by using the Remote Touch screen or at your Lexus dealer.

### Customizing vehicle features

#### ■ Changing by using the Remote Touch screen

- 1 Press the "MENU" button on the Remote Touch.
- 2 Select "Setup" on the "Menu" screen and select "Vehicle".

Various setting can be changed. Refer to the list of settings that can be changed for details.

#### ■ Changing by using the multi-information display

- 1 Press  or  of the meter control switches, select .
- 2 Press  or  of the meter control switches, select the item or the desired setting, and then press .

To go back to the previous screen, press .

**Customizable features**

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

- ① Settings that can be changed using the Remote Touch screen
- ② Settings that can be changed using the multi-information display
- ③ Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – = Not available

■ **Smart access system with push-button start (→P. 138)**

| Function                                   | Default setting | Customized setting | ① | ② | ③ |
|--------------------------------------------|-----------------|--------------------|---|---|---|
| Smart access system with push-button start | On              | Off                | ○ | – | ○ |
| Smart door unlocking                       | Driver's door   | All the doors      | ○ | – | ○ |

## ■ Wireless remote control (→P. 116)

| Function                                                                                                                                                                                                | Default setting                                                     | Customized setting                                                                | ① | ② | ③ |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|-----------------------------------------------------------------------------------|---|---|---|
| Wireless remote control                                                                                                                                                                                 | On                                                                  | Off                                                                               | – | – | ○ |
| Unlocking operation                                                                                                                                                                                     | Driver's door unlocked in one step, all doors unlocked in two steps | All doors unlocked in one step                                                    | ○ | – | ○ |
| Opening/closing of the power back door using the  HOLD switch of the wireless remote control                         | Open: Press for 1 second* <sup>1</sup><br>Close: Press for 1 second | Off                                                                               | – | – | ○ |
|                                                                                                                                                                                                         |                                                                     | Open: Press for 1 second with the back door unlocked<br>Close: Press for 1 second |   |   |   |
|                                                                                                                                                                                                         |                                                                     | Open: One short press with the back door unlocked<br>Close: One short press       |   |   |   |
|                                                                                                                                                                                                         |                                                                     | Open: Press twice with the back door unlocked<br>Close: Press twice               |   |   |   |
|                                                                                                                                                                                                         |                                                                     | Open: Press twice* <sup>1</sup><br>Close: Press twice                             |   |   |   |
| Door unlocked when the power back door is opened using the  HOLD switch of the wireless remote control* <sup>2</sup> | All the doors                                                       | Back door                                                                         | – | – | ○ |
| Alarm (panic mode)                                                                                                                                                                                      | On                                                                  | Off                                                                               | – | – | ○ |

\*<sup>1</sup>: This setting enables opening of the power back door when it is locked or unlocked.

\*<sup>2</sup>: This function is available only when a customized setting that enables opening of the power back door when it is either locked or unlocked is selected. (See\*<sup>1</sup> above.)

■ Smart access system with push-button start (→P. 138) and wireless remote control (→P. 116)

| Function                                                                                                 | Default setting | Customized setting | ① | ② | ③ |
|----------------------------------------------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Operation signal (Emergency flashers)                                                                    | On              | Off                | O | – | O |
| Adjust the volume of confirmation buzzer sounds when the vehicle is locked or unlocked                   | 5               | Off                | O | – | O |
|                                                                                                          |                 | 1 to 7             |   |   |   |
| Open door warning function (when locking the vehicle)                                                    | On              | Off                | – | – | O |
| Time elapsed before automatic door lock function is activated if door is not opened after being unlocked | 60 seconds      | Off                | O | – | O |
|                                                                                                          |                 | 30 seconds         |   |   |   |
|                                                                                                          |                 | 120 seconds        |   |   |   |

■ Door lock (→P. 121)

| Function                         | Default setting                                                     | Customized setting                                        | ① | ② | ③ |
|----------------------------------|---------------------------------------------------------------------|-----------------------------------------------------------|---|---|---|
| Unlocking using a mechanical key | Driver's door unlocked in one step, all doors unlocked in two steps | All doors unlocked in one step                            | – | – | O |
| Automatic door lock              | Shifting the shift lever to position other than P                   | Off                                                       | O | – | O |
|                                  |                                                                     | Vehicle speed is approximately 12 mph (20 km/h) or higher |   |   |   |
| Automatic door unlock            | Shifting the shift lever to P                                       | Off                                                       | O | – | O |
|                                  |                                                                     | Driver's door is opened                                   |   |   |   |

## ■ Power back door (→P. 128)

| Function                                        | Default setting | Customized setting | ① | ② | ③ |
|-------------------------------------------------|-----------------|--------------------|---|---|---|
| Power back door switch operation                | Push and hold   | One short push     | – | – | ○ |
| Operation signal                                | Off*            | On                 | – | – | ○ |
| Back door opener switch automatic open function | On              | Off                | – | – | ○ |

\*: The operation start buzzer sounds.

## ■ Power windows (→P. 171)

| Function                                                | Default setting | Customized setting | ① | ② | ③ |
|---------------------------------------------------------|-----------------|--------------------|---|---|---|
| Mechanical key linked operation (close)*                | Off             | On                 | – | – | ○ |
| Mechanical key linked operation (open)*                 | Off             | On                 | – | – | ○ |
| Wireless remote control linked operation (open)*        | Off             | On                 | – | – | ○ |
| Power windows open warning buzzer                       | On              | Off                | – | – | ○ |
| Buzzer sounds if operated using wireless remote control | On              | Off                | – | – | ○ |

\*: The settings of the moon roof are changed in conjunction with the settings of the power windows.

## ■ Moon roof (→P. 174)

| Function                                                            | Default setting | Customized setting | ① | ② | ③ |
|---------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Mechanical key linked operation (open)*                             | Off             | On                 | – | – | ○ |
| Mechanical key linked operation (close)*                            | Off             | On                 | – | – | ○ |
| Linked operation of components when mechanical key is used          | Slide only      | Tilt only          | – | – | ○ |
| Wireless remote control linked operation (open)*                    | Off             | On                 | – | – | ○ |
| Linked operation of components when wireless remote control is used | Slide only      | Tilt only          | – | – | ○ |
| Moon roof open warning buzzer                                       | On              | Off                | – | – | ○ |

\*: The settings of the power windows are changed in conjunction with the settings of the moon roof.

## ■ Automatic light control system (→P. 227)

| Function                                                                     | Default setting | Customized setting | ① | ② | ③ |
|------------------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Light sensor sensitivity                                                     | Standard        | -2 to 2            | ○ | – | ○ |
| Daytime running light system                                                 | On              | Off*               | ○ | – | ○ |
| Time elapsed before headlights automatically turn off after doors are closed | 30 seconds      | Off                | ○ | – | ○ |
|                                                                              |                 | 60 seconds         |   |   |   |
|                                                                              |                 | 90 seconds         |   |   |   |
| Welcome lighting illumination control                                        | On              | Off                | – | – | ○ |

\*: Vehicles sold outside Canada

## ■ Illumination (→P. 423)

| Function                                                                                                                         | Default setting | Customized setting | ① | ② | ③ |
|----------------------------------------------------------------------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Interior lights illumination control                                                                                             | On              | Off                | – | – | ○ |
| Time period before the interior lights turn off                                                                                  | 15 seconds      | Off                | ○ | – | ○ |
|                                                                                                                                  |                 | 7.5 seconds        |   |   |   |
|                                                                                                                                  |                 | 30 seconds         |   |   |   |
| Operation after the engine switch is turned off                                                                                  | On              | Off                | – | – | ○ |
| Operation when the doors are unlocked                                                                                            | On              | Off                | – | – | ○ |
| Operation when you approach the vehicle with the electronic key on your person (when the interior light switch is door position) | On              | Off                | – | – | ○ |
| Shift lever light                                                                                                                | On              | Off                | – | – | ○ |
| Footwell lights                                                                                                                  | On              | Off                | – | – | ○ |
| Door trim lights and footwell lights illumination control                                                                        | On              | Off                | – | – | ○ |
| Door trim lights                                                                                                                 | On              | Off                | – | – | ○ |
| Operation of the outer foot lights when you approach the vehicle with the electronic key on your person                          | On              | Off                | – | – | ○ |
| Operation of the outer foot lights when the doors are unlocked with the power door lock switch                                   | On              | Off                | – | – | ○ |
| Operation of the running board lights when you approach the vehicle with the electronic key on your person                       | On              | Off                | – | – | ○ |
| Operation of the running board lights the doors are unlocked with the power door lock switch                                     | On              | Off                | – | – | ○ |

| Function                                                                           | Default setting | Customized setting | ① | ② | ③ |
|------------------------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Operation of the running board lights when a door is opened                        | On              | Off                | – | – | ○ |
| Sensitivity of the ambient light sensor used for dimming the meter lights etc.     | Standard        | -2 to 2            | – | – | ○ |
| Sensitivity of the ambient light sensor used for brightening the meter lights etc. | Standard        | -2 to 2            | – | – | ○ |

#### ■ Intuitive parking assist (→P. 293)

| Function                                                     | Default setting       | Customized setting | ① | ② | ③ |
|--------------------------------------------------------------|-----------------------|--------------------|---|---|---|
| Detection distance of the front center sensor                | Far                   | Near               | ○ | – | ○ |
| Detection distance of the rear center sensor                 | Far                   | Near               | ○ | – | ○ |
| Alert Volume (alert volume can be adjusted)                  | 3                     | 1 to 5             | ○ | – | ○ |
| Display setting (when intuitive parking assist is operating) | All sensors displayed | Display off        | ○ | – | ○ |

#### ■ Automatic air conditioning system (→P. 405)

| Function                       | Default setting | Customized setting | ① | ② | ③ |
|--------------------------------|-----------------|--------------------|---|---|---|
| Exhaust gas sensor sensitivity | Standard        | -3 to 3            | ○ | – | ○ |
| A/C Auto switch operation      | Auto            | Manual             | ○ | – | ○ |

## ■ Rear window wiper and washer (→P. 241)

| Function                                                         | Default setting | Customized setting | ① | ② | ③ |
|------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Drip prevention function                                         | On              | Off                | – | – | ○ |
| Rear window wiper operation linked with washer                   | On              | Off                | – | – | ○ |
| Linked operation when the shift lever in R position              | On              | Off                | – | – | ○ |
| Times of the linked operation when the shift lever in R position | Once            | Continuously       | – | – | ○ |

## ■ Driving position memory (→P. 157)

| Function                                                                      | Default setting | Customized setting | ① | ② | ③ |
|-------------------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| Driver's seat movement when exiting the vehicle                               | Standard        | Off                | ○ | – | ○ |
|                                                                               |                 | Partial            |   |   |   |
| Selection the door linking driving position memory with door unlock operation | Driver's door   | All doors          | – | – | ○ |

## ■ Outside rear view mirrors (→P. 168)

| Function                              | Default setting                          | Customized setting                | ① | ② | ③ |
|---------------------------------------|------------------------------------------|-----------------------------------|---|---|---|
| Automatic folding/extending operation | Linked to locking/unlocking of the doors | Off                               | – | – | ○ |
|                                       |                                          | Linked to engine switch operation |   |   |   |

### ■ Seat heaters and ventilators\* (→P. 419)

| Function                                                                                                                                       | Default setting    | Customized setting              | ① | ② | ③ |
|------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|---------------------------------|---|---|---|
| Adjustment of the front seat heater temperature or the ventilator fan speed during automatic operation (individual seat adjustment available)  | Level 3 (standard) | Level 1 (low) to level 5 (high) | ○ | – | ○ |
| Adjustment of the second seat heater temperature or the ventilator fan speed during automatic operation (individual seat adjustment available) | Level 3 (standard) | Level 1 (low) to level 5 (high) | ○ | – | ○ |

\*: If equipped

### ■ Heated steering wheel\* (→P. 419)

| Function                                              | Default setting    | Customized setting                | ① | ② | ③ |
|-------------------------------------------------------|--------------------|-----------------------------------|---|---|---|
| Automatic steering wheel heating                      | On                 | Off                               | ○ | – | ○ |
| Time until automatic steering wheel heating turns off | Level 3 (standard) | Level 1 (short) to level 5 (long) | ○ | – | ○ |

\*: If equipped

## ■ Drive mode customization (→P. 290)

| Function                          | Default setting | Customized setting | ① | ② | ③ |
|-----------------------------------|-----------------|--------------------|---|---|---|
| Powertrain                        | Normal          | Eco                | ○ | - | - |
|                                   |                 | Power              |   |   |   |
| Chassis                           | Normal          | Sport              | ○ | - | - |
|                                   |                 | Comfort            |   |   |   |
| Automatic air conditioning system | Normal          | Eco                | ○ | - | - |

## ■ Turn signal lever (→P. 223)

| Function                                                                                                                                      | Default setting | Customized setting | ① | ② | ③ |
|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------|--------------------|---|---|---|
| The number of times the turn signal lights flash automatically when the turn signal lever is moved to the first position during a lane change | 3               | 4                  | - | - | ○ |
|                                                                                                                                               |                 | 5                  |   |   |   |
|                                                                                                                                               |                 | 6                  |   |   |   |
|                                                                                                                                               |                 | 7                  |   |   |   |
|                                                                                                                                               |                 | Off                |   |   |   |

## ■ Multi-information display (→P. 96)

| Function                                                                                                                                                             | Default setting                    | Customized setting      | ① | ② | ③ |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|-------------------------|---|---|---|
| Language                                                                                                                                                             | English                            | French                  | ○ | ○ | - |
|                                                                                                                                                                      |                                    | Spanish                 |   |   |   |
| Units*1                                                                                                                                                              | miles (MPG US)                     | miles (MPG Imperial)    | ○ | ○ | - |
|                                                                                                                                                                      |                                    | km (L/100 km)           |   |   |   |
|                                                                                                                                                                      |                                    | km (km/L)               |   |   |   |
| Eco Driving Indicator Light                                                                                                                                          | On                                 | Off                     | - | ○ | - |
|  switch settings                                                                    | Drive information 1                | Desired status screen*2 | - | ○ | - |
| Drive information screen displayed on the first screen of  (Drive information 1)  | Current fuel consumption           | *3                      | - | ○ | - |
|                                                                                                                                                                      | Average fuel economy (after reset) |                         |   |   |   |
| Drive information screen displayed on the second screen of  (Drive information 2) | Distance (range)                   | *3                      | - | ○ | - |
|                                                                                                                                                                      | Average speed (after reset)        |                         |   |   |   |
| Clock                                                                                                                                                                | 12-hour display                    | 24-hour display         | - | ○ | - |
| Pop-up display                                                                                                                                                       | On                                 | Off                     | - | ○ | - |
| Accent color                                                                                                                                                         | Color 1                            | Color 2                 | ○ | ○ | - |

\*1: The default setting varies according to countries.

\*2: Some status screens cannot be registered (indicated on the multi-information display)

\*3: 2 of the following items: current fuel consumption, average fuel economy (after reset), average fuel economy (after refuel), average fuel economy (after start), average vehicle speed (after reset), average vehicle speed (after start), distance (driving range), distance (after start), elapsed time (after reset), elapsed time (after start), blank

### ■ LDA (Lane Departure Alert)\* (→P. 267)

| Function                         | Default setting                                                                                           | Customized setting                                                                             | ① | ② | ③ |
|----------------------------------|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---|---|---|
| Alert method                     | <br>(Steering vibration) | <br>(Buzzer) | – | ○ | – |
| Alert sensitivity                | Standard                                                                                                  | High                                                                                           | – | ○ | – |
| Vehicle sway warning             | On                                                                                                        | Off                                                                                            | – | ○ | – |
| Vehicle sway warning sensitivity | Standard                                                                                                  | Low                                                                                            | – | ○ | – |
|                                  |                                                                                                           | High                                                                                           |   |   |   |

\*: If equipped

### ■ BSM (Blind Spot Monitor) (→P. 369)

| Function                                                             | Default setting | Customized setting      | ① | ② | ③ |
|----------------------------------------------------------------------|-----------------|-------------------------|---|---|---|
| BSM (Blind Spot Monitor)                                             | On              | Off                     | – | ○ | – |
| RCTA (Rear Cross Traffic Alert function)                             | On              | Off                     | – | ○ | – |
| Outside rear view mirror indicator brightness                        | Bright          | Dim                     | ○ | – | ○ |
| Alert timing for presence of approaching vehicle (BSM function only) | Intermediate    | Early                   | ○ | – | ○ |
|                                                                      |                 | Late                    |   |   |   |
|                                                                      |                 | Only when in blind spot |   |   |   |
| RCTA buzzer volume                                                   | Level 2         | Level 1                 | ○ | – | ○ |
|                                                                      |                 | Level 3                 |   |   |   |

■ **HUD (Head-up Display)\* (→P. 105)**

| Function                                     | Default setting | Customized setting | ① | ② | ③ |
|----------------------------------------------|-----------------|--------------------|---|---|---|
| Driving support display (Navigation system*) | On              | Off                | – | ○ | – |
| Driving support display (Driving assist*)    | On              | Off                | – | ○ | – |
| Driving support display (compass*)           | On              | Off                | – | ○ | – |
| Driving support display (audio*)             | On              | Off                | – | ○ | – |

\*: If equipped

■ **Vehicle customization**

- When smart access system with push-button start is turned off, unlock door cannot be selected.
- When doors are not opened after unlocking and are then automatically re-locked, a signal will be given if Operation signal (Emergency flashers) or Operation signal (Buzzer) are set to on.

■ **When setting using the multi-information display**

When using the vehicle switches to set an item that can also be set using the touch screen, the item displayed on the Remote Touch will not change immediately.

If the engine switch is first turned to off, the screen display will change once the engine switch is turned to IGNITION ON mode again.

■ **When customizing using the Remote Touch**

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent battery discharge, leave the engine running while customizing the features.

**WARNING**■ **During customization**

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

**NOTICE**■ **During customization**

To prevent battery discharge, ensure that the engine is running while customizing features.

## Items to initialize

The following item must be initialized for normal system operation such cases as the battery being reconnected, or maintenance being performed on the vehicle:

| Item                                                     | When to initialize                                                                                                                                                                  | Reference |
|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Message indicating maintenance is required (U.S.A. only) | After the maintenance is performed                                                                                                                                                  | P. 467    |
| Power back door                                          | <ul style="list-style-type: none"> <li>After reconnecting or changing the battery with power back door opened</li> <li>After changing a fuse with power back door opened</li> </ul> | P. 128    |
| Tire pressure warning system                             | <ul style="list-style-type: none"> <li>When the set tire pressure has been changed before towing.</li> <li>When rotating the tires in above situation.</li> </ul>                   | P. 488    |
| Multi-terrain Monitor                                    | After reconnecting or changing the battery                                                                                                                                          | P. 367    |
| Engine oil maintenance data *                            | After the maintenance is performed                                                                                                                                                  | P. 477    |

\*: If equipped

|                                                                    |     |
|--------------------------------------------------------------------|-----|
| Reporting safety defects<br>for U.S. owners.....                   | 600 |
| Seat belt instructions<br>for Canadian owners<br>(in French).....  | 601 |
| SRS airbag instructions<br>for Canadian owners<br>(in French)..... | 603 |

## Reporting safety defects for U.S. owners

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the Lexus Division of Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-800-25-LEXUS).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Lexus Division of Toyota Motor Sales, U.S.A., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Ave, S.E., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## Seat belt instructions for Canadian owners (in French)

The following is a French explanation of seat belt instructions extracted from the seat belt section in this manual.

See the seat belt section for more detailed seat belt instructions in English.

### Utilisation adéquate des ceintures de sécurité

- Tirez sur la ceinture épaulière jusqu'à ce qu'elle recouvre entièrement l'épaule; elle ne doit cependant pas toucher le cou ni glisser de l'épaule.
- Placez la ceinture abdominale le plus bas possible sur les hanches.
- Réglez la position du dossier. Tenez-vous assis bien au fond du siège, le dos droit.
- Ne vrillez pas la ceinture de sécurité.



## Entretien et soin

### ■ Ceintures de sécurité

Avec un chiffon ou une éponge, nettoyez à l'aide d'un savon doux et de l'eau tiède. Vérifiez aussi les ceintures régulièrement pour vous assurer qu'elles ne présentent pas d'usure excessive, d'effilochage ou de coupures.

### ⚠ AVERTISSEMENT

#### ■ Lorsque vous utilisez la ceinture du siège central de la troisième rangée de sièges

N'utilisez pas la ceinture du siège central de la troisième rangée de sièges si l'une des boucles est détachée. Attacher une seule boucle pourrait occasionner des blessures graves, voire mortelles, en cas de freinage ou de dérapage brusques, ou d'accident.




#### ■ Dommages et usure de la ceinture de sécurité

Vérifiez périodiquement le système de ceintures de sécurité. Vérifiez qu'il n'y a pas de coupures, d'effilochures ni de pièces desserrées. N'utilisez pas une ceinture de sécurité endommagée avant qu'elle ne soit remplacée. Une ceinture de sécurité endommagée ne peut pas protéger les occupants contre des blessures graves, voire mortelles.

## SRS airbag instructions for Canadian owners (in French)

The following is a French explanation of SRS airbag instructions extracted from the SRS airbag section in this manual.

See the SRS airbag section for more detailed SRS airbag instructions in English.

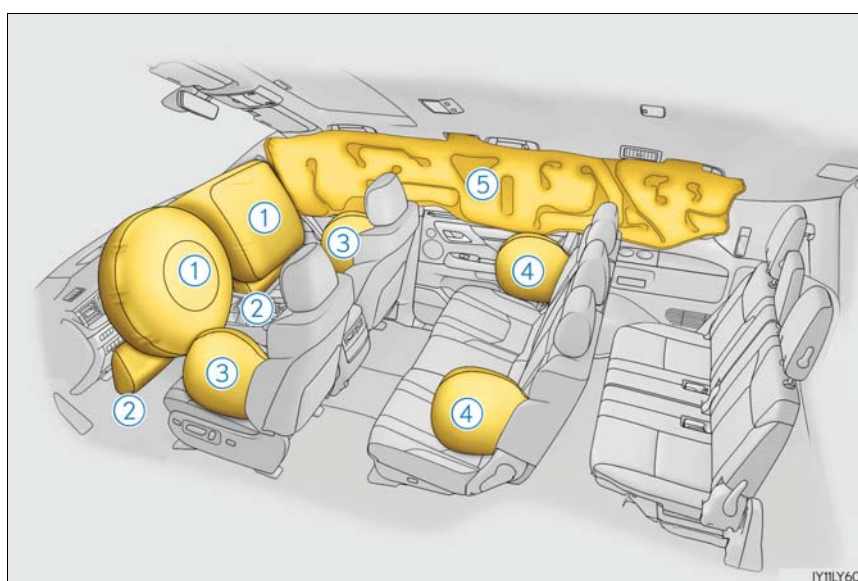

### ◆ Coussins gonflables SRS avant

- ① Coussin gonflable SRS du conducteur/coussin gonflable SRS du passager avant  
Peuvent aider à protéger la tête et la poitrine du conducteur et du passager avant contre les impacts avec des composants intérieurs
- ② Coussins gonflables SRS de protection des genoux  
Peuvent aider à protéger le conducteur et le passager avant


---

◆ Coussins gonflables SRS latéraux et en rideau

---

- ③ Coussins gonflables SRS latéraux avant  
Peuvent aider à protéger le torse des occupants des sièges avant
- ④ Coussins gonflables SRS latéraux arrière  
Peuvent aider à protéger le torse des occupants des sièges latéraux de la deuxième rangée de sièges
- ⑤ Coussins gonflables SRS en rideau
  - Peuvent aider à protéger principalement la tête des occupants des sièges latéraux
  - Peuvent aider à empêcher les occupants d'être éjectés du véhicule en cas de tonneaux

## Composants du système de coussins gonflables SRS

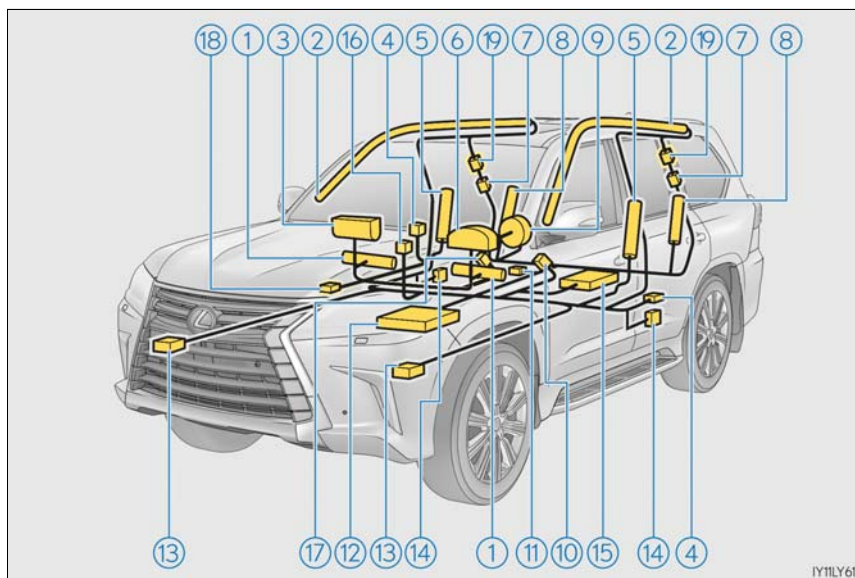

- |                                                                                          |                                                                                                      |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| ① Coussins gonflables de protection des genoux                                           | ⑫ Module de capteur de coussin gonflable                                                             |
| ② Coussins gonflables en rideau                                                          | ⑬ Capteurs d'impact avant                                                                            |
| ③ Coussin gonflable du passager avant                                                    | ⑭ Limiteurs de force et dispositifs de tension des ceintures de sécurité (sièges avant)              |
| ④ Capteurs d'impact latéral (portière avant)                                             | ⑮ Capteur de position du siège du conducteur                                                         |
| ⑤ Coussins gonflables latéraux avant                                                     | ⑯ Voyants "AIR BAG ON" et "AIR BAG OFF"                                                              |
| ⑥ Lampe témoin SRS                                                                       | ⑰ Contacteur de boucle de ceinture de sécurité du passager avant                                     |
| ⑦ Capteurs d'impact latéral (arrière)                                                    | ⑱ Système de classification de l'occupant du siège du passager avant (ECU et capteurs)               |
| ⑧ Coussins gonflables latéraux arrière (sièges latéraux de la deuxième rangée de sièges) | ⑲ Dispositifs de tension des ceintures de sécurité (sièges latéraux de la deuxième rangée de sièges) |
| ⑨ Coussin gonflable du conducteur                                                        |                                                                                                      |
| ⑩ Contacteur de boucle de ceinture de sécurité du conducteur                             |                                                                                                      |
| ⑪ Capteur de sûreté (arrière)                                                            |                                                                                                      |

Votre véhicule est doté de COUSSINS GONFLABLES ÉVOLUÉS dont la conception s'appuie sur les normes de sécurité des véhicules à moteur américains (FMVSS208). Le module de capteur de coussin gonflable (ECU) contrôle le déploiement des coussins gonflables en fonction des informations obtenues des capteurs et d'autres éléments affichés dans le diagramme des composants du système ci-dessus. Ces informations comprennent des données relatives à la gravité de l'accident et aux occupants. Au moment du déploiement des coussins gonflables, une réaction chimique se produit dans les gonfleurs de coussin gonflable et les coussins gonflables se remplissent rapidement d'un gaz non toxique pour aider à limiter le mouvement des occupants.



#### AVERTISSEMENT

##### ■ Précautions relatives aux coussins gonflables SRS

Observez les précautions suivantes en ce qui concerne les coussins gonflables SRS. Les négliger pourrait occasionner des blessures graves, voire mortelles.

- Le conducteur et tous les passagers du véhicule doivent porter leur ceinture de sécurité de la manière appropriée.

Les coussins gonflables SRS sont des dispositifs supplémentaires qui doivent être utilisés avec les ceintures de sécurité.

- Le coussin gonflable SRS du conducteur se déploie avec une force considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le conducteur se trouve très près du coussin gonflable. La National Highway Traffic Safety Administration (NHTSA), aux États-Unis, fait les recommandations suivantes :  
La zone à risque du coussin gonflable du conducteur couvre 2 à 3 in. (50 à 75 mm) de la zone de déploiement du coussin gonflable. Pour assurer une marge de sécurité suffisante, restez à 10 in. (250 mm) du coussin gonflable. Cette distance est mesurée depuis le centre du volant jusqu'à votre sternum. Si maintenant vous vous tenez assis à moins de 10 in. (250 mm), vous pouvez changer votre position de conduite de plusieurs manières :

- Reculez votre siège à la position maximale vous permettant d'atteindre encore aisément les pédales.
- Inclinez légèrement le dossier du siège. Même si les véhicules sont conçus différemment, la plupart des conducteurs peuvent maintenir une distance de 10 in. (250 mm), même si leur siège se trouve complètement vers l'avant, simplement en inclinant un peu le dossier du siège vers l'arrière. Si la visibilité avant est moindre après avoir incliné le dossier de votre siège, utilisez un coussin ferme et non glissant pour être assis plus haut ou relevez le siège si cette option est disponible sur votre véhicule.
- Si votre volant est réglable en hauteur, inclinez-le vers le bas. Cela vous permet d'orienter le coussin gonflable vers votre buste plutôt que vers votre tête et vers votre cou.

Le siège doit être réglé de la manière recommandée ci-dessus par la NHTSA, tout en gardant le contrôle des pédales et du volant, ainsi que la vue sur les commandes du tableau de bord.

## ⚠ AVERTISSEMENT

### ■ Précautions relatives aux coussins gonflables SRS

- Si la rallonge de ceinture de sécurité a été reliée aux boucles des ceintures de sécurité des sièges avant sans avoir aussi été attachée à la plaque de blocage des ceintures de sécurité, les coussins gonflables SRS avant considéreront que le conducteur et le passager avant portent tout de même leur ceinture de sécurité même si les ceintures de sécurité ne sont pas attachées. Les coussins gonflables SRS avant peuvent alors ne pas s'activer correctement lors d'une collision, ce qui pourrait occasionner des blessures graves, voire mortelles, en cas de collision. Assurez-vous de toujours porter la ceinture de sécurité avec la rallonge de ceinture de sécurité.



- Le coussin gonflable SRS du passager avant se déploie également avec une force considérable et peut occasionner des blessures graves, voire mortelles, notamment lorsque le passager avant se trouve très près du coussin gonflable. Le siège du passager avant doit se trouver le plus loin possible du coussin gonflable et le dossier doit être réglé de manière à ce que le passager avant soit assis bien droit.
- Le déploiement d'un coussin gonflable risque d'infliger des blessures graves, voire mortelles, aux bébés et aux enfants mal assis et/ou mal attachés. Un bébé ou un enfant trop petit pour utiliser une ceinture de sécurité doit être correctement retenu à l'aide d'un dispositif de retenue pour enfants. Lexus recommande vivement de placer et d'attacher correctement tous les bébés et tous les enfants sur les sièges arrière du véhicule à l'aide de dispositifs de retenue adaptés. Les sièges arrière sont plus sécuritaires pour les bébés et les enfants que le siège du passager avant.
- N'installez jamais un dispositif de retenue pour enfants de type dos à la route sur le siège du passager avant, même si le voyant "AIR BAG OFF" est allumé. En cas d'accident, la force et la vitesse de déploiement du coussin gonflable du passager avant pourraient infliger à l'enfant des blessures graves, voire mortelles, si le dispositif de retenue pour enfants de type dos à la route était installé sur le siège du passager avant.

# AVERTISSEMENT

## ■ Précautions relatives aux coussins gonflables SRS

- Ne vous asseyez pas sur le bord du siège et ne vous appuyez pas sur la planche de bord.



- Ne laissez pas un enfant se tenir face au coussin gonflable SRS du passager avant ni s'asseoir sur les genoux d'un passager avant.



- Ne laissez pas les occupants des sièges avant tenir des objets sur leurs genoux.


- Ne vous appuyez pas sur la portière ou sur le brancard de pavillon, ni sur les montants avant, latéraux ou arrière.



- Ne laissez personne s'agenouiller face à la portière sur les sièges des passagers ni sortir la tête ou les mains à l'extérieur du véhicule.




- Ne fixez et n'appuyez rien sur des zones telles que la planche de bord, le tampon de volant ou encore la partie inférieure du tableau de bord. Ces objets peuvent se transformer en projectiles lorsque les coussins gonflables SRS du conducteur, du passager avant et de protection des genoux se déploient.

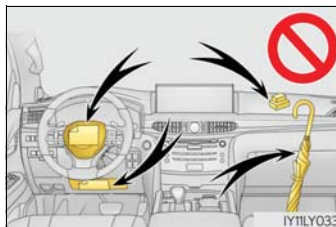

## ⚠ AVERTISSEMENT

### ■ Précautions relatives aux coussins gonflables SRS

- Ne fixez rien sur des zones telles que les portières, le pare-brise, les glaces de portières, les montants avant, latéraux ou arrière, le brancard de pavillon et la poignée de maintien.

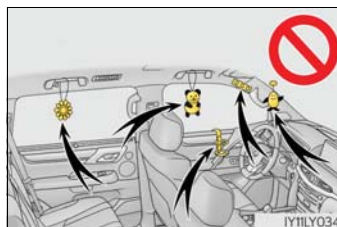

- N'accrochez pas de cintres ni d'autres objets rigides sur les crochets porte-vêtements. Tous ces objets pourraient se transformer en projectiles et vous occasionner des blessures graves, voire mortelles, en cas de déploiement des coussins gonflables SRS en rideau.
- Si le recouvrement de vinyle est placé sur la zone de déploiement du coussin gonflable SRS de protection des genoux, veillez à le retirer.
- N'utilisez pas d'accessoires recouvrant les parties du siège où les coussins gonflables SRS latéraux se déploient, car ces accessoires pourraient entraver le déploiement des coussins gonflables. De tels accessoires peuvent empêcher les coussins gonflables latéraux de se déployer correctement, rendre le système inopérant ou provoquer accidentellement le déploiement des coussins gonflables latéraux, occasionnant des blessures graves, voire mortelles.
- Ne frappez pas et n'appliquez pas une pression importante à l'emplacement des composants des coussins gonflables SRS. Cela peut provoquer un mauvais fonctionnement des coussins gonflables SRS.
- Ne touchez à aucun composant des coussins gonflables SRS immédiatement après leur déploiement (gonflage), car ils pourraient être chauds.
- Si vous avez de la difficulté à respirer après le déploiement des coussins gonflables SRS, ouvrez une portière ou une glace pour laisser entrer l'air, ou quittez le véhicule si vous pouvez le faire en toute sécurité. Dès que possible, nettoyez tous les résidus afin d'éviter les irritations cutanées.
- Si les emplacements de stockage des coussins gonflables SRS, tels que le tampon de volant et les garnitures des montants avant, latéraux et arrière, sont endommagés ou fissurés, faites-les remplacer par votre concessionnaire Lexus.
- Ne placez aucun objet, par exemple un coussin, sur le siège du passager avant. Cela disperserait le poids du passager, ce qui empêcherait le capteur de le détecter correctement. Cela pourrait empêcher le déploiement des coussins gonflables SRS du passager avant en cas de collision.

**AVERTISSEMENT****■ Modification et mise au rebut des composants du système de coussins gonflables SRS**

Ne mettez pas votre véhicule au rebut et n'effectuez aucune des modifications suivantes sans d'abord consulter votre concessionnaire Lexus. Les coussins gonflables SRS pourraient fonctionner de manière incorrecte ou se déployer (gonfler) accidentellement, ce qui serait susceptible d'occasionner des blessures graves, voire mortelles.

- Installation, retrait, démontage et réparation des coussins gonflables SRS
- Réparations, modifications, retrait ou remplacement du volant, du tableau de bord, de la planche de bord, des sièges, du capitonnage des sièges, des montants avant, latéraux et arrière ou des brancards de pavillon
- Réparations ou modifications de l'aile avant, du pare-chocs avant ou du côté de l'habitacle
- Installation d'une protection de calandre (barre safari, barre kangourou, etc.), de lames de déneigement, de treuils ou d'un porte-bagages de toit
- Modifications du système de suspension du véhicule
- Installation d'appareils électroniques tels qu'un émetteur-récepteur radio ou un lecteur de CD
- Modifications à votre véhicule pour une personne aux capacités physiques réduites

## Index

|                                            |     |
|--------------------------------------------|-----|
| What to do if...<br>(Troubleshooting)..... | 612 |
| Alphabetical index.....                    | 616 |

For vehicles with a navigation system or a multimedia system, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL” for information regarding the equipment listed below.

- Navigation system
- Audio/video system
- Rear seat entertainment system
- Hands-free system (for cellular phone)

## What to do if... (Troubleshooting)

If you have a problem, check the following before contacting your Lexus dealer.

### The doors cannot be locked, unlocked, opened or closed



#### You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by your Lexus dealer. (→P. 118)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Lexus dealer immediately. (→P. 120)



#### The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 505)
- Is the engine switch in IGNITION ON mode?  
When locking the doors, turn the engine switch off. (→P. 212)
- Is the electronic key left inside the vehicle?  
When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 140)



#### The rear door cannot be opened

- Is the child-protector lock set?  
The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 124)

**If you think something is wrong****The engine does not start**

- Did you press the engine switch while firmly depressing the brake pedal? (→P. 211)
- Is the shift lever in P? (→P. 211)
- Is the electronic key anywhere detectable inside the vehicle? (→P. 139)
- Is the steering wheel unlocked? (→P. 214)
- Is the electronic key battery weak or depleted?  
In this case, the engine can be started in a temporary way. (→P. 550)
- Is the battery discharged? (→P. 552)

**The shift lever cannot be shifted from P even if you depress the brake pedal**

- Is the engine switch in IGNITION ON mode?  
If you cannot release the shift lever by depressing the brake pedal with the engine switch in IGNITION ON mode (→P. 221)



**The steering wheel cannot be turned after the engine is stopped**

- It is locked automatically to prevent theft of the vehicle. (→P. 213)



**The windows do not open or close by operating the power window switches**

- Is the window lock switch pressed?  
The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P. 171)



**The engine switch is turned off automatically**

- The auto power off function will be operated if the vehicle is left in ACCESSORY or IGNITION ON mode (the engine is not running) for a period of time. (→P. 213)



**A warning buzzer sounds during driving**

- The seat belt reminder light is flashing  
Are the driver and the front passenger wearing the seat belts?  
(→P. 525)
  - The parking brake indicator is on  
Is the parking brake released? (→P. 224)
- Depending on the situation, other types of warning buzzer may also sound.  
(→P. 523, 531)



**An alarm is activated and the horn sounds**

- Did anyone inside the vehicle open a door during setting the alarm?  
The sensor detects it and the alarm sounds. (→P. 82)
- To stop the alarm, turn the engine switch to IGNITION ON mode or start the engine.

**A warning buzzer sounds when leaving the vehicle**

- Is the electronic key left inside the vehicle or the moon roof opened?  
Check the message on the multi-information display. (→P. 531)

**A warning light turns on or a warning message is displayed**

- When a warning light turns on or a warning message is displayed, refer to P. 523, 531.

**When a problem has occurred****If you have a flat tire**

- Stop the vehicle in a safe place and replace the flat tire with the spare tire.  
(→P. 535)

**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow.  
(→P. 558)

## Alphabetical index

### A

|                                                  |                 |
|--------------------------------------------------|-----------------|
| A/C .....                                        | 405, 416        |
| Air conditioning filter .....                    | 503             |
| Changing the rear seat<br>settings .....         | 410             |
| Front automatic air<br>conditioning system ..... | 405             |
| Micro dust and pollen filter .....               | 411             |
| Rear air conditioning system .....               | 416             |
| <b>ABS (Anti-lock Brake System) .....</b>        | <b>383</b>      |
| Function .....                                   | 383             |
| Warning light .....                              | 523             |
| <b>Active head restraint .....</b>               | <b>146</b>      |
| <b>Active Height Control</b>                     |                 |
| Suspension .....                                 | 301             |
| <b>Active TRAC .....</b>                         | <b>383</b>      |
| <b>Air cleaner .....</b>                         | <b>473</b>      |
| <b>Air conditioning filter .....</b>             | <b>503</b>      |
| <b>Air conditioning system .....</b>             | <b>405, 416</b> |
| Air conditioning filter .....                    | 503             |
| Changing the rear seat<br>settings .....         | 410             |
| Front automatic air<br>conditioning system ..... | 405             |
| Micro dust and pollen filter .....               | 411             |
| Rear air conditioning system .....               | 416             |

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>Airbags .....</b>                                          | <b>38</b> |
| Airbag operating conditions .....                             | 46        |
| Airbag precautions for your<br>child .....                    | 41        |
| Airbag warning light .....                                    | 523       |
| Correct driving posture .....                                 | 28        |
| Curtain shield airbag<br>operating conditions .....           | 46        |
| Curtain shield airbag<br>precautions .....                    | 44        |
| Front passenger occupant<br>classification system .....       | 49        |
| General airbag precautions .....                              | 41        |
| Locations of airbags .....                                    | 38        |
| Modification and disposal<br>of airbags .....                 | 45        |
| Side airbag operating<br>conditions .....                     | 46        |
| Side airbag precautions .....                                 | 44        |
| Side and curtain shield<br>airbags operating conditions ..... | 46        |
| Side and curtain shield<br>airbags precautions .....          | 44        |
| SRS airbag instructions for<br>Canadian owners .....          | 603       |
| SRS airbags .....                                             | 38        |
| <b>Alarm .....</b>                                            | <b>82</b> |
| Alarm .....                                                   | 82        |
| Warning buzzer .....                                          | 523       |
| <b>Anchor brackets .....</b>                                  | <b>61</b> |
| <b>Antenna</b>                                                |           |
| Smart access system with<br>push-button start .....           | 138       |

| B                                                                               |          |
|---------------------------------------------------------------------------------|----------|
| Anti-lock brake system<br>(ABS).....                                            | 383      |
| Function .....                                                                  | 383      |
| Warning light .....                                                             | 523      |
| Approach warning<br>Dynamic radar cruise control<br>with full-speed range ..... | 282      |
| Armrest .....                                                                   | 449      |
| Assist grips .....                                                              | 451      |
| Audio input*                                                                    |          |
| Audio system*                                                                   |          |
| Automatic air conditioning<br>system .....                                      | 405, 416 |
| Air conditioning filter .....                                                   | 503      |
| Front automatic air<br>conditioning system .....                                | 405      |
| Rear air conditioning system .....                                              | 416      |
| Automatic door locking and<br>unlocking systems .....                           | 125      |
| Automatic headlight leveling<br>system .....                                    | 229      |
| Automatic High Beam .....                                                       | 230      |
| Automatic light control system .....                                            | 228      |
| Automatic transmission .....                                                    | 216      |
| 2nd start mode .....                                                            | 217      |
| Downshift restriction warning<br>buzzer .....                                   | 221      |
| Driving mode select switch .....                                                | 290      |
| If the shift lever cannot be<br>shifted from P .....                            | 221      |
| S mode .....                                                                    | 219      |
| AUX port*                                                                       |          |
| Auxiliary boxes .....                                                           | 431      |
| Back door .....                                                                 | 128      |
| Back door handle .....                                                          | 130      |
| Jam protection function .....                                                   | 132      |
| Power back door .....                                                           | 130      |
| Wireless remote control .....                                                   | 116      |
| Battery .....                                                                   | 484      |
| Battery checking .....                                                          | 484      |
| If the vehicle battery is<br>discharged .....                                   | 552      |
| Preparing and checking<br>before winter .....                                   | 388      |
| Warning light .....                                                             | 523      |
| Blind Spot Monitor (BSM) .....                                                  | 369      |
| Bluetooth®*                                                                     |          |
| Bluetooth® audio*                                                               |          |
| Bluetooth® phone*                                                               |          |
| Bottle holders .....                                                            | 430      |
| Brake                                                                           |          |
| Fluid .....                                                                     | 568      |
| Parking brake .....                                                             | 224      |
| Warning light .....                                                             | 523      |
| Brake assist .....                                                              | 383      |
| Break-in tips .....                                                             | 181      |
| Brightness control<br>Instrument panel light control .....                      | 94       |
| BSM (Blind Spot Monitor) .....                                                  | 369      |
| Blind Spot Monitor function .....                                               | 373      |
| Rear Cross Traffic Alert<br>function .....                                      | 379      |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## C

|                                                         |          |
|---------------------------------------------------------|----------|
| Care .....                                              | 460, 463 |
| Aluminum wheels .....                                   | 460      |
| Exterior .....                                          | 460      |
| Interior .....                                          | 463      |
| Radar sensor .....                                      | 372      |
| Seat belts .....                                        | 464      |
| Cargo capacity .....                                    | 192      |
| Cargo hooks .....                                       | 433      |
| Cargo net hooks .....                                   | 433      |
| CD player *                                             |          |
| Chains .....                                            | 389      |
| Child restraint system .....                            | 56       |
| Booster seat definition .....                           | 57       |
| Booster seat installation .....                         | 68       |
| Convertible seat definition .....                       | 57       |
| Convertible seat installation .....                     | 66       |
| Front passenger occupant<br>classification system ..... | 49       |
| Infant seat/convertible seat<br>definition .....        | 57       |
| Infant seat/convertible seat<br>installation .....      | 64       |
| Installing CRS with<br>LATCH system .....               | 62       |
| Installing CRS with seat belt .....                     | 64       |
| Installing CRS with top tether<br>strap .....           | 69       |
| LATCH system .....                                      | 62       |

|                                                   |          |
|---------------------------------------------------|----------|
| Child safety .....                                | 55       |
| Airbag precautions .....                          | 41       |
| Back door precautions .....                       | 133      |
| Battery precautions .....                         | 485, 554 |
| Child-protectors .....                            | 124      |
| Child restraint system .....                      | 56       |
| How your child should wear<br>the seat belt ..... | 34       |
| Installing child restraints .....                 | 61       |
| Moon roof precautions .....                       | 177      |
| Power window lock switch .....                    | 171      |
| Power window precautions .....                    | 173      |
| Rear door child-protectors .....                  | 124      |
| Removed key battery<br>precautions .....          | 506      |
| Safety information .....                          | 55       |
| Seat belt extender precautions .....              | 37       |
| Seat belt precautions .....                       | 36       |
| Seat heater precautions .....                     | 419      |
| Child-protectors .....                            | 124      |
| Cleaning .....                                    | 460, 463 |
| Aluminum wheels .....                             | 460      |
| Exterior .....                                    | 460      |
| Interior .....                                    | 463      |
| Radar sensor .....                                | 372      |
| Seat belts .....                                  | 464      |
| Climate concierge switch .....                    | 404      |
| Clock .....                                       | 438      |
| Coat hooks .....                                  | 450      |
| Compass .....                                     | 96       |
| Condenser .....                                   | 481      |
| Cool box .....                                    | 436      |

|                              |     |
|------------------------------|-----|
| Coolant.....                 | 566 |
| Capacity .....               | 566 |
| Checking.....                | 480 |
| Preparing and checking       |     |
| before winter .....          | 388 |
| Cooling system               |     |
| Engine overheating.....      | 555 |
| Crawl Control .....          | 313 |
| Cruise control               |     |
| Cruise control.....          | 287 |
| Dynamic radar cruise control |     |
| with full-speed range.....   | 275 |
| Cup holders.....             | 429 |
| Curtain shield airbags ..... | 38  |
| Customizable features.....   | 584 |

## D

|                                   |     |
|-----------------------------------|-----|
| Daytime running light system..... | 228 |
| Defogger                          |     |
| Outside rear view mirrors.....    | 411 |
| Rear window .....                 | 411 |
| Windshield.....                   | 411 |
| Differential.....                 | 567 |
| Dimension .....                   | 562 |
| Dinghy towing.....                | 210 |

|                                   |     |
|-----------------------------------|-----|
| Display                           |     |
| Crawl Control.....                | 313 |
| Drive information.....            | 99  |
| Dynamic radar cruise control      |     |
| with full-speed range .....       | 275 |
| Fuel consumption information..... | 111 |
| Head-up display .....             | 105 |
| Intuitive parking assist.....     | 294 |
| LDA (Lane Departure Alert).....   | 270 |
| Multi-information display.....    | 96  |
| Multi-terrain Monitor .....       | 322 |
| Multi-terrain Select .....        | 318 |
| Warning messages .....            | 531 |
| Do-it-yourself maintenance.....   | 472 |
| Door courtesy lights              |     |
| Location .....                    | 423 |
| Doors                             |     |
| Automatic door locking and        |     |
| unlocking system.....             | 125 |
| Back door.....                    | 128 |
| Door glasses.....                 | 171 |
| Door lock.....                    | 121 |
| Open door warning buzzer .....    | 525 |
| Open door warning light .....     | 525 |
| Outside rear view mirrors .....   | 168 |
| Rear door child-protectors.....   | 124 |
| Side doors.....                   | 121 |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

|                                        |     |
|----------------------------------------|-----|
| Drive information .....                | 99  |
| Driver's seat belt reminder light..... | 525 |
| Driver's seat position memory .....    | 157 |
| Driving.....                           | 180 |
| Break-in tips .....                    | 181 |
| Correct posture.....                   | 28  |
| Driving in the rain.....               | 181 |
| Driving mode select switch .....       | 290 |
| Off-road precautions.....              | 392 |
| Procedures .....                       | 180 |
| Winter drive tips.....                 | 388 |
| Driving position memory.....           | 157 |
| Driving position memory .....          | 157 |
| Memory recall function.....            | 158 |
| Power easy access system .....         | 157 |
| DVD player*                            |     |
| Dynamic radar cruise control           |     |
| with full-speed range                  |     |
| Function .....                         | 275 |

## E

|                                   |     |
|-----------------------------------|-----|
| Eco Driving Indicator Light ..... | 91  |
| EDR (Event data recorder).....    | 10  |
| Electronic key .....              | 116 |
| Battery-saving function.....      | 140 |
| If the electronic key does not    |     |
| operate properly.....             | 549 |
| Replacing the battery.....        | 505 |

|                                    |          |
|------------------------------------|----------|
| Emergency, in case of              |          |
| If a warning buzzer sounds .....   | 523      |
| If a warning light turns on .....  | 523      |
| If a warning message is            |          |
| displayed .....                    | 531      |
| If the electronic key does not     |          |
| operate properly .....             | 549      |
| If the engine will not start ..... | 547      |
| If the vehicle battery is          |          |
| discharged.....                    | 552      |
| If the vehicle is trapped in       |          |
| rising water.....                  | 514      |
| If you have a flat tire.....       | 535      |
| If you lose your keys.....         | 118, 120 |
| If you think something is          |          |
| wrong.....                         | 521      |
| If your vehicle becomes stuck....  | 558      |
| If your vehicle has to be stopped  |          |
| in an emergency.....               | 513      |
| If your vehicle needs to be        |          |
| towed .....                        | 515      |
| If your vehicle overheats.....     | 555      |
| Emergency flashers .....           | 512      |

\*: Refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.

|                                                     |     |
|-----------------------------------------------------|-----|
| Front passenger occupant classification system..... | 49  |
| Front passenger's seat belt reminder light .....    | 525 |
| Front seats .....                                   | 146 |
| Adjustment.....                                     | 146 |
| Cleaning.....                                       | 463 |
| Correct driving posture .....                       | 28  |
| Driving position memory .....                       | 157 |
| Head restraints.....                                | 161 |
| Power easy access system .....                      | 157 |
| Seat heaters .....                                  | 421 |
| Seat ventilators .....                              | 421 |
| Front side marker lights .....                      | 227 |
| Light switch .....                                  | 227 |
| Replacing light bulbs .....                         | 510 |
| Front turn signal lights .....                      | 223 |
| Turn signal lever .....                             | 223 |
| Replacing light bulbs.....                          | 510 |
| Fuel.....                                           | 570 |
| Capacity .....                                      | 564 |
| Fuel gauge.....                                     | 92  |
| Fuel pump shut off system.....                      | 522 |
| Gas station information .....                       | 632 |
| Information.....                                    | 570 |
| Refueling.....                                      | 245 |
| Type .....                                          | 564 |
| Warning light .....                                 | 525 |

|                                   |     |
|-----------------------------------|-----|
| Fuel consumption information..... | 110 |
| Fuel filler door.....             | 245 |
| Opener.....                       | 246 |
| Refueling .....                   | 245 |
| Fuel pump shut off system .....   | 522 |
| Fuses.....                        | 507 |

## G

|                               |     |
|-------------------------------|-----|
| Gas station information ..... | 632 |
| Garage door opener.....       | 452 |
| Gauges.....                   | 92  |
| Glove box .....               | 427 |

## H

|                                               |     |
|-----------------------------------------------|-----|
| Hands-free system (for cellular phone)*       |     |
| Head restraints.....                          | 161 |
| Headlight cleaner .....                       | 244 |
| Headlights.....                               | 227 |
| Automatic headlight leveling.....             | 229 |
| Automatic High Beam system .....              | 230 |
| Light switch.....                             | 227 |
| Replacing light bulbs .....                   | 510 |
| Head-up display .....                         | 105 |
| Heated steering wheel .....                   | 420 |
| Heaters                                       |     |
| Front automatic air conditioning system ..... | 405 |
| Outside rear view mirrors .....               | 411 |
| Seat heaters.....                             | 421 |
| High mounted stoplight                        |     |
| Replacing.....                                | 510 |

|                                  |     |
|----------------------------------|-----|
| Hill-start assist control.....   | 383 |
| Hood.....                        | 474 |
| Hooks                            |     |
| Cargo hooks.....                 | 433 |
| Cargo net hooks.....             | 433 |
| Coat hooks .....                 | 450 |
| Retaining hooks (floor mat)..... | 26  |
| Horn.....                        | 164 |

## I

|                                      |     |
|--------------------------------------|-----|
| I/M test .....                       | 471 |
| Identification                       |     |
| Engine.....                          | 563 |
| Vehicle .....                        | 563 |
| Ignition switch (engine switch)..... | 211 |
| Ignition switch light                |     |
| (engine switch light).....           | 423 |
| Illuminated entry system.....        | 425 |
| Immobilizer system.....              | 80  |
| Indicators .....                     | 86  |
| Initialization                       |     |
| Engine oil maintenance data.....     | 467 |
| Items to initialize.....             | 598 |
| Power window .....                   | 172 |
| Tire pressure warning system .....   | 490 |
| Inside rear view mirror .....        | 166 |
| Instrument panel light control ..... | 94  |
| Interior lights.....                 | 423 |
| Switch.....                          | 424 |
| Intuitive parking assist.....        | 293 |

## J

|                             |     |
|-----------------------------|-----|
| Jack                        |     |
| Vehicle-equipped jack ..... | 535 |
| Jack handle .....           | 535 |
| Jam protection function     |     |
| Moon roof.....              | 171 |
| Power back door opener      |     |
| and closer .....            | 132 |
| Power windows.....          | 175 |

## K

|                                |          |
|--------------------------------|----------|
| Keyless entry                  |          |
| Smart access system with       |          |
| push-button start.....         | 138      |
| Wireless remote control.....   | 116      |
| Keys .....                     | 116      |
| Battery-saving function .....  | 140      |
| Electronic key .....           | 116      |
| Engine switch .....            | 211      |
| If the electronic key does not |          |
| operate properly .....         | 549      |
| If you lose your keys.....     | 118, 120 |
| Key number plate.....          | 116      |
| Keyless entry.....             | 116      |
| Keys .....                     | 116      |
| Mechanical key.....            | 116      |
| Replacing the battery .....    | 505      |
| Warning buzzer.....            | 139      |
| Knee airbags .....             | 38       |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## L

|                                           |          |
|-------------------------------------------|----------|
| Language (multi-information display)..... | 595      |
| LATCH system .....                        | 62       |
| LDA (Lane Departure Alert) .....          | 267      |
| Lever                                     |          |
| Auxiliary catch lever .....               | 474      |
| Hood lock release lever .....             | 474      |
| Shift lever .....                         | 216      |
| Turn signal lever .....                   | 223      |
| Wiper lever .....                         | 237, 241 |
| Lexus climate concierge .....             | 404      |
| Climate concierge switch.....             | 404      |
| Lexus parking assist monitor*             |          |
| Lexus Safety System + .....               | 248      |
| License plate lights.....                 | 227      |
| Light switch .....                        | 227      |
| Replacing light bulbs.....                | 510      |
| Light                                     |          |
| Automatic High Beam system...             | 230      |
| Engine switch light.....                  | 423      |
| Fog light switch .....                    | 235      |
| Headlight switch.....                     | 227      |
| Illuminated entry system.....             | 425      |
| Interior lights.....                      | 424      |
| Luggage compartment light.....            | 423      |
| Personal lights .....                     | 425      |
| Replacing light bulbs.....                | 510      |
| Turn signal lever .....                   | 223      |
| Vanity lights .....                       | 437      |
| Light bulbs                               |          |
| Replacing .....                           | 510      |
| Lock steering column .....                | 213      |
| Luggage cover .....                       | 434      |

## M

|                                      |     |
|--------------------------------------|-----|
| Maintenance                          |     |
| Do-it-yourself maintenance .....     | 472 |
| General maintenance.....             | 468 |
| Maintenance data.....                | 562 |
| Maintenance requirements.....        | 466 |
| Scheduled maintenance .....          | 466 |
| Malfunction indicator lamp.....      | 523 |
| Meter.....                           | 92  |
| Indicators .....                     | 86  |
| Instrument panel light control ..... | 94  |
| Meters .....                         | 92  |
| Multi-information display.....       | 96  |
| Warning lights.....                  | 523 |
| Warning messages .....               | 531 |
| Micro dust and pollen filter .....   | 411 |
| Mirrors                              |     |
| Inside rear view mirror.....         | 166 |
| Outside rear view mirror             |     |
| defoggers.....                       | 411 |
| Outside rear view mirrors .....      | 168 |
| Vanity mirrors .....                 | 437 |
| Moon roof.....                       | 174 |
| Jam protection function.....         | 175 |
| Operation.....                       | 174 |
| MP3 disc*                            |     |

|                                    |     |
|------------------------------------|-----|
| Multi-information display .....    | 96  |
| Crawl Control .....                | 313 |
| Display contents .....             | 96  |
| Drive information .....            | 99  |
| Dynamic radar cruise control       |     |
| with full-speed range .....        | 275 |
| Fuel consumption information ..... | 111 |
| Intuitive parking assist .....     | 294 |
| Language .....                     | 595 |
| LDA (Lane Departure Alert) .....   | 270 |
| Multi-information display .....    | 96  |
| Switching the display .....        | 98  |
| Multi terrain ABS .....            | 383 |
| Multi-terrain Monitor .....        | 322 |
| Multi-terrain Select .....         | 318 |

## N

|                                |   |
|--------------------------------|---|
| Navigation system*             |   |
| Noise from under vehicle ..... | 8 |

## O

|                              |     |
|------------------------------|-----|
| Odometer .....               | 93  |
| Off road precautions .....   | 392 |
| Oil                          |     |
| Engine oil .....             | 564 |
| Front differential oil ..... | 567 |
| Rear differential oil .....  | 567 |
| Transfer oil .....           | 568 |
| Opener                       |     |
| Back door .....              | 129 |
| Fuel filler door .....       | 246 |
| Hood .....                   | 474 |

|                                 |          |
|---------------------------------|----------|
| Outside rear view mirrors ..... | 168      |
| Adjusting and folding .....     | 168      |
| Blind Spot Monitor .....        | 369      |
| Driving position memory .....   | 157      |
| Linked mirror function when     |          |
| reversing .....                 | 169      |
| Mirror position memory .....    | 157      |
| Outside rear view mirror        |          |
| defoggers .....                 | 411      |
| Outside temperature             |          |
| display .....                   | 100, 107 |
| Overheating, Engine .....       | 555      |

## P

|                                     |     |
|-------------------------------------|-----|
| Paddle shift switches .....         | 218 |
| Panic mode .....                    | 117 |
| Parking assist sensors              |     |
| (Intuitive parking assist) .....    | 293 |
| Parking brake .....                 | 224 |
| Operation .....                     | 224 |
| Parking brake engaged               |     |
| warning buzzer .....                | 526 |
| Parking lights .....                | 227 |
| Light switch .....                  | 227 |
| Replacing light bulbs .....         | 510 |
| PCS (Pre-Collision system) .....    | 255 |
| Enabling/disabling the system ..... | 259 |
| Function .....                      | 255 |
| Warning light .....                 | 524 |
| Personal lights .....               | 423 |
| Switch .....                        | 425 |
| Power back door .....               | 130 |
| Power easy access system .....      | 157 |
| Power outlet .....                  | 438 |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

|                              |     |
|------------------------------|-----|
| Power steering               |     |
| Fluid.....                   | 568 |
| Power windows.....           | 171 |
| Jam protection function..... | 171 |
| Operation.....               | 171 |
| Window lock switch.....      | 171 |

## R

|                                                                                      |     |
|--------------------------------------------------------------------------------------|-----|
| Radar cruise control (dynamic<br>radar cruise control with<br>full-speed range)..... | 275 |
| Radiator.....                                                                        | 481 |
| Radio <sup>*</sup>                                                                   |     |
| Rear air conditioning system.....                                                    | 416 |
| Rear seat.....                                                                       | 148 |
| Adjustment.....                                                                      | 148 |
| Folding the third seats.....                                                         | 151 |
| Tumbling the second seats.....                                                       | 149 |
| Rear side marker lights.....                                                         | 227 |
| Light switch.....                                                                    | 227 |
| Replacing light bulbs.....                                                           | 510 |
| Rear turn signal lights.....                                                         | 223 |
| Replacing light bulbs.....                                                           | 510 |
| Turn signal lever.....                                                               | 223 |
| Rear view mirror                                                                     |     |
| Inside rear view mirror.....                                                         | 166 |
| Outside rear view mirrors.....                                                       | 168 |
| Rear view monitor system <sup>*</sup>                                                |     |
| Rear window defogger.....                                                            | 411 |
| Rear window wiper.....                                                               | 241 |
| Refueling.....                                                                       | 245 |
| Capacity.....                                                                        | 564 |
| Fuel types.....                                                                      | 564 |
| Opening the fuel tank cap.....                                                       | 245 |

|                                                                  |     |
|------------------------------------------------------------------|-----|
| Remote touch/12.3-inch<br>display.....                           | 398 |
| Replacing                                                        |     |
| Electronic key battery.....                                      | 505 |
| Fuses.....                                                       | 507 |
| Light bulbs.....                                                 | 510 |
| Tires.....                                                       | 535 |
| Reporting safety defects for<br>U.S. owners.....                 | 600 |
| Resetting the message indicating<br>maintenance is required..... | 467 |

## S

|                                                  |     |
|--------------------------------------------------|-----|
| Safety Connect.....                              | 74  |
| Scheduled maintenance.....                       | 466 |
| Seat belts.....                                  | 30  |
| Adjusting the seat belt.....                     | 33  |
| Automatic Locking Retractor.....                 | 34  |
| Child restraint system<br>installation.....      | 61  |
| Cleaning and maintaining the<br>seat belt.....   | 464 |
| Emergency locking retractor.....                 | 34  |
| How to wear your seat belt.....                  | 28  |
| How your child should wear<br>the seat belt..... | 34  |
| Pregnant women, proper seat<br>belt use.....     | 35  |
| Reminder light and buzzer.....                   | 525 |
| Seat belt extender.....                          | 34  |
| Seat belt pretensioners.....                     | 33  |
| SRS warning light.....                           | 523 |

|                                    |          |                                         |            |
|------------------------------------|----------|-----------------------------------------|------------|
| Seat heaters.....                  | 421      | Sensor                                  |            |
| Seat position memory.....          | 157      | Automatic headlight system .....        | 228        |
| Seat ventilators.....              | 421      | Automatic High Beam                     |            |
| Seating capacity.....              | 192      | system.....                             | 230        |
| Seats.....                         | 146, 148 | Inside rear view mirror.....            | 166        |
| Adjustment.....                    | 146, 148 | Intuitive parking assist.....           | 293        |
| Adjustment precautions.....        | 147, 156 | LDA (Lane Departure Alert).....         | 267        |
| Armrest.....                       | 449      | Radar sensor.....                       | 250        |
| Child seats/child restraint        |          | Rain-sensing windshield                 |            |
| system installation.....           | 61       | wipers.....                             | 239        |
| Cleaning.....                      | 463      | <b>Service reminder indicators.....</b> | <b>86</b>  |
| Driving position memory .....      | 157      | <b>Shift lever</b>                      |            |
| Folding up the third seats.....    | 151      | Automatic transmission.....             | 216        |
| Front seats .....                  | 146      | If the shift lever cannot be            |            |
| Head restraint.....                | 161      | shifted from P .....                    | 221        |
| Heaters.....                       | 421      | <b>Shift lock system .....</b>          | <b>220</b> |
| Power easy access system .....     | 157      | <b>Side airbags.....</b>                | <b>38</b>  |
| Properly sitting in the seat ..... | 28       | <b>Side doors.....</b>                  | <b>121</b> |
| Rear seats .....                   | 148      | <b>Side marker lights .....</b>         | <b>227</b> |
| Seat heaters .....                 | 421      | Light switch.....                       | 227        |
| Seat position memory.....          | 157      | Replacing light bulbs .....             | 510        |
| Seat ventilators.....              | 421      | <b>Side mirrors.....</b>                | <b>168</b> |
| Second seats.....                  | 148      | Adjusting and folding .....             | 168        |
| Third seats .....                  | 148      | Blind Spot Monitor .....                | 369        |
| Tumbling the second seats.....     | 149      | Heaters .....                           | 411        |
| Ventilators .....                  | 421      | <b>Side turn signal lights</b>          |            |
|                                    |          | Replacing light bulbs .....             | 510        |
|                                    |          | Turn signal lever.....                  | 223        |
|                                    |          | <b>Smart access system with</b>         |            |
|                                    |          | push-button start.....                  | 138        |
|                                    |          | Antenna location.....                   | 138        |
|                                    |          | Entry functions .....                   | 121, 128   |
|                                    |          | Starting the engine.....                | 211        |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

|                                    |     |
|------------------------------------|-----|
| Snow tires .....                   | 388 |
| "SOS" button.....                  | 74  |
| Spare tire                         |     |
| Inflation pressure.....            | 569 |
| Storage location .....             | 535 |
| Spark plug .....                   | 566 |
| Specifications .....               | 562 |
| Speedometer .....                  | 92  |
| SRS airbags.....                   | 38  |
| Steering                           |     |
| Column lock release.....           | 213 |
| Fluid.....                         | 568 |
| Steering wheel.....                | 164 |
| Adjustment.....                    | 164 |
| Audio switches *                   |     |
| Meter control switches .....       | 98  |
| Power easy access system .....     | 157 |
| Telephone switches *               |     |
| Stop/tail lights                   |     |
| Replacing light bulbs.....         | 510 |
| Storage feature .....              | 426 |
| Stuck                              |     |
| If the vehicle becomes stuck ..... | 558 |
| Sun visors.....                    | 437 |
| Sunshade                           |     |
| Roof.....                          | 175 |
| Rear door.....                     | 450 |

## Switch

|                                 |          |
|---------------------------------|----------|
| Audio remote control switches * |          |
| Automatic High Beam switch..... | 231      |
| Center differential lock/unlock |          |
| switch .....                    | 310      |
| Climate concierge switch .....  | 404      |
| Cruise control switch .....     | 275, 287 |
| Door lock switch.....           | 123      |
| Driving mode select switch..... | 290      |
| Driving position memory         |          |
| switches .....                  | 158      |
| Emergency flashers switch.....  | 512      |
| Engine switch .....             | 211      |
| Fog light switch.....           | 235      |
| Four-wheel drive control        |          |
| switch .....                    | 309      |
| Garage door opener              |          |
| switches .....                  | 452      |
| Headlight cleaner switch.....   | 244      |
| Interior light switch.....      | 424      |
| Intuitive parking assist.....   | 293      |
| Ignition switch.....            | 211      |
| LDA (Lane Departure Alert)..... | 269      |
| Light switches.....             | 227      |
| Meter control switches.....     | 98       |
| Moon roof switches .....        | 174      |
| Outside rear view mirror        |          |
| switches .....                  | 168      |
| Paddle shift switches.....      | 218      |
| Personal light switch .....     | 425      |
| Power back door switch.....     | 130      |
| Power door lock switch.....     | 123      |
| Power window switch.....        | 171      |

|                                                                |     |
|----------------------------------------------------------------|-----|
| Rear window wiper and washer switch.....                       | 241 |
| Rear window and outside rear view mirror defoggers switch..... | 411 |
| Seat heater switches.....                                      | 421 |
| Seat ventilator switches .....                                 | 421 |
| "SOS" button.....                                              | 74  |
| Talk switch *                                                  |     |
| Telephone switches *                                           |     |
| Tilt and telescopic steering control switch .....              | 164 |
| Tire pressure warning reset switch.....                        | 490 |
| Vehicle-to-vehicle distance button .....                       | 281 |
| VSC OFF switch .....                                           | 384 |
| Window lock switch.....                                        | 171 |
| Windshield wipers and washer switch.....                       | 237 |
| Wireless charger power supply switch .....                     | 441 |

**T**

|                            |     |
|----------------------------|-----|
| Tachometer .....           | 92  |
| Tail lights.....           | 227 |
| Light switch .....         | 227 |
| Replacing light bulbs..... | 510 |
| Talk switch *              |     |
| Telephone switch *         |     |
| Theft deterrent system     |     |
| Alarm.....                 | 82  |
| Immobilizer system .....   | 80  |

|                                                               |          |
|---------------------------------------------------------------|----------|
| Tire inflation pressure.....                                  | 569      |
| Maintenance data.....                                         | 569      |
| Warning light.....                                            | 525      |
| Tire information .....                                        | 573      |
| Glossary.....                                                 | 579      |
| Size .....                                                    | 575      |
| Tire identification number .....                              | 574      |
| Uniform Tire Quality Grading....                              | 577      |
| Tire pressure warning system.....                             | 489      |
| Function.....                                                 | 489      |
| Initializing .....                                            | 489      |
| Installing tire pressure warning valves and transmitters..... | 489      |
| Registering ID codes.....                                     | 490      |
| Tire pressure warning reset switch .....                      | 490      |
| Warning light.....                                            | 525      |
| Tires .....                                                   | 488      |
| Chains .....                                                  | 389      |
| Checking .....                                                | 488      |
| If you have a flat tire.....                                  | 535      |
| Inflation pressure.....                                       | 497      |
| Replacing.....                                                | 535      |
| Rotating tires.....                                           | 488      |
| Size .....                                                    | 569      |
| Snow tires.....                                               | 388      |
| Spare tire.....                                               | 535, 569 |
| Tire pressure warning system.....                             | 489      |
| Warning light.....                                            | 525      |
| Tools .....                                                   | 535      |
| Total load capacity.....                                      | 562      |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## Towing

|                                  |     |
|----------------------------------|-----|
| Dinghy towing .....              | 210 |
| Emergency towing .....           | 515 |
| Towing eyelet .....              | 517 |
| Trailer Sway Control .....       | 383 |
| Trailer towing .....             | 193 |
| TRAC (Traction Control) .....    | 383 |
| Trailer Sway Control .....       | 383 |
| Trailer towing .....             | 193 |
| Transmission                     |     |
| Automatic transmission .....     | 216 |
| Downshift restriction warning    |     |
| buzzer .....                     | 221 |
| Driving mode select switch ..... | 290 |
| If the shift lever cannot be     |     |
| shifted from P .....             | 221 |
| Paddle shift switches .....      | 218 |
| Trip meters .....                | 93  |
| Troubleshooting .....            | 612 |
| Turn signal lights .....         | 223 |
| Replacing light bulbs .....      | 510 |
| Turn signal lever .....          | 223 |

## U

|                                   |     |
|-----------------------------------|-----|
| USB port*                         |     |
| Utility vehicle precautions ..... | 392 |

## V


|                                       |     |
|---------------------------------------|-----|
| Vanity lights .....                   | 437 |
| Vanity lights .....                   | 437 |
| Vanity mirrors .....                  | 437 |
| Vehicle data recordings .....         | 9   |
| Vehicle identification number .....   | 563 |
| Vehicle Stability Control (VSC) ..... | 383 |
| Ventilators (seat ventilators) .....  | 421 |
| VSC (Vehicle Stability Control) ..... | 383 |

## W

|                                   |     |
|-----------------------------------|-----|
| Warning buzzers .....             | 523 |
| Approach warning .....            | 282 |
| Brake system .....                | 523 |
| Downshifting .....                | 221 |
| Driver's seat belt reminder ..... | 525 |
| Front passenger's seat belt       |     |
| reminder .....                    | 525 |
| Intuitive parking assist .....    | 296 |
| Lane departure .....              | 271 |
| Master warning system .....       | 525 |
| Open back door .....              | 525 |
| Open door .....                   | 525 |
| Open moon roof .....              | 176 |
| Parking brake .....               | 526 |
| PCS .....                         | 524 |
| Power steering system .....       | 525 |
| Radar cruise control .....        | 282 |
| Seat belt reminder .....          | 525 |

|                                 |          |                                  |          |
|---------------------------------|----------|----------------------------------|----------|
| Warning lights .....            | 523      | Warning messages.....            | 531      |
| ABS.....                        | 523      | Warning reflector holder.....    | 434      |
| Automatic headlight leveling    |          | Washer .....                     | 237, 241 |
| system .....                    | 524      | Checking .....                   | 487      |
| Brake system.....               | 523, 526 | Preparing and checking           |          |
| Center differential lock.....   | 525      | before winter .....              | 388      |
| Charging system.....            | 523      | Switch .....                     | 237, 241 |
| Low fuel level .....            | 525      | Washing and waxing .....         | 460      |
| Low speed four-wheel            |          | Weights .....                    | 562      |
| drive .....                     | 525      | Wheels .....                     | 501      |
| Malfunction indicator lamp..... | 523      | Replacing wheels .....           | 535      |
| Master warning light.....       | 525      | Size .....                       | 569      |
| Open door.....                  | 525      | Window glasses.....              | 171      |
| Parking brake.....              | 525      | Window lock switch.....          | 171      |
| PCS.....                        | 524      | Windows                          |          |
| Power steering system.....      | 525      | Power windows.....               | 171      |
| Seat belt reminder light.....   | 525      | Rear window defogger .....       | 411      |
| Slip indicator.....             | 524      | Washer .....                     | 237, 241 |
| SRS.....                        | 523      | Windshield wiper de-icer .....   | 411      |
| Tire pressure .....             | 525      | Windshield wipers .....          | 237      |
|                                 |          | Winter driving tips .....        | 388      |
|                                 |          | Wireless charger.....            | 441      |
|                                 |          | Wireless remote control key..... | 116      |
|                                 |          | Locking/Unlocking .....          | 116      |
|                                 |          | Panic mode .....                 | 117      |
|                                 |          | Replacing the battery .....      | 505      |
|                                 |          | WMA disc*                        |          |

\*: Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".
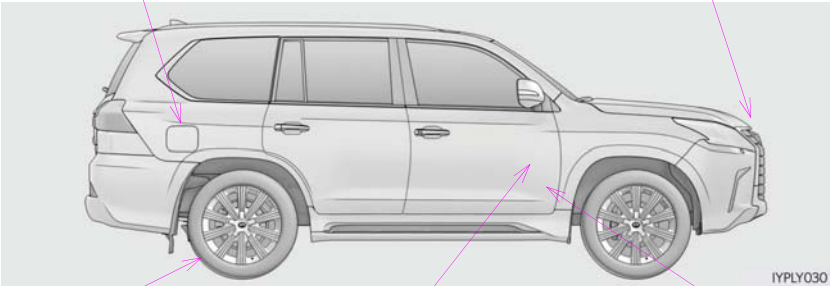
| GAS STATION INFORMATION                                                            |                                                                                         |                                   |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|-----------------------------------|
| Fuel filler door<br>P. 246                                                         | Auxiliary catch lever<br>P. 474                                                         |                                   |
|  |                                                                                         |                                   |
| Tire inflation pressure<br>P. 569                                                  | Fuel filler door opener<br>P. 246                                                       | Hood lock release lever<br>P. 474 |
| Fuel tank capacity<br>(Reference)                                                  | 24.5 gal. (93 L, 20.4 Imp.gal.)                                                         |                                   |
| Fuel type                                                                          | Unleaded gasoline only<br>P. 564                                                        |                                   |
| Cold tire inflation pressure                                                       | P. 569                                                                                  |                                   |
| Engine oil capacity<br>(Drain and refill – reference)                              | With filter 7.9 qt. (7.5 L, 6.6 Imp.qt.)<br>Without filter 7.5 qt. (7.1 L, 6.2 Imp.qt.) |                                   |
| Engine oil type                                                                    | “Toyota Genuine Motor Oil” or equivalent<br>P. 564                                      |                                   |