

**2014
Yaris Liftback
Quick Reference Guide**

2014 Yaris Liftback

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6

FEATURES/OPERATIONS

Air Conditioning/Heating	13
Automatic Transmission	8
Clock	14
Cruise control	13
Cup holders	15
Door-Back	15
Light control-Instrument panel	9
Lights & turn signals	9
Multi-Information Display	15
Parking brake	8
Power outlet	11
Seat adjustments-Front	10
Seat-Folding rear seat	10-11
Seats-Head restraints	11
Steering wheel switches	14
Tilt steering wheel	8
USB port/AUX port	14
Windows-Power	12
Windshield wipers & washers	12

SAFETY AND


EMERGENCY FEATURES

Door locks-Power	16
Floor mat installation	19
Seat belts	16
Spare tire & tools	17
Star Safety System™	18-19
Tire Pressure Monitoring (warning) System	16

* Visit your Toyota dealer for information on customizing this feature.

OVERVIEW

Instrument panel

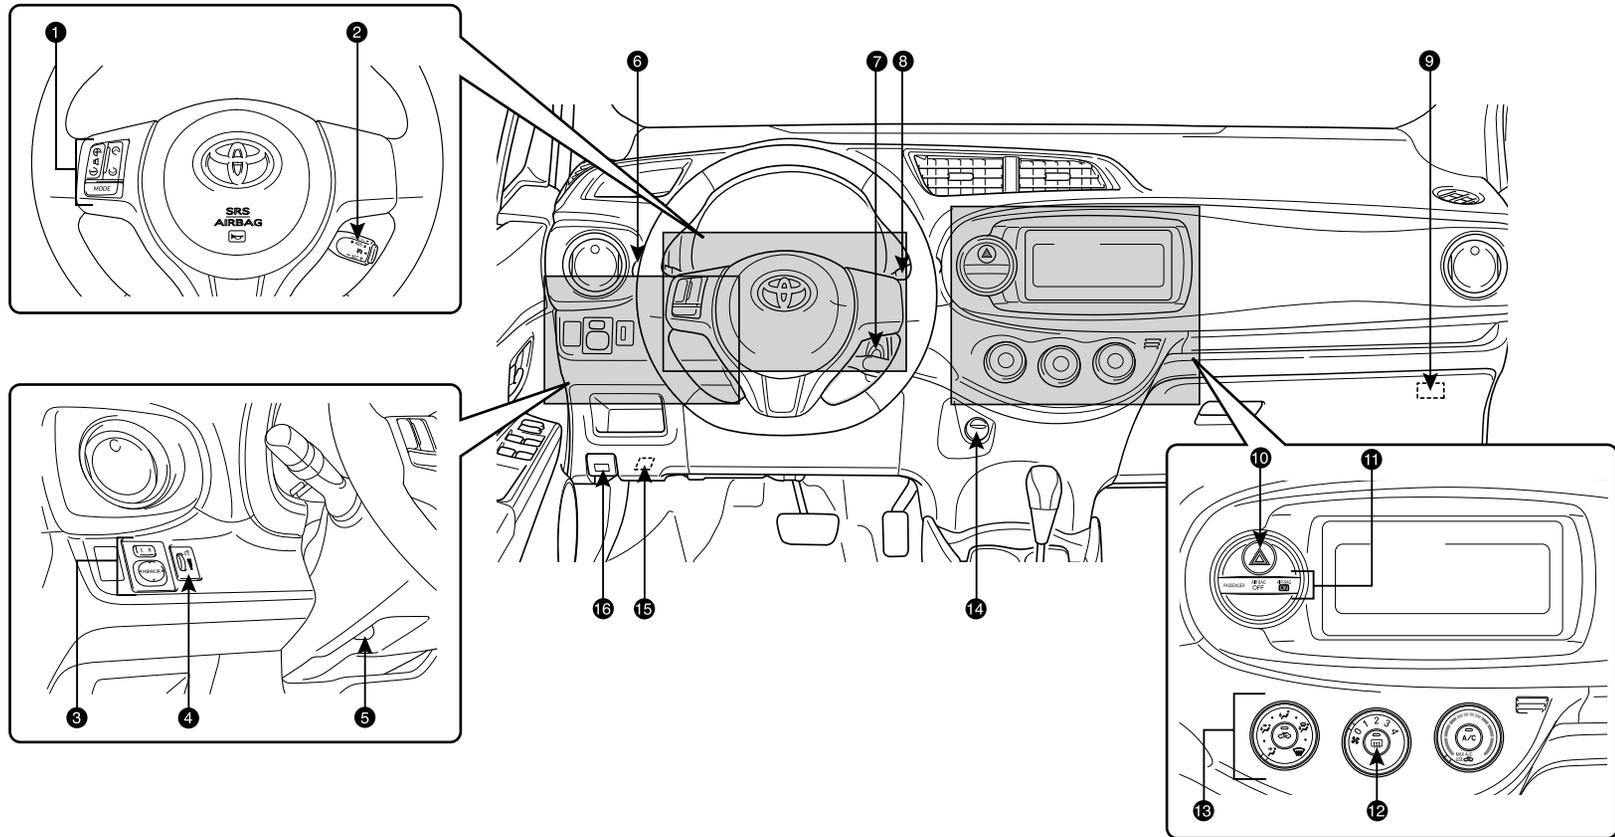


- ❶ Steering wheel audio controls^{1,2}
- ❷ Cruise control¹
- ❸ Power outside rearview mirror control switches¹
- ❹ Instrument panel light control
- ❺ Tilt steering lock release lever
- ❻ Headlight, turn signal and front fog light¹ controls
- ❼ Ignition switch
- ❽ Wiper and washer controls

- ❾ USB port/AUX port¹
- ❿ Emergency flasher switch
- ⓫ "AIR BAG ON" and "AIR BAG OFF" indicator
- ⓬ Rear window defogger switch
- ⓭ Air Conditioning controls
- ⓮ 12V DC Power outlet
- ⓯ Tire Pressure Monitoring (warning) System
- ⓰ Hood release

¹ If equipped

² Refer to the *Toyota Audio System Owner's Manual* or the *Navigation System Owner's Manual* for more details.

Instrument cluster

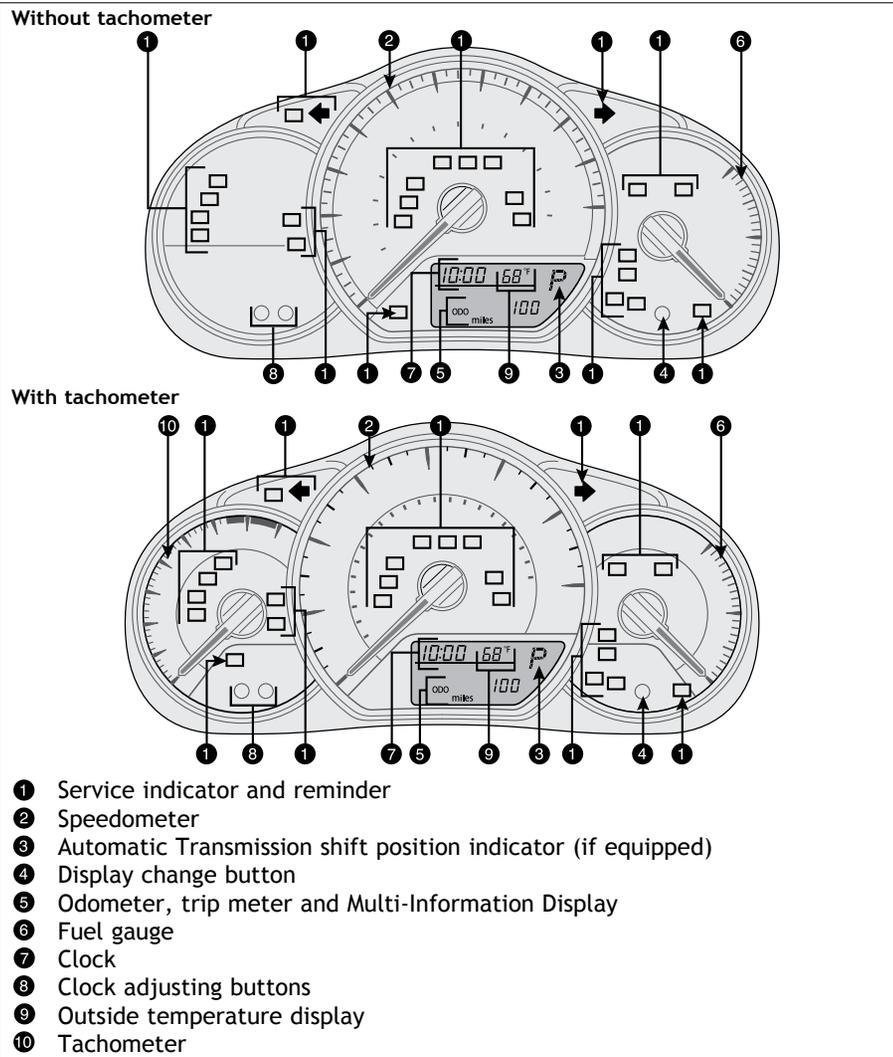

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

-  Brake system warning¹
-  Driver seat belt reminder (alarm will sound if speed is over 12 mph)

-  Eco Driving Indicator Light¹
-  Charging system warning¹
-  Malfunction/Check Engine indicator¹
-  Low engine oil pressure warning¹
-  Open door warning
-  Airbag SRS warning¹
-  Low windshield washer fluid warning
-  Electric power steering system warning¹
-  Low fuel level warning
-  Engine oil replacement reminder¹
-  AIR BAG ON indicator
-  AIR BAG OFF indicator¹
-  VSC OFF indicator¹
-  TRAC OFF indicator¹
-  Headlight high beam indicator
-  Front fog light indicator
-  Turn signal indicator
-  High engine coolant temperature warning¹
-  Low engine coolant temperature indicator
-  Slip indicator¹
-  Cruise control indicator²
-  Cruise control SET indicator
-  Anti-lock Brake System warning¹
-  Low Tire Pressure Warning¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² For details, refer to “Cruise control” Section 2-4, 2014 Owner’s Manual.

Fuel tank door release and cap

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “CHECK” indicator may illuminate.

Keyless entry (if equipped)

Locking operation

Type A Type B

Push

Unlocking operation

Type A Type B

Push ONCE: Driver door
TWICE: All doors

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Panic button

Push and hold

Hood release

Pull

Pull up latch and raise hood

Engage support rod


Engine maintenance

- ① Windshield washer and rear window washer fluid tank
- ② Engine oil filler cap
- ③ Engine oil level dipstick
- ④ Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”


FEATURES/OPERATIONS

Automatic Transmission (if equipped)

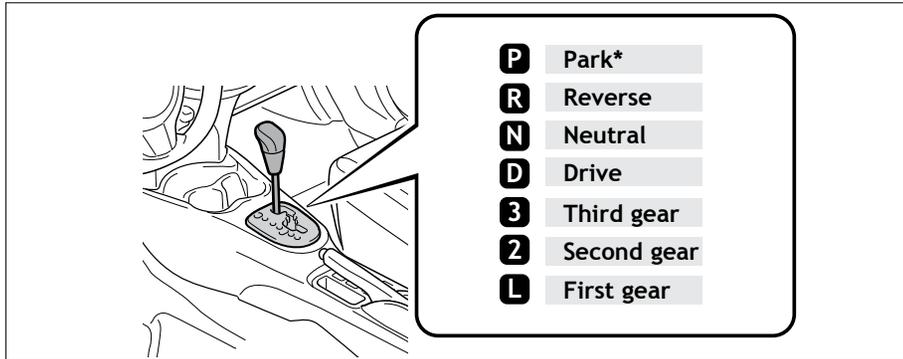

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park. Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt steering wheel

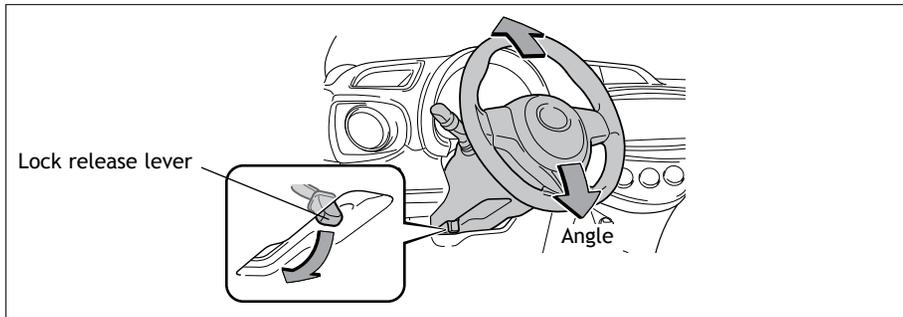


Hold wheel, push lever down, set angle and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

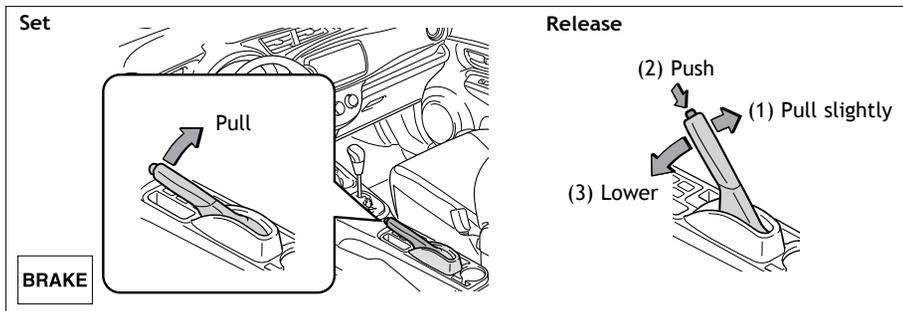


Light control-Instrument panel

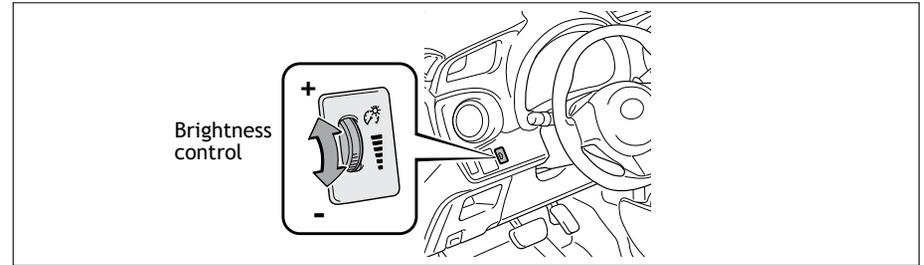


Lights & turn signals

Headlights



Type A

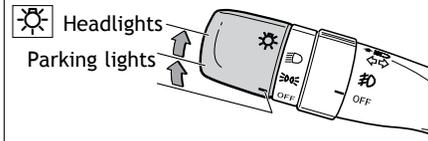


Type B

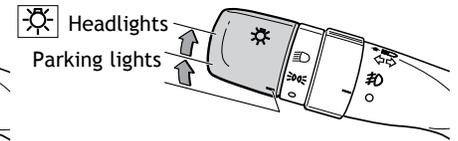

Type C

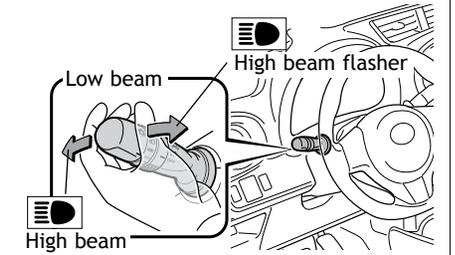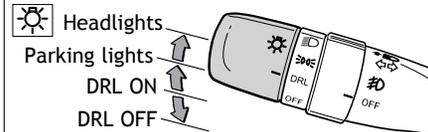


Turn signals

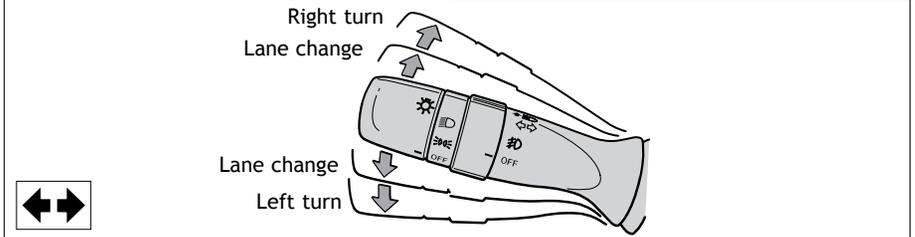


Front fog lights (if equipped)

Type A

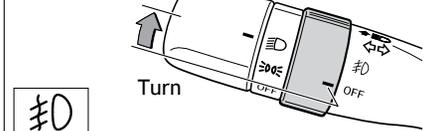


Type B

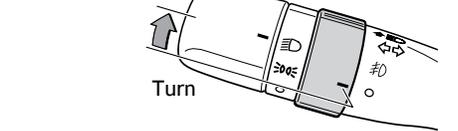


Front fog lights turn on only when the headlights are on low beam.


Seat adjustments-Front

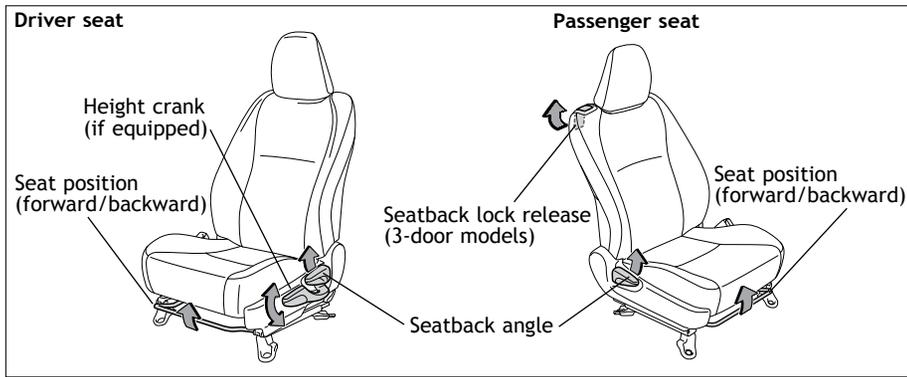


Seat-Folding rear seat

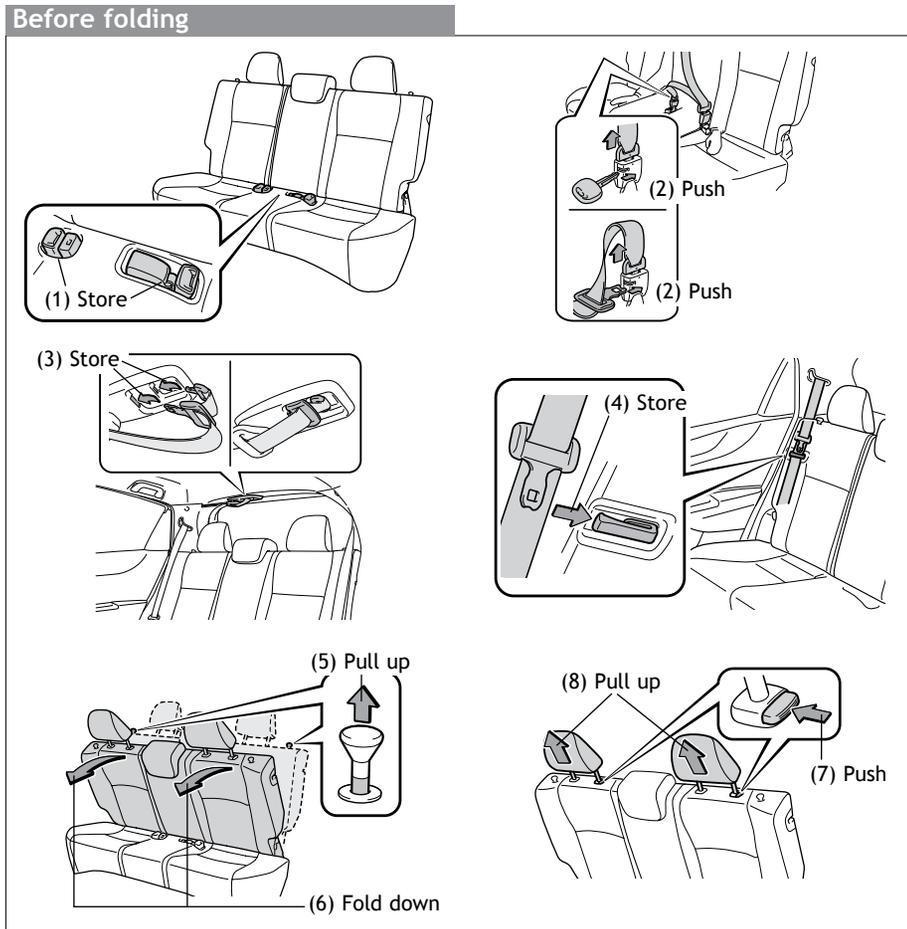


Fold (split seat)

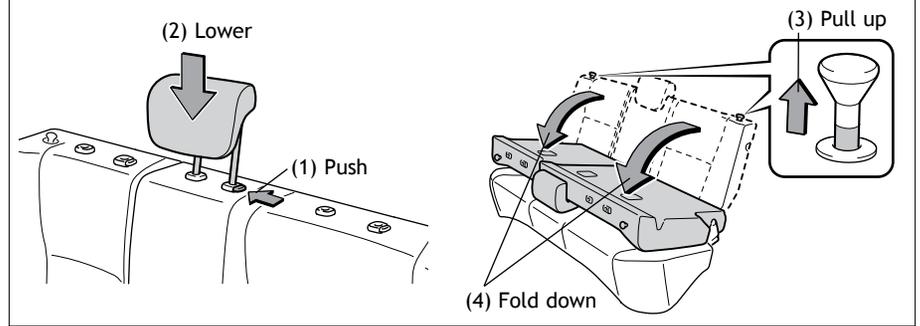


Fold (non-split seat)

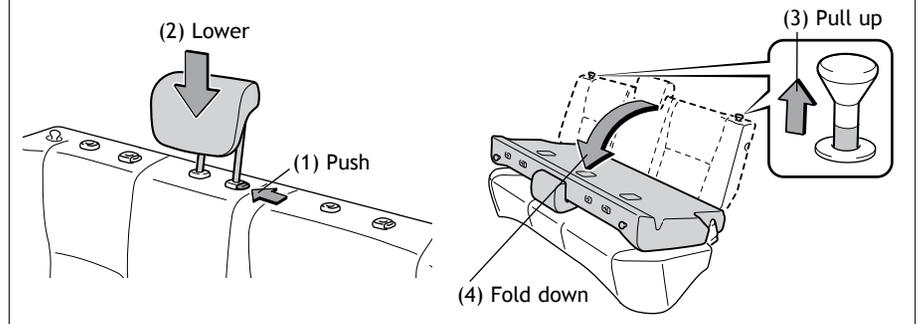

Seats-Head restraints

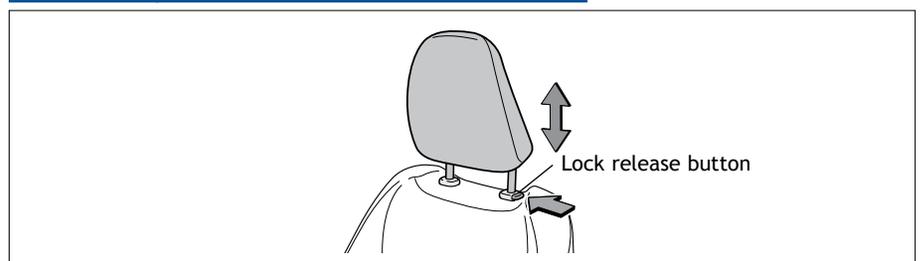


Power outlet

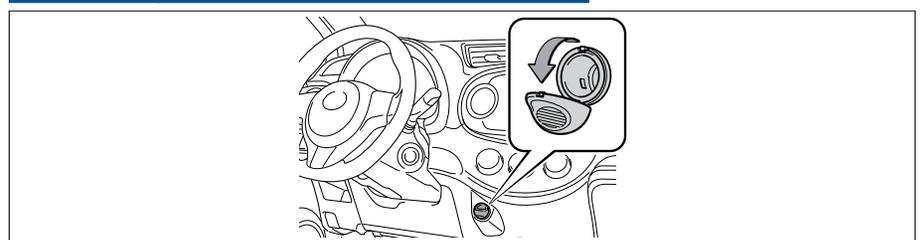

Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.



Windows-Power (if equipped)

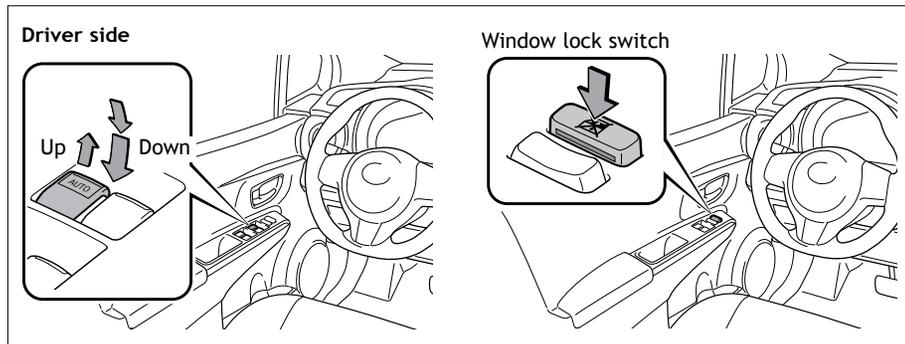


Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop window partway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windshield wipers & washers

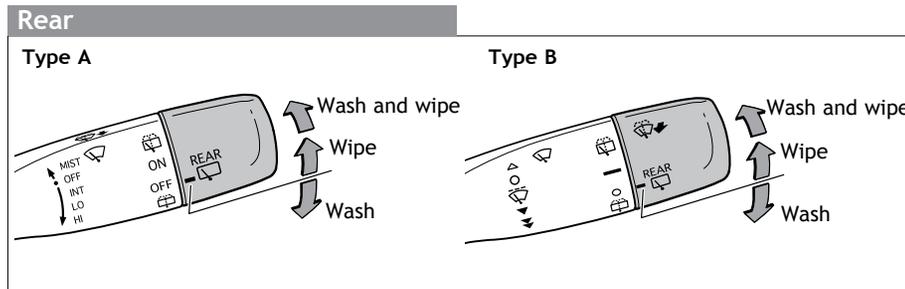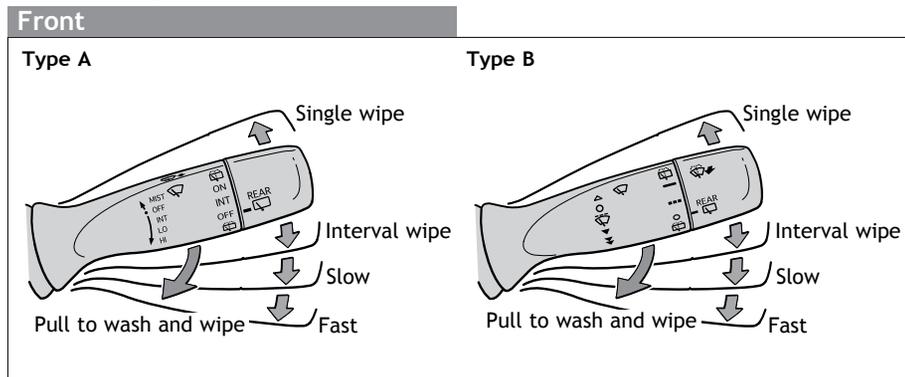


Air Conditioning/Heating

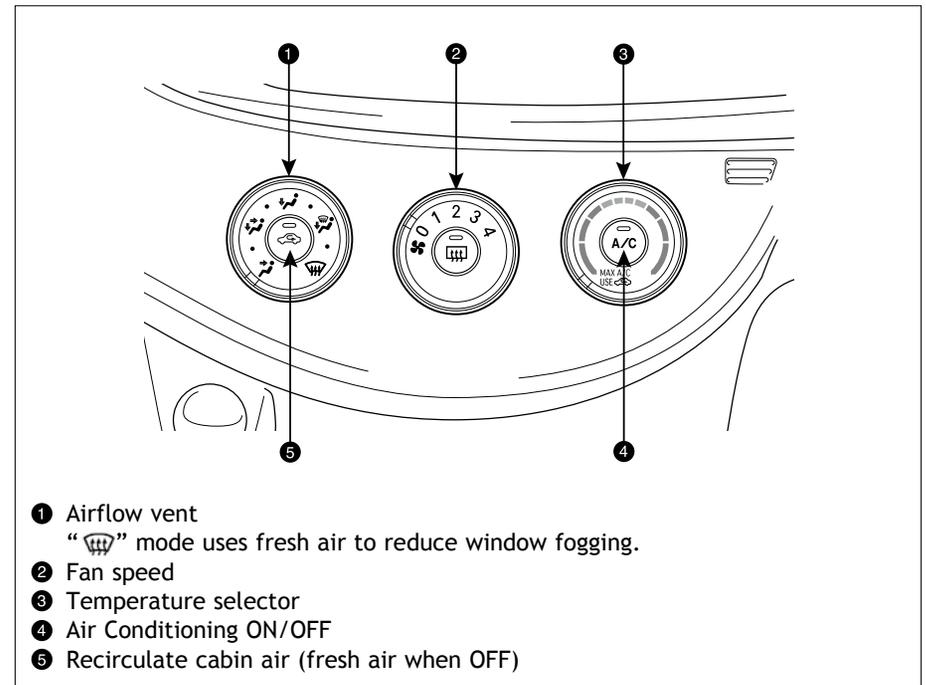

- 1 Airflow vent
“” mode uses fresh air to reduce window fogging.
- 2 Fan speed
- 3 Temperature selector
- 4 Air Conditioning ON/OFF
- 5 Recirculate cabin air (fresh air when OFF)

Cruise control (if equipped)

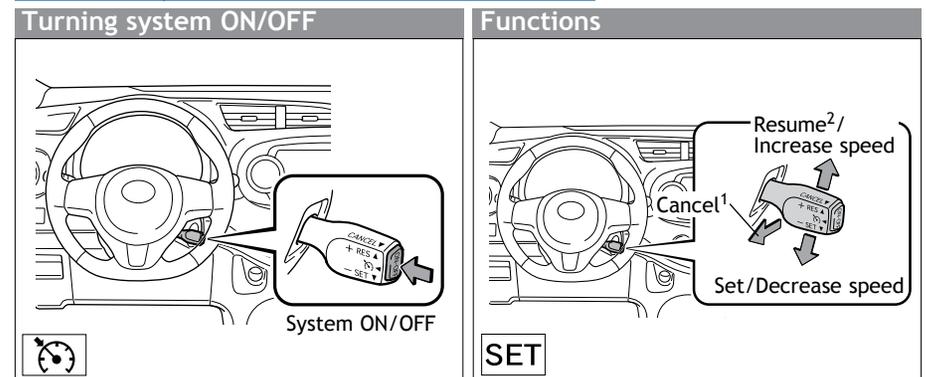


¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (Manual Transmission).

² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

USB port/AUX port (if equipped)

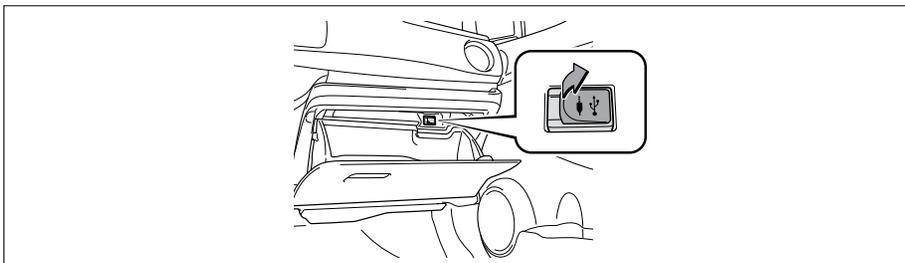

USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Refer to the *Toyota Audio or Navigation System Owner's Manual* for more details.

Steering wheel switches (if equipped)

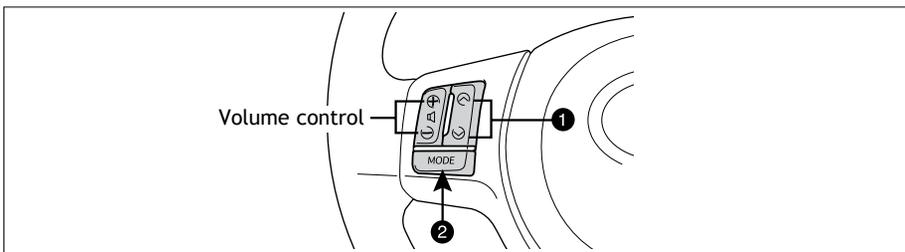

1 "V ^"


-In radio mode Push to select a preset station; push and hold to seek the next strong station.
-In CD mode Push to skip up or down to a next/previous track.

2 "MODE"


Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Refer to the *Toyota Audio or Navigation System Owner's Manual* for more details.

Clock

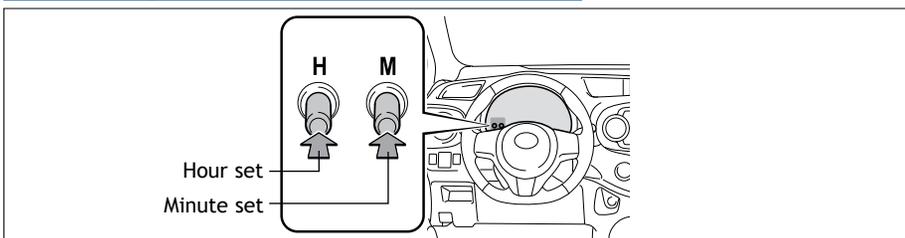

Multi-Information Display

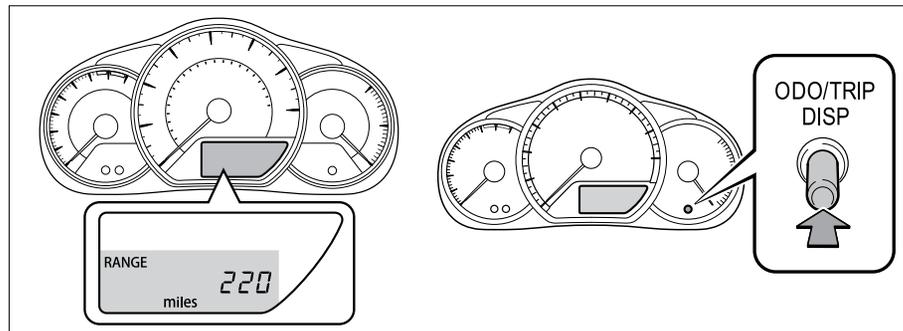


Push button to change information in the following succession:

- (1) Odometer
- (2) Trip meters
- (3) Current gas mileage (MPG)
- (4) Average gas mileage (AVG/MPG)
- (5) Miles left on remaining fuel (RANGE/MI)
- (6) Average vehicle speed from engine start (AVG/MPH)

Door-Back


Open/Close

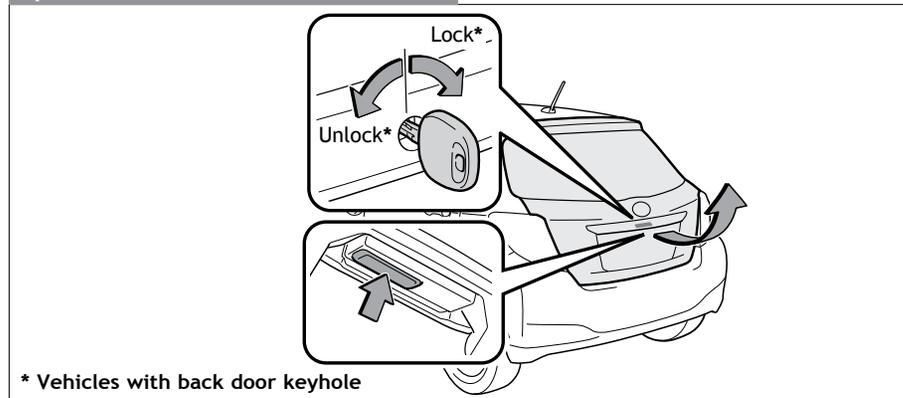


* Vehicles with back door keyhole

Cup holders

Front

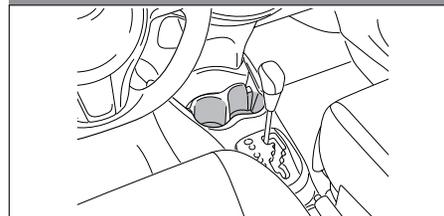


Rear

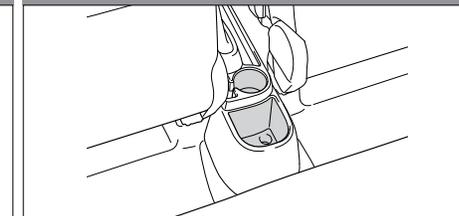


SAFETY AND EMERGENCY FEATURES

Door locks-Power

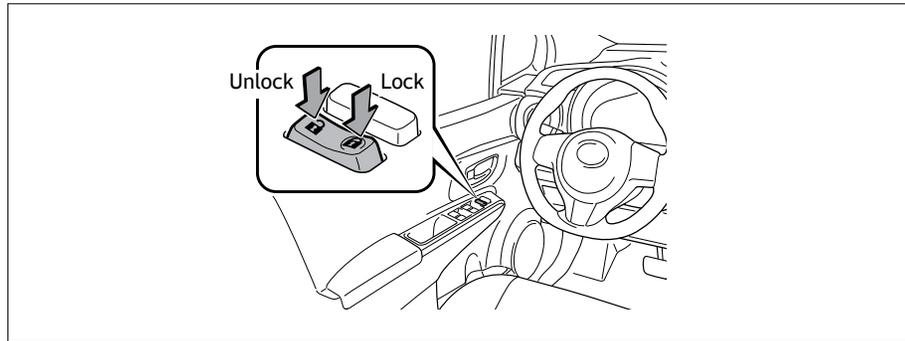

Seat belts

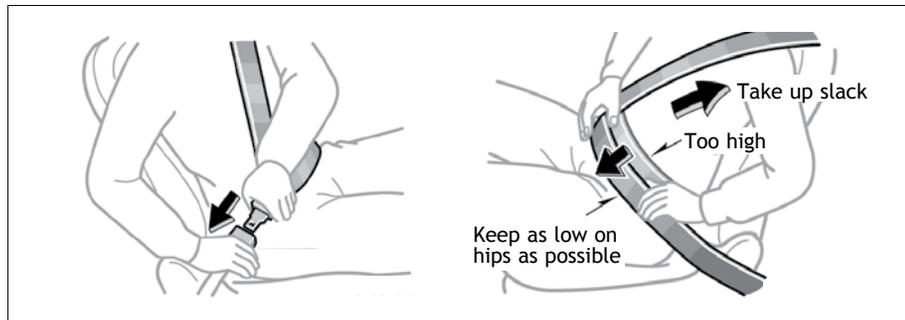

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Tire Pressure Monitoring (warning) System

If tire pressure becomes critically low on any of the tires (excluding the spare), “(L)” indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

Spare tire & tools

Tool location

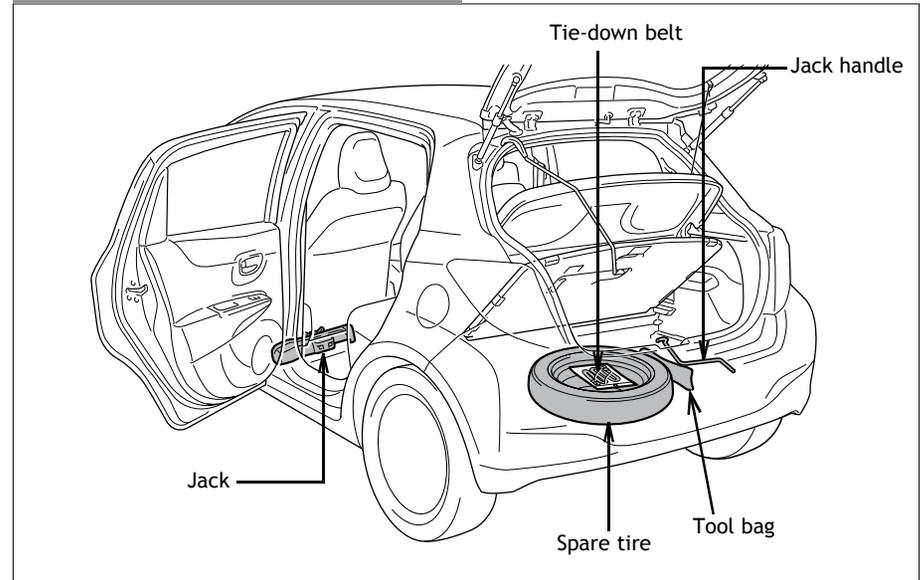

Removing the spare tire

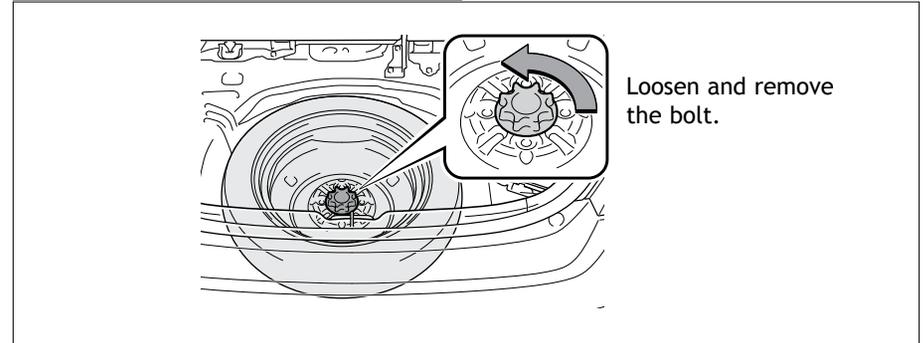

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

