



 **TOYOTA OWNERS**

CUSTOMER EXPERIENCE CENTER
1-800-331-4331

**YARIS
HATCHBACK**

2 0 1 7



QUICK REFERENCE GUIDE



Printed in U.S.A. 8/16
16-MKG-09536



2017

YARIS HB

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris HB.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Yaris HB operations. Every Yaris HB owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6

FEATURES & OPERATIONS

Air conditioning/heating	13
Audio	16
Automatic transmission	8
Clock	14
Cruise control	11
Door-Back	16
Door locks-Power	15
Light control-Instrument cluster	15
Lights & turn signals	9
Multi-Information Display (MID)	14
Pairing a Bluetooth® Device	16
Parking brake	8
Power outlet	14
Seat adjustments-Front	11
Seat-Folding rear seat	12
Seats-Head restraints	11
Steering wheel switches	15
Tilt steering wheel	8
USB/AUX port	15
Windows-Power	10
Windshield wipers & washers	10

TOYOTA SAFETY SENSE


Auto High Beams (AHB)	22
Lane Departure Alert (LDA)	20-21
Pre-Collision System (PCS)	18-19
Quick overview-	
Toyota Safety Sense C	17
Sensors	17


SAFETY & EMERGENCY FEATURES

Doors-Child safety locks	23
Floor mat installation	26
Seat belts	23
Spare tire & tools	24
Star Safety System™	25-26
Tire Pressure Monitoring (warning) System (TPMS)	24

* Visit your Toyota dealer for information on customizing this feature.

Instrument panel

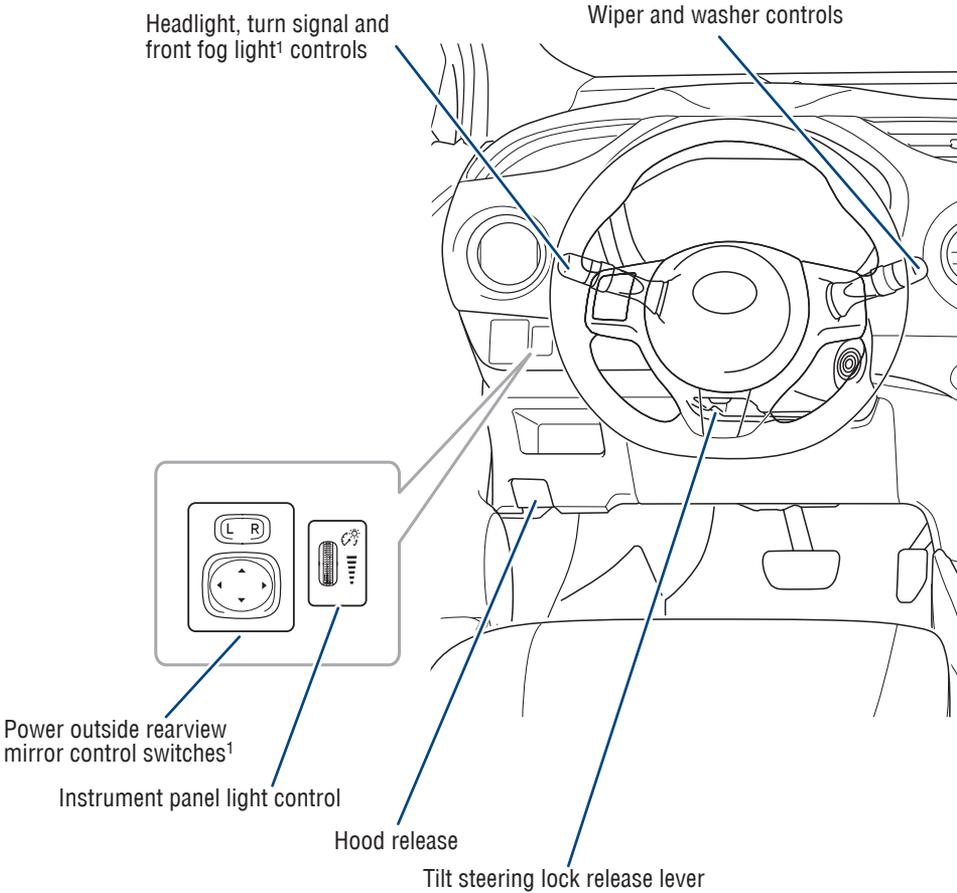

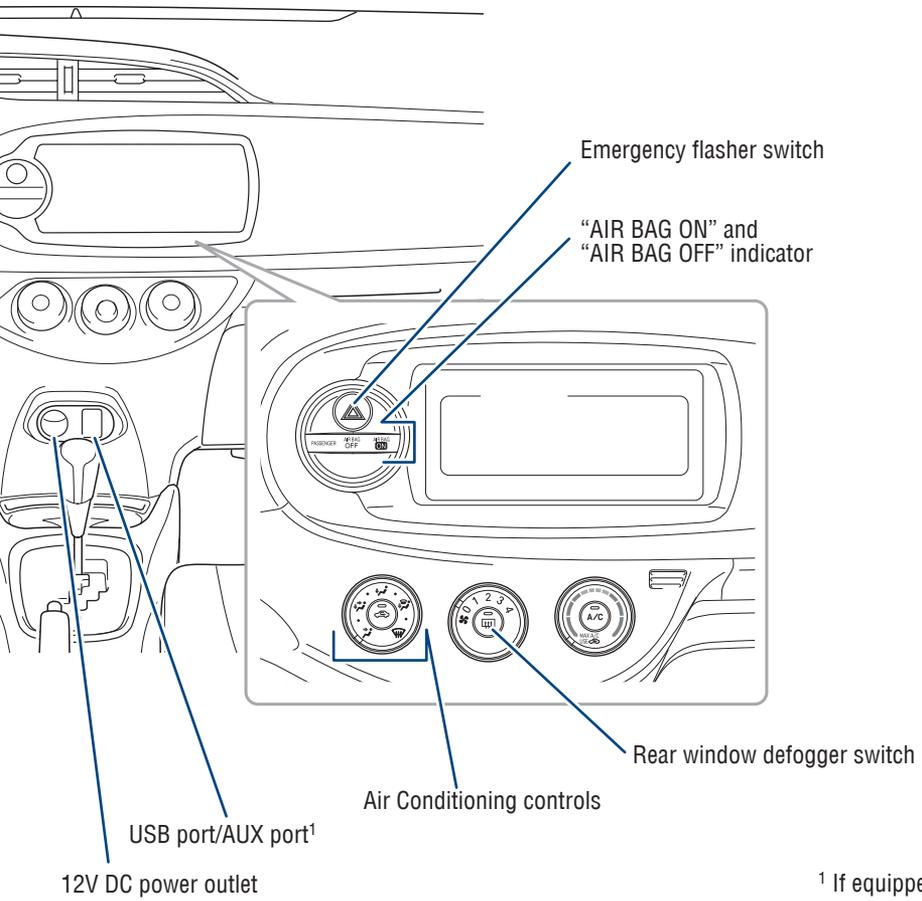


¹ If equipped.


OVERVIEW

Instrument cluster

WITH TACHOMETER & FUEL GAUGE

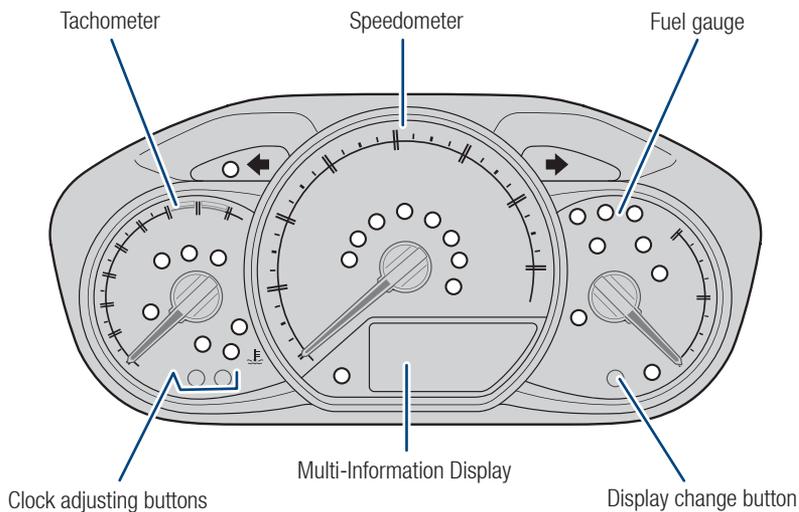

WITHOUT TACHOMETER & FUEL GAUGE

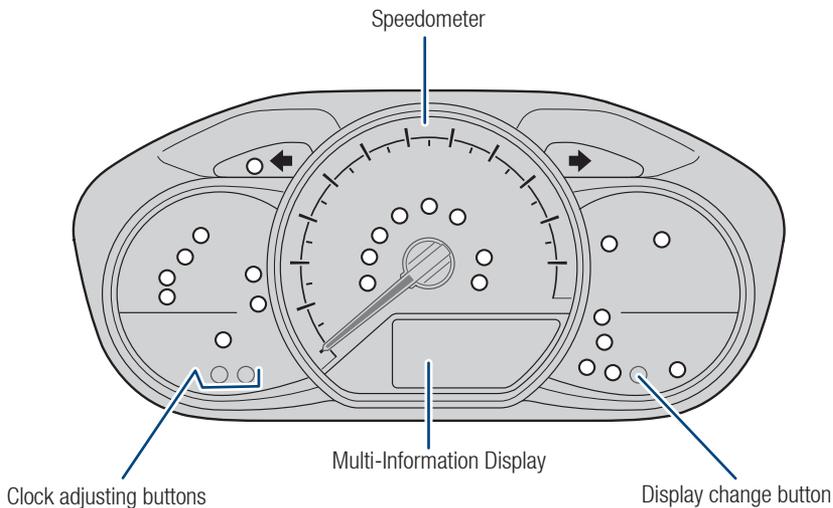

○ Service indicators and reminders

¹ If indicator does not turn off within a few seconds of starting the engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

Instrument symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2017 Owner's Manual.

 Brake system warning ¹	 Pre-Collision System (PCS) warning ¹
 Malfunction/Check Engine indicator ¹	 Pre-Collision System (PCS) activator indicator
 Maintenance required warning ¹	 Lane Departure Alert (LDA) indicator
 Low Tire Pressure Warning ^{1,3}	 Lane marker indicators
 Electric power steering system warning ¹	
 Anti-lock Brake System warning ¹	 Charging system warning ¹
	 Low engine oil pressure warning ¹
 AIR BAG ON indicator	 Low fuel level warning
 AIR BAG OFF indicator ¹	 Arrow direction indicates fuel tank door position
 Driver seat belt reminder (speeds over 12 mph sounds alarm)	 Open door warning
	 Engine coolant temperature warning ¹
 Vehicle Stability Control (VSC) OFF indicator ¹	 Low windshield washer fluid warning
 TRAC OFF indicator ¹	
 Slip indicator ¹	
 Cruise control indicator/ Cruise control SET indicator ²	
 Headlight high beam indicator	
 Automatic high beam indicator	
 Front fog light indicator	
 Turn signal indicator	


² If this light flashes, refer to "Cruise control" or "Dynamic Radar Cruise Control," Section 4-5, 2017 Owner's Manual.

³ If equipped.


OVERVIEW

Keyless entry (if equipped)*

LOCKING OPERATION

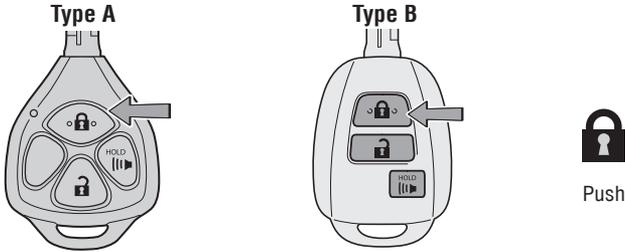

UNLOCKING OPERATION

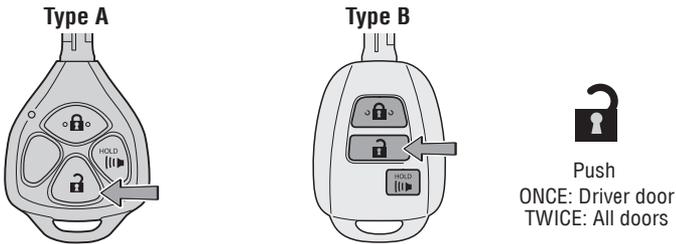


* Engine immobilizer feature if equipped. As an anti-theft feature, the vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer. *Please refer to the Owner's Manual for more details.*

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

PANIC BUTTON




Fuel tank door release and cap

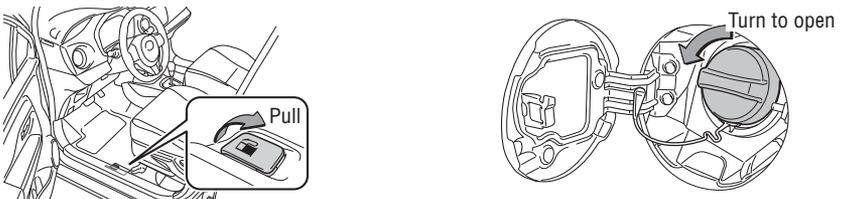


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Hood release

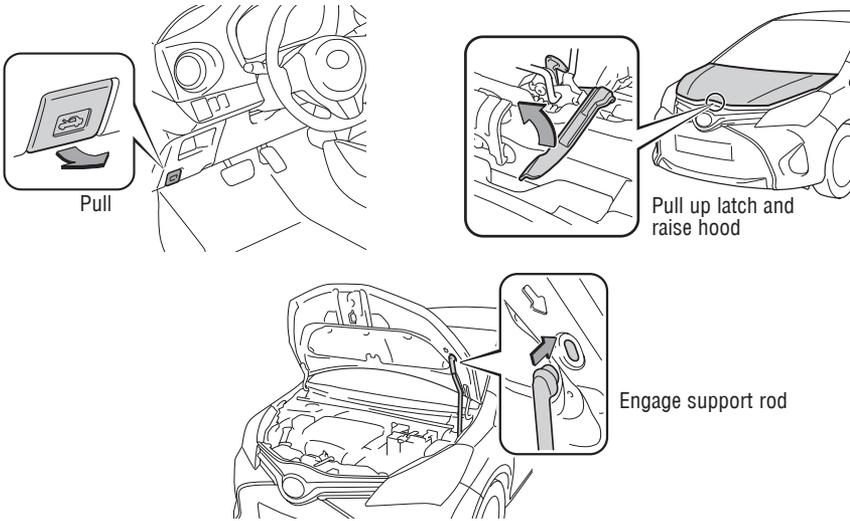


Engine maintenance

Engine oil filler cap

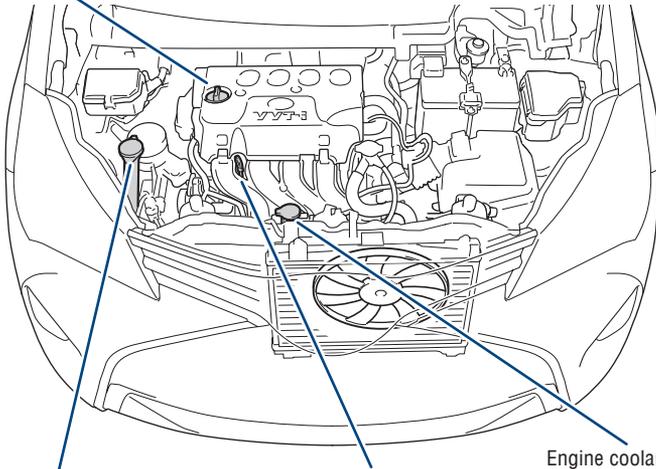

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. *Please refer to the "Warranty Maintenance Guide."*

Automatic transmission

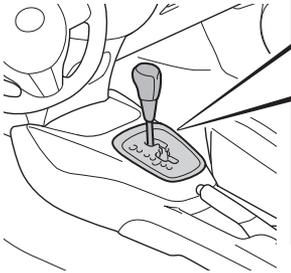


- P** Park*
- R** Reverse
- N** Neutral
- D** Drive
- 3** Third gear
- 2** Second gear
- L** First gear

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Tilt steering wheel

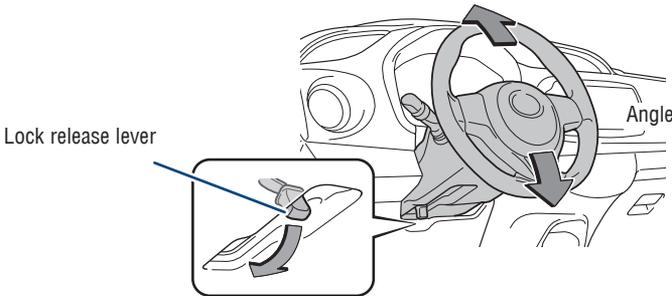


Hold wheel, push lever down, set angle and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

Set

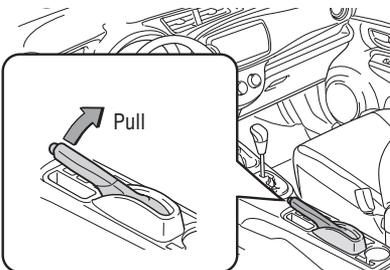

Release

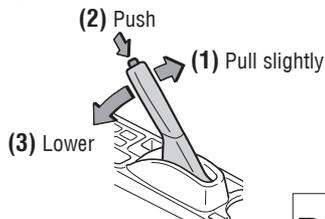


BRAKE


Lights & turn signals

HEADLIGHTS



Type A

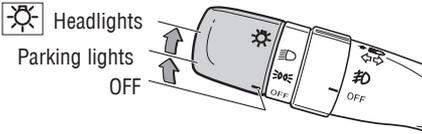



Type B

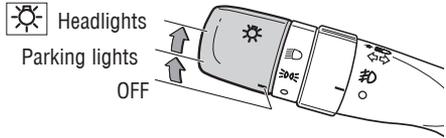

Type C

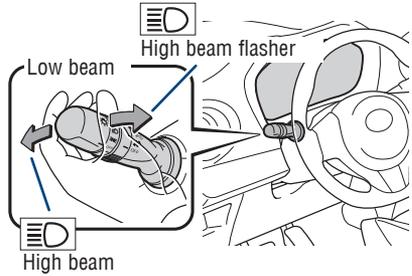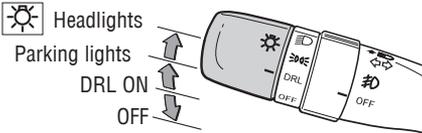


TURN SIGNALS

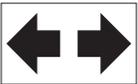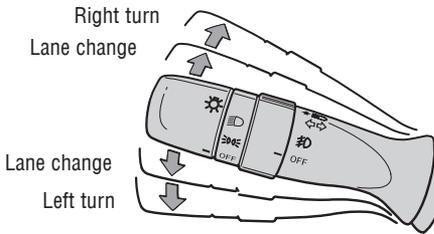


FRONT FOG LIGHTS (IF EQUIPPED)

Type A

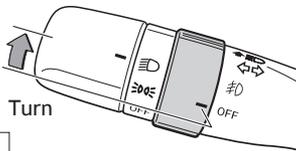

Type B

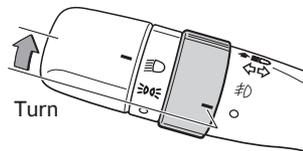


Front fog lights turn on only when the headlights are on low beam.

FEATURES & OPERATIONS


Windshield wipers & washers

FRONT

Type A

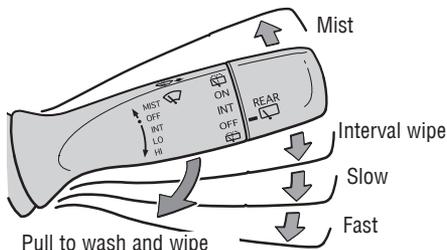


Type B

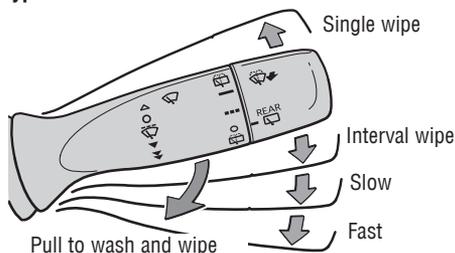


REAR

Type A

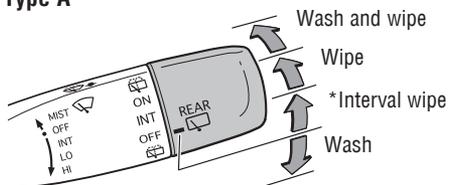


Type B

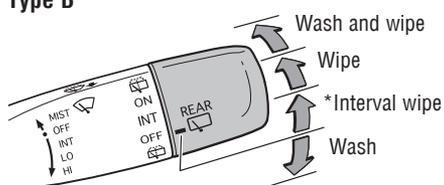


* If equipped

Windows-Power

Driver side

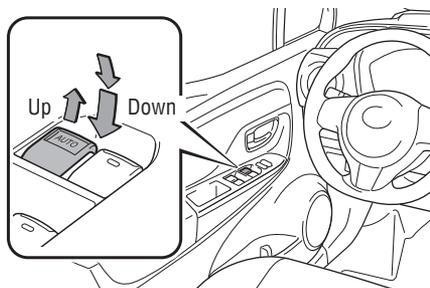

Window lock switch

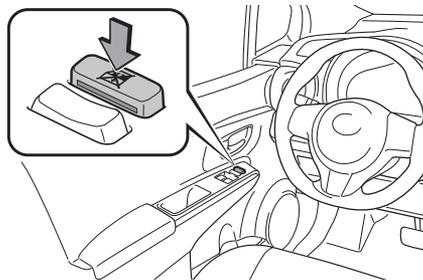



Automatic operation (driver's window only) Push the switch completely down and release to fully open. To stop window partway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Cruise control (if equipped)

TURNING SYSTEM ON/OFF

FUNCTIONS

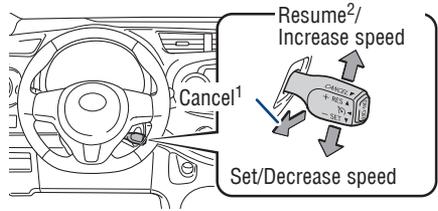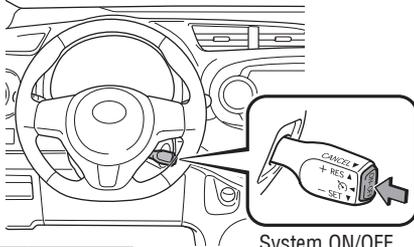


¹ The set speed may also be cancelled by depressing the brake pedal or the clutch pedal (manual transmission).

² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.


Refer to the Owner's Manual for more details.

Seat adjustments-Front


Driver seat

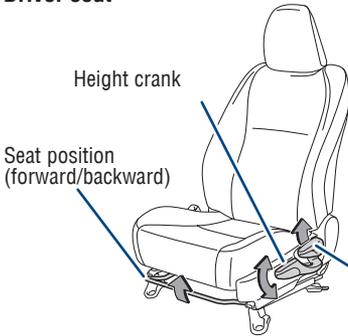

Passenger seat

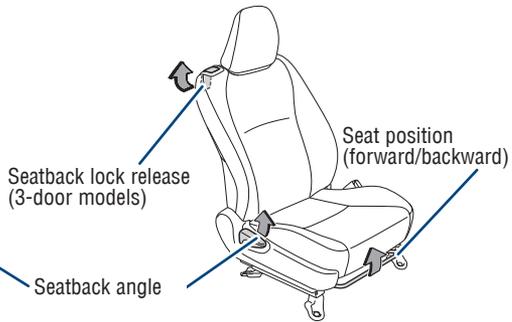







Seats-Head restraints

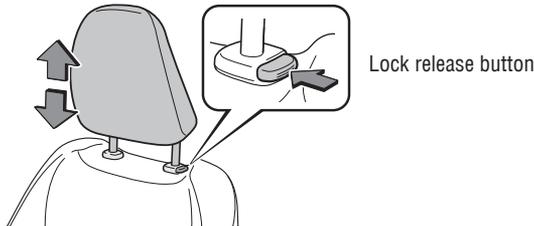



FEATURES & OPERATIONS

Seat-Folding rear seat

BEFORE FOLDING

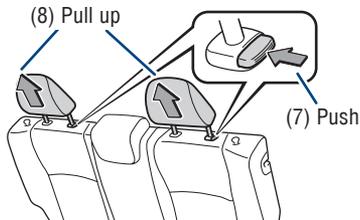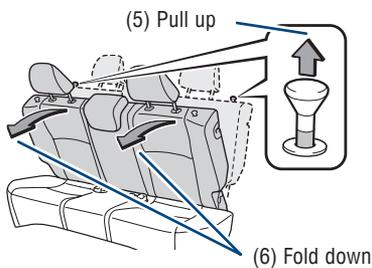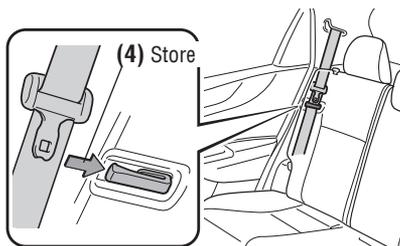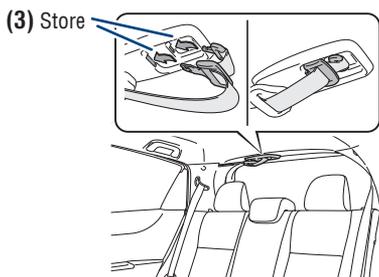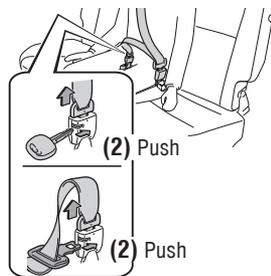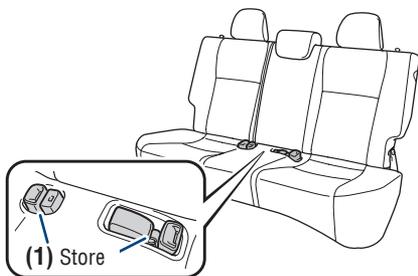


FOLD (SPLIT SEAT)

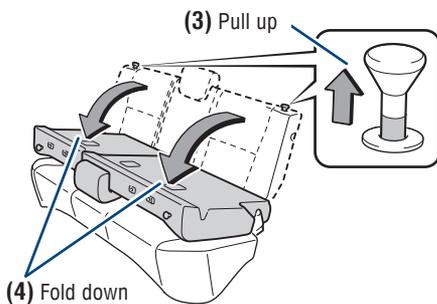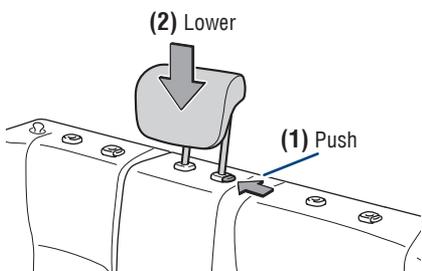


Air conditioning/heating

WITH AIR CONDITIONING ON/OFF BUTTON

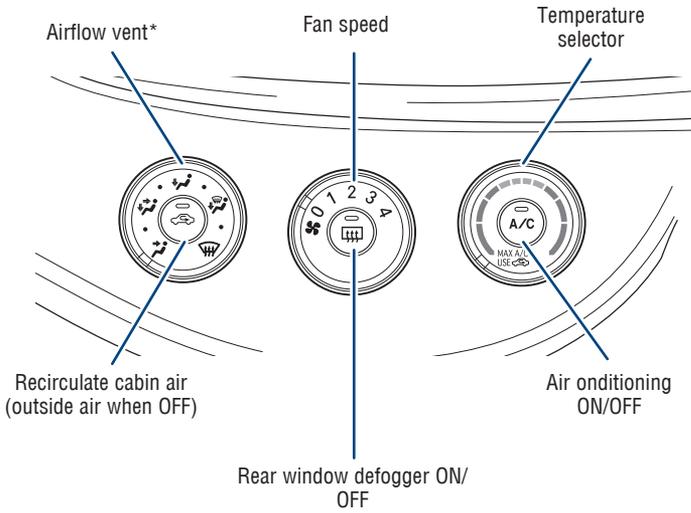


WITHOUT AIR CONDITIONING ON/OFF BUTTON

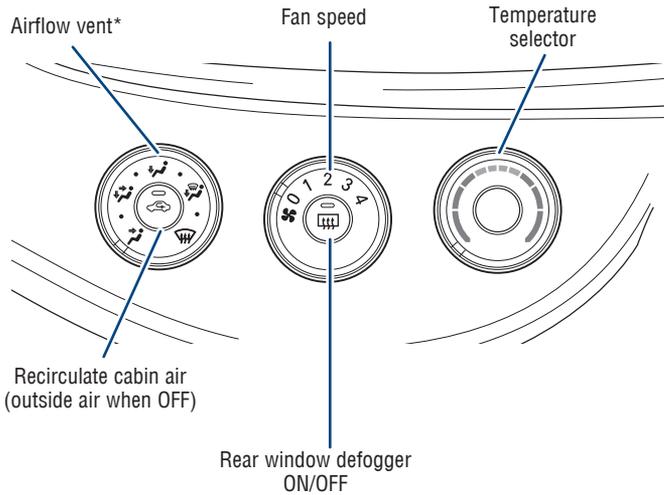

*“” mode uses outside air to reduce window fogging

FEATURES & OPERATIONS


Multi-Information Display (MID)

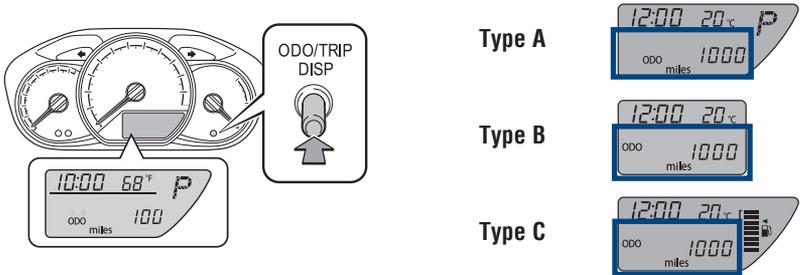


Push button to change information in the following succession (shown in box indicated above):

- (1) Odometer
- (2) Trip meters
- (3) Miles left on remaining fuel (RANGE/MI)
- (4) Average gas mileage (AVG/MPG)
- (5) Current gas mileage (MPG)
- (6) Average vehicle speed from engine start (AVG/MPH)

Clock

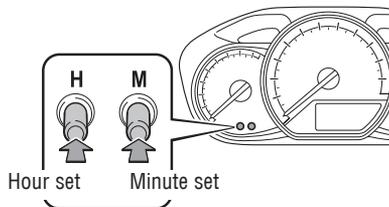


Power Outlet

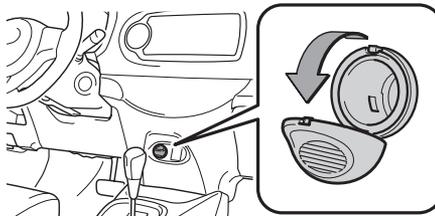


Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.

Light control-Instrument cluster

Brightness control

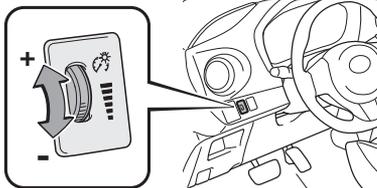

USB/AUX port (if equipped)

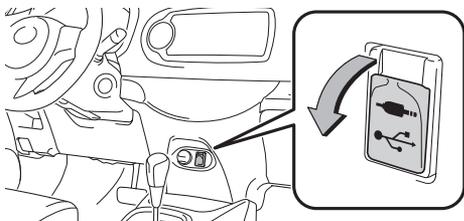

USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Steering wheel switches (if equipped)

Volume control

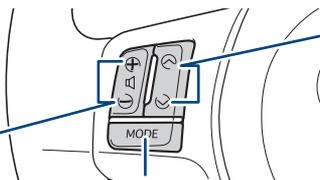


Push to turn audio ON and select an audio mode.
Push and hold to turn the audio system OFF.

-In radio mode Push to select a preset station; push and hold to seek the next strong station.

-In CD mode Push to skip up or down to a next/previous track.

Door locks-Power


Unlock – Lock

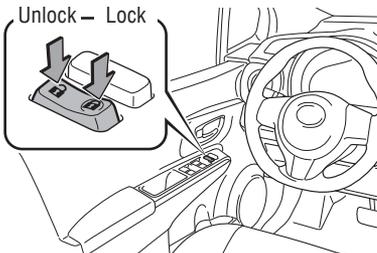

FEATURES & OPERATIONS

Audio

YARIS ENTUNE™ AUDIO

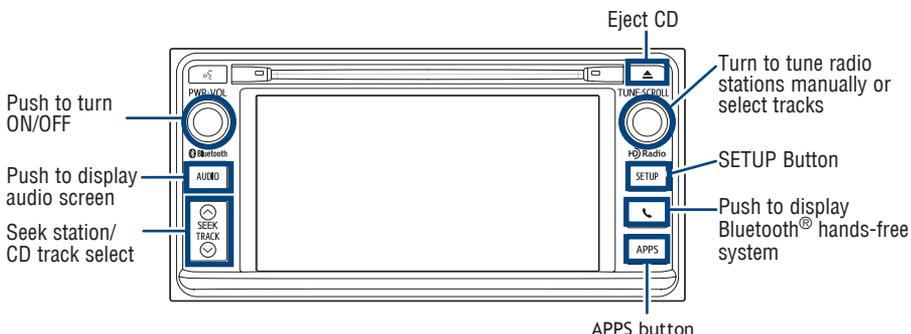

NOTE: Concentrating on the road should always be your first priority while driving. Do not use the Entune system if it will distract you.

Pairing a Bluetooth® Device

**** Do not attempt the Bluetooth® Pairing process while driving. ****


1. Press the “SETUP” button
2. Touch “Bluetooth” on the “Setup” screen
3. Touch “Registered Devices”
4. Touch “Add New”
5. Go to your Bluetooth Device and access Bluetooth settings
6. On your Bluetooth Device, touch the device to be paired.
7. Input the passcode displayed on the screen into your Bluetooth device
8. When the connection is completed the screen will display “Phone connection successful”.

Once you have connected the Bluetooth device, it is automatically connected whenever the engine switch is in the “ACC” or “ON” position.

For detailed pairing instructions, see your audio system owner's manual.

Door-Back

OPEN/CLOSE

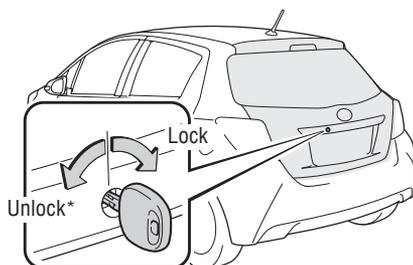

Quick overview-Toyota Safety Sense C

Toyota Safety Sense (TSS) C is a set of active safety technologies designed to help prevent or mitigate collisions across a wide range of traffic situations. TSS-C is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe and comfortable driving experience.

Refer to the Owner's Manual for more details to understand these functions and complete safety precautions before attempting to use any of TOYOTA SAFETY SENSE C functions.




Pre-Collision System (PCS)

Provides collision avoidance or damage mitigation support in certain situations in speed ranges where rear end collisions are likely to occur.



Lane Departure Alert (LDA)

Provides notification regarding the risk of unintended lane departure when the system detects visible lane markers.

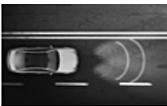


Auto High Beams (AHB)

The system is designed to detect lights of leading or opposing vehicles and automatically changes between high and low beam headlight settings.

Sensors


Two types of sensors, located behind the front windshield, detect information necessary to operate the drive assist systems. The single-lens camera in front of the inside rear view mirror is designed to recognize certain shapes and visible white or yellow lane markings.

Camera sensor

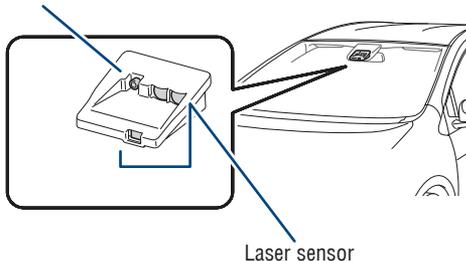

Laser sensor

Pre-Collision System (PCS)

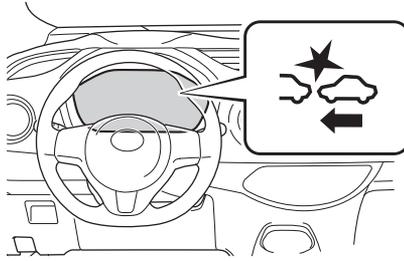

The Pre-Collision System uses a laser sensor and camera sensor to help detect vehicles in front of your vehicle.

Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the warning timing of the system can be changed.

PRE-COLLISION WARNING

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.


PRE-COLLISION BRAKE ASSIST

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

PRE-COLLISION BRAKING


When the system determines that the possibility of a frontal collision is high, the system warns the driver. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the collision speed.

CHANGING THE PRE-COLLISION WARNING TIMING

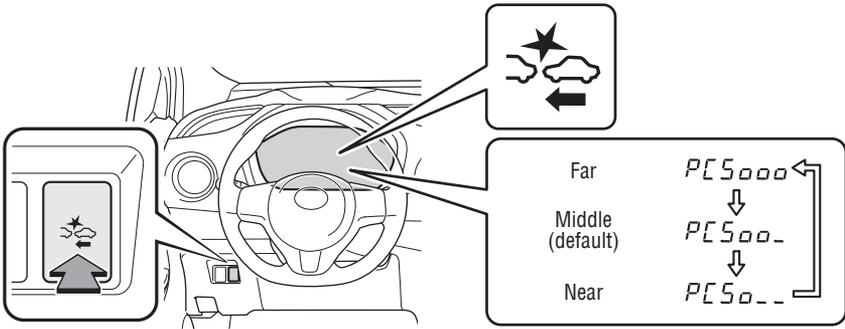

Each time the Pre-Collision System switch is pressed, the response to the warning distance changes.

DISABLING THE PRE-COLLISION SYSTEM (PCS)

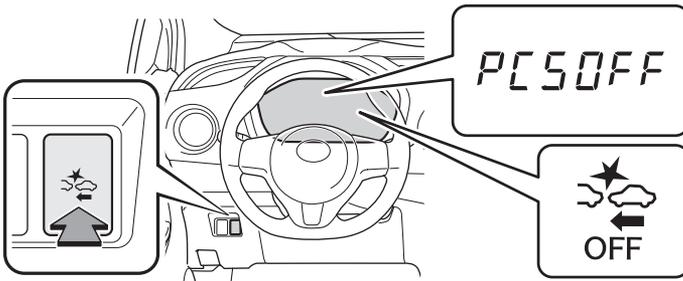

To disable the system

Press the PCS switch for 3 seconds or more.

The PCS warning light will turn on and a message will be displayed on the Multi-Information Display (MID).

To enable the system


Press the PCS switch again.

The system is enabled each time the engine switch is turned to IGNITION ON mode.

Refer to the Owner's Manual for limitations and more details on this system.


TOYOTA SAFETY SENSE

Lane Departure Alert (LDA)

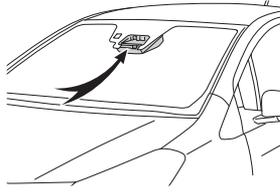

The Lane Departure Alert system is designed to recognize visible white or yellow lane markers via a front sensor. The system alerts the driver with a warning buzzer sound and message in the Multi-Information Display (MID) when it detects the vehicle deviating from its lane.

TURNING ON THE LDA SYSTEM

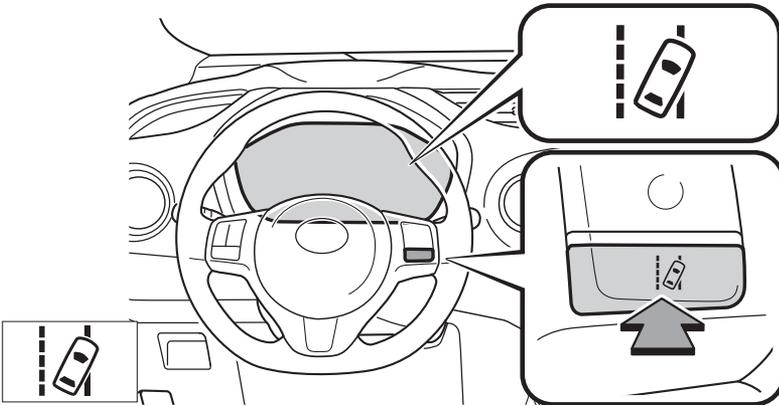

Press the LDA switch to turn the LDA system on. Depress again to turn it off.

Note: The system will continue in the last state it was in (ON or OFF) when the engine is started again.

Refer to the Owner's Manual for limitations and more details on this system.

FUNCTIONS

LDA function display




Lane

Lane Departure Alert (LDA) indicators turn green when operating.



(1)

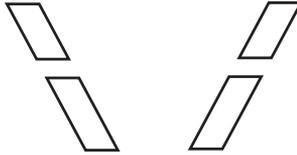

(2)

The LDA function displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

(1) The system displays solid white lines on the LDA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.

(2) The system displays outlines on the LDA indicator when lane markers on the road are not detected or the function is temporarily cancelled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

ADJUSTING LANE DEPARTURE ALERT (LDA) SENSITIVITY




The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Warns before the front tire crosses the lane marker.

Standard - Warns when the front tire crosses the lane marker.

Auto High Beams (AHB)

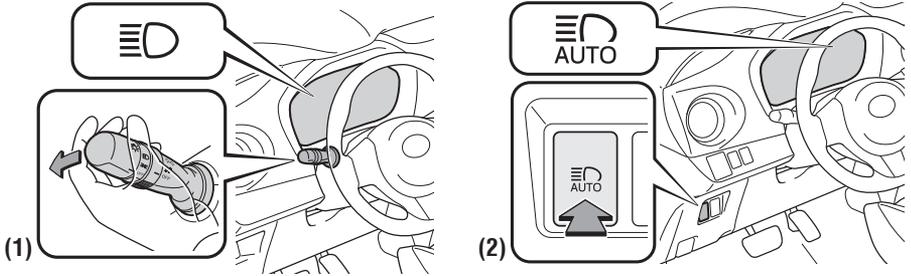

The AHB uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and is designed to automatically turn high beams on or off as necessary.

ACTIVATING THE AHB SYSTEM

- (1) With the engine switch in IGNITION ON mode and headlight switch turned to "ON" position, push lever away from you.
- (2) Depress the Automatic High Beam "AUTO" switch.

The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you to turn the AHB system off.

The AHB indicator will turn off and the high beam indicator turns on.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 25 mph (40 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.


If any of these conditions occur, the system is designed to automatically turn off high beams:

- Vehicle speed drops below approximately 19 mph (30 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

Refer to the Owner's Manual for limitations and more details on this system.



Doors-Child safety locks

Rear door
(5-door models only)

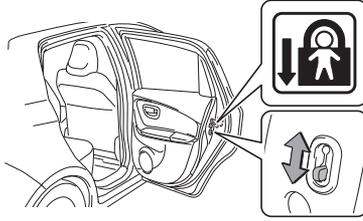

Moving the lever to downward will allow the door to be opened only from the outside.

Seat belts

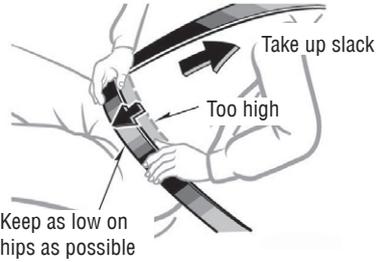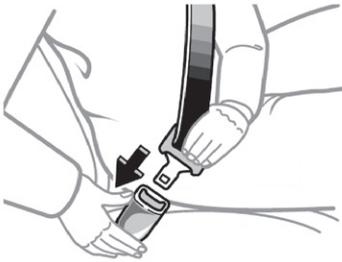


NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

SAFETY & EMERGENCY FEATURES

Tire Pressure Monitoring (warning) System (TPMS)

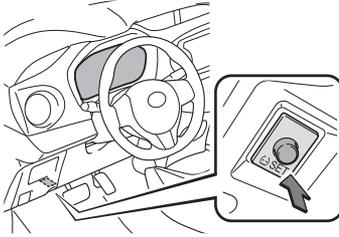

System reset initialization

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.




If tire pressure becomes critically low on any of the tires (excluding the spare), "!" indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the Owner's Manual for more details.

Spare tire & tools

TOOL LOCATION

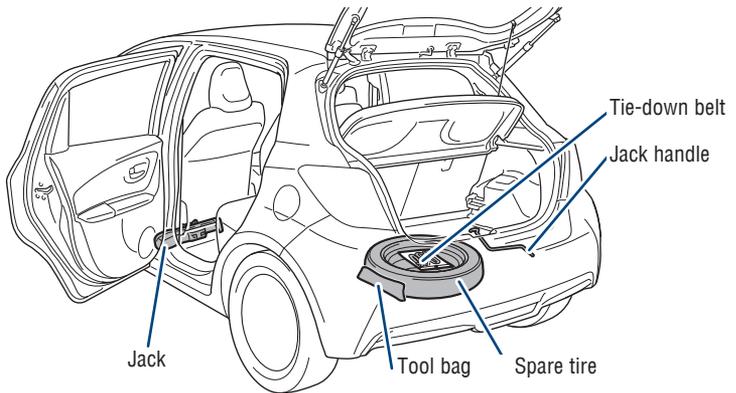

REMOVING THE SPARE TIRE

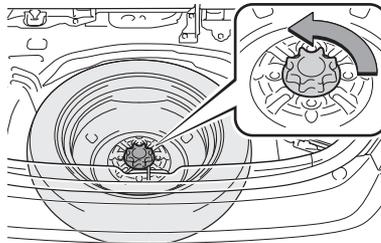

Loosen and remove the bolt.

Refer to the Owner's Manual for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Brake System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SAFETY & EMERGENCY FEATURES

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.



SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

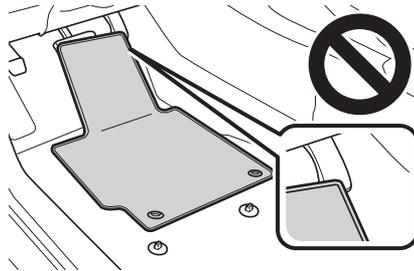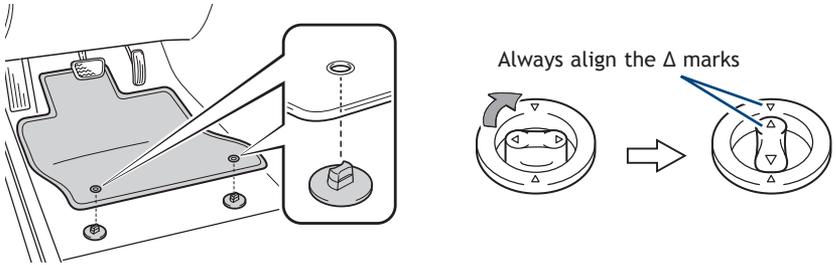

NOTES

NOTES