



 **TOYOTA** owners

CUSTOMER EXPERIENCE CENTER
1-800-331-4331

MIRAI
2 0 1 7



QUICK REFERENCE GUIDE



Printed in U.S.A. 7/16
16-MKG-09540



2017

MIRAI

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Mirai.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Mirai operations. Every Mirai owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

INDEX

OVERVIEW

Fuel door release button and cap	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry ^{1,2}	6-7
Light control-Instrument panel	8
Smart Key System ^{1,2}	7

HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

Hydrogen Fuel Cell System	9-11
Water release (H ₂ O) switch	12

FEATURES & OPERATIONS

Audio	23
Auto lock/unlock ^{1,2}	13
Automatic air conditioning system	22
Automatic High Beams (AHB)	20
Automatic transmission	14-15
Blind Spot Monitor (BSM)	19
Clock	24
Door locks	15
Dynamic Radar	
Cruise Control (DRCC)	26-27
Garage door opener (Homelink ^{®3})	27
Lane Departure Alert (LDA)	17
Lights ¹ & turn signals	21
Multi-Information Display (MID)	25
Parking brake	13
Power outlet	23
Pre-Collision System (PCS)	18
Seat adjustments-Front	16
Seat heaters	16
Seats-Folding down rear seats	17
Seats-Head restraints	16
Starting your vehicle	13
Steering wheel switches	24

FEATURES & OPERATIONS (continued)

Tilt & telescopic steering wheel	15
USB/AUX port	23
Windows-Power	21
Windshield wipers & washer	20
Wireless charger	24

SAFETY & EMERGENCY FEATURES

Doors-Child safety locks	30
Emergency tire puncture repair kit	28
Floor mat installation	30
Seat belts	29
Seat belts-Shoulder belt anchor	29
Star Safety System™	31
Tire pressure monitoring (warning) system (TPMS)	28

BLUETOOTH® DEVICE PAIRING SECTION 32-41

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Gentex Corporation.

Instrument panel

Multimedia control switches

Multi-Information Display (MID) control switches

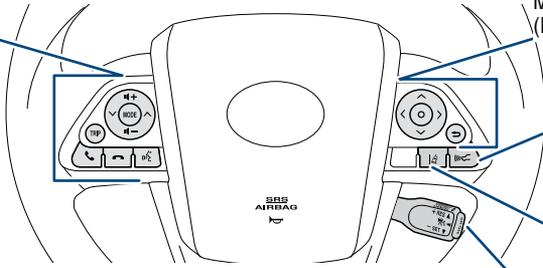

Dynamic Radar Cruise Control (DRCC) vehicle-to-vehicle distance switch

Lane Departure Alert (LDA) ON switch


Cruise control switch

Steering wheel controls

Power switch

Windshield wiper and washer switch


Turn signal lever and headlight switch

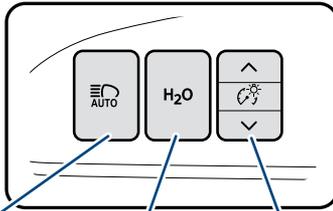

Automatic High Beam switch

Instrument panel light control switches

Water release switch

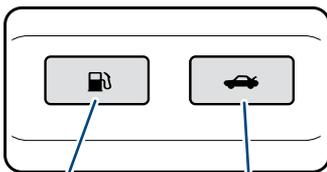

Fuel door opener


Trunk opener

Hood lock release lever

Tilt and telescopic steering control switch


Parking brake lever

¹ For details, refer to the “Navigation System Owner’s Manual.”

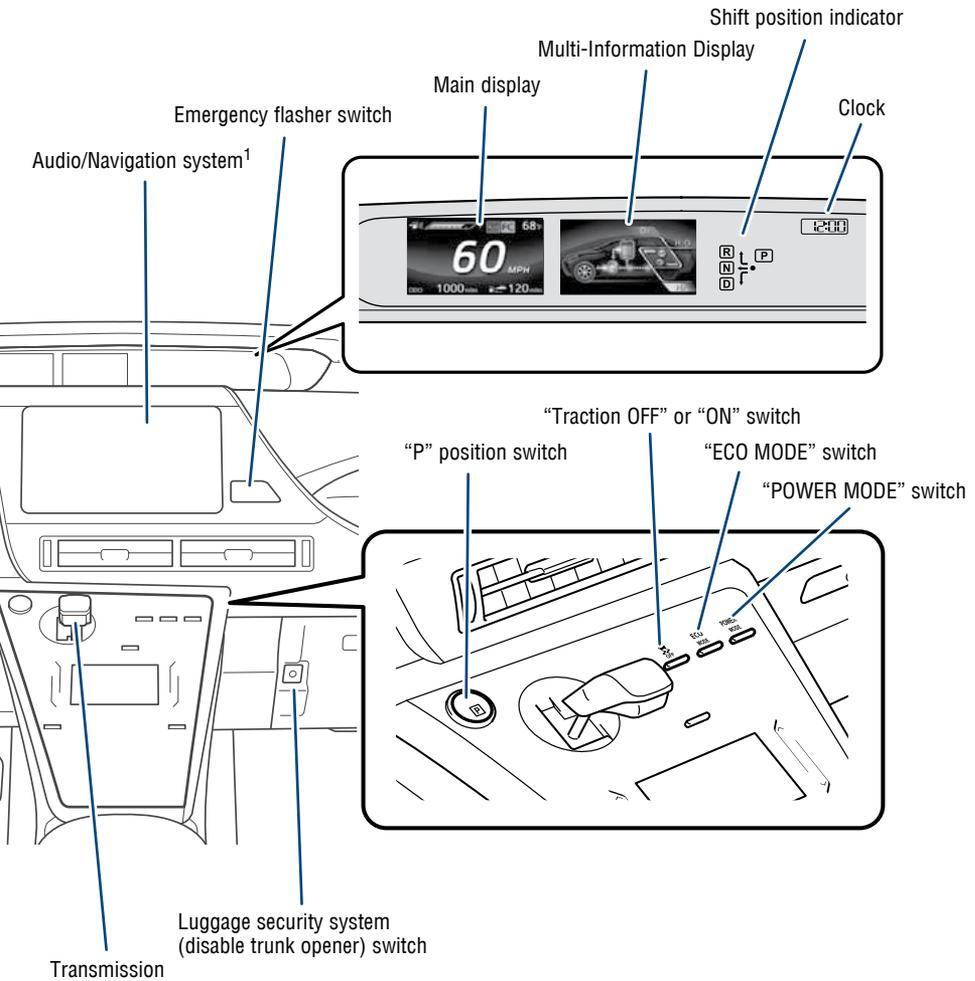

OVERVIEW

Instrument cluster

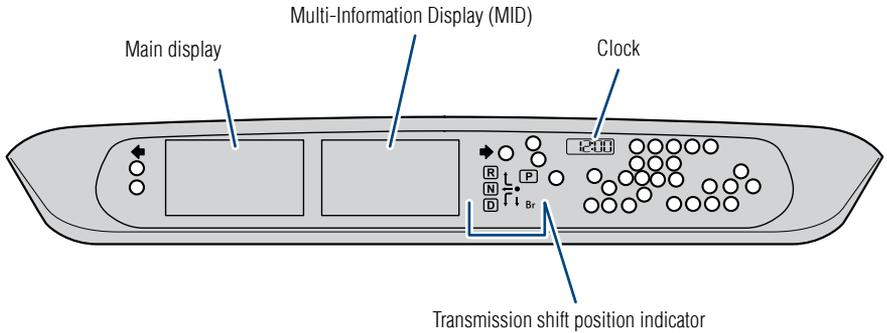

○ Service indicators and reminders

Instrument symbols

For details, refer to "Indicators and warning lights," Section 3-3, 2017 Owner's Manual.

-  Hydrogen leak warning
-  High coolant temperature warning
-  Low fuel level warning
-  Master warning¹
-  Low tire pressure warning¹
-  READY indicator
-  Security indicator
-  Airbag ON/OFF
-  Driver seat belt reminder
(alarm will sound if speed is over 12 mph)
-  Supplemental Restraint System warning
-  Open door warning

¹ If indicator does not turn off within a few seconds of starting Hydrogen Fuel Cell System, there may be malfunction. Have vehicle inspected by your Toyota dealer.

 BRAKE	Brake system warning ¹	 BSM	Blind Spot Monitor indicators
	Brake system warning light (yellow indicator) ¹		Blind Spot Monitor outside rearview mirror indicators
 PARK	Parking brake warning ¹		Pre-Collision System warning light
 ABS	Anti-lock Brake System warning ¹		Lane Departure Alert indicator
	Brake Override System/ Drive-Start Control warning light		Intuitive parking assist indicator
	Electric power steering system warning ¹		
	Charging system warning ¹		
 ECO MODE	ECO mode indicator		
 PWR MODE	Power mode indicator		
 Br	Engine brake mode indicator		
 FC	Power restriction indicator		
 H ₂ O	H ₂ O indicator		
	Turn signal indicator		
	Headlight low/high beam indicator		
	Automatic high beam indicator		
	Shift position indicator		
	Dynamic Radar Cruise Control indicator ³		
 SET	Cruise control SET indicator		
	Cruise control indicator ^{2,3}		
	Slip indicator ¹		
	Vehicle Stability Control OFF indicator		

² If this light flashes, refer to "Cruise control," Section 2-4, 2017 Owner's Manual.

³ If this light flashes, refer to "Dynamic Radar Cruise Control," Section 2-4, 2017 Owner's Manual.

OVERVIEW

Keyless entry (if equipped)

UNLOCKING




Push
ONCE: Driver door
TWICE: All doors

Carry remote
Smart key feature

Driver door unlock*

Grasp

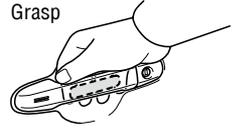

LOCKING




Push

Carry remote
Smart key feature

All-door lock

Touch

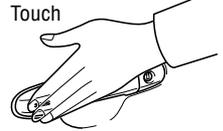

NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.

TRUNK LID




HOLD



Push


Carry remote
Smart key feature

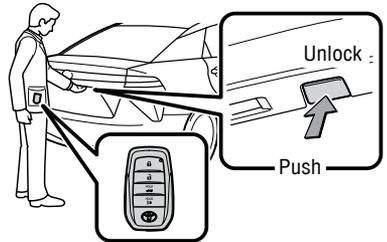

* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

PANIC BUTTON

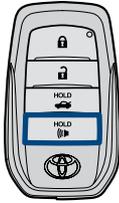


HOLD
Push and hold



Smart Key system

START FUNCTION

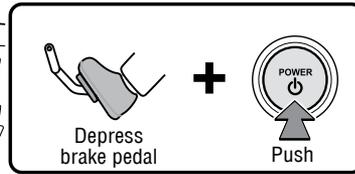


POWER (WITHOUT STARTING THE FUEL CELL SYSTEM)


Without depressing the brake pedal, pressing the “POWER” switch will change the operation mode in succession from:

Accessory	Accessories such as the radio will operate.
Ignition On	Power ON; Fuel Cell System is not engaged.
OFF	All systems OFF.


Light control-Instrument panel

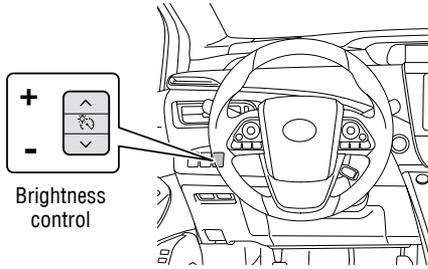

Fuel door release button and cap

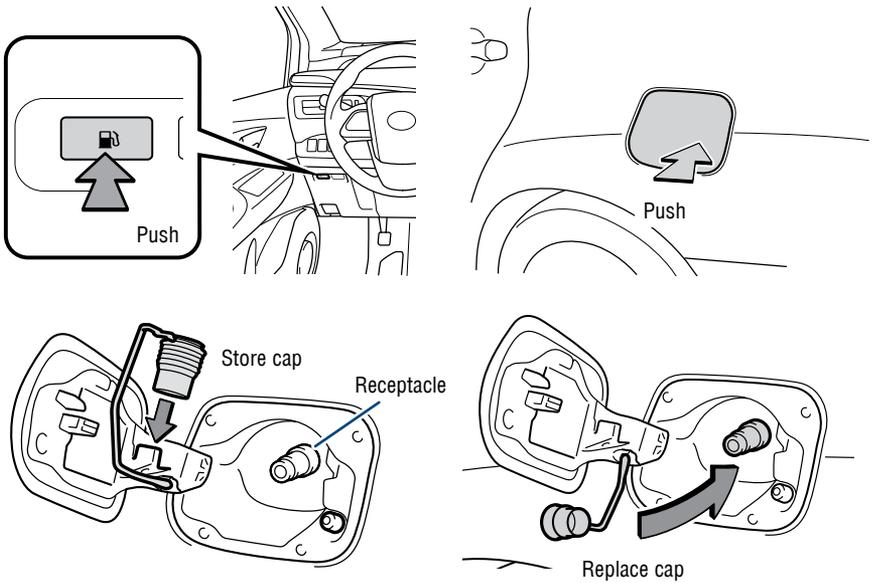

Alternate fuel door release (located in left rear of trunk)

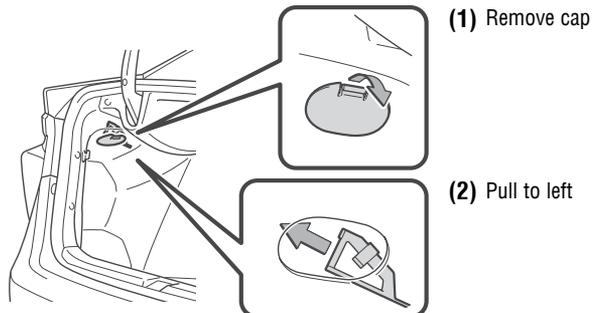

When the fuel door is open, the fuel cell system will not start. When the "READY" indicator is on, the fuel door will not open.

HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

Hydrogen Fuel Cell System

Fuel cell vehicles efficiently use electricity, which is generated by a chemical reaction between hydrogen and oxygen in a fuel cell stack. Excess electricity is stored in a traction battery that is used to power high voltage systems and assist on initial acceleration.

The fuel is H₂ (compressed hydrogen gas), so the exhaust, when running, is only water and water vapor. As they do not emit CO₂ (Carbon Dioxide) and NO_x (Nitrogen Oxides) at the tailpipe, fuel cell vehicles are considered zero emission vehicles.

NOTE: Fuel consumption and energy information of the Hydrogen Fuel Cell System are shown on the Multi-Information Display.

TIPS FOR IMPROVED FUEL ECONOMY

- Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- Drive vehicle smoothly. Avoid abrupt acceleration and deceleration.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the air conditioning.

Fill with fuel at hydrogen stations compliant with SAE J2601.

If you have questions about hydrogen station compliance, consult your Authorized Mirai Fuel Cell Toyota Dealer.

Observe the notices and cautions shown at the hydrogen station.

The filling time and amount may differ depending on the equipment of the hydrogen station. It may make the possible driving distance shorter.

BEFORE FUELING

When you arrive at the station, prepare for fueling:

- 1) Ensure vehicle is OFF and in Park with parking brake set.
- 2) Press the fuel door release button and refer to instructions in 'Fuel door release button and cap section' to prepare the vehicle to accept hydrogen fuel.


Note: Fuel door will not release the lock if power switch is ON or if READY indicator is on. The fuel door will automatically re-lock if you don't open within 30 seconds.

- 3) Now you are ready to refuel. Outside the vehicle at the pump, use the station's best practice guidelines and instructions on how to refuel using their nozzle.

For assistance, call Customer Support toll free at 1-800-331-4331.


HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

WEH H70 HYDROGEN GAS NOZZLE

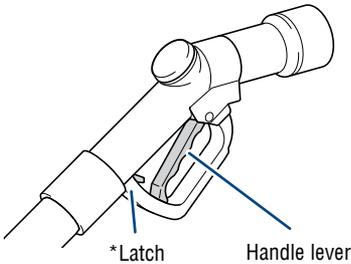


***The integrated hand grip locks and unlocks the nozzle, creating a secure connection for safe fueling.**

Seat nozzle on receptacle

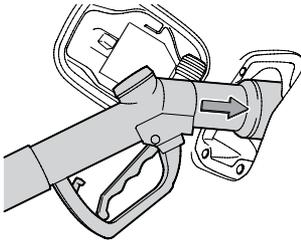

(1) Seat nozzle onto receptacle fully.


(2) Squeeze handle lever to lock. (To unlock nozzle, release latch on hand grip when you are finished dispensing fuel.)

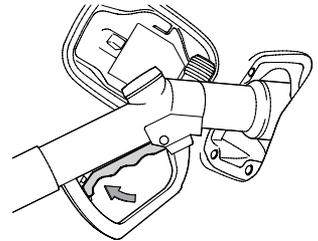


(3) Gently pull back on nozzle to ensure it is locked onto receptacle.


Once nozzle is secure, you can follow station's instructions to begin dispensing fuel.

CAUTION: It is important to ensure that the nozzle lock is properly engaged to the vehicle. Failure to do this may result in the nozzle **coming off when the flow of hydrogen begins**. This may result in damage to the nozzle, station, vehicle, your own person or people near the fueling station.

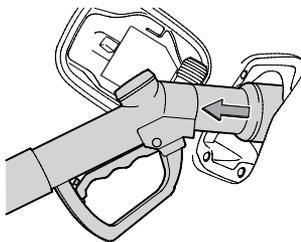

(4) After fueling is complete, pull the latch to unlock the hand grip and remove the hydrogen gas nozzle.

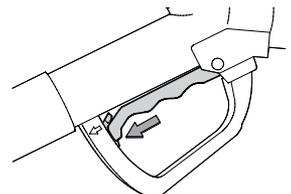


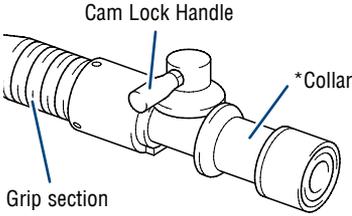


***Integrated collar snaps into place with a 'click.' Rotate cam lock clockwise to secure connection for safe fueling.**

Seat nozzle on receptacle


(1) Make sure handle is in the OFF position.

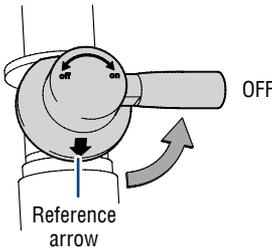


(2) Holding grip section and collar, seat nozzle onto receptacle.

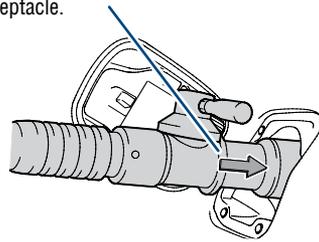

(3) Rotate handle clockwise to ON position to lock nozzle.

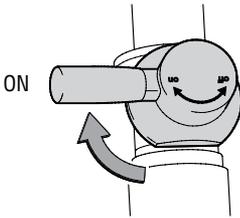

(4) Holding grip section, pull back on collar to make sure nozzle is securely locked. Once nozzle is secure, you can follow station's instructions to begin dispensing fuel.

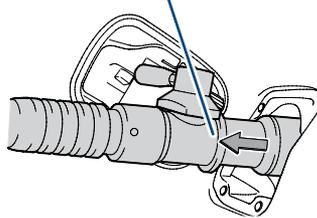

Remove nozzle

(5) After filling is complete, rotate handle back to the OFF position.

(6) Holding grip section, pull back on collar to unlock and remove the fuel nozzle.


TIP-AFTER REFUELING

NOTE: If the nozzle cannot be removed after fueling, it may be frozen to the vehicle. Wait for the hydrogen nozzle to thaw before attempting to remove. Do not pull or rotate the hydrogen nozzle forcibly. Failure to follow these precautions may cause damage.

Refer to the Refueling section in the Owner's Manual for additional warnings/notices.

HYDROGEN FUEL CELL SYSTEM & SAFETY FEATURES

Water release (H₂O) switch

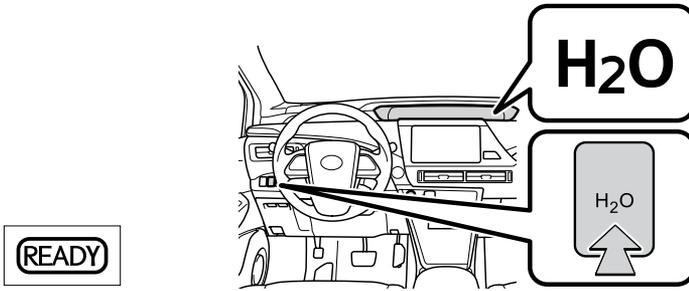

Water is a natural by-product of the fuel cell process. The system is designed to automatically purge water from the drain pipe at the rear of the vehicle while driving and sometimes while it is shut off.

Water can be manually purged before parking in certain situations by pressing the "H₂O" switch with the vehicle in "READY" mode. The system will regulate water levels automatically. Drivers should typically let the vehicle handle this as opposed to using this switch.

Refer to the Owner's Manual for more details on this system before attempting to use it.

FEATURES & OPERATIONS


Auto lock/unlock

Automatic door lock functions can be set, or turned OFF.


- Doors lock when shifting to any positions other than P.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into P.
- Doors unlock when the driver's door is opened.

Refer to the Owner's Manual for more details.

Parking brake

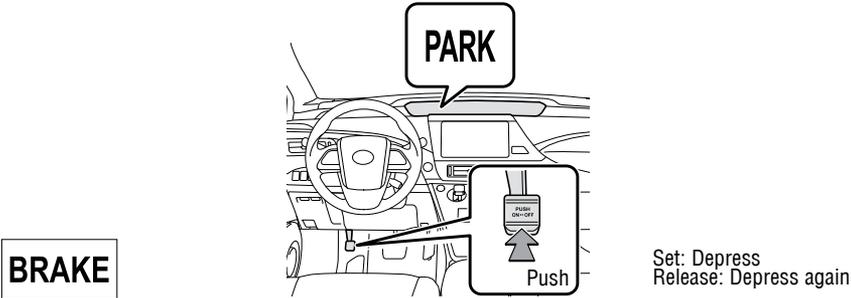


P POSITION SWITCH

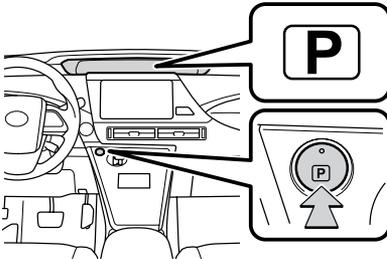

- (1) Fully stop the vehicle
- (2) Keep depressing the brake pedal
- (3) Press the P position switch.

The shift position can be changed to P through the use of the P position switch.


Starting your vehicle

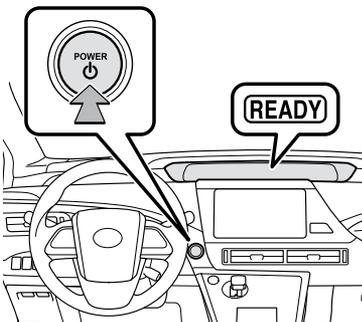

- (1) Depress the brake pedal, and press the "POWER" switch briefly and firmly.
- (2) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, you may begin driving.


FEATURES & OPERATIONS

Automatic transmission

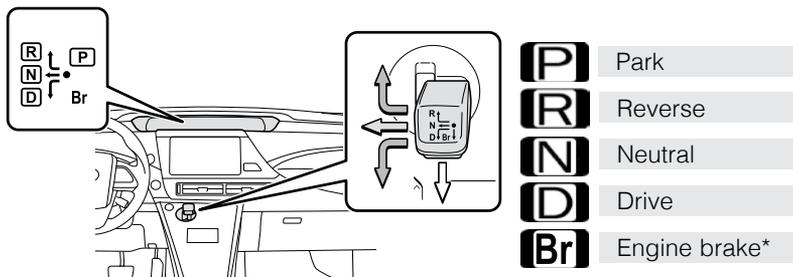


* The engine brake is the equivalent of downshifting. Shift to “Br” when strong regenerative braking is desired (i.e. downhill driving, coasting to a stop, etc.).

ECO MODE

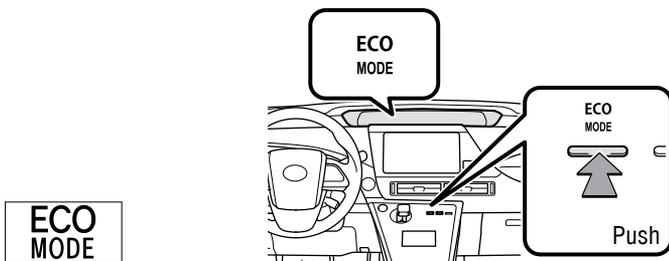


ECO Mode helps achieve low fuel consumption during trips that involve frequent accelerating and braking.

POWER MODE

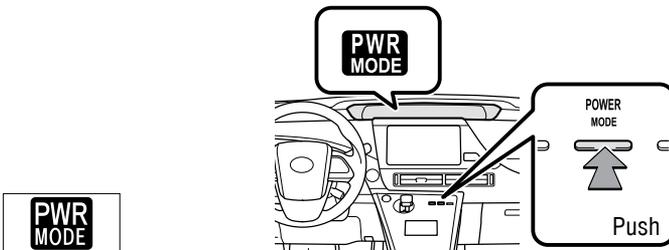


Use when a higher level of response is desired, such as when driving in mountainous regions or overtaking.

Br

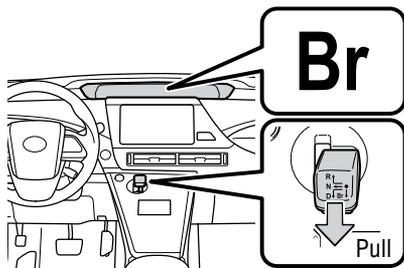

Suitable for driving that requires strong regenerative braking, such as down-hill driving, etc. To select Br mode, shift the shift lever down.

Tilt & telescopic steering wheel

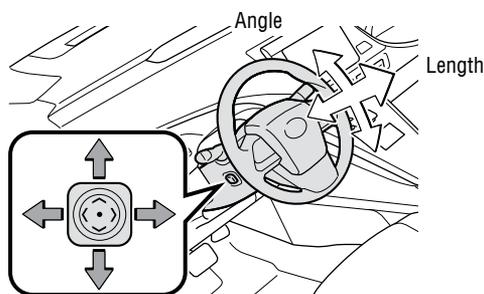


Push lever to move steering wheel:

- up, down to adjust angle,
- left, right to adjust length (toward driver and away from driver.)

NOTE: Do not attempt to adjust while the vehicle is in motion.


Door locks

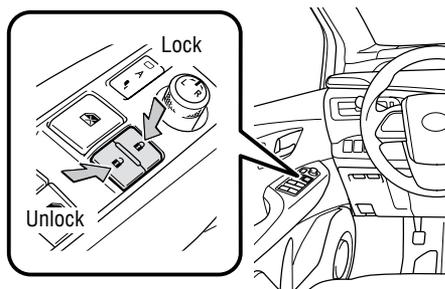

FEATURES & OPERATIONS

Seat adjustments-Front


POWER SEAT (DRIVER SIDE ONLY)*

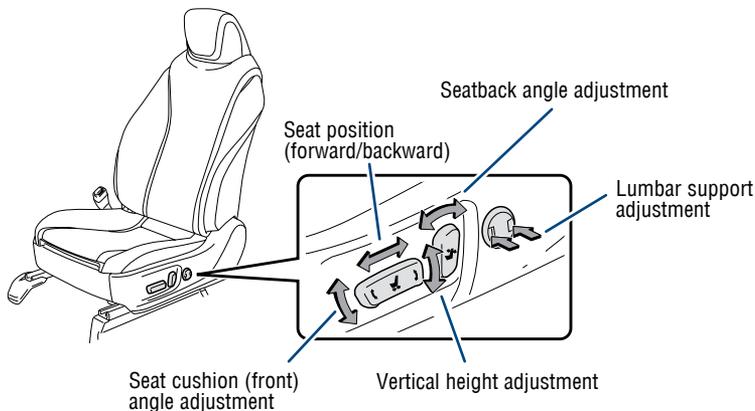


Note: Be careful to not allow the head rest to touch the ceiling.

Seats-Head restraints


Front vertical adjust

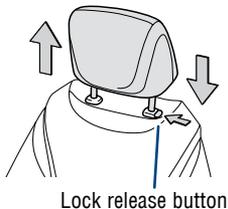

Front horizontal adjust

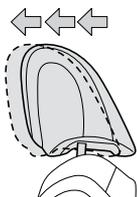


Rear vertical adjust

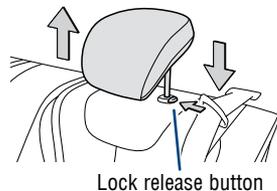


Seat heaters


Driver seat

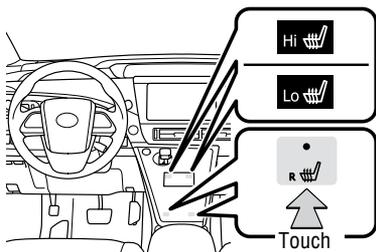

Touch switch to change temperature intensity.

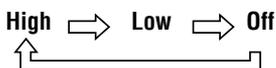


Rear passenger seat

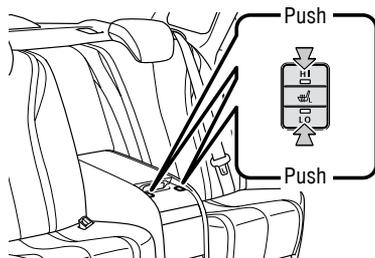

Push button to change temperature intensity. Depress again and light indicates heater is off.

Lane Departure Alert (LDA)


Camera sensor

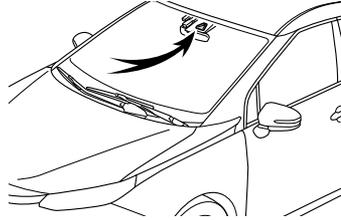

While driving on a road that has visible lane markers, this system is designed to recognize lane markers using a camera sensor and alerts the driver when the vehicle deviates from its lane.


Refer to the Owner's Manual for more details on this system before attempting to use it.

TURNING THE LDA SYSTEM ON

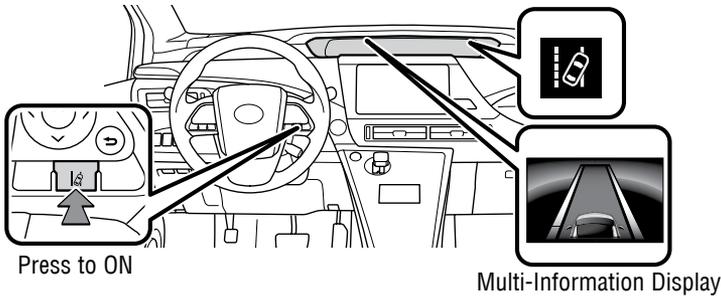

Press the LDA switch (in steering wheel) to turn the LDA system ON, the indicator will illuminate. Press again to turn OFF.

INDICATION ON THE MULTI-INFORMATION DISPLAY (MID)

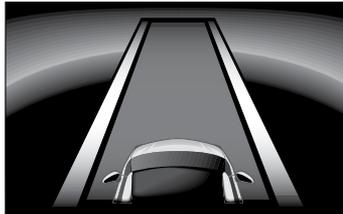

When the inside of both lane lines turn white:

- Indicates that both right and left lane markers are recognized.

When the inside of either lane line turns white:

- Indicates that the lane marker on the white-marked side is recognized.

When the inside of both lane lines are black:

- Indicates that no lane markers are recognized or the LDA system is temporarily canceled.

Pre-Collision System (PCS)




When a high possibility of a frontal collision is detected by the radar sensor, a buzzer sounds and a message urging the driver to take evasive action appears on the multi-information display. If the driver then applies brakes, the system applies greater brake force in relation to how strongly the brake pedal is depressed. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed. The system is enabled each time the power switch is turned to ON mode.

Refer to the Owner's Manual for more details on this system before attempting to use it.

CHANGING THE PRE-COLLISION WARNING TIMING

Each time the Pre-Collision System switch is pressed, the response to the distance changes as follows:

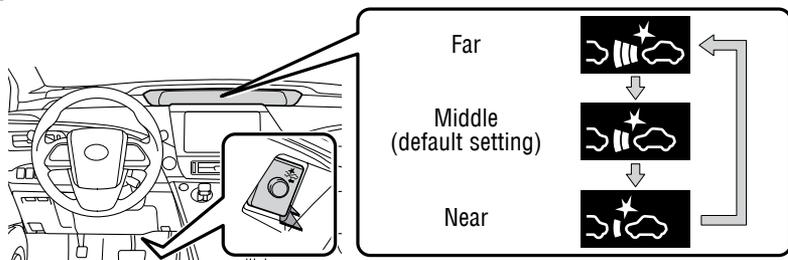


DISABLING THE PRE-COLLISION SYSTEM




Press the PCS switch for 3 seconds or more.

Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA) (if equipped)

Outside rear view mirror indicators

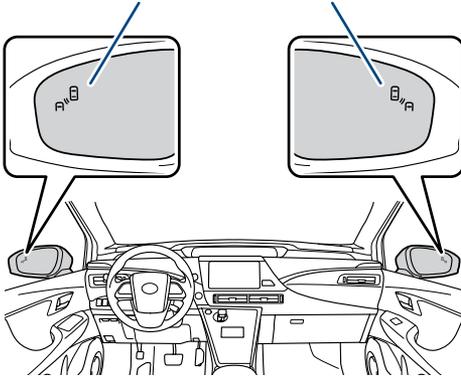

Rear cross Traffic Alert buzzer

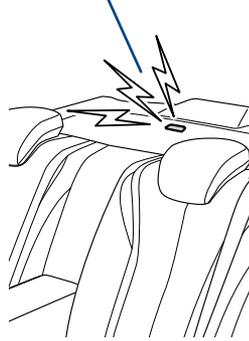


The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in making the decision when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system uses radar sensors and is designed to detect vehicles that are traveling in the area that is not reflected in the outside rearview mirror (the blind spot). The system advises the driver of the vehicles' existence via the outside rearview mirror indicator.

Refer to the Owner's Manual for more details on this system before attempting to use it.

TURN THE BSM SYSTEM ON

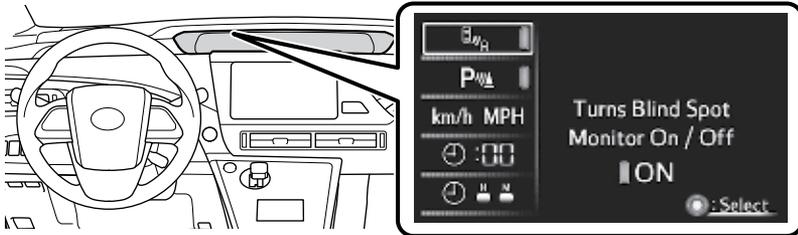



To turn ON (activate)/OFF (deactivate) from multi-information display, select .

FEATURES & OPERATIONS

Windshield wipers & washer


OPERATING WIPER LEVER

* When AUTO is selected, wipers will operate automatically when sensor detects falling rain.

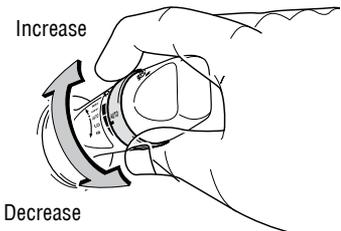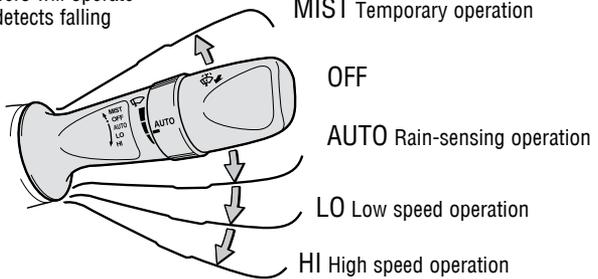


Select AUTO to increase or decrease sensor sensitivity.

Automatic High Beams (AHB)

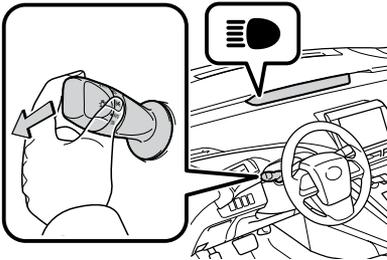

1) Activate the system

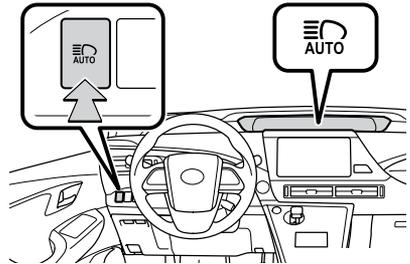



2) Press the Automatic High Beam switch

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beams on or off as necessary.

To turn the high beams on/off manually, pull the lever to the original position or press the switch.

Refer to the Owner's Manual for more details on this system before attempting to use it.

Lights & turn signals

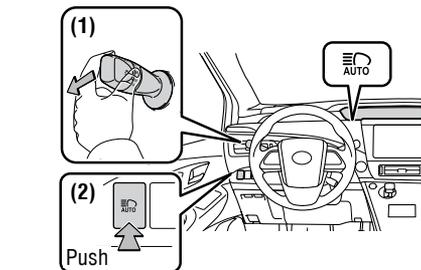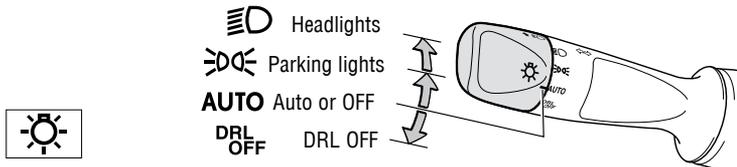


(1) In AUTO or position, push lever away from you


(2) Push to activate automatic highbeam

Automatic light cutoff system Automatically turns lights off after a delay of 30 seconds, or when lock switch on remote is pushed after all doors are locked.


TURN SIGNALS

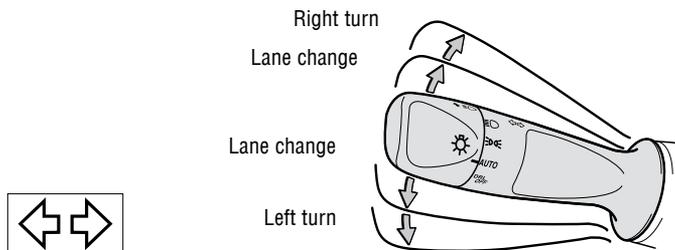

Windows-Power

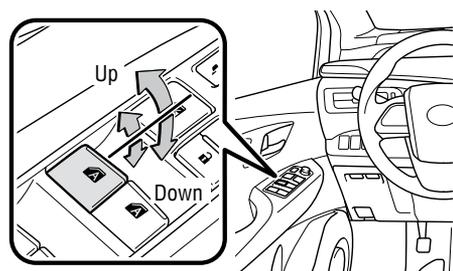


Window lock switch

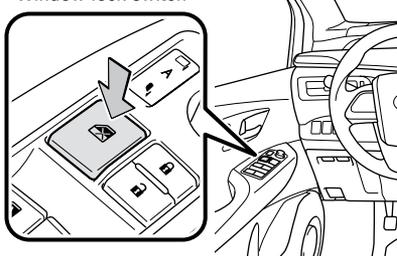

Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Automatic air conditioning system

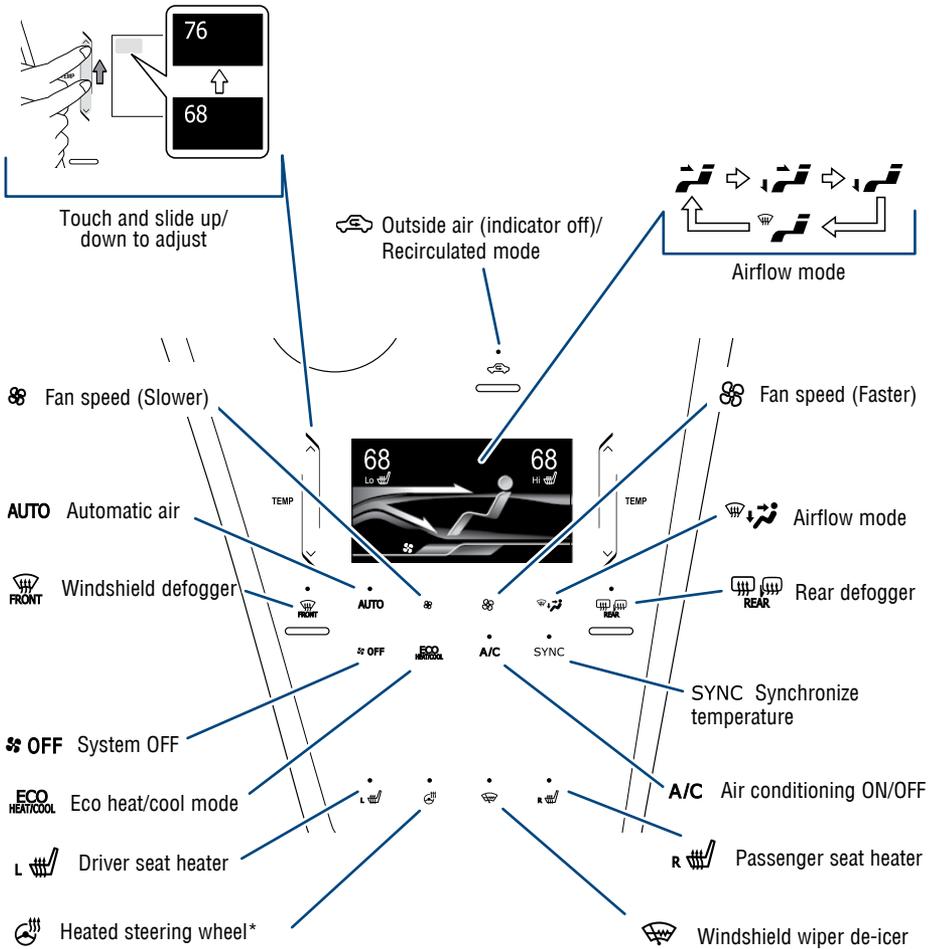


When adjusting the temperature setting a sound buzzes and automatically sets temperature, fan outlet and speed.

*Turns off automatically after 30 minutes


Audio

Entune™ Premium JBL Audio with Integrated Navigation and App Suite

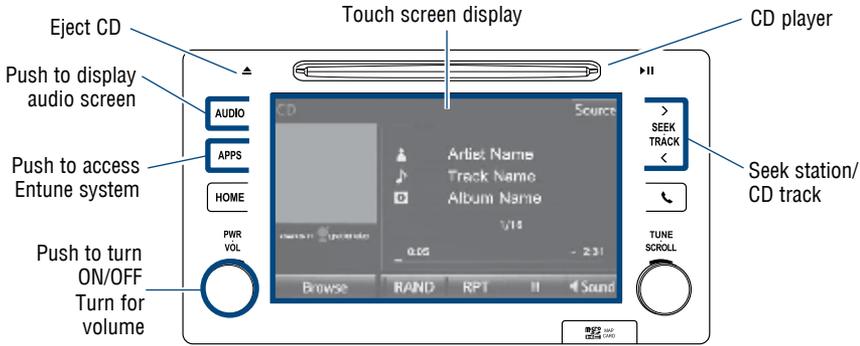


Refer to the *Navigation System Owner's Manual* and *2016 Entune™ Audio Quick Reference Guide* for more details.

USB/AUX port

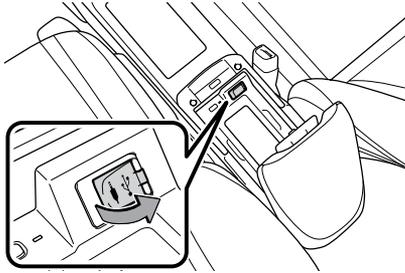


By inserting a USB or an auxiliary cable plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in USB/AUX mode.

Power outlet

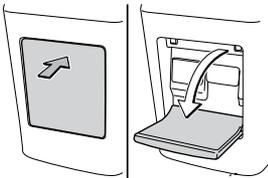


(1) Push to open cover

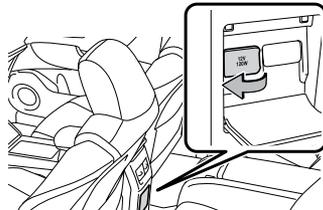


(2) Pull open port cover
(3) Connect device

Designed for car accessories. Power switch must be set at "ACCESSORY" or "ON" in order to use power outlets.


Wireless charger

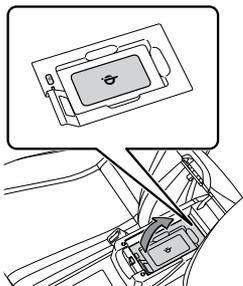

(1) Open console box

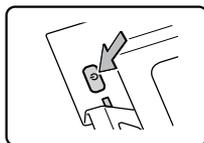

(2) Press power button, indicator light turns on when in operation. (green)

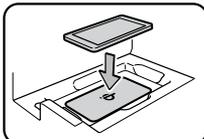


(3) Place charging side of portable device down and light indicates when it is charging. (orange)

Designed for car accessories. Power switch must be set at “ACCESSORY” or “ON” in order to use power outlets.

Steering wheel switches

Odometer/trip meter and reset

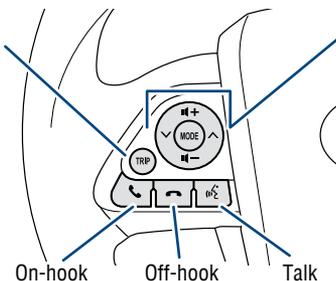

Audio/Multimedia remote control

Volume: + -

Mode: MODE


Select: ^ v

On-hook

Off-hook

Talk

Clock

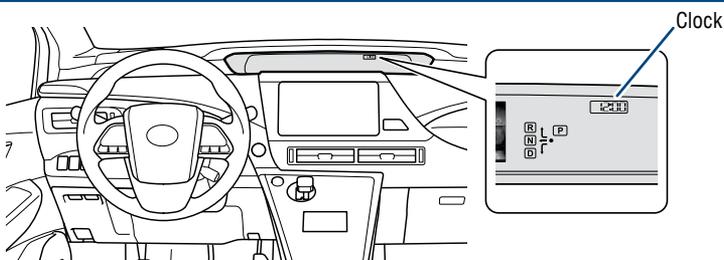


Clock

Using steering wheel switches, select “Home” from multi-information screen, then select “” to set clock:

- (1) Round to the nearest hour, press or , select :00 and press .
- (2) Time adjustment, press or , select and press .
- (3) Press or , select hours and minutes or press or , to select 12-24 hour clock and adjust.
- (4) Press when finished.

Multi-Information Display (MID)

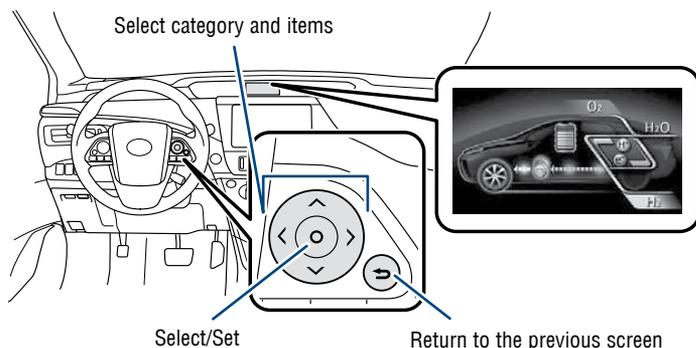

i Drive information

- Energy monitor
- Fuel cell system indicator and ECO meter
- Fuel consumption history display
- Drive monitor
- ECO diary
- Suspension of the settings display

🔄 Navigation system-linked display

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)

🎵 Audio system-linked display

Select to enable selection of an audio source or track on the display using the meter control switches.

🚗 Driving assist systems display

Displays when each driving assistance system is used.

- Dynamic Radar Cruise Control (DRCC)
- Lane Departure Alert (LDA)
- Intuitive parking assist
- Pre-Collision System (PCS)

⚠️ Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.


FEATURES & OPERATIONS

Dynamic Radar Cruise Control (DRCC)


Refer to the Owner's Manual for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

DISTANCE CONTROL MODE

Vehicle-to-vehicle distance button

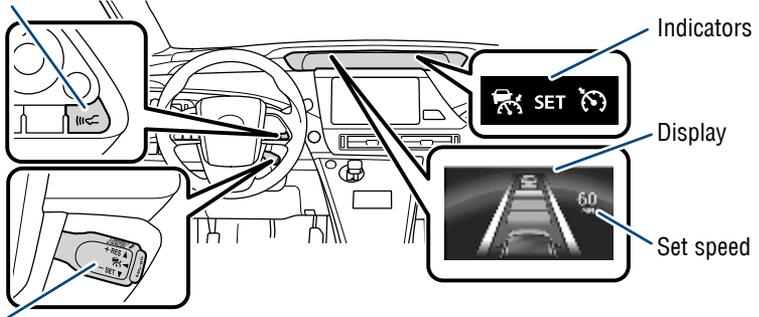

Dynamic radar control switch

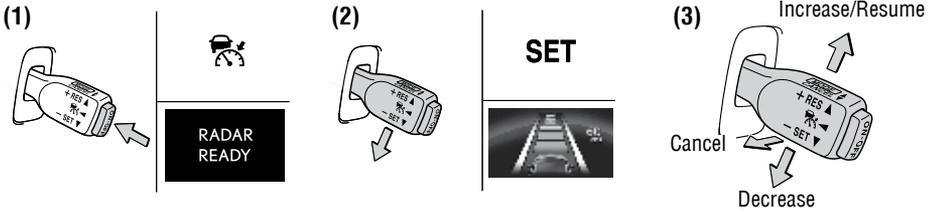

In distance control mode, vehicle is designed to cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

(1) Push the ON-OFF button to activate/deactivate the system.


(2) To set, pull the lever down.

(3) To increase and set speed, push the lever up.

To decrease, push lever down. Move the lever slightly to adjust in 1 mph increments. Move all way up/down to adjust in 5 mph increments.


(4) To resume set speed, push up and hold.

To cancel pull the lever toward you, or depress the brake pedal.

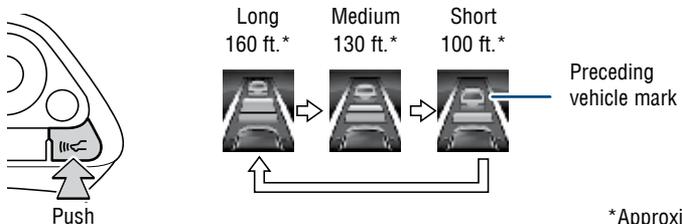

*Approximately

Push the vehicle-to-vehicle distance button to change distance.

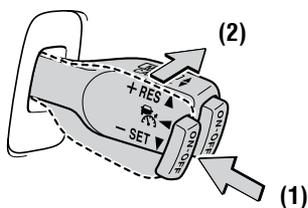


To select constant speed mode

(1) Push the ON-OFF button.

(2) Push the lever away from you and hold until the “” indicator appears.

To set, cancel and resume a speed refer to Distance control mode.

Garage door opener (Homelink®)*

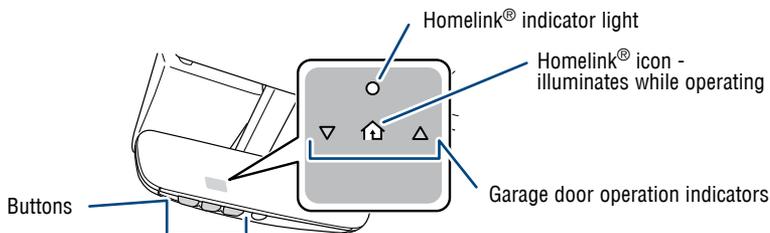

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, gates, entry doors door locks, home lighting systems, security systems and other devices.

Refer to “Garage door opener,” Section 6-4 in the Owner’s Manual for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Gentex Corporation.


SAFETY & EMERGENCY FEATURES

Emergency tire puncture repair kit

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit (bottle of sealant and compressor.) After temporarily repairing the tire with the repair kit, have the tire repaired or replaced by your Toyota dealer.

Refer to the Owner's Manual for more details.

LOCATION

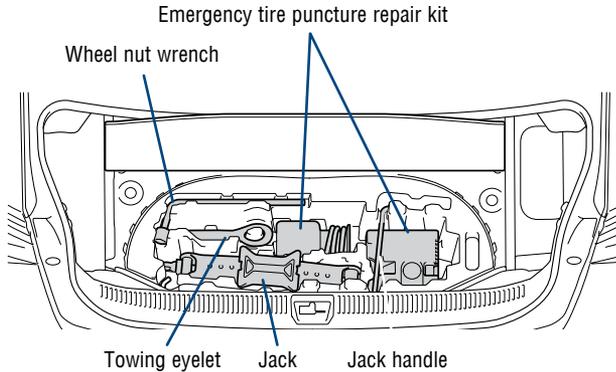

Tire Pressure Monitoring (warning) System (TPMS)


If the Tire Pressure Warning indicator “” illuminates without blinking, adjust tire pressures to factory-specified levels.* The light will turn off after a few minutes. The warning light is designed to turn on when tire pressure is critically low, but it may also come on due to temperature changes or changes in tire pressure from natural air leakage.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Refer to the Owner's Manual for more details.

* Refer to load label on door jamb or the Owner's Manual for tire inflation specifications.


Seat belts

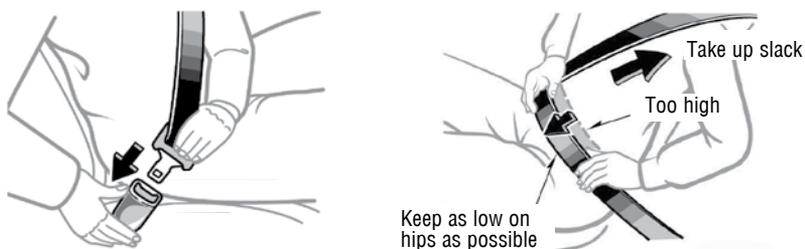

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts-Shoulder belt anchor

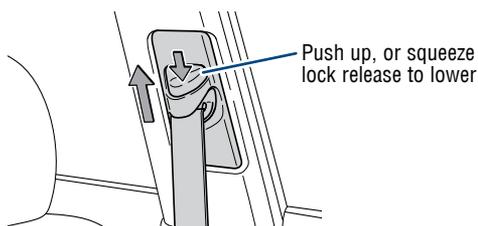

Doors-Child safety locks

Rear door

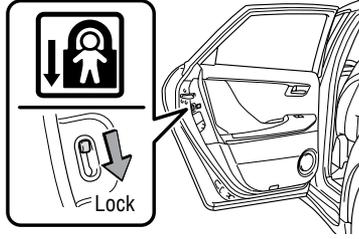


Moving the lever to lock position will allow the door to be opened only from the outside.

Floor mat installation


There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

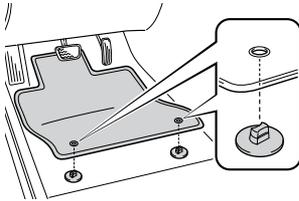

Always align the Δ marks

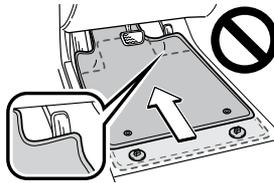

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing Motor power output, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits Motor power output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces driving torque when the accelerator and brake pedals are pressed simultaneously under certain conditions.

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹


Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²


Initiate Bluetooth® on your Android®




STEP 1
From your **APPS SCREEN**, select **SETTINGS**.

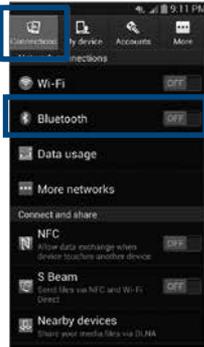

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.

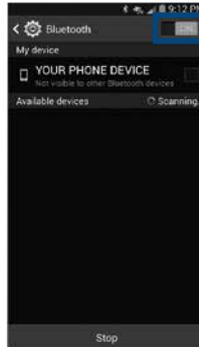

STEP 3
Ensure **BLUETOOTH** is **ON**.

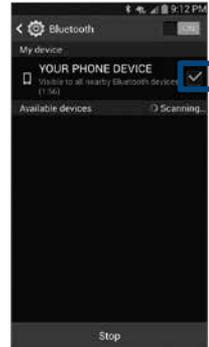

STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7


Select **BLUETOOTH**.
Image shown is a sample image, features may vary.

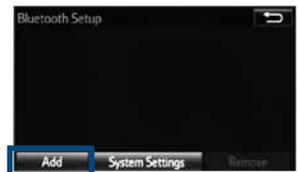

STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

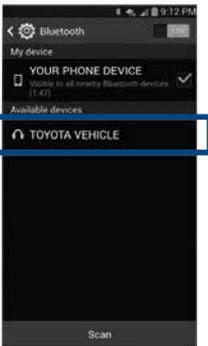

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10



Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

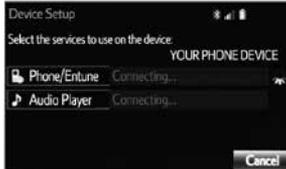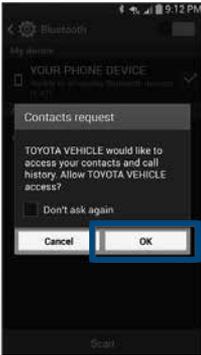

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**.




STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.

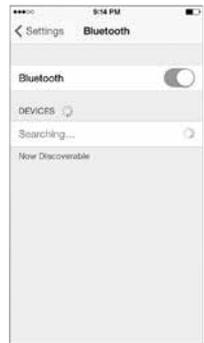

STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.


For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.

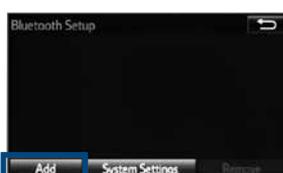

STEP 8

Select **ADD**, to add your phone device.



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10


Your smartphone is now paired with Entune.

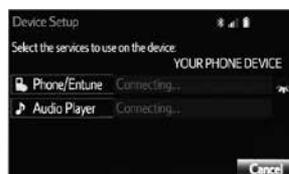

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

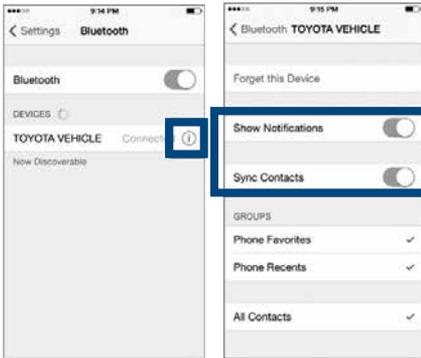

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.


1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

****Do not attempt the Bluetooth® Pairing process while driving.****

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®

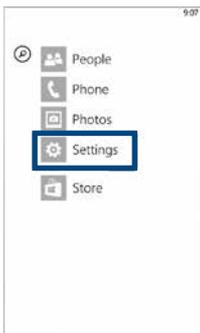


STEP 1

From your APP LIST, select **SETTINGS**.



STEP 2

Select **BLUETOOTH**.

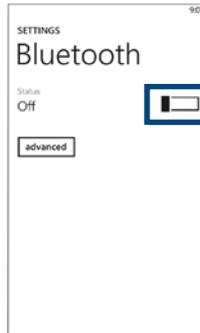

STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



STEP 7

Select **BLUETOOTH**.

Image shown is a sample image, features may vary.



STEP 8

Select **ADD**, to add your phone device.



STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.

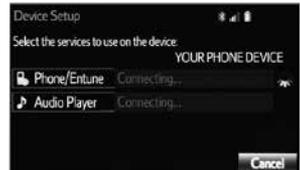

STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.