

SEQUOIA

2 0 1 8



QUICK REFERENCE GUIDE

# 2018

## SEQUOIA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Sequoia.

### *A word about safe vehicle operations*

This Quick Reference Guide is not a full description of Sequoia operations. Every Sequoia owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

## OVERVIEW

Engine maintenance	10
Fuel tank door release & cap	9
Hood release	9
Indicator symbols	6-7
Instrument cluster	5
Instrument panel	2-4
Instrument panel light control	10
Keyless entry <sup>1,2</sup>	8-9

## FEATURES & OPERATIONS

Air conditioning/heating	22-23
Audio	24-25
Auto lock/unlock <sup>1</sup>	11
Automatic transmission	11
Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA)	14
Cup holders	26
Door locks	27
Driving position memory	21
Four-wheel drive	13
Garage door opener (HomeLink <sup>®</sup> ) <sup>3</sup>	26
Lights <sup>1</sup> & turn signals	18
Moonroof	21
Multi-Information Display (MID) <sup>2</sup>	27
Parking brake	11
Power back door	20
Power outlets-12V DC	29
Power outlets-120V AC	27
Rear seat entertainment system	29
Rear view monitor system	25
Seat adjustments-Front	14
Seat adjustments-Rear	15
Seat ventilators/heaters	23
Seats-Folding 2nd row seats	16
Seats-Folding 3rd row seats	17
Seats-Head restraints	16
Telephone controls (Bluetooth <sup>®</sup> )	28

## FEATURES & OPERATIONS (continued)

Tilt & telescopic steering wheel	12
TOW/HAUL switch	25
VSC OFF switch	12
Window-Back door	20
Windows	19
Windshield wipers & washers	19

## TOYOTA SAFETY SENSE™ P (TSS-P)

Automatic High Beams (AHB)	39
Dynamic Radar	
Cruise Control (DRCC)	36-38
Lane Departure Alert (LDA)	33-35
Pre-Collision System with Pedestrian Detection function (PCS w/PP)	31-33
Quick overview-	
Toyota Safety Sense™ P (TSS-P)	30
Sensors	30

## SAFETY & EMERGENCY FEATURES

Floor mat installation	43
Rear door child safety locks	41
Seat belts	40
Seat belts-Shoulder belt anchor	41
Spare tire & tools	41
Star Safety System™	42-43
Tire Pressure Monitoring (warning) System (TPMS)	40

## BLUETOOTH® DEVICE PAIRING SECTION


44-53

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Genex Corporation.


# Instrument panel

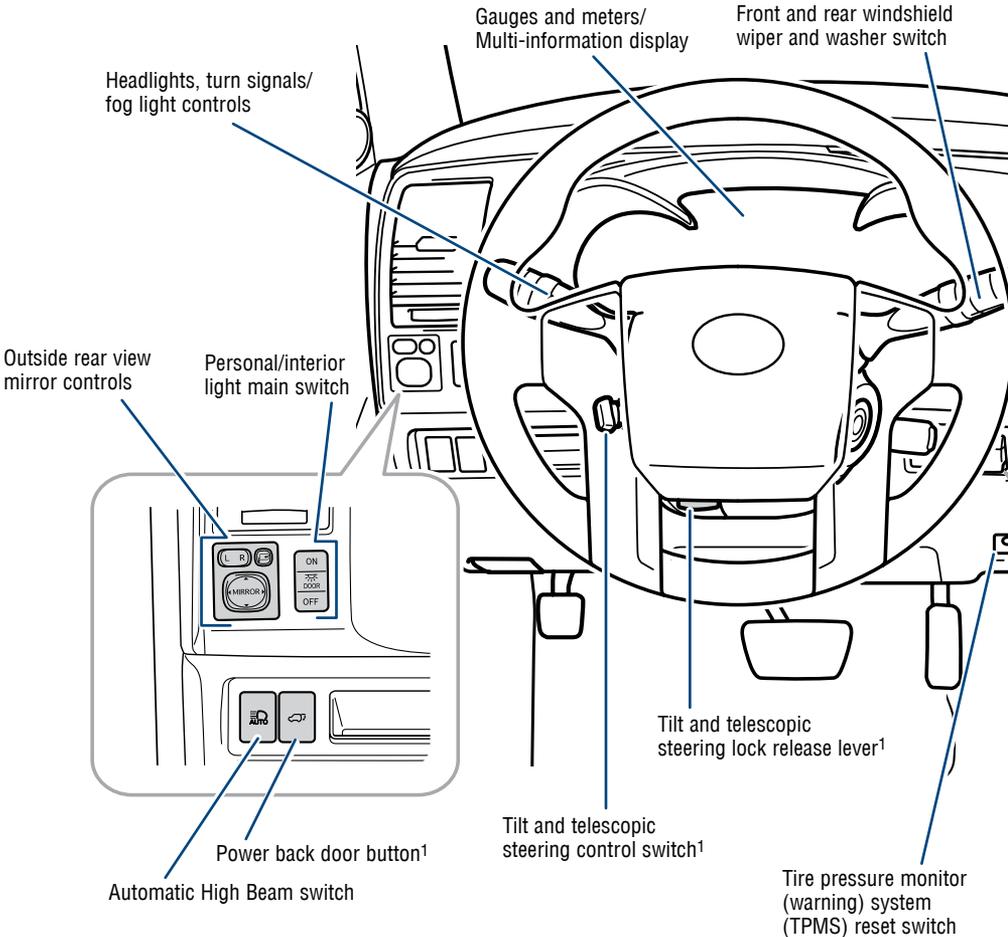

<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the “Navigation System Owner’s Manual” or the “2018 Entune™ Audio Quick Reference Guide.”


See next page for details on the center panel area.

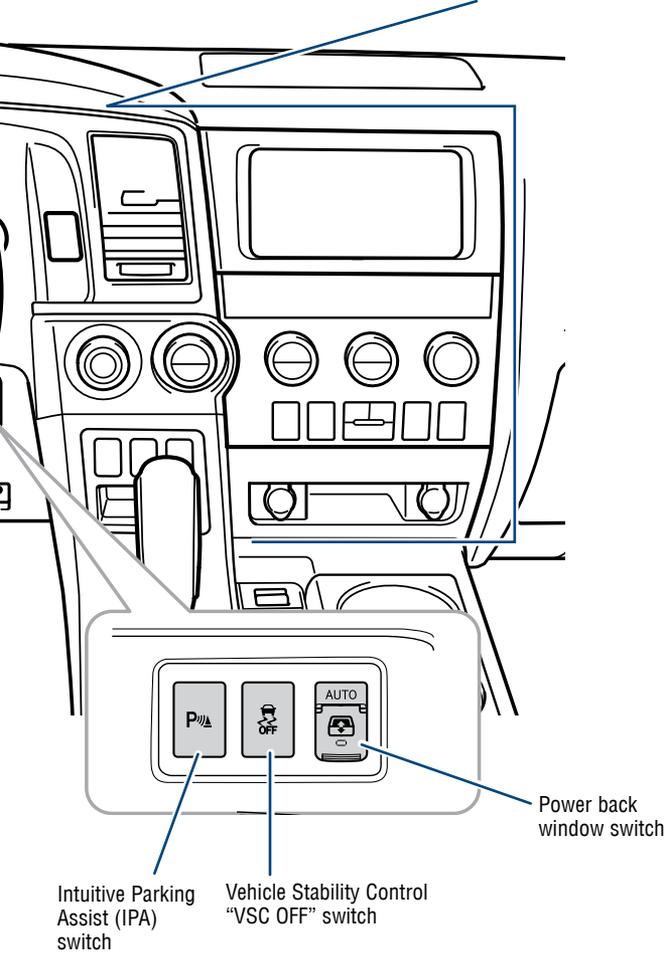

# OVERVIEW

## Instrument panel (continued)

### CENTER PANEL AREA

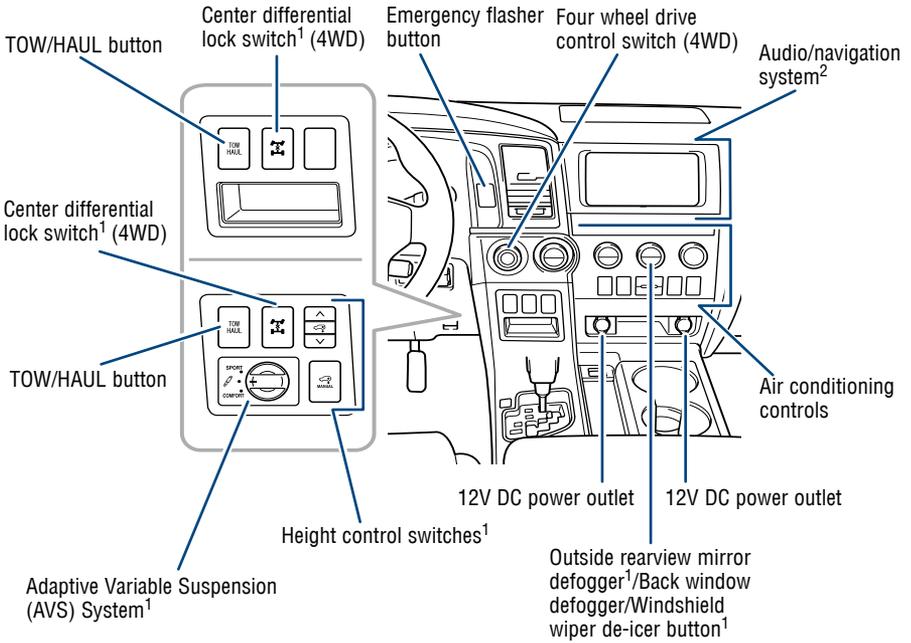


<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the "Navigation System Owner's Manual" and "2018 Entune™ Audio Quick Reference Guide."

# Instrument cluster

See page 6 for indicator symbols.

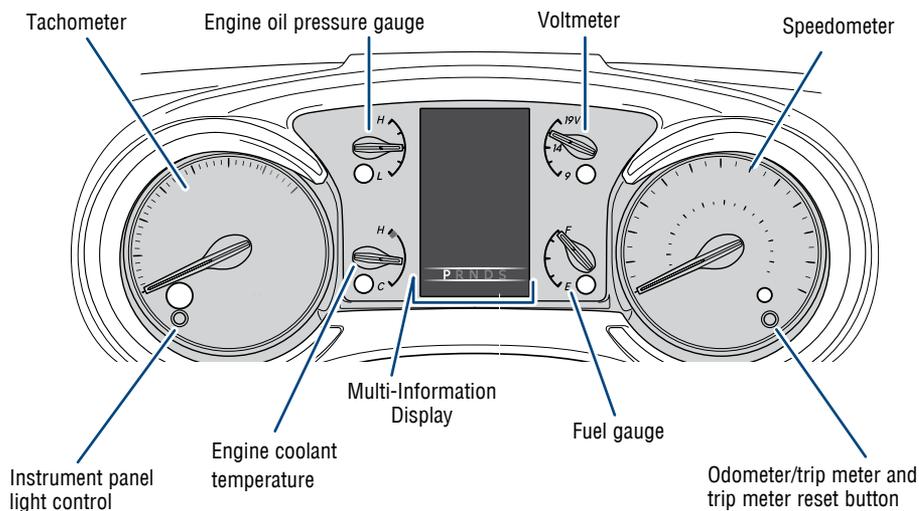

○ Service indicators and reminders

# OVERVIEW

## Indicator symbols

For details, refer to "Indicators and warning lights," Section 2-2, 2018 Owner's Manual.

	AIR BAG ON/OFF indicator <sup>1</sup>
	Airbag SRS warning <sup>1</sup>
<b>ABS</b>	Anti-lock Brake System (ABS) warning <sup>1</sup>
<b>AUTO LSD</b>	AUTO Limited Slip Differential indicator <sup>1</sup>
	Automatic High Beam (AHB) indicator
<b>BSM</b>	Blind Spot Monitor (BSM) indicator
	Blind Spot Monitor (BSM) outside rearview mirror indicator
<b>BRAKE</b>	Brake system warning <sup>1</sup>
	Center differential lock indicator <sup>2</sup>
	Charging system warning <sup>1</sup>
	Cruise control indicator
<b>SET</b>	Cruise control SET indicator
	Front fog light indicator
	Fuel tank door position
	Headlight low/high beam indicator
<b>4 HI</b>	High/Low speed four-wheel drive indicator <sup>2</sup>
<b>4 LO</b>	
	Lane Departure Alert (LDA) indicator
	Low fuel level warning



Low outside temperature indicator



Low Tire Pressure Warning<sup>1</sup>



Malfunction/  
Check Engine indicator<sup>1</sup>



Master warning



Parking brake indicator



Pre-Collision System (PCS)  
warning



Power steering warning<sup>1</sup>



Dynamic Radar cruise control  
(DRCC) indicator



Rear Cross Traffic Alert  
(RCTA) indicator



Seat belt reminder (alarm will  
sound if speed is over 12 mph)



Security indicator



Slip indicator<sup>1</sup>



TOW/HAUL mode indicator



Traction Control OFF indicator<sup>1</sup>



Turn signal indicator



Vehicle Stability Control  
(VSC) OFF indicator<sup>1</sup>

<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction.  
Have vehicle inspected by your Toyota dealer.

<sup>2</sup> If equipped.

# OVERVIEW

## Keyless entry

### UNLOCKING OPERATION



Push

Push ONCE: Driver door  
TWICE: All doors

**NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.**

### LOCKING OPERATION




Push

### POWER BACK DOOR OPERATION (IF EQUIPPED)





Push and hold

### BACK DOOR LOCK/UNLOCK FROM OUTSIDE

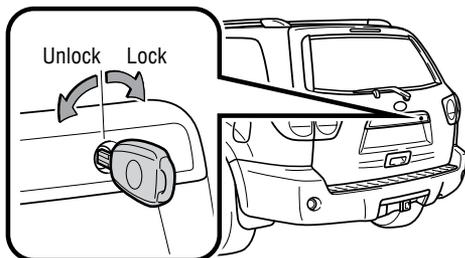





## Fuel tank door release & cap

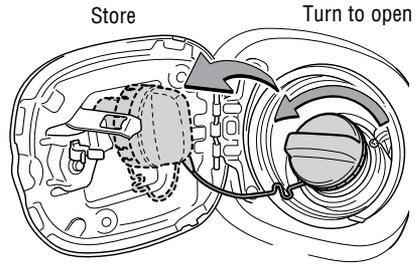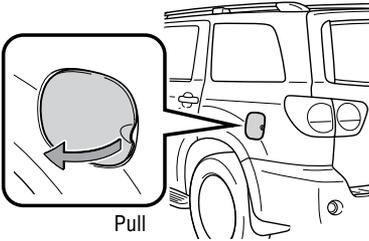

**NOTE:** To close, tighten until one click is heard. If the cap is not locked or tightened, Check Engine "CHECK" indicator may illuminate.

## Hood release

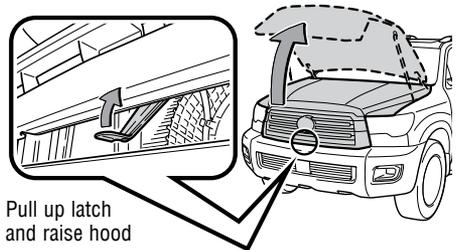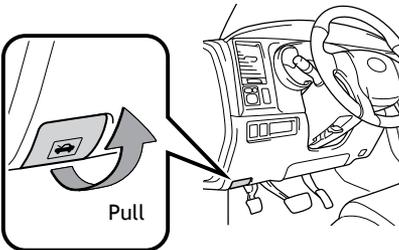


## Instrument panel light control


Change brightness level

Short press: 1 step change

Long press: continues change

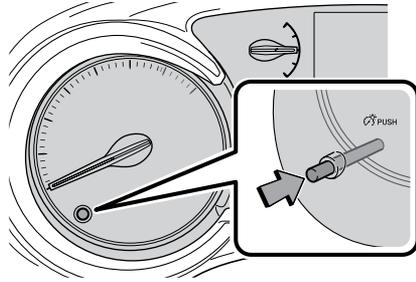


## Engine maintenance

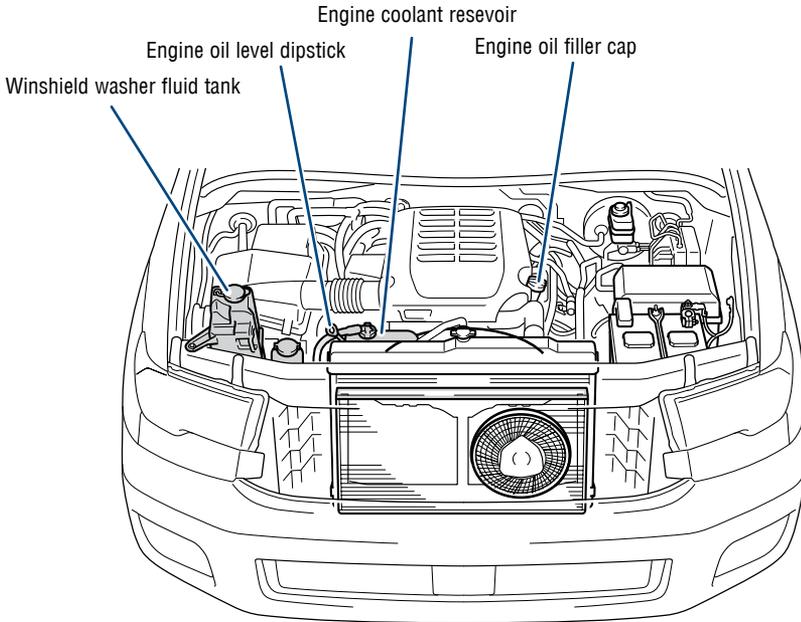

**NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."**

## Automatic transmission

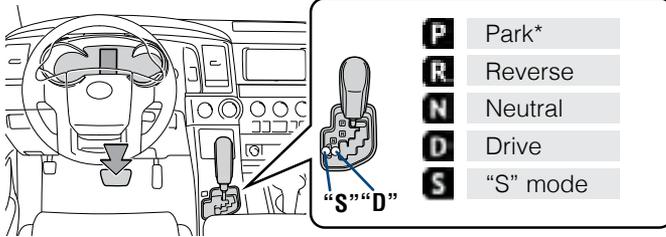

\* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

### "S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

## Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

### Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

### Speed linked door locking function


- Doors lock when the vehicle speed goes above approximately 12 mph (20 km/h).

### Driver's door linked door unlocking function

- Doors unlock when the engine switch is set from "ON" to "ACC" or "LOCK" within 10 seconds of opening the driver's door.

Refer to the Owner's Manual for more details.

## Parking brake

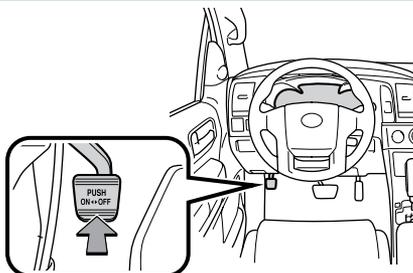


Set: Depress  
Release: Depress again

**BRAKE**


## Tilt & telescopic steering wheel

MANUAL

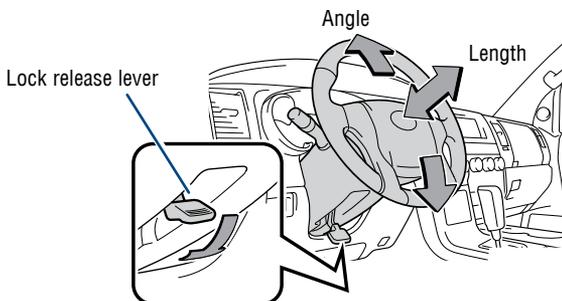

Hold wheel, push lever down, set angle and length and return lever.


POWER

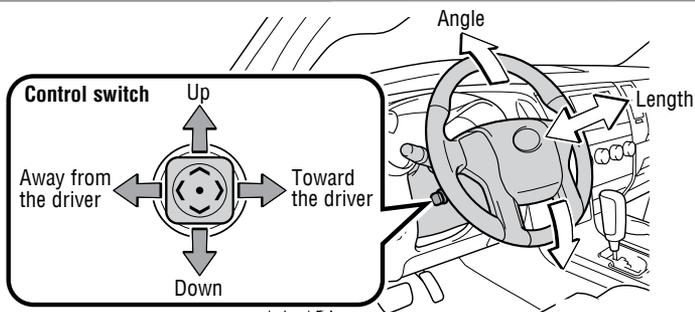

Toggle the control switch to set angle and length.

**NOTE: Do not attempt to adjust while the vehicle is in motion.**

## VSC OFF switch

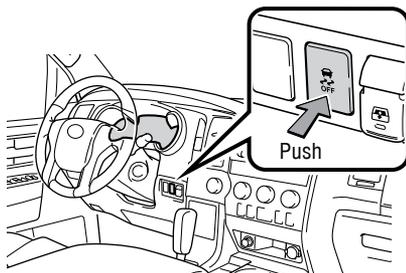


The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

*Refer to the Owner's Manual for more information.*

## Four-wheel drive (if equipped)

### FOUR-WHEEL DRIVE CONTROL SWITCH

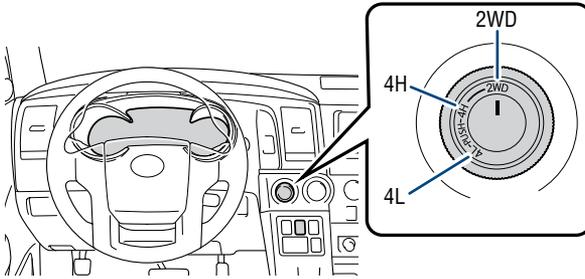

High speed (2WD)

Turn to “2WD” from “4H” with speed below 62 mph.



High speed (4WD)

Turn to “4H” from “2WD” with speed below 62 mph.

Shift to “N” position when stopped, then turn to “4H” from “4L.”




Low speed (4WD)

Shift to “N” position when stopped, then push and turn to “4L” from “4H.”

For best fuel economy and performance under normal driving conditions, keep in “2WD” position.

Refer to the Owner’s Manual for more details.


### CENTER DIFFERENTIAL LOCK/UNLOCK SWITCH

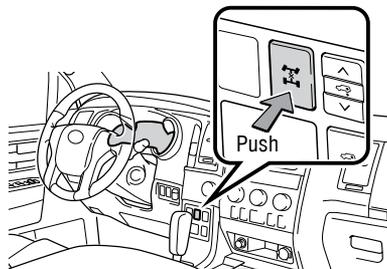

Lock the center differential if the vehicle’s wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Refer to the Owner’s Manual for more details on this system before attempting to use it.

## Blind Spot Monitor (BSM) with Rear Cross Traffic Alert (RCTA)

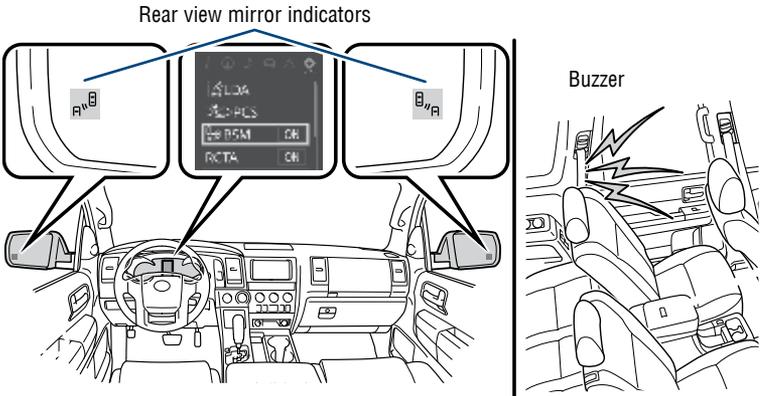

The Blind Spot Monitor function (assists the driver in making the decision when changing lanes)


The system is designed to use radar sensors to detect vehicles traveling in the Sequoia's blind spot and advises the driver of the vehicles' presence via the outside rear view mirror indicators.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

## Seat adjustments-Front

### Power seat


### Manual seat

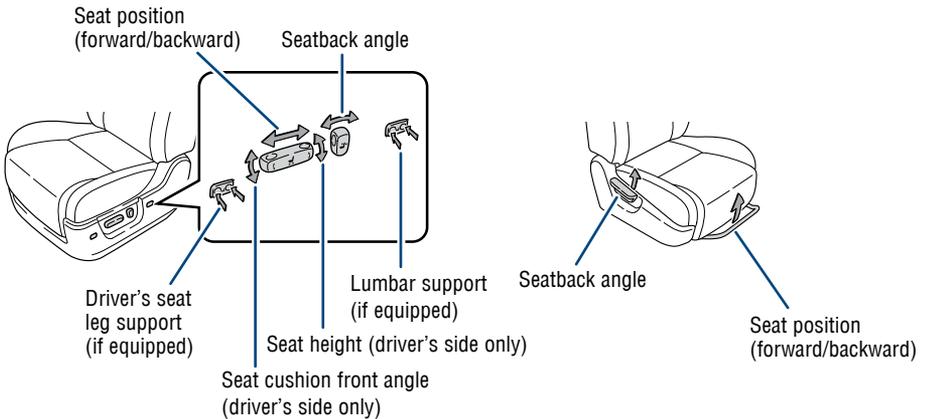


# Seat adjustments-Rear

## SECOND ROW

### Separate seat

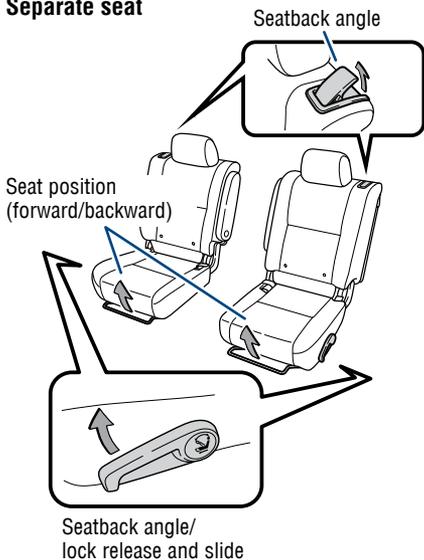


### Bench seat

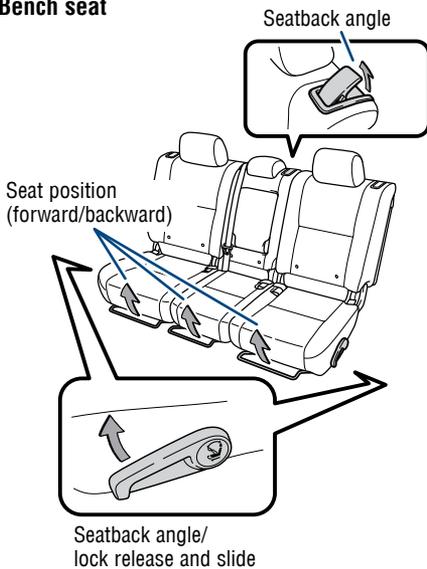


## THIRD ROW

### Manual seat

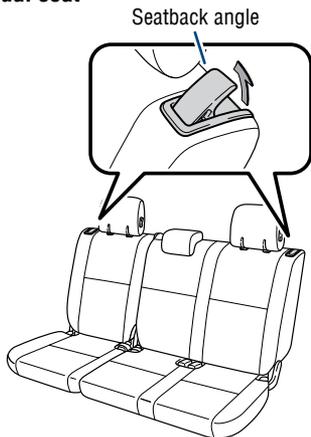


### Power seat

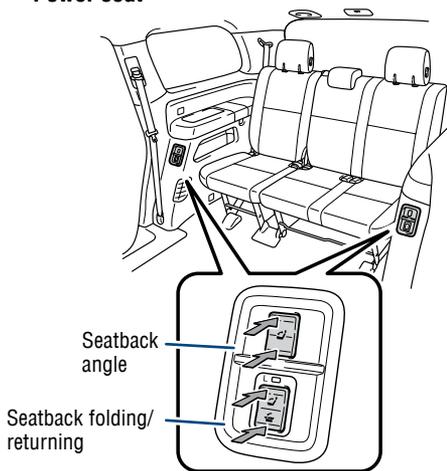

Refer to the Owner's Manual for more details.


## Seats-Head restraints

Front

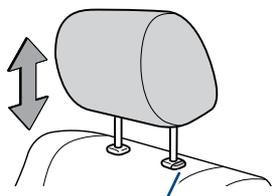

Lock release button


Second row

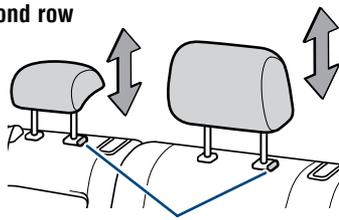

Lock release button


Middle head restraint in 8-passenger models only.

Third row (center)

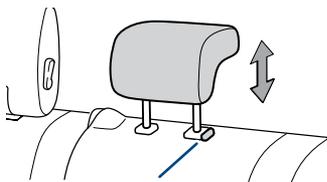


Lock release button

Third row (outside)

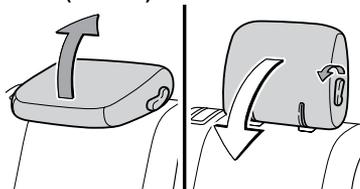


## Seats-Folding 2nd row seats

(1)

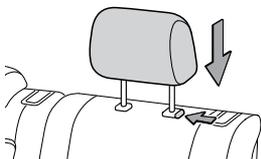

Lower the head restraints.


(2)

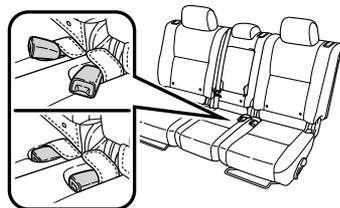

Stow the seat belt buckles.


Separated seat

(3)

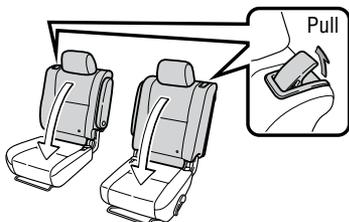


Fold down the seatback.

Bench seat

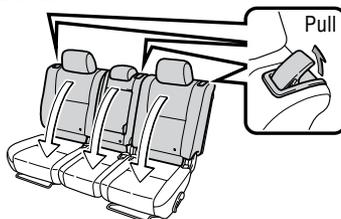


Fold down the seatback.

(4)

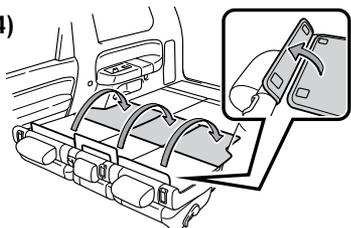


Fold out the board (if equipped) from the seatback.


## Seats-Folding 3rd row seats

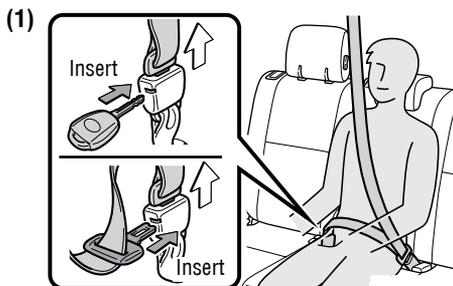


Release the center seat belt tab.

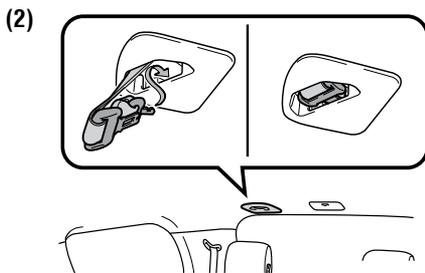

Stow the center seat belt tab.

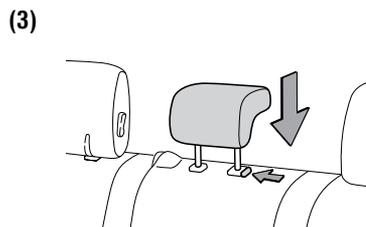

Lower the head restraint.

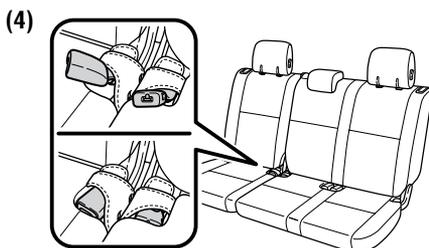


Stow the seat belt buckles.




Fold the head restraint.

### (6) From rear door side

Manual seat

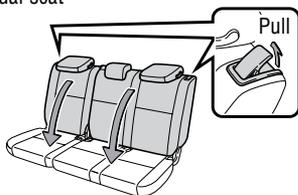


Power seat

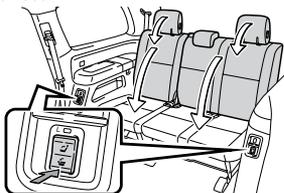


Fold the seats.

### From back door side

Manual seat

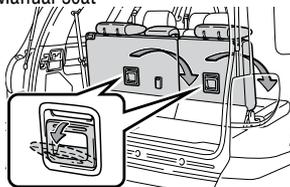



Power seat

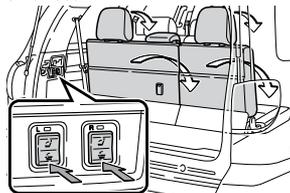

# FEATURES & OPERATIONS

## Lights & turn signals


### HEADLIGHTS

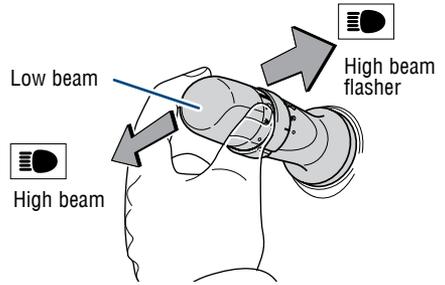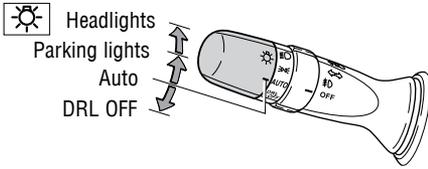



**Daytime Running Light system (DRL)** Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.

**Automatic light cut off system** Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

### FRONT FOG LIGHTS

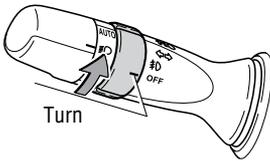

### TURN SIGNALS

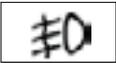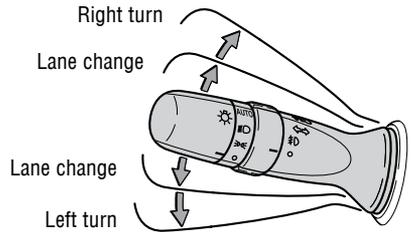


Front fog lights come on only when the headlights are on low beam.




# Windshield wipers & washers

## FRONT


### Type A

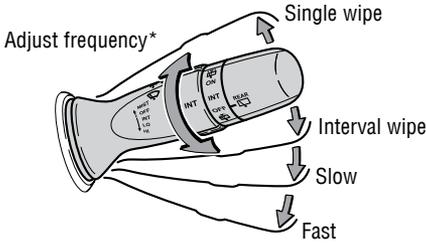

### Type B

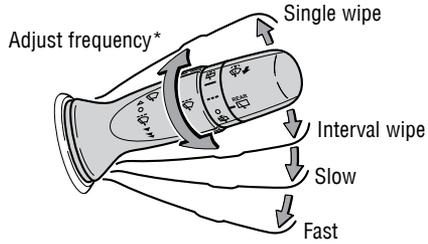


Pull to wash and wipe

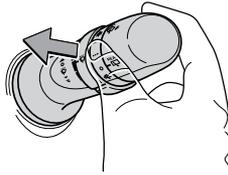


\* **Intermittent windshield wiper frequency adjustment** Rotate to increase/decrease wipe frequency.

## REAR

### Type A


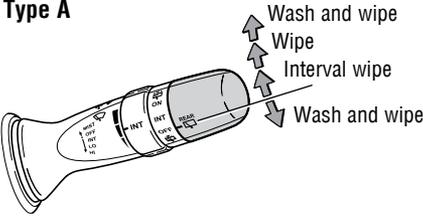


### Type B

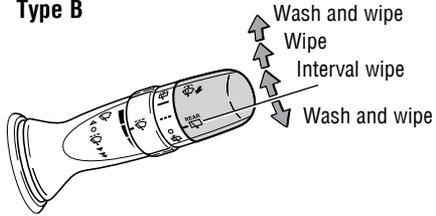

# Windows

## Driver side

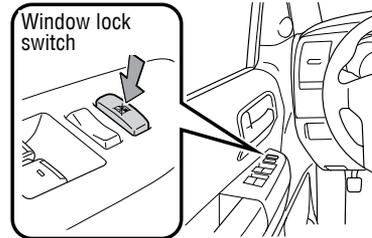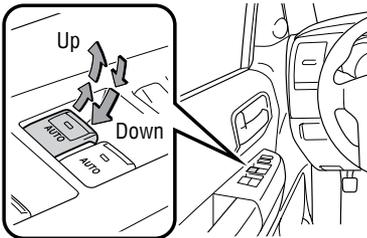


**Automatic operation** Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows and back window. Driver's window remains operable.

# FEATURES & OPERATIONS


## Window-Back door

### OPERATING FROM INSIDE

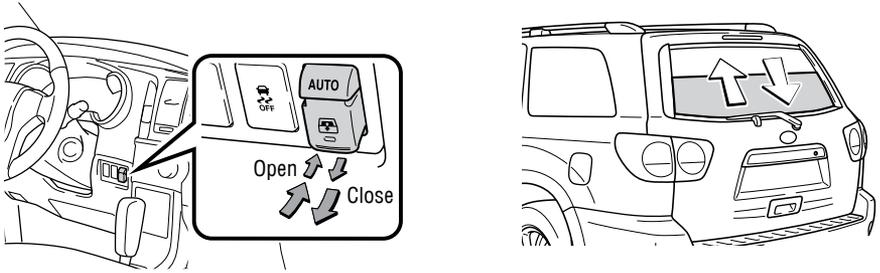


**Automatic operation** Push the switch completely in or pull it completely out and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

### OPERATING FROM OUTSIDE

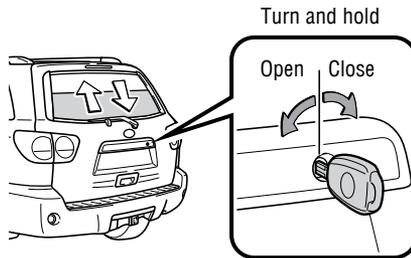


## Power back door (if equipped)

### Instrument panel

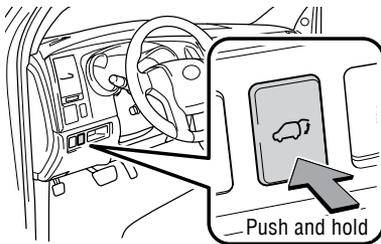

Open: Push and hold  
Close: Push and hold again

### Back door (close only)

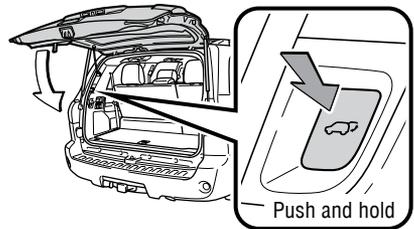


**NOTE:** Door will stop closing if obstructed, or to manually stop door closing, push button again.


**NOTE:** If battery is disconnected, the power back door needs to be reinitialized. Refer to the Owner's Manual for more details.

# Moonroof

## SLIDING OPERATION

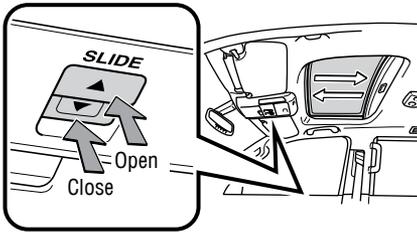

## TILTING OPERATION

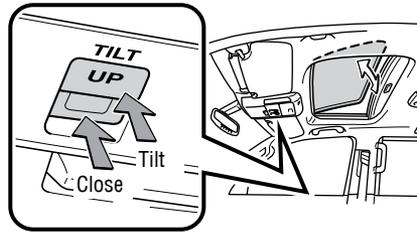


Push to open/close. To stop partway, press the switch lightly.

# Driving position memory (if equipped)


## DRIVER'S SEAT

### To save

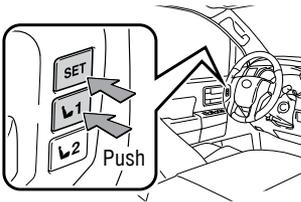

- (1) Adjust driver's seat, steering wheel, and outside rear view mirrors.
- (2) Push "SET" and "1" or "2" buttons to save.

### To recall

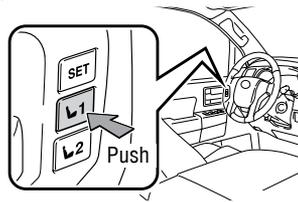

- (1) Press "1" or "2" to recall.


You can save up to two driving positions to memory and recall it with the touch of a button. Make sure shift lever is in "P" position and ignition switch is in the "ON" position.

*Refer to the Owner's Manual for more details on this system.*

# Air conditioning/heating

FRONT

## Display

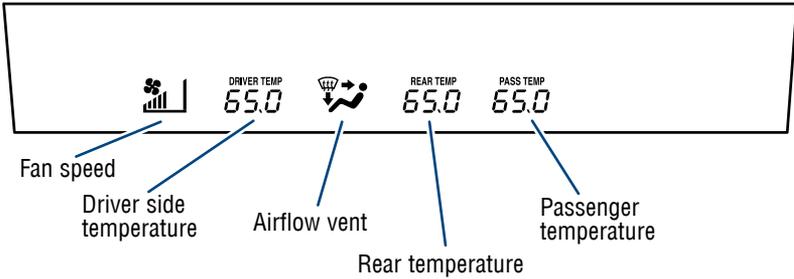


## Control panel

### Automatic climate control ON

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.


### "SYNC" button

*Indicator ON:* Synchronized temperature settings for driver, front passenger and rear seats. *Indicator OFF:* Separate temperature settings for driver, front passenger and rear seats.

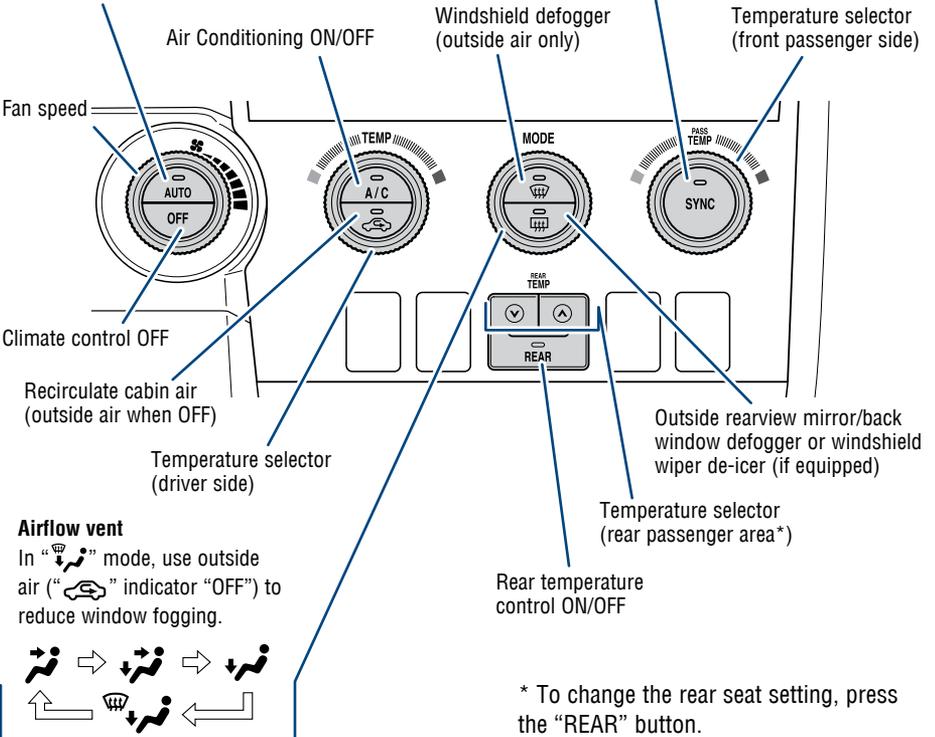

\* To change the rear seat setting, press the "REAR" button.

REAR




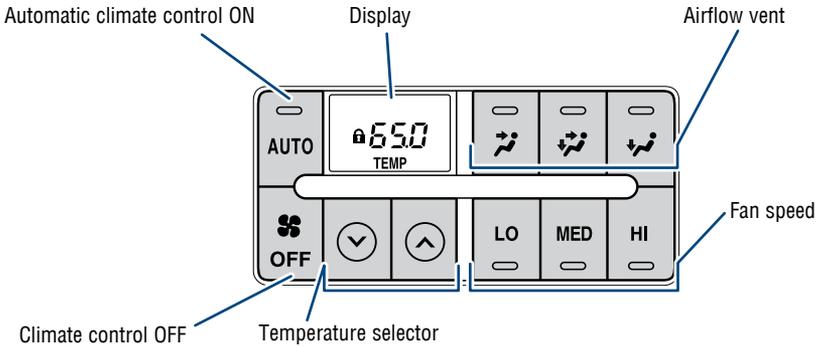


## Seat ventilators/heaters (if equipped)


FRONT SEATS

### Heaters and ventilators (if equipped)

### Heaters only (if equipped)

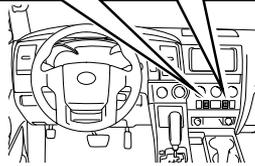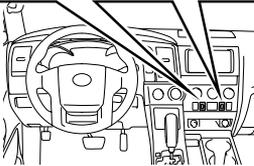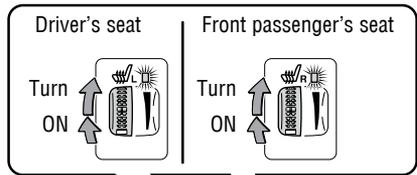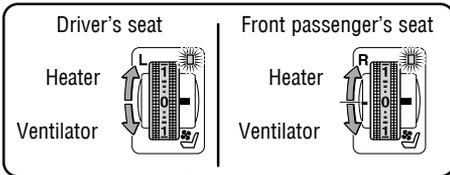

SECOND SEATS (WITH CONSOLE BOX)

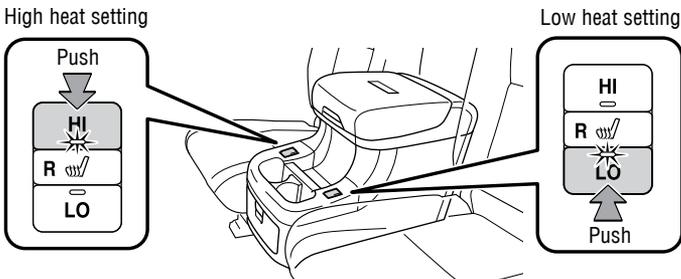


Push lightly in the opposite direction to turn off.


# FEATURES & OPERATIONS

## Audio

### ENTUNE™ AUDIO PLUS WITH CONNECTED NAVIGATION APP<sup>1</sup>

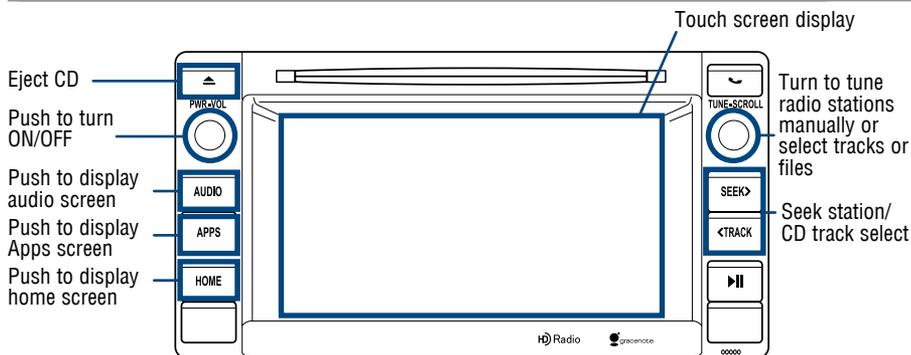


### ENTUNE™ PREMIUM (JBL®) AUDIO WITH INTEGRATED NAVIGATION AND APP SUITE<sup>1</sup>

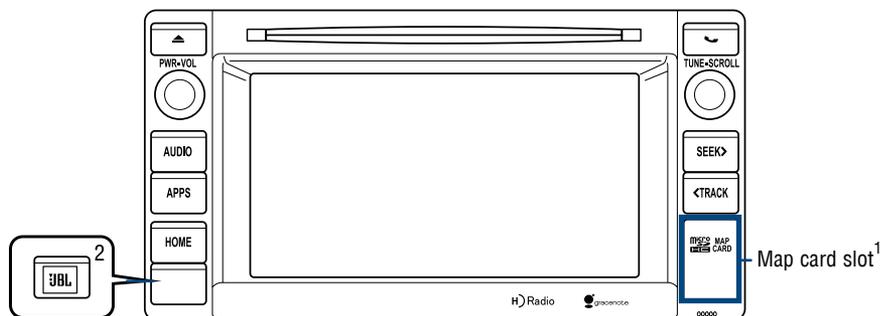

<sup>1</sup> Refer to the Navigation System Owner's Manual and 2018 Entune™ Audio Quick Reference Guide.

<sup>2</sup> Entune™ Premium JBL® Audio

### USB/AUX PORT

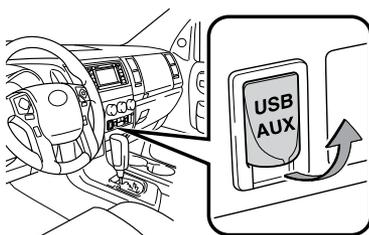

#### USB port

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.


#### AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.


## STEERING WHEEL SWITCHES

“**▲ ▼**” and volume control  
Use “**▲ ▼**” to search within the selected audio media (radio, CD, etc.).

“**MODE/HOLD**”  
Push to turn audio ON and select an audio mode. Push and hold to turn the audio off.

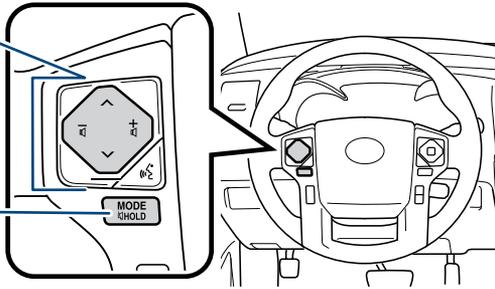

## Rear view monitor system

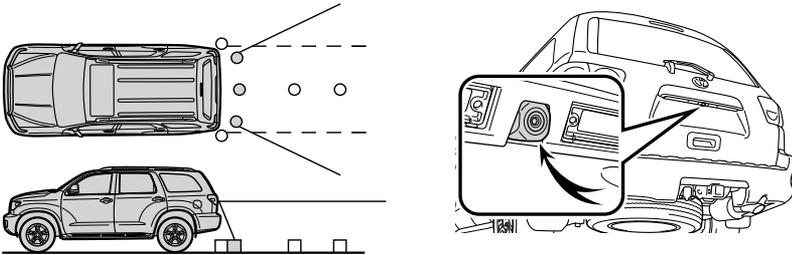


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the “SETUP” button and select “Display” on the “Setup” screen. Select “Camera” to adjust the screen contrast and brightness.

*Refer to the Owner's Manual for limitations and more details on this system.*

## TOW/HAUL switch

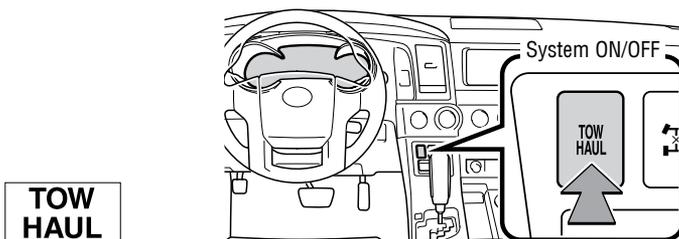


“TOW/HAUL” mode can be used when carrying or towing heavy loads. As fuel economy is reduced while in “TOW/HAUL” mode, deactivating when driving without a load is recommended.

*Refer to the Owner's Manual for more details on this system before attempting to use it.*

## FEATURES & OPERATIONS

### Garage door opener (HomeLink®)\*

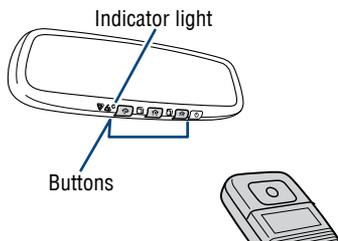

Garage door openers\* manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc. Refer to "Garage door opener," Section 5-4 in the Owner's Manual for more details.


For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.


### Cup holders

#### FRONT

##### Front console

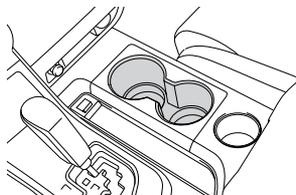


##### Back of the front console

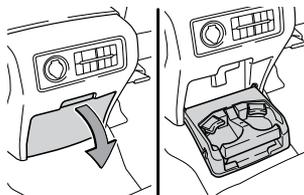


#### REAR


##### Rear side trim

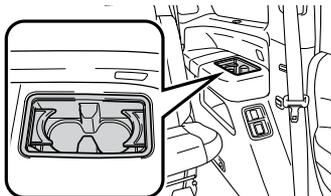

##### Rear console box (if equipped)

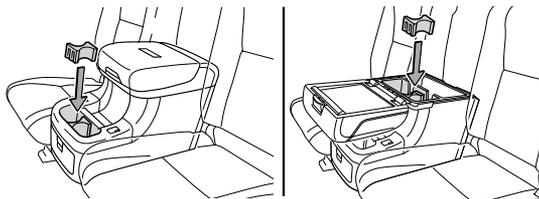

## Multi-Information Display (MID)

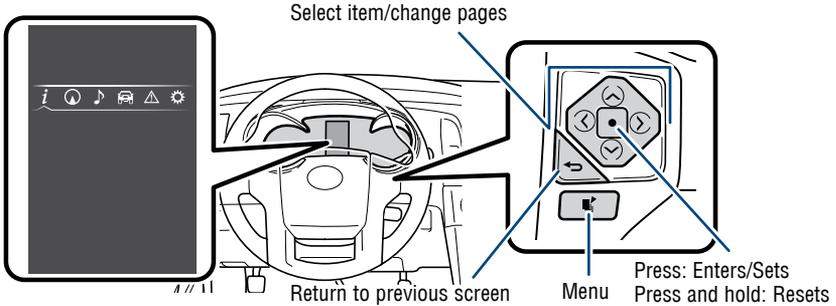


Use the meter control switched on the steering wheel to scroll through the following information screens:


-  Drive information
-  Navigation system-linked display (if equipped)
-  Audio system-linked display
-  Vehicle information
-  Warning message display
-  Settings display

Refer to the Owner's Manual, for more details.

## Door locks

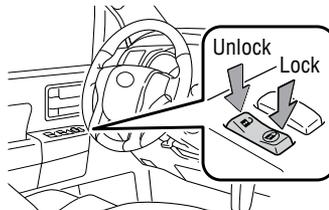

## Power outlets-120V AC (if equipped)

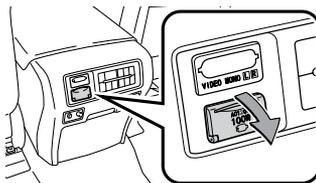


Key must be in the "ON" position to be used.

## Telephone controls (Bluetooth®)


### Multimedia system



### Microphone

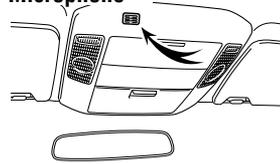

### Steering wheel telephone switches

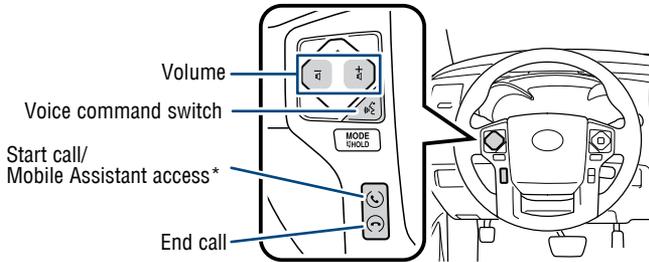

Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.


\* Push and hold to access Mobile Assistant. Once you connect a compatible, registered mobile phone, you can access Siri® Eyes Free using Mobile Assistant access switch.

*Refer to the Navigation System Owner's Manual for more details.*


**NOTE: Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.**

## Power outlets-12V DC


Instrument panel

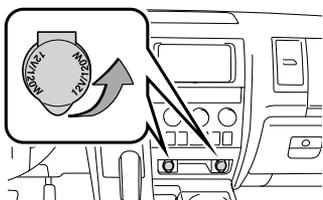


Inside of the center console box

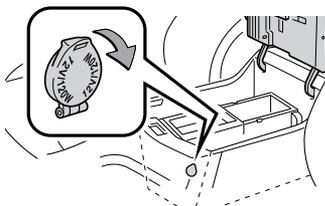

Back of the center console box (if equipped)

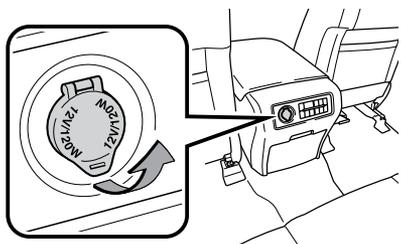

Luggage compartment

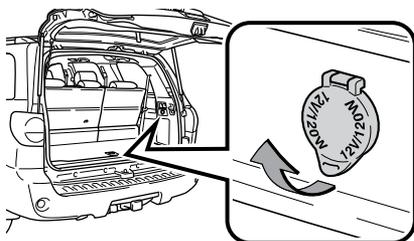


Key must be in the "ACC" or "ON" position to be used.

## Rear seat entertainment system (if equipped)

Front audio system

DVD player

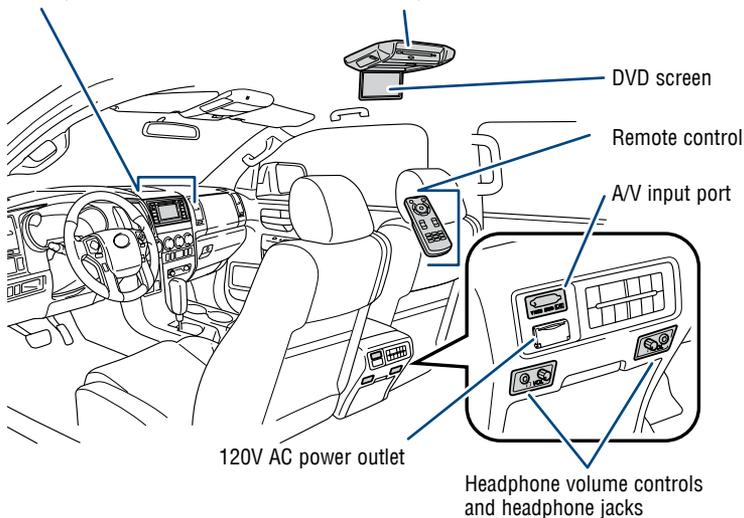

For details, refer to the Navigation System Owner's Manual.

## Quick overview-Toyota Safety Sense™ P (TSS-P)

Toyota Safety Sense™ P (TSS-P) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS-P is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

**Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to <http://www.toyota.com/safety-sense>**



### Pre-Collision System with Pedestrian Detection function (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.



Advanced millimeter-wave radar sensor system is designed to work with the camera sensor to help recognize a preceding pedestrian, and provide an alert, mitigation and/or avoidance support in certain conditions.



### Lane Departure Alert (LDA)

LDA is designed to provide notification when the system detects an unintended lane departure.



### Dynamic Radar Cruise Control (DRCC)

DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed.




### Automatic High Beams (AHB)


AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.

## Sensors

TSS-P combines an in-vehicle camera mounted in front of the inside rear view mirror and a millimeter-wave radar mounted in the front grille. These sensors support the driver assist systems.

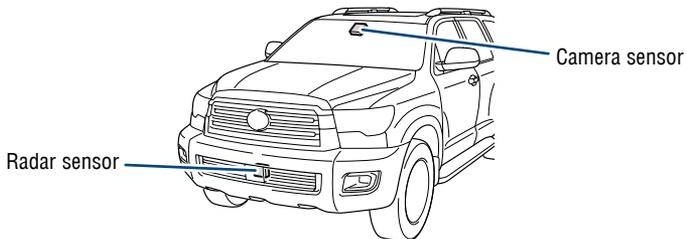

## Pre-Collision System with Pedestrian Detection function (PCS w/PD)

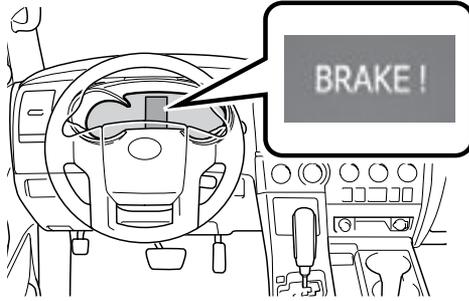

The Pre-Collision System uses a radar sensor and camera sensor to help detect a vehicle or pedestrian in front of your vehicle.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the pre-collision system yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

*Refer to a Toyota Owner's Manual for a list of additional situations in which the system may not operate properly.*

### **Pre-Collision Warning**

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

### **Pre-Collision Brake Assist**

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.

### **Pre-Collision Braking**

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

### **Suspension control**


When the system determines that the possibility of a frontal collision is high, the Adaptive Variable Suspension System will control the damping force of the shock absorbers to help maintain an appropriate vehicle posture.

*Refer to a Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.*

# TOYOTA SAFETY SENSE™


## PEDESTRIAN DETECTION FUNCTION

In certain conditions, the PCS system included with the TSS-P package may also help to detect a pedestrian in front of your vehicle. With Toyota Safety Sense™ P, PCS uses an in-vehicle camera and front-grill mounted millimeter-wave radar to help detect a pedestrian in front of your vehicle in certain conditions. The in-vehicle camera of PCS detects a potential pedestrian based on size, profile, and motion of the detected pedestrian. However, a pedestrian may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian, preventing the system from operating or engaging. Refer to a Toyota Owner's Manual for additional information.

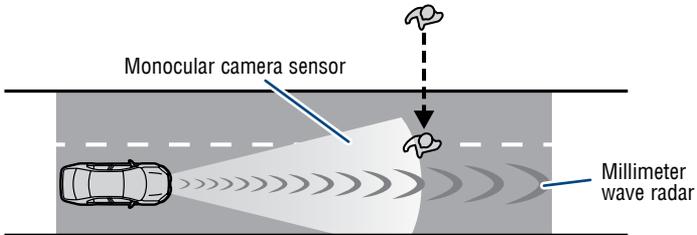

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.


## CHANGING THE PCS ALERT TIMING

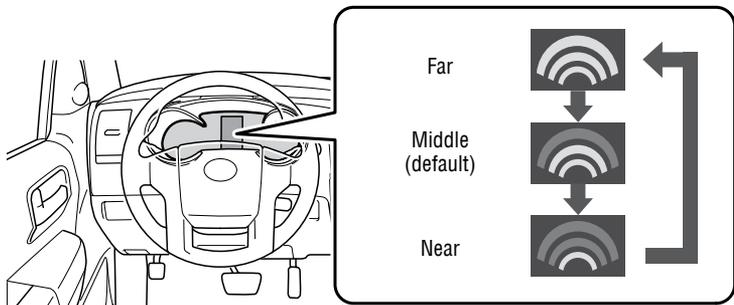

- (1) Press “<” or “>” of meter control switches and select .
- (2) Press “^” or “v” of meter control switches and select “PCS”, and press .
- (3) Press “^” or “v” of meter control switches and select “Sensitivity”, and press  to select the desired setting.

**Note: PCS is enabled each time the engine switch is turned to Ignition On. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same).**

## DISABLING THE PRE-COLLISION SYSTEM (PCS)

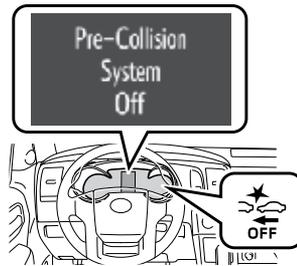


- (1) Press “<” or “>” of meter control switches and select .
- (2) Press “^” or “v” of meter control switches and select “PCS”, and press .
- (3) Press “^” or “v” of meter control switches and select “PCS”, and press  to select the desired setting (on/off).

**Note: The system is enabled each time the power switch is turned to ON mode.**

Refer to a Toyota Owner's Manual for additional information on PCS operation, settings adjustments, limitations, and precautions before attempting to use it.

## Lane Departure Alert (LDA)

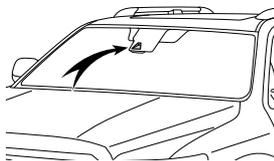

The Lane Departure Alert system recognizes visible white or yellow lane markers via a camera sensor under certain circumstances. The system alerts the driver with a warning buzzer sound and message in the Multi-Information Display (MID) when it detects the vehicle deviating from or swaying multiple times within its lane.


## TURNING ON THE LDA SYSTEM




Press the LDA switch to turn the LDA system on. Depress again to turn it off.

**Note: The system will continue in the last state it was in (ON or OFF) when the engine is started again.**

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

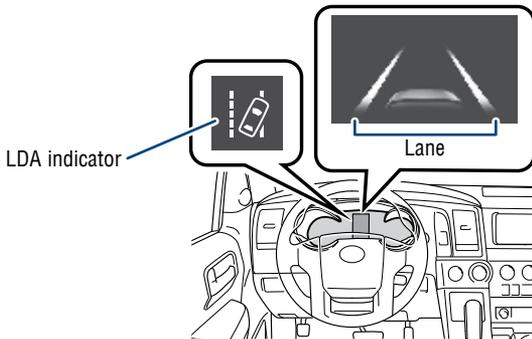

Lane Departure Alert (LDA) indicator flashes orange when operating.

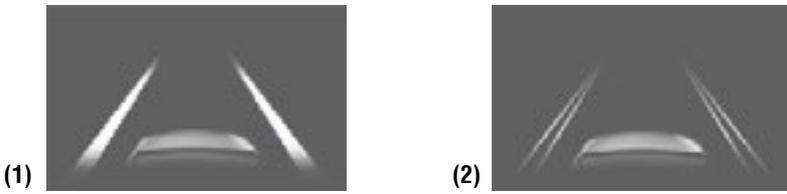

The LDA function displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

(1) The system displays solid white lines on the LDA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.

(2) The system displays outlines on the LDA indicator when lane markers on the road are not detected or the function is temporarily cancelled.

**Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.**

## ADJUSTING LANE DEPARTURE ALERT (LDA) SENSITIVITY



The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

**High** - Warns before the front tire crosses the lane marker.

**Normal** - Warns when the front tire crosses the lane marker.

## SWAY CONTROL FUNCTION



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.




Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

The sway warning function can detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning displays in the MID.


## Dynamic Radar Cruise Control (DRCC)

DRCC helps maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. This mode is always selected first when the cruise control button is depressed. Constant speed cruise control mode is also available.

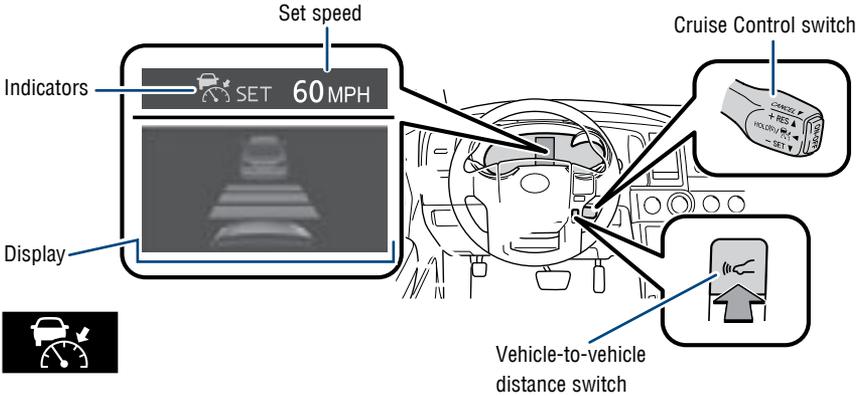

### TURNING SYSTEM ON/OFF


(1)

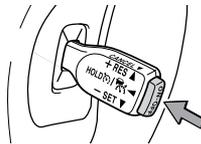


Note: If DRCC is turned off and you hold the ON-OFF button for at least 1.5 seconds, the system switches to constant speed control mode.

### ADJUSTING SET SPEED

(2)

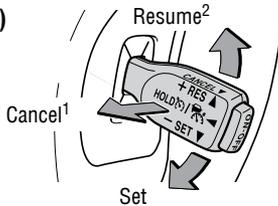

(3)

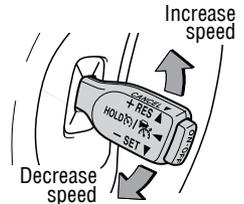

Vehicle will cruise at a set speed, decelerate to maintain selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.


(1) Push the ON-OFF button. The “RADAR READY” or “” indicator will come on.

(2) Push the lever down to SET speed, push it up to Resume and pull it or depress brake to Cancel.

(3) Push up to increase the set speed, push down to decrease (1 mph increments).


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

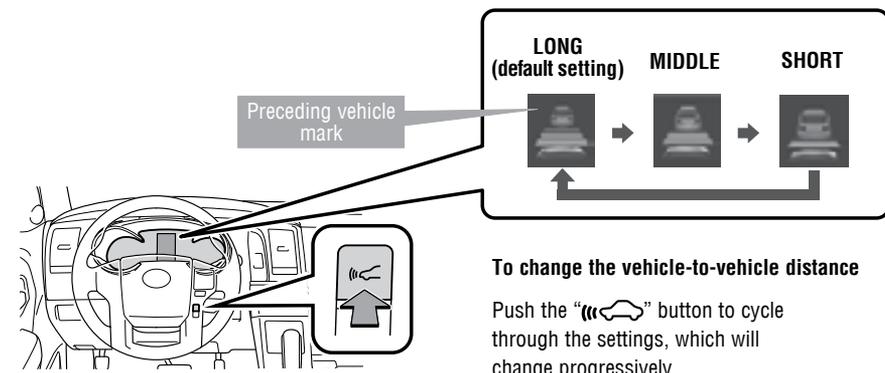

This mode employs a radar sensor to detect the presence of a preceding vehicle up to approximately 328 ft (100m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a suitable following distance from the vehicle ahead. These distances vary based on vehicle speed.

**Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.**

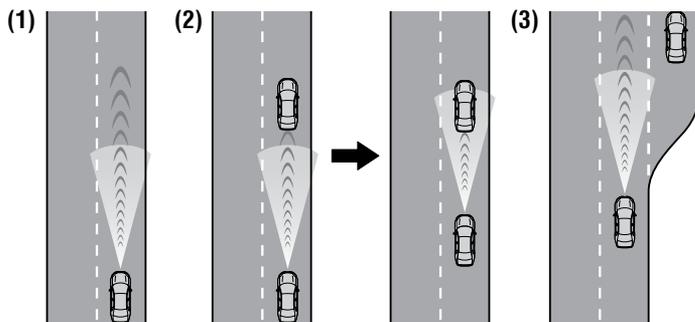

**(1) Constant speed cruising when there are no vehicles ahead**

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

**(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears**


When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

### (3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

**Note:** When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.


## SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

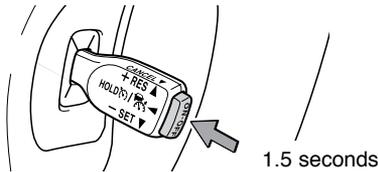

If you are already using DRCC , push ON-OFF button to turn the system off first, then push and hold ON-OFF button for at least 1.5 seconds to switch.

**Note:** When the engine is turned off, it will automatically default to DRCC.

## SETTING CONSTANT SPEED (CRUISE) CONTROL

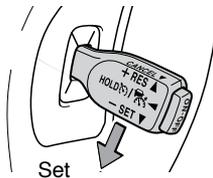


**To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 36.**

<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

*Refer to a Toyota Owner's Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.*

## Automatic High Beams (AHB)

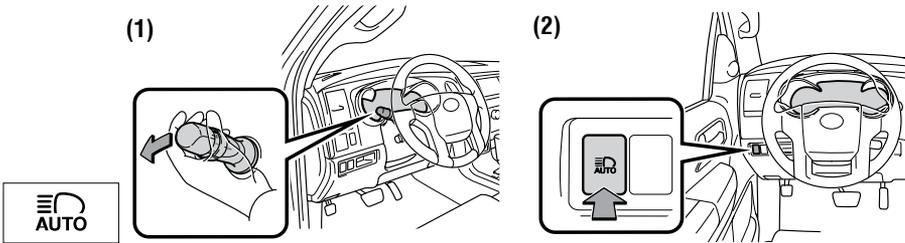

AHB is a safety system designed to help drivers see more of what's ahead at nighttime without dazzling other drivers. When enabled, AHB uses an in-vehicle camera to help detect the headlights of oncoming vehicles and tail lights of preceding vehicles, then automatically switches between high and low beams as appropriate to provide the most light possible and enhance forward visibility. By using high beams more frequently, the system may allow earlier detection of pedestrians and obstacles.

*Refer to a Toyota Owner's Manual for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.*

### ACTIVATING THE AHB SYSTEM

- (1) With the engine switch in IGNITION ON mode, turn the headlight switch to or "AUTO" position.
- (2) Push lever away from you.
- (3) Press the AHB switch.



The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

**Note: Pull the lever back toward you, press the AHB switch to turn the AHB system off.**

### CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY


When all of these conditions are met, high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h.)
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few street lights on the road ahead.

If any of these conditions occur, the system is designed to automatically turn off high beams:

- Vehicle speed drops below approximately 17 mph (27 km/h.)
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

## Tire Pressure Monitoring (warning) System (TPMS)

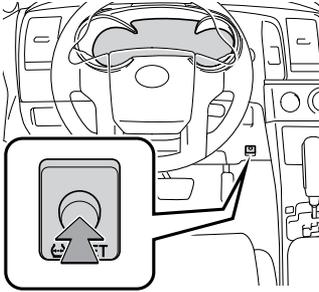

### System reset initialization

1. Push and hold “ SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “ SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

*Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.*

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

**NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.**

## Seat belts




**NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.**

*To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.*


## Seat belts-Shoulder belt anchor

Squeeze lock release to lower

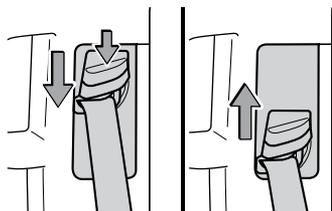

## Rear door child safety locks


Rear door

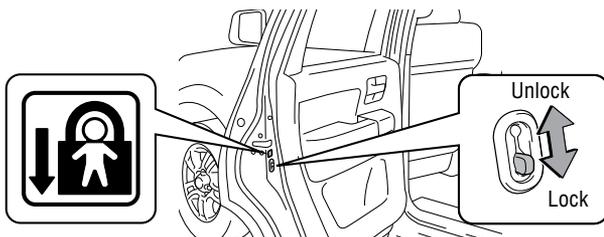


Moving the lever downward will allow the door to be opened only from the outside.

## Spare tire & tools

### SPARE TIRE, JACK AND TOOL LOCATION

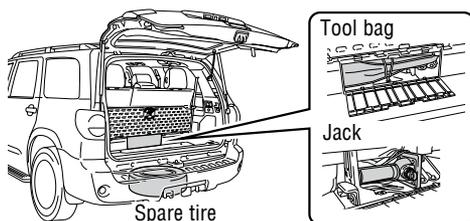

### REMOVING THE SPARE TIRE

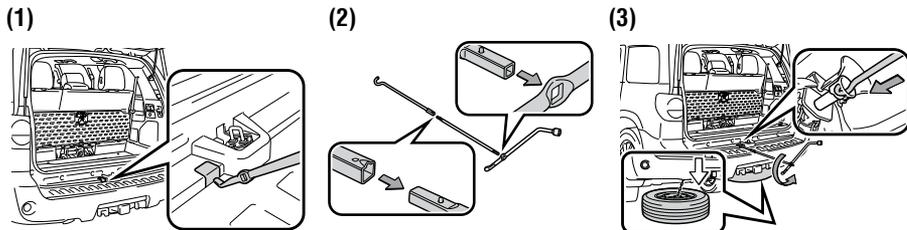

Remove the cover.

Assemble the jack handle.

Insert the jack handle extension into the lowering screw. Lower the spare tire completely to the ground.

Refer to the Owner's Manual for tire changing and jack positioning procedures.

# SAFETY & EMERGENCY FEATURES

## **Star Safety System™**

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC),

*Refer to the Owner's Manual for more details and important information on limitations to these systems.*

### ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

### BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

### ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

### SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

### VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

## TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

## Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

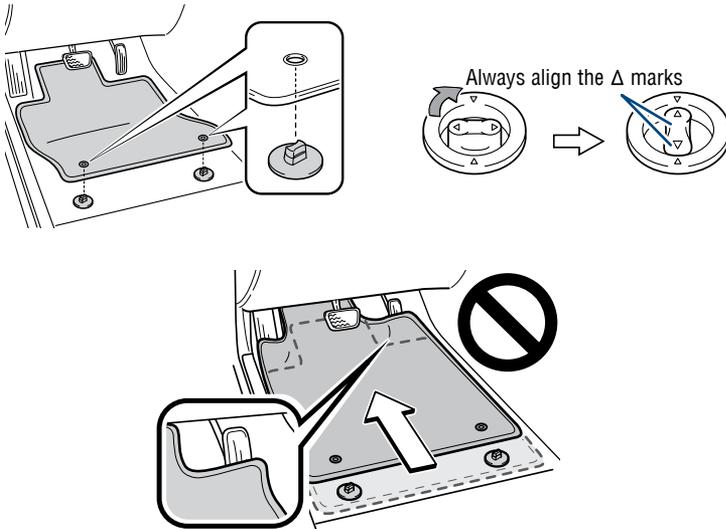

# **BLUETOOTH® DEVICE PAIRING SECTION**


Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.<sup>1</sup>


## Bluetooth® Pairing for Android phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.<sup>2</sup>

### Initiate Bluetooth® on your Android®

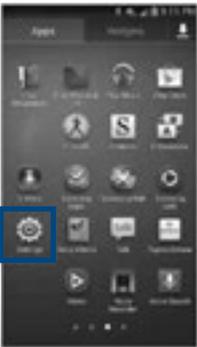

**STEP 1**  
From your **APPS SCREEN**, select **SETTINGS**.

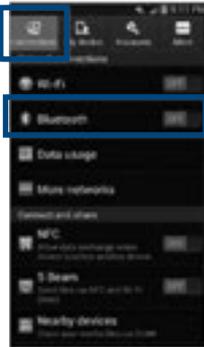

**STEP 2**  
Select **CONNECTIONS** and select **BLUETOOTH**.




**STEP 3**  
Ensure **BLUETOOTH** is **ON**.



**STEP 4**  
Select **YOUR PHONE DEVICE** to make it discoverable.

*Phone will seek out Bluetooth devices while remaining discoverable.*

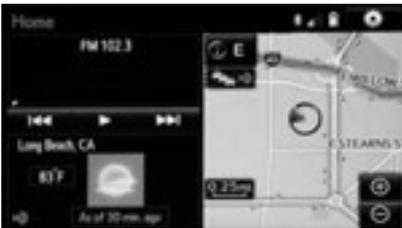

### STEP 5

While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

<sup>1</sup> To determine which head unit is installed in your vehicle, refer to the Audio section in this guide. Entune™ Premium Audio screens are shown in this section. Screens and features may vary by Entune™ system.

<sup>2</sup> Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6


On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



### STEP 7

Select **BLUETOOTH**.


*Image shown is a sample image, features may vary.*

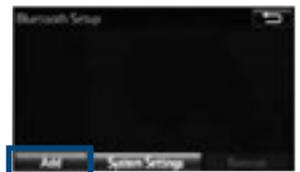

### STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.

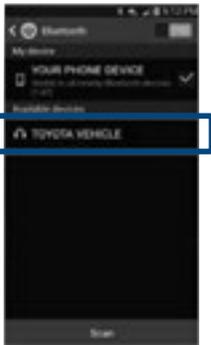

### STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10



Your smartphone is now paired with Entune.



### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

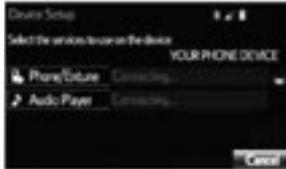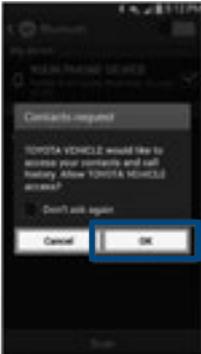

### STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

*It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota.*

### STEP 13

A confirmation will appear once your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.

## Bluetooth® Pairing for iPhone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***


Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your iPhone®



#### STEP 1

From the **HOME SCREEN**, select **SETTINGS**.

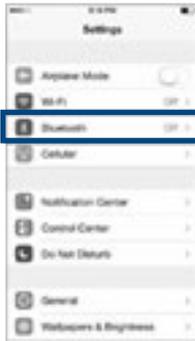

#### STEP 2

Select **BLUETOOTH**.



#### STEP 3

Ensure **BLUETOOTH** is **ON**.



#### STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



### STEP 7

Select **BLUETOOTH**.

*Image shown is a sample image, features may vary.*



### STEP 8


Select **ADD**, to add your phone device.



### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*

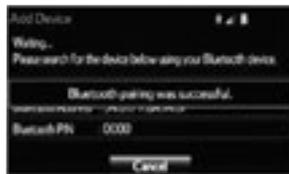

### STEP 10


Your smartphone is now paired with Entune.

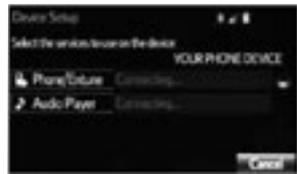

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

# BLUETOOTH® DEVICE PAIRING

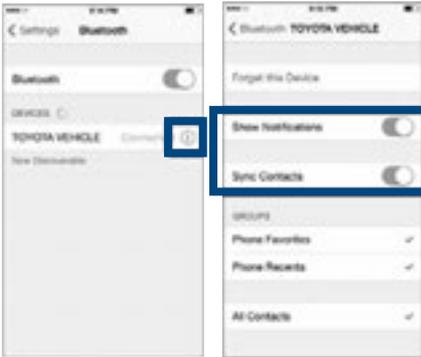

## STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

*Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.*



## STEP 13

A confirmation will appear once your phone has been paired and connected.

### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

## Bluetooth® Pairing for Windows Phone and Entune™ touch screen system

**\*\*Do not attempt the Bluetooth® Pairing process while driving.\*\***

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

### Initiate Bluetooth® on your Windows Phone®




#### STEP 1

From your APP LIST, select **SETTINGS**.




#### STEP 2

Select **BLUETOOTH**.

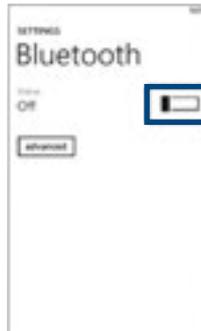

#### STEP 3

Ensure **BLUETOOTH** is **ON**.

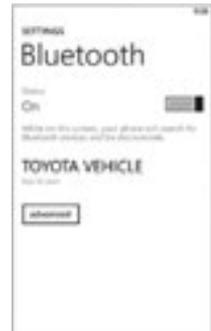

#### STEP 4

Phone will seek out Bluetooth devices while remaining discoverable.



#### STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

# BLUETOOTH® DEVICE PAIRING

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



### STEP 6


On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



### STEP 7

Select **BLUETOOTH**.

*Image shown is a sample image, features may vary.*

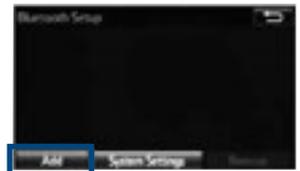

### STEP 8

Select **ADD**, to add your phone device.

For Entune™ Audio System, press the **SETUP BUTTON** on the faceplate to access the Setup Screen.



### STEP 9


Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

*You may need to enter the provided Bluetooth PIN on your phone.*



### STEP 10

Your smartphone is now paired with Entune.

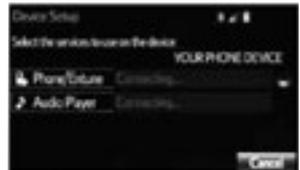

### STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

## Initiate Bluetooth® on your Entune™ Multimedia Head Unit



### STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



### STEP 13

A confirmation will appear that your phone has been paired and connected.

#### Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:  
[www.toyota.com/connect](http://www.toyota.com/connect)

Your Toyota Owner's Manual  
Located in the vehicle glovebox

Toyota Customer  
Experience Center  
(800) 331-4331

#### Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See [Toyota.com/entune](http://Toyota.com/entune) for details.



[www.toyota.com/owners](http://www.toyota.com/owners)

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 7/17  
17-MKG-10175



00505QRG18SEQ