

QUICK REFERENCE GUIDE



Sienna

2021

2021

SIENNA

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Sienna.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Sienna operations. Every Sienna owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release & cap	8
Hood release	9
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	7
Keyless entry ¹	6-7
Smart Key system ^{1,2}	8

FEATURES & OPERATIONS

Air conditioning/heating	36-37
Audio	30
Auto lock/unlock ²	11
Bird's Eye View Camera with Perimeter Scan	40
Blind Spot Monitor with Rear Cross Traffic Alert (BSM w/RCTA)	41
Clock	19
Cup holders	23
Door locks	14
Driver Easy Speak	28
Driving mode select	12
Electric parking brake	13
EV drive mode	12
Front and Rear Parking Assist with Automated Braking (PA w/AB)	42
Garage door opener (HomeLink®) ^{2,3}	27
Head-Up Display (HUD)	19
Heated/ventilated seats	35
Heated steering wheel	35
Height Adjustable, Hands-Free Power Liftgate	16-17
Hybrid Synergy Drive System	10
Hybrid transmission	11
Intuitive parking assist	43
Lights ¹ & turn signals	20-21
Moonroof	22
Multi-Information Display (MID) ²	18
Power outlet-12V DC	33
Power outlets-120V AC	33
Power sliding doors	15
Power windows	17
Qi Wireless charger	32
RCD (Rear Camera Detection)	39
Rear seat entertainment system	34
Rear view monitor system	38

FEATURES & OPERATIONS (continued)

Seat adjustments-Front	24
Seat adjustments-Rear	24-25
Seats-Head restraints	26
Seats-Moving 2nd row center seat	25
Seats-Removing 2nd row center seat	25
Seats-Stowing 3rd row seats	26
Steering lock release	10
Steering wheel switches & telephone controls (Bluetooth®)	29
Sunshade-Side	22
Tilt & telescopic steering wheel	14
USB charge ports	31
USB media port	30
Vehicle Stability Control (VSC)/TRAC/Trailer sway control OFF switch	38
Windshield wipers & washers	21

TOYOTA SAFETY SENSE™ 2.0 (TSS 2.0)

Automatic High Beams (AHB)	59-60
Full-Speed Range Dynamic Radar Cruise Control (DRCC)	56-58
Lane Departure Alert with Steering Assist (LDA w/SA)	48-51
Lane Tracing Assist (LTA)	52-55
Pre-Collision System with Pedestrian Detection (PCS w/PPD)	45-47
Quick overview-Toyota Safety Sense™ 2.0 (TSS 2.0)	44
Road Sign Assist (RSA)	60-61
Sensors	45

SAFETY & EMERGENCY FEATURES

Child restraint anchors	63
Floor mat installation	68
Rear door child safety locks	62
Safety Connect®	66
Seat belts	62
Seat belts-Shoulder belt anchor	62
Spare tire & tools	64
Star Safety System™	67-68
Tire Pressure Monitoring (warning) System (TPMS)	63
Tire repair kit & tools	65

BLUETOOTH® DEVICE PAIRING SECTION


70-72

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.

Instrument panel

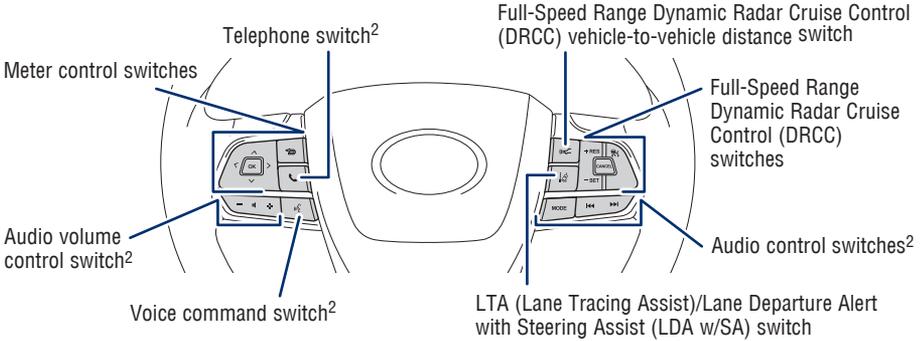


Steering wheel controls

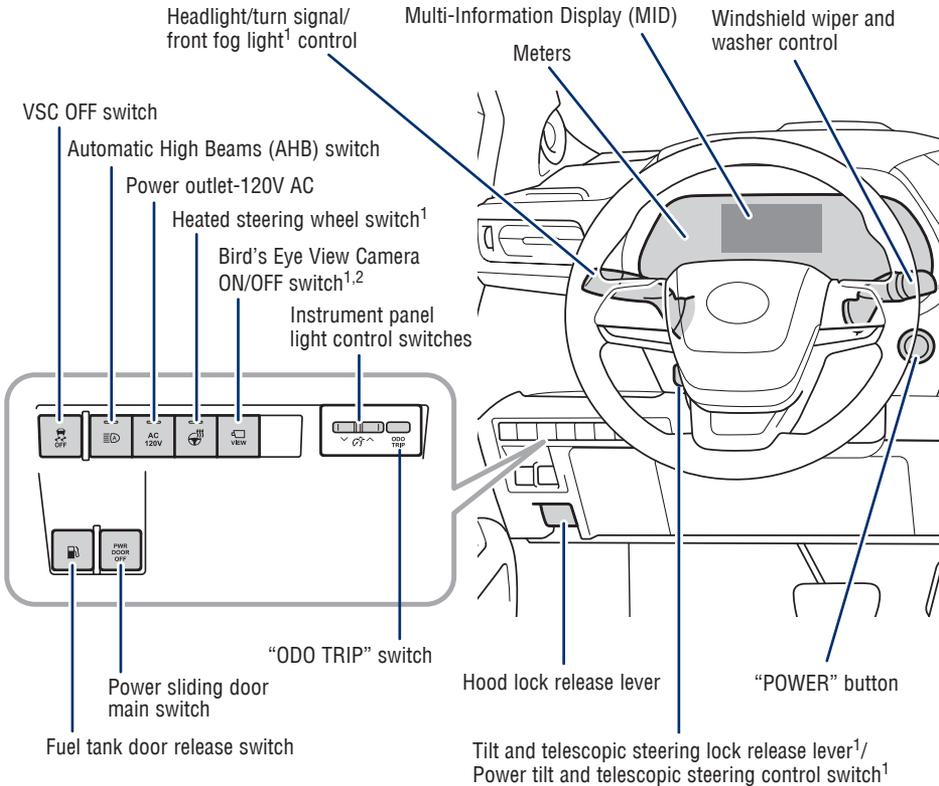

¹ If equipped


² For details, refer to the “Navigation and Multimedia System Owner’s Manual” or visit www.toyota.com/audio-multimedia for additional resources.

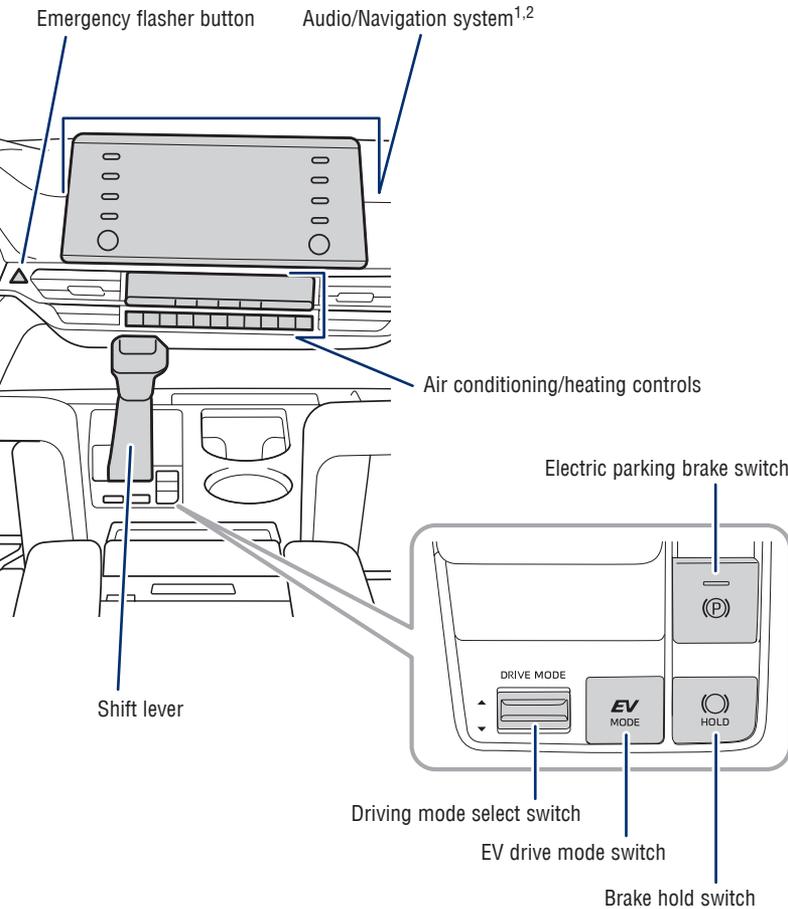


OVERVIEW

Instrument cluster

VEHICLES EQUIPPED WITH 4.2-in DISPLAY

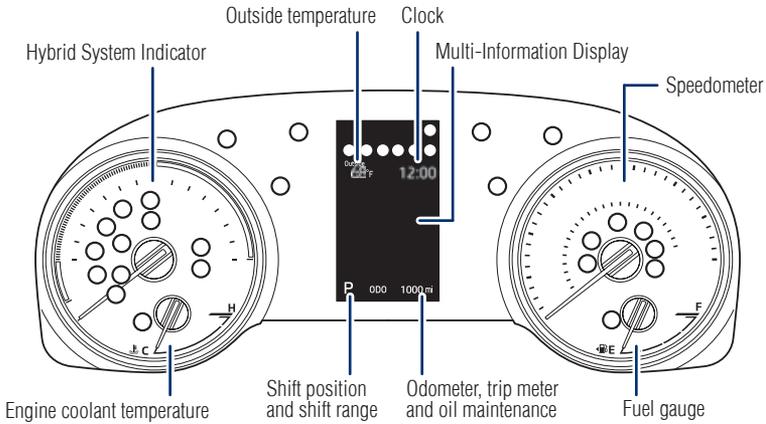

VEHICLES EQUIPPED WITH 7-in DISPLAY

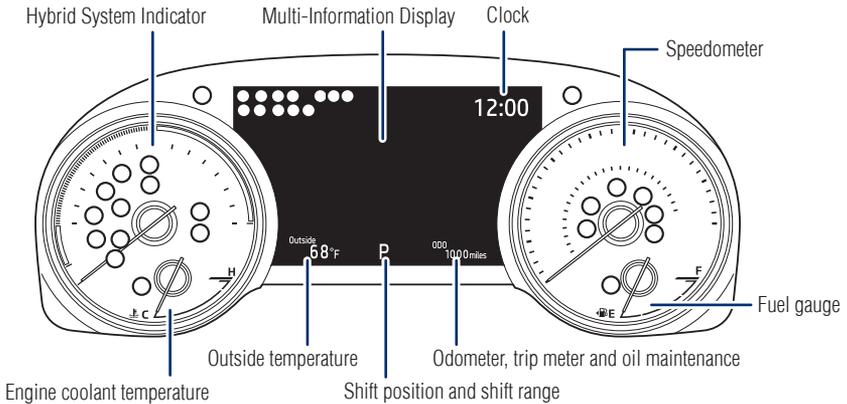

○ Service indicators and warning lights

Indicator symbols

For details, refer to "Warning lights and indicators," Section 2, 2021 Owner's Manual.



Airbag SRS warning¹



AIR BAG ON/OFF indicator¹



Anti-lock Brake System (ABS) warning¹



Automatic High Beams (AHB) indicator



BSM (Blind Spot Monitor) OFF indicator⁴



BSM outside rear view mirror indicators^{1,4}



Brake hold operating indicator^{1,2}

	Brake hold standby indicator
	Brake Override System/Drive-Start Control/Front and Rear Parking Assist with Automated Braking ^{4,5} warning
BRAKE	Brake system warning ¹
	Brake system warning ¹ [yellow]
	Charging system warning ¹
	Constant speed cruise control/Full-Speed Range Dynamic Radar Cruise Control (DRCC) indicator
SET	Constant speed cruise control/Full-Speed Range DRCC SET indicator
	Driver and/or front passenger seat belt reminder (alarm will sound when the vehicle is on)
ECO	Eco drive mode indicator (4.2-in display)
ECO MODE	Eco drive mode indicator (7-in display)
	Electric power steering system warning ¹ [red/yellow]
EV MODE	EV drive mode indicator
	EV indicator
	Fog light indicator ⁴
	Front and Rear Parking Assist with Automated Braking OFF indicator ^{1,4,5}
	Fuel tank door position
	Headlight low/high beam indicator
	High coolant temperature warning
	Hybrid system over-heat warning

	Intuitive parking assist OFF indicator ⁴
	Lane Tracing Assist (LTA)/ Lane Departure Alert with Steering Assist indicator (LDA w/SA) [white/green/orange ³]
	Low engine oil pressure warning
	Low fuel level warning light
	Low outside temperature indicator
	Low tire pressure warning ¹
	Malfunction/Check Engine indicator ¹
PARK	Parking brake indicator ²
	Pre-Collision System (PCS) warning ^{1,2}
	RCD (Rear Camera Detection) OFF indicator ⁴
READY	READY indicator
RCTA OFF	Rear Cross Traffic Alert (RCTA) OFF Indicator ^{1,4}
	Rear passengers' seat belt reminder
	Security indicator
	Slip indicator ^{1,3}
	Smart Key system indicator
SPORT	Sport mode indicator
	Turn signal indicator
	Vehicle Stability Control (VSC) OFF indicator ¹

¹ If the indicator does not turn off within a few seconds of starting the vehicle, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner's Manual.

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.


⁵ Refer to section PKSB (Parking Support Braking function) in the Owner's Manual.

OVERVIEW


Keyless entry

UNLOCKING OPERATION

Smart Key

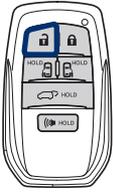

With power back door type

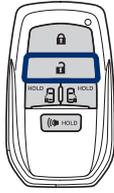

Without power back door type




Push
ONCE: Driver door
TWICE: All doors

Carry Smart Key remote

Driver door unlock*

Grasp

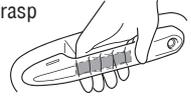

LOCKING OPERATION

Smart Key



With power back door type



Without power back door type




Push

Carry Smart Key remote

All-door lock

Touch

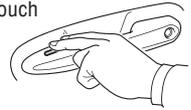

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

POWER SLIDING DOOR OPERATION

Smart Key



With power back door type



Without power back door type

Left side Right side



Push and hold

Carry Smart Key remote

Push to open/close




Pull to open/close

* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

BACK DOOR LOCK/UNLOCK

Carry Smart Key remote

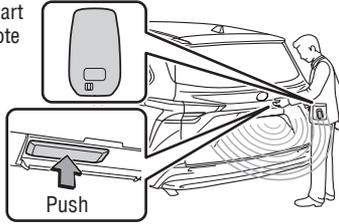

All-door unlock and lock

POWER BACK DOOR OPERATION (IF EQUIPPED)

Smart Key



 HOLD
Push and hold

PANIC BUTTON

Smart Key



With power back door type




Without power back door type

 HOLD
Push and hold



Please refer to the Owner's Manual for more details on how to program the doors.


Instrument panel light control

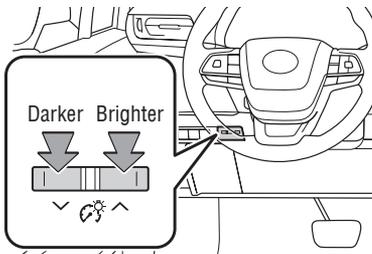

OVERVIEW

Smart Key system


START FUNCTION

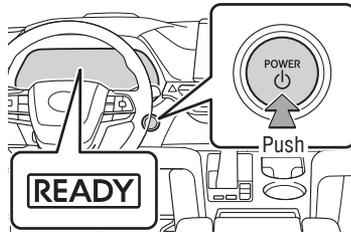




NOTE: The Smart Key must be carried to enable the start function. With the shift lever in Park and the brake pedal depressed, push the POWER button.

POWER (WITHOUT STARTING HYBRID SYSTEM)

Without depressing the brake pedal, pressing the POWER button will change the operation mode in succession from:



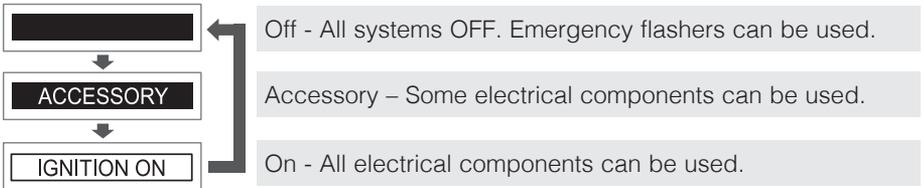


Fuel tank door release & cap

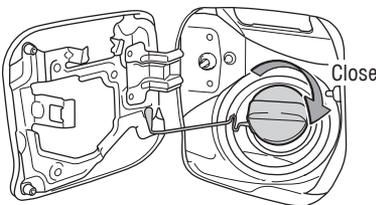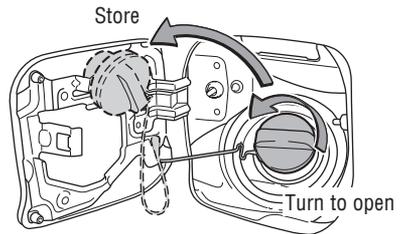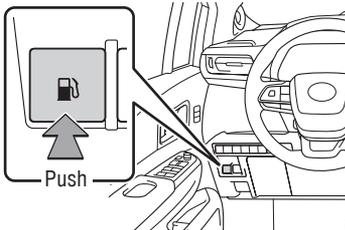


NOTE: Tighten until one click is heard. If the cap is not locked or tightened enough, the Check Engine indicator “” may illuminate.

Hood release

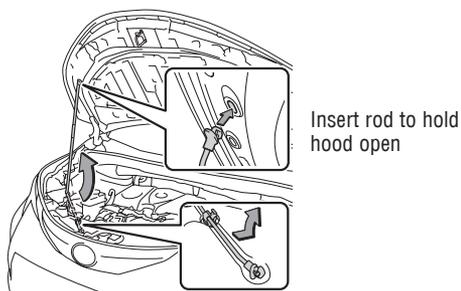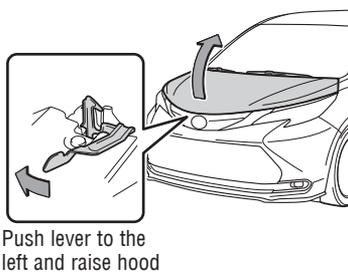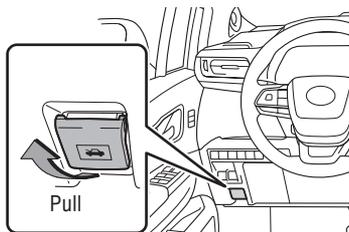

Engine maintenance

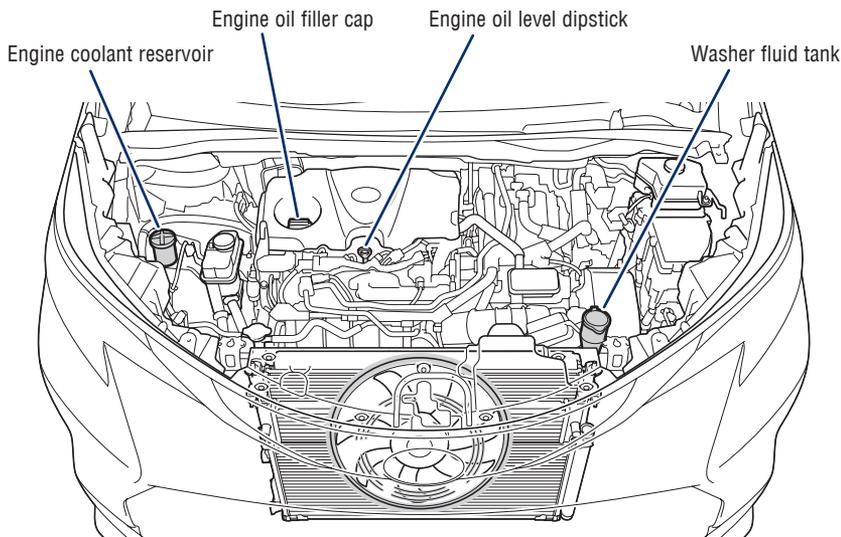

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."

FEATURES & OPERATIONS

Hybrid Synergy Drive System


The Hybrid Synergy Drive System utilizes a computer-controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. When the brakes are applied, the braking force generates electricity, which is then sent to the traction battery to conserve energy. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy and reduced vehicle emissions.

NOTE: Fuel consumption and energy information of the Hybrid System are shown on the Multi-Information Display (MID) and the audio system screen (navigation system or multi-media system.)

TIPS FOR IMPROVED FUEL ECONOMY


- Ensure tire pressures are maintained at levels specified in the Owner's Manual.
- Link trips to reduce engine cold starts whenever possible.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

STARTING THE HYBRID SYSTEM

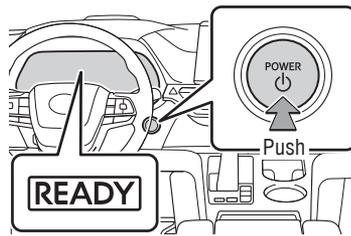


- (1) Put the shift lever in "Park."
- (2) Depress the brake pedal, and "📶" will be displayed on the Multi-Information Display.
- (3) Push the "POWER" button briefly and firmly.
- (4) The "READY" light will blink. After a few seconds, when the light remains steady and a beep sounds, shift the gear to the desired position and you may begin driving.

Steering lock release

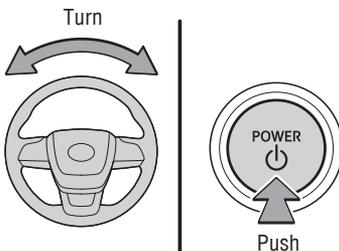

When the steering lock cannot be released, "Push Power Button while Turning the Steering Wheel in Either Direction" will be displayed on the Multi-Information Display. Check that the shift lever is set in P. Press the power button shortly and firmly while turning the steering wheel left and right.

Hybrid transmission

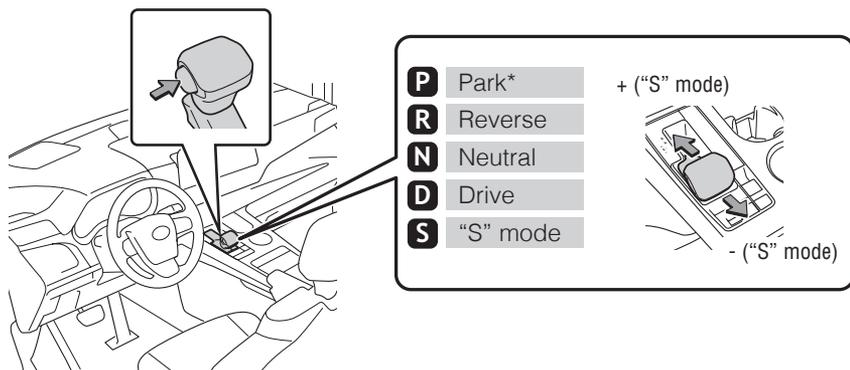

* The vehicle must be on and the brake pedal depressed to shift from Park.

"S" (SEQUENTIAL) MODE

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

DEFAULT SETTING

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

CUSTOMIZED SETTING

Speed linked door locking function

- Doors lock when the vehicle speed is approximately 12 mph or higher.


Driver's door linked door unlocking function

- Doors unlock when the driver's door is opened within 45 seconds after the vehicle is turned off.

Refer to the Owner's Manual for more details.

FEATURES & OPERATIONS

EV drive mode

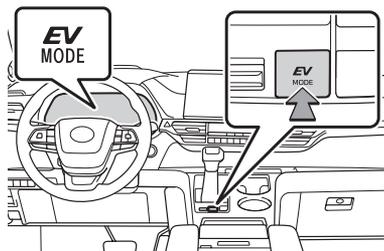

In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and gas emissions.

However, when the Acoustic Vehicle Alerting System is active, the vehicle may produce sound.

Refer to the Owner's Manual for limitations and more details.




Driving mode select



(4.2-in display)



(7-in display)

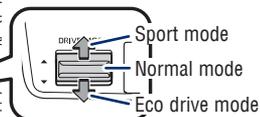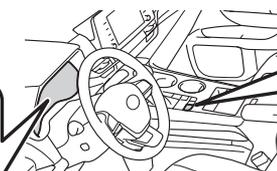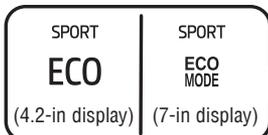

Sport mode

Use Sport mode when increased acceleration response and precise handling is desired, for example, when driving on mountain roads.

Normal mode

Use for normal driving.

Eco drive mode


Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.

Refer to the Owner's Manual for limitations and more details on this system.


Electric parking brake

PARKING BRAKE

Automatic mode

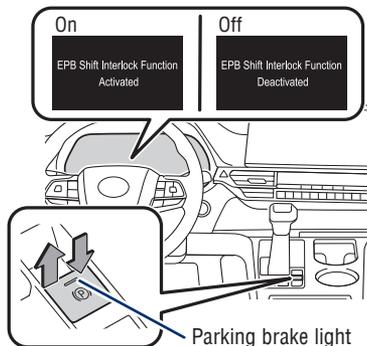

Manual mode

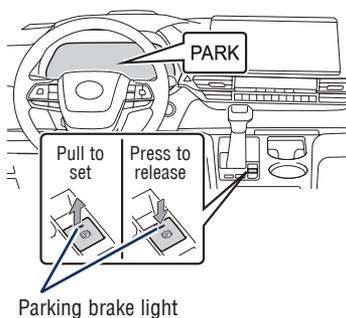

Automatic (shift lever operation)


To turn automatic mode ON, while vehicle is stopped, pull and hold switch until a buzzer sounds and “EPB Shift Interlock Function Activated” displays on the Multi-Information Display (MID). While depressing brake, shifting into P position will automatically set the brake and turn the parking brake indicator and parking brake light on. To release brake, depress brake and shift out of P. The indicator and the light turn off.

To turn automatic mode OFF, push and hold parking brake switch until a buzzer sounds and “EPB Shift Interlock Function Deactivated” displays on the MID.

Manual

While vehicle is stopped and brake pedal is depressed, pull to set parking brake and turn the parking brake indicator and parking brake light on. To release, press the brake pedal and push switch. The indicator and the light turn off.


BRAKE HOLD

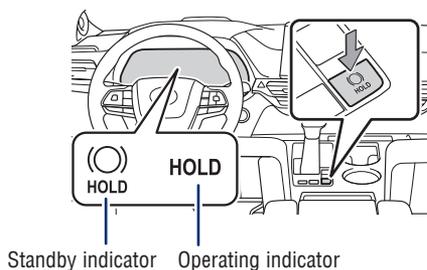

The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.


Refer to the Owner's Manual for limitations and more details.

Door locks

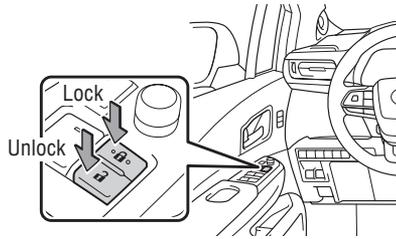


Tilt and telescopic steering wheel

MANUAL (IF EQUIPPED)

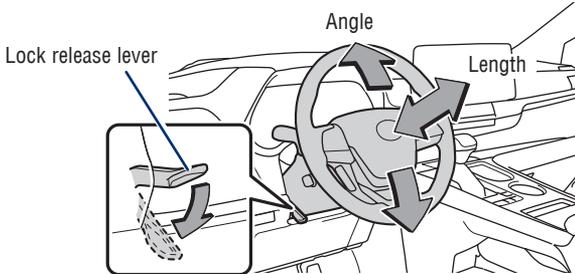

Hold wheel, push lever down, set angle and length and return lever.

POWER (IF EQUIPPED)

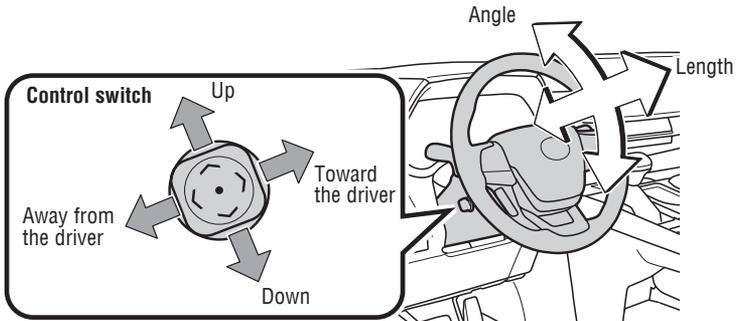

Toggle the control switch to set angle and length.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Power easy access system (if equipped): The steering wheel and driver's seat move in accordance with power switch mode and the driver's seat belt condition.

Power sliding doors

MAIN SWITCH LOCATION


Instrument panel

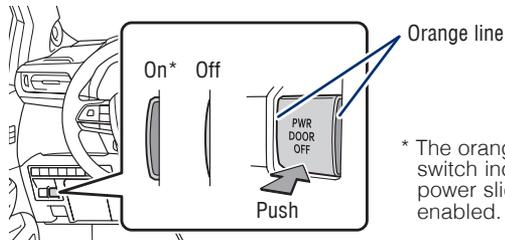


* The orange line of the switch indicates that the power sliding door system is enabled.

OPENING/CLOSING

From front seats


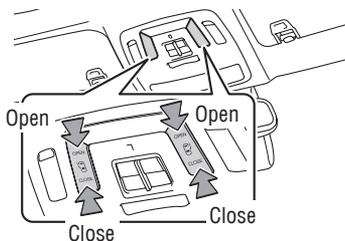


From second seats

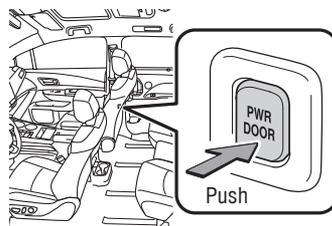

Press and hold the switch to open and close each sliding door.

HANDS-FREE FUNCTION (IF EQUIPPED)

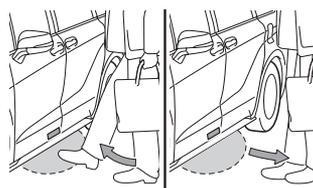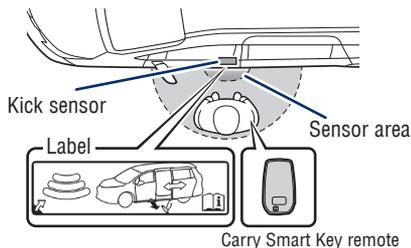

Perform the entire kick operation within 1 second.

To automatically open/close Power sliding door: Quickly kick your foot underneath the lower center part of the moulding for within 1 second to trigger sensor. To operate, make sure that the touchless sensor operation is enabled, the vehicle is OFF and that you are carrying the remote.

Press “<>” or “◇” of the meter control switches and select “ (PSD)” from the “ (Vehicle Settings)” from the “” screen on the Multi-Information Display (MID) to access hands-free settings. And push “” to enter selection.


NOTE: Use the same gear and “” icons from the HUD section.

For more details, refer to the Owner's Manual.

FEATURES & OPERATIONS

Height Adjustable, Hands-Free Power Liftgate (if equipped)


From front seats

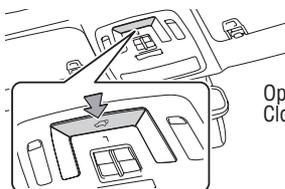


Open: Push and hold
Close: Push and hold again

Power Liftgate (back door)

(open only)

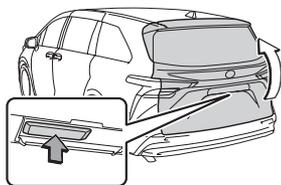

(close only)

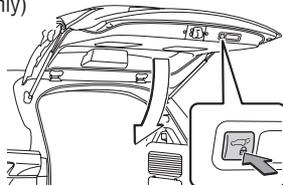


HEIGHT ADJUSTABLE FUNCTION

1. When the liftgate reaches the desired height, push the rear liftgate close-button (on the door jam of the liftgate) once. Press and hold the button until the buzzer sounds (4 times).
2. To reset the height, with the liftgate open and not moving, press and hold the rear liftgate close-button until the buzzer sounds 4 times, and continue to hold until it buzzes again, then let go. Push the same button to close the liftgate. When you next open the liftgate, it will open to the maximum height.
3. To set the height using the Multi-Information Display, press “<>” or “◇” of the meter control switches and select “ (Vehicle Settings)” from “” screen. Press “<>” or “◇” and select “ (PBD)” and then press “.” Select “PBD Opening Adjustment,” then press “.” Select desired position (5 height options to choose from,) then press “.

NOTE: If battery is disconnected, the power back door needs to be reinitialized.

HANDS-FREE FUNCTION (IF EQUIPPED)

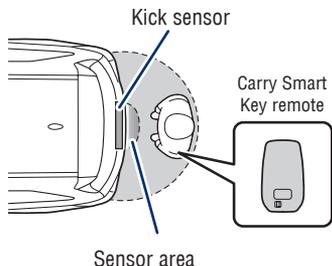

Perform the entire kick operation within 1 second.

To automatically open/close Power Liftgate: Quickly kick your foot underneath the lower center part of the rear bumper for within 1 second to trigger sensor. To operate, make sure that the touchless sensor operation is enabled, the vehicle is OFF and that you are carrying the remote.



Press “<>” or “⏏” of the meter control switches and select “🚗 (PBD)” from the “🚗 (Vehicle Settings)” from the “⚙️” screen on the Multi-Information Display (MID) to access hands-free settings. And push “OK” to enter selection.

NOTE:

- Installation of a tow hitch receiver or other accessories may require disabling or removing the kick sensor.
- Use the same gear and “OK” icons from the HUD section.

For more details, refer to the Owner’s Manual.

Power windows

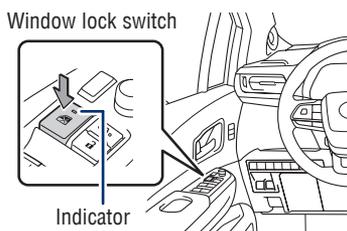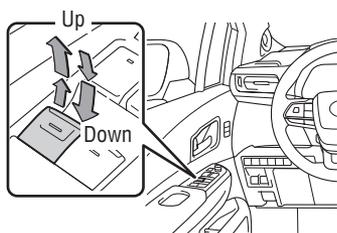


All window auto up/down: Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.

Window lock switch: Deactivates all passenger windows. Driver’s window remains operable.


FEATURES & OPERATIONS

Multi-Information Display (MID)

VEHICLES EQUIPPED WITH 4.2-in MID

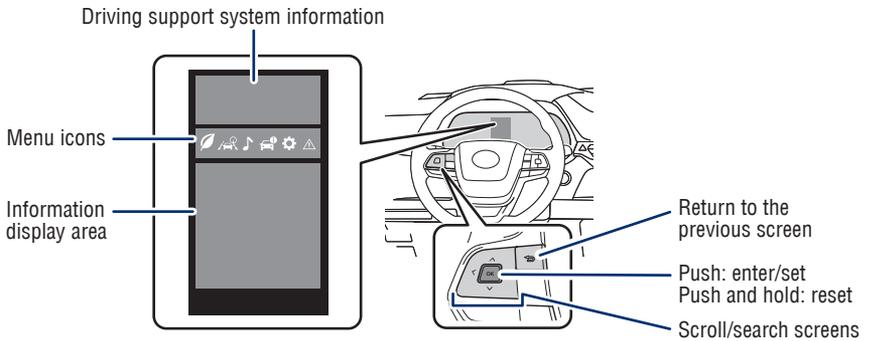

VEHICLES EQUIPPED WITH 7-in MID

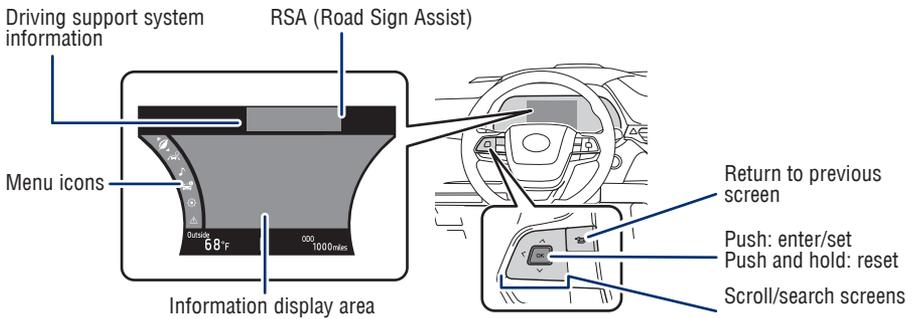


Press meter control switches to change and select information in the following:

-  Driving information display
-  Driving support system information display
-  Audio system-linked display (if equipped)
-  Vehicle information display
-  Settings display
-  Warning message display

Refer to the Owner's Manual for more details.

Head-Up Display (HUD) (if equipped)

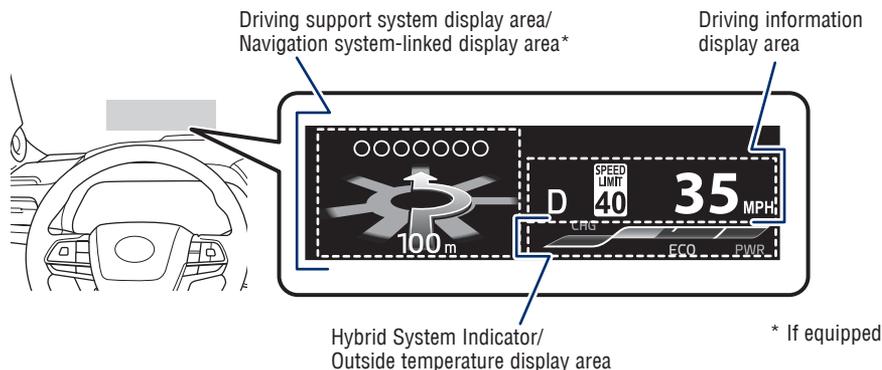


The head-up display projects a variety of driving related information and the operating state of the driving support systems on the windshield.

Press meter control switches and select “” on the Multi-Information Display (MID) and select “HUD Main” to access Head-up display settings. And push “” to enter selection.

Refer to the *Owner's Manual* for more details.

Clock

- Select to change the time zone.
- Select to set daylight saving time ON/OFF/AUTO.*
- Select to set to automatic GPS adjustment of clock.
- Select to set the 24 hour time format on/off.

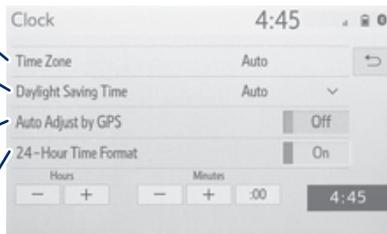

- 1) Push “**MENU**” button next to the screen.
- 2) Select “**Setup**” or “**General**” in the touchscreen to access the general setting screen.
- 3) Select “**Clock**.”
- 4) Select desired items to be set.


Refer to the “*Navigation and Multimedia System Owner's Manual*” for more details.

* Premium Audio only

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS

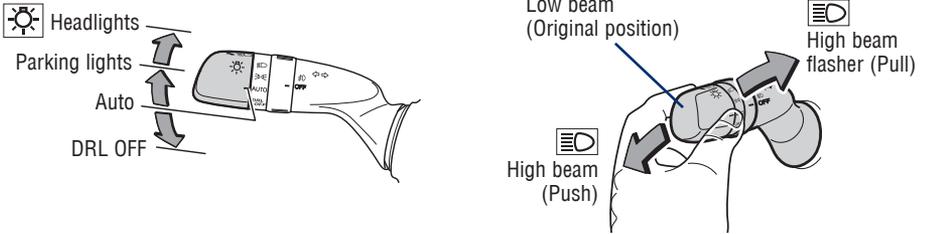

Daytime Running Light (DRL) system: Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night.

Automatic light cut off system


- Headlights are on: The lights will turn off automatically 30 seconds after the vehicle is turned from ON to ACC or OFF and a door is opened and closed. (If the lock switch on the Smart Key remote is pushed after all doors are closed, the lights will turn off immediately.)
- Only the tail lights are on: The tail lights will turn off automatically if the vehicle is turned from ON to ACC or OFF and the driver's door is opened.

Automatic High Beams (AHB) system*: Automatically switches between high and low beams as appropriate to enhance vision at night.

Refer to *Toyota Safety Sense™ 2.0 (TSS 2.0)* in this guide or the *Owner's Manual* for more details on the Automatic High Beams feature.



* Operating conditions must be met. Refer to the *Owner's Manual* for details.

FRONT FOG LIGHTS (IF EQUIPPED)

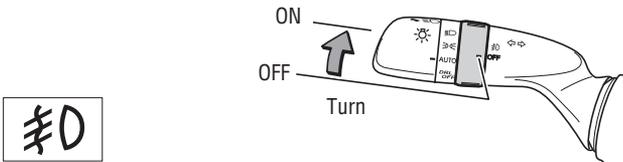

Front fog light can be used when the parking lights are on or the headlights are on in low beam.

TURN SIGNALS

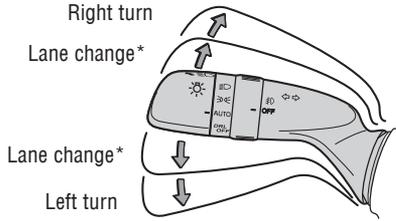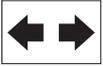


* Move lever partway and release. The signals will flash three times.


Windshield wipers & washers

FRONT

Intermittent (if equipped)

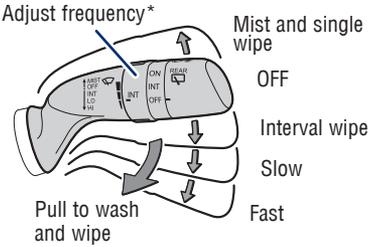


Rain-sensing (if equipped)

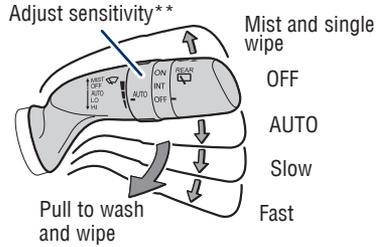

* **Intermittent windshield wiper frequency adjustment:** Rotate to increase/decrease wiper frequency.

** **Rain-sensing windshield wiper sensitivity adjustment:** Rotate to increase/decrease sensor sensitivity.

REAR

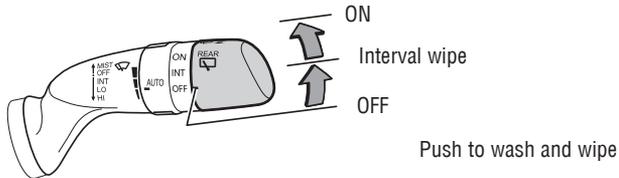


FEATURES & OPERATIONS

Moonroof (if equipped)

SLIDING OPERATION


Push once to open partway.
Push again to open completely.

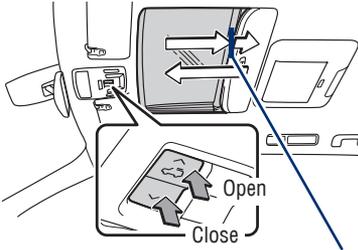

Recommended open position to minimize wind noise.

TILTING OPERATION


Push once to open completely.

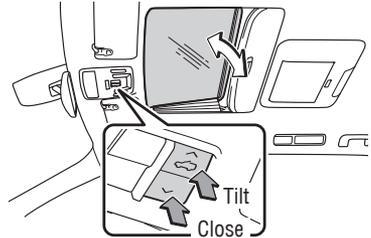


Lightly press either side of the moonroof switch while opening/tilting is in progress, the moonroof stops partway.

Sunshade-Side

Rear side window

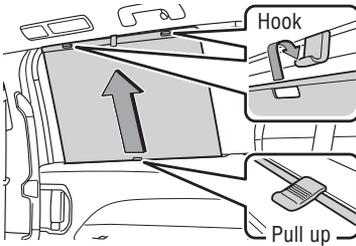



Rear quarter window (if equipped)

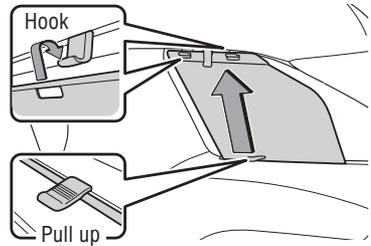

Cup holders


CONSOLE BOX

Type A

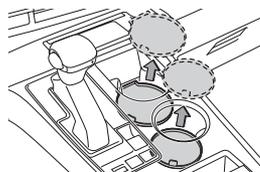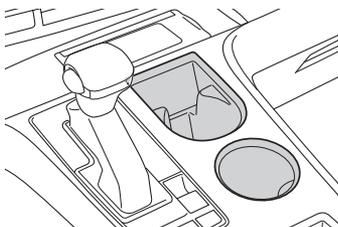


The mats can be removed.
(Type A)


Type B

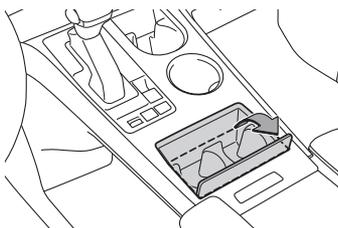

Type C

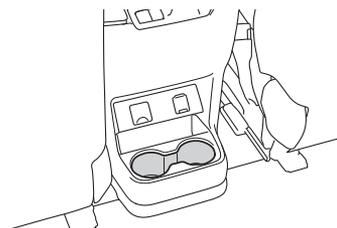


2ND CENTER SEAT (8-PASSENGER MODELS)

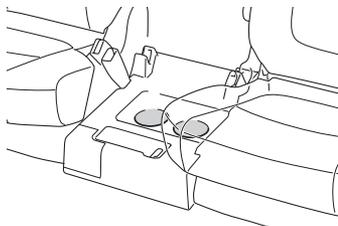


3RD ROW SEAT

Vehicles without spare tire

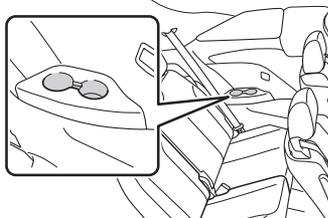

Vehicles with spare tire

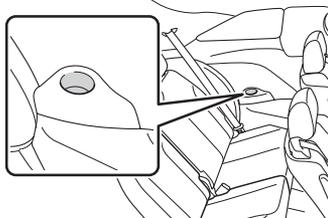



FEATURES & OPERATIONS

Seat adjustments-Front

MANUAL SEAT*

POWER SEAT

* Passenger side only.

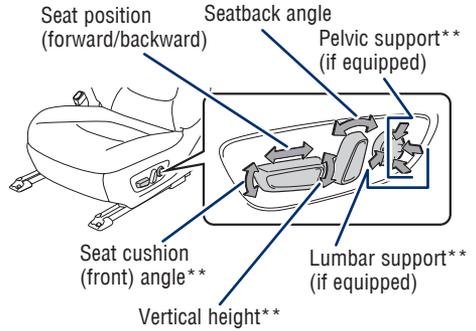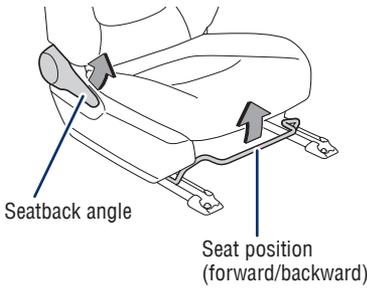

** Driver side only.



Power easy access system (if equipped): The driver's seat and steering wheel move in accordance with power switch mode and the driver's seat belt condition.

Seat adjustments-Rear


SECOND ROW SEAT

Tip-up seat (7-passenger models)

Tip-up seat (8-passenger models)

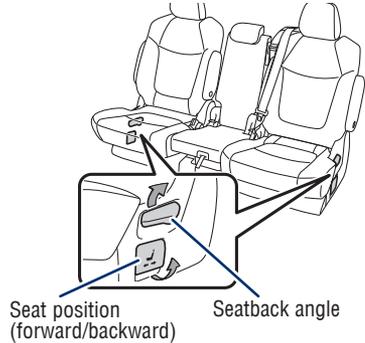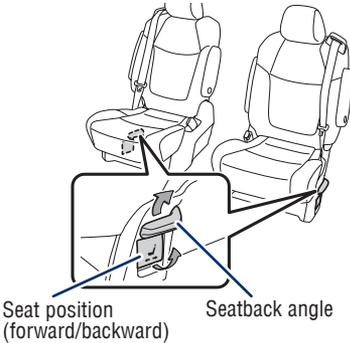


Ottoman seat*

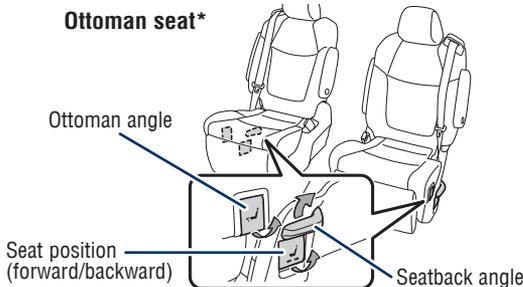

* If equipped.


THIRD ROW SEAT

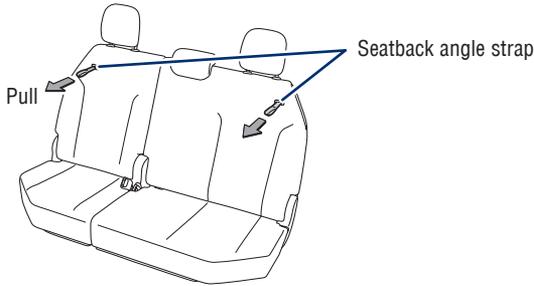


Refer to the Owner's Manual for more details.

Seats-Moving 2nd row outside seats

Getting in the vehicle

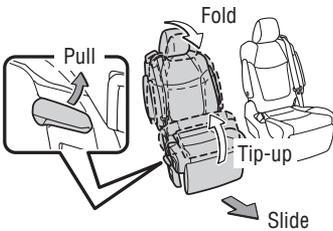


Getting out of the vehicle

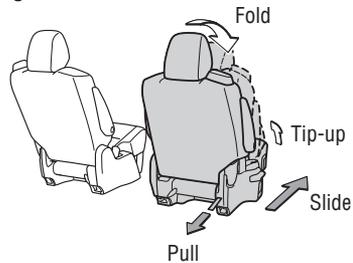


Refer to the Owner's Manual for more details.

Seats-Removing 2nd row center seat (if equipped)


(1)

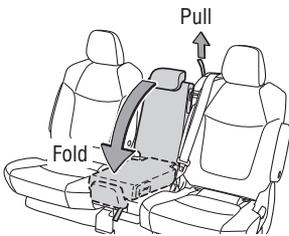

(2)

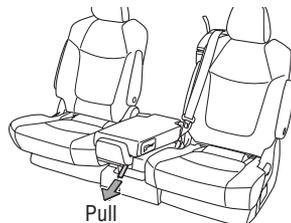


(3)

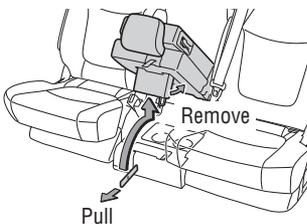

After detaching the second center seat, remove it from the vehicle or store it securely in the luggage compartment.

Refer to the Owner's Manual for more details.


Seats-Stowing 3rd row seats

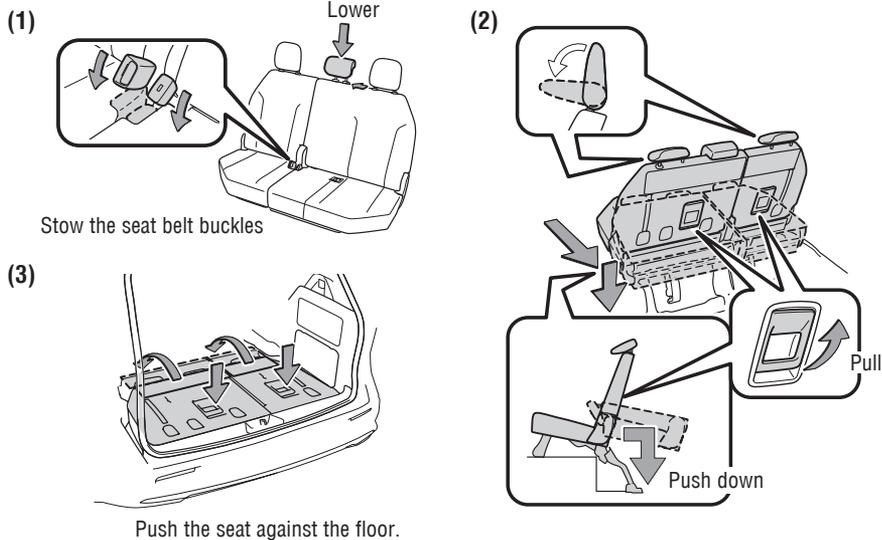


Refer to the Owner's Manual for more details.

Seats-Head restraints


Front and second row outside seats

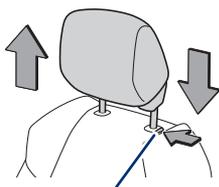

Second row center (8-passenger models) and third row center seats

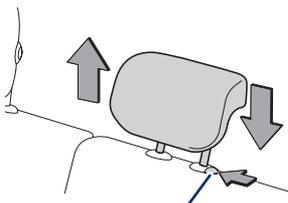


Third row outside seats

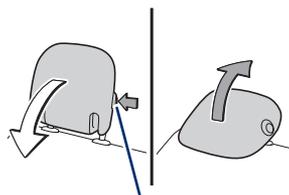


Garage door opener (HomeLink®)* (if equipped)

VEHICLES WITH AUTO ANTI-GLARE INSIDE REAR VIEW MIRROR

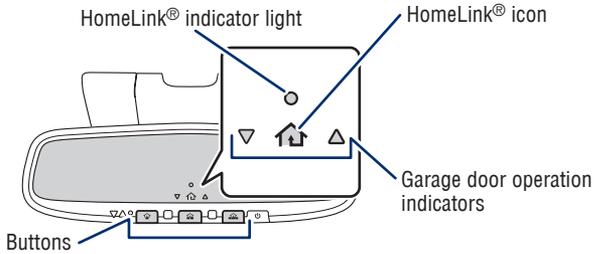

VEHICLES WITH DIGITAL REARVIEW MIRROR

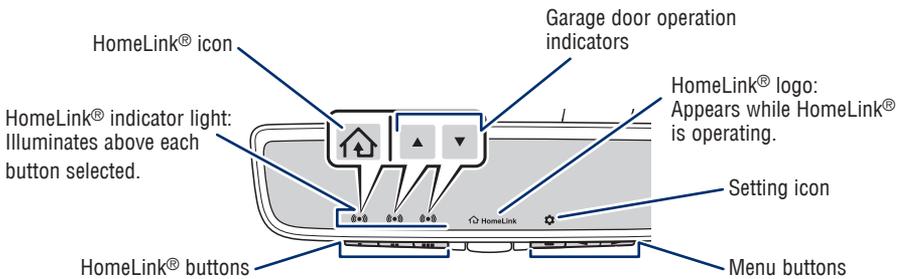

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the Owner's Manual for more details.


For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com/toyota>.

* HomeLink® is a registered trademark of Gentex Corporation.

FEATURES & OPERATIONS

Driver Easy Speak (if equipped)


Driver Easy Speak will utilize the vehicle's built-in microphone and speakers to allow passengers in the rear of the vehicle to more easily hear the driver. The feature must be turned on every time you enter the vehicle, and automatically turns off when any door (including the liftgate) is opened.

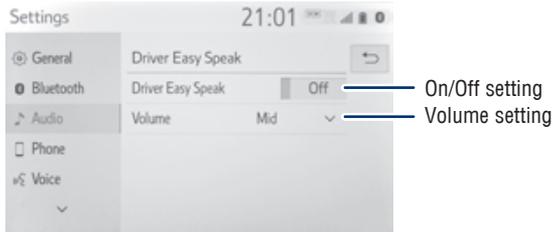


- 1) Push "**MENU**" button next to the screen.
- 2) Select "**Setup**."
- 3) Select "**Audio**" and then select "Driver Easy Speak."
- 4) Select the desired items to be set.

Refer to the "Navigation and Multimedia System Owner's Manual" for more details.


Steering wheel switches & telephone controls (Bluetooth®)

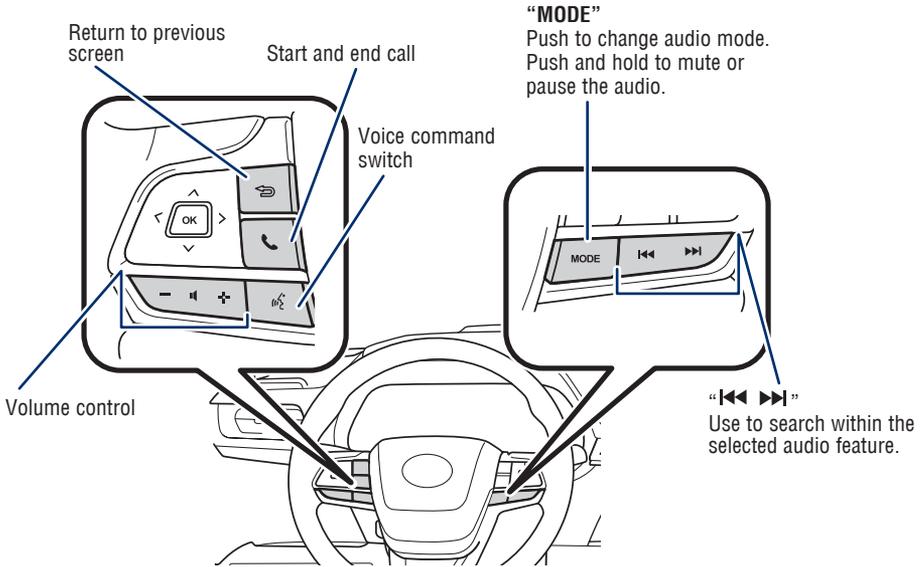

Type A (without moonroof)

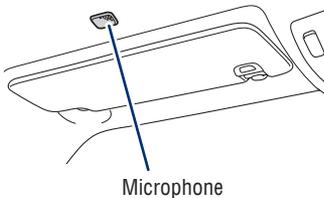

Type B (with moonroof)

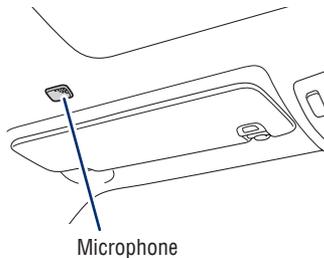


Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel.

Refer to the Bluetooth® device pairing in this guide or the Navigation and Multimedia System Owner's Manual for additional user instructions.

NOTE: Always use safe driving practices and follow all traffic rules.

FEATURES & OPERATIONS


Audio

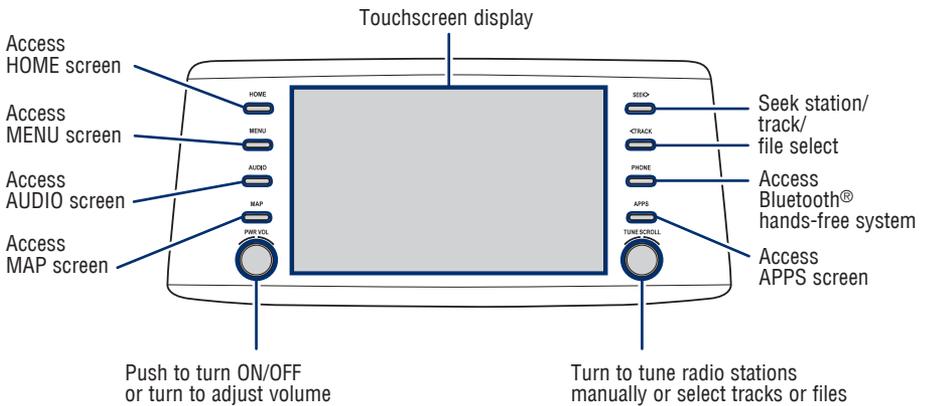

Refer to the "Navigation and Multimedia System Owner's Manual" or visit www.toyota.com/audio-multimedia for additional resources.

NOTE: Always use safe driving practices and follow all traffic rules.

USB media port

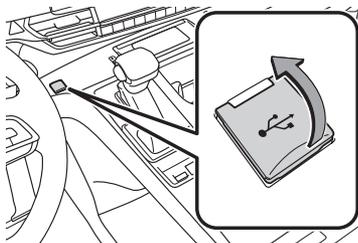


Connecting a compatible device and cable into the USB media port will support charging and music playback through the audio multimedia system.


USB charge ports

USB Type-A port: 2.5A / USB Type-C port: 3.0A


In the console box

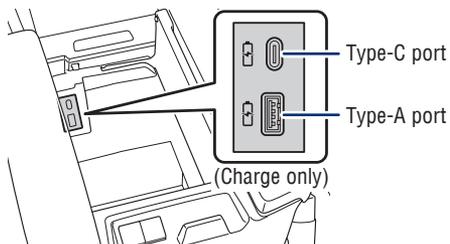

Rear of console box


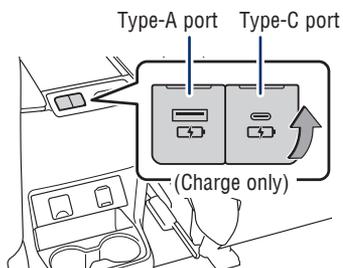


Interior panel of 3rd row seating

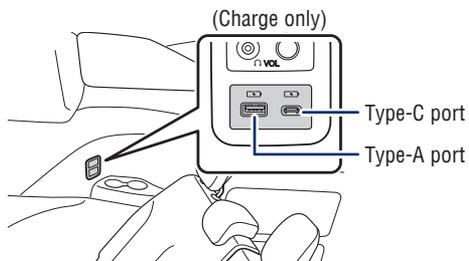


The vehicle must be in the "ACCESSORY" or "IGNITION ON" mode for use.

Qi Wireless charger (if equipped)

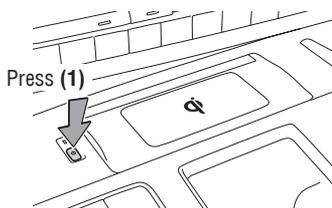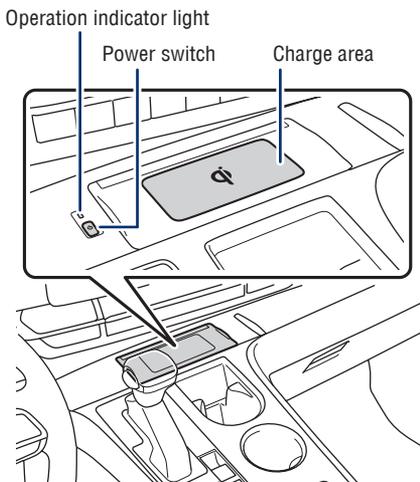

When the vehicle is turned off, the last state (ON/OFF) of the wireless charger is retained.

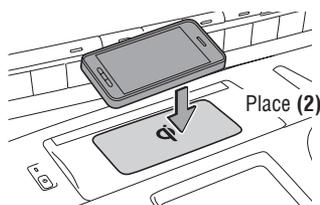


Place device nearest the center of charging area for best results. Moving device may result in stopping or restarting the charging process.

A mobile device can be charged wirelessly on the tray. **(1)** Press the wireless charger power switch and the green operation indicator light turns on. **(2)** Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.

The vehicle must be in the "ACCESSORY" or "IGNITION ON" mode for use.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Power outlet-12V DC

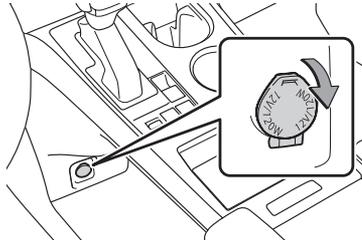


The vehicle must be in the “ACCESSORY” or “IGNITION ON” mode for use.


Power outlets-120V AC (if equipped)

OUTLET LOCATION


Rear of console box

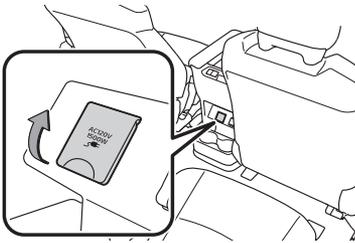

Luggage compartment

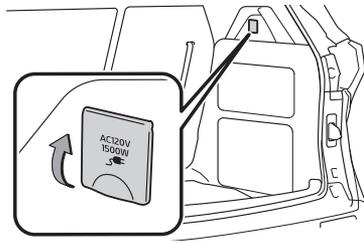

POWER OUTLET ON/OFF MASTER SWITCH

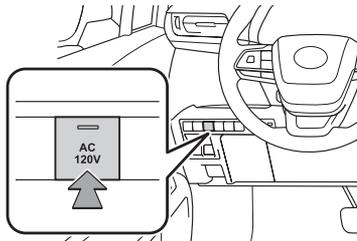


Check that the “Ready” indicator is illuminated, then press the AC 120V master switch. The power outlets can be used when the indicator on the AC 120 V master switch is illuminated.

To turn off the 120 V outlets, press the master switch and observe that the switch is no longer illuminated.

Refer to the Owner's Manual for more details.

Rear seat entertainment system (if equipped)

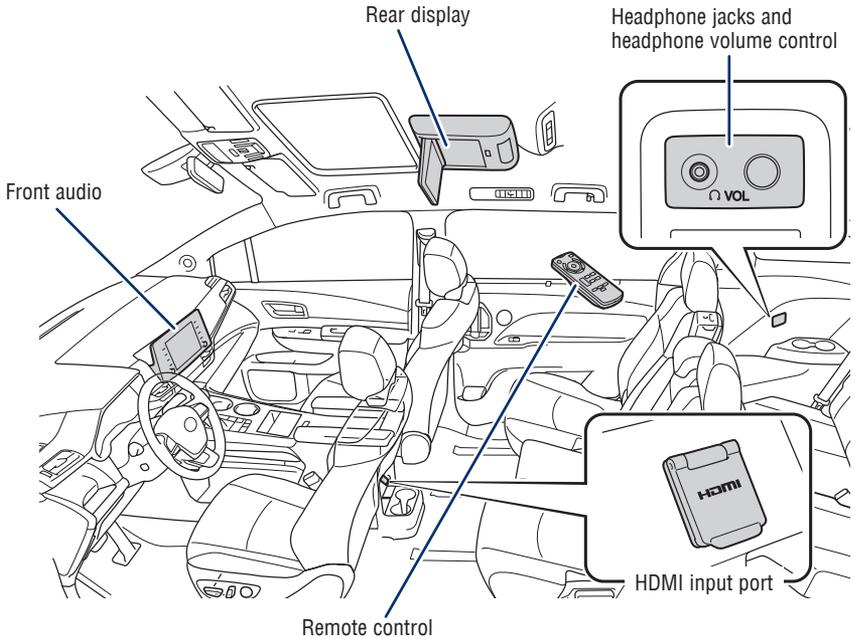


Refer to the "Navigation and Multimedia System Owner's Manual" for more information.


Heated/ventilated seats (if equipped)

HEATED SEAT OPERATION (IF EQUIPPED)

Front

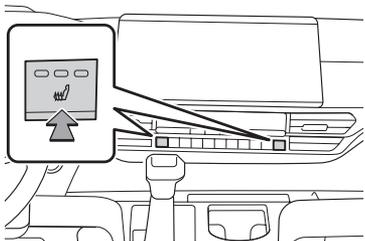


Rear (second outboard seats) (if equipped)

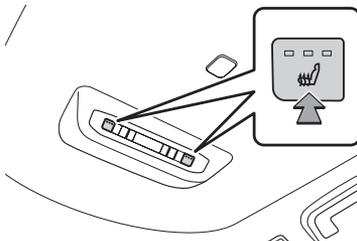


VENTILATED SEAT OPERATION (IF EQUIPPED)

Front

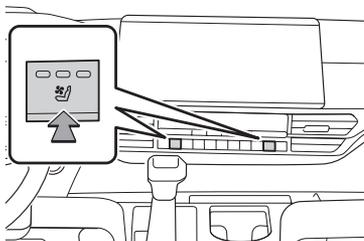

The vehicle must be on for use.

Heated steering wheel (if equipped)

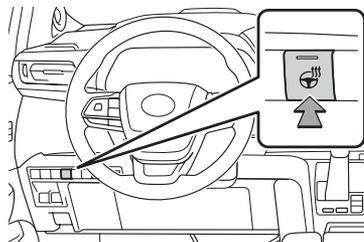

The vehicle must be on for use.

Air conditioning/heating

FRONT AIR CONDITIONING


“SYNC” switch:

Indicator ON - Synchronized temperature settings for driver and passengers.

Indicator OFF - Separate temperature settings for driver and passengers.

Airflow mode:


In “” or “” mode, use outside air (“” indicator OFF) to reduce window fogging.

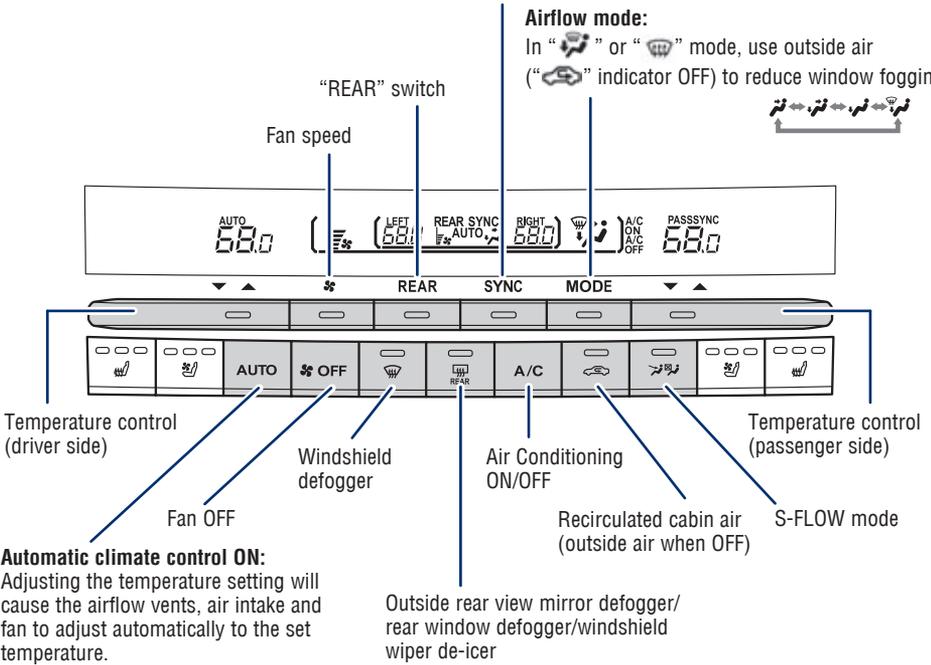

Automatic climate control ON:


Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically to the set temperature.

Main control screen

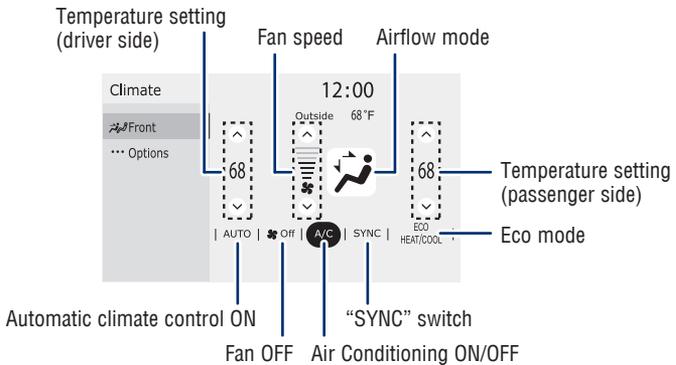


FRONT AIR CONDITIONING (CONTINUED)

Option control screen

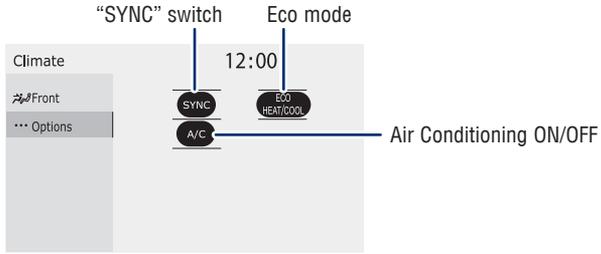


REAR AIR CONDITIONING

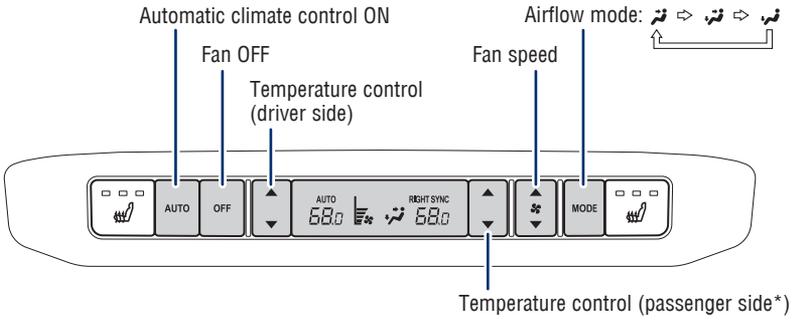

* If equipped.

FEATURES & OPERATIONS

Vehicle Stability Control (VSC)/TRAC/ Trailer sway control OFF switch

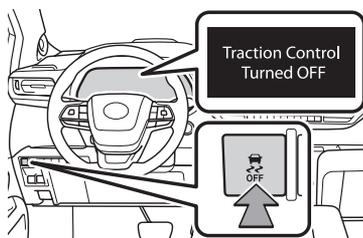


The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press switch to disable the TRAC system.

To disable VSC/TRAC/Trailer Sway Control systems, press and hold the switch for at least 3 seconds.

Refer to the Owner's Manual for limitations and more information.

Rear view monitor system

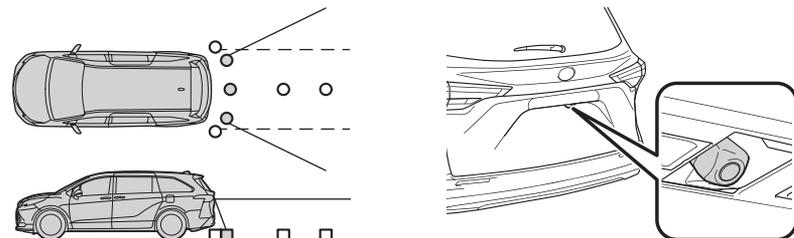

The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.


To adjust the image on the rear view monitor screen, press the "MENU" button and select "Display." Select "Camera" to adjust the screen contrast and brightness.

Refer to the "Navigation and Multimedia System Owner's Manual" for limitations and more details on this system.

RCD (Rear Camera Detection) (if equipped)

The rear camera detection (RCD) function is designed to detect pedestrians in the detection area behind the vehicle when the vehicle is backing up. If a pedestrian is detected, a buzzer will sound and an icon will be displayed on the audio system screen to inform the driver of the pedestrian.

DISPLAY ON AUDIO SYSTEM SCREEN

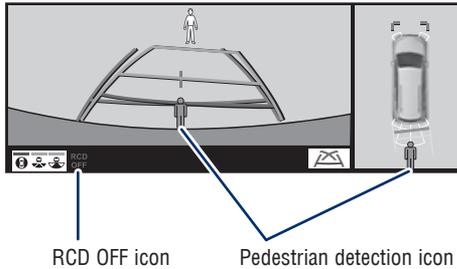

Pedestrian detection icon: The icon will be displayed automatically when a pedestrian is detected.

RCD OFF icon: The RCD OFF icon will illuminate when the RCD function is disabled.


SYSTEM ON/OFF

- (1) Press “<>” or “◊” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◊” switches and select “ (RCD)” then press “.
- (3) Press “<>” or “◊” switches and select the “Rear Camera Detection function on/off” setting function and then press “.
- (4) Press “” to go back to the menu.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

FEATURES & OPERATIONS

Bird's Eye View Camera with Perimeter Scan (if equipped)

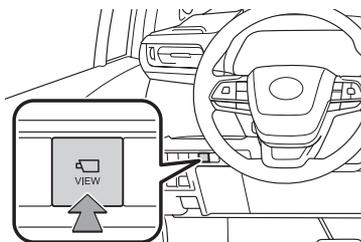

Moving view

Body color setting switch




Rotation pause switch

Display mode switching button

See-through view

Body color setting switch

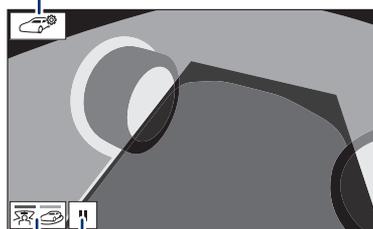

Rotation pause switch


Display mode switching button

The Bird's Eye View Camera with Perimeter Scan function assists the driver in viewing the surroundings, when operating at low speeds or parking, by combining front, side and rear cameras and displaying an overhead image on the Audio Multimedia screen.

To view the moving view/see-through view screen, press the camera switch when the shift lever is in the "P" position and the Intuitive parking assist is enabled. Press the camera switch again to display the previous display screen, such as the navigation screen.

Refer to the "Navigation and Multimedia System Owner's Manual" for limitations and more details on this system.

Blind Spot Monitor with Rear Cross Traffic Alert (BSM w/RCTA) (if equipped)

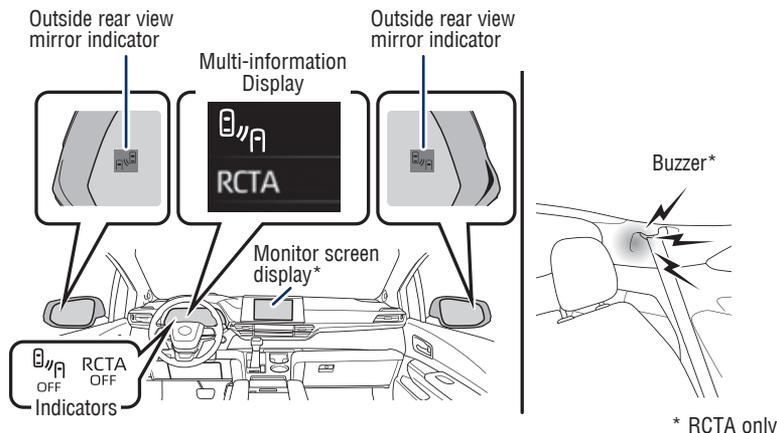

The Blind Spot Monitor is a system that has two functions:

- The Blind Spot Monitor function (assists the driver in decision-making when changing lanes)
- The Rear Cross Traffic Alert function (assists the driver when backing up)

The system is designed to use radar sensors to detect vehicles traveling in the Sienna's blind spot. If a vehicle is detected the driver will be alerted via the outside rear view side mirror indicators.

Rear Cross Traffic Alert function: While in reverse, when a vehicle approaching from the right or left rear of the Sienna is detected, the outside rear view mirror indicators will flash. Also, the RCTA icon for the detected side will be displayed on the monitor screen display, and the RCTA buzzer will sound.

SYSTEM ON/OFF

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (BSM)” or “ (RCTA)” then press “.
- (3) Press “<>” or “◇” switches and select the “On/Off” setting function and then press “.
- (4) Press “” to go back to the menu.

The BSM function and the RCTA function are automatically enabled each time the vehicle is turned on.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.


FEATURES & OPERATIONS

Front and Rear Parking Assist with Automated Braking (PA w/AB) (if equipped)


The Front and Rear Parking Assist with Automated Braking consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that the possibility of a collision with a detected object is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

FUNCTIONS


For static objects

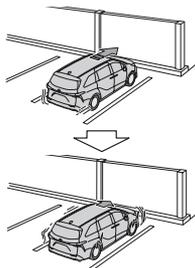

When traveling at a low speed and the brake pedal is not depressed, or is depressed late.

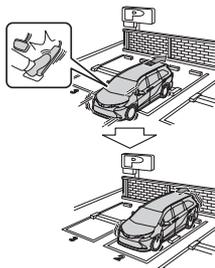

When the accelerator pedal is depressed excessively.

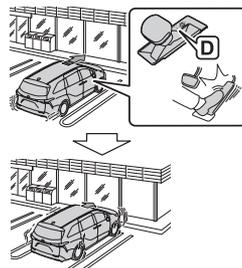

When the vehicle moves in the unintended direction due to the wrong shift position being selected.

For rear-crossing vehicles



When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late.


CHANGE SETTINGS

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “” (PKSB) and then press “.
- The setting screen is displayed.
- (3) Press “<>” or “◇” switches and press “” to select the desired setting.
- (4) Press “” to go back to the menu.

The system will continue in the last state it was in (ON or OFF) when the vehicle is started again.

Refer to all of the section “Parking Support Brake function” (static objects and rear-crossing vehicles) in the Owner’s Manual for limitations and more details.

Intuitive parking assist (if equipped)

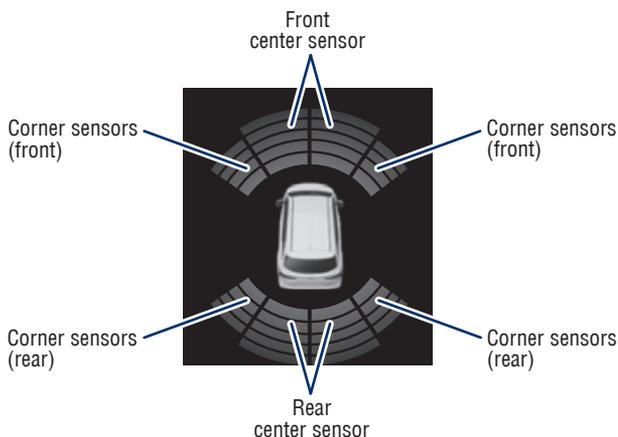

If the sensors detect an obstacle, the buzzer and MID or navigation system display inform the driver of the approximate position and distance of the obstacle by illuminating continuously (far) or blinking (near). Depending on your Audio Multimedia system, you can adjust settings.

SYSTEM ON/OFF

- (1) Press “<>” or “◊” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◊” switches and select “ (Intuitive parking assist)” and then press “.” The setting screen is displayed.
- (3) Press “<>” or “◊” switches and select the “Intuitive parking assist on/off” setting function and then press “.
- (4) Press “” to go back to the menu.

Refer to the Owner's Manual for limitations and more details.

Quick overview-Toyota Safety Sense™ 2.0

Toyota Safety Sense™ 2.0 (TSS 2.0) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS 2.0 is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to www.toyota.com/safety-sense.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

The advanced grille-mounted radar system is designed to work with the forward-facing camera to help recognize a preceding pedestrian or bicyclist, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert with Steering Assist (LDA w/SA)

LDA w/SA is designed to provide notification when the system detects an unintended lane departure.

The Steering Assist function is designed to provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.

The Sway Warning function is designed to detect vehicle swaying (based on the vehicle location and steering wheel operation) and alert drivers with an audio and visual alert, urging them to take a break.



Lane Tracing Assist (LTA)

LTA is designed to help keep the vehicle in the center of a lane by assisting the driver in steering control when using Full-Speed Range DRCC.



Full-Speed Range Dynamic Radar Cruise Control (DRCC)

Full-Speed Range DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. The minimum set speed is approximately 20 MPH, but once activated, the operating speed range is 0-110 MPH.



Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.




Road Sign Assist (RSA)


RSA is designed to recognize specific road signs using the forward-facing camera to provide information to the driver via the display.

Sensors

TSS 2.0 combines a forward-facing camera mounted in front of the inside rear view mirror and a grille-mounted radar mounted in the front grille. These sensors support the driver assist systems.

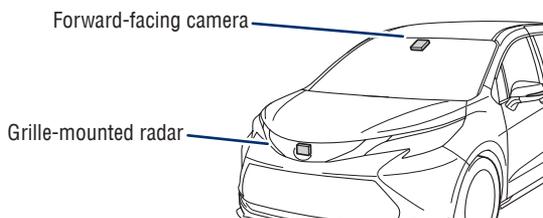

Pre-Collision System with Pedestrian Detection (PCS w/PD)

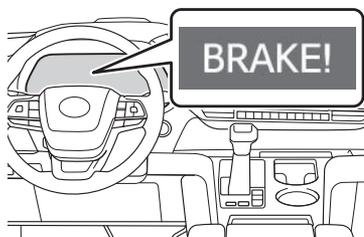

The Pre-Collision System with Pedestrian Detection (PCS w/PD) is designed to help detect a vehicle, a bicyclist, or a pedestrian in certain situations. Using both a camera and radar, PCS w/ PD can provide an audio/visual alert to warn you of a possible collision under certain circumstances. If you don't react, the system is designed to automatically brake.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle or pedestrian or bicyclist may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

See www.toyota.com/safety-sense for more information.

Refer to the *Toyota Owner's Manual* for a list of additional situations in which the system operation may be limited.

PRE-COLLISION SYSTEM (CONTINUED)

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

PCS PEDESTRIAN DETECTION


Under certain conditions, the PCS system included with the TSS 2.0 package may also help to detect a pedestrian or bicyclist in front of your vehicle using the forward-facing camera and front grille-mounted radar. The forward-facing camera of PCS detects a potential pedestrian or bicyclist based on size, profile, and motion of the detected pedestrian or bicyclist. However, a pedestrian or bicyclist may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian or bicyclist, preventing the system from operating or engaging.

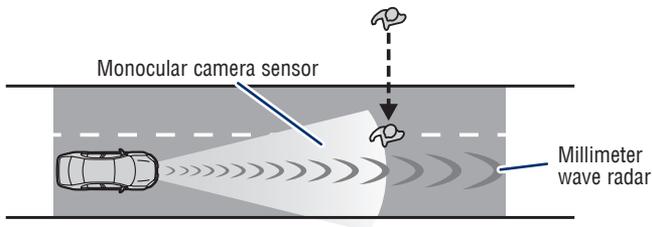

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

Refer to the Toyota Owner's Manual for additional limitations and information.


CHANGING PCS ALERT TIMING

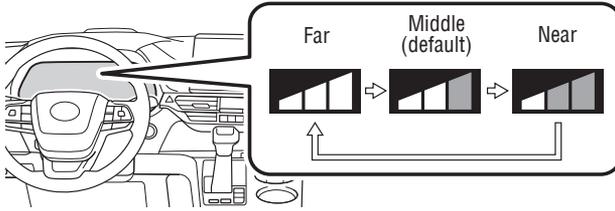

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “” (PCS) and then press “.” The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Sensitivity” and then press “” to select the desired setting. Each time it is pressed, the response to the PCS warning timing changes as shown above.
- (4) Press “” to go back to the menu.

Note: PCS is enabled each time the vehicle is turned on. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same.)

DISABLING PRE-COLLISION SYSTEM (PCS)

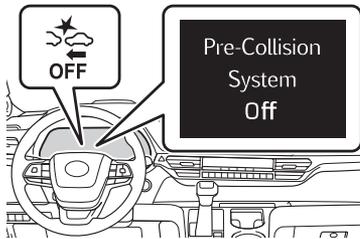


- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “” (PCS) and then press “.” The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “PCS on/off” and then press “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: The system is enabled each time the vehicle is turned on.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Departure Alert with Steering Assist (LDA w/SA)

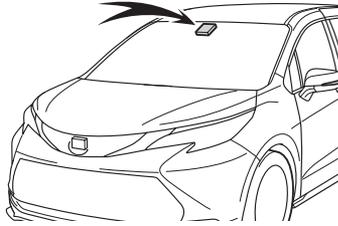

By detecting visible white/yellow lane markings or the road's edge at speeds above 32 mph, Lane Departure Alert with Steering Assist (LDA w/SA) is designed to issue a visual alert and audio or steering vibration alert if an inadvertent lane departure is detected. If the driver does not take corrective action, the Steering Assist function is designed to provide gentle corrective steering.*

* See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LDA SYSTEM ON/OFF




Press the LDA switch to turn the LDA system on. Depress again to turn it off.


Note: The system will continue in the last state it was in (ON or OFF) when the vehicle is started again.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

LDA function display

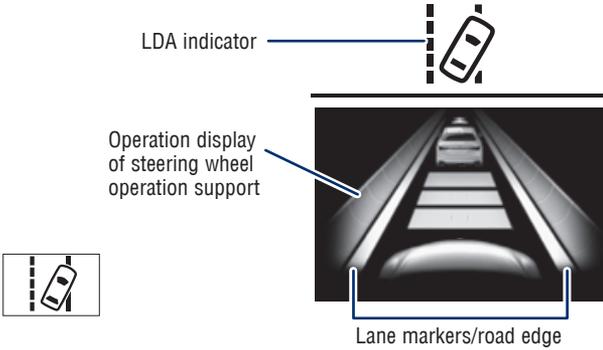

Lane Departure Alert (LDA) indicator flashes orange when operating.

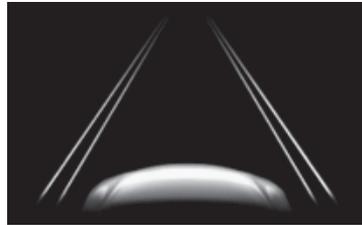

The LDA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LDA indicator when visible lane markers or the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LDA indicator when lane markers or the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LDA)” and then press “.” The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Steering Assist” and then press “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LDA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LDA)” and then press “.” The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Sensitivity” and then press “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

SWAY WARNING SYSTEM



Continuous lane deviations from swaying.



Gentle swaying from driver's inattentiveness.



Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

SWS is a function of LDA and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning display on the MID.

DISABLING LDA SWAY WARNING ALERT

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LDA)” and then press “.
 The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Sway Warning” and then press “.
 to select the desired setting.
- (4) Press “.
 to go back to the menu.


Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

ADJUSTING SWAY ALERT SENSITIVITY

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LDA)” and then press “.
 The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Sway Sensitivity” and then press “.
 to select the desired setting.
- (4) Press “.
 to go back to the menu.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Tracing Assist (LTA)

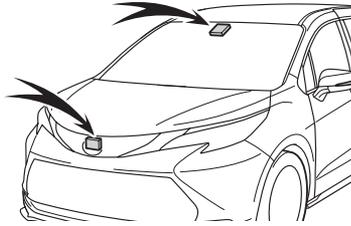


When Full-Speed Range Dynamic Radar Cruise Control (DRCC) is enabled and lane markers are detectable, Lane Tracing Assist (LTA) uses the lines on the road and/or preceding vehicles to help keep the vehicle centered in its lane.

See www.toyota.com/safety-sense for model applicability.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LTA SYSTEM ON/OFF

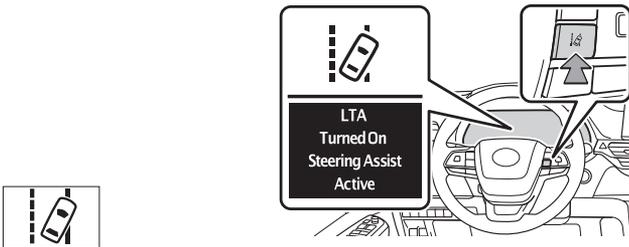


Press the LTA switch to turn the LTA system on. Depress again to turn it off.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings adjustments, limitations, and precautions before attempting to use it.


LTA function display

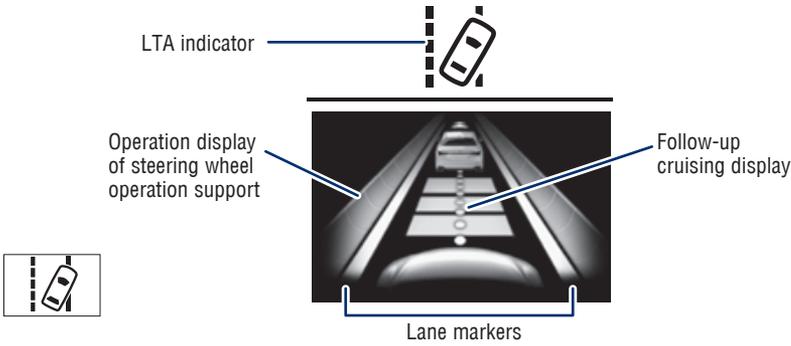

Lane Tracing Assist (LTA) indicator flashes orange when operating.



(1)

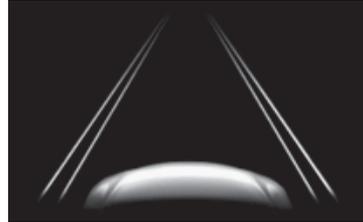

(2)

The LTA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LTA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LTA indicator when lane markers on the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LTA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LTA)” and then press “.
 The setting screen is displayed.- (3) Press “<>” or “◇” switches and select “Steering Assist” and then press “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.


ADJUSTING LTA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LTA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LTA)” and then press “.
 The setting screen is displayed.- (3) Press “<>” or “◇” switches and select “Sensitivity” and then press “” to select the desired setting.
- (4) Press “” to go back to the menu.

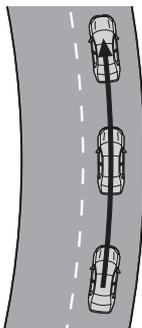

The lane centering function is linked with Full-Speed Range Dynamic Radar Cruise Control (DRCC) and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When dynamic radar cruise control with full-speed range is not operating, the lane centering function does not operate.

DISABLING LANE CENTERING FUNCTION

- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<>” or “◇” switches and select “ (LTA)” and then press “.
 The setting screen is displayed.
- (3) Press “<>” or “◇” switches and select “Lane Center” and then press “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.


Refer to the Toyota Owner's Manual for additional information on LTA operation, settings adjustments, limitations, and precautions before attempting to use it.

Full-Speed Range Dynamic Radar Cruise Control (DRCC)

Intended for highway use, Full-Speed Range Dynamic Radar Cruise Control (DRCC) lets you drive at a preset speed. The system is designed to function between 0-110 mph* and uses vehicle-to-vehicle distance control, helping maintain a preset distance from the vehicle ahead of you.*

* See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

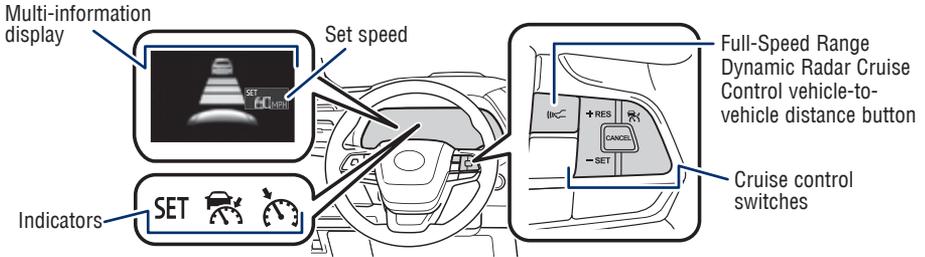

TURNING SYSTEM ON/OFF

(1)




Push once: On
Push twice: Off

Refer to page 58 for switching to Constant Speed (Cruise) Control Mode.

ADJUSTING DRCC SET SPEED

(2)

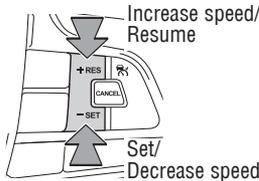


(3)



Vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.


- (1) Push “” to turn DRCC system ON. The “RADAR READY” and “” indicator will come on.
- (2) Use the steering wheel controls to increase speed by pushing “+RES” or decrease the speed by pushing “-SET.” Push and hold to make a large adjustment or push each time to make fine adjustments (1 mph [1.6 km/h] or 1 km/h [0.6 mph] increments.)
- (3) Push “Cancel” to cancel the speed control.

* The speed control may also be canceled by depressing the brake pedal.

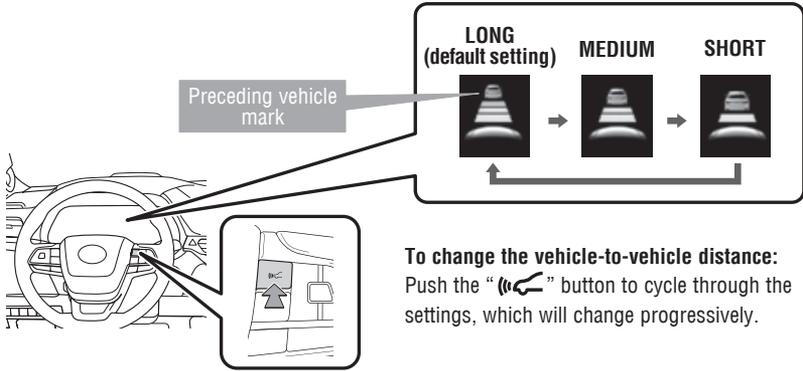

This mode employs a radar sensor to detect the presence of vehicles up to approximately 328 ft (100 m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a preset following distance from the vehicle ahead. These distances vary based on vehicle speed.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

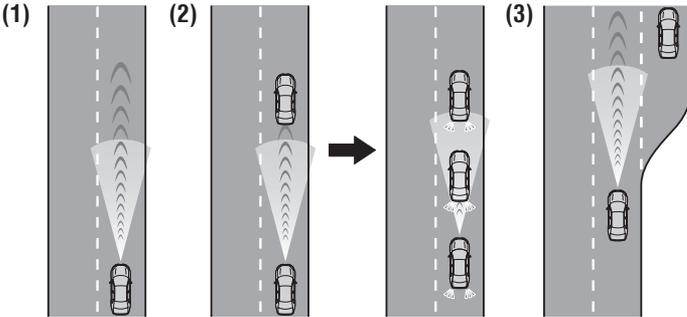

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears

When a slower vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system may apply the brakes (the brake lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.


ADJUSTING DISTANCE (CONTINUED)

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

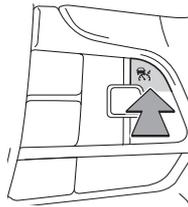


1.5 seconds

If you are already using DRCC, push “” button to turn the system off first, then push and hold the button for at least 1.5 seconds to switch.

Note: When the vehicle is turned off, it will automatically default to DRCC.


SETTING CONSTANT SPEED (CRUISE) CONTROL

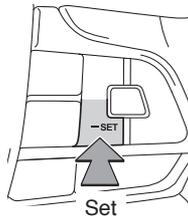

To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 56.

Refer to the Toyota Owner's Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

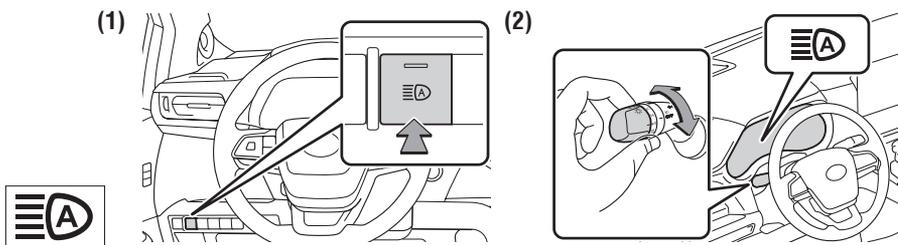

The Automatic High Beams (AHB) safety system is designed to help you see more clearly at night. At speeds above 25 mph, AHB can detect the headlights of oncoming vehicles and taillights of preceding vehicles, then automatically toggles between high and low beams accordingly.

See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

ACTIVATING THE AHB SYSTEM

- (1) Press the “” switch.
- (2) Turn the headlight switch to the “AUTO” or “” position.

The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Push the lever away from you to manually turn on high beams. Press the AHB switch to turn the AHB system off.

The AHB indicator will turn off and “” or “” will turn on. To activate the system again, pull the lever its original position or press the “” switch.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY


When all of the following conditions are met, the high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few street lights on the road ahead.

If any of the following conditions occur, the high beams will be automatically turned off:

- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

TEMPORARILY SWITCHING TO THE LOW BEAMS

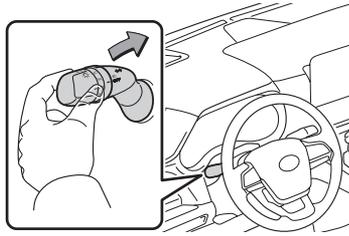

Pull the lever toward you and then return it to its original position to switch to the low beams temporarily.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time. Afterwards, the Automatic High Beams will be activated again.

NOTE: It is recommended to switch to the low beams when the high beams may cause problems or distress to other drivers or pedestrians nearby.

Refer to the Toyota Owner's Manual for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.


Road Sign Assist (RSA)

Using an intelligent camera, Road Sign Assist (RSA) is designed to detect speed limit signs, stop signs, do not enter signs and yield signs, and display them on the Multi-Information Display (MID).*


* All vehicle actions must be driver-initiated and are not automated.
See www.toyota.com/safety-sense for model applicability.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

RSA DISPLAY

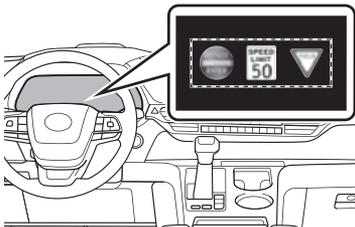

When the driving support system information is selected, a maximum of 3 signs can be displayed.

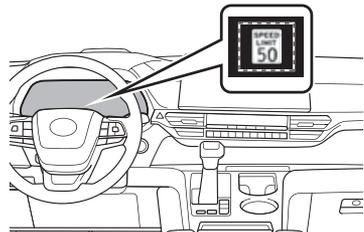

When a tab other than the driving support system information is selected, the following types of road signs will be displayed.

- Speed limit sign
- Do Not Enter sign (when notification is necessary)

SUPPORTED TYPES OF ROAD SIGNS



Speed limit



Stop



Do Not Enter



Yield

SETTING RSA


- (1) Press “<>” or “◇” switches and select “” from the Multi-Information Display (MID).
 - (2) Press “<>” or “◇” switches and select “ (RSA)” and then press “.
 The setting screen is displayed. - (3) Press “<>” or “◇” switches and select “Road Sign Assist on/off” and then press “.
- (4) Press “.

Note: If the vehicle was last turned off while a speed limit sign was displayed on the multi-information display, the same sign displays again when the vehicle is turned back ON.

Refer to the Toyota Owner's Manual for additional information on RSA operation, settings adjustments, limitations, and precautions before attempting to use it.

SAFETY & EMERGENCY FEATURES


Seat belts

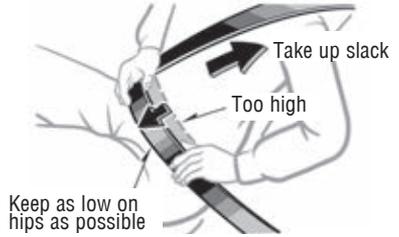

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts-Shoulder belt anchor

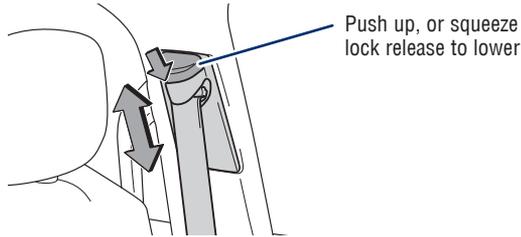

Rear door child safety locks


Rear door

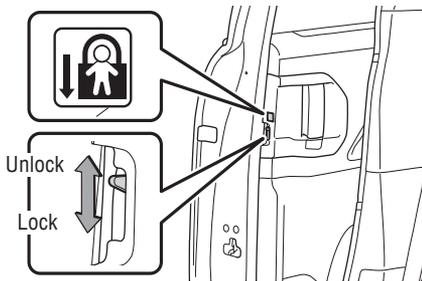

Moving the lever downward will allow the door to be opened only from the outside.

Child restraint anchors


2nd seat
8-passenger models

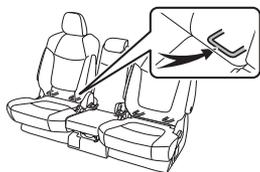

2nd seat
7-passenger models



3rd seat

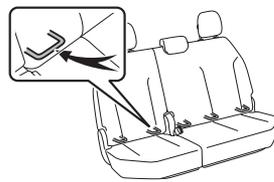

Tire Pressure Monitoring (warning) System (TPMS)

VEHICLES EQUIPPED WITH 4.2-in MID

VEHICLES EQUIPPED WITH 7-in MID



The tire pressure warning system can be selected on “” of the Multi-Information Display (MID).

System reset initialization

- (1) Press “” or “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” or “” switches and select the “Vehicle Settings (4.2-in display)” / “ (7-in display)” then push and hold “.
- (3) Press “” or “” switches and select “TPWS setting” and then push “.
- (4) Press “” or “” switches and select “Setting UNIT,” then select the desired unit and push “.

The tire pressure detected by the tire pressure warning system can be displayed on the Multi-Information Display (MID).

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.


If the tire pressure indicator flashes for approximately 1 minute and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

SAFETY & EMERGENCY FEATURES


Spare tire & tools (if equipped)

TOOL & SPARE TIRE LOCATION

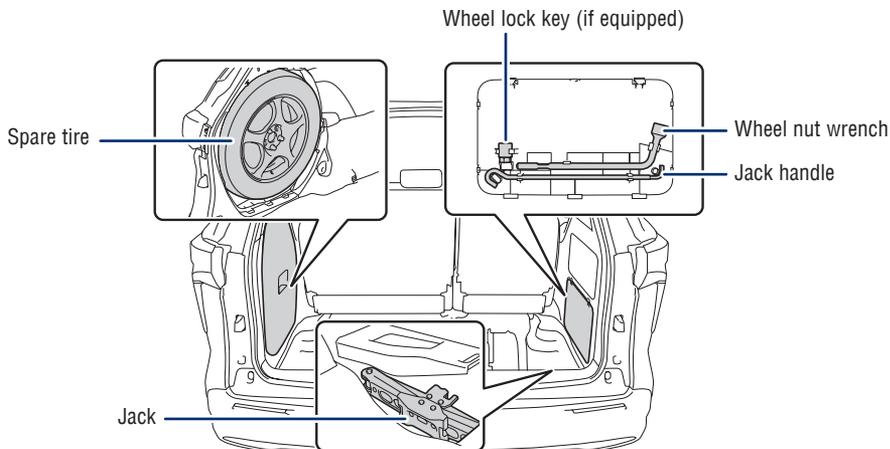


REMOVING THE SPARE TIRE


(1) Remove the cover.

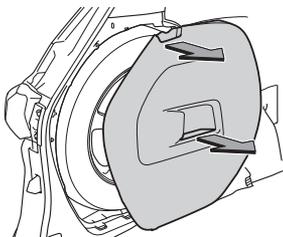

(2) Slightly loosen the wheel nuts (one turn).

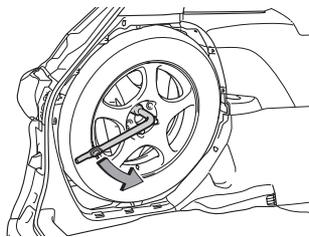


(3) Remove all the wheel nuts and take out the spare tire.

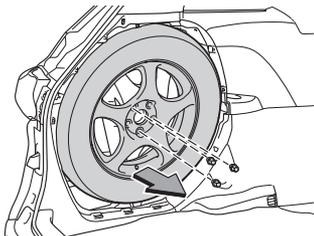


Refer to the Owner's Manual for jack positioning and tire changing procedures.

Tire repair kit & tools (if equipped)

TOOL LOCATION

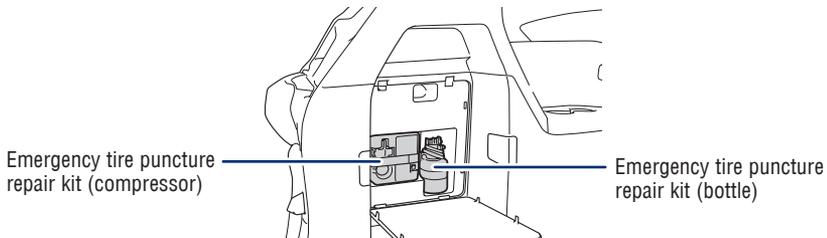


TIRE REPAIR KIT COMPONENTS

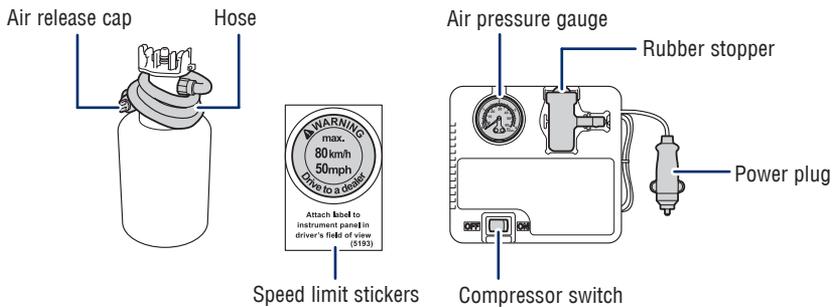

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Safety Connect[®]

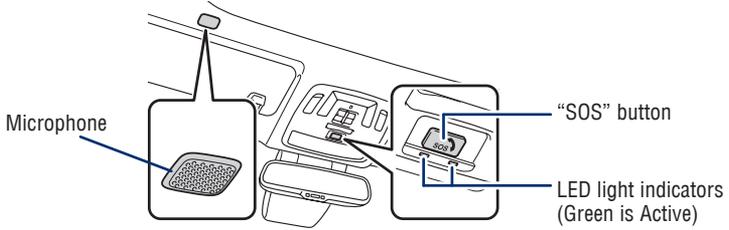

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is staffed with live agents at the Toyota response center, which operates 24 hours per day, 7 days per week.

Services for subscribers include:

- Automatic collision notification
- Stolen vehicle locator
- Emergency assistance ("SOS" button)
- Enhanced roadside assistance

For limitations and additional information, refer to the "Owner's Manual" or visit www.toyota.com/connected-services.

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

VEHICLE STABILITY CONTROL (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

SAFETY & EMERGENCY FEATURES

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation



There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

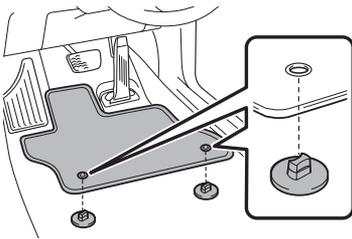

Always align the Δ marks

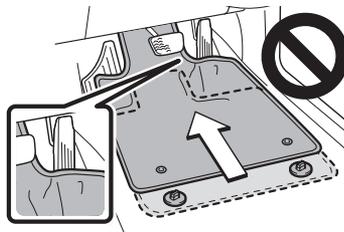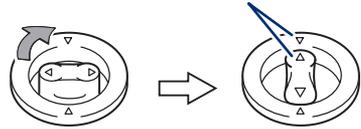

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of the multimedia system.

Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.¹




Audio / Audio Plus / Premium Audio

STEP 1 Press [MENU] on the audio system faceplate, then select "Setup" on display screen.



iPhone bluetooth Menu

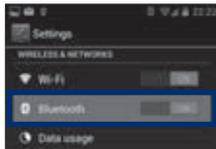


Android bluetooth Menu




STEP 2 Ensure Bluetooth is turned on for your phone.

STEP 3 Select "Bluetooth," then select "Add New Device" on display screen.

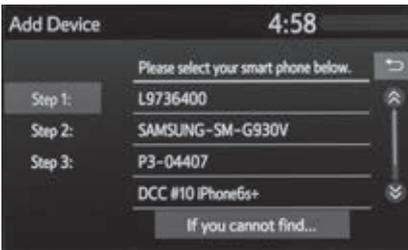

STEP 4 Select "Phone Name."

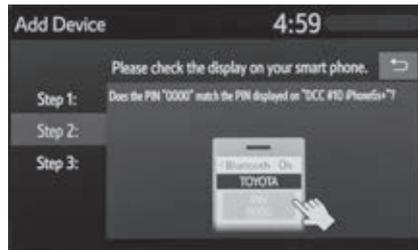

STEP 5 Check the display on your phone. Does the PIN XXXX match the PIN displayed? If it does, select "Pair."

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Bluetooth® Pairing for your phone (cont.)




STEP 6 "Connecting" displays while phone is forming the connection to the multimedia system.




STEP 7 Enable Notifications (text message). While pairing your phone, a message will be displayed: **"You may need to allow message access on your phone."**

Note: You may also select "Skip" on display screen to skip enabling notifications. If skipped, proceed to **Step 8**.

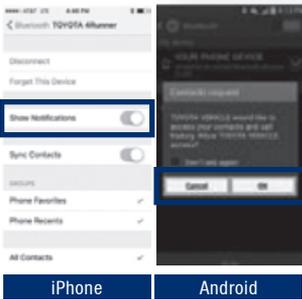

STEP 8 Turn on "Show Notifications" for iPhone or "ON" for Android.

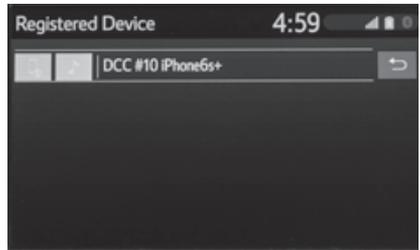

STEP 9 A confirmation will appear once your phone has been paired and connected.



Sienna

Quick Reference Guide 2021



00505QRG21SIE



Printed in U.S.A. 7/20
20-MKG-14799

toyota.com