

QUICK REFERENCE GUIDE



COROLLA HATCHBACK

2022

2022

COROLLA HATCHBACK

This Quick Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Quick Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor North America, Inc. wish you many years of satisfied driving in your new Corolla Hatchback.

A word about safe vehicle operations

This Quick Reference Guide is not a full description of Corolla Hatchback operations. Every Corolla Hatchback owner should review the Owner's Manual that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Quick Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	8
Fuel tank door release & cap	7
Hood release	8
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
Instrument panel light control	8
Keyless entry ^{1,2}	6
Smart Key system ^{1,2}	7

FEATURES & OPERATIONS

Air conditioning/heating ^{1,2}	22
Audio	20
Auto lock/unlock ^{1,2}	11
Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA) ²	25
Bottle holders	17
Clock	18
Continuously variable transmission	9
Cup holders	17
Door locks ^{1,2}	16
Driving mode select switches	23
Electric parking brake	10-11
Heated seats	23
Lights ^{1,2} & turn signals	14-15
Manual transmission	9
Multi-Information Display (MID) ²	12
Power outlet-12V DC	21
Power windows ¹	16
Qi Wireless charger	21
Rear seats-Folding	13
Rear view monitor system	24
Seat adjustments-Front	13
Seats-Head restraints	13
Steering lock release	18
Steering wheel switches & telephone controls (Bluetooth®)	19

FEATURES & OPERATIONS (continued)

Tilt & telescopic steering wheel	18
USB charge port	20
USB media port	20
Vehicle Stability Control (VSC)/TRAC OFF switch	24
Windshield wipers & washers	15

TOYOTA SAFETY SENSE™ 2.0 (TSS 2.0)

Automatic High Beams (AHB)	41
Dynamic Radar Cruise Control (DRCC) or Full-Speed Range DRCC	38-40
Lane Departure Alert with Steering Assist (LDA w/SA)	30-33
Lane Tracing Assist (LTA)	34-37
Pre-Collision System with Pedestrian Detection (PCS w/PD)	27-29
Quick overview-	
Toyota Safety Sense™ 2.0 (TSS 2.0)	26
Road Sign Assist (RSA)	42
Sensors	27

SAFETY & EMERGENCY FEATURES

Floor mat installation	49
Rear door child safety locks	43
Safety Connect®	45
Seat belts	43
Seat belts-Shoulder belt anchor	43
Spare tire & tools	46
Star Safety System™	48-49
Tire Pressure Monitoring (warning) System (TPMS)	44
Tire repair kit & tools	47



BLUETOOTH® DEVICE PAIRING SECTION

50-52

¹ Visit your Toyota dealer for information on customizing this feature.



² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

Instrument panel

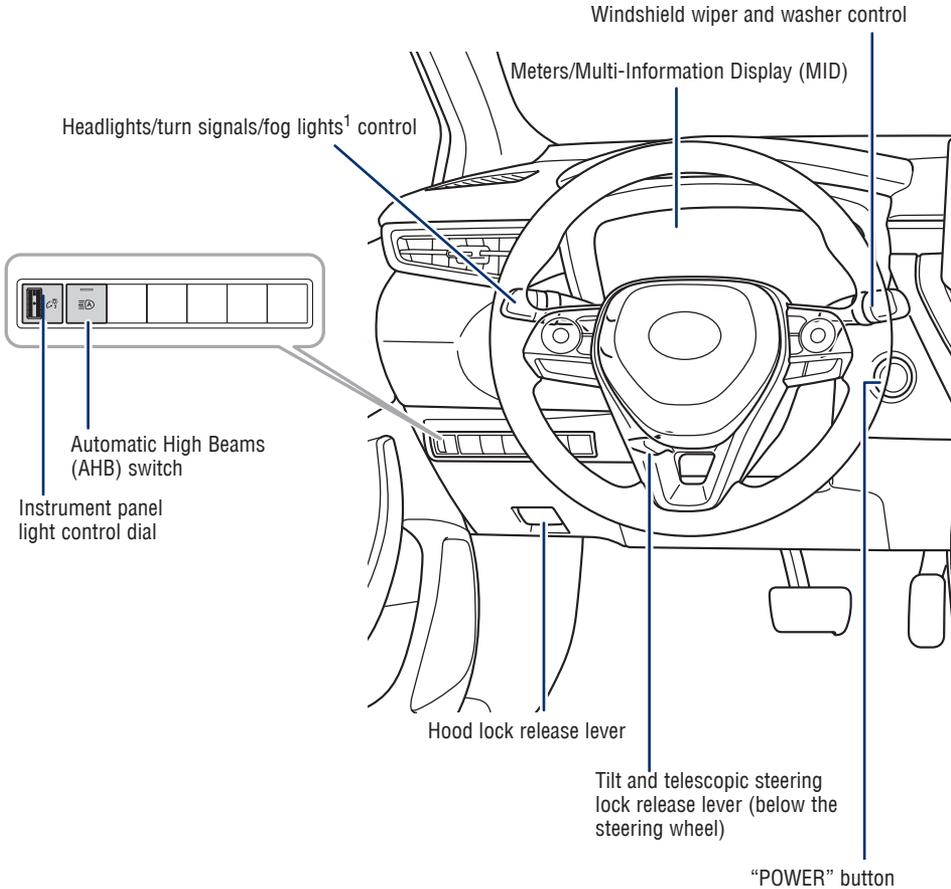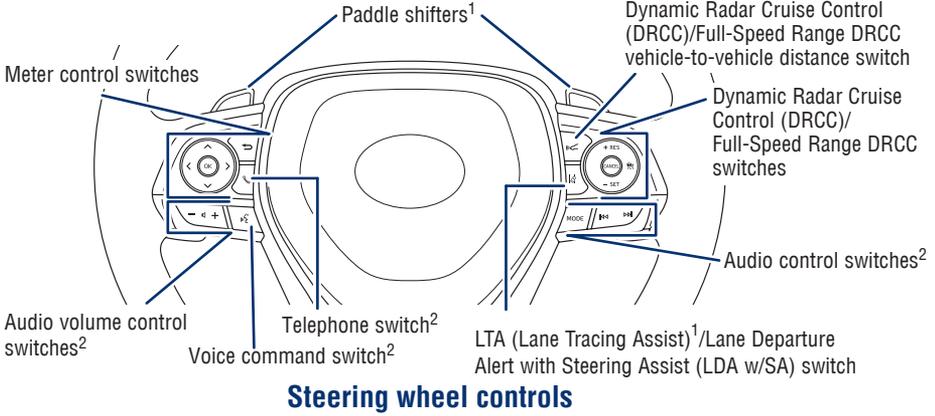


¹ If equipped.

² For details, refer to the “Owner’s Manual,” “Navigation and Multimedia System Owner’s Manual” or visit www.toyota.com/audio-multimedia for additional resources.

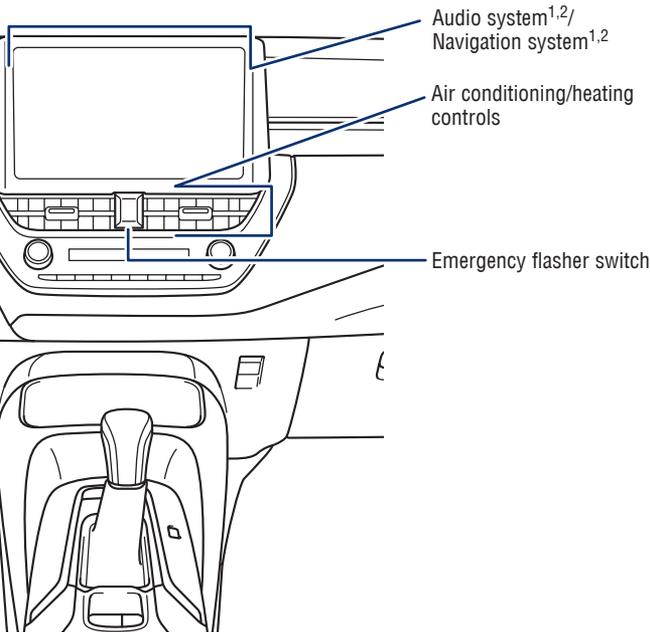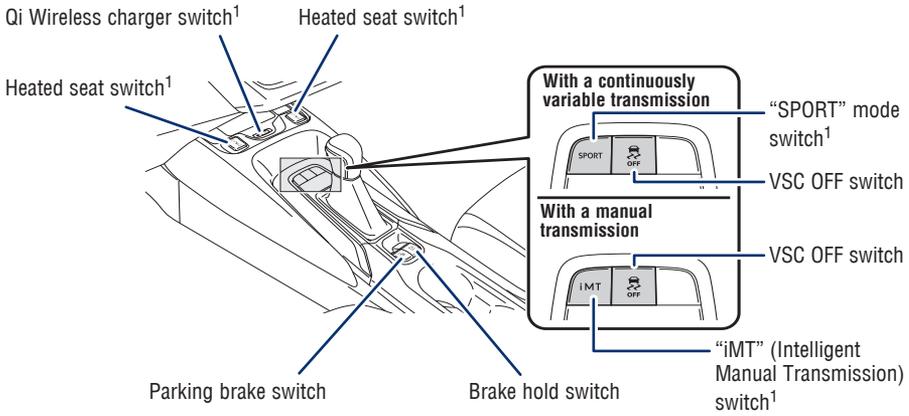


Instrument cluster


Vehicles equipped with 4.2-in display

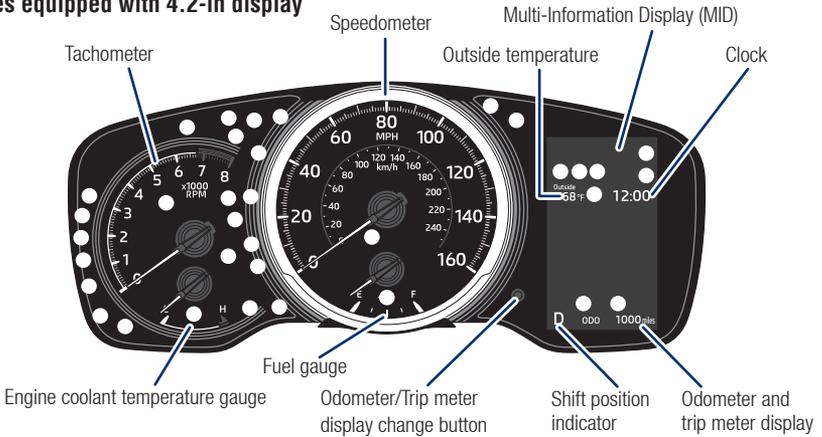

Vehicles equipped with 7-in display (Analog speedometer)

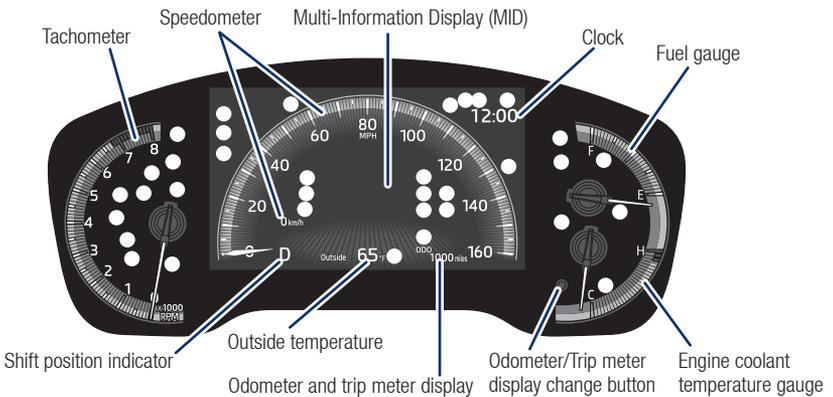

Vehicles equipped with 7-in display (Digital speedometer)

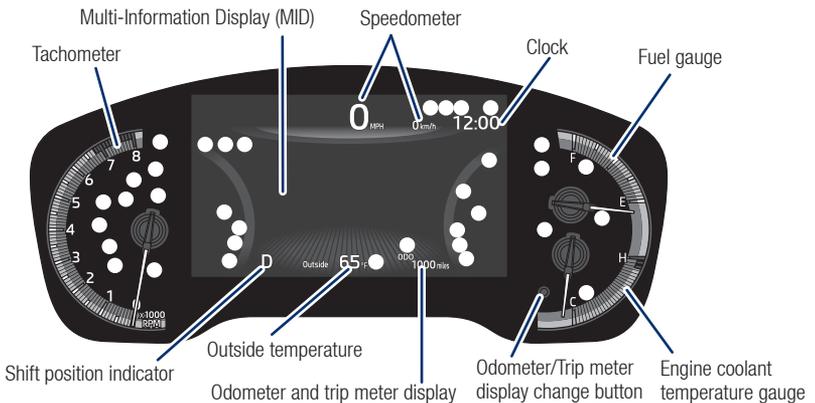

○ Service indicators and warning lights

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2-1, 2022 Owner’s Manual.

	“AIR BAG ON/OFF” indicator ¹		Headlight low/high beam indicators
	Airbag SRS warning ¹		High coolant temperature warning
	Anti-lock Brake System (ABS) warning ¹		iMT indicator [orange/green] ^{1,4}
	Auto EPB OFF indicator ^{1,4}		Lane Tracing Assist (LTA) ^{1/} Lane Departure Alert with Steering Assist indicator (LDA w/SA) [white/green/orange ³]
	Automatic High Beams (AHB) indicator		Low engine oil pressure warning
	Blind Spot Monitor (BSM) indicator ⁴		Low fuel level warning
	BSM outside rear view mirror indicators ^{1,4}		Low outside temperature indicator
	Brake hold operating indicator ^{1,2}		Low tire pressure warning ¹
	Brake hold standby indicator ¹		Malfunction/Check engine indicator ¹
	Brake Override System/Drive-Start Control warning		Parking brake indicator ²
	Brake system warning ¹		Pre-Collision System (PCS) warning ^{1,2}
	Brake system warning [yellow] ¹		RCTA OFF indicator ^{1,2,4}
	Charging system warning ¹		Rear passengers’ seat belt reminder
	Constant speed cruise control/ Dynamic Radar Cruise Control (DRCC) indicator		Security indicator
	Constant speed cruise control/Dynamic Radar Cruise Control (DRCC) SET indicator		Slip indicator ^{1,3}
	ECO driving indicator light ^{1,4}		Smart Key system indicator
	Driver’s and front passenger’s seat belt reminder (alarm will sound when the vehicle is on)		SPORT mode indicator ⁴
	Electric power steering system warning [red/yellow] ¹		Turn signal indicator
	Front fog light indicator ⁴		Vehicle Stability Control (VSC) OFF indicator ¹
	Fuel tank door position		

¹ If the indicator does not turn off within a few seconds of starting the engine, there may be a malfunction. Have the vehicle inspected by your Toyota dealer.

² If the indicator flashes, there may be a malfunction. Refer to the Owner’s Manual.

³ If the indicator flashes, it indicates that the system is operating.

⁴ If equipped.

OVERVIEW

Keyless entry

UNLOCKING OPERATION




Push
ONCE: Driver door
TWICE: All doors

Carry Smart
Key remote

Driver's door unlock*

Grasp

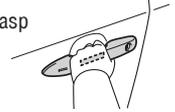

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

LOCKING OPERATION



Push

Carry Smart
Key remote

All-door lock

Touch



PANIC BUTTON



HOLD




Push and hold



BACK DOOR LOCKING/UNLOCKING



Carry Smart
Key remote

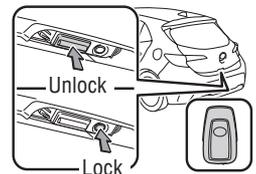


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. In some models, grasping front passenger door handle will unlock all doors.

Please refer to the Owner's Manual for more details on how to program the doors.

NOTE: Doors may also be locked/unlocked using the mechanical key.

Smart Key system


START FUNCTION

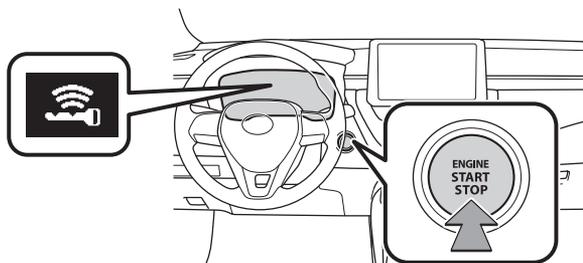

NOTE: The Smart Key must be carried to enable the start function. With the shift lever in Park* or N** and the brake pedal* or clutch pedal** depressed, push the power button.

POWER (WITHOUT STARTING VEHICLE)




Without depressing the brake pedal* or clutch pedal**, pressing the power button will change the operation mode in succession from:

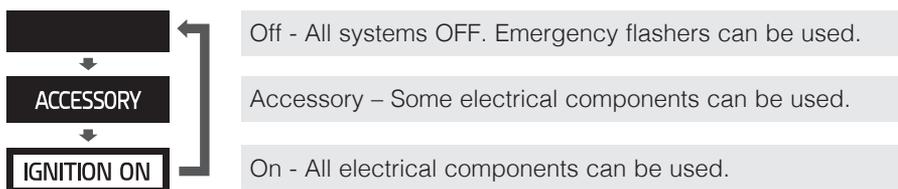

* Available only on vehicles with continuously variable transmissions


** Available only on vehicles with manual transmissions

Fuel tank door release & cap

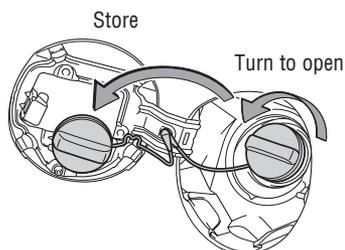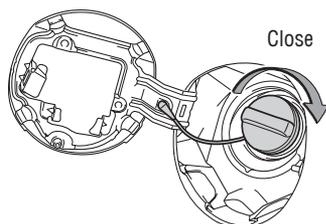
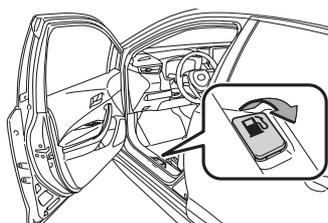


NOTE: Tighten until one click is heard. If the cap is not locked or tightened enough, the Check Engine indicator “” may illuminate.

Instrument panel light control

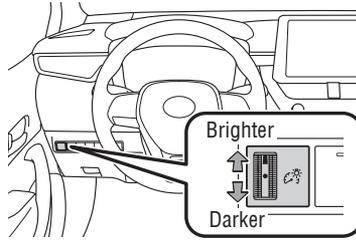

Hood release

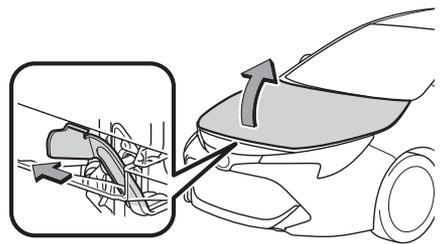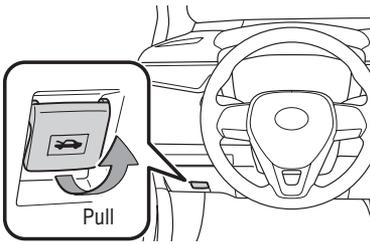


Pull the latch to the left and raise hood

Engine maintenance

Engine coolant reservoir

Engine oil filler cap


Engine oil level dipstick

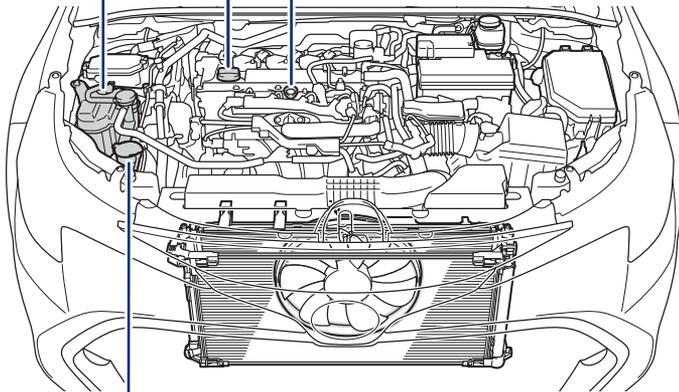

Washer fluid tank

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."

Continuously variable transmission (if equipped)

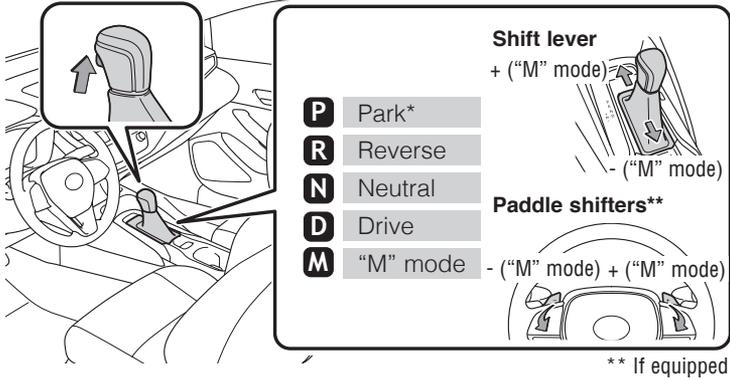

* The vehicle must be on and the brake pedal depressed to shift from Park.

"M" 10-SPEED SPORT SEQUENTIAL SHIFTMATIC MODE

Push shift lever to the left from "D" position, to "M" position.

Shift lever type:


- + : Upshift (push and release)
- : Downshift (pull and release)

Paddle shifters type (if equipped):

- + : Upshift (pull and release)
- : Downshift (pull and release)


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Manual transmission (if equipped)

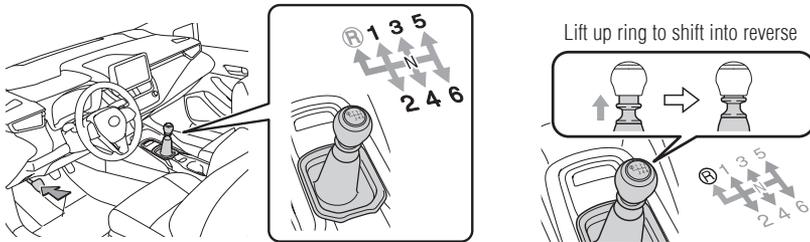


Electric parking brake


Automatic mode ON

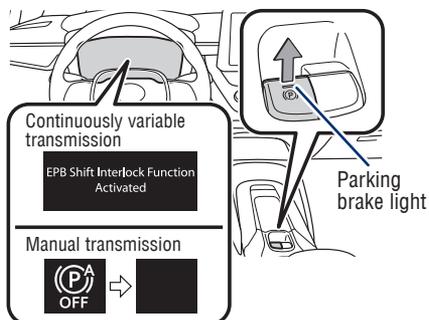

Automatic mode OFF

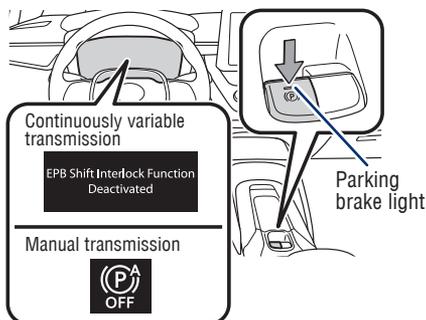

Manual mode

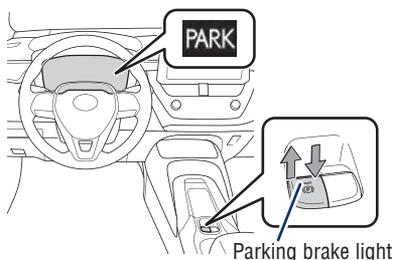

Automatic

To turn automatic mode ON, while vehicle is stopped, pull and hold the switch until “EPB Shift Interlock Function Activated” displays on the Multi-Information Display (MID)* or auto EPB OFF indicator turns off**. While depressing brake, shifting into P position* or when the engine is off** will automatically set the brake, and turn the parking brake indicator and parking brake light on. To release brake, depress brake and shift out of P. The indicator and the light turn off.


To turn automatic mode OFF, push and hold the parking brake switch until “EPB Shift Interlock Function Deactivated” displays on the MID* or auto EPB OFF indicator turns on**.

Manual

While vehicle is stopped and brake pedal is depressed, pull the switch to set parking brake and turn the parking brake indicator and parking brake light on. To release, press the brake pedal and push the switch. The indicator and the light turn off.

* Available only on vehicles with continuously variable transmissions

** Available only on vehicles with manual transmissions

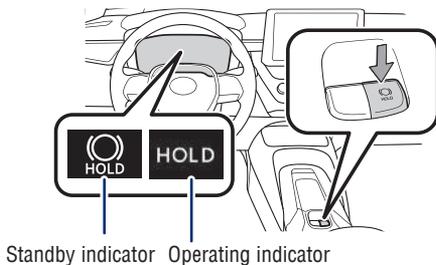

Brake hold

The brake hold system keeps the brake applied when the shift lever is in D, M or N*/a forward driving position** or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or M*/a forward driving position** to allow smooth start off.

Refer to the Owner's Manual for limitations and more details.

* Available only on vehicles with continuously variable transmissions

** Available only on vehicles with manual transmissions

Auto lock/unlock

Automatic door locks can be programmed to operate in different modes, or turned OFF.

DEFAULT SETTING*

Shift position linked door locking/unlocking function

- Doors lock when shifting from Park.
- Doors unlock when shifting into Park.

CUSTOMIZED SETTING

Speed linked door locking function

- Doors lock when the vehicle speed goes above approximately 12 mph (20 km/h) or higher.

Driver's door linked door unlocking function

- Doors automatically unlock when the driver's door is opened.

* The Shift position linked door locking/unlocking function is only available on vehicles with continuously variable transmissions. The default setting for vehicles with manual transmissions is OFF.


Refer to the Owner's Manual or contact your Toyota dealer for more details.

FEATURES & OPERATIONS

Multi-Information Display (MID)


VEHICLES EQUIPPED WITH 4.2-in DISPLAY

Driving assist system status display area

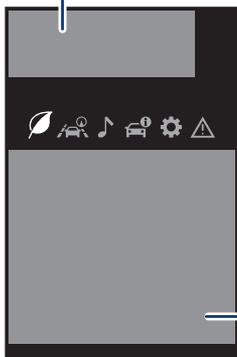

VEHICLES EQUIPPED WITH 7-in DISPLAY

Driving assist system status display area

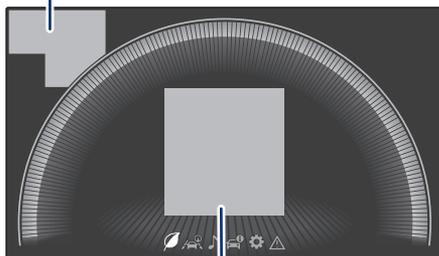


Content display area

Content display area

Return to the previous screen

Push: enter/set,
Push and hold: reset

Scroll/search screens

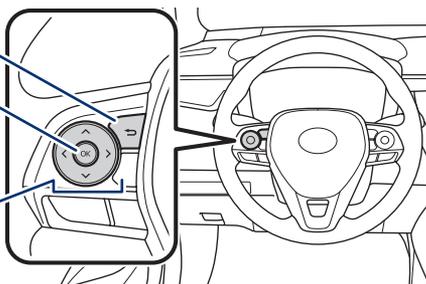

Press meter control switches to change and select information in the following:



Driving information display



Driving support system information display



Audio system-linked display



Vehicle information display




Settings display



Warning message display


Seat adjustments-Front

MANUAL SEAT

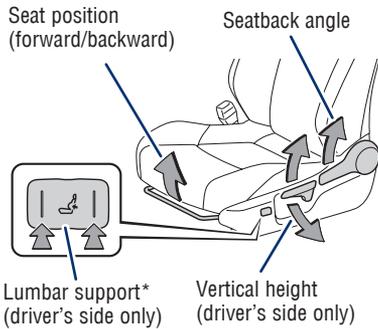


* If equipped

POWER SEAT (DRIVER'S SIDE ONLY)

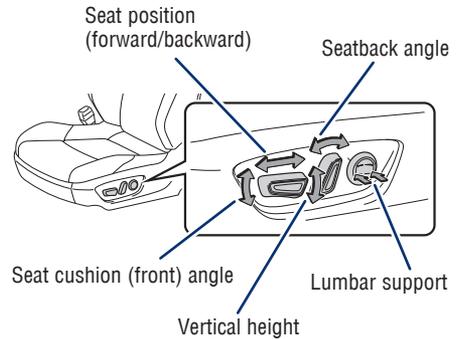


Rear seats-Folding

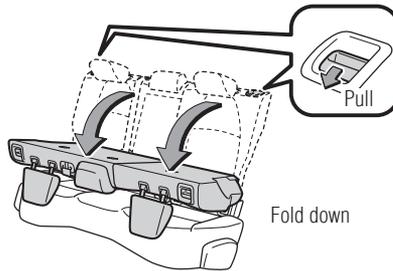


Each seatback may be folded separately.

Seats-Head restraints


Front seats

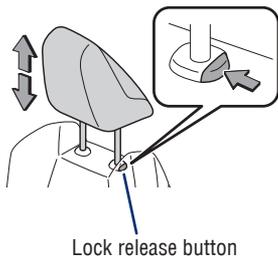

Rear outside seats

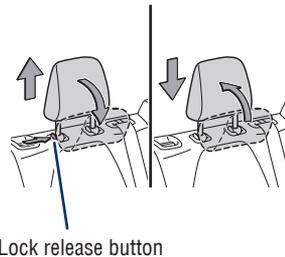


Rear center seat

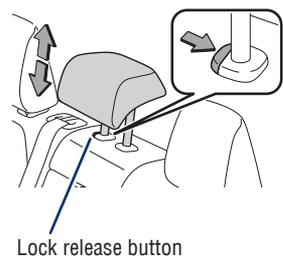

FEATURES & OPERATIONS

Lights & turn signals

HEADLIGHTS

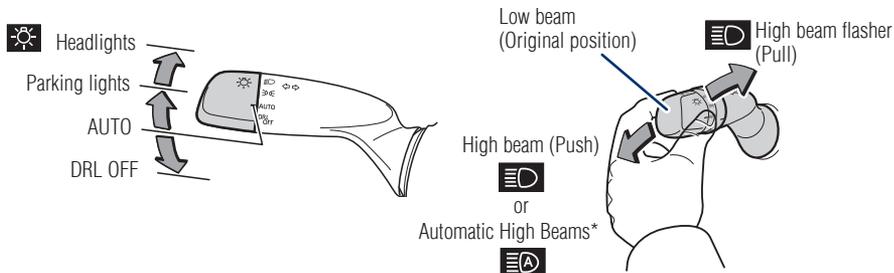

Daytime Running Light system (DRL) Automatically turns on under certain conditions to make vehicle more visible to other drivers. Not for use at night.

Automatic light cut off system


- Headlights are on: The lights will turn off automatically 30 seconds after the vehicle is turned from ON to ACC or OFF and a door is opened and closed. (If the lock switch on the Smart Key remote is pushed after all doors are closed, the lights will turn off immediately.)
- Only the tail lights are on: The tail lights will turn off automatically if the vehicle is turned from ON to ACC or OFF and the driver's door is opened.

Automatic High Beams (AHB) system Automatically switches between high and low beams as appropriate to enhance vision at night.

Refer to Toyota Safety Sense™ 2.0 (TSS 2.0) in this guide or the Owner's Manual for more details on the Automatic High Beams feature.


* Operating conditions must be met. Refer to the Owner's Manual for details.

FRONT FOG LIGHTS (IF EQUIPPED)

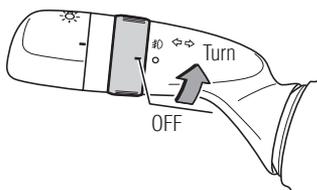

Front fog lights come on only when the headlights are on low beam.


TURN SIGNAL

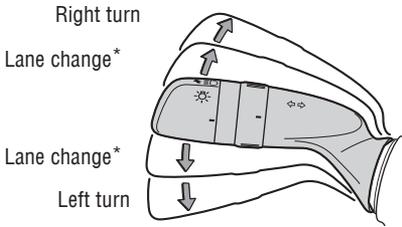


* Move lever partway and release. The signals will flash three times.

Windshield wipers & washer

FRONT

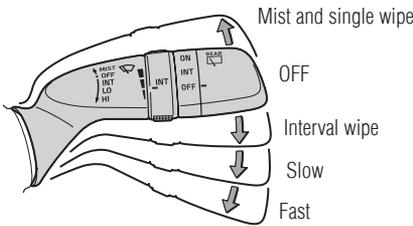

Adjust frequency*

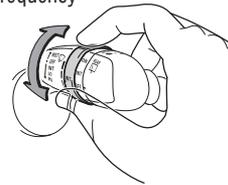


Pull to wash and wipe

* **Intermittent windshield wiper frequency adjustment:** Rotate to increase/decrease wiper frequency.


Refer to the Owner's Manual for more information.

REAR

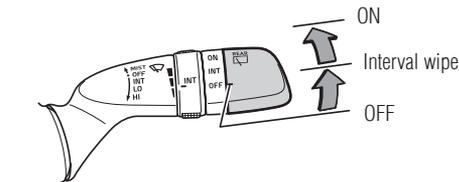



Push lever to wash and wipe

Door locks

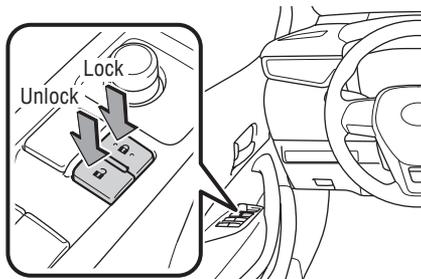

Power windows

Driver side

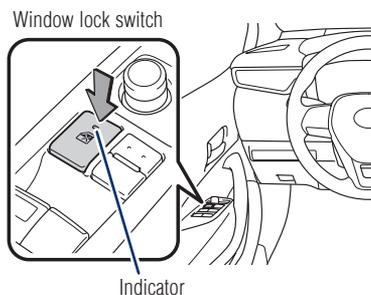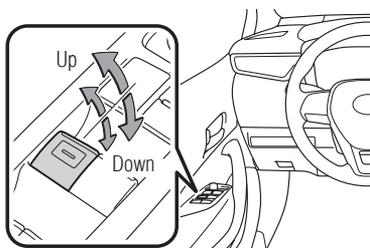

All window auto up/down


Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.

Window lock switch


Deactivates all passenger windows. Driver's window remains operable.

Bottle holders

FRONT (DOOR MOUNTED)

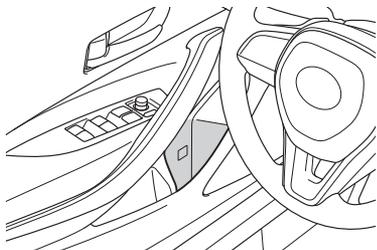


REAR (DOOR MOUNTED)

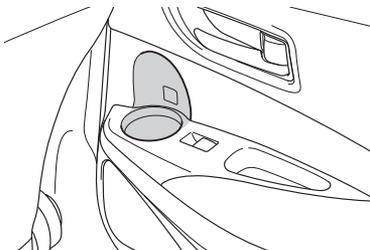


Cup holders


FRONT

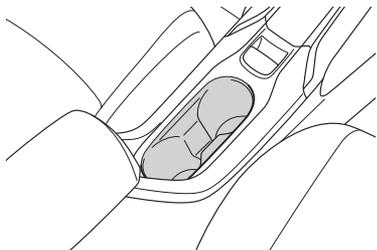

REAR

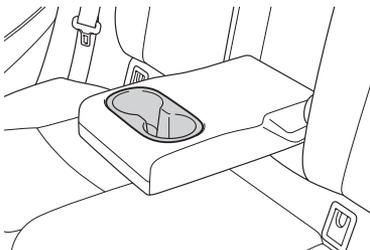


Steering lock release

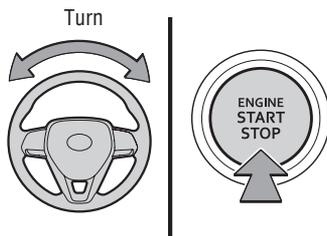

When the steering lock cannot be released, "Push Power Button while Turning Steering Wheel in Either Direction" will be displayed on the Multi-Information Display (MID). Press the power button shortly and firmly while turning the steering wheel left and right.

Tilt & telescopic steering wheel

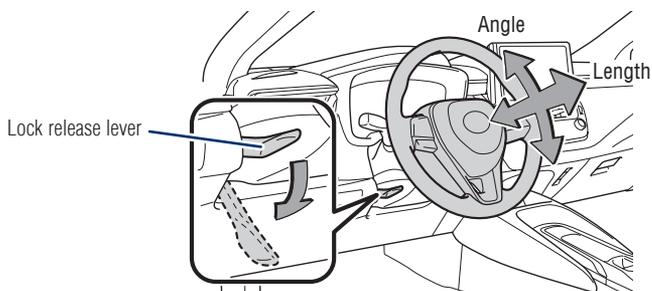


Hold the steering wheel, push the lever down, set angle and return the lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Clock

- Select to change the time zone.
- Select to set daylight saving time ON/OFF/AUTO.*
- Select to set automatic adjustment of the clock by GPS on/off.
- Select to set the 24 hour time format on/off.


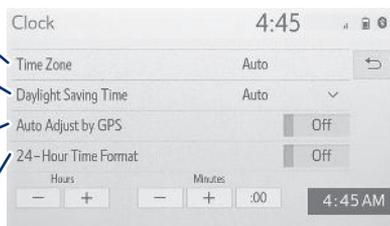


- 1) Push "**MENU**" button next to the screen.
- 2) Select "**Setup**" or "**General**" on the touchscreen to access the general setting screen.
- 3) Select "**Clock**."
- 4) Select the desired items to be set.

Refer to the "Navigation and Multimedia System Owner's Manual" for more details.

* Premium Audio only.

Steering wheel switches & telephone controls (Bluetooth®)

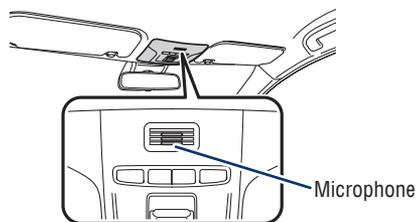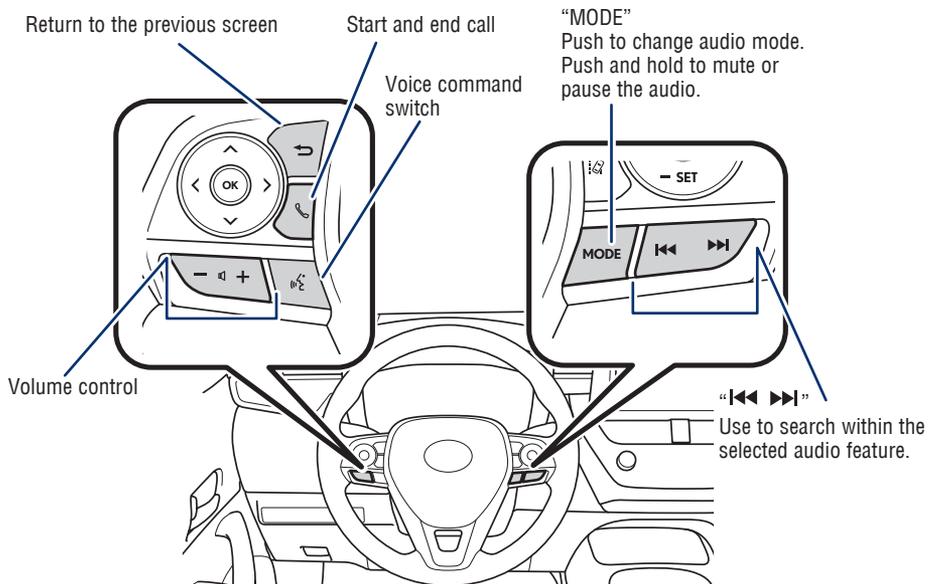


Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel.

Refer to the *Bluetooth® device pairing in this guide or the Navigation and Multimedia System Owner's Manual for additional user instructions.*

NOTE: Always use safe driving practices and follow all traffic rules.

FEATURES & OPERATIONS


Audio

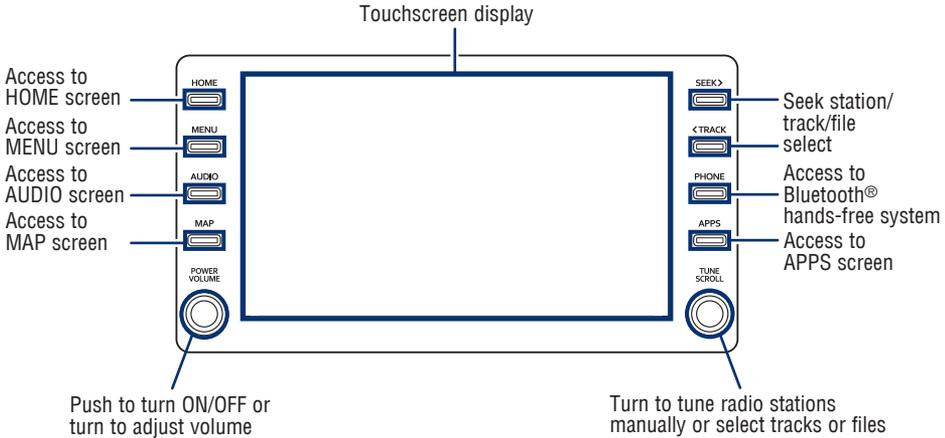

Refer to the “Owner’s Manual,” “Navigation and Multimedia System Owner’s Manual” or visit www.toyota.com/audio-multimedia for additional resources.


NOTE: Always use safe driving practices and follow all traffic rules.

USB charge port

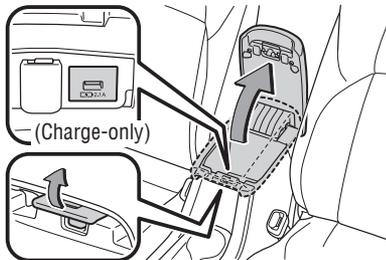




The vehicle must be in the “ACCESSORY” or “IGNITION ON” mode for use.

USB media port

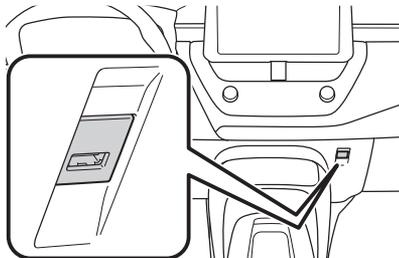


Connecting a compatible device and cable into the USB media port will support charging and music playback through the audio multimedia system.

Qi Wireless charger (if equipped)

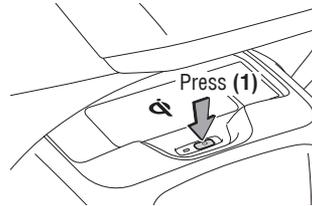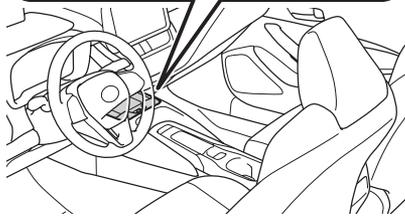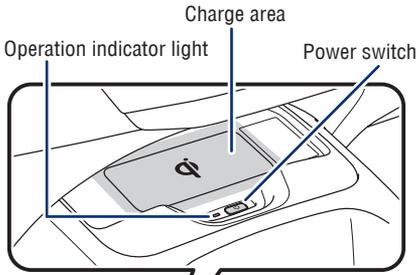

When the vehicle is turned off, the last state (ON/OFF) of the charger is retained.

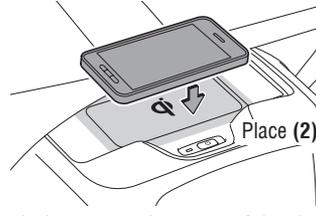


Place device nearest the center of the charging area for best results. Moving device may result in stopping or restarting the charging process.

A mobile device can be charged wirelessly on the tray. **(1)** Press the wireless charger power switch and the green operation indicator light turns on. **(2)** Place a compatible mobile device on the tray as shown in the illustration. An amber indicator illuminates while charging is in progress. When charging is complete, the indicator illuminates green. Some phones, cases or cover type wireless chargers may not cause the green indicator to illuminate even though it is fully charged.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Power outlet-12V DC

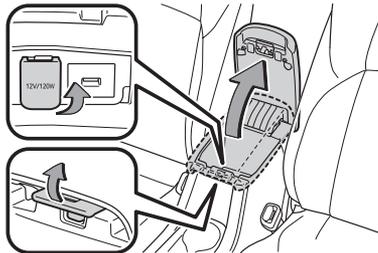


The vehicle must be in the "ACCESSORY" or "IGNITION ON" mode for use.

FEATURES & OPERATIONS

Air conditioning/heating

WITHOUT DUAL AIR CONDITIONING SYSTEM

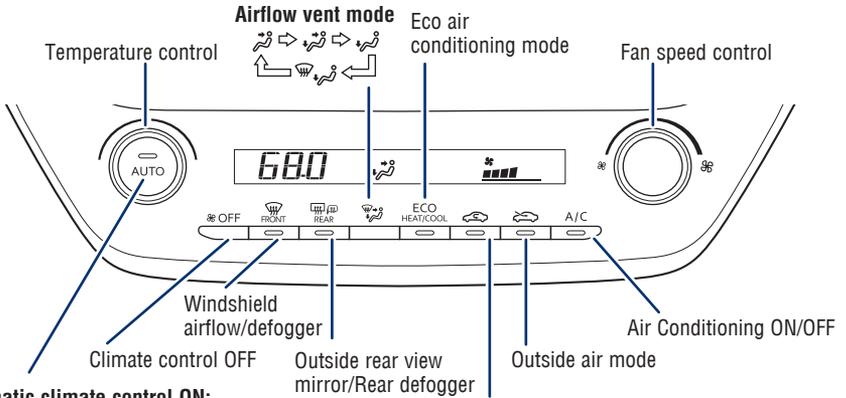


Automatic climate control ON:

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically to the set temperature.

Recirculate cabin air (outside air when OFF)

WITH DUAL AIR CONDITIONING SYSTEM

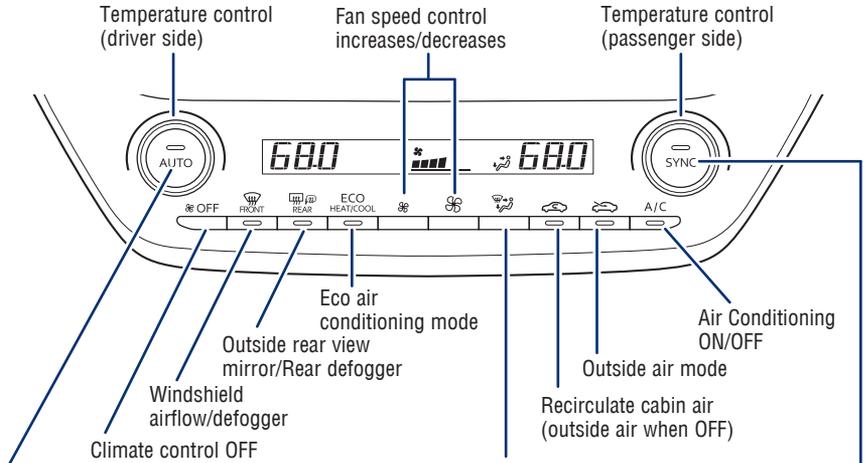

Automatic climate control ON:

Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically to the set temperature.

Airflow vent mode




“SYNC” button

Indicator ON: Synchronized temperature settings for driver's and front passenger's seat.

Indicator OFF: Separate temperature settings for driver's and front passenger's seat.


Heated seats (if equipped)

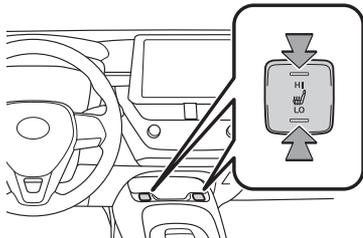

The vehicle must be on for use.

Driving mode select switches (if equipped)

SPORT MODE (WITH A CONTINUOUSLY VARIABLE TRANSMISSION)

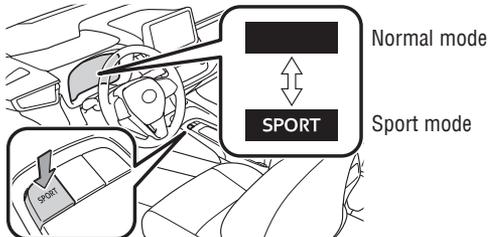


Normal mode

Sport mode

SPORT


iMT (INTELLIGENT MANUAL TRANSMISSION, WITH A MANUAL TRANSMISSION)

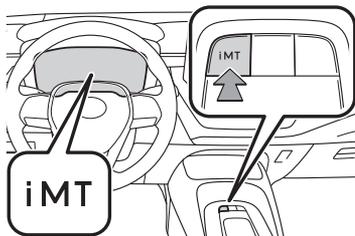

iMT

Refer to the Owner's Manual for more information.

Rear view monitor system

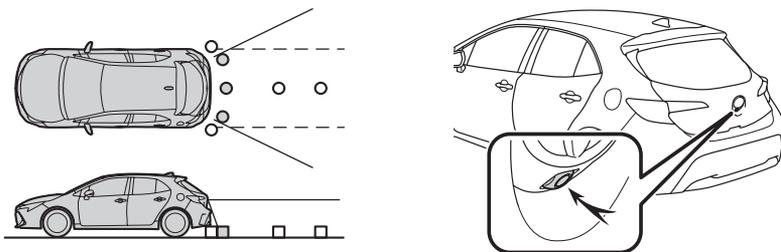


The rear view monitor system displays an image of the view from the bumper of the rear area of the vehicle. The camera for the rear view monitor system is located above the license plate.

To adjust the image on the rear view monitor screen, press the “MENU” button and select “Display” on the screen. Select “Camera” to adjust the screen contrast and brightness.

Refer to the Owner's Manual and the Navigation and Multimedia System Owner's Manual for limitations and more details on this system.

Vehicle Stability Control (VSC)/ TRAC OFF switch

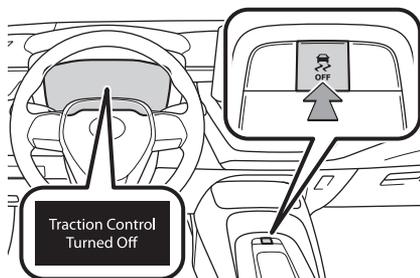


The VSC OFF switch can be used to help free a stuck vehicle in surroundings like mud, dirt or snow. While the vehicle is stopped, press the switch to disable the TRAC system.

To disable both VSC and TRAC systems, press and hold the switch for at least 3 seconds.

Refer to the Owner's Manual for limitations and more details.

Blind Spot Monitor (BSM) and Rear Cross Traffic Alert (RCTA) (if equipped)

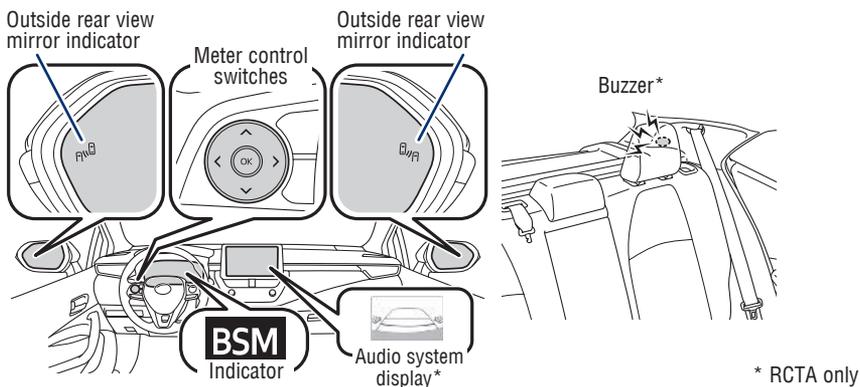

BLIND SPOT MONITOR (BSM)

The system is designed to use radar sensors to detect vehicles traveling in the Corolla Hatchback's blind spot. If a vehicle is detected, the driver will be alerted via the outside rear view side mirror indicators.

REAR CROSS TRAFFIC ALERT (RCTA)

While in reverse, when a vehicle approaching from the right or left rear of the Corolla Hatchback is detected, the outside rear view mirror indicators will flash. Also, the RCTA icon for the detected side will be displayed on the audio system display, and the RCTA buzzer will sound.

SYSTEM ON/OFF

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<” switches and select “” or “RCTA” and then press “.
 The setting screen is displayed.- (3) Select the “On/Off” setting function and then press “.
- (4) Press “>” to go back to the menu.

Refer to the Owner's Manual for limitations and more details on this system before attempting to use it.

Quick overview-Toyota Safety Sense™ 2.0

Toyota Safety Sense™ 2.0 (TSS 2.0) is a set of active safety technologies designed to help mitigate or prevent collisions across a wide range of traffic situations, in certain conditions. TSS 2.0 is designed to help support the driver's awareness, decision making and vehicle operation contributing to a safe driving experience.

Refer to the Owner's Manual for operation, setting adjustments, limitations and more details to understand these functions and complete safety precautions. For more information, please go to www.toyota.com/safety-sense.



Pre-Collision System with Pedestrian Detection (PCS w/PD)

PCS w/PD is designed to provide alert, mitigation, and/or avoidance support in certain conditions, when the system detects a potential collision with a preceding vehicle is likely to occur.

The advanced grille-mounted radar system is designed to work with the forward-facing camera to help recognize a preceding pedestrian or bicyclist, and provide an alert, mitigation and/or avoidance support in certain conditions.



Lane Departure Alert with Steering Assist (LDA w/SA)

LDA w/SA is designed to provide notification when the system detects an unintended lane departure.

The Steering Assist function is designed to provide small corrective steering inputs to the steering wheel for a short period of time to help keep the vehicle in its lane.

The Sway Warning function is designed to detect vehicle swaying (based on the vehicle location and steering wheel operation) and alert drivers with an audio and visual alert, urging them to take a break.



Lane Tracing Assist (LTA)**

LTA contains all the features of LDA described above and additionally is designed to help keep the vehicle in the center of a lane by assisting the driver in steering control when using Full-Speed Range DRCC**.



Dynamic Radar Cruise Control (DRCC)* or Full-Speed Range Dynamic Radar Cruise Control (DRCC)**

DRCC is designed to help maintain a pre-set distance to a preceding vehicle when the preceding vehicle is traveling at a lower speed. Full-Speed Range DRCC is the same as regular DRCC except the available speed range is extended down to 0 MPH.



Automatic High Beams (AHB)

AHB is designed to detect the headlights of oncoming vehicles and the tail lights of preceding vehicles and switch between high beams and low beams as appropriate.



Road Sign Assist (RSA)


RSA is designed to recognize specific road signs using the forward-facing camera to provide information to the driver via the display.

* Available only on vehicles with manual transmissions


** Available only on vehicles with continuously variable transmissions

Sensors

TSS 2.0 combines a forward-facing camera mounted in front of the inside rear view mirror and a grille-mounted radar mounted in the front grille. These sensors support the driver assist systems.

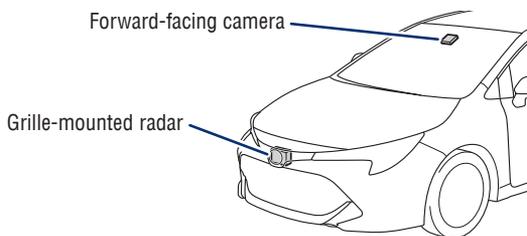

Pre-Collision System with Pedestrian Detection (PCS w/PD)

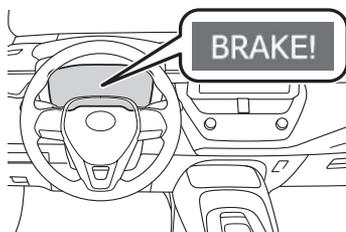

The Pre-Collision System with Pedestrian Detection (PCS w/PD) is designed to help detect a vehicle, a bicyclist, or a pedestrian in certain situations. Using both a camera and radar, PCS w/ PD can provide an audio/visual alert to warn you of a possible collision under certain circumstances. If you don't react, the system is designed to automatically brake.

As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not use PCS instead of normal braking operations under any circumstances. Do not attempt to test the operation of the Pre-Collision System yourself, as the system may not operate or engage, possibly leading to an accident. In some situations, such as when driving in inclement weather such as heavy rain, fog, snow or a sandstorm or while driving on a curve and for a few seconds after driving on a curve, a vehicle or pedestrian or bicyclist may not be detected by the radar and camera sensors, preventing the system from operating or engaging properly.

See www.toyota.com/safety-sense for more information.

Refer to the *Toyota Owner's Manual* for a list of additional situations in which the system operation may be limited.

PRE-COLLISION SYSTEM (CONTINUED)

Pre-Collision Warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the Multi-Information Display (MID) to urge the driver to take evasive action.

Pre-Collision Brake Assist

If the driver notices the hazard and brakes, the system may provide additional braking force using Brake Assist. This system may prime the brakes and may apply greater braking force in relation to how strongly the brake pedal is depressed.


Pre-Collision Braking

If the driver does not brake in a set time and the system determines that the possibility of a frontal collision with a preceding vehicle is extremely high, the system may automatically apply the brakes, reducing speed in order to help the driver reduce the impact and in certain cases avoid the collision.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

PCS PEDESTRIAN DETECTION


Under certain conditions, the PCS system included with the TSS 2.0 package may also help to detect a pedestrian or bicyclist in front of your vehicle using the forward-facing camera and front grille-mounted radar. The forward-facing camera of PCS detects a potential pedestrian or bicyclist based on size, profile, and motion of the detected pedestrian or bicyclist. However, a pedestrian or bicyclist may not be detected depending on the conditions, including the surrounding brightness and the motion, posture, size, and angle of the potential detected pedestrian or bicyclist, preventing the system from operating or engaging.

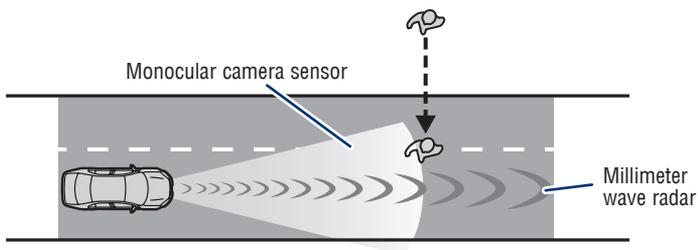

As part of the Pre-Collision System, this function is also designed to first provide an alert and then automatic braking if needed.

Refer to the Toyota Owner's Manual for additional limitations and information.


CHANGING PCS ALERT TIMING

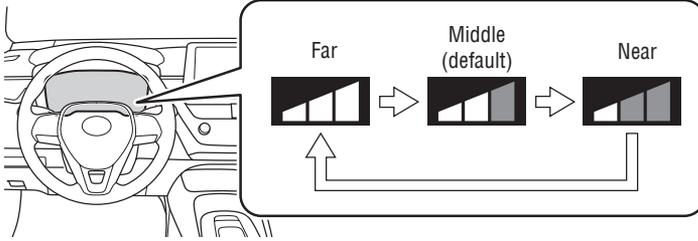

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<” switches and select “ (PCS)” and then press or press and hold “OK.” The setting screen is displayed.
- (3) Press “<” switches and select “Adjust alert timing” and then press or press and hold “OK” to select the desired setting. Each time it is pressed, the response to the PCS warning timing changes as shown above.
- (4) Press “>” to go back to the menu.

Note: PCS is enabled each time the vehicle is turned on. The system can be disabled/enabled and the alert timing of the system can be changed. (Alert timing only, brake operation remains the same.)

DISABLING PRE-COLLISION SYSTEM (PCS)

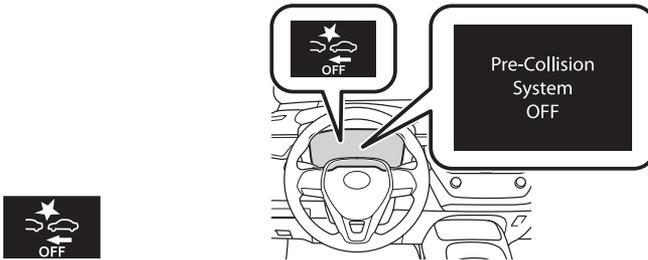


- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “<” switches and select “ (PCS)” and then press or press and hold “OK.” The setting screen is displayed.
- (3) Press “<” switches and select “PCS” and then press or press and hold “OK” to select the desired setting.
- (4) Press “>” to go back to the menu.

Note: The system is enabled each time the vehicle is turned on.

Refer to the Toyota Owner's Manual for additional information on PCS w/PD operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Departure Alert with Steering Assist (LDA w/SA)

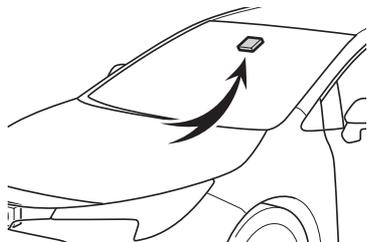


By detecting visible white/yellow lane markings or the road's edge at speeds above 32 mph, Lane Departure Alert with Steering Assist (LDA w/SA) is designed to issue an audio/visual alert if an inadvertent lane departure is detected. If the driver does not take corrective action, the Steering Assist function is designed to provide gentle corrective steering.*

* See www.toyota.com/safety-sense for more information.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LDA SYSTEM ON/OFF

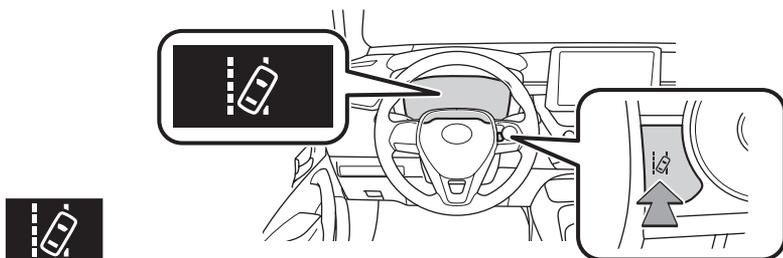


Press the LDA switch to turn the LDA system on. Depress again to turn it off.



Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

LDA function display

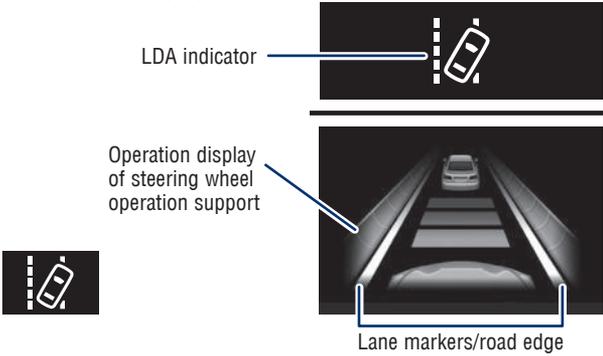

Lane Departure Alert (LDA) indicator flashes orange when operating.

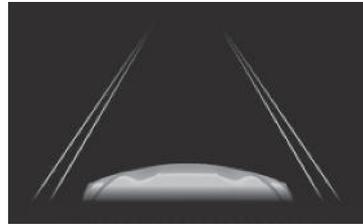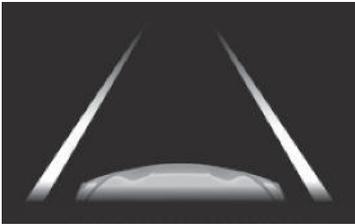

The LDA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LDA indicator when visible lane markers or the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LDA indicator when lane markers or the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LDA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “◀▶” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⬆️” switches and select the “🚗” (LDA) and then press or press and hold “OK”. The setting screen is displayed.
- (3) Press “⬆️” switches and select the “Steering assist function” and then press or press and hold “OK” to select the desired setting.
- (4) Press “⏪” to go back to the menu.

Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

ADJUSTING LDA ALERT SENSITIVITY

The driver can adjust the sensitivity of the LDA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.


Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “◀▶” switches and select “⚙️” from the Multi-Information Display (MID).
- (2) Press “⬆️” switches and select the “🚗” (LDA) and then press or press and hold “OK”. The setting screen is displayed.
- (3) Press “⬆️” switches and select the “Alert sensitivity” and then press or press and hold “OK” to select the desired setting.
- (4) Press “⏪” to go back to the menu.

SWAY WARNING SYSTEM



Continuous lane deviations from swaying.

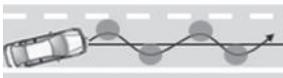

Gentle swaying from driver's inattentiveness.



Acute steering wheel operation after the number of operations decrease due to driver's inattentiveness.

SWS is a function of LDA and is designed to detect swaying based on the vehicle location in the lane and the driver's steering wheel operation. To help prevent swaying, the system alerts the driver using a buzzer sound and a warning display on the MID.

DISABLING LDA SWAY WARNING ALERT

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LDA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Vehicle sway warning function” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.


Note: Operation of the LDA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

ADJUSTING SWAY ALERT SENSITIVITY

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LDA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Vehicle sway warning sensitivity” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.

Refer to the Toyota Owner's Manual for additional information on LDA operation, settings adjustments, limitations, and precautions before attempting to use it.

Lane Tracing Assist (LTA)*

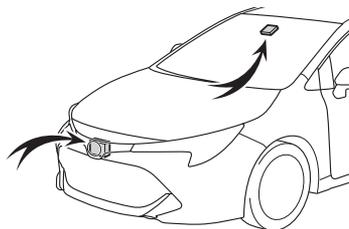


* Available only on vehicles with continuously variable transmissions

When Full-Speed Range Dynamic Radar Cruise Control (DRCC)* is enabled and lane markers are detectable, Lane Tracing Assist (LTA) uses the lines on the road and/or preceding vehicles to help keep the vehicle centered in its lane.

** Not available on all models. See www.toyota.com/safety-sense for model applicability.*

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

TURNING THE LTA SYSTEM ON/OFF

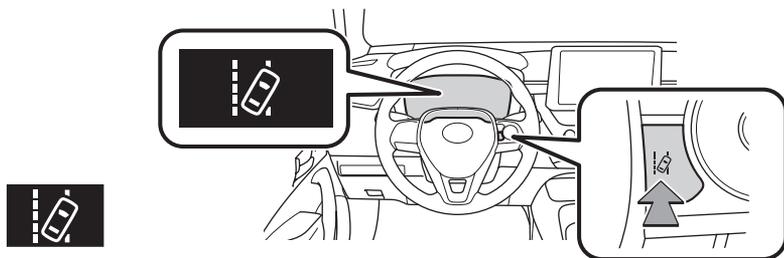


Press the LTA switch to turn the LTA system on. Depress again to turn it off.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings adjustments, limitations, and precautions before attempting to use it.


LTA function display

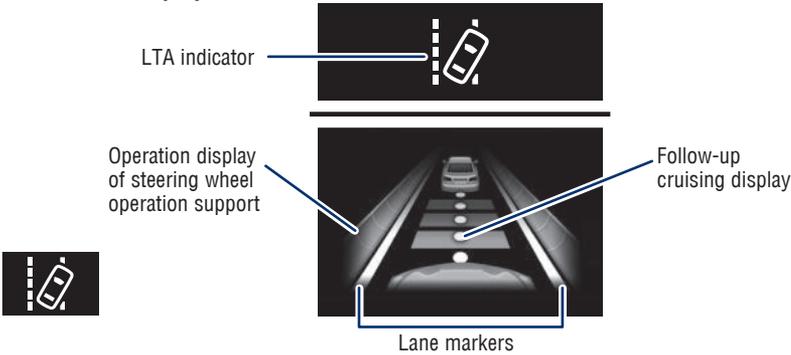

Lane Departure Alert (LDA) indicator flashes orange when operating.



(1)

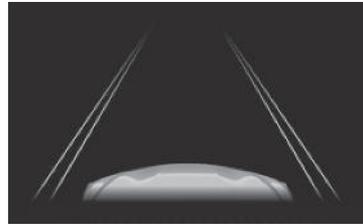

(2)

The LTA function  displays when the Multi-Information Display (MID) is switched to the driving assist system information screen.

- (1) The system displays solid white lines on the LTA indicator when visible lane markers on the road are detected. A side flashes orange to alert the driver when the vehicle deviates from its lane.
- (2) The system displays outlines on the LTA indicator when lane markers on the road are not detected or the function is temporarily canceled.

Note: When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. For example, LTA may not function on the side(s) where white/yellow lines are not detectable.

DISABLING STEERING ASSIST

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LTA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Steering assist function” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

ADJUSTING LTA ALERT SENSITIVITY


The driver can adjust the sensitivity of the LTA (warning) function from the Multi-Information Display (MID) customization screen.

High - Is designed to warn approximately before the front tire crosses the lane marker.

Normal - Is designed to warn approximately when the front tire crosses the lane marker.

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LTA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Alert sensitivity” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.

LANE CENTERING

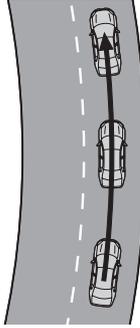

The lane centering function is linked with Full-Speed Range Dynamic Radar Cruise Control (DRCC) and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When Full-Speed Range Dynamic Radar Cruise Control (DRCC) is not operating, the lane centering function does not operate.

DISABLING LANE CENTERING FUNCTION

- (1) Press “<>” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “ (LTA)” and then press or press and hold “.” The setting screen is displayed.
- (3) Press “” switches and select the “Lane centering function” and then press or press and hold “” to select the desired setting.
- (4) Press “” to go back to the menu.

Note: Operation of the LTA system and setting adjustments continues in the same condition regardless of Ignition cycle until changed by the driver or the system is reset.

Refer to the Toyota Owner's Manual for additional information on LTA operation, settings adjustments, limitations, and precautions before attempting to use it.


Dynamic Radar Cruise Control (DRCC)* or Full-Speed Range DRCC**

Intended for highway use, Dynamic Radar Cruise Control (DRCC) lets you drive at a preset speed. DRCC is designed to function at speeds of 25-110 mph and uses vehicle-to-vehicle distance control, helping maintain a preset distance from the vehicle ahead of you.*

Full-Speed Range DRCC is designed to function between 0-110 mph.

* Not available on all models. See www.toyota.com/safety-sense for model applicability.

Refer to the Toyota Owner's Manual for a list of additional situations in which the system operation may be limited.

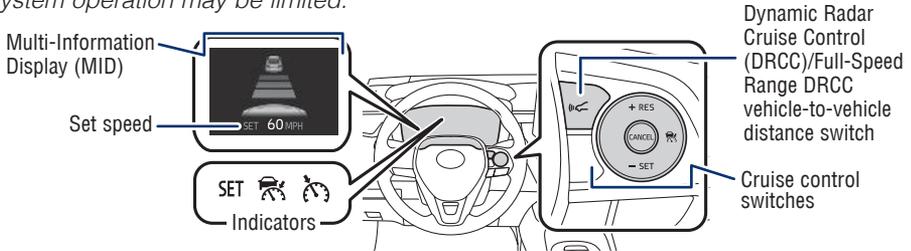

* Available only on vehicles with manual transmissions

** Available only on vehicles with continuously variable transmission

TURNING SYSTEM ON/OFF

(1)




Push once: On
Push twice: Off


Refer to page 40 for switching to Constant Speed (Cruise) Control Mode.

ADJUSTING SET SPEED

(2)

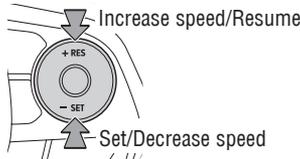


(3)

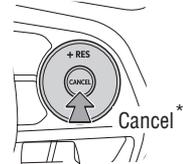

Vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

- (1) Push “” to turn DRCC system ON. The “Radar Ready” and “” indicator will come on the Multi-Information Display (MID).
- (2) Use the steering wheel controls to increase speed by pushing “+RES” or decrease the speed by pushing “-SET.” Push and hold to make a large adjustment or push each time to make fine adjustments (1 mph [1.6 km/h] or 1 km/h [0.6 mph] increments.)
- (3) Push “Cancel” to cancel the speed control.

* The speed control may also be canceled by depressing the brake pedal.

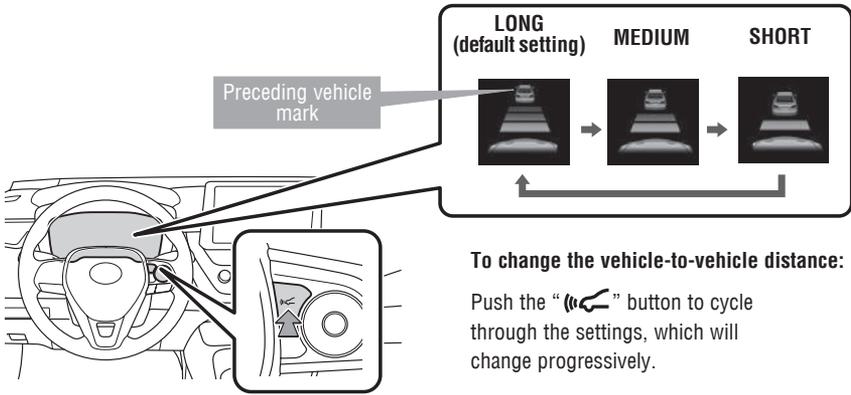


To change the vehicle-to-vehicle distance:

Push the “” button to cycle through the settings, which will change progressively.

This mode employs a radar sensor to detect the presence of a preceding vehicle up to approximately 328 ft (100 m) ahead, determines the current vehicle-to-vehicle following distance and operates to maintain a preset following distance from the vehicle ahead. These distances vary based on the vehicle speed.

Note: Vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

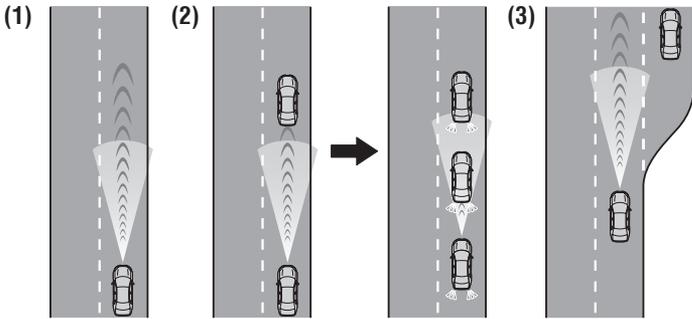

(1) Constant speed cruising when there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control switch.

(2) Deceleration cruising and follow-up cruising when a preceding vehicle driving slower than the set speed appears

When a slower vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system may apply the brakes (the brake lights will come on at this time.) The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.


ADJUSTING DISTANCE (CONTINUED)

(3) Acceleration when there are no longer any preceding vehicles driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Note: When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.


SWITCHING TO CONSTANT SPEED (CRUISE) CONTROL MODE

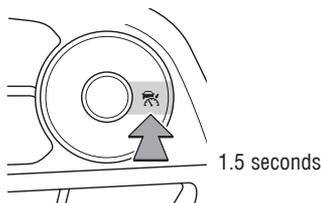

If you are already using DRCC “”, push “” to turn the system off first, then push and hold the switch for at least 1.5 seconds to switch.

Note: When the engine is turned off, it will automatically default to DRCC.


SETTING CONSTANT SPEED (CRUISE) CONTROL

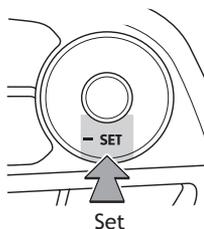

To adjust speed or cancel, see steps (2) and (3) of ADJUSTING SET SPEED on page 38.

Refer to the Toyota Owner's Manual for additional information on DRCC operation, settings adjustments, limitations, and precautions before attempting to use it.

Automatic High Beams (AHB)

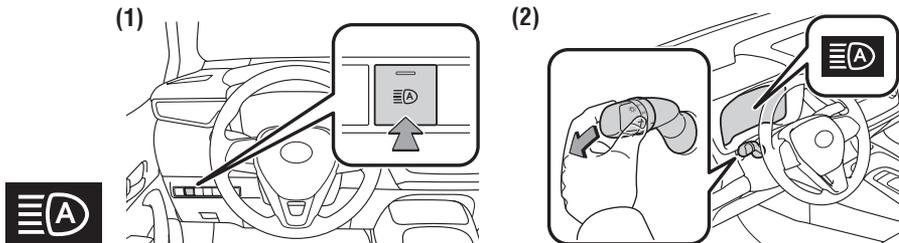

The Automatic High Beams (AHB) safety system is designed to help you see more clearly at night. At speeds above 25 mph, AHB can detect the headlights of oncoming vehicles and taillights of preceding vehicles, then automatically toggles between high and low beams accordingly.

See www.toyota.com/safety-sense for more information.

Refer to the *Toyota Owner's Manual* for additional information on AHB operation, settings adjustments, limitations, and precautions before attempting to use it.

ACTIVATING THE AHB SYSTEM

- (1) Press the “” switch.
- (2) Push the lever away from you with the headlight switch is in the “” or “AUTO” position.

The AHB indicator will come on when the headlights are turned on automatically to indicate that the system is active.

Note: Pull the lever back toward you or press the AHB switch to turn the AHB system off.

The AHB indicator will turn off and “” or “” will turn on. To activate the system again, push the lever away from you or press the “” switch.

CONDITIONS WHERE AHB WILL TURN ON/OFF AUTOMATICALLY

When all of the following conditions are met, the high beams will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 21 mph (34 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- There are few streetlights on the road ahead.

If any of the following conditions occur, the high beams will be automatically turned off:


- Vehicle speed drops below approximately 17 mph (27 km/h).
- The area ahead of the vehicle is not dark.
- Oncoming or preceding vehicles have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

Road Sign Assist (RSA)


Using an intelligent camera, Road Sign Assist (RSA) is designed to detect speed limit signs, stop signs, do not enter signs and yield signs, and display them on the Multi-Information Display (MID).*

* All vehicle actions must be driver-initiated and are not automated.
See www.toyota.com/safety-sense for model applicability.

RSA DISPLAY

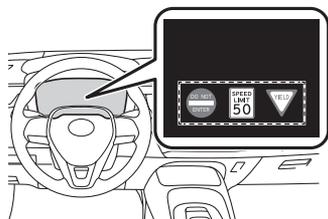

When the driving support system information is selected, a maximum of 3 signs can be displayed.

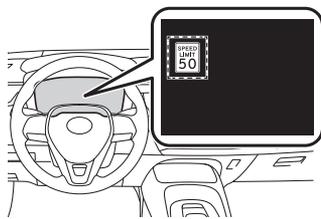

When a tab other than the driving support system information is selected, the following types of road signs will be displayed.

- Speed limit sign
- Do Not Enter sign (when notification is necessary)

SUPPORTED TYPES OF ROAD SIGNS



Speed limit



Stop



Do Not Enter



Yield


SETTING RSA

- (1) Press “<>” switches and select  from the Multi-Information Display (MID).
- (2) Press “<>” switches and select the  and then press “OK”.
- (3) Press “OK” each time to change the setting.
- (4) Press “>” to go back to the menu.

Note: If the vehicle was last turned off while a speed limit sign was displayed on the Multi-Information Display (MID), the same sign displays again when the vehicle is turned on.


Refer to the Toyota Owner’s Manual for additional information on RSA operation, settings adjustments, limitations, and precautions before attempting to use it.

Rear door child safety locks

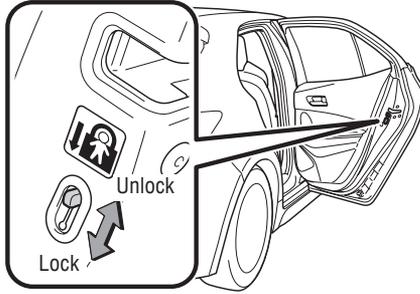


Moving the lever downward will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

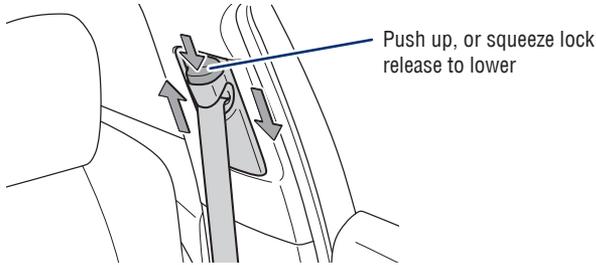


Seat belts

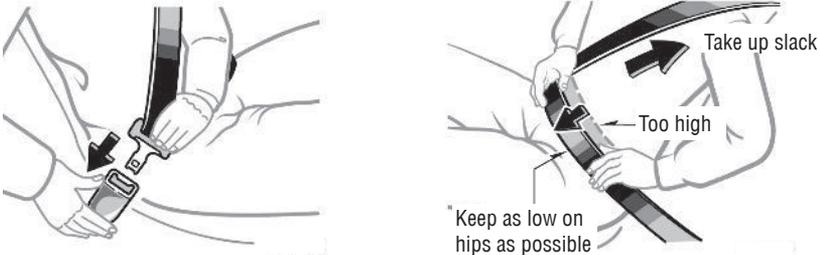

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Tire Pressure Monitoring (warning) System (TPMS)

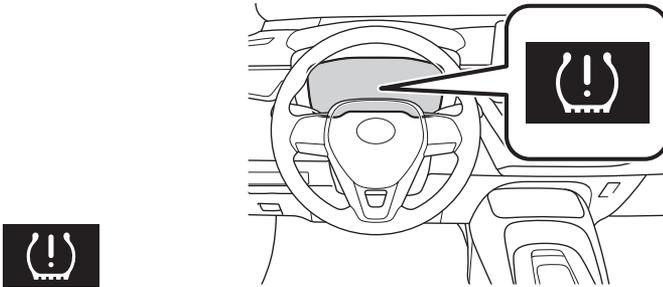

The tire pressure warning system can be selected on “” of the Multi-Information Display (MID).

System reset initialization


- (1) Press “” switches and select “” from the Multi-Information Display (MID).
- (2) Press “” switches and select the “Vehicle Settings,” then press and hold “.
- (3) Press “” switches and select “TPWS” and then press “.
- (4) Press “” switches and select “Set Pressure” then press and hold “” until the warning light blinks three times.

The tire pressure detected by the tire pressure warning system can be displayed on the Multi-Information Display (MID).

If the tire pressure indicator flashes for approximately 1 minute and then remains on, take the vehicle to your local Toyota dealer.

Refer to the load label on the door jamb or the Owner's Manual for tire inflation specifications.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

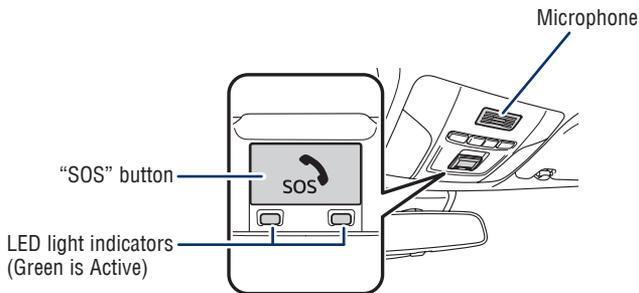

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is staffed with live agents at the Toyota response center, which operates 24 hours per day, 7 days per week.

Services for subscribers include:


- Automatic collision notification
- Stolen vehicle locator
- Emergency assistance ("SOS" button)
- Enhanced roadside assistance

For limitations and additional information, refer to the "Owner's Manual" or visit www.toyota.com/connected-services.

SAFETY & EMERGENCY FEATURES

Spare tire & tools


TOOL LOCATION

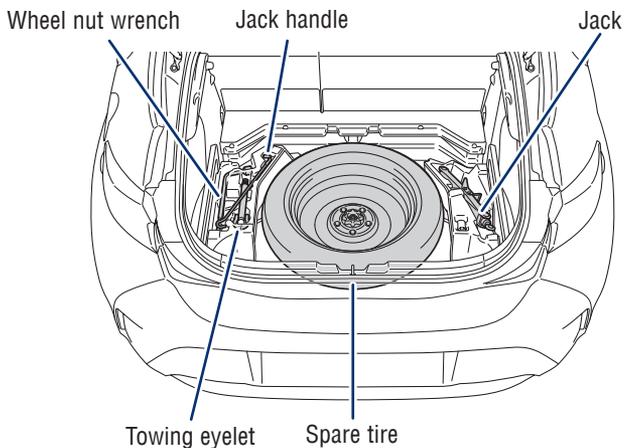


REMOVING THE SPARE TIRE

- (1)** Remove the deck board.


(When the luggage cover is installed)

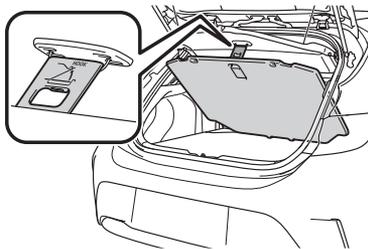

(When the luggage cover is not installed)

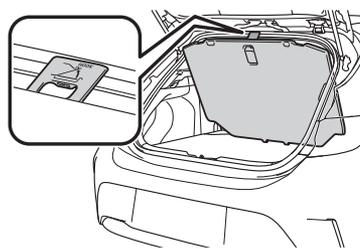

- (2)** Loosen the center fastener that secures the spare tire.

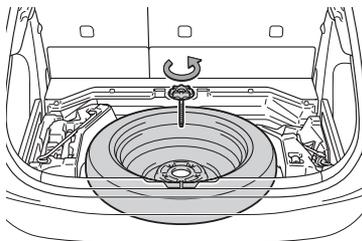


Refer to the Owner's Manual for jack positioning and tire changing procedures.

Tire repair kit & tools


TOOL LOCATION

Jack and tools

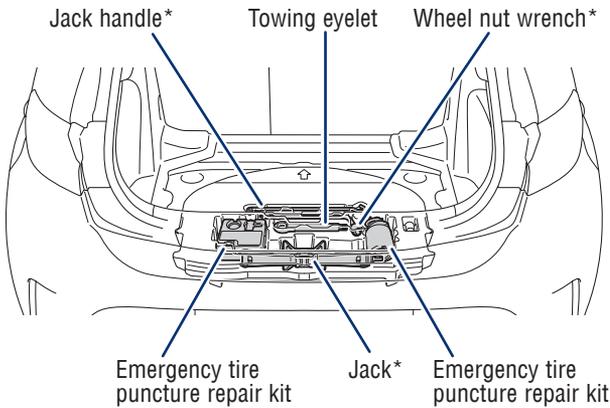

*If equipped.

Tire repair kit components

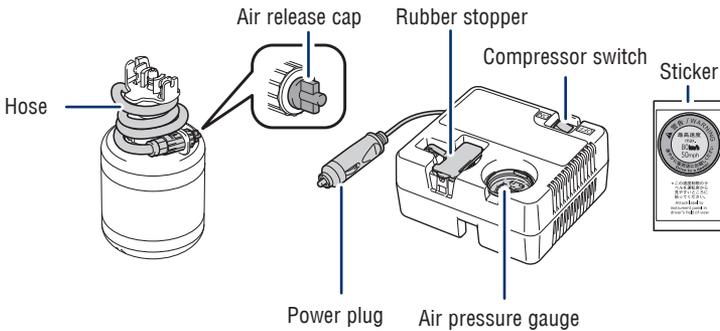

Refer to the Owner's Manual for jack positioning and tire changing procedures.

SAFETY & EMERGENCY FEATURES

Star Safety System™

Your vehicle comes standard with the Star Safety System™, which combines Anti-lock Braking System (ABS), Brake Assist (BA), Electronic Brake-force Distribution (EBD), Smart Stop Technology (SST), Traction Control (TRAC) and Vehicle Stability Control (VSC).

Refer to the Owner's Manual for more details and important information on limitations to these systems.

ANTI-LOCK BRAKE SYSTEM (ABS)

Toyota's Anti-lock Brake System detects which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

BRAKE ASSIST (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

SMART STOP TECHNOLOGY (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

ENHANCED VEHICLE STABILITY CONTROL (VSC)

Enhanced Vehicle Stability Control provides cooperative control of the ABS, TRAC, VSC and EPS.

Enhanced VSC helps to maintain directional stability when loss of traction occurs during a turn.

TRACTION CONTROL (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).


Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use Toyota floor mats designed for your specific model.
- Only use one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

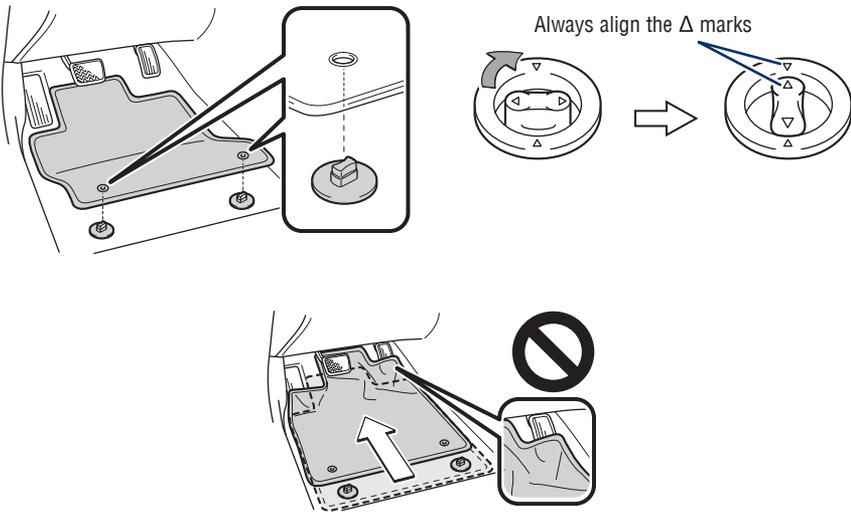

BLUETOOTH® DEVICE PAIRING SECTION

Do not attempt the Bluetooth® Pairing process while driving.

To begin the Bluetooth® Pairing process, press the HOME button.

Bluetooth® Pairing for your phone

Pairing your phone is the first step in connecting with your Toyota. This pairing process is quick and easy. All you have to do is setup the phone and multimedia system to form a connection.




Audio / Audio Plus / Premium Audio


STEP 1 Press [MENU], then select "Setup" on display screen.



iPhone bluetooth Menu

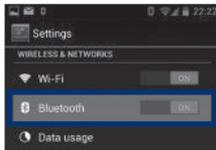


Android bluetooth Menu¹

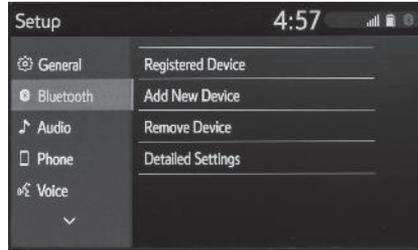


STEP 2 Ensure Bluetooth is turned on for your phone.

STEP 3 Select "Bluetooth," then select "Add New Device" on display screen.

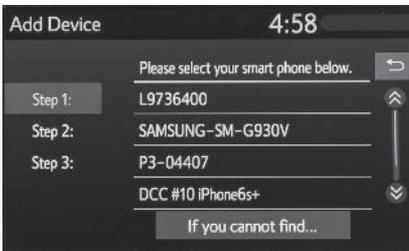


STEP 4 Select "Phone Name."

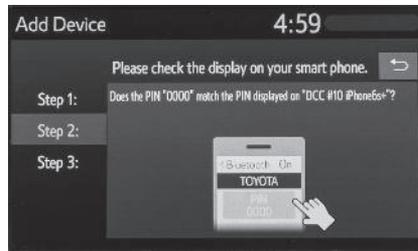

STEP 5 Check the display on your phone. Does the PIN XXXX match the PIN displayed? If it does, select "Pair."

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Bluetooth® Pairing for your phone (Cont.)

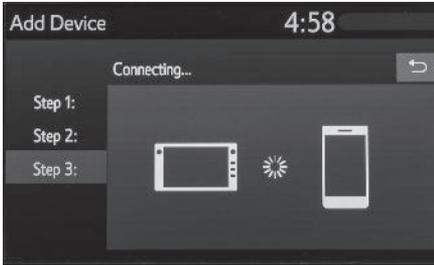


STEP 6 "Connecting" displays while phone is forming the connection to the multimedia system.



STEP 7 Enable Notifications (text message). While pairing your phone, a message will be displayed: **"You may need to allow message access on your phone."**

Note: You may also select "Skip" on display screen to skip enabling notifications. If skipped, proceed to **Step 8**.

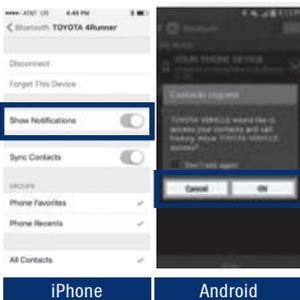

STEP 8 Turn on "Show Notifications" for iPhone or "ON" for Android.



STEP 9 A confirmation will appear once your phone has been paired and connected.



**COROLLA
HATCHBACK**

Quick Reference Guide 2022



00505QRG22CORHB



Printed in U.S.A. 6/21
21-MKG-15665

toyota.com

