



2009

LS 600h L

OWNER'S MANUAL



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:
Lexus Roadside Assistance
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)
- In Hawaii:
Servco Automotive Roadside Assistance/Customer Services
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:
Lexus Roadside Assistance/Customer Service
1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada : www.lexus.ca

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

TABLE OF CONTENTS

1	Before driving	Information on the hybrid system and adjusting and operating features such as door locks, mirrors, and steering column
2	When driving	Driving, stopping and safe-driving information
3	Interior features	Air conditioning and audio systems, as well as other interior features for a comfortable driving experience
4	Maintenance and care	Cleaning and protecting your vehicle, performing do-it-yourself maintenance, and maintenance information
5	When trouble arises	What to do if the vehicle needs to be towed, gets a flat tire, or is involved in an accident
6	Vehicle specifications	Detailed vehicle information
7	For owners	Reporting safety defects for U.S. owners and seat belt instructions for Canadian owners
	Index	Alphabetical listing of information contained in this manual

1 Before driving

1-1. Hybrid system	
Hybrid system.....	30
1-2. Key information	
Keys	41
1-3. Opening, closing and locking the doors and trunk	
Smart access system with push-button start	45
Wireless remote control.....	59
Doors.....	62
Trunk.....	67
1-4. Adjustable components (seats, mirrors, steering wheel)	
Front seats.....	74
Power rear seat (5-seat models).....	77
Power rear seat (4-seat models).....	80
Driving position memory	84
Seat position memory	88
Rear seat position memory.....	90
Head restraints.....	92
Seat belts	94
Steering wheel.....	101
Anti-glare inside rear view mirror.....	103
Outside rear view mirrors.....	104
1-5. Opening and closing the windows and moon roof	
Power windows.....	106
Moon roof	109
1-6. Refueling	
Opening the fuel tank cap.....	112
1-7. Theft deterrent system	
Immobilizer system	117
Alarm.....	119
Theft prevention labels (U.S.A.).....	121
1-8. Safety information	
Correct driving posture	122
SRS airbags	124
Front passenger occupant classification system.....	138
Child restraint systems	143
Installing child restraints.....	148

2 When driving

2-1. Driving procedures

Driving the vehicle.....	160
Power (ignition) switch.....	169
EV drive mode.....	173
Transmission.....	175
Turn signal lever.....	179
Parking brake.....	180
Brake Hold.....	182
Horn.....	184

2-2. Instrument cluster

Gauges and meters.....	185
Indicators and warning lights ...	188
Multi-information display.....	191

2-3. Operating the lights and windshield wipers

Headlight switch.....	195
Fog light switch.....	198
Windshield wipers and washer.....	199
Headlight cleaner switch.....	202

2-4. Using other driving systems

Cruise control.....	203
Dynamic radar cruise control.....	206
Intuitive parking assist.....	217

Electronically modulated air suspension.....	226
Rear view monitor system.....	228
Driving assist systems.....	231
Pre-Collision System.....	238
Pre-Collision System (with camera sensor).....	242

2-5. Driving information

Cargo and luggage.....	251
Vehicle load limits.....	254
Winter driving tips.....	256
Trailer towing.....	260
Dinghy towing.....	261

3 Interior features

3-1. Using the touch screen

Touch screen.....	264
Setting the touch screen.....	267

3-2. Using the air conditioning system and defogger

Front air conditioning system (without rear air conditioning system).....	272
Front air conditioning system (with rear air conditioning system).....	280
Rear air conditioning system.....	290

Rear window and outside rear
view mirror defoggers 298
Windshield wiper de-icer 299

3-3. Using the audio system

Audio system 301
Using the radio 304
Using the DVD player 309
Playing an audio CD 312
Playing MP3 and
WMA discs 316
Playing DVD video/audio 320
Playing a video CD 333
DVD player and DVD video
disc information 337
Optimal use of the audio/
video system 347
Using the AUX adapter 351
Using the rear seat audio
controls 352
Using the steering wheel
audio switches 356

3-4. Using the rear seat

entertainment system

Rear seat entertainment
system features 358
Using the radio 367

Using the front DVD player 368
Using the rear DVD player 369
Playing an audio
CD/CD text 371
Playing WMA (front DVD
player only)/MP3 discs 372
Playing the HDD audio 373
Playing DVD video/audio 374
Playing a video CD 387
DVD player and DVD video
disc information 391
Using the video mode 393
Changing other settings 395

**3-5. Using the hands-free system
(for cellular phone)**

Hands-free system
(for cellular phone) 397
Using a Bluetooth® phone 402
Setting the hands-free
system 414

3-6. Using the interior lights

Interior lights list 440
• Interior lights 442
• Personal lights 442

3-7. Using the storage features

List of storage features.....	444
• Glove box	446
• Coin holder.....	447
• Door pockets.....	447
• Cup holders.....	448
• Console box.....	449
• Cool box/auxiliary box.....	451
• Auxiliary boxes.....	455

3-8. Other interior features

Sun visors.....	457
Vanity mirrors.....	458
Clock.....	459
Outside temperature display	461
Ashtrays	462
Cigarette lighters	463
Power outlets.....	465
Heated steering wheel.....	467
Climate control seats/ seat heaters	469
Armrest	473
Rear seat relaxation system.....	474
Retractable table	476
Rear sunshade.....	478
Rear door sunshades.....	481
Coat hooks	484
Floor mat.....	485
Trunk features.....	486
Garage door opener	489
Lexus Link System	495

4 Maintenance and care

4-1. Maintenance and care

Cleaning and protecting the vehicle exterior	508
Cleaning and protecting the vehicle interior.....	511

4-2. Maintenance

Maintenance requirements	514
General maintenance.....	516
Emission inspection and maintenance (I/M) programs	519

4-3. Do-it-yourself maintenance

Do-it-yourself service precautions.....	520
Hood	523
Positioning a floor jack.....	524
Engine compartment.....	526
12-volt battery.....	538
Tires	542
Tire inflation pressure.....	550
Wheels	554
Air conditioning filter.....	556
Electronic key battery	559
Checking and replacing fuses.....	561
Headlight aim	581
Light bulbs.....	584

5 When trouble arises

5-1. Essential information

Emergency flashers..... 598
 If your vehicle needs to be
 towed..... 599
 If you think something is
 wrong 605
 Event data recorder 606

5-2. Steps to take in an emergency

If a warning light turns on
 or a warning buzzer
 sounds... 608
 If a warning message is
 displayed..... 617
 If you have a flat tire..... 620
 If the hybrid system will
 not start..... 628
 If the shift lever cannot be
 shifted from “P” 630
 If the parking brake cannot
 be released 631
 If you lose your keys 633
 If the electronic key does
 not operate properly 634
 If the vehicle 12-volt battery
 is discharged 637
 If your vehicle overheats 640
 If the vehicle becomes
 stuck..... 644

6 Vehicle specifications

6-1. Specifications

Maintenance data
 (fuel, oil level, etc.)..... 646
 Fuel information..... 658
 Tire information..... 661

6-2. Customization

Customizable features..... 672

6-3. Initialization

Items to initialize 677

7 For owners

Reporting safety defects
 for U.S. owners..... 680
 Seat belt instructions
 for Canadian owners
 (in French) 681

Index

Abbreviation list..... 684
 Alphabetical index686
 What to do if... 698

1

2

3


4

5

6

7



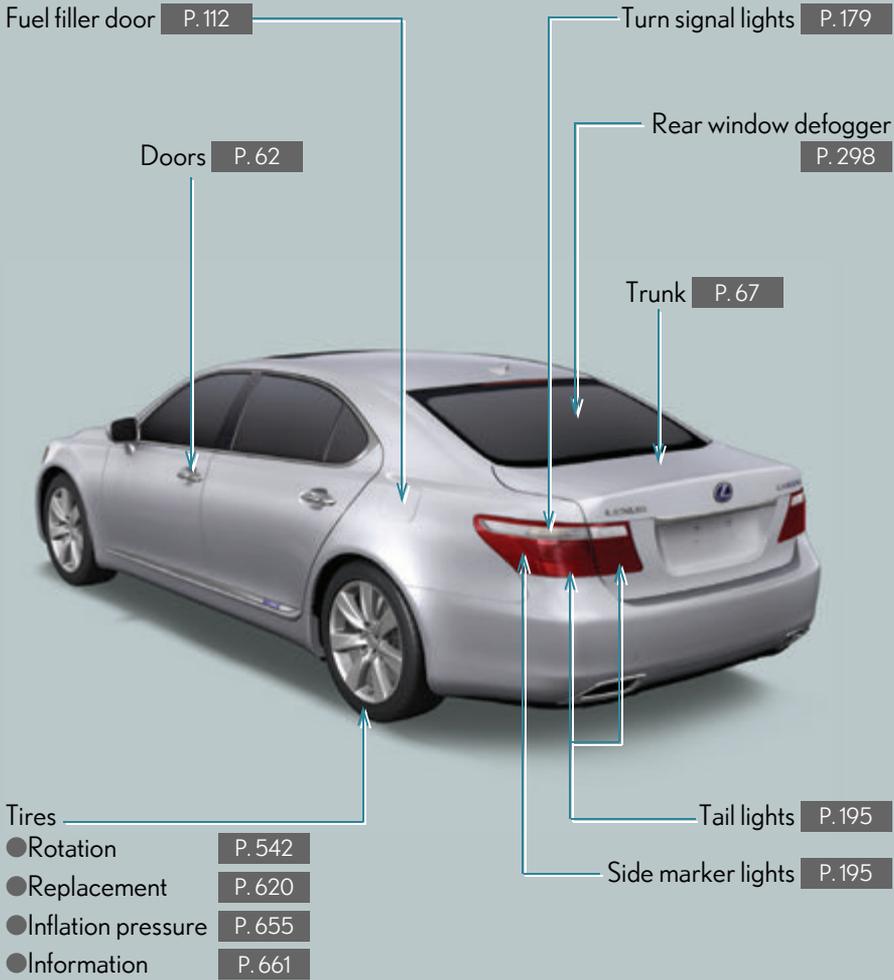

Pictorial index

Front interior

Seat belts P. 94

Head restraints P. 92


Door pockets P. 447

A

SRS driver airbag P. 124

SRS knee airbags P. 124

SRS front passenger airbag P. 124

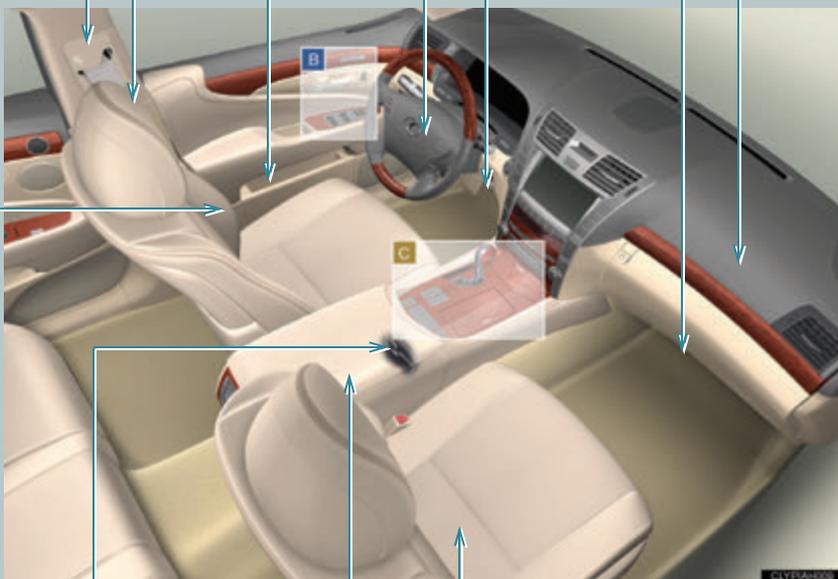

Power outlet P. 465

AUX adapter P. 351

A/V input adapter * P. 393

SRS side airbags P. 124

Front seats P. 74

Console box P. 449

A

Anti-glare inside rear view mirror P. 103


Interior lights P. 442

Personal lights P. 442

Moon roof switches P. 109

Garage door opener switches P. 489

Lexus link system * P. 495

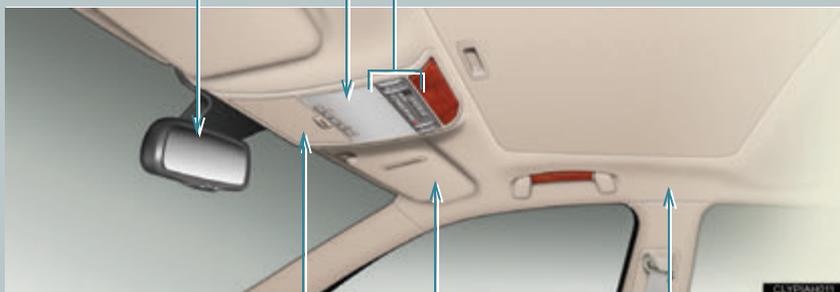

SRS curtain shield airbags P. 124


Sun visors P. 457

Vanity mirrors P. 458


Auxiliary boxes P. 455

*: If equipped

B

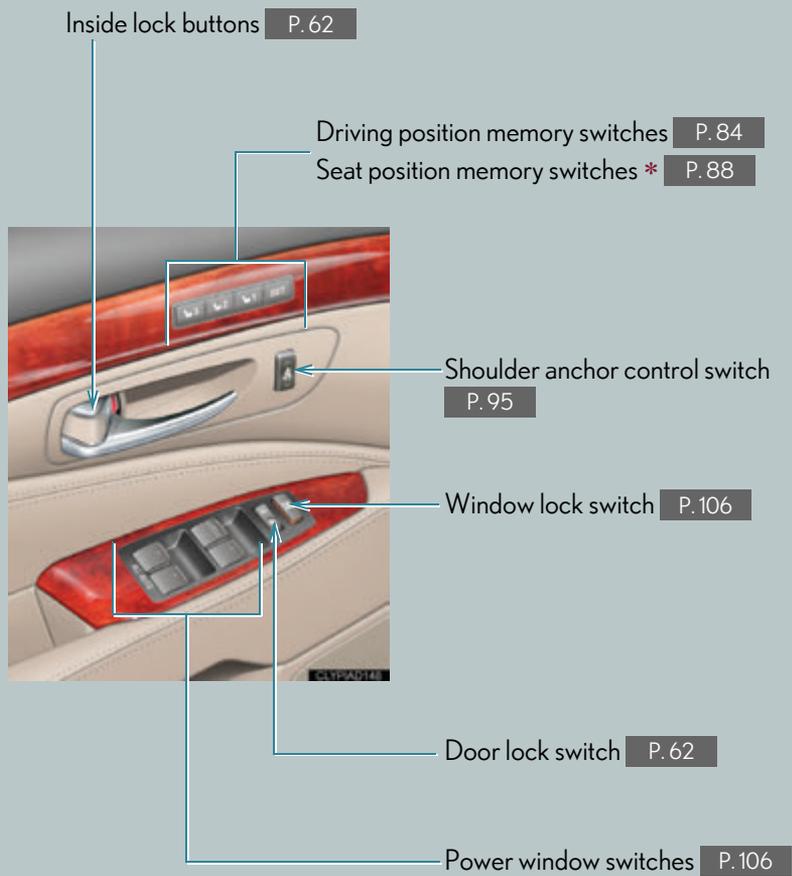

C

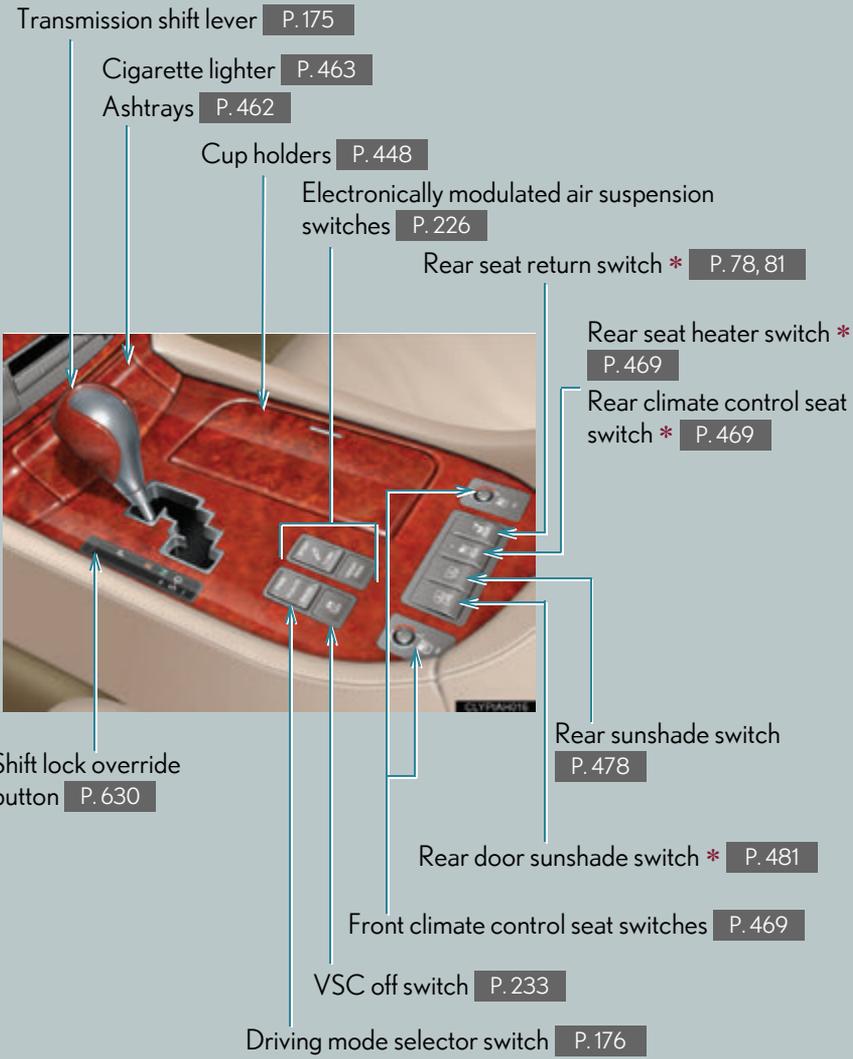

*: If equipped

Pictorial index

Instrument panel


Headlight switch P. 195
Turn signal lever P. 179
Fog light switch P. 198

Horn P. 184

Gauges and meters P. 185
Multi-information display P. 191

Windshield wiper and washer switch P. 199

Power (ignition) switch P. 169

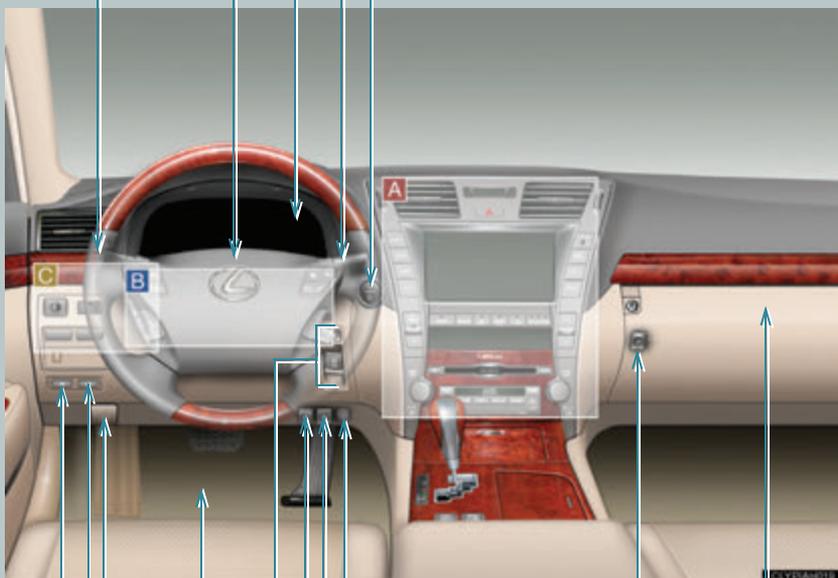

Floor mat P. 485

Trunk opener main switch P. 68

Glove box P. 446

Volume adjustment knob P. 49

Tire pressure warning reset switch P. 542

Pre-collision brake off switch * P. 242

Parking brake switches P. 180

Trunk opener P. 67

Fuel filler door opener P. 112

Hood release lever P. 523

A

► Without navigation system

Clock P. 459

Touch screen
P. 264

Audio system
P. 301



Emergency flasher
switch P. 598

Air conditioning
system P. 272, 280

Rear window and
outside rear view
mirror defoggers
P. 298

► With navigation system

Clock *1

Touch screen *1
Navigation
system *1

Audio system *1



Emergency flasher
switch P. 598


Air conditioning
system P. 272, 280

Rear window and
outside rear view
mirror defoggers
P. 298


*: If equipped

*1: Refer to "Navigation System Owner's Manual".

B

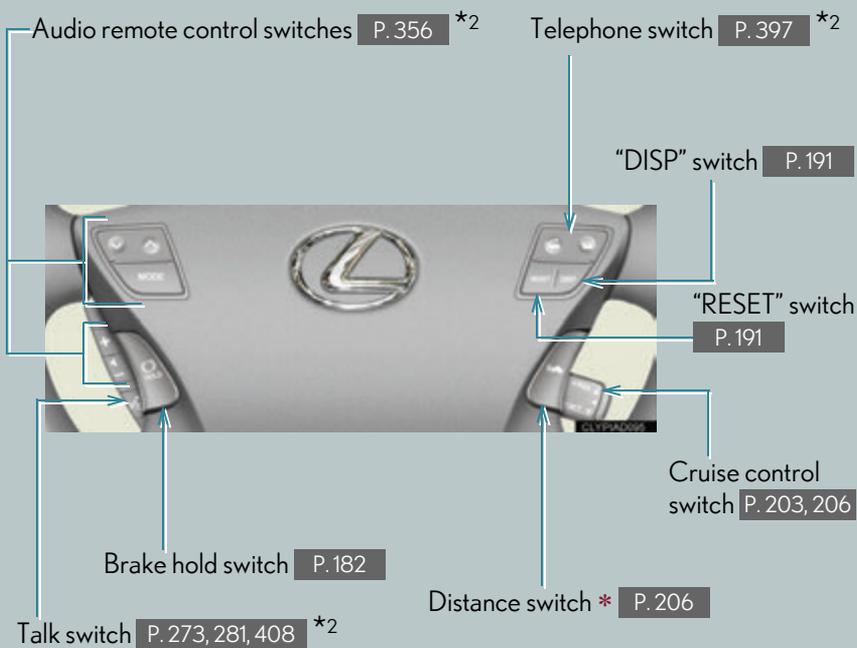

C

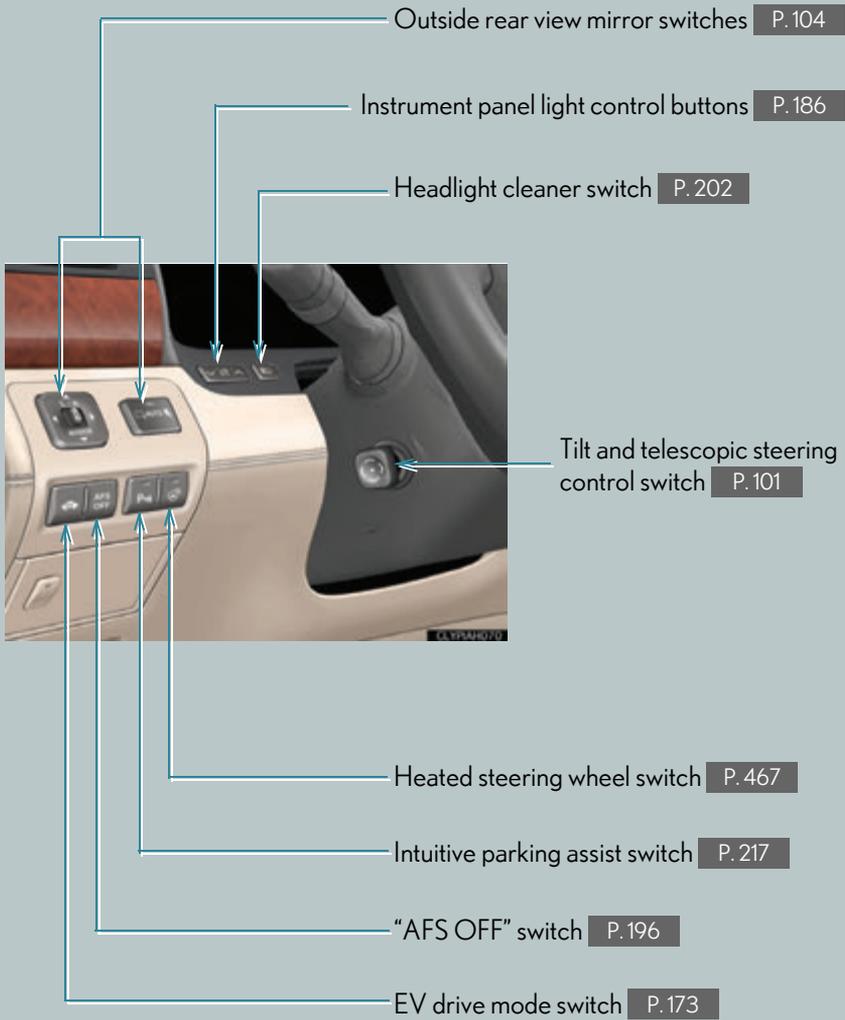

*: If equipped

*2: For vehicles with a navigation system, refer to "Navigation System Owner's Manual".


Pictorial index

Rear interior (5-seat models)

Auxiliary boxes P. 455

Cool box/auxiliary box *
P. 451


Head restraints P. 92

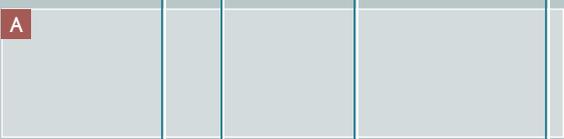

Seat position memory switches * P. 90

Power window switches P. 106

SRS side airbags *
P. 124

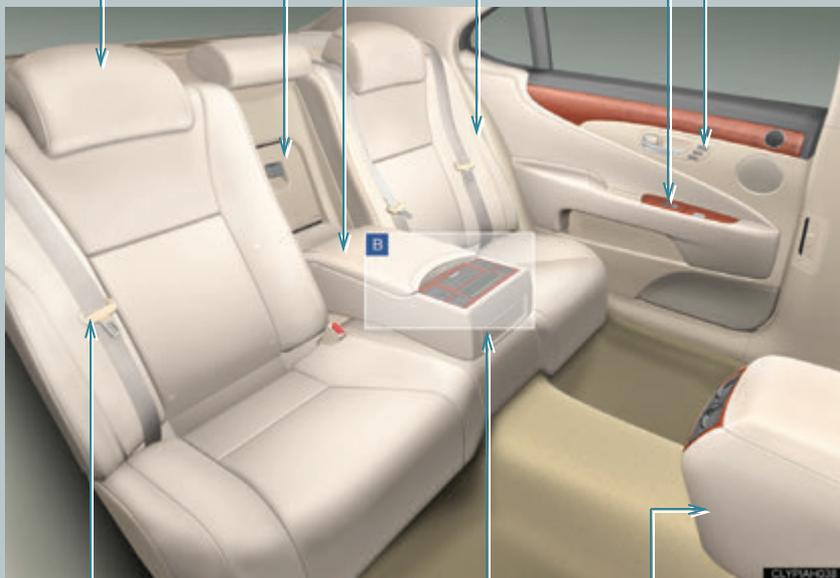

Seat belts P. 94

Cup holders P. 448


Cigarette lighters P. 463

A

Interior lights P. 442

Personal lights P. 442

Rear seat entertainment system * P. 358

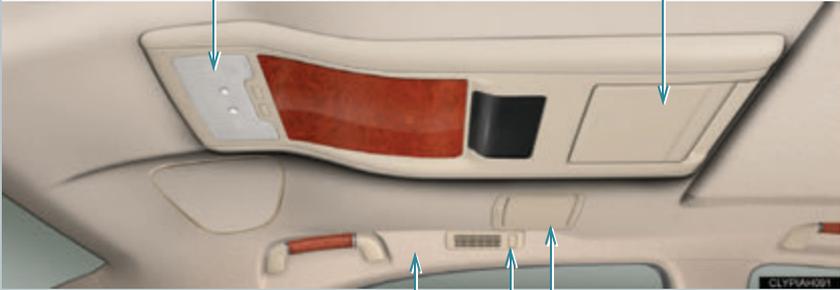

SRS curtain shield airbags P. 124

Vanity mirrors P. 458

Coat hooks P. 484


B

Power seat switches * P. 77

Seat heater switches * P. 469

Rear climate control seat switches * P. 469

Rear door sunshade switches * P. 481

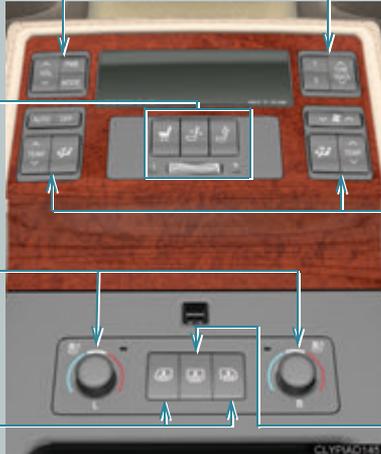

Rear audio switches * P. 352

Rear air conditioning switches * P. 290

Rear sunshade switch P. 478

*: If equipped

Pictorial index

Rear interior (4-seat models)

DVD player P. 369

Headphone jacks P. 362


Seat position memory switches P. 90

Power window switches P. 106

Head restraints P. 92

SRS side airbags P. 124

A

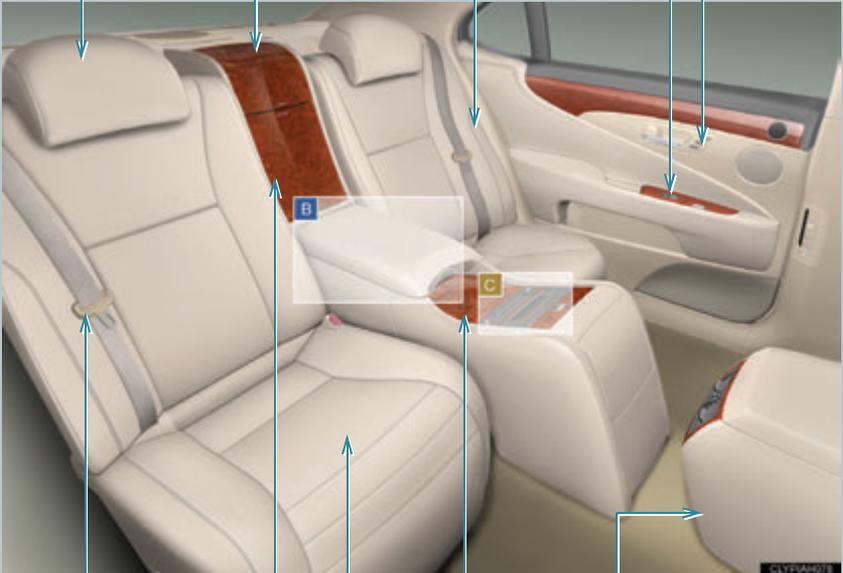

Seat belts P. 94

Power outlet (115 VAC) * P. 465

Cup holders P. 448

SRS seat cushion airbag P. 124


Auxiliary boxes P. 455

A

Interior lights P. 442

Personal lights P. 442

Rear seat entertainment system P. 358

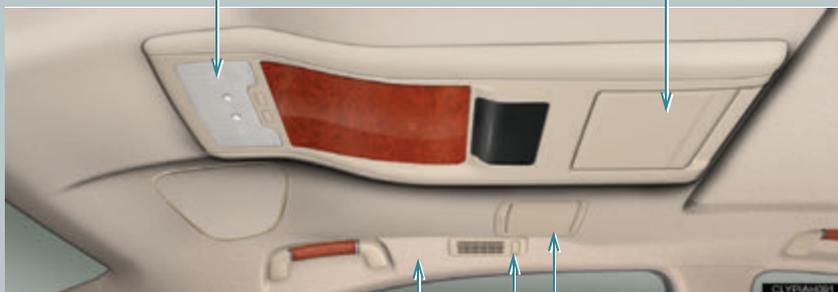

SRS curtain shield
airbags P. 124

Vanity mirrors P. 458

Coat hooks P. 484

*: If equipped

B

A/V input adapter **P. 393**

Cigarette lighters * **P. 463**

Power outlet * **P. 465**



Rear seat entertainment system controller **P. 358**

Rear seat relaxation system controller **P. 474**

Cool box/auxiliary box **P. 451**

C

Retractable table lock release lever P. 476

Rear sunshade switch P. 478

Rear door sunshade switches P. 481

Rear air conditioning switches P. 290

Rear air conditioning switches P. 290



Rear audio switches P. 352

Rear climate control seat switches P. 469

Power seat switches P. 80

*: If equipped

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Noise from under vehicle after turning off the engine

Approximately five hours after the engine is turned off, you may hear sound coming from under the vehicle for several minutes. This is the sound of a fuel evaporation leakage check and, it does not indicate a malfunction.

Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Lexus vehicle.

This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Installation of a mobile two-way radio system

As the installation of a mobile two-way radio system in your vehicle could affect electronic systems such as the multiport fuel injection system/sequential multiport fuel injection system, cruise control system, anti-lock brake system, SRS airbag system and seat belt pretensioner system, be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation.

High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

Perchlorate Material

Special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Your vehicle has components that may contain perchlorate. These components may include airbag, seat belt pretensioners, and wireless remote control batteries.

 **CAUTION**

■ **General precautions while driving**

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ **General precaution regarding children's safety**

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the cigarette lighter, the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

■ **Dispose of the hybrid battery (traction battery)**

If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event of that your vehicle must be disposed of, the hybrid battery must be disposed of your Lexus dealer or a qualified service shop. If the hybrid battery is not disposed of properly, they may cause electric shock that can result in death or serious injury.

Symbols used throughout this manual

Cautions & Notices

CAUTION

This is a warning against something which, if ignored, may cause injury to people. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

NOTICE

This is a warning against something which, if ignored, may cause damage to the vehicle or its equipment. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your Lexus and its equipment.

Symbols used in illustrations



Safety symbol

The symbol of a circle with a slash through it means “Do not”, “Do not do this”, or “Do not let this happen.”



Arrows indicating operations

 Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

 Indicates the outcome of an operation (e.g. a lid opens).


1-1. Hybrid system	
Hybrid system	30
1-2. Key information	
Keys	41
1-3. Opening, closing and locking the doors and trunk	
Smart access system with push-button start	45
Wireless remote control	59
Doors	62
Trunk	67
1-4. Adjustable components (seats, mirrors, steering wheel)	
Front seats	74
Power rear seat (5-seat models)	77
Power rear seat (4-seat models)	80
Driving position memory	84
Seat position memory	88
Rear seat position memory	90
Head restraints	92
Seat belts	94
Steering wheel	101
Anti-glare inside rear view mirror	103
Outside rear view mirrors	104
1-5. Opening and closing the windows and moon roof	
Power windows	106
Moon roof	109
1-6. Refueling	
Opening the fuel tank cap	112
1-7. Theft deterrent system	
Immobilizer system	117
Alarm	119
Theft prevention labels (U.S.A.)	121
1-8. Safety information	
Correct driving posture	122
SRS airbags	124
Front passenger occupant classification system	138
Child restraint systems	143
Installing child restraints	148

1-1. Hybrid system

Hybrid system

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

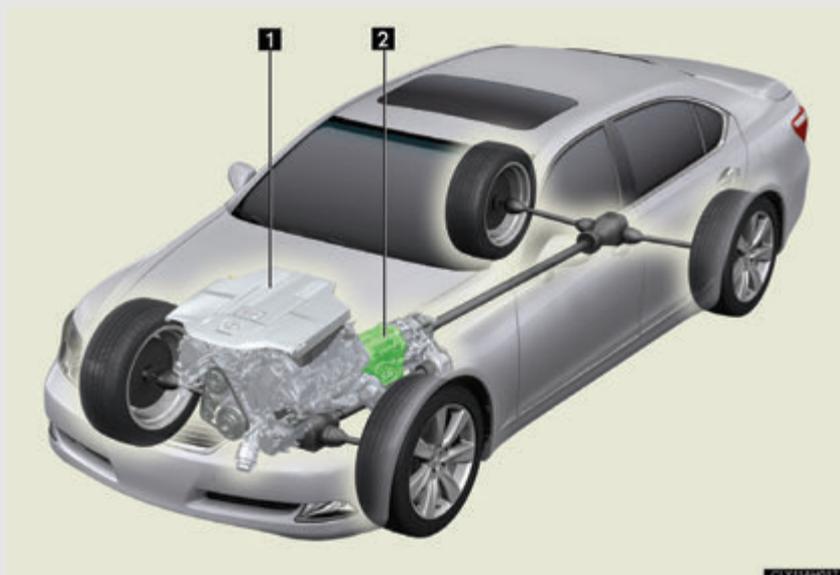

- 1 Gasoline engine
- 2 Electric motor (Traction motor)
- **When stopped/during take-off**

The gasoline engine stops when the vehicle is stopped. During take-off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped and the motor is used.

■ During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery as necessary.

■ When accelerating sharply

The power of the hybrid battery (traction battery) is added via electric motor (traction motor) to that of the gasoline engine.

■ When braking (Regenerative braking)

The electric motor (traction motor) charges the hybrid battery (traction battery).

■ Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released.
- The brake pedal is depressed with the shift lever in “D”, “S” or “R”.

■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- The gasoline engine is warming up.
- The hybrid battery (traction battery) is being charged.
- The hybrid battery (traction battery) temperature is low or high.

■ Charging the battery

- As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 10 miles (16 km). If the hybrid battery becomes fully discharged and you are unable to jump-start the vehicle with the 12-volt battery, contact your Lexus dealer.
- If the shift lever is in “N”, the hybrid battery (traction battery) will not be charged. When driving in heavy traffic, operate the vehicle with the shift lever in “D” or “S” to avoid discharging the battery.

- To help prevent the 12-volt battery from becoming discharged, drive the vehicle at least once a month, and operate the accessories only when the “READY” indicator is on. When parking the vehicle, make sure the doors and trunk are closed and all lights are turned off.

■ After the 12-volt battery has discharged or has been changed or removed

The gasoline engine may idle at times when it usually would not. The vehicle idles continuously in order to re-learn the engine operating conditions and this does not indicate a malfunction. If this continues for more than a few days, contact your Lexus dealer.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibration even though the vehicle is able to move. Always put the shift lever in “P” when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- Motor sounds may be heard from under the vehicle.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seat when the hybrid system starts or stops.
- Sounds may be heard from the transmission when the hybrid system starts or stops.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to energy regeneration when you depress the brake pedal.
- Vibration may be felt when the gasoline engine starts or stops.
- You may hear cooling fan sounds coming from the air intake vents behind the rear seat.


■ Hybrid battery (traction battery) cooling

The air conditioning system may operate automatically to cool the hybrid battery (traction battery).

■ Maintenance, repair, recycling, and disposal

Contact your Lexus dealer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

High voltage components

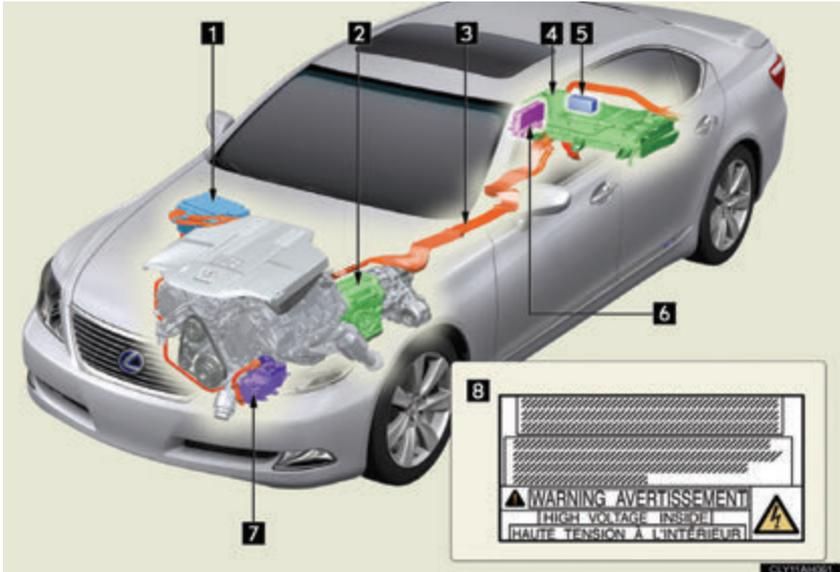

- | | |
|---|--------------------------------------|
| 1 Power control unit | 5 Service plug |
| 2 Electric motor (Traction motor) | 6 DC/DC converter |
| 3 High voltage cables (orange color) | 7 Air conditioning compressor |
| 4 Hybrid battery (Traction battery) | 8 Caution label |

Take care when handling the hybrid system, as it contains a high voltage system (about 650V at maximum) as well as parts that become extremely hot when the hybrid system is operating. Obey the caution labels attached to the vehicle.

■ Hybrid battery air vents



There are air intake vents on the package tray for the purpose of cooling the hybrid battery (traction battery). If the vents become blocked, the hybrid battery may overheat, leading to a reduction in hybrid battery output.

Emergency shut off system

The emergency shut off system blocks off the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage when a certain level of impact is detected by the impact sensor. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Lexus dealer.

Energy monitor/consumption screen



You can view the status of your hybrid system on the multi-information display (→P. 191) and the touch screen (→P. 264). The following images are examples only, and may vary slightly from actual conditions.

■ Energy monitor


- How to display on the touch screen:

Press  or  to display the information screen, and touch .

If the "Consumption" screen is displayed, touch .

- How to display on the multi-information display:

Press the "DISP" switch on the steering wheel several times to select the energy monitor display.

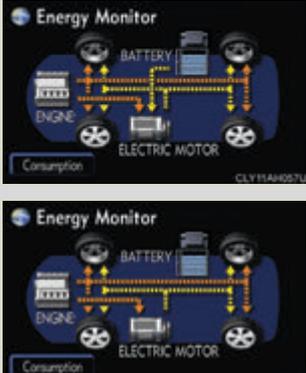	Touch screen	Multi-information display
When the vehicle is powered by the electric motor (traction motor)		
When the vehicle is powered by both the gasoline engine and the electric motor (traction motor)		

1-1. Hybrid system

	Touch screen	Multi-information display
When the vehicle is powered by the gasoline engine		
When the vehicle is charging the hybrid battery (traction battery)		
When there is no energy flow		
Hybrid battery (traction battery) status	<p>Low Full</p>	<p>Low Full</p>

■ Consumption

Press  or  to display the information screen, and touch



If the “Energy Monitor” screen is displayed, touch .



- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3 Best past fuel consumption
- 4 Average fuel consumption
- 5 Cruising range

■ Resetting the consumption data

Touching  will reset the average fuel consumption. Touching  will reset all the data (except the cruising range) on the “Consumption” screen.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

■ If a warning light comes on or a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In that case, try to start the system again. If the "READY" indicator does not come on, contact your Lexus dealer.

■ When refueling, the fuel filler door may take a few moments to open

As part of emission system operation, it may take up to 10 seconds for the fuel filler door to automatically release after the opener switch is pressed. Before refueling is possible, a message will be shown on the multi-information display. (→P. 112)

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P. 610) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.4 gal. [13 L, 2.8 Imp. gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

⚠ CAUTION

■ High voltage precautions

The vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables and their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the caution labels attached to the vehicle.



- Never try to open the service plug access hole located in the luggage compartment. The service plug is used only when the vehicle is serviced and is subject to high voltage.

■ Road accident cautions

Observe the following precautions to reduce the risk of injury:

- Pull your vehicle off the road, put the shift lever in “P”, apply the parking brake, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch it as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with four wheels raised. If the wheels with the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause an electricity leakage leading to a fire. (→P. 599)

CAUTION

■ Nickel-metal hydride battery

Your vehicle contains a sealed nickel-metal hydride battery. If disposed of improperly, it is hazardous to the environment and there is a risk of severe burns and electrical shock that may result in death or serious injury.

■ Emergency shut off system


- Carefully check to see if there are exposed high voltage parts or cables. Never touch the parts or cables. (→P. 33)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.

NOTICE

■ Hybrid battery air vents

- Do not put foreign objects over the air vents. The hybrid battery (traction battery) may overheat and be damaged.
- Clean the air vents regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not wet the air vents. It may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills over the hybrid battery (traction battery), the battery may be damaged.

The following keys are provided with the vehicle.

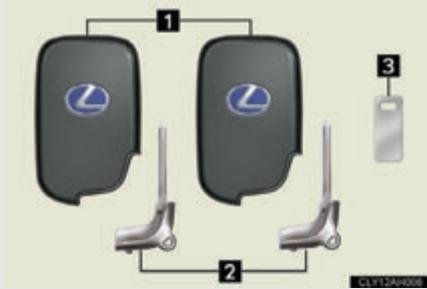

1 Electronic keys

- Operating the smart access system with push-button start (→P. 45)
- Operating the wireless remote control function (→P. 59)

2 Mechanical keys

3 Key number plate

■ Card key (if equipped)



1 Electronic key

Operating the smart access system with push-button start (→P. 45)

2 Mechanical key

The card key comes with an information card that includes instructions for use. Lexus recommends that you carry the information card with the card key.

Using the mechanical key



Take out the mechanical key.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P. 634)

■ Card key

- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the key does not operate properly.
- If it is difficult to take out the mechanical key, push down the lock release button using a pen tip etc. If it is still difficult to pull it out, use a coin etc.



- To store the mechanical key in the card key, insert it inside while pressing the lock release button.



- If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.

- The card key is not waterproof.

■ When required to leave the vehicle's key with a parking attendant

Turn the trunk opener main switch off and lock the glove box as circumstances demand. (→P. 68, 446)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

■ Key number plate

Keep the plate in a safe place such as your wallet, not in the vehicle. In the event that a mechanical key is lost, a new key can be made at your Lexus dealer using the key number plate. (→P. 633)

■ When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc, ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

NOTICE

■ To prevent key damage

Observe the following:

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for a long period of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the electronic keys.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems, glass top ranges, or medical electrical equipment, such as low-frequency therapy equipment.


■ Precautions for handling the card keys

- Do not apply excess force when inserting the mechanical key to the card key. Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode. If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have your Lexus dealer replace the battery.
- Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery. Installing the battery in the wrong direction may cause the battery to deplete rapidly.
- The surface of the card key may be damaged, or its coating may peel off in the following situations:
 - The card key is carried together with hard objects, such as coins or keys.
 - The card key is scraped with a sharp object, such as a tip of mechanical pencil.
 - The surface of the card key is wiped with thinners or benzene.

1-3. Opening, closing and locking the doors and trunk Smart access system with push-button start


The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.

(The driver should always carry the electronic key.)

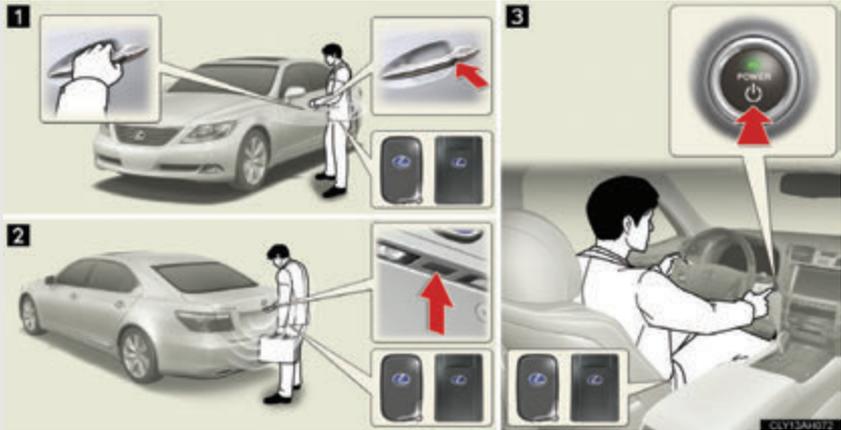

- 1 Locks and unlocks the doors (→P. 46)
- 2 Opens the trunk (→P. 46)
- 3 Starts and stops the hybrid system (→P. 169)

Unlocking and locking the doors

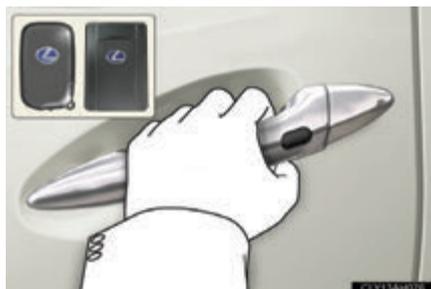

Grip the handle to unlock the door.

Make sure to touch the sensor on the back of the handle.

The door cannot be unlocked for 3 seconds after the door is locked.



Press the lock button to lock the door.

Pressing and holding the button closes the windows.

The moon roof will also close.

Opening the trunk




Press the button.

The trunk lid automatically opens fully.


Antenna location and effective range

■ Antenna location

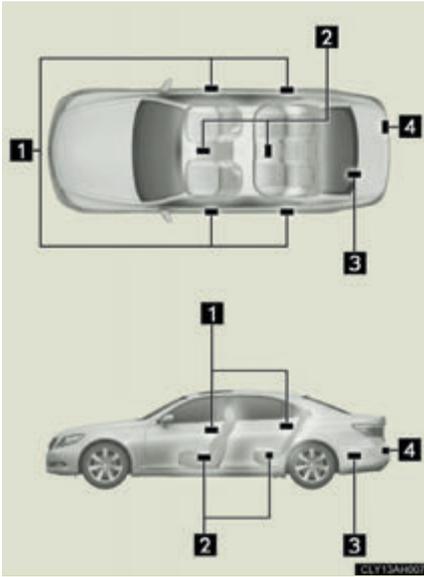

- 1 Antennas outside cabin
- 2 Antennas inside cabin
- 3 Antenna inside trunk
- 4 Antenna outside trunk

■ Effective range (areas within which the electronic key is detected)

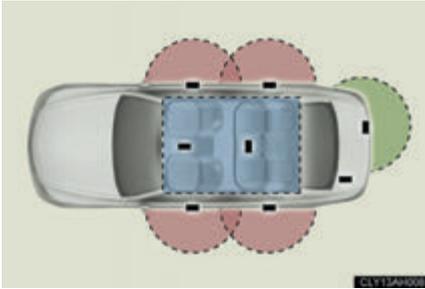

- When locking or unlocking the doors

The system can be operated when the electronic key is within about 2.3 ft. (70 cm) of an outside door handle. (Only the doors detecting the key can be operated.)

- When opening the trunk

The system can be operated when the electronic key is within about 2.3 ft. (70 cm) of the trunk release button.

- When starting the hybrid system or changing "POWER" switch modes

The system can be operated when the electronic key is inside the vehicle.

■ Operation signals

Doors: A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

Trunk: A buzzer sounds to indicate that the trunk has been unlocked.

Windows and moon roof: A buzzer sounds to indicate that the windows and moon roof are operating.

■ Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Adjusting the volume of the buzzer

The operation signal buzzer and door lock buzzer can be set to the desired volume.



1 Increases the volume

2 Decreases the volume

The buzzer can be turned off by turning the knob fully clockwise.

■ Conditions affecting operation

The smart access system with push-button start uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart access system with push-button start, wireless remote control and immobilizer system from operating properly:
(Ways of coping: →P. 634)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication devices
- When the electronic key is in contact with, or is covered by the following metallic objects
 - Cards to which aluminum foil is attached
 - Cigarette boxes that have aluminum foil inside
 - Metallic wallets or bags
 - Coins
 - Hand warmers made of metal
 - Media such as CDs and DVDs
- When multiple electronic keys are in the vicinity
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
 - Another vehicle's electronic key or a wireless key that emits radio waves
 - Personal computers or personal digital assistants (PDAs)
 - Digital audio players
 - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window


■ Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control.

STEP 1 Turn the "POWER" switch OFF.

STEP 2 When the indicator light on the key surface is not on, press and hold  ,  , or  for about 5 seconds while pressing and holding  on the key.

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

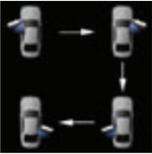Multi-information display	Unlocking doors	Beep
	Hold the driver's door handle to unlock only the driver's door.	Exterior: Beeps 3 times Interior: Rings once
	Hold a passenger's door handle to unlock all the doors.	
	Hold the door handle to unlock the front and rear doors on your side.	Exterior: Beeps 4 times Interior: Rings once
	Hold the door handle to unlock the door.	Exterior: Beeps once Interior: Rings once
	Hold a door handle to unlock all doors.	Exterior: Beeps twice Interior: Rings once

STEP 3 Unlock the doors using the wireless remote control and open one of the doors.

If a door is not opened within 60 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set. In case that the alarm is triggered, immediately stop the alarm. (→P. 119)

■ Battery-saving function

In the following circumstances, the entry function is disabled in order to prevent the 12-volt battery from discharging and the electronic key battery from depleting.

- When the entry function has not been used for a month or more
- When the electronic key has been left within approximately 6 ft. (2 m) of the vehicle for 10 minutes or more

The system will resume operation when

- The vehicle is locked using the door handle lock switch when carrying the electronic key on your person.
- The vehicle is locked/unlocked using the wireless remote control function. (→P. 59)
- The vehicle is locked/unlocked using the mechanical key. (→P. 634)

■ Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
- The battery becomes depleted even if the electronic key is not used because the key always transmits radio waves. If the smart access system with push-button start or the wireless remote control does not operate, or the detection area becomes smaller, the battery may be depleted. Replace the battery when necessary. (→ P. 559)
- To avoid serious deterioration, do not leave the electronic key within 3 ft. (1 m) of the following electrical appliances that produce a magnetic field:
 - TVs
 - Personal computers
 - Cellular phones, cordless phones and battery chargers
 - Recharging cellular phones or cordless phones
 - Glass top ranges
 - Table lamps

■ To operate the system properly

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not function.)

■ Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
 - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the trunk is unlocked.
 - The electronic key is on the instrument panel, rear package tray or floor, or in the glove box when the hybrid system is started or "POWER" switch modes are changed.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The door will automatically be locked after approximately 60 seconds if the doors are not opened and closed.)
- Gripping the door handle when wearing a glove may not unlock the door.
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.

■ When the vehicle is not driven for extended periods

To prevent theft of the vehicle, do not leave the electronic key within 6 ft. (2 m) of the vehicle.

■ Security feature

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the anti-theft system automatically locks the vehicle again.

■ Alarms and warning indicators

A combination of exterior and interior alarms as well as warnings displayed on the multi-information display is used to prevent theft of the vehicle and unforeseeable accidents resulting from erroneous operation. Perform the appropriate correction procedure described in the following table:

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the "POWER" switch OFF.	Turn the "POWER" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

Alarm	Situation	Correction procedure
Interior alarm pings continuously.	The "POWER" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "POWER" switch was in ACCESSORY mode).	Turn the "POWER" switch OFF and close the driver's door.
	The "POWER" switch was turned OFF while the driver's door was open.	Close the driver's door.
Interior alarm sounds continuously. ^{*1}	When the "POWER" switch is in ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P" and turn the "POWER" switch OFF.
Interior and exterior alarms sound continuously. ^{*1}	When the "POWER" switch is in ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P", turn the "POWER" switch OFF and close the driver's door again.
Interior alarm pings once. ^{*1}	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the hybrid system without the electronic key being present, or the electronic key was not functioning normally.	Start the hybrid system with the electronic key present. ^{*2}

Alarm	Situation	Correction procedure
Interior alarm pings once and exterior alarm sounds 3 times. ^{*1}	The driver's door was closed after the key was carried outside the vehicle, and the "POWER" switch was not turned OFF.	Turn the "POWER" switch OFF and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the "POWER" switch was not OFF.	Bring the electronic key back into the vehicle.

^{*1}: A warning message will be shown on the multi-information display in the instrument cluster.

^{*2}: If the hybrid system does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key. (→P. 52)

■ If the smart access system with push-button start does not operate properly

- Locking and unlocking the doors and trunk: Use the mechanical key. (→P. 634)
- Starting the hybrid system: →P. 635

■ When the electronic key battery is fully depleted

→P. 559

■ Customization that can be configured at Lexus dealer

Settings (e.g. smart access system with push-button start) can be deactivated. (Customizable features →P. 672)

■ Certification for the smart access system with push-button start**► U.S.A.**

FCC ID: NI4TMLF-4

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► Canada**NOTE:**

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ Caution regarding interference with electronic devices

- People with implanted pacemakers or cardiac defibrillators should keep away from the smart access system antennas. (→P. 48) The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Lexus dealer for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable the entry function.
- User of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Lexus dealer for details for disabling the entry function.

1-3. Opening, closing and locking the doors and trunk

Wireless remote control

The wireless remote control can be used to lock and unlock the vehicle and the trunk from outside the vehicle.



1 Locks all doors

2 Unlocks all doors

Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.

3 Opens the windows (press and hold)

The moon roof will also open.

4 Opens the trunk (press and hold)

5 Sounds alarm (press and hold) (→P. 119)

1

Before driving

■ Operation signals

Doors: A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

Trunk: A buzzer sounds to indicate that the trunk has been unlocked.

Windows and moon roof: A buzzer sounds to indicate that the windows and moon roof are opening.

■ Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Adjusting the volume of the buzzer

The operation signal buzzer and door lock buzzer can be set to the desired volume.
(→P. 49)

■ Alarm

Using the wireless remote control to lock the door will set the alarm system.
(→P. 119)

■ Electronic key battery depletion

→P. 52

■ Security feature

→P. 54

■ If the wireless remote control does not operate properly

- Locking and unlocking the doors and trunk: Use the mechanical key.
(→P. 634)

- Starting the hybrid system: →P. 635

■ When the electronic key battery is fully depleted

→P. 559

■ Conditions affecting operation

→P. 50

■ Customization that can be configured at Lexus dealer

Settings (e.g. trunk unlocking function) can be changed.
(Customizable features →P. 672)

■ Certification for wireless remote control**▶ U.S.A.**

FCC ID: HYQ14AAB

FCC ID: HYQ14ABK

FCC ID: HYQ14ABB

FCC ID: HYQ14ABS

FCC ID: HYQ13BZL

FCC ID: HYQ13BZT

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

▶ Canada**NOTE:**

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

1-3. Opening, closing and locking the doors and trunk

Doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.

■ Entry function

→P. 46

■ Wireless remote control

→P. 59


■ Door lock switch



1 Locks all doors

2 Unlocks all doors

■ Inside lock button

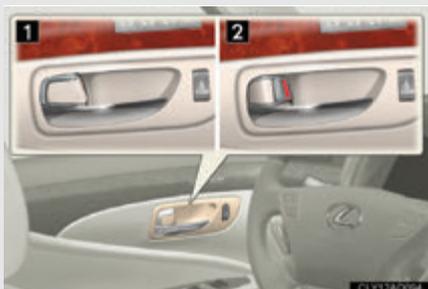

1 Locks the door

2 Unlocks the door


The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

Locking the front doors from the outside without a key

The door cannot be locked if the “POWER” switch is in ACCESSORY or ON mode, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be locked.

Rear door child-protector lock

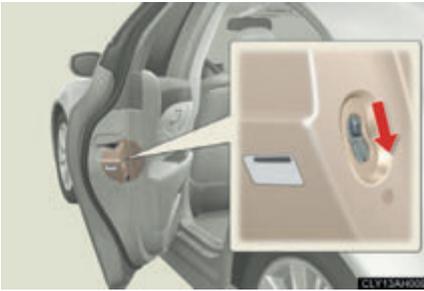

The door cannot be opened from inside the vehicle when the locks are set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Automatic door locking and unlocking systems


The following functions can be set or canceled:

Function	Operation
Shift position linked door locking function	Shifting the shift lever out of “P” with the hybrid system on locks all doors.
Shift position linked door unlocking function	Shifting the shift lever to “P” unlocks all doors.
Speed linked door locking function	All doors are locked when the vehicle speed is approximately 12 mph (20 km/h) or higher.
Driver's door linked door unlocking function	All doors are unlocked when the driver's door is opened within 10 seconds after turning the “POWER” switch OFF.

■ Setting and canceling the functions

To switch between setting and canceling, follow the procedure below.

STEP 1 Close all the doors and turn the “POWER” switch to ON mode.
(Perform step 2 within 20 seconds.)

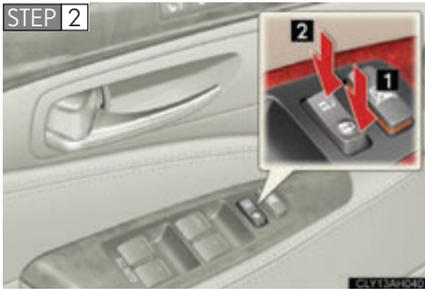

Shift the shift lever to “P” or “N”, and press and hold the driver's door lock switch (1 or 2) for approximately 5 seconds and then release.

The shift lever and switch positions corresponding to the desired function to be set or canceled are shown as follows:

Function	Shift lever position	Switch position
Shift position linked door locking function	P	1
Shift position linked door unlocking function		2
Speed linked door locking function	N	1
Driver's door linked door unlocking function		2

When the setting or canceling operation is complete, all doors are locked and then unlocked.

■ Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

■ Door closer

In the event that a door is left slightly open, the door closer will automatically close it to the fully closed position.

- The door closer will operate regardless of “POWER” switch mode.
- The door closer will not function if the door has been closed while pulling the inside or outside door handle.
- The door can be opened by pulling the inside or outside door handle, even when the door closer is operating (except when the lock button is in the lock position or the child-protector lock is set).
- The motor sound may be heard for several seconds after the door closer closes the door. This does not indicate a malfunction.

■ Using the mechanical key

The doors can also be locked and unlocked with the mechanical key. (→P. 634)

■ Customization that can be configured at Lexus dealer

Settings (e.g. unlocking function using a key) can be changed.
(Customizable features →P. 672)

CAUTION

■ To prevent an accident

Observe the following precautions while driving the vehicle.

Failure to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Always use a seat belt.
- Always lock all doors.
- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.

The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.

Be especially careful for the front doors, the doors may be opened even if the inside lock buttons are in locked position.

- Set the rear door child protector locks when children are seated in the rear seat.

■ Door closer

In the event that a door is left slightly open, the door closer will automatically close it to the fully closed position. If the child-protector lock is set, the door closer will not stop during operation even if an attempt is made to open the door from inside the vehicle. Be careful not to catch fingers or anything else in the door. Failure to do so may result in serious injury.

NOTICE

■ To prevent door closer malfunction

Do not frequently repeat opening and closing of doors, or apply excessive force to a door while the door closer is operating.

1-3. Opening, closing and locking the doors and trunk

Trunk

The trunk can be opened using the trunk opener, entry function or wireless remote control.

■ Opening the trunk from inside the vehicle



Press the opener switch.

The trunk lid automatically opens fully.

■ Opening the trunk from outside the vehicle

- ▶ Entry function
→P. 46
- ▶ Wireless remote control
→P. 59


Trunk closer switch



Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.

Canceling the trunk opener feature

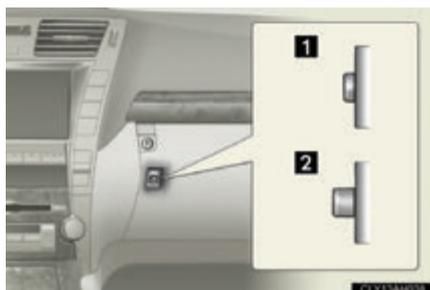


Turn the main switch in the glove box off to disable the trunk opener.

- 1 On
- 2 Off

The trunk lid cannot be opened even with the wireless remote control or the entry function.

■ Trunk handle

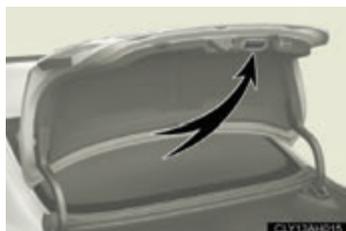

Use the trunk handle when closing the trunk.

■ Trunk easy closer

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position.

■ Function to prevent the trunk being locked with the electronic key inside (when all the doors are locked)

Closing the trunk lid with the electronic key left inside the trunk will sound an alarm. In this case, the trunk lid can be opened by pressing the button on the trunk lid.

■ Overload protection function

The trunk lid will not operate when excessive load is present on the top of the trunk lid.


■ Fall-down protection function

While the trunk lid is opening automatically, applying excessive force to it will stop the opening operation to prevent the trunk lid from rapidly falling down.

■ **Jam protection function**

While the trunk lid is closing automatically, the trunk lid will stop closing and open if something gets caught.

■ **Internal trunk release lever**

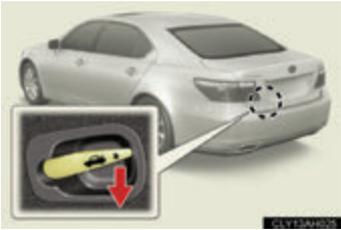

The trunk lid can be opened by pulling down on the glow-in-the-dark lever located on the inside of trunk lid.

The lever will continue to glow for some time after the trunk lid is closed.

■ **Using the mechanical key**

The trunk can be also opened using the mechanical key. (→P. 634)

■ **Customization that can be configured at Lexus dealer**

Setting of power trunk opener and closer function can be deactivated. (Customizable features →P. 672)

CAUTION

■ Caution while driving

- Keep the trunk lid closed while driving.

If the trunk lid is left open, it may hit near-by objects while driving or luggage in the trunk may be unexpectedly thrown out, causing an accident.

In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the trunk lid before driving.

- Before driving the vehicle, make sure that the trunk lid is fully closed. If the trunk lid is not fully closed, it may open unexpectedly while driving, causing an accident.
- Never let anyone sit in the trunk. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

■ When children are in the vehicle

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not allow children to enter the trunk.

If a child is accidentally locked in the trunk, they could overheat or suffocate.

- Do not allow a child to open or close the trunk lid.

Doing so may cause the trunk lid to operate unexpectedly, or cause the child's hands, head, or neck to be caught by the closing trunk lid.

! CAUTION**■ Using the trunk**

Observe the following precautions.

Failure to do so may cause parts of the body to be caught, resulting in serious injury.

- Remove any heavy loads, such as snow and ice, from the trunk lid before opening it. Failure to do so may cause the trunk lid to fall closed again after it is opened.
- When opening or closing the trunk lid, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- Use caution when opening or closing the trunk lid in windy weather as it may move abruptly in strong wind.



- The trunk lid may fall if it is not opened fully. It is more difficult to open or close the trunk lid on an incline than on a level surface, so beware of the trunk lid unexpectedly opening or closing by itself. Make sure that the trunk lid is fully open and secure before using the trunk.
- When closing the trunk lid, take extra care to prevent your fingers etc. from being caught.
- When closing the trunk lid, make sure to press it lightly on its outer surface. If the trunk handle is used to fully close the trunk lid, it may result in hands or arms being caught.
- Do not attach any accessories other than genuine Lexus parts to the trunk lid. Such additional weight on the trunk lid may cause the lid to fall closed again after it is opened.

CAUTION

■ Trunk easy closer



In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position. It takes several seconds before the trunk easy closer begins to operate. Be careful not to catch fingers or anything else in the trunk lid, as this may cause bone fractures or other serious injuries.

■ Power trunk opener and closer

Observe the following precautions when operating the power trunk opener and closer.

Failure to do so may cause serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- If the trunk closer switch is pressed while the trunk lid is opening during automatic operation, the trunk lid stops opening. Take extra care when on an incline, as the trunk lid may open or close suddenly.
- On an incline, the trunk lid may fall after it opens automatically. Make sure the trunk lid is fully open and secure before using the trunk.
- In the following situations, the power trunk opener and closer may detect an abnormality and automatic operation may be stopped. In this case, the trunk lid has to be operated manually. Take extra care in this situation, as the stopped trunk lid may suddenly fall, causing an accident.
 - When the trunk lid contacts an obstacle
 - When the battery voltage suddenly drops, such as when the “POWER” switch is turned to ON mode or the engine is started during automatic operation
- Do not attach any accessories other than genuine Lexus parts to the trunk lid. The power trunk opener and closer may not operate, causing itself to malfunction, or the trunk lid may fall closed again after it is opened.

 CAUTION**■ Jam protection function**

Observe the following precautions.
Failure to do so may cause serious injury.

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the trunk lid fully closes. Be careful not to catch fingers or anything else in the trunk lid.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

 NOTICE**■ To prevent trunk easy closer malfunction**


Do not apply force to the trunk lid while the trunk easy closer is operating.

■ To prevent damage to the power trunk opener and closer

- Make sure that there is no luggage or snow on the trunk lid before operating the power trunk opener and closer. In addition, make sure that there is no ice between the trunk lid and frame that would prevent movement of the trunk lid. Operating the power trunk opener and closer when excessive load is present on the trunk lid may cause a malfunction.
- Do not apply excessive force to the trunk lid while the power trunk opener and closer is operating.

1-4. Adjustable components (seats, mirrors, steering wheel)

Front seats

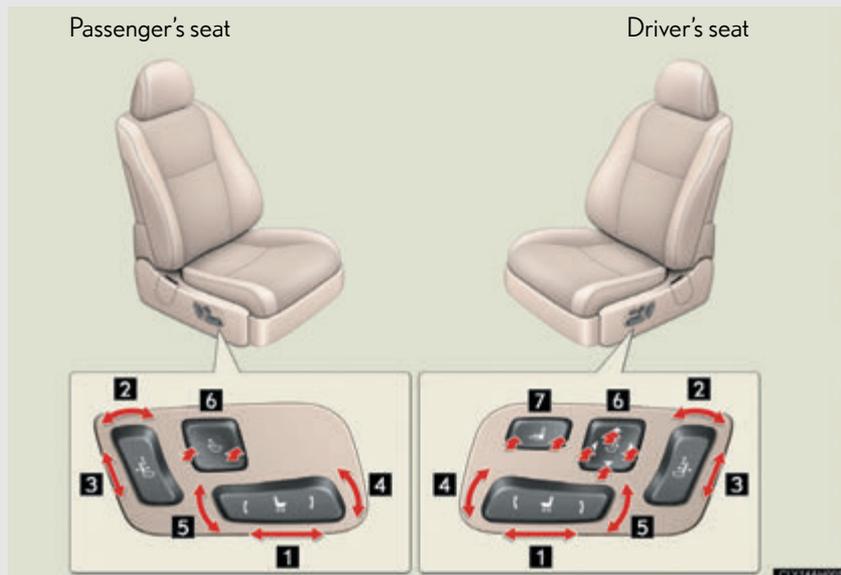

1 Seat position switch

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

2 Seatback angle switch

3 Head restraint height adjustment switch (→P. 92)

4 Seat cushion (front) angle switch

5 Vertical height adjustment switch

6 Lumbar support switch

Driver's seat: 4-way

Front passenger's seat: 2-way


7 Seat cushion length adjustment switch

Seat operation switches on the side of the front passenger's seat



- Seatback angle switch
- 1 Forward
- 2 Backward
- Seat position switch
- 3 Forward
- 4 Backward

Operating the front passenger's seat from the rear seat (4-seat models)

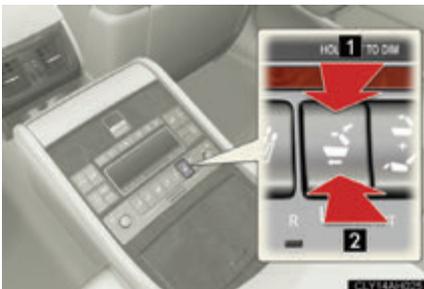

- 1 Moves the front passenger's seat forward
The signal beeps when seat operation stops at the forward limit.
- 2 Moves the front passenger's seat backward
The seatback will return to the neutral position.

■ Operating the front passenger's seat from the rear seat (4-seat models)

The front passenger's seat can be operated when the "POWER" switch is in ON mode. However, in the following situations, the front passenger's seat does not move even when the switch is operated.

- The front passenger's seat belt is in use.
- The front passenger's door is open. (The front seat will not move forward.)

■ Seat cushion automatic length adjustment (driver's seat only)

If the front of the cushion gets too close to the area around the instrument panel when the seat position is being adjusted, the seat cushion will automatically retract.

■ Seat operation automatic stop function (4-seat models)

The seat operation will stop if a front seat is going to contact the retractable table. (A warning message will be shown on the multi-information display.)

CAUTION

■ Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

■ Operating the front passenger's seat from the driver's seat or rear seat

Do not operate the front passenger's seat when a passenger is seated in it. In addition, do not let anyone sit down in the front passenger's seat while the seat is being operated. The front passenger may catch their legs between the instrument panel and seat, resulting in injury.

NOTICE

■ Operating the front passenger's seat from the driver's seat or rear seat

Before operating the front passenger's seat, make sure that there is no luggage or any other objects on the seat or in the footwell that could prevent its operation.

Failure to do so may result in excess force being applied, causing damage to the seat and/or the luggage.

1-4. Adjustable components (seats, mirrors, steering wheel)

Power rear seat (5-seat models)*



1 Seat selection switch

The indicator light for the seat that can be operated comes on.

2 Seat position adjustment switch

3 Seatback upper angle adjustment switch

4 Head restraint height adjustment switch (→P. 92)

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.

Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

■ Canceling the seat return operation



Pressing the "C" button will disable the seat return function. When disabled, the seat will not return when the door is opened.

The indicator light comes on when the seat return function is disabled.

Pressing the button again will enable the seat return function.

Performing either of the following cancels the seat returning operation:

- Press the "SET", "M" or "C" button.
- Press any of the seat adjustment switches.

■ Operating the seat return function after turning the hybrid system off

The seat will automatically return to the neutral position if the door is opened within approximately 45 seconds after the "POWER" switch is turned OFF.

 **CAUTION**

■ **Seat adjustment**

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

■ **When adjusting the seat position**

Keep sufficient footwell space to prevent your feet from being caught by the front seat.

■ **When returning the rear seats to the neutral position**

Wait until passengers have gotten off the rear seat before operating the switch to avoid injuring the passengers.

1-4. Adjustable components (seats, mirrors, steering wheel)

Power rear seat (4-seat models)



The right-hand rear seat is a relaxation seat, which is equipped with a seatback angle adjustment function and an ottoman.

1 Seat selection switch

The indicator light for the seat that can be operated comes on.

2 Seat position adjustment switch

3 Seatback upper angle adjustment switch

4 Head restraint height adjustment switch (→P. 92)

5 Seatback angle adjustment switch

6 Ottoman angle adjustment switch

7 Front passenger's seat control switch (→P. 74)

8 Relaxation mode switch

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.


Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

Relaxation mode operation

Relaxation mode can be entered by operating a switch. The front passenger seat will move forward and then the seatback of the relaxation seat will recline and the ottoman will simultaneously rise.

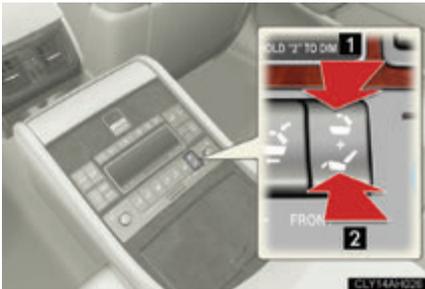

1 Enters relaxation mode

2 Returns to the neutral position.

The signal beeps when either operation is completed.

■ Relaxation mode

Relaxation mode can be entered when the “POWER” switch is in ON mode. However, in the following situations, relaxation mode cannot be entered even when the switch is operated:

- The front passenger’s seat belt is in use.
- The front passenger’s door is open. (The front seat will not move forward.)

■ Canceling the seat return operation



Pressing the “C” button will disable the seat return function. When disabled, the seat will not return when the door is opened.

The indicator light comes on when the seat return function is disabled.

Pressing the button again will enable the seat return function.

Performing either of the following cancels the seat returning operation:

- Press the “SET”, “M” or “C” button.
- Press any of the seat adjustment switches.

■ Operation after turning the hybrid system off

- The rear seat can be returned to the neutral position as long as the relaxation mode switch is operated within approximately 45 seconds after the “POWER” switch is turned OFF.
- The seat return function is available for approximately 45 seconds after the “POWER” switch is turned OFF.

■ Seat operation automatic stop function

If the rear seat and front passenger seat are going to come in contact with each other, the signal will beep and seat operation will stop.

 **CAUTION****■ Seat adjustment**

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

■ When adjusting the seat position and ottoman angle

Keep sufficient footwell space to prevent your feet from being caught by the front seat.

■ When returning the rear seats to the neutral position

Wait until passengers have gotten off the rear seat before operating the switch to avoid injuring the passengers.

■ Using the ottoman

● Do not sit on the ottoman.

If someone sits on the ottoman, the seat belt cannot be fitted properly, and they may be thrown from the seat, resulting in death or serious injury in the event of an accident or sudden braking.

● When getting in or out of the vehicle, retract the ottoman. If the ottoman is not retracted, it may cause a fall, resulting in injury.

 **NOTICE****■ To prevent an ottoman malfunction**

● Do not place any objects in the rear seat footwell that could prevent the operation of the ottoman.

● Do not place heavy luggage on the ottoman.

1-4. Adjustable components (seats, mirrors, steering wheel)

Driving position memory (driver's seat)

Your preferred driving position (the position of the driver's seat and steering wheel, angle of the outside rear view mirrors, and height of seat belt) can be memorized and recalled with the touch of a button. It is also possible to set this function to activate automatically when the doors are unlocked. Three different driving positions can be entered into memory.

■ Entering a position to memory

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Adjust the driver's seat, steering wheel, outside rear view mirrors and seat belt height to the desired positions.

STEP 3



Push the "SET" button, then within 3 seconds push button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

■ Recalling the memorized position

Check that the shift lever is set in "P".

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2




Press button "1", "2" or "3" to recall the memorized position.

Linking driving position memory with door unlock operation

Record your driving position to button “1”, “2” or “3” before performing the following:

► Using the wireless remote control

STEP 1 Turn the “POWER” switch OFF and close the driver's door.

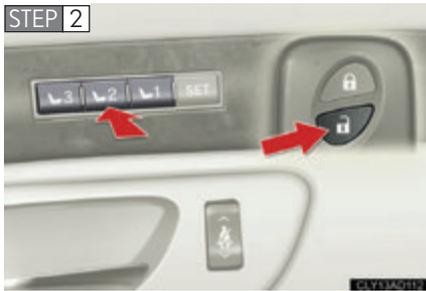

While pressing the desired button (“1”, “2” or “3”), press  on the wireless remote control until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened.

STEP 3 Open one of the doors.


If a door is not opened within 60 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.

In case that the alarm is triggered, immediately stop the alarm.
(→P.119)

► Using the door lock switch

Carry only one of the keys (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

STEP 1 Turn the "POWER" switch OFF and close the driver's door.

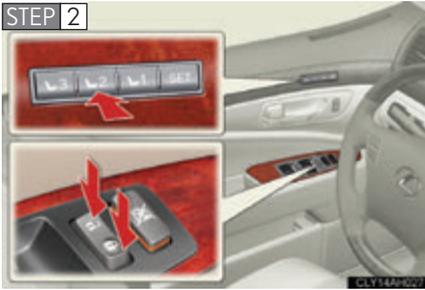

STEP 2

While pressing the desired button ("1", "2" or "3"), press the lock or unlock side on the door lock switch (either the driver or passenger side) until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened.

■ Canceling the linked door unlock operation

STEP 1 Turn the "POWER" switch OFF and close the driver's door.

STEP 2 Using the wireless remote control: While pressing the "SET" button, press  on the wireless remote control until the signal beeps.

Using the door lock switch: While pressing the "SET" button, press the lock or unlock side on the door lock switch until the signal beeps.

■ Operating the driving position memory after turning the hybrid system off

Memorized positions (except the steering wheel position) can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again, even after the "POWER" switch is turned OFF.

■ Stopping memorized position operation part-way through

Perform any of the following operations:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Adjust the seat using the switches (only cancels seat position recall).

■ Seat operation automatic stop function (4-seat models)

The seat operation will stop if a front seat is going to contact the retractable table. (A warning message will be shown on the multi-information display.)

CAUTION

■ Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

1-4. Adjustable components (seats, mirrors, steering wheel)

Seat position memory (front passenger's seat)*


Your preferred front passenger seat position and height of seat belt can be memorized and recalled with the touch of a button.

Three different seat positions can be entered into memory.

■ Entering a position to memory

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Adjust the front passenger seat and seat belt height to the desired position.

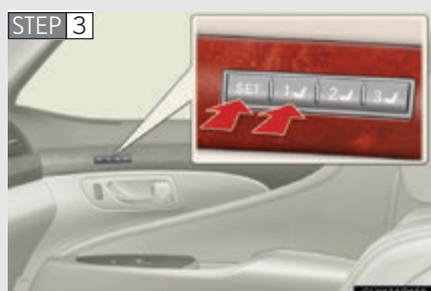

Press the "SET" button, then within 3 seconds press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

■ Recalling the memorized position

Check that the shift lever is set in "P".



Press button "1", "2" or "3" to recall the memorized position.

*: If equipped

■ **Operating the seat position memory after turning the “POWER” switch OFF**

Memorized position can be activated up to 180 seconds after the front passenger door is opened, even after turning the “POWER” switch OFF.

■ **Stopping seat position operation part-way through**

Perform any of the following operations.

- Press the “SET” button.
- Press button “1”, “2” or “3”.
- Adjust the seat position using the switches.

 **CAUTION**

■ **Seat adjustment caution**

Take care during seat adjustment so that the seat does not strike the rear passenger.

1-4. Adjustable components (seats, mirrors, steering wheel)

Rear seat position memory*

The rear seat position can be memorized and recalled with the touch of a button.

■ Entering a position to memory

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Adjust the rear seat to the desired position.

STEP 3



Press the "SET" button until the signal beeps.

If the preset is being used, the previously recorded seat position will be overwritten.

■ Recalling the memorized position



Press the "M" button until the signal beeps.

Relaxation seat: The memorized position will only be recalled if the ottoman is in a position higher than the memorized position. It will not move in an upward direction.

*: If equipped

■ Seat return function linked to the door opening operation

When the door is opened, the rear seat will automatically return to the neutral position. This function is available for 45 seconds after the "POWER" switch is turned OFF.

■ Canceling the seat position recall or return function



Pressing the "C" button will disable the seat position recall or seat return function. The indicator light comes on when the function is disabled. Pressing the button again will enable the seat position recall or seat return function.

Performing either of the following cancels the seat returning operation:

- Press the "SET", "M" or "C" button.
- Press any of the seat adjustment switches.

⚠ CAUTION

■ Seat adjustment caution


Take care during seat adjustment so that the rear passengers do not strike the front seats.

1-4. Adjustable components (seats, mirrors, steering wheel)

Head restraints

Head restraints are provided for all seats.

■ Front seats

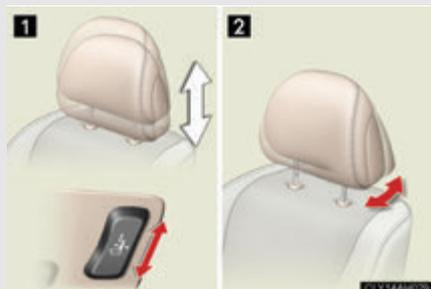


1 Vertical adjustment

→P. 74

2 Horizontal adjustment

■ Outside rear seats

► Power type

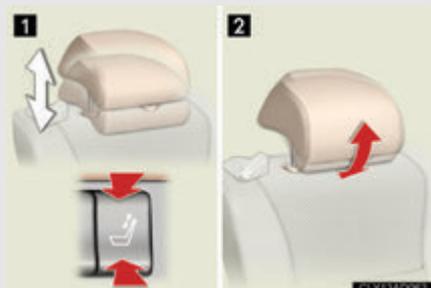


1 Vertical adjustment

5-seat models: →P. 77

4-seat models: →P. 80

2 Horizontal adjustment

► Manual type

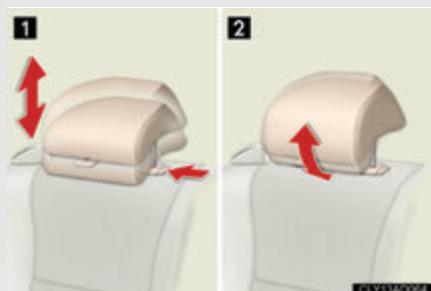


1 Vertical adjustment

Push and hold the lock release button when lowering.

2 Horizontal adjustment

■ Rear center seat (5-seat models)

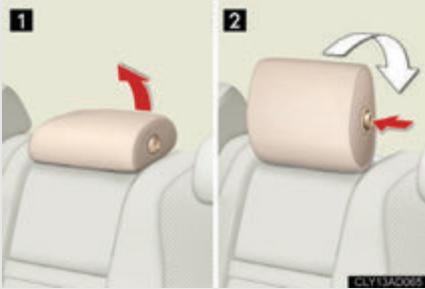


- 1 To use
- 2 To fold

■ Removing and installing the head restraints

For removal and installation of the head restraint, contact your Lexus dealer.

■ Adjusting the height of the head restraints (except rear center seat)

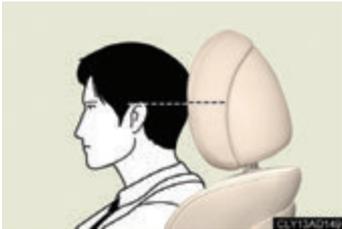

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

⚠ CAUTION

■ Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- Do not drive with the head restraints removed.

Seat belts


Make sure that all occupants are wearing their seat belts before driving the vehicle.

■ Correct use of the seat belts



- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

■ Fastening and releasing the seat belt

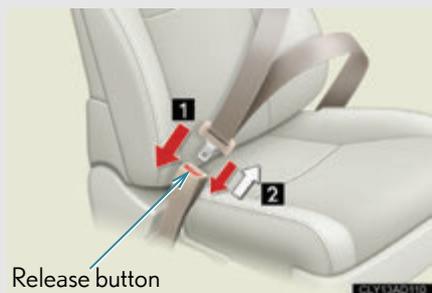


1 Fastening the belt

Push the plate into the buckle until a clicking sound is heard.

2 Releasing the belt


Press the release button.
If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it.

■ Adjusting the seat belt shoulder anchor height (front seats)

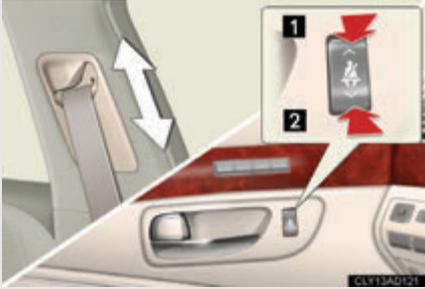


- 1 Up
- 2 Down

Seat belt comfort guide (outside rear seats)

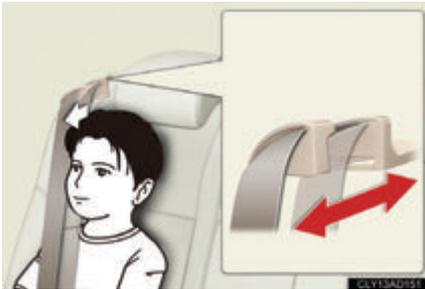

If the shoulder belt sits close to a person's neck, slide the seat belt comfort guide forward.

Seat belt pretensioners (front and outside rear seats)

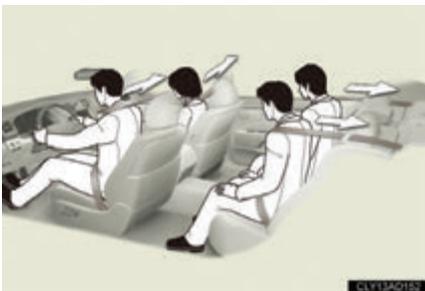

The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.

Pre-collision seat belts (front seats of vehicles with pre-collision system)

When the pre-collision sensor detects an obstacle and determines that a collision is unavoidable, the seat belts lessen collision injury by retracting the slack in the front seat belts before the collision, thus restraining the driver and passenger at an earlier stage.

The seat belts will also operate in the event of sudden braking.

(→P. 238, 242)


■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

■ Automatic locking retractor (ALR)

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. (→P. 148)

■ Pregnant women

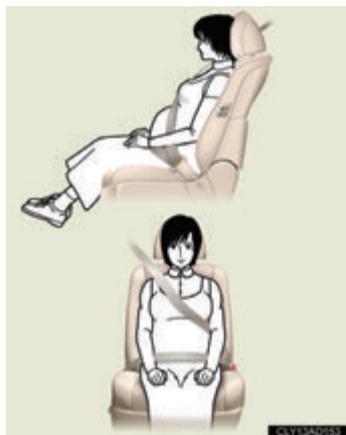

Obtain medical advice and wear the seat belt in the proper way. (→P. 94)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the round part of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

■ **People suffering illness**

Obtain medical advice and wear the seat belt in the proper way.

■ **Child seat belt usage**

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 143)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 94 regarding seat belt usage.

■ **Automatic adjustment of the seat belt shoulder anchor height (driver's seat and passenger's seat on 5 seat models)**

A desired seat belt shoulder anchor height can be entered to memory and recalled automatically by the driving position memory and seat position memory. (→P. 84, 88)

■ **Replacing the belt after the pretensioner has been activated**

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ **Seat belt extender**



If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

CAUTION

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or severe injury.

■ **Wearing a seat belt**

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

■ **Adjustable shoulder anchor**

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 95)

■ **Seat belt pretensioners**

- Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the front passenger's seat may not activate in the event of a collision.
- If the pretensioner has activated, the seat belt becomes locked: it cannot be further extended, nor will it return to the stowed position. The seat belt cannot be used again and must be replaced at your Lexus dealer.

 **CAUTION****■ Child restraint lock function belt precaution**

Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Lexus dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling of the pretensioner may prevent it from operating properly, resulting in death or serious injury.

■ Precaution for pre-collision seat belts

Do not rely on the pre-collision system to avoid accidents. Always pay attention to the surrounding conditions, and drive safely and responsibly.

■ Using a seat belt extender

- Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.

NOTICE

■ **When using a seat belt extender**


When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.

This helps prevent damage to the vehicle interior and the extender itself.

1-4. Adjustable components (seats, mirrors, steering wheel)

Steering wheel

The steering wheel can be adjusted to a comfortable position while the "POWER" switch is in ACCESSORY or ON mode.

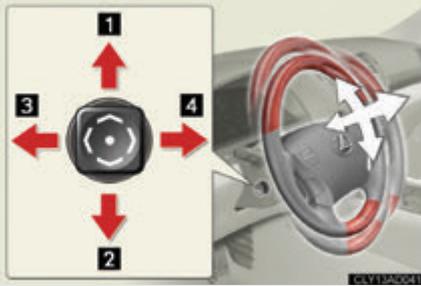

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

1

Before driving

Auto tilt away



When the "POWER" switch is turned OFF, the steering wheel returns to its stowed position by moving up and away to enable easier driver entry and exit.

Turning the "POWER" switch to ACCESSORY or ON mode will return the steering wheel to the original position.

■ Automatic adjustment of the steering position

A desired steering position can be entered to memory and recalled automatically by the driving position memory. (→P. 84)

 **CAUTION**

■ Caution while driving


Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

1-4. Adjustable components (seats, mirrors, steering wheel)

Anti-glare inside rear view mirror

In automatic mode, sensors are used to detect the headlights of vehicles behind and automatically reduce the reflected light.

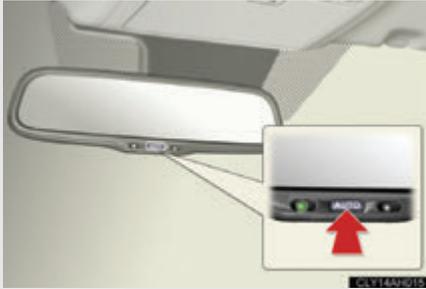

Turns automatic mode on/off

The indicator comes on when automatic mode is turned on.

The mirror will revert to automatic mode each time the "POWER" switch is turned to ON mode.

1

Before driving

■ To prevent sensor error



To ensure that the sensors operate properly, do not touch or cover them.

⚠ CAUTION

■ Caution while driving


Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

1-4. Adjustable components (seats, mirrors, steering wheel)


Outside rear view mirrors

Mirror angle can be adjusted using the switch when the “POWER” switch is in ACCESSORY or ON mode.

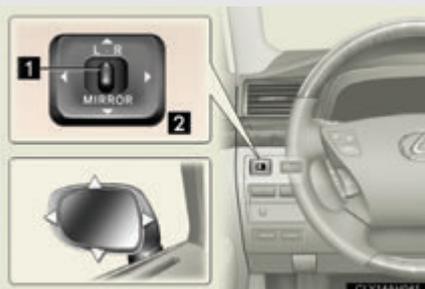

- 1 Selects a mirror to adjust (“L”: left or “R”: right)
- 2 Adjusts the mirror up, down, in, or out using the switch

Folding and extending the mirrors

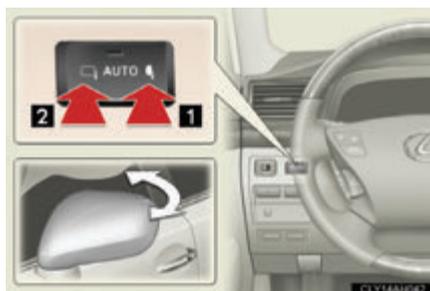

- 1 Folds the mirrors
- 2 Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode. Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

■ When the mirrors are fogged up

Turn on the mirror defoggers to defog the mirrors. (→P. 298)

■ Automatic adjustment of the mirror angle

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P. 84)

■ Linked mirror function when reversing

The outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. However, this function will not operate when the mirror select switch is in the neutral position (between “L” and “R”).

■ Auto anti-glare function

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P. 103)

CAUTION

■ When driving the vehicle

Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

■ When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

■ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

1-5. Opening and closing the windows and moon roof

Power windows

The power windows can be opened and closed using the following switches.



- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.



Lock switch



Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

■ The power windows can be operated when

The "POWER" switch is in ON mode.

■ Door lock linked window operation

- The power windows can be opened and closed using the mechanical key. (→P. 634)
- The power windows can be opened using the wireless remote control. (→P. 59)
- The power windows can be closed using the entry function. (→P. 46)

■ Operating the power windows after turning the hybrid system off

The power windows can be operated for approximately 45 seconds even after the "POWER" switch is switched to ACCESSORY mode or OFF. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

■ Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed.
(Customizable features →P. 672)

CAUTION

■ Closing the windows

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows.
Closing a power window on someone can cause serious injury, and in some instances, even death.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the window fully closes.

Moon roof

Use the overhead switches to open, close, and tilt the moon roof up and down.

■ Opening and closing



1 Open

The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open.

2 Close

Lightly press either of the moon roof switches to stop the moon roof partway.

■ Tilting up and down



1 Tilt up

2 Tilt down

Lightly press either of the moon roof switches to stop the moon roof partway.

■ The moon roof can be operated when

The "POWER" switch is in ON mode.

■ Moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the "POWER" switch is turned OFF and the driver's door is opened with the moon roof open.

■ Door lock linked moon roof operation

- The moon roof can be opened and closed using the mechanical key. (→P. 634)
- The moon roof can be opened using the wireless remote control. (→P. 59)
- The moon roof can be closed using the entry function. (→P. 46)

■ Operating the moon roof after turning the hybrid system off

The moon roof can be operated for approximately 45 seconds even after the "POWER" switch is switched to ACCESSORY mode or OFF. It cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object is detected between the moon roof and the frame while closing or tilting down, travel is stopped and the moon roof opens slightly.

■ When the moon roof does not close normally

Pressing and holding the "CLOSE" switch will close the moon roof.

■ Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ Customization that can be configured at Lexus dealer

Settings (e.g. linked door lock operation) can be changed.
(Customizable features →P. 672)

 **CAUTION****■ Opening the moon roof**

Observe the following precautions.

Failure to do so may cause death or serious injury.

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ Closing the moon roof

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.
- Do not allow children to operate the moon roof.
Closing the moon roof on someone can cause death or serious injury.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

1-6. Refueling

Opening the fuel tank cap

The fuel tank of your vehicle has a special structure, which requires a reduction in fuel tank pressure before refueling. After the opener switch has been pressed, it will take several seconds until the vehicle is ready for refueling.

■ Before refueling the vehicle

Close all the doors and windows, and turn the “POWER” switch OFF.

■ Opening the fuel tank cap



Press the opener switch.

The fuel filler door will open within about 10 seconds of the switch being pressed. Before refueling is possible, a message will be shown on the multi-information display in the instrument cluster to indicate the progress of the fuel filler door opener.



Turn the fuel tank cap slowly to open.

STEP 3



Hang the fuel tank cap on the back of the fuel filler door.

1

Before driving

Closing the fuel tank cap



When replacing the fuel tank cap, turn it until a clicking sound is heard.

■ Fuel types

Premium unleaded gasoline (Octane rating 91 [Research Octane Number 96] or higher)

■ Fuel tank capacity

Approximately 22.1 gal. (84 L, 18.4 Imp. gal.)

■ When the fuel filler door opener is inoperable



- If the fuel filler door opener switch cannot be operated, contact your Lexus dealer to service the vehicle. In case where refueling is urgently necessary, the fuel filler door can be opened using the lever in the trunk.

- Using the lever to open the fuel filler door may not allow for an adequate reduction in fuel tank pressure before refueling. To prevent fuel from spilling out, turn the cap slowly when removing it. During refueling, fuel may spill out from the filler opening due to air being discharged from inside the fuel tank. Therefore, fill the fuel tank carefully and slowly.

 **CAUTION****■ Refueling the vehicle**

Observe the following precautions while refueling the vehicle.
Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.
This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When replacing the fuel cap

Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

NOTICE

■ Refueling

- Finish refueling within 30 minutes. If more than 30 minutes passes, the internal valve closes. In this condition, fuel may overflow during the refueling process. Press the fuel filler door opener switch again.
- Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

1-7. Theft deterrent system Immobilizer system

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.



The indicator light flashes after the "POWER" switch has been turned OFF to indicate that the system is operating.

1

Before driving

■ System maintenance

The vehicle has a maintenance-free type of immobilizer system.

■ Conditions affecting operation

Depending on surrounding environment and conditions, the immobilizer system may not operate properly. This may prevent the hybrid system from starting. (→P. 50)

■ Certifications for the immobilizer system

► U.S.A.

NOTE:

FCC ID: NI4TMIMB-1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE

■ To prevent damage to the key

Do not modify, remove or disable the immobilizer system. If any unauthorized changes or modifications are made, the proper operation of the system cannot be guaranteed.

Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

■ Triggering of the alarm

The alarm is triggered in the following situations:

- A locked door or trunk is unlocked or opened in any way other than using the entry function, wireless remote control or key. (The doors will lock again automatically.)
- The hood is opened while the vehicle is locked.

■ Setting the alarm system



Close the doors, trunk and hood, and lock all doors.

The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

■ Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarm:

- Unlock the doors or trunk.
- Start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

■ Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

■ Triggering of the alarm

The alarm may be triggered in the following situations:
(Stopping the alarm deactivates the alarm system.)

- A person inside the vehicle opens a door, the trunk or hood.
- The 12-volt battery is recharged or replaced when the vehicle is locked.

■ Panic mode



When  is pressed for longer than about one second, an alarm will sound for about 60 seconds and the vehicle lights flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the wireless remote control.

1-7. Theft deterrent system

Theft prevention labels (U.S.A.)



These labels are attached to the vehicle to reduce vehicle theft by facilitating the tracing and recovery of parts from stolen vehicles. Do not remove under penalty of law.

1

Before driving

Correct driving posture

Drive in a good posture as follows:



- 1 Sit upright and well back in the seat. (→P. 74)
- 2 Adjust the position of the seat forward or backward to ensure the pedals can be reached and easily depressed to the extent required. (→P. 74)
- 3 Adjust the seatback so that the controls are easily operable.
- 4 Adjust the tilt and telescopic positions of the steering wheel downward so the SRS driver airbag is facing your chest. (→P. 101)
- 5 Adjust the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 92)
- 6 Wear the seat belt correctly. (→P. 94)

 **CAUTION****■ While driving**

- Do not adjust the position of the driver's seat while driving.
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint, increasing the risk of death or serious injury to the driver or passenger.
- Do not place anything under the front seats.
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident. The adjustment mechanism may also be damaged.


■ Adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.
Fingers or hands may become jammed in the seat mechanism.

1-8. Safety information

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

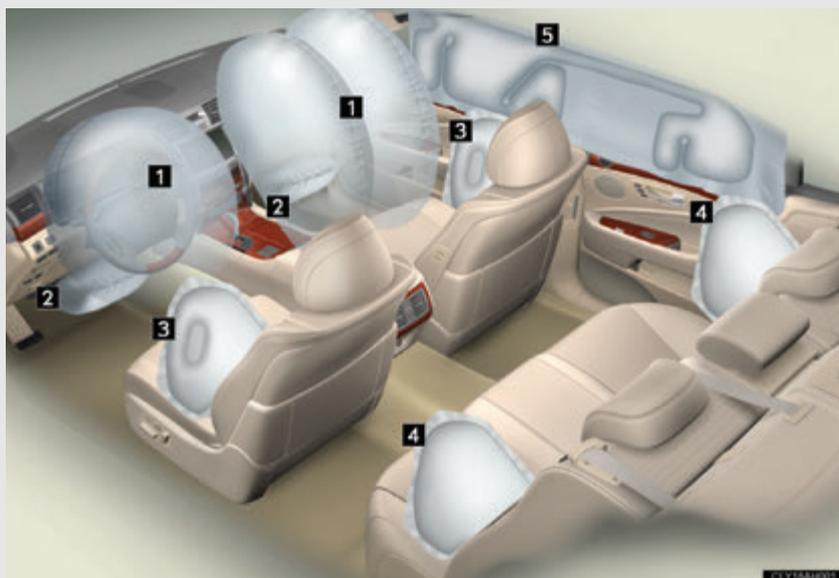

► SRS front airbags

1 SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

2 Knee airbags


Can help provide driver and front passenger protection

- ▶ SRS side and curtain shield airbags
- 3 Front SRS side airbags
Can help protect the torso of the front seat occupants
- 4 Rear SRS side airbags (with power rear seat only)
Can help protect the torso of the outside rear seat occupants
- 5 SRS curtain shield airbags
Can help protect primarily the head of outside occupants



- 6 SRS seat cushion airbag (relaxation seat on 4-seat models)
Can help restrain the relaxation seat occupant

SRS airbag system components

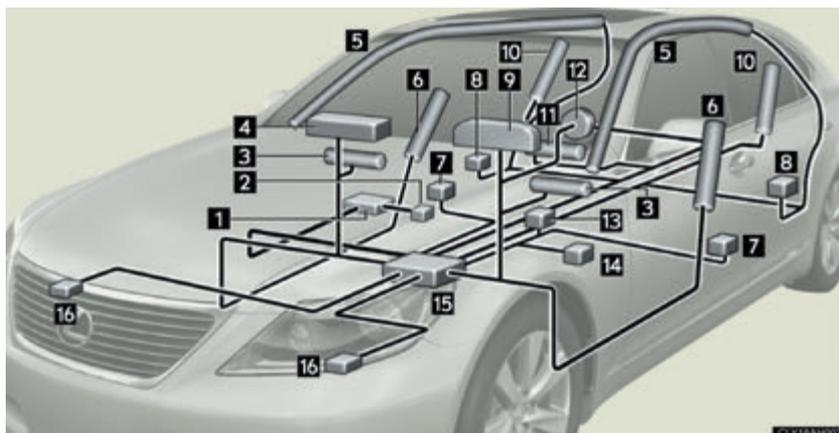

- | | |
|---|--|
| 1 Front passenger occupant classification sensor | 9 SRS warning light |
| 2 Front passenger's seat belt buckle switch | 10 Rear side airbags |
| 3 Knee airbags | 11 Seat cushion airbag |
| 4 Front passenger airbag | 12 Driver airbag |
| 5 Curtain shield airbags | 13 Driver's seat belt buckle switch |
| 6 Front side airbags | 14 Driver's seat position sensor |
| 7 Side and curtain shield airbag sensors | 15 Airbag sensor assembly |
| 8 Curtain shield airbag sensors | 16 Front airbag sensors |

Your vehicle is equipped with ADVANCED AIRBAGS designed based on US motor vehicle safety standards (FMVSS208). The airbag system controls airbag deployment power for the driver and front passenger. The driver airbag system consists of the driver seat's position sensor etc. The front passenger's airbag system consists of the front passenger occupant classification sensor etc.

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and an airbag sensor.

In certain types of severe frontal or side impacts, the SRS airbag system triggers the airbag inflators. A chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

■ SRS warning light

This warning light system monitors the airbag sensor assembly, front airbag sensors, side and curtain shield airbag sensor assemblies, curtain shield airbag sensor assemblies, driver's seat position sensor, driver's seat belt buckle switch, front passenger occupant classification system, "AIR BAG ON" indicator light, "AIR BAG OFF" indicator light, front passenger's seat belt buckle switch, seat belt pretensioner assemblies, inflators, interconnecting wiring and power sources.
(→P. 609)

■ If the SRS airbags deploy (inflate)

- Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the seats, and parts of the front pillar and roof side rail, may be hot for several minutes. The airbag itself may also be hot.
- The front windshield may crack.

■ Operating conditions (SRS front airbags and SRS seat cushion airbag)


- The SRS front airbags and SRS seat cushion airbag will deploy if the severity of the frontal impact is above the designed threshold level, comparable to an approximate 15 mph (25 km/h) collision when the vehicle impacts straight into a fixed barrier that does not move or deform.

However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or if the vehicle is involved in an underride collision (e.g. a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck etc.).

- It is possible that in some collisions where the forward deceleration of the vehicle is very close to the designed threshold level, the front SRS airbags, SRS seat cushion airbag and the seat belt pretensioners may not activate together.
- The SRS front passenger airbag will not activate if there is no passenger sitting in the front passenger seat. However, the front SRS passenger airbag may deploy if luggage is put in the seat, or the seat belt is fastened, even if the seat is unoccupied.(→P. 94)

■ Conditions under which the SRS airbags may deploy (inflate), other than a collision (SRS front airbags and SRS seat cushion airbag)

The SRS front airbags and SRS seat cushion airbag may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

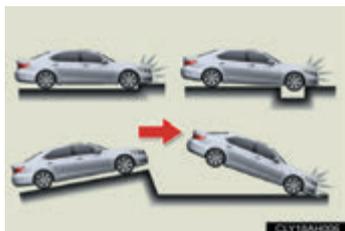


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or vehicle falling

■ Operating conditions (SRS side and curtain shield airbags)

- The SRS side airbags and curtain shield airbags are designed to inflate when the passenger compartment is subjected to certain types of severe impacts from the side.
- The front SRS side airbag on the passenger seat will not activate if there is no passenger sitting in the front passenger seat. However, the front SRS side airbag on the passenger seat may deploy if luggage is put in the seat, even if the seat is unoccupied. (→P. 94)

■ Types of collisions that may not deploy the SRS airbags (front SRS airbags and SRS seat cushion airbag)


The front SRS airbags and SRS seat cushion airbag are generally not designed to inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the front SRS airbags and SRS seat cushion airbag may occur.

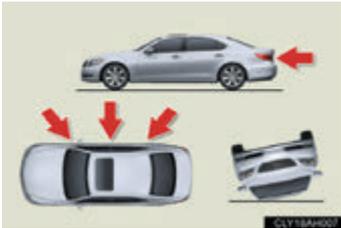

- Collision from the side
- Collision from the rear
- Vehicle rollover

■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)

The SRS side airbag and curtain shield airbag system may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

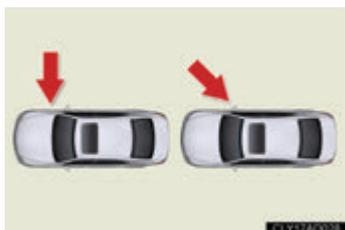

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

The SRS side airbags and curtain shield airbags are not generally designed to inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.




- Collision from the front
- Collision from the rear
- Vehicle rollover


■ When to contact your Lexus dealer

In the following cases, contact your Lexus dealer as soon as possible. Do not disconnect the 12-volt battery cables before contacting them.

- Any of the SRS airbags has been inflated.

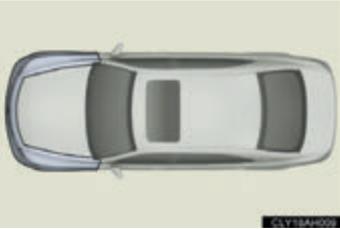

- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS airbags to inflate.

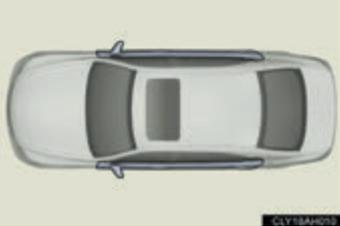

- A portion of the doors is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side airbags and curtain shield airbags to inflate.



- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.



- Relaxation seat on 4-seat models: The seat cushion surface is scratched, cracked, or otherwise damaged.



- The surface of the seats with the side air-bag is scratched, cracked, or otherwise damaged.
- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked, or otherwise damaged.

 CAUTION**■ SRS airbag precautions**

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly. The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag. The National Highway Traffic Safety Administration (NHTSA) advises:

Since the risk zone for driver airbag is the first 2 - 3 in. (50 - 75 mm) of inflation, placing yourself 10 in. (250 mm) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 10 in. (250 mm) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat.

Although vehicle designs vary, many drivers can achieve the 10 in. (250 mm) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended by NHTSA above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

! CAUTION

■ SRS airbag precautions



- If the seat belt extender has been connected to the driver's seat belt buckle but the seat belt extender has not also been fastened to the latch plate of the driver's seat belt, the SRS driver's airbag system will judge that the driver is wearing the seat belt even though the seat belt has not been connected. In this case, the SRS driver's airbag may not activate correctly in a collision, resulting in death or serious injury in the event of a collision. Be sure to wear the seat belt with the seat belt extender.
- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are the safest for infants and children. (→P.143)

 CAUTION

 SRS airbag precautions


- Do not sit on the edge of the seat or lean against the dashboard.
- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not drive the vehicle while the driver or passenger have items resting on their knees.
- Do not lean against the door, the roof side rail or the front, side and rear pillars.
- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.

! CAUTION

■ SRS airbag precautions



- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad or lower portion of the instrument panel.

These items can become projectiles when SRS driver, front passenger and knee airbags deploy.



- Do not attach anything to areas such as the door, windshield glass, side door glass, front and rear pillars, roof side rail or assist grip.

- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and seriously injure or kill you, should the SRS curtain shield airbag deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags and SRS seat cushion airbag inflate as they may interfere with inflation of the SRS airbags.
- Do not strike or apply significant levels of force to the area of the SRS airbag components shown on P.126.
Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front pillar garnish, are damaged or cracked, have them replaced by your Lexus dealer.

 **CAUTION****■ SRS airbag precautions**

- Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the SRS front passenger airbag may not deploy in the event of a collision.

■ Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting your Lexus dealer.

The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of snow plows, winches, etc. to the front grille (bull bars, kangaroo bar, etc.)
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios or CD players
- Modifications to your vehicle for a person with a physical disability

1-8. Safety information

Front passenger occupant classification system

Your vehicle is equipped with a front passenger occupant classification system. This system detects the conditions of the front passenger seat and activates or deactivates the devices for the front passenger.



- 1 SRS warning light
- 2 Front passenger's seat belt reminder light
- 3 "AIR BAG OFF" indicator light
- 4 "AIR BAG ON" indicator light

Conditions and operation of the front passenger occupant classification system

■ Adult^{*1}

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG ON"
	SRS warning light	Off
	Front passenger's seat belt reminder light	Flashing ^{*2}
Devices	Front passenger airbag	Activated
	Side airbag on the right side passenger seats	
	Curtain shield airbag in the front passenger side	
	Front passenger knee airbag	
	Front passenger's seat belt pretensioner	

1

Before driving

■ Child^{*3} or child restraint system^{*4}

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF" ^{*5}
	SRS warning light	Off
	Front passenger's seat belt reminder light	Flashing ^{*2}
Devices	Front passenger airbag	Deactivated
	Side airbag on the right side passenger seats	
	Curtain shield airbag in the front passenger side	Activated
	Front passenger knee airbag	Deactivated
	Front passenger's seat belt pretensioner	Activated

■ Unoccupied

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	Not illuminated
	SRS warning light	Off
	Front passenger's seat belt reminder light	
Devices	Front passenger airbag	Deactivated
	Side airbag on the right side passenger seats	
	Curtain shield airbag in the front passenger side	Activated
	Front passenger knee airbag	Deactivated
	Front passenger's seat belt pretensioner	

■ There is a malfunction in the system

Indicator/ warning light	"AIR BAG ON" and "AIR BAG OFF" indicator lights	"AIR BAG OFF"
	SRS warning light	On
	Front passenger's seat belt reminder light	Off
Devices	Front passenger airbag	Deactivated
	Side airbag on the right side passenger seats	
	Curtain shield airbag in the front passenger side	Activated
	Front passenger knee airbag	Deactivated
	Front passenger's seat belt pretensioner	Activated

- *1: The system judges a person of adult size as an adult. When a smaller adult sits in the front passenger seat, the system may recognize him/her as a child depending on his/her physique and posture.
- *2: In the event the front passenger does not wear a seat belt
- *3: When a larger child who has outgrown a child restraint system sits in the front passenger seat, the system may recognize him/her as an adult depending on his/her physique or posture.

- *4: Never install a rear-facing child restraint system on the front passenger seat. A forward-facing child restraint system should only be installed on the front passenger seat when it is unavoidable. (→P. 143)
- *5: In case the indicator light is not illuminated, consult this manual on how to install the child restraint system properly. (→P. 148)

 **CAUTION****■ Front passenger occupant classification system precautions**

Observe the following precautions regarding front passenger occupant classification system.

Failure to do so may cause death or serious injury.

- Wear the seat belt properly.
- Make sure the front passenger's seat belt plate has not been left inserted into the buckle before someone sits in the front passenger seat.
- Make sure the "AIR BAG OFF" indicator light is not illuminated when using the seat belt extender for the front passenger seat. If the "AIR BAG OFF" indicator light is illuminated, disconnect the extender tongue from the seat belt buckle, and reconnect the seat belt. Reconnect the seat belt extender after making sure the "AIR BAG ON" indicator light is illuminated. If you use the seat belt extender while the "AIR BAG OFF" indicator light is illuminated, the front passenger airbag, side airbag on the front passenger side and front passenger knee airbag may not activate correctly, which could cause death or serious injury in the event of a collision.
- Do not put weight on the front passenger seat by putting your hands or feet on the front passenger seat seatback from the rear passenger seat.
- Do not let a rear passenger lift the front passenger seat with their feet or press on the seatback with their legs.
- Do not put objects under the front passenger seat.

CAUTION

■ Front passenger occupant classification system precautions

- Do not recline the front passenger seatback so far that it touches a rear seat. This may cause the “AIR BAG OFF” indicator light to be illuminated, which indicates that the passenger’s airbags will not deploy in the event of a severe accident. If the seatback touches the rear seat, return the seatback to a position where it does not touch the rear seat. Keep the front passenger seatback as upright as possible when the vehicle is moving. Reclining the seatback excessively may lessen the effectiveness of the seat belt system.
- If an adult sits in the front passenger seat, the “AIR BAG ON” indicator light is illuminated. If the “AIR BAG OFF” indicator is illuminated, ask the passenger to sit up straight, well back in the seat, feet on the floor, and with the seat belt worn correctly. If the “AIR BAG OFF” indicator still remains illuminated, either ask the passenger to move to the rear seat, or if that is not possible, move the front passenger seat fully rearward.
- When it is unavoidable to install a forward-facing child restraint system on the front passenger seat, install the child restraint system on the front passenger seat in the proper order. (→P. 148)
- Do not modify or remove the front seats.
- Do not kick the front passenger seat or subject it to severe impact. Otherwise, the SRS warning light may come on to indicate a malfunction of the detection system. In this case, contact your Lexus dealer immediately.
- Child restraint systems installed on the rear seat should not contact the front seatbacks.
- Do not use a seat accessory, such as a cushion or seat cover, that covers the seat cushion surface.
- Do not modify or replace the upholstery of the front seat.

Child restraint systems

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt.

The laws of all 50 states of the U.S.A. and Canada now require the use of child restraint systems.

Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one to the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.

General installation instructions are provided in this manual. (→P. 148)

Types of child restraints

Child restraint systems are classified into the following 3 types according to the age and size of the child.

- ▶ Rear facing — Infant seat/convertible seat




- ▶ Forward facing — Convertible seat



- ▶ Booster seat



■ When installing a child restraint system on a rear outboard seat (power rear seat only)

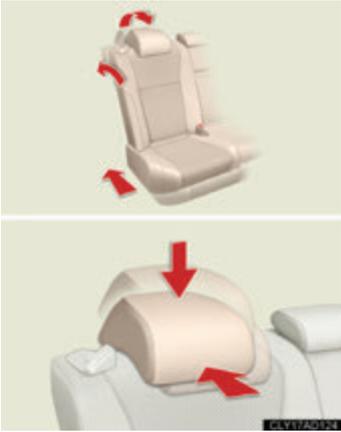

When using a child restraint system in a rear outboard seat, adjust the following:

- The upper seatback to the rearmost position
- 4-seat models: The seatback to the most upright position
- The seat cushion to the fully rearward position
- The head restraint to the lowest and rearmost position

■ Selecting an appropriate child restraint system

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 94)

CAUTION

■ Child restraint precautions

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Lexus strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restraint system on the front passenger seat even if the "AIR BAG OFF" indicator light is illuminated. In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.
- A forward-facing child restraint system may be allowed to be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat. Adjust the seat-back as upright as possible and always move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not use the seat belt extender when installing a child restraint system on the front or rear passenger seat. If installing a child restraint system with the seat belt extender connected to the seat belt, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.

 **CAUTION****■ Child restraint precautions**

- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front pillar or roof side rail from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or accident.

■ Child restraint lock function belt precaution

Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

■ When the child restraint system is not in use

- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the restraint unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the trunk. This will prevent it from injuring passengers in the event of a sudden stop, sudden swerve or accident.

1-8. Safety information

Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the outside rear seats using the LATCH anchors or a seat belt. Attach the top tether strap when installing a child restraint.

The lap/shoulder belt can be used if your child restraint system is not compatible with the LATCH (Lower Anchors and Tethers for Children) system.



Child restraint LATCH anchors

LATCH anchors are provided for the rear outside seats. (Buttons displaying the location of the anchors are attached to the seats.)



Seat belts equipped with a child restraint locking mechanism (ALR/ELR belts except driver's seat belt) (→P. 94)



Anchor bracket (for top tether strap)

Anchor brackets are provided for each rear seat.

Installation with LATCH system

STEP 1 Vehicles with power rear seat: Adjust the seatback as upright as possible.

► Type A



STEP 2 Widen the gap between the seat cushion and seatback slightly.

STEP 3 Latch the hooks of the lower straps onto the LATCH anchors.

STEP 4 If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

For owners in Canada:
The symbol on a child restraint system indicates the presence of a lower connector system.

1

Before driving

► Type B



STEP 2 Widen the gap between the seat cushion and seat-back slightly.

STEP 3 Latch the buckles onto the LATCH anchors.

STEP 4 If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchors.

For owners in Canada:
The symbol on a child restraint system indicates the presence of a lower connector system.

Installing child restraints using a seat belt (child restraint lock function belt)


■ Rear-facing — Infant seat/convertible seat

STEP 1




Place the child restraint system on the rear seat facing the rear of the vehicle.

STEP 2

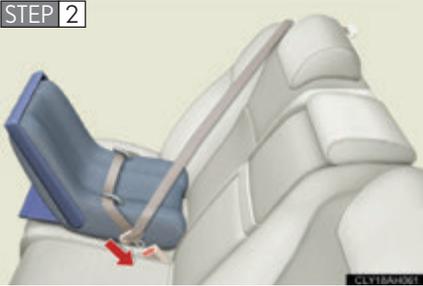

Run the seat belt through the child seat and insert the plate into the buckle. Make sure that the belt is not twisted.

STEP 3

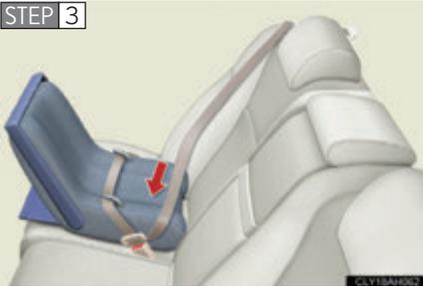

Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.

1

Before driving

STEP 4



While pushing the child restraint system down into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

■ Forward-facing — Convertible seat

STEP 1



Place the child restraint system on the seat facing the front of the vehicle.

STEP 2



Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

STEP 3



Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.

STEP 4

While pushing the child restraint system into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

STEP 5

If the child restraint has a top tether strap, the top tether strap should be latched onto the top tether strap anchor.

■ Booster seat

STEP 1

Place the booster seat on the seat facing the front of the vehicle.

STEP 2

Sit the child in the booster seat. Fit the seat belt to the booster seat according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

Check that the shoulder belt is correctly positioned over the child's shoulder, and that the lap belt is as low as possible. (→P. 94)

Removing a child restraint installed with a seat belt



Push the buckle release button and fully retract the seat belt.

Child restraint systems with a top tether strap



Secure the child restraint using a seat belt or lower anchors, and move the head restraint in place at the lowest position. (→P. 92)



Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top tether strap.

Make sure the top tether strap is securely latched.

■ Laws and regulations pertaining to anchorages

The LATCH system conforms to FMVSS225 or CMVSS210.2.

Child restraint systems conforming to FMVSS213 or CMVSS213 specifications can be used.

This vehicle is designed to conform to the SAE J1819.

CAUTION

■ When installing a booster seat

To prevent the belt from going into ALR lock mode, do not fully extend the shoulder belt. (→P. 96)

ALR mode causes the belt to tighten only. This could cause injury or discomfort to the child.

! CAUTION

■ When installing a child restraint system

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving or an accident.



- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat.
- Adjust the front passenger seat or rear seats so that it does not interfere with the child restraint system.
- Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible even if the "AIR BAG OFF" indicator light is illuminated. Failure to do so may result in death or serious injury if the airbags deploy (inflate).
- 5-seat models: When installing a child restraint system in the rear center seat, adjust both seat seatbacks as upright as possible. The seatbacks must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.
- When a booster seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failure to do so may result in death or serious injury in the event of sudden braking, sudden swerving or an accident.
- When using the LATCH anchors for a child restraint system, adjust the seatback as upright as possible.
- Ensure that the belt and tab are securely locked and the seat belt is not twisted.

 **CAUTION****■ When installing a child restraint system**

- Push and pull the child restraint system from side to side and forward to be sure it is secure.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.

■ Do not use a seat belt extender

If a seat belt extender is used when installing a child restraint system, the seat belt will not securely hold the child restraint system, which could cause death or serious injury to the child or other passengers in the event of sudden braking, sudden swerving or an accident.

■ To correctly attach a child restraint system to the anchors

When using the LATCH anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.

2-1. Driving procedures

Driving the vehicle.....	160
Power (ignition) switch	169
EV drive mode.....	173
Transmission.....	175
Turn signal lever	179
Parking brake	180
Brake Hold	182
Horn	184

2-2. Instrument cluster

Gauges and meters	185
Indicators and warning lights	188
Multi-information display	191

**2-3. Operating the lights and
windshield wipers**

Headlight switch.....	195
Fog light switch	198
Windshield wipers and washer	199
Headlight cleaner switch....	202

**2-4. Using other driving
systems**

Cruise control.....	203
Dynamic radar cruise control	206
Intuitive parking assist.....	217
Electronically modulated air suspension.....	226
Rear view monitor system.....	228
Driving assist systems	231
Pre-Collision System.....	238
Pre-Collision System (with camera sensor)	242

2-5. Driving information

Cargo and luggage	251
Vehicle load limits.....	254
Winter driving tips	256
Trailer towing	260
Dinghy towing.....	261

2-1. Driving procedures

Driving the vehicle

The following procedures should be observed to ensure safe driving:

■ Starting the hybrid system (→P. 169)

■ Driving

STEP 1 With the brake pedal depressed, shift the shift lever to “D”.
(→P.175)

STEP 2 Release the parking brake. (→P.180)

STEP 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

■ Stopping

STEP 1 With the shift lever in “D”, depress the brake pedal.

STEP 2 If necessary, set the parking brake.

When the vehicle is stopped for an extended period of time, shift the shift lever to “P”.
(→P.175)

■ Parking the vehicle

STEP 1 With the shift lever in “D”, depress the brake pedal.

STEP 2 Set the parking brake. (→P.180)

STEP 3 Shift the shift lever to “P”. (→P.175)

STEP 4 Press the “POWER” switch and stop the hybrid system.

STEP 5 Lock the door, making sure that you have the electronic key on your person.

Starting on a steep uphill

STEP 1 Set the parking brake and shift the shift lever to “D”.

STEP 2 Gently depress the accelerator pedal.

STEP 3 Release the parking brake.

■ Starting off on a hill

Hill-start assist control will operate. (→P. 231)

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

■ Breaking in your new Lexus

To extend the life of the vehicle, the following precautions are recommended to observe:

- For the first 186 miles (300 km):
Avoid sudden stops.
- For the first 621 miles (1000 km):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in the low range in the "S" position.
 - Do not drive at a constant speed for extended periods.

■ Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have your Lexus dealer perform the bedding down.

■ Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 648)

■ For efficient use

- Put the shift lever into “D” when driving.
In the “N” position, the gasoline engine operates but electricity cannot be generated. The hybrid battery (traction battery) will be discharged, requiring unnecessary engine power to recharge.
- Drive your vehicle smoothly.
Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration.
Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor acceleration. Battery power can be restored by driving with the accelerator pedal slightly released.
- Put the shift lever into “P” when parking.
In the “N” position, the hybrid battery (traction battery) does not recharge. Leaving the shift lever in the “N” position for an extended period of time may discharge the hybrid battery. The vehicle cannot run if the hybrid battery is discharged.

 **CAUTION**
■ When starting the vehicle

Always keep your foot on the brake pedal while stopped with the hybrid system operating. This prevents the vehicle from creeping.

■ When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
 - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident that could result in death or serious injury.
 - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
 - Make sure to keep a correct driving posture even when moving the vehicle only slightly, allowing you to depress the brake and accelerator pedals properly.
 - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- The driver should pay attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). Because there is no engine noise, the pedestrians may misjudge the vehicle's movement.
- Do not drive the vehicle over or stop the vehicle near flammable materials.
- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in "R".
Doing so may result in an accident or damage to the vehicle.
- If the smell of exhaust is noticed inside the vehicle, open the windows and check that the trunk is closed. Large amounts of exhaust in the vehicle can cause driver drowsiness and an accident, resulting in death or a serious health hazard. Have the vehicle inspected by your Lexus dealer immediately.
- Do not under any circumstances shift the shift lever to "P" or "R" while the vehicle is moving.
Doing so can cause significant damage to the transmission system and may result in a loss of vehicle control.
- Do not shift the shift lever to "N" while the vehicle is moving.
Doing so may cause insufficient engine braking and lead to an accident.

CAUTION

- Do not turn the hybrid system off while driving.
The power steering system will not operate properly if the hybrid system is off.
 - Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 176)
 - When stopped on an inclined surface, use the brake pedal and parking brake to prevent the vehicle from rolling backward or forward and causing an accident.
 - Do not adjust the position of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
Doing so may result in a loss of vehicle control that can cause accidents that may result in death or serious injury.
 - Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle, as this may result in death or serious injury.
 - Do not drive the vehicle off-road.
This is not a AWD vehicle designed for real off-road driving. Proceed with all due caution if it becomes unavoidable to drive off-road.
 - Do not drive across river crossings or through other bodies of water.
This may cause electric/electronic components to short circuit, damage the hybrid system or cause other serious damage to the vehicle.
 - Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 85 mph (140 km/h) unless your vehicle has high-speed capability tires. Driving over 85 mph (140 km/h) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.
- **When driving on slippery road surfaces**
- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle, resulting in an accident.
 - Sudden changes in engine speed, such as engine braking caused by up-shifting or down-shifting, may cause the vehicle to skid, resulting in an accident.
 - After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected, resulting in an accident.

 **CAUTION**
■ When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed.

This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

■ When the vehicle is stopped

- Do not race the hybrid system.

If the vehicle is in any gear other than “P” or “N”, the vehicle may accelerate suddenly and unexpectedly, and may cause an accident.

- Do not leave the vehicle with the hybrid system on for a long time.

If such a situation cannot be avoided, park the vehicle in an open space and check that exhaust fumes do not enter the vehicle interior.

- Always keep a foot on the brake pedal while the hybrid system is operating to prevent an accident caused by the vehicle moving.

■ When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.

Doing so may result in the following:

- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of eye glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.

- Always apply the parking brake, shift the shift lever to “P”, stop the hybrid system and lock the vehicle.

Do not leave the vehicle unattended while the hybrid system is operating.

- Do not touch the exhaust pipes and the rear bumper diffusers while the hybrid system is operating or immediately after turning the hybrid system off.

Doing so may cause burns.

- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.

CAUTION

■ Exhaust gases

Exhaust gases include harmful carbon monoxide (CO) that is colorless and odorless. Inhaling exhaust gases may lead to death or a serious health hazard.

- If the vehicle is in a poorly ventilated area, stop the hybrid system. In a closed area, such as a garage, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.
- The exhaust should be checked occasionally. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Lexus dealer. Failure to do so may allow exhaust gases to enter the vehicle, resulting in death or a serious health hazard.

■ When taking a nap in the vehicle

Always turn the hybrid system off. Otherwise, you may accidentally move the shift lever or depress the accelerator pedal, which could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

■ When braking the vehicle

- When the brakes are wet, drive more cautiously. Braking distance increases when the brakes are wet, and may cause one side of the vehicle to brake differently than the other side. Also the parking brake may not securely hold the vehicle.
- If the electronically controlled brake system does not operate, do not follow other vehicles closely and avoid downhills or sharp turns that require braking. In this case, even though the brakes still operate, the brake pedal should be depressed more firmly than usual. Braking distance also becomes longer.
- The brake system consists of 3 individual hydraulic systems: if one of the systems fails, the others will still operate. In this case, the brake pedal should be depressed more firmly than usual and braking distance becomes longer. If this happens, do not continue to drive the vehicle. If the brake system warning light (red indicator) comes on together with buzzer sound while driving, immediately stop the vehicle in a safe place and contact your Lexus dealer.

 CAUTION**■ If the vehicle becomes stuck or bogged**

Do not spin the wheels recklessly when any of the tires is up in the air, or stuck in sand or mud, etc. This may damage the drive system components or propel the vehicle forward (or in another direction) and cause an accident.

 NOTICE**■ When driving the vehicle**

Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

■ When parking the vehicle

Always put the shift lever in "P". Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

■ Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for a long time.

Doing so may damage the power steering motor.

- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

■ If a brake pad wear warning message is displayed

Have your Lexus dealer check and replace the brake pads as soon as possible. The rotor damage can result if the pads are not replaced when needed.

Moderate levels of the brake pad and disc wear allow enhanced front braking power. As a result, the discs may wear more quickly than conventional brake discs. Therefore, when replacing the brake pads, Lexus recommends that you also have the thickness of the discs measured.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or that of the brake discs are exceeded.

NOTICE

■ If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds.
- The vehicle will behave abnormally.

Information on what to do in case of a flat tire. (→P. 620)

■ When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Lexus dealer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, hybrid system transmission, differential, etc.
- Lubricant condition for the propeller shaft, bearings and suspension joints (where possible) and the function of all joints, bearings, etc.

2-1. Driving procedures

Power (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes “POWER” switch modes.

■ Starting the hybrid system

STEP 1 Check that the parking brake is set.

STEP 2 Check that the shift lever is set in “P”.

STEP 3 Sit in the driver’s seat and firmly depress the brake pedal.

The “POWER” switch indicator turns green.

STEP 4



Press the “POWER” switch.

After a while, the “READY” indicator comes on with a beep sound.

The vehicle can move when the “READY” indicator is on even if the engine is stopped.

The hybrid system can be started from any mode.

■ Changing “POWER” switch modes

Modes can be changed by pressing the “POWER” switch with the brake pedal released. (The mode changes each time the switch is pressed.)



1 OFF*

Emergency flashers can be used.

2 ACCESSORY mode

Some electrical components such as the audio system can be used.

The “POWER” switch indicator turns amber.

3 ON mode

All electrical components can be used.

The “POWER” switch indicator turns amber.

*: If the shift lever is in a position other than “P” when turning off the hybrid system, the “POWER” switch will be turned to ACCESSORY mode, not to OFF.

■ **If the hybrid system does not start**

The immobilizer system may not have been deactivated. (→P. 117)

■ **When the steering lock cannot be released**



The green indicator light on the “POWER” switch will flash and a message will be shown on the multi-information display. Press the “POWER” switch again while turning the steering wheel left and right.

■ **When the “POWER” switch indicator flashes in amber**

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ **If the “READY” indicator does not come on**

If the “READY” indicator does not come on when you press the “POWER” switch with the shift lever in “P” and the brake pedal depressed, contact your Lexus dealer immediately.

■ **Auto power off function**

If the vehicle is left in ACCESSORY mode for more than an hour with the shift lever in “P”, the “POWER” switch will automatically turn off.

■ **When the ambient temperature is low, such as during winter driving conditions**

It may take time until the “READY” indicator comes on.

■ **Sounds and vibrations specific to a hybrid vehicle**

→P. 32

■ **When the hybrid system is malfunctioning**

→P. 609

■ **Electronic key battery depletion**

→P. 52

■ **When the electronic key battery is discharged**

→P. 559

■ **Conditions affecting operation**

→P. 50

■ **Note for the entry function**

→P. 53

CAUTION

■ **When starting the hybrid system**

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances. Doing so may cause an accident resulting in death or serious injury.

■ **Stopping the hybrid system in an emergency**

If you want to stop the hybrid system in an emergency while driving the vehicle, push and hold the "POWER" switch for more than 3 seconds. However, do not touch the "POWER" switch while driving except in an emergency. If the hybrid system stops while the vehicle is being driven, this could lead to an unexpected accident.

NOTICE

■ **To prevent the 12-volt battery from being discharged**

Do not leave the "POWER" switch in ACCESSORY or ON mode for long periods of time without the hybrid system on.

■ **When starting the hybrid system**

- Do not race a cold hybrid system.
- If the hybrid system becomes difficult to start, have the hybrid system checked immediately by your Lexus dealer.

2-1. Driving procedures

EV drive mode

In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning or late at night, or indoor parking lot etc. without concern for noises and gas emissions.



On/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return to normal driving (using the gasoline engine and electric motor [traction motor]).

2

When driving

■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
The vehicle has been left in temperatures lower than about 32°F (0°C) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
An "Energy Monitor" display of level 3 or lower may indicate a low battery level. (→P. 34)
- Vehicle speed is about 25 mph (40 km/h) or more.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

■ Automatic cancelation of EV drive mode

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound and the EV drive mode indicator will flash and go off.

- The hybrid battery (traction battery) becomes low.
The remaining battery level indicated in the “Energy Monitor” display is level 2 or lower. (→P. 34)
- Vehicle speed becomes more than about 25 mph (40 km/h).
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

When it is possible to inform the driver of automatic cancelation in advance, a prior notice screen will appear on the multi-information display.

■ Possible driving distance when driving in EV drive mode

Possible driving distance when driving in EV drive mode is up to about 1/2 mile (1 km) if driven at a speed of about 25 mph (40 km/h) or less. (Possible driving distance depends on the hybrid battery [traction battery] level and driving conditions.)

■ Fuel economy

LS600hL is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

CAUTION

■ Caution while driving

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

Transmission

Select a shift position appropriate for the driving conditions.

■ Shifting the shift lever



← While the “POWER” switch is in ON mode, depress the brake pedal and move the shift lever.

■ Shift position uses


Shift position	Function
P	Parking the vehicle or starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving*1
S	“S” mode driving*2 (→P.176)

*1: To improve fuel consumption and reduce noises, set the shift lever in the “D” position for normal driving.

*2: By selecting shift ranges using “S” mode, you can control engine braking forces.

■ Selecting a driving mode

The following patterns can be selected to suit current driving and operating conditions.

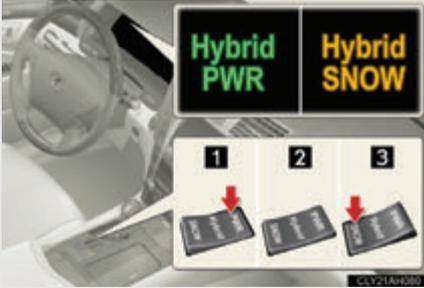

- 1 Power mode**
For powerful acceleration and driving in mountainous regions
- 2 Normal mode**
- 3 Snow mode**
For accelerating and driving on slippery road surfaces, such as on snow
Press "SNOW" to return to normal mode.

Changing shift ranges in "S" mode

Shift the shift lever to the "S" position and operate the shift lever.



- 1 Upshifting**
- 2 Downshifting**

The initial shift range in "S" mode is set automatically to "4", "5", "6" or "7" according to vehicle speed.

■ Shift ranges and their functions

- You can choose from 8 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine revolutions will also increase.

■ Downshifting restrictions in “S” mode

The shift lever cannot be downshifted if the following speeds are exceeded. (The warning buzzer will sound twice in this situation.)

Downshifting	Maximum speed mph (km/h)
7→6	120 (193)
6→5	96 (154)
5→4	76 (122)
4→3	55 (89)
3→2	47 (76)
2→1	35 (57)

■ When in heavy traffic

If the shift lever is in “N”, the hybrid battery (traction battery) will not be charged. To help prevent the battery from discharging, avoid putting the shift lever in “N” for an extended period of time.

■ “S” mode

- When the shift range is “6” or lower, holding the shift lever toward “+” sets the shift range to “8”.
- When the shift range is “6” or higher, moving the shift lever toward “-” may change down by 2 shift ranges or more depending on driving conditions.
- To prevent the engine from over-revving, upshifting may automatically occur.

■ When driving with the cruise control system

Engine braking will not occur in "S" mode, even when downshifting to "7", "6", "5" or "4". (→P. 203, 206)

■ Snow mode automatic deactivation


Snow mode is automatically deactivated if the "POWER" switch is turned OFF after driving in snow mode.

■ If the shift lever cannot be shifted from "P"

→P. 630

2-1. Driving procedures

Turn signal lever

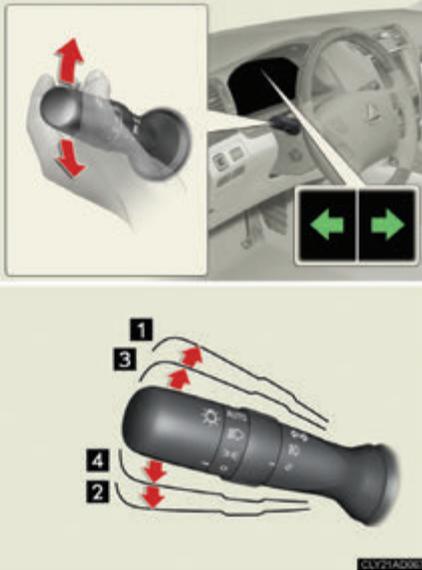

- 1 Right turn
- 2 Left turn
- 3 Move and hold the lever part-way to signal a lane change.
The right hand signal will flash until you release the lever.
- 4 Move and hold the lever part-way to signal a lane change.
The left hand signal will flash until you release the lever.

■ Turn signals can be operated when

The "POWER" switch is in ON mode.

■ If the indicators flash faster than usual

Check that a light bulb in the turn signal lights has not burned out.

2-1. Driving procedures

Parking brake

For the parking brake, an electrical parking brake system is adopted.

■ Manual mode



1 Sets the parking brake

If the parking brake switch is operated when the “POWER” switch is not in ON mode, the parking brake indicator light will come on and stay on for a while.

Press and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

2 Releases the parking brake

Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

■ Automatic mode



On/off

The parking brake is set automatically according to shift lever operation.

Operate the shift lever with the brake pedal depressed.

- When the shift lever is moved out of “P”
The parking brake will be released.
- When the shift lever is moved into “P”
The parking brake will be set.

■ Parking brake operation

- When the “POWER” switch is not in ON mode, the parking brake cannot be released using the parking brake switch.
- When the “POWER” switch is not in ON mode, automatic mode (automatic brake setting and releasing) is not available.
- If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

■ Parking brake indicator light

When the “POWER” switch is turned OFF with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ When there is a malfunction in the system

Warning lights and/or warning messages will turn on or flash. (→P. 608, 617)
Depending on the condition, the parking brake indicator light may flash.

NOTICE

■ When parking the vehicle

Before you leave the vehicle, set the parking brake, shift the shift lever to “P” and make sure that the vehicle does not move.

■ When the system malfunctions

Stop the vehicle in a safe place and check the warning messages.

■ When the parking brake cannot be released due to a malfunction

Use the parking brake release tool to manually release the parking brake.
(→P. 631)

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

2-1. Driving procedures

Brake Hold

The brake hold system keeps the brake applied when the shift lever is in “D”, “S” or “N” with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in “D” or “S” to allow smooth start off.



Turns the brake hold system on

The brake hold standby indicator comes on. While the system is holding the brake, the brake hold operated indicator light comes on.

■ Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The trunk or hood is not closed.
- The driver's door is not closed.
- The driver is not wearing the seat belt.

If any of the conditions above are detected when the brake hold system is enabled, the system will turn off and the brake hold operated indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

■ Brake hold function

- If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. The multi-information display will inform the driver of this situation.

■ When the parking brake is set automatically while the system is holding the brakes

The parking brake will not be released automatically. Release the parking brake by operating the parking brake switch, making sure that the parking brake indicator light goes off. (→P. 180)

■ When there is a malfunction in the system

Warning lights and/or warning messages will turn on or flash. (→P. 608, 617)

CAUTION

■ When stopped on a slippery road

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.

NOTICE

■ When parking the vehicle

The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the "POWER" switch OFF while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the "POWER" switch, depress the brake pedal, set the parking brake and shift the shift lever to "P".

2-1. Driving procedures

Horn



To sound the horn, press on or close to the  mark.

2-2. Instrument cluster

Gauges and meters



The units used on the speedometer and the tachometer gauge display may differ depending on the model/type.

The following gauges, meters and display illuminate when the “POWER” switch is in ON mode:

1 Tachometer

Displays the engine speed in revolutions per minute

2 Multi-information display

→P.191

3 Speedometer

Displays the vehicle speed

4 Fuel gauge

Displays the quantity of fuel remaining in the tank

5 Trip meter and trip meter reset buttons

6 Odometer


Displays the total distance the vehicle has been driven

7 Trip meter

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters “A” and “B” can be used to record and display different distances independently.

- 8 Instrument panel light control buttons
- 9 Hybrid system indicator
Displays hybrid system output or regeneration level

Trip meter and trip meter reset buttons

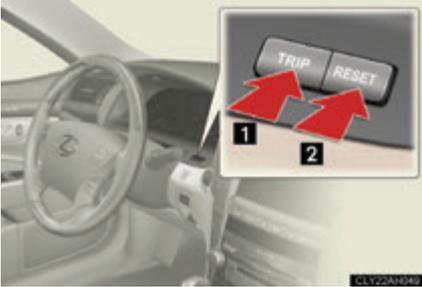

- 1 Changes the display
- 2 Resets the trip meter currently displayed to "0"

Instrument panel light control buttons

The brightness of the instrument panel lights can be adjusted.



- 1 Darker
- 2 Brighter

■ Hybrid system indicator

- By keeping the indicator needle within the “ECO” zone, more fuel-efficient driving can be achieved.
- The “CHG” zone indicates regeneration* status. Regenerated energy will be used to charge the battery.

*: When used in this manual, “regeneration” refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ Engine speed

On hybrid vehicles, engine speed is precisely controlled in order to help improve fuel efficiency and reduce exhaust emissions etc.

There are times when the engine speed that is displayed may differ even when vehicle operation and driving conditions are the same.



NOTICE

■ To prevent damage to the engine and its components

Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.

2-2. Instrument cluster

Indicators and warning lights

The indicator and warning lights on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

► Instrument cluster



The units used on the speedometer and the tachometer gauge display may differ depending on the model/type.

► Center panel



■ Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator
(→P. 179)



Headlight high beam indicator
(→P. 195)



(U.S.A.)

Headlight indicator
(→P. 195)



(CANADA)

Tail light indicator
(→P. 195)



Front fog light indicator
(→P. 198)



"Hybrid PWR" indicator
(→P. 176)



"Hybrid SNOW" indicator
(→P. 176)



"SPORT" mode indicator
(→P. 226)



"COMFORT" mode indicator
(→P. 226)



"HEIGHT HIGH" indicator
(→P. 226)



Cruise control indicator
(→P. 203, 206)



EV drive mode indicator
(→P. 173)



*

"AFS OFF" indicator
(→P. 196)



*

Slip indicator
(→P. 232)



*

Brake hold standby indicator
(→P. 182)



*

Brake hold operated indicator
(→P. 182)



(U.S.A.)

Parking brake indicator
(→P. 180)



(CANADA)

Parking brake indicator
(→P. 180)




*

SRS airbag on-off indicator
(→P. 138)

Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems. (→P. 608)

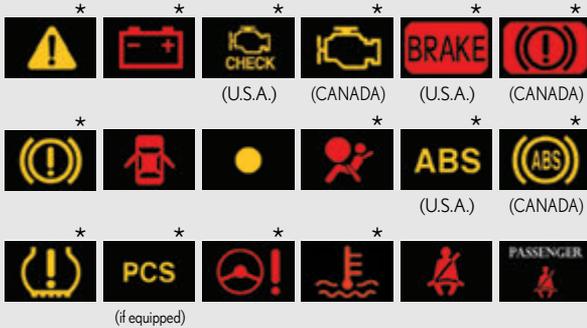

*: These lights turn on when the “POWER” switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Lexus dealer.

CAUTION

If a safety system warning light does not come on

Should a safety system light such as ABS and the SRS airbag warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Lexus dealer immediately if this occurs.

Multi-information display

The multi-information display presents the driver with a variety of driving-related data, including the current outside air temperature.



- Trip information (→P. 192)

Displays cruising range, fuel consumption and other cruising related information

- Intuitive parking assist display* (→P. 217)

- Dynamic radar cruise control display* (if equipped) (→P. 206)

- Shift position and shift range (→P. 175)


- “READY” indicator (→P. 169)

- Warning messages (→P. 617)

Automatically displayed when a malfunction occurs in one of the vehicle’s systems

*: Automatically displayed when the system is used

Trip information

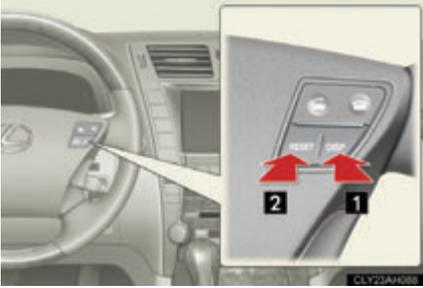

1 “DISP” switch

Items displayed can be switched by pressing the “DISP” switch.

2 “RESET” switch

■ Outside temperature

Displays the outside air temperature

The temperature range that can be displayed is from -40°F (-40°C) to 122°F (50°C).

■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.

■ Energy monitor

Displays the status of the hybrid system (→P. 34)

■ Power monitor

Displays the instantaneous output from the hybrid system in approximate kilowatts

■ Engine coolant temperature

Displays the engine coolant temperature

■ Current fuel consumption

Displays the current rate of fuel consumption

■ Average fuel consumption after refueling

Displays the average fuel consumption since the vehicle was last refueled

■ Distance after refueling

Displays the distance the vehicle has been driven since the vehicle was last refueled

■ Elapsed time

Displays the elapsed time since it was last reset

The function can be reset by pressing the “RESET” switch when the elapsed time is displayed.

■ Average vehicle speed

Displays the average vehicle speed since the hybrid system was started or the function was reset

The function can be reset by pressing the “RESET” switch when the average vehicle speed is displayed.

■ Tire inflation pressure

Displays inflation pressure of each tire. There is no correlation between the order of the displayed values and the tire positions.

It may take a few minutes to display the tire inflation pressure after the “POWER” switch is turned to ON mode. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.

■ Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 12 mph [20 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

■ To turn off the background images on the trip information screen

When information is displayed together with a background image, press the “DISP” switch for 1 second or more.

Pressing the switch again for longer than 1 second turns on the background images.

■ Tire inflation pressure

Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using other gauges.

■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

■ Customization that can be configured at Lexus dealer

Setting of available languages can be changed. (Customizable features →P. 672)

NOTICE


■ The multi-information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

2-3. Operating the lights and windshield wipers

Headlight switch

The headlights can be operated manually or automatically.

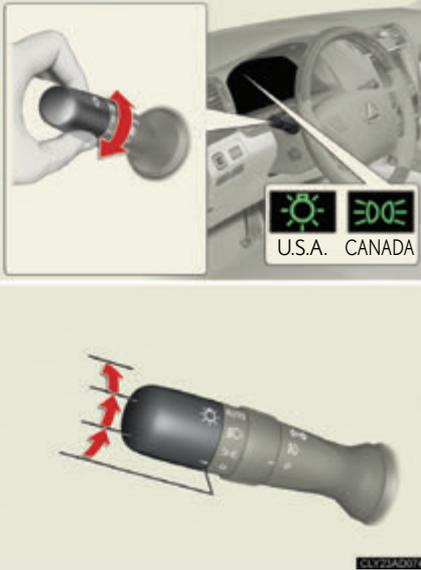

 The side marker, parking, tail, license plate and instrument panel lights turn on.


 The headlights and all lights listed above turn on.

AUTO The headlights, other exterior lights and instrument panel lights turn on and off automatically. (When the “POWER” switch is in ON mode)

2

When driving

Turning on the high beam headlights

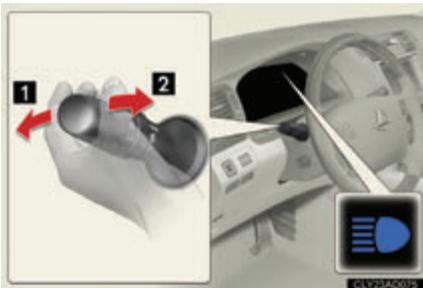

1 With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

2 Pull the lever toward you to turn on the high beams.

Release to turn them off. You can flash the high beams with the headlights on or off.

AFS

AFS (Adaptive Front-lighting System) improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.

Operates at speeds of 6 mph (10 km/h) or higher

■ Deactivating AFS




On/off

The indicator turns on when the AFS is deactivated.

■ Daytime running light system

To make your vehicle more visible to other drivers, the headlights turn on automatically (at a reduced intensity) whenever the hybrid system is started and the parking brake is released. Daytime running lights are not designed for use at night.

■ Headlight control sensor

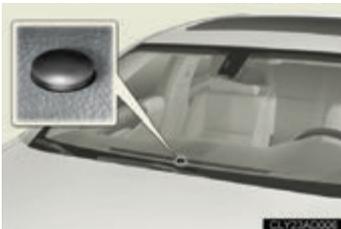

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

■ Automatic light off system

- When the headlights come on: The headlights turn off 30 seconds after a door is opened and closed if the “POWER” switch has been switched to ACCESSORY mode or turned OFF. (The lights turn off immediately if  on the key is pressed after all doors are locked.)
- When only the tail lights come on: The tail lights turn off automatically if the “POWER” switch is switched to ACCESSORY mode or turned OFF and driver’s door is opened.

To turn the lights on again, turn the “POWER” switch to ON mode, or turn the light switch off once and then back to  or  position.

■ Automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ If the “AFS OFF” indicator flashes

It may indicate a malfunction in the system. Contact your Lexus dealer.

■ Customization that can be configured at Lexus dealer

Settings (e.g. light sensor sensitivity) can be changed.
(Customizable features →P. 672)

NOTICE


■ To prevent the 12-volt battery from being discharged

Do not leave the lights on longer than necessary when the hybrid system is off.


2-3. Operating the lights and windshield wipers

Fog light switch

The fog lights improve visibility in difficult driving conditions, such as in rain or fog. They can be turned on only when the headlights are on low beam.

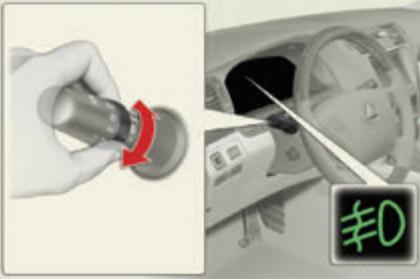

- 1 Turns the front fog lights off
- 2 Turns the front fog lights on

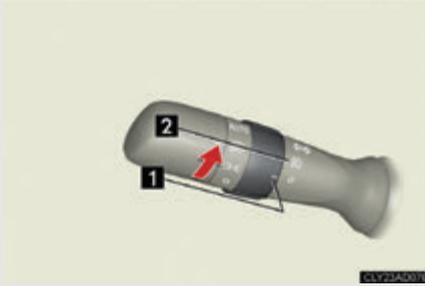

2-3. Operating the lights and windshield wipers

Windshield wipers and washer


With "AUTO" selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.




- 1 Rain-sensing wiper operation
- 2 Low speed wiper operation
- 3 High speed wiper operation
- 4 Temporary operation



- 5 Sensor sensitivity (high)
- 6 Sensor sensitivity (low)

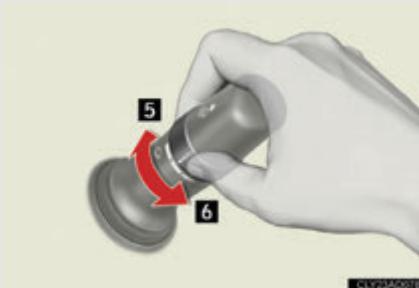

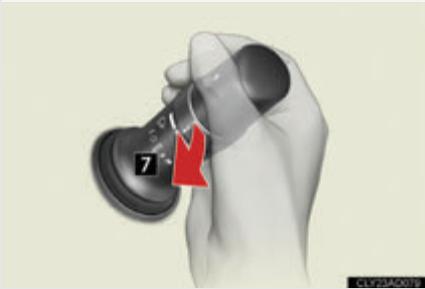

7 Wash/wipe operation

Wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)

If the headlights are on, the headlight cleaner will operate once.

■ The windshield wiper and washer can be operated when

The "POWER" switch is in ON mode.

■ Effects of vehicle speed on wiper operation

With the settings other than "AUTO" also, the time until drop prevention wiper sweep occurs is changed depending on vehicle speed.

With low speed wiper operation selected, wiper operation will be switched from low speed to intermittent wiper operation only when the vehicle is stationary. (However, when the sensor sensitivity is adjusted to the highest, the mode cannot be switched.)

■ "AUTO" mode



The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

If the wiper switch is turned to "AUTO" position while the "POWER" switch is in ON mode, the wiper operate once to show that auto mode is activated.

■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked and if there is washer fluid in the windshield washer fluid reservoir.

 CAUTION**■ Caution regarding the use of windshield wipers in auto mode**

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in auto mode. Take care that your fingers or anything else do not become caught in the windshield wipers.

 NOTICE**■ When the windshield is dry**

Do not use the wipers, as they may damage the windshield.

■ When the washer fluid tank is empty

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

2-3. Operating the lights and windshield wipers

Headlight cleaner switch

Washer fluid can be sprayed on the headlights.



Press the switch to clean the headlights.

■ The headlight cleaner can be operated when

The "POWER" switch is in ON mode and the headlight switch is turned on.

■ Windshield washer linked operation

When the windshield washer is operated with the "POWER" switch in ON mode and the headlights on, the headlight cleaner will operate once. (→P.199)

NOTICE


■ When the washer fluid tank is empty

Damage to the washer fluid pump may be caused if the switch is pressed continually.

2-4. Using other driving systems

Cruise control*

Use the cruise control to maintain a set speed without using the accelerator.

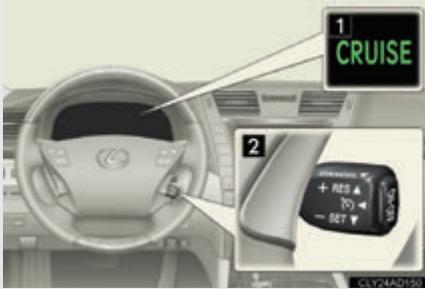

- 1 Indicator
- 2 Cruise control switch

■ Setting the vehicle speed




Press the “ON-OFF” button to activate the cruise control.

Press the button once more to deactivate the cruise control.

Accelerate or decelerate to the desired speed and push the lever down to set the speed.

*: If equipped

■ Adjusting the speed setting

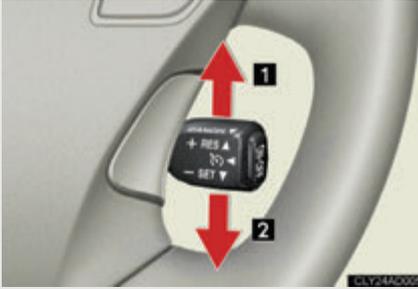

- 1 Increases speed
- 2 Decreases speed

Hold the lever until the desired speed setting is obtained.

Fine adjustment of the set speed can be made by lightly pushing the lever up or down and releasing it.

■ Canceling and resuming regular acceleration



- 1 Cancel

Push the lever toward you to cancel cruise control.

The speed setting is also canceled when the brakes are applied.

- 2 Resume

To resume cruise control and return to the set speed, push the lever up.

Resuming is available when vehicle speed is approximately 25 mph (40 km/h) or more.

■ Cruise control can be set when

- The shift lever is in "D". (Recommended)
The cruise control can also be set when the shift lever is in the "S" position and range "4", "5", "6", "7" or "8" has been selected.
- Vehicle speed is between approximately 25 mph (40 km/h) and 125 mph (200 km/h).

■ Accelerating

The vehicle can accelerate normally. After acceleration, the set speed resumes.

■ Automatic cruise control cancelation

The cruise control will stop maintaining the vehicle speed in any of the following situations:

- Actual vehicle speed falls more than 10 mph (16 km/h) below the preset vehicle speed.
At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 25 mph (40km/h).
- VSC is activated.

■ If the cruise control indicator light flashes

Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Lexus dealer.

CAUTION

■ To avoid operating the cruise control by mistake

Keep the “ON-OFF” button off when not in use.

■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.

Doing so may result in control of the vehicle being lost and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On slippery roads, such as those covered with rain, ice or snow
- On winding roads
- On steep hills

Vehicle speed may exceed the set speed when driving down a steep hill.

2-4. Using other driving systems

Dynamic radar cruise control*

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In the vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.



- 1 Indicator
- 2 Display
- 3 Cruise control switch
- 4 Distance switch

■ Set the vehicle speed



Press the "ON-OFF" button to activate the cruise control.


Press the button once more to deactivate the cruise control.

STEP 2



Accelerate or decelerate to the desired speed and push the lever down to set the speed.

Selecting conventional constant speed control mode

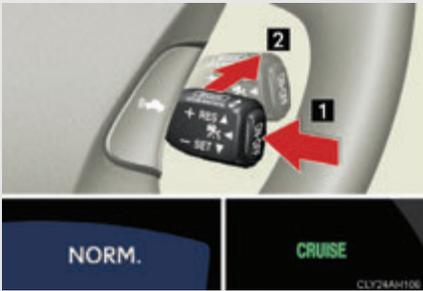

1 Press the “ON-OFF” button to activate the cruise control.

Press the button once more to deactivate the cruise control.

2 Switch to constant speed control mode.

(Push the lever away from you and hold for approximately one second.)

Vehicle-to-vehicle distance control mode is always reset when the “POWER” switch is turned to ON mode.

■ Adjusting the speed setting



1 Increases speed

2 Decreases speed

Hold the lever until the desired speed setting is displayed.

Fine adjustment of the set speed can be made by lightly pushing the lever up or down and releasing it.

■ Canceling and resuming the speed setting



1 Cancel

Push the lever toward you to cancel cruise control.

The setting is also canceled when the brakes are applied.

2 Resume

To resume cruise control and return to the set speed, push the lever up.

Resuming is available when vehicle speed is approximately 28 mph (45 km/h) or more.

■ Changing the vehicle-to-vehicle distance



Each press of the switch changes the vehicle-to-vehicle distance.

1 Long

2 Medium

3 Short


The vehicle-to-vehicle distance is set automatically to the long mode when the “POWER” switch is turned to ON mode.

A mark will be displayed to indicate the presence of the vehicle if a vehicle is running ahead of you.

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 400 ft. (120 m) ahead and to judge the distance between your vehicle and those the vehicle ahead of you.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

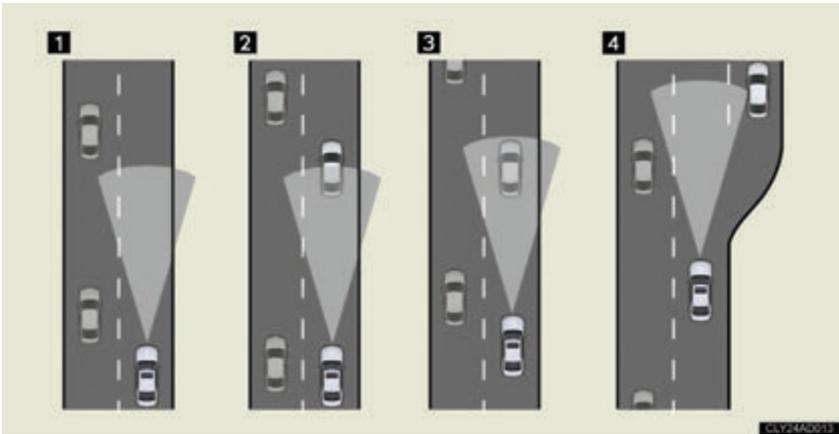

- 1 Example of constant speed cruising
When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

- 2 Example of deceleration cruising
When the vehicle ahead is driving slower than the set speed

When a vehicle is detected running ahead of you, in the same lane, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

3 Example of follow-up cruising

When following a vehicle driving slower than the set speed

The system continues follow-up cruising while adjusting for changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver.

4 Example of acceleration

When there are no longer vehicles driving slower than the set speed in the lane ahead

When the vehicle ahead of you executes a lane change, the system slowly accelerates until the set vehicle speed is reached. The system then returns to fixed speed cruising.

Approach warning

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Apply the brakes to ensure an appropriate vehicle-to-vehicle distance.

■ Warning lights and messages for dynamic radar cruise control

Warning lights and messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 617)

■ Switching modes

The mode cannot be switched to constant speed control mode if vehicle-to-vehicle distance control mode has been used. The mode also cannot be switched from constant speed control to vehicle-to-vehicle distance control mode. Turn the system off by pressing the "ON-OFF" button, and turn it on again.

■ Dynamic radar cruise control can be set when

- The shift lever is in "D". (Recommended)
Dynamic radar cruise control can also be set when the shift lever is in the "S" position and range "4", "5", "6", "7" or "8" has been selected.
- Vehicle speed is between approximately 27 mph (43 km/h) and 87 mph (139 km/h).

■ Accelerating

The vehicle can accelerate normally.

■ Automatic cancelation of vehicle-to-vehicle distance control

Vehicle-to-vehicle distance control driving is automatically canceled in the following situations:

- Actual vehicle speed falls below 25 mph (40 km/h).
- VSC is activated.
- The sensor cannot operate correctly because it is covered in some way.
- The windshield wipers are operating at high speed.
- The driving mode select switch is set to snow mode.

If vehicle-to-vehicle distance control driving is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

■ Automatic cancelation of constant speed control

The cruise control will stop maintaining the vehicle speed in the following situations:

- Actual vehicle speed is more than 10 mph (16 km/h) below the preset vehicle speed.
At this time, the memorized set speed is not retained.
- Actual vehicle speed falls below 25 mph (40 km/h).
- VSC is activated.

■ Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 50 mph (80 km/h). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 164 ft. (50 m)
Medium	Approximately 132 ft. (40 m)
Short	Approximately 100 ft. (30 m)

■ Radar sensor and grille

Always keep the sensor and grille clean to ensure that the vehicle-to-vehicle distance control operates properly. (Some obstructions, such as snow, ice or plastic objects, cannot be detected by the obstruction sensor.)

Dynamic radar cruise control is canceled if an obstruction is detected.



Radar sensor

■ Approach warning

In the following instances, there is a possibility that the warnings will not occur:

- When the speed of the vehicle ahead matches or exceeds your vehicle's speed
- Immediately after the cruise control speed has been set
- At the instant the accelerator is applied

■ Certification

► U.S.A.

FCC ID: HYQDNMWR002 and HYQDNMWR004

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio frequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

► Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ Before using dynamic radar cruise control

Do not overly rely on vehicle-to-vehicle distance control.

Be aware of the set vehicle speed. If automatic deceleration/acceleration is not appropriate, adjust the vehicle speed, as well as the distance between your vehicle and vehicles ahead by applying the brakes etc.

■ To avoid operating dynamic radar cruise control by mistake

Keep the "ON-OFF" button off when not in use.

CAUTION

■ Situations unsuitable for dynamic radar cruise control

Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause a serious or fatal accident.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhill, or where there are sudden changes between sharp up and down gradients
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to expressways
- When weather conditions are bad enough that they may prevent the sensors from functioning correctly (fog, snow, sandstorm, heavy rain, etc.)
- When the approach warning buzzer can be heard often

■ When the radar sensor may not be correctly detecting the vehicle ahead

Apply the brakes as necessary when any of the following types of vehicles are in front of you.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 210) will not be activated, and an accident may result.

- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving
- Vehicles with small rear ends (trailers with no load on board etc.)
- Motorcycles traveling in the same lane

 **CAUTION****■ Conditions under which the vehicle-to-vehicle distance control may not function correctly**

Apply the brakes as necessary in the following conditions as the radar sensor may not be able to correctly detect vehicles ahead, and an accident may result:

- When water or snow thrown up by the surrounding vehicles hinders the functioning of the radar sensor
- When your vehicle is pointing upwards (caused by a heavy load in the trunk etc.)
- When the road curves or when the lanes are narrow
- When steering wheel operation or your position in the lane is unstable
- When the vehicle ahead of you decelerates suddenly

■ To ensure the radar sensor functions correctly

Do not do the following to the sensor or grille as doing so may cause the sensor not to function correctly and could result in an accident:

- Stick or attach anything to it
- Leave it dirty
- Disassemble or subject it to strong shocks
- Modify or paint it
- Replace it with a non-genuine part

CAUTION

■ Handling the radar sensor

Observe the following to ensure the cruise control system can function effectively:


- Keep the sensor and front grille clean at all times.
Clean the sensor and front grille with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille or surrounding area.
- Do not modify or paint the sensor and grille.

2-4. Using other driving systems

Intuitive parking assist

The distance to obstacles measured by the sensors is communicated via the multi-information display and a buzzer when parallel parking or maneuvering into a garage. Always check the surrounding area when using this system.

■ Types of sensors

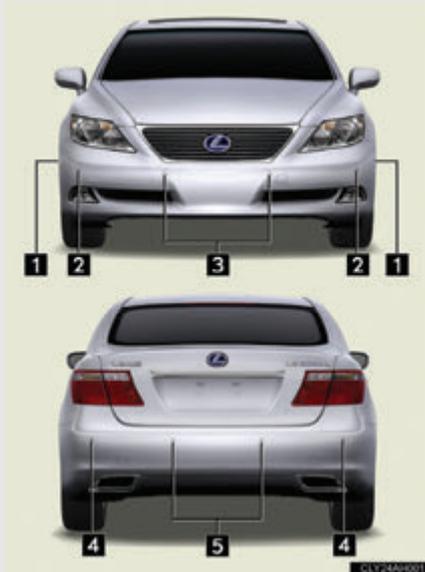

- 1 Front side sensors
- 2 Front corner sensors
- 3 Front center sensors
- 4 Rear corner sensors
- 5 Rear center sensors

■ Intuitive parking assist switch



On/off


When on, the indicator light comes on and the buzzer sounds to inform the driver that the system is operational.

Press the button to switch the on/off mode.

Display

When the sensors detect an obstacle, the graphic is shown on the multi-information display and touch screen according to position and distance to the obstacle.

■ Multi-information display

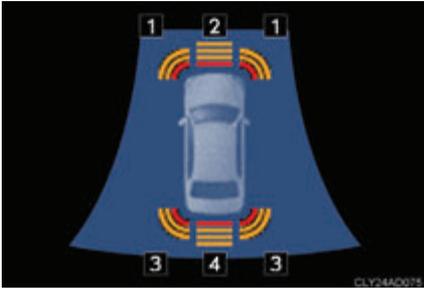


- 1 Front side sensors and front corner sensors operation
- 2 Front center sensors operation
- 3 Rear corner sensors operation
- 4 Rear center sensors operation

■ Touch screen



When the vehicle is moving forward

The graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 223)

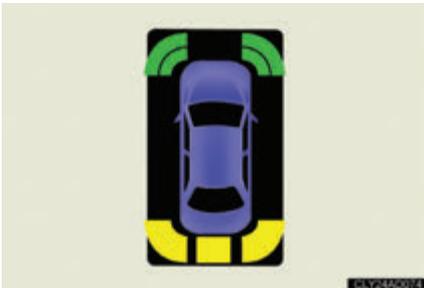

When the vehicle is moving backward

A simplified image is displayed on the right upper corner of the touch screen when an obstacle is detected.

The distance display and buzzer

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

► Center sensors

Level	1	2	3	4
Display example of front center sensor				
Buzzer	Slow	Medium	Fast	Continuous

2

When driving

► Corner sensors and side sensors

Level	1	2	3	4
Display example of front right sensor	-			
Buzzer	-	Medium	Fast	Continuous

■ Detection level and approximate distance to an obstacle


Level	1	2	3	4
Front side sensors	-	1.5 to 11 ft. (50 to 37.5 cm)	11 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Front corner sensors	-	1.8 to 11 ft. (60 to 37.5 cm)	11 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Front center sensors	3.0 to 1.5 ft. (100 to 50 cm)	1.5 to 11 ft. (50 to 37.5 cm)	11 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Rear corner sensors	-	1.8 to 11 ft. (60 to 37.5 cm)	11 to 0.8 ft. (37.5 to 25 cm)	0.8 ft. (25 cm) or less
Rear center sensors	4.5 to 2.0 ft. (150 to 60 cm)	2.0 to 1.4 ft. (60 to 45 cm)	1.4 to 1.1 ft. (45 to 35 cm)	1.1 ft. (35 cm) or less

Sensors that operate and detection range


The following diagrams show the sensor detection range. Note that sensors may not be able to detect obstacles that are extremely close to the vehicle.

■ Sensors that operate


► Vehicles with advanced parking guidance system

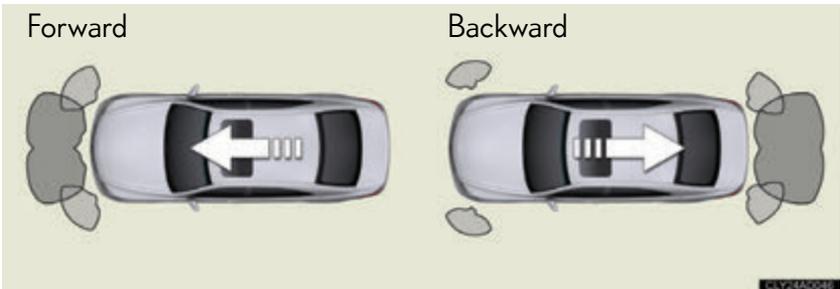

► Vehicles without advanced parking guidance system

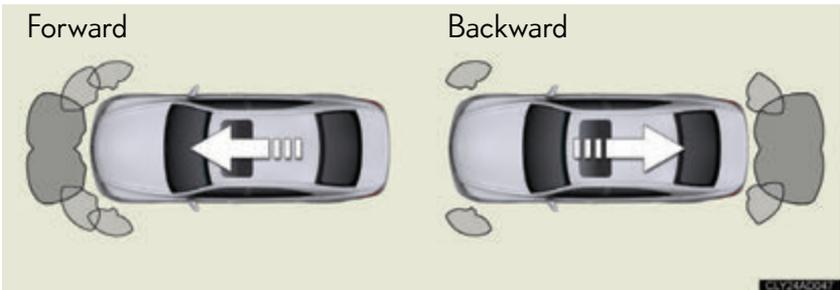

■ Detection range of the sensors

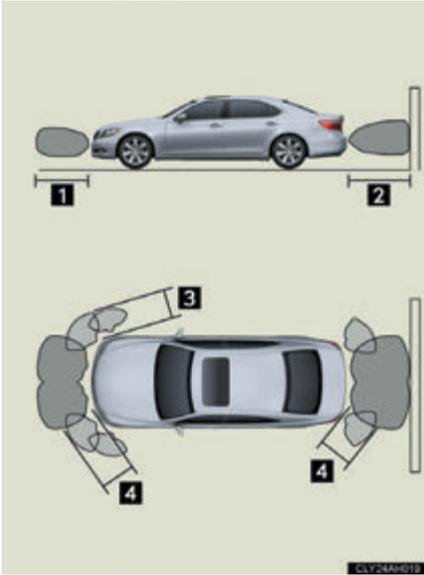

- 1 Approx. 3.0 ft. (100 cm)
- 2 Approx. 4.5 ft. (150 cm)
- 3 Approx. 1.5 ft. (50 cm)
- 4 Approx. 2.0 ft. (60 cm)

The diagram shows the detection range of the sensors. Note that the sensors may not be able to detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.

Customization of the intuitive parking assist

The buzzer volume, display and buzzer timing and display of the graphic on the screen can be customized.

Press  to display the information screen, and touch .

■ Buzzer volume

STEP 1 Touch .

STEP 2 Touch a switch (from  to ) to adjust the buzzer volume, and touch .

■ Display and buzzer timing

STEP 1 Touch .

STEP 2 Set the display and buzzer timing for the front and the rear center sensors. When  or  is touched, the triangle marks move between green (turns on at level 1) and orange (turns on at level 2) to select the timing.

■ Display of the graphic on the screen when the vehicle is moving forward

Touch . When this switch is touched, display setting switches between on and off.

■ Sensor detection information

● Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an obstacle. Particular instances where this may occur are listed below.

- There is dirt, snow or ice on a sensor.
- A sensor is frozen.
- A sensor is covered in any way.
- The vehicle is leaning considerably to one side.
- On an extremely bumpy road, on an incline, on gravel, or on grass
- The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- There is another vehicle equipped with parking assist sensors in the vicinity.
- A sensor is coated with a sheet of spray or heavy rain.
- The vehicle is equipped with a fender pole or radio antenna.
- Towing eyelets are installed.
- A bumper or sensor receives a strong impact.
- The vehicle is approaching a tall or right-angled curb.
- In harsh sunlight or intense cold weather
- A non-genuine Lexus suspension (lowered suspension etc.) is installed.

In addition to the examples above, there are instances in which, because of their shapes, signs and other objects may be judged by a sensor to be closer than they are.

● The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb radio waves
- Sharply-angled objects
- Low obstacles
- Tall obstacles with upper sections projecting outwards in the direction of your vehicle

■ If the display flashes and a message is displayed

→P. 617

■ Certification (Canada only)

This ISM device complies with Canadian ICES-001.

 CAUTION**■ Caution when using the intuitive parking assist**

Observe the following precautions.

Failure to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 6 mph (10 km/h).
- Do not attach any accessories within the sensor range.

 NOTICE**■ Notes when washing the vehicle**

Do not apply intensive bursts of water or steam to the sensor area.
Doing so may result in the sensor malfunctioning.

2-4. Using other driving systems

Electronically modulated air suspension

The vehicle adjusts the damping of the shock absorbers and maintains vehicle height automatically in response to driving conditions to help provide enhanced driving comfort and vehicle control.

■ Vehicle height adjustment

The vehicle's height is maintained at the selected level regardless of the number of occupants and luggage weight.



Turn the “HEIGHT HIGH” switch on.

The indicator light comes on.

Press the switch once more to cancel the high mode.

■ Damping mode selection

You can select the damping mode of the shock absorbers.



1 Sport
The indicator light comes on.

2 Normal

3 Comfort
The indicator light comes on.

■ Operating sound of the air suspension compressor

When the vehicle height is lowered, such as when entering or loading the vehicle, or high mode is selected, the compressor may operate and a whirring sound may be heard. This does not indicate a malfunction.

 CAUTION

■ Be sure to stop the hybrid system in the following situations in order to stop operation of the electronically modulated air suspension:

- The vehicle is parked on a curb.
- Any of the wheels is stuck in a ditch.
- It is necessary to jack up the vehicle.
- It is necessary to tow the vehicle with part of it lifted.

If the "POWER" switch remains in ON mode, the vehicle height may change, resulting in accidental damage.

2-4. Using other driving systems

Rear view monitor system*

The rear view monitor system assists the driver by displaying an image of the area behind the vehicle. The image is displayed in reverse on the screen. This reversed image is a similar image to the one on the inside rear view mirror.


For the advanced parking guidance system, refer to the “Navigation System Owner’s Manual”.



The rear view image is displayed when the shift lever is in the “R” position.


If the shift lever is shifted out of “R”, the screen returns to the previous one.

■ Displayed area

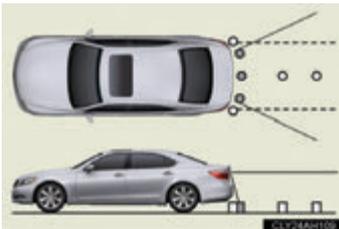

The area covered by the camera is limited. Objects that are close to either corner of the bumper or under the bumper cannot be seen on the screen.

The area displayed on the screen may vary according to vehicle orientation or road conditions.

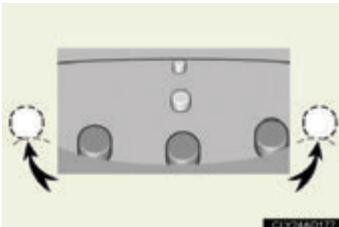

*: If equipped

■ Rear view monitor system camera



In the following cases, it may become difficult to see the images on the screen, even when the system is functioning correctly:

- The vehicle is in a dark area, such as at night.
- The temperature near the lens is extremely high or low.
- Water droplets are on the camera lens or humidity is high, such as when it rains.
- Foreign matter, such as snow or mud, adheres to the camera lens.
- The sun or headlights are shining directly into the camera lens.

■ Smear effect



If a bright light, such as sunlight reflected off the vehicle body, is picked up by the camera, a smear effect* characteristic to the camera may occur.

*: Smear effect — A phenomenon that occurs when a bright light is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

CAUTION

- **When using the rear view monitor system, observe the following precautions to avoid an accident that could result in death or serious injuries:**
 - Never depend solely on the monitor system when reversing.
 - Always check visually and with the mirrors to confirm your intended path is clear.
 - Depicted distances between objects and flat surfaces differ from actual distances.
 - Do not use the system if the trunk is open.
- **Conditions which may affect the rear view monitor system**
 - If the back of the vehicle has been hit, the camera's position and mounting angle may have changed. Have the vehicle inspected by your Lexus dealer.
 - Rapid temperature changes, such as when hot water is poured on the vehicle in cold weather, may cause the system to function abnormally.
 - If the camera lens is dirty, it cannot transmit a clear image. Rinse with water and wipe with a soft cloth. If extremely dirty, wash with a mild cleanser and rinse.
 - The displayed image may be darker and moving images may be slightly distorted when the system is cold.

Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

■ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

■ Brake assist

Generates an increased level of braking force after the brake pedal is depressed, when the system detects a panic stop situation

■ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

■ TRAC (Traction Control)

Maintains drive power and prevents any of the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

■ Hill-start assist control

Prevents the vehicle from rolling backward when starting on an incline or slippery slope

■ EPS (Electric Power Steering)

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

■ VGRS (Variable Gear Ratio Steering)

Adjusts the wheel turning angle in accordance with the vehicle speed and steering wheel movement

■ Active stabilizer suspension system (if equipped)

Reduces sway when cornering according to steering wheel movement and the selected suspension damping mode, in order to maintain a stable vehicle posture

■ VDIM (Vehicle Dynamics Integrated Management)

Provides integrated control of the ABS, brake assist, TRAC, VSC, hill-start assist control, EPS, and VGRS systems

Maintains vehicle stability when swerving on slippery road surfaces by controlling the brakes and hybrid system output, steering assist, and steering ratio

■ Pre-Collision System (if equipped)

→P. 238, 242

When the VSC/TRAC/hill-start assist control systems are operating



If the vehicle is in danger of slipping, rolling backward when starting on an incline, or any of the drive wheels spin, the slip indicator light flashes to indicate that the VSC/TRAC/hill-start assist control systems have been engaged.

A buzzer (intermittent) sounds to indicate that VSC is operating.

The stop lights and high mounted stoplight turn on when the hill-start assist control system is operating.

The slip indicator light flashes as well when ABS is operating.

Disabling TRAC and/or VSC

If the vehicle gets stuck in fresh snow or mud, TRAC and VSC may reduce power from the hybrid system to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.



● Turning off TRAC

Quickly press and release the switch to turn off TRAC.

The slip indicator light should come on.

Press the switch again to turn the system back on.

● Turning off TRAC and VSC

Press and hold the switch for more than 3 seconds while the vehicle is stopped to turn off TRAC and VSC.

The slip indicator light will come on and a message will be shown on the multi-information display.

Press the switch again to turn the system back on.

■ Automatic reactivation of TRAC and VSC

Turning the "POWER" switch OFF after turning off the TRAC and VSC systems will automatically re-enable them.

■ Automatic TRAC reactivation

If only the TRAC system is turned off, the TRAC system will turn on when vehicle speed increases.

■ Automatic TRAC/VSC reactivation

If the TRAC/VSC systems are turned off, the systems will not turn on even when vehicle speed increases.

■ Sounds and vibrations caused by the ABS, brake assist, VSC, TRAC, hill-start assist control and VGSR systems

- A sound may be heard from the engine compartment when the hybrid system is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.

- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.

- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard after the vehicle comes to a stop.

- The steering wheel may be moved slightly or a sound may be heard when the hybrid system is started or stopped. None of these indicate that a malfunction has occurred.

■ Hill-start assist control is operational when

- The shift lever is in the "D" or "S" position.
- The brake pedal is not depressed.

■ EPS operation sound

When the steering wheel operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Conditions affecting VGRS operations

In the following situations, the center position of the steering wheel may change. However, the position will return to normal after the conditions are improved.

- When the steering wheel has been operated quickly or operated for an extended period of time while the vehicle is stopped or is moving very slowly
- When the steering wheel has been held fully to the left or right
- When the 12-volt battery is low or the voltage temporarily drops
- After the hybrid system is started at lower than -22°F (-30°C)

■ Reduced effectiveness of EPS

The effectiveness of EPS is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The system should return to normal within 10 minutes.

CAUTION

■ The ABS does not operate effectively when

- The limits of tire gripping performance have been exceeded.
- The vehicle hydroplanes while driving at high speed on a wet or slick road.

■ Stopping distance when the ABS is operating will exceed that of normal conditions

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or roads with uneven roads

■ TRAC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRAC system is operating.

Do not drive the vehicle in conditions where stability and power may be lost.

■ If hill-start assist control does not operate effectively

The hill-start assist control may not operate effectively on steep inclines and roads covered in ice.

 **CAUTION****■ When the VSC is activated**

The slip indicator light flashes and a warning buzzer sounds. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes and a buzzer sounds.

■ When TRAC and VSC are off

Be especially careful and drive at a speed appropriate to the road conditions. As these are systems to ensure vehicle stability and driving force, do not turn off TRAC and VSC unless necessary.

■ Replacing tires

Make sure that all tires are of the same size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire pressure level.

The ABS and VSC systems will not function correctly if different tires are fitted on the vehicle.

Contact your Lexus dealer for further information when replacing tires or wheels.

■ Handling of tires and suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause the system to malfunction.

2-4. Using other driving systems

Pre-Collision System *

Safety systems such as the brakes and seat belts are automatically engaged to lessen impact and injuries to occupants as well as vehicle damage when the radar sensor detects an unavoidable frontal collision.

■ Pre-collision seat belts

The front seat belts are immediately retracted as the effect of the pretensioner is increased (→P. 96) to help prepare the driver and front passenger. In the event of sudden braking or skidding, the system will operate even if no obstacle has been detected.

However, the system will not operate in the event of skidding when the TRAC/VSC systems are disabled.

■ Pre-collision brake assist

Applies greater braking force in relation to how strongly the brake pedal is depressed

Radar sensor



Detects vehicles or other obstacles on or near the road ahead and determines whether a collision is imminent based on the position, speed, and heading of the obstacles

■ Obstacles not detected

The sensor cannot detect plastic obstacles such as pylons. There may also be occasions when the sensor cannot detect pedestrians, animals, bicycles, motorcycles, trees, or snowdrifts.

*: If equipped

■ The pre-collision system is operational when

- Pre-collision seat belts (linked to the radar sensor):
 - Vehicle speed is above 3 mph (5 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at your vehicle is approaching an obstacle is greater than 18 mph (30 km/h).
 - The front occupants are wearing a seat belt.
- Pre-collision seat belts (linked to brake operation)
 - Vehicle speed exceeds 18 mph (30 km/h).
 - The system detects sudden braking or skidding.
 - The front occupants are wearing a seat belt.
- Pre-collision brake assist:
 - Vehicle speed is above 18 mph (30 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at your vehicle is approaching an obstacle is greater than 18 mph (30 km/h).
 - The brake pedal is depressed.

■ Conditions that may trigger the system even if there is no danger of collision

- When there is an object by the roadside at the entrance to a curve
- When passing an oncoming vehicle on a curve
- When driving over a narrow iron bridge
- When there is a metal object on the road surface
- When driving on an uneven road surface
- When passing an oncoming vehicle on a left-turn
- When your vehicle rapidly closes on the vehicle in front

When the system is activated in the situations described above, there is also a possibility that the seat belts will retract quickly and the brakes will be applied with a force greater than normal. When the seat belt is locked in the retracted position, stop the vehicle in a safe place, release the seat belt and refasten it.

■ When there is a malfunction in the system

Warning lights and/or warning messages will turn on or flash. (→P. 608, 617)

■ Certification

► U.S.A.

FCC ID: HYQDNMWR002 and HYQDNMWR004

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio frequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

► Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

 **CAUTION****■ Handling the radar sensor**

Observe the following to ensure the pre-collision system can function effectively:

- Keep the sensor and front grille clean at all times.
Clean the sensor and front grille with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille or surrounding area.
- Do not modify or paint the sensor and grille.

■ Limitations of the pre-collision system

Do not rely on the pre-collision system. Always drive safely, taking care to observe your surroundings and checking for any obstacles or other road hazards.

Pre-Collision System (with camera sensor)*

Safety systems such as the brakes and seat belts are automatically engaged to lessen impact and injuries to occupants as well as vehicle damage when the radar sensor detects an unavoidable frontal collision.

■ Pre-collision seat belts

The front seat belts are immediately retracted as the effect of the pretensioner is increased (→P. 96) to help prepare the driver and front passenger. In the event of sudden braking or skidding, the system will operate even if no obstacle has been detected.

However, the system will not operate in the event of skidding when the TRAC/VSC systems are disabled.

■ Pre-collision brake assist

When there is a high possibility of a frontal collision, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

■ Pre-collision braking

When there is a high possibility of a frontal collision, the system warns the driver using a warning light, warning display and buzzer. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed. Pre-collision braking can be disabled using the pre-collision braking off button. (→P. 243)

■ Suspension control

When the system determines that a collision is unavoidable, the suspension switches to "SPORT" mode to help prevent the front of the vehicle from dropping when the brakes are applied suddenly.

■ Steering gear control (VGRS)

When the system determines that a collision is unavoidable, the steering gear ratio is changed to help improve the response to steering input.

*: If equipped

■ Driver monitor system

When the system determines that there is a possibility of a collision, and the driver is not facing forward, PCS warnings are given in advance to warn the driver. In some circumstances, the brakes will be applied briefly to give a sensory warning to the driver (pre-collision alert braking). (→P. 244)

Disabling pre-collision braking



- 1 Pre-collision braking disabled
- 2 Pre-collision braking enabled

The “PCS” warning light flashes when pre-collision braking is disabled.

2

When driving

Radar sensor



Detects vehicles or other obstacles on or near the road ahead and determines whether a collision is imminent based on the position, speed, and heading of the obstacles

Camera sensors

▶ Discharge headlights



▶ LED headlights



Detect pedestrians and other three-dimensional objects on or near the road ahead together with the radar sensor while the vehicle is moving. When the headlights are on, near-infrared rays are projected to ensure proper detection performance in the night time.

1 Camera sensors

2 Near-infrared ray transmitters

Driver monitor sensor



Detects the direction the driver is facing. The system determines whether the driver is facing forward.

■ Obstacles not detected

The sensor cannot detect plastic obstacles such as pylons. There may also be occasions when the radar sensor cannot detect pedestrians, animals, bicycles, motorcycles, trees, or snowdrifts.

■ A camera sensor cannot detect obstacles in the following situations:

- A camera sensor is directly receiving intense light, such as sunlight.
- Visibility is poor because of bad weather or other reasons.
- The sensor temperature is extremely high.

■ The pre-collision system is operational when

- Pre-collision seat belts (linked to the radar sensor):
 - Vehicle speed is above 3 mph (5 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at which your vehicle is approaching an obstacle is greater than 18 mph (30 km/h).
 - The front occupants are wearing a seat belt.
- Pre-collision seat belts (linked to brake operation)
 - Vehicle speed exceeds 18 mph (30 km/h).
 - The system detects sudden braking or skidding.
 - The front occupants are wearing a seat belt.
- Pre-collision brake assist:
 - Vehicle speed is above 18 mph (30 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at which your vehicle is approaching an obstacle is greater than 18 mph (30 km/h).
 - The brake pedal is depressed.
- Pre-collision braking:
 - The pre-collision braking off button is not pressed.
 - Vehicle speed is above 9 mph (15 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed your vehicle is approaching an obstacle is greater than 12 mph (20 km/h).

- Suspension control:
 - Vehicle speed is above 3 mph (5 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at which your vehicle is approaching an obstacle is greater than 18 mph (30 km/h).
- Steering gear control (VGRS):
 - Vehicle speed is above 18 mph (30 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at which your vehicle is approaching an obstacle is greater than 18 mph (30 km/h).
- Pre-collision alert braking:
 - The pre-collision braking off button is not pressed.
 - The system determines that the driver is not facing forward.
 - Vehicle speed is above 24 mph (40 km/h).
 - The relative speed difference between your vehicle and another vehicle that is forward of your vehicle, or the speed at which your vehicle is approaching an obstacle is greater than 24 mph (40 km/h).
 - The steering is not being turned.
- **Conditions that may trigger the system even if there is no danger of collision**
 - When there is an object by the roadside at the entrance to a curve
 - When passing an oncoming vehicle on a curve
 - When driving over a narrow iron bridge
 - When there is a metal object on the road surface
 - When driving on an uneven road surface
 - When passing an oncoming vehicle on a left-turn
 - When your vehicle rapidly closes on the vehicle in front
 - When your vehicle is skidding with the TRAC/VSC system off

When the system is activated in the situations described above, there is also a possibility that the seat belts will retract quickly and the brakes will be applied with a force greater than normal. When the seat belt is locked in the retracted position, stop the vehicle in a safe place, release the seat belt and refasten it.
- **When there is a malfunction in the system**

Warning lights and/or warning messages will turn on or flash. (→P. 608, 617)

■ Certification

► U.S.A.

FCC ID: HYQDNMWR002 and HYQDNMWR004

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio frequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

► Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ Handling the radar sensor

Observe the following to ensure the pre-collision system can function effectively:

- Keep the sensor and front grille clean at all times.
Clean the sensor and front grille with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille or surrounding area.
- Do not modify or paint the sensor and grille.

■ Handling the driver monitor sensor

Observe the following to ensure the driver monitor sensor can function effectively.

Failure to do so may result in a malfunction or may prevent the system from correctly determining the direction the driver is facing.

- Do not disassemble, damage, lift or pull on the sensor.
- Do not touch the sensor while driving.
- Do not wet or spill water on the sensor.
- Do not drop anything on or allow anything to hit against the sensor. Do not subject the sensor to an impact.
- Make sure that there are no scratches, dirt or stickers on the side of the sensor that faces the driver.
- Do not place any objects in front of the side of the sensor that faces the driver or cover the sensor.

⚠ CAUTION**■ Handling the camera sensors**

Observe the following to ensure that the PCS functions correctly:

- Keep the windshield clean at all times.
PCS effectiveness may be reduced due to the presence of raindrops, condensation, ice or snow on the windshield.
- Do not change the installation position of a camera sensor, or remove and reinstall it. The direction of a camera sensor is precisely adjusted.
- When it is cold, using the heater with air blowing to the feet may allow the upper part of the windshield to fog up. This will have a negative effect on the images. In such a case, use the windshield defogger to provide warm, dry air to the windshield.
- Do not place anything on the dashboard.
Images reflected on the windshield may reduce the effectiveness of a camera sensor.
- Do not attach a sticker or other items to the windshield near a camera sensor.

■ Determining the direction the driver is facing

The driver monitor function does not operate when the vehicle is stopped.

The direction the driver is facing may not be determined correctly if any of the following conditions exist:

- There is an object between the driver monitor sensor and the driver's face, such as when the sensor is blocked.
- A part of the driver's face is covered.
- The sensor or the driver's face is exposed to intense light such as sunlight.
- The driving posture is improper.

■ Headlights

The near-infrared ray transmitter projects strong energy that is not visible. Although the transmitter normally turns off when the vehicle is stopped, never look into the headlights for your safety.

■ Limitations of the pre-collision system

Do not rely on the pre-collision system. Always drive safely, taking care to observe your surroundings and checking for any obstacles or other road hazards.

NOTICE

■ Camera sensors

Observe the following to ensure that the PCS functions correctly:

- Do not subject a camera sensor to a strong impact or force, and do not disassemble a camera sensor.
- Do not scratch camera lens, or let it get dirty.

■ Headlights

Observe the following to ensure proper near-infrared ray projection:

- Keep the headlights clean at all times.
- The detection performance may deteriorate if the high beams are misaligned or the high beams are inoperative.

■ Precautions for cleaning the driver monitor sensor

- Gently wipe the sensor with a soft cloth to prevent damage.
- Wipe any excess dirt with a cloth dampened with neutral detergent, all liquids having been wringed out of the cloth. After that, wipe again with a dry cloth.
- Do not use benzene, thinner, glass cleaners, wax, etc.

Take notice of the following information about storage precautions, cargo capacity and load:

- Stow cargo and luggage in the trunk whenever possible. Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.

Capacity and distribution

Cargo capacity depends on the total weight of the occupants.

(Cargo capacity) = (Total load capacity) – (Total weight of occupants)

Steps for Determining Correct Load Limit—

- (1) Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle’s placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity.


For example, if the “XXX” amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400 – 750 (5 × 150) = 650 lbs.)

- (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.

(6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

Lexus does not recommend towing a trailer with your vehicle. Your vehicle is not designed for trailer towing.

Example based on your vehicle

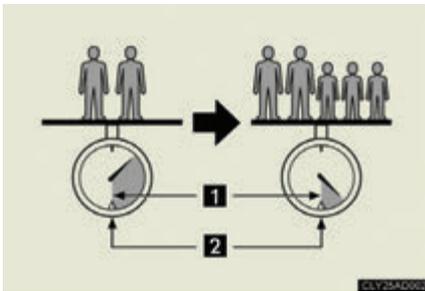

- 1 Cargo capacity
- 2 Total load capacity

When 2 people with a combined weight of 366 lb. (166 kg) are riding in your vehicle, which has a total load capacity of 825 lb. (375 kg), the available amount of cargo and luggage load capacity will be as follows:

$$825 \text{ lb.} - 366 \text{ lb.} = 459 \text{ lb.} \quad (375 \text{ kg} - 166 \text{ kg} = 209 \text{ kg})$$

In this condition, if 3 more passengers with a combined weight of 388 lb. (176 kg) get in, the available cargo and luggage load will be reduced as follows:

$$459 \text{ lb.} - 388 \text{ lb.} = 71 \text{ lb.} \quad (209 \text{ kg} - 176 \text{ kg} = 33 \text{ kg})$$

As shown in the example above, if the number of occupants increases, the cargo and luggage load will be reduced by an amount that equals the increased weight due to the additional occupants. In other words, if an increase in the number of occupants causes an excess of the total load capacity (combined weight of occupants plus cargo and luggage load), you must reduce the cargo and luggage on your vehicle.

 **CAUTION****■ Things that must not be carried in the trunk**

The following things may cause a fire if loaded in the trunk:

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Do not place cargo or luggage in or on the following locations as the item may get under the brake or accelerator pedal and prevent the pedals from being depressed properly, block the driver's vision, or hit the driver or passengers, causing an accident.
 - Driver's feet
 - Front passenger or rear seats (when stacking items)
 - Package tray
 - Instrument panel
 - Dashboard
- Secure all items in the occupant compartment, as they may shift and injure someone during sudden braking, sudden swerving or an accident.

■ Capacity and distribution

- Do not exceed the maximum axle weight rating or the total vehicle weight rating.
- Even if the total load of occupant's weight and the cargo load is less than the total load capacity, do not apply the load unevenly. Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

Vehicle load limits

Vehicle load limits include total load capacity, seating capacity, towing capacity and cargo capacity.

■ Total load capacity:

▶ 5-seat models

825 lb (375 kg)

▶ 4-seat models

675 lb (305 kg)

Total load capacity means the combined weight of occupants, cargo and luggage.

■ Seating capacity:

▶ 5-seat models

5 occupants (Front 2, Rear 3)

▶ 4-seat models

4 occupants (Front 2, Rear 2)

Seating capacity means the maximum number of occupants whose estimated average weight is 150 lb. (68 kg) per person.

■ Towing capacity

Lexus does not recommend towing a trailer with your vehicle.

■ Cargo capacity

Cargo capacity may increase or decrease depending on the weight and the number of occupants.

■ Total load capacity and seating capacity

These details are also described on the tire and loading information label.
(→P. 550)

 **CAUTION****■ Overloading the vehicle**

Do not overload the vehicle.

It may not only cause damage to the tires, but also degrade steering and braking ability, resulting in an accident.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

■ Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
 - Engine oil
 - Engine/power control unit coolant
 - Washer fluid
- Have a service technician inspect the level and specific gravity of battery electrolyte.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the rear tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

■ Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Remove any ice that has accumulated on the vehicle chassis.
- Periodically check for and remove any excess ice or snow that may have accumulated in the wheel well or on the brakes.

■ When driving the vehicle


Accelerate the vehicle slowly and drive at a reduced speed suitable to road conditions.

■ When parking the vehicle

Park the vehicle and move the shift lever to “P” without setting the parking brake. The parking brake may freeze up, preventing it from being released.

Selecting snow chains

Use the correct snow chain size when mounting the snow chains. Chain size is regulated for each tire size.

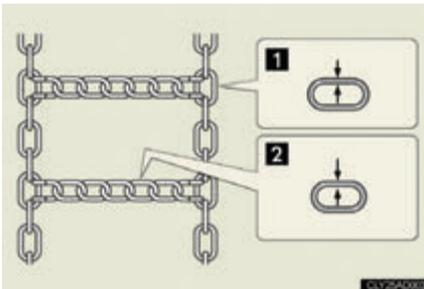

- 1** Side chain
(0.12 in. [3 mm] in diameter)
- 2** Cross chain
(0.16 in. [4 mm] in diameter)

Regulations on the use of snow chains

- Regulations regarding the use of tire chains vary according to location and type of road. Always check local regulations before installing chains.
- Install the chains on the rear tires.
- Retighten the chains after driving 1/4 - 1/2 mile (0.5 - 1.0 km).

■ Snow chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the rear tires only. Do not install tire chains on front tires.
- Install the tire chains on rear tires as tightly as possible. Retighten chains after driving 1/4 - 1/2 mile (0.5 - 1.0 km).
- Install tire chains following the instructions provided in the accompanying instructions.

CAUTION

■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents.

Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the size specified for your vehicle.
- Maintain the recommended level of air pressure.
- Do not drive in excess of 75 mph (120 km/h), regardless of the type of snow tires being used.
- Use snow tires on all, not just some wheels.

■ Driving with snow chains

Observe the following precautions to reduce the risk of accidents.

Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 30 mph (50 km/h), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden turns and braking, as use of chains may adversely affect vehicle handling.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.

 NOTICE**■ Repairing or replacing snow tires**

Request repairs and obtain replacement of snow tires from Lexus dealers or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire air pressure sensor.

■ Fitting tire chains

The tire air pressure sensor may not function correctly when tire chains are fitted.

2-5. Driving information

Trailer towing

Lexus does not recommend towing a trailer with your vehicle. Lexus also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your Lexus is not designed for trailer towing or for the use of tow hitch mounted carriers.



2-5. Driving information

Dinghy towing

Your vehicle is not designed to be dinghy towed (with 4 wheels on the ground) behind a motor home.



NOTICE

■ **To avoid serious damage to your vehicle**

Do not tow your vehicle with four wheels on the ground.

3-1. Using the touch screen

- Touch screen..... 264
- Setting the touch screen..... 267

3-2. Using the air conditioning system and defogger

- Front air conditioning system (without rear air conditioning system) 272
- Front air conditioning system (with rear air conditioning system) 280
- Rear air conditioning system 290
- Rear window and outside rear view mirror defoggers 298
- Windshield wiper de-icer 299

3-3. Using the audio system

- Audio system 301
- Using the radio..... 304
- Using the DVD player..... 309
- Playing an audio CD 312
- Playing MP3 and WMA discs..... 316
- Playing DVD video/audio ... 320
- Playing a video CD 333

DVD player and DVD

- video disc information 337
- Optimal use of the audio/video system..... 347
- Using the AUX adapter..... 351
- Using the rear seat audio controls 352
- Using the steering wheel audio switches..... 356

3-4. Using the rear seat entertainment system

- Rear seat entertainment system features..... 358
- Using the radio 367
- Using the front DVD player 368
- Using the rear DVD player 369
- Playing an audio CD/CD text..... 371
- Playing WMA (front DVD player only)/MP3 discs 372
- Playing the HDD audio 373
- Playing DVD video/audio..... 374
- Playing a video CD..... 387
- DVD player and DVD video disc information 391
- Using the video mode..... 393
- Changing other settings..... 395

**3-5. Using the hands-free system
(for cellular phone)**

Hands-free system (for cellular phone)	397
Using a Bluetooth® phone	402
Setting the hands-free system	414

3-6. Using the interior lights

Interior lights list	440
• Interior lights	442
• Personal lights	442

3-7. Using the storage features

List of storage features	444
• Glove box	446
• Coin holder	447
• Door pockets	447
• Cup holders	448
• Console box	449
• Cool box/auxiliary box	451
• Auxiliary boxes	455

3-8. Other interior features

Sun visors	457
Vanity mirrors	458
Clock	459
Outside temperature display	461
Ashtrays	462
Cigarette lighters	463
Power outlets	465
Heated steering wheel	467
Climate control seats/ seat heaters	469
Armrest	473
Rear seat relaxation system	474
Retractable table	476
Rear sunshade	478
Rear door sunshades	481
Coat hooks	484
Floor mat	485
Trunk features	486
Garage door opener	489
Lexus Link System	495

3-1. Using the touch screen

Touch screen (without navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc.

Press  to display the "Information" screen.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".



Button/switch	Page
"CLIMATE"	P. 272, 280
"AUDIO"	P. 301
"INFO" (Displaying the "Information" screen)	P. 264
"DISP" (Adjusting the display)	P. 267
"Trip information"	P. 34
"Telephone"	P. 402
"LEXUS Park Assist"	P. 223
"Screen Setting"	P. 269
"Beep Off"	P. 267
"Adjust Clock"	P. 459

The initial screen



If the "POWER" switch is turned to ACCESSORY or ON mode, the initial screen will be displayed for a few seconds as the system starts up.

■ To avoid damaging the touch screen

- Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

■ When using the touch screen

- If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen or remove your sunglasses.

3-1. Using the touch screen

Setting the touch screen

You can change the touch screen to your desired settings.

Turning off the beep sound

The beep that sounds when a touch screen switch is touched can be turned off.

STEP 1 Press  .



Touch  .


Adjusting the display

STEP 1 Press  .


STEP 2 Adjust the display as desired using  /  and  /  .

If you do not touch the screen for 20 seconds, the system will return to the previous screen.

► With CD mode

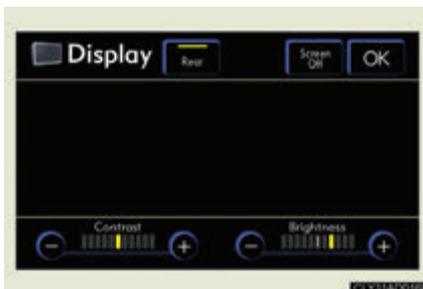


► With DVD mode

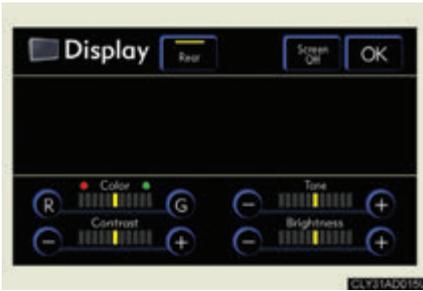

		
"Color"	Red	Green
		
"Tone"	Lighter	Darker
"Contrast"	Weaker	Stronger
"Brightness"	Darker	Brighter

■ "Day Mode"

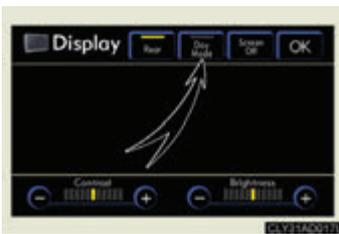


When the headlights are turned on, the screen dims. However, the screen can be switched to "Day Mode".

The screen will stay in "Day Mode" when the headlights are turned on until  is touched again.

■ To turn off the picture display

If  is touched, the screen display is turned off, and guidance is by voice only.


■ Opening or closing the rear display (if equipped)

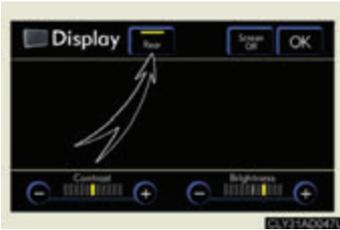

Touching **Rear** opens or closes the rear display.

Screen settings

The following screen settings can be changed:

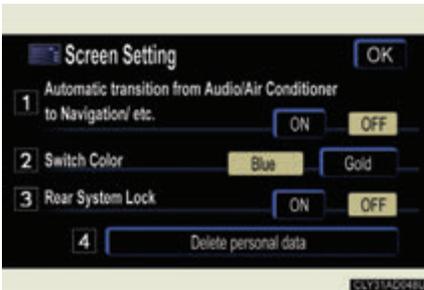

- 1** Automatic transition
20 seconds after audio system use, the system will return the display to the previous screen.
- 2** Switch color
You can select the switch color.
- 3** Rear system lock (if equipped)
The operation lock on the rear seat entertainment system can be turned on or off.
- 4** Personal data deletion
The following personal data is deleted:
 - User selection settings
 - Phone book data
 - Dialed numbers and incoming calls
 - Speed dial
 - Bluetooth[®] phone data
 - Security code

■ Setting automatic transition

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.



STEP 3 Touch  or  on the “Screen Setting” screen.

STEP 4 Touch  .

■ Setting the switch color

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

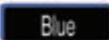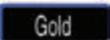STEP 3 Touch  or  on the “Screen Setting” screen.

STEP 4 Touch  .

■ Setting the rear system lock

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  or  on the “Screen Setting” screen.

STEP 4 Touch  .

■ To delete personal data

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Screen Setting” screen.



Touch .

Check carefully beforehand, as data cannot be retrieved once deleted.

■ When deleting personal data

Data can only be deleted when the vehicle is stopped.

■ When selling the vehicle

Be sure to delete both the call history and personal data.


■ If you touch

The display returns to the previous screen.

3-2. Using the air conditioning system and defogger Front air conditioning system (without rear air conditioning system)


Airflow and outlets are automatically adjusted according to the temperature setting.

Press  to display the air conditioning operation screen.

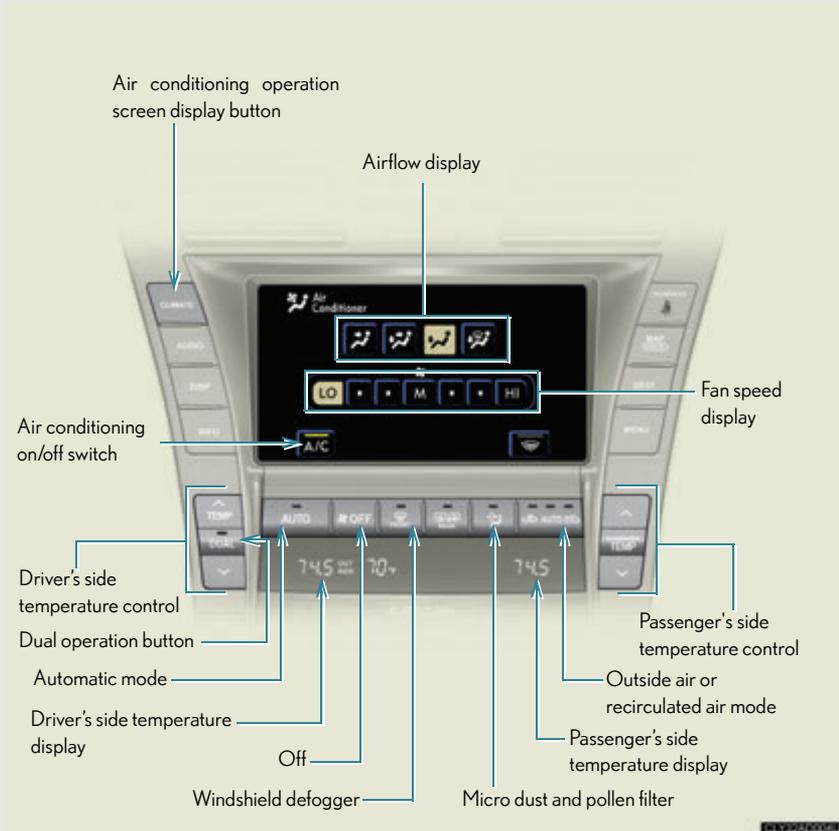

This illustration is for a vehicle equipped with the navigation system.

Using the speech command system (if equipped)

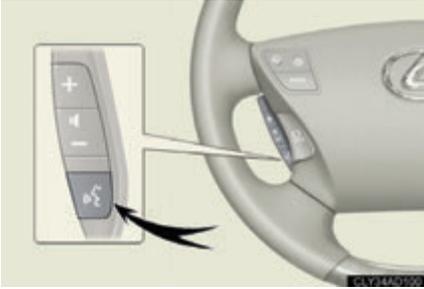

Pull  to operate the speech command system. (→“Navigation System Owner’s Manual”)

Using the automatic mode

STEP 1 Press .

➔ The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

STEP 2 Press  to switch to automatic air intake mode.

➔ The air conditioning system automatically switches between outside air and recirculated air modes.

STEP 3 Press  to increase the temperature and  to decrease the temperature.

The temperature for the driver and passenger seats can be set separately.

Adjusting the settings

■ Adjusting the temperature setting

Press  on  to increase the temperature and  to decrease the temperature.

The air conditioning system switches between dual and simultaneous modes each time  is pressed.

Dual mode (the indicator on  is on.): The temperature for the left-hand seat and right-hand seat can be adjusted separately. Operating the passenger's side temperature control will enter dual mode.


Simultaneous mode (the indicator on  is off.): Only  (driver's side) can be used to adjust the temperature for all seats.

■ Adjusting the fan speed

Touch any switch of  (decrease \leftrightarrow increase) on the operation screen.


Press  to turn the fan off.

■ Changing the air outlets

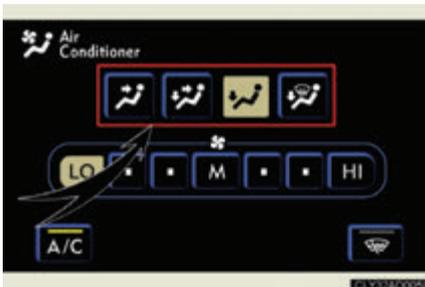


Touch any mode on the operation screen.


Air flows as shown below according to the mode selected.

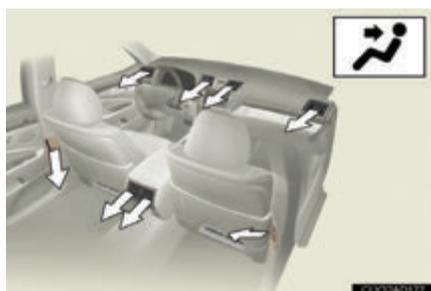


Upper body

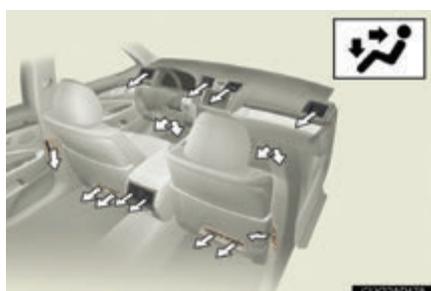

Upper body and feet

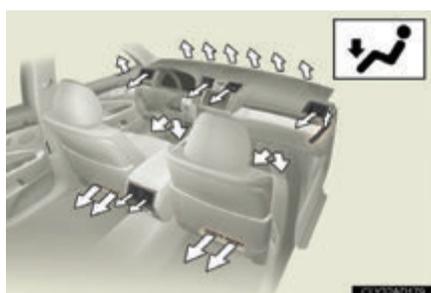

Feet

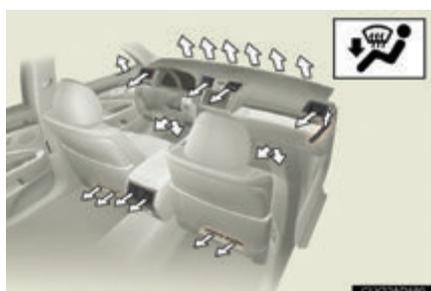

Feet and front windshield


■ Switching between outside air and recirculated air modes

Press .

The mode switches between  (recycles air inside the vehicle), "AUTO" and  (introduces air from outside the vehicle) modes each time the button is pressed.

When the air intake control system is switched to automatic mode, it operates automatically.

Defogging the windshield

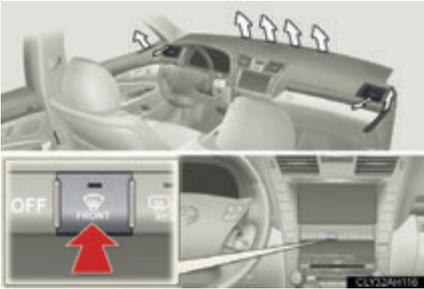

Press .

The air conditioning system control operates automatically.

Micro dust and pollen filter



Press .


Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.

Usually the system will turn off automatically after approximately 3 minutes.

To stop the operation, press .

Adjusting the sensitivity of the air intake control in automatic mode

STEP 1 Press  until the “Smog Sensor” screen appears while the vehicle is stopped.

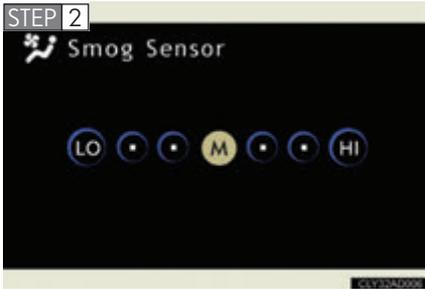

Touch any switch of  (lower sensitivity ↔ higher sensitivity) on the operation screen.

Adjusting the position and opening and closing the air outlets

► Front center outlets



- 1** Direct air flow to the left or right, up or down.
- 2** Turn the knob to open or close the vent.

► Front side outlets



- 1** Direct air flow to the left or right, up or down.
- 2** Turn the knob to open or close the vent.

► Rear center outlets



- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

► Rear side outlets



- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

■ Using the automatic mode

Fan speed is adjusted automatically in accordance with the temperature setting and ambient conditions. As a result, the following may occur:

- Immediately after  is pressed, the fan may stop for a while until warm or cool air is ready to flow.
- Cool air may flow to the area around the upper body when the heater is on.

■ Using the system in recirculated air mode

The windows will fog up more easily if the recirculated air mode is used for an extended period.

■ Switching between outside air and recirculated air modes

Recirculated air mode or outside air mode may be automatically switched to in accordance with the temperature setting and the inside temperature.

■ Window defogger feature

Recirculated air mode may automatically switch to  (outside air) mode in situations where the windows need to be defogged.

■ When the hybrid battery cooling system operates

If the hybrid battery cooling system operates when the air conditioning is off, a message will be shown on the multi-information display and the air conditioning will automatically turn on. (→P. 191)

■ Automatic mode for air intake control

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the air conditioning is off, and the fan is operating, turning the "AUTO" mode on will activate the air conditioning system.

■ Micro dust and pollen filter

- In order to prevent the windows from fogging up when the outside air is cold, the following may occur:
 - Outside air mode does not switch to .
 - The air conditioning system operates automatically.
 - The operation cancels after 1 minute.
- In rainy weather, the windows may fog up. Press .

CAUTION

■ To prevent the windshield from fogging up

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

NOTICE


■ To prevent the 12-volt battery from being discharged

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

3-2. Using the air conditioning system and defogger Front air conditioning system (with rear air conditioning system)


Airflow and outlets are automatically adjusted according to the temperature setting.

Press  to display the air conditioning operation screen.

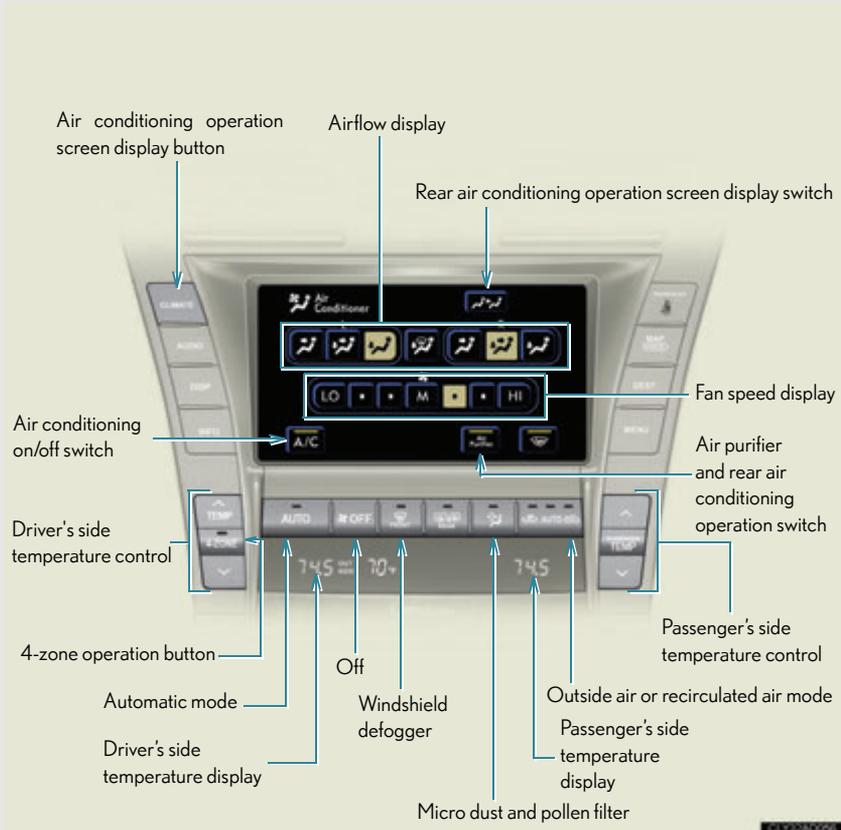

This illustration is for a vehicle equipped with the navigation system.

Using the speech command system (if equipped)

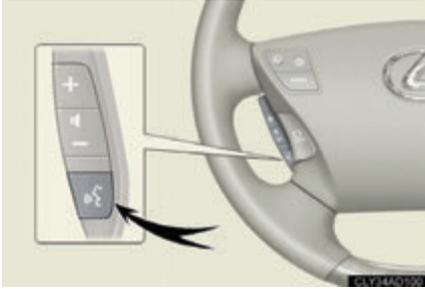

Pull  to operate the speech command system. (→“Navigation System Owner’s Manual”)

Using the automatic mode

STEP 1 Press  .

➔ The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

STEP 2 Press  to switch to automatic air intake mode.

➔ The air conditioning system automatically switches between outside air and recirculated air modes.

STEP 3 Press  on  to increase the temperature and  to decrease the temperature.

Air outlets and fan speed for the right-hand and left-hand seats may be set separately depending on the temperature setting.

Adjusting the settings

■ Adjusting the temperature setting

Press \wedge on  to increase the temperature and \vee to decrease the temperature.

The air conditioning system switches between individual and simultaneous modes each time  is pressed.

Individual mode (the indicator on  is on.): The temperature for the driver's, front passenger's and rear seats (\rightarrow P. 292) can be adjusted separately. Operating the passenger's side temperature control will enter individual mode.


Simultaneous mode (the indicator on  is off.): Only  (driver's side) can be used to adjust the temperature for all seats.

■ Adjusting the fan speed

Touch any switch of  (decrease \leftrightarrow increase) on the operation screen.

Press  to turn the fan off.

■ Changing the air outlets

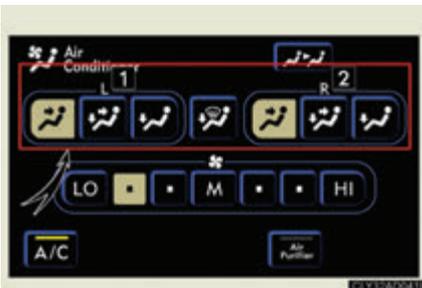


Touch any mode on the operation screen.


- 1 L: Left-hand front seat
- 2 R: Right-hand front seat

Different air outlets for the left-hand and right-hand front seats can be chosen.


Air flows as shown below according to the mode selected.

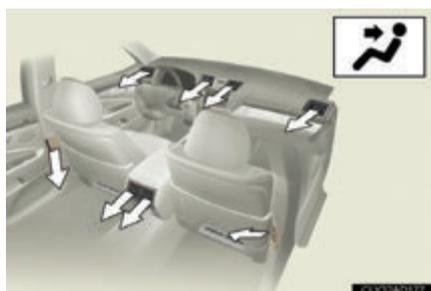


Upper body

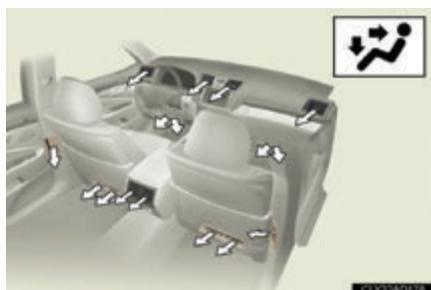

Upper body and feet

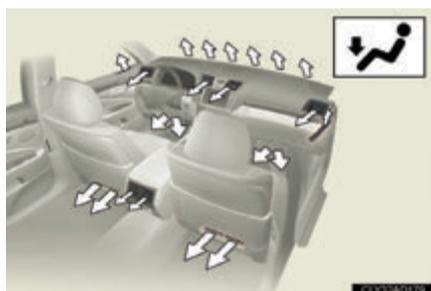

Feet

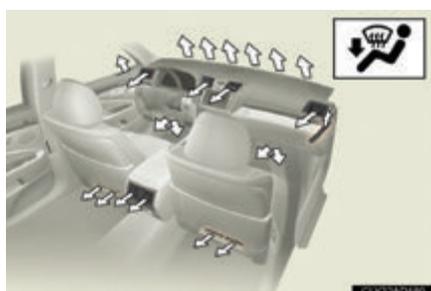

Feet and front windshield

■ Switching between outside air and recirculated air modes

Press .

The mode switches between  (recycles air inside the vehicle), "AUTO" and  (introduces air from outside the vehicle) modes each time the button is pressed.

When the air intake control system is switched to automatic mode, it operates automatically.

Turning the air purifier off

Touch  on the operation screen.

The air purifier will turn off when the indicator on the switch goes off. Air will not flow from the roof vents.

To turn the air purifier on, touch  again.

Changing the rear seat settings

■ Adjusting the temperature setting

STEP 1 Touch .



Touch  (increase) or  (decrease) on the operation screen. Operating the switch will enter individual mode.

1 L: Left-hand rear seat

2 R: Right-hand rear seat

The air conditioning system switches between individual and simultaneous modes each time  is pressed.

■ Adjusting the fan speed (air purifier and cool air from the roof vents)


STEP 1 Touch .

STEP 2 Touch any switch of  (decrease ↔ increase) on the operation screen.

According to the air outlets currently selected, the fan speed of either the cool air from the roof vents or air purifier will be adjusted. (→P. 294)

Press  to turn the fan off.


Defogging the windshield

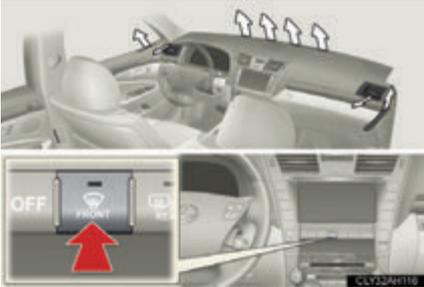

Press .

The air conditioning system control operates automatically.

Micro dust and pollen filter

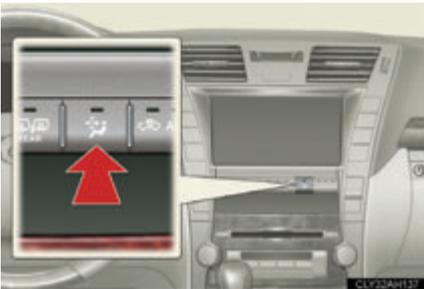

Press .


Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.

Usually the system will turn off automatically after approximately 3 minutes.

To stop the operation, press  again.

Adjusting the sensitivity of the air intake control in automatic mode

STEP 1 Press  until the “Smog Sensor” screen appears while the vehicle is stopped.

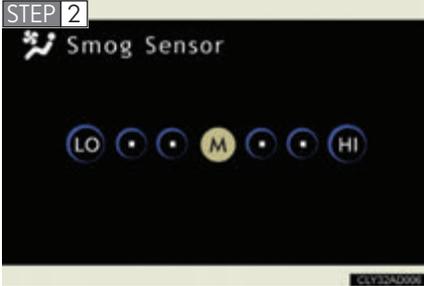

Touch any switch of  (lower sensitivity ↔ higher sensitivity) on the operation screen.


Adjusting the position and opening and closing the air outlets

► Front center outlets



- 1** Direct air flow to the left or right, up or down.
- 2** Turn the knob to open or close the vent.

► Front side outlets

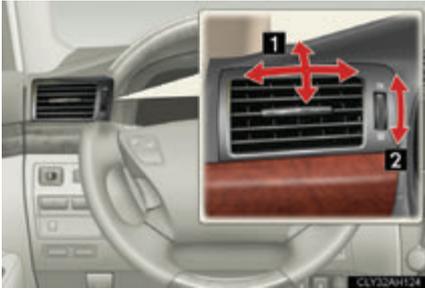

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

► Air outlets of the rear seat →P. 295

■ Using the automatic mode

Fan speed is adjusted automatically in accordance with the temperature setting and ambient conditions. As a result, the following may occur:

- The system may switch automatically to recirculated air mode when the coolest temperature setting is selected in summer.
- Immediately after  is pressed, the fan may stop for a while until warm or cool air is ready to flow.
- Cool air may flow to the area around the upper body when the heater is on.

■ Using the system in recirculated air mode

The windows will fog up more easily if the recirculated air mode is used for an extended period.

■ Window defogger feature

Recirculated air mode may automatically switch to  (outside air) mode in situations where the windows need to be defogged.

■ When the hybrid battery cooling system operates

If the hybrid battery cooling system operates when the air conditioning is off, a message will be shown on the multi-information display and the air conditioning will automatically turn on. (→P. 191)

■ Automatic mode for air intake control

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the air conditioning is off, and the fan is operating, turning the “AUTO” mode on will activate the air conditioning system.

■ Micro dust and pollen filter

● In order to prevent the window from fogging up when the outside air is cold, the following may occur:

- Outside air mode does not switch to .
- The air conditioning system operates automatically.
- The operation cancels after 1 minute.

● In rainy weather, the windows may fog up. Press .

■ Air purifier

The air purifier will turn on when turning the rear air conditioning system on.

CAUTION

■ To prevent the windshield from fogging up

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

NOTICE

■ To prevent the 12-volt battery from being discharged


Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

3-2. Using the air conditioning system and defogger


Rear air conditioning system*

Airflow and outlets are automatically adjusted according to the temperature setting.

► 5-seat models

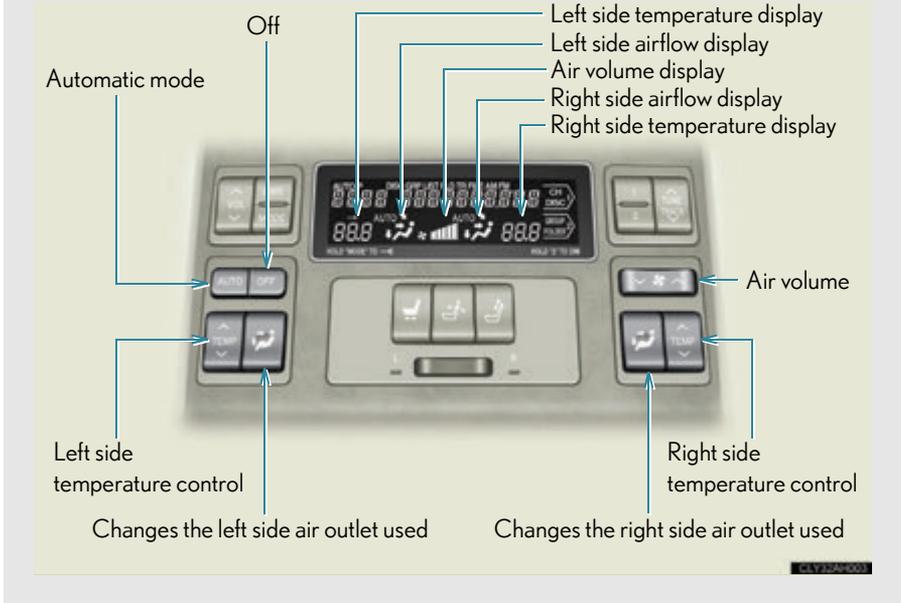

► 4-seat models

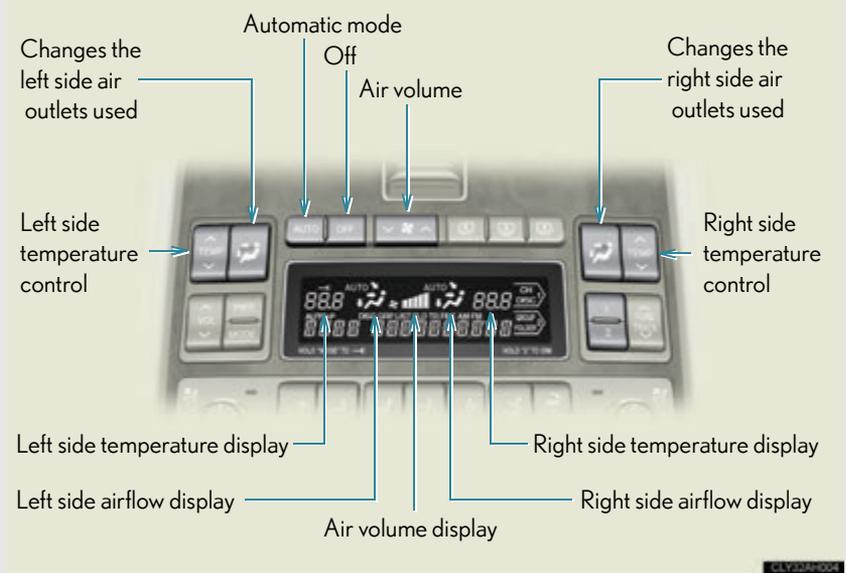

Using the automatic mode

STEP 1 Press .

➔ The air conditioning system and air purifier will operate, and air outlets and fan speed will be set automatically.

“AUTO” will be displayed on the control panel.

STEP 2 Press \wedge on  to increase the temperature and \vee to decrease the temperature.

Air outlets and fan speed for the right-hand and left-hand seats may be set separately depending on the temperature setting.

Adjusting the settings

■ Adjusting the temperature setting

Press \wedge on  to increase the temperature and \vee to decrease the temperature.

Air outlets and fan speed for the right-hand and left-hand seats may be set separately depending on the temperature setting.


■ Changing the air outlets

Press .

The air outlets change as follows each time the  is pressed.

Different air outlets for the right-hand and left-hand rear seats can be chosen.

Air flows as shown below according to the mode selected.

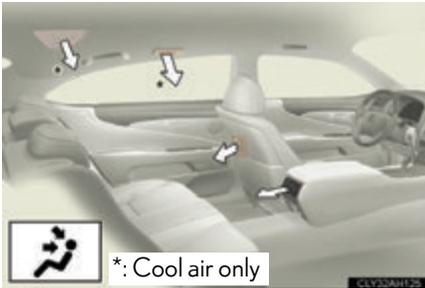

Upper body

When the indicator on  (on the front operation screen) is on



Upper body

When the indicator on  (on the front operation screen) is off



Upper body and feet



Feet


■ Adjusting the air volume

The volume of cool air or air from the air purifier can be adjusted according to the mode selected.

Press ^ (increase) or v (decrease) on .



Cool air flows from roof vents.

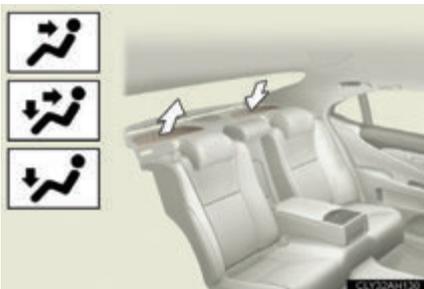


Air purifier operation (air flows from the rear package tray.)

Press  to turn the fan off.

Adjusting the position and opening and closing the air outlets

▶ Rear center outlets

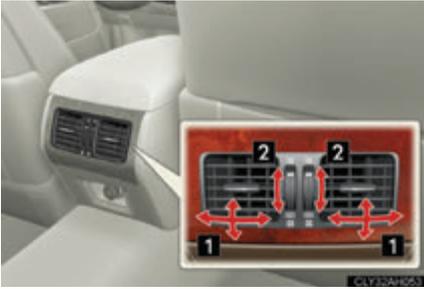

1 Direct air flow to the left or right, up or down.

2 Turn the knob to open or close the vent.


▶ Rear side outlets



1 Direct air flow to the left or right, up or down.

2 Turn the knob to open or close the vent.

▶ Roof side outlets

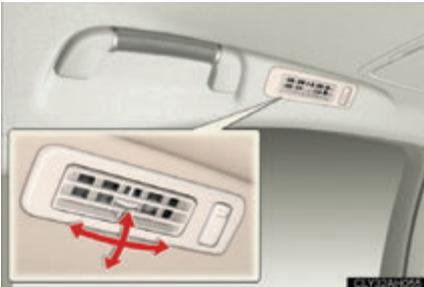

Direct air flow to the left or right, up or down.

■ Button lock function

▶ 5-seat models



To prevent inadvertent operation, the buttons on the rear armrest can be locked. Press **MODE** until you hear a beep to lock the buttons.

Pressing **MODE** again until you hear a beep will release the lock.

The indicator appears on the display when the buttons are locked.

▶ 4-seat models



■ Rear control panel illumination off function

▶ 5-seat models



Control panel illumination on the rear armrest can be turned off. Press  until you hear a beep to turn the illumination off. Pressing  again until you hear a beep will turn the illumination on.

▶ 4-seat models



■ Replacing the rear air conditioning filter

Replacing the air filter when using rear air conditioning or air purifier reduces air flow or deodorizing performance. (→P. 558)

NOTICE


■ To prevent the 12-volt battery from being discharged

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

3-2. Using the air conditioning system and defogger

Rear window and outside rear view mirror defoggers

These features are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

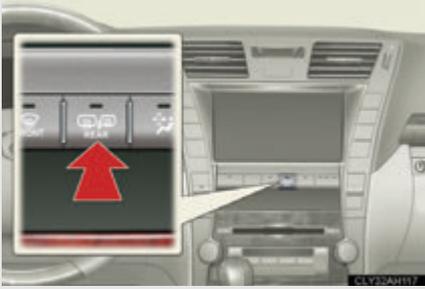

On/off

Press the button to turn on the rear window and outside rear view mirror defoggers. The defoggers will automatically turn off after approximately 15 minutes. Pressing the button again also turns the defoggers off.

CAUTION

When the outside rear view mirror defoggers are on

Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.

3-2. Using the air conditioning system and defogger Windshield wiper de-icer*

This feature is used to prevent ice from building up on the windshield and wiper blades.

► Vehicles without navigation system


STEP 1



Press



STEP 2

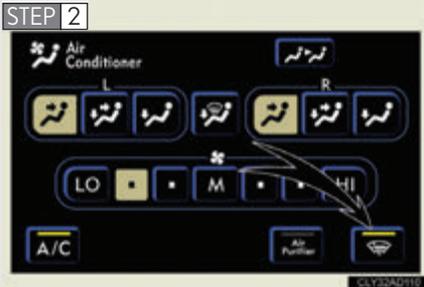


On/off

Touch the switch to turn on the windshield wiper de-icer. The windshield wiper de-icer will automatically turn off after approximately 15 minutes. Touching the switch again also turns the de-icer off.

► Vehicles with navigation system


STEP 1

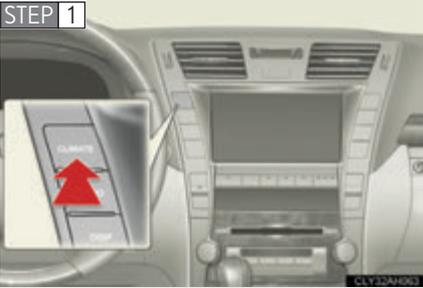

Press



STEP 2

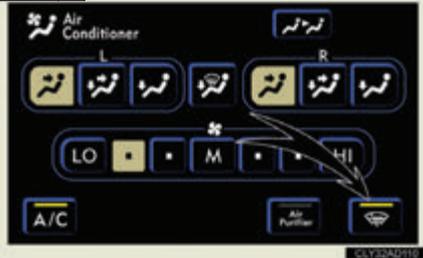

On/off

Touch the switch to turn on the windshield wiper de-icer. The windshield wiper de-icer will automatically turn off after approximately 15 minutes. Touching the switch again also turns the de-icer off.

CAUTION

■ When the windshield wiper de-icer is on

Do not touch the glass at the lower part of the windshield or to the side of the front pillars as the surfaces can become very hot and burn you.

3-3. Using the audio system

Audio system (without navigation system)

DVD player with changer and AM/FM radio

Press  to display the audio operation screen.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".



Title	Page
Using the radio	P. 304
Using the DVD player	P. 309
Playing an audio CD	P. 312
Playing MP3 and WMA discs	P. 316
Playing DVD video/audio	P. 320
Playing a video CD	P. 333
DVD player and DVD video disc information	P. 337
Optimal use of the audio/video system	P. 347
Using the AUX adapter	P. 351
Using the rear seat audio controls	P. 352
Using the steering wheel audio switches	P. 356

■ Using cellular phones

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

 **CAUTION****■ For vehicles sold in U.S.A. and Canada****● Part 15 of the FCC Rules**

FCC Warning:

Any unauthorized changes or modifications to this equipment will void the user's authority to operate this device.

● Laser products

- Do not take this unit apart or attempt to make any changes by yourself.

This is an intricate unit that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.

- This product utilizes a laser.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

 **NOTICE****■ To prevent the 12-volt battery from being discharged**

Do not leave the audio system on longer than necessary when the hybrid system is off.

■ To avoid damaging the audio system

Take care not to spill drinks or other fluids on the audio system.

Setting station presets

STEP 1 Search for desired stations by turning  or pressing



STEP 2 Touch and hold one of the preset stations (1 - 6) until you hear a beep.

Scanning radio stations

■ Scanning the preset radio stations

▶ AM station

STEP 1 Touch  on the screen or press  until "P-SCAN" appears. Preset stations will be played for a few seconds each.

STEP 2 When the desired station is reached, touch  or press  once again.

▶ FM station

STEP 1 Press  until "P-SCAN" appears.

STEP 2 When the desired station is reached, press the button once again.

■ Scanning all radio stations within range

▶ AM station

STEP 1 Touch **SCAN** on the screen or press **SCAN** .

“SCAN” appears on the screen and all stations within range will be played for a few seconds each.

STEP 2 When the desired station is reached, touch **SCAN** or press **SCAN** once again.

▶ FM station

STEP 1 Press **SCAN** .

“SCAN” appears on the screen and all stations within range will be played for a few seconds each.

STEP 2 When the desired station is reached, press **SCAN** once again.

RDS (Radio Data System)

This feature allows your radio to receive station identification information and program information (classical, jazz, etc.) from radio stations which broadcast this information.

■ Receiving RDS broadcasts

STEP 1



Touch **TYPE** or **TYPE** on the screen.

The type of program changes each time the button is pressed.

- “ROCK”
- “EASYLIS” (Easy listening)
- “CLS/JAZZ” (Classical music and Jazz)
- “R & B” (Rhythm and Blues)
- “INFORM” (Information)
- “RELIGION”
- “MISC” (Miscellaneous)
- “ALARM” (Emergency messages)

If the system receives no RDS stations, “NO PTY” appears on the display.

When a program is set, “TYPE SEEK” appears.

STEP 2 Touch **TYPE SEEK** on the screen or press \wedge or \vee on .

The radio seeks or scans for stations by the relevant program type.

If no radio station of that type is found, “NOTHING” appears on the screen.

■ Displaying radio text messages



Touch **MSG** on the screen.

If “MSG” appears on the screen, a text message may be displayed.

When you touch **MSG OFF**, the display returns.

■ Traffic announcement



Touch **TRAF** on the screen.

“TRAF SEEK” appears on the display, and the radio will start seeking any station broadcasting traffic program information.

If no traffic program station is found, “NOTHING” appears on the display.

■ When the 12-volt battery is disconnected

All preset stations are erased.

■ Reception sensitivity

- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- The radio antenna is mounted inside the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

3-3. Using the audio system

Using the DVD player

Insert a disc or press **DISC** with a disc inserted.



Loading a disc

■ Loading a single disc

STEP 1 Press **LOAD**.

STEP 2 When the indicator changes from flashing amber to green, insert a disc after the DVD player door opens.

■ Loading multiple discs

STEP 1 Press and hold **LOAD** until you hear a beep.

STEP 2 When the indicator changes from flashing amber to green, insert a disc after the DVD player door opens.

STEP 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the DVD player door has opened.

STEP 4 Repeat steps 2 and 3 until you have inserted all discs.

To cancel the operation, press the **LOAD** or **PREV/PAUSE** button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ DVD hint screen



This screen appears when a DVD video, DVD audio or video CD is first selected with the “POWER” switch in ACCESSORY or ON mode.

Touch **OK** once you have read the message.

Ejecting discs

Ejecting a disc

STEP 1 To select the disc to be ejected, touch the desired disc on the screen or press \wedge or \vee on  .

STEP 2 Press  and remove the disc.

Ejecting all discs

Press and hold  until you hear a beep, and remove the discs.

Selecting a disc

To select a disc to play




Touch the desired disc on the screen or press \wedge or \vee on  .

3-3. Using the audio system

Playing an audio CD

Insert a disc or press **DISC-CHG** with a disc inserted.

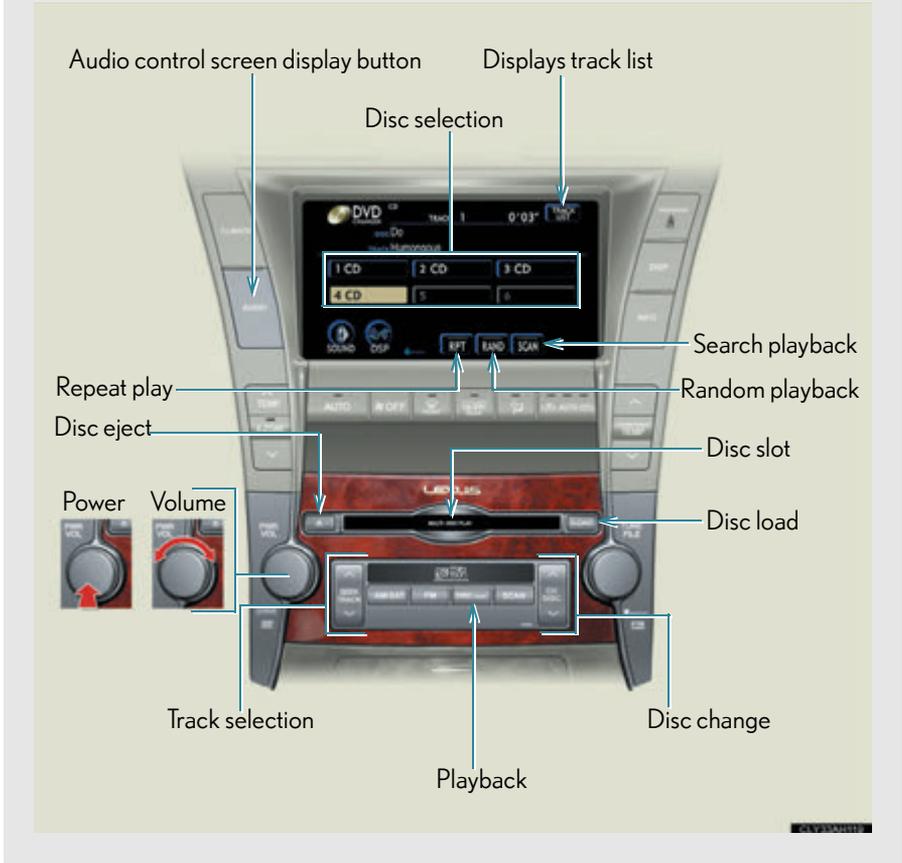

Loading and ejecting discs

→P. 310

Selecting, fast forwarding and scanning tracks

■ Selecting a track

Press \wedge to move up and \vee to move down using  until the desired track number appears on the screen.

To fast forward or reverse, press and hold \wedge or \vee on .

■ Selecting a track from the track list

STEP 1 Touch  on the screen.

STEP 2



Touch the desired track number.

 or : changes the list by 6 track groups

This function is available only when the vehicle is not moving.

■ Scanning a disc

STEP 1 Touch  on the screen.

“SCAN” appears on the screen.

The first 10 seconds of each track will be played.

STEP 2 Touch  once again when the desired track is reached.

Selecting a disc

■ Selecting a disc to play

→P. 311

■ Scanning loaded discs

STEP 1 Touch and hold **SCAN** on the screen until “D-SCAN” appears.

The first 10 seconds of the first track on each disc will be played.

STEP 2 Touch **SCAN** once again when the desired disc is reached.

Random playback

■ Current disc

Touch **RAND** on the screen.

Songs are played in random order.

■ All discs

Touch and hold **RAND** on the screen until “D-RAND” appears.

Tracks on all loaded discs are played in random order.

Repeating a track or a disc

■ Repeating a track

Touch **RPT** on the screen.

■ Repeating a disc

Touch **RPT** on the screen and hold until “D-RPT” appears.

■ Canceling random, repeat and scan playback

Touch **RAND**, **RPT** or **SCAN** on the screen once again.

■ Displaying the title and artist name

If a CD-TEXT disc is inserted, the titles of the disc and track will be displayed. Up to 16 letters can be displayed.


■ Error messages

→P. 337

3-3. Using the audio system

Playing MP3 and WMA discs

Insert an MP3 or WMA disc or press **DISC** with a disc inserted.

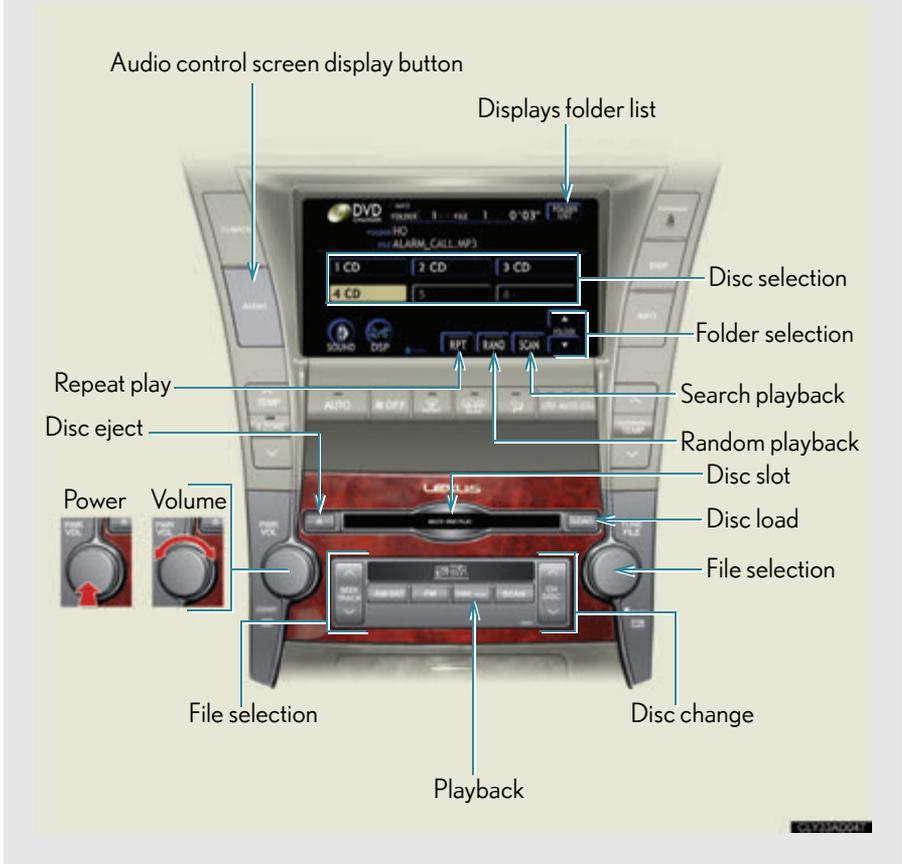

Loading and ejecting MP3 and WMA discs

→P. 310

Selecting MP3 and WMA discs

→P. 313

Selecting a folder

■ Selecting a folder

Touch “FOLDER ” or “” on the screen to select the next/previous folder.

■ Selecting a folder from the folder list

STEP 1 Touch  on the screen.

STEP 2



Touch the desired folder number.

 or : changes the list by 6 folder groups

: displays the details of the file currently playing

: displays the file list

This function is available only when the vehicle is not moving.

■ Selecting the desired folder by cueing the first file of each folder

Touch and hold  on the screen until “FLD·SCAN” appears. When the desired folder is reached, touch  once again.

Selecting and scanning files

■ Selecting one file at a time

Turn  or press \wedge or \vee on  to select the desired file.

■ Selecting a file from the file list

STEP 1 Touch  on the screen to turn the folder list on.



Touch  on the folder list screen.



Touch the desired file number.

 or : changes the list by 6 groups

: displays the folder list

: displays the details of the file currently playing

This function is available only when the vehicle is not moving.

■ Selecting a desired file by cueing the files in the folder

Touch  on the screen.

When the desired file is reached, touch  once again.

Repeat play

■ Repeating a file

Touch **RPT** on the screen.

■ Repeating all of the files in a folder

Touch and hold **RPT** on the screen until “FLD RPT” appears.

Random playback

■ Playing files from a particular folder in random order

Touch **RAND** on the screen.

■ Playing all the files on a disc in random order

Touch and hold **RAND** on the screen until “FLD RAND” appears.

■ Canceling random, repeat and scan playback

Touch **RAND**, **RPT** or **SCAN** on the screen once again.

■ Error messages

→P. 337


3-3. Using the audio system

Playing DVD video/audio

For safety reasons, you can enjoy the visual contents of discs only when the vehicle is completely stopped with the “POWER” switch in ACCESSORY or ON mode and the parking brake applied. While you are driving, only audio contents may be played.

When a DVD video disc or DVD audio disc is inserted while driving, the audio contents of the main feature will automatically be played. However, some discs may not be played from the main story.


Insert a disc or press  with a disc inserted.

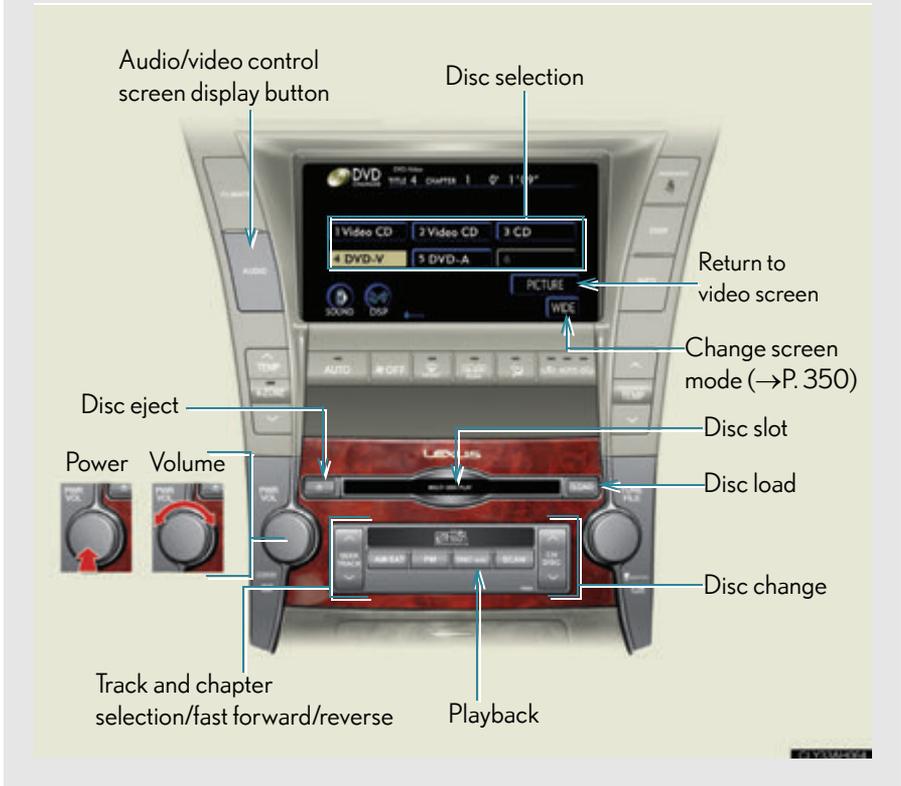

■ Control icon screen


Touch any part of the screen if no icons are shown while watching a video, and the following screen appears.

▶ DVD video mode

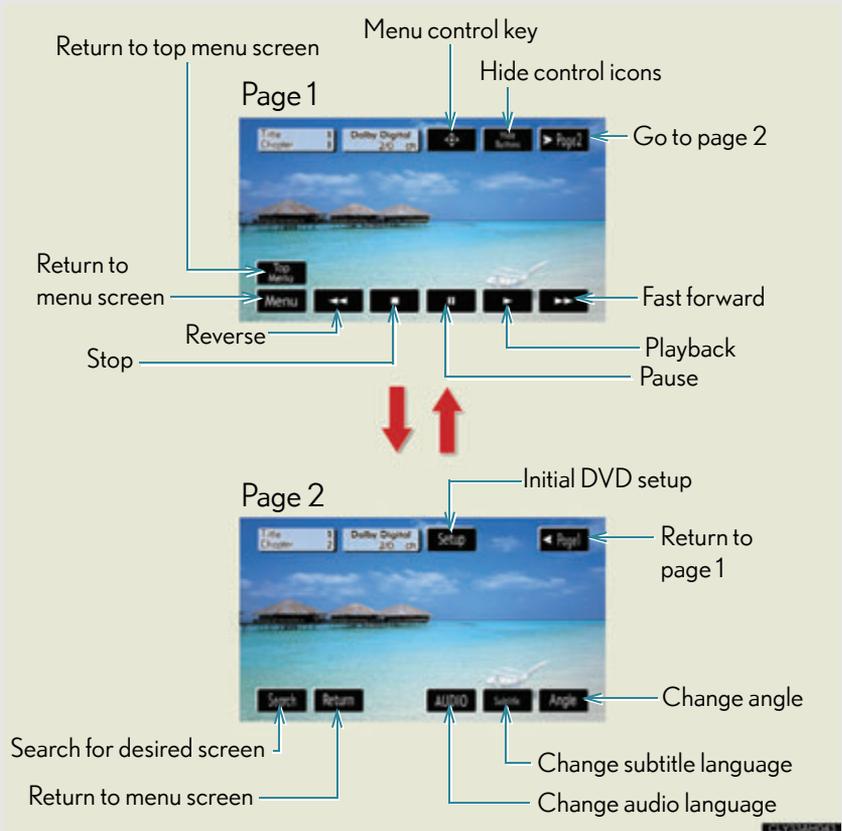

If  appears on the screen when you touch an icon, the operation relevant to that control is not permitted.

▶ DVD audio mode

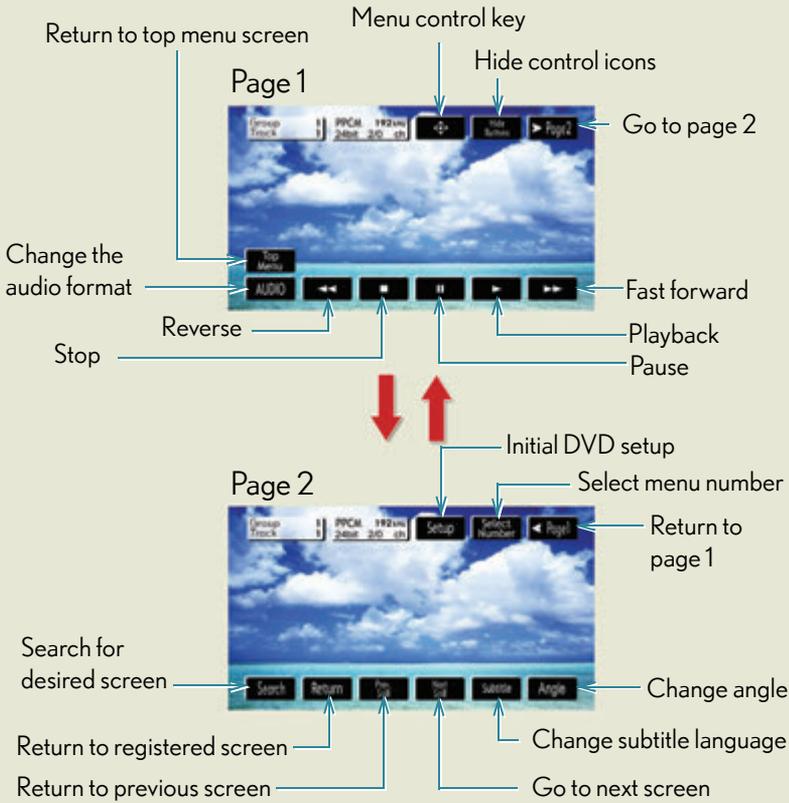

If  appears on the screen when you touch an icon, the operation relevant to that control is not permitted.

Loading, ejecting and selecting discs

→P. 310

Fast forwarding/reversing a disc

Touch and hold  or  on the screen or press and hold \wedge or \vee

on  until you hear a beep.

Slow playback

Touch  and then touch . Video is played slowly while you are touching .

Searching for a desired screen

■ Searching by title (DVD video mode)

STEP 1 Touch  on the control icon screen.

STEP 2



Input the desired title number and then touch .

-  **Clear**: deletes the last input number
-  **<< OFF**: hides the icons. To display the icons, touch  **>> ON**.
-  **<**: returns to the previous screen

■ Searching by group (DVD audio mode)

STEP 1 Touch **Search** on the control icon screen.



Input the group number and then touch **Enter**.

Clear : deletes the last input number

<< OFF : hides the icons. To display the icons, touch **>> ON**.

↩ : returns to the previous screen

■ Playing a bonus group (DVD audio mode only, if the DVD has bonus options)

STEP 1 Touch **Search** on the control icon screen.



Input the desired bonus group number on the group search screen and touch **Enter**.

← : deletes the number

↩ : returns to the previous screen

■ Searching by chapter/track

Press \wedge or \vee on  to select a chapter/track.

■ Selecting a menu number (DVD audio mode only)

STEP 1 Touch  on the control icon screen.




Input the desired menu number on the screen and touch .

Using the DVD menu

STEP 1 Touch  or  on the control icon screen.

Touch  if the menu control key does not appear on the menu screen.

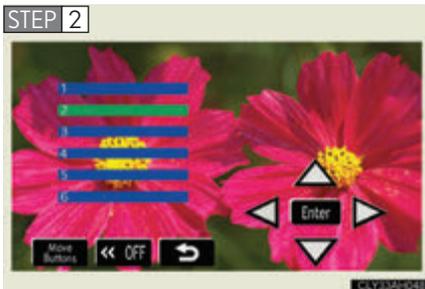

Touch \blacktriangle , \blacktriangledown , \blacktriangleleft or \blacktriangleright to select a menu item, and touch  to select.

-  : moves icons up or down
-  : hides icons. To display icons, touch .
-  : returns to the previous screen

Note that specific items or the operating method differs from one DVD to another. Refer to the manual that comes with the DVD disc. (The above image is an example.)

Changing the subtitle language




Touch **Subtitle** on the control icon screen.

Each time you touch the switch, the next available language is selected.

Hide : hides the subtitles

↶ : returns to the previous screen

Changing the audio language (DVD video only)

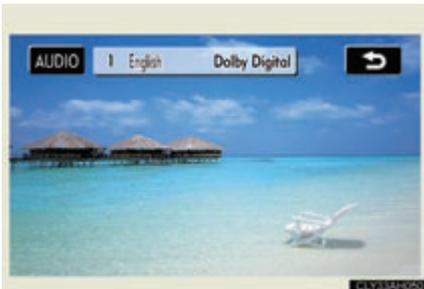


Touch **AUDIO** on the control icon screen.

Each time you touch the switch, the next available language is selected.

↶ : returns to the previous screen

Changing the audio format (DVD audio only)

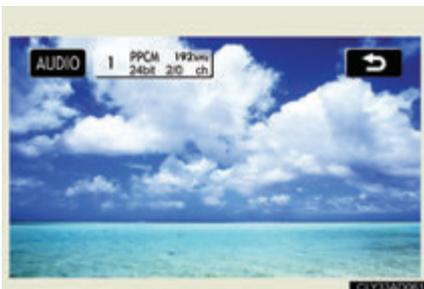

Touch **AUDIO** on the control icon screen.

Each time you touch the switch, the next available audio format is selected.

↶ : returns to the previous screen

Changing the angle (if the angle option is available)

STEP 1 Touch **Angle** on the control icon screen.

STEP 2



Touch **Angle**.

Each time you touch the switch, the next available angle is selected.

↶: returns to the previous screen

Initial DVD setup

■ Displaying “Setup Menu” screen

STEP 1 Touch **Setup** on the control icon screen.

STEP 2



After you change the initial settings, touch **Enter**.

Default: restores default settings

■ Setting audio language

STEP 1 Touch  on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, touch  and input the desired language code. (→P. 330)

: returns to the previous screen

■ Setting subtitle language

STEP 1 Touch  on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, touch  and input the desired language code. (→P. 330)

: returns to the previous screen

■ Setting menu language

STEP 1 Touch  on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, touch  and input the desired language code. (→P. 330)

: returns to the previous screen

■ Setting angle mark “ON” or “OFF”


If the DVD has angle options, you can turn the angle mark on or off.

Touch  on the “Setup Menu” screen. Each time you touch the switch, the multi angle mark on the screen turns on or off alternately.

■ Parental lock

STEP 1 Touch **Parental Lock** on the “Setup Menu” screen.

STEP 2

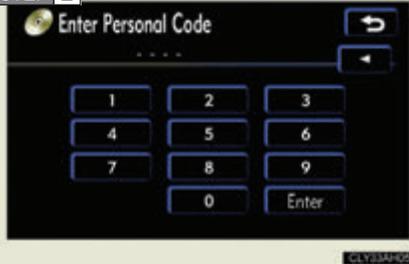

Input the 4-digit personal code and then touch **Enter**.

If you enter wrong numbers, touch **←** to delete the numbers.

Touch **←** 10 times to reset the personal code.

STEP 3 Select a parental level (1 - 8). (→P. 340)

↩: returns to the previous screen

■ Entering a language code

If you touch **Other** on the “Select Audio Language” screen, “Select Subtitle Language” screen or “Select DVD Language” screen, you can select a language by entering the 4-digit language code if that language is available.



Input the 4-digit language code and then touch **Enter**.

←: deletes the last input digit

↩: returns to the previous screen

● Language codes

Code	Language	Code	Language	Code	Language
0514	English	0207	Bulgarian	0712	Galician
0618	French	0208	Bihari	0714	Guarani
0405	German	0209	Bislama	0721	Gujarati
0920	Italian	0214	Bengali	0801	Hausa
0519	Spanish	0215	Tibetan	0809	Hindi
2608	Chinese	0218	Breton	0818	Croatian
1412	Dutch	0301	Catalan	0821	Hungarian
1620	Portuguese	0315	Corsican	0825	Armenian
1922	Swedish	0319	Czech	0901	Interlingua
1821	Russian	0325	Welsh	0905	Interlingue
1115	Korean	0401	Danish	0911	Inupiak
0512	Greek	0426	Bhutani	0914	Indonesian
0101	Afar	0515	Esperanto	0919	Icelandic
0102	Abkhazian	0520	Estonian	0923	Hebrew
0106	Afrikaans	0521	Basque	1001	Japanese
0113	Amharic	0601	Persian	1009	Yiddish
0118	Arabic	0609	Finnish	1023	Javanese
0119	Assamese	0610	Fiji	1101	Georgian
0125	Aymara	0615	Faroese	1111	Kazakh
0126	Azerbaijani	0625	Frisian	1112	Greenlandic
0201	Bashkir	0701	Irish	1113	Cambodian
0205	Byelorussian	0704	Scots-Gaelic	1114	Kannada

Code	Language	Code	Language	Code	Language
1119	Kashmiri	1415	Norwegian	1914	Shona
1121	Kurdish	1503	Occitan	1915	Somali
1125	Kirghiz	1513	(Afan) Oromo	1917	Albanian
1201	Latin	1518	Oriya	1918	Serbian
1214	Lingala	1601	Panjabi	1919	Siswati
1215	Laothian	1612	Polish	1920	Sesotho
1220	Lithuanian	1619	Pashto, Pushto	1921	Sundanese
1222	Latvian	1721	Quechua	1923	Swahili
1307	Malagasy	1813	Rhaeto- Romance	2001	Tamil
1309	Maori	1814	Kirundi	2005	Telugu
1311	Macedonian	1815	Romanian	2007	Tajik
1312	Malayalam	1823	Kinyarwanda	2008	Thai
1314	Mongolian	1901	Sanskrit	2009	Tigrinya
1315	Moldavian	1904	Sindhi	2011	Turkmen
1318	Marathi	1907	Sangho	2012	Tagalog
1319	Malay	1908	Serbo- Croatian	2014	Setswana
1320	Maltese	1909	Sinhalese	2015	Tonga
1325	Burmese	1911	Slovak	2018	Turkish
1401	Nauru	1912	Slovenian	2019	Tsonga
1405	Nepali	1913	Samoan	2020	Tatar

Code	Language	Code	Language	Code	Language
2023	Twi	2209	Vietnamese	2515	Yoruba
2111	Ukrainian	2215	Volapük	2621	Zulu
2118	Urdu	2315	Wolof		
2126	Uzbek	2408	Xhosa		

■ Error messages

If “Region Code Error” is displayed, check if the region code printed on the DVD matches the player’s region code.


If a different message is displayed: →P. 337

3-3. Using the audio system

Playing a video CD


For safety reasons, you can enjoy the visual contents of discs only when the vehicle is completely stopped with the "POWER" switch in ACCESSORY or ON mode and the parking brake applied. While you are driving, only audio contents may be played.

Insert a disc or press  with a disc inserted.

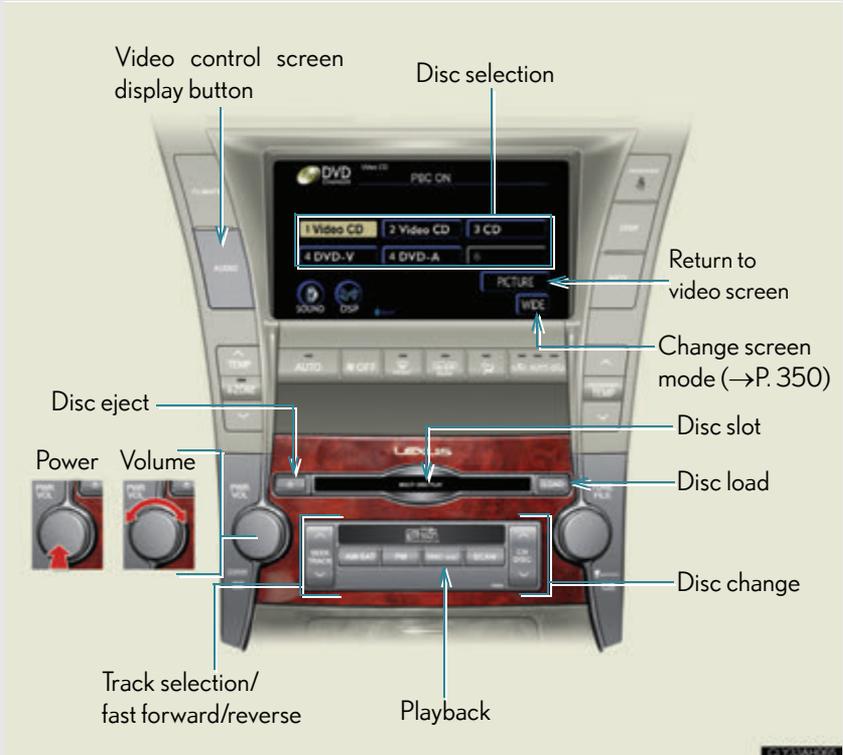

■ Control icon screen

Touch any part of the screen if no icons are shown while watching a video CD, and the following screen appears.

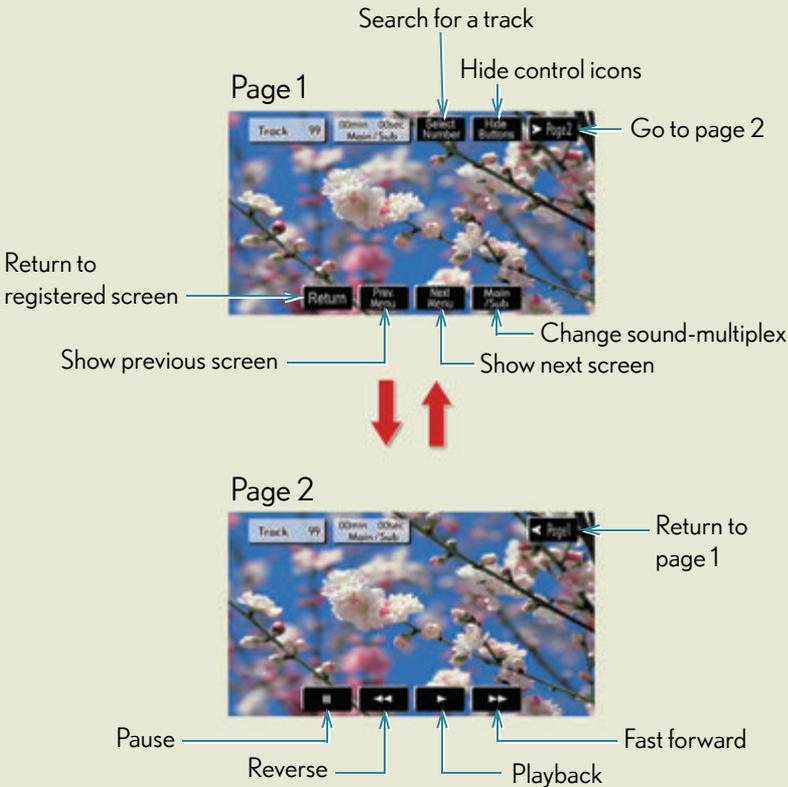

If  appears on the screen when you touch an icon, the operation relevant to that control is not permitted.

Loading, ejecting and selecting discs

→P. 310

Fast forwarding/reversing a video CD

Touch and hold  or  on the control icon screen or press and hold \wedge or \vee on  until you hear a beep.

Slow playback

Touch  and then touch  on the control icon screen. Video is played slowly while you are touching .

Using the video CD menu

Touch  on the control icon screen.

Refer to the manual that comes with the video CD for specific menu items.

Selecting a desired screen

■ Searching manually

Touch **Prev. Menu** or **Next Menu** on the screen, or press \wedge or \vee on  until the desired screen appears.

■ Searching by number

STEP 1 Touch **Select Number** on the control icon screen.

STEP 2



Input the desired track number on the screen and touch **Enter**.

Clear: deletes the last input number

<< OFF: hides icons. To display icons, touch **>> ON**.

↶: returns to the previous screen

Changing the sound-multiplex mode

Touch **Main/Sub** on the control icon screen. The mode cycles through each time the switch is touched.

“Main” → “Sub” → “Main/Sub”



■ Error messages

→P. 337

3-3. Using the audio system

DVD player and DVD video disc information

■ Error messages


Refer to the following table and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

Message	Cause	Correction Procedures
No disc	There is no disc in the DVD player.	Insert a disc.
Check DISC X	<ul style="list-style-type: none">• The disc X is dirty or damaged.• The disc X is inserted upside down.• The disc X is not playable with the player.	<ul style="list-style-type: none">• Clean the disc.• Insert the disc correctly.• Confirm the disc is playable with the player.
DVD error	<ul style="list-style-type: none">• There is a malfunction within the system.• Operation is stopped due to a high temperature inside the player.	<ul style="list-style-type: none">• Eject the disc.• Eject the disc and allow the player to cool down.
NO MUSIC FILE	This indicates that no playable data is included in the disc.	Eject the disc.

■ DVD video discs

- The DVD player conforms to NTSC color TV formats.
- Region code: Some DVD video discs have a region code indicating the region in which you can use the DVD video disc. If the DVD video disc is not labeled as "ALL" or "1", you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, "Region Code Error" appears on the screen. Even if the DVD video disc does not have a region code, you may not be able to use it.
- The DVD player supports multi-channel sound is output.

■ Symbols shown on DVD video discs

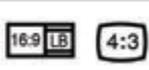Symbol	Meaning
	Indicates NTSC format
	Indicates the number of audio tracks
	Indicates the number of language subtitles
	Indicates the number of angles
	Indicates the screen display ratios available Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code ALL: in all countries Number: region code

■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



■ DVD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the DVD player is being used.

■ If discs are left inside the DVD player or in the ejected position for extended periods

Discs may be damaged and may not play properly.

■ Lens cleaners

Do not use lens cleaners. Doing so may damage the DVD player.

■ DVD video disc information

● DVD video discs

A DVD video disc is a Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

- Viewer restrictions

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2-7: DVD video discs for children and G-rated movies can be played.

Level 8: All types of DVD video discs can be played.

- Multi-angle option

You can enjoy the same scene from different angles.

- Multi-language option

You can select the subtitle and audio languages.

- Region codes

The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. (→P. 337)

- Audio

This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

- Title and chapter

Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

Title: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A title is comprised of one or more chapters.

■ Sound

● Dolby Digital

Manufactured under license from Dolby Laboratories

“Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works.

©1992-1997 Dolby Laboratories. All rights reserved.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation.

Reverse engineering or disassembly is prohibited.

● DTS

“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater System, Inc.

■ MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media TMAudio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

● MP3 file compatibility

• Compatible standards

MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)

• Compatible sampling frequencies

MPEG1 LAYER3: 32, 44.1, 48 (kHz)

MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)

• Compatible bit rates (compatible with VBR)

MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)

MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)

• Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility

- Compatible standards
WMA Ver. 7, 8, 9
- Compatible sampling frequencies
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)
Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)
Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

- Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible if the CD-R or CD-RW is not finalized. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used:

- Disc formats: CD-ROM Mode 1 and Mode 2
CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)
MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- Discs containing multi-session recordings

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

● ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

● MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

● Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they may be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

● Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.

 CAUTION

■ DVD video precaution

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source.

Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.


 NOTICE

■ Discs and adapters that cannot be used

Do not use the following types of discs, 3 in. (8 cm) disc adapters or Dual Discs. Doing so may damage the player and/or disc insert/eject function.



- Discs that have a diameter that is not 4.7 in. (12 cm)

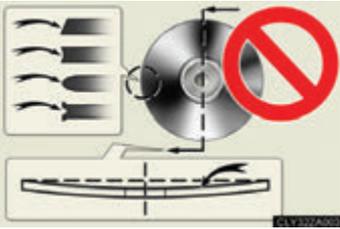

- Low-quality or deformed discs



- Discs with a transparent or translucent recording area



- Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off

NOTICE

■ Player precautions

Failure to follow the precautions below may result in damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.




- Do not insert more than one disc at a time.

3-3. Using the audio system

Optimal use of the audio/video system

Press  to display the audio/video control screen.

▶ Operating the radio and audio CD

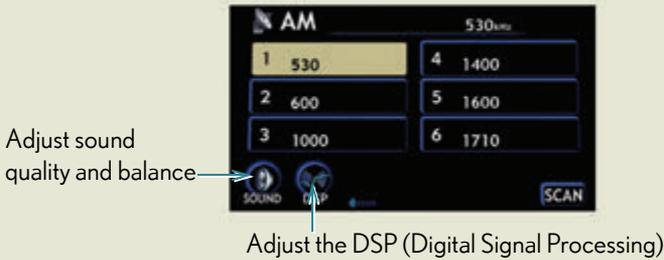


▶ Operating the DVD video/audio and video CD



Adjusting sound quality and balance

STEP 1 Touch  on the screen.

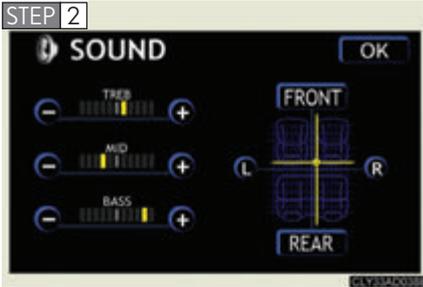

Adjust the settings, referring to the following table.

Once you have finished, touch

.

Sound quality mode	Display	Level	Touch
High-pitched tones*		-5 to 5	
Mid-pitched tones*		-5 to 5	 or 
Low-pitched tones*		-5 to 5	
Front/rear volume balance		F7 to R7	 or 
Left/right volume balance		L7 to R7	 or 

*: The sound quality level is adjusted individually in each radio, CD or DVD mode.

Setting DSP (Digital Signal Processing)



The following features can be set as desired by touching  on the screen:

■ Turning Automatic Sound Levelizer (ASL) “ON” or “OFF”

Touch  or .

ASL automatically adjusts the volume and tone quality according to the noise level as you drive your vehicle.

■ Turning the surround “ON” or “OFF”

Touch  or .

Setting the screen ratio mode

STEP 1 Touch **WIDE** on the screen.



Touch one of **NORMAL**, **WIDE1** or **WIDE2** to match the screen ratio printed on the DVD.

Screen ratio mode	Details
"NORMAL"	Suitable for 4:3 screen ratio
"WIDE1"	Expands the normal screen horizontally to fill the display
"WIDE2"	Suitable for 16:9 screen ratio

3-3. Using the audio system

Using the AUX adapter

This adapter can be used to connect a portable audio device and listen to it through the vehicle's speakers.

STEP 1



Connect the portable audio device.

STEP 2 Press **AUX** .

■ Operating portable audio devices connected to the audio system

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

■ When using a portable audio device connected to the power outlet


Noise may occur during playback. Use the power source of the portable audio device.

3-3. Using the audio system

Using the rear seat audio controls*


Some front audio features can be controlled from the rear seats.

► 5-seat models

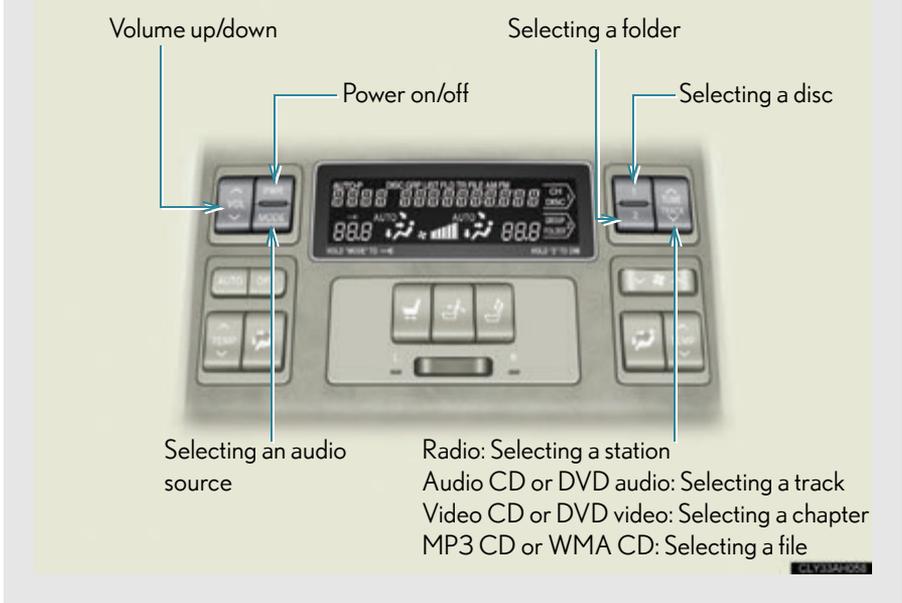

*: If equipped

► 4-seat models

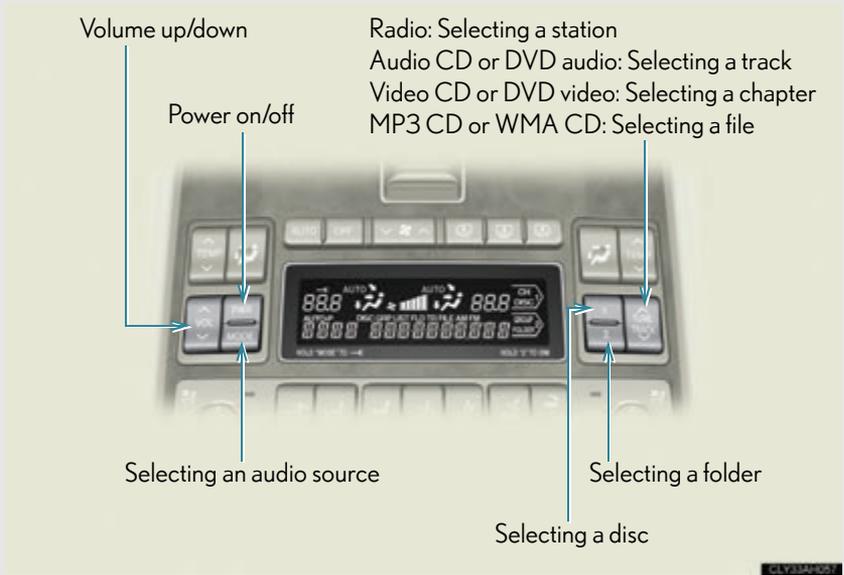

Turning the power


Press  to turn the front audio system on.

Pressing the button again turns the system off.

Changing the audio source

Press  to change the audio source. The audio source changes as follows each time the button is pressed. If a CD or DVD is not inserted, that mode will be skipped.

AM → FM1 → FM2 → DVD player → AUX

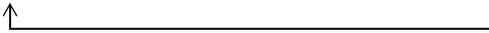

Adjusting the volume

Press \wedge on  to increase the volume and \vee to decrease the volume.

Press and hold the button to continue increasing or decreasing the volume.

Selecting a radio station

STEP 1 Press  to select a frequency band.

STEP 2 Press \wedge or \vee on  to select a radio station.

To scan for receivable stations, press and hold the button until you hear a beep.

Selecting a track (audio CD or DVD audio) or chapter (video CD or DVD video)

STEP 1 Press  to select the DVD player.

STEP 2 Press  (DISC) to select a disc.

STEP 3 Press \wedge or \vee on  to select a track or chapter.

Selecting a file (MP3 CD or WMA CD)

STEP 1 Press  to select the DVD player.

STEP 2 Press  (DISC) to select a disc.

STEP 3 Press  (FOLDER) to select a folder.

STEP 4 Press \wedge or \vee on  to select a file.

■ Button lock function

To prevent inadvertent operation, some buttons on the rear armrest can be locked. (→P. 296)

■ Rear control panel illumination off function

Control panel illumination on the rear armrest can be turned off. (→P. 297)

■ When “ERROR”, “WAIT” or “NO MUSIC” is shown on the display

Refer to the following and take the appropriate measures. If the problem is not rectified, take the vehicle to your Lexus dealer.

“ERROR”: This indicates a trouble either in the disc or inside the player. The disc may be dirty, damaged, or inserted up-side down.


“WAIT”: Operation is stopped due to a high temperature inside the player. Eject the disc and allow the player to cool down.

“NO MUSIC”: This indicates that an MP3/WMA file is not included in the disc.

3-3. Using the audio system

Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

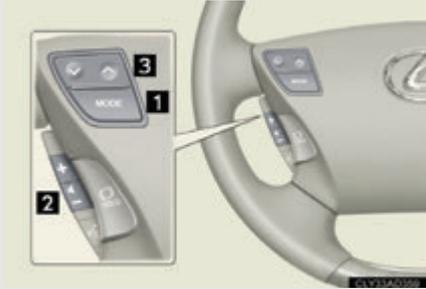

1 Turns the power on, selects audio source

2 Volume

3 Radio mode: Selects radio stations

CD mode: Selects tracks, files (MP3 and WMA) and discs

DVD mode: Selects tracks, chapters and discs

Turning on the power

Press  when the audio system is turned off.

The audio system can be turned off by holding the switch down for 1 second or more.

Changing the audio source

Press  when the audio system is turned on. The audio source changes as follows each time the switch is pressed. If no discs are inserted in the player, that mode will be skipped.

FM1→FM2→DVD player→AUX→AM



Adjusting the volume

Pull  to increase the volume and  to decrease the volume.

Hold up the switch to continue increasing or decreasing the volume.

Selecting a radio station

STEP 1 Press  to select the radio mode.

STEP 2 Press \wedge or \vee on  to select a radio station.

To scan for receivable stations, press and hold \wedge or \vee on the switch until you hear a beep.

Selecting a track/file or chapter

STEP 1 Press  to select the CD or DVD mode.

STEP 2 Press \wedge or \vee on  to select the desired track/file or chapter.

Selecting a disc in the DVD player

STEP 1 Press  to select the CD or DVD mode.

STEP 2 Press and hold \wedge or \vee on  until a beep is heard.

■ Canceling automatic selection of a radio station

Press the same switch.

CAUTION

■ To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.

3-4. Using the rear seat entertainment system

Rear seat entertainment system features*

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.


► 5-seat models



- 1 Front audio system
- 2 Display
- 3 Rear seat entertainment system controller
- 4 A/V input adapter

*: If equipped

► 4-seat models

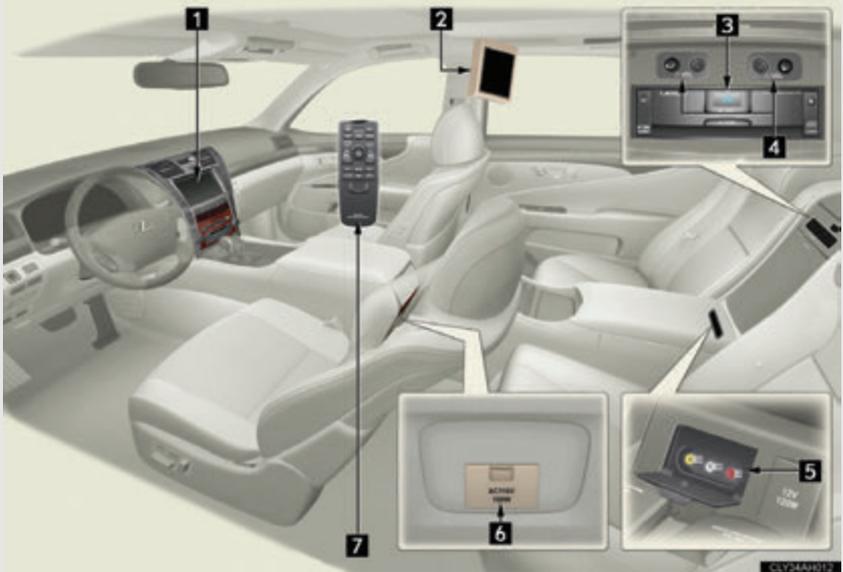

- 1** Front audio system
- 2** Display
- 3** DVD player
- 4** Headphone volume control knobs and headphone jacks
- 5** A/V input adapter
- 6** Power outlet
- 7** Rear seat entertainment system controller

Rear seat entertainment system controller




To use the buttons under the cover, slide the cover down.

Opening and closing the display

Opening and closing the display

▶ Without navigation system

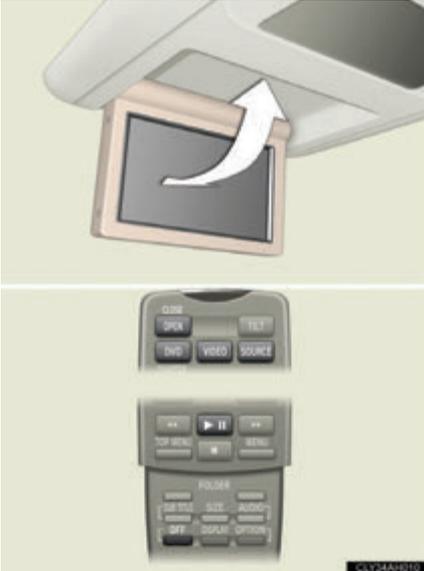

● Open

Press **CLOSE** / **OPEN** , **DVD** , **VIDEO** or




● Close

Press **CLOSE** / **OPEN** or **OFF** .


If the display is closed with an image shown, the image will automatically turn off. (The sound will not be turned off.)

Opening and closing operations can be performed from the front seat. (→P. 269)

▶ With navigation system

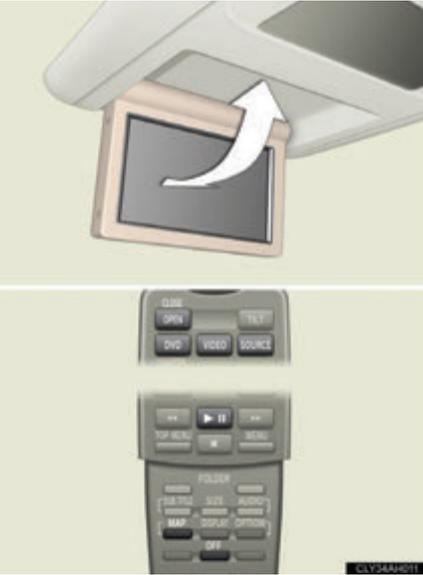

■ Tilting the display

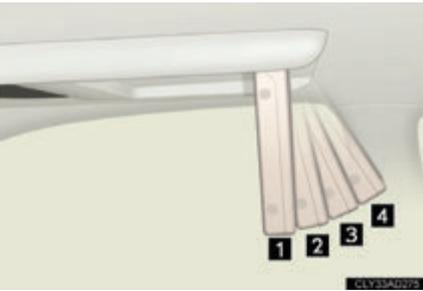

● Open

Press **CLOSE OPEN** , **DVD** , **MAP** , **VIDEO** or **▶ ||** .

● Close

Press **CLOSE OPEN** or **OFF** .

If the display is closed with an image shown, the image will automatically turn off. (The sound will not be turned off.)


Opening and closing operations can be performed from the front seat. (→P.269)

The display angles change as follows each time **TILT** is pressed.

1 → **2** → **3** → **4** → **1**

The display angle is memorized and will be recalled when the "POWER" switch is turned to ACCESSORY or ON mode again.

■ Caution screen

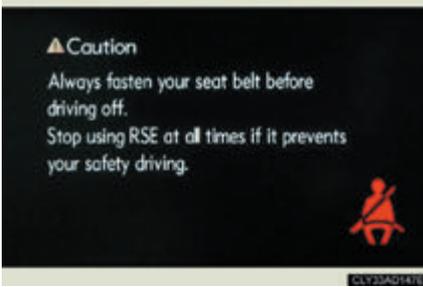

This screen appears for a few seconds when the rear display is opened. During this time, only



can be operated.

Headphone jacks (4-seat models)



To listen to the rear audio, use headphones.

- 1** To use the headphones
Connect them to the jack.
- 2** To adjust the volume

Turn the knob clockwise to increase the volume. Turn the knob counterclockwise to decrease the volume.

Changing the source



Press **SOURCE** to display the audio source selection screen.



Select an audio source.

Changing the speaker output



To play the rear audio over the speakers in the vehicle, turn **Speaker Output** on.

■ The rear seat entertainment system can be used when

The "POWER" switch is in ACCESSORY or ON mode.

■ Jam protection function

The display will stop closing and return to its previous position if something gets in the way of it closing.

■ When appears on the screen

It indicates that the selected icon cannot be used at this time.

■ Rear system lock


→P. 269

■ Before using the controller (for new vehicle owners)



An insulating sheet is set to prevent the batteries from being depleted. Remove the insulating sheet before using the remote control.

■ When the controller batteries are fully depleted

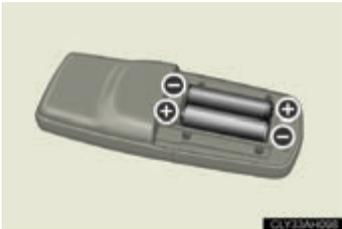

Remove the depleted batteries and install new batteries.

■ Headphones

With some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Contact your Lexus dealer for further details.

■ Volume

- Adjust the volume when you connect the headphones to the jack. Loud sounds may have a significant impact on the human body.
- Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

CAUTION

■ When the rear seat entertainment system is not used

Keep the display closed.

In the event of an accident or sudden braking, an occupant may hit the opened display, resulting in injury.

■ To prevent accidents and electric shock

Do not disassemble or modify the remote control.

■ When the remote controller is not used

Stow the remote controller.

Injuries may result in the event of an accident or sudden braking.

■ Closing the display

Never use any part of your body to intentionally activate the jam protection function.

■ For vehicles sold in the U.S.A. and Canada

Laser products (→P. 303)

NOTICE

■ **Cleaning the display**

Wipe the display with a dry soft cloth.

If the screen is wiped with a rough cloth, the surface of the screen may be scratched.

■ **To prevent damage to the remote control**

- Keep the remote control away from direct sunlight, high temperature and high humidity.
- Do not drop or knock the remote control against hard objects.
- Do not sit on or place heavy objects on the remote control.

■ **DVD player**

Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

■ **Closing the display**

Do not close the display using your hand. Doing so may result in a malfunction.

3-4. Using the rear seat entertainment system

Using the radio



Select radio mode on the source screen to display the control screen.

Selecting a preset station

Press \wedge or \vee on  until the desired station band appears on the screen.

Tuning the station

Press \wedge or \vee on  until the desired station appears on the screen.

Press \wedge or \vee on  and the stations will be searched automatically one after another.


3-4. Using the rear seat entertainment system

Using the front DVD player



Selecting a disc

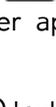

Press  or  until the desired slot number appears on the screen.

- Audio CD, CD text →P. 371
- MP3/WMA disc →P. 372
- DVD video/audio →P. 374
- Video CD →P. 387

3-4. Using the rear seat entertainment system

Using the rear DVD player (4-seat models)



Press **DVD** or select “Rr-DVD” on the source screen to display the control screen.

Loading a disc



Open the cover.



Insert the disc into the slot with the label side up.

The “DISC” indicator light turns on while the disc is loaded.

The player will play the track or chapter, and will repeat it after it reaches the end.

STEP 3 Close the cover.

Ejecting a disc

STEP 1



Open the cover.

STEP 2



Press  and remove the disc.

STEP 3 Close the cover.

Playing a disc



- Audio CD, CD text →P. 371
- MP3 disc →P. 372
- DVD video/audio →P. 374
- Video CD →P. 387

The rear DVD player cannot play WMA files.

3-4. Using the rear seat entertainment system

Playing an audio CD/CD text

■ Selecting a track



Press \wedge or \vee on  until the desired track number appears on the screen.

■ Fast forwarding or reversing a track

Press and hold \wedge or \vee on .

3-4. Using the rear seat entertainment system

Playing WMA (front DVD player only)/MP3 discs

■ Selecting a file



Press \wedge or \vee on  until the desired file number appears on the screen.

■ Selecting a folder

Press \wedge or \vee on  until the desired folder number appears on the screen.

■ Fast forwarding or reversing a file

Press \wedge or \vee on .

3-4. Using the rear seat entertainment system

Playing the HDD audio (vehicles with navigation system)



Select “HDD” on the source screen to display the control screen.

Selecting a track

Press \wedge or \vee on  until the desired track number appears on the screen.

Selecting a list

Press \wedge or \vee on  until the desired track number appears on the screen.

Fast forwarding or reversing a track

Press \wedge or \vee on .

3-4. Using the rear seat entertainment system

Playing DVD video/audio

■ Controller




- 1 Turning on the DVD mode
- 2 Selecting a chapter/track
- 3 Reversing a disc
- 4 Turning on the title selection screen
- 5 Changing the subtitle language
- 6 Turning on the control icon screen
- 7 Changing the audio language
- 8 Stopping a disc
- 9 Turning on the menu disc
- 10 Fast forwarding a disc
- 11 Playing/pausing a disc
- 12 Selecting an icon
- 13 Inputting the selected icon

■ Control icon screen

Press **OPTION** if no icons are shown while watching a DVD video, and the following screen appears.

▶ DVD video mode

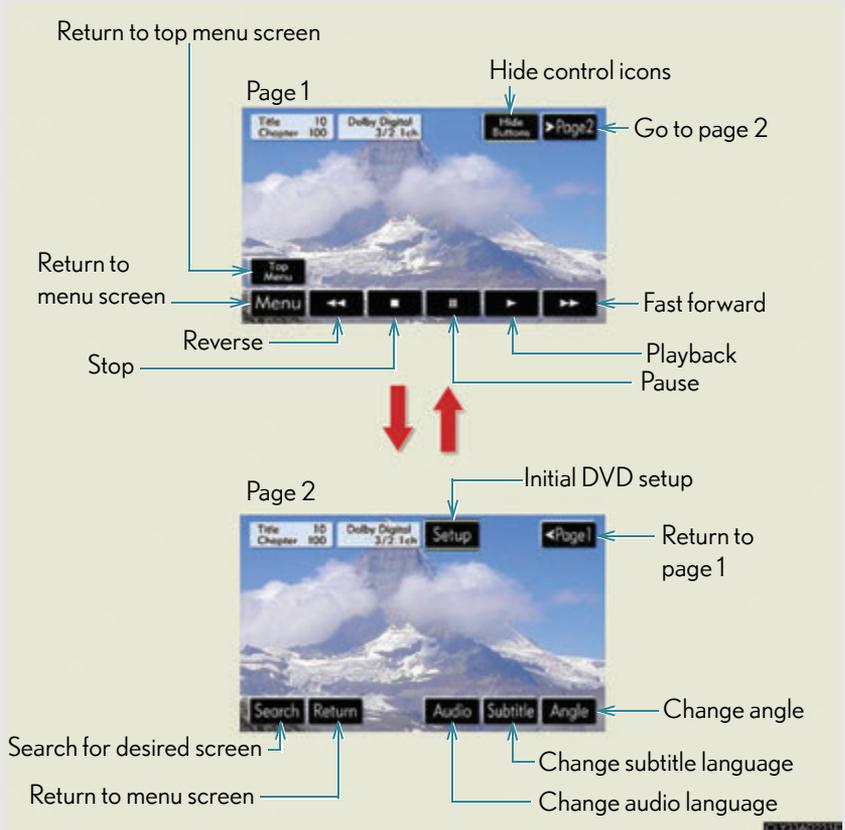

If **⊘** appears on the screen when you select an icon, the operation relevant to that control is not permitted.

► DVD audio mode

Return to top menu screen

Page 1

Hide control icons

Go to page 2

Change the audio format

Fast forward

Reverse

Playback

Stop

Pause

Initial DVD setup

Page 2

Select menu number

Return to page 1

Search for desired screen

Change angle

Return to registered screen

Change subtitle language

Return to previous screen

Go to next screen

If  appears on the screen when you select an icon, the operation relevant to that control is not permitted.

Turning on or off the control icons

Press  to turn on the control icons.

Press  once again or select  to turn off the control icon.

Turning on the title selection screen

Press  or select  to turn on the title selection screen. For the operation of the title selection screen, see the separate manual for the DVD disc.

Turning on the menu screen (DVD video mode only)

Press  or select  to turn on the menu screen. For the operation of the menu screen, see the separate manual for the DVD disc.

Fast forwarding/reversing a disc

Perform either of the following:

● Select  or  on the screen by pressing and holding .

● Press and hold \wedge or \vee on .

Slow playback

Select  and then select . Video is played slowly when you select  by pressing and holding .

Returning to the previous screen


Select **Return** to return to the previous screen. For the operation of the menu screen, see the separate manual for the DVD disc.

Searching for a desired screen

■ Searching by title (DVD video mode)

STEP 1 Select **Search** on the control icon screen.

STEP 2

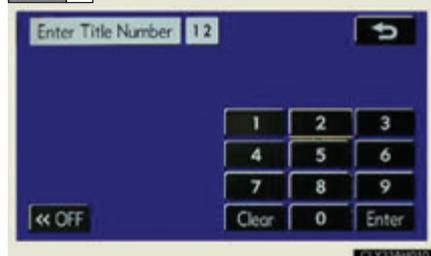

Input the desired title number and then select **Enter**.

Clear: deletes the last input number

<< OFF: hides the icons. To display the icons, select **>> ON**.

↩: returns to the previous screen

■ Searching by group (DVD audio mode)

STEP 1 Select **Search** on the control icon screen.

STEP 2



Input the group number and then select **Enter**.

Clear: deletes the last input number

<< OFF: hides the icons. To display the icons, select **>> ON**.

↩: returns to the previous screen

■ Playing a bonus group (DVD audio mode only, if the DVD has bonus options)

STEP 1 Select **Search** on the control icon screen.

STEP 2



Input the desired bonus group number on the group search screen and select **Enter**.

 : deletes the number

 : returns to the previous screen

■ Searching by chapter/track

Press \wedge or \vee on  to select a chapter/track.

■ Selecting a menu number (DVD audio mode only)

STEP 1 Select **Select Number** on the control icon screen.

STEP 2




Input the desired menu number on the screen and select **Enter**.

Changing the subtitle language

STEP 1 Press **SUB TITLE** or select **Subtitle** on the control icon screen.

STEP 2

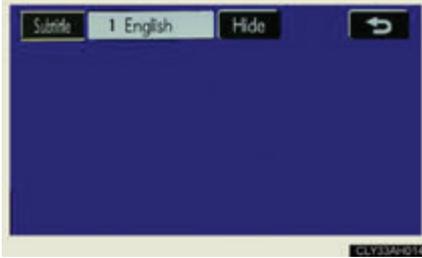

Select **Subtitle**.

Each time you press **ENT**, the next available language is selected.


Hide : hides the control icons

↩ : returns to the previous screen

Changing the audio language (DVD video only)

STEP 1 Press **AUDIO** or select **Audio** on the control icon screen.

STEP 2

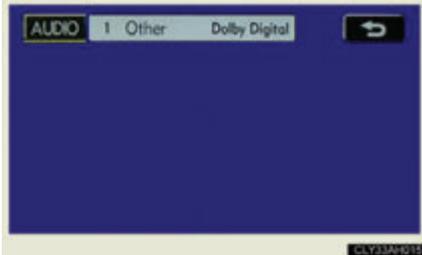

Select **AUDIO**.

Each time you press **ENT**, the next available language is selected.

↩ : returns to the previous screen

Changing the audio format (DVD audio only)

STEP 1 Press **AUDIO** or select **AUDIO** on the control icon screen.

STEP 2



Select **Audio**.

Each time you press **ENT**, the next available audio format is selected.

↩: returns to the previous screen

Changing the angle (If the angle option is available)

STEP 1 Select **Angle** on the control icon screen.

STEP 2



Select **Angle**.

Each time you press **ENT**, the next available angle is selected.

↩: returns to the previous screen

Initial DVD setup

■ Displaying “Setup Menu” screen

STEP 1 Select **Setup** on the control icon screen.

STEP 2



After you change the initial settings, select **Enter**.

Default: restores default settings

■ Setting audio language

STEP 1 Select **Audio Language** on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select **Other** and input the desired language code. (→P. 384)

↶: returns to the previous screen

■ Setting subtitle language

STEP 1 Select **Subtitle Language** on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select **Other** and input the desired language code. (→P. 384)

↶: returns to the previous screen

■ Setting menu language

STEP 1 Select **DVD Language** on the “Setup Menu” screen.

STEP 2 Select the desired language.

If you cannot find the desired language, select **Other** and input the desired language code. (→P. 384)

↶: returns to the previous screen

■ Setting angle mark “ON” or “OFF”


If the DVD has angle options, you can turn the angle mark on or off.

Select **Angle Mark** on the “Setup Menu” screen. Each time you press , the multi angle mark on the screen turns on or off alternately.

■ Parental lock

STEP 1 Select **Parental Lock** on the “Setup Menu” screen.

STEP 2

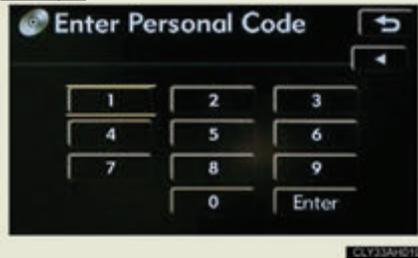

Input the 4-digit password and then select **Enter**.

If you enter wrong numbers, select  to delete the numbers.

Select  10 times to reset the personal code.

STEP 3 Select a parental level (1 - 8). (→P. 340)

: returns to the previous screen

■ Entering a language code

If you select **Other** on the “Select Audio Language” screen, “Select Subtitle Language” screen or “DVD Language” screen, you can select a language by entering the 4-digit language code if that language is available.



Input the 4-digit language code and then select **Enter**.

: deletes the last input digit

: returns to the previous screen

● Language codes

Code	Language	Code	Language	Code	Language
0514	English	0207	Bulgarian	0712	Galician
0618	French	0208	Bihari	0714	Guarani
0405	German	0209	Bislama	0721	Gujarati
0920	Italian	0214	Bengali	0801	Hausa
0519	Spanish	0215	Tibetan	0809	Hindi
2608	Chinese	0218	Breton	0818	Croatian
1412	Dutch	0301	Catalan	0821	Hungarian
1620	Portuguese	0315	Corsican	0825	Armenian
1922	Swedish	0319	Czech	0901	Interlingua
1821	Russian	0325	Welsh	0905	Interlingue
1115	Korean	0401	Danish	0911	Inupiak
0512	Greek	0426	Bhutani	0914	Indonesian
0101	Afar	0515	Esperanto	0919	Icelandic
0102	Abkhazian	0520	Estonian	0923	Hebrew
0106	Afrikaans	0521	Basque	1001	Japanese
0113	Amharic	0601	Persian	1009	Yiddish
0118	Arabic	0609	Finnish	1023	Javanese
0119	Assamese	0610	Fiji	1101	Georgian
0125	Aymara	0615	Faroese	1111	Kazakh
0126	Azerbaijani	0625	Frisian	1112	Greenlandic
0201	Bashkir	0701	Irish	1113	Cambodian
0205	Byelorussian	0704	Scots-Gaelic	1114	Kannada

Code	Language	Code	Language	Code	Language
1119	Kashmiri	1415	Norwegian	1914	Shona
1121	Kurdish	1503	Occitan	1915	Somali
1125	Kirghiz	1513	(Afan) Oromo	1917	Albanian
1201	Latin	1518	Oriya	1918	Serbian
1214	Lingala	1601	Panjabi	1919	Siswati
1215	Laothian	1612	Polish	1920	Sesotho
1220	Lithuanian	1619	Pashto, Pushto	1921	Sundanese
1222	Latvian	1721	Quechua	1923	Swahili
1307	Malagasy	1813	Rhaeto- Romance	2001	Tamil
1309	Maori	1814	Kirundi	2005	Telugu
1311	Macedonian	1815	Romanian	2007	Tajik
1312	Malayalam	1823	Kinyarwanda	2008	Thai
1314	Mongolian	1901	Sanskrit	2009	Tigrinya
1315	Moldavian	1904	Sindhi	2011	Turkmen
1318	Marathi	1907	Sangho	2012	Tagalog
1319	Malay	1908	Serbo- Croatian	2014	Setswana
1320	Maltese	1909	Sinhalese	2015	Tonga
1325	Burmese	1911	Slovak	2018	Turkish
1401	Nauru	1912	Slovenian	2019	Tsonga
1405	Nepali	1913	Samoan	2020	Tatar

Code	Language	Code	Language	Code	Language
2023	Twi	2209	Vietnamese	2515	Yoruba
2111	Ukrainian	2215	Volapük	2621	Zulu
2118	Urdu	2315	Wolof		
2126	Uzbek	2408	Xhosa		

■ Error messages

If “Region Code Error” is displayed, check if the region code printed on the DVD matches the player’s region code.

If a different message is displayed: →P. 337

3-4. Using the rear seat entertainment system

Playing a video CD


■ Controller



- 1 Selecting a track
- 2 Reversing a disc
- 3 Turning on the control icon screen
- 4 Stopping a disc
- 5 Fast forwarding a disc
- 6 Playing/pausing a disc
- 7 Selecting an icon
- 8 Inputting the selected icon

■ Control icon screen

Press **OPTION** if no icons are shown while watching a video CD, and the following screen appears.

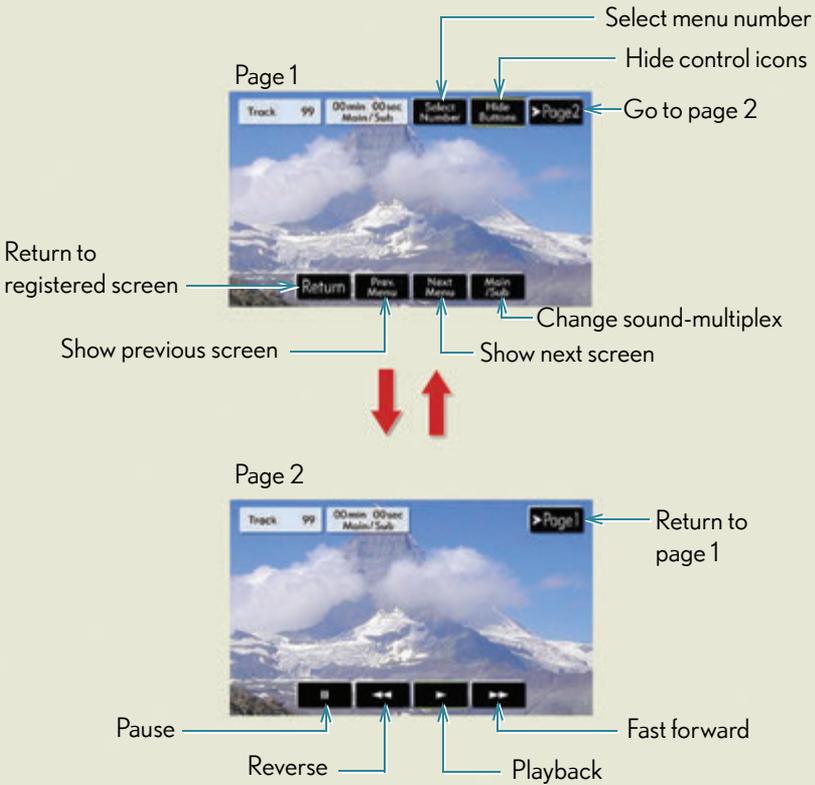

If  appears on the screen when you select an icon, the operation relevant to that control is not permitted.

Fast forwarding/reversing the video CD

Perform either of the following:

- Select  or  on the screen by pressing and holding .

- Press and hold \wedge or \vee on .

Slow playback

Select  and then select . Video is played slowly when you select  by pressing and holding .

Using the video CD menu

Select .

Refer to the manual that comes with the video CD for specific menu items.

Selecting a desired screen

Selecting a menu number

STEP 1 Select **Select Number** on the control icon screen.

STEP 2



Input the desired menu number on the screen and select **Enter**.

Searching manually

Select **Prev. Menu** or **Next Menu** on the screen, or press \wedge or \vee on  until the desired screen appears.

Changing the sound-multiplex mode

Select **Main/Sub** on the control icon screen. The mode cycles through each time the  is pressed.

“Main” → “Sub” → “Main/Sub”



DVD player and DVD video disc information

■ Error messages

→P. 337

■ DVD video discs

- The DVD player conforms to NTSC color TV formats.
- Region code: Some DVD video discs have a region code indicating the region in which you can use the DVD video disc. If the DVD video disc is not labeled as “ALL” or “1”, you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, “Region Code Error” appears on the screen. Even if the DVD video disc does not have a region code, you may not be able to use it.
- The front DVD player supports multi-channel surround sound. The rear DVD player does not support multi-channel surround sound. (Only 2-channel sound is output.)

■ Symbols shown on DVD video discs

→P. 338

■ Discs that can be used

→P. 339

■ DVD video disc information

→P. 339

■ Sound

→P. 341

■ MP3 and WMA files

→P. 341

CAUTION

■ DVD video precaution

→P. 344

NOTICE

■ Discs and adapters that cannot be used

→P. 345

■ Player precautions

Failure to follow the precautions below may result in damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.

3-4. Using the rear seat entertainment system

Using the video mode



Press **VIDEO** to select the video mode.

Before switching to the video mode, connect the audio-video equipment to the A/V input adapter.

Using the adapter

► 5-seat models



Open the cover.

The A/V input adapter is composed of 3 input adapters.

Yellow: Image input adapter

White: Left channel audio input adapter

Red: Right channel audio input adapter

► 4-seat models



Changing to PAL format



Press **DISPLAY**.



If the video does not appear, turn **PAL VIDEO** on.

PAL VIDEO will be displayed when PAL format equipment is connected to the A/V input adapter.

■ A/V input adapter

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input adapter. For details, refer to the manufacturer's instructions.

■ Power outlet

The power outlet is used to connect the audio-video equipment. (→P. 465)

⚠ NOTICE

■ When the A/V input adapter is not in use

Keep the A/V input adapter cover closed.

Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

3-4. Using the rear seat entertainment system


Changing other settings

Setting the display mode



Pressing **SIZE** changes the display modes sequentially as follows:

Normal → Wide 1 → Wide 2

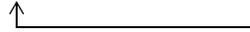

Adjusting the screen




Press **DISPLAY**.

Select the brightness, contrast, tone or color, and make adjustments.

Press **DISPLAY** or **ENT** to input it.

"Color"	Red	Green
"Tone"	Lighter	Darker
"Contrast"	Weaker	Stronger
"Brightness"	Darker	Brighter

Automatic closing of the rear display

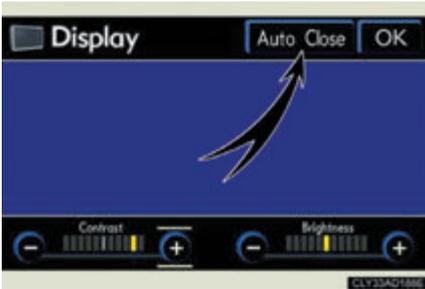

Press **DISPLAY**.

If **Auto Close** is on, the display will automatically close when the "POWER" switch is turned OFF.

The display will automatically open when the "POWER" switch is turned to ACCESSORY or ON mode.

Displaying the map screen (with navigation system)



Press **MAP**.

The map screen will appear.

3-5. Using the hands-free system (for cellular phone)

Hands-free system (for cellular phone)

The hands-free system is a function that allows you to use your mobile phone without touching it.


This system supports Bluetooth[®] mobile phones. Bluetooth[®] is a wireless data system that allows the mobile phone to wirelessly connect to the hands-free system and outgoing/incoming calls.

▶ Touch screen operation with navigation system

Owners of models equipped with a navigation system should refer to "Navigation System Owner's Manual".

▶ Touch screen operation without navigation system

■ Telephone switch

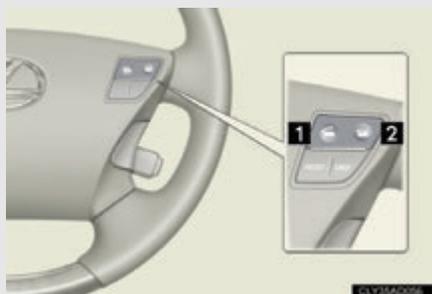

- 1 Sending/Receiving/ "Telephone" screen display (when stopped)
- 2 End call

■ Microphone



The person you are speaking to can be heard from the driver's side speaker.

To use the hands-free system, you must register your Bluetooth[®] phone in the system. (→P. 402)

Status display

You can check such indicators as signal strength and battery charge on the “Telephone” screen.



- 1 Connection status
- 2 Battery charge
- 3 Call area
- 4 Signal strength

Indicators	Conditions
Connection status	Blue: Good Yellow: Bad  : Not connected
12-volt battery charge	 : Full  : Low  : Empty
Call area	“Rm”: Roaming area “Hm”: Home area
Signal strength	 : Good  : Bad  : Not connected

■ When using the hands-free system

- The audio system and voice guidance are muted when making a call.
- If both parties speak at the same time, it may be difficult to hear.
- If the incoming call volume is overly loud, an echo may be heard.
- Try to face toward the microphone as much as possible when speaking.
- In the following circumstances, it may be difficult to hear the other party:
 - When driving on unpaved roads
 - When driving at high speeds
 - If a window is open
 - If the air conditioning is blowing directly on the microphone
 - If the air conditioning is set to high

■ Conditions under which the system will not operate

- If using a mobile phone that does not support Bluetooth®
- If the mobile phone is switched off
- If you are outside service range
- If the mobile phone is not connected
- If the mobile phone's battery is low

■ Bluetooth® antenna

The antenna is built into the display. If the mobile phone is behind the seat or in the console box, or touching or covered by metal objects, connection status may deteriorate.

■ Battery charge/Signal status

This display may not correspond exactly with the mobile phone itself.

■ About Bluetooth®



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3-5. Using the hands-free system (for cellular phone)

■ Compatible models

Compatible with HFP (Hands Free Profile) Ver. 1.0 and OPP (Object Push Profile) Ver. 1.1.

If your cellular phone does not support HFP, you cannot enter the Bluetooth[®] phone. If your cellular phone supports OPP alone, you cannot use the Bluetooth[®] phone.

■ Certification for the hands-free system

FCC ID: BABBT007A

BABBT008A

IC ID: 2024B-BT007A

MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION

■ FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Frequency Exposure. This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 7.9 in. (20 cm) and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

■ Caution while driving

Do not use the mobile phone or connect the Bluetooth[®] system.

 NOTICE

■ **When leaving the vehicle**

Do not leave your mobile phone in the vehicle. The inside of the vehicle may become hot, causing damage to the phone.

3-5. Using the hands-free system (for cellular phone)

Using a Bluetooth[®] phone



The screenshot shows the 'Telephone' screen with the following elements and annotations:

- Bluetooth[®] connection status:** An arrow points to the Bluetooth icon in the top right corner.
- Character deletion:** An arrow points to the delete key (X) on the right side of the numeric keypad.
- Display last person called:** An arrow points to the 'Last Call' icon on the right side of the numeric keypad.
- Make a call:** An arrow points to the call button (phone handset) at the bottom right.

To display the screen shown above, press , and touch  on the "Information" screen.

Registering a Bluetooth[®] phone

You can register up to 6 phones in the system.

STEP 1 Press  .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.



Touch .



Touch .



Input the passkey displayed on the screen into your phone.

If the message “Bluetooth* connection successful” is displayed, registration is complete.

If the message “Bluetooth* connection failed. Please check the “Passkey” and the settings of the telephone” is displayed, start again from the beginning.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Bluetooth® phone connection

There are two connection methods available—automatic and manual.

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Choose one of the following methods:



1 Automatic connection

If the “POWER” switch is turned to ACCESSORY or ON mode, the system will automatically connect to the Bluetooth® phone. Touching “Auto Connect” will turn it on/off.

2 Manual connection

If automatic connection fails or is turned off, connection must be made manually.

If the message “Bluetooth* connection successful” is displayed, connection is complete.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Reconnecting to the Bluetooth® phone

If the system cannot connect due to poor signal strength with the “POWER” switch in ACCESSORY or ON mode, the system will automatically attempt to reconnect. If the phone is turned off, the system will not attempt to reconnect. In this case, connection must be made manually, or the phone must be re-selected.

Making a call

Once the Bluetooth[®] phone is registered, you can make a call using the following procedure:

■ Dialing

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3  Input the phone number.

To delete the inputted phone number, touch  .

To dial the last inputted phone number, touch  .

STEP 4 Touch  or press  on the steering wheel.

■ Dialing from the phone book

You can dial a number from the phone book data imported from your mobile phone. Up to 1000 entries may be stored in the phone book. (→P. 424)


STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

3-5. Using the hands-free system (for cellular phone)

STEP 4

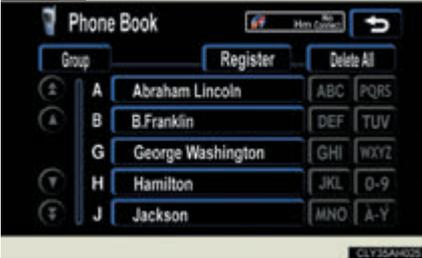

Choose the desired name to call from the list.

STEP 5



Choose the number and then touch  or press  on the steering wheel.

■ Dialing from history

You can make a call from past dialed numbers or incoming calls.

Up to 5 numbers are stored, with the last recent number being deleted to make room for a new number.

STEP 1

Press



STEP 2

Touch




on the "Information" screen.

STEP 3

Touch



on the "Telephone" screen.

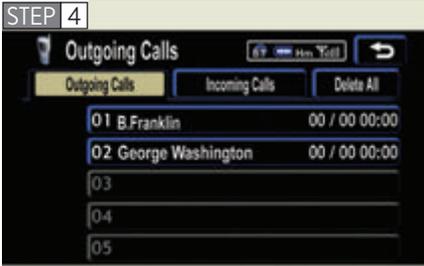

Choose the number to call from the list.



To choose a number from the incoming call history, touch **Incoming Calls** and choose a number to call.



Touch  or press  on the steering wheel.

■ Calling using speed dial

You can make a call using numbers registered from the phone book and call history. (→P. 417)

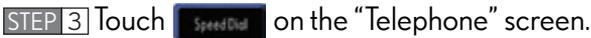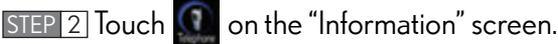


Choose the desired number to make a call.

To change the page, touch **Speed Dial 2** or **Speed Dial 3**.


■ **Calling using voice recognition**

Using voice recognition, you can call by name from the “Phone Book” screen, call by number from the “Telephone” screen, and send tones from the “Call” screen. (→P. 412)

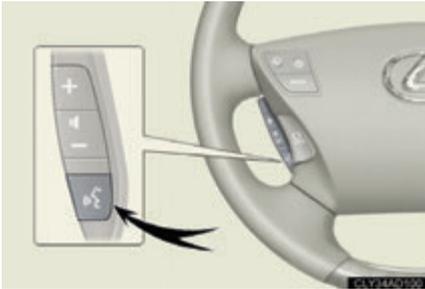

Talk switch

● **Calling by name from the “Phone Book” screen**

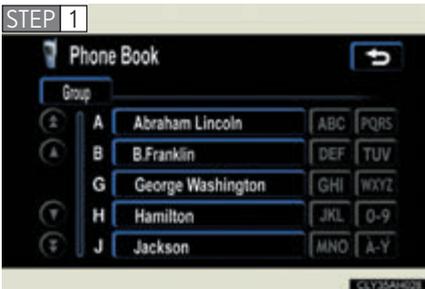

Pull  .

STEP 1 Following the system guidance, wait until a beep and then say the desired name.

If there are multiple entries for the same name, **Next** will be displayed.

To select the next candidate, touch **Next** .

STEP 2 Following the system guidance, pull  .

STEP 3 Following the system guidance, wait until the beep and then say “Dial”.

● Calling by number from the “Telephone” screen

STEP 1



Pull .

STEP 2 Following the system guidance, wait until a beep and then say the desired number.

STEP 3 Following the system guidance, pull .

STEP 4 Following the system guidance, wait until a beep and then say “Dial”.

● Sending tones from the “Call” screen

STEP 1



Pull .

STEP 2 Following the system guidance, wait until a beep and then say the desired number.

STEP 3 Following the system guidance, pull .

STEP 4 Following the system guidance, wait until a beep and then say “Yes”.

■ Outgoing/incoming call history list

- If you make a call to or receive a call from a number registered in the phone book, the name is displayed in the call history.
- If you make multiple calls to the same number, only the last call made is displayed in the incoming call history.
-  is displayed to the left of the phone number for unanswered calls.
-  is displayed to the left of the phone number for refused calls.
- Calls where the number is unavailable, such as public telephones, are not stored in the call history.

■ When driving

- The functions “Dialing”, “Dialing from the phone book”, and “Dialing from history” are unavailable.
- If you press  on the steering wheel, the “Speed Dial” screen is displayed. At this time, phone numbers will not be displayed. Choose from the names displayed to make a call.

■ International calls

You may not be able to make international calls, depending on the mobile phone in use.


■ To display the voice recognition command list



STEP 1 After pulling , touch . If the “Operating Guide” screen is displayed, touch .

STEP 2 Touch .

■ To display the voice recognition operating guide

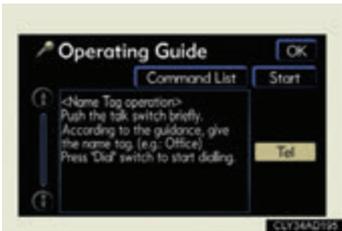

STEP 1 After pulling , touch . If the "Command List" screen is displayed, touch .

STEP 2 Touch .

■ To cancel voice recognition


- Pull and hold .
- Press  on the steering wheel.
- Touch . (excluding command verification)

■ When using voice recognition

Use correct commands and speak clearly, otherwise the system may not correctly recognize the command. Wind or other noises may also cause the system not to recognize the desired command.

Receiving a call

When a call is received, the following screen is displayed together with a sound.

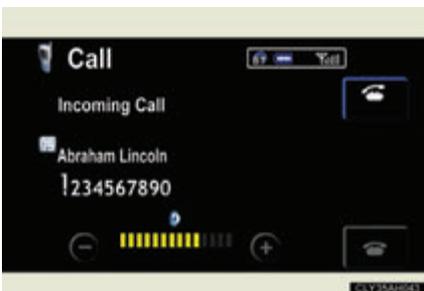

Touch  or press  on the steering wheel.

■ **To refuse a call**

Touch  or press  on the steering wheel.

■ **To adjust the incoming call volume**


Touch  or . You can also adjust the volume using the steering switches.

■ **International calls**

Received international calls may not be displayed correctly, depending on the mobile phone in use.

Speaking on the phone

The following screen is displayed when speaking on the phone.

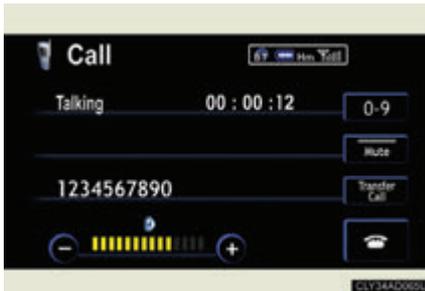

■ **To adjust the incoming call volume**

Touch  or . You can also adjust the volume using the steering switches.

■ **To prevent the other party from hearing your voice**

Touch .

■ **Inputting key tones**

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the phone book.

STEP 1 Touch .



Input the number.

If repeated tone symbols* are stored in the phone book,  and  are displayed on the right side of the screen.

*:Repeated tone symbols are symbols or numbers displayed as p or w, that come after the phone number.

(e.g. 056133p0123w#1*)

STEP 3 Confirm the number displayed on the screen, and touch . If you touch , this function will finish.

■ To transfer a call

Touch .

■ To hang up

Touch  or press  on the steering wheel.

■ Transferring calls

- It is not possible to transfer from hands-free to the mobile phone while driving.
- If you transfer from the mobile phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- Transfer method and operation may vary according to the mobile phone used.
- For operation of the mobile phone in use, see the phone's manual.

■ To send a tone by speed tone

Touch  and touch . Choose the desired number from the speed tone list displayed.

■ While driving

Key input is unavailable.

3-5. Using the hands-free system (for cellular phone)

Setting the hands-free system

You can speed dial, register in and edit the phone book data, and set the Bluetooth[®] phone.



To display the screen shown above, press , touch  on the "Information" screen, and touch  on the "Telephone" screen.

Registering/Deleting a speed dial item

■ Registering a speed dial item


You can register a number from the phone book or the call history. Up to 17 entries may be stored.

STEP 1 Press  .


STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

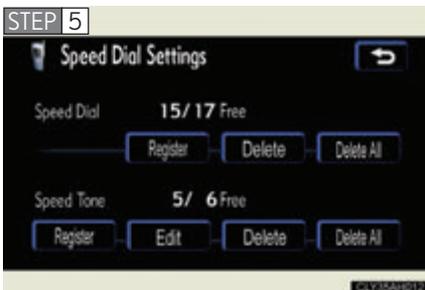

Touch  in the “Speed Dial” section of the “Speed Dial Settings” screen.

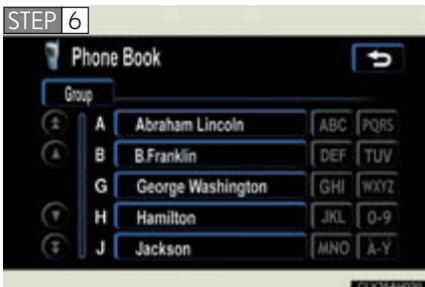


Select the data to be registered.

3-5. Using the hands-free system (for cellular phone)



Select the number to be registered.

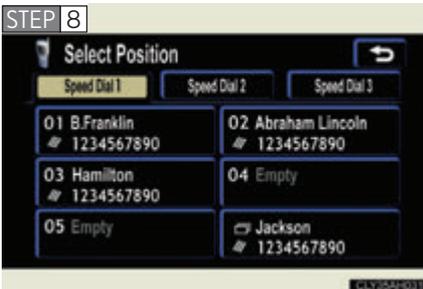

Touch the desired switch.

The last dialed number will be registered in position 6.

■ Deleting a speed dial item

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

STEP 5 Touch  in the "Speed Dial" section of the "Speed Dial Settings" screen.

STEP 6 Select the data to be deleted, and a confirmation message will be displayed.

STEP 7 If everything is correct, touch .

■ To delete all speed dial items

Follow the steps for “Deleting a speed dial item” until “STEP 5”. In the “Speed Dial” section of the “Speed Dial Settings” screen, touch . A confirmation message will be displayed. If everything is correct, touch .

Registering/Editing/Deleting a speed tone

■ Registering a speed tone


You can register up to 6 items.

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

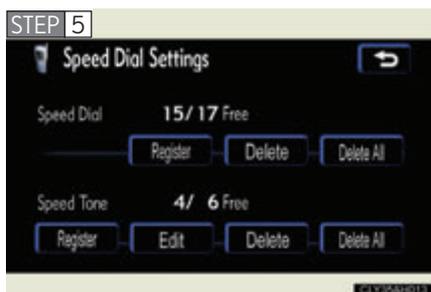

Touch  in the “Speed Tone” section.



Input the desired name and touch

.


, : Letter input

: Number/Symbol input


: Space

: Backspace

3-5. Using the hands-free system (for cellular phone)

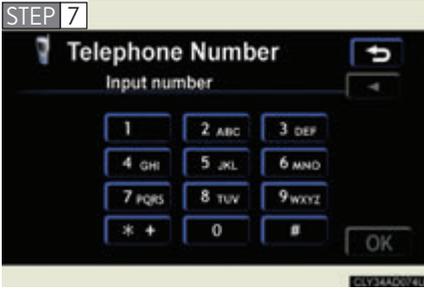

Input the number and touch **OK**.

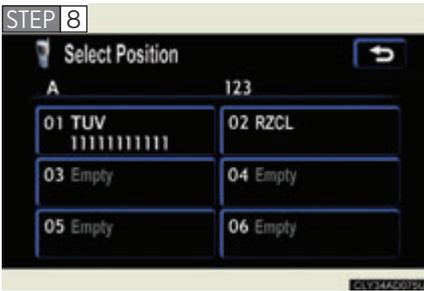

Touch the desired switch.

■ Editing a speed tone

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

STEP 5 Touch  in the "Speed Tone" section of the "Speed Dial Settings" screen.



Touch the switch to be edited.

STEP 7 Input the name and touch **OK**.

STEP 8 Input the number and touch **OK**.

■ Deleting a speed tone

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch **Delete** in the “Speed Tone” section of the “Speed Dial Settings” screen.

STEP 6 Choose the data to delete, and a confirmation message will be displayed.

STEP 7 If everything is correct, touch **Yes**.

■ To delete all speed tone data

Follow the steps for “Deleting a speed tone” until “STEP 5”. In the “Speed Tone” section, touch **Delete All**. A confirmation message will be displayed. If everything is correct, touch **Yes**.


Setting the volume

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Touch  on the "Settings" screen.

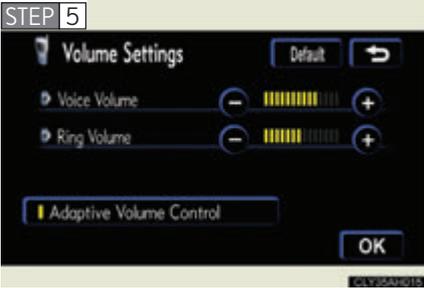

Touch  or  to lower or raise the volume.

Voice volume: changes the speaker volume

Ring volume: changes the ring volume


Adaptive volume control

When traveling at 50 mph (80 km/h) or more, the system automatically raises the volume one level.

If the vehicle speed drops to 43 mph (70 km/h), the volume will return to its original level.


You can turn this function on/off by touching .

To return to the default volume settings

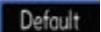Touch , and then .

Changing the screen settings

The following settings can be changed:

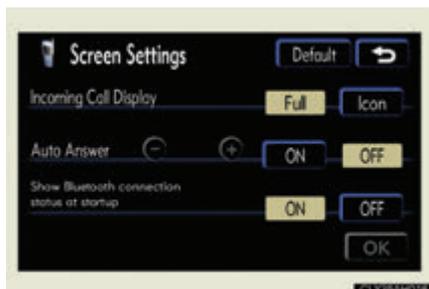

- “Incoming Call Display”

The incoming call screen settings can be changed.

- “Auto Answer”

When a call is received, the system automatically switches to the talking screen after the set period of time, meaning you can speak without pressing anything.

- “Show Bluetooth* connection status at startup”

You can set the system to show the status confirmation display when connecting.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ “Incoming Call Display” settings

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Select the desired switch.

: The hands-free screen is displayed when a call is received, and you can operate the system from that screen.

: A message is displayed at the top of the screen, and you can only operate the system with the steering switches.

■ “Auto Answer” settings

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch  in the “Auto Answer” section of the “Screen Settings” screen.

STEP 6 Set the wait time using  and . (1 - 60 seconds)

■ “Show Bluetooth* connection status at startup” settings

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch  /  in the “Show Bluetooth* connection status at startup” section of the “Screen Settings” screen.

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

■ To set the screen settings to default

Touch  , and then  .

Phone book settings

Up to 1000 names, 2 items per name, can be registered.

■ Transferring mobile phone data


STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.


STEP 3 Touch  on the “Telephone” screen.


STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch  .

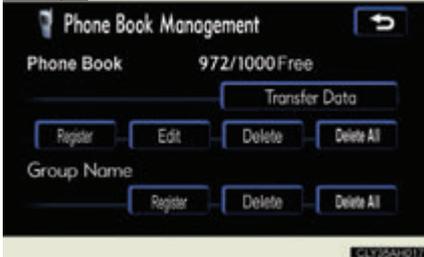


STEP 6 Select the group to transfer to.

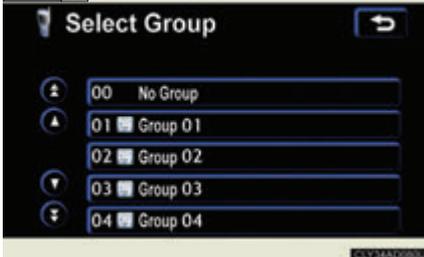

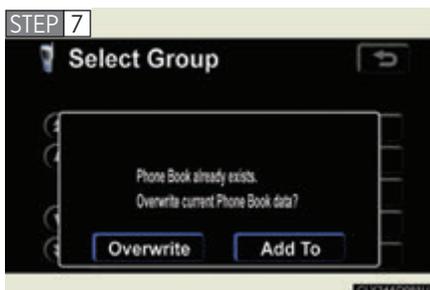

To overwrite data, touch **Overwrite**.

To add to existing data, touch **Add To**.

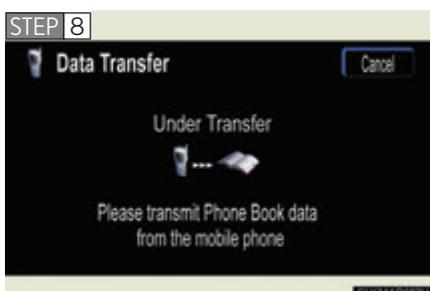

Transfer will begin. If you wish to cancel the transfer before it is finished, touch **Cancel**.

Transfer is complete when "Transfer completed" is displayed.

If "Transfer failed" is displayed, restart the process from the beginning.


■ Registering by input

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch **Settings** on the "Telephone" screen.


STEP 4 Touch  on the "Settings" screen.

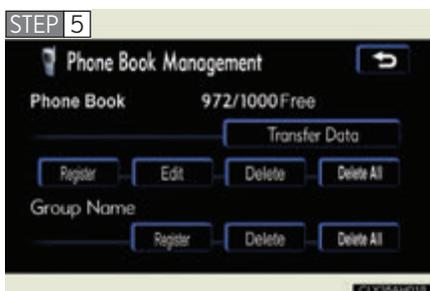

Touch **Register** in the "Phone Book" section.

3-5. Using the hands-free system (for cellular phone)

STEP 6 Choose the switch to register.

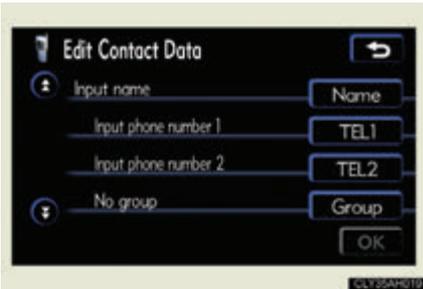

Name : Input the name on the “Name” screen.

TEL1 and **TEL2** :
Input the number(s) on the “Telephone Number” screen. When you touch **OK**, the “Select Icon” screen will appear.
Choose the desired icon.

- # Mobile phone1
- # Mobile phone2
- # Home
- # Work
- # Other

Group : Select the desired group from the “Select Group” screen. (No Group, 01 - 09)

Voice Rec. : Select the desired phone number and touch **REC** to record a voice tag.
To play the voice tag, touch **PLAY**. To delete the voice tag, touch **Delete**.

STEP 7 Once input is complete, touch **OK**.

■ Adding call history data to a registered entry

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Choose the desired number from the list.

To choose from the incoming call history, touch  and select the desired number.

STEP 5  Touch  .

STEP 6 Choose the phone book entry to be added to.

STEP 7 Check the data to be added, and touch  .

■ Editing phone book data

- STEP 1 Press  .
- STEP 2 Touch  on the “Information” screen.
- STEP 3 Touch  on the “Telephone” screen.
- STEP 4 Touch  on the “Settings” screen.
- STEP 5 Touch  in the “Phone Book” section of the “Phone Book Management” screen.
- STEP 6 Choose the data to edit.
- STEP 7 Choose the switch to edit.
- STEP 8 After editing, touch  .

■ Deleting phone book data

- STEP 1 Press  .
- STEP 2 Touch  on the “Information” screen.
- STEP 3 Touch  on the “Telephone” screen.
- STEP 4 Touch  on the “Settings” screen.
- STEP 5 Touch  in the “Phone Book” section of the “Phone Book Management” screen.
- STEP 6 Select the data to delete.
- STEP 7 A confirmation message will be displayed. If everything is correct, touch  .

■ To delete all data

Follow the steps for “Deleting phone book data” until “STEP 5”. In the “Phone Book” section of the “Phone Book Management” screen, touch . To delete all data within a group, touch , and select the group to delete. To delete all contact data, touch . Check that everything is correct, and touch .

■ Registering/Editing/Deleting from the phone book

You can register data in the phone book, edit registered data, and delete items.

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 To register data, touch  on the “Phone Book” screen.

To delete all data, touch .

To delete or edit specific data, select the data to delete/edit, and touch  to delete, or  to edit.

■ The phone book

The method for transferring phone book data from the phone to the system varies with phone model. See the phone’s manual.

Changing the phone book group name settings

■ Registering a group name

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch  in the “Group Name” section of the “Phone Book Management” screen.


STEP 6 Select the group to register (“01” - “19”).



Select the switch to be edited.

Icon : The below screen will be displayed. Select the desired icon.

Name : Input the name on the “Name” screen.

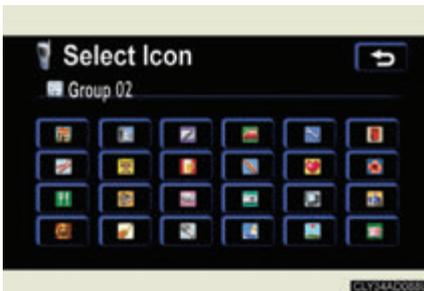

STEP 8 Once editing is complete, touch  .

■ Deleting a group name

- STEP 1** Press  .
- STEP 2** Touch  on the “Information” screen.
- STEP 3** Touch  on the “Telephone” screen.
- STEP 4** Touch  on the “Settings” screen.
- STEP 5** Touch  in the “Group Name” section of the “Phone Book Management” screen.
- STEP 6** Select the group name to delete, and a confirmation message will be displayed.
- STEP 7** If everything is correct, touch  .

■ To delete all data

Follow the steps for “Deleting phone book data” until “STEP 5”. In the “Phone Book” section of the “Phone Book Management” screen, touch  . A confirmation message will be displayed. If everything is correct, touch  .

Deleting the history

STEP 1 Press



STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4 Select the data to delete from the list.

To delete data from the incoming call history, touch , and select the data to delete.

STEP 5



Touch .

STEP 6 Check that everything is correct, and touch .

To delete all data

Follow the steps for "Deleting a group name" until "STEP 4". Touch  on the "Outgoing Calls" screen. To delete all incoming call history data, touch , and touch . Check that everything is correct, and touch .

Changing the security settings

You can disable certain hands-free system functions. Use the security settings when you do not wish other people to see the registered data, for example when having the vehicle valet parked at a hotel.

To enable or disable security, the security code (4 digits) is required. The default code is "0000". Be sure to change the security code before use.


■ Changing the security code

STEP 1 Press  .


STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

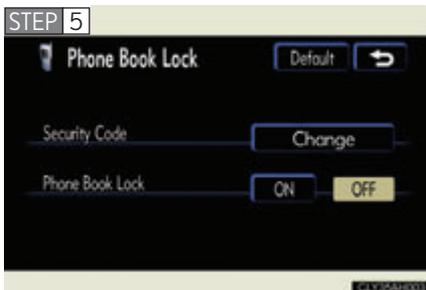

Touch  in the “Security Code” section.

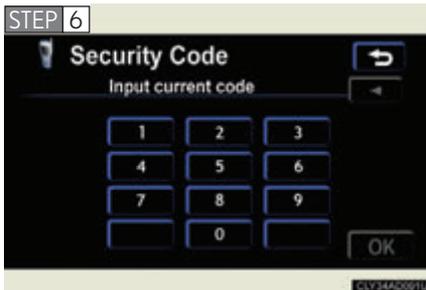

Input the current security code, and touch .


STEP 7 Input the new security code, and touch  . A confirmation message will appear.

STEP 8 If everything is correct, touch .

■ Enabling security

- STEP 1** Press  .
- STEP 2** Touch  on the “Information” screen.
- STEP 3** Touch  on the “Telephone” screen.
- STEP 4** Touch  on the “Settings” screen.
- STEP 5** Touch  in the “Phone Book Lock” section of the “Phone Book Lock” screen.
- STEP 6** Input the security code, and touch  .

■ Setting the security code to default

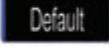- STEP 1** Press  .
- STEP 2** Touch  on the “Information” screen.
- STEP 3** Touch  on the “Telephone” screen.
- STEP 4** Touch  on the “Settings” screen.
- STEP 5** Touch  on the “Phone Book Lock” screen.
- STEP 6** Input the security code on the “Security Code” screen, and touch  . A confirmation message will appear.
- STEP 7** If everything is correct, touch  .

■ If “Phone Book Lock” is set

If the security code is input and “Phone Book Lock” is set, the following functions are locked:

- Display of the phone book screen and transferring, registering, editing and deleting the phone book data
- Display of the speed dial screen, registering, deleting the speed dial and speed dialing
- Display of the other party's name for calls being received or made
- Display of the dialed numbers screen and incoming call screen, deleting the dialed numbers and received numbers
- Display of the phone information screen
- Changing the security code

The speed dial screen is not displayed while driving.

■ When changing the security code

- Be sure to choose a number difficult for strangers to guess.
- Do not forget the security code. Even your Lexus dealer will be unable to disable the security. If you do forget the code, initialize all personal data. (→P. 269)

Setting a Bluetooth® phone

■ Selecting a Bluetooth® phone

If multiple Bluetooth® phones are registered, follow the procedure below to select the Bluetooth® phone to be used. You may only use one phone at a time.


STEP 1 Press



STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

STEP 4

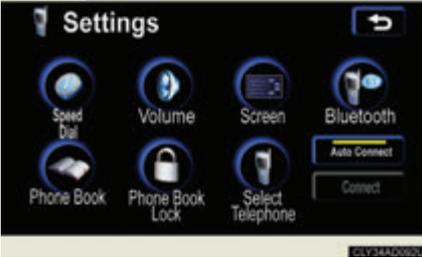

Touch .

STEP 5



Select the phone to be used, and touch .

If no phones are registered, "Empty" will be displayed.

If "Bluetooth* connection successful" is displayed, registration was successful.

If another Bluetooth® phone is already connected, a confirmation message is displayed. Touch  or .

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ Displaying Bluetooth® information


You can check the device address and device name.

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

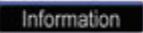STEP 5 On the “Select Telephone” screen, select the desired phone and touch  .



To change the device name, touch  in the “Device Name” section, and input the name on the “Name” screen (max. 20 characters).

■ To change the Bluetooth® settings

You can change the device name and passkey.

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

3-5. Using the hands-free system (for cellular phone)



To change the device name, touch **Change** in the “Device Name” section, and input the name on the “Name” screen (max. 20 characters).

To change the passkey, touch **Change** in the “Passkey” section, and input 4 - 8 digits on the “Passkey” screen.

■ Setting the Bluetooth® settings to default


STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch  on the “Bluetooth* Settings” screen, and a confirmation message will be displayed.

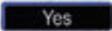STEP 6 If everything is correct, touch .

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ To delete the Bluetooth® settings

STEP 1 Press  .

STEP 2 Touch  on the “Information” screen.


STEP 3 Touch  on the “Telephone” screen.

STEP 4 Touch  on the “Settings” screen.

STEP 5 Touch  in the “Bluetooth* Telephone” section of the “Bluetooth* Settings” screen.

STEP 6 On the “Delete Telephone” screen, select the phone to delete.

To check the device address, touch  .

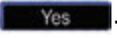
STEP 7 If you touch  , a confirmation message is displayed. If everything is correct, touch  .

*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

3-6. Using the interior lights

Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the "POWER" switch mode.

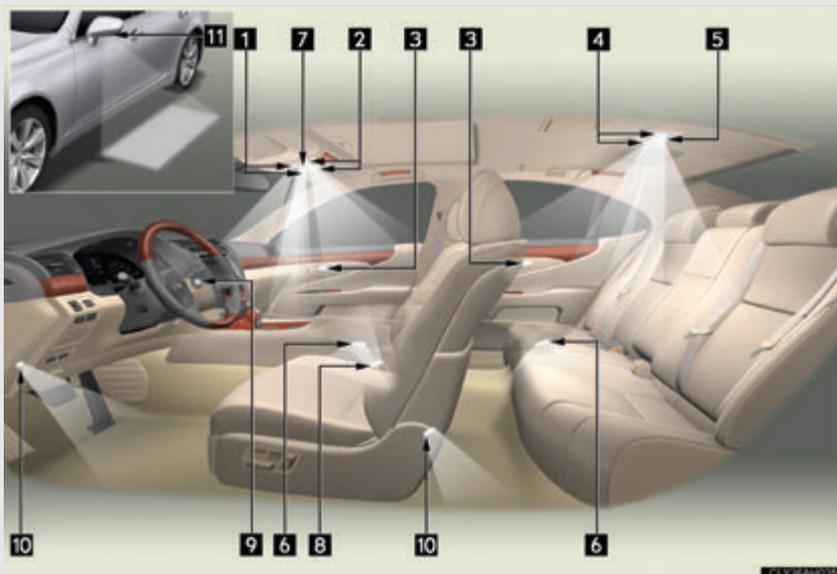

- 1 Front personal lights (→P. 442)
- 2 Front interior lights (→P. 442)
- 3 Inside door handle lighting
- 4 Rear personal lights (→ P. 442)
- 5 Rear interior light
- 6 Door courtesy lighting
- 7 Shift lever lighting (when the "POWER" switch is in ACCESSORY or ON mode)

- 8 Seat belt buckle lighting
- 9 "POWER" switch lighting
- 10 Footwell lighting
- 11 Outer foot lights

Interior lights



- 1 "OFF"
- 2 Door position on/off
- 3 "ON"

Personal lights

► Front




On/off

► Rear (without rear seat entertainment system)



On/off

► Rear (with rear seat entertainment system)

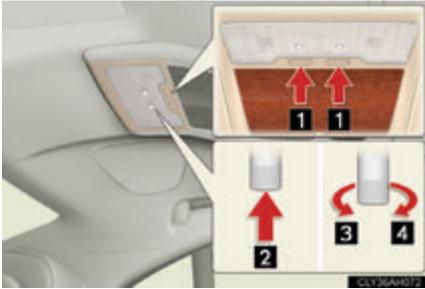

1 On/off

2 Press the knob to release it, and turn the knob to the desired brightness.

3 Darker

4 Brighter

■ To prevent the 12-volt battery from being discharged

If the interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.


■ Customization that can be configured at Lexus dealer

Settings (e.g. The time elapsed before lights turn off) can be changed. (Customizable features →P. 672)

3-7. Using the storage features


List of storage features

► 5-seat models

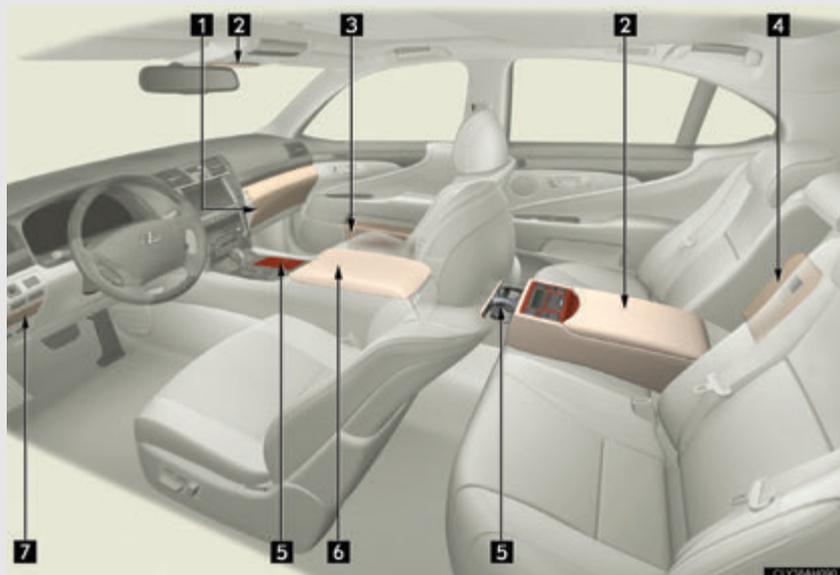


- 1 Glove box
- 2 Auxiliary boxes
- 3 Door pockets
- 4 Cool box/auxiliary box (if equipped)
- 5 Cup holders
- 6 Console box
- 7 Coin holder

▶ 4-seat models

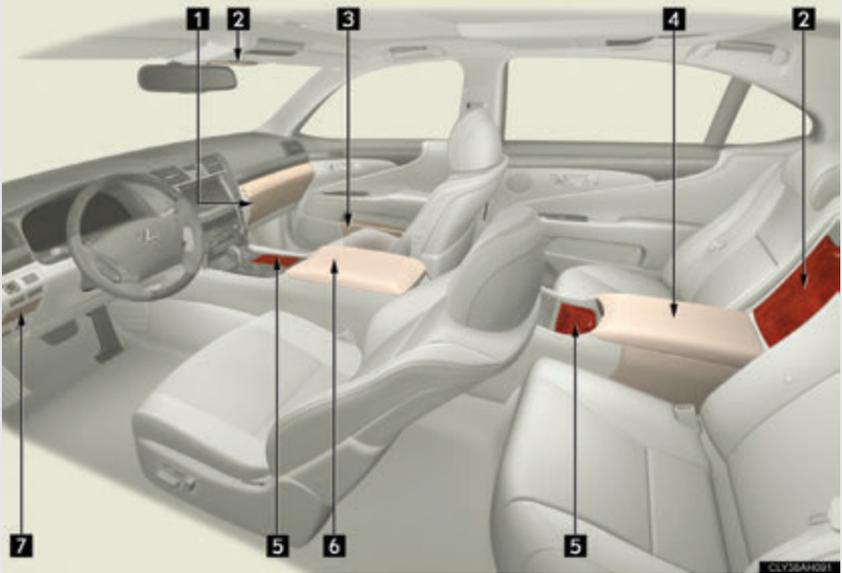

- 1 Glove box
- 2 Auxiliary boxes
- 3 Door pockets
- 4 Cool box
- 5 Cup holders
- 6 Console box
- 7 Coin holder

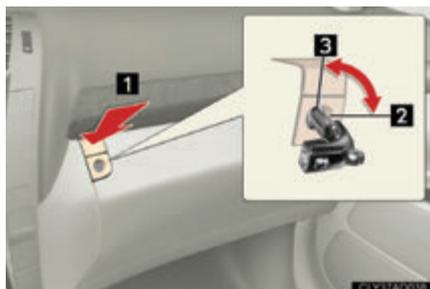Glove box

- 1 Open (push button)
- 2 Lock with the mechanical key
- 3 Unlock with the mechanical key

Trunk opener main switch

The trunk opener main switch is located in the glove box. (→ P. 68)

⚠ CAUTION**■ Caution while driving**

Keep the glove box closed.

Injuries may result in the event of an accident or sudden braking.

Coin holder



Press in the button.

! CAUTION

■ Caution while driving

Keep the coin holder closed.
Injuries may result in the event of an accident or sudden braking.

Door pockets (front)



The front door pockets can be opened and closed.

! CAUTION

■ Caution while driving

Keep the door pockets closed.
Injuries may result in the event of an accident or sudden braking.

Cup holders

► Front



Press down and release the right side of the cup holder lid.

► Rear (5-seat models)



Press in and release the cup holder.

► Rear (4-seat models)




Press in and release the button.

! CAUTION**■ Items unsuitable for the cup holder**

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

■ When not in use

Keep the cup holders closed. Injuries may result in the event of an accident or sudden braking.

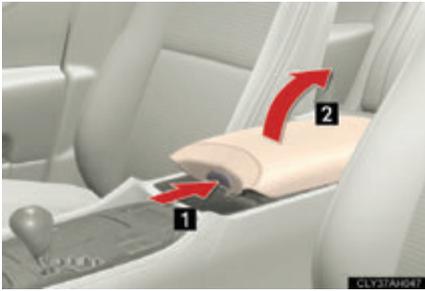Console box

1 Slide the armrest while pushing the knob.

2 Lift the armrest.

3

Interior features

■ Tray in the console box

The tray can be raised backward.

■ Opening and closing assist function

When the console box is opened or closed partway, this function will apply force in the appropriate direction, helping open or close the console box.

 **CAUTION****■ Caution while driving**

Keep the console box closed.

Injuries may result in the event of an accident or sudden braking.

 **NOTICE****■ Tray**


Do not insert items exceeding the height of the tray. Doing so may prevent opening and closing of the lid.

Cool box/auxiliary box (if equipped)

► 5-seat models



Pull down the armrest.

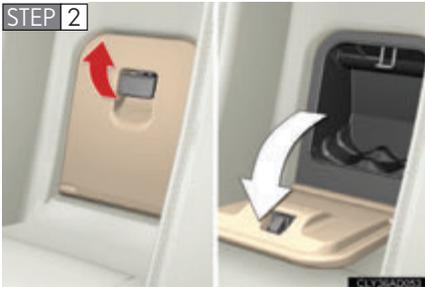

Pull the lever.




Open the cool air intake lid.

► 4-seat models



Pull up the lever to release the lock and lift the lid.

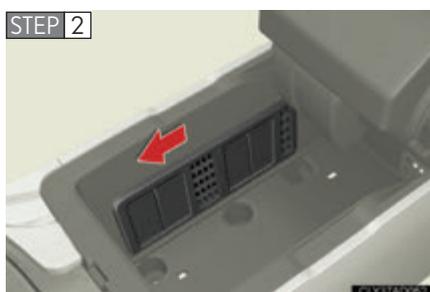

Open the cool air intake lid.

■ Operating conditions (cool box)

▶ 5-seat models



- The rear air conditioning system is on.
-  is displayed on the rear control panel.

▶ 4-seat models




■ Using a cool box as an auxiliary box

▶ 5-seat models



Close the cool air intake lid to turn off the cool box system.

▶ 4-seat models

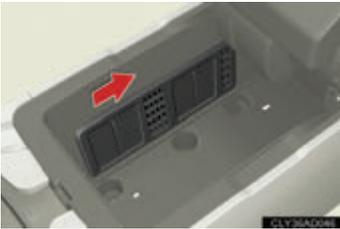

Close the cool air intake lid to turn off the cool box system.

■ Items unsuitable for the cool box

- Drinks in unsealed containers
- Fragile items, perishables or anything with strong odor


⚠ CAUTION

■ Caution while driving

Always keep the cool box closed to reduce the chance of injury in case of an accident or sudden stop.

Auxiliary boxes

► Overhead

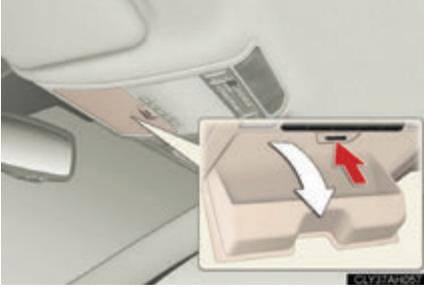


Press in the button.

This box is useful for temporarily storing sunglasses and similar small items.

► Rear seat (5-seat models)



Pull down the armrest.

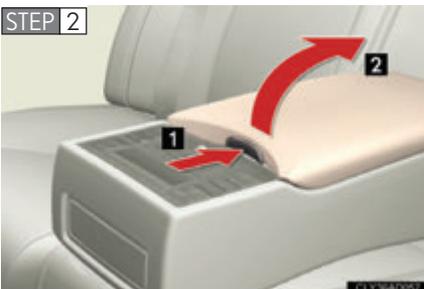

1 Press the button to release the lock.

2 Lift the lid.

▶ Rear seat (4-seat models)



Press in the lid.

This box is useful for storing DVD discs and headphones.

⚠ CAUTION**■ Items that should not be left in the auxiliary box (overhead type)**

Do not leave glasses or lighters in the box.

If the interior of the vehicle becomes hot, lighters may explode and glasses may warp or crack.


■ Caution while driving

Do not leave the auxiliary box open while driving.

Items may fall out and cause death or serious injury in case of an accident or sudden stop.

3-8. Other interior features

Sun visors

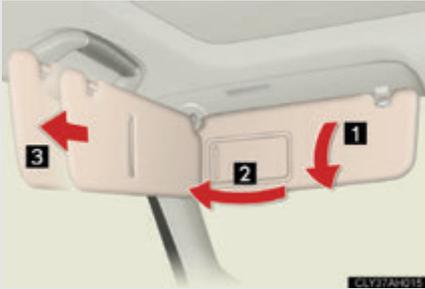

- 1** Forward position:
Flip down.
- 2** Side position:
Flip down, unhook, and swing to the side.
- 3** Side extender:
Place in side position, then slide backward.

3-8. Other interior features

Vanity mirrors

▶ Front



Slide the cover to open.

The light turns on when the cover is opened.

▶ Rear



Press the button to open.

The vanity light turns on.

NOTICE

■ When not in use

Keep the rear vanity mirror closed.

■ To prevent the 12-volt battery from being discharged

Do not leave the vanity lights on for extended periods while the hybrid system is off.

3-8. Other interior features

Clock

The clock is displayed when the “POWER” switch is in ACCESSORY or ON mode. Perform the following procedure to adjust the clock:

► Vehicles without navigation system



Press  .

STEP 2 Touch  .



- 1 Adjusts the hour
 - 2 Adjusts the minutes
 - 3 Rounds to the nearest hour*
 - 4 Turns daylight saving time on
 - 5 Turns daylight saving time off
- After setting, touch  .

*: e.g. 1:00 to 1:29 → 1:00
1:30 to 1:59 → 2:00

- ▶ Vehicles with navigation system
Refer to “Navigation System Owner’s Manual.”

- **When the 12-volt battery is disconnected**

The time display will automatically be set to 1:00.

3-8. Other interior features

Outside temperature display

The displayed temperature ranges from -40°F (-40°C) up to 122°F (50°C) when the “POWER” switch is in ON mode.

► For U.S.A.



► For Canada



■ When “-” or “E” is displayed

The system may be malfunctioning. Take your vehicle to your Lexus dealer.

■ Display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 12 mph [20 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

3-8. Other interior features

Ashtrays

► Front



Push the front part of the lid to open. Push the lid again to close.

To remove, pull the ashtray upwards.

► Rear



Open the ashtray lid.

To remove, pull the ashtray upwards.

⚠ CAUTION

■ When not in use

Keep the ashtray closed.

Injuries may result in the event of sudden braking, sudden swerving or an accident.

■ To prevent fire

● Fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.

● Do not place paper or any other type of flammable object in the ashtray.

3-8. Other interior features

Cigarette lighters

► Front



Push the front part of the lid to open, and push the cigarette lighter down.

The cigarette lighter will pop up when it is ready for use.

► Rear (5-seat models)



Push the cigarette lighter.

The cigarette lighter will pop out when it is ready for use.

► Rear (if equipped on 4-seat models)



Open the auxiliary box and push the cigarette lighter.

The cigarette lighter will pop out when it is ready for use.

■ The cigarette lighter can be used when

The "POWER" switch is in ACCESSORY or ON mode.

 **CAUTION**

■ **To avoid burns or fires**

- Do not touch the metal parts of the cigarette lighter.
- Do not hold the cigarette lighter down. It could overheat and cause a fire.
- Do not insert anything other than the cigarette lighter into the outlet.

■ **When not in use**

Keep the ashtray closed.

Injuries may result in the event of sudden braking, sudden swerving or an accident.

3-8. Other interior features


Power outlets

The power outlet can be used for the following components:

12V: Accessories that run on less than 10 A

115 VAC: Accessories that use less than 100 W

► Inside the console (12V)

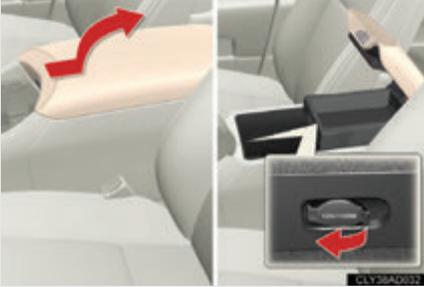

► Inside the armrest (12V)*



► On the back surface of the console (115 VAC)*



*: If equipped on 4-seat models

■ The power outlet can be used when

▶ 12 V

The “POWER” switch is in ACCESSORY or ON mode.

▶ 115 VAC

The “POWER” switch is in ON mode.

NOTICE

■ To avoid damaging the power outlet

Close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

■ To prevent the fuse from being blown

▶ 12 V

Do not use an accessory that uses more than 12 V 10 A.

▶ 115 VAC

Do not use a 115 VAC appliance that requires more than 100 W.

If a 115 VAC appliance that consumes more than 100 W is used, the protection circuit will cut the power supply.

■ To prevent the 12-volt battery from being discharged

Do not use the power outlet longer than necessary when the hybrid system is off.

■ Appliances that may not operate properly (115 VAC)

The following 115 VAC appliances may not operate properly even if their power consumption is under 100 W:

- Appliances with high initial peak wattage
- Measuring devices that process precise data
- Other appliances that require an extremely stable power supply

3-8. Other interior features

Heated steering wheel

The heated steering wheel can be used to heat the leather portion of the steering wheel.



On/off

The indicator light comes on when the heater is operating.

■ Operating condition

The "POWER" switch is in ON mode.

■ Timer

The heated steering wheel will automatically turn off after about 30 minutes.

■ If the indicator light flashes

Press the button to turn the heated steering wheel off and then press the button again. If the indicator light still flashes, a malfunction may be occurring. Turn the heated steering wheel off and have the vehicle inspected by your Lexus dealer.

 CAUTION

■ Burns

Only appropriately qualified and capable non-impaired persons should operate the vehicle. However, care should be taken to prevent injury if anyone in the following categories comes into contact with the steering wheel when the heated steering wheel is on:

- Babies, small children, the elderly, the sick and the disabled
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

 NOTICE


■ To prevent the 12-volt battery from being discharged

Turn the switch off when the hybrid system is off.

Climate control seats/seat heaters

The temperature of the seats can be adjusted individually.

■ Front climate control seats

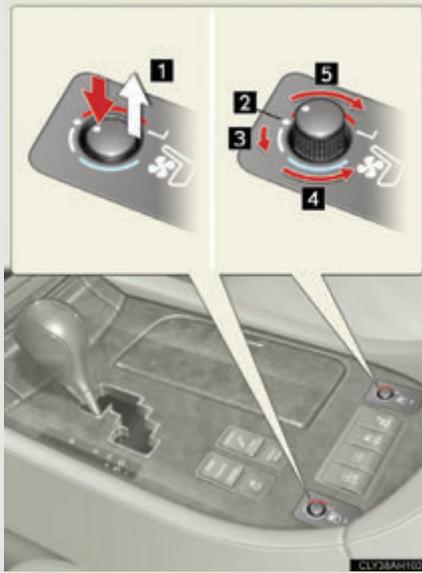

1 Press the knob to release it, and turn the knob to the desired temperature setting.

2 Off

Press the knob to lock it when not in use.


3 Ventilation

4 Cool air

5 Warm air

■ Rear climate control seats (if equipped)

▶ 5-seat models

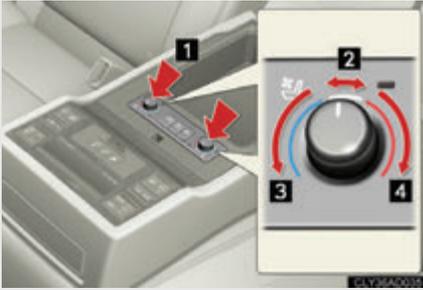

1 Press the knob to turn the system on, and turn the knob to the desired temperature setting.


Press the knob again to turn the system off.

2 Ventilation

3 Cool air

4 Warm air

▶ 4-seat models

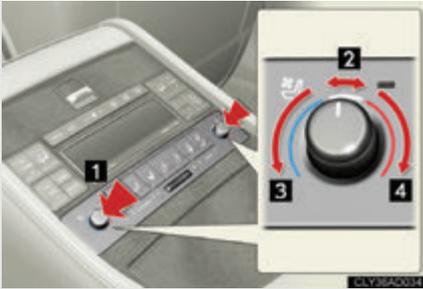

The rear climate control seats can also be turned on and off from the front seats.



■ Rear seat heaters (if equipped)



Press the knob to turn the system on, and turn the knob to the desired temperature setting.

The further you turn the knob clockwise, the warmer the seat temperature becomes. Press the knob again to turn the system off.



The rear seat heaters can also be turned on and off from the front seats.

■ Operating condition

The "POWER" switch is in ON mode.

■ Replacing the air filters

Filters are installed in the climate control seats. For replacement of the filters, contact your Lexus dealer.

 CAUTION

■ **Burns/excessive cooling**

- Use caution when seating the following persons in a seat to avoid the possibility of burns or excessive cooling:
 - Babies, small children, elderly persons, sick persons and persons with a physical disability
 - Persons who have sensitive skin
 - Persons who are fatigued
 - Persons who have taken alcohol or drugs which induce sleep, such as sleeping drugs and cold remedies
- Do not cover the seat with anything when using the climate control seat or seat heater. Using the climate control seat or seat heater with a blanket or cushion may increase or decrease the temperature of the seat, resulting in overheating or overcooling.
- Do not use the climate control seat or seat heater more than necessary. Doing so may cool the occupants excessively or may cause minor burns or overheating.

 NOTICE

■ **To prevent damage to the climate control seat and seat heater**

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects, such as needles and nails, into the seat.

■ **To prevent the 12-volt battery from being discharged**

Do not leave the system on longer than necessary when the hybrid system is off.

3-8. Other interior features

Armrest (5-seat models)



Pull the armrest down for use.

NOTICE

■ **To prevent damage to the armrest**

Do not place too much strain on the armrest.

3-8. Other interior features

Rear seat relaxation system (4-seat models)

Pneumatic chambers and vibration units built into the right-hand rear seat provide the occupant with 3 speeds and intensities of pressure and 7 speeds of vibration.



- 1 "ON/OFF" - turns the system on and off
If no buttons are selected for about 3 minutes, the system will automatically turn off.
- 2 "SHIATSU" - starts the "SHIATSU" program
- 3 "STRETCH" - starts the "STRETCH" program
- 4 "SHOULDER" - starts manual operation for the upper back
- 5 "BACK" - starts manual operation for the lower back
- 6 "INTENSITY" - adjusts the intensity of air pressure
- 7 "SPEED" - adjusts the speed of the air unit
- 8 "VIB." - turns the vibration on and off

9 “VIB. SPEED” - adjusts the vibration speed

The vibration function can be operated along with the “SHIATSU”, “STRETCH”, “BACK” or “SHOULDER” function. If these functions are operated together, pressing either the “VIB.” button or the previously selected button (“SHIATSU”, “STRETCH”, “BACK” or “SHOULDER”) stops the corresponding operation.

■ Operating condition

The “POWER” switch is in ON mode.

■ Programmed operations

- “SHIATSU”
Partial pressure for the whole back
- “STRETCH”
Stretches and relaxation of the whole back

■ Timer function

Each operation will automatically stop about 15 minutes after it starts.


CAUTION

■ Using the rear seat relaxation system

- Those who are pregnant, have recently given birth, or suffer from ailments requiring rest (heart disease etc.) should consult a doctor before use.
- Do not allow children to use the relaxation function.
- Do not use immediately after a meal or for an extended period of time.
- If you feel sick while using the relaxation function, immediately discontinue use.

3-8. Other interior features

Retractable table (4-seat models)

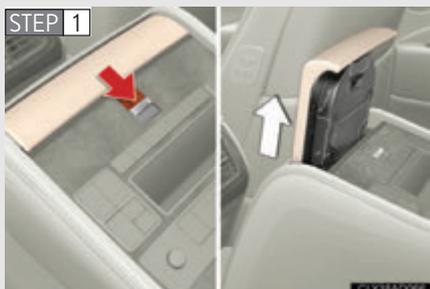

Slide the lever to raise the table.



Pull the table up and pull down the table.



The position of the table can be changed. Before using the table, make sure that the table is securely locked.

When the table is in use, the front seats will stop if they are going to contact the table.
(→P. 76)



When returning the table, pull it up while pulling the lock release lever.

 **CAUTION****■ When not in use**

To avoid injury, return the table.

■ Caution while driving

Keep the table stowed properly in its place. In the event of an accident, contact with the table may result in death or serious injury.

■ When using the table

Observe the following precautions. Failure to do so may result in death or serious injury.

- Make sure the table is securely locked.
- Do not lean on the table.
- Do not put anything heavier than 22 lb. (10 kg) on the table.

 **NOTICE****■ To prevent damage to the table**


Do not place too much strain on the table.

3-8. Other interior features

Rear sunshade

The rear sunshade can be raised and lowered by operating any of the buttons shown below.

► From front seat

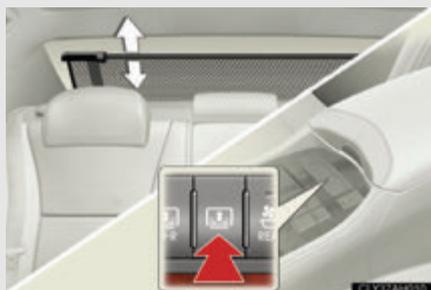

Extend/retract

► From rear seat (5-seat models)



Extend/retract

► From rear seat (4-seat models)



Extend/retract

■ The rear sunshade can be used when

The "POWER" switch is in ON mode.

■ Operating the rear sunshade after turning the hybrid system off

The rear sunshade can be operated for approximately 60 seconds even after the "POWER" switch is switched to ACCESSORY mode or turned OFF.

■ Reverse operation feature

To ensure adequate rear visibility, the rear sunshade automatically lowers when the shift lever is shifted to "R".

However, the rear sunshade is raised again if any of the following occurs:

- The button is pressed again.
- The shift lever is shifted to "P".
- The shift lever is shifted out of "P" or "R", and the vehicle reaches a speed of 9 mph (15 km/h).

If the hybrid system is off when the rear sunshade has been lowered due to the reverse operation feature, it will not be raised even when the hybrid system is turned on again and the vehicle reaches a speed of 9 mph (15 km/h). To raise the sunshade again, press the button.

■ Button lock function

To prevent inadvertent operation, some buttons on the rear armrest can be locked. (→P. 296)

 CAUTION**■ When the rear sunshade is being raised or lowered**

Do not place fingers or any objects in the shade mechanism or in the opening as injury may result.

 NOTICE

■ **To prevent the 12-volt battery from being discharged**

Do not operate the rear sunshade when the hybrid system is off.

■ **To ensure normal operation of the sunshade**

Observe the following precautions:

- Do not place excessive load on the motor or other components.
- Do not place objects where they may hinder opening and closing operations.
- Do not attach items to the rear sunshade.
- Keep the opening clean and clear of obstructions.
- Do not operate the rear sunshade continuously for long periods of time.

3-8. Other interior features

Rear door sunshades*

The rear door sunshades can be extended and retracted by operating any of the buttons shown below.

► From front seat



Extend/retract

The rear door sunshades can be extended only when both left and right rear door sunshades are retracted. Pressing the button with either side retracted will cause both sides to be retracted.

► From rear seat (5-seat models)



Extend/retract

► From rear seat (4-seat models)



Extend/retract

*: If equipped

■ Operating conditions

- The “POWER” switch is in ON mode.
- The rear windows are fully closed.
The rear door sunshades automatically retract when the rear windows are opened.

■ Operating the rear door sunshades after turning the hybrid system off

The rear door sunshades can be operated for approximately 60 seconds even after the “POWER” switch is switched to ACCESSORY mode or turned OFF.

■ Jam protection function

If an object becomes caught between a rear door sunshade and the window frame, the jam protection function will cause the sunshade to detach from its drive mechanism and retract.

- ▶ If the jam protection function operates when extending the rear door sunshades

Pressing the button will reconnect the sunshade.

Pressing the button again will allow the sunshades to be operated.

If the sunshade does not operate after the button is pressed, press the button again.

- ▶ If the jam protection function operates when retracting the rear door sunshades

Press and hold the button to re-extend the rear door sunshades, and continue pressing for more than 5 seconds after the sunshades have fully extended and stopped.

■ Button lock function

To prevent inadvertent operation, some buttons on the rear armrest can be locked. (→P. 296)

■ When reconnecting the 12-volt battery

The rear door sunshades will always be retracted the first time the button is pressed.

 **CAUTION****■ When the rear door sunshades are being extended or retracted**

Do not place fingers or any objects in the shade mechanism or in the opening as injury may result.

■ Jam protection function

Never use any part of your body to intentionally activate the jam protection function.

 **NOTICE****■ To prevent the 12-volt battery from being discharged**

Do not operate the rear door sunshades when the hybrid system is off.

■ To ensure normal operation of the sunshades


Observe the following precautions:

- Do not place excessive load on the motor or other components.
- Do not place objects where they may hinder opening and closing operations.
- Do not attach items to the rear door sunshades.
- Keep the opening clean and clear of obstructions.
- Do not operate the rear door sunshades continuously for long periods of time.

3-8. Other interior features


Coat hooks

- ▶ Without rear air conditioning system

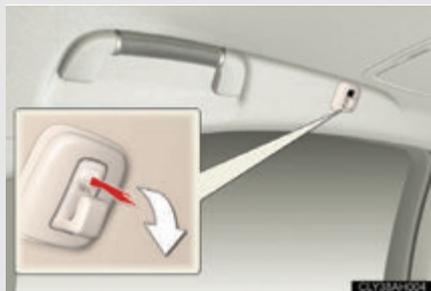

To use the coat hook, push it on.

- ▶ With rear air conditioning system

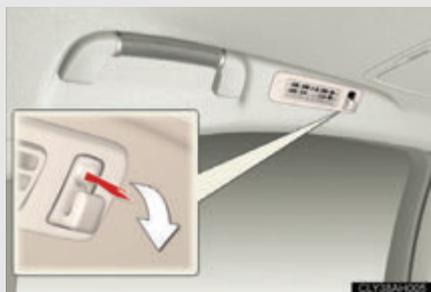

To use the coat hook, push it on.

⚠ CAUTION

■ Items that must not be hung on the hook

Do not hang a coat hanger or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles that cause death or serious injury.

3-8. Other interior features

Floor mat

Securely place a mat that matches the size of the space on the carpet.



Secure the floor mat using the hooks provided.

CAUTION

■ When inserting the floor mat

Observe the following precautions.

Failure to do so may result in the floor mat slipping and interfering with the movement of the pedals during driving, resulting in an accident.

- Make sure the floor mat is properly placed on the vehicle carpet and the correct side faces upward.
- Do not place floor mats on top of existing mats.

3-8. Other interior features


Trunk features

■ Cargo net



The cargo net is provided for securing loose items on the floor or items inside the trunk.


Raise the cargo hooks on the floor. Hook the net on the cargo hooks.

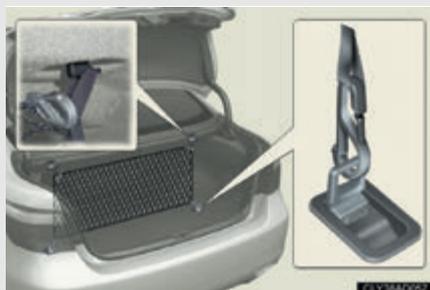

■ Shopping bag hooks



■ First-aid kit storage belt

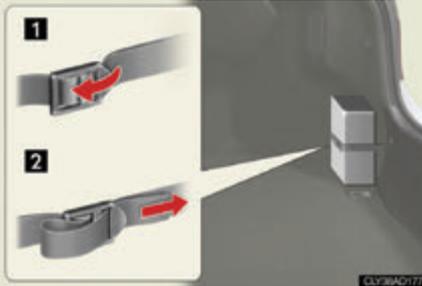

- 1 Loosen
- 2 Tighten

■ Luggage mat



Pull the hook upwards when lifting the luggage mat up.



The hook can be hooked on the edge of the trunk.

⚠ CAUTION

■ When the cargo net is not in use

To avoid injury, always return the cargo hooks on the floor to their stowed positions.

 NOTICE

■ **When closing the trunk**

Do not leave the luggage mat hook hooked on the edge of the trunk.
The luggage mat may get damaged.

3-8. Other interior features

Garage door opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].

Programming HomeLink[®] (for U.S.A. owners)

The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.




- 1 Indicator
- 2 Buttons

■ Programming HomeLink[®]



Point the remote control transmitter for the device 1 to 3 in. (25 to 75 mm) from the HomeLink[®] buttons.

Keep the HomeLink[®] indicator light in view while programming.

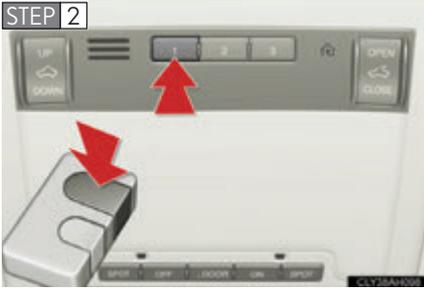

Press and hold one of the HomeLink[®] buttons and the transmitter button. When the HomeLink[®] indicator light changes from a slow to a rapid flash, you can release both buttons.

If the HomeLink[®] indicator light comes on but does not flash, flashes rapidly for 2 seconds and remains lit, the HomeLink[®] button is already programmed. Use the other buttons or follow the “Reprogramming a HomeLink[®] button” instructions. (→P. 492)



Test the HomeLink[®] operation by pressing the newly programmed button.

If a HomeLink[®] button has been programmed for a garage door, check to see if the garage door opens and closes. If the garage door does not operate, see if your remote control transmitter is of the rolling code type. Press and hold the programmed HomeLink[®] button. The remote control transmitter is of the rolling code type if the HomeLink[®] indicator light flashes rapidly for 2 seconds and then remains lit. If your transmitter is of the rolling code type, proceed to the heading “Programming a rolling code system”.

STEP 4 Repeat the steps above to program another device for each of the remaining HomeLink[®] buttons.

■ Programming a rolling code system

If your device is rolling code equipped, follow the steps under the heading “Programming HomeLink[®]” before proceeding with the steps listed below.

STEP 1 Locate the training button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener motor.

Refer to the operation manual supplied with the garage door opener motor for the location of the training button.

STEP 2 Press the training button.

Following this step, you have 30 seconds in which to initiate step 3 below.

STEP 3 Press and hold the vehicle's programmed HomeLink[®] button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the garage door opens, the programming process is complete. If the door does not open, press and release the button a third time. This third press and release will complete the programming process by opening the garage door.

The ceiling mounted garage door opener motor should now recognize the HomeLink[®] signal and operate the garage door.

STEP 4 Repeat the steps above to program another rolling code system for any of the remaining HomeLink[®] buttons.

■ Programming an entry gate (for U.S.A. owners)/Programming all devices in the Canadian market

STEP 1 Place your transmitter 1 to 3 in. (25 to 75 mm) away from the surface of the HomeLink[®].

Keep the HomeLink[®] indicator light in view while programming.

STEP 2 Press and hold the selected HomeLink[®] button.

STEP 3 Repeatedly press and release (cycle) the device's remote control button for two seconds each until step 4 is completed.

STEP 4 When the indicator light on the HomeLink[®] compatible transceiver starts to flash rapidly, release the buttons.

STEP 5 Test the operation of the HomeLink[®] by pressing the newly programmed button. Check to see if the gate/device operates correctly.

STEP 6 Repeat the steps above to program another device for each of the remaining HomeLink[®] buttons.

■ Programming other devices

To program other devices such as home security systems, home door locks or lighting, contact your authorized Lexus dealer for assistance.

■ Reprogramming a button

The individual HomeLink[®] buttons cannot be erased but can be reprogrammed. To reprogram a button, follow the “Reprogramming a HomeLink[®] button” instructions.

Operating HomeLink[®]

Press the appropriate HomeLink[®] button. The HomeLink[®] indicator light should come on.

The HomeLink[®] compatible transceiver in your vehicle continues to send a signal for up to 20 seconds as long as the button is pressed.

Reprogramming a HomeLink[®] button

Press and hold the desired HomeLink[®] button. After 20 seconds, the HomeLink[®] indicator light will start flashing slowly. Next, while still pressing and holding the HomeLink[®] button, press and hold the button on the transmitter until the HomeLink[®] indicator light changes from a slow to a rapid flash.

Erasing the entire HomeLink® memory (all three programs)



Press and hold the 2 outside buttons for 10 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink® memory.

■ Before programming

- Install a new battery in the remote control transmitter.
- The battery side of the remote control transmitter must be pointed away from the HomeLink® button.

■ Certification for the garage door opener

This device complies with Part 15 of the FCC Rules and with RSS-210 of the IC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: This transmitter has been tested and complies with FCC and IC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

 **CAUTION**

■ **When programming a garage door or other remote control devices**

The garage door on other devices may operate, so ensure people and objects are out of danger to prevent potential harm.

■ **Conforming to federal safety standards**

Do not use the HomeLink[®] compatible transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an interfering object. A door or device without these features increases the risk of death or serious injury.

3-8. Other interior features

Lexus Link System*

The Lexus Link System is a communication service that uses the Global Positioning System (GPS) data and cellular service to provide you with safety, security and convenience. This system is only operational in GPS and cellular coverage areas. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions. For details about service and subscription, call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

■ Buttons



- 1 Voice keypad button
- 2 Volume control
- 3 Phone button
- 4 "SERVICES" button
- 5 Emergency button

■ Services

The Lexus Link System offers the following services:

- Airbag deployment notification (→P. 497)
- Emergency assistance (→P. 497)
- Stolen vehicle location assistance (→P. 498)
- Remote horn/lights and remote door lock/unlock (→P. 498)
- Advisor record (→P. 499)
- Personal calling (→P. 499)
- Other services (→P. 498)

Operating the Lexus Link System during a Bluetooth® phone call will terminate the Bluetooth phone call.

Safety information for the Lexus Link System

Important! Read this information before using the Lexus Link System.

■ Exposure to radio frequency signals

The Lexus Link System to be installed in your vehicle is a low power radio transmitter and receiver. When the “POWER” switch is in ON mode, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.

- ANSI (American National Standards Institute) C95.1 [1992]
- NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
- ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of the Lexus Link System complies with the FCC guidelines in addition to those standards.

Indicator and warning lights



1 Operation indicator light

The operation indicator light will go off a short time after your subscription expired.

2 Warning light

If the warning light (red light) comes on, have the vehicle inspected by your Lexus dealer.

Airbag deployment notification

If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center, and your vehicle's location is identified. The Lexus Link Advisor will attempt to contact you and assess the situation. The Advisor can quickly contact the nearest emergency services provider, describe the situation and request that assistance be sent to your location.

The Lexus Link Advisor can, if requested, connect you to an emergency services operator.

Emergency assistance

When you press  button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.

If you have accidentally pressed the button, tell the Lexus Link Advisor that you are not experiencing an emergency.

Stolen vehicle location assistance

If your vehicle is stolen, call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free) and select the option for Lexus Link.

To protect subscribers' privacy, the location of a vehicle will not be provided to anyone other than a law enforcement authority.

Remote horn/lights and remote door lock/unlock

The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free) and select the option for Lexus Link.

- If you forget to lock the vehicle or you are locked out, the Lexus Link Call Center can send a signal to lock or unlock the vehicle remotely.
- If you forget where you parked the vehicle, such as in a large parking lot, the Lexus Link Call Center can send a signal to flash the headlights and sound the horn to help you locate the vehicle.

When contacting the Lexus Link Call Center from the outside of the vehicle, you need the Lexus Link PIN (Personal Identification Number). Write the PIN down and carry it with you.

Ability to locate stolen vehicles and lock/unlock doors and activate horn/lights will vary with conditions. Lexus Link is unable to remotely lock doors when the electronic key is left inside the vehicle and is unable to remotely unlock doors when the "POWER" switch is in ACCESSORY or ON mode.

Other services

Press  in the vehicle or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free), and then select the option for Lexus Link. The services provided will depend on the service plan level.

Advisor record

■ Recording a conversation with an advisor

Press  to record a conversation. To stop recording, press  again.

- Up to 2 minutes of recording time is available.
- Recording a new conversation deletes the previously recorded conversation.

■ Playing the recorded conversation

STEP 1 Press  or .

STEP 2 Say “Advisor playback”.

Press the button again to stop the playback.

To restart the playback, press , say “Advisor playback” and then select either of the following methods:

- Say “Resume” to resume the playback.
- Say “Play” to start from the beginning.

Personal calling from OEM telematic services

The Lexus Link System provides access to personal calling, a hands-free phone service provided by OEM telematic services. You can purchase a package of minutes that works best for you. As you make and receive calls, minutes are deducted from your plan. They are easily billed to a credit card that is kept on file so no separate phone bill is needed.

Personal calling universal voice recognition commands:

- **“Help”** The system will provide a list of available commands.
- **“Clear”** When you are entering digits, this command will erase the last digit entered.
- **“Cancel”** This command takes you from the current function to the “Lexus Link ready” prompt. If the last response from the system was “Lexus Link ready”, this command will exit voice mode.

Voice recognition command error message:

- **“Pardon”** The system responds with this message if the system does not recognize your voice command properly. Say the command slowly again. After the third time this happens, the system will try to guess the command you are requesting. If correct, say “Yes”. If not, say “No”, and the system will prompt you with its next-best guess.
- **“Slower please”** The system responds with this message if you say a command before the system is ready to listen or if your voice command cannot be recognized because of substantial background noise. Try to wait slightly longer before speaking.

■ **There are 5 ways to make a call.**

▶ Dialing a specific phone number

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Dial”.

STEP 2 When the system responds with “Phone number to dial, please”, say the entire number you wish to dial without pausing.

STEP 3 The system will repeat the number and ask “Yes or No”.

STEP 4 Say “Yes” (or “No” to try again).

STEP 5 The system responds with “Dialing”. (Your call will then be connected.)

▶ Dialing digit-by-digit (“Digit Dial”)

“Digit Dial” enables you to dial a phone number by individual digit. This is helpful when there is background noise and also improves voice recognition.

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Digit Dial”.

STEP 2 When the system responds with “Digit please”, say the first digit of the number to be dialed and wait for it to be repeated back to you.

STEP 3 Continue one digit at a time until all digits are entered.

STEP 4 When finished, say “Dial”. The system responds with “Dialing” and your call is placed.

If you have problems storing a number using the continuous number method, you can store numbers one digit at a time using “Digit Store”. Simply follow the instructions above for “Digit Dial”, except say “Digit Store” in STEP 1 and “Store” in STEP 4.

► Dialing a phone number saved as a nametag

A nametag is a convenient way to store important or frequently called phone numbers for easy access at any time. To do this, choose a frequently-called number to store, the example below uses your home telephone number.

● How to store a nametag

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Store”.

STEP 2 When the system responds with “Phone number to store, please”, say the entire number you wish to store with no pauses. The system will repeat the number and ask “Yes or No”.

STEP 3 Say “Yes” (or “No” to try again).

STEP 4 When the system responds with “Nametag, please”, say “My home”.

STEP 5 When the system responds with “About to store my home. Does that sound OK?”, say “Yes” (or “No” to try again).

STEP 6 The system responds with “Storing my home”.

-The system can store up to 20 nametags.

-Try to use multi-syllable nametags such as “my home” and “the office”.

-Try to avoid similar-sounding nametags like “Tim” and “Kim”.

When using the “Dial” and “Store” commands, the system will recognize 7-, 10-, and 11-digit phone numbers. When dialing or storing a phone number, you can say “zero” or “oh” for 0.

● How to place a call using a stored nametag

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Call”.

STEP 2 When the system responds with “Nametag, please”, say a nametag.

STEP 3 The system responds with “Calling nametag”.

● How to hear a list of your stored nametags

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Directory”.

STEP 2 The system will list your nametags.

▶ Dialing the last number you called (“Redial”)

You can dial the last number you called by using the “Redial” feature.

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Redial”.

STEP 2 The system will respond with “Redialing [#]”.

▶ Dialing a number a Lexus Link Advisor downloaded to your vehicle

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Number recall”.

STEP 2 The system will respond with “Connecting to number recall”.

■ **Receiving a call**

When someone calls you, you will hear a ring tone. Press  to answer the call.

If you do not answer within 30 seconds, the system will terminate the incoming call.

■ **Ending a call**

When your call is finished, press  to end the call.

■ Accessing voicemail and sending number tones to an automated phone system

You can access a voicemail system and respond to number request from an automated phone system. When you receive the request for a number while in a call, press  after saying the numbers one at a time, say “Dial”.

If you do not say any commands within 5 seconds after pressing the button, or if you press the button twice, the system cannot receive the number tones you are trying to send. Press the button to try again.

■ How to retrieve your phone number

STEP 1 Press . When the system responds with “Lexus Link ready”, say “My number”.

STEP 2 The system responds with “Your number is [#]”.

If the response is “Personal calling unavailable”, this means your personal calling feature is not yet active; this may take a few days from vehicle delivery. It could also mean that personal calling service is not available in your area. Press  to check with an Advisor. Now that you have your number, take a moment to practice by making your first call to your home phone. Remember, the system recognizes numbers better when you say them quickly.

■ Verifying remaining units (minutes)

► To verify remaining minutes

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Units”.

STEP 2 When the system responds with “Verify or add”, say “Verify”.

STEP 3 The system responds with “You have [#] units remaining”.

► To add more calling units (minutes)

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Units”.

STEP 2 When the system responds with “Verify or add”, say “Add”.

STEP 3 The system responds with “Connecting to the Personal Calling Center”.

■ Security code/locking your system

The personal calling function can be locked using a 4-digit security code. While the system is locked, it is only possible to communicate with the Lexus Link Call Center.

To turn on/off the security

STEP 1 Press . When the system responds with “Lexus Link ready”, say “Security”.

STEP 2 When the system responds with “Enter first digit of code, please”, say your 4-digit code one digit at a time.

STEP 3 After the fourth digit, the system responds with “Security (code ####) is now on/off”.

■ Speech recognition information

The Lexus Link speech recognition systems use speech technology that is designed to understand a wide range of speakers of American English. However, the technology may not work as well if a regional or ethnic accent is encountered. If the speech recognition system does not work properly, refer to the following:

- The system does not recognize your command properly if noise is present. Perform the following to improve voice command recognition:
 - Turn down or off the air conditioning system.
 - Slow down to reduce wind noise.
 - Close the windows and the moon roof to block outside noise.
 - Have all occupants be quiet so that the system does not recognize their conversation as a command.
- When to speak

Say a command within 5 seconds after the system prompts you to speak.
- How to speak
 - Speak forcefully and clearly.
 - Speak calmly and naturally.
 - The driver should speak while facing forward, and the passenger should speak facing the inside rear view mirror.
 - Avoid speaking with a rising intonation. Use a flat or falling intonation.

- Tips for one-word commands
 - The system recognizes only one word at a time for personal calling. (There are some exceptions, such as “Advanced services” and “My number”.)
 - When inputting the security codes or voice-activated keypad number, you must say them one digit at a time. When inputting a phone number, the speech recognition system can recognize 7-, 10-, and 11-digit numbers as well as the number 911.
- Tips for entering a phone number using the “Dial” and “Store” commands
 - You do not need to say “Dial”, “Store” or “Verify” after the phone number.
 - If the phone number entered is not 7-, 10-, or 11-digits, use the “Dial” or “Store” command.
 - Do not pause between the digits.
 - Speech recognition does not recognize the words “Hundred” or “Thousand”. Instead, say each digit.
 - Speech recognition often works better when the digits are combined smoothly into a single phrase.
 - If the system does not recognize your command properly, use the “Digit dial” command to enter one digit at a time.
- If problems continue
 - Say each one of the syllables in the word clearly.
 - Be sure to articulate each sound in the word.
 - If the system is confusing 2 commands that are similar, be sure to pronounce the distinction.
 - Avoid clipping short words and syllables.
 - Try speaking louder to prevent background noise from drowning out your voice.
- Audible voice prompts

Some of the voice guidance instructions can be changed to Spanish. Press  and ask a Lexus Link Advisor.

■ **Information on Advanced Services**

See the Lexus Link area of the Lexus website at www.lexus.com/lexuslink/ or call the Lexus Link Call Center at 1-800-255-LEXUS (1-800-255-3987) (toll-free) for more information.

■ **Certification for the Lexus Link System**

FCC ID: SCWTR-423-A2

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **CAUTION**

■ **FCC WARNING**

Changes or modifications in construction not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Frequency Exposure. This device is approved for Mobile Application only and, to comply with applicable FCC radio frequency exposure regulations, must be used with a distance of at least 7.9 in. (20 cm) between the antenna and the body of any person at all time during use.

4-1. Maintenance and care

- Cleaning and protecting the vehicle exterior..... 508
- Cleaning and protecting the vehicle interior 511

4-2. Maintenance

- Maintenance requirements 514
- General maintenance 516
- Emission inspection and maintenance (I/M) programs..... 519

4-3. Do-it-yourself maintenance

- Do-it-yourself service precautions..... 520
- Hood..... 523
- Positioning a floor jack 524
- Engine compartment 526
- 12-volt battery 538
- Tires..... 542
- Tire inflation pressure..... 550
- Wheels..... 554
- Air conditioning filter 556
- Electronic key battery..... 559
- Checking and replacing fuses 561
- Headlight aim 581
- Light bulbs..... 584

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Automatic car washes

- Fold the mirrors before washing the vehicle.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before car wash, check that the fuel filler door on your vehicle is closed properly.

■ Aluminum wheels

Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the paint.

■ Bumpers and side moldings

Do not scrub with abrasive cleaners.

■ To prevent deterioration and body corrosion

- Wash the vehicle immediately in the following cases:
 - After driving near the sea coast
 - After driving on salted roads
 - If you see coal tar or tree sap on the paint surface
 - If you see dead insects, insect droppings or bird droppings on the paint
 - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled in dust or mud
 - If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.

CAUTION

■ Caution about the exhaust pipes and rear bumper diffusers

Exhaust gasses cause the exhaust pipes and rear bumper diffusers to become quite hot.

When washing the vehicle, be careful not to touch the pipes and diffusers until they have cooled sufficiently, as touching hot exhaust pipes and rear bumper diffusers can cause burns.

NOTICE


■ To protect your vehicle's painted surfaces

Do not use organic cleaners such as benzene or gasoline.

■ Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax on the surfaces of the lights. Wax may cause damage to the lenses.

■ When using an automatic car wash

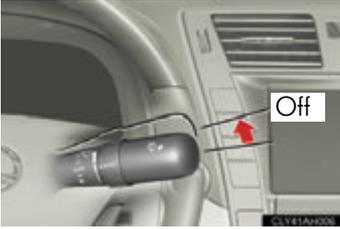

Set the wiper switch to off position.
If the wiper switch is in "AUTO", the wipers may operate and the wiper blades may be damaged.

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

■ Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

■ Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in shaded and ventilated area.

■ Synthetic leather areas

- Remove loose dirt using a vacuum cleaner.
- Apply a mild soap solution to the synthetic leather using a sponge or soft cloth.
- Allow the solution to soak in for a few minutes. Remove the dirt and wipe off the solution with a clean, damp cloth.

■ Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water. Excellent results are obtained when keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

CAUTION

■ Water in the vehicle

- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air vents, or in the trunk.

Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.

- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P.126)

An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or severe injury.

 NOTICE**■ Cleaning detergents**

Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:

- Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, or bleach
- Seats: Acidic solutions, such as thinner, benzene, or alcohol

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces.

- Remove any dust or dirt on leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or that contain wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components under the floor of the vehicle, and may also cause the body to rust.

■ Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

4-2. Maintenance

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. It is the owner's responsibility to perform regular checks. Lexus recommends the following maintenance:

■ General maintenance

Should be performed on a daily basis. This can be done by yourself or by a Lexus dealer.

■ Scheduled maintenance

Should be performed at specified intervals according to the maintenance schedule.

For details about maintenance items and schedules, refer to the "Warranty and Service Guide", "Owner's Manual Supplement" or "Scheduled Maintenance".

■ Do-it-yourself maintenance

You can perform some maintenance procedures yourself.

Please be aware that do-it-yourself maintenance may affect warranty coverage.

The use of Lexus repair manuals is recommended.

For details about warranty coverage, refer to the separate "Owner's Guide", "Warranty and Service Guide", "Owner's Manual Supplement" or "Warranty Booklet".

■ Repair and replacement

It is recommended that genuine Lexus parts be used for repair to ensure performance of each system. If non-Lexus parts are used in replacement or if a repair shop other than a Lexus dealer performs repairs, confirm the warranty coverage.

■ Allow inspection and repairs to be performed by a Lexus dealer

- Lexus technicians are well-trained specialists and are kept up to date with the latest service information. They are well informed about the operations of all systems on your vehicle.
- Keep a copy of the repair order. It proves that the maintenance that has been performed is under warranty coverage. If any problem should arise while your vehicle is under warranty, your Lexus dealer will promptly take care of it.

⚠ CAUTION**■ If your vehicle is not properly maintained**

It could result in serious damage to the vehicle and possible serious injury or death.

■ Warning in handling of 12-volt battery

- Engine exhaust, some of its constituents, and a wide variety of automobile components contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm. Work in a well ventilated area.
- Oils, fuels and fluids contained in vehicles as well as waste produced by component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Avoid exposure and wash any affected area immediately.
- 12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 540)

4-2. Maintenance

General maintenance

Listed below are the general maintenance items that should be performed at the intervals specified in the “Warranty and Service Guide” or “Owner’s Manual Supplement”. It is recommended that any problem you notice should be brought to the attention of your Lexus dealer or qualified service shop for advice.

Engine compartment

Items	Check points
Brake fluid	At the correct level? (→P. 536)
Coolant	At the correct level? (→P. 533)
Engine oil	At the correct level? (→P. 529)
Exhaust system	No fumes or strange sounds?
Radiator/condenser/hoses	Not blocked with foreign matter? (→P. 535)
Washer fluid	At the correct level? (→P. 537)

Luggage compartment

Items	Check points
12-volt battery	Check the connections. (→P. 538)

Vehicle interior

Items	Check points
Accelerator pedal	<ul style="list-style-type: none"> • Moves smoothly (without uneven pedal effort or catching)?
Transmission “Park” mechanism	<ul style="list-style-type: none"> • Can the vehicle be held securely on an incline with the shift lever in “P”?
Brake pedal	<ul style="list-style-type: none"> • Moves smoothly? • Does it have appropriate clearance and correct amount of free play?
Brakes	<ul style="list-style-type: none"> • No pull to one side when applied? • Loss of brake effectiveness? • Spongy feeling brake pedal? • Pedal almost touches floor?
Head restraints	<ul style="list-style-type: none"> • Move smoothly and lock securely?
Indicators/buzzers	<ul style="list-style-type: none"> • Function properly?
Lights	<ul style="list-style-type: none"> • Do all the lights come on? • Headlights aimed correctly? (→P. 581)
Parking brake	<ul style="list-style-type: none"> • Moves smoothly? • Can hold the vehicle securely on an incline?
Seat belts	<ul style="list-style-type: none"> • Does the seat belt system operate smoothly? • Are the belts undamaged?
Seats	<ul style="list-style-type: none"> • Do the seat controls operate properly?

Items	Check points
Steering wheel	<ul style="list-style-type: none"> • Moves smoothly? • Has correct free play? • No strange noises?

Vehicle exterior

Items	Check points
Doors/trunk	<ul style="list-style-type: none"> • Operate smoothly?
Engine hood	<ul style="list-style-type: none"> • The lock system works properly?
Fluid leaks	<ul style="list-style-type: none"> • Is there any leakage after parking?
Tires	<ul style="list-style-type: none"> • Inflation pressure is correct? • Tire surfaces not worn or damaged? • Tires rotated according to the maintenance schedule? • Wheel nuts are not loose?

CAUTION

If the hybrid system is operating

Turn the hybrid system off and ensure that there is adequate ventilation before performing maintenance checks.

Some states have vehicle emission inspection programs which include OBD (On Board Diagnostics) checks. The OBD system monitors the operation of the emission control system.

■ If the malfunction indicator lamp comes on

The OBD system determines that a problem exists somewhere in the emission control system. Your vehicle may not pass the I/M test and may need to be repaired. Contact your Lexus dealer to service the vehicle.

■ Your vehicle may not pass the I/M test in the following situations

● When the 12-volt battery is disconnected or discharged

Readiness codes that are set during ordinary driving are erased. Also, depending on your driving habits, the readiness codes may not be completely set.

● When the fuel tank cap is loose

The malfunction indicator lamp comes on as a temporary malfunction and your vehicle may not pass the I/M test.

■ When the malfunction indicator lamp goes off after several driving trips

The error code in the OBD system will not be cleared unless the vehicle is driven 40 or more times.

■ If your vehicle does not pass the I/M test

Contact your Lexus dealer to prepare the vehicle for re-testing.

4-3. Do-it-yourself maintenance

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure given in these sections.

Items	Parts and tools
12-volt battery condition (→P. 538)	<ul style="list-style-type: none">• Grease• Conventional wrench (for terminal clamp bolts)
Brake fluid level (→P. 536)	<ul style="list-style-type: none">• FMVSS No.116 DOT 3 or SAE J1703 brake fluid• Rag or paper towel• Funnel (used only for adding brake fluid)
Engine/power control unit coolant level (→P. 533)	<ul style="list-style-type: none">• “Toyota Super Long Life Coolant” or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology. For the U.S.A.: “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water. For Canada: “Toyota Super Long Life Coolant” is pre-mixed with 55% coolant and 45% deionized water.• Funnel (used only for adding coolant)

Items		Parts and tools
Engine oil level	(→P. 529)	<ul style="list-style-type: none"> • “Toyota Genuine Motor Oil” or equivalent • Rag or paper towel, funnel (used only for adding engine oil)
Fuses	(→P. 561)	<ul style="list-style-type: none"> • Fuse with same amperage rating as original
Tire inflation pressure	(→P. 550)	<ul style="list-style-type: none"> • Tire pressure gauge • Compressed air source
Headlight aim	(→P. 581)	<ul style="list-style-type: none"> • Phillips-head screwdriver
Radiator and condenser	(→P. 535)	—
Washer fluid	(→P. 537)	<ul style="list-style-type: none"> • Water or washer fluid containing antifreeze (for winter use) • Funnel

CAUTION

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions:

■ When working on the engine compartment

- Make sure that the indicator on the “POWER” switch and the “READY” indicator are both off.
- Keep hands, clothing, and tools away from the moving fans and engine drive belt.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper or rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.

 **CAUTION**

■ **When working near the electric cooling fan or radiator grille**

Be sure the "POWER" switch is OFF.

With the "POWER" switch in ON mode, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high.

(→P. 535)

■ **Safety glasses**

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in the eyes.

 **NOTICE**

■ **If you remove the air cleaners**

Driving with the air cleaners removed may cause excessive engine wear due to dirt in the air. Also a backfire could cause a fire in the engine compartment.

4-3. Do-it-yourself maintenance

Hood

Release the lock from the inside of the vehicle to open the hood.

STEP 1



Pull the hood release lever.

The hood will pop up slightly.

STEP 2



Lift the auxiliary catch lever and lift the hood.

CAUTION

■ Pre-driving check

Check that the hood is fully closed and locked.


If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

4-3. Do-it-yourself maintenance


Positioning a floor jack

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

■ Front

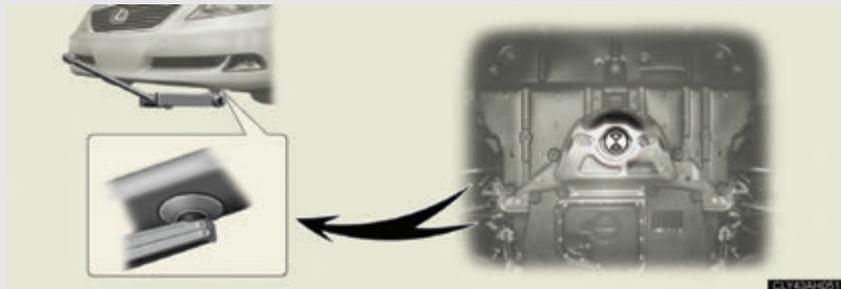

■ Rear

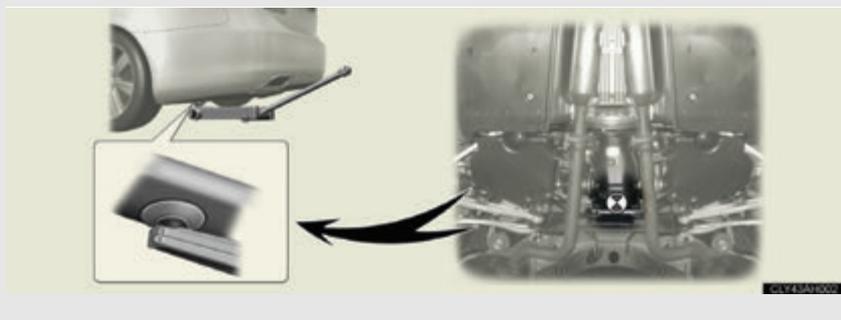

⚠ CAUTION**■ When raising your vehicle**

Make sure to observe the following to reduce the possibility of death or serious injury.




- Lift up the vehicle using a floor jack such as the one shown in the illustration.

- Do not use the jack that was supplied with your vehicle.
- Do not put any part of your body or get underneath the vehicle supported only by the floor jack.
Always use automotive jack stands on a solid, level surface.
- Do not start the hybrid system while the vehicle is supported by the floor jack.
- Stop the vehicle on level firm ground, firmly set the parking brake and put the shift lever in "P".
- Make sure to set the floor jack properly at the jack point.
Raising the vehicle with an improperly positioned floor jack will damage the vehicle and may cause the vehicle to fall off the floor jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the floor jack.
- Be sure to turn off the height control and stop the hybrid system. Otherwise, the vehicle height may change due to the automatic leveling function. (→P. 226)

4-3. Do-it-yourself maintenance

Engine compartment

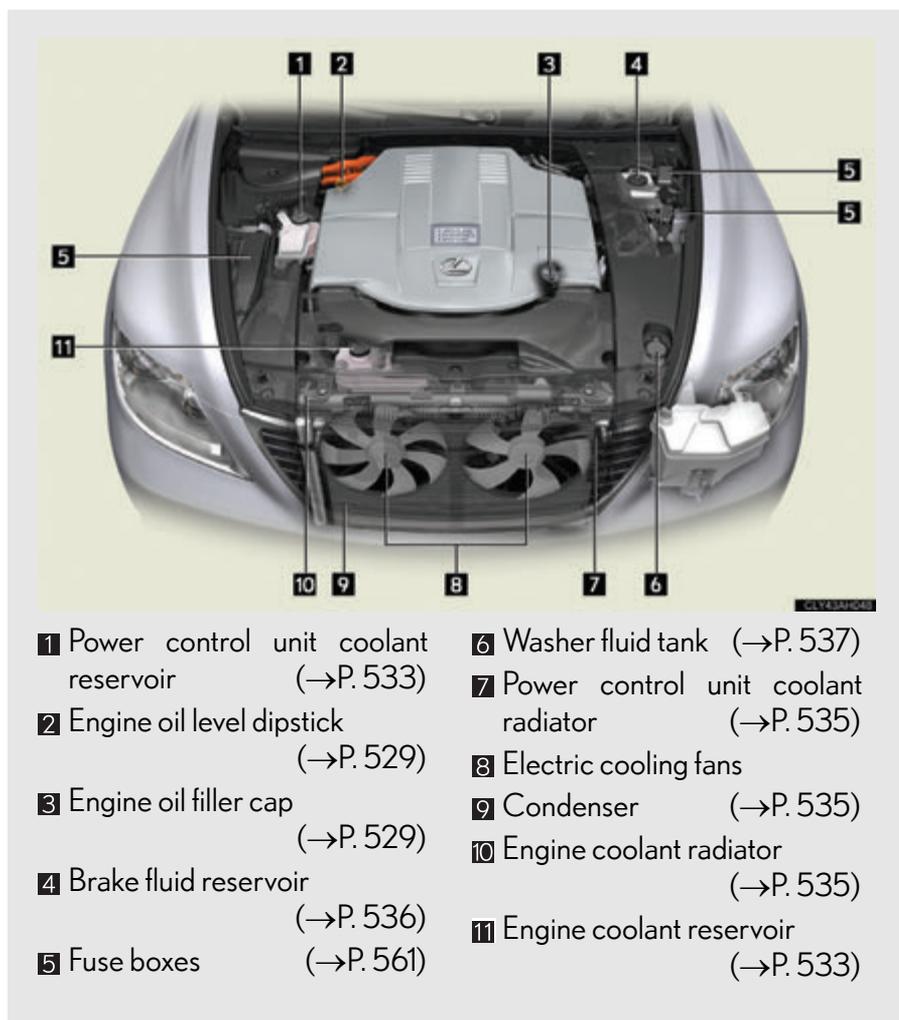

1 Power control unit coolant reservoir (→P. 533)

2 Engine oil level dipstick (→P. 529)

3 Engine oil filler cap (→P. 529)

4 Brake fluid reservoir (→P. 536)

5 Fuse boxes (→P. 561)

6 Washer fluid tank (→P. 537)

7 Power control unit coolant radiator (→P. 535)

8 Electric cooling fans

9 Condenser (→P. 535)

10 Engine coolant radiator (→P. 535)

11 Engine coolant reservoir (→P. 533)

Engine compartment covers

■ Removing the engine compartment covers

▶ Outside




▶ Front



■ Installing the clips

▶ Type A

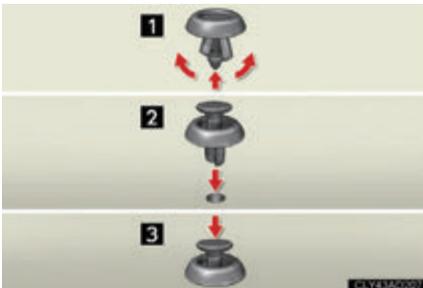

▶ Type B



 NOTICE

■ **After installing an engine compartment cover**


Make sure that the cover is securely installed in its original position.

Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.

■ Checking the engine oil

STEP 1 Park the vehicle on level ground. After turning off the hybrid system, wait more than five minutes for the oil to drain back into the bottom of the engine.

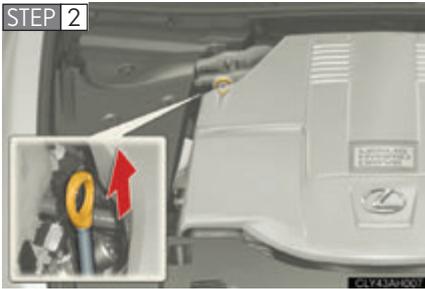


Hold a rag under the end and pull the dipstick out.

STEP 3 Wipe the dipstick clean.

STEP 4 Reinsert the dipstick fully.

STEP 5 Holding a rag under the end, pull the dipstick out and check the oil level.

STEP 6 Wipe the dipstick and reinsert it fully.

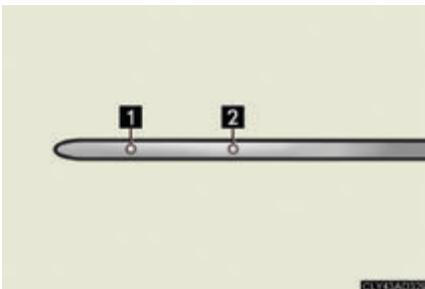

1 Low

2 Full

■ Adding engine oil



If the oil level is below or near the low level mark, add engine oil of the same type as already in the engine.

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 650
Oil quantity (Low → Full)	1.6 qt. (1.5 L, 1.3 Imp. qt.)
Item	Clean funnel

STEP 1 Remove the oil filler cap by turning it counterclockwise.

STEP 2 Add engine oil slowly, checking the dipstick.

STEP 3 Install the filler cap, turning it clockwise.

■ Engine oil consumption

- The amount of engine oil consumed depends on the oil viscosity, the quality of the oil and the way the vehicle is driven.
- More oil is consumed under driving conditions such as high speeds, frequent acceleration and deceleration.
- A new engine consumes more oil.
- When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.
- Oil consumption: Max. 1.1 qt./600 miles, 0.9 Imp. qt./600 miles (1.0 L per 1000 km)
- If your vehicle consumes more than 1.1 qt. (1.0 L, 0.9 Imp. qt.) every 600 miles (1000 km), contact your Lexus dealer.

■ After changing the engine oil (U.S.A. only)

The oil change system should be reset. Perform the following procedures:

- STEP 1** Switch the display to the trip meter "A" when the hybrid system is operating. (→P. 185)
- STEP 2** Turn the "POWER" switch OFF.
- STEP 3** While pressing the trip meter reset button, turn the "POWER" switch to ON mode (but do not start the hybrid system because otherwise the reset mode will be canceled). Press and hold the button until the multi-information display indicates that the reset is complete.

CAUTION

■ Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Lexus dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

NOTICE

■ To prevent serious engine damage

Check the oil level on a regular basis.

■ When replacing the engine oil

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

Coolant

The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the hybrid system is cold.

► Engine coolant reservoir



- 1 Reservoir cap
- 2 “FULL”
- 3 “LOW”

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 640)



► Power control unit coolant reservoir



1 Reservoir cap

2 "FULL"

3 "LOW"

If the level is on or below the "LOW" line, add coolant up to the "FULL" line. (→P. 641)

■ If the coolant level drops within a short time after replenishing

Visually check the radiators, hoses, coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have your Lexus dealer pressure test the cap and check for leaks in the cooling systems.

■ Coolant selection

Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

U.S.A.: "Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Enabled: -31°F [-35°C])

Canada: "Toyota Super Long Life Coolant" is a mixture of 55% coolant and 45% deionized water. (Enabled: -44°F [-42°C])

For more details about coolant, contact your Lexus dealer.

⚠ CAUTION**■ When the hybrid system is hot**

Do not remove the coolant reservoir cap.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing burns or other injuries.

⚠ NOTICE**■ When adding the coolant**

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

■ If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

Radiator and condenser

Check the radiators and condenser, and clear any foreign objects.

If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by your Lexus dealer.

⚠ CAUTION**■ The radiators and condenser may be hot after driving**

Do not touch the radiators or condenser, as they may be hot and you may be burned.

Brake fluid

■ Checking fluid level



The brake fluid level should be between the “MAX” and “MIN” lines on the tank.

■ Adding fluid

Make sure to check the fluid type and prepare the necessary item.

Fluid type	FMVSS No.116 DOT 3 or SAE J1703 brake fluid
Item	Clean funnel

■ Brake fluid can absorb moisture from the air

Excess moisture in the fluid can cause a dangerous loss of braking efficiency. Use only newly opened brake fluid.

⚠ CAUTION

■ When filling the reservoir

Take care because brake fluid can harm your hands or eyes and damage painted surfaces.

If fluid gets in your eyes, flush your eyes with clean water immediately.

If you still experience discomfort, see a doctor.

NOTICE

■ If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious problem.

Washer fluid



If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

CAUTION

■ When refilling the washer fluid

Do not refill the washer fluid when the hybrid system is hot or operating, as the washer fluid contains alcohol and may catch fire if spilled on the engine etc.

NOTICE

■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.

■ Diluting washer fluid

Dilute washer fluid with water as necessary.

Refer to the freezing temperatures listed on the washer fluid tank.

4-3. Do-it-yourself maintenance

12-volt battery

■ Location



The 12-volt battery is located in the left-hand side of the luggage compartment.


■ Removing the 12-volt battery cover



Remove the 12-volt battery cover after removing the clip.

■ Exterior


Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

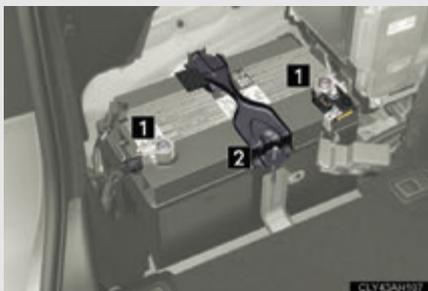

1 Terminals

2 Hold-down clamp

■ Installing the 12-volt battery cover

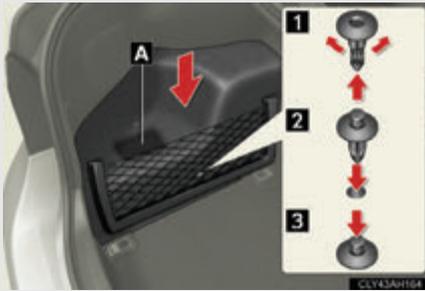

Install the 12-volt battery cover with the clip. Press down on the cover at position "A" to secure it.

■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ After recharging/reconnecting the 12-volt battery

In some cases, the hybrid system may not start. Follow one or both of the following procedures:

- After opening and closing the driver's door, wait 10 seconds then attempt to start the hybrid system. (If the system does not start first time, repeat the procedure.)
- With the shift lever in "P" and the "POWER" switch OFF, open and close any door, then attempt to start the hybrid system.

If the system will not start even after multiple attempts at both methods, contact your Lexus dealer.

CAUTION

■ Chemicals in the 12-volt battery

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

■ Where to safely charge the 12-volt battery

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is not sufficient ventilation.

■ How to recharge the 12-volt battery

Only perform a slow charge (5 A or less). The 12-volt battery may explode if charged at a quicker rate.

■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
Drink a large quantity of water or milk. Follow with milk of magnesia, beaten raw egg or vegetable oil. Get emergency medical attention immediately.

 **CAUTION****■ When replacing the 12-volt battery**

Use a 12-volt battery designed for the LS600hL. Failure to do so may cause gas (hydrogen) to enter the passenger compartment, causing a fire or explosion.

For replacement of the 12-volt battery, contact your Lexus dealer.

 **NOTICE****■ When recharging the 12-volt battery**

Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

4-3. Do-it-yourself maintenance

Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

■ Checking tires




- 1 New tread
- 2 Treadwear indicator
- 3 Worn tread

The location of treadwear indicators is shown by the “TWI” or “Δ” marks, etc., molded on the sidewall of each tire.

Check spare tire condition and inflation pressure if not rotated.

■ Tire rotation

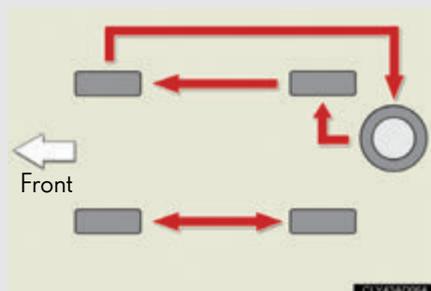

Rotate the tires in the order shown.

To equalize tire wear and extend tire life, Lexus recommends that tire rotation is carried out at the same interval as tire inspection.

Do not fail to initialize the tire pressure warning system after tire rotation.

■ Tire pressure warning system

Your Lexus is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise. (→P. 610, 617)

Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new tire pressure warning valve and transmitter ID codes must be registered in the tire pressure warning computer and tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by your Lexus dealer. (→P. 545)

Initializing the tire pressure warning system

■ **The tire pressure warning system must be initialized in the following circumstances:**

- When rotating the tires on vehicles differing with front and rear tire inflation pressures.
- When changing the tire inflation pressure by changing traveling speed.
- When changing the tire size.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the pressure benchmark.

■ How to initialize the tire pressure warning system


STEP 1 Park the vehicle in a safe place and turn the “POWER” switch OFF.

While the vehicle is moving, initialization is not performed.

STEP 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 655)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

STEP 3 Turn the “POWER” switch to ON mode.

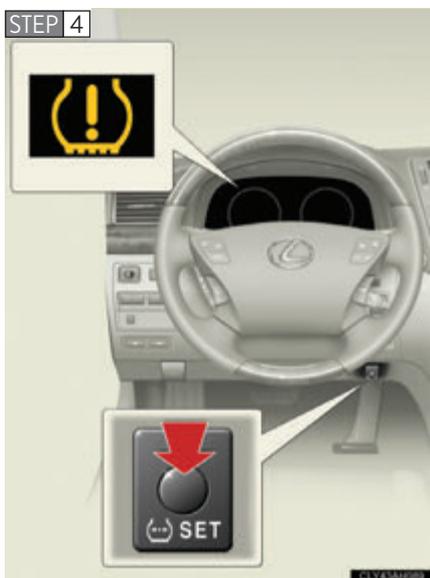

Push and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times and a message appears on the multi-information display.

STEP 5 Wait for a few minutes for the multi-information display to show the tire inflation pressures (5 tires), and then turn the “POWER” switch OFF.

Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code of tire pressure warning valve and transmitter. Have the ID code registered by your Lexus dealer.

■ When to replace your vehicle's tires

Tires should be replaced if:

- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric or bulges indicating internal damage.
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage.

If you are not sure, consult with your Lexus dealer.

■ Replacing tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 20 minutes, the tire pressure warning light comes on after blinking for 1 minute to indicate a system malfunction.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if they have seldom or never been used or damage is not obvious.

■ If the tread wears down below 0.16 in. (4 mm) on snow tires

The effectiveness of the tires as snow tires is lost.

■ Maximum load of tire

Check that the maximum load of the replacement tire is greater than 1/2 of the Gross Axle Weight Ratings (GAWR) of either the front axle or the rear axle, whichever is greater.



For the GAWR, see the Certification Label. For the maximum load of the tire, see the load limit at maximum cold tire inflation pressure mentioned on the sidewall of the tire. (→P. 661)

■ Tire types

1 Summer tires

Summer tires are high-speed performance tires best suited to highway driving under dry conditions. Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered roads or icy roads, the use of snow tires is recommended. When installing snow tires, be sure to replace all four tires.

2 All season tires

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions, as well as for use year round. All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

3 Snow tires

For driving on snow-covered roads or icy roads, we recommend using snow tires. If you need snow tires, select tires of the same size, construction and load capacity as the originally installed tires. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restriction. Snow tires should be installed on all wheels. (→P. 256)

■ Initializing the tire pressure warning system

Initialize the tire pressure warning system with the tire inflation pressure adjusted to the specified level.

■ If you push the tire pressure warning reset switch accidentally

If initialization is performed, adjust the tire inflation pressure to the specified level and initialize the tire pressure warning system again.

■ When initialization of the tire pressure warning system has failed

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by your Lexus dealer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not flash 3 times and the setting message does not appear on the multi-information display.
- After carrying out the initialization procedure, the tire pressure warning light blinks for 1 minute then stays on after driving for about 20 minutes.

■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

■ Tire pressure warning system certification

FCC ID: PAXPMV107J

FCC ID: HYQ13BCG

IC ID: 3729A-PMV107J

IC ID: 1551A-13BCG

► For vehicles sold in the U.S.A.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ Tire pressure warning system operation

The tire pressure warning system may not provide warning immediately if a tire bursts or if sudden air leakage occurs.

■ When inspecting or replacing tires

Observe the following precautions to prevent accidents. Failure to do so may cause damage to parts of the drive train, as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models, tread patterns or treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix radial, bias-belted, or bias-ply tires.
- Do not mix summer, all season and winter tires.

 CAUTION**■ Using tires of a different size**

Do not use tires of a different size from those equipped when the vehicle was new, as the front tire steering angle setting is designed for the original tire size. It is dangerous to use an incorrect wheel and tire combination as this may result in reduced vehicle stability.

■ When initializing the tire pressure warning system

Do not push the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

 NOTICE**■ Repairing or replacing tires, wheels and tire pressure warning valves and transmitters**

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

■ To avoid damaging the tire pressure warning valves and transmitters

Do not use liquid sealants on flat tires.

■ Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ If tire inflation pressures become low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

4-3. Do-it-yourself maintenance

Tire inflation pressure

■ Tire inflation pressure

The recommended cold tire inflation pressure and tire size are displayed on the tire and loading information label. (→P. 661)

► Type A



THE AIR GAUGE NUMBER			INFORMATION SUR LES PNEUS ET LE CHARGEMENT		
 TIRE INFLATION PRESSURE TOUTE LA RÉGION The combined weight of occupants and cargo should never exceed 400 kg or 800 lb.			NOMBRE DE PLACES ASSIÈGES TOTAL : 4 AVANT : 2, ARRÈRE : 2 Le poids total des occupants et du chargement ne doit jamais être supérieur à 800 kg ou 1 000 lb.		
TIRE	SIZE	COLD TIRE PRESSURE	PNEUS	DIMENSION	PRESSION DE CHAUD AIR À FROID
FRONT	XXXXXX	XXXPa,XXPSI	AVANT	XXXXXX	XXXPa,XXPSI
REAR	XXXXXX	XXXPa,XXPSI	ARRÈRE	XXXXXX	XXXPa,XXPSI
SPARE	XXXXXX	XXXPa,XXPSI	SECOURS	XXXXXX	XXXPa,XXPSI
SEE OWNER MANUAL FOR ADDITIONAL INFORMATION			VOIR LE PLUS RAPIDEMENT L'OM. LE MANUEL DU PROPRIÉTAIRE		

GV43MH7A

► Type B



WEIGHT CAPACITY (TONS & POUNDS) REAR X			CARGO AND LOAD CAPACITY (TONS & POUNDS) FRONT X		
The combined weight of occupants and cargo should never exceed 1000 kg or 2200 lb.			La somme total des occupants et du chargement ne doit jamais dépasser 1000 kg ou 2200 lb.		
TIRE	SIZE	LOAD TIRE PRESSURE	PNEU	DIMENSIONS	PRESSION DES PNEUS À FROID
FRONT	XXXX/XXXX	XXXXPa,XXPSI	AVANT	XXXX/XXXX	XXXXPa,XXPSI
REAR	XXXX/XXXX	XXXXPa,XXPSI	ARRIÈRE	XXXX/XXXX	XXXXPa,XXPSI
SPARE	XXXX/XXXX	XXXXPa,XXPSI	DE SECOURS	XXXX/XXXX	XXXXPa,XXPSI
SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION			VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS		

■ Inspection and adjustment procedure



- 1 Tire valve
- 2 Tire pressure gauge

STEP 1 Remove the tire valve cap.

STEP 2 Press the tip of the tire pressure gauge onto the tire valve.

STEP 3 Read the pressure using the graduations of the gauge.

STEP 4 If the tire inflation pressure is not within the recommended levels, adjust tire pressure.
If you add too much air, press the center of the valve to lower.

STEP 5 After completing the tire inflation pressure measurement and adjustment, apply soapy water to the valve and check for leakage.

STEP 6 Reinstall the tire valve cap.

■ Tire inflation pressure check interval

You should check tire inflation pressure every two weeks, or at least once a month. Do not forget to check the spare.

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency
- Reduced driving comfort and tire life
- Reduced safety
- Damage to the drive train

If a tire needs frequent refilling, have it checked by your Lexus dealer.

■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.
If your vehicle has been parked for at least 3 hours and has not been driven for more than 1 mile or 1.5 km, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.
The appearance of the tire can be misleading. In addition, tire inflation pressures that are even just a few pounds off can degrade ride and handling.
- Do not bleed or reduce tire inflation pressure after driving. It is normal for the tire inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight.
Passengers and luggage weight should be placed so that the vehicle is balanced.

CAUTION

■ Proper inflation is critical to save tire performance

Keep your tires properly inflated. Otherwise, the following conditions may occur and result in an accident causing death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Poor sealing of the tire bead
- Wheel deformation and/or tire separation
- A greater possibility of tire damage from road hazards

NOTICE

■ When inspecting and adjusting tire inflation pressure

Be sure to reinstall the tire valve caps.

Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps have been lost, replace them as soon as possible.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause loss of handling control.

■ Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and inset*.

Replacement wheels are available at your Lexus dealer.

*: Conventionally referred to as "offset".

Lexus does not recommend using:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

■ Aluminum wheel precautions

- Use only Lexus wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1000 miles (1600 km).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

■ When replacing wheels

The wheels of your Lexus are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advanced warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, the tire pressure warning valves and transmitters must be installed. (→P. 543)

 **CAUTION****■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

 **NOTICE****■ Replacing tire pressure warning valves and transmitters**

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by your Lexus dealer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at your Lexus dealer.
- Ensure that only genuine Lexus wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

4-3. Do-it-yourself maintenance

Air conditioning filter


The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

■ Front air conditioning filter


STEP 1 Set the air conditioning system to recirculated air mode.
(→P. 276, 284)

The air conditioning filter case cannot be removed with the system in outside air mode.


STEP 2 Turn the “POWER” switch OFF.

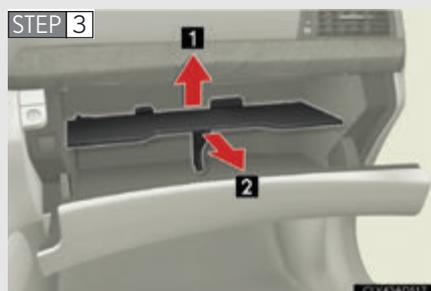


Open the glove box. Lift and remove the partition.

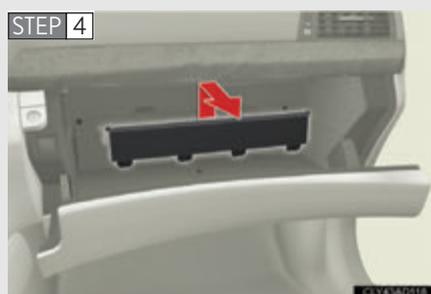

Remove the filter cover.

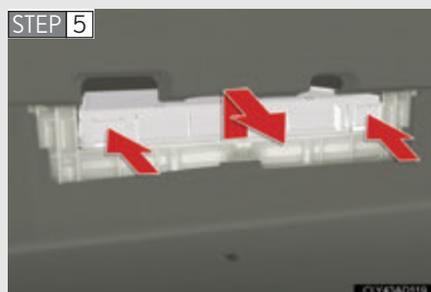

Remove the filter case.

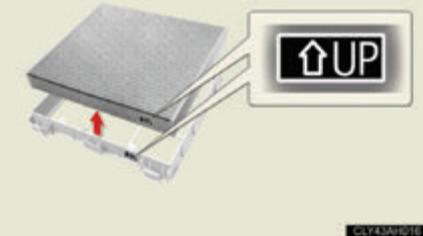STEP 6

Remove the air conditioning filter from the filter case and replace it with a new one.

The “↑UP” marks shown on the filter and the filter case should be pointing up.


STEP 7 Reset the air conditioning filter maintenance data. (→P. 558)

■ Rear air conditioning filter (if equipped)

STEP 1 Turn the “POWER” switch OFF.

STEP 2

Open the trunk lid. Remove the filter cover.

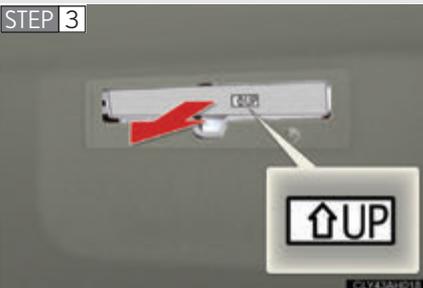STEP 3

Remove the air conditioning filter and replace it with a new one.

The “↑UP” mark shown on the filter should be pointing up.

■ Replacement interval for the front air conditioning filter

Inspect and replace the air conditioning filter when a message appears on the multi-information display. In dusty areas or areas with heavy traffic flow, early replacement may be required.

■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.

■ After changing the front air conditioning filter

The air conditioning filter maintenance data should be reset. Perform the following procedures:

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Press and hold  (on the air conditioning panel) for 4 seconds or more.

A buzzer will sound to indicate that the maintenance data has been successfully reset.

■ Rear air conditioning filter (if equipped)

If it is necessary to clean or replace the filter, contact your Lexus dealer.

■ Climate control seat filter

Filters are installed in the seats. When it is necessary to clean or replace the filters, contact your Lexus dealer.

NOTICE

■ When using the air conditioning system

Make sure that a filter is always installed.

Using the air conditioning system without a filter may cause damage to the system.

4-3. Do-it-yourself maintenance

Electronic key battery

Replace the battery with a new one if it is depleted.

■ You will need the following items:

- Flathead screwdriver
- Small Phillips-head screwdriver
- Lithium battery (CR1632)

■ Replacing the battery

STEP 1




Take out the mechanical key.

STEP 2



Remove the cover.

STEP 3

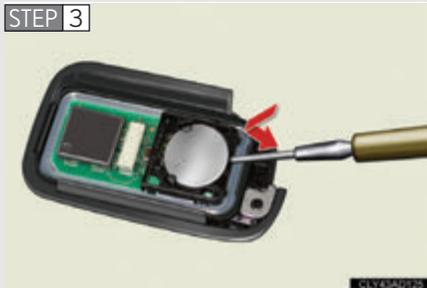

Remove the depleted battery.

Insert a new battery with the “+” terminal facing up.

■ If the electronic key battery is depleted

The following symptoms may occur:

- The smart access system with push-button start and wireless remote control will not function properly.
- The operational range is reduced.

■ Use a CR1632 lithium battery

- Batteries can be purchased at your Lexus dealer, jewelers, or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the local laws.

■ When the card key battery needs to be replaced (if equipped)

The battery for the card key is available only at Lexus dealers. Your Lexus dealer can replace the battery for you.

CAUTION

■ Removed battery and other parts

Keep away from children.

These parts are small and if swallowed by a child, they can cause choking.

NOTICE

■ For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands.
Moisture may cause the battery to rust.
- Do not touch or move any other components inside the remote control.
- Do not bend either of the battery terminals.

4-3. Do-it-yourself maintenance

Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

STEP 1 Turn the "POWER" switch OFF.

STEP 2 Remove the engine compartment cover (→P. 527) and the 12-volt battery cover (→P. 538).

STEP 3 Open the fuse box cover.

► Engine compartment (type A fuse box)



Push the tab in and lift the lid off.

► Engine compartment (type B fuse box)



Push the tab in and lift the lid off.

▶ Engine compartment (type C fuse box)



Push the tab in and lift the lid off.

▶ Driver's side instrument panel



Remove the lid.

▶ Passenger's side instrument panel




Remove the lid.

▶ Trunk (type A fuse box)




Remove the lid.

▶ Trunk (type B fuse box)

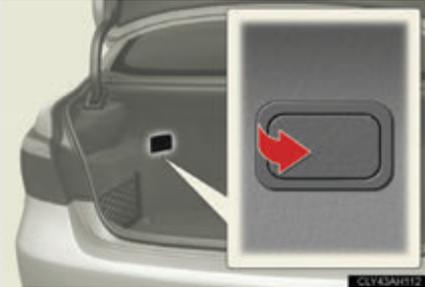

Remove the cover.

▶ Trunk (type C fuse box)

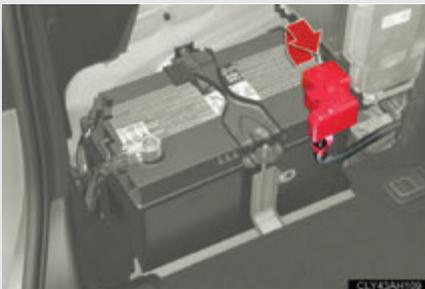

Remove the terminal cover.

STEP 4 After a system failure, see “Fuse layout and amperage ratings” for details about which fuse to check. (→P. 566)

STEP 5




Take out the pullout tool.

Only type A fuse can be removed using the pullout tool.

STEP 6 Check if the fuse has blown.

► Type A

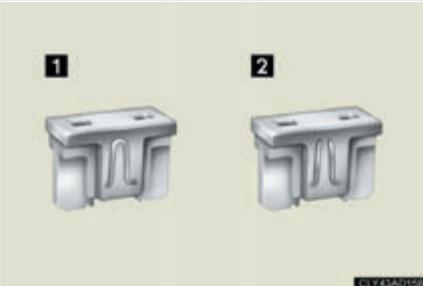


1 Normal fuse

2 Blown fuse

Replace it with one of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

► Type B

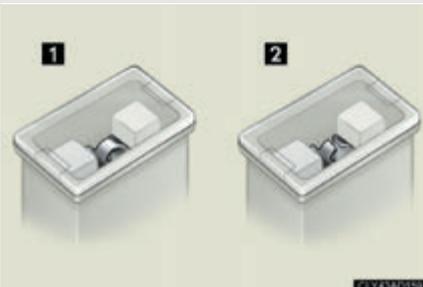


1 Normal fuse

2 Blown fuse

Replace it with one of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

▶ Type C

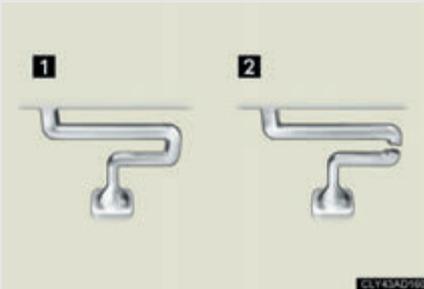


1 Normal fuse

2 Blown fuse

Contact your Lexus dealer.

▶ Type D

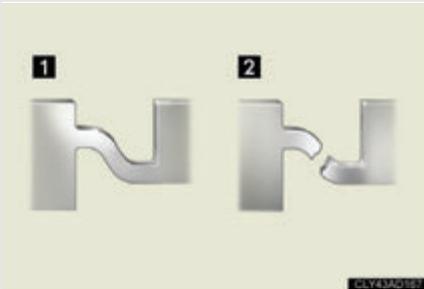


1 Normal fuse

2 Blown fuse

Contact your Lexus dealer.

Fuse layout and amperage ratings

■ Engine compartment (type A fuse box)

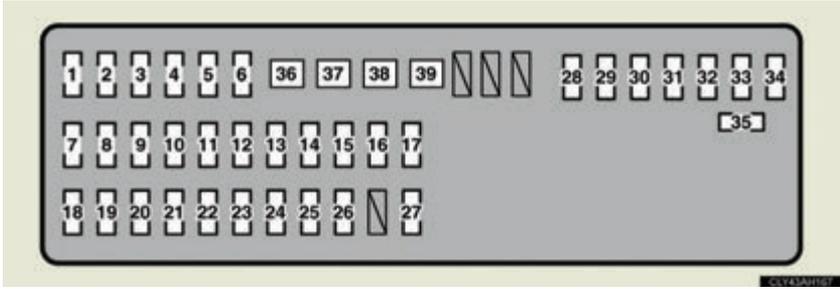


Fuse		Ampere	Circuit
1	DEICER	25 A	Windshield wiper de-icer
2	WIP	30 A	Windshield wiper
3	ABS MAIN 2	10 A	Brake system
4	IGCT 1	25 A	INV W/P
5	EPS ECU	10 A	EPS
6	FR CTRL BAT	30 A	Headlight high beams, horns
7	E/G RM-IG1-2	10 A	AFS, multiport fuel injection system/ sequential multiport fuel injection system, headlight cleaner, pre-collision system
8	E/G RM-IG1-1	10 A	Air conditioning system, EPS, electric cooling fans, AFS
9	H-LP LL	15 A	Headlight low beam (left)
10	ABS MAIN 1	10 A	Brake system
11	H-LP RL	15 A	Headlight low beam (right)
12	ETCS	10 A	Multiport fuel injection system/ sequential multiport fuel injection system

	Fuse	Ampere	Circuit
13	NV IR	10 A	Pre-collision system
14	IGN	10 A	Multipoint fuel injection system/ sequential multipoint fuel injection system, brake system, SRS airbag system
15	ECU-IG	10 A	Multipoint fuel injection system/ sequential multipoint fuel injection system, stop lights, hybrid system
16	D/C CUT 1	30 A	ECU-B, D MPX-B 1, DOME, D MPX-B 2
17	ECU-B	10 A	Headlight low beams
18	A/F	15 A	Multipoint fuel injection system/ sequential multipoint fuel injection system
19	EDU2	25 A	Multipoint fuel injection system/ sequential multipoint fuel injection system
20	FR CTRL ALT	20 A	Windshield washer, headlight cleaner, parking lights, side marker lights
21	EDU1	25 A	Multipoint fuel injection system/ sequential multipoint fuel injection system
22	RELIEF VLV	10 A	Fuel system
23	FR FOG	15 A	Front fog lights
24	A/C W/P	10 A	Air conditioning system
25	H-LP LVL	10 A	Discharge headlights, headlight high beams
26	P-J/B	10 A	P IG2, P RR-IG2


Fuse		Ampere	Circuit
27	INJ	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
28	D/C CUT 2	30 A	P MPX-B, RR MPX-B 1, RR MPX-B 2
29	IGCT2	25 A	IGCT2 NO.2, hybrid system
30	ABS MAIN3	10 A	Brake system
31	EFI MAIN2	25 A	EFI, EFI-B, multiport fuel injection system/sequential multiport fuel injection system
32	EFI MAIN	25 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
33	EFI	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
34	EFI-B	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
35	INV W/P	10 A	Hybrid system
36	ST	30 A	—
37	ABS MTR1	50 A	Brake system
38	ABS MTR2	50 A	Brake system
39	VVT	40 A	Multiport fuel injection system/ sequential multiport fuel injection system

■ Engine compartment (type B fuse box and C fuse box)

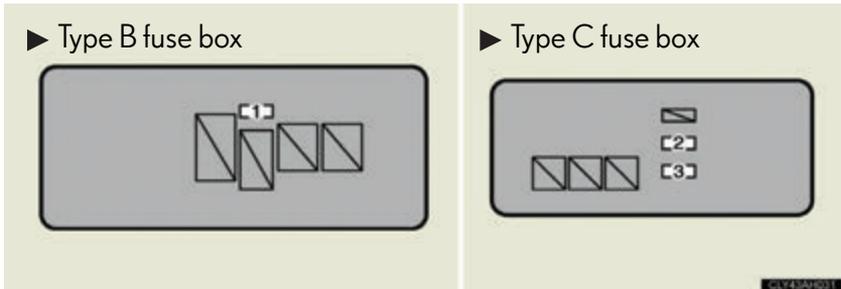

	Fuse	Ampere	Circuit
1	IGCT2 NO.2	10 A	IGCT 3, hybrid system
2	PTC HTR 3	25 A	PTC heater
3	PTC HTR 1	25 A	PTC heater


■ Driver's side instrument panel

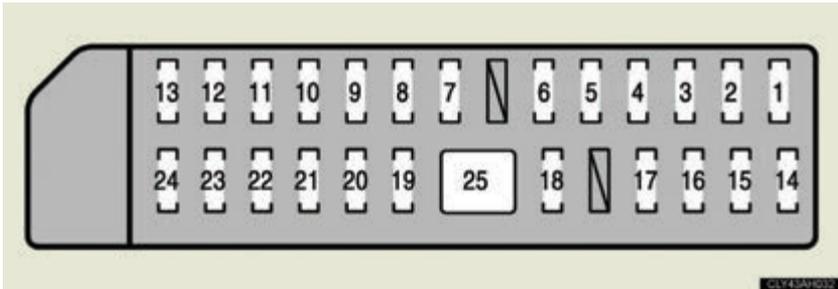

Fuse		Ampere	Circuit
1	D-IG1-3	10 A	Transmission, power door lock system, air conditioning system, brake system, rear window defogger, moon roof, main body ECU, pre-collision seat belt, electric parking brake, power outlet, climate control seat system, turn signal lights, active stabilizer suspension system
2	D-IG1-2	5 A	Cruise control system
3	D-IG1-4	15 A	Heated steering wheel
4	D-IG1-1	5 A	Front seat adjustment, tilt and telescopic steering column, pre-collision system, hybrid system
5	PWR OUTLET	15 A	Power outlet
6	D-ACC	5 A	Main body ECU
7	S/ROOF	30 A	Moon roof
8	TI&TE	30 A	Tilt and telescopic steering column
9	AM1	5 A	Main body ECU
10	OBD	10 A	On-board diagnosis system
11	D P/SEAT	30 A	Front seat adjustment

	Fuse	Ampere	Circuit
12	DS/HTR	20 A	Climate control seat system
13	DRR S/HTR	30 A	Climate control seat system
14	D MPX-B 1	10 A	Gauges and meters, front seat adjustment, tilt and telescopic steering column, power door lock system
15	DOME	10 A	Interior lights, clock
16	D MPX-B 2	10 A	Audio system
17	PANEL	10 A	Fuel filler door opener, power trunk lid, console box light, interior lights, coin holder light, glove box light, turn signal lights, electric parking brake, navigation system, power outlet, climate control seat system, odometer, trip meter, audio system, cool box, rear seat relaxation system
18	SECURITY	5 A	Smart access system with push-button start
19	STR LOCK	20 A	Tilt and telescopic steering column
20	D DOOR 2	10 A	Power door lock system
21	HAZ	10 A	Emergency flashers
22	DRR DOOR	25 A	Interior lights, door closer, power door lock system, power windows
23	D DOOR 1	25 A	Interior lights, outside rear view mirror, power door lock system, door closer, power windows, outside rear view mirror defogger
24	STOP	5 A	Stop lights
25	AMP	30 A	—


■ Passenger's side instrument panel

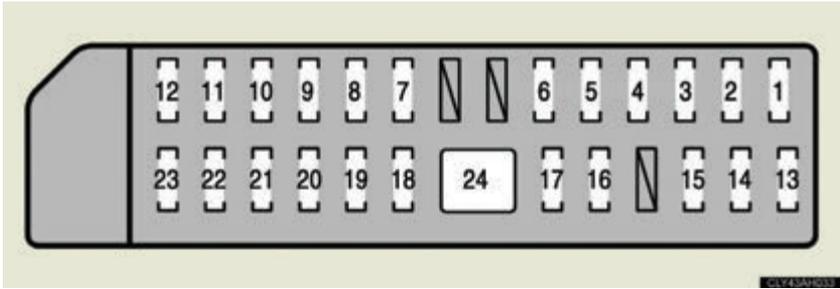

Fuse		Ampere	Circuit
1	P-IG1-2	5 A	Pre-collision system
2	P-IG1-3	5 A	VGRS
3	P-IG1-1	10 A	Navigation system, power door lock system, VDIM, air conditioning system, pre-collision seat belt, intuitive parking assist, tire pressure warning system
4	P-IG1-4	10 A	Climate control seat system, air conditioning system
5	P-CIG	15 A	Cigarette lighter
6	P-ACC	5 A	Navigation system, clock, intuitive parking assist
7	A/C	10 A	Air conditioning system
8	P S/HTR	20 A	Climate control seat system
9	P P/SEAT 2	30 A	Front seat adjustment
10	RR SEAT	30 A	Rear seat adjustment
11	P P/SEAT 1	30 A	Front seat adjustment
12	P RR S/HTR	30 A	Climate control seat system

Fuse		Ampere	Circuit
13	P IG2	5 A	Tilt and telescopic steering, smart access system with push-button start, gauges and meters
14	P RR-IG2	5 A	Lexus link system
15	P MPX-B	10 A	Power door lock system, front seat adjustment, VDIM, smart access system with push-button start, VGRS, hybrid system, intuitive parking assist, rear seat adjustment
16	AIR SUS	20 A	Electronically modulated air suspension system
17	AM2	5 A	Main body ECU
18	RADIO NO.1	20 A	Navigation system, Lexus link system
19	PMG	5 A	—
20	P-D/C CUT	5 A	Power windows, steering wheel switches
21	P DOOR 2	10 A	Power door lock system
22	P RR DOOR	25 A	Interior lights, power door lock system, door closer, power windows
23	P DOOR 1	25 A	Interior lights, outside rear view mirror, power door lock system, door closer, power windows, outside rear view mirror defogger
24	AMP	30 A	Audio system


■ Trunk (type A fuse box)

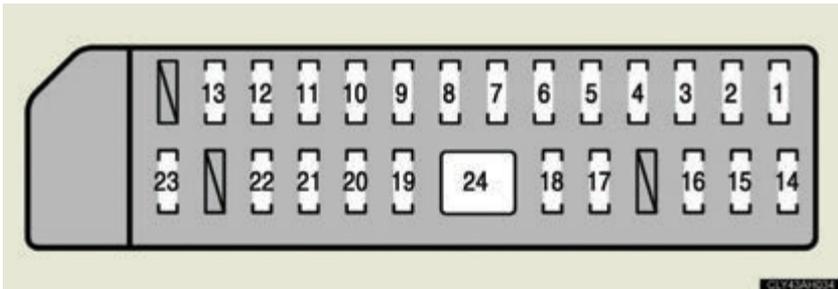

Fuse		Ampere	Circuit
1	RR-IG1-3	10 A	Climate control seat system
2	RR-IG1-4	10 A	Rear seat relaxation system
3	RR-IG1-2	10 A	Power door lock system, power trunk lid, cool box, air conditioning system
4	RR-IG1-1	5 A	Capacitor, electric parking brake, pre-collision seat belt, rear seat relaxation system, active stabilizer suspension system, hybrid system
5	RR-ACC	5 A	Audio system, rear seat entertainment system
6	RR-CIG	15 A	Cigarette lighter
7	AC100/115V	15 A	Power outlet
8	RL SEAT	30 A	Rear seat adjustment
9	B/ANC	10 A	Shoulder anchor
10	RR S/SHADE	10 A	Rear sunshade
11	PSB	30 A	Pre-collision seat belt
12	PTL	30 A	Power trunk lid
13	FUEL OPN	15 A	Fuel filler door opener, power trunk lid

Fuse		Ampere	Circuit
14	RR MPX-B 1	10 A	Power trunk lid, rear seat entertainment system
15	RR MPX-B 2	5 A	Power door lock system, rear seat adjustment, interior lights, trunk light, power trunk lid
16	IGCT 3	5 A	Hybrid system
17	BATT FAN	20 A	Battery cooling fan
18	B-FAN RLY	5 A	Battery cooling fan
19	RR ECU-B	5 A	Electric parking brake
20	ABS MAIN 4	10 A	Capacitor
21	STOP LP 1	10 A	Stop lights, back-up lights
22	STOP LP 2	10 A	High mounted stop light, stop lights
23	TAIL	5 A	Tail lights, license plate lights
24	E-PKB	30 A	Electric parking brake

■ Trunk (type B fuse box)

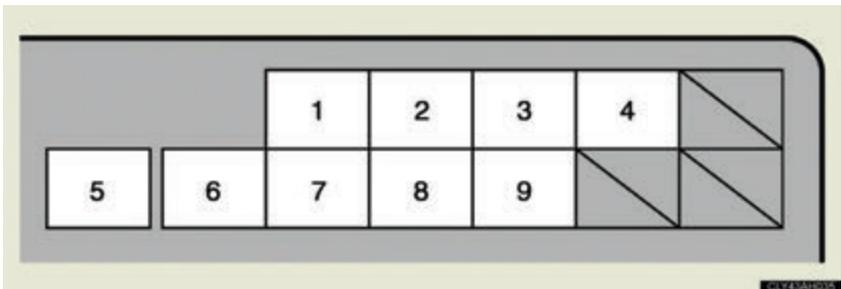

Fuse		Ampere	Circuit
1	E/G R/B DC/DC	160 A	AIR SUS, HTR, DEFOG, FAN NO.1, H-LP CLN, PTC HTR, E/G RM 1, P-J/B DC/DC

4-3. Do-it-yourself maintenance

Fuse		Ampere	Circuit
2	LUG-J/B DC/DC	80 A	PTL, RL SEAT, B/ANC, FUEL OPN, RR S/SHADE, PSB, RR-IG1-1, RR-IG1-2, RR-IG1-3, RR-IG1-4, RR-ACC, RR-CIG, AC100/115V, BATT FAN
3	LH-J/B DC/DC	80 A	OBD, D P/SEAT, TI&TE, AM1, D S/HTR, S/ROOF, D RR S/HTR, D-IG1-1, D-IG1-2, D-IG1-3, D-IG1-4, D-ACC, PWR OUTLET, PANEL
4	RR A/C	30 A	Air conditioning system
5	DC/DC	180 A	Hybrid system
6	E/G R/B BATT	160 A	VGRS, OIL PMP, EFI NO1, EFI, E/G RM B, P-J/B B, E/G RM B2
7	EPS	80 A	EPS, active stabilizer suspension system
8	LH-J/B BATT	40 A	D DOOR 1, D RR DOOR, HAZ, D DOOR 2, STR LOCK, STOP, SECURITY
9	LUG-J/B BATT	40 A	STOP LP 1, STOP LP 2, TAIL, B-FAN RLY, ABS MAIN 4, RR ECU-B, E-PKB

■ Trunk (type C fuse box)




	Fuse	Ampere	Circuit
1	MAIN	200 A	All electrical components

Fuse box near the power control unit



There are high voltage parts and wiring near the fuse box. For inspection and replacement of the fuses, contact your Lexus dealer.

■ Fuse layout and amperage ratings

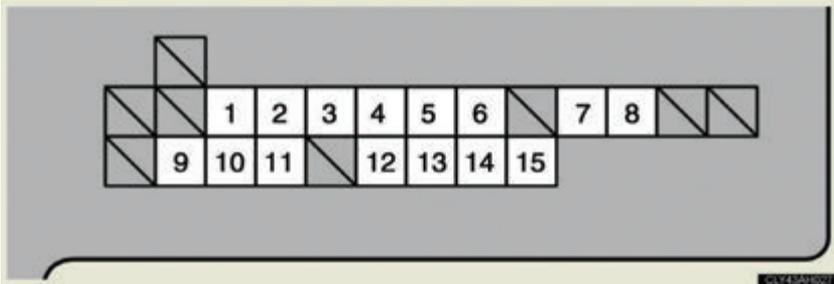

Fuse		Ampere	Circuit
1	P-J/B DC/DC	100 A	P P/SEAT 1, A/C, RR SEAT, P P/SEAT 2, P S/HTR, P RR S/HTR, P-IG1-1, P-IG1-2, P-IG1-3, P-IG1-4, P-ACC, P-CIG, AIR SUS
2	E/G RM1	80 A	DEICER, WIP, E/G RM-IG1-1, E/G RM-IG1-2, NV IR, FR FOG, FR CTRL ALT, ABS MTR1, A/C W/P, front fog lights
3	FAN NO.1	80 A	Electric cooling fans
4	PTC HTR	50 A	PTC HTR 1, PTC HTR 3
5	AIR SUS	40 A	Electronically modulated air suspension system
6	HTR	50 A	Air conditioning system
7	DEFOG	40 A	Rear window defogger
8	H-LP CLN	30 A	Headlight cleaner
9	E/G RMB	80 A	D/C CUT 1, FR CTRL BAT, EPS ECU, ABS MAIN 2, ABS MTR2, IGCT1, H-LP RL, H-LP LL, H-LP LVL, headlight low beams

Fuse		Ampere	Circuit
10	EFI	80 A	VVT, ETCS, ABS MAIN 1, EDU1, EDU2, A/F, RELIEF VLV, ECU-IG, IGN, INJ, P-J/B
11	OIL PMP	60 A	Transmission
12	EFI NO.1	40 A	EFI MAIN, EFI MAIN NO. 2
13	VGRS	40 A	VGRS
14	P-J/B B	40 A	P DOOR 1, P RR DOOR, AM2, RADIO NO.1, P-D/C CUT, P DOOR 2, AMP
15	E/G RM B2	40 A	ABS MAIN 3, IGCT2, D/C CUT 2

■ After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 584)
- If the replaced fuse blows again, have the vehicle inspected by your Lexus dealer.

■ If there is an overload in a circuit

The fuses are designed to blow before the entire wiring harness is damaged.

 CAUTION

■ **To prevent system breakdowns and vehicle fire**

Observe the following precautions.

Failure to do so may cause damage, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than indicated, or use any other object in place of a fuse.
- Always use a genuine Lexus fuse or equivalent.
Never replace a fuse with a wire, even as a temporary fix.
This can cause extensive damage or even fire.
- Do not modify fuses or the fuse box.

■ **Fuse box near the power control unit**

Never check or replace the fuses as there are high voltage parts and wiring near the fuse box.

Doing so may cause electric shock, resulting in death or serious injury.

 NOTICE

■ **Before replacing fuses**


Have the cause of electrical overload determined and repaired by your Lexus dealer.

4-3. Do-it-yourself maintenance

Headlight aim

■ Removing the engine compartment cover.
→P. 527

■ Vertical movement adjusting bolts
▶ Vehicles with discharge headlights

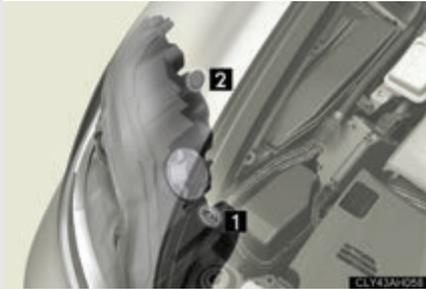

- 1 Adjustment bolt A
- 2 Adjustment bolt B

▶ Vehicles with LED headlights



- 1 Adjustment bolt A
- 2 Adjustment bolt B

■ Before checking the headlight aim

- STEP 1 Make sure the vehicle has a full tank of gas and the area around the headlight is not deformed.
- STEP 2 Park the vehicle on level ground.
- STEP 3 Sit in the driver's seat.
- STEP 4 Bounce the vehicle several times.

■ Adjusting the headlight aim

▶ Vehicles with discharge headlights


STEP 1



Turn bolt A in either direction using a Phillips-head screwdriver.

Remember the turning direction and the number of turns.

STEP 2

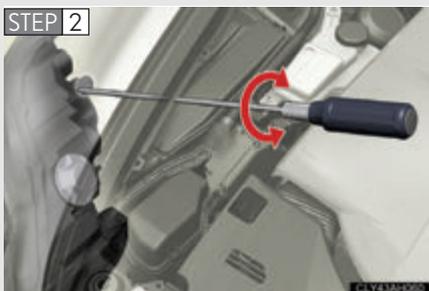

Turn bolt B the same number of turns and in the same direction as step 1 using a Phillips-head screwdriver.

If the headlight cannot be adjusted using this procedure, take the vehicle to your Lexus dealer to adjust the headlight aim.

▶ Vehicles with LED headlights


STEP 1



Turn bolt A in either direction using a Phillips-head screwdriver.

Remember the turning direction and the number of turns.

STEP 2

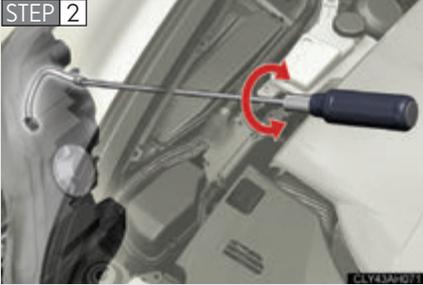

Turn bolt B the same number of turns and in the same direction as step 1 using a Phillips-head screwdriver.

If the headlight cannot be adjusted using this procedure, take the vehicle to your Lexus dealer to adjust the headlight aim.

4-3. Do-it-yourself maintenance

Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact your Lexus dealer.

For more information about replacing other light bulbs, contact your Lexus dealer.


■ Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 657)


■ Removing the engine compartment cover

→P. 527

■ Front bulb locations

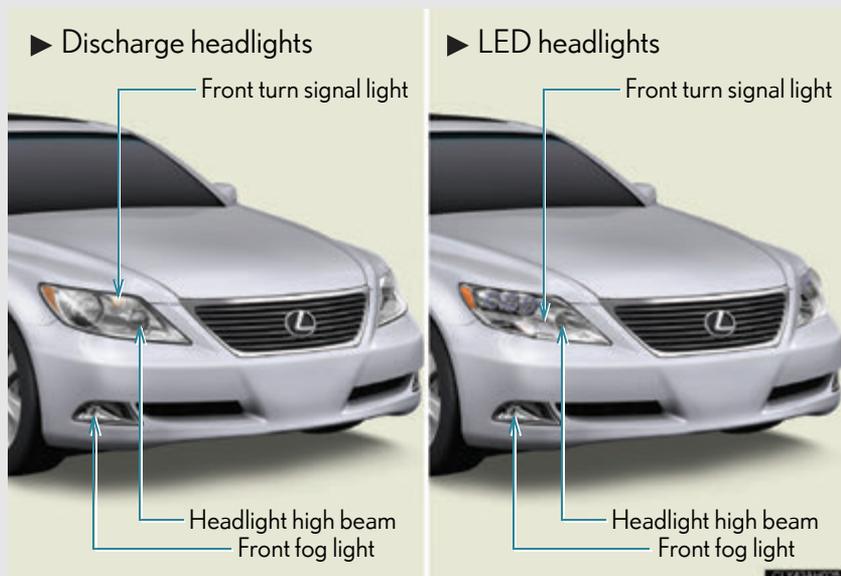

■ Rear bulb locations

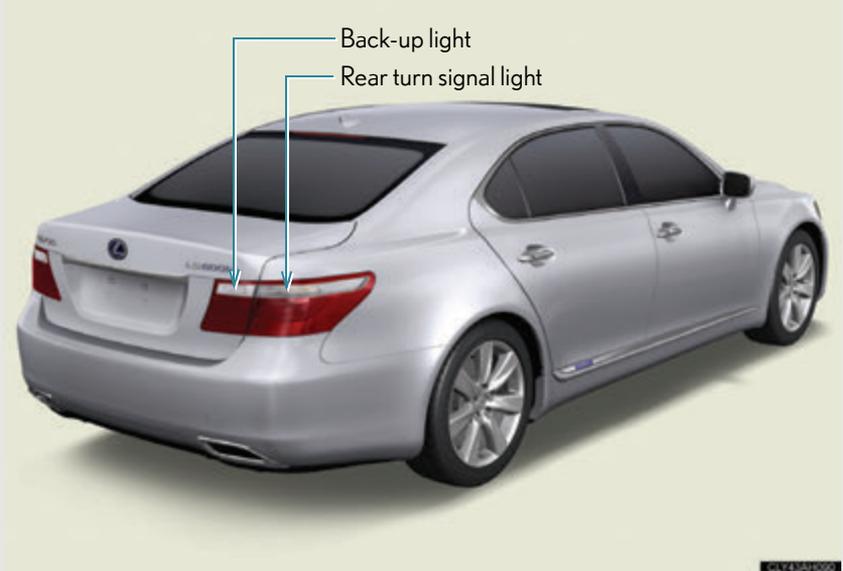

Replacing light bulbs

■ Headlight high beams


STEP 1 Before replacing the bulbs:

▶ Left side




Remove the securing bolt and move the washer fluid filler opening.

► Right side

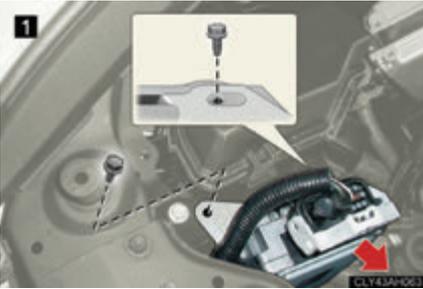

1 Remove the securing bolts and move the ECU unit.

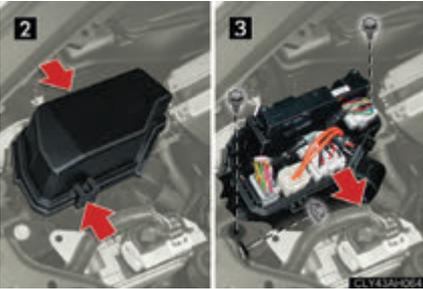


2 Remove the relay block cover.

3 Remove the securing bolts and nut, and move the relay block.



Turn the cover counterclockwise and remove it.

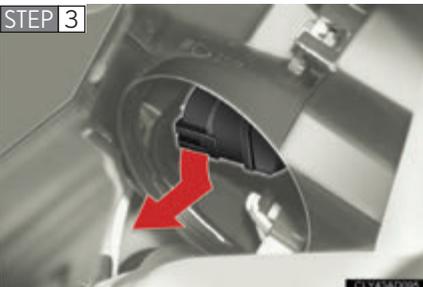

Turn the bulb base counterclockwise.

STEP 4



Unplug the connector while depressing the lock release.

■ Front fog lights

STEP 1



To allow enough working clearance, turn the steering wheel to the opposite side of the bulb to be replaced.


Remove the fender liner bolt and clips, and then remove the fender liner.

STEP 2




Turn the bulb base counterclockwise.

STEP 3

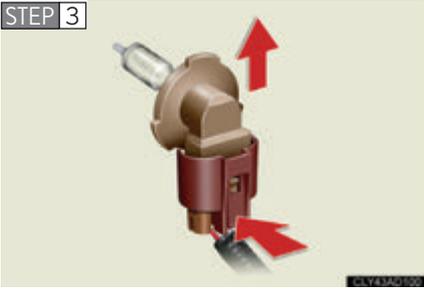

Unplug the connector while depressing the lock release.

STEP 4

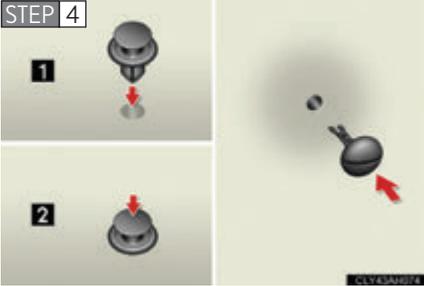

Install the bolt and clips.

■ Front turn signal lights (vehicles with discharge headlights)

STEP 1 Before replacing the bulbs:

► Left side




Remove the securing bolt and move the washer fluid filler opening.


► Right side



- 1** Remove the securing bolts and move the ECU unit.

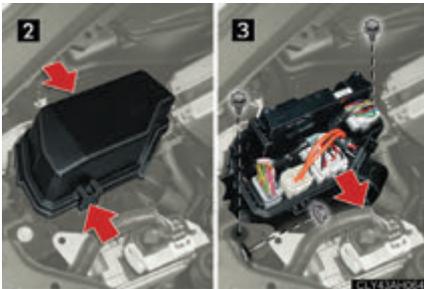

- 2** Remove the relay block cover.
3 Remove the securing bolts and nut, and move the relay block.

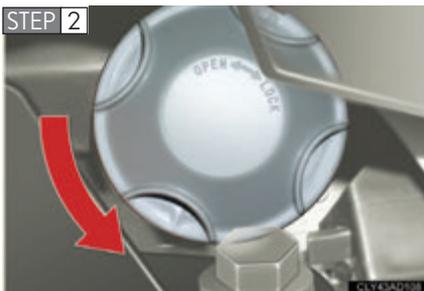


Turn the cover counterclockwise and remove it.



Turn the bulb base counterclockwise.

STEP 4

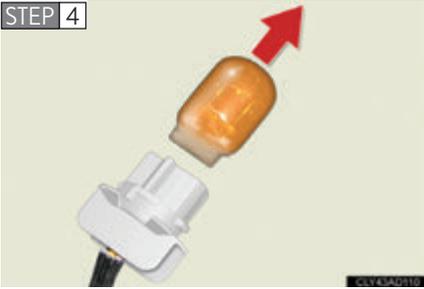

Remove the light bulb.

■ Front turn signal lights (vehicles with LED headlights)

STEP 1




Remove the fender liner bolt and clips, and then remove the fender liner.


STEP 2



Turn the back cover counterclockwise.

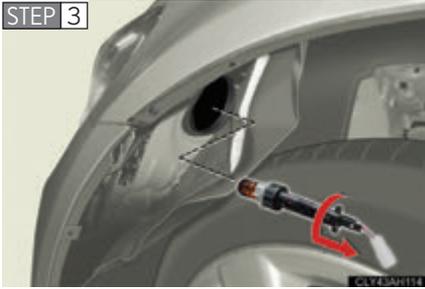


Disconnect the connector and turn the bulb socket counterclockwise.

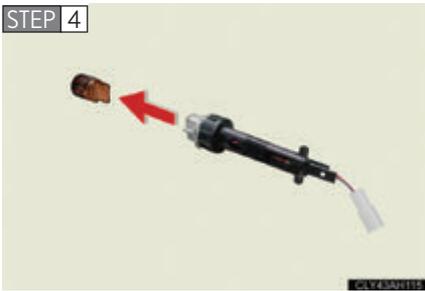


Remove the light bulb.

Back-up lights

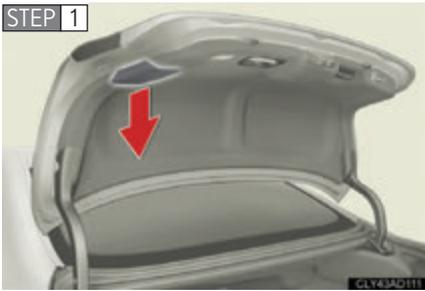


Open the trunk lid and remove the cover.

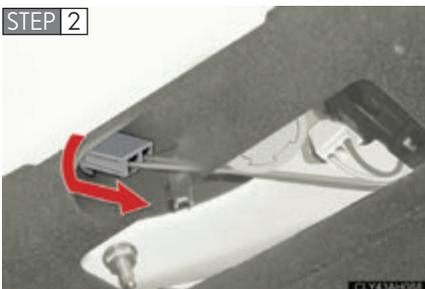

Turn the bulb base counterclockwise.


STEP 3

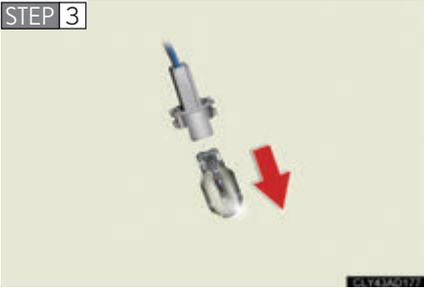

Remove the light bulb.


■ Rear turn signal lights

STEP 1

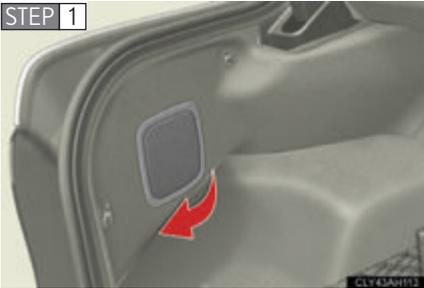


Open the trunk lid and remove the cover.

STEP 2

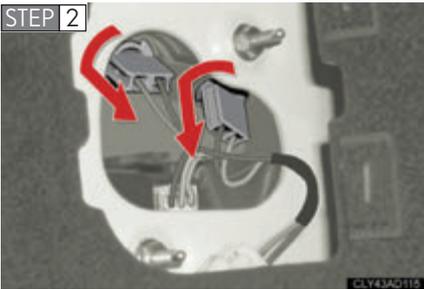

Turn the bulb bases counterclockwise.

STEP 3

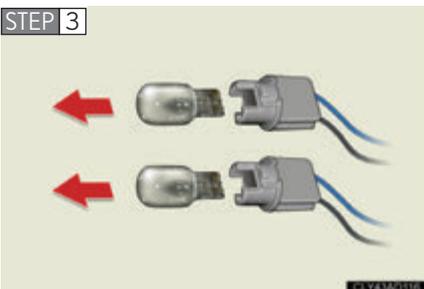

Remove the light bulbs.

■ Lights other than the above

If any of the lights listed below has burnt out, have it replaced by your Lexus dealer.

- Headlight low beams
- Parking lights
- Side marker lights
- Stop/tail lights
- High mounted stoplight
- License plate lights

■ Condensation build-up on the inside of the lens

Contact your Lexus dealer for more information in the following situations. Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction.

- Large drops of water are built up on the inside of the lens.
- Water has built up inside the headlight.

■ Discharge headlights (if equipped)

If voltage to the discharge bulbs is insufficient, the bulbs may not come on, or may go out temporarily. The discharge bulbs will come on when normal power is restored.

■ LED headlight low beams (if equipped), parking lights (vehicles with LED headlights only), side marker lights (vehicles with LED headlights only), stop/tail lights and high mounted stoplight

The headlight low beams, parking lights, side marker lights, stop/tail lights and high mounted stoplight consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Lexus dealer to have the light replaced.

 **CAUTION****■ Replacing light bulbs**

- Turn off the headlights. Do not attempt to replace the bulb immediately after turning off the headlights.
The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. Hold the bulb by the plastic or metal portion.
If the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.
- Do not attempt to take apart or repair the low beam discharge headlight bulbs, connectors, power supply circuits, or related components.
Doing so could result in electric shock and serious injury or death.

■ Discharge headlights (if equipped)

- Contact your Lexus dealer before replacing discharge headlights (including light bulbs).
- Do not touch the high-intensity discharge headlight's high voltage socket when the headlights are turned on.
An extremely high voltage of 20000 V will be discharged and could result in serious injury or death by electric shock.

■ To prevent damage or fire

Make sure bulbs are fully seated and locked.

5-1. Essential information

Emergency flashers..... 598
If your vehicle needs to be
towed 599
If you think something is
wrong 605
Event data recorder 606

**5-2. Steps to take in an
emergency**

If a warning light turns on
or a warning buzzer
sounds... 608
If a warning message is
displayed..... 617
If you have a flat tire..... 620
If the hybrid system will
not start 628
If the shift lever cannot
be shifted from “P” 630
If the parking brake cannot
be released 631
If you lose your keys 633
If the electronic key does
not operate properly..... 634
If the vehicle 12-volt battery
is discharged..... 637
If your vehicle overheats 640
If the vehicle becomes
stuck..... 644

5-1. Essential information

Emergency flashers

Use the emergency flashers if the vehicle malfunctions or is involved in an accident.



Press the switch to flash all the turn signal lights. To turn them off, press the switch once again.

NOTICE

■ To prevent battery discharge

Do not leave the emergency flashers on longer than necessary when the hybrid system is not operating.

5-1. Essential information

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Lexus dealer or a commercial towing service, using a lift-type truck or a flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

If the vehicle is damaged, use a towing dolly or flatbed truck.

Before towing

The following may indicate a problem with your transmission. Contact your Lexus dealer before towing.

- The hybrid system is operating, but the vehicle will not move.
- The vehicle makes an abnormal sound.

Emergency towing

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet(s). This should only be attempted on hard surfaced roads for short distances at low speeds.

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.



Towing eyelet

■ Before emergency towing

- Release the parking brake.
- Shift the shift lever to “N”.
- Turn the “POWER” switch to ACCESSORY (hybrid system off) or ON mode (hybrid system operating).

CAUTION

■ Caution while towing

- Use extreme caution when towing the vehicle.
Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelets and the cables or chains.
- If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

NOTICE

■ To prevent causing serious damage to the transmission and the transfer


Never tow this vehicle with any of the wheels in contact with the ground.
This may cause serious damage to the transmission and the transfer.

Installing towing eyelets



Remove the eyelet cover using a flathead screwdriver.

To protect the bodywork, place a rag between the screwdriver and the vehicle body, as shown in the illustration.

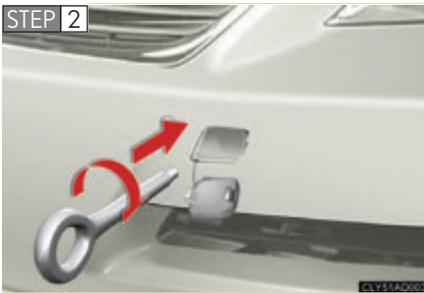

Insert the towing eyelet into the hole and tighten partially by hand.



Tighten down the towing eyelet securely using a wheel nut wrench.

■ Location of the emergency towing eyelet

→P. 620

⚠ CAUTION

■ Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.

If not securely installed, towing eyelets may come loose during towing. This may lead to accidents that cause serious injury or even death.

Towing with a sling-type truck




⚠ NOTICE

■ To prevent body damage

Do not tow with a sling-type truck, either from the front or rear.


Towing with a wheel-lift type truck

► From the front

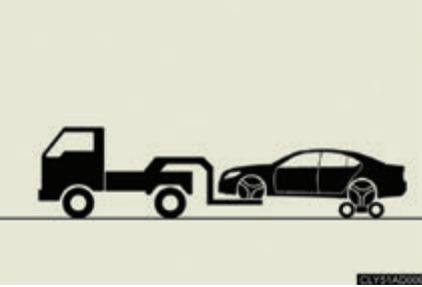

Use a towing dolly under the rear wheels.

► From the rear

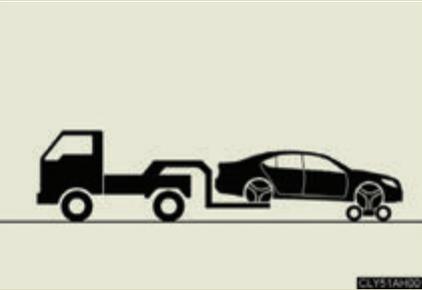

Use a towing dolly under the front wheels.

⚠ NOTICE


■ To prevent causing serious damage to the transmission and the transfer

Never tow this vehicle with any of the wheels in contact with the ground.


■ To prevent damaging the vehicle

- Do not tow the vehicle with the “POWER” switch OFF.
The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

Using a flatbed truck

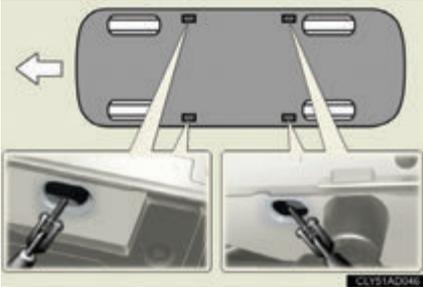

If your Lexus is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.

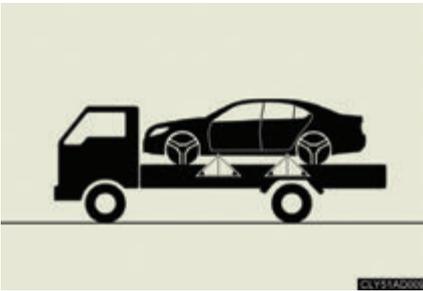

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Lexus dealer as soon as possible.

■ Visible symptoms

- Fluid leaks under the vehicle.
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature display indicates that the temperature is higher than normal. (→P.192)

■ Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system

■ Operational symptoms

- Engine missing, stumbling or running rough
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking.
- Vehicle pulls heavily to one side when driving on a level road.
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

5-1. Essential information

Event data recorder

Your vehicle has computers that monitor and control certain aspects of your vehicle. These computers assist in driving and maintaining optimal vehicle performance.

Besides storing data useful for troubleshooting, there is an event data recorder (EDR) that records data in a crash or a near car crash event.

In a crash or a near car crash event

The SRS airbag sensor assembly contains the EDR. In a crash or a near car crash event, this device may record some or all of the following information:

- Gasoline engine speed
- Whether the brake pedal was depressed or not
- Vehicle speed
- To what extent the accelerator pedal was depressed
- Position of the transmission shift lever
- Whether the driver and front passenger wore seat belts or not
- Driver's seat position
- SRS airbag deployment data
- SRS airbag system diagnostic data
- Front passenger's occupant classification

The information above is intended to be used for the purpose of improving vehicle safety performance. Unlike general data recorders, the EDR does not record sound data such as conversation between passengers.

Disclosure of the data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the leasing company for a leased vehicle) is obtained
- Officially requested by the police or other authorities
- Used as a defense for Lexus in a law suit
- Ordered by a court of law

However, if necessary, Lexus will:

- Use the data for research on Lexus vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing details of the vehicle owner, and only when it is deemed necessary
- Disclose summarized data cleared of vehicle identification information to a non-Lexus organization for research purposes

5-2. Steps to take in an emergency

If a warning light turns on or a warning buzzer sounds...

Calmly perform the following actions if any of the warning lights turn on or flash. If a light turns on or flashes, but then turns off, this does not necessarily indicate a malfunction in the system.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning light	Warning light/Details
 (U.S.A.)	Brake system warning light (red indicator) <ul style="list-style-type: none">• Low brake fluid
 (Canada)	<ul style="list-style-type: none">• Malfunction in the electronically controlled brake system

Stop the vehicle immediately.

The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning light	Warning light/Details
	Charging system warning light Indicates a malfunction in the vehicle's charging system

Have the vehicle inspected immediately.

Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer immediately.

Warning light	Warning light/Details
 (U.S.A.)  (Canada)	Malfunction indicator lamp Indicates a malfunction in: <ul style="list-style-type: none"> • The hybrid system; • The electronic engine control system; • The electronic throttle control system; or • The electronic transmission control system
	SRS warning light Indicates a malfunction in: <ul style="list-style-type: none"> • The SRS airbag system; or • The seat belt pretensioner system
 (U.S.A.)  (Canada)	ABS warning light Indicates a malfunction in: <ul style="list-style-type: none"> • The ABS; or • The brake assist system
	Brake system warning light (yellow indicator) Indicates a malfunction in: <ul style="list-style-type: none"> • The regenerative brake system; • The electronically controlled brake system; or • The electric parking brake
	Electric power steering system warning light Indicates a malfunction in the EPS (Electric Power Steering) system
	Pre-collision system warning light (if equipped) Indicates a malfunction in the pre-collision system

■ **If the malfunction indicator lamp comes on while driving**

First check the following:

- Is the fuel tank empty?
If it is, fill the fuel tank immediately.
- Is the fuel tank cap loose?
If it is, tighten it securely.

The light will go off after taking several driving trips.

If the light does not go off even after several trips, contact your Lexus dealer as soon as possible.

■ **Electric power steering warning light**

When the voltage is low or drops, the power steering warning light may come on.

⚠ CAUTION

■ **When the power steering warning light comes on**

The steering wheel may become extremely heavy.

If the steering wheel becomes heavier than usual when operating, firmly hold and operate it using more force than usual.

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light turns off.

Warning light	Warning light/Details	Correction procedure
	<p>Open door warning light (warning buzzer)*¹ Indicates that a door or the trunk is not fully closed</p>	<p>Check that all doors and the trunk are closed.</p>
 In the fuel gauge	<p>Low fuel level warning light Indicates remaining fuel is approximately 3.4 gal. (13 L, 2.8 Imp. gal.) or less</p>	<p>Refuel the vehicle.</p>

Warning light	Warning light/Details	Correction procedure
	Driver's seat belt reminder light (warning buzzer)*2 Warns the driver to fasten his/her seat belt	Fasten the seat belt.
	Front passenger's seat belt reminder light (warning buzzer)*2 Warns the front passenger to fasten his/her seat belt	Fasten the seat belt.
	Tire pressure warning light	
	When the light comes on: Low tire inflation pressure.	Adjust the tire inflation pressure.
	When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system	Have the system checked by your Lexus dealer.
	High coolant temperature warning light Indicates high engine coolant temperature	→P. 640
	Master warning light A buzzer sounds and the warning light comes on or flashes to indicate that the master warning system has detected a malfunction.	→P. 617

*1: Open door warning buzzer:

The open door warning buzzer sounds to alert one or more of the doors is not fully closed (with the vehicle having reached a speed of 3 mph [5 km/h]).

*2: Driver's and front passenger's seat belt reminders buzzer:

The driver's and front passenger's seat belt reminders sound to alert the driver and front passenger that his or her seat belt is not fastened. The buzzer sounds intermittently for 10 seconds after the vehicle has reached a speed of at least 12 mph (20 km/h). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 20 more seconds.

■ Front passenger detection sensor and passenger seat belt reminder

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash, even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ When the tire pressure warning light comes on

Check the tire inflation pressure and adjust to the appropriate level. Pushing the tire pressure warning reset switch does not turn off the tire pressure warning light.

■ The tire pressure warning light may turn on due to natural causes

The tire pressure warning light may turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

■ When a tire is replaced with a spare tire

The spare tire is also equipped with the tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, even though the flat tire is replaced with the spare tire, the tire pressure warning light does not turn off. Replace the spare tire with the repaired tire and adjust the proper tire inflation pressure. The tire pressure warning light will turn off after a few minutes.

■ **If the tire pressure warning system is inoperative**

The tire pressure warning system will be disabled in the following conditions:
(When the condition becomes normal, the system will work properly.)

- If tires not equipped with tire pressure warning valves and transmitters are used
- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer
- If the tire inflation pressure is 73 psi (500 kPa, 5.1 kgf/cm² or bar) or higher

The tire pressure warning system may be disabled in the following conditions:
(When the condition becomes normal, the system will work properly.)

- If electronic devices or facilities using similar radio wave frequencies are nearby
- If a radio set at similar frequencies is in use in the vehicle
- If there is a lot of snow or ice on the vehicle, in particular around the wheels or wheel housings
- If non-genuine Lexus wheels are used (Even if you use Lexus wheels, the tire pressure warning system may not work properly with some types of tires.)
- If tire chains are used
- If the spare tire is in a location subject to poor radio wave signal reception
- If a large metallic object which can interfere with signal reception is put in the trunk

■ **If the tire pressure warning light comes on after blinking for 1 minute frequently**

If the tire pressure warning light comes on after blinking for 1 minute frequently when the "POWER" switch is turned to ON mode, have it checked by your Lexus dealer.

■ **Customization that can be configured at Lexus dealer**

The vehicle speed linked seat belt reminder buzzer can be disabled.
(Customizable features →P. 672)

 **CAUTION**

■ **If the tire pressure warning light comes on**

Be sure to observe the following precautions. Failure to do so could cause loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If the tire is flat, change to the spare tire and have the flat tire repaired by the nearest Lexus dealer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

■ **If a blowout or sudden air leakage should occur**

The tire pressure warning system may not activate immediately.

 **CAUTION****■ Maintenance of the tires**

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label (tire and loading information label). (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label [tire and loading information label], you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS-tire pressure warning system) that illuminates a low tire pressure telltale (tire pressure warning light) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale (tire pressure warning light) illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS (tire pressure warning system) is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale (tire pressure warning light).

Your vehicle has also been equipped with a TPMS (tire pressure warning system) malfunction indicator to indicate when the system is not operating properly. The TPMS (tire pressure warning system) malfunction indicator is combined with the low tire pressure telltale (tire pressure warning light). When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS (tire pressure warning system) malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS (tire pressure warning system) from functioning properly. Always check the TPMS (tire pressure warning system) malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS (tire pressure warning system) to continue to function properly.

 NOTICE

■ **Precaution when installing a different tire**

When a tire of a different specification or maker is installed, the tire pressure warning system may not operate properly.

5-2. Steps to take in an emergency If a warning message is displayed

The multi-information display shows warnings of system malfunctions, incorrectly performed operations, or shows messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.



1 Master warning light

The master warning light comes on or flashes when a message is being shown on the multi-information display.

2 Multi-information display

If any of the warning messages is shown again after its correction procedure has been performed, contact your Lexus dealer.

Messages and warnings

The warning lights and warning buzzers operate as follows depending on the content of the message. If a message indicates the need for inspection by a dealer, have the vehicle inspected by your Lexus dealer immediately.

	System warning light	Warning buzzer*	Warning
Comes on	—	Sounds	Indicates an important situation, such as when a system related to driving is malfunctioning or that danger may result if the correction procedure is not performed
—	Comes on or flashes	Sounds	Indicates an important situation, such as when the system shown on the multi-information display may be malfunctioning
Flashes	—	Sounds	Indicates a situation, such as when damage to the vehicle or danger may result
Comes on	—	Does not sound	Indicates a condition, such as malfunction of electrical components, their condition, or indicates the need for maintenance
Flashes	—	Does not sound	Indicates a situation, such as when an operation has been performed incorrectly, or indicates how to perform an operation correctly

*: A buzzer sounds the first time a message is shown on the multi-information display.

■ System warning lights

The master warning light does not come on or flash in the following cases. Instead, a separate system warning light will come on or flash along with the message shown on the multi-information display.

- Malfunction of the AFS (Adaptive Front-lighting System)
The “AFS OFF” indicator light flashes. (→P. 196)
- Malfunction of the brake system
The brake system warning light (red indicator) comes on. (→P. 608)
- Malfunction of the regenerative brake system, electronically controlled brake system or electric parking brake
The brake system warning light (yellow indicator) comes on. (→P. 609)
- Malfunction of the ABS
The ABS warning light comes on. (→P. 609)
- Malfunction of the charging system
The charging system warning light comes on. (→P. 608)
- High engine coolant temperature
The high coolant temperature warning light comes on or flashes. (→P. 610)

■ If “Hybrid System Overheat” is shown

→P. 641

■ If the low fuel level warning light comes on and “Check Hybrid System” is shown

→P. 38


5-2. Steps to take in an emergency If you have a flat tire

Remove the flat tire and replace it with the spare tire provided.

■ Before jacking up the vehicle

- Stop the vehicle on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to “P”.
- Stop the hybrid system.
- Turn on the emergency flashers.

■ Location of the spare tire, jack and tools

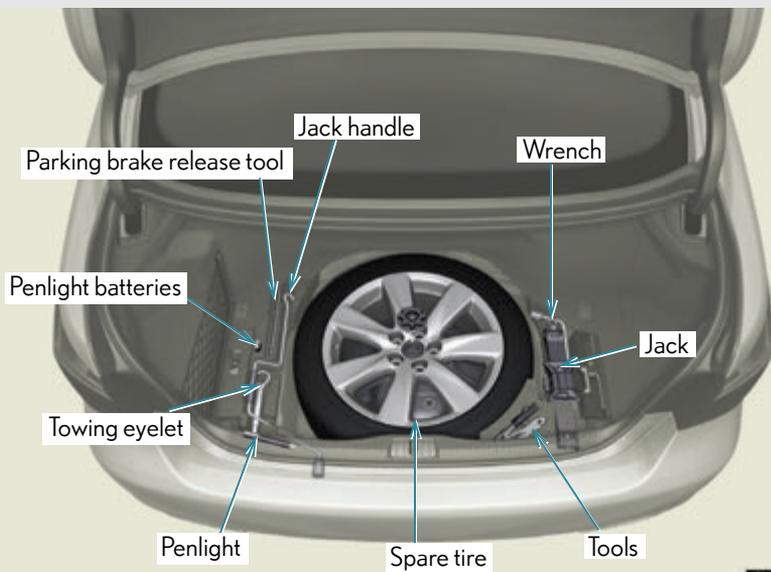

Penlight

The vehicle is equipped with a penlight, located inside the trunk. The penlight is provided in case it is necessary to perform an unexpected service operation at night, such as installation of the spare tire.



- 1 Turn the top portion to remove it.
- 2 Insert batteries.
- 3 Install the top portion.
- 4 On/off

Taking out the jack and spare tire



Lift up the hook of the panel on the trunk floor.



Secure the panel using the hook provided.


5-2. Steps to take in an emergency

STEP 3



Remove the tool tray.

STEP 4

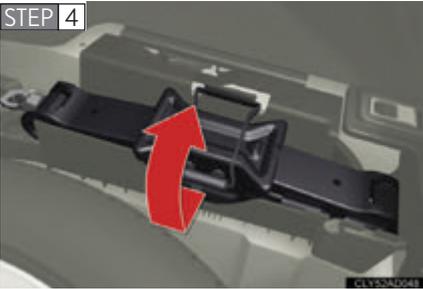

Remove the jack after removing the hook.

STEP 5




Loosen the center fastener that secures the spare tire.

If the center fastener cannot be turned by hand, use the wrench that is stored in the trunk. (To secure the tire, tighten the center fastener by hand. Do not use the wrench or other tools.)

Replacing a flat tire

STEP 1

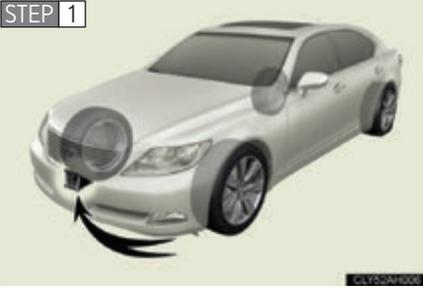

Chock the tires.


Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire

STEP 2



Slightly loosen the wheel nuts (one turn).

STEP 3

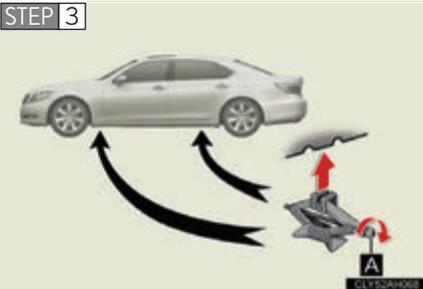

Turn the tire jack portion "A" by hand until the notch of the jack is in contact with the jack point.

5-2. Steps to take in an emergency

STEP 4



Raise the vehicle until the tire is slightly raised off the ground.

STEP 5




Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

Installing the spare tire


STEP 1

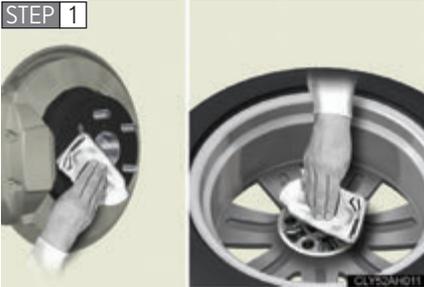

Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, and the tire may come off the vehicle.

STEP 2

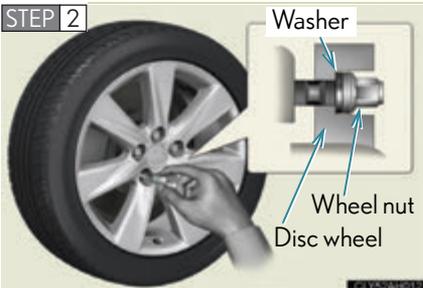

Install the spare tire and loosely tighten each wheel nut by hand to approximately the same amount.


Turn the lug nuts until the washers come into contact with the wheel.

STEP 3



Lower the vehicle.

STEP 4

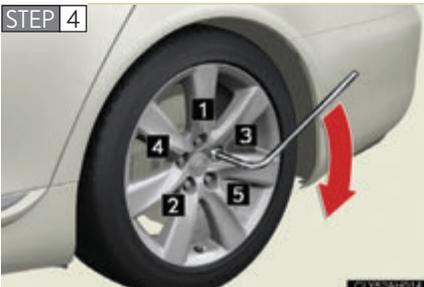

Firmly tighten each nut two or three times in the order shown in the illustration.

Tightening torque:
103.3 ft•lbf (140 N•m, 14.3 kgf•m)

STEP 5 Stow the flat tire, tire jack and all tools.

■ **After completing the tire change**

The tire pressure warning system must be reset. (→P. 543)

 **CAUTION**

■ **Using the tire jack**

Improper use of the tire jack may lead to death or serious injuries due to the vehicle suddenly falling off the jack.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Always check that the tire jack is securely set to the jack point.
- Do not put any part of your body under the vehicle supported by a jack.
- Do not start or run the hybrid system while your vehicle is supported by the jack.
- Do not raise the vehicle while someone is in it.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- Be sure to turn off the height control and stop the hybrid system.

Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle may be injured.

 **CAUTION****■ Replacing a flat tire**

Observe the following precautions to reduce the risk of death or serious injury:

- Never use oil or grease on the wheel bolts or wheel nuts.
Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
- Have the wheel nuts tightened with a torque wrench to 103.3 ft•lbf (140 N•m, 14.3 kgf•m) as soon as possible after changing wheels.
Failure to follow these precautions could cause the nuts to loosen and the wheel may fall off, which could lead to an accident causing death or serious injury.

 **NOTICE****■ Do not drive the vehicle with a flat tire.**

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

■ When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact your Lexus dealer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

■ To avoid damaging the tire pressure warning valves and transmitters

Do not use liquid sealants on flat tires.

5-2. Steps to take in an emergency

If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

■ **The hybrid system will not start, even though the correct starting procedure is being followed. (→P. 169)**

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P. 634)
- There may be a malfunction in the immobilizer system. (→P. 117)
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P. 629)

■ **The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.**

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 637)
- The 12-volt battery terminal connections may be loose or corroded.

■ **The interior lights and headlights do not turn on, or the horn does not sound.**

One of the following may be the cause of the problem:

- One or both of the 12-volt battery terminals may be disconnected.
- The 12-volt battery may be discharged. (→P. 637)

Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the “POWER” switch is functioning normally:

STEP 1 Set the parking brake.

STEP 2 Put the shift lever in “P”.

STEP 3 Turn the “POWER” switch to ACCESSORY mode.

STEP 4 Press and hold the “POWER” switch about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

5-2. Steps to take in an emergency

If the shift lever cannot be shifted from “P”

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by your Lexus dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted:

STEP 1 Set the parking brake.

STEP 2 Turn the “POWER” switch to ACCESSORY mode.


STEP 3 Depress the brake pedal.

STEP 4



Pry the cover up with a flathead screwdriver or equivalent.

STEP 5

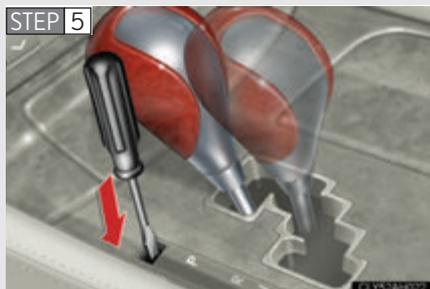

Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

5-2. Steps to take in an emergency

If the parking brake cannot be released

In the event that the 12-volt battery is discharged or switch operation does not release the parking brake, the parking brake can be released manually using the procedure below. This procedure should be performed only if necessary, such as in an emergency.


If the switch cannot be operated even when the 12-volt battery is normal, the parking brake system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ Before releasing the parking brake manually

- Shift the shift lever to "P".
- Turn the "POWER" switch OFF.
- Check that the parking brake indicator is off.
- Check the tires.

Releasing the parking brake manually


STEP 1

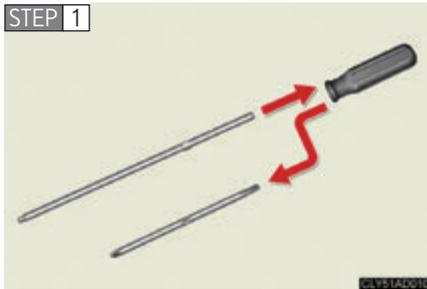


Take out the parking brake release tool and the screwdriver from the trunk. (→P. 620)

Install the parking brake release tool into the screwdriver handle.

STEP 2 Take out the spare tire. (→P. 620)

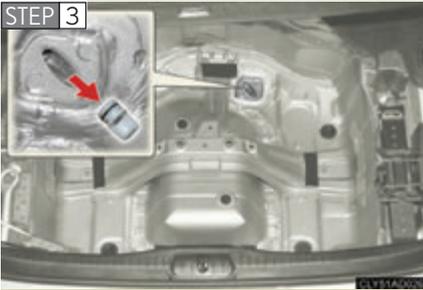

Remove the plug.

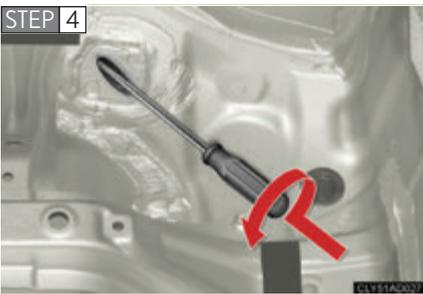

Insert the tool and press it down firmly while turning it counter-clockwise until it stops.

■ Manual operation of the parking brake

The parking brake cannot be set manually.

⚠ CAUTION

■ When releasing the parking brake manually

- Shift the shift lever to "P", turn the "POWER" switch OFF and chock the tires. Failure to do so may cause the vehicle to move, resulting in an accident.
- Turn the "POWER" switch OFF and check that the parking brake indicator is off. Failure to do so may cause the system to operate and turn the parking brake release tool that is inserted, resulting in an injury.

5-2. Steps to take in an emergency

If you lose your keys

New genuine Lexus keys can be made by your Lexus dealer using one of the other keys and the key number stamped on your key number plate.

5-2. Steps to take in an emergency

If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P. 50) or the electronic key cannot be used because the battery is depleted, the smart access system with push-button start and wireless remote control cannot be used. In such cases, the doors and trunk can be opened or the hybrid system can be started by following the procedure below.

Locking and unlocking the doors, unlocking the trunk and key linked functions

► Doors



Remove the cover on the driver's door handle using the mechanical key (→P. 42) in order to perform the following operations:

- 1 Locks all doors
- 2 Closes the windows (turn and hold)

The moon roof will also close.

- 3 Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.

- 4 Opens the windows (turn and hold)

The moon roof will also open.

Return the cover to the original position after use.



► Trunk



Turn the mechanical key clockwise to open.

Changing “POWER” switch modes and starting the hybrid system

STEP 1 Ensure that the shift lever is in “P” and apply the brakes.



Touch the Lexus emblem side of the electronic key to the “POWER” switch.



If any of the doors is opened or closed after the key was touched to the switch to start the vehicle, an alarm will sound to indicate that the start function cannot detect the key.

STEP 3 To change “POWER” switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the “POWER” switch. Modes can be changed each time the switch is pressed. (→P. 170)

To start the hybrid system: Press the “POWER” switch within 10 seconds after the buzzer sounds, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

■ Stopping the hybrid system

Shift the shift lever to “P” and press the “POWER” switch as you normally do when stopping the hybrid system.

■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 559)

5-2. Steps to take in an emergency

If the vehicle 12-volt battery is discharged

The following procedures may be used to start the hybrid system if the vehicle's 12-volt battery is discharged.


You can call your Lexus dealer or qualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your Lexus following the steps below.

STEP 1 Open the trunk lid and remove the 12-volt battery cover.
(→P. 538)

In the event that the trunk opener cannot be used, use the mechanical key to open the trunk. (→P. 634)

STEP 2

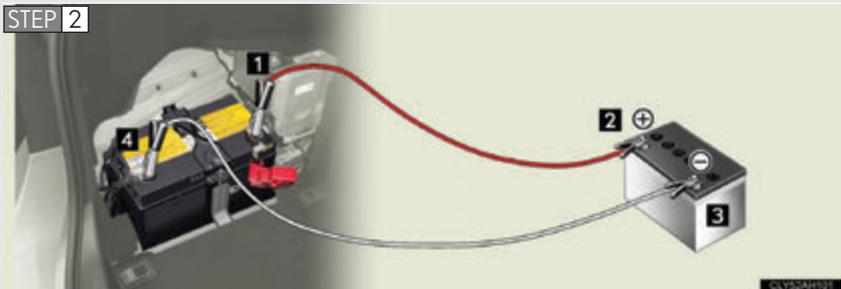

Connect the jumper cables.

- 1** Positive (+) battery terminal on your vehicle
- 2** Positive (+) battery terminal on the second vehicle
- 3** Negative (-) battery terminal on the second vehicle
- 4** Negative (-) battery terminal on your vehicle

STEP 3 Start the engine of the second vehicle. Increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.

STEP 4 Open and close any of the doors with the "POWER" switch OFF.

STEP 5 Maintain the engine speed of the second vehicle and turn the "POWER" switch to ON mode, then start the hybrid system.

STEP 6 Make sure the “READY” indicator comes on. If the indicator does not come on, contact your Lexus dealer.

STEP 7 Once the hybrid system has started, remove the jumper cables in the exact reverse order in which they were connected.

Once the hybrid system starts, have the vehicle inspected at your Lexus dealer as soon as possible.

■ Starting the hybrid system when the 12-volt battery is discharged

The hybrid system cannot be started by push-starting.

■ Avoiding a discharged 12-volt battery

- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ When the 12-volt battery is removed or discharged

The hybrid system may not start. (→P. 539)

 **CAUTION****■ Avoiding 12-volt battery fires or explosions**

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal.
- Do not allow the ends of the jumper cable used for the “+” terminals to come into contact with any other parts or metal surface in the area, such as brackets or unpainted metal.
- Do not allow the “+” and “-” terminals of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

■ 12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.
Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.

 **NOTICE****■ When handling jumper cables**

Be careful that the jumper cables do not become tangled in the cooling fans or belt when connecting or disconnecting the cables.

5-2. Steps to take in an emergency

If your vehicle overheats

The following may indicate that your vehicle is overheating:

- The high engine coolant temperature warning light comes on or flashes:
The engine may be overheating.
- “Hybrid System Overheat” is shown on the multi-information display:
The power control unit may be overheating.

Follow the correction procedure as described below.

Correction procedures

■ If the engine coolant temperature warning light comes on or flashes

STEP 1 Stop the vehicle in a safe place and turn off the air conditioning system.

STEP 2 Check to see if steam is coming out from the engine area.

If you see steam:

Stop the hybrid system. Carefully lift the hood after the steam subsides and then restart the hybrid system.

If you do not see steam:

Leave the hybrid system operating and carefully lift the hood.

STEP 3 Remove the engine compartment cover. (→P. 527)

STEP 4 Check if the cooling fans are operating.


If the fans are operating:

Wait until the high coolant temperature warning light goes off and then stop the hybrid system.

If the fans are not operating:

Stop the hybrid system immediately and call your local Lexus dealer.

STEP 5

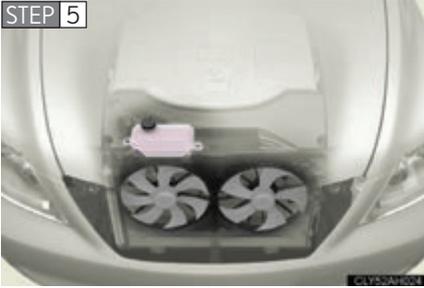

After the hybrid system has cooled down, check the engine coolant level and inspect the cooling system for leaks.

STEP 6



Add engine coolant if necessary.

Water can be used in an emergency if engine coolant is unavailable. (→P. 651)

■ If “Hybrid System Overheat” is shown on the multi-information display

STEP 1 Stop the vehicle in a safe place and turn off the air conditioning system.

STEP 2 Leave the hybrid system operating and carefully lift the hood.

STEP 3 Remove the engine compartment cover. (→P. 527)

STEP 4 Check if the cooling fans are operating.


If the fans are operating:

Wait until “Hybrid System Overheat” disappears and then stop the hybrid system.

If the message does not disappear, call your Lexus dealer.

If the fans are not operating:

Stop the hybrid system immediately and call your local Lexus dealer.

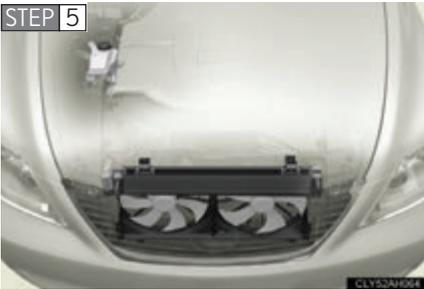

After the hybrid system has cooled down, check the power control unit coolant level and inspect the cooling system for leaks.

Add power control unit coolant if necessary.

Water can be used in an emergency if power control unit coolant is unavailable. (→P. 651)

Have the vehicle inspected at your nearest Lexus dealer as soon as possible.

■ Overheating

The following symptoms may occur when your vehicle is overheating:

- Hybrid system output decreases.
- Steam is coming from the engine area.

 CAUTION**■ To prevent an accident or injury when inspecting under the hood of your vehicle**

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injury such as burns.
- With a hybrid vehicle, there are times when the gasoline engine automatically starts to run or the cooling fans suddenly start to operate. Do not touch or approach the rotating parts of the belt or fans. Doing so may lead to fingers, clothes or tools getting caught, resulting in an accidental injury.
- Do not loosen the coolant reservoir cap while the hybrid system and radiator are hot.
Serious injury, such as burns, may result from hot coolant and steam released under pressure.

 NOTICE**■ When adding engine/power control unit coolant**

Wait until the hybrid system has cooled down before adding engine/power control unit coolant.

When adding coolant, do so slowly. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

5-2. Steps to take in an emergency If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt, or snow:

STEP 1 Stop the hybrid system. Set the parking brake and put the shift lever in "P".

STEP 2 Remove the mud, snow, or sand from around the stuck tire.

STEP 3 Place wood, stones or some other material to help provide traction under the tires.

STEP 4 Restart the hybrid system.

STEP 5 Shift the shift lever to the "D" or "R" position and carefully apply the accelerator to free the vehicle.

Turn off TRAC/VSC if these functions are hampering your attempts to free the vehicle. (→ P. 233)

CAUTION

■ When attempting to free a stuck vehicle

If you choose to rock the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or persons. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

NOTICE

■ To avoid damaging the transmission and other components

- Avoid spinning the wheels.
- If the vehicle remains stuck after trying these procedures, the vehicle may require towing to be freed.

6-1. Specifications

Maintenance data
(fuel, oil level, etc.) 646

Fuel information 658

Tire information 661

6-2. Customization

Customizable features 672

6-3. Initialization

Items to initialize 677

6-1. Specifications

Maintenance data (fuel, oil level, etc.)

Dimensions and weights

Overall length	202.8 in. (5150 mm)	
Overall width	73.8 in. (1875 mm)	
Overall height *1	58.3 in. (1480 mm)	
Wheelbase	121.7 in. (3090 mm)	
Tread	Front	63.6 in. (1615 mm)*2 63.4 in. (1610 mm)*3
	Rear	63.6 in. (1615 mm)*2 63.4 in. (1610 mm)*3
Vehicle capacity weight (Occupants + luggage)	825 lb. (375 kg)*4	
	675 lb. (305 kg)*5	

*1: Unladen vehicles

*2: Vehicles with 18-inch tires

*3: Vehicles with 19-inch tires

*4: 5-seat models

*5: 4-seat models

Vehicle identification

■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.




This number is stamped on the top left of the instrument panel and in the engine compartment.



This number is also on the Certification Label.

■ Engine number and electric motor (traction motor) number

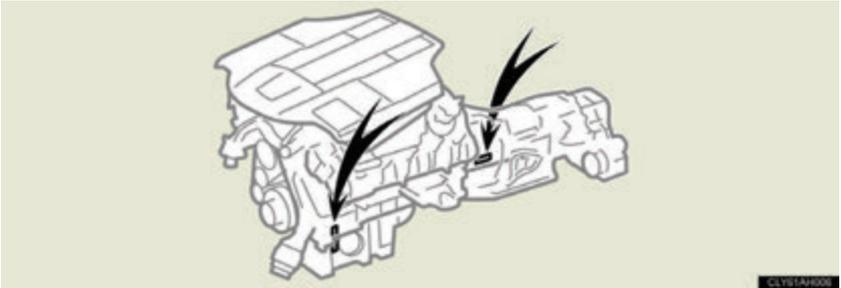

The numbers are stamped on the locations shown in the above illustration.

Engine

Model	2UR-FSE
Type	8-cylinder V type, 4-cycle, gasoline
Bore and stroke	3.70 × 3.52 in. (94.0 × 89.5 mm)
Displacement	303.2 cu.in. (4969 cm ³)
Drive belt tension	Automatic adjustment

Fuel

Fuel type	Premium unleaded gasoline only
Octane rating	91 (Research octane number 96) or higher
Fuel tank capacity	22.1 gal. (84 L, 18.4 Imp. gal.)

Electric motor (Traction motor)

Type	Permanent magnet synchronous motor
Maximum output	165 kW
Maximum torque	221.3 ft•lbf (300 N•m, 30.6 kgf•m)

Hybrid battery (Traction battery)

Type	Nickel-Metal hydride battery
Voltage	14.4 V/module
Capacity	6.5 Ah (3HR)
Quantity	20 modules
Overall voltage	288 V

Lubrication system

Oil capacity
drain and refill
(reference)

with filter

9.5 qt. (9.0 L, 7.9 Imp. qt.)

without filter


8.9 qt. (8.4 L, 7.4 Imp. qt.)

Engine oil selection

“Toyota Genuine Motor Oil” is used in your Lexus vehicle. Use Lexus approved “Toyota Genuine Motor Oil” or equivalent to satisfy the following grade and viscosity.

Oil grade: ILSAC multigrade engine oil

Recommended viscosity: SAE 5W-20 or 0W-20

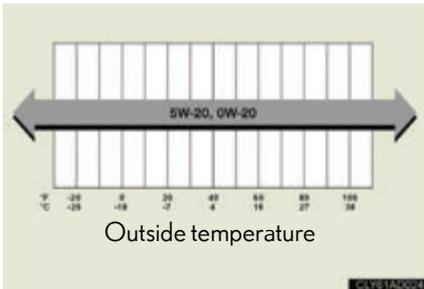

SAE 5W-20 or 0W-20 engine oil may be used. However, SAE 0W-20 is the best choice for good fuel economy, and good starting in cold weather.

The OW portion of the oil viscosity rating indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.

The 20 in 0W-20 indicates the oil viscosity when the oil is at its operating temperature. An oil with a higher viscosity may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container label:

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is added to some oil containers to help you select the oil you should use.



Cooling system

Capacity	
Gasoline engine	11.7 qt. (11.1 L, 9.8 Imp. qt.)
Power control unit	2.5 qt. (2.4 L, 2.1 Imp. qt.)
Coolant type	Use either of the following: <ul style="list-style-type: none"> • "Toyota Super Long Life Coolant" • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system

Spark plug	
Make	DENSO FK20HBR11
Gap	0.043 in. (1.1 mm)

NOTICE

■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust spark plug gap.

Electrical system

12-volt battery

Open voltage* at
68°F (20°C):

12.6 — 12.8 V Fully charged

12.2 — 12.4 V Half charged

11.8 — 12.0 V Discharged

(*: Voltage checked 20 minutes after the hybrid system and all the lights are turned off)

Charging rates

5 A max.

Transmission

Fluid capacity*

6.03 qt. (5.7 L, 5.02 Imp. qt.)

Fluid type

Toyota Genuine ATF WS

*: The fluid capacity is a reference quantity. If replacement is necessary, contact your Lexus dealer.

NOTICE

■ Transmission fluid type

Using transmission fluid other than “Toyota Genuine ATF WS” may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

Transfer

Oil capacity	0.74 qt. (0.7 L, 0.62 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Differential gear oil LX 75W-85 GL-5 or equivalent

*: "Toyota Genuine Differential Gear Oil" is filled in your Lexus vehicle at factory fill. Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

Front differential

Oil capacity	0.79 qt. (0.75 L, 0.66 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Differential gear oil LT 75W-85 GL-5 or equivalent

*: "Toyota Genuine Differential Gear Oil" is filled in your Lexus vehicle at factory fill. Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

Rear differential

Oil capacity	1.42 qt. (1.35 L, 1.19 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Differential gear oil LX 75W-85 GL-5 or equivalent

*: "Toyota Genuine Differential Gear Oil" is filled in your Lexus vehicle at factory fill. Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent of matching quality to satisfy the above specification. Please contact your Lexus dealer for further details.

Brakes

Pedal clearance *	3.7 in. (95.0 mm) Min.
Pedal free play	0.04 — 0.08 in. (1.0 — 2.0 mm)
Brake pad wear limit	0.04 in. (1.0 mm)
Parking brake lining wear limit	0.04 in. (1.0 mm)
Fluid type	SAE J1703 or FMVSS No. 116 DOT 3

*: Minimum pedal clearance when depressed with a force of 50 lbf (200 N, 20 kgf)

Steering

Free play	Less than 1.2 in. (30 mm)
-----------	---------------------------

Tires and wheels

► 18-inch tires (type A)

Tire size	235/50R18 97W
Tire inflation pressure (Recommended cold tire inflation pressure)	<p>Driving under normal conditions</p> <p>Front: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Rear: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Spare: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Driving at high speeds (above 100 mph [160 km/h]) (in countries where such speeds are permitted by law)</p> <p>Add 9 psi (60 kPa, 0.6 kgf/cm² or bar) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.</p>
Wheel size	18 × 7 1/2J
Wheel nut torque	103.3 ft•lbf (140 N•m, 14.3 kgf•m)

► 18-inch tires (type B)

Tire size	P235/50R18 97V
Tire inflation pressure (Recommended cold tire inflation pressure)	<p>Driving under normal conditions</p> <p>Front: 33 psi (230 kPa, 2.3 kgf/cm² or bar)</p> <p>Rear: 33 psi (230 kPa, 2.3 kgf/cm² or bar)</p> <p>Spare: 33 psi (230 kPa, 2.3 kgf/cm² or bar)</p> <p>Driving at high speeds (above 100 mph [160 km/h]) (in countries where such speeds are permitted by law)</p> <p>Add 6 psi (40 kPa, 0.4 kgf/cm² or bar) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.</p>
Wheel size	18 × 7 1/2J
Wheel nut torque	103.3 ft•lbf (140 N•m, 14.3 kgf•m)

► 19-inch tires (type A)

Tire size	245/45R19 98Y
Tire inflation pressure (Recommended cold tire inflation pressure)	<p>Driving under normal conditions</p> <p>Front: 33 psi (230 kPa, 2.3 kgf/cm² or bar)</p> <p>Rear: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Spare: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Driving at high speeds (above 100 mph [160 km/h]) (in countries where such speeds are permitted by law)</p> <p>Add 11 psi (70 kPa, 0.7 kgf/cm² or bar) to the front tires, 9 psi (60 kPa, 0.6 kgf/cm² or bar) to the rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.</p>
Wheel size	19 × 8J
Wheel nut torque	103.3 ft•lbf (140 N•m, 14.3 kgf•m)

► 19-inch tires (type B)

Tire size	P245/45R19 98V
Tire inflation pressure (Recommended cold tire inflation pressure)	<p>Driving under normal conditions</p> <p>Front: 33 psi (230 kPa, 2.3 kgf/cm² or bar)</p> <p>Rear: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Spare: 35 psi (240 kPa, 2.4 kgf/cm² or bar)</p> <p>Driving at high speeds (above 100 mph [160 km/h]) (in countries where such speeds are permitted by law)</p> <p>Add 6 psi (40 kPa, 0.4 kgf/cm² or bar) to the front tires and rear tires. Never exceed the maximum cold tire inflation pressure indicated on the tire sidewall.</p>
Wheel size	19 × 8J
Wheel nut torque	103.3 ft•lbf (140 N•m, 14.3 kgf•m)

Light bulbs

	Light Bulbs	Bulb No.	W	Type
Exterior	Headlights (high beam)	9005	60	A
	Headlights (low beam - discharge bulbs)	—	35	B
	Front side marker lights (with discharge headlights)	194	3.8	C
	Front turn signal lights	—	21	D
	Parking lights (with discharge headlights)	—	5	C
	Front fog lights	9006	51	E
	Trunk lid light	194	3.8	C
	Trunk light	—	3.8	C
	Rear turn signal lights	921	16	C
	Back-up lights	921	16	C
Interior	Outer foot lights	—	5	C
	Vanity lights			
	Front	—	8	C
	Rear	—	3	F
	Interior lights			
Front	—	8	C	
Rear	—	8	F	
Door courtesy lights	—	5	C	

- A: HB3 halogen bulbs
 B: D4S discharge bulbs
 C: Wedge base bulbs (clear)
 D: Wedge base bulbs (amber)
 E: HB4 halogen bulbs
 F: Double end bulbs

6-1. Specifications

Fuel information

You must only use unleaded gasoline in your vehicle.

Premium unleaded gasoline with an octane rating of 91 (Research Octane Number 96) or higher required for optimum engine performance. If 91 octane cannot be obtained, you may use unleaded gasoline with an octane rating as low as 87 (Research Octane Number 91). Use of unleaded gasoline with an octane rating lower than 91 may result in engine knocking and significantly reduced performance. Persistent knocking can lead to engine damage and should be corrected by refueling with higher octane unleaded gasoline.

At minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB3.5-M93 in Canada.

■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Lexus has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

■ If your engine knocks

- Consult your Lexus dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

■ Gasoline quality

In very few cases, driveability problems may be caused by the brand of gasoline you are using. If driveability problems persist, try changing the brand of gasoline. If this does not correct the problem, consult your Lexus dealer.

■ Gasoline quality standards

- Automotive manufacturers in the US, Europe and Japan have developed a specification for fuel quality called World-Wide Fuel Charter (WWFC) that is expected to be applied worldwide.
- The WWFC consists of four categories that are based on required emission levels. In the US, category 4 has been adopted.
- The WWFC improves air quality by lowering emissions in vehicle fleets, and customer satisfaction through better performance.

■ Lexus recommends the use of gasoline containing detergent additives

- Lexus recommends the use of gasoline that contains detergent additives to avoid build-up of engine deposits.
- All gasoline sold in the US contains detergent additives to clean and/or keep clean intake systems.

■ Lexus recommends the use of cleaner burning gasoline

Cleaner burning gasoline, including reformulated gasoline that contains oxygenates such as ethanol or MTBE (Methyl Tertiary Butyl Ether) is available in many areas.

Lexus recommends the use of cleaner burning gasoline and appropriately blended reformulated gasoline. These types of gasoline provide excellent vehicle performance, reduce vehicle emissions and improve air quality.

■ Lexus does not recommend blended gasoline

- Lexus allows the use of oxygenate blended gasoline where the oxygenate content is up to 10% ethanol or 15% MTBE.
- If you use gasohol in your Lexus, be sure that it has an octane rating no lower than 87.
- Lexus does not recommend the use of gasoline containing methanol.

■ Lexus does not recommend gasoline containing MMT

Some gasoline contains octane enhancing additive called MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

Lexus does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected.

The malfunction indicator lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

NOTICE

■ Notice on fuel quality

- Do not use improper fuels. If improper fuels are used the engine will be damaged.
- Do not use leaded gasoline.
Leaded gasoline can cause damage to your vehicle's three-way catalytic converters causing the emission control system to malfunction.
- Do not use gasohol other than that stated here.
Other gasohol may cause fuel system damage or vehicle performance problems.
- Using unleaded gasoline with an octane number or rating lower than that stated here will cause persistent heavy knocking.
At worst, this will lead to engine damage.

■ Fuel-related poor driveability

If after using a different type of fuel, poor driveability is encountered (poor hot starting, vaporization, engine knocking, etc.), discontinue the use of that type of fuel.


■ When refueling with gasohol

Take care not to spill gasohol. It can damage your vehicle's paint.

6-1. Specifications

Tire information

Typical tire symbols

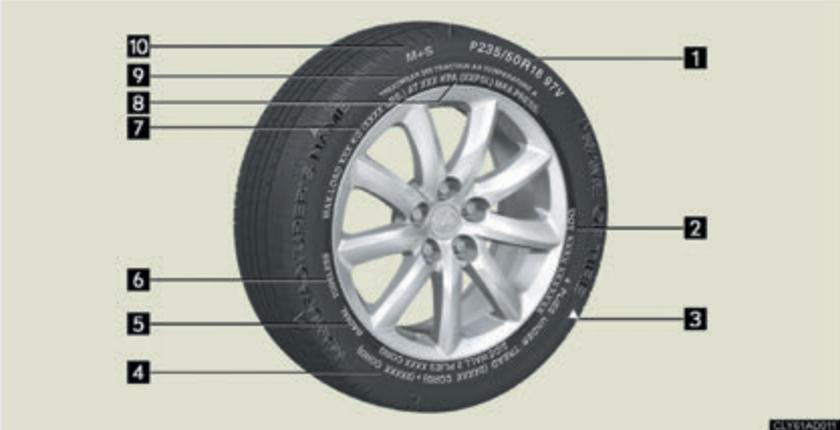


- 1** Tire size (→P. 663)
- 2** DOT and Tire Identification Number (TIN) (→P. 662)
- 3** Location of treadwear indicators (→P. 542)
- 4** Tire ply composition and materials
Plies are layers of rubber-coated parallel cords. Cords are the strands which form the plies in a tire.
- 5** Radial tires or bias-ply tires
A radial tire has RADIAL on the sidewall. A tire not marked RADIAL is a bias-ply tire.
- 6** TUBELESS or TUBE TYPE
A tubeless tire does not have a tube and air is directly filled in the tire. A tube type tire has a tube inside the tire and the tube maintains the air pressure.
- 7** Load limit at maximum cold tire inflation pressure (→P. 546)
- 8** Maximum cold tire inflation pressure (→P. 655)
This means the pressure to which a tire may be inflated.
- 9** Uniform tire quality grading
For details, see “Uniform Tire Quality Grading” that follows.

10 Summer tires or all season tires (→P. 546)

An all season tire has “M+S” on the sidewall. A tire not marked “M+S” is a summer tire.

Typical DOT and Tire Identification Number (TIN)

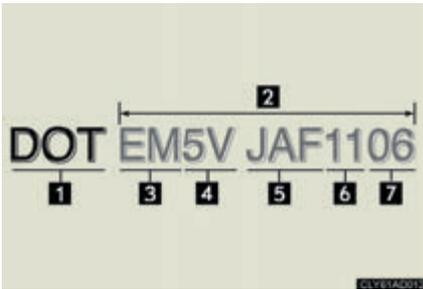


- 1 DOT symbol*
- 2 Tire Identification Number (TIN)
- 3 Tire manufacturer's identification mark
- 4 Tire size code
- 5 Manufacturer's optional tire type code (3 or 4 letters)
- 6 Manufacturing week
- 7 Manufacturing year

*:The DOT symbol certifies that the tire conforms to applicable Federal Motor Vehicle Safety Standards.

Tire size

Typical tire size information

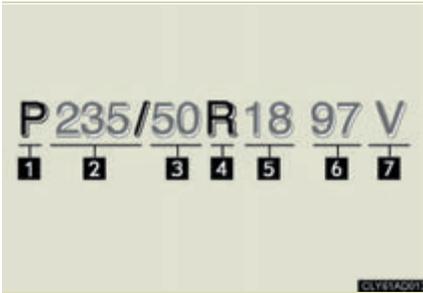

The illustration indicates typical tire size.


- 1** Tire use
(P = Passenger car,
T = Temporary use)
- 2** Section width (millimeters)
- 3** Aspect ratio
(tire height to section width)
- 4** Tire construction code
(R = Radial, D = Diagonal)
- 5** Wheel diameter (inches)
- 6** Load index (2 or 3 digits)
- 7** Speed symbol
(alphabet with one letter)

Tire dimensions



- 1** Section width
- 2** Tire height
- 3** Wheel diameter

Tire section names

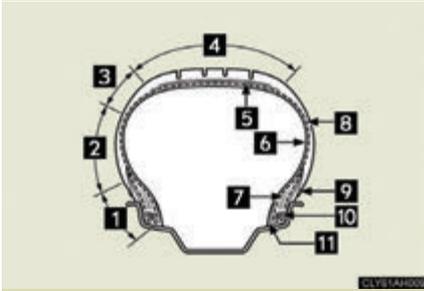

- 1 Bead
- 2 Sidewall
- 3 Shoulder
- 4 Tread
- 5 Belt
- 6 Inner liner
- 7 Reinforcing rubber
- 8 Carcass
- 9 Rim lines
- 10 Bead wires
- 11 Chafer

Uniform Tire Quality Grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S.A. Department of Transportation.

It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

■ DOT quality grades

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example: Treadwear 200 Traction AA Temperature A

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and a half (1.5) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

■ Traction AA, A, B, C

The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete.

A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

■ Temperature A, B, C

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

Grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109.

Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades of a tire assume that it is properly inflated and not overloaded.

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Glossary of tire terminology

Tire related term	Meaning
Cold tire inflation pressure	Tire pressure when the vehicle has been parked for three hours or more, or has not been driven more than 1 mile or 1.5 km under that condition
Maximum inflation pressure	The maximum cold inflated pressure to which a tire may be inflated, shown on the sidewall of the tire
Recommended inflation pressure	Cold tire inflation pressure recommended by a manufacturer
Accessory weight	The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not)
Curb weight	The weight of a motor vehicle with standard equipment, including the maximum capacity of fuel, oil and coolant, and if so equipped, air conditioning and additional weight optional engine
Maximum loaded vehicle weight	The sum of: (a) Curb weight (b) Accessory weight (c) Vehicle capacity weight (d) Production options weight
Normal occupant weight	150 lb. (68 kg) times the number of occupants specified in the second column of Table 1* that follows

Tire related term	Meaning
Occupant distribution	Distribution of occupants in a vehicle as specified in the third column of Table 1* below
Production options weight	The combined weight of installed regular production options weighing over 5 lb. (2.3 kg) in excess of the standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty 12-volt battery, and special trim
Rim	A metal support for a tire or a tire and tube assembly upon which the tire beads are seated
Rim diameter (Wheel diameter)	Nominal diameter of the bead seat
Rim size designation	Rim diameter and width
Rim type designation	The industry manufacturer's designation for a rim by style or code
Rim width	Nominal distance between rim flanges
Vehicle capacity weight (Total load capacity)	The rated cargo and luggage load plus 150 lb. (68 kg) times the vehicle's designated seating capacity
Vehicle maximum load on the tire	The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight, and dividing by two
Vehicle normal load on the tire	The load on an individual tire that is determined by distributing to each axle its share of curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table 1* below), and dividing by two
Weather side	The surface area of the rim not covered by the inflated tire

Tire related term	Meaning
Bead	The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim
Bead separation	A breakdown of the bond between components in the bead
Bias ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread
Carcass	The tire structure, except tread and sidewall rubber which, when inflated, bears the load
Chunking	The breaking away of pieces of the tread or sidewall
Cord	The strands forming the plies in the tire
Cord separation	The parting of cords from adjacent rubber compounds
Cracking	Any parting within the tread, sidewall, or innerliner of the tire extending to cord material
CT	A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire
Extra load tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Groove	The space between two adjacent tread ribs
Innerliner	The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire
Innerliner separation	The parting of the innerliner from cord material in the carcass

Tire related term	Meaning
Intended outboard sidewall	(a) The sidewall that contains a whitewall, bears white lettering, or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire, or (b) The outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle
Light truck (LT) tire	A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles
Load rating	The maximum load that a tire is rated to carry for a given inflation pressure
Maximum load rating	The load rating for a tire at the maximum permissible inflation pressure for that tire
Maximum permissible inflation pressure	The maximum cold inflation pressure to which a tire may be inflated
Measuring rim	The rim on which a tire is fitted for physical dimension requirements
Open splice	Any parting at any junction of tread, sidewall, or innerliner that extends to cord material
Outer diameter	The overall diameter of an inflated new tire
Overall width	The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs
Passenger car tire	A tire intended for use on passenger cars, multipurpose passenger vehicles, and trucks, that have a gross vehicle weight rating (GVWR) of 10,000 lb. or less.
Ply	A layer of rubber-coated parallel cords

Tire related term	Meaning
Ply separation	A parting of rubber compound between adjacent plies
Pneumatic tire	A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load
Radial ply tire	A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread
Reinforced tire	A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire
Section width	The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands
Sidewall	That portion of a tire between the tread and bead
Sidewall separation	The parting of the rubber compound from the cord material in the sidewall
Snow tire	A tire that attains a traction index equal to or greater than 110, compared to the ASTM E-1136 Standard Reference Test Tire, when using the snow traction test as described in ASTM F-1805-00, Standard Test Method for Single Wheel Driving Traction in a Straight Line on Snow-and Ice-Covered Surfaces, and which is marked with an Alpine Symbol () on at least one sidewall
Test rim	The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire

Tire related term	Meaning
Tread	That portion of a tire that comes into contact with the road
Tread rib	A tread section running circumferentially around a tire
Tread separation	Pulling away of the tread from the tire carcass
Treadwear indicators (TWI)	The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread
Wheel-holding fixture	The fixture used to hold the wheel and tire assembly securely during testing

*: Table 1 — Occupant loading and distribution for vehicle normal load for various designated seating capacities

Designated seating capacity, Number of occupants	Vehicle normal load, Number of occupants	Occupant distribution in a normally loaded vehicle
2 through 4	2	2 in front
5 through 10	3	2 in front, 1 in second seat
11 through 15	5	2 in front, 1 in second seat, 1 in third seat, 1 in fourth seat
16 through 20	7	2 in front, 2 in second seat, 2 in third seat, 1 in fourth seat

6-2. Customization

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start (→P. 45)	Smart access system with push-button start	On	Off
	Operation signal (Emergency flashers)	On	Off
Wireless remote control (→P. 59)	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off

Item	Function	Default setting	Customized setting
Wireless remote control (→P. 59)	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operational signal (Emergency flashers)	On	Off
	Door lock buzzer	On	Off
	Trunk unlocking operation	Press and hold	Press twice
			One short press
Panic function	On	Off	
Door lock (→P. 62, 634)	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting gears to "P" unlocks all doors.	On	Off
	Shifting gears to position other than "P" locks all doors.	On	Off
	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Trunk (→P. 67)	Power trunk opener and closer function	On	Off

Item	Function	Default setting	Customized setting
Power windows (→P. 106)	Mechanical key linked operation	On	Off
	Mechanical key linked operation	Open and close	Open only
			Close only
	Wireless remote control linked operation	On	Off
Linked entry operation	On	Off	
Moon roof (→P. 109)	Mechanical key linked operation	On	Off
	Mechanical key linked operation	Open and close	Open only
			Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	On	Off
	Linked operation of components when wireless remote control is used	Slide only	Tilt only
Linked entry function	On	Off	
Automatic light control system (→P. 195)	Light sensor sensitivity	Level 3	Level 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds

Item	Function	Default setting	Customized setting
Lights (→P. 195)	Daytime running light system (U.S.A. only)	On	Off
Illumination (→P. 440)	Time elapsed before lights turn off	15 seconds	7.5 seconds
			30 seconds
	Operation when the doors are unlocked	On	Off
	Operation after the "POWER" switch is turned OFF	On	Off
	Footwell lighting	On	Off
	Shift lever lighting	On	Off
	Outer foot lights	On	Off
Seat belt reminder (→P. 610)	Vehicle speed linked seat belt reminder buzzer	On	Off

Multi-information display (→P. 191)

Country	Available languages
U.S.A.	English and Spanish
Canada	English, French, German, Spanish and Italian

6-3. Initialization Items to initialize

The following items must be initialized for normal system operation:

Item	When to initialize	Reference
Engine oil maintenance data	After changing engine oil	P. 531
Tire pressure warning system	<ul style="list-style-type: none">• When rotating the tires on vehicles differing with front and rear tire inflation pressures• When changing the tire inflation pressure by changing traveling speed• When changing the tire size	P. 542

Reporting safety defects for U.S. owners.....	680
Seat belt instructions for Canadian owners (in French).....	681

Reporting safety defects for U.S. owners

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the Lexus Division of Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-800-25-LEXUS).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Lexus Division of Toyota Motor Sales, U.S.A., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Ave, S.E., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

Seat belt instructions for Canadian owners (in French)

The following is a French explanation of seat belt instructions extracted from the seat belt section in this manual.


See the seat belt section for more detailed seat belt instructions in English.

Utilisation correcte des ceintures de sécurité



- Déroulez la sangle diagonale de telle sorte qu'elle passe bien sur l'épaule, sans pour autant être en contact avec votre cou ou glisser de votre épaule.
- Placez la sangle abdominale le plus bas possible sur les hanches.
- Réglez la position du dossier de siège. Asseyez-vous le dos le plus droit possible et calez-vous bien dans le siège.
- Ne vrillez pas la ceinture de sécurité.

Guide de confort de ceinture de sécurité (sièges arrière extérieurs)

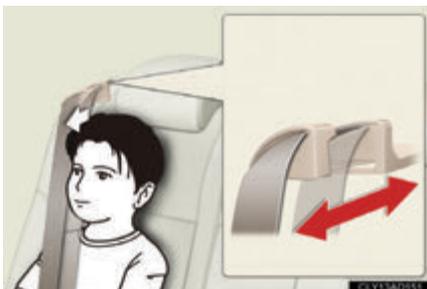

Si la sangle diagonale est proche du cou de la personne, faites coulisser le guide de confort de ceinture de sécurité vers l'avant.

Entretien et soin

■ Ceintures de sécurité

Nettoyez avec un chiffon ou une éponge humectée d'eau savonneuse tiède. Profitez de l'occasion pour vérifier régulièrement que les ceintures ne sont pas effilochées, entaillées, ou ne paraissent pas exagérément usées.

ATTENTION

■ Détérioration et usure des ceintures de sécurité

Inspectez les ceintures de sécurité périodiquement. Contrôlez qu'elles ne sont pas entaillées, effilochées, et que leurs ancrages ne sont pas desserrés. N'utilisez pas une ceinture de sécurité défectueuse avant qu'elle ne soit remplacée. Une ceinture de sécurité défectueuse n'apporte aucune garantie de protection de l'occupant en cas d'accident.

Index

Abbreviation list	684
Alphabetical index	686
What to do if... ..	698

For details of equipment related to the navigation system, such as the audio system and clock, refer to the “Navigation System Owner’s Manual”.

Abbreviation list

Abbreviation/Acronym list

ABBREVIATIONS	MEANING
A/C	Air Conditioning
ABS	Anti-Lock Brake System
AFS	Adaptive Front-lighting System
ALR	Automatic Locking Retractor
AWD	All Wheel Drive
CAL	Calibration
CHG	Charge
CRS	Child Restraint System
DISP	Display
ECO	Economy/Ecology
ECU	Electronic Control Unit
EDR	Event data recorder
ELR	Emergency Locking Retractor
EPS	Electric Power Steering
GAWR	Gross Axle Weight Ratings
GPS	Global Positioning System
I/M	Emission inspection and maintenance
INFO	Information
LATCH	Lower Anchors and Tethers for Children
LED	Light Emitting Diode
MMT	Methylcyclopentadienyl Manganese Tricarbonyl
M + S	Mud and Snow
MTBE	Methyl Tertiary Butyl Ether
OBD	On Board Diagnostics
PCS	Pre-Collision System

ABBREVIATIONS	MEANING
PWR	Power
SRS	Supplemental Restraint System
TIN	Tire Identification Number
TPMS	Tire Pressure Warning System
TRAC	Traction Control
VDIM	Vehicle Dynamics Integrated Management
VGRS	Variable Gear Ratio Steering
VIB	Vibration
VIN	Vehicle Identification Number
VSC	Vehicle Stability Control

A	A/C	
	Air conditioning filter	556
	Automatic air conditioning system	272, 280, 290
	Front air conditioning system	272, 280
	Rear air conditioning system	290
	ABS	231
	ACCESSORY mode	170
	AFS	196
	Adaptive front-lighting system	196
	Air conditioning filter	556
	Air conditioning system	
	Air conditioning filter	556
	Front air conditioning system	272, 280
	Rear air conditioning system	290
	Airbags	
	Airbag operating conditions	128
	Airbag precautions for your child	133
	Airbag warning light	609
	Curtain shield airbag operating conditions	129
	Curtain shield airbag precautions	133
	Front passenger occupant classification system	138
	General airbag precautions	133
	Locations of airbags	124
	Modification and disposal of airbags	137
	Proper driving posture	122, 133
	Side airbag operating conditions	129
	Side airbag precautions	133
	SRS airbags	124
	Alarm	119
	Antenna	308
	Anti-lock brake system	231
	Armrest	473
	Ashtrays	462
	Audio input	351
	Audio system	
	Antenna	308
	Audio input	351
	Audio visual input	393
	AUX adapter	351
	A/V input adapter	393
	CD player/changer	312
	DVD player	309, 368, 369
	MP3/WMA disc	316, 372
	Optimal use	347
	Portable music player	351
	Radio	304
	Rear seat audio system	352

Rear seat entertainment system.....	358
Steering wheel audio switch.....	356
Audio visual input.....	393
Automatic air conditioning system	
Air conditioning filter	556
Automatic air conditioning system.....	272, 280, 290
Front air conditioning system.....	272, 280
Rear air conditioning system.....	290
Automatic headlight leveling system.....	
	197
Automatic light control system	195
AUX adapter	351
A/V input adapter	393

B Back-up lights	
Wattage.....	657
Battery	
Checking	538
Hybrid battery (traction battery).....	33
If the vehicle has discharged	
12-volt battery.....	637
Preparing and checking before winter	256
Bluetooth®	397
Brakes	
Fluid.....	536
Brake hold	182
Parking brake	180
Brake assist.....	231
Brake hold	182

C

Care

Exterior 508
 Interior 511
 Seat belts 512

Cargo capacity 251

Cargo hooks 486

CD changer 312

CD player 312

Chains 256

Child restraint system

Booster seats, definition 143
 Booster seats, installation 148
 Convertible seats, definition 143
 Convertible seats, installation 148
 Front passenger occupant
 classification system 138
 Infant seats, definition 143
 Infant seats, installation 148
 Installing CRS with lower
 anchors 149
 Installing CRS with seat belts 148
 Installing CRS with top straps 154

Child safety

Airbag precautions 133
 Child restraint system 143
 Child-protectors 63
 How your child should wear the
 seat belt 97
 Installing child restraints 148

Moon roof precautions 109
 Power window lock switch 106
 Power window precautions 108
 Removed electronic key battery
 precautions 560
 Seat belt comfort guide 95
 Seat belt extender precautions 99
 Seat belt precautions 98
 Seat heater precautions 472
 Trunk precautions 70
 12-volt battery
 precautions 540, 639

Child-protectors 63

Cigarette lighter 463

Cleaning

Exterior 508
 Interior 511
 Seat belts 512

Climate control seat 469

Climate control seat filter 471

Clock 459

Coat hooks 484

Coin holder 447

Condenser 535

Console box 449

Cool box 451

Cooling system

Hybrid system overheating 640

Corner assist sensors 217

Cruise control

Cruise control 203
 Dynamic radar cruise
 control 206

Cup holders 448

Curtain shield airbags 124

Customizable features 672

D Daytime running light system..... 196

Defogger

- Rear window.....298
- Side mirrors.....298

Dimensions646

Dinghy towing 261

Display

- Energy flow34
- Multi-information display.....191
- Touch screen.....264
- Trip information.....192
- Warning message 617

Do-it-yourself maintenance..... 520

Door courtesy lights

- Door courtesy lights 440
- Wattage 657

Door pockets.....447

Doors

- Door glasses.....106
- Door lock45, 59, 62
- Side mirrors.....104

Driver's seat belt reminder light610

Driving

- Correct posture..... 122
- Procedures.....160

Driving position memory 84

DVD player309, 368, 369

E Electric power steering..... 231

Electronically modulated air suspension.....226

Electronic key

- If the electronic key does not operate properly634

Emergency flashers

- Switch.....598

Emergency, in case of

- If the electronic key does not operate properly634
- If the hybrid system will not start..... 628
- If the parking brake cannot be released..... 631
- If the shift lever cannot be shifted from "P" 630
- If the vehicle has discharged 12-volt battery..... 637
- If the warning buzzer sounds.....608
- If the warning light turns on.....608
- If the warning message is displayed.....617
- If you have a flat tire 620
- If you lose your keys.....633
- If you think something is wrong 605
- If your vehicle becomes stuck.....644
- If your vehicle needs to be towed..... 599
- If your vehicle overheats 640

Engine	
Accessory mode	169
Compartment	526
Engine switch.....	169
Hood.....	523
How to start the hybrid system.....	169
Identification number	647
If the hybrid system will not start.....	628
Ignition switch.....	169
Overheating.....	640
Power switch	169
Engine compartment cover	527
Engine/power control unit coolant	
Capacity	651
Checking	533
Preparing and checking before winter.....	256
Engine oil	
Capacity	650
Checking	529
Preparing and checking before winter.....	256
Engine oil maintenance data.....	531
Engine switch.....	169
EPS	231
EV drive mode switch.....	173
Event data recorder	606

F	First-aid kit storage belt	486
	Floor mat.....	485
	Fluid	
	Brake.....	536
	Washer.....	537
	Fog lights	
	Switch.....	198
	Wattage.....	657
	Footwell lighting.....	440
	Front fog lights	
	Switch.....	198
	Wattage.....	657
	Front passenger occupant classification system.....	138
	Front passenger's seat belt reminder light	610
	Front passenger's seat position memory	88
	Front seats	
	Adjustment	74
	Driving position memory	84
	Seat position memory.....	84, 88
	Front turn signal lights	
	Wattage	657
	Fuel	
	Capacity	648
	Fuel gauge.....	185
	Information	658
	Refueling.....	112
	Fuel door.....	112
	Fuel filler door.....	112
	Fuses.....	561

G Garage door opener..... 489
 Gauges.....185
 Glove box446

H Hands-free system
 (for cellular phone).....397
 Hazard lights
 Switch.....598
 Head restraints
 Adjustment92
 Headlight aim 582
 Headlight cleaner 202
 Headlights
 Discharge headlight
 precautions595
 Replacing light bulbs584
 Switch.....195
 Wattage 657
 Heaters
 Seat heaters.....469
 Side mirrors.....298
 Steering wheel.....467
 Height control
 Electronically modulated air
 suspension.....226
 Hill-start assist control 231
 Hood 523
 Hooks
 Cargo.....486
 Coat484
 Shopping bag.....486
 Horn.....184
 Hybrid system
 Emergency shut off system34
 Energy monitor/consumption
 screen34

Engine switch.....169
 High voltage components33
 Hybrid system indicator185
 Ignition switch169
 Power switch.....170

I I/M test..... 519
 Identification
 Electric motor647
 Engine.....647
 Vehicle.....647
 Ignition switch.....169
 Illuminated entry system440
 Immobilizer system117
 Indicator lights.....188
 Initialization
 Items to initialize677
 Inside rear view mirror103
 Interior lights
 Interior lights.....440
 Switch.....442
 Wattage.....657

J Jack
 Positioning a floor jack.....524
 Vehicle-equipped jack620
 Jack handle.....620

K Keyless entry59
 Keys
 Electronic key41
 If the electronic key does not
 operate properly634
 If you lose your keys633
 Key number41
 Keyless entry.....59

Keys	41
Mechanical key	42
Power switch	169
Wireless remote control key	59

L Lexus link system 495

Light bulbs	
Replacing	584
Wattage	657

Lights	
Door courtesy lights	440
Emergency flasher switch	598
Fog light switch	198
Hazard light switch	598
Headlight switch	195
Interior light switch	442
Outer foot lights	440
Overhead courtesy light	440
Personal light switch	442
Replacing light bulbs	584
Shift lever lighting	440
Turn signal lever	179
Vanity lights	458
Wattage	657
Load capacity	254

M Maintenance

Do-it-yourself maintenance	520
General maintenance	516
Maintenance data	646
Maintenance requirements	514

Meter	
Instrument panel light control	186
Meters	185

Micro dust and pollen filter	276, 286
---------------------------------------	----------

Mirrors	
Inside rear view mirror	103
Side mirror heaters	298
Side mirrors	104
Vanity mirrors	458
Moon roof	109
MP3 disc	316, 372
Multi-information display	191

N Noise from under vehicle 24

O Odometer 185

Oil	
Engine oil	529
Opener	
Fuel filler door	112
Hood	523
Trunk	67

Outer foot lights	
Outer foot lights	440
Wattage	657

Outside rear view mirrors	
Adjusting and folding	104
Mirror position memory	84

Outside temperature display 192

Overhead console 455

Overhead courtesy lights	
Overhead courtesy lights	440
Wattage	657

Overheating, Hybrid system 640

P

- Parking assist sensors 217
- Parking brake 180
- Parking lights
 - Replacing light bulbs 584
 - Switch 195
 - Wattage 657
- PCS 238, 242
- Penlight 621
- Personal lights
 - Switch 442
- Power outlet 465
- Power switch 170
- Power windows 106
- Pre-collision system 238, 242

R

- Radar cruise control 206
- Radiator 535
- Radio 304
- Radio data system 306
- Rear seat
 - Seat adjustment 77, 80
 - Seat position memory 90
- Rear seat entertainment
 - system 358
- Rear seat relaxation system 474
- Rear sunshade 478
- Rear turn signal lights
 - Replacing light bulbs 584
 - Wattage 657
- Rear view monitor system 228
- Rear window defogger 298
- Replacing
 - Electronic key battery 559
 - Fuses 561
 - Light bulbs 584
 - Tires 620
- Reporting safety defects for U.S. owners 680

S

Seat belts

Adjusting the seat belt..... 95

Automatic locking retractor..... 96

Child restraint system
installation143

Cleaning and maintaining the seat
belts.....512

Emergency locking retractor..... 96

How to wear your seat belt..... 94

How your child should wear the
seat belt.....97

Pregnant women, proper seat belt
use 96

Reminder light..... 610

Seat belt extenders 97

Seat belt pretensioners..... 95

Seat heaters469

Seat position memory 84, 88, 90

Seating capacity254

Seats

Adjustment.....74, 77, 80

Adjustment
precautions76, 79, 83

Child seat/child restraint system
installation143

Cleaning.....511

Climate control.....469

Climate control seat.....469

Driving position memory..... 84

Front passenger's seat
position memory 88

Head restraint..... 92

Properly sitting in the seat122

Rear seat position memory90

Rear seat relaxation system..... 474

Seat heaters.....469

Seat position memory.....84, 88, 90

Service reminder indicators188

Shift lever

If the shift lever cannot be
shifted from "P" 630

Transmission.....175

Shift lever lighting 440

Shift lock system..... 630

Shopping bag hooks 486

Side airbags124

Side marker lights

Switch.....195

Side mirrors

Adjusting and folding104

Mirror position memory 84

**Smart access system with push-button
start**

Entry function45

Starting the hybrid system169

Spare tire

Inflation pressure.....550

Storage location620

Spark plug651

Specifications 646

Speedometer 185

Steering wheel

Adjustment101

Audio switches..... 356

Heated steering wheel467

Steering wheel position
memory 84

Storage feature 444

Stuck vehicle

If your vehicle becomes
stuck 644

Sun visors..... 457

Sunshades

- Rear 478
- Rear door 481
- Roof 110

Switch

- Driving mode selector
 - switch 176
- Emergency flasher switch 598
- Engine switch 169
- EV drive mode switch 173
- Fog light switch 198
- Hazard light switch 598
- Heated steering wheel
 - switch 467
- Ignition switch 169
- Light switches 195
- Parking brake switch 180
- Power door lock switch 62
- Power switch 169
- Power trunk lid 67
- Power trunk opener and
 - closer 67
- Power window switch 106
- Window lock switch 106
- Wiper and washer switch 199

T

- Tachometer 185
- Tail lights
 - Switch 195
- Theft deterrent system
 - Alarm 119
 - Immobilizer system 117
- Theft prevention labels 121
- Tire inflation pressure 550
- Tire information
 - Glossary 666
 - Size 663
 - Tire identification number 662
 - Uniform tire quality grading 664
- Tires
 - Chains 256
 - Checking 542
 - If you have a flat tire 620
 - Inflation pressure 550
 - Inflation pressure sensor 543
 - Information 661
 - Replacing 620
 - Rotating tires 542
 - Size 655
 - Snow tires 256
 - Tire pressure warning
 - system 542, 610

Tools.....	620
Total load capacity	254
Touch screen.....	264
Towing	
Dinghy towing.....	261
Emergency towing	599
Trailer towing.....	260
TRAC.....	231
Traction control.....	231
Transmission	
If the shift lever cannot be	
shifted from "P"	630
"S" mode	176
Transmission	175
Trip meter	185
Trunk	
Closer.....	67
Opener.....	67
Trunk light	
Wattage.....	657
Turn signal lights	
Replacing light bulbs.....	584
Switch	179
Wattage.....	657

V Vanity lights	
Vanity lights.....	458
Wattage	657
Vanity mirrors.....	458
Variable gear ratio steering.....	231
VDIM.....	231
Vehicle dynamics integrated	
management	231
Vehicle identification number.....	647
Vehicle stability control	231
VGRS.....	231
VSC	231

W Warning buzzers	
Open door	610
Seat belt reminder	610
Warning lights	
Anti-lock brake system	609
Brake assist system	609
Brake system.....	608, 609
Charging system.....	608
Electric power steering.....	609
High coolant temperature.....	610
Low fuel level.....	610
Low tire pressure	610
Malfunction indicator lamp	609
Master warning light.....	610
Open door	610
Pre-collision system.....	609
Pretensioners	609
Seat belt reminder light	610
SRS airbags.....	609
Tire pressure.....	610
Warning messages.....	617

Washer	
Checking.....	537
Preparing and checking before winter.....	256
Switch.....	199
Washing and waxing.....	508
Weight	
Cargo capacity.....	251
Load limits.....	254
Weight.....	646
Wheels.....	554
Window glasses.....	106
Window lock switch.....	106
Windows	
Power windows.....	106
Rear window defogger.....	298
Washer.....	199
Windshield wiper de-icer.....	299
Windshield wipers.....	199
Wireless remote control key	
Replacing the battery.....	559
WMA disc.....	316, 372

What to do if...

What to do if...



A tire punctures.

P. 620 If you have a flat tire



The hybrid system does not start.

P. 628 If the hybrid system will not start

P. 117 Immobilizer system

P. 637 If the 12-volt battery is discharged



The shift lever cannot be moved out.

P. 630 If the shift lever cannot be shifted from "P"



The high coolant temperature warning light comes on.

P. 640 If your vehicle overheats



Steam can be seen coming from under the hood.



The key is lost.

P. 633 If you lose your keys



The 12-volt battery runs out.

P. 637 If the 12-volt battery is discharged



The doors cannot be locked.

P. 62 Doors



The horn begins to sound.

P. 119 Alarm



The vehicle is stuck in mud or sand.

P. 644 If the vehicle becomes stuck

 A warning light or indicator light comes on.

P. 608 If a warning light turns on or a warning buzzer sounds...



Warning lights

 Brake system warning light (red indicator)

or

 P. 608

 Malfunction indicator lamp

or

 P. 609

 "ABS" warning light

or

 P. 609

 Driver's seat belt reminder light P. 610

 Front passenger's seat belt reminder light P. 610

 Brake system warning light (yellow indicator) P. 609

 High coolant temperature warning light P. 610

 Low fuel level warning light P. 610

 Master warning light with warning message P. 610

 SRS warning light P. 609

 Electric power steering warning light P. 609


 Open door warning light P. 610

 Pre-collision system warning light P. 609

 Charging system warning light P. 608

 Tire pressure warning light P. 610

GAS STATION INFORMATION

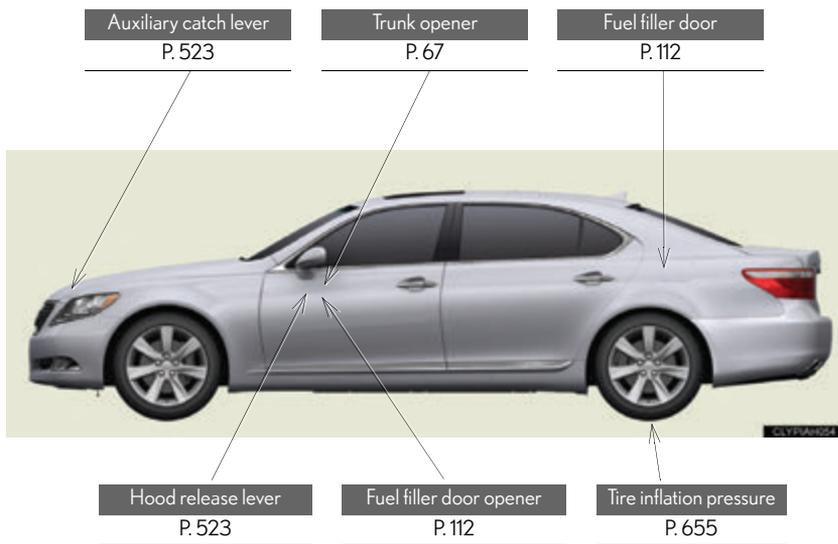

Fuel tank capacity	22.1 gal. (84L, 18.4 Imp. gal.)	
Fuel type	Premium unleaded gasoline only	P. 114, 648
Cold tire inflation pressure		P. 655
Engine oil capacity (Drain and refill)	With filter Without filter	qt. (L, Imp. qt.) 9.5 (9.0, 7.9) 8.9 (8.4, 7.4)
Engine oil type	Toyota Genuine Motor Oil or equivalent Oil grade: ILSAC multigrade engine oil Recommended oil viscosity: SAE-5W-20 or SAE-0W-20	P. 650



Owner's Manual:

Publication No. OM50B43U

Part No. 01999-50B43

Printed in Japan 01-0906-00 

LS 600h L (北米U)